Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 1/130 3.0.0, Chapter 3.5 "Management of

Radio Communication"

Created: 10.04.2013

#### SCADE Formal Model Documentation

# openETCS / UNISIG Subset-026-3

# 3.5 Management of Radio Communication (MoRC)

#### Summary:

3.5 Management of Radio Communication (MoRC)

This document describes the formal SCADE model implementation of the behaviour of the ETCS OBU user application interacting with Euroradio protocols.

Company: Siemens AG Authors: Uwe Steinke

Reference: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of Radio

Communication"

Index: Version No 00.01.00

Date: 2013-02-12

Distribution List: https://github.com/openETCS/model-evaluation

Issue Nr.: Version No 00.01.00

Page: 2/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# **Table Of Contents**

1.	Gene	eral Project Description	5
2.	Softv	ware Architecture	6
2.1.	Pr	oject Architecture	6
2.2.	Ca	all Graph	6
3.	MoR	C Project	8
3.1.	Ro	oot Elements	8
3.1.	. 1 .	<i>Types</i>	8
3.1.	.2.	Constants	17
3.1.	.3.	countDownTimer Operator	20
	1.3.1.	Comments and Information	20
	1.3.2.	Interface	
	1.3.3. 1.3.4.	Locals Operator Hierarchy	
	1.3.5.	Graphical and Textual Diagrams	
3.1.	1	establish_a_CommunicationSession Operator	25
	. , . 1 . 4 . 1 .	Comments and Information	25
3.1	1.4.2.	Interface	26
	1.4.3.	Locals	
	1.4.4.	Operator Hierarchy	
	1.4.5.	Graphical and Textual Diagrams	
3.1.		evaluateOrderToContactAnRBD Operator	41
	1.5.1. 1.5.2.	Comments and Information	
	1.5.2. 1.5.3.	Operator Hierarchy	
	1.5.4.	Graphical and Textual Diagrams	
3.1.	6	Initiate_a_Session Operator	44
	1.6.1.	Comments and Information	
3.1	1.6.2.	Interface	
	1.6.3.	Locals	
	1.6.4. 1.6.5.	Operator HierarchyGraphical and Textual Diagrams	
٥.	1.0.5.	Graphical and Textual Diagrams	40
3.1.		initiateTerminatingASession Operator	
	1.7.1. 1.7.2.	Comments and Information	
	1.7.2. 1.7.3.	Locals	
	1.7.4.	Operator Hierarchy	
3.1	1.7.5.	Graphical and Textual Diagrams	
3.1.	.8.	isOrderToEstablishConnection Operator	55
	1.8.1.	Comments and Information	
	1.8.2.	Interface	
	1.8.3.	Operator Hierarchy	
	1.8.4.	Graphical and Textual Diagrams	
3.1.	. 9.	maintaining_a_CommunicationSession Operator	56

Issue Nr.: Version No 00.01.00 Page: 3/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

3.1.9.1. 3.1.9.2.	Comments and Information	57
3.1.9.3.	Locals	
3.1.9.4. 3.1.9.5.	Operator Hierarchy Graphical and Textual Diagrams	58 50
3.1.10.	managementOfRadioCommunication Operator	63
3.1.10.1.	Comments and Information	
3.1.10.2. 3.1.10.3.	Locals	
3.1.10.4.	Operator Hierarchy	
3.1.10.5.	Graphical and Textual Diagrams	70
3.1.11.	MoRC_withSimplified_IF Operator	79
3.1.11.1.	Comments and Information	
3.1.11.2.	Interface	
3.1.11.3.	Locals	
3.1.11.4. 3.1.11.5.	Operator HierarchyGraphical and Textual Diagrams	
	,	
3.1.12.	radioNetworkMobile Operator	89
3.1.12.1. 3.1.12.2.	Comments and Information	
3.1.12.3.	Locals	
3.1.12.4.	Operator Hierarchy	91
3.1.12.5.	Graphical and Textual Diagrams	93
3.1.13.	RBCTransition_forSafeRadioConnectionIndication Operator	101
3.1.13.1.	Comments and Information	101
3.1.13.2.	Interface	
3.1.13.3. 3.1.13.4.	Operator HierarchyGraphical and Textual Diagrams	
3.1.14.	registeringToTheRadioNetwork Operator	
3.1.14.1. 3.1.14.2.	Comments and Information	
3.1.14.3.	Locals	
3.1.14.4.	Operator Hierarchy	
3.1.14.5.	Graphical and Textual Diagrams	108
3.1.15.	safeRadioConnectionIndication Operator	110
3.1.15.1.	Comments and Information	110
3.1.15.2.	Interface	
3.1.15.3. 3.1.15.4.	Locals Operator Hierarchy	
3.1.15.5.	Graphical and Textual Diagrams	
3.1.16.	terminate And Establish Session Operator	117
3.1.10. 3.1.16.1.	terminateAndEstablishSession Operator  Comments and Information	/ / / 117
3.1.16.2.	Interface	
3.1.16.3.	Locals	
3.1.16.4.	Operator Hierarchy	
3.1.16.5.	Graphical and Textual Diagrams	
3.1.17.	terminating_a_CommunicationSession Operator	
3.1.17.1.	Comments and Information	
3.1.17.2. 3.1.17.3.	Interface	
3.1.17.4.	Operator Hierarchy	
3.1.17.5.	Graphical and Textual Diagrams	
3.1.18.	waitAndRepeatTimer Operator	127
3.1.18.1.	Comments and Information	127
3.1.18.2.	Interface	127

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 4/130 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

3.1.18.3.Operator Hierarchy1283.1.18.4.Graphical and Textual Diagrams129

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 5/130

3.0.0, Chapter 3.5 "Management of Radio Communication"

Created: 10.04.2013

#### General Project Description 1.

This SCADE model implements the behaviour of the ETCS OBU user application interacting with Euroradio protocols.

The top level of this model is represented by the node "managementOfRadioCommunication".

A simplified interface intended to be used in conjunction with the SYS/ML model and RT-Tester residing at

https://github.com/openETCS/model-evaluation/tree/master/model/EA-SysML/ to achieve automatic test case generation is provided by the node "MoRC\_withSimplified\_IF".

#### D3.5 Management of Radio Communication

- Name: MoRC.etp

- Description: SUBSET-026-3, ISSUE: 3.3.0, 3.5 Management of Radio Communication)

- Copyright Siemens AG, 2013

- Licensed under the EUPL V.1.1 (

http://joinup.ec.europa.eu/software/page/eupl/licence-eupl)

- Gist URL: ---- Cryptography: No

- Author(s): Uwe Steinke

The use of this software is limited to non-vital applications.

It has not been developed for vital operation purposes and must not be used for applications which may cause harm to people, physical accidents or financial loss.

THEREFORE, NO LIABILITY WILL BE GIVEN FOR SUCH AND ANY OHER KIND OF USF.

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 6/130

3.0.0, Chapter 3.5 "Management of Radio Communication"

Created: 10.04.2013

#### 2. Software Architecture

# 2.1. Project Architecture

This section displays the package hierarchy of projects.

Project MoRC

# 2.2. Call Graph

This Call Graph displays the dependency tree of model operators.

```
1. MoRC_withSimplified_IF
```

- 1.1. managementOfRadioCommunication (dMainSheet)
  - 1.1.1. digital::FallingEdge (diagram\_safeRadioConnectionIndication)
  - 1.1.2. digital::FallingEdge (diagram\_TerminationInitiation)
  - 1.1.3. digital::RisingEdge (diagram\_Establishing\_1

(CommunicationSession\_SM: Establishing))

1.1.4. digital::RisingEdge (diagram\_safeRadioConnectionIndication)

[2]

- 1.1.5. establish\_a\_CommunicationSession (diagram\_Establishing\_1 (CommunicationSession\_SM: Establishing))
  - 1.1.6. evaluateOrderToContactAnRBD (diagram\_Establishing\_1

(CommunicationSession\_SM: Establishing))

1.1.7. evaluateOrderToContactAnRBD (diagram\_NoSession\_1

(CommunicationSession\_SM: NoSession))

1.1.7.1. digital::FallingEdge

(diagram\_evaluateOrderToContactAnRBD\_1)

1.1.7.2. linear::MemoryBasic

(diagram\_evaluateOrderToContactAnRBD\_1)

1.1.8. Initiate\_a\_Session (diagram\_NoSession\_1

(CommunicationSession\_SM: NoSession))

- 1.1.9. initiateTerminatingASession (diagram\_TerminationInitiation)
  - 1.1.9.1. waitAndRepeatTimer

(diagram\_WaitForOrderToTerminateTheSession\_1

(TrainExitedFromRBCArea\_SM: WaitForOrderToTerminateTheSession))

1.1.9.1.1. countDownTimer

(diagram\_waitAndRepeatTimer\_1)

1.1.9.1.1.1 linear::MemoryBasic (diagram\_Counting\_1

(TimerStatus\_SM: Counting))

1.1.10. isOrderToEstablishConnection (diagram\_NoSession\_1

(CommunicationSession\_SM: NoSession)) [3]

1.1.11. maintaining\_a\_CommunicationSession (diagram\_Maintaining\_1 (CommunicationSession\_SM: Maintaining))

1.1.11.1. countDownTimer

(diagram\_CommunicationSessionEstablished\_1

(Maintaining\_SM: CommunicationSessionEstablished))

1.1.11.1.1 linear::MemoryBasic (diagram\_Counting\_1

(TimerStatus\_SM: Counting))

1.1.12. registeringToTheRadioNetwork (diagram\_NetworkRegistration)

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 7/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

1.1.12.1. digital::FlipFlopReset

(diagram\_registeringToTheRadioNetwork\_2)

1.1.12.2. digital::RisingEdge

(diagram\_registeringToTheRadioNetwork\_1) [3]

1.1.12.3. digital::RisingEdge

(diagram\_registeringToTheRadioNetwork\_2)

1.1.12.4. linear::MemoryBasic

(diagram\_registeringToTheRadioNetwork\_1)

1.1.12.5. radioNetworkMobile

(diagram\_registeringToTheRadioNetwork\_2)

1.1.12.5.1. linear::MemoryBasic

(diagram\_radioNetworkMobile\_1)

1.1.12.5.2. linear::MemoryBasic

(diagram\_radioNetworkMobile\_2) [2]

1.1.13. safeRadioConnectionIndication

(diagram\_safeRadioConnectionIndication)

1.1.13.1. countDownTimer

(diagram\_safeRadioConnectionIndication\_3)

1.1.13.1.1. linear::MemoryBasic (diagram\_Counting\_1

(TimerStatus\_SM:Counting))

1.1.14. terminateAndEstablishSession (diagram\_TerminationInitiation)

1.1.14.1. linear::MemoryBasic

(diagram\_terminateAndEstablishSession\_1)

1.1.15. terminating\_a\_CommunicationSession

(diagram\_Terminating\_1 (CommunicationSession\_SM:Terminating))

1.1.15.1. waitAndRepeatTimer

(diagram\_WaitForAcknowledgementMessage\_1

(TerminateTheCommunicationSession\_SM: WaitForAcknowledgementMessage))

1.1.15.1.1. countDownTimer

(diagram\_waitAndRepeatTimer\_1)

1.1.15.1.1.1. linear::MemoryBasic

(diagram\_Counting\_1 (TimerStatus\_SM: Counting))

2. RBCTransition\_forSafeRadioConnectionIndication

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 8/130 3.0.0, Chapter 3.5 "Management of

Radio Communication"

Created: 10.04.2013

#### 3. MoRC Project

# 3.1. Root Elements

#### Types 3.1.1.

Table 1: Public Types of MoRC

Name	Definition	Comments and Information
D_RBCTR_Type	int	Comments: Distance to RBC transition. In 10 cm, 1m or 10 m, depends on Q_SCALE.
m154_NoCompatibleVe rsionSupported_Type	{valid : bool, NID_MESSAGE : NID_MESSAGE_Type, T_TRAIN : T_TRAIN_Type, NID_ENGINE : NID_ENGINE_Type}	NID_MESSAGE Comments: Must be cNID_MESSAGE_NoCompatibleV ersionSupported == 154. T_TRAIN Comments: Time in 10 ms NID_ENGINE Comments: Onboard ETCS identity
m155_initiationOfACo mmunicationSession_T ype	{valid : bool, NID_MESSAGE : NID_MESSAGE_Type, T_TRAIN : T_TRAIN_Type, NID_ENGINE : NID_ENGINE_Type}	NID_MESSAGE Comments: Must be cNID_MESSAGE_initiationOfACo mmunicationSession == 155. T_TRAIN Comments: Time in 10 ms NID_ENGINE Comments: Onboard ETCS identity
m156_terminationOfAC ommunicationSession_ Type	{valid : bool, NID_MESSAGE : NID_MESSAGE_Type, T_TRAIN : T_TRAIN_Type, NID_ENGINE : NID_ENGINE_Type}	NID_MESSAGE Comments: Must be cNID_MESSAGE_terminationOfA CommunicationSession == 156. T_TRAIN Comments: Time in 10 ms NID_ENGINE Comments: Onboard ETCS identity
m159_SessionEstablish ed_Type	{valid : bool, NID_MESSAGE : NID_MESSAGE_Type, T_TRAIN : T_TRAIN_Type, NID_ENGINE : NID_ENGINE_Type, NID_RADIO : NID_RADIO_Type}	NID_MESSAGE Comments: Must be cNID_MESSAGE_SessionEstablis hed == 159. T_TRAIN Comments: Time in 10 ms NID_ENGINE Comments: Onboard ETCS identity NID_RADIO Comments: Extracted and abstracted from Packet 3: Onboard telephone numbers

3.0.0, Chapter 3.5 "Management of

Name	Definition	Comments and Information
m24_generalMessage_ Type	{valid : bool, NID_MESSAGE : NID_MESSAGE_Type, T_TRAIN : T_TRAIN_Type, M_ACK : M_ACK_Type, NID_LRBG : NID_LRBG_Type}	NID_MESSAGE Comments: Must be cNID_MESSAGE_GeneralMessage == 24. T_TRAIN Comments: Time in 10 ms M_ACK Comments: Indicates whether the telegram must be acknowledged or not NID_LRBG Comments: Identity of last relevant balise group
m32_RBC_RIU_system Version_Type	{valid : bool, NID_MESSAGE : NID_MESSAGE_Type, T_TRAIN : T_TRAIN_Type, M_ACK : M_ACK_Type, NID_LRBG : NID_LRBG_Type, M_VERSION : M_VERSION_Type}	NID_MESSAGE Comments: Must be cNID_MESSAGE_RBC_RIU_Syste mVersion == 32. T_TRAIN Comments: Time in 10 ms M_ACK Comments: Indicates whether the telegram must be acknowledged or not NID_LRBG Comments: Identity of last relevant balise group M_VERSION Comments: Version of ETCS system
m38_initiationOfACom municationSession_Typ e	{valid : bool, NID_MESSAGE : NID_MESSAGE_Type, T_TRAIN : T_TRAIN_Type, M_ACK : M_ACK_Type, NID_LRBG : NID_LRBG_Type}	NID_MESSAGE Comments: Must be cNID_MESSAGE_InitiationOfACo mmunicationSession_Track == 38. T_TRAIN Comments: Time in 10 ms: always set to unknown M_ACK Comments: Indicates whether the telegram must be acknowledged or not NID_LRBG Comments: Identity of last relevant balise group: always set to unknown
m39_acknowledgemen tOfTerminationOfACom municationSession_Typ e	{valid : bool, NID_MESSAGE : NID_MESSAGE_Type, T_TRAIN : T_TRAIN_Type, M_ACK : M_ACK_Type, NID_LRBG : NID_LRBG_Type}	NID_MESSAGE Comments: Must be cNID_MESSAGE_AckOfTerminati onOfACommunicationSession == 39. T_TRAIN Comments: Time in 10 ms: always set to unknown M_ACK Comments: Indicates whether the telegram must be acknowledged or not: always set to 0 == not NID_LRBG Comments: Identity of last relevant balise group: always set to unknown

3.0.0, Chapter 3.5 "Management of

Name	Definition	Comments and Information
M_ACK_Type	enum {M_ACK_NoAckRequired, M_ACK_AckRequired}	Comments: Qualifier for acknowledgement request. Indicates whether the telegram must be acknowledged or not
M_LEVEL_Type	enum {ETCS_Level_0, ETCS_Level_NTC, ETCS_Level_1, ETCS_Level_2, ETCS_Level_3}	Comments: The ETCS Level of Operation: M_LEVEL: 7.5.1.65 ETCS_Level_0 Comments: Level 0 ETCS_Level_NTC Comments: Level NTC specified by NID_NTC ETCS_Level_1 Comments: Level 1 ETCS_Level_2 Comments: Level 2 ETCS_Level_3 Comments: Level 3

3.0.0, Chapter 3.5 "Management of Radio Communication"

Name	Definition	Comments and Information
M_MODE_Type	enum {ETCS_Mode_FullSupervision, ETCS_Mode_OnSight, ETCS_Mode_StaffResponsible, ETCS_Mode_Shunting, ETCS_Mode_Unfitted, ETCS_Mode_Sleeping, ETCS_Mode_StandBy, ETCS_Mode_Trip, ETCS_Mode_PostTrip, ETCS_Mode_SystemFailure, ETCS_Mode_Isolation, ETCS_Mode_Isolation, ETCS_Mode_LimitedSupervision, ETCS_Mode_NationalSystem, ETCS_Mode_Reversing, ETCS_Mode_PassiveShunting, ETCS_Mode_EndOfMission}	Comments: ETCS Mode: M_MODE: 7.5.1.72 ETCS_Mode_FullSupervision Comments: 0 ETCS_Mode_OnSight Comments: 1 ETCS_Mode_StaffResponsible Comments: 2 ETCS_Mode_Shunting Comments: 3 ETCS_Mode_Unfitted Comments: 4 ETCS_Mode_Sleeping Comments: 5 ETCS_Mode_StandBy Comments: 6 ETCS_Mode_Trip Comments: 7 ETCS_Mode_PostTrip Comments: 8 ETCS_Mode_SystemFailure Comments: 9 ETCS_Mode_I solation Comments: 10 ETCS_Mode_I solation Comments: 11 ETCS_Mode_LimitedSupervisi on Comments: 12 ETCS_Mode_NationalSystem Comments: 13 ETCS_Mode_Reversing Comments: 13 ETCS_Mode_Reversing Comments: 14 ETCS_Mode_Reversing Comments: 15 ETCS_Mode_PassiveShunting Comments: 15 ETCS_Mode_EndOfMission Comments: 3.5.3.4 c)

3.0.0, Chapter 3.5 "Management of

Name	Definition	Comments and Information
M_VERSION_Type	{firstNumber : int, secondNumber : int}	Comments: Version of ETCS system firstNumber Comments: The first number distinguishes not compatible versions. (The three MSB's) secondNumber Comments: The second number indicates compatibility within a version X. (The four LSB's)
mobileHWAction_Type	enum {mhwa_nop, mhwa_register, mhwa_connect, mhwa_disconnect, mhwa_unregister}	Comments: 3.5.6, 3.5.6.3.2, 3.5.6.5, 3.5.6.5:Commands to the mobile hardware Traceability: 3.5.6.5 3.5.6.3.2 mhwa_nop Comments: noAction
mobileHWCmd_Type	{valid : bool, action : mobileHWAction_Type, radioNetworkID : radioNetworkID_Type}	Comments: 3.5.6, 3.5.6.3.2, 3.5.6.5, 3.5.6.5:Commands to the mobile hardware Traceability: 3.5.6.3 3.5.6.3.2 3.5.6.5
mobileHWConnectionSt atus_Type	enum {mhwc_notRegistered, mhwc_registered, mhwc_connectionSetupInProgress, mhwc_connected}	Comments: 3.5.6.5 Traceability: 3.5.6.5
mobileHWStatus_Type	{valid : bool, connectionStatus : mobileHWConnectionStatus_Type, settingUpConnectionHasFailed : bool}	Comments: 3.5.6.5 Traceability: 3.5.6.5
mobileSWAction_Type	enum {mswa_nop, mswa_register, mswa_connect, mswa_establishRadioConnection, mswa_terminateRadioConnection, mswa_disconnect, mswa_unregister}	
mobileSWCmd_Type	{valid : bool, action : mobileSWAction_Type, radioNetworkID : radioNetworkID_Type}	
mobileSWConnectionSt atus_Type	enum {mswc_unregistered, mswc_registering, mswc_registered, mswc_connecting, mswc_connected, mswc_establishingSession, mswc_sessionEstablished}	
mobileSWStatus_Type	{valid : bool, mobileHW_available : bool, connectionStatus : mobileSWConnectionStatus_Type, registeredRadioNetworkID : radioNetworkID_Type, settingUpConnectionHasFailed : bool}	

3.0.0, Chapter 3.5 "Management of

Name	Definition	Comments and Information
morc_RBC_action_Typ e	enum {morc_rbca_noAction, morc_rbca_establishSession, morc_rbca_terminateSesssion}	Comments: 3.5.3.5 a) Traceability: 3.5.3.5
NID_C_Type	int	Comments: Identity number of the country or region: 7.5.1.86: 01023
NID_ENGINE_Type	int	Comments: Onboard ETCS identity. The ETCS identity number is uniquely defined for ERTMS/ETCS purposes.
NID_LRBG_Type	int	Comments: Identity of last relevant balise group. Country/region identity (NID_C) + balise identity number of last relevant balise group (NID_BG).
NID_MESSAGE_Type	int	Comments: Message identifier. Regards defined values of NID_MESSAGE, refer to chapters 8.5.2 and 8.5.3
NID_PACKET_Type	int	Comments: Packet identifier: 7.5.1.93: 0255
NID_RADIO_Type	int	Comments: Radio subscriber number: 7.5.1.95: FFFF FFFF FFFF = Use the short number stored onboard
NID_RBC_Type	int	Comments: RBC ETCS identity number: 7.5.1.96: 016 382; 16 383 = Contact the last known RBC
onBoardOrder_Type	enum {obo_noOrder, obo_initiateCommunication, obo_terminateCommunication}	Comments: orders from OBU to MoRC
orderToContactAnAcce ptingRBC_Type	{valid : bool, rbc_id : rbc_id_Type, telephoneNoOfTheRBC : rbc_phoneNo_Type, appliesAlsoToSleepingUnits : bool}	Comments: 3.5.3.5.3 Traceability: 3.5.3.5.3
orderToContactAnRBC_ Type	{valid : bool, rbc_id : rbc_id_Type, telephoneNoOfTheRBC : rbc_phoneNo_Type, actionToBePerformed : morc_RBC_action_Type, appliesAlsoToSleepingUnits : bool}	Comments: 3.5.3.5 Traceability: 3.5.3.5
orderToContactARadioI nfillUnit_Type	{valid : bool, radioInFillUnit_id : rbc_id_Type, telephoneNoOfTheRadioInfillUnit : rbc_phoneNo_Type, actionToBePerformed : morc_RBC_action_Type}	Comments: 3.5.3.6 Traceability: 3.5.3.6

3.0.0, Chapter 3.5 "Management of Radio Communication"

Name	Definition	Comments and Information
p131_RBC_TransitionOrderType	{valid: bool, NID_PACKET: NID_PACKET_Type, Q_DIR: Q_DIR_Type, L_PACKET: int, D_RBCTR: D_RBCTR_Type, NID_C: NID_C_Type, NID_RBC: NID_RBC_Type, NID_RADIO: NID_RADIO_Type, Q_SLEEPSESSION: Q_SLEEPSESSION_Type}	Comments: Packet Number 131: RBC transition order NI D_PACKET Comments: Must be = cNID_PACKET_131 L_PACKET Comments: L_PACKET indicates the length of the packet in bits, including all bits of the packet header: 7.5.1.49 D_RBCTR Comments: Distance to RBC transition NI D_C Comments: Accepting RBC identity. Identity number of the country or region: 7.5.1.86: 01023. Not relevant, if NID_RBC == Contact last known RBC NI D_RBC Comments: Accepting RBC identity. RBC ETCS identity number: 7.5.1.96: 016 382; 16 383 = Contact the last known RBC NI D_RADI O Comments: Accepting RBC radio subscriber number: 7.5.1.95: FFFF FFFF FFFF = Use the short number stored onboard Q_SLEEPSESSI ON Comments: Session management for sleeping equipment

Ref. Nr.: UNISIG Subset-026-3 Page: 15/130 Issue Nr.: Version No 00.01.00 3.0.0, Chapter 3.5 "Management of

Radio Communication"

Created: 10.04.2013

Name	Definition	Comments and Information
p42_SessionManageme nt_Type	{valid : bool, NID_PACKET : NID_PACKET_Type, Q_DIR : Q_DIR_Type, L_PACKET : int, Q_RBC : Q_RBC_Type, NID_C : NID_C_Type, NID_RBC : NID_RBC_Type, NID_RADIO : NID_RADIO_Type, Q_SLEEPSESSION : Q_SLEEPSESSION_Type}	Comments: Packet 42: Session Management: 7.4.2.10 NI D_PACKET Comments: Must be = cNID_PACKET_42 L_PACKET Comments: L_PACKET indicates the length of the packet in bits, including all bits of the packet header: 7.5.1.49 Q_RBC Comments: Terminate or establish communication session NI D_C Comments: Identity number of the country or region: 7.5.1.86: 01023. Not relevant, if NID_RBC == Contact last known RBC NI D_RBC Comments: RBC ETCS identity number: 7.5.1.96: 016 382; 16 383 = Contact the last known RBC NI D_RADI O Comments: Radio subscriber number: 7.5.1.95: FFFF FFFF FFFF = Use the short number stored onboard Q_SLEEPSESSI ON Comments: Session management for sleeping equipment
Q_DIR_Type	enum {q_dir_reverse, q_dir_nominal, q_dir_bothDirections, q_dir_spare}	Comments: Validity direction of transmitted data: 7.5.1.103
Q_RBC_Type	enum {q_rbc_terminateCommunicationSessi on, q_rbc_establishCommunicationSessio n}	Comments: Qualifier for communication session order: 7.5.1.127
Q_SLEEPSESSION_Typ e	enum {q_sleepsession_ignoreSessionEstabli shmentOrder, q_sleepsession_executeSessionEstabli shmentOrder}	Comments: 7.5.1.131: Qualifier for a Sleeping onboard equipment to execute or not the "session establishment" order
radioHoleStatus_Type	enum {rhs_none, rhs_end, rhs_begin, rhs_inside}	Comments: Designates, if the EVC is inside a radio hole
radioNetworkID_Type	int	Comments: 3.5.6.2 Traceability: 3.5.6.2
RadioNetworkMobileH WStatusType	{valid : bool, connectionStatus : mobileHWConnectionStatus_Type}	Comments: 3.5.6
rbc_id_Type	int	Comments: 3.5.3.16
rbc_phoneNo_Type	int	Comments: 3.5.3.16

Ref. Nr.: UNISIG Subset-026-3 Page: 16/130 Issue Nr.: Version No 00.01.00

3.0.0, Chapter 3.5 "Management of Radio Communication"

Created: 10.04.2013

Name	Definition	Comments and Information
rbc_TransitionOrder_T ype	{valid : bool, orderToContactAnAcceptingRBC : orderToContactAnAcceptingRBC_Type }	Traceability: 3.5.3.5.3 orderToContactAnAcceptingR BC Comments: 3.5.3.5.3
safeRadioConnectionSt atus_Type	enum {srcs_NoConnection, srcs_ConnectionLost_SetupFailed, srcs_ConnectionUp}	Comments: 3.5.7.1 Traceability: 3.5.7.1
safeRadioConnectionSt atusValid_Type	{valid : bool, status : safeRadioConnectionStatus_Type}	
sessionStatus_Type	enum {morc_st_inactive, morc_st_establishing, morc_st_maintaining, morc_st_terminating}	Comments: Designates the MoRC session status
T_TRAIN_Type	int	Comments: Time, according to trainborne clock, at which message is sent, in 10 ms
time_Type	int	Comments: time in ms
track_2_train_Type	{m24_generalMessage: m24_generalMessage_Type, m32_RBC_RIU_systemVersion: m32_RBC_RIU_systemVersion_Type, m38_initiationOfACommunicationSess ion: m38_initiationOfACommunicationSess ion_Type, m39_acknowledgementOfTermination OfACommunicationSession: m39_acknowledgementOfTermination OfACommunicationSession Type, p131_RBC_TransitionOrder: p131_RBC_TransitionOrderType, p42_sessionManagement_Type}	m24_generalMessage Comments: The RBC orders the EVC to establish or terminate a communication session with packet 42 p131_RBC_TransitionOrder Comments: The RBC orders a transition to another RBC p42_sessionManagement Comments: Packet to give the identy and phone no of the RBC with wich a session shall be established/terminated
train_2_track_Type	{m155_initiationOfACommunicationS ession: m155_initiationOfACommunicationSes sion_Type, m156_terminationOfACommunication Session: m156_terminationOfACommunication Session_Type, m159_SessionEstablished: m159_SessionEstablished_Type, m154_NoCompatibleVersionSupporte d: m154_NoCompatibleVersionSupporte d_Type}	m155_initiationOfACommunic ationSession Comments: The EVC initiates a communication m156_terminationOfACommunicationSession Comments: The EVC terminates a communication m159_SessionEstablished Comments: The EVC acknowledges the establishment m154_NoCompatibleVersionS upported Comments: The EVC acknowledges the establishment with an error
validRadioNetworkID_T ype	{valid : bool, radioNetworkID : radioNetworkID_Type}	Comments: 3.5.6.2 Traceability: 3.5.6.2

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

### 3.1.2. Constants

Table 2: Public Constants of MoRC

Name	Туре	Value	Comments and Information
cConnectionStatusTime rInterval	time_Type	15000	Comments: Estimated Value
cEstablishOrderFromTr ackside	orderToContactAnR BC_Type	{valid : true, rbc_id : 0, telephoneNoOfTheR BC : 0, actionToBePerforme d : morc_rbca_establis hSession, appliesAlsoToSleepi ngUnits : false}	
cEstablishSafeRadioCo nnectionCmd	mobileSWCmd_Typ e	<pre>{valid : true, action : mswa_establishRadi oConnection, radioNetworkID : 0}</pre>	
cInvalidmobileHWCmd	mobileHWCmd_Typ e	{valid : false, action : mhwa_nop, radioNetworkID : 0}	
cInvalidMobileHWStatu s	mobileHWStatus_Ty pe	{valid : false, connectionStatus : mhwc_notRegistere d, settingUpConnectio nHasFailed : false}	
cInvalidMobileSWCmd	mobileSWCmd_Typ	{valid : false, action : mswa_nop, radioNetworkID : 0}	
cInvalidMobileSWStatu s	mobileSWStatus_Ty pe	{valid : false, mobileHW_available : false, connectionStatus : mswc_unregistered, registeredRadioNet workID : 0, settingUpConnectio nHasFailed : false}	
cInvalidOrderToContac tAnRBC	orderToContactAnR BC_Type	{valid : false, rbc_id : 0, telephoneNoOfTheR BC : 0, actionToBePerforme d : morc_rbca_noActio n, appliesAlsoToSleepi ngUnits : false}	
cInvalidRadioNetworkI D	validRadioNetworkI D_Type	{valid : false, radioNetworkID : 0}	

3.0.0, Chapter 3.5 "Management of Radio Communication"

Nome	T. vo c	Value	Comments and
Name	Туре	Value	Information
cInvalidRadioNetworkI D_value	radioNetworkID_Ty pe	-1	
cMaxNoOfConnectionR etries	int	3	Comments: 3.5.3.7 a) Traceability: 3.5.3.7
cMobileHWStatus_Con nected	mobileHWStatus_Ty pe	{valid : true, connectionStatus : mhwc_connected, settingUpConnectio nHasFailed : false}	
cMobileHWStatus_Disc onnected	mobileHWStatus_Ty pe	{valid : true, connectionStatus : mhwc_notRegistere d, settingUpConnectio nHasFailed : false}	
cMobileSWStatus_noH W	mobileSWStatus_Ty pe	{valid: true, mobileHW_available : false, connectionStatus: mswc_unregistered, registeredRadioNet workID: cInvalidRadioNetwo rkID_value, settingUpConnectio nHasFailed: false}	
cMobileSWStatus_unre gistered	mobileSWStatus_Ty pe	{valid : true, mobileHW_available : true, connectionStatus : mswc_unregistered, registeredRadioNet workID : 0, settingUpConnectio nHasFailed : false}	
cNID_LRBG_Unknown	NID_LRBG_Type	16777215	Comments: Unknown identity of last relevant balise group
cNID_MESSAGE_AckOf TerminationOfACommu nicationSession	NID_MESSAGE_Typ e	39	Comments: TERM_ACK
cNID_MESSAGE_Gener alMessage	NID_MESSAGE_Typ e	24	Comments: TERM_SESSION_TRACK
cNID_MESSAGE_Gener alMessage_init	NID_MESSAGE_Typ e	25	Comments: INIT_SESSION_ORDER
cNID_MESSAGE_Initiat ionOfACommunicationS ession	NID_MESSAGE_Typ e	155	Comments: INIT_SESSION
cNID_MESSAGE_Initiat ionOfACommunicationS ession_track	NID_MESSAGE_Typ	38	Comments: INIT_SESSION_TRACK
cNID_MESSAGE_NoCo mpatibleVersionSuppor ted	NID_MESSAGE_Typ e	154	Comments: SYS_NO_COMP

3.0.0, Chapter 3.5 "Management of

Name	Туре	Value	Comments and Information	
cNID_MESSAGE_noMes sage	NID_MESSAGE_Typ e	255	Comments: NO_MESSAGE	
cNID_MESSAGE_RBC_ RIU_SystemVersion	NID_MESSAGE_Typ e	32	Comments: SYS_VERSION	
cNID_MESSAGE_Sessi onEstablished	NID_MESSAGE_Typ e	159	Comments: SESSION_ESTABLISHED	
cNID_MESSAGE_termi nationOfACommunicati onSession	NID_MESSAGE_Typ e	156	Comments: TERM_SESSION	
cNID_PACKET_131	int	131	Comments: Packet Number 131: RBC transition order	
cNID_PACKET_42	int	42	Comments: Session Management: 7.5.1.93	
cNID_RADIO_useTheS hortNumberStoredOnb oard	NID_RADIO_Type	4294967295	Comments: 7.5.1.95 NID_RADIO: 0xFFFF FFFF	
cNID_RBC_ContactLast KnownRBC	NID_RBC_Type	16383	Comments: 7.5.1.96	
cPositionReoport_MaxN oOfRepetitions	int	5	Comments: 3.5.5.1e) Traceability: 3.5.5.1	
cPositionReportRepetiti onInterval	time_Type	10000	Comments: 3.5.5.1e) Traceability: 3.5.5.1	
cRadioConnectionReest ablishingTimeout	time_Type	0	Comments: 3.5.4.1, 3.5.4.2.1 Traceability: 3.5.4.1 3.5.4.2 3.5.4.2.1	
cRBC_id_contactLastKn ownRBC	rbc_id_Type	-1	Comments: 3.5.3.13: Order to contact the last known RBC 3.5.3.16, Option 1: Contact the last known RBC Traceability: 3.5.3.13	
cRBC_phoneNo_UseOn boardStoredShortNo	rbc_phoneNo_Type	-1	Comments: 3.5.3.16, Option 2: Use on-board stored short number	
cSampleRadioNetworkI D	validRadioNetworkI D_Type	{valid: true, radioNetworkID: 12345}	Comments: Example value for a valid radio network ID	

Issue Nr.: Version No 00.01.00

Page: 20/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Name	Туре	Value	Comments and Information
cTerminateOrderFromT rackside	orderToContactAnR BC_Type	{valid : true, rbc_id : 0, telephoneNoOfTheR BC : 0, actionToBePerforme d : morc_rbca_terminat eSesssion, appliesAlsoToSleepi ngUnits : false}	
cTerminateSafeRadioC onnectionCmd	mobileSWCmd_Typ e	{valid : true, action : mswa_terminateRa dioConnection, radioNetworkID : 0}	
cTerminationOfCommu nicationSession_MaxNo OfRepetitions	int	5	Comments: 3.5.5.3.1 Traceability: 3.5.5.3.1
cTerminationOfCommu nicationSessionRepetiti onInterval	time_Type	1000	Comments: 3.5.5.3.1 Traceability: 3.5.5.3.1
cTime_0	time_Type	0	

# 3.1.3. countDownTimer Operator

# Declared as **private node**

#### 3.1.3.1. Comments and Information

countDownTimer Comments:

• The countDownTimer implements a generic timer function.

Table 3: countDownTimer Annotations

Note Name	Attribute	Value
	Author	Author : Uwe Steinke
	DateC	Created: 2012-10-15
GdC_1	DateM	Modified: 2012-12-20
	Version	Version: 00.00.00.001
	to_c	True

26-3 Issue Nr.: Version No 00.01.00 Page: 21/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Note Name	Attribute	Value
Remark_1	Description	- Name: countDownTimer - Description: Implements a generic Count Down Timer - Copyright Siemens AG, 2013 - Licensed under the EUPL V.1.1 ( http://joinup.ec.europa.eu/software/page/eupl/l icence-eupl) - Gist URL: Cryptography: No - Author(s): Uwe Steinke  The use of this software is limited to non-vital applications. It has not been developed for vital operation purposes and must not be used for applications which may cause harm to people, physical accidents or financial loss. THEREFORE, NO LIABILITY WILL BE GIVEN FOR SUCH AND ANY OHER KIND OF USE.
	to_c	True

#### 3.1.3.2. Interface

Table 4: Inputs of countDownTimer

Name	Туре	Properties	Comments and Information
re_start	bool		
stop	bool		
actualTime	time_Type		
autoretrigger	bool		
interval	time_Type	hidden	

Table 5: Outputs of countDownTimer

Name	Туре	Propert	ies	Comments and Information
expired	bool	default	false	
started	bool			

### 3.1.3.3. Locals

Table 6: Locals of countDownTimer

Name	Type	Propert	ies	Comments and Information
expired_loc	bool	default	false	

Table 7: Signals of countDownTimer

Name	Comments and Information
sStart	

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.3.4. Operator Hierarchy

diagram : diagram\_countDownTimer\_1
 state-machine : TimerStatus\_SM

state : Counting

<u>diagram</u>: diagram\_Counting\_1

state : Expired state : Stopped

Page: 23/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.3.5. Graphical and Textual Diagrams

#### 3.1.3.5.1. View of diagram\_countDownTimer\_1 (countDownTimer)

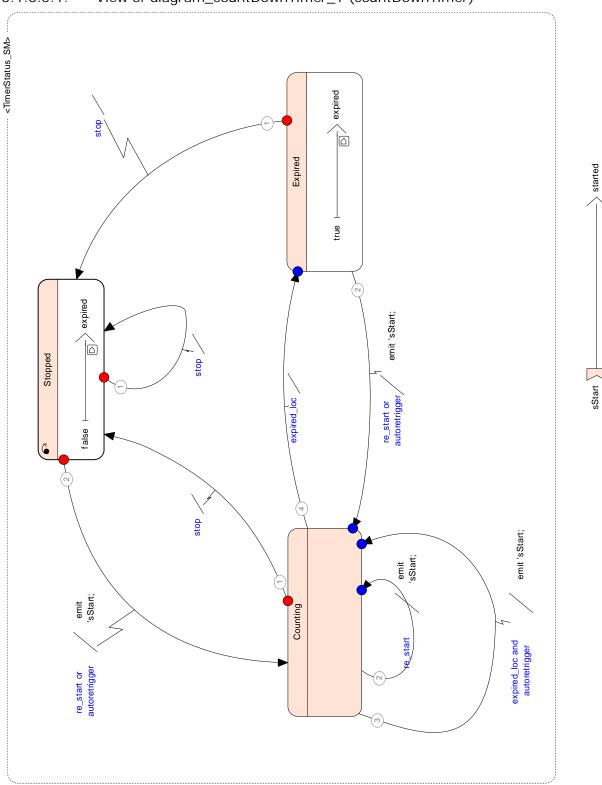


Figure 1: View of diagram\_countDownTimer\_1 (countDownTimer)

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Table 8: State Machines of diagram\_countDownTimer\_1

State Machine	Comments and Information
TimerStatus_SM	

Page: 24/130

Table 9: States of diagram\_countDownTimer\_1

State	Comments and Information
TimerStatus_SM: Counting	
TimerStatus_SM: Expired	
TimerStatus_SM: Stopped	

Table 10: Transitions of diagram\_countDownTimer\_1

Source/Target	#	Conditions/Actions	Comments and Information
Source: TimerStatus_SM: Counting Target: TimerStatus_SM: Stopped	1	Condition: stop	
Source: TimerStatus_SM:Counting Target: TimerStatus_SM:Counting	2	Condition: re_start Actions: emit 'sStart;	
Source: TimerStatus_SM:Counting Target: TimerStatus_SM:Counting	3	Condition: expired_loc and autoretrigger Actions: emit 'sStart;	
Source: TimerStatus_SM:Counting Target: TimerStatus_SM:Expired	4	Condition: expired_loc Actions:	
Source: TimerStatus_SM: Expired Target: TimerStatus_SM: Stopped	1	Condition: stop	
Source: TimerStatus_SM: Expired Target: TimerStatus_SM: Counting	2	Condition: re_start or autoretrigger Actions: emit 'sStart;	
Source: TimerStatus_SM: Stopped Target: TimerStatus_SM: Stopped	1	Condition: stop	
Source: TimerStatus_SM: Stopped Target: TimerStatus_SM: Counting	2	Condition: re_start or autoretrigger Actions: emit 'sStart;	

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 25/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.3.5.2. View of diagram\_Counting\_1 (countDownTimer/TimerStatus\_SM: Counting:)

Owner diagram: diagram\_countDownTimer\_1

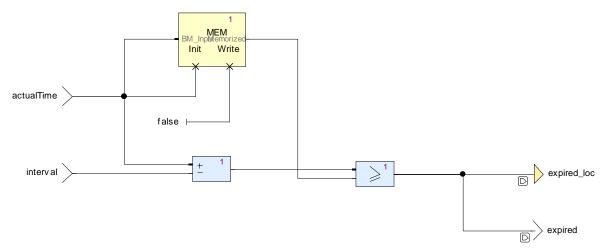


Figure 2: View of diagram\_Counting\_1 (countDownTimer/TimerStatus\_SM:Counting:)

# 3.1.4. establish\_a\_CommunicationSession Operator

#### Declared as private node

#### 3.1.4.1. Comments and Information

establish\_a\_CommunicationSession Comments:

- Subset 096, REQ 3.5.3
- Implements the establishing process of a communication session

Table 11: establish\_a\_CommunicationSession Annotations

Note Name	Attribute	Value
Remark_1	Description	- Name: establish_a_CommunicationSession - Description: Implements the establishing process of a communication session - Copyright Siemens AG, 2013 - Licensed under the EUPL V.1.1 ( http://joinup.ec.europa.eu/software/page/eupl/licence-eupl) - Gist URL: Cryptography: No - Author(s): Uwe Steinke  The use of this software is limited to non-vital applications. It has not been developed for vital operation purposes and must not be used for applications which may cause harm to people, physical accidents or financial loss. THEREFORE, NO LIABILITY WILL BE GIVEN FOR SUCH AND ANY OHER KIND OF USE.
	to_c	True

Page: 26/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

#### 3.1.4.2. Interface

Table 12: Inputs of establish\_a\_CommunicationSession

Name	Туре	Comments and Information
isPartOfAnOngoingStar tOfMissionProcedure	bool	Comments: 3.5.3.7 Traceability: 3.5.3.7
connectionSuccessfully Established	bool	Comments: 3.5.3.7 a) Safe Radio Connection successfully established Traceability: 3.5.3.7
settingUpSafeConnecti onHasFailed	bool	Comments: 3.5.3.7 a) Traceability: 3.5.3.7
endOfMissionIsPerform ed	bool	Comments: 3.5.3.7 a) Traceability: 3.5.3.7
trainPassesALevelTrans itionBorder	bool	Comments: 3.5.3.7 a) trainPassesALevelTransitionBorder with it's front end Traceability: 3.5.3.7
orderToEstablishACom municationSession_fro mTrackside	orderToContactAnRBC_ Type	Comments: 3.5.3.7 a) Traceability: 3.5.3.7
orderToEstablishACom municationSession_fro mOBU	orderToContactAnRBC_ Type	Comments: 3.5.3.7 a) Traceability: 3.5.3.7
orderDoesNotRequestT oContactAnAcceptingR BC	bool	Comments: 3.5.3.7 a) Traceability: 3.5.3.7
trainPassesA_RBC_RBC _border_WithItsFrontE nd	bool	Comments: 3.5.3.7 a) Traceability: 3.5.3.7
systemVersionFromTra cksideSupported	bool	Comments: 3.5.3.8 a) Traceability: 3.5.3.8
systemVersionReceived	bool	Comments: 3.5.3.8 a) Traceability: 3.5.3.8
initiationOfACommunic ationSession_receivedF romTrackside	bool	Comments: 3.5.3.10 b) Traceability: 3.5.3.10
communicationSession InitiatedByOBU_	bool	

3.0.0, Chapter 3.5 "Management of Radio Communication"

Radio Communication" Created: 10.04.2013

Name	Type	Comments and Information
communicationSession InitiatedFromTrackside	bool	

Table 13: Outputs of establish\_a\_CommunicationSession

				0
Name	Туре	Propert	ies	Comments and Information
InformTheDriverThatN oConnectionWasSetup	bool			
requestTheSetupOfASa feRadioConnection	bool			
sendTheMessageInitiati onOfCommunicationSe ssionToTrackside	bool			Comments: 3.5.3.7 b) Traceability: 3.5.3.7
sendMessage_NoComp atibleVersionSupported	bool			Comments: 3.5.3.8 b) Traceability: 3.5.3.8
terminateTheCommuni cationSession	bool			Comments: 3.5.3.8 b) Traceability: 3.5.3.8
sendASessionEstablish edReportToTrackside	bool			Comments: 3.5.3.10 c) 3.5.3.8 a) sSendMessageEstablish edReport to trackside Traceability: 3.5.3.8 3.5.3.10
firstRequestToSetupAS afeRadioConnection	bool			Comments: 3.5.7.3a) Traceability: 3.5.7.3
finalAttemptToSetupTh eSafeRadioConnectionF ailed	bool			Comments: 3.5.7.5[1] Traceability: 3.5.7.5
requestsToSetupTheSa feRadioConnectionStop ped	bool			Comments: 3.5.7.4 Traceability: 3.5.7.4
sessionSuccessfullyEst ablished	bool	default	false	
establishingACommuni cationSessionAborted	bool			

### 3.1.4.3. Locals

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Table 14: Signals of establish\_a\_CommunicationSession

Name	Comments and Information
sfinalAttemptToSetupTheSafe RadioConnectionFailed	Comments: 3.5.7.5[1] Traceability: 3.5.7.5
sFirstRequestToSetupASafeR adioConnection	Comments: 3.5.7.3a) Traceability: 3.5.7.3
sInformTheDriverThatNoCon nectionWasSetup	
sRequestTheSetupOfASafeRa dioConnection	
sSendASessionEstablishedRe portToTrackside	Comments: 3.5.3.10 c) Traceability: 3.5.3.10
sSendMessage_NoCompatible VersionSupported	Comments: 3.5.3.8 b) Traceability: 3.5.3.8
sSendMessageEstablishedRep ort	Comments: 3.5.3.8 a) sSendMessageEstablishedReport to trackside Traceability: 3.5.3.8
sSendTheMessageInitiationOf CommunicationSessionToTra ckside	Comments: 3.5.3.7 b) Traceability: 3.5.3.7
sTerminateTheCommunicatio nSession	Comments: 3.5.3.8 b) Traceability: 3.5.3.8
sTryToEstablishConnectionFai led	

### 3.1.4.4. Operator Hierarchy

<u>diagram</u>: diagram\_establish\_a\_CommunicationSession

 $state-machine: Establishment Of A Communication Session\_SM$ 

state: Compatible System Version Supported

state: Consider The Communication Session Established

state: Idle

state: NoCompatibleSystemVersionSupported

 $state: Request Setup Of AS a fe Radio Connection\_initiated By OBU$ 

<u>diagram</u>:

diagram\_RequestSetupOfASafeRadioConnection\_initiatedByOBU\_1

state-machine: RequestConnectionWithTrackSide\_SM

state : NoSuccess state : Start state : Success

state:

TryToEstablishConnection\_isNotPartOfStartOfMission

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 29/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

diagram:

diagram\_TryToEstablishConnection\_isNotPartOfStartOfMission\_1

state-machine:

RepeatSetupConnection\_SM

state : Retry state : Start

state:

 $Try To Establish Connection\_is Part Of Start Of Mission$ 

diagram:

diagram\_TryToEstablishConnection\_isPartOfStartOfMission\_1

state-machine:

RepeatSetupConnection\_SM

state : Retry state : Start

 $state: Request Setup Of AS a fe Radio Connection\_initiated By Track side\\$ 

state:

 $WaitFor Message\_Initiation Of Communication Session\_From Track side$ 

state: Wait For System Version From Track Side


 $state: Wait Til\_Communication Session Terminated$ 

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.4.5. Graphical and Textual Diagrams

# 3.1.4.5.1. View of diagram\_establish\_a\_CommunicationSession (establish\_a\_CommunicationSession)

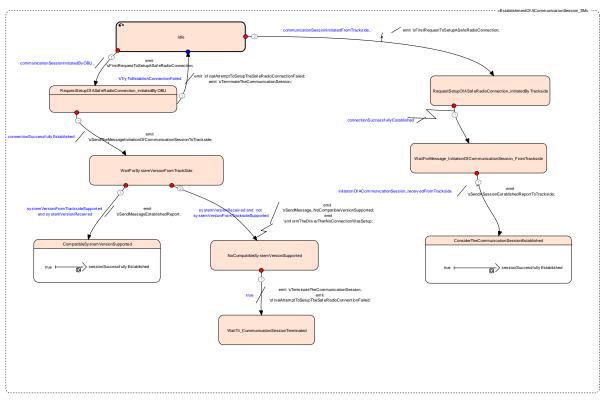

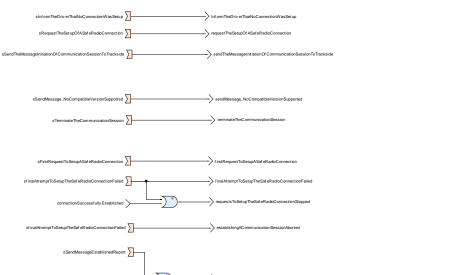


Figure 3: View of diagram\_establish\_a\_CommunicationSession (establish\_a\_CommunicationSession)

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 31/130

3.0.0, Chapter 3.5 "Management of

Table 15: Locals of diagram\_establish\_a\_CommunicationSession

Name	Туре	Propert	ies	Comments and Information
EstablishmentOfACom municationSession_SM : RequestSetupOfASafe RadioConnection_initia tedByOBU: noOfConnec tionRetriesExceeded	bool	default	false	Comments: 3.5.3.7 a) Traceability: 3.5.3.7
EstablishmentOfACom municationSession_SM : RequestSetupOfASafe RadioConnection_initia tedByOBU: repeatRetry ConditionFailed	bool	default	false	

Table 16: State Machines of diagram\_establish\_a\_CommunicationSession

State Machine	Comments and Information	
EstablishmentOfACommunica tionSession_SM	Comments: 3.5.3.7 Traceability: 3.5.3.7	

Table 17: States of diagram\_establish\_a\_CommunicationSession

State	Comments and Information
EstablishmentOfACommunicationSession_ SM: CompatibleSystemVersionSupported	Comments: 3.5.3.8 a) Communication Session established and SystemVersionFromTrackside supported by the OBU Traceability: 3.5.3.8
EstablishmentOfACommunicationSession_ SM:ConsiderTheCommunicationSessionEs tablished	Comments: 3.5.3.10 c) Traceability: 3.5.3.10
EstablishmentOfACommunicationSession_ SM: Idle	Traceability: 3.5.3.10
EstablishmentOfACommunicationSession_ SM: NoCompatibleSystemVersionSupporte d	Comments: 3.5.3.8 b) Communication Session established and SystemVersionFromTrackside not supported by the OBU Traceability: 3.5.3.8
EstablishmentOfACommunicationSession_ SM: RequestSetupOfASafeRadioConnectio n_initiatedByOBU	Comments: 3.5.3.7 a)
EstablishmentOfACommunicationSession_ SM: RequestSetupOfASafeRadioConnectio n_initiatedByTrackside	Comments: 3.5.3.10 a) Traceability: 3.5.3.10

Issue Nr.: Version No 00.01.00 Page: 32/130

3.0.0, Chapter 3.5 "Management of Radio Communication"

Ref. Nr.: UNISIG Subset-026-3

Created: 10.04.2013

State	Comments and Information
EstablishmentOfACommunicationSession_ SM:WaitForMessage_InitiationOfCommuni cationSession_FromTrackside	Comments: 3.5.3.10 b) Wait for message InitiationOfCommunicationSession from trackside. Traceability: 3.5.3.10
EstablishmentOfACommunicationSession_ SM: WaitForSystemVersionFromTrackSide	Comments: 3.5.3.7 c), 3.5.3.8 Traceability: 3.5.3.7 3.5.3.8
EstablishmentOfACommunicationSession_ SM:WaitTil_CommunicationSessionTermin ated	Comments: 3.5.3.8 b) Communication Session established and waiting til communication session terminates Traceability: 3.5.3.8

 $Table~18: Transitions~of~diagram\_establish\_a\_CommunicationSession$ 

Source/Target	#	Conditions/Actions	Comments and Information
Source: EstablishmentOfACommunicationSe ssion_SM:Idle Target: EstablishmentOfACommunicationSe ssion_SM:RequestSetupOfASafeRad ioConnection_initiatedByOBU	1	Condition: communicationSession InitiatedByOBU_ Actions: emit 'sFirstRequestToSetup ASafeRadioConnection;	
Source: EstablishmentOfACommunicationSe ssion_SM: Idle Target: EstablishmentOfACommunicationSe ssion_SM: RequestSetupOfASafeRad ioConnection_initiatedByTrackside	2	Condition: communicationSession InitiatedFromTrackside — Actions: emit 'sFirstRequestToSetup ASafeRadioConnection;	Comments: 3.5.3.10 a)
Source: EstablishmentOfACommunicationSe ssion_SM: NoCompatibleSystemVer sionSupported Target: EstablishmentOfACommunicationSe ssion_SM: WaitTil_CommunicationS essionTerminated	1	Condition: true Actions: let emit 'sTerminateTheCommu nicationSession; emit 'sfinalAttemptToSetupT heSafeRadioConnection Failed; tel	Comments: 3.5.3.8 b)

Ref. Nr.: UNISIG Subset-026-3 Page: 33/130 Issue Nr.: Version No 00.01.00 3.0.0, Chapter 3.5 "Management of

Radio Communication"

Created: 10.04.2013

Source/Target	#	Conditions/Actions	Comments and Information
Source: EstablishmentOfACommunicationSe ssion_SM: RequestSetupOfASafeRad ioConnection_initiatedByOBU Target: EstablishmentOfACommunicationSe ssion_SM: WaitForSystemVersionFro mTrackSide	1	Condition: connectionSuccessfully Established Actions: emit 'sSendTheMessageIniti ationOfCommunication SessionToTrackside;	
		Condition:	
Source: EstablishmentOfACommunicationSe ssion_SM: RequestSetupOfASafeRad ioConnection_initiatedByOBU Target: EstablishmentOfACommunicationSe ssion_SM: Idle	2	'sTryToEstablishConnec tionFailed Actions: let emit 'sfinalAttemptToSetupT heSafeRadioConnection Failed; emit 'sTerminateTheCommu nicationSession; tel	
Source: EstablishmentOfACommunicationSe ssion_SM: RequestSetupOfASafeRad ioConnection_initiatedByTrackside Target: EstablishmentOfACommunicationSe ssion_SM: WaitForMessage_Initiatio nOfCommunicationSession_FromTr ackside	1	Condition: connectionSuccessfully Established	
Source: EstablishmentOfACommunicationSe ssion_SM: WaitForMessage_Initiatio nOfCommunicationSession_FromTr ackside Target: EstablishmentOfACommunicationSe ssion_SM: ConsiderTheCommunicati onSessionEstablished	1	Condition: initiationOfACommunic ationSession_receivedF romTrackside Actions: emit 'sSendASessionEstablis hedReportToTrackside;	Comments: 3.5.3.10 c)
Source: EstablishmentOfACommunicationSe ssion_SM:WaitForSystemVersionFro mTrackSide Target: EstablishmentOfACommunicationSe ssion_SM:CompatibleSystemVersio nSupported	1	Condition: systemVersionFromTra cksideSupported and systemVersionReceived Actions: emit 'sSendMessageEstablis hedReport;	

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013


Source/Target	#	Conditions/Actions	Comments and Information
Source: EstablishmentOfACommunicationSe ssion_SM: WaitForSystemVersionFro mTrackSide Target: EstablishmentOfACommunicationSe ssion_SM: NoCompatibleSystemVer sionSupported	2	Condition: systemVersionReceived and not systemVersionFromTra cksideSupported Actions: let     emit 'sSendMessage_NoCo mpatibleVersionSuppor ted;     emit 'sInformTheDriverThat NoConnectionWasSetu p; tel	

3.1.4.5.2. View of diagram\_RequestSetupOfASafeRadioConnection\_initiatedByOBU\_1 (establish\_a\_CommunicationSession/EstablishmentOfACommunicationSession\_SM: Reque stSetupOfASafeRadioConnection\_initiatedByOBU:)

 ${\it Owner\ diagram:}\ diagram\_establish\_a\_Communication Session$ 

Page: 35/130

3.0.0, Chapter 3.5 "Management of

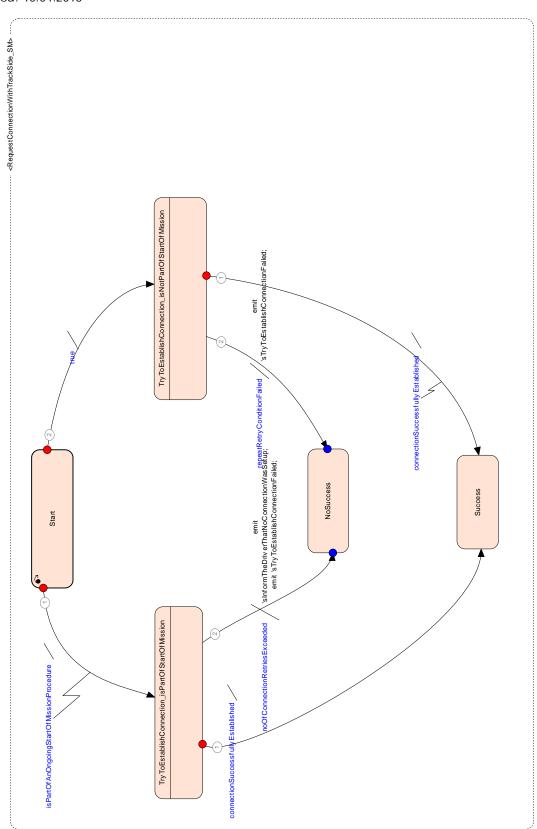

3.0.0, Chapter 3.5 "Management of

Table 19: State Machines of diagram\_RequestSetupOfASafeRadioConnection\_initiatedByOBU\_1

State Machine	Comments and Information
RequestConnectionWithTrack Side_SM	Comments: 3.5.3.7 Traceability: 3.5.3.7

Table 20: States of diagram\_RequestSetupOfASafeRadioConnection\_initiatedByOBU\_1

State	Comments and Information
RequestConnectionWithTrackSide_SM: No Success	
RequestConnectionWithTrackSide_SM:Start	
RequestConnectionWithTrackSide_SM:Su ccess	
RequestConnectionWithTrackSide_SM: Try ToEstablishConnection_isNotPartOfStartOf Mission	
RequestConnectionWithTrackSide_SM:Try ToEstablishConnection_isPartOfStartOfMis sion	Comments: 3.5.3.7 a) Traceability: 3.5.3.7

Table 21: Transitions of diagram\_RequestSetupOfASafeRadioConnection\_initiatedByOBU\_1

Source/Target	#	Conditions/Actions	Comments and Information
Source: RequestConnectionWithTrackSide_ SM: Start Target: RequestConnectionWithTrackSide_ SM: TryToEstablishConnection_isPartOfStartOfMission	1	Condition: isPartOfAnOngoingStar tOfMissionProcedure	
Source: RequestConnectionWithTrackSide_ SM: Start Target: RequestConnectionWithTrackSide_ SM: TryToEstablishConnection_isNot PartOfStartOfMission	2	Condition: true	
Source: RequestConnectionWithTrackSide_ SM:TryToEstablishConnection_isNot PartOfStartOfMission Target: RequestConnectionWithTrackSide_ SM:Success	1	Condition: connectionSuccessfully Established	
Source: RequestConnectionWithTrackSide_ SM:TryToEstablishConnection_isNot PartOfStartOfMission Target: RequestConnectionWithTrackSide_ SM:NoSuccess	2	Condition: repeatRetryConditionFa iled Actions: emit 'sTryToEstablishConnec tionFailed;	

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Source/Target	#	Conditions/Actions	Comments and Information
Source: RequestConnectionWithTrackSide_ SM: TryToEstablishConnection_isPar tOfStartOfMission Target: RequestConnectionWithTrackSide_ SM: Success	1	Condition: connectionSuccessfully Established	
Source: RequestConnectionWithTrackSide_ SM:TryToEstablishConnection_isPar tOfStartOfMission Target: RequestConnectionWithTrackSide_ SM:NoSuccess	2	Condition: noOfConnectionRetries Exceeded Actions: let emit 'sInformTheDriverThat NoConnectionWasSetu p; emit 'sTryToEstablishConnectionFailed; tel	


3.1.4.5.3. View of diagram\_TryToEstablishConnection\_isNotPartOfStartOfMission\_1 (establish\_a\_CommunicationSession/EstablishmentOfACommunicationSession\_SM: RequestSetupOfASafeRadioConnection\_initiatedByOBU: RequestConnectionWithTrackSide\_SM: TryToEstablishConnection\_isNotPartOfStartOfMission:)

 ${\it Owner\ diagram\_} Request Setup Of AS a fe Radio Connection\_initiated By OBU\_1$ 

Page: 38/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

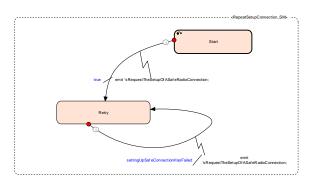

ocontraction of the contraction of the contraction

Figure 5: View of diagram\_TryToEstablishConnection\_isNotPartOfStartOfMission\_1 (establish\_a\_CommunicationSession/EstablishmentOfACommunicationSession\_SM:RequestSetupOf ASafeRadioConnection\_initiatedByOBU:RequestConnectionWithTrackSide\_SM:TryToEstablishConnection\_isNotPartOfStartOfMission:)

Table 22: State Machines of diagram\_TryToEstablishConnection\_isNotPartOfStartOfMission\_1

State Machine	Comments and Information
RepeatSetupConnection_SM	

Table 23: States of diagram\_TryToEstablishConnection\_isNotPartOfStartOfMission\_1

State	Comments and Information
RepeatSetupConnection_SM: Retry	
RepeatSetupConnection_SM: Start	

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Table 24: Transitions of diagram\_TryToEstablishConnection\_isNotPartOfStartOfMission\_1


Source/Target	#	Conditions/Actions	Comments and Information
Source: RepeatSetupConnection_SM: Retry Target: RepeatSetupConnection_SM: Retry	1	Condition: settingUpSafeConnecti onHasFailed Actions: emit 'sRequestTheSetupOfA SafeRadioConnection;	
Source: RepeatSetupConnection_SM: Start Target: RepeatSetupConnection_SM: Retry	1	Condition: true Actions: emit 'sRequestTheSetupOfA SafeRadioConnection;	

3.1.4.5.4. View of diagram\_TryToEstablishConnection\_isPartOfStartOfMission\_1 (establish\_a\_CommunicationSession/EstablishmentOfACommunicationSession\_SM: RequestSetupOfASafeRadioConnection\_initiatedByOBU: RequestConnectionWithTrackSide\_SM: TryToEstablishConnection\_isPartOfStartOfMission:)

Owner diagram: diagram\_RequestSetupOfASafeRadioConnection\_initiatedByOBU\_1

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

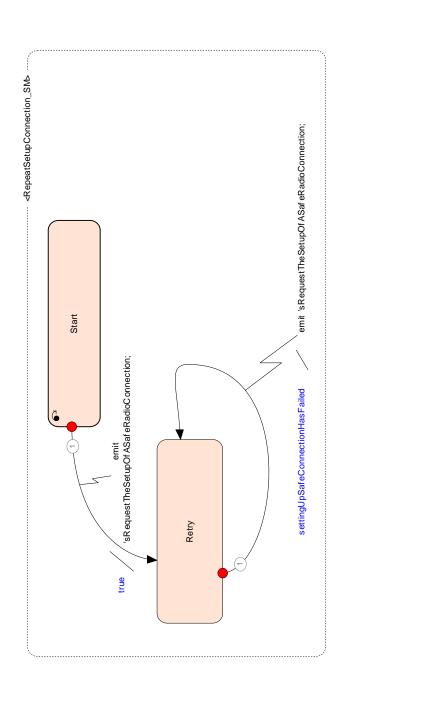

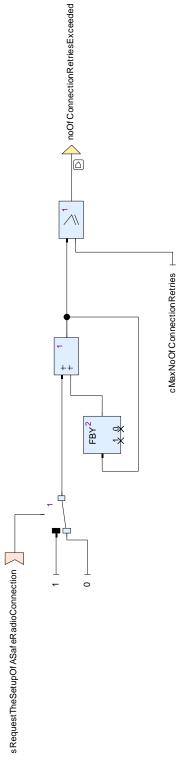


Figure 6: View of diagram\_TryToEstablishConnection\_isPartOfStartOfMission\_1 (establish\_a\_CommunicationSession/EstablishmentOfACommunicationSession\_SM:RequestSetupOf ASafeRadioConnection\_initiatedByOBU:RequestConnectionWithTrackSide\_SM:TryToEstablishConnection\_isPartOfStartOfMission:)

Table 25: State Machines of diagram\_TryToEstablishConnection\_isPartOfStartOfMission\_1

State Machine	Comments and Information
RepeatSetupConnection_SM	

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Table 26: States of diagram\_TryToEstablishConnection\_isPartOfStartOfMission\_1

State	Comments and Information
RepeatSetupConnection_SM: Retry	
RepeatSetupConnection_SM: Start	

Table 27: Transitions of diagram\_TryToEstablishConnection\_isPartOfStartOfMission\_1

Source/Target	#	Conditions/Actions	Comments and Information
Source: RepeatSetupConnection_SM: Retry Target: RepeatSetupConnection_SM: Retry	1	Condition: settingUpSafeConnecti onHasFailed Actions: emit 'sRequestTheSetupOfA SafeRadioConnection;	
Source: RepeatSetupConnection_SM: Start Target: RepeatSetupConnection_SM: Retry	1	Condition: true Actions: emit 'sRequestTheSetupOfA SafeRadioConnection;	

#### 3.1.5. evaluateOrderToContactAnRBD Operator

Declared as private node

#### 3.1.5.1. Comments and Information

evaluateOrderToContactAnRBD Comments:

- Subset 096, REQ 3.5.3.13, 3.5.3.16, 3.5.3.13.1, 3.5.3.14, 3.5.3.15:
- Evaluates the order to contact a RBC, i. e. establish, maintain or terminate a communication session.

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 42/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Table 28: evaluateOrderToContactAnRBD Annotations

Note Name	Attribute	Value
Remark_1	Description	- Name: evaluateOrderToContactAnRBD - Description: Evaluates the orders to establish, maintain or terminate a communication session - Copyright Siemens AG, 2013 - Licensed under the EUPL V.1.1 ( http://joinup.ec.europa.eu/software/page/eupl/licence-eupl) - Gist URL: Cryptography: No - Author(s): Uwe Steinke  The use of this software is limited to non-vital applications. It has not been developed for vital operation purposes and must not be used for applications which may cause harm to people, physical accidents or financial loss. THEREFORE, NO LIABILITY WILL BE GIVEN FOR SUCH AND ANY OHER KIND OF USE.
	to_c	True

# evaluateOrderToContactAnRBD Traceability:

- 3.5.3.13
- 3.5.3.14
- 3.5.3.15
- 3.5.3.13.1
- 3.5.3.16

# 3.1.5.2. Interface

Table 29: Inputs of evaluateOrderToContactAnRBD

Name	Туре	Comments and Information
order_in	orderToContactAnRBC_ Type	
onBoardStoredShortPh oneNo	rbc_phoneNo_Type	

Table 30: Outputs of evaluateOrderToContactAnRBD

Name	Type	Comments and Information
order_out	orderToContactAnRBC_ Type	

# 3.1.5.3. Operator Hierarchy

<u>diagram</u>: diagram\_evaluateOrderToContactAnRBD\_1

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 43/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.5.4. Graphical and Textual Diagrams

# 3.1.5.4.1. View of diagram\_evaluateOrderToContactAnRBD\_1 (evaluateOrderToContactAnRBD)

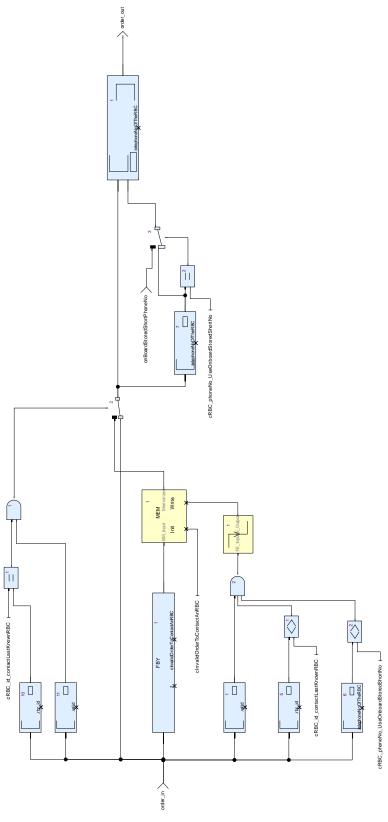


Figure 7: View of diagram\_evaluateOrderToContactAnRBD\_1 (evaluateOrderToContactAnRBD)

Issue Nr.: Version No 00.01.00 Page: 44/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

 $diagram\_evaluateOrderToContactAnRBD\_1\ Traceability:$ 

• 3.5.3.13.1

# 3.1.6. Initiate\_a\_Session Operator

# Declared as private node

#### 3.1.6.1. Comments and Information

Initiate\_a\_Session Comments:

- Subset 096, REQ 3.5.3:
- Determines, if a communication session has to be initiated.

Table 31: Initiate\_a\_Session Annotations

Note Name	Attribute	Value
Remark_1	Description	- Name: Initiate_a_Session - Description: Determines, if a communication session has to be initiated Copyright Siemens AG, 2013 - Licensed under the EUPL V.1.1 ( http://joinup.ec.europa.eu/software/page/eupl/licence-eupl) - Gist URL: Cryptography: No - Author(s): Uwe Steinke  The use of this software is limited to non-vital applications. It has not been developed for vital operation purposes and must not be used for applications which may cause harm to people, physical accidents or financial loss. THEREFORE, NO LIABILITY WILL BE GIVEN FOR SUCH AND ANY OHER KIND OF USE.
	to_c	True

# 3.1.6.2. Interface

Table 32: Inputs of Initiate\_a\_Session

Name	Туре	Comments and Information
initiateRequest_fromO nboardEquipment	bool	Comments: 3.5.3.1: Initiate Request from ERTMS/ETCS on-board equipment Traceability: 3.5.3.1
initiateRequest_fromR BC	bool	
initiateRequest_fromRa dio_InfillUnit	bool	
etcs_level	M_LEVEL_Type	

Issue Nr.: Version No 00.01.00 Page: 45/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Name	Туре	Comments and Information	
atStartOfMission	bool	Comments: Start of Mission 3.5.3.4. a) Traceability: 3.5.3.4	
establishSessionOrdere dFromTrackside	bool	Comments: 3.5.3.4 b) Is this the same as the intiateRequest_fromRB input?	
etcs_mode	M_MODE_Type		
modeChangeHasToBeR eportedToRBC	bool	Comments: 3.5.3.4 c) Traceability: 3.5.3.4	
driverHasManuallyChan gedLevel	bool	Comments: 3.5.3.4 d)	
trainFrontReachesEndO fAnnouncedRadioHole	bool	Comments: 3.5.3.4e)	
prevSessionTerminated DueToLossOfSafeRadio Connection	bool	Comments: 3.5.3.4 f)	
startOfMissionProcedur eCompleted	bool	Comments: 3.5.3.4 e)	
NoCommunicationSessi onEstablished	bool	Comments: 3.5.3.4 g)	
initiateEstablishingNew SessionRequest	bool	Comments: 3.5.3.5.2 Traceability: 3.5.3.5.2	

Table 33: Outputs of Initiate\_a\_Session

Name	Туре	Comments and Information
initiate_a_communicati onSession_Request	bool	
communicationSession InitiatedByOBU_	bool	Traceability: 3.5.3.7
communicationSession InitiatedFromTrackside	bool	

# 3.1.6.3. Locals

Table 34: Locals of Initiate\_a\_Session

Name	Type	Comments and Information
establishACommunicati onSession_1	bool	Comments: 3.5.3.4
initiateACommunicatio nSession_loc	bool	

# 3.1.6.4. Operator Hierarchy

diagram : diagram\_Initiate\_a\_Session\_1
diagram : diagram\_Initiate\_a\_Session\_2

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.6.5. Graphical and Textual Diagrams

# 3.1.6.5.1. View of diagram\_Initiate\_a\_Session\_1 (Initiate\_a\_Session)

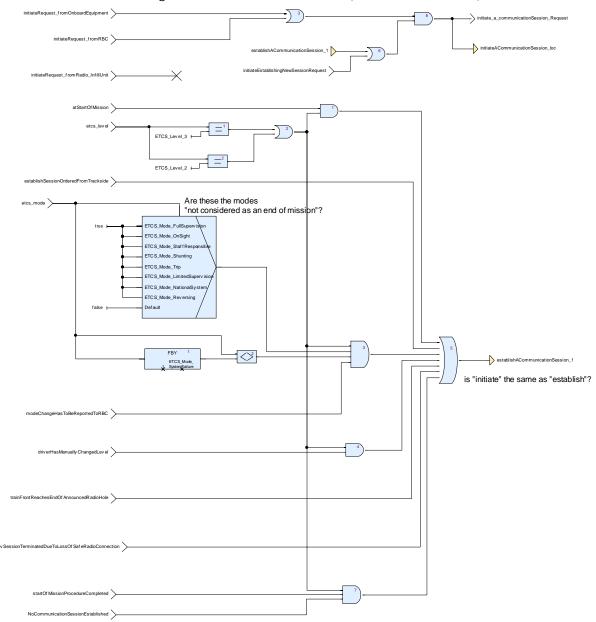


Figure 8: View of diagram\_Initiate\_a\_Session\_1 (Initiate\_a\_Session)

diagram\_Initiate\_a\_Session\_1 Traceability:

• 3.5.3.4

Page: 47/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.6.5.2. View of diagram\_Initiate\_a\_Session\_2 (Initiate\_a\_Session)

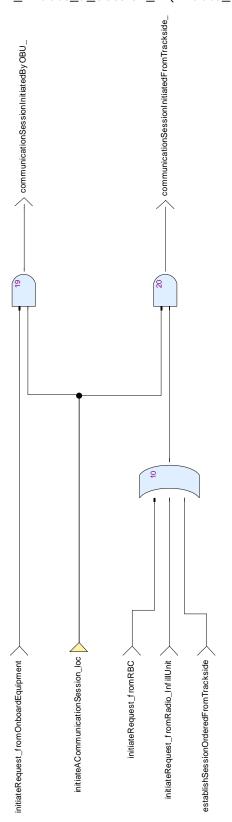


Figure 9: View of diagram\_Initiate\_a\_Session\_2 (Initiate\_a\_Session)

Issue Nr.: Version No 00.01.00

Page: 48/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.7. initiateTerminatingASession Operator

# Declared as private node

# 3.1.7.1. Comments and Information

initiateTerminatingASession Comments:

- Subset 096, REQ 3.5.5.1
- Initiates and processes the termination of a communication session.

Table 35: initiateTerminatingASession Annotations

Note Name	Attribute	Value
Remark_1	Description	- Name: initiateTerminatingASession - Description: Initiates and processes the termination of a communication session Copyright Siemens AG, 2013 - Licensed under the EUPL V.1.1 ( http://joinup.ec.europa.eu/software/page/eupl/licence-eupl) - Gist URL: Cryptography: No - Author(s): Uwe Steinke  The use of this software is limited to non-vital applications. It has not been developed for vital operation purposes and must not be used for applications which may cause harm to people, physical accidents or financial loss. THEREFORE, NO LIABILITY WILL BE GIVEN FOR SUCH AND ANY OHER KIND OF USE.
	to_c	True

initiateTerminatingASession Traceability:

• 3.5.5.1

### 3.1.7.2. Interface

Table 36: Inputs of initiateTerminatingASession

Name	Туре	Comments and Information	
orderReceivedFromTra ckside	orderToContactAnRBC_ Type	Comments: 3.5.5.1a) Traceability: 3.5.5.1	
errorConditionRequirin gTerminationDetected	bool	Comments: 3.5.5.1b) Traceability: 3.5.5.1	
trainIsRejectedByRBC_ duringStartOfMission	bool	Comments: 3.5.5.1c) Traceability: 3.5.5.1	

Issue Nr.: Version No 00.01.00 Page: 49/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Name	Туре	Comments and Information
driverClosesTheDeskdu ringStartOfMission	bool	Comments: 3.5.5.1d) Traceability: 3.5.5.1
trainExitedFromAnRBC Area	bool	Comments: 3.5.5.1e) Traceability: 3.5.5.1
receivedOrderToTermin ateTheSession	orderToContactAnRBC_ Type	Comments: 3.5.5.1e) Traceability: 3.5.5.1
actualTime	time_Type	
isInCommunicationSes sionWithAnRIU	bool	Comments: 3.5.5.1f) Traceability: 3.5.5.1
level_1_isLeft	bool	Comments: 3.5.5.1f) Traceability: 3.5.5.1
endOfMissionIsExecute d	bool	Comments: 3.5.5.1f) Traceability: 3.5.5.1

Table 37: Outputs of initiateTerminatingASession

Name	Type	Comments and Information	
initiateTermination	bool		
sendAPositionReport	bool	Comments: 3.5.5.1e) Traceability: 3.5.5.1	

# 3.1.7.3. Locals

 ${\it Table~38: Locals~of~initiate Terminating AS ession}$ 

Name	Туре	Propert	ies	Comments and Information
definedNumberOfRepet itionsHasBeenReached	bool	default	false	Comments: 3.5.5.1e) Traceability: 3.5.5.1
noReplyReceivedAfterL astRepetition	bool			Comments: 3.5.5.1e) Traceability: 3.5.5.1
orderToTerminateTheS essionIsReceived	bool			Comments: 3.5.5.1e) Traceability: 3.5.5.1

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Table 39: Signals of initiateTerminatingASession

Name	Comments and Information	
sSendAPositionReport	Comments: 3.5.5.1e) Traceability: 3.5.5.1	
sTerminateTheCommunicatio nSession	Comments: 3.5.5.1e) Traceability: 3.5.5.1	

# 3.1.7.4. Operator Hierarchy

state: Idle

state: Wait For Order To Terminate The Session

<u>diagram</u>: diagram\_WaitForOrderToTerminateTheSession\_1

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00

Page: 51/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.7.5. Graphical and Textual Diagrams

# 3.1.7.5.1. View of diagram\_initiateTerminatingASession\_1 (initiateTerminatingASession)

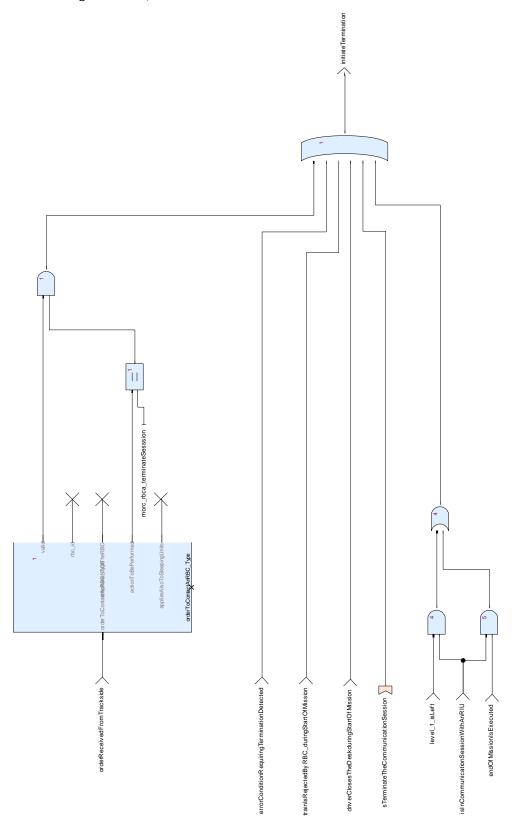


Figure 10: View of diagram\_initiateTerminatingASession\_1 (initiateTerminatingASession)

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.7.5.2. View of diagram\_initiateTerminatingASession\_2 (initiateTerminatingASession)

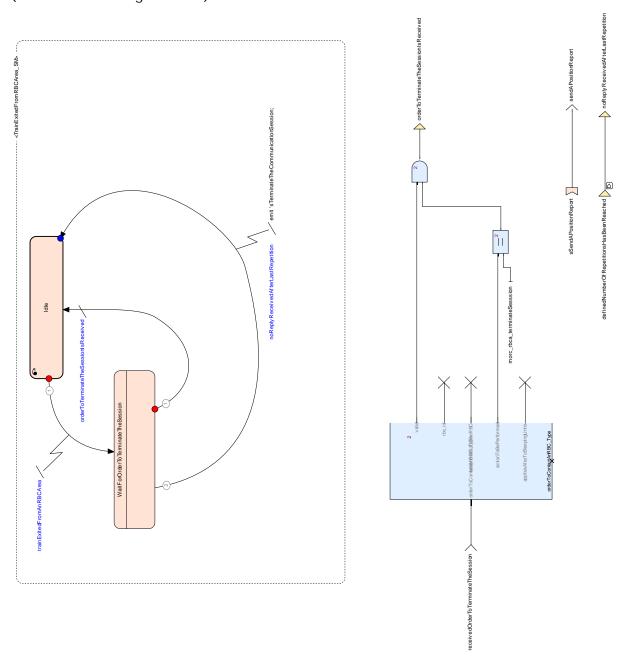


Figure 11: View of diagram\_initiateTerminatingASession\_2 (initiateTerminatingASession)

Table 40: State Machines of diagram\_initiateTerminatingASession\_2

State Machine	Comments and Information	
TrainExitedFromRBCArea_SM	Comments: 3.5.5.1e Traceability: 3.5.5.1	

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Table 41: States of diagram\_initiateTerminatingASession\_2

State	Comments and Information
TrainExitedFromRBCArea_SM:Idle	
TrainExitedFromRBCArea_SM:WaitForOrd erToTerminateTheSession	Traceability: 3.5.5.1

Table 42: Transitions of diagram\_initiateTerminatingASession\_2

Source/Target	#	Conditions/Actions	Comments and Information
Source: TrainExitedFromRBCArea_SM:Idle Target: TrainExitedFromRBCArea_SM:WaitF orOrderToTerminateTheSession	1	Condition: trainExitedFromAnRBC Area Actions:	
Source: TrainExitedFromRBCArea_SM: WaitF orOrderToTerminateTheSession Target: TrainExitedFromRBCArea_SM: Idle	1	Condition: orderToTerminateTheS essionIsReceived	
Source: TrainExitedFromRBCArea_SM: WaitF orOrderToTerminateTheSession Target: TrainExitedFromRBCArea_SM: Idle	2	Condition: noReplyReceivedAfterL astRepetition Actions: emit 'sTerminateTheCommu nicationSession;	

3.1.7.5.3. View of diagram\_WaitForOrderToTerminateTheSession\_1 (initiateTerminatingASession/TrainExitedFromRBCArea\_SM: WaitForOrderToTerminateThe Session:)

 ${\it Owner\ diagram:}\ diagram\_initiate Terminating AS ession\_2$ 

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

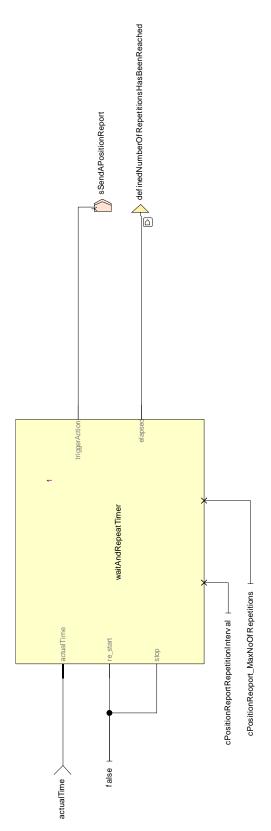


Figure 12: View of diagram\_WaitForOrderToTerminateTheSession\_1 (initiateTerminatingASession/TrainExitedFromRBCArea\_SM:WaitForOrderToTerminateTheSession:)

 $diagram\_WaitForOrderToTerminateTheSession\_1\ Traceability:$ 

• 3.5.5.1

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.8. isOrderToEstablishConnection Operator

# Declared as private function

#### 3.1.8.1. Comments and Information

isOrderToEstablishConnection Comments:

• Checks, it the order carries a valid "Establish Session" command

Table 43: isOrderToEstablishConnection Annotations

Note Name	Attribute	Value
Remark_1	Description	- Name: isOrderToEstablishConnection - Description: Checks, it the order carries a valid "Establish Session" command - Copyright Siemens AG, 2013 - Licensed under the EUPL V.1.1 ( http://joinup.ec.europa.eu/software/page/eupl/licence-eupl) - Gist URL: Cryptography: No - Author(s): Uwe Steinke  The use of this software is limited to non-vital applications. It has not been developed for vital operation purposes and must not be used for applications which may cause harm to people, physical accidents or financial loss. THEREFORE, NO LIABILITY WILL BE GIVEN FOR SUCH AND ANY OHER KIND OF USE.
	to_c	True

#### 3.1.8.2. Interface

Table 44: Inputs of isOrderToEstablishConnection

Name	Туре	Comments and Information
order	orderToContactAnRBC_ Type	

Table 45: Outputs of isOrderToEstablishConnection

Name	Туре	Comments and Information
isEstablishCmd	bool	

# 3.1.8.3. Operator Hierarchy

diagram: diagram\_isOrder

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00

Page: 56/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.8.4. Graphical and Textual Diagrams

# 3.1.8.4.1. View of diagram\_isOrder (isOrderToEstablishConnection)

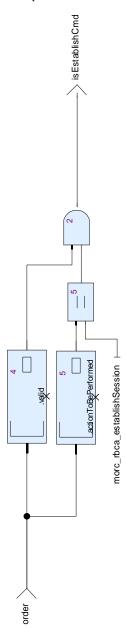


Figure 13: View of diagram\_isOrder (isOrderToEstablishConnection)

# 3.1.9. maintaining\_a\_CommunicationSession Operator Declared as **private node**

#### 3.1.9.1. Comments and Information

 $maintaining\_a\_Communication Session\ Comments:$ 

- Subset 096, REQ 3.5.4
- Maintains an established communcation session.

3.0.0, Chapter 3.5 "Management of Radio Communication"

Radio Communication" Created: 10.04.2013

Table 46: maintaining\_a\_CommunicationSession Annotations

Note Name	Attribute	Value
Remark_1	Description	- Name: maintaining_a_CommunicationSession - Description: Maintains an established communcation session Copyright Siemens AG, 2013 - Licensed under the EUPL V.1.1 ( http://joinup.ec.europa.eu/software/page/eupl/licence-eupl) - Gist URL: Cryptography: No - Author(s): Uwe Steinke  The use of this software is limited to non-vital applications. It has not been developed for vital operation purposes and must not be used for applications which may cause harm to people, physical accidents or financial loss. THEREFORE, NO LIABILITY WILL BE GIVEN FOR SUCH AND ANY OHER KIND OF USE.
	to_c	True

#### 3.1.9.2. Interface

Table 47: Inputs of maintaining\_a\_CommunicationSession

Name	Туре	Comments and Information
communicationSession Established	bool	Comments: 3.5.4.1 Traceability: 3.5.4.1
safeRadioConnectionRe established	bool	Comments: 3.5.4.1 Traceability: 3.5.4.1
lossOfTheSafeRadioCo nnection	bool	Comments: 3.5.4.1 Traceability: 3.5.4.1
disconnectionHasNotBe enOrdered	bool	Comments: 3.5.4.1 Traceability: 3.5.4.1
trainFrontInsideInAnAn nouncedRadioHole	bool	Comments: 3.5.4.4 Traceability: 3.5.4.4
actualTime	time_Type	

Table 48: Outputs of maintaining\_a\_CommunicationSession

Name	Туре	Propert	ies	Comments and Information
tryToSetupANewSafeR adioConnection	bool	default	false	

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Name	Туре	Properties	Comments and Information
informTheDriverThatNo ConnectionWasSetup	bool		
firstRequestToSetupAS afeRadioConnection	bool		Comments: 3.5.7.3b) Traceability: 3.5.7.3
finalAttemptToSetupTh eSafeRadioConnectionF ailed	bool		Comments: 3.5.7.5[6] Traceability: 3.5.7.5
requestsToSetupTheSa feRadioConnectionStop ped	bool		Comments: 3.5.7.4 Traceability: 3.5.7.4

#### 3.1.9.3. Locals

Table 49: Signals of maintaining\_a\_CommunicationSession

Name	Comments and Information
sConnecctionLostInAnnounce dRadioHole	
sFinalAttemptToSetupTheSaf eRadioConnectionFailed	
sInformTheDriverThatNoCon nectionWasSetup	
sStartToTryToSetupASafeRad ioConnection	Comments: 3.5.7.3b) Traceability: 3.5.7.3

# 3.1.9.4. Operator Hierarchy

<u>diagram</u>: diagram\_maintaining\_a\_CommunicationSession\_1

state-machine: Maintaining\_SM

state: Communication Session Established

diagram : diagram\_CommunicationSessionEstablished\_1

state-machine : RadioConnection\_SM

state: Connecction Lost In Announced Radio Hole

state: ConnectionLost

state: RadioConnectionLostTimerExpired

state: SafeRadio\_connected

state: CommunicationSessionNotEstablished


Page: 59/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.9.5. Graphical and Textual Diagrams

# 3.1.9.5.1. View of diagram\_maintaining\_a\_CommunicationSession\_1 (maintaining\_a\_CommunicationSession)

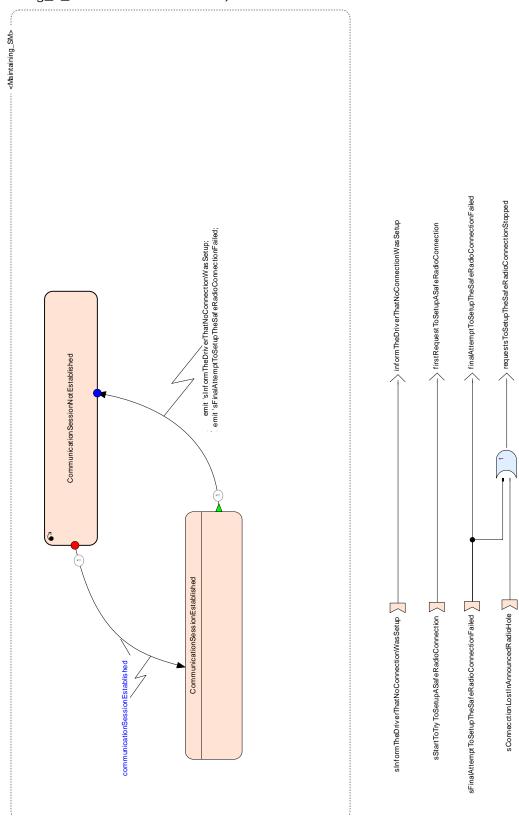

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Figure 14: View of diagram\_maintaining\_a\_CommunicationSession\_1 (maintaining\_a\_CommunicationSession)

Table 50: Locals of diagram\_maintaining\_a\_CommunicationSession\_1

Name	Type	Comments and Information
Maintaining_SM: Comm unicationSessionEstabli shed: radioConnectionL ostTimer_expired		

Table 51: Signals of diagram\_maintaining\_a\_CommunicationSession\_1

Name	Comments and Information
Maintaining_SM:Communicati onSessionEstablished:sStart_	
RadioConnectionLostTimer	

Table 52: State Machines of diagram\_maintaining\_a\_CommunicationSession\_1

State Machine	Comments and Information
Maintaining_SM	

 $Table\ 53:\ States\ of\ diagram\_maintaining\_a\_CommunicationSession\_1$ 

State	Comments and Information
Maintaining_SM: CommunicationSessionEs tablished	Comments: 3.5.4.1 Traceability: 3.5.4.1 3.5.4.2.1
Maintaining_SM:CommunicationSessionN otEstablished	

Table 54: Transitions of diagram\_maintaining\_a\_CommunicationSession\_1

Source/Target	#	Conditions/Actions	Comments and Information
Source: Maintaining_SM:CommunicationSes sionEstablished Target: Maintaining_SM:CommunicationSes sionNotEstablished	1	Actions: let     emit 'sInformTheDriverThat NoConnectionWasSetu p;     emit 'sFinalAttemptToSetup TheSafeRadioConnectio nFailed; tel	Comments: 3.5.4.3 Traceability: 3.5.4.3
Source: Maintaining_SM:CommunicationSes sionNotEstablished Target: Maintaining_SM:CommunicationSes sionEstablished	1	Condition: communicationSession Established	Comments: 3.5.4.1 Traceability: 3.5.4.1

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.9.5.2. View of diagram\_CommunicationSessionEstablished\_1 (maintaining\_a\_CommunicationSession/Maintaining\_SM:CommunicationSessionEstablished:)

Page: 61/130

Owner diagram: diagram\_maintaining\_a\_CommunicationSession\_1

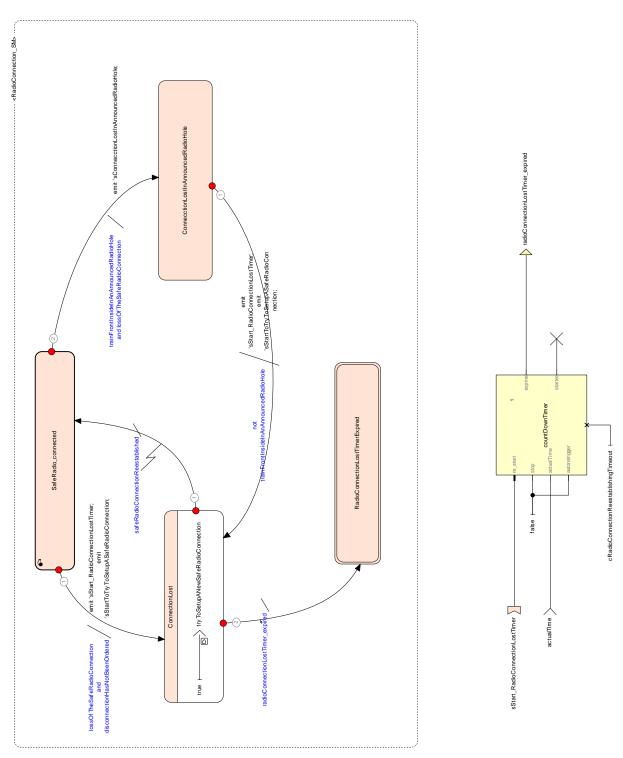


Figure 15: View of diagram\_CommunicationSessionEstablished\_1 (maintaining\_a\_CommunicationSession/Maintaining\_SM:CommunicationSessionEstablished:)

6-3 Issue Nr.: Version No 00.01.00

Page: 62/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Table 55: State Machines of diagram\_CommunicationSessionEstablished\_1

State Machine	Comments and Information
RadioConnection_SM	

 $Table~56:~States~of~diagram\_CommunicationSessionEstablished\_1$ 

State	Comments and Information
RadioConnection_SM:ConnecctionLostInAnnouncedRadioHole	Comments: 3.5.4.4 Traceability: 3.5.4.4
RadioConnection_SM:ConnectionLost	
RadioConnection_SM: RadioConnectionLos tTimerExpired	
RadioConnection_SM: SafeRadio_connecte d	

Table 57: Transitions of diagram\_CommunicationSessionEstablished\_1

Source/Target	#	Conditions/Actions	Comments and Information
Source: RadioConnection_SM:ConnecctionL ostInAnnouncedRadioHole Target: RadioConnection_SM:ConnectionLo st	1	Condition: not trainFrontInsideInAnAn nouncedRadioHole Actions: let emit 'sStart_RadioConnectio nLostTimer; emit 'sStartToTryToSetupAS afeRadioConnection; tel	Comments: 3.5.4.4 Traceability: 3.5.4.4
Source: RadioConnection_SM:ConnectionLo st Target: RadioConnection_SM:SafeRadio_co nnected	1	Condition: safeRadioConnectionRe established	Comments: 3.5.4.3 Traceability: 3.5.4.3
Source: RadioConnection_SM:ConnectionLo st Target: RadioConnection_SM:RadioConnect ionLostTimerExpired	2	Condition: radioConnectionLostTi mer_expired	Comments: 3.5.4.2.1, 3.5.4.3 Traceability: 3.5.4.2.1 3.5.4.3

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 63/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Source/Target	#	Conditions/Actions	Comments and Information
Source: RadioConnection_SM: SafeRadio_co nnected Target: RadioConnection_SM: ConnectionLo st	1	Condition: lossOfTheSafeRadioCo nnection and disconnectionHasNotBe enOrdered Actions: let emit 'sStart_RadioConnectio nLostTimer; emit 'sStartToTryToSetupAS afeRadioConnection; tel	Comments: 3.5.4.1 Traceability: 3.5.4.1
Source: RadioConnection_SM: SafeRadio_co nnected Target: RadioConnection_SM: ConnecctionL ostInAnnouncedRadioHole	2	Condition: trainFrontInsideInAnAn nouncedRadioHole and lossOfTheSafeRadioCo nnection Actions: emit 'sConnecctionLostInAn nouncedRadioHole;	

# 3.1.10. managementOfRadioCommunication Operator

# Declared as **public node**

# 3.1.10.1. Comments and Information

 $management Of Radio Communication\ Comments:$ 

- Subset 096, REQ 3.5
- This is the top level node of the "Management of Radio Communication" function.

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Table 58: managementOfRadioCommunication Annotations

Note Name	Attribute	Value
Remark_1	Description	- Name: managementOfRadioCommunication - Description: This is the top level node of the "Management of Radio Communication" function - Copyright Siemens AG, 2013 - Licensed under the EUPL V.1.1 ( http://joinup.ec.europa.eu/software/page/eupl/l icence-eupl) - Gist URL: Cryptography: No - Author(s): Uwe Steinke  The use of this software is limited to non-vital applications. It has not been developed for vital operation purposes and must not be used for applications which may cause harm to people, physical accidents or financial loss.  THEREFORE, NO LIABILITY WILL BE GIVEN FOR SUCH AND ANY OHER KIND OF USE.
	to_c	True

#### 3.1.10.2. Interface

Table 59: Inputs of managementOfRadioCommunication

Name	Туре	Properties	Comments and Information
actualTime	time_Type		
acknowledgementOfTer minationOfCommunicat ionSessionReceived	bool		Comments: 3.5.5.2c) Traceability: 3.5.5.2
orderReceivedFromTra ckside	orderToContactAnRBC_ Type		Comments: 3.5.5.1a) Traceability: 3.5.5.1
orderReceivedFromRBC	orderToContactAnRBC_ Type		Comments: 3.5.3.1 Traceability: 3.5.3.1
orderReceivedFromRad io_InfillUnit	orderToContactAnRBC_ Type		Comments: 3.5.3.2 Traceability: 3.5.3.2
errorConditionRequirin gTerminationDetected	bool		Comments: 3.5.5.1b) Traceability: 3.5.5.1
trainIsRejectedByRBC_ duringStartOfMission	bool		Comments: 3.5.5.1c) Traceability: 3.5.5.1
driverClosesTheDeskdu ringStartOfMission	bool		Comments: 3.5.5.1d) Traceability: 3.5.5.1

Ref. Nr.: UNISIG Subset-026-3 Page: 65/130 Issue Nr.: Version No 00.01.00

3.0.0, Chapter 3.5 "Management of Radio Communication"

Created: 10.04.2013

Name	Туре	Properties	Comments and Information
trainExitedFromAnRBC Area	bool		Comments: 3.5.5.1e) Traceability: 3.5.5.1
endOfMissionIsExecute d	bool		Comments: 3.5.5.1f) Traceability: 3.5.5.1
isInCommunicationSes sionWithAnRIU	bool		Comments: 3.5.5.1f) Traceability: 3.5.5.1
atPowerUp	bool		Comments: 3.5.6.1a) Traceability: 3.5.6.1
atPowerOff	bool		Comments: 3.5.6.2
M_LEVEL	M_LEVEL_Type		Comments: 3.5.6.1b) 7.5.1.65 M_LEVEL Traceability: 3.5.6.1
RadioNetworkID_mem orized	validRadioNetworkID_T ype		Comments: 3.5.6.2
RadioNetworkID_from Driver	validRadioNetworkID_T ype		Comments: 3.5.6.2
RadioNetworkID_fromT rackside	validRadioNetworkID_T ype		Comments: 3.5.6.1c), 3.5.6.2 Traceability: 3.5.6.1 3.5.6.2
afterDriverEntryOfANe wRadioNetworkID	bool		Comments: 3.5.6.1b), 3.5.6.2 Strobe input, activated when the driver sets the Radio Network ID Traceability: 3.5.6.2 3.5.6.1
triggerDecisionThatNoR adioNetworkIDAvailabl e	bool		Comments: 3.5.6.3 Traceability: 3.5.6.3
mobileHWStatus	mobileHWStatus_Type		Comments: Communication status received from the mobile hardware. If valid, designates that this operator is connected to an existing mobile hardware
isPartOfAnOngoingStar tOfMissionProcedure	bool		Comments: 3.5.3.7 Traceability: 3.5.3.7

Ref. Nr.: UNISIG Subset-026-3 Page: 66/130 Issue Nr.: Version No 00.01.00 3.0.0, Chapter 3.5 "Management of

Radio Communication"

Created: 10.04.2013

Name	Туре	Properties	Comments and
- Name	Турс	Troperties -	Information Comments: 3.5.3.7 a)
trainPassesALevelTrans itionBorder	bool		trainPassesALevelTransitionB order with it's front end Traceability: 3.5.3.7
orderToEstablishACom municationSession_fro mOBU	orderToContactAnRBC_ Type		Comments: 3.5.3.7 a) Traceability: 3.5.3.7
orderDoesNotRequestT oContactAnAcceptingR BC	bool		Comments: 3.5.3.7 a) Traceability: 3.5.3.7
trainPassesA_RBC_RBC _border_WithItsFrontE nd	bool		Comments: 3.5.3.7 a) Traceability: 3.5.3.7
systemVersionFromTra cksideSupported	bool		Comments: 3.5.3.8 a) Traceability: 3.5.3.8
systemVersionReceived	bool		Comments: 3.5.3.8 a) Traceability: 3.5.3.8
M_MODE	M_MODE_Type		Comments: 7.5.1.72 M_MODE: Onboard operating mode
atStartOfMission	bool		Comments: Start of Mission 3.5.3.4. a) Traceability: 3.5.3.4
modeChangeHasToBeR eportedToRBC	bool		Comments: 3.5.3.4 c) Traceability: 3.5.3.4
driverHasManuallyChan gedLevel	bool		Comments: 3.5.3.4 d) Traceability: 3.5.3.4
trainFrontReachesEndO fAnnouncedRadioHole	bool		Comments: 3.5.3.4e) Traceability: 3.5.3.4
startOfMissionProcedur eCompleted	bool		Comments: 3.5.3.4 e) Traceability: 3.5.3.4
trainFrontInsideInAnAn nouncedRadioHole	bool		Comments: 3.5.4.4 Traceability: 3.5.4.4

Issue Nr.: Version No 00.01.00 Page: 67/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Name	Туре	Properties	Comments and Information
OBU_hasToEstablishAN ewSession	bool		Comments: 3.5.3.5.2 Traceability: 3.5.3.5.2
startOfMissionProcedur eIsGoingOn	bool		Comments: 3.5.7.5 [1] Traceability: 3.5.7.5
RadioNetworkID_Defau It	validRadioNetworkID_T ype	hidden	Comments: 3.5.6.3 Traceability: 3.5.6.3
connectionStatusTimer Interval	time_Type	hidden	Comments: 3.5.7.2 Traceability: 3.5.7.2

Table 60: Outputs of managementOfRadioCommunication

Name	Туре	Propert	ies	Comments and Information
sendAPositionReport	bool			Comments: 3.5.5.1e) Traceability: 3.5.5.1
mobileHWCmd	mobileHWCmd_Type			Comments: 3.5.6, 3.5.6.3.2, 3.5.6.5, 3.5.6.5: Commands to the mobile hardware Traceability: 3.5.6.3.2 3.5.6.5
memorizeTheLastRadio NetworkID	bool			Comments: 3.5.6.2
actualRadioNetworkID	validRadioNetworkID_T ype			Comments: 3.5.6.2
orderTheRegistrationOf ItsConnectedMobiles	bool			Comments: 3.5.6.1 Traceability: 3.5.6.1
rejectOrderToContactR BC_or_RIU	bool			Comments: 3.5.6.7
InformTheDriverThatN oConnectionWasSetup	bool	default	false	
sendTheMessageInitiati onOfCommunicationSe ssionToTrackside	bool	default	false	Comments: 3.5.3.7 b) Traceability: 3.5.3.7
sendMessage_NoComp atibleVersionSupported	bool	default	false	Comments: 3.5.3.8 b) Traceability: 3.5.3.8

Issue Nr.: Version No 00.01.00 Page: 68/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Name	Туре	Properties		Comments and Information
sendASessionEstablish edReportToTrackside	bool	default	false	Comments: 3.5.3.10 c) 3.5.3.8 a) sSendMessageEstablish edReport to trackside Traceability: 3.5.3.8 3.5.3.10
sendATerminationOfCo mmunicationMessage	bool	default	false	Comments: 3.5.5.2a), 3.5.5.3.1 Traceability: 3.5.5.2
ignoreMessagesFromR BC_exceptAckOfTermin ationOfCommunication Session	bool	default	false	Comments: 3.5.5.3.6
safeRadioConnectionSt atus_toDriver	safeRadioConnectionSt atusValid_Type			Comments: 3.5.7.1 Traceability: 3.5.7.1
sessionSuccessfullyEst ablished	bool	last	false	

# 3.1.10.3. Locals

Table 61: Locals of managementOfRadioCommunication

Name	Туре	Properties		Comments and Information
communicationSession InitiatedByOBU	bool	last	false	
communicationSession InitiatedFromTrackside	bool	last	false	
establishingACommuni cationSessionAborted	bool	last	false	
finalAttemptToSetupTh eSafeRadioConnectionF ailed	bool	last	false	
firstRequestToSetupAS afeRadioConnection	bool	default	false	Comments: 3.5.7.3a), 3.5.7.3b) Traceability: 3.5.7.3
initiateEstablishingNew Session	bool			Comments: 3.5.3.5.2
initiateTermination	bool			
mobileSWCmd	mobileSWCmd_Type	default	cInvalidMobil eSWCmd	
mobileSWStatus	mobileSWStatus_Type	last	cInvalidMobil eSWStatus	
orderReceivedFromTra ckside_loc	orderToContactAnRBC_ Type			
prevSessionTerminated DueToLossOfSafeRadio Connection	bool			

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 69/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Name	Туре	Properties		Comments and Information
requestsToSetupTheSa feRadioConnectionStop ped	bool	default	false	
requestTheSetupOfASa feRadioConnection	bool	default	false	
sessionEstablished	bool	last	false	
sessionStatus	sessionStatus_Type	last	morc_st_inact ive	
sessionTerminated	bool	default	false	
startEstablishingSessio n	bool			
startTerminatingSessio n	bool	default	false	

# 3.1.10.4. Operator Hierarchy

<u>diagram</u>: diagram\_NetworkRegistration

<u>diagram</u>: diagram\_safeRadioConnectionIndication

diagram : diagram\_SessionManagement

state-machine: CommunicationSession\_SM

state: Establishing

diagram: diagram\_Establishing\_1

state: Maintaining

diagram: diagram\_Maintaining\_1

state: NoSession

diagram : diagram\_NoSession\_1

state: Terminating

<u>diagram</u>: diagram\_Terminating\_1

<u>diagram</u>: diagram\_TerminationInitiation

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.10.5. Graphical and Textual Diagrams

# 3.1.10.5.1. View of diagram\_NetworkRegistration (managementOfRadioCommunication)

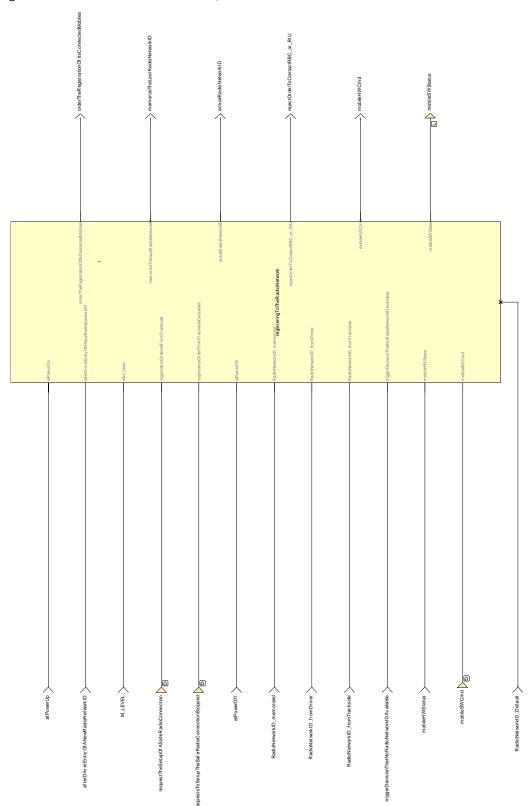


Figure 16: View of diagram\_NetworkRegistration (managementOfRadioCommunication)

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.10.5.2. View of diagram\_safeRadioConnectionIndication (managementOfRadioCommunication)

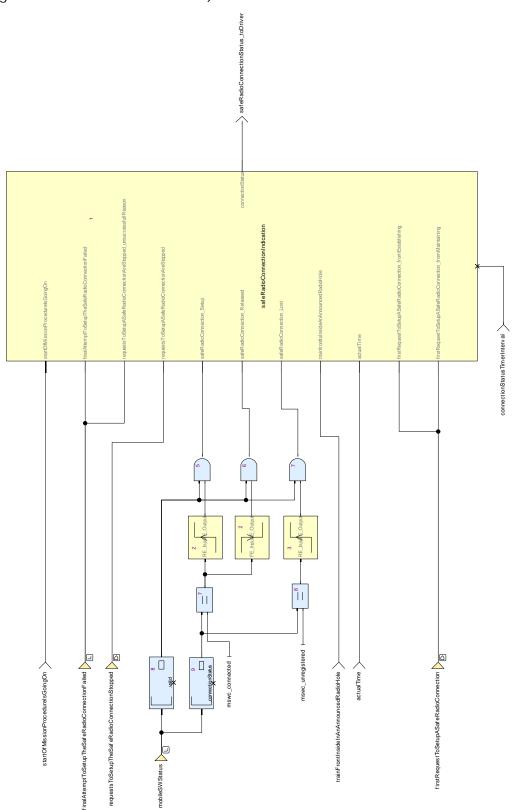


Figure 17: View of diagram\_safeRadioConnectionIndication (managementOfRadioCommunication)

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.10.5.3. View of diagram\_SessionManagement (managementOfRadioCommunication)

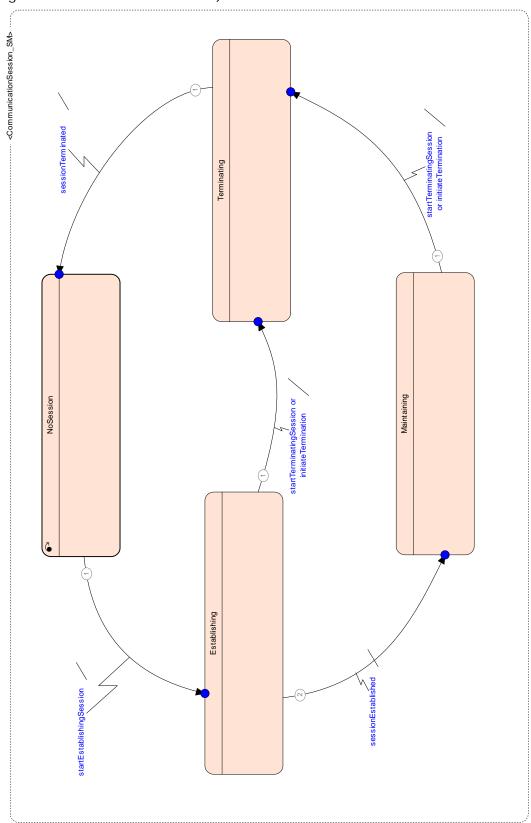


Figure 18: View of diagram\_SessionManagement (managementOfRadioCommunication)

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Table 62: State Machines of diagram\_SessionManagement

State Machine	Comments and Information
CommunicationSession_SM	

Table 63: States of diagram\_SessionManagement

State	Comments and Information
CommunicationSession_SM: Establishing	
CommunicationSession_SM: Maintaining	
CommunicationSession_SM: NoSession	
CommunicationSession_SM: Terminating	

Table 64: Transitions of diagram\_SessionManagement

Source/Target	#	Conditions/Actions	Comments and Information
Source: CommunicationSession_SM: Establis hing Target: CommunicationSession_SM: Termin ating	1	Condition: startTerminatingSessio n or initiateTermination Actions:	
Source: CommunicationSession_SM: Establis hing Target: CommunicationSession_SM: Maintai ning	2	Condition: sessionEstablished Actions:	
Source: CommunicationSession_SM: Maintai ning Target: CommunicationSession_SM: Termin ating	1	Condition: startTerminatingSessio n or initiateTermination Actions:	
Source: CommunicationSession_SM: NoSess ion Target: CommunicationSession_SM: Establis hing	1	Condition: startEstablishingSessio n Actions:	
Source: CommunicationSession_SM:Termin ating Target: CommunicationSession_SM:NoSess ion	1	Condition: sessionTerminated Actions:	

#### 3.1.10.5.4. View of diagram\_Establishing\_1

 $(management Of Radio Communication / Communication Session\_SM: Establishing:) \\$ 

Owner diagram: diagram\_SessionManagement

3.0.0, Chapter 3.5 "Management of

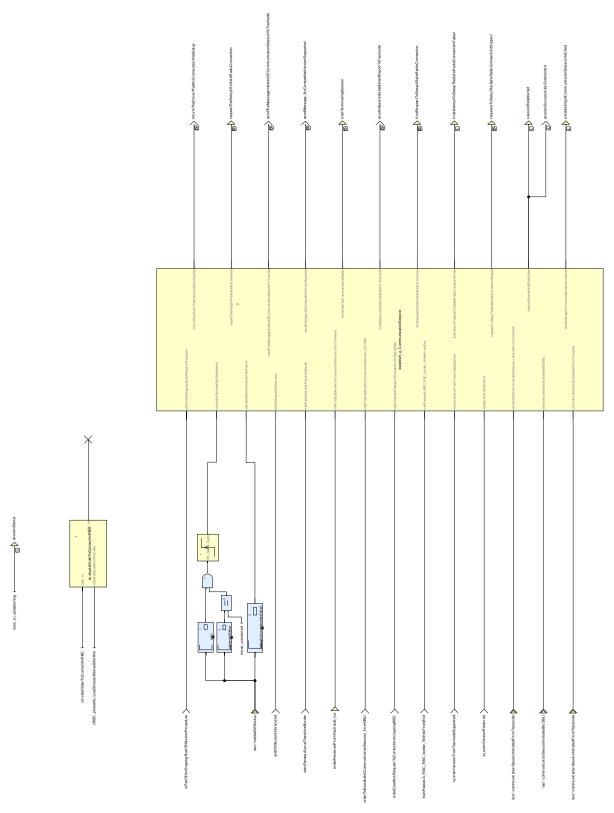


Figure 19: View of diagram\_Establishing\_1 (managementOfRadioCommunication/CommunicationSession\_SM:Establishing:)

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

3.1.10.5.5. View of diagram\_Maintaining\_1 (managementOfRadioCommunication/CommunicationSession\_SM:Maintaining:)

Owner diagram: diagram\_SessionManagement

3.0.0, Chapter 3.5 "Management of

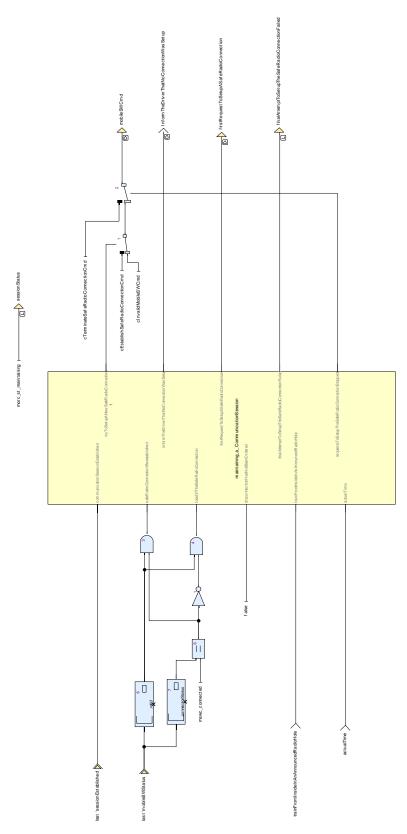


Figure 20: View of diagram\_Maintaining\_1 (managementOfRadioCommunication/CommunicationSession\_SM:Maintaining:)

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

#### 3.1.10.5.6. View of diagram\_NoSession\_1

(managementOfRadioCommunication/CommunicationSession\_SM: NoSession:)

Owner diagram: diagram\_SessionManagement

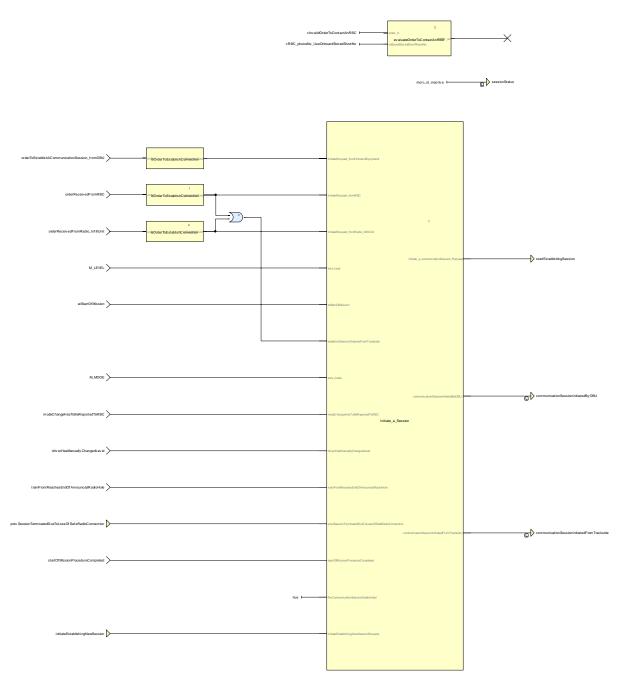


Figure 21: View of diagram\_NoSession\_1 (managementOfRadioCommunication/CommunicationSession\_SM:NoSession:)

## 3.1.10.5.7. View of diagram\_Terminating\_1

 $(management Of Radio Communication / Communication Session\_SM: Terminating:) \\$ 

Owner diagram: diagram\_SessionManagement

3.0.0, Chapter 3.5 "Management of

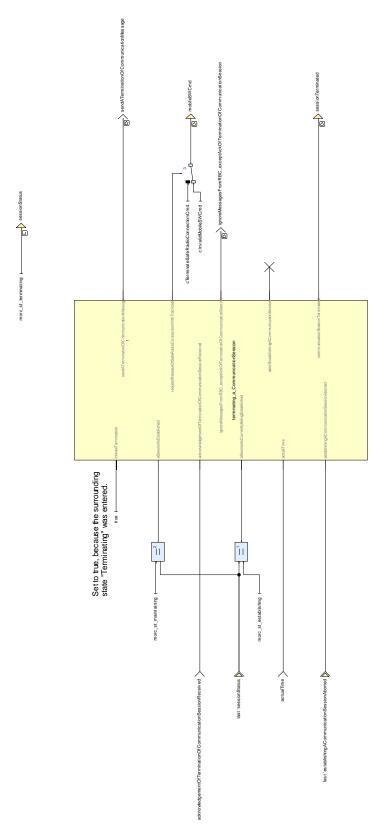


Figure 22: View of diagram\_Terminating\_1 (managementOfRadioCommunication/CommunicationSession\_SM:Terminating:)

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

## 3.1.10.5.8. View of diagram\_TerminationInitiation (managementOfRadioCommunication)

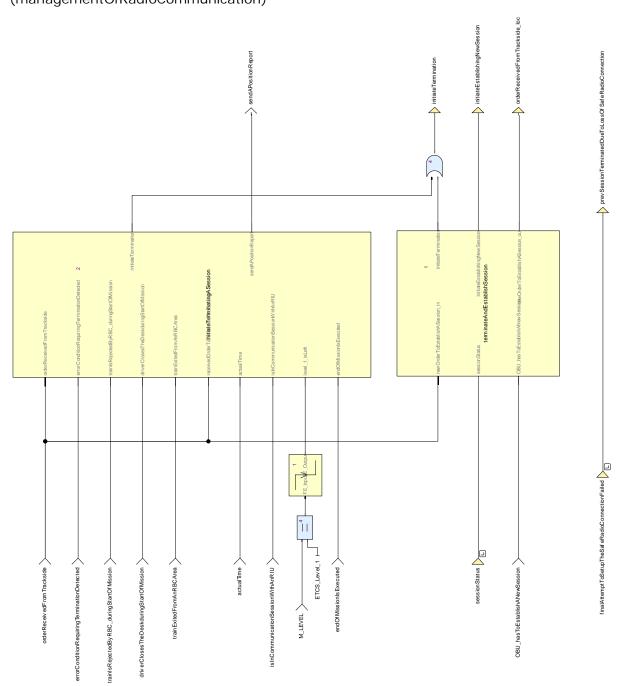


Figure 23: View of diagram\_TerminationInitiation (managementOfRadioCommunication)

## 3.1.11. MoRC\_withSimplified\_IF Operator

Declared as public node

#### 3.1.11.1. Comments and Information

 $MoRC\_with Simplified\_IF\ Comments:$ 

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

• This node serves as a wrapper to the top level operator managementOfRadioCommunication.

- It simplifies the MoRC external interface so that it suits to the SYS/ML model and RT-Tester approach residing on https://github.com/openETCS/model-evaluation/tree/master/model/EA-SysML/.
- This enables the SCADE model to be used as the "System under test" and the SYS/ML model as a test model for automatic test sequence generateion with RT-Tester.

•

Table 65: MoRC\_withSimplified\_IF Annotations

Note Name	Attribute	Value
Remark_1	Description	- Name: managementOfRadioCommunication - Description: This a interface adapter at the top level of the "Management of Radio Communication" function - Copyright Siemens AG, 2013 - Licensed under the EUPL V.1.1 ( http://joinup.ec.europa.eu/software/page/eupl/licence-eupl) - Gist URL: Cryptography: No - Author(s): Uwe Steinke  The use of this software is limited to non-vital applications. It has not been developed for vital operation purposes and must not be used for applications which may cause harm to people, physical accidents or financial loss. THEREFORE, NO LIABILITY WILL BE GIVEN FOR SUCH AND ANY OHER KIND OF USE.
	to_c	True

#### 3.1.11.2. Interface

Table 66: Inputs of MoRC\_withSimplified\_IF

Name	Туре	Comments and Information
messageFromRBC	NID_MESSAGE_Type	Comments: Commands and Messages received from RBC.
safeRadioCommunicati on_setUpEstablished	bool	Comments: Designates that safe radio connection has been established
NID_RBC_ID	NID_RBC_Type	Comments: RBC identifier
radioHole_status	radioHoleStatus_Type	Comments: Designates when the train passes an announced radio hole.
orderFromOnBoard	onBoardOrder_Type	Comments: Commands from the onboard unit to the MoRC function.
systemVersionIsCompa tible	bool	Comments: Designates that the system versions of train and track are compatible.

Issue Nr.: Version No 00.01.00 Page: 81/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Name	Туре	Comments and Information
M_Level	M_LEVEL_Type	Comments: ETCS Level
M_Mode	M_MODE_Type	Comments: ETCS Mode
actualTime	time_Type	Comments: The actual time.

Table 67: Outputs of MoRC\_withSimplified\_IF

Name	Туре	Comments and Information
messageToRBC	NID_MESSAGE_Type	Comments: Commands and message to be sent to the RBC.
safeRadioCommunicati on_requestSetUp	bool	Comments: Requests a safe radio to be established.
safeRadioCommunicati on_releaseSetUp	bool	Comments: Requests a safe radio to be released.
radioComSesssionEsta blished	bool	Comments: Designates that a communication session has been established.

#### 3.1.11.3. Locals

Table 68: Locals of MoRC\_withSimplified\_IF

Name	Туре	Propert	ies	Comments and Information
establishOrderFromRB C	orderToContactAnRBC_ Type			
establishOrderFromTra ckside	orderToContactAnRBC_ Type			
initiateCmd_fromOBU	bool	default	false	
orderReceivedFromRBC	orderToContactAnRBC_ Type	default	cInvalidOrder ToContactAnR BC	
orderReceivedFromTra ckside	orderToContactAnRBC_ Type	default	cInvalidOrder ToContactAnR BC	
RBCAcknowledgesInitia lizationWithSystemVers ion	bool	default	false	
RBCAcknowledgesTerm ination	bool	default	false	
RBCOrdersATransition OverAnotherRBC	bool	default	false	
terminateOrderFromRB C	orderToContactAnRBC_ Type			
terminateOrderFromTr ackside	orderToContactAnRBC_ Type			
transmitCommunicatio nInitMsgToRBC	bool			
transmitCommunicatio nTerminateMsgToRBC	bool			
transmitNoCompatible VersionSupportedMsgT oRBC	bool			

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 82/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Name	Туре	Properties	Comments and Information
transmitSessionEstabli shedMsgToRBC	bool		

#### 3.1.11.4. Operator Hierarchy

<u>diagram</u>: dDecodeOBUOrders

activate if: orderFromOnboardDec

branch: then branch: else

branch: then branch: else

<u>diagram</u>: dDecodeRBCOrders

activate if: MessageFromTrackDec

branch: then branch: else

<u>diagram</u>: dGenerateMessageToRBC

activate if: GenerateMessageToRBC\_If

branch: then branch: else

branch: then branch: else

branch: then branch: else

branch: then branch: else

diagram: dMainSheet

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

#### 3.1.11.5. Graphical and Textual Diagrams

#### 3.1.11.5.1. View of dDecodeOBUOrders (MoRC\_withSimplified\_IF)

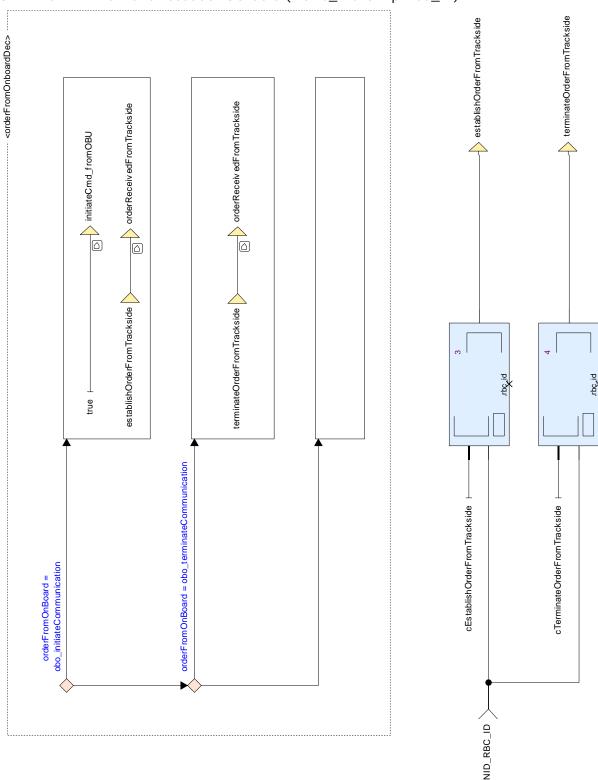


Figure 24: View of dDecodeOBUOrders (MoRC\_withSimplified\_IF)

3.0.0, Chapter 3.5 "Management of

Table 69: Conditional Blocks of dDecodeOBUOrders

Conditional Block	Comments and Information
orderFromOnboardDec	

Table 70: Actions of dDecodeOBUOrders

Conditional Block Action	Comments and Information
orderFromOnboardDec: then	
orderFromOnboardDec:else:then	
orderFromOnboardDec:else:else	

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

#### 3.1.11.5.2. View of dDecodeRBCOrders (MoRC\_withSimplified\_IF)



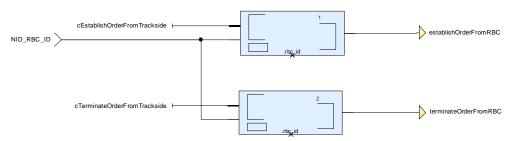


Figure 25: View of dDecodeRBCOrders (MoRC\_withSimplified\_IF)

Table 71: Conditional Blocks of dDecodeRBCOrders

Conditional Block	Comments and Information
MessageFromTrackDec	

Table 72: Actions of dDecodeRBCOrders

Conditional Block Action	Comments and Information	
MessageFromTrackDec: then	Comments: TERM_SESSION_TRACK	
MessageFromTrackDec:else:then	Comments: INIT_SESSION_ORDER	

3.0.0, Chapter 3.5 "Management of

Conditional Block Action	Comments and Information
MessageFromTrackDec:else:else:then	Comments: SYS_VERSION
MessageFromTrackDec:else:else:else:the n	Comments: INIT_SESSION_TRACK
MessageFromTrackDec:else:else:else:else:then	Comments: TERM_ACK
MessageFromTrackDec:else:else:else:else :else:then	Comments: TRANS_OVER_ORDER
MessageFromTrackDec:else:else:else:else :else:else	

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

#### 3.1.11.5.3. View of dGenerateMessageToRBC (MoRC\_withSimplified\_IF)

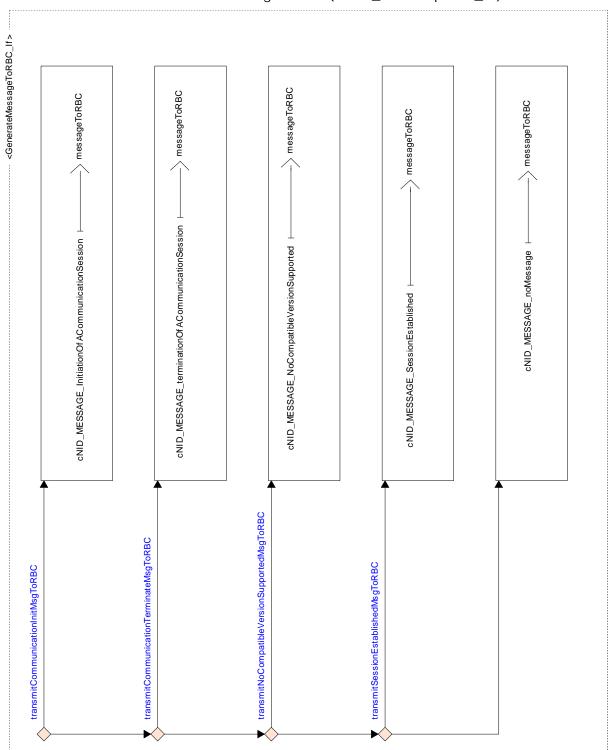


Figure 26: View of dGenerateMessageToRBC (MoRC\_withSimplified\_IF)

Table 73: Conditional Blocks of dGenerateMessageToRBC

Conditional Block	Comments and Information
GenerateMessageToRBC_If	

3.0.0, Chapter 3.5 "Management of

Table 74: Actions of dGenerateMessageToRBC

Conditional Block Action	Comments and Information
GenerateMessageToRBC_If: then	Comments: INIT_SESSION
GenerateMessageToRBC_If:else:then	Comments: TERM_SESSION
GenerateMessageToRBC_If:else:else:then	Comments: SYS_NO_COMP
GenerateMessageToRBC_If:else:else:else:then	Comments: SESSION_ESTABLISHED
GenerateMessageToRBC_If:else:else:else:else:else	Comments: NO_MESSAGE

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

#### 3.1.11.5.4. View of dMainSheet (MoRC\_withSimplified\_IF)

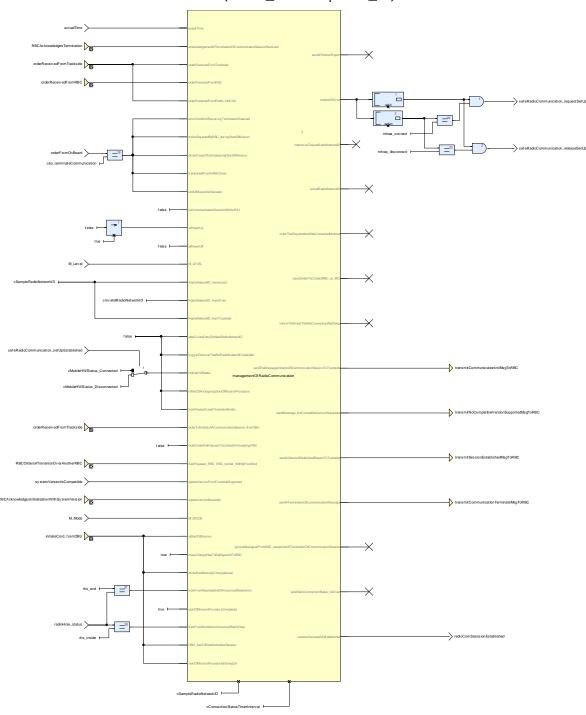


Figure 27: View of dMainSheet (MoRC\_withSimplified\_IF)

#### 3.1.12. radioNetworkMobile Operator

#### Declared as private node

#### 3.1.12.1. Comments and Information

radioNetworkMobile Comments:

Issue Nr.: Version No 00.01.00 Page: 90/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Subset 096, REQ 3.5.6.3.2, 3.5.6.5

• Controls the registration to the radio network for a single mobile terminal.

Table 75: radioNetworkMobile Annotations

Note Name	Attribute	Value
Remark_1	Description	- Name: radioNetworkMobile - Description: Controls the registration to the radio network for a single mobile terminal Copyright Siemens AG, 2013 - Licensed under the EUPL V.1.1 ( http://joinup.ec.europa.eu/software/page/eupl/licence-eupl) - Gist URL: Cryptography: No - Author(s): Uwe Steinke  The use of this software is limited to non-vital applications. It has not been developed for vital operation purposes and must not be used for applications which may cause harm to people, physical accidents or financial loss. THEREFORE, NO LIABILITY WILL BE GIVEN FOR SUCH AND ANY OHER KIND OF USE.
	to_c	True

radioNetworkMobile Traceability:

- 3.5.6.3.2
- 3.5.6.5

#### 3.1.12.2. Interface

Table 76: Inputs of radioNetworkMobile

Name	Type	Comments and Information	
mobileHWStatus	mobileHWStatus_Type	Comments: Communication status received from the mobile hardware. If valid, designates that this operator is connected to an existing mobile hardware	
mobileSWCmd	mobileSWCmd_Type	Comments: Cmd inputs to this operator 3.5.6.5: includes the order to use and occupy this mobile for a (established) communication session Traceability: 3.5.6.5	

Issue Nr.: Version No 00.01.00 Page: 91/130 Ref. Nr.: UNISIG Subset-026-3

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Table 77: Outputs of radioNetworkMobile

Name	Туре	Properties		Comments and Information
mobileHWCmd	mobileHWCmd_Type	default	cInvalidmobil eHWCmd	Comments: 3.5.6, 3.5.6.3.2, 3.5.6.5; 3.5.6.5:Commands to the mobile hardware Traceability: 3.5.6.3.2 3.5.6.5
mobileSWStatus	mobileSWStatus_Type			Comments: SW-Status of the mobile: 3.5.6.5 Indicates, that this mobile is in use for an Established Communication Session Traceability: 3.5.6.5

#### 3.1.12.3. Locals

Table 78: Locals of radioNetworkMobile

Name	Туре	Properties		Comments and Information
hw_available	bool			
hw_cmd	mobileHWAction_Type	default	mhwa_nop	
hw_connectionStatus	mobileHWConnectionSt atus_Type	·		
radioNetworkID	radioNetworkID_Type			
registeredRadioNetwor kID	radioNetworkID_Type			
sw_cmd	mobileSWAction_Type			
sw_connectionStatus	mobileSWConnectionSt atus_Type	default	mswc_unregi stered	

Table 79: Signals of radioNetworkMobile

Name	Comments and Information
sHWConnect	
sHWDisconnect	
sHwRegister	
sHWUnregister	

#### 3.1.12.4. Operator Hierarchy

diagram : diagram\_radioNetworkMobile\_1 <u>diagram</u>: diagram\_radioNetworkMobile\_2 state-machine : MobileHW\_available\_SM

state: InitialState

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

state: MobileHWAvailable

diagram : diagram\_MobileHWAvailable\_1

state-machine: MobileSWConnection\_SM

state: ConnectedToTheRadioNetwork state: ConnectingToTheRadioNetwork

state: EstablishingASession

state: RegisteredToTheRadioNetwork state: RegisteringToTheRadioNetwork

state: SessionEstablished

state: UnregisteredToTheRadioNetwork

<u>diagram</u>: diagram\_MobileHWAvailable\_2

activate if: IfBlock1 branch: then branch: else

branch: then branch: else

branch: then branch: else

branch: then branch: else

state: MobileHWNotAvailable

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 93/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

#### 3.1.12.5. Graphical and Textual Diagrams

#### 3.1.12.5.1. View of diagram\_radioNetworkMobile\_1 (radioNetworkMobile)


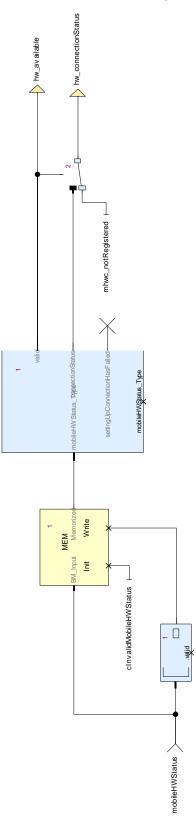



Figure 28: View of diagram\_radioNetworkMobile\_1 (radioNetworkMobile)

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

#### 3.1.12.5.2. View of diagram\_radioNetworkMobile\_2 (radioNetworkMobile)

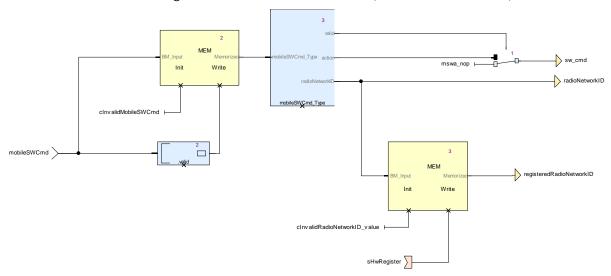

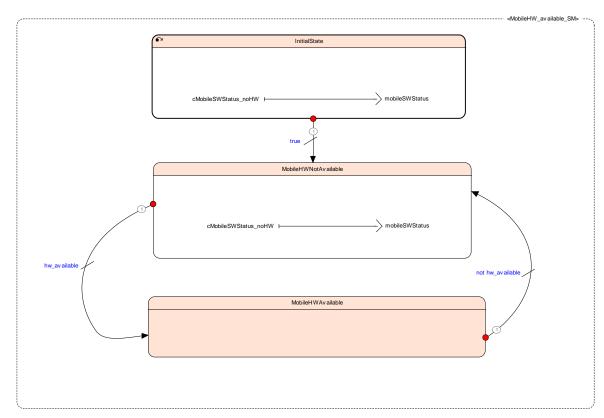

 $Figure\ 29:\ View\ of\ diagram\_radioNetworkMobile\_2\ (radioNetworkMobile)$ 

Table 80: State Machines of diagram\_radioNetworkMobile\_2

State Machine	Comments and Information
MobileHW_available_SM	

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Table 81: States of diagram\_radioNetworkMobile\_2

State	Comments and Information
MobileHW_available_SM:InitialState	
MobileHW_available_SM: MobileHWAvailab le	
MobileHW_available_SM: MobileHWNotAva ilable	

Table 82: Transitions of diagram\_radioNetworkMobile\_2

Source/Target	#	Conditions/Actions	Comments and Information
Source: MobileHW_available_SM:InitialStat e Target: MobileHW_available_SM:MobileHW NotAvailable	1	Condition: true Actions:	
Source: MobileHW_available_SM: MobileHW Available Target: MobileHW_available_SM: MobileHW NotAvailable	1	Condition: not hw_available Actions:	
Source: MobileHW_available_SM: MobileHW NotAvailable Target: MobileHW_available_SM: MobileHW Available	1	Condition: hw_available Actions:	

# 3.1.12.5.3. View of diagram\_MobileHWAvailable\_1 (radioNetworkMobile/MobileHW\_available\_SM: MobileHWAvailable:)

 $Owner\ diagram:\ diagram\_radioNetworkMobile\_2$ 

3.0.0, Chapter 3.5 "Management of

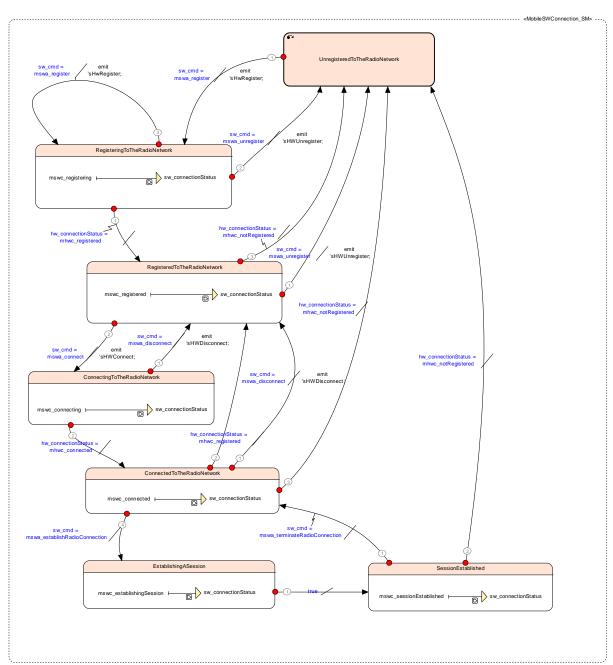


Figure 30: View of diagram\_MobileHWAvailable\_1 (radioNetworkMobile/MobileHW\_available\_SM:MobileHWAvailable:)

Table 83: State Machines of diagram\_MobileHWAvailable\_1

State Machine	Comments and Information
MobileSWConnection_SM	

Table 84: States of diagram\_MobileHWAvailable\_1

State	Comments and Information
MobileSWConnection_SM:ConnectedToTh eRadioNetwork	
MobileSWConnection_SM:ConnectingToTh eRadioNetwork	

3.0.0, Chapter 3.5 "Management of

State	Comments and Information
MobileSWConnection_SM: EstablishingASe ssion	
MobileSWConnection_SM: RegisteredToTh eRadioNetwork	
MobileSWConnection_SM: RegisteringToTh eRadioNetwork	Comments: 3.5.6.3.2: attempts to register to this Radio Network Traceability: 3.5.6.3.2
MobileSWConnection_SM: SessionEstablis hed	
MobileSWConnection_SM: UnregisteredTo TheRadioNetwork	

Table 85: Transitions of diagram\_MobileHWAvailable\_1

Source/Target	#	Conditions/Actions	Comments and Information
Source: MobileSWConnection_SM:Connecte dToTheRadioNetwork Target: MobileSWConnection_SM:Registere dToTheRadioNetwork	1	Condition: sw_cmd = mswa_disconnect Actions: emit 'sHWDisconnect;	
Source: MobileSWConnection_SM:Connecte dToTheRadioNetwork Target: MobileSWConnection_SM:Registere dToTheRadioNetwork	2	Condition: hw_connectionStatus = mhwc_registered	
Source: MobileSWConnection_SM:Connecte dToTheRadioNetwork Target: MobileSWConnection_SM:Unregiste redToTheRadioNetwork	3	Condition: hw_connectionStatus = mhwc_notRegistered	
Source: MobileSWConnection_SM:Connecte dToTheRadioNetwork Target: MobileSWConnection_SM:Establishi ngASession	4	Condition: sw_cmd = mswa_establishRadioC onnection	
Source: MobileSWConnection_SM:Connectin gToTheRadioNetwork Target: MobileSWConnection_SM:Registere dToTheRadioNetwork	1	Condition: sw_cmd = mswa_disconnect Actions: emit 'sHWDisconnect;	
Source: MobileSWConnection_SM:Connectin gToTheRadioNetwork Target: MobileSWConnection_SM:Connecte dToTheRadioNetwork	2	Condition: hw_connectionStatus = mhwc_connected	

3.0.0, Chapter 3.5 "Management of

	1		
Source/Target	#	Conditions/Actions	Comments and Information
Source: MobileSWConnection_SM: Establishi ngASession Target: MobileSWConnection_SM: SessionEs tablished	1	Condition: true	
Source: MobileSWConnection_SM: Registere dToTheRadioNetwork Target: MobileSWConnection_SM: Unregiste redToTheRadioNetwork	1	Condition: sw_cmd = mswa_unregister Actions: emit 'sHWUnregister;	
Source: MobileSWConnection_SM: Registere dToTheRadioNetwork Target: MobileSWConnection_SM: Connectin gToTheRadioNetwork	2	Condition: sw_cmd = mswa_connect Actions: emit 'sHWConnect;	
Source: MobileSWConnection_SM: Registere dToTheRadioNetwork Target: MobileSWConnection_SM: Unregiste redToTheRadioNetwork	3	Condition: hw_connectionStatus = mhwc_notRegistered	
Source: MobileSWConnection_SM: Registerin gToTheRadioNetwork Target: MobileSWConnection_SM: Registere dToTheRadioNetwork	1	Condition: hw_connectionStatus = mhwc_registered	
Source: MobileSWConnection_SM: Registerin gToTheRadioNetwork Target: MobileSWConnection_SM: Unregiste redToTheRadioNetwork	2	Condition: sw_cmd = mswa_unregister Actions: emit 'sHWUnregister;	
Source: MobileSWConnection_SM: Registerin gToTheRadioNetwork Target: MobileSWConnection_SM: Registerin gToTheRadioNetwork	3	Condition: sw_cmd = mswa_register Actions: emit 'sHwRegister;	
Source: MobileSWConnection_SM: SessionEs tablished Target: MobileSWConnection_SM: Connecte dToTheRadioNetwork	1	Condition: sw_cmd = mswa_terminateRadio Connection	
Source: MobileSWConnection_SM: SessionEs tablished Target: MobileSWConnection_SM: Unregiste redToTheRadioNetwork	2	Condition: hw_connectionStatus = mhwc_notRegistered	

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Source/Target	#	Conditions/Actions	Comments and Information
Source: MobileSWConnection_SM: Unregiste redToTheRadioNetwork Target: MobileSWConnection_SM: Registerin gToTheRadioNetwork	1	Condition: sw_cmd = mswa_register Actions: emit 'sHwRegister;	Comments: 3.5.6.3.2: attempts to register to this Radio Network Traceability: 3.5.6.3.2


3.1.12.5.4. View of diagram\_MobileHWAvailable\_2 (radioNetworkMobile/MobileHW\_available\_SM: MobileHWAvailable:)


Owner diagram: diagram\_radioNetworkMobile\_2

Ref. Nr.: UNISIG Subset-026-3 Page: 100/130 Issue Nr.: Version No 00.01.00

3.0.0, Chapter 3.5 "Management of Radio Communication"

Created: 10.04.2013

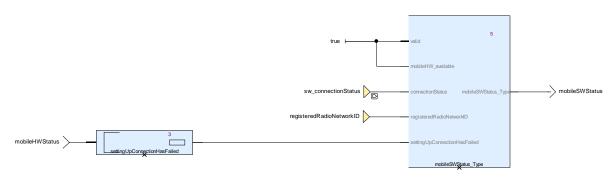

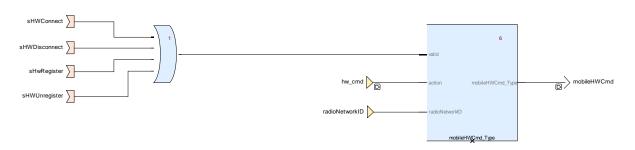

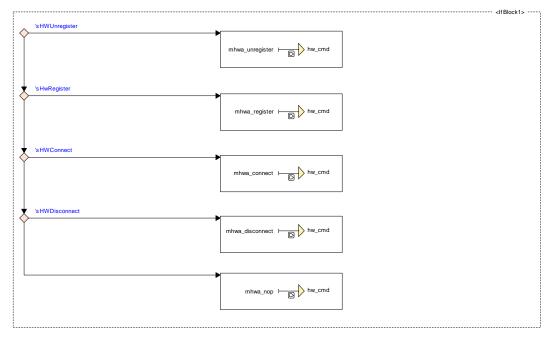


Figure 31: View of diagram\_MobileHWAvailable\_2 (radioNetworkMobile/MobileHW\_available\_SM:MobileHWAvailable:)

Table 86: Conditional Blocks of diagram\_MobileHWAvailable\_2

Conditional Block	Comments and Information
IfBlock1	

Table 87: Actions of diagram\_MobileHWAvailable\_2

Conditional Block Action	Comments and Information
IfBlock1: then	
IfBlock1: else: then	

Issue Nr.: Version No 00.01.00 Page: 101/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Conditional Block Action	Comments and Information
IfBlock1:else:else:then	
IfBlock1:else:else:then	
IfBlock1:else:else:else	

# 3.1.13. RBCTransition\_forSafeRadioConnectionIndication Operator Declared as **private function**

#### 3.1.13.1. Comments and Information

RBCTransition\_forSafeRadioConnectionIndication Comments:

- Subset 096, REQ 3.5.7.6
- Manages the switch of the indication status in the case of an RBC/RBC transition

 ${\it Table~88: RBCTransition\_for Safe Radio Connection Indication~Annotations}$ 

Note Name	Attribute	Value
Remark_1	Description	- Name: RBCTransition_forSafeRadioConnectionIndicatio n - Description: Manages the switch of the indication status in the case of an RBC/RBC transition - Copyright Siemens AG, 2013 - Licensed under the EUPL V.1.1 ( http://joinup.ec.europa.eu/software/page/eupl/licence-eupl) - Gist URL: Cryptography: No - Author(s): Uwe Steinke  The use of this software is limited to non-vital applications. It has not been developed for vital operation purposes and must not be used for applications which may cause harm to people, physical accidents or financial loss. THEREFORE, NO LIABILITY WILL BE GIVEN FOR SUCH AND ANY OHER KIND OF USE.
	to_c	True

RBCTransition\_forSafeRadioConnectionIndication Traceability:

• 3.5.7.6

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

#### 3.1.13.2. Interface

 ${\tt Table~89:~Inputs~of~RBCTransition\_forSafeRadioConnectionIndication}$ 

Name	Туре	Comments and Information
connectionStatus_ofHa ndingOverRBC	safeRadioConnectionSt atusValid_Type	Comments: 3.5.7.1 Traceability: 3.5.7.1
connectionStatus_ofAc ceptingRBC	safeRadioConnectionSt atusValid_Type	Comments: 3.5.7.1 Traceability: 3.5.7.1
acceptingRBC_become sTheSupervisingRBC	bool	Comments: 3.5.7.6a) Traceability: 3.5.7.6
safeRadioConnectionIs ReleasedWithTheHandi ngoverRBC	bool	Comments: 3.5.7.6b) Traceability: 3.5.7.6
minimumSafeRearEnd OfTheTrainHasCrossed TheBorder	bool	Comments: 3.5.7.6b) Traceability: 3.5.7.6

Table 90: Outputs of RBCTransition\_forSafeRadioConnectionIndication

Name	Туре	Comments and Information
connectionStatus	safeRadioConnectionSt atusValid_Type	Comments: 3.5.7.1 Traceability: 3.5.7.1

#### 3.1.13.3. Operator Hierarchy

<u>diagram</u>: diagram\_RBCTransition\_forSafeRadioConnectionIndication\_1


Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 103/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

#### 3.1.13.4. Graphical and Textual Diagrams

## 3.1.13.4.1. View of diagram\_RBCTransition\_forSafeRadioConnectionIndication\_1 (RBCTransition\_forSafeRadioConnectionIndication)

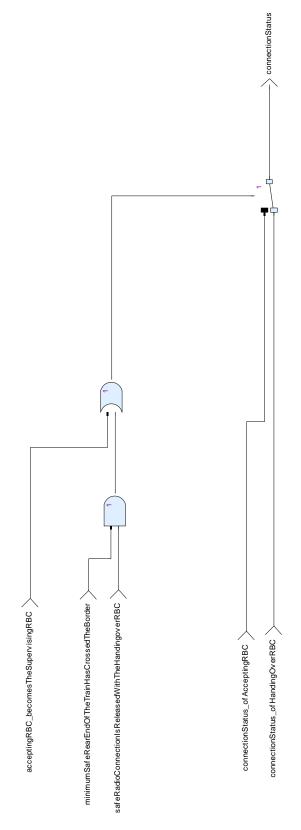

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Figure 32: View of diagram\_RBCTransition\_forSafeRadioConnectionIndication\_1 (RBCTransition\_forSafeRadioConnectionIndication)

#### 3.1.14. registeringToTheRadioNetwork Operator

#### Declared as private node

#### 3.1.14.1. Comments and Information

registeringToTheRadioNetwork Comments:

- Subset 096, REQ 3.5.6
- Implements the registration to the radio network.

Table 91: registeringToTheRadioNetwork Annotations

Note Name	Attribute	Value
Remark_1	Description	- Name: registeringToTheRadioNetwork - Description: Implements the registration to the radio network Copyright Siemens AG, 2013 - Licensed under the EUPL V.1.1 ( http://joinup.ec.europa.eu/software/page/eupl/licence-eupl) - Gist URL: Cryptography: No - Author(s): Uwe Steinke  The use of this software is limited to non-vital applications. It has not been developed for vital operation purposes and must not be used for applications which may cause harm to people, physical accidents or financial loss. THEREFORE, NO LIABILITY WILL BE GIVEN FOR SUCH AND ANY OHER KIND OF USE.
	to_c	True

registeringToTheRadioNetwork Traceability:

- 3.5.6.1
- 3.5.6.2
- 3.5.6.5
- 3.5.6.6
- 3.5.6.7

#### 3.1.14.2. Interface

Table 92: Inputs of registeringToTheRadioNetwork

Name	Туре	Properties	Comments and Information
atPowerUp	bool		Comments: 3.5.6.1a) Traceability: 3.5.6.1

3.0.0, Chapter 3.5 "Management of

Name	Туре	Properties	Comments and Information
afterDriverEntryOfANe wRadioNetworkID	bool		Comments: 3.5.6.1b), 3.5.6.2 Strobe input, activated when the driver sets the Radio Network ID Traceability: 3.5.6.1 3.5.6.2
etcs_level	M_LEVEL_Type		Comments: 3.5.6.1b) Traceability: 3.5.6.1
registrationOrderedFro mTrackside	bool		Comments: 3.5.6.1.c) Traceability: 3.5.6.1
registrationOrderFromT racksideCancelled	bool		Comments: 3.5.6.6 Traceability: 3.5.6.6
atPowerOff	bool		Comments: 3.5.6.2 Traceability: 3.5.6.2
RadioNetworkID_mem orized	validRadioNetworkID_T ype		Comments: 3.5.6.2 Traceability: 3.5.6.2
RadioNetworkID_from Driver	validRadioNetworkID_T ype		Comments: 3.5.6.2 Traceability: 3.5.6.2
RadioNetworkID_fromT rackside	validRadioNetworkID_T ype		Comments: 3.5.6.1c), 3.5.6.2 Traceability: 3.5.6.1 3.5.6.2
triggerDecisionThatNoR adioNetworkIDAvailabl e	bool		Comments: 3.5.6.3 Traceability: 3.5.6.3
mobileHWStatus	mobileHWStatus_Type		Comments: Communicaton status received from the mobile hardware. If valid, designates that this operator is connected to an existing mobile hardware

3.0.0, Chapter 3.5 "Management of

Name	Туре	Properties	Comments and Information
mobileSWCmd	mobileSWCmd_Type		Comments: Cmd inputs to this operator 3.5.6.5: includes the order to use and occupy this mobile for a (established) communication session Traceability: 3.5.6.3 3.5.6.3.2 3.5.6.5
RadioNetworkID_Defau It	validRadioNetworkID_T ype	hidden	Comments: 3.5.6.3 Traceability: 3.5.6.3

Table 93: Outputs of registeringToTheRadioNetwork

Name	Туре	Propert	ies	Comments and Information
orderTheRegistrationOf ItsConnectedMobiles	bool			Comments: 3.5.6.1 Traceability: 3.5.6.1
memorizeTheLastRadio NetworkID	bool			Comments: 3.5.6.2 Traceability: 3.5.6.2
actualRadioNetworkID	validRadioNetworkID_T ype			Comments: 3.5.6.2 Traceability: 3.5.6.2
rejectOrderToContactR BC_or_RIU	bool			Comments: 3.5.6.7 Traceability: 3.5.6.7
mobileHWCmd	mobileHWCmd_Type	default	cInvalidmobil eHWCmd	Comments: 3.5.6, 3.5.6.3.2, 3.5.6.5, 3.5.6.5:Commands to the mobile hardware Traceability: 3.5.6.5
mobileSWStatus	mobileSWStatus_Type			Comments: SW-Status of the mobile: 3.5.6.5 Indicates, that this mobile is in use for an Established Communication Session Traceability: 3.5.6.5

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

#### 3.1.14.3. Locals

Table 94: Locals of registeringToTheRadioNetwork

Name	Туре	Properties		Comments and Information
actualRadioNetworkID_ loc	validRadioNetworkID_T ype			Traceability: 3.5.6.2
mobileSWStatus_loc	mobileSWStatus_Type	last	cInvalidMobil eSWStatus	
newRadioNetworkIDRe ceivedFromTracksideOr Driver	bool			Comments: 3.5.6.3.2 Traceability: 3.5.6.3.2
noValidActualRadioNet workID_available	bool	last	true	Comments: 3.5.6.3 Traceability: 3.5.6.3
orderTheRegistrationOf EachMobile	bool			Comments: 3.5.6.5 Traceability: 3.5.6.1 3.5.6.5 3.5.6.6
startTheRegistrationOf ConnectedMobiles	bool			

#### 3.1.14.4. Operator Hierarchy

diagram : diagram\_registeringToTheRadioNetwork\_1
diagram : diagram\_registeringToTheRadioNetwork\_2

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

### 3.1.14.5. Graphical and Textual Diagrams

## 3.1.14.5.1. View of diagram\_registeringToTheRadioNetwork\_1 (registeringToTheRadioNetwork)

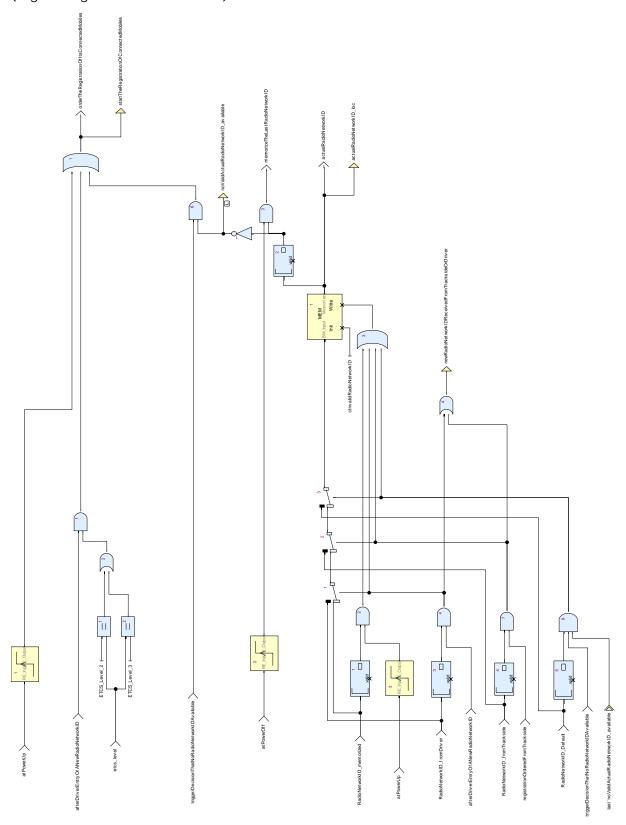


Figure 33: View of diagram\_registeringToTheRadioNetwork\_1 (registeringToTheRadioNetwork)

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.14.5.2. View of diagram\_registeringToTheRadioNetwork\_2 (registeringToTheRadioNetwork)

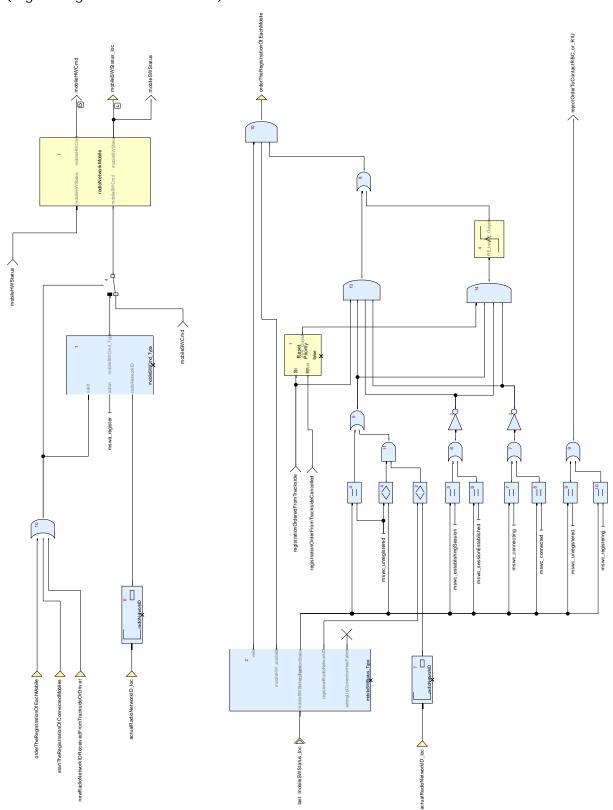


Figure 34: View of diagram\_registeringToTheRadioNetwork\_2 (registeringToTheRadioNetwork)

Issue Nr.: Version No 00.01.00 Page: 110/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.15. safeRadioConnectionIndication Operator

## Declared as **private node**

### 3.1.15.1. Comments and Information

safeRadioConnectionIndication Comments:

- Subset 096, REQ 3.5.7
- Controls the radio connection indication for the driver.

Table 95: safeRadioConnectionIndication Annotations

Note Name	Attribute	Value
Remark_1	Description	- Name: safeRadioConnectionIndication - Description: Controls the radio connection indication for the driver Copyright Siemens AG, 2013 - Licensed under the EUPL V.1.1 ( http://joinup.ec.europa.eu/software/page/eupl/licence-eupl) - Gist URL: Cryptography: No - Author(s): Uwe Steinke  The use of this software is limited to non-vital applications. It has not been developed for vital operation purposes and must not be used for applications which may cause harm to people, physical accidents or financial loss. THEREFORE, NO LIABILITY WILL BE GIVEN FOR SUCH AND ANY OHER KIND OF USE.
	to_c	True

 $safe Radio Connection Indication\ Trace ability:$ 

- 3.5.7.2
- 3.5.7.2.1
- 3.5.7.3
- 3.5.7.5

### 3.1.15.2. Interface

Table 96: Inputs of safeRadioConnectionIndication

Name	Туре	Properties	Comments and Information
startOfMissionProcedur eIsGoingOn	bool		Comments: 3.5.7.5 [1] Traceability: 3.5.7.5
finalAttemptToSetupTh eSafeRadioConnectionF ailed	bool		Comments: 3.5.7.5[1] Traceability: 3.5.7.5

Issue Nr.: Version No 00.01.00 Page: 111/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Name	Туре	Properties	Comments and Information
requestsToSetupASafe RadioConnectionAreSto pped_unsuccessfullRea son	bool		Comments: 3.5.7.5[3], 3.5.7.5[6] Traceability: 3.5.7.5
requestsToSetupASafe RadioConnectionAreSto pped	bool		Comments: 3.5.7.4 Traceability: 3.5.7.4
safeRadioConnection_S etup	bool		Comments: 3.5.7.5[4] Traceability: 3.5.7.5
safeRadioConnection_R eleased	bool		Comments: 3.5.7.5[5] Traceability: 3.5.7.5
safeRadioConnection_L ost	bool		Comments: 3.5.7.5[6], 3.5.7.5[7] Traceability: 3.5.7.5
trainfrontIsInsideAnAn nouncedRadioHole	bool		Comments: 3.5.7.5[7] Traceability: 3.5.7.5
actualTime	time_Type		
firstRequestToSetupAS afeRadioConnection_fr omEstablishing	bool		Comments: 3.5.7.3a) Traceability: 3.5.7.3
firstRequestToSetupAS afeRadioConnection_fr omMaintaining	bool		Comments: 3.5.7.3a) Traceability: 3.5.7.3
connectionStatusTimer Interval	time_Type	hidden	Comments: 3.5.7.2 Traceability: 3.5.7.2

Table 97: Outputs of safeRadioConnectionIndication

Name	Туре	Comments and Information
connectionStatus	safeRadioConnectionSt atusValid_Type	Comments: 3.5.7.1 Traceability: 3.5.7.1

### 3.1.15.3. Locals

Table 98: Locals of safeRadioConnectionIndication

Name	Type	Comments and Information
condition_ID_1	bool	Comments: 3.5.7.5[1] Traceability: 3.5.7.5

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Name	Туре	Comments and Information		
condition_ID_2	bool	Comments: 3.5.7.5[2] Traceability: 3.5.7.5		
condition_ID_3	bool	Comments: 3.5.7.5[3] Traceability: 3.5.7.5		
condition_ID_4	bool	Comments: 3.5.7.5[4] Traceability: 3.5.7.5		
condition_ID_5	bool	Comments: 3.5.7.5[5] Traceability: 3.5.7.5		
condition_ID_6	bool	Comments: 3.5.7.5[6] Traceability: 3.5.7.5		
condition_ID_7	bool	Comments: 3.5.7.5[7] Traceability: 3.5.7.5		
connectionStatus_loc	safeRadioConnectionSt atus_Type			
connectionStatusTimer Expired	bool	Comments: 3.5.7.5[2] Traceability: 3.5.7.5		

## 3.1.15.4. Operator Hierarchy

 $\underline{diagram}: diagram\_safeRadioConnectionIndication\_1$ 

state-machine : connectionStatus\_SM
 state : ConnectionLost\_SetupFailed

state : ConnectionUp state : NoConnection

diagram : diagram\_safeRadioConnectionIndication\_2
diagram : diagram\_safeRadioConnectionIndication\_3

Page: 113/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.15.5. Graphical and Textual Diagrams

# 3.1.15.5.1. View of diagram\_safeRadioConnectionIndication\_1 (safeRadioConnectionIndication)

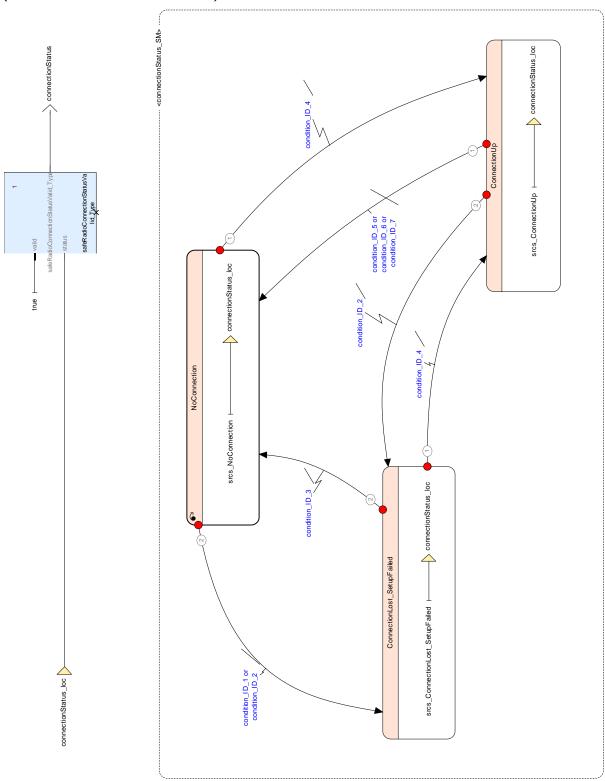


Figure 35: View of diagram\_safeRadioConnectionIndication\_1 (safeRadioConnectionIndication)

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Table 99: State Machines of diagram\_safeRadioConnectionIndication\_1

State Machine	Comments and Information
connectionStatus_SM	Comments: 3.5.7.1 Traceability: 3.5.7.1

Table 100: States of diagram\_safeRadioConnectionIndication\_1

State	Comments and Information
connectionStatus_SM:ConnectionLost_Set upFailed	
connectionStatus_SM:ConnectionUp	
connectionStatus_SM: NoConnection	

Table 101: Transitions of diagram\_safeRadioConnectionIndication\_1

Source/Target	#	Conditions/Actions	Comments and Information	
Source: connectionStatus_SM:ConnectionLo st_SetupFailed Target: connectionStatus_SM:ConnectionU p	1	Condition: condition_ID_4		
Source: connectionStatus_SM:ConnectionLo st_SetupFailed Target: connectionStatus_SM:NoConnectio n	2	Condition: condition_ID_3		
Source: connectionStatus_SM:ConnectionU p Target: connectionStatus_SM:NoConnectio n	1	Condition: condition_ID_5 or condition_ID_6 or condition_ID_7		
Source: connectionStatus_SM:ConnectionU p Target: connectionStatus_SM:ConnectionLo st_SetupFailed	2	Condition: condition_ID_2		
Source: connectionStatus_SM: NoConnection n Target: connectionStatus_SM: ConnectionU p	1	Condition: condition_ID_4		
Source: connectionStatus_SM: NoConnectio n Target: connectionStatus_SM: ConnectionLo st_SetupFailed	2	Condition: condition_ID_1 or condition_ID_2		

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.15.5.2. View of diagram\_safeRadioConnectionIndication\_2 (safeRadioConnectionIndication)

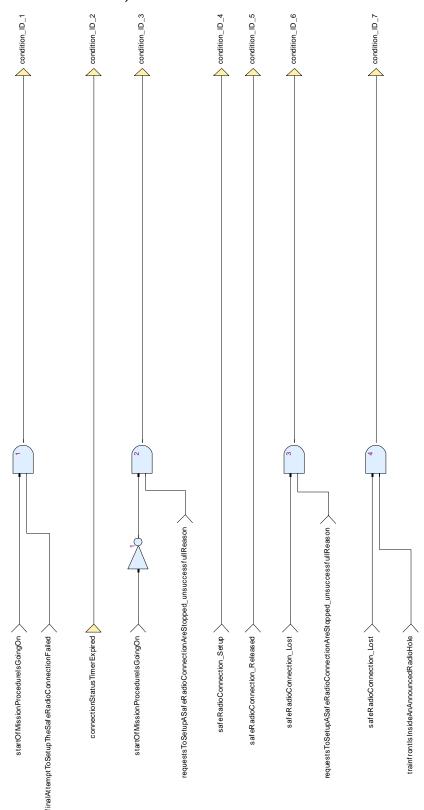


Figure 36: View of diagram\_safeRadioConnectionIndication\_2 (safeRadioConnectionIndication)

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.15.5.3. View of diagram\_safeRadioConnectionIndication\_3 (safeRadioConnectionIndication)

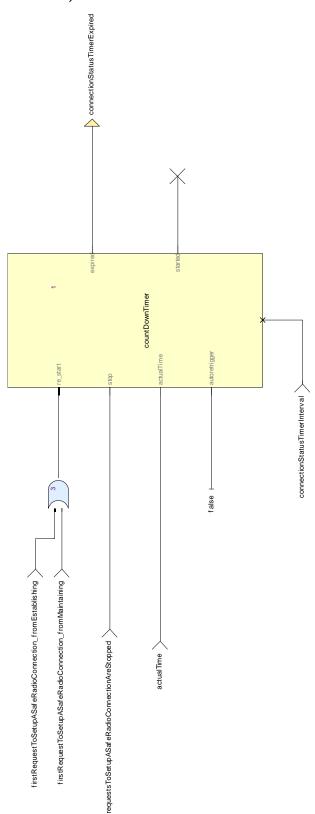


Figure 37: View of diagram\_safeRadioConnectionIndication\_3 (safeRadioConnectionIndication)

26-3 Issue Nr.: Version No 00.01.00

Page: 117/130

Ref. Nr.: UNISIG Subset-026-3 3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

## 3.1.16. terminateAndEstablishSession Operator

### Declared as private node

#### 3.1.16.1. Comments and Information

terminateAndEstablishSession Comments:

- Subset 096, REQ 3.5.3.5.2
- Determines, if an establishing or established session has to be terminated due to a new order that request a session with a different RBC.
- Initiates the termination, waits til the termination is achieved and initiates the new session.

Table 102: terminateAndEstablishSession Annotations

Note Name	Attribute	Value
Remark_1	Description	<ul> <li>Name: terminateAndEstablishSession</li> <li>Description: Terminates the actual session and establishes a new one, if required.</li> <li>Copyright Siemens AG, 2013</li> <li>Licensed under the EUPL V.1.1 ( http://joinup.ec.europa.eu/software/page/eupl/licence-eupl)</li> <li>Gist URL:</li> <li>Cryptography: No</li> <li>Author(s): Uwe Steinke</li> <li>The use of this software is limited to non-vital applications.</li> <li>It has not been developed for vital operation purposes and must not be used for applications which may cause harm to people, physical accidents or financial loss.</li> <li>THEREFORE, NO LIABILITY WILL BE GIVEN FOR SUCH AND ANY OHER KIND OF USE.</li> </ul>
	to_c	True

terminateAndEstablishSession Traceability:

• 3.5.3.5.2

#### 3.1.16.2. Interface

Table 103: Inputs of terminateAndEstablishSession

Name	Туре	Comments and Information
newOrderToEstablishA Session_in	orderToContactAnRBC_ Type	Comments: 3.5.5.1a) Traceability: 3.5.5.1
sessionStatus	sessionStatus_Type	
OBU_hasToEstablishAN ewSession	bool	Comments: 3.5.3.5.2 Traceability: 3.5.3.5.2

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Table 104: Outputs of terminateAndEstablishSession

Name	Туре	Properties		Comments and Information
initiateTermination	bool			
initiateEstablishingNew Session	bool	default	false	
newOrderToEstablishA Session_out	orderToContactAnRBC_ Type			Comments: 3.5.5.1a) Traceability: 3.5.5.1

#### 3.1.16.3. Locals

Table 105: Locals of terminateAndEstablishSession

Name	Туре	Comments and Information
ActualSessionIsInactiv e	bool	
storedOrder	orderToContactAnRBC_ Type	
terminateActualSession	bool	

## 3.1.16.4. Operator Hierarchy

<u>diagram</u>: diagram\_terminateAndEstablishSession\_1

state-machine: SM1

state : EstablishNewSession state : NoTerminationInProgress state : TerminationInProgress Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 119/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

## 3.1.16.5. Graphical and Textual Diagrams

# 3.1.16.5.1. View of diagram\_terminateAndEstablishSession\_1 (terminateAndEstablishSession)

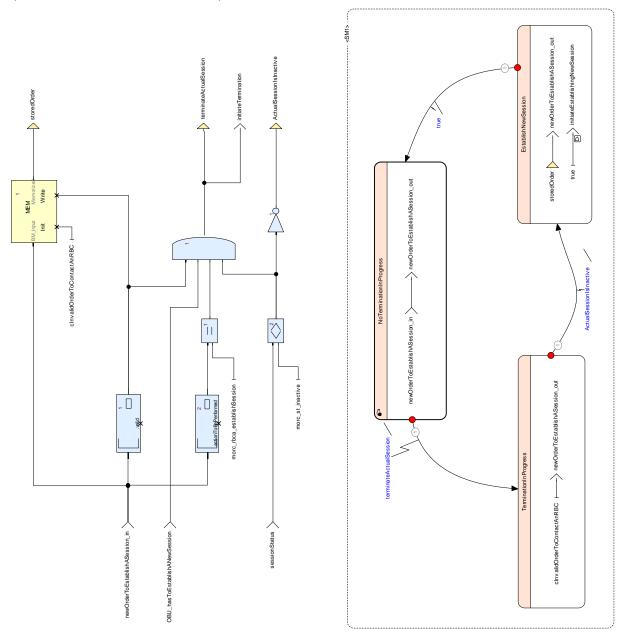


Figure 38: View of diagram\_terminateAndEstablishSession\_1 (terminateAndEstablishSession)

Table 106: State Machines of diagram\_terminateAndEstablishSession\_1

State Machine	Comments and Information
SM1	

Table 107: States of diagram\_terminateAndEstablishSession\_1

State	Comments and Information
SM1: EstablishNewSession	
SM1: NoTerminationInProgress	

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

State	Comments and Information
SM1:TerminationInProgress	

Table 108: Transitions of diagram\_terminateAndEstablishSession\_1

Source/Target	#	Conditions/Actions	Comments and Information
Source: SM1: EstablishNewSession Target: SM1: NoTerminationInProgress	1	Condition: true	
Source: SM1: NoTerminationInProgress Target: SM1: TerminationInProgress	1	Condition: terminateActualSession	
Source: SM1:TerminationInProgress Target: SM1:EstablishNewSession	1	Condition: ActualSessionIsInactiv e	

# 3.1.17. terminating\_a\_CommunicationSession Operator

# Declared as **private node**

### 3.1.17.1. Comments and Information

terminating\_a\_CommunicationSession Comments:

- Subset 096, REQ 3.5.5.2
- Implements the termination of a communication session.

Table 109: terminating\_a\_CommunicationSession Annotations

Note Name	Attribute	Value
Remark_1	Description	<ul> <li>Name: terminating_a_CommunicationSession</li> <li>Description: Terminates the communication session.</li> <li>Copyright Siemens AG, 2013</li> <li>Licensed under the EUPL V.1.1 ( http://joinup.ec.europa.eu/software/page/eupl/licence-eupl)</li> <li>Gist URL:</li> <li>Cryptography: No</li> <li>Author(s): Uwe Steinke</li> <li>The use of this software is limited to non-vital applications.</li> <li>It has not been developed for vital operation purposes and must not be used for applications which may cause harm to people, physical accidents or financial loss.</li> <li>THEREFORE, NO LIABILITY WILL BE GIVEN FOR SUCH AND ANY OHER KIND OF USE.</li> </ul>
	to_c	True

terminating\_a\_CommunicationSession Traceability:

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

3.5.5.23.5.5.3

### 3.1.17.2. Interface

Table 110: Inputs of terminating\_a\_CommunicationSession

Name	Туре	Comments and Information
initiateTermination	bool	Comments: Intended to be fed by "initiateTerminatingASession"
aSessionIsEstablished	bool	Comments: 3.5.5.2 Traceability: 3.5.5.2
acknowledgementOfTer minationOfCommunicat ionSessionReceived		Comments: 3.5.5.2c) Traceability: 3.5.5.2
aSessionIsCurrentlyBei ngEstablished	bool	Comments: 3.5.5.7 Traceability: 3.5.5.7
actualTime	time_Type	
establishingACommuni cationSessionAborted	bool	Comments: 3.5.5.7 Intended to be fed by "Establishing_a_CommunicationSession". Traceability: 3.5.5.7

Table 111: Outputs of terminating\_a\_CommunicationSession

Name	Туре	Properties		Comments and Information
sendATerminationOfCo mmunicationMessage	bool			Comments: 3.5.5.2a), 3.5.5.3.1 Traceability: 3.5.5.2 3.5.5.3.1
requestReleaseOfSafeR adioConnectionWithTra ckside	bool			Comments: 3.5.5.2c) Traceability: 3.5.5.2
ignoreMessagesFromR BC_exceptAckOfTermin ationOfCommunication Session	bool	default	false	Comments: 3.5.5.3.6 Traceability: 3.5.5.3.1
abortEstablishingACom municationSession	bool			Comments: 3.5.5.7 Traceability: 3.5.5.7
communicationSession Terminated	bool	default	false	

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

### 3.1.17.3. Locals

Table 112: Locals of terminating\_a\_CommunicationSession

Name	Туре	Propert	ies	Comments and Information
considerTheCommunic ationSessionTerminate d	bool	default	false	Comments: 3.5.5.3.2 Traceability: 3.5.5.3.1 3.5.5.3.2
initiateTerminationOfEs tablishedSession	bool			Comments: 3.5.5.2 Traceability: 3.5.5.2 3.5.5.7
initiateTerminationOfEs tablishingSession	bool			Comments: 3.5.5.7 Traceability: 3.5.5.7

Table 113: Signals of terminating\_a\_CommunicationSession

Name	Comments and Information
sAbortEstablishingACommuni cationSession	
sRequestReleaseOfSafeRadio ConnectionWithTrackside	Comments: 3.5.5.2c) Traceability: 3.5.5.2
sSendATerminationOfCommu nicationMessage	Comments: 3.5.5.2a), 3.5.5.3.1 Traceability: 3.5.5.2 3.5.5.3.1

## 3.1.17.4. Operator Hierarchy

state: CommunicationSession\_Terminated

state: Establishing A Communication Session Aborted

state : Idle

state: WaitForAcknowledgementMessage

diagram: diagram\_WaitForAcknowledgementMessage\_1

Page: 123/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

# 3.1.17.5. Graphical and Textual Diagrams

# 3.1.17.5.1. View of diagram\_terminating\_a\_CommunicationSession\_1 (terminating\_a\_CommunicationSession)

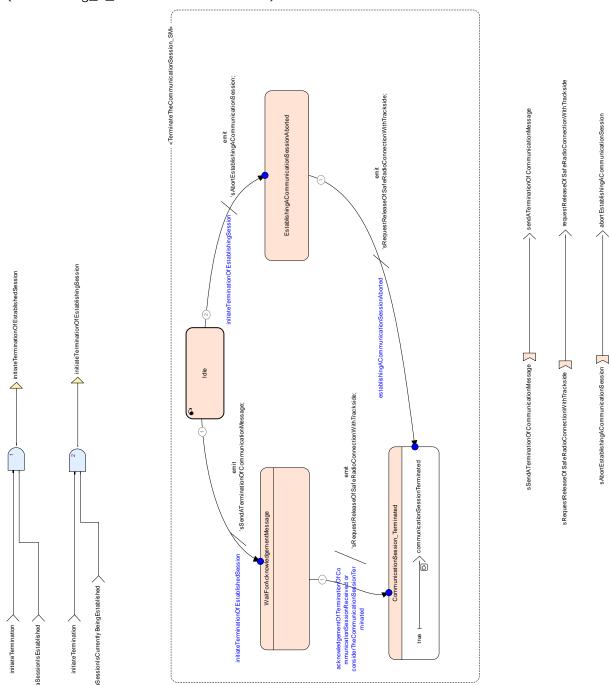


Figure 39: View of diagram\_terminating\_a\_CommunicationSession\_1 (terminating\_a\_CommunicationSession)

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 124/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Table 114: State Machines of diagram\_terminating\_a\_CommunicationSession\_1

State Machine	Comments and Information
TerminateTheCommunication Session_SM	Comments: 3.5.5.2 Traceability: 3.5.5.2

Table 115: States of diagram\_terminating\_a\_CommunicationSession\_1

State	Comments and Information
TerminateTheCommunicationSession_SM: CommunicationSession_Terminated	Comments: 3.5.5.3.2, Traceability: 3.5.5.3.1 3.5.5.3.2
TerminateTheCommunicationSession_SM: EstablishingACommunicationSessionAbort ed	Comments: 3.5.5.7 Traceability: 3.5.5.7
TerminateTheCommunicationSession_SM: Idle	
TerminateTheCommunicationSession_SM: WaitForAcknowledgementMessage	Traceability: 3.5.5.3.1 3.5.5.6

 $Table\ 116:\ Transitions\ of\ diagram\_terminating\_a\_CommunicationSession\_1$ 

Source/Target	#	Conditions/Actions	Comments and Information
Source: TerminateTheCommunicationSessio n_SM:EstablishingACommunication SessionAborted Target: TerminateTheCommunicationSessio n_SM:CommunicationSession_Term inated	1	Condition: establishingACommuni cationSessionAborted Actions: emit 'sRequestReleaseOfSaf eRadioConnectionWith Trackside;	Comments: 3.5.5.7 Traceability: 3.5.5.7
Source: TerminateTheCommunicationSessio n_SM: Idle Target: TerminateTheCommunicationSessio n_SM: WaitForAcknowledgementMe ssage	1	Condition: initiateTerminationOfEs tablishedSession Actions: emit 'sSendATerminationOf CommunicationMessag e;	Comments: 3.5.5.2a) Traceability: 3.5.5.2
Source: TerminateTheCommunicationSessio n_SM: Idle Target: TerminateTheCommunicationSessio n_SM: EstablishingACommunication SessionAborted	2	Condition: initiateTerminationOfEs tablishingSession Actions: emit 'sAbortEstablishingACo mmunicationSession;	Comments: 3.5.5.7 Traceability: 3.5.5.7

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Source/Target	#	Conditions/Actions	Comments and Information
Source: TerminateTheCommunicationSessio n_SM:WaitForAcknowledgementMe ssage Target: TerminateTheCommunicationSessio n_SM:CommunicationSession_Term inated	1	Condition: acknowledgementOfTer minationOfCommunicat ionSessionReceived or considerTheCommunic ationSessionTerminate d Actions: emit 'sRequestReleaseOfSaf eRadioConnectionWith Trackside;	Comments: 3.5.5.2c), 3.5.5.3.2 Traceability: 3.5.5.2 3.5.5.3.1 3.5.5.3.2

3.1.17.5.2. View of diagram\_WaitForAcknowledgementMessage\_1 (terminating\_a\_CommunicationSession/TerminateTheCommunicationSession\_SM:WaitForAcknowledgementMessage:)

Owner diagram: diagram\_terminating\_a\_CommunicationSession\_1

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

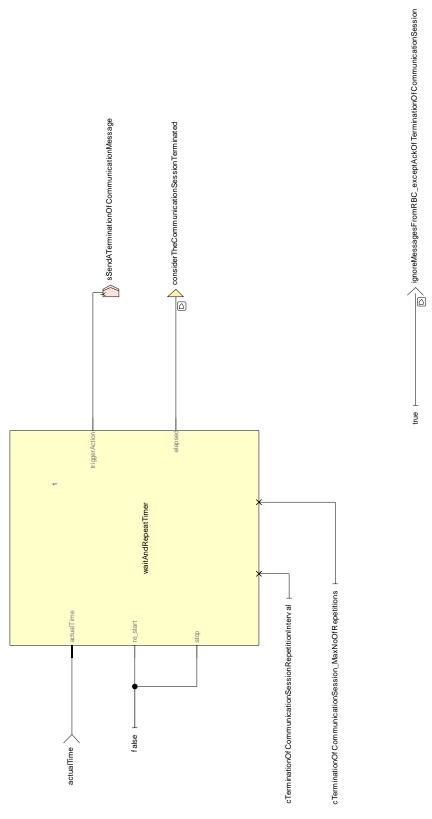


Figure 40: View of diagram\_WaitForAcknowledgementMessage\_1 (terminating\_a\_CommunicationSession/TerminateTheCommunicationSession\_SM:WaitForAcknowle dgementMessage:)

Ref. Nr.: UNISIG Subset-026-3 Issue Nr.: Version No 00.01.00 Page: 127/130

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

## 3.1.18. waitAndRepeatTimer Operator

### Declared as private node

#### 3.1.18.1. Comments and Information

waitAndRepeatTimer Comments:

- Implements a timer for a triggering an action a limited number of times in configured intervals.
- Repeats triggerAction maxNoOfRepetition times in intervals of repeatInterval.
- triggerAction is activated at the beginning of each interval.
- elapsed is activated after the last interval.

Table 117: waitAndRepeatTimer Annotations

Note Name	Attribute	Value
Remark_1	Description	- Name: waitAndRepeatTimer - Description: Implements a timer for a triggering an action a limited number of times in configured intervals - Copyright Siemens AG, 2013 - Licensed under the EUPL V.1.1 ( http://joinup.ec.europa.eu/software/page/eupl/licence-eupl) - Gist URL: Cryptography: No - Author(s): Uwe Steinke  The use of this software is limited to non-vital applications. It has not been developed for vital operation purposes and must not be used for applications which may cause harm to people, physical accidents or financial loss. THEREFORE, NO LIABILITY WILL BE GIVEN FOR SUCH AND ANY OHER KIND OF USE.
to_c	to_c	True

#### 3.1.18.2. Interface

Table 118: Inputs of waitAndRepeatTimer

Name	Туре	Properties	Comments and Information
actualTime	time_Type		
re_start	bool		
stop	bool		
repeatInterval	time_Type	hidden	
maxNoOfRepetitions	int	hidden	

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

Table 119: Outputs of waitAndRepeatTimer

Name	Туре	Comments and Information
triggerAction	bool	
elapsed	bool	

3.1.18.3. Operator Hierarchy

 $\underline{diagram}: diagram\_waitAndRepeatTimer\_1$ 

3.0.0, Chapter 3.5 "Management of

Radio Communication" Created: 10.04.2013

## 3.1.18.4. Graphical and Textual Diagrams

### 3.1.18.4.1. View of diagram\_waitAndRepeatTimer\_1 (waitAndRepeatTimer)

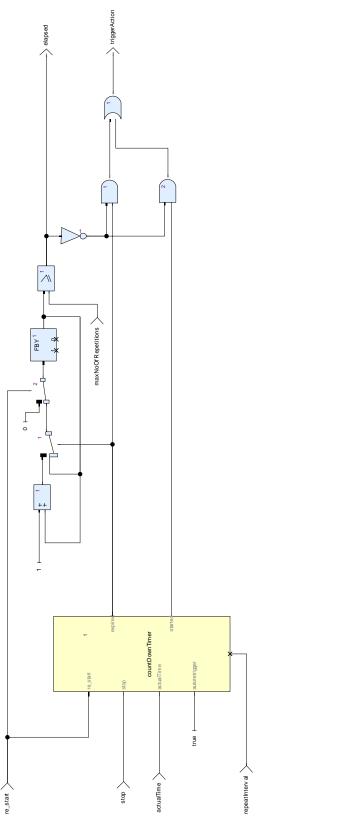


Figure 41: View of diagram\_waitAndRepeatTimer\_1 (waitAndRepeatTimer)

Ref. Nr.: UNISIG Subset-026-3 Page: 130/130 Issue Nr.: Version No 00.01.00 3.0.0, Chapter 3.5 "Management of

Radio Communication"

Created: 10.04.2013

End of document.