BPSK system

1 Introduction

This document describes the simulation BPSK system in back-to-back configuration.

2 Functional Description

A simplified diagram of the system being simulated is presented in the Figure 1. The system simulated takes a random binary string and encodes it in an optical bandpass signal, signal that afterwards is decoded in order to re-obtain the original binary string.

The decoding of the optical signal is accomplished by an homodyne receiver, which combines the signal with a local oscillator with a user-determined phase. The homodyne receiver block output is then fed into a block that compares it with the original binary string and computes the Bit Error Rate (BER) along with it's upper and lower bounds for a certain user defined confidence level.



Figure 1: Overview of the BPSK system being simulated.

System Blocks	netxpto Blocks
BPSK Transmitter	MQamTransmitter
BPSK Receiver	HomodyneReceiver
BER Estimator	BitErrorRate

3 System Input Parameters

This system takes into account the following input parameters:

System	Description
Parameters	
NumberOfBits	Gives the number of bits to be simulated
BitPeriod	Sets the time between adjacent bits
SamplesPerSymbol	Establishes the number of samples each bit in the string is given ¹
pLength	PRBS pattern length
iqAmplitudesVal-	Sets the state constellation
ues	
outOpti-	Sets the optical power, in units of dBm, at the transmitter output
calPower_dBm	
LOoutOpti-	Sets the optical power, in units of dBm, of the local oscillator used in
$calPower_dBm$	the homodyne detector
LocalOscillator-	Sets the initial phase of the local oscillator used in the homodyne
Phase	detector
TransferMatrix	Sets the transfer matrix of the beam splitter used in the homodyne
	detector
Responsivity	Sets the responsivity of the photodiodes used in the homodyne
	detector
Amplification	Sets the amplification of the trans-impedance amplifier used in the
	homodyne detector
NoiseAmplitude	Sets the amplitude of the gaussian thermal noise added in the
	homodyne detector
Delay	Sets the delay factor of the homodyne detector
PosReferenceValue	Set the positive and negative reference values for the bit decision block
NegReferenceValue	
Confidence	Sets the confidence interval for the calculated QBER
MidReportSize	Sets the number of bits between generated QBER mid-reports

4 Inputs

This system takes no inputs.

5 Outputs

This system outputs the following objects:

- Signals:
 - Initial Binary String; (MQAM $_{\! 0})$
 - Optical Signal with coded Binary String; (\mathbf{S}_{00})
 - Decoded Binary String; (S₀₁)
- Other:
 - Bit Error Rate report in the form of a .txt file. (BER.txt)

6 Simulation Results

We consider the following scenarios:

• 6.1 Basic BPSK back to back with thermal noise.

 $^{^{1}}Simulation time resolution = \frac{BitPeriod}{SamplesPerSymbol}$

6.1 BPSK with thermal noise

The following results were obtained from the simulation using the following input parameters:

```
NumberOfBits=
                                   1000
       SamplesPerSymbol =
                                   16
                    pLength=
                                   5
                                   \{ \{ 1, 0 \}, \{ -1, 0 \} \}
      iqAmplitudesValues=
   outOpticalPower\_dBm =
LOoutOpticalPower\_dBm =
                                   -10
     Local Oscillator Phase =
                                   0
                                   \{ \{ 1/\operatorname{sqrt}(2), 1/\operatorname{sqrt}(2), 1/\operatorname{sqrt}(2), -1/\operatorname{sqrt}(2) \} \}
            TransferMatrix =
               Responsivity=
              Amplification=
                                   1e6
           Noise Amplitude =
                                   15.397586549153788\\
                       Delay=
                                   9
```

The system took the binary string presented in Figure 2 and encoded it into the optical signal in Figure 3. Notice the BPSK constelation of the signal, presented in Figure 4.

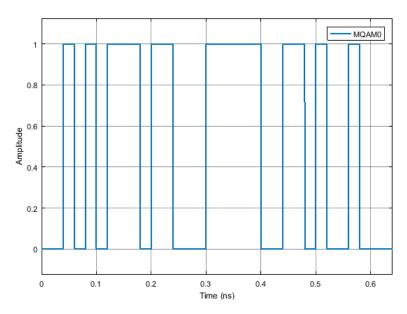


Figure 2: Sent binary key.

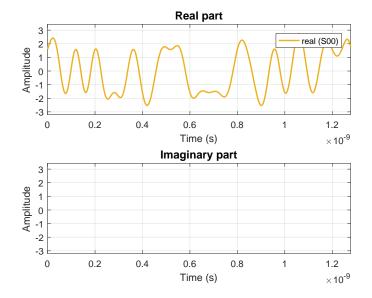


Figure 3: Sent signal.

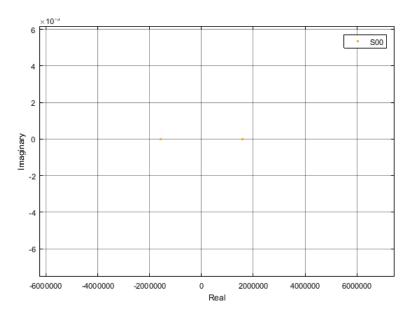


Figure 4: Constellation of the sent signal.

Homodyne detection is then performed, using to that effect the local oscillator signal presented in Figure 5. Figures 6 and 7 show the addition of noise to the signal.

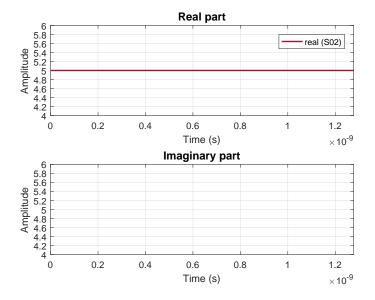


Figure 5: Homodyne receiver internal signal: local oscillator used for Homodyne detection.

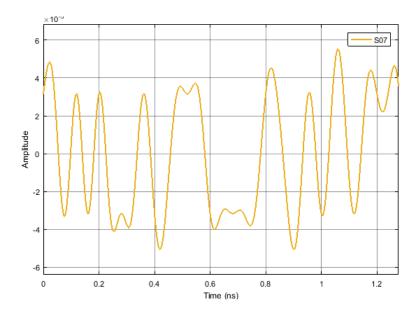


Figure 6: Homodyne receiver internal signal: subtraction of the signals outputted by the photodiodes.

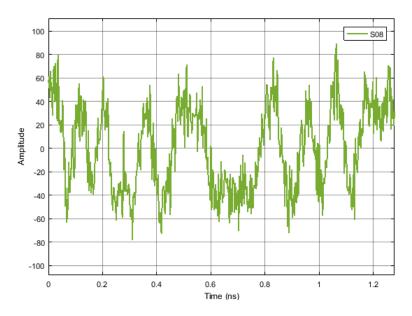


Figure 7: Homodyne receiver internal signal: amplification of the signal in Figure 6 with added noise.

The result of the homodyne detection is the binary string presented in 8, which is then compared to the original binary string by the BER block, which outputs the report presented in Figure 9.


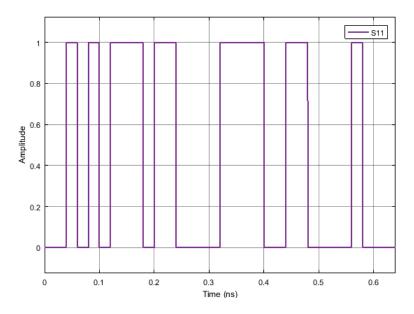


Figure 8: Decoded binary string, output of the Homodyne receiver block.

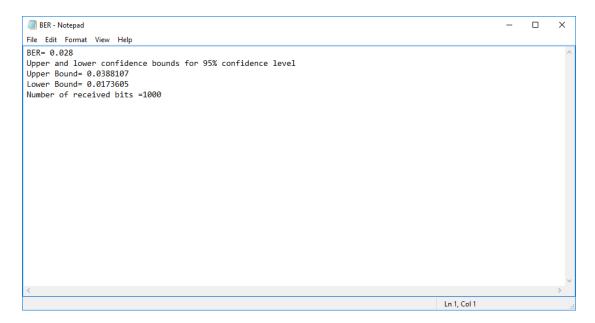

 $\label{eq:Figure 9: Bit-Error-Rate report.}$

7 Block Description

7.1 MQAM Transmitter

7.2 Homodyne Receiver

Introduction

This super-block compresses the function of the following blocks:

- Local Oscillator;
- Balanced Beamsplitter;
- Photodiode;
- Electrical Filter;
- Amplifier;
- Discretizer;
- Delayer
- Bit Decider;

This compression allows for a cleaner code.

Input Parameters

- $\bullet \ \ Local Oscillator Optical Power$
- $\bullet \ LocalOscillatorOpticalPower_dBm \\$
- \bullet LocalOscillatorPhase
- \bullet TransferMatrix
- Responsivity
- Amplification
- $\bullet \ \ Noise Amplitude$
- SamplingRate
- Delay
- ReferenceValue

Functional Description

The input signal is evaluated and a binary string is generated from this evaluation.

A diagram of the blocks that constitute this super-block, with the corresponding relations is presented in Figure 10.

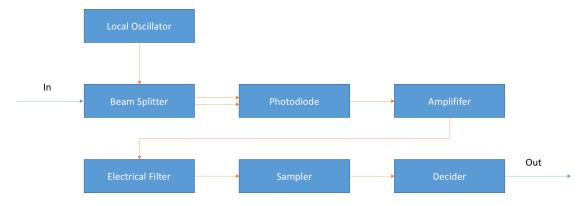


Figure 10: Homodyne Receiver Block Diagram.

Inputs

Number: 1

Type: Sequence of impulses modulated by the filter (OpticalSignal)

Outputs

Number: 1

Type: Binary String (Binary)

7.3 Bit Error Rate

Input Parameters

• setConfidence

• setMidReportSize

Functional Description

This block accepts two binary strings and outputs a binary string, outputting a 1 if the two input samples are equal to each other and 0 if not. This block also outputs .txt files with a report of the calculated BER as well as the estimated Confidence bounds for a given probability P. The block allows for mid-reports to be generated, the number of bits between reports is customizable, if it is set to 0 then the block will only output the final report.

Input Signals

Number: 1

Type: Binary (DiscreteTimeDiscreteAmplitude)

Output Signals

Number: 1

 ${\bf Type:}\ {\bf Binary}\ ({\bf DiscreteTimeDiscreteAmplitude})$

7.4 Local Oscillator

Input Parameters

• LocalOscillatorPhase

• LocalOscillatorOpticalPower_dBm

 $\bullet \ \ Local Oscillator Optical Power$

• useShotNoise

Functional Description

This blocks accepts a complex signal (either with XY polarization or a simple Band Pass signal) and outputs a phase constant complex signal with the same length as the input signal. The phase and optical power are defined by the values of *LocalOscillatorPhase* and *LocalOscillatorOpticalPower* respectively. This block also adds random gaussian distributed shot noise with an amplitude defined by the power of the inputs. The shot noise is activated by a boolean check fed into the block by the *useShotNoise* parameters.

Input Signals

Number: 1

Type: Complex signal (ContinuousTimeContinuousAmplitude)

Output Signals

Number: 2

Type: Complex signal (Continuous TimeContinuous Amplitude)

7.5 Beam Splitter

Input Parameters

• setTransferMatrix

For simplicity, the input of the transfer Matrix is in the form of a 4x1 array, with the following relation between the array, A, and matrix, M, elements:

$$A = \{ \{ \alpha, \beta, \gamma, \delta \} \} \Rightarrow M = \begin{bmatrix} \alpha & \beta \\ \gamma & \delta \end{bmatrix}$$
 (1)

Functional Description

This block accepts two complex signals and outputs two complex signals built from a mixture of the two inputs according to a pre-determined and user defined transfer matrix.

Input Signals

Number: 2

Type: Complex signal (Continuous Time Continuous Amplitude)

Output Signals

Number: 2

Type: Complex signal (ContinuousTimeContinuousAmplitude)

7.6 Photodiode

Input Parameters

• setResponsivity

Functional Description

This block accepts two complex signals and outputs one real signal built from an evaluation of the power of the input signals and their subsequent subtraction. The responsivity is defined by the value of *Responsivity*.

Input Signals

Number: 2

Type: Complex signal (ContinuousTimeContinuousAmplitude)

Output Signals

Number: 1

Type: Real signal (ContinuousTimeContinuousAmplitude)

7.7 Amplifier

Input Parameters

 \bullet setAmplification

 \bullet setNoiseAmplitude

Functional Description

This block accepts one real signal and outputs one real signal built from multiplying the input signals by a predetermined value. This block also adds random gaussian distributed noise with a user defined amplitude. The multiplying factor and noise amplitude are defined by the values of *Amplification* and *NoiseAmplitude* respectively.

Input Signals

Number: 1

Type: Real signal (ContinuousTimeContinuousAmplitude)

Output Signals

Number: 1

Type: Real signal (Continuous Time Continuous Amplitude)

7.8 Electrical Filter

Input Parameters

 \bullet setFilterType

Functional Description

This block accepts one real signal and outputs one real signal built from a finite convolution of the input with a filter function. The filter function is defined by setFilterType.

Input Signals

Number: 1

Type: Real signal (ContinuousTimeContinuousAmplitude)

Output Signals

Number: 1

Type: Real signal (ContinuousTimeContinuousAmplitude)

7.9 Sampler

Input Parameters

• setSamplingRate

• setDelay

Functional Description

This block accepts one real continuous signal and outputs one real discrete signal built from a sampling of the input signal with a predetermined sampling rate. The sampling rate is defined by the value SamplingRate. This block also allows for a controlled adjustment of the starting point of the output signal, defined by the value Delay

Input Signals

Number: 1

Type: Real signal (ContinuousTimeContinuousAmplitude)

Output Signals

Number: 1

Type: Real signal (DiscreteTimeContinuousAmplitude)

7.10 Bit Decider

Input Parameters

 $\bullet \ setPosReferenceValue$

 \bullet setNegReferenceValue

Functional Description

This block accepts one real discrete signal and outputs a binary string, outputting a 1 if the input sample is above the predetermined reference level and 0 if it is below another reference value. The reference values are defined by the values of PosReferenceValue and NegReferenceValue.

Input Signals

Number: 1

Type: Real signal (DiscreteTimeContinuousAmplitude)

Output Signals

Number: 1

Type: Binary (DiscreteTimeDiscreteAmplitude)

7.11 Bit Error Rate

Input Parameters

• setConfidence

• setMidReportSize

Functional Description

This block accepts two binary strings and outputs a binary string, outputting a 1 if the two input samples are equal to each other and 0 if not. This block also outputs .txt files with a report of the calculated BER as well as the estimated Confidence bounds for a given probability P. The block allows for mid-reports to be generated, the number of bits between reports is customizable, if it is set to 0 then the block will only output the final report.

Input Signals

Number: 1

 $\mathbf{Type} \hbox{: } \operatorname{Binary} \ (\operatorname{DiscreteTimeDiscreteAmplitude})$

Output Signals

Number: 1

Type: Binary (DiscreteTimeDiscreteAmplitude)

8 Known Problems

• Homodyne Super-Block not functioning

- $\bullet\,$ MQAM Transmitter PDF needs to be written
- ullet 8 bits being lost of every signal
- If the bit string length is larger than 512, this first 512 bits are lost