

WHS

18 Computer Control Concepts

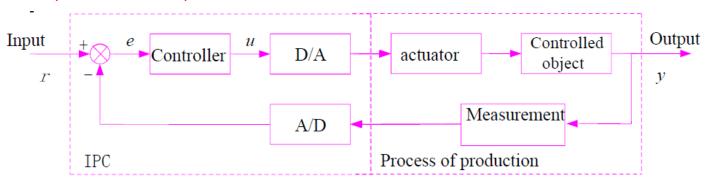

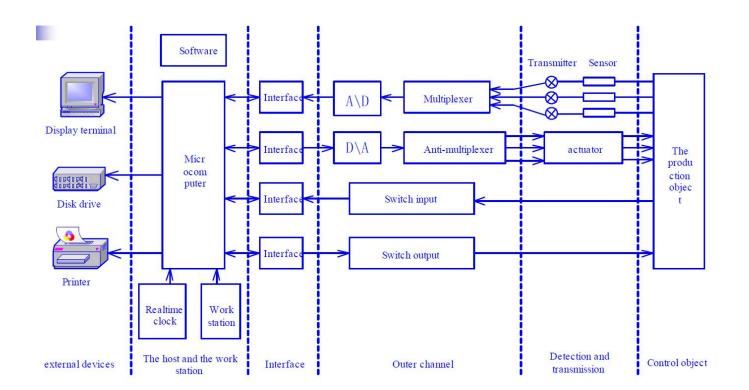

26 Typical forms of computer control system

DDC, Direct Digital Control

SCC, Supervisory Computer Control

SCC + Analog regulator

SCC + DDC

DCS, Distributed Control System


FCS, Fieldbus Control System

63 Operational amplifiers

The current signal between V + and V- points is identically zero, that is, the input impedance is infinite.

The output voltage of the amplifier is constant for a certain value, that is, the output impedance is zero.

Infinite open-loop gain

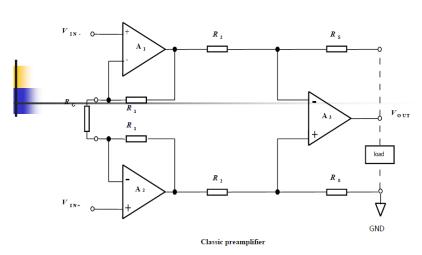

RG external resistor, dedicated to adjust the gain of the amplifier. Therefore, the gain G of the amplifier has a close relationship with the external resistor RG. Gain formula

$$G = \frac{V_{\text{OUT}}}{V_{\text{IN+}} - V_{\text{IN-}}} = \frac{R_S}{R_2} (1 + \frac{2R_1}{R_G})$$

DAC

85 decoding networks

Binary weighted resistor network

T-type resistor network



Resolution: $\frac{1}{2^n} * 100\%$

Settling time Output level

ADC


68 ADC Sample and Hold

Holder

general structure

tandem-type sample & hold

Switch



CMOS analog switch is a controllable switch

Most important two components

Sample and holder

Comparator


96 Type


Successive Approximation Register (SAR)


Dual-slope Integration

Voltage / Frequency Type

Feedback voltage

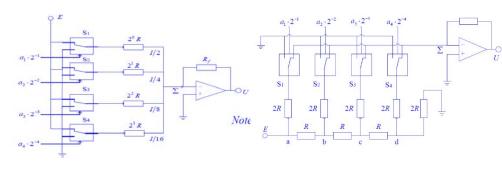


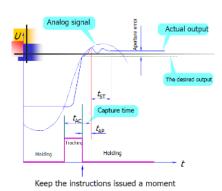




General structure Analog signal U_i Drive signal U_K U_K Analog ground U_K Analog ground

The structure of the tandem-type sample $\&\ \mbox{hold}$

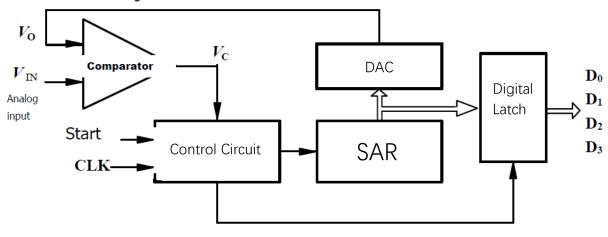

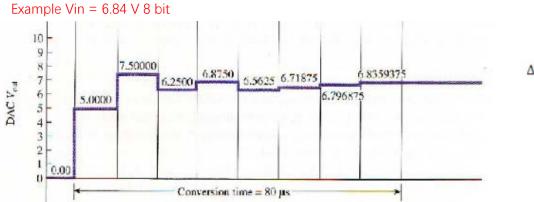

108 Technical Indicators

Resolution: $\frac{1}{2^n} * 100\%$

Range: voltage

Accuracy: $\pm \frac{V}{2^{n+1}}$ (absolute) $\frac{1}{2^{n+1}} * 100\%$ (relative)

Conversion time
Output logic levels
Working temperature

Reference power supply requirements

Interfaces

129 ADC

Unipolar

Bipolar


161 DAC


Direct mode

Single buffer mode

Double buffering mode

252 PLC

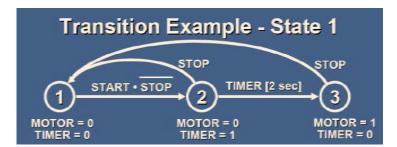

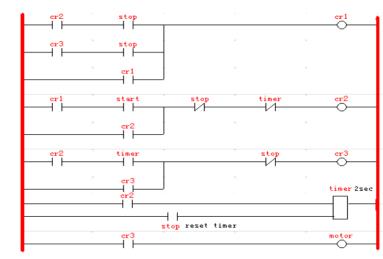

Process Channel

175 Opto-Coupler Isolation: most important anti-jamming technology with hardware in computer control system

Triode type

One-way thyristor type

TRIAC type

179 Digital input channels


182 Digital output channels


Transistor drive circuit

Thyristor drive circuit

Relay drive circuit →

Solid-state relay drive circuit





Interference

196 Source

External

Internal

198 Way of transmission

Electrostatic coupling

Electromagnetic coupling

Common impedance coupling

204 How it works

Series mode interference


superimposed on the measured signal interference

Common mode interference

added in the gauge interference between any input and ground

Long-term transmission interference

wave reflection when high-frequency signals are transmitted in long wires

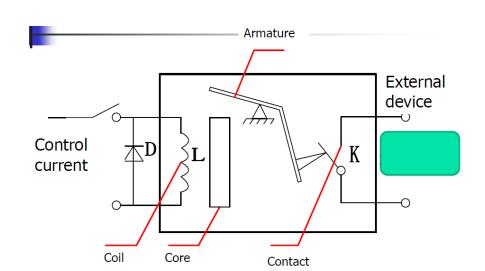

WD

8 Features of a real-time system

Hardware/software system

Data reception, data processing, data delivery to the process within a given time interval

External events

Processing priority

9 Requirements on Real-Time Systems

Timeliness: reaction right on time


Simultaneousness: simultaneous reaction to various events


Dependability: reliable, safe, available

Predictability: all reactions must be predictable and deterministic

17 Product Automation System Structure Simple →

25 Time Requirements on the different levels in ISA-95 Standard

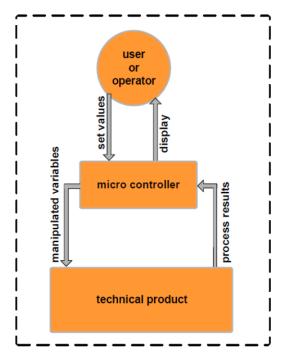

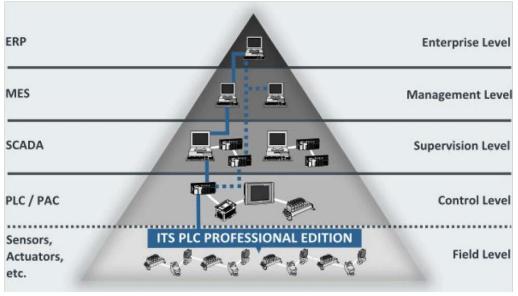


Effects ranging between months-years

Effects ranging between days-weeks-months

Effects ranging between minutes-hours

microseconds-seconds

29 Cyclic Execution of PLCs

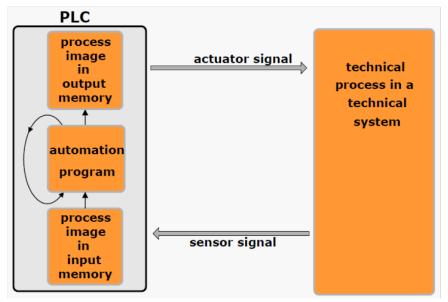

Advantage: simple programming through cyclic operational mode

Disadvantage: maximum reaction time on events in the technical process is equal to two program cycles

Program execution time:

- cycle time is not constant
- 1 ms per 1000 instructions

34 Microcontroller Components

CPU = Central Processing Unit micro processor

RAM = Random Access Memory data memory

EPROM/PROM/ROM = Erasable/ Programmable/ Read Only Memory fixed memory

I/O = parallel or serial input/output components process and data periphery

Counter/Timer = generation of clock pulses

Interrupt Controller = handling of hardware interrupts

38 System Communication

Operation level: large data, short reaction time Process level: middle data, middle reaction time Field level: small data, long reaction time

CAU = centralized automation unit

DAU = decentralized automation unit

44 Communication in Distributed Automation Systems


Star: failure of the central unit causes failure of the communication system

Ring: each unit can only transmit messages to its direct neighbors

Net: parallel information transmission, short reaction time, many interfaces, high cabling costs

Bus: only one participant at a time is able to send, simultaneous information reception from all participants

45 Open System Interconnection (OSI)

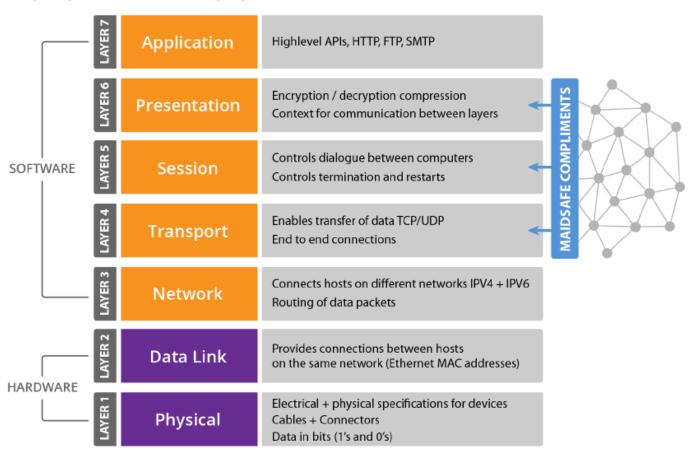

46 Redundancy

Hardware redundancy

Goal: Detection of hardware failures

Operation principle: m-of-n-redundancy majority ruling

Effect: no faults, until multiple defects occur

Software redundancy

Objective: detection of errors in software

Starting point: software has errors

Redundant software alternatives are executed one by one and are compared with a voter (× real-time systems)

Measured value redundancy

redundant measured value

dependent measured value

Time redundancy

multiple inquiry of the same measured value in certain intervals

Levels of fault-tolerance

complete fault-tolerance

reduced operational capacity

transition to a safe state

57 The IEC 61499 Standard Goals


Reusability


Portability

Reconfigurability

Interoperability

61 IEC 61499 Device / Resource Models

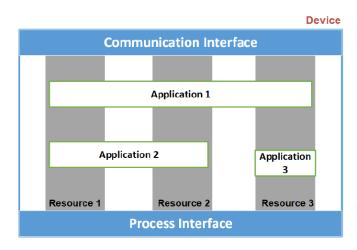

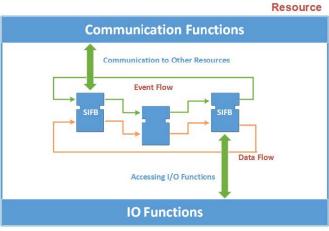

65 IEC 61499 Function Block Models

Atomic function block model

Basic function block (BFB)

Service interface function block (SIFB)

Composite function block model

Composite function block


Sub-application

69 IEC 61499 Execution Control Chart

In an ECC, there will be one <u>initial state (START)</u> with some <u>EC states</u>. Switching between EC states is called <u>EC transition</u>. An EC transition consists of two parts: <u>event and guard condition (must at least have one)</u>. When the EC transition condition is true, the ECC will jump to the next state, execute the algorithm and emit event output. If more than one EC transition condition is satisfied, the ECC will jump to the highest priority EC state labelled with {priority}.

The execution semantics of the ECC are defined as:

- The ECC will be executed once when one input event is activated.
- Both the event and the guard condition must be satisfied before an EC state can jump to another EC state.
- Once the ECC enters the new state, it will execute the algorithm, emit the output event.
- Then the ECC will check all EC transitions from the new EC state. If any EC transition condition is met, the ECC will jump to that state. As there is no new incoming event during this time, EC transitions with guard condition only will be considered.
 - If the event condition is not set in the EC transition condition, this means any event will satisfy the requirement.
 - If the EC transition condition is set to 1, this means unconditionally true.

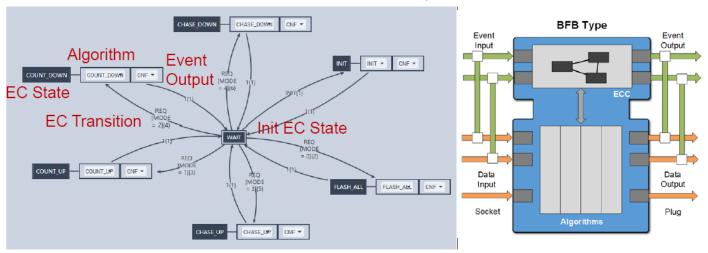

80 IEC 61499 Execution Models

Cyclic

Buffered Sequential

Non-preempted Multi-threading

Synchronous

Time-stamped Discrete-event

85 Design IEC 61499


Design the FB Interface

Create Algorithms (PLC Ladder Diagram)

Design ECC (Execution Control Chart)

Design HMI (Human Machine Interface)

Put All FBs Together and Deploy to Runtime

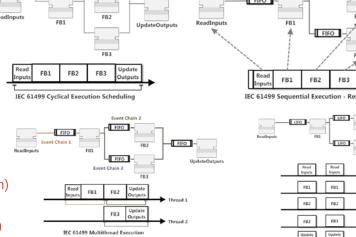



88 IEC 61499 Model-View-Controller (MVC)

A closed-loop between controller block and physical model block.

A view block could be attached to both controller and model.

The model block could be replaced with the physical plant directly.

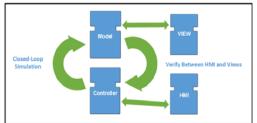



96 IEC 61131-3 language

Ladder Diagram (LD)

Structure Text (ST)

Instruction List (IL)

Function Block Diagram (FBD)

Sequential Function Chart (SFC)

99 Software Model in IEC 61131-3 \rightarrow 100 IEC 61131-3 Tasks

Class

Continuous Tasks

Periodic Tasks

Interrupt Tasks

Priority

System Pulse


Fast Task


Event Task

Main Task

Default Task

System Task

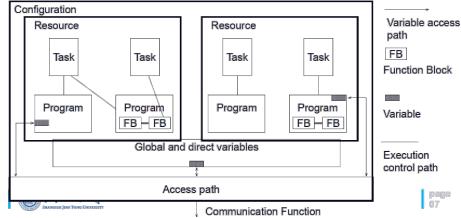

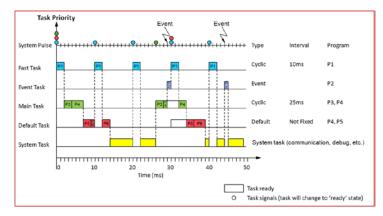

101 IEC 61131-3 Programming Organization Units

Function


Function Block


Program

111 Ladder Diagram Logic →

112 Ladder Relay Instructions


which can be minimized, using Boolean algebra's distributed rule, to $Y = A \cdot (B \cdot C + D \cdot E) + (F \cdot E)$





Ladder Relay Instructions (Purpose: To provide hardwired relay capabilities in a PLC)					
Instruction	Symbol	Function			
Examine-ON/Normally Open	$\neg \vdash$	Tests for an ON condition in a reference address			
Examine-OFF/Normally Closed	$\dashv \not\vdash$	Tests for an OFF condition in a reference address			
Output Coil	$-\bigcirc$	Turns real or internal outputs ON when logic is 1			
NOT Output Coil	$-\!$	Turns real or internal outputs OFF when logic is 1			
Latch Output Coil	<u> </u>	Keeps an output ON once it is energized			
Unlatch Output Coil	U	Resets a latched output			
One-Shot Output	OS	Energizes an output for one scan or less			
Transitional Contact	- ↑ -	Closes for one scan when its trigger contact makes a positive transition			

Timer Instructions (Purpose: To provide hardware timer capabilities in a PLC)					
Instruction	Symbol	Function			
ON-Delay Energize Timer		Energizes an output after a set time period when logic 1 exists			
ON-Delay De-energize Timer		De-energizes an output after a set time period when logic 1 exists			
OFF-Delay Energize Timer	—OF	Energizes an ouput after a set time period when logic 0 exists			
OFF-Delay De-energize Timer	—TOF	De-energizes an output after a set time period when logic 0 exists			
Retentive ON-Delay Timer	RTO	Energizes an output after a set time period when logic 1 exists and then retains the accumulated value			
Retentive Timer Reset	—RTR	Resets the accumulated value of a retentive timer			

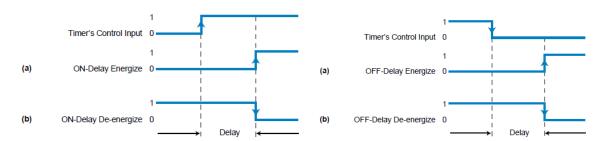

159 SCADA Key Features

Input / Output task: interface between the control and monitoring system and the plant floor

Alarm task: detecting digital alarm points and compare the values of analog alarm points to alarm thresholds

Trends task: collects data to be monitored over time

Reports task: periodic, event triggered or activated by the operator and acquired from plant data

Display task: manages all data to be monitored by the operator and all control actions requested by the operator

161 SCADA Real-Time Constraints

Display: Display of value from RTU (1 to 2 seconds maximum)

Display: Display of entire new display (1 second)

Trend: Retrieval of historical trend and display (2 seconds)
Alarm: Acknowledge of alarm on operator screen (1 second)

RTU: Control request from operator to RTU (1 second critical; 3 seconds noncritical)

RTU: Sequence of events logging at RTU of critical events (1 millisecond)

165 Bus Access Methods

Deterministic bus access

determined transmission rights

predictable response time

permanent monitoring of the bus

event driven communication

low/middle bus load


E.g. master/slave, Token-Passing, TDMA

Random bus access

random transmission rights

non-predictable response time

E.g. CSMA (CSMA/CD, CSMA/CA)

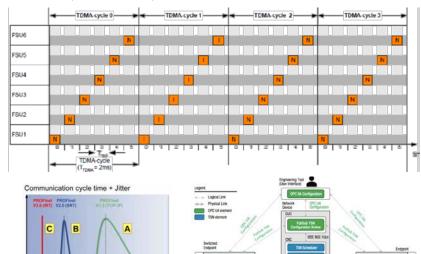

168 TDMA →

Procedure: Within a period (TDMA-cycle) each participant is assigned one or several time slots of determined length.

Principle: distributed shift registers

Advantages: short and constant cycle time, low protocol overhead

Disadvantages: √ synchronization of participants, × autonomous participants, low flexibility, no dynamic adaptation

169 CSMA

Procedure: Each participant checks if bus is free/occupied (carrier sense). If bus is free, it starts transmission. In case of collisions, try transmission once again.

Principle: each participant has bus access without explicit broadcasting right dispatching. (Multiple Access)

CSMA-CD (Collision Detection, Recognition of collisions through <u>data comparison</u>, Transmission repetition after participant specific waiting period)

CSMA-CA (Collision Avoidance, Avoidance of collisions through priority rules)

172 CAN (Controller Area Network) Bus

Message oriented addressing Multi-master bus access method In case of access conflict: bus arbitration according to priority like CSMA/CA

Short length of messages (0...8 byte) Fast Transmission (1Mbit/s)
Various error recognition mechanisms Self-test through error counter


ProfiNet ↑, Ethernet/IP, Ethernet Powerlink, Modbus TCP, OPC UA, OPC UA TSN ↑

ZSY

L6 PID Control

Analog PID

23 Parameters

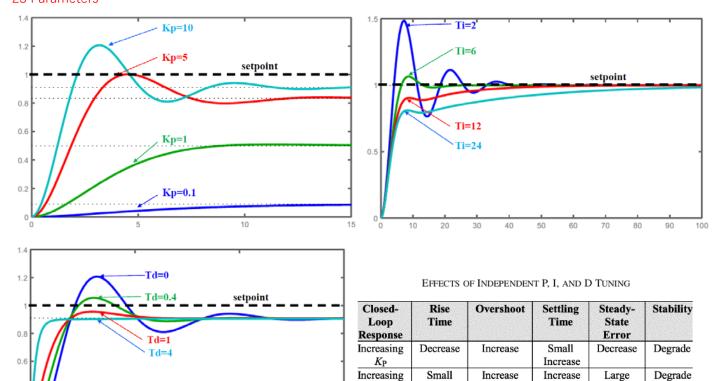

Decrease

Small

Decrease

Decrease

Increasing

 $K_{\mathbf{D}}$

Digital PID

34 Forms

$$u_k = K_p \left(e_k + \frac{T}{T_i} \sum_{j=1}^k e_j + \frac{T_d}{T} (e_k - e_{k-1}) \right)$$

$$u_k = P_p(k) + P_i(k) + P_d(k)$$

$$d_0 = 0$$

$$\begin{split} P_{\mathrm{p}}(k) &= K_{\mathrm{p}} e_k \\ P_{\mathrm{i}}(k) &= K_{\mathrm{p}} \frac{T}{T_{\mathrm{i}}} \sum_{j=1}^k e_j = P_{\mathrm{i}}(k-1) + K_{\mathrm{p}} \frac{T}{T_{\mathrm{i}}} e_k \\ P_{\mathrm{d}}(k) &= K_{\mathrm{p}} \frac{T_{\mathrm{d}}}{T} (e_k - e_{k-1}) \end{split}$$

$$\Delta u_k = K_p \left(e_k - e_{k-1} + \frac{T}{T_i} e_k + \frac{T_d}{T} (e_k - 2e_{k-1} + e_{k-2}) \right)$$
$$= d_0 e_k + d_1 e_{k-1} + d_2 e_{k-2}$$

Decrease

Minor

Change

Decrease

Improve

$$d_0 = K_\mathrm{p} \left(1 + \frac{T}{T_\mathrm{i}} + \frac{T_\mathrm{d}}{T} \right), \ d_1 = -K_\mathrm{p} \left(1 + 2 \frac{T_\mathrm{d}}{T} \right), \ d_2 = K_\mathrm{p} \frac{T_\mathrm{d}}{T}$$

Practical Issues Related to Implementation

37 Selecting the sampling period

Sample rule modification: $T \le \frac{1}{Mf_{max}}$ $M = 5 \sim 10$

In control algorithm: $\frac{t_s}{15} \le T \le \frac{t_s}{6}$ t_s is settling time

42 Proportional kick


Setpoint weighting: $w_k \to \beta w_k \quad 0 \le \beta \le 1$

38 Derivative kick


Filtering the D action

Suppressing large changes resulting from setpoint changes

Setpoint weighting



Low-pass filter Ideal D control



where $\sigma = \exp(-T/T_F)$, T_F is the time constant of the pre-filter.

Modified digital PID controller

$$u_k = P_{\rm p}^m(k) + P_{\rm i}(k) + P_{\rm d}^m(k)$$

$$P_{\rm d}^m(k) = K_p(\beta(\sigma\overline{w}_{k-1} + (1-\sigma)w_k) - y_k) \qquad \begin{array}{l} \text{(SW) for P control to reduce the} \\ \text{maximum overshooting of the process} \\ \text{output and D control} \\ \\ P_{\rm i}(k) = K_{\rm p} \frac{T}{T_{\rm i}} \sum_{j=1}^k e_j = P_{\rm i}(k-1) + K_{\rm p} \frac{T}{T_{\rm i}} e_k \qquad \qquad \\ \text{No change} \\ \\ P_{\rm d}^m(k) = \frac{T_{\rm d}}{T_{\rm d} + \alpha T} P_{\rm d}^m(k-1) + \frac{K_{\rm p} T_{\rm d} \alpha}{T_{\rm d} + \alpha T} [-y_k + y_{k-1}] \qquad \qquad \\ \text{(F) to limit the amplification of high-frequency noise and (S) to damp the} \\ \text{response to the setpoint change} \\ \end{array}$$

44 Integral windup caused by control saturation in position PID

Switch off the I action when the control error is large

$$u_{k} = P_{p}(k) + \chi_{e_{k}} P_{i}(k) + P_{d}(k)$$

$$u_{k} = P_{p}(k) + P_{i}(k) + P_{d}(k) \qquad P_{i}(k) = P_{i}(k-1) + K_{p} \frac{T}{T_{i}} e_{k} \chi_{e_{k}}$$

$$v_{k} = \begin{cases} 0, & \text{if } |e_{k}| > \epsilon \\ 1, & \text{if } |e_{k}| \leq \epsilon \end{cases}$$

$$v_{k} = \begin{cases} 0, & \text{if } u_{k-1} > u_{\max} \& e_{k} \geq 0 \text{ or } u_{k-1} < u_{\min} \& e_{k} \leq 0 \\ 1, & \text{otherwise} \end{cases}$$

Stop summation if control signal saturates, control variable sign = control error sign

Re-calculate the error

If the actuator saturates at k, i.e.,

$$u_k > u_{\text{max}}$$
 or $u_k < u_{\text{min}}$

then calculate the effective error

$$e_k \leftarrow \frac{\frac{1}{K_{\mathrm{p}}}u^* - \frac{T}{T_{\mathrm{i}}}\sum_{j=1}^{k-1}e_j + \frac{T_{\mathrm{d}}}{T}e_{k-1}}{1 + \frac{T}{T_{\mathrm{c}}} + \frac{T_{\mathrm{d}}}{T}}$$

where $u *= u_{\text{max}}$ or u_{min} .

51 Noise

Exponential filter

$$\bar{e}_k = \frac{\tau_F}{T + \tau_F} \bar{e}_{k-1} + \frac{T}{T + \tau_F} e_k$$

Moving average filter ($\lambda = 1$, or Introducing the forgetting factor $\lambda < 1$)

11

$$\bar{e}_k = \bar{e}_{k-1} + \frac{1}{N} [e_k - e_{k-N}]$$
 $\bar{e}_k = \bar{e}_{k-1} + \frac{1 - \lambda}{1 - \lambda^N} (e_k - e_{k-N})$

Noise-spike filter (rate-of-change filter)

$$\bar{y}_F(k) = \begin{cases} y_k, & \text{if } |y_k - \bar{y}_F(k-1)| \le \Delta \\ \bar{y}_F(k-1) - \Delta, & \text{if } y_k - \bar{y}_F(k-1) < -\Delta \\ \bar{y}_F(k-1) + \Delta, & \text{if } y_k - \bar{y}_F(k-1) > \Delta \end{cases}$$

Tuning

63 Methods

Analytical methods

Heuristic methods

Frequency response methods

Optimization methods

Adaptive tuning methods

69 Ziegler-Nichols Step Response Method

Obtain the step response $y(t) = L^{-1}(\frac{H(s)}{s})$

Find the point with maximum gradient \dot{y}_{max} in (t_0, y_0) $(\ddot{y} = 0)$

Calculate the auxiliary line $y - y_0 = \dot{y}_{max}(t - t_0)$


 $let t = 0, we get K_r$

let y = 0, we get T_{ij}

72 Ziegler-Nichols Frequency Method

Obtain the critical gain K_r by Routh-Hurwitz condition in system's $\operatorname{den} + \mathit{K}_p num = 0$

Solve the auxiliary formula (right above the critical formula) to get T_r

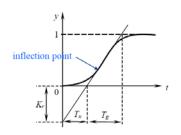

Controller	$K_{\rm p}$	$T_{\rm i}$	$T_{ m d}$
P	$1/K_r$	-	-
PI	$0.8/K_{r}$	$3T_u$	-
PID	$1.2/\mathrm{K}_r$	$2T_u$	$0.42T_{u}$

Controller parameters for Z-N step response method

1 23

9 15 + Kp

+ Kp auxiliary equation

 $\frac{192 - K_p}{2}$

15 + Kp

 s^2

0

critical equation

L7 Digital Controller Design

88 Z transformation

Time function y(t)	Time sequence y(kT)	z transform Y(z)	Laplace transform Y(s)
$\delta(t)$	$\begin{cases} 1, & k = 0 \\ 0, & k > 0 \end{cases}$	1	1
$1_{t\geq 0}$	$1_{k\geq 0}$	$\frac{1}{1-z^{-1}}$	$\frac{1}{s}$
t	kT	$\frac{Tz^{-1}}{(1-z^{-1})^2}$	$\frac{1}{s^2}$
$\frac{1}{2}t^2$	$\frac{1}{2}(kT)^2$	$\frac{T^2z^{-1}(1+z^{-1})}{2(1-z^{-1})^3}$	$\frac{1}{s^3}$
e^{-at}	e^{-akT}	$\frac{1}{1 - e^{-aT}z^{-1}}$	$\frac{1}{s+a}$

- Linearity: $\mathcal{Z}[af(k) + bg(k)] = aF(z) + bG(z)$
- Multiplication by a^k : $\mathcal{Z}[a^k y(k)] = Y(z/a)$
- Real translation theorem: $\mathcal{Z}[y(k-i)] = z^{-i}Y(z)$,
- · Initial-value theorem:

 $y(0) = \lim_{z \to \infty} Y(z)$

· Final-value theorem:

 $\lim_{k \to \infty} y(k) = \lim_{z \to 1} (z - 1)Y(z)$

Approximation of $s = \ln z/T$ is necessary!

 $z = e^{sT} \approx 1 + sT \qquad \qquad s \approx \frac{z-1}{T}$ $z^{-1} = e^{-sT} \approx 1 - sT \qquad \qquad s \approx \frac{z-1}{Tz}$ $z = e^{sT} = \frac{e^{sT/2}}{e^{-sT/2}} \approx \frac{1 + sT/2}{1 - sT/2} \qquad \qquad s \approx \frac{z}{T} \frac{z-1}{z+1}$

Indirect approach (Design in continuous domain, discretize controllers to obtain discrete-time destiny)

97 Emulation (Laplace domain) ↑

99 Discretization (Time domain)


 $\begin{array}{lll} & & & & \\ & e(t) & & & \\ & e_k & \\ & &$

Forward backward rectangular method, trapezoidal method for integral approximation

 $\int_{0}^{e(t)} e(t) dt \approx 1 \sum_{j=1}^{2} e_{j-1}$ $\int_{0}^{e(t)} e(t) dt \approx 1 \sum_{j=1}^{2} e_{j}$ $\int_{0}^{e(t)} e(t) dt \approx 1 \sum_{j=1}^{2} e_{j}$

The trapezoidal method is also called the Bilinear / Tustin transformation.

Direct approach (Design in discrete domain, ZOH discretize plant model to obtain design foundation)



$$D(z) = \frac{U(z)}{E(z)} = \frac{a_0 + a_1 z^{-1} + \dots + a_m z^{-m}}{b_0 + b_1 z^{-1} + \dots + b_l z^{-l}}$$
 The digital controller $D(z)$ is physically realizable if and only if maxPowerU(z) \leq maxPowerE(z)

$$b_0u_k + b_1u_{k-1} + b_2u_{k-2} + \dots + b_lu_{k-l} = a_0e_k + a_1e_{k-1} + \dots + a_me_{k-m}$$

Define the intermediate variable
$$C(z) = \frac{E(z)}{\sum_{j=0}^l b_j z^{-j}}$$
, then $U(z) = C(z) \sum_{i=0}^m a_i z^{-i}$
$$\begin{cases} c_k = \frac{1}{b_0} \left[e_k - \sum_{i=1}^l b_i c_{k-i} \right] \\ u_k = \sum_{i=0}^m a_i c_{k-i} \end{cases}$$

$$u_k = \frac{1}{b_0} \left[\sum_{i=0}^m a_i e_{k-i} - \sum_{j=1}^l b_j u_{k-j} \right]$$

Needs much memory to store all the previous data O(m + l).

Memory size is reduced to $O(\max\{m, l\})$

110 Time Domain

Consider M time steps into the future and collect the control errors e_k and control actions into u_k

$$\{e_0, e_1, \dots, e_M\}, \{u_0, u_1, \dots, u_M\}$$
 min $J = \sum_{k=0}^{M} [e_k^2 + \alpha (u_k - u_\infty)^2]$

Define the objective function J to measure the derivation of e_k from zero and u_k from the final value u_∞ Solve the minimization by exhaustive search, gradient descent, evolutionary algorithm ..., to obtain $\{a_i, b_j\}$ offline If we only consider unit response, we get $\sum_{k=0}^{t} b_k = 0$

Recalling that $b_0 \neq 0$ (physical realizability), the simplest form is $b_0 = 1$, $b_1 = -1$

We can recover the ideal PI or PID by choosing appropriate a_0 , a_1 , a_2 .

Minimal Prototype Control (synthesis in z plane)

117 Raw

We mainly focus on the cases when the reference input is a step, a ramp, or an acceleration function. z transforms of such time-domain polynomial inputs can

be written as

$$W(z) = \frac{A(z)}{(1 - z^{-1})^q}$$

→ q is the den power of input

$$G_w(z) = 1 - (1 - z^{-1})^q (1 + f_1 z^{-1} + \dots + f_p z^{-p})$$

F(z) = 1, we obtain the **minimal prototype controller**.

$$D(z) = \frac{1}{G(z)} \frac{G_w(z)}{1 - G_w(z)}$$

$$E(z) = [1 - G_w(z)]W(z) = \sum_{k=0}^{\infty} e(kT)z^{-k}$$

$$e(0) \quad e(T) \quad e(2T) \rightarrow \text{how many steps to follow}$$

125 Optimization

Stability

Not only e(t), but also the control output u(t) should be stable.

Include all zeros of G(z) that lie on or outside the unit circle in $G_w(z)$ as zeros

Plant model estimation deviation

Any error in the pole-zero cancellation will diverge as time elapse

Include all poles of G(z) that lie on or outside the unit circle in 1- $G_w(z)$ as zeros.

Intersample ripple

The control is unchanged between two consecutive sampling points.

Include all non-zero zeros of G(z) in the unit circle in $G_w(z)$ as zeros.

134 Conclusion

Include all zeros of G(z) in $G_w(z)$ and all poles lying on or outside of G(z) in 1- $G_w(z)$

Balance coefficient

• Consider a discrete-time G(z) with l pure delays, assume it has w non-zero zeros $b_1, b_2, ..., b_w$, and v poles $a_1, a_2, ..., a_v$ lying on or outside the unit circle,

$$G(z) = z^{-1} \frac{(1 - b_1 z^{-1}) \dots (1 - b_w z^{-1})}{(1 - a_1 z^{-1}) \dots (1 - a_v z^{-1})} G'(z)$$

• The minimal prototype controller is determined by

$$D(z) = \frac{1}{G(z)} \frac{G_w(z)}{1 - G_w(z)}$$

q is the power of input denominator $G_w'(z)$ and F(z) are the unfixed parts with c_i and f_i carrying the other's power to balance

where

$$G_w(z) = \mathbf{z}^{-1}(1 - b_1 z^{-1}) \dots (1 - b_w z^{-1}) G'_w(z)$$


$$1 - G_w(z) = (1 - a_1 z^{-1}) \dots (1 - a_v z^{-1}) (1 - \mathbf{z}^{-1})^q F(z)$$

$$G'_w(z) = c_1 z^{-1} + c_2 z^{-2} + \dots + c_s z^{-s}$$

$$F(z) = 1 + f_1 z^{-1} + \dots + f_p z^{-p}$$

and s = v + q, p = w + l. If there are k poles at z = 1, it suffices to have $(1 - z^{-1})^{\max\{q,k\}}$ in $1 - G_w(z)$.

135 Dahlin's Method (synthesis in z plane)



$$G_w(z) = \frac{(1-\sigma)z^{-l-1}}{1-\sigma z^{-1}}$$

$$\sigma = e^{-T/\tau_c}, \ l = \theta/T$$

$$D(z) = \frac{1}{G(z)} \frac{(1-\sigma)z^{-l-1}}{1-\sigma z^{-1} - (1-\sigma)z^{-l-1}}$$

A negative pole near (-1, 0) on the unit circle has pronounced effect on the response, causing the controller to oscillate or ring. Dahlin suggested that ringing can be eliminated by setting $z^{-1} = 1$ in the ringing term.

$$D(z) = \frac{2.6356(1 - 0.7413z^{-1})}{(1 + 0.733z^{-1})(1 - z^{-1})(1 + 0.3935z^{-1})}$$

138 Internal Model Control

The plant model is factored as $\tilde{G}(z) = \tilde{G}_{+}(z)\tilde{G}_{-}(z)$

 $\tilde{G}_{+}(z)$ is the bad part, containing


time-delay term z^{-l-1}

zeros that outside the unit circle

zeros that lie inside the circle near (-1, 0)

steady state gain of unity as denominator (found by setting z = 1)

The controller is obtained by inverting good part of G(z) and multiplying by a first-order filter F(z) $D(z) = \frac{F(z)}{\tilde{G}_{-}(z)}$ $F(z) = \frac{1-\alpha}{1-\alpha z^{-1}}, \frac{(1-\alpha)z^{-1}}{1-\alpha z^{-1}}$

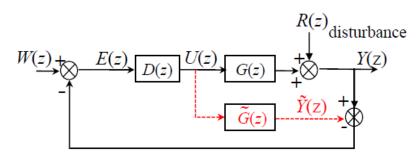

L8 Model Predictive Control

163 Parameters

N model rank

T sample period

P prediction horizon

M control horizon

√ 164 154 Finite Step Response Model

$$\mathbf{y(t)} = \mathbf{L}^{-1} \left(\frac{H(s)}{s}\right) \quad \mathbf{S}_i = \mathbf{y(iT)}$$

$$y(k) = \sum_{i=0}^{N-1} S_i \Delta u(k-i) + S_N u(k-N)$$

$$\hat{y}^o(k+j) \triangleq \sum_{i=j+1}^{N-1} S_i \Delta u(k+j-i) + S_N u(k+j-N)$$

156 Model prediction

$$\hat{\mathbf{y}}(k+1) = \mathbf{S}\Delta\mathbf{u}(k) + \hat{\mathbf{y}}^{o}(k+1)$$

y(k+j) 实际输出

y⁰(k+j) 非受迫输出, k 时刻起不进行任何控制

 $\hat{y}(k+j)$ 预测输出

 $\tilde{y}(k+j)$ k 时刻实际误差作为恒定误差的修正预测输出

158 Model prediction with current error

$$\delta(k) = y(k) - \hat{y}(k) \quad \widetilde{\mathbf{y}}(k+1) = \hat{\mathbf{y}}(k+1) + \delta(k)\mathbf{1}$$

√ 160 Destiny function optimization

$$\min_{\Delta \mathbf{u}(k)} \phi = \tilde{\boldsymbol{e}}^T(k+1)\tilde{\boldsymbol{e}}(k+1)$$

$$\tilde{\boldsymbol{e}}(k+1) = \boldsymbol{w}(k+1) - \tilde{\boldsymbol{y}}(k+1) = \boldsymbol{w}(k+1) - \hat{\boldsymbol{y}}^{\boldsymbol{0}}(k+1) - \delta(t)\boldsymbol{1} - \boldsymbol{S}\Delta\boldsymbol{u}(k) = \tilde{\boldsymbol{e}}^{\boldsymbol{0}}(k+1) - \boldsymbol{S}\Delta\boldsymbol{u}(k)$$

$$\frac{\partial \phi}{\partial \Delta \mathbf{u}(k)} = 0 \qquad \Delta \mathbf{u}(k) = (\mathbf{S}^T \mathbf{S})^{-1} \mathbf{S}^T \tilde{e}^o(k+1) \qquad \frac{\partial (\tilde{e}(k+1)^T \tilde{e}(k+1))}{\partial \Delta \mathbf{u}(t)} = -2\mathbf{S}^T \tilde{e}^{\mathbf{0}}(k+1) + 2\mathbf{S}^T \mathbf{S} \Delta \mathbf{u}(t)$$

$$\min_{\Delta \mathbf{u}(k)} \phi = \tilde{e}(k+1)^T \tilde{e}(k+1) + \alpha \Delta \mathbf{u}(k)^T \Delta \mathbf{u}(k) \qquad \Delta \mathbf{u}(k) = (\mathbf{S}^T \mathbf{S} + \alpha \mathbf{I})^{-1} \mathbf{S}^T \tilde{e}^o(k+1)$$

$$\min_{\Delta \mathbf{u}(k)} \phi = \tilde{\mathbf{e}}(k+1)^T \tilde{\mathbf{e}}(k+1) + \alpha \Delta \mathbf{u}(k)^T \Delta \mathbf{u}(k) \qquad \Delta \mathbf{u}(k) = (\mathbf{S}^T \mathbf{S} + \alpha \mathbf{I})^{-1} \mathbf{S}^T \tilde{\mathbf{e}}^o(k+1)$$

√ Matrix derivation

$$\frac{\partial A^T x}{\partial x} = A = \left(\frac{\partial A x}{\partial x}\right)^T \qquad \frac{\partial x^T A x}{\partial x} = (A + A^T) x \qquad (AB)^T = B^T A^T \qquad \frac{\partial f(x)}{\partial x} = \frac{\partial f^T(x)}{\partial x}$$

162 Implementation

$$\Delta u(k) = \boldsymbol{K}_{c1} \widetilde{\boldsymbol{e}}^o(k+1)$$
 \boldsymbol{K}_{c1} is the firs row of $(\boldsymbol{S}^T \boldsymbol{S} + \alpha \mathbf{I})^{-1} \boldsymbol{S}^T = \boldsymbol{K}_c$ (M*P)

167 Extensions

Step response model for integrating process: replace $\hat{y}(k)$ with $\Delta \hat{y}(k)$

Step response model with known disturbances: a known disturbance variable can be included in step-response model Reference trajectory specification: specify the reference trajectory to be the filtered setpoint

Prediction for multi-input multi-output systems: r inputs and m outputs

$$\min_{\Delta \mathbf{u}(k)} \phi = \tilde{\boldsymbol{e}}(k+1)^T \boldsymbol{Q} \tilde{\boldsymbol{e}}(k+1) + \Delta \mathbf{u}(k)^T \boldsymbol{R} \Delta \mathbf{u}(k) \qquad \Delta \boldsymbol{U}(k) = \left(\boldsymbol{S}^T \boldsymbol{Q} \boldsymbol{S} + \boldsymbol{R} \right)^{-1} \boldsymbol{S}^T \boldsymbol{Q} \tilde{\boldsymbol{e}}^o(k+1)$$

S is the $P \times M$ dynamic matrix

$$S_P$$
 S_{P-1} \cdots S_{P-M+1}