#### **Overview**

The USB Audio Speaker application is a simple demonstration program based on the MCUXpresso SDK. It is enumerated as a playback device and users can play music using the device.

## **System Requirement**

#### Hardware requirements

- · Mini/micro USB cable
- USB A to micro AB cable
- Hardware (Tower System base/module) with a SGTL board (except MAPS-KS22)
- Personal Computer(PC)

#### **Software requirements**

- The path for the project files for lite version example is:
  - <MCUXpresso\_SDK\_Install>/boards/<board>/usb\_examples/usb\_device\_audio\_speaker\_lite/<rtos>/<toolchain>. For non-lite version example, the path is:
  - <MCUXpresso\_SDK\_Install>/boards/<board>/usb\_examples/usb\_device\_audio\_speaker/<rtos>/<toolchain>.

Note

The <rtos> is Bare Metal or FreeRTOS OS.

## **Getting Started**

#### **Hardware Settings**

Note

Set the hardware jumpers (Tower system/base module) to default settings.

#### Prepare the example

- 1. Download the program to the target board.
- 2. Connect the target board to the external power source (the example is self-powered).
- 3. Either press the reset button on the board or launch the debugger in the IDE to start running the demo.
- 4. Connect a USB cable between the PC host and the USB device port on the board.

For detailed instructions, see the appropriate board User's Guide.

## **Run the example in Windows (USB AUDIO CLASS 1.0)**

- 1. Plug-in the audio speaker device which is running the Audio Speaker example into the PC.
- 2. A USB AUDIO DEMO device shows up as enumerated in the Device Manager.
- 3. Right click on the sound control icon of the Start bar (close to the clock) and select "Playback devices".



Figure 1: Sound control icon

4. In the pop-up window, select the "Playback" device with the description "USB Audio Device" and click on the "Properties" button.

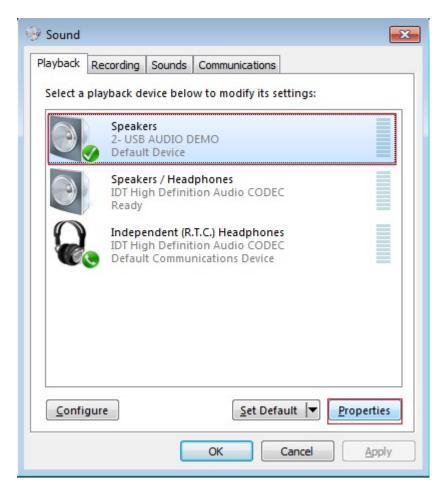


Figure 2: Select properties

5. In the new window, go to "Levels" tab and move the slide until 100%. Click "OK".



Figure 3: Change level

6. In the previous window, ensure that the "USB Audio Device" is still selected and click on the "Set Default" button. Click on the "OK" button.

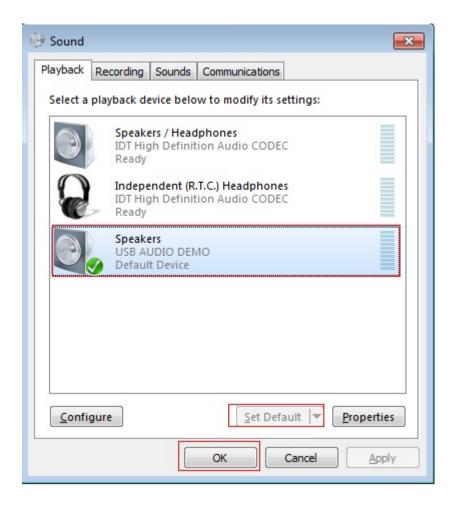


Figure 4: Set default

7. Open the Window Media Player application, select, and play your favorite song.

# Run the example on a Mac<sup>®</sup> (USB AUDIO CLASS 2.0)

- 1. Plug-in the audio speaker device which is running the Audio Speaker example into the Mac.
- 2. A USB audio device shows up as enumerated in the sound catalogue under the System Preferences.
- 3. Select the USB audio speaker device as the default audio device in the sound catalogue under System Preferences.
- 4. Open the QuickTime application. Select and play your favorite song.

#### Note

The device audio speaker example has an ISO IN feedback, please attach the device to a host like PC which supports feedback function. Otherwise, there might be attachment issue or other problems.