LCD KeyPad Shield For Arduino SKU: DFR0009

From Robot Wiki

Contents

- 1 Introduction
- 2 Diagram
- 3 Example 1
- 4 Example 2
- 5 How to use LiquidCrystal library
 - 5.1 Function Explanation
- 6 Documents
- 7 Old version




Introduction

This is a very popular LCD Keypad shield for Arduino or Freeduino board. It includes a 2x16 LCD display and 6 momentary push buttons. Pins 4, 5, 6, 7, 8, 9 and 10 are used to interface with the LCD. Analog Pin 0 is used to read the pushbuttons. The LCD shield supports contrast adjustment and backlit on/off functions. It also expands analog pins for easy analog sensor reading and display.

The LCD Keypad shield is developed for Arduino compatible boards, to provide a user-friendly interface that allows users to go through the menu, make selections etc. It consists of a 1602 white character blue backlight LCD. The keypad consists of 5 keys — select, up, right, down and left. To save the digital IO pins, the keypad interface uses only one ADC channel. The key value is read through a 5 stage voltage divider.

Diagram

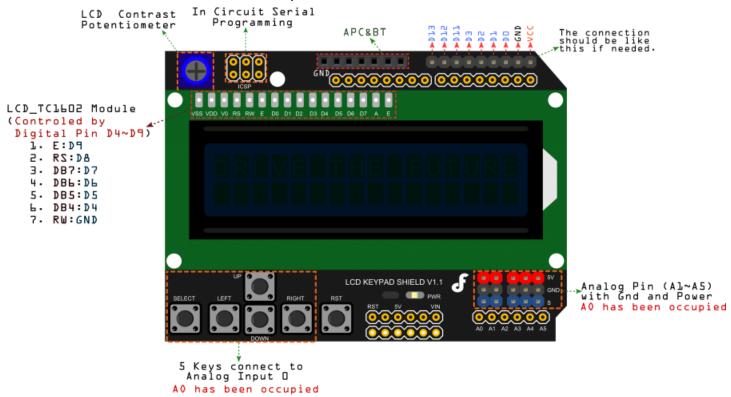

Pin	Function	Instruction
Digital 4(D4)		
Digital 5(D5)	D4~D7 are used as	Four high order bidirectional tristate data bus pins. Used
Digital 6(D6)	DB4~DB7	for data transfer and receive
Digital 7(D7)		between the MPU and the LCD.
Digital 8(D8)	RS	Choose Data or Signal Display
Digital 9(D9)	Enable	Starts data read/write
Digital 10(D10)	LCD Backlight Control	
Analog 0(A0)	Button select	Select, up, right, down and left

Example 1

This example will test the LCD panel and the buttons. When you push the button on the shield, the screen will show the corresponding one.

Connection: Plug the LCD Keypad to the UNO(or other controllers)

```
.
 Mark Bramwell, July 2010
 This program will test the LCD panel and the buttons. When you push the button on the shield,
 the screen will show the corresponding one.
 Connection: Plug the LCD Keypad to the UNO(or other controllers)
 #include <LiquidCrystal.h>
LiquidCrystal lcd(8, 9, 4, 5, 6, 7);
                                    // select the pins used on the LCD panel
// define some values used by the panel and buttons
int lcd_key
int adc_key_in = 0;
#define btnRIGHT
#define btnUP
#define btnDOWN
#define btnLEFT
#define btnSELECT 4
#define btnNONE
int read_LCD_buttons(){
                             // read the buttons
```

```
adc_key_in = analogRead(0);
                                      // read the value from the sensor
    // my buttons when read are centered at these valies: 0, 144, 329, 504, 741
    // we add approx 50 to those values and check to see if we are close
    // We make this the 1st option for speed reasons since it will be the most likely result
    if (adc key in > 1000) return btnNONE;
    // For V1.1 us this threshold
                           return btnRIGHT;
    if (adc_key_in < 50)
    if (adc_key_in < 250)
                          return btnUP;
    if (adc key in < 450) return btnDOWN;
       (adc_key_in < 650)
                           return btnLEFT;
       (adc_key_in < 850)
                           return btnSELECT;
   // For V1.0 comment the other threshold and use the one below:
     if
        (adc_key_in < 50)
                            return btnRIGHT;
     if
        (adc_key_in < 195)
                            return btnUP;
     if (adc_key_in < 380)
                           return btnDOWN;
        (adc_key_in < 555)
                            return btnLEFT:
        (adc_key_in < 790)
                           return btnSELECT;
    return btnNONE;
                                   // when all others fail, return this.
}
void setup(){
                                   // start the library
   lcd.begin(16, 2);
   lcd.setCursor(0,0);
                                   // set the LCD cursor
                                                           position
   lcd.print("Push the buttons"); // print a simple message on the LCD
void loop(){
                                   // move cursor to second line "1" and 9 spaces over
   lcd.setCursor(9,1);
   lcd.print(millis()/1000);
                                   // display seconds elapsed since power-up
   lcd.setCursor(0.1):
                                   // move to the begining of the second line
   lcd_key = read_LCD_buttons();
                                  // read the buttons
   switch (lcd key){
                                   // depending on which button was pushed, we perform an action
       case btnRIGHT:{
                                   // push button "RIGHT" and show the word on the screen
            lcd.print("RIGHT ");
            break;
       case btnLEFT:{
             lcd.print("LEFT "); // push button "LEFT" and show the word on the screen
       case btnUP:{
             lcd.print("UP
                              "); // push button "UP" and show the word on the screen
             break;
       case btnDOWN:{
             lcd.print("DOWN "); // push button "DOWN" and show the word on the screen
       case btnSELECT:{
             lcd.print("SELECT"); // push button "SELECT" and show the word on the screen
       case btnNONE:{
             lcd.print("NONE "); // No action will show "None" on the screen
             break:
   }
}
```

Example 2

This example shows that reads an analog input on pin 1, prints the result to the LCD. This program takes the temperture sensor LM35 for example.

What you need

- 1. DFRduino UNO R3 (http://www.dfrobot.com/index.php?route=product/product&filter_name=uno&product_id=838)
- 2. LCD Keypad Shield For Arduino (http://www.dfrobot.com/index.php? route=product/product&filter_name=lcd&product_id=51#.UuTNf8aS2c8)
- Analog Linear Temperature Sensor (http://www.dfrobot.com/index.php? route=product/product&filter_name=lm35&product_id=76LM35)

Connection:

Plug the LCD Keypad to the UNO(or other controllers)

Temperture sensor:

S(blue) -- A1()


Note: A0 has been occupied.

VCC(red) -- VCC

GND(black) -- GND

 $Tricks \ for \ changing \ sensor \ cable \ pin \ mapping \ (http://www.dfrobot.com/community/trick-for-changing-sensor-cable-pin-mapping.html)$

Connction Diagram

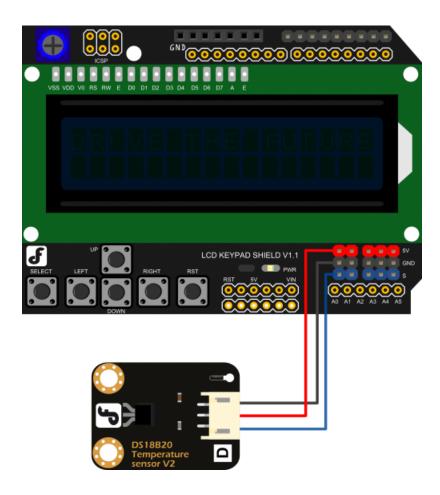



```
Description:
   Reads an analog input on pin 1, prints the result to the LCD.  
   This program takes the temperture sensor LM35 for example.
   Plug the LCD Keypad to the UNO(or other controllers)
   Temperture sensor:
S(blue) -- A1()
     Note: A0 has been occupied.
   VCC(red) -- VCC
GND(black) -- GND
#include <LiquidCrystal.h>
LiquidCrystal lcd(8, 9, 4, 5, 6, 7);
                                               // select the pins used on the LCD panel
unsigned long tepTimer;
void setup(){
    lcd.begin(16, 2);
                                                 // start the library
void loop(){
    lcd.setCursor(0, 0);
                                                // set the LCD cursor
                                                                         position
                                                // variable to store the value coming from the analog pin
    int val;
    double data;
val=analogRead(1);
data = (double) val * (5/10.24);
                                                // variable to store the temperature value coming from the conversion formula // read the analog in value:
                                                // temperature conversion formula
    if(millis() - tepTimer > 500){
    tepTimer = millis();
                                                // output a temperature value per 500ms
              \ensuremath{//} print the results to the 1cd
              lcd.print("T: ");
lcd.print(data);
lcd.print("C");
```

How to use LiquidCrystal library

Function Explanation

LiquidCrystal(rs, enable, d4, d5, d6, d7)

Creates a variable of type LiquidCrystal. The display can be controlled using 4 or 8 data lines. If the former, omit the pin numbers for d0 to d3 and leave those lines unconnected. The RW pin can be tied to ground instead of connected to a pin on the Arduino; if so, omit it from this function's parameters. for example:

LiquidCrystal lcd(8, 9, 4, 5, 6, 7);

lcd.begin(cols, rows)

Initializes the interface to the LCD screen, and specifies the dimensions (width and height) of the display. begin() needs to be called before any other LCD library commands.for example:

lcd.begin(16, 2);

lcd.setCursor(col,row)

Set the location at which subsequent text written to the LCD will be displayed. for example:

lcd.setCursor(0,0);

lcd.print(data)

Prints text to the LCD.for example:

lcd.print("hello, world!");

lcd.write(data)

Write a character to the LCD.

More function can see:

LiquidCrystal Library (http://arduino.cc/en/Reference/LiquidCrystal)

Documents

LCDKeypad Shield v1.1 Schematics (http://www.dfrobot.com/image/data/DFR0009/LCDKeypad%20Shield%20V1.0%20SCH.pdf)

Old version

- LCD Keypad Shield Old Wiki Doc (http://www.dfrobot.com/wiki/index.php/Arduino LCD KeyPad Shield (SKU: DFR0009))
- LCDKeypad Shield Schematics V1.0 (http://www.dfrobot.com/image/data/DFR0009/LCDKeypad%20Shield%20V1.0%20SCH.pdf)
- → Go Shopping LCD Keypad Shield For Arduino (SKU: DFR0009) (http://www.dfrobot.com/index.php? route=product/product&keyword=DFR0009&category_id=0&description=1&model=1&product_id=51)

Retrieved from "https://www.dfrobot.com/wiki/index.php?title=LCD_KeyPad_Shield_For_Arduino_SKU:_DFR0009&oldid=26563" Categories: Product Manual | DFR Series | Shields | LCDs

- This page was last modified on 9 May 2014, at 14:42.
- This page has been accessed 40,001 times.