# The Open Master Hearing Aid (openMHA)

4.7.0

## Plugin Developers' Manual



© 2005-2018 by HörTech gGmbH, Marie-Curie-Str. 2, D-26129 Oldenburg, Germany

#### LICENSE AGREEMENT

This file is part of the HörTech Open Master Hearing Aid (openMHA) Copyright © 2005 2006 2007 2008 2009 2010 2012 2013 2014 2015 2016 HörTech gGmbH. Copyright © 2017 2018 HörTech gGmbH.

openMHA is free software: you can redistribute it and/or modify it under the terms of the GNU Affero General Public License as published by the Free Software Foundation, version 3 of the License.

openMHA is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Affero General Public License, version 3 for more details.

You should have received a copy of the GNU Affero General Public License, version 3 along with openMHA. If not, see <a href="http://www.gnu.org/licenses/">http://www.gnu.org/licenses/</a>>.

### **Contents**

1	Over	view 1
	1.1	Structure
	1.2	Platform Services and Conventions
2	Todo	List 4
3	Modu	ule Documentation 4
3	3.1	Concept of Variables and Data Exchange in the openMHA
	3.2	The openMHA Plugins (programming interface)
	3.3	Writing openMHA Plugins. A step-by-step tutorial
	3.4	The MHA Framework interface
	3.5	
	3.6	Communication between algorithms
	3.7	
	3.8 3.9	
	3.10 3.11	
	3.11	Fast Fourier Transform functions
4	Name	espace Documentation 73
	4.1	ac2lsl Namespace Reference
	4.2	acmon Namespace Reference
	4.3	acsave Namespace Reference
	4.4	addsndfile Namespace Reference
	4.5	ADM Namespace Reference
	4.6	AuditoryProfile Namespace Reference
	4.7	coherence Namespace Reference
	4.8	dc Namespace Reference
	4.9	dc_simple Namespace Reference
	4.10	delay Namespace Reference
	4.11	delaysum Namespace Reference
	4.12	DynComp Namespace Reference
	4.13	fader_wave Namespace Reference
	4.14	fftfbpow Namespace Reference
	4.15	fftfilterbank Namespace Reference
	4.16	gain Namespace Reference
	4.17	matrixmixer Namespace Reference
	4.18	MHA_AC Namespace Reference
	4.19	mha_error_helpers Namespace Reference
	4.20	MHA_TCP Namespace Reference
	4.21	mhachain Namespace Reference
	4.22	MHAEvents Namespace Reference
	4.23	MHAFilter Namespace Reference
	4.24	MHAIOJack Namespace Reference
	4.25	MHAIOJackdb Namespace Reference
	4.26	MHAIOPortAudio Namespace Reference
	4.27	MHAJack Namespace Reference
	4.28	MHAKernel Namespace Reference
	4.29	MHAMultiSrc Namespace Reference
	4.30	MHAOvlFilter Namespace Reference

		MHAOvlFilter::barkscale Namespace Reference
	4.32	MHAOvlFilter::FreqScaleFun Namespace Reference
	4.33	MHAOvlFilter::ShapeFun Namespace Reference
	4.34	MHAParser Namespace Reference
	4.35	MHAParser::StrCnv Namespace Reference
	4.36	MHAPlugin Namespace Reference
	4.37	MHAPlugin_Resampling Namespace Reference
	4.38	MHAPlugin_Split Namespace Reference
	4.39	MHASignal Namespace Reference
	4.40	MHASndFile Namespace Reference
	4.41	MHATableLookup Namespace Reference
	4.42	MHAWindow Namespace Reference
	4.43	multibandcompressor Namespace Reference
	4.44	noisePowProposedScale Namespace Reference
	4.45	overlapadd Namespace Reference
	4.46	plingploing Namespace Reference
	4.47	PluginLoader Namespace Reference
	4.48	route Namespace Reference
	4.49	shadowfilter_begin Namespace Reference
	4.50	shadowfilter_end Namespace Reference
	4.51	smoothgains_bridge Namespace Reference
	4.52	testplugin Namespace Reference
	<b>0</b> 1	
5		ac2lsl::ac2lsl_t Class Reference
	5.1 5.2	
	5.2 5.3	ac2lsl::cfg_t Class Reference
	5.4	ac2lsl::save_var_base_t Class Reference
	5.5	ac2lsl::save_var_t< T > Class Template Reference
	5.6	ac2osc t Class Reference
	5.7	ac2wave if t Class Reference
	5.8	ac2wave t Class Reference
	5.9	acConcat wave Class Reference
		acConcat_wave_config Class Reference
	5.11	acmon::ac monitor t Class Reference
	5.12	acmon::acmon t Class Reference
	5.12	acPooling wave Class Reference
	5.14	acPooling_wave_config Class Reference
	5.15	acsave::acsave_t Class Reference
	5.16	acsave::cfg t Class Reference
	5.17	acsave::mat4head t Struct Reference
	5.18	acsave::save_var_t Class Reference
	5.19	acSteer Class Reference
	5.20	acSteer config Class Reference
	5.21	acTransform wave Class Reference
	5.22	acTransform_wave_config Class Reference
	5.23	addsndfile::addsndfile_if_t Class Reference
	5.24	addsndfile::level_adapt_t Class Reference
	5.25	addsndfile::resampled_soundfile_t Class Reference
	5.26	addsndfile::sndfile_t Class Reference
	5.27	addsndfile::waveform_proxy_t Class Reference
		ADM::ADM< F > Class Template Reference
	5.20	ADMINDING 1 / Oldos fortipiate reference 100

vi CONTENTS

5.29	ADM::Delay< F > Class Template Reference	183
5.30	ADM::Linearphase_FIR< F > Class Template Reference	185
5.31	adm_if_t Class Reference	187
5.32	adm_rtconfig_t Class Reference	189
5.33	algo_comm_t Struct Reference	193
5.34	alsa_base_t Class Reference	198
5.35	alsa_dev_par_parser_t Class Reference	200
5.36	alsa_t< T > Class Template Reference	
5.37	altplugs_t Class Reference	
5.38	analysepath_t Class Reference	
5.39	analysispath_if_t Class Reference	
5.40	AuditoryProfile::fmap_t Class Reference	
5.41	AuditoryProfile::parser_t Class Reference	
5.42	AuditoryProfile::parser_t::ear_t Class Reference	
5.43	AuditoryProfile::parser_t::fmap_t Class Reference	
5.44	AuditoryProfile::profile_t Class Reference	
5.45	AuditoryProfile::profile_t::ear_t Class Reference	
5.46	bbcalib_interface_t Class Reference	
5.47	calibrator_runtime_layer_t Class Reference	
5.48	calibrator t Class Reference	
5.49	calibrator_variables_t Class Reference	
5.50	cfg_t Class Reference	
5.51	coherence::cohflt_if_t Class Reference	
5.52	coherence::cohflt_t Class Reference	
5.53	coherence::vars t Class Reference	
5.54	combc if t Class Reference	
5.55	combc_t Class Reference	
5.56	comm_var_t Struct Reference	
5.57	cpuload_t Class Reference	
5.58	db if t Class Reference	
5.59	db_t Class Reference	
5.60	dc::dc if t Class Reference	
5.61	dc::dc_t Class Reference	
5.62	dc::dc_vars_t Class Reference	
5.63	dc::dc vars validator t Class Reference	
5.64	dc::wb_inhib_cfg_t Class Reference	
5.65	dc::wideband_inhib_vars_t Class Reference	
5.66	dc_simple::dc_if_t Class Reference	
5.67	dc simple::dc t Class Reference	
5.68	dc_simple::dc_t::line_t Class Reference	
5.69	dc_simple::dc_vars_t Class Reference	
5.70	dc_simple::dc_vars_validator_t Class Reference	
5.71	dc_simple::level_smoother_t Class Reference	
5.72	delay::interface_t Class Reference	
5.73	delaysum::delaysum_if_t Class Reference	
5.74	delaysum::delaysum_t Class Reference	
5.75	doasym classification Class Reference	
5.76	doasym_classification_config Class Reference	
5.77	doasym_feature_extraction Class Reference	
5.78	doasym_feature_extraction_config Class Reference	
5.79	droptect t Class Reference	
3.70	<u> </u>	_, 0

CONTENTS vii

5.80 ds_t Class Reference	
5.81 dynamiclib_t Class Reference	
5.82 DynComp::dc_afterburn_rt_t Class Reference	e
5.83 DynComp::dc_afterburn_t Class Reference .	
5.84 DynComp::dc_afterburn_vars_t Class Refere	nce 288
5.85 DynComp::gaintable_t Class Reference	
5.86 example1_t Class Reference	
5.87 example2_t Class Reference	
5.88 example3_t Class Reference	
5.89 example4_t Class Reference	
5.90 example5 t Class Reference	
5.91 example6_t Class Reference	
5.92 expression_t Class Reference	
5.93 fader_if_t Class Reference	
5.94 fader wave::fader wave if t Class Reference	
5.95 fader_wave::level_adapt_t Class Reference	
5.96 fftfbpow::fftfbpow_interface_t Class Reference	
5.97 fftfbpow::fftfbpow t Class Reference	
5.98 fftfilterbank::fftfb_interface_t Class Reference	
5.99 fftfilterbank::fftfb_plug_t Class Reference	
5.100 frequency_translator_t Class Reference	
5.101 fw_t Class Reference	
5.102 fw_vars_t Class Reference	
5.103 gain::gain_if_t Class Reference	
5.104 gain::scaler_t Class Reference	
5.105 hanning_ramps_t Class Reference	
5.106 hilbert_shifter_t Class Reference	
5.107 identity_t Class Reference	
5.108 iirfilter_t Class Reference	
5.109 io_alsa_t Class Reference	
5.110 io_file_t Class Reference	
5.111 io_lib_t Class Reference	
5.112 io_parser_t Class Reference	
5.113 io_tcp_fwcb_t Class Reference	
5.114 io_tcp_parser_t Class Reference	
5.115 io tcp sound t Class Reference	
5.116 io tcp sound t::float union Union Reference	
5.117 io_tcp_t Class Reference	
5.118 latex_doc_t Class Reference	
5.119 lpc Class Reference	
5.120 lpc_bl_predictor Class Reference	
5.121 lpc_bl_predictor_config Class Reference	
5.122 lpc_burglattice Class Reference	
• - •	
5.123 lpc_burglattice_config Class Reference	
5.124 lpc_config Class Reference	
5.125 matrixmixer::cfg_t Class Reference	
5.126 matrixmixer::matmix_t Class Reference	
5.127 MHA_AC::ac2matrix_helper_t Class Reference	
5.128 MHA_AC::ac2matrix_t Class Reference	
5.129 MHA_AC::acspace2matrix_t Class Reference	
5.130 MHA_AC::double_t Class Reference	

viii CONTENTS

5.131 MHA_AC::float_t Class Reference	. 399
5.132 MHA_AC::int_t Class Reference	. 400
5.133 MHA_AC::spectrum_t Class Reference	. 401
5.134 MHA_AC::stat_t Class Reference	
5.135 MHA_AC::waveform_t Class Reference	. 404
5.136 mha_audio_descriptor_t Struct Reference	. 406
5.137 mha_audio_t Struct Reference	
5.138 mha_channel_info_t Struct Reference	
5.139 mha_complex_t Struct Reference	
5.140 mha_dblbuf_t< FIFO > Class Template Reference	
5.141 mha_direction_t Struct Reference	
5.142 mha_drifter_fifo_t< T > Class Template Reference	
5.143 MHA_Error Class Reference	
5.144 mha_fifo_lw_t< T > Class Template Reference	
5.145 mha_fifo_posix_threads_t Class Reference	
$5.146 \text{ mha\_fifo\_t} < T > \text{Class Template Reference}$	
5.147 mha_fifo_thread_guard_t Class Reference	. 434
5.148 mha_fifo_thread_platform_t Class Reference	
5.149 mha_rt_fifo_element_t< T > Class Template Reference	
$5.150 \; mha\_rt\_fifo\_t < T > Class \; Template \; Reference \; $	
5.151 mha_spec_t Struct Reference	
5.152 MHA_TCP::Async_Notify Class Reference	. 444
5.153 MHA_TCP::Client Class Reference	
5.154 MHA_TCP::Connection Class Reference	. 447
5.155 MHA_TCP::Event_Watcher Class Reference	
5.156 MHA_TCP::OS_EVENT_TYPE Struct Reference	
5.157 MHA_TCP::Server Class Reference	
5.158 MHA_TCP::sock_init_t Class Reference	. 459
5.159 MHA_TCP::Sockaccept_Event Class Reference	
5.160 MHA_TCP::Sockread_Event Class Reference	
5.161 MHA_TCP::Sockwrite_Event Class Reference	
5.162 MHA_TCP::Thread Class Reference	. 462
5.163 MHA_TCP::Timeout_Event Class Reference	. 466
5.164 MHA_TCP::Timeout_Watcher Class Reference	. 467
5.165 MHA_TCP::Wakeup_Event Class Reference	. 469
5.166 mha_tictoc_t Struct Reference	. 471
5.167 mha_wave_t Struct Reference	. 472
5.168 mhachain::chain_base_t Class Reference	. 473
5.169 mhachain::mhachain_t Class Reference	
5.170 mhachain::plugs_t Class Reference	. 477
5.171 mhaconfig_t Struct Reference	
5.172 MHAEvents::connector_base_t Class Reference	
5.173 MHAEvents::connector_t< receiver_t > Class Template Reference	
5.174 MHAEvents::emitter_t Class Reference	. 486
5.175 MHAEvents::patchbay_t< receiver_t > Class Template Reference	. 488
5.176 MHAFilter::adapt_filter_param_t Class Reference	. 489
5.177 MHAFilter::adapt_filter_state_t Class Reference	
5.178 MHAFilter::adapt_filter_t Class Reference	. 491
5.179 MHAFilter::blockprocessing_polyphase_resampling_t Class Reference	. 493
5.180 MHAFilter::complex_bandpass_t Class Reference	
5.181 MHAFilter::diff_t Class Reference	. 498

CONTENTS ix

5.182 MHAFilter::fftfilter_t Class Reference	. 499
5.183 MHAFilter::fftfilterbank_t Class Reference	. 503
5.184 MHAFilter::filter_t Class Reference	. 507
5.185 MHAFilter::gamma_flt_t Class Reference	. 511
5.186 MHAFilter::iir_filter_state_t Class Reference	. 514
5.187 MHAFilter::iir_filter_t Class Reference	. 515
5.188 MHAFilter::iir_ord1_real_t Class Reference	. 518
5.189 MHAFilter::o1_ar_filter_t Class Reference	. 521
5.190 MHAFilter::o1flt_lowpass_t Class Reference	
5.191 MHAFilter::o1flt_maxtrack_t Class Reference	
5.192 MHAFilter::o1flt_mintrack_t Class Reference	
5.193 MHAFilter::partitioned_convolution_t Class Reference	
5.194 MHAFilter::partitioned_convolution_t::index_t Struct Reference	
5.195 MHAFilter::polyphase_resampling_t Class Reference	
5.196 MHAFilter::resampling_filter_t Class Reference	
5.197 MHAFilter::smoothspec_t Class Reference	
5.198 MHAFilter::thirdoctave_analyzer_t Class Reference	
5.199 MHAFilter::transfer function t Struct Reference	
5.200 MHAFilter::transfer_matrix_t Struct Reference	
5.201 MHAIOJack::io_jack_t Class Reference	
5.202 MHAIOJackdb::io_jack_t Class Reference	
5.203 MHAIOPortAudio::device_info_t Class Reference	
5.204 MHAIOPortAudio::io_portaudio_t Class Reference	
5.205 MHAJack::client_avg_t Class Reference	
5.206 MHAJack::client_noncont_t Class Reference	
5.207 MHAJack::client_t Class Reference	
5.208 MHAJack::port_t Class Reference	
5.209 MHAKernel::algo_comm_class_t Class Reference	
5.210 MHAKernel::comm_var_map_t Class Reference	
5.211 MHAMultiSrc::base_t Class Reference	
5.212 MHAMultiSrc::channel_t Class Reference	
5.213 MHAMultiSrc::channels_t Class Reference	
5.214 MHAMultiSrc::spectrum_t Class Reference	
5.215 MHAMultiSrc::waveform_t Class Reference	. 586
5.216 MHAOvlFilter::band_descriptor_t Class Reference	. 587
5.217 MHAOvlFilter::barkscale::bark2hz_t Class Reference	. 588
5.218 MHAOvlFilter::barkscale::hz2bark_t Class Reference	. 589
5.219 MHAOvlFilter::fftfb_ac_info_t Class Reference	. 590
5.220 MHAOvlFilter::fftfb_t Class Reference	. 591
5.221 MHAOvlFilter::fftfb_vars_t Class Reference	
5.222 MHAOvlFilter::fscale_bw_t Class Reference	
5.223 MHAOvlFilter::fscale t Class Reference	
5.224 MHAOvlFilter::fspacing_t Class Reference	
5.225 MHAOvIFilter::overlap_save_filterbank_analytic_t Class Reference	
5.226 MHAOvIFilter::overlap_save_filterbank_t Class Reference	
5.227 MHAOvIFilter::overlap_save_filterbank_t::vars_t Class Reference	
5.228 MHAOviFilter::scale_var_t Class Reference	
5.229 MHAParser::base_t Class Reference	
5.230 MHAParser::base_t::replace_t Class Reference	
5.231 MHAParser::bool_mon_t Class Reference	
5.232 MHAParser::bool_t Class Reference	. 0∠0

X CONTENTS

5.233 MHAParser::c_ifc_parser_t Class Reference	. 623
5.234 MHAParser::commit_t< receiver_t > Class Template Reference	. 625
5.235 MHAParser::complex_mon_t Class Reference	. 627
5.236 MHAParser::complex_t Class Reference	. 629
5.237 MHAParser::entry_t Class Reference	. 631
5.238 MHAParser::expression_t Class Reference	. 632
5.239 MHAParser::float_mon_t Class Reference	. 633
5.240 MHAParser::float_t Class Reference	
5.241 MHAParser::int_mon_t Class Reference	
5.242 MHAParser::int_t Class Reference	
5.243 MHAParser::keyword_list_t Class Reference	
5.244 MHAParser::kw_t Class Reference	
5.245 MHAParser::mcomplex_mon_t Class Reference	
5.246 MHAParser::mcomplex_t Class Reference	
5.247 MHAParser::mfloat_mon_t Class Reference	
5.248 MHAParser::mfloat_t Class Reference	
5.249 MHAParser::mhaconfig_mon_t Class Reference	
5.250 MHAParser::mhapluginloader_t Class Reference	
5.251 MHAParser::mint_mon_t Class Reference	
5.252 MHAParser::monitor_t Class Reference	
5.253 MHAParser::parser_t Class Reference	
5.254 MHAParser::range_var_t Class Reference	
<del>-</del>	
5.255 MHAParser::string_mon_t Class Reference	
5.256 MHAParser::string_t Class Reference	
5.257 MHAParser::variable_t Class Reference	
5.258 MHAParser::vcomplex_mon_t Class Reference	
5.259 MHAParser::vcomplex_t Class Reference	
5.260 MHAParser::vfloat_mon_t Class Reference	
5.261 MHAParser::vfloat_t Class Reference	
5.262 MHAParser::vint_mon_t Class Reference	
5.263 MHAParser::vint_t Class Reference	
5.264 MHAParser::vstring_mon_t Class Reference	
5.265 MHAParser::vstring_t Class Reference	. 692
5.266 MHAParser::window_t Class Reference	
5.267 mhaplug_cfg_t Class Reference	
5.268 MHAPlugin::cfg_chain_t< runtime_cfg_t > Class Template Reference	
5.269 MHAPlugin::config_t< runtime_cfg_t > Class Template Reference	
$5.270\ MHAP lugin:: plugin\_t < runtime\_cfg\_t > Class\ Template\ Reference \ . \ . \ . \ . \ .$	
5.271 MHAPlugin_Resampling::resampling_if_t Class Reference	
5.272 MHAPlugin_Resampling::resampling_t Class Reference	
5.273 MHAPlugin_Split::domain_handler_t Class Reference	
5.274 MHAPlugin_Split::dummy_threads_t Class Reference	
5.275 MHAPlugin_Split::posix_threads_t Class Reference	
5.276 MHAPlugin_Split::split_t Class Reference	. 722
5.277 MHAPlugin_Split::splitted_part_t Class Reference	. 726
5.278 MHAPlugin_Split::thread_platform_t Class Reference	. 731
5.279 MHAPlugin_Split::uni_processor_t Class Reference	. 734
5.280 mhaserver_t Class Reference	. 735
5.281 MHASignal::async_rmslevel_t Class Reference	. 738
5.282 MHASignal::delay_spec_t Class Reference	. 740
5.283 MHASignal::delay_t Class Reference	. 741

CONTENTS xi

5.284 MHASignal::delay_wave_t Class Reference	. 743
5.285 MHASignal::doublebuffer_t Class Reference	. 744
5.286 MHASignal::fft_t Class Reference	. 747
5.287 MHASignal::hilbert_fftw_t Class Reference	. 750
5.288 MHASignal::hilbert_t Class Reference	
5.289 MHASignal::loop_wavefragment_t Class Reference	
5.290 MHASignal::matrix_t Class Reference	
5.291 MHASignal::minphase_t Class Reference	
5.292 MHASignal::quantizer_t Class Reference	
5.293 MHASignal::ringbuffer_t Class Reference	
5.294 MHASignal::schroeder_t Class Reference	
5.295 MHASignal::spectrum_t Class Reference	
5.296 MHASignal::stat_t Class Reference	
5.297 MHASignal::subsample_delay_t Class Reference	
• • •	
5.298 MHASignal::uint_vector_t Class Reference	
5.299 MHASignal::waveform_t Class Reference	
5.300 MHASndFile::sf_t Class Reference	
5.301 MHASndFile::sf_wave_t Class Reference	
5.302 MHATableLookup::linear_table_t Class Reference	
5.303 MHATableLookup::table_t Class Reference	
5.304 MHATableLookup::xy_table_t Class Reference	
5.305 MHAWindow::bartlett_t Class Reference	
5.306 MHAWindow::base_t Class Reference	. 810
5.307 MHAWindow::blackman_t Class Reference	. 812
5.308 MHAWindow::fun_t Class Reference	. 813
5.309 MHAWindow::hamming_t Class Reference	. 814
5.310 MHAWindow::hanning_t Class Reference	
5.311 MHAWindow::rect_t Class Reference	
5.312 MHAWindow::user_t Class Reference	
5.313 mon_t Class Reference	
5.314 multibandcompressor::fftfb_plug_t Class Reference	
5.315 multibandcompressor::interface_t Class Reference	
5.316 multibandcompressor::plugin_signals_t Class Reference	
5.317 nlms_t Class Reference	
5.318 noise t Class Reference	
5.319 noisePowProposedScale::interface t Class Reference	
5.320 noisePowProposedScale::noisePowProposed Class Reference	
· · · · · · · · · · · · · · · · · · ·	
5.321 overlapadd::overlapadd_if_t Class Reference	
5.322 overlapadd::overlapadd_t Class Reference	
5.323 parser_int_dyn Class Reference	
5.324 plingploing::if_t Class Reference	
5.325 plingploing::plingploing_t Class Reference	
5.326 plug_t Class Reference	
5.327 plugin_interface_t Class Reference	
5.328 pluginbrowser_t Class Reference	
5.329 plugindescription_t Class Reference	
5.330 PluginLoader::config_file_splitter_t Class Reference	. 851
5.331 PluginLoader::fourway_processor_t Class Reference	. 852
5.332 PluginLoader::mhapluginloader_t Class Reference	. 855
5.333 pluginloader_t Class Reference	
5.334 prediction_error Class Reference	
· · · · · · · · · · · · · · · · · · ·	

xii CONTENTS

5.336 rmslevel_if_t Class Reference	364
	367
5.337 rmslevel t Class Reference	369
5.338 route::interface_t Class Reference	370
5.339 route::process_t Class Reference	
5.340 rt_nlms_t Class Reference	
5.341 save_spec_t Class Reference	
5.342 save_wave_t Class Reference	
5.343 shadowfilter_begin::cfg_t Class Reference	
5.344 shadowfilter_begin::shadowfilter_begin_t Class Reference	
5.345 shadowfilter_end::cfg_t Class Reference	
5.346 shadowfilter_end::shadowfilter_end_t Class Reference	
5.347 sine_cfg_t Struct Reference	
5.348 sine_t Class Reference	
5.349 smoothgains_bridge::overlapadd_if_t Class Reference	
5.350 smoothgains_bridge::smoothspec_wrap_t Class Reference	
5.351 softclip_t Class Reference	
5.352 softclipper_t Class Reference	
5.353 softclipper_variables_t Class Reference	
5.354 spec2wave_if_t Class Reference	395
5.355 spec2wave_t Class Reference	397
5.356 spec_fader_t Class Reference	398
5.357 speechnoise_t Class Reference	399
5.358 steerbf Class Reference	
5.359 steerbf_config Class Reference	
5.360 testplugin::ac_parser_t Class Reference	
5.361 testplugin::config_parser_t Class Reference	
5 362 testnluging t Class Reference	วกด
5.362 testplugin::if_t Class Reference	
5.363 testplugin::signal_parser_t Class Reference	911
5.363 testplugin::signal_parser_t Class Reference	911 912
5.363 testplugin::signal_parser_t Class Reference	911 912 914
5.363 testplugin::signal_parser_t Class Reference95.364 timo_AC Class Reference95.365 timo_params Class Reference95.366 timoConfig Class Reference9	911 912 914 915
5.363 testplugin::signal_parser_t Class Reference95.364 timo_AC Class Reference95.365 timo_params Class Reference95.366 timoConfig Class Reference95.367 timoSmooth Class Reference9	911 912 914 915 919
5.363 testplugin::signal_parser_t Class Reference95.364 timo_AC Class Reference95.365 timo_params Class Reference95.366 timoConfig Class Reference95.367 timoSmooth Class Reference95.368 us_t Class Reference9	911 912 914 915 919
5.363 testplugin::signal_parser_t Class Reference95.364 timo_AC Class Reference95.365 timo_params Class Reference95.366 timoConfig Class Reference95.367 timoSmooth Class Reference95.368 us_t Class Reference95.369 wave2spec_if_t Class Reference9	911 912 914 915 919 922
5.363 testplugin::signal_parser_t Class Reference95.364 timo_AC Class Reference95.365 timo_params Class Reference95.366 timoConfig Class Reference95.367 timoSmooth Class Reference95.368 us_t Class Reference95.369 wave2spec_if_t Class Reference95.370 wave2spec_t Class Reference9	911 914 915 919 922 924
5.363 testplugin::signal_parser_t Class Reference95.364 timo_AC Class Reference95.365 timo_params Class Reference95.366 timoConfig Class Reference95.367 timoSmooth Class Reference95.368 us_t Class Reference95.369 wave2spec_if_t Class Reference95.370 wave2spec_t Class Reference95.371 wavrec_t Class Reference9	911 912 914 915 922 924 926
5.363 testplugin::signal_parser_t Class Reference95.364 timo_AC Class Reference95.365 timo_params Class Reference95.366 timoConfig Class Reference95.367 timoSmooth Class Reference95.368 us_t Class Reference95.369 wave2spec_if_t Class Reference95.370 wave2spec_t Class Reference95.371 wavrec_t Class Reference95.372 wavwriter_t Class Reference9	911 912 914 915 922 924 928 928
5.363 testplugin::signal_parser_t Class Reference95.364 timo_AC Class Reference95.365 timo_params Class Reference95.366 timoConfig Class Reference95.367 timoSmooth Class Reference95.368 us_t Class Reference95.369 wave2spec_if_t Class Reference95.370 wave2spec_t Class Reference95.371 wavrec_t Class Reference9	911 912 914 915 922 924 928 928
5.363 testplugin::signal_parser_t Class Reference 5.364 timo_AC Class Reference 5.365 timo_params Class Reference 5.366 timoConfig Class Reference 5.367 timoSmooth Class Reference 5.368 us_t Class Reference 5.369 wave2spec_if_t Class Reference 5.370 wave2spec_t Class Reference 5.371 wavrec_t Class Reference 5.372 wavwriter_t Class Reference 5.373 windowselector_t Class Reference	911 912 914 915 919 924 926 930 932
5.363 testplugin::signal_parser_t Class Reference 5.364 timo_AC Class Reference 5.365 timo_params Class Reference 5.366 timoConfig Class Reference 5.367 timoSmooth Class Reference 5.368 us_t Class Reference 5.369 wave2spec_if_t Class Reference 5.370 wave2spec_t Class Reference 5.371 wavrec_t Class Reference 5.372 wavwriter_t Class Reference 5.373 windowselector_t Class Reference 5.373 windowselector_t Class Reference	911 912 914 915 919 922 924 928 930 932
5.363 testplugin::signal_parser_t Class Reference 5.364 timo_AC Class Reference 5.365 timo_params Class Reference 5.366 timoConfig Class Reference 5.367 timoSmooth Class Reference 5.368 us_t Class Reference 5.369 wave2spec_if_t Class Reference 5.370 wave2spec_t Class Reference 5.371 wavrec_t Class Reference 5.372 wavwriter_t Class Reference 5.373 windowselector_t Class Reference 5.373 windowselector_t Class Reference 5.373 windowselector_t Class Reference 5.374 macclest Class Reference 5.375 mindowselector_t Class Reference 5.376 mindowselector_t Class Reference 5.377 mindowselector_t Class Reference	911 912 914 915 919 922 924 930 932 935
5.363 testplugin::signal_parser_t Class Reference 5.364 timo_AC Class Reference 5.365 timo_params Class Reference 5.366 timoConfig Class Reference 5.367 timoSmooth Class Reference 5.368 us_t Class Reference 5.369 wave2spec_if_t Class Reference 5.370 wave2spec_t Class Reference 5.371 wavrec_t Class Reference 5.372 wavwriter_t Class Reference 5.373 windowselector_t Class Reference 5.373 windowselector_t Class Reference 5.374 wavrec_t Class Reference 5.375 wavrec_t Class Reference 5.376 wave2spec_t Class Reference 5.377 wavrec_t Class Reference 5.378 wavriter_t Class Reference 5.379 wavriter_t Class Reference 5.370 wave2spec_t Class Reference	911 912 914 915 919 922 926 926 935 935 935
5.363 testplugin::signal_parser_t Class Reference 5.364 timo_AC Class Reference 5.365 timo_params Class Reference 5.366 timoConfig Class Reference 5.367 timoSmooth Class Reference 5.368 us_t Class Reference 5.369 wave2spec_if_t Class Reference 5.370 wave2spec_t Class Reference 5.371 wavrec_t Class Reference 5.372 wavwriter_t Class Reference 5.373 windowselector_t Class Reference 5.373 windowselector_t Class Reference 6.1 ac2lsl.cpp File Reference 6.2 ac2osc.cpp File Reference 6.3 ac2wave.cpp File Reference	911 912 914 915 919 922 924 926 935 935 935
5.363 testplugin::signal_parser_t Class Reference 5.364 timo_AC Class Reference 5.365 timo_params Class Reference 5.366 timoConfig Class Reference 5.367 timoSmooth Class Reference 5.368 us_t Class Reference 5.369 wave2spec_if_t Class Reference 5.370 wave2spec_t Class Reference 5.371 wavrec_t Class Reference 5.372 wavwriter_t Class Reference 5.373 windowselector_t Class Reference 5.373 windowselector_t Class Reference 6.1 ac2lsl.cpp File Reference 6.2 ac2osc.cpp File Reference 6.3 ac2wave.cpp File Reference 6.4 ac_monitor_type.cpp File Reference	911 912 914 915 919 929 926 928 932 935 935 935
5.363 testplugin::signal_parser_t Class Reference 5.364 timo_AC Class Reference 5.365 timo_params Class Reference 5.366 timoConfig Class Reference 5.367 timoSmooth Class Reference 5.368 us_t Class Reference 5.369 wave2spec_if_t Class Reference 5.370 wave2spec_t Class Reference 5.371 wavrec_t Class Reference 5.372 wavwriter_t Class Reference 5.373 windowselector_t Class Reference 5.373 windowselector_t Class Reference 6.1 ac2lsl.cpp File Reference 6.2 ac2osc.cpp File Reference 6.3 ac2wave.cpp File Reference 6.4 ac_monitor_type.cpp File Reference 6.5 ac_monitor_type.hh File Reference	911 912 914 915 915 915 915 915 915 915 915 915 915
5.363 testplugin::signal_parser_t Class Reference 5.364 timo_AC Class Reference 5.365 timo_params Class Reference 5.366 timoConfig Class Reference 5.367 timoSmooth Class Reference 5.368 us_t Class Reference 5.369 wave2spec_if_t Class Reference 5.370 wave2spec_t Class Reference 5.371 wavrec_t Class Reference 5.372 wavwriter_t Class Reference 5.373 windowselector_t Class Reference 5.373 windowselector_t Class Reference 6.2 ac2osc.cpp File Reference 6.3 ac2wave.cpp File Reference 6.4 ac_monitor_type.cpp File Reference 6.5 ac_monitor_type.hh File Reference 6.6 acConcat_wave.cpp File Reference	911 912 914 915 919 919 919 924 926 930 935 935 935 935 935
5.363 testplugin::signal_parser_t Class Reference 5.364 timo_AC Class Reference 5.365 timo_params Class Reference 5.366 timoConfig Class Reference 5.366 timoSmooth Class Reference 5.368 us_t Class Reference 5.369 wave2spec_if_t Class Reference 5.370 wave2spec_if_t Class Reference 5.371 wavrec_t Class Reference 5.372 wavwriter_t Class Reference 5.373 windowselector_t Class Reference 6.1 ac2lsl.cpp File Reference 6.2 ac2osc.cpp File Reference 6.3 ac2wave.cpp File Reference 6.4 ac_monitor_type.cpp File Reference 6.5 ac_monitor_type.hh File Reference 6.6 acConcat_wave.cpp File Reference 6.7 acConcat_wave.h File Reference	911 912 912 914 919 919 919 919 919 919 919 919 919
5.363 testplugin::signal_parser_t Class Reference 5.364 timo_AC Class Reference 5.365 timo_params Class Reference 5.366 timoConfig Class Reference 5.367 timoSmooth Class Reference 5.368 us_t Class Reference 5.369 wave2spec_if_t Class Reference 5.370 wave2spec_t Class Reference 5.371 wavrec_t Class Reference 5.372 wavwriter_t Class Reference 5.373 windowselector_t Class Reference 6.1 ac2lsl.cpp File Reference 6.2 ac2osc.cpp File Reference 6.3 ac2wave.cpp File Reference 6.4 ac_monitor_type.cpp File Reference 6.5 ac_monitor_type.hh File Reference 6.6 acConcat_wave.cpp File Reference 6.7 acConcat_wave.h File Reference 6.8 acmon.cpp File Reference	9111 9129 914 915 919 919 919 919 919 919 919 919 919
5.363 testplugin::signal_parser_t Class Reference       5.364 timo_AC Class Reference         5.365 timo_params Class Reference       5.365 timo_params Class Reference         5.366 timoConfig Class Reference       5.367 timoSmooth Class Reference         5.368 us_t Class Reference       5.369 wave2spec_if_t Class Reference         5.370 wave2spec_t Class Reference       5.371 wavrec_t Class Reference         5.372 wavwriter_t Class Reference       5.372 wavwriter_t Class Reference         5.373 windowselector_t Class Reference       5.373 windowselector_t Class Reference         6.2 ac2sc.cpp File Reference       5.373 windowselector_t Class Reference         6.2 ac2osc.cpp File Reference       5.373 windowselector_t Class Reference         6.2 ac2osc.cpp File Reference       5.373 windowselector_t Class Reference         6.3 ac2wave.cpp File Reference       5.373 windowselector_t Class Reference         6.4 ac_monitor_type.cpp File Reference       5.373 windowselector_t Class Reference         6.4 ac_monitor_type.hh File Reference       5.373 windowselector_t Class Reference         6.5 ac_monitor_type.hh File Reference       5.374 wave.cpp File Reference         6.6 acConcat_wave.h File Reference       5.375 wave.cpp File Reference         6.8 acmon.cpp File Reference       5.375 wave.cpp File Reference         6.9 acPooling_wave.cpp File Reference       5.375 wave.cpp File Reference	911 912 912 915 919 915 915 915 915 915 915 915 915
5.363 testplugin::signal_parser_t Class Reference 5.364 timo_AC Class Reference 5.365 timo_params Class Reference 5.366 timoConfig Class Reference 5.367 timoSmooth Class Reference 5.368 us_t Class Reference 5.369 wave2spec_if_t Class Reference 5.370 wave2spec_t Class Reference 5.371 wavrec_t Class Reference 5.372 wavwriter_t Class Reference 5.373 windowselector_t Class Reference 6.1 ac2lsl.cpp File Reference 6.2 ac2osc.cpp File Reference 6.3 ac2wave.cpp File Reference 6.4 ac_monitor_type.cpp File Reference 6.5 ac_monitor_type.hh File Reference 6.6 acConcat_wave.cpp File Reference 6.7 acConcat_wave.h File Reference 6.8 acmon.cpp File Reference	911 912 912 914 915 919 919 918 918 918 918 918 918 918 918

6

CONTENTS xiii

6.12	acSteer.cpp File Reference	
6.13	acSteer.h File Reference	938
6.14	acTransform_wave.cpp File Reference	938
6.15	acTransform_wave.h File Reference	939
6.16	addsndfile.cpp File Reference	939
6.17	adm.cpp File Reference	940
6.18	adm.hh File Reference	940
6.19	altplugs.cpp File Reference	941
6.20	analysemhaplugin.cpp File Reference	941
6.21	analysispath.cpp File Reference	942
6.22	auditory_profile.cpp File Reference	942
6.23	auditory_profile.h File Reference	942
6.24	browsemhaplugins.cpp File Reference	943
6.25	coherence.cpp File Reference	
6.26	combinechannels.cpp File Reference	
6.27	compiler id.cpp File Reference	
6.28	compiler id.hh File Reference	
6.29	complex_filter.cpp File Reference	
6.30	complex_filter.h File Reference	
6.31	cpuload.cpp File Reference	
6.32	db.cpp File Reference	
6.33	dc.cpp File Reference	
6.34	dc_afterburn.cpp File Reference	
6.35	dc_afterburn.h File Reference	
6.36	dc_simple.cpp File Reference	
6.37	delay.cpp File Reference	
6.38	delaysum.cpp File Reference	
6.39	doasym_classification.cpp File Reference	
6.40	doasym_classification.h File Reference	
6.41	doasym_feature_extraction.cpp File Reference	
6.42	doasym feature extraction.h File Reference	
6.43	doc_appendix.h File Reference	
6.44	<del></del>	950
6.45	doc frameworks.h File Reference	
6.46	doc general.h File Reference	
6.47	doc kernel.h File Reference	
6.48	doc matlab.h File Reference	
6.49	doc_mhamain.h File Reference	
6.50	doc parser.h File Reference	
6.51	doc_plugif.cpp File Reference	
6.52	doc_plugins.h File Reference	
6.53	doc system.h File Reference	
6.54	doc toolbox.h File Reference	
6.55	downsample.cpp File Reference	
6.56	droptect.cpp File Reference	
6.57	example1.cpp File Reference	
6.58	example2.cpp File Reference	
6.59	example3.cpp File Reference	
6.60	example4.cpp File Reference	
6.61	example5.cpp File Reference	
6.62	example6.cpp File Reference	
3.32	Charles and the control of the contr	-

xiv CONTENTS

6.63	fader_spec.cpp File Reference	952
6.64	fader_wave.cpp File Reference	952
6.65	fftfbpow.cpp File Reference	953
6.66	fftfilterbank.cpp File Reference	953
6.67	fshift_hilbert.cpp File Reference	953
6.68	gain.cpp File Reference	954
6.69	gaintable.cpp File Reference	954
6.70	gaintable.h File Reference	
6.71	generatemhaplugindoc.cpp File Reference	
6.72	hann.cpp File Reference	
6.73	hann.h File Reference	
6.74	identity.cpp File Reference	
6.75	ifftshift.cpp File Reference	
	ifftshift.h File Reference	
6.77	iirfilter.cpp File Reference	
6.78	lpc.cpp File Reference	
	lpc.h File Reference	
6.80	lpc_bl_predictor.cpp File Reference	
6.81	lpc_bl_predictor.h File Reference	
6.82	lpc_burg-lattice.cpp File Reference	
6.83	lpc_burg-lattice.h File Reference	
6.84	matrixmixer.cpp File Reference	
6.85	mha.cpp File Reference	
6.86	mha.h File Reference	
6.87	mha_algo_comm.cpp File Reference	
6.88	mha_algo_comm.h File Reference	
6.89	mha_algo_comm.hh File Reference	
6.90	mha_defs.h File Reference	
6.91	mha_errno.c File Reference	
6.92	mha_errno.h File Reference	
6.93	mha_error.cpp File Reference	
6.94	mha_error.hh File Reference	
	mha_event_emitter.h File Reference	
	mha_events.cpp File Reference	
6.97	mha events.h File Reference	
	mha_fftfb.cpp File Reference	
	mha_fftfb.hh File Reference	
	mha_fifo.cpp File Reference	
	mha fifo.h File Reference	
	mha_filter.cpp File Reference	
	mha_filter.hh File Reference	
	mha generic chain.cpp File Reference	
	mha_generic_chain.h File Reference	
	mha_io_ifc.h File Reference	
	mha_multisrc.cpp File Reference	
	mha_multisrc.h File Reference	
	mha_os.cpp File Reference	
	mha_os.h File Reference	
	mha_parser.cpp File Reference	
	mha_parser.hh File Reference	
ь.113	mha_plugin.hh File Reference	989

CONTENTS xv

C 444 mbs, mostling a Ella Defenses	000
6.114 mha_profiling.c File Reference	
6.115 mha_profiling.h File Reference	
6.116 mha_ruby.cpp File Reference	
6.117 mha_signal.cpp File Reference	
6.118 mha_signal.hh File Reference	
6.119 mha_signal_fft.h File Reference	
6.120 mha_tablelookup.cpp File Reference	.1006
6.121 mha_tablelookup.hh File Reference	.1006
6.122 mha_tcp.cpp File Reference	.1007
6.123 mha_tcp.hh File Reference	.1008
6.124 mha_toolbox.h File Reference	.1010
6.125 mha_windowparser.cpp File Reference	.1010
6.126 mha_windowparser.h File Reference	.1010
6.127 mhachain.cpp File Reference	
6.128 mhafw_lib.cpp File Reference	
6.129 mhafw_lib.h File Reference	
6.130 MHAIOalsa.cpp File Reference	
6.131 MHAIOFile.cpp File Reference	
6.132 MHAIOJack.cpp File Reference	
6.133 MHAIOJackdb.cpp File Reference	
6.134 MHAIOParser.cpp File Reference	
6.135 MHAIOPortAudio.cpp File Reference	
6.136 MHAIOTCP.cpp File Reference	
6.137 mhajack.cpp File Reference	
6.138 mhajack.h File Reference	
6.139 mhamain.cpp File Reference	
6.141 mhapluginloader b. File Reference	
6.141 mhapluginloader.h File Reference	
6.142 mhasndfile.cpp File Reference	
6.143 mhasndfile.h File Reference	
6.144 multibandcompressor.cpp File Reference	
6.145 nlms_wave.cpp File Reference	
6.146 noise.cpp File Reference	
6.147 noisePowProposedScale.cpp File Reference	
6.148 overlapadd.cpp File Reference	
6.149 plingploing.cpp File Reference	
6.150 pluginbrowser.cpp File Reference	
6.151 pluginbrowser.h File Reference	
6.152 prediction_error.cpp File Reference	
6.153 prediction_error.h File Reference	
6.154 resampling.cpp File Reference	.1041
6.155 rmslevel.cpp File Reference	
6.156 route.cpp File Reference	.1041
6.157 save_spec.cpp File Reference	.1041
6.158 save_wave.cpp File Reference	.1041
6.159 shadowfilter_begin.cpp File Reference	.1042
6.160 shadowfilter_end.cpp File Reference	
6.161 sine.cpp File Reference	
6.162 smoothgains_bridge.cpp File Reference	
6.163 softclip.cpp File Reference	
6.164 spec2waye.cpp File Reference	

xvi CONTENTS

1 Overview 1

#### 1 Overview

The HörTech Open Master Hearing Aid (openMHA), is a development and evaluation software platform that is able to execute hearing aid signal processing in real-time on standard computing hardware with a low delay between sound input and output.

#### 1.1 Structure

The openMHA can be split into four major components:

- The openMHA command line application (MHA) (p. 29)
- Signal processing plugins (p. 6)
- Audio input-output (IO) plugins (see io\_file\_t (p. 345), MHAIOJack (p. 91), io\_parser\_t (p. 352), io tcp parser t (p. 358))
- The openMHA toolbox library (p. 30)

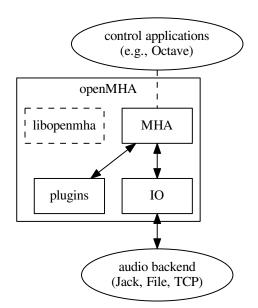


Figure 1 openMHA structure

The openMHA command line application (MHA) (p. 29) acts as a plugin host. It can load signal processing plugins as well as audio input-output (IO) plugins. Additionally, it provides the command line configuration interface and a TCP/IP based configuration interface. Several IO plugins exist: For real-time signal processing, commonly the openMHA MHAIOJack (p. 91) plugin (see plugins' manual) is used, which provides an interface to the Jack Audio Connection Kit (JACK). Other IO plugins provide audio file access or TCP/IP-based processing.

**openMHA plugins** (p. 6) provide the audio signal processing capabilities and audio signal handling. Typically, one openMHA plugin implements one specific algorithm. The complete virtual hearing aid signal processing can be achieved by a combination of several openMHA plugins.

#### 1.2 Platform Services and Conventions

The openMHA platform offers some services and conventions to algorithms implemented in plugins, that make it especially well suited to develop hearing aid algorithms, while still supporting general-purpose signal processing.

#### 1.2.1 Audio Signal Domains

As in most other plugin hosts, the audio signal in the openMHA is processed in audio chunks. However, plugins are not restricted to propagate audio signal as blocks of audio samples in the time domain another option is to propagate the audio signal in the short time Fourier transform (STFT) domain, i.e. as spectra of blocks of audio signal, so that not every plugin has to perform its own STFT analysis and synthesis. Since STFT analysis and re-synthesis of acceptable audio quality always introduces an algorithmic delay, sharing STFT data is a necessity for a hearing aid signal processing platform, because the overall delay of the complete processing has to be as short as possible.

Similar to some other platforms, the openMHA allows also arbitrary data to be exchanged between plugins through a mechanism called **algorithm communication variables** (p. 23) or short "AC vars". This mechanism is commonly used to share data such as filter coefficients or filter states.

#### 1.2.2 Real-Time Safe Complex Configuration Changes

Hearing aid algorithms in the openMHA can export configuration settings that may be changed by the user at run time.

To ensure real-time safe signal processing, the audio processing will normally be done in a signal processing thread with real-time priority, while user interaction with configuration parameters would be performed in a configuration thread with normal priority, so that the audio processing does not get interrupted by configuration tasks. Two types of problems may occur when the user is changing parameters in such a setup:

- The change of a simple parameter exposed to the user may cause an involved recalculation of internal runtime parameters that the algorithm actually uses in processing. The duration required to perform this recalculation may be a significant portion of (or take even longer than) the time available to process one block of audio signal. In hearing aid usage, it is not acceptable to halt audio processing for the duration that the recalculation may require.
- If the user needs to change multiple parameters to reach a desired configuration state
  of an algorithm from the original configuration state, then it may not be acceptable that
  processing is performed while some of the parameters have already been changed while
  others still retain their original values. It is also not acceptable to interrupt signal processing until all pending configuration changes have been performed.

The openMHA provides a mechanism in its toolbox library to enable real-time safe configuration changes in openMHA plugins:

Basically, existing runtime configurations are used in the processing thread until the work of creating an updated runtime configuration has been completed in the configuration thread.

In hearing aids, it is more acceptable to continue to use an outdated configuration for a few more milliseconds than blocking all processing.

The openMHA toolbox library provides an easy-to-use mechanism to integrate real-time safe runtime configuration updates into every plugin.

#### 1.2.3 Plugins can Themselves Host Other Plugins

An openMHA plugin can itself act as a plugin host. This allows to combine analysis and resynthesis methods in a single plugin. We call plugins that can themselves load other plugins "bridge plugins" in the openMHA.

When such a bridge plugin is then called by the openMHA to process one block of signal, it will first perform its analysis, then invoke (as a function call) the signal processing in the loaded plugin to process the block of signal in the analysis domain, wait to receive a processed block of signal in the analysis domain back from the loaded plugin when the signal processing function call to that plugin returns, then perform the re-synthesis transform, and finally return the block of processed signal in the original domain back to the caller of the bridge plugin.

#### 1.2.4 Central Calibration

The purpose of hearing aid signal processing is to enhance the sound for hearing impaired listeners. Hearing impairment generally means that people suffering from it have increased hearing thresholds, i.e. soft sounds that are audible for normal hearing listeners may be imperceptible for hearing impaired listeners. To provide accurate signal enhancement for hearing impaired people, hearing aid signal processing algorithms have to be able to determine the absolute physical sound pressure level corresponding to a digital signal given to any openM← HA plugin for processing. Inside the openMHA, we achieve this with the following convention: The single-precision floating point time-domain sound signal samples, that are processed inside the openMHA plugins in blocks of short durations, have the physical pressure unit Pascal (  $1Pa = 1N/m^2$ ). With this convention in place, all plugins can determine the absolute physical sound pressure level from the sound samples that they process. A derived convention is employed in the spectral domain for STFT signals. Due to the dependency of the calibration on the hardware used, it is the responsibility of the user of the openMHA to perform calibration measurements and adapt the openMHA settings to make sure that this calibration convention is met. We provide the plugin transducers which can be configured to perform the necessary signal adjustments.

#### 2 Todo List

#### Class AuditoryProfile::profile\_t (p. 218)

Give more documentation; implement all parts of the auditory profile.

#### Class mhaconfig\_t (p. 480)

Add information on number of bands and on center frequencies, or replace by **mha\_audio**← **\_descriptor\_t** (p. 406).

#### Class MHAFilter::filter\_t (p. 507)

Implement a more robust filter form.

#### Member MHAFilter::polyphase resampling t::now index (p. 539)

Index into what? What is the meaning of now?

```
Class MHAPlugin::plugin_t< runtime_cfg_t > (p. 703)
```

Describe all services provided by this class, so that the reason why it is recommended that all plugins use this class as their base is evident. Document all relevant methods and fields.

#### 3 Module Documentation

#### 3.1 Concept of Variables and Data Exchange in the openMHA

Accessibility of configuration variables and data exchange between plugins (processing blocks) are an important issue in the openMHA.

Accessibility of configuration variables and data exchange between plugins (processing blocks) are an important issue in the openMHA.

In general, variable types in the openMHA are distinguished by their different access methods. The variable types in the openMHA are:

- Configuration variables: Read and write accesses are possible through the openM← HA configuration language interface. Configuration variables are implemented as C++ classes with a public data member of the underlying C type. Configuration variables can be read and modified from "outside" using the configuration language. The plugin which provides the configuration variable can use the exposed data member directly. All accesses through the openMHA configuration language are checked for data type, valid range, and access restrictions.
- **Monitor variables**: Read access is possible through the openMHA configuration language. Write access is only possible from the C++ code. Internally, monitor variables have a similar C++ class interface as configuration variables.
- AC variables (algorithm communication variables (p. 23)): Any C or C++ data structure can be shared within an openMHA chain. Access management and name space is realised in openMHA chain plugin ('mhachain'). AC variables are not available to the openMHA configuration language interface, although a read-only converter plugin acmon is available.

• Runtime configuration: Algorithms usually derive more parameters (runtime configuration) from the openMHA configuration language variables. When a configuration variable changes through configuration language write access, then the runtime configuration has to be recomputed. Plugin developers are encouraged to encapsulate the runtime configuration in a C++ class, which recomputes the runtime configuration from configuration variables in the constructor. The openMHA supports lock-free and thread-safe replacement of the runtime configuration instance (see example5.cpp (p. 17) and references therein).

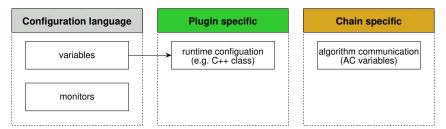


Figure 2 Variable types in the openMHA

The C++ data types are shown in the figure below. These variables can be accessed via the openMHA host application using the openMHA configuration language. For more details see 'Application engineers' manual'.

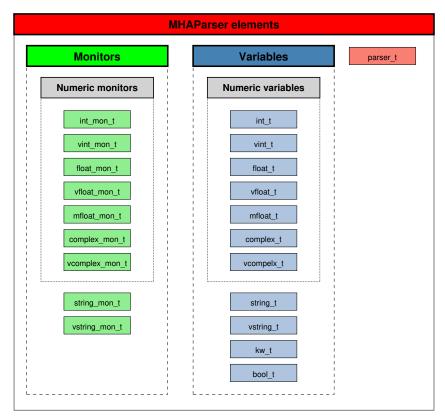


Figure 3 MHAParser elements

#### 3.2 The openMHA Plugins (programming interface)

An openMHA plugin is the signal processing unit, usually an algorithm.

#### Classes

class MHAPlugin::plugin\_t < runtime\_cfg\_t >
 The template class for C++ openMHA plugins.

#### **Macros**

- #define **MHAPLUGIN\_CALLBACKS\_PREFIX**(prefix, classname, indom, outdom)

  C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN\_CALLBACKS(plugname, classname, indom, outdom) MHAPLU
  GIN\_CALLBACKS\_PREFIX(MHA\_STATIC\_## plugname ## \_,classname,indom,outdom)
  C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN\_DOCUMENTATION(plugname, cat, doc) MHAPLUGIN\_DOCU
   MENTATION\_PREFIX(MHA\_STATIC\_ ## plugname ## \_,cat,doc)

Wrapper macro for the plugin documentation interface.

#### 3.2.1 Detailed Description

An openMHA plugin is the signal processing unit, usually an algorithm.

openMHA plugins can be combined into processing chains. One of the configured chains can be selected for output which allows direct comparison of single algorithms or complex signal processing configurations. Algorithms within one chain can communicate with each other by sharing some of their variables, see section **Communication between algorithms** (p. 23).

The openMHA plugins can use the openMHA configuration language for their configuration. If they do so, the configuration can be changed through the framework even at run time. A description of this language can be found in section **The openMHA configuration language** (p. 29). If the algorithms should make use of the openMHA configuration language, they need to be written in C++ rather than pure C.

In the openMHA package a set of example plugins is included. These examples are the base of a step by step tutorial on how to write an openMHA plugin. See section **Writing openMHA Plugins. A step-by-step tutorial** (p. 10) for detailes.

openMHA plugins communicate with the openMHA using a simple ANSI-C interface. This way it is easy to mix plugins compiled with different C++ compilers. For convenience, we provide C++ classes which can be connected to the C++ interface. We strongly recommend the usage of these C++ wrappers. They include out-of-the box support exporting variables to the configuration interface and for thread safe configuration update.

The openMHA C++ plugin interface consists of a few number of method prototypes:

The output domain (spectrum or waveform) of an openMHA plugin will typically be the same as the input domain:

- mha\_wave\_t (p. 472) \* process(mha\_wave\_t (p. 472) \*): pure waveform processing
- mha\_spec\_t (p. 442) \* process(mha\_spec\_t (p. 442) \*): pure spectral processing

But it is also possible to implement domain transformations (from the time domain into spectrum or vice versa). The corresponding method signatures are:

- mha\_spec\_t (p. 442) \* process(mha\_wave\_t (p. 472) \*): Domain transformation from waveform to spectrum
- mha\_wave\_t (p. 472) \* process(mha\_spec\_t (p. 442) \*): Domain transformation from spectrum to waveform

For preparation and release of a plugin, the methods

- void prepare(mhaconfig\_t (p. 480) &) and
- void release(void)

have to be implemented. The openMHA will call the process() method only ater the prepare method has returned and before release() is invoked. It is guarantteed by the open $\leftarrow$  MHA framework that signal processing is performed only between calls of prepare() and release(). Each call of prepare() is followed by a call of release() (after some optional signal processing).

For configuration purposes, the plugin class has to export a method called <code>parse()</code> which implements the openMHA configuration language. We strongly recommend that you do not implement this method yourself, but by inheriting from the class <code>MHAParser::parser\_t</code> (p. 663) from the openMHA toolbox, directly or indirectly (inheriting from a class that itself inherits from <code>MHAParser::parser\_t</code> (p. 663)).

#### 3.2.2 Connecting the C++ class with the C Interface

A C++ class which provides the appropriate methods can be used as an openMHA Plugin by connecting it to the C interface using the **MHAPLUGIN\_CALLBACKS** (p. 9) macro.

The openMHA Toolbox library provides a base class **MHAPlugin::plugin\_t** (p. 703)<T> (a template class) which can be used as the base class for a plugin class. This base class implements some necessary features for openMHA plugin developers like integration into the openMHA configuration language environment (it inherits from **MHAParser::parser\_t** (p. 663)) and thread-safe runtime configuration update.

#### 3.2.3 Error reporting

When your plugin detects a situation that it cannot handle, like input signal of the wrong signal domain at preparation time, unsupported number of input channels at preparation time, unsupported combinations of values in the plugin's variables during configuration, it should throw a C++ exception. The exception should be of type MHAError. Exceptions of this type are caught by the **MHAPLUGIN\_CALLBACKS** (p. 9) macro for further error Reporting.

Throwing exceptions in response to unsupported configuration changes does not stop the signal processing. The openMHA configuration language parser will restore the previous value of that variable and report an error to the configurator, while the signal processing continues. Throwing exceptions from the signal processing thread will terminate the signal processing. Therefore, you should generally avoid throwing exceptions from the process method. Only do this if you detected a defect in your plugin, and then you should include enough information in the error message to be able to fix the defect.

- 3.2.4 Contents of the openMHA Plugin programming interface
- 3.2.5 Macro Definition Documentation

C++ wrapper macro for the plugin interface.

#### **Parameters**

classname	The name of the plugin class
indom	Input domain (wave or spec)
outdom	Output domain (wave or spec)

This macro defines all required openMHA Plugin interface functions and passes calls of these functions to the corresponding member functions of the class <code>'classname'</code>. The parameters <code>'indom'</code> and <code>'outdom'</code> specify the input and output domain of the processing method. The <code>MHAInit()</code> and <code>MHADestroy()</code> functions will create or destroy an instance of the class. The approriate member functions have to be defined in the class. It is suggested to make usage of the <code>MHAPlugin::plugin\_t(p.703)</code> template class. Exceptions of type <code>MHA\_Error(p.423)</code> are caught and transformed into apropriate error codes with their corresponding error messages.

#### 3.2.5.2 #define MHAPLUGIN CALLBACKS(

```
plugname,
classname,
indom,
outdom ) MHAPLUGIN_CALLBACKS_PREFIX(MHA_STATIC_ ## plugname
## _,classname,indom,outdom)
```

C++ wrapper macro for the plugin interface.

#### **Parameters**

plugname	The file name of the plugin without the .so or .dll extension
classname	The name of the plugin class
indom	Input domain (wave or spec)
outdom	Output domain (wave or spec)

This macro defines all required openMHA Plugin interface functions and passes calls of these functions to the corresponding member functions of the class 'classname'. The parameters 'indom' and 'outdom' specify the input and output domain of the processing method. The MHA← Init() and MHADestroy() functions will create or destroy an instance of the class. The approriate member functions have to be defined in the class. It is suggested to make usage of the MH← APlugin::plugin\_t (p. 703) template class. Exceptions of type MHA\_Error (p. 423) are caught and transformed into apropriate error codes with their corresponding error messages.

Wrapper macro for the plugin documentation interface.

#### **Parameters**

plugin	The file name of the plugin without the .so or .dll extension
cat	Space separated list of categories to which belong the plugin (as const char*)
doc	Documentation of the plugin (as const char*)

This macro defines the openMHA Plugin interface function for the documentation. The categories can be any space seperated list of category names. An empty string will categorize the plugin in the category 'other'.

The documentation should contain a description of the plugin including a description of the underlying models, and a paragraph containing hints for usage. The text should be LaTeX compatible (e.g., avoid or quote underscores in the text part); equations should be formatted as LaTeX.

#### 3.3 Writing openMHA Plugins. A step-by-step tutorial

A step-by-step tutorial on writing openMHA plugins.

A step-by-step tutorial on writing openMHA plugins.

openMHA contains a small number of example plugins as C++ source code. They are meant to help developers in understanding the concepts of openMHA plugin programming starting from the simplest example and increasing in complexity. This tutorial explains the basic parts of the example files.

#### 3.3.1 example1.cpp

The example plugin file <code>example1.cpp</code> (p. 951) demonstrates the easiest way to implement an openMHA Plugin. It attenuates the sound signal in the first channel by multiplying the sound samples with a factor. The plugin class <code>MHAPlugin::plugin\_t</code> (p. 703) exports several methods, but only two of them need a non-empty implementation: <code>prepare()</code> method is a pure virtual function and <code>process()</code> is called when signal processing starts.

Every plugin implementation should include the 'mha\_plugin.hh (p. 989)' header file. C++ helper classes for plugin development are declared in this header file, and most header files needed for plugin development are included by mha plugin.hh (p. 989).

The class plugin1\_t inherits from the class **MHAPlugin::plugin\_t** (p. 703), which then inherits from **MHAParser::parser\_t** (p. 663) – the configuration language interface in the method "parse". Our plugin class therefore exports the working "parse" method inherited from **MHA**← **Parser::parser\_t** (p. 663), and the plugin is visible in the openMHA configuration tree.

The constructor has to accept 3 parameters of correct types. In this simple example, we do not make use of them.

The release() method is used to free resources after signal processing. In this simple example, we do not allocate resources, so there is no need to free them.

#### 3.3.1.1 The prepare method

#### **Parameters**

signal_info	Contains information about the input signal's parameters, see mhaconfig_t
	(p. 480).

The prepare() method of the plugin is called before the signal processing starts, when the input signal parameters like domain, number of channels, frames per block, and sampling rate are known. The prepare() method can check these values and raise an exception if the plugin cannot cope with them, as is done here. The plugin can also change these values if the signal processing performed in the plugin results in an output signal with different parameters. This plugin does not change the signal's parameters, therefore they are not modified here.

#### 3.3.1.2 The signal processing method

#### **Parameters**

signal Pointer to the input signal structure **mha\_wave\_t** (p. 472).

#### **Returns**

Pointer to the output signal structure. The input signal structure may be reused if the signal has the same domain and dimensions.

The plugin works with time domain input signal (indicated by the data type **mha\_wave\_t** (p. 472) of the process method's parameter). It scales the first channel by a factor of 0.1. The output signal reuses the structure that previously contained the input signal (in-place processing).

#### 3.3.1.3 Connecting the C++ class with the C plugin interface

Plugins have to export C functions as their interface (to avoid C++ name-mangling issues and other incompatibilities when mixing plugins compiled with different C++ compilers).

This macro takes care of accessing the C++ class from the C functions required as the plugin's interface. It implements the C funtions and calls the corresponding C++ instance methods. Plugin classes should be derived from the template class **MHAPlugin::plugin\_t** (p. 703) to be compatible with the C interface wrapper.

This macro also catches C++ exceptions of type MHA\_Error (p. 423), when raised in the methods of the plugin class, and reports the error using an error flag as the return value of the underlying C function. It is therefore important to note that only C++ exceptions of type MH← A\_Error (p. 423) may be raised by your plugin. If your code uses different Exception classes, you will have to catch them yourself before control leaves your plugin class, and maybe report the error by throwing an instance of MHA\_Error (p. 423). This is important, because: (1) C++ exceptions cannot cross the plugin interface, which is in C, and (2) there is no error handling code for your exception classes in the openMHA framework anyways.

#### 3.3.2 example2.cpp

This is another simple example of openMHA plugin written in C++. This plugin also scales one channel of the input signal, working in the time domain. The scale factor and which channel to scale (index number) are made accessible to the configuration language.

The algorithm is again implemented as a C++ class.

#### **Parameters**

scale_ch	- the channel number to be scaled
factor	- the scale factor of the scaling.

This class again inherits from the template class **MHAPlugin::plugin\_t** (p. 703) for intergration with the openMHA configuration language. The two data members serve as externally visible configuration variables. All methods of this class have a non-empty implementation.

#### 3.3.2.1 Constructor

The constructor invokes the superclass constructor with a string parameter. This string parameter serves as the help text that describes the functionality of the plugin. The constructor registers configuration variables with the openMHA configuration tree and sets their default values and permitted ranges. The minimum permitted value for both variables is zero, and there is no maximum limit (apart from the limitations of the underlying C data type). The configuration variables have to be registered with the parser node instance using the **MHAParser::parser**—**\_t::insert\_item** (p. 665) method.

#### 3.3.2.2 The prepare method

#### **Parameters**

signal_info	- contains information about the input signal's parameters, see <b>mhaconfig_t</b>
	(p. 480).

The user may have changed the configuration variables before preparing the openMHA plugin. A consequence of this is that it is not sufficient any more to check if the input signal has at least 1 audio channel.

Instead, this prepare method checks that the input signal has enough channels so that the current value of  $scale\_ch.data$  is a valid channel index, i.e.  $0 \le scale\_ch.data < signal \leftarrow$ 

\_info.channels. The prepare method does not have to check that  $0 \le \text{scale\_ch.data}$ , since this is guaranteed by the valid range setting of the configuration variable.

The prepare method then modifies the valid range of the <code>scale\_ch</code> variable, it modifies the upper bound so that the user cannot set the variable to a channel index higher than the available channels. Setting the range is done using a string parameter. The prepare method contatenates a string of the form "[0,n[". n is the number of channels in the input signal, and is used here as an exclusive upper boundary. To convert the number of channels into a string, a helper function for string conversion from the openMHA Toolbox is used. This function is overloaded and works for several data types.

It is safe to assume that the value of configuration variables does not change while the prepare method executes, since openMHA preparation is triggered from a configuration language command, and the openMHA configuration language parser is busy and cannot accept other commands until all openMHA plugins are prepared (or one of them stops the process by raising an exception). As we will see later in this tutorial, the same assumption cannot be made for the process method.

#### 3.3.2.3 The release method

The release method should undo the state changes that were performed by the prepare method. In this example, the prepare method has reduced the valid range of the scale\_ch, so that only valid channels could be selected during signal processing.

The release method reverts this change by setting the valid range back to its original value, "[0,[".

#### 3.3.2.4 The signal processing method

The processing function uses the current values of the configuration variables to scale every frame in the selected audio channel.

Note that the value of each configuration variable can change while the processing method executes, since the process method usually executes in a different thread than the configuration interface.

For this simple plugin, this is not a problem, but for more advanced plugins, it has to be taken into consideration. The next section takes a closer look at the problem.

#### Consistency

Assume that one thread reads the value stored in a variable while another thread writes a new value to that variable concurrently. In this case, you may have a consistency problem. You would perhaps expect that the value retrieved from the variable either (a) the old value, or (b) the new value, but not (c) something else. Yet generally case (c) is a possibility.

Fortunately, for some data types on PC systems, case (c) cannot happen. These are 32bit wide data types with a 4-byte alignment. Therefore, the values in **MHAParser::int\_t** (p. 639) and **MHAParser::float\_t** (p. 634) are always consistent, but this is not the case for vectors, strings, or complex values. With these, you can get a mixture of the bit patterns of old and new values, or you can even cause a memory access violation in case a vector or string grows and has to be reallocated to a different memory address.

There is also a consistency problem if you take the combination of two "safe" datatypes. The openMHA provides a mechanism that can cope with these types of problems. This thread-safe runtime configuration update mechanism is introduced in example 5.

#### 3.3.3 example3.cpp

This example introduces the openMHA Event mechanism. Plugins that provide configuration variable can receive a callback from the parser base class when a configuration variable is accessed through the configuration language interface.

The third example performes the same processing as before, but now only even channel indices are permitted when selecting the audio channel to scale. This restriction cannot be ensured by setting the range of the channel index configuration variable. Instead, the event mechanism of openMHA configuration variables is used. Configuration variables emit 4 different events, and your plugin can connect callback methods that are called when the events are triggered. These events are:

#### writeaccess

• triggered on write access to a configuration variable.

#### valuechanged

 triggered when write access to a configuration variable actually changes the value of this variable.

#### readaccess

triggered after the value of the configuration variable has been read.

#### prereadaccess

• triggered before the value of a configuration variable is read, i.e. the value of the requested variable can be changed by the callback to implement computation on demand.

All of these callbacks are executed in the configuration thread. Therefore, the callback implementation does not have to be realtime-safe. No other updates of configuration language variables through the configuration language can happen in parallel, but your processing method can execute in parallel and may change values.

#### 3.3.3.1 Data member declarations

This plugin exposes another configuration variable, "prepared", that keeps track of the prepared state of the plugin. This is a read-only (monitor) integer variable, i.e. its value can only be changed by your plugin's C++ code. When using the configuration language interface, the value of this variable can only be read, but not changed.

The patchbay member is an instance of a connector class that connects event sources with callbacks.

#### 3.3.3.2 Method declarations

This plugin exposes 4 callback methods that are triggered by events. Multiple events (from the same or different configuration variables) can be connected to the same callback method, if desired.

This example plugin uses the valuechanged event to check that the scale\_ch configuration variable is only set to valid values.

The other callbacks only cause log messages to stdout, but the comments in the logging callbacks give a hint when listening on the events would be useful.

#### 3.3.3.3 Example 3 constructor

The constructor of monitor variables does not take a parameter for setting the initial value. The single parameter here is the help text describing the contents of the read-only variable. If the initial value should differ from 0, then the .data member of the configuration variable has to be set to the initial value in the plugin constructor's body explicitly, as is done here for demonstration although the initial value of this monitor variable is 0.

Events and callback methods are then connected using the patchbay member variable.

#### 3.3.3.4 The prepare method

The prepare method checks wether the current setting of the scale\_ch variable is possible with the input signal dimension. It does not adjust the range of the variable, since the range alone is not sufficient to ensure all future settings are also valid: The scale channel index has to be even.

#### 3.3.3.5 The release method

The release method is needed for tracking the prepared state only in this example.

3.3.3.6 The signal processing method

The signal processing member function is the same as in example 2.

3.3.3.7 The callback methods

When the writeaccess or valuechanged callbacks throw an MHAError exception, then the change made to the value of the configuration variable is reverted.

If multiple event sources are connected to a single callback method, then it is not possible to determine which event has caused the callback to execute. Often, this information is not crucial, i.e. when the answer to a change of any variable in a set of variables is the same, e.g. the recomputation of a new runtime configuration that takes all variables of this set as input.

3.3.4 example4.cpp

This plugin is the same as example 3 except that it works on the spectral domain (STFT).

3.3.4.1 The Prepare method

The prepare method now checks that the signal domain is MHA SPECTRUM.

3.3.4.2 The signal processing method

The signal processing member function works on the spectral signal instead of the wave signal as before.

The **mha\_spec\_t** (p. 442) instance stores the complex (**mha\_complex\_t** (p. 410)) spectral signal for positive frequences only (since the waveform signal is always real). The num\_frames member of **mha\_spec\_t** (p. 442) actually denotes the number of STFT bins.

Please note that different from **mha\_wave\_t** (p. 472), a multichannel signal in **mha\_spec\_t** (p. 442) is stored non-interleaved in the signal buffer.

Some arithmetic operations are defined on struct **mha\_complex\_t** (p. 410) to facilitate efficient complex computations. The \*= operator used here (defined for real and for complex arguments) is one of them.

#### 3.3.4.3 Connecting the C++ class with the C plugin interface

When connecting a class that performs spectral processing with the C interface, use spec instead of wave as the domain indicator.

#### 3.3.5 example5.cpp

Many algorithms use complex operations to transform the user space variables into run time configurations. If this takes a noticeable time (e.g. more than 100-500  $\mu$  sec), the update of the runtime configuration can not take place in the real time processing thread. Furthermore, the parallel access to complex structures may cause unpredictable results if variables are read while only parts of them are written to memory (cf. section **Consistency** (p. 14)). To handle these situations, a special C++ template class **MHAPlugin::plugin\_t** (p. 703) was designed. This class helps keeping all access to the configuration language variables in the **configuration** thread rather than in the **processing** thread.

The runtime configuration class <code>example5\_t</code> (p. 307) is the parameter of the template class <code>MHAPlugin::plugin\_t</code> (p. 703). Its constructor converts the user variables into a runtime configuration. Because the constructor executes in the configuration thread, there is no harm if the constructor takes a long time. All other member functions and data members of the runtime configurations are accessed only from the signal processing thread (real-time thread).

The plugin interface class inherits from the plugin template class **MHAPlugin::plugin**\_← **t** (p. 703), parameterised by the runtime configuration. Configuration changes (write access to the variables) will emit a write access event of the changed variables. These events can be connected to member functions of the interface class by the help of a **MHAEvents::patchbay**← **\_t** (p. 488) instance.

The constructor of the runtime configuration analyses and validates the user variables. If the configuration is invalid, an exception of type **MHA\_Error** (p. 423) is thrown. This will cause the openMHA configuration language command which caused the change to fail: The modified configuration language variable is then reset to its original value, and the error message will contain the message string of the **MHA\_Error** (p. 423) exception.

In this example, the run time configuration class example5\_t (p. 307) has a signal processing member function. In this function, the selected channel is scaled by the given scaling factor.

The constructor of the example plugin class is similar to the previous examples. A callback triggered on write access to the variables is registered using the **MHAEvents::patchbay\_t** (p. 488) instance.

The processing function can gather the latest valid runtime configuration by a call of poll\_config. On success, the class member cfg points to this configuration. On error, if there is no usable runtime configuration instance, an exception is thrown. In this example, the prepare method ensures that there is a valid runtime configuration, so that in this example, no error can be raised at this point. The prepare method is always executed before the process method is called. The runtime configuration class in this example provides a signal processing method. The process method of the plugin interface calls the process method of this instance to perform the actual signal processing.

The prepare method ensures that a valid runtime configuration exists by creating a new runtime configuration from the current configuration language variables. If the configuration is invalid, then an exception of type **MHA\_Error** (p. 423) is raised and the preparation of the openMHA fails with an error message.

The update\_cfg member function is called when the value of a configuration language variable changes, or from the prepare method. It allocates a new runtime configuration and registers it for later access from the real time processing thread. The function **push\_config** (p. 701) stores the configuration in a FiFo queue of runtime configurations. Once they are inserted in the FiFo, the **MHAPlugin::plugin\_t** (p. 703) template is responsible for deleting runtime configuration instances stored in the FiFo. You don't need to keep track of the created instances, and you must not delete them yourself.

In the end of the example code file, the macro **MHAPLUGIN\_CALLBACKS** (p. 9) defines all ANSI-C interface functions and passes them to the corresponding C++ class member functions (partly defined by the **MHAPlugin::plugin\_t** (p. 703) template class). All exceptions of type **MHA\_Error** (p. 423) are caught and transformed into an appropriate error code and error message.

#### 3.3.6 example6.cpp

This last example is the same as the previous one, but it additionally creates an 'Algorithm Communication Variable' (AC variable). It calculates the RMS level of a given channel and stores it into this variable. The variable can be accessed by any other algorithm in the same chain. To store the data onto disk, the 'acsave' plugin can be used. 'acmon' is a plugin which converts AC variables into parsable monitor variables.

In the constructor of the plugin class the variable rmsdb is registered under the name example6\_rmslev as a one-dimensional AC variable of type float. For registration of other types, read access and other detailed informations please see **Communication between algorithms** (p. 23).

#### 3.3.7 Debugging openMHA plugins

Suppose you would want to step through the code of your openMHA plugin with a debugger. This example details how to use the linux gdb debugger to inspect the example6\_t :: prepare() (p. 309) and example6\_t::process() (p. 309) routines of example6. 
cpp (p. 19) example 6.

First, make sure that your plugin is compiled with the compiler option to include debugging symbols: Apply the -ggdb switch to all gcc, g++ invocations.

Once the plugin is compiled, with debugging symbols, create a test configuration. For example 6, assuming there is an audio file named input.wav in your working directory, you could create a configuration file named 'debugexample6.cfg', with the following content:

```
# debugexample6.cfg
fragsize = 64
srate = 44100
nchannels_in = 2
iolib = MHAIOFile

io.in = input.wav
io.out = output.wav
mhalib = example6
mha.channel = 1
cmd=start
```

Assuming all your binaries and shared-object libraries are in your 'bin' directory (see READ← ME.md), you could start gdb using

```
$ export MHA_LIBRARY_PATH=$PWD/bin
$ gdb $MHA_LIBRARY_PATH/mha
```

Set breakpoints in prepare and process methods, and start execution. Note that specifying the breakpoint by symbol (example6\_t::prepare (p. 309)) does not yet work, as the symbol lives in the openMHA plugin that has not yet been loaded. Specifying by line number works, however. Specifying the breakpoint by symbol also works once the plugin is loaded (i.e. when the debugger stops in the first break point). You can set the breakpoints like this (example shown here is run in gdb version 7.11.1):

```
(gdb) run ?read:debugexample6.cfg
Starting program: {openMHA_directory}/bin/mha ?read:debugexample6.cfg
[Thread debugging using libthread_db enabled]
Using host libthread_db library "/lib/x86_64-linux-gnu/libthread_db.so.1".
The Open Master Hearing Aid (openMHA) server
Copyright (c) 2005-2017 HoerTech gGmbH, D-26129 Oldenburg, Germany
This program comes with ABSOLUTELY NO WARRANTY; for details see file COPYING.
This is free software, and you are welcome to redistribute it
under the terms of the GNU AFFERO GENERAL PUBLIC LICENSE, Version 3;
for details see file COPYING.
Breakpoint 1, example6_t::prepare (this=0x6478b0, tfcfg=...)
   at example6.cpp:192
           if( tfcfg.domain != MHA_WAVEFORM )
(qdb) b example6.cpp:162
Breakpoint 2 at 0x7fffff589744a: file example6.cpp, line 162.
(gdb) c
Continuing.
```

Where '{openMHA\_directory}' is the directory where openMHA is located (which should also be your working directory in this case). Next stop is the process() method. You can now examine and change the variables, step through the program as needed (using, for example 'n' to step in the next line):

3.4 The MHA Framework interface

# 3.5 Communication between algorithms

Algorithms within one chain can share variables for communication with other algorithms.

Collaboration diagram for Communication between algorithms:

#### **Files**

file mha\_algo\_comm.h

Header file for Algorithm Communication.

### **Namespaces**

· MHA AC

Functions and classes for Algorithm Communication (AC) support.

#### **Classes**

class MHA AC::spectrum t

Insert a MHASignal::spectrum\_t (p. 775) class into the AC space.

class MHA\_AC::waveform\_t

Insert a MHASignal::waveform\_t (p. 787) class into the AC space.

class MHA AC::int t

Insert a integer variable into the AC space.

class MHA\_AC::float\_t

Insert a float point variable into the AC space.

class MHA\_AC::double\_t

Insert a double precision floating point variable into the AC space.

class MHA\_AC::ac2matrix\_t

Copy AC variable to a matrix.

class MHA\_AC::acspace2matrix\_t

Copy all or a subset of all numeric AC variables into an array of matrixes.

struct algo\_comm\_t

A reference handle for algorithm communication variables.

• struct comm var t

Algorithm communication variable structure.

#### **Functions**

• mha\_spec\_t MHA\_AC::get\_var\_spectrum (algo\_comm\_t ac, const std::string &name)

Convert an AC variable into a spectrum.

mha\_wave\_t MHA\_AC::get\_var\_waveform (algo\_comm\_t ac, const std::string &name)

Convert an AC variable into a waveform.

- int MHA\_AC::get\_var\_int (algo\_comm\_t ac, const std::string &name)
  - Return value of an integer scalar AC variable.
- float MHA\_AC::get\_var\_float (algo\_comm\_t ac, const std::string &name)

  Return value of an floating point scalar AC variable.
- std::vector< float > MHA\_AC::get\_var\_vfloat (algo\_comm\_t ac, const std::string &name)

Return value of an floating point vector AC variable as standard vector of floats.

### 3.5.1 Detailed Description

Algorithms within one chain can share variables for communication with other algorithms.

This mechanism allows interaction between algorithms (i.e. separation of noise estimation and noise reduction algorithms, combination of dynamic compression and noise estimation). Through a set of simple C functions, algorithms can propagate variables of any type, even C++ classes, to other algorithms.

An algorithm communication handle (algo\_comm\_t (p. 193)) is passed at initialisation time to the constructor of each plugin class constructor (p. 703). This handle contains a reference handle, algo\_comm\_t::handle (p. 193), and a number of function pointers, algo\_comm\_t ::insert\_var (p. 193) etc.. An algorithm communication variable is an object of type comm\_← var\_t (p. 238).

For AC variables of numeric types, openMHA Plugins for conversion into parsable monitor variables, acmon, and storage into Matlab or text files, acsave, are available.

# 3.5.2 Function Documentation

Convert an AC variable into a spectrum.

This function reads an AC variable and tries to convert it into a valid spectrum. The Spectrum variable is granted to be valid only for one call of the processing function.

### **Parameters**

ac	AC handle
name	Name of the variable

#### **Returns**

Spectrum structure

Convert an AC variable into a waveform.

This function reads an AC variable and tries to convert it into a valid waveform. The waveform variable is granted to be valid only for one call of the processing function.

### **Parameters**

ac	AC handle
name	Name of the variable

## **Returns**

waveform structure

Return value of an integer scalar AC variable.

# **Parameters**

ac	AC handle
name	Name of the variable

### **Returns**

Variable value

Return value of an floating point scalar AC variable.

### **Parameters**

ac	AC handle
name	Name of the variable

## **Returns**

Variable value

Return value of an floating point vector AC variable as standard vector of floats.

## **Parameters**

ac	AC handle
name	Name of the variable


## **Returns**

Variable value

# 3.6 Error handling in the openMHA

Errors are reported to the user via the MHA\_Error (p. 423) exception.

Collaboration diagram for Error handling in the openMHA:

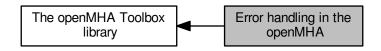

#### Classes

· class MHA Error

Error reporting exception class.

#### Macros

- #define MHA\_ErrorMsg(x) MHA\_Error(\_\_FILE\_\_,\_\_LINE\_\_,"%s",x)

  Throw an openMHA error with a text message.
- #define MHA\_assert(x) if(!(x)) throw MHA\_Error(\_\_FILE\_\_,\_\_LINE\_\_,"\"%s\" is false.",#x)

Assertion macro, which throws an **MHA\_Error** (p. 423).

• #define MHA\_assert\_equal(a, b) if( a != b ) throw MHA\_Error(\_\_FILE\_\_,\_\_LINE\_\_←, "\"%s == %s\" is false (%s = %g, %s = %g).",#a,#b,#a,(double)(a),#b,(double)(b))

Equality assertion macro, which throws an MHA\_Error (p. 423) with the values.

### **Functions**

void mha\_debug (const char \*fmt,...)
 Print an info message (stderr on Linux, OutputDebugString in Windows).

## 3.6.1 Detailed Description

Errors are reported to the user via the MHA\_Error (p. 423) exception.

3.6.2 Macro Definition Documentation

Throw an openMHA error with a text message.

### **Parameters**

x Text message.

Assertion macro, which throws an MHA\_Error (p. 423).

#### **Parameters**

```
x Boolean expression which should be true.
```

3.6.2.3 #define MHA\_assert\_equal(

```
a,
b) if( a != b) throw MHA_Error(__FILE__,__LINE__,"\"%s == %s\" is false (%s = %g, %s = %g).",#a,#b,#a,(double)(a),#b,(double)(b))
```

Equality assertion macro, which throws an MHA\_Error (p. 423) with the values.

#### **Parameters**

- a Numeric expression which can be converted to double (for printing).b Numeric expression which should be equal to a
- 3.6.3 Function Documentation
- 3.6.3.1 void mha\_debug ( const char \* fmt, ... )

Print an info message (stderr on Linux, OutputDebugString in Windows).

# 3.7 The openMHA configuration language

openMHA Plugins that should use the openMHA configuration language for their configuration have to be implemented in C++ and need to include **mha\_parser.hh** (p. 985).

openMHA Plugins that should use the openMHA configuration language for their configuration have to be implemented in C++ and need to include **mha\_parser.hh** (p. 985).

All required classes and functions for parser access are declared in the namespace MH← AParser (p. 100). The plugin class should be derived from the class MHAParser::parser\_t (p. 663) (or MHAPlugin::plugin\_t (p. 703)), which symbolises a sub-parser node in the open← MHA script hierarchy. Variables of many types can be registered to the sub-parser node by calling the member function insert item (p. 665).


The openMHA Plugin template class **MHAPlugin::plugin\_t** (p. 703) together with the Plugin macro **MHAPLUGIN\_CALLBACKS** (p. 9) provide the callback mappings and correct inheritance. If your plugin is based on that template class, you simply have to use the insert\_item command to give access to your variables, everything else is managed internally.

A complete list of all openMHA script items is given in the description of the **MHAParser** (p. 100) namespace.

# 3.8 The openMHA Toolbox library

The openMHA toolbox is a static C++ library which makes it more comfortable to develop openMHA plugins.

Collaboration diagram for The openMHA Toolbox library:

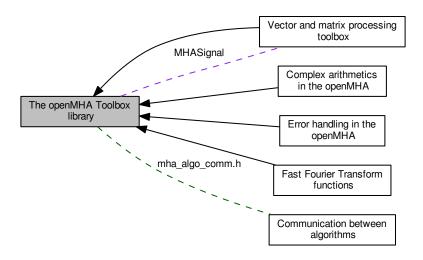

#### Modules

Error handling in the openMHA

Errors are reported to the user via the MHA\_Error (p. 423) exception.

Vector and matrix processing toolbox

The vector and matrix processing toolbox consists of a number of classes defined in the namespace **MHASignal** (p. 110), and many functions and operators for use with the structures **mha\_wave\_t** (p. 472) and **mha\_spec\_t** (p. 442).

- · Complex arithmetics in the openMHA
- · Fast Fourier Transform functions

### Files

file mha\_algo\_comm.h

Header file for Algorithm Communication.

· file mha filter.hh

Header file for IIR filter classes.

file mha\_signal.hh

Header file for audio signal handling and processing classes.

• file mha tablelookup.hh

Header file for table lookup classes.

### Namespaces

## MHAOvlFilter

Namespace for overlapping FFT based filter bank classes and functions.

### MHAFilter

Namespace for IIR and FIR filter classes.

# MHAParser

Name space for the openMHA-Parser configuration language.

## MHASignal

Namespace for audio signal handling and processing classes.

# MHATableLookup

Namespace for table lookup classes.

## 3.8.1 Detailed Description

The openMHA toolbox is a static C++ library which makes it more comfortable to develop openMHA plugins.

It contains the openMHA script language classes.

# 3.9 Vector and matrix processing toolbox

The vector and matrix processing toolbox consists of a number of classes defined in the namespace **MHASignal** (p. 110), and many functions and operators for use with the structures **mha**← **\_wave\_t** (p. 472) and **mha\_spec\_t** (p. 442).

Collaboration diagram for Vector and matrix processing toolbox:



### **Namespaces**

MHASignal

Namespace for audio signal handling and processing classes.

MHAWindow

Collection of Window types.

#### **Classes**

struct mha\_wave\_t

Waveform signal structure.

struct mha\_spec\_t

Spectrum signal structure.

struct mha\_audio\_descriptor\_t

Description of an audio fragment (planned as a replacement of mhaconfig\_t (p. 480)).

struct mha\_audio\_t

An audio fragment in the openMHA (planned as a replacement of **mha\_wave\_t** (p. 472) and **mha\_spec\_t** (p. 442)).

class MHASignal::spectrum t

a signal processing class for spectral data (based on **mha\_spec\_t** (p. 442))

class MHASignal::waveform t

signal processing class for waveform data (based on mha\_wave\_t (p. 472))

class MHASignal::doublebuffer t

Double-buffering class.

class MHASignal::hilbert\_t

Hilbert transformation of a waveform segment.

class MHASignal::minphase\_t

Minimal phase function.

class MHASignal::uint\_vector\_t

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

class MHASignal::matrix\_t

n-dimensional matrix with real or complex floating point values.

class MHAParser::window\_t

MHA configuration interface for a window function generator.

class MHASignal::delay\_wave\_t

Delayline containing wave fragments.

class MHASignal::async\_rmslevel\_t

Class for asynchronous level metering.

# **Typedefs**

typedef float mha\_real\_t
 openMHA type for real numbers

#### **Functions**

- mha\_wave\_t range (mha\_wave\_t s, unsigned int k0, unsigned int len)

  Return a time interval from a waveform chunk.
- mha\_spec\_t channels (mha\_spec\_t s, unsigned int ch\_start, unsigned int nch)

  Return a channel interval from a spectrum.
- void MHASignal::for\_each (mha\_wave\_t \*s, mha\_real\_t(\*fun)(mha\_real\_t))
   Apply a function to each element of a mha\_wave\_t (p. 472).
- mha\_real\_t MHASignal::lin2db (mha\_real\_t x)

Conversion from linear scale to dB (no SPL reference)

mha\_real\_t MHASignal::db2lin (mha\_real\_t x)

Conversion from dB scale to linear (no SPL reference)

mha\_real\_t MHASignal::pa2dbspl (mha\_real\_t x)

Conversion from linear Pascal scale to dB SPL.

- mha\_real\_t MHASignal::pa22dbspl (mha\_real\_t x, mha\_real\_t eps=1e-20f)

  Conversion from squared Pascal scale to dB SPL.
- mha\_real\_t MHASignal::dbspl2pa (mha\_real\_t x)

Conversion from dB SPL to linear Pascal scale.

- mha\_real\_t MHASignal::smp2sec (mha\_real\_t n, mha\_real\_t srate)
   conversion from samples to seconds
- mha\_real\_t MHASignal::sec2smp (mha\_real\_t sec, mha\_real\_t srate)
   conversion from seconds to samples
- mha\_real\_t MHASignal::bin2freq (mha\_real\_t bin, unsigned fftlen, mha\_real\_t srate)
   conversion from fft bin index to frequency
- mha\_real\_t MHASignal::freq2bin (mha\_real\_t freq, unsigned fftlen, mha\_real\_t srate)
   conversion from frequency to fft bin index
- mha\_real\_t MHASignal::smp2rad (mha\_real\_t samples, unsigned bin, unsigned fftlen)
   conversion from delay in samples to phase shift

mha\_real\_t MHASignal::rad2smp (mha\_real\_t phase\_shift, unsigned bin, unsigned fftlen)

conversion from phase shift to delay in samples

template < class elem\_type >
 std::vector < elem\_type > MHASignal::dupvec (std::vector < elem\_type > vec, unsigned n)

Duplicate last vector element to match desired size.

template<class elem\_type >

std::vector< elem\_type > MHASignal::dupvec\_chk (std::vector< elem\_type > vec, unsigned n)

Duplicate last vector element to match desired size, check for dimension.

bool equal\_dim (const mha\_wave\_t &a, const mha\_wave\_t &b)

Test for equal dimension of waveform structures.

• bool equal dim (const mha wave t &a, const mhaconfig t &b)

Test for match of waveform dimension with mhaconfig structure.

• bool equal\_dim (const mha\_spec\_t &a, const mha\_spec\_t &b)

Test for equal dimension of spectrum structures.

bool equal\_dim (const mha\_spec\_t &a, const mhaconfig\_t &b)

Test for match of spectrum dimension with mhaconfig structure.

• bool equal dim (const mha wave t &a, const mha spec t &b)

Test for equal dimension of waveform/spectrum structures.

• bool equal\_dim (const mha\_spec\_t &a, const mha\_wave\_t &b)

Test for equal dimension of waveform/spectrum structures.

void integrate (mha\_wave\_t &s)

Numeric integration of a signal vector (real values)

void integrate (mha\_spec\_t &s)

Numeric integration of a signal vector (complex values)

unsigned int size (const mha wave t &s)

Return size of a waveform structure.

unsigned int size (const mha\_spec\_t &s)

Return size of a spectrum structure.

unsigned int size (const mha\_wave\_t \*s)

Return size of a waveform structure.

unsigned int size (const mha spec t \*s)

Return size of a spectrum structure.

void clear (mha\_wave\_t &s)

Set all values of waveform to zero.

void clear (mha wave t \*s)

Set all values of waveform to zero.

void clear (mha spec t &s)

Set all values of spectrum to zero.

void clear (mha\_spec\_t \*s)

Set all values of spectrum to zero.

void assign (mha wave t self, mha real t val)

Set all values of waveform 'self' to 'val'.

void assign (mha\_wave\_t self, const mha\_wave\_t &val)

Set all values of waveform 'self' to 'val'.

void assign (mha\_spec\_t self, const mha\_spec\_t &val)

Set all values of spectrum 'self' to 'val'.

void timeshift (mha wave t &self, int shift)

Time shift of waveform chunk.

• mha real t & value (mha wave t \*s, unsigned int fr, unsigned int ch)

Access an element of a waveform structure.

const mha\_real\_t & value (const mha\_wave\_t \*s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

• mha complex t & value (mha spec t \*s, unsigned int fr, unsigned int ch)

Access to an element of a spectrum.

• const **mha\_complex\_t** & **value** (const **mha\_spec\_t** \*s, unsigned int fr, unsigned int ch)

Constant access to an element of a spectrum.

mha\_real\_t & value (mha\_wave\_t &s, unsigned int fr, unsigned int ch)

Access to an element of a waveform structure.

const mha\_real\_t & value (const mha\_wave\_t &s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

mha\_complex\_t & value (mha\_spec\_t &s, unsigned int fr, unsigned int ch)

Access to an element of a spectrum.

• const **mha\_complex\_t** & **value** (const **mha\_spec\_t** &s, unsigned int fr, unsigned int ch)

Constant access to an element of a spectrum.

std::vector< float > std\_vector\_float (const mha\_wave\_t &)

Converts a mha\_wave\_t (p. 472) structure into a std::vector<float> (interleaved order).

• std::vector< std::vector< float >> std\_vector\_vector\_float (const mha\_wave\_t &)

Converts a **mha\_wave\_t** (p. 472) structure into a std::vector< std::vector< float> > (outer vector represents channels).

std::vector< std::vector< mha\_complex\_t >> std\_vector\_vector\_complex (const mha\_spec\_t &)

Converts a **mha\_spec\_t** (p. 442) structure into a std::vector< std::vector< mha\_complex\_t> > (outer vector represents channels).

mha\_wave\_t & operator+= (mha\_wave\_t &, const mha\_real\_t &)

Addition operator.

mha\_wave\_t & operator+= (mha\_wave\_t &, const mha\_wave\_t &)

Addition operator.

• mha wave t & operator-= (mha wave t &, const mha wave t &)

Subtraction operator.

mha\_spec\_t & operator-= (mha\_spec\_t &, const mha\_spec\_t &)

Subtraction operator.

• mha\_wave\_t & operator\*= (mha\_wave\_t &, const mha\_real\_t &)

Element-wise multiplication operator.

• mha wave t & operator\*= (mha wave t &, const mha wave t &)

Element-wise multiplication operator.

mha\_spec\_t & operator\*= (mha\_spec\_t &, const mha\_real\_t &)

Element-wise multiplication operator.

mha\_spec\_t & operator\*= (mha\_spec\_t &, const mha\_wave\_t &)

Element-wise multiplication operator.

mha\_spec\_t & operator\*= (mha\_spec\_t &, const mha\_spec\_t &)

Element-wise multiplication operator.

mha\_spec\_t & operator/= (mha\_spec\_t &, const mha\_spec\_t &)

Element-wise division operator.

mha\_wave\_t & operator/= (mha\_wave\_t &, const mha\_wave\_t &)

Element-wise division operator.

mha\_spec\_t & operator+= (mha\_spec\_t &, const mha\_spec\_t &)

Addition operator.

• mha spec t & operator+= (mha spec t &, const mha real t &)

Addition operator.

• mha wave t & operator = (mha wave t & self, const mha real t & arg)

Exponent operator.

void MHASignal::copy\_channel (mha\_spec\_t &self, const mha\_spec\_t &src, unsigned sch, unsigned dch)

Copy one channel of a source signal.

• void MHASignal::copy\_channel (mha\_wave\_t &self, const mha\_wave\_t &src, unsigned src\_channel, unsigned dest\_channel)

Copy one channel of a source signal.

mha\_real\_t MHASignal::rmslevel (const mha\_spec\_t &s, unsigned int channel, unsigned int fftlen)

Return RMS level of a spectrum channel.

mha\_real\_t MHASignal::colored\_intensity (const mha\_spec\_t &s, unsigned int channel, unsigned int fftlen, mha\_real\_t sqfreq\_response[])

Colored spectrum intensity.

• mha\_real\_t MHASignal::maxabs (const mha\_spec\_t &s, unsigned int channel)

Find maximal absolute value.

mha\_real\_t MHASignal::rmslevel (const mha\_wave\_t &s, unsigned int channel)

Return RMS level of a waveform channel.

mha real t MHASignal::maxabs (const mha wave t &s, unsigned int channel)

Find maximal absolute value.

mha\_real\_t MHASignal::maxabs (const mha\_wave\_t &s)

Find maximal absolute value.

mha\_real\_t MHASignal::max (const mha\_wave\_t &s)

Find maximal value.

• mha real t MHASignal::min (const mha wave t &s)

Find minimal value.

mha\_real\_t MHASignal::sumsqr\_channel (const mha\_wave\_t &s, unsigned int channel)

Calculate sum of squared values in one channel.

• mha\_real\_t MHASignal::sumsqr\_frame (const mha\_wave\_t &s, unsigned int frame)

Calculate sum over all channels of squared values.

void conjugate (mha spec t &self)

Replace (!) the value of this **mha\_spec\_t** (p. 442) with its conjugate.

### 3.9.1 Detailed Description

The vector and matrix processing toolbox consists of a number of classes defined in the namespace **MHASignal** (p. 110), and many functions and operators for use with the structures **mha**← **\_wave\_t** (p. 472) and **mha\_spec\_t** (p. 442).

- 3.9.2 Typedef Documentation
- 3.9.2.1 typedef float mha\_real\_t

openMHA type for real numbers

This type is expected to be allways the C-type 'float' (IEEE 754 single).

3.9.3 Function Documentation

Return a time interval from a waveform chunk.

A waveform chunk containing a time intervall of a larger waveform chunk is returned. The number of channels remains constant. The data of the output waveform structure points to the data of the input structure, i.e., write access to the output waveform chunk modifies the corresponding entries in the input chunk.

#### **Parameters**

s	Waveform structure
k0	Index of first value in output
len	Number of frames in output

#### Returns

Waveform structure representing the sub-interval.

Return a channel interval from a spectrum.

### **Parameters**

s	Input spectrum
ch_start	Index of first channel in output
nch	Number of channels in output

### **Returns**

Spectrum structure representing the sub-interval.

Apply a function to each element of a **mha\_wave\_t** (p. 472).

#### **Parameters**

s	Pointer to a <b>mha_wave_t</b> (p. 472) structure	
fun	Function to be applied (one argument)	

Conversion from linear scale to dB (no SPL reference)

### **Parameters**

```
x Linear input.
```

Conversion from dB scale to linear (no SPL reference)

## **Parameters**

```
x dB input.
```

Conversion from linear Pascal scale to dB SPL.

### **Parameters**

```
x Linear input.
```

Conversion from squared Pascal scale to dB SPL.

### **Parameters**

X	squared pascal input
eps	minimum squared-pascal value

Conversion from dB SPL to linear Pascal scale.

#### **Parameters**

conversion from samples to seconds

### **Parameters**

n	number of samples
srate	sampling rate / Hz

conversion from seconds to samples

#### **Parameters**

sec	time in seconds	
srate	sampling rate / Hz	

### Returns

number of samples, generally has non-zero fractional part

conversion from fft bin index to frequency

#### **Parameters**

bin	index of fft bin, index 0 has dc
fftlen	FFT length
srate	sampling frequency / Hz

#### Returns

frequency of fft bin / Hz

conversion from frequency to fft bin index

## **Parameters**

freq	frequency / Hz
fftlen	FFT length
srate	sampling frequency / Hz

### Returns

0-based index of fft bin, generally has non-zero fractional part

conversion from delay in samples to phase shift

Compute phase shift that needs to be applied to fft spectrum to achieve the desired delay.

#### **Parameters**

samples	delay in samples. Positive delay: shift current signal to future.
bin	index of fft bin, index 0 has dc (index 0 and nyqvist bin cannot be delayed)
fftlen	FFT length

#### Returns

The phase shift in radiant that needs to be applied to fft bin to achieve the desired delay. A positive delay requires a negative phase shift. If required phase shift is >pi or <-pi, then the desired delay cannot be applied in the fft domain with given parameters. Required phase shifts close to pi should not be used. If bin is 0 or nyqvist, returns 0 phase shift.

conversion from phase shift to delay in samples

Compute delay in samples that is achieved by a phase shift.

#### **Parameters**

phase_shift	phase shift in radiant
bin	index of fft bin, index 0 has dc (index 0 and nyqvist bin cannot be delayed)
fftlen	FFT length

### Returns

The delay in samples achieved by applying the phase shift. A negative phase shift causes a positive delay: shifts current signal to future.

```
3.9.3.15 template < class elem_type > std::vector < elem_type > MHASignal::dupvec ( std::vector < elem_type > vec, unsigned n)
```

Duplicate last vector element to match desired size.

#### **Parameters**

vec	Input vector.
n	Target number of elements.

### **Return values**

```
Resized vector.
```

```
3.9.3.16 template < class elem_type > std::vector < elem_type > MHASignal::dupvec_chk ( std::vector < elem_type > vec, unsigned n)
```

Duplicate last vector element to match desired size, check for dimension.

The input dimension can be either 1 or the target length.

#### **Parameters**

vec	Input vector.
n	Target number of elements.

#### **Return values**

```
Resized vector.
```

```
3.9.3.17 bool equal_dim (

const mha_wave_t & a,

const mha_wave_t & b) [inline]
```

Test for equal dimension of waveform structures.

```
3.9.3.18 bool equal_dim (

const mha_wave_t & a,

const mhaconfig_t & b ) [inline]
```

Test for match of waveform dimension with mhaconfig structure.

```
3.9.3.19 bool equal_dim (

const mha_spec_t & a,

const mha spec_t & b) [inline]
```

Test for equal dimension of spectrum structures.

```
3.9.3.20 bool equal_dim (

const mha_spec_t & a,

const mhaconfig_t & b ) [inline]
```

Test for match of spectrum dimension with mhaconfig structure.

```
3.9.3.21 bool equal_dim (

const mha_wave_t & a,

const mha spec t & b ) [inline]
```

Test for equal dimension of waveform/spectrum structures.

### Warning

Waveform structures **mha\_wave\_t** (p. 472) use interleaved data order, while spectrum structures **mha\_spec\_t** (p. 442) use non-interleaved.

```
3.9.3.22 bool equal_dim (

const mha_spec_t & a,

const mha_wave_t & b ) [inline]
```

Test for equal dimension of waveform/spectrum structures.

## Warning

Waveform structures **mha\_wave\_t** (p. 472) use interleaved data order, while spectrum structures **mha\_spec\_t** (p. 442) use non-interleaved.

```
3.9.3.23 void integrate ( mha_wave_t & s )
```

Numeric integration of a signal vector (real values)

### **Parameters**

```
s Input signal vector
```

```
3.9.3.24 void integrate (

mha_spec_t & s )
```

Numeric integration of a signal vector (complex values)

#### **Parameters**

```
s Input signal vector
```

```
3.9.3.25 unsigned int size (

const mha wave t & s ) [inline]
```

Return size of a waveform structure.

```
3.9.3.26 unsigned int size (
                    const mha_spec_t & s ) [inline]
Return size of a spectrum structure.
3.9.3.27 unsigned int size (
                    const mha_wave_t * s ) [inline]
Return size of a waveform structure.
3.9.3.28 unsigned int size (
                    const mha_spec_t * s ) [inline]
Return size of a spectrum structure.
3.9.3.29 void clear (
                     mha_wave_t & s ) [inline]
Set all values of waveform to zero.
3.9.3.30 void clear (
                     mha_wave_t * s ) [inline]
Set all values of waveform to zero.
3.9.3.31 void clear (
                     mha_spec_t & s ) [inline]
Set all values of spectrum to zero.
3.9.3.32 void clear (
                     mha_spec_t * s ) [inline]
Set all values of spectrum to zero.
3.9.3.33 void assign (
                     mha wave t self,
                     mha real t val ) [inline]
```

Set all values of waveform 'self' to 'val'.

## **Parameters**

self	Waveform to be modified.
val	Value to be assigned to all entries of waveform.

```
3.9.3.34 void assign (

mha_wave_t self,

const mha_wave_t & val )
```

Set all values of waveform 'self' to 'val'.

#### **Parameters**

self	Waveform to be modified.
val	Source waveform structure.

```
3.9.3.35 void assign (

mha_spec_t self,

const mha_spec_t & val )
```

Set all values of spectrum 'self' to 'val'.

### **Parameters**

self	Spectrum to be modified.
val	Source spectrum.

```
3.9.3.36 void timeshift (

mha_wave_t & self,

int shift )
```

Time shift of waveform chunk.

Shifted areas are filled with zeros.

### **Parameters**

self	Waveform chunk to be shifted
shift	Shift amount, positive values shift to later times

Access an element of a waveform structure.

### **Parameters**

s	Waveform structure
fr	Frame number
ch	Channel number

### Returns

Reference to element

Constant access to an element of a waveform structure.

### **Parameters**

s	Waveform structure
fr	Frame number
ch	Channel number

#### Returns

Reference to element

Access to an element of a spectrum.

### **Parameters**

s	Spectrum structure
fr	Bin number
ch	Channel number

# **Returns**

Reference to element

Constant access to an element of a spectrum.

## **Parameters**

s	Spectrum structure
fr	Bin number
ch	Channel number

## **Returns**

Reference to element

Access to an element of a waveform structure.

### **Parameters**

s	Waveform structure
fr	Frame number
ch	Channel number

## **Returns**

Reference to element

Constant access to an element of a waveform structure.

## **Parameters**

s	Waveform structure
fr	Frame number
ch	Channel number

### **Returns**

Reference to element

Access to an element of a spectrum.

#### **Parameters**

s	Spectrum structure
fr	Bin number
ch	Channel number

#### **Returns**

Reference to element

Constant access to an element of a spectrum.

### **Parameters**

s	Spectrum structure
fr	Bin number
ch	Channel number

#### Returns

Reference to element

Converts a **mha\_wave\_t** (p. 472) structure into a std::vector<float> (interleaved order).

## Warning

This function is not real-time safe. Do not use in signal processing thread.

Converts a **mha\_wave\_t** (p. 472) structure into a std::vector< std::vector<float> > (outer vector represents channels).

## Warning

This function is not real-time safe. Do not use in signal processing thread.

Converts a **mha\_spec\_t** (p. 442) structure into a std::vector< std::vector<mha\_complex\_t>> (outer vector represents channels).

## Warning

This function is not real-time safe. Do not use in signal processing thread.

Addition operator.

Addition operator.

Subtraction operator.

Subtraction operator.

```
3.9.3.52 mha_wave_t& operator*= (
                    mha_wave_t &,
                    const mha real t & )
Element-wise multiplication operator.
3.9.3.53 mha_wave_t& operator*= (
                    mha wave t&,
                    const mha wave t & )
Element-wise multiplication operator.
3.9.3.54 mha spec t& operator*= (
                    mha spec t&,
                    const mha real t & )
Element-wise multiplication operator.
3.9.3.55 mha_spec_t& operator*= (
                    mha_spec_t &,
                    const mha_wave_t & )
Element-wise multiplication operator.
3.9.3.56 mha_spec_t& operator*= (
                    mha_spec_t &,
                    const mha spec t & )
Element-wise multiplication operator.
3.9.3.57 mha_spec_t& operator/= (
                    mha_spec_t &,
                    const mha_spec_t & )
Element-wise division operator.
3.9.3.58 mha_wave_t& operator/= (
                    mha_wave_t &,
                    const mha_wave_t & )
Element-wise division operator.
3.9.3.59 mha spec t& operator+= (
                    mha_spec_t &,
                    const mha_spec_t & )
```

Addition operator.

Addition operator.

Exponent operator.

# Warning

This overwrites the xor operator!

Copy one channel of a source signal.

# **Parameters**

self	Destination.
src	Source
sch	Source channel number
dch	Destination channel number

Copy one channel of a source signal.

#### **Parameters**

self	Destination.
src	Source
src_channel	Source channel number
dest_channel	Destination channel number

Return RMS level of a spectrum channel.

#### **Parameters**

S	Input spectrum
channel	Channel number to be tested
fftlen	FFT length (to correctly count the level of the Nyquist bin)

### **Returns**

RMS level in Pa

Colored spectrum intensity.

computes the squared sum of the spectrum after filtering with the frequency response

#### **Parameters**

S	Input spectrum
channel	Channel number to be tested
fftlen	FFT length (to correctly count the level of the Nyquist bin)
sqfreq_response	A squared weighting factor for every fft bin.

### Returns

sum of squares. Root of this is the colored level in Pa

Find maximal absolute value.

## **Parameters**

s	Input signal
channel	Channel to be tested

### **Returns**

maximum absolute value

Return RMS level of a waveform channel.

## **Parameters**

s	Input waveform signal
channel	Channel number to be tested

#### **Returns**

RMS level in Pa

Find maximal absolute value.

### **Parameters**

s	Input signal
channel	Channel to be tested

### **Returns**

maximum absolute value

Find maximal absolute value.

### **Parameters**

```
s Input signal
```

### **Returns**

maximum absolute value

```
3.9.3.70 mha_real_t MHASignal::max (
const mha_wave_t & s )
```

Find maximal value.

**Parameters** 

```
s Input signal
```

#### **Returns**

maximum absolute value

```
3.9.3.71 mha_real_t MHASignal::min (
const mha_wave_t & s )
```

Find minimal value.

**Parameters** 

```
s Input signal
```

## **Returns**

maximum absolute value

Calculate sum of squared values in one channel.

## **Parameters**

S	Input signal
channel	Channel

**Returns** 

$$\sum x^2$$

Calculate sum over all channels of squared values.

## **Parameters**

S	Input signal
frame	Frame number


## **Returns**

$$\textstyle\sum x^2$$

Replace (!) the value of this **mha\_spec\_t** (p. 442) with its conjugate.

# 3.10 Complex arithmetics in the openMHA

Collaboration diagram for Complex arithmetics in the openMHA:

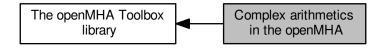

#### Classes

struct mha\_complex\_t

Type for complex floating point values.

#### **Functions**

- mha\_complex\_t & set (mha\_complex\_t &self, mha\_real\_t real, mha\_real\_t imag=0)

  Assign real and imaginary parts to a mha\_complex\_t (p. 410) variable.
- mha\_complex\_t mha\_complex (mha\_real\_t real, mha\_real\_t imag=0)
   Create a new mha\_complex\_t (p. 410) with specified real and imaginary parts.
- mha\_complex\_t & set (mha\_complex\_t &self, const std::complex < mha\_real\_t > &stdcomplex)

Assign a **mha\_complex\_t** (p. 410) variable from a std::complex.

- std::complex < mha\_real\_t > stdcomplex (const mha\_complex\_t &self)
   Create a std::complex from mha\_complex\_t (p. 410).
- mha\_complex\_t & expi (mha\_complex\_t &self, mha\_real\_t angle)

  replaces the value of the given mha\_complex\_t (p. 410) with exp(i\*b).
- double angle (const mha complex t &self)

Computes the angle of a complex number in the complex plane.

- mha\_complex\_t & operator+= (mha\_complex\_t &self, const mha\_complex\_t &other)

  Addition of two complex numbers, overwriting the first.
- mha\_complex\_t operator+ (const mha\_complex\_t &self, const mha\_complex\_
   t &other)

Addition of two complex numbers, result is a temporary object.

- mha\_complex\_t & operator+= (mha\_complex\_t &self, mha\_real\_t other\_real)

  Addition of a complex and a real number, overwriting the complex.
- mha\_complex\_t operator+ (const mha\_complex\_t &self, mha\_real\_t other\_real)

  Addition of a complex and a real number, result is a temporary object.
- mha\_complex\_t & operator-= (mha\_complex\_t &self, const mha\_complex\_t &other)

  Subtraction of two complex numbers, overwriting the first.

mha\_complex\_t operator- (const mha\_complex\_t &self, const mha\_complex\_
 t &other)

Subtraction of two complex numbers, result is a temporary object.

mha\_complex\_t & operator-= (mha\_complex\_t &self, mha\_real\_t other\_real)

Subtraction of a complex and a real number, overwriting the complex.

• mha\_complex\_t operator- (const mha\_complex\_t &self, mha\_real\_t other\_real)

Subtraction of a complex and a real number, result is a temporary object.

- mha\_complex\_t & operator\*= (mha\_complex\_t &self, const mha\_complex\_t &other)

  Multiplication of two complex numbers, overwriting the first.
- mha\_complex\_t operator\* (const mha\_complex\_t &self, const mha\_complex\_
   t &other)

Multiplication of two complex numbers, result is a temporary object.

mha\_complex\_t & operator\*= (mha\_complex\_t &self, mha\_real\_t other\_real)

Multiplication of a complex and a real number, overwriting the complex.

- mha\_complex\_t & expi (mha\_complex\_t &self, mha\_real\_t angle, mha\_real\_t factor)
   replaces (!) the value of the given mha\_complex\_t (p. 410) with a \* exp(i\*b)
- mha\_complex\_t operator\* (const mha\_complex\_t &self, mha\_real\_t other\_real)

  Multiplication of a complex and a real number, result is a temporary object.
- mha\_real\_t abs2 (const mha\_complex\_t &self)

Compute the square of the absolute value of a complex value.

mha\_real\_t abs (const mha\_complex\_t &self)

Compute the absolute value of a complex value.

mha\_complex\_t & operator/= (mha\_complex\_t &self, mha\_real\_t other\_real)

Division of a complex and a real number, overwriting the complex.

• mha\_complex\_t operator/ (const mha\_complex\_t &self, mha\_real\_t other\_real)

Division of a complex and a real number, result is a temporary object.

 mha\_complex\_t & safe\_div (mha\_complex\_t &self, const mha\_complex\_t &other, mha\_real\_t eps, mha\_real\_t eps2)

Safe division of two complex numbers, overwriting the first.

- mha\_complex\_t & operator/= (mha\_complex\_t &self, const mha\_complex\_t &other)

  Division of two complex numbers, overwriting the first.
- mha\_complex\_t operator/ (const mha\_complex\_t &self, const mha\_complex\_← t &other)

Division of two complex numbers, result is a temporary object.

• mha complex t operator- (const mha complex t &self)

Unary minus on a complex results in a negative temporary object.

bool operator== (const mha\_complex\_t &x, const mha\_complex\_t &y)

Compare two complex numbers for equality.

• bool operator!= (const mha\_complex\_t &x, const mha\_complex\_t &y)

Compare two complex numbers for inequality.

void conjugate (mha\_complex\_t &self)

Replace (!) the value of this **mha** complex t (p. 410) with its conjugate.

mha\_complex\_t \_conjugate (const mha\_complex\_t &self)

Compute the cojugate of this complex value.

void reciprocal (mha complex t &self)

Replace the value of this complex with its reciprocal.

mha\_complex\_t \_reciprocal (const mha\_complex\_t &self)

compute the reciprocal of this complex value.

void normalize (mha\_complex\_t &self)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle).

void normalize (mha\_complex\_t &self, mha\_real\_t margin)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle), with a safety margin.

bool almost (const mha\_complex\_t &self, const mha\_complex\_t &other, mha\_real\_t times\_epsilon=1e2)

Compare two complex numbers for equality except for a small relative error.

bool operator< (const mha\_complex\_t &x, const mha\_complex\_t &y)</li>

Compares the absolute values of two complex numbers.

# 3.10.1 Detailed Description

### 3.10.2 Function Documentation

Assign real and imaginary parts to a **mha\_complex\_t** (p. 410) variable.

### **Parameters**

self	The <b>mha_complex_t</b> (p. 410) variable whose value is about to change.
real	The new real part.
imag	The new imaginary part.

### Returns

A reference to the changed variable.

Create a new **mha** complex t (p. 410) with specified real and imaginary parts.

real	The real part.
imag	The imaginary part.

# Returns

The new value.

Assign a **mha\_complex\_t** (p. 410) variable from a std::complex.

### **Parameters**

self	The <b>mha_complex_t</b> (p. 410) variable whose value is about to change.
stdcomplex	The new complex value.

### **Returns**

A reference to the changed variable.

Create a std::complex from **mha\_complex\_t** (p. 410).

replaces the value of the given **mha\_complex\_t** (p. 410) with exp(i\*b).

# **Parameters**

self	The <b>mha_complex_t</b> (p. 410) variable whose value is about to change.
angle	The angle in the complex plane [rad].

### **Returns**

A reference to the changed variable.

```
3.10.2.6 double angle ( const mha_complex_t & self ) [inline]
```

Computes the angle of a complex number in the complex plane.

# **Parameters**

self The complex number whose angle is needed.

### **Returns**

The angle of a complex number in the complex plane.

Addition of two complex numbers, overwriting the first.

Addition of two complex numbers, result is a temporary object.

Addition of a complex and a real number, overwriting the complex.

Addition of a complex and a real number, result is a temporary object.

Subtraction of two complex numbers, overwriting the first.

Subtraction of two complex numbers, result is a temporary object.

Subtraction of a complex and a real number, overwriting the complex.

```
3.10.2.14 mha_complex_t operator-(
const mha_complex_t & self,
mha_real_t other_real) [inline]
```

Subtraction of a complex and a real number, result is a temporary object.

Multiplication of two complex numbers, overwriting the first.

Multiplication of two complex numbers, result is a temporary object.

Multiplication of a complex and a real number, overwriting the complex.

replaces (!) the value of the given **mha\_complex\_t** (p. 410) with a \* exp(i\*b)

self	The <b>mha_complex_t</b> (p. 410) variable whose value is about to change.
angle	The imaginary exponent.
factor	The absolute value of the result.

#### **Returns**

A reference to the changed variable.

```
3.10.2.19 mha_complex_t operator* (

const mha_complex_t & self,

mha_real_t other_real ) [inline]
```

Multiplication of a complex and a real number, result is a temporary object.

```
3.10.2.20 mha_real_t abs2 (

const mha_complex_t & self ) [inline]
```

Compute the square of the absolute value of a complex value.

### Returns

The square of the absolute value of self.

```
3.10.2.21 mha_real_t abs (

const mha complex t & self ) [inline]
```

Compute the absolute value of a complex value.

# **Returns**

The absolute value of self.

Division of a complex and a real number, overwriting the complex.

```
3.10.2.23 mha_complex_t operator/ (

const mha_complex_t & self,

mha real t other real ) [inline]
```

Division of a complex and a real number, result is a temporary object.

Safe division of two complex numbers, overwriting the first.

If abs(divisor) < eps, then divisor is replaced by eps. eps2 = eps\*eps.

```
3.10.2.25 mha_complex_t& operator/= (
                     mha_complex_t & self,
                     const mha complex t & other ) [inline]
Division of two complex numbers, overwriting the first.
3.10.2.26 mha_complex_t operator/ (
                     const mha complex t & self,
                     const mha complex t & other ) [inline]
Division of two complex numbers, result is a temporary object.
3.10.2.27 mha_complex_t operator- (
                     const mha_complex_t & self ) [inline]
Unary minus on a complex results in a negative temporary object.
3.10.2.28 bool operator== (
                     const mha_complex_t & x,
                     const mha_complex_t & y ) [inline]
Compare two complex numbers for equality.
3.10.2.29 bool operator!= (
                     const mha_complex_t & x,
                     const mha_complex_t & y ) [inline]
Compare two complex numbers for inequality.
3.10.2.30 void conjugate (
                     mha_complex_t & self ) [inline]
Replace (!) the value of this mha_complex_t (p. 410) with its conjugate.
3.10.2.31 mha_complex_t _conjugate (
                     const mha_complex_t & self ) [inline]
```

**Returns** 

A temporary object holding the conjugate value.

Compute the cojugate of this complex value.

Replace the value of this complex with its reciprocal.

compute the reciprocal of this complex value.

#### **Returns**

A temporary object holding the reciprocal value.

```
3.10.2.34 void normalize (

mha_complex_t & self ) [inline]
```

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle).

```
3.10.2.35 void normalize (

mha_complex_t & self,

mha_real_t margin ) [inline]
```

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle), with a safety margin.

```
3.10.2.36 bool almost (

const mha_complex_t & self,

const mha_complex_t & other,

mha_real_t times_epsilon = 1e2 ) [inline]
```

Compare two complex numbers for equality except for a small relative error.

# **Parameters**

self	The first complex number.
other	The second complex number.
times_epsilon	Permitted relative error is this number multiplied with the machine accuracy for this Floating point format (std::numeric_limits <mha_real_t>::epsilon)</mha_real_t>


# Returns

true if the relative difference is below times\_epsilon \* std::numeric\_limits<mha\_real\_t> $\leftarrow$  ::epsilon

Compares the absolute values of two complex numbers.

# 3.11 Fast Fourier Transform functions

Collaboration diagram for Fast Fourier Transform functions:

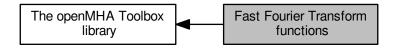

# **Typedefs**

typedef void \* mha\_fft\_t
 Handle for an FFT object.

#### **Functions**

mha\_fft\_t mha\_fft\_new (unsigned int n)

Create a new FFT handle.

void mha\_fft\_free (mha\_fft\_t h)

Destroy an FFT handle.

- void mha\_fft\_wave2spec (mha\_fft\_t h, const mha\_wave\_t \*in, mha\_spec\_t \*out)

  Tranform waveform segment into spectrum.
- void mha\_fft\_wave2spec (mha\_fft\_t h, const mha\_wave\_t \*in, mha\_spec\_t \*out, bool swaps)

Tranform waveform segment into spectrum.

- void mha\_fft\_spec2wave (mha\_fft\_t h, const mha\_spec\_t \*in, mha\_wave\_t \*out)

  Tranform spectrum into waveform segment.
- void mha\_fft\_spec2wave (mha\_fft\_t h, const mha\_spec\_t \*in, mha\_wave\_t \*out, unsigned int offset)

Tranform spectrum into waveform segment.

- void mha\_fft\_forward (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (forward).
- void mha\_fft\_backward (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (backward).
- void mha\_fft\_forward\_scale (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (forward).
- void mha\_fft\_backward\_scale (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (backward).
- void mha\_fft\_wave2spec\_scale (mha\_fft\_t h, const mha\_wave\_t \*in, mha\_spec\_← t \*out)

Tranform waveform segment into spectrum.

void mha\_fft\_spec2wave\_scale (mha\_fft\_t h, const mha\_spec\_t \*in, mha\_wave\_←
t \*out)

Tranform spectrum into waveform segment.

- 3.11.1 Detailed Description
- 3.11.2 Typedef Documentation
- 3.11.2.1 typedef void\* mha\_fft\_t

Handle for an FFT object.

This FFT object is used by the functions mha\_fft\_wave2spec and mha\_fft\_spec2wave. The F← FT back-end is the FFTW library. The back-end is completely hidden, including external header files or linking external libraries is not required.

3.11.3 Function Documentation

Create a new FFT handle.

**Parameters** 

```
n FFT length.
```

Create a new FFT handle.

**Parameters** 

```
n FFT length
```

**Return values** 

Destroy an FFT handle.

**Parameters** 

```
h Handle to be destroyed.
```

Destroy an FFT handle.

# **Parameters**

h	FFT object to be removed

Tranform waveform segment into spectrum.

### **Parameters**

h	FFT handle.
in	Input waveform segment.
out	Output spectrum.

Tranform waveform segment into spectrum.

### **Parameters**

h	FFT object handle	
in	pointer to input waveform signal	
out	pointer to output spectrum signal (has to be allocated)	

Tranform waveform segment into spectrum.

Like normal wave2spec, but swaps wave buffer halves before transforming if the swaps parameter is true.

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the '\_scale' methods instead.

h	FFT handle.	
in	Input waveform segment.	
out	Output spectrum.	
swaps	Function swaps the first and second half of the waveform buffer before the FFT transform when this parameter is set to true.	

Tranform spectrum into waveform segment.

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the 'scale' methods instead.

#### **Parameters**

h	FFT handle.
in	Input spectrum.
out	Output waveform segment.

Tranform spectrum into waveform segment.

#### **Parameters**

h	FFT object handle
in	pointer to input spectrum
out	pointer to output waveform signal (has to be allocated)

Tranform spectrum into waveform segment.

out may have fewer number of frames than needed for a complete iFFT. Only as many frames are written into out as fit, starting with offset offset of the complete iFFT.

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the 'scale' methods instead.

h	FFT handle.	
in	Input spectrum.	
out	Output waveform segment.	
offset	Offset into iFFT wave buffer	

Tranform spectrum into waveform segment.

Only part of the iFFT is tranferred into the out buffer.

Out may have fewer number of freames than needed for a complete iFFT. Only as many frames are written into out as fit, starting with offset offset of the complete iFFT.

#### **Parameters**

h	FFT object handle
in	pointer to input spectrum
out	pointer to output waveform signal (has to be allocated)
offset	Offset into complete iFFT buffer.

Complex to complex FFT (forward).

sIn and sOut need to have nfft bins (please note that **mha\_spec\_t** (p. 442) typically has nfft/2+1 bins for half-complex representation).

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the 'scale' methods instead.

### **Parameters**

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Complex to complex FFT (backward).

sln and sOut need to have nfft bins (please note that **mha\_spec\_t** (p. 442) typically has nfft/2+1 bins for half-complex representation).

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the '\_scale' methods instead.

# **Parameters**

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Complex to complex FFT (forward).

sIn and sOut need to have nfft bins (please note that **mha\_spec\_t** (p. 442) typically has nfft/2+1 bins for half-complex representation).

The \_scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

#### **Parameters**

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Complex to complex FFT (backward).

sIn and sOut need to have nfft bins (please note that **mha\_spec\_t** (p. 442) typically has nfft/2+1 bins for half-complex representation).

The \_scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Tranform waveform segment into spectrum.

The \_scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

# **Parameters**

h	FFT handle.
in	Input waveform segment.
out	Output spectrum.

Tranform spectrum into waveform segment.

The \_scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

h	FFT handle.
in	Input spectrum.
out	Output waveform segment.

# 4 Namespace Documentation

# 4.1 ac2lsl Namespace Reference

All types for the **ac2IsI** (p. 73) plugins live in this namespace.

### Classes

class ac2lsl\_t

Plugin class of ac2lsl (p. 73).

· class cfg\_t

Runtime configuration class of the ac2lsl (p. 73) plugin.

class save\_var\_base\_t

Interface for ac to Isl bridge variable.

class save\_var\_t

Implementation for all ac to Isl bridges except complex types.

class save\_var\_t< mha\_complex\_t >

Template specialization of the ac2lsl (p. 73) bridge to take care of complex numbers.

# 4.1.1 Detailed Description

All types for the **ac2IsI** (p. 73) plugins live in this namespace.

# 4.2 acmon Namespace Reference

Namespace for displaying ac variables as parser monitors.

### **Classes**

class ac\_monitor\_t

A class for converting AC variables to Parser monitors of correct type.

class acmon\_t

# 4.2.1 Detailed Description

Namespace for displaying ac variables as parser monitors.

# 4.3 acsave Namespace Reference

### Classes

- · class acsave\_t
- class cfg t
- struct mat4head\_t
- class save\_var\_t

# 4.4 addsndfile Namespace Reference

#### Classes

- · class addsndfile if t
- · class level\_adapt\_t
- class resampled\_soundfile\_t

Reads sound from file and resamples it if necessary and wanted.

- class sndfile t
- class waveform\_proxy\_t

Class helps to specify which instance of MHASignal\_waveform\_t parent instance is meant in **resampled\_soundfile\_t** (p. 176).

# **Typedefs**

- typedef MHAPlugin::config\_t< level\_adapt\_t > level\_adaptor
- typedef MHAPlugin::plugin\_t< sndfile\_t > wave\_reader

### **Enumerations**

# **Functions**

- static unsigned resampled\_num\_frames (unsigned num\_source\_frames, float source
   —rate, float target\_rate, addsndfile\_resampling\_mode\_t resampling\_mode)
- 4.4.1 Typedef Documentation
- 4.4.1.1 typedef MHAPlugin::config\_t<level\_adapt\_t> addsndfile::level\_adaptor
- 4.4.1.2 typedef MHAPlugin::plugin\_t<sndfile\_t> addsndfile::wave\_reader
- 4.4.2 Enumeration Type Documentation
- 4.4.2.1 enum addsndfile::addsndfile\_resampling\_mode\_t

Specifies the resampling mode in **resampled\_soundfile\_t** (p. 176).

#### **Enumerator**

# DONT\_RESAMPLE\_PERMISSIVE

**DONT\_RESAMPLE\_STRICT** Do not resample, if the sample rate of the MHA differs from the sample rate of the sound file, raise an error.

DO\_RESAMPLE Resample.

## 4.4.3 Function Documentation

# 4.5 ADM Namespace Reference

### Classes

class ADM

Adaptive differential microphone, working for speech frequency range.

class Delay

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

• class Linearphase\_FIR

An efficient linear-phase fir filter implementation.

### **Functions**

static double subsampledelay\_coeff (double samples, double f\_design, double fs=1.0)
 compute IIR coefficient for subsample delay

### **Variables**

- const double **PI** = 3.14159265358979312
- const double **C** = 340
- const double DELAY\_FREQ = 2000
- const double **START\_BETA** = 0.5

### 4.5.1 Function Documentation

compute IIR coefficient for subsample delay

samples	Constraint: 0.0 <= samples < 1.0; Amount of sub-sample delay
	design frequency (subsample delay is accurate for this frequency)
© 2005-2018 Hör Jach gamb Haldenburg	

#### **Returns**

IIR coefficient for subsample delay

### 4.5.2 Variable Documentation

- 4.5.2.1 const double ADM::PI = 3.14159265358979312
- 4.5.2.2 const double ADM::C = 340
- 4.5.2.3 const double ADM::DELAY FREQ = 2000
- 4.5.2.4 const double ADM::START\_BETA = 0.5

# 4.6 AuditoryProfile Namespace Reference

Namespace for classes and functions around the auditory profile (e.g., audiogram handling)

### Classes

· class fmap t

A class to store frequency dependent data (e.g., HTL and UCL).

class parser\_t

Class to make the auditory profile accessible through the parser interface.

class profile\_t

The Auditory Profile class.

# 4.6.1 Detailed Description

Namespace for classes and functions around the auditory profile (e.g., audiogram handling)

The auditory profile as defined by HearCom or BMBF Modellbasierte Hoergeraete is stored in the class **AuditoryProfile::profile\_t** (p. 218). Until a complete definition is available, only the currently needed elements are implemented.

# 4.7 coherence Namespace Reference

# **Classes**

- · class cohflt if t
- · class cohflt t
- class vars t

### **Functions**

 void getcipd (mha\_complex\_t &c, mha\_real\_t &a, const mha\_complex\_t &xl, const mha\_complex\_t &xr)

#### 4.7.1 Function Documentation

```
4.7.1.1 void coherence::getcipd (

mha_complex_t & c,

mha_real_t & a,

const mha_complex_t & xl,

const mha_complex_t & xr ) [inline]
```

# 4.8 dc Namespace Reference

#### Classes

- · class dc\_if\_t
- class dc t
- class dc\_vars\_t
- class dc\_vars\_validator\_t
- · class wb inhib cfg t
- class wideband\_inhib\_vars\_t

# **Functions**

unsigned int get\_audiochannels (unsigned int totalchannels, std::string acname, algo
 \_comm\_t ac)

# 4.8.1 Function Documentation

# 4.9 dc\_simple Namespace Reference

# Classes

- · class dc if t
- class dc\_t
- class dc\_vars\_t
- class dc\_vars\_validator\_t
- class level\_smoother\_t

# **Typedefs**

- typedef MHAPlugin::plugin\_t< dc\_t > DC
- typedef MHAPlugin::config\_t< level\_smoother\_t > LEVEL

#### **Functions**

- void **test\_fail** (const std::vector< float > &v, unsigned int s, const std::string &name)
- std::vector< float > force\_resize (const std::vector< float > &v, unsigned int s, const std::string &name)
- mha\_real\_t not\_zero (mha\_real\_t x, const std::string &comment="")
- 4.9.1 Typedef Documentation
- 4.9.1.1 typedef MHAPlugin::plugin\_t<dc\_t> dc\_simple::DC
- 4.9.1.2 typedef MHAPlugin::config\_t<level\_smoother\_t> dc\_simple::LEVEL
- 4.9.2 Function Documentation
- 4.9.2.2 std::vector<float> dc\_simple::force\_resize ( const std::vector< float > & v, unsigned int s, const std::string & name)
- 4.10 delay Namespace Reference

# Classes

- class interface\_t
- 4.11 delaysum Namespace Reference

This namespace contains the delaysum plugin.

#### **Classes**

• class delaysum\_if\_t

Interface class for the delaysum plugin.

class delaysum\_t

Runtime configuration of the delaysum plugin.

# 4.11.1 Detailed Description

This namespace contains the delaysum plugin.

# 4.12 DynComp Namespace Reference

dynamic compression related classes and functions

#### Classes

• class dc\_afterburn\_rt\_t

Real-time class for after burn effect.

class dc\_afterburn\_t

Afterburn class, to be defined as a member of compressors.

class dc afterburn vars t

Variables for dc\_afterburn\_t (p. 286) class.

class gaintable t

Gain table class.

# **Functions**

mha\_real\_t interp1 (const std::vector< mha\_real\_t > &vX, const std::vector< mha\_←
real\_t > &vY, mha\_real\_t X)

One-dimensional linear interpolation.

mha\_real\_t interp2 (const std::vector< mha\_real\_t > &vX, const std::vector< mha←
 \_real\_t > &vY, const std::vector< std::vector< mha\_real\_t >> &mZ, mha\_real\_t X,
 mha\_real\_t Y)

Linear interpolation in a two-dimensional field.

# 4.12.1 Detailed Description

dynamic compression related classes and functions

#### 4.12.2 Function Documentation

```
4.12.2.1 mha_real_t DynComp::interp1 ( const std::vector< mha_real_t > \& vX, const std::vector< mha_real_t > \& vY, mha_real_t X)
```

One-dimensional linear interpolation.

# **Parameters**

νX	Vector with input samples.
νY	Vector with values at input samples.
Χ	Input value to be interpolated.

### **Return values**

Interpolated	value $Y(X)$ at position $X$ .
--------------	--------------------------------

```
4.12.2.2 mha_real_t DynComp::interp2 (  const \ std::vector < mha\_real\_t > \& \ vX, \\ const \ std::vector < mha\_real\_t > \& \ vY, \\ const \ std::vector < std::vector < mha\_real\_t > & \ mZ, \\ mha\_real\_t \ X, \\ mha\_real\_t \ Y \ )
```

Linear interpolation in a two-dimensional field.

# **Parameters**

νX	Vector with input samples, first dimension.
νY	Vector with input samples, second dimension.
mΖ	Field with values at input samples.
X	First dimension of input value to be interpolated.
Y	Second dimension of input value to be interpolated.

# **Return values**

```
Interpolated value Z(X,Y) at position X,Y.
```

4.13 fader\_wave Namespace Reference

# Classes

- class fader\_wave\_if\_t
- class level\_adapt\_t

# **Typedefs**

typedef MHAPlugin::plugin\_t< level\_adapt\_t > level\_adaptor

# 4.13.1 Typedef Documentation

# 4.13.1.1 typedef MHAPlugin::plugin\_t<level\_adapt\_t> fader\_wave::level\_adaptor

# 4.14 fftfbpow Namespace Reference

Namespace for the fftfbpow plugin.

### Classes

- class fftfbpow\_interface\_t
   Interface class for fftfbpow plugin.
- class fftfbpow\_t

Run time configuration for the fftfbpow plugin.

# 4.14.1 Detailed Description

Namespace for the fftfbpow plugin.

# 4.15 fftfilterbank Namespace Reference

# Classes

- class fftfb\_interface\_t
- class fftfb\_plug\_t

# 4.16 gain Namespace Reference

# Classes

- class gain\_if\_t
- class scaler t

# 4.17 matrixmixer Namespace Reference

### **Classes**

- class cfg\_t
- class matmix\_t

# 4.18 MHA\_AC Namespace Reference

Functions and classes for Algorithm Communication (AC) support.

### Classes

- class ac2matrix\_helper\_t
- class ac2matrix t

Copy AC variable to a matrix.

class acspace2matrix t

Copy all or a subset of all numeric AC variables into an array of matrixes.

· class double t

Insert a double precision floating point variable into the AC space.

class float t

Insert a float point variable into the AC space.

• class int t

Insert a integer variable into the AC space.

class spectrum\_t

Insert a MHASignal::spectrum\_t (p. 775) class into the AC space.

- · class stat t
- class waveform t

Insert a MHASignal::waveform\_t (p. 787) class into the AC space.

### **Functions**

- mha\_spec\_t get\_var\_spectrum (algo\_comm\_t ac, const std::string &name)

  Convert an AC variable into a spectrum.
- mha\_wave\_t get\_var\_waveform (algo\_comm\_t ac, const std::string &name)
   Convert an AC variable into a waveform.
- int **get\_var\_int** (**algo\_comm\_t** ac, const std::string &name)

Return value of an integer scalar AC variable.

float get\_var\_float (algo\_comm\_t ac, const std::string &name)

Return value of an floating point scalar AC variable.

std::vector < float > get\_var\_vfloat (algo\_comm\_t ac, const std::string &name)
 Return value of an floating point vector AC variable as standard vector of floats.

# 4.18.1 Detailed Description

Functions and classes for Algorithm Communication (AC) support.

# 4.19 mha\_error\_helpers Namespace Reference

# **Functions**

- unsigned digits (unsigned n)
   Compute number of decimal digits required to represent an unsigned integer.
- unsigned **snprintf\_required\_length** (const char \*formatstring,...)

  snprintf\_required\_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.

#### 4.19.1 Function Documentation

```
4.19.1.1 unsigned mha_error_helpers::digits ( unsigned n )
```

Compute number of decimal digits required to represent an unsigned integer.

### **Parameters**

n The unsigned integer that we want to know the number of required decimal digits for. return The number of decimal digits in n.

```
4.19.1.2 unsigned mha_error_helpers::snprintf_required_length ( const char * formatstring, ... )
```

snprintf\_required\_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.

### **Parameters**

۱	( t - t	The format string with standard printf formatstring
۱	tormatstring	The format string with standard brintt formatstring
- 1	ioimatetimg	The format caming with classical a printe formationing

### **Returns**

the number of bytes required by printf without the terminating nul

# 4.20 MHA\_TCP Namespace Reference

A Namespace for TCP helper classes.

#### **Classes**

class Async\_Notify

Portable Multiplexable cross-thread notification.

· class Client

A portable class for a tcp client connections.

class Connection

Connection (p. 447) handles Communication between client and server, is used on both sides.

class Event\_Watcher

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

- struct OS EVENT TYPE
- class Server
- class sock\_init\_t
- class Sockaccept Event
- · class Sockread Event

Watch socket for incoming data.

- class Sockwrite\_Event
- · class Thread

A very simple class for portable threads.

- class Timeout\_Event
- · class Timeout Watcher

OS-independent event watcher with internal fixed-end-time timeout.

class Wakeup\_Event

A base class for asynchronous wakeup events.

# **Typedefs**

typedef int SOCKET

#### **Functions**

std::string STRERROR (int err)

Portable conversion from error number to error string.

std::string HSTRERROR (int err)

Portable conversion from hostname error number to error string.

int **N\_ERRNO** ()

Portable access to last network error number.

• int **H\_ERRNO** ()

Portable access to last hostname error number.

int **G\_ERRNO** ()

Portable access to last non-network error number.

• double dtime ()

Time access function for system's high resolution time, retrieve current time as double.

double dtime (const struct timeval &tv)

Time access function for unix' high resolution time, converts struct timeval to double.

struct timeval stime (double d)

Time access function for unix' high resolution time, converts time from double to struct timeval.

**Variables** 

```
    class MHA_TCP::sock_init_t sock_initializer
```

```
4.20.1 Detailed Description
```

A Namespace for TCP helper classes.

```
4.20.2 Typedef Documentation
```

```
4.20.2.1 typedef int MHA_TCP::SOCKET
```

4.20.3 Function Documentation

```
4.20.3.1 std::string MHA_TCP::STRERROR ( int err )
```

Portable conversion from error number to error string.

```
4.20.3.2 std::string MHA_TCP::HSTRERROR ( int err )
```

Portable conversion from hostname error number to error string.

```
4.20.3.3 int MHA_TCP::N_ERRNO ( )
```

Portable access to last network error number.

```
4.20.3.4 int MHA_TCP::H_ERRNO ( )
```

Portable access to last hostname error number.

```
4.20.3.5 int MHA_TCP::G_ERRNO ( )
```

Portable access to last non-network error number.

```
4.20.3.6 double MHA_TCP::dtime ( )
```

Time access function for system's high resolution time, retrieve current time as double.

```
4.20.3.7 double MHA_TCP::dtime (
const struct timeval & tv )
```

Time access function for unix' high resolution time, converts struct timeval to double.

# 4.20.3.8 struct timeval MHA\_TCP::stime ( double *d* )

Time access function for unix' high resolution time, converts time from double to struct timeval.

- 4.20.4 Variable Documentation
- 4.20.4.1 class MHA\_TCP::sock\_init\_t MHA\_TCP::sock\_initializer
- 4.21 mhachain Namespace Reference

#### Classes

- class chain base t
- class mhachain\_t
- class plugs\_t
- 4.22 MHAEvents Namespace Reference

Collection of event handling classes.

# **Classes**

- class connector\_base\_t
- class connector\_t
- · class emitter t

Class for emitting openMHA events.

class patchbay\_t

Patchbay which connects any event emitter with any member function of the parameter class.

4.22.1 Detailed Description

Collection of event handling classes.

4.23 MHAFilter Namespace Reference

Namespace for IIR and FIR filter classes.

#### **Classes**

- class adapt\_filter\_param\_t
- class adapt\_filter\_state\_t
- class adapt\_filter\_t

Adaptive filter.

class blockprocessing\_polyphase\_resampling\_t

A class that does polyphase resampling and takes into account block processing.

class complex\_bandpass\_t

Complex bandpass filter.

· class diff\_t

Differentiator class (non-normalized)

class fftfilter t

FFT based FIR filter implementation.

class fftfilterbank t

FFT based FIR filterbank implementation.

· class filter t

Generic IIR filter class.

class gamma\_flt\_t

Class for gammatone filter.

- class iir\_filter\_state\_t
- class iir\_filter\_t

IIR filter class wrapper for integration into parser structure.

class iir\_ord1\_real\_t

First order recursive filter.

class o1\_ar\_filter\_t

First order attack-release lowpass filter.

class o1flt\_lowpass\_t

First order low pass filter.

• class o1flt\_maxtrack\_t

First order maximum tracker.

class o1flt\_mintrack\_t

First order minimum tracker.

class partitioned\_convolution\_t

A filter class for partitioned convolution.

class polyphase\_resampling\_t

A class that performs polyphase resampling.

class resampling\_filter\_t

Hann shaped low pass filter for resampling.

class smoothspec t

Smooth spectral gains, create a windowed impulse response.

- class thirdoctave\_analyzer\_t
- struct transfer\_function\_t

a structure containing a source channel number, a target channel number, and an impulse response.

• struct transfer\_matrix\_t

A sparse matrix of transfer function partitionss.

### **Functions**

- void make friendly number (mha real t &x)
- void make\_friendly\_number (mha\_complex\_t &x)
- void make\_friendly\_number (double &x)
- void o1\_lp\_coeffs (const mha\_real\_t tau, const mha\_real\_t fs, mha\_real\_t &c1, mha
   \_real\_t &c2)

Set first order filter coefficients from time constant and sampling rate.

- void **butter\_stop\_ord1** (double \*A, double \*B, double f1, double f2, double fs) Setup a first order butterworth band stop filter.
- MHASignal::waveform\_t \* spec2fir (const mha\_spec\_t \*spec, const unsigned int fftlen, const MHAWindow::base\_t &window, const bool minphase)

Create a windowed impulse response/FIR filter coefficients from a spectrum.

• unsigned **gcd** (unsigned a, unsigned b)

greatest common divisor

• double **sinc** (double x)

sin(x)/x function, coping with x=0.

• std::pair< unsigned, unsigned > **resampling\_factors** (float source\_sampling\_rate, float target\_sampling\_rate, float factor=1.0f)

Computes rational resampling factor from two sampling rates.

# 4.23.1 Detailed Description

Namespace for IIR and FIR filter classes.

```
4.23.2 Function Documentation
```

Set first order filter coefficients from time constant and sampling rate.

# **Parameters**

tau	Time constant
fs	Sampling rate

### Return values

c1	Recursive filter coefficient	
c2	Non-recursive filter coefficient	

Setup a first order butterworth band stop filter.

This function calculates the filter coefficients of a first order butterworth band stop filter.

# **Return values**

Α	recursive filter coefficients	
В	non recursive filter coefficients	

# **Parameters**

f1	lower frequency
f2	upper frequency
fs	sample frequency

Create a windowed impulse response/FIR filter coefficients from a spectrum.

spec	Input spectrum	
fftlen	FFT length of spectrum	
window	Window shape (with length, e.g. initialized with MHAWindow::hanning(54)).	

# **Parameters**

minphase	Flag, true if original phase should be discarded and replaced by a minimal	
	phase function.	

greatest common divisor

```
4.23.2.8 double MHAFilter::sinc ( double x )
```

 $\sin(x)/x$  function, coping with x=0.

This is the historical sinc function, not the normalized sinc function.

Computes rational resampling factor from two sampling rates.

The function will fail if either sampling\_rate \* factor is not an integer

### **Parameters**

source_sampling_rate	The original sampling rate
target_sampling_rate	The desired sampling rate
factor	A helper factor to use for non-integer sampling rates

# **Returns**

a pair that contains first the upsampling factor and second the downsampling factor required for the specified resampling.

# **Exceptions**

# 4.24 MHAIOJack Namespace Reference

JACK IO.

### **Classes**

class io\_jack\_t
 Main class for JACK IO.

# 4.24.1 Detailed Description

JACK IO.

# 4.25 MHAIOJackdb Namespace Reference

# Classes

class io\_jack\_t
 Main class for JACK IO.

# 4.26 MHAIOPortAudio Namespace Reference

## **Classes**

- class device\_info\_t
- class io\_portaudio\_t

Main class for Portaudio sound IO.

# **Functions**

• static std::string parserFriendlyName (const std::string &in)

# 4.26.1 Function Documentation

4.26.1.1 static std::string MHAIOPortAudio::parserFriendlyName (
const std::string & in ) [static]

# 4.27 MHAJack Namespace Reference

Classes and functions for openMHA and JACK interaction.

#### **Classes**

· class client avg t

Generic JACK client for averaging a system response across time.

class client noncont t

Generic client for synchronous playback and recording of waveform fragments.

· class client t

Generic asynchronous JACK client.

class port\_t

Class for one channel/port.

#### **Functions**

void io (mha\_wave\_t \*s\_out, mha\_wave\_t \*s\_in, const std::string &name, const std
 ::vector< std::string > &p\_out, const std::vector< std::string > &p\_in, float \*srate=NULL,
 unsigned int \*fragsize=NULL, bool use\_jack\_transport=false)

Functional form of generic client for synchronous playback and recording of waveform fragments.

std::vector< unsigned int > get\_port\_capture\_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< int > get\_port\_capture\_latency\_int (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

• std::vector< unsigned int > **get\_port\_playback\_latency** (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< int > get\_port\_playback\_latency\_int (const std::vector< std::string > &ports)

# 4.27.1 Detailed Description

Classes and functions for openMHA and JACK interaction.

# 4.27.2 Function Documentation

```
4.27.2.1 void MHAJack::io (

mha_wave_t * s_out,

mha_wave_t * s_in,

const std::string & name,

const std::vector < std::string > & p_out,

const std::vector < std::string > & p_in,

float * srate = NULL,

unsigned int * fragsize = NULL,

bool use_jack_transport = false )
```

Functional form of generic client for synchronous playback and recording of waveform fragments.

```
4.27.2.2 std::vector< unsigned int > MHAJack::get_port_capture_latency ( const std::vector< std::string > & ports )
```

Return the JACK port latency of ports.

#### **Parameters**

```
ports Ports to be tested
```

#### Returns

Latency vector (one entry for each port)

Return the JACK port latency of ports.

# **Parameters**

```
ports Ports to be tested
```

#### **Returns**

Latency vector (one entry for each port)

Return the JACK port latency of ports.

#### **Parameters**

```
ports Ports to be tested
```

## Returns

Latency vector (one entry for each port)

## 4.28 MHAKernel Namespace Reference

## Classes

- class algo\_comm\_class\_t
- class comm\_var\_map\_t

#### **Functions**

algo\_comm\_class\_t \* algo\_comm\_safe\_cast (void \*)

### 4.28.1 Function Documentation

```
4.28.1.1 MHAKernel::algo_comm_class_t * MHAKernel::algo_comm_safe_cast ( void * h )
```

# 4.29 MHAMultiSrc Namespace Reference

Collection of classes for selecting audio chunks from multiple sources.

#### **Classes**

· class base\_t

Base class for source selection.

- class channel\_t
- class channels t
- class spectrum\_t
- · class waveform\_t

## 4.29.1 Detailed Description

Collection of classes for selecting audio chunks from multiple sources.

## 4.30 MHAOvIFilter Namespace Reference

Namespace for overlapping FFT based filter bank classes and functions.

## **Namespaces**

- barkscale
- FreqScaleFun

Transform functions from linear scale in Hz to new frequency scales.

ShapeFun

Shape functions for overlapping filters.

#### **Classes**

- class band\_descriptor\_t
- class fftfb\_ac\_info\_t
- class fftfb\_t

FFT based overlapping filter bank.

class fftfb\_vars\_t

Set of configuration variables for FFT-based overlapping filters.

- · class fscale\_bw\_t
- · class fscale t
- class fspacing\_t

Class for frequency spacing, used by filterbank shape generator class.

- class overlap\_save\_filterbank\_analytic\_t
- class overlap\_save\_filterbank\_t

A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb\_t** (p. 591).

· class scale\_var\_t

## **Typedefs**

typedef mha\_real\_t( scale\_fun\_t) (mha\_real\_t)

## 4.30.1 Detailed Description

Namespace for overlapping FFT based filter bank classes and functions.

- 4.30.2 Typedef Documentation
- 4.30.2.1 typedef mha\_real\_t( MHAOvlFilter::scale\_fun\_t) (mha\_real\_t)
- 4.31 MHAOvlFilter::barkscale Namespace Reference

## Classes

- · class bark2hz t
- · class hz2bark t

#### **Variables**

- mha\_real\_t vfreq [BARKSCALE\_ENTRIES]
- mha\_real\_t vbark [BARKSCALE\_ENTRIES]

#### 4.31.1 Variable Documentation

- 4.31.1.1 mha\_real\_t MHAOvlFilter::barkscale::vfreq
- 4.31.1.2 mha\_real\_t MHAOvIFilter::barkscale::vbark
- 4.32 MHAOvlFilter::FreqScaleFun Namespace Reference

Transform functions from linear scale in Hz to new frequency scales.

#### **Functions**

- mha real t hz2hz (mha real t x)
  - Dummy scale transformation Hz to Hz.
- mha real t hz2khz (mha real t x)
- mha\_real\_t hz2octave (mha\_real\_t x)
- mha\_real\_t hz2third\_octave (mha\_real\_t x)
- mha\_real\_t hz2bark (mha\_real\_t x)

Transformation to bark scale.

- mha real t hz2bark analytic (mha real t)
- mha real t hz2erb (mha real t)
- mha\_real\_t hz2erb\_glasberg1990 (mha\_real\_t)
- mha\_real\_t hz2log (mha\_real\_t x)

Third octave frequency scale.

mha\_real\_t inv\_scale (mha\_real\_t, mha\_real\_t(\*)(mha\_real\_t))

## 4.32.1 Detailed Description

Transform functions from linear scale in Hz to new frequency scales.

## 4.32.2 Function Documentation

Dummy scale transformation Hz to Hz.

This function implements a dummy scale transformation (linear frequency scale).

#### **Parameters**

x | Input frequency in Hz

**Returns** 

Frequency in Hz

Transformation to bark scale.

This function implements a critical band rate (bark) scale.

#### **Parameters**

```
x | Input frequency in Hz
```

## Returns

Critical band rate in Bark

Third octave frequency scale.

This function implements a third octave scale. Frequencies below 16 Hz are mapped to 16 Hz.

### **Parameters**

x Frequency in Hz

#### **Returns**

Third octaves relative to 1000 Hz

4.33 MHAOvlFilter::ShapeFun Namespace Reference

Shape functions for overlapping filters.

#### **Functions**

- mha\_real\_t rect (mha\_real\_t x)
  - Filter shape function for rectangular filters.
- mha\_real\_t linear (mha\_real\_t x)

Filter shape function for sawtooth filters.

mha\_real\_t hann (mha\_real\_t x)

Filter shape function for hanning shaped filters.

- mha\_real\_t expflt (mha\_real\_t)
- mha\_real\_t gauss (mha\_real\_t)
- 4.33.1 Detailed Description

Shape functions for overlapping filters.

4.33.2 Function Documentation

```
4.33.2.1 mha_real_t MHAOvlFilter::ShapeFun::rect ( mha_real_t x )
```

Filter shape function for rectangular filters.

This function creates rectangular filter shapes. The edge is exactly half way between two center frequencies (on a given scale).

#### **Parameters**

```
x Input value in the range [-1,1].
```

#### **Returns**

Weigth function in the range [0,1]

```
4.33.2.2 mha_real_t MHAOvlFilter::ShapeFun::linear ( mha_real_t x )
```

Filter shape function for sawtooth filters.

This function creates sawtooth filter shapes. They rise linearly form 0 to 1 in the interval from the lower neighbor center frequency to the band center frequency and from 1 to 0 in the interval from the band center frequency to the upper neighbour band center frequency. Linear means linear on a given frequency scale.

### **Parameters**

```
x Input value in the range [-1,1].
```

## **Returns**

Weigth function in the range [0,1]

```
4.33.2.3 mha_real_t MHAOvlFilter::ShapeFun::hann ( mha real t x )
```

Filter shape function for hanning shaped filters.

This function creates hanning window shaped filters.

### **Parameters**

```
x Input value in the range [-1,1].
```

### **Returns**

Weigth function in the range [0,1]

```
4.33.2.5 mha_real_t MHAOvlFilter::ShapeFun::gauss ( mha_real_t x )
```

## 4.34 MHAParser Namespace Reference

Name space for the openMHA-Parser configuration language.

## **Namespaces**

StrCnv

String converter namespace.

### Classes

· class base\_t

Base class for all parser items.

class bool\_mon\_t

Monitor with string value.

class bool\_t

Variable with a boolean value ("yes"/"no")

- · class c ifc parser t
- · class commit t

Parser variable with event-emission functionality.

class complex\_mon\_t

Monitor with complex value.

class complex\_t

Variable with complex value.

- class entry\_t
- class expression t
- class float\_mon\_t

Monitor with float value.

class float\_t

Variable with float value.

class int mon t

Monitor variable with int value.

· class int t

Variable with integer value.

class keyword\_list\_t

Keyword list class.

class kw\_t

Variable with keyword list value.

class mcomplex\_mon\_t

Matrix of complex numbers monitor.

class mcomplex\_t

Matrix variable with complex value.

· class mfloat\_mon\_t

Matrix of floats monitor.

· class mfloat\_t

Matrix variable with float value.

- class mhaconfig\_mon\_t
- · class mhapluginloader\_t

Class to create a plugin loader in a parser, including the load logic.

· class mint\_mon\_t

Matrix of ints monitor.

class monitor\_t

Base class for monitors and variable nodes.

· class parser\_t

Parser node class.

class range var t

Base class for all variables with a numeric value range.

class string\_mon\_t

Monitor with string value.

class string\_t

Variable with a string value.

class variable\_t

Base class for variable nodes.

class vcomplex\_mon\_t

Monitor with vector of complex values.

class vcomplex t

Vector variable with complex value.

class vfloat\_mon\_t

Vector of floats monitor.

class vfloat t

Vector variable with float value.

· class vint\_mon\_t

Vector of ints monitor.

· class vint t

Variable with vector<int> value.

class vstring\_mon\_t

Vector of monitors with string value.

class vstring\_t

Vector variable with string values.

class window\_t

MHA configuration interface for a window function generator.

## **Typedefs**

- typedef std::string(base\_t::\* opact\_t) (expression\_t &)
- typedef std::string(base\_t::\* query\_t) (const std::string &)
- typedef std::map< std::string, opact\_t > opact\_map\_t
- typedef std::map< std::string, query\_t > query\_map\_t
- typedef std::list< entry\_t > entry\_map\_t
- typedef int(\* c parse cmd t) (void \*, const char \*, char \*, unsigned int)
- typedef const char \*(\* c\_parse\_err\_t) (void \*, int)

### **Functions**

- int **get\_precision** ()
- std::string commentate (const std::string &s)
- void **trim** (std::string &s)
- std::string cfg\_dump (base\_t \*, const std::string &)
- std::string cfg\_dump\_short (base\_t \*, const std::string &)
- std::string all dump (base t \*, const std::string &)
- std::string mon\_dump (base\_t \*, const std::string &)
- std::string all\_ids (base\_t \*, const std::string &, const std::string &="")
- void strreplace (std::string &, const std::string &, const std::string &)
   string replace function
- void envreplace (std::string &s)

### 4.34.1 Detailed Description

Name space for the openMHA-Parser configuration language.

This namespace contains all classes which are needed for the implementation of the open ← MHA configuration language. For details on the script language itself please see section **The openMHA configuration language** (p. 29).

#### 4.34.2 List of valid MHAParser items

- Sub-parser: parser\_t (p. 663)
- Variables:

```
Numeric variables: int_t (p. 639), vint_t (p. 688), float_t (p. 634), vfloat_t (p. 684), mfloat_t (p. 652)
Other variables: string_t (p. 672), vstring_t (p. 692), kw_t (p. 644), bool_t (p. 620)
```

Monitors:

```
Numeric monitors: int_mon_t (p. 637), vint_mon_t (p. 686), float_mon_t (p. 633), vfloat_mon_t (p. 682)
mfloat_mon_t (p. 651)
mcomplex_mon_t (p. 647)
Other monitors: bool_mon_t (p. 619), string_mon_t (p. 671), vstring_mon_t (p. 690)
```

Members can be inserted into the configuration namespace by using MHAParser::insert\_item() or the **insert\_member()** (p. 989) macro.

```
4.34.3 Typedef Documentation
4.34.3.1 typedef std::string(base_t::* MHAParser::opact_t) (expression t &)
4.34.3.2
         typedef std::string(base_t::* MHAParser::query_t) (const std::string &)
4.34.3.3 typedef std::map<std::string,opact_t> MHAParser::opact_map_t
4.34.3.4 typedef std::map<std::string,query_t> MHAParser::query_map_t
4.34.3.5 typedef std::list<entry_t> MHAParser::entry_map_t
4.34.3.6 typedef int(* MHAParser::c_parse_cmd_t) (void *, const char *, char *, unsigned int)
4.34.3.7 typedef const char*(* MHAParser::c_parse_err_t) (void *, int)
4.34.4 Function Documentation
4.34.4.1 int MHAParser::get_precision ( )
4.34.4.2 std::string MHAParser::commentate (
                      const std::string & s )
4.34.4.3 void MHAParser::trim (
                      std::string & s )
4.34.4.4 std::string MHAParser::cfg_dump (
                      base_t * p,
                      const std::string & pref )
4.34.4.5 std::string MHAParser::cfg_dump_short (
                      base_t * p,
                      const std::string & pref )
4.34.4.6 std::string MHAParser::all_dump (
                      base t*p,
                      const std::string & pref )
4.34.4.7 std::string MHAParser::mon_dump (
                      base t*p,
                      const std::string & pref )
4.34.4.8 std::string MHAParser::all_ids (
                      base_t * p,
                      const std::string & pref,
                      const std::string & id = " " )
4.34.4.9 void MHAParser::strreplace (
                      std::string & s,
                      const std::string & arg,
                      const std::string & rep )
string replace function
```

#### **Parameters**

s	target string	
arg	search pattern	
rep	replace pattern	

4.34.4.10 void MHAParser::envreplace ( std::string & s )

4.35 MHAParser::StrCnv Namespace Reference

String converter namespace.

#### **Functions**

• int **num\_brackets** (const std::string &s)

Return number of brackets at beginning and end of string.

- int **bracket balance** (const std::string &s)
- void str2val (const std::string &, bool &)

Convert from string.

void str2val (const std::string &, float &)

Convert from string.

void str2val (const std::string &, mha\_complex\_t &)

Convert from string.

• void **str2val** (const std::string &, int &)

Convert from string.

void str2val (const std::string &, keyword\_list\_t &)

Convert from string.

void str2val (const std::string &, std::string &)

Convert from string.

template<class arg\_t >

void **str2val** (const std::string &s, std::vector< arg\_t > &val)

Converter for vector types.

• template<>

void **str2val**< **mha\_real\_t** > (const std::string &s, std::vector< **mha\_real\_t** > &v)

Converter for vector<mha real t> with Matlab-style expansion.

template<class arg\_t >

void **str2val** (const std::string &s, std::vector< std::vector< arg t >> &val)

Converter for matrix types.

• std::string val2str (const bool &)

Convert to string.

std::string val2str (const float &)

Convert to string.

std::string val2str (const mha\_complex\_t &)

Convert to string.

• std::string val2str (const int &)

Convert to string.

std::string val2str (const keyword\_list\_t &)

Convert to string.

• std::string val2str (const std::string &)

Convert to string.

std::string val2str (const std::vector< float > &)

Convert to string.

std::string val2str (const std::vector< mha\_complex\_t > &)

Convert to string.

• std::string val2str (const std::vector< int > &)

Convert to string.

• std::string val2str (const std::vector< std::vector< int > > &)

Convert to string.

std::string val2str (const std::vector< std::string > &)

Convert to string.

std::string val2str (const std::vector< std::vector< float >> &)

Convert to string.

- std::string val2str (const std::vector< std::vector< mha\_complex\_t >> &)

Convert to string.

## 4.35.1 Detailed Description

String converter namespace.

The functions defined in this namespace manage the conversions from C++ variables to strings and back. It was tried to keep a matlab compatible string format for vectors and vectors of vectors.

### 4.35.2 Function Documentation

```
4.35.2.1 int MHAParser::StrCnv::num_brackets ( const std::string & s )
```

Return number of brackets at beginning and end of string.

### **Parameters**

s String

```
Returns
```

```
Number of brackets, or -1 for empty string
```

```
4.35.2.2 int MHAParser::StrCnv::bracket_balance (
                      const std::string & s )
4.35.2.3 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                      bool & v)
Convert from string.
4.35.2.4 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                      float & v)
Convert from string.
4.35.2.5 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                       mha_complex_t & v )
Convert from string.
4.35.2.6 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                      int & v )
Convert from string.
4.35.2.7 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                       MHAParser::keyword list t & v )
Convert from string.
4.35.2.8 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                       std::string & v )
Convert from string.
4.35.2.9 template < class arg_t > void MHAParser::StrCnv::str2val (
                      const std::string & s,
```

std::vector< arg\_t > & val )

Converter for vector types.

```
4.35.2.10 template<> void MHAParser::StrCnv::str2val< mha_real_t > (
                       const std::string & s,
                        std::vector < mha real t > \& v)
Converter for vector<mha real t> with Matlab-style expansion.
4.35.2.11 template < class arg_t > void MHAParser::StrCnv::str2val (
                       const std::string & s,
                       std::vector< std::vector< arg_t >> & val )
Converter for matrix types.
4.35.2.12 std::string MHAParser::StrCnv::val2str (
                       const bool & v )
Convert to string.
4.35.2.13 std::string MHAParser::StrCnv::val2str (
                       const float & v )
Convert to string.
4.35.2.14 std::string MHAParser::StrCnv::val2str (
                       const mha_complex_t & v )
Convert to string.
4.35.2.15 std::string MHAParser::StrCnv::val2str (
                       const int & v )
Convert to string.
4.35.2.16 std::string MHAParser::StrCnv::val2str (
                       const keyword_list_t & v )
Convert to string.
4.35.2.17 std::string MHAParser::StrCnv::val2str (
                       const std::string & v )
Convert to string.
4.35.2.18 std::string MHAParser::StrCnv::val2str (
                       const std::vector< float > & \nu )
Convert to string.
```

```
4.35.2.19 std::string MHAParser::StrCnv::val2str (
                       const std::vector< mha_complex_t > & v )
Convert to string.
4.35.2.20 std::string MHAParser::StrCnv::val2str (
                       const std::vector< int > & \nu )
Convert to string.
4.35.2.21 std::string MHAParser::StrCnv::val2str (
                       const std::vector< std::vector< int > > & \nu )
Convert to string.
4.35.2.22 std::string MHAParser::StrCnv::val2str (
                       const std::vector< std::string > & \nu )
Convert to string.
4.35.2.23 std::string MHAParser::StrCnv::val2str (
                       const std::vector< std::vector< float >> & v )
Convert to string.
4.35.2.24 std::string MHAParser::StrCnv::val2str (
                       const std::vector< std::vector< mha_complex_t >> & v )
Convert to string.
4.36
      MHAPlugin Namespace Reference
Namespace for openMHA plugin class templates and thread-safe runtime configurations.
```

## Classes

- class cfg\_chain\_t
- class config\_t

Template class for thread safe configuration.

class plugin\_t

The template class for C++ openMHA plugins.

### 4.36.1 Detailed Description

Namespace for openMHA plugin class templates and thread-safe runtime configurations.

## 4.37 MHAPlugin\_Resampling Namespace Reference

#### Classes

- class resampling\_if\_t
- · class resampling\_t

## 4.38 MHAPlugin\_Split Namespace Reference

#### Classes

class domain\_handler\_t

Handles domain-specific partial input and output signal.

class dummy\_threads\_t

Dummy specification of a thread platform: This class implements everything in a single thread.

class posix\_threads\_t

Posix threads specification of thread platform.

class split t

Implements split plugin.

class splitted\_part\_t

The **splitted\_part\_t** (p. 726) instance manages the plugin that performs processing on the reduced set of channels.

class thread platform t

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

class uni\_processor\_t

An interface to a class that sports a process method with no parameters and no return value.

#### **Enumerations**

## 4.38.1 Detailed Description

A namespace for the split plugin. Helps testability and documentation.

## 4.38.2 Enumeration Type Documentation

## 4.38.2.1 anonymous enum

Invalid thread priority.

#### **Enumerator**

## INVALID\_THREAD\_PRIORITY

## 4.39 MHASignal Namespace Reference

Namespace for audio signal handling and processing classes.

#### Classes

· class async\_rmslevel\_t

Class for asynchronous level metering.

- class delay\_spec\_t
- · class delay t

Class to realize a simple delay of waveform streams.

class delay\_wave\_t

Delayline containing wave fragments.

· class doublebuffer t

Double-buffering class.

- class fft\_t
- class hilbert\_fftw\_t
- class hilbert\_t

Hilbert transformation of a waveform segment.

class loop\_wavefragment\_t

Copy a fixed waveform fragment to a series of waveform fragments of other size.

class matrix\_t

n-dimensional matrix with real or complex floating point values.

class minphase\_t

Minimal phase function.

class quantizer\_t

Simple simulation of fixpoint quantization.

class ringbuffer t

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

· class schroeder t

Schroeder tone complex class.

class spectrum\_t

a signal processing class for spectral data (based on **mha\_spec\_t** (p. 442))

- · class stat t
- class subsample\_delay\_t

implements subsample delay in spectral domain.

class uint\_vector\_t

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

class waveform\_t

signal processing class for waveform data (based on **mha\_wave\_t** (p. 472))

#### **Functions**

void for\_each (mha\_wave\_t \*s, mha\_real\_t(\*fun)(mha\_real\_t))

Apply a function to each element of a mha wave t (p. 472).

mha\_real\_t lin2db (mha\_real\_t x)

Conversion from linear scale to dB (no SPL reference)

mha\_real\_t db2lin (mha\_real\_t x)

Conversion from dB scale to linear (no SPL reference)

mha\_real\_t pa2dbspl (mha\_real\_t x)

Conversion from linear Pascal scale to dB SPL.

mha\_real\_t pa22dbspl (mha\_real\_t x, mha\_real\_t eps=1e-20f)

Conversion from squared Pascal scale to dB SPL.

mha\_real\_t dbspl2pa (mha\_real\_t x)

Conversion from dB SPL to linear Pascal scale.

mha\_real\_t smp2sec (mha\_real\_t n, mha\_real\_t srate)

conversion from samples to seconds

mha\_real\_t sec2smp (mha\_real\_t sec, mha\_real\_t srate)

conversion from seconds to samples

• mha\_real\_t bin2freq (mha\_real\_t bin, unsigned fftlen, mha\_real\_t srate)

conversion from fft bin index to frequency

mha\_real\_t freq2bin (mha\_real\_t freq, unsigned fftlen, mha\_real\_t srate)

conversion from frequency to fft bin index

• mha\_real\_t smp2rad (mha\_real\_t samples, unsigned bin, unsigned fftlen)

conversion from delay in samples to phase shift

mha\_real\_t rad2smp (mha\_real\_t phase\_shift, unsigned bin, unsigned fftlen)

conversion from phase shift to delay in samples

template < class elem type >

std::vector< elem\_type > **dupvec** (std::vector< elem\_type > vec, unsigned n)

Duplicate last vector element to match desired size.

template < class elem type >

std::vector< elem\_type > dupvec\_chk (std::vector< elem\_type > vec, unsigned n)

Duplicate last vector element to match desired size, check for dimension.

void copy\_channel (mha\_spec\_t &self, const mha\_spec\_t &src, unsigned sch, unsigned dch)

Copy one channel of a source signal.

void copy\_channel (mha\_wave\_t &self, const mha\_wave\_t &src, unsigned src\_
 channel, unsigned dest\_channel)

Copy one channel of a source signal.

• mha\_real\_t rmslevel (const mha\_spec\_t &s, unsigned int channel, unsigned int fftlen)

Return RMS level of a spectrum channel.

mha\_real\_t colored\_intensity (const mha\_spec\_t &s, unsigned int channel, unsigned int fftlen, mha\_real\_t sqfreq\_response[])

Colored spectrum intensity.

mha\_real\_t maxabs (const mha\_spec\_t &s, unsigned int channel)

Find maximal absolute value.

mha\_real\_t rmslevel (const mha\_wave\_t &s, unsigned int channel)

Return RMS level of a waveform channel.

• mha real t maxabs (const mha wave t &s, unsigned int channel)

Find maximal absolute value.

• mha real t maxabs (const mha wave t &s)

Find maximal absolute value.

mha\_real\_t max (const mha\_wave\_t &s)

Find maximal value.

mha\_real\_t min (const mha\_wave\_t &s)

Find minimal value.

mha real t sumsqr channel (const mha wave t &s, unsigned int channel)

Calculate sum of squared values in one channel.

• mha\_real\_t sumsqr\_frame (const mha\_wave\_t &s, unsigned int frame)

Calculate sum over all channels of squared values.

- void scale (mha spec t \*dest, const mha wave t \*src)
- void limit (mha\_wave\_t &s, const mha\_real\_t &min, const mha\_real\_t &max)

Limit the singal in the waveform buffer to the range [min, max].

template < class elem type >

elem\_type kth\_smallest (elem\_type array[], unsigned n, unsigned k)

Fast search for the kth smallest element of an array.

• template<class elem type >

elem\_type **median** (elem\_type array[], unsigned n)

Fast median search.

template<class elem\_type >

elem\_type **mean** (const std::vector< elem\_type > &data, elem\_type start\_val)

Calculate average of elements in a vector.

template < class elem type >

std::vector< elem\_type > quantile (std::vector< elem\_type > data, const std::vector< elem\_type > &p)

Calculate quantile of elements in a vector.

- void saveas\_mat4 (const mha\_spec\_t &data, const std::string &varname, FILE \*fh)
   Save a openMHA spectrum as a variable in a Matlab4 file.
- void **saveas\_mat4** (const **mha\_wave\_t** &data, const std::string &varname, FILE \*fh)

  Save a openMHA waveform as a variable in a Matlab4 file.
- void saveas\_mat4 (const std::vector< mha\_real\_t > &data, const std::string &varname,
   FILE \*fh)

Save a float vector as a variable in a Matlab4 file.

void copy\_permuted (mha\_wave\_t \*dest, const mha\_wave\_t \*src)

Copy contents of a waveform to a permuted waveform.

#### **Variables**

• unsigned long int **signal\_counter** = 0

Signal counter to produce signal ID strings.

## 4.39.1 Detailed Description

Namespace for audio signal handling and processing classes.

## 4.39.2 Function Documentation

```
4.39.2.1 void MHASignal::scale (

mha_spec_t * dest,

const mha_wave_t * src )
```

```
4.39.2.2 void MHASignal::limit (

mha_wave_t & s,

const mha_real_t & min,

const mha_real_t & max )
```

Limit the singal in the waveform buffer to the range [min, max].

### **Parameters**

s	The signal to limit. The signal in this wave buffer is modified.
min	lower limit
max	upper limit

Fast search for the kth smallest element of an array.

The order of elements is altered, but not completely sorted. Using the algorithm from N. Wirth, published in "Algorithms + data structures = programs", Prentice-Hall, 1976

### **Parameters**

array	Element array

### Postcondition

The order of elements in the array is altered. array[k] then holds the result.

#### **Parameters**

*n* number of elements in array

### Precondition

n >= 1

#### **Parameters**

k The k'th smalles element is returned: k = 0 returns the minimum, k = (n-1)/2 returns the median, k=(n-1) returns the maximum

### Precondition

k < n

## **Returns**

The kth smallest array element

Fast median search.

The order of elements is altered, but not completely sorted.

#### **Parameters**

array Element array

### **Postcondition**

The order of elements in the array is altered. array[(n-1)/2] then holds the median.

## **Parameters**

*n* number of elements in array

### Precondition

```
n >= 1
```

#### **Returns**

The median of the array elements

Calculate average of elements in a vector.

#### **Parameters**

data	Input vector
start_val	Value for initialization of the return value before sum.

### Returns

The average of the vector elements

Calculate quantile of elements in a vector.

### **Parameters**

data	Input vector
р	Vector of probability values.

#### **Returns**

Vector of quantiles of input data, one entry for each probability value.

Save a openMHA spectrum as a variable in a Matlab4 file.

### **Parameters**

data	openMHA spectrum to be saved.
varname	Matlab variable name (Matlab4 limitations on maximal length are not checked).
fh	File handle to Matlab4 file.

Save a openMHA waveform as a variable in a Matlab4 file.

#### **Parameters**

data	openMHA waveform to be saved.
varname	Matlab variable name (Matlab4 limitations on maximal length are not checked).
fh	File handle to Matlab4 file.

Save a float vector as a variable in a Matlab4 file.

### **Parameters**

data	Float vector to be saved.
varname	Matlab variable name (Matlab4 limitations on maximal length are not checked).
fh	File handle to Matlab4 file.

Copy contents of a waveform to a permuted waveform.

#### **Parameters**

dest	Destination waveform	
src	Source waveform	

The total size of src and dest must be the same, num\_frames and num\_channels must be

exchanged in dest.

#### 4.39.3 Variable Documentation

4.39.3.1 unsigned long int MHASignal::signal\_counter = 0

Signal counter to produce signal ID strings.

## 4.40 MHASndFile Namespace Reference

#### **Classes**

- class sf\_t
- class sf\_wave\_t

## 4.41 MHATableLookup Namespace Reference

Namespace for table lookup classes.

### Classes

class linear\_table\_t

Class for interpolation with equidistant x values.

- class table\_t
- class xy\_table\_t

Class for interpolation with non-equidistant x values.

## 4.41.1 Detailed Description

Namespace for table lookup classes.

## 4.42 MHAWindow Namespace Reference

Collection of Window types.

### **Classes**

· class bartlett t

Bartlett window.

class base t

Common base for window types.

· class blackman t

Blackman window.

class fun\_t

Generic window based on a generator function.

• class hamming\_t

Hamming window.

class hanning\_t

von-Hann window

class rect\_t

Rectangular window.

class user\_t

User defined window.

#### **Functions**

· float rect (float)

Rectangular window function.

float bartlett (float)

Bartlett window function.

float hanning (float)

Hanning window function.

float hamming (float)

Hamming window function.

• float blackman (float)

Blackman window function.

4.42.1 Detailed Description

Collection of Window types.

4.42.2 Function Documentation

4.42.2.1 float MHAWindow::rect ( float x )

Rectangular window function.

```
4.42.2.2 float MHAWindow::bartlett ( float x )
```

Bartlett window function.

```
4.42.2.3 float MHAWindow::hanning ( float x )
```

Hanning window function.

```
4.42.2.4 float MHAWindow::hamming ( float x )
```

Hamming window function.

```
4.42.2.5 float MHAWindow::blackman ( float x )
```

Blackman window function.

4.43 multibandcompressor Namespace Reference

## Classes

- · class fftfb\_plug\_t
- class interface\_t
- class plugin\_signals\_t

4.44 noisePowProposedScale Namespace Reference

### Classes

- class interface\_t
- class noisePowProposed
- 4.45 overlapadd Namespace Reference

#### **Classes**

- class overlapadd\_if\_t
- class overlapadd\_t

## 4.46 plingploing Namespace Reference

All classes for the plingploing music generator live in this namespace.

#### **Classes**

· class if t

Plugin class of the plingploing music generator.

class plingploing\_t

Run-time configuration of the plingploing music generator.

## **Functions**

double drand (double a, double b)

## 4.46.1 Detailed Description

All classes for the plingploing music generator live in this namespace.

```
4.46.2 Function Documentation
```

```
4.46.2.1 double plingploing::drand ( double a, double b )
```

## 4.47 PluginLoader Namespace Reference

### Classes

- class config\_file\_splitter\_t
- · class fourway\_processor\_t

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

• class mhapluginloader\_t

### **Functions**

- const char \* mhastrdomain (mha\_domain\_t)
- void mhaconfig\_compare (const mhaconfig\_t &req, const mhaconfig\_t &avail, const std::string &pref="")

Compare two mhaconfig\_t (p. 480) structures, and report differences as an error.

### 4.47.1 Function Documentation

```
4.47.1.1 const char * PluginLoader::mhastrdomain ( mha_domain_t d )
```

Compare two **mhaconfig\_t** (p. 480) structures, and report differences as an error.

#### **Parameters**

req	Expected <b>mhaconfig_t</b> (p. 480) structure
avail	Available <b>mhaconfig_t</b> (p. 480) structure
pref	Prefix for error messages

## 4.48 route Namespace Reference

## Classes

- class interface\_t
- · class process\_t

# 4.49 shadowfilter\_begin Namespace Reference

### Classes

- · class cfg\_t
- class shadowfilter\_begin\_t

# 4.50 shadowfilter\_end Namespace Reference

### Classes

- · class cfg\_t
- class shadowfilter\_end\_t

# 4.51 smoothgains\_bridge Namespace Reference

#### Classes

- class overlapadd\_if\_t
- class smoothspec\_wrap\_t

## 4.52 testplugin Namespace Reference

## Classes


- · class ac\_parser\_t
- class config\_parser\_t
- class if\_t
- class signal\_parser\_t

## 5 Class Documentation

## 5.1 ac2lsl::ac2lsl\_t Class Reference

Plugin class of ac2lsl (p. 73).

Inheritance diagram for ac2lsl::ac2lsl\_t:

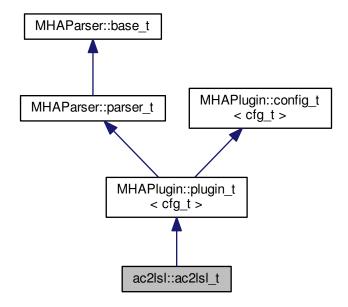

#### **Public Member Functions**

- ac2lsl\_t (algo\_comm\_t iac, const char \*chain, const char \*algo)
- void prepare (mhaconfig\_t &)

Prepare constructs the vector of bridge variables and locks the configuration, then calls **up-date()** (p. 125).

mha\_wave\_t \* process (mha\_wave\_t \*s)

Processing fct for waveforms.

mha\_spec\_t \* process (mha\_spec\_t \*s)

Processing fct for spectra.

void process ()

Process function.

• void release ()

Release fct.

#### **Private Member Functions**

std::vector< std::string > get\_all\_names\_from\_ac\_space (const algo\_comm\_t &ac) const

Retrieves all variable names from the AC space.

void update ()

Construct new runtime configuration.

## **Private Attributes**

- MHAParser::vstring\_t vars
- MHAParser::string\_t source\_id
- MHAParser::bool\_t rt\_strict
- MHAParser::bool t activate
- MHAParser::int\_t skip
- MHAEvents::patchbay\_t< ac2lsl\_t > patchbay
- bool is first run

### **Additional Inherited Members**

## 5.1.1 Detailed Description

Plugin class of ac2lsl (p. 73).

```
5.1.2 Constructor & Destructor Documentation
```

5.1.3 Member Function Documentation

Prepare constructs the vector of bridge variables and locks the configuration, then calls **up-date()** (p. 125).

Implements MHAPlugin::plugin\_t < cfg\_t > (p.705).

Processing fct for waveforms.

Calls process(void) (p. 124).

Processing fct for spectra.

Calls process(void) (p. 124).

```
5.1.3.4 void ac2lsl::ac2lsl_t::process ( void )
```

Process function.

Checks once if the plugin is run in a real-time thread and throws if rt\_strict is true, then forwards to **cfg\_t::process()** (p. 127).

```
5.1.3.5 void ac2|s|::ac2|s|_t::release( ) [virtual]
```

Release fct.

Unlocks variable name list

Reimplemented from  $MHAPlugin::plugin_t < cfg_t > (p. 706)$ .

Retrieves all variable names from the AC space.

### **Parameters**

```
ac AC space
```

#### Returns

Vector of variable names

5.1.3.7 void ac2lsl::ac2lsl\_t::update( ) [private]

Construct new runtime configuration.

- 5.1.4 Member Data Documentation
- **5.1.4.1 MHAParser::vstring\_t ac2lsl::ac2lsl\_t::vars** [private]
- **5.1.4.2** MHAParser::string\_t ac2lsl::ac2lsl\_t::source\_id [private]
- **5.1.4.3** MHAParser::bool\_t ac2lsl::ac2lsl\_t::rt\_strict [private]
- **5.1.4.4** MHAParser::bool\_t ac2lsl::ac2lsl\_t::activate [private]
- **5.1.4.5** MHAParser::int\_t ac2lsl::ac2lsl\_t::skip [private]
- 5.1.4.6 MHAEvents::patchbay\_t<ac2lsl\_t> ac2lsl::ac2lsl\_t::patchbay [private]
- **5.1.4.7** bool ac2lsl::ac2lsl\_t::is\_first\_run [private]

The documentation for this class was generated from the following file:

- ac2lsl.cpp
- 5.2 ac2lsl::cfg\_t Class Reference

Runtime configuration class of the **ac2lsl** (p. 73) plugin.

**Public Member Functions** 

- cfg\_t (const algo\_comm\_t &ac\_, unsigned skip\_, const std::string &source\_id, const std::vector< std::string > &varnames\_, double rate)
  - C'tor of ac2lsI (p. 73) run time configuration.
- void process ()

#### **Private Member Functions**

- void make\_or\_replace\_var (const std::string &name, const comm\_var\_t &v)
- void check\_vars ()
- void update\_varlist ()

#### **Private Attributes**

- std::map< std::string, std::unique\_ptr< save\_var\_base\_t >> varlist
   Maps variable name to unique ptr's of ac to Isl bridges.
- unsigned skipcnt

Counter of frames to skip.

const unsigned skip

Number of frames to skip after each send.

• const double srate

Sampling rate of the stream.

const std::string source\_id

User configurable source id.

const algo\_comm\_t & ac

Handle to the ac space.

## 5.2.1 Detailed Description

Runtime configuration class of the ac2lsl (p. 73) plugin.

### 5.2.2 Constructor & Destructor Documentation

C'tor of ac2lsl (p. 73) run time configuration.

## **Parameters**

activate←	Activate/Deactivate sending
_	
skipcnt⊷	Number of frames to skip after each send
_	
varlist⇔	Pointer to vector of unique ptr's of ac to Isl bridges.

```
5.2.3 Member Function Documentation
```

### 5.2.4 Member Data Documentation

Maps variable name to unique ptr's of ac to Isl bridges.

```
5.2.4.2 unsigned ac2lsl::cfg_t::skipcnt [private]
```

Counter of frames to skip.

**5.2.4.3 const unsigned ac2lsl::cfg\_t::skip** [private]

Number of frames to skip after each send.

**5.2.4.4 const double ac2lsl::cfg\_t::srate** [private]

Sampling rate of the stream.

**5.2.4.5** const std::string ac2lsl::cfg\_t::source\_id [private]

User configurable source id.

**5.2.4.6 const algo\_comm\_t& ac2lsl::cfg\_t::ac** [private]

Handle to the ac space.


The documentation for this class was generated from the following file:

## ac2lsl.cpp

## 5.3 ac2lsl::save\_var\_base\_t Class Reference

Interface for ac to Isl bridge variable.

Inheritance diagram for ac2lsl::save\_var\_base\_t:

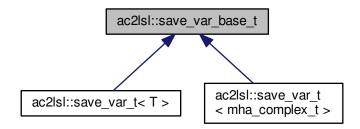

#### **Public Member Functions**

- virtual void **send\_frame** ()=0
- virtual const void \* get\_buf\_address () const =0
- virtual void set\_buf\_address (void \*data)=0
- virtual const lsl::stream\_info info () const =0
- virtual const unsigned data\_type () const =0
- virtual ~save\_var\_base\_t ()=default

## 5.3.1 Detailed Description

Interface for ac to Isl bridge variable.

### 5.3.2 Constructor & Destructor Documentation

- 5.3.2.1 virtual ac2lsl::save\_var\_base\_t::~save\_var\_base\_t( ) [virtual], [default]
- 5.3.3 Member Function Documentation
- **5.3.3.1** virtual void ac2lsl::save\_var\_base\_t::send\_frame() [pure virtual]

Implemented in ac2lsI::save\_var\_t< mha\_complex\_t > (p. 134), and ac2lsI::save\_var\_t< T > (p. 132).

5.3.3.2 virtual const void\* ac2lsl::save\_var\_base\_t::get\_buf\_address( ) const [pure virtual]

Implemented in ac2lsl::save\_var\_t < mha\_complex\_t > (p. 134), and ac2lsl::save\_var\_t <

Implemented in ac2lsl::save\_var\_t< mha\_complex\_t > (p. 134), and ac2lsl::save\_var\_t< T > (p. 131).

**5.3.3.4 virtual const lsl::stream\_info ac2lsl::save\_var\_base\_t::info ( ) const** [pure virtual]

Implemented in ac2lsl::save\_var\_t< mha\_complex\_t > (p. 134), and ac2lsl::save\_var\_t< T > (p. 131).

5.3.3.5 virtual const unsigned ac2lsl::save\_var\_base\_t::data\_type( ) const [pure virtual]

Implemented in ac2ls1::save\_var\_t< mha\_complex\_t > (p. 134), and ac2ls1::save\_var\_t< T > (p. 131).

The documentation for this class was generated from the following file:


## · ac2lsl.cpp

T > (p. 131).

5.4 ac2lsl::save\_var\_t < T > Class Template Reference

Implementation for all ac to Isl bridges except complex types.

Inheritance diagram for ac2lsl::save\_var\_t< T >:

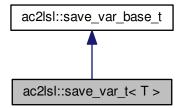

#### **Public Member Functions**

• save\_var\_t (const lsl::stream\_info &info, void \*data, unsigned data\_type)

C'tor of generic ac to lsl bridge.

virtual const void \* get\_buf\_address () const override

Get buffer address as void pointer.

virtual void set\_buf\_address (void \*data) override

Cast the input pointer to the appropriate type and set the buffer address.

virtual const lsl::stream\_info info () const override

Get stream info object from stream outlet.

• virtual const unsigned **data\_type** () const override Get data type id according MHA convention.

- virtual ~save\_var\_t ()=default
- virtual void **send\_frame** () override

Send a frame to Isl.

#### **Private Attributes**

• Isl::stream outlet stream

LSL stream outlet.

• T \* **buf** 

Pointer to data buffer of the ac variable.

const unsigned data\_type\_

Data type id according to MHA convention.

#### 5.4.1 Detailed Description

```
template<typename T> class ac2lsl::save var t<T>
```

Implementation for all ac to Isl bridges except complex types.

#### 5.4.2 Constructor & Destructor Documentation

C'tor of generic ac to Isl bridge.

#### **Parameters**

info	LSL stream info object containing metadata
data	Pointer to data buffer of the ac variable
data_type	Type id of the stream, in mha convention. Should be set to one if not a vector.

- 5.4.2.2 template < typename T > virtual ac2lsl::save\_var\_t < T > ::  $\sim$  save\_var\_t ( ) [virtual], [default]
- 5.4.3 Member Function Documentation
- 5.4.3.1 template<typename T > virtual const void\* ac2lsl::save\_var\_t< T >::get\_buf\_address( ) const [inline], [override], [virtual]

Get buffer address as void pointer.

#### Returns

Adress of the data buffer

Implements ac2lsl::save\_var\_base\_t (p. 129).

Cast the input pointer to the appropriate type and set the buffer address.

## **Parameters**

Implements ac2lsl::save\_var\_base\_t (p. 129).

5.4.3.3 template<typename T > virtual const Isl::stream\_info ac2Isl::save\_var\_t< T >::info()
const [inline], [override], [virtual]

Get stream info object from stream outlet.

Implements ac2lsl::save\_var\_base\_t (p. 129).

Get data type id according MHA convention.

Implements ac2lsl::save\_var\_base\_t (p. 129).

5.4.3.5 template < typename T > virtual void ac2lsl::save\_var\_t < T >::send\_frame( ) [inline], [override], [virtual]

Send a frame to Isl.

Implements ac2lsI::save\_var\_base\_t (p. 128).

- 5.4.4 Member Data Documentation
- **5.4.4.1** template<typename T > Isl::stream\_outlet ac2Isl::save\_var\_t<T >::stream [private]

LSL stream outlet.

Interface to Isl

5.4.4.2 template<typename T > T\* ac2lsl::save\_var\_t < T >::buf [private]

Pointer to data buffer of the ac variable.

5.4.4.3 template<typename T > const unsigned ac2lsl::save\_var\_t< T >::data\_type\_ [private]


Data type id according to MHA convention.

The documentation for this class was generated from the following file:

- · ac2lsl.cpp
- 5.5 ac2lsl::save\_var\_t< mha\_complex\_t > Class Template Reference

Template specialization of the **ac2IsI** (p. 73) bridge to take care of complex numbers.

Inheritance diagram for ac2lsl::save\_var\_t< mha\_complex\_t >:

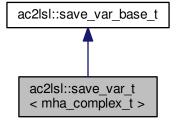

#### **Public Member Functions**

- save\_var\_t (const lsl::stream\_info &info, void \*data)

  C'tor of specialization for complex types.
- virtual const void \* get\_buf\_address () const override
- virtual void set\_buf\_address (void \*data) override
- virtual const lsl::stream\_info info () const override
   Get buffer address as void pointer.
- virtual const unsigned **data\_type** () const override
  - Cast the input pointer to the appropriate type and set the buffer address.
- virtual ~save\_var\_t ()=default
- virtual void send\_frame () override
   Send a frame of complex types.

#### **Private Attributes**

- Isl::stream\_outlet stream
   LSL stream outlet.
- mha\_complex\_t \* buf

Pointer to data buffer of the ac variable.

### 5.5.1 Detailed Description

```
\label{eq:complex_t} \begin{tabular}{ll} template <> \\ class ac2lsl::save\_var\_t < mha\_complex\_t > \\ \end{tabular}
```

Template specialization of the **ac2IsI** (p. 73) bridge to take care of complex numbers.

This specialization is needed because Isl does not support complex numbers. Order is [re(0), im(0), re(1), im(1), ...]

#### 5.5.2 Constructor & Destructor Documentation

C'tor of specialization for complex types.

See generic c'tor for details.

```
5.5.2.2 virtual ac2lsl::save_var_t< mha_complex_t>::~save_var_t( ) [virtual],
       [default]
5.5.3 Member Function Documentation
5.5.3.1 virtual const void* ac2lsl::save_var_t< mha_complex_t >::get_buf_address ( ) const
       [inline], [override], [virtual]
Implements ac2lsl::save_var_base_t (p. 129).
5.5.3.2 virtual void ac2lsl::save_var_t< mha_complex_t >::set_buf_address (
                   void * data ) [inline], [override], [virtual]
Implements ac2lsl::save_var_base_t (p. 129).
5.5.3.3 virtual const lsl::stream_info ac2lsl::save_var_t< mha_complex_t >::info ( ) const
       [inline], [override], [virtual]
Get buffer address as void pointer.
Returns
     Adress of the data buffer
Implements ac2lsI::save var base t (p. 129).
5.5.3.4 virtual const unsigned ac2lsl::save var t< mha complex t >::data_type( ) const
       [inline], [override], [virtual]
Cast the input pointer to the appropriate type and set the buffer address.
Parameters
       New buffer address
 data
Implements ac2lsl::save_var_base_t (p. 129).
5.5.3.5 virtual void ac2lsl::save_var_t< mha_complex_t >::send_frame( ) [inline],
       [override], [virtual]
Send a frame of complex types.
Reorders real and imaginary parts into one vector.
Implements ac2lsl::save_var_base_t (p. 128).
```

### 5.5.4 Member Data Documentation

**5.5.4.1** Isl::stream\_outlet ac2lsl::save\_var\_t < mha\_complex\_t >::stream [private]

LSL stream outlet.

Interface to Isl

5.5.4.2 mha\_complex\_t\* ac2lsl::save\_var\_t < mha\_complex\_t >::buf [private]

Pointer to data buffer of the ac variable.


The documentation for this class was generated from the following file:

# ac2lsl.cpp

# 5.6 ac2osc\_t Class Reference

Plugin class of the ac2osc plugin.

Inheritance diagram for ac2osc\_t:

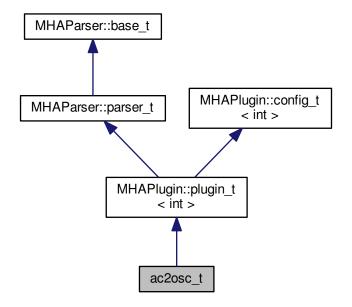

#### **Public Member Functions**

ac2osc\_t (algo\_comm\_t iac, const char \*chain, const char \*algo)

C'tor of plugin class.

- void prepare (mhaconfig t &)
- mha\_wave\_t \* process (mha\_wave\_t \*s)

Processing fct for waveforms.

mha\_spec\_t \* process (mha\_spec\_t \*s)

Processing fct for spectra.

void process ()

Process function.

• void release ()

Release frees osc related memory, does cleanup.

#### **Private Member Functions**

- void send osc float ()
- void update\_mode ()

Start/Stop sending of messages.

### **Private Attributes**

MHAParser::string t host

OSC server host name.

MHAParser::string\_t port

OSC server port.

MHAParser::int\_t ttl

Time-to-live of UDP packages.

MHAParser::vstring\_t vars

List of AC variables to be saved, empty for all.

MHAParser::kw\_t mode

Record mode.

MHAParser::int\_t skip

number of frames to skip after sending

MHAParser::bool t rt strict

abort if used in real-time thread?

- MHA AC::acspace2matrix t \* acspace
- MHAEvents::patchbay\_t< ac2osc\_t > patchbay
- bool b\_record
- uint8 t \* rtmem
- · float framerate
- int skipcnt
- lo\_address lo\_addr
- std::once\_flag rt\_strict\_flag

**Additional Inherited Members** 

```
5.6.1 Detailed Description
```

Plugin class of the ac2osc plugin.

## 5.6.2 Constructor & Destructor Documentation

C'tor of plugin class.

```
5.6.3 Member Function Documentation
```

Implements MHAPlugin::plugin\_t< int > (p. 705).

Processing fct for waveforms.

Calls **process(void)** (p. 137).

Processing fct for spectra.

Calls **process(void)** (p. 137).

```
5.6.3.4 void ac2osc_t::process ( void )
```

Process function.

Checks once if the plugin is run in a real-time thread and throws if rt\_strict is true, sends osc messages according to config.

```
5.6.3.5 void ac2osc_t::release (
                   void ) [virtual]
Release frees osc related memory, does cleanup.
Reimplemented from MHAPlugin::plugin_t< int > (p. 706).
5.6.3.6 void ac2osc_t::send_osc_float( ) [private]
5.6.3.7 void ac2osc_t::update_mode( ) [private]
Start/Stop sending of messages.
5.6.4 Member Data Documentation
5.6.4.1 MHAParser::string_t ac2osc_t::host [private]
OSC server host name.
5.6.4.2 MHAParser::string_t ac2osc_t::port [private]
OSC server port.
5.6.4.3 MHAParser::int_t ac2osc_t::ttl [private]
Time-to-live of UDP packages.
5.6.4.4 MHAParser::vstring_t ac2osc_t::vars [private]
List of AC variables to be saved, empty for all.
5.6.4.5 MHAParser::kw_t ac2osc_t::mode [private]
Record mode.
5.6.4.6 MHAParser::int_t ac2osc_t::skip [private]
number of frames to skip after sending
5.6.4.7 MHAParser::bool_t ac2osc_t::rt_strict [private]
abort if used in real-time thread?
```


```
5.6.4.8 MHA_AC::acspace2matrix_t* ac2osc_t::acspace [private]
5.6.4.9 MHAEvents::patchbay_t < ac2osc_t > ac2osc_t::patchbay [private]
5.6.4.10 bool ac2osc_t::b_record [private]
5.6.4.11 uint8_t* ac2osc_t::rtmem [private]
5.6.4.12 float ac2osc_t::framerate [private]
5.6.4.13 int ac2osc_t::skipcnt [private]
5.6.4.14 lo_address ac2osc_t::lo_addr [private]
5.6.4.15 std::once_flag ac2osc_t::rt_strict_flag [private]
```

The documentation for this class was generated from the following file:

## · ac2osc.cpp

## 5.7 ac2wave\_if\_t Class Reference

Inheritance diagram for ac2wave\_if\_t:

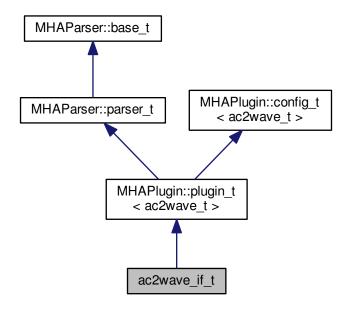

#### **Public Member Functions**

```
ac2wave_if_t (const algo_comm_t &, const std::string &, const std::string &)
mha_wave_t * process (mha_spec_t *)
mha_wave_t * process (mha_wave_t *)
void prepare (mhaconfig_t &)
```

• void release ()

#### **Private Member Functions**

• void update ()

### **Private Attributes**

```
MHAParser::string_t name
MHAParser::float_t gain_in
MHAParser::float_t gain_ac
MHAParser::int t delay in
```

- MHAParser::int\_t delay\_ac
- MHASignal::waveform t \* zeros
- bool prepared
- MHAEvents::patchbay\_t< ac2wave\_if\_t > patchbay

#### **Additional Inherited Members**

```
5.7.1 Constructor & Destructor Documentation
```

5.7.2 Member Function Documentation

Implements MHAPlugin::plugin\_t < ac2wave\_t > (p. 705).

```
5.7.2.4 void ac2wave_if_t::release( ) [virtual]
Reimplemented from MHAPlugin::plugin_t < ac2wave_t > (p. 706).
5.7.2.5 void ac2wave_if_t::update( ) [private]
5.7.3 Member Data Documentation
5.7.3.1 MHAParser::string_t ac2wave_if_t::name [private]
5.7.3.2 MHAParser::float_t ac2wave_if_t::gain_in [private]
5.7.3.3 MHAParser::float_t ac2wave_if_t::gain_ac [private]
5.7.3.4 MHAParser::int_t ac2wave_if_t::delay_in [private]
5.7.3.5 MHAParser::int_t ac2wave_if_t::delay_ac [private]
5.7.3.6 MHASignal::waveform_t* ac2wave_if_t::zeros [private]
5.7.3.7 bool ac2wave_if_t::prepared [private]
5.7.3.8 MHAEvents::patchbay_t < ac2wave_if_t > ac2wave_if_t::patchbay [private]
5.7.3.8 MHAEvents::patchbay_t < ac2wave_if_t > ac2wave_if_t::patchbay [private]
```

The documentation for this class was generated from the following file:

ac2wave.cpp

## 5.8 ac2wave t Class Reference

#### **Public Member Functions**

- ac2wave\_t (unsigned int frames\_, unsigned int channels\_, algo\_comm\_t ac\_, std::string name\_, float gain\_in\_, float gain\_ac\_, unsigned int delay\_in\_, unsigned int delay\_ac\_)
- mha\_wave\_t \* process (mha\_wave\_t \*)

### **Private Attributes**

- unsigned int frames
- unsigned int channels
- mha\_wave\_t w
- · algo\_comm\_t ac
- std::string name
- MHASignal::delay\_wave\_t delay\_in
- MHASignal::delay\_wave\_t delay\_ac
- mha\_real\_t gain\_in
- mha\_real\_t gain\_ac

```
5.8.1 Constructor & Destructor Documentation
```

```
5.8.1.1 ac2wave_t::ac2wave_t (
                   unsigned int frames_,
                   unsigned int channels_,
                   algo comm t ac,
                   std::string name_,
                   float gain_in_,
                   float gain_ac_,
                   unsigned int delay_in_,
                   unsigned int delay_ac_ )
5.8.2 Member Function Documentation
5.8.2.1 mha_wave_t * ac2wave_t::process (
                   mha_wave_t * s )
5.8.3 Member Data Documentation
5.8.3.1 unsigned int ac2wave_t::frames [private]
5.8.3.2 unsigned int ac2wave_t::channels [private]
5.8.3.3 mha_wave_t ac2wave_t::w [private]
5.8.3.4 algo_comm_t ac2wave_t::ac [private]
5.8.3.5 std::string ac2wave_t::name [private]
5.8.3.6 MHASignal::delay_wave_t ac2wave_t::delay_in [private]
5.8.3.7 MHASignal::delay_wave_t ac2wave_t::delay_ac [private]
5.8.3.8 mha_real_t ac2wave_t::gain_in [private]
```


The documentation for this class was generated from the following file:

5.8.3.9 mha\_real\_t ac2wave\_t::gain\_ac [private]

## · ac2wave.cpp

# 5.9 acConcat\_wave Class Reference

Inheritance diagram for acConcat\_wave:

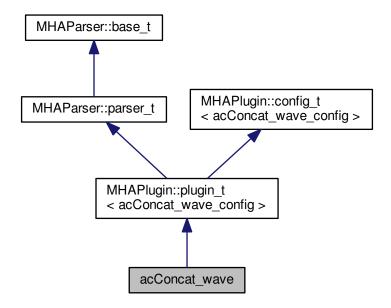

### **Public Member Functions**

acConcat\_wave (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

Constructs our plugin.

- ∼acConcat\_wave ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig\_t &)

Plugin preparation.

void release (void)

### **Public Attributes**

- MHAParser::int\_t num\_AC
- MHAParser::string\_t prefix\_names\_AC
- MHAParser::vint\_t samples\_AC
- MHAParser::string\_t name\_conAC

**Private Member Functions** 

• void update cfg ()

**Private Attributes** 

MHAEvents::patchbay\_t< acConcat\_wave > patchbay

**Additional Inherited Members** 

```
5.9.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.9.1.2 acConcat_wave::~acConcat_wave()
```

5.9.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin\_t< acConcat\_wave\_config > (p. 705).

**5.9.3.5** MHAEvents::patchbay\_t<acConcat\_wave> acConcat\_wave::patchbay [private]

The documentation for this class was generated from the following files:

- · acConcat wave.h
- acConcat\_wave.cpp
- 5.10 acConcat\_wave\_config Class Reference

**Public Member Functions** 

- acConcat\_wave\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, acConcat\_
   — wave \*\_concat)
- ~acConcat\_wave\_config ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Public Attributes**

- algo\_comm\_t & ac
- std::vector< std::string > strNames\_AC
- std::vector< int > numSamples\_AC
- mha\_wave\_t vGCC
- MHA\_AC::waveform\_t \* vGCC\_con

```
5.10.1 Constructor & Destructor Documentation
```

```
5.10.1.1 acConcat_wave_config::acConcat_wave_config (
                    algo comm t & ac,
                    const mhaconfig_t in_cfg,
                    acConcat_wave * _concat )
5.10.1.2 acConcat_wave_config::~acConcat_wave_config()
5.10.2 Member Function Documentation
```

```
5.10.2.1 mha_wave_t * acConcat_wave_config::process (
                    mha wave t * wave )
```

5.10.3 Member Data Documentation

```
5.10.3.1 algo_comm_t& acConcat_wave_config::ac
```

5.10.3.2 std::vector<std::string> acConcat\_wave\_config::strNames\_AC

5.10.3.3 std::vector<int> acConcat\_wave\_config::numSamples\_AC

5.10.3.4 mha\_wave\_t acConcat\_wave\_config::vGCC

5.10.3.5 MHA\_AC::waveform\_t\* acConcat\_wave\_config::vGCC\_con

The documentation for this class was generated from the following files:

- acConcat\_wave.h
- acConcat\_wave.cpp
- acmon::ac\_monitor\_t Class Reference

A class for converting AC variables to Parser monitors of correct type.

**Public Member Functions** 

 ac monitor t (MHAParser::parser t &parent, const std::string &name, algo comm **\_t** ac, bool use\_matrix) Converts AC variable to parser monitor.

void getvar (algo comm t ac)

Update values of monitor.

### **Public Attributes**

std::string name

name of AC variable and parser monitor

• std::string dimstr

columns x rows

MHAParser::vfloat\_mon\_t mon

Monitor used for real vectors.

MHAParser::mfloat\_mon\_t mon\_mat

Monitor used for real matrices.

MHAParser::vcomplex\_mon\_t mon\_complex

monitor used for complex vectors

MHAParser::mcomplex\_mon\_t mon\_mat\_complex

monitor used for complex matrices

MHAParser::parser\_t & p\_parser

parent parser to insert monitor into

#### **Private Attributes**

· bool use\_mat

if true, use matrix monitor, else use vector monitor

### 5.11.1 Detailed Description

A class for converting AC variables to Parser monitors of correct type.

### 5.11.2 Constructor & Destructor Documentation

```
5.11.2.1 acmon::ac_monitor_t::ac_monitor_t (

MHAParser::parser_t & parent,

const std::string & name_,

algo_comm_t ac,

bool use_matrix )
```

Converts AC variable to parser monitor.

#### **Parameters**

parent	The parser to insert a monitor into
name_	The name of the AC variable and the monitor variable
ac	Handle to algorithm communication space
use_matrix	Indicates if a matrix monitor type should be used.

5.11.3 Member Function Documentation

5.11.3.1 void acmon::ac\_monitor\_t::getvar ( algo comm t ac )

Update values of monitor.

**Parameters** 

ac | Handle to algorithm communication space

5.11.4 Member Data Documentation

5.11.4.1 std::string acmon::ac\_monitor\_t::name

name of AC variable and parser monitor

5.11.4.2 std::string acmon::ac\_monitor\_t::dimstr

columns x rows

5.11.4.3 MHAParser::vfloat\_mon\_t acmon::ac\_monitor\_t::mon

Monitor used for real vectors.

5.11.4.4 MHAParser::mfloat\_mon\_t acmon::ac\_monitor\_t::mon\_mat

Monitor used for real matrices.

5.11.4.5 MHAParser::vcomplex\_mon\_t acmon::ac\_monitor\_t::mon\_complex

monitor used for complex vectors

5.11.4.6 MHAParser::mcomplex\_mon\_t acmon::ac\_monitor\_t::mon\_mat\_complex

monitor used for complex matrices

5.11.4.7 MHAParser::parser\_t& acmon::ac\_monitor\_t::p\_parser

parent parser to insert monitor into

**5.11.4.8** bool acmon::ac\_monitor\_t::use\_mat [private]


if true, use matrix monitor, else use vector monitor

The documentation for this class was generated from the following files:

- ac\_monitor\_type.hh
- ac\_monitor\_type.cpp

## 5.12 acmon::acmon\_t Class Reference

Inheritance diagram for acmon::acmon\_t:

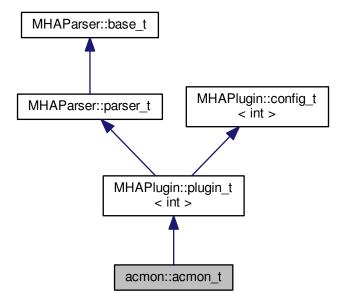

### **Public Member Functions**

- acmon\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- ~acmon\_t ()
- void prepare (mhaconfig\_t &)
- void release ()
- mha\_spec\_t \* process (mha\_spec\_t \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Private Member Functions**

- void save\_vars ()
- void update\_recmode ()

### **Private Attributes**

```
· algo_comm_t ac
```

- MHAParser::vstring\_mon\_t varlist
- MHAParser::vstring\_mon\_t dimensions
- MHAParser::kw\_t dispmode
- MHAParser::kw\_t recmode
- std::vector< ac\_monitor\_t \* > vars
- MHAEvents::patchbay\_t< acmon\_t > patchbay
- std::string chain
- std::string algo
- bool b cont
- bool b\_snapshot

### **Additional Inherited Members**

```
5.12.1 Constructor & Destructor Documentation
```

```
5.12.1.2 acmon::acmon_t::\simacmon_t ( void )
```

5.12.2 Member Function Documentation

Implements MHAPlugin::plugin\_t< int > (p. 705).

Reimplemented from **MHAPlugin::plugin\_t**< int > (p. 706).


```
5.12.2.3 mha_spec_t * acmon::acmon_t::process (
                   mha\_spec\_t * s)
5.12.2.4 mha_wave_t * acmon::acmon_t::process (
                   mha_wave_t * s )
5.12.2.5 void acmon::acmon t::save vars() [private]
5.12.2.6 void acmon::acmon_t::update_recmode( ) [private]
5.12.3 Member Data Documentation
5.12.3.1 algo comm t acmon::acmon_t::ac [private]
5.12.3.2 MHAParser::vstring_mon_t acmon::acmon_t::varlist [private]
5.12.3.3 MHAParser::vstring mon tacmon::acmon t::dimensions [private]
5.12.3.4 MHAParser::kw_t acmon::acmon_t::dispmode [private]
5.12.3.5 MHAParser::kw tacmon::acmon_t::recmode [private]
5.12.3.6 std::vector<ac_monitor_t*> acmon::acmon_t::vars [private]
5.12.3.7 MHAEvents::patchbay_t<acmon_t> acmon::acmon_t::patchbay [private]
5.12.3.8 std::string acmon::acmon_t::chain [private]
5.12.3.9 std::string acmon::acmon_t::algo [private]
5.12.3.10 bool acmon::acmon_t::b_cont [private]
5.12.3.11 bool acmon::acmon_t::b_snapshot [private]
```

The documentation for this class was generated from the following file:

### acmon.cpp

# 5.13 acPooling\_wave Class Reference

Inheritance diagram for acPooling\_wave:

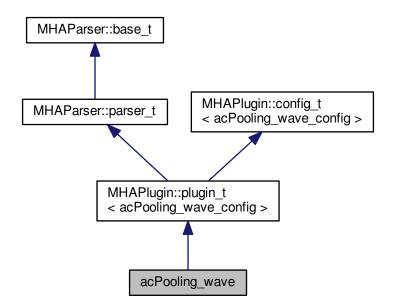

### **Public Member Functions**

acPooling\_wave (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

Constructs our plugin.

- ∼acPooling\_wave ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

Checks for the most recent configuration and defers processing to it.

• void prepare (mhaconfig\_t &)

Plugin preparation.

void release (void)

# **Public Attributes**

- MHAParser::int\_t numsamples
- MHAParser::int\_t pooling\_wndlen
- MHAParser::kw\_t pooling\_type
- MHAParser::float\_t upper\_threshold
- MHAParser::float\_t lower\_threshold
- MHAParser::int\_t neighbourhood

```
    MHAParser::float_t alpha
```

- MHAParser::string\_t p\_name
- MHAParser::string\_t p\_biased\_name
- MHAParser::string\_t pool\_name
- MHAParser::string\_t max\_pool\_ind\_name
- MHAParser::string\_t like\_ratio\_name
- MHAParser::vfloat\_t prob\_bias

#### **Private Member Functions**

void update\_cfg ()

#### **Private Attributes**

MHAEvents::patchbay\_t< acPooling\_wave > patchbay

**Additional Inherited Members** 

```
5.13.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.13.1.2 acPooling_wave::~acPooling_wave()
```

5.13.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

#### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

```
Implements MHAPlugin::plugin_t< acPooling_wave_config > (p. 705).
5.13.2.3 void acPooling wave::release (
                    void ) [inline],[virtual]
Reimplemented from MHAPlugin::plugin t < acPooling wave config > (p. 706).
5.13.2.4 void acPooling_wave::update_cfg( ) [private]
5.13.3 Member Data Documentation
        MHAParser::int tacPooling wave::numsamples
5.13.3.2 MHAParser::int_t acPooling_wave::pooling_wndlen
5.13.3.3 MHAParser::kw t acPooling_wave::pooling_type
5.13.3.4 MHAParser::float t acPooling_wave::upper_threshold
5.13.3.5 MHAParser::float_t acPooling_wave::lower_threshold
5.13.3.6 MHAParser::int tacPooling wave::neighbourhood
5.13.3.7 MHAParser::float_t acPooling_wave::alpha
5.13.3.8 MHAParser::string t acPooling_wave::p_name
5.13.3.9 MHAParser::string_t acPooling_wave::p_biased_name
5.13.3.10 MHAParser::string_t acPooling_wave::pool_name
5.13.3.11 MHAParser::string tacPooling_wave::max_pool_ind_name
5.13.3.12 MHAParser::string t acPooling_wave::like_ratio_name
```

The documentation for this class was generated from the following files:

5.13.3.14 MHAEvents::patchbay\_t<acPooling\_wave> acPooling\_wave::patchbay

5.13.3.13 MHAParser::vfloat tacPooling wave::prob bias

- · acPooling\_wave.h
- acPooling\_wave.cpp

[private]

# 5.14 acPooling\_wave\_config Class Reference

#### **Public Member Functions**

- acPooling\_wave\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, acPooling
   —wave \*\_pooling)
- ~acPooling\_wave\_config ()
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void **insert** ()

#### **Public Attributes**

- · algo\_comm\_t & ac
- std::string raw\_p\_name
- MHA\_AC::waveform\_t p
- MHA\_AC::waveform\_t p\_biased
- MHA\_AC::waveform\_t p\_max
- MHA\_AC::waveform\_t like\_ratio
- mha\_wave\_t c
- unsigned int pooling\_ind
- unsigned int pooling\_option
- unsigned int pooling\_size
- float up\_thresh
- float low thresh
- int neigh
- float alpha
- MHASignal::waveform\_t pool
- MHASignal::waveform\_t prob\_bias\_func

## 5.14.1 Constructor & Destructor Documentation

- 5.14.1.2 acPooling\_wave\_config::~acPooling\_wave\_config()
- 5.14.2 Member Function Documentation
- 5.14.2.1 mha\_wave\_t \* acPooling\_wave\_config::process ( mha\_wave\_t \* wave )
- 5.14.2.2 void acPooling\_wave\_config::insert ( )


- 5.14.3 Member Data Documentation
- 5.14.3.1 algo\_comm\_t& acPooling\_wave\_config::ac
- 5.14.3.2 std::string acPooling\_wave\_config::raw\_p\_name
- 5.14.3.3 MHA\_AC::waveform\_t acPooling\_wave\_config::p
- 5.14.3.4 MHA\_AC::waveform\_t acPooling\_wave\_config::p\_biased
- 5.14.3.5 MHA\_AC::waveform\_t acPooling\_wave\_config::p\_max
- 5.14.3.6 MHA AC::waveform t acPooling\_wave\_config::like\_ratio
- 5.14.3.7 mha\_wave\_t acPooling\_wave\_config::c
- 5.14.3.8 unsigned int acPooling\_wave\_config::pooling\_ind
- 5.14.3.9 unsigned int acPooling\_wave\_config::pooling\_option
- 5.14.3.10 unsigned int acPooling\_wave\_config::pooling\_size
- 5.14.3.11 float acPooling wave config::up thresh
- 5.14.3.12 float acPooling\_wave\_config::low\_thresh
- 5.14.3.13 int acPooling\_wave\_config::neigh
- 5.14.3.14 float acPooling wave config::alpha
- 5.14.3.15 MHASignal::waveform\_t acPooling\_wave\_config::pool
- 5.14.3.16 MHASignal::waveform\_t acPooling\_wave\_config::prob\_bias\_func

The documentation for this class was generated from the following files:

- · acPooling wave.h
- acPooling\_wave.cpp

# 5.15 acsave::acsave\_t Class Reference

Inheritance diagram for acsave::acsave\_t:

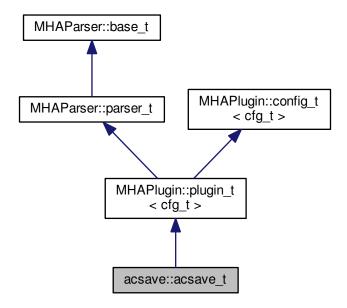

### **Public Member Functions**

- acsave\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- void prepare (mhaconfig\_t &)
- void release ()
- mha\_spec\_t \* process (mha\_spec\_t \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void event\_start\_recording ()
- void event\_stop\_and\_flush ()

## **Private Types**

typedef std::vector< save\_var\_t \* > varlist\_t

### **Private Member Functions**

void process ()

#### **Private Attributes**

```
    MHAParser::bool_t bflush

    MHAParser::kw_t fileformat

    MHAParser::string_t fname

    MHAParser::float t reclen

    MHAParser::vstring_t variables

    varlist t varlist

    std::string chain

    std::string algo

    bool b_prepared

    bool b_flushed

    MHAEvents::patchbay_t< acsave_t > patchbay

Additional Inherited Members
5.15.1 Member Typedef Documentation
5.15.1.1 typedef std::vector<save_var_t*> acsave::acsave_t::varlist_t [private]
5.15.2 Constructor & Destructor Documentation
5.15.2.1 acsave::acsave_t::acsave_t (
                     const algo comm t & iac,
                     const std::string & ith,
                      const std::string & ial )
5.15.3 Member Function Documentation
5.15.3.1 void acsave::acsave_t::prepare (
                      mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < cfg_t > (p.705).
```

**5.15.3.2** void acsave::acsave\_t::release( ) [virtual]

Reimplemented from **MHAPlugin::plugin\_t** < **cfg\_t** > (p. 706).

```
5.15.3.3 mha_spec_t * acsave::acsave_t::process (
                    mha\_spec\_t * s)
5.15.3.4 mha_wave_t * acsave::acsave_t::process (
                    mha_wave_t * s
5.15.3.5 void acsave::acsave_t::event_start_recording()
5.15.3.6 void acsave::acsave_t::event_stop_and_flush()
5.15.3.7 void acsave::acsave_t::process (
                    void ) [private]
5.15.4 Member Data Documentation
5.15.4.1 MHAParser::bool tacsave::acsave_t::bflush [private]
5.15.4.2 MHAParser::kw t acsave::acsave_t::fileformat [private]
5.15.4.3 MHAParser::string_t acsave::acsave_t::fname [private]
5.15.4.4 MHAParser::float_t acsave::acsave_t::reclen [private]
5.15.4.5 MHAParser::vstring_t acsave::acsave_t::variables [private]
5.15.4.6 varlist_t acsave::acsave_t::varlist [private]
5.15.4.7 std::string acsave::acsave_t::chain [private]
5.15.4.8 std::string acsave::acsave_t::algo [private]
5.15.4.9 bool acsave::acsave_t::b_prepared [private]
5.15.4.10 bool acsave::acsave_t::b_flushed [private]
5.15.4.11 MHAEvents::patchbay_t<acsave_t> acsave::acsave_t::patchbay [private]
```

The documentation for this class was generated from the following file:

#### acsave.cpp

# 5.16 acsave::cfg\_t Class Reference

### **Public Member Functions**

- cfg\_t (const algo\_comm\_t &iac, unsigned int imax\_frames, std::vector< std::string > &var\_names)
- ~cfg\_t ()
- void store\_frame ()
- void flush\_data (const std::string &, unsigned int)

## **Private Attributes**

- · algo\_comm\_t ac
- · unsigned int nvars
- save\_var\_t \*\* varlist
- unsigned int rec\_frames
- unsigned int max\_frames

#### 5.16.1 Constructor & Destructor Documentation

```
5.16.1.2 cfg_t::\simcfg_t()
```

5.16.2 Member Function Documentation

```
5.16.2.1 void cfg_t::store_frame ( )
```

This function is called in the processing thread.

This function is called in the configuration thread.

## **Parameters**

filename	Output file name
fmt	Output file format

#### 5.16.3 Member Data Documentation

```
5.16.3.1 algo_comm_t acsave::cfg_t::ac [private]
5.16.3.2 unsigned int acsave::cfg_t::nvars [private]
5.16.3.3 save_var_t** acsave::cfg_t::varlist [private]
5.16.3.4 unsigned int acsave::cfg_t::rec_frames [private]
```

**5.16.3.5** unsigned int acsave::cfg\_t::max\_frames [private]

The documentation for this class was generated from the following file:

### · acsave.cpp

### 5.17 acsave::mat4head t Struct Reference

### **Public Attributes**

- int32\_t t
- int32\_t rows
- int32 t cols
- int32\_t imag
- int32\_t namelen

#### 5.17.1 Member Data Documentation

```
5.17.1.1 int32 t acsave::mat4head t::t
```

5.17.1.2 int32\_t acsave::mat4head\_t::rows

5.17.1.3 int32\_t acsave::mat4head\_t::cols

5.17.1.4 int32\_t acsave::mat4head\_t::imag

5.17.1.5 int32\_t acsave::mat4head\_t::namelen

The documentation for this struct was generated from the following file:

### acsave.cpp

## 5.18 acsave::save\_var\_t Class Reference

### **Public Member Functions**

```
    save_var_t (const std::string &, int, const algo_comm_t &)
```

- ~save\_var\_t ()
- void store\_frame ()
- void save\_txt (FILE \*, unsigned int)
- void save\_mat4 (FILE \*, unsigned int)
- void save\_m (FILE \*, unsigned int)

### **Public Attributes**

• double \* data

### **Private Attributes**

- std::string name
- unsigned int **nframes**
- · unsigned int ndim
- · unsigned int maxframe
- algo\_comm\_t ac
- unsigned int framecnt
- bool b\_complex

#### 5.18.1 Constructor & Destructor Documentation

FILE \* fh,

unsigned int writeframes )


```
5.18.2.3 void acsave::save_var_t::save_mat4 (
                     FILE * fh,
                     unsigned int writeframes )
5.18.2.4 void acsave::save_var_t::save_m (
                     FILE * fh,
                     unsigned int writeframes )
5.18.3 Member Data Documentation
5.18.3.1 double* acsave::save_var_t::data
5.18.3.2 std::string acsave::save_var_t::name [private]
5.18.3.3 unsigned int acsave::save_var_t::nframes [private]
5.18.3.4 unsigned int acsave::save_var_t::ndim [private]
5.18.3.5 unsigned int acsave::save_var_t::maxframe [private]
5.18.3.6 algo_comm_t acsave::save_var_t::ac [private]
5.18.3.7 unsigned int acsave::save_var_t::framecnt [private]
5.18.3.8 bool acsave::save_var_t::b_complex [private]
```

The documentation for this class was generated from the following file:

### acsave.cpp

## 5.19 acSteer Class Reference

Inheritance diagram for acSteer:

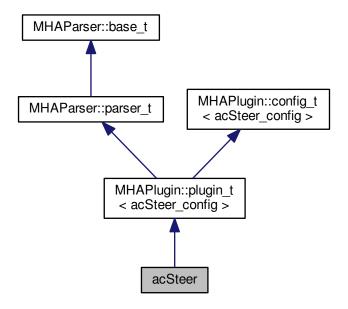

### **Public Member Functions**

acSteer (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_←
name)

Constructs our plugin.

- ~acSteer ()
- mha\_spec\_t \* process (mha\_spec\_t \*)

Thos method is a NOOP.

void prepare (mhaconfig\_t &)

Plugin preparation.

void release (void)

### **Public Attributes**

- MHAParser::string t steerFile
- MHAParser::string\_t acSteerName1
- MHAParser::string\_t acSteerName2
- MHAParser::int\_t nsteerchan
- MHAParser::int\_t nrefmic

**Private Member Functions** 

void update\_cfg ()

**Private Attributes** 

MHAEvents::patchbay\_t< acSteer > patchbay

**Additional Inherited Members** 

```
5.19.1 Constructor & Destructor Documentation
```

```
5.19.1.1 acSteer::acSteer (

algo_comm_t & ac,

const std::string & chain_name,

const std::string & algo_name )
```

Constructs our plugin.

```
5.19.1.2 acSteer:: ~acSteer ( )
```

5.19.2 Member Function Documentation

```
5.19.2.1 mha_spec_t * acSteer::process ( mha_spec_t * signal )
```

Thos method is a NOOP.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

## **Parameters**

```
signal_info Structure containing a description of the form of the signal (domain, number of channels, frames per block, sampling rate.
```

Implements MHAPlugin::plugin\_t< acSteer\_config > (p. 705).

The documentation for this class was generated from the following files:

**5.19.3.6** MHAEvents::patchbay\_t<acSteer> acSteer::patchbay [private]

- · acSteer.h
- acSteer.cpp

# 5.20 acSteer\_config Class Reference

**Public Member Functions** 

- acSteer\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, acSteer \*acSteer)
- ~acSteer\_config ()
- void **insert** ()

## **Public Attributes**

- unsigned int nchan
- unsigned int nfreq
- unsigned int nsteerchan
- · unsigned int nrefmic
- unsigned int nangle
- MHA\_AC::spectrum\_t specSteer1
- MHA\_AC::spectrum\_t specSteer2

```
5.20.1 Constructor & Destructor Documentation
5.20.1.1 acSteer_config::acSteer_config (
                      algo_comm_t & ac,
                      const mhaconfig_t in_cfg,
                      acSteer * acSteer )
5.20.1.2 acSteer_config::~acSteer_config()
5.20.2 Member Function Documentation
5.20.2.1 void acSteer_config::insert ( )
5.20.3 Member Data Documentation
5.20.3.1 unsigned int acSteer_config::nchan
5.20.3.2 unsigned int acSteer_config::nfreq
5.20.3.3 unsigned int acSteer_config::nsteerchan
5.20.3.4 unsigned int acSteer_config::nrefmic
5.20.3.5 unsigned int acSteer_config::nangle
5.20.3.6 MHA_AC::spectrum_t acSteer_config::specSteer1
```


The documentation for this class was generated from the following files:

5.20.3.7 MHA\_AC::spectrum\_t acSteer\_config::specSteer2

- · acSteer.h
- acSteer.cpp

# 5.21 acTransform wave Class Reference

Inheritance diagram for acTransform\_wave:

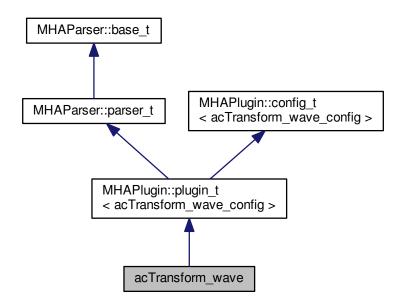

## **Public Member Functions**

acTransform\_wave (algo\_comm\_t &ac, const std::string &chain\_name, const std
 ::string &algo\_name)

Constructs our plugin.

- ~acTransform\_wave ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig\_t &)

Plugin preparation.

void release (void)

# **Public Attributes**

- MHAParser::string\_t ang\_name
- MHAParser::string\_t raw\_p\_name
- MHAParser::string\_t raw\_p\_max\_name
- MHAParser::string\_t rotated\_p\_name
- MHAParser::string\_t rotated\_p\_max\_name
- MHAParser::int\_t numsamples
- MHAParser::bool\_t to\_from

**Private Member Functions** 

void update\_cfg ()

**Private Attributes** 

MHAEvents::patchbay\_t< acTransform\_wave > patchbay

**Additional Inherited Members** 

```
5.21.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.21.1.2 acTransform_wave::~acTransform_wave()
```

5.21.2 Member Function Documentation

```
5.21.2.1 mha_wave_t * acTransform_wave::process ( mha_wave_t * signal )
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

## **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin\_t< acTransform\_wave\_config > (p. 705).

Reimplemented from MHAPlugin::plugin\_t< acTransform\_wave\_config > (p. 706).

```
5.21.2.4 void acTransform_wave::update_cfg( ) [private]
```

5.21.3 Member Data Documentation

```
5.21.3.1 MHAParser::string_t acTransform_wave::ang_name
```

5.21.3.2 MHAParser::string\_t acTransform\_wave::raw\_p\_name

5.21.3.3 MHAParser::string t acTransform\_wave::raw\_p\_max\_name

5.21.3.4 MHAParser::string\_t acTransform\_wave::rotated\_p\_name

5.21.3.5 MHAParser::string\_t acTransform\_wave::rotated\_p\_max\_name

5.21.3.6 MHAParser::int tacTransform wave::numsamples

5.21.3.7 MHAParser::bool t acTransform\_wave::to\_from

The documentation for this class was generated from the following files:

- · acTransform wave.h
- acTransform\_wave.cpp

## 5.22 acTransform wave config Class Reference

**Public Member Functions** 

- acTransform\_wave\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, ac←
   Transform\_wave \*\_transform)
- ~acTransform wave config ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Public Attributes**


- · algo\_comm\_t & ac
- std::string ang\_name
- std::string raw p name
- std::string raw\_p\_max\_name
- MHA\_AC::waveform\_t rotated\_p
- MHA\_AC::int\_t rotated\_i
- unsigned int offset
- unsigned int resolution
- · unsigned int to from
- 5.22.1 Constructor & Destructor Documentation
- 5.22.1.2 acTransform\_wave\_config::~acTransform\_wave\_config()
- 5.22.2 Member Function Documentation
- 5.22.3 Member Data Documentation
- 5.22.3.1 algo\_comm\_t& acTransform\_wave\_config::ac
- 5.22.3.2 std::string acTransform\_wave\_config::ang\_name
- 5.22.3.3 std::string acTransform\_wave\_config::raw\_p\_name
- 5.22.3.4 std::string acTransform\_wave\_config::raw\_p\_max\_name
- 5.22.3.5 MHA\_AC::waveform\_t acTransform\_wave\_config::rotated\_p
- 5.22.3.6 MHA\_AC::int\_t acTransform\_wave\_config::rotated\_i
- 5.22.3.7 unsigned int acTransform\_wave\_config::offset
- 5.22.3.8 unsigned int acTransform\_wave\_config::resolution
- 5.22.3.9 unsigned int acTransform\_wave\_config::to\_from

The documentation for this class was generated from the following files:

- acTransform wave.h
- acTransform\_wave.cpp

# 5.23 addsndfile::addsndfile\_if\_t Class Reference

Inheritance diagram for addsndfile::addsndfile\_if\_t:

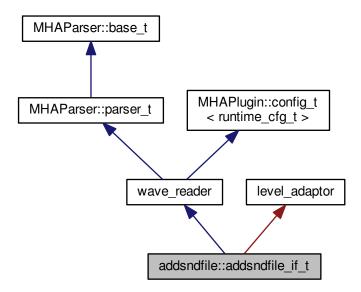

#### **Public Member Functions**

- addsndfile\_if\_t (algo\_comm\_t, const char \*, const char \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

## **Private Member Functions**

- void **update** ()
- void change\_mode ()
- void set\_level ()
- void scan\_dir ()

# **Private Attributes**

MHAParser::string\_t filename

MHAParser::string\_t path

MHAParser::bool\_t loop

MHAParser::float\_t level

- MHAParser::kw\_t levelmode
- MHAParser::kw t resamplingmode
- MHAParser::vint\_t channels
- MHAParser::kw t mode
- MHAParser::float\_t ramplen
- MHAParser::int\_t startpos
- MHAParser::vint\_mon\_t mapping
- MHAParser::int\_mon\_t numchannels
- MHAParser::int\_mon\_t mhachannels
- · MHAParser::int mon tactive
- MHAParser::string\_t search\_pattern
- MHAParser::vstring\_mon\_t search\_result
- unsigned int uint mode
- MHAEvents::patchbay\_t< addsndfile\_if\_t > patchbay

#### **Additional Inherited Members**

```
5.23.1 Constructor & Destructor Documentation
```

5.23.2 Member Function Documentation

```
5.23.2.1 mha_wave_t * addsndfile::addsndfile_if_t::process ( mha_wave_t * s )
```

Implements MHAPlugin::plugin t < runtime cfg t > (p. 705).

**5.23.2.3** void addsndfile::addsndfile\_if\_t::release() [virtual]

Reimplemented from **MHAPlugin::plugin\_t**< **runtime\_cfg\_t** > (p. 706).


```
5.23.2.4
        void addsndfile::addsndfile if t::update( ) [private]
5.23.2.5 void addsndfile::addsndfile if t::change mode() [private]
5.23.2.6 void addsndfile::addsndfile_if_t::set_level( ) [private]
5.23.2.7 void addsndfile::addsndfile_if_t::scan_dir( ) [private]
5.23.3 Member Data Documentation
        MHAParser::string t addsndfile::addsndfile if t::filename [private]
5.23.3.1
5.23.3.2
        MHAParser::string t addsndfile::addsndfile if t::path [private]
5.23.3.3
        MHAParser::bool taddsndfile::addsndfile_if_t::loop [private]
5.23.3.4
        MHAParser::float taddsndfile::addsndfile if t::level [private]
5.23.3.5
        MHAParser::kw t addsndfile::addsndfile_if_t::levelmode [private]
5.23.3.6
        MHAParser::kw taddsndfile::addsndfile_if_t::resamplingmode [private]
5.23.3.7
        MHAParser::vint t addsndfile::addsndfile if t::channels [private]
5.23.3.8
        MHAParser::kw t addsndfile::addsndfile_if_t::mode [private]
5.23.3.9
        MHAParser::float taddsndfile::addsndfile if t::ramplen [private]
5.23.3.10 MHAParser::int_t addsndfile::addsndfile_if_t::startpos [private]
5.23.3.11 MHAParser::vint mon taddsndfile::addsndfile_if_t::mapping [private]
5.23.3.12 MHAParser::int_mon_t addsndfile::addsndfile_if_t::numchannels [private]
5.23.3.13 MHAParser::int_mon_t addsndfile::addsndfile_if_t::mhachannels [private]
5.23.3.14 MHAParser::int mon taddsndfile::addsndfile_if_t::active [private]
5.23.3.15 MHAParser::string_t addsndfile::addsndfile_if_t::search_pattern [private]
5.23.3.16 MHAParser::vstring mon t addsndfile::addsndfile_if_t::search_result [private]
5.23.3.17 unsigned int addsndfile::addsndfile_if_t::uint_mode [private]
5.23.3.18
         MHAEvents::patchbay t<addsndfile if t> addsndfile::addsndfile if t::patchbay
          [private]
```

The documentation for this class was generated from the following file:

## addsndfile.cpp

# 5.24 addsndfile::level\_adapt\_t Class Reference

Inheritance diagram for addsndfile::level\_adapt\_t:

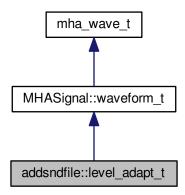

#### **Public Member Functions**

- level\_adapt\_t (mhaconfig\_t cf, mha\_real\_t adapt\_len, mha\_real\_t l\_new\_, mha\_real \_t l\_old\_)
- void update\_frame ()
- mha\_real\_t get\_level () const
- bool can\_update () const

## **Private Attributes**

- unsigned int ilen
- unsigned int **pos**
- MHAWindow::fun\_t wnd
- mha\_real\_t l\_new
- mha\_real\_t l\_old

## **Additional Inherited Members**

# 5.24.1 Constructor & Destructor Documentation

- 5.24.2 Member Function Documentation
- 5.24.2.1 void addsndfile::level\_adapt\_t::update\_frame ( )
- 5.24.2.2 mha\_real\_t addsndfile::level\_adapt\_t::get\_level( ) const [inline]
- **5.24.2.3** bool addsndfile::level\_adapt\_t::can\_update() const [inline]
- 5.24.3 Member Data Documentation
- **5.24.3.1** unsigned int addsndfile::level\_adapt\_t::ilen [private]
- **5.24.3.2** unsigned int addsndfile::level\_adapt\_t::pos [private]
- **5.24.3.3** MHAWindow::fun\_t addsndfile::level\_adapt\_t::wnd [private]
- **5.24.3.4 mha real t addsndfile::level\_adapt\_t::l\_new** [private]
- **5.24.3.5 mha real taddsndfile::level\_adapt\_t::l\_old** [private]


The documentation for this class was generated from the following file:

# addsndfile.cpp

## 5.25 addsndfile::resampled soundfile t Class Reference

Reads sound from file and resamples it if necessary and wanted.

Inheritance diagram for addsndfile::resampled\_soundfile\_t:

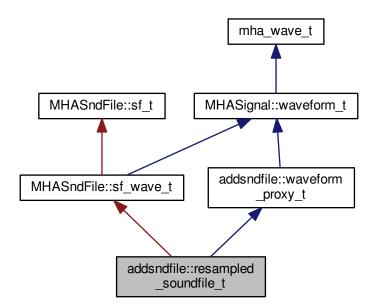

**Public Member Functions** 

resampled\_soundfile\_t (const std::string &name, float mha\_sampling\_rate, addsndfile 
 \_resampling\_mode\_t resampling\_mode)

Reads sound from file and resamples if necessary and wanted.

**Additional Inherited Members** 

# 5.25.1 Detailed Description

Reads sound from file and resamples it if necessary and wanted.

Sound data can then be used by addsndfile.

#### 5.25.2 Constructor & Destructor Documentation

Reads sound from file and resamples if necessary and wanted.

If the sound file does not specify a sampling rate, then the sound data is always used without resampling.

#### **Parameters**

name	Sound file name
mha_sampling_rate	The sampling rate of the MHA signal processing at the point of the addsndfile plugin
resampling_mode	DONT_RESAMPLE_STRICT: Do not resample, just use the samples from the sound file at the current sample rate, even if the sample rate of the sound file differs. DONT_RESAMPLE_PERMISSIVE: Do not resample, if the sample rate of the MHA differs from the sample rate of the sound file, raise an error. DO_RESAMPLE: Resample.

# **Exceptions**


<b>MHA_Error</b> (p. 423)	If the sampling rate of the file does not match the sampling rate of
	the MHA and DONT_RESAMPLE_STRICT was requested. If
	resampling failed (e.g. due to non-rational quotient of MHA sampling
	rate and sound file sampling rate).

The documentation for this class was generated from the following file:

# · addsndfile.cpp

# 5.26 addsndfile::sndfile t Class Reference

Inheritance diagram for addsndfile::sndfile\_t:

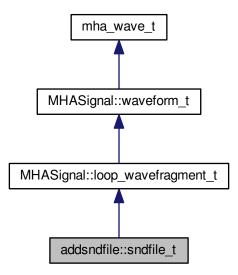

## **Public Member Functions**

sndfile\_t (const std::string &name, bool loop, unsigned int level\_mode, std::vector< int > channels\_, unsigned int nchannels, std::vector< int > &mapping, int &numchannels, unsigned int startpos, float mha\_sampling\_rate, addsndfile\_resampling\_mode\_t resampling\_mode)

**Additional Inherited Members** 

#### 5.26.1 Constructor & Destructor Documentation


The documentation for this class was generated from the following file:

# · addsndfile.cpp

# 5.27 addsndfile::waveform\_proxy\_t Class Reference

Class helps to specify which instance of MHASignal\_waveform\_t parent instance is meant in **resampled\_soundfile\_t** (p. 176).

Inheritance diagram for addsndfile::waveform\_proxy\_t:

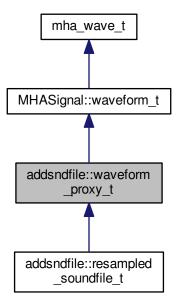

**Public Member Functions** 

waveform\_proxy\_t (unsigned frames, unsigned channels)

#### **Additional Inherited Members**

## 5.27.1 Detailed Description

Class helps to specify which instance of MHASignal\_waveform\_t parent instance is meant in **resampled\_soundfile\_t** (p. 176).

#### 5.27.2 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

· addsndfile.cpp

## 5.28 ADM::ADM < F > Class Template Reference

Adaptive differential microphone, working for speech frequency range.

# **Public Member Functions**

- **ADM** (F fs, F dist, unsigned lp\_order, const F \*lp\_alphas, unsigned decomb\_order, const F \*decomb\_alphas, F tau\_beta=F(50e-3), F mu\_beta=F(1e-4))

  Create Adaptive Differential Microphone.
- F process (const F &front, const F &back, const F &external\_beta=F(-1))
   ADM (p. 180) processes one frame.
- F beta () const

# **Private Attributes**

- Delay
   F > m\_delay\_front
- Delay< F> m\_delay\_back
- Linearphase\_FIR< F > m\_lp\_bf
- Linearphase\_FIR< F > m\_lp\_result
- Linearphase\_FIR< F > m\_decomb
- F m beta
- F m\_mu\_beta
- F m\_powerfilter\_coeff
- F m\_powerfilter\_norm
- F m\_powerfilter\_state

# 5.28.1 Detailed Description

```
template<class F> class ADM::ADM< F>
```

Adaptive differential microphone, working for speech frequency range.

# 5.28.2 Constructor & Destructor Documentation

```
5.28.2.1 template < class F > ADM::ADM< F >::ADM ( F fs, F dist, unsigned Ip\_order, const F * Ip\_alphas, unsigned decomb\_order, const F * decomb\_alphas, F tau\_beta = F (50e-3), F mu\_beta = F (1e-4)
```

Create Adaptive Differential Microphone.

#### **Parameters**

fs	Sampling rate / Hz
dist	Distance between physical microphones / m
lp_order	Filter order of FIR lowpass filter used for adaptation
lp_alphas	Pointer to array of alpha coefficients for the lowpass filter used for adaptation. Since this class uses linear phase FIR filters only, only the first half (order/2 + 1) of the coefficients will be read (coefficients for linear-phase FIR filters are symmetric).
decomb_order	Filter order of FIR compensation filter (compensates for comb filter characteristic)
decomb_alphas	Pointer to array of alpha coefficients for the compensation filter used to compensate for the comb filter characteristic. Since this class uses linear phase FIR filters only, only the first half (order/2 + 1)of the coefficients will be read (coefficients for linear-phase FIR filters are symmetric).
tau_beta	Time constant of the lowpass filter used for averaging the power of the output signal
mu_beta	adaption speed

## 5.28.3 Member Function Documentation

# **ADM** (p. 180) processes one frame.

#### **Parameters**

front	The current front input signal sample
back	The current rear input signal sample
external_beta	If >= 0, this is used as the "beta" parameter for direction to filter out. Else, the beta parameter is adapted to filtered out a direction so that best reduction of signal intensity from the back hemisphere is achieved.

#### **Returns**

The computed output sample

```
5.28.3.2 template < class F > F ADM::ADM < F >::beta ( ) const [inline]
5.28.4 Member Data Documentation
5.28.4.1 template < class F > Delay < F > ADM::ADM < F >::m_delay_front [private]
5.28.4.2
        template < class F > Delay < F > ADM::ADM < F > ::m_delay_back [private]
5.28.4.3
        template < class F > Linearphase_FIR < F > ADM::ADM < F >::m_lp_bf [private]
5.28.4.4
        template < class F > Linearphase_FIR < F > ADM::ADM < F > ::m_lp_result [private]
5.28.4.5
        template < class F > Linearphase FIR < F > ADM::ADM < F > ::m_decomb [private]
        template < class F > F ADM::ADM < F >::m_beta [private]
5.28.4.6
        template < class F > F ADM::ADM < F >::m_mu_beta [private]
5.28.4.8
        template < class F > F ADM::ADM < F >::m_powerfilter_coeff [private]
5.28.4.9 template < class F > F ADM::ADM < F >::m_powerfilter_norm [private]
5.28.4.10 template < class F > F ADM::ADM < F >::m powerfilter state [private]
```

The documentation for this class was generated from the following file:

#### · adm.hh

# 5.29 ADM::Delay < F > Class Template Reference

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

## **Public Member Functions**

- Delay (F samples, F f\_design, F fs)
   Create a signal delay object.
- ∼Delay ()
- F process (const F &in\_sample)

Apply delay to signal.

## **Private Attributes**

unsigned m\_fullsamples

Integer part of delay.

F m\_coeff

coefficient for 1st order IIR lowpass filter which does the subsample delay

F m\_norm

normalization for the IIR subsample delay filter

• F \* m\_state

Ringbuffer: Delayline.

unsigned m\_now\_in

current position for inserting new samples into m\_state ringbuffer

## 5.29.1 Detailed Description

```
template < class F> class ADM::Delay < F >
```

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

#### 5.29.2 Constructor & Destructor Documentation

Create a signal delay object.

## **Parameters**

samples	number of samples to delay (may be non-integer)
f_design	subsampledelay is exact for this frequency
fs	sampling frequency

```
5.29.2.2 template < class F > ADM::Delay < F >::\sim Delay (
```

5.29.3 Member Function Documentation

Apply delay to signal.

#### **Parameters**

in_sample	The current input signal sample
-----------	---------------------------------

## **Returns**

The computed output sample

# 5.29.4 Member Data Documentation

 $\textbf{5.29.4.1} \quad \textbf{template} < \textbf{class F} > \textbf{unsigned ADM::Delay} < \textbf{F} > \textbf{::m\_fullsamples} \quad \texttt{[private]}$ 

Integer part of delay.

**5.29.4.2** template < class F > F ADM::Delay < F >::m\_coeff [private]

coefficient for 1st order IIR lowpass filter which does the subsample delay

5.29.4.3 template < class F > F ADM::Delay < F >::m\_norm [private]

normalization for the IIR subsample delay filter

**5.29.4.4** template < class F > F\* ADM::Delay <  $F > ::m_state [private]$ 

Ringbuffer: Delayline.

5.29.4.5 template < class F > unsigned ADM::Delay < F > ::m\_now\_in [private]
current position for inserting new samples into m\_state ringbuffer
The documentation for this class was generated from the following file:

· adm.hh

# 5.30 ADM::Linearphase\_FIR< F > Class Template Reference

An efficient linear-phase fir filter implementation.

# **Public Member Functions**

- Linearphase\_FIR (unsigned order, const F \*alphas)
   Create linear-phase FIR filter.
- ∼Linearphase\_FIR ()
- F process (const F &in\_sample)

Filter one sample with this linear-phase FIR filter.

## **Private Attributes**

• unsigned m\_order

The filter order of this linear-phase FIR filter.

F \* m\_alphas

FIR filter coefficients.

• F \* m output

Ringbuffer for building future output.

unsigned m now

current start of ringbuffer

# 5.30.1 Detailed Description

```
template < class F> class ADM::Linearphase_FIR < F >
```

An efficient linear-phase fir filter implementation.

## 5.30.2 Constructor & Destructor Documentation

```
5.30.2.1 template < class F > ADM::Linearphase_FIR < F > ::Linearphase_FIR ( unsigned order, const F * alphas )
```

Create linear-phase FIR filter.

#### **Parameters**

order	filter order of this FIR filter. restriction: must be even.
alphas	pointer to Array of alpha coefficients. Since this class is for linear phase FIR filters only, only (order / 2 + 1) coefficients will be read. (Coefficients for linear-phase FIR filters are symmetric.)

```
5.30.2.2 template < class F > ADM::Linearphase_FIR < F >::\sim Linearphase_FIR (
```

5.30.3 Member Function Documentation

5.30.3.1 template 
$$<$$
 class F  $>$  F ADM::Linearphase\_FIR  $<$  F  $>$ ::process ( const F & in\_sample ) [inline]

Filter one sample with this linear-phase FIR filter.

#### **Parameters**

## **Returns**

the computed output sample

## 5.30.4 Member Data Documentation

**5.30.4.1** template < class F > unsigned ADM::Linearphase\_FIR < F >::m\_order [private]

The filter order of this linear-phase FIR filter.

**5.30.4.2** template < class F > F\* ADM::Linearphase\_FIR < F >::m\_alphas [private]

FIR filter coefficients.

Only m\_order / 2 + 1 coefficients need to be stored since coefficients of linear-phase FIR filters are symmetric

**5.30.4.3** template < class F > F\* ADM::Linearphase\_FIR < F >::m\_output [private]

Ringbuffer for building future output.

**5.30.4.4** template < class F > unsigned ADM::Linearphase\_FIR < F >::m\_now [private]


current start of ringbuffer

The documentation for this class was generated from the following file:

## · adm.hh

# 5.31 adm\_if\_t Class Reference

Inheritance diagram for adm\_if\_t:

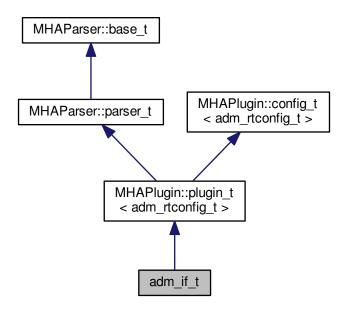

# **Public Member Functions**

- adm\_if\_t (const algo\_comm\_t &ac, const std::string &thread\_name, const std::string &algo\_name)
- mha\_wave\_t \* process (mha\_wave\_t \*in)
- virtual void prepare (mhaconfig\_t &)
- virtual void release ()

# **Private Member Functions**

- void update ()
- bool is\_prepared ()

#### **Private Attributes**

```
    MHASignal::waveform_t * out
```

- MHAParser::vint\_t front\_channels
- MHAParser::vint t rear channels
- MHAParser::vfloat\_t distances
- MHAParser::int\_t lp\_order
- MHAParser::int\_t decomb\_order
- MHAParser::int\_t bypass
- MHAParser::float\_t beta
- · MHAParser::vfloat t mu beta
- MHAParser::vfloat\_t tau\_beta
- MHAParser::vfloat\_mon\_t coeff\_lp
- MHAParser::vfloat\_mon\_t coeff\_decomb
- unsigned input\_channels
- mha\_real\_t srate
- MHAEvents::patchbay t< adm if t > patchbay

#### **Additional Inherited Members**

```
5.31.1 Constructor & Destructor Documentation
```

5.31.2 Member Function Documentation

```
5.31.2.1 mha_wave_t * adm_if_t::process (
mha_wave_t * in )
```

Implements MHAPlugin::plugin\_t < adm\_rtconfig\_t > (p. 705).

**5.31.2.3** void adm\_if\_t::release() [virtual]

Reimplemented from MHAPlugin::plugin\_t< adm\_rtconfig\_t > (p. 706).

```
5.31.2.4 void adm_if_t::update( ) [private]
5.31.2.5 bool adm_if_t::is_prepared( ) [inline], [private]
5.31.3 Member Data Documentation
5.31.3.1 MHASignal::waveform t* adm_if_t::out [private]
5.31.3.2 MHAParser::vint tadm_if_t::front_channels [private]
5.31.3.3 MHAParser::vint_t adm_if_t::rear_channels [private]
5.31.3.4 MHAParser::vfloat_t adm_if_t::distances [private]
5.31.3.5 MHAParser::int_t adm_if_t::lp_order [private]
5.31.3.6 MHAParser::int_t adm_if_t::decomb_order [private]
5.31.3.7 MHAParser::int_t adm_if_t::bypass [private]
5.31.3.8 MHAParser::float_t adm_if_t::beta [private]
5.31.3.9 MHAParser::vfloat_t adm_if_t::mu_beta [private]
5.31.3.10 MHAParser::vfloat_t adm_if_t::tau_beta [private]
5.31.3.11 MHAParser::vfloat_mon_t adm_if_t::coeff_lp [private]
5.31.3.12 MHAParser::vfloat_mon_t adm_if_t::coeff_decomb [private]
5.31.3.13 unsigned adm_if_t::input_channels [private]
5.31.3.14 mha_real_t adm_if_t::srate [private]
5.31.3.15 MHAEvents::patchbay_t<adm_if_t> adm_if_t::patchbay [private]
```

The documentation for this class was generated from the following file:

## adm.cpp

5.32 adm\_rtconfig\_t Class Reference

**Public Types** 

typedef ADM::ADM< mha\_real\_t > adm\_t

#### **Public Member Functions**

adm\_rtconfig\_t (unsigned nchannels\_in, unsigned nchannels\_out, const std::vector< int > &front\_channels, const std::vector< int > &rear\_channels, const mha\_real\_t fs, const std::vector< mha\_real\_t > &distances, const int lp\_order, const int decomb\_order, const std::vector< mha\_real\_t > &tau\_beta, const std::vector< mha\_real\_t > &mu\_
beta)

Construct new ADMs.

- virtual ~adm\_rtconfig\_t ()
- size\_t num\_adms () const
- adm\_t & adm (unsigned index)

Returns adm object number index.

• int front channel (unsigned index) const

Returns index of front channel for adm number index.

• int rear channel (unsigned index) const

Returns index of rear channel for adm number index.

#### **Private Member Functions**

void check\_index (unsigned index) const

Index checking for all internal arrays.

#### **Private Attributes**

std::vector< int > front\_channels

Indices of channels containing the signals from the front microphones.

std::vector< int > rear\_channels

Indices of channels containing the signals from the rear microphones.

MHASignal::waveform\_t \* lp\_coeffs

Lowpass filter coefficients.

std::vector< MHASignal::waveform\_t \* > decomb\_coeffs

Decomb-Filter coefficients.

std::vector< adm\_t \* > adms

ADMs.

- 5.32.1 Member Typedef Documentation
- 5.32.1.1 typedef ADM::ADM<mha\_real\_t> adm\_rtconfig\_t::adm\_t
- 5.32.2 Constructor & Destructor Documentation

#### Construct new ADMs.

Used when configuration changes.

#### **Parameters**

nchannels_in	Number of input channels
nchannels_out	Number of output channels
front_channels	Parser's front_channels setting
rear_channels	Parser's front_channels setting
fs	Sampling rate / Hz
distances	Distances between microphones / m
lp_order	Filter order of FIR lowpass filter for adaptation
decomb_order	Filter order of FIR compensation filter (compensates for comb filter characteristic)
tau_beta	Time constants of the lowpass filter used for averaging the power of the output signal used for adaptation
mu_beta	Adaptation step sizes

```
5.32.2.2 adm_rtconfig_t::~adm_rtconfig_t() [virtual]
```

## 5.32.3 Member Function Documentation

Index checking for all internal arrays.

# **Exceptions**

```
MHA_Error (p. 423) if index out of range.
```

```
5.32.3.2 size_t adm_rtconfig_t::num_adms() const [inline]
5.32.3.3 adm t& adm_rtconfig_t::adm (
                     unsigned index ) [inline]
Returns adm object number index.
5.32.3.4 int adm rtconfig t::front channel (
                     unsigned index ) const [inline]
Returns index of front channel for adm number index.
5.32.3.5 int adm_rtconfig_t::rear_channel (
                     unsigned index ) const [inline]
Returns index of rear channel for adm number index.
5.32.4 Member Data Documentation
5.32.4.1 std::vector<int> adm_rtconfig_t::front_channels [private]
Indices of channels containing the signals from the front microphones.
5.32.4.2 std::vector<int> adm_rtconfig_t::rear_channels [private]
Indices of channels containing the signals from the rear microphones.
5.32.4.3 MHASignal::waveform t*adm_rtconfig_t::lp_coeffs [private]
Lowpass filter coefficients.
5.32.4.4 std::vector<MHASignal::waveform t*> adm_rtconfig_t::decomb_coeffs [private]
Decomb-Filter coefficients.
5.32.4.5 std::vector<adm_t *> adm_rtconfig_t::adms [private]
ADMs.
The documentation for this class was generated from the following file:
```

· adm.cpp

## 5.33 algo\_comm\_t Struct Reference

A reference handle for algorithm communication variables.

#### **Public Attributes**

• void \* handle

AC variable control handle.

int(\* insert\_var )(void \*, const char \*, comm\_var\_t)
 Register an AC variable.

• int(\* insert\_var\_int )(void \*, const char \*, int \*)

Register an int as an AC variable.

int(\* insert\_var\_float )(void \*, const char \*, float \*)

Register a float as an AC variable.

int(\* remove\_var )(void \*, const char \*)

Remove an AC variable.

int(\* remove\_ref )(void \*, void \*)

Remove all AC variable which refer to address.

int(\* is\_var )(void \*, const char \*)

Test if an AC variable exists.

int(\* get\_var )(void \*, const char \*, comm\_var\_t \*)

Get the variable handle of an AC variable.

int(\* get\_var\_int )(void \*, const char \*, int \*)

Get the value of an int AC variable.

int(\* get\_var\_float )(void \*, const char \*, float \*)

Get the value of a float AC variable.

int(\* get entries)(void \*, char \*, unsigned int)

Return a space separated list of all variable names.

const char \*(\* get\_error )(int)

Convert AC error codes into human readable error messages.

# 5.33.1 Detailed Description

A reference handle for algorithm communication variables.

This structure contains a coontrol handle and a set of function pointers for sharing variables within one processing chain. See also section **Communication between algorithms** (p. 23).

#### 5.33.2 Member Data Documentation

5.33.2.1 algo\_comm\_t::handle

AC variable control handle.

5.33.2.2 algo\_comm\_t::insert\_var

Register an AC variable.

This function can register a variable to be shared within one chain. If a variable of this name exists it will be overwritten.

## **Parameters**

h	AC handle
n	The state of the s
	copied, therefore it is allowed that the char array pointed to gets invalid after return.
V	variable handle of type <b>comm_var_t</b> (p. 238)

## **Returns**

Error code or zero on success

5.33.2.3 algo\_comm\_t::insert\_var\_int

Register an int as an AC variable.

This function can register an int variable to be shared with other algorithms. It behaves similar to ac.insert\_var.

# **Parameters**

h	AC handle
n	name of variable
V	pointer on the variable

# Returns

Error code or zero on success

5.33.2.4 algo\_comm\_t::insert\_var\_float

Register a float as an AC variable.

This function can register a float variable to be shared with other algorithms. It behaves similar to ac.insert\_var.

## **Parameters**

h	AC handle
n	name of variable
V	pointer on the variable

## Returns

Error code or zero on success

5.33.2.5 algo\_comm\_t::remove\_var

Remove an AC variable.

Remove (unregister) an AC variable. After calling this function, the variable is not available to ac.is\_var or ac.get\_var. The data pointer is not affected.

#### **Parameters**

h	AC handle
n	name of variable to be removed

#### **Returns**

Error code or zero on success

5.33.2.6 algo\_comm\_t::remove\_ref

Remove all AC variable which refer to address.

This function removes all AC variables whos data field points to the given address.

#### **Parameters**

h	AC handle
p	address which should not be referred to any more

## **Returns**

Error code or zero on success

5.33.2.7 algo\_comm\_t::is\_var

Test if an AC variable exists.

This function tests if an AC variable of a given name exists. Use ac.get\_var to get information about the variables type and dimension.

## **Parameters**

h	AC handle
n	name of variable

#### Returns

1 if the variable exists, 0 otherwise

5.33.2.8 algo\_comm\_t::get\_var

Get the variable handle of an AC variable.

This function returns the variable handle **comm\_var\_t** (p. 238) of a variable of the given name. If no variable of that name exists, an error code is returned.

#### **Parameters**

h	AC handle
n	name of variable
V	pointer to a AC variable object

#### Returns

Error code or zero on success

5.33.2.9 algo\_comm\_t::get\_var\_int

Get the value of an int AC variable.

This function returns the value of an int AC variable of the given name. If no variable exists, the variable type is mismatching or more than one entry is registered, a corresponding error code is returned. This is a special version of ac.get\_var.

#### **Parameters**

h	AC handle
n	name of variable
V	pointer on an int variable to store the result

# Returns

Error code or zero on success

5.33.2.10 algo\_comm\_t::get\_var\_float

Get the value of a float AC variable.

This function returns the value of a float AC variable of the given name. If no variable exists, the variable type is mismatching or more than one entry is registered, a corresponding error code is returned. This is a special version of ac.get\_var.

# **Parameters**

h	AC handle
n	name of variable
V	pointer on a float variable to store the result

## **Returns**

Error code or zero on success

5.33.2.11 algo\_comm\_t::get\_entries

Return a space separated list of all variable names.

This function returns the names of all registered variables, separated by a single space.

### **Parameters**

h AC handle

# **Return values**

ret Character buffer for return value

#### **Parameters**

len length of character buffer

## Returns

Error code or zero on success. -1: invalid ac handle. -3: not enough room in character buffer to store all variable names.

5.33.2.12 algo\_comm\_t::get\_error

Convert AC error codes into human readable error messages.

#### **Parameters**

e Error code

#### **Returns**


Error message

The documentation for this struct was generated from the following files:

- · mha.h
- mha\_algo\_comm.cpp

## 5.34 alsa\_base\_t Class Reference

Inheritance diagram for alsa\_base\_t:

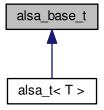

# **Public Member Functions**

- alsa\_base\_t ()
- virtual ~alsa\_base\_t ()=default
- virtual void **start** ()=0

start puts alsa device in usable state

virtual void stop ()=0

stop informs alsa device that we do not need any more samples / will not provide any more samples

virtual int read (mha\_wave\_t \*\*)=0

read audio samples from the device into an internal **mha\_wave\_t** (p. 472) buffer, then update the pointer given as parameter to point to the internal structure.

• virtual int write (mha\_wave\_t \*)=0

write audio samples from the given waveform buffer to the sound device.

#### **Public Attributes**

• snd pcm t \* pcm

The underlying alsa handle to this sound card.

```
5.34.1 Constructor & Destructor Documentation
```

```
5.34.1.1 alsa_base_t::alsa_base_t( ) [inline]
5.34.1.2 virtual alsa_base_t::~alsa_base_t( ) [virtual], [default]
5.34.2 Member Function Documentation
5.34.2.1 virtual void alsa_base_t::start( ) [pure virtual]
start puts alsa device in usable state
Implemented in alsa_t < T > (p. 203).
```

stop informs alsa device that we do not need any more samples / will not provide any more samples

**5.34.2.2 virtual void alsa\_base\_t::stop()** [pure virtual]

read audio samples from the device into an internal **mha\_wave\_t** (p. 472) buffer, then update the pointer given as parameter to point to the internal structure.

Converts sound samples from the integer data type provided by the sound card to floating-point values needed by the MHA in the range [-1.0,1.0]

write audio samples from the given waveform buffer to the sound device.

converts the floating point values coming from the MHA to the integer samples required by the sound card.

```
Implemented in alsa_t < T > (p. 204).
```

# 5.34.3 Member Data Documentation

## 5.34.3.1 snd\_pcm\_t\* alsa\_base\_t::pcm

The underlying alsa handle to this sound card.


The documentation for this class was generated from the following file:

## MHAIOalsa.cpp

# 5.35 alsa\_dev\_par\_parser\_t Class Reference

Parser variables corresponding to one alsa device.

Inheritance diagram for alsa\_dev\_par\_parser\_t:

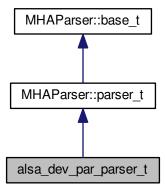

## **Public Member Functions**

• alsa\_dev\_par\_parser\_t (snd\_pcm\_stream\_t stream\_dir)

Constructor inserts the parser variables into this sub-parser.

#### **Public Attributes**

MHAParser::string\_t device

Name of the device in the alsa world, like "hw:0.0", "default", etc.

MHAParser::int\_t nperiods

Number of buffers of fragsize to hold in the alsa buffer.

snd\_pcm\_stream\_t stream\_dir

Remember the direction (capture/playback) of this device.

**Additional Inherited Members** 

### 5.35.1 Detailed Description

Parser variables corresponding to one alsa device.

ALSA separates audio capture and audio playback into two different devices that have to be opened separately. This class encapsulates the parser variables that pertain to one such direction.

### 5.35.2 Constructor & Destructor Documentation

Constructor inserts the parser variables into this sub-parser.

#### **Parameters**

# 5.35.3 Member Data Documentation

5.35.3.1 MHAParser::string\_t alsa\_dev\_par\_parser\_t::device

Name of the device in the alsa world, like "hw:0.0", "default", etc.

5.35.3.2 MHAParser::int\_t alsa\_dev\_par\_parser\_t::nperiods

Number of buffers of fragsize to hold in the alsa buffer.

Usually 2, the minimum possible.

5.35.3.3 snd\_pcm\_stream\_t alsa\_dev\_par\_parser\_t::stream\_dir

Remember the direction (capture/playback) of this device.


The documentation for this class was generated from the following file:

# MHAIOalsa.cpp

# 5.36 alsa\_t < T > Class Template Reference

Our representation of one alsa device.

Inheritance diagram for alsa\_t< T >:

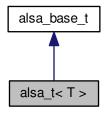

#### **Public Member Functions**

alsa\_t (const alsa\_dev\_par\_parser\_t &par, unsigned int rate, unsigned int fragsize, unsigned int channels)

Constructor receives the parameters for this device.

~alsa\_t ()

Destructor closes the sound device.

• void start () override

start puts alsa device in usable state

• void **stop** () override

stop informs alsa device that we do not need any more samples / will not provide any more samples

int read (mha wave t \*\*) override

read audio samples from the device into an internal **mha\_wave\_t** (p. 472) buffer, then update the pointer given as parameter to point to the internal structure.

int write (mha\_wave\_t \*) override

write audio samples from the given waveform buffer to the sound device.

#### **Private Attributes**

- · unsigned int channels
- unsigned int fragsize
- T \* buffer
- std::vector< mha\_real\_t > frame\_data
- MHASignal::waveform\_t wave

internal buffer to store sound samples coming from the sound card.

- const mha\_real\_t gain
- const mha\_real\_t invgain
- · const mha real t val min
- · const mha real t val max
- snd\_pcm\_format\_t pcm\_format

**Additional Inherited Members** 

### 5.36.1 Detailed Description

```
template<typename T> class alsa_t< T>
```

Our representation of one alsa device.

We can start and stop the device, and depending on the direction, read or write samples.

#### 5.36.2 Constructor & Destructor Documentation

Constructor receives the parameters for this device.

It opens the sound device using the alsa library and selects the given parameters, but does not yet start the sound device to perform real I/O.

### **Parameters**

par	our parser variable aggregator (containing direction, device name, and number of periods to place in alsa buffer)
rate	sampling rate in Hz
fragsize	samples per block per channel
channels	number of audio channels to open

```
5.36.2.2 template<typename T > alsa_t < T > :: \sim alsa_t ( )
```

Destructor closes the sound device.

## 5.36.3 Member Function Documentation

```
\textbf{5.36.3.1} \quad \textbf{template} < \textbf{typename} \; \textbf{T} > \textbf{void alsa\_t} < \textbf{T} > \textbf{::start()} \quad \texttt{[override], [virtual]}
```

start puts alsa device in usable state

Implements alsa\_base\_t (p. 199).

```
5.36.3.2 template < typename T > void alsa_t < T > ::stop() [override], [virtual]
```

stop informs alsa device that we do not need any more samples / will not provide any more samples

Implements alsa\_base\_t (p. 199).

read audio samples from the device into an internal **mha\_wave\_t** (p. 472) buffer, then update the pointer given as parameter to point to the internal structure.

Converts sound samples from the integer data type provided by the sound card to floating-point values needed by the MHA in the range [-1.0,1.0]

Implements alsa\_base\_t (p. 199).

write audio samples from the given waveform buffer to the sound device.

converts the floating point values coming from the MHA to the integer samples required by the sound card.

Implements alsa\_base\_t (p. 199).

5.36.4 Member Data Documentation

```
5.36.4.1 template<typename T > unsigned int alsa t<T >::channels [private]
```

**5.36.4.2** template<typename T > unsigned int alsa t<T>::fragsize [private]

**5.36.4.3** template<typename T > T\* alsa\_t < T >::buffer [private]

5.36.4.4 template<typename T > std::vector<mha real t > alsa t < T >::frame\_data [private]

 $\textbf{5.36.4.5} \quad \textbf{template} < \textbf{typename} \ \textbf{T} > \textbf{MHASignal::waveform\_t alsa\_t} < \textbf{T} > \textbf{::wave} \quad \texttt{[private]}$ 

internal buffer to store sound samples coming from the sound card.


```
5.36.4.6 template < typename T > const mha_real_t alsa_t < T > ::gain [private]
5.36.4.7 template < typename T > const mha_real_t alsa_t < T > ::invgain [private]
5.36.4.8 template < typename T > const mha_real_t alsa_t < T > ::val_min [private]
5.36.4.9 template < typename T > const mha_real_t alsa_t < T > ::val_max [private]
5.36.4.10 template < typename T > snd_pcm_format_t alsa_t < T > ::pcm_format [private]
```

The documentation for this class was generated from the following file:

# MHAIOalsa.cpp

# 5.37 altplugs\_t Class Reference

Inheritance diagram for altplugs\_t:

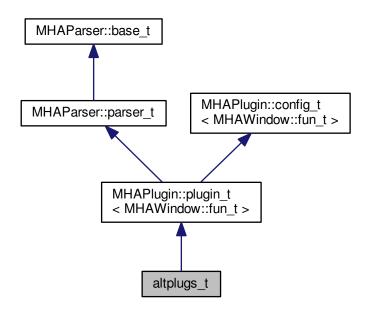

#### **Public Member Functions**

- altplugs\_t (algo\_comm\_t iac, const char \*chain, const char \*algo)
- void prepare (mhaconfig\_t &)
- void release ()
- void process (mha wave t \*, mha wave t \*\*)
- void process (mha spec t \*, mha wave t \*\*)
- void process (mha\_wave\_t \*, mha\_spec\_t \*\*)
- void process (mha\_spec\_t \*, mha\_spec\_t \*\*)
- virtual std::string parse (const std::string & arg)
- virtual void parse (const char \*a1, char \*a2, unsigned int a3)

#### **Private Member Functions**

```
void event_set_plugs ()
```

- void event\_add\_plug ()
- void event delete plug ()
- void event\_select\_plug ()
- void update selector list ()
- void update\_ramplen ()
- void proc\_ramp (mha\_wave\_t \*s)

#### **Private Attributes**

- MHAParser::bool\_t use\_own\_ac
- MHAParser::vstring t parser plugs
- MHAParser::string\_t add\_plug
- MHAParser::string\_t delete\_plug
- MHAParser::float t ramplen
- MHAParser::kw\_t select\_plug
- MHAParser::parser\_t current
- MHAParser::vstring\_mon\_t nondefault\_labels
- std::vector< mhaplug\_cfg\_t \* > plugs
- mhaplug\_cfg\_t \* selected\_plug
- MHAEvents::patchbay t< altplugs t > patchbay
- MHASignal::waveform t \* fallback wave
- MHASignal::spectrum\_t \* fallback\_spec
- mhaconfig t cfin
- · mhaconfig\_t cfout
- bool prepared
- bool added via plugs
- unsigned int ramp\_counter
- unsigned int ramp\_len

## **Additional Inherited Members**

```
5.37.1 Constructor & Destructor Documentation
```

5.37.2 Member Function Documentation

Implements MHAPlugin::plugin\_t < MHAWindow::fun\_t > (p. 705).

```
5.37.2.2 void altplugs_t::release( ) [virtual]
Reimplemented from MHAPlugin::plugin_t < MHAWindow::fun_t > (p. 706).
5.37.2.3 void altplugs_t::process (
                     mha wave t * sln,
                     mha_wave_t ** sOut )
5.37.2.4 void altplugs_t::process (
                     mha_spec_t * sln,
                     mha_wave_t ** sOut )
5.37.2.5 void altplugs_t::process (
                    mha_wave_t * sln,
                     mha_spec_t ** sOut )
5.37.2.6 void altplugs_t::process (
                     mha_spec_t * sln,
                     mha_spec_t ** sOut )
5.37.2.7 std::string altplugs_t::parse (
                     const std::string & arg ) [virtual]
Reimplemented from MHAParser::base_t (p. 612).
5.37.2.8 virtual void altplugs_t::parse (
                    const char * a1,
                     char * a2,
                     unsigned int a3 ) [inline], [virtual]
Reimplemented from MHAParser::base_t (p. 613).
5.37.2.9 void altplugs_t::event_set_plugs() [private]
5.37.2.10 void altplugs_t::event_add_plug( ) [private]
5.37.2.11 void altplugs_t::event_delete_plug( ) [private]
5.37.2.12 void altplugs_t::event_select_plug( ) [private]
5.37.2.13 void altplugs_t::update_selector_list() [private]
5.37.2.14 void altplugs_t::update_ramplen() [private]
```

```
5.37.2.15 void altplugs_t::proc_ramp (
                     mha_wave_t * s ) [private]
5.37.3 Member Data Documentation
5.37.3.1
        MHAParser::bool_t altplugs_t::use_own_ac [private]
        MHAParser::vstring_t altplugs_t::parser_plugs [private]
5.37.3.2
5.37.3.3
        MHAParser::string_t altplugs_t::add_plug [private]
5.37.3.4
        MHAParser::string t altplugs_t::delete_plug [private]
5.37.3.5
        MHAParser::float_t altplugs_t::ramplen [private]
5.37.3.6
        MHAParser::kw_t altplugs_t::select_plug [private]
5.37.3.7
        MHAParser::parser taltplugs_t::current [private]
5.37.3.8
        MHAParser::vstring_mon_t altplugs_t::nondefault_labels [private]
5.37.3.9 std::vector<mhaplug_cfg_t*> altplugs_t::plugs [private]
5.37.3.10 mhaplug_cfg_t* altplugs_t::selected_plug [private]
5.37.3.11 MHAEvents::patchbay_t<altplugs_t> altplugs_t::patchbay [private]
5.37.3.12 MHASignal::waveform_t* altplugs_t::fallback_wave [private]
5.37.3.13 MHASignal::spectrum_t* altplugs_t::fallback_spec [private]
5.37.3.14 mhaconfig taltplugs_t::cfin [private]
5.37.3.15 mhaconfig_t altplugs_t::cfout [private]
5.37.3.16 bool altplugs_t::prepared [private]
5.37.3.17 bool altplugs_t::added_via_plugs [private]
5.37.3.18 unsigned int altplugs_t::ramp_counter [private]
5.37.3.19 unsigned int altplugs_t::ramp_len [private]
```

The documentation for this class was generated from the following file:

# · altplugs.cpp

# 5.38 analysepath t Class Reference

#### **Public Member Functions**

- analysepath\_t (unsigned int nchannels\_in, unsigned int outer\_fragsize, unsigned int inner\_fragsize, int priority, MHAProc\_wave2wave\_t inner\_proc\_wave2wave, MHA← Proc\_wave2spec\_t inner\_proc\_wave2spec, void \*ilibdata, algo\_comm\_t outer\_ac, const MHA\_AC::acspace2matrix\_t &acspace\_template, mha\_domain\_t inner\_out\_← domain, unsigned int fifo\_len\_blocks)
- virtual ~analysepath\_t ()
- void rt process (mha wave t \*)
- virtual int svc ()

#### **Private Attributes**

- MHAProc\_wave2wave\_t inner\_process\_wave2wave
- MHAProc wave2spec tinner process wave2spec
- MHASignal::waveform\_t inner\_input
- void \* libdata
- mha\_fifo\_t< mha\_real\_t > wave\_fifo
- mha\_fifo\_t< MHA\_AC::acspace2matrix\_t > ac\_fifo
- MHA\_AC::acspace2matrix\_t inner\_ac\_copy
- MHA\_AC::acspace2matrix\_t outer\_ac\_copy
- · algo\_comm\_t outer\_ac
- mha\_domain\_t inner\_out\_domain
- MHA\_Error inner\_error
- bool has\_inner\_error
- bool flag\_terminate\_inner\_thread
- int input\_to\_process
- pthread\_mutex\_t ProcessMutex
- pthread\_attr\_t attr
- struct sched param priority
- · int scheduler
- pthread\_t thread
- pthread\_cond\_t cond\_to\_process

#### 5.38.1 Constructor & Destructor Documentation


```
5.38.1.2 analysepath_t::~analysepath_t( ) [virtual]
5.38.2 Member Function Documentation
5.38.2.1 void analysepath_t::rt_process (
                    mha_wave_t * outer_input )
5.38.2.2 int analysepath_t::svc( ) [virtual]
5.38.3
      Member Data Documentation
5.38.3.1
        MHAProc_wave2wave_t analysepath_t::inner_process_wave2wave [private]
5.38.3.2
        MHAProc_wave2spec_t analysepath_t::inner_process_wave2spec [private]
5.38.3.3
        MHASignal::waveform_t analysepath_t::inner_input [private]
5.38.3.4 void* analysepath_t::libdata [private]
5.38.3.5
        mha_fifo_t<mha_real_t> analysepath_t::wave_fifo [private]
5.38.3.6
        mha_fifo_t<MHA_AC::acspace2matrix_t> analysepath_t::ac_fifo [private]
5.38.3.7
        MHA_AC::acspace2matrix_t analysepath_t::inner_ac_copy [private]
5.38.3.8
        MHA_AC::acspace2matrix_t analysepath_t::outer_ac_copy [private]
5.38.3.9
        algo_comm_t analysepath_t::outer_ac [private]
5.38.3.10 mha_domain_t analysepath_t::inner_out_domain [private]
5.38.3.11 MHA_Error analysepath_t::inner_error [private]
5.38.3.12 bool analysepath_t::has_inner_error [private]
5.38.3.13 bool analysepath_t::flag_terminate_inner_thread [private]
5.38.3.14 int analysepath_t::input_to_process [private]
5.38.3.15 pthread_mutex_t analysepath_t::ProcessMutex [private]
5.38.3.16
         pthread_attr_t analysepath_t::attr [private]
5.38.3.17
         struct sched_param analysepath_t::priority [private]
         int analysepath_t::scheduler [private]
5.38.3.18
5.38.3.19
         pthread_t analysepath_t::thread [private]
5.38.3.20
         pthread_cond_t analysepath_t::cond_to_process [private]
```

The documentation for this class was generated from the following file:

# · analysispath.cpp

# 5.39 analysispath\_if\_t Class Reference

Inheritance diagram for analysispath\_if\_t:

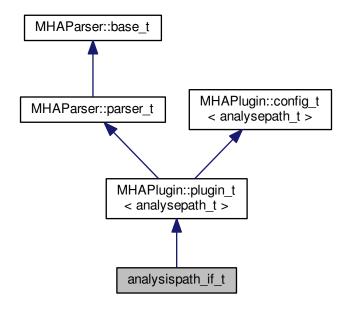

# **Public Member Functions**

- analysispath\_if\_t (algo\_comm\_t, std::string, std::string)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()
- ~analysispath\_if\_t ()

#### **Private Member Functions**

• void loadlib ()

#### **Private Attributes**

- MHAEvents::patchbay\_t< analysispath\_if\_t > patchbay
- MHAParser::string\_t libname
- MHAParser::int\_t fragsize
- MHAParser::int\_t fifolen
- MHAParser::int\_t priority
- MHAParser::vstring\_t vars
- plug\_t \* plug
- std::string chain
- std::string algo
- MHA\_AC::acspace2matrix\_t \* acspace\_template

**Additional Inherited Members** 

```
5.39.1 Constructor & Destructor Documentation
5.39.1.1 analysispath_if_t::analysispath_if_t (
                    algo_comm_t iac,
                    std::string th,
                    std::string al )
5.39.1.2 analysispath_if_t::~analysispath_if_t ( )
5.39.2 Member Function Documentation
5.39.2.1 mha_wave_t * analysispath_if_t::process (
                    mha wave t * s)
5.39.2.2 void analysispath_if_t::prepare (
                    mhaconfig_t & conf ) [virtual]
Implements MHAPlugin::plugin t < analysepath t > (p. 705).
5.39.2.3 void analysispath_if_t::release() [virtual]
Reimplemented from MHAPlugin::plugin_t< analysepath_t > (p. 706).
5.39.2.4 void analysispath if t::loadlib( ) [private]
5.39.3 Member Data Documentation
5.39.3.1
        MHAEvents::patchbay t < analysispath if t > analysispath_if_t::patchbay
         [private]
5.39.3.2 MHAParser::string_t analysispath_if_t::libname [private]
5.39.3.3 MHAParser::int t analysispath_if_t::fragsize [private]
5.39.3.4
        MHAParser::int tanalysispath_if_t::fifolen [private]
5.39.3.5 MHAParser::int tanalysispath if t::priority [private]
5.39.3.6 MHAParser::vstring t analysispath_if_t::vars [private]
5.39.3.7 plug_t* analysispath_if_t::plug [private]
5.39.3.8 std::string analysispath if t::chain [private]
5.39.3.9 std::string analysispath_if_t::algo [private]
5.39.3.10 MHA_AC::acspace2matrix_t* analysispath_if_t::acspace_template [private]
```

The documentation for this class was generated from the following file:

analysispath.cpp

# 5.40 AuditoryProfile::fmap\_t Class Reference

A class to store frequency dependent data (e.g., HTL and UCL).

Inherits map< mha\_real\_t, mha\_real\_t >.

#### **Public Member Functions**

- std::vector< mha\_real\_t > get\_frequencies () const Return configured frequencies.
- std::vector < mha\_real\_t > get\_values () const
   Return stored values corresponding to the frequencies.
- bool **isempty** () const

# 5.40.1 Detailed Description

A class to store frequency dependent data (e.g., HTL and UCL).

# 5.40.2 Member Function Documentation

5.40.2.1 std::vector < mha real t > AuditoryProfile::fmap t::get frequencies ( ) const

Return configured frequencies.

5.40.2.2 std::vector< mha\_real\_t > AuditoryProfile::fmap\_t::get\_values ( ) const

Return stored values corresponding to the frequencies.

5.40.2.3 bool AuditoryProfile::fmap\_t::isempty() const [inline]


The documentation for this class was generated from the following files:

- · auditory profile.h
- auditory\_profile.cpp

# 5.41 AuditoryProfile::parser\_t Class Reference

Class to make the auditory profile accessible through the parser interface.

Inheritance diagram for AuditoryProfile::parser\_t:

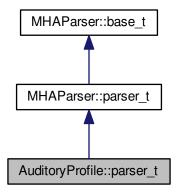

### **Classes**

- · class ear t
- class fmap\_t

### **Public Member Functions**

- parser\_t ()
- AuditoryProfile::profile\_t get\_current\_profile ()

# **Private Attributes**

- AuditoryProfile::parser\_t::ear\_t L
- AuditoryProfile::parser\_t::ear\_t R

# **Additional Inherited Members**

# 5.41.1 Detailed Description


Class to make the auditory profile accessible through the parser interface.

- 5.41.2 Constructor & Destructor Documentation
- 5.41.2.1 AuditoryProfile::parser\_t::parser\_t ( )
- 5.41.3 Member Function Documentation
- 5.41.3.1 AuditoryProfile::profile\_t AuditoryProfile::parser\_t::get\_current\_profile ( )
- 5.41.4 Member Data Documentation
- **5.41.4.1 AuditoryProfile::parser\_t::ear\_t AuditoryProfile::parser\_t::L** [private]
- **5.41.4.2 AuditoryProfile::parser\_t::ear\_t AuditoryProfile::parser\_t::R** [private]

The documentation for this class was generated from the following files:

- auditory\_profile.h
- auditory\_profile.cpp
- 5.42 AuditoryProfile::parser\_t::ear\_t Class Reference

Inheritance diagram for AuditoryProfile::parser\_t::ear\_t:

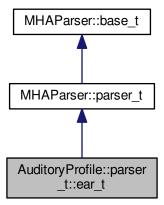

### **Public Member Functions**

- ear\_t ()
- AuditoryProfile::profile\_t::ear\_t get\_ear () const

#### **Private Attributes**

- AuditoryProfile::parser\_t::fmap\_t HTL
- AuditoryProfile::parser t::fmap t UCL


#### **Additional Inherited Members**

- 5.42.1 Constructor & Destructor Documentation
- 5.42.1.1 AuditoryProfile::parser\_t::ear\_t::ear\_t ( )
- 5.42.2 Member Function Documentation
- 5.42.2.1 AuditoryProfile::profile\_t::ear\_t AuditoryProfile::parser\_t::ear\_t::get\_ear() const
- 5.42.3 Member Data Documentation
- **5.42.3.1 AuditoryProfile::parser\_t::fmap\_t** AuditoryProfile::parser\_t::ear\_t::HTL [private]
- **5.42.3.2** AuditoryProfile::parser\_t::fmap\_t AuditoryProfile::parser\_t::ear\_t::UCL [private]

The documentation for this class was generated from the following files:

- · auditory\_profile.h
- auditory\_profile.cpp
- 5.43 AuditoryProfile::parser\_t::fmap\_t Class Reference

Inheritance diagram for AuditoryProfile::parser\_t::fmap\_t:

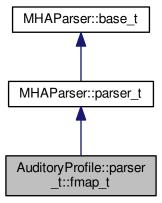

### **Public Member Functions**

- fmap\_t (const std::string &name, const std::string &help)
- AuditoryProfile::fmap\_t get\_fmap () const

#### **Private Member Functions**

• void validate ()

#### **Private Attributes**

- MHAEvents::patchbay\_t< AuditoryProfile::parser\_t::fmap\_t > patchbay
- MHAParser::vfloat\_t f
- MHAParser::vfloat t value
- std::string name\_

#### **Additional Inherited Members**

```
5.43.1 Constructor & Destructor Documentation
```

- 5.43.2 Member Function Documentation
- 5.43.2.1 AuditoryProfile::fmap\_t AuditoryProfile::parser\_t::fmap\_t::get\_fmap( ) const
- **5.43.2.2 void AuditoryProfile::parser\_t::fmap\_t::validate( )** [private]
- 5.43.3 Member Data Documentation
- 5.43.3.1 MHAEvents::patchbay\_t<AuditoryProfile::parser\_t::fmap\_t>
  AuditoryProfile::parser\_t::fmap\_t::patchbay [private]
- **5.43.3.2** MHAParser::vfloat\_t AuditoryProfile::parser\_t::fmap\_t::f [private]
- **5.43.3.3 MHAParser::vfloat\_t** AuditoryProfile::parser\_t::fmap\_t::value [private]
- **5.43.3.4 std::string AuditoryProfile::parser\_t::fmap\_t::name** [private]

The documentation for this class was generated from the following files:

- auditory\_profile.h
- auditory\_profile.cpp

# 5.44 AuditoryProfile::profile\_t Class Reference

The Auditory Profile class.

#### **Classes**

class ear\_t

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.

#### **Public Member Functions**

• AuditoryProfile::profile\_t::ear\_t get\_ear (unsigned int channel) const Return ear information of channel number.

#### **Public Attributes**

- AuditoryProfile::profile\_t::ear\_t L
   Left ear data.
- AuditoryProfile::profile\_t::ear\_t R
   Right ear data.

# 5.44.1 Detailed Description

The Auditory Profile class.

See definition of auditory profile

**Todo** Give more documentation; implement all parts of the auditory profile.

Currently only the audiogram data is stored.

### 5.44.2 Member Function Documentation

Return ear information of channel number.

5.44.3 Member Data Documentation

5.44.3.1 AuditoryProfile::profile\_t::ear\_t AuditoryProfile::profile\_t::L

Left ear data.

5.44.3.2 AuditoryProfile::profile\_t::ear\_t AuditoryProfile::profile\_t::R

Right ear data.

The documentation for this class was generated from the following file:

auditory\_profile.h

5.45 AuditoryProfile::profile\_t::ear\_t Class Reference

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.

**Public Member Functions** 

void convert\_empty2normal ()

**Public Attributes** 

- AuditoryProfile::fmap\_t HTL
- AuditoryProfile::fmap\_t UCL
- 5.45.1 Detailed Description

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.


- 5.45.2 Member Function Documentation
- 5.45.2.1 void AuditoryProfile::profile\_t::ear\_t::convert\_empty2normal()
- 5.45.3 Member Data Documentation
- 5.45.3.1 AuditoryProfile::fmap\_t AuditoryProfile::profile\_t::ear\_t::HTL
- 5.45.3.2 AuditoryProfile::fmap\_t AuditoryProfile::profile\_t::ear\_t::UCL

The documentation for this class was generated from the following files:

- auditory\_profile.h
- auditory\_profile.cpp

# 5.46 bbcalib\_interface\_t Class Reference

Inheritance diagram for bbcalib\_interface\_t:

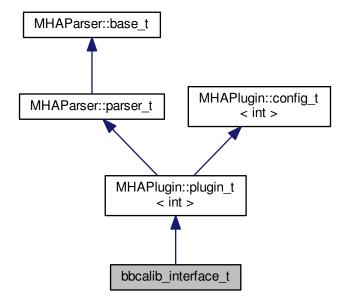

#### **Public Member Functions**

- bbcalib\_interface\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- ~bbcalib\_interface\_t ()
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

### **Private Attributes**

- calibrator\_t calib\_in
- calibrator\_t calib\_out
- MHAParser::mhapluginloader\_t plugloader

**Additional Inherited Members** 

```
5.46.1 Constructor & Destructor Documentation
5.46.1.1 bbcalib_interface_t::bbcalib_interface_t (
                     const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & )
5.46.1.2 bbcalib interface t::~bbcalib interface t()
5.46.2 Member Function Documentation
5.46.2.1 mha_wave_t * bbcalib_interface_t::process (
                     mha wave t * s)
5.46.2.2 void bbcalib_interface_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t< int > (p. 705).
5.46.2.3 void bbcalib_interface_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< int > (p. 706).
5.46.3 Member Data Documentation
5.46.3.1 calibrator_t bbcalib_interface_t::calib_in [private]
5.46.3.2 calibrator t bbcalib_interface_t::calib_out [private]
5.46.3.3 MHAParser::mhapluginloader t bbcalib_interface_t::plugloader [private]
The documentation for this class was generated from the following file:

    transducers.cpp

5.47 calibrator_runtime_layer_t Class Reference
```

• calibrator\_runtime\_layer\_t (bool is\_input, const mhaconfig\_t &tf, calibrator\_

mha\_real\_t process (mha\_wave\_t \*\*)

variables\_t &vars)

**Public Member Functions** 

#### **Static Private Member Functions**

- static unsigned int **firfirlen** (const std::vector< std::vector< float >> &)
- static unsigned int **firfir2fftlen** (unsigned int, const std::vector< std::vector< float >> &)

#### **Private Attributes**

- MHAFilter::fftfilter t fir
- MHASignal::quantizer\_t quant
- MHASignal::waveform\_t gain
- softclipper\_t softclip
- bool b\_is\_input
- · bool b use fir
- bool b\_use\_clipping
- MHASignal::loop\_wavefragment\_t speechnoise
- MHASignal::loop wavefragment t::playback mode t pmode
- 5.47.1 Constructor & Destructor Documentation
- 5.47.2 Member Function Documentation
- 5.47.2.2 unsigned int calibrator\_runtime\_layer\_t::firfirlen (
  - const std::vector < std::vector < float > > & fir ) [static], [private]
- 5.47.2.3 unsigned int calibrator\_runtime\_layer\_t::firfir2fftlen ( unsigned int *fragsize*,

```
const std::vector < std::vector < float > > & fir ) [static], [private]
```

- 5.47.3 Member Data Documentation
- **5.47.3.1 MHAFilter::fftfilter\_t** calibrator\_runtime\_layer\_t::fir [private]
- **5.47.3.2** MHASignal::quantizer\_t calibrator\_runtime\_layer\_t::quant [private]
- **5.47.3.3** MHASignal::waveform\_t calibrator\_runtime\_layer\_t::gain [private]


- **5.47.3.4 softclipper\_t calibrator\_runtime\_layer\_t::softclip** [private]
- **5.47.3.5** bool calibrator\_runtime\_layer\_t::b\_is\_input [private]
- **5.47.3.6** bool calibrator\_runtime\_layer\_t::b\_use\_fir [private]
- **5.47.3.7 bool calibrator\_runtime\_layer\_t::b\_use\_clipping** [private]
- **5.47.3.8** MHASignal::loop\_wavefragment\_t calibrator\_runtime\_layer\_t::speechnoise [private]
- 5.47.3.9 MHASignal::loop\_wavefragment\_t::playback\_mode\_t calibrator\_runtime\_layer\_t 
  ::pmode [private]

The documentation for this class was generated from the following file:

# transducers.cpp

# 5.48 calibrator\_t Class Reference

Inheritance diagram for calibrator\_t:

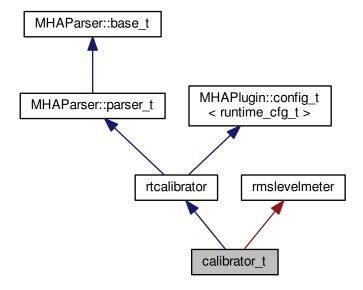

### **Public Member Functions**

```
    calibrator_t (algo_comm_t, bool is_input)
```

- void prepare (mhaconfig\_t &tf)
- void release ()
- mha\_wave\_t \* process (mha\_wave\_t \*s)

### **Private Member Functions**

- void update ()
- void update\_tau\_level ()
- void read\_levels ()

#### **Private Attributes**

- bool b\_is\_input
- MHAEvents::patchbay\_t< calibrator\_t > patchbay
- calibrator\_variables\_t vars
- bool prepared

## **Additional Inherited Members**

```
5.48.1 Constructor & Destructor Documentation
```

5.48.2 Member Function Documentation

Implements MHAPlugin::plugin\_t< runtime\_cfg\_t > (p. 705).

**5.48.2.2 void calibrator\_t::release()** [inline], [virtual]

Reimplemented from  $MHAPlugin::plugin_t < runtime_cfg_t > (p. 706)$ .

The documentation for this class was generated from the following file:

transducers.cpp

5.49 calibrator\_variables\_t Class Reference

**Public Member Functions** 

calibrator\_variables\_t (bool is\_input, MHAParser::parser\_t &parent)

#### **Public Attributes**

- MHAParser::vfloat\_t peaklevel
- MHAParser::mfloat t fir
- MHAParser::int t nbits
- MHAParser::float\_t tau\_level
- MHAParser::kw\_t spnoise\_mode
- MHAParser::vint\_t spnoise\_channels
- MHAParser::float\_t spnoise\_level
- MHAParser::vfloat mon t rmslevel
- MHAParser::parser\_t spnoise\_parser
- MHAParser::float\_mon\_t srate
- MHAParser::int\_mon\_t fragsize
- MHAParser::int\_mon\_t num\_channels
- MHAParser::parser\_t config\_parser
- softclipper\_variables\_t softclip
- MHAParser::bool\_t do\_clipping

```
5.49.1 Constructor & Destructor Documentation
5.49.1.1 calibrator variables t::calibrator variables t (
                     bool is input,
                      MHAParser::parser t & parent )
5.49.2 Member Data Documentation
5.49.2.1
         MHAParser::vfloat_t calibrator_variables_t::peaklevel
5.49.2.2
         MHAParser::mfloat t calibrator_variables_t::fir
         MHAParser::int t calibrator_variables_t::nbits
5.49.2.3
         MHAParser::float t calibrator variables t::tau level
         MHAParser::kw_t calibrator_variables_t::spnoise_mode
5.49.2.5
5.49.2.6
         MHAParser::vint t calibrator_variables_t::spnoise_channels
5.49.2.7
         MHAParser::float t calibrator_variables_t::spnoise_level
5.49.2.8
         MHAParser::vfloat mon t calibrator_variables_t::rmslevel
         MHAParser::parser t calibrator variables t::spnoise parser
5.49.2.10 MHAParser::float mon t calibrator variables t::srate
5.49.2.11
         MHAParser::int mon t calibrator variables t::fragsize
5.49.2.12 MHAParser::int mon t calibrator_variables_t::num_channels
5.49.2.13 MHAParser::parser_t calibrator_variables_t::config_parser
5.49.2.14 softclipper_variables_t calibrator_variables_t::softclip
5.49.2.15 MHAParser::bool t calibrator variables t::do clipping
```

The documentation for this class was generated from the following file:

### transducers.cpp

### 5.50 cfg\_t Class Reference

#### **Public Member Functions**

- cfg\_t (unsigned int, unsigned int)
- cfg\_t (mhaconfig\_t chcfg, mha\_real\_t newlev, bool replace, mha\_real\_t len)
- void process (mha\_wave\_t \*)
- void process (mha\_spec\_t \*)
- cfg\_t (mha\_real\_t tau\_attack, mha\_real\_t tau\_decay, unsigned int nch, mha\_real\_
   t start\_limit, mha\_real\_t slope\_db, mha\_real\_t fs)

#### **Public Attributes**

- unsigned int channel
- mha\_real\_t start\_lin
- mha\_real\_t alpha
- MHAFilter::o1flt\_lowpass\_t attack
- MHAFilter::o1flt maxtrack t decay

### **Private Attributes**

- mha\_real\_t gain\_wave\_
- mha\_real\_t gain\_spec\_
- bool replace
- bool use\_frozen\_
- MHASignal::waveform\_t frozen\_noise\_
- unsigned int pos

```
5.50.1 Constructor & Destructor Documentation
```

mha\_real\_t fs )

```
5.50.2 Member Function Documentation
```


```
5.50.2.1 void cfg_t::process (
                    mha_wave_t * s ) [inline]
5.50.2.2 void cfg_t::process (
                    mha_spec_t * s ) [inline]
5.50.3 Member Data Documentation
5.50.3.1 unsigned int cfg_t::channel
5.50.3.2 mha_real_t cfg_t::gain_wave_ [private]
5.50.3.3 mha_real_t cfg_t::gain_spec_ [private]
5.50.3.4 bool cfg_t::replace_ [private]
5.50.3.5 bool cfg_t::use_frozen_ [private]
5.50.3.6
        MHASignal::waveform_t cfg_t::frozen_noise_ [private]
5.50.3.7 unsigned int cfg_t::pos [private]
5.50.3.8 mha_real_t cfg_t::start_lin
5.50.3.9 mha_real_t cfg_t::alpha
5.50.3.10 MHAFilter::o1flt_lowpass_t cfg_t::attack
5.50.3.11 MHAFilter::o1flt maxtrack t cfg_t::decay
```

The documentation for this class was generated from the following files:

- example6.cpp
- noise.cpp
- · softclip.cpp

# 5.51 coherence::cohflt\_if\_t Class Reference

Inheritance diagram for coherence::cohflt\_if\_t:

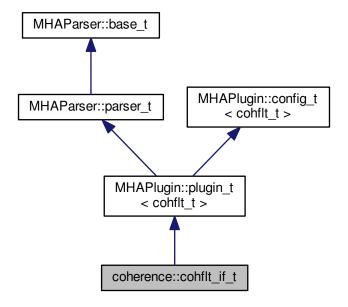

#### **Public Member Functions**

- cohflt\_if\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- void prepare (mhaconfig\_t &)
- void release ()
- mha\_spec\_t \* process (mha\_spec\_t \*)

### **Private Member Functions**

• void update ()

### **Private Attributes**

- MHAEvents::patchbay\_t< cohflt\_if\_t > patchbay
- vars\_t vars
- · const std::string algo

```
Additional Inherited Members
```


```
5.51.1 Constructor & Destructor Documentation
5.51.1.1 coherence::cohflt_if_t::cohflt_if_t (
                     const algo_comm_t & ac,
                     const std::string & th,
                     const std::string & al )
5.51.2 Member Function Documentation
5.51.2.1 void coherence::cohflt if t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t< cohflt_t > (p. 705).
5.51.2.2 void coherence::cohflt_if_t::release() [virtual]
Reimplemented from MHAPlugin::plugin_t< cohflt_t > (p. 706).
5.51.2.3 mha_spec_t * coherence::cohflt_if_t::process (
                     mha_spec_t * s )
5.51.2.4 void coherence::cohflt_if_t::update() [private]
5.51.3 Member Data Documentation
5.51.3.1 MHAEvents::patchbay t<cohflt if t> coherence::cohflt_if_t::patchbay [private]
5.51.3.2 vars t coherence::cohflt if t::vars [private]
5.51.3.3 const std::string coherence::cohflt_if_t::algo [private]
```

The documentation for this class was generated from the following file:

· coherence.cpp

# 5.52 coherence::cohflt\_t Class Reference

Inheritance diagram for coherence::cohflt\_t:

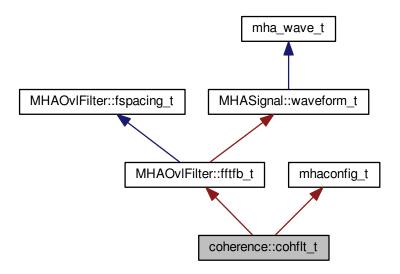

### **Public Member Functions**

- cohflt\_t (vars\_t &v, const mhaconfig\_t &icf, algo\_comm\_t iac, const std::string &name)
- mha spec t \* process (mha spec t \*)
- void insert ()

#### **Private Attributes**

- unsigned int **nbands**
- bool avg\_ipd
- mha\_complex\_t cg
- float g
- float c\_scale
- float **c\_min**
- MHASignal::waveform\_t alpha
- · float limit
- MHAFilter::o1flt\_lowpass\_t lp1r
- MHAFilter::o1flt\_lowpass\_t lp1i
- MHA\_AC::spectrum\_t coh\_c
- MHA\_AC::waveform\_t coh\_rlp
- MHASignal::waveform\_t gain
- MHASignal::delay\_wave\_t gain\_delay

- MHASignal::spectrum\_t s\_out
- bool binvert
- MHAFilter::o1flt\_lowpass\_t lp1ltg
- bool b\_ltg
- std::vector< float > staticgain

### **Additional Inherited Members**

```
5.52.1 Constructor & Destructor Documentation
5.52.1.1 coherence::cohflt_t::cohflt_t (
                     vars t& v,
                     const mhaconfig t & icf,
                     algo comm t iac,
                     const std::string & name )
5.52.2 Member Function Documentation
5.52.2.1 mha spec t * coherence::cohflt_t::process (
                     mha spec t * s)
5.52.2.2 void coherence::cohflt t::insert ( )
5.52.3 Member Data Documentation
5.52.3.1 unsigned int coherence::cohflt_t::nbands [private]
5.52.3.2 bool coherence::cohflt_t::avg_ipd [private]
5.52.3.3 mha_complex_t coherence::cohflt_t::cg [private]
5.52.3.4 float coherence::cohflt_t::g [private]
5.52.3.5 float coherence::cohflt_t::c_scale [private]
5.52.3.6 float coherence::cohflt_t::c_min [private]
5.52.3.7
        MHASignal::waveform_t coherence::cohflt_t::alpha [private]
5.52.3.8 float coherence::cohflt_t::limit [private]
```

**5.52.3.9** MHAFilter::o1flt\_lowpass\_t coherence::cohflt\_t::lp1r [private]


```
5.52.3.10 MHAFilter::o1flt_lowpass_t coherence::cohflt_t::lp1i [private]
5.52.3.11 MHA_AC::spectrum_t coherence::cohflt_t::coh_c [private]
5.52.3.12 MHA_AC::waveform_t coherence::cohflt_t::coh_rlp [private]
5.52.3.13 MHASignal::waveform_t coherence::cohflt_t::gain [private]
5.52.3.14 MHASignal::delay_wave_t coherence::cohflt_t::gain_delay [private]
5.52.3.15 MHASignal::spectrum_t coherence::cohflt_t::s_out [private]
5.52.3.16 bool coherence::cohflt_t::blnvert [private]
5.52.3.17 MHAFilter::o1flt_lowpass_t coherence::cohflt_t::lp1ltg [private]
5.52.3.18 bool coherence::cohflt_t::b_ltg [private]
5.52.3.19 std::vector<float> coherence::cohflt_t::staticgain [private]
```

The documentation for this class was generated from the following file:

# coherence.cpp

# 5.53 coherence::vars\_t Class Reference

Inheritance diagram for coherence::vars\_t:

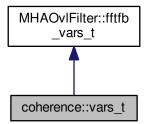

#### **Public Member Functions**

# vars\_t (MHAParser::parser\_t \*)

#### **Public Attributes**

MHAParser::kw\_t tau\_unitMHAParser::vfloat t tau

MHAParser::vfloat\_t alpha

MHAParser::float\_t limit

MHAParser::vfloat\_t mapping

MHAParser::kw\_t average

MHAParser::bool\_t invert

MHAParser::bool\_t ltgcomp

MHAParser::vfloat\_t ltgtau

MHAParser::vfloat\_t staticgain

MHAParser::int\_t delay

### 5.53.1 Constructor & Destructor Documentation

```
5.53.1.1 coherence::vars_t::vars_t (

MHAParser::parser t * p )
```

#### 5.53.2 Member Data Documentation

```
5.53.2.1 MHAParser::kw_t coherence::vars_t::tau_unit
```

5.53.2.2 MHAParser::vfloat\_t coherence::vars\_t::tau

5.53.2.3 MHAParser::vfloat\_t coherence::vars\_t::alpha

5.53.2.4 MHAParser::float\_t coherence::vars\_t::limit

5.53.2.5 MHAParser::vfloat t coherence::vars\_t::mapping

5.53.2.6 MHAParser::kw\_t coherence::vars\_t::average

5.53.2.7 MHAParser::bool\_t coherence::vars\_t::invert

5.53.2.8 MHAParser::bool\_t coherence::vars\_t::ltgcomp

5.53.2.9 MHAParser::vfloat\_t coherence::vars\_t::ltgtau

5.53.2.10 MHAParser::vfloat\_t coherence::vars\_t::staticgain


5.53.2.11 MHAParser::int\_t coherence::vars\_t::delay

The documentation for this class was generated from the following file:

# · coherence.cpp

# 5.54 combc\_if\_t Class Reference

Inheritance diagram for combc\_if\_t:

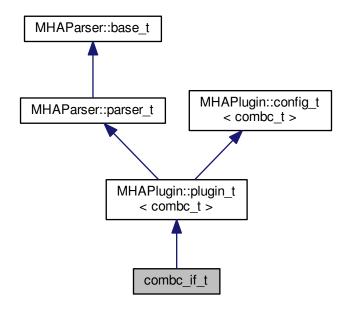

#### **Public Member Functions**

- combc\_if\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- void prepare (mhaconfig\_t &)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*)

# **Private Attributes**

- MHAParser::int\_t outchannels
- MHAParser::bool\_t interleaved
- MHAParser::string\_t channel\_gain\_name
- MHAParser::string\_t element\_gain\_name

**Additional Inherited Members** 

```
5.54.1 Constructor & Destructor Documentation
5.54.1.1 combc_if_t::combc_if_t (
                    const algo comm t & iac,
                    const std::string & ,
                    const std::string & )
5.54.2 Member Function Documentation
5.54.2.1 void combc_if_t::prepare (
                    mhaconfig t&chcfg) [virtual]
Implements MHAPlugin::plugin_t < combc_t > (p. 705).
5.54.2.2 mha_wave_t * combc_if_t::process (
                    mha wave t * s)
5.54.2.3 mha_spec_t * combc_if_t::process (
                    mha\_spec\_t * s)
5.54.3 Member Data Documentation
5.54.3.1 MHAParser::int tcombc_if_t::outchannels [private]
5.54.3.2 MHAParser::bool_t combc_if_t::interleaved [private]
5.54.3.3 MHAParser::string t combc_if_t::channel_gain_name [private]
        MHAParser::string t combc if t::element gain name [private]
```

The documentation for this class was generated from the following file:

combinechannels.cpp

5.55 combc\_t Class Reference

**Public Member Functions** 

- combc\_t (algo\_comm\_t ac, mhaconfig\_t cfg\_input, mhaconfig\_t cfg\_output, std ::vector < float > channel\_gains, const std::string &element\_gain\_name, bool interleaved)
- mha\_wave\_t \* process (mha\_wave\_t \*s)
- mha\_spec\_t \* process (mha\_spec\_t \*s)

algo\_comm\_t ac\_

#### **Private Attributes**

```
    bool interleaved

    unsigned int nbands

    MHASignal::waveform_t w_out

    MHASignal::spectrum t s out

   std::vector< mha_real_t > channel_gains_
   std::string element_gain_name_
5.55.1 Constructor & Destructor Documentation
5.55.1.1 combc_t::combc_t (
                    algo_comm_t ac,
                    mhaconfig_t cfg_input,
                    mhaconfig t cfg_output,
                    std::vector< float > channel_gains,
                    const std::string & element_gain_name,
                    bool interleaved )
5.55.2 Member Function Documentation
5.55.2.1 mha_wave_t * combc_t::process (
                    mha_wave_t * s )
5.55.2.2 mha_spec_t * combc_t::process (
                    mha_spec_t * s )
5.55.3 Member Data Documentation
5.55.3.1 algo_comm_t combc_t::ac_ [private]
5.55.3.2 bool combc_t::interleaved_ [private]
5.55.3.3 unsigned int combc_t::nbands [private]
5.55.3.4
        MHASignal::waveform_t combc_t::w_out [private]
5.55.3.5
        MHASignal::spectrum_t combc_t::s_out [private]
5.55.3.6 std::vector<mha_real_t> combc_t::channel_gains_ [private]
        std::string combc_t::element_gain_name_ [private]
```

The documentation for this class was generated from the following file:

# combinechannels.cpp

# 5.56 comm\_var\_t Struct Reference

Algorithm communication variable structure.

## **Public Attributes**

unsigned int data\_type

Type of data.

unsigned int num entries

Number of entries.

· unsigned int stride

length of one row (C interpretation) or of one column (Fortran interpretation)

void \* data

Pointer to variable data.

# 5.56.1 Detailed Description

Algorithm communication variable structure.

Algorithm communication variables (AC variables) are objects of this type. The member data is a pointer to the variable 'data'. This pointer has to be valid for the lifetime of this AC variable. The member 'data\_type' can be one of the predefined types or any user defined type. The member 'num\_entries' describes the number of elements of this base type stored at the pointer address.

```
An AC variable can be registered with the \ref algo_comm_t::insert_var "insert_var" function.
```

# 5.56.2 Member Data Documentation

5.56.2.1 comm\_var\_t::data\_type

Type of data.

This can be one of the predefined types

- MHA AC CHAR
- · MHA AC INT
- MHA AC MHAREAL
- · MHA AC FLOAT
- · MHA AC DOUBLE
- MHA AC MHACOMPLEX
- MHA AC VEC FLOAT or any user defined type with a value greater than
- MHA\_AC\_USER

5.56.2.2 comm\_var\_t::num\_entries

Number of entries.

5.56.2.3 comm\_var\_t::stride

length of one row (C interpretation) or of one column (Fortran interpretation)

5.56.2.4 comm\_var\_t::data


Pointer to variable data.

The documentation for this struct was generated from the following files:

- · mha.h
- mha\_algo\_comm.cpp

# 5.57 cpuload\_t Class Reference

Inheritance diagram for cpuload\_t:

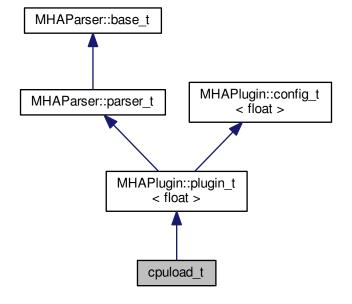

#### **Public Member Functions**

```
cpuload_t (algo_comm_t, const char *, const char *)
mha_spec_t * process (mha_spec_t *)
mha_wave_t * process (mha_wave_t *)
void prepare (mhaconfig_t &)
```

#### **Private Member Functions**

```
    void compute_something ()
```

• void compute\_something\_else ()

#### **Private Attributes**

```
    MHAParser::float_t factor
```

- MHAParser::bool\_t use\_sine
- · float phase
- volatile float result
- std::vector< float > table

# **Additional Inherited Members**

```
5.57.1 Constructor & Destructor Documentation
```

5.57.2 Member Function Documentation

Implements MHAPlugin::plugin\_t< float > (p. 705).

```
5.57.2.4 void cpuload_t::compute_something() [inline], [private]
5.57.2.5 void cpuload_t::compute_something_else() [inline], [private]
5.57.3 Member Data Documentation
5.57.3.1 MHAParser::float_t cpuload_t::factor [private]
5.57.3.2 MHAParser::bool_t cpuload_t::use_sine [private]
5.57.3.3 float cpuload_t::phase [private]
```

5.57.3.4 volatile float cpuload\_t::result [private]


**5.57.3.5** std::vector<float> cpuload\_t::table [private]

The documentation for this class was generated from the following file:

# · cpuload.cpp

# 5.58 db\_if\_t Class Reference

Inheritance diagram for db\_if\_t:

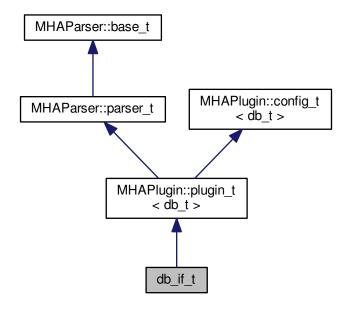

#### **Public Member Functions**

```
    db_if_t (algo_comm_t, std::string, std::string)
```

- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig t &)
- void release ()
- ~db\_if\_t ()

## **Private Attributes**

- MHAEvents::patchbay\_t< db\_if\_t > patchbay
- MHAParser::int\_t fragsize
- MHAParser::mhapluginloader\_t plugloader
- std::string chain
- std::string algo
- bool bypass

#### **Additional Inherited Members**

```
5.58.1 Constructor & Destructor Documentation
```

```
5.58.1.2 db_if_t::\simdb_if_t ( )
```

5.58.2 Member Function Documentation

```
5.58.2.1 mha_wave_t * db_if_t::process (
mha_wave_t * s )
```

Implements MHAPlugin::plugin\_t <  $db_t > (p. 705)$ .

```
5.58.2.3 void db_if_t::release( ) [virtual]
```

Reimplemented from **MHAPlugin::plugin\_t** < **db\_t** > (p. 706).

#### 5.58.3 Member Data Documentation

```
5.58.3.1 MHAEvents::patchbay_t < db_if_t > db_if_t::patchbay [private]
```

```
5.58.3.2 MHAParser::int_t db_if_t::fragsize [private]
```

**5.58.3.3** MHAParser::mhapluginloader\_t db\_if\_t::plugloader [private]

```
5.58.3.4 std::string db_if_t::chain [private]
```

**5.58.3.5** std::string db\_if\_t::algo [private]


**5.58.3.6** booldb\_if\_t::bypass [private]

The documentation for this class was generated from the following file:

# · db.cpp

# 5.59 db\_t Class Reference

Inheritance diagram for db\_t:

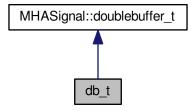

#### **Public Member Functions**

- **db\_t** (unsigned int outer\_fragsize, unsigned int inner\_fragsize, unsigned int nch\_in, unsigned int nch\_out, **MHAParser::mhapluginloader\_t** &plug)
- mha\_wave\_t \* inner\_process (mha\_wave\_t \*)

#### **Private Attributes**

MHAParser::mhapluginloader\_t & plugloader

**Additional Inherited Members** 

```
5.59.1 Constructor & Destructor Documentation
```

5.59.2 Member Function Documentation

```
5.59.2.1 mha\_wave\_t * db\_t::inner\_process ( mha\_wave\_t * s )  [virtual]
```

Implements MHASignal::doublebuffer\_t (p. 746).

5.59.3 Member Data Documentation


**5.59.3.1 MHAParser::mhapluginloader\_t&db\_t::plugloader** [private]

The documentation for this class was generated from the following file:

· db.cpp

# 5.60 dc::dc\_if\_t Class Reference

Inheritance diagram for dc::dc\_if\_t:

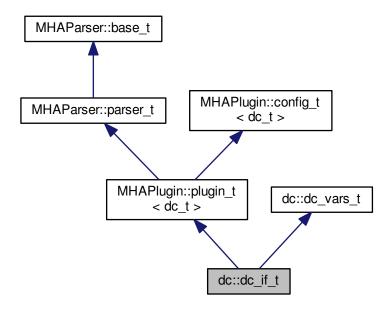

#### **Public Member Functions**

- dc\_if\_t (const algo\_comm\_t &ac\_, const std::string &th\_, const std::string &al\_)
- void prepare (mhaconfig\_t &tf)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*)

# **Private Member Functions**

- void update\_monitors ()
  - Called from within the processing routines: updates the monitor variables.
- void update ()

Called by MHA configuration change event mechanism: creates new runtime configuration.

#### **Private Attributes**

- std::string algo
- wideband\_inhib\_vars\_t wbinhib
- MHAEvents::patchbay\_t< dc\_if\_t > patchbay

```
Additional Inherited Members
```


```
5.60.1 Constructor & Destructor Documentation
5.60.1.1 dc::dc_if_t::dc_if_t (
                     const algo_comm_t & ac_,
                     const std::string & th_,
                     const std::string & al )
5.60.2 Member Function Documentation
5.60.2.1 void dc::dc_if_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < dc \ t > (p. 705).
5.60.2.2 mha_wave_t * dc::dc_if_t::process (
                     mha_wave_t * s_in )
5.60.2.3 mha_spec_t * dc::dc_if_t::process (
                     mha_spec_t * s_in )
5.60.2.4 void dc::dc_if_t::update_monitors() [private]
Called from within the processing routines: updates the monitor variables.
5.60.2.5 void dc::dc if t::update() [private]
Called by MHA configuration change event mechanism: creates new runtime configuration.
5.60.3 Member Data Documentation
5.60.3.1 std::string dc::dc_if_t::algo [private]
5.60.3.2
        wideband inhib vars t dc::dc_if_t::wbinhib [private]
        MHAEvents::patchbay_t<dc_if_t> dc::dc_if_t::patchbay [private]
```

The documentation for this class was generated from the following file:

dc.cpp

# 5.61 dc::dc t Class Reference

# Inheritance diagram for dc::dc\_t:

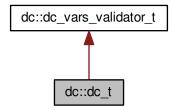

### **Public Member Functions**

- dc\_t (dc\_vars\_t vars, mha\_real\_t filter\_rate, unsigned int nch, algo\_comm\_t ac, mha
   \_domain\_t domain, unsigned int fftlen, std::string algo)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*, wb\_inhib\_cfg\_t \*wbinhib)
- void explicit\_insert ()
- unsigned get\_nbands () const

Number of frequency bands accessor.

- const MHASignal::waveform t & get level in db () const
- const MHASignal::waveform\_t & get\_level\_in\_db\_adjusted () const

# **Private Attributes**

- std::vector< MHATableLookup::linear\_table\_t > gt
- MHAFilter::o1flt lowpass t rmslevel
- MHAFilter::o1flt\_lowpass\_t attack
- MHAFilter::o1flt\_maxtrack\_t decay
- bool powersum
- bool bypass
- unsigned int naudiochannels
- unsigned int nbands
- MHA\_AC::waveform\_t level\_in\_db
- MHA\_AC::waveform\_t level\_in\_db\_adjusted
- MHA\_AC::waveform\_t inhib\_gain
- MHASignal::waveform\_t max\_level\_difference
- unsigned int k\_nyquist

#### **Additional Inherited Members**

```
5.61.1 Constructor & Destructor Documentation
5.61.1.1 dc::dc_t::dc_t (
                    dc vars t vars,
                    mha real t filter_rate,
                    unsigned int nch,
                    algo comm t ac,
                    mha_domain_t domain,
                    unsigned int fftlen,
                    std::string algo )
5.61.2 Member Function Documentation
5.61.2.1 mha wave t * dc::dc_t::process (
                    mha wave t * s)
5.61.2.2 mha_spec_t * dc::dc_t::process (
                    mha spec t * s,
                    wb_inhib_cfg_t * wbinhib )
5.61.2.3 void dc::dc_t::explicit_insert ( )
5.61.2.4 unsigned dc::dc_t::get_nbands ( ) const [inline]
Number of frequency bands accessor.
5.61.2.5 const MHASignal::waveform_t& dc::dc_t::get_level_in_db( ) const [inline]
5.61.2.6 const MHASignal::waveform_t& dc::dc_t::get_level_in_db_adjusted ( ) const
         [inline]
5.61.3 Member Data Documentation
5.61.3.1 std::vector<MHATableLookup::linear_table_t> dc::dc_t::gt [private]
5.61.3.2
        MHAFilter::o1flt lowpass t dc::dc_t::rmslevel [private]
5.61.3.3 MHAFilter::o1flt_lowpass_t dc::dc_t::attack [private]
5.61.3.4 MHAFilter::o1flt_maxtrack_t dc::dc_t::decay [private]
5.61.3.5 booldc::dc_t::powersum [private]
```

```
5.61.3.6 bool dc::dc_t::bypass [private]

5.61.3.7 unsigned int dc::dc_t::naudiochannels [private]

5.61.3.8 unsigned int dc::dc_t::nbands [private]

5.61.3.9 MHA_AC::waveform_t dc::dc_t::level_in_db [private]

5.61.3.10 MHA_AC::waveform_t dc::dc_t::level_in_db_adjusted [private]

5.61.3.11 MHA_AC::waveform_t dc::dc_t::inhib_gain [private]

5.61.3.12 MHASignal::waveform_t dc::dc_t::max_level_difference [private]


5.61.3.13 unsigned int dc::dc_t::k_nyquist [private]
```

The documentation for this class was generated from the following file:

# · dc.cpp

5.62 dc::dc\_vars\_t Class Reference

Inheritance diagram for dc::dc\_vars\_t:

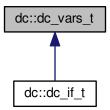

**Public Member Functions** 

dc\_vars\_t (MHAParser::parser\_t &)

#### **Public Attributes**

- MHAParser::bool t powersum
- MHAParser::mfloat\_t gtdata
- MHAParser::vfloat t gtmin
- MHAParser::vfloat t gtstep
- MHAParser::vfloat\_t taurmslevel
- MHAParser::vfloat t tauattack
- MHAParser::vfloat\_t taudecay
- MHAParser::string\_t filterbank
- std::string cf\_name
- std::string ef\_name
- std::string bw name
- MHAParser::string t chname
- MHAParser::bool\_t bypass
- MHAParser::string\_t clientid
- MHAParser::string\_t gainrule
- MHAParser::string t preset
- MHAParser::int mon t modified
- MHAParser::mfloat\_t max\_level\_difference
- MHAParser::vfloat\_mon\_t input\_level
- MHAParser::vfloat\_mon\_t filtered\_level
- MHAParser::vfloat\_mon\_t center\_frequencies
- MHAParser::vfloat\_mon\_t edge\_frequencies
- MHAParser::vfloat mon t band weights
- · MHAParser::bool tuse wbinhib
- 5.62.1 Constructor & Destructor Documentation
- 5.62.1.1 dc::dc\_vars\_t::dc\_vars\_t (

  MHAParser::parser\_t & p )
- 5.62.2 Member Data Documentation
- 5.62.2.1 MHAParser::bool\_t dc::dc\_vars\_t::powersum
- 5.62.2.2 MHAParser::mfloat\_t dc::dc\_vars\_t::gtdata
- 5.62.2.3 MHAParser::vfloat\_t dc::dc\_vars\_t::gtmin
- 5.62.2.4 MHAParser::vfloat\_t dc::dc\_vars\_t::gtstep
- 5.62.2.5 MHAParser::vfloat t dc::dc vars t::taurmslevel


5.62.2.6	MHAParser::vfloat_t dc::dc_vars_t::tauattack
5.62.2.7	MHAParser::vfloat_t dc::dc_vars_t::taudecay
5.62.2.8	MHAParser::string_t dc::dc_vars_t::filterbank
5.62.2.9	std::string dc::dc_vars_t::cf_name
5.62.2.10	std::string dc::dc_vars_t::ef_name
5.62.2.11	std::string dc::dc_vars_t::bw_name
5.62.2.12	MHAParser::string_t dc::dc_vars_t::chname
5.62.2.13	MHAParser::bool_t dc::dc_vars_t::bypass
5.62.2.14	MHAParser::string_t dc::dc_vars_t::clientid
5.62.2.15	MHAParser::string_t dc::dc_vars_t::gainrule
5.62.2.16	MHAParser::string_t dc::dc_vars_t::preset
5.62.2.17	MHAParser::int_mon_t dc::dc_vars_t::modified
5.62.2.18	MHAParser::mfloat_t dc::dc_vars_t::max_level_difference
5.62.2.19	MHAParser::vfloat_mon_t dc::dc_vars_t::input_level
5.62.2.20	MHAParser::vfloat_mon_t dc::dc_vars_t::filtered_level
5.62.2.21	MHAParser::vfloat_mon_t dc::dc_vars_t::center_frequencies
5.62.2.22	MHAParser::vfloat_mon_t dc::dc_vars_t::edge_frequencies
5.62.2.23	MHAParser::vfloat_mon_t dc::dc_vars_t::band_weights
5.62.2.24	MHAParser::bool_t dc::dc_vars_t::use_wbinhib

The documentation for this class was generated from the following file:

# • dc.cpp

# 5.63 dc::dc\_vars\_validator\_t Class Reference

Inheritance diagram for dc::dc\_vars\_validator\_t:

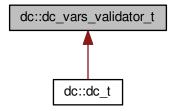

## **Public Member Functions**

dc\_vars\_validator\_t (dc\_vars\_t &v, unsigned int s, mha\_domain\_t domain)

#### 5.63.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

dc.cpp

5.64 dc::wb\_inhib\_cfg\_t Class Reference

**Public Member Functions** 

wb\_inhib\_cfg\_t (const wideband\_inhib\_vars\_t &vars)

## **Public Attributes**

- std::vector< float > weights
- float dl\_map\_min
- float dl\_map\_max
- float dl diff
- float I\_min
- std::vector< std::vector< float >> g\_scale

## 5.64.1 Constructor & Destructor Documentation

#### 5.64.2 Member Data Documentation


- 5.64.2.1 std::vector<float> dc::wb\_inhib\_cfg\_t::weights
- 5.64.2.2 float dc::wb\_inhib\_cfg\_t::dl\_map\_min
- 5.64.2.3 float dc::wb\_inhib\_cfg\_t::dl\_map\_max
- 5.64.2.4 float dc::wb\_inhib\_cfg\_t::dl\_diff
- 5.64.2.5 float dc::wb\_inhib\_cfg\_t::l\_min
- 5.64.2.6 std::vector<std::vector<float> > dc::wb\_inhib\_cfg\_t::g\_scale

The documentation for this class was generated from the following file:

# · dc.cpp

# 5.65 dc::wideband\_inhib\_vars\_t Class Reference

Inheritance diagram for dc::wideband\_inhib\_vars\_t:

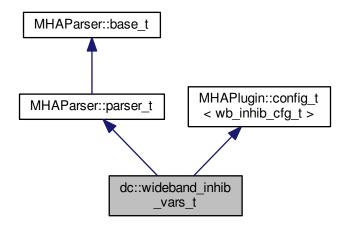

#### **Public Member Functions**

- wideband\_inhib\_vars\_t ()
- void **setchannels** (unsigned int ch, unsigned int bnds)
- wb\_inhib\_cfg\_t \* current ()
- void update ()

#### **Public Attributes**

- MHAParser::vfloat\_t weights
- MHAParser::float\_t dl\_map\_min
- MHAParser::float\_t dl\_map\_max

5.65.1 Constructor & Destructor Documentation

- MHAParser::float t1 min
- MHAParser::mfloat\_t g\_scale
- MHAEvents::patchbay\_t< wideband\_inhib\_vars\_t > patchbay
- unsigned int channels
- · unsigned int bands

#### **Additional Inherited Members**

```
5.65.1.1 dc::wideband_inhib_vars_t::wideband_inhib_vars_t ( )
5.65.2 Member Function Documentation
```

```
5.65.2.1 void dc::wideband_inhib_vars_t::setchannels ( unsigned\ int\ \emph{ch,} \\ unsigned\ int\ \emph{bnds}\ ) \quad \texttt{[inline]}
```

```
5.65.2.2 wb_inhib_cfg_t* dc::wideband_inhib_vars_t::current( ) [inline]
```

- 5.65.2.3 void dc::wideband\_inhib\_vars\_t::update ( )
- 5.65.3 Member Data Documentation
- 5.65.3.1 MHAParser::vfloat t dc::wideband inhib vars t::weights
- 5.65.3.2 MHAParser::float\_t dc::wideband\_inhib\_vars\_t::dl\_map\_min
- 5.65.3.3 MHAParser::float t dc::wideband\_inhib\_vars\_t::dl\_map\_max
- 5.65.3.4 MHAParser::float t dc::wideband inhib vars t::1 min


- 5.65.3.5 MHAParser::mfloat\_t dc::wideband\_inhib\_vars\_t::g\_scale
- 5.65.3.6 MHAEvents::patchbay\_t<wideband\_inhib\_vars\_t> dc::wideband\_inhib\_vars\_t← ::patchbay
- 5.65.3.7 unsigned int dc::wideband\_inhib\_vars\_t::channels
- 5.65.3.8 unsigned int dc::wideband\_inhib\_vars\_t::bands

The documentation for this class was generated from the following file:

# · dc.cpp

# 5.66 dc\_simple::dc\_if\_t Class Reference

Inheritance diagram for dc\_simple::dc\_if\_t:

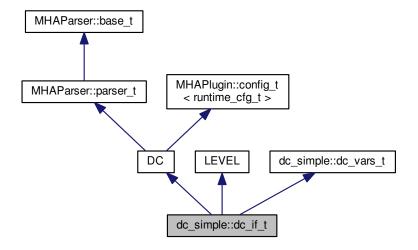

## **Public Member Functions**

- dc\_if\_t (const algo\_comm\_t &ac\_, const std::string &th\_, const std::string &al\_)
- void prepare (mhaconfig\_t &tf)
- void release ()
- mha\_spec\_t \* process (mha\_spec\_t \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Private Member Functions**

- void update dc ()
- void update\_level ()
- void has been modified ()
- void read\_modified ()
- void update\_level\_mon ()
- void update\_gain\_mon ()

#### **Private Attributes**

- MHAParser::string t clientid
- MHAParser::string\_t gainrule
- MHAParser::string t preset
- MHAParser::int\_mon\_t modified
- MHAParser::vfloat\_mon\_t mon\_l
- MHAParser::vfloat\_mon\_t mon\_g
- MHAParser::string\_t filterbank
- MHAParser::vfloat\_mon\_t center\_frequencies
- MHAParser::vfloat\_mon\_t edge\_frequencies
- MHAEvents::patchbay\_t< dc\_if\_t > patchbay
- · bool prepared

#### **Additional Inherited Members**

```
5.66.1 Constructor & Destructor Documentation
```

5.66.2 Member Function Documentation

Implements MHAPlugin::plugin\_t < runtime\_cfg\_t > (p. 705).

5.66.2.2 void dc\_simple::dc\_if\_t::release( ) [virtual]

Reimplemented from **MHAPlugin::plugin\_t**< **runtime\_cfg\_t** > (p. 706).


```
5.66.2.3 mha_spec_t * dc_simple::dc_if_t::process (
                    mha\_spec\_t * s)
5.66.2.4 mha_wave_t * dc_simple::dc_if_t::process (
                    mha_wave_t * s
5.66.2.5 void dc_simple::dc_if_t::update_dc( ) [private]
5.66.2.6
        void dc_simple::dc_if_t::update_level( ) [private]
5.66.2.7 void dc_simple::dc_if_t::has_been_modified( ) [inline], [private]
5.66.2.8 void dc_simple::dc_if_t::read_modified() [inline], [private]
5.66.2.9 void dc_simple::dc_if_t::update_level_mon() [private]
5.66.2.10 void dc_simple::dc_if_t::update_gain_mon() [private]
5.66.3 Member Data Documentation
        MHAParser::string t dc_simple::dc_if_t::clientid [private]
        MHAParser::string t dc_simple::dc_if_t::gainrule [private]
5.66.3.3
        MHAParser::string_t dc_simple::dc_if_t::preset [private]
5.66.3.4
        MHAParser::int_mon_t dc_simple::dc_if_t::modified [private]
5.66.3.5 MHAParser::vfloat_mon_t dc_simple::dc_if_t::mon_l [private]
5.66.3.6
        MHAParser::vfloat_mon_t dc_simple::dc_if_t::mon_g [private]
5.66.3.7
        MHAParser::string_t dc_simple::dc_if_t::filterbank [private]
5.66.3.8
        MHAParser::vfloat_mon_t dc_simple::dc_if_t::center_frequencies [private]
        MHAParser::vfloat_mon_t dc_simple::dc_if_t::edge_frequencies [private]
5.66.3.10 MHAEvents::patchbay_t<dc_if_t> dc_simple::dc_if_t::patchbay [private]
5.66.3.11 bool dc_simple::dc_if_t::prepared [private]
```

The documentation for this class was generated from the following file:

# dc\_simple.cpp

# 5.67 dc\_simple::dc\_t Class Reference

Inheritance diagram for dc\_simple::dc\_t:

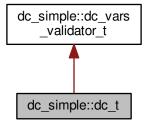

#### Classes

· class line\_t

# **Public Member Functions**

- dc\_t (const dc\_vars\_t &vars, mha\_real\_t filter\_rate, unsigned int nch, unsigned int fftlen)
- mha\_spec\_t \* process (mha\_spec\_t \*, mha\_wave\_t \*level\_db)
- mha\_wave\_t \* process (mha\_wave\_t \*, mha\_wave\_t \*level\_db)

#### **Public Attributes**

- std::vector< float > mon\_l
- std::vector< float > mon\_g

## **Private Attributes**

- std::vector< mha\_real\_t > expansion\_threshold
- std::vector< mha\_real\_t > limiter\_threshold
- std::vector< line\_t > compression
- std::vector< line\_t > expansion
- std::vector< line\_t > limiter
- $std::vector < mha\_real\_t > maxgain$
- unsigned int nbands

**Additional Inherited Members** 

```
5.67.1 Constructor & Destructor Documentation
5.67.1.1 dc_simple::dc_t::dc_t (
                     const dc_vars_t & vars,
                     mha_real_t filter_rate,
                     unsigned int nch,
                     unsigned int fftlen )
5.67.2 Member Function Documentation
5.67.2.1 mha_spec_t * dc_simple::dc_t::process (
                     mha_spec_t * s,
                     mha_wave_t * level_db )
5.67.2.2 mha_wave_t * dc_simple::dc_t::process (
                     mha_wave_t * s,
                     mha wave t * level_db )
5.67.3 Member Data Documentation
5.67.3.1 std::vector<mha_real_t> dc_simple::dc_t::expansion_threshold [private]
5.67.3.2 std::vector<mha_real_t> dc_simple::dc_t::limiter_threshold [private]
5.67.3.3 std::vector<line_t> dc_simple::dc_t::compression [private]
5.67.3.4
        std::vector<line_t> dc_simple::dc_t::expansion [private]
5.67.3.5
        std::vector<line t> dc_simple::dc_t::limiter [private]
         std::vector<mha real t> dc simple::dc t::maxgain [private]
5.67.3.7
         unsigned int dc_simple::dc_t::nbands [private]
        std::vector<float> dc simple::dc t::mon l
5.67.3.8
5.67.3.9 std::vector<float> dc_simple::dc_t::mon_g
```

The documentation for this class was generated from the following file:

# dc\_simple.cpp

```
5.68 dc_simple::dc_t::line_t Class Reference
```

**Public Member Functions** 

```
    line_t (mha_real_t x1, mha_real_t y1, mha_real_t x2, mha_real_t y2)
    line_t (mha_real_t x1, mha_real_t y1, mha_real_t slope)
    mha_real_t operator() (mha_real_t x)
```

**Private Attributes** 

```
mha_real_t m
```

mha\_real\_t y0

```
5.68.1 Constructor & Destructor Documentation
```

5.68.2 Member Function Documentation

5.68.3 Member Data Documentation

```
5.68.3.1 mha_real_t dc_simple::dc_t::line_t::m [private]
```


```
5.68.3.2 mha_real_t dc_simple::dc_t::line_t::y0 [private]
```

The documentation for this class was generated from the following file:

dc\_simple.cpp

# 5.69 dc\_simple::dc\_vars\_t Class Reference

Inheritance diagram for dc\_simple::dc\_vars\_t:

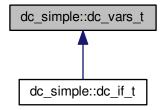

#### **Public Member Functions**

dc\_vars\_t (MHAParser::parser\_t &)

#### **Public Attributes**

- MHAParser::vfloat\_t g50
- MHAParser::vfloat\_t g80
- MHAParser::vfloat\_t maxgain
- MHAParser::vfloat\_t expansion\_threshold
- MHAParser::vfloat\_t expansion\_slope
- MHAParser::vfloat\_t limiter\_threshold
- MHAParser::vfloat t tauattack
- MHAParser::vfloat\_t taudecay
- MHAParser::bool\_t bypass

# 5.69.1 Constructor & Destructor Documentation

- 5.69.1.1 dc\_simple::dc\_vars\_t::dc\_vars\_t (


  MHAParser::parser\_t & p )
- 5.69.2 Member Data Documentation
- 5.69.2.1 MHAParser::vfloat\_t dc\_simple::dc\_vars\_t::g50
- 5.69.2.2 MHAParser::vfloat\_t dc\_simple::dc\_vars\_t::g80

- 5.69.2.3 MHAParser::vfloat\_t dc\_simple::dc\_vars\_t::maxgain
- 5.69.2.4 MHAParser::vfloat\_t dc\_simple::dc\_vars\_t::expansion\_threshold
- 5.69.2.5 MHAParser::vfloat\_t dc\_simple::dc\_vars\_t::expansion\_slope
- 5.69.2.6 MHAParser::vfloat\_t dc\_simple::dc\_vars\_t::limiter\_threshold
- 5.69.2.7 MHAParser::vfloat\_t dc\_simple::dc\_vars\_t::tauattack
- 5.69.2.8 MHAParser::vfloat\_t dc\_simple::dc\_vars\_t::taudecay
- 5.69.2.9 MHAParser::bool\_t dc\_simple::dc\_vars\_t::bypass

The documentation for this class was generated from the following file:

- dc\_simple.cpp
- 5.70 dc simple::dc vars validator t Class Reference

Inheritance diagram for dc\_simple::dc\_vars\_validator\_t:

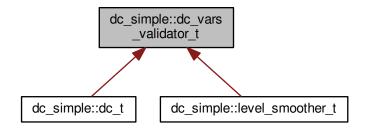

**Public Member Functions** 

dc\_vars\_validator\_t (const dc\_vars\_t &v, unsigned int s)


#### 5.70.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

· dc\_simple.cpp

# 5.71 dc\_simple::level\_smoother\_t Class Reference

Inheritance diagram for dc\_simple::level\_smoother\_t:

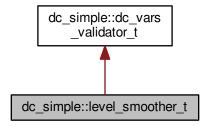

#### **Public Member Functions**

- level\_smoother\_t (const dc\_vars\_t &vars, mha\_real\_t filter\_rate, mhaconfig\_t buscfg)
- mha\_wave\_t \* process (mha\_spec\_t \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)

# **Private Attributes**

- MHAFilter::o1flt\_lowpass\_t attack
- MHAFilter::o1flt\_maxtrack\_t decay
- unsigned int nbands
- unsigned int fftlen
- MHASignal::waveform\_t level\_wave
- MHASignal::waveform\_t level\_spec

#### **Additional Inherited Members**

```
5.71.1 Constructor & Destructor Documentation
```

5.71.2 Member Function Documentation

5.71.3 Member Data Documentation

```
5.71.3.1 MHAFilter::o1flt_lowpass_t dc_simple::level_smoother_t::attack [private]
```

5.71.3.2 MHAFilter::o1flt maxtrack tdc\_simple::level\_smoother\_t::decay [private]

```
5.71.3.3 unsigned int dc_simple::level_smoother_t::nbands [private]
```

**5.71.3.4** unsigned int dc\_simple::level\_smoother\_t::fftlen [private]

**5.71.3.5** MHASignal::waveform\_t dc\_simple::level\_smoother\_t::level\_wave [private]


**5.71.3.6** MHASignal::waveform\_t dc\_simple::level\_smoother\_t::level\_spec [private]

The documentation for this class was generated from the following file:

dc\_simple.cpp

# 5.72 delay::interface\_t Class Reference

Inheritance diagram for delay::interface\_t:

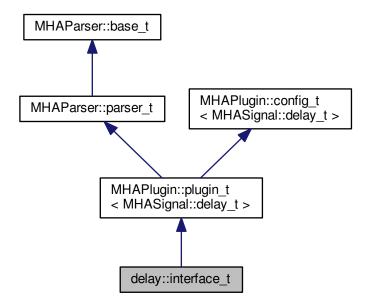

# **Public Member Functions**

- interface\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- void prepare (mhaconfig\_t &)
- mha\_wave\_t \* process (mha\_wave\_t \*)

## **Private Member Functions**

• void update ()

# **Private Attributes**


- MHAParser::vint\_t delays
- MHAEvents::patchbay\_t< interface\_t > patchbay

**Additional Inherited Members** 

Interface class for the delaysum plugin.

```
5.72.1 Constructor & Destructor Documentation
5.72.1.1 delay::interface_t::interface_t (
                    const algo comm t & iac,
                     const std::string & ,
                     const std::string & )
5.72.2 Member Function Documentation
5.72.2.1 void delay::interface_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < MHASignal::delay_t > (p. 705).
5.72.2.2 mha wave t * delay::interface_t::process (
                     mha wave t * s)
5.72.2.3 void delay::interface_t::update( ) [private]
5.72.3 Member Data Documentation
        MHAParser::vint_t delay::interface_t::delays [private]
5.72.3.2 MHAEvents::patchbay_t<interface_t> delay::interface_t::patchbay [private]
The documentation for this class was generated from the following file:
   · delay.cpp
5.73 delaysum_if_t Class Reference
```

Inheritance diagram for delaysum::delaysum\_if\_t:

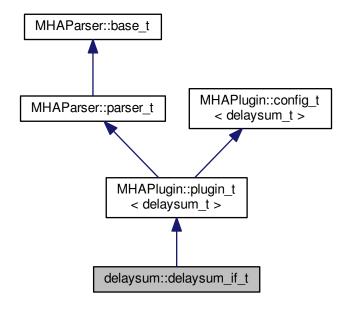

## **Public Member Functions**

- delaysum\_if\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

#### **Private Member Functions**

void update\_cfg ()

## **Private Attributes**

MHAParser::vfloat\_t weights

Linear weights to be multiplied with the audio signal, one factor for each channel.

MHAParser::vint\_t delay

vector of channel-specific delays, in samples.

MHAEvents::patchbay\_t< delaysum\_if\_t > patchbay

The patchbay to react to config changes.

**Additional Inherited Members** 

#### 5.73.1 Detailed Description

Interface class for the delaysum plugin.

vector of channel-specific delays, in samples.

This plugin allows to delay and sum multiple input channels using individual delays and weights. After each channel gets delayed it is multiplied with the given weight and then added to the single outout channel.

```
5.73.2 Constructor & Destructor Documentation
5.73.2.1 delaysum::delaysum_if_t::delaysum_if_t (
                    const algo comm t & iac,
                    const std::string & ,
                    const std::string & )
5.73.3 Member Function Documentation
5.73.3.1 mha wave t * delaysum::delaysum_if_t::process (
                    mha wave t * wave )
5.73.3.2 void delaysum::delaysum_if_t::prepare (
                    mhaconfig_t & tfcfg ) [virtual]
Implements MHAPlugin::plugin_t < delaysum_t > (p. 705).
5.73.3.3 void delaysum::delaysum if t::release() [virtual]
Reimplemented from MHAPlugin::plugin_t< delaysum_t > (p. 706).
5.73.3.4 void delaysum::delaysum if t::update cfg() [private]
5.73.4 Member Data Documentation
5.73.4.1 MHAParser::vfloat t delaysum::delaysum_if_t::weights [private]
Linear weights to be multiplied with the audio signal, one factor for each channel.
Order is [chan0, chan1, ...]
5.73.4.2 MHAParser::vint t delaysum::delaysum_if_t::delay [private]
```

# **5.73.4.3 MHAE**vents::patchbay\_t<delaysum\_if\_t> delaysum::delaysum\_if\_t::patchbay [private]

The patchbay to react to config changes.


The documentation for this class was generated from the following file:

# delaysum.cpp

# 5.74 delaysum::delaysum\_t Class Reference

Runtime configuration of the delaysum plugin.

Inheritance diagram for delaysum::delaysum\_t:

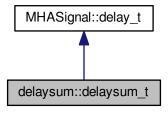

### **Public Member Functions**

delaysum\_t (unsigned int nch, unsigned int fragsize, const std::vector< mha\_real\_t > &weights\_, const std::vector< int > &delays\_)

Constructor of the runtime configuration.

mha\_wave\_t \* process (mha\_wave\_t \*)

# **Private Attributes**

std::vector < mha\_real\_t > weights
 Relative weights for each channel. Order is [chan0, chan1, ...].

MHASignal::waveform\_t out

Output waveform.

## 5.74.1 Detailed Description

Runtime configuration of the delaysum plugin.

Inherits from the already present delay\_t class. The constructor initializes and validates the runtime configuration and forwards the delay vector to the delay\_t class. The process function first calls delay\_t::process and then multiplies every output channel with its weight and adds them into the output channel.

#### 5.74.2 Constructor & Destructor Documentation

Constructor of the runtime configuration.

## **Parameters**

nch	Number of input channels.
fragsize	Size of one input fragment in frames.
weights⇔ –	Vector of weights for each channel.
delays⇔	Vector of delays, one entry per channel.
_	

#### 5.74.3 Member Function Documentation

# 5.74.4 Member Data Documentation

```
5.74.4.1 std::vector<mha_real_t> delaysum::delaysum_t::weights [private]
```

Relative weights for each channel. Order is [chan0, chan1, ...].

```
5.74.4.2 MHASignal::waveform_t delaysum::delaysum_t::out [private]
```


Output waveform.

The documentation for this class was generated from the following file:

# · delaysum.cpp

# 5.75 doasym\_classification Class Reference

Inheritance diagram for doasym\_classification:

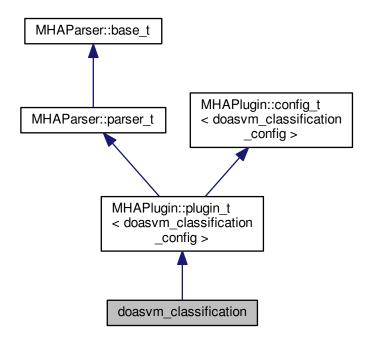

#### **Public Member Functions**

doasvm\_classification (algo\_comm\_t &ac, const std::string &chain\_name, const std
 ::string &algo\_name)

Constructs our plugin.

- ~doasvm\_classification ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig\_t &)

Plugin preparation.

void release (void)

# **Public Attributes**

- MHAParser::vfloat\_t angles
- MHAParser::mfloat\_t w
- MHAParser::vfloat t b
- MHAParser::vfloat\_t x
- MHAParser::vfloat\_t y
- MHAParser::string\_t p\_name
- MHAParser::string\_t max\_p\_ind\_name
- MHAParser::string\_t vGCC\_name

**Private Member Functions** 

• void update cfg ()

**Private Attributes** 

MHAEvents::patchbay\_t< doasym\_classification > patchbay

**Additional Inherited Members** 

```
5.75.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.75.1.2 doasym_classification::~doasym_classification()
```

5.75.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

## **Parameters**

signal_ini	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin\_t< doasym\_classification\_config > (p. 705).

```
5.75.2.3 void doasym_classification::release (
                    void ) [inline], [virtual]
Reimplemented from MHAPlugin::plugin_t< doasym_classification_config > (p. 706).
5.75.2.4 void doasvm_classification::update_cfg( ) [private]
5.75.3 Member Data Documentation
5.75.3.1 MHAParser::vfloat_t doasym_classification::angles
5.75.3.2 MHAParser::mfloat_t doasym_classification::w
5.75.3.3 MHAParser::vfloat t doasvm_classification::b
5.75.3.4 MHAParser::vfloat_t doasym_classification::x
5.75.3.5 MHAParser::vfloat t doasym_classification::y
5.75.3.6 MHAParser::string_t doasym_classification::p_name
5.75.3.7 MHAParser::string_t doasym_classification::max_p_ind_name
5.75.3.8 MHAParser::string_t doasym_classification::vGCC_name
```

5.75.3.9 MHAEvents::patchbay\_t<doasvm\_classification> doasvm\_classification::patchbay

The documentation for this class was generated from the following files:

· doasvm\_classification.h

[private]

- doasym classification.cpp
- 5.76 doasym\_classification\_config Class Reference

**Public Member Functions** 

- doasvm\_classification\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, doasvm\_classification \*\_doasvm)
- ~doasym\_classification\_config ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

### **Public Attributes**

```
· algo_comm_t & ac
```

doasym\_classification \* doasym

```
    MHA AC::waveform t p
```

- MHA\_AC::int\_t p\_max
- mha\_wave\_t c
- 5.76.1 Constructor & Destructor Documentation


- 5.76.1.2 doasym\_classification\_config::~doasym\_classification\_config()
- 5.76.2 Member Function Documentation
- 5.76.2.1 mha\_wave\_t \* doasym\_classification\_config::process ( mha\_wave\_t \* wave )
- 5.76.3 Member Data Documentation
- 5.76.3.1 algo\_comm\_t& doasym\_classification\_config::ac
- 5.76.3.2 doasvm\_classification\* doasvm\_classification\_config::doasvm
- 5.76.3.3 MHA\_AC::waveform\_t doasym\_classification\_config::p
- 5.76.3.4 MHA\_AC::int\_t doasym\_classification\_config::p\_max
- 5.76.3.5 mha\_wave\_t doasym\_classification\_config::c

The documentation for this class was generated from the following files:

- · doasym classification.h
- · doasvm\_classification.cpp

# 5.77 doasym\_feature\_extraction Class Reference

Inheritance diagram for doasym\_feature\_extraction:

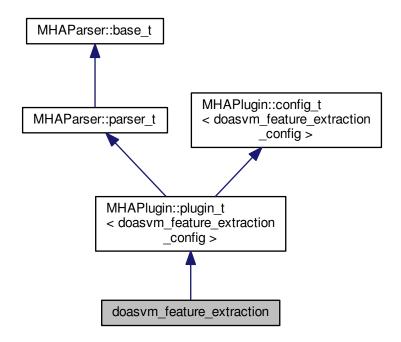

# **Public Member Functions**

 doasvm\_feature\_extraction (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

Constructs our plugin.

- ~doasvm\_feature\_extraction ()
- mha wave t \* process (mha wave t \*)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig\_t &)

Plugin preparation.

void release (void)

# **Public Attributes**

- MHAParser::int\_t fftlen
- MHAParser::int\_t max\_lag
- MHAParser::int\_t nupsample
- MHAParser::string\_t vGCC\_name

**Private Member Functions** 

void update\_cfg ()

**Private Attributes** 

MHAEvents::patchbay\_t< doasym\_feature\_extraction > patchbay

**Additional Inherited Members** 

```
5.77.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.77.1.2 doasym_feature_extraction::~doasym_feature_extraction()
```

5.77.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

# **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin\_t< doasvm\_feature\_extraction\_config > (p. 705).

The documentation for this class was generated from the following files:

- · doasym\_feature\_extraction.h
- doasym\_feature\_extraction.cpp

# 5.78 doasym\_feature\_extraction\_config Class Reference

### **Public Member Functions**

- doasvm\_feature\_extraction\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, doasvm\_feature\_extraction \*\_doagcc)
- ~doasym feature extraction config ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

### **Public Attributes**

- doasym\_feature\_extraction \* doagcc
- unsigned int wndlen
- · unsigned int fftlen
- unsigned int G\_length
- unsigned int GCC\_start
- unsigned int GCC\_end
- MHA AC::waveform t vGCC ac
- mha\_fft\_t fft
- mha\_fft\_t ifft
- double hifftwin\_sum
- MHASignal::waveform t proc wave
- MHASignal::waveform t hwin
- MHASignal::waveform\_t hifftwin
- MHASignal::waveform\_t vGCC
- MHASignal::spectrum t in spec
- MHASignal::spectrum\_t G

```
5.78.1 Constructor & Destructor Documentation
5.78.1.1 doasym_feature_extraction_config::doasym_feature_extraction_config (
                     algo_comm_t & ac,
                     const mhaconfig_t in_cfg,
                     doasym feature extraction * _doagcc )
5.78.1.2 doasym_feature_extraction_config::~doasym_feature_extraction_config()
5.78.2 Member Function Documentation
5.78.2.1 mha_wave_t * doasym_feature_extraction_config::process (
                     mha_wave_t * wave )
       Member Data Documentation
5.78.3
        doasym_feature_extraction* doasym_feature_extraction_config::doagcc
5.78.3.2
        unsigned int doasym_feature_extraction_config::wndlen
5.78.3.3
        unsigned int doasym_feature_extraction_config::fftlen
5.78.3.4
        unsigned int doasym_feature_extraction_config::G_length
5.78.3.5
        unsigned int doasym feature extraction config::GCC start
5.78.3.6
        unsigned int doasym_feature_extraction_config::GCC_end
5.78.3.7
         MHA_AC::waveform_t doasym_feature_extraction_config::vGCC_ac
5.78.3.8
        mha fft t doasym_feature_extraction_config::fft
5.78.3.9
        mha fft t doasym feature extraction config::ifft
5.78.3.10 double doasym_feature_extraction_config::hifftwin_sum
5.78.3.11 MHASignal::waveform t doasym feature extraction config::proc wave
5.78.3.12 MHASignal::waveform t doasym_feature_extraction_config::hwin
5.78.3.13 MHASignal::waveform t doasym feature extraction config::hifftwin
5.78.3.14 MHASignal::waveform t doasym_feature_extraction_config::vGCC
5.78.3.15 MHASignal::spectrum t doasym feature extraction config::in spec
5.78.3.16 MHASignal::spectrum t doasym_feature_extraction_config::G
```


The documentation for this class was generated from the following files:

- · doasym feature extraction.h
- doasym\_feature\_extraction.cpp

# 5.79 droptect\_t Class Reference

Detect dropouts in a signal with a constant spectrum.

Inheritance diagram for droptect\_t:

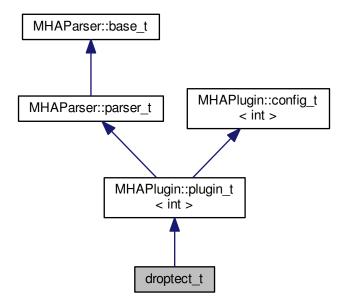

# **Public Member Functions**

droptect\_t (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo
 —name)

This constructor initializes the configuration language variables and inserts them into the MHA configuration tree.

- void prepare (mhaconfig\_t &signal\_info)
- void release (void)
- mha\_spec\_t \* process (mha\_spec\_t \*signal)

### **Private Attributes**

- MHAParser::vint\_mon\_t dropouts
- MHAParser::vint\_mon\_t consecutive\_dropouts
- MHAParser::int\_mon\_t blocks
- MHAParser::bool\_t reset
- MHAParser::float\_t threshold
- MHASignal::waveform\_t \* current\_powspec

```
    MHASignal::waveform_t * filtered_powspec
```

- · MHAParser::float t tau
- std::vector< bool > filter\_activated
- float period

The period of the process callback.

MHAParser::mfloat\_mon\_t filtered\_powspec\_mon

User access to filtered spectrum.

MHAParser::float mon t level mon

**Additional Inherited Members** 

# 5.79.1 Detailed Description

Detect dropouts in a signal with a constant spectrum.

### 5.79.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the MHA configuration tree.

```
5.79.3 Member Function Documentation
```

Implements MHAPlugin::plugin\_t < int > (p. 705).

Reimplemented from **MHAPlugin::plugin\_t**< int > (p. 706).

```
5.79.3.3 mha_spec_t * droptect_t::process (
                    mha_spec_t * signal )
5.79.4 Member Data Documentation
5.79.4.1 MHAParser::vint mon t droptect_t::dropouts [private]
5.79.4.2 MHAParser::vint_mon_t droptect_t::consecutive_dropouts [private]
5.79.4.3 MHAParser::int_mon_t droptect_t::blocks [private]
5.79.4.4 MHAParser::bool_t droptect_t::reset [private]
5.79.4.5 MHAParser::float_t droptect_t::threshold [private]
5.79.4.6 MHASignal::waveform t*droptect_t::current_powspec [private]
5.79.4.7 MHASignal::waveform_t* droptect_t::filtered_powspec [private]
5.79.4.8 MHAParser::float_t droptect_t::tau [private]
5.79.4.9 std::vector<bool> droptect_t::filter_activated [private]
5.79.4.10 float droptect_t::period [private]
The period of the process callback.
5.79.4.11 MHAParser::mfloat_mon_t droptect_t::filtered_powspec_mon [private]
User access to filtered spectrum.
```


The documentation for this class was generated from the following file:

**5.79.4.12** MHAParser::float mon t droptect t::level mon [private]

# droptect.cpp

# 5.80 ds\_t Class Reference

# Inheritance diagram for ds\_t:

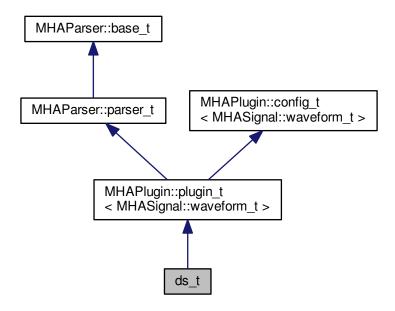

# **Public Member Functions**

- ds\_t (algo\_comm\_t, std::string, std::string)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

# **Private Attributes**

- MHAParser::int\_t ratio
- MHAFilter::iir\_filter\_t antialias

# **Additional Inherited Members**

# 5.80.1 Constructor & Destructor Documentation

```
5.80.1.1 ds_t::ds_t (
                    algo_comm_t iac,
                    std::string,
                    std::string )
5.80.2 Member Function Documentation
5.80.2.1 mha_wave_t * ds_t::process (
                    mha_wave_t * s )
5.80.2.2 void ds_t::prepare (
                    mhaconfig_t & cf ) [virtual]
Implements MHAPlugin::plugin_t < MHASignal::waveform_t > (p. 705).
5.80.2.3 void ds_t::release() [virtual]
Reimplemented from MHAPlugin::plugin_t < MHASignal::waveform_t > (p. 706).
5.80.3 Member Data Documentation
5.80.3.1 MHAParser::int_t ds_t::ratio [private]
5.80.3.2 MHAFilter::iir_filter_t ds_t::antialias [private]
```

The documentation for this class was generated from the following file:

# · downsample.cpp

# 5.81 dynamiclib t Class Reference

**Public Member Functions** 

- dynamiclib\_t (const std::string &)
- void \* resolve (const std::string &)
- void \* resolve\_checked (const std::string &)
- ~dynamiclib\_t ()
- const std::string & getmodulename () const
- const std::string & getname () const

### **Private Attributes**

- std::string fullname
- std::string modulename
- mha\_libhandle\_t h

```
5.81.1 Constructor & Destructor Documentation
```

The documentation for this class was generated from the following files:

- mha\_os.h
- mha\_os.cpp
- 5.82 DynComp::dc\_afterburn\_rt\_t Class Reference

Real-time class for after burn effect.

### **Public Member Functions**

- dc\_afterburn\_rt\_t (const std::vector< float > &cf, unsigned int channels, float srate, const dc\_afterburn\_vars\_t &vars)
- void **burn** (float &Gin, float Lin, unsigned int band, unsigned int channel) gain modifier method (afterburn).

#### **Private Attributes**

```
std::vector< float > drain inv
```

- std::vector< float > conflux
- std::vector< float > maxgain
- std::vector< float > mpo\_inv
- std::vector< MHAFilter::o1flt\_lowpass\_t > lp

### 5.82.1 Detailed Description

Real-time class for after burn effect.

The constructor processes the parameters and creates pre-processed variables for efficient realtime processing.

# 5.82.2 Constructor & Destructor Documentation

# 5.82.3 Member Function Documentation

gain modifier method (afterburn).

### **Parameters**

© <b>2003-2048</b> I	idaleangehbu, oleehburg	
band	Filter band number.	
Lin	Input level (Pascal).	
Gin	Linear gain.	

Output level for MPO is estimated by Gin \* Lin.

### 5.82.4 Member Data Documentation


The documentation for this class was generated from the following files:

- · dc\_afterburn.h
- dc\_afterburn.cpp

# 5.83 DynComp::dc\_afterburn\_t Class Reference

Afterburn class, to be defined as a member of compressors.

Inheritance diagram for DynComp::dc\_afterburn\_t:

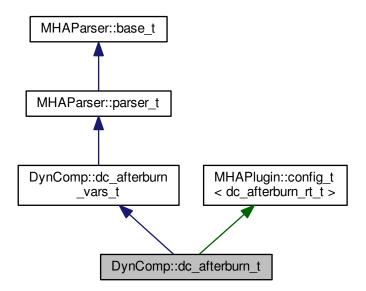

### **Public Member Functions**

- dc afterburn t ()
- void **set\_fb\_pars** (const std::vector< float > &cf, unsigned int **channels**, float srate)
- void unset\_fb\_pars ()
- void update burner ()
- void **burn** (float &Gin, float Lin, unsigned int band, unsigned int channel)

### **Private Member Functions**

• void update ()

#### **Private Attributes**

- MHAEvents::patchbay\_t< dc\_afterburn\_t > patchbay
- std::vector< float > \_cf
- unsigned int \_channels
- float srate
- bool commit\_pending
- · bool fb\_pars\_configured

### **Additional Inherited Members**

# 5.83.1 Detailed Description

Afterburn class, to be defined as a member of compressors.

```
5.83.2 Constructor & Destructor Documentation
```

```
5.83.2.1 DynComp::dc_afterburn_t::dc_afterburn_t ( )
```

5.83.3 Member Function Documentation

```
5.83.3.2 void DynComp::dc_afterburn_t::unset_fb_pars ( )
```


5.83.3.3 void DynComp::dc\_afterburn\_t::update\_burner( ) [inline]

```
5.83.3.4 void DynComp::dc_afterburn_t::burn (
                    float & Gin,
                    float Lin.
                     unsigned int band,
                     unsigned int channel ) [inline]
5.83.3.5 void DynComp::dc_afterburn_t::update( ) [private]
5.83.4 Member Data Documentation
5.83.4.1 MHAEvents::patchbay_t<dc_afterburn_t> DynComp::dc_afterburn_t::patchbay
         [private]
5.83.4.2 std::vector<float> DynComp::dc_afterburn_t::_cf [private]
5.83.4.3 unsigned int DynComp::dc_afterburn_t::_channels [private]
5.83.4.4 float DynComp::dc_afterburn_t::_srate [private]
5.83.4.5 bool DynComp::dc_afterburn_t::commit_pending [private]
5.83.4.6 bool DynComp::dc_afterburn_t::fb_pars_configured [private]
The documentation for this class was generated from the following files:
```

- dc\_afterburn.h
- dc\_afterburn.cpp
- 5.84 DynComp::dc\_afterburn\_vars\_t Class Reference

Variables for dc\_afterburn\_t (p. 286) class.

Inheritance diagram for DynComp::dc\_afterburn\_vars\_t:

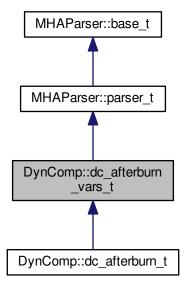

# **Public Member Functions**

dc\_afterburn\_vars\_t ()

### **Public Attributes**

MHAParser::vfloat\_t f

MHAParser::vfloat\_t drain

MHAParser::vfloat\_t conflux

MHAParser::vfloat\_t maxgain

MHAParser::vfloat\_t mpo

MHAParser::float\_t taugain

MHAParser::kw\_t commit

MHAParser::bool\_t bypass

# **Additional Inherited Members**

# 5.84.1 Detailed Description

Variables for dc\_afterburn\_t (p. 286) class.

5.84.2	Constructor & Destructor Documentation
5.84.2.1	DynComp::dc_afterburn_vars_t::dc_afterburn_vars_t ( )
5.84.3	Member Data Documentation
5.84.3.1	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::f
5.84.3.2	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::drain
5.84.3.3	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::conflux
5.84.3.4	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::maxgain
5.84.3.5	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::mpo
5.84.3.6	MHAParser::float_t DynComp::dc_afterburn_vars_t::taugain
5.84.3.7	MHAParser::kw_t DynComp::dc_afterburn_vars_t::commit
5.84.3.8	MHAParser::bool_t DynComp::dc_afterburn_vars_t::bypass

The documentation for this class was generated from the following files:

- · dc\_afterburn.h
- dc\_afterburn.cpp
- 5.85 DynComp::gaintable\_t Class Reference

Gain table class.

#### **Public Member Functions**

gaintable\_t (const std::vector< mha\_real\_t > &LInput, const std::vector< mha\_real\_t > &FCenter, unsigned int channels)

Constructor.

- ~gaintable\_t ()
- void update (std::vector< std::vector< mha\_real\_t >> > newGain)
   Update gains from an external table.
- mha\_real\_t get\_gain (mha\_real\_t Lin, mha\_real\_t Fin, unsigned int channel)
   Read Gain from gain table.
- mha\_real\_t get\_gain (mha\_real\_t Lin, unsigned int band, unsigned int channel)
   Read Gain from gain table.
- void **get\_gain** (const **mha\_wave\_t** &Lin, **mha\_wave\_t** &Gain)

Read Gains from gain table.

unsigned int nbands () const

Return number of frequency bands.

· unsigned int nchannels () const

Return number of audio channels.

- std::vector< std::vector< mha\_real\_t >> get\_iofun () const Return current input-output function.
- std::vector< mha real t > get vL () const
- std::vector< mha real t > get vF () const

# **Private Attributes**

- unsigned int num\_L
- unsigned int num\_F
- unsigned int num\_channels
- std::vector< mha real t > vL
- std::vector< mha\_real\_t > vF
- std::vector< mha real t > vFlog
- std::vector< std::vector< mha\_real\_t >>> data

# 5.85.1 Detailed Description

# Gain table class.

This gain table is intended to efficient table lookup, i.e, interpolation of levels, and optional interpolation of frequencies. Sample input levels and sample frequencies are given in the constructor. The gain entries can be updated with the **update()** (p. 293) member function via a gain prescription rule from an auditory profile.

# 5.85.2 Constructor & Destructor Documentation

```
5.85.2.1 gaintable_t::gaintable_t (  const\ std::vector < mha\_real\_t > \&\ \textit{LInput}, \\ const\ std::vector < mha\_real\_t > \&\ \textit{FCenter}, \\ unsigned\ int\ \textit{channels}\ )
```

Constructor.

# **Parameters**

LInput	Input level samples, in equivalent LTASS_combined dB SPL.
FCenter	Frequency samples in Hz (e.g., center frequencies of filterbank).
channels	Number of audio channels (typically 2).

```
5.85.2.2 gaintable_t::~gaintable_t()
```

### **5.85.3** Member Function Documentation

```
5.85.3.1 void gaintable_t::update (  std::vector < std::vector < mha\_real\_t >> \textit{newGain} \ )
```

Update gains from an external table.

### **Parameters**

newGain	New gain table entries.
---------	-------------------------

Dimension change is not allowed. The number of entries are checked.

Read Gain from gain table.

### **Parameters**

Lin	Input level
Fin	Input frequency (no match required)
channel	Audio channel

Read Gain from gain table.

### **Parameters**

Lin	Input level
-----	-------------

### **Parameters**

band	Input frequency band
channel	Audio channel

```
5.85.3.4 void gaintable_t::get_gain (
const mha_wave_t & Lin,
mha_wave_t & Gain )
```

Read Gains from gain table.

#### **Parameters**

Lin	Input levels.
Gain	Output gain.

The number of channels in Lin and Gain must match the number of bands times number of channels in the gaintable.

```
5.85.3.5 unsigned int DynComp::gaintable_t::nbands ( ) const [inline]
```

Return number of frequency bands.

```
5.85.3.6 unsigned int DynComp::gaintable t::nchannels ( ) const [inline]
```

Return number of audio channels.

```
5.85.3.7 std::vector< std::vector< mha real t >> gaintable_t::get_iofun( ) const
```

Return current input-output function.

```
5.85.3.8 std::vector<mha_real_t> DynComp::gaintable_t::get_vL( ) const [inline]
```

```
5.85.3.9 std::vector<mha_real_t> DynComp::gaintable_t::get_vF( ) const [inline]
```

5.85.4 Member Data Documentation

```
5.85.4.1 unsigned int DynComp::gaintable_t::num_L [private]
```

**5.85.4.2 unsigned int DynComp::gaintable\_t::num\_F** [private]

**5.85.4.3 unsigned int DynComp::gaintable\_t::num\_channels** [private]

```
5.85.4.4 std::vector<mha_real_t> DynComp::gaintable_t::vL [private]
5.85.4.5 std::vector<mha_real_t> DynComp::gaintable_t::vF [private]
5.85.4.6 std::vector<mha_real_t> DynComp::gaintable_t::vFlog [private]
5.85.4.7 std::vector<std::vector<std::vector<mha_real_t> > DynComp::gaintable_t::data [private]
```


The documentation for this class was generated from the following files:

- · gaintable.h
- · gaintable.cpp

# 5.86 example1\_t Class Reference

This C++ class implements the simplest example plugin for the step-by-step tutorial.

Inheritance diagram for example1\_t:

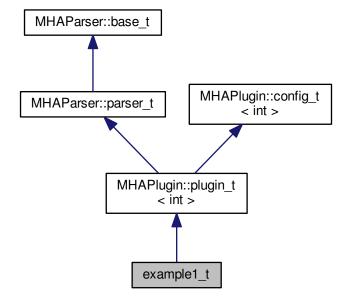

### **Public Member Functions**

• example1\_t (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

Do-nothing constructor.

void release (void)

Release may be empty.

void prepare (mhaconfig\_t &signal\_info)

Plugin preparation.

mha\_wave\_t \* process (mha\_wave\_t \*signal)

Signal processing performed by the plugin.

### **Additional Inherited Members**

### 5.86.1 Detailed Description

This C++ class implements the simplest example plugin for the step-by-step tutorial.

It inherits from **MHAPlugin::plugin\_t** (p. 703) for correct integration in the configuration language interface.

### 5.86.2 Constructor & Destructor Documentation

Do-nothing constructor.

The constructor has to take these three arguments, but it does not have to use them. However, the base class has to be initialized.

### 5.86.3 Member Function Documentation

Release may be empty.

Reimplemented from **MHAPlugin::plugin\_t**< int > (p. 706).

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains at least one channel

# **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin\_t< int > (p. 705).

Signal processing performed by the plugin.

This plugin multiplies the signal in the first audio channel by a factor 0.1.

# **Parameters**

# **Returns**

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)


The documentation for this class was generated from the following file:

# example1.cpp

# 5.87 example2\_t Class Reference

This C++ class implements the second example plugin for the step-by-step tutorial.

Inheritance diagram for example2\_t:

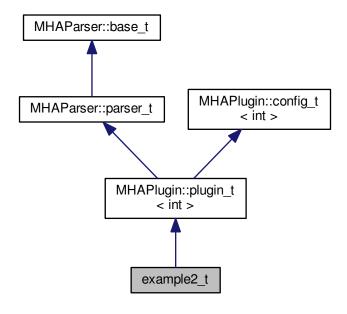

# **Public Member Functions**

example2\_t (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

void prepare (mhaconfig\_t &signal\_info)

Plugin preparation.

• void release (void)

Undo restrictions posed in prepare.

mha\_wave\_t \* process (mha\_wave\_t \*signal)

Signal processing performed by the plugin.

# **Private Attributes**

MHAParser::int\_t scale\_ch

Index of audio channel to scale.

MHAParser::float\_t factor

The scaling factor applied to the selected channel.

**Additional Inherited Members** 

# 5.87.1 Detailed Description

This C++ class implements the second example plugin for the step-by-step tutorial.

It extends the first example by using configuration language variables to influence the processing.

### 5.87.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

### 5.87.3 Member Function Documentation

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains enough channels.

### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of	Ī
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin\_t< int > (p. 705).

Undo restrictions posed in prepare.

Reimplemented from **MHAPlugin::plugin\_t**< int > (p. 706).

```
5.87.3.3 mha_wave_t * example2_t::process ( mha_wave_t * signal )
```

Signal processing performed by the plugin.

This plugin multiplies the signal in the selected audio channel by the configured factor.

### **Parameters**

```
signal Pointer to the input signal structure.
```

### **Returns**

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)

5.87.4 Member Data Documentation

```
5.87.4.1 MHAParser::int_t example2_t::scale_ch [private]
```

Index of audio channel to scale.

```
5.87.4.2 MHAParser::float_t example2_t::factor [private]
```

The scaling factor applied to the selected channel.


The documentation for this class was generated from the following file:

example2.cpp

5.88 example3\_t Class Reference

A Plugin class using the openMHA Event mechanism.

Inheritance diagram for example3\_t:

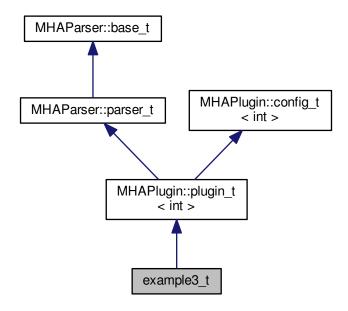

# **Public Member Functions**

• example3\_t (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo name)

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

void prepare (mhaconfig\_t &signal\_info)

Plugin preparation.

void release (void)

Bookkeeping only.

mha\_wave\_t \* process (mha\_wave\_t \*signal)

Signal processing performed by the plugin.

#### **Private Member Functions**

- void on\_scale\_ch\_writeaccess ()
- void on\_scale\_ch\_valuechanged ()
- void on\_scale\_ch\_readaccess ()
- void on\_prereadaccess ()

### **Private Attributes**

MHAParser::int\_t scale\_ch

Index of audio channel to scale.

MHAParser::float\_t factor

The scaling factor applied to the selected channel.

MHAParser::int mon t prepared

Keep Track of the prepare/release calls.

MHAEvents::patchbay\_t< example3\_t > patchbay

The Event connector.

#### **Additional Inherited Members**

# 5.88.1 Detailed Description

A Plugin class using the openMHA Event mechanism.

This is the third example plugin for the step-by-step tutorial.

#### 5.88.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

It connects the openMHA Events triggered by these configuration variables to the respective callbacks.

### 5.88.3 Member Function Documentation

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains enough channels.

### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of	1
	channels, frames per block, sampling rate.	

Implements  $MHAPlugin::plugin_t < int > (p. 705)$ .

Bookkeeping only.

Reimplemented from **MHAPlugin::plugin\_t**< int > (p. 706).

```
5.88.3.7 mha_wave_t * example3_t::process ( mha_wave_t * signal )
```

Signal processing performed by the plugin.

This plugin multiplies the signal in the selected audio channel by the configured factor.

#### **Parameters**

```
signal Pointer to the input signal structure.
```

# **Returns**

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)

5.88.4 Member Data Documentation

```
5.88.4.1 MHAParser::int_t example3_t::scale_ch [private]
```

Index of audio channel to scale.

```
5.88.4.2 MHAParser::float_t example3_t::factor [private]
```

The scaling factor applied to the selected channel.

```
5.88.4.3 MHAParser::int_mon_t example3_t::prepared [private]
```

Keep Track of the prepare/release calls.

# 5.88.4.4 MHAEvents::patchbay\_t<example3\_t> example3\_t::patchbay [private]

The Event connector.


The documentation for this class was generated from the following file:

# example3.cpp

# 5.89 example4\_t Class Reference

A Plugin class using the spectral signal.

Inheritance diagram for example4\_t:

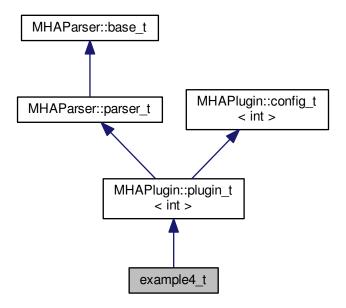

# **Public Member Functions**

example4\_t (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

void prepare (mhaconfig\_t &signal\_info)

Plugin preparation.

void release (void)

Bookkeeping only.

mha\_spec\_t \* process (mha\_spec\_t \*signal)

Signal processing performed by the plugin.

### **Private Member Functions**

- void on\_scale\_ch\_writeaccess ()
- void on\_scale\_ch\_valuechanged ()
- void on\_scale\_ch\_readaccess ()
- void on\_prereadaccess ()

### **Private Attributes**

MHAParser::int\_t scale\_ch

Index of audio channel to scale.

MHAParser::float\_t factor

The scaling factor applied to the selected channel.

MHAParser::int\_mon\_t prepared

Keep Track of the prepare/release calls.

MHAEvents::patchbay\_t< example4\_t > patchbay

The Event connector.

**Additional Inherited Members** 

5.89.1 Detailed Description

A Plugin class using the spectral signal.

This is the fourth example plugin for the step-by-step tutorial.

5.89.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

It connects the openMHA Events triggered by these configuration variables to the respective callbacks.

# 5.89.3 Member Function Documentation

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains enough channels.

# **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin t < int > (p. 705).

Bookkeeping only.

Reimplemented from **MHAPlugin::plugin** t < int > (p. 706).

```
5.89.3.7 mha_spec_t * example4_t::process ( mha_spec_t * signal )
```

Signal processing performed by the plugin.

This plugin multiplies the spectral signal in the selected audio channel by the configured factor.

### **Parameters**

signal | Pointer to the input signal structure.

**Returns** 

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)

5.89.4 Member Data Documentation

**5.89.4.1** MHAParser::int\_t example4\_t::scale\_ch [private]

Index of audio channel to scale.

**5.89.4.2** MHAParser::float\_t example4\_t::factor [private]

The scaling factor applied to the selected channel.

**5.89.4.3** MHAParser::int\_mon\_t example4\_t::prepared [private]

Keep Track of the prepare/release calls.

**5.89.4.4** MHAEvents::patchbay\_t<example4\_t> example4\_t::patchbay [private]

The Event connector.

The documentation for this class was generated from the following file:

example4.cpp

5.90 example5\_t Class Reference

**Public Member Functions** 

- example5\_t (unsigned int, unsigned int, mha\_real\_t)
- mha\_spec\_t \* process (mha\_spec\_t \*)

**Private Attributes** 

- unsigned int channel
- · mha\_real\_t scale

# 5.90.1 Constructor & Destructor Documentation

5.90.2 Member Function Documentation

5.90.3 Member Data Documentation


**5.90.3.1 unsigned int example5\_t::channel** [private]

The documentation for this class was generated from the following file:

# · example5.cpp

# 5.91 example6\_t Class Reference

Inheritance diagram for example6\_t:

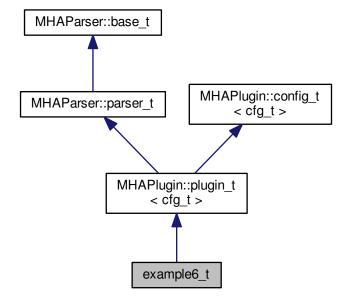

**Public Member Functions** 

```
• example6_t (const algo_comm_t &, const std::string &, const std::string &)
```

- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig t &)

**Private Member Functions** 

void update\_cfg ()

**Private Attributes** 

- MHAParser::int\_t channel\_no
- · float rmsdb
- MHAEvents::patchbay\_t< example6\_t > patchbay

**Additional Inherited Members** 

```
5.91.1 Constructor & Destructor Documentation
```

5.91.2 Member Function Documentation

```
5.91.2.1 mha_wave_t * example6_t::process ( mha_wave_t * wave )
```

Implements MHAPlugin::plugin\_t < cfg\_t > (p.705).

```
5.91.2.3 void example6_t::update_cfg( ) [private]
```

5.91.3 Member Data Documentation

```
5.91.3.1 MHAParser::int t example6_t::channel_no [private]
```

**5.91.3.2 float example6\_t::rmsdb** [private]

**5.91.3.3** MHAEvents::patchbay\_t<example6\_t> example6\_t::patchbay [private]

The documentation for this class was generated from the following file:

example6.cpp

# 5.92 expression\_t Class Reference

Class for separating a string into a left hand value and a right hand value.

## 5.92.1 Detailed Description

Class for separating a string into a left hand value and a right hand value.


A list of valid operators can be provided. After construction, the class members Ival, rval and op contain the apropriate contents.

The documentation for this class was generated from the following file:

### mha parser.cpp

# 5.93 fader\_if\_t Class Reference

Inheritance diagram for fader\_if\_t:

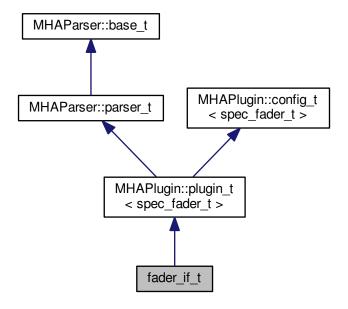

### **Public Member Functions**

- fader\_if\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)

**Private Member Functions** 

void update\_cfg ()

**Private Attributes** 

```
    MHAEvents::patchbay_t< fader_if_t > patchbay
```

- · MHAParser::float t tau
- MHAParser::vfloat\_t newgains
- mha\_real\_t \* actgains

**Additional Inherited Members** 

```
5.93.1 Constructor & Destructor Documentation
```

5.93.2 Member Function Documentation

```
5.93.2.1 mha_spec_t * fader_if_t::process (
mha_spec_t * s )
```

Implements MHAPlugin::plugin\_t< spec\_fader\_t > (p. 705).

5.93.3 Member Data Documentation

```
5.93.3.1 MHAEvents::patchbay_t<fader_if_t> fader_if_t::patchbay [private]
```

**5.93.3.2** MHAParser::float\_t fader\_if\_t::tau [private]

**5.93.3.3 MHAParser::vfloat\_t fader\_if\_t::newgains** [private]


**5.93.3.4 mha\_real\_t**\* **fader\_if\_t**::actgains [private]

The documentation for this class was generated from the following file:

fader\_spec.cpp

# 5.94 fader\_wave::fader\_wave\_if\_t Class Reference

Inheritance diagram for fader\_wave::fader\_wave\_if\_t:

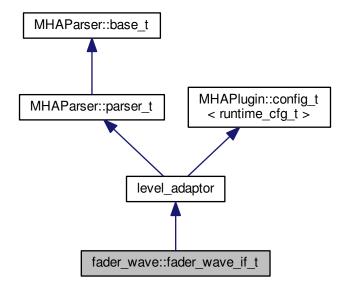

# **Public Member Functions**

- fader\_wave\_if\_t (algo\_comm\_t, const char \*, const char \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

#### **Private Member Functions**

void set\_level ()

### **Private Attributes**

- MHAParser::vfloat\_t gain
- MHAParser::float\_t ramplen
- MHAEvents::patchbay\_t< fader\_wave\_if\_t > patchbay
- bool prepared

**Additional Inherited Members** 


```
5.94.1 Constructor & Destructor Documentation
5.94.1.1 fader_wave::fader_wave_if_t::fader_wave_if_t (
                    algo comm t iac,
                    const char *,
                    const char * )
5.94.2 Member Function Documentation
5.94.2.1 mha_wave_t * fader_wave::fader_wave_if_t::process (
                    mha wave t * s)
5.94.2.2 void fader_wave::fader_wave_if_t::prepare (
                    mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < runtime_cfg_t > (p. 705).
5.94.2.3 void fader_wave::fader_wave_if_t::release() [virtual]
Reimplemented from MHAPlugin::plugin_t< runtime_cfg_t > (p. 706).
5.94.2.4 void fader_wave::fader_wave_if_t::set_level() [private]
5.94.3 Member Data Documentation
5.94.3.1 MHAParser::vfloat t fader_wave::fader_wave_if_t::gain [private]
5.94.3.2 MHAParser::float t fader_wave::fader_wave_if_t::ramplen [private]
5.94.3.3 MHAEvents::patchbay_t<fader_wave_if_t> fader_wave::fader_wave_if_t::patchbay
         [private]
5.94.3.4 bool fader_wave::fader_wave_if_t::prepared [private]
```

The documentation for this class was generated from the following file:

fader\_wave.cpp

# 5.95 fader\_wave::level\_adapt\_t Class Reference

Inheritance diagram for fader\_wave::level\_adapt\_t:

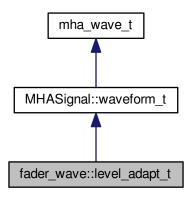

#### **Public Member Functions**

- level\_adapt\_t (mhaconfig\_t cf, mha\_real\_t adapt\_len, std::vector< float > l\_new\_← , std::vector< float > l\_old\_)
- void update\_frame ()
- std::vector< float > get\_level () const
- bool can\_update () const

#### **Private Attributes**

- unsigned int ilen
- unsigned int pos
- MHAWindow::fun\_t wnd
- std::vector< float > I new
- std::vector< float > I\_old

### **Additional Inherited Members**

# 5.95.1 Constructor & Destructor Documentation

```
5.95.2
       Member Function Documentation
5.95.2.1 void fader_wave::level_adapt_t::update_frame ( )
5.95.2.2 std::vector<float> fader_wave::level_adapt_t::get_level( ) const [inline]
5.95.2.3 bool fader wave::level adapt t::can update ( ) const [inline]
5.95.3 Member Data Documentation
5.95.3.1
         unsigned int fader wave::level adapt t::ilen [private]
5.95.3.2
        unsigned int fader_wave::level_adapt_t::pos [private]
5.95.3.3
         MHAWindow::fun_t fader_wave::level_adapt_t::wnd [private]
```

5.95.3.4 std::vector<float> fader wave::level adapt t::l new [private]

**5.95.3.5** std::vector<float> fader\_wave::level\_adapt\_t::l\_old [private]


The documentation for this class was generated from the following file:

# fader\_wave.cpp

# fftfbpow::fftfbpow\_interface\_t Class Reference

Interface class for fftfbpow plugin.

Inheritance diagram for fftfbpow::fftfbpow\_interface\_t:

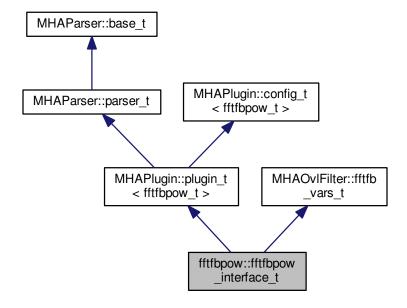

#### **Public Member Functions**

• fftfbpow\_interface\_t (const algo\_comm\_t &ac, const std::string &, const std::string &algo\_name)

Constructor with standard MHA constructor parameters.

void prepare (mhaconfig\_t &tf)

Standard MHA plugin prepare function.

mha\_spec\_t \* process (mha\_spec\_t \*s)

Standard MHA plugin process fct.

#### **Private Member Functions**

void update\_cfg ()

Constructs new runtime configuration in thread-safe manner.

### **Private Attributes**

std::string name

Configured name of this plugin instance.

MHAEvents::patchbay\_t< fftfbpow\_interface\_t > patchbay

Patchbay to connect to MHA configuration interface.

# **Additional Inherited Members**

5.96.1 Detailed Description

Interface class for fftfbpow plugin.

5.96.2 Constructor & Destructor Documentation

Constructor with standard MHA constructor parameters.

#### **Parameters**

ac	Handle to algorithm communication variable space
algo_name	Configured name of this plugin instance

5.96.3 Member Function Documentation

Standard MHA plugin prepare function.

Ensures that the input is in the frequency domain, calls **update\_cfg()** (p. 317) and inserts fbpow into the AC space.

#### **Parameters**

tf | Incoming mha configuration structure, contains information about input signal

Implements MHAPlugin::plugin\_t < fftfbpow\_t > (p. 705).

Standard MHA plugin process fct.

Polls new config and calls **process()** (p. 317) of the runtime configuration.

#### **Parameters**

```
s Input spectrum
```

#### **Returns**

Unchanged input spectrum

Constructs new runtime configuration in thread-safe manner.

5.96.4 Member Data Documentation

**5.96.4.1 std::string fftfbpow\_interface\_t::name** [private]

Configured name of this plugin instance.

# 5.96.4.2 MHAEvents::patchbay\_t<fftfbpow\_interface\_t> fftfbpow::fftfbpow\_interface\_t ::patchbay [private]

Patchbay to connect to MHA configuration interface.


The documentation for this class was generated from the following file:

# · fftfbpow.cpp

# 5.97 fftfbpow::fftfbpow\_t Class Reference

Run time configuration for the fftfbpow plugin.

Inheritance diagram for fftfbpow::fftfbpow\_t:

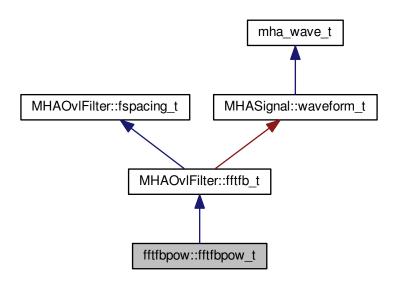

# **Public Member Functions**

• fftfbpow\_t (MHAOvIFilter::fftfb\_vars\_t &vars, unsigned int nch, unsigned int nfft, mha
—real\_t fs, algo\_comm\_t ac, std::string name)

Constructor of the run time configuration.

# **Public Attributes**

MHA\_AC::waveform\_t fbpow

AC variable containing the estimated power in each frequency band.

**Additional Inherited Members** 

# 5.97.1 Detailed Description

Run time configuration for the fftfbpow plugin.

#### 5.97.2 Constructor & Destructor Documentation

Constructor of the run time configuration.

#### **Parameters**

vars	Set of configuration variables for FFT-based overlapping filters
nch	Number of audio input channels
nfft	Length of FFT
fs	Sampling rate
ac	AC space
name	Configured name of plugin interface, used as prefix for AC variable names

#### 5.97.3 Member Data Documentation

# 5.97.3.1 MHA\_AC::waveform\_t fftfbpow::fftfbpow\_t::fbpow


AC variable containing the estimated power in each frequency band.

The documentation for this class was generated from the following file:

# fftfbpow.cpp

# 5.98 fftfilterbank::fftfb\_interface\_t Class Reference

Inheritance diagram for fftfilterbank::fftfb\_interface\_t:

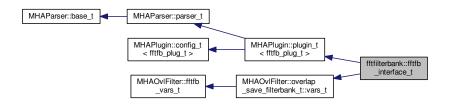

#### **Public Member Functions**

- fftfb\_interface\_t (const algo\_comm\_t &ac, const std::string &th, const std::string &al)

  Default values are set and MHA configuration variables registered into the parser.
- void prepare (mhaconfig\_t &)
   Prepare all variables for processing.
- void release ()
- mha\_spec\_t \* process (mha\_spec\_t \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Private Member Functions**

void update\_cfg ()

### **Private Attributes**

- MHAParser::bool\_t return\_imag
- MHAEvents::patchbay t< fftfb interface t > patchbay
- MHA\_AC::int\_t nchannels
- std::string algo
- bool prepared
- · unsigned int nbands

# **Additional Inherited Members**

#### 5.98.1 Constructor & Destructor Documentation

Default values are set and MHA configuration variables registered into the parser.

#### **Parameters**

ac	algorithm communication handle
th	chain name
al	algorithm name

#### 5.98.2 Member Function Documentation

Prepare all variables for processing.

In this function, all variables are initialised and the filter shapes for each band are calculated. The filter shapes W(f) are defined as

$$W(f) = W(T(S(f))) = W(x), \quad x = T(S(f)) = T(\hat{f}),$$

W(x) beeing a symmetric window function in the interval [-1,1] and S(f) the transformation from the linear scale to the given frequency scale (see functions in FreqScaleFun). The function  $T(\hat{f})$  transforms the frequency range between the center frequencies  $[\hat{f}_{k-1}, \hat{f}_k]$  and  $[\hat{f}_k, \hat{f}_{k+1}]$  into the interval [-1,0] and [0,1], respectively. This function is realised by the function linecale().

### **Parameters**

tf Channel configuration

Implements MHAPlugin::plugin\_t < fftfb\_plug\_t > (p. 705).

**5.98.2.2 void** fftfilterbank::fftfb\_interface\_t::release( ) [virtual]

Reimplemented from MHAPlugin::plugin\_t< fftfb\_plug\_t > (p. 706).

#### 5.98.3 Member Data Documentation


- **5.98.3.1 MHAParser::bool tfftfilterbank::fftfb\_interface\_t::return\_imag** [private]
- **5.98.3.2 MHAEvents::patchbay\_t**<**fftfb\_interface\_t**> **fftfilterbank::fftfb\_interface\_t::patchbay**[private]
- **5.98.3.3** MHA\_AC::int\_t fftfilterbank::fftfb\_interface\_t::nchannels [private]
- **5.98.3.4 std::string fftfilterbank::fftfb\_interface\_t::algo** [private]
- **5.98.3.5** bool fftfilterbank::fftfb\_interface\_t::prepared [private]
- **5.98.3.6** unsigned int fftfilterbank::fftfb\_interface\_t::nbands [private]

The documentation for this class was generated from the following file:

# fftfilterbank.cpp

# 5.99 fftfilterbank::fftfb\_plug\_t Class Reference

Inheritance diagram for fftfilterbank::fftfb\_plug\_t:

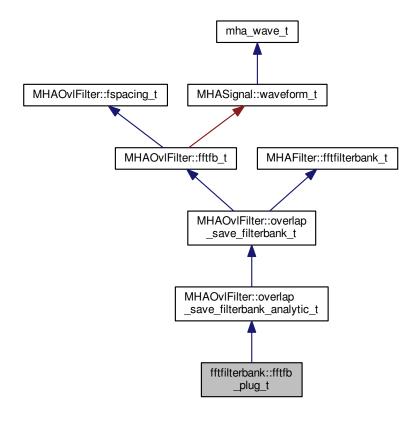

#### **Public Member Functions**

```
    fftfb_plug_t (MHAOvlFilter::overlap_save_filterbank_t::vars_t &, mhaconfig_←
t chcfg, algo_comm_t ac, std::string alg, bool return_imag)
```

- mha\_spec\_t \* process (mha\_spec\_t \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void insert ()

#### **Private Attributes**

- MHAOvIFilter::fftfb\_ac\_info\_t fb\_acinfo
- MHASignal::spectrum\_t s\_out
- MHA\_AC::waveform\_t imag
- bool return imag

#### **Additional Inherited Members**

```
5.99.1 Constructor & Destructor Documentation
```

```
5.99.1.1 fftfilterbank::fftfb_plug_t::fftfb_plug_t (

MHAOvIFilter::overlap_save_filterbank_t::vars_t & vars,

mhaconfig_t chcfg,

algo_comm_t ac,

std::string alg,

bool return_imag )
```

5.99.2 Member Function Documentation

```
5.99.2.1 mha_spec_t * fftfilterbank::fftfb_plug_t::process ( mha_spec_t * s )
```


- 5.99.2.3 void fftfilterbank::fftfb\_plug\_t::insert ( )
- 5.99.3 Member Data Documentation
- **5.99.3.1** MHAOvlFilter::fftfb\_ac\_info\_t fftfilterbank::fftfb\_plug\_t::fb\_acinfo [private]
- **5.99.3.2** MHASignal::spectrum\_t fftfilterbank::fftfb\_plug\_t::s\_out [private]
- **5.99.3.3 MHA AC::waveform t fftfilterbank::fftfb\_plug\_t::imag** [private]
- **5.99.3.4 bool fftfilterbank::fftfb\_plug\_t::return\_imag\_** [private]

The documentation for this class was generated from the following file:

fftfilterbank.cpp

# 5.100 frequency\_translator\_t Class Reference

Inheritance diagram for frequency\_translator\_t:

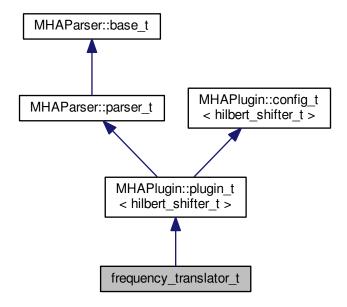

#### **Public Member Functions**

- frequency\_translator\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

#### **Private Member Functions**

• void update ()

#### **Private Attributes**

- MHAEvents::patchbay\_t< frequency\_translator\_t > patchbay
- MHAParser::vfloat t df
- MHAParser::float\_t fmin
- MHAParser::float\_t fmax
- MHAParser::int\_t irslen
- MHAParser::kw\_t phasemode

```
Additional Inherited Members
```


```
5.100.1 Constructor & Destructor Documentation
5.100.1.1 frequency_translator_t::frequency_translator_t (
                     const algo_comm_t & iac,
                     const std::string & ith,
                     const std::string & ial )
5.100.2 Member Function Documentation
5.100.2.1 mha spec t * frequency_translator_t::process (
                     mha\_spec\_t * s)
5.100.2.2 void frequency_translator_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t< hilbert_shifter_t > (p. 705).
5.100.2.3 void frequency_translator_t::release() [virtual]
Reimplemented from MHAPlugin::plugin_t< hilbert_shifter_t > (p. 706).
5.100.2.4 void frequency_translator_t::update( ) [private]
5.100.3 Member Data Documentation
5.100.3.1 MHAEvents::patchbay t<frequency translator t> frequency_translator_t::patchbay
          [private]
5.100.3.2 MHAParser::vfloat t frequency_translator_t::df [private]
5.100.3.3 MHAParser::float_t frequency_translator_t::fmin [private]
5.100.3.4 MHAParser::float t frequency_translator_t::fmax [private]
5.100.3.5 MHAParser::int t frequency_translator_t::irslen [private]
5.100.3.6 MHAParser::kw t frequency_translator_t::phasemode [private]
```

fshift\_hilbert.cpp

The documentation for this class was generated from the following file:

# 5.101 fw\_t Class Reference

# Inheritance diagram for fw\_t:

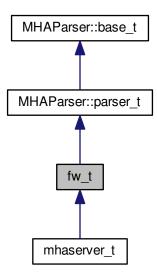

# **Public Member Functions**

- fw\_t ()
- ~fw\_t ()
- bool exit\_request () const

# **Protected Attributes**

- int proc\_error
- int io\_error

# **Private Types**

# **Private Member Functions**

- void **prepare** () preparation for processing
- void **start** () start of processing
- void stop ()

stop/pause of processing

void release ()

release of IO device

void quit ()

controlled quit

- void stopped (int, int)
- void started ()
- int process (mha\_wave\_t \*, mha\_wave\_t \*\*)
- void exec\_fw\_command ()
- void load\_proc\_lib ()
- void load\_io\_lib ()
- void fw\_sleep\_cmd ()
- void fw\_until\_cmd ()
- void get\_input\_signal\_dimension ()
- void async\_read ()
- void async\_poll\_msg ()
- void get\_parserstate ()

### **Static Private Member Functions**

- static void stopped (void \*h, int proc\_err, int io\_err)
- static void started (void \*h)
- static int process (void \*h, mha\_wave\_t \*sln, mha\_wave\_t \*\*sOut)

#### **Private Attributes**

- fw\_vars\_t prepare\_vars
- · MHAParser::int mon t nchannels out
- MHAParser::string\_t proc\_name
- MHAParser::string\_t io\_name
- MHAParser::bool\_t exit\_on\_stop
- MHAParser::int\_t fw\_sleep
- MHAParser::string t fw until
- MHAParser::kw\_t fw\_cmd
- MHAParser::string\_mon\_t parserstate
- MHAParser::string t errorlog
- MHAParser::string\_t fatallog
- MHAParser::vstring\_t plugins
- MHAParser::vstring\_t plugin\_paths
- MHAParser::bool\_t dump\_mha
- MHAParser::string\_t inst\_name

A variable for naming MHA instances.

- MHAKernel::algo\_comm\_class\_t ac
- PluginLoader::mhapluginloader\_t \* proc\_lib
- io\_lib\_t \* io\_lib

```
    mhaconfig_t cfin
```

- mhaconfig\_t cfout
- state\_t state
- bool b\_exit\_request
- MHAParser::string\_mon\_t proc\_error\_string
- MHAEvents::patchbay\_t< fw\_t > patchbay

### **Additional Inherited Members**

```
5.101.1 Member Enumeration Documentation
```

```
5.101.1.1 enum fw t::state t [private]
```

### **Enumerator**

```
fw_unprepared
```

fw\_stopped

fw\_starting

fw\_running

fw\_stopping

fw\_exiting

# 5.101.2 Constructor & Destructor Documentation

```
5.101.2.1 fw_t::fw_t()
```

5.101.2.2 fw\_t::
$$\sim$$
fw\_t ( )

### 5.101.3 Member Function Documentation

```
5.101.3.1 bool fw_t::exit_request() const [inline]
```

# preparation for processing

```
5.101.3.3 void fw_t::start() [private]
```

# start of processing

```
5.101.3.4 void fw_t::stop() [private]
stop/pause of processing
5.101.3.5 void fw_t::release() [private]
release of IO device
5.101.3.6 void fw_t::quit() [private]
controlled quit
5.101.3.7 static void fw_t::stopped (
                     void *h.
                     int proc_err,
                     int io_err ) [inline], [static], [private]
5.101.3.8 static void fw_t::started (
                     void * h ) [inline], [static], [private]
5.101.3.9 static int fw_t::process (
                     void *h,
                     mha wave t * sln,
                     mha_wave_t ** sOut ) [inline], [static], [private]
5.101.3.10 void fw_t::stopped (
                      int proc_err,
                      int io_err ) [private]
5.101.3.11 void fw_t::started() [private]
5.101.3.12 int fw_t::process (
                      mha_wave_t * s_in,
                      mha_wave_t ** s_out ) [private]
5.101.3.13 void fw_t::exec_fw_command() [private]
5.101.3.14 void fw_t::load_proc_lib( ) [private]
5.101.3.15 void fw_t::load_io_lib( ) [private]
5.101.3.16 void fw_t::fw_sleep_cmd( ) [private]
5.101.3.17 void fw_t::fw_until_cmd( ) [private]
```

```
5.101.3.18 void fw_t::get_input_signal_dimension() [private]
5.101.3.19 void fw_t::async_read( ) [inline], [private]
5.101.3.20 void fw_t::async_poll_msg( ) [private]
5.101.3.21 void fw_t::get_parserstate() [private]
5.101.4 Member Data Documentation
5.101.4.1 fw_vars_t fw_t::prepare_vars [private]
5.101.4.2 MHAParser::int_mon_t fw_t::nchannels_out [private]
5.101.4.3 MHAParser::string_t fw_t::proc_name [private]
5.101.4.4 MHAParser::string_t fw_t::io_name [private]
5.101.4.5 MHAParser::bool_t fw_t::exit_on_stop [private]
5.101.4.6 MHAParser::int_t fw_t::fw_sleep [private]
5.101.4.7 MHAParser::string_t fw_t::fw_until [private]
5.101.4.8 MHAParser::kw_t fw_t::fw_cmd [private]
5.101.4.9 MHAParser::string_mon_t fw_t::parserstate [private]
5.101.4.10 MHAParser::string_t fw_t::errorlog [private]
5.101.4.11 MHAParser::string_t fw_t::fatallog [private]
5.101.4.12 MHAParser::vstring tfw_t::plugins [private]
5.101.4.13 MHAParser::vstring_t fw_t::plugin_paths [private]
5.101.4.14 MHAParser::bool_t fw_t::dump_mha [private]
5.101.4.15 MHAParser::string_t fw_t::inst_name [private]
A variable for naming MHA instances.
```

```
5.101.4.16 MHAKernel::algo_comm_class_t fw_t::ac [private]

5.101.4.17 PluginLoader::mhapluginloader_t* fw_t::proc_lib [private]

5.101.4.18 io_lib_t* fw_t::io_lib [private]

5.101.4.19 mhaconfig_t fw_t::cfin [private]

5.101.4.20 mhaconfig_t fw_t::cfout [private]

5.101.4.21 state_t fw_t::state [private]

5.101.4.22 bool fw_t::b_exit_request [private]

5.101.4.23 int fw_t::proc_error [protected]

5.101.4.24 int fw_t::io_error [protected]

5.101.4.25 MHAParser::string_mon_t fw_t::proc_error_string [private]

5.101.4.26 MHAEvents::patchbay_t<fw_t> fw_t::patchbay [private]
```

The documentation for this class was generated from the following files:

- mhafw\_lib.h
- mhafw\_lib.cpp

# 5.102 fw\_vars\_t Class Reference

#### **Public Member Functions**

- fw\_vars\_t (MHAParser::parser\_t &)
- void lock srate fragsize ()
- void lock\_channels ()
- void unlock\_srate\_fragsize ()
- void unlock channels ()

#### **Public Attributes**

- MHAParser::int\_t pinchannels
- MHAParser::int\_t pfragmentsize
- MHAParser::float\_t psrate

```
5.102.1 Constructor & Destructor Documentation
```

```
5.102.1.1 fw_vars_t::fw_vars_t (

MHAParser::parser_t & p )
```

5.102.2 Member Function Documentation

```
5.102.2.1 void fw_vars_t::lock_srate_fragsize()
```

5.102.2.2 void fw\_vars\_t::lock\_channels ( )

5.102.2.3 void fw\_vars\_t::unlock\_srate\_fragsize ( )

5.102.2.4 void fw\_vars\_t::unlock\_channels ( )

5.102.3 Member Data Documentation

5.102.3.1 MHAParser::int\_t fw\_vars\_t::pinchannels

5.102.3.2 MHAParser::int\_t fw\_vars\_t::pfragmentsize


5.102.3.3 MHAParser::float\_t fw\_vars\_t::psrate

The documentation for this class was generated from the following files:

- · mhafw\_lib.h
- mhafw\_lib.cpp

# 5.103 gain::gain\_if\_t Class Reference

Inheritance diagram for gain::gain\_if\_t:

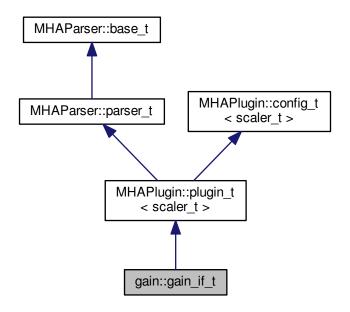

# **Public Member Functions**

- gain\_if\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

# **Private Member Functions**

- void update\_gain ()
- void update\_bbgain ()
- void update\_minmax ()

#### **Private Attributes**

- MHAEvents::patchbay\_t< gain\_if\_t > patchbay
- MHAParser::vfloat\_t gains
- MHAParser::float\_t bbgain
- MHAParser::float\_t vmin
- MHAParser::float\_t vmax

#### **Additional Inherited Members**


```
5.103.1 Constructor & Destructor Documentation
5.103.1.1 gain::gain_if_t::gain_if_t (
                     const algo_comm_t & iac,
                     const std::string & .
                     const std::string & )
5.103.2 Member Function Documentation
5.103.2.1 mha wave_t * gain::gain_if_t::process (
                     mha wave t * s)
5.103.2.2 mha spec t * gain::gain_if_t::process (
                     mha spec t * s)
5.103.2.3 void gain::gain_if_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < scaler_t > (p. 705).
5.103.2.4 void gain::gain_if_t::release() [virtual]
Reimplemented from MHAPlugin::plugin_t< scaler_t > (p. 706).
5.103.2.5 void gain::gain if t::update gain ( ) [private]
5.103.2.6 void gain::gain_if_t::update_bbgain() [private]
5.103.2.7 void gain::gain_if_t::update_minmax() [private]
5.103.3 Member Data Documentation
5.103.3.1
         MHAEvents::patchbay t<gain if t> gain::gain_if_t::patchbay [private]
5.103.3.2 MHAParser::vfloat_t gain::gain_if_t::gains [private]
5.103.3.3 MHAParser::float_t gain::gain_if_t::bbgain [private]
5.103.3.4 MHAParser::float t gain::gain_if_t::vmin [private]
5.103.3.5 MHAParser::float t gain::gain_if_t::vmax [private]
```

The documentation for this class was generated from the following file:

gain.cpp

5.104 gain::scaler\_t Class Reference

Inheritance diagram for gain::scaler\_t:

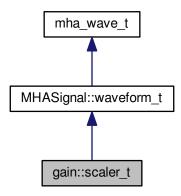

**Public Member Functions** 

• scaler\_t (const unsigned int &channels, const MHAParser::vfloat\_t &gains)

**Additional Inherited Members** 

5.104.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

· gain.cpp

5.105 hanning\_ramps\_t Class Reference

**Public Member Functions** 

- hanning\_ramps\_t (unsigned int, unsigned int)
- ∼hanning\_ramps\_t ()
- void operator() (MHASignal::waveform\_t &)

### **Private Attributes**

```
unsigned int len_a
```

- unsigned int len\_b
- mha\_real\_t \* ramp\_a
- mha\_real\_t \* ramp\_b

```
5.105.1 Constructor & Destructor Documentation
```

```
5.105.1.2 hanning_ramps_t::~hanning_ramps_t ( void )
```

5.105.2 Member Function Documentation

```
5.105.2.1 void hanning_ramps_t::operator() (

MHASignal::waveform_t & b)
```

5.105.3 Member Data Documentation

```
5.105.3.1 unsigned int hanning_ramps_t::len_a [private]
```

**5.105.3.2** unsigned int hanning\_ramps\_t::len\_b [private]

**5.105.3.3 mha\_real\_t**\* **hanning\_ramps\_t::ramp\_a** [private]


**5.105.3.4 mha\_real\_t**\* **hanning\_ramps\_t::ramp\_b** [private]

The documentation for this class was generated from the following file:

spec2wave.cpp

# 5.106 hilbert\_shifter\_t Class Reference

Inheritance diagram for hilbert\_shifter\_t:

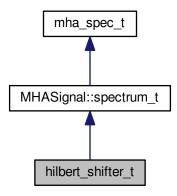

#### **Public Member Functions**

- hilbert\_shifter\_t (unsigned int fftlen, unsigned int channels, mha\_real\_t srate, unsigned int kmin, unsigned int kmax, std::vector< mha\_real\_t > dphi, unsigned int frameshift, unsigned int maxirslen, unsigned int phasemode)
- ∼hilbert shifter t()
- void process (mha\_spec\_t \*)

# **Private Attributes**

- MHASignal::spectrum\_t fullspec
- MHASignal::spectrum\_t analytic
- MHASignal::waveform\_t shifted
- MHASignal::spectrum\_t mixw\_shift
- MHASignal::spectrum\_t mixw\_ref
- fftw\_plan plan\_spec2analytic
- · mha fft t mhafft
- MHASignal::waveform\_t phi
- MHASignal::waveform\_t dphi
- unsigned int kmin
- unsigned int kmax
- unsigned int frameshift

#### **Additional Inherited Members**


```
5.106.1 Constructor & Destructor Documentation
5.106.1.1 hilbert shifter t::hilbert shifter t (
                      unsigned int fftlen,
                      unsigned int channels,
                      mha real t srate,
                      unsigned int kmin,
                      unsigned int kmax,
                      std::vector< mha_real_t > dphi,
                      unsigned int frameshift,
                      unsigned int maxirslen,
                      unsigned int phasemode )
5.106.1.2 hilbert_shifter_t::~hilbert_shifter_t()
5.106.2 Member Function Documentation
5.106.2.1
         void hilbert_shifter_t::process (
                      mha spec t * s)
5.106.3 Member Data Documentation
5.106.3.1
          MHASignal::spectrum t hilbert_shifter_t::fullspec [private]
5.106.3.2
         MHASignal::spectrum_t hilbert_shifter_t::analytic [private]
5.106.3.3
         MHASignal::waveform t hilbert_shifter_t::shifted [private]
5.106.3.4
         MHASignal::spectrum_t hilbert_shifter_t::mixw_shift [private]
5.106.3.5 MHASignal::spectrum_t hilbert_shifter_t::mixw_ref [private]
5.106.3.6 fftw_plan hilbert_shifter_t::plan_spec2analytic [private]
5.106.3.7 mha_fft_t hilbert_shifter_t::mhafft [private]
5.106.3.8 MHASignal::waveform_t hilbert_shifter_t::phi [private]
5.106.3.9 MHASignal::waveform t hilbert_shifter_t::dphi [private]
5.106.3.10 unsigned int hilbert_shifter_t::kmin [private]
5.106.3.11 unsigned int hilbert_shifter_t::kmax [private]
5.106.3.12 unsigned int hilbert_shifter_t::frameshift [private]
```

The documentation for this class was generated from the following file:

### fshift hilbert.cpp

# 5.107 identity\_t Class Reference

Inheritance diagram for identity\_t:

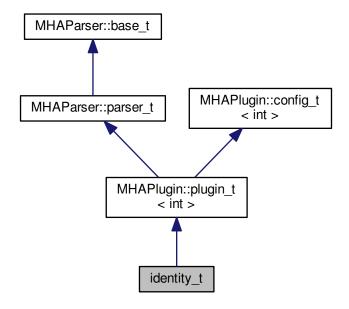

### **Public Member Functions**

- identity\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

### **Additional Inherited Members**

#### 5.107.1 Constructor & Destructor Documentation

# 5.107.2 Member Function Documentation


Reimplemented from **MHAPlugin::plugin\_t**< int > (p. 706).

The documentation for this class was generated from the following file:

# · identity.cpp

# 5.108 iirfilter\_t Class Reference

Inheritance diagram for iirfilter\_t:

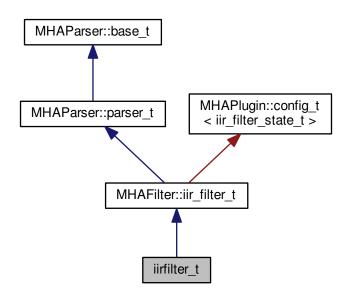

**Public Member Functions** 

```
• iirfilter_t (const algo_comm_t &, const std::string &, const std::string &)
```

- void prepare\_ (mhaconfig\_t &)
- void release\_()
- mha\_wave\_t \* process (mha\_wave\_t \*)

**Additional Inherited Members** 

```
5.108.1 Constructor & Destructor Documentation
```

```
5.108.1.1 iirfilter_t::iirfilter_t (
                          const algo_comm_t & ac,
                          const std::string & th,
                          const std::string & al )
```

```
5.108.2 Member Function Documentation
5.108.2.1 void iirfilter_t::prepare_ (
                       mhaconfig_t & tf )
5.108.2.2 void iirfilter_t::release_( ) [inline]
5.108.2.3 mha_wave_t * iirfilter_t::process (
                       mha_wave_t * s )
```


The documentation for this class was generated from the following file:

### iirfilter.cpp

5.109 io\_alsa\_t Class Reference

MHA IO interface class for ALSA IO.

Inheritance diagram for io alsa t:

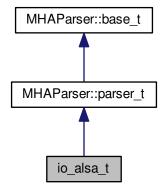

#### **Public Member Functions**

 io\_alsa\_t (unsigned int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent← \_t stop\_event, void \*stop\_handle)

Constructor, receives the callback handles to interact with the MHA framework.

• template<typename T = void>

void prepare (int, int)

Called after the framework has perpared the processing plugins and the number of input and output channels are fixed.

• void release ()

MHA framework leaves prepared state.

void start ()

MHA framework calls this function when signal processing should start.

• void stop ()

MHA framework calls this function when signal processing should stop.

• template<>

void prepare (int nch in, int nch out)

#### **Static Public Member Functions**

static void \* thread\_start (void \*h)

MHAIOAlsa uses a separate thread that calls the alsa read and write functions to read and write audio samples, these functions are blocking until samples can be read or written.

#### **Private Member Functions**

void process ()

#### **Private Attributes**

- bool b\_process
- · unsigned int fw fragsize
- unsigned int fw samplerate
- IOProcessEvent\_t proc\_event
- void \* proc handle
- IOStartedEvent\_t start\_event
- void \* start\_handle
- IOStoppedEvent t stop event
- void \* stop handle
- alsa\_base\_t \* dev\_in
- alsa base t \* dev out
- pthread\_t proc\_thread
- · alsa\_dev\_par\_parser\_t p\_in
- alsa\_dev\_par\_parser\_t p\_out
- MHAParser::bool t pcmlink
- MHAParser::int\_t priority
- MHAParser::kw\_t format
- MHAParser::int mon t alsa start counter
- MHAEvents::patchbay\_t< io\_alsa\_t > patchbay

**Additional Inherited Members** 

5.109.1 Detailed Description

MHA IO interface class for ALSA IO.

5.109.2 Constructor & Destructor Documentation

Constructor, receives the callback handles to interact with the MHA framework.

5.109.3 Member Function Documentation

```
5.109.3.1 template<typename T > void io_alsa_t::prepare ( int nch_in, int nch_out )
```

Called after the framework has perpared the processing plugins and the number of input and output channels are fixed.

open pcm streams

```
5.109.3.2 void io_alsa_t::release ( )
```

MHA framework leaves prepared state.

```
5.109.3.3 void io_alsa_t::start ( )
```

MHA framework calls this function when signal processing should start.

```
5.109.3.4 void io_alsa_t::stop ( )
```

MHA framework calls this function when signal processing should stop.

```
5.109.3.5 void * io_alsa_t::thread_start (
void * h ) [static]
```

MHAIOAlsa uses a separate thread that calls the alsa read and write functions to read and write audio samples, these functions are blocking until samples can be read or written.

This is the start function of that thread.

```
5.109.3.6 void io alsa t::process (
                     void ) [private]
5.109.3.7 template <> void io_alsa_t::prepare (
                     int nch_in,
                     int nch out )
5.109.4 Member Data Documentation
5.109.4.1 bool io_alsa_t::b_process [private]
5.109.4.2 unsigned int io_alsa_t::fw_fragsize [private]
5.109.4.3 unsigned int io_alsa_t::fw_samplerate [private]
5.109.4.4 IOProcessEvent tio_alsa_t::proc_event [private]
5.109.4.5 void* io_alsa_t::proc_handle [private]
5.109.4.6 IOStartedEvent_t io_alsa_t::start_event [private]
5.109.4.7 void* io_alsa_t::start_handle [private]
5.109.4.8 IOStoppedEvent_t io_alsa_t::stop_event [private]
5.109.4.9 void* io_alsa_t::stop_handle [private]
5.109.4.10 alsa base t*io_alsa_t::dev_in [private]
5.109.4.11 alsa_base_t*io_alsa_t::dev_out [private]
5.109.4.12 pthread_t io_alsa_t::proc_thread [private]
5.109.4.13 alsa_dev_par_parser_t io_alsa_t::p_in [private]
5.109.4.14 alsa_dev_par_parser_t io_alsa_t::p_out [private]
5.109.4.15 MHAParser::bool_t io_alsa_t::pcmlink [private]
5.109.4.16 MHAParser::int_t io_alsa_t::priority [private]
5.109.4.17 MHAParser::kw_t io_alsa_t::format [private]
5.109.4.18 MHAParser::int mon tio_alsa_t::alsa_start_counter [private]
5.109.4.19 MHAEvents::patchbay t<io alsa t>io_alsa_t::patchbay [private]
```

The documentation for this class was generated from the following file:


.....

# MHAIOalsa.cpp

5.110 io\_file\_t Class Reference

File IO.

Inheritance diagram for io\_file\_t:

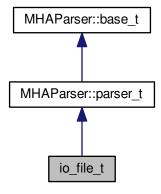

### **Public Member Functions**

- io\_file\_t (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_←
  handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop←
  \_event, void \*stop\_handle)
- ~io\_file\_t ()
- void prepare (int, int)

Allocate buffers, activate FILE client and install internal ports.

- void start ()
- void stop ()
- void release ()

Remove FILE client and deallocate internal ports and buffers.

# **Private Member Functions**

- void stopped (int, int)
- void setlock (bool locked)

lock or unlock all parser variables.

#### **Private Attributes**

- int fragsize
- float samplerate
- · int nchannels in
- int nchannels\_file\_in
- int nchannels out
- IOProcessEvent\_t proc\_event
- void \* proc\_handle
- IOStartedEvent\_t start\_event
- void \* start handle
- IOStoppedEvent\_t stop\_event
- void \* stop\_handle
- MHAParser::string\_t filename\_input
- MHAParser::string\_t filename\_output
- MHAParser::kw\_t output\_sample\_format
- MHAParser::int t startsample
- MHAParser::int\_t length
- MHAParser::bool\_t strict\_channel\_match
- MHAParser::bool\_t strict\_srate\_match
- MHASignal::waveform\_t \* s\_in
- MHASignal::waveform\_t \* s\_file\_in
- mha\_wave\_t \* s\_out
- bool b\_prepared
- SNDFILE \* sf in
- SNDFILE \* sf out
- · SF INFO sfinf in
- · SF INFO sfinf out
- · sf count t total read

#### **Additional Inherited Members**

## 5.110.1 Detailed Description

File IO.

# 5.110.2 Constructor & Destructor Documentation

```
5.110.2.2 io_file_t::~io_file_t ( )
5.110.3 Member Function Documentation
5.110.3.1 void io_file_t::prepare (
                       int nch_in,
                       int nch_out )
Allocate buffers, activate FILE client and install internal ports.
5.110.3.2 void io_file_t::start ( )
5.110.3.3 void io_file_t::stop ( )
5.110.3.4 void io_file_t::release ( )
Remove FILE client and deallocate internal ports and buffers.
5.110.3.5 void io_file_t::stopped (
                       int proc_err,
                       int io_err ) [private]
5.110.3.6 void io_file_t::setlock (
                       bool locked ) [private]
lock or unlock all parser variables.
Used in prepare/release.
Parameters
 locked
           When true, locks. When false, unlocks.
5.110.4 Member Data Documentation
5.110.4.1 int io_file_t::fragsize [private]
5.110.4.2 float io_file_t::samplerate [private]
5.110.4.3 int io_file_t::nchannels_in [private]
```

**5.110.4.4** int io\_file\_t::nchannels\_file\_in [private]

```
5.110.4.5 int io_file_t::nchannels_out [private]
5.110.4.6 IOProcessEvent tio_file_t::proc_event [private]
5.110.4.7 void* io_file_t::proc_handle [private]
5.110.4.8 IOStartedEvent_t io_file_t::start_event [private]
5.110.4.9 void* io file t::start handle [private]
5.110.4.10 IOStoppedEvent_t io_file_t::stop_event [private]
5.110.4.11 void* io_file_t::stop_handle [private]
5.110.4.12 MHAParser::string_t io_file_t::filename_input [private]
5.110.4.13 MHAParser::string_t io_file_t::filename_output [private]
5.110.4.14 MHAParser::kw_t io_file_t::output_sample_format [private]
5.110.4.15 MHAParser::int_t io_file_t::startsample [private]
5.110.4.16 MHAParser::int_t io_file_t::length [private]
5.110.4.17 MHAParser::bool_t io_file_t::strict_channel_match [private]
5.110.4.18 MHAParser::bool_t io_file_t::strict_srate_match [private]
5.110.4.19 MHASignal::waveform_t* io_file_t::s_in [private]
5.110.4.20 MHASignal::waveform_t*io_file_t::s_file_in [private]
5.110.4.21 mha_wave_t* io_file_t::s_out [private]
5.110.4.22 bool io_file_t::b_prepared [private]
5.110.4.23 SNDFILE* io_file_t::sf_in [private]
5.110.4.24 SNDFILE* io_file_t::sf_out [private]
5.110.4.25 SF_INFO io_file_t::sfinf_in [private]
5.110.4.26 SF_INFO io_file_t::sfinf_out [private]
5.110.4.27 sf count tio file t::total read [private]
```


The documentation for this class was generated from the following file:

## MHAIOFile.cpp

5.111 io\_lib\_t Class Reference

Class for loading MHA sound IO module.

Inheritance diagram for io\_lib\_t:

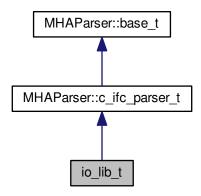

## **Public Member Functions**

io\_lib\_t (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_
handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_
event, void \*stop\_handle, std::string libname)

load and initialize MHA sound io module.

• ~io\_lib\_t ()

Deinitialize and unload this MHA sound io module.

• void **prepare** (unsigned int inch, unsigned int outch)

Prepare the sound io module.

void start ()

Tell the sound io module to start sound processing.

- void stop ()
- void release ()
- std::string lib\_str\_error (int err)

## **Protected Member Functions**

• void test\_error ()

#### **Protected Attributes**

- int lib err
- · dynamiclib\_t lib\_handle
- void \* lib\_data
- · IOInit t IOInit cb
- IOPrepare t IOPrepare cb
- · IOStart t IOStart cb
- IOStop\_t IOStop\_cb
- · IORelease t IORelease cb
- IOSetVar\_t IOSetVar\_cb
- IOStrError\_t IOStrError\_cb
- IODestroy\_t IODestroy\_cb

#### **Additional Inherited Members**

## 5.111.1 Detailed Description

Class for loading MHA sound IO module.

## 5.111.2 Constructor & Destructor Documentation

load and initialize MHA sound io module.

```
5.111.2.2 io_lib_t::~io_lib_t( )
```

Deinitialize and unload this MHA sound io module.

#### 5.111.3 Member Function Documentation

Prepare the sound io module.

After preparation, the sound io module may start the sound processing at any time (external trigger). When the sound processing is started, the sound io module will call the start\_event callback.

#### **Parameters**

inch	number of input channels
outch	number of output channels

```
5.111.3.2 void io_lib_t::start()
```

Tell the sound io module to start sound processing.

Some io modules need this, for others that wait for external events this method might do nothing.

```
5.111.3.3 void io_lib_t::stop ( )
5.111.3.4 void io_lib_t::release ( )
5.111.3.5 std::string io_lib_t::lib_str_error (
                     int err )
5.111.3.6 void io_lib_t::test_error( ) [protected]
5.111.4 Member Data Documentation
5.111.4.1 int io_lib_t::lib_err [protected]
5.111.4.2 dynamiclib_t io_lib_t::lib_handle [protected]
5.111.4.3 void* io_lib_t::lib_data [protected]
5.111.4.4 IOInit_t io_lib_t::IOInit_cb [protected]
5.111.4.5 IOPrepare_t io_lib_t::IOPrepare_cb [protected]
5.111.4.6 IOStart tio_lib_t::IOStart_cb [protected]
5.111.4.7 IOStop_t io_lib_t::IOStop_cb [protected]
5.111.4.8 IORelease_t io_lib_t::IORelease_cb [protected]
5.111.4.9 IOSetVar_t io_lib_t::IOSetVar_cb [protected]
5.111.4.10 IOStrError_t io_lib_t::IOStrError_cb [protected]
5.111.4.11 IODestroy_t io_lib_t::IODestroy_cb [protected]
```


The documentation for this class was generated from the following files:

- mhafw\_lib.h
- mhafw\_lib.cpp

# 5.112 io\_parser\_t Class Reference

Main class for Parser IO.

Inheritance diagram for io\_parser\_t:

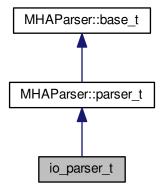

### **Public Member Functions**

- io\_parser\_t (unsigned int fragsize, IOProcessEvent\_t proc\_event, void \*proc\_handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_event, void \*stop\_handle)
- ~io\_parser\_t ()
- void **prepare** (int, int)

Allocate buffers, activate JACK client and install internal ports.

- void start ()
- void stop ()
- void release ()

Remove JACK client and deallocate internal ports and buffers.

#### **Private Member Functions**

- void stopped (int, int)
- void started ()
- void process\_frame ()

#### **Private Attributes**

- unsigned int fragsize
- unsigned int nchannels\_in
- unsigned int nchannels\_out
- IOProcessEvent\_t proc\_event
- void \* proc handle
- IOStartedEvent\_t start\_event
- void \* start\_handle
- IOStoppedEvent\_t stop\_event
- void \* stop handle
- MHAParser::mfloat\_t input
- MHAParser::mfloat mon t output
- MHASignal::waveform\_t \* s\_in
- mha\_wave\_t \* s\_out
- bool b\_fw\_started
- bool b\_stopped
- bool b\_prepared
- bool b\_starting
- MHAEvents::patchbay\_t< io\_parser\_t > patchbay

#### **Additional Inherited Members**

## 5.112.1 Detailed Description

Main class for Parser IO.

# 5.112.2 Constructor & Destructor Documentation

```
5.112.2.2 io_parser_t::~io_parser_t()
```

# 5.112.3 Member Function Documentation

Allocate buffers, activate JACK client and install internal ports.

```
5.112.3.2 void io_parser_t::start ( )
5.112.3.3 void io_parser_t::stop ( )
5.112.3.4 void io_parser_t::release ( )
Remove JACK client and deallocate internal ports and buffers.
5.112.3.5 void io_parser_t::stopped (
                     int proc_err,
                     int io_err ) [private]
5.112.3.6 void io_parser_t::started( ) [private]
5.112.3.7 void io parser t::process frame ( ) [private]
5.112.4 Member Data Documentation
5.112.4.1
         unsigned int io_parser_t::fragsize [private]
5.112.4.2 unsigned int io parser t::nchannels in [private]
5.112.4.3 unsigned int io_parser_t::nchannels_out [private]
5.112.4.4 IOProcessEvent_tio_parser_t::proc_event [private]
5.112.4.5 void* io_parser_t::proc_handle [private]
5.112.4.6 IOStartedEvent tio_parser_t::start_event [private]
5.112.4.7 void* io_parser_t::start_handle [private]
5.112.4.8 IOStoppedEvent_tio_parser_t::stop_event [private]
5.112.4.9 void*io_parser_t::stop_handle [private]
5.112.4.10 MHAParser::mfloat tio parser t::input [private]
5.112.4.11 MHAParser::mfloat_mon_t io_parser_t::output [private]
5.112.4.12 MHASignal::waveform_t* io_parser_t::s_in [private]
5.112.4.13 mha wave t*io parser t::s out [private]
5.112.4.14 bool io_parser_t::b_fw_started [private]
5.112.4.15 boolio_parser_t::b_stopped [private]
5.112.4.16 boolio_parser_t::b_prepared [private]
5.112.4.17 boolio_parser_t::b_starting [private]
5.112.4.18 MHAEvents::patchbay_t<io_parser_t> io_parser_t::patchbay [private]
```

The documentation for this class was generated from the following file:

## MHAIOParser.cpp

## 5.113 io\_tcp\_fwcb\_t Class Reference

TCP sound-io library's interface to the framework callbacks.

#### **Public Member Functions**

io\_tcp\_fwcb\_t (IOProcessEvent\_t proc\_event, void \*proc\_handle, IOStartedEvent
 \_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_event, void \*stop\_
 handle)

Constructor stores framework handles and initializes error numbers to 0.

virtual ~io\_tcp\_fwcb\_t ()

Do-nothing destructor.

virtual void start ()

Call the framework's start callback.

virtual int process (mha\_wave\_t \*sln, mha\_wave\_t \*&sOut)

Call the frameworks processing callback.

virtual void set\_errnos (int proc\_err, int io\_err)

Save error numbers to use during.

• virtual void stop ()

Call the frameworks stop callback.

### **Private Attributes**

IOProcessEvent\_t proc\_event

Pointer to signal processing callback function.

IOStartedEvent t start event

Pointer to start notification callback function.

IOStoppedEvent\_t stop\_event

Pointer to stop notification callback function.

void \* proc\_handle

Handles belonging to framework.

- void \* start\_handle
- void \* stop handle
- int proc\_err

Errors from the processing callback and from the TCP IO itself are stored here before closing Network handles.

int io\_err

## 5.113.1 Detailed Description

TCP sound-io library's interface to the framework callbacks.

## 5.113.2 Constructor & Destructor Documentation

Constructor stores framework handles and initializes error numbers to 0.

```
5.113.2.2 virtual io_tcp_fwcb_t::~io_tcp_fwcb_t( ) [inline], [virtual]
```

Do-nothing destructor.

```
5.113.3 Member Function Documentation
```

```
5.113.3.1 void io_tcp_fwcb_t::start( ) [virtual]
```

Call the framework's start callback.

Call the frameworks processing callback.

#### **Parameters**

sIn	The input sound data just received from TCP.
sOut	A pointer to output sound data. Will point to the output sound data storage when the callback finishes.

# Returns

Status, an error number from the signal processing callback. If this is != 0, then the connection should be closed.

Save error numbers to use during.

See also

```
stop (p. 357)
```

#### **Parameters**

```
proc_err The error number from the
```

See also

```
process (p. 356) callback.
```

#### **Parameters**

```
5.113.3.4 void io_tcp_fwcb_t::stop( ) [virtual]
```

Call the frameworks stop callback.

Uses the error numbers set previously with

See also

```
set_errnos (p. 356).
```

5.113.4 Member Data Documentation

```
5.113.4.1 IOProcessEvent_t io_tcp_fwcb_t::proc_event [private]
```

Pointer to signal processing callback function.

```
5.113.4.2 IOStartedEvent_t io_tcp_fwcb_t::start_event [private]
```

Pointer to start notification callback function.

Called when a new TCP connection is established or the user issues the start command while there is a connection.

```
5.113.4.3 IOStoppedEvent_tio_tcp_fwcb_t::stop_event [private]
```

Pointer to stop notification callback function.

Called when the connection is closed.

```
5.113.4.4 void* io_tcp_fwcb_t::proc_handle [private]
```

Handles belonging to framework.

```
5.113.4.5 void * io_tcp_fwcb_t::start_handle [private]
```

Errors from the processing callback and from the TCP IO itself are stored here before closing Network handles.

MHAIOTCP is notified by the server when the connection has been taken down, and calls

#### See also

**stop** (p. 357) from that callback. Within **stop** (p. 357), these error numbers are read again and transmitted to the framework.


The documentation for this class was generated from the following file:

# MHAIOTCP.cpp

5.114 io\_tcp\_parser\_t Class Reference

The parser interface of the IOTCP library.

Inheritance diagram for io\_tcp\_parser\_t:

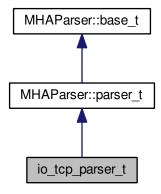

#### **Public Member Functions**

virtual const std::string & get\_local\_address () const

Read parser variable local\_address, this is the address of the network interface that should listen for incoming connections.

virtual unsigned short get\_local\_port () const

Read parser variable local\_port, this is the TCP port that should be used for incoming connections

virtual void set local port (unsigned short port)

Set parser variable local\_port.

virtual bool get\_server\_port\_open () const

Return the status of the server port as it is known to the parser.

virtual void set\_server\_port\_open (bool open)

Inform the parser of the current status of the server socket.

• virtual bool get\_connected () const

Return the parser's knowledge concerning wether there currently exists an established sound data TCP connection or not.

virtual void set\_connected (bool connected)

Inform the parser about the existance of a sound data connection.

virtual void set\_new\_peer (unsigned short port, const std::string &host)

Set parser monitor variables peer\_port and peer\_address, and calls set\_connected(true).

io\_tcp\_parser\_t ()

Constructor initializes parser variables.

virtual ~io\_tcp\_parser\_t ()

Do-nothing destructor.

virtual void debug (const std::string &message)

## **Private Attributes**

MHAParser::string t local address

Lets the user set the local network interface to listen on.

MHAParser::int\_t local\_port

Lets the user choose the local tcp port to listen on.

MHAParser::int\_mon\_t server\_port\_open

Indicates wether the TCP server socket is currently open.

MHAParser::int\_mon\_t connected

Indicator if there currently is a sound data connection over TCP.

MHAParser::string\_mon\_t peer\_address

Display the ip address of the currently connected sound data client.

MHAParser::int\_mon\_t peer\_port

Display the tcp port used by the current sound data client.

MHAParser::string\_t debug\_filename

filename to write debugging info to (if non-empty)

FILE \* debug file

file handle to write debugging info to

**Additional Inherited Members** 

## 5.114.1 Detailed Description

The parser interface of the IOTCP library.

5.114.2 Constructor & Destructor Documentation

```
5.114.2.1 io_tcp_parser_t::io_tcp_parser_t()
```

Constructor initializes parser variables.

```
5.114.2.2 virtual io_tcp_parser_t::~io_tcp_parser_t() [inline], [virtual]
```

Do-nothing destructor.

#### 5.114.3 Member Function Documentation

```
5.114.3.1 virtual const std::string& io_tcp_parser_t::get_local_address ( ) const [inline], [virtual]
```

Read parser variable local\_address, this is the address of the network interface that should listen for incoming connections.

#### Returns

A string containing the address of the local interface as it was set by the user.

```
5.114.3.2 unsigned short io_tcp_parser_t::get_local_port( ) const [virtual]
```

Read parser variable local\_port, this is the TCP port that should be used for incoming connections.

#### Returns

The local tcp port to listen on as it was chosen by the user. The port number is between MIN\_TCP\_PORT and MAX\_TCP\_PORT.

Set parser variable local port.

This is needed when it was set to 0 before: In this case, the OS chooses a free port for the TCP server socket, and the port that it chose has to be published to the user via the parser interface.

## **Parameters**

port	The TCP port number that is currently used. In the range [MIN_TCP_PORT,
	MAX_TCP_PORT], excluding 0.

#### Precondition

```
get_local_port() (p. 360) currently returns 0.
```

```
5.114.3.4 boolio_tcp_parser_t::get_server_port_open() const [virtual]
```

Return the status of the server port as it is known to the parser.

#### Returns

false after initialization, or the value most recently set via

#### See also

```
set_server_port_open (p. 361).
```

Inform the parser of the current status of the server socket.

#### **Parameters**

*open* Indicates wether the server socket has just been opened or closed.

## Precondition

open may only have the value true if **get\_server\_port\_open()** (p. 361) currently returns false.

#### **Postcondition**

## See also

get\_server\_port\_open (p. 361) returns the value (p. 48) of open.

```
5.114.3.6 bool io_tcp_parser_t::get_connected( ) const [virtual]
```

Return the parser's knowledge concerning wether there currently exists an established sound data TCP connection or not.

#### Returns

false after initialization, or the value most recently set via

See also

```
set_connected (p. 362).
```

Inform the parser about the existance of a sound data connection.

#### **Parameters**

```
connected Indicates wether there currently is a connection or not.
```

#### Precondition

connected must not have the same value that is currently returned by

See also

```
get_connected (p. 362).
```

**Postcondition** 

See also

```
get_connected (p. 362) returns the value (p. 48) of open.
```

Set parser monitor variables peer\_port and peer\_address, and calls set\_connected(true).

This method should be called when a new connection is established.

#### **Parameters**

port	The TCP port number used by the peer.
host	The Internet host where the peer is located.

Precondition

See also

**get\_connected** (p. 362) currently returns false.

Postcondition

See also

get\_connected (p. 362) returns true.

5.114.4 Member Data Documentation

**5.114.4.1 MHAParser::string\_t io\_tcp\_parser\_t::local\_address** [private]

Lets the user set the local network interface to listen on.

**5.114.4.2** MHAParser::int\_t io\_tcp\_parser\_t::local\_port [private]

Lets the user choose the local tcp port to listen on.

**5.114.4.3 MHAParser::int\_mon\_t io\_tcp\_parser\_t::server\_port\_open** [private]

Indicates wether the TCP server socket is currently open.

**5.114.4.4 MHAParser::int\_mon\_t io\_tcp\_parser\_t::connected** [private]

Indicator if there currently is a sound data connection over TCP.

5.114.4.5 MHAParser::string\_mon\_t io\_tcp\_parser\_t::peer\_address [private]

Display the ip address of the currently connected sound data client.

**5.114.4.6** MHAParser::int\_mon\_t io\_tcp\_parser\_t::peer\_port [private]

Display the tcp port used by the current sound data client.

**5.114.4.7 MHAParser::string\_t io\_tcp\_parser\_t::debug\_filename** [private]

filename to write debugging info to (if non-empty)

**5.114.4.8 FILE**\* **io\_tcp\_parser\_t::debug\_file** [private]

file handle to write debugging info to

The documentation for this class was generated from the following file:

MHAIOTCP.cpp

5.115 io\_tcp\_sound\_t Class Reference

Sound data handling of io tcp library.

### Classes

union float union

This union helps in conversion of floats from host byte order to network byte order and back again.

**Public Member Functions** 

• io\_tcp\_sound\_t (int fragsize, float samplerate)

Initialize sound data handling.

virtual ~io\_tcp\_sound\_t ()

Do-nothing destructor.

virtual void prepare (int num\_inchannels, int num\_outchannels)

Called during prepare, sets number of audio channels and allocates sound data storage.

virtual void release ()

Called during release.

virtual int chunkbytes\_in () const

Number of bytes that constitute one input sound chunk.

virtual std::string header () const

Create the tcp sound header lines.

virtual mha\_wave\_t \* ntoh (const std::string &data)

Copy data received from tcp into mha\_wave\_t (p. 472) structure.

virtual std::string hton (const mha wave t \*s out)

Copy sound data from the output sound structure to a string.

**Static Private Member Functions** 

static void check\_sound\_data\_type ()

Check if mha\_real\_t is a usable 32-bit floating point type.

#### **Private Attributes**

• int fragsize

Number of sound samples in each channel expected and returned from processing callback.

• float samplerate

Sampling rate.

• int num\_inchannels

Number of input channels.

- int num outchannels
- MHASignal::waveform\_t \* s\_in

Storage for input signal.

# 5.115.1 Detailed Description

Sound data handling of io tcp library.

## 5.115.2 Constructor & Destructor Documentation

Initialize sound data handling.

Checks sound data type by calling

## See also

```
check_sound_data_type (p. 366).
```

## **Parameters**

fragsize	Number of sound samples in each channel expected and returned from processing callback.
samplerate	Number of samples per second in each channel.

```
5.115.2.2 virtual io_tcp_sound_t::~io_tcp_sound_t( ) [inline], [virtual]
```

Do-nothing destructor.

5.115.3 Member Function Documentation

```
5.115.3.1 void io_tcp_sound_t::check_sound_data_type( ) [static], [private]
```

Check if mha\_real\_t is a usable 32-bit floating point type.

## **Exceptions**

```
MHA_Error (p. 423) if mha_real_t is not compatible to 32-bit float.
```

Called during prepare, sets number of audio channels and allocates sound data storage.

#### **Parameters**

num_inchannels	Number of input audio channels.
num_outchannels	Number of output audio channels.

```
5.115.3.3 void io tcp sound t::release ( ) [virtual]
```

Called during release.

Deletes sound data storage.

```
5.115.3.4 int io_tcp_sound_t::chunkbytes_in() const [virtual]
```

Number of bytes that constitute one input sound chunk.

## Returns

Number of bytes to read from TCP connection before invoking signal processing.

```
5.115.3.5 std::string io_tcp_sound_t::header( ) const [virtual]
```

Create the tcp sound header lines.

Copy data received from tcp into **mha\_wave\_t** (p. 472) structure.

Doing network-to-host byte order swapping in the process.

## **Parameters**

```
data One chunk (
```

#### See also

**chunkbytes\_in** (p. 366)) of sound data to process.

#### Returns

Pointer to the sound data storage.

Copy sound data from the output sound structure to a string.

Doing host-to-network byte order swapping while at it.

## **Parameters**

## Returns

The sound data in network byte order.

## 5.115.4 Member Data Documentation

```
5.115.4.1 int io_tcp_sound_t::fragsize [private]
```

Number of sound samples in each channel expected and returned from processing callback.

```
5.115.4.2 float io_tcp_sound_t::samplerate [private]
```

Sampling rate.

Number of samples per second in each channel.

```
5.115.4.3 int io_tcp_sound_t::num_inchannels [private]
```

Number of input channels.

Number of channels expected from and returned by signal processing callback.

```
5.115.4.4 int io_tcp_sound_t::num_outchannels [private]
```

**5.115.4.5** MHASignal::waveform\_t\*io\_tcp\_sound\_t::s\_in [private]

Storage for input signal.

The documentation for this class was generated from the following file:

# MHAIOTCP.cpp

# 5.116 io\_tcp\_sound\_t::float\_union Union Reference

This union helps in conversion of floats from host byte order to network byte order and back again.

## **Public Attributes**

- float f
- unsigned int i
- char **c** [4]

## 5.116.1 Detailed Description

This union helps in conversion of floats from host byte order to network byte order and back again.

```
5.116.2 Member Data Documentation
```

5.116.2.1 float io\_tcp\_sound\_t::float\_union::f

5.116.2.2 unsigned int io\_tcp\_sound\_t::float\_union::i

5.116.2.3 char io\_tcp\_sound\_t::float\_union::c[4]

The documentation for this union was generated from the following file:

# MHAIOTCP.cpp

# 5.117 io\_tcp\_t Class Reference

The tcp sound io library.

#### **Public Member Functions**

io\_tcp\_t (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_←
handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_←
event, void \*stop\_handle)

void prepare (int num\_inchannels, int num\_outchannels)

Allocate server socket and start thread waiting for sound data exchange.

• void start ()

Call frameworks start callback if there is a sound data connection at the moment.

• void stop ()

Close the current connection if there is one.

• void release ()

Close the current connection and close the server socket.

virtual void accept\_loop ()

IO thread executes this method.

virtual void connection loop (MHA TCP::Connection \*c)

IO thread executes this method for each connection.

• virtual void parse (const char \*cmd, char \*retval, unsigned int len)

Parser interface.

virtual ~io\_tcp\_t ()

## **Private Attributes**

- io\_tcp\_parser\_t parser
- io\_tcp\_sound\_t sound
- · io\_tcp\_fwcb\_t fwcb
- MHA TCP::Server \* server
- MHA TCP::Thread \* thread
- MHA\_TCP::Async\_Notify notify\_start
- MHA\_TCP::Async\_Notify\_stop
- MHA\_TCP::Async\_Notify\_release

## 5.117.1 Detailed Description

The tcp sound io library.

```
5.117.2 Constructor & Destructor Documentation
```

Allocate server socket and start thread waiting for sound data exchange.

prepare opens the tcp server socket and starts the io thread that listens for audio data on the tcp socket after doing some sanity checks

```
5.117.3.2 void io_tcp_t::start()
```

Call frameworks start callback if there is a sound data connection at the moment.

```
5.117.3.3 void io tcp t::stop ( )
```

Close the current connection if there is one.

stop IO thread

```
5.117.3.4 void io_tcp_t::release ( )
```

Close the current connection and close the server socket.

Stop IO thread and close server socket.

```
5.117.3.5 void io_tcp_t::accept_loop( ) [virtual]
```

IO thread executes this method.

IO thread executes this method for each connection.

## **Parameters**

c pointer to connection. connection\_loop deletes connection before exiting.

Parser interface.

```
5.117.4 Member Data Documentation
```

```
5.117.4.1 io_tcp_parser_t io_tcp_t::parser [private]
```

```
5.117.4.2 io_tcp_sound_t io_tcp_t::sound [private]
```

```
5.117.4.3 io tcp fwcb tio_tcp_t::fwcb [private]
```

```
5.117.4.4 MHA_TCP::Server* io_tcp_t::server [private]
```

```
5.117.4.5 MHA TCP::Thread*io_tcp_t::thread [private]
```

```
5.117.4.6 MHA_TCP::Async_Notify io_tcp_t::notify_start [private]
```

**5.117.4.7 MHA\_TCP::Async\_Notify io\_tcp\_t::notify\_stop** [private]

5.117.4.8 MHA TCP::Async Notify io\_tcp\_t::notify\_release [private]

The documentation for this class was generated from the following file:

# MHAIOTCP.cpp

## 5.118 latex doc t Class Reference

**Public Member Functions** 

- latex\_doc\_t (const std::string &plugname, const std::string &plugin\_macro)
- std::string get\_latex\_doc ()
- std::string get\_main\_category ()
- std::vector< std::string > get\_categories ()

#### **Private Member Functions**

- std::string **strdom** (**mha domain t** d)
- std::string get\_ac (MHAKernel::algo\_comm\_class\_t &ac, std::string txt)
- std::string parsername (std::string s)
- std::string get\_parser\_var (MHAParser::base\_t \*p, std::string name)
- std::string **get\_parser\_tab** (**MHAParser::base\_t** \*p, std::string prefix)

#### **Private Attributes**

- std::string plugname
- std::string latex\_plugname
- · MHAKernel::algo comm class tac
- PluginLoader::mhapluginloader\_t loader
- std::string plugin\_macro


```
5.118.1 Constructor & Destructor Documentation
5.118.1.1 | latex_doc_t::latex_doc_t (
                       const std::string & plugname,
                       const std::string & plugin_macro )
5.118.2 Member Function Documentation
5.118.2.1 std::string latex_doc_t::get_latex_doc()
5.118.2.2 std::string latex_doc_t::get_main_category ( )
5.118.2.3 std::vector< std::string > latex_doc_t::get_categories ( )
5.118.2.4 std::string latex_doc_t::strdom (
                       mha_domain_t d ) [private]
5.118.2.5 std::string latex_doc_t::get_ac (
                       MHAKernel::algo_comm_class_t & ac,
                       std::string txt ) [private]
5.118.2.6 std::string latex_doc_t::parsername (
                       std::string s ) [private]
5.118.2.7 std::string latex_doc_t::get_parser_var (
                       MHAParser::base t * p,
                       std::string name ) [private]
```

The documentation for this class was generated from the following file:

# generatemhaplugindoc.cpp

# 5.119 lpc Class Reference

Inheritance diagram for lpc:

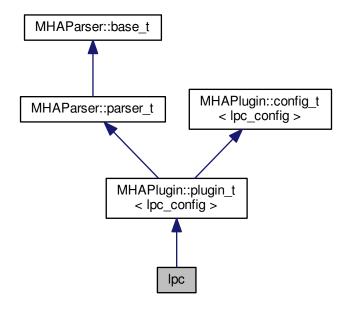

#### **Public Member Functions**

- **lpc** (**algo\_comm\_t** &ac, const std::string &chain\_name, const std::string &algo\_name)

  \*\*Constructs our plugin.
- ~lpc ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig\_t &)

Plugin preparation.

• void release (void)

### **Private Member Functions**

void update\_cfg ()

#### **Private Attributes**

- std::string algo\_name
- MHAParser::int t lpc order
- MHAParser::int\_t lpc\_buffer\_size
- MHAParser::bool t shift
- MHAParser::int\_t comp\_each\_iter
- MHAParser::bool t norm
- MHAEvents::patchbay\_t< lpc > patchbay

#### **Additional Inherited Members**

```
5.119.1 Constructor & Destructor Documentation
```

```
5.119.1.1 lpc::lpc (

algo_comm_t & ac,

const std::string & chain_name,

const std::string & algo_name )
```

## Constructs our plugin.

```
5.119.1.2 lpc::\simlpc ( )
```

5.119.2 Member Function Documentation

```
5.119.2.1 mha_wave_t * lpc::process (
mha_wave_t * signal )
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

## **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	


```
Implements MHAPlugin::plugin_t < lpc_config > (p. 705).
5.119.2.3 void lpc::release (
                    void ) [inline], [virtual]
Reimplemented from MHAPlugin::plugin_t < lpc_config > (p. 706).
5.119.2.4 void lpc::update_cfg( ) [private]
5.119.3 Member Data Documentation
5.119.3.1 std::string lpc::algo_name [private]
5.119.3.2 MHAParser::int t lpc::lpc_order [private]
5.119.3.3 MHAParser::int_t lpc::lpc_buffer_size [private]
5.119.3.4 MHAParser::bool tlpc::shift [private]
5.119.3.5 MHAParser::int_t lpc::comp_each_iter [private]
5.119.3.6 MHAParser::bool_t lpc::norm [private]
5.119.3.7 MHAEvents::patchbay_t<lpc>lpc::patchbay [private]
```

The documentation for this class was generated from the following files:

- lpc.h
- lpc.cpp

# 5.120 lpc\_bl\_predictor Class Reference

Inheritance diagram for lpc\_bl\_predictor:

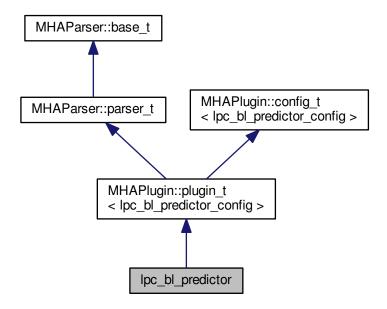

## **Public Member Functions**

lpc\_bl\_predictor (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

Constructs our plugin.

- ∼lpc\_bl\_predictor ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig\_t &)

Plugin preparation.

void release (void)

## **Public Attributes**

- MHAParser::int\_t lpc\_order
- MHAParser::string\_t name\_kappa
- MHAParser::string\_t name\_lpc\_f
- MHAParser::string\_t name\_lpc\_b
- MHAParser::string\_t name\_f
- MHAParser::string\_t name\_b

#### **Private Member Functions**

void update\_cfg ()

#### **Private Attributes**

MHAEvents::patchbay\_t< lpc\_bl\_predictor > patchbay

**Additional Inherited Members** 

```
5.120.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.120.1.2 lpc_bl_predictor::~lpc_bl_predictor()
```

5.120.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

## **Parameters**

signal_ini	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin\_t< lpc\_bl\_predictor\_config > (p. 705).

Reimplemented from MHAPlugin::plugin\_t< lpc\_bl\_predictor\_config > (p. 706).

```
5.120.2.4 void lpc_bl_predictor::update_cfg( ) [private]
```

5.120.3 Member Data Documentation

```
5.120.3.1 MHAParser::int t lpc_bl_predictor::lpc_order
```

5.120.3.2 MHAParser::string\_t lpc\_bl\_predictor::name\_kappa

5.120.3.3 MHAParser::string\_t lpc\_bl\_predictor::name\_lpc\_f

5.120.3.4 MHAParser::string\_t lpc\_bl\_predictor::name\_lpc\_b

5.120.3.5 MHAParser::string\_t lpc\_bl\_predictor::name\_f

5.120.3.6 MHAParser::string\_t lpc\_bl\_predictor::name\_b

**5.120.3.7 MHAEvents::patchbay\_t<lpc\_bl\_predictor> lpc\_bl\_predictor::patchbay** [private]

The documentation for this class was generated from the following files:

- lpc\_bl\_predictor.h
- lpc\_bl\_predictor.cpp

# 5.121 lpc\_bl\_predictor\_config Class Reference

**Public Member Functions** 

- lpc\_bl\_predictor\_config (algo\_comm\_t &iac, const mhaconfig\_t in\_cfg, lpc\_bl\_← predictor \*\_lpc)
- ~lpc\_bl\_predictor\_config ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Private Attributes**

```
· algo_comm_t ac

    MHA_AC::waveform_t f_est

    MHA_AC::waveform_t b_est

    MHASignal::waveform t forward

    MHASignal::waveform t backward

    int lpc order

    std::string name km

    std::string name f

   std::string name_b

    mha wave t km

   mha_wave_t s_f
   · mha wave ts b
5.121.1 Constructor & Destructor Documentation
5.121.1.1 lpc_bl_predictor_config::lpc_bl_predictor_config (
                     algo comm t & iac,
                     const mhaconfig_t in_cfg,
                     lpc_bl_predictor * _lpc )
5.121.1.2 lpc_bl_predictor_config::~lpc_bl_predictor_config( )
5.121.2 Member Function Documentation
5.121.2.1 mha wave t * lpc_bl_predictor_config::process (
                     mha wave t * wave )
5.121.3 Member Data Documentation
5.121.3.1 algo_comm_t lpc_bl_predictor_config::ac [private]
5.121.3.2 MHA AC::waveform tlpc_bl_predictor_config::f_est [private]
5.121.3.3 MHA_AC::waveform_t lpc_bl_predictor_config::b_est [private]
5.121.3.4 MHASignal::waveform t lpc_bl_predictor_config::forward [private]
5.121.3.5 MHASignal::waveform t lpc_bl_predictor_config::backward [private]
5.121.3.6 int lpc_bl_predictor_config::lpc_order [private]
```

**5.121.3.7 std::string lpc\_bl\_predictor\_config::name\_km** [private]


```
5.121.3.8 std::string lpc_bl_predictor_config::name_f [private]
5.121.3.9 std::string lpc_bl_predictor_config::name_b [private]
5.121.3.10 mha_wave_t lpc_bl_predictor_config::km [private]
5.121.3.11 mha_wave_t lpc_bl_predictor_config::s_f [private]
5.121.3.12 mha_wave_t lpc_bl_predictor_config::s_b [private]
```

The documentation for this class was generated from the following files:

- lpc\_bl\_predictor.h
- lpc\_bl\_predictor.cpp

# 5.122 **lpc\_burglattice Class Reference**

Inheritance diagram for lpc\_burglattice:

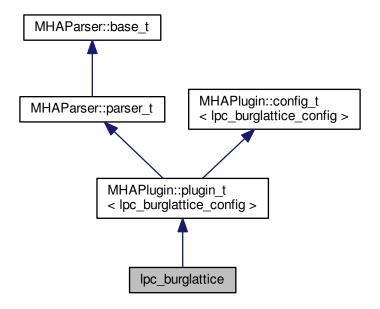

#### **Public Member Functions**

• **lpc\_burglattice** (**algo\_comm\_t** &ac, const std::string &chain\_name, const std::string &algo\_name)

Constructs our plugin.

- ∼lpc\_burglattice ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig\_t &)

Plugin preparation.

void release (void)

#### **Public Attributes**

```
    MHAParser::int_t lpc_order
```

MHAParser::string\_t name\_kappa

MHAParser::string\_t name\_f

MHAParser::string\_t name\_b

MHAParser::float t lambda

### **Private Member Functions**

void update\_cfg ()

## **Private Attributes**

MHAEvents::patchbay t< lpc burglattice > patchbay

# **Additional Inherited Members**

5.122.1 Constructor & Destructor Documentation

# Constructs our plugin.

```
5.122.1.2 lpc_burglattice::~lpc_burglattice ( )
5.122.2 Member Function Documentation
5.122.2.1 mha_wave_t * lpc_burglattice::process ( mha_wave_t * signal )
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

#### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of	1
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin\_t< lpc\_burglattice\_config > (p. 705).

Reimplemented from MHAPlugin::plugin\_t< lpc\_burglattice\_config > (p. 706).

```
5.122.2.4 void lpc_burglattice::update_cfg( ) [private]
```

5.122.3 Member Data Documentation

5.122.3.1 MHAParser::int\_t lpc\_burglattice::lpc\_order

5.122.3.2 MHAParser::string\_t lpc\_burglattice::name\_kappa

5.122.3.3 MHAParser::string\_t lpc\_burglattice::name\_f

5.122.3.4 MHAParser::string\_t lpc\_burglattice::name\_b

5.122.3.5 MHAParser::float\_t lpc\_burglattice::lambda

**5.122.3.6** MHAEvents::patchbay t<lpc burglattice>lpc\_burglattice::patchbay [private]

The documentation for this class was generated from the following files:

- lpc\_burg-lattice.h
- lpc\_burg-lattice.cpp

# 5.123 lpc\_burglattice\_config Class Reference

#### **Public Member Functions**

- lpc\_burglattice\_config (algo\_comm\_t &iac, const mhaconfig\_t in\_cfg, lpc\_← burglattice \*\_lpc)
- ~lpc burglattice config ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Private Attributes**

- · algo\_comm\_t ac
- MHASignal::waveform\_t forward
- MHASignal::waveform\_t backward
- MHASignal::waveform\_t kappa
- MHA\_AC::waveform\_t kappa\_block
- MHASignal::waveform\_t dm
- MHASignal::waveform\_t nm
- mha\_real\_t lambda
- int lpc\_order
- std::string name\_f
- std::string name b
- mha\_wave\_t s\_f
- · mha wave ts b
- 5.123.1 Constructor & Destructor Documentation
- 5.123.1.2 lpc\_burglattice\_config::~lpc\_burglattice\_config ( )
- 5.123.2 Member Function Documentation
- 5.123.2.1 mha\_wave\_t \* lpc\_burglattice\_config::process ( mha\_wave\_t \* wave )
- 5.123.3 Member Data Documentation
- **5.123.3.1 algo\_comm\_t lpc\_burglattice\_config::ac** [private]

```
5.123.3.2 MHASignal::waveform_t lpc_burglattice_config::forward [private]
5.123.3.3
         MHASignal::waveform_t lpc_burglattice_config::backward [private]
5.123.3.4
         MHASignal::waveform t lpc_burglattice_config::kappa [private]
5.123.3.5
         MHA_AC::waveform_t lpc_burglattice_config::kappa_block [private]
5.123.3.6
         MHASignal::waveform_t lpc_burglattice_config::dm [private]
5.123.3.7
         MHASignal::waveform_t lpc_burglattice_config::nm [private]
5.123.3.8 mha real t lpc_burglattice_config::lambda [private]
5.123.3.9
         int lpc_burglattice_config::lpc_order [private]
5.123.3.10 std::string lpc_burglattice_config::name_f [private]
5.123.3.11 std::string lpc_burglattice_config::name_b [private]
5.123.3.12 mha_wave_t lpc_burglattice_config::s_f [private]
5.123.3.13 mha wave tlpc_burglattice_config::s_b [private]
```

The documentation for this class was generated from the following files:

- lpc\_burg-lattice.h
- lpc\_burg-lattice.cpp

## 5.124 lpc\_config Class Reference

#### **Public Member Functions**

- lpc\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, std::string &algo\_name, unsigned int \_order, unsigned int \_lpc\_buffer\_size, bool \_shift, unsigned int \_comp\_each \_iter, bool \_norm)
- ∼lpc\_config ()
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void insert ()

#### **Private Attributes**

- bool norm
- · bool shift
- unsigned int comp\_each\_iter
- · unsigned int order
- unsigned int lpc\_buffer\_size
- · unsigned int N
- unsigned int comp\_iter
- mha\_wave\_t sample
- std::vector< mha\_real\_t > R
- std::vector< mha\_real\_t > A
- MHASignal::ringbuffer\_t inwave
- MHA\_AC::waveform\_t lpc\_out
- MHA\_AC::waveform\_t corr\_out
- 5.124.1 Constructor & Destructor Documentation

- 5.124.1.2 lpc\_config::~lpc\_config()
- 5.124.2 Member Function Documentation
- 5.124.2.1 mha\_wave\_t \* lpc\_config::process ( mha\_wave\_t \* wave )
- 5.124.2.2 void lpc\_config::insert ( )
- 5.124.3 Member Data Documentation
- **5.124.3.1** boollpc\_config::norm [private]
- **5.124.3.2** bool lpc\_config::shift [private]
- **5.124.3.3 unsigned int lpc\_config::comp\_each\_iter** [private]

```
5.124.3.4 unsigned int lpc_config::order [private]

5.124.3.5 unsigned int lpc_config::lpc_buffer_size [private]

5.124.3.6 unsigned int lpc_config::N [private]

5.124.3.7 unsigned int lpc_config::comp_iter [private]

5.124.3.8 mha_wave_t lpc_config::sample [private]

5.124.3.9 std::vector<mha_real_t> lpc_config::R [private]

5.124.3.10 std::vector<mha_real_t> lpc_config::A [private]

5.124.3.11 MHASignal::ringbuffer_t lpc_config::inwave [private]

5.124.3.12 MHA_AC::waveform_t lpc_config::lpc_out [private]

5.124.3.13 MHA_AC::waveform_t lpc_config::corr_out [private]
```

The documentation for this class was generated from the following files:

- lpc.h
- · lpc.cpp

# 5.125 matrixmixer::cfg\_t Class Reference

## **Public Member Functions**

- cfg\_t (std::vector< std::vector< float > > imixer, unsigned int ci, unsigned int co, unsigned int fragsize, unsigned int nfft)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*)

## **Private Attributes**

- MHASignal::waveform\_t m
- MHASignal::waveform\_t wout
- MHASignal::spectrum\_t sout

```
5.125.1 Constructor & Destructor Documentation
```

```
5.125.1.1 cfg_t::cfg_t (  std::vector < std::vector < float > > imixer, \\ unsigned int \textit{ci,} \\ unsigned int \textit{co,} \\ unsigned int \textit{fragsize,} \\ unsigned int \textit{nfft} \ )
```

5.125.2 Member Function Documentation

```
5.125.2.1 mha_wave_t * cfg_t::process (
mha_wave_t * s )
```

```
5.125.2.2 mha_spec_t * cfg_t::process (
mha_spec_t * s )
```

5.125.3 Member Data Documentation

```
5.125.3.1 MHASignal::waveform t matrixmixer::cfg_t::m [private]
```

**5.125.3.2** MHASignal::waveform\_t matrixmixer::cfg\_t::wout [private]


**5.125.3.3 MHASignal::spectrum\_t** matrixmixer::cfg\_t::sout [private]

The documentation for this class was generated from the following file:

# matrixmixer.cpp

# 5.126 matrixmixer::matmix\_t Class Reference

Inheritance diagram for matrixmixer::matmix\_t:

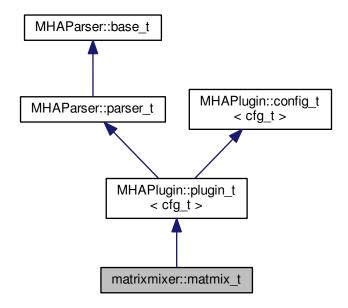

## **Public Member Functions**

- matmix\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- void **prepare** (**mhaconfig\_t** &)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*)

## **Private Member Functions**

void update\_m ()

## **Private Attributes**

- MHAEvents::patchbay\_t< matmix\_t > patchbay
- MHAParser::mfloat\_t mixer
- unsigned int ci
- unsigned int co

**Additional Inherited Members** 


```
5.126.1 Constructor & Destructor Documentation
5.126.1.1 matrixmixer::matmix t::matmix t(
                     const algo_comm_t & iac,
                      const std::string & ,
                      const std::string & )
5.126.2 Member Function Documentation
5.126.2.1 void matrixmixer::matmix t::prepare (
                      mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < cfg \ t > (p. 705).
5.126.2.2 mha wave t * matrixmixer::matmix_t::process (
                      mha_wave_t * s )
5.126.2.3 mha_spec_t * matrixmixer::matmix_t::process (
                      mha\_spec\_t * s)
5.126.2.4 void matrixmixer::matmix t::update m (
                     void ) [private]
5.126.3 Member Data Documentation
5.126.3.1 MHAEvents::patchbay_t<matmix_t> matrixmixer::matmix_t::patchbay [private]
5.126.3.2 MHAParser::mfloat t matrixmixer::matmix t::mixer [private]
5.126.3.3 unsigned int matrixmixer::matmix_t::ci [private]
5.126.3.4 unsigned int matrixmixer::matmix_t::co [private]
```

The documentation for this class was generated from the following file:

# matrixmixer.cpp

# 5.127 MHA\_AC::ac2matrix\_helper\_t Class Reference

Inheritance diagram for MHA\_AC::ac2matrix\_helper\_t:

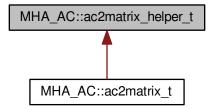

## **Public Member Functions**

- ac2matrix\_helper\_t (algo\_comm\_t, const std::string &)
- void getvar ()

# **Public Attributes**

- · algo\_comm\_t ac
- std::string name
- std::string username
- MHASignal::uint\_vector\_t size
- bool is\_complex

## **Protected Attributes**

comm\_var\_t acvar

## 5.127.1 Constructor & Destructor Documentation

#### **5.127.2** Member Function Documentation

5.127.2.1 void MHA\_AC::ac2matrix\_helper\_t::getvar ( )

#### 5.127.3 Member Data Documentation


- 5.127.3.1 algo\_comm\_t MHA\_AC::ac2matrix\_helper\_t::ac
- 5.127.3.2 std::string MHA\_AC::ac2matrix\_helper\_t::name
- 5.127.3.3 std::string MHA\_AC::ac2matrix\_helper\_t::username
- 5.127.3.4 MHASignal::uint\_vector\_t MHA\_AC::ac2matrix\_helper\_t::size
- 5.127.3.5 bool MHA\_AC::ac2matrix\_helper\_t::is\_complex
- **5.127.3.6 comm\_var\_t** MHA\_AC::ac2matrix\_helper\_t::acvar [protected]

The documentation for this class was generated from the following files:

- mha\_algo\_comm.h
- mha\_algo\_comm.cpp
- 5.128 MHA\_AC::ac2matrix\_t Class Reference

Copy AC variable to a matrix.

Inheritance diagram for MHA\_AC::ac2matrix\_t:

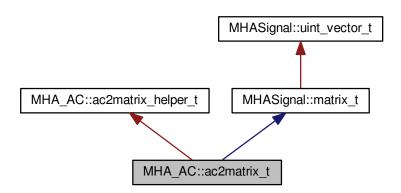

**Public Member Functions** 

ac2matrix\_t (algo\_comm\_t ac, const std::string &name)

Constructor.

void update ()

Update contents of the matrix from the AC space.

• const std::string & getname () const

Return name of AC variable/matrix.

• const std::string & getusername () const

Return user specified name of AC variable/matrix.

• void insert (algo\_comm\_t ac)

Insert matrix into an AC space (other than source AC space)

**Additional Inherited Members** 

5.128.1 Detailed Description

Copy AC variable to a matrix.

This class constructs a matrix of same size as an AC variable and can copy the AC variable to itself. The **update()** (p. 393) function is real-time safe.

5.128.2 Constructor & Destructor Documentation

Constructor.

#### **Parameters**

ac	AC handle
name	Name of AC variable to be copied

5.128.3 Member Function Documentation

5.128.3.1 void MHA\_AC::ac2matrix\_t::update ( )

Update contents of the matrix from the AC space.

This function is real-time safe. The copy operation performance is of the order of the number of elements in the matrix.

5.128.3.2 const std::string& MHA\_AC::ac2matrix\_t::getname( ) const [inline]

Return name of AC variable/matrix.

5.128.3.3 const std::string& MHA\_AC::ac2matrix\_t::getusername( ) const [inline]

Return user specified name of AC variable/matrix.

```
5.128.3.4 void MHA_AC::ac2matrix_t::insert ( algo_comm_t ac )
```

Insert matrix into an AC space (other than source AC space)

#### **Parameters**

```
ac | AC space handle to insert data
```

#### Note

The AC variable data buffer points to the data of the matrix. Modifications of the AC variable directly modify the data of the matrix; after deletion of the matrix, the data buffer is invalid.

The documentation for this class was generated from the following files:

- · mha algo comm.h
- mha algo comm.cpp

5.129 MHA\_AC::acspace2matrix\_t Class Reference

Copy all or a subset of all numeric AC variables into an array of matrixes.

**Public Member Functions** 

- acspace2matrix\_t (algo\_comm\_t ac, const std::vector< std::string > &names)
   Constructor.
- acspace2matrix\_t (const MHA\_AC::acspace2matrix\_t &src)

Constructor with initialization from an instance.

- ∼acspace2matrix t ()
- MHA\_AC::acspace2matrix\_t & operator= (const MHA\_AC::acspace2matrix\_t &src)

  Copy all contents (deep copy).
- MHA\_AC::ac2matrix\_t & operator[] (unsigned int k)
   Access operator.

- const MHA\_AC::ac2matrix\_t & operator[] (unsigned int k) const
   Constant access operator.
- void update ()

Update function.

• unsigned int **size** () const

Number of matrixes in AC space.

• unsigned int frame () const

Actual frame number.

void insert (algo\_comm\_t ac)

Insert AC space copy into an AC space (other than source AC space)

#### **Private Attributes**

- unsigned int len
- MHA\_AC::ac2matrix\_t \*\* data
- · unsigned int frameno

## 5.129.1 Detailed Description

Copy all or a subset of all numeric AC variables into an array of matrixes.

5.129.2 Constructor & Destructor Documentation

#### Constructor.

Scan all given AC variables and allocate corresponding matrixes.

### **Parameters**

ac	AC handle.
names	Names of AC variables, or empty for all.

Constructor with initialization from an instance.

## **Parameters**

src Instance to be copied.

5.129.2.3 MHA\_AC::acspace2matrix\_t::~acspace2matrix\_t ( )

5.129.3 Member Function Documentation

Copy all contents (deep copy).

## **Parameters**

src Array of matrixes to be copied.

Access operator.

### **Parameters**

k index into array; should not exceed **size()** (p. 397)-1.

# Return values

Reference to matrix.

Constant access operator.

## **Parameters**

k index into array; should not exceed **size()** (p. 397)-1.

## **Return values**

Constant reference to matrix.

```
5.129.3.4 void MHA_AC::acspace2matrix_t::update() [inline]
```

Update function.

This function updates all matrixes from their corresponding AC variables. It can be called from the MHA Framework prepare function or in the processing callback.

```
5.129.3.5 unsigned int MHA_AC::acspace2matrix_t::size( ) const [inline]
```

Number of matrixes in AC space.

```
5.129.3.6 unsigned int MHA_AC::acspace2matrix_t::frame( ) const [inline]
```

Actual frame number.

```
5.129.3.7 void MHA_AC::acspace2matrix_t::insert ( algo_comm_t ac )
```

Insert AC space copy into an AC space (other than source AC space)

#### **Parameters**

```
ac AC space handle to insert data
```

5.129.4 Member Data Documentation

```
5.129.4.1 unsigned int MHA_AC::acspace2matrix_t::len [private]
```

```
5.129.4.2 MHA_AC::ac2matrix_t** MHA_AC::acspace2matrix_t::data [private]
```

**5.129.4.3 unsigned int MHA\_AC::acspace2matrix\_t::frameno** [private]

The documentation for this class was generated from the following files:

- mha\_algo\_comm.h
- mha\_algo\_comm.cpp

5.130 MHA\_AC::double\_t Class Reference

Insert a double precision floating point variable into the AC space.

## **Public Member Functions**

```
    double_t (algo_comm_t, std::string, double=0)
    ~double t ()
```

#### **Public Attributes**

· double data

Floating point value variable.

#### **Private Attributes**

algo\_comm\_t ac

# 5.130.1 Detailed Description

Insert a double precision floating point variable into the AC space.

The variable is automatically removed on destruction.

```
5.130.2 Constructor & Destructor Documentation
```

```
5.130.2.2 MHA_AC::double_t::\simdouble_t()
```

5.130.3 Member Data Documentation

5.130.3.1 double MHA\_AC::double\_t::data

Floating point value variable.

```
5.130.3.2 algo_comm_t MHA_AC::double_t::ac [private]
```

The documentation for this class was generated from the following files:

```
mha_algo_comm.h
```

mha\_algo\_comm.cpp

# 5.131 MHA\_AC::float\_t Class Reference

Insert a float point variable into the AC space.

**Public Member Functions** 

- float\_t (algo\_comm\_t, std::string, float=0)
   Constructor.
- ~float\_t ()

#### **Public Attributes**

float data

Floating point value variable.

**Private Attributes** 

· algo\_comm\_t ac

# 5.131.1 Detailed Description

Insert a float point variable into the AC space.

The variable is automatically removed on destruction.

5.131.2 Constructor & Destructor Documentation

Constructor.

```
5.131.2.2 MHA_AC::float_t::~float_t()
```

5.131.3 Member Data Documentation

5.131.3.1 float MHA\_AC::float\_t::data

Floating point value variable.

```
5.131.3.2 algo_comm_t MHA_AC::float_t::ac [private]
```

The documentation for this class was generated from the following files:

- mha\_algo\_comm.h
- mha\_algo\_comm.cpp

# 5.132 MHA\_AC::int\_t Class Reference

Insert a integer variable into the AC space.

**Public Member Functions** 

```
    int_t (algo_comm_t, std::string, int=0)
    ∼int_t ()
```

## **Public Attributes**

• int data

Integer value variable.

## **Private Attributes**

· algo\_comm\_t ac

# 5.132.1 Detailed Description

Insert a integer variable into the AC space.

The variable is automatically removed on destruction.

5.132.2 Constructor & Destructor Documentation

- 5.132.2.2 MHA\_AC::int\_t::~int\_t ( )
- 5.132.3 Member Data Documentation
- 5.132.3.1 int MHA\_AC::int\_t::data

Integer value variable.

5.132.3.2 algo\_comm\_t MHA\_AC::int\_t::ac [private]


The documentation for this class was generated from the following files:

- mha\_algo\_comm.h
- mha\_algo\_comm.cpp

# 5.133 MHA\_AC::spectrum\_t Class Reference

Insert a MHASignal::spectrum\_t (p. 775) class into the AC space.

Inheritance diagram for MHA\_AC::spectrum\_t:

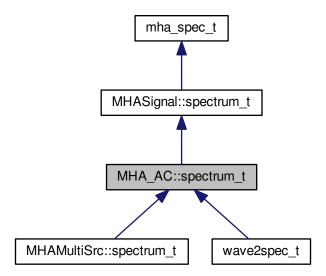

## **Public Member Functions**

spectrum\_t (algo\_comm\_t ac, std::string name, unsigned int bins, unsigned int channels, bool insert\_now)

Create the AC variable.

- ~spectrum\_t ()
- void **insert** ()

Insert AC variable into AC space.

# **Protected Attributes**

- algo\_comm\_t ac
- std::string name

## **Additional Inherited Members**

# 5.133.1 Detailed Description

Insert a MHASignal::spectrum\_t (p. 775) class into the AC space.

The variable is automatically removed on destruction.

## 5.133.2 Constructor & Destructor Documentation

Create the AC variable.

#### **Parameters**

ac	AC handle
name	Name of variable in AC space
bins	Number of FFT bins in the waveform_t (p. 404) class
channels	Number of audio channels in the waveform_t (p. 404) class
insert_now	Insert implicitely in the constructor (true) or explicitely in the <b>insert()</b> (p. 402) function (false)

```
5.133.2.2 MHA_AC::spectrum_t::~spectrum_t ( void ) [virtual]
```

Reimplemented from **MHASignal::spectrum\_t** (p. 777).

5.133.3 Member Function Documentation

5.133.3.1 void MHA\_AC::spectrum\_t::insert ( )

Insert AC variable into AC space.

5.133.4 Member Data Documentation

5.133.4.1 algo\_comm\_t MHA\_AC::spectrum\_t::ac [protected]


**5.133.4.2** std::string MHA\_AC::spectrum\_t::name [protected]

The documentation for this class was generated from the following files:

- mha\_algo\_comm.h
- mha\_algo\_comm.cpp

5.134 MHA\_AC::stat\_t Class Reference

Inheritance diagram for MHA\_AC::stat\_t:

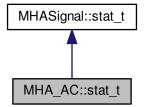

#### **Public Member Functions**

- stat\_t (algo\_comm\_t ac, const std::string &name, const unsigned int &frames, const unsigned int &channels, bool insert\_now)
- void update ()
- void insert ()

#### **Private Attributes**

- MHA\_AC::waveform\_t mean
- MHA\_AC::waveform\_t std

## 5.134.1 Constructor & Destructor Documentation

5.134.2 Member Function Documentation

5.134.2.1 void MHA\_AC::stat\_t::update ( )

5.134.2.2 void MHA\_AC::stat\_t::insert ( )

5.134.3 Member Data Documentation

5.134.3.1 MHA\_AC::waveform\_t MHA\_AC::stat\_t::mean [private]


**5.134.3.2** MHA\_AC::waveform\_t MHA\_AC::stat\_t::std [private]

The documentation for this class was generated from the following files:

- mha\_algo\_comm.h
- mha\_algo\_comm.cpp

# 5.135 MHA\_AC::waveform\_t Class Reference

Insert a **MHASignal::waveform\_t** (p. 787) class into the AC space. Inheritance diagram for MHA\_AC::waveform\_t:

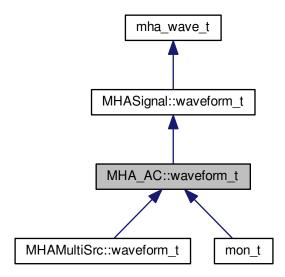

## **Public Member Functions**

 waveform\_t (algo\_comm\_t ac, std::string name, unsigned int frames, unsigned int channels, bool insert\_now)

Create the AC variable.

- ~waveform t ()
- void insert ()

Insert AC variable into AC space.

#### **Protected Attributes**

- algo\_comm\_t ac
- std::string name

#### **Additional Inherited Members**

# 5.135.1 Detailed Description

Insert a **MHASignal::waveform\_t** (p. 787) class into the AC space.

The variable is automatically removed on destruction.

### 5.135.2 Constructor & Destructor Documentation

Create the AC variable.

#### **Parameters**

ac	AC handle	
name	Name of variable in AC space	
frames	Number of frames in the waveform_t (p. 404) class	
channels	Number of audio channels in the waveform_t (p. 404) class	
insert_now	Insert implicitely in the constructor (true) or explicitely in the <b>insert()</b> (p. 406) function (false)	

```
5.135.2.2 MHA_AC::waveform_t::\simwaveform_t ( void ) [virtual]
```

Reimplemented from MHASignal::waveform\_t (p. 790).

5.135.3 Member Function Documentation

```
5.135.3.1 void MHA_AC::waveform_t::insert ( )
```

Insert AC variable into AC space.

5.135.4 Member Data Documentation

```
5.135.4.1 algo_comm_t MHA_AC::waveform_t::ac [protected]
```

```
5.135.4.2 std::string MHA_AC::waveform_t::name [protected]
```

The documentation for this class was generated from the following files:

- mha\_algo\_comm.h
- mha\_algo\_comm.cpp

# 5.136 mha\_audio\_descriptor\_t Struct Reference

Description of an audio fragment (planned as a replacement of **mhaconfig t** (p. 480)).

## **Public Attributes**

unsigned int n\_samples

Number of samples.

unsigned int n channels

Number of audio channels.

unsigned int n\_freqs

Number of frequency bands.

unsigned int is\_complex

Flag about sample type.

mha\_real\_t dt

Time distance between samples (only equidistant samples allowed)

mha\_real\_t \* cf

Center frequencies of frequency bands.

mha\_real\_t \* chdir

Hint on source direction of channel, values below zero is left, values above zero is right, zero means unknown.

5.136.1 Detailed Description

Description of an audio fragment (planned as a replacement of **mhaconfig\_t** (p. 480)).

5.136.2 Member Data Documentation

5.136.2.1 unsigned int mha\_audio\_descriptor\_t::n\_samples

Number of samples.

5.136.2.2 unsigned int mha\_audio\_descriptor\_t::n\_channels

Number of audio channels.

5.136.2.3 unsigned int mha\_audio\_descriptor\_t::n\_freqs

Number of frequency bands.

5.136.2.4 unsigned int mha\_audio\_descriptor\_t::is\_complex

Flag about sample type.

5.136.2.5 mha real t mha\_audio\_descriptor\_t::dt

Time distance between samples (only equidistant samples allowed)

5.136.2.6 mha\_real\_t\* mha\_audio\_descriptor\_t::cf

Center frequencies of frequency bands.

5.136.2.7 mha\_real\_t\* mha\_audio\_descriptor\_t::chdir

Hint on source direction of channel, values below zero is left, values above zero is right, zero means unknown.

The documentation for this struct was generated from the following file:

· mha.h

5.137 mha\_audio\_t Struct Reference

An audio fragment in the openMHA (planned as a replacement of **mha\_wave\_t** (p. 472) and **mha\_spec\_t** (p. 442)).

#### **Public Attributes**

mha\_audio\_descriptor\_t descriptor

Dimension and description of the data.

• mha real t \* rdata

Data pointer if flag **mha\_audio\_descriptor\_t::is\_complex** (p. 407) is unset.

mha complex t \* cdata

Data pointer if flag mha\_audio\_descriptor\_t::is\_complex (p. 407) is set.

#### 5.137.1 Detailed Description

An audio fragment in the openMHA (planned as a replacement of **mha\_wave\_t** (p. 472) and **mha\_spec\_t** (p. 442)).

The data alignment is  $(t_0, c_0, f_0), (t_0, c_0, f_1), \dots, (t_0, c_0, f_{freqs}), (t_0, c_1, f_0), \dots$  This allows a direct cast of the current **mha\_wave\_t** (p. 472) and **mha\_spec\_t** (p. 442) data pointers into corresponding **mha audio t** (p. 407) objects.

5.137.2 Member Data Documentation

5.137.2.1 mha audio descriptor t mha\_audio\_t::descriptor

Dimension and description of the data.

5.137.2.2 mha real t\* mha\_audio\_t::rdata

Data pointer if flag **mha\_audio\_descriptor\_t::is\_complex** (p. 407) is unset.

5.137.2.3 mha complex t\* mha\_audio\_t::cdata

Data pointer if flag mha audio descriptor t::is complex (p. 407) is set.

The documentation for this struct was generated from the following file:

· mha.h

5.138 mha\_channel\_info\_t Struct Reference

Channel information structure.

## **Public Attributes**

• int id

channel id

• char idstr [32]

channel id

unsigned int side

side (left/right)

mha\_direction\_t dir

source direction

mha\_real\_t peaklevel

Peak level corresponds to this SPL (dB) level.

# 5.138.1 Detailed Description

Channel information structure.

5.138.2 Member Data Documentation

5.138.2.1 int mha\_channel\_info\_t::id

channel id

5.138.2.2 char mha\_channel\_info\_t::idstr[32]

channel id

5.138.2.3 unsigned int mha\_channel\_info\_t::side

side (left/right)

5.138.2.4 mha\_direction\_t mha\_channel\_info\_t::dir

source direction

5.138.2.5 mha\_real\_t mha\_channel\_info\_t::peaklevel

Peak level corresponds to this SPL (dB) level.

The documentation for this struct was generated from the following file:

## · mha.h

# 5.139 mha\_complex\_t Struct Reference

Type for complex floating point values.

**Public Attributes** 

- mha\_real\_t re
   Real part.
- mha\_real\_t im
  Imaginary part.

## 5.139.1 Detailed Description

Type for complex floating point values.

5.139.2 Member Data Documentation

5.139.2.1 mha\_real\_t mha\_complex\_t::re

Real part.

5.139.2.2 mha\_real\_t mha\_complex\_t::im

Imaginary part.

The documentation for this struct was generated from the following file:

· mha.h

# 5.140 mha\_dblbuf\_t< FIFO > Class Template Reference

The doublebuffer adapts blocksizes between an outer process, which provides input data and takes output data, and an inner process, which processes the input signal and generates output data using a different block size than the outer process.

# **Public Types**

typedef FIFO::value\_type value\_type
 The datatype exchanged by the FIFO and this doublebuffer.

#### **Public Member Functions**

- virtual unsigned get\_inner\_size () const
- virtual unsigned get\_outer\_size () const
- virtual unsigned get\_delay () const
- virtual unsigned get\_fifo\_size () const
- virtual unsigned get input channels () const
- · virtual unsigned get output channels () const
- virtual unsigned get\_input\_fifo\_fill\_count () const
- virtual unsigned get\_output\_fifo\_fill\_count () const
- virtual unsigned get\_input\_fifo\_space () const
- virtual unsigned get\_output\_fifo\_space () const
- virtual MHA\_Error \* get\_inner\_error () const
- virtual void provoke\_inner\_error (const MHA\_Error &)
- virtual void provoke\_outer\_error (const MHA\_Error &)
- mha\_dblbuf\_t (unsigned outer\_size, unsigned inner\_size, unsigned delay, unsigned input\_channels, unsigned output\_channels, const value\_type &delay\_data)

Constructor creates FIFOs with specified delay.

- virtual ~mha\_dblbuf\_t ()
- virtual void process (const value\_type \*input\_signal, value\_type \*output\_signal, un-signed count)

The outer process has to call this method to propagate the input signal to the inner process, and receives back the output signal.

virtual void input (value\_type \*input\_signal)

The inner process has to call this method to receive its input signal.

virtual void output (const value\_type \*output\_signal)

The outer process has to call this method to deliver its output signal.

# **Private Attributes**

unsigned outer size

The block size used by the outer process.

• unsigned inner size

The block size used by the inner process.

· unsigned delay

The delay introduced by bidirectional buffer size adaptation.

• unsigned fifo\_size

The size of each of the FIFOs.

unsigned input\_channels

The number of input channels.

unsigned output\_channels

The number of output channels.

FIFO input\_fifo

The FIFO for transporting the input signal from the outer process to the inner process.

FIFO output fifo

The FIFO for transporting the output signal from the inner process to the outer process.

MHA\_Error \* inner\_error

Owned copy of exception to be thrown in inner thread.

MHA\_Error \* outer\_error

Owned copy of exception to be thrown in outer thread.

## 5.140.1 Detailed Description

```
template < class FIFO > class mha dblbuf t < FIFO >
```

The doublebuffer adapts blocksizes between an outer process, which provides input data and takes output data, and an inner process, which processes the input signal and generates output data using a different block size than the outer process.

This class introduces the channels concept. Input and output may have different channel counts.

5.140.2 Member Typedef Documentation

5.140.2.1 template < class FIFO > typedef FIFO::value\_type mha\_dblbuf\_t < FIFO >::value\_type

The datatype exchanged by the FIFO and this doublebuffer.

#### 5.140.3 Constructor & Destructor Documentation

Constructor creates FIFOs with specified delay.

## Warning

The doublebuffer may block or raise an exception if the delay is too small. To avoid this, the delay should be

$$delay >= (inner\_size - gcd(inner\_size, outer\_size))$$

.

### **Parameters**

outer_size	The block size used by the outer process.
inner_size	The block size used by the inner process.
delay	The total delay
input_channels	Number of input channels
output_channels	Number of output channels
delay_data	The delay consists of copies of this value.

5.140.3.2 template < class FIFO > mha\_dblbuf\_t < FIFO >::~mha\_dblbuf\_t ( ) [virtual] 5.140.4 Member Function Documentation 5.140.4.1 template < class FIFO > virtual unsigned mha\_dblbuf\_t < FIFO >::get\_inner\_size ( ) const [inline], [virtual] 5.140.4.2 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get\_outer\_size ( ) const [inline],[virtual] 5.140.4.3 template < class FIFO > virtual unsigned mha\_dblbuf\_t < FIFO >::get\_delay ( ) const [inline],[virtual] 5.140.4.4 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get\_fifo\_size ( ) const [inline],[virtual] 5.140.4.5 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get\_input\_channels ( ) const [inline],[virtual] 5.140.4.6 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get output channels ( ) const [inline],[virtual] 5.140.4.7 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get\_input\_fifo\_fill\_count ( )const [inline],[virtual] 5.140.4.8 template < class FIFO > virtual unsigned mha\_dblbuf\_t < FIFO >::get\_output\_fifo\_fill\_count ( ) const [inline], [virtual] 5.140.4.9 template < class FIFO > virtual unsigned mha dblbuf t < FIFO >::get\_input\_fifo\_space ( ) const [inline],[virtual]

5.140.4.10 template < class FIFO > virtual unsigned mha\_dblbuf\_t < FIFO >::get\_output\_fifo\_space (

)const [inline],[virtual]

The outer process has to call this method to propagate the input signal to the inner process, and receives back the output signal.

#### **Parameters**

input_signal	Pointer to the input signal array.
output_signal	Pointer to the output signal array.
count	The number of data instances provided and expected, lower or equal to inner_size given to constructor.

# **Exceptions**

<b>MHA_Error</b> (p. 423)	When count is > outer_size as given to constructor or the underlying
	fifo implementation detects an error.

```
5.140.4.15 template < class FIFO > void mha_dblbuf_t < FIFO >::input ( value_type * input_signal ) [virtual]
```

The inner process has to call this method to receive its input signal.

## **Parameters**

Innut ciana	Array where the doublebuffer can store the signal.
iliput sigila	Array where the doublebuller can store the signal.

# **Exceptions**

MHA_Error (p. 423) When the underlying fifo implementation detects an e
---

The outer process has to call this method to deliver its output signal.

#### **Parameters**

output\_signal Array from which doublebuffer reads outputsignal.

## **Exceptions**

#### 5.140.5 Member Data Documentation

**5.140.5.1** template < class FIFO > unsigned mha\_dblbuf\_t < FIFO >::outer\_size [private]

The block size used by the outer process.

**5.140.5.2** template < class FIFO > unsigned mha\_dblbuf\_t < FIFO >::inner\_size [private]

The block size used by the inner process.

5.140.5.3 template < class FIFO > unsigned mha\_dblbuf\_t < FIFO >::delay [private]

The delay introduced by bidirectional buffer size adaptation.

**5.140.5.4** template < class FIFO > unsigned mha\_dblbuf\_t < FIFO >::fifo\_size [private]

The size of each of the FIFOs.

5.140.5.5 template < class FIFO > unsigned mha\_dblbuf\_t < FIFO >::input\_channels [private]

The number of input channels.

**5.140.5.6** template < class FIFO > unsigned mha\_dblbuf\_t < FIFO >::output\_channels [private]

The number of output channels.

**5.140.5.7** template < class FIFO > FIFO mha\_dblbuf\_t < FIFO >::input\_fifo [private]

The FIFO for transporting the input signal from the outer process to the inner process.

5.140.5.8 template < class FIFO > FIFO mha\_dblbuf\_t < FIFO >::output\_fifo [private]

The FIFO for transporting the output signal from the inner process to the outer process.

5.140.5.9 template < class FIFO > MHA\_Error\* mha\_dblbuf\_t < FIFO >::inner\_error [private]

Owned copy of exception to be thrown in inner thread.

5.140.5.10 template < class FIFO > MHA\_Error\* mha\_dblbuf\_t < FIFO >::outer\_error [private]

Owned copy of exception to be thrown in outer thread.

The documentation for this class was generated from the following files:

- · mha\_fifo.h
- mha\_fifo.cpp

5.141 mha\_direction\_t Struct Reference

Channel source direction structure.

**Public Attributes** 

- mha\_real\_t azimuth
   azimuth in radiants
- mha\_real\_t elevation
   elevation in radiants
- mha\_real\_t distance distance in meters

5.141.1 Detailed Description

Channel source direction structure.

5.141.2 Member Data Documentation

5.141.2.1 mha real t mha\_direction\_t::azimuth

azimuth in radiants

5.141.2.2 mha\_real\_t mha\_direction\_t::elevation

elevation in radiants

5.141.2.3 mha\_real\_t mha\_direction\_t::distance

distance in meters


The documentation for this struct was generated from the following file:

#### · mha.h

5.142 mha\_drifter\_fifo\_t < T > Class Template Reference

A FIFO class for blocksize adaptation without Synchronization.

Inheritance diagram for mha\_drifter\_fifo\_t< T >:

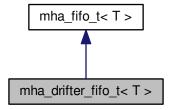

## **Public Member Functions**

- virtual void write (const T \*data, unsigned count)
   write data to fifo
- virtual void read (T \*buf, unsigned count)

Read data from fifo.

virtual unsigned get\_fill\_count () const

Return fill\_count, adding **mha\_drifter\_fifo\_t**<**T**>::startup\_zeros (p. 423) to the number of samples actually in the fifo's buffer.

virtual unsigned get\_available\_space () const

Return available space, subtracting number of **mha\_drifter\_fifo\_t**<**T**>::**startup\_zeros** (p. 423) from the available\_space actually present in the fifo's buffer.

virtual unsigned get des fill count () const

The desired fill count of this fifo.

virtual unsigned get\_min\_fill\_count () const

The minimum fill count of this fifo.

virtual void stop ()

Called by mha\_drifter\_fifo\_t<T>::read (p. 420) or mha\_drifter\_fifo\_t<T>::write (p. 419) when their xrun in succession counter exceeds its limit.

virtual void starting ()

Called by  $mha\_drifter\_fifo\_t < T > ::read$  (p. 420) or  $mha\_drifter\_fifo\_t < T > ::write$  (p. 419) when the respective flag ( $mha\_drifter\_fifo\_t < T > ::reader\_started$  (p. 422) or  $mha\_drifter \leftarrow \_fifo\_t < T > ::writer\_started$  (p. 421)) is about to be toggled from false to true.

mha\_drifter\_fifo\_t (unsigned min\_fill\_count, unsigned desired\_fill\_count, unsigned max\_fill\_count)

Create drifter FIFO.

mha\_drifter\_fifo\_t (unsigned min\_fill\_count, unsigned desired\_fill\_count, unsigned max fill count, const T &t)

Create drifter FIFO where all (initially unused) copies of T are initialized as copies of t.

#### **Private Attributes**

const unsigned minimum\_fill\_count

The minimum fill count of this fifo.

const unsigned desired\_fill\_count

The desired fill count of the fifo.

bool writer started

Flag set to true when write is called the first time.

bool reader\_started

Flag set to true when read is called for the first time.

unsigned writer xruns total

The number of xruns seen by the writer since object instantiation.

· unsigned reader xruns total

The number of xruns seen by the reader since object instantiation.

unsigned writer\_xruns\_since\_start

The number of xruns seen by the writer since the last start of processing.

unsigned reader\_xruns\_since\_start

The number of xruns seen by the reader since the last start of processing.

unsigned writer xruns in succession

The number of xruns seen by the writer in succession.

unsigned reader\_xruns\_in\_succession

The number of xruns seen by the reader in succession.

unsigned maximum writer xruns in succession before stop

A limit to the number of xruns seen in succession during write before the data transmission through the FIFO is stopped.

unsigned maximum\_reader\_xruns\_in\_succession\_before\_stop

A limit to the number of xruns seen in succession during read before the data transmission through the FIFO is stopped.

mha fifo t< T>::value type null data

The value used in place of missing data.

## unsigned startup\_zeros

When processing starts, that is when both mha\_drifter\_fifo\_t<T>::reader\_started (p. 422) and mha\_drifter\_fifo\_t<T>::writer\_started (p. 421) are true, then first mha\_drifter\_fifo—t<T>::desired\_fill\_count (p. 421) instances of mha\_drifter\_fifo\_t<T>::null\_data (p. 423) are delivered to the reader.

**Additional Inherited Members** 

5.142.1 Detailed Description

```
template < class T> class mha drifter fifo t< T>
```

A FIFO class for blocksize adaptation without Synchronization.

Features: delay concept (desired, minimum and maximum delay), drifting support by throwing away data or inserting zeroes.

5.142.2 Constructor & Destructor Documentation

Create drifter FIFO.

Create drifter FIFO where all (initially unused) copies of T are initialized as copies of t.

5.142.3 Member Function Documentation

```
5.142.3.1 template < class T > void mha_drifter_fifo_t < T >::write ( const T * data, unsigned count ) [virtual]
```

write data to fifo

Sets writer\_started (p. 421) to true.

When processing has started, i.e. both **reader\_started** (p. 422) and **writer\_started** (p. 421) are true, write specified ammount of data to the fifo. If there is not enough space available, then the exceeding data is lost and the writer xrun counters are increased.

Processing is stopped when writer\_xruns\_in\_succession (p. 422) exceeds maximum\_ writer\_xruns\_in\_succession\_before\_stop (p. 422).

#### **Parameters**

data	Pointer to source data.
count	Number of instances to copy

Reimplemented from  $mha_fifo_t < T > (p. 432)$ .

```
5.142.3.2 template < class T > void mha_drifter_fifo_t< T >::read ( T * buf, unsigned count ) [virtual]
```

Read data from fifo.

Sets reader\_started (p. 422) to true.

When processing has started, i.e. both **reader\_started** (p. 422) and **writer\_started** (p. 421) are true, then read specified ammount of data from the fifo. As long as **startup\_zeros** (p. 423) is > 0, **null\_data** (p. 423) is delivered to the reader and **startup\_zeros** (p. 423) is diminished. Only when **startup\_zeros** (p. 423) has reached 0, data is actually read from the fifo's buffer.

If the read would cause the fifo's fill count to drop below **minimum\_fill\_count** (p. 421), then only so much data are read that **minimum\_fill\_count** (p. 421) entries remain in the fifo, the missing data is replaced with **null\_data** (p. 423), and the reader xrun counters are increased.

Processing is stopped when reader\_xruns\_in\_succession (p. 422) exceeds maximum\_ reader\_xruns\_in\_succession\_before\_stop (p. 422).

#### **Parameters**

buf	Pointer to the target buffer		
count	Number of instances to copy		

Reimplemented from **mha fifo** t < T > (p. 433).

```
5.142.3.3 template < class T > unsigned mha_drifter_fifo_t < T >::get_fill_count ( ) const [virtual]
```

Return fill\_count, adding **mha\_drifter\_fifo\_t**<**T**>::**startup\_zeros** (p. 423) to the number of samples actually in the fifo's buffer.

Reimplemented from  $mha_fifo_t < T > (p. 433)$ .

```
5.142.3.4 template < class T > unsigned mha_drifter_fifo_t< T >::get_available_space ( ) const [virtual]
```

Return available space, subtracting number of **mha\_drifter\_fifo\_t**<**T**>::**startup\_zeros** (p. 423) from the available space actually present in the fifo's buffer.

TODO: uncertain if this is a good idea.

Reimplemented from  $mha_fifo_t < T > (p. 433)$ .

5.142.3.5 template < class T > virtual unsigned mha\_drifter\_fifo\_t < T >::get\_des\_fill\_count() const [inline], [virtual]

The desired fill count of this fifo.

5.142.3.6 template < class T > virtual unsigned mha\_drifter\_fifo\_t< T > ::get\_min\_fill\_count() const [inline], [virtual]

The minimum fill count of this fifo.

```
5.142.3.7 template < class T > void mha_drifter_fifo_t < T >::stop() [virtual]
```

Called by mha\_drifter\_fifo\_t<T>::read (p. 420) or mha\_drifter\_fifo\_t<T>::write (p. 419) when their xrun in succession counter exceeds its limit.

Called by **read** (p. 420) or **write** (p. 419) when their xrun in succession counter exceeds its limit.

May also be called explicitly.

```
5.142.3.8 template < class T > void mha_drifter_fifo_t < T >::starting ( ) [virtual]
```

Called by  $mha\_drifter\_fifo\_t < T>::read$  (p. 420) or  $mha\_drifter\_fifo\_t < T>::write$  (p. 419) when the respective flag ( $mha\_drifter\_fifo\_t < T>::reader\_started$  (p. 422) or  $mha\_drifter\_temperature$  (p. 421)) is about to be toggled from false to true.

The fifo's buffer is emptied, this method resets **startup\_zeros** (p. 423) to **desired\_fill\_count** (p. 421), and it also resets **reader\_xruns\_since\_start** (p. 422) and **writer\_xruns\_since\_start** (p. 422) to 0.

5.142.4 Member Data Documentation

5.142.4.1 template 
$$<$$
 class T  $>$  const unsigned mha\_drifter\_fifo\_t  $<$  T  $>$ ::minimum\_fill\_count [private]

The minimum fill count of this fifo.

The desired fill count of the fifo.

The fifo is initialized with this ammount of data when data transmission starts.

**5.142.4.3** template < class T > bool mha\_drifter\_fifo\_t < T >::writer\_started [private]

Flag set to true when write is called the first time.

**5.142.4.4** template < class T > bool mha\_drifter\_fifo\_t < T > ::reader\_started [private]

Flag set to true when read is called for the first time.

**5.142.4.5** template < class T > unsigned mha drifter fifo t < T >::writer\_xruns\_total [private]

The number of xruns seen by the writer since object instantiation.

**5.142.4.6** template < class T > unsigned mha\_drifter\_fifo\_t < T >::reader\_xruns\_total [private]

The number of xruns seen by the reader since object instantiation.

5.142.4.7 template < class T > unsigned mha\_drifter\_fifo\_t < T >::writer\_xruns\_since\_start [private]

The number of xruns seen by the writer since the last start of processing.

5.142.4.8 template < class T > unsigned mha\_drifter\_fifo\_t < T >::reader\_xruns\_since\_start [private]

The number of xruns seen by the reader since the last start of processing.

5.142.4.9 template < class T > unsigned mha\_drifter\_fifo\_t < T >::writer\_xruns\_in\_succession [private]

The number of xruns seen by the writer in succession.

Reset to 0 every time a write succeeds without xrun.

5.142.4.10 template < class T > unsigned mha\_drifter\_fifo\_t < T >::reader\_xruns\_in\_succession [private]

The number of xruns seen by the reader in succession.

Reset to 0 every time a read succeeds without xrun.

5.142.4.11 template < class T > unsigned mha\_drifter\_fifo\_t < T >::maximum\_writer\_xruns\_in\_ $\leftarrow$  succession\_before\_stop [private]

A limit to the number of xruns seen in succession during write before the data transmission through the FIFO is stopped.

5.142.4.12 template < class T > unsigned mha\_drifter\_fifo\_t < T >::maximum\_reader\_xruns\_in\_ $\leftarrow$  succession\_before\_stop [private]

A limit to the number of xruns seen in succession during read before the data transmission through the FIFO is stopped.

5.142.4.13 template < class T > mha\_fifo\_t < T > :: value\_type mha\_drifter\_fifo\_t < T > :: null\_data [private]

The value used in place of missing data.

**5.142.4.14** template < class T > unsigned mha\_drifter\_fifo\_t < T >::startup\_zeros [private]

When processing starts, that is when both  $mha\_drifter\_fifo\_t < T>::reader\_started$  (p. 422) and  $mha\_drifter\_fifo\_t < T>::writer\_started$  (p. 421) are true, then first  $mha\_drifter\_fifo\_t < \leftarrow T>::desired\_fill\_count$  (p. 421) instances of  $mha\_drifter\_fifo\_t < T>::null\_data$  (p. 423) are delivered to the reader.

These **null\_data** (p. 423) instances are not transmitted through the fifo because filling the fifo with enough **null\_data** (p. 423) might not be realtime safe and this filling has to be initiated by **starting** (p. 421) or **stop** (p. 421) (this implementation: **starting** (p. 421)) which are be called with realtime constraints.

The documentation for this class was generated from the following file:

· mha\_fifo.h

## 5.143 MHA\_Error Class Reference

Error reporting exception class.

Inherits exception.

**Public Member Functions** 

- MHA\_Error (const char \*file, int line, const char \*fmt,...)

  Create an instance of a MHA\_Error (p. 423).
- MHA\_Error (const MHA\_Error &)
- MHA\_Error & operator= (const MHA\_Error &)
- $\sim$ MHA Error () throw ()
- const char \* get\_msg () const

Return the error message without source position.

const char \* get\_longmsg () const

Return the error message with source position.

const char \* what () const throw ()
 overwrite std::execption::what()

## **Private Attributes**

- char \* msg
- char \* longmsg

## 5.143.1 Detailed Description

Error reporting exception class.

This class is used for error handling in the openMHA. It is used by the openMHA kernel and by the openMHA toolbox library. Please note that exceptions should not be used accross ANSI-C interfaces. It is necessary to catch exceptions within the library.

The MHA\_Error (p. 423) class holds source file name, line number and an error message.

5.143.2 Constructor & Destructor Documentation

```
5.143.2.1 MHA_Error::MHA_Error ( const char * s_file, int I, const char * fmt, ... )
```

Create an instance of a MHA\_Error (p. 423).

#### **Parameters**

s_file	source file name (FILE)			
1	source line (LINE)			
fmt	format string for error message (as in printf)			

5.143.3.3 const char\* MHA\_Error::get\_longmsg ( ) const [inline]

Return the error message with source position.

5.143.3.4 const char\* MHA\_Error::what ( ) const throw ) [inline]

overwrite std::execption::what()

5.143.4 Member Data Documentation

**5.143.4.1** char\* MHA\_Error::msg [private]

**5.143.4.2 char\* MHA\_Error::longmsg** [private]


The documentation for this class was generated from the following files:

- mha\_error.hh
- mha\_error.cpp

5.144 mha\_fifo\_lw\_t < T > Class Template Reference

This FIFO uses locks to synchronize access.

Inheritance diagram for mha\_fifo\_lw\_t< T >:

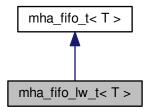

## **Public Member Functions**

- virtual void write (const T \*data, unsigned count)
   write specified ammount of data to the fifo.
- virtual void read (T \*buf, unsigned count)
   read data from fifo.
- mha\_fifo\_lw\_t (unsigned max\_fill\_count)
   Create FIFO with fixed buffer size.
- virtual ~mha\_fifo\_lw\_t ()
   release synchronization object
- virtual void set\_error (unsigned index, MHA\_Error \*error)
   Process waiting for more data or space should bail out, throwing this error.

### **Private Attributes**

mha\_fifo\_thread\_platform\_t \* sync
 platform specific thread synchronization

• MHA Error \* error [2]

If waiting for synchronization should be aborted then exception to be thrown by reader process (index 0) or writer process (index 1) has to be placed here.

**Additional Inherited Members** 

5.144.1 Detailed Description

```
template < class T> class mha fifo lw t< T>
```

This FIFO uses locks to synchronize access.

Reading and writing can block until the operation can be executed.

5.144.2 Constructor & Destructor Documentation

Create FIFO with fixed buffer size.

```
\textbf{5.144.2.2} \quad \textbf{template} < \textbf{class T} > \textbf{mha\_fifo\_lw\_t} < \textbf{T} > :: \sim \textbf{mha\_fifo\_lw\_t} \  \  \, \textbf{( )} \quad \texttt{[virtual]}
```

release synchronization object

5.144.3 Member Function Documentation

```
5.144.3.1 template < class T > void mha_fifo_lw_t< T >::write ( const T * data, unsigned count ) [virtual]
```

write specified ammount of data to the fifo.

If there is not enough space, then wait for more space.

## **Parameters**

data	Pointer to source data.	
count	Number of instances to copy.	

## **Exceptions**

```
MHA_Error (p. 423) when detecting a deadlock situation.
```

Reimplemented from  $mha_fifo_t < T > (p. 432)$ .

5.144.3.2 template 
$$<$$
 class T  $>$  void mha\_fifo\_lw\_t $<$  T  $>$ ::read ( T  $*$  buf, unsigned count ) [virtual]

read data from fifo.

If there is not enough data, then wait for more data.

### **Parameters**

buf	Pointer to the target buffer.
count	Number of instances to copy.

## **Exceptions**

<b>MHA_Error</b> (p. 423)	when detecting a deadlock situation.
---------------------------	--------------------------------------

Reimplemented from  $mha_fifo_t < T > (p. 433)$ .

5.144.3.3 template 
$$<$$
 class T  $>$  void mha\_fifo\_lw\_t $<$  T  $>$ ::set\_error ( unsigned index, MHA\_Error  $*$  error ) [virtual]

Process waiting for more data or space should bail out, throwing this error.

## **Parameters**

index	Use 0 for terminating reader, 1 for terminating writer.
error	MHA_Error (p. 423) to be thrown

## 5.144.4 Member Data Documentation

5.144.4.1 template < class T > mha\_fifo\_thread\_platform\_t\* mha\_fifo\_lw\_t < T >::sync [private]

platform specific thread synchronization


If waiting for synchronization should be aborted then exception to be thrown by reader process (index 0) or writer process (index 1) has to be placed here.

The documentation for this class was generated from the following files:

- · mha\_fifo.h
- mha\_fifo.cpp

5.145 mha\_fifo\_posix\_threads\_t Class Reference

Inheritance diagram for mha\_fifo\_posix\_threads\_t:

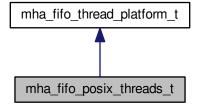

#### **Public Member Functions**

- mha\_fifo\_posix\_threads\_t ()
- virtual void aquire\_mutex ()
- virtual void release\_mutex ()
- virtual void wait\_for\_decrease ()
- virtual void wait for increase ()
- virtual void increment ()
- virtual void decrement ()
- virtual ~mha\_fifo\_posix\_threads\_t ()

## **Private Attributes**

```
pthread_mutex_t mutex
```

- pthread\_cond\_t decrease\_condition
- pthread\_cond\_t increase\_condition

```
5.145.1 Constructor & Destructor Documentation
5.145.1.1 mha_fifo_posix_threads_t::mha_fifo_posix_threads_t( ) [inline]
5.145.1.2 virtual mha_fifo_posix_threads_t::~mha_fifo_posix_threads_t( ) [inline],
         [virtual]
5.145.2 Member Function Documentation
5.145.2.1 virtual void mha_fifo_posix_threads_t::aquire_mutex( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 437).
5.145.2.2 virtual void mha fifo posix threads t::release mutex ( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 437).
5.145.2.3 virtual void mha_fifo_posix_threads_t::wait_for_decrease( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 437).
5.145.2.4 virtual void mha_fifo_posix_threads_t::wait_for_increase( ) [inline], [virtual]
Implements mha fifo thread platform t (p. 437).
5.145.2.5 virtual void mha_fifo_posix_threads_t::increment( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 437).
5.145.2.6 virtual void mha_fifo_posix_threads_t::decrement() [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 438).
```

## 5.145.3 Member Data Documentation

**5.145.3.1** pthread\_mutex\_t mha\_fifo\_posix\_threads\_t::mutex [private]

**5.145.3.2** pthread\_cond\_t mha\_fifo\_posix\_threads\_t::decrease\_condition [private]

**5.145.3.3** pthread\_cond\_t mha\_fifo\_posix\_threads\_t::increase\_condition [private]


The documentation for this class was generated from the following file:

· mha\_fifo.h

5.146 mha\_fifo\_t < T > Class Template Reference

A FIFO class for blocksize adaptation Synchronization: None.

Inheritance diagram for mha\_fifo\_t< T >:

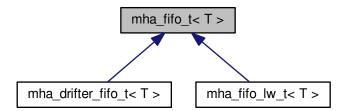

**Public Types** 

• typedef T value\_type

The data type exchanged by this fifo.

#### **Public Member Functions**

virtual void write (const T \*data, unsigned count)

write specified ammount of data to the fifo.

virtual void read (T \*buf, unsigned count)

read data from fifo

virtual unsigned get\_fill\_count () const

Read-only access to fill count.

• virtual unsigned get\_available\_space () const

Read-only access to available space.

virtual unsigned get\_max\_fill\_count () const

The capacity of this fifo.

mha\_fifo\_t (unsigned max\_fill\_count)

Create FIFO with fixed buffer size.

mha\_fifo\_t (unsigned max\_fill\_count, const T &t)

Create FIFO with fixed buffer size, where all (initially unused) copies of T are initialized as copies of t.

mha\_fifo\_t (const mha\_fifo\_t &src)

Copy constructor.

virtual ~mha\_fifo\_t ()

Destroy FIFO.

mha\_fifo\_t< T > & operator= (const mha\_fifo\_t< T > &)

Assignment operator.

## **Protected Member Functions**

• void clear ()

Empty the fifo at once.

#### **Private Attributes**

const unsigned max fill count

The maximum fill count of this FIFO.

• T \* buf

The memory allocated to store the data.

• T \* write ptr

points to location where to write next

const T \* read ptr

points to location where to read next

bool buf uses placement new

wether buf was allocated using placement new or array new.

```
5.146.1 Detailed Description
```

```
template < class T > class mha_fifo_t < T >
```

A FIFO class for blocksize adaptation Synchronization: None.

Use external synchronisation or synchronization in inheriting class.

```
5.146.2 Member Typedef Documentation
```

```
5.146.2.1 template < class T > typedef T mha_fifo_t < T >::value_type
```

The data type exchanged by this fifo.

```
5.146.3 Constructor & Destructor Documentation
```

```
5.146.3.1 template < class T > mha_fifo_t < T >::mha_fifo_t ( unsigned max_fill_count ) [explicit]
```

Create FIFO with fixed buffer size.

Create FIFO with fixed buffer size, where all (initially unused) copies of T are initialized as copies of t.

```
5.146.3.3 template < class T > mha_fifo_t < T >::mha_fifo_t ( const mha_fifo_t < T > & src )
```

Copy constructor.

```
5.146.3.4 template < class T > mha fifo t < T >::\sim mha fifo t () [virtual]
```

Destroy FIFO.

5.146.4 Member Function Documentation

```
5.146.4.1 template < class T> void mha_fifo_t < T>:: write ( const T * data, unsigned count ) [virtual]
```

write specified ammount of data to the fifo.

### **Parameters**

data	Pointer to source data.	
count	Number of instances to copy	

## **Exceptions**

```
MHA_Error (p. 423) when there is not enough space available.
```

Reimplemented in  $mha_fifo_lw_t < T > (p. 426)$ , and  $mha_drifter_fifo_t < T > (p. 419)$ .

read data from fifo

### **Parameters**

buf	Pointer to the target buffer
count	Number of instances to copy

## **Exceptions**

```
MHA_Error (p. 423) when there is not enough data available.
```

Reimplemented in  $mha_fifo_lw_t < T > (p. 427)$ , and  $mha_drifter_fifo_t < T > (p. 420)$ .

Read-only access to fill count.

Reimplemented in **mha\_drifter\_fifo\_t** < **T** > (p. 420).

Read-only access to available\_space.

Reimplemented in **mha\_drifter\_fifo\_t**< **T** > (p. 420).

The capacity of this fifo.

```
5.146.4.6 template < class T > mha_fifo_t < T > & mha_fifo_t < T > ::operator= ( const mha_fifo_t < T > & src )
```

Assignment operator.

5.146.4.7 template < class T > void mha\_fifo\_t < T >::clear( ) [inline], [protected]

Empty the fifo at once.

Should be called by the reader, or when the reader is inactive.

5.146.5 Member Data Documentation

**5.146.5.1** template < class T > const unsigned mha\_fifo\_t < T >::max\_fill\_count [private]

The maximum fill count of this FIFO.

5.146.5.2 template < class T > T \* mha\_fifo\_t < T >::buf [private]

The memory allocated to store the data.

max\_fill\_count + 1 locations are allocated: At least one location is always unused, because we have max\_fill\_count + 1 possible fillcounts [0:max\_fill\_count] that we need to distinguish.

5.146.5.3 template < class T > T \* mha\_fifo\_t < T >::write\_ptr [private]

points to location where to write next

5.146.5.4 template < class T > const T \* mha\_fifo\_t < T >::read\_ptr [private]

points to location where to read next

**5.146.5.5** template < class T > bool mha\_fifo\_t < T >::buf\_uses\_placement\_new [private]

wether buf was allocated using placement new or array new.

The documentation for this class was generated from the following file:

· mha fifo.h

5.147 mha\_fifo\_thread\_guard\_t Class Reference

Simple Mutex Guard Class.

**Public Member Functions** 

- mha\_fifo\_thread\_guard\_t (mha\_fifo\_thread\_platform\_t \*sync)
- ~mha\_fifo\_thread\_guard\_t ()

**Private Attributes** 

mha fifo thread platform t \* sync

5.147.1 Detailed Description

Simple Mutex Guard Class.

5.147.2 Constructor & Destructor Documentation


- 5.147.2.2 mha\_fifo\_thread\_guard\_t::~mha\_fifo\_thread\_guard\_t( ) [inline]
- 5.147.3 Member Data Documentation
- **5.147.3.1 mha\_fifo\_thread\_platform\_t**\* **mha\_fifo\_thread\_guard\_t::sync** [private]

The documentation for this class was generated from the following file:

· mha\_fifo.h

5.148 mha\_fifo\_thread\_platform\_t Class Reference

Abstract base class for synchronizing multithreaded (producer/consumer) fifo operations. Inheritance diagram for mha\_fifo\_thread\_platform\_t:

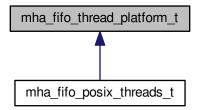

#### **Public Member Functions**

• virtual void aquire mutex ()=0

Calling thread waits until it aquires the lock.

• virtual void **release\_mutex** ()=0

Calling thread releases the lock.

virtual void wait\_for\_decrease ()=0

Calling producer thread must own the lock.

• virtual void wait for increase ()=0

Calling consumer thread must own the lock.

• virtual void increment ()=0

To be called by producer thread after producing.

• virtual void **decrement** ()=0

To be called by consumer thread after consuming.

virtual ~mha\_fifo\_thread\_platform\_t ()

Make destructor virtual.

mha\_fifo\_thread\_platform\_t ()

Make default constructor accessible.

### **Private Member Functions**

```
    mha_fifo_thread_platform_t (const mha_fifo_thread_platform_t &)
```

```
• mha fifo thread platform t & operator= (const mha fifo thread platform t &)
```

### 5.148.1 Detailed Description

Abstract base class for synchronizing multithreaded (producer/consumer) fifo operations.

Works only with single producer and single consumer.

```
5.148.2 Constructor & Destructor Documentation
```

```
5.148.2.1 virtual mha_fifo_thread_platform_t::~mha_fifo_thread_platform_t( ) [inline], [virtual]
```

Make destructor virtual.

**5.148.2.3** mha\_fifo\_thread\_platform\_t::mha\_fifo\_thread\_platform\_t( ) [inline]

Make default constructor accessible.

```
5.148.3 Member Function Documentation
```

```
5.148.3.1 virtual void mha_fifo_thread_platform_t::aquire_mutex( ) [pure virtual]
```

Calling thread waits until it aquires the lock.

Must not be called when the lock is already aquired.

Implemented in **mha\_fifo\_posix\_threads\_t** (p. 429).

```
5.148.3.2 virtual void mha_fifo_thread_platform_t::release_mutex() [pure virtual]
```

Calling thread releases the lock.

May only be called when lock is owned.

```
Implemented in mha_fifo_posix_threads_t (p. 429).
```

```
5.148.3.3 virtual void mha_fifo_thread_platform_t::wait_for_decrease() [pure virtual]
```

Calling producer thread must own the lock.

Method releases lock, and waits for consumer thread to call decrease(). Then reaquires lock and returns

Implemented in **mha\_fifo\_posix\_threads\_t** (p. 429).

```
5.148.3.4 virtual void mha_fifo_thread_platform_t::wait_for_increase() [pure virtual]
```

Calling consumer thread must own the lock.

Method releases lock, and waits for producer thread to call increase(). Then reaquires lock and returns

```
Implemented in mha_fifo_posix_threads_t (p. 429).
```

```
5.148.3.5 virtual void mha_fifo_thread_platform_t::increment() [pure virtual]
```

To be called by producer thread after producing.

Producer thread needs to own the lock to call this method.

```
Implemented in mha_fifo_posix_threads_t (p. 429).
```

```
5.148.3.6 virtual void mha fifo thread platform t::decrement() [pure virtual]
To be called by consumer thread after consuming.
Consumer thread needs to own the lock to call this method.
Implemented in mha_fifo_posix_threads_t (p. 429).
5.148.3.7 mha fifo thread platform t& mha_fifo_thread_platform_t::operator= (
                       const mha_fifo_thread_platform_t & ) [private]
The documentation for this class was generated from the following file:

    mha_fifo.h

       mha_rt_fifo_element_t< T > Class Template Reference
Object wrapper for mha rt fifo t (p. 439).
Public Member Functions

    mha rt fifo element t (T *data)

         Constructor.

        ~mha rt fifo element t ()

Public Attributes

    mha_rt_fifo_element_t< T > * next

         Pointer to next fifo element. NULL for the last (newest) fifo element.

    bool abandonned

         Indicates that this element will no longer be used and may be deleted.
    • T * data
         Pointer to user data.
5.149.1 Detailed Description
template < class T>
class mha_rt_fifo_element_t< T >
Object wrapper for mha rt fifo t (p. 439).
```

5.149.2 Constructor & Destructor Documentation

5.149.2.1 template 
$$<$$
 class T  $>$  mha\_rt\_fifo\_element\_t  $<$  T  $>$  ::mha\_rt\_fifo\_element\_t ( T  $*$  data ) [inline]

Constructor.

This element assumes ownership of user data.

#### **Parameters**

data User data. Has to be allocated on the heap with standard operator new, because it will be deleted in this element's destructor.

5.149.2.2 template < class T > mha\_rt\_fifo\_element\_t < T >::
$$\sim$$
 mha\_rt\_fifo\_element\_t ( ) [inline]

5.149.3 Member Data Documentation

Pointer to next fifo element. NULL for the last (newest) fifo element.

Indicates that this element will no longer be used and may be deleted.

Pointer to user data.

The documentation for this class was generated from the following file:

· mha\_fifo.h

Template class for thread safe, half real time safe fifo without explixit locks.

**Public Member Functions** 

mha\_rt\_fifo\_t ()

Construct empty fifo.

• ~mha\_rt\_fifo\_t ()

Destructor will delete all data currently in the fifo.

• T \* poll ()

Retrieve the latest element in the Fifo.

• T \* poll\_1 ()

Retrieve the next element in the Fifo, if there is one, and mark the previous element as abandonned.

void push (T \*data)

Add element to the Fifo.

#### **Private Member Functions**

void remove\_abandonned ()

Deletes abandonned elements.

• void remove all ()

Deletes all elements.

### **Private Attributes**

mha\_rt\_fifo\_element\_t < T > \* root

The first element in the fifo. Deleting elements starts here.

mha\_rt\_fifo\_element\_t< T > \* current

The element most recently returned by **poll** (p. 441) or **poll\_1** (p. 441).

## 5.150.1 Detailed Description

```
\label{template} \begin{array}{l} \text{template} \! < \! \text{class T} \! > \\ \text{class mha\_rt\_fifo\_t} \! < \! \text{T} \! > \\ \end{array}
```

Template class for thread safe, half real time safe fifo without explixit locks.

Reading from this fifo is realtime safe, writing to it is not. This fifo is designed for objects that were constructed on the heap. It assumes ownership of these objects and calls delete on them when they are no longer used. Objects remain inside the Fifo while being used by the reader.

A new fifo element is inserted by using **push** (p. 441). The push operation is not real time safe, it allocates and deallocates memory. The latest element is retrieved by calling **poll** (p. 441). This operation will skip fifo elements if more than one **push** (p. 441) has been occured since the last poll. To avoid skipping, call the **poll\_1** (p. 441) operation instead.

## 5.150.2 Constructor & Destructor Documentation

```
5.150.2.1 template < class T > mha_rt_fifo_t < T > ::mha_rt_fifo_t ( ) [inline]
```

Construct empty fifo.

```
5.150.2.2 template < class T > mha_rt_fifo_t < T >::~mha_rt_fifo_t ( ) [inline]
```

Destructor will delete all data currently in the fifo.

5.150.3 Member Function Documentation

Retrieve the latest element in the Fifo.

Will skip fifo elements if more than one element has been added since last poll invocation. Will return the same element as on last call if no elements have been added in the mean time. Marks former elements as abandonned.

## **Returns**

The latest element in this Fifo. Returns NULL if the Fifo is empty.

Retrieve the next element in the Fifo, if there is one, and mark the previous element as abandonned.

Else, if there is no newer element, returns the same element as on last **poll()** (p. 441) or **poll\_1()** (p. 441) invocation.

## **Returns**

The next element in this Fifo, if there is one, or the same as before. Returns NULL if the Fifo is empty.

5.150.3.3 template 
$$<$$
 class T  $>$  void mha\_rt\_fifo\_t $<$  T  $>$ ::push ( T  $*$  data ) [inline]

Add element to the Fifo.

Deletes abandonned elements in the fifo.

## **Parameters**

data

The new user data to place at the end of the fifo. After this invocation, the fifo is the owner of this object and will delete it when it is no longer used. data must have been allocated on the heap with standard operator new.

```
5.150.3.4 template < class T > void mha_rt_fifo_t < T >::remove_abandonned( ) [inline], [private]
```

Deletes abandonned elements.

5.150.3.5 template < class T > void mha\_rt\_fifo\_t < T >::remove\_all() [inline], [private]

Deletes all elements.

5.150.4 Member Data Documentation

The first element in the fifo. Deleting elements starts here.

The element most recently returned by **poll** (p. 441) or **poll\_1** (p. 441).

Searching for new elements starts here.


The documentation for this class was generated from the following file:

mha\_fifo.h

5.151 mha\_spec\_t Struct Reference

Spectrum signal structure.

Inheritance diagram for mha\_spec\_t:

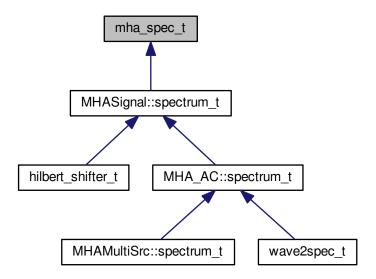

## **Public Attributes**

mha\_complex\_t \* buf

signal buffer

unsigned int num\_channels

number of channels

unsigned int num\_frames

number of frames in each channel

• mha\_channel\_info\_t \* channel\_info

detailed channel description

## 5.151.1 Detailed Description

Spectrum signal structure.

This structure contains the short time fourier transform output of the windowed input signal. The member  $num\_frames$  describes the number of frequency bins in each channel. For an even FFT length N, this is N/2+1. With odd FFT lengths, it is (N+1)/2. The imaginary part of the first bin is zero. For even FFT lengths, also the imaginary part at the Nyquist frequency is zero.

buf[k].re	Re(0)	Re(1)	Re(2)	Re(3)	Re(4)	 Re(n/2-1)	Re(n/2)
buf[k].im		Im(1)	Im(2)	Im(3)	Im(4)	 Im(n/2-1)	
k	0	1	2	3	4	n/2-1	n/2

Figure 4 Data order of FFT spectrum.

## 5.151.2 Member Data Documentation

5.151.2.1 mha\_complex\_t\* mha\_spec\_t::buf

signal buffer

5.151.2.2 unsigned int mha\_spec\_t::num\_channels

number of channels

5.151.2.3 unsigned int mha\_spec\_t::num\_frames

number of frames in each channel

5.151.2.4 mha\_channel\_info\_t\* mha\_spec\_t::channel\_info

detailed channel description


The documentation for this struct was generated from the following file:

· mha.h

# 5.152 MHA\_TCP::Async\_Notify Class Reference

Portable Multiplexable cross-thread notification.

Inheritance diagram for MHA\_TCP::Async\_Notify:

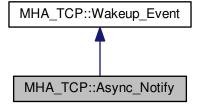

## **Public Member Functions**

- Async\_Notify ()
- virtual void reset ()
- virtual void set ()
- virtual ~Async\_Notify ()

# **Private Attributes**

• int **pipe** [2]

**Additional Inherited Members** 

## 5.152.1 Detailed Description

Portable Multiplexable cross-thread notification.

5.152.2 Constructor & Destructor Documentation

```
5.152.2.1 Async_Notify::Async_Notify()
```

5.152.3 Member Function Documentation

Reimplemented from MHA\_TCP::Wakeup\_Event (p. 471).

5.152.4 Member Data Documentation


The documentation for this class was generated from the following files:

- · mha\_tcp.hh
- · mha\_tcp.cpp

## 5.153 MHA\_TCP::Client Class Reference

A portable class for a tcp client connections.

Inheritance diagram for MHA\_TCP::Client:

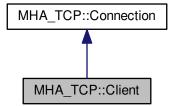

### **Public Member Functions**

• Client (const std::string &host, unsigned short port)

Constructor connects to host, port via TCP.

Client (const std::string &host, unsigned short port, Timeout\_Watcher &timeout\_← watcher)

Constructor connects to host, port via TCP, using a timeout.

## **Additional Inherited Members**

## 5.153.1 Detailed Description

A portable class for a tcp client connections.

5.153.2 Constructor & Destructor Documentation

```
5.153.2.1 Client::Client (

const std::string & host,

unsigned short port )
```

Constructor connects to host, port via TCP.

## **Parameters**

host	The hostname of the TCP <b>Server</b> (p. 457).
port	The port or the TCP <b>Server</b> (p. 457).

```
5.153.2.2 Client::Client (

const std::string & host,

unsigned short port,

Timeout Watcher & timeout_watcher )
```

Constructor connects to host, port via TCP, using a timeout.

## **Parameters**

host	The hostname of the TCP <b>Server</b> (p. 457).
port	The port or the TCP <b>Server</b> (p. 457).
timeout_watcher	an Event watcher that implements a timeout.

The documentation for this class was generated from the following files:


mha\_tcp.hh

mha\_tcp.cpp

## 5.154 MHA\_TCP::Connection Class Reference

**Connection** (p. 447) handles Communication between client and server, is used on both sides.

Inheritance diagram for MHA\_TCP::Connection:

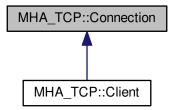

## **Public Member Functions**

- Sockread\_Event \* get\_read\_event ()
- Sockwrite\_Event \* get\_write\_event ()
- std::string get\_peer\_address ()

Get peer's IP Address.

unsigned short get\_peer\_port ()

Get peer's TCP port.

• SOCKET get\_fd () const

Return the (protected) file descriptor of the connection.

virtual ~Connection ()

Destructor closes the underlying file descriptor.

• bool **eof** ()

Checks if the peer has closed the connection.

bool can\_read\_line (char delim= '\n')

Checks if a full line of text has arrived by now.

bool can\_read\_bytes (unsigned howmany)

Checks if the specified ammount of data can be read.

std::string read\_line (char delim= '\n')

Reads a single line of data from the socket.

std::string read\_bytes (unsigned howmany)

Reads the specified ammount of dat from the socket.

void try\_write (const std::string &data="")

Adds data to the internal "outgoing" buffer, and then tries to write as much data from that buffer to the socket as possible without blocking.

void write (const std::string &data="")

Adds data to the internal "outgoing" buffer, and then writes that that buffer to the socket, regardless of blocking.

bool needs\_write ()

Checks if the internal "outgoing" buffer contains data.

• unsigned buffered\_incoming\_bytes () const

Returns the number of bytes in the internal "incoming" buffer.

• unsigned buffered\_outgoing\_bytes () const

Returns the number of bytes in the internal "outgoing" buffer.

#### **Protected Member Functions**

Connection (SOCKET \_fd)

Create a connection instance from a socket filedescriptor.

### **Protected Attributes**

SOCKET fd

The file descriptor of the TCP Socket.

### **Private Member Functions**

• void init peer data ()

determine peer address and port

• bool can sysread ()

Determine wether at least 1 byte can be read without blocking.

• bool can\_syswrite ()

Determine wether at least 1 byte can be written without blocking.

std::string sysread (unsigned bytes)

Call the system's read function and try to read bytes.

std::string syswrite (const std::string &data)

Call the system's write function and try to write all characters in the string data.

#### **Private Attributes**

- · std::string outbuf
- std::string inbuf
- Sockread Event \* read event
- Sockwrite\_Event \* write\_event
- bool closed
- struct sockaddr\_in peer\_addr

## 5.154.1 Detailed Description

**Connection** (p. 447) handles Communication between client and server, is used on both sides.

#### 5.154.2 Constructor & Destructor Documentation

```
5.154.2.1 MHA_TCP::Connection::Connection (
SOCKET_fd) [protected]
```

Create a connection instance from a socket filedescriptor.

### **Parameters**

```
        ← The file descriptor of the TCP Socket. This file descriptor is closed again in the destructor.

        fd
```

## **Exceptions**

```
MHA_Error (p. 423) If the file descriptor is < 0.
```

**5.154.2.2** Connection::~Connection() [virtual]

Destructor closes the underlying file descriptor.

5.154.3 Member Function Documentation

5.154.3.1 void MHA\_TCP::Connection::init\_peer\_data() [private]

determine peer address and port

**5.154.3.2** bool Connection::can\_sysread() [private]

Determine wether at least 1 byte can be read without blocking.

**5.154.3.3** bool Connection::can\_syswrite() [private]

Determine wether at least 1 byte can be written without blocking.

```
5.154.3.4 std::string Connection::sysread (
unsigned bytes ) [private]
```

Call the system's read function and try to read bytes.

This will block in a situation where can\_sysread returns false.

### **Parameters**

## **Returns**

The characters read from the socket. The result may have fewer characters than specified by bytes. If the result is an empty string, then the socket has been closed by the peer.

```
5.154.3.5 std::string Connection::syswrite (
const std::string & data ) [private]
```

Call the system's write function and try to write all characters in the string data.

May write fewer characters, but will at least write one character.

### **Parameters**

data	A string of characters to write to the socket.
------	--

### **Returns**

The rest of the characters that have not yet been written.

```
5.154.3.6 Sockread_Event * Connection::get_read_event()

5.154.3.7 Sockwrite_Event * Connection::get_write_event()

5.154.3.8 std::string Connection::get_peer_address()

Get peer's IP Address.

5.154.3.9 unsigned short Connection::get_peer_port()

Get peer's TCP port.

5.154.3.10 SOCKET MHA_TCP::Connection::get_fd() const [inline]
```

Return the (protected) file descriptor of the connection.

Will be required for SSL.

```
5.154.3.11 bool Connection::eof ( )
```

Checks if the peer has closed the connection.

As a side effect, this method fills the internal "incoming" buffer if it was empty and the socket is readable and not eof.

```
5.154.3.12 bool Connection::can_read_line ( char delim = '\n')
```

Checks if a full line of text has arrived by now.

This method reads data from the socket into the internal "incoming" buffer if it can be done without blocking.

#### **Parameters**

```
delim The line delimiter.
```

## **Returns**

true if at least one full line of text is present in the internal buffer after this method call, false otherwise.

```
5.154.3.13 bool Connection::can_read_bytes ( unsigned howmany )
```

Checks if the specified ammount of data can be read.

This method reads data from the socket into an internal "incoming" buffer if it can be done without blocking.

#### **Parameters**

```
howmany The number of bytes that the caller wants to have checked.
```

## **Returns**

true if at least the specified ammount of data is present in the internal buffer after this method call, false otherwise

```
5.154.3.14 std::string Connection::read_line ( char delim = ' \n ' )
```

Reads a single line of data from the socket.

Blocks if necessary.

## **Parameters**

delim   The line delim	iter.
------------------------	-------

### **Returns**

The string of characters in this line, including the trailing delimiter. The delimiter may be missing if the last line before EOF does not have a delimiter.

```
5.154.3.15 std::string Connection::read_bytes ( unsigned howmany )
```

Reads the specified ammount of dat from the socket.

Blocks if necessary.

### **Parameters**

howmany	The number of bytes to read.
---------	------------------------------

### Returns

The string of characters read. The string may be shorter if EOF is encountered.

```
5.154.3.16 void Connection::try_write (
const std::string & data = " " )
```

Adds data to the internal "outgoing" buffer, and then tries to write as much data from that buffer to the socket as possible without blocking.

## **Parameters**

```
data data to send over the socket.
```

```
5.154.3.17 void Connection::write (

const std::string & data = " " )
```

Adds data to the internal "outgoing" buffer, and then writes that that buffer to the socket, regardless of blocking.

## **Parameters**

data data to send over the socket.
------------------------------------

```
5.154.3.18 bool Connection::needs_write ( )
```

Checks if the internal "outgoing" buffer contains data.

```
5.154.3.19 unsigned Connection::buffered_incoming_bytes ( ) const
```

Returns the number of bytes in the internal "incoming" buffer.

```
5.154.3.20 unsigned Connection::buffered_outgoing_bytes ( ) const
```

Returns the number of bytes in the internal "outgoing" buffer.

#### 5.154.4 Member Data Documentation

```
5.154.4.1 std::string MHA_TCP::Connection::outbuf [private]
```

**5.154.4.2 std::string** MHA\_TCP::Connection::inbuf [private]

**5.154.4.3 Sockread\_Event**\* MHA\_TCP::Connection::read\_event [private]

**5.154.4.4 Sockwrite\_Event**\* MHA\_TCP::Connection::write\_event [private]

**5.154.4.5 bool** MHA\_TCP::Connection::closed [private]

**5.154.4.6 struct sockaddr\_in MHA\_TCP::Connection::peer\_addr** [private]

**5.154.4.7 SOCKET MHA\_TCP::Connection::fd** [protected]


The file descriptor of the TCP Socket.

- mha\_tcp.hh
- mha\_tcp.cpp

# 5.155 MHA\_TCP::Event\_Watcher Class Reference

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

Inheritance diagram for MHA\_TCP::Event\_Watcher:

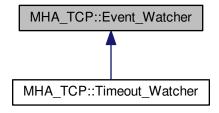

## **Public Types**

- typedef std::set< Wakeup\_Event \* > Events
- typedef std::set< Wakeup\_Event \* >::iterator iterator

# **Public Member Functions**

- void observe (Wakeup\_Event \*event)
  - Add an event to this observer.
- void ignore (Wakeup\_Event \*event)

Remove an event from this observer.

- std::set< Wakeup\_Event \* > wait ()
  - \ Wait for some event to occur.
- virtual ~Event\_Watcher ()

## **Private Attributes**

 $\bullet \ \, \text{std::set} < \text{Wakeup\_Event} \, * > \text{events}$ 

The list of events to watch.

## 5.155.1 Detailed Description

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

```
5.155.2 Member Typedef Documentation
```

```
5.155.2.1 typedef std::set<Wakeup_Event*> MHA_TCP::Event_Watcher::Events
```

```
5.155.2.2 typedef std::set<Wakeup_Event*>::iterator MHA_TCP::Event_Watcher::iterator
```

```
5.155.3 Constructor & Destructor Documentation
```

```
5.155.3.1 Event_Watcher::~Event_Watcher() [virtual]
```

5.155.4 Member Function Documentation

```
5.155.4.1 void Event_Watcher::observe (

Wakeup_Event * event )
```

Add an event to this observer.

```
5.155.4.2 void Event_Watcher::ignore (
Wakeup_Event * event )
```

Remove an event from this observer.

```
5.155.4.3 std::set < Wakeup_Event * > Event_Watcher::wait ( )
```

\ Wait for some event to occur.

Return all events that are ready

5.155.5 Member Data Documentation

```
5.155.5.1 std::set<Wakeup_Event*> MHA_TCP::Event_Watcher::events [private]
```

The list of events to watch.

- mha\_tcp.hh
- mha\_tcp.cpp

# 5.156 MHA\_TCP::OS\_EVENT\_TYPE Struct Reference

**Public Types** 

**Public Attributes** 

```
    enum MHA_TCP::OS_EVENT_TYPE:: { ... } mode
    union {
        int fd
        double timeout
        };
```

- 5.156.1 Member Enumeration Documentation
- 5.156.1.1 anonymous enum

**Enumerator** 

R

W

X

T

- 5.156.2 Member Data Documentation
- 5.156.2.1 enum { ... } MHA\_TCP::OS\_EVENT\_TYPE::mode
- 5.156.2.2 int MHA\_TCP::OS\_EVENT\_TYPE::fd
- 5.156.2.3 double MHA\_TCP::OS\_EVENT\_TYPE::timeout
- 5.156.2.4 union { ... }

The documentation for this struct was generated from the following file:

mha\_tcp.hh

# 5.157 MHA\_TCP::Server Class Reference

#### **Public Member Functions**

• Server (unsigned short port=0, const std::string &iface="0.0.0.0")

Create a TCP server socket.Server (const std::string &iface, unsigned short port=0)

or to the content of the content of

Create a TCP server socket.

• ∼Server ()

Close the TCP server socket.

• std::string **get\_interface** () const

Get the name given in the constructor for the network interface.

unsigned short get\_port () const

Get the port that the TCP server socket currently listens to.

Sockaccept\_Event \* get\_accept\_event ()

Produces an event that can be observed by an **Event\_Watcher** (p. 454).

Connection \* accept ()

Accept an incoming connection.

Connection \* try\_accept ()

Accept an incoming connection if it can be done without blocking.

#### **Private Member Functions**

• void initialize (const std::string &iface, unsigned short port)

### **Private Attributes**

- sockaddr\_in sock\_addr
- SOCKET serversocket
- std::string iface
- unsigned short port
- Sockaccept\_Event \* accept\_event

#### 5.157.1 Constructor & Destructor Documentation

```
5.157.1.1 Server::Server (

unsigned short port = 0,

const std::string & iface = " 0 . 0 . 0 . 0 " )
```

Create a TCP server socket.

### **Parameters**

port	The TCP port to listen to.
iface	The network interface to bind to.

```
5.157.1.2 Server::Server ( const std::string & iface, unsigned short port = 0 )
```

Create a TCP server socket.

#### **Parameters**

port	The TCP port to listen to.
iface	The network interface to bind to.

```
5.157.1.3 Server::∼Server ( )
```

Close the TCP server socket.

5.157.2 Member Function Documentation

```
5.157.2.1 void Server::initialize (
const std::string & iface,
unsigned short port ) [private]
```

5.157.2.2 std::string Server::get\_interface ( ) const

Get the name given in the constructor for the network interface.

5.157.2.3 unsigned short Server::get\_port ( ) const

Get the port that the TCP server socket currently listens to.

5.157.2.4 Sockaccept\_Event \* Server::get\_accept\_event()

Produces an event that can be observed by an **Event\_Watcher** (p. 454).

This event signals incoming connections that can be accepted.

```
5.157.2.5 Connection * Server::accept ( )
```

Accept an incoming connection.

blocks if necessary.

#### **Returns**

The new TCP connection. The connection has to be deleted by the caller.

```
5.157.2.6 Connection * Server::try_accept ( )
```

Accept an incoming connection if it can be done without blocking.

#### **Returns**

The new TCP connection or 0 if there is no immediate connection. The connection has to be deleted by the caller.

### 5.157.3 Member Data Documentation

```
5.157.3.1 sockaddr_in MHA_TCP::Server::sock_addr [private]
```

**5.157.3.2 SOCKET MHA\_TCP::Server::serversocket** [private]

**5.157.3.3 std::string MHA\_TCP::Server::iface** [private]

**5.157.3.4 unsigned short MHA\_TCP::Server::port** [private]

5.157.3.5 Sockaccept\_Event\* MHA\_TCP::Server::accept\_event [private]

The documentation for this class was generated from the following files:

- · mha tcp.hh
- mha\_tcp.cpp

# 5.158 MHA\_TCP::sock\_init\_t Class Reference

**Public Member Functions** 

sock\_init\_t ()


5.158.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

mha\_tcp.cpp

5.159 MHA\_TCP::Sockaccept\_Event Class Reference

Inheritance diagram for MHA\_TCP::Sockaccept\_Event:

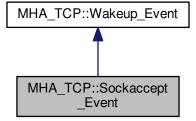

**Public Member Functions** 

Sockaccept\_Event (SOCKET)

**Additional Inherited Members** 

5.159.1 Constructor & Destructor Documentation


5.159.1.1 MHA\_TCP::Sockaccept\_Event::Sockaccept\_Event ( SOCKET s )

- mha\_tcp.hh
- mha\_tcp.cpp

5.160 MHA\_TCP::Sockread\_Event Class Reference

Watch socket for incoming data.

Inheritance diagram for MHA\_TCP::Sockread\_Event:

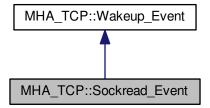

### **Public Member Functions**

# Sockread\_Event (SOCKET s)

Set socket to watch for.

**Additional Inherited Members** 

5.160.1 Detailed Description

Watch socket for incoming data.

5.160.2 Constructor & Destructor Documentation

5.160.2.1 MHA\_TCP::Sockread\_Event::Sockread\_Event ( SOCKET s )

Set socket to watch for.


**Parameters** 

s The socket to observe incoming data on.

- · mha\_tcp.hh
- · mha\_tcp.cpp

# 5.161 MHA\_TCP::Sockwrite\_Event Class Reference

Inheritance diagram for MHA\_TCP::Sockwrite\_Event:

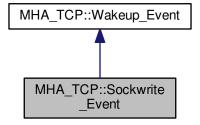

### **Public Member Functions**

Sockwrite\_Event (SOCKET s)

**Additional Inherited Members** 

5.161.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following files:

- mha\_tcp.hh
- mha\_tcp.cpp

# 5.162 MHA\_TCP::Thread Class Reference

A very simple class for portable threads.

### **Public Types**

typedef void \*(\* thr\_f) (void \*)

The thread function signature to use with this class.

#### **Public Member Functions**

Thread (thr\_f func, void \*arg=0)

Constructor starts a new thread.

virtual ∼Thread ()

The destructor should only be called when the **Thread** (p. 462) is finished.

• virtual void run ()

The internal method that delegated the new thread to the registered **Thread** (p. 462) function.

#### **Public Attributes**

Async\_Notify thread\_finish\_event

Event will be triggered when the thread exits.

enum MHA\_TCP::Thread:: { ... } state

The current state of the thread.

thr\_f thread\_func

The thread function that the client has registered.

void \* thread\_arg

The argument that the client wants to be handed through to the thread function.

MHA\_Error \* error

The **MHA\_Error** (p. 423) that caused the thread to abort, if any.

### **Protected Member Functions**

Thread ()

Default constructor may only be used by derived classes that want to start the thread themselves.

# **Protected Attributes**

void \* arg

The argument for the client's thread function.

void \* return value

The return value from the client's thread function is stored here When that function returns.

#### **Private Attributes**

pthread\_t thread\_handle

The posix thread handle.

pthread\_attr\_t thread\_attr

The posix thread attribute structure.

5.162.1 Detailed Description

A very simple class for portable threads.

5.162.2 Member Typedef Documentation

```
5.162.2.1 typedef void*(* MHA_TCP::Thread::thr_f) (void *)
```

The thread function signature to use with this class.

Derive from this class and call protected standard constructor to start threads differently.

5.162.3 Member Enumeration Documentation

5.162.3.1 anonymous enum

The current state of the thread.

Enumerator

PREPARED RUNNING FINISHED

5.162.4 Constructor & Destructor Documentation

```
5.162.4.1 MHA_TCP::Thread::Thread( ) [protected]
```

Default constructor may only be used by derived classes that want to start the thread themselves.

Constructor starts a new thread.

#### **Parameters**

func	The function to be executed by the thread.
arg	The argument given to pass to the thread function.

```
5.162.4.3 Thread::~Thread() [virtual]
```

The destructor should only be called when the **Thread** (p. 462) is finished.

There is preliminary support for forceful thread cancellation in the destructor, but probably not very robust or portable..

5.162.5 Member Function Documentation

```
5.162.5.1 void Thread::run() [virtual]
```

The internal method that delegated the new thread to the registered **Thread** (p. 462) function.

5.162.6 Member Data Documentation

```
5.162.6.1 pthread_t MHA_TCP::Thread::thread_handle [private]
```

The posix thread handle.

```
5.162.6.2 pthread_attr_t MHA_TCP::Thread::thread_attr [private]
```

The posix thread attribute structure.

Required for starting a thread in detached state. Detachment is required to eliminate the need for joining this thread.

```
5.162.6.3 void* MHA_TCP::Thread::arg [protected]
```

The argument for the client's thread function.

```
5.162.6.4 void* MHA_TCP::Thread::return_value [protected]
```

The return value from the client's thread function is stored here When that function returns.

5.162.6.5 Async\_Notify MHA\_TCP::Thread::thread\_finish\_event

Event will be triggered when the thread exits.

5.162.6.6 enum { ... } MHA\_TCP::Thread::state

The current state of the thread.

5.162.6.7 thr\_f MHA\_TCP::Thread::thread\_func

The thread function that the client has registered.

5.162.6.8 void\* MHA\_TCP::Thread::thread\_arg

The argument that the client wants to be handed through to the thread function.

5.162.6.9 MHA\_Error\* MHA\_TCP::Thread::error


The MHA\_Error (p. 423) that caused the thread to abort, if any.

The documentation for this class was generated from the following files:

- · mha\_tcp.hh
- · mha\_tcp.cpp

5.163 MHA\_TCP::Timeout\_Event Class Reference

Inheritance diagram for MHA\_TCP::Timeout\_Event:

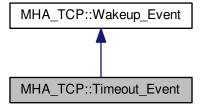

**Public Member Functions** 

- Timeout\_Event (double interval)
- virtual OS\_EVENT\_TYPE get\_os\_event ()

**Private Attributes** 

double end\_time

**Additional Inherited Members** 

- 5.163.1 Constructor & Destructor Documentation
- 5.163.1.1 Timeout\_Event::Timeout\_Event ( double *interval* )
- 5.163.2 Member Function Documentation
- 5.163.2.1 OS\_EVENT\_TYPE Timeout\_Event::get\_os\_event() [virtual]

Reimplemented from MHA\_TCP::Wakeup\_Event (p. 470).


- 5.163.3 Member Data Documentation
- **5.163.3.1** double MHA\_TCP::Timeout\_Event::end\_time [private]

The documentation for this class was generated from the following files:

- mha\_tcp.hh
- · mha\_tcp.cpp
- 5.164 MHA\_TCP::Timeout\_Watcher Class Reference

OS-independent event watcher with internal fixed-end-time timeout.

Inheritance diagram for MHA TCP::Timeout Watcher:

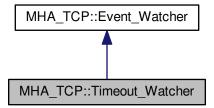

### **Public Member Functions**

- Timeout\_Watcher (double interval)
- virtual ~Timeout\_Watcher ()

### **Private Attributes**

Timeout\_Event timeout

**Additional Inherited Members** 

5.164.1 Detailed Description

OS-independent event watcher with internal fixed-end-time timeout.


- 5.164.2 Constructor & Destructor Documentation
- **5.164.2.2 Timeout\_Watcher::**~Timeout\_Watcher( ) [virtual]
- 5.164.3 Member Data Documentation
- **5.164.3.1 Timeout\_Event** MHA\_TCP::Timeout\_Watcher::timeout [private]

- · mha\_tcp.hh
- mha\_tcp.cpp

# 5.165 MHA\_TCP::Wakeup\_Event Class Reference

A base class for asynchronous wakeup events.

Inheritance diagram for MHA\_TCP::Wakeup\_Event:

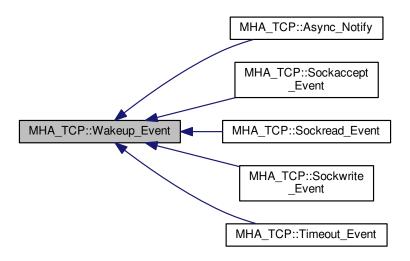

#### **Public Member Functions**

Wakeup\_Event ()

Event Constructor.

virtual void observed\_by (Event\_Watcher \*observer)

Called by the Event\_Watcher (p. 454) when this event is added to its list of observed events.

virtual void ignored\_by (Event\_Watcher \*observer)

Called by the **Event\_Watcher** (p. 454) when this event is removed from its list of observed events.

virtual ~Wakeup\_Event ()

Destructor deregisters from observers.

virtual OS\_EVENT\_TYPE get\_os\_event ()

Get necessary information for the Event Watcher.

• virtual void reset ()

For pure notification events, reset the "signalled" status.

• virtual bool status ()

Query wether the event is in signalled state now.

### **Protected Attributes**

- OS\_EVENT\_TYPE os\_event
- bool os\_event\_valid

**Private Attributes** 

```
    std::set< class Event Watcher * > observers
```

A list of all **Event\_Watcher** (p. 454) instances that this **Wakeup\_Event** (p. 469) is observed by (stored here for proper deregistering).

```
5.165.1 Detailed Description
```

A base class for asynchronous wakeup events.

```
5.165.2 Constructor & Destructor Documentation
```

```
5.165.2.1 Wakeup_Event::Wakeup_Event()
```

Event Constructor.

The new event has invalid state.

```
5.165.2.2 Wakeup_Event::~Wakeup_Event() [virtual]
```

Destructor deregisters from observers.

5.165.3 Member Function Documentation

Called by the **Event\_Watcher** (p. 454) when this event is added to its list of observed events.

Called by the **Event\_Watcher** (p. 454) when this event is removed from its list of observed events.

```
5.165.3.3 OS_EVENT_TYPE Wakeup_Event::get_os_event() [virtual]
```

Get necessary information for the Event Watcher.

Reimplemented in MHA\_TCP::Timeout\_Event (p. 467).

```
5.165.3.4 void Wakeup_Event::reset() [virtual]
```

For pure notification events, reset the "signalled" status.

Reimplemented in MHA\_TCP::Async\_Notify (p. 445).

```
5.165.3.5 bool Wakeup_Event::status( ) [virtual]
```

Query wether the event is in signalled state now.

### 5.165.4 Member Data Documentation

```
5.165.4.1 std::set<class Event_Watcher *> MHA_TCP::Wakeup_Event::observers [private]
```

A list of all **Event\_Watcher** (p. 454) instances that this **Wakeup\_Event** (p. 469) is observed by (stored here for proper deregistering).

```
5.165.4.2 OS_EVENT_TYPE MHA_TCP::Wakeup_Event::os_event [protected]
```

```
5.165.4.3 bool MHA_TCP::Wakeup_Event::os_event_valid [protected]
```

The documentation for this class was generated from the following files:

- mha\_tcp.hh
- mha\_tcp.cpp

### 5.166 mha\_tictoc\_t Struct Reference

**Public Attributes** 

- struct timeval tv1
- struct timeval tv2
- struct timezone tz
- float t

### 5.166.1 Member Data Documentation

5.166.1.1 struct timeval mha\_tictoc\_t::tv1

5.166.1.2 struct timeval mha\_tictoc\_t::tv2

5.166.1.3 struct timezone mha tictoc t::tz

5.166.1.4 float mha\_tictoc\_t::t


The documentation for this struct was generated from the following file:

# mha\_profiling.h

# 5.167 mha\_wave\_t Struct Reference

Waveform signal structure.

Inheritance diagram for mha\_wave\_t:

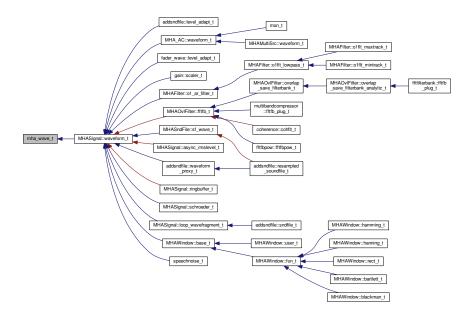

## **Public Attributes**

mha\_real\_t \* buf

signal buffer

unsigned int num\_channels

number of channels

unsigned int num\_frames

number of frames in each channel

mha\_channel\_info\_t \* channel\_info

detailed channel description

# 5.167.1 Detailed Description

Waveform signal structure.

This structure contains one fragment of a waveform signal. The member num\_frames describes the number of audio samples in each audio channel.

The field channel\_info must be an array of num\_channels entries or NULL.

5.167.2 Member Data Documentation

5.167.2.1 mha\_real\_t\* mha\_wave\_t::buf

signal buffer

5.167.2.2 unsigned int mha\_wave\_t::num\_channels

number of channels

5.167.2.3 unsigned int mha\_wave\_t::num\_frames

number of frames in each channel

5.167.2.4 mha\_channel\_info\_t\* mha\_wave\_t::channel\_info


detailed channel description

The documentation for this struct was generated from the following file:

### · mha.h

# 5.168 mhachain::chain\_base\_t Class Reference

Inheritance diagram for mhachain::chain\_base\_t:

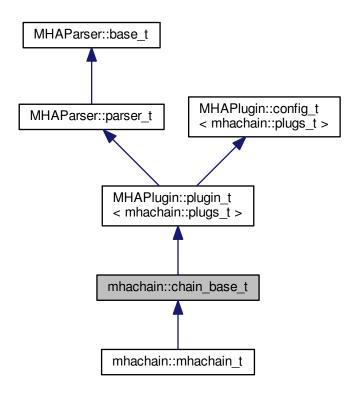

#### **Public Member Functions**

```
chain_base_t (algo_comm_t, const std::string &, const std::string &)
void process (mha_wave_t *, mha_wave_t **)
void process (mha_spec_t *, mha_wave_t **)
void process (mha_wave_t *, mha_spec_t **)
void process (mha_spec_t *, mha_spec_t **)
void prepare (mhaconfig_t &)
```

#### **Protected Attributes**

• void release ()

MHAParser::bool\_t bprofilingMHAParser::vstring\_t algos

#### **Private Member Functions**

• void update ()

#### **Private Attributes**

- std::vector< std::string > old\_algos
- MHAEvents::patchbay t< mhachain::chain base t > patchbay
- · mhaconfig\_t cfin
- mhaconfig\_t cfout
- bool b prepared
- std::string chain

### **Additional Inherited Members**

```
5.168.1 Constructor & Destructor Documentation
```


## 5.168.2 Member Function Documentation

```
5.168.2.2 void mhachain::chain_base_t::process (
                     mha_spec_t * sin,
                     mha wave t ** sout )
5.168.2.3 void mhachain::chain_base_t::process (
                     mha wave t * sin,
                     mha_spec_t ** sout )
5.168.2.4 void mhachain::chain_base_t::process (
                     mha_spec_t * sin,
                     mha_spec_t ** sout )
5.168.2.5 void mhachain::chain_base_t::prepare (
                     mhaconfig_t & cf ) [virtual]
Implements MHAPlugin::plugin_t< mhachain::plugs_t > (p. 705).
5.168.2.6 void mhachain::chain_base_t::release() [virtual]
Reimplemented from MHAPlugin::plugin_t< mhachain::plugs_t > (p. 706).
5.168.2.7 void mhachain::chain_base_t::update() [private]
5.168.3 Member Data Documentation
5.168.3.1 MHAParser::bool_t mhachain::chain_base_t::bprofiling [protected]
5.168.3.2 MHAParser::vstring t mhachain::chain base t::algos [protected]
5.168.3.3 std::vector<std::string> mhachain::chain_base_t::old_algos [private]
5.168.3.4
         MHAEvents::patchbay_t< mhachain::chain_base_t >
         mhachain::chain_base_t::patchbay [private]
5.168.3.5 mhaconfig_t mhachain::chain_base_t::cfin [private]
5.168.3.6 mhaconfig_t mhachain::chain_base_t::cfout [private]
5.168.3.7 bool mhachain::chain_base_t::b_prepared [private]
5.168.3.8 std::string mhachain::chain_base_t::chain [private]
```

- mha\_generic\_chain.h
- mha\_generic\_chain.cpp

# 5.169 mhachain::mhachain\_t Class Reference

Inheritance diagram for mhachain::mhachain\_t:

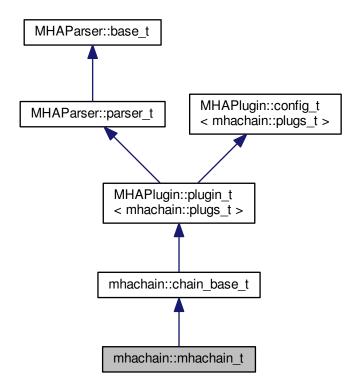

## **Public Member Functions**

• mhachain t (algo comm t iac, const std::string &ichain, const std::string &ialgo)

# **Additional Inherited Members**

5.169.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

· mhachain.cpp

# 5.170 mhachain::plugs\_t Class Reference

#### **Public Member Functions**

- plugs\_t (std::vector< std::string > algos, mhaconfig\_t cfin, mhaconfig\_t cfout, bool do\_prepare, MHAParser::parser\_t &p, algo\_comm\_t iac, std::string ichain, bool use\_← profiling)
- ~plugs\_t ()
- void prepare (mhaconfig t &)
- void release ()
- void process (mha\_wave\_t \*, mha\_spec\_t \*, mha\_wave\_t \*\*, mha\_spec\_t \*\*)
- bool **prepared** () const

## **Private Member Functions**

- void alloc\_plugs (std::vector< std::string > algos)
- void cleanup plugs ()
- void update\_proc\_load ()

# **Private Attributes**

- bool b\_prepared
- std::vector< PluginLoader::mhapluginloader\_t \* > algos
- MHAParser::parser\_t & parser
- · algo comm tac
- std::string chain
- MHAParser::parser\_t profiling
- MHAParser::vstring\_mon\_t prof\_algos
- MHAParser::vfloat mon t prof init
- MHAParser::vfloat\_mon\_t prof\_prepare
- MHAParser::vfloat\_mon\_t prof\_release
- MHAParser::vfloat\_mon\_t prof\_process
- · MHAParser::float mon t prof process tt
- MHAParser::vfloat\_mon\_t prof\_process\_load
- unsigned int proc\_cnt
- mhaconfig\_t prof\_cfg
- MHAEvents::connector t< mhachain::plugs t > prof load con
- MHAEvents::connector\_t< mhachain::plugs\_t > prof\_tt\_con
- bool b use profiling
- mha\_platform\_tictoc\_t tictoc

```
5.170.1 Constructor & Destructor Documentation
5.170.1.1 mhachain::plugs_t::plugs_t (
                      std::vector < std::string > algos,
                      mhaconfig_t cfin,
                      mhaconfig_t cfout,
                      bool do_prepare,
                      MHAParser::parser t & p,
                      algo comm t iac,
                      std::string ichain,
                      bool use_profiling )
5.170.1.2 mhachain::plugs_t::~plugs_t()
5.170.2 Member Function Documentation
5.170.2.1 void mhachain::plugs_t::prepare (
                      mhaconfig t & tf)
5.170.2.2 void mhachain::plugs_t::release ( )
5.170.2.3 void mhachain::plugs_t::process (
                      mha_wave_t * win,
                      mha spec t * sin,
                      mha_wave_t ** wout,
                      mha_spec_t ** sout )
5.170.2.4 bool mhachain::plugs_t::prepared() const [inline]
5.170.2.5 void mhachain::plugs_t::alloc_plugs (
                      std::vector < std::string > algos ) [private]
5.170.2.6 void mhachain::plugs t::cleanup plugs ( ) [private]
5.170.2.7 void mhachain::plugs t::update proc load ( ) [private]
5.170.3 Member Data Documentation
5.170.3.1 bool mhachain::plugs_t::b_prepared [private]
5.170.3.2 std::vector< PluginLoader::mhapluginloader_t* > mhachain::plugs_t::algos
          [private]
5.170.3.3 MHAParser::parser_t& mhachain::plugs_t::parser [private]
```


```
5.170.3.4 algo_comm_t mhachain::plugs_t::ac [private]
5.170.3.5 std::string mhachain::plugs_t::chain [private]
5.170.3.6 MHAParser::parser_t mhachain::plugs_t::profiling [private]
5.170.3.7 MHAParser::vstring_mon_t mhachain::plugs_t::prof_algos [private]
5.170.3.8 MHAParser::vfloat mon t mhachain::plugs_t::prof_init [private]
5.170.3.9 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_prepare [private]
5.170.3.10 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_release [private]
5.170.3.11 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_process [private]
5.170.3.12 MHAParser::float_mon_t mhachain::plugs_t::prof_process_tt [private]
5.170.3.13 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_process_load [private]
5.170.3.14 unsigned int mhachain::plugs_t::proc_cnt [private]
5.170.3.15 mhaconfig_t mhachain::plugs_t::prof_cfg [private]
5.170.3.16 MHAEvents::connector t<mhachain::plugs t> mhachain::plugs t::prof load con
          [private]
5.170.3.17 MHAEvents::connector_t<mhachain::plugs_t> mhachain::plugs_t::prof_tt_con
          [private]
5.170.3.18 bool mhachain::plugs_t::b_use_profiling [private]
5.170.3.19 mha_platform_tictoc_t mhachain::plugs_t::tictoc [private]
```

- mha\_generic\_chain.h
- mha\_generic\_chain.cpp

# 5.171 mhaconfig\_t Struct Reference

MHA prepare configuration structure.

Inheritance diagram for mhaconfig\_t:

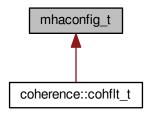

#### **Public Attributes**

· unsigned int channels

Number of audio channels.

unsigned int domain

Signal domain (MHA\_WAVEFORM or MHA\_SPECTRUM)

· unsigned int fragsize

Fragment size of waveform data.

• unsigned int wndlen

Window length of spectral data.

· unsigned int fftlen

FFT length of spectral data.

mha\_real\_t srate

Sampling rate in Hz.

### 5.171.1 Detailed Description

MHA prepare configuration structure.

This structure contains information about channel number and domain for input and output signals of a openMHA Plugin. Each plugin can change any of these parameters, e.g. by resampling of the signal. The only limitation is that the callback frequency is fixed (except for the plugins db and dbasync).

**Todo** Add information on number of bands and on center frequencies, or replace by **mha**\_← **audio\_descriptor\_t** (p. 406).


5.171.2 Member Data Documentation		
5.171.2.1 unsigned int mhaconfig_t::channels		
Number of audio channels.		
5.171.2.2 unsigned int mhaconfig_t::domain		
Signal domain (MHA_WAVEFORM or MHA_SPECTRUM)		
5.171.2.3 unsigned int mhaconfig_t::fragsize		
Fragment size of waveform data.		
5.171.2.4 unsigned int mhaconfig_t::wndlen		
Window length of spectral data.		
5.171.2.5 unsigned int mhaconfig_t::fftlen		
FFT length of spectral data.		
5.171.2.6 mha_real_t mhaconfig_t::srate		
Sampling rate in Hz.		

The documentation for this struct was generated from the following file:

• mha.h

# 5.172 MHAEvents::connector\_base\_t Class Reference

Inheritance diagram for MHAEvents::connector\_base\_t:

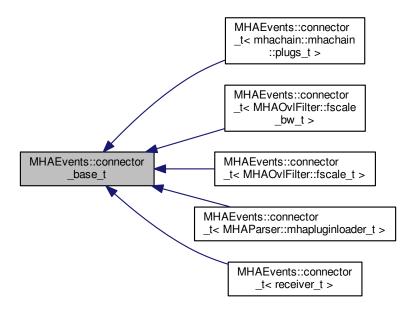

### **Public Member Functions**

- connector\_base\_t ()
- virtual ~connector\_base\_t ()
- virtual void emit\_event ()
- virtual void emit\_event (const std::string &)
- virtual void emit\_event (const std::string &, unsigned int, unsigned int)
- void emitter\_die ()

### **Protected Attributes**

• bool emitter\_is\_alive

# 5.172.1 Constructor & Destructor Documentation


- 5.172.1.1 MHAEvents::connector\_base\_t::connector\_base\_t ( )
- 5.172.1.2 MHAEvents::connector\_base\_t::~connector\_base\_t() [virtual]

```
5.172.2 Member Function Documentation
5.172.2.1 void MHAEvents::connector_base_t::emit_event( ) [virtual]
Reimplemented in MHAEvents::connector_t< receiver_t >
                                                             (p. 485), MHAEvents↔
::connector_t< MHAOvIFilter::fscale_bw_t > (p. 485), MHAEvents::connector_t<
MHAParser::mhapluginloader_t > (p. 485), MHAEvents::connector_t < mhachain ~
::mhachain::plugs t > (p. 485), and MHAEvents::connector t < MHAOvIFilter::fscale t >
(p. 485).
5.172.2.2 void MHAEvents::connector_base_t::emit_event (
                   const std::string & ) [virtual]
Reimplemented in MHAEvents::connector_t< receiver_t >
                                                             (p. 485), MHAEvents←
::connector t < MHAOvIFilter::fscale bw t > (p. 485), MHAEvents::connector t <
MHAParser::mhapluginloader_t > (p. 485), MHAEvents::connector_t< mhachain -
::mhachain::plugs_t > (p. 485), and MHAEvents::connector_t < MHAOvlFilter::fscale_t >
(p. 485).
5.172.2.3 void MHAEvents::connector_base_t::emit_event (
                   const std::string & ,
                   unsigned int,
                   unsigned int ) [virtual]
Reimplemented in MHAEvents::connector_t< receiver_t > (p. 485), MHAEvents
::connector_t< MHAOvlFilter::fscale_bw_t > (p. 485), MHAEvents::connector_t<
MHAParser::mhapluginloader_t > (p. 485), MHAEvents::connector_t< mhachain←
::mhachain::plugs_t > (p. 485), and MHAEvents::connector_t < MHAOvIFilter::fscale_t >
(p. 485).
5.172.2.4 void MHAEvents::connector_base_t::emitter_die ( )
5.172.3 Member Data Documentation
5.172.3.1 bool MHAEvents::connector_base_t::emitter_is_alive [protected]
```

- mha\_event\_emitter.h
- mha\_events.cpp

# 5.173 MHAEvents::connector\_t< receiver\_t > Class Template Reference

Inheritance diagram for MHAEvents::connector\_t< receiver\_t >:

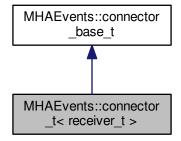

#### **Public Member Functions**

- connector\_t (emitter\_t \*, receiver\_t \*, void(receiver\_t::\*)())
- connector\_t (emitter\_t \*, receiver\_t \*, void(receiver\_t::\*)(const std::string &))
- connector\_t (emitter\_t \*, receiver\_t \*, void(receiver\_t::\*)(const std::string &, unsigned int, unsigned int))
- ~connector\_t ()

### **Private Member Functions**

- void emit\_event ()
- void emit\_event (const std::string &)
- void emit\_event (const std::string &, unsigned int, unsigned int)

# **Private Attributes**

- emitter\_t \* emitter
- receiver t \* receiver
- void(receiver\_t::\* eventhandler )()
- void(receiver t::\* eventhandler s)(const std::string &)
- void(receiver\_t::\* eventhandler\_suu )(const std::string &, unsigned int, unsigned int)

**Additional Inherited Members** 

```
5.173.1 Constructor & Destructor Documentation
5.173.1.1 template < class receiver_t > MHAEvents::connector t < receiver_t >::connector t (
                       emitter t * e,
                       receiver_t * r,
                       void(receiver_t::*)() rfun )
5.173.1.2 template < class receiver_t > MHAEvents::connector_t < receiver_t >::connector_t (
                      emitter t * e.
                       receiver t * r.
                       void(receiver_t::*)(const std::string &) rfun )
5.173.1.3 template < class receiver_t > MHAEvents::connector t < receiver_t >::connector t (
                      emitter t * e,
                      receiver_t * r,
                       void(receiver_t::*)(const std::string &, unsigned int, unsigned int) rfun )
5.173.1.4 template < class receiver_t > MHAEvents::connector t < receiver_t >::~connector t (
          )
5.173.2 Member Function Documentation
5.173.2.1 template < class receiver_t > void MHAEvents::connector_t < receiver_t > ::emit_event (
          ) [private], [virtual]
Reimplemented from MHAEvents::connector base t (p. 483).
5.173.2.2 template < class receiver_t > void MHAEvents::connector t < receiver_t > ::emit_event (
                       const std::string & arg ) [private], [virtual]
Reimplemented from MHAEvents::connector_base_t (p. 483).
5.173.2.3 template < class receiver_t > void MHAEvents::connector t < receiver_t > ::emit_event (
                       const std::string & arg,
                       unsigned int arg2,
                       unsigned int arg3 ) [private], [virtual]
```

Reimplemented from **MHAEvents::connector\_base\_t** (p. 483).

### 5.173.3 Member Data Documentation

```
5.173.3.1 template < class receiver_t > emitter_t * MHAEvents::connector_t < receiver_t >::emitter [private]
```

```
5.173.3.2 template < class receiver_t > receiver_t * MHAEvents::connector_t < receiver_t >::receiver [private]
```

```
5.173.3.3 template < class receiver_t > void(receiver_t::* MHAEvents::connector_t < receiver_t >::eventhandler) () [private]
```

```
5.173.3.4 template < class receiver_t > void(receiver_t::* MHAEvents::connector_t < receiver_t >::eventhandler_s) (const std::string &) [private]
```

```
5.173.3.5 template < class receiver_t > void(receiver_t::* MHAEvents::connector_t < receiver_t >::eventhandler_suu) (const std::string &, unsigned int, unsigned int) [private]
```

The documentation for this class was generated from the following file:

· mha\_events.h

5.174 MHAEvents::emitter t Class Reference

Class for emitting openMHA events.

**Public Member Functions** 

- ~emitter\_t ()
- void operator() ()

Emit an event without parameter.

• void **operator()** (const std::string &)

Emit an event with string parameter.

• void operator() (const std::string &, unsigned int, unsigned int)

Emit an event with string parameter and two unsigned int parameters.

- void connect (connector\_base\_t \*)
- void disconnect (connector\_base\_t \*)

### **Private Attributes**

std::list< connector\_base\_t \* > connections

```
5.174.1 Detailed Description
```

Class for emitting openMHA events.

Use the template class **MHAEvents::patchbay\_t** (p. 488) for connecting to an emitter.

```
5.174.2 Constructor & Destructor Documentation
```

```
5.174.2.1 MHAEvents::emitter_t::~emitter_t ( )
```

5.174.3 Member Function Documentation

```
5.174.3.1 void MHAEvents::emitter_t::operator() ( )
```

Emit an event without parameter.

```
5.174.3.2 void MHAEvents::emitter_t::operator() ( const std::string & arg )
```

Emit an event with string parameter.

Emit an event with string parameter and two unsigned int parameters.

```
5.174.3.4 void MHAEvents::emitter_t::connect ( connector\_base\_t*c )
```

```
5.174.3.5 void MHAEvents::emitter_t::disconnect ( connector\_base\_t*c )
```

5.174.4 Member Data Documentation

```
5.174.4.1 std::list<connector_base_t*> MHAEvents::emitter_t::connections [private]
```

- mha\_event\_emitter.h
- mha\_events.cpp

# 5.175 MHAEvents::patchbay\_t < receiver\_t > Class Template Reference

Patchbay which connects any event emitter with any member function of the parameter class.

**Public Member Functions** 

- ~patchbay t ()
- void connect (emitter\_t \*, receiver\_t \*, void(receiver\_t::\*)())

Connect a receiver member function void (receiver\_t::\*)() with an event emitter.

- void connect (emitter\_t \*, receiver\_t \*, void(receiver\_t::\*)(const std::string &))
   Connect a receiver member function void (receiver\_t::\*)(const std::string&) with an event emitter
- void connect (emitter\_t \*, receiver\_t \*, void(receiver\_t::\*)(const std::string &, unsigned int, unsigned int))

#### **Private Attributes**

std::list< connector t< receiver t > \* > cons

### 5.175.1 Detailed Description

```
template < class receiver_t > class MHAEvents::patchbay_t < receiver_t >
```

Patchbay which connects any event emitter with any member function of the parameter class.

The connections created by the **connect()** (p. 488) function are hold until the destructor is called. To avoid access to invalid function pointers, it is required to destruct the patchbay before the receiver, usually by declaring the patchbay as a member of the receiver.

The receiver can be any claas or structure; the event callback can be either a member function without arguments or with const std::string& argument.

```
5.175.2 Constructor & Destructor Documentation
```

```
5.175.2.1 template < class receiver_t > MHAEvents::patchbay_t < receiver_t >::~patchbay_t ( )
```

### 5.175.3 Member Function Documentation

Connect a receiver member function void (receiver\_t::\*)() with an event emitter.

Create a connection.

The connection is removed when the patchbay is destructed.

### **Parameters**

е	Pointer to an event emitter
r	Pointer to the receiver
rfun	Pointer to a member function of the receiver class

Connect a receiver member function void (receiver\_t::\*)(const std::string&) with an event emitter.

Create a connection.

The connection is removed when the patchbay is destructed.

### **Parameters**

e	Pointer to an event emitter
r	Pointer to the receiver
rfun	Pointer to a member function of the receiver class

5.175.4 Member Data Documentation

```
5.175.4.1 template < class receiver_t > std::list < connector_t < receiver_t > * > MHAEvents::patchbay_t < receiver_t > ::cons [private]
```

The documentation for this class was generated from the following file:

· mha\_events.h

5.176 MHAFilter::adapt\_filter\_param\_t Class Reference

**Public Member Functions** 

adapt\_filter\_param\_t (mha\_real\_t imu, bool ierr\_in)

### **Public Attributes**

- mha\_real\_t mu
- bool err\_in
- 5.176.1 Constructor & Destructor Documentation
- 5.176.2 Member Data Documentation
- 5.176.2.1 mha\_real\_t MHAFilter::adapt\_filter\_param\_t::mu
- 5.176.2.2 bool MHAFilter::adapt\_filter\_param\_t::err\_in

The documentation for this class was generated from the following files:

- mha\_filter.hh
- mha\_filter.cpp
- 5.177 MHAFilter::adapt\_filter\_state\_t Class Reference

**Public Member Functions** 

- adapt\_filter\_state\_t (int ntaps, int nchannels)
- void filter (mha\_wave\_t y, mha\_wave\_t e, mha\_wave\_t x, mha\_wave\_t d, mha\_real
   \_t mu, bool err\_in)

# **Private Attributes**

- int ntaps
- int nchannels
- MHASignal::waveform t W
- MHASignal::waveform\_t X
- · MHASignal::waveform t od
- MHASignal::waveform\_t oy

```
5.177.1 Constructor & Destructor Documentation
```

```
5.177.1.1 MHAFilter::adapt_filter_state_t (
int ntaps,
int nchannels )
```

### 5.177.2 Member Function Documentation

### 5.177.3 Member Data Documentation

```
5.177.3.1 int MHAFilter::adapt_filter_state_t::ntaps [private]
```

```
5.177.3.2 int MHAFilter::adapt_filter_state_t::nchannels [private]
```

- 5.177.3.3 MHASignal::waveform\_t MHAFilter::adapt\_filter\_state\_t::W [private]
- **5.177.3.4** MHASignal::waveform\_t MHAFilter::adapt\_filter\_state\_t::X [private]
- 5.177.3.5 MHASignal::waveform\_t MHAFilter::adapt\_filter\_state\_t::od [private]
- **5.177.3.6** MHASignal::waveform\_t MHAFilter::adapt\_filter\_state\_t::oy [private]


The documentation for this class was generated from the following files:

- · mha\_filter.hh
- mha\_filter.cpp

# 5.178 MHAFilter::adapt\_filter\_t Class Reference

Adaptive filter.

Inheritance diagram for MHAFilter::adapt\_filter\_t:

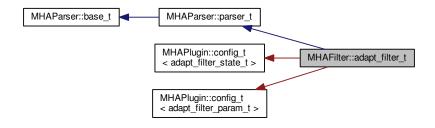

### **Public Member Functions**

```
adapt_filter_t (std::string)
```

- void filter (mha\_wave\_t y, mha\_wave\_t e, mha\_wave\_t x, mha\_wave\_t d)
- void set\_channelcnt (unsigned int)

### **Private Member Functions**

- void update mu ()
- void update\_ntaps ()

### **Private Attributes**

```
    MHAParser::float_t mu
```

- MHAParser::int\_t ntaps
- MHAParser::bool\_t err\_in
- MHAEvents::patchbay\_t< adapt\_filter\_t > connector
- unsigned int nchannels

### **Additional Inherited Members**

# 5.178.1 Detailed Description

Adaptive filter.

```
5.178.2 Constructor & Destructor Documentation
```

```
5.178.2.1 MHAFilter::adapt_filter_t::adapt_filter_t (
std::string help )
```

5.178.3 Member Function Documentation

```
5.178.3.1 void MHAFilter::adapt_filter_t::filter (

mha_wave_t y,

mha_wave_t e,

mha_wave_t x,

mha_wave_t d)
```

5.178.3.2 void MHAFilter::adapt\_filter\_t::set\_channelcnt ( unsigned int *nch* )

5.178.3.3 void MHAFilter::adapt\_filter\_t::update\_mu( ) [private]

# 5.179 MHAFilter::blockprocessing\_polyphase\_resampling\_t Class Reference 493

```
5.178.3.4 void MHAFilter::adapt_filter_t::update_ntaps() [private]
5.178.4 Member Data Documentation
5.178.4.1 MHAParser::float_t MHAFilter::adapt_filter_t::mu [private]
5.178.4.2 MHAParser::int_t MHAFilter::adapt_filter_t::ntaps [private]
5.178.4.3 MHAParser::bool_t MHAFilter::adapt_filter_t::err_in [private]
5.178.4.4 MHAEvents::patchbay_t<adapt_filter_t> MHAFilter::adapt_filter_t::connector [private]
5.178.4.5 unsigned int MHAFilter::adapt_filter_t::nchannels [private]
```

The documentation for this class was generated from the following files:

- · mha filter.hh
- mha\_filter.cpp
- 5.179 MHAFilter::blockprocessing\_polyphase\_resampling\_t Class Reference

A class that does polyphase resampling and takes into account block processing.

# **Public Member Functions**

 blockprocessing\_polyphase\_resampling\_t (float source\_srate, unsigned source\_← fragsize, float target\_srate, unsigned target\_fragsize, float nyquist\_ratio, float irslen, unsigned nchannels, bool add delay)

Contructs a polyphase resampling filter that can be used for blockprocessing with the given parameters.

- virtual ~blockprocessing polyphase resampling t ()
- void write (mha\_wave\_t &signal)

Write signal to the ringbuffer.

void read (mha\_wave\_t &signal)

Read resampled signal.

• bool can read () const

Checks if the resampling ring buffer can produce another output signal block.

### **Private Attributes**

- polyphase\_resampling\_t \* resampling
- · unsigned fragsize in
- unsigned fragsize\_out
- unsigned num\_channels

# 5.179.1 Detailed Description

A class that does polyphase resampling and takes into account block processing.

### 5.179.2 Constructor & Destructor Documentation

float source\_srate, unsigned source\_fragsize, float target\_srate, unsigned target\_fragsize, float nyquist\_ratio, float irslen, unsigned nchannels, bool add\_delay)

Contructs a polyphase resampling filter that can be used for blockprocessing with the given parameters.

### **Parameters**

source_srate	Source sampling rate / Hz
source_fragsize	Fragment size of incoming audio blocks / frames at source_srate
target_srate	Target sampling rate / Hz
target_fragsize	Fragment size of produced audio blocks / frames at target_srate
nyquist_ratio	Low pass filter cutoff frequency relative to the nyquist frequency of the smaller of the two sampling rates. Example values: 0.8, 0.9
irslen	Impulse response length used for low pass filtering / s
nchannels	Number of audio channels
add_delay	To avoid underruns, a delay is generally necessary for round trip block size adaptations. It is only necessary to add this delay to one of the two resampling chains. Set this parameter to true for the first resampling object of a round trip pair. It will add the necessary delay, and calculate the size of the ring buffer appropriately, When set to false, only the ringbuffer size will be set sufficiently.

```
5.179.2.2 virtual MHAFilter::blockprocessing_polyphase_resampling_t::∼blockprocessing_polyphase←
    _resampling_t( ) [inline], [virtual]
```

# 5.179.3 Member Function Documentation

5.179.3.1 void MHAFilter::blockprocessing\_polyphase\_resampling\_t::write ( mha\_wave\_t & signal )

Write signal to the ringbuffer.

# 5.179 MHAFilter::blockprocessing\_polyphase\_resampling\_t Class Reference 495

### **Parameters**

signal	input signal in original sampling rate
- 3	

# **Exceptions**

<b>MHA_Error</b> (p. <b>423</b> )	Raises exception if there is not enough room, if the number of
	channels does not match, or if the number of frames is not equal to
	the number specified in the constructor

5.179.3.2 void MHAFilter::blockprocessing\_polyphase\_resampling\_t::read ( mha\_wave\_t & signal )

Read resampled signal.

Will perform the resampling and remove no longer needed samples from the input buffer.

### **Parameters**

signal	buffer to write the resampled signal to.
--------	--

### **Exceptions**

<b>MHA_Error</b> (p. 423)	Raises exception if there is not enough input signal, if the number of
	channels of frames does not match.

**5.179.3.3** bool MHAFilter::blockprocessing\_polyphase\_resampling\_t::can\_read( ) const [inline]

Checks if the resampling ring buffer can produce another output signal block.

- 5.179.4 Member Data Documentation
- 5.179.4.1 polyphase\_resampling\_t ∗ MHAFilter::blockprocessing\_polyphase\_resampling\_t ← ::resampling [private]
- **5.179.4.2** unsigned MHAFilter::blockprocessing\_polyphase\_resampling\_t::fragsize\_in [private]
- **5.179.4.3** unsigned MHAFilter::blockprocessing\_polyphase\_resampling\_t::fragsize\_out [private]
- **5.179.4.4** unsigned MHAFilter::blockprocessing\_polyphase\_resampling\_t::num\_channels [private]

The documentation for this class was generated from the following files:

- mha filter.hh
- mha\_filter.cpp

# 5.180 MHAFilter::complex\_bandpass\_t Class Reference

Complex bandpass filter.

### **Public Member Functions**

complex\_bandpass\_t (std::vector< mha\_complex\_t > A, std::vector< mha\_←
 complex\_t > B)

Constructor with filter coefficients (one per channel)

- void set\_state (mha\_real\_t val)
- void set state (std::vector< mha real t > val)
- void set\_state (mha\_complex\_t val)
- void set\_weights (std::vector< mha\_complex\_t > new\_B)

Allow to modify the input weights at a later stage.

- std::vector< mha\_complex\_t > get\_weights () const
- void filter (const mha\_wave\_t &X, mha\_spec\_t &Y)

Filter method for real value input.

void filter (const mha\_wave\_t &X, mha\_wave\_t &Yre, mha\_wave\_t &Yim)

Filter method for real value input.

void filter (const mha\_spec\_t &X, mha\_spec\_t &Y)

Filter method for complex value input.

 void filter (const mha\_wave\_t &Xre, const mha\_wave\_t &Xim, mha\_wave\_t &Yre, mha\_wave\_t &Yim)

Filter method for complex value input.

• std::string inspect () const

### Static Public Member Functions

- static std::vector< mha\_complex\_t > creator\_A (std::vector< mha\_real\_t > cf, std←
   ::vector< mha\_real\_t > bw, mha\_real\_t srate, unsigned int order)
- static std::vector< mha\_complex\_t > creator\_B (std::vector< mha\_complex\_t > A, unsigned int order)

### **Private Attributes**

- std::vector< mha\_complex\_t > A\_
- std::vector< mha\_complex\_t > B\_
- std::vector< mha complex t > Yn

### 5.180.1 Detailed Description

# Complex bandpass filter.

```
5.180.2 Constructor & Destructor Documentation
```

Constructor with filter coefficients (one per channel)

### **Parameters**

```
A complex filter coefficients, one per bandB complex weights
```

```
5.180.3 Member Function Documentation
```

Allow to modify the input weights at a later stage.

5.180.3.6 void MHAFilter::complex bandpass t::set weights (

```
\textbf{5.180.3.7} \quad \textbf{std::vector} < \textbf{mha\_complex\_t} > \textbf{MHAFilter::complex\_bandpass\_t::get\_weights ( ) const} \\ \quad [\texttt{inline}]
```

std::vector< mha complex t > new B)

```
5.180.3.8 void MHAFilter::complex_bandpass_t::filter (

const mha_wave_t & X,

mha_spec_t & Y ) [inline]
```

Filter method for real value input.

Filter method for complex value input.

Filter method for complex value input.

```
5.180.3.12 std::string MHAFilter::complex_bandpass_t::inspect( ) const [inline]
```

5.180.4 Member Data Documentation

```
5.180.4.1 std::vector<mha_complex_t> MHAFilter::complex_bandpass_t::A_ [private]
```

**5.180.4.2** std::vector<mha\_complex\_t> MHAFilter::complex\_bandpass\_t::B\_ [private]

5.180.4.3 std::vector<mha complex t> MHAFilter::complex\_bandpass\_t::Yn [private]


The documentation for this class was generated from the following files:

- complex\_filter.h
- complex\_filter.cpp

# 5.181 MHAFilter::diff\_t Class Reference

Differentiator class (non-normalized)

Inheritance diagram for MHAFilter::diff\_t:

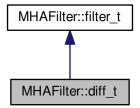

**Public Member Functions** 

diff\_t (unsigned int ch)

**Additional Inherited Members** 

5.181.1 Detailed Description

Differentiator class (non-normalized)

5.181.2 Constructor & Destructor Documentation


The documentation for this class was generated from the following files:

- mha\_filter.hh
- mha\_filter.cpp

5.182 MHAFilter::fftfilter\_t Class Reference

FFT based FIR filter implementation.

Inheritance diagram for MHAFilter::fftfilter\_t:

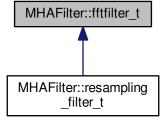

### **Public Member Functions**

- fftfilter\_t (unsigned int fragsize, unsigned int channels, unsigned int fftlen)
   Constructor.
- ∼fftfilter t ()
- void update\_coeffs (const mha\_wave\_t \*pwIRS)

Update the set of coefficients.

void filter (const mha\_wave\_t \*pwln, mha\_wave\_t \*\*ppwOut, const mha\_wave\_t \*pw← IRS)

Apply filter with changing coefficients to a waveform fragment.

void filter (const mha\_wave\_t \*pwln, mha\_wave\_t \*\*ppwOut)

Apply filter to waveform fragment, without changing the coefficients.

void filter (const mha\_wave\_t \*pwln, mha\_wave\_t \*\*ppwOut, const mha\_spec\_t \*ps
 Weights)

Apply filter with changing coefficients to a waveform fragment.

### **Private Attributes**

- unsigned int fragsize
- unsigned int channels
- unsigned int fftlen
- MHASignal::waveform\_t wInput\_fft
- mha\_wave\_t wInput
- MHASignal::waveform t wOutput fft
- · mha wave twOutput
- MHASignal::spectrum\_t sInput
- MHASignal::spectrum t sWeights
- MHASignal::waveform\_t wIRS\_fft
- mha\_fft\_t fft

# 5.182.1 Detailed Description

FFT based FIR filter implementation.

The maximal number of coefficients can be FFT length - fragsize + 1.

5.182.2 Constructor & Destructor Documentation

Constructor.

# **Parameters**

fragsize	Number of frames expected in input signal (each cycle).
channels	Number of channels expected in input signal.
fftlen	FFT length of filter.

```
5.182.2.2 MHAFilter::fftfilter_t::~fftfilter_t()
```

### 5.182.3 Member Function Documentation

Update the set of coefficients.

### **Parameters**

cients structure	pwIRS	ĺ
------------------	-------	---

### Note

The number of channels in h must match the number of channels given in the constructor. The filter length is limited to fftlen-fragsize+1 (longer IRS will be shortened).

Apply filter with changing coefficients to a waveform fragment.

### **Parameters**

ри⊷	Input signal pointer.
În	

### Return values

_		
	υΟwαα	Pointer to output signal pointer, will be set to a valid signal.

# **Parameters**

pwIRS	Pointer to FIR coefficients structure.
-------	--

Apply filter to waveform fragment, without changing the coefficients.

### **Parameters**

```
pw lnput signal pointer.

In
```

### **Return values**

```
ppwOut Pointer to output signal pointer, will be set to a valid signal
```

Apply filter with changing coefficients to a waveform fragment.

### **Parameters**

pw⊷	Input signal pointer.
In	

# **Return values**

<b>-</b>
Pointer to output signal pointer, will be set to a valid signal.
FOILUELTO OLIDUI SIGNAL DOILUEL WIILDE SELTO A VAIIO SIGNAL
. on to to output digital pointer, will be cot to a raile digital

# **Parameters**

```
psWeights Pointer to filter weights structure.
```

# 5.182.4 Member Data Documentation

```
5.182.4.1 unsigned int MHAFilter::fftfilter_t::fragsize [private]
```

**5.182.4.2** unsigned int MHAFilter::fftfilter\_t::channels [private]

**5.182.4.3 unsigned int MHAFilter::fftfilter\_t::fftlen** [private]

```
5.182.4.4 MHASignal::waveform_t MHAFilter::fftfilter_t::wlnput_fft [private]
5.182.4.5 mha_wave_t MHAFilter::fftfilter_t::wlnput [private]
5.182.4.6 MHASignal::waveform_t MHAFilter::fftfilter_t::wOutput_fft [private]
5.182.4.7 mha_wave_t MHAFilter::fftfilter_t::wOutput [private]
5.182.4.8 MHASignal::spectrum_t MHAFilter::fftfilter_t::sInput [private]
5.182.4.9 MHASignal::spectrum_t MHAFilter::fftfilter_t::sWeights [private]
5.182.4.10 MHASignal::waveform_t MHAFilter::fftfilter_t::wIRS_fft [private]
5.182.4.11 mha_fft_t MHAFilter::fftfilter_t::fftf [private]
```


The documentation for this class was generated from the following files:

- mha\_filter.hh
- mha\_filter.cpp

# 5.183 MHAFilter::fftfilterbank\_t Class Reference

FFT based FIR filterbank implementation.

Inheritance diagram for MHAFilter::fftfilterbank\_t:

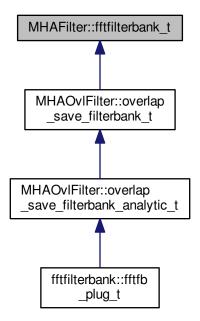

### **Public Member Functions**

• fftfilterbank\_t (unsigned int fragsize, unsigned int inputchannels, unsigned int firchannels, unsigned int fftlen)

Constructor.

- →fftfilterbank t ()
- void update\_coeffs (const mha\_wave\_t \*h)

Update the set of coefficients.

- void filter (const mha\_wave\_t \*s\_in, mha\_wave\_t \*\*s\_out, const mha\_wave\_t \*h)
   Apply filter with changing coefficients to a waveform fragment.
- void filter (const mha\_wave\_t \*s\_in, mha\_wave\_t \*\*s\_out)

Apply filter to waveform fragment, without changing the coefficients.

const mha\_wave\_t \* get\_irs () const

Return the current IRS.

### **Private Attributes**

- · unsigned int fragsize
- unsigned int inputchannels
- unsigned int firchannels
- unsigned int outputchannels
- · unsigned int fftlen
- MHASignal::waveform\_t hw
- MHASignal::spectrum\_t Hs
- MHASignal::waveform t xw
- MHASignal::spectrum\_t Xs
- MHASignal::waveform\_t yw
- MHASignal::spectrum t Ys
- MHASignal::waveform t yw temp
- MHASignal::waveform t tail
- mha\_fft\_t fft

### 5.183.1 Detailed Description

FFT based FIR filterbank implementation.

This class convolves n input channels with m filter coefficient sets and returns n\*m output channels.

The maximal number of coefficients can be FFT length - fragsize + 1.

# 5.183.2 Constructor & Destructor Documentation

Constructor.

# **Parameters**

fragsize	Number of frames expected in input signal (each cycle).
inputchannels	Number of channels expected in input signal.
firchannels	Number of channels expected in FIR filter coefficients (= number of bands).
fftlen	FFT length of filter.

The number of output channels is inputchannels\*firchannels.

```
5.183.2.2 MHAFilter::fftfilterbank_t::~fftfilterbank_t()
```

5.183.3 Member Function Documentation

Update the set of coefficients.

### **Parameters**

h Coefficients structure
--------------------------

### Note

The number of channels in h must match the number of channels given in the constructor, and the number of frames can not be more than fftlen-fragsize+1.

Apply filter with changing coefficients to a waveform fragment.

# **Parameters**

S⊷	Input signal pointer.
_in	

# **Return values**

### **Parameters**

```
h FIR coefficients
```

```
5.183.3.3 void MHAFilter::fftfilterbank_t::filter (

const mha_wave_t * s_in,

mha wave t ** s out )
```

Apply filter to waveform fragment, without changing the coefficients.

### **Parameters**

<i>S</i> ⊷	Input signal pointer.
_in	

### **Return values**

s_out	Pointer to output signal pointer, will be set to a valid signal
-------	---

5.183.3.4 const mha\_wave\_t\* MHAFilter::fftfilterbank\_t::get\_irs() const [inline]

Return the current IRS.

```
5.183.4 Member Data Documentation
```

```
5.183.4.1 unsigned int MHAFilter::fftfilterbank_t::fragsize [private]
```

**5.183.4.2 unsigned int MHAFilter::fftfilterbank\_t::inputchannels** [private]

**5.183.4.3 unsigned int MHAFilter::fftfilterbank\_t::firchannels** [private]

**5.183.4.4 unsigned int MHAFilter::fftfilterbank\_t::outputchannels** [private]

**5.183.4.5 unsigned int MHAFilter::fftfilterbank\_t::fftlen** [private]

**5.183.4.6** MHASignal::waveform t MHAFilter::fftfilterbank\_t::hw [private]

**5.183.4.7 MHASignal::spectrum\_t** MHAFilter::fftfilterbank\_t::Hs [private]

**5.183.4.8 MHASignal::waveform t MHAFilter::fftfilterbank\_t::xw** [private]

**5.183.4.9** MHASignal::spectrum\_t MHAFilter::fftfilterbank\_t::Xs [private]

```
5.183.4.10 MHASignal::waveform_t MHAFilter::fftfilterbank_t::yw [private]
5.183.4.11 MHASignal::spectrum_t MHAFilter::fftfilterbank_t::Ys [private]
5.183.4.12 MHASignal::waveform_t MHAFilter::fftfilterbank_t::yw_temp [private]
5.183.4.13 MHASignal::waveform_t MHAFilter::fftfilterbank_t::tail [private]
5.183.4.14 mha fft t MHAFilter::fftfilterbank_t::fft [private]
```


The documentation for this class was generated from the following files:

- · mha\_filter.hh
- · mha\_filter.cpp

# 5.184 MHAFilter::filter\_t Class Reference

Generic IIR filter class.

Inheritance diagram for MHAFilter::filter\_t:

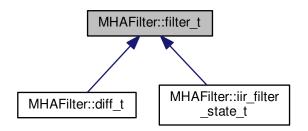

## **Public Member Functions**

- **filter\_t** (unsigned int ch, unsigned int lena, unsigned int lenb) *Constructor.*
- filter\_t (unsigned int ch, const std::vector< mha\_real\_t > &vA, const std::vector< mha←
   \_real\_t > &vB)

Constructor with initialization of coefficients.

- filter\_t (const MHAFilter::filter\_t &src)
- ∼filter t()
- void filter (mha\_wave\_t \*out, const mha\_wave\_t \*in)

Filter all channels in a waveform structure.

void filter (mha\_real\_t \*dest, const mha\_real\_t \*src, unsigned int dframes, unsigned int frame\_dist, unsigned int channel\_dist, unsigned int channel\_begin, unsigned int channel end)

Filter parts of a waveform structure.

mha\_real\_t filter (mha\_real\_t x, unsigned int ch)

Filter one sample.

• unsigned int get\_len\_A () const

Return length of recursive coefficients.

unsigned int get\_len\_B () const

Return length of non-recursive coefficients.

# **Public Attributes**

double \* A

Pointer to recursive coefficients.

• double \* B

Pointer to non-recursive coefficients.

### **Private Attributes**

- unsigned int len\_A
- · unsigned int len B
- unsigned int len
- unsigned int channels
- double \* state

# 5.184.1 Detailed Description

Generic IIR filter class.

This class implements a generic multichannel IIR filter. It is realized as direct form II. It can work on any float array or on **mha\_wave\_t** (p. 472) structs. The filter coefficients can be directly accessed.

**Todo** Implement a more robust filter form.

### 5.184.2 Constructor & Destructor Documentation

### Constructor.

# **Parameters**

ch	Number of channels
lena	Number of recursive coefficients
lenb	Number of non-recursive coefficients

```
5.184.2.2 MHAFilter::filter_t: filter_t ( unsigned int \it ch, const std::vector< mha_real_t > & \it vA, const std::vector< mha_real_t > & \it vB)
```

Constructor with initialization of coefficients.

# **Parameters**

ch	Number of channels.
νA	Recursive coefficients.
νB	Non-recursive coefficients.

Filter all channels in a waveform structure.

# **Parameters**

out	Output signal
in	Input signal

Filter parts of a waveform structure.

### **Parameters**

dest	Output signal.
src	Input signal.
dframes	Number of frames to be filtered.
frame_dist	Index distance between frames of one channel
channel_dist	Index distance between audio channels
channel_begin	Number of first channel to be processed
channel_end	Number of last channel to be processed

Filter one sample.

## **Parameters**

Х	Input value
ch	Channel number to use in filter state

5.184.3.4 unsigned int MHAFilter::filter\_t::get\_len\_A ( ) const [inline]

Return length of recursive coefficients.

5.184.3.5 unsigned int MHAFilter::filter\_t::get\_len\_B ( ) const [inline]

Return length of non-recursive coefficients.

5.184.4 Member Data Documentation

5.184.4.1 double \* MHAFilter::filter\_t::A

Pointer to recursive coefficients.

```
5.184.4.2 double * MHAFilter::filter_t::B
```

Pointer to non-recursive coefficients.

```
5.184.4.3 unsigned int MHAFilter::filter_t::len_A [private]
```

```
5.184.4.4 unsigned int MHAFilter::filter_t::len_B [private]
```

```
5.184.4.5 unsigned int MHAFilter::filter_t::len [private]
```

**5.184.4.6** unsigned int MHAFilter::filter\_t::channels [private]

```
5.184.4.7 double* MHAFilter::filter_t::state [private]
```

The documentation for this class was generated from the following files:

- · mha\_filter.hh
- · mha filter.cpp

# 5.185 MHAFilter::gamma\_flt\_t Class Reference

Class for gammatone filter.

**Public Member Functions** 

gamma\_flt\_t (std::vector< mha\_real\_t > cf, std::vector< mha\_real\_t > bw, mha\_real ←
 \_t srate, unsigned int order)

Constructor.

- ~gamma\_flt\_t ()
- void operator() (mha\_wave\_t &X, mha\_spec\_t &Y)

Filter method.

- void operator() (mha\_wave\_t &X, mha\_wave\_t &Yre, mha\_wave\_t &Yim) Filter method.
- void **operator()** (**mha\_wave\_t** &Yre, **mha\_wave\_t** &Yim, unsigned int stage) Filter method for specific stage.
- void phase\_correction (unsigned int desired\_delay, unsigned int inchannels)
- void set\_weights (std::vector< mha\_complex\_t > new\_B)
- void set weights (unsigned int stage, std::vector< mha complex t > new B)
- std::vector< mha\_complex\_t > get\_weights () const
- std::vector< **mha complex t** > **get weights** (unsigned int stage) const
- std::vector< mha\_real\_t > get\_resynthesis\_gain () const
- void reset\_state ()
- const std::vector< mha\_complex\_t > & get\_A ()
- std::string inspect () const

# **Private Attributes**

```
std::vector< mha_complex_t > A
```

- $\bullet \ \, \text{std::vector} < \textbf{complex\_bandpass\_t} > \textbf{GF}$
- MHASignal::delay\_t \* delay
- std::vector< int > envelope\_delay
- std::vector< mha\_real\_t > resynthesis\_gain
- std::vector< mha real t > cf
- std::vector< mha\_real\_t > bw\_
- mha\_real\_t srate\_

# 5.185.1 Detailed Description

Class for gammatone filter.

### 5.185.2 Constructor & Destructor Documentation

```
5.185.2.1 MHAFilter::gamma_flt_t::gamma_flt_t (  std::vector < mha\_real\_t > \textit{cf}, \\ std::vector < mha\_real\_t > \textit{bw}, \\ mha\_real\_t \textit{ srate}, \\ unsigned int \textit{ order } )
```

# Constructor.

# **Parameters**

cf	Center frequency in Hz.
bw	Bandwidth in Hz (same number of entries as in cf).
srate Sampling frequency in Hz.	
order	Filter order.

```
5.185.2.2 MHAFilter::gamma_flt_t::~gamma_flt_t ( )
```

# 5.185.3 Member Function Documentation

Filter method.

```
5.185.3.2 void MHAFilter::gamma_flt_t::operator() (
                      mha_wave_t & X,
                      mha wave t & Yre,
                      mha_wave_t & Yim ) [inline]
Filter method.
5.185.3.3 void MHAFilter::gamma_flt_t::operator() (
                      mha wave t & Yre,
                      mha_wave_t & Yim,
                      unsigned int stage ) [inline]
Filter method for specific stage.
5.185.3.4 void MHAFilter::gamma_flt_t::phase_correction (
                      unsigned int desired_delay,
                      unsigned int inchannels )
5.185.3.5 void MHAFilter::gamma_flt_t::set_weights (
                      std::vector< mha_complex_t > new_B)
5.185.3.6 void MHAFilter::gamma_flt_t::set_weights (
                      unsigned int stage,
                      std::vector< mha complex t > new_B)
5.185.3.7 std::vector<mha complex t> MHAFilter::gamma flt t::get weights ( ) const
          [inline]
5.185.3.8 std::vector<mha complex t> MHAFilter::gamma_flt_t::get_weights (
                      unsigned int stage ) const [inline]
5.185.3.9 std::vector<mha_real_t> MHAFilter::gamma_flt_t::get_resynthesis_gain ( ) const
          [inline]
5.185.3.10 void MHAFilter::gamma_flt_t::reset_state ( )
5.185.3.11 const std::vector<mha_complex_t>& MHAFilter::gamma_flt_t::get_A( ) [inline]
5.185.3.12 std::string MHAFilter::gamma_flt_t::inspect ( ) const [inline]
5.185.4 Member Data Documentation
5.185.4.1 std::vector<mha_complex_t> MHAFilter::gamma_flt_t::A [private]
5.185.4.2 std::vector<complex_bandpass_t> MHAFilter::gamma_flt_t::GF [private]
```


```
5.185.4.3 MHASignal::delay_t* MHAFilter::gamma_flt_t::delay [private]
5.185.4.4 std::vector<int> MHAFilter::gamma_flt_t::envelope_delay [private]
5.185.4.5 std::vector<mha_real_t> MHAFilter::gamma_flt_t::resynthesis_gain [private]
5.185.4.6 std::vector<mha_real_t> MHAFilter::gamma_flt_t::cf_ [private]
5.185.4.7 std::vector<mha_real_t> MHAFilter::gamma_flt_t::bw_ [private]
5.185.4.8 mha_real_t MHAFilter::gamma_flt_t::srate_ [private]
```

The documentation for this class was generated from the following files:

- complex\_filter.h
- complex\_filter.cpp

5.186 MHAFilter::iir\_filter\_state\_t Class Reference

Inheritance diagram for MHAFilter::iir\_filter\_state\_t:

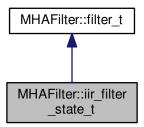

# **Public Member Functions**

iir\_filter\_state\_t (unsigned int channels, std::vector< float > cf\_A, std::vector< float > cf\_B)

**Additional Inherited Members** 

### 5.186.1 Constructor & Destructor Documentation

```
5.186.1.1 MHAFilter::iir_filter_state_t::iir_filter_state_t ( unsigned int channels, std::vector< float > cf_A, std::vector< float > cf_B )
```


The documentation for this class was generated from the following files:

- mha\_filter.hh
- mha\_filter.cpp

# 5.187 MHAFilter::iir filter t Class Reference

IIR filter class wrapper for integration into parser structure.

Inheritance diagram for MHAFilter::iir\_filter\_t:

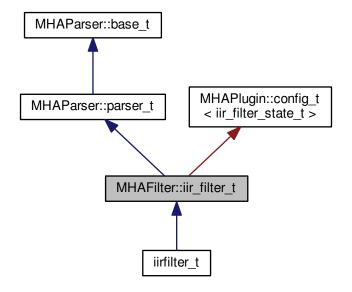

### **Public Member Functions**

iir\_filter\_t (std::string help="IIR filter structure", std::string def\_A="[1]", std::string def — B="[1]", unsigned int channels=1)

Constructor of the IIR filter.

void filter (mha\_wave\_t \*y, const mha\_wave\_t \*x)

The filter processes the audio signal.

• mha real t filter (mha real t x, unsigned int ch)

Filter a single audio sample.

void resize (unsigned int channels)

Change the number of channels after object creation.

### **Private Member Functions**

void update\_filter ()

### **Private Attributes**

- MHAParser::vfloat\_t AMHAParser::vfloat\_t B
- MHAEvents::patchbay t< iir filter t > connector
- unsigned int nchannels

### **Additional Inherited Members**

### 5.187.1 Detailed Description

IIR filter class wrapper for integration into parser structure.

This class implements an infinite impulse response filter. Since it inherits from **MHAParser**← ::parser\_t (p. 663), it can easily be integrated in the openMHA configuration tree. It provides the configuration language variables "A" (vector of recursive filter coefficients) and "B" (vector of non-recursive filter coefficients).

The filter instance reacts to changes in filter coefficients through the openMHA configuration language, and uses the updated coefficients in the next invocation of the filter method.

Update of the coefficients is thread-safe and non-blocking. Simply add this subparser to your parser items and use the "filter" member function. Filter states are reset to all 0 on update.

### 5.187.2 Constructor & Destructor Documentation

```
5.187.2.1 MHAFilter::iir_filter_t:(

std::string help = "IIR filter structure",

std::string def_A = "[1]",

std::string def_B = "[1]",

unsigned int channels = 1)
```

Constructor of the IIR filter.

Initialises the sub-parser structure and the memory for holding the filter's state.

# **Parameters**

help	The help string for the parser that groups the configuration variables of this filter.  Could be used to describe the purpose of this IIR filter.
def_A	The initial value of the vector of the recursive filter coefficients, represented as string.
def_B	The initial value of the vector of the non-recursive filter coefficients, represented as string.
channels	The number of indipendent audio channels to process with this filter. Needed to allocate a state vector for each audio channel.

# 5.187.3 Member Function Documentation

The filter processes the audio signal.

All channels in the audio signal are processed using the same filter coefficients. Indipendent state is stored between calls for each audio channel.

# **Parameters**

У	Pointer to output signal holder. The output signal is stored here. Has to have the same signal dimensions as the input signal x. In-place processing (y and x pointing to the same signal holder) is possible.
λ	Pointer to input signal holder. Number of channels has to be the same as given to the constructor, or to the <b>resize</b> (p. 518) method.

Filter a single audio sample.

# **Parameters**

X	The single audio sample	
ch	Zero-based channel index. Use and change the state of channel ch. ch has to be less	
	than the number of channels given to the constructor or the <b>resize</b> (p. 518) method.	

# Returns

the filtered result sample.

```
5.187.3.3 void MHAFilter::iir_filter_t::resize ( unsigned int channels )
```

Change the number of channels after object creation.

# **Parameters**

```
5.187.3.4 void MHAFilter::iir_filter_t::update_filter( ) [private]
```

5.187.4 Member Data Documentation

```
5.187.4.1 MHAParser::vfloat_t MHAFilter::iir_filter_t::A [private]
```

```
5.187.4.2 MHAParser::vfloat_t MHAFilter::iir_filter_t::B [private]
```

```
5.187.4.3 MHAEvents::patchbay_t<iir_filter_t> MHAFilter::iir_filter_t::connector [private]
```

**5.187.4.4 unsigned int MHAFilter::iir\_filter\_t::nchannels** [private]

The documentation for this class was generated from the following files:

- mha\_filter.hh
- · mha\_filter.cpp

5.188 MHAFilter::iir\_ord1\_real\_t Class Reference

First order recursive filter.

### **Public Member Functions**

- iir\_ord1\_real\_t (std::vector< mha\_real\_t > A, std::vector< mha\_real\_t > B)
   Constructor with filter coefficients (one per channel)
- iir\_ord1\_real\_t (std::vector< mha\_real\_t > tau, mha\_real\_t srate)

Constructor for low pass filter (one time constant per channel)

- void set\_state (mha\_real\_t val)
- void set state (std::vector< mha real t > val)
- void set\_state (mha\_complex\_t val)
- mha\_real\_t operator() (unsigned int ch, mha\_real\_t x)

Filter method for real value input, one element.

mha\_complex\_t operator() (unsigned int ch, mha\_complex\_t x)

Filter method for complex input, one element.

void operator() (const mha\_wave\_t &X, mha\_wave\_t &Y)

Filter method for real value input.

void operator() (const mha\_spec\_t &X, mha\_spec\_t &Y)

Filter method for complex value input.

 void operator() (const mha\_wave\_t &Xre, const mha\_wave\_t &Xim, mha\_wave\_t &Yre, mha\_wave\_t &Yim)

Filter method for complex value input.

### **Private Attributes**

- std::vector< mha real t > A
- std::vector< mha\_real\_t > B\_
- std::vector< mha\_complex\_t > Yn

### 5.188.1 Detailed Description

First order recursive filter.

# 5.188.2 Constructor & Destructor Documentation

Constructor with filter coefficients (one per channel)

Constructor for low pass filter (one time constant per channel)

```
5.188.3 Member Function Documentation
5.188.3.1 void MHAFilter::iir_ord1_real_t::set_state (
                      mha_real_t val )
5.188.3.2 void MHAFilter::iir_ord1_real_t::set_state (
                      std::vector< mha real t > val )
5.188.3.3 void MHAFilter::iir_ord1_real_t::set_state (
                      mha_complex_t val )
5.188.3.4 mha_real_t MHAFilter::iir_ord1_real_t::operator() (
                      unsigned int ch,
                      mha_real_t x ) [inline]
Filter method for real value input, one element.
5.188.3.5 mha_complex_t MHAFilter::iir_ord1_real_t::operator() (
                      unsigned int ch,
                      mha_complex_t x ) [inline]
Filter method for complex input, one element.
5.188.3.6 void MHAFilter::iir_ord1_real_t::operator() (
                      const mha wave t & X,
                      mha wave t&Y) [inline]
Filter method for real value input.
5.188.3.7 void MHAFilter::iir ord1 real t::operator() (
                      const mha spec t & X,
                      mha_spec_t & Y ) [inline]
Filter method for complex value input.
5.188.3.8 void MHAFilter::iir_ord1_real_t::operator() (
                      const mha wave t & Xre,
                      const mha_wave_t & Xim,
                      mha wave t & Yre,
                      mha_wave_t & Yim ) [inline]
```

Filter method for complex value input.

5.188.4 Member Data Documentation

**5.188.4.1** std::vector<mha\_real\_t> MHAFilter::iir\_ord1\_real\_t::A\_ [private]

**5.188.4.2** std::vector<mha\_real\_t> MHAFilter::iir\_ord1\_real\_t::B\_ [private]

**5.188.4.3** std::vector<mha\_complex\_t> MHAFilter::iir\_ord1\_real\_t::Yn [private]


The documentation for this class was generated from the following files:

- mha\_filter.hh
- · mha\_filter.cpp

5.189 MHAFilter::o1\_ar\_filter\_t Class Reference

First order attack-release lowpass filter.

Inheritance diagram for MHAFilter::o1\_ar\_filter\_t:

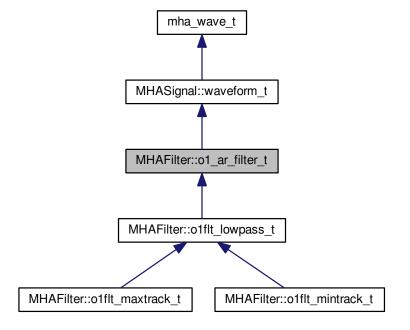

### **Public Member Functions**

• o1\_ar\_filter\_t (unsigned int channels, mha\_real\_t fs=1.0f, std::vector< mha\_real\_t > tau\_a=std::vector< float >(1, 0.0f), std::vector< mha\_real\_t > tau\_r=std::vector< float >(1, 0.0f))

Constructor, setting all taus to zero.

• void **set tau attack** (unsigned int ch, **mha real t** tau)

Set the attack time constant.

void set\_tau\_release (unsigned int ch, mha\_real\_t tau)

Set the release time constant.

mha\_real\_t operator() (unsigned int ch, mha\_real\_t x)

Apply filter to value x, using state channel ch.

void operator() (const mha\_wave\_t &in, mha\_wave\_t &out)

Apply filter to a **mha\_wave\_t** (p. 472) data.

### **Protected Attributes**

```
• MHASignal::waveform t c1 a
```

- MHASignal::waveform\_t c2\_a
- MHASignal::waveform\_t c1\_r
- MHASignal::waveform\_t c2\_r
- mha real t fs

### **Additional Inherited Members**

# 5.189.1 Detailed Description

First order attack-release lowpass filter.

This filter is the base of first order lowpass filter, maximum tracker and minimum tracker.

### 5.189.2 Constructor & Destructor Documentation

Constructor, setting all taus to zero.

The filter state can be accessed through the member functions of **MHASignal::waveform\_t** (p. 787).

# **Parameters**

channels	Number of independent filters
fs	Sampling rate (optional, default = 1)
tau_a	Attack time constants (optional, default = 0)
tau_r	Release time constants (optional, default = 0)

# 5.189.3 Member Function Documentation

Set the attack time constant.

# **Parameters**

ch	Channel number
tau	Time constant

Set the release time constant.

# **Parameters**

ch	Channel number
tau	Time constant

Apply filter to value x, using state channel ch.

# **Parameters**

ch	Cannel number
X	Input value

# Returns

Output value

Apply filter to a **mha\_wave\_t** (p. 472) data.

### **Parameters**

in	Input signal
out	Output signal

The number of channels must match the number of filter bands.

5.189.4 Member Data Documentation

```
5.189.4.1 MHASignal::waveform_t MHAFilter::o1_ar_filter_t::c1_a [protected]
```

**5.189.4.2** MHASignal::waveform\_t MHAFilter::o1\_ar\_filter\_t::c2\_a [protected]

```
5.189.4.3 MHASignal::waveform_t MHAFilter::o1_ar_filter_t::c1_r [protected]
```

**5.189.4.4** MHASignal::waveform\_t MHAFilter::o1\_ar\_filter\_t::c2\_r [protected]

```
5.189.4.5 mha_real_t MHAFilter::o1_ar_filter_t::fs [protected]
```


The documentation for this class was generated from the following files:

- mha\_filter.hh
- mha\_filter.cpp

# 5.190 MHAFilter::o1flt\_lowpass\_t Class Reference

First order low pass filter.

Inheritance diagram for MHAFilter::o1flt\_lowpass\_t:

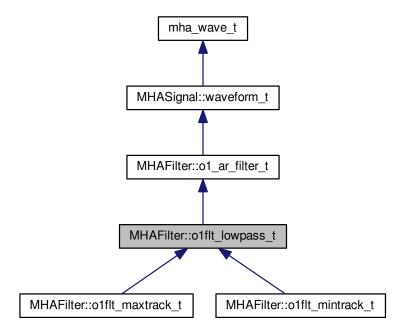

## **Public Member Functions**

- o1flt\_lowpass\_t (const std::vector< mha\_real\_t > &, mha\_real\_t, mha\_real\_t=0)
   Constructor of low pass filter, sets sampling rate and time constants.
- void set\_tau (unsigned int ch, mha\_real\_t tau)
   change the time constant in one channel
- void set\_tau (mha\_real\_t tau)
   set time constant in all channels to tau
- mha\_real\_t get\_c1 (unsigned int ch) const
- mha\_real\_t get\_last\_output (unsigned int ch) const

## **Additional Inherited Members**

# 5.190.1 Detailed Description

First order low pass filter.

## 5.190.2 Constructor & Destructor Documentation

Constructor of low pass filter, sets sampling rate and time constants.

## **Parameters**

tau	Vector of time constants
fs	Sampling rate
startval	Initial internal state value

5.190.3 Member Function Documentation

change the time constant in one channel

```
5.190.3.2 void MHAFilter::o1flt_lowpass_t::set_tau ( mha_real_t tau )
```

set time constant in all channels to tau


The documentation for this class was generated from the following files:

- · mha filter.hh
- · mha\_filter.cpp

# 5.191 MHAFilter::o1flt\_maxtrack\_t Class Reference

First order maximum tracker.

Inheritance diagram for MHAFilter::o1flt\_maxtrack\_t:

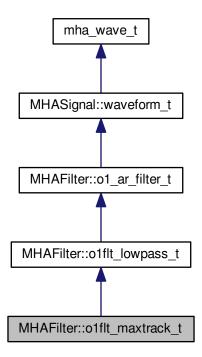

### **Public Member Functions**

- o1flt\_maxtrack\_t (const std::vector< mha\_real\_t > &, mha\_real\_t, mha\_real\_t=0)

  Constructor of low pass filter, sets sampling rate and time constants.
- void set\_tau (unsigned int ch, mha\_real\_t tau)
   change the time constant in one channel
- void set\_tau (mha\_real\_t tau)
   set time constant in all channels to tau

**Additional Inherited Members** 

## 5.191.1 Detailed Description

First order maximum tracker.

## 5.191.2 Constructor & Destructor Documentation

Constructor of low pass filter, sets sampling rate and time constants.

## **Parameters**

tau	Vector of time constants
fs	Sampling rate
startval	Initial internal state value

### 5.191.3 Member Function Documentation

```
5.191.3.1 void MHAFilter::o1flt_maxtrack_t::set_tau (
unsigned int ch,
mha real t tau )
```

change the time constant in one channel

```
5.191.3.2 void MHAFilter::o1flt_maxtrack_t::set_tau ( mha real t tau )
```

set time constant in all channels to tau


The documentation for this class was generated from the following files:

- mha\_filter.hh
- mha\_filter.cpp

# 5.192 MHAFilter::o1flt\_mintrack\_t Class Reference

First order minimum tracker.

Inheritance diagram for MHAFilter::o1flt\_mintrack\_t:

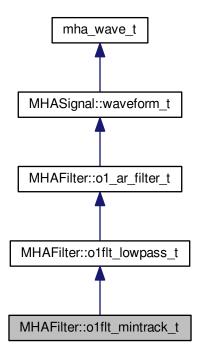

### **Public Member Functions**

- o1flt\_mintrack\_t (const std::vector< mha\_real\_t > &, mha\_real\_t, mha\_real\_t=0)
- void set\_tau (unsigned int ch, mha\_real\_t tau)
   change the time constant in one channel
- void set\_tau (mha\_real\_t tau)
   set time constant in all channels to tau

**Additional Inherited Members** 

5.192.1 Detailed Description

First order minimum tracker.

```
5.192.2 Constructor & Destructor Documentation
```

5.192.3 Member Function Documentation

```
5.192.3.1 void MHAFilter::o1flt_mintrack_t::set_tau ( unsigned int ch, mha real t tau )
```

change the time constant in one channel

```
5.192.3.2 void MHAFilter::o1flt_mintrack_t::set_tau ( mha real t tau )
```

set time constant in all channels to tau

The documentation for this class was generated from the following files:

- · mha filter.hh
- mha\_filter.cpp
- 5.193 MHAFilter::partitioned\_convolution\_t Class Reference

A filter class for partitioned convolution.

**Classes** 

struct index\_t

Bookkeeping class.

**Public Member Functions** 

• partitioned\_convolution\_t (unsigned int fragsize, unsigned int nchannels\_in, unsigned int nchannels out, const transfer matrix t &transfer)

Create a new partitioned convolver.

~partitioned\_convolution\_t ()

Free fftw resource allocated in constructor.

mha\_wave\_t \* process (const mha\_wave\_t \*s\_in)processing

#### **Public Attributes**

· unsigned int fragsize

Audio fragment size, always equal to partition size.

• unsigned int nchannels\_in

Number of audio input channels.

unsigned int nchannels\_out

Number of audio output channels.

unsigned int output partitions

The maximum number of partitions in any of the impulse responses.

unsigned int filter\_partitions

The total number of non-zero impulse response partitions.

MHASignal::waveform\_t input\_signal\_wave

Buffer for input signal.

unsigned int current\_input\_signal\_buffer\_half\_index

A counter modulo 2.

MHASignal::spectrum\_t input\_signal\_spec

Buffer for FFT transformed input signal.

MHASignal::spectrum\_t frequency\_response

Buffers for frequency response spectra of impulse response partitions.

std::vector< index\_t > bookkeeping

Keeps track of input channels, output channels, impulse response partition, and delay.

std::vector< MHASignal::spectrum\_t > output\_signal\_spec

Buffers for FFT transformed output signal.

unsigned int current\_output\_partition\_index

A counter modulo output\_partitions, indexing the "current" output partition.

MHASignal::waveform t output signal wave

Buffer for the wave output signal.

mha fft t fft

The FFT transformer.

## 5.193.1 Detailed Description

A filter class for partitioned convolution.

Impulse responses are partitioned into sections of fragment size. Audio signal is convolved with every partition and delayed as needed. Convolution is done according to overlap-save. FFT length used is 2 times fragment size.

5.193.2 Constructor & Destructor Documentation

5.193.2.1 MHAFilter::partitioned\_convolution\_t::partitioned\_convolution\_t (

unsigned int *fragsize*, unsigned int *nchannels\_in*, unsigned int *nchannels\_out*,

const transfer\_matrix\_t & transfer )

Create a new partitioned convolver.

## **Parameters**

fragsize	Audio fragment size, equal to partition size.
nchannels_in	Number of input audio channels.
nchannels_out	Number of output audio channels.
transfer	A sparse matrix of impulse responses.

5.193.2.2 MHAFilter::partitioned\_convolution\_t::~partitioned\_convolution\_t ( )

Free fftw resource allocated in constructor.

5.193.3 Member Function Documentation

processing

5.193.4 Member Data Documentation

5.193.4.1 unsigned int MHAFilter::partitioned convolution t::fragsize

Audio fragment size, always equal to partition size.

5.193.4.2 unsigned int MHAFilter::partitioned\_convolution\_t::nchannels\_in

Number of audio input channels.

5.193.4.3 unsigned int MHAFilter::partitioned convolution t::nchannels out

Number of audio output channels.

5.193.4.4 unsigned int MHAFilter::partitioned\_convolution\_t::output\_partitions

The maximum number of partitions in any of the impulse responses.

Determines the size if the delay line.

5.193.4.5 unsigned int MHAFilter::partitioned\_convolution\_t::filter\_partitions

The total number of non-zero impulse response partitions.

5.193.4.6 MHASignal::waveform\_t MHAFilter::partitioned\_convolution\_t::input\_signal\_wave

Buffer for input signal.

Has nchannels\_in channels and fragsize\*2 frames

5.193.4.7 unsigned int MHAFilter::partitioned\_convolution\_t::current\_input\_signal\_buffer\_half\_index

A counter modulo 2.

Indicates the buffer half in input signal wave into which to copy the current input signal.

5.193.4.8 MHASignal::spectrum\_t MHAFilter::partitioned\_convolution\_t::input\_signal\_spec

Buffer for FFT transformed input signal.

Has nchannels\_in channels and fragsize+1 frames (fft bins).

5.193.4.9 MHASignal::spectrum\_t MHAFilter::partitioned\_convolution\_t::frequency\_response

Buffers for frequency response spectra of impulse response partitions.

Each "channel" contains another partition of some impulse response. The bookkeeping array is used to keep track what to do with these frequency responses. This container has filter\_ partitions channels and fragsize+1 frames (fft bins).

5.193.4.10 std::vector<index t> MHAFilter::partitioned convolution t::bookkeeping

Keeps track of input channels, output channels, impulse response partition, and delay.

The index into this array is the same as the "channel" index into the frequency\_response array. Array has filter\_partitions entries.

5.193.4.11 std::vector<MHASignal::spectrum\_t> MHAFilter::partitioned\_convolution\_t::output\_← signal\_spec

Buffers for FFT transformed output signal.

For each array member, Number of channels is equal to nchannels\_out, number of frames (fft bins) is equal to fragsize+1. Array size is equal to output partitions.

5.193.4.12 unsigned int MHAFilter::partitioned\_convolution\_t::current\_output\_partition\_index

A counter modulo output\_partitions, indexing the "current" output partition.

5.193.4.13 MHASignal::waveform t MHAFilter::partitioned convolution t::output signal wave

Buffer for the wave output signal.

Number of channels is equal to nchannels\_out, number of frames is equal to fragsize

5.193.4.14 mha fft t MHAFilter::partitioned\_convolution\_t::fft

The FFT transformer.

The documentation for this class was generated from the following files:

- · mha filter.hh
- mha\_filter.cpp

## 5.194 MHAFilter::partitioned\_convolution\_t::index\_t Struct Reference

Bookkeeping class.

**Public Member Functions** 

- index\_t (unsigned int src, unsigned int tgt, unsigned int dly)
   Data constructor.
- index t()

Default constructor for STL compatibility.

## **Public Attributes**

unsigned int source\_channel\_index

The input channel index to apply the current partition to.

unsigned int target\_channel\_index

The index of the output channel to which the filter result should go.

unsigned int delay

The delay (in blocks) of this partition.

## 5.194.1 Detailed Description

Bookkeeping class.

For each impulse response partition, keeps track of which input to filter, which output channel to filter to, and the delay in blocks. Objects of class Index should be kept in an array with the same indices as the corresponding inpulse response partitions.

## 5.194.2 Constructor & Destructor Documentation

Data constructor.

### **Parameters**

src	The input channel index to apply the current partition to.
tgt	The index of the output channel to which the filter result should go.
dly	The delay (in blocks) of this partition

**5.194.2.2** MHAFilter::partitioned\_convolution\_t::index\_t::index\_t() [inline]

Default constructor for STL compatibility.

5.194.3 Member Data Documentation

5.194.3.1 unsigned int MHAFilter::partitioned\_convolution\_t::index\_t::source\_channel\_index

The input channel index to apply the current partition to.

5.194.3.2 unsigned int MHAFilter::partitioned\_convolution\_t::index\_t::target\_channel\_index

The index of the output channel to which the filter result should go.

5.194.3.3 unsigned int MHAFilter::partitioned\_convolution\_t::index\_t::delay

The delay (in blocks) of this partition.

The documentation for this struct was generated from the following file:

· mha filter.hh

5.195 MHAFilter::polyphase\_resampling\_t Class Reference

A class that performs polyphase resampling.

**Public Member Functions** 

- polyphase\_resampling\_t (unsigned n\_up, unsigned n\_down, mha\_real\_t nyquist\_ratio, unsigned n\_irs, unsigned n\_ringbuffer, unsigned n\_channels, unsigned n\_prefill)

  Construct a polyphase resampler instance.
- void write (mha\_wave\_t &signal)

Write signal to the ringbuffer.

void read (mha\_wave\_t &signal)

Read resampled signal.

unsigned readable\_frames () const

Number of frames at target sampling rate that can be produced.

#### **Private Attributes**

unsigned upsampling factor

Integer upsampling factor.

unsigned downsampling\_factor

Integer downsampling factor.

unsigned now index

Index of "now" in the interpolated sampling rate.

bool underflow

Set to true when an underflow has occurred.

MHAWindow::hanning\_t impulse\_response

Contains the impulse response of the lowpass filter needed for anti-aliasing.

MHASignal::ringbuffer\_t ringbuffer

Storage of input signal.

## 5.195.1 Detailed Description

A class that performs polyphase resampling.

Background information: When resampling from one sampling rate to another, it helps when one sampling rate is a multiple of the other sampling rate: In the case of upsampling, the samples at the original rate are copied to the upsampled signal spread out with a constant number of zero samples between the originally adjacent samples. The signal is then low-pass filtered to avoid frequency aliasing and to fill the zero-samples with interpolated values. In the case of down-sampling, the signal is first low-pass filtered for anti-aliasing, and only every n<sup>th</sup> sample of the filtered output is used for the signal at the new sample rate. Of course, for finite-impulse-response (FIR) filters this means that only every n<sup>th</sup> sample needs to be computed.

When resampling from one sampling rate to another where neither is a multiple of the other, the signal first needs to be upsampled to a sampling rate that is a multiple of both (source and target) sampling rates, and then downsampled again to the target sampling rate. Instead of applying two separate lowpass filters directly after each other (one filter for upsampling and another for downsampling), it is sufficient to apply only one low-pass filter, when producing the output at the final target rate, with a cut-off frequency equal to the lower cut-off-frequency of the replaced two low-pass filters. Not filtering to produce a filtered signal already at the common multiple sampling rate has the side effect that this intermediate signal at the common multiple sampling rate keeps its filler zero samples unaltered. These zero samples can be taken advantage of when filtering to produce the output at the target rate: The zeros do not need to be multiplied with their corresponding filter coefficients, because the result is known to be zero again, and this zero product has no effect on the summation operation to compute a target sample at the target rate. To summarize, the following optimization techniques are available:

- The signal does not need to be stored in memory at the interpolation rate. It is sufficient to have the signal available at the source rate and to know where the zeros would be.
- The signal needs to be low-pass-filtered only once.
- The FIR low-pass filtering can take advantage of

- computing only filter outputs for the required samples at the target rate,
- skipping over zero-samples at the interpolation rate.

The procedure that takes advantage of these optimization possibilities is known as polyphase resampling.

This class implements polyphase resampling in this way for a source sampling rate and a target sampling rate that have common multiple, the interpolation sampling rate. Non-rational and drifting sample rates are outside the scope of this resampler.

#### 5.195.2 Constructor & Destructor Documentation

Construct a polyphase resampler instance.

Allocates a ringbuffer with the given capacity  $n\_ringbuffer$ . Client that triggers the constructor must ensure that the capacity  $n\_ringbuffer$  and the delay  $n\_prefill$  are sufficient, i.e. enough old and new samples are always available to compute sufficient samples in using an impulse response of length  $n\_irs$ . Audio block sizes at both sides of the resampler have to be taken into account. Class MHASignal::blockprocessing\_polyphase\_resampling\_t takes care of this, and it is recommended to use this class for block-based processing.

Based on *n\_up*, *n\_down*, *n\_irs* and *nyquist\_ratio*, a suitable sinc impulse response is computed and windowed with a hanning window to limit its extent.

The actual source sampling rate, target sampling rate, and interpolation sampling rate are not parameters to this constructors, because only their ratios matter.

### **Parameters**

n_up	upsampling factor, ratio between interpolation rate and source rate.
n_down	downsampling factor, ratio between interpolation rate and target rate.
nyquist_ratio	low pass filter cutoff frequency relative to the nyquist frequency of the smaller of the two sampling rates. Example values: E.g. 0.8, 0.9
n_irs	length of impulse response (in samples at interpolation rate)
n_ringbuffer	length of ringbuffer, in samples at source sampling rate
n_channels	audio channels count
n_prefill	Prefill the ringbuffer with this many zero frames in samples at source sampling rate

#### 5.195.3 Member Function Documentation

```
5.195.3.1 void MHAFilter::polyphase_resampling_t::write ( mha wave t & signal )
```

Write signal to the ringbuffer.

Signal contained in signal is appended to the audio frames already present in the ringbuffer.

## **Parameters**

signal	input signal in original sampling rate
--------	--

### **Exceptions**

<b>MHA_Error</b> (p. 423)	Raises exception if there is not enough room or if the number of
	channels does not match.

```
5.195.3.2 void MHAFilter::polyphase_resampling_t::read ( mha_wave_t & signal )
```

Read resampled signal.

Will perform the resampling and remove no longer needed samples from the input buffer.

## **Parameters**

	1 66 1 11 11 1 11
sıanal	buffer to write the resampled signal to.
oigilai	bandi to write the resumpted signal to:

## **Exceptions**

<b>MHA_Error</b> (p. 423)	Raises exception if there is not enough input signal or if the number
	of channels is too high.

**5.195.3.3** unsigned MHAFilter::polyphase\_resampling\_t::readable\_frames ( ) const [inline]

Number of frames at target sampling rate that can be produced.

This method only checks for enough future samples present, therefore, this number can be positive and a read operation can still fail if there are not enough past samples present to perform the filtering for the first output sample. This could only happen if the constructor parameters  $n_ringbuffer$  or  $n_ringbuffer$ 

5.195.4 Member Data Documentation

**5.195.4.1 unsigned MHAFilter::polyphase\_resampling\_t::upsampling\_factor** [private]

Integer upsampling factor.

Interpolation rate divided by source rate.

**5.195.4.2** unsigned MHAFilter::polyphase\_resampling\_t::downsampling\_factor [private]

Integer downsampling factor.

Interpolation rate divided by target rate.

**5.195.4.3 unsigned MHAFilter::polyphase\_resampling\_t::now\_index** [private]

Index of "now" in the interpolated sampling rate.

**Todo** Index into what? What is the meaning of now?

**5.195.4.4 bool MHAFilter::polyphase\_resampling\_t::underflow** [private]

Set to true when an underflow has occurred.

When this is true, then the object can no longer be used. Underflows have to be avoided by clients, e.g. by checking that enough **readable\_frames** (p. 538) are present before calling **read** (p. 538)

5.195.4.5 MHAWindow::hanning\_t MHAFilter::polyphase\_resampling\_t::impulse\_response [private]

Contains the impulse response of the lowpass filter needed for anti-aliasing.

The impulse response is stored at the interpolation sampling rate. We use an instance of  $\mathbf{M} \leftarrow \mathbf{HAWindow::hanning_t}$  (p. 815) here because we are limiting the sinc impulse response with a Hanning window (otherwise the impulse response would extend indefinitely into past and future). And the samples inside an  $\mathbf{MHAWindow::hanning_t}$  (p. 815) can be altered with \*=, which our constructor does.

**5.195.4.6** MHASignal::ringbuffer\_t MHAFilter::polyphase\_resampling\_t::ringbuffer [private]

Storage of input signal.

Part of the polyphase resampling optimization is that apart from the FIR impulse response, nothing is stored at the interpolation rate, saving memory and computation cycles.


The documentation for this class was generated from the following files:

- · mha filter.hh
- mha\_filter.cpp

## 5.196 MHAFilter::resampling\_filter\_t Class Reference

Hann shaped low pass filter for resampling.

Inheritance diagram for MHAFilter::resampling\_filter\_t:

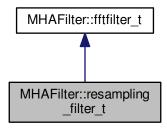

### **Public Member Functions**

resampling\_filter\_t (unsigned int fftlen, unsigned int irslen, unsigned int channels, unsigned int Nup, unsigned int Ndown, double fCutOff)
 Constructor.

### Static Public Member Functions

• static unsigned int fragsize validator (unsigned int fftlen, unsigned int irslen)

## **Private Attributes**

· unsigned int fragsize

## 5.196.1 Detailed Description

Hann shaped low pass filter for resampling.

This class uses FFT filter at upsampled rate.

### 5.196.2 Constructor & Destructor Documentation

# 

## Constructor.

### **Parameters**

fftlen	FFT length.
irslen	Length of filter.
channels	Number of channels to be filtered.
Nup	Upsampling ratio.
Ndown	Downsampling ratio.
fCutOff	Cut off frequency (relative to lower Nyquist Frequency)

### 5.196.3 Member Function Documentation

### 5.196.4 Member Data Documentation

**5.196.4.1** unsigned int MHAFilter::resampling\_filter\_t::fragsize [private]

The documentation for this class was generated from the following files:

- mha\_filter.hh
- · mha\_filter.cpp

## 5.197 MHAFilter::smoothspec\_t Class Reference

Smooth spectral gains, create a windowed impulse response.

**Public Member Functions** 

• smoothspec\_t (unsigned int fftlen, unsigned int nchannels, const MHAWindow ::base\_t &window, bool minphase, bool linphase\_asym=false)

Constructor.

- void smoothspec (const mha\_spec\_t &s\_in, mha\_spec\_t &s\_out)
   Create a smoothed spectrum.
- void smoothspec (mha\_spec\_t &spec)

Create a smoothed spectrum (in place)

void spec2fir (const mha\_spec\_t &spec, mha\_wave\_t &fir)

Return FIR coefficients.

∼smoothspec\_t ()

### **Private Member Functions**

• void internal fir (const mha spec t &)

### **Private Attributes**

- · unsigned int fftlen
- unsigned int nchannels
- MHAWindow::base t window
- MHASignal::waveform\_t tmp\_wave
- MHASignal::spectrum\_t tmp\_spec
- MHASignal::minphase\_t \* minphase
- bool \_linphase\_asym
- mha\_fft\_t fft

### 5.197.1 Detailed Description

Smooth spectral gains, create a windowed impulse response.

Spectral gains are smoothed by multiplicating the impulse response with a window function.

If a minimal phase is used, then the original phase is discarded and replaced by the minimal phase function. In this case, the window is applied to the beginning of the inverse Fourier transform of the input spectrum, and the remaining signal set to zero. If the original phase is kept, the window is applied symmetrical arround zero, i.e. to the first and last samples of the inverse Fourier transform of the input spectrum. The **spec2fir()** (p. 543) function creates a causal impulse response by circular shifting the impulse response by half of the window length.

The signal dimensions of the arguments of **smoothspec()** (p. 543) must correspond to the FFT length and number of channels provided in the constructor. The function **spec2fir()** (p. 543) can fill signal structures with more than window length frames.

## 5.197.2 Constructor & Destructor Documentation

## Constructor.

## **Parameters**

fftlen	FFT length of input spectrum (fftlen/2+1 bins)
nchannels	Number of channels in input spectrum
window	Window used for smoothing
minphase	Use minimal phase (true) or original phase (false)
linphase_asym	Keep phase, but apply full window at beginning of IRS

```
5.197.2.2 MHAFilter::smoothspec_t::~smoothspec_t ( )
```

5.197.3 Member Function Documentation

Create a smoothed spectrum.

### **Parameters**

S⇔	Input spectrum
_in	

## **Return values**

```
s_out Output spectrum
```

Create a smoothed spectrum (in place)

## **Parameters**

```
spec | Spectrum to be smoothed.
```

Return FIR coefficients.

### **Parameters**

```
spec Input spectrum
```

#### **Return values**

```
fir FIR coefficients, minimum length is window length
```

The documentation for this class was generated from the following files:

- · mha\_filter.hh
- mha\_filter.cpp

## 5.198 MHAFilter::thirdoctave\_analyzer\_t Class Reference

**Public Member Functions** 

- thirdoctave\_analyzer\_t (mhaconfig\_t cfg)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- unsigned int **nbands** ()
- unsigned int **nchannels** ()
- std::vector< mha\_real\_t > get\_cf\_hz ()

#### **Static Public Member Functions**

- static std::vector< mha\_real\_t > cf\_generator (mhaconfig\_t cfg)
- static std::vector< mha\_real\_t > bw\_generator (mhaconfig\_t cfg)
- static std::vector< mha\_real\_t > dup (std::vector< mha\_real\_t >, mhaconfig\_t cfg)

### **Private Attributes**

- mhaconfig\_t cfg\_
- std::vector< mha\_real\_t > cf
- MHAFilter::gamma\_flt\_t fb
- MHASignal::waveform\_t out\_chunk
- MHASignal::waveform\_t out\_chunk\_im

```
5.198.1 Constructor & Destructor Documentation
```

5.198.2 Member Function Documentation

```
5.198.2.1 mha_wave_t * MHAFilter::thirdoctave_analyzer_t::process ( mha_wave_t * sln )
```

```
5.198.2.2 unsigned int MHAFilter::thirdoctave_analyzer_t::nbands ( )
```

```
5.198.2.3 unsigned int MHAFilter::thirdoctave_analyzer_t::nchannels ( )
```

```
5.198.2.4 std::vector< mha_real_t > MHAFilter::thirdoctave_analyzer_t::get_cf_hz( )
```

```
5.198.2.6 std::vector< mha_real_t > MHAFilter::thirdoctave_analyzer_t::bw_generator ( mhaconfig_t cfg ) [static]
```

5.198.3 Member Data Documentation

**5.198.3.1 mhaconfig\_t** MHAFilter::thirdoctave\_analyzer\_t::cfg\_ [private]

```
5.198.3.2 std::vector<mha_real_t> MHAFilter::thirdoctave_analyzer_t::cf [private]
5.198.3.3 MHAFilter::gamma_flt_t MHAFilter::thirdoctave_analyzer_t::fb [private]
5.198.3.4 MHASignal::waveform_t MHAFilter::thirdoctave_analyzer_t::out_chunk [private]
5.198.3.5 MHASignal::waveform_t MHAFilter::thirdoctave_analyzer_t::out_chunk_im [private]
```

The documentation for this class was generated from the following files:

- · complex\_filter.h
- complex\_filter.cpp
- 5.199 MHAFilter::transfer\_function\_t Struct Reference

a structure containing a source channel number, a target channel number, and an impulse response.

## **Public Member Functions**

transfer function t ()

Default constructor for STL conformity.

 transfer\_function\_t (unsigned int source\_channel\_index, unsigned int target\_← channel\_index, const std::vector< float > &impulse\_response)

Data constructor.

- unsigned int **partitions** (unsigned int fragsize) const
  - for the given partition size, return the number of partitions of the impulse response.
- unsigned int non\_empty\_partitions (unsigned int fragsize) const
  - for the given partition size, return the number of non-empty partitions of the impulse response.
- bool isempty (unsigned int fragsize, unsigned int index) const checks if the partition contains only zeros

### **Public Attributes**

• unsigned int source\_channel\_index

Source audio channel index for this transfer function.

unsigned int target\_channel\_index

Target audio channel index for this transfer function.

std::vector< float > impulse response

Impulse response of transfer from source to target channel.

# 5.199.1 Detailed Description

a structure containing a source channel number, a target channel number, and an impulse response.

### 5.199.2 Constructor & Destructor Documentation

```
5.199.2.1 MHAFilter::transfer_function_t::transfer_function_t() [inline]
```

Default constructor for STL conformity.

Not used.

Data constructor.

#### **Parameters**

source_channel_index	Source audio channel index for this transfer function
target_channel_index	Target audio channel index for this transfer function
impulse_response	Impulse response of transfer from source to target channel

### 5.199.3 Member Function Documentation

for the given partition size, return the number of partitions of the impulse response.

### **Parameters**

fragsize	partition size
----------	----------------

## Returns

number of partitions occupied by the impulse response

# 

for the given partition size, return the number of non-empty partitions of the impulse response.

### **Parameters**

### **Returns**

the number of non-empty partitions of the impulse response, i.e. partitions containing only zeros are not counted.

checks if the partition contains only zeros

### **Parameters**

fragsize	partition size
index	partition index

## **Returns**

true when this partition of the impulse response contains only zeros.

### 5.199.4 Member Data Documentation

5.199.4.1 unsigned int MHAFilter::transfer\_function\_t::source\_channel\_index

Source audio channel index for this transfer function.

5.199.4.2 unsigned int MHAFilter::transfer\_function\_t::target\_channel\_index

Target audio channel index for this transfer function.

5.199.4.3 std::vector<float> MHAFilter::transfer\_function\_t::impulse\_response

Impulse response of transfer from source to target channel.

The documentation for this struct was generated from the following files:

- mha filter.hh
- mha\_filter.cpp

5.200 MHAFilter::transfer\_matrix\_t Struct Reference

A sparse matrix of transfer function partitionss.

Inherits vector< transfer\_function\_t >.

### **Public Member Functions**

- std::valarray< unsigned int > partitions (unsigned fragsize) const
   Returns an array of the results of calling the partitions() (p. 549) method on every matrix member.
- std::valarray < unsigned int > non\_empty\_partitions (unsigned int fragsize) const
   Returns an array of the results of calling the non\_empty\_partitions() (p. 549) method on every
   matrix member.

### 5.200.1 Detailed Description

A sparse matrix of transfer function partitionss.

Each matrix element knows its position in the matrix, so they can be stored as a vector.

5.200.2 Member Function Documentation

```
5.200.2.1 std::valarray<unsigned int> MHAFilter::transfer_matrix_t::partitions ( unsigned fragsize ) const [inline]
```

Returns an array of the results of calling the **partitions()** (p. 549) method on every matrix member.

```
5.200.2.2 std::valarray<unsigned int> MHAFilter::transfer_matrix_t::non_empty_partitions ( unsigned int fragsize ) const [inline]
```

Returns an array of the results of calling the **non\_empty\_partitions()** (p. 549) method on every matrix member.


The documentation for this struct was generated from the following file:

· mha\_filter.hh

# 5.201 MHAIOJack::io\_jack\_t Class Reference

Main class for JACK IO.

Inheritance diagram for MHAIOJack::io jack t:

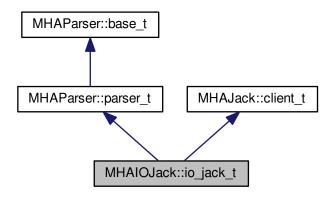

## **Public Member Functions**

- io\_jack\_t (unsigned int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent← \_t stop\_event, void \*stop\_handle)
- void **prepare** (int, int)

  Allocate buffers, activate JACK client and install internal ports.
- void release ()

## **Private Member Functions**

void reconnect\_inports ()

Connect the input ports when connection variable is accessed.

void reconnect\_outports ()

Connect the output ports when connection variable is accessed.

- void get\_physical\_input\_ports ()
- void get\_physical\_output\_ports ()
- void get\_all\_input\_ports ()
- void get\_all\_output\_ports ()
- void get delays in ()
- void get\_delays\_out ()
- void read\_get\_cpu\_load ()
- void read\_get\_xruns ()
- void read\_get\_scheduler ()

### **Private Attributes**

- unsigned int fw\_fragsize
- float fw samplerate
- MHAParser::string\_t servername
- MHAParser::string\_t clientname
- MHAParser::vstring\_t connections\_in
- MHAParser::vint\_mon\_t delays\_in
- MHAParser::vstring t connections out
- MHAParser::vint\_mon\_t delays\_out
- MHAParser::vstring\_t portnames\_in
- MHAParser::vstring\_t portnames\_out
- MHAParser::vstring\_mon\_t ports\_in\_physical
- MHAParser::vstring\_mon\_t ports\_out\_physical
- MHAParser::vstring\_mon\_t ports\_in\_all
- MHAParser::vstring\_mon\_t ports\_out\_all
- MHAParser::parser\_t ports\_parser
- MHAParser::float\_mon\_t state\_cpuload
- MHAParser::int\_mon\_t state\_xruns
- MHAParser::int\_mon\_t state\_priority
- MHAParser::string\_mon\_t state\_scheduler
- MHAParser::parser\_t state\_parser
- MHAEvents::patchbay\_t< io\_jack\_t > patchbay

### **Additional Inherited Members**

## 5.201.1 Detailed Description

Main class for JACK IO.

This class registers a JACK client. JACK and framework states are managed by this class.

### 5.201.2 Constructor & Destructor Documentation

#### 5.201.3 Member Function Documentation

Allocate buffers, activate JACK client and install internal ports.

```
5.201.3.2 void io_jack_t::release ( )
5.201.3.3 void io_jack_t::reconnect_inports( ) [private]
Connect the input ports when connection variable is accessed.
5.201.3.4 void io_jack_t::reconnect_outports() [private]
Connect the output ports when connection variable is accessed.
5.201.3.5 void io_jack_t::get_physical_input_ports( ) [private]
5.201.3.6 void io_jack_t::get_physical_output_ports( ) [private]
5.201.3.7 void io_jack_t::get_all_input_ports( ) [private]
5.201.3.8 void io_jack_t::get_all_output_ports( ) [private]
5.201.3.9 void io_jack_t::get_delays_in( ) [private]
5.201.3.10 void io_jack_t::get_delays_out() [private]
5.201.3.11 void io_jack_t::read_get_cpu_load( ) [private]
5.201.3.12 void io_jack_t::read_get_xruns( ) [private]
5.201.3.13 void io_jack_t::read_get_scheduler( ) [private]
5.201.4 Member Data Documentation
5.201.4.1
         unsigned int MHAIOJack::io_jack_t::fw_fragsize [private]
5.201.4.2 float MHAIOJack::io_jack_t::fw_samplerate [private]
5.201.4.3 MHAParser::string t MHAIOJack::io_jack_t::servername [private]
5.201.4.4 MHAParser::string_t MHAIOJack::io_jack_t::clientname [private]
5.201.4.5 MHAParser::vstring t MHAIOJack::io_jack_t::connections_in [private]
5.201.4.6 MHAParser::vint_mon_t MHAIOJack::io_jack_t::delays_in [private]
5.201.4.7 MHAParser::vstring_t MHAIOJack::io_jack_t::connections_out [private]
```


```
5.201.4.8
         MHAParser::vint_mon_t MHAIOJack::io_jack_t::delays_out [private]
5.201.4.9 MHAParser::vstring_t MHAIOJack::io_jack_t::portnames_in [private]
5.201.4.10 MHAParser::vstring_t MHAIOJack::io_jack_t::portnames_out [private]
5.201.4.11 MHAParser::vstring_mon_t MHAIOJack::io_jack_t::ports_in_physical [private]
5.201.4.12 MHAParser::vstring_mon_t MHAIOJack::io_jack_t::ports_out_physical [private]
5.201.4.13 MHAParser::vstring_mon_t MHAIOJack::io_jack_t::ports_in_all [private]
5.201.4.14 MHAParser::vstring mon t MHAlOJack::io jack t::ports out all [private]
5.201.4.15 MHAParser::parser_t MHAIOJack::io_jack_t::ports_parser [private]
5.201.4.16 MHAParser::float_mon_t MHAIOJack::io_jack_t::state_cpuload [private]
5.201.4.17 MHAParser::int_mon_t MHAIOJack::io_jack_t::state_xruns [private]
5.201.4.18 MHAParser::int_mon_t MHAIOJack::io_jack_t::state_priority [private]
5.201.4.19 MHAParser::string mon t MHAIOJack::io_jack_t::state_scheduler [private]
5.201.4.20 MHAParser::parser_t MHAIOJack::io_jack_t::state_parser [private]
5.201.4.21 MHAEvents::patchbay t<io jack t> MHAIOJack::io_jack_t::patchbay [private]
The documentation for this class was generated from the following file:
```

## MHAIOJack.cpp

## 5.202 MHAIOJackdb::io\_jack\_t Class Reference

Main class for JACK IO.

Inheritance diagram for MHAIOJackdb::io jack t:

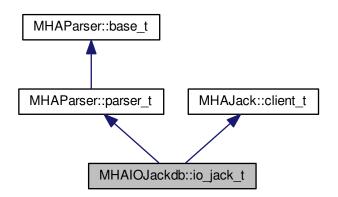

### **Public Member Functions**

- io\_jack\_t (unsigned int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent← \_t stop\_event, void \*stop\_handle)
- void **prepare** (int, int)

Allocate buffers, activate JACK client and install internal ports.

- void release ()
- bool fail\_on\_async\_jackerror () const

#### **Private Member Functions**

- int IOProcessEvent\_inner (mha\_wave\_t \*sln, mha\_wave\_t \*\*sOut)
- void reconnect\_inports ()

Connect the input ports when connection variable is accessed.

void reconnect\_outports ()

Connect the output ports when connection variable is accessed.

- void get\_physical\_input\_ports ()
- void get\_physical\_output\_ports ()
- void get\_all\_input\_ports ()
- void get\_all\_output\_ports ()
- void read get cpu load ()
- void read get xruns ()
- void read get scheduler ()
- void set\_use\_jack\_transport ()
- void set locate ()

### **Static Private Member Functions**

static int IOProcessEvent\_inner (void \*handle, mha\_wave\_t \*sIn, mha\_wave\_t \*\*s
 Out)

## **Private Attributes**

- IOProcessEvent t proc event
- void \* proc\_handle
- unsigned int mha\_fragsize
- float mha\_samplerate
- unsigned int fragsize\_ratio
- MHAParser::string\_t servername
- MHAParser::string\_t clientname
- MHAParser::vstring\_t connections\_in
- MHAParser::vstring\_t connections\_out
- MHAParser::vstring\_t portnames\_in
- MHAParser::vstring\_t portnames\_out

- MHAParser::bool\_t fail\_on\_async\_jackerr
- MHAParser::bool\_t use\_jack\_transport
- MHAParser::float t locate
- MHAParser::float mon t server srate
- MHAParser::int mon t server fragsize
- MHAParser::vstring\_mon\_t ports\_in\_physical
- MHAParser::vstring\_mon\_t ports\_out\_physical
- MHAParser::vstring\_mon\_t ports\_in\_all
- MHAParser::vstring\_mon\_t ports\_out\_all
- MHAParser::parser\_t ports\_parser
- MHAParser::float\_mon\_t state\_cpuload
- MHAParser::int\_mon\_t state\_xruns
- MHAParser::int\_mon\_t state\_priority
- MHAParser::string\_mon\_t state\_scheduler
- MHAParser::parser\_t state\_parser
- MHASignal::waveform\_t \* pwinner\_out
- MHAEvents::patchbay t< io jack t > patchbay

### **Additional Inherited Members**

### 5.202.1 Detailed Description

Main class for JACK IO.

This class registers a JACK client. JACK and framework states are managed by this class.

### 5.202.2 Constructor & Destructor Documentation

## 5.202.3 Member Function Documentation

Allocate buffers, activate JACK client and install internal ports.

```
5.202.3.2 void io_jack_t::release ( )
5.202.3.3 bool MHAIOJackdb::io_jack_t::fail_on_async_jackerror( ) const [inline]
5.202.3.4 int io jack t::IOProcessEvent inner (
                     void * handle,
                     mha_wave_t * sln,
                     mha_wave_t ** sOut ) [static], [private]
5.202.3.5 int io jack t::IOProcessEvent inner (
                     mha_wave_t * sln,
                     mha_wave_t ** sOut ) [private]
5.202.3.6 void io_jack_t::reconnect_inports( ) [private]
Connect the input ports when connection variable is accessed.
5.202.3.7 void io_jack_t::reconnect_outports() [private]
Connect the output ports when connection variable is accessed.
5.202.3.8 void io_jack_t::get_physical_input_ports( ) [private]
5.202.3.9 void io_jack_t::get_physical_output_ports() [private]
5.202.3.10 void io_jack_t::get_all_input_ports() [private]
5.202.3.11 void io_jack_t::get_all_output_ports( ) [private]
5.202.3.12 void io_jack_t::read_get_cpu_load( ) [private]
5.202.3.13 void io jack t::read get xruns() [private]
5.202.3.14 void io_jack_t::read_get_scheduler( ) [private]
5.202.3.15 void io_jack_t::set_use_jack_transport( ) [private]
5.202.3.16 void io_jack_t::set_locate() [private]
5.202.4 Member Data Documentation
5.202.4.1 IOProcessEvent_t MHAIOJackdb::io_jack_t::proc_event [private]
5.202.4.2 void* MHAIOJackdb::io_jack_t::proc_handle [private]
```


```
5.202.4.3
         unsigned int MHAIOJackdb::io_jack_t::mha_fragsize [private]
5.202.4.4 float MHAIOJackdb::io_jack_t::mha_samplerate [private]
5.202.4.5 unsigned int MHAIOJackdb::io_jack_t::fragsize_ratio [private]
5.202.4.6 MHAParser::string_t MHAIOJackdb::io_jack_t::servername [private]
5.202.4.7 MHAParser::string t MHAIOJackdb::io_jack_t::clientname [private]
5.202.4.8 MHAParser::vstring_t MHAIOJackdb::io_jack_t::connections_in [private]
5.202.4.9 MHAParser::vstring_t MHAIOJackdb::io_jack_t::connections_out [private]
5.202.4.10 MHAParser::vstring t MHAIOJackdb::io_jack_t::portnames_in [private]
5.202.4.11 MHAParser::vstring t MHAIOJackdb::io_jack_t::portnames_out [private]
5.202.4.12 MHAParser::bool_t MHAlOJackdb::io_jack_t::fail_on_async_jackerr [private]
5.202.4.13 MHAParser::bool_t MHAIOJackdb::io_jack_t::use_jack_transport [private]
5.202.4.14 MHAParser::float_t MHAIOJackdb::io_jack_t::locate [private]
5.202.4.15 MHAParser::float mon t MHAIOJackdb::io_jack_t::server_srate [private]
5.202.4.16 MHAParser::int_mon_t MHAIOJackdb::io_jack_t::server_fragsize [private]
5.202.4.17 MHAParser::vstring_mon_t MHAIOJackdb::io_jack_t::ports_in_physical [private]
5.202.4.18 MHAParser::vstring_mon_t MHAIOJackdb::io_jack_t::ports_out_physical
          [private]
5.202.4.19 MHAParser::vstring mon t MHAIOJackdb::io_jack_t::ports_in_all [private]
5.202.4.20 MHAParser::vstring_mon_t MHAIOJackdb::io_jack_t::ports_out_all [private]
5.202.4.21 MHAParser::parser_t MHAIOJackdb::io_jack_t::ports_parser [private]
5.202.4.22 MHAParser::float_mon_t MHAIOJackdb::io_jack_t::state_cpuload [private]
5.202.4.23 MHAParser::int_mon_t MHAIOJackdb::io_jack_t::state_xruns [private]
5.202.4.24 MHAParser::int mon t MHAIOJackdb::io_jack_t::state_priority [private]
5.202.4.25 MHAParser::string mon t MHAlOJackdb::io_jack_t::state_scheduler [private]
5.202.4.26 MHAParser::parser_t MHAlOJackdb::io_jack_t::state_parser [private]
5.202.4.27 MHASignal::waveform_t* MHAlOJackdb::io_jack_t::pwinner_out [private]
5.202.4.28 MHAEvents::patchbay t<io jack t> MHAIOJackdb::io_jack_t::patchbay
          [private]
```

The documentation for this class was generated from the following file:

## MHAIOJackdb.cpp

## 5.203 MHAIOPortAudio::device\_info\_t Class Reference

Inheritance diagram for MHAIOPortAudio::device\_info\_t:

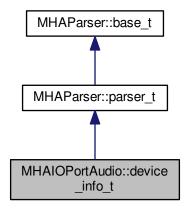

## **Public Member Functions**

- device\_info\_t ()
- void fill\_info ()

## **Public Attributes**

- MHAParser::int\_mon\_t numDevices
- MHAParser::vint\_mon\_t structVersion
- MHAParser::vstring\_mon\_t name
- MHAParser::vint\_mon\_t hostApi
- MHAParser::vint\_mon\_t maxInputChannels
- MHAParser::vint\_mon\_t maxOutputChannels
- MHAParser::vfloat\_mon\_t defaultLowInputLatency
- MHAParser::vfloat\_mon\_t defaultLowOutputLatency
- MHAParser::vfloat\_mon\_t defaultHighInputLatency
- MHAParser::vfloat\_mon\_t defaultHighOutputLatency
- MHAParser::vfloat\_mon\_t defaultSampleRate

**Additional Inherited Members** 


5.203.1 Constructor & Destructor Documentation		
5.203.1.1 MHAIOPortAudio::device_info_t::device_info_t( ) [inline]		
5.203.2 Member Function Documentation		
5.203.2.1 void MHAIOPortAudio::device_info_t::fill_info( ) [inline]		
5.203.3 Member Data Documentation		
5.203.3.1 MHAParser::int_mon_t MHAIOPortAudio::device_info_t::numDevices		
5.203.3.2 MHAParser::vint_mon_t MHAIOPortAudio::device_info_t::structVersion		
5.203.3.3 MHAParser::vstring_mon_t MHAIOPortAudio::device_info_t::name		
5.203.3.4 MHAParser::vint_mon_t MHAIOPortAudio::device_info_t::hostApi		
5.203.3.5 MHAParser::vint_mon_t MHAIOPortAudio::device_info_t::maxInputChannels		
5.203.3.6 MHAParser::vint_mon_t MHAIOPortAudio::device_info_t::maxOutputChannels		
5.203.3.7 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultLowInputLatency		
5.203.3.8 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultLowOutputLatency		
5.203.3.9 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultHighInputLatency		
5.203.3.10 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultHighOutputLatency		
5.203.3.11 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultSampleRate		
The documentation for this class was generated from the following file:		

# MHAIOPortAudio.cpp

# 5.204 MHAIOPortAudio::io\_portaudio\_t Class Reference

Main class for Portaudio sound IO.

Inheritance diagram for MHAIOPortAudio::io\_portaudio\_t:

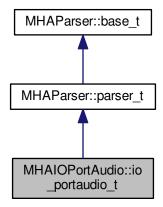

## **Public Member Functions**

- io\_portaudio\_t (unsigned int fragsize, float samplerate, IOProcessEvent\_t proc\_⇔ event, void \*proc\_handle, IOStartedEvent\_t start\_event, void \*start\_handle, IO⇔ StoppedEvent\_t stop\_event, void \*stop\_handle)
- void device\_name\_updated ()
- void device\_index\_updated ()
- ~io portaudio t ()
- void cmd\_prepare (int, int)
- void cmd\_start ()
- void cmd\_stop ()
- void cmd\_release ()
- int **portaudio\_callback** (const void \*input, void \*output, unsigned long frame\_count, const PaStreamCallbackTimeInfo \*time\_info, PaStreamCallbackFlags status\_flags)

### **Private Attributes**

- · device\_info\_t device\_info
- MHASignal::waveform\_t \* s\_in
- mha\_wave\_t \* s\_out
- · float samplerate
- unsigned int nchannels\_out
- · unsigned int nchannels\_in

- · unsigned int fragsize
- IOProcessEvent\_t proc\_event
- void \* proc\_handle
- IOStartedEvent\_t start\_event
- void \* start handle
- IOStoppedEvent\_t stop\_event
- void \* stop\_handle
- PaStream \* portaudio\_stream
- MHAParser::string\_t device\_name
- MHAParser::int\_t device\_index
- MHAEvents::patchbay\_t< io\_portaudio\_t > patchbay

**Additional Inherited Members** 

5.204.1 Detailed Description

Main class for Portaudio sound IO.

5.204.2 Constructor & Destructor Documentation

- **5.204.2.2** MHAIOPortAudio::io\_portaudio\_t::~io\_portaudio\_t( ) [inline]
- 5.204.3 Member Function Documentation
- 5.204.3.1 void MHAIOPortAudio::io\_portaudio\_t::device\_name\_updated( ) [inline]
- 5.204.3.2 void MHAIOPortAudio::io\_portaudio\_t::device\_index\_updated( ) [inline]
- 5.204.3.4 void MHAIOPortAudio::io\_portaudio\_t::cmd\_start ( )

```
5.204.3.5 void MHAIOPortAudio::io portaudio t::cmd stop ( )
5.204.3.6 void MHAIOPortAudio::io portaudio t::cmd release ( )
5.204.3.7 int MHAIOPortAudio::io_portaudio_t::portaudio_callback (
                      const void * input,
                      void * output.
                      unsigned long frame_count,
                      const PaStreamCallbackTimeInfo * time info,
                      PaStreamCallbackFlags status_flags )
5.204.4 Member Data Documentation
5.204.4.1
         device info t MHAIOPortAudio::io portaudio t::device info [private]
5.204.4.2 MHASignal::waveform t* MHAIOPortAudio::io_portaudio_t::s_in [private]
5.204.4.3 mha wave t* MHAIOPortAudio::io_portaudio_t::s_out [private]
5.204.4.4 float MHAIOPortAudio::io_portaudio_t::samplerate [private]
5.204.4.5 unsigned int MHAIOPortAudio::io_portaudio_t::nchannels_out [private]
5.204.4.6 unsigned int MHAIOPortAudio::io_portaudio_t::nchannels_in [private]
5.204.4.7
         unsigned int MHAIOPortAudio::io portaudio t::fragsize [private]
5.204.4.8 IOProcessEvent_t MHAIOPortAudio::io_portaudio_t::proc_event [private]
5.204.4.9 void* MHAIOPortAudio::io_portaudio_t::proc_handle [private]
5.204.4.10 IOStartedEvent_t MHAIOPortAudio::io_portaudio_t::start_event [private]
5.204.4.11 void* MHAIOPortAudio::io_portaudio_t::start_handle [private]
5.204.4.12 IOStoppedEvent tMHAIOPortAudio::io_portaudio_t::stop_event [private]
5.204.4.13 void* MHAIOPortAudio::io portaudio t::stop handle [private]
5.204.4.14 PaStream * MHAIOPortAudio::io_portaudio_t::portaudio_stream [private]
5.204.4.15 MHAParser::string t MHAlOPortAudio::io_portaudio_t::device_name [private]
5.204.4.16 MHAParser::int_t MHAIOPortAudio::io_portaudio_t::device_index [private]
5.204.4.17
          MHAEvents::patchbay_t<io_portaudio_t> MHAIOPortAudio::io_portaudio_t \leftarrow
           ::patchbay [private]
```


The documentation for this class was generated from the following file:

## MHAIOPortAudio.cpp

# 5.205 MHAJack::client\_avg\_t Class Reference

Generic JACK client for averaging a system response across time.

Inheritance diagram for MHAJack::client\_avg\_t:

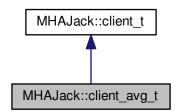

#### **Public Member Functions**

- client\_avg\_t (const std::string &name, const unsigned int &nrep\_)
   Constructor for averaging client.
- void io (mha\_wave\_t \*s\_out, mha\_wave\_t \*s\_in, const std::vector< std::string</li>
   &p\_out, const std::vector< std::string</li>
   &p\_in, float \*srate=NULL, unsigned int \*fragsize=NULL)

Recording function.

## **Private Member Functions**

- void proc (mha\_wave\_t \*sln, mha\_wave\_t \*\*sOut)
- void IOStoppedEvent ()

#### **Static Private Member Functions**

- static int proc (void \*handle, mha\_wave\_t \*sln, mha\_wave\_t \*\*sOut)
- static void IOStoppedEvent (void \*handle, int proc\_err, int io\_err)

## **Private Attributes**

- bool b\_stopped
- unsigned int pos
- mha\_wave\_t \* sn\_in
- mha\_wave\_t \* sn\_out
- std::string name
- MHASignal::waveform\_t \* frag\_out
- const unsigned int nrep
- unsigned int **n**
- bool b\_ready

## **Additional Inherited Members**

# 5.205.1 Detailed Description

Generic JACK client for averaging a system response across time.

```
5.205.2 Constructor & Destructor Documentation
```

Constructor for averaging client.

#### **Parameters**

name⇔ _	Name of JACK client
nrep⇔	Number of repetitions
_	

## 5.205.3 Member Function Documentation

Recording function.

long-description

# **Parameters**

is_out	Input (test) signal, which will be repeated
is_in	System response (averaged, same length as input required)
p_out	Ports to play back the test signal
p_in	Ports to record from the system response
srate	Pointer to sampling rate variable, will be filled with server sampling rate
fragsize	Pointer to fragment size variable, will be filled with server fragment size

```
5.205.3.2 int MHAJack::client_avg_t::proc (
                     void * handle,
                     mha wave t * sln,
                     mha_wave_t ** sOut ) [static], [private]
5.205.3.3 void MHAJack::client_avg_t::IOStoppedEvent (
                     void * handle,
                     int proc_err,
                     int io_err ) [static], [private]
5.205.3.4 void MHAJack::client_avg_t::proc (
                     mha_wave_t * sln,
                     mha_wave_t ** sOut ) [private]
5.205.3.5 void MHAJack::client_avg_t::IOStoppedEvent( ) [private]
5.205.4 Member Data Documentation
5.205.4.1 bool MHAJack::client_avg_t::b_stopped [private]
5.205.4.2 unsigned int MHAJack::client_avg_t::pos [private]
5.205.4.3 mha_wave_t* MHAJack::client_avg_t::sn_in [private]
5.205.4.4 mha wave t* MHAJack::client_avg_t::sn_out [private]
5.205.4.5 std::string MHAJack::client_avg_t::name [private]
5.205.4.6 MHASignal::waveform_t* MHAJack::client_avg_t::frag_out [private]
5.205.4.7 const unsigned int MHAJack::client_avg_t::nrep [private]
5.205.4.8 unsigned int MHAJack::client_avg_t::n [private]
5.205.4.9 bool MHAJack::client_avg_t::b_ready [private]
```


The documentation for this class was generated from the following files:

- · mhajack.h
- mhajack.cpp

## 5.206 MHAJack::client noncont t Class Reference

Generic client for synchronous playback and recording of waveform fragments.

Inheritance diagram for MHAJack::client\_noncont\_t:

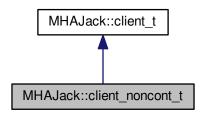

#### **Public Member Functions**

- client\_noncont\_t (const std::string &name, bool use\_jack\_transport=false)
- void io (mha\_wave\_t \*s\_out, mha\_wave\_t \*s\_in, const std::vector< std::string</li>
   &p\_out, const std::vector< std::string</li>
   &p\_in, float \*srate=NULL, unsigned int \*fragsize=NULL)

## **Private Member Functions**

- void proc (mha\_wave\_t \*sln, mha\_wave\_t \*\*sOut)
- void IOStoppedEvent ()

### **Static Private Member Functions**

- static int proc (void \*handle, mha\_wave\_t \*sln, mha\_wave\_t \*\*sOut)
- static void **IOStoppedEvent** (void \*handle, int proc err, int io err)

#### **Private Attributes**

- bool b\_stopped
- unsigned int pos
- mha\_wave\_t \* sn\_in
- mha\_wave\_t \* sn\_out
- std::string name
- MHASignal::waveform\_t \* frag\_out

**Additional Inherited Members** 

```
5.206.1 Detailed Description
```

Generic client for synchronous playback and recording of waveform fragments.

```
5.206.2 Constructor & Destructor Documentation
5.206.2.1 MHAJack::client_noncont_t::client_noncont_t (
                      const std::string & name,
                      bool use_jack_transport = false )
5.206.3 Member Function Documentation
5.206.3.1 void MHAJack::client_noncont_t::io (
                      mha wave t * s out,
                      mha wave t * s in,
                      const std::vector< std::string > & p_out,
                      const std::vector< std::string > & p_in,
                      float * srate = NULL,
                      unsigned int * fragsize = NULL )
5.206.3.2 int MHAJack::client_noncont_t::proc (
                      void * handle,
                      mha wave t * sln,
                      mha wave t ** sOut ) [static], [private]
5.206.3.3 void MHAJack::client_noncont_t::IOStoppedEvent (
                      void * handle,
                      int proc_err,
                      int io_err ) [static], [private]
5.206.3.4 void MHAJack::client_noncont_t::proc (
                      mha wave t * sln.
                      mha wave t ** sOut ) [private]
5.206.3.5 void MHAJack::client_noncont_t::lOStoppedEvent() [private]
5.206.4 Member Data Documentation
5.206.4.1 bool MHAJack::client_noncont_t::b_stopped [private]
5.206.4.2 unsigned int MHAJack::client_noncont_t::pos [private]
```

```
5.206.4.3 mha_wave_t* MHAJack::client_noncont_t::sn_in [private]
```

**5.206.4.4 mha\_wave\_t**\* **MHAJack::client\_noncont\_t::sn\_out** [private]

**5.206.4.5** std::string MHAJack::client\_noncont\_t::name [private]

**5.206.4.6** MHASignal::waveform\_t\* MHAJack::client\_noncont\_t::frag\_out [private]


The documentation for this class was generated from the following files:

- · mhajack.h
- mhajack.cpp

5.207 MHAJack::client\_t Class Reference

Generic asynchronous JACK client.

Inheritance diagram for MHAJack::client t:

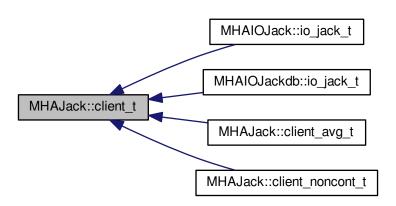

#### **Public Member Functions**

- client\_t (IOProcessEvent\_t proc\_event, void \*proc\_handle=NULL, IOStartedEvent
   \_t start\_event=NULL, void \*start\_handle=NULL, IOStoppedEvent\_t stop\_event=N
   ULL, void \*stop\_handle=NULL, bool use\_jack\_transport=false)
- void **prepare** (const std::string &client\_name, const unsigned int &**nchannels\_in**, const unsigned int &**nchannels\_out**)

Allocate buffers, activate JACK client and install internal ports.

• void **prepare** (const std::string &server\_name, const std::string &client\_name, const unsigned int &nchannels\_in, const unsigned int &nchannels\_out)

Allocate buffers, ports, and activates JACK client.

void release ()

Remove JACK client and deallocate internal ports and buffers.

- void start (bool fail\_on\_async\_jack\_error=true)
- void stop ()
- void connect input (const std::vector< std::string > &)

Connect the input ports when connection variable is accessed.

void connect\_output (const std::vector< std::string > &)

Connect the output ports when connection variable is accessed.

- unsigned int get\_fragsize () const
- float get\_srate () const
- unsigned long **get xruns** ()
- unsigned long get xruns reset ()
- std::string **str\_error** (int err)
- void get\_ports (std::vector< std::string > &, unsigned long jack\_flags)
   Get a list of Jack ports.
- std::vector< std::string > get\_my\_input\_ports ()
- std::vector< std::string > get\_my\_output\_ports ()
- void **set input portnames** (const std::vector< std::string > &)
- void set output portnames (const std::vector< std::string > &)
- float get\_cpu\_load ()
- void set use jack transport (bool ut)

### **Protected Attributes**

• jack client t \* jc

#### **Private Member Functions**

void prepare\_impl (const char \*server\_name, const char \*client\_name, const unsigned int &nchannels\_in, const unsigned int &nchannels\_out)

Allocate buffers, activate JACK client and allocates jack ports Registers the jack client with the given server and activates it.

- void internal start ()
- void internal\_stop ()
- void stopped (int, int)
- int jack\_proc\_cb (jack\_nframes\_t)

This is the main processing callback.

• int jack\_xrun\_cb ()

## **Static Private Member Functions**

- static int jack\_proc\_cb (jack\_nframes\_t, void \*)
- static int jack\_xrun\_cb (void \*)

#### **Private Attributes**

- unsigned long num xruns
- unsigned int fragsize
- float samplerate
- unsigned int nchannels\_in
- unsigned int nchannels\_out
- IOProcessEvent\_t proc\_event
- void \* proc handle
- IOStartedEvent\_t start\_event
- void \* start\_handle
- IOStoppedEvent t stop event
- void \* stop handle
- MHASignal::waveform\_t \* s\_in
- mha\_wave\_t \* s\_out
- MHAJack::port t \*\* inch
- MHAJack::port\_t \*\* outch
- · unsigned int flags
- bool b\_prepared
- bool use\_jack\_transport
- jack\_transport\_state\_t jstate\_prev
- std::vector< std::string > input portnames
- std::vector< std::string > output portnames
- bool fail\_on\_async\_jackerror

## 5.207.1 Detailed Description

Generic asynchronous JACK client.

### 5.207.2 Constructor & Destructor Documentation

```
5.207.2.1 MHAJack::client t::client t (
```

```
IOProcessEvent_t proc_event, void * proc_handle = NULL,
```

IOStartedEvent t start event = NULL,

void \* start handle = NULL,

IOStoppedEvent\_t stop\_event = NULL,

void \* stop\_handle = NULL,

bool use\_jack\_transport = false )

## 5.207.3 Member Function Documentation

```
5.207.3.1 void MHAJack::client_t::prepare (
```

const std::string & client\_name, const unsigned int & nch\_in, const unsigned int & nch\_out )

Allocate buffers, activate JACK client and install internal ports.

Registers the jack client with the default jack server and activates it.

#### **Parameters**

client_name	Name of this jack client
nch_in	Input ports to register
nch_out	Output ports to register

Allocate buffers, ports, and activates JACK client.

Registers the jack client with specified jack server and activates it.

#### **Parameters**

server_name	Name of the jack server to register with
client_name	Name of this jack client
nch_in	Input ports to register
nch_out	Output ports to register

```
5.207.3.3 void MHAJack::client_t::release ( )
```

Remove JACK client and deallocate internal ports and buffers.

```
5.207.3.4 void MHAJack::client_t::start (
bool fail_on_async_jack_error = true )
```

5.207.3.5 void MHAJack::client\_t::stop ( )

Connect the input ports when connection variable is accessed.

Connect the output ports when connection variable is accessed.

```
5.207.3.8 unsigned int MHAJack::client_t::get_fragsize( ) const [inline]
5.207.3.9 float MHAJack::client_t::get_srate( ) const [inline]
5.207.3.10 unsigned long MHAJack::client_t::get_xruns( ) [inline]
5.207.3.11 unsigned long MHAJack::client_t::get_xruns_reset( )
5.207.3.12 std::string MHAJack::client_t::str_error( int err )
5.207.3.13 void MHAJack::client_t::get_ports( std::vector< std::string > & res, unsigned long jack_flags )
```

Get a list of Jack ports.

#### **Parameters**

res	Result string vector
jack_flags	Jack port flags (JackPortInput etc.)

Allocate buffers, activate JACK client and allocates jack ports Registers the jack client with the given server and activates it.

### **Parameters**

server_name	Name of the jack server to register with
client_name	Name of this jack client
nch_in	Input ports to register
nch_out	Output ports to register

**5.207.3.21 void** MHAJack::client\_t::internal\_start() [private]

```
5.207.3.22 void MHAJack::client_t::internal_stop( ) [private]
5.207.3.23 void MHAJack::client_t::stopped (
                       int proc_err,
                       int io_err ) [private]
5.207.3.24 int MHAJack::client_t::jack_proc_cb (
                       jack_nframes_t n,
                       void * h ) [static], [private]
5.207.3.25 int MHAJack::client_t::jack_proc_cb (
                       jack_nframes_t n ) [private]
This is the main processing callback.
Here happens double buffering and downsampling.
5.207.3.26 int MHAJack::client_t::jack_xrun_cb (
                       void * h ) [static], [private]
5.207.3.27 int MHAJack::client_t::jack_xrun_cb() [inline], [private]
5.207.4 Member Data Documentation
5.207.4.1
         unsigned long MHAJack::client_t::num_xruns [private]
5.207.4.2 unsigned int MHAJack::client_t::fragsize [private]
5.207.4.3 float MHAJack::client_t::samplerate [private]
5.207.4.4 unsigned int MHAJack::client t::nchannels in [private]
5.207.4.5 unsigned int MHAJack::client_t::nchannels_out [private]
5.207.4.6 IOProcessEvent_t MHAJack::client_t::proc_event [private]
```

```
5.207.4.7 void* MHAJack::client_t::proc_handle [private]
5.207.4.8 IOStartedEvent_t MHAJack::client_t::start_event [private]
5.207.4.9 void* MHAJack::client_t::start_handle [private]
5.207.4.10 IOStoppedEvent tMHAJack::client_t::stop_event [private]
5.207.4.11 void* MHAJack::client_t::stop_handle [private]
5.207.4.12 MHASignal::waveform_t* MHAJack::client_t::s_in [private]
5.207.4.13 mha_wave_t* MHAJack::client_t::s_out [private]
5.207.4.14 MHAJack::port_t** MHAJack::client_t::inch [private]
5.207.4.15 MHAJack::port_t** MHAJack::client_t::outch [private]
5.207.4.16 jack_client_t* MHAJack::client_t::jc [protected]
5.207.4.17 unsigned int MHAJack::client_t::flags [private]
5.207.4.18 bool MHAJack::client_t::b_prepared [private]
5.207.4.19 bool MHAJack::client_t::use_jack_transport [private]
5.207.4.20 jack_transport_state_t MHAJack::client_t::jstate_prev [private]
5.207.4.21 std::vector<std::string> MHAJack::client_t::input_portnames [private]
5.207.4.22 std::vector<std::string> MHAJack::client_t::output_portnames [private]
5.207.4.23 bool MHAJack::client_t::fail_on_async_jackerror [private]
```

The documentation for this class was generated from the following files:

- mhajack.h
- mhajack.cpp

5.208 MHAJack::port t Class Reference

Class for one channel/port.

## **Public Types**

```
Public Member Functions
```

```
    port_t (jack_client_t *jc, dir_t dir, int id)
    port_t (jack_client_t *jc, dir_t dir, const std::string &id)
    Constructor to create port with specific name.
```

- ~port t()
- void read (mha\_wave\_t \*s, unsigned int ch)
- void write (mha\_wave\_t \*s, unsigned int ch)
- void **mute** (unsigned int n)
- void connect\_to (const char \*pn)
- const char \* get\_short\_name ()

Return the port name.

## **Private Attributes**

```
    dir_t dir_type
```

```
jack_port_t * port
```

- jack\_default\_audio\_sample\_t \* iob
- jack\_client\_t \* jc

# 5.208.1 Detailed Description

Class for one channel/port.

This class represents one JACK port. Double buffering for asynchronous process callbacks is managed by this class.

```
5.208.2 Member Enumeration Documentation
```

```
5.208.2.1 enum MHAJack::port_t::dir_t
```

# Enumerator

input

output

5.208.3 Constructor & Destructor Documentation

## **Parameters**

jc	JACK client.
dir	Direction (input/output).
id	Number in port name (starting with 1).

Constructor to create port with specific name.

#### **Parameters**

jc	JACK client.
dir	Direction (input/output).
id	Port name.

```
5.208.3.3 MHAJack::port_t::~port_t ( )
```

5.208.4 Member Function Documentation

## **Parameters**

S	Signal structure to store the audio data.	
ch	Channel number in audio data structure to be used.	

### **Parameters**

s	Signal structure from which the audio data is read.
ch	Channel number in audio data structure to be used.

```
5.208.4.3 void MHAJack::port_t::mute ( unsigned int n )
```

## **Parameters**

n Number of samples to be muted (must be the same as reported by Jack processing callback).

```
5.208.4.4 void MHAJack::port_t::connect_to ( const char * pn )
```

#### **Parameters**

pn | Port name to connect to

```
5.208.4.5 const char * MHAJack::port_t::get_short_name ( )
```

Return the port name.

5.208.5 Member Data Documentation

```
5.208.5.1 dir_t MHAJack::port_t::dir_type [private]
```

**5.208.5.2** jack\_port\_t\* MHAJack::port\_t::port [private]

**5.208.5.3** jack\_default\_audio\_sample\_t\* MHAJack::port\_t::iob [private]


**5.208.5.4** jack\_client\_t\* MHAJack::port\_t::jc [private]

The documentation for this class was generated from the following files:

- · mhajack.h
- mhajack.cpp

## 5.209 MHAKernel::algo comm class t Class Reference

Inheritance diagram for MHAKernel::algo\_comm\_class\_t:

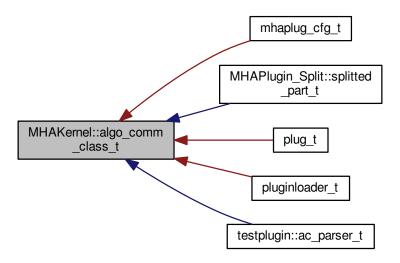

## **Public Member Functions**

- algo\_comm\_class\_t ()
- virtual ~algo comm class t ()
- algo\_comm\_t get\_c\_handle ()
- virtual void local\_insert\_var (const char \*, comm\_var\_t)
- virtual void local\_remove\_var (const char \*)
- virtual void local remove ref (void \*)
- virtual bool local\_is\_var (const char \*)
- virtual void local\_get\_var (const char \*, comm\_var\_t \*)
- virtual std::string local get entries ()
- virtual comm\_var\_map\_t::size\_type size () const

#### **Static Public Member Functions**

- static int insert\_var (void \*, const char \*, comm\_var\_t)
- static int insert\_var\_int (void \*, const char \*, int \*)
- static int insert\_var\_float (void \*, const char \*, float \*)
- static int remove\_var (void \*, const char \*)
- static int remove\_ref (void \*, void \*)
- static int is\_var (void \*, const char \*)
- static int get\_var (void \*, const char \*, comm\_var\_t \*)
- static int get\_var\_int (void \*, const char \*, int \*)
- static int get\_var\_float (void \*, const char \*, float \*)
- static int get entries (void \*, char \*, unsigned int)
- static const char \* get\_error (int)

### **Public Attributes**

• char \* algo\_comm\_id\_string

#### **Private Attributes**

```
· algo_comm_t ac
```

- int algo\_comm\_id\_string\_len
- · comm var map t vars

```
5.209.1 Constructor & Destructor Documentation
5.209.1.1 MHAKernel::algo_comm_class_t::algo_comm_class_t()
5.209.1.2 MHAKernel::algo comm class t::~algo comm class t() [virtual]
5.209.2 Member Function Documentation
5.209.2.1 algo_comm_t MHAKernel::algo_comm_class_t::get_c_handle ( )
5.209.2.2 int MHAKernel::algo_comm_class_t::insert_var (
                      void * handle,
                      const char * name.
                      comm_var_t var ) [static]
5.209.2.3 int MHAKernel::algo_comm_class_t::insert_var_int (
                      void * handle.
                      const char * name,
                      int * ivar ) [static]
5.209.2.4 int MHAKernel::algo_comm_class_t::insert_var_float (
                      void * handle,
                      const char * name,
                      float * ivar ) [static]
5.209.2.5 int MHAKernel::algo_comm_class_t::remove_var (
                      void * handle,
                      const char * name ) [static]
5.209.2.6 int MHAKernel::algo_comm_class_t::remove_ref (
                      void * handle,
                      void * ref ) [static]
```

```
5.209.2.7 int MHAKernel::algo comm class t::is var (
                      void * handle,
                      const char * name ) [static]
5.209.2.8 int MHAKernel::algo_comm_class_t::get_var (
                      void * handle.
                      const char * name,
                      comm var t * var ) [static]
5.209.2.9 int MHAKernel::algo_comm_class_t::get_var_int (
                      void * handle.
                      const char * name,
                      int * ivar ) [static]
5.209.2.10 int MHAKernel::algo comm class t::get var float (
                       void * handle,
                       const char * name.
                       float * ivar ) [static]
5.209.2.11 int MHAKernel::algo_comm_class_t::get_entries (
                       void * handle.
                       char * ret.
                       unsigned int len ) [static]
5.209.2.12 const char * MHAKernel::algo_comm_class_t::get_error (
                       int e ) [static]
5.209.2.13 void MHAKernel::algo comm class t::local insert var (
                       const char * name,
                       comm_var_t var ) [virtual]
5.209.2.14 void MHAKernel::algo_comm_class_t::local_remove_var (
                       const char * name ) [virtual]
5.209.2.15 void MHAKernel::algo_comm_class_t::local_remove_ref (
                       void * addr ) [virtual]
5.209.2.16 bool MHAKernel::algo_comm_class_t::local_is_var (
                       const char * name ) [virtual]
5.209.2.17 void MHAKernel::algo comm class t::local get var (
                       const char * name,
                       comm_var_t * var ) [virtual]
5.209.2.18 std::string MHAKernel::algo_comm_class_t::local_get_entries( ) [virtual]
```

```
5.209.2.19 MHAKernel::comm_var_map_t::size_type MHAKernel::algo_comm_class_t::size ( ) const [virtual]

5.209.3 Member Data Documentation
```

```
5.209.3.1 char* MHAKernel::algo_comm_class_t::algo_comm_id_string
```

```
5.209.3.2 algo_comm_t MHAKernel::algo_comm_class_t::ac [private]
```

```
5.209.3.3 int MHAKernel::algo_comm_class_t::algo_comm_id_string_len [private]
```

```
5.209.3.4 comm_var_map_t MHAKernel::algo_comm_class_t::vars [private]
```

The documentation for this class was generated from the following files:

- · mha\_algo\_comm.hh
- mha\_algo\_comm.cpp

# 5.210 MHAKernel::comm\_var\_map\_t Class Reference

Inherits map< std::string, comm\_var\_t >.

**Public Member Functions** 

• bool **has key** (const std::string &name)

5.210.1 Member Function Documentation


The documentation for this class was generated from the following file:

mha\_algo\_comm.hh

# 5.211 MHAMultiSrc::base\_t Class Reference

Base class for source selection.

Inheritance diagram for MHAMultiSrc::base\_t:

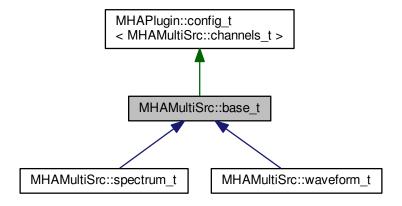

## **Public Member Functions**

- base\_t (algo\_comm\_t iac)
- void **select\_source** (const std::vector< std::string > &src, int in\_channels)

  Change the selection of input sources.

#### **Protected Attributes**

• algo\_comm\_t ac

**Additional Inherited Members** 

## 5.211.1 Detailed Description

Base class for source selection.

## See also

MHAMultiSrc::channel\_t (p. 583) MHAMultiSrc::channels\_t (p. 584)

### 5.211.2 Constructor & Destructor Documentation

```
5.211.2.1 MHAMultiSrc::base_t::base_t (
algo_comm_t iac )
```

#### 5.211.3 Member Function Documentation

Change the selection of input sources.

This function is real-time and thread safe.

#### **Parameters**

src	List of input sources	
in_channels	Number of input channels in direct input (the processed signal)	

#### 5.211.4 Member Data Documentation

```
5.211.4.1 algo_comm_t MHAMultiSrc::base_t::ac [protected]
```

The documentation for this class was generated from the following files:

- mha\_multisrc.h
- mha\_multisrc.cpp

# 5.212 MHAMultiSrc::channel\_t Class Reference

**Public Attributes** 

- std::string name
- int channel

## 5.212.1 Member Data Documentation

5.212.1.1 std::string MHAMultiSrc::channel\_t::name

5.212.1.2 int MHAMultiSrc::channel\_t::channel

The documentation for this class was generated from the following file:

mha\_multisrc.h

# 5.213 MHAMultiSrc::channels\_t Class Reference

Inherits vector< MHAMultiSrc::channel\_t >.

**Public Member Functions** 

• channels\_t (const std::vector< std::string > &src, int in\_channels)

Separate a list of input sources into a parsable channel list.

## 5.213.1 Constructor & Destructor Documentation

Separate a list of input sources into a parsable channel list.

The number of input channels if verified, a list of **MHAMultiSrc::channel\_t** (p. 583) is filled.

#### **Parameters**


route	vector of source channel ids
in_channels	number of channels in the processed input signal

The documentation for this class was generated from the following files:

- · mha\_multisrc.h
- mha\_multisrc.cpp

# 5.214 MHAMultiSrc::spectrum\_t Class Reference

Inheritance diagram for MHAMultiSrc::spectrum\_t:

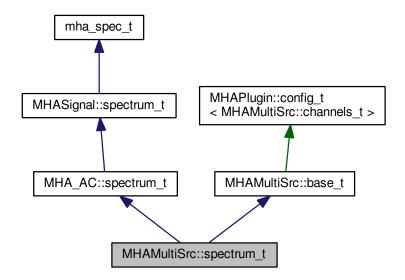

## **Public Member Functions**

- spectrum\_t (algo\_comm\_t iac, std::string name, unsigned int frames, unsigned int channels)
- $\bullet \ \ mha\_spec\_t * update (mha\_spec\_t *s)$

Update data of spectrum to hold actual input data.

## **Additional Inherited Members**

#### 5.214.1 Constructor & Destructor Documentation

#### 5.214.2 Member Function Documentation

Update data of spectrum to hold actual input data.

## **Parameters**

s Input signal chunk

## Returns


Return pointer to spectrum structure

The documentation for this class was generated from the following files:

- · mha\_multisrc.h
- · mha\_multisrc.cpp

# 5.215 MHAMultiSrc::waveform\_t Class Reference

Inheritance diagram for MHAMultiSrc::waveform\_t:

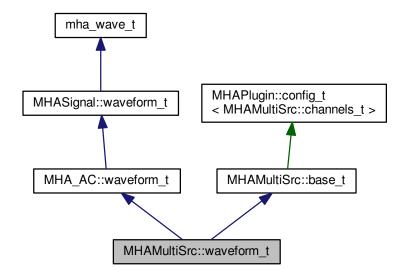

## **Public Member Functions**

- waveform\_t (algo\_comm\_t iac, std::string name, unsigned int frames, unsigned int channels)
- mha\_wave\_t \* update (mha\_wave\_t \*s)

Update data of waveform to hold actual input data.

**Additional Inherited Members** 

## 5.215.1 Constructor & Destructor Documentation

#### **5.215.2** Member Function Documentation

```
5.215.2.1 mha_wave_t * MHAMultiSrc::waveform_t::update ( mha_wave_t * s )
```

Update data of waveform to hold actual input data.

#### **Parameters**

```
s Input signal chunk
```

## Returns

Return pointer to waveform structure

The documentation for this class was generated from the following files:

- · mha\_multisrc.h
- mha\_multisrc.cpp

# 5.216 MHAOvlFilter::band\_descriptor\_t Class Reference

**Public Attributes** 

```
mha_real_t cf_l
```

- mha\_real\_t ef\_l
- mha\_real\_t cf
- mha\_real\_t ef\_h
- mha\_real\_t cf\_h
- bool low\_side\_flat
- bool high\_side\_flat

## 5.216.1 Member Data Documentation

```
5.216.1.1 mha_real_t MHAOvlFilter::band_descriptor_t::cf_I

5.216.1.2 mha_real_t MHAOvlFilter::band_descriptor_t::ef_I

5.216.1.3 mha_real_t MHAOvlFilter::band_descriptor_t::cf

5.216.1.4 mha_real_t MHAOvlFilter::band_descriptor_t::ef_h

5.216.1.5 mha_real_t MHAOvlFilter::band_descriptor_t::cf_h

5.216.1.6 bool MHAOvlFilter::band_descriptor_t::low_side_flat


5.216.1.7 bool MHAOvlFilter::band_descriptor_t::high_side_flat
```

The documentation for this class was generated from the following file:

## · mha\_fftfb.hh

# 5.217 MHAOvlFilter::barkscale::bark2hz\_t Class Reference

Inheritance diagram for MHAOvIFilter::barkscale::bark2hz\_t:

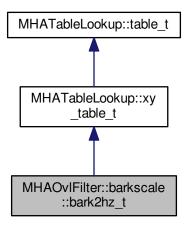

**Public Member Functions** 

- bark2hz\_t ()
- ~bark2hz\_t ()

**Additional Inherited Members** 


- 5.217.1 Constructor & Destructor Documentation
- 5.217.1.1 MHAOvlFilter::barkscale::bark2hz\_t::bark2hz\_t ( )
- 5.217.1.2 MHAOvlFilter::barkscale::bark2hz\_t::~bark2hz\_t ( )

The documentation for this class was generated from the following file:

· mha\_fftfb.cpp

5.218 MHAOvlFilter::barkscale::hz2bark\_t Class Reference

Inheritance diagram for MHAOvIFilter::barkscale::hz2bark\_t:

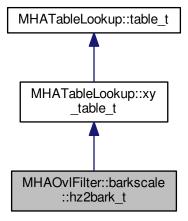

**Public Member Functions** 

- hz2bark\_t ()
- ~hz2bark\_t ()

#### **Additional Inherited Members**

```
5.218.1 Constructor & Destructor Documentation
```

```
5.218.1.1 MHAOvlFilter::barkscale::hz2bark_t::hz2bark_t ( )
```

```
5.218.1.2 MHAOvlFilter::barkscale::hz2bark_t::~hz2bark_t ( )
```

The documentation for this class was generated from the following file:

mha\_fftfb.cpp

5.219 MHAOvlFilter::fftfb\_ac\_info\_t Class Reference

**Public Member Functions** 

- fftfb\_ac\_info\_t (const MHAOvIFilter::fftfb\_t &fb, algo\_comm\_t ac, const std::string &prefix)
- void insert ()

#### **Private Attributes**

MHA AC::waveform t cfv

vector of nominal center frequencies / Hz

MHA\_AC::waveform\_t efv

vector of edge frequencies / Hz

MHA\_AC::waveform\_t bwv

vector of band-weigths (sum of squared fft-bin-weigths)/num\_frames

MHA\_AC::waveform\_t cLTASS

vector of LTASS correction

- 5.219.1 Constructor & Destructor Documentation
- 5.219.2 Member Function Documentation
- 5.219.2.1 void MHAOvlFilter::fftfb\_ac\_info\_t::insert ( )
- 5.219.3 Member Data Documentation
- **5.219.3.1** MHA AC::waveform t MHAOvlFilter::fftfb\_ac\_info\_t::cfv [private]

vector of nominal center frequencies / Hz

**5.219.3.2** MHA\_AC::waveform\_t MHAOvlFilter::fftfb\_ac\_info\_t::efv [private]

vector of edge frequencies / Hz

**5.219.3.3** MHA\_AC::waveform\_t MHAOvlFilter::fftfb\_ac\_info\_t::bwv [private]

vector of band-weigths (sum of squared fft-bin-weigths)/num\_frames

**5.219.3.4** MHA\_AC::waveform\_t MHAOvlFilter::fftfb\_ac\_info\_t::cLTASS [private]

vector of LTASS correction

The documentation for this class was generated from the following files:

- mha fftfb.hh
- mha\_fftfb.cpp

# 5.220 MHAOvIFilter::fftfb\_t Class Reference

FFT based overlapping filter bank.

Inheritance diagram for MHAOvIFilter::fftfb t:



#### **Public Member Functions**

- fftfb\_t (MHAOvlFilter::fftfb\_vars\_t &par, unsigned int nfft, mha\_real\_t fs)

  Constructor for a FFT-based overlapping filter bank.
- ~fftfb t ()
- void apply\_gains (mha\_spec\_t \*s\_out, const mha\_spec\_t \*s\_in, const mha\_wave\_t \*gains)
- void get\_fbpower (mha\_wave\_t \*fbpow, const mha\_spec\_t \*s\_in)
- void get fbpower db (mha wave t \*fbpow, const mha spec t \*s in)
- std::vector< mha\_real\_t > get\_ltass\_gain\_db () const
- unsigned int bin1 (unsigned int band) const

Return index of first non-zero filter shape window.

• unsigned int bin2 (unsigned int band) const

Return index of first zero filter shape window above center frequency.

unsigned int get\_fftlen () const

Return fft length.

mha\_real\_t w (unsigned int k, unsigned int b) const

Return filter shape window at index k in band b.

#### **Private Attributes**

```
• unsigned int * vbin1
```

- unsigned int \* vbin2
- mha\_real\_t(\* shape )(mha\_real\_t)
- unsigned int fftlen
- mha\_real\_t samplingrate

#### **Additional Inherited Members**

5.220.1 Detailed Description

FFT based overlapping filter bank.

5.220.2 Constructor & Destructor Documentation

Constructor for a FFT-based overlapping filter bank.

## **Parameters**

par	Parameters for the FFT filterbank that can not be deduced from the signal dimensions are taken from this set of configuration variables.
nfft	FFT length
fs	Sampling rate / Hz

const mha\_spec\_t \* s\_in )

5.220.2.2 MHAOvlFilter::fftfb\_t::~fftfb\_t()

Return filter shape window at index k in band b.

## **Parameters**

k	Frequency index
b	Band index

5.220.4 Member Data Documentation

```
5.220.4.1 unsigned int* MHAOvlFilter::fftfb_t::vbin1 [private]
5.220.4.2 unsigned int* MHAOvlFilter::fftfb_t::vbin2 [private]
5.220.4.3 mha_real_t(* MHAOvlFilter::fftfb_t::shape) (mha_real_t) [private]
5.220.4.4 unsigned int MHAOvlFilter::fftfb_t::fftlen [private]
```

The documentation for this class was generated from the following files:


**5.220.4.5 mha\_real\_t** MHAOvlFilter::fftfb\_t::samplingrate [private]

- mha fftfb.hh
- mha\_fftfb.cpp

# 5.221 MHAOvlFilter::fftfb\_vars\_t Class Reference

Set of configuration variables for FFT-based overlapping filters.

Inheritance diagram for MHAOvIFilter::fftfb\_vars\_t:

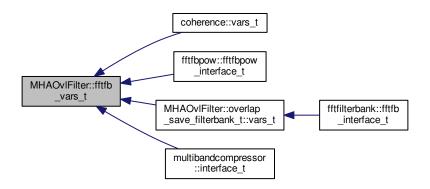

## **Public Member Functions**

fftfb\_vars\_t (MHAParser::parser\_t &p)

construct a set of openMHA configuration language variables suitable for configuring the FFT-based overlapping filterbank.

## **Public Attributes**

scale\_var\_t fscale

Frequency scale type (lin/bark/log/erb).

scale\_var\_t ovltype

Filter shape (rect/lin/hann).

MHAParser::float\_t plateau

relative plateau width.

MHAParser::kw\_t ftype

Flag to decide wether edge or center frequencies are used.

fscale\_t f

Frequency.

MHAParser::bool t normalize

Normalize sum of channels.

MHAParser::bool\_t fail\_on\_nonmonotonic

Fail if frequency entries are non-monotonic (otherwise sort)

MHAParser::bool\_t fail\_on\_unique\_bins

Fail if center frequencies share the same FFT bin.

MHAParser::vfloat\_mon\_t cf

Final center frequencies in Hz.

MHAParser::vfloat\_mon\_t ef

Final edge frequencies in Hz.

MHAParser::vfloat\_mon\_t cLTASS

Bandwidth correction for LTASS noise (level of 0 dB RMS LTASS noise)

MHAParser::mfloat\_mon\_t shapes

### 5.221.1 Detailed Description

Set of configuration variables for FFT-based overlapping filters.

This class enables easy configuration of the FFT-based overlapping filterbank. An instance of **fftfb\_vars\_t** (p. 594) creates openMHA configuration language variables needed for configuring the filterbank, and inserts these variables in the openMHA configuration tree.

This way, the variables are visible to the user and can be configured using the openMHA configuration language.

5.221.2 Constructor & Destructor Documentation

```
5.221.2.1 MHAOvlFilter::fftfb_vars_t::fftfb_vars_t (
MHAParser::parser_t & p )
```

construct a set of openMHA configuration language variables suitable for configuring the FFT-based overlapping filterbank.

## **Parameters**

*p* The node of the configuration tree where the variables created by this instance are inserted.

5.221.3 Member Data Documentation

5.221.3.1 scale\_var\_t MHAOvlFilter::fftfb\_vars\_t::fscale

Frequency scale type (lin/bark/log/erb).

5.221.3.2 scale\_var\_t MHAOvlFilter::fftfb\_vars\_t::ovltype

Filter shape (rect/lin/hann).

5.221.3.3 MHAParser::float\_t MHAOvlFilter::fftfb\_vars\_t::plateau

relative plateau width.

5.221.3.4 MHAParser::kw\_t MHAOvlFilter::fftfb\_vars\_t::ftype

Flag to decide wether edge or center frequencies are used.

5.221.3.5 fscale\_t MHAOvlFilter::fftfb\_vars\_t::f

Frequency.

5.221.3.6 MHAParser::bool t MHAOvlFilter::fftfb\_vars\_t::normalize

Normalize sum of channels.

5.221.3.7 MHAParser::bool\_t MHAOvlFilter::fftfb\_vars\_t::fail\_on\_nonmonotonic

Fail if frequency entries are non-monotonic (otherwise sort)

5.221.3.8 MHAParser::bool\_t MHAOvlFilter::fftfb\_vars\_t::fail\_on\_unique\_bins

Fail if center frequencies share the same FFT bin.

5.221.3.9 MHAParser::vfloat\_mon\_t MHAOvlFilter::fftfb\_vars\_t::cf

Final center frequencies in Hz.

5.221.3.10 MHAParser::vfloat\_mon\_t MHAOvlFilter::fftfb\_vars\_t::ef

Final edge frequencies in Hz.

5.221.3.11 MHAParser::vfloat\_mon\_t MHAOvlFilter::fftfb\_vars\_t::cLTASS

Bandwidth correction for LTASS noise (level of 0 dB RMS LTASS noise)


5.221.3.12 MHAParser::mfloat\_mon\_t MHAOvlFilter::fftfb\_vars\_t::shapes

The documentation for this class was generated from the following files:

- · mha fftfb.hh
- · mha\_fftfb.cpp

# 5.222 MHAOvlFilter::fscale\_bw\_t Class Reference

Inheritance diagram for MHAOvIFilter::fscale\_bw\_t:

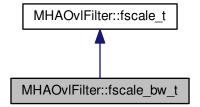

#### **Public Member Functions**

- fscale\_bw\_t (MHAParser::parser\_t &parent)
- std::vector<  $mha\_real\_t > get\_bw\_hz$  () const

#### **Protected Attributes**

MHAParser::vfloat\_t bw

MHAParser::vfloat\_mon\_t bw\_hz

#### **Private Member Functions**

• void update\_hz ()

#### **Private Attributes**

MHAEvents::connector\_t< fscale\_bw\_t > updater

#### **Additional Inherited Members**

5.222.1 Constructor & Destructor Documentation

```
5.222.1.1 MHAOvlFilter::fscale_bw_t::fscale_bw_t (
MHAParser::parser_t & parent )
```

5.222.2 Member Function Documentation

```
5.222.2.1 std::vector< mha_real_t > MHAOvlFilter::fscale_bw_t::get_bw_hz ( ) const
```

5.222.2.2 void MHAOvlFilter::fscale\_bw\_t::update\_hz( ) [private]

5.222.3 Member Data Documentation

**5.222.3.1** MHAParser::vfloat t MHAOvlFilter::fscale\_bw\_t::bw [protected]

**5.222.3.2** MHAParser::vfloat mon t MHAOvlFilter::fscale\_bw\_t::bw\_hz [protected]


**5.222.3.3 MHAEvents::connector\_t**<**fscale\_bw\_t**> MHAOvlFilter::fscale\_bw\_t::updater [private]

The documentation for this class was generated from the following files:

- · mha\_fftfb.hh
- mha\_fftfb.cpp

5.223 MHAOvlFilter::fscale\_t Class Reference

Inheritance diagram for MHAOvIFilter::fscale\_t:

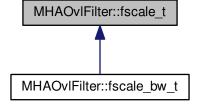

#### **Public Member Functions**

- fscale\_t (MHAParser::parser\_t &parent)
- std::vector< mha\_real\_t > get\_f\_hz () const

#### **Public Attributes**

- scale\_var\_t unit
- MHAParser::vfloat\_t f
- MHAParser::vfloat\_mon\_t f\_hz

#### **Private Member Functions**

void update\_hz ()

#### **Private Attributes**

MHAEvents::connector\_t< fscale\_t > updater

```
5.223.1 Constructor & Destructor Documentation
```

```
5.223.1.1 MHAOvlFilter::fscale_t:(

MHAParser::parser_t & parent)
```

- 5.223.2 Member Function Documentation
- 5.223.2.1 std::vector< mha\_real\_t > MHAOvlFilter::fscale\_t::get\_f\_hz ( ) const
- 5.223.2.2 void MHAOvlFilter::fscale\_t::update\_hz( ) [private]
- 5.223.3 Member Data Documentation
- 5.223.3.1 scale\_var\_t MHAOvlFilter::fscale\_t::unit
- 5.223.3.2 MHAParser::vfloat\_t MHAOvlFilter::fscale\_t::f
- 5.223.3.3 MHAParser::vfloat\_mon\_t MHAOvlFilter::fscale\_t::f\_hz
- **5.223.3.4** MHAEvents::connector\_t<fscale\_t> MHAOvlFilter::fscale\_t::updater [private]

- mha\_fftfb.hh
- mha\_fftfb.cpp

# 5.224 MHAOvIFilter::fspacing\_t Class Reference

Class for frequency spacing, used by filterbank shape generator class.

Inheritance diagram for MHAOvIFilter::fspacing t:



#### **Public Member Functions**

- fspacing\_t (const MHAOvIFilter::fftfb\_vars\_t &par, unsigned int nfft, mha\_real\_t fs)
- std::vector< unsigned int > get\_cf\_fftbin () const
- std::vector< mha real t > get cf hz () const
- std::vector< mha\_real\_t > get\_ef\_hz () const
- unsigned int **nbands** () const

Return number of bands in filter bank.

#### **Protected Member Functions**

- void fail\_on\_nonmonotonic\_cf ()
- void fail\_on\_unique\_fftbins ()

### **Protected Attributes**

- std::vector< MHAOvIFilter::band descriptor t > bands
- mha\_real\_t(\* symmetry\_scale )(mha\_real\_t)

### **Private Member Functions**

- void ef2bands (std::vector< mha\_real\_t > vef)
- void cf2bands (std::vector< mha\_real\_t > vcf)
- void equidist2bands (std::vector< mha\_real\_t > vcf)

### **Private Attributes**

- unsigned int nfft\_
- mha\_real\_t fs\_

#### 5.224.1 Detailed Description


Class for frequency spacing, used by filterbank shape generator class.

```
5.224.2 Constructor & Destructor Documentation
5.224.2.1 MHAOvlFilter::fspacing_t::fspacing_t (
                      const MHAOvlFilter::fftfb_vars_t & par,
                      unsigned int nfft,
                      mha real t fs )
5.224.3 Member Function Documentation
5.224.3.1 std::vector< unsigned int > MHAOvIFilter::fspacing_t::get_cf_fftbin( ) const
5.224.3.2 std::vector< mha_real_t > MHAOvlFilter::fspacing_t::get_cf_hz( ) const
5.224.3.3 std::vector< mha real t > MHAOvIFilter::fspacing_t::get_ef_hz( ) const
5.224.3.4 unsigned int MHAOvIFilter::fspacing_t::nbands ( ) const [inline]
Return number of bands in filter bank.
5.224.3.5 void MHAOvIFilter::fspacing_t::fail_on_nonmonotonic_cf() [protected]
5.224.3.6 void MHAOvlFilter::fspacing_t::fail_on_unique_fftbins() [protected]
5.224.3.7 void MHAOvlFilter::fspacing_t::ef2bands (
                      std::vector< mha_real_t > vef ) [private]
5.224.3.8 void MHAOvlFilter::fspacing t::cf2bands (
                      std::vector< mha_real_t > vcf ) [private]
5.224.3.9 void MHAOvlFilter::fspacing_t::equidist2bands (
                      std::vector< mha_real_t > vcf ) [private]
5.224.4 Member Data Documentation
5.224.4.1 std::vector<MHAOvIFilter::band descriptor t> MHAOvIFilter::fspacing t::bands
          [protected]
5.224.4.2 mha real t(* MHAOvIFilter::fspacing_t::symmetry_scale) (mha real t) [protected]
5.224.4.3 unsigned int MHAOvlFilter::fspacing_t::nfft_ [private]
5.224.4.4 mha_real_t MHAOvlFilter::fspacing_t::fs_ [private]
```

- mha fftfb.hh
- mha\_fftfb.cpp

# 5.225 MHAOvlFilter::overlap\_save\_filterbank\_analytic\_t Class Reference

Inheritance diagram for MHAOvIFilter::overlap\_save\_filterbank\_analytic\_t:

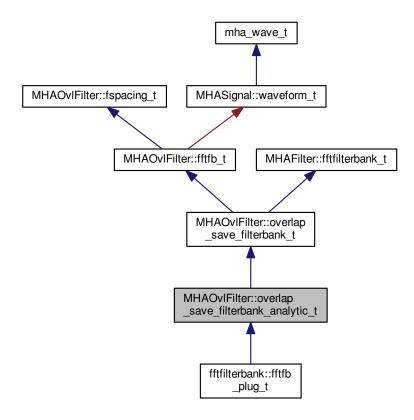

### **Public Member Functions**

- overlap\_save\_filterbank\_analytic\_t (MHAOvlFilter::overlap\_save\_filterbank\_t←
   ::vars\_t &fbpar, mhaconfig\_t channelconfig\_in)
- void filter\_analytic (const mha\_wave\_t \*sln, mha\_wave\_t \*\*fltRe, mha\_wave\_t \*\*fltColor
   lm)

### **Private Attributes**

MHAFilter::fftfilterbank\_t imagfb


# 5.226 MHAOvlFilter::overlap\_save\_filterbank\_t Class Reference 603

Additional Inherited Members
5.225.1 Constructor & Destructor Documentation
5.225.1.1 MHAOvlFilter::overlap_save_filterbank_analytic_t::overlap_save_filterbank_analytic_t (
5.225.2 Member Function Documentation
5.225.2.1 void MHAOvlFilter::overlap_save_filterbank_analytic_t::filter_analytic (
5.225.3 Member Data Documentation
<b>5.225.3.1</b> MHAFilter::fftfilterbank_t MHAOvlFilter::overlap_save_filterbank_analytic_t::imagfb [private]
The documentation for this class was generated from the following files:
<ul><li>mha_fftfb.hh</li><li>mha_fftfb.cpp</li></ul>

5.226 MHAOvlFilter::overlap\_save\_filterbank\_t Class Reference

A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb\_t** (p. 591).

Inheritance diagram for MHAOvIFilter::overlap\_save\_filterbank\_t:

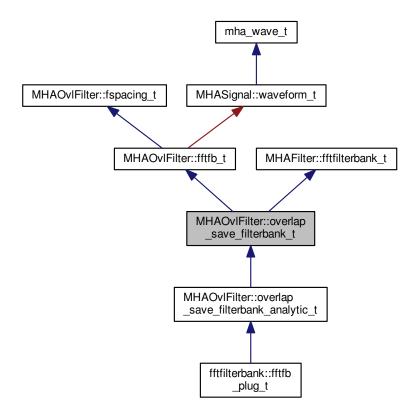

### Classes

class vars\_t

### **Public Member Functions**

- overlap\_save\_filterbank\_t (MHAOvlFilter::overlap\_save\_filterbank\_t::vars\_t &fbpar, mhaconfig\_t channelconfig\_in)
- mhaconfig\_t get\_channelconfig () const

### **Private Attributes**

mhaconfig\_t channelconfig\_out\_

#### **Additional Inherited Members**

### 5.226.1 Detailed Description


A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb\_t** (p. 591).

- 5.226.2 Constructor & Destructor Documentation
- 5.226.3 Member Function Documentation
- 5.226.3.1 mhaconfig\_t MHAOvlFilter::overlap\_save\_filterbank\_t::get\_channelconfig ( ) const [inline]
- 5.226.4 Member Data Documentation
- **5.226.4.1 mhaconfig\_t** MHAOvlFilter::overlap\_save\_filterbank\_t::channelconfig\_out\_ [private]

The documentation for this class was generated from the following files:

- · mha fftfb.hh
- mha\_fftfb.cpp
- 5.227 MHAOvlFilter::overlap\_save\_filterbank\_t::vars\_t Class Reference

Inheritance diagram for MHAOvIFilter::overlap\_save\_filterbank\_t::vars\_t:

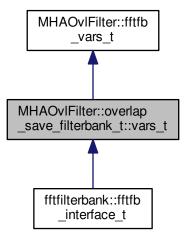

**Public Member Functions** 

vars\_t (MHAParser::parser\_t &p)


#### **Public Attributes**

- MHAParser::int\_t fftlen
- MHAParser::kw\_t phasemodel
- MHAParser::window\_t irswnd
- 5.227.1 Constructor & Destructor Documentation
- 5.227.2 Member Data Documentation
- 5.227.2.1 MHAParser::int\_t MHAOvlFilter::overlap\_save\_filterbank\_t::vars\_t::fftlen
- 5.227.2.2 MHAParser::kw\_t MHAOvlFilter::overlap\_save\_filterbank\_t::vars\_t::phasemodel
- 5.227.2.3 MHAParser::window\_t MHAOvlFilter::overlap\_save\_filterbank\_t::vars\_t::irswnd

- mha\_fftfb.hh
- · mha\_fftfb.cpp

# 5.228 MHAOvlFilter::scale\_var\_t Class Reference

Inheritance diagram for MHAOvIFilter::scale\_var\_t:

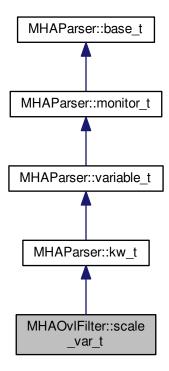

### **Public Member Functions**

- scale\_var\_t (const std::string &help)
- void add\_fun (const std::string &name, scale\_fun\_t \*fun)
- std::string **get\_name** () const
- scale\_fun\_t \* get\_fun () const
- mha\_real\_t hz2unit (mha\_real\_t x) const
- mha\_real\_t unit2hz (mha\_real\_t x) const

### **Private Attributes**

- std::vector< std::string > names
- std::vector< scale\_fun\_t \*> funs

```
Additional Inherited Members
```


```
5.228.1 Constructor & Destructor Documentation
5.228.1.1 MHAOvIFilter::scale_var_t::scale_var_t (
                      const std::string & help )
5.228.2 Member Function Documentation
5.228.2.1 void MHAOvlFilter::scale_var_t::add_fun (
                       const std::string & name,
                       scale_fun_t * fun )
5.228.2.2 std::string MHAOvlFilter::scale_var_t::get_name( ) const [inline]
5.228.2.3 scale fun t* MHAOvlFilter::scale_var_t::get_fun( ) const [inline]
5.228.2.4 mha_real_t MHAOvlFilter::scale_var_t::hz2unit (
                       mha_real_t x ) const
5.228.2.5 mha real t MHAOvlFilter::scale_var_t::unit2hz (
                      mha real tx) const
5.228.3 Member Data Documentation
5.228.3.1 std::vector<std::string> MHAOvlFilter::scale_var_t::names [private]
5.228.3.2 std::vector<scale_fun_t*> MHAOvlFilter::scale_var_t::funs [private]
```

- · mha\_fftfb.hh
- mha\_fftfb.cpp

# 5.229 MHAParser::base\_t Class Reference

Base class for all parser items.

Inheritance diagram for MHAParser::base\_t:

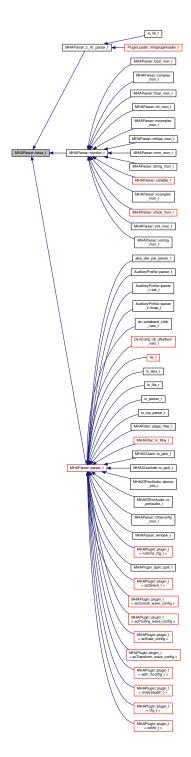

# **Classes**

class replace\_t

#### **Public Member Functions**

base\_t (const std::string &)

Constructor for base class of all parser nodes.

- base\_t (const base\_t &)
- virtual ~base t ()
- virtual std::string parse (const std::string &)

Causes this node to process a command in the openMHA configuration language.

virtual void parse (const char \*, char \*, unsigned int)

This function parses a command and writes the parsing result into a C character array.

- virtual void **parse** (const std::vector< std::string > &, std::vector< std::string > &)
- virtual std::string op subparse (expression t &)
- virtual std::string op setval (expression t &)
- virtual std::string op\_query (expression\_t &)
- virtual std::string query\_dump (const std::string &)
- virtual std::string query\_entries (const std::string &)
- virtual std::string query\_perm (const std::string &)
- virtual std::string query\_range (const std::string &)
- virtual std::string query\_type (const std::string &)
- virtual std::string query\_val (const std::string &)
- virtual std::string query\_readfile (const std::string &)
- virtual std::string query savefile (const std::string &)
- virtual std::string query\_savefile\_compact (const std::string &)
- virtual std::string query\_savemons (const std::string &)
- virtual std::string query\_listids (const std::string &)
- std::string query version (const std::string &)
- std::string query\_id (const std::string &)
- std::string query subst (const std::string &)
- std::string query addsubst (const std::string &)
- std::string query\_help (const std::string &)
- std::string query\_cmds (const std::string &)
- void set\_node\_id (const std::string &)

Set the identification string of this parser node.

void set help (const std::string &)

Set the help comment of a variable or parser.

- void add\_parent\_on\_insert (parser\_t \*, std::string)
- void rm\_parent\_on\_remove (parser\_t \*)
- const std::string & fullname () const

Return the full dot-separated path name of this parser node in the openMHA configuration tree.

### **Public Attributes**

MHAEvents::emitter t writeaccess

Event emitted on write access.

MHAEvents::emitter t valuechanged

Event emitted if the value has changed.

MHAEvents::emitter\_t readaccess

Event emitted on read access.

MHAEvents::emitter\_t prereadaccess

Event emitted on read access, before the data field is accessed.

#### **Protected Member Functions**

- void activate\_query (const std::string &, query\_t)
- · void notify ()

#### **Protected Attributes**

- query\_map\_t queries
- bool data\_is\_initialized

#### **Private Types**

typedef std::vector< replace\_t > repl\_list\_t

#### **Private Member Functions**

- void add\_replace\_pair (const std::string &, const std::string &)
- std::string oplist ()

#### **Private Attributes**

- std::string help
- std::string id\_str
- opact\_map\_t operators
- repl\_list\_t repl\_list
- bool nested lock
- parser\_t \* parent
- std::string thefullname

#### 5.229.1 Detailed Description

Base class for all parser items.

The key method of the parser base class is the std::string **parse(const std::string&)** (p. 612) method. Parser proxy derivatives which overwrite any of the other **parse()** (p. 612) methods to be the key method must make sure that the original **parse()** (p. 612) method utilizes the new key method.

```
5.229.2 Member Typedef Documentation
```

```
5.229.2.1 typedef std::vector<replace_t> MHAParser::base_t::repl_list_t [private]
```

5.229.3 Constructor & Destructor Documentation

Constructor for base class of all parser nodes.

#### **Parameters**

h Help text describing this parser node. This help text is accessible to the configuration language through the "?help" query command.

Causes this node to process a command in the openMHA configuration language.

### **Parameters**

```
cs The command to parse
```

### Returns

The response to the command, if successful

### **Exceptions**

<b>MHA_Error</b> (p. 423)	If the command cannot be executed successfully. The reason for
	failure is given in the message string of the exception.

Reimplemented in PluginLoader::mhapluginloader\_t (p. 858), and altplugs\_t (p. 207).

This function parses a command and writes the parsing result into a C character array.

This base class implementation delegates to parse(const std::string &) (p. 612).

#### **Parameters**

cmd	Command to be parsed
retv	Buffer for the result
len	Length of buffer

Reimplemented in **altplugs\_t** (p. 207).

```
5.229.4.3 void MHAParser::base_t::parse (
                     const std::vector< std::string > & cs,
                     std::vector < std::string > & retv ) [virtual]
5.229.4.4 std::string MHAParser::base t::op subparse (
                     expression t& ) [virtual]
Reimplemented in MHAParser::c_ifc_parser_t (p. 624), and MHAParser::parser_t (p. 666).
5.229.4.5 std::string MHAParser::base_t::op_setval (
                     expression_t & ) [virtual]
Reimplemented in MHAParser::mcomplex_t (p. 650), MHAParser::mfloat_t (p. 654), MH←
AParser::vcomplex_t (p. 681), MHAParser::vfloat_t (p. 685), MHAParser::vint_t (p. 689),
MHAParser::complex_t (p. 630), MHAParser::float_t (p. 636), MHAParser::int_t (p. 641),
MHAParser::bool_t (p. 622), MHAParser::vstring_t (p. 693), MHAParser::string_t (p. 674),
MHAParser::kw_t (p. 646), MHAParser::variable_t (p. 676), MHAParser::c_ifc_parser_
t (p. 624), and MHAParser::parser_t (p. 666).
5.229.4.6 std::string MHAParser::base_t::op_query (
                     expression t& ) [virtual]
Reimplemented in MHAParser::monitor_t (p. 662), MHAParser::c_ifc_parser_t (p. 624),
and MHAParser::parser_t (p. 666).
5.229.4.7 std::string MHAParser::base_t::query_dump (
                     const std::string & s ) [virtual]
```

Reimplemented in MHAParser::monitor\_t (p. 662), and MHAParser::parser\_t (p. 666).

```
5.229.4.8 std::string MHAParser::base_t::query_entries (
                    const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 666).
5.229.4.9 std::string MHAParser::base_t::query_perm (
                    const std::string & s ) [virtual]
Reimplemented in MHAParser::variable t (p. 676), and MHAParser::monitor t (p. 662).
5.229.4.10 std::string MHAParser::base t::query range (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::kw_t (p. 646), and MHAParser::range_var_t (p. 669).
5.229.4.11 std::string MHAParser::base_t::query_type (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::mcomplex mon t (p. 648), MHAParser::vcomplex mon ←
t (p. 679), MHAParser::complex mon t (p. 628), MHAParser::float mon t (p. 634), MH
AParser::mfloat mon t (p. 652), MHAParser::vfloat mon t (p. 683), MHAParser::mint←
_mon_t (p. 661), MHAParser::vint_mon_t (p. 687), MHAParser::vstring_mon_t (p. 691),
MHAParser::string_mon_t (p. 672), MHAParser::bool_mon_t (p. 620), MHAParser::int←
_mon_t (p. 638), MHAParser::mcomplex_t (p. 650), MHAParser::mfloat t (p. 654), MH
AParser::vcomplex t (p. 681), MHAParser::vfloat t (p. 685), MHAParser::vint t (p. 689),
MHAParser::complex_t (p. 630), MHAParser::float_t (p. 636), MHAParser::int_t (p. 641),
MHAParser::bool_t (p. 622), MHAParser::vstring_t (p. 693), MHAParser::string_t (p. 674),
MHAParser::kw_t (p. 646), and MHAParser::parser_t (p. 666).
5.229.4.12 std::string MHAParser::base_t::query_val (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::mcomplex mon t (p. 648), MHAParser::vcomplex mon ←
t (p. 679), MHAParser::complex mon t (p. 628), MHAParser::float mon t (p. 634), MH←
AParser::mfloat_mon_t (p. 652), MHAParser::vfloat_mon_t (p. 683), MHAParser::mint←
_mon_t (p. 661), MHAParser::vint_mon_t (p. 687), MHAParser::vstring_mon_t (p. 691),
MHAParser::string mon t (p. 672), MHAParser::bool mon t (p. 620), MHAParser::int←
_mon_t (p. 638), MHAParser::mcomplex_t (p. 650), MHAParser::mfloat_t (p. 654), MH←
AParser::vcomplex_t (p. 681), MHAParser::vfloat_t (p. 685), MHAParser::vint_t (p. 689),
MHAParser::complex_t (p. 630), MHAParser::float_t (p. 636), MHAParser::int_t (p. 641),
MHAParser::bool_t (p. 622), MHAParser::vstring_t (p. 693), MHAParser::string_t (p. 674),
MHAParser::kw_t (p. 646), and MHAParser::parser_t (p. 667).
5.229.4.13 std::string MHAParser::base_t::query_readfile (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::parser t (p. 666).
```

```
5.229.4.14 std::string MHAParser::base_t::query_savefile (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 667).
5.229.4.15 std::string MHAParser::base_t::query_savefile_compact (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 667).
5.229.4.16 std::string MHAParser::base_t::query_savemons (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser t (p. 667).
5.229.4.17 std::string MHAParser::base_t::query_listids (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 667).
5.229.4.18 std::string MHAParser::base_t::query_version (
                        const std::string & )
5.229.4.19 std::string MHAParser::base_t::query_id (
                        const std::string & )
5.229.4.20 std::string MHAParser::base_t::query_subst (
                        const std::string & s )
5.229.4.21 std::string MHAParser::base_t::query_addsubst (
                        const std::string & s )
5.229.4.22 std::string MHAParser::base_t::query_help (
                        const std::string & s )
5.229.4.23 std::string MHAParser::base_t::query_cmds (
                        const std::string & s )
5.229.4.24 void MHAParser::base_t::set_node_id (
                        const std::string & s )
```

Set the identification string of this parser node.

The id can be queried from the configuration language using the ?id query command. Nodes can be found by id using the ?listid query command on a containing parser node.

# **Parameters**

```
s The new identification string.
```

```
5.229.4.25 void MHAParser::base_t::set_help (
const std::string & s)
```

Set the help comment of a variable or parser.

#### **Parameters**

```
s | New help comment.
```

Return the full dot-separated path name of this parser node in the openMHA configuration tree.

Event emitted on write access.

To connect a callback that is invoked on write access to this parser variable, use MHAEvents—::patchbay\_t<receiver\_t> method connect(&writeaccess,&receiver\_t::callback) where callback is a method that expects no parameters and returns void.

#### 5.229.5.2 MHAEvents::emitter\_t MHAParser::base\_t::valuechanged

Event emitted if the value has changed.

To connect a callback that is invoked when write access to this parser variable actually changes its value, use MHAEvents::patchbay\_t<receiver\_t> method connect(&valuechanged,&receiver — t::callback) where callback is a method that expects no parameters and returns void.

### 5.229.5.3 MHAEvents::emitter\_t MHAParser::base\_t::readaccess

Event emitted on read access.

To connect a callback that is invoked after the value of this variable has been read through the configuration interface, use MHAEvents::patchbay\_t<receiver\_t> method connect(&readaccess,&receiver\_t::callback) where callback is a method that expects no parameters and returns void.

#### 5.229.5.4 MHAEvents::emitter\_t MHAParser::base\_t::prereadaccess

Event emitted on read access, before the data field is accessed.

To connect a callback that is invoked when the value of this variable is about to be read through the configuration interface, so that the callback can influence the value that is reported, use MHAEvents::patchbay\_t<receiver\_t> method connect(&prereadaccess,&receiver\_t::callback) where callback is a method that expects no parameters and returns void.

```
5.229.5.5 query_map_t MHAParser::base_t::queries [protected]
5.229.5.6 bool MHAParser::base_t::data_is_initialized [protected]
5.229.5.7 std::string MHAParser::base_t::help [private]
5.229.5.8 std::string MHAParser::base_t::id_str [private]
5.229.5.9 opact_map_t MHAParser::base_t::operators [private]
5.229.5.10 repl_list_t MHAParser::base_t::repl_list [private]
5.229.5.11 bool MHAParser::base_t::nested_lock [private]
5.229.5.12 parser_t* MHAParser::base_t::parent [private]
5.229.5.13 std::string MHAParser::base_t::thefullname [private]
```

- mha\_parser.hh
- mha\_parser.cpp

### 5.230 MHAParser::base\_t::replace\_t Class Reference

#### **Public Member Functions**

```
• replace_t (const std::string &, const std::string &)
```

- void replace (std::string &)
- const std::string & get\_a () const
- const std::string & get\_b () const

#### **Private Attributes**

```
• std::string a
```

• std::string **b** 

```
5.230.1 Constructor & Destructor Documentation
```

5.230.2 Member Function Documentation

```
5.230.2.1 void MHAParser::base_t::replace_t::replace ( std::string & s )
```

```
5.230.2.2 const std::string& MHAParser::base_t::replace_t::get_a( ) const [inline]
```

```
5.230.2.3 const std::string& MHAParser::base_t::replace_t::get_b ( ) const [inline]
```

5.230.3 Member Data Documentation

```
5.230.3.1 std::string MHAParser::base_t::replace_t::a [private]
```


**5.230.3.2 std::string** MHAParser::base\_t::replace\_t::b [private]

- · mha parser.hh
- mha\_parser.cpp

# 5.231 MHAParser::bool\_mon\_t Class Reference

Monitor with string value.

Inheritance diagram for MHAParser::bool\_mon\_t:

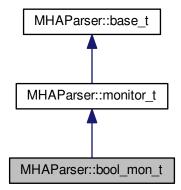

#### **Public Member Functions**

bool\_mon\_t (const std::string &hlp)
 Create a monitor variable for string values.

### **Public Attributes**

• bool **data**Data field.

### **Protected Member Functions**

- std::string query\_val (const std::string &)
- std::string query\_type (const std::string &)

#### **Additional Inherited Members**

5.231.1 Detailed Description

Monitor with string value.

5.231.2 Constructor & Destructor Documentation

Create a monitor variable for string values.

Pa	40	100	-		40
PЯ	ra	m	eı	œ	rs

*hlp* A help text describing this monitor variable.

5.231.3 Member Function Documentation

Reimplemented from MHAParser::base\_t (p. 614).

Reimplemented from **MHAParser::base\_t** (p. 614).

5.231.4 Member Data Documentation

5.231.4.1 bool MHAParser::bool\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

5.232 MHAParser::bool\_t Class Reference

Variable with a boolean value ("yes"/"no")

Inheritance diagram for MHAParser::bool\_t:

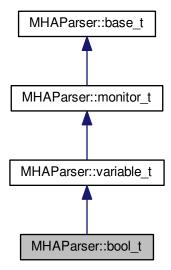

#### **Public Member Functions**

• **bool\_t** (const std::string &help\_text, const std::string &initial\_value)

Constructor for a configuration language variable for boolean values.

### **Public Attributes**

• bool **data**Data field.

### **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

### **Additional Inherited Members**

### 5.232.1 Detailed Description

Variable with a boolean value ("yes"/"no")

#### 5.232.2 Constructor & Destructor Documentation

Constructor for a configuration language variable for boolean values.

#### **Parameters**

help_text	A human-readable text describing the purpose of this configuration variable.		
initial_value	The initial value for this variable as a string. The string representation of 'true'		
	is either "yes" or "1". The string representation of 'false' is either "no" or "0".		

#### 5.232.3 Member Function Documentation

Reimplemented from **MHAParser::variable\_t** (p. 676).

Reimplemented from MHAParser::base\_t (p. 614).

Reimplemented from **MHAParser::base\_t** (p. 614).

5.232.4 Member Data Documentation


5.232.4.1 bool MHAParser::bool\_t::data

Data field.

- mha\_parser.hh
- mha\_parser.cpp

# 5.233 MHAParser::c\_ifc\_parser\_t Class Reference

Inheritance diagram for MHAParser::c\_ifc\_parser\_t:

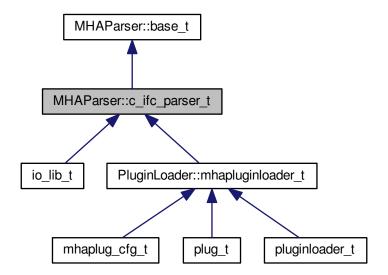

#### **Public Member Functions**

- c\_ifc\_parser\_t (const std::string &modulename\_)
- $\sim$ c\_ifc\_parser\_t ()
- void set\_parse\_cb (c\_parse\_cmd\_t, c\_parse\_err\_t, void \*)

### **Protected Member Functions**

- std::string op\_subparse (MHAParser::expression\_t &)
- std::string op\_setval (MHAParser::expression\_t &)
- std::string op\_query (MHAParser::expression\_t &)

#### **Private Member Functions**

void test\_error ()

#### **Private Attributes**

```
    std::string modulename
```

- c\_parse\_cmd\_t c\_parse\_cmd
- · c\_parse\_err\_t c\_parse\_err
- int liberr
- void \* libdata
- unsigned int ret\_size
- char \* retv

#### **Additional Inherited Members**

```
5.233.1 Constructor & Destructor Documentation
5.233.1.1 MHAParser::c ifc parser t::c ifc parser t (
                     const std::string & modulename )
5.233.1.2 MHAParser::c_ifc_parser_t::~c_ifc_parser_t ( )
5.233.2 Member Function Documentation
5.233.2.1 void MHAParser::c_ifc_parser_t::set_parse_cb (
                     MHAParser::c parse cmd t cb,
                     MHAParser::c_parse_err_t strerr,
                     void * d)
5.233.2.2 std::string MHAParser::c ifc parser t::op subparse (
                     MHAParser::expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 613).
5.233.2.3 std::string MHAParser::c_ifc_parser_t::op_setval (
                     MHAParser::expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 613).
5.233.2.4 std::string MHAParser::c_ifc_parser_t::op_query (
                     MHAParser::expression_t & x ) [protected], [virtual]
```

Reimplemented from **MHAParser::base\_t** (p. 613).

**5.233.2.5** void MHAParser::c\_ifc\_parser\_t::test\_error( ) [private]

5.233.3 Member Data Documentation

**5.233.3.1 std::string MHAParser::c\_ifc\_parser\_t::modulename** [private]

**5.233.3.2 c\_parse\_cmd\_t** MHAParser::c\_ifc\_parser\_t::c\_parse\_cmd [private]

**5.233.3.3 c\_parse\_err\_t** MHAParser::c\_ifc\_parser\_t::c\_parse\_err [private]

**5.233.3.4** int MHAParser::c\_ifc\_parser\_t::liberr [private]

**5.233.3.5 void**\* **MHAParser::c\_ifc\_parser\_t::libdata** [private]

**5.233.3.6** unsigned int MHAParser::c\_ifc\_parser\_t::ret\_size [private]

**5.233.3.7 char**\* **MHAParser**::**c\_ifc\_parser\_t**::retv [private]


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

5.234 MHAParser::commit\_t< receiver\_t > Class Template Reference

Parser variable with event-emission functionality.

Inheritance diagram for MHAParser::commit\_t< receiver\_t >:

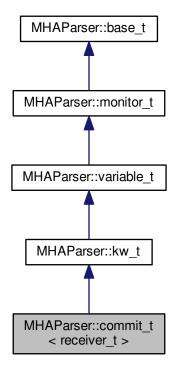

### **Public Member Functions**

commit\_t (receiver\_t \*, void(receiver\_t::\*)(), const std::string &help="Variable changes action")

# **Private Attributes**

MHAEvents::connector\_t< receiver\_t > extern\_connector

#### **Additional Inherited Members**

### 5.234.1 Detailed Description

```
\label{template} \begin{tabular}{ll} template < class receiver\_t > \\ class MHAParser::commit_t < receiver\_t > \\ \end{tabular}
```

Parser variable with event-emission functionality.

The **commit\_t** (p. 625) variable can register an event receiver in its constructor, which is called whenever the variable is set to "commit".

#### 5.234.2 Constructor & Destructor Documentation

5.234.3 Member Data Documentation

```
5.234.3.1 template < class receiver_t > MHAEvents::connector_t < receiver_t > MHAParser::commit_t < receiver_t > ::extern_connector [private]
```


The documentation for this class was generated from the following file:

mha\_parser.hh

### 5.235 MHAParser::complex\_mon\_t Class Reference

Monitor with complex value.

Inheritance diagram for MHAParser::complex\_mon\_t:

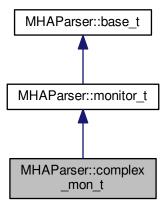

**Public Member Functions** 

complex\_mon\_t (const std::string &hlp)
 Create a complex monitor variable.

#### **Public Attributes**

mha\_complex\_t data

Data field.

**Protected Member Functions** 

```
std::string query_val (const std::string &)
```

• std::string query\_type (const std::string &)

**Additional Inherited Members** 

5.235.1 Detailed Description

Monitor with complex value.

5.235.2 Constructor & Destructor Documentation

5.235.2.1 MHAParser::complex\_mon\_t::complex\_mon\_t ( const std::string & hlp )

Create a complex monitor variable.

**Parameters** 

```
hlp A help text describing this monitor variable.
```

5.235.3 Member Function Documentation

Reimplemented from **MHAParser::base\_t** (p. 614).

Reimplemented from **MHAParser::base\_t** (p. 614).

5.235.4 Member Data Documentation

5.235.4.1 mha\_complex\_t MHAParser::complex\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.236 MHAParser::complex\_t Class Reference

Variable with complex value.

Inheritance diagram for MHAParser::complex\_t:

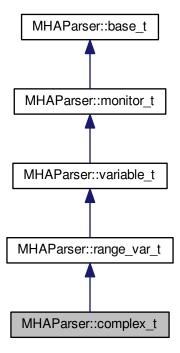

# **Public Member Functions**

complex\_t (const std::string &, const std::string &="")

#### **Public Attributes**

mha\_complex\_t data
 Data field.

**Protected Member Functions** 

```
    std::string op_setval (expression_t &)
    std::string query_type (const std::string &)
    std::string query_val (const std::string &)
```

**Additional Inherited Members** 

5.236.1 Detailed Description

Variable with complex value.

```
5.236.2 Constructor & Destructor Documentation
```

5.236.3 Member Function Documentation

Reimplemented from **MHAParser::variable\_t** (p. 676).

Reimplemented from **MHAParser::base\_t** (p. 614).

Reimplemented from **MHAParser::base\_t** (p. 614).

```
5.236.4 Member Data Documentation
```

```
5.236.4.1 mha_complex_t MHAParser::complex_t::data
```

Data field.

The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

### 5.237 MHAParser::entry\_t Class Reference

**Public Member Functions** 

entry\_t (const std::string &, base\_t \*)

**Public Attributes** 

- std::string name
- base\_t \* entry
- 5.237.1 Constructor & Destructor Documentation

5.237.2 Member Data Documentation

5.237.2.1 std::string MHAParser::entry\_t::name

5.237.2.2 base\_t\* MHAParser::entry\_t::entry

- mha\_parser.hh
- mha\_parser.cpp

### 5.238 MHAParser::expression\_t Class Reference

### **Public Member Functions**

- expression\_t (const std::string &, const std::string &)
   Constructor.
- expression\_t ()

#### **Public Attributes**

- std::string Ival
- std::string rval
- std::string op

#### 5.238.1 Constructor & Destructor Documentation

#### Constructor.

#### **Parameters**

s	String to be splitted
0	List of valid operators (single character only)

```
5.238.1.2 expression_t::expression_t()
```

5.238.2 Member Data Documentation

5.238.2.1 std::string MHAParser::expression\_t::lval

5.238.2.2 std::string MHAParser::expression\_t::rval


5.238.2.3 std::string MHAParser::expression\_t::op

- mha\_parser.hh
- mha\_parser.cpp

5.239 MHAParser::float\_mon\_t Class Reference

Monitor with float value.

Inheritance diagram for MHAParser::float\_mon\_t:

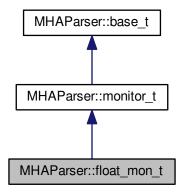

#### **Public Member Functions**

• float\_mon\_t (const std::string &hlp)
Initialize a floating point (32 bits) monitor variable.

## **Public Attributes**

• float data

Data field.

## **Protected Member Functions**

- std::string query\_val (const std::string &)
- std::string query\_type (const std::string &)

**Additional Inherited Members** 

5.239.1 Detailed Description

Monitor with float value.

5.239.2 Constructor & Destructor Documentation

5.239.2.1 MHAParser::float\_mon\_t::float\_mon\_t ( const std::string & hlp )

Initialize a floating point (32 bits) monitor variable.

Pa	ra	m	Φ.	tρ	rs
Га	10		ᆮ	ᅜ	ıa

*hlp* A help text describing this monitor variable.

5.239.3 Member Function Documentation

Reimplemented from MHAParser::base\_t (p. 614).

Reimplemented from **MHAParser::base\_t** (p. 614).

5.239.4 Member Data Documentation

5.239.4.1 float MHAParser::float\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

5.240 MHAParser::float\_t Class Reference

Variable with float value.

Inheritance diagram for MHAParser::float\_t:

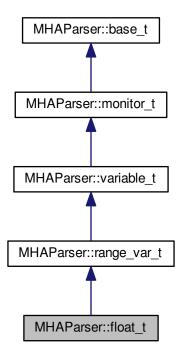

## **Public Member Functions**

float\_t (const std::string &help\_text, const std::string &initial\_value, const std::string &range="")

Constructor for a configuration language variable for 32bit ieee floating-point values.

## **Public Attributes**

· float data

Data field.

## **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

**Additional Inherited Members** 

```
5.240.1 Detailed Description
```

Variable with float value.

```
5.240.2 Constructor & Destructor Documentation
```

Constructor for a configuration language variable for 32bit ieee floating-point values.

#### **Parameters**

help_text	A human-readable text describing the purpose of this configuration variable.
initial_value	The initial value for this variable as a string (decimal representation of the floating-point variable). If a range is given in the third parameter, then the initial value has to be within the range. A human-readable text describing the purpose of this configuration variable.
range	The range of values that this variable can hold can be restricted. A range is a string of the form "[a,b]", where a and b are decimal representations of the inclusive boundaries of the range. a<=b. In a range of the form "]a,b[", both boundaries are excluded. Mixed forms are permitted. a or b can also be omitted if there is no lower or upper limit. The range of values is always restricted by the representable range of the underlying C data type.

```
5.240.3 Member Function Documentation
```

Reimplemented from **MHAParser::base\_t** (p. 614).

## 5.240.4 Member Data Documentation

## 5.240.4.1 float MHAParser::float\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.241 MHAParser::int\_mon\_t Class Reference

Monitor variable with int value.

Inheritance diagram for MHAParser::int\_mon\_t:

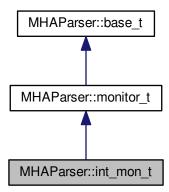

## **Public Member Functions**

int\_mon\_t (const std::string &hlp)
 Create a monitor variable for integral values.

## **Public Attributes**

• int data

Data field.

#### **Protected Member Functions**

```
• std::string query_val (const std::string &)
```

• std::string query\_type (const std::string &)

**Additional Inherited Members** 

5.241.1 Detailed Description

Monitor variable with int value.

Monitor variables can be of many types. These variables can be queried through the parser. The public data element contains the monitored state. Write access is only possible from the C++ code by direct access to the data field.

5.241.2 Constructor & Destructor Documentation

Create a monitor variable for integral values.

#### **Parameters**

```
hlp A help text describing this monitor variable.
```

5.241.3 Member Function Documentation

Reimplemented from MHAParser::base\_t (p. 614).

Reimplemented from **MHAParser::base\_t** (p. 614).

## 5.241.4 Member Data Documentation

# 5.241.4.1 int MHAParser::int\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.242 MHAParser::int\_t Class Reference

Variable with integer value.

Inheritance diagram for MHAParser::int\_t:

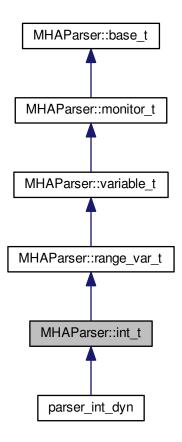

## **Public Member Functions**

• int\_t (const std::string &help\_text, const std::string &initial\_value, const std::string &range="")

Constructor for a configuration language variable for integral values.

## **Public Attributes**

• int data

Data field.

## **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

#### **Additional Inherited Members**

5.242.1 Detailed Description

Variable with integer value.

5.242.2 Constructor & Destructor Documentation

const std::string & initial\_value,
const std::string & range = " " )

Constructor for a configuration language variable for integral values.

# **Parameters**

help_text	A human-readable text describing the purpose of this configuration variable.
initial_value	The initial value for this variable as a string (decimal representation of the integer variable). If a range is given in the third parameter, then the initial value has to be within the range.
range	The range of values that this variable can hold can be restricted. A range is a string of the form "[a,b]", where a and b are decimal representations of the integral inclusive boundaries of the range. a<=b. In a range of the form "]a,b[", both boundaries are excluded. Mixed forms are permitted. a or b can also be omitted if there is no lower or upper limit. The range of values is always restricted by the representable range of the underlying C data type (usually 32 bits, [-2147483648,2147483647]). © 2005-2018 HörTech gGmbH, Oldenburg

```
5.242.3 Member Function Documentation
5.242.3.1 std::string MHAParser::int_t::op_setval (
                     expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 676).
5.242.3.2 std::string MHAParser::int_t::query_type (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 614).
5.242.3.3 std::string MHAParser::int_t::query_val (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 614).
5.242.4 Member Data Documentation
5.242.4.1 int MHAParser::int_t::data
Data field.
The documentation for this class was generated from the following files:
   mha_parser.hh
   mha_parser.cpp
5.243 MHAParser::keyword_list_t Class Reference
Keyword list class.
Public Types
```

© 2005-2018 HörTech gGmbH, Oldenburg

typedef std::vector< std::string >::size\_type size\_t

#### **Public Member Functions**

void set\_value (const std::string &)

Select a value from keyword list.

void set\_entries (const std::string &)

Set keyword list entries.

const std::string & get\_value () const

Return selected value.

const std::vector< std::string > & get\_entries () const

Return keyword list.

const size\_t & get\_index () const

Return index of selected value.

- void set\_index (unsigned int)
- void validate () const

Check if index of selected value is valid.

- void add\_entry (const std::string &en)
- keyword\_list\_t ()

Constructor.

## **Private Attributes**

size t index

Index into list.

std::vector< std::string > entries

List of valid entries.

std::string empty string

## 5.243.1 Detailed Description

Keyword list class.

The stucture **keyword\_list\_t** (p. 641) defines a keyword list (vector of strings) with an index into the list. Used as **MHAParser::kw\_t** (p. 644), it can be used to access a set of valid keywords through the parser (i.e. one of "pear apple banana").

5.243.2 Member Typedef Documentation

5.243.2.1 typedef std::vector<std::string>::size\_type MHAParser::keyword\_list\_t::size\_t

5.243.3 Constructor & Destructor Documentation

5.243.3.1 MHAParser::keyword\_list\_t::keyword\_list\_t ( )

Constructor.

```
5.243.4 Member Function Documentation
```

```
5.243.4.1 void MHAParser::keyword_list_t::set_value ( const std::string & s )
```

Select a value from keyword list.

This function selects a value from the keyword list. The index is set to the last matching entry.

#### **Parameters**

```
s Value to be selected.
```

```
5.243.4.2 void MHAParser::keyword_list_t::set_entries ( const std::string & s )
```

Set keyword list entries.

With this function, the keyword list can be set from a space separated string list.

#### **Parameters**

```
s Space separated entry list.
```

```
5.243.4.3 const std::string & MHAParser::keyword_list_t::get_value ( ) const
```

Return selected value.

```
5.243.4.4 const std::vector< std::string > & MHAParser::keyword_list_t::get_entries ( ) const
```

Return keyword list.

```
5.243.4.5 const MHAParser::keyword_list_t::size_t & MHAParser::keyword_list_t::get_index ( ) const
```

Return index of selected value.

```
5.243.4.6 void MHAParser::keyword_list_t::set_index ( unsigned int idx )
```

5.243.4.7 void MHAParser::keyword\_list\_t::validate( ) const

Check if index of selected value is valid.

5.243.5 Member Data Documentation

**5.243.5.1 size\_t** MHAParser::keyword\_list\_t::index [private]

Index into list.

**5.243.5.2** std::vector<std::string> MHAParser::keyword\_list\_t::entries [private]

List of valid entries.

**5.243.5.3** std::string MHAParser::keyword\_list\_t::empty\_string [private]


The documentation for this class was generated from the following files:

- · mha parser.hh
- mha\_parser.cpp

# 5.244 MHAParser::kw\_t Class Reference

Variable with keyword list value.

Inheritance diagram for MHAParser::kw\_t:

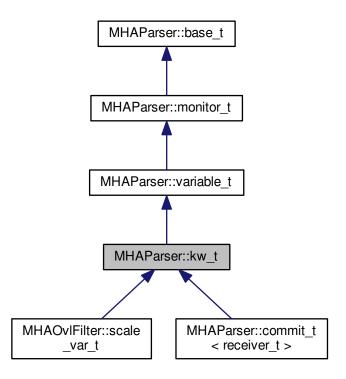

### **Public Member Functions**

- **kw\_t** (const std::string &, const std::string &, const std::string &)

  Constructor of a keyword list openMHA configuration variable.
- kw\_t (const kw\_t &)

Copy constructor.

void set\_range (const std::string &)

Set/change the list of valid entries.

bool isval (const std::string &) const

Test if the given value is selected.

## **Public Attributes**

· keyword list t data

Variable data in its native type.

#### **Protected Member Functions**

- void validate (const keyword\_list\_t &)
- std::string op\_setval (expression\_t &)
- std::string query\_range (const std::string &)
- std::string query\_val (const std::string &)
- std::string query\_type (const std::string &)

**Additional Inherited Members** 

5.244.1 Detailed Description

Variable with keyword list value.

5.244.2 Constructor & Destructor Documentation

Constructor of a keyword list openMHA configuration variable.

#### **Parameters**

h	A help string describing the purpose of this variable.
V	The initial value, has to be a value from the list of possible values given in the last
© 200	parameter. 5-2018 Hörfech gGmbH, Oldenburg
rg	
	The list of entries has to be delimited by brackets "[", "]".

```
5.244.2.2 MHAParser::kw_t::kw_t (
                      const kw_t & src )
Copy constructor.
5.244.3 Member Function Documentation
5.244.3.1 void MHAParser::kw_t::set_range (
                      const std::string & r )
Set/change the list of valid entries.
Parameters
    A string containing the list of valid entries. The entries have to be separated by spaces.
    The list of entries has to be delimited by brackets "[", "]".
5.244.3.2 bool MHAParser::kw_t::isval (
                      const std::string & testval ) const
Test if the given value is selected.
5.244.3.3 void MHAParser::kw t::validate (
                      const keyword_list_t & s ) [protected]
5.244.3.4 std::string MHAParser::kw_t::op_setval (
                      expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 676).
5.244.3.5 std::string MHAParser::kw_t::query_range (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 614).
5.244.3.6 std::string MHAParser::kw_t::query_val (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 614).
```

const std::string & s ) [protected], [virtual]

5.244.3.7 std::string MHAParser::kw\_t::query\_type (

Reimplemented from **MHAParser::base\_t** (p. 614).

## 5.244.4 Member Data Documentation

## 5.244.4.1 keyword\_list\_t MHAParser::kw\_t::data

Variable data in its native type.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

## 5.245 MHAParser::mcomplex\_mon\_t Class Reference

Matrix of complex numbers monitor.

Inheritance diagram for MHAParser::mcomplex\_mon\_t:

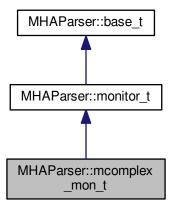

## **Public Member Functions**

mcomplex\_mon\_t (const std::string &hlp)
 Create a matrix of complex floating point monitor values.

## **Public Attributes**

std::vector< std::vector< mha\_complex\_t >> data
 Data field.

#### **Protected Member Functions**

```
std::string query_val (const std::string &)
```

std::string query\_type (const std::string &)

**Additional Inherited Members** 

5.245.1 Detailed Description

Matrix of complex numbers monitor.

5.245.2 Constructor & Destructor Documentation

Create a matrix of complex floating point monitor values.

#### **Parameters**

```
hlp A help text describing this monitor variable.
```

```
5.245.3 Member Function Documentation
```

Reimplemented from MHAParser::base\_t (p. 614).

Reimplemented from MHAParser::base\_t (p. 614).

5.245.4 Member Data Documentation

 $\textbf{5.245.4.1} \quad \textbf{std::vector} < \textbf{mha\_complex\_t} >> \textbf{MHAParser::mcomplex\_mon\_t::data}$ 

Data field.


The documentation for this class was generated from the following files:

- · mha parser.hh
- mha\_parser.cpp

# 5.246 MHAParser::mcomplex\_t Class Reference

Matrix variable with complex value.

Inheritance diagram for MHAParser::mcomplex\_t:

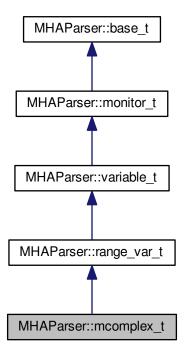

## **Public Member Functions**

mcomplex\_t (const std::string &, const std::string &="")

## **Public Attributes**

std::vector< std::vector< mha\_complex\_t >> data
 Data field.

## **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

```
Additional Inherited Members
```

```
5.246.1 Detailed Description
```

Matrix variable with complex value.

```
5.246.2 Constructor & Destructor Documentation
```

5.246.3 Member Function Documentation

Reimplemented from **MHAParser::variable\_t** (p. 676).

Reimplemented from MHAParser::base\_t (p. 614).

Reimplemented from MHAParser::base\_t (p. 614).

5.246.4 Member Data Documentation

```
5.246.4.1 std::vector<std::vector<mha_complex_t>> MHAParser::mcomplex_t::data
```

Data field.


The documentation for this class was generated from the following files:

- · mha parser.hh
- mha\_parser.cpp

## 5.247 MHAParser::mfloat\_mon\_t Class Reference

Matrix of floats monitor.

Inheritance diagram for MHAParser::mfloat\_mon\_t:

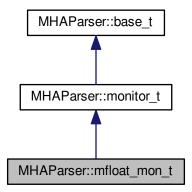

#### **Public Member Functions**

mfloat\_mon\_t (const std::string &hlp)
 Create a matrix of floating point monitor values.

## **Public Attributes**

std::vector< std::vector< float > > data
 Data field.

## **Protected Member Functions**

- std::string query\_val (const std::string &)
- std::string query\_type (const std::string &)

#### **Additional Inherited Members**

5.247.1 Detailed Description

Matrix of floats monitor.

5.247.2 Constructor & Destructor Documentation

5.247.2.1 MHAParser::mfloat\_mon\_t::mfloat\_mon\_t ( const std::string & hlp )

Create a matrix of floating point monitor values.

Pa	40	100	-		40
PЯ	ra	m	eı	œ	rs

*hlp* A help text describing this monitor variable.

5.247.3 Member Function Documentation

Reimplemented from MHAParser::base\_t (p. 614).

Reimplemented from **MHAParser::base\_t** (p. 614).

5.247.4 Member Data Documentation

```
5.247.4.1 std::vector< std::vector<float> > MHAParser::mfloat_mon_t::data
```

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

5.248 MHAParser::mfloat\_t Class Reference

Matrix variable with float value.

Inheritance diagram for MHAParser::mfloat\_t:

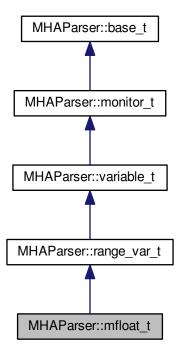

## **Public Member Functions**

mfloat\_t (const std::string &, const std::string &="")
 Create a float matrix parser variable.

## **Public Attributes**

std::vector< std::vector< float > > data
 Data field.

## **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

**Additional Inherited Members** 

```
5.248.1 Detailed Description
```

Matrix variable with float value.

```
5.248.2 Constructor & Destructor Documentation
```

Create a float matrix parser variable.

#### **Parameters**

h	A human-readable text describing the purpose of this configuration variable.
V	The initial value of the variable, as a string, in openMHA configuration language: (e.g. "[[0 1]; [2 3]]" for a matrix), described in the "Multidimensional Variables" s2.1.3 section of the openMHA User Manual.
rg	The numeric range to enforce on all members of the matrix.

```
5.248.3 Member Function Documentation
```

Reimplemented from **MHAParser::variable\_t** (p. 676).

Reimplemented from MHAParser::base\_t (p. 614).

Reimplemented from **MHAParser::base\_t** (p. 614).

5.248.4 Member Data Documentation

 $\textbf{5.248.4.1} \quad \textbf{std::vector} < \textbf{std::vector} < \textbf{float} >> \textbf{MHAParser::mfloat\_t::data}$ 


Data field.

The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

5.249 MHAParser::mhaconfig\_mon\_t Class Reference

Inheritance diagram for MHAParser::mhaconfig\_mon\_t:

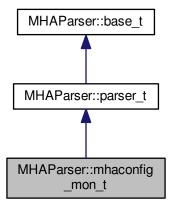

### **Public Member Functions**

- mhaconfig\_mon\_t (const std::string &help="")
- void update (const mhaconfig\_t &cf)

#### **Private Attributes**

MHAParser::int mon t channels

Number of audio channels.

MHAParser::string\_mon\_t domain

Signal domain (MHA WAVEFORM or MHA SPECTRUM)

MHAParser::int\_mon\_t fragsize

Fragment size of waveform data.

MHAParser::int\_mon\_t wndlen

Window length of spectral data.

· MHAParser::int mon t fftlen

FFT length of spectral data.

MHAParser::float\_mon\_t srate

Sampling rate in Hz.

#### **Additional Inherited Members**

```
5.249.1 Constructor & Destructor Documentation
```

5.249.2 Member Function Documentation

```
5.249.2.1 void MHAParser::mhaconfig_mon_t::update ( const mhaconfig_t & cf )
```

5.249.3 Member Data Documentation

```
5.249.3.1 MHAParser::int mon tMHAParser::mhaconfig_mon_t::channels [private]
```

Number of audio channels.

**5.249.3.2** MHAParser::string mon t MHAParser::mhaconfig\_mon\_t::domain [private]

Signal domain (MHA WAVEFORM or MHA SPECTRUM)

**5.249.3.3** MHAParser::int\_mon\_t MHAParser::mhaconfig\_mon\_t::fragsize [private]

Fragment size of waveform data.

**5.249.3.4** MHAParser::int\_mon\_t MHAParser::mhaconfig\_mon\_t::wndlen [private]

Window length of spectral data.

**5.249.3.5** MHAParser::int\_mon\_t MHAParser::mhaconfig\_mon\_t::fftlen [private]

FFT length of spectral data.

**5.249.3.6** MHAParser::float\_mon\_t MHAParser::mhaconfig\_mon\_t::srate [private]

Sampling rate in Hz.

The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

5.250 MHAParser::mhapluginloader\_t Class Reference

Class to create a plugin loader in a parser, including the load logic.

**Public Member Functions** 

- mhapluginloader\_t (MHAParser::parser\_t &parent, algo\_comm\_t ac, const std::string &plugname\_name="plugin\_name", const std::string &prefix="")
- ~mhapluginloader\_t ()
- void prepare (mhaconfig\_t &cf)
- void release ()
- void process (mha\_wave\_t \*sIn, mha\_wave\_t \*\*sOut)
- void process (mha\_spec\_t \*sIn, mha\_spec\_t \*\*sOut)
- void process (mha\_wave\_t \*sln, mha\_spec\_t \*\*sOut)
- void process (mha\_spec\_t \*sln, mha\_wave\_t \*\*sOut)
- mhaconfig\_t get\_cfin () const
- mhaconfig\_t get\_cfout () const
- const std::string & get\_last\_name () const

**Protected Attributes** 

PluginLoader::mhapluginloader\_t \* plug

**Private Member Functions** 

void load\_plug ()

#### **Private Attributes**

- MHAParser::parser\_t & parent\_
- MHAParser::string\_t plugname
- std::string prefix
- MHAEvents::connector t< mhapluginloader t > connector
- algo\_comm\_t ac\_
- std::string last\_name
- std::string plugname\_name\_
- mhaconfig\_t cf\_in\_
- mhaconfig\_t cf\_out\_

## **Static Private Attributes**

static double bookkeeping

## 5.250.1 Detailed Description

Class to create a plugin loader in a parser, including the load logic.

```
5.250.2 Constructor & Destructor Documentation
```

- 5.250.2.2 MHAParser::mhapluginloader t::~mhapluginloader t()
- 5.250.3 Member Function Documentation
- 5.250.3.1 void MHAParser::mhapluginloader\_t::prepare ( mhaconfig\_t & cf )
- 5.250.3.2 void MHAParser::mhapluginloader\_t::release ( )
- 5.250.3.3 void MHAParser::mhapluginloader\_t::process ( mha wave t \* sln,

mha\_wave\_t \*\* sOut ) [inline]

5.250.3.4 void MHAParser::mhapluginloader\_t::process (

mha\_spec\_t \* sln,
mha\_spec\_t \*\* sOut ) [inline]

```
5.250.3.5 void MHAParser::mhapluginloader_t::process (
                     mha_wave_t * sln,
                     mha spec t ** sOut ) [inline]
5.250.3.6 void MHAParser::mhapluginloader_t::process (
                     mha spec t * sln,
                     mha_wave_t ** sOut ) [inline]
5.250.3.7 mhaconfig_t MHAParser::mhapluginloader_t::get_cfin( ) const [inline]
5.250.3.8 mhaconfig t MHAParser::mhapluginloader_t::get_cfout( ) const [inline]
5.250.3.9 const std::string& MHAParser::mhapluginloader_t::get_last_name( ) const [inline]
5.250.3.10 void MHAParser::mhapluginloader_t::load_plug( ) [private]
5.250.4 Member Data Documentation
5.250.4.1 PluginLoader::mhapluginloader_t* MHAParser::mhapluginloader_t::plug
         [protected]
5.250.4.2 MHAParser::parser_t& MHAParser::mhapluginloader_t::parent_ [private]
5.250.4.3 MHAParser::string_t MHAParser::mhapluginloader_t::plugname [private]
5.250.4.4 std::string MHAParser::mhapluginloader_t::prefix_ [private]
5.250.4.5 MHAEvents::connector t<mhapluginloader t> MHAParser::mhapluginloader_t ←
         ::connector [private]
5.250.4.6 algo_comm_t MHAParser::mhapluginloader_t::ac_ [private]
5.250.4.7 std::string MHAParser::mhapluginloader_t::last_name [private]
5.250.4.8 std::string MHAParser::mhapluginloader_t::plugname_name_ [private]
5.250.4.9 mhaconfig_t MHAParser::mhapluginloader_t::cf_in_ [private]
5.250.4.10 mhaconfig_t MHAParser::mhapluginloader_t::cf_out_ [private]
5.250.4.11 double MHAParser::mhapluginloader_t::bookkeeping [static], [private]
```


The documentation for this class was generated from the following files:

- mhapluginloader.h
- mhapluginloader.cpp

# 5.251 MHAParser::mint\_mon\_t Class Reference

Matrix of ints monitor.

Inheritance diagram for MHAParser::mint\_mon\_t:

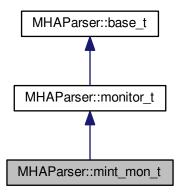

#### **Public Member Functions**

mint\_mon\_t (const std::string &hlp)
 Create a matrix of integer monitor values.

## **Public Attributes**

std::vector< std::vector< int > > data
 Data field.

## **Protected Member Functions**

- std::string query\_val (const std::string &)
- std::string query\_type (const std::string &)

## **Additional Inherited Members**

5.251.1 Detailed Description

Matrix of ints monitor.

5.251.2 Constructor & Destructor Documentation

5.251.2.1 MHAParser::mint\_mon\_t::mint\_mon\_t ( const std::string & hlp )

Create a matrix of integer monitor values.

#### **Parameters**

*hlp* A help text describing this monitor variable.

#### 5.251.3 Member Function Documentation

Reimplemented from **MHAParser::base\_t** (p. 614).

Reimplemented from **MHAParser::base\_t** (p. 614).

#### 5.251.4 Member Data Documentation

5.251.4.1 std::vector< std::vector<int> > MHAParser::mint\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

## 5.252 MHAParser::monitor\_t Class Reference

Base class for monitors and variable nodes.

Inheritance diagram for MHAParser::monitor\_t:

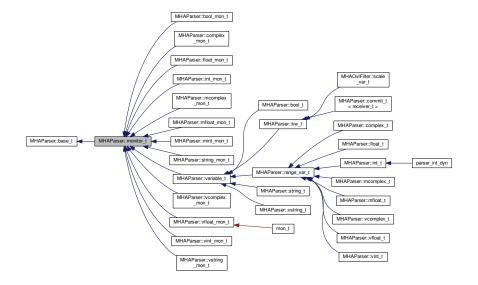

**Public Member Functions** 

```
monitor_t (const std::string &)
   • monitor t (const monitor t &)
   std::string op_query (expression_t &)

    std::string query_dump (const std::string &)

   • std::string query perm (const std::string &)
Additional Inherited Members
5.252.1 Detailed Description
Base class for monitors and variable nodes.
5.252.2 Constructor & Destructor Documentation
5.252.2.1 MHAParser::monitor t::monitor t (
                      const std::string & h )
5.252.2.2 MHAParser::monitor_t::monitor_t (
                      const monitor t & src )
5.252.3 Member Function Documentation
5.252.3.1 std::string MHAParser::monitor_t::op_query (
                      expression t&x) [virtual]
Reimplemented from MHAParser::base_t (p. 613).
5.252.3.2 std::string MHAParser::monitor_t::query_dump (
                      const std::string & s ) [virtual]
Reimplemented from MHAParser::base_t (p. 613).
5.252.3.3 std::string MHAParser::monitor_t::query_perm (
                      const std::string & s ) [virtual]
Reimplemented from MHAParser::base_t (p. 614).
```

The documentation for this class was generated from the following files:

Reimplemented in MHAParser::variable\_t (p. 676).

- mha\_parser.hh
- mha\_parser.cpp

## 5.253 MHAParser::parser t Class Reference

Parser node class.

Inherits MHAParser::base\_t.

Inherited by alsa dev par parser t, AuditoryProfile::parser t, AuditoryProfile::parser ← \_t::ear\_t, AuditoryProfile::parser\_t::fmap\_t, dc::wideband\_inhib\_vars\_t, DynComp⇔ ::dc\_afterburn\_vars\_t, fw\_t, io\_alsa\_t, io\_file\_t, io\_parser\_t, io\_tcp\_parser\_t, MHA Filter::adapt\_filter\_t, MHAFilter::iir\_filter\_t, MHAIOJack::io\_jack\_t, MHAIOJackdb::io\_ jack t, MHAIOPortAudio::device info t, MHAIOPortAudio::io portaudio t, MHAParser← ::mhaconfig mon t, MHAParser::window t, MHAPlugin::plugin t< runtime cfg t >, MHAPlugin\_Split::split\_t, MHAPlugin::plugin\_t< ac2wave\_t >, MHAPlugin::plugin\_t< acConcat\_wave\_config >, MHAPlugin::plugin\_t< acPooling\_wave\_config >, MHA-Plugin::plugin\_t< acSteer\_config >, MHAPlugin::plugin\_t< acTransform\_wave\_config >, MHAPlugin::plugin\_t< adm\_rtconfig\_t >, MHAPlugin::plugin\_t< analysepath t >, MHAPlugin::plugin\_t< cfg\_t >, MHAPlugin::plugin\_t< cohflt\_t >, MHAPlugin::plugin  $\leftarrow$ \_t< combc\_t >, MHAPlugin::plugin\_t< db\_t >, MHAPlugin::plugin\_t< dc\_t >, MHA $\leftarrow$ Plugin::plugin\_t< delaysum\_t >, MHAPlugin::plugin\_t< doasym\_classification\_config >, MHAPlugin::plugin\_t< doasym\_feature\_extraction\_config >, MHAPlugin::plugin\_t< example5\_t >, MHAPlugin::plugin\_t< fftfb\_plug\_t >, MHAPlugin::plugin\_t< fftfbpow\_t >, MHAPlugin::plugin\_t< float >, MHAPlugin::plugin\_t< hilbert\_shifter\_t >, MHA Plugin::plugin t< int >, MHAPlugin::plugin t< lpc bl predictor config >, MHAPlugin← ::plugin t< lpc burglattice config >, MHAPlugin::plugin t< lpc config >, MHAPlugin-::plugin\_t< MHA\_AC::spectrum\_t >, MHAPlugin::plugin\_t< MHA\_AC::waveform\_t >, MHAPlugin::plugin\_t< mhachain::plugs\_t >, MHAPlugin::plugin\_t< MHASignal::delayt >, MHAPlugin::plugin t< MHASignal::waveform t >, MHAPlugin::plugin t< MHA↔  $Window:: fun\_t >, \ MHAPlugin:: plugin\_t < \ noisePowProposed >, \ MHAPlugin:: plugin \leftarrow$ \_t< overlapadd\_t >, MHAPlugin::plugin\_t< plingploing\_t >, MHAPlugin::plugin\_t< prediction\_error\_config >, MHAPlugin::plugin\_t < resampling\_t >, MHAPlugin::plugin ~ \_t< rmslevel\_t >, MHAPlugin::plugin\_t< route::process\_t >, MHAPlugin::plugin\_t< rt\_nlms\_t >, MHAPlugin::plugin\_t < scaler\_t >, MHAPlugin::plugin\_t < sine\_cfg\_t >, MHAPlugin::plugin\_t< smoothspec\_wrap\_t >, MHAPlugin::plugin\_t< spec2wave\_t >,  $\label{eq:mapping} \mbox{MHAPlugin::plugin\_t} < \mbox{spec\_fader\_t} >, \mbox{MHAPlugin::plugin\_t} < \mbox{steerbf\_config} >, \mbox{MH} \leftrightarrow \mbox{MHAPlugin::plugin\_t} < \mbox{steerbf\_config} >, \mbox{steerbf\_config}$ APlugin::plugin\_t< timoConfig >, MHAPlugin::plugin\_t< wave2spec\_t >, MHAPlugin← ::plugin t< wavwriter t >, softclipper variables t, testplugin::ac parser t, testplugin ← ::config\_parser\_t, and testplugin::signal\_parser\_t.

#### **Public Member Functions**

- parser\_t (const std::string &help\_text="")
   Construct detached node to be used in the configuration tree.
- ~parser\_t ()
- void insert\_item (const std::string &, base\_t \*)

Register a parser item into this sub-parser.

• void **remove\_item** (const std::string &)

Remove an item by name.

void force\_remove\_item (const std::string &)

Remove an item by name.

void remove\_item (const base\_t \*)

Remove an item by address.

#### **Protected Member Functions**

- std::string op\_subparse (expression\_t &)
- std::string op\_setval (expression\_t &)
- std::string op\_query (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_dump (const std::string &)
- std::string query entries (const std::string &)
- std::string query\_readfile (const std::string &)
- std::string query\_savefile (const std::string &)
- std::string query\_savefile\_compact (const std::string &)
- std::string query\_savemons (const std::string &)
- std::string query\_val (const std::string &)
- std::string query\_listids (const std::string &)
- void set\_id\_string (const std::string &)

### **Private Attributes**

- entry map t entries
- std::string id\_string identification string
- std::string srcfile
- unsigned int srcline
- std::string last\_errormsg

## **Additional Inherited Members**

## 5.253.1 Detailed Description

Parser node class.

A parser\_t (p. 663) instance is a node in the configuration tree. A parser node can contain any number of other parser\_t (p. 663) instances or configuration language variables. These items are inserted into a parser node using the parser\_t::insert\_item (p. 665) method.

```
5.253.2 Constructor & Destructor Documentation
```

```
5.253.2.1 MHAParser::parser_t::parser_t (
const std::string & help_text = " " )
```

Construct detached node to be used in the configuration tree.

### **Parameters**

help_text	A text describing this node. E.g. if this node lives at the root of some openMHA
	plugin, then the help text should describe the functionality of the plugin.

```
5.253.2.2 MHAParser::parser_t::~parser_t ( )
5.253.3 Member Function Documentation
5.253.3.1 void MHAParser::parser_t::insert_item ( const std::string & n,
```

MHAParser::base\_t \* e )

Register a parser item into this sub-parser.

This function registers an item under a given name into this sub-parser and makes it accessible to the parser interface.

#### **Parameters**

n	Name of the item in the configuration tree
е	C++ pointer to the item instance. e can either point to a variable, to a monitor, or to
	another sub-parser.

```
5.253.3.2 void MHAParser::parser_t::remove_item ( const std::string & n )
```

Remove an item by name.

If the item does not exist, an error is being reported.

# **Parameters**

*n* Name of parser item to be removed from list.

```
5.253.3.3 void MHAParser::parser_t::force_remove_item ( const std::string & n )
```

Remove an item by name.

Non-existing items are ignored.

## **Parameters**

n Name of parser item to be removed from list.

```
5.253.3.4 void MHAParser::parser_t::remove_item ( const base_t * addr )
```

Remove an item by address.

The item belonging to an address is being removed from the list of items.

#### **Parameters**

```
addr
        Address of parser item to be removed.
5.253.3.5 std::string MHAParser::parser_t::op_subparse (
                     expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 613).
5.253.3.6 std::string MHAParser::parser_t::op_setval (
                     expression t&x ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 613).
5.253.3.7 std::string MHAParser::parser_t::op_query (
                     expression t&x ) [protected],[virtual]
Reimplemented from MHAParser::base t (p. 613).
5.253.3.8 std::string MHAParser::parser_t::query_type (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 614).
5.253.3.9 std::string MHAParser::parser_t::query_dump (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 613).
5.253.3.10 std::string MHAParser::parser_t::query_entries (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 614).
5.253.3.11 std::string MHAParser::parser_t::query_readfile (
                      const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 614).
```

```
5.253.3.12 std::string MHAParser::parser_t::query_savefile (
                       const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 615).
5.253.3.13 std::string MHAParser::parser t::query savefile compact (
                       const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 615).
5.253.3.14 std::string MHAParser::parser_t::query_savemons (
                       const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 615).
5.253.3.15 std::string MHAParser::parser_t::query_val (
                       const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 614).
5.253.3.16 std::string MHAParser::parser_t::query_listids (
                       const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 615).
5.253.3.17 void MHAParser::parser_t::set_id_string (
                       const std::string & s ) [protected]
5.253.4 Member Data Documentation
5.253.4.1 entry_map_t MHAParser::parser_t::entries [private]
5.253.4.2 std::string MHAParser::parser_t::id_string [private]
identification string
5.253.4.3 std::string MHAParser::parser_t::srcfile [private]
5.253.4.4 unsigned int MHAParser::parser_t::srcline [private]
5.253.4.5 std::string MHAParser::parser_t::last_errormsg [private]
```


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.254 MHAParser::range\_var\_t Class Reference

Base class for all variables with a numeric value range.

Inheritance diagram for MHAParser::range\_var\_t:

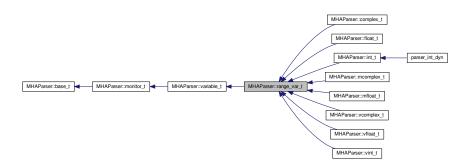

#### **Public Member Functions**

- range\_var\_t (const std::string &, const std::string &="")
- range\_var\_t (const range\_var\_t &)
- std::string query\_range (const std::string &)
- void **set\_range** (const std::string &r)

Change the valid range of a variable.

- void validate (const int &)
- void validate (const float &)
- void validate (const mha\_complex\_t &)
- void validate (const std::vector< int > &)
- void validate (const std::vector< float > &)
- void validate (const std::vector< mha\_complex\_t > &)
- void validate (const std::vector< std::vector< float > > &)
- void validate (const std::vector< std::vector< mha\_complex\_t >> &)

## **Protected Attributes**

float low\_limit

Lower limit of range.

float up\_limit

Upper limit of range.

bool low\_incl

Lower limit is included (or excluded) in range.

bool up\_incl

Upper limit is included (or excluded) in range.

· bool check low

Check lower limit.

bool check\_up

Check upper limit.

bool check\_range

Range checking is active.

**Additional Inherited Members** 

```
5.254.1 Detailed Description
```

Base class for all variables with a numeric value range.

```
5.254.2 Constructor & Destructor Documentation
```

5.254.3 Member Function Documentation

Reimplemented from MHAParser::base\_t (p. 614).

```
5.254.3.2 void MHAParser::range_var_t::set_range ( const std::string & r )
```

Change the valid range of a variable.

## **Parameters**

```
r | New range of the variable (string representation)
```

```
5.254.3.3 void MHAParser::range_var_t::validate ( const int & v )
```

```
5.254.3.4 void MHAParser::range_var_t::validate ( const float & v )
```

```
5.254.3.6 void MHAParser::range_var_t::validate ( const std::vector< int > & \nu )
```

```
5.254.3.7 void MHAParser::range_var_t::validate (
                      const std::vector< float > & v )
5.254.3.8 void MHAParser::range_var_t::validate (
                      const std::vector< mha_complex_t > & v )
5.254.3.9 void MHAParser::range_var_t::validate (
                      const std::vector< std::vector< float > > & \nu
5.254.3.10 void MHAParser::range_var_t::validate (
                       const std::vector< std::vector< mha complex t> > & \nu )
5.254.4 Member Data Documentation
5.254.4.1 float MHAParser::range_var_t::low_limit [protected]
Lower limit of range.
5.254.4.2 float MHAParser::range_var_t::up_limit [protected]
Upper limit of range.
5.254.4.3 bool MHAParser::range var t::low incl [protected]
Lower limit is included (or excluded) in range.
5.254.4.4 bool MHAParser::range var t::up incl [protected]
Upper limit is included (or excluded) in range.
5.254.4.5 bool MHAParser::range_var_t::check_low [protected]
Check lower limit.
5.254.4.6 bool MHAParser::range_var_t::check_up [protected]
Check upper limit.
5.254.4.7 bool MHAParser::range_var_t::check_range [protected]
Range checking is active.
```


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.255 MHAParser::string\_mon\_t Class Reference

Monitor with string value.

Inheritance diagram for MHAParser::string\_mon\_t:

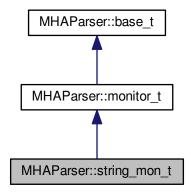

#### **Public Member Functions**

string\_mon\_t (const std::string &hlp)
 Create a monitor variable for string values.

# **Public Attributes**

• std::string data

Data field.

## **Protected Member Functions**

- std::string query\_val (const std::string &)
- std::string query\_type (const std::string &)

### **Additional Inherited Members**

5.255.1 Detailed Description

Monitor with string value.

5.255.2 Constructor & Destructor Documentation

Create a monitor variable for string values.

*hlp* A help text describing this monitor variable.

5.255.3 Member Function Documentation

Reimplemented from MHAParser::base\_t (p. 614).

Reimplemented from **MHAParser::base\_t** (p. 614).

5.255.4 Member Data Documentation

5.255.4.1 std::string MHAParser::string\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

5.256 MHAParser::string\_t Class Reference

Variable with a string value.

Inheritance diagram for MHAParser::string\_t:

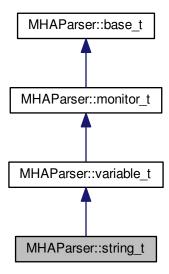

## **Public Member Functions**

• **string\_t** (const std::string &, const std::string &)

Constructor of a openMHA configuration variable for string values.

# **Public Attributes**

• std::string data

Data field.

# **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

# **Additional Inherited Members**

# 5.256.1 Detailed Description

Variable with a string value.

### 5.256.2 Constructor & Destructor Documentation

Constructor of a openMHA configuration variable for string values.

#### **Parameters**

h	A help string describing the purpose of this variable.
V	The initial string value

5.256.3 Member Function Documentation

Reimplemented from **MHAParser::variable\_t** (p. 676).

Reimplemented from **MHAParser::base\_t** (p. 614).

Reimplemented from MHAParser::base\_t (p. 614).

5.256.4 Member Data Documentation

5.256.4.1 std::string MHAParser::string\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.257 MHAParser::variable\_t Class Reference

Base class for variable nodes.

Inheritance diagram for MHAParser::variable\_t:

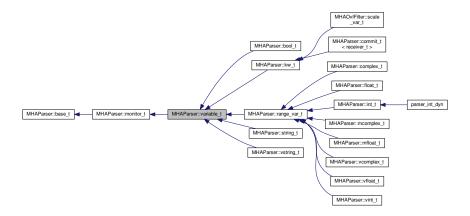

## **Public Member Functions**

- variable\_t (const std::string &)
- std::string op\_setval (expression\_t &)
- std::string query\_perm (const std::string &)
- void **setlock** (const bool &)

Lock a variable against write access.

### **Private Attributes**

bool locked

**Additional Inherited Members** 

5.257.1 Detailed Description

Base class for variable nodes.

```
5.257.2 Constructor & Destructor Documentation
5.257.2.1 MHAParser::variable_t::variable_t (
                     const std::string & h)
5.257.3 Member Function Documentation
5.257.3.1 std::string MHAParser::variable_t::op_setval (
                     expression_t & x ) [virtual]
Reimplemented from MHAParser::base_t (p. 613).
Reimplemented in MHAParser::mcomplex t (p. 650), MHAParser::mfloat t (p. 654), MH←
AParser::vcomplex_t (p. 681), MHAParser::vfloat_t (p. 685), MHAParser::vint_t (p. 689),
MHAParser::complex_t (p. 630), MHAParser::float_t (p. 636), MHAParser::int_t (p. 641),
MHAParser::bool_t (p. 622), MHAParser::vstring_t (p. 693), MHAParser::string_t (p. 674),
and MHAParser::kw_t (p. 646).
5.257.3.2 std::string MHAParser::variable_t::query_perm (
                     const std::string & s ) [virtual]
Reimplemented from MHAParser::monitor_t (p. 662).
5.257.3.3 void MHAParser::variable_t::setlock (
                     const bool & b)
Lock a variable against write access.
Parameters
    Lock state
5.257.4 Member Data Documentation
5.257.4.1 bool MHAParser::variable t::locked [private]
The documentation for this class was generated from the following files:
```


\_\_\_\_

mha\_parser.hhmha\_parser.cpp

# 5.258 MHAParser::vcomplex\_mon\_t Class Reference

Monitor with vector of complex values.

Inheritance diagram for MHAParser::vcomplex\_mon\_t:

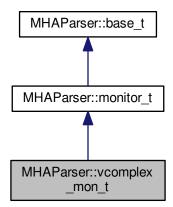

# **Public Member Functions**

vcomplex\_mon\_t (const std::string &hlp)
 Create a vector of complex monitor values.

### **Public Attributes**

std::vector< mha\_complex\_t > data
 Data field.

### **Protected Member Functions**

- std::string query\_val (const std::string &)
- std::string query\_type (const std::string &)

# **Additional Inherited Members**

# 5.258.1 Detailed Description

Monitor with vector of complex values.

- 5.258.2 Constructor & Destructor Documentation
- 5.258.2.1 MHAParser::vcomplex\_mon\_t::vcomplex\_mon\_t ( const std::string & hlp )

Create a vector of complex monitor values.

### **Parameters**

*hlp* A help text describing this monitor variable.

5.258.3 Member Function Documentation

Reimplemented from MHAParser::base\_t (p. 614).

Reimplemented from **MHAParser::base\_t** (p. 614).

5.258.4 Member Data Documentation

5.258.4.1 std::vector<mha\_complex\_t> MHAParser::vcomplex\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

5.259 MHAParser::vcomplex\_t Class Reference

Vector variable with complex value.

Inheritance diagram for MHAParser::vcomplex\_t:

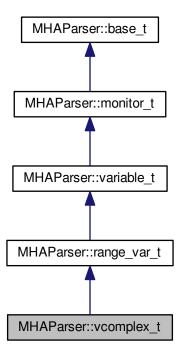

#### **Public Member Functions**

• vcomplex\_t (const std::string &, const std::string &, const std::string &="")

## **Public Attributes**

std::vector< mha\_complex\_t > data
 Data field.

# **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

### **Additional Inherited Members**

# 5.259.1 Detailed Description

Vector variable with complex value.


```
5.259.2 Constructor & Destructor Documentation
5.259.2.1 MHAParser::vcomplex_t::vcomplex_t (
                      const std::string & h,
                      const std::string & v,
                      const std::string & rg = " " )
5.259.3 Member Function Documentation
5.259.3.1 std::string MHAParser::vcomplex_t::op_setval (
                      expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 676).
5.259.3.2 std::string MHAParser::vcomplex_t::query_type (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 614).
5.259.3.3 std::string MHAParser::vcomplex_t::query_val (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 614).
5.259.4 Member Data Documentation
5.259.4.1 std::vector<mha_complex_t> MHAParser::vcomplex_t::data
Data field.
The documentation for this class was generated from the following files:
```

- mha\_parser.hhmha\_parser.en
- mha\_parser.cpp

# 5.260 MHAParser::vfloat\_mon\_t Class Reference

Vector of floats monitor.

Inheritance diagram for MHAParser::vfloat\_mon\_t:

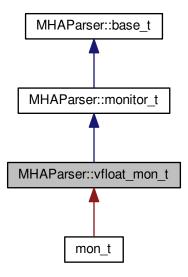

# **Public Member Functions**

vfloat\_mon\_t (const std::string &hlp)
 Create a vector of floating point monitor values.

# **Public Attributes**

std::vector< float > data
 Data field.

#### **Protected Member Functions**

- std::string query\_val (const std::string &)
- std::string query\_type (const std::string &)

### **Additional Inherited Members**

# 5.260.1 Detailed Description

Vector of floats monitor.

```
5.260.2 Constructor & Destructor Documentation
```

```
5.260.2.1 MHAParser::vfloat_mon_t::vfloat_mon_t ( const std::string & hlp )
```

Create a vector of floating point monitor values.

#### **Parameters**

```
hlp A help text describing this monitor variable.
```

5.260.3 Member Function Documentation

Reimplemented from **MHAParser::base\_t** (p. 614).

Reimplemented from **MHAParser::base\_t** (p. 614).

5.260.4 Member Data Documentation

5.260.4.1 std::vector<float> MHAParser::vfloat\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.261 MHAParser::vfloat\_t Class Reference

Vector variable with float value.

Inheritance diagram for MHAParser::vfloat\_t:

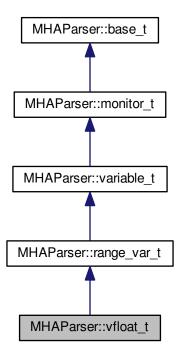

## **Public Member Functions**

vfloat\_t (const std::string &, const std::string &="")
 Create a float vector parser variable.

#### **Public Attributes**

std::vector< float > data
 Data field.

### **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

**Additional Inherited Members** 

5.261.1 Detailed Description

Vector variable with float value.

5.261.2 Constructor & Destructor Documentation

Create a float vector parser variable.

#### **Parameters**

h	A human-readable text describing the purpose of this configuration variable.
V	The initial value of the variable, as a string, in openMHA configuration language:
	(e.g. "[0 1 2.1 3]" for a vector), described in the "Multidimensional Variables"
	s2.1.3 section of the openMHA User Manual.
rg	The numeric range to enforce on all members of the vector.

5.261.3 Member Function Documentation

Reimplemented from **MHAParser::variable\_t** (p. 676).

Reimplemented from **MHAParser::base\_t** (p. 614).

Reimplemented from **MHAParser::base\_t** (p. 614).

## 5.261.4 Member Data Documentation

5.261.4.1 std::vector<float> MHAParser::vfloat\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.262 MHAParser::vint\_mon\_t Class Reference

Vector of ints monitor.

Inheritance diagram for MHAParser::vint\_mon\_t:

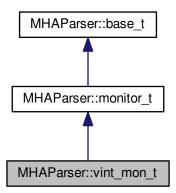

### **Public Member Functions**

vint\_mon\_t (const std::string &hlp)
 Create a vector of integer monitor values.

## **Public Attributes**

std::vector< int > data
 Data field.

**Protected Member Functions** 

```
    std::string query_val (const std::string &)
```

```
    std::string query_type (const std::string &)
```

**Additional Inherited Members** 

5.262.1 Detailed Description

Vector of ints monitor.

5.262.2 Constructor & Destructor Documentation

```
5.262.2.1 MHAParser::vint_mon_t::vint_mon_t ( const std::string & hlp )
```

Create a vector of integer monitor values.

#### **Parameters**

```
hlp A help text describing this monitor variable.
```

```
5.262.3 Member Function Documentation
```

Reimplemented from **MHAParser::base\_t** (p. 614).

Reimplemented from MHAParser::base\_t (p. 614).

5.262.4 Member Data Documentation

5.262.4.1 std::vector<int> MHAParser::vint\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha parser.hh
- mha\_parser.cpp

# 5.263 MHAParser::vint\_t Class Reference

Variable with vector<int> value.

Inheritance diagram for MHAParser::vint\_t:

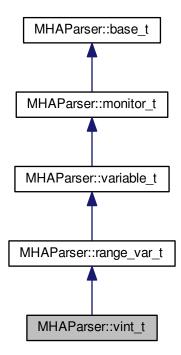

## **Public Member Functions**

vint\_t (const std::string &, const std::string &="")
 Constructor.

#### **Public Attributes**

std::vector< int > data
 Data field.

### **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

**Additional Inherited Members** 

5.263.1 Detailed Description

Variable with vector<int> value.

5.263.2 Constructor & Destructor Documentation

Constructor.

#### **Parameters**

h	help string
V	initial value
rg	optional: range constraint for all elements

5.263.3 Member Function Documentation

Reimplemented from **MHAParser::variable\_t** (p. 676).

Reimplemented from **MHAParser::base\_t** (p. 614).

Reimplemented from **MHAParser::base\_t** (p. 614).

## 5.263.4 Member Data Documentation

5.263.4.1 std::vector<int> MHAParser::vint\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.264 MHAParser::vstring\_mon\_t Class Reference

Vector of monitors with string value.

Inheritance diagram for MHAParser::vstring\_mon\_t:

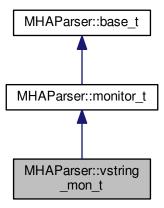

# **Public Member Functions**

vstring\_mon\_t (const std::string &hlp)
 Create a vector of string monitor values.

# **Public Attributes**

std::vector< std::string > data
 Data field.

**Protected Member Functions** 

```
• std::string query_val (const std::string &)
```

std::string query\_type (const std::string &)

**Additional Inherited Members** 

5.264.1 Detailed Description

Vector of monitors with string value.

5.264.2 Constructor & Destructor Documentation

5.264.2.1 MHAParser::vstring\_mon\_t::vstring\_mon\_t ( const std::string & hlp )

Create a vector of string monitor values.

#### **Parameters**

```
hlp A help text describing this monitor variable.
```

```
5.264.3 Member Function Documentation
```

Reimplemented from **MHAParser::base\_t** (p. 614).

Reimplemented from **MHAParser::base\_t** (p. 614).

5.264.4 Member Data Documentation

5.264.4.1 std::vector<std::string> MHAParser::vstring\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha parser.hh
- mha\_parser.cpp

# 5.265 MHAParser::vstring\_t Class Reference

Vector variable with string values.

Inheritance diagram for MHAParser::vstring\_t:

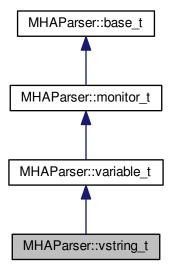

# **Public Member Functions**

• vstring\_t (const std::string &, const std::string &)

### **Public Attributes**

std::vector< std::string > data
 Data field.

# **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

#### **Additional Inherited Members**

# 5.265.1 Detailed Description

Vector variable with string values.

```
5.265.2 Constructor & Destructor Documentation
5.265.2.1 MHAParser::vstring_t::vstring_t (
                      const std::string & h,
                      const std::string & v )
5.265.3 Member Function Documentation
5.265.3.1 std::string MHAParser::vstring_t::op_setval (
                      expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 676).
5.265.3.2 std::string MHAParser::vstring_t::query_type (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 614).
5.265.3.3 std::string MHAParser::vstring_t::query_val (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 614).
5.265.4 Member Data Documentation
5.265.4.1 std::vector<std::string> MHAParser::vstring_t::data
Data field.
```


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.266 MHAParser::window\_t Class Reference

MHA configuration interface for a window function generator.

Inheritance diagram for MHAParser::window\_t:

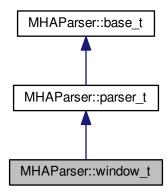

# **Public Types**

#### **Public Member Functions**

- window\_t (const std::string &help="Window type configuration.")
   Constructor to create parser class.
- MHAWindow::base\_t get\_window (unsigned int len) const Create a window instance, use default parameters.
- MHAWindow::base\_t get\_window (unsigned int len, float xmin) const Create a window instance.
- MHAWindow::base\_t get\_window (unsigned int len, float xmin, float xmax) const Create a window instance.
- MHAWindow::base\_t get\_window (unsigned int len, float xmin, float xmax, bool minincluded) const

Create a window instance.

 MHAWindow::base\_t get\_window (unsigned int len, float xmin, float xmax, bool minincluded, bool maxincluded) const

Create a window instance.

MHAParser::window\_t::wtype\_t get\_type () const

Return currently selected window type.

### **Private Attributes**

MHAParser::kw\_t wtypeMHAParser::vfloat\_t user

**Additional Inherited Members** 

5.266.1 Detailed Description

MHA configuration interface for a window function generator.

This class implements a configuration interface (sub-parser) for window type selection and user-defined window type. It provides member functions to generate an instance of **MHA**← **Window::base\_t** (p. 810) based on the values provided by the configuration interface.

The configuration interface is derived from **MHAParser::parser\_t** (p. 663) and can thus be inserted into the configuration tree using the **insert\_item()** (p. 665) method of the parent parser.

If one of the pre-defined window types is used, then the window is generated using the **MHA** $\leftarrow$  **Window::fun\_t** (p. 813) class constructor; for the user-defined type the values from the "user" variable are copied.

```
5.266.2 Member Enumeration Documentation
```

```
5.266.2.1 enum MHAParser::window_t::wtype_t
```

**Enumerator** 

```
wnd_rect
wnd_hann
wnd_hamming
wnd_blackman
wnd_bartlett
wnd_user
```

5.266.3 Constructor & Destructor Documentation

Constructor to create parser class.

5.266.4 Member Function Documentation

```
5.266.4.1 MHAWindow::base_t MHAParser::window_t::get_window ( unsigned int len ) const
```

Create a window instance, use default parameters.

```
5.266.4.2 MHAWindow::base_t MHAParser::window_t::get_window (
                      unsigned int len,
                      float xmin ) const
Create a window instance.
5.266.4.3 MHAWindow::base_t MHAParser::window_t::get_window (
                      unsigned int len,
                      float xmin,
                      float xmax ) const
Create a window instance.
5.266.4.4 MHAWindow::base_t MHAParser::window_t::get_window (
                      unsigned int len,
                      float xmin.
                      float xmax,
                      bool minincluded ) const
Create a window instance.
5.266.4.5 MHAWindow::base t MHAParser::window t::get window (
                      unsigned int len,
                      float xmin.
                      float xmax,
                      bool minincluded,
                      bool maxincluded ) const
Create a window instance.
5.266.4.6 MHAParser::window_t::wtype_t MHAParser::window_t::get_type ( ) const
Return currently selected window type.
5.266.5 Member Data Documentation
5.266.5.1 MHAParser::kw_t MHAParser::window_t::wtype [private]
```


The documentation for this class was generated from the following files:

**5.266.5.2** MHAParser::vfloat\_t MHAParser::window\_t::user [private]

- mha\_windowparser.h
- mha\_windowparser.cpp

# 5.267 mhaplug\_cfg\_t Class Reference

Inheritance diagram for mhaplug\_cfg\_t:

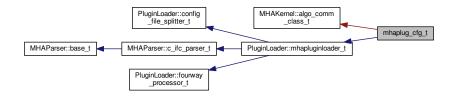

**Public Member Functions** 

- mhaplug\_cfg\_t (algo\_comm\_t iac, const std::string &libname, bool use\_own\_ac)
- ~mhaplug\_cfg\_t () throw ()

**Additional Inherited Members** 

5.267.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

altplugs.cpp

5.268 MHAPlugin::cfg\_chain\_t < runtime\_cfg\_t > Class Template Reference

**Public Member Functions** 

- cfg\_chain\_t (runtime\_cfg\_t \*id)
- ~cfg\_chain\_t ()

#### **Public Attributes**

```
• cfg_chain_t< runtime_cfg_t > * next
```

- bool not\_in\_use
- runtime\_cfg\_t \* data
- 5.268.1 Constructor & Destructor Documentation

```
5.268.1.1 template < class runtime_cfg_t > MHAPlugin::cfg_chain_t < runtime_cfg_t >::cfg_chain_t ( runtime_cfg_t * id )
```

```
5.268.1.2 template < class runtime_cfg_t > MHAPlugin::cfg_chain_t < runtime_cfg_t >::~cfg_chain_t( )
```


- 5.268.2 Member Data Documentation
- 5.268.2.1 template < class runtime\_cfg\_t > cfg\_chain\_t < runtime\_cfg\_t >\* MHAPlugin::cfg\_chain\_t < runtime\_cfg\_t >::next
- 5.268.2.2 template < class runtime\_cfg\_t > bool MHAPlugin::cfg\_chain\_t < runtime\_cfg\_t >::not\_in\_use
- 5.268.2.3 template < class runtime\_cfg\_t > runtime\_cfg\_t \* MHAPlugin::cfg\_chain\_t < runtime\_cfg\_t > ::data

The documentation for this class was generated from the following file:

- mha\_plugin.hh
- 5.269 MHAPlugin::config\_t< runtime\_cfg\_t > Class Template Reference

Template class for thread safe configuration.

Inheritance diagram for MHAPlugin::config\_t< runtime\_cfg\_t >:

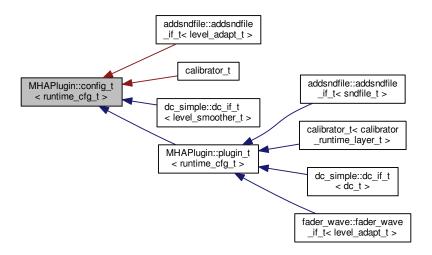

### **Public Member Functions**

- · config\_t ()
- ~config\_t ()

# **Protected Member Functions**

- runtime\_cfg\_t \* poll\_config ()
   Receive the latest run time configuration.
- runtime\_cfg\_t \* last\_config ()
   Receive the latest run time configuration.
- void push\_config (runtime\_cfg\_t \*ncfg)
   Push a new run time configuration into the configuration fifo.
- void cleanup\_unused\_cfg ()

## **Protected Attributes**

runtime\_cfg\_t \* cfg

### **Private Member Functions**

void remove\_all\_cfg ()

#### **Private Attributes**

- MHAPlugin::cfg\_chain\_t< runtime\_cfg\_t > \* cfg\_chain
- MHAPlugin::cfg\_chain\_t< runtime\_cfg\_t > \* cfg\_chain\_current

## 5.269.1 Detailed Description

```
template<class runtime_cfg_t>
class MHAPlugin::config t< runtime cfg t >
```

Template class for thread safe configuration.

This template class provides a mechanism for the handling of thread safe configuration which is required for run time configuration changes of the openMHA plugins.

The template parameter runtime\_cfg\_t is the run time configuration class of the openMHA plugin. The constructor of that class should transform the **MHAParser** (p. 100) variables into derived runtime configuration. The constructor should fail if the configuration is invalid by any reason.

A new runtime configuration is provided by the function **push\_config()** (p. 701). In the processing thread, the actual configuration can be received by a call of **poll\_config()** (p. 701).

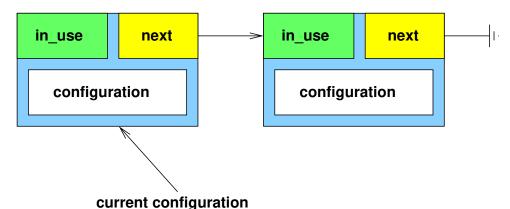


Figure 5 Schematic drawing of runtime configuration update: configuration updated, but not used yet.

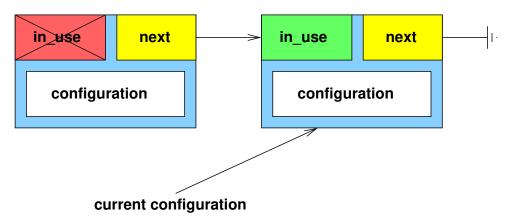


Figure 6 Schematic drawing of runtime configuration update: configuration in use.

5.269.2 Constructor & Destructor Documentation

```
5.269.2.1 template < class runtime_cfg_t > MHAPlugin::config_t < runtime_cfg_t > ::config_t ( )

5.269.2.2 template < class runtime_cfg_t > MHAPlugin::config_t < runtime_cfg_t > ::~config_t ( )

5.269.3 Member Function Documentation
```

```
5.269.3.1 template < class runtime_cfg_t > runtime_cfg_t * MHAPlugin::config_t < runtime_cfg_t > ::poll_config ( ) [protected]
```

Receive the latest run time configuration.

This function stores the latest run time configuration into the protected class member variable 'cfg'. If no configuration exists, then an exception will be thrown. If no changes occured, then the value of 'cfg' will be untouched. This function should be called before any access to the 'cfg' variable, typically once in each signal processing call.

This function should be only called from the *processing* thread.

## **Exceptions**

<b>MHA_Error</b> (p. 423)	if the resulting runtime configuration is NULL. This usually means
	that no push_config has occured.

```
5.269.3.2 template < class runtime_cfg_t > runtime_cfg_t * MHAPlugin::config_t < runtime_cfg_t >::last_config() [protected]
```

Receive the latest run time configuration.

This function stores the latest run time configuration into the protected class member variable 'cfg'. If no configuration exists, then an exception will be thrown. If no changes occured, then the value of 'cfg' will be untouched. This function may be called instead of poll\_config.

The difference between poll\_config and last\_config is that poll\_config marks previous configurations as ready for deletion, while this function does not. Therefore, memory usage of all runtime configurations will accumulate if only this function is called, but it enables safe access to previous runtime configurations.

Also, last config does not raise an Exception when the latest run time configuration is NULL.

Push a new run time configuration into the configuration fifo.

This function adds a new run time configuration. The next time **poll\_config** (p. 701) is called, this configuration will be available. Configurations which are not in use or are outdated will be removed.

This function should be only called from the *configuration* thread.

### **Parameters**

ncfg pointer on a new configuration

## Warning

The runtime configuration passed to this function will be removed by the internal garbage collector. Do not free manually.

- 5.269.3.4 template < class runtime\_cfg\_t > void MHAPlugin::config\_t < runtime\_cfg\_t >::cleanup\_unused\_cfg() [protected]
- 5.269.3.5 template < class runtime\_cfg\_t > void MHAPlugin::config\_t < runtime\_cfg\_t >::remove\_all\_cfg( ) [private]
- 5.269.4 Member Data Documentation
- 5.269.4.1 template < class runtime\_cfg\_t > runtime\_cfg\_t \* MHAPlugin::config\_t < runtime\_cfg\_t >::cfg [protected]
- 5.269.4.2 template < class runtime\_cfg\_t > MHAPlugin::cfg\_chain\_t < runtime\_cfg\_t > \* MHAPlugin::config\_t < runtime\_cfg\_t > ::cfg\_chain [private]
- 5.269.4.3 template < class runtime\_cfg\_t > MHAPlugin::cfg\_chain\_t < runtime\_cfg\_t > \* MHAPlugin::config\_t < runtime\_cfg\_t > ::cfg\_chain\_current [private]


The documentation for this class was generated from the following file:

# mha\_plugin.hh

5.270 MHAPlugin::plugin\_t< runtime\_cfg\_t > Class Template Reference

The template class for C++ openMHA plugins.

Inheritance diagram for MHAPlugin::plugin t< runtime cfg t >:

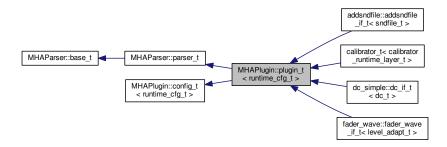

#### **Public Member Functions**

plugin\_t (const std::string &, const algo\_comm\_t &)

Constructor of plugin template.

- virtual ~plugin t ()
- virtual void **prepare** (**mhaconfig\_t** &)=0
- virtual void release ()
- void prepare\_ (mhaconfig\_t &)
- void release\_()
- bool is\_prepared () const

Flag, if the prepare method is successfully called (or currently evaluated)

• mhaconfig\_t input\_cfg () const

Current input channel configuration.

mhaconfig\_t output\_cfg () const

Current output channel configuration.

#### **Protected Attributes**

mhaconfig\_t tftype

Member for storage of plugin interface configuration.

algo\_comm\_t ac

AC handle of the chain.

## **Private Attributes**

- bool is prepared
- mhaconfig\_t input\_cfg\_
- mhaconfig\_t output\_cfg\_
- MHAParser::mhaconfig mon t mhaconfig in
- MHAParser::mhaconfig\_mon\_t mhaconfig\_out

### **Additional Inherited Members**

# 5.270.1 Detailed Description

```
\label{lem:condition} \begin{split} & template {<} class \ runtime\_cfg\_t {>} \\ & class \ MHAPlugin::plugin\_t {<} \ runtime\_cfg\_t {>} \\ \end{split}
```

The template class for C++ openMHA plugins.

**Template Parameters** 

runtime_←	run-time configuration.
cfg_t	

**Todo** Describe all services provided by this class, so that the reason why it is recommended that all plugins use this class as their base is evident. Document all relevant methods and fields.

This template class provides thread safe configuration handling and standard methods to be compatible to the C++ openMHA plugin wrapper macro **MHAPLUGIN\_CALLBACKS** (p. 9).

The template parameter runtime\_cfg\_t should be the runtime configuration of the plugin.

See **MHAPlugin::config\_t** (p. 698) for details on the thread safe communication update mechanism.

```
5.270.2 Constructor & Destructor Documentation
```

```
5.270.2.1 template < class runtime_cfg_t > MHAPlugin::plugin_t < runtime_cfg_t >::plugin_t ( const std::string & help, const algo_comm_t & iac )
```

Constructor of plugin template.

### **Parameters**

help	Help comment to provide some general information about the plugin.
iac	AC space handle (will be stored into the member variable ac).

```
5.270.2.2 template < class runtime_cfg_t > MHAPlugin::plugin_t < runtime_cfg_t >::\sim plugin_t ( ) [virtual]
```

5.270.3 Member Function Documentation

```
5.270.3.1 template < class runtime_cfg_t > virtual void MHAPlugin::plugin_t < runtime_cfg_t >::prepare (

mhaconfig_t & ) [pure virtual]
```

```
Implemented in bbcalib_interface_t (p. 221), calibrator_t (p. 224), addsndfile::addsndfile \leftarrow _if_t (p. 173), testplugin::if_t (p. 910), analysispath_if_t (p. 212), adm_if_t (p. 188), overlapadd::overlapadd_if_t (p. 835), ac2lsl::ac2lsl_t (p. 124), frequency_translator \leftarrow _t (p. 325), noisePowProposedScale::interface_t (p. 831), dc_simple::dc_if_t (p. 256),
```

dc::dc\_if\_t (p. 246), multibandcompressor::interface\_t (p. 823), plingploing::if\_← (p. 841), combc\_if\_t (p. 236), coherence::cohflt\_if\_t (p. 230), plugin\_interface\_ t (p. 848), example6 t (p. 309), smoothgains bridge::overlapadd if t (p. 888), MH← APlugin Resampling::resampling if t (p. 709), shadowfilter end::shadowfilter end t (p. 884), ac2wave\_if\_t (p. 140), noise\_t (p. 829), nlms\_t (p. 826), prediction\_error (p. 863), spec2wave\_if\_t (p. 896), mhachain::chain\_base\_t (p. 475), acsave::acsave\_t (p. 158), fader wave::fader wave if t (p. 313), doasym feature extraction (p. 276), rmslevel ← if t (p. 868), shadowfilter begin::shadowfilter begin t (p. 881), example3 t (p. 302), example4\_t (p. 306), lpc\_bl\_predictor (p. 378), lpc\_burglattice (p. 383), acPooling\_ wave (p. 153), steerbf (p. 902), delaysum::delaysum\_if\_t (p. 268), lpc (p. 375), db\_if\_t (p. 242), fader if t (p. 311), acConcat wave (p. 144), acSteer (p. 165), acTransform wave (p. 169), wave2spec if t (p. 925), fftfbpow::fftfbpow interface t (p. 317), gain::gain if t (p. 334), droptect t (p. 280), example1 t (p. 296), sine t (p. 886), example2 t (p. 299), doasym\_classification (p. 272), fftfilterbank::fftfb\_interface\_t (p. 321), wavrec\_t (p. 929), matrixmixer::matmix\_t (p. 390), route::interface\_t (p. 871), altplugs\_t (p. 206), softclip\_t (p. 892), ac2osc\_t (p. 137), save\_spec\_t (p. 877), save\_wave\_t (p. 878), acmon::acmon\_t (p. 150), timoSmooth (p. 921), identity t (p. 340), cpuload t (p. 240), delay::interface t (p. 266), **ds t** (p. 283), and **us t** (p. 923).

```
5.270.3.2 template < class runtime_cfg_t > void MHAPlugin::plugin_t < runtime_cfg_t > ::release ( ) [virtual]
```

Reimplemented in bbcalib\_interface\_t (p. 221), calibrator\_t (p. 224), addsndfile  $\leftarrow$  ::addsndfile\_if\_t (p. 173), analysispath\_if\_t (p. 212), adm\_if\_t (p. 188), ac2lsl::ac2lsl\_t (p. 124), overlapadd::overlapadd\_if\_t (p. 835), frequency\_translator\_t (p. 325), dc\_  $\leftarrow$  simple::dc\_if\_t (p. 256), multibandcompressor::interface\_t (p. 823), coherence::cohflt  $\leftarrow$  if\_t (p. 230), smoothgains\_bridge::overlapadd\_if\_t (p. 888), MHAPlugin\_Resampling  $\leftarrow$  ::resampling\_if\_t (p. 709), ac2wave\_if\_t (p. 141), nlms\_t (p. 827), prediction\_error (p. 863), mhachain::chain\_base\_t (p. 475), acsave::acsave\_t (p. 158), fader\_wave  $\leftarrow$  ::fader\_wave\_if\_t (p. 313), doasvm\_feature\_extraction (p. 277), example3\_t (p. 303), example4\_t (p. 306), lpc\_bl\_predictor (p. 379), lpc\_burglattice (p. 383), acPooling\_  $\leftarrow$  wave (p. 154), steerbf (p. 903), delaysum::delaysum\_if\_t (p. 268), lpc (p. 376), db\_if\_t (p. 242), acConcat\_wave (p. 145), acSteer (p. 166), acTransform\_wave (p. 170), droptect  $\leftarrow$  t (p. 280), gain::gain\_if\_t (p. 334), example2\_t (p. 299), doasvm\_classification (p. 273), fftfilterbank::fftfb\_interface\_t (p. 321), wavrec\_t (p. 929), route::interface\_t (p. 871), ac2osc\_t (p. 138), example1\_t (p. 296), altplugs\_t (p. 207), acmon::acmon\_t (p. 150), timoSmooth (p. 921), identity\_t (p. 340), ds\_t (p. 283), and us\_t (p. 923).

Flag, if the prepare method is successfully called (or currently evaluated)

707

5.270.3.6 template < class runtime\_cfg\_t > mhaconfig\_t MHAPlugin::plugin\_t < runtime\_cfg\_t >::input\_cfg( ) const [inline]

Current input channel configuration.

5.270.3.7 template < class runtime\_cfg\_t > mhaconfig\_t MHAPlugin::plugin\_t < runtime\_cfg\_t >::output\_cfg( ) const [inline]

Current output channel configuration.

5.270.4 Member Data Documentation

5.270.4.1 template < class runtime\_cfg\_t > mhaconfig\_t MHAPlugin::plugin\_t < runtime\_cfg\_t > ::tftype [protected]

Member for storage of plugin interface configuration.

This member is defined for convenience of the developer. Typically, the actual contents of **mhaconfig\_t** (p. 480) are stored in this member in the **prepare()** (p. 705) method.

Note

This member is likely to be removed in later versions, use **input\_cfg()** (p. 707) and **output\_cfg()** (p. 707) instead.

5.270.4.2 template < class runtime\_cfg\_t > algo\_comm\_t MHAPlugin::plugin\_t < runtime\_cfg\_t >::ac [protected]

AC handle of the chain.

This variable is initialized in the constructor and can be used by derived plugins to access the AC space. Its contents should not be modified.

```
5.270.4.3 template < class runtime_cfg_t > bool MHAPlugin::plugin_t < runtime_cfg_t >::is_prepared_ [private]
```


- 5.270.4.4 template < class runtime\_cfg\_t > mhaconfig\_t MHAPlugin::plugin\_t < runtime\_cfg\_t > ::input\_cfg\_ [private]
- 5.270.4.5 template < class runtime\_cfg\_t > mhaconfig\_t MHAPlugin::plugin\_t < runtime\_cfg\_t >::output\_cfg\_ [private]

The documentation for this class was generated from the following file:

mha\_plugin.hh

# 5.271 MHAPlugin\_Resampling::resampling\_if\_t Class Reference

Inheritance diagram for MHAPlugin\_Resampling::resampling\_if\_t:

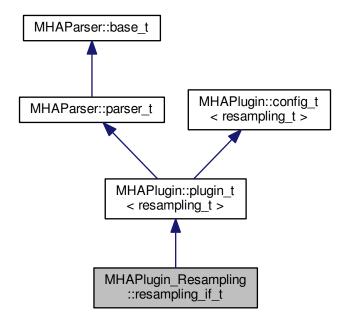

### **Public Member Functions**

- resampling\_if\_t (algo\_comm\_t, std::string, std::string)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

#### **Private Attributes**

- MHAParser::float\_t srate
- MHAParser::int\_t fragsize
- MHAParser::float\_t nyquist\_ratio
- MHAParser::float\_t irslen\_outer2inner
- MHAParser::float t irslen inner2outer
- MHAParser::mhapluginloader\_t plugloader
- std::string chain
- std::string algo

```
Additional Inherited Members
```

```
5.271.1 Constructor & Destructor Documentation
5.271.1.1 MHAPlugin_Resampling::resampling_if_t::resampling_if_t (
                     algo_comm_t iac,
                     std::string th,
                     std::string al )
5.271.2 Member Function Documentation
5.271.2.1 mha_wave_t * MHAPlugin_Resampling::resampling_if_t::process (
                     mha wave t * s)
5.271.2.2 void MHAPlugin_Resampling::resampling_if_t::prepare (
                     mhaconfig t&conf ) [virtual]
Implements MHAPlugin::plugin t < resampling t > (p. 705).
5.271.2.3 void MHAPlugin_Resampling::resampling_if_t::release() [virtual]
Reimplemented from MHAPlugin::plugin_t < resampling_t > (p. 706).
5.271.3 Member Data Documentation
5.271.3.1 MHAParser::float t MHAPlugin Resampling::resampling if t::srate [private]
5.271.3.2 MHAParser::int t MHAPlugin_Resampling::resampling_if_t::fragsize [private]
5.271.3.3 MHAParser::float t MHAPlugin_Resampling::resampling_if_t::nyquist_ratio
         [private]
5.271.3.4 MHAParser::float t MHAPlugin_Resampling::resampling_if_t::irslen_outer2inner
         [private]
5.271.3.5 MHAParser::float t MHAPlugin Resampling::resampling if t::irslen inner2outer
          [private]
5.271.3.6 MHAParser::mhapluginloader_t MHAPlugin_Resampling::resampling_if_t::plugloader
         [private]
5.271.3.7 std::string MHAPlugin_Resampling::resampling_if_t::chain [private]
5.271.3.8 std::string MHAPlugin_Resampling::resampling_if_t::algo [private]
The documentation for this class was generated from the following file:
```

© 2005-2018 HörTech gGmbH, Oldenburg

resampling.cpp

# 5.272 MHAPlugin\_Resampling::resampling\_t Class Reference

### **Public Member Functions**

resampling\_t (unsigned int outer\_fragsize, float outer\_srate, unsigned int inner\_
 fragsize, float inner\_scrate, unsigned int nch\_in, float filter\_length\_in, unsigned int nch
 out, float filter\_length\_out, float nyquist\_ratio, MHAParser::mhapluginloader\_t &plug)

mha\_wave\_t \* process (mha\_wave\_t \*)

### **Private Attributes**

- · unsigned outer\_fragsize
- unsigned inner\_fragsize
- float outer\_srate
- float inner\_srate
- unsigned nchannels\_in
- unsigned nchannels\_out
- MHAFilter::blockprocessing polyphase resampling t outer2inner resampling
- MHAFilter::blockprocessing\_polyphase\_resampling\_t inner2outer\_resampling
- MHAParser::mhapluginloader\_t & plugloader
- MHASignal::waveform\_t inner\_signal
- MHASignal::waveform\_t output\_signal

```
5.272.1 Constructor & Destructor Documentation
```

5.272.2 Member Function Documentation

```
5.272.2.1 mha_wave_t * MHAPlugin_Resampling::resampling_t::process ( mha_wave_t * s )
```

5.272.3 Member Data Documentation

5.272.3.1 unsigned MHAPlugin Resampling::resampling t::outer fragsize [private] **5.272.3.2** unsigned MHAPlugin\_Resampling::resampling\_t::inner\_fragsize [private] float MHAPlugin\_Resampling::resampling\_t::outer\_srate [private] 5.272.3.3 float MHAPlugin Resampling::resampling t::inner srate [private] 5.272.3.4 **5.272.3.5** unsigned MHAPlugin\_Resampling::resampling\_t::nchannels\_in [private] 5.272.3.6 unsigned MHAPlugin Resampling ::resampling t::nchannels out [private] 5.272.3.7 MHAFilter::blockprocessing\_polyphase\_resampling\_t MHAPlugin\_Resampling::resampling\_t::outer2inner\_resampling [private] 5.272.3.8 MHAFilter::blockprocessing polyphase resampling t MHAPlugin\_Resampling::resampling\_t::inner2outer\_resampling [private] 5.272.3.9 MHAParser::mhapluginloader t& MHAPlugin Resampling::resampling t::plugloader [private] 5.272.3.10 MHASignal::waveform\_t MHAPlugin\_Resampling::resampling\_t::inner\_signal [private] 5.272.3.11 MHASignal::waveform t MHAPlugin\_Resampling::resampling\_t::output\_signal [private]


The documentation for this class was generated from the following file:

# resampling.cpp

5.273 MHAPlugin\_Split::domain\_handler\_t Class Reference

Handles domain-specific partial input and output signal.

Inheritance diagram for MHAPlugin\_Split::domain\_handler\_t:

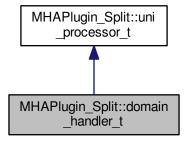

#### **Public Member Functions**

void set\_input\_domain (const mhaconfig\_t &settings\_in)

Set parameters of input signal.

void set\_output\_domain (const mhaconfig\_t &settings\_out)

Set output signal parameters.

void deallocate domains ()

Deallocate domain indicators and signal holders.

domain\_handler\_t (const mhaconfig\_t &settings\_in, const mhaconfig\_t &settings\_out,
 PluginLoader::fourway processor t \*processor)

Construct a new domain handler once the domains and dimensions of input and output signal of one of the child plugins of split are known.

virtual ~domain\_handler\_t ()

Deallocation of signal holders.

unsigned put\_signal (mha\_wave\_t \*s\_in, unsigned start\_channel)

Store the relevant channels from the input signal for processing.

unsigned put\_signal (mha\_spec\_t \*s\_in, unsigned start\_channel)

Store the relevant channels from the input signal for processing.

unsigned get\_signal (MHASignal::waveform\_t \*s\_out, unsigned start\_channel)

Store all partial signal output channels in the combined waveform signal with the given channel offset.

• unsigned **get\_signal** (MHASignal::spectrum\_t \*s\_out, unsigned start\_channel)

Store all partial signal output channels in the combined spectrum signal with the given channel offset.

void process ()

Call the processing method of the processor with configured input/output signal domains.

#### **Public Attributes**

MHASignal::waveform\_t \* wave\_in

Partial wave input signal.

mha\_wave\_t \*\* wave\_out

Partial wave output signal.

MHASignal::spectrum t \* spec in

Partial spec input signal.

mha\_spec\_t \*\* spec\_out

Partial spec input signal.

PluginLoader::fourway\_processor\_t \* processor\_

The domain-specific signal processing methods are implemented here.

### **Private Member Functions**

domain handler t (const domain handler t &)

Disallow copy constructor.

domain handler t & operator= (const domain handler t &)

Disallow assignment operator.

# 5.273.1 Detailed Description

Handles domain-specific partial input and output signal.

```
5.273.2 Constructor & Destructor Documentation
```

Disallow copy constructor.

Construct a new domain handler once the domains and dimensions of input and output signal of one of the child plugins of split are known.

```
5.273.2.3 virtual MHAPlugin_Split::domain_handler_t::~domain_handler_t ( ) [inline], [virtual]
```

Deallocation of signal holders.

5.273.3 Member Function Documentation

Disallow assignment operator.

Set parameters of input signal.

### **Parameters**

settings⇔	domain and dimensions of partial input signal
in	

Set output signal parameters.

### **Parameters**

settings_out   domain and dimensions of partial output signa	
--	--

```
5.273.3.4 void MHAPlugin_Split::domain_handler_t::deallocate_domains() [inline]
```

Deallocate domain indicators and signal holders.

Store the relevant channels from the input signal for processing.

The number of channels to store is taken from the dimensions of the partial input signal holder wave\_in (p. 716).

## **Parameters**

s_in T	The combined waveform input signal.
_	The index (0-based) of the first channel in s_in to be copied to the partial input signal.

### **Returns**

The number of channels that were copied from the input signal

Store the relevant channels from the input signal for processing.

The number of channels to store is taken from the dimensions of the partial input signal holder **spec\_in** (p. 716).

### **Parameters**

s_in	The combined spectrum input signal.
start_channel	The index (0-based) of the first channel in s_in to be copied to the partial
	input signal.

### **Returns**

The number of channels that were copied from the input signal

Store all partial signal output channels in the combined waveform signal with the given channel offset.

All channels present in **wave\_out** (p. 716) will be copied. Caller may use (\*wave\_out)->num—channels to check the number of channels in advance.

### **Parameters**

s_out	The combined waveform output signal.
start_channel	The channel offset (0-based) in s_out.

### **Returns**

The number of channels that were copied to the output signal

Store all partial signal output channels in the combined spectrum signal with the given channel offset.

All channels present in **spec\_out** (p. 716) will be copied. Caller may use (\*spec\_out)->numchannels to check the number of channels in advance.

### **Parameters**

s_out	The combined spectrum output signal.
start_channel	The channel offset (0-based) in s_out.

### Returns

The number of channels that were copied to the output signal

Call the processing method of the processor with configured input/output signal domains.

The input signal has to be stored using **put\_signal** (p. 714) before this method may be called. Implements **MHAPlugin\_Split::uni\_processor\_t** (p. 735).

5.273.4 Member Data Documentation

5.273.4.1 MHASignal::waveform t\* MHAPlugin\_Split::domain\_handler\_t::wave\_in

Partial wave input signal.

5.273.4.2 mha\_wave\_t\*\* MHAPlugin\_Split::domain\_handler\_t::wave\_out

Partial wave output signal.

5.273.4.3 MHASignal::spectrum\_t\* MHAPlugin\_Split::domain\_handler\_t::spec\_in

Partial spec input signal.

5.273.4.4 mha\_spec\_t\*\* MHAPlugin\_Split::domain\_handler\_t::spec\_out

Partial spec input signal.

5.273.4.5 PluginLoader::fourway\_processor\_t\* MHAPlugin\_Split::domain\_handler\_t::processor


The domain-specific signal processing methods are implemented here.

The documentation for this class was generated from the following file:

### split.cpp

# 5.274 MHAPlugin\_Split::dummy\_threads\_t Class Reference

Dummy specification of a thread platform: This class implements everything in a single thread. Inheritance diagram for MHAPlugin\_Split::dummy\_threads\_t:

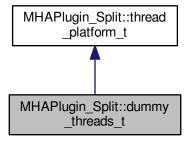

### **Public Member Functions**

- void kick\_thread ()
   perform signal processing immediately (no multiple threads in this dummy class)
- void catch\_thread ()

No implementation needed: Processing has been completed during ummy\_threads\_t::kick\_← thread.

 dummy\_threads\_t (uni\_processor\_t \*proc, const std::string &thread\_scheduler, int thread\_priority)

Constructor.

### **Additional Inherited Members**

### 5.274.1 Detailed Description

Dummy specification of a thread platform: This class implements everything in a single thread.

#### 5.274.2 Constructor & Destructor Documentation

### Constructor.

### **Parameters**

proc	Pointer to the associated plugin loader
thread_scheduler	Unused in dummy thread platform
thread_priority	Unused in dummy thread platform

# 5.274.3 Member Function Documentation

```
5.274.3.1 void MHAPlugin_Split::dummy_threads_t::kick_thread( ) [inline], [virtual]
```

perform signal processing immediately (no multiple threads in this dummy class)

Implements MHAPlugin\_Split::thread\_platform\_t (p. 733).

5.274.3.2 void MHAPlugin\_Split::dummy\_threads\_t::catch\_thread( ) [inline], [virtual]

No implementation needed: Processing has been completed during ummy\_threads\_t::kick\_← thread.

Implements MHAPlugin\_Split::thread\_platform\_t (p. 733).


The documentation for this class was generated from the following file:

split.cpp

5.275 MHAPlugin\_Split::posix\_threads\_t Class Reference

Posix threads specification of thread platform.

Inheritance diagram for MHAPlugin\_Split::posix\_threads\_t:

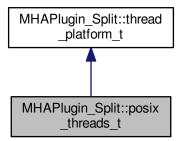

# **Public Member Functions**

void kick\_thread ()

Start signal processing in separate thread.

void catch thread ()

Wait for signal processing to finish.

 posix\_threads\_t (uni\_processor\_t \*proc, const std::string &thread\_scheduler, int thread\_priority)

Constructor.

~posix\_threads\_t ()

Terminate thread.

• void main ()

Thread main loop. Wait for process/termination trigger, then act.

#### Static Public Member Functions

static void \* thread\_start (void \*thr)

Thread start function.

- static std::string current\_thread\_scheduler ()
- static int current\_thread\_priority ()

### **Private Attributes**

pthread\_mutex\_t mutex

The mutex.

pthread\_cond\_t kick\_condition

The condition for signalling the kicking and termination.

pthread\_cond\_t catch\_condition

The condition for signalling the processing is finished.

• pthread attr t attr

Thread attributes.

struct sched\_param priority

Thread scheduling priority.

- · int scheduler
- pthread t thread

The thread object.

bool kicked

A flag that is set to true by kick\_thread and to false by the thread after it has woken up from the kicking.

bool processing\_done

A flag that is set to true by the thread when it returns from processing and to false by catch\_← thread after it has waited for that return.

bool termination\_request

Set to true by the destructor.

### **Additional Inherited Members**

5.275.1 Detailed Description

Posix threads specification of thread platform.

5.275.2 Constructor & Destructor Documentation

Constructor.

### **Parameters**

proc	Pointer to the associated signal processor instance
thread_scheduler	A string describing the posix thread scheduler. Possible values:
	"SCHED_OTHER", "SCHED_RR", "SCHED_FIFO".
thread_priority	The scheduling priority of the new thread.

```
5.275.2.2 MHAPlugin_Split::posix_threads_t::~posix_threads_t() [inline]
```

Terminate thread.

```
5.275.3 Member Function Documentation
```

```
5.275.3.1 void MHAPlugin_Split::posix_threads_t::kick_thread( ) [inline], [virtual]
```

Start signal processing in separate thread.

Implements MHAPlugin\_Split::thread\_platform\_t (p. 733).

```
5.275.3.2 void MHAPlugin_Split::posix_threads_t::catch_thread( ) [inline], [virtual]
```

Wait for signal processing to finish.

Implements MHAPlugin\_Split::thread\_platform\_t (p. 733).

```
5.275.3.3 static void* MHAPlugin_Split::posix_threads_t::thread_start ( void * thr ) [inline], [static]
```

Thread start function.

```
5.275.3.4 void MHAPlugin_Split::posix_threads_t::main() [inline]
```

Thread main loop. Wait for process/termination trigger, then act.

```
5.275.3.5 static std::string MHAPlugin_Split::posix_threads_t::current_thread_scheduler( ) [inline], [static]
```

```
5.275.3.6 static int MHAPlugin_Split::posix_threads_t::current_thread_priority( ) [inline], [static]
```

5.275.4 Member Data Documentation

**5.275.4.1** pthread\_mutex\_t MHAPlugin\_Split::posix\_threads\_t::mutex [private]

The mutex.

**5.275.4.2** pthread\_cond\_t MHAPlugin\_Split::posix\_threads\_t::kick\_condition [private]

The condition for signalling the kicking and termination.

**5.275.4.3** pthread\_cond\_t MHAPlugin\_Split::posix\_threads\_t::catch\_condition [private]

The condition for signalling the processing is finished.

**5.275.4.4 pthread\_attr\_t MHAPlugin\_Split::posix\_threads\_t::attr** [private]

Thread attributes.

**5.275.4.5** struct sched\_param MHAPlugin\_Split::posix\_threads\_t::priority [private]

Thread scheduling priority.

**5.275.4.6** int MHAPlugin\_Split::posix\_threads\_t::scheduler [private]

**5.275.4.7** pthread\_t MHAPlugin\_Split::posix\_threads\_t::thread [private]

The thread object.

**5.275.4.8 bool MHAPlugin\_Split::posix\_threads\_t::kicked** [private]

A flag that is set to true by kick\_thread and to false by the thread after it has woken up from the kicking.

**5.275.4.9** bool MHAPlugin\_Split::posix\_threads\_t::processing\_done [private]

A flag that is set to true by the thread when it returns from processing and to false by catch\_ thread after it has waited for that return.

**5.275.4.10** bool MHAPlugin\_Split::posix\_threads\_t::termination\_request [private]

Set to true by the destructor.


The documentation for this class was generated from the following file:

split.cpp

# 5.276 MHAPlugin\_Split::split\_t Class Reference

Implements split plugin.

Inheritance diagram for MHAPlugin\_Split::split\_t:

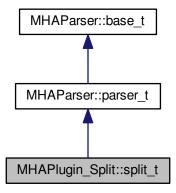

### **Public Member Functions**

- **split\_t** (**algo\_comm\_t** iac, const std::string &chain\_name, const std::string &algo\_name) *Plugin constructor.*
- ∼split\_t ()

Plugin destructor. Unloads nested plugins.

void prepare\_ (mhaconfig\_t &)

Check signal parameters, prepare chains, and allocate output signal holders.

• void release\_()

Delete output signal holder and release chains.

template<class SigTypeIn , class SigTypeOut > void process (SigTypeIn \*, SigTypeOut \*\*)

Let the parallel plugins process channel groups of the input signal.

## **Private Member Functions**

• void update ()

Load plugins in response to a value change in the algos variable.

• void clear\_chains ()

Unload the plugins.

- mha\_wave\_t \* copy\_output\_wave ()
- mha\_spec\_t \* copy\_output\_spec ()

template < class SigType >

void trigger\_processing (SigType \*s\_in)

Split the argument input signal to groups of channels for the plugins and initiate signal processing.

template<class SigType >

void collect\_result (SigType \*s\_out)

Combine the output signal from the plugins.

MHASignal::waveform\_t \* signal\_out (mha\_wave\_t \*\*)

Waveform domain output signal structure accessor.

MHASignal::spectrum\_t \* signal\_out (mha\_spec\_t \*\*)

Spectrum domain output signal structure. Parameter is ignored.

### **Private Attributes**

MHAEvents::patchbay\_t< split\_t > patchbay

Reload plugins when the algos variable changes.

MHAParser::vstring\_t algos

Vector of plugins to load in parallel.

• MHAParser::vint t channels

Number of channels to route through each plugin.

MHAParser::kw\_t thread\_platform

Thread platform chooser.

MHAParser::kw\_t worker\_thread\_scheduler

Scheduler used for worker threads.

MHAParser::int\_t worker\_thread\_priority

Priority of worker threads.

MHAParser::string\_mon\_t framework\_thread\_scheduler

Scheduler of the signal processing thread.

MHAParser::int\_mon\_t framework\_thread\_priority

Priority of signal processing thread.

MHAParser::bool t delay

Switch to activate parallel processing of plugins at the cost of one block of additional delay.

std::vector< splitted\_part\_t \* > chains

Interfaces to parallel plugins.

MHASignal::waveform t \* wave out

Combined output waveforms structure.

MHASignal::spectrum\_t \* spec\_out

Combined output spectra structure.

### **Additional Inherited Members**

## 5.276.1 Detailed Description

Implements split plugin.

An instance of class **split\_t** (p. 722) implements the split plugin functionality: The audio channels are splitted and groups of audio channels are processed by different plugins in parallel.

```
5.276.2 Constructor & Destructor Documentation
5.276.2.1 MHAPlugin_Split::split_t::split_t (
                       algo_comm_t iac,
                       const std::string & chain name.
                       const std::string & algo name )
Plugin constructor.
5.276.2.2 MHAPlugin_Split::split_t::~split_t()
Plugin destructor. Unloads nested plugins.
5.276.3 Member Function Documentation
5.276.3.1 void MHAPlugin_Split::split_t::prepare_(
                       mhaconfig t & signal_parameters )
Check signal parameters, prepare chains, and allocate output signal holders.
5.276.3.2 void MHAPlugin_Split::split_t::release_( )
Delete output signal holder and release chains.
5.276.3.3 template < class SigTypeIn , class SigTypeOut > void MHAPlugin_Split::split_t::process (
                       SigTypeIn * s_in,
                       SigTypeOut ** s out )
Let the parallel plugins process channel groups of the input signal.
5.276.3.4 void MHAPlugin Split::split t::update( ) [private]
Load plugins in response to a value change in the algos variable.
5.276.3.5 void MHAPlugin_Split::split_t::clear_chains( ) [private]
Unload the plugins.
5.276.3.6 mha wave t* MHAPlugin Split::split t::copy output wave( ) [private]
5.276.3.7 mha spec t* MHAPlugin_Split::split_t::copy_output_spec( ) [private]
```

Split the argument input signal to groups of channels for the plugins and initiate signal processing.

5.276.3.8 template < class SigType > void MHAPlugin\_Split::split\_t::trigger\_processing (

SigType \* s\_in ) [private]

Combine the output signal from the plugins.

Waveform domain output signal structure accessor.

Parameter is only for domain disambiguation and is ignored.

Spectrum domain output signal structure. Parameter is ignored.

5.276.4 Member Data Documentation

**5.276.4.1** MHAEvents::patchbay\_t<split\_t> MHAPlugin\_Split::split\_t::patchbay [private]

Reload plugins when the algos variable changes.

**5.276.4.2** MHAParser::vstring\_t MHAPlugin\_Split::split\_t::algos [private]

Vector of plugins to load in parallel.

**5.276.4.3** MHAParser::vint\_t MHAPlugin\_Split::split\_t::channels [private]

Number of channels to route through each plugin.

**5.276.4.4** MHAParser::kw t MHAPlugin\_Split::split\_t::thread\_platform [private]

Thread platform chooser.

**5.276.4.5** MHAParser::kw\_t MHAPlugin\_Split::split\_t::worker\_thread\_scheduler [private]

Scheduler used for worker threads.

**5.276.4.6** MHAParser::int\_t MHAPlugin\_Split::split\_t::worker\_thread\_priority [private]

Priority of worker threads.

**5.276.4.7 MHAParser::string\_mon\_t MHAPlugin\_Split::split\_t::framework\_thread\_scheduler** [private]

Scheduler of the signal processing thread.

**5.276.4.8 MHAParser::int\_mon\_t** MHAPlugin\_Split::split\_t::framework\_thread\_priority [private]

Priority of signal processing thread.

**5.276.4.9** MHAParser::bool t MHAPlugin\_Split::split\_t::delay [private]

Switch to activate parallel processing of plugins at the cost of one block of additional delay.

**5.276.4.10** std::vector<splitted\_part\_t\*> MHAPlugin\_Split::split\_t::chains [private]

Interfaces to parallel plugins.

**5.276.4.11** MHASignal::waveform t\* MHAPlugin\_Split::split\_t::wave\_out [private]

Combined output waveforms structure.

**5.276.4.12** MHASignal::spectrum\_t\* MHAPlugin\_Split::split\_t::spec\_out [private]

Combined output spectra structure.


The documentation for this class was generated from the following file:

# · split.cpp

# 5.277 MHAPlugin\_Split::splitted\_part\_t Class Reference

The **splitted\_part\_t** (p. 726) instance manages the plugin that performs processing on the reduced set of channels.

Inheritance diagram for MHAPlugin Split::splitted part t:

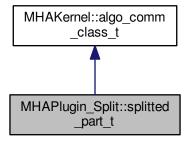

**Public Member Functions** 

• splitted\_part\_t (const std::string &plugname, MHAParser::parser\_t \*parent)

Load the plugin for this partial signal path.

splitted\_part\_t (PluginLoader::fourway\_processor\_t \*plugin)

Create the handler for the partial signal.

~splitted\_part\_t () throw ()

Destructor. Deletes the plugin **plug** (p. 730).

 void prepare (mhaconfig\_t &signal\_parameters, const std::string &thread\_platform, const std::string &thread\_scheduler, int thread\_priority)

Delegates the prepare method to the plugin and allocates a suitable **MHAPlugin\_Split**← ::domain\_handler\_t (p. 711) instance.

• void release ()

Delegates the release method to the plugin and deletes the **MHAPlugin\_Split::domain\_**← **handler\_t** (p. 711) instance.

• std::string parse (const std::string &str)

Delegates parser incovation to plugin.

template<class SigType >

unsigned **trigger\_processing** (SigType \*s\_in, unsigned start\_channel)

The domain handler copies the input signal channels.

template<class SigType >

unsigned **collect\_result** (SigType \*s\_out, unsigned start\_channel)

Wait until processing is finished, then copy the output data.

#### **Private Member Functions**

splitted\_part\_t (const splitted\_part\_t &)

Disallow copy constructor.

splitted\_part\_t & operator= (const splitted\_part\_t &)

Disallow assignment operator.

### **Private Attributes**

• PluginLoader::fourway\_processor\_t \* plug

The plugin that performs the signal processing on the prepared channels.

domain\_handler\_t \* domain

The domain specific signal handler, allocated from prepare when input and output domains and signal parameters are known.

thread platform t \* thread

The platform-dependent thread synchronization implementation.

### **Additional Inherited Members**

### 5.277.1 Detailed Description

The **splitted\_part\_t** (p. 726) instance manages the plugin that performs processing on the reduced set of channels.

The signal is split by channels by this instance, but the signal is combined again by the calling class.

### 5.277.2 Constructor & Destructor Documentation

Disallow copy constructor.

Load the plugin for this partial signal path.

Loads the MHA plugin for a signal path of these audio channels.

### **Parameters**

plugname	The name of the MHA plugin, optionally followed by a colon and the algorithm
	name.
parent	The parser node where the configuration of the new plugin is inserted. The plugin's parser name is the configured name (colon syntax).

Create the handler for the partial signal.

The plugin is loaded by the caller, but it will be deleted by the destructor of this class. This constructor exists solely for testing purposes.

### **Parameters**

plugin	The plugin used for processing the signal. The new splitted_part_t (p. 728)
	instance will take ownership of this instance and release it in the destructor.

```
5.277.2.4 MHAPlugin_Split::splitted_part_t::~splitted_part_t ( ) throw )
```

Destructor. Deletes the plugin **plug** (p. 730).

5.277.3 Member Function Documentation

Disallow assignment operator.

Delegates the prepare method to the plugin and allocates a suitable **MHAPlugin\_Split** ::domain\_handler\_t (p. 711) instance.

Prepare the loaded plugin.

Plugin preparation.

### **Parameters**

signal_parameters	The signal description parameters for this path.
thread_platform	The name of the thread platform to use. Possible values: "posix", "win32", "dummy".
thread_scheduler	The name of the scheduler to use. Posix threads support "SCHED_OTHER", "SCHED_RR", "SCHED_FIFO". The other thread platforms do not support different thread schedulers. This value is not used for platforms other than "posix".
thread_priority	The new thread priority. Interpretation and permitted range depend on the thread platform and possibly on the scheduler.

```
5.277.3.3 void MHAPlugin_Split::splitted_part_t::release ( )
```

Delegates the release method to the plugin and deletes the **MHAPlugin\_Split::domain\_**← **handler\_t** (p. 711) instance.

Release the loaded plugin.

Plugin release.

```
5.277.3.4 std::string MHAPlugin_Split::splitted_part_t::parse ( const std::string & str ) [inline]
```

Delegates parser incovation to plugin.

```
5.277.3.5 template < class SigType > unsigned MHAPlugin_Split::splitted_part_t::trigger_processing ( SigType * s_in, unsigned start_channel ) [inline]
```

The domain handler copies the input signal channels.

Then, processing is initiated.

### **Parameters**

s_in	The combined input signal.
start_channel	The index (0-based) of the first channel in s_in to be copied to the partial input signal.

### Returns

The number of channels that were copied from the input signal

Wait until processing is finished, then copy the output data.

### **Parameters**

s_out	The combined waveform output signal.
start_channel	The channel offset (0-based) in s_out.

### Returns

The number of channels that were copied to the output signal

#### 5.277.4 Member Data Documentation

**5.277.4.1** PluginLoader::fourway\_processor\_t\* MHAPlugin\_Split::splitted\_part\_t::plug [private]

The plugin that performs the signal processing on the prepared channels.

**5.277.4.2 domain\_handler\_t\*** MHAPlugin\_Split::splitted\_part\_t::domain [private]

The domain specific signal handler, allocated from prepare when input and output domains and signal parameters are known.

5.277.4.3 thread\_platform\_t\* MHAPlugin\_Split::splitted\_part\_t::thread [private]

The platform-dependent thread synchronization implementation.


The documentation for this class was generated from the following file:

# split.cpp

## 5.278 MHAPlugin\_Split::thread\_platform\_t Class Reference

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

Inheritance diagram for MHAPlugin\_Split::thread\_platform\_t:

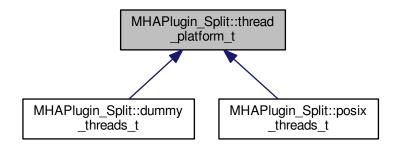

### **Public Member Functions**

thread\_platform\_t (uni\_processor\_t \*proc)

Constructor.

virtual ~thread\_platform\_t ()

Make derived classes destructable via pointer to this base class.

virtual void kick\_thread ()=0

Derived classes notify their processing thread that it should call processor->process().

• virtual void catch\_thread ()=0

Derived classes wait for their signal processing thread to return from the call to part->process().

### **Protected Attributes**

uni\_processor\_t \* processor

A pointer to the plugin loader that processes the sound data in the channels for which this thread was created.

### **Private Member Functions**

- thread\_platform\_t (const thread\_platform\_t &)
   Disallow copy constructor.
- thread\_platform\_t & operator= (const thread\_platform\_t &)

Disallow assignment operator.

### 5.278.1 Detailed Description

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

Derived classes specialize in the actual thread platform.

```
5.278.2 Constructor & Destructor Documentation
```

Disallow copy constructor.

Constructor.

Derived classes create the thread in the constructor.

### **Parameters**

proc Pointer to the associated plugin loader. This plugin loader has to live at least as long as this instance. This instance does not take possession of the plugin loader. In production code, this thread platform and the plugin loader are both created and destroyed by the MHAPlugin\_Split::splitted\_part\_t (p. 726) instance.

```
5.278.2.3 virtual MHAPlugin_Split::thread_platform_t::~thread_platform_t ( ) [inline], [virtual]
```

Make derived classes destructable via pointer to this base class.

Derived classes' destructors notify the thread that it should terminate itself, and wait for the termination to occur.

5.278.3 Member Function Documentation

Disallow assignment operator.

```
5.278.3.2 virtual void MHAPlugin_Split::thread_platform_t::kick_thread() [pure virtual]
```

Derived classes notify their processing thread that it should call processor->process().

Implemented in MHAPlugin\_Split::posix\_threads\_t (p. 720), and MHAPlugin\_Split ::dummy\_threads\_t (p. 717).

```
5.278.3.3 virtual void MHAPlugin Split::thread platform t::catch thread ( ) [pure virtual]
```

Derived classes wait for their signal processing thread to return from the call to part->process().

Implemented in MHAPlugin\_Split::posix\_threads\_t (p. 720), and MHAPlugin\_Split 

::dummy threads t (p. 718).

5.278.4 Member Data Documentation

```
5.278.4.1 uni processor t* MHAPlugin_Split::thread_platform_t::processor [protected]
```

A pointer to the plugin loader that processes the sound data in the channels for which this thread was created.

Using the **MHAPlugin\_Split::uni\_processor\_t** (p. 734) interface instead of the mhaplugin-loader class directly for testability (no need to load real plugins for testing the thread platform).


The documentation for this class was generated from the following file:

split.cpp

# 5.279 MHAPlugin\_Split::uni\_processor\_t Class Reference

An interface to a class that sports a process method with no parameters and no return value.

Inheritance diagram for MHAPlugin\_Split::uni\_processor\_t:

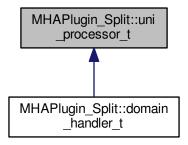

#### **Public Member Functions**

• virtual void process ()=0

This method uses some input signal, performs processing and stores the output signal somewhere.

virtual ~uni\_processor\_t ()

Classes containing virtual methods need virtual destructors.

### 5.279.1 Detailed Description

An interface to a class that sports a process method with no parameters and no return value.

No signal transfer occurs through this interface, because the signal transfer is performed in another thread than the processing.

### 5.279.2 Constructor & Destructor Documentation

**5.279.2.1** virtual MHAPlugin\_Split::uni\_processor\_t::~uni\_processor\_t( ) [inline], [virtual]

Classes containing virtual methods need virtual destructors.

### 5.279.3 Member Function Documentation

**5.279.3.1 virtual void MHAPlugin\_Split::uni\_processor\_t::process()** [pure virtual]

This method uses some input signal, performs processing and stores the output signal somewhere.

This method also has to dispatch the process call based on the configured domains.

Signal transfer and domain configuration have to be done in derived class in different methods.

Implemented in MHAPlugin\_Split::domain\_handler\_t (p. 715).


The documentation for this class was generated from the following file:

# split.cpp

# 5.280 mhaserver\_t Class Reference

MHA Framework listening on TCP port for commands.

Inheritance diagram for mhaserver\_t:

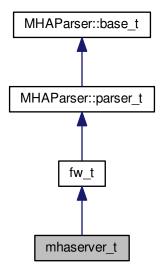

### **Public Member Functions**

- mhaserver\_t (const std::string &ao, const std::string &af, const std::string &lf)
- ~mhaserver t()
- virtual std::string received\_group (const std::string &line)

A line of text was received from network client.

virtual void acceptor\_started (int status)

Notification: "TCP port is open".

virtual void set\_announce\_port (unsigned short announce\_port)

If set to nonzero, the spawning process has asked to be notified of the TCP port used by this process.

void logstring (const std::string &)

Log a message to log file.

• int **run** (unsigned short **port**, const std::string &\_interface)

Accept network connections and act on commands.

### **Public Attributes**

MHAParser::int\_t port

### **Private Attributes**

- MHA TCP::Server \* tcpserver
- std::string ack\_ok
- std::string ack\_fail
- std::string logfile
- unsigned short announce\_port
- MHAParser::int mon t pid mon

### **Additional Inherited Members**

5.280.1 Detailed Description

MHA Framework listening on TCP port for commands.

5.280.2 Constructor & Destructor Documentation

### **Parameters**

	ao	Acknowledgement string at end of successful command responses
Ī	af	Achknoledgement string at end of failed command responses
Ī	lf	File system path of file to use as log file. MHA appends.

If set to nonzero, the spawning process has asked to be notified of the TCP port used by this process.

```
5.280.3.4 void mhaserver_t::logstring (
const std::string & s ) [inline]
```

Log a message to log file.

Accept network connections and act on commands.

Calls **acceptor\_started()** (p. 737) when the TCP port is opened. Calls received\_group for every line received.

#### Returns

exit code that can be used as process exit code

### 5.280.4 Member Data Documentation

```
5.280.4.1 MHA_TCP::Server* mhaserver_t::tcpserver [private]
5.280.4.2 std::string mhaserver_t::ack_ok [private]
5.280.4.3 std::string mhaserver_t::ack_fail [private]
5.280.4.4 std::string mhaserver_t::logfile [private]
5.280.4.5 unsigned short mhaserver_t::announce_port [private]
5.280.4.6 MHAParser::int_mon_t mhaserver_t::pid_mon [private]
5.280.4.7 MHAParser::int_t mhaserver_t::port
```


The documentation for this class was generated from the following file:

# · mhamain.cpp

# 5.281 MHASignal::async\_rmslevel\_t Class Reference

Class for asynchronous level metering.

Inheritance diagram for MHASignal::async\_rmslevel\_t:

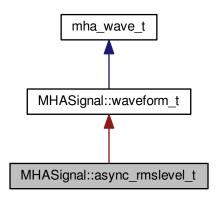

### **Public Member Functions**

• async\_rmslevel\_t (unsigned int frames, unsigned int channels)

Constructor for level metering class.

• std::vector< float > rmslevel () const

Read-only function for querying the current RMS level.

• std::vector< float > peaklevel () const

Read-only function for querying the current peak level.

void process (mha\_wave\_t \*s)

Function to store a chunk of audio in the level meter.

### **Private Attributes**

- unsigned int pos
- unsigned int filled

### **Additional Inherited Members**

5.281.1 Detailed Description

Class for asynchronous level metering.

5.281.2 Constructor & Destructor Documentation

5.281.2.1 MHASignal::async\_rmslevel\_t:(async\_rmslevel\_t (unsigned int *frames,* unsigned int *channels*)

Constructor for level metering class.

Allocate memory for metering. The RMS integration time corresponds to the number of frames in the buffer.

### **Parameters**

frames	Number of frames to integrate.
channels	Number of channels used for level-metering.

# 5.281.3 Member Function Documentation

```
5.281.3.1 std::vector< float > MHASignal::async_rmslevel_t::rmslevel ( ) const
```

Read-only function for querying the current RMS level.

### **Returns**

Vector of floats, one value for each channel, containing the RMS level in dB (SPL if calibrated properly).

```
5.281.3.2 std::vector< float > MHASignal::async_rmslevel_t::peaklevel ( ) const
```

Read-only function for querying the current peak level.

#### Returns

Vector of floats, one value for each channel, containing the peak level in dB (SPL if calibrated properly).

```
5.281.3.3 void MHASignal::async_rmslevel_t::process ( mha_wave_t * s )
```

Function to store a chunk of audio in the level meter.

### **Parameters**

s Audio chunk (same number of channels required as given in the constructor).

```
5.281.4 Member Data Documentation
```

```
5.281.4.1 unsigned int MHASignal::async_rmslevel_t::pos [private]
```

**5.281.4.2** unsigned int MHASignal::async\_rmslevel\_t::filled [private]

The documentation for this class was generated from the following files:

- mha\_signal.hh
- · mha\_signal.cpp

# 5.282 MHASignal::delay\_spec\_t Class Reference

**Public Member Functions** 

- delay\_spec\_t (unsigned int delay, unsigned int frames, unsigned int channels)
- ~delay spec t ()
- mha\_spec\_t \* process (mha\_spec\_t \*)

### **Private Attributes**


- · unsigned int delay
- MHASignal::spectrum\_t \*\* buffer
- unsigned int pos
- 5.282.1 Constructor & Destructor Documentation
- 5.282.1.2 MHASignal::delay\_spec\_t::~delay\_spec\_t()
- 5.282.2 Member Function Documentation
- 5.282.2.1 mha\_spec\_t \* MHASignal::delay\_spec\_t::process ( mha\_spec\_t \* s )
- 5.282.3 Member Data Documentation
- **5.282.3.1 unsigned int MHASignal::delay\_spec\_t::delay** [private]
- **5.282.3.2** MHASignal::spectrum\_t\*\* MHASignal::delay\_spec\_t::buffer [private]
- **5.282.3.3 unsigned int MHASignal::delay\_spec\_t::pos** [private]

The documentation for this class was generated from the following files:

- · mha\_signal.hh
- · mha\_signal.cpp
- 5.283 MHASignal::delay\_t Class Reference

Class to realize a simple delay of waveform streams.

Inheritance diagram for MHASignal::delay\_t:

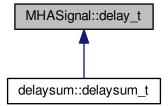

### **Public Member Functions**

- delay\_t (std::vector< int > delays, unsigned int channels)
   Constructor.
- mha\_wave\_t \* process (mha\_wave\_t \*s)
   Processing method.
- ~delay\_t ()
- std::string inspect () const

### **Private Attributes**

- unsigned int channels
- unsigned int \* delays
- unsigned int \* pos
- mha\_real\_t \*\* buffer

# 5.283.1 Detailed Description

Class to realize a simple delay of waveform streams.

5.283.2 Constructor & Destructor Documentation

### Constructor.

#### **Parameters**

delays	Vector of delays, one entry for each channel.
channels	Number of channels expected.

```
5.283.2.2 MHASignal::delay_t::~delay_t()
```

5.283.3 Member Function Documentation

```
5.283.3.1 mha_wave_t * MHASignal::delay_t::process ( mha_wave_t * s )
```

Processing method.

### **Parameters**

s | Input waveform fragment, with number of channels provided in constructor.

### **Returns**

Output waveform fragment.

```
5.283.3.2 std::string MHASignal::delay_t::inspect() const [inline]
5.283.4 Member Data Documentation
5.283.4.1 unsigned int MHASignal::delay_t::channels [private]
5.283.4.2 unsigned int* MHASignal::delay_t::delays [private]
5.283.4.3 unsigned int* MHASignal::delay_t::pos [private]
5.283.4.4 mha_real_t** MHASignal::delay_t::buffer [private]
```

The documentation for this class was generated from the following files:

- · mha\_signal.hh
- · mha\_signal.cpp

# 5.284 MHASignal::delay\_wave\_t Class Reference

Delayline containing wave fragments.

### **Public Member Functions**

- delay\_wave\_t (unsigned int delay, unsigned int frames, unsigned int channels)
- ~delay\_wave\_t ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

### **Private Attributes**

- unsigned int delay
- MHASignal::waveform\_t \*\* buffer
- unsigned int pos

### 5.284.1 Detailed Description

Delayline containing wave fragments.

The delayline contains waveform fragments. The delay can be configured in integer fragments (sample delay or sub-sample delay is not possible).

```
5.284.2 Constructor & Destructor Documentation
```

```
5.284.2.2 MHASignal::delay_wave_t::~delay_wave_t ( )
```

5.284.3 Member Function Documentation

5.284.4 Member Data Documentation

**5.284.4.1 unsigned int MHASignal::delay\_wave\_t::delay** [private]

**5.284.4.2** MHASignal::waveform\_t\*\* MHASignal::delay\_wave\_t::buffer [private]

**5.284.4.3 unsigned int MHASignal::delay\_wave\_t::pos** [private]


The documentation for this class was generated from the following files:

- · mha signal.hh
- mha\_signal.cpp

# 5.285 MHASignal::doublebuffer\_t Class Reference

Double-buffering class.

Inheritance diagram for MHASignal::doublebuffer t:

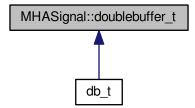

#### **Public Member Functions**

 doublebuffer\_t (unsigned int nchannels\_in, unsigned int nchannels\_out, unsigned int outer\_fragsize, unsigned int inner\_fragsize)

Constructor of double buffer.

- virtual ~doublebuffer t ()
- mha wave t \* outer process (mha wave t \*s)

Method to pass audio fragments into the inner layer.

### **Protected Member Functions**

• virtual **mha\_wave\_t** \* **inner\_process** (**mha\_wave\_t** \*s)=0 *Method to realize inner processing callback.* 

#### **Private Member Functions**

• unsigned int **min** (unsigned int a, unsigned int b)

### **Private Attributes**

- waveform\_t outer\_out
- mha\_wave\_t this\_outer\_out
- waveform\_t inner\_in
- waveform\_t inner\_out
- unsigned int k inner
- unsigned int k\_outer
- unsigned int **ch**

# 5.285.1 Detailed Description

### Double-buffering class.

This class has two layers: The outer layer, with an outer fragment size, and an inner layer, with its own fragment size. Data is passed into the inner layer through the doublebuffer\_t::outr\_process() callback. The pure virtual method **doublebuffer\_t::inner\_process()** (p. 746) is called whenever enough data is available.

### 5.285.2 Constructor & Destructor Documentation

Constructor of double buffer.

### **Parameters**

nchannels_in	Number of channels at the input (both layers).
nchannels_out	Number of channels at the output (both layers).
outer_fragsize	Fragment size of the outer layer (e.g., hardware fragment size)
inner_fragsize	Fragment size of the inner layer (e.g., software fragment size)

```
5.285.2.2 MHASignal::doublebuffer_t::~doublebuffer_t() [virtual]
```

5.285.3 Member Function Documentation

Method to pass audio fragments into the inner layer.

### **Parameters**

s Pointer to input waveform fragment.

### **Returns**

Pointer to output waveform fragment.

Method to realize inner processing callback.

To be overwritten by derived classes.

### **Parameters**

s Pointer to input waveform fragment.

### **Returns**

Pointer to output waveform fragment.

Implemented in **db\_t** (p. 244).

The documentation for this class was generated from the following files:

- mha\_signal.hh
- · mha\_signal.cpp

### 5.286 MHASignal::fft\_t Class Reference

**Public Member Functions** 

- fft\_t (const unsigned int &)
- ∼fft\_t ()
- void wave2spec (const mha\_wave\_t \*, mha\_spec\_t \*, bool swap)
   fast fourier transform.
- void spec2wave (const mha\_spec\_t \*, mha\_wave\_t \*)
- void **spec2wave** (const **mha\_spec\_t** \*, **mha\_wave\_t** \*, unsigned int offset) wave may have fewer number of frames than needed for a complete iFFT.
- void forward (mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)
- void backward (mha spec t \*sIn, mha spec t \*sOut)
- void wave2spec\_scale (const mha\_wave\_t \*, mha\_spec\_t \*, bool swap)
- void spec2wave\_scale (const mha\_spec\_t \*, mha\_wave\_t \*)
- void forward\_scale (mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)
- void backward\_scale (mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

### **Private Member Functions**

- void **sort\_fftw2spec** (fftw\_real \*s\_fftw, **mha\_spec\_t** \*s\_spec, unsigned int ch)

  Arrange the order of an fftw spectrum to the internal order.
- void **sort\_spec2fftw** (fftw\_real \*s\_fftw, const **mha\_spec\_t** \*s\_spec, unsigned int ch)

  Arrange the order of an internal spectrum to the fftw order.

#### **Private Attributes**

- unsigned int nfft
- unsigned int n\_re
- unsigned int n\_im
- · mha real t scale
- mha\_real\_t \* buf\_in
- mha\_real\_t \* buf\_out
- rfftw\_plan fftw\_plan\_wave2spec
- rfftw\_plan\_spec2wave
- fftw\_plan fftw\_plan\_fft
- fftw\_plan fftw\_plan\_ifft

```
5.286.1 Constructor & Destructor Documentation
```

mha spec t \* spec,

bool swap )

fast fourier transform.

if swap is set, the buffer halfes of the wave signal are exchanged before computing the fft.

wave may have fewer number of frames than needed for a complete iFFT.

Only as many frames are written into wave as fit, starting with offset offset of the complete iFFT.

```
5.286.2.4 void MHASignal::fft_t::forward (
                       mha_spec_t * sln,
                       mha spec t * sOut)
5.286.2.5 void MHASignal::fft_t::backward (
                       mha_spec_t * sln,
                       mha_spec_t * sOut )
5.286.2.6 void MHASignal::fft_t::wave2spec_scale (
                       const mha_wave_t * wave,
                       mha_spec_t * spec,
                       bool swap )
5.286.2.7 void MHASignal::fft_t::spec2wave_scale (
                       const mha spec t * spec,
                       mha wave t * wave )
5.286.2.8 void MHASignal::fft t::forward scale (
                       mha_spec_t * sln,
                       mha_spec_t * sOut )
5.286.2.9 void MHASignal::fft_t::backward_scale (
                       mha_spec_t * sln,
                       mha_spec_t * sOut )
5.286.2.10 void MHASignal::fft_t::sort_fftw2spec (
                        fftw_real * s_fftw,
                        mha_spec_t * s_spec,
                        unsigned int ch ) [private]
Arrange the order of an fftw spectrum to the internal order.
The fftw spectrum is arranged [r0 r1 r2 ... rn-1 in in-1 ... i1], while the interal order is [r0 - r1 i1
r2 i2 ... rn-1 in-1 rn –].
5.286.2.11 void MHASignal::fft_t::sort_spec2fftw (
                        fftw real * s fftw,
```

Arrange the order of an internal spectrum to the fftw order.

const mha\_spec\_t \* s\_spec,
unsigned int ch ) [private]

```
5.286.3 Member Data Documentation
5.286.3.1
          unsigned int MHASignal::fft_t::nfft [private]
5.286.3.2
         unsigned int MHASignal::fft_t::n_re [private]
5.286.3.3
         unsigned int MHASignal::fft_t::n_im [private]
5.286.3.4
         mha real t MHASignal::fft_t::scale [private]
5.286.3.5
         mha real t* MHASignal::fft_t::buf_in [private]
5.286.3.6
         mha real t* MHASignal::fft t::buf out [private]
5.286.3.7
         rfftw_plan MHASignal::fft_t::fftw_plan_wave2spec [private]
5.286.3.8
         rfftw_plan MHASignal::fft_t::fftw_plan_spec2wave [private]
5.286.3.9 fftw_plan MHASignal::fft_t::fftw_plan_fft [private]
5.286.3.10 fftw_plan MHASignal::fft_t::fftw_plan_ifft [private]
```

The documentation for this class was generated from the following files:

- mha\_signal\_fft.h
- mha\_signal.cpp

# 5.287 MHASignal::hilbert\_fftw\_t Class Reference

### **Public Member Functions**

- hilbert\_fftw\_t (unsigned int len)
- void hilbert (const mha\_wave\_t \*, mha\_wave\_t \*)

### **Private Attributes**

- unsigned int n
- rfftw plan p1
- fftw\_plan p2
- fftw real \* buf r in
- fftw\_real \* buf\_r\_out
- fftw\_complex \* buf\_c\_in
- fftw\_complex \* buf\_c\_out
- mha\_real\_t sc

**5.287.3.4 fftw\_real\* MHASignal::hilbert\_fftw\_t::buf\_r\_in** [private]

**5.287.3.5 fftw\_real\* MHASignal::hilbert\_fftw\_t::buf\_r\_out** [private]

**5.287.3.6 fftw\_complex\* MHASignal::hilbert\_fftw\_t::buf\_c\_in** [private]

**5.287.3.7 fftw\_complex\* MHASignal::hilbert\_fftw\_t::buf\_c\_out** [private]

**5.287.3.8** mha\_real\_t MHASignal::hilbert\_fftw\_t::sc [private]


The documentation for this class was generated from the following file:

# mha\_signal.cpp

### 5.288 MHASignal::hilbert t Class Reference

Hilbert transformation of a waveform segment.

Inheritance diagram for MHASignal::hilbert t:

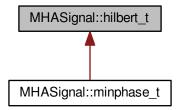

### **Public Member Functions**

- hilbert t (unsigned int len)
- ∼hilbert\_t ()
- void operator() (const mha\_wave\_t \*, mha\_wave\_t \*)

Apply Hilbert transformation on a waveform segment.

### **Private Attributes**

• void \* **h** 

### 5.288.1 Detailed Description

Hilbert transformation of a waveform segment.

Returns the imaginary part of the inverse Fourier transformation of the Fourier transformed input signal with negative frequencies set to zero.

```
5.288.2 Constructor & Destructor Documentation
```

```
5.288.2.1 MHASignal::hilbert_t::hilbert_t ( unsigned int len )
```

### **Parameters**

```
len Length of waveform segment
```

```
5.288.2.2 MHASignal::hilbert_t::~hilbert_t ( )
```

5.288.3 Member Function Documentation

Apply Hilbert transformation on a waveform segment.

5.288.4 Member Data Documentation

```
5.288.4.1 void* MHASignal::hilbert_t::h [private]
```


The documentation for this class was generated from the following files:

- · mha signal.hh
- mha\_signal.cpp

# 5.289 MHASignal::loop\_wavefragment\_t Class Reference

Copy a fixed waveform fragment to a series of waveform fragments of other size.

Inheritance diagram for MHASignal::loop\_wavefragment\_t:

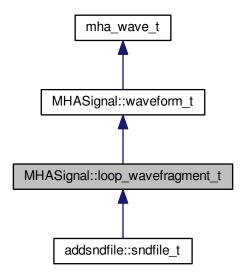

### **Public Types**

### **Public Member Functions**

 loop\_wavefragment\_t (const mha\_wave\_t &src, bool loop, level\_mode\_t level\_mode, std::vector< int > channels, unsigned int startpos=0)

Constructor to create an instance of **loop\_wavefragment\_t** (p. 753) based on an existing waveform block.

- std::vector< int > get\_mapping (unsigned int channels)
- void playback (mha\_wave\_t \*s, playback\_mode\_t pmode, mha\_wave\_t \*level\_pa, const std::vector< int > &channels)

Add source waveform block to an output block.

- void playback (mha\_wave\_t \*s, playback\_mode\_t pmode, mha\_wave\_t \*level\_pa)

  Add source waveform block to an output block.
- void playback (mha\_wave\_t \*s, playback\_mode\_t pmode)

Add source waveform block to an output block.

- void set\_level\_lin (mha\_real\_t l)
- void set\_level\_db (mha\_real\_t l)
- void rewind ()
- void locate\_end ()
- bool is\_playback\_active () const

### **Private Attributes**

- std::vector< int > playback channels
- bool b loop
- unsigned int pos
- MHASignal::waveform t intern level

### **Additional Inherited Members**

# 5.289.1 Detailed Description

Copy a fixed waveform fragment to a series of waveform fragments of other size.

This class is designed to continously play back a waveform to an output stream, with variable output block size.

```
5.289.2 Member Enumeration Documentation
```

```
5.289.2.1 enum MHASignal::loop wavefragment t::level mode t
```

Switch for playback level mode.

### **Enumerator**

```
relative The nominal level is applied as a gain to the source signal.
peak The nominal level is the peak level of source signal in Pascal.
rms The nominal level is the RMS level of the source signal in Pascal.
rms limit40
```

```
5.289.2.2 enum MHASignal::loop_wavefragment_t::playback_mode_t
```

Switch for playback mode.

# **Enumerator**

```
add Add source signal to output stream.
replace Replace output stream by source signal.
input Do nothing, keep output stream (source position is unchanged).
mute Mute output stream (source position is unchanged).
```

#### 5.289.3 Constructor & Destructor Documentation

Constructor to create an instance of **loop\_wavefragment\_t** (p. 753) based on an existing waveform block.

### **Parameters**

src	Waveform block to copy data from.
Іоор	Flag whether the block should be looped or played once.
level_mode	, , , , , , , , , , , , , , , , , , , ,
	MHASignal::loop_wavefragment_t::level_mode_t (p. 754) for details)
channels	MHASignal::loop_wavefragment_t::level_mode_t (p. 754) for details)  Mapping of input to output channels.

### 5.289.4 Member Function Documentation

```
5.289.4.1 std::vector< int > MHASignal::loop_wavefragment_t::get_mapping ( unsigned int channels )
```

Add source waveform block to an output block.

# **Parameters**

S	Output block (streamed signal).
pmode	Playback mode (add, replace, input, mute).
level_pa	Linear output level/gain (depending on level_mode parameter in constructor); one value for each sample in output block.
channels	Output channels

Add source waveform block to an output block.

### **Parameters**

S	Output block (streamed signal).
pmode	Playback mode (add, replace, input, mute).
level_pa	Linear output level/gain (depending on level_mode parameter in constructor); one value for each sample in output block.

Add source waveform block to an output block.

#### **Parameters**

s	Output block (streamed signal).	
pmode	Playback mode (add, replace, input, mute).	


The documentation for this class was generated from the following files:

- · mha signal.hh
- mha\_signal.cpp

# 5.290 MHASignal::matrix\_t Class Reference

n-dimensional matrix with real or complex floating point values.

Inheritance diagram for MHASignal::matrix\_t:

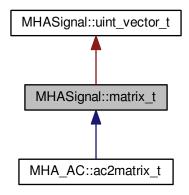

### **Public Member Functions**

- matrix\_t (unsigned int nrows, unsigned int ncols, bool b\_is\_complex=true)
   Create a two-dimensional matrix.
- matrix\_t (const mha\_spec\_t &spec)

Create a two-dimensional matrix from a spectrum, copy values.

- matrix\_t (const MHASignal::uint\_vector\_t &size, bool b\_is\_complex=true)
   Create n-dimensional matrix, descriped by size argument.
- matrix\_t (const MHASignal::matrix\_t &)
- matrix\_t (const uint8\_t \*buf, unsigned int len)

Construct from memory area.

- ∼matrix t ()
- MHASignal::matrix t & operator= (const MHASignal::matrix t &)
- MHASignal::matrix\_t & operator= (const comm\_var\_t &v)

Fill matrix with data of an AC variable object.

comm\_var\_t get\_comm\_var ()

Return a AC communication variable pointing to the data of the current matrix.

• unsigned int dimension () const

Return the dimension of the matrix.

• unsigned int size (unsigned int k) const

Return the size of the matrix.

• unsigned int **get\_nelements** () const

Return total number of elements.

bool is\_same\_size (const MHASignal::matrix\_t &)

Test if matrix has same size as other.

• bool **iscomplex** () const

Return information about complexity.

mha\_real\_t & real (const MHASignal::uint\_vector\_t &index)

Access real part of an element in a n-dimensional matrix.

mha real t & imag (const MHASignal::uint vector t &index)

Access imaginary part of an element in a n-dimensional matrix.

mha\_complex\_t & operator() (const MHASignal::uint\_vector\_t &index)

Access complex value of an element in a n-dimensional matrix.

• const mha\_real\_t & real (const MHASignal::uint\_vector\_t &index) const

Access real part of an element in a n-dimensional matrix.

const mha\_real\_t & imag (const MHASignal::uint\_vector\_t &index) const

Access imaginary part of an element in a n-dimensional matrix.

• const mha\_complex\_t & operator() (const MHASignal::uint\_vector\_t &index) const

Access complex value of an element in a n-dimensional matrix.

• mha\_real\_t & real (unsigned int row, unsigned int col)

Access real part of an element in a two-dimensional matrix.

• mha real t & imag (unsigned int row, unsigned int col)

Access imaginary part of an element in a two-dimensional matrix.

• mha\_complex\_t & operator() (unsigned int row, unsigned int col)

Access complex value of an element in a two-dimensional matrix.

• const **mha real t** & **real** (unsigned int row, unsigned int col) const

Access real part of an element in a two-dimensional matrix.

• const mha\_real\_t & imag (unsigned int row, unsigned int col) const

Access imaginary part of an element in a two-dimensional matrix.

• const mha\_complex\_t & operator() (unsigned int row, unsigned int col) const

Access complex value of an element in a two-dimensional matrix.

- unsigned int get nreals () const
- unsigned int get\_index (unsigned int row, unsigned int col) const
- unsigned int get index (const MHASignal::uint vector t &index) const
- unsigned int **numbytes** () const

Return number of bytes needed to store into memory.

unsigned int write (uint8\_t \*buf, unsigned int len) const

Copy to memory area.

const mha\_real\_t \* get\_rdata () const

Return pointer of real data.

const mha\_complex\_t \* get\_cdata () const

Return pointer of complex data.

### **Private Attributes**

```
uint32_t complex_ofs
uint32_t nelements
union {
    mha_real_t * rdata
    mha_complex_t * cdata
};
```

**Additional Inherited Members** 

# 5.290.1 Detailed Description

n-dimensional matrix with real or complex floating point values.

# Warning

The member functions **imag()** (p. 762) and operator() should only be called if the matrix is defined to hold complex values.

### 5.290.2 Constructor & Destructor Documentation

Create a two-dimensional matrix.

### **Parameters**

nrows	Number of rows
ncols	Number of columns
b_is_complex	Add space for complex values

Create a two-dimensional matrix from a spectrum, copy values.

#### **Parameters**

spec	Source spectrum structure
------	---------------------------

Create n-dimensional matrix, descriped by size argument.

#### **Parameters**

size	Size vector
b_is_complex	Add space for complex values

Construct from memory area.

## Warning

This constructor is not real time safe

```
5.290.2.6 MHASignal::matrix_t::~matrix_t ( )
```

5.290.3 Member Function Documentation

Fill matrix with data of an AC variable object.

### **Parameters**

```
v Source AC variable (comm_var_t (p. 238))
```

### Note

The type and dimension of the AC variable must match the type and dimension of the matrix.

```
5.290.3.3 comm_var_t MHASignal::matrix_t::get_comm_var( )
```

Return a AC communication variable pointing to the data of the current matrix.

### **Returns**

AC variable object (**comm\_var\_t** (p. 238)), valid for the life time of the matrix.

```
5.290.3.4 unsigned int MHASignal::matrix_t::dimension ( ) const [inline]
```

Return the dimension of the matrix.

### **Returns**

Dimension of the matrix

Return the size of the matrix.

### **Parameters**

```
k Dimension
```

### **Returns**

Size of the matrix in dimension k

```
5.290.3.6 unsigned int MHASignal::matrix_t::get_nelements ( ) const
```

Return total number of elements.

Test if matrix has same size as other.

```
5.290.3.8 bool MHASignal::matrix_t::iscomplex ( ) const [inline]
```

Return information about complexity.

Access real part of an element in a n-dimensional matrix.

### **Parameters**

index	Index vector
-------	--------------

Access imaginary part of an element in a n-dimensional matrix.

### **Parameters**

```
index Index vector
```

Access complex value of an element in a n-dimensional matrix.

### **Parameters**

```
index Index vector
```

Access real part of an element in a n-dimensional matrix.

### **Parameters**

```
index Index vector
```

Access imaginary part of an element in a n-dimensional matrix.

### **Parameters**

indox	Inday, vaatar
inaex	Index vector

Access complex value of an element in a n-dimensional matrix.

#### **Parameters**

Access real part of an element in a two-dimensional matrix.

### **Parameters**

row	Row number of element
col	Column number of element

Access imaginary part of an element in a two-dimensional matrix.

### **Parameters**

row	Row number of element
col	Column number of element

Access complex value of an element in a two-dimensional matrix.

### **Parameters**

row	Row number of element
col	Column number of element

Access real part of an element in a two-dimensional matrix.

#### **Parameters**

row	Row number of element
col	Column number of element

Access imaginary part of an element in a two-dimensional matrix.

### **Parameters**

row	Row number of element
col	Column number of element

Access complex value of an element in a two-dimensional matrix.

### **Parameters**

row	Row number of element
col	Column number of element

Return number of bytes needed to store into memory.

Copy to memory area.

```
5.290.3.26 const mha_real_t* MHASignal::matrix_t::get_rdata( ) const [inline]
```

Return pointer of real data.

Return pointer of complex data.

```
5.290.4 Member Data Documentation
```

```
5.290.4.1 uint32_t MHASignal::matrix_t::complex_ofs [private]
```


The documentation for this class was generated from the following files:

- mha\_signal.hh
- mha\_signal.cpp

# 5.291 MHASignal::minphase\_t Class Reference

Minimal phase function.

Inheritance diagram for MHASignal::minphase t:

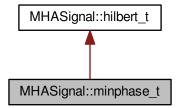

### **Public Member Functions**

minphase\_t (unsigned int fftlen, unsigned int ch)
 Constructor.

void operator() (mha\_spec\_t \*s)

Transform input spectrum to a minimal-phase spectrum, discarding the original phase.

### **Private Attributes**

MHASignal::waveform\_t phase

**Additional Inherited Members** 

5.291.1 Detailed Description

Minimal phase function.

The output spectrum Y(f) is

$$Y(f) = |X(f)|e^{i\mathcal{H}\{\log|X(f)|\}},$$

with the input spectrum X(f) and the Hilbert transformation  $\mathcal{H}\{\cdots\}$ .

- 5.291.2 Constructor & Destructor Documentation

Constructor.

#### **Parameters**

fftlen	FFT length
ch	Number of channels

- 5.291.3 Member Function Documentation
- 5.291.3.1 void MHASignal::minphase\_t::operator() ( mha\_spec\_t \* s )

Transform input spectrum to a minimal-phase spectrum, discarding the original phase.

### **Parameters**

s | Spectrum to operate on.

### 5.291.4 Member Data Documentation

**5.291.4.1 MHASignal::waveform\_t** MHASignal::minphase\_t::phase [private]

The documentation for this class was generated from the following files:

- mha\_signal.hh
- mha\_signal.cpp

# 5.292 MHASignal::quantizer\_t Class Reference

Simple simulation of fixpoint quantization.

### **Public Member Functions**

- quantizer\_t (unsigned int num\_bits)
   Constructor.
- void operator() (mha\_wave\_t &s)
   Quantization of a waveform fragment.

### **Private Attributes**

- · bool limit
- mha\_real\_t upscale
- mha\_real\_t downscale
- · mha real tup limit

# 5.292.1 Detailed Description

Simple simulation of fixpoint quantization.

### 5.292.2 Constructor & Destructor Documentation

5.292.2.1 MHASignal::quantizer\_t::quantizer\_t ( unsigned int *num\_bits* )

### Constructor.

### **Parameters**

num_bits Nu	umber of bits to simulate,	or zero for limiting to [-1,1] only.
-------------	----------------------------	--------------------------------------

5.292.3 Member Function Documentation

Quantization of a waveform fragment.

### **Parameters**

s | Waveform fragment to be quantized.

5.292.4 Member Data Documentation

```
5.292.4.1 bool MHASignal::quantizer_t::limit [private]
```

**5.292.4.2 mha real t MHASignal::quantizer\_t::upscale** [private]

**5.292.4.3** mha\_real\_t MHASignal::quantizer\_t::downscale [private]

**5.292.4.4 mha\_real\_t MHASignal::quantizer\_t::up\_limit** [private]


The documentation for this class was generated from the following files:

- mha\_signal.hh
- · mha signal.cpp

5.293 MHASignal::ringbuffer\_t Class Reference

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

Inheritance diagram for MHASignal::ringbuffer\_t:

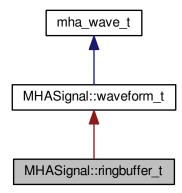

### **Public Member Functions**

- ringbuffer\_t (unsigned frames, unsigned channels, unsigned prefilled\_frames)

  Creates new ringbuffer for time domain signal.
- unsigned **contained\_frames** () const number of currently contained frames
- mha\_real\_t & value (unsigned frame, unsigned channel)

Access to value stored in ringbuffer.

void discard (unsigned frames)

Discards the oldest frames.

void write (mha\_wave\_t &signal)

Copies the contents of the signal into the ringbuffer if there is enough space.

### **Private Attributes**

- unsigned next\_read\_frame\_index
   Index of oldest frame in underlying storage for the ringbuffer.
- unsigned next\_write\_frame\_index
   Index of first free frame in underlying storage.

#### **Additional Inherited Members**

### 5.293.1 Detailed Description

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

Blocks of audio signal can be placed into the ringbuffer using the **write** (p. 771) method. Individual audio samples can be accessed and altered using the **value** (p. 770) method. Blocks of audio data can be deleted from the ringbuffer using the **discard** (p. 771) method.

### 5.293.2 Constructor & Destructor Documentation

Creates new ringbuffer for time domain signal.

Constructor allocates enough storage so that *frames* audio samples can be stored in the ring-buffer.

### **Parameters**

frames	Size of ringbuffer in samples per channel. Maximum number of frames that can be stored in the ringbuffer at one time. This number cannot be changed after instance creation.
channels	Number of audio channels.
prefilled_frames	Number of frames to be prefilled with zero values. Many applications of a ringbuffer require the introduction of a delay. In practice, this delay is achieved by inserting silence audio samples (zeros) into the ringbuffer before the start of the actual signal is inserted for the first time.

# **Exceptions**

```
MHA_Error (p. 423) if prefilled_frames > frames
```

#### 5.293.3 Member Function Documentation

```
5.293.3.1 unsigned MHASignal::ringbuffer_t::contained_frames() const [inline]
```

number of currently contained frames

Access to value stored in ringbuffer.

*frame* index is relative to the oldest frame stored in the ringbuffer, therefore, the meaning of the *frame* changes when the **discard** (p. 771) method is called.

### **Parameters**

frame	frame index, 0 corresponds to oldest frame stored.	
channel	audio channel	

### **Returns**

reference to contained sample value

# **Exceptions**

```
MHA_Error (p. 423) if channel or frame out of bounds.
```

```
5.293.3.3 void MHASignal::ringbuffer_t::discard (
unsigned frames ) [inline]
```

Discards the oldest frames.

Makes room for new write (p. 771), alters base frame index for value (p. 770)

### **Parameters**

```
frames how many frames to discard.
```

## **Exceptions**

```
MHA_Error (p. 423) | if frames > contained_frames (p. 770)
```

Copies the contents of the signal into the ringbuffer if there is enough space.

### **Parameters**

signal New signal to be appended to the signal already present in the ringbuffer

# **Exceptions**

<b>MHA_Error</b> (p. 423)	if there is not enough space or if the channel count mismatches.
	Nothing is copied if the space is insufficient.

# 5.293.4 Member Data Documentation

**5.293.4.1 unsigned MHASignal::ringbuffer\_t::next\_read\_frame\_index** [private]

Index of oldest frame in underlying storage for the ringbuffer.

This value is added to the frame parameter of the **value** (p. 770) method, and this value is altered when **discard** (p. 771) is called.

**5.293.4.2 unsigned MHASignal::ringbuffer\_t::next\_write\_frame\_index** [private]

Index of first free frame in underlying storage.

Next frame to be stored will be placed here.


The documentation for this class was generated from the following files:

- mha\_signal.hh
- mha\_signal.cpp

5.294 MHASignal::schroeder\_t Class Reference

Schroeder tone complex class.

Inheritance diagram for MHASignal::schroeder\_t:

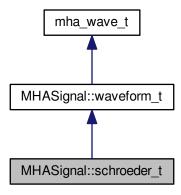

# **Public Types**

• typedef float(\* **groupdelay\_t**) (float f, float fmin, float fmax)

Function type for group delay definition.

**Public Member Functions** 

 schroeder\_t (unsigned int len, unsigned int channels=1, schroeder\_t::sign\_t sign=up, mha\_real\_t speed=1)

Constructor.

• schroeder\_t (unsigned int len, unsigned int channels=1, schroeder\_t::groupdelay\_t freqfun=MHASignal::schroeder\_t::identity, float fmin=0, float fmax=1, float eps=1e-10)

Construct create Schroeder tone complex from a given frequency function.

#### **Static Public Member Functions**

- static float identity (float x, float, float)
- static float **log up** (float x, float fmin, float fmax)
- static float **log\_down** (float x, float fmin, float fmax)

**Additional Inherited Members** 

5.294.1 Detailed Description

Schroeder tone complex class.

The Schroeder tone complex is a sweep defined in the sampled spectrum:

$$\Phi(f) = \sigma 2\pi \tau (2f/f_s)^{2\alpha}, \quad S(f) = e^{i\Phi(f)}$$

f is the sampled frequency in Hz,  $\sigma$  is the sign of the sweep (-1 for up sweep, +1 for down sweep),  $\tau$  is the sweep duration in samples,  $f_s$  is the sampling rate in Hz and  $\alpha$  is the relative sweep speed.

5.294.2 Member Typedef Documentation

5.294.2.1 typedef float(\* MHASignal::schroeder\_t::groupdelay\_t) (float f, float fmin, float fmax)

Function type for group delay definition.

### **Parameters**

f	Frequency relative to Nyquist frequency.
fmin	Minimum frequency relative to Nyquist frequency.
fmax	Maximum frequency relative to Nyquist frequency.

### 5.294.3 Member Enumeration Documentation

# 5.294.3.1 enum MHASignal::schroeder\_t::sign\_t

Enumerator for sign of Schroeder tone complex sweep direction.

### **Enumerator**

```
up Sweep from zero to Nyquist frequency ( \sigma = -1) down Sweep from Nyquist frequency to zero ( \sigma = +1)
```

#### 5.294.4 Constructor & Destructor Documentation

### Constructor.

Parameters of the Schroeder tone complex are configured in the constructor.

#### **Parameters**

len	Length $ au$ of the Schroeder tone complex in samples
channels	Number of channels
sign	Sign $\sigma$ of Schroeder sweep
speed	Relative speed $\alpha$ (curvature of phase function)

Construct create Schroeder tone complex from a given frequency function.

The frequency function g(f) defines the sweep speed and sign (based on the group delay). It must be defined in the interval [0,1) and should return values in the interval [0,1].

$$\Phi(f) = -4\pi\tau \int\limits_0^\tau g(f)\,\mathrm{d}f, \quad S(f) = e^{i\Phi(f)}$$

### **Parameters**

len	Length $ au$ of the Schroeder tone complex in samples.
channels	Number of channels.
freqfun	Frequency function $g(f)$ .
fmin	Start frequency (relative to Nyquist frequency).
fmax	End frequency (relative to Nyquist frequency).
eps	Stability constant for frequency ranges not covered by Schroeder tone complex.

### 5.294.5 Member Function Documentation


The documentation for this class was generated from the following files:

- mha\_signal.hh
- mha\_signal.cpp

# 5.295 MHASignal::spectrum\_t Class Reference

a signal processing class for spectral data (based on **mha\_spec\_t** (p. 442))

Inheritance diagram for MHASignal::spectrum\_t:

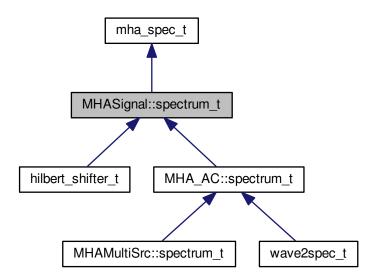

### **Public Member Functions**

- spectrum\_t (const unsigned int &frames, const unsigned int &channels)
   constructor of spectrum class
- spectrum\_t (const mha\_spec\_t &)

Copy constructor.

spectrum\_t (const MHASignal::spectrum\_t &)

Copy constructor.

- spectrum\_t (const std::vector< mha\_complex\_t > &)
- virtual ~spectrum\_t (void)
- mha\_complex\_t & operator() (unsigned int f, unsigned int ch)

Access to element.

mha\_complex\_t & operator[] (unsigned int k)

Access to a single element, direct index into data buffer.

• mha\_complex\_t & value (unsigned int f, unsigned int ch)

Access to element.

void copy (const mha\_spec\_t &)

copy all elements from a spectrum

• void **copy\_channel** (const **mha\_spec\_t** &s, unsigned sch, unsigned dch)

Copy one channel of a given spectrum signal to a target channel.

void export\_to (mha\_spec\_t &)

copy elements to spectrum structure

void scale (const unsigned int &, const unsigned int &, const unsigned int &, const mha
 —real\_t &)

scale section [a,b) in channel "ch" by "val"
 void scale\_channel (const unsigned int &, const mha\_real\_t &)
 scale all elements in one channel

**Additional Inherited Members** 

5.295.1 Detailed Description

a signal processing class for spectral data (based on **mha\_spec\_t** (p. 442))

5.295.2 Constructor & Destructor Documentation

constructor of spectrum class

Allocates buffers and initializes memory to zeros.

## **Parameters**

frames	number of frames (fft bins) in one channel. Number of Frames is usually fftlen / 2 + 1
channels	number of channels

void ) [virtual]

Reimplemented in MHA\_AC::spectrum\_t (p. 402).

## 5.295.3 Member Function Documentation

Access to element.

#### **Parameters**

f	Bin number	
ch	Channel number	

## **Returns**

Reference to element

```
5.295.3.2 mha_complex_t& MHASignal::spectrum_t::operator[]( unsigned int k) [inline]
```

Access to a single element, direct index into data buffer.

## **Parameters**

```
k Buffer index
```

## **Returns**

Reference to element

Access to element.

## **Parameters**

f	Bin number	
ch	Channel number	

## **Returns**

Reference to element

```
5.295.3.4 void spectrum_t::copy (
const mha_spec_t & src )
```

copy all elements from a spectrum

## **Parameters**

src	input spectrum
-----	----------------

Copy one channel of a given spectrum signal to a target channel.

#### **Parameters**

s	Input spectrum signal
sch	Channel index in source signal
dch	Channel index in destination (this) signal

copy elements to spectrum structure

## **Parameters**

dest	destination spectrum structure
------	--------------------------------

scale section [a,b) in channel "ch" by "val"

а	starting frame
b	end frame (excluded)
ch	channel number
val	scale factor

scale all elements in one channel

#### **Parameters**


ch	channel number
src	scale factor

The documentation for this class was generated from the following files:

- · mha\_signal.hh
- mha\_signal.cpp

5.296 MHASignal::stat\_t Class Reference

Inheritance diagram for MHASignal::stat\_t:

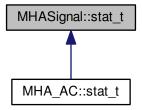

## **Public Member Functions**

- stat\_t (const unsigned int &frames, const unsigned int &channels)
- void mean (mha\_wave\_t &m)
- void mean std (mha wave t &m, mha wave t &s)
- void push (const mha\_wave\_t &)
- void **push** (const **mha\_real\_t** &x, const unsigned int &k, const unsigned int &ch)

## **Private Attributes**

- · MHASignal::waveform t n
- MHASignal::waveform\_t sum
- MHASignal::waveform\_t sum2

```
5.296.1 Constructor & Destructor Documentation
5.296.1.1 MHASignal::stat_t::stat_t (
                     const unsigned int & frames,
                      const unsigned int & channels )
5.296.2 Member Function Documentation
5.296.2.1 void MHASignal::stat_t::mean (
                      mha wave t&m)
5.296.2.2 void MHASignal::stat_t::mean_std (
                     mha_wave_t & m,
                      mha_wave_t & s)
5.296.2.3 void MHASignal::stat_t::push (
                      const mha_wave_t & x )
5.296.2.4 void MHASignal::stat_t::push (
                      const mha_real_t & x,
                      const unsigned int & k,
                      const unsigned int & ch )
5.296.3 Member Data Documentation
5.296.3.1
         MHASignal::waveform_t MHASignal::stat_t::n [private]
5.296.3.2 MHASignal::waveform t MHASignal::stat_t::sum [private]
5.296.3.3
         MHASignal::waveform_t MHASignal::stat_t::sum2 [private]
The documentation for this class was generated from the following files:
   mha_signal.hh
   mha_signal.cpp
```

implements subsample delay in spectral domain.

MHASignal::subsample\_delay\_t Class Reference

5.297

#### **Public Member Functions**

• **subsample\_delay\_t** (const std::vector< float > &subsample\_delay, unsigned fftlen)

Constructor computes complex phase factors to apply to achieve subsample delay.

void process (mha\_spec\_t \*s)

Apply the phase\_gains to s to achieve the subsample delay.

void process (mha\_spec\_t \*s, unsigned idx)

Apply the pase gains to channel idx in s to achieve the subsample delay in channel idx.

#### **Public Attributes**

spectrum\_t phase\_gains

The complex factors to apply to achieve the necessary phase shift.

#### **Private Attributes**

unsigned last\_complex\_bin

index of the last complex fft bin for the used fft length.

## 5.297.1 Detailed Description

implements subsample delay in spectral domain.

When transformed back to the time domain, the signal is delayed by the configured fraction of a sample. This operation must not be used in a smoothgains bracket.

5.297.2 Constructor & Destructor Documentation

Constructor computes complex phase factors to apply to achieve subsample delay.

## **Parameters**

subsample_delay	The subsample delay to apply0.5 <= subsample_delay <= 0.5
fftlen	FFT length

## **Exceptions**

MHA_Error (p. 423) if the parameter	s are out of range
-------------------------------------	--------------------

## 5.297.3 Member Function Documentation

Apply the phase\_gains to s to achieve the subsample delay.

Apply the pase gains to channel idx in s to achieve the subsample delay in channel idx.

## **Parameters**

s	signal
idx	channel index, 0-based

## **Exceptions**

**MHA\_Error** (p. 423) if idx 
$$>=$$
 s- $>$ num\_channels

#### 5.297.4 Member Data Documentation

5.297.4.1 spectrum\_t MHASignal::subsample\_delay\_t::phase\_gains

The complex factors to apply to achieve the necessary phase shift.

**5.297.4.2 unsigned MHASignal::subsample\_delay\_t::last\_complex\_bin** [private]

index of the last complex fft bin for the used fft length.


The documentation for this class was generated from the following files:

- · mha\_signal.hh
- mha\_signal.cpp

#### 5.298 MHASignal::uint\_vector\_t Class Reference

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

Inheritance diagram for MHASignal::uint vector t:

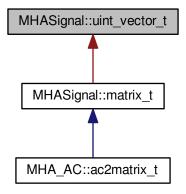

## **Public Member Functions**

uint\_vector\_t (unsigned int len)

Constructor, initializes all elements to zero.

- uint\_vector\_t (const uint\_vector\_t &)
- uint\_vector\_t (const uint8\_t \*buf, unsigned int len)

Construct from memory area.

- ∼uint vector t ()
- bool operator== (const uint\_vector\_t &) const

Check for equality.

• uint vector t & operator= (const uint vector t &)

Assign from other uint\_vector\_t (p. 784).

• unsigned int get length () const

Return the length of the vector.

const uint32\_t & operator[] (unsigned int k) const

Read-only access to elements.

uint32\_t & operator[] (unsigned int k)

Access to elements.

unsigned int numbytes () const

Return number of bytes needed to store into memory.

• unsigned int write (uint8 t \*buf, unsigned int len) const

Copy to memory area.

• const uint32\_t \* **getdata** () const

Return pointer to the data field.

## **Protected Attributes**

```
uint32_t length
```

```
    uint32_t * data
```

## 5.298.1 Detailed Description

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

```
5.298.2 Constructor & Destructor Documentation
```

Constructor, initializes all elements to zero.

#### **Parameters**

```
len Length of vector.
```

Construct from memory area.

## Warning

This constructor is not real time safe

```
5.298.2.4 MHASignal::uint_vector_t::~uint_vector_t ( )
```

5.298.3 Member Function Documentation

Check for equality.

```
5.298.3.2 uint_vector_t & MHASignal::uint_vector_t::operator= (
                       const uint_vector_t & src )
Assign from other uint_vector_t (p. 784).
Warning
      This assignment will fail if the lengths mismatch.
5.298.3.3
          unsigned int MHASignal::uint_vector_t::get_length() const [inline]
Return the length of the vector.
5.298.3.4 const uint32_t& MHASignal::uint_vector_t::operator[] (
                       unsigned int k ) const [inline]
Read-only access to elements.
5.298.3.5 uint32_t& MHASignal::uint_vector_t::operator[](
                       unsigned int k ) [inline]
Access to elements.
5.298.3.6 unsigned int MHASignal::uint_vector_t::numbytes ( ) const
Return number of bytes needed to store into memory.
5.298.3.7 unsigned int MHASignal::uint_vector_t::write (
                       uint8 t * buf.
                       unsigned int len ) const
Copy to memory area.
5.298.3.8 const uint32_t* MHASignal::uint_vector_t::getdata( ) const [inline]
Return pointer to the data field.
5.298.4 Member Data Documentation
         uint32_t MHASignal::uint_vector_t::length [protected]
5.298.4.1
5.298.4.2 uint32_t* MHASignal::uint_vector_t::data [protected]
```


The documentation for this class was generated from the following files:

- · mha\_signal.hh
- mha\_signal.cpp

## 5.299 MHASignal::waveform\_t Class Reference

signal processing class for waveform data (based on mha\_wave\_t (p. 472))

Inheritance diagram for MHASignal::waveform\_t:

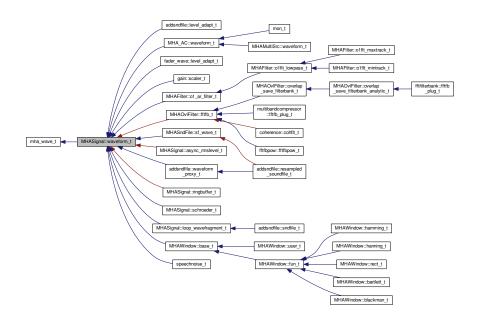

#### **Public Member Functions**

- waveform\_t (const unsigned int &frames, const unsigned int &channels)
   constructor of waveform\_t (p. 787)
- waveform\_t (const mhaconfig\_t &cf)

Constructor to create a waveform from plugin configuration.

- waveform\_t (const mha\_wave\_t &src)
  - Copy contructor for **mha\_wave\_t** (p. 472) source.
- waveform\_t (const MHASignal::waveform\_t &src)
   Copy contructor.
- waveform\_t (const std::vector< mha\_real\_t > &src)
   Copy contructor for std::vector< mha\_real\_t > source.
- virtual ~waveform\_t (void)
- void operator= (const mha\_real\_t &v)
- mha\_real\_t & operator[] (unsigned int k)
- const mha\_real\_t & operator[] (unsigned int k) const
- mha\_real\_t & value (unsigned int t, unsigned int ch)
   Element accessor.
- mha\_real\_t & operator() (unsigned int t, unsigned int ch)
   Element accessor.
- const mha\_real\_t & value (unsigned int t, unsigned int ch) const

Constant element accessor.

• const mha\_real\_t & operator() (unsigned int t, unsigned int ch) const

Constant element accessor.

mha\_real\_t sum (const unsigned int &a, const unsigned int &b)

sum of all elements between [a,b) in all channels

• mha\_real\_t sum (const unsigned int &a, const unsigned int &b, const unsigned int &ch) sum of all elements between [a,b) in channel ch

mha\_real\_t sum ()

sum of all elements

• mha real t sumsqr ()

sum of square of all elements

mha\_real\_t sum\_channel (const unsigned int &)

return sum of all elements in one channel

void assign (const unsigned int &k, const unsigned int &ch, const mha\_real\_t &val)

set frame "k" in channel "ch" to value "val"

void assign (const mha\_real\_t &)

set all elements to value

void assign\_frame (const unsigned int &k, const mha\_real\_t &val)

assign value "val" to frame k in all channels

void assign\_channel (const unsigned int &c, const mha\_real\_t &val)

assign value "val" to channel ch in all frames

- void copy (const std::vector< mha\_real\_t > &v)
- void copy (const mha\_wave\_t &)

copy data from source into current waveform

- void copy (const mha\_wave\_t \*)
- void copy\_channel (const mha\_wave\_t &, unsigned int, unsigned int)

Copy one channel of a given waveform signal to a target channel.

void copy\_from\_at (unsigned int, unsigned int, const mha\_wave\_t &, unsigned int)

Copy part of the source signal into part of this waveform object.

void export\_to (mha\_wave\_t &)

copy data into allocated **mha\_wave\_t** (p. 472) structure

void limit (const mha\_real\_t &min, const mha\_real\_t &max)

limit target to range [min,max]

void power (const waveform\_t &)

transform waveform signal (in Pa) to squared signal (in W/m^2)

void powspec (const mha\_spec\_t &)

get the power spectrum (in W/m\2) from a complex spectrum

 void scale (const unsigned int &a, const unsigned int &b, const unsigned int &ch, const mha\_real\_t &val)

scale section [a,b) in channel "ch" by "val"

void scale (const unsigned int &k, const unsigned int &ch, const mha\_real\_t &val)

scale one element

void scale\_channel (const unsigned int &, const mha\_real\_t &)

scale one channel of target with a scalar

- void scale\_frame (const unsigned int &, const mha\_real\_t &)
- unsigned int get\_size () const

**Additional Inherited Members** 

## 5.299.1 Detailed Description

signal processing class for waveform data (based on mha\_wave\_t (p. 472))

#### 5.299.2 Constructor & Destructor Documentation

```
constructor of waveform_t (p. 787)
```

Allocates buffer memory and initializes values to zero.

#### **Parameters**

frames	number of frames in each channel
channels	number of channels

```
5.299.2.2 waveform_t::waveform_t (

const mhaconfig_t & cf ) [explicit]
```

Constructor to create a waveform from plugin configuration.

## **Parameters**

```
cf Plugin configuration
```

Copy contructor for **mha\_wave\_t** (p. 472) source.

Copy contructor.

Copy contructor for std::vector<mha\_real\_t> source.

A waveform structure with a single channel is created, the length is equal to the number of elements in the source vector.

5.299.3 Member Function Documentation

```
5.299.3.1 void MHASignal::waveform_t::operator=(
const mha_real_t & v ) [inline]
```

Element accessor.

## **Parameters**

t	Frame number
ch	Channel number

### **Returns**

Reference to element

Element accessor.

t	Frame number
ch	Channel number

## Returns

Reference to element

Constant element accessor.

## **Parameters**

t	Frame number
ch	Channel number

#### **Returns**

Reference to element

Constant element accessor.

## **Parameters**

t	Frame number
ch	Channel number

### **Returns**

Reference to element

sum of all elements between [a,b) in all channels

а	starting frame
b	end frame (excluded)

```
Returns
```

sum

sum of all elements between [a,b) in channel ch

#### **Parameters**

а	starting frame
b	end frame (exluded)
ch	channel number

## **Returns**

sum

```
5.299.3.10 mha_real_t waveform_t::sum ( )
```

sum of all elements

## **Returns**

sum of all elements

```
5.299.3.11 mha_real_t waveform_t::sumsqr()
```

sum of square of all elements

## **Returns**

sum of square of all elements

```
5.299.3.12 mha_real_t waveform_t::sum_channel ( const unsigned int & ch )
```

return sum of all elements in one channel

## **Parameters**

ch channel number
-------------------

## Returns

sum

```
5.299.3.13 void waveform_t::assign (
const unsigned int & k,
const unsigned int & ch,
const mha_real_t & val )
```

set frame "k" in channel "ch" to value "val"

#### **Parameters**

k	frame number
ch	channel number
val	new value

set all elements to value

#### **Parameters**

```
val new value
```

assign value "val" to frame k in all channels

k	frame number
val	new value

assign value "val" to channel ch in all frames

#### **Parameters**

ch	channel number
val	new value

```
5.299.3.17 void waveform_t::copy (  const\ std::vector < mha\_real\_t > \&\ \nu\ ) 5.299.3.18 void waveform_t::copy (  const\ mha\_wave\_t\ \&\ src\ )
```

copy data from source into current waveform

#### **Parameters**

Copy one channel of a given waveform signal to a target channel.

src	Input waveform signal
src_channel	Channel in source signal
dest_channel	Channel number in destination signal

Copy part of the source signal into part of this waveform object.

Source and target have to have the same number of channels.

#### **Parameters**

to_pos	Offset in target
len	Number of frames copied
src	Source
from_pos	Offset in source

```
5.299.3.22 void waveform_t::export_to (
mha_wave_t & dest )
```

copy data into allocated **mha\_wave\_t** (p. 472) structure

## **Parameters**

```
dest destination structure
```

```
5.299.3.23 void waveform_t::limit (
const mha_real_t & min,
const mha_real_t & max )
```

limit target to range [min,max]

## **Parameters**

min	lower limit
max	upper limit

```
5.299.3.24 void waveform_t::power (
const waveform t & src )
```

transform waveform signal (in Pa) to squared signal (in W/m<sup>2</sup>)

src	linear waveform signal (in Pa)
-----	--------------------------------

```
5.299.3.25 void waveform_t::powspec (
const mha_spec_t & src )
```

get the power spectrum (in W/m<sup>2</sup>) from a complex spectrum

#### **Parameters**

```
src | complex spectrum (normalized to Pa)
```

scale section [a,b) in channel "ch" by "val"

#### **Parameters**

а	starting frame
b	end frame (excluded)
ch	channel number
val	scale factor

scale one element

## **Parameters**

k	frame number
ch	channel number
val	scale factor

scale one channel of target with a scalar

## **Parameters**


ch	channel number
src	factor

The documentation for this class was generated from the following files:

- mha\_signal.hh
- mha\_signal.cpp

## 5.300 MHASndFile::sf\_t Class Reference

Inheritance diagram for MHASndFile::sf\_t:

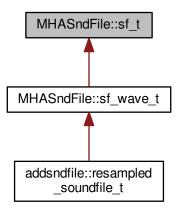

## **Public Member Functions**

- sf\_t (const std::string &fname)
- $\sim$ sf\_t ()

## **Public Attributes**

• SNDFILE \* sf

5.300.1 Constructor & Destructor Documentation

5.300.1.2 MHASndFile::sf\_t::~sf\_t ( )

5.300.2 Member Data Documentation


5.300.2.1 SNDFILE\* MHASndFile::sf\_t::sf

The documentation for this class was generated from the following files:

- · mhasndfile.h
- · mhasndfile.cpp

5.301 MHASndFile::sf\_wave\_t Class Reference

Inheritance diagram for MHASndFile::sf\_wave\_t:

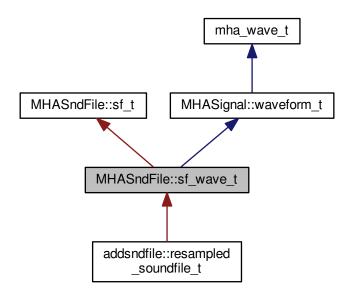

**Public Member Functions** 

• **sf\_wave\_t** (const std::string &fname, **mha\_real\_t** peaklevel\_db, unsigned int maxlen=std::numeric\_limits< unsigned int >::**max**(), unsigned int startpos=0, std← ::vector< int > channel map=std::vector< int >())

**Additional Inherited Members** 

5.301.1 Constructor & Destructor Documentation


The documentation for this class was generated from the following files:

- · mhasndfile.h
- · mhasndfile.cpp

5.302 MHATableLookup::linear\_table\_t Class Reference

Class for interpolation with equidistant x values.

Inheritance diagram for MHATableLookup::linear\_table\_t:

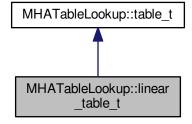

#### **Public Member Functions**

linear\_table\_t (void)

contructor creates an empty linear\_table\_t (p. 799) object.

mha real t lookup (mha real t x) const

look up the y value that is stored for the mesh point where x is lower than or equal to the x value given here.

mha\_real\_t interp (mha\_real\_t x) const

interpolate y value for the given x value.

• ∼linear\_table\_t (void)

destructor

void set\_xmin (mha\_real\_t xmin)

set the x value for the first mesh point.

void add\_entry (mha\_real\_t y)

set the y value for the next mesh point.

void set xmax (mha real t xmax)

this sets the x value for a past-the-end, not added mesh point.

void prepare (void)

prepare computes the x distance of the mesh points based on the values given to set\_xmin, set\_xmax, and the number of times that add\_entry was called.

void clear (void)

clear resets the state of this object to the state directly after construction.

#### **Protected Attributes**

- mha\_real\_t \* vy
- unsigned int len

### **Private Attributes**

- vector< mha\_real\_t > vec\_y
- mha\_real\_t xmin
- mha\_real\_t xmax
- mha\_real\_t scalefac

#### **Additional Inherited Members**

#### 5.302.1 Detailed Description

Class for interpolation with equidistant x values.

This class can be used for linear interpolation tasks where the mesh points are known for equidistant x values.

Before the class can be used for interpolation, it has to be filled with the y values for the mesh points, the x range has to be specified, and when all values are given, the prepare method has to be called so that the object can determine the distance between x values from the range and the number of mesh points given.

Only after prepare has returned, the object may be used for interpolation.

#### 5.302.2 Constructor & Destructor Documentation

```
5.302.2.1 linear_table_t::linear_table_t ( void )
```

contructor creates an empty linear\_table\_t (p. 799) object.

add\_entry, set\_xmin, set\_xmax and prepare methods have to be called before the object can be used to lookup and interpolate values.

```
5.302.2.2 linear_table_t::~linear_table_t ( void )
```

destructor

#### 5.302.3 Member Function Documentation

look up the y value that is stored for the mesh point where x is lower than or equal to the x value given here.

This method does not extrapolate, so for x < xmin, the y value for xmin is returned. For all x greater than the x of the last mesh point, the y value of the last mesh point is returned.

## Precondition

prepare must have been called before lookup may be called.

Implements MHATableLookup::table\_t (p. 804).

interpolate y value for the given x value.

The y values for the neighbouring mesh points are looked up and linearly interpolated. For x values outside the range of mesh points, the y value is extrapolated from the nearest two mesh points.

### Precondition

prepare must have been called before interp may be called.

Implements MHATableLookup::table\_t (p. 804).

```
5.302.3.3 void linear_table_t::set_xmin (
mha_real_t xmin)
```

set the x value for the first mesh point.

Must be called before prepare can be called.

```
5.302.3.4 void linear_table_t::add_entry (
mha real t y )
```

set the y value for the next mesh point.

Must be called at least twice before prepare can be called.

```
5.302.3.5 void linear_table_t::set_xmax (
mha real t xmax )
```

this sets the x value for a past-the-end, not added mesh point.

## Example:

prepare computes the x distance of the mesh points based on the values given to set\_xmin, set\_xmax, and the number of times that add\_entry was called.

### Precondition

set\_xmin, set\_xmax, add\_entry functions must have been called before calling prepare, add entry must have been called at least twice.

Only after this method has been called, interp or lookup may be called.

clear resets the state of this object to the state directly after construction.

mesh entries and x range are deleted.

interp and lookup may not be called after this function has been called unless prepare and before that its precondition methods are called again.

Implements MHATableLookup::table\_t (p. 804).

```
5.302.4 Member Data Documentation
```

```
5.302.4.1 mha_real_t* MHATableLookup::linear_table_t::vy [protected]
5.302.4.2 unsigned int MHATableLookup::linear_table_t::len [protected]
5.302.4.3 vector<mha_real_t> MHATableLookup::linear_table_t::vec_y [private]
5.302.4.4 mha_real_t MHATableLookup::linear_table_t::xmin [private]
5.302.4.5 mha_real_t MHATableLookup::linear_table_t::xmax [private]
```


The documentation for this class was generated from the following files:

**5.302.4.6** mha real tMHATableLookup::linear\_table\_t::scalefac [private]

- mha tablelookup.hh
- mha\_tablelookup.cpp

## 5.303 MHATableLookup::table\_t Class Reference

Inheritance diagram for MHATableLookup::table\_t:

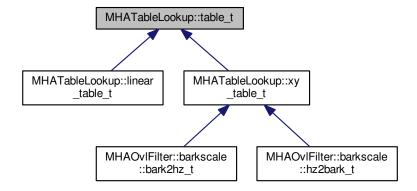

**Public Member Functions** 

```
    table_t (void)
    virtual ~table_t (void)
    virtual mha_real_t lookup (mha_real_t) const =0
    virtual mha real t interp (mha real t) const =0
```

#### **Protected Member Functions**

• virtual void clear (void)=0

```
5.303.1 Constructor & Destructor Documentation
5.303.1.1 table t::table t (
                     void )
5.303.1.2 table_t:: ~table_t (
                     void ) [virtual]
5.303.2 Member Function Documentation
5.303.2.1 virtual mha_real_t MHATableLookup::table_t::lookup (
                     mha_real_t )const [pure virtual]
Implemented in MHATableLookup::xy_table_t (p. 806), and MHATableLookup::linear_ <--
table_t (p. 801).
5.303.2.2 virtual mha real t MHATableLookup::table t::interp (
                     mha_real_t )const [pure virtual]
Implemented in MHATableLookup::xy_table_t (p. 807), and MHATableLookup::linear_ 
table_t (p. 801).
5.303.2.3 virtual void MHATableLookup::table_t::clear (
                     void ) [protected], [pure virtual]
Implemented in MHATableLookup::xy_table_t (p. 807), and MHATableLookup::linear_ <--
```

The documentation for this class was generated from the following files:

mha\_tablelookup.hh


table\_t (p. 803).

mha tablelookup.cpp

## 5.304 MHATableLookup::xy\_table\_t Class Reference

Class for interpolation with non-equidistant x values.

Inheritance diagram for MHATableLookup::xy\_table\_t:

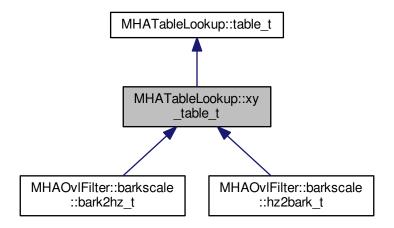

#### **Public Member Functions**

- xy\_table\_t ()
- mha\_real\_t lookup (mha\_real\_t x) const

Return the y-value at the position of the nearest x value below input.

mha\_real\_t interp (mha\_real\_t x) const

Linear interpolation function.

void add\_entry (mha\_real\_t x, mha\_real\_t y)

Add a single x-y pair entry.

- void add\_entry (mha\_real\_t \*pVX, mha\_real\_t \*pVY, unsigned int len)
   Add multiple entries at once.
- void clear ()

Clear the table and transformation functions.

void set\_xfun (float(\*pXFun)(float))

Set transformation function for x values.

void set yfun (float(\*pYFun)(float))

Set transformation function for y values during insertion.

void set\_xyfun (float(\*pYFun)(float, float))

Set transformation function for y values during insertion, based on x and y values.

std::pair< mha\_real\_t, mha\_real\_t > get\_xlimits () const
 returns the min and max x of all mesh points that are stored in the lookup table, i.e.

#### **Private Attributes**

- std::map< mha real t, mha real t > mXY
- float(\* xfun )(float)
- float(\* yfun )(float)
- float(\* xyfun )(float, float)

**Additional Inherited Members** 

5.304.1 Detailed Description

Class for interpolation with non-equidistant x values.

Linear interpolation of the x-y table is performed. A transformation of x and y-values is possible; if a transformation function is provided for the x-values, the same function is applied to the argument of **xy\_table\_t::interp()** (p. 807) and **xy\_table\_t::lookup()** (p. 806). The transformation of y values is applied only during insertion into the table. Two functions for y-transformation can be provided: a simple transformation which depends only on the y values, or a transformation which takes both (non-transformed) x and y value as an argument. The two-argument transformation is applied before the one-argument transformation.

```
5.304.2 Constructor & Destructor Documentation
```

```
5.304.2.1 xy_table_t::xy_table_t ( )
```

5.304.3 Member Function Documentation

Return the y-value at the position of the nearest x value below input.

### **Parameters**

```
x Input value
```

### Returns

y value at nearest x value below input.

Implements MHATableLookup::table\_t (p. 804).

Linear interpolation function.

## **Parameters**

```
x x value
```

#### **Returns**

interpolated y value

Implements MHATableLookup::table\_t (p. 804).

Add a single x-y pair entry.

## **Parameters**

X	x value
У	corresponding y value

Add multiple entries at once.

## **Parameters**

pVX	array of x values
pVY	array of y values
uLength	Length of x and y arrays

Clear the table and transformation functions.

Implements MHATableLookup::table\_t (p. 804).

```
5.304.3.6 void xy_table_t::set_xfun (
float(*)(float) fun )
```

Set transformation function for x values.

## **Parameters**

```
fun Transformation function.
```

Set transformation function for y values during insertion.

#### **Parameters**

```
fun Transformation function.
```

Set transformation function for y values during insertion, based on x and y values.

#### **Parameters**

```
fun Transformation function.
```

```
5.304.3.9 std::pair<mha_real_t,mha_real_t> MHATableLookup::xy_table_t::get_xlimits ( ) const [inline]
```

returns the min and max x of all mesh points that are stored in the lookup table, i.e. after transformation with xfun, if any. Not real-time safe

```
5.304.4 Member Data Documentation
```

```
5.304.4.1 std::map<mha_real_t,mha_real_t> MHATableLookup::xy_table_t::mXY [private]
5.304.4.2 float(* MHATableLookup::xy_table_t::xfun) (float) [private]
```

5.304.4.3 float(\* MHATableLookup::xy\_table\_t::yfun) (float) [private]

**5.304.4.4** float(\* MHATableLookup::xy\_table\_t::xyfun) (float, float) [private]


The documentation for this class was generated from the following files:

- mha tablelookup.hh
- mha\_tablelookup.cpp

5.305 MHAWindow::bartlett\_t Class Reference

Bartlett window.

Inheritance diagram for MHAWindow::bartlett\_t:

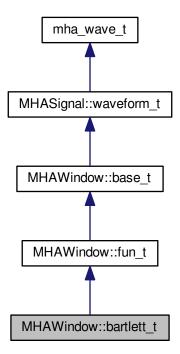

**Public Member Functions** 

bartlett\_t (unsigned int n)

**Additional Inherited Members** 

5.305.1 Detailed Description

Bartlett window.

5.305.2 Constructor & Destructor Documentation

5.305.2.1 MHAWindow::bartlett\_t::bartlett\_t (
unsigned int n ) [inline]


The documentation for this class was generated from the following file:

mha\_windowparser.h

# 5.306 MHAWindow::base\_t Class Reference

Common base for window types.

Inheritance diagram for MHAWindow::base\_t:

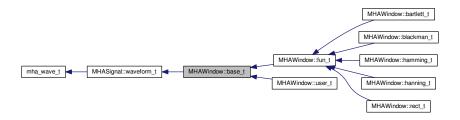

## **Public Member Functions**

base\_t (unsigned int len)

Constructor.

base\_t (const MHAWindow::base\_t &src)

Copy constructor.

void operator() (mha\_wave\_t &) const

Apply window to waveform segment (reference)

void operator() (mha\_wave\_t \*) const

Apply window to waveform segment (pointer)

void ramp\_begin (mha\_wave\_t &) const

Apply a ramp at the begining.

void ramp\_end (mha\_wave\_t &) const

Apply a ramp at the end.

## **Additional Inherited Members**

5.306.1 Detailed Description

Common base for window types.

5.306.2 Constructor & Destructor Documentation

5.306.2.1 MHAWindow::base\_t::base\_t ( unsigned int *len* )

Constructor.

### **Parameters**

```
len Window length in samples.
```

Copy constructor.

#### **Parameters**

```
src | Source to be copied
```

5.306.3 Member Function Documentation

```
5.306.3.1 void MHAWindow::base_t::operator() (
mha_wave_t & s ) const
```

Apply window to waveform segment (reference)

```
5.306.3.2 void MHAWindow::base_t::operator() (
mha_wave_t * s ) const
```

Apply window to waveform segment (pointer)

```
5.306.3.3 void MHAWindow::base_t::ramp_begin ( mha_wave_t & s ) const
```

Apply a ramp at the begining.

```
5.306.3.4 void MHAWindow::base_t::ramp_end (
mha_wave_t & s ) const
```

Apply a ramp at the end.


The documentation for this class was generated from the following files:

- mha\_windowparser.h
- mha\_windowparser.cpp

## 5.307 MHAWindow::blackman\_t Class Reference

Blackman window.

Inheritance diagram for MHAWindow::blackman\_t:

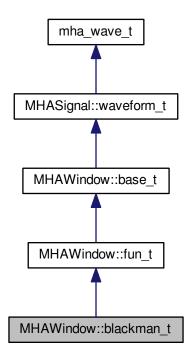

## **Public Member Functions**

blackman\_t (unsigned int n)

**Additional Inherited Members** 

5.307.1 Detailed Description

Blackman window.

5.307.2 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

mha\_windowparser.h

# 5.308 MHAWindow::fun\_t Class Reference

Generic window based on a generator function.

Inheritance diagram for MHAWindow::fun\_t:



### **Public Member Functions**

fun\_t (unsigned int n, float(\*fun)(float), float xmin=-1, float xmax=1, bool min\_← included=true, bool max\_included=false)
 Constructor.

#### **Additional Inherited Members**

#### 5.308.1 Detailed Description

Generic window based on a generator function.

The generator function should return a valid window function in the interval [-1,1].

### 5.308.2 Constructor & Destructor Documentation

### Constructor.

# **Parameters**

n	Window length
fun	Generator function, i.e. MHAWindow::hanning() (p. 119)
xmin	Start value of window, i.e1 for full window or 0 for fade-out ramp.
xmax	Last value of window, i.e. 1 for full window
min_included	Flag if minimum value is included
max_included	Flag if maximum value is included


The documentation for this class was generated from the following files:

- mha\_windowparser.h
- mha\_windowparser.cpp

# 5.309 MHAWindow::hamming\_t Class Reference

Hamming window.

Inheritance diagram for MHAWindow::hamming\_t:

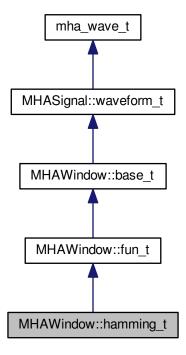

**Public Member Functions** 

• hamming\_t (unsigned int n)

**Additional Inherited Members** 

5.309.1 Detailed Description

Hamming window.

5.309.2 Constructor & Destructor Documentation

5.309.2.1 MHAWindow::hamming\_t::hamming\_t (
unsigned int n ) [inline]


The documentation for this class was generated from the following file:

mha\_windowparser.h

5.310 MHAWindow::hanning\_t Class Reference

von-Hann window

Inheritance diagram for MHAWindow::hanning\_t:

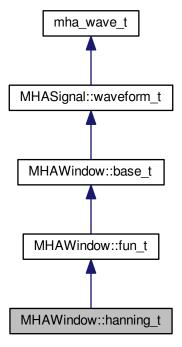

**Public Member Functions** 

• hanning\_t (unsigned int n)

**Additional Inherited Members** 

5.310.1 Detailed Description

von-Hann window

5.310.2 Constructor & Destructor Documentation


The documentation for this class was generated from the following file:

mha\_windowparser.h

5.311 MHAWindow::rect\_t Class Reference

Rectangular window.

Inheritance diagram for MHAWindow::rect\_t:

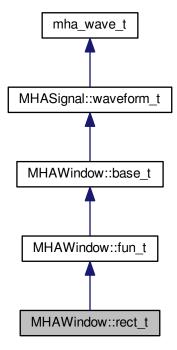

**Public Member Functions** 

rect\_t (unsigned int n)

**Additional Inherited Members** 

5.311.1 Detailed Description

Rectangular window.

5.311.2 Constructor & Destructor Documentation

```
5.311.2.1 MHAWindow::rect_t::rect_t (
unsigned int n ) [inline]
```


The documentation for this class was generated from the following file:

mha\_windowparser.h

# 5.312 MHAWindow::user\_t Class Reference

User defined window.

Inheritance diagram for MHAWindow::user\_t:

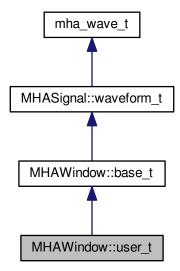

**Public Member Functions** 

user\_t (const std::vector< mha\_real\_t > &wnd)
 Constructor.

**Additional Inherited Members** 

5.312.1 Detailed Description

User defined window.

5.312.2 Constructor & Destructor Documentation

```
5.312.2.1 MHAWindow::user_t::user_t (  {\tt const\ std::vector} < {\tt mha\_real\_t} > \& {\it wnd} \ )
```

Constructor.

**Parameters** 


wnd User defined window

The documentation for this class was generated from the following files:

- mha\_windowparser.h
- mha\_windowparser.cpp

# 5.313 mon\_t Class Reference

Inheritance diagram for mon\_t:

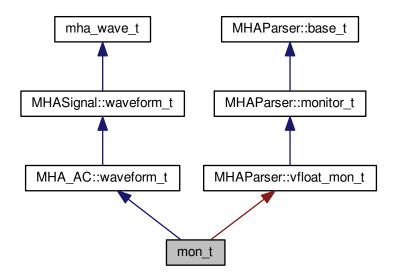

#### **Public Member Functions**

- mon\_t (unsigned int nch, std::string name, algo\_comm\_t ac, std::string base, MHA←
   Parser::parser\_t &p, std::string help)
- void store ()

### **Additional Inherited Members**

# 5.313.1 Constructor & Destructor Documentation

#### **5.313.2** Member Function Documentation


# 5.313.2.1 void mon\_t::store ( )

The documentation for this class was generated from the following file:

## rmslevel.cpp

# 5.314 multibandcompressor::fftfb\_plug\_t Class Reference

Inheritance diagram for multibandcompressor::fftfb\_plug\_t:

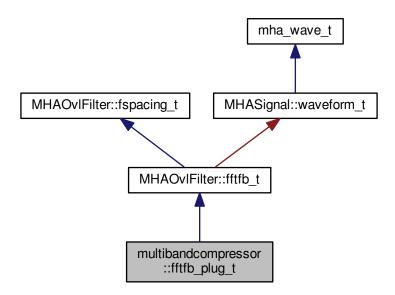

### **Public Member Functions**

- fftfb\_plug\_t (MHAOvIFilter::fftfb\_vars\_t &, const mhaconfig\_t &cfg, algo\_comm\_← t ac, std::string alg)
- void insert ()

# **Private Attributes**

- MHA\_AC::waveform\_t cfv vector of nominal center frequencies / Hz
- MHA\_AC::waveform\_t efv
   vector of edge frequencies / Hz
- MHA\_AC::waveform\_t bwv
   vector of band-weigths (sum of squared fft-bin-weigths)/num\_frames

```
Additional Inherited Members
```

```
5.314.1 Constructor & Destructor Documentation
```

```
5.314.1.1 multibandcompressor::fftfb_plug_t::fftfb_plug_t (

MHAOvIFilter::fftfb_vars_t & vars,

const mhaconfig_t & cfg,

algo_comm_t ac,

std::string alg )
```

```
5.314.2 Member Function Documentation
```

```
5.314.2.1 void multibandcompressor::fftfb_plug_t::insert()
```

5.314.3 Member Data Documentation

```
5.314.3.1 MHA_AC::waveform_t multibandcompressor::fftfb_plug_t::cfv [private]
```

vector of nominal center frequencies / Hz

**5.314.3.2** MHA\_AC::waveform\_t multibandcompressor::fftfb\_plug\_t::efv [private]

vector of edge frequencies / Hz

**5.314.3.3** MHA\_AC::waveform\_t multibandcompressor::fftfb\_plug\_t::bwv [private]


vector of band-weigths (sum of squared fft-bin-weigths)/num\_frames

The documentation for this class was generated from the following file:

## multibandcompressor.cpp

# 5.315 multibandcompressor::interface\_t Class Reference

Inheritance diagram for multibandcompressor::interface\_t:

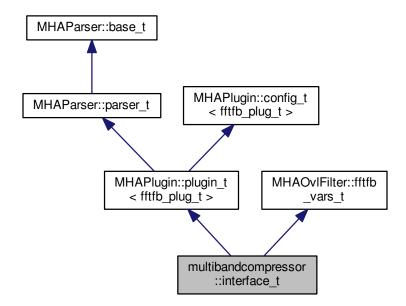

### **Public Member Functions**

- interface\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- void prepare (mhaconfig\_t &)
- void release ()
- mha\_spec\_t \* process (mha\_spec\_t \*)

## **Private Member Functions**

void update\_cfg ()

#### **Private Attributes**

- int num channels
- DynComp::dc\_afterburn\_t burn
- MHAEvents::patchbay\_t< interface\_t > patchbay
- std::string algo
- MHAParser::mhapluginloader\_t plug
- plugin\_signals\_t \* plug\_sigs

**Additional Inherited Members** 

```
5.315.1 Constructor & Destructor Documentation
```

Default values are set and MHA configuration variables registered into the parser.

#### **Parameters**

ac⇔	algorithm communication handle
_	
th	chain name
al	algorithm name

#### 5.315.2 Member Function Documentation

Implements MHAPlugin::plugin\_t < fftfb\_plug\_t > (p. 705).

**5.315.2.2** void multibandcompressor::interface\_t::release() [virtual]

Reimplemented from **MHAPlugin::plugin\_t** < **fftfb\_plug\_t** > (p. 706).

```
5.315.2.3 mha_spec_t * multibandcompressor::interface_t::process ( mha_spec_t * s )
```

5.315.3 Member Data Documentation

**5.315.3.1** int multibandcompressor::interface\_t::num\_channels [private]

**5.315.3.2 DynComp::dc\_afterburn\_t** multibandcompressor::interface\_t::burn [private]

**5.315.3.3 MHAEvents::patchbay\_t<interface\_t> multibandcompressor::interface\_t::patchbay**[private]

```
5.315.3.4 std::string multibandcompressor::interface_t::algo [private]
5.315.3.5 MHAParser::mhapluginloader_t multibandcompressor::interface_t::plug [private]
5.315.3.6 plugin_signals_t* multibandcompressor::interface_t::plug_sigs [private]
```

The documentation for this class was generated from the following file:

- multibandcompressor.cpp
- 5.316 multibandcompressor::plugin\_signals\_t Class Reference

**Public Member Functions** 

- plugin\_signals\_t (unsigned int channels, unsigned int bands)
- void update\_levels (MHAOvIFilter::fftfb\_t \*, mha\_spec\_t \*s\_in)
- void apply\_gains (MHAOvlFilter::fftfb\_t \*, DynComp::dc\_afterburn\_t &burn, mha\_←
   spec\_t \*s\_out)

**Public Attributes** 

mha\_wave\_t \* plug\_output

**Private Attributes** 

- MHASignal::waveform\_t plug\_level
- MHASignal::waveform\_t gain
- 5.316.1 Constructor & Destructor Documentation
- 5.316.2 Member Function Documentation

5.316.3 Member Data Documentation

**5.316.3.1 MHASignal::waveform\_t** multibandcompressor::plugin\_signals\_t::plug\_level [private]

**5.316.3.2** MHASignal::waveform\_t multibandcompressor::plugin\_signals\_t::gain [private]


5.316.3.3 mha\_wave\_t\* multibandcompressor::plugin\_signals\_t::plug\_output

The documentation for this class was generated from the following file:

### multibandcompressor.cpp

# 5.317 nlms\_t Class Reference

Inheritance diagram for nlms\_t:

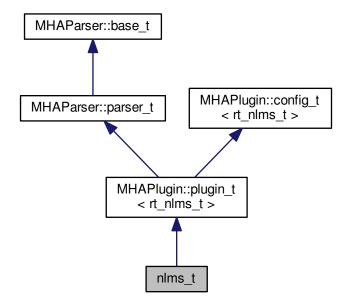

#### **Public Member Functions**

```
nlms_t (algo_comm_t, const char *, const char *)
void prepare (mhaconfig_t &)
void release ()
```

mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Private Member Functions**

• void update ()

#### **Private Attributes**

```
MHAParser::float_t rho
MHAParser::float_t c
MHAParser::int_t ntaps
MHAParser::string_t name_u
MHAParser::string_t name_d
MHAParser::kw_t normtype
MHAParser::kw_t estimtype
MHAParser::float_t lambda_smoothing_power
MHAParser::string_t name_e
MHAParser::string_t name_f
MHAParser::int_t n_no_update
std::string_algo
```

MHAEvents::patchbay\_t< nlms\_t > patchbay

Additional Inherited Members

```
5.317.1 Constructor & Destructor Documentation
```

5.317.2 Member Function Documentation

Implements  $MHAPlugin::plugin_t < rt_nlms_t > (p. 705)$ .


```
5.317.2.2 void nlms_t::release() [virtual]
Reimplemented from MHAPlugin::plugin_t< rt_nlms_t > (p. 706).
5.317.2.3 mha wave t * nlms t::process (
                    mha wave t * s)
5.317.2.4 void nlms_t::update() [private]
5.317.3 Member Data Documentation
5.317.3.1 MHAParser::float_t nlms_t::rho [private]
5.317.3.2 MHAParser::float_t nlms_t::c [private]
5.317.3.3 MHAParser::int_t nlms_t::ntaps [private]
5.317.3.4 MHAParser::string_t nlms_t::name_u [private]
5.317.3.5 MHAParser::string t nlms t::name d [private]
5.317.3.6 MHAParser::kw_t nlms_t::normtype [private]
5.317.3.7 MHAParser::kw_t nlms_t::estimtype [private]
5.317.3.8 MHAParser::float_t nlms_t::lambda_smoothing_power [private]
5.317.3.9 MHAParser::string_t nlms_t::name_e [private]
5.317.3.10 MHAParser::string_t nlms_t::name_f [private]
5.317.3.11 MHAParser::int_t nlms_t::n_no_update [private]
5.317.3.12 std::string nlms_t::algo [private]
5.317.3.13 MHAEvents::patchbay_t<nlms_t> nlms_t::patchbay [private]
```

The documentation for this class was generated from the following file:

## nlms\_wave.cpp

# 5.318 noise\_t Class Reference

# Inheritance diagram for noise\_t:

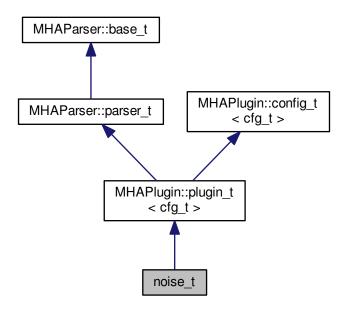

### **Public Member Functions**

- noise\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)
- void update\_cfg ()

### **Private Attributes**

- MHAParser::float\_t lev
- MHAParser::kw\_t mode
- MHAParser::float\_t frozennoise\_length
- MHAEvents::patchbay\_t< noise\_t > patchbay

**Additional Inherited Members** 


```
5.318.1 Constructor & Destructor Documentation
5.318.1.1 noise_t::noise_t (
                     const algo_comm_t & iac,
                     const std::string &,
                     const std::string & )
5.318.2 Member Function Documentation
5.318.2.1 mha_wave_t * noise_t::process (
                     mha_wave_t * s )
5.318.2.2 mha_spec_t * noise_t::process (
                     mha\_spec\_t * s)
5.318.2.3 void noise_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < cfg_t > (p.705).
5.318.2.4 void noise_t::update_cfg ( )
5.318.3 Member Data Documentation
5.318.3.1 MHAParser::float_t noise_t::lev [private]
5.318.3.2 MHAParser::kw_t noise_t::mode [private]
5.318.3.3 MHAParser::float_t noise_t::frozennoise_length [private]
5.318.3.4 MHAEvents::patchbay_t<noise_t> noise_t::patchbay [private]
```

The documentation for this class was generated from the following file:

### noise.cpp

# 5.319 noisePowProposedScale::interface\_t Class Reference

Inheritance diagram for noisePowProposedScale::interface\_t:

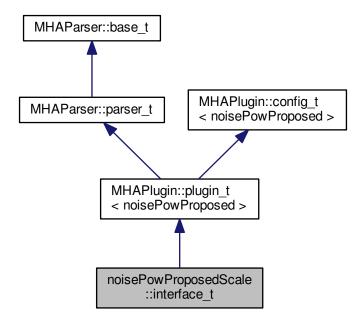

# **Public Member Functions**

- interface\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)

## **Private Member Functions**

void update\_cfg ()

#### **Private Attributes**

- MHAParser::float\_t alphaPH1mean
- MHAParser::float t alphaPSD
- MHAParser::float\_t q
- MHAParser::float\_t xiOptDb
- std::string name
- MHAEvents::patchbay\_t< interface\_t > patchbay

```
Additional Inherited Members
```

```
5.319.1 Constructor & Destructor Documentation
5.319.1.1 noisePowProposedScale::interface t:interface t(
                     const algo comm t & iac,
                     const std::string & ,
                     const std::string & iname )
5.319.2 Member Function Documentation
5.319.2.1 mha_spec_t * noisePowProposedScale::interface_t::process (
                     mha\_spec\_t * s)
5.319.2.2 void noisePowProposedScale::interface_t::prepare (
                     mhaconfig t&cf) [virtual]
Implements MHAPlugin::plugin_t< noisePowProposed > (p. 705).
5.319.2.3 void noisePowProposedScale::interface_t::update_cfg (
                     void ) [private]
5.319.3 Member Data Documentation
5.319.3.1 MHAParser::float_t noisePowProposedScale::interface_t::alphaPH1mean [private]
5.319.3.2 MHAParser::float t noisePowProposedScale::interface t::alphaPSD [private]
5.319.3.3 MHAParser::float_t noisePowProposedScale::interface_t::q [private]
5.319.3.4 MHAParser::float t noisePowProposedScale::interface_t::xiOptDb [private]
5.319.3.5 std::string noisePowProposedScale::interface_t::name [private]
5.319.3.6 MHAEvents::patchbay t<interface t> noisePowProposedScale::interface_t::patchbay
          [private]
```

The documentation for this class was generated from the following file:

## noisePowProposedScale.cpp

# 5.320 noisePowProposedScale::noisePowProposed Class Reference

#### **Public Member Functions**

- noisePowProposed (const mhaconfig\_t &cf, algo\_comm\_t ac, const std::string &name, float alphaPH1mean, float alphaPSD, float q, float xiOptDb)
- void process (mha\_spec\_t \*noisyDftFrame)
- void insert ()

#### **Private Attributes**

- MHASignal::waveform\_t noisyPer
- MHASignal::waveform t PH1mean
- MHA\_AC::waveform\_t noisePow
- MHA\_AC::waveform\_t inputPow
- MHA AC::waveform t snrPost1Debug
- MHA\_AC::waveform\_t GLRDebug
- MHA\_AC::waveform\_t PH1Debug
- MHA\_AC::waveform\_t estimateDebug
- MHA\_AC::spectrum\_t inputSpec
- float alphaPH1mean\_
- float alphaPSD\_
- float priorFact
- float xiOpt
- float logGLRFact
- float GLRexp
- int frameno

## 5.320.1 Constructor & Destructor Documentation

#### 5.320.2 Member Function Documentation

```
5.320.2.1 void noisePowProposedScale::noisePowProposed::process ( mha_spec_t * noisyDftFrame )
```


5.320.2.2	void noisePowProposedScale::noisePowProposed::insert( ) [inline]
5.320.3 N	lember Data Documentation
5.320.3.1	<b>MHASignal::waveform_t</b> noisePowProposedScale::noisePowProposed::noisyPer [private]
5.320.3.2	MHASignal::waveform_t noisePowProposedScale::noisePowProposed::PH1mean [private]
5.320.3.3	<pre>MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::noisePow [private]</pre>
5.320.3.4	<pre>MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::inputPow [private]</pre>
5.320.3.5	$\begin{tabular}{ll} MHA\_AC::waveform\_t\ noisePowProposedScale::noisePowProposed::snrPost1Debug\ [private] \end{tabular}$
5.320.3.6	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::GLRDebug [private]
5.320.3.7	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::PH1Debug [private]
5.320.3.8	$\begin{tabular}{ll} MHA\_AC::waveform\_t\ noisePowProposedScale::noisePowProposed::estimateDebug\ [private] \end{tabular}$
5.320.3.9	MHA_AC::spectrum_t noisePowProposedScale::noisePowProposed::inputSpec [private]
5.320.3.10	float noisePowProposedScale::noisePowProposed::alphaPH1mean_ [private]
5.320.3.11	float noisePowProposedScale::noisePowProposed::alphaPSD_ [private]
5.320.3.12	float noisePowProposedScale::noisePowProposed::priorFact [private]
5.320.3.13	float noisePowProposedScale::noisePowProposed::xiOpt [private]
5.320.3.14	float noisePowProposedScale::noisePowProposed::logGLRFact [private]
5.320.3.15	float noisePowProposedScale::noisePowProposed::GLRexp [private]
5.320.3.16	<pre>int noisePowProposedScale::noisePowProposed::frameno [private]</pre>

The documentation for this class was generated from the following file:

# noisePowProposedScale.cpp

# 5.321 overlapadd::overlapadd\_if\_t Class Reference

Inheritance diagram for overlapadd::overlapadd\_if\_t:

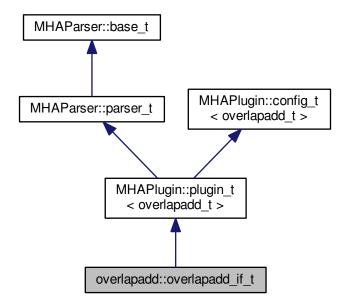

#### **Public Member Functions**

- overlapadd\_if\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- ∼overlapadd\_if\_t ()
- void prepare (mhaconfig\_t &)
- void release ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

### **Private Member Functions**

• void update ()

# **Private Attributes**

- MHAEvents::patchbay\_t< overlapadd\_if\_t > patchbay
- MHAParser::int\_t nfft

FFT length to be used, zero-padding is FFT length-wndlength.

MHAParser::int\_t nwnd

Window length to be used (overlap is 1-fragsize/wndlength)

```
    MHAParser::float_t wndpos
```

Relative position of zero padding (0 end, 0.5 center, 1 start)

- MHAParser::window t window
- MHAParser::float\_t wndexp
- MHAParser::window\_t zerowindow
- MHAParser::mhapluginloader\_t plugloader
- MHAParser::float\_mon\_t prescale
- MHAParser::float mon t postscale
- std::string algo
- mhaconfig\_t cf\_in
- · mhaconfig t cf out

### **Additional Inherited Members**

```
5.321.1 Constructor & Destructor Documentation
```

- 5.321.1.2 overlapadd::overlapadd\_if\_t::~overlapadd\_if\_t ( )
- 5.321.2 Member Function Documentation

Implements MHAPlugin::plugin\_t< overlapadd\_t > (p. 705).

**5.321.2.2** void overlapadd::overlapadd\_if\_t::release() [virtual]

Reimplemented from MHAPlugin::plugin\_t< overlapadd\_t > (p. 706).

```
5.321.2.3 mha_wave_t * overlapadd::overlapadd_if_t::process ( mha_wave_t * wave_in )
```

- **5.321.2.4** void overlapadd::overlapadd\_if\_t::update( ) [private]
- 5.321.3 Member Data Documentation
- **5.321.3.1 MHAE**vents::patchbay\_t<overlapadd\_if\_t> overlapadd::overlapadd\_if\_t::patchbay [private]
- **5.321.3.2** MHAParser::int\_t overlapadd::overlapadd\_if\_t::nfft [private]

FFT length to be used, zero-padding is FFT length-wndlength.

```
5.321.3.3 MHAParser::int toverlapadd::overlapadd if t::nwnd [private]
Window length to be used (overlap is 1-fragsize/wndlength)
5.321.3.4 MHAParser::float t overlapadd::overlapadd_if_t::wndpos [private]
Relative position of zero padding (0 end, 0.5 center, 1 start)
5.321.3.5 MHAParser::window toverlapadd::overlapadd_if_t::window [private]
5.321.3.6
         MHAParser::float toverlapadd::overlapadd_if_t::wndexp [private]
5.321.3.7 MHAParser::window t overlapadd::overlapadd_if_t::zerowindow [private]
5.321.3.8 MHAParser::mhapluginloader toverlapadd::overlapadd_if_t::plugloader [private]
5.321.3.9 MHAParser::float_mon_t overlapadd::overlapadd_if_t::prescale [private]
5.321.3.10 MHAParser::float_mon_t overlapadd::overlapadd_if_t::postscale [private]
5.321.3.11 std::string overlapadd::overlapadd_if_t::algo [private]
5.321.3.12 mhaconfig toverlapadd::overlapadd if t::cf in [private]
5.321.3.13 mhaconfig toverlapadd::overlapadd if t::cf out [private]
```

The documentation for this class was generated from the following file:

### overlapadd.cpp

#### 5.322 overlapadd::overlapadd t Class Reference

**Public Member Functions** 

- overlapadd\_t (mhaconfig\_t spar\_in, mhaconfig\_t spar\_out, float wexp, float wnd-pos, const MHAParser::window\_t &window, const MHAParser::window\_t &zerowindow, float &prescale\_fac, float &postscale\_fac)
- ∼overlapadd\_t ()
- mha\_spec\_t \* ola1 (mha\_wave\_t \*)
- mha\_wave\_t \* ola2 (mha\_spec\_t \*)

#### **Private Attributes**

```
 mha fft t fft

    MHAWindow::base_t prewnd

    MHAWindow::base_t postwnd

    MHASignal::waveform t wave in1

    MHASignal::waveform_t wave_out1

    MHASignal::spectrum t spec in

    MHASignal::waveform_t calc_out

    MHASignal::waveform_t out_buf

    MHASignal::waveform_t write_buf

   • unsigned int n_zero
   unsigned int n_pad1

    unsigned int n_pad2

5.322.1 Constructor & Destructor Documentation
5.322.1.1 overlapadd::overlapadd_t::overlapadd_t (
                      mhaconfig t spar_in,
                      mhaconfig_t spar_out,
                      float wexp,
                      float wndpos,
                      const MHAParser::window_t & window,
                      const MHAParser::window t & zerowindow,
                      float & prescale_fac,
                      float & postscale_fac )
5.322.1.2 overlapadd::overlapadd_t::~overlapadd_t ( )
5.322.2 Member Function Documentation
5.322.2.1 mha spec t * overlapadd::overlapadd_t::ola1 (
                      mha_wave_t * s )
5.322.2.2 mha_wave_t * overlapadd::overlapadd_t::ola2 (
                      mha\_spec\_t * s)
5.322.3 Member Data Documentation
5.322.3.1 mha_fft_t overlapadd::overlapadd_t::fft [private]
```

**5.322.3.2** MHAWindow::base\_t overlapadd::overlapadd\_t::prewnd [private]

**5.322.3.3** MHAWindow::base\_t overlapadd::overlapadd\_t::postwnd [private]


```
5.322.3.4 MHASignal::waveform_t overlapadd::overlapadd_t::wave_in1 [private]
5.322.3.5 MHASignal::waveform_t overlapadd::overlapadd_t::wave_out1 [private]
5.322.3.6 MHASignal::spectrum_t overlapadd::overlapadd_t::spec_in [private]
5.322.3.7 MHASignal::waveform toverlapadd::overlapadd t::calc out [private]
5.322.3.8 MHASignal::waveform_t overlapadd::overlapadd_t::out_buf [private]
5.322.3.9 MHASignal::waveform_t overlapadd::overlapadd_t::write_buf [private]
5.322.3.10 unsigned int overlapadd::overlapadd_t::n_zero [private]
5.322.3.11 unsigned int overlapadd::overlapadd_t::n_pad1 [private]
5.322.3.12 unsigned int overlapadd::overlapadd_t::n_pad2 [private]
```

The documentation for this class was generated from the following file:

# overlapadd.cpp

# 5.323 parser\_int\_dyn Class Reference

Inheritance diagram for parser\_int\_dyn:

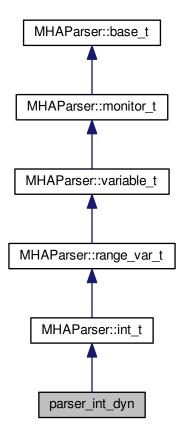

### **Public Member Functions**

- parser\_int\_dyn (const std::string &help\_text, const std::string &initial\_value, const std
   ::string &range)
- void set\_max\_angle\_ind (unsigned int max\_ind)

### **Additional Inherited Members**

### 5.323.1 Constructor & Destructor Documentation

### 5.323.2 Member Function Documentation


The documentation for this class was generated from the following file:

### · steerbf.h

# 5.324 plingploing::if\_t Class Reference

Plugin class of the plingploing music generator.

Inheritance diagram for plingploing::if\_t:

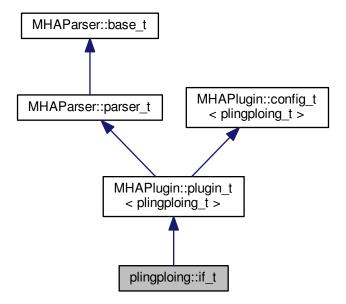

#### **Public Member Functions**

- if\_t (algo\_comm\_t, const char \*, const char \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &cf)

# **Private Member Functions**

• void update ()

### **Private Attributes**

- MHAEvents::patchbay\_t< if\_t > patchbay
- MHAParser::float\_t level

Output level in dB SPL.

MHAParser::float\_t pitch

Bass pitch in Hz.

MHAParser::float\_t fun1\_key
 Key1.

• MHAParser::float\_t fun1\_range Range1.

• MHAParser::float\_t fun2\_key

Kev 2.

• MHAParser::float\_t fun2\_range Range 2.

MHAParser::float\_t bpm

Speed in beats per minute (bpm)

MHAParser::float\_t minlen

Minimum note length in beats.

MHAParser::float\_t maxlen

Maximum note length in beats.

MHAParser::float\_t bassmod

Bass key modulation depth.

MHAParser::float\_t bassperiod

Bass key modulation period.

### **Additional Inherited Members**

### 5.324.1 Detailed Description

Plugin class of the plingploing music generator.

# 5.324.2 Constructor & Destructor Documentation

5.324.3 Member Function Documentation

Implements MHAPlugin::plugin\_t < plingploing\_t > (p. 705).

mhaconfig\_t & cf ) [virtual]

```
5.324.3.3 void plingploing::if_t::update() [private]
5.324.4 Member Data Documentation
5.324.4.1 MHAEvents::patchbay_t<if_t> plingploing::if_t::patchbay [private]
5.324.4.2 MHAParser::float_t plingploing::if_t::level [private]
Output level in dB SPL.
5.324.4.3 MHAParser::float_t plingploing::if_t::pitch [private]
Bass pitch in Hz.
5.324.4.4 MHAParser::float_t plingploing::if_t::fun1_key [private]
Key1.
5.324.4.5 MHAParser::float_t plingploing::if_t::fun1_range [private]
Range1.
5.324.4.6 MHAParser::float_t plingploing::if_t::fun2_key [private]
Key 2.
5.324.4.7 MHAParser::float_t plingploing::if_t::fun2_range [private]
Range 2.
5.324.4.8 MHAParser::float_t plingploing::if_t::bpm [private]
Speed in beats per minute (bpm)
5.324.4.9 MHAParser::float_t plingploing::if_t::minlen [private]
Minimum note length in beats.
5.324.4.10 MHAParser::float_t plingploing::if_t::maxlen [private]
Maximum note length in beats.
```

**5.324.4.11** MHAParser::float\_t plingploing::if\_t::bassmod [private]

Bass key modulation depth.

**5.324.4.12** MHAParser::float\_t plingploing::if\_t::bassperiod [private]

Bass key modulation period.

The documentation for this class was generated from the following file:

plingploing.cpp

5.325 plingploing::plingploing\_t Class Reference

Run-time configuration of the plingploing music generator.

#### **Public Member Functions**

- plingploing\_t (mhaconfig\_t, mha\_real\_t level, mha\_real\_t pitch, mha\_real\_t k1, mha\_real\_t k2, mha\_real\_t i1, mha\_real\_t i2, mha\_real\_t bpm, mha\_real\_t minlen, mha\_real\_t maxlen, mha\_real\_t bassmod, mha\_real\_t bassperiod)
- void process (mha\_wave\_t \*)

#### **Private Attributes**

- · mhaconfig\_t cf
- mha\_real\_t pitch\_
- unsigned int bt
- unsigned int t
- unsigned int len
- mha\_real\_t dur\_
- mha\_real\_t minlen\_
- mha\_real\_t maxlen\_
- mha\_real\_t bass
- · mha real t freq
- mha\_real\_t fun1\_key
- mha\_real\_t fun1\_range
- · mha real t fun1
- mha\_real\_t fun2
- mha\_real\_t fun2\_key
- mha\_real\_t fun2\_range
- mha\_real\_t dist
- mha real t dist1
- mha\_real\_t alph
- · mha real trms
- mha\_real\_t bassmod\_
- mha\_real\_t bassperiod\_
- MHAWindow::hanning t hann1
- MHAWindow::hanning\_t hann2
- mha\_real\_t level

#### 5.325.1 Detailed Description

Run-time configuration of the plingploing music generator.

```
5.325.2 Constructor & Destructor Documentation
5.325.2.1
         plingploing::plingploing t::plingploing t (
                      mhaconfig_t c,
                      mha_real_t level,
                      mha_real_t pitch,
                      mha real t k1,
                      mha real t k2,
                      mha real t i1,
                      mha_real_t i2,
                      mha real t bpm,
                      mha_real_t minlen,
                      mha real t maxlen,
                      mha_real_t bassmod,
                      mha_real_t bassperiod )
5.325.3 Member Function Documentation
5.325.3.1
         void plingploing::plingploing_t::process (
                      mha_wave_t * s )
5.325.4 Member Data Documentation
5.325.4.1
          mhaconfig_t plingploing::plingploing_t::cf [private]
5.325.4.2
         mha real t plingploing::plingploing_t::pitch_ [private]
5.325.4.3
         unsigned int plingploing::plingploing_t::bt [private]
5.325.4.4
         unsigned int plingploing::plingploing_t::t [private]
5.325.4.5
          unsigned int plingploing::plingploing_t::len [private]
         mha_real_t plingploing::plingploing_t::dur_ [private]
5.325.4.6
5.325.4.7 mha real t plingploing::plingploing t::minlen [private]
5.325.4.8 mha_real_t plingploing::plingploing_t::maxlen_ [private]
5.325.4.9 mha_real_t plingploing::plingploing_t::bass [private]
```


```
5.325.4.10
          mha_real_t plingploing::plingploing_t::freq [private]
5.325.4.11
          mha real t plingploing::plingploing t::fun1 key [private]
5.325.4.12 mha_real_t plingploing::plingploing_t::fun1_range [private]
5.325.4.13
          mha_real_t plingploing::plingploing_t::fun1 [private]
5.325.4.14 mha_real_t plingploing::plingploing_t::fun2 [private]
5.325.4.15 mha_real_t plingploing::plingploing_t::fun2_key [private]
5.325.4.16 mha_real_t plingploing::plingploing_t::fun2_range [private]
5.325.4.17
          mha_real_t plingploing::plingploing_t::dist [private]
5.325.4.18 mha_real_t plingploing::plingploing_t::dist1 [private]
5.325.4.19 mha_real_t plingploing::plingploing_t::alph [private]
5.325.4.20 mha_real_t plingploing::plingploing_t::rms [private]
5.325.4.21
          mha real t plingploing::plingploing_t::bassmod_ [private]
5.325.4.22
          mha_real_t plingploing::plingploing_t::bassperiod_ [private]
5.325.4.23
          MHAWindow::hanning t plingploing::plingploing_t::hann1 [private]
5.325.4.24
          MHAWindow::hanning_t plingploing::plingploing_t::hann2 [private]
5.325.4.25
          mha_real_t plingploing::plingploing_t::level [private]
```

The documentation for this class was generated from the following file:

### plingploing.cpp

### 5.326 plug\_t Class Reference

Inheritance diagram for plug\_t:

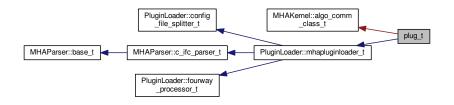

#### **Public Member Functions**

```
    plug_t (const std::string &libname, const std::string &chain, const std::string &algo)
    ~plug_t () throw ()
    MHAProc_wave2wave_t get_process_wave ()
```

- void \* get\_handle ()
- algo\_comm\_t get\_ac ()

# **Additional Inherited Members**

```
5.326.1 Constructor & Destructor Documentation
```


MHAProc\_wave2spec\_t get\_process\_spec ()

The documentation for this class was generated from the following file:

# · analysispath.cpp

# 5.327 plugin\_interface\_t Class Reference

Inheritance diagram for plugin\_interface\_t:

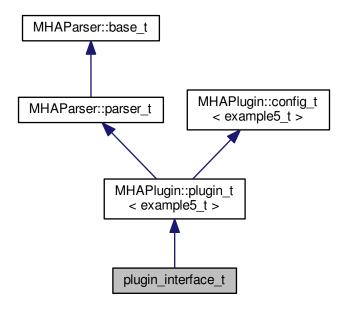

# **Public Member Functions**

- plugin\_interface\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)

# **Private Member Functions**

void update\_cfg ()

### **Private Attributes**

- MHAParser::int\_t scale\_ch
- MHAParser::float\_t factor
- MHAEvents::patchbay\_t< plugin\_interface\_t > patchbay

**Additional Inherited Members** 

```
5.327.1 Constructor & Destructor Documentation
5.327.1.1 plugin_interface_t::plugin_interface_t (
                      const algo_comm_t & iac,
                      const std::string & .
                      const std::string & )
5.327.2 Member Function Documentation
5.327.2.1 mha spec t * plugin_interface_t::process (
                      mha_spec_t * spec )
5.327.2.2 void plugin_interface_t::prepare (
                      mhaconfig_t & tfcfg ) [virtual]
Implements MHAPlugin::plugin_t < example5_t > (p. 705).
5.327.2.3 void plugin_interface_t::update_cfg( ) [private]
5.327.3 Member Data Documentation
5.327.3.1 MHAParser::int_t plugin_interface_t::scale_ch [private]
5.327.3.2 MHAParser::float_t plugin_interface_t::factor [private]
5.327.3.3 MHAEvents::patchbay_t<plugin_interface_t> plugin_interface_t::patchbay
          [private]
```

The documentation for this class was generated from the following file:

example5.cpp

# 5.328 pluginbrowser\_t Class Reference

**Public Member Functions** 

- pluginbrowser t()
- void get\_paths ()
- plugindescription\_t scan\_plugin (const std::string &name)
- void add plugins ()
- void clear plugins ()
- void scan\_plugins ()
- void add\_plugin (const std::string &name)
- std::list< plugindescription\_t > get\_plugins () const

#### **Private Attributes**

```
    std::string plugin_extension
```

- std::list< std::string > library\_paths
- std::list< plugindescription\_t > plugins
- std::map< std::string, pluginloader\_t \* > p

```
5.328.1 Constructor & Destructor Documentation
5.328.1.1
          pluginbrowser_t::pluginbrowser_t ( )
5.328.2 Member Function Documentation
5.328.2.1
          void pluginbrowser_t::get_paths ( )
5.328.2.2 plugindescription_t pluginbrowser_t::scan_plugin (
                      const std::string & name )
5.328.2.3 void pluginbrowser_t::add_plugins ( )
5.328.2.4
        void pluginbrowser_t::clear_plugins ( )
5.328.2.5 void pluginbrowser_t::scan_plugins ( )
5.328.2.6 void pluginbrowser_t::add_plugin (
                       const std::string & name )
5.328.2.7 std::list<plugindescription_t> pluginbrowser_t::get_plugins( ) const [inline]
5.328.3 Member Data Documentation
5.328.3.1
          std::string pluginbrowser_t::plugin_extension [private]
5.328.3.2
         std::list<std::string> pluginbrowser_t::library_paths [private]
5.328.3.3 std::list<plugindescription_t> pluginbrowser_t::plugins [private]
5.328.3.4 std::map<std::string,pluginloader_t*> pluginbrowser_t::p [private]
```

The documentation for this class was generated from the following files:

- pluginbrowser.h
- pluginbrowser.cpp

# 5.329 plugindescription\_t Class Reference

### **Public Attributes**

- std::string name
- std::string fullname
- std::string documentation
- std::vector< std::string > categories
- bool wave2wave
- bool wave2spec
- bool spec2wave
- bool spec2spec
- std::vector< std::string > query\_cmds
- std::map< std::string, std::string > queries

5.329.1	Member Data Documenta	tion
J.JZJ. I	Welliber Data Documenta	HOH


- 5.329.1.1 std::string plugindescription\_t::name
- 5.329.1.2 std::string plugindescription\_t::fullname
- 5.329.1.3 std::string plugindescription\_t::documentation
- 5.329.1.4 std::vector<std::string> plugindescription\_t::categories
- 5.329.1.5 bool plugindescription\_t::wave2wave
- 5.329.1.6 bool plugindescription\_t::wave2spec
- 5.329.1.7 bool plugindescription t::spec2wave
- 5.329.1.8 bool plugindescription\_t::spec2spec
- 5.329.1.9 std::vector<std::string> plugindescription\_t::query\_cmds
- 5.329.1.10 std::map<std::string,std::string> plugindescription\_t::queries

The documentation for this class was generated from the following file:

## · pluginbrowser.h

# 5.330 PluginLoader::config\_file\_splitter\_t Class Reference

Inheritance diagram for PluginLoader::config\_file\_splitter\_t:

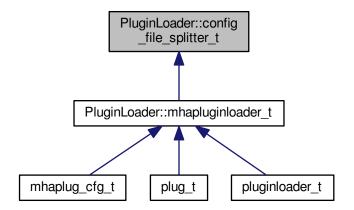

### **Public Member Functions**

- config\_file\_splitter\_t (const std::string &name)
- const std::string & get\_configname () const
- const std::string & get\_libname () const
- const std::string & get\_origname () const
- const std::string & get\_configfile () const

### **Private Attributes**

- std::string libname
- std::string configname
- std::string origname
- std::string configfile

## 5.330.1 Constructor & Destructor Documentation

- 5.330.1.1 PluginLoader::config\_file\_splitter\_t ( const std::string & name )
- 5.330.2 Member Function Documentation

```
5.330.2.1
          const std::string& PluginLoader::config file splitter t::get configname ( ) const
           [inline]
5.330.2.2
          const std::string& PluginLoader::config_file_splitter_t::get_libname( ) const [inline]
5.330.2.3
          const std::string& PluginLoader::config file splitter t::get origname( ) const [inline]
5.330.2.4
          const std::string& PluginLoader::config_file_splitter_t::get_configfile( ) const [inline]
5.330.3 Member Data Documentation
5.330.3.1
          std::string PluginLoader::config_file_splitter_t::libname [private]
5.330.3.2
          std::string PluginLoader::config file splitter t::configname [private]
5.330.3.3
          std::string PluginLoader::config_file_splitter_t::origname [private]
          std::string PluginLoader::config_file_splitter_t::configfile [private]
```


The documentation for this class was generated from the following files:

- · mhapluginloader.h
- mhapluginloader.cpp

## 5.331 PluginLoader::fourway\_processor\_t Class Reference

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

Inheritance diagram for PluginLoader::fourway\_processor\_t:

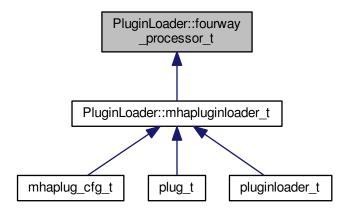

**Public Member Functions** 

- virtual void process (mha\_wave\_t \*s\_in, mha\_wave\_t \*\*s\_out)=0
   Pure waveform processing.
- virtual void **process** (**mha\_spec\_t** \*s\_in, **mha\_spec\_t** \*\*s\_out)=0 *Pure spectrum processing.*
- virtual void **process** (**mha\_wave\_t** \*s\_in, **mha\_spec\_t** \*\*s\_out)=0

  Signal processing with domain transformation from waveform to spectrum.
- virtual void **process** (**mha\_spec\_t** \*s\_in, **mha\_wave\_t** \*\*s\_out)=0

  Signal processing with domain transformation from spectrum to waveform.
- virtual void prepare (mhaconfig\_t &settings)=0
   Prepares the processor for signal processing.
- virtual void release ()=0

Resources allocated for signal processing in **fourway\_processor\_t::prepare** (p. 855) are released here in **fourway\_processor\_t::release** (p. 855).

- virtual std::string **parse** (const std::string &query)=0

  Parser interface.
- virtual ~fourway\_processor\_t ()

Classes with virtual methods need virtual destructor.

### 5.331.1 Detailed Description

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

For supporting different output domains for the same input domain, the processing methods are overloaded with respect to input domain and output domain.

```
5.331.2 Constructor & Destructor Documentation
```

```
5.331.2.1 virtual PluginLoader::fourway_processor_t::~fourway_processor_t() [inline], [virtual]
```

Classes with virtual methods need virtual destructor.

This destructor is empty.

### 5.331.3 Member Function Documentation

Pure waveform processing.

#### **Parameters**

s_in	input waveform signal
s_out	output waveform signal

Implemented in PluginLoader::mhapluginloader\_t (p. 858).

Pure spectrum processing.

### **Parameters**

s_in	input spectrum signal
s_out	output spectrum signal

Implemented in PluginLoader::mhapluginloader\_t (p. 858).

Signal processing with domain transformation from waveform to spectrum.

### **Parameters**

s_in	input waveform signal
s_out	output spectrum signal

Implemented in **PluginLoader::mhapluginloader\_t** (p. 858).

Signal processing with domain transformation from spectrum to waveform.

#### **Parameters**

s_in	input spectrum signal
s_out	output waveform signal

Implemented in **PluginLoader::mhapluginloader\_t** (p. 858).

Prepares the processor for signal processing.

#### **Parameters**

settings	domain and dimensions of the signal. The contents of settings may be modified
	by the prepare implementation. Upon calling fourway_processor_t::prepare
	(p. 855), settings reflects domain and dimensions of the input signal. When
	fourway_processor_t::prepare (p. 855) returns, settings reflects domain and
	dimensions of the output signal.

Implemented in **PluginLoader::mhapluginloader\_t** (p. 858).

```
5.331.3.6 virtual void PluginLoader::fourway processor t::release() [pure virtual]
```

Resources allocated for signal processing in **fourway\_processor\_t::prepare** (p. 855) are released here in **fourway\_processor\_t::release** (p. 855).

Implemented in PluginLoader::mhapluginloader\_t (p. 858).

Parser interface.


Implemented in PluginLoader::mhapluginloader\_t (p. 858).

The documentation for this class was generated from the following file:

## mhapluginloader.h

## 5.332 PluginLoader::mhapluginloader\_t Class Reference

Inheritance diagram for PluginLoader::mhapluginloader\_t:

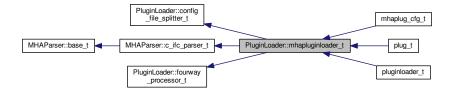

#### **Public Member Functions**

- std::string **parse** (const std::string &str)
- mhapluginloader\_t (algo\_comm\_t iac, const std::string &libname, bool check\_← version=true)

Loads and initializes mha plugin and establishes interface.

- ~mhapluginloader t () throw ()
- bool has process (mha domain t in, mha domain t out) const
- bool has parser () const
- mha\_domain\_t input\_domain () const
- mha\_domain\_t output\_domain () const
- void prepare (mhaconfig\_t &)
- void release ()
- void process (mha\_wave\_t \*, mha\_wave\_t \*\*)
- void process (mha\_spec\_t \*, mha\_spec\_t \*\*)
- void process (mha\_wave\_t \*, mha\_spec\_t \*\*)
- void process (mha spec t \*, mha wave t \*\*)
- std::string getfullname () const
- std::string get\_documentation () const
- std::vector< std::string > get\_categories () const
- bool is\_prepared () const

### **Protected Member Functions**

- void test\_error ()
- void test\_version ()
- void mha\_test\_struct\_size (unsigned int s)
- void resolve and init ()

### **Protected Attributes**

- int lib err
- · algo\_comm\_t ac
- · dynamiclib t lib handle
- void \* lib\_data
- MHAGetVersion t MHAGetVersion cb
- · MHAInit t MHAInit cb
- MHADestroy t MHADestroy cb
- MHAPrepare\_t MHAPrepare\_cb
- MHARelease t MHARelease cb
- MHAProc\_wave2wave\_t MHAProc\_wave2wave\_cb
- MHAProc\_spec2spec\_t MHAProc\_spec2spec\_cb
- MHAProc\_wave2spec\_t MHAProc\_wave2spec\_cb
- MHAProc\_spec2wave\_t MHAProc\_spec2wave\_cb
- MHASet\_t MHASet\_cb
- MHAStrError\_t MHAStrError\_cb

- mhaconfig\_t cf\_input
- mhaconfig\_t cf\_output
- std::string plugin\_documentation
- std::vector< std::string > plugin\_categories
- bool b\_check\_version
- bool b\_is\_prepared

#### **Additional Inherited Members**

#### 5.332.1 Constructor & Destructor Documentation

Loads and initializes mha plugin and establishes interface.

### **Parameters**

iac	AC space (algorithm communication variables)
libname	Either file name of MHA plugin without platform-specific extension (i.e. "identity" for "identity.so" or "identity.dll") to be found on the MHA_LIBRARY_PATH (which is an environment variable). Or the same file name without extension followed by a colon ":" followed by the "configuration name" of the MHA plugin, which may be used to differentiate between multiple identical MHA plugins or to give the plugin a self-documenting name that fits its purpose. The library name - configuration name expression can be followed by a "<" followed by a configuration file name, which will be read after initialization of the plugin.

Example: "overlapadd:agc<compression.cfg" will load the plugin "overlapadd.so" or "overlapadd.dll", insert it as the configuration node "agc", and reads the configuration file "compression.cfg" into that node.

#### **Parameters**

check_version	Pluginloader will not check that the plugin was built using a known
	compatible MHA version if this flag is set to false. Disabling version check
	is discouraged.

# 5.332.1.2 PluginLoader::mhapluginloader\_t::~mhapluginloader\_t ( ) throw )

### 5.332.2 Member Function Documentation

```
5.332.2.1 std::string PluginLoader::mhapluginloader_t::parse (
                     const std::string & str ) [inline], [virtual]
Implements PluginLoader::fourway processor t (p. 855).
5.332.2.2 bool PluginLoader::mhapluginloader t::has process (
                     mha_domain_t in,
                     mha domain t out ) const
5.332.2.3 bool PluginLoader::mhapluginloader_t::has_parser ( ) const
5.332.2.4 mha domain t PluginLoader::mhapluginloader_t::input_domain ( ) const
5.332.2.5 mha_domain_t PluginLoader::mhapluginloader_t::output_domain() const
5.332.2.6 void PluginLoader::mhapluginloader_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements PluginLoader::fourway processor t (p. 855).
5.332.2.7 void PluginLoader::mhapluginloader t::release() [virtual]
Implements PluginLoader::fourway processor t (p. 855).
5.332.2.8 void PluginLoader::mhapluginloader_t::process (
                     mha wave t * s_in,
                     mha_wave_t ** s_out ) [virtual]
Implements PluginLoader::fourway_processor_t (p. 853).
5.332.2.9 void PluginLoader::mhapluginloader_t::process (
                     mha spec t * s_in,
                     mha_spec_t ** s_out ) [virtual]
Implements PluginLoader::fourway_processor_t (p. 854).
5.332.2.10 void PluginLoader::mhapluginloader t::process (
                      mha wave t * s_in,
                      mha_spec_t ** s_out ) [virtual]
Implements PluginLoader::fourway processor t (p. 854).
5.332.2.11 void PluginLoader::mhapluginloader t::process (
                      mha_spec_t * s_in,
                      mha_wave_t ** s_out ) [virtual]
Implements PluginLoader::fourway_processor_t (p. 854).
```

```
5.332.2.12 std::string PluginLoader::mhapluginloader_t::getfullname() const [inline]
5.332.2.13 std::string PluginLoader::mhapluginloader_t::get_documentation() const [inline]
5.332.2.14 std::vector<std::string> PluginLoader::mhapluginloader t::get categories ( ) const
           [inline]
5.332.2.15 bool PluginLoader::mhapluginloader_t::is_prepared() const [inline]
5.332.2.16 void PluginLoader::mhapluginloader_t::test_error() [protected]
5.332.2.17 void PluginLoader::mhapluginloader_t::test_version() [protected]
5.332.2.18 void PluginLoader::mhapluginloader_t::mha_test_struct_size (
                      unsigned int s ) [protected]
5.332.2.19 void PluginLoader::mhapluginloader_t::resolve_and_init() [protected]
5.332.3 Member Data Documentation
         int PluginLoader::mhapluginloader_t::lib_err [protected]
5.332.3.1
5.332.3.2
         algo comm_t PluginLoader::mhapluginloader_t::ac [protected]
5.332.3.3 dynamiclib_t PluginLoader::mhapluginloader_t::lib_handle [protected]
5.332.3.4 void* PluginLoader::mhapluginloader_t::lib_data [protected]
5.332.3.5 MHAGetVersion_t PluginLoader::mhapluginloader_t::MHAGetVersion_cb
         [protected]
5.332.3.6 MHAInit_t PluginLoader::mhapluginloader_t::MHAInit_cb [protected]
5.332.3.7 MHADestroy_t PluginLoader::mhapluginloader_t::MHADestroy_cb [protected]
5.332.3.8 MHAPrepare t PluginLoader::mhapluginloader_t::MHAPrepare_cb [protected]
5.332.3.9 MHARelease_t PluginLoader::mhapluginloader_t::MHARelease_cb [protected]
5.332.3.10 MHAProc wave2wave t PluginLoader::mhapluginloader_t::MHAProc_wave2wave_cb
           [protected]
5.332.3.11
          MHAProc spec2spec t PluginLoader::mhapluginloader_t::MHAProc_spec2spec_cb
           [protected]
```


5.332.3.12	MHAProc_wave2spec_t PluginLoader::mhapluginloader_t::MHAProc_wave2spec_cb [protected]
5.332.3.13	MHAProc_spec2wave_t PluginLoader::mhapluginloader_t::MHAProc_spec2wave_cb [protected]
5.332.3.14	MHASet_t PluginLoader::mhapluginloader_t::MHASet_cb [protected]
5.332.3.15	MHAStrError_t PluginLoader::mhapluginloader_t::MHAStrError_cb [protected]
5.332.3.16	mhaconfig_t PluginLoader::mhapluginloader_t::cf_input [protected]
5.332.3.17	mhaconfig_t PluginLoader::mhapluginloader_t::cf_output [protected]
5.332.3.18	std::string PluginLoader::mhapluginloader_t::plugin_documentation [protected]
5.332.3.19	<pre>std::vector<std::string> PluginLoader::mhapluginloader_t::plugin_categories [protected]</std::string></pre>
5.332.3.20	bool PluginLoader::mhapluginloader_t::b_check_version [protected]
5.332.3.21	bool PluginLoader::mhapluginloader_t::b_is_prepared [protected]

The documentation for this class was generated from the following files:

- · mhapluginloader.h
- mhapluginloader.cpp

# 5.333 pluginloader\_t Class Reference

Inheritance diagram for pluginloader\_t:

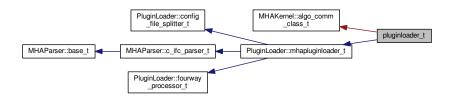

## **Public Member Functions**

- pluginloader\_t (const std::string &name)
- ∼pluginloader\_t () throw ()

**Additional Inherited Members** 

5.333.1 Constructor & Destructor Documentation


5.333.1.2 pluginloader\_t::~pluginloader\_t ( ) throw )

The documentation for this class was generated from the following files:

- · pluginbrowser.h
- · pluginbrowser.cpp

## 5.334 prediction\_error Class Reference

Inheritance diagram for prediction\_error:

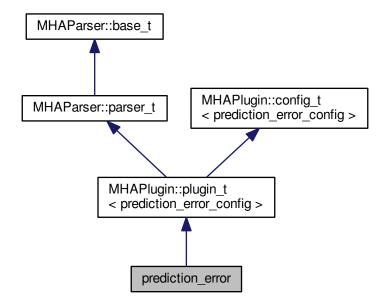

#### **Public Member Functions**

prediction\_error (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

Constructs our plugin.

- ~prediction\_error ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

Checks for the most recent configuration and defers processing to it.

• void prepare (mhaconfig t &)

Plugin preparation.

• void release (void)

#### **Public Attributes**

```
    MHAParser::float t rho
```

· MHAParser::float t c

MHAParser::int\_t ntaps

MHAParser::vfloat t gains

• MHAParser::string t name e

MHAParser::string\_t name\_f

MHAParser::string\_t name\_lpc

MHAParser::int t lpc order

MHAParser::vint\_t pred\_err\_delay

MHAParser::vint\_t delay\_w

MHAParser::vint\_t delay\_d

MHAParser::int\_t n\_no\_update

## **Private Member Functions**

void update cfg ()

### **Private Attributes**

MHAEvents::patchbay\_t< prediction\_error > patchbay

### **Additional Inherited Members**

```
5.334.1 Constructor & Destructor Documentation
```

## Constructs our plugin.

```
5.334.1.2 prediction_error::~prediction_error()
5.334.2 Member Function Documentation
5.334.2.1 mha_wave_t * prediction_error::process (
                      mha_wave_t * signal )
Checks for the most recent configuration and defers processing to it.
5.334.2.2 void prediction_error::prepare (
                      mhaconfig_t & signal_info ) [virtual]
Plugin preparation.
An opportunity to validate configuration parameters before instantiating a configuration.
Parameters
 signal info
              Structure containing a description of the form of the signal (domain, number of
              channels, frames per block, sampling rate.
Implements MHAPlugin::plugin_t< prediction_error_config > (p. 705).
5.334.2.3 void prediction_error::release (
                      void ) [inline],[virtual]
Reimplemented from MHAPlugin::plugin_t< prediction_error_config > (p. 706).
5.334.2.4 void prediction_error::update_cfg() [private]
5.334.3 Member Data Documentation
5.334.3.1 MHAParser::float_t prediction_error::rho
5.334.3.2 MHAParser::float_t prediction_error::c
5.334.3.3 MHAParser::int_t prediction_error::ntaps
5.334.3.4 MHAParser::vfloat_t prediction_error::gains
```

5.334.3.5 MHAParser::string\_t prediction\_error::name\_e

5.334.3.6 MHAParser::string\_t prediction\_error::name\_f

```
5.334.3.7 MHAParser::string_t prediction_error::name_lpc
5.334.3.8 MHAParser::int_t prediction_error::lpc_order
5.334.3.9 MHAParser::vint_t prediction_error::pred_err_delay
5.334.3.10 MHAParser::vint_t prediction_error::delay_w
5.334.3.11 MHAParser::vint_t prediction_error::delay_d
5.334.3.12 MHAParser::int_t prediction_error::n_no_update
5.334.3.13 MHAEvents::patchbay_tprediction_error::patchbay_private
```

The documentation for this class was generated from the following files:

- · prediction\_error.h
- prediction\_error.cpp

## 5.335 prediction\_error\_config Class Reference

#### **Public Member Functions**

- prediction\_error\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, prediction
   —error \*pred\_err)
- $\sim$ prediction\_error\_config ()
- mha\_wave\_t \* process (mha\_wave\_t \*s\_Y, mha\_real\_t rho, mha\_real\_t c)
- void insert ()

### **Private Attributes**

- · algo\_comm\_t ac
- unsigned int ntaps
- · unsigned int frames
- unsigned int channels
- MHA AC::waveform ts E
- MHA AC::waveform t F
- MHASignal::waveform\_t Pu

Power of input signal delayline.

- std::string name\_d\_
- std::string name\_lpc\_
- int n\_no\_update\_
- int no iter

- int iter
- MHASignal::waveform\_t v\_G
- MHASignal::waveform\_t s\_U
- MHASignal::delay\_t s\_E\_pred\_err\_delay
- MHASignal::delay\_t s\_W
- MHASignal::ringbuffer\_t s\_Wflt
- MHASignal::delay\_t s\_U\_delay
- MHASignal::ringbuffer\_t s\_U\_delayflt
- MHASignal::waveform\_t F\_Uflt
- MHASignal::delay\_t s\_Y\_delay
- MHASignal::ringbuffer\_t s\_Y\_delayflt
- MHASignal::ringbuffer\_t UbufferPrew
- mha\_wave\_t s\_LPC
- mha\_wave\_t UPrew
- mha\_wave\_t YPrew
- · mha wave t EPrew
- mha\_wave\_t UPrewW
- · mha wave t smpl
- mha\_wave\_t \* s\_Usmpl
- 5.335.1 Constructor & Destructor Documentation
- 5.335.1.2 prediction\_error\_config::~prediction\_error\_config()
- 5.335.2 Member Function Documentation
- 5.335.2.2 void prediction\_error\_config::insert ( )
- 5.335.3 Member Data Documentation
- **5.335.3.1 algo\_comm\_t prediction\_error\_config::ac** [private]
- **5.335.3.2 unsigned int prediction\_error\_config::ntaps** [private]

```
5.335.3.3
         unsigned int prediction_error_config::frames [private]
5.335.3.4
         unsigned int prediction_error_config::channels [private]
5.335.3.5 MHA_AC::waveform_t prediction_error_config::s_E [private]
5.335.3.6
         MHA_AC::waveform_t prediction_error_config::F [private]
5.335.3.7 MHASignal::waveform_t prediction_error_config::Pu [private]
Power of input signal delayline.
5.335.3.8
         std::string prediction_error_config::name_d_ [private]
5.335.3.9 std::string prediction_error_config::name_lpc_ [private]
5.335.3.10 int prediction_error_config::n_no_update_ [private]
5.335.3.11 int prediction_error_config::no_iter [private]
5.335.3.12 int prediction_error_config::iter [private]
5.335.3.13
          MHASignal::waveform_t prediction_error_config::v_G [private]
5.335.3.14 MHASignal::waveform_t prediction_error_config::s_U [private]
5.335.3.15
          MHASignal::delay_t prediction_error_config::s_E_pred_err_delay [private]
5.335.3.16
          MHASignal::delay_t prediction_error_config::s_W [private]
5.335.3.17
          MHASignal::ringbuffer_t prediction_error_config::s_Wflt [private]
5.335.3.18
          MHASignal::delay t prediction_error_config::s_U_delay [private]
5.335.3.19 MHASignal::ringbuffer_t prediction_error_config::s_U_delayflt [private]
5.335.3.20
          MHASignal::waveform_t prediction_error_config::F_Uflt [private]
5.335.3.21
          MHASignal::delay_t prediction_error_config::s_Y_delay [private]
5.335.3.22
          MHASignal::ringbuffer_t prediction_error_config::s_Y_delayflt [private]
5.335.3.23 MHASignal::ringbuffer_t prediction_error_config::UbufferPrew [private]
```


```
5.335.3.24 mha_wave_t prediction_error_config::s_LPC [private]
5.335.3.25 mha_wave_t prediction_error_config::UPrew [private]
5.335.3.26 mha_wave_t prediction_error_config::YPrew [private]
5.335.3.27 mha_wave_t prediction_error_config::EPrew [private]
5.335.3.28 mha_wave_t prediction_error_config::UPrewW [private]
5.335.3.29 mha_wave_t prediction_error_config::smpl [private]
5.335.3.30 mha_wave_t* prediction_error_config::s_Usmpl [private]
```

The documentation for this class was generated from the following files:

- · prediction\_error.h
- prediction\_error.cpp

# 5.336 rmslevel\_if\_t Class Reference

Inheritance diagram for rmslevel\_if\_t:

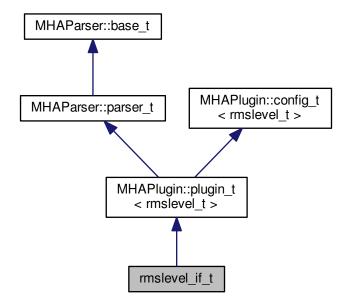

### **Public Member Functions**

```
    rmslevel_if_t (const algo_comm_t &, const std::string &, const std::string &)
    mha_spec_t * process (mha_spec_t *)
    mha_wave_t * process (mha_wave_t *)
    void prepare (mhaconfig_t &)

Private Attributes
```

• std::string name

```
Additional Inherited Members
```

5.336.3 Member Data Documentation

**5.336.3.1** std::string rmslevel\_if\_t::name [private]

The documentation for this class was generated from the following file:

rmslevel.cpp

### 5.337 rmslevel t Class Reference

**Public Member Functions** 

```
    rmslevel_t (unsigned int nch, algo_comm_t ac, std::string name, MHAParser::parser
        _t &p, unsigned int fftlen_)
```

```
mha_spec_t * process (mha_spec_t *)
```

- mha\_wave\_t \* process (mha\_wave\_t \*)
- void insert ()

#### **Private Attributes**

- mon\_t level\_db
- · mon\_t peak\_db
- mon\_t level
- mon\_t peak
- · unsigned int fftlen

```
5.337.1 Constructor & Destructor Documentation
```

5.337.2 Member Function Documentation

```
5.337.2.1 mha_spec_t * rmslevel_t::process ( mha_spec_t * s )
```

```
5.337.2.2 mha_wave_t * rmslevel_t::process ( mha_wave_t * s )
```

```
5.337.2.3 void rmslevel_t::insert ( )
```

5.337.3 Member Data Documentation

```
5.337.3.1 mon_t rmslevel_t::level_db [private]
```

**5.337.3.2** mon\_t rmslevel\_t::peak\_db [private]

**5.337.3.3** mon\_t rmslevel\_t::level [private]

**5.337.3.4** mon\_t rmslevel\_t::peak [private]


**5.337.3.5** unsigned int rmslevel\_t::fftlen [private]

The documentation for this class was generated from the following file:

rmslevel.cpp

## 5.338 route::interface\_t Class Reference

Inheritance diagram for route::interface\_t:

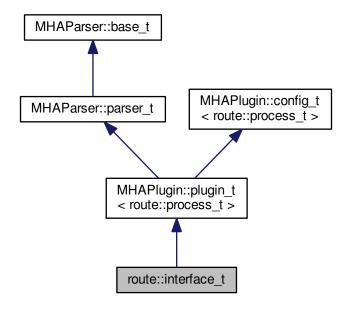

## **Public Member Functions**

- interface\_t (algo\_comm\_t iac, const std::string &, const std::string &)
- void prepare (mhaconfig\_t &)
- void release ()
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*)

# **Private Member Functions**

• void update ()

# **Private Attributes**

- MHAEvents::patchbay\_t< route::interface\_t > patchbay
- MHAParser::vstring\_t route\_out
- MHAParser::vstring\_t route\_ac
- mhaconfig\_t cfin
- mhaconfig\_t cfout
- mhaconfig\_t cfac
- bool prepared
- · bool stopped
- std::string algo

```
Additional Inherited Members
```

```
5.338.1 Constructor & Destructor Documentation
5.338.1.1 route::interface_t::interface_t (
                      algo comm t iac,
                      const std::string & ,
                      const std::string & ialg )
5.338.2 Member Function Documentation
5.338.2.1 void route::interface_t::prepare (
                      mhaconfig_t & cf ) [virtual]
Implements MHAPlugin::plugin_t< route::process_t > (p. 705).
5.338.2.2 void route::interface_t::release() [virtual]
Reimplemented from MHAPlugin::plugin_t< route::process_t > (p. 706).
5.338.2.3 mha_wave_t * route::interface_t::process (
                      mha wave t * s)
5.338.2.4 mha_spec_t * route::interface_t::process (
                      mha spec t * s)
5.338.2.5 void route::interface_t::update() [private]
5.338.3 Member Data Documentation
5.338.3.1 MHAEvents::patchbay_t<route::interface_t> route::interface_t::patchbay
          [private]
5.338.3.2 MHAParser::vstring_t route::interface_t::route_out [private]
5.338.3.3 MHAParser::vstring_t route::interface_t::route_ac [private]
5.338.3.4 mhaconfig_t route::interface_t::cfin [private]
5.338.3.5 mhaconfig_t route::interface_t::cfout [private]
5.338.3.6 mhaconfig_t route::interface_t::cfac [private]
5.338.3.7 bool route::interface_t::prepared [private]
5.338.3.8 bool route::interface_t::stopped [private]
5.338.3.9 std::string route::interface_t::algo [private]
```

The documentation for this class was generated from the following file:

route.cpp

### 5.339 route::process\_t Class Reference

#### **Public Member Functions**

process\_t (algo\_comm\_t iac, const std::string acname, const std::vector< std::string > &r\_out, const std::vector< std::string > &r\_ac, const mhaconfig\_t &cf\_in, const mhaconfig\_t &cf\_out, const mhaconfig\_t &cf\_ac, bool sync)

```
mha_wave_t * process (mha_wave_t *)
```

```
mha_spec_t * process (mha_spec_t *)
```

#### **Private Attributes**

```
    MHAMultiSrc::waveform_t wout
```

- MHAMultiSrc::spectrum\_t sout
- · MHAMultiSrc::waveform t wout ac
- MHAMultiSrc::spectrum t sout ac

### 5.339.1 Constructor & Destructor Documentation

```
5.339.1.1 route::process_t::process_t ( algo\_comm\_t \ iac, \\ const \ std::string \ acname, \\ const \ std::vector < std::string > \& \ r\_out, \\ const \ std::vector < std::string > \& \ r\_ac, \\ const \ mhaconfig\_t \& \ cf\_in, \\ const \ mhaconfig\_t \& \ cf\_out, \\ const \ mhaconfig\_t \& \ cf\_ac, \\ bool \ sync \ )
```

5.339.2 Member Function Documentation

```
5.339.2.1 mha_wave_t * route::process_t::process ( mha_wave_t * s )
```

5.339.3 Member Data Documentation

```
5.339.3.1 MHAMultiSrc::waveform_t route::process_t::wout [private]
```

```
5.339.3.2 MHAMultiSrc::spectrum_t route::process_t::sout [private]
```

**5.339.3.3 MHAMultiSrc::waveform t route::process\_t::wout\_ac** [private]

**5.339.3.4 MHAMultiSrc::spectrum\_t route::process\_t::sout\_ac** [private]

The documentation for this class was generated from the following file:

route.cpp

## 5.340 rt nlms t Class Reference

#### **Public Member Functions**

- rt\_nlms\_t (algo\_comm\_t iac, const std::string &name, const mhaconfig\_t &cfg, unsigned int ntaps\_, const std::string &name\_u, const std::string &name\_d, const std::string &name\_e, const std::string &name\_f, const int n\_no\_update)
- ~rt\_nlms\_t ()
- mha\_wave\_t \* process (mha\_wave\_t \*sUD, mha\_real\_t rho, mha\_real\_t c, unsigned int norm\_type, unsigned int estim\_type, mha\_real\_t lambda\_smooth)
- void **insert** ()

#### **Private Attributes**

- algo\_comm\_t ac
- unsigned int ntaps
- · unsigned int frames
- unsigned int channels
- MHA\_AC::waveform\_t F
- MHASignal::waveform\_t U

Input signal cache.

MHASignal::waveform\_t Uflt

Input signal cache (second filter)

MHASignal::waveform t Pu

Power of input signal delayline.

MHASignal::waveform\_t fu

Filtered input signal.

MHASignal::waveform\_t fuflt

Filtered input signal.

- MHASignal::waveform\_t fu\_previous
- MHASignal::waveform\_t y\_previous
- MHASignal::waveform\_t P\_Sum
- std::string name\_u\_
- std::string name d
- std::string name\_e\_
- int n\_no\_update\_
- int no iter
- mha\_wave\_t s\_E

```
5.340.1 Constructor & Destructor Documentation
5.340.1.1 rt_nlms_t::rt_nlms_t (
                      algo comm t iac,
                      const std::string & name,
                      const mhaconfig t & cfg,
                      unsigned int ntaps_,
                      const std::string & name u,
                      const std::string & name_d,
                      const std::string & name_e,
                      const std::string & name_f,
                      const int n_no_update )
5.340.1.2 rt_nlms_t::~rt_nlms_t( ) [inline]
5.340.2 Member Function Documentation
5.340.2.1 mha_wave_t * rt_nlms_t::process (
                      mha wave t * sUD,
                      mha real t rho,
                      mha_real_t c,
                      unsigned int norm_type,
                      unsigned int estim_type,
                      mha real t lambda_smooth )
5.340.2.2 void rt nlms t::insert ( )
5.340.3 Member Data Documentation
5.340.3.1
         algo_comm_t rt_nlms_t::ac [private]
5.340.3.2 unsigned int rt_nlms_t::ntaps [private]
5.340.3.3 unsigned int rt_nlms_t::frames [private]
5.340.3.4 unsigned int rt nlms t::channels [private]
5.340.3.5 MHA AC::waveform trt_nlms_t::F [private]
5.340.3.6 MHASignal::waveform_t rt_nlms_t::U [private]
Input signal cache.
5.340.3.7 MHASignal::waveform_t rt_nlms_t::Uflt [private]
Input signal cache (second filter)
```

```
5.340.3.8 MHASignal::waveform_t rt_nlms_t::Pu [private]
```

Power of input signal delayline.

```
5.340.3.9 MHASignal::waveform_t rt_nlms_t::fu [private]
```

Filtered input signal.

```
5.340.3.10 MHASignal::waveform_t rt_nlms_t::fuflt [private]
```

Filtered input signal.

```
5.340.3.11 MHASignal::waveform_t rt_nlms_t::fu_previous [private]
```

```
5.340.3.12 MHASignal::waveform_t rt_nlms_t::y_previous [private]
```

```
5.340.3.13 MHASignal::waveform_t rt_nlms_t::P_Sum [private]
```

```
5.340.3.14 std::string rt_nlms_t::name_u_ [private]
```

```
5.340.3.15 std::string rt_nlms_t::name_d_ [private]
```

```
5.340.3.16 std::string rt_nlms_t::name_e_ [private]
```


```
5.340.3.17 int rt_nlms_t::n_no_update_ [private]
```

The documentation for this class was generated from the following file:

## nlms\_wave.cpp

## 5.341 save\_spec\_t Class Reference

Inheritance diagram for save\_spec\_t:

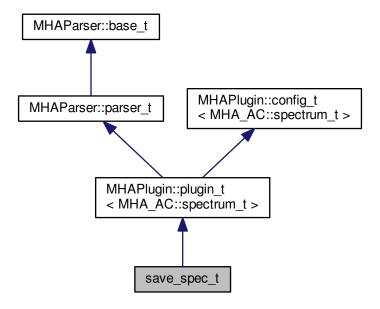

#### **Public Member Functions**

- save\_spec\_t (const algo\_comm\_t &iac, const std::string &ith, const std::string &ial)
- mha\_spec\_t \* process (mha\_spec\_t \*s)
- void prepare (mhaconfig\_t &tf)

### **Private Attributes**

std::string basename

### **Additional Inherited Members**

## 5.341.1 Constructor & Destructor Documentation

### 5.341.2 Member Function Documentation

Implements  $MHAPlugin::plugin_t < MHA_AC::spectrum_t > (p. 705).$ 


### 5.341.3 Member Data Documentation

The documentation for this class was generated from the following file:

### save\_spec.cpp

# 5.342 save\_wave\_t Class Reference

Inheritance diagram for save\_wave\_t:

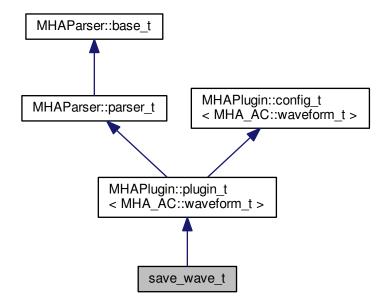

#### **Public Member Functions**

```
• save_wave_t (const algo_comm_t &iac, const std::string &ith, const std::string &ial)
```

- mha\_wave\_t \* process (mha\_wave\_t \*s)
- void prepare (mhaconfig t &tf)

### **Private Attributes**

• std::string basename

**Additional Inherited Members** 

```
5.342.1 Constructor & Destructor Documentation
```

5.342.2 Member Function Documentation

Implements MHAPlugin::plugin\_t< MHA\_AC::waveform\_t > (p. 705).

5.342.3 Member Data Documentation

```
5.342.3.1 std::string save_wave_t::basename [private]
```

The documentation for this class was generated from the following file:

save\_wave.cpp

5.343 shadowfilter\_begin::cfg\_t Class Reference

**Public Member Functions** 

- cfg\_t (int nfft, int inch, int outch, algo\_comm\_t ac, std::string name)
- mha\_spec\_t \* process (mha\_spec\_t \*)

MHA\_AC::spectrum\_t in\_spec\_copy

### **Private Attributes**

```
    MHASignal::spectrum_t out_spec

    MHA_AC::int_t nch

    MHA_AC::int_t ntracks


5.343.1 Constructor & Destructor Documentation
5.343.1.1 cfg_t::cfg_t (
                      int nfft,
                      int inch.
                      int outch,
                      algo_comm_t ac,
                      std::string name )
5.343.2 Member Function Documentation
5.343.2.1 mha_spec_t * cfg_t::process (
                      mha spec t * s)
5.343.3 Member Data Documentation
5.343.3.1 MHA_AC::spectrum_t shadowfilter_begin::cfg_t::in_spec_copy [private]
5.343.3.2 MHASignal::spectrum_t shadowfilter_begin::cfg_t::out_spec [private]
5.343.3.3 MHA_AC::int_t shadowfilter_begin::cfg_t::nch [private]
5.343.3.4 MHA AC::int t shadowfilter_begin::cfg_t::ntracks [private]
```

The documentation for this class was generated from the following file:

shadowfilter\_begin.cpp

# 5.344 shadowfilter\_begin::shadowfilter\_begin\_t Class Reference

Inheritance diagram for shadowfilter\_begin::shadowfilter\_begin\_t:

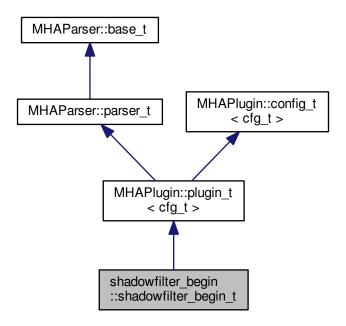

## **Public Member Functions**

- shadowfilter\_begin\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)

### **Private Attributes**

- std::string basename
- MHAParser::int\_t nch
- MHAParser::int\_t ntracks

### **Additional Inherited Members**

### 5.344.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

shadowfilter\_begin.cpp

5.345 shadowfilter\_end::cfg\_t Class Reference

**Public Member Functions** 

```
    cfg_t (int nfft_, algo_comm_t ac_, std::string name_)
```

mha\_spec\_t \* process (mha\_spec\_t \*)

#### **Private Attributes**

- algo\_comm\_t ac
- std::string name
- int **nfft**
- int ntracks
- int nch\_out
- mha\_spec\_t in\_spec
- MHASignal::spectrum\_t out\_spec
- MHA\_AC::spectrum\_t gains

```
5.345.1 Constructor & Destructor Documentation
```

5.345.2 Member Function Documentation

```
5.345.2.1 mha_spec_t * cfg_t::process (
mha_spec_t * s )
```

5.345.3 Member Data Documentation

```
5.345.3.1 algo_comm_t shadowfilter_end::cfg_t::ac [private]
```

**5.345.3.2 std::string shadowfilter\_end::cfg\_t::name** [private]

**5.345.3.3** int shadowfilter\_end::cfg\_t::nfft [private]

**5.345.3.4** int shadowfilter\_end::cfg\_t::ntracks [private]

**5.345.3.5** int shadowfilter\_end::cfg\_t::nch\_out [private]

**5.345.3.6 mha\_spec\_t shadowfilter\_end::cfg\_t::in\_spec** [private]

**5.345.3.7** MHASignal::spectrum t shadowfilter\_end::cfg\_t::out\_spec [private]


**5.345.3.8** MHA\_AC::spectrum\_t shadowfilter\_end::cfg\_t::gains [private]

The documentation for this class was generated from the following file:

shadowfilter\_end.cpp

# 5.346 shadowfilter\_end::shadowfilter\_end\_t Class Reference

Inheritance diagram for shadowfilter\_end::shadowfilter\_end\_t:

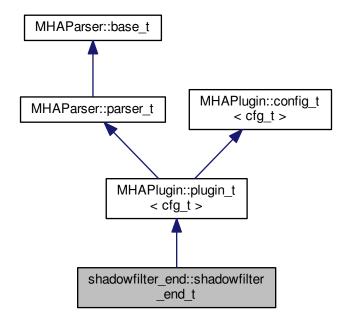

### **Public Member Functions**

- shadowfilter\_end\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)

## **Private Attributes**

MHAParser::string\_t basename

# **Additional Inherited Members**

### 5.346.1 Constructor & Destructor Documentation

```
5.346.2 Member Function Documentation
```

```
Implements MHAPlugin::plugin_t < cfg_t > (p.705).
```

5.346.3 Member Data Documentation

```
5.346.3.1 MHAParser::string_t shadowfilter_end::shadowfilter_end_t::basename [private]
```

The documentation for this class was generated from the following file:

shadowfilter\_end.cpp

5.347 sine\_cfg\_t Struct Reference

**Public Member Functions** 

• sine\_cfg\_t (double sampling\_rate, mha\_real\_t frequency, mha\_real\_t newlev, int \_mix, const std::vector< int > &\_channels)

### **Public Attributes**

- double phase\_increment\_div\_2pi
- · double amplitude
- int mix
- const std::vector< int > channels

### 5.347.1 Constructor & Destructor Documentation

### 5.347.2 Member Data Documentation


- 5.347.2.1 double sine\_cfg\_t::phase\_increment\_div\_2pi
- 5.347.2.2 double sine\_cfg\_t::amplitude
- 5.347.2.3 int sine\_cfg\_t::mix
- 5.347.2.4 const std::vector<int> sine\_cfg\_t::channels

The documentation for this struct was generated from the following file:

## sine.cpp

## 5.348 sine\_t Class Reference

Inheritance diagram for sine\_t:

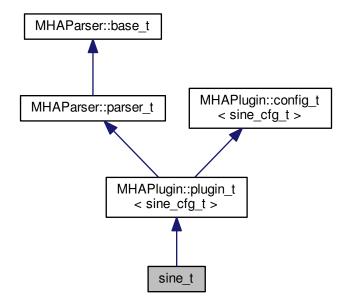

### **Public Member Functions**

```
• sine_t (const algo_comm_t &, const std::string &chain_name, const std::string &algo ← __name)
```

```
• ~sine_t ()
```

- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)

### **Private Member Functions**

void update\_cfg ()

### **Private Attributes**

- MHAParser::float t lev
- MHAParser::float\_t frequency
- MHAParser::kw\_t mode
- MHAParser::vint\_t channels
- double phase\_div\_2pi
- MHAEvents::patchbay\_t< sine\_t > patchbay

### **Additional Inherited Members**

```
5.348.1 Constructor & Destructor Documentation
```

Implements MHAPlugin::plugin\_t < sine\_cfg\_t > (p. 705).

mha wave t \* s)


```
5.348.2.3 void sine_t::update_cfg( ) [private]
5.348.3 Member Data Documentation
5.348.3.1 MHAParser::float_t sine_t::lev [private]
5.348.3.2 MHAParser::float_t sine_t::frequency [private]
5.348.3.3 MHAParser::kw_t sine_t::mode [private]
5.348.3.4 MHAParser::vint_t sine_t::channels [private]
5.348.3.5 double sine_t::phase_div_2pi [private]
5.348.3.6 MHAEvents::patchbay_t < sine_t > sine_t::patchbay [private]
```

The documentation for this class was generated from the following file:

# sine.cpp

# 5.349 smoothgains\_bridge::overlapadd\_if\_t Class Reference

Inheritance diagram for smoothgains\_bridge::overlapadd\_if\_t:

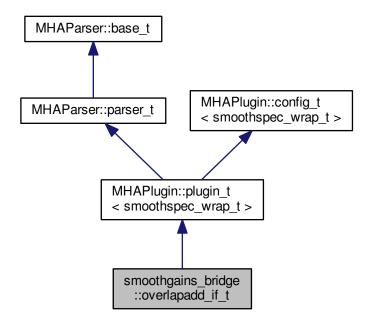

### **Public Member Functions**

```
    overlapadd if t (const algo comm t &, const std::string &, const std::string &)
```

- ∼overlapadd\_if\_t ()
- void prepare (mhaconfig t &)
- void release ()
- mha\_spec\_t \* process (mha\_spec\_t \*)

### **Private Member Functions**

void update ()

### **Private Attributes**

- MHAEvents::patchbay\_t< overlapadd\_if\_t > patchbay
- MHAParser::kw\_t mode
- MHAParser::window\_t irswnd
- MHAParser::float\_t epsilon
- MHAParser::mhapluginloader\_t plugloader
- std::string algo
- mhaconfig\_t cf\_in
- mhaconfig\_t cf\_out

### **Additional Inherited Members**

```
5.349.1 Constructor & Destructor Documentation
```

- 5.349.1.2 smoothgains\_bridge::overlapadd\_if\_t::~overlapadd\_if\_t ( )
- 5.349.2 Member Function Documentation
- 5.349.2.1 void smoothgains\_bridge::overlapadd\_if\_t::prepare ( mhaconfig\_t & t ) [virtual]

Implements MHAPlugin::plugin\_t < smoothspec\_wrap\_t > (p.705).

**5.349.2.2** void smoothgains\_bridge::overlapadd\_if\_t::release( ) [virtual]

Reimplemented from MHAPlugin::plugin\_t< smoothspec\_wrap\_t > (p. 706).

## 5.350 smoothgains\_bridge::smoothspec\_wrap\_t Class Reference89

The documentation for this class was generated from the following file:

**5.349.3.8 mhaconfig t smoothgains\_bridge::overlapadd\_if\_t::cf\_out** [private]

- smoothgains\_bridge.cpp
- 5.350 smoothgains\_bridge::smoothspec\_wrap\_t Class Reference

**Public Member Functions** 

- smoothspec\_wrap\_t (mhaconfig\_t spar\_in, mhaconfig\_t spar\_out, const MHA←
   Parser::kw\_t &mode, const MHAParser::window\_t &irswnd, const MHAParser::float←
   \_t &epsilon)
- mha\_spec\_t \* proc\_1 (mha\_spec\_t \*)
- mha\_spec\_t \* proc\_2 (mha\_spec\_t \*)

#### **Private Attributes**


- MHASignal::spectrum\_t spec\_in\_copy
   Copy of input spectrum for smoothspec.
- MHAFilter::smoothspec\_t smoothspec Smoothspec calculator.
- bool use\_smoothspec
- float smoothspec\_epsilon

```
5.350.1 Constructor & Destructor Documentation
5.350.1.1 smoothgains_bridge::smoothspec_wrap_t::smoothspec_wrap_t (
                     mhaconfig t spar in,
                     mhaconfig_t spar_out,
                     const MHAParser::kw t & mode,
                     const MHAParser::window_t & irswnd,
                     const MHAParser::float t & epsilon )
5.350.2 Member Function Documentation
5.350.2.1 mha_spec_t * smoothgains_bridge::smoothspec_wrap_t::proc_1 (
                     mha spec t * s)
5.350.2.2 mha spec t * smoothgains_bridge::smoothspec_wrap_t::proc_2 (
                     mha spec t * s)
5.350.3 Member Data Documentation
5.350.3.1 MHASignal::spectrum_t smoothgains_bridge::smoothspec_wrap_t::spec_in_copy
         [private]
Copy of input spectrum for smoothspec.
5.350.3.2 MHAFilter::smoothspec_t smoothgains_bridge::smoothspec_wrap_t::smoothspec
         [private]
Smoothspec calculator.
5.350.3.3 bool smoothgains_bridge::smoothspec_wrap_t::use_smoothspec [private]
5.350.3.4 float smoothgains_bridge::smoothspec_wrap_t::smoothspec_epsilon [private]
The documentation for this class was generated from the following file:
```

smoothgains\_bridge.cpp

## 5.351 softclip\_t Class Reference

Inheritance diagram for softclip\_t:

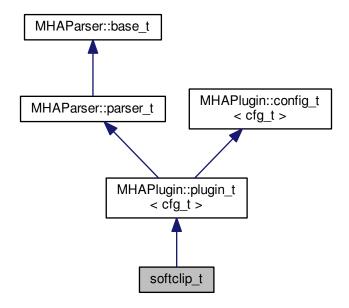

### **Public Member Functions**

- softclip\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)
- void update ()

# **Private Attributes**

- mhaconfig\_t tftype
- MHAParser::float\_t attack
- MHAParser::float\_t decay
- MHAParser::float\_t start\_limit
- MHAParser::float\_t slope\_db
- MHAEvents::patchbay\_t< softclip\_t > patchbay

**Additional Inherited Members** 

```
5.351.1 Constructor & Destructor Documentation
5.351.1.1 softclip_t::softclip_t (
                      const algo comm t & iac,
                      const std::string & chain,
                      const std::string & name )
5.351.2 Member Function Documentation
5.351.2.1 mha_wave_t * softclip_t::process (
                      mha_wave_t * s )
5.351.2.2 void softclip_t::prepare (
                      mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < cfg t > (p. 705).
5.351.2.3 void softclip_t::update()
5.351.3 Member Data Documentation
5.351.3.1
         mhaconfig t softclip_t::tftype [private]
5.351.3.2 MHAParser::float_t softclip_t::attack [private]
5.351.3.3 MHAParser::float_t softclip_t::decay [private]
5.351.3.4 MHAParser::float_t softclip_t::start_limit [private]
5.351.3.5 MHAParser::float_t softclip_t::slope_db [private]
5.351.3.6 MHAEvents::patchbay_t<softclip_t> softclip_t::patchbay [private]
The documentation for this class was generated from the following file:
```

softclip.cpp

5.352 softclipper\_t Class Reference

**Public Member Functions** 

- softclipper\_t (const softclipper\_variables\_t &v, const mhaconfig\_t &)
- mha\_real\_t process (mha\_wave\_t \*)

### **Private Attributes**

```
    MHAFilter::o1flt_lowpass_t attack
```

- MHAFilter::o1flt\_maxtrack\_t decay
- MHAFilter::o1flt\_lowpass\_t clipmeter
- mha\_real\_t threshold
- · mha real t hardlimit
- mha\_real\_t slope
- bool linear

```
5.352.1 Constructor & Destructor Documentation
```

5.352.2 Member Function Documentation

5.352.3 Member Data Documentation

```
5.352.3.1 MHAFilter::o1flt_lowpass_t softclipper_t::attack [private]
```

```
5.352.3.2 MHAFilter::o1flt_maxtrack_t softclipper_t::decay [private]
```

**5.352.3.3** MHAFilter::o1flt\_lowpass\_t softclipper\_t::clipmeter [private]

```
5.352.3.4 mha real t softclipper t::threshold [private]
```

**5.352.3.5 mha\_real\_t softclipper\_t::hardlimit** [private]

**5.352.3.6 mha\_real\_t softclipper\_t::slope** [private]


**5.352.3.7** bool softclipper\_t::linear [private]

The documentation for this class was generated from the following file:

## · transducers.cpp

# 5.353 softclipper\_variables\_t Class Reference

Inheritance diagram for softclipper\_variables\_t:

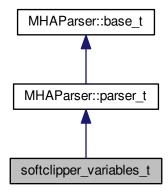

#### **Public Member Functions**

softclipper\_variables\_t ()

## **Public Attributes**

- MHAParser::float t tau attack
- MHAParser::float\_t tau\_decay
- · MHAParser::float t tau clip
- MHAParser::float\_t threshold
- MHAParser::float\_t hardlimit
- MHAParser::float\_t slope
- MHAParser::bool\_t linear
- MHAParser::float\_mon\_t clipped
- MHAParser::float\_t max\_clipped

## **Additional Inherited Members**

- 5.353.1 Constructor & Destructor Documentation
- 5.353.1.1 softclipper\_variables\_t::softclipper\_variables\_t( )
- 5.353.2 Member Data Documentation


5.353.2.1 MHAParser::float\_t softclipper\_variables\_t::tau\_attack
5.353.2.2 MHAParser::float\_t softclipper\_variables\_t::tau\_decay
5.353.2.3 MHAParser::float\_t softclipper\_variables\_t::tau\_clip
5.353.2.4 MHAParser::float\_t softclipper\_variables\_t::threshold
5.353.2.5 MHAParser::float\_t softclipper\_variables\_t::hardlimit
5.353.2.6 MHAParser::float\_t softclipper\_variables\_t::slope
5.353.2.7 MHAParser::bool\_t softclipper\_variables\_t::linear
5.353.2.8 MHAParser::float\_mon\_t softclipper\_variables\_t::clipped
5.353.2.9 MHAParser::float\_t softclipper\_variables\_t::max\_clipped

The documentation for this class was generated from the following file:

## transducers.cpp

# 5.354 spec2wave\_if\_t Class Reference

Inheritance diagram for spec2wave\_if\_t:

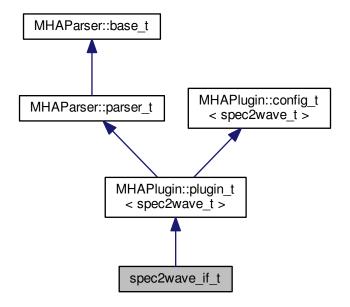

### **Public Member Functions**

- spec2wave\_if\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- void prepare (mhaconfig\_t &)
- mha wave t \* process (mha spec t \*)

### **Private Member Functions**

• void update ()

### **Private Attributes**

- MHAEvents::patchbay\_t< spec2wave\_if\_t > patchbay
- MHAParser::float t ramplen
- · windowselector\_t window\_config

### **Additional Inherited Members**

```
5.354.1 Constructor & Destructor Documentation
5.354.1.1 spec2wave_if_t::spec2wave_if_t (
                     const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & )
5.354.2 Member Function Documentation
5.354.2.1
         void spec2wave_if_t::prepare (
                     mhaconfig t&t) [virtual]
Implements MHAPlugin::plugin_t < spec2wave_t > (p. 705).
5.354.2.2 mha wave t * spec2wave_if_t::process (
                     mha_spec_t * spec_in )
5.354.2.3 void spec2wave_if_t::update( ) [private]
5.354.3 Member Data Documentation
5.354.3.1
         MHAEvents::patchbay_t<spec2wave_if_t> spec2wave_if_t::patchbay [private]
5.354.3.2 MHAParser::float_t spec2wave_if_t::ramplen [private]
5.354.3.3 windowselector_t spec2wave_if_t::window_config [private]
```

The documentation for this class was generated from the following file:

spec2wave.cpp

## 5.355 spec2wave t Class Reference

#### **Public Member Functions**

- **spec2wave\_t** (unsigned int nfft\_, unsigned int nwnd\_, unsigned int nwndshift\_, unsigned int nch, **mha\_real\_t** ramplen, const **MHAWindow::base\_t** &postwin)
- ∼spec2wave t()
- mha\_wave\_t \* process (mha\_spec\_t \*)

### **Private Attributes**

· mha fft t ft

FFT class.

unsigned int npad1

length of zero padding before window

• unsigned int npad2

length of zero padding after window

- hanning\_ramps\_t ramps
- MHASignal::waveform\_t calc\_out
- MHASignal::waveform t out buf
- MHASignal::waveform\_t write\_buf
- mha\_real\_t sc
- · unsigned int nfft
- unsigned int nwndshift
- MHAWindow::base\_t postwindow

```
5.355.1 Constructor & Destructor Documentation
```

```
5.355.2 Member Function Documentation
```

5.355.3 Member Data Documentation

**5.355.3.1 mha\_fft\_t spec2wave\_t::ft** [private]

FFT class.

The documentation for this class was generated from the following file:

**5.355.3.11 MHAWindow::base\_t spec2wave\_t::postwindow** [private]

spec2wave.cpp

5.356 spec\_fader\_t Class Reference

**Public Member Functions** 

- spec\_fader\_t (unsigned int ch, mha\_real\_t fr, MHAParser::vfloat\_t &ng, MHAParser ← ::float\_t &t)
- $\sim$ spec\_fader\_t ()

# **Public Attributes**

- unsigned int nch
- mha\_real\_t \* gains
- · unsigned int fr

## 5.356.1 Constructor & Destructor Documentation


- 5.356.1.2 spec\_fader\_t::~spec\_fader\_t( ) [inline]
- 5.356.2 Member Data Documentation
- 5.356.2.1 unsigned int spec\_fader\_t::nch
- 5.356.2.2 mha\_real\_t\* spec\_fader\_t::gains
- 5.356.2.3 unsigned int spec\_fader\_t::fr

The documentation for this class was generated from the following file:

# · fader\_spec.cpp

# 5.357 speechnoise\_t Class Reference

Inheritance diagram for speechnoise\_t:

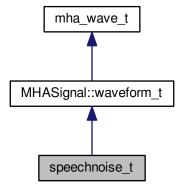

## **Public Types**

### **Public Member Functions**

speechnoise\_t (float duration, float srate, unsigned int channels, speechnoise\_t
 ::noise\_type\_t noise\_type=speechnoise\_t::mha)

 speechnoise\_t (unsigned int length\_samples, float srate, unsigned int channels, speechnoise\_t::noise\_type\_t noise\_type=speechnoise\_t::mha)

### **Private Member Functions**

• void **creator** (**speechnoise\_t::noise\_type\_t** noise\_type, float srate)

### **Additional Inherited Members**

```
5.357.1 Member Enumeration Documentation
```

```
5.357.1.1 enum speechnoise_t::noise_type_t
```

### **Enumerator**

mha

olnoise

LTASS\_combined

LTASS\_female

LTASS\_male

white

pink

brown

TEN SPL

TEN\_SPL\_250\_8k

TEN\_SPL\_50\_16k

sin125

sin250

sin500

sin1k

sin2k

sin4k

sin8k


### 5.357.2 Constructor & Destructor Documentation

The documentation for this class was generated from the following files:

- · speechnoise.h
- · speechnoise.cpp

### 5.358 steerbf Class Reference

Inheritance diagram for steerbf:

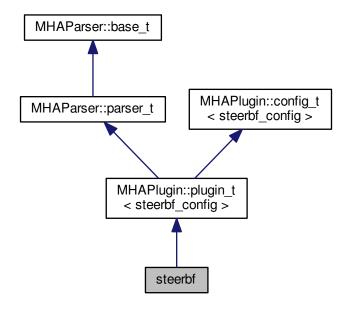

### **Public Member Functions**

steerbf (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_← name)

Constructs our plugin.

- ∼steerbf ()
- mha\_spec\_t \* process (mha\_spec\_t \*)

Defers to configuration class.

void prepare (mhaconfig\_t &)

Plugin preparation.

• void release (void)

### **Public Attributes**

- MHAParser::string\_t bf\_src
- parser\_int\_dyn angle\_ind
- MHAParser::string\_t angle\_src

### **Private Member Functions**

void update\_cfg ()

### **Private Attributes**

MHAEvents::patchbay\_t< steerbf > patchbay

### **Additional Inherited Members**

```
5.358.1 Constructor & Destructor Documentation
```

```
5.358.1.1 steerbf::steerbf (

algo_comm_t & ac,

const std::string & chain_name,

const std::string & algo_name )
```

## Constructs our plugin.

```
5.358.1.2 steerbf::∼steerbf ( )
```

5.358.2 Member Function Documentation

```
5.358.2.1 mha_spec_t * steerbf::process (
mha_spec_t * signal )
```

Defers to configuration class.

## Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of	1
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin\_t < steerbf\_config > (p. 705).

Reimplemented from MHAPlugin::plugin\_t< steerbf\_config > (p. 706).

```
5.358.2.4 void steerbf::update_cfg( ) [private]
```

5.358.3 Member Data Documentation

```
5.358.3.1 MHAParser::string_t steerbf::bf_src
```

```
5.358.3.2 parser_int_dyn steerbf::angle_ind
```

5.358.3.3 MHAParser::string\_t steerbf::angle\_src

**5.358.3.4** MHAEvents::patchbay\_t<steerbf> steerbf::patchbay [private]

The documentation for this class was generated from the following files:

- · steerbf.h
- steerbf.cpp

# 5.359 steerbf\_config Class Reference

**Public Member Functions** 

- steerbf\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, steerbf) \*steerbf)
- ~steerbf\_config ()
- mha\_spec\_t \* process (mha\_spec\_t \*)

### **Private Attributes**

- unsigned int nchan
- unsigned int nfreq
- MHASignal::spectrum t outSpec
- mha\_spec\_t bf\_vec
- unsigned int nangle
- steerbf \* \_steerbf
- algo\_comm\_t & ac
- std::string bf\_src\_copy


```
5.359.1 Constructor & Destructor Documentation
5.359.1.1 steerbf_config::steerbf_config (
                      algo_comm_t & ac,
                      const mhaconfig t in_cfg,
                      steerbf * steerbf )
5.359.1.2 steerbf_config::~steerbf_config()
5.359.2 Member Function Documentation
5.359.2.1
         mha_spec_t * steerbf_config::process (
                      mha_spec_t * inSpec )
5.359.3 Member Data Documentation
5.359.3.1
         unsigned int steerbf_config::nchan [private]
5.359.3.2 unsigned int steerbf_config::nfreq [private]
5.359.3.3
         MHASignal::spectrum_t steerbf_config::outSpec [private]
5.359.3.4 mha_spec_t steerbf_config::bf_vec [private]
5.359.3.5 unsigned int steerbf_config::nangle [private]
5.359.3.6 steerbf* steerbf_config::_steerbf [private]
5.359.3.7
         algo_comm_t& steerbf_config::ac [private]
5.359.3.8 std::string steerbf_config::bf_src_copy [private]
```

The documentation for this class was generated from the following files:

- · steerbf.h
- steerbf.cpp

## 5.360 testplugin::ac\_parser\_t Class Reference

Inheritance diagram for testplugin::ac\_parser\_t:

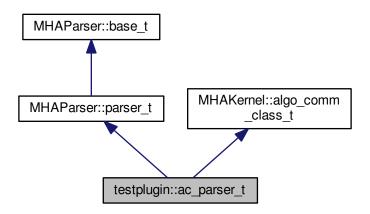

### **Public Types**

### **Public Member Functions**

- ac\_parser\_t ()
- void do\_insert\_var ()
   Insert variable into AC space.
- void do\_get\_var ()

## **Public Attributes**

- MHAParser::string\_t insert\_var
- MHAParser::string\_t get\_var
- MHAParser::kw\_t data\_type
- MHAParser::int\_t num\_entries
- MHAParser::int\_t stride
- MHAParser::string\_t char\_data
- MHAParser::vint\_t int\_data
- MHAParser::vfloat\_t float\_data
- MHAParser::vcomplex\_t complex\_data
- MHAEvents::patchbay\_t< ac\_parser\_t > patchbay

### **Additional Inherited Members**

```
5.360.1 Member Enumeration Documentation
```

5.360.1.1 enum testplugin::ac parser t::data type t

### **Enumerator**

```
_MHA_AC_CHAR
_MHA_AC_INT
_MHA_AC_MHAREAL
_MHA_AC_FLOAT
_MHA_AC_DOUBLE
_MHA_AC_MHACOMPLEX
unknown
```

5.360.2 Constructor & Destructor Documentation

```
5.360.2.1 testplugin::ac_parser_t::ac_parser_t( ) [inline]
```

5.360.3 Member Function Documentation

**5.360.3.1** void testplugin::ac\_parser\_t::do\_insert\_var( ) [inline]

Insert variable into AC space.

This leaks memory by design, as the plugin is for testing only

```
5.360.3.2 void testplugin::ac_parser_t::do_get_var( ) [inline]
```

5.360.4 Member Data Documentation

5.360.4.1 MHAParser::string\_t testplugin::ac\_parser\_t::insert\_var

5.360.4.2 MHAParser::string\_t testplugin::ac\_parser\_t::get\_var

5.360.4.3 MHAParser::kw\_t testplugin::ac\_parser\_t::data\_type

5.360.4.4 MHAParser::int\_t testplugin::ac\_parser\_t::num\_entries

5.360.4.5 MHAParser::int t testplugin::ac\_parser\_t::stride

5.360.4.6 MHAParser::string\_t testplugin::ac\_parser\_t::char\_data

5.360.4.7 MHAParser::vint\_t testplugin::ac\_parser\_t::int\_data

5.360.4.8 MHAParser::vfloat\_t testplugin::ac\_parser\_t::float\_data

5.360.4.9 MHAParser::vcomplex\_t testplugin::ac\_parser\_t::complex\_data


5.360.4.10 MHAEvents::patchbay t<ac parser t> testplugin::ac\_parser\_t::patchbay

The documentation for this class was generated from the following file:

## testplugin.cpp

# 5.361 testplugin::config\_parser\_t Class Reference

Inheritance diagram for testplugin::config\_parser\_t:

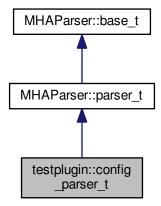

## **Public Member Functions**

- void setlock (const bool &b)
- config\_parser\_t ()
- mhaconfig\_t get () const
- void set (mhaconfig\_t c)

### **Public Attributes**

- MHAParser::int\_t channels
- MHAParser::kw\_t domain
- MHAParser::int\_t fragsize
- MHAParser::int\_t wndlen
- MHAParser::int\_t fftlen
- MHAParser::float\_t srate

### **Additional Inherited Members**

# 5.361.1 Constructor & Destructor Documentation

## **5.361.1.1** testplugin::config\_parser\_t::config\_parser\_t( ) [inline]

```
5.361.2 Member Function Documentation
5.361.2.1 void testplugin::config_parser_t::setlock (
                      const bool & b ) [inline]
5.361.2.2 mhaconfig_t testplugin::config_parser_t::get() const [inline]
5.361.2.3 void testplugin::config parser t::set (
                      mhaconfig_t c ) [inline]
5.361.3 Member Data Documentation
5.361.3.1 MHAParser::int t testplugin::config_parser_t::channels
5.361.3.2 MHAParser::kw t testplugin::config_parser_t::domain
5.361.3.3 MHAParser::int_t testplugin::config_parser_t::fragsize
```

5.361.3.6 MHAParser::float t testplugin::config\_parser\_t::srate

5.361.3.4 MHAParser::int t testplugin::config\_parser\_t::wndlen


5.361.3.5 MHAParser::int t testplugin::config\_parser\_t::fftlen

The documentation for this class was generated from the following file:

## · testplugin.cpp

# 5.362 testplugin::if\_t Class Reference

Inheritance diagram for testplugin::if\_t:

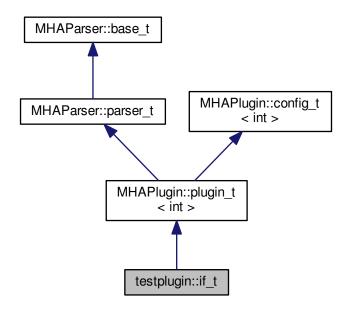

## **Public Member Functions**

- if\_t (const algo\_comm\_t &iac, const std::string &ith, const std::string &ial)
- mha\_spec\_t \* process (mha\_spec\_t \*s\_in)
- mha\_wave\_t \* process (mha\_wave\_t \*s\_in)
- void prepare (mhaconfig\_t &)

### **Private Member Functions**

- void test\_prepare ()
- void test\_process ()

## **Private Attributes**

- config\_parser\_t config\_in
- · config\_parser\_t config\_out
- ac\_parser\_t ac
- signal\_parser\_t signal
- MHAParser::bool\_t \_prepare
- MHAEvents::patchbay\_t< if\_t > patchbay
- MHAParser::mhapluginloader\_t plug

### **Additional Inherited Members**


```
5.362.1 Constructor & Destructor Documentation
5.362.1.1 testplugin::if_t::if_t (
                      const algo_comm_t & iac,
                      const std::string & ith,
                      const std::string & ial )
5.362.2 Member Function Documentation
5.362.2.1
         mha_spec_t* testplugin::if_t::process (
                      mha_spec_t * s_in ) [inline]
5.362.2.2 mha wave t* testplugin::if_t::process (
                      mha_wave_t * s_in ) [inline]
5.362.2.3 void testplugin::if_t::prepare (
                      mhaconfig_t & ) [inline], [virtual]
Implements MHAPlugin::plugin_t< int > (p. 705).
5.362.2.4 void testplugin::if_t::test_prepare() [private]
5.362.2.5 void testplugin::if_t::test_process() [private]
5.362.3 Member Data Documentation
5.362.3.1 config_parser_t testplugin::if_t::config_in [private]
         config parser t testplugin::if_t::config_out [private]
5.362.3.2
5.362.3.3 ac_parser_t testplugin::if_t::ac [private]
5.362.3.4 signal_parser_t testplugin::if_t::signal [private]
5.362.3.5 MHAParser::bool t testplugin::if_t::_prepare [private]
5.362.3.6 MHAEvents::patchbay_t<if_t> testplugin::if_t::patchbay [private]
5.362.3.7 MHAParser::mhapluginloader_t testplugin::if_t::plug [private]
```

The documentation for this class was generated from the following file:

## testplugin.cpp

5.363 testplugin::signal\_parser\_t Class Reference

Inheritance diagram for testplugin::signal\_parser\_t:

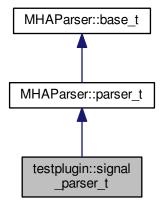

## **Public Member Functions**

signal\_parser\_t ()

## **Public Attributes**

- MHAParser::mfloat\_t input\_wave
- MHAParser::mcomplex t input spec
- MHAParser::mfloat mon t output wave
- MHAParser::mcomplex\_mon\_t output\_spec

### **Additional Inherited Members**

- 5.363.1 Constructor & Destructor Documentation
- **5.363.1.1** testplugin::signal\_parser\_t::signal\_parser\_t( ) [inline]
- 5.363.2 Member Data Documentation
- 5.363.2.1 MHAParser::mfloat\_t testplugin::signal\_parser\_t::input\_wave
- 5.363.2.2 MHAParser::mcomplex\_t testplugin::signal\_parser\_t::input\_spec
- 5.363.2.3 MHAParser::mfloat\_mon\_t testplugin::signal\_parser\_t::output\_wave
- 5.363.2.4 MHAParser::mcomplex mon t testplugin::signal\_parser\_t::output\_spec

The documentation for this class was generated from the following file:

testplugin.cpp

## 5.364 timo\_AC Class Reference

#### **Public Member Functions**

- timo AC (algo comm t &ac, unsigned int fftlen, unsigned int nfreq, unsigned int nchan)
- void copy ()
- void insert ()

### **Public Attributes**

```
    MHA_AC::waveform_t gamma_post_AC
```

- MHA AC::waveform t xi ml AC
- MHA\_AC::spectrum\_t lambda\_ml\_AC
- MHA\_AC::spectrum\_t lambda\_ml\_ceps\_AC
- MHA\_AC::waveform\_t lambda\_ml\_smooth\_AC
- MHA\_AC::waveform\_t max\_q\_AC
- MHA\_AC::waveform\_t max\_val\_AC
- · MHA AC::waveform t pitch set first AC
- MHA\_AC::waveform\_t pitch\_set\_last\_AC
- MHA\_AC::waveform\_t alpha\_hat\_AC
- MHA\_AC::waveform\_t alpha\_frame\_AC
- MHA\_AC::spectrum\_t lambda\_ceps\_AC
- MHA\_AC::spectrum\_t log\_lambda\_spec\_AC
- MHA AC::waveform t lambda spec AC
- MHA\_AC::waveform\_t xi\_est\_AC
- MHA\_AC::waveform\_t gain\_wiener\_AC
- MHA AC::waveform t winF0 AC
- MHA AC::waveform t SPP

## 5.364.1 Constructor & Destructor Documentation

## 5.364.2 Member Function Documentation

```
5.364.2.1 void timo_AC::copy ( )
```

5.364.2.2 void timo\_AC::insert ( )

### 5.364.3 Member Data Documentation

5.364.3.1	MHA_AC::waveform_t timo_AC::gamma_post_AC
5.364.3.2	MHA_AC::waveform_t timo_AC::xi_ml_AC
5.364.3.3	MHA_AC::spectrum_t timo_AC::lambda_ml_AC
5.364.3.4	MHA_AC::spectrum_t timo_AC::lambda_ml_ceps_AC
5.364.3.5	MHA_AC::waveform_t timo_AC::lambda_ml_smooth_AC
5.364.3.6	MHA_AC::waveform_t timo_AC::max_q_AC
5.364.3.7	MHA_AC::waveform_t timo_AC::max_val_AC
5.364.3.8	MHA_AC::waveform_t timo_AC::pitch_set_first_AC
5.364.3.9	MHA_AC::waveform_t timo_AC::pitch_set_last_AC
5.364.3.10	MHA_AC::waveform_t timo_AC::alpha_hat_AC
5.364.3.11	MHA_AC::waveform_t timo_AC::alpha_frame_AC
5.364.3.12	MHA_AC::spectrum_t timo_AC::lambda_ceps_AC
5.364.3.13	MHA_AC::spectrum_t timo_AC::log_lambda_spec_AC
5.364.3.14	MHA_AC::waveform_t timo_AC::lambda_spec_AC
5.364.3.15	MHA_AC::waveform_t timo_AC::xi_est_AC
5.364.3.16	MHA_AC::waveform_t timo_AC::gain_wiener_AC
5.364.3.17	MHA_AC::waveform_t timo_AC::winF0_AC
5.364.3.18	MHA_AC::waveform_t timo_AC::SPP

The documentation for this class was generated from the following files:

- · timoconfig.h
- timoconfig.cpp

## 5.365 timo\_params Class Reference

#### **Public Member Functions**

timo\_params (const mhaconfig\_t &\_in\_cfg, float \_xi\_min\_db, float \_f0\_low, float \_f0\_ ← high, float \_delta\_pitch, float \_lambda\_thresh, float \_alpha\_pitch, float \_beta\_const, float \_kappa\_const, float \_prior\_q, float \_xi\_opt\_db, float \_gain\_min\_db, std::vector< float > &\_winF0, std::vector< float > &\_alpha\_const\_vals, std::vector< float > &\_alpha\_const ← \_limits\_hz, std::string &\_noisePow\_name)

#### **Public Attributes**

- const mhaconfig\_t in\_cfg
- float xi min db
- · float f0 low
- float f0 high
- float delta\_pitch
- float lambda\_thresh
- float alpha\_pitch
- float beta\_const
- float kappa\_const
- float prior\_q
- · float xi opt db
- float gain min db
- std::vector< float > winF0
- std::vector< float > alpha const vals
- std::vector< float > alpha\_const\_limits\_hz
- std::string noisePow name

#### 5.365.1 Constructor & Destructor Documentation

```
5.365.1.1 timo_params::timo_params (
                        const mhaconfig_t & _in_cfg,
                        float _xi_min_db,
                        float _f0_low,
                        float _f0_high,
                        float delta pitch,
                        float _lambda_thresh,
                        float _alpha_pitch,
                        float _beta_const,
                        float kappa const,
                        float _prior_q,
                        float _xi_opt_db,
                        float _gain_min_db,
                        std::vector< float > & _winF0,
                        std::vector< float > & _alpha_const_vals,
                        std::vector< float > & _alpha_const_limits_hz,
                        std::string & _noisePow_name ) [inline]
```

```
5.365.2 Member Data Documentation
5.365.2.1 const mhaconfig_t timo_params::in_cfg
5.365.2.2 float timo_params::xi_min_db
5.365.2.3 float timo_params::f0_low
5.365.2.4 float timo_params::f0_high
5.365.2.5 float timo_params::delta_pitch
5.365.2.6 float timo_params::lambda_thresh
5.365.2.7 float timo_params::alpha_pitch
5.365.2.8 float timo_params::beta_const
5.365.2.9 float timo_params::kappa_const
5.365.2.10 float timo_params::prior_q
5.365.2.11 float timo_params::xi_opt_db
5.365.2.12 float timo_params::gain_min_db
5.365.2.13 std::vector<float> timo_params::winF0
5.365.2.14 std::vector<float> timo_params::alpha_const_vals
5.365.2.15 std::vector<float> timo_params::alpha_const_limits_hz
5.365.2.16 std::string timo_params::noisePow_name
```

The documentation for this class was generated from the following file:

## · timoconfig.h

## 5.366 timoConfig Class Reference

**Public Member Functions** 

- timoConfig (algo\_comm\_t &ac, timo\_params &params)
- ~timoConfig ()
- mha\_spec\_t \* process (mha\_spec\_t \*)

#### **Private Member Functions**

void copy AC (timo AC &tAC)

#### **Private Attributes**

- · algo\_comm\_t ac
- timo params params
- · unsigned int fftlen
- mha\_fft\_t mha\_fft
- unsigned int nfreq
- · unsigned int nchan
- · timo AC tAC
- float ola\_powspec\_scale
- float q\_low
- float q\_high
- MHASignal::waveform\_t winF0
- float xi min
- float gain\_min
- MHASignal::waveform\_t alpha\_const
- MHASignal::waveform\_t alpha\_prev
- MHASignal::waveform\_t noisePow
- MHASignal::waveform t powSpec
- MHASignal::waveform\_t gamma\_post
- MHASignal::waveform t xi ml
- MHASignal::spectrum\_t lambda\_ml\_full
- MHASignal::spectrum t lambda ml ceps
- MHASignal::waveform\_t lambda\_ml\_smooth
- · MHASignal::waveform talpha hat
- MHASignal::waveform\_t alpha\_frame
- MHASignal::spectrum\_t lambda\_ceps
- MHASignal::waveform\_t lambda\_ceps\_prev
- MHASignal::spectrum t log lambda spec
- MHASignal::waveform t lambda spec
- MHASignal::waveform t xi est
- MHASignal::waveform\_t gain\_wiener
- MHASignal::spectrum t spec out
- double \* max\_val
- int \* max\_q
- int \* pitch\_set\_first
- int \* pitch\_set\_last
- float priorFact
- float xiOpt
- float logGLRFact
- float GLRexp
- MHASignal::waveform\_t GLR

```
5.366.1 Constructor & Destructor Documentation
5.366.1.1 timoConfig::timoConfig (
                     algo_comm_t & ac,
                     timo_params & params )
5.366.1.2 timoConfig::~timoConfig()
5.366.2 Member Function Documentation
         mha_spec_t * timoConfig::process (
                     mha_spec_t * noisyFrame )
5.366.2.2 void timoConfig::copy_AC (
                     timo_AC & tAC ) [private]
5.366.3 Member Data Documentation
5.366.3.1
         algo_comm_t timoConfig::ac [private]
5.366.3.2 timo_params timoConfig::params [private]
5.366.3.3
         unsigned int timoConfig::fftlen [private]
5.366.3.4
         mha_fft_t timoConfig::mha_fft [private]
5.366.3.5
         unsigned int timoConfig::nfreq [private]
5.366.3.6
         unsigned int timoConfig::nchan [private]
5.366.3.7
         timo AC timoConfig::tAC [private]
5.366.3.8
         float timoConfig::ola_powspec_scale [private]
5.366.3.9 float timoConfig::q_low [private]
5.366.3.10 float timoConfig::q_high [private]
5.366.3.11 MHASignal::waveform_t timoConfig::winF0 [private]
5.366.3.12 float timoConfig::xi_min [private]
5.366.3.13 float timoConfig::gain_min [private]
```


```
5.366.3.14
          MHASignal::waveform ttimoConfig::alpha const [private]
5.366.3.15
         MHASignal::waveform_t timoConfig::alpha_prev [private]
5.366.3.16
         MHASignal::waveform t timoConfig::noisePow [private]
5.366.3.17
         MHASignal::waveform t timoConfig::powSpec [private]
5.366.3.18
         MHASignal::waveform_t timoConfig::gamma_post [private]
5.366.3.19
          MHASignal::waveform ttimoConfig::xi_ml [private]
5.366.3.20
         MHASignal::spectrum_t timoConfig::lambda_ml_full [private]
5.366.3.21
         MHASignal::spectrum t timoConfig::lambda ml ceps [private]
5.366.3.22
         MHASignal::waveform t timoConfig::lambda ml smooth [private]
5.366.3.23
         MHASignal::waveform t timoConfig::alpha_hat [private]
5.366.3.24
          MHASignal::waveform ttimoConfig::alpha_frame [private]
5.366.3.25
          MHASignal::spectrum_t timoConfig::lambda_ceps [private]
5.366.3.26
         MHASignal::waveform_t timoConfig::lambda_ceps_prev [private]
5.366.3.27
         MHASignal::spectrum ttimoConfig::log_lambda_spec [private]
5.366.3.28
         MHASignal::waveform t timoConfig::lambda_spec [private]
5.366.3.29
         MHASignal::waveform_t timoConfig::xi_est [private]
5.366.3.30
         MHASignal::waveform_t timoConfig::gain_wiener [private]
5.366.3.31
         MHASignal::spectrum_t timoConfig::spec_out [private]
5.366.3.32 double* timoConfig::max_val [private]
5.366.3.33 int* timoConfig::max_q [private]
5.366.3.34 int* timoConfig::pitch_set_first [private]
5.366.3.35 int* timoConfig::pitch set last [private]
5.366.3.36 float timoConfig::priorFact [private]
5.366.3.37 float timoConfig::xiOpt [private]
5.366.3.38 float timoConfig::logGLRFact [private]
5.366.3.39 float timoConfig::GLRexp [private]
5.366.3.40 MHASignal::waveform ttimoConfig::GLR [private]
```

The documentation for this class was generated from the following files:

- · timoconfig.h
- timoconfig.cpp

# 5.367 timoSmooth Class Reference

Inheritance diagram for timoSmooth:

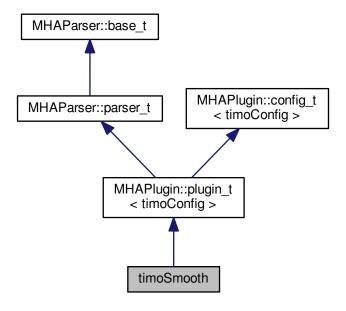

### **Public Member Functions**

• timoSmooth (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

Constructs the beamforming plugin.

- ∼timoSmooth ()
- mha\_spec\_t \* process (mha\_spec\_t \*)

This plugin implements noise reduction using spectral subtraction: by nonnegative subtraction from the output magnitude of the estimated noise magnitude spectrum.

void prepare (mhaconfig\_t &)

Plugin preparation.

void release (void)

### **Private Member Functions**

- void update\_cfg ()
- void on\_model\_param\_valuechanged ()

#### **Private Attributes**

```
    MHAParser::float_t xi_min_db
```

MHAParser::float\_t f0\_low

- MHAParser::float\_t f0\_high
- MHAParser::float t delta pitch
- MHAParser::float\_t lambda\_thresh
- · MHAParser::float t alpha pitch
- MHAParser::float t beta const
- MHAParser::float\_t kappa\_const
- MHAParser::float\_t gain\_min\_db
- MHAParser::vfloat\_t win\_f0
- MHAParser::vfloat\_t alpha\_const\_vals
- MHAParser::vfloat\_t alpha\_const\_limits\_hz
- MHAParser::string\_t noisePow\_name
- MHAParser::parser\_t spp
- MHAParser::float\_t prior\_q
- MHAParser::float\_t xi\_opt\_db
- MHAEvents::patchbay\_t< timoSmooth > patchbay
- bool prepared

#### **Additional Inherited Members**

```
5.367.1 Constructor & Destructor Documentation
```

Constructs the beamforming plugin.

```
5.367.1.2 timoSmooth::~timoSmooth()
```

5.367.2 Member Function Documentation

```
5.367.2.1 mha_spec_t * timoSmooth::process (
mha_spec_t * signal )
```

This plugin implements noise reduction using spectral subtraction: by nonnegative subtraction from the output magnitude of the estimated noise magnitude spectrum.

### **Parameters**

signal Pointer to the input signal structure.

#### **Returns**

Returns a pointer to the input signal structure, with a the signal modified by this plugin.

Plugin preparation.

This plugin checks that the input signal has the spectral domain and contains at least one channel

#### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

```
Implements MHAPlugin::plugin_t< timoConfig > (p. 705).
```

Reimplemented from **MHAPlugin::plugin\_t**< **timoConfig** > (p. 706).

```
5.367.2.4 void timoSmooth::update_cfg( ) [private]
```

- **5.367.2.5 void timoSmooth::on\_model\_param\_valuechanged()** [private]
- 5.367.3 Member Data Documentation
- **5.367.3.1** MHAParser::float\_t timoSmooth::xi\_min\_db [private]
- **5.367.3.2** MHAParser::float\_t timoSmooth::f0\_low [private]
- **5.367.3.3** MHAParser::float\_t timoSmooth::f0\_high [private]
- **5.367.3.4** MHAParser::float\_t timoSmooth::delta\_pitch [private]
- **5.367.3.5 MHAParser::float\_t timoSmooth::lambda\_thresh** [private]
- **5.367.3.6** MHAParser::float\_t timoSmooth::alpha\_pitch [private]
- **5.367.3.7 MHAParser::float ttimoSmooth::beta\_const** [private]


```
5.367.3.8 MHAParser::float_t timoSmooth::kappa_const [private]
5.367.3.9 MHAParser::float_t timoSmooth::gain_min_db [private]
5.367.3.10 MHAParser::vfloat_t timoSmooth::win_f0 [private]
5.367.3.11 MHAParser::vfloat_t timoSmooth::alpha_const_vals [private]
5.367.3.12 MHAParser::vfloat_t timoSmooth::alpha_const_limits_hz [private]
5.367.3.13 MHAParser::string_t timoSmooth::noisePow_name [private]
5.367.3.14 MHAParser::parser_t timoSmooth::spp [private]
5.367.3.15 MHAParser::float_t timoSmooth::prior_q [private]
5.367.3.16 MHAParser::float_t timoSmooth::xi_opt_db [private]
5.367.3.17 MHAEvents::patchbay_t<timoSmooth> timoSmooth::patchbay [private]
5.367.3.18 bool timoSmooth::prepared [private]
```

The documentation for this class was generated from the following files:

- · timosmooth.h
- · timoSmooth.cpp

## 5.368 us t Class Reference

Inheritance diagram for us\_t:

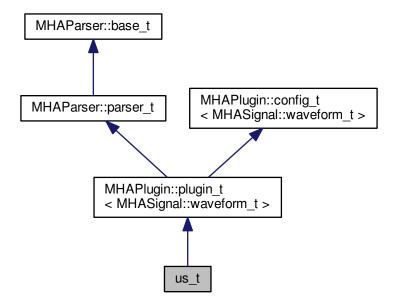

**Public Member Functions** 

```
    us_t (algo_comm_t, std::string, std::string)
    mha_wave_t * process (mha_wave_t *)
    void prepare (mhaconfig_t &)
    void release ()
```

#### **Private Attributes**

- MHAParser::int\_t ratio
- MHAFilter::iir\_filter\_t antialias

**Additional Inherited Members** 


```
5.368.1 Constructor & Destructor Documentation
5.368.1.1 us_t::us_t (
                     algo_comm_t iac,
                     std::string,
                     std::string )
5.368.2 Member Function Documentation
5.368.2.1 mha_wave_t * us_t::process (
                     mha_wave_t * s )
5.368.2.2 void us_t::prepare (
                     mhaconfig_t & cf ) [virtual]
Implements MHAPlugin::plugin_t< MHASignal::waveform_t > (p. 705).
5.368.2.3 void us_t::release() [virtual]
Reimplemented from MHAPlugin::plugin t < MHASignal::waveform t > (p. 706).
5.368.3 Member Data Documentation
5.368.3.1 MHAParser::int_t us_t::ratio [private]
5.368.3.2 MHAFilter::iir_filter_t us_t::antialias [private]
```

The documentation for this class was generated from the following file:

upsample.cpp

# 5.369 wave2spec\_if\_t Class Reference

Inheritance diagram for wave2spec\_if\_t:

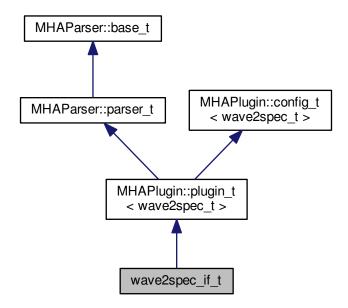

#### **Public Member Functions**

- wave2spec\_if\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- void prepare (mhaconfig\_t &)
- void process (mha\_wave\_t \*, mha\_spec\_t \*\*)
- void process (mha\_wave\_t \*, mha\_wave\_t \*\*)

# **Private Member Functions**

• void update ()

# **Private Attributes**

- MHAEvents::patchbay\_t< wave2spec\_if\_t > patchbay
- MHAParser::int\_t nfft
- MHAParser::int t nwnd
- MHAParser::float t wndpos
- windowselector\_t window\_config
- MHAParser::bool\_t return\_wave
- std::string algo

**Additional Inherited Members** 


```
5.369.1 Constructor & Destructor Documentation
5.369.1.1 wave2spec_if_t::wave2spec_if_t (
                     const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & ialg )
5.369.2 Member Function Documentation
5.369.2.1 void wave2spec_if_t::prepare (
                     mhaconfig_t & t ) [virtual]
Implements MHAPlugin::plugin_t< wave2spec_t > (p. 705).
5.369.2.2 void wave2spec_if_t::process (
                     mha_wave_t * wave_in,
                     mha_spec_t ** sout )
5.369.2.3 void wave2spec_if_t::process (
                     mha_wave_t * wave_in,
                     mha_wave_t ** sout )
5.369.2.4 void wave2spec_if_t::update( ) [private]
5.369.3 Member Data Documentation
5.369.3.1
         MHAEvents::patchbay t<wave2spec if t> wave2spec if t::patchbay [private]
5.369.3.2 MHAParser::int_t wave2spec_if_t::nfft [private]
5.369.3.3 MHAParser::int t wave2spec_if_t::nwnd [private]
5.369.3.4 MHAParser::float_t wave2spec_if_t::wndpos [private]
5.369.3.5 windowselector_t wave2spec_if_t::window_config [private]
5.369.3.6 MHAParser::bool_t wave2spec_if_t::return_wave [private]
5.369.3.7 std::string wave2spec_if_t::algo [private]
```

The documentation for this class was generated from the following file:

# wave2spec.cpp

# 5.370 wave2spec\_t Class Reference

Inheritance diagram for wave2spec\_t:

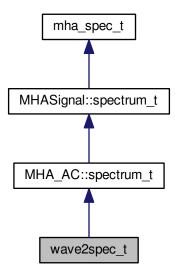

## **Public Member Functions**

- wave2spec\_t (unsigned int nfft, unsigned int nwnd\_, unsigned int nwndshift\_, unsigned int nch, mha\_real\_t wndpos, const MHAWindow::base\_t &window, algo\_comm\_t ac, std::string algo)
- mha\_spec\_t \* process (mha\_wave\_t \*)
- ~wave2spec\_t ()

## **Private Member Functions**

void calc\_pre\_wnd (MHASignal::waveform\_t &, const MHASignal::waveform\_t &)

#### **Private Attributes**

- unsigned int nwnd
- · unsigned int nwndshift
- mha\_fft\_t ft

FFT class.

unsigned int npad1

length of zero padding before window

unsigned int npad2

## length of zero padding after window

- MHAWindow::base\_t window
- MHASignal::waveform t calc in
- MHASignal::waveform\_t in\_buf
- MHASignal::spectrum\_t spec\_in

non-interleaved, complex, fftlen

#### **Additional Inherited Members**

```
5.370.1 Constructor & Destructor Documentation
5.370.1.1 wave2spec_t::wave2spec_t (
                      unsigned int nfft.
                      unsigned int nwnd_,
                      unsigned int nwndshift_,
                      unsigned int nch,
                      mha real t wndpos,
                      const MHAWindow::base_t & window,
                      algo_comm_t ac,
                      std::string algo )
5.370.1.2 wave2spec_t::~wave2spec_t()
5.370.2 Member Function Documentation
5.370.2.1 mha_spec_t * wave2spec_t::process (
                      mha_wave_t * wave_in )
5.370.2.2 void wave2spec_t::calc_pre_wnd (
                      MHASignal::waveform_t & dest,
                      const MHASignal::waveform_t & src ) [private]
5.370.3 Member Data Documentation
5.370.3.1 unsigned int wave2spec_t::nwnd [private]
5.370.3.2 unsigned int wave2spec_t::nwndshift [private]
5.370.3.3 mha_fft_t wave2spec_t::ft [private]
FFT class.
5.370.3.4 unsigned int wave2spec_t::npad1 [private]
```

length of zero padding before window

**5.370.3.5** unsigned int wave2spec\_t::npad2 [private]

length of zero padding after window

```
5.370.3.6 MHAWindow::base_t wave2spec_t::window [private]
```

**5.370.3.7** MHASignal::waveform\_t wave2spec\_t::calc\_in [private]

**5.370.3.8** MHASignal::waveform\_t wave2spec\_t::in\_buf [private]

**5.370.3.9** MHASignal::spectrum\_t wave2spec\_t::spec\_in [private]


non-interleaved, complex, fftlen

The documentation for this class was generated from the following file:

# wave2spec.cpp

# 5.371 wavrec t Class Reference

Inheritance diagram for wavrec\_t:

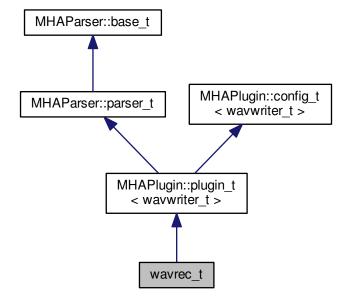

#### **Public Member Functions**

```
mha_wave_t * process (mha_wave_t *)
```

- void prepare (mhaconfig\_t &cf)
- void release ()
- wavrec t (const algo comm t &iac, const std::string &, const std::string &)

#### **Private Member Functions**

void start\_new\_session ()

#### **Private Attributes**

```
    MHAParser::bool_t record
```

- MHAParser::int t fifolen
- MHAParser::int\_t minwrite
- MHAParser::string\_t prefix
- MHAParser::bool\_t use\_date
- MHAEvents::patchbay\_t< wavrec\_t > patchbay

## **Additional Inherited Members**

```
5.371.1 Constructor & Destructor Documentation
```

5.371.2 Member Function Documentation

```
5.371.2.1 mha_wave_t * wavrec_t::process ( mha_wave_t * s )
```

Implements MHAPlugin::plugin\_t< wavwriter\_t > (p. 705).

```
5.371.2.3 void wavrec_t::release() [virtual]
```

Reimplemented from MHAPlugin::plugin\_t< wavwriter\_t > (p. 706).

```
5.371.2.4 void wavrec_t::start_new_session( ) [private]
5.371.3 Member Data Documentation
5.371.3.1 MHAParser::bool_t wavrec_t::record [private]
5.371.3.2 MHAParser::int_t wavrec_t::fifolen [private]
5.371.3.3 MHAParser::int_t wavrec_t::minwrite [private]
5.371.3.4 MHAParser::string_t wavrec_t::prefix [private]
5.371.3.5 MHAParser::bool_t wavrec_t::use_date [private]
5.371.3.6 MHAEvents::patchbay t<wavrec_t> wavrec_t::patchbay [private]
```

The documentation for this class was generated from the following file:

· wavrec.cpp

# 5.372 wavwriter\_t Class Reference

**Public Member Functions** 

- wavwriter\_t (bool active, const mhaconfig\_t &cf, unsigned int fifosize, unsigned int minwrite, const std::string &prefix, bool use\_date)
- ~wavwriter\_t ()
- void process (mha\_wave\_t \*)

**Private Member Functions** 

void write\_thread ()

**Static Private Member Functions** 

static void \* write\_thread (void \*this\_)

```
Private Attributes
```

```
    bool close session

    bool act

    mhaconfig_t cf_

   • SNDFILE * sf
   mha_fifo_t< mha_real_t > fifo

    unsigned int minw_

    pthread_t writethread

    float * data
5.372.1 Constructor & Destructor Documentation
5.372.1.1 wavwriter_t::wavwriter_t (
                      bool active,
                      const mhaconfig_t & cf,
                      unsigned int fifosize,
                      unsigned int minwrite,
                      const std::string & prefix,
                      bool use_date )
5.372.1.2 wavwriter_t::~wavwriter_t ( )
5.372.2 Member Function Documentation
5.372.2.1 void wavwriter_t::process (
                      mha_wave_t * s )
5.372.2.2 static void* wavwriter_t::write_thread (
                      void * this_ ) [inline], [static], [private]
5.372.2.3 void wavwriter_t::write_thread() [private]
5.372.3 Member Data Documentation
5.372.3.1 bool wavwriter_t::close_session [private]
5.372.3.2 bool wavwriter_t::act_ [private]
5.372.3.3 mhaconfig_t wavwriter_t::cf_ [private]
5.372.3.4 SNDFILE* wavwriter_t::sf [private]
5.372.3.5 mha_fifo_t<mha_real_t> wavwriter_t::fifo [private]
5.372.3.6 unsigned int wavwriter_t::minw_ [private]
5.372.3.7 pthread_t wavwriter_t::writethread [private]
5.372.3.8 float* wavwriter_t::data [private]
The documentation for this class was generated from the following file:
```

· wavrec.cpp

# 5.373 windowselector\_t Class Reference

A combination of mha parser variables to describe an overalapadd analysis window.

#### **Public Member Functions**

windowselector\_t (const std::string &default\_type)
 constructor creates the mha parser variables that describe an overlapadd analysis window.

∼windowselector t ()

destructor frees window data that were allocated

const MHAWindow::base\_t & get\_window\_data (unsigned length)
 re-computes the window if required.

void insert items (MHAParser::parser t \*p)

insert the window parameters "wndtype", "wndexp", and "userwnd" as mha configuration parameters into the given mha configuration parser.

#### **Public Attributes**

MHAEvents::emitter\_t updated

A collector event that fires when any of the window parameters managed here is written to.

## **Private Member Functions**

void invalidate\_window\_data ()

invalidates any allocated window samples.

void update\_parser ()

invoked when a parser parameter changes.

#### **Private Attributes**

MHAWindow::base t \* wnd

Storage for the window data returned by **get\_window\_data()** (p. 933)

MHAParser::kw\_t wndtype

parser variable for window type

MHAParser::float\_t wndexp

parser variable for window exponent

MHAParser::vfloat\_t userwnd

parser variable for user window samples to use

MHAEvents::patchbay\_t< windowselector\_t > patchbay

patchbay to watch for changes for the parser variables

# 5.373.1 Detailed Description

A combination of mha parser variables to describe an overalapadd analysis window.

Provides a method to get the window samples as an instance of **MHAWindow::base\_t** (p. 810) when needed.

#### 5.373.2 Constructor & Destructor Documentation

constructor creates the mha parser variables that describe an overlapadd analysis window.

#### **Parameters**

default_type	name of the default analysis window type. Must be one of: "rect", "bartlett",	]
	"hanning", "hamming", "blackman"	

```
5.373.2.2 windowselector t::~windowselector t()
```

destructor frees window data that were allocated

#### 5.373.3 Member Function Documentation

```
5.373.3.1 const MHAWindow::base_t & windowselector_t::get_window_data ( unsigned length )
```

re-computes the window if required.

## **Parameters**

the desired window length in samples return the window's samples as a constref to **MHAWindow::base\_t** (p. 810) instance. The referenced instance lives until the window parameters are changed, or this **windowselector\_t** (p. 932) instance is destroyed.

insert the window parameters "wndtype", "wndexp", and "userwnd" as mha configuration parameters into the given mha configuration parser.

#### **Parameters**

*p* The configuration parser where to insert the window parameters. E.g. the plugin wave2spec's interface class.

**5.373.3.3 void windowselector\_t::invalidate\_window\_data()** [private]

invalidates any allocated window samples.

**5.373.3.4 void windowselector\_t::update\_parser( )** [private]

invoked when a parser parameter changes.

Calls **invalidate\_window\_data()** (p. 934) and emits the updated event.

5.373.4 Member Data Documentation

5.373.4.1 MHAEvents::emitter\_t windowselector\_t::updated

A collector event that fires when any of the window parameters managed here is written to.

**5.373.4.2** MHAWindow::base\_t\* windowselector\_t::wnd [private]

Storage for the window data returned by **get\_window\_data()** (p. 933)

**5.373.4.3** MHAParser::kw twindowselector\_t::wndtype [private]

parser variable for window type

**5.373.4.4 MHAParser::float twindowselector\_t::wndexp** [private]

parser variable for window exponent

**5.373.4.5** MHAParser::vfloat\_t windowselector\_t::userwnd [private]

parser variable for user window samples to use

**5.373.4.6 MHAEvents::patchbay\_t**<windowselector\_t> windowselector\_t::patchbay [private]

patchbay to watch for changes for the parser variables

The documentation for this class was generated from the following files:

- · windowselector.h
- · windowselector.cpp

# 6 File Documentation

# 6.1 ac2lsl.cpp File Reference

# Classes

• class ac2lsl::save\_var\_base\_t

Interface for ac to Isl bridge variable.

class ac2lsl::save\_var\_t < T >

Implementation for all ac to Isl bridges except complex types.

class ac2lsl::save\_var\_t< mha\_complex\_t >

Template specialization of the ac2lsl (p. 73) bridge to take care of complex numbers.

class ac2lsl::cfg\_t

Runtime configuration class of the ac2lsl (p. 73) plugin.

class ac2isi::ac2isi t

Plugin class of ac2lsl (p. 73).

## **Namespaces**

ac2lsl

All types for the **ac2lsl** (p. 73) plugins live in this namespace.

## 6.2 ac2osc.cpp File Reference

### **Classes**

class ac2osc\_t

Plugin class of the ac2osc plugin.

# 6.3 ac2wave.cpp File Reference

## Classes

- class ac2wave\_t
- class ac2wave\_if\_t
- 6.4 ac\_monitor\_type.cpp File Reference
- 6.5 ac monitor type.hh File Reference

## Classes

· class acmon::ac\_monitor\_t

A class for converting AC variables to Parser monitors of correct type.

## Namespaces

· acmon

Namespace for displaying ac variables as parser monitors.

6.6 acConcat\_wave.cpp File Reference

## **Macros**

- #define PATCH\_VAR(var) patchbay.connect(&var.valuechanged, this, &acConcat\_← wave::update\_cfg)
- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)
- 6.6.1 Macro Definition Documentation
- 6.6.1.1 #define PATCH\_VAR(

  var ) patchbay.connect(&var.valuechanged, this, &acConcat\_wave::update

  \_cfg)
- 6.6.1.2 #define INSERT\_PATCH(

  var ) insert\_member(var); PATCH\_VAR(var)
- 6.7 acConcat\_wave.h File Reference

#### Classes

- class acConcat\_wave\_config
- class acConcat\_wave
- 6.8 acmon.cpp File Reference

#### Classes

• class acmon::acmon\_t

## **Namespaces**

acmon

Namespace for displaying ac variables as parser monitors.

# 6.9 acPooling\_wave.cpp File Reference

#### **Macros**

- #define PATCH\_VAR(var) patchbay.connect(&var.valuechanged, this, &acPooling\_
   wave::update\_cfg)
- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)
- 6.9.1 Macro Definition Documentation
- 6.9.1.1 #define PATCH\_VAR(

  var ) patchbay.connect(&var.valuechanged, this, &acPooling\_wave::update

  \_cfg)
- 6.9.1.2 #define INSERT\_PATCH(

  var ) insert\_member(var); PATCH\_VAR(var)
- 6.10 acPooling\_wave.h File Reference

#### Classes

- class acPooling\_wave\_config
- class acPooling\_wave
- 6.11 acsave.cpp File Reference

#### **Classes**

- class acsave::save\_var\_t
- class acsave::cfg t
- class acsave::acsave\_t
- struct acsave::mat4head\_t

## Namespaces

acsave

#### Macros

- #define ACSAVE\_FMT\_TXT 0
- #define ACSAVE\_SFMT\_TXT "txt"
- #define ACSAVE FMT MAT4 1
- #define ACSAVE\_SFMT\_MAT4 "mat4"
- #define ACSAVE\_FMT\_M 2
- #define ACSAVE\_SFMT\_M "m"

- 6.11.1 Macro Definition Documentation
- 6.11.1.1 #define ACSAVE FMT TXT 0
- 6.11.1.2 #define ACSAVE\_SFMT\_TXT "txt"
- 6.11.1.3 #define ACSAVE\_FMT\_MAT4 1
- 6.11.1.4 #define ACSAVE SFMT MAT4 "mat4"
- 6.11.1.5 #define ACSAVE FMT M 2
- 6.11.1.6 #define ACSAVE SFMT M "m"
- 6.12 acSteer.cpp File Reference

#### **Macros**

- #define INSERT PATCH(var) insert member(var); PATCH VAR(var)
- 6.12.1 Macro Definition Documentation
- 6.12.1.1 #define PATCH\_VAR(

var ) patchbay.connect(&var.valuechanged, this, &acSteer::update\_cfg)

6.12.1.2 #define INSERT\_PATCH(

var ) insert\_member(var); PATCH\_VAR(var)

6.13 acSteer.h File Reference

#### Classes

- class acSteer config
- · class acSteer
- 6.14 acTransform\_wave.cpp File Reference

### **Macros**

- #define PATCH\_VAR(var) patchbay.connect(&var.valuechanged, this, &acTransform\_
   wave::update\_cfg)
- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)

#### 6.14.1 Macro Definition Documentation

# 6.14.1.1 #define PATCH\_VAR(

var ) patchbay.connect(&var.valuechanged, this, &acTransform\_wave
::update cfg)

6.14.1.2 #define INSERT\_PATCH(

var ) insert\_member(var); PATCH\_VAR(var)

6.15 acTransform\_wave.h File Reference

#### **Classes**

- class acTransform\_wave\_config
- class acTransform\_wave
- 6.16 addsndfile.cpp File Reference

#### **Classes**

• class addsndfile::waveform\_proxy\_t

Class helps to specify which instance of MHASignal\_waveform\_t parent instance is meant in resampled\_soundfile\_t (p. 176).

class addsndfile::resampled\_soundfile\_t

Reads sound from file and resamples it if necessary and wanted.

- · class addsndfile::sndfile\_t
- class addsndfile::level\_adapt\_t
- class addsndfile::addsndfile\_if\_t

## **Namespaces**

· addsndfile

## **Macros**

#define **DEBUG**(x) std::cerr << \_\_FILE\_\_ << ":" << \_\_LINE\_\_ << " " #x "=" << x << std::endl</li>

# **Typedefs**

- typedef MHAPlugin::config\_t< level\_adapt\_t > addsndfile::level\_adaptor
- typedef MHAPlugin::plugin\_t< sndfile\_t > addsndfile::wave\_reader

#### **Enumerations**

#### **Functions**

• static unsigned **addsndfile::resampled\_num\_frames** (unsigned num\_source\_frames, float source\_rate, float target\_rate, addsndfile\_resampling\_mode\_t resampling\_mode)

```
6.16.1 Macro Definition Documentation
```

## 6.17 adm.cpp File Reference

#### Classes

- class adm\_rtconfig\_t
- class adm\_if\_t

#### **Functions**

- MHASignal::waveform\_t \* adm\_fir\_lp (unsigned int fs, unsigned f\_pass, unsigned int f stop, unsigned int order)
- MHASignal::waveform\_t \* adm\_fir\_decomb (unsigned int fs, float dist\_m, unsigned int order)

#### **6.17.1 Function Documentation**

## 6.18 adm.hh File Reference

#### Classes

class ADM::Linearphase\_FIR< F >

An efficient linear-phase fir filter implementation.

class ADM::DelayF >

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

class ADM::ADMF >

Adaptive differential microphone, working for speech frequency range.

## **Namespaces**

ADM

## **Functions**

static double ADM::subsampledelay\_coeff (double samples, double f\_design, double fs=1.0)

compute IIR coefficient for subsample delay

#### **Variables**

- const double **ADM::PI** = 3.14159265358979312
- const double ADM::C = 340
- const double **ADM::DELAY\_FREQ** = 2000
- const double **ADM::START\_BETA** = 0.5

# 6.19 altplugs.cpp File Reference

#### Classes

- · class mhaplug\_cfg\_t
- class altplugs\_t

# **Macros**

- #define MHAPLUGIN\_OVERLOAD\_OUTDOMAIN
- 6.19.1 Macro Definition Documentation
- 6.19.1.1 #define MHAPLUGIN\_OVERLOAD\_OUTDOMAIN
- 6.20 analysemhaplugin.cpp File Reference

#### **Functions**

- std::string strdom (mha\_domain\_t d)
- void print\_ac (MHAKernel::algo\_comm\_class\_t &ac, std::string txt)
- int **main** (int argc, char \*\*argv)

```
6.20.1 Function Documentation
6.20.1.1 std::string strdom (
                      mha_domain_t d)
6.20.1.2 void print_ac (
                      MHAKernel::algo_comm_class_t & ac,
                      std::string txt )
6.20.1.3 int main (
                      int argc,
                      char ** argv )
6.21 analysispath.cpp File Reference
Classes
    · class analysepath_t
    class plug_t
    class analysispath_if_t
Functions

    static void * thread start (void *instance)

6.21.1 Function Documentation
6.21.1.1 static void* thread_start (
                      void * instance ) [static]
6.22 auditory_profile.cpp File Reference
6.23
      auditory_profile.h File Reference
Classes

    class AuditoryProfile::fmap_t

         A class to store frequency dependent data (e.g., HTL and UCL).

    class AuditoryProfile::profile_t

         The Auditory Profile class.

    class AuditoryProfile::profile_t::ear_t

         Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.

    class AuditoryProfile::parser_t

         Class to make the auditory profile accessible through the parser interface.
```

class AuditoryProfile::parser\_t::fmap\_t
 class AuditoryProfile::parser\_t::ear\_t

## **Namespaces**

AuditoryProfile

Namespace for classes and functions around the auditory profile (e.g., audiogram handling)

6.24 browsemhaplugins.cpp File Reference

**Macros** 

#define **DEBUG**(x) std::cerr << \_\_FILE\_\_ << ":" << \_\_LINE\_\_ << " " << #x << "=" << x << std::endl</li>

#### **Functions**

• int **main** (int argc, char \*\*argv)

6.24.1 Macro Definition Documentation

6.24.2 Function Documentation

```
6.24.2.1 int main (
int argc,
char ** argv )
```

6.25 coherence.cpp File Reference

Classes

- class coherence::vars\_t
- class coherence::cohflt\_t
- class coherence::cohflt\_if\_t

**Namespaces** 

coherence

#### **Functions**

void coherence::getcipd (mha\_complex\_t &c, mha\_real\_t &a, const mha\_complex←
 \_t &xl, const mha\_complex\_t &xr)

6.26 combinechannels.cpp File Reference

#### Classes

- · class combc t
- · class combc if t
- 6.27 compiler\_id.cpp File Reference
- 6.28 compiler\_id.hh File Reference

#### **Macros**

- #define COMPILER\_ID\_VENDOR "gcc"
- #define COMPILER ID MAJOR GNUC
- #define COMPILER\_ID\_MINOR \_\_GNUC\_MINOR\_\_
- #define COMPILER ID PATCH GNUC PATCHLEVEL
- #define COMPILER\_ID\_VERSION\_HELPER2(x, y, z) #x "." #y "." #z
- #define COMPILER\_ID\_VERSION
- #define COMPILER\_ID COMPILER\_ID\_VENDOR "-" COMPILER\_ID\_VERSION "-" C←
   OMPILER\_ID\_STANDARD
- 6.28.1 Macro Definition Documentation
- 6.28.1.1 #define COMPILER\_ID\_VENDOR "gcc"
- 6.28.1.2 #define COMPILER ID MAJOR GNUC
- 6.28.1.3 #define COMPILER\_ID\_MINOR \_\_GNUC\_MINOR\_\_
- 6.28.1.4 #define COMPILER\_ID\_PATCH \_\_GNUC\_PATCHLEVEL\_\_
- 6.28.1.5 #define COMPILER\_ID\_VERSION\_HELPER2(

*X*, *y*,

z ) #x "." #y "." #z

6.28.1.6 #define COMPILER\_ID\_VERSION\_HELPER1(

X,

V.

z) COMPILER\_ID\_VERSION\_HELPER2(x,y,z)

- 6.28.1.7 #define COMPILER\_ID\_VERSION
- 6.28.1.8 #define COMPILER\_ID COMPILER\_ID\_VENDOR "-" COMPILER\_ID\_VERSION "-" COMPILER ID STANDARD
- 6.29 complex\_filter.cpp File Reference
- 6.30 complex\_filter.h File Reference

#### **Classes**

class MHAFilter::complex\_bandpass\_t

Complex bandpass filter.

class MHAFilter::gamma\_flt\_t

Class for gammatone filter.

class MHAFilter::thirdoctave\_analyzer\_t

# **Namespaces**

MHAFilter

Namespace for IIR and FIR filter classes.

6.31 cpuload.cpp File Reference

# Classes

- · class cpuload\_t
- 6.32 db.cpp File Reference

#### Classes

- · class db t
- · class db\_if\_t

# 6.33 dc.cpp File Reference

## Classes

- class dc::wb\_inhib\_cfg\_t
- · class dc::wideband inhib vars t
- class dc::dc\_vars\_t
- class dc::dc\_vars\_validator\_t
- · class dc::dc\_t
- class dc::dc\_if\_t

## **Namespaces**

• dc

## **Macros**

#define DUPVEC(x) v.x.data = MHASignal::dupvec\_chk(v.x.data,s)

## **Functions**

- unsigned int dc::get\_audiochannels (unsigned int totalchannels, std::string acname, algo\_comm\_t ac)
- 6.33.1 Macro Definition Documentation
- 6.34 dc\_afterburn.cpp File Reference

# **Namespaces**

DynComp

dynamic compression related classes and functions

## **Functions**

float mylogf (float x)

## 6.34.1 Function Documentation

```
6.34.1.1 float mylogf ( float x )
```

# 6.35 dc\_afterburn.h File Reference

#### **Classes**

class DynComp::dc\_afterburn\_vars\_t
 Variables for dc\_afterburn\_t (p. 286) class.

class DynComp::dc\_afterburn\_rt\_t
 Real-time class for after burn effect.

• class DynComp::dc\_afterburn\_t

Afterburn class, to be defined as a member of compressors.

## **Namespaces**

DynComp

dynamic compression related classes and functions

# 6.36 dc\_simple.cpp File Reference

#### Classes

- class dc\_simple::dc\_vars\_t
- class dc\_simple::dc\_vars\_validator\_t
- class dc\_simple::level\_smoother\_t
- class dc\_simple::dc\_t
- class dc\_simple::dc\_t::line\_t
- class dc\_simple::dc\_if\_t

# **Namespaces**

dc\_simple

# **Typedefs**

- typedef MHAPlugin::plugin\_t < dc\_t > dc\_simple::DC
- typedef MHAPlugin::config\_t< level\_smoother\_t > dc\_simple::LEVEL

#### **Functions**

 void dc\_simple::test\_fail (const std::vector< float > &v, unsigned int s, const std::string &name)

- std::vector< float > dc\_simple::force\_resize (const std::vector< float > &v, unsigned int s, const std::string &name)
- mha\_real\_t dc\_simple::not\_zero (mha\_real\_t x, const std::string &comment="")

# 6.37 delay.cpp File Reference

#### Classes

· class delay::interface t

#### **Namespaces**

delay

# 6.38 delaysum.cpp File Reference

## Classes

· class delaysum::delaysum t

Runtime configuration of the delaysum plugin.

class delaysum::delaysum if t

Interface class for the delaysum plugin.

## **Namespaces**

delaysum

This namespace contains the delaysum plugin.

## 6.39 doasym\_classification.cpp File Reference

### **Macros**

- #define PATCH\_VAR(var) patchbay.connect(&var.valuechanged, this, &doasvm\_
   classification::update\_cfg)
- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)

#### 6.39.1 Macro Definition Documentation

# 6.39.1.1 #define PATCH\_VAR(

var ) patchbay.connect(&var.valuechanged, this, &doasvm\_classification
::update\_cfg)

6.39.1.2 #define INSERT PATCH(

var ) insert\_member(var); PATCH\_VAR(var)

6.40 doasym\_classification.h File Reference

#### Classes

- class doasvm\_classification\_config
- · class doasvm\_classification
- 6.41 doasym\_feature\_extraction.cpp File Reference

#### **Macros**

- #define PATCH\_VAR(var) patchbay.connect(&var.valuechanged, this, &doasvm\_
   feature\_extraction::update\_cfg)
- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)
- 6.41.1 Macro Definition Documentation
- 6.41.1.1 #define PATCH\_VAR(

var ) patchbay.connect(&var.valuechanged, this, &doasvm\_feature\_←
extraction::update\_cfg)

6.41.1.2 #define INSERT\_PATCH(

var ) insert\_member(var); PATCH\_VAR(var)

6.42 doasym\_feature\_extraction.h File Reference

#### **Classes**

- · class doasvm\_feature\_extraction\_config
- class doasvm\_feature\_extraction

6.43	doc_appendix.h File Reference
6.44	doc_examples.h File Reference
6.45	doc_frameworks.h File Reference
6.46	doc_general.h File Reference
6.47	doc_kernel.h File Reference
6.48	doc_matlab.h File Reference
6.49	doc_mhamain.h File Reference
6.50	doc_parser.h File Reference
6.51	doc_plugif.cpp File Reference
6.52	doc_plugins.h File Reference
6.53	doc_system.h File Reference
6.54	doc_toolbox.h File Reference
6.55	downsample.cpp File Reference
Class	es
•	class <b>ds_t</b>
6.56	droptect.cpp File Reference
Class	es

class droptect\_t

Detect dropouts in a signal with a constant spectrum.

# 6.57 example1.cpp File Reference

## Classes

· class example1\_t

This C++ class implements the simplest example plugin for the step-by-step tutorial.

# 6.58 example2.cpp File Reference

## Classes

class example2\_t

This C++ class implements the second example plugin for the step-by-step tutorial.

# 6.59 example3.cpp File Reference

## Classes

· class example3\_t

A Plugin class using the openMHA Event mechanism.

# 6.60 example4.cpp File Reference

#### **Classes**

class example4\_t

A Plugin class using the spectral signal.

# 6.61 example5.cpp File Reference

#### Classes

- · class example5\_t
- class plugin\_interface\_t

#### **Macros**

#define \_\_\_declspec(p)

6.61.1 Macro Definition Documentation

6.62 example6.cpp File Reference

## Classes

- class cfg\_t
- class example6\_t

#### **Macros**

- #define \_\_declspec(p)
- 6.62.1 Macro Definition Documentation

6.63 fader\_spec.cpp File Reference

# Classes

- class spec\_fader\_t
- · class fader if t
- 6.64 fader\_wave.cpp File Reference

# Classes

- class fader\_wave::level\_adapt\_t
- class fader\_wave::fader\_wave\_if\_t

# Namespaces

· fader\_wave

## **Macros**

#define **DEBUG**(x) std::cerr << \_\_FILE\_\_ << ":" << \_\_LINE\_\_ << " " #x "=" << x << std::endl</li>

## **Typedefs**

typedef MHAPlugin::plugin\_t< level\_adapt\_t > fader\_wave::level\_adaptor

# 6.64.1 Macro Definition Documentation

## 6.65 fftfbpow.cpp File Reference

#### Classes

class fftfbpow::fftfbpow\_t

Run time configuration for the fftfbpow plugin.

class fftfbpow::fftfbpow\_interface\_t

Interface class for fftfbpow plugin.

# **Namespaces**

fftfbpow

Namespace for the fftfbpow plugin.

# 6.66 fftfilterbank.cpp File Reference

## Classes

- class fftfilterbank::fftfb\_plug\_t
- class fftfilterbank::fftfb\_interface\_t

# **Namespaces**

fftfilterbank

# 6.67 fshift\_hilbert.cpp File Reference

## Classes

- class hilbert\_shifter\_t
- class frequency\_translator\_t

# 6.68 gain.cpp File Reference

#### Classes

- class gain::scaler\_t
- class gain::gain\_if\_t

# **Namespaces**

• gain

# 6.69 gaintable.cpp File Reference

#### **Functions**

- std::vector< mha\_real\_t > convert\_f2logf (const std::vector< mha\_real\_t > &vF)
- bool isempty (const std::vector< std::vector< mha\_real\_t >> &arg)
- 6.69.1 Function Documentation

6.69.1.2 bool isempty (

const std::vector< std::vector< mha\_real\_t >> & arg )

6.70 gaintable.h File Reference

## Classes

• class DynComp::gaintable\_t

Gain table class.

# **Namespaces**

DynComp

dynamic compression related classes and functions

#### **Functions**

mha\_real\_t DynComp::interp1 (const std::vector< mha\_real\_t > &vX, const std
 ::vector< mha\_real\_t > &vY, mha\_real\_t X)

One-dimensional linear interpolation.

mha\_real\_t DynComp::interp2 (const std::vector< mha\_real\_t > &vX, const std
 ::vector< mha\_real\_t > &vY, const std::vector< std::vector< mha\_real\_t > > &mZ,
 mha\_real\_t X, mha\_real\_t Y)

Linear interpolation in a two-dimensional field.

# 6.71 generatemhaplugindoc.cpp File Reference

#### Classes

class latex\_doc\_t

#### **Functions**

- std::string conv2latex (std::string s, bool iscolored=false)
- void create\_latex\_doc (std::map< std::string, std::string > &doc, const std::string &plug-name, const std::string &plugin\_macro)
- int **main** (int argc, char \*\*argv)

#### 6.71.1 Function Documentation

# 6.72 hann.cpp File Reference

# Macros

#define PI 3.14159265358979323846

## **Functions**

```
    float * hannf (const unsigned int N)
```

• double \* hann (const unsigned int N)

```
6.72.1 Macro Definition Documentation
```

```
6.72.1.1 #define PI 3.14159265358979323846
```

6.72.2 Function Documentation

```
6.72.2.1 float* hannf ( const unsigned int N )
```

```
6.72.2.2 double* hann ( const unsigned int N )
```

## 6.73 hann.h File Reference

#### **Functions**

- float \* hannf (const unsigned int N)
- double \* hann (const unsigned int N)

#### 6.73.1 Function Documentation

```
6.73.1.1 float* hannf ( const unsigned int N)
```

```
6.73.1.2 double* hann ( const unsigned int N )
```

# 6.74 identity.cpp File Reference

## Classes

class identity\_t

# 6.75 ifftshift.cpp File Reference

#### **Functions**

void ifftshift (mha\_wave\_t \*spec)

```
6.75.1 Function Documentation
```

```
6.75.1.1 void ifftshift ( mha_wave_t * spec )
```

## 6.76 ifftshift.h File Reference

### **Functions**

void ifftshift (mha\_wave\_t \*spec)

### 6.76.1 Function Documentation

```
6.76.1.1 void ifftshift ( mha_wave_t * spec )
```

# 6.77 iirfilter.cpp File Reference

### Classes

class iirfilter\_t

# 6.78 lpc.cpp File Reference

# Macros

- #define PATCH\_VAR(var) patchbay.connect(&var.valuechanged, this, &lpc::update\_
   cfg)
- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)

### **Functions**

void Levinson2 (unsigned int P, const std::vector< mha\_real\_t > &R, std::vector< mha←
 \_real\_t > &A)

```
6.78.1 Macro Definition Documentation
6.78.1.1 #define PATCH_VAR(
                     var ) patchbay.connect(&var.valuechanged, this, &lpc::update_cfg)
6.78.1.2 #define INSERT_PATCH(
                     var ) insert member(var); PATCH VAR(var)
6.78.2 Function Documentation
6.78.2.1 void Levinson2 (
                     unsigned int P,
                     const std::vector< mha_real_t > & R,
                     std::vector< mha_real_t > & A )
6.79 lpc.h File Reference
Classes
   · class lpc config
   • class Ipc
6.80 lpc_bl_predictor.cpp File Reference
Macros

    #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &lpc_bl_←

     predictor::update cfg)
   • #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
6.80.1 Macro Definition Documentation
6.80.1.1 #define PATCH_VAR(
                     var ) patchbay.connect(&var.valuechanged, this, &lpc_bl_predictor←
         ::update_cfg)
6.80.1.2 #define INSERT_PATCH(
                     var ) insert member(var); PATCH VAR(var)
6.81 | lpc_bl_predictor.h File Reference
Classes
```

class lpc\_bl\_predictor\_config

class lpc\_bl\_predictor

### **Macros**

- #define **EPSILON** 1e-10
- 6.81.1 Macro Definition Documentation
- 6.81.1.1 #define EPSILON 1e-10
- 6.82 **Ipc\_burg-lattice.cpp** File Reference

### **Macros**

- #define PATCH\_VAR(var) patchbay.connect(&var.valuechanged, this, &lpc\_burglattice
   ::update\_cfg)
- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)
- 6.82.1 Macro Definition Documentation
- 6.82.1.1 #define PATCH\_VAR(

  var ) patchbay.connect(&var.valuechanged, this, &lpc\_burglattice::update

  \_cfg)
- 6.82.1.2 #define INSERT\_PATCH(

  var ) insert\_member(var); PATCH\_VAR(var)
- 6.83 lpc\_burg-lattice.h File Reference

## Classes

- class lpc\_burglattice\_config
- class lpc\_burglattice

## Macros

- #define EPSILON 1e-10
- 6.83.1 Macro Definition Documentation
- 6.83.1.1 #define EPSILON 1e-10
- 6.84 matrixmixer.cpp File Reference

## **Classes**

- class matrixmixer::cfg\_t
- class matrixmixer::matmix\_t

## **Namespaces**

matrixmixer

## 6.85 mha.cpp File Reference

### **Functions**

- int **mhamain** (int argc, char \*argv[])
- int main (int argc, char \*argv[])

## 6.85.1 Function Documentation

### 6.86 mha.h File Reference

common types for MHA kernel, MHA framework applications and external plugins

### **Classes**

struct mha\_complex\_t

Type for complex floating point values.

struct mha\_direction\_t

Channel source direction structure.

struct mha\_channel\_info\_t

Channel information structure.

struct mha\_wave\_t

Waveform signal structure.

struct mha\_spec\_t

Spectrum signal structure.

struct mha\_audio\_descriptor\_t

Description of an audio fragment (planned as a replacement of mhaconfig\_t (p. 480)).

struct mha\_audio\_t

An audio fragment in the openMHA (planned as a replacement of **mha\_wave\_t** (p. 472) and **mha\_spec\_t** (p. 442)).

struct mhaconfig\_t

MHA prepare configuration structure.

struct comm\_var\_t

Algorithm communication variable structure.

struct algo\_comm\_t

A reference handle for algorithm communication variables.

#### **Macros**

#define MHA\_CALLBACK\_TEST(x)

Test macro to compare function type definition and declaration.

- #define MHA\_CALLBACK\_TEST\_PREFIX(prefix, x)
- #define MHA\_XSTRF(x) MHA\_STRF(x)
- #define MHA STRF(x) #x
- #define MHA\_VERSION\_MAJOR 4

Major version number of MHA.

#define MHA\_VERSION\_MINOR 7

Minor version number of MHA.

#define MHA\_VERSION\_RELEASE 0

Release number of MHA.

#define MHA VERSION BUILD 0

Build number of MHA (currently unused)

#define MHA\_STRUCT\_SIZEMATCH (unsigned int)((sizeof(mha\_real\_t)==4)+2\*(sizeof(mha complex\_t)==8)+4\*(sizeof(mha\_wave\_t)==8+2\*sizeof(void\*))+8\*(sizeof(mha\_spec complex\_t)==8+2\*sizeof(void\*))+16\*(sizeof(mhaconfig\_t)==24))

Test number for structure sizes.

#define MHA\_VERSION (unsigned int)((MHA\_STRUCT\_SIZEMATCH | (MHA\_VERS → ION\_RELEASE << 8) | (MHA\_VERSION\_MINOR << 16) | (MHA\_VERSION\_MAJOR << 24)))</li>

Full version number of MHA kernel.

#define MHA\_VERSION\_STRING MHA\_XSTRF(MHA\_VERSION\_MAJOR) "." MHA\_←
XSTRF(MHA\_VERSION\_MINOR)

Version string of MHA kernel (major.minor)

#define MHA\_RELEASE\_VERSION\_STRING MHA\_XSTRF(MHA\_VERSION\_MAJOR)
 "." MHA\_XSTRF(MHA\_VERSION\_MINOR)
 "." MHA\_XSTRF(MHA\_VERSION\_RELE ASE)

Version string of MHA kernel (major.minor.release)

- #define MHA\_WAVEFORM 0
- #define MHA SPECTRUM 1
- #define MHA DOMAIN MAX 2
- #define MHA DOMAIN UNKNOWN MHA DOMAIN MAX
- #define MHA\_AC\_UNKNOWN 0
- #define MHA AC CHAR 1
- #define MHA\_AC\_INT 2
- #define MHA AC MHAREAL 3
- #define MHA\_AC\_FLOAT 4
- #define MHA AC DOUBLE 5
- #define MHA AC MHACOMPLEX 6
- #define MHA AC VEC FLOAT 51
- #define MHA\_AC\_USER 1000

## **Typedefs**

```
• typedef unsigned int mha_domain_t
```

typedef float mha\_real\_t

openMHA type for real numbers

typedef void \* mha\_fft\_t

Handle for an FFT object.

- typedef struct algo comm t algo comm t
- typedef unsigned int(\* MHAGetVersion\_t) (void)
- typedef int(\* MHAInit\_t) (algo\_comm\_t algo\_comm, const char \*chain, const char \*algo, void \*\*h)
- typedef int(\* MHAPrepare\_t) (void \*h, mhaconfig\_t \*cfg)
- typedef int(\* MHARelease\_t) (void \*h)
- typedef void(\* MHADestroy\_t) (void \*h)
- typedef int(\* MHASet\_t) (void \*h, const char \*cmd, char \*retval, unsigned int len)
- typedef const char \*(\* MHAStrError\_t) (void \*h, int err)
- typedef int(\* MHAProc\_wave2wave\_t) (void \*h, mha\_wave\_t \*sIn, mha\_wave\_t \*\*s⊷
  Out)
- typedef int(\* MHAProc\_wave2spec\_t) (void \*h, mha\_wave\_t \*sIn, mha\_spec\_t \*\*s
   Out)
- typedef int(\* MHAProc\_spec2wave\_t) (void \*h, mha\_spec\_t \*sIn, mha\_wave\_t \*\*s
   Out)
- typedef int(\* MHAProc\_spec2spec\_t) (void \*h, mha\_spec\_t \*sln, mha\_spec\_t \*\*sOut)
- typedef const char \*(\* MHAPluginDocumentation\_t) (void)
- typedef const char \*(\* MHAPluginCategory t) (void)

## 6.86.1 Detailed Description

common types for MHA kernel, MHA framework applications and external plugins

6.86.2 Macro Definition Documentation

Test macro to compare function type definition and declaration.

```
6.86.2.2 #define MHA_CALLBACK_TEST_PREFIX(

prefix,

x )
```

6.86.2.3 #define MHA\_XSTRF( x ) MHA\_STRF(x)

6.86.2.5 #define MHA VERSION MAJOR 4

Major version number of MHA.

6.86.2.6 #define MHA\_VERSION\_MINOR 7

Minor version number of MHA.

6.86.2.7 #define MHA\_VERSION\_RELEASE 0

Release number of MHA.

6.86.2.8 #define MHA\_VERSION\_BUILD 0

Build number of MHA (currently unused)

6.86.2.9 #define MHA\_STRUCT\_SIZEMATCH (unsigned int)((sizeof(mha\_real\_t)==4)+2\*(sizeof(mha← \_complex\_t)==8)+4\*(sizeof(mha\_wave\_t)==8+2\*sizeof(void\*))+8\*(sizeof(mha\_spec\_← t)==8+2\*sizeof(void\*))+16\*(sizeof(mhaconfig\_t)==24))

Test number for structure sizes.

6.86.2.10 #define MHA\_VERSION (unsigned int)((MHA\_STRUCT\_SIZEMATCH | (MHA\_VERSION\_RELEASE << 8) | (MHA\_VERSION\_MINOR << 16) | (MHA\_VERSION\_MAJOR << 24)))

Full version number of MHA kernel.

6.86.2.11 #define MHA\_VERSION\_STRING MHA\_XSTRF(MHA\_VERSION\_MAJOR) "." MHA\_XSTRF(MHA\_VERSION\_MINOR)

Version string of MHA kernel (major.minor)

6.86.2.12 #define MHA\_RELEASE\_VERSION\_STRING MHA\_XSTRF(MHA\_VE← RSION\_MAJOR) "." MHA\_XSTRF(MHA\_VERSION\_MINOR) "." MHA\_XSTRF(MHA\_VERSION\_RELEASE)

Version string of MHA kernel (major.minor.release)

6.86.2.13	#define MHA_WAVEFORM 0
6.86.2.14	#define MHA_SPECTRUM 1
6.86.2.15	#define MHA_DOMAIN_MAX 2
6.86.2.16	#define MHA_DOMAIN_UNKNOWN MHA_DOMAIN_MAX
6.86.2.17	#define MHA_AC_UNKNOWN 0
6.86.2.18	#define MHA_AC_CHAR 1
6.86.2.19	#define MHA_AC_INT 2
6.86.2.20	#define MHA_AC_MHAREAL 3
6.86.2.21	#define MHA_AC_FLOAT 4
6.86.2.22	#define MHA_AC_DOUBLE 5
6.86.2.23	#define MHA_AC_MHACOMPLEX 6
6.86.2.24	#define MHA_AC_VEC_FLOAT 51
6.86.2.25	#define MHA_AC_USER 1000
6.86.3	Typedef Documentation
6.86.3.1	typedef unsigned int mha_domain_t
6.86.3.2	typedef struct algo_comm_t algo_comm_t
6.86.3.3	typedef unsigned int(* MHAGetVersion_t) (void)
6.86.3.4	typedef int(* MHAInit_t) (algo_comm_t algo_comm, const char *chain, const char *algo, void **h)
6.86.3.5	typedef int(* MHAPrepare_t) (void *h, mhaconfig_t *cfg)
6.86.3.6	typedef int(* MHARelease_t) (void *h)
6.86.3.7	typedef void(* MHADestroy_t) (void *h)

- typedef int(\* MHASet\_t) (void \*h, const char \*cmd, char \*retval, unsigned int len)

  typedef const char\*(\* MHAStrError\_t) (void \*h, int err)

  typedef int(\* MHAProc\_wave2wave\_t) (void \*h, mha\_wave\_t \*sln, mha\_wave\_t \*\*sOut)

  typedef int(\* MHAProc\_wave2spec\_t) (void \*h, mha\_wave\_t \*sln, mha\_spec\_t \*\*sOut)

  typedef int(\* MHAProc\_spec2wave\_t) (void \*h, mha\_spec\_t \*sln, mha\_wave\_t \*\*sOut)

  typedef int(\* MHAProc\_spec2spec\_t) (void \*h, mha\_spec\_t \*sln, mha\_spec\_t \*\*sOut)

  typedef int(\* MHAProc\_spec2spec\_t) (void \*h, mha\_spec\_t \*sln, mha\_spec\_t \*\*sOut)

  typedef const char\*(\* MHAPluginDocumentation\_t) (void)
- 6.87 mha algo comm.cpp File Reference

6.86.3.15 typedef const char\*(\* MHAPluginCategory\_t) (void)

## **Macros**

- #define AC\_SUCCESS 0
- #define AC\_INVALID\_HANDLE -1
- #define AC\_INVALID\_NAME -2
- #define AC\_STRING\_TRUNCATED -3
- #define AC\_INVALID\_OUTPTR -4
- #define AC\_TYPE\_MISMATCH -5
- #define AC\_DIM\_MISMATCH -6

#### **Variables**

- algo\_comm\_t algo\_comm\_default
- 6.87.1 Macro Definition Documentation
- 6.87.1.1 #define AC\_SUCCESS 0
- 6.87.1.2 #define AC\_INVALID\_HANDLE -1
- 6.87.1.3 #define AC\_INVALID\_NAME -2
- 6.87.1.4 #define AC\_STRING\_TRUNCATED -3
- 6.87.1.5 #define AC\_INVALID\_OUTPTR -4
- 6.87.1.6 #define AC\_TYPE\_MISMATCH -5
- 6.87.1.7 #define AC\_DIM\_MISMATCH -6
- 6.87.2 Variable Documentation
- 6.87.2.1 algo\_comm\_t algo\_comm\_default
- 6.88 mha\_algo\_comm.h File Reference

Header file for Algorithm Communication.

#### **Classes**

class MHA AC::spectrum t

Insert a MHASignal::spectrum\_t (p. 775) class into the AC space.

class MHA AC::waveform t

Insert a MHASignal::waveform\_t (p. 787) class into the AC space.

class MHA AC::int t

Insert a integer variable into the AC space.

class MHA\_AC::float\_t

Insert a float point variable into the AC space.

class MHA\_AC::double\_t

Insert a double precision floating point variable into the AC space.

- class MHA\_AC::stat\_t
- class MHA\_AC::ac2matrix\_helper\_t
- class MHA\_AC::ac2matrix\_t

Copy AC variable to a matrix.

class MHA\_AC::acspace2matrix\_t

Copy all or a subset of all numeric AC variables into an array of matrixes.

## **Namespaces**

· MHA AC

Functions and classes for Algorithm Communication (AC) support.

### **Functions**

- mha\_spec\_t MHA\_AC::get\_var\_spectrum (algo\_comm\_t ac, const std::string &name)

  Convert an AC variable into a spectrum.
- mha\_wave\_t MHA\_AC::get\_var\_waveform (algo\_comm\_t ac, const std::string &name)

Convert an AC variable into a waveform.

• int MHA\_AC::get\_var\_int (algo\_comm\_t ac, const std::string &name)

Return value of an integer scalar AC variable.

• float MHA\_AC::get\_var\_float (algo\_comm\_t ac, const std::string &name)

Return value of an floating point scalar AC variable.

std::vector< float > MHA\_AC::get\_var\_vfloat (algo\_comm\_t ac, const std::string &name)

Return value of an floating point vector AC variable as standard vector of floats.

### 6.88.1 Detailed Description

Header file for Algorithm Communication.

6.89 mha\_algo\_comm.hh File Reference

## Classes

- class MHAKernel::comm\_var\_map\_t
- class MHAKernel::algo\_comm\_class\_t

## **Namespaces**

MHAKernel

#### **Macros**

#define ALGO\_COMM\_ID\_STR "MFVK3jL5rmeus1XtggEl971aXCR/GU7RRehKz4k
 Qtrg="

## **Functions**

• algo\_comm\_class\_t \* MHAKernel::algo\_comm\_safe\_cast (void \*)

## **Variables**

- algo\_comm\_t algo\_comm\_default
- 6.89.1 Macro Definition Documentation
- 6.89.1.1 #define ALGO\_COMM\_ID\_STR "MFVK3jL5rmeus1XtggEl971aXCR/GU7RRehKz4kQtrg="
- 6.89.2 Variable Documentation
- 6.89.2.1 algo\_comm\_t algo\_comm\_default
- 6.90 mha\_defs.h File Reference

Preprocessor definitions common to all MHA components.

#### **Macros**

- #define \_\_MHA\_FUN\_\_\_FUNC\_\_
- #define CHECK\_EXPR(x) {if(!(x)){throw MHA\_Error(\_\_FILE\_\_,\_\_LINE\_\_,"The expression \"" #x "\" is invalid.");}}
- #define CHECK\_VAR(x) {if(!(x)){throw MHA\_Error(\_\_FILE\_\_,\_\_LINE\_\_,"The variable \"" #x "\" is not defined.");}}
- #define **declspec**(p)
- #define M PI 3.14159265358979323846

Define pi if it is not defined yet.

• #define **MIN**(a, b) (((a)<(b))?(a):(b))

Macro for minimum function.

• #define **MAX**(a, b) (((a)>(b))?(a):(b))

Macro for maximum function.

- #define MHA\_EAR\_LEFT 0
- #define MHA EAR RIGHT 1
- #define MHA EAR MAX 2

## 6.90.1 Detailed Description

Preprocessor definitions common to all MHA components.

This file contains all preprocessor and type definitions which are common to all Master Hearing Aid components.

```
6.90.2 Macro Definition Documentation
```

```
6.90.2.1 #define __MHA_FUN___FUNC__
```

6.90.2.2 #define CHECK EXPR(

```
x ) {if(!(x)){throw MHA_Error(__FILE__,__LINE__,"The expression \"" \#x "\" is invalid.");}}
```

6.90.2.3 #define CHECK\_VAR(

```
x ) {if(!(x)){throw MHA_Error(__FILE__,__LINE__,"The variable \"" #x "\" is not defined.");}}
```

6.90.2.4 #define \_\_declspec(

**p**)

6.90.2.5 #define M\_PI 3.14159265358979323846

Define pi if it is not defined yet.

6.90.2.6 #define MIN(

Macro for minimum function.

6.90.2.7 #define MAX(

Macro for maximum function.

6.90.2.8 #define MHA\_EAR\_LEFT 0

6.90.2.9 #define MHA\_EAR\_RIGHT 1

6.90.2.10 #define MHA\_EAR\_MAX 2

6.91 mha\_errno.c File Reference

## **Macros**

• #define **STRLEN** 0x1000

## **Functions**

- const char \* mha\_strerror (int mhaerrno)
- void mha\_set\_user\_error (const char \*str)

## **Variables**

- char next\_except\_str [STRLEN] = ""
- const char \* cstr\_strerror [MHA\_ERR\_USER]

```
6.91.1 Macro Definition Documentation
```

- 6.91.1.1 #define STRLEN 0x1000
- 6.91.2 Function Documentation
- 6.91.2.1 const char\* mha\_strerror ( int *mhaerrno* )
- 6.91.2.2 void mha\_set\_user\_error (
  const char \* str )
- 6.91.3 Variable Documentation
- 6.91.3.1 char next\_except\_str[STRLEN] = ""
- 6.91.3.2 const char\* cstr\_strerror[MHA\_ERR\_USER]
- 6.92 mha\_errno.h File Reference

### **Macros**

- #define MHA\_ERR\_SUCCESS 0
- #define MHA\_ERR\_UNKNOWN 1
- #define MHA\_ERR\_INVALID\_HANDLE 2
- #define MHA ERR NULL 3
- #define MHA\_ERR\_VARRANGE 4
- #define MHA\_ERR\_VARFMT 5
- #define MHA\_ERR\_USER 10000

## **Functions**

- const char \* mha\_strerror (int mhaerrno)
- void mha\_set\_user\_error (const char \*str)

```
6.92.1 Macro Definition Documentation
6.92.1.1
        #define MHA_ERR_SUCCESS 0
6.92.1.2 #define MHA_ERR_UNKNOWN 1
6.92.1.3
        #define MHA_ERR_INVALID_HANDLE 2
6.92.1.4
        #define MHA_ERR_NULL 3
6.92.1.5 #define MHA_ERR_VARRANGE 4
6.92.1.6
        #define MHA ERR VARFMT 5
6.92.1.7 #define MHA_ERR_USER 10000
6.92.2 Function Documentation
6.92.2.1 const char* mha_strerror (
                    int mhaerrno )
6.92.2.2 void mha_set_user_error (
```

6.93 mha\_error.cpp File Reference

Implementation of openMHA error handling.

const char \* str )

## Namespaces

· mha error helpers

## **Functions**

- unsigned mha\_error\_helpers::digits (unsigned n)
   Compute number of decimal digits required to represent an unsigned integer.
- unsigned mha\_error\_helpers::snprintf\_required\_length (const char \*formatstring,...)
   snprintf\_required\_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.
- void mha\_debug (const char \*fmt,...)
   Print an info message (stderr on Linux, OutputDebugString in Windows).

## 6.93.1 Detailed Description

Implementation of openMHA error handling.

This file forms a seperate library.

6.94 mha error.hh File Reference

Classes

class MHA\_Error

Error reporting exception class.

## **Namespaces**

mha\_error\_helpers

## **Macros**

- #define Getmsg(e) ((e).get\_msg())
- #define MHA\_ErrorMsg(x) MHA\_Error(\_\_FILE\_\_,\_LINE\_\_,"%s",x)

Throw an openMHA error with a text message.

#define MHA\_assert(x) if(!(x)) throw MHA\_Error(\_\_FILE\_\_,\_\_LINE\_\_,"\"%s\" is false.",#x)

Assertion macro, which throws an MHA\_Error (p. 423).

• #define MHA\_assert\_equal(a, b) if( a != b ) throw MHA\_Error(\_\_FILE\_\_,\_\_LINE\_\_  $\leftarrow$  ,"\"%s == %s\" is false (%s = %g, %s = %g).",#a,#b,#a,(double)(a),#b,(double)(b))

Equality assertion macro, which throws an MHA\_Error (p. 423) with the values.

## **Functions**

void mha\_debug (const char \*fmt,...)

Print an info message (stderr on Linux, OutputDebugString in Windows).

- unsigned **mha\_error\_helpers::digits** (unsigned n)
  - Compute number of decimal digits required to represent an unsigned integer.
- unsigned mha\_error\_helpers::snprintf\_required\_length (const char \*formatstring,...)

  snprintf\_required\_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.

## 6.94.1 Macro Definition Documentation

```
6.94.1.1 #define Getmsg(

e ) ((e).get_msg())
```

6.95 mha\_event\_emitter.h File Reference

### **Classes**

- class MHAEvents::connector\_base\_t
- class MHAEvents::emitter\_t

Class for emitting openMHA events.

## **Namespaces**

### MHAEvents

Collection of event handling classes.

- 6.96 mha\_events.cpp File Reference
- 6.97 mha\_events.h File Reference

## Classes

- class MHAEvents::connector\_t< receiver\_t >
- class MHAEvents::patchbay\_t< receiver\_t >

Patchbay which connects any event emitter with any member function of the parameter class.

## **Namespaces**

## MHAEvents

Collection of event handling classes.

## 6.98 mha\_fftfb.cpp File Reference

## Classes

- class MHAOvlFilter::barkscale::hz2bark\_t
- class MHAOvIFilter::barkscale::bark2hz\_t

### **Namespaces**

MHAOvIFilter

Namespace for overlapping FFT based filter bank classes and functions.

- MHAOvlFilter::barkscale
- MHAOvlFilter::FreqScaleFun

Transform functions from linear scale in Hz to new frequency scales.

MHAOvlFilter::ShapeFun

Shape functions for overlapping filters.

### **Macros**

#define BARKSCALE ENTRIES 50

#### **Functions**

mha\_real\_t MHAOvlFilter::FreqScaleFun::hz2hz (mha\_real\_t x)

Dummy scale transformation Hz to Hz.

- mha real t MHAOvIFilter::FreqScaleFun::hz2khz (mha real t x)
- mha real t MHAOvIFilter::FreqScaleFun::hz2octave (mha real t x)
- mha\_real\_t MHAOvlFilter::FreqScaleFun::hz2third\_octave (mha\_real\_t x)
- mha\_real\_t MHAOvlFilter::FreqScaleFun::hz2bark (mha\_real\_t x)

Transformation to bark scale.

- mha\_real\_t MHAOvlFilter::FreqScaleFun::hz2bark\_analytic (mha\_real\_t)
- mha\_real\_t MHAOvIFilter::FreqScaleFun::hz2erb (mha\_real\_t)
- mha\_real\_t MHAOvlFilter::FreqScaleFun::hz2erb\_glasberg1990 (mha\_real\_t)
- mha real t MHAOvlFilter::FreqScaleFun::hz2log (mha real t x)

Third octave frequency scale.

- mha\_real\_t MHAOvlFilter::FreqScaleFun::inv\_scale (mha\_real\_t, mha\_real\_
   —
   t(\*)(mha\_real\_t))
- mha\_real\_t MHAOvlFilter::ShapeFun::rect (mha\_real\_t x)

Filter shape function for rectangular filters.

mha\_real\_t MHAOvlFilter::ShapeFun::linear (mha\_real\_t x)

Filter shape function for sawtooth filters.

• mha real t MHAOvlFilter::ShapeFun::hann (mha real t x)

Filter shape function for hanning shaped filters.

- mha real t MHAOvlFilter::ShapeFun::expflt (mha real t)
- mha\_real\_t MHAOvIFilter::ShapeFun::gauss (mha\_real\_t)
- mha\_real\_t filtershapefun (mha\_real\_t f, MHAOvlFilter::band\_descriptor\_t b, mha
   \_real\_t plateau)

## **Variables**

- mha\_real\_t MHAOvlFilter::barkscale::vfreq [BARKSCALE\_ENTRIES]
- mha\_real\_t MHAOvlFilter::barkscale::vbark [BARKSCALE\_ENTRIES]

# 6.99 mha\_fftfb.hh File Reference

#### **Classes**

- class MHAOvIFilter::band\_descriptor\_t
- class MHAOvIFilter::scale\_var\_t
- class MHAOvIFilter::fscale\_t
- class MHAOvIFilter::fscale\_bw\_t
- class MHAOvIFilter::fftfb\_vars\_t

Set of configuration variables for FFT-based overlapping filters.

class MHAOvIFilter::fspacing\_t

Class for frequency spacing, used by filterbank shape generator class.

class MHAOvIFilter::fftfb\_t

FFT based overlapping filter bank.

class MHAOvlFilter::overlap\_save\_filterbank\_t

A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb\_t** (p. 591).

- class MHAOvlFilter::overlap save filterbank t::vars t
- class MHAOvlFilter::overlap\_save\_filterbank\_analytic\_t
- class MHAOvIFilter::fftfb\_ac\_info\_t

## Namespaces

## MHAOvlFilter

Namespace for overlapping FFT based filter bank classes and functions.

## **Typedefs**

typedef mha\_real\_t( MHAOvIFilter::scale\_fun\_t) (mha\_real\_t)

- 6.100 mha\_fifo.cpp File Reference
- 6.101 mha fifo.h File Reference

#### **Classes**

class mha\_fifo\_t< T >

A FIFO class for blocksize adaptation Synchronization: None.

class mha\_drifter\_fifo\_t< T >

A FIFO class for blocksize adaptation without Synchronization.

class mha\_fifo\_thread\_platform\_t

Abstract base class for synchronizing multithreaded (producer/consumer) fifo operations.

- class mha\_fifo\_posix\_threads\_t
- class mha\_fifo\_thread\_guard\_t

Simple Mutex Guard Class.

class mha\_fifo\_lw\_t< T >

This FIFO uses locks to synchronize access.

class mha\_dblbuf\_t< FIFO >

The doublebuffer adapts blocksizes between an outer process, which provides input data and takes output data, and an inner process, which processes the input signal and generates output data using a different block size than the outer process.

class mha\_rt\_fifo\_element\_t< T >

Object wrapper for **mha\_rt\_fifo\_t** (p. 439).

class mha\_rt\_fifo\_t< T >

Template class for thread safe, half real time safe fifo without explixit locks.

## **Macros**

- #define mha\_fifo\_thread\_platform\_implementation\_t mha\_fifo\_posix\_threads\_t
- 6.101.1 Macro Definition Documentation
- 6.101.1.1 #define mha\_fifo\_thread\_platform\_implementation\_t mha\_fifo\_posix\_threads\_t
- 6.102 mha filter.cpp File Reference

## **Functions**

std::vector< mha\_real\_t > diff\_coeffs ()

6.102.1 Function Documentation6.102.1.1 std::vector<mha\_real\_t> diff\_coeffs ( )6.103 mha filter.hh File Reference

Header file for IIR filter classes.

#### Classes

· class MHAFilter::filter t

Generic IIR filter class.

• class MHAFilter::diff t

Differentiator class (non-normalized)

class MHAFilter::o1\_ar\_filter\_t

First order attack-release lowpass filter.

· class MHAFilter::o1flt lowpass t

First order low pass filter.

· class MHAFilter::o1flt maxtrack t

First order maximum tracker.

class MHAFilter::o1flt\_mintrack\_t

First order minimum tracker.

- class MHAFilter::iir\_filter\_state\_t
- class MHAFilter::iir\_filter\_t

IIR filter class wrapper for integration into parser structure.

- class MHAFilter::adapt filter state t
- class MHAFilter::adapt\_filter\_param\_t
- class MHAFilter::adapt\_filter\_t

Adaptive filter.

class MHAFilter::fftfilter\_t

FFT based FIR filter implementation.

class MHAFilter::fftfilterbank\_t

FFT based FIR filterbank implementation.

struct MHAFilter::transfer function t

a structure containing a source channel number, a target channel number, and an impulse response.

struct MHAFilter::transfer\_matrix\_t

A sparse matrix of transfer function partitionss.

class MHAFilter::partitioned\_convolution\_t

A filter class for partitioned convolution.

struct MHAFilter::partitioned\_convolution\_t::index\_t

Bookkeeping class.

class MHAFilter::smoothspec\_t

Smooth spectral gains, create a windowed impulse response.

class MHAFilter::resampling\_filter\_t

Hann shaped low pass filter for resampling.

class MHAFilter::polyphase\_resampling\_t

A class that performs polyphase resampling.

class MHAFilter::blockprocessing\_polyphase\_resampling\_t

A class that does polyphase resampling and takes into account block processing.

class MHAFilter::iir\_ord1\_real\_t

First order recursive filter.

## **Namespaces**

MHAFilter

Namespace for IIR and FIR filter classes.

#### **Functions**

- void MHAFilter::make\_friendly\_number (mha\_real\_t &x)
- void MHAFilter::make\_friendly\_number (mha\_complex\_t &x)
- void MHAFilter::make\_friendly\_number (double &x)
- void MHAFilter::o1\_lp\_coeffs (const mha\_real\_t tau, const mha\_real\_t fs, mha\_real t &c1, mha\_real\_t &c2)

Set first order filter coefficients from time constant and sampling rate.

void MHAFilter::butter\_stop\_ord1 (double \*A, double \*B, double f1, double f2, double fs)

Setup a first order butterworth band stop filter.

• MHASignal::waveform\_t \* MHAFilter::spec2fir (const mha\_spec\_t \*spec, const unsigned int fftlen, const MHAWindow::base\_t &window, const bool minphase)

Create a windowed impulse response/FIR filter coefficients from a spectrum.

unsigned MHAFilter::gcd (unsigned a, unsigned b)

greatest common divisor

double MHAFilter::sinc (double x)

sin(x)/x function, coping with x=0.

std::pair< unsigned, unsigned > MHAFilter::resampling\_factors (float source\_
 sampling\_rate, float target\_sampling\_rate, float factor=1.0f)

Computes rational resampling factor from two sampling rates.

## 6.103.1 Detailed Description

Header file for IIR filter classes.

6.104 mha\_generic\_chain.cpp File Reference

#### **Functions**

• void mhaconfig\_compare (mhaconfig\_t req, mhaconfig\_t avail, const char \*cpref)

```
6.104.1 Function Documentation
```

6.105 mha\_generic\_chain.h File Reference

#### Classes

- class mhachain::plugs\_t
- · class mhachain::chain base t

# **Namespaces**

mhachain

#### **Macros**

- #define MHAPLUGIN\_OVERLOAD\_OUTDOMAIN
- 6.105.1 Macro Definition Documentation
- 6.105.1.1 #define MHAPLUGIN\_OVERLOAD\_OUTDOMAIN
- 6.106 mha\_io\_ifc.h File Reference

### **Typedefs**

typedef int(\* IOProcessEvent\_t) (void \*handle, mha\_wave\_t \*sIn, mha\_wave\_t \*\*s
 Out)

Event handler for signal stream.

• typedef void(\* IOStoppedEvent\_t) (void \*handle, int proc\_err, int io\_err)

Event handler for stop event.

typedef void(\* IOStartedEvent\_t) (void \*handle)

Event handler for start event.

- typedef int(\* IOInit\_t) (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_← t stop\_event, void \*stop\_handle, void \*\*handle)
- typedef int(\* **IOPrepare\_t**) (void \*handle, int num\_inchannels, int num\_outchannels)
- typedef int(\* IOStart t) (void \*handle)
- typedef int(\* IOStop\_t) (void \*handle)
- typedef int(\* IORelease\_t) (void \*handle)
- typedef int(\* IOSetVar t) (void \*handle, const char \*cmd, char \*retval, unsigned int len)
- typedef const char \*(\* IOStrError\_t) (void \*handle, int err)
- typedef void(\* IODestroy\_t) (void \*handle)

6.106.1 Typedef Documentation

6.106.1.1 typedef int(\* IOProcessEvent\_t) (void \*handle, mha\_wave\_t \*sln, mha\_wave\_t \*\*sOut)

Event handler for signal stream.

This event handler needs to be realtime compatible. All signal path processing will be performed in this callback.

6.106.1.2 typedef void(\* IOStoppedEvent\_t) (void \*handle, int proc\_err, int io\_err)

Event handler for stop event.

This event handler needs to be realtime compatible. The function must return immediatly.

6.106.1.3 typedef void(\* IOStartedEvent\_t) (void \*handle)

Event handler for start event.

This event handler needs to be realtime compatible. The function must return immediatly.

- 6.106.1.4 typedef int(\* IOInit\_t) (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_event, void \*stop\_handle, void \*\*handle)
- 6.106.1.5 typedef int(\* IOPrepare\_t) (void \*handle, int num\_inchannels, int num\_outchannels)
- 6.106.1.6 typedef int(\* IOStart\_t) (void \*handle)
- 6.106.1.7 typedef int(\* IOStop\_t) (void \*handle)
- 6.106.1.8 typedef int(\* IORelease\_t) (void \*handle)
- 6.106.1.9 typedef int(\* IOSetVar\_t) (void \*handle, const char \*cmd, char \*retval, unsigned int len)
- 6.106.1.10 typedef const char\*(\* IOStrError\_t) (void \*handle, int err)
- 6.106.1.11 typedef void(\* IODestroy\_t) (void \*handle)
- 6.107 mha\_multisrc.cpp File Reference

### **Namespaces**

## MHAMultiSrc

Collection of classes for selecting audio chunks from multiple sources.

## 6.108 mha multisrc.h File Reference

## Classes

- class MHAMultiSrc::channel\_t
   class MHAMultiSrc::channels\_t
   class MHAMultiSrc::base\_t
  - Base class for source selection.
- class MHAMultiSrc::waveform\_tclass MHAMultiSrc::spectrum\_t

## **Namespaces**

## MHAMultiSrc

Collection of classes for selecting audio chunks from multiple sources.

# 6.109 mha\_os.cpp File Reference

### **Functions**

- std::string mha\_getenv (std::string envvar)
- std::list< std::string > mha\_library\_paths ()
- std::list< std::string > list\_dir (const std::string &path, const std::string &pattern)

```
6.109.1 Function Documentation
```

```
6.109.1.1 std::string mha_getenv (
std::string envvar )
```

```
6.109.1.2 std::list<std::string> mha_library_paths ( )
```

6.110 mha\_os.h File Reference

## **Classes**

class dynamiclib\_t

#### **Macros**

- #define mha loadlib(x) dlopen(x,RTLD NOW)
- #define mha\_freelib(x) dlclose(x)
- #define **mha\_freelib\_success**(x) (x == 0)
- #define **mha getlibfun**(h, x) x ## cb = (x ## t)dlsym(h,#x)
- #define **mha\_getlibfun\_checked**(h, x) x ## \_cb = (x ## \_t)dlsym(h,#x);if(! x ## \_cb) throw **MHA\_Error**(\_\_FILE\_\_,\_LINE\_\_,"Function " #x " is undefined.")
- #define mha\_loadlib\_error(x) dlerror()
- #define mha\_lib\_extension ".so"
- #define mha msleep(milliseconds) usleep((milliseconds)\*1000)
- #define FMTsz "%zu"

printf modifier to print integers of type size t

- #define MHA\_RESOLVE(h, t) t ## \_cb = (t ## \_t)(h->resolve(#t))
- #define MHA RESOLVE CHECKED(h, t) t ## cb = (t ## t)(h->resolve checked(#t))

## **Typedefs**

typedef void \* mha\_libhandle\_t

#### **Functions**

- std::string mha\_getenv (std::string envvar)
- std::list< std::string > mha\_library\_paths ()
- std::list< std::string > list\_dir (const std::string &path, const std::string &pattern)
- void **mha hton** (float \*data, unsigned int len)
- void mha\_ntoh (float \*data, unsigned int len)
- void **mha\_hton** (uint32\_t \*data, unsigned int len)
- void **mha ntoh** (uint32 t \*data, unsigned int len)
- void mha\_hton (int32\_t \*data, unsigned int len)
- void mha\_ntoh (int32\_t \*data, unsigned int len)

### 6.110.1 Macro Definition Documentation

```
6.110.1.1 #define mha_loadlib(
```

x ) dlopen(x,RTLD\_NOW)

6.110.1.2 #define mha freelib(

x ) dlclose(x)

6.110.1.3 #define mha\_freelib\_success(

$$x$$
) (x == 0)

```
6.110.1.4 #define mha_getlibfun(
                        x ) x ## _cb = (x ## _t)dlsym(h,#x)
6.110.1.5 #define mha_getlibfun_checked(
                         x ) x ## _cb = (x ## _t)dlsym(h,#x);if(! x ## _cb) throw
           MHA_Error(__FILE__,__LINE__,"Function " #x " is undefined.")
6.110.1.6 #define mha loadlib error(
                        x ) dlerror()
6.110.1.7 #define mha_lib_extension ".so"
6.110.1.8 #define mha_msleep(
                        milliseconds ) usleep((milliseconds)*1000)
6.110.1.9 #define FMTsz "%zu"
printf modifier to print integers of type size_t
6.110.1.10 #define MHA_RESOLVE(
                         t ) t ## _cb = (t ## _t)(h->resolve(#t))
6.110.1.11 #define MHA RESOLVE CHECKED(
                         t ) t ## _cb = (t ## _t)(h->resolve_checked(#t))
6.110.2 Typedef Documentation
6.110.2.1 typedef void* mha libhandle t
6.110.3 Function Documentation
6.110.3.1 std::string mha_getenv (
                        std::string envvar )
6.110.3.2 std::list<std::string> mha_library_paths ( )
6.110.3.3 std::list<std::string> list_dir (
                        const std::string & path,
                        const std::string & pattern )
```

```
6.110.3.4 void mha hton (
                       float * data,
                       unsigned int len ) [inline]
6.110.3.5 void mha ntoh (
                       float * data,
                       unsigned int len ) [inline]
6.110.3.6 void mha_hton (
                       uint32 t * data,
                       unsigned int len ) [inline]
6.110.3.7 void mha ntoh (
                       uint32 t * data,
                       unsigned int len ) [inline]
6.110.3.8 void mha hton (
                       int32_t * data,
                       unsigned int len ) [inline]
6.110.3.9 void mha ntoh (
                       int32_t * data,
                       unsigned int len ) [inline]
6.111
       mha parser.cpp File Reference
```

# Namespaces

MHAParser

Name space for the openMHA-Parser configuration language.

MHAParser::StrCnv

String converter namespace.

## Macros

• #define MHAPLATFORM "undefined-linux"

### **Functions**

- int MHAParser::get\_precision ()
- int MHAParser::StrCnv::num\_brackets (const std::string &s)

Return number of brackets at beginning and end of string.

- int MHAParser::StrCnv::bracket\_balance (const std::string &s)
- static std::ostream & write\_float (std::ostream &o, const float &f)
- static std::string parse\_1\_float (const std::string &s, mha\_real\_t &v)
- This internal function parses a floating point number from the beginning of a string.

   static std::string parse\_1\_complex (const std::string &s, mha\_complex\_t &v)

This internal function parses a complex number from the beginning of a string.

```
6.111.1 Macro Definition Documentation
```

6.111.1.1 #define MHAPLATFORM "undefined-linux"

## 6.111.2 Function Documentation

This internal function parses a floating point number from the beginning of a string.

### **Parameters**

s	The string to parse
V	The float variable to fill with a value

## **Returns**

The rest of the string.

This internal function parses a complex number from the beginning of a string.

## **Parameters**

s	The string to parse
V	The complex variable to fill with a value

# Returns

The rest of the string.

## 6.112 mha\_parser.hh File Reference

Header file for the MHA-Parser script language.

#### **Classes**

class MHAParser::keyword\_list\_t

Keyword list class.

- class MHAParser::expression t
- class MHAParser::entry\_t
- class MHAParser::base\_t

Base class for all parser items.

- class MHAParser::base\_t::replace\_t
- class MHAParser::parser\_t

Parser node class.

- class MHAParser::c\_ifc\_parser\_t
- class MHAParser::monitor t

Base class for monitors and variable nodes.

class MHAParser::variable\_t

Base class for variable nodes.

class MHAParser::range\_var\_t

Base class for all variables with a numeric value range.

class MHAParser::kw\_t

Variable with keyword list value.

class MHAParser::string\_t

Variable with a string value.

class MHAParser::vstring\_t

Vector variable with string values.

class MHAParser::bool t

Variable with a boolean value ("yes"/"no")

class MHAParser::int\_t

Variable with integer value.

class MHAParser::float\_t

Variable with float value.

class MHAParser::complex t

Variable with complex value.

class MHAParser::vint\_t

Variable with vector<int> value.

class MHAParser::vfloat t

Vector variable with float value.

class MHAParser::vcomplex t

Vector variable with complex value.

class MHAParser::mfloat\_t

Matrix variable with float value.

class MHAParser::mcomplex\_t

Matrix variable with complex value.

class MHAParser::int\_mon\_t

Monitor variable with int value.

class MHAParser::bool\_mon\_t

Monitor with string value.

class MHAParser::string\_mon\_t

Monitor with string value.

class MHAParser::vstring\_mon\_t

Vector of monitors with string value.

class MHAParser::vint\_mon\_t

Vector of ints monitor.

class MHAParser::mint\_mon\_t

Matrix of ints monitor.

class MHAParser::vfloat\_mon\_t

Vector of floats monitor.

class MHAParser::mfloat mon t

Matrix of floats monitor.

class MHAParser::float mon t

Monitor with float value.

class MHAParser::complex mon t

Monitor with complex value.

class MHAParser::vcomplex\_mon\_t

Monitor with vector of complex values.

class MHAParser::mcomplex\_mon\_t

Matrix of complex numbers monitor.

class MHAParser::commit\_t< receiver\_t >

Parser variable with event-emission functionality.

class MHAParser::mhaconfig\_mon\_t

## **Namespaces**

MHAParser

Name space for the openMHA-Parser configuration language.

MHAParser::StrCnv

String converter namespace.

#### **Macros**

- #define **DEFAULT RETSIZE** 0x100000
- #define insert\_member(x) insert\_item(#x,&x)

Macro to insert a member variable into a parser.

## **Typedefs**

- typedef std::string(base t::\* MHAParser::opact t) (expression t &)
- typedef std::string(base\_t::\* MHAParser::query\_t) (const std::string &)
- typedef std::map< std::string, opact\_t > MHAParser::opact\_map\_t
- typedef std::map< std::string, query\_t > MHAParser::query\_map\_t
- typedef std::list< entry\_t > MHAParser::entry\_map\_t
- typedef int(\* MHAParser::c\_parse\_cmd\_t) (void \*, const char \*, char \*, unsigned int)
- typedef const char \*(\* MHAParser::c\_parse\_err\_t) (void \*, int)

#### **Functions**

- std::string MHAParser::commentate (const std::string &s)
- void MHAParser::trim (std::string &s)
- std::string MHAParser::cfg\_dump (base\_t \*, const std::string &)
- std::string MHAParser::cfg\_dump\_short (base\_t \*, const std::string &)
- std::string MHAParser::all\_dump (base\_t \*, const std::string &)
- std::string **MHAParser::mon\_dump** (base\_t \*, const std::string &)
- std::string MHAParser::all\_ids (base\_t \*, const std::string &, const std::string &="")
- void MHAParser::strreplace (std::string &, const std::string &, const std::string &)
   string replace function
- void MHAParser::envreplace (std::string &s)
- void MHAParser::StrCnv::str2val (const std::string &, bool &)

Convert from string.

• void MHAParser::StrCnv::str2val (const std::string &, float &)

Convert from string.

void MHAParser::StrCnv::str2val (const std::string &, mha\_complex\_t &)

Convert from string.

void MHAParser::StrCnv::str2val (const std::string &, int &)

Convert from string.

void MHAParser::StrCnv::str2val (const std::string &, keyword\_list\_t &)

Convert from string.

• void **MHAParser::StrCnv::str2val** (const std::string &, std::string &)

Convert from string.

template<class arg t >

void MHAParser::StrCnv::str2val (const std::string &s, std::vector< arg\_t > &val)

Converter for vector types.

template<>

void MHAParser::StrCnv::str2val< mha\_real\_t > (const std::string &s, std::vector< mha\_real\_t > &v)

Converter for vector<mha\_real\_t> with Matlab-style expansion.

template<class arg\_t >

void **MHAParser::StrCnv::str2val** (const std::string &s, std::vector< std::vector< arg\_t >> &val)

Converter for matrix types.

• std::string MHAParser::StrCnv::val2str (const bool &)

Convert to string.

• std::string MHAParser::StrCnv::val2str (const float &)

Convert to string.

std::string MHAParser::StrCnv::val2str (const mha\_complex\_t &)

Convert to string.

• std::string MHAParser::StrCnv::val2str (const int &)

Convert to string.

std::string MHAParser::StrCnv::val2str (const keyword\_list\_t &)

Convert to string.

std::string MHAParser::StrCnv::val2str (const std::string &)

Convert to string.

- std::string MHAParser::StrCnv::val2str (const std::vector< float > &)
   Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< mha\_complex\_t > &)
   Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< int > &)
   Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::vector< int > > &)
   Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::string > &)
   Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::vector< float > > &)
   Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::vector< mha\_  $\leftarrow$  complex\_t >> &)

Convert to string.

## 6.112.1 Detailed Description

Header file for the MHA-Parser script language.

- 6.112.2 Macro Definition Documentation
- 6.112.2.1 #define DEFAULT RETSIZE 0x100000

Macro to insert a member variable into a parser.

## **Parameters**

Member variable to be inserted. Name of member variable will be used as configuration name.

See also MHAParser::parser\_t::insert\_item() (p. 665).

6.113 mha\_plugin.hh File Reference

Header file for MHA C++ plugin class templates.

#### **Classes**

- class MHAPlugin::cfg\_chain\_t< runtime\_cfg\_t >
- class MHAPlugin::config\_t< runtime\_cfg\_t >

Template class for thread safe configuration.

class MHAPlugin::plugin\_t< runtime\_cfg\_t >

The template class for C++ openMHA plugins.

## **Namespaces**

## MHAPlugin

Namespace for openMHA plugin class templates and thread-safe runtime configurations.

#### **Macros**

- #define **declspec**(p)
- #define WINAPI
- #define HINSTANCE int
- #define GITCOMMITHASH "independent-plugin-build"
- #define MHAPLUGIN\_PROC\_CALLBACK\_PREFIX(prefix, classname, indom, outdom)
- #define MHAPLUGIN INIT CALLBACKS PREFIX(prefix, classname)
- #define **MHAPLUGIN\_CALLBACKS\_PREFIX**(prefix, classname, indom, outdom)

  C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN\_DOCUMENTATION\_PREFIX(prefix, cat, doc)
- #define MHAPLUGIN\_INIT\_CALLBACKS(plugname, classname) MHAPLUGIN\_INIT
   —CALLBACKS\_PREFIX(MHA\_STATIC\_## plugname ## \_,classname)
- #define MHAPLUGIN\_CALLBACKS(plugname, classname, indom, outdom) MHAPLU
  GIN\_CALLBACKS\_PREFIX(MHA\_STATIC\_## plugname ## \_,classname,indom,outdom)

  C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN\_DOCUMENTATION(plugname, cat, doc) MHAPLUGIN\_DOCU
   MENTATION\_PREFIX(MHA\_STATIC\_## plugname ## \_,cat,doc)

Wrapper macro for the plugin documentation interface.

## **Functions**

\_\_attribute\_\_ ((unused)) static const char \*mha\_git\_commit\_hash
 store git commit hash in every binary plgin to support reproducible research

## 6.113.1 Detailed Description

Header file for MHA C++ plugin class templates.

This file defines useful macros and template classes for the development of MHA plugins. A set of macros wraps a C++ interface around the ANSI-C plugin interface. The plugin\_t template class defines a corresponding C++ class with all required members. This class can make use of thread safe configurations (config\_t).

```
6.113.2 Macro Definition Documentation
6.113.2.1 #define __declspec(
                      p)
6.113.2.2 #define WINAPI
6.113.2.3 #define HINSTANCE int
6.113.2.4 #define GITCOMMITHASH "independent-plugin-build"
6.113.2.5 #define MHAPLUGIN PROC CALLBACK PREFIX(
                      prefix,
                      classname,
                      indom,
                      outdom )
6.113.2.6 #define MHAPLUGIN_INIT_CALLBACKS_PREFIX(
                      prefix,
                      classname )
6.113.2.7 #define MHAPLUGIN DOCUMENTATION PREFIX(
                      prefix,
                      cat,
                      doc )
6.113.2.8 #define MHAPLUGIN_PROC_CALLBACK(
                      plugname,
                      classname,
                      indom.
                      outdom ) MHAPLUGIN PROC CALLBACK PREFIX(MHA_STATIC_##
          plugname ## _,classname,indom,outdom)
6.113.2.9 #define MHAPLUGIN_INIT_CALLBACKS(
                      plugname,
                      classname ) MHAPLUGIN INIT CALLBACKS PREFIX(MHA STATIC
          ## plugname ## ,classname)
6.113.3 Function Documentation
6.113.3.1
         attribute (
                     (unused) ) const
store git commit hash in every binary plgin to support reproducible research
```

## 6.114 mha\_profiling.c File Reference

## **Functions**

```
void mha_tic (mha_tictoc_t *t)
```

- void mha\_platform\_tic (mha\_platform\_tictoc\_t \*t)
- float mha\_toc (mha\_tictoc\_t \*t)
- float mha\_platform\_toc (mha\_platform\_tictoc\_t \*t)

```
6.114.1 Function Documentation
```

```
6.114.1.2 void mha_platform_tic (
mha_platform_tictoc_t * t )
```

```
6.114.1.3 float mha_toc (
mha_tictoc_t * t )
```

```
6.114.1.4 float mha_platform_toc (
mha_platform_tictoc_t * t )
```

6.115 mha\_profiling.h File Reference

## Classes

struct mha\_tictoc\_t

## **Typedefs**

typedef mha\_tictoc\_t mha\_platform\_tictoc\_t

### **Functions**

- void mha\_platform\_tic (mha\_platform\_tictoc\_t \*t)
- float mha\_platform\_toc (mha\_platform\_tictoc\_t \*t)

```
6.115.1 Typedef Documentation
6.115.1.1 typedef mha_tictoc_t mha_platform_tictoc_t
6.115.2 Function Documentation
6.115.2.1 void mha_platform_tic (
                      mha_platform_tictoc_t * t )
6.115.2.2 float mha_platform_toc (
                      mha_platform_tictoc_t * t )
6.116
       mha_ruby.cpp File Reference
Typedefs
   typedef VALUE(* rb_f_t) (...)
Functions

    static void mha_free (void *mha)

    static VALUE mha_alloc (VALUE klass)

    static VALUE mha_exit_request (VALUE self)

    static VALUE mha_parse (VALUE self, VALUE request)

   void Init_mha_ruby ()
       Typedef Documentation
6.116.1.1 typedef VALUE(* rb_f_t) (...)
6.116.2 Function Documentation
6.116.2.1 static void mha_free (
                      void * mha ) [static]
6.116.2.2 static VALUE mha_alloc (
                      VALUE klass ) [static]
6.116.2.3 static VALUE mha_exit_request (
                      VALUE self ) [static]
6.116.2.4 static VALUE mha_parse (
                      VALUE self,
                      VALUE request ) [static]
6.116.2.5 void Init_mha_ruby ( )
6.117 mha_signal.cpp File Reference
Classes
```

# © 2005-2018 HörTech gGmbH, Oldenburg

class MHASignal::hilbert\_fftw\_t

### **Namespaces**

# MHASignal

Namespace for audio signal handling and processing classes.

#### **Macros**

- #define MHA ID UINT VECTOR "MHASignal::uint vector t"
- #define MHA\_ID\_MATRIX "MHASignal::matrix\_t"
- #define ASSERT\_EQUAL\_DIM(a, b)
- #define ASSERT\_EQUAL\_DIM\_PTR(a, b)

### **Functions**

- void set minabs (mha spec t &self, const mha real t &m)
- mha\_wave\_t & operator+= (mha\_wave\_t &self, const mha\_real\_t &v)
   Addition operator.
- mha\_wave\_t & operator\*= (mha\_wave\_t &self, const mha\_real\_t &v)
   Element-wise multiplication operator.
- mha\_spec\_t & operator\*= (mha\_spec\_t &self, const mha\_real\_t &v)
   Element-wise multiplication operator.
- mha\_wave\_t & operator\*= (mha\_wave\_t &self, const mha\_wave\_t &v)

  Element-wise multiplication operator.
- mha\_spec\_t & operator\*= (mha\_spec\_t &self, const mha\_wave\_t &v)

  Element-wise multiplication operator.
- mha\_spec\_t & operator\*= (mha\_spec\_t &self, const mha\_spec\_t &v)

  Element-wise multiplication operator.
- mha\_spec\_t & safe\_div (mha\_spec\_t &self, const mha\_spec\_t &v, mha\_real\_t eps)
   In-Place division with lower limit on divisor.
- mha\_spec\_t & operator/= (mha\_spec\_t &self, const mha\_spec\_t &v)
   Element-wise division operator.
- mha\_wave\_t & operator/= (mha\_wave\_t &self, const mha\_wave\_t &v)
   Element-wise division operator.
- mha\_spec\_t & operator+= (mha\_spec\_t &self, const mha\_spec\_t &v)
   Addition operator.
- mha\_spec\_t & operator+= (mha\_spec\_t &self, const mha\_real\_t &v)
   Addition operator.
- mha\_wave\_t & operator+= (mha\_wave\_t &self, const mha\_wave\_t &v)
   Addition operator.
- mha\_wave\_t & operator-= (mha\_wave\_t &self, const mha\_wave\_t &v)
   Subtraction operator.
- mha\_spec\_t & operator-= (mha\_spec\_t &self, const mha\_spec\_t &v)
   Subtraction operator.
- mha\_fft\_t mha\_fft\_new (unsigned int n)

Create a new instance of an FFT object.

void mha\_fft\_free (mha\_fft\_t h)

Remove an FFT object.

• void mha\_fft\_wave2spec (mha\_fft\_t h, const mha\_wave\_t \*in, mha\_spec\_t \*out)

Perform an FFT on each channel of input waveform signal.

void mha\_fft\_wave2spec (mha\_fft\_t h, const mha\_wave\_t \*in, mha\_spec\_t \*out, bool swap)

Tranform waveform segment into spectrum.

- void mha\_fft\_spec2wave (mha\_fft\_t h, const mha\_spec\_t \*in, mha\_wave\_t \*out)

  Perform an inverse FFT on each channel of input spectrum.
- void mha\_fft\_spec2wave (mha\_fft\_t h, const mha\_spec\_t \*in, mha\_wave\_t \*out, unsigned int offset)

Perform an inverse FFT on each channel of input spectrum.

- void mha\_fft\_forward (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (forward).
- void mha\_fft\_backward (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (backward).
- void mha\_fft\_forward\_scale (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (forward).
- void mha\_fft\_backward\_scale (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (backward).
- void mha\_fft\_wave2spec\_scale (mha\_fft\_t h, const mha\_wave\_t \*in, mha\_spec\_←
  t \*out)

Tranform waveform segment into spectrum.

void mha\_fft\_spec2wave\_scale (mha\_fft\_t h, const mha\_spec\_t \*in, mha\_wave\_← t \*out)

Tranform spectrum into waveform segment.

- std::vector< float > std\_vector\_float (const mha\_wave\_t &w)
  - Converts a mha\_wave\_t (p. 472) structure into a std::vector<float> (interleaved order).
- std::vector< std::vector< float >> std\_vector\_vector\_float (const mha\_wave\_t &w)
   Converts a mha\_wave\_t (p. 472) structure into a std::vector< std::vector<float>> (outer vector represents channels).
- std::vector< std::vector< mha\_complex\_t >> std\_vector\_vector\_complex (const mha\_spec\_t &w)

Converts a **mha\_spec\_t** (p. 442) structure into a std::vector< std::vector< mha\_complex\_t> > (outer vector represents channels).

- static mha\_real\_t intensity (const mha\_spec\_t &s, unsigned int channel, unsigned int fftlen, mha\_real\_t \*sqfreq\_response=0)
- void integrate (mha\_wave\_t &s)

Numeric integration of a signal vector (real values)

void integrate (mha\_spec\_t &s)

Numeric integration of a signal vector (complex values)

- mha\_wave\_t & operator^= (mha\_wave\_t &self, const mha\_real\_t &arg)
   Exponent operator.
- mha\_wave\_t range (mha\_wave\_t s, unsigned int k0, unsigned int len)

Return a time interval from a waveform chunk.

```
    mha_spec_t channels (mha_spec_t s, unsigned int ch_start, unsigned int nch)

         Return a channel interval from a spectrum.

    void assign (mha_wave_t self, const mha_wave_t &val)

         Set all values of waveform 'self' to 'val'.
   void assign (mha_spec_t self, const mha_spec_t &val)
         Set all values of spectrum 'self' to 'val'.
   void timeshift (mha_wave_t &self, int shift)
         Time shift of waveform chunk.
6.117.1 Macro Definition Documentation
6.117.1.1 #define MHA_ID_UINT_VECTOR "MHASignal::uint_vector_t"
6.117.1.2 #define MHA_ID_MATRIX "MHASignal::matrix_t"
6.117.1.3 #define ASSERT EQUAL DIM(
                       b)
6.117.1.4 #define ASSERT_EQUAL_DIM_PTR(
                       a,
                       b)
6.117.2 Function Documentation
6.117.2.1 void set_minabs (
                      mha_spec_t & self,
                      const mha real t & m)
6.117.2.2 mha_spec_t& safe_div (
                      mha_spec_t & self,
                      const mha spec t & v,
                      mha_real_t eps )
In-Place division with lower limit on divisor.
6.117.2.3 static mha_real_t intensity (
                      const mha_spec_t & s,
```

6.118 mha\_signal.hh File Reference

Header file for audio signal handling and processing classes.

unsigned int *channel*, unsigned int *fftlen*,

mha real t \* sqfreq\_response = 0 ) [static]

#### **Classes**

class MHASignal::spectrum\_t

a signal processing class for spectral data (based on **mha\_spec\_t** (p. 442))

class MHASignal::waveform\_t

signal processing class for waveform data (based on mha\_wave\_t (p. 472))

class MHASignal::doublebuffer\_t

Double-buffering class.

class MHASignal::ringbuffer\_t

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

class MHASignal::hilbert\_t

Hilbert transformation of a waveform segment.

class MHASignal::minphase\_t

Minimal phase function.

- class MHASignal::stat\_t
- class MHASignal::delay\_wave\_t

Delayline containing wave fragments.

- class MHASignal::delay\_spec\_t
- class MHASignal::async\_rmslevel\_t

Class for asynchronous level metering.

class MHASignal::uint\_vector\_t

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

class MHASignal::matrix\_t

n-dimensional matrix with real or complex floating point values.

class MHASignal::schroeder\_t

Schroeder tone complex class.

class MHASignal::quantizer\_t

Simple simulation of fixpoint quantization.

class MHASignal::loop\_wavefragment\_t

Copy a fixed waveform fragment to a series of waveform fragments of other size.

class MHASignal::delay\_t

Class to realize a simple delay of waveform streams.

class MHASignal::subsample\_delay\_t

implements subsample delay in spectral domain.

# Namespaces

MHASignal

Namespace for audio signal handling and processing classes.

# **Macros**

- #define M\_PI 3.14159265358979323846
- #define mha\_round(x) (int)((float)x+0.5)

#### **Functions**

void MHASignal::for\_each (mha\_wave\_t \*s, mha\_real\_t(\*fun)(mha\_real\_t))
 Apply a function to each element of a mha\_wave\_t (p. 472).

mha\_real\_t MHASignal::lin2db (mha\_real\_t x)

Conversion from linear scale to dB (no SPL reference)

mha\_real\_t MHASignal::db2lin (mha\_real\_t x)

Conversion from dB scale to linear (no SPL reference)

mha\_real\_t MHASignal::pa2dbspl (mha\_real\_t x)

Conversion from linear Pascal scale to dB SPL.

• mha\_real\_t MHASignal::pa22dbspl (mha\_real\_t x, mha\_real\_t eps=1e-20f)

Conversion from squared Pascal scale to dB SPL.

mha\_real\_t MHASignal::dbspl2pa (mha\_real\_t x)

Conversion from dB SPL to linear Pascal scale.

mha\_real\_t MHASignal::smp2sec (mha\_real\_t n, mha\_real\_t srate)

conversion from samples to seconds

mha\_real\_t MHASignal::sec2smp (mha\_real\_t sec, mha\_real\_t srate)

conversion from seconds to samples

- mha\_real\_t MHASignal::bin2freq (mha\_real\_t bin, unsigned fftlen, mha\_real\_t srate) conversion from fft bin index to frequency
- mha\_real\_t MHASignal::freq2bin (mha\_real\_t freq, unsigned fftlen, mha\_real\_t srate)
   conversion from frequency to fft bin index
- mha\_real\_t MHASignal::smp2rad (mha\_real\_t samples, unsigned bin, unsigned fftlen)
   conversion from delay in samples to phase shift
- mha\_real\_t MHASignal::rad2smp (mha\_real\_t phase\_shift, unsigned bin, unsigned fftlen)

conversion from phase shift to delay in samples

template < class elem\_type > std::vector < elem\_type > MHASignal::dupvec (std::vector < elem\_type > vec, unsigned n)

Duplicate last vector element to match desired size.

template < class elem type >

std::vector< elem\_type > MHASignal::dupvec\_chk (std::vector< elem\_type > vec, unsigned n)

Duplicate last vector element to match desired size, check for dimension.

bool equal\_dim (const mha\_wave\_t &a, const mha\_wave\_t &b)

Test for equal dimension of waveform structures.

bool equal dim (const mha wave t &a, const mhaconfig t &b)

Test for match of waveform dimension with mhaconfig structure.

• bool equal\_dim (const mha\_spec\_t &a, const mha\_spec\_t &b)

Test for equal dimension of spectrum structures.

• bool equal\_dim (const mha\_spec\_t &a, const mhaconfig\_t &b)

Test for match of spectrum dimension with mhaconfig structure.

bool equal\_dim (const mha\_wave\_t &a, const mha\_spec\_t &b)

Test for equal dimension of waveform/spectrum structures.

bool equal\_dim (const mha\_spec\_t &a, const mha\_wave\_t &b)

Test for equal dimension of waveform/spectrum structures.

void integrate (mha\_wave\_t &s)

Numeric integration of a signal vector (real values)

void integrate (mha\_spec\_t &s)

Numeric integration of a signal vector (complex values)

- unsigned int mha\_min\_1 (unsigned int a)
- unsigned int size (const mha\_wave\_t &s)

Return size of a waveform structure.

unsigned int size (const mha\_spec\_t &s)

Return size of a spectrum structure.

unsigned int size (const mha\_wave\_t \*s)

Return size of a waveform structure.

unsigned int size (const mha\_spec\_t \*s)

Return size of a spectrum structure.

void clear (mha\_wave\_t &s)

Set all values of waveform to zero.

void clear (mha\_wave\_t \*s)

Set all values of waveform to zero.

void clear (mha\_spec\_t &s)

Set all values of spectrum to zero.

void clear (mha\_spec\_t \*s)

Set all values of spectrum to zero.

void assign (mha\_wave\_t self, mha\_real\_t val)

Set all values of waveform 'self' to 'val'.

void assign (mha\_wave\_t self, const mha\_wave\_t &val)

Set all values of waveform 'self' to 'val'.

void assign (mha\_spec\_t self, const mha\_spec\_t &val)

Set all values of spectrum 'self' to 'val'.

void timeshift (mha\_wave\_t &self, int shift)

Time shift of waveform chunk.

mha\_wave\_t range (mha\_wave\_t s, unsigned int k0, unsigned int len)

Return a time interval from a waveform chunk.

• mha\_spec\_t channels (mha\_spec\_t s, unsigned int ch\_start, unsigned int nch)

Return a channel interval from a spectrum.

mha real t & value (mha wave t \*s, unsigned int fr, unsigned int ch)

Access an element of a waveform structure.

• const mha\_real\_t & value (const mha\_wave\_t \*s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

- mha real t & value (mha wave t \*s, unsigned int k)
- mha complex t & value (mha spec t \*s, unsigned int k)
- mha\_complex\_t & value (mha\_spec\_t \*s, unsigned int fr, unsigned int ch)

Access to an element of a spectrum.

const mha\_complex\_t & value (const mha\_spec\_t \*s, unsigned int fr, unsigned int ch)

Constant access to an element of a spectrum.

mha\_real\_t & value (mha\_wave\_t &s, unsigned int fr, unsigned int ch)

Access to an element of a waveform structure.

• const mha\_real\_t & value (const mha\_wave\_t &s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

mha\_complex\_t & value (mha\_spec\_t &s, unsigned int fr, unsigned int ch)
 Access to an element of a spectrum.

- const mha\_complex\_t & value (const mha\_spec\_t &s, unsigned int fr, unsigned int ch)

  Constant access to an element of a spectrum.
- std::vector< float > std\_vector\_float (const mha\_wave\_t &)
   Converts a mha\_wave\_t (p. 472) structure into a std::vector<float> (interleaved order).
- std::vector< std::vector< float >> std\_vector\_vector\_float (const mha\_wave\_t &)
   Converts a mha\_wave\_t (p. 472) structure into a std::vector< std::vector<float> > (outer vector represents channels).
- std::vector< std::vector< mha\_complex\_t > > std\_vector\_vector\_complex (const mha\_spec\_t &)

Converts a **mha\_spec\_t** (p. 442) structure into a std::vector< std::vector< mha\_complex\_t> > (outer vector represents channels).

- mha\_wave\_t & operator+= (mha\_wave\_t &, const mha\_real\_t &)
   Addition operator.
- mha\_wave\_t & operator+= (mha\_wave\_t &, const mha\_wave\_t &)
   Addition operator.
- mha\_wave\_t & operator-= (mha\_wave\_t &, const mha\_wave\_t &)
   Subtraction operator.
- mha\_spec\_t & operator-= (mha\_spec\_t &, const mha\_spec\_t &)
   Subtraction operator.
- mha\_wave\_t & operator\*= (mha\_wave\_t &, const mha\_real\_t &)

  Element-wise multiplication operator.
- mha\_wave\_t & operator\*= (mha\_wave\_t &, const mha\_wave\_t &)
   Element-wise multiplication operator.
- mha\_spec\_t & operator\*= (mha\_spec\_t &, const mha\_real\_t &)
   Element-wise multiplication operator.
- mha\_spec\_t & operator\*= (mha\_spec\_t &, const mha\_wave\_t &)

  Element-wise multiplication operator.
- mha\_spec\_t & operator\*= (mha\_spec\_t &, const mha\_spec\_t &)

  Element-wise multiplication operator.
- mha\_spec\_t & operator/= (mha\_spec\_t &, const mha\_spec\_t &)
   Element-wise division operator.
- mha\_wave\_t & operator/= (mha\_wave\_t &, const mha\_wave\_t &)
   Element-wise division operator.
- mha\_spec\_t & operator+= (mha\_spec\_t &, const mha\_spec\_t &)
   Addition operator.
- mha\_spec\_t & operator+= (mha\_spec\_t &, const mha\_real\_t &)
   Addition operator.
- void set\_minabs (mha\_spec\_t &, const mha\_real\_t &)
- mha\_spec\_t & safe\_div (mha\_spec\_t &self, const mha\_spec\_t &v, mha\_real\_t eps)
   In-Place division with lower limit on divisor.

mha\_wave\_t & operator^= (mha\_wave\_t &self, const mha\_real\_t &arg)
 Exponent operator.

void MHASignal::copy\_channel (mha\_spec\_t &self, const mha\_spec\_t &src, unsigned sch, unsigned dch)

Copy one channel of a source signal.

• void MHASignal::copy\_channel (mha\_wave\_t &self, const mha\_wave\_t &src, unsigned src\_channel, unsigned dest\_channel)

Copy one channel of a source signal.

mha\_real\_t MHASignal::rmslevel (const mha\_spec\_t &s, unsigned int channel, unsigned int fftlen)

Return RMS level of a spectrum channel.

mha\_real\_t MHASignal::colored\_intensity (const mha\_spec\_t &s, unsigned int channel, unsigned int fftlen, mha\_real\_t sqfreq\_response[])

Colored spectrum intensity.

mha\_real\_t MHASignal::maxabs (const mha\_spec\_t &s, unsigned int channel)
 Find maximal absolute value.

mha\_real\_t MHASignal::rmslevel (const mha\_wave\_t &s, unsigned int channel)
 Return RMS level of a waveform channel.

• mha\_real\_t MHASignal::maxabs (const mha\_wave\_t &s, unsigned int channel)

Find maximal absolute value.

mha\_real\_t MHASignal::maxabs (const mha\_wave\_t &s)

Find maximal absolute value.

mha\_real\_t MHASignal::max (const mha\_wave\_t &s)

Find maximal value.

mha\_real\_t MHASignal::min (const mha\_wave\_t &s)

Find minimal value.

mha\_real\_t MHASignal::sumsqr\_channel (const mha\_wave\_t &s, unsigned int channel)

Calculate sum of squared values in one channel.

- mha\_real\_t MHASignal::sumsqr\_frame (const mha\_wave\_t &s, unsigned int frame)

  Calculate sum over all channels of squared values.
- void MHASignal::scale (mha\_spec\_t \*dest, const mha\_wave\_t \*src)
- void MHASignal::limit (mha\_wave\_t &s, const mha\_real\_t &min, const mha\_real\_t &max)

Limit the singal in the waveform buffer to the range [min, max].

• mha\_complex\_t & set (mha\_complex\_t &self, mha\_real\_t real, mha\_real\_t imag=0)

Assign real and imaginary parts to a mha\_complex\_t (p. 410) variable.

• mha\_complex\_t mha\_complex (mha\_real\_t real, mha\_real\_t imag=0)

Create a new mha\_complex\_t (p. 410) with specified real and imaginary parts.

mha\_complex\_t & set (mha\_complex\_t &self, const std::complex < mha\_real\_t > &stdcomplex)

Assign a **mha\_complex\_t** (p. 410) variable from a std::complex.

std::complex < mha real t > stdcomplex (const mha complex t &self)

Create a std::complex from mha\_complex\_t (p. 410).

mha\_complex\_t & expi (mha\_complex\_t &self, mha\_real\_t angle)

replaces the value of the given **mha\_complex\_t** (p. 410) with exp(i\*b).

double angle (const mha\_complex\_t &self)

Computes the angle of a complex number in the complex plane.

• mha\_complex\_t & operator+= (mha\_complex\_t &self, const mha\_complex\_t &other)

Addition of two complex numbers, overwriting the first.

mha\_complex\_t operator+ (const mha\_complex\_t &self, const mha\_complex\_
 t &other)

Addition of two complex numbers, result is a temporary object.

mha\_complex\_t & operator+= (mha\_complex\_t &self, mha\_real\_t other\_real)

Addition of a complex and a real number, overwriting the complex.

• mha\_complex\_t operator+ (const mha\_complex\_t &self, mha\_real\_t other\_real)

Addition of a complex and a real number, result is a temporary object.

- mha\_complex\_t & operator-= (mha\_complex\_t &self, const mha\_complex\_t &other)

  Subtraction of two complex numbers, overwriting the first.
- mha\_complex\_t operator- (const mha\_complex\_t &self, const mha\_complex\_← t &other)

Subtraction of two complex numbers, result is a temporary object.

- mha\_complex\_t & operator-= (mha\_complex\_t &self, mha\_real\_t other\_real)

  Subtraction of a complex and a real number, overwriting the complex.
- mha\_complex\_t operator- (const mha\_complex\_t &self, mha\_real\_t other\_real)

  Subtraction of a complex and a real number, result is a temporary object.
- mha\_complex\_t & operator\*= (mha\_complex\_t &self, const mha\_complex\_t &other)
   Multiplication of two complex numbers, overwriting the first.
- mha\_complex\_t operator\* (const mha\_complex\_t &self, const mha\_complex\_
   t &other)

Multiplication of two complex numbers, result is a temporary object.

- mha\_complex\_t & operator\*= (mha\_complex\_t &self, mha\_real\_t other\_real)

  Multiplication of a complex and a real number, overwriting the complex.
- mha\_complex\_t & expi (mha\_complex\_t &self, mha\_real\_t angle, mha\_real\_t factor)
   replaces (!) the value of the given mha\_complex\_t (p. 410) with a \* exp(i\*b)
- mha\_complex\_t operator\* (const mha\_complex\_t &self, mha\_real\_t other\_real)

  Multiplication of a complex and a real number, result is a temporary object.
- mha real t abs2 (const mha complex t &self)

Compute the square of the absolute value of a complex value.

mha\_real\_t abs (const mha\_complex\_t &self)

Compute the absolute value of a complex value.

- mha\_complex\_t & operator/= (mha\_complex\_t &self, mha\_real\_t other\_real)

  Division of a complex and a real number, overwriting the complex.
- mha\_complex\_t operator/ (const mha\_complex\_t &self, mha\_real\_t other\_real)

  Division of a complex and a real number, result is a temporary object.
- mha\_complex\_t & safe\_div (mha\_complex\_t &self, const mha\_complex\_t &other, mha\_real\_t eps, mha\_real\_t eps2)

Safe division of two complex numbers, overwriting the first.

- mha\_complex\_t & operator/= (mha\_complex\_t &self, const mha\_complex\_t &other)

  Division of two complex numbers, overwriting the first.
- mha\_complex\_t operator/ (const mha\_complex\_t &self, const mha\_complex\_← t &other)

Division of two complex numbers, result is a temporary object.

mha\_complex\_t operator- (const mha\_complex\_t &self)

Unary minus on a complex results in a negative temporary object.

• bool operator== (const mha\_complex\_t &x, const mha\_complex\_t &y)

Compare two complex numbers for equality.

• bool operator!= (const mha\_complex\_t &x, const mha\_complex\_t &y)

Compare two complex numbers for inequality.

void conjugate (mha\_complex\_t &self)

Replace (!) the value of this **mha\_complex\_t** (p. 410) with its conjugate.

void conjugate (mha\_spec\_t &self)

Replace (!) the value of this **mha\_spec\_t** (p. 442) with its conjugate.

mha\_complex\_t \_conjugate (const mha\_complex\_t &self)

Compute the cojugate of this complex value.

void reciprocal (mha\_complex\_t &self)

Replace the value of this complex with its reciprocal.

• mha\_complex\_t \_reciprocal (const mha\_complex\_t &self)

compute the reciprocal of this complex value.

void normalize (mha complex t &self)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle).

void normalize (mha\_complex\_t &self, mha\_real\_t margin)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle), with a safety margin.

bool almost (const mha\_complex\_t &self, const mha\_complex\_t &other, mha\_real\_t times epsilon=1e2)

Compare two complex numbers for equality except for a small relative error.

• bool operator< (const mha\_complex\_t &x, const mha\_complex\_t &y)

Compares the absolute values of two complex numbers.

• std::ostream & operator<< (std::ostream &o, const mha\_complex\_t &c)

ostream operator for **mha\_complex\_t** (p. 410)

• std::istream & operator>> (std::istream &i, mha complex t &c)

preliminary istream operator for mha\_complex\_t (p. 410) without error checking

mha\_fft\_t mha\_fft\_new (unsigned int n)

Create a new FFT handle.

void mha\_fft\_free (mha\_fft\_t h)

Destroy an FFT handle.

 $\bullet \ \ \mathsf{void} \ \ \mathsf{mha\_fft\_wave2spec} \ \ (\mathsf{mha\_fft\_t} \ \ \mathsf{h}, \ \mathsf{const} \ \ \mathsf{mha\_wave\_t} \ *\mathsf{in}, \ \mathsf{mha\_spec\_t} \ *\mathsf{out})$ 

Tranform waveform segment into spectrum.

void mha\_fft\_wave2spec (mha\_fft\_t h, const mha\_wave\_t \*in, mha\_spec\_t \*out, bool swaps)

Tranform waveform segment into spectrum.

 $\bullet \ \ \text{void} \ \ \textbf{mha\_fft\_spec2wave} \ (\textbf{mha\_fft\_t} \ \ \textbf{h}, \ \text{const} \ \ \textbf{mha\_spec\_t} \ * \text{in}, \ \textbf{mha\_wave\_t} \ * \text{out})$ 

Tranform spectrum into waveform segment.

void mha\_fft\_spec2wave (mha\_fft\_t h, const mha\_spec\_t \*in, mha\_wave\_t \*out, unsigned int offset)

Tranform spectrum into waveform segment.

• void mha\_fft\_forward (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

Complex to complex FFT (forward).

• void mha\_fft\_backward (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

Complex to complex FFT (backward).

- void mha\_fft\_forward\_scale (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (forward).
- void mha\_fft\_backward\_scale (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (backward).
- void mha\_fft\_wave2spec\_scale (mha\_fft\_t h, const mha\_wave\_t \*in, mha\_spec\_←
  t \*out)

Tranform waveform segment into spectrum.

void mha\_fft\_spec2wave\_scale (mha\_fft\_t h, const mha\_spec\_t \*in, mha\_wave\_←
t \*out)

Tranform spectrum into waveform segment.

template<class elem\_type >

elem\_type MHASignal::kth\_smallest (elem\_type array[], unsigned n, unsigned k)

Fast search for the kth smallest element of an array.

template < class elem\_type >

elem\_type **MHASignal::median** (elem\_type array[], unsigned n)

Fast median search.

template < class elem\_type >

elem\_type **MHASignal::mean** (const std::vector< elem\_type > &data, elem\_type start ← \_val)

Calculate average of elements in a vector.

template<class elem\_type >

std::vector< elem\_type > MHASignal::quantile (std::vector< elem\_type > data, const std::vector< elem\_type > &p)

Calculate quantile of elements in a vector.

 void MHASignal::saveas\_mat4 (const mha\_spec\_t &data, const std::string &varname, FILE \*fh)

Save a openMHA spectrum as a variable in a Matlab4 file.

 void MHASignal::saveas\_mat4 (const mha\_wave\_t &data, const std::string &varname, FILE \*fh)

Save a openMHA waveform as a variable in a Matlab4 file.

void MHASignal::saveas\_mat4 (const std::vector< mha\_real\_t > &data, const std
 ::string &varname, FILE \*fh)

Save a float vector as a variable in a Matlab4 file.

void MHASignal::copy permuted (mha wave t \*dest, const mha wave t \*src)

Copy contents of a waveform to a permuted waveform.

# **Variables**

unsigned long int MHASignal::signal counter = 0

Signal counter to produce signal ID strings.

# 6.118.1 Detailed Description

Header file for audio signal handling and processing classes.

The classes for waveform, spectrum and filterbank signals defined in this file are "intelligent" versions of the basic waveform, spectrum and filterbank structures used in the C function calls.

```
6.118.2 Macro Definition Documentation
6.118.2.1 #define M_PI 3.14159265358979323846
6.118.2.2 #define mha_round(
                      x ) (int)((float)x+0.5)
6.118.3 Function Documentation
6.118.3.1 unsigned int mha_min_1 (
                      unsigned int a ) [inline]
6.118.3.2 mha real t& value (
                      mha_wave_t * s,
                      unsigned int k ) [inline]
6.118.3.3 mha_complex_t& value (
                      mha_spec_t * s,
                      unsigned int k ) [inline]
6.118.3.4 void set_minabs (
                      mha_spec_t &,
                      const mha_real_t & )
6.118.3.5 mha_spec_t& safe_div (
                      mha_spec_t & self,
                      const mha_spec_t & v,
                      mha_real_t eps )
In-Place division with lower limit on divisor.
6.118.3.6 std::ostream& operator << (
                      std::ostream & o,
                      const mha_complex_t & c ) [inline]
ostream operator for mha_complex_t (p. 410)
```

preliminary istream operator for mha\_complex\_t (p. 410) without error checking

6.119 mha\_signal\_fft.h File Reference

Classes

class MHASignal::fft\_t

# **Namespaces**

MHASignal

Namespace for audio signal handling and processing classes.

- 6.120 mha\_tablelookup.cpp File Reference
- 6.121 mha\_tablelookup.hh File Reference

Header file for table lookup classes.

# Classes

- class MHATableLookup::table\_t
- class MHATableLookup::linear\_table\_t

Class for interpolation with equidistant x values.

class MHATableLookup::xy\_table\_t

Class for interpolation with non-equidistant x values.

# **Namespaces**

MHATableLookup

Namespace for table lookup classes.

6.121.1 Detailed Description

Header file for table lookup classes.

# 6.122 mha\_tcp.cpp File Reference

#### Classes

class MHA\_TCP::sock\_init\_t

# **Namespaces**

MHA TCP

A Namespace for TCP helper classes.

#### **Macros**

- #define INVALID\_SOCKET (-1)
- #define SOCKET ERROR (-1)
- #define closesocket(fd) (close((fd)))
- #define ASYNC\_CONNECT\_STARTED EINPROGRESS

# **Typedefs**

· typedef int SOCKET

# **Functions**

• std::string MHA\_TCP::STRERROR (int err)

Portable conversion from error number to error string.

std::string MHA\_TCP::HSTRERROR (int err)

Portable conversion from hostname error number to error string.

• int MHA\_TCP::N\_ERRNO ()

Portable access to last network error number.

int MHA\_TCP::H\_ERRNO ()

Portable access to last hostname error number.

• int MHA\_TCP::G\_ERRNO ()

Portable access to last non-network error number.

- static sockaddr\_in host\_port\_to\_sock\_addr (const std::string &host, unsigned short port)
- static SOCKET tcp\_connect\_to (const std::string &host, unsigned short port)
- static SOCKET tcp\_connect\_to\_with\_timeout (const std::string &host, unsigned short port, Timeout\_Watcher &timeout\_watcher)
- static void \* thread\_start\_func (void \*thread)

### **Variables**

class MHA\_TCP::sock\_init\_t MHA\_TCP::sock\_initializer

```
6.122.1 Macro Definition Documentation
6.122.1.1 #define INVALID_SOCKET (-1)
6.122.1.2 #define SOCKET_ERROR (-1)
6.122.1.3 #define closesocket(
                       fd ) (close((fd)))
6.122.1.4 #define ASYNC_CONNECT_STARTED EINPROGRESS
6.122.2 Typedef Documentation
6.122.2.1 typedef int SOCKET
6.122.3 Function Documentation
6.122.3.1 static sockaddr_in host_port_to_sock_addr (
                      const std::string & host,
                      unsigned short port ) [static]
6.122.3.2 static SOCKET tcp_connect_to (
                      const std::string & host,
                      unsigned short port ) [static]
6.122.3.3 static SOCKET tcp_connect_to_with_timeout (
                      const std::string & host,
                      unsigned short port,
                      Timeout_Watcher & timeout_watcher ) [static]
6.122.3.4 static void* thread_start_func (
                      void * thread ) [static]
6.123
       mha tcp.hh File Reference
Classes
```

- struct MHA TCP::OS EVENT TYPE
- class MHA\_TCP::Wakeup\_Event

A base class for asynchronous wakeup events.

class MHA\_TCP::Async\_Notify

Portable Multiplexable cross-thread notification.

class MHA\_TCP::Event\_Watcher

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

class MHA\_TCP::Timeout\_Event

class MHA\_TCP::Timeout\_Watcher

OS-independent event watcher with internal fixed-end-time timeout.

class MHA TCP::Sockread Event

Watch socket for incoming data.

- class MHA\_TCP::Sockwrite\_Event
- class MHA TCP::Sockaccept Event
- class MHA\_TCP::Connection

Connection (p. 447) handles Communication between client and server, is used on both sides.

- class MHA TCP::Server
- class MHA TCP::Client

A portable class for a tcp client connections.

class MHA\_TCP::Thread

A very simple class for portable threads.

# **Namespaces**

MHA\_TCP

A Namespace for TCP helper classes.

#### **Macros**

• #define **Sleep**(x) usleep((x)\*1000);

# **Typedefs**

typedef int MHA\_TCP::SOCKET

#### **Functions**

std::string MHA\_TCP::STRERROR (int err)

Portable conversion from error number to error string.

std::string MHA\_TCP::HSTRERROR (int err)

Portable conversion from hostname error number to error string.

int MHA\_TCP::N\_ERRNO ()

Portable access to last network error number.

• int MHA\_TCP::H\_ERRNO ()

Portable access to last hostname error number.

• int MHA\_TCP::G\_ERRNO ()

Portable access to last non-network error number.

double MHA\_TCP::dtime ()

Time access function for system's high resolution time, retrieve current time as double.

double MHA TCP::dtime (const struct timeval &tv)

Time access function for unix' high resolution time, converts struct timeval to double.

• struct timeval MHA\_TCP::stime (double d)

Time access function for unix' high resolution time, converts time from double to struct timeval.

6.123.1 Macro Definition Documentation

6.123.1.1 #define Sleep(

x ) usleep((x)\*1000);

- 6.124 mha\_toolbox.h File Reference
- 6.125 mha\_windowparser.cpp File Reference

**Variables** 

- float(\* wnd\_funs [])(float)
- 6.125.1 Variable Documentation
- 6.125.1.1 float(\* wnd\_funs[])(float)
- 6.126 mha\_windowparser.h File Reference

Classes

· class MHAWindow::base\_t

Common base for window types.

class MHAWindow::fun\_t

Generic window based on a generator function.

class MHAWindow::rect\_t

Rectangular window.

class MHAWindow::bartlett\_t

Bartlett window.

class MHAWindow::hanning\_t

von-Hann window

class MHAWindow::hamming\_t

Hamming window.

• class MHAWindow::blackman t

Blackman window.

class MHAWindow::user t

User defined window.

class MHAParser::window t

MHA configuration interface for a window function generator.

# **Namespaces**

MHAWindow

Collection of Window types.

MHAParser

Name space for the openMHA-Parser configuration language.

# **Functions**

float MHAWindow::rect (float)

Rectangular window function.

float MHAWindow::bartlett (float)

Bartlett window function.

float MHAWindow::hanning (float)

Hanning window function.

float MHAWindow::hamming (float)

Hamming window function.

float MHAWindow::blackman (float)

Blackman window function.

# 6.127 mhachain.cpp File Reference

# Classes

class mhachain::mhachain\_t

# **Namespaces**

- mhachain
- 6.128 mhafw\_lib.cpp File Reference
- 6.129 mhafw\_lib.h File Reference

### Classes

· class io\_lib\_t

Class for loading MHA sound IO module.

- class fw\_vars\_t
- class fw\_t

# 6.130 MHAIOalsa.cpp File Reference

### Classes

- class alsa\_base\_t
- · class alsa\_dev\_par\_parser\_t

Parser variables corresponding to one alsa device.

class alsa t< T >

Our representation of one alsa device.

class io alsa t

MHA IO interface class for ALSA IO.

#### **Macros**

- #define DBG(x) fprintf(stderr,"%s:%d\n",\_\_FILE\_\_\_,\_\_LINE\_\_\_)
- #define ERR SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR USER -1000
- #define MAX USER ERR 0x500
- #define IOInit MHA STATIC MHAIOalsa IOInit
- #define IOPrepare MHA STATIC MHAIOalsa IOPrepare
- #define IOStart MHA\_STATIC\_MHAIOalsa\_IOStart
- #define IOStop MHA STATIC MHAIOalsa IOStop
- #define IORelease MHA STATIC MHAIOalsa IORelease
- #define IOSetVar MHA\_STATIC\_MHAIOalsa\_IOSetVar
- #define IOStrError MHA\_STATIC\_MHAIOalsa\_IOStrError
- #define IODestroy MHA STATIC MHAIOalsa IODestroy
- #define dummy\_interface\_test MHA\_STATIC\_MHAIOalsa\_dummy\_interface\_test

# **Functions**

int IOInit (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_
handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_
event, void \*stop\_handle, void \*\*handle)

IO library initialization function, called by framework after loading this IO library into the MHA process.

- int IOPrepare (void \*handle, int nch\_in, int nch\_out)
  - IO library prepare function, called after the MHA prepared the processing plugins.
- int IOStart (void \*handle)
- int **IOStop** (void \*handle)
- int IORelease (void \*handle)
- int IOSetVar (void \*handle, const char \*command, char \*retval, unsigned int maxretlen)
- const char \* IOStrError (void \*handle, int err)
- void IODestroy (void \*handle)
- void dummy\_interface\_test (void)

**Variables** 

static char user\_err\_msg [MAX\_USER\_ERR]

```
6.130.1 Macro Definition Documentation
6.130.1.1 #define DBG(
                       x ) fprintf(stderr,"%s:%d\n",__FILE__,_LINE__)
6.130.1.2 #define ERR SUCCESS 0
6.130.1.3 #define ERR_IHANDLE -1
6.130.1.4 #define ERR_USER -1000
6.130.1.5 #define MAX_USER_ERR 0x500
6.130.1.6 #define IOInit MHA_STATIC_MHAIOalsa_IOInit
6.130.1.7 #define IOPrepare MHA_STATIC_MHAIOalsa_IOPrepare
6.130.1.8 #define IOStart MHA_STATIC_MHAIOalsa_IOStart
6.130.1.9 #define IOStop MHA_STATIC_MHAIOalsa_IOStop
6.130.1.10 #define IORelease MHA_STATIC_MHAIOalsa_IORelease
6.130.1.11 #define IOSetVar MHA_STATIC_MHAIOalsa_IOSetVar
6.130.1.12 #define IOStrError MHA_STATIC_MHAIOalsa_IOStrError
6.130.1.13 #define IODestroy MHA_STATIC_MHAIOalsa_IODestroy
6.130.1.14 #define dummy_interface_test MHA_STATIC_MHAIOalsa_dummy_interface_test
6.130.2 Function Documentation
6.130.2.1 int IOInit (
                      int fragsize,
                      float samplerate,
                      IOProcessEvent_t proc_event,
                      void * proc_handle,
                      IOStartedEvent t start event,
                      void * start handle,
                      IOStoppedEvent_t stop_event,
                      void * stop_handle,
                      void ** handle )
```

IO library initialization function, called by framework after loading this IO library into the MHA process.

Gives plugin callback functions and callback handles to interact with the MHA framework.

# **Parameters**

handle output parameter. IO library returns pointer to void to the caller via this parameter.

All other function calls from the MHA framework will use this handle.

```
6.130.2.2 int IOPrepare (

void * handle,

int nch_in,

int nch_out )
```

IO library prepare function, called after the MHA prepared the processing plugins.

```
6.130.2.3 int IOStart (
                       void * handle )
6.130.2.4 int IOStop (
                        void * handle )
6.130.2.5 int IORelease (
                        void * handle )
6.130.2.6 int IOSetVar (
                        void * handle,
                       const char * command,
                        char * retval.
                        unsigned int maxretlen )
6.130.2.7 const char* IOStrError (
                       void * handle,
                       int err )
6.130.2.8 void IODestroy (
                        void * handle )
6.130.2.9 void dummy_interface_test (
                        void )
6.130.3 Variable Documentation
6.130.3.1
          char user_err_msg[MAX USER ERR] [static]
6.131
        MHAIOFile.cpp File Reference
```

# **Classes**

• class io\_file\_t
File IO.

#### **Macros**

- #define DEBUG(x) std::cerr << \_\_FILE\_\_ << ":" << \_\_LINE\_\_ << " " << #x " = " << x</li>
   std::endl
- #define ERR\_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR USER -1000
- #define MAX USER ERR 0x500
- #define IOInit MHA\_STATIC\_MHAIOFile\_IOInit
- #define IOPrepare MHA\_STATIC\_MHAIOFile\_IOPrepare
- #define IOStart MHA STATIC MHAIOFile IOStart
- #define IOStop MHA\_STATIC\_MHAIOFile\_IOStop
- #define IORelease MHA\_STATIC\_MHAIOFile\_IORelease
- #define IOSetVar MHA\_STATIC\_MHAIOFile\_IOSetVar
- #define IOStrError MHA\_STATIC\_MHAIOFile\_IOStrError
- #define IODestroy MHA\_STATIC\_MHAIOFile\_IODestroy
- #define dummy\_interface\_test MHA\_STATIC\_MHAIOFile\_dummy\_interface\_test

#### **Functions**

- int IOInit (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_
  handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_
  event, void \*stop\_handle, void \*\*handle)
- int IOPrepare (void \*handle, int nch\_in, int nch\_out)
- int IOStart (void \*handle)
- int IOStop (void \*handle)
- int **IORelease** (void \*handle)
- int IOSetVar (void \*handle, const char \*command, char \*retval, unsigned int maxretlen)
- const char \* IOStrError (void \*handle, int err)
- void IODestroy (void \*handle)
- void dummy\_interface\_test (void)

#### **Variables**

static char user\_err\_msg [MAX\_USER\_ERR]

# 6.131.1 Macro Definition Documentation

6.131.1.1 #define DEBUG(

x ) std::cerr << \_\_FILE\_\_ << ":" << \_\_LINE\_\_ << " " << #x " = " << x << std::endl

6.131.1.2 #define ERR SUCCESS 0

```
6.131.1.3 #define ERR_IHANDLE -1
6.131.1.4 #define ERR USER -1000
6.131.1.5 #define MAX_USER_ERR 0x500
6.131.1.6 #define IOInit MHA_STATIC_MHAIOFile_IOInit
6.131.1.7 #define IOPrepare MHA_STATIC_MHAIOFile_IOPrepare
6.131.1.8 #define IOStart MHA_STATIC_MHAIOFile_IOStart
6.131.1.9 #define IOStop MHA_STATIC_MHAIOFile_IOStop
6.131.1.10 #define IORelease MHA STATIC MHAIOFile IORelease
6.131.1.11 #define IOSetVar MHA_STATIC_MHAIOFile_IOSetVar
6.131.1.12 #define IOStrError MHA_STATIC_MHAIOFile_IOStrError
6.131.1.13 #define IODestroy MHA_STATIC_MHAIOFile_IODestroy
6.131.1.14 #define dummy_interface_test MHA_STATIC_MHAIOFile_dummy_interface_test
6.131.2 Function Documentation
6.131.2.1 int IOInit (
                       int fragsize,
                      float samplerate,
                       IOProcessEvent_t proc_event,
                       void * proc_handle,
                       IOStartedEvent_t start_event,
                       void * start handle,
                       IOStoppedEvent t stop event,
                       void * stop_handle,
                       void ** handle )
6.131.2.2 int IOPrepare (
                       void * handle,
                       int nch in,
                       int nch_out )
6.131.2.3 int IOStart (
                       void * handle )
```

```
6.131.2.4 int IOStop (
                       void * handle )
6.131.2.5 int IORelease (
                       void * handle )
6.131.2.6 int IOSetVar (
                       void * handle,
                       const char * command,
                       char * retval,
                       unsigned int maxretlen )
6.131.2.7 const char* IOStrError (
                       void * handle,
                       int err )
6.131.2.8 void IODestroy (
                       void * handle )
6.131.2.9 void dummy_interface_test (
                       void )
6.131.3 Variable Documentation
6.131.3.1 char user_err_msg[MAX_USER_ERR] [static]
6.132 MHAIOJack.cpp File Reference
Classes

    class MHAIOJack::io_jack_t

         Main class for JACK IO.
```

**Namespaces** 

MHAIOJack

JACK IO.

#### **Macros**

- #define ERR SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR\_USER -1000
- #define MAX USER ERR 0x500
- #define IOInit MHA\_STATIC\_MHAIOJack\_IOInit
- #define IOPrepare MHA\_STATIC\_MHAIOJack\_IOPrepare
- #define IOStart MHA\_STATIC\_MHAIOJack\_IOStart
- #define IOStop MHA\_STATIC\_MHAIOJack\_IOStop
- #define IORelease MHA STATIC MHAIOJack IORelease
- #define IOSetVar MHA\_STATIC\_MHAIOJack\_IOSetVar
- #define IOStrError MHA\_STATIC\_MHAIOJack\_IOStrError
- #define IODestroy MHA\_STATIC\_MHAIOJack\_IODestroy
- #define dummy\_interface\_test MHA\_STATIC\_MHAIOJack\_dummy\_interface\_test

#### **Functions**

- int IOInit (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_
  handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_
  event, void \*stop\_handle, void \*\*handle)
- int IOPrepare (void \*handle, int nch in, int nch out)
- int IOStart (void \*handle)
- int IOStop (void \*handle)
- int **IORelease** (void \*handle)
- int IOSetVar (void \*handle, const char \*command, char \*retval, unsigned int maxretlen)
- const char \* **IOStrError** (void \*handle, int err)
- void IODestroy (void \*handle)
- void dummy\_interface\_test (void)

# **Variables**

static char user err msg [MAX USER ERR] = ""

**6.132.1** Macro Definition Documentation

6.132.1.1 #define ERR\_SUCCESS 0

6.132.1.2 #define ERR\_IHANDLE -1

6.132.1.3 #define ERR\_USER -1000

6.132.1.4 #define MAX USER ERR 0x500

```
6.132.1.5
          #define IOInit MHA_STATIC_MHAIOJack_IOInit
6.132.1.6
         #define IOPrepare MHA_STATIC_MHAIOJack_IOPrepare
6.132.1.7 #define IOStart MHA_STATIC_MHAIOJack_IOStart
6.132.1.8 #define IOStop MHA_STATIC_MHAIOJack_IOStop
6.132.1.9 #define IORelease MHA_STATIC_MHAIOJack_IORelease
6.132.1.10 #define IOSetVar MHA_STATIC_MHAIOJack_IOSetVar
6.132.1.11 #define IOStrError MHA_STATIC_MHAIOJack_IOStrError
6.132.1.12 #define IODestroy MHA_STATIC_MHAIOJack_IODestroy
6.132.1.13 #define dummy_interface_test MHA_STATIC_MHAIOJack_dummy_interface_test
6.132.2 Function Documentation
6.132.2.1 int IOInit (
                       int fragsize,
                       float samplerate,
                       IOProcessEvent_t proc_event,
                       void * proc_handle,
                       IOStartedEvent t start event,
                       void * start handle,
                       IOStoppedEvent_t stop_event,
                       void * stop_handle,
                       void ** handle )
6.132.2.2 int IOPrepare (
                       void * handle,
                       int nch_in,
                       int nch_out )
6.132.2.3 int IOStart (
                       void * handle )
6.132.2.4 int IOStop (
                       void * handle )
6.132.2.5 int IORelease (
                       void * handle )
```

### Classes

class MHAIOJackdb::io\_jack\_t
 Main class for JACK IO.

# Namespaces

MHAIOJackdb

# **Macros**

- #define ERR\_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR USER -1000
- #define MAX\_USER\_ERR 0x500
- #define IOInit MHA\_STATIC\_MHAIOJackdb\_IOInit
- #define IOPrepare MHA STATIC MHAIOJackdb IOPrepare
- #define IOStart MHA\_STATIC\_MHAIOJackdb\_IOStart
- #define IOStop MHA\_STATIC\_MHAIOJackdb\_IOStop
- #define IORelease MHA STATIC MHAIOJackdb IORelease
- #define IOSetVar MHA\_STATIC\_MHAIOJackdb\_IOSetVar
- #define IOStrError MHA\_STATIC\_MHAIOJackdb\_IOStrError
- #define IODestroy MHA\_STATIC\_MHAIOJackdb\_IODestroy
- #define dummy\_interface\_test MHA\_STATIC\_MHAIOJackdb\_dummy\_interface\_test

### **Functions**

- int IOInit (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_
  handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_
  event, void \*stop\_handle, void \*\*handle)
- int IOPrepare (void \*handle, int nch\_in, int nch\_out)
- int IOStart (void \*handle)
- int **IOStop** (void \*handle)
- int IORelease (void \*handle)
- int IOSetVar (void \*handle, const char \*command, char \*retval, unsigned int maxretlen)
- const char \* IOStrError (void \*handle, int err)
- void IODestroy (void \*handle)
- void dummy\_interface\_test (void)

# **Variables**

• static char user\_err\_msg [MAX\_USER\_ERR] = ""

6.133.1 Macro Definition Documentation
6.133.1.1 #define ERR_SUCCESS 0
6.133.1.2 #define ERR_IHANDLE -1
6.133.1.3 #define ERR_USER -1000
6.133.1.4 #define MAX_USER_ERR 0x500
6.133.1.5 #define IOInit MHA_STATIC_MHAIOJackdb_IOInit
6.133.1.6 #define IOPrepare MHA_STATIC_MHAIOJackdb_IOPrepare
6.133.1.7 #define IOStart MHA_STATIC_MHAIOJackdb_IOStart
6.133.1.8 #define IOStop MHA_STATIC_MHAIOJackdb_IOStop
6.133.1.9 #define IORelease MHA_STATIC_MHAIOJackdb_IORelease
6.133.1.10 #define IOSetVar MHA_STATIC_MHAIOJackdb_IOSetVar
6.133.1.11 #define IOStrError MHA_STATIC_MHAIOJackdb_IOStrError
6.133.1.12 #define IODestroy MHA_STATIC_MHAIOJackdb_IODestroy

```
6.133.1.13 #define dummy_interface_test MHA_STATIC_MHAIOJackdb_dummy_interface_test
6.133.2 Function Documentation
6.133.2.1 int IOInit (
                        int fragsize,
                        float samplerate,
                        IOProcessEvent_t proc_event,
                        void * proc_handle,
                        IOStartedEvent t start event,
                        void * start_handle,
                        IOStoppedEvent_t stop_event,
                        void * stop_handle,
                        void ** handle )
6.133.2.2 int IOPrepare (
                        void * handle,
                        int nch_in,
                        int nch_out )
6.133.2.3 int IOStart (
                        void * handle )
6.133.2.4
          int IOStop (
                        void * handle )
6.133.2.5 int IORelease (
                        void * handle )
6.133.2.6 int IOSetVar (
                        void * handle,
                        const char * command,
                        char * retval,
                        unsigned int maxretlen )
6.133.2.7 const char* IOStrError (
                        void * handle,
                        int err )
6.133.2.8 void IODestroy (
                        void * handle )
6.133.2.9 void dummy_interface_test (
                        void )
```

6.133.3 Variable Documentation

6.133.3.1 char user\_err\_msg[MAX USER ERR] = "" [static]

# 6.134 MHAIOParser.cpp File Reference

#### **Classes**

· class io parser t

Main class for Parser IO.

### **Macros**

- #define ERR\_SUCCESS 0
- #define ERR\_IHANDLE -1
- #define ERR\_USER -1000
- #define MAX\_USER\_ERR 0x500
- #define IOInit MHA\_STATIC\_MHAIOParser\_IOInit
- #define IOPrepare MHA STATIC MHAIOParser IOPrepare
- #define IOStart MHA\_STATIC\_MHAIOParser\_IOStart
- #define IOStop MHA STATIC MHAIOParser IOStop
- #define IORelease MHA STATIC MHAIOParser IORelease
- #define IOSetVar MHA\_STATIC\_MHAIOParser\_IOSetVar
- #define IOStrError MHA\_STATIC\_MHAIOParser\_IOStrError
- #define IODestroy MHA STATIC MHAIOParser IODestroy
- #define dummy\_interface\_test MHA\_STATIC\_MHAIOParser\_dummy\_interface\_test

# **Functions**

- int IOInit (int fragsize, float, IOProcessEvent\_t proc\_event, void \*proc\_handle, IO
   StartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_event, void \*stop\_handle, void \*\*handle)
- int IOPrepare (void \*handle, int nch\_in, int nch\_out)
- int IOStart (void \*handle)
- int IOStop (void \*handle)
- int IORelease (void \*handle)
- int IOSetVar (void \*handle, const char \*command, char \*retval, unsigned int maxretlen)
- const char \* IOStrError (void \*handle, int err)
- void IODestroy (void \*handle)
- void dummy\_interface\_test (void)

# **Variables**

static char user\_err\_msg [MAX\_USER\_ERR]

```
6.134.1 Macro Definition Documentation
6.134.1.1
          #define ERR_SUCCESS 0
6.134.1.2 #define ERR_IHANDLE -1
6.134.1.3 #define ERR_USER -1000
6.134.1.4 #define MAX_USER_ERR 0x500
6.134.1.5 #define IOInit MHA_STATIC_MHAIOParser_IOInit
6.134.1.6
          #define IOPrepare MHA_STATIC_MHAIOParser_IOPrepare
6.134.1.7
          #define IOStart MHA_STATIC_MHAIOParser_IOStart
6.134.1.8 #define IOStop MHA_STATIC_MHAIOParser_IOStop
6.134.1.9 #define IORelease MHA STATIC MHAIOParser IORelease
6.134.1.10 #define IOSetVar MHA_STATIC_MHAIOParser_IOSetVar
6.134.1.11 #define IOStrError MHA_STATIC_MHAIOParser_IOStrError
6.134.1.12 #define IODestroy MHA STATIC MHAIOParser IODestroy
6.134.1.13 #define dummy interface test MHA STATIC MHAIOParser dummy interface test
6.134.2 Function Documentation
6.134.2.1 int IOInit (
                      int fragsize,
                      float,
                      IOProcessEvent t proc_event,
                      void * proc_handle,
                      IOStartedEvent t start_event,
                      void * start_handle,
                      IOStoppedEvent_t stop_event,
                      void * stop handle,
                      void ** handle )
6.134.2.2 int IOPrepare (
                      void * handle,
                      int nch in,
                      int nch_out )
```

```
6.134.2.3 int IOStart (
                       void * handle )
6.134.2.4 int IOStop (
                       void * handle )
6.134.2.5 int IORelease (
                       void * handle )
6.134.2.6 int IOSetVar (
                       void * handle,
                       const char * command,
                       char * retval,
                       unsigned int maxretlen )
6.134.2.7 const char* IOStrError (
                       void * handle,
                       int err )
6.134.2.8 void IODestroy (
                       void * handle )
6.134.2.9 void dummy_interface_test (
                       void )
6.134.3 Variable Documentation
6.134.3.1
         char user_err_msg[MAX_USER_ERR] [static]
6.135
       MHAIOPortAudio.cpp File Reference
```

# **Classes**

- class MHAIOPortAudio::device\_info\_t
- class MHAIOPortAudio::io\_portaudio\_t

Main class for Portaudio sound IO.

# **Namespaces**

# MHAIOPortAudio

#### **Macros**

- #define ERR\_SUCCESS 0
- #define ERR\_IHANDLE -1
- #define ERR USER -1000
- #define MAX\_USER\_ERR 0x500
- #define IOInit MHA STATIC MHAIOPortAudio IOInit
- #define IOPrepare MHA\_STATIC\_MHAIOPortAudio\_IOPrepare
- #define IOStart MHA\_STATIC\_MHAIOPortAudio\_IOStart
- #define IOStop MHA\_STATIC\_MHAIOPortAudio\_IOStop
- #define IORelease MHA\_STATIC\_MHAIOPortAudio\_IORelease
- #define IOSetVar MHA\_STATIC\_MHAIOPortAudio\_IOSetVar
- #define IOStrError MHA\_STATIC\_MHAIOPortAudio\_IOStrError
- #define IODestroy MHA\_STATIC\_MHAIOPortAudio\_IODestroy
- #define dummy\_interface\_test MHA\_STATIC\_MHAIOPortAudio\_dummy\_interface\_
   test

#### **Functions**

- static std::string MHAIOPortAudio::parserFriendlyName (const std::string &in)
- int portaudio\_callback (const void \*input, void \*output, unsigned long frameCount, const PaStreamCallbackTimeInfo \*timeInfo, PaStreamCallbackFlags statusFlags, void \*user← Data)
- int IOInit (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_
  handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_
  event, void \*stop\_handle, void \*\*handle)
- int IOPrepare (void \*handle, int nch in, int nch out)
- int IOStart (void \*handle)
- int IOStop (void \*handle)
- int IORelease (void \*handle)
- int IOSetVar (void \*handle, const char \*command, char \*retval, unsigned int maxretlen)
- const char \* IOStrError (void \*handle, int err)
- void IODestroy (void \*handle)
- void dummy\_interface\_test (void)

# **Variables**

- static char user\_err\_msg [MAX\_USER\_ERR] = ""
- PaStreamCallback portaudio callback

```
6.135.1 Macro Definition Documentation
6.135.1.1 #define ERR_SUCCESS 0
6.135.1.2 #define ERR_IHANDLE -1
6.135.1.3 #define ERR_USER -1000
6.135.1.4 #define MAX_USER_ERR 0x500
6.135.1.5 #define IOInit MHA_STATIC_MHAIOPortAudio_IOInit
6.135.1.6 #define IOPrepare MHA STATIC MHAIOPortAudio IOPrepare
6.135.1.7 #define IOStart MHA_STATIC_MHAIOPortAudio_IOStart
6.135.1.8 #define IOStop MHA_STATIC_MHAIOPortAudio_IOStop
6.135.1.9 #define IORelease MHA_STATIC_MHAIOPortAudio_IORelease
6.135.1.10 #define IOSetVar MHA_STATIC_MHAIOPortAudio_IOSetVar
6.135.1.11 #define IOStrError MHA_STATIC_MHAIOPortAudio_IOStrError
6.135.1.12 #define IODestroy MHA_STATIC_MHAIOPortAudio_IODestroy
6.135.1.13 #define dummy_interface_test MHA_STATIC_MHAIOPortAudio_dummy_interface_test
6.135.2 Function Documentation
6.135.2.1 int portaudio_callback (
                      const void * input,
                      void * output,
                      unsigned long frameCount,
                      const PaStreamCallbackTimeInfo * timeInfo,
                      PaStreamCallbackFlags statusFlags,
                      void * userData )
6.135.2.2 int IOInit (
                      int fragsize,
                      float samplerate.
                      IOProcessEvent t proc_event,
                      void * proc_handle,
                      IOStartedEvent t start_event,
                      void * start_handle,
                      IOStoppedEvent t stop_event,
                      void * stop_handle,
                      void ** handle )
```

```
6.135.2.3 int IOPrepare (
                        void * handle,
                        int nch_in,
                       int nch_out )
6.135.2.4 int IOStart (
                        void * handle )
6.135.2.5 int IOStop (
                        void * handle )
6.135.2.6 int IORelease (
                        void * handle )
6.135.2.7 int IOSetVar (
                        void * handle,
                        const char * command,
                        char * retval,
                        unsigned int maxretlen )
6.135.2.8 const char* IOStrError (
                       void * handle.
                       int err )
6.135.2.9 void IODestroy (
                        void * handle )
6.135.2.10 void dummy interface test (
                         void )
6.135.3 Variable Documentation
6.135.3.1
         char user_err_msg[MAX_USER_ERR] = "" [static]
6.135.3.2 PaStreamCallback portaudio_callback
6.136 MHAIOTCP.cpp File Reference
```

# **Classes**

class io tcp parser t

The parser interface of the IOTCP library.

class io\_tcp\_sound\_t

Sound data handling of io tcp library.

union io\_tcp\_sound\_t::float\_union

This union helps in conversion of floats from host byte order to network byte order and back again.

class io\_tcp\_fwcb\_t

TCP sound-io library's interface to the framework callbacks.

class io\_tcp\_t

The tcp sound io library.

#### **Macros**

- #define ERR\_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR USER -1000
- #define MAX USER ERR 0x2000
- #define MHA\_ErrorMsg2(x, y) MHA\_Error(\_\_FILE\_\_,\_LINE\_\_,(x),(y))
- #define MHA\_ErrorMsg3(x, y, z) MHA\_Error(\_\_FILE\_\_\_,\_\_LINE\_\_\_,(x),(y),(z))
- #define MIN\_TCP\_PORT 0
- #define MIN TCP PORT STR "0"
- #define MAX\_TCP\_PORT 65535
- #define MAX\_TCP\_PORT\_STR "65535"
- #define IOInit MHA\_STATIC\_MHAIOTCP\_IOInit
- #define IOPrepare MHA\_STATIC\_MHAIOTCP\_IOPrepare
- #define IOStart MHA STATIC MHAIOTCP IOStart
- #define IOStop MHA\_STATIC\_MHAIOTCP\_IOStop
- #define IORelease MHA STATIC MHAIOTCP IORelease
- #define IOSetVar MHA\_STATIC\_MHAIOTCP\_IOSetVar
- #define IOStrError MHA\_STATIC\_MHAIOTCP\_IOStrError
- #define IODestroy MHA\_STATIC\_MHAIOTCP\_IODestroy
- #define dummy\_interface\_test MHA\_STATIC\_MHAIOTCP\_dummy\_interface\_test

#### **Functions**

- static int copy\_error (MHA\_Error &e)
- static void \* thread\_startup\_function (void \*parameter)
- int IOInit (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_
  handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_
  event, void \*stop\_handle, void \*\*handle)
- int IOPrepare (void \*handle, int num inchannels, int num outchannels)
- int IOStart (void \*handle)
- int IOStop (void \*handle)
- int IORelease (void \*handle)
- int IOSetVar (void \*handle, const char \*cmd, char \*retval, unsigned int len)
- const char \* IOStrError (void \*handle, int err)
- void IODestroy (void \*handle)
- void dummy\_interface\_test (void)

#### **Variables**

static char user\_err\_msg [MAX\_USER\_ERR]

```
6.136.1 Macro Definition Documentation
6.136.1.1 #define ERR_SUCCESS 0
6.136.1.2 #define ERR_IHANDLE -1
6.136.1.3 #define ERR_USER -1000
6.136.1.4 #define MAX_USER_ERR 0x2000
6.136.1.5 #define MHA_ErrorMsg2(
                      y) MHA Error(__FILE__,_LINE__,(x),(y))
6.136.1.6 #define MHA_ErrorMsg3(
                      z) MHA_Error(__FILE__,__LINE__,(x),(y),(z))
6.136.1.7 #define MIN_TCP_PORT 0
6.136.1.8 #define MIN_TCP_PORT_STR "0"
6.136.1.9 #define MAX_TCP_PORT 65535
6.136.1.10 #define MAX_TCP_PORT_STR "65535"
6.136.1.11 #define IOInit MHA_STATIC_MHAIOTCP_IOInit
6.136.1.12 #define IOPrepare MHA_STATIC_MHAIOTCP_IOPrepare
6.136.1.13 #define IOStart MHA_STATIC_MHAIOTCP_IOStart
6.136.1.14 #define IOStop MHA_STATIC_MHAIOTCP_IOStop
6.136.1.15 #define IORelease MHA_STATIC_MHAIOTCP_IORelease
6.136.1.16 #define IOSetVar MHA_STATIC_MHAIOTCP_IOSetVar
6.136.1.17 #define IOStrError MHA STATIC MHAIOTCP IOStrError
6.136.1.18 #define IODestroy MHA_STATIC_MHAIOTCP_IODestroy
6.136.1.19 #define dummy_interface_test MHA_STATIC_MHAIOTCP_dummy_interface_test
```

```
6.136.2 Function Documentation
6.136.2.1 static int copy_error (
                        MHA_Error & e ) [static]
6.136.2.2 static void* thread_startup_function (
                        void * parameter ) [static]
6.136.2.3 int IOInit (
                        int fragsize,
                        float samplerate,
                        IOProcessEvent_t proc_event,
                        void * proc handle,
                        IOStartedEvent_t start_event,
                        void * start_handle,
                        IOStoppedEvent_t stop_event,
                        void * stop_handle,
                        void ** handle )
6.136.2.4 int IOPrepare (
                        void * handle,
                        int num_inchannels,
                        int num_outchannels )
6.136.2.5 int IOStart (
                        void * handle )
6.136.2.6 int IOStop (
                        void * handle )
6.136.2.7 int IORelease (
                        void * handle )
6.136.2.8 int IOSetVar (
                        void * handle,
                        const char * cmd,
                        char * retval,
                        unsigned int len )
6.136.2.9 const char* IOStrError (
                        void * handle,
                        int err )
6.136.2.10 void IODestroy (
                         void * handle )
```

```
6.136.2.11 void dummy_interface_test (
                       void )
6.136.3 Variable Documentation
         char user_err_msg[MAX_USER_ERR] [static]
6.136.3.1
6.137 mhajack.cpp File Reference
Functions

    static void jack error handler (const char *msg)

    static int dummy_jack_proc_cb (jack_nframes_t, void *)

    void make_friendly_number (jack_default_audio_sample_t &x)

Variables
   char last_jack_err_msg [MAX_USER_ERR] = ""
   • int last_jack_err = 0
6.137.1 Function Documentation
6.137.1.1
        static void jack_error_handler (
                      const char * msg ) [static]
6.137.1.2 static int dummy jack proc cb (
                      jack_nframes_t,
                      void * ) [static]
6.137.1.3 void make_friendly_number (
                      jack_default_audio_sample_t & x ) [inline]
```

- 6.137.2 Variable Documentation
- 6.137.2.1 char last\_jack\_err\_msg[MAX\_USER\_ERR] = ""
- 6.137.2.2 int last\_jack\_err = 0
- 6.138 mhajack.h File Reference

# Classes

class MHAJack::port t

Class for one channel/port.

class MHAJack::client\_t

Generic asynchronous JACK client.

class MHAJack::client\_noncont\_t

Generic client for synchronous playback and recording of waveform fragments.

class MHAJack::client\_avg\_t

Generic JACK client for averaging a system response across time.

#### **Namespaces**

## MHAJack

Classes and functions for openMHA and JACK interaction.

#### **Macros**

- #define MHAJACK FW STARTED 1
- #define MHAJACK\_STOPPED 2
- #define MHAJACK\_STARTING 8
- #define IO ERROR JACK 11
- #define IO\_ERROR\_MHAJACKLIB 12
- #define MAX USER ERR 0x500

#### **Functions**

void MHAJack::io (mha\_wave\_t \*s\_out, mha\_wave\_t \*s\_in, const std::string &name, const std::vector< std::string > &p\_out, const std::vector< std::string > &p\_in, float \*srate=NULL, unsigned int \*fragsize=NULL, bool use\_jack\_transport=false)

Functional form of generic client for synchronous playback and recording of waveform fragments.

std::vector< unsigned int > MHAJack::get\_port\_capture\_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

Return the JACK port latency of ports.

std::vector< unsigned int > MHAJack::get\_port\_playback\_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< int > MHAJack::get\_port\_playback\_latency\_int (const std::vector< std
 ::string > &ports)

## **Variables**

char last\_jack\_err\_msg [MAX\_USER\_ERR]

6.138.1	Macro	Definition	Document	tation
---------	-------	------------	----------	--------

- 6.138.1.1 #define MHAJACK\_FW\_STARTED 1
- 6.138.1.2 #define MHAJACK STOPPED 2
- 6.138.1.3 #define MHAJACK\_STARTING 8
- 6.138.1.4 #define IO\_ERROR\_JACK 11
- 6.138.1.5 #define IO\_ERROR\_MHAJACKLIB 12
- 6.138.1.6 #define MAX\_USER\_ERR 0x500
- 6.138.2 Variable Documentation
- 6.138.2.1 char last\_jack\_err\_msg[MAX\_USER\_ERR]
- 6.139 mhamain.cpp File Reference

# Classes

· class mhaserver t

MHA Framework listening on TCP port for commands.

# Macros

- #define MAX\_LINE\_LENGTH 0x100000
- #define **HELP\_TEXT**
- #define GREETING\_TEXT

#### **Functions**

- void **create\_lock** (unsigned int p, std::string s)
- void remove\_lock (unsigned int p)
- int **mhamain** (int argc, char \*argv[])

```
6.139.1 Macro Definition Documentation
6.139.1.1
          #define MAX_LINE_LENGTH 0x100000
6.139.1.2 #define HELP_TEXT
6.139.1.3 #define GREETING_TEXT
6.139.2 Function Documentation
6.139.2.1 void create lock (
                       unsigned int p,
                       std::string s )
6.139.2.2 void remove_lock (
                       unsigned int p)
6.139.2.3 int mhamain (
                       int argc,
                       char * argv[])
6.140
       mhapluginloader.cpp File Reference
```

# 6.141 mhapluginloader.h File Reference

#### **Classes**

- class PluginLoader::config\_file\_splitter\_t
- class PluginLoader::fourway\_processor\_t

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

- class PluginLoader::mhapluginloader t
- class MHAParser::mhapluginloader\_t

Class to create a plugin loader in a parser, including the load logic.

#### Namespaces

- PluginLoader
- MHAParser

Name space for the openMHA-Parser configuration language.

#### **Functions**

- const char \* PluginLoader::mhastrdomain (mha\_domain\_t)
- void PluginLoader::mhaconfig\_compare (const mhaconfig\_t &req, const mhaconfig←
   \_t &avail, const std::string &pref="")

Compare two mhaconfig\_t (p. 480) structures, and report differences as an error.

# 6.142 mhasndfile.cpp File Reference

#### **Functions**

- void write\_wave (const mha\_wave\_t &sig, const char \*fname, const float &srate, const int &format)
- unsigned int validator\_channels (std::vector< int > channel\_map, unsigned int channels)
- unsigned int validator\_length (unsigned int maxlen, unsigned int frames, unsigned int startpos)

```
6.142.1 Function Documentation
```

```
6.142.1.1 void write_wave (

const mha_wave_t & sig,
const char * fname,
const float & srate,
const int & format )
```

# 6.143 mhasndfile.h File Reference

## Classes

```
class MHASndFile::sf_tclass MHASndFile::sf wave t
```

## **Namespaces**

MHASndFile

#### **Functions**

 void write\_wave (const mha\_wave\_t &sig, const char \*fname, const float &srate=44100, const int &format=SF\_FORMAT\_WAV|SF\_FORMAT\_FLOAT|SF\_ENDIAN\_FILE)

```
6.143.1 Function Documentation
```

```
6.143.1.1 void write_wave (

const mha_wave_t & sig,

const char * fname,

const float & srate = 44100,

const int & format = SF_FORMAT_WAV|SF_FORMAT_FLOAT|SF_ENDIAN

_FILE )
```

# 6.144 multibandcompressor.cpp File Reference

#### **Classes**

- class multibandcompressor::plugin\_signals\_t
- class multibandcompressor::fftfb\_plug\_t
- class multibandcompressor::interface t

## **Namespaces**

multibandcompressor

# 6.145 nlms wave.cpp File Reference

# Classes

- · class rt nlms t
- · class nlms\_t

#### **Macros**

- #define NORMALIZATION\_TYPES "[none default sum]"
- #define NORM NONE 0
- #define NORM DEFAULT 1
- #define NORM\_SUM 2
- #define ESTIMATION\_TYPES "[previous current]"
- #define ESTIM\_PREV 0
- #define ESTIM\_CUR 1

## **Functions**

void make\_friendly\_number\_by\_limiting (mha\_real\_t &x)

```
6.145.1 Macro Definition Documentation
```

```
6.145.1.1 #define NORMALIZATION_TYPES "[none default sum]"
```

```
6.145.1.2 #define NORM NONE 0
```

- 6.145.1.3 #define NORM\_DEFAULT 1
- 6.145.1.4 #define NORM\_SUM 2
- 6.145.1.5 #define ESTIMATION\_TYPES "[previous current]"
- 6.145.1.6 #define ESTIM\_PREV 0
- 6.145.1.7 #define ESTIM CUR 1
- 6.145.2 Function Documentation
- 6.146 noise.cpp File Reference

## Classes

- · class cfg t
- · class noise\_t
- 6.147 noisePowProposedScale.cpp File Reference

# Classes

- class noisePowProposedScale::noisePowProposed
- class noisePowProposedScale::interface t

## **Namespaces**

noisePowProposedScale

## **Macros**

- #define POWSPEC\_FACTOR 0.0025
- 6.147.1 Macro Definition Documentation
- 6.147.1.1 #define POWSPEC\_FACTOR 0.0025
- 6.148 overlapadd.cpp File Reference

# Classes

- class overlapadd::overlapadd\_t
- class overlapadd::overlapadd\_if\_t

## **Namespaces**

- overlapadd
- 6.149 plingploing.cpp File Reference

## Classes

- class plingploing::plingploing\_t
  - Run-time configuration of the plingploing music generator.
- class plingploing::if\_t

Plugin class of the plingploing music generator.

# **Namespaces**

plingploing

All classes for the plingploing music generator live in this namespace.

# **Functions**

• double plingploing::drand (double a, double b)

- 6.150 pluginbrowser.cpp File Reference
- 6.151 pluginbrowser.h File Reference

#### Classes

- class plugindescription\_t
- · class pluginloader\_t
- · class pluginbrowser t
- 6.152 prediction\_error.cpp File Reference

#### **Macros**

- #define PATCH\_VAR(var) patchbay.connect(&var.valuechanged, this, &prediction\_
  error::update\_cfg)
- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)

#### **Functions**

- void make\_friendly\_number\_by\_limiting (mha\_real\_t &x)
- 6.152.1 Macro Definition Documentation
- 6.152.1.2 #define INSERT\_PATCH(

  var ) insert\_member(var); PATCH\_VAR(var)
- 6.152.2 Function Documentation
- 6.153 prediction\_error.h File Reference

#### Classes

- class prediction\_error\_config
- class prediction\_error

# 6.154 resampling.cpp File Reference

#### Classes

- class MHAPlugin\_Resampling::resampling\_t
- class MHAPlugin\_Resampling::resampling\_if\_t

## **Namespaces**

- MHAPlugin\_Resampling
- 6.155 rmslevel.cpp File Reference

#### **Classes**

- class mon\_t
- class rmslevel\_t
- class rmslevel\_if\_t
- 6.156 route.cpp File Reference

## Classes

- class route::process\_t
- class route::interface\_t

# **Namespaces**

- route
- 6.157 save\_spec.cpp File Reference

# **Classes**

- class save\_spec\_t
- 6.158 save\_wave.cpp File Reference

#### Classes

class save\_wave\_t

# 6.159 shadowfilter\_begin.cpp File Reference

## Classes

- class shadowfilter\_begin::cfg\_t
- class shadowfilter\_begin::shadowfilter\_begin\_t

# **Namespaces**

- shadowfilter\_begin
- 6.160 shadowfilter\_end.cpp File Reference

#### Classes

- class shadowfilter\_end::cfg\_t
- class shadowfilter\_end::shadowfilter\_end\_t

# **Namespaces**

- · shadowfilter\_end
- 6.161 sine.cpp File Reference

## Classes

- struct sine\_cfg\_t
- class sine t
- 6.162 smoothgains\_bridge.cpp File Reference

#### Classes

- class smoothgains\_bridge::smoothspec\_wrap\_t
- class smoothgains\_bridge::overlapadd\_if\_t

# **Namespaces**

smoothgains\_bridge

# 6.163 softclip.cpp File Reference

#### Classes

- class cfg\_t
- · class softclip\_t

# 6.164 spec2wave.cpp File Reference

## **Classes**

- class hanning\_ramps\_t
- class spec2wave\_t
- class spec2wave\_if\_t

## **Functions**

- unsigned int **max** (unsigned int a, unsigned int b)
- unsigned int **min** (unsigned int a, unsigned int b)
- 6.164.1 Function Documentation

- 6.165 speechnoise.cpp File Reference

#### **Macros**

- #define NUM ENTR MHAORIG 76
- #define NUM\_ENTR\_LTASS 25
- #define NUM\_ENTR\_OLNOISE 49

## **Functions**

- float **fhz2bandno** (float x)
- float erb\_hz\_f\_hz (float f\_hz)
- float hz2hz (float x)

Dummy scale transformation Hz to Hz.

float bandw\_correction (float f, float ldb)

#### **Variables**

• float vMHAOrigSpec [NUM\_ENTR\_MHAORIG] = {-1.473, 0, -4.939, -10.14, -13.94, -14.83, -14.27, -15.66, -16.16, -18.22, -20.5, -21.23, -22.13, -22.58, -23.98, -26.58, -26.4, -25.15, -23.89, -25.54, -27, -30.15, -31.68, -30.14, -27.55, -25.79, -25.89, -26.11, -27. ←48, -30.37, -33.13, -36.23, -36.64, -36.35, -35.03, -35.48, -36.35, -37.95, -40.53, -42.37, -41.29, -38.49, -36.32, -34.85, -34.05, -33.81, -33.48, -34.1, -35.19, -36.29, -36.94, -37. ←53, -38.71, -38.7, -38.92, -40.36, -41.26, -42.19, -43.65, -44.37, -43.95, -43.15, -42.57, -41.57, -41.86, -42.34, -42.87, -42.35, -42.71, -42.85, -43.47, -47.43, -67.54, -76.3, -77. ←43, -77.43}

- float **vMHAOrigFreq** [**NUM\_ENTR\_MHAORIG**] =  $\{172.266,344.532,516.797,689. \leftarrow 063,861.329,1033.59,1205.86,1378.13,1550.39,1722.66,1894.92,2067.19,2239. \leftarrow 46,2411.72,2583.99,2756.25,2928.52,3100.78,3273.05,3445.32,3617.58,3789.85,3962. \leftarrow 11,4134.38,4306.64,4478.91,4651.18,4823.44,4995.71,5167.97,5340.24,5512.51,5684. \leftarrow 77,5857.04,6029.3,6201.57,6373.83,6546.1,6718.37,6890.63,7062.9,7235.16,7407. \leftarrow 43,7579.69,7751.96,7924.23,8096.49,8268.76,8441.02,8613.29,8785.56,8957.82,9130. \leftarrow 09,9302.35,9474.62,9646.88,9819.15,9991.42,10163.7,10335.9,10508.2,10680. \leftarrow 5,10852.7,11025,11197.3,11369.5,11541.8,11714.1,11886.3,12058.6,12230.9,12403. \leftarrow 1,12575.4,12747.7,12919.9,13092.2\}$
- float vLTASS\_freq [NUM\_ENTR\_LTASS] = {63, 80, 100, 125, 160, 200, 250, 315, 400, 500, 630, 800, 1000, 1250, 1600, 2000, 2500, 3150, 4000, 5000, 6300, 8000, 10000, 12500, 16000}
- float vLTASS\_combined\_lev [NUM\_ENTR\_LTASS] = {38.6, 43.5, 54.4, 57.7, 56.8, 60.2, 60.3, 59.0, 62.1, 62.1, 60.5, 56.8, 53.7, 53.0, 52.0, 48.7, 48.1, 46.8, 45.6, 44.5, 44.3, 43.7, 43.4, 41.3, 40.7}
- float vLTASS\_female\_lev [NUM\_ENTR\_LTASS] =  $\{37.0,36.0,37.5,40.1,53.4,62.2,60. \leftarrow 9,58.1,61.7,61.7,60.4,58,54.3,52.3,51.7,48.8,47.3,46.7,45.3,44.6,45.2,44.9,45.0,42. \leftarrow 8,41.1\}$
- float vLTASS\_male\_lev [NUM\_ENTR\_LTASS] =  $\{38.6,43.5,54.4,57.7,56.8,58.2,59. \leftarrow 7,60.0,62.4,62.6,60.6,55.7,53.1,53.7,52.3,48.7,48.9,47.0,46.0,44.4,43.3,42.4,41.9,39. \leftarrow 8.40.4\}$
- float **vOlnoiseFreq** [**NUM\_ENTR\_OLNOISE**] =  $\{62.5, 70.1539, 78.7451, 88.3884, 99. \leftarrow 2126, 111.362, 125, 140.308, 157.49, 176.777, 198.425, 222.725, 250, 280.616, 314.98, 353. \leftarrow 553, 396.85, 445.449, 500, 561.231, 629.961, 707.107, 793.701, 890.899, 1000, 1122. \leftarrow 46, 1259.92, 1414.21, 1587.4, 1781.8, 2000, 2244.92, 2519.84, 2828.43, 3174.8, 3563. \leftarrow 59,4000, 4489.85, 5039.68, 5656.85, 6349.6, 7127.19, 8000, 8979.7, 10079.4, 11313. \leftarrow 7,12699.2, 14254.4, 16000$
- float vOlnoiseLev [NUM\_ENTR\_OLNOISE] =  $\{45.9042,38.044,48.9444,61.3697,67.\leftarrow 6953,69.7451,71.6201,71.2431,65.2754,63.2547,70.2264,72.1434,73.4433,73.2659,69.\leftarrow 8424,71.0132,70.9577,70.3492,68.691,64.8436,64.0435,64.2879,60.5889,60.6596,60.\leftarrow 3727,61.2003,61.8477,61.1478,61.2312,58.6584,57.2892,56.8299,56.0191,53.3018,56.\leftarrow 0525,54.3592,50.8823,55.992,54.6768,47.2616,46.9914,45.209,50.413,47.5848,43.\leftarrow 3215.43.754,38.5773.-0.39427,5.74224\}$
- 6.165.1 Macro Definition Documentation
- 6.165.1.1 #define NUM ENTR MHAORIG 76
- 6.165.1.2 #define NUM ENTR LTASS 25

Dummy scale transformation Hz to Hz.

This function implements a dummy scale transformation (linear frequency scale).

#### **Parameters**

```
x | Input frequency in Hz
```

#### **Returns**

Frequency in Hz

```
6.165.2.4 float bandw_correction (
float f,
float ldb )
```

- 6.165.3 Variable Documentation
- 6.165.3.1 float vMHAOrigSpec[NUM\_ENTR\_MHAORIG] = {-1.473, 0, -4.939, -10.14, -13.94, -14.83, -14.27, -15.66, -16.16, -18.22, -20.5, -21.23, -22.13, -22.58, -23.98, -26.58, -26.4, -25.15, -23.89, -25.54, -27, -30.15, -31.68, -30.14, -27.55, -25.79, -25.89, -26.11, -27.48, -30.37, -33.13, -36.23, -36.64, -36.35, -35.03, -35.48, -36.35, -37.95, -40.53, -42.37, -41.29, -38.49, -36.32, -34.85, -34.05, -33.81, -33.48, -34.1, -35.19, -36.29, -36.94, -37.53, -38.71, -38.7, -38.92, -40.36, -41.26, -42.19, -43.65, -44.37, -43.95, -43.15, -42.57, -41.57, -41.86, -42.34, -42.87, -42.35, -42.71, -42.85, -43.47, -47.43, -67.54, -76.3, -77.43, -77.43}
- 6.165.3.2 float vMHAOrigFreq[NUM\_ENTR\_MHAORIG] =  $\{172.266,344.532,516.797,689.063,861. \leftarrow 329,1033.59,1205.86,1378.13,1550.39,1722.66,1894.92,2067.19,2239.46,2411.72,2583.99,2756. \leftarrow 25,2928.52,3100.78,3273.05,3445.32,3617.58,3789.85,3962.11,4134.38,4306.64,4478.91,4651. \leftarrow 18,4823.44,4995.71,5167.97,5340.24,5512.51,5684.77,5857.04,6029.3,6201.57,6373.83,6546. \leftarrow 1,6718.37,6890.63,7062.9,7235.16,7407.43,7579.69,7751.96,7924.23,8096.49,8268.76,8441. \leftarrow 02,8613.29,8785.56,8957.82,9130.09,9302.35,9474.62,9646.88,9819.15,9991.42,10163.7,10335. \leftarrow 9,10508.2,10680.5,10852.7,11025,11197.3,11369.5,11541.8,11714.1,11886.3,12058.6,12230. \leftarrow 9,12403.1,12575.4,12747.7,12919.9,13092.2\}$

6.165.3.3 float vLTASS\_freq[NUM\_ENTR\_LTASS] = {63, 80, 100, 125, 160, 200, 250, 315, 400, 500, 630, 800, 1000, 1250, 1600, 2000, 2500, 3150, 4000, 5000, 6300, 8000, 10000, 12500, 16000}

- 6.165.3.4 float vLTASS\_combined\_lev[NUM\_ENTR\_LTASS] = {38.6, 43.5, 54.4, 57.7, 56.8, 60.2, 60.3, 59.0, 62.1, 62.1, 60.5, 56.8, 53.7, 53.0, 52.0, 48.7, 48.1, 46.8, 45.6, 44.5, 44.3, 43.7, 43.4, 41.3, 40.7}
- 6.165.3.5 float vLTASS\_female\_lev[NUM\_ENTR\_LTASS] = {37.0,36.0,37.5,40.1,53.4,62.2,60.9,58. ← 1,61.7,61.7,60.4,58,54.3,52.3,51.7,48.8,47.3,46.7,45.3,44.6,45.2,44.9,45.0,42.8,41.1}
- 6.165.3.6 float vLTASS\_male\_lev[NUM\_ENTR\_LTASS] = {38.6,43.5,54.4,57.7,56.8,58.2,59.7,60.0,62. 4,62.6,60.6,55.7,53.1,53.7,52.3,48.7,48.9,47.0,46.0,44.4,43.3,42.4,41.9,39.8,40.4}
- 6.165.3.7 float vOlnoiseFreq[NUM\_ENTR\_OLNOISE] =  $\{62.5, 70.1539, 78.7451, 88.3884, 99.2126, 111. \leftarrow 362, 125, 140.308, 157.49, 176.777, 198.425, 222.725, 250, 280.616, 314.98, 353.553, 396.85, 445. \leftarrow 449, 500, 561.231, 629.961, 707.107, 793.701, 890.899, 1000, 1122.46, 1259.92, 1414.21, 1587.4, 1781. \leftarrow 8, 2000, 2244.92, 2519.84, 2828.43, 3174.8, 3563.59, 4000, 4489.85, 5039.68, 5656.85, 6349.6, 7127. \leftarrow 19, 8000, 8979.7, 10079.4, 11313.7, 12699.2, 14254.4, 16000$
- 6.165.3.8 float vOlnoiseLev[NUM\_ENTR\_OLNOISE] =  $\{45.9042,38.044,48.9444,61.3697,67.6953,69. \leftarrow 7451,71.6201,71.2431,65.2754,63.2547,70.2264,72.1434,73.4433,73.2659,69.8424,71.0132,70. \leftarrow 9577,70.3492,68.691,64.8436,64.0435,64.2879,60.5889,60.6596,60.3727,61.2003,61.8477,61. \leftarrow 1478,61.2312,58.6584,57.2892,56.8299,56.0191,53.3018,56.0525,54.3592,50.8823,55.992,54. \leftarrow 6768,47.2616,46.9914,45.209,50.413,47.5848,43.3215,43.754,38.5773,-0.39427,5.74224\}$
- 6.166 speechnoise.h File Reference

## **Classes**

- class speechnoise t
- 6.167 split.cpp File Reference

## Classes

class MHAPlugin Split::uni processor t

An interface to a class that sports a process method with no parameters and no return value.

class MHAPlugin Split::thread platform t

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

class MHAPlugin Split::dummy threads t

Dummy specification of a thread platform: This class implements everything in a single thread.

class MHAPlugin\_Split::posix\_threads\_t

Posix threads specification of thread platform.

class MHAPlugin\_Split::domain\_handler\_t

Handles domain-specific partial input and output signal.

class MHAPlugin\_Split::splitted\_part\_t

The **splitted\_part\_t** (p. 726) instance manages the plugin that performs processing on the reduced set of channels.

class MHAPlugin\_Split::split\_t

Implements split plugin.

### Namespaces

MHAPlugin\_Split

#### **Macros**

- #define MHAPLUGIN\_OVERLOAD\_OUTDOMAIN
  - This define modifies the definition of MHAPLUGIN\_CALLBACKS and friends.
- #define posixthreads 1
- #define default\_thread\_platform\_string "posix"
- #define default\_thread\_platform\_type posix\_threads\_t

#### **Enumerations**

#### 6.167.1 Detailed Description

Source code for the split plugin. The split plugin splits the audio signal by channel. The splitted paths execute in parallel.

- 6.167.2 Macro Definition Documentation
- 6.167.2.1 #define MHAPLUGIN\_OVERLOAD\_OUTDOMAIN

This define modifies the definition of MHAPLUGIN\_CALLBACKS and friends.

The output signal is transferred through a second parameter to the process method, enabling all four domain transformations in a single plugin.

- 6.167.2.2 #define posixthreads 1
- 6.167.2.3 #define default\_thread\_platform\_string "posix"
- 6.167.2.4 #define default\_thread\_platform\_type posix\_threads\_t
- 6.168 steerbf.cpp File Reference

## **Macros**

- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)

```
6.168.1 Macro Definition Documentation
6.168.1.1 #define PATCH_VAR(
                       var ) patchbay.connect(&var.valuechanged, this, &steerbf::update_cfg)
6.168.1.2 #define INSERT_PATCH(
                       var ) insert_member(var); PATCH_VAR(var)
6.169 steerbf.h File Reference
Classes
   class parser_int_dyn
   · class steerbf_config
   · class steerbf
6.170 testalsadevice.c File Reference
Functions
   • int main (int argc, char **argv)
6.170.1 Function Documentation
6.170.1.1 int main (
                      int argc,
                      char ** argv )
6.171
       testplugin.cpp File Reference
Classes

    class testplugin::config_parser_t

   • class testplugin::ac_parser_t

    class testplugin::signal_parser_t

   · class testplugin::if_t
```

# **Namespaces**

testplugin

# 6.172 timoconfig.cpp File Reference

#### **Macros**

- #define LPSCALE (5.2429e+007)
- #define **POWSPEC\_FACTOR** 0.0025
- #define OVERLAP FACTOR 2
- #define **EPSILON** (1e-10)
- #define **CHANLOOP** for (unsigned int c=0; c<nchan; ++c)
- 6.172.1 Macro Definition Documentation
- 6.172.1.1 #define LPSCALE (5.2429e+007)
- 6.172.1.2 #define POWSPEC\_FACTOR 0.0025
- 6.172.1.3 #define OVERLAP\_FACTOR 2
- 6.172.1.4 #define EPSILON (1e-10)
- 6.172.1.5 #define CHANLOOP for (unsigned int c=0; c<nchan; ++c)
- 6.173 timoconfig.h File Reference

#### Classes

- · class timo\_AC
- class timo\_params
- class timoConfig
- 6.174 timoSmooth.cpp File Reference

#### **Macros**

- #define INSERT\_VAR(var) insert\_item(#var, &var)
- #define PATCH\_VAR(var) patchbay.connect(&var.valuechanged, this, &timoSmooth
   —::on\_model\_param\_valuechanged)
- #define INSERT\_PATCH(var) INSERT\_VAR(var); PATCH\_VAR(var)

## 6.174.1 Macro Definition Documentation

6.174.1.1 #define INSERT\_VAR(

var ) insert\_item(#var, &var)

6.174.1.2 #define PATCH VAR(

var ) patchbay.connect(&var.valuechanged, this, &timoSmooth::on\_model\_param\_valuechanged)

6.174.1.3 #define INSERT\_PATCH(

var ) INSERT VAR(var); PATCH VAR(var)

6.175 timosmooth.h File Reference

#### Classes

· class timoSmooth

# 6.176 transducers.cpp File Reference

# Classes

- class softclipper\_variables\_t
- class softclipper\_t
- · class calibrator\_variables\_t
- class calibrator\_runtime\_layer\_t
- class calibrator\_t
- · class bbcalib interface t

## **Typedefs**

- typedef MHAPlugin::config\_t< MHASignal::async\_rmslevel\_t > rmslevelmeter
- typedef MHAPlugin::plugin\_t< calibrator\_runtime\_layer\_t > rtcalibrator

# **Functions**

- speechnoise\_t::noise\_type\_t kw\_index2type (unsigned int idx)
- std::vector< int > vint\_0123n1 (unsigned int n)

## Classes

- class us\_t
- 6.178 wave2spec.cpp File Reference

## **Classes**

- class wave2spec\_t
- class wave2spec\_if\_t

# **Macros**

- #define MHAPLUGIN\_OVERLOAD\_OUTDOMAIN
- 6.178.1 Macro Definition Documentation
- 6.178.1.1 #define MHAPLUGIN\_OVERLOAD\_OUTDOMAIN
- 6.179 wavrec.cpp File Reference

#### **Classes**

- class wavwriter\_t
- class wavrec\_t

**Macros** 

• #define **DEBUG**(x) std::cerr << \_\_FILE\_\_ << ":" << \_\_LINE\_\_ << " " << #x << "=" << x << std::endl

- 6.179.1 Macro Definition Documentation
- 6.180 windowselector.cpp File Reference
- 6.181 windowselector.h File Reference

Classes

• class windowselector\_t

A combination of mha parser variables to describe an overalapadd analysis window.

# Index

_MHA_AC_CHAR	ADM::Linearphase_FIR, 186
testplugin::ac_parser_t, 906	~MHA_Error
_MHA_AC_DOUBLE	MHA_Error, 424
testplugin::ac_parser_t, 906	~Server
_MHA_AC_FLOAT	MHA_TCP::Server, 458
testplugin::ac_parser_t, 906	$\sim$ Thread
_MHA_AC_INT	MHA_TCP::Thread, 465
testplugin::ac_parser_t, 906	$\sim$ Timeout_Watcher
_MHA_AC_MHACOMPLEX	MHA_TCP::Timeout_Watcher, 468
testplugin::ac_parser_t, 906	$\sim$ Wakeup_Event
_MHA_AC_MHAREAL	MHA_TCP::Wakeup_Event, 470
testplugin::ac_parser_t, 906	$\sim$ acConcat_wave
MHA_FUN	acConcat_wave, 144
mha_defs.h, 968	$\sim$ acConcat_wave_config
attribute	acConcat_wave_config, 146
mha_plugin.hh, 991	$\sim$ acPooling_wave
declspec	acPooling_wave, 153
example5.cpp, 952	$\sim$ acPooling_wave_config
example6.cpp, 952	acPooling_wave_config, 155
mha_defs.h, 968	$\sim$ acSteer
mha_plugin.hh, 991	acSteer, 165
_cf	$\sim$ acSteer_config
DynComp::dc_afterburn_t, 288	acSteer_config, 167
_channels	$\sim$ acTransform_wave
DynComp::dc_afterburn_t, 288	acTransform_wave, 169
_conjugate	$\sim$ acTransform_wave_config
Complex arithmetics in the openMHA, 63	acTransform_wave_config, 171
_linphase_asym	∼acmon_t
MHAFilter::smoothspec_t, 544	acmon::acmon_t, 150
_prepare	~acspace2matrix_t
testplugin::if_t, 910	MHA_AC::acspace2matrix_t, 396
_reciprocal	$\sim$ adm_rtconfig_t
Complex arithmetics in the openMHA, 64	adm_rtconfig_t, 191
_srate	~algo_comm_class_t
DynComp::dc_afterburn_t, 288	MHAKernel::algo_comm_class_t, 579
_steerbf	~alsa_base_t
steerbf_config, 904	alsa_base_t, 199
_unknown	∼alsa_t
testplugin::ac_parser_t, 906	alsa_t, 203
~Async_Notify	~analysepath_t
MHA_TCP::Async_Notify, 445	analysepath_t, 209
~Connection	~analysispath_if_t
MHA_TCP::Connection, 449	analysispath_if_t, 212
~Delay	~bark2hz_t
ADM::Delay, 184	MHAOvlFilter::barkscale::bark2hz_t, 589
~Event_Watcher	~base_t
MHA_TCP::Event_Watcher, 455	MHAParser::base_t, 612
~Linearphase_FIR	~bbcalib_interface_t

bbcalib_interface_t, 221	MHAFilter::filter_t, 509
~blockprocessing_polyphase_resampling_t	~float_t
MHAFilter::blockprocessing_polyphase↔	MHA_AC::float_t, 399
_resampling_t, 494	~fourway_processor_t
~c_ifc_parser_t	PluginLoader::fourway_processor_t, 853
MHAParser::c_ifc_parser_t, 624	~fw_t
~cfg_chain_t	fw_t, 328
MHAPlugin::cfg_chain_t, 698	~gaintable_t
~cfg_t	DynComp::gaintable_t, 293
acsave::cfg_t, 160	~gamma_flt_t
~config_t	MHAFilter::gamma_flt_t, 512
MHAPlugin::config_t, 701	~hanning_ramps_t
~connector_base_t	hanning_ramps_t, 336
MHAEvents::connector_base_t, 482	~hilbert_shifter_t
$\sim$ connector_t	hilbert_shifter_t, 338
MHAEvents::connector_t, 485	$\sim$ hilbert_t
$\sim$ db_if_t	MHASignal::hilbert_t, 752
db_if_t, 242	~hz2bark_t
~delay_spec_t	MHAOvlFilter::barkscale::hz2bark_t, 590
MHASignal::delay_spec_t, 741	∼int_t
$\sim$ delay_t	MHA_AC::int_t, 400
MHASignal::delay_t, 742	~io_file_t
$\sim$ delay_wave_t	io_file_t, 346
MHASignal::delay_wave_t, 744	∼io_lib_t
$\sim$ doasvm_classification	io_lib_t, 350
doasvm_classification, 272	∼io_parser_t
$\sim$ doasvm_classification_config	io_parser_t, 353
doasvm_classification_config, 274	$\sim$ io_portaudio_t
$\sim$ doasvm_feature_extraction	MHAIOPortAudio::io_portaudio_t, 561
doasvm_feature_extraction, 276	~io_tcp_fwcb_t
$\sim$ doasvm_feature_extraction_config	io_tcp_fwcb_t, 356
doasvm_feature_extraction_config, 278	~io_tcp_parser_t
$\sim$ domain_handler_t	io_tcp_parser_t, 360
MHAPlugin_Split::domain_handler_t, 713	~io_tcp_sound_t
~double_t	io_tcp_sound_t, 365
MHA_AC::double_t, 398	∼io_tcp_t
~doublebuffer_t	io_tcp_t, 371
MHASignal::doublebuffer_t, 746	~linear_table_t
~dynamiclib_t	MHATableLookup::linear_table_t, 801
dynamiclib_t, 284	~lpc
~emitter_t	lpc, 375
MHAEvents::emitter_t, 487	~lpc_bl_predictor
~fft_t	lpc_bl_predictor, 378
MHASignal::fft_t, 748	~lpc_bl_predictor_config
~fftfb_t	lpc_bl_predictor_config, 380
MHAOvIFilter::fftfb_t, 592	~lpc_burglattice
~fftfilter_t	lpc_burglattice, 382
MHAFilter::fftfilter_t, 501	~lpc_burglattice_config
~fftfilterbank_t	lpc_burglattice_config, 384
MHAFilter::fftfilterbank_t, 505	~lpc_config
~filter_t	lpc_config, 386

~matrix_t	~prediction_error_config
MHASignal::matrix_t, 760	prediction_error_config, 865
~mha_dblbuf_t	~rt_nlms_t
mha_dblbuf_t, 413	 rt_nlms_t, 874
~mha_fifo_lw_t	~save_var_base_t
mha_fifo_lw_t, 426	ac2lsl::save_var_base_t, 128
~mha_fifo_posix_threads_t	~save_var_t
mha_fifo_posix_threads_t, 429	ac2lsl::save_var_t, 131
~mha_fifo_t	ac2lsl::save_var_t< mha_complex_t >
mha fifo t, 432	133
~mha_fifo_thread_guard_t	acsave::save_var_t, 162
mha_fifo_thread_guard_t, 435	~sf_t
~mha_fifo_thread_platform_t	MHASndFile::sf_t, 798
mha_fifo_thread_platform_t, 436	~sine_t
~mha_rt_fifo_element_t	sine_t, 886
mha_rt_fifo_element_t, 439	~smoothspec_t
~mha_rt_fifo_t	MHAFilter::smoothspec_t, 543
mha_rt_fifo_t, 440	~spec2wave_t
~mhaplug_cfg_t	spec2wave_t, 897
mhaplug_cfg_t, 697	~spec_zwave_t, 007
~mhapluginloader_t	spec_fader_t, 899
	~spec_rader_t, 099
MHAParser::mhapluginloader_t, 658	MHA_AC::spectrum_t, 402
PluginLoader::mhapluginloader_t, 857	<u> </u>
~mhaserver_t	MHASignal::spectrum_t, 777
mhaserver_t, 737	~split_t
~overlapadd_if_t	MHAPlugin_Split::split_t, 724
overlapadd::overlapadd_if_t, 835	~splitted_part_t
smoothgains_bridge::overlapadd_if_  →	MHAPlugin_Split::splitted_part_t, 728
t, 888	~steerbf
~overlapadd_t	steerbf, 902
overlapadd::overlapadd_t, 837	~steerbf_config
~parser_t	steerbf_config, 904
MHAParser::parser_t, 665	~table_t
~partitioned_convolution_t	MHATableLookup::table_t, 804
MHAFilter::partitioned_convolution_t, 532	~thread_platform_t
~patchbay_t	MHAPlugin_Split::thread_platform_t, 732
MHAEvents::patchbay_t, 488	~timoConfig
~plug_t	timoConfig, 917
plug_t, 846	~timoSmooth
~plugin_t	timoSmooth, 920
MHAPlugin::plugin_t, 705	~uint_vector_t
~pluginloader_t	MHASignal::uint_vector_t, 785
pluginloader_t, 861	~uni_processor_t
~plugs_t	MHAPlugin_Split::uni_processor_t, 734
mhachain::plugs_t, 478	~wave2spec_t
~port_t	wave2spec_t, 927
MHAJack::port_t, 576	~waveform_t
~posix_threads_t	MHA_AC::waveform_t, 405
MHAPlugin_Split::posix_threads_t, 720	MHASignal::waveform_t, 789
~prediction_error	$\sim$ wavwriter_t
prediction_error, 862	wavwriter_t, 931

~windowselector_t	m_powerfilter_state, 182
windowselector_t, 933	process, 181
	ADM::Delay
Α	$\sim$ Delay, 184
lpc_config, 387	Delay, 183
MHAFilter::filter_t, 510	m_coeff, 184
MHAFilter::gamma_flt_t, 513	m_fullsamples, 184
MHAFilter::iir_filter_t, 518	m_norm, 184
a	m_now_in, 184
MHAParser::base_t::replace_t, 618	m state, 184
A	process, 184
MHAFilter::complex_bandpass_t, 498	ADM::Delay< F >, 183
MHAFilter::iir_ord1_real_t, 521	ADM::Linearphase_FIR< F >, 185
AC_DIM_MISMATCH	ADM::Linearphase_FIR
mha_algo_comm.cpp, 965	~Linearphase_FIR, 186
AC_INVALID_HANDLE	Linearphase_FIR, 185
mha_algo_comm.cpp, 965	m alphas, 186
AC_INVALID_NAME	m_now, 186
mha_algo_comm.cpp, 965	m_order, 186
AC_INVALID_OUTPTR	m_output, 186
mha_algo_comm.cpp, 965	process, 186
AC_STRING_TRUNCATED	ADM, 75
mha_algo_comm.cpp, 965	ADM; 75 ADM::ADM, 181
AC_SUCCESS	C, 76
mha_algo_comm.cpp, 965	•
AC_TYPE_MISMATCH	DELAY_FREQ, 76
mha_algo_comm.cpp, 965	PI, 76
ACSAVE_FMT_MAT4	START_BETA, 76
acsave.cpp, 938	subsampledelay_coeff, 75
ACSAVE_FMT_TXT	ALGO_COMM_ID_STR
acsave.cpp, 938	mha_algo_comm.hh, 967
ACSAVE_FMT_M	ASSERT_EQUAL_DIM_PTR
acsave.cpp, 938	mha_signal.cpp, 996
ACSAVE_SFMT_MAT4	ASSERT_EQUAL_DIM
acsave.cpp, 938	mha_signal.cpp, 996
ACSAVE_SFMT_TXT	ASYNC_CONNECT_STARTED
acsave.cpp, 938	mha_tcp.cpp, 1008
ACSAVE_SFMT_M	abandonned
acsave.cpp, 938	mha_rt_fifo_element_t, 439
ADM::ADM < F >, 180	abs
ADM::ADM	Complex arithmetics in the openMHA, 62
ADM, 181	abs2
beta, 182	Complex arithmetics in the openMHA, 62
m_beta, 182	ac
m_decomb, 182	ac2lsl::cfg_t, 127
m delay back, 182	ac2wave_t, 142
m_delay_front, 182	acConcat_wave_config, 146
m_lp_bf, 182	acPooling_wave_config, 156
m_lp_result, 182	acTransform_wave_config, 171
m_mu_beta, 182	acmon::acmon_t, 151
m_powerfilter_coeff, 182	acsave::cfg_t, 161
m_powerfilter_norm, 182	acsave::save_var_t, 163
<b>→</b>	,

doasvm_classification_config, 274 fw_t, 330	ac2lsl::save_var_base_t, 128 ~save_var_base_t, 128
latex_doc_t, 374	data_type, 129
lpc_bl_predictor_config, 380	get_buf_address, 128
lpc_burglattice_config, 384	info, 129
MHA_AC::ac2matrix_helper_t, 392	send_frame, 128
MHA_AC::double_t, 398	set_buf_address, 129
MHA_AC::float_t, 399	ac2lsl::save_var_t
MHA AC::int t, 400	∼save_var_t, 131
MHA AC::spectrum t, 403	buf, 132
MHA_AC::waveform_t, 406	data type, 131
MHAKernel::algo_comm_class_t, 581	data_type_, 132
MHAMultiSrc::base t, 583	get_buf_address, 131
MHAPlugin::plugin_t, 707	info, 131
mhachain::plugs_t, 478	save_var_t, 130
PluginLoader::mhapluginloader_t, 859	send_frame, 131
prediction_error_config, 865	set_buf_address, 131
rt_nlms_t, 874	stream, 132
shadowfilter_end::cfg_t, 882	ac2lsl::save_var_t< mha_complex_t >, 132
steerbf_config, 904	$\sim$ save var t, 133
testplugin::if_t, 910	buf, 135
· • —	
timoConfig, 917	data_type, 134
AC variable, 4	get_buf_address, 134
ac2lsl, 73	info, 134
ac2lsl.cpp, 935	save_var_t, 133
ac2lsl::ac2lsl_t, 122	send_frame, 134
ac2lsl_t, 124	set_buf_address, 134
activate, 125	stream, 135
get_all_names_from_ac_space, 124	ac2lsl::save_var_t< T >, 129
is_first_run, 125	ac2lsl_t
patchbay, 125	ac2lsl::ac2lsl_t, 124
prepare, 124	ac2matrix_helper_t
process, 124	MHA_AC::ac2matrix_helper_t, 391
release, 124	ac2matrix_t
rt_strict, 125	MHA_AC::ac2matrix_t, 393
skip, 125	ac2osc.cpp, 935
source_id, 125	ac2osc_t, 135
update, 125	ac2osc_t, 137
vars, 125	acspace, 138
ac2lsl::cfg_t, 125	b_record, 139
ac, 127	framerate, 139
cfg_t, 126	host, 138
check_vars, 127	lo_addr, 139
make_or_replace_var, 127	mode, 138
process, 127	patchbay, 139
skip, 127	port, 138
skipcnt, 127	prepare, 137
source_id, 127	process, 137
srate, 127	release, 137
update_varlist, 127	rt_strict, 138
varlist, 127	rt_strict_flag, 139
rainet, i=i	11_011101_1149, 100

rtmem, 139	prefix_names_AC, 145
send_osc_float, 138	prepare, 144
skip, 138	process, 144
skipcnt, 139	release, 144
ttl, 138	samples_AC, 145
update_mode, 138	update_cfg, 145
vars, 138	acConcat_wave.cpp, 936
ac2wave.cpp, 935	INSERT_PATCH, 936
ac2wave_if_t, 139	PATCH_VAR, 936
ac2wave if t, 140	acConcat wave.h, 936
delay_ac, 141	acConcat_wave_config, 145
delay_in, 141	~acConcat_wave_config, 146
gain_ac, 141	ac, 146
gain_in, 141	acConcat_wave_config, 146
name, 141	numSamples_AC, 146
patchbay, 141	process, 146
prepare, 140	strNames_AC, 146
prepared, 141	vGCC_con, 146
process, 140	vGCC, 146
•	•
release, 140	acPooling_wave, 152
update, 141	~acPooling_wave, 153
zeros, 141	acPooling_wave, 153
ac2wave_t, 141	alpha, 154
ac, 142	like_ratio_name, 154
ac2wave_t, 142	lower_threshold, 154
channels, 142	max_pool_ind_name, 154
delay_ac, 142	neighbourhood, 154
delay_in, 142	numsamples, 154
frames, 142	p_biased_name, 154
gain_ac, 142	p_name, 154
gain_in, 142	patchbay, 154
name, 142	pool_name, 154
process, 142	pooling_type, 154
w, 142	pooling_wndlen, 154
ac_	prepare, 153
combc_t, 237	prob_bias, 154
MHAParser::mhapluginloader_t, 659	process, 153
ac_fifo	release, 154
analysepath_t, 210	update_cfg, 154
ac_monitor_t	upper_threshold, 154
acmon::ac_monitor_t, 147	acPooling_wave.cpp, 937
ac_monitor_type.cpp, 935	INSERT_PATCH, 937
ac_monitor_type.hh, 935	PATCH_VAR, 937
ac_parser_t	acPooling_wave.h, 937
testplugin::ac_parser_t, 906	acPooling_wave_config, 155
acConcat_wave, 143	$\sim$ acPooling_wave_config, 155
$\sim$ acConcat_wave, 144	ac, 156
acConcat_wave, 144	acPooling_wave_config, 155
name_conAC, 145	alpha, 156
num_AC, 145	c, 156
patchbay, 145	insert, 155

like_ratio, 156	patchbay, 170
low_thresh, 156	prepare, 169
neigh, 156	process, 169
p, 156	raw_p_max_name, 170
p_biased, 156	raw_p_name, 170
p_max, 156	release, 169
pool, 156	rotated_p_max_name, 170
pooling_ind, 156	rotated_p_name, 170
pooling_option, 156	to_from, 170
pooling_size, 156	update_cfg, 170
prob_bias_func, 156	acTransform_wave.cpp, 938
process, 155	INSERT_PATCH, 939
raw_p_name, 156	PATCH VAR, 939
up_thresh, 156	acTransform_wave.h, 939
acSteer, 164	acTransform_wave_config, 170
∼acSteer, 165	~acTransform_wave_config, 171
acSteer, 165	ac, 171
acSteerName1, 166	acTransform_wave_config, 171
acSteerName2, 166	ang name, 171
nrefmic, 166	offset, 171
nsteerchan, 166	process, 171
patchbay, 166	raw_p_max_name, 171
prepare, 165	raw_p_name, 171
process, 165	resolution, 171
release, 165	rotated_i, 171
steerFile, 166	rotated_p, 171
update_cfg, 166	to_from, 171
acSteer.cpp, 938	accept
INSERT PATCH, 938	MHA_TCP::Server, 458
PATCH_VAR, 938	accept_event
acSteer.h, 938	MHA_TCP::Server, 459
acSteer_config, 166	accept_loop
~acSteer_config, 167	io_tcp_t, 371
acSteer_config, 167	acceptor started
insert, 167	mhaserver_t, 737
nangle, 167	ack fail
nchan, 167	mhaserver_t, 738
nfreg, 167	ack_ok
nrefmic, 167	mhaserver t, 738
nsteerchan, 167	acmon, 73
specSteer1, 167	acmon.cpp, 936
specSteer2, 167	acmon::ac_monitor_t, 146
acSteerName1	ac_monitor_t, 147
acSteer, 166	dimstr, 148
acSteerName2	getvar, 148
acSteer, 166	mon, 148
acTransform_wave, 168	mon_complex, 148
~acTransform_wave, 169	mon mat, 148
acTransform_wave, 169	mon_mat_complex, 148
ang_name, 170	name, 148
numsamples, 170	p_parser, 148
	P_P 3. 55., 1 10

	101
use_mat, 148	ac, 161
acmon::acmon_t, 149	cfg_t, 160
$\sim$ acmon_t, 150	flush_data, 160
ac, 151	max_frames, 161
acmon_t, 150	nvars, 161
algo, 151	rec_frames, 161
b_cont, 151	store_frame, 160
b_snapshot, 151	varlist, 161
chain, 151	acsave::mat4head_t, 161
dimensions, 151	cols, 161
dispmode, 151	imag, 161
patchbay, 151	namelen, 161
prepare, 150	rows, 161
process, 150, 151	t, 161
recmode, 151	acsave::save var t, 162
release, 150	;
•	~save_var_t, 162
save_vars, 151	ac, 163
update_recmode, 151	b_complex, 163
varlist, 151	data, 163
vars, 151	framecnt, 163
acmon_t	maxframe, 163
acmon::acmon_t, 150	name, 163
acsave, 74	ndim, 163
acsave.cpp, 937	nframes, 163
ACSAVE_FMT_MAT4, 938	save_m, 163
ACSAVE_FMT_TXT, 938	save_mat4, 162
ACSAVE_FMT_M, 938	save_txt, 162
ACSAVE SFMT MAT4, 938	save_var_t, 162
ACSAVE_SFMT_TXT, 938	store_frame, 162
ACSAVE_SFMT_M, 938	acsave_t
acsave::acsave t, 157	acsave::acsave_t, 158
acsave_t, 158	acspace
algo, 159	ac2osc_t, 138
b flushed, 159	acspace2matrix t
b_prepared, 159	MHA_AC::acspace2matrix_t, 395
b_brepared, 139 bflush, 159	<u> </u>
	acspace_template
chain, 159	analysispath_if_t, 212
event_start_recording, 159	act_
event_stop_and_flush, 159	wavwriter_t, 931
fileformat, 159	actgains
fname, 159	fader_if_t, 311
patchbay, 159	activate
prepare, 158	ac2lsl::ac2lsl_t, 125
process, 158, 159	activate_query
reclen, 159	MHAParser::base_t, 616
release, 158	active
variables, 159	addsndfile::addsndfile_if_t, 174
varlist, 159	acvar
varlist_t, 158	MHA_AC::ac2matrix_helper_t, 392
acsave::cfg_t, 160	adapt_filter_param_t
~cfg_t, 160	MHAFilter::adapt_filter_param_t, 490
<del>0</del> _ /	1

adapt_filter_state_t	ramplen, 174
MHAFilter::adapt_filter_state_t, 491	release, 173
adapt_filter_t	resamplingmode, 174
MHAFilter::adapt_filter_t, 492	scan_dir, 174
add	search_pattern, 174
MHASignal::loop_wavefragment_t, 754	search_result, 174
add_entry	set_level, 174
MHAParser::keyword list t, 643	startpos, 174
MHATableLookup::linear_table_t, 802	uint_mode, 174
MHATableLookup::xy_table_t, 807	update, 173
add_fun	addsndfile::level_adapt_t, 175
MHAOvlFilter::scale_var_t, 608	can_update, 176
add_parent_on_insert	get_level, 176
MHAParser::base_t, 616	ilen, 176
add_plug	I_new, 176
altplugs_t, 208	I_old, 176
add_plugin	level_adapt_t, 175
pluginbrowser_t, 849	pos, 176
add_plugins	update_frame, 176
pluginbrowser_t, 849	wnd, 176
· •	•
add_replace_pair	addsndfile::resampled_soundfile_t, 176
MHAParser::base_t, 616	resampled_soundfile_t, 177
added_via_plugs	addsndfile::sndfile_t, 178
altplugs_t, 208	sndfile_t, 178
addsndfile, 74	addsndfile::waveform_proxy_t, 179
addsndfile_resampling_mode_t, 74	waveform_proxy_t, 180
DO_RESAMPLE, 74	addsndfile_if_t
DONT_RESAMPLE_PERMISSIVE, 74	addsndfile::addsndfile_if_t, 173
DONT_RESAMPLE_STRICT, 74	addsndfile_resampling_mode_t
level_adaptor, 74	addsndfile, 74
resampled_num_frames, 75	adm
wave_reader, 74	adm_rtconfig_t, 192
addsndfile.cpp, 939	adm.cpp, 940
DEBUG, 940	adm_fir_decomb, 940
addsndfile::addsndfile_if_t, 172	adm_fir_lp, 940
active, 174	adm.hh, 940
addsndfile_if_t, 173	adm_fir_decomb
change_mode, 174	adm.cpp, 940
channels, 174	adm_fir_lp
filename, 174	adm.cpp, 940
level, 174	adm_if_t, 187
levelmode, 174	adm_if_t, 188
loop, 174	beta, 189
mapping, 174	bypass, 189
mhachannels, 174	coeff_decomb, 189
mode, 174	coeff_lp, 189
numchannels, 174	decomb_order, 189
patchbay, 174	distances, 189
path, 174	front_channels, 189
prepare, 173	input_channels, 189
process, 173	is_prepared, 189

lp_order, 189 mu beta, 189	algo_comm_id_string MHAKernel::algo_comm_class_t, 581
out, 189	algo comm id string len
patchbay, 189	MHAKernel::algo comm class t, 581
prepare, 188	algo_comm_safe_cast
process, 188	MHAKernel, 94
rear_channels, 189	algo_comm_t, 193
release, 188	get_entries, 197
srate, 189	get_error, 197
tau beta, 189	get_var, 196
update, 188	get_var_float, 196
adm_rtconfig_t, 189	get_var_int, 196
~adm_rtconfig_t, 191	handle, 193
adm, 192	insert_var, 193
adm_rtconfig_t, 190	insert var float, 194
adm_t, 190	insert_var_int, 194
adms, 192	is var, 195
check_index, 191	mha.h, 964
decomb_coeffs, 192	remove ref, 195
front channel, 192	remove_var, 194
front_channels, 192	algo_name
lp_coeffs, 192	lpc, 376
num_adms, 191	algos
rear_channel, 192	MHAPlugin_Split::split_t, 725
rear_channels, 192	mhachain::chain_base_t, 475
adm t	mhachain::plugs_t, 478
adm_rtconfig_t, 190	all_dump
adms	MHAParser, 103
adm_rtconfig_t, 192	all_ids
algo	MHAParser, 103
acmon::acmon_t, 151	alloc_plugs
acsave::acsave_t, 159	mhachain::plugs_t, 478
analysispath_if_t, 212	almost
coherence::cohflt_if_t, 230	Complex arithmetics in the openMHA, 64
db_if_t, 243	alph
dc::dc_if_t, 246	plingploing::plingploing_t, 845
fftfilterbank::fftfb_interface_t, 322	alpha
MHAPlugin_Resampling::resampling_if←	acPooling_wave, 154
_t, 709	acPooling_wave_config, 156
multibandcompressor::interface_t, 823	cfg_t, 228
nlms_t, 827	coherence::cohflt_t, 232
overlapadd::overlapadd_if_t, 836	coherence::vars_t, 234
route::interface_t, 871	alpha_const
smoothgains_bridge::overlapadd_if_←	timoConfig, 917
t, 889	alpha_const_limits_hz
wave2spec_if_t, 925	timo_params, 915
algo_comm_class_t	timoSmooth, 922
MHAKernel::algo_comm_class_t, 579	alpha_const_vals
algo_comm_default	timo_params, 915
mha_algo_comm.cpp, 965	timoSmooth, 922
mha_algo_comm.hh, 967	alpha_frame

timoConfig, 918	val_min, 205
alpha_frame_AC	wave, 204
timo_AC, 913	write, 204
alpha_hat	alsa_t< T >, 202
timoConfig, 918	altplugs.cpp, 941
alpha_hat_AC	MHAPLUGIN_OVERLOAD_OUTDOM↔
timo_AC, 913	AIN, 941
alpha_pitch	altplugs_t, 205
timo_params, 915	add_plug, 208
timoSmooth, 921	added_via_plugs, 208
alpha_prev	altplugs_t, 206
timoConfig, 918	cfin, 208
alphaPH1mean	cfout, 208
noisePowProposedScale::interface_t, 831	current, 208
alphaPH1mean_	delete_plug, 208
noisePowProposedScale::noisePow↔	event_add_plug, 207
Proposed, 833	event_delete_plug, 207
alphaPSD_	event_select_plug, 207
noisePowProposedScale::noisePow↔	event_set_plugs, 207
Proposed, 833	fallback_spec, 208
alphaPSD	fallback_wave, 208
•	
noisePowProposedScale::interface_t, 831	nondefault_labels, 208
alsa_base_t, 198	parse, 207
~alsa_base_t, 199	parser_plugs, 208
alsa_base_t, 199	patchbay, 208
pcm, 200	plugs, 208
read, 199	prepare, 206
start, 199	prepared, 208
stop, 199	proc_ramp, 207
write, 199	process, 207
alsa_dev_par_parser_t, 200	ramp_counter, 208
alsa_dev_par_parser_t, 201	ramp_len, 208
device, 201	ramplen, 208
nperiods, 201	release, 206
stream_dir, 201	select_plug, 208
alsa_start_counter	selected_plug, 208
io_alsa_t, 344	update_ramplen, 207
alsa_t	update_selector_list, 207
∼alsa_t, 203	use_own_ac, 208
alsa_t, 203	amplitude
buffer, 204	sine_cfg_t, 885
channels, 204	analysemhaplugin.cpp, 941
fragsize, 204	main, 942
frame_data, 204	print_ac, 942
gain, <mark>204</mark>	strdom, 942
invgain, 205	analysepath_t, 209
pcm_format, 205	$\sim$ analysepath_t, 209
read, 204	ac_fifo, 210
start, 203	analysepath_t, 209
stop, 203	attr, 210
val_max, 205	cond_to_process, 210

flag_terminate_inner_thread, 210 has_inner_error, 210	announce_port mhaserver_t, 738
inner_ac_copy, 210	antialias
inner_error, 210	ds_t, 283
inner_input, 210	us_t, 923
inner_out_domain, 210	apply_gains
inner_process_wave2spec, 210	MHAOvIFilter::fftfb_t, 592
inner_process_wave2spec, 210	multibandcompressor::plugin_signals_t,
<b>—</b>	824
input_to_process, 210	
libdata, 210	aquire_mutex
outer_ac, 210	mha_fifo_posix_threads_t, 429
outer_ac_copy, 210	mha_fifo_thread_platform_t, 437
priority, 210	arg
ProcessMutex, 210	MHA_TCP::Thread, 465
rt_process, 210	assign
scheduler, 210	MHASignal::waveform_t, 793
svc, 210	Vector and matrix processing toolbox, 44
thread, 210	45
wave_fifo, 210	assign_channel
analysispath.cpp, 942	MHASignal::waveform_t, 793
thread_start, 942	assign_frame
analysispath_if_t, 211	MHASignal::waveform_t, 793
$\sim$ analysispath_if_t, 212	Async_Notify
acspace_template, 212	MHA_TCP::Async_Notify, 445
algo, <mark>212</mark>	async_poll_msg
analysispath_if_t, 212	fw_t, 330
chain, 212	async_read
fifolen, 212	fw_t, 330
fragsize, 212	async_rmslevel_t
libname, 212	MHASignal::async_rmslevel_t, 739
loadlib, 212	attack
patchbay, 212	cfg_t, 228
plug, 212	dc::dc_t, 248
prepare, 212	dc_simple::level_smoother_t, 264
priority, 212	softclip_t, 892
process, 212	softclipper_t, 893
release, 212	attr
vars, 212	analysepath_t, 210
analytic	MHAPlugin_Split::posix_threads_t, 721
hilbert_shifter_t, 338	auditory_profile.cpp, 942
ang_name	auditory profile.h, 942
acTransform wave, 170	AuditoryProfile, 76
acTransform_wave_config, 171	AuditoryProfile::fmap_t, 213
angle	get_frequencies, 213
Complex arithmetics in the openMHA, 59	get_values, 213
angle_ind	isempty, 213
steerbf, 903	AuditoryProfile::parser_t, 214
angle_src	get_current_profile, 215
steerbf, 903	L, 215
angles	parser_t, 215
doasvm_classification, 273	R, 215
addovin_diaddindation, 270	, _ 10

AuditoryProfile::parser_t::ear_t, 215	calibrator_runtime_layer_t, 223
ear_t, 216	calibrator_t, 225
get_ear, 216	b_is_prepared
HTL, 216	PluginLoader::mhapluginloader_t, 860
UCL, 216	b_loop
AuditoryProfile::parser_t::fmap_t, 216	MHASignal::loop_wavefragment_t, 756
f, 217	b_ltg
fmap_t, 217	coherence::cohflt_t, 233
get_fmap, 217	b_prepared
name_, 217	acsave::acsave t, 159
patchbay, 217	io_file_t, 348
validate, 217	io_parser_t, 354
value, 217	MHAJack::client_t, 574
AuditoryProfile::profile_t, 218	mhachain::chain_base_t, 475
get_ear, 218	mhachain::plugs_t, 478
L, 219	· • -
R, 219	b_process
AuditoryProfile::profile_t::ear_t, 219	io_alsa_t, 344
convert_empty2normal, 219	b_ready
HTL, 219	MHAJack::client_avg_t, 565
UCL, 219	b_record
·	ac2osc_t, 139
average	b_snapshot
coherence::vars_t, 234	acmon::acmon_t, 151
avg_ipd	b_starting
coherence::cohflt_t, 232	io_parser_t, 354
azimuth	b_stopped
mha_direction_t, 416	io_parser_t, 354
В	MHAJack::client_avg_t, 565
MHAFilter::filter t, 510	MHAJack::client noncont t, 567
MHAFilter::iir_filter_t, 518	b use clipping
<u> </u>	calibrator_runtime_layer_t, 223
b	b_use_fir
doasym_classification, 273	calibrator_runtime_layer_t, 223
MHAParser::base_t::replace_t, 618	b_use_profiling
B_ MILAFills was a realist to be reduced to 100	mhachain::plugs_t, 479
MHAFilter::complex_bandpass_t, 498	BARKSCALE_ENTRIES
MHAFilter::iir_ord1_real_t, 521	mha_fftfb.cpp, 975
b_check_version	blnvert
PluginLoader::mhapluginloader_t, 860	
b_complex	coherence::cohflt_t, 233
acsave::save_var_t, 163	backward
b_cont	lpc_bl_predictor_config, 380
acmon::acmon_t, 151	lpc_burglattice_config, 385
b_est	MHASignal::fft_t, 749
lpc_bl_predictor_config, 380	backward_scale
b_exit_request	MHASignal::fft_t, 749
fw_t, 331	band_weights
b_flushed	dc::dc_vars_t, 251
acsave::acsave_t, 159	bands
b_fw_started	dc::wideband_inhib_vars_t, 255
 io_parser_t, 354	MHAOvlFilter::fspacing_t, 601
b_is_input	bandw_correction
·	<del>_</del>

speechnoise.cpp, 1045	bflush
bark2hz_t	acsave::acsave_t, 159
MHAOvlFilter::barkscale::bark2hz_t, 589	bin1
bartlett	MHAOvIFilter::fftfb_t, 593
MHAWindow, 118	bin2
bartlett_t	MHAOvIFilter::fftfb_t, 593
MHAWindow::bartlett_t, 809	bin2freq
base_t	Vector and matrix processing toolbox, 40
MHAMultiSrc::base_t, 583	blackman
MHAParser::base_t, 612	MHAWindow, 119
MHAWindow::base t, 810, 811	blackman t
basename	MHAWindow::blackman_t, 812
save_spec_t, 877	blockprocessing_polyphase_resampling_t
save_wave_t, 878	MHAFilter::blockprocessing_polyphase←
shadowfilter_begin::shadowfilter_begin	_resampling_t, 494
t, 881	blocks
shadowfilter_end::shadowfilter_end_ ←	droptect_t, 281
t, 884	bookkeeping
bass	MHAFilter::partitioned_convolution_t, 533
plingploing::plingploing_t, 844	MHAParser::mhapluginloader t, 659
bassmod	bool_mon_t
plingploing::if_t, 842	MHAParser::bool_mon_t, 619
bassmod	bool_t
plingploing::plingploing_t, 845	MHAParser::bool_t, 622
bassperiod	bpm
plingploing::if_t, 843	plingploing::if_t, 842
bassperiod_	bprofiling
plingploing::plingploing_t, 845	mhachain::chain_base_t, 475
bbcalib_interface_t, 220	bracket_balance
~bbcalib interface t, 221	MHAParser::StrCnv, 106
bbcalib_interface_t, 221	brown
<del>-</del>	speechnoise t, 900
calib_in, 221	• —
calib_out, 221 plugloader, 221	browsemhaplugins.cpp, 943 DEBUG, 943
, 5	,
prepare, 221	main, 943
process, 221	bt plingpleing uplingpleing t 944
release, 221	plingploing::plingploing_t, 844
bbgain	buf
gain::gain_if_t, 334	ac2lsl::save_var_t, 132
beta ADMIADM 183	ac2lsl::save_var_t< mha_complex_t >,
ADM::ADM, 182	135
adm_if_t, 189	mha_fifo_t, 434
beta_const	mha_spec_t, 443
timo_params, 915	mha_wave_t, 473
timoSmooth, 921	buf_c_in
bf_src	MHASignal::hilbert_fftw_t, 751
steerbf, 903	buf_c_out
bf_src_copy	MHASignal::hilbert_fftw_t, 751
steerbf_config, 904	buf_in
bf_vec	MHASignal::fft_t, 750
steerbf_config, 904	buf_out

MHASignal::fft_t, 750	MHAFilter::o1_ar_filter_t, 524
buf_r_in	c1_r
MHASignal::hilbert_fftw_t, 751	MHAFilter::o1_ar_filter_t, 524
buf_r_out	c2 a
MHASignal::hilbert_fftw_t, 751	MHAFilter::o1_ar_filter_t, 524
buf_uses_placement_new	c2 r
mha fifo t, 434	MHAFilter::o1_ar_filter_t, 524
buffer	c ifc parser t
alsa t, 204	MHAParser::c_ifc_parser_t, 624
MHASignal::delay_spec_t, 741	c_min
MHASignal::delay t, 743	coherence::cohflt_t, 232
MHASignal::delay_wave_t, 744	c_parse_cmd
buffered_incoming_bytes	MHAParser::c_ifc_parser_t, 625
MHA_TCP::Connection, 453	c_parse_cmd_t
buffered_outgoing_bytes	MHAParser, 103
MHA_TCP::Connection, 453	·
burn	c_parse_err MHAParser::c ifc parser t, 625
DynComp::dc_afterburn_rt_t, 285	,,
DynComp::dc_afterburn_t, 287	c_parse_err_t MHAParser, 103
multibandcompressor::interface_t, 823	•
butter_stop_ord1	c_scale
MHAFilter, 89	coherence::cohflt_t, 232
bw	CHANLOOP
MHAOvlFilter::fscale_bw_t, 598	timoconfig.cpp, 1049
bw	CHECK_EXPR
MHAFilter::gamma_flt_t, 514	mha_defs.h, 968
bw_generator	CHECK_VAR
MHAFilter::thirdoctave_analyzer_t, 545	mha_defs.h, 968
bw hz	cLTASS
MHAOvIFilter::fscale_bw_t, 598	MHAOvlFilter::fftfb_ac_info_t, 591
bw_name	MHAOvIFilter::fftfb_vars_t, 596
dc::dc_vars_t, 251	COMPILER_ID_MAJOR
bwv	compiler_id.hh, 944
MHAOvIFilter::fftfb_ac_info_t, 591	COMPILER_ID_MINOR
multibandcompressor::fftfb plug t, 821	compiler_id.hh, 944
bypass	COMPILER_ID_PATCH
adm_if_t, 189	compiler_id.hh, 944
db_if_t, 243	COMPILER_ID_VENDOR
db_n_t, 248 dc::dc_t, 248	compiler_id.hh, 944
dc::dc_t, 246 dc::dc_vars_t, 251	COMPILER_ID_VERSION_HELPER1
dc .idc_vars_t, 251 dc simple::dc vars t, 262	compiler_id.hh, 944
DynComp::dc_afterburn_vars_t, 290	COMPILER_ID_VERSION_HELPER2
Dynoonipdc_aiterburn_vars_t, 290	compiler_id.hh, 944
C	COMPILER ID VERSION
ADM, 76	compiler_id.hh, 945
C	COMPILER ID
acPooling_wave_config, 156	compiler_id.hh, 945
doasym_classification_config, 274	calc in
io_tcp_sound_t::float_union, 369	wave2spec_t, 928
nlms_t, 827	calc_out
prediction_error, 863	overlapadd::overlapadd_t, 838
c1_a	spec2wave_t, 898
~ · <del>_~</del>	-p,

calc_pre_wnd	_resampling_t, 495
wave2spec_t, 927	can_read_bytes
calib_in	MHA_TCP::Connection, 451
bbcalib_interface_t, 221	can_read_line
calib_out	MHA_TCP::Connection, 451
bbcalib_interface_t, 221	can_sysread
calibrator_runtime_layer_t, 221	MHA_TCP::Connection, 449
b_is_input, 223	can_syswrite
b_use_clipping, 223	MHA_TCP::Connection, 449
b_use_fir, 223	can_update
calibrator_runtime_layer_t, 222	addsndfile::level_adapt_t, 176
fir, 222	fader_wave::level_adapt_t, 315
firfir2fftlen, 222	catch_condition
firfirlen, 222	MHAPlugin_Split::posix_threads_t, 721
gain, <mark>222</mark>	catch_thread
pmode, 223	MHAPlugin_Split::dummy_threads_t, 717
process, 222	MHAPlugin_Split::posix_threads_t, 720
quant, <mark>222</mark>	MHAPlugin_Split::thread_platform_t, 733
softclip, 222	categories
speechnoise, 223	plugindescription_t, 850
calibrator_t, 223	cdata
b_is_input, 225	MHASignal::matrix_t, 765
calibrator_t, 224	mha_audio_t, 408
patchbay, 225	center_frequencies
prepare, 224	dc::dc_vars_t, 251
prepared, 225	dc_simple::dc_if_t, 257
process, 224	cf
read_levels, 225	MHAFilter::thirdoctave_analyzer_t, 545
release, 224	MHAOvIFilter::band_descriptor_t, 588
update, 225	MHAOvlFilter::fftfb_vars_t, 596
update_tau_level, 225	mha_audio_descriptor_t, 407
vars, 225	plingploing::plingploing_t, 844
calibrator_variables_t, 225	cf2bands
calibrator_variables_t, 226	MHAOvlFilter::fspacing_t, 601
config_parser, 226	cf_
do_clipping, 226	MHAFilter::gamma_flt_t, 514
fir, 226	wavwriter_t, 931
fragsize, 226	cf_generator
nbits, 226	MHAFilter::thirdoctave_analyzer_t, 545
num_channels, 226	cf_h
peaklevel, 226	MHAOvlFilter::band_descriptor_t, 588
rmslevel, 226	cf_in
softclip, 226	overlapadd::overlapadd_if_t, 836
spnoise_channels, 226	smoothgains_bridge::overlapadd_if_←
spnoise_level, 226	t, 889
spnoise_mode, 226	cf_in_
spnoise_parser, 226	MHAParser::mhapluginloader_t, 659
srate, 226	cf_input
tau_level, 226	PluginLoader::mhapluginloader_t, 860
can_read	cf_l
MHAFilter::blockprocessing_polyphase←	MHAOvlFilter::band_descriptor_t, 588

cf_name	altplugs_t, 208
dc::dc_vars_t, 251	fw_t, 331
cf_out	mhachain::chain_base_t, 475
overlapadd::overlapadd_if_t, 836	route::interface t, 871
smoothgains_bridge::overlapadd_if_←	cfv
t, 889	MHAOvlFilter::fftfb_ac_info_t, 590
cf_out_	multibandcompressor::fftfb_plug_t, 821
MHAParser::mhapluginloader_t, 659	cg
cf_output	coherence::cohflt_t, 232
PluginLoader::mhapluginloader_t, 860	ch
cfac	MHASignal::doublebuffer_t, 747
route::interface_t, 871	chain
cfg	acmon::acmon_t, 151
MHAPlugin::config_t, 703	acsave::acsave_t, 159
cfg_	analysispath_if_t, 212
MHAFilter::thirdoctave_analyzer_t, 545	db_if_t, 243
cfg_chain	MHAPlugin_Resampling::resampling_if←
	t, 709
MHAPlugin::config_t, 703	<del>-</del> :
cfg_chain_current	mhachain::chain_base_t, 475
MHAPlugin::config_t, 703	mhachain::plugs_t, 479
cfg_chain_t	chain_base_t
MHAPlugin::cfg_chain_t, 698	mhachain::chain_base_t, 474
cfg_dump	chains
MHAParser, 103	MHAPlugin_Split::split_t, 726
cfg_dump_short	change_mode
MHAParser, 103	addsndfile::addsndfile_if_t, 174
cfg_t, 227	channel
ac2lsl::cfg_t, 126	cfg_t, 228
acsave::cfg_t, 160	example5_t, 308
alpha, 228	MHAMultiSrc::channel_t, 583
attack, 228	channel_gain_name
cfg_t, 227	combc_if_t, 236
channel, 228	channel_gains_
decay, <mark>228</mark>	combc_t, 237
frozen_noise_, 228	channel_info
gain_spec_, <mark>228</mark>	mha_spec_t, 443
gain_wave_, <mark>228</mark>	mha_wave_t, 473
matrixmixer::cfg_t, 388	channel_no
pos, 228	example6_t, 309
process, 228	channelconfig_out_
replace_, 228	MHAOvlFilter::overlap_save_filterbank_t,
shadowfilter_begin::cfg_t, 879	605
shadowfilter_end::cfg_t, 882	channels
start_lin, 228	ac2wave_t, 142
use frozen , 228	addsndfile::addsndfile_if_t, 174
cfin	alsa_t, 204
altplugs_t, 208	dc::wideband_inhib_vars_t, 255
fw_t, 331	MHAFilter::fftfilter t, 502
mhachain::chain_base_t, 475	MHAFilter::filter_t, 511
route::interface_t, 871	MHAParser::mhaconfig_mon_t, 656
cfout	MHAPlugin_Split::split_t, 725
	· - · · - ·

MHASignal::delay_t, 743	MHAJack::client_noncont_t, 567
mhaconfig_t, 481	client_t
prediction_error_config, 866	MHAJack::client_t, 570
rt_nlms_t, 874	clientid
sine_cfg_t, 885	dc::dc_vars_t, 251
sine_t, 887	dc_simple::dc_if_t, 257
testplugin::config_parser_t, 908	clientname
Vector and matrix processing toolbox, 37	MHAIOJack::io_jack_t, 552
channels_t	MHAIOJackdb::io jack t, 557
MHAMultiSrc::channels_t, 584	clipmeter
char_data	softclipper_t, 893
testplugin::ac_parser_t, 906	clipped
chdir	softclipper_variables_t, 895
mha_audio_descriptor_t, 407	close_session
check_index	wavwriter_t, 931
adm_rtconfig_t, 191	closed
check low	MHA_TCP::Connection, 453
MHAParser::range_var_t, 670	closesocket
check_range	mha_tcp.cpp, 1008
MHAParser::range_var_t, 670	cmd_prepare
check_sound_data_type	MHAIOPortAudio::io_portaudio_t, 561
io_tcp_sound_t, 366	cmd_release
check_up	MHAIOPortAudio::io_portaudio_t, 562
MHAParser::range_var_t, 670	cmd_start
check_vars	MHAIOPortAudio::io_portaudio_t, 561
ac2lsl::cfg_t, 127	cmd_stop
chname	MHAIOPortAudio::io_portaudio_t, 561
dc::dc_vars_t, 251	CO
chunkbytes in	matrixmixer::matmix t, 390
io_tcp_sound_t, 366	coeff_decomb
ci	adm_if_t, 189
matrixmixer::matmix t, 390	coeff_lp
cleanup_plugs	adm_if_t, 189
mhachain::plugs_t, 478	coh c
cleanup_unused_cfg	coherence::cohflt_t, 233
MHAPlugin::config_t, 703	coh_rlp
clear	coherence::cohflt_t, 233
MHATableLookup::linear_table_t, 802	coherence, 76
MHATableLookup::table_t, 804	getcipd, 77
MHATableLookup::xy_table_t, 807	coherence.cpp, 943
mha_fifo_t, 434	coherence::cohflt_if_t, 229
Vector and matrix processing toolbox, 44	algo, 230
clear_chains	cohflt_if_t, 230
MHAPlugin_Split::split_t, 724	patchbay, 230
clear_plugins	prepare, 230
pluginbrowser_t, 849	process, 230
Client	release, 230
MHA_TCP::Client, 446	update, 230
client_avg_t	vars, 230
MHAJack::client_avg_t, 564	coherence::cohflt_t, 231
client_noncont_t	alpha, 232

avg_ipd, 232	prepare, 236
b_ltg, 233	process, 236
blnvert, 233	combc_t, 236
c_min, 232	ac_, 237
c_scale, 232	channel_gains_, 237
cg, 232	combc_t, 237
coh_c, 233	element_gain_name_, 237
coh_rlp, 233	interleaved , 237
cohflt_t, 232	nbands, 237
g, 232	process, 237
gain, 233	s_out, 237
gain_delay, 233	w_out, 237
insert, 232	combinechannels.cpp, 944
limit, 232	comm_var_t, 238
lp1i, 232	data, 239
lp1ltg, 233	data_type, 238
lp1r, 232	num entries, 238
nbands, 232	stride, 239
process, 232	commentate
s_out, 233	MHAParser, 103
staticgain, 233	commit
coherence::vars_t, 233	DynComp::dc_afterburn_vars_t, 290
alpha, 234	commit_pending
average, 234	DynComp::dc_afterburn_t, 288
delay, 234	commit_t
invert, 234	MHAParser::commit_t, 627
limit, 234	Communication between algorithms, 23
Itgcomp, 234	get_var_float, 25
Itgtau, 234	get_var_int, 25
mapping, 234	get_var_spectrum, 24
staticgain, 234	get_var_vfloat, 26
tau, 234	get_var_waveform, 25
tau_unit, 234	comp_each_iter
vars_t, 234	lpc, 376
cohflt_if_t	lpc_config, 386
coherence::cohflt_if_t, 230	comp_iter
cohflt_t	lpc_config, 387
coherence::cohflt_t, 232	compiler_id.cpp, 944
collect_result	compiler_id.hh, 944
MHAPlugin_Split::split_t, 724	COMPILER_ID_MAJOR, 944
MHAPlugin_Split::splitted_part_t, 730	COMPILER_ID_MINOR, 944
colored_intensity	COMPILER_ID_PATCH, 944
Vector and matrix processing toolbox, 52	COMPILER_ID_VENDOR, 944
cols	COMPILER_ID_VERSION_HELPER1,
acsave::mat4head_t, 161	944
combc_if_t, 235	COMPILER_ID_VERSION_HELPER2,
channel_gain_name, 236	944
combc_if_t, 236	COMPILER_ID_VERSION, 945
element_gain_name, 236	COMPILER_ID, 945
interleaved, 236	Complex arithmetics in the openMHA, 56
outchannels, 236	_conjugate, 63

_reciprocal, 64	testplugin::if_t, 910
abs, 62	config_parser
abs2, 62	calibrator_variables_t, 226
almost, 64	config_parser_t
angle, 59	testplugin::config_parser_t, 907
conjugate, 63	config_t
expi, 59, 61	MHAPlugin::config_t, 701
mha_complex, 58	configfile
normalize, 64	PluginLoader::config_file_splitter_t, 852
operator!=, 63	configname
operator<, 64	PluginLoader::config_file_splitter_t, 852
operator*, 61, 62	configuration, 4
operator*=, 61	configuration, 4
•	conflux
operator+, 60	
operator+=, 60	DynComp::dc_afterburn_rt_t, 286
operator-, 60, 61, 63	DynComp::dc_afterburn_vars_t, 290
operator-=, 60	conjugate
operator/, 62, 63	Complex arithmetics in the openMHA, 63
operator/=, 62	Vector and matrix processing toolbox, 55
operator==, 63	connect
reciprocal, 63	MHAEvents::emitter_t, 487
safe_div, 62	MHAEvents::patchbay_t, 488, 489
set, 58, 59	connect_input
stdcomplex, 59	MHAJack::client_t, 571
complex_bandpass_t	connect_output
MHAFilter::complex_bandpass_t, 497	MHAJack::client_t, 571
complex_data	connect_to
testplugin::ac_parser_t, 906	MHAJack::port_t, 577
complex_filter.cpp, 945	connected
complex_filter.h, 945	io_tcp_parser_t, 363
complex_mon_t	Connection
MHAParser::complex mon t, 628	MHA_TCP::Connection, 449
complex_ofs	connection_loop
MHASignal::matrix_t, 765	io_tcp_t, 371
complex_t	connections
• –	MHAEvents::emitter_t, 487
MHAParser::complex_t, 630	connections in
compression	<u> </u>
dc_simple::dc_t, 259	MHAIOJack::io_jack_t, 552
compute_something	MHAIOJackdb::io_jack_t, 557
cpuload_t, 240	connections_out
compute_something_else	MHAIOJack::io_jack_t, 552
cpuload_t, 241	MHAIOJackdb::io_jack_t, 557
Concept of Variables and Data Exchange in	connector
the openMHA, 4	MHAFilter::adapt_filter_t, 493
cond_to_process	MHAFilter::iir_filter_t, 518
analysepath_t, 210	MHAParser::mhapluginloader_t, 659
config_file_splitter_t	connector_base_t
PluginLoader::config_file_splitter_t, 851	MHAEvents::connector_base_t, 482
config_in	connector_t
testplugin::if_t, 910	MHAEvents::connector_t, 485
config_out	cons
<b>U</b>	

MHAEvents::patchbay_t, 489	creator_A
consecutive_dropouts	MHAFilter::complex_bandpass_t, 497
droptect_t, 281	creator_B
contained_frames	MHAFilter::complex_bandpass_t, 497
MHASignal::ringbuffer_t, 770	cstr_strerror
conv2latex	mha_errno.c, 970
generatemhaplugindoc.cpp, 955	current
convert_empty2normal	altplugs_t, 208
AuditoryProfile::profile_t::ear_t, 219	dc::wideband_inhib_vars_t, 254
convert_f2logf	mha_rt_fifo_t, 442
gaintable.cpp, 954	current_input_signal_buffer_half_index
сору	MHAFilter::partitioned_convolution_t, 533
MHASignal::spectrum_t, 778	current_output_partition_index
MHASignal::waveform_t, 794	MHAFilter::partitioned_convolution_t, 533
timo_AC, 912	current_powspec
copy_AC	droptect_t, 281
timoConfig, 917	current_thread_priority
copy channel	MHAPlugin_Split::posix_threads_t, 720
MHASignal::spectrum_t, 779	current_thread_scheduler
MHASignal::waveform_t, 794	MHAPlugin_Split::posix_threads_t, 720
Vector and matrix processing toolbox, 51	
•	DBG
copy_error MHAIOTCP.cpp, 1031	MHAIOalsa.cpp, 1013
	DEBUG
copy_from_at	addsndfile.cpp, 940
MHASignal::waveform_t, 794	browsemhaplugins.cpp, 943
copy_output_spec	fader_wave.cpp, 953
MHAPlugin_Split::split_t, 724	MHAIOFile.cpp, 1015
copy_output_wave	wavrec.cpp, 1052
MHAPlugin_Split::split_t, 724	DEFAULT_RETSIZE
copy_permuted	mha_parser.hh, 989
MHASignal, 116	DELAY_FREQ
corr_out	ADM, 76
lpc_config, 387	DO_RESAMPLE
cpuload.cpp, 945	addsndfile, 74
cpuload_t, 239	DONT_RESAMPLE_PERMISSIVE
compute_something, 240	addsndfile, 74
compute_something_else, 241	DONT_RESAMPLE_STRICT
cpuload_t, 240	addsndfile, 74
factor, 241	DUPVEC
phase, 241	dc.cpp, 946
prepare, 240	data
process, 240	acsave::save_var_t, 163
result, 241	comm_var_t, 239
table, 241	DynComp::gaintable_t, 295
use_sine, 241	MHA_AC::acspace2matrix_t, 397
create_latex_doc	MHA_AC::double_t, 398
generatemhaplugindoc.cpp, 955	MHA_AC::float_t, 399
create_lock	MHA_AC::int_t, 400
mhamain.cpp, 1035	MHAParser::bool_mon_t, 620
creator	MHAParser::bool_t, 622
speechnoise_t, 901	MHAParser::complex_mon_t, 629

MHAParser::complex_t, 631	process, 242
MHAParser::float_mon_t, 634	release, 242
MHAParser::float_t, 637	db_t, 243
MHAParser::int_mon_t, 639	db_t, 244
MHAParser::int_t, 641	inner_process, 244
MHAParser::kw_t, 647	plugloader, 244
MHAParser::mcomplex_mon_t, 648	dbspl2pa
MHAParser::mcomplex_t, 650	Vector and matrix processing toolbox, 39
MHAParser::mfloat mon t, 652	DC
MHAParser::mfloat_t, 655	dc simple, 78
MHAParser::mint_mon_t, 661	dc, 77
MHAParser::string_mon_t, 672	get_audiochannels, 77
MHAParser::string_t, 674	dc.cpp, 946
MHAParser::vcomplex_mon_t, 679	DUPVEC, 946
MHAParser::vcomplex_t, 681	dc::dc_if_t, 245
MHAParser::vfloat_mon_t, 683	algo, 246
MHAParser::vfloat_t, 686	dc_if_t, 246
MHAParser::vint_mon_t, 687	patchbay, 246
MHAParser::vint_t, 690	prepare, 246
<del>-</del> ·	process, 246
MHAParser::vstring_mon_t, 691 MHAParser::vstring_t, 693	update, 246
<u>0</u> _ ,	• •
MHAPlugin::cfg_chain_t, 698	update_monitors, 246
MHASignal::uint_vector_t, 786	wbinhib, 246
mha_rt_fifo_element_t, 439	dc::dc_t, 247
wavwriter_t, 931	attack, 248
data_is_initialized	bypass, 248
MHAParser::base_t, 617	dc_t, 248
data_type	decay, 248
ac2lsl::save_var_base_t, 129	explicit_insert, 248
ac2lsl::save_var_t, 131	get_level_in_db, 248
ac2lsl::save_var_t< mha_complex_t >,	get_level_in_db_adjusted, 248
134	get_nbands, 248
comm_var_t, 238	gt, 248
testplugin::ac_parser_t, 906	inhib_gain, 249
data_type_	k_nyquist, 249
ac2lsl::save_var_t, 132	level_in_db, 249
data_type_t	level_in_db_adjusted, 249
testplugin::ac_parser_t, 906	max_level_difference, 249
db.cpp, 945	naudiochannels, 249
db2lin	nbands, 249
Vector and matrix processing toolbox, 38	powersum, 248
db_if_t, 241	process, 248
$\sim$ db_if_t, 242	rmslevel, 248
algo, 243	dc::dc_vars_t, 249
bypass, 243	band_weights, 251
chain, 243	bw_name, 251
db_if_t, 242	bypass, 251
fragsize, 243	center_frequencies, 251
patchbay, 243	cf_name, 251
plugloader, 243	chname, 251
prepare, 242	clientid, 251
1 7 17 77 77	

dc_vars_t, 250	dc::dc_if_t, 246
edge_frequencies, 251	dc_simple::dc_if_t, 256
ef_name, 251	dc_simple, 77
filterbank, 251	DC, 78
filtered_level, 251	force_resize, 78
gainrule, 251	LEVEL, 78
gtdata, 250	not_zero, 78
gtmin, 250	test fail, 78
gtstep, 250	dc_simple.cpp, 947
input_level, 251	dc_simple::dc_if_t, 255
max_level_difference, 251	center_frequencies, 257
modified, 251	clientid, 257
powersum, 250	dc_if_t, 256
preset, 251	edge_frequencies, 257
tauattack, 250	filterbank, 257
taudecay, 251	gainrule, 257
taurmslevel, 250	has_been_modified, 257
use_wbinhib, 251	modified, 257
dc::dc_vars_validator_t, 252	mon_g, 257
dc_vars_validator_t, 252	mon_l, 257
dc::wb_inhib_cfg_t, 252	patchbay, 257
dl_diff, 253	prepare, 256
dl_map_max, 253	prepared, 257
dl_map_min, 253	preset, 257
g_scale, 253	process, 256, 257
I_min, 253	read_modified, 257
wb_inhib_cfg_t, 253	release, 256
weights, 253	update_dc, 257
dc::wideband_inhib_vars_t, 253	update_gain_mon, 257
bands, 255	update_level, 257
channels, 255	update_level_mon, 257
current, 254	dc_simple::dc_t, 258
dl_map_max, 254	compression, 259
dl_map_min, 254	dc t, 259
g_scale, 254	expansion, 259
I_min, 254	expansion_threshold, 259
patchbay, 255	limiter, 259
setchannels, 254	limiter_threshold, 259
update, 254	maxgain, 259
weights, 254	mon_g, 259
wideband_inhib_vars_t, 254	mon_l, 259
dc afterburn.cpp, 946	nbands, 259
mylogf, 947	process, 259
dc_afterburn.h, 947	dc_simple::dc_t::line_t, 260
dc_afterburn_rt_t	line_t, 260
DynComp::dc_afterburn_rt_t, 285	m, 260
dc afterburn t	operator(), 260
DynComp::dc_afterburn_t, 287	y0, 260
dc_afterburn_vars_t	dc_simple::dc_vars_t, 261
DynComp::dc_afterburn_vars_t, 290	bypass, 262
·	
dc_if_t	dc_vars_t, 261

expansion_slope, 262	default_thread_platform_string
expansion_threshold, 262	split.cpp, 1047
g50, 261	default_thread_platform_type
g80, 261	split.cpp, 1047
limiter_threshold, 262	defaultHighInputLatency
maxgain, 261	MHAIOPortAudio::device_info_t, 559
tauattack, 262	defaultHighOutputLatency
taudecay, 262	MHAIOPortAudio::device_info_t, 559
dc_simple::dc_vars_validator_t, 262	defaultLowInputLatency
dc_vars_validator_t, 263	MHAIOPortAudio::device_info_t, 559
dc_simple::level_smoother_t, 263	defaultLowOutputLatency
attack, 264	MHAIOPortAudio::device_info_t, 559
decay, 264	defaultSampleRate
fftlen, 264	MHAIOPortAudio::device_info_t, 559
level_smoother_t, 264	Delay
level_spec, 264	ADM::Delay, 183
level_wave, 264	delay, 78
nbands, 264	coherence::vars_t, 234
process, 264	delaysum::delaysum_if_t, 268
dc_t	MHAFilter::gamma_flt_t, 513
dc::dc_t, 248	MHAFilter::partitioned_convolution_t
dc_simple::dc_t, 259	::index_t, 535
dc_vars_t	MHAPlugin_Split::split_t, 726
dc::dc_vars_t, 250	MHASignal::delay_spec_t, 741
dc_simple::dc_vars_t, 261	MHASignal::delay_wave_t, 744
dc_vars_validator_t	mha_dblbuf_t, 415
dc::dc_vars_validator_t, 252	delay.cpp, 948
dc_simple::dc_vars_validator_t, 263	delay::interface_t, 265
deallocate_domains	delays, 266
MHAPlugin_Split::domain_handler_t, 714	interface_t, 266
debug	patchbay, 266
io_tcp_parser_t, 363	prepare, 266
debug_file	process, 266
io_tcp_parser_t, 364	update, 266
debug_filename	delay_ac
io_tcp_parser_t, 364	ac2wave_if_t, 141
decay	ac2wave_t, 142
cfg_t, 228	delay_d
dc::dc_t, 248	prediction_error, 864
dc_simple::level_smoother_t, 264	delay_in
softclip_t, 892	ac2wave_if_t, 141
softclipper_t, 893	ac2wave_t, 142
decomb_coeffs	delay_spec_t
adm_rtconfig_t, 192	MHASignal::delay_spec_t, 741
decomb_order	delay_t
adm_if_t, 189	MHASignal::delay_t, 742
decrease_condition	delay_w
mha_fifo_posix_threads_t, 430	prediction_error, 864
decrement	delay_wave_t
mha_fifo_posix_threads_t, 429	MHASignal::delay_wave_t, 744
mha_fifo_thread_platform_t, 437	delays

delay::interface t, 266	davica nama undated
• = ·	device_name_updated
MHASignal::delay_t, 743	MHAIOPortAudio::io_portaudio_t, 56
delays_in	
MHAIOJack::io_jack_t, 552 delays_out	frequency_translator_t, 325 diff_coeffs
	<del>_</del>
MHAIOJack::io_jack_t, 552	mha_filter.cpp, 977
delaysum, 78	diff_t
delaysum.cpp, 948	MHAFilter::diff_t, 499
delaysum::delaysum_if_t, 266	digits
delay, 268	mha_error_helpers, 83
delaysum_if_t, 268	dimension
patchbay, 268	MHASignal::matrix_t, 761
prepare, 268	dimensions
process, 268	acmon::acmon_t, 151
release, 268	dimstr
update_cfg, 268	acmon::ac_monitor_t, 148
weights, 268	dir
delaysum::delaysum_t, 269	mha_channel_info_t, 409
delaysum_t, 270	dir_t
out, 270	MHAJack::port_t, 575
process, 270	dir_type
weights, 270	MHAJack::port_t, 577
delaysum_if_t	discard
delaysum::delaysum_if_t, 268	MHASignal::ringbuffer_t, 771
delaysum_t	disconnect
delaysum::delaysum_t, 270	MHAEvents::emitter_t, 487
delete_plug	dispmode
altplugs_t, 208	acmon::acmon_t, 151
delta pitch	dist
timo_params, 915	plingploing::plingploing_t, 845
timoSmooth, 921	dist1
descriptor	plingploing::plingploing_t, 845
mha_audio_t, 408	distance
desired fill count	mha_direction_t, 417
mha_drifter_fifo_t, 421	distances
dev in	adm_if_t, 189
io_alsa_t, 344	dl_diff
dev out	dc::wb_inhib_cfg_t, 253
io alsa t, 344	dl_map_max
device	dc::wb inhib cfg t, 253
alsa_dev_par_parser_t, 201	dc::wideband_inhib_vars_t, 254
device_index	dl_map_min
	_ · _
MHAIOPortAudio::io_portaudio_t, 562	dc::wb_inhib_cfg_t, 253
device_index_updated	dc::wideband_inhib_vars_t, 254
MHAIOPortAudio::io_portaudio_t, 561	dm
device_info	lpc_burglattice_config, 385
MHAIOPortAudio::io_portaudio_t, 562	do_clipping
device_info_t	calibrator_variables_t, 226
MHAIOPortAudio::device_info_t, 559	do_get_var
device_name	testplugin::ac_parser_t, 906
MHAIOPortAudio::io_portaudio_t, 562	do_insert_var

testplugin::ac_parser_t, 906	$\sim$ doasvm_feature_extraction_config, 278
doagcc	doagcc, 278
doasvm_feature_extraction_config, 278	doasvm_feature_extraction_config, 278
doasvm	fft, 278
doasvm_classification_config, 274	fftlen, 278
doasvm_classification, 271	G, 278
~doasvm_classification, 272	G_length, 278
angles, 273	GCC end, 278
b, 273	GCC_start, 278
doasvm_classification, 272	hifftwin, 278
max_p_ind_name, 273	hifftwin_sum, 278
p_name, 273	hwin, 278
patchbay, 273	ifft, 278
prepare, 272	in_spec, 278
process, 272	proc_wave, 278
release, 272	process, 278
update_cfg, 273	vGCC_ac, 278
vGCC_name, 273	vGCC, 278
w, 273	wndlen, 278
x, 273	doc_appendix.h, 950
y, 273	doc_examples.h, 950
doasym_classification.cpp, 948	doc_frameworks.h, 950
INSERT_PATCH, 949	doc_general.h, 950
PATCH_VAR, 949	doc_kernel.h, 950
<del>_</del>	
doasym_classification.h, 949	doc_matlab.h, 950
doasym_classification_config, 273	doc_mhamain.h, 950
~doasvm_classification_config, 274	doc_parser.h, 950
ac, 274	doc_plugif.cpp, 950
c, 274	doc_plugins.h, 950
doasym, 274	doc_system.h, 950
doasym_classification_config, 274	doc_toolbox.h, 950
p, 274	documentation
p_max, 274	plugindescription_t, 850
process, 274	domain
doasvm_feature_extraction, 275	MHAParser::mhaconfig_mon_t, 656
~doasvm_feature_extraction, 276	MHAPlugin_Split::splitted_part_t, 730
doasvm_feature_extraction, 276	mhaconfig_t, 481
fftlen, 277	testplugin::config_parser_t, 908
max_lag, 277	domain_handler_t
nupsample, 277	MHAPlugin_Split::domain_handler_t, 713
patchbay, 277	double_t
prepare, 276	MHA_AC::double_t, 398
process, 276	doublebuffer_t
release, 276	MHASignal::doublebuffer_t, 745
update_cfg, 277	down
vGCC_name, 277	MHASignal::schroeder_t, 774
doasvm_feature_extraction.cpp, 949	downsample.cpp, 950
INSERT_PATCH, 949	downsampling_factor
PATCH_VAR, 949	MHAFilter::polyphase_resampling_t, 539
doasvm_feature_extraction.h, 949	downscale
doasvm_feature_extraction_config, 277	MHASignal::quantizer_t, 768

dphi	dump_mha
hilbert_shifter_t, 338	fw_t, 330
drain	dup
DynComp::dc_afterburn_vars_t, 290	MHAFilter::thirdoctave_analyzer_t, 545
drain_inv	dupvec
DynComp::dc_afterburn_rt_t, 286	Vector and matrix processing toolbox, 4
drand	dupvec_chk
plingploing, 120	Vector and matrix processing toolbox, 42
dropouts	dur_
droptect_t, 281	plingploing::plingploing_t, 844
droptect.cpp, 950	DynComp, 79
droptect_t, 279	interp1, 79
blocks, 281	interp2, 80
consecutive_dropouts, 281	DynComp::dc_afterburn_rt_t, 284
current_powspec, 281	burn, 285
dropouts, 281	conflux, 286
droptect_t, 280	dc_afterburn_rt_t, 285
filter_activated, 281	drain_inv, 286
filtered_powspec, 281	lp, 286
filtered powspec mon, 281	maxgain, 286
level_mon, 281	mpo inv, 286
period, 281	DynComp::dc_afterburn_t, 286
prepare, 280	_cf, 288
process, 280	_ channels, 288
release, 280	srate, 288
reset, 281	burn, 287
tau, <mark>281</mark>	commit_pending, 288
threshold, 281	dc_afterburn_t, 287
ds_t, 282	fb pars configured, 288
antialias, 283	patchbay, 288
ds_t, 282	set_fb_pars, 287
prepare, 283	unset_fb_pars, 287
process, 283	update, 288
ratio, 283	update burner, 287
release, 283	DynComp::dc afterburn vars t, 288
dt	bypass, 290
mha_audio_descriptor_t, 407	commit, 290
dtime	conflux, 290
MHA TCP, 85	dc_afterburn_vars_t, 290
dummy_interface_test	drain, 290
MHAIOFile.cpp, 1016, 1017	f, 290
MHAIOJack.cpp, 1019, 1020	maxgain, 290
MHAIOJackdb.cpp, 1021, 1022	mpo, 290
MHAIOParser.cpp, 1024, 1025	taugain, 290
MHAIOPortAudio.cpp, 1027, 1028	DynComp::gaintable_t, 290
MHAIOTCP.cpp, 1030, 1031	~gaintable_t, 293
MHAIOalsa.cpp, 1013, 1014	data, 295
dummy_jack_proc_cb	gaintable_t, 292
mhajack.cpp, 1032	get_gain, 293, 294
dummy_threads_t	get_iofun, 294
MHAPlugin_Split::dummy_threads_t, 717	get_vF, 294
÷ = ·	<del>-</del> -

get_vL, 294	nlms_wave.cpp, 1038
nbands, 294	ESTIM_PREV
nchannels, 294	nlms_wave.cpp, 1038
num_channels, 294	ESTIMATION_TYPES
num_F, 294	nlms_wave.cpp, 1038
num_L, 294	ear t
update, 293	AuditoryProfile::parser_t::ear_t, 216
vFlog, 295	edge_frequencies
vF, 295	dc::dc_vars_t, 251
vL, 294	dc_simple::dc_if_t, 257
dynamiclib_t, 283	ef
$\sim$ dynamiclib_t, 284	MHAOvlFilter::fftfb_vars_t, 596
dynamiclib_t, 284	ef2bands
fullname, 284	MHAOvlFilter::fspacing_t, 601
getmodulename, 284	ef h
getname, 284	MHAOvlFilter::band_descriptor_t, 588
h, 284	ef_l
modulename, 284	MHAOvlFilter::band_descriptor_t, 588
resolve, 284	ef name
resolve_checked, 284	dc::dc_vars_t, 251
	efv
EPSILON	MHAOvIFilter::fftfb_ac_info_t, 590
lpc_bl_predictor.h, 959	multibandcompressor::fftfb_plug_t, 82
lpc_burg-lattice.h, 959	element_gain_name
timoconfig.cpp, 1049	combc_if_t, 236
EPrew	element_gain_name_
prediction_error_config, 867	combc_t, 237
ERR_IHANDLE	elevation
MHAIOFile.cpp, 1015	mha_direction_t, 416
MHAIOJack.cpp, 1018	emit_event
MHAIOJackdb.cpp, 1021	MHAEvents::connector_base_t, 483
MHAIOParser.cpp, 1024	MHAEvents::connector_t, 485
MHAIOPortAudio.cpp, 1027	<del></del>
MHAIOTCP.cpp, 1030	emitter
MHAIOalsa.cpp, 1013	MHAEvents::connector_t, 486
ERR_SUCCESS	emitter_die
MHAIOFile.cpp, 1015	MHAEvents::connector_base_t, 483
MHAIOJack.cpp, 1018	emitter_is_alive
MHAIOJackdb.cpp, 1021	MHAEvents::connector_base_t, 483
MHAIOParser.cpp, 1024	empty_string
MHAIOPortAudio.cpp, 1027	MHAParser::keyword_list_t, 644
MHAIOTCP.cpp, 1030	end_time
MHAIOalsa.cpp, 1013	MHA_TCP::Timeout_Event, 467
ERR_USER	entries
MHAIOFile.cpp, 1016	MHAParser::keyword_list_t, 644
MHAIOJack.cpp, 1018	MHAParser::parser_t, 667
MHAIOJackdb.cpp, 1021	entry
MHAIOParser.cpp, 1024	MHAParser::entry_t, 631
MHAIOPortAudio.cpp, 1027	entry_map_t
MHAIOTCP.cpp, 1030	MHAParser, 103
MHAIOalsa.cpp, 1013	entry_t
ESTIM_CUR	MHAParser::entry_t, 631

envelope_delay	MHAEvents::connector_t, 486
MHAFilter::gamma_flt_t, 514	Events
envreplace	MHA_TCP::Event_Watcher, 455
MHAParser, 104	events
eof	MHA_TCP::Event_Watcher, 455
MHA_TCP::Connection, 450	example1.cpp, 951
epsilon	example1_t, 295
smoothgains_bridge::overlapadd_if_←	example1_t, 296
t, 889	prepare, 296
equal_dim	process, 297
Vector and matrix processing toolbox, 42,	release, 296
43	example2.cpp, 951
equidist2bands	example2_t, 297
MHAOvlFilter::fspacing_t, 601	example2_t, 299
erb_hz_f_hz	factor, 300
speechnoise.cpp, 1045	prepare, 299
err_in	process, 299
MHAFilter::adapt_filter_param_t, 490	release, 299
MHAFilter::adapt_filter_t, 493	scale ch, 300
error	example3.cpp, 951
MHA TCP::Thread, 466	example3_t, 300
mha_fifo_lw_t, 428	example3_t, 302
Error handling in the openMHA, 27	factor, 303
MHA_ErrorMsg, 27	
<del>_</del>	on_prereadaccess, 302
MHA_assert, 28	on_scale_ch_readaccess, 302
MHA_assert_equal, 28	on_scale_ch_valuechanged, 302
mha_debug, 28	on_scale_ch_writeaccess, 302
errorlog	patchbay, 303
fw_t, 330	prepare, 302
estimateDebug	prepared, 303
noisePowProposedScale::noisePow↔	process, 303
Proposed, 833	release, 303
estimtype	scale_ch, 303
nlms_t, 827	example4.cpp, 951
event_add_plug	example4_t, 304
altplugs_t, 207	example4_t, 305
event_delete_plug	factor, 307
altplugs_t, 207	on_prereadaccess, 306
event_select_plug	on_scale_ch_readaccess, 306
altplugs_t, 207	on_scale_ch_valuechanged, 306
event_set_plugs	on_scale_ch_writeaccess, 306
altplugs_t, 207	patchbay, 307
event_start_recording	prepare, 306
acsave::acsave_t, 159	prepared, 307
event stop and flush	process, 306
acsave::acsave_t, 159	release, 306
eventhandler	scale_ch, 307
MHAEvents::connector_t, 486	example5.cpp, 951
eventhandler_s	declspec, 952
MHAEvents::connector_t, 486	example5_t, 307
<del></del>	• —
eventhandler_suu	channel, 308

example5_t, 308	timoSmooth, 921
process, 308	f0_low
scale, 308	timo_params, 915
example6.cpp, 952	timoSmooth, 921
declspec, 952	F_Uflt
example6_t, 308	prediction_error_config, 866
channel_no, 309	f est
example6_t, 309	lpc_bl_predictor_config, 380
patchbay, 309	f hz
prepare, 309	MHAOvIFilter::fscale_t, 599
process, 309	FINISHED
rmsdb, 309	MHA_TCP::Thread, 464
update_cfg, 309	FMTsz
exec_fw_command	mha_os.h, 983
fw_t, 329	factor
exit on stop	cpuload_t, 241
fw_t, 330	example2 t, 300
exit_request	example3_t, 303
fw_t, 328	example4_t, 307
expansion	plugin interface t, 848
dc_simple::dc_t, 259	fader_if_t, 310
expansion_slope	actgains, 311
dc_simple::dc_vars_t, 262	fader_if_t, 311
expansion_threshold	newgains, 311
dc_simple::dc_t, 259	patchbay, 311
dc_simple::dc_vars_t, 262	prepare, 311
expflt	process, 311
MHAOvlFilter::ShapeFun, 99	tau, 311
expi	update_cfg, 311
Complex arithmetics in the openMHA, 59,	fader_spec.cpp, 952
61	fader_wave, 80
explicit_insert	level_adaptor, 81
dc::dc_t, 248	fader_wave.cpp, 952
export_to	DEBUG, 953
MHASignal::spectrum_t, 779	
MHASignal::waveform_t, 795	fader_wave::fader_wave_if_t, 312
expression_t, 310	fader_wave_if_t, 313
MHAParser::expression_t, 632	gain, 313
extern_connector	patchbay, 313
MHAParser::commit_t, 627	prepared 313
_	prepared, 313
F	process, 313
prediction_error_config, 866	ramplen, 313
rt_nlms_t, 874	release, 313
f	set_level, 313
AuditoryProfile::parser_t::fmap_t, 217	fader_wave::level_adapt_t, 314
DynComp::dc_afterburn_vars_t, 290	can_update, 315
io_tcp_sound_t::float_union, 369	get_level, 315
MHAOvlFilter::fftfb_vars_t, 596	ilen, 315
MHAOvlFilter::fscale_t, 599	I_new, 315
f0_high	I_old, 315
timo_params, 915	level_adapt_t, 314

	pos, 315	MHAFilter::partitioned_convolution_t, 534
	update_frame, 315	MHAFilter::smoothspec_t, 544
	wnd, 315	overlapadd::overlapadd_t, 837
fade	er_wave_if_t	fft_t
	fader_wave::fader_wave_if_t, 313	MHASignal::fft t, 748
fail	on_async_jackerr	fftfb ac info t
	MHAIOJackdb::io_jack_t, 557	MHAOvlFilter::fftfb_ac_info_t, 590
fail	on_async_jackerror	fftfb_interface_t
_	MHAIOJackdb::io_jack_t, 556	fftfilterbank::fftfb_interface_t, 320
	MHAJack::client_t, 574	fftfb_plug_t
fail	on nonmonotonic	fftfilterbank::fftfb_plug_t, 323
_	MHAOvIFilter::fftfb_vars_t, 596	multibandcompressor::fftfb_plug_t, 821
fail	on_nonmonotonic_cf	fftfb t
	MHAOvIFilter::fspacing_t, 601	MHAOvlFilter::fftfb_t, 592
fail	on_unique_bins	fftfb_vars_t
	MHAOvlFilter::fftfb_vars_t, 596	MHAOvlFilter::fftfb_vars_t, 595
fail	on_unique_fftbins	fftfbpow, 81
·	MHAOvIFilter::fspacing_t, 601	fftfbpow.cpp, 953
fallh	pack_spec	fftfbpow::fftfbpow_interface_t, 315
	altplugs_t, 208	fftfbpow_interface_t, 316
fallh	pack_wave	name, 317
	altplugs_t, 208	patchbay, 317
Fas	t Fourier Transform functions, 66	prepare, 317
ı uo	mha_fft_backward, 70	process, 317
	mha_fft_backward_scale, 71	update_cfg, 317
	mha_fft_forward, 70	fftfbpow::fftfbpow_t, 318
	mha_fft_forward_scale, 71	fbpow, 319
	mha_fft_free, 67	fftfbpow_t, 319
	mha_fft_new, 67	fftfbpow interface t
	mha_fft_spec2wave, 69	fftfbpow::fftfbpow_interface_t, 316
	mha_fft_spec2wave_scale, 72	fftfbpow t
	mha_fft_t, 67	fftfbpow::fftfbpow_t, 319
	mha_fft_wave2spec, 68	fftfilter t
	mha_fft_wave2spec_scale, 71	MHAFilter::fftfilter t, 500
fata	llog	fftfilterbank, 81
iata	fw_t, 330	fftfilterbank.cpp, 953
fb	,	fftfilterbank::fftfb_interface_t, 320
	MHAFilter::thirdoctave_analyzer_t, 546	algo, 322
fb a	acinfo	fftfb_interface_t, 320
	fftfilterbank::fftfb_plug_t, 323	nbands, 322
fh ı	pars_configured	nchannels, 322
.~	DynComp::dc afterburn t, 288	patchbay, 322
fbpo	•	prepare, 321
	fftfbpow::fftfbpow_t, 319	prepared, 322
fd	maspon in a pontage	process, 321
	MHA_TCP::Connection, 453	release, 321
	MHA_TCP::OS_EVENT_TYPE, 456	return_imag, 322
fft		update_cfg, 321
	doasym_feature_extraction_config, 278	fftfilterbank::fftfb_plug_t, 322
	MHAFilter::fftfilter_t, 503	fb_acinfo, 323
	MHAFilter::fftfilterbank_t, 507	fftfb_plug_t, 323
		pidg_t, 020

497, k_ <i>←</i> 532
k_ <i>←</i>
k_ <i>←</i>
532
532

fmap_t	_resampling_t, 495
AuditoryProfile::parser_t::fmap_t, 217	fragsize_ratio
fmax	MHAIOJackdb::io_jack_t, 557
frequency_translator_t, 325	fragsize validator
fmin	MHAFilter::resampling_filter_t, 541
frequency_translator_t, 325	frame
fname	MHA_AC::acspace2matrix_t, 397
acsave::acsave_t, 159	frame_data
for_each	alsa_t, 204
Vector and matrix processing toolbox, 38	framecnt
force_remove_item	acsave::save_var_t, 163
MHAParser::parser_t, 665	frameno
force_resize	MHA_AC::acspace2matrix_t, 397
<del>-</del>	noisePowProposedScale::noisePow↔
dc_simple, 78 format	•
	Proposed, 833
io_alsa_t, 344	framerate
forward	ac2osc_t, 139
lpc_bl_predictor_config, 380	frames
lpc_burglattice_config, 384	ac2wave_t, 142
MHASignal::fft_t, 748	prediction_error_config, 865
forward_scale	rt_nlms_t, 874
MHASignal::fft_t, 749	frameshift
fr	hilbert_shifter_t, 338
spec_fader_t, 899	framework_thread_priority
frag_out	MHAPlugin_Split::split_t, 726
MHAJack::client_avg_t, 565	framework_thread_scheduler
MHAJack::client_noncont_t, 568	MHAPlugin_Split::split_t, 725
fragsize	freq
alsa_t, 204	plingploing::plingploing_t, 844
analysispath_if_t, 212	freq2bin
calibrator_variables_t, 226	Vector and matrix processing toolbox, 40
db_if_t, 243	frequency
io_file_t, 347	sine_t, 887
io_parser_t, 354	frequency_response
io_tcp_sound_t, 368	MHAFilter::partitioned_convolution_t, 533
MHAFilter::fftfilter_t, 502	frequency translator t, 324
MHAFilter::fftfilterbank_t, 506	df, 325
MHAFilter::partitioned_convolution_t, 532	fmax, 325
MHAFilter::resampling_filter_t, 541	fmin, 325
• • • -	•
MHAIOPortAudio::io_portaudio_t, 562	frequency_translator_t, 325
MHAJack::client_t, 573	irslen, 325
MHAParser::mhaconfig_mon_t, 656	patchbay, 325
MHAPlugin_Resampling::resampling_if←	phasemode, 325
_t, 709	prepare, 325
mhaconfig_t, 481	process, 325
testplugin::config_parser_t, 908	release, 325
fragsize_in	update, 325
MHAFilter::blockprocessing_polyphase←	front_channel
_resampling_t, 495	adm_rtconfig_t, 192
fragsize_out	front_channels
MHAFilter::blockprocessing_polyphase←	adm_if_t, 189

adm_rtconfig_t, 192	fun_t
frozen_noise_	MHAWindow::fun_t, 813
cfg_t, 228	funs
frozennoise_length	MHAOvIFilter::scale_var_t, 608
noise_t, 829	fw_cmd
fs	fw_t, 330
MHAFilter::o1_ar_filter_t, 524	fw_exiting
fs_	fw_t, 328
MHAOvIFilter::fspacing_t, 601	fw_fragsize
fscale	io_alsa_t, 344
MHAOvlFilter::fftfb_vars_t, 595	MHAIOJack::io_jack_t, 552
fscale bw t	fw_running
MHAOvlFilter::fscale_bw_t, 598	fw_t, 328
fscale_t	fw_samplerate
MHAOvlFilter::fscale t, 599	io_alsa_t, 344
fshift_hilbert.cpp, 953	MHAIOJack::io jack t, 552
fspacing_t	fw_sleep
MHAOvlFilter::fspacing_t, 601	fw_t, 330
ft	fw_sleep_cmd
spec2wave_t, 897	fw t, 329
•	<u>_</u> ;
wave2spec_t, 927	fw_starting
ftype  MUA OulFilterrufftfb years t 500	fw_t, 328
MHAOvlFilter::fftfb_vars_t, 596	fw_stopped
fu	fw_t, 328
rt_nlms_t, 875	fw_stopping
fu_previous	fw_t, 328
rt_nlms_t, 875	fw_t, 326
fuflt	~fw_t, 328
rt_nlms_t, 875	ac, 330
fullname	async_poll_msg, 330
dynamiclib_t, 284	async_read, 330
MHAParser::base_t, 616	b_exit_request, 331
plugindescription_t, 850	cfin, 331
fullspec	cfout, 331
hilbert_shifter_t, 338	dump_mha, <mark>330</mark>
fun1	errorlog, 330
plingploing::plingploing_t, 845	exec_fw_command, 329
fun1_key	exit_on_stop, 330
plingploing::if_t, 842	exit_request, 328
plingploing::plingploing_t, 845	fatallog, 330
fun1_range	fw_cmd, 330
plingploing::if_t, 842	fw_exiting, 328
plingploing::plingploing_t, 845	fw_running, 328
fun2	fw_sleep, 330
plingploing::plingploing_t, 845	fw_sleep_cmd, 329
fun2_key	fw_starting, 328
plingploing::if_t, 842	fw_stopped, 328
plingploing::plingploing_t, 845	fw_stopping, 328
fun2_range	fw_t, 328
plingploing::if_t, 842	fw_unprepared, 328
plingploing::plingploing_t, 845	fw_until, 330
pgp.ogpgp.og_t, 0 10	···_antin, 000

fw_until_cmd, 329	dc_simple::dc_vars_t, 261
get_input_signal_dimension, 329	g80
get_parserstate, 330	dc_simple::dc_vars_t, 261
inst_name, 330	G ERRNO
io_error, 331	MHA TCP, 85
io_lib, 331	G_length
io_name, <u>330</u>	doasym_feature_extraction_config, 278
load_io_lib, 329	g_scale
load_proc_lib, 329	dc::wb_inhib_cfg_t, 253
nchannels_out, 330	dc::wideband inhib vars t, 254
parserstate, 330	GCC_end
patchbay, 331	doasym_feature_extraction_config, 278
plugin_paths, 330	GCC start
plugins, 330	doasym_feature_extraction_config, 278
prepare, 328	GITCOMMITHASH
prepare_vars, 330	mha_plugin.hh, 991
proc_error, 331	GLRDebug
proc_error_string, 331	•
proc_lib, 331	noisePowProposedScale::noisePow  Proposed 800
proc_name, 330	Proposed, 833
process, 329	GLRexp
quit, 329	noisePowProposedScale::noisePow  →
release, 329	Proposed, 833
start, 328	timoConfig, 918
started, 329	GLR
state, 331	timoConfig, 918
state_t, 328	GREETING_TEXT
stop, 328	mhamain.cpp, 1035
stopped, 329	gain, 81
fw_unprepared	alsa_t, 204
fw_t, 328	calibrator_runtime_layer_t, 222
fw until	coherence::cohflt_t, 233
fw_t, 330	fader_wave::fader_wave_if_t, 313
fw until cmd	multibandcompressor::plugin_signals_t,
	825
fw_t, 329	gain.cpp, 954
fw_vars_t, 331	gain::gain_if_t, 333
fw_vars_t, 332	bbgain, 334
lock_channels, 332	gain_if_t, 334
lock_srate_fragsize, 332	gains, 334
pfragmentsize, 332	patchbay, 334
pinchannels, 332	prepare, 334
psrate, 332	process, 334
unlock_channels, 332	release, 334
unlock_srate_fragsize, 332	update_bbgain, 334
fwcb	update_gain, 334
io_tcp_t, 372	update_minmax, 334
G	vmax, 334
doasym_feature_extraction_config, 278	vmin, 334
	gain::scaler_t, 335
g coherence::cohflt_t, 232	scaler_t, 335
<del>-</del> ·	<del>-</del> ·
g50	gain_ac

ac2wave_if_t, 141	testplugin::config_parser_t, 908
ac2wave_t, 142	get_A
gain_delay	MHAFilter::gamma_flt_t, 513
coherence::cohflt_t, 233	get_a
gain_if_t	MHAParser::base_t::replace_t, 618
gain::gain_if_t, 334	get_ac
gain_in	latex_doc_t, 373
ac2wave_if_t, 141	plug_t, 846
ac2wave_t, 142	get_accept_event
gain_min	MHA_TCP::Server, 458
timoConfig, 917	get_all_input_ports
gain_min_db	MHAIOJack::io_jack_t, 552
timo_params, 915	MHAIOJackdb::io_jack_t, 556
timoSmooth, 922	get_all_names_from_ac_space
gain_spec_	ac2lsl::ac2lsl_t, 124
cfg_t, 228	get_all_output_ports
gain_wave_	MHAIOJack::io_jack_t, 552
cfg_t, 228	MHAIOJackdb::io_jack_t, 556
gain_wiener	get audiochannels
timoConfig, 918	dc, 77
gain_wiener_AC	get_available_space
timo_AC, 913	mha_drifter_fifo_t, 420
gainrule	mha fifo t, 433
dc::dc_vars_t, 251	get_b
dc_simple::dc_if_t, 257	MHAParser::base_t::replace_t, 618
gains	get_buf_address
gain::gain_if_t, 334	ac2lsl::save_var_base_t, 128
prediction_error, 863	ac2lsl::save_var_t, 131
shadowfilter_end::cfg_t, 882	ac2lsl::save_var_t< mha_complex_t >
spec_fader_t, 899	134
gaintable.cpp, 954	get_bw_hz
convert_f2logf, 954	MHAOvlFilter::fscale_bw_t, 598
isempty, 954	get_c1
gaintable.h, 954	MHAFilter::o1flt_lowpass_t, 526
gaintable_t	get_c_handle
DynComp::gaintable_t, 292	MHAKernel::algo comm class t, 579
gamma_flt_t	get categories
MHAFilter::gamma_flt_t, 512	latex doc t, 373
gamma_post	PluginLoader::mhapluginloader t, 859
timoConfig, 918	get_cdata
gamma_post_AC	MHASignal::matrix_t, 765
timo_AC, 912	get_cf_fftbin
gauss	MHAOvlFilter::fspacing_t, 601
MHAOvlFilter::ShapeFun, 99	get_cf_hz
gcd	MHAFilter::thirdoctave_analyzer_t, 545
MHAFilter, 90	MHAOvlFilter::fspacing_t, 601
generatemhaplugindoc.cpp, 955	get_cfin
conv2latex, 955	MHAParser::mhapluginloader_t, 659
create_latex_doc, 955	get_cfout
main, 955	MHAParser::mhapluginloader_t, 659
get	get_channelconfig
9~1	got_onarmoloomig

	MHAOvlFilter::overlap_save_filterbank_t, 605	get	_fmap AuditoryProfile::parser_t::fmap_t, 217
get	_comm_var	get	_fragsize
	MHASignal::matrix_t, 760		MHAJack::client_t, 571
get	_configfile	get	_frequencies
	PluginLoader::config_file_splitter_t, 852		AuditoryProfile::fmap_t, 213
get	_configname	get	_fun
	PluginLoader::config_file_splitter_t, 851		MHAOvlFilter::scale_var_t, 608
get	_connected	get	_gain
	io_tcp_parser_t, 361		DynComp::gaintable_t, 293, 294
get	_cpu_load	get	_handle
	MHAJack::client_t, 572		plug_t, 846
get	_current_profile	get	_index
	AuditoryProfile::parser_t, 215		MHAParser::keyword_list_t, 643
get	_delay		MHASignal::matrix_t, 764
	mha_dblbuf_t, 413	get	_inner_error
get	_delays_in		mha_dblbuf_t, 413
	MHAIOJack::io_jack_t, 552	get	_inner_size
get	_delays_out		mha_dblbuf_t, 413
	MHAIOJack::io_jack_t, 552	get	_input_channels
get	_des_fill_count		mha_dblbuf_t, 413
	mha_drifter_fifo_t, 420	get	_input_fifo_fill_count
get	_documentation		mha_dblbuf_t, 413
	PluginLoader::mhapluginloader_t, 859	get	_input_fifo_space
get	_ear		mha_dblbuf_t, 413
	AuditoryProfile::parser_t::ear_t, 216	get	_input_signal_dimension
	AuditoryProfile::profile_t, 218		fw_t, 329
get	_ef_hz	get	_interface
	MHAOvlFilter::fspacing_t, 601		MHA_TCP::Server, 458
get	_entries	get	_iofun
	algo_comm_t, 197		DynComp::gaintable_t, 294
	MHAKernel::algo_comm_class_t, 580	get	_irs
	MHAParser::keyword_list_t, 643		MHAFilter::fftfilterbank_t, 506
get	_error	get	_last_name
	algo_comm_t, 197		MHAParser::mhapluginloader_t, 659
	MHAKernel::algo_comm_class_t, 580	get	_last_output
get	_f_hz	~~+	MHAFilter::o1flt_lowpass_t, 526
~~+	MHAOvlFilter::fscale_t, 599	get	_latex_doc
get	_fbpower	~~+	latex_doc_t, 373
act	MHAOvIFilter::fftfb_t, 592	gei	_len_A
gei	_fbpower_db	aat	MHAFilter::filter_t, 510
act	MHAOvlFilter::fftfb_t, 592	gei	_len_B
get		aat	MHAFilter::filter_t, 510
act	MHA_TCP::Connection, 450	gei	_length
gei	_fftlen _MLAOulFiltor::fftfb_t_503	aat	MHASignal::uint_vector_t, 786
act	MHAOvlFilter::fftfb_t, 593	gei	_level
yeı_	_fifo_size _mba_dblbuf_t_413		addsndfile::level_adapt_t, 176
ao+	mha_dblbuf_t, 413	aot	fader_wave::level_adapt_t, 315
yeı_	_fill_count mha_drifter_fifo_t, 420	yet.	_level_in_db _dc::dc_t, 248
	mha_fifo_t, 433	act	_level_in_db_adjusted
	11111a_1110_t, 400	yel.	_ievei_iii_ub_aujusteu

	dc::dc_t, 248	fw_t, 330
get	libname	get_paths
_	PluginLoader::config_file_splitter_t, 852	pluginbrowser_t, 849
get	_local_address	get_peer_address
-	io_tcp_parser_t, 360	MHA_TCP::Connection, 450
aet	_local_port	get_peer_port
J -	io_tcp_parser_t, 360	MHA_TCP::Connection, 450
aet	longmsg	get_physical_input_ports
9	MHA_Error, 424	MHAIOJack::io_jack_t, 552
aet	_tass_gain_db	MHAIOJackdb::io_jack_t, 556
9	MHAOvIFilter::fftfb_t, 593	get_physical_output_ports
aet	_main_category	MHAIOJack::io_jack_t, 552
901_	latex_doc_t, 373	MHAIOJackdb::io_jack_t, 556
aet	_mapping	get_plugins
901_	MHASignal::loop_wavefragment_t, 755	pluginbrowser t, 849
aet	_max_fill_count	get_port
got	mha_fifo_t, 433	MHA_TCP::Server, 458
aet	_min_fill_count	get_port_capture_latency
got	mha_drifter_fifo_t, 421	MHAJack, 92
aet	_msg	get_port_capture_latency_int
got	MHA_Error, 424	MHAJack, 93
net	_my_input_ports	get_port_playback_latency
gci_	MHAJack::client_t, 572	MHAJack, 93
net	_my_output_ports	get_port_playback_latency_int
gei	MHAJack::client_t, 572	MHAJack, 93
net	_name	get_ports
gei	MHAOvlFilter::scale_var_t, 608	MHAJack::client_t, 572
net	_nbands	get_precision
gei	dc::dc_t, 248	MHAParser, 103
aot	nelements	
gei_		get_process_spec plug_t, 846
aot	nreals	
gei_	_meas MHASignal::matrix_t, 764	get_process_wave
act	_	plug_t, 846
gei_	_origname	get_rdata MHASignal::matrix + 765
aat	PluginLoader::config_file_splitter_t, 852 os_event	MHASignal::matrix_t, 765 get_read_event
gei_	MHA_TCP::Timeout_Event, 467	MHA_TCP::Connection, 450
	MHA_TCP::Wakeup_Event, 470	get resynthesis gain
aat	outer_size	MHAFilter::gamma_flt_t, 513
gei_	_outer_size mha dblbuf t, 413	
aat	;	get_server_port_open
gei_	_output_channels mha dblbuf t, 413	io_tcp_parser_t, 361
aat	;	get_short_name
gei_	_output_fifo_fill_count	MHAJack::port_t, 577
aat	mha_dblbuf_t, 413	get_signal  MHAPlugin Split::domain handlor t 715
gei_	_output_fifo_space	MHAPlugin_Split::domain_handler_t, 715
~~+	mha_dblbuf_t, 413	get_size MHASignal::wayveform t 707
get	_parser_tab	MHASignal::waveform_t, 797
~~+	latex_doc_t, 373	get_srate
get	_parser_var	MHAJack::client_t, 572
0: C 1	latex_doc_t, 373	get_type
get_	_parserstate	MHAParser::window_t, 696

get_value	getname
MHAParser::keyword_list_t, 643	dynamiclib_t, 284
get_values	MHA_AC::ac2matrix_t, 393
AuditoryProfile::fmap_t, 213	getusername
get_var	MHA_AC::ac2matrix_t, 394
algo_comm_t, 196	getvar
MHAKernel::algo_comm_class_t, 580	acmon::ac_monitor_t, 148
testplugin::ac_parser_t, 906	MHA_AC::ac2matrix_helper_t, 391
get_var_float	GF
algo_comm_t, 196	MHAFilter::gamma_flt_t, 513
Communication between algorithms, 25	groupdelay_t
MHAKernel::algo_comm_class_t, 580	MHASignal::schroeder_t, 773
get_var_int	gt
algo_comm_t, 196	dc::dc_t, 248
Communication between algorithms, 25	gtdata
MHAKernel::algo_comm_class_t, 580	dc::dc_vars_t, 250
get_var_spectrum	gtmin
Communication between algorithms, 24	dc::dc_vars_t, 250
get_var_vfloat	gtstep
Communication between algorithms, 26	dc::dc_vars_t, 250
get_var_waveform	
Communication between algorithms, 25	h
get_vF	dynamiclib_t, 284
DynComp::gaintable_t, 294	MHASignal::hilbert_t, 752
get_vL	H_ERRNO
DynComp::gaintable_t, 294	MHA_TCP, 85
get_weights	HELP_TEXT
MHAFilter::complex_bandpass_t, 497	mhamain.cpp, 1035
MHAFilter::gamma_flt_t, 513	HINSTANCE
get window	mha_plugin.hh, 991
MHAParser::window_t, 695, 696	HSTRERROR
get_window_data	MHA_TCP, 85
windowselector_t, 933	HTL
get_write_event	AuditoryProfile::parser_t::ear_t, 216
MHA TCP::Connection, 450	AuditoryProfile::profile_t::ear_t, 219
get_xlimits	hamming
MHATableLookup::xy_table_t, 808	MHAWindow, 119
get xruns	hamming_t
MHAJack::client_t, 572	MHAWindow::hamming_t, 815
get_xruns_reset	handle
MHAJack::client t, 572	algo_comm_t, 193
getcipd	hann
coherence, 77	hann.cpp, 956
	hann.h, 956
getdata MHASignal: uint vootor t 786	MHAOvlFilter::ShapeFun, 99
MHASignal::uint_vector_t, 786	hann.cpp, 955
getfullname	hann, 956
PluginLoader::mhapluginloader_t, 858	hannf, 956
getmodulename	PI, 956
dynamiclib_t, 284	hann.h, 956
Getmsg	hann, 956
mha_error.hh, 973	hannf, 956

hann1	fullspec, 338
plingploing::plingploing_t, 845	hilbert_shifter_t, 338
hann2	kmax, 338
plingploing::plingploing_t, 845	kmin, 338
hannf	mhafft, 338
hann.cpp, 956	mixw_ref, 338
hann.h, 956	mixw_shift, 338
hanning	phi, 338
MHAWindow, 119	plan_spec2analytic, 338
hanning_ramps_t, 335	process, 338
$\sim$ hanning_ramps_t, 336	shifted, 338
hanning_ramps_t, 336	hilbert_t
len_a, 336	MHASignal::hilbert_t, 752
len_b, 336	host
operator(), 336	ac2osc_t, 138
ramp_a, 336	host_port_to_sock_addr
ramp_b, 336	mha_tcp.cpp, 1008
hanning_t	hostApi
MHAWindow::hanning_t, 816	MHAIOPortAudio::device_info_t, 559
hardlimit	Hs
softclipper_t, 893	MHAFilter::fftfilterbank_t, 506
softclipper_variables_t, 895	hton
has_been_modified	io_tcp_sound_t, 368
dc_simple::dc_if_t, 257	hw NALIA File wiftfile who are a 4 FOC
has_inner_error	MHAFilter::fftfilterbank_t, 506
analysepath_t, 210	hwin
has_key	doasvm_feature_extraction_config, 278 hz2bark
MHAKernel::comm_var_map_t, 581	
has_parser	MHAOvlFilter::FreqScaleFun, 97
PluginLoader::mhapluginloader_t, 858	hz2bark_analytic MHAOvlFilter::FreqScaleFun, 97
has_process	hz2bark t
PluginLoader::mhapluginloader_t, 858	MHAOvlFilter::barkscale::hz2bark_t, 590
header	hz2erb
io_tcp_sound_t, 366	MHAOvlFilter::FreqScaleFun, 97
help	hz2erb glasberg1990
MHAParser::base_t, 617	MHAOvlFilter::FreqScaleFun, 97
hifftwin	hz2hz
doasvm_feature_extraction_config, 278	MHAOvIFilter::FreqScaleFun, 96
hifftwin_sum	speechnoise.cpp, 1045
doasvm_feature_extraction_config, 278	hz2khz
high_side_flat	MHAOvIFilter::FreqScaleFun, 97
MHAOvlFilter::band_descriptor_t, 588	hz2log
hilbert	MHAOvIFilter::FreqScaleFun, 97
MHASignal::hilbert_fftw_t, 751	hz2octave
hilbert_fftw_t	MHAOvIFilter::FreqScaleFun, 97
MHASignal::hilbert_fftw_t, 751	hz2third_octave
hilbert_shifter_t, 337	MHAOvIFilter::FreqScaleFun, 97
$\sim$ hilbert_shifter_t, 338	hz2unit
analytic, 338	MHAOvIFilter::scale_var_t, 608
dphi, 338	
frameshift, 338	İ

io_tcp_sound_t::float_union, 369	MHAIOJackdb.cpp, 1021, 1022
INSERT_PATCH	MHAIOParser.cpp, 1024
acConcat_wave.cpp, 936	MHAIOPortAudio.cpp, 1027
acPooling_wave.cpp, 937	MHAIOTCP.cpp, 1030, 1031
acSteer.cpp, 938	MHAIOalsa.cpp, 1013, 1014
acTransform_wave.cpp, 939	IOPrepare cb
doasvm_classification.cpp, 949	io_lib_t, 351
doasym_feature_extraction.cpp, 949	IOPrepare t
Ipc.cpp, 958	mha_io_ifc.h, 980
lpc_bl_predictor.cpp, 958	IOProcessEvent inner
lpc_burg-lattice.cpp, 959	MHAIOJackdb::io_jack_t, 556
prediction_error.cpp, 1040	IOProcessEvent t
steerbf.cpp, 1048	mha_io_ifc.h, 980
timoSmooth.cpp, 1050	IORelease
INSERT_VAR	MHAIOFile.cpp, 1016, 1017
timoSmooth.cpp, 1050	MHAIOJack.cpp, 1019
INVALID_SOCKET	MHAIOJackdb.cpp, 1021, 1022
mha_tcp.cpp, 1008	MHAIOParser.cpp, 1024, 1025
INVALID_THREAD_PRIORITY	MHAIOPortAudio.cpp, 1027, 1028
MHAPlugin_Split, 110	MHAIOT Off Addio.cpp, 1027, 1020 MHAIOTCP.cpp, 1030, 1031
IO ERROR JACK	MHAIOalsa.cpp, 1030, 1031
mhajack.h, 1034	• • •
	IORelease_cb
IO_ERROR_MHAJACKLIB	io_lib_t, 351
mhajack.h, 1034	IORelease_t
IODestroy	mha_io_ifc.h, 980
MHAIOFile.cpp, 1016, 1017	IOSetVar
MHAIOJack.cpp, 1019, 1020	MHAIOFile.cpp, 1016, 1017
MHAIOJackdb.cpp, 1021, 1022	MHAIOJack.cpp, 1019
MHAIOParser.cpp, 1024, 1025	MHAIOJackdb.cpp, 1021, 1022
MHAIOPortAudio.cpp, 1027, 1028	MHAIOParser.cpp, 1024, 1025
MHAIOTCP.cpp, 1030, 1031	MHAIOPortAudio.cpp, 1027, 1028
MHAIOalsa.cpp, 1013, 1014	MHAIOTCP.cpp, 1030, 1031
IODestroy_cb	MHAIOalsa.cpp, 1013, 1014
io_lib_t, 351	IOSetVar_cb
IODestroy_t	io_lib_t, 351
mha_io_ifc.h, 980	IOSetVar_t
IOInit	mha_io_ifc.h, 980
MHAIOFile.cpp, 1016	IOStart
MHAIOJack.cpp, 1018, 1019	MHAIOFile.cpp, 1016
MHAIOJackdb.cpp, 1021, 1022	MHAIOJack.cpp, 1019
MHAIOParser.cpp, 1024	MHAIOJackdb.cpp, 1021, 1022
MHAIOPortAudio.cpp, 1027	MHAIOParser.cpp, 1024
MHAIOTCP.cpp, 1030, 1031	MHAIOPortAudio.cpp, 1027, 1028
MHAIOalsa.cpp, 1013	MHAIOTCP.cpp, 1030, 1031
IOInit_cb	MHAIOalsa.cpp, 1013, 1014
io_lib_t, 351	IOStart_cb
IOInit_t	io_lib_t, 351
mha_io_ifc.h, 980	IOStart_t
IOPrepare	mha_io_ifc.h, 980
MHAIOFile.cpp, 1016	IOStartedEvent_t
MHAIOJack.cpp, 1019	mha_io_ifc.h, 980

IOStop	doasvm_feature_extraction_config, 278
MHAIOFile.cpp, 1016	ifftshift
MHAIOJack.cpp, 1019	ifftshift.cpp, 957
MHAIOJackdb.cpp, 1021, 1022	ifftshift.h, 957
MHAIOParser.cpp, 1024, 1025	ifftshift.cpp, 956
MHAIOPortAudio.cpp, 1027, 1028	ifftshift, 957
MHAIOTCP.cpp, 1030, 1031	ifftshift.h, 957
MHAIOalsa.cpp, 1013, 1014	ifftshift, 957
IOStop_cb	ignore
io lib t, 351	MHA_TCP::Event_Watcher, 455
IOStop_t	ignored_by
mha_io_ifc.h, 980	MHA_TCP::Wakeup_Event, 470
IOStoppedEvent	iir_filter_state_t
MHAJack::client_avg_t, 565	MHAFilter::iir_filter_state_t, 515
MHAJack::client_noncont_t, 567	iir_filter_t
IOStoppedEvent_t	MHAFilter::iir_filter_t, 516
mha io ifc.h, 980	iir_ord1_real_t
IOStrError	MHAFilter::iir_ord1_real_t, 519
MHAIOFile.cpp, 1016, 1017	iirfilter.cpp, 957
MHAIOJack.cpp, 1019, 1020	iirfilter_t, 340
MHAIOJackdb.cpp, 1021, 1022	iirfilter_t, 341
MHAIOParser.cpp, 1024, 1025	prepare_, 341
MHAIOPortAudio.cpp, 1027, 1028	process, 341
MHAIOTCP.cpp, 1030, 1031	release_, 341
MHAIOalsa.cpp, 1013, 1014	ilen
IOStrError_cb	addsndfile::level_adapt_t, 176
io_lib_t, 351	fader_wave::level_adapt_t, 315
IOStrError t	im
mha io ifc.h, 980	mha_complex_t, 410
id	imag
mha channel info t, 409	acsave::mat4head_t, 161
id_str	fftfilterbank::fftfb_plug_t, 323
MHAParser::base_t, 617	MHASignal::matrix_t, 762-764
id_string	imagfb
MHAParser::parser t, 667	MHAOvlFilter::overlap save filterbank ←
identity	analytic_t, 603
MHASignal::schroeder_t, 775	impulse response
identity.cpp, 956	MHAFilter::polyphase_resampling_t, 539
identity t, 339	MHAFilter::transfer_function_t, 548
identity_t, 339	in_buf
prepare, 340	wave2spec_t, 928
process, 339, 340	in_cfg
release, 340	timo_params, 915
idstr	in_spec
mha_channel_info_t, 409	doasym_feature_extraction_config, 278
if_t	shadowfilter_end::cfg_t, 882
plingploing::if_t, 841	in_spec_copy
testplugin::if_t, 910	shadowfilter_begin::cfg_t, 879
iface	inbuf
MHA_TCP::Server, 459	MHA_TCP::Connection, 453
ifft	inch

increase_condition mha_filo_posix_threads_t, 430 increment mha_filo_posix_threads_t, 429 mha_filo_thread_platform_t, 437 index MHAParser::keyword_list_t, 644 index_t MHAFilter::partitioned_convolution_t= ::index_t, 534, 535 info ac2lsl::save_var_t, 131 ac2lsl::save_var_t, 132 ac2lsl::save_var_t, 134 inhib_gain dc::dc_t, 249 lnit_mha_ruby mha_ruby.cpp, 993 init_peer_data MHA_TCP::Connection, 449 initialize MHA_TCP::Server, 458 inner/zouter_resampling:resampling_t,	MHAJack::client_t, 574	MHAPlugin_Resampling::resampling_t,
mha_fifo_posix_threads_t, 430 increment mha_fifo_posix_threads_t, 429 mha_fifo_posix_threads_t, 420 mha_fifo_posix_threads_t, 429 mha_fifo_posix_threads_t, 429 mha_fifo_posix_threads_t, 429 mha_fifo_posix_threads_t, 429 mha_fifo_posix_threads_t, 429 mha_fild_pus_nesampling_t, 711 input_tof mha_dblouf_t, 415 input_domain Plugin_Doader::mhapluginloader_t, 858 input_fier::partitioned_convolution_t, 532 input_signal_parser_t, 911 input_tof	<del></del> ·	
increment mha_fifo_posix_threads_t, 429 mha_fifo_thread_platform_t, 437 index MHAParser::keyword_list_t, 644 index_t MHAFilter::partitioned_convolution_te- :iindex_t, 534, 535 info ac2lsh::save_var_t, 131 ac2lsh::save_var_t = mha_complex_t 134 inhib_gain dc::dc_t, 249 init_mha_ruby mha_ruby.cpp, 993 init_peer_data MHA_TCP::Server, 458 inner2outer_resampling MHAPlugin_Resampling::resampling_t, 711 inner_ac_copy analysepath_t, 210 inner_out MHASignal::doublebuffer_t, 747 inner_input analysepath_t, 210 inner_out_domain analysepath_t, 210 inner_orcess db_t, 244 MHASignal::doublebuffer_t, 747 inner_input analysepath_t, 210 inner_orcess db_t, 244 MHASignal::doublebuffer_t, 746 inner_process db_t, 244 MHASignal::doublebuffer_t, 746 inner_process db_t, 244 MHASignal::doublebuffer_t, 746 inner_process_wave2spec analysepath_t, 210 inner_process_wave2spec analysepath_t, 210 inner_process_wave2spec analysepath_t, 210 inner_process_wave2spec analysepath_t, 210 inner_process_wave2wave analysepath_t, 210 inner_process_de_t, therefore the time_t index_t in the time_t	<del>_</del>	
mha_fifo_posix_threads_t, 429 mha_fifo_thread_platform_t, 437 index  MHAParser::keyword_list_t, 644 index_t  MHAPliter::partitioned_convolution_t- ::index_t, 534, 535 info  ac2lst::save_var_base_t, 129 ac2lst::save_var_t, 131 ac2lst::save_var_t, 131 ac2lst::save_var_t, 131 ac2lst::save_var_t = mha_complex_t 1334 inhib_gain dc::dc_t, 249 init_mha_ruby mha_ruby.cpp, 993 init_peer_data MHA_TCP::Connection, 449 initialize MHA_TCP::Server, 458 inner2outer_resampling MHAPlugin_Resampling::resampling_t, 711 inner_ac_copy analysepath_t, 210 inner_error analysepath_t, 210 mha_dblbuf_t, 416 inner_fragsize MHAPlugin_Resampling::resampling_t, 711 inner_in MHASignal::doublebuffer_t, 747 inner_input analysepath_t, 210 inner_out_domain analysepath_t, 210 inner_out_domain analysepath_t, 210 inner_process db_t, 244 MHASignal::doublebuffer_t, 746 inner_process wave2spec analysepath_t, 210 inner_process db_t, 244 MHASignal::doublebuffer_t, 746 inner_process_wave2spec analysepath_t, 210 inner_process_wave2veave analysepath_t, 210 inner_process_wave2veave analysepath_t, 210 inner_process_wave2veave analysepath_t, 210 inner_srate MHAPlugin_Resampling::resampling_t, ioput_obj. MHAPlugin_Resampling::resampling_t, input_obj. MHAPlugin_Resampling::rosampling_t, input_obj. MHAPlugin:plugin_t, 706 input_domain Plugin_loader::mhapluginloader_t, 858 input_file input_loader::mhapluginloader_t, 858 input_file input_loader::mhapluginloader_t, 551 input_signal_spec MHAPlugin_Resampling::rosampling_t, input_domain Plugin_loader::mhapluginloader_t, 858 input_file input_domain Plugin_loader::mhapluginloader_t, 858 input_file input_domain Plugin_loader::mhapluginloader_t, 858 input_file input_evel dc::dc_vars_t, 251 input_signal_parser_t, 911 input_opronams MHAPidrint:input_opronams MHAPidrint:input_opronams MHAPidrint:input_opronams MHAPidrint:input_opronams MHAPidrint:input_opr		<del>_</del>
mha_fifo_thread_platform_t, 437 index  MHAParser::keyword_list_t, 644 index_t MHAFilter::partitioned_convolution_ti- :iindex_t, 534, 535 info ac2lsl::save_var_base_t, 129 ac2lsl::save_var_t < mha_complex_t 134 inhib_gain dc::dc_t, 249 init_mha_ruby mha_ruby.cpp, 993 init_peer_data MHA_TCP::Connection, 449 initialize MHAPlugin_Resampling::resampling_t, 711 inner_ac_copy analysepath_t, 210 mha_dblbuf_t, 416 inner_error analysepath_t, 210 mha_dblbuf_t, 416 inner_input analysepath_t, 210 inner_out_domain analysepath_t, 210 inner_process db_t, 244 MHASignal::doublebuffer_t, 747 inner_out_domain analysepath_t, 210 inner_process db_t, 244 MHASignal::doublebuffer_t, 747 inner_process db_t, 244 MHASignal::doublebuffer_t, 746 inner_process_wave2spec analysepath_t, 210 inner_process_wave2spec analysepath_t, 210 inner_process_wave2spec analysepath_t, 210 inner_process_wave2wave analysepath_t, 210 invl_protemates adm_it_t, 189 inht_APlugin:plugin_t, 707 inha_Ablbuf_t, 415 input_bomain input_iomain input_domain input_signal_pacer:mhapluginloader_t, 858 input_efg MHAPlugin:plugin_t, 707 input_ofmain input_iomain input_wicality input_domain		
index  index_t  index_t  index_t  MHAParser::keyword_list_t, 644 index_t  MHAFilter::partitioned_convolution_t→ ::index_t, 534, 535 info  ac2lsl::save_var_base_t, 129 ac2lsl::save_var_t< mha_complex_t  134 inhib_gain dc::dc_t, 249 Init_mha_ruby mha_ruby.cpp, 993 init_peer_data MHA_TCP::Connection, 449 initialize MHA_TCP::Server, 458 inner2outer_resampling MHAPlugin_Resampling::resampling_t, 711 inner_ac_copy analysepath_t, 210 inner_error analysepath_t, 210 mha_dblbuf_t, 416 inner_inm MHASignal::doublebuffer_t, 747 inner_input analysepath_t, 210 inner_out_domain analysepath_t, 210 inner_out_domain analysepath_t, 210 inner_process db_t, 244 MHASignal::doublebuffer_t, 747 inner_out_domain analysepath_t, 210 inner_process_wave2spec analysepath_t, 210 inner_process_wave2wave analysepath_t, 2	— — — — ·	<del>_</del>
MHAParser::keyword_list_t, 644 index_t MHAFilter::partitioned_convolution_t ::index_t, 534, 535 info		
index_t MHAFilter::partitioned_convolution_t→		input
MHAFilter::partitioned_convolution_timed_	• = = ·	•
info  ac2lsl::save_var_base_t, 129 ac2lsl::save_var_t, 131 ac2lsl::save_var_t< mha_complex_t 134 inhib_gain dc::dc_t, 249 init_peer_data MHA_TCP::Connection, 449 initialize MHAPTugin_Resampling::resampling_t, 711 inner_ac_copy analysepath_t, 210 inner_error analysepath_t, 210 inner_input analysepath_t, 210 inner_out MHASignal::doublebuffer_t, 747 inner_out MHASignal::doublebuffer_t, 747 inner_out MHASignal::doublebuffer_t, 746 inner_process db_t, 244 MHASignal::doublebuffer_t, 746 inner_process_wave2spec analysepath_t, 210 inner_process_wave2vave analysepath_t, 210 inner_process_der_inoisePow are varity and bibuf_t, 415 input_cfg MHAPlugin::plugin_t, 707 input_channels adm_if_t, 189 mha_dblbuf_t, 415 input_cfg MHAPlugin::plugin_t, 707 input_channels adm_if_t, 189 mha_dblbuf_t, 415 input_cfg MHAPlugin::plugin_t, 707 input_channels adm_if_t, 189 mha_dblbuf_t, 415 input_proce input_comani PluginLoader:whapaluble adm_	<del>-</del>	
info     ac2lsl::save_var_base_t, 129     ac2lsl::save_var_t< mha_complex_t     134 inhib_gain     dc::dc_t, 249 Init_mha_ruby     mha_ruby.cpp, 993 init_peer_data     MHA_TCP::Connection, 449 initialize     MHA_TCP::Server, 458 inner2outer_resampling     MHAPlugin_Resampling::resampling_t,     711 inner_ac_copy     analysepath_t, 210     mha_dblbuf_t, 416 inner_fragsize     MHASignal::doublebuffer_t, 747 inner_out     MHASignal::doublebuffer_t, 747 inner_out_domain     analysepath_t, 210 inner_process     db_t, 244     MHASignal::doublebuffer_t, 746 inner_process_wave2spec     analysepath_t, 210 inner_process_wave2wave     analysepath_t, 210 input_pcfg      MHAPlugin:plugi	• – – –	
ac2lsl::save_var_t, 131 ac2lsl::save_var_t< mha_complex_t >,	info	mha_dblbuf_t, 414
ac2lsl::save_var_t< mha_complex_t >,	ac2lsl::save_var_base_t, 129	input_cfg
inhib_gain  dc::dc_t, 249  Init_mha_ruby     mha_ruby.cpp, 993  init_peer_data     MHA_TCP::Connection, 449  initialize     MHA_TCP::Server, 458  inner2outer_resampling     MHAPlugin_Resampling::resampling_t, 711  inner_ac_copy     analysepath_t, 210     mha_dblbuf_t, 416  inner_fragsize     MHAPlugin_Resampling::resampling_t, 711  inner_in     MHAPlugin_Resampling::resampling_t, 711  inner_in     MHAPlugin_Resampling::resampling_t, 711  inner_in     MHASignal::doublebuffer_t, 747 inner_out_domain     analysepath_t, 210     mMa_Signal::doublebuffer_t, 747 inner_out_domain     analysepath_t, 210     inner_process     db_t, 244     MHASignal::doublebuffer_t, 746 inner_process_wave2spec     analysepath_t, 210 inner_process_wave2vave     analysepath_t, 210 inner_process		MHAPlugin::plugin_t, 706
inhib_gain dc::dc_t, 249  Init_mha_ruby mha_ruby.cpp, 993 init_peer_data MHA_TCP::Connection, 449 inititialize MHA_TCP::Server, 458 inner2outer_resampling MHAPlugin_Resampling::resampling_t, 711 inner_ac_copy analysepath_t, 210 mha_dblbuf_t, 416 inner_fragsize MHAPlugin_Resampling::resampling_t, 711 inner_in MHASignal::doublebuffer_t, 747 inner_out_domain analysepath_t, 210 inner_process db_t, 244 MHASignal::doublebuffer_t, 746 inner_process_wave2vave analysepath_t, 210 inner_process_data_tnete dc::dc_bund_ibluft_t, 415 input_comain analysepath_t, 210 input_sea input_clomain analysepath_t, 210 input_sea input_clomain a	ac2lsl::save_var_t< mha_complex_t >,	input_cfg_
dc::dc_t, 249  Init_mha_ruby     mha_rubycop, 993     init_peer_data     MHA_TCP::Connection, 449     initialize     MHA_TCP::Server, 458     inner2outer_resampling	134	MHAPlugin::plugin_t, 707
Init_mha_ruby     mha_ruby.cpp, 993  init_peer_data     MHA_TCP::Connection, 449  initialize     MHA_TCP::Server, 458  inner2outer_resampling     MHAPlugin_Resampling::resampling_t,     711  inner_ac_copy     analysepath_t, 210     inner_fragsize     MHAPlugin_Resampling::resampling_t,     711  inner_in     MHASignal::doublebuffer_t, 747 inner_out_domain     analysepath_t, 210 inner_out    MHASignal::doublebuffer_t, 747 inner_out_domain     analysepath_t, 210 inner_process     db_t, 244     MHASignal::doublebuffer_t, 746 inner_process_wave2psec     analysepath_t, 210 inner_process_wave2wave     analysepath_t, 210 inner_process_	inhib_gain	input_channels
mha_ruby.cpp, 993 init_peer_data MHA_TCP::Connection, 449 initialize MHA_TCP::Server, 458 inner_2outer_resampling MHAPlugin_Resampling::resampling_t, 711 inner_ac_copy analysepath_t, 210 inner_error analysepath_t, 210 inner_fragsize MHAPlugin_Resampling::resampling_t, 711 inner_in MHASignal::doublebuffer_t, 747 inner_out_domain analysepath_t, 210 inner_process db_t, 244 MHASignal::doublebuffer_t, 746 inner_process_wave2spec analysepath_t, 210 inner_process_wave2wave analysepath_t, 210 input_domain aloblubf_t, 415 input_level dc::dc_vars_t, 251 input_level dc::dc_vars_t, 251 input_protrames MHAFilter::partitioned_convolution_t, 532 input_signal_parser_t, 911 input_process analysepath_t, 210 input_vave analysepath_t, 210 input_vave analysepath_t,	dc::dc_t, 249	adm_if_t, 189
init_peer_data  MHA_TCP::Connection, 449  initialize  MHA_TCP::Server, 458  inner2outer_resampling  MHAPlugin_Resampling::resampling_t,  711  inner_ac_copy  analysepath_t, 210  inner_error  analysepath_t, 416  inner_fragsize  MHAPlugin_Resampling::resampling_t,  711  inner_in  MHASignal::doublebuffer_t, 747  inner_out_domain  analysepath_t, 210  inner_process  db_t, 244  MHASignal::doublebuffer_t, 746  inner_process_wave2spec  analysepath_t, 210  inner_process_wave2wave  analysepath_t, 210  inner_process_wave2wave analysepath_t, 210  inner_process_wave2wave analysepath_t, 210  inner_process_wave2wave analysepath_t, 210  inner_process_wave2wave analysepath_t, 210  inner_process_wave2wave analysepath_t, 210  inner_process_wave2wave analysepath_t, 210  inner_process_wave2wave analysepath_t, 210  inner_process_wave2wave analysepath_t, 210  inner_process_wave2wave analysepath_t, 210  inner_process_wave2wave analysepath_t, 210  inner_process_wave2wave analysepath_t, 210  inner_process_wave2wave analysepath_t, 210  inner_process_wave2wave analysepath_t, 210  input_portnames  MHAFilter::partitioned_convolution_t, 532  input_spec  testplugin::signal_parser_t, 911  input_vave testplugin::signal_parser_t, 911  input_vave testplugin::signal_parser_t, 911  input_vave testplugin::signal_parser_t, 911  input_bow noisePowProposedScale::noisePow Proposed, 833  inputchannels MHAFilter::partitioned_convolution_t, 532  input_spec testplugin::signal_parser_t, 911  input_bow noisePowProposedScale::noisePow Proposed, 833  inputchannels MHAFilter::partitioned_convolution_t, 532  input_spec testplugin::signal_parser_t, 911  input_vave testplugin::signal_vave analysepath_t, 210  inp	Init_mha_ruby	mha_dblbuf_t, 415
MHA_TCP::Connection, 449 initialize  MHA_TCP::Server, 458 inner2outer_resampling  MHAPlugin_Resampling::resampling_t, 711 inner_ac_copy analysepath_t, 210 inner_error analysepath_t, 210 inner_fragsize  MHAPlugin_Resampling::resampling_t, 711 inner_in MHASignal::doublebuffer_t, 747 inner_out analysepath_t, 210 inner_out MHASignal::doublebuffer_t, 747 inner_out_domain analysepath_t, 210 inner_process db_t, 244 MHASignal::doublebuffer_t, 746 inner_process_wave2spec analysepath_t, 210 inner_process_wave2spec analysepath_t, 210 inner_process_wave2wave analysepath_t, 210 infut_wave testplugin::signal_parser_t, 911 inputPow noisePowProposedScale::noisePow noisePowProposedScale::noisePow Proposed, 833 inputchannels MHAFilter::fftfilterbank_t, 506 insert acPooling_wave_config, 155 acSteer_config, 167 coherence::cohflt_t, 232 fftfilterbank::fftftb_plug_t, 323	mha_ruby.cpp, 993	input_domain
initialize  MHA_TCP::Server, 458 inner2outer_resampling  MHAPlugin_Resampling::resampling_t,  711 inner_ac_copy     analysepath_t, 210 inner_error     analysepath_t, 210 inner_fragsize     MHAPlugin_Resampling::resampling_t,     711 inner_in     MHASignal::doublebuffer_t, 747 inner_out     MHASignal::doublebuffer_t, 747 inner_out_domain     analysepath_t, 210 inner_process     db_t, 244     MHASignal::doublebuffer_t, 746 inner_process_wave2spec     analysepath_t, 210 inner_process_wave2spec     analysepath_t, 210 inner_process_wave2wave     analysepath_t, 210 input_level     dc::dc_vars_t, 251 input_spen     MHAJack::client_t, 574 input_signal_spec     MHAFilter::partitioned_convolution_t, 532 input_spec     testplugin::signal_parser_t, 911 inputPow     noisePowProposedScale::noisePow     Proposed, 833 inputchannels     MHAFilter::fftfilterbank_t, 506 insert     acPooling_wave_config, 155     acSteer_config, 167     coherence::cohflt_t, 232     fftfilterbank::fftfb_plug_t, 323	init_peer_data	PluginLoader::mhapluginloader_t, 858
MHA_TCP::Server, 458 inner2outer_resampling     MHAPlugin_Resampling::resampling_t,     711 inner_ac_copy     analysepath_t, 210 inner_error     analysepath_t, 210 inner_fragsize     MHAPlugin_Resampling::resampling_t,     711 inner_in     MHASignal::doublebuffer_t, 747 inner_out     MHASignal::doublebuffer_t, 746 inner_process     db_t, 244     MHASignal::doublebuffer_t, 746 inner_process_wave2spec     analysepath_t, 210 inner_process_wave2wave     analysepath_t, 210 input_level     dc::dc_vars_t, 251 input_signal_spec     MHAFilter::partitioned_convolution_t, 532 input_spec     testplugin::signal_parser_t, 911 inputPow     noisePowProposedScale::noisePow←     Proposed, 833 inputchannels     MHAFilter::fftfilterbank_t, 506 input_seve     MHAFilter::partitioned_convolution_t, 532 input_spec     testplugin::signal_parser_t, 911 inputPow     noisePowProposedScale::noisePow←     Proposed, 833 inputchannels     MHAFilter::partitioned_convolution_t, 532 input_spec     testplugin::signal_parser_t, 911 inputPow     noisePowProposedScale::noisePow←     Proposed, 833 inputchannels     dc::dc_vars_t, 251 input_seve     MHAFilter::partitioned_convolution_t, 532 input_seve     testplugin::signal_parser_t, 911 inputPow     noisePowProposedScale::noisePow←     Proposed, 833 inputcheve     acPooling_wave_config, 155     acSteer_config, 167     coherence::cohfit_t, 232     fttfillerbank::fftfb_plug_t, 323	MHA_TCP::Connection, 449	input_fifo
inner2outer_resampling    MHAPlugin_Resampling::resampling_t,     711 inner_ac_copy    analysepath_t, 210 inner_error    analysepath_t, 210    mha_dblbuf_t, 416 inner_fragsize    MHAPlugin_Resampling::resampling_t,     711 inner_ins    MHASignal::doublebuffer_t, 747 inner_out    MHASignal::doublebuffer_t, 747 inner_out    MHASignal::doublebuffer_t, 747 inner_out    MHASignal::doublebuffer_t, 747 inner_process    db_t, 244    MHASignal::doublebuffer_t, 746 inner_process_wave2spec    analysepath_t, 210 inner_process_wave2wave    analysepath_t, 210 input_signal_spec    MHAFilter::partitioned_convolution_t, 533 input_spec    testplugin::signal_parser_t, 911 input_oprocess    MHAFilter::partitioned_convolution_t, 533 input_spec    testplugin::signal_parser_t, 911 input_oprocess    MHAFilter::partitioned_convolution_t, 533 input_spec    testplugin::signal_parser_t, 911 input_oprocess    analysepath_t, 210 input_wave    testplugin::signal_parser_t, 911 input_oprocess    analysepath_t, 210 input_spec    testplugin::signal_parser_t, 911 input_o	initialize	
MHAPlugin_Resampling::resampling_t, 711  inner_ac_copy     analysepath_t, 210     inner_error     analysepath_t, 210     mha_dblbuf_t, 416 inner_fragsize     MHAPlugin_Resampling::resampling_t, 711 inner_in     MHASignal::doublebuffer_t, 747 inner_out     analysepath_t, 210     inner_out     MHASignal::doublebuffer_t, 747 inner_out     MHASignal::doublebuffer_t, 747 inner_out     MHASignal::doublebuffer_t, 747 inner_out     MHASignal::doublebuffer_t, 747 inner_out_domain     analysepath_t, 210 inner_process     db_t, 244     MHASignal::doublebuffer_t, 746 inner_process_wave2spec     analysepath_t, 210 inner_process_wave2wave     analysepath_t, 210 input_signal_spec     MHAFilter::partitioned_convolution_t, 533 input_signal_wave     analysepath_t, 210 input_signal_wave     MHAFilter::partitioned_convolution_t, 532 input_signal_parser_t, 911 input_to_process     analysepath_t, 210 input_wave     testplugin::signal_parser_t, 911 inputPow     noisePowProposedScale::noisePow←     Proposed, 833 inputSpec     noisePowProposedScale::noisePow←     noisePowProposedScale::noisePow←     acPooling_wave_config, 155     acSteer_config, 167     coherence::cohfit_t, 232     fftfilterbank::fftfb_plug_t, 323	——————————————————————————————————————	input_level
T11  Inner_ac_copy     analysepath_t, 210  Inner_error     analysepath_t, 210     mha_dblbuf_t, 416  Inner_fragsize     MHAPlugin_Resampling::resampling_t,     T11  Inner_in     MHASignal::doublebuffer_t, 747  Inner_out     MHASignal::doublebuffer_t, 747  Inner_out_domain     analysepath_t, 210  Inner_process     db_t, 244     MHASignal::doublebuffer_t, 746  Inner_process_wave2spec     analysepath_t, 210  Inner_process_wave2wave     analysepath_t, 210  Input_to_process     analysepath_t, 210  Input_bow     noisePowProposedScale::noisePow←     noisePowProposedScale::noisePow←     noisePowProposedScale::noisePow←     noisePowProposedScale::noisePow←     acPooling_wave_config, 155     acSteer_config, 167     coherence::cohflt_t, 232     fftfilterbank::fftfb_plug_t, 323	_ , •	:
inner_ac_copy     analysepath_t, 210     inner_error     analysepath_t, 210     mha_dblbuf_t, 416 inner_fragsize     MHAPlugin_Resampling::resampling_t,     711 inner_in     MHASignal::doublebuffer_t, 747 inner_out     MHASignal::doublebuffer_t, 747 inner_out_domain     analysepath_t, 210     inner_process     db_t, 244     MHASignal::doublebuffer_t, 746 inner_process_wave2spec     analysepath_t, 210 inner_process_wave2wave     analysepath_t, 210 input_signal_spec     MHAFilter::partitioned_convolution_t, 533 input_signal_wave     MHAFilter::partitioned_convolution_t, 533 input_signal_wave     MHAFilter::partitioned_convolution_t, 533 input_signal_wave     MHAFilter::partitioned_convolution_t, 532 input_spec     testplugin::signal_parser_t, 911 input_vave     testplugin::signal_parser_t, 911 input_Pow     noisePowProposedScale::noisePow←     noisePowProposedScale::noisePow←     noisePowProposedScale::noisePow←     noisePowProposedScale::noisePow←     acPooling_wave_config, 155     acSteer_config, 167     coherence::cohflt_t, 232     fftfilterbank::fftfb_plug_t, 323		• —•
analysepath_t, 210  inner_error  analysepath_t, 210  mha_dblbuf_t, 416  inner_fragsize  MHAPlugin_Resampling::resampling_t,  711  inner_in  MHASignal::doublebuffer_t, 747  inner_out  analysepath_t, 210  inner_out_domain  analysepath_t, 210  inner_process  db_t, 244  MHASignal::doublebuffer_t, 746  inner_process_wave2spec  analysepath_t, 210  inner_process_wave2wave  analysepath_t, 210  MHAFilter::partitioned_convolution_t, 533  input_signal_wave  MHAFilter::partitioned_convolution_t, 533  input_signal_wave  MHAFilter::partitioned_convolution_t, 533  input_spec  testplugin::signal_parser_t, 911  input_wave  testplugin::signal_parser_t, 911  inputPow  noisePowProposedScale::noisePow←  Proposed, 833  inputSpec  noisePowProposedScale::noisePow←  Proposed, 833  inputchannels  MHAFilter::fftfilterbank_t, 506  insert  acPooling_wave_config, 155  acSteer_config, 167  coherence::cohflt_t, 232  fftfilterbank::ffttb_plug_t, 323		<del>-</del> ·
inner_error analysepath_t, 210 mha_dblbuf_t, 416 inner_fragsize  MHAPlugin_Resampling::resampling_t, 711 inner_in  MHASignal::doublebuffer_t, 747 inner_out analysepath_t, 210 inner_out_domain analysepath_t, 210 inner_process db_t, 244 MHASignal::doublebuffer_t, 746 inner_process_wave2spec analysepath_t, 210 inner_process_wave2wave analysepath_t, 210 inner_process_wave2wave analysepath_t, 210 inner_process_wave2wave analysepath_t, 210 input_spec input_spec input_spec testplugin::signal_parser_t, 911 input_wave testplugin::signal_parser_t, 911 inputPow noisePowProposedScale::noisePow← noisePowProposedScale::noisePow← Proposed, 833 inputchannels MHAFilter::fftfilterbank_t, 506 insert acPooling_wave_config, 155 acSteer_config, 167 coherence::cohflt_t, 232 fftfilterbank::fftfb_plug_t, 323		. –
analysepath_t, 210 mha_dblbuf_t, 416 inner_fragsize  MHAPlugin_Resampling::resampling_t, 711 inner_in  MHASignal::doublebuffer_t, 747 inner_out MHASignal::doublebuffer_t, 747 inner_out_domain analysepath_t, 210 inner_process db_t, 244 MHASignal::doublebuffer_t, 746 inner_process_wave2spec analysepath_t, 210  inner_process_wave2wave analysepath_t, 210  MHAFilter::partitioned_convolution_t, 532 input_spec testplugin::signal_parser_t, 911 input_to_process analysepath_t, 210 input_wave testplugin::signal_parser_t, 911 inputPow noisePowProposedScale::noisePow← Proposed, 833 inputSpec input_spec testplugin::signal_parser_t, 911 input_to_process analysepath_t, 210 input_wave testplugin::signal_parser_t, 911 input_pow noisePowProposedScale::noisePow← Proposed, 833 inputSpec input_spec testplugin::signal_parser_t, 911 input_to_process analysepath_t, 210 input_to_process analysepath_t, 210 input_to_process analysepath_t, 210 input_spec testplugin::signal_parser_t, 911 input_to_process analysepath_t, 210 input_sec testplugin::signal_parser_t, 911 input_to_process analysepath_t, 210 input_sec	• • —	• — — —
mha_dblbuf_t, 416 inner_fragsize  MHAPlugin_Resampling::resampling_t, 711 inner_in  MHASignal::doublebuffer_t, 747 inner_out analysepath_t, 210 inner_out_domain analysepath_t, 210 inner_process db_t, 244 MHASignal::doublebuffer_t, 746 inner_process_wave2spec analysepath_t, 210 input_spec testplugin::signal_parser_t, 911 inputPow noisePowProposedScale::noisePow← Proposed, 833 inputSpec input_to_process analysepath_t, 210 input_wave testplugin::signal_parser_t, 911 inputPow noisePowProposedScale::noisePow← Proposed, 833 inputSpec input_to_process analysepath_t, 210	<del>-</del>	• – • –
inner_fragsize  MHAPlugin_Resampling::resampling_t, 711  inner_in  MHASignal::doublebuffer_t, 747  inner_out analysepath_t, 210  inner_out_domain analysepath_t, 210  inner_process db_t, 244 MHASignal::doublebuffer_t, 746  inner_process_wave2spec analysepath_t, 210  inner_process_wave2wave analysepath_t, 210  inner_process_wave2wave analysepath_t, 210  inner_process_wave2wave analysepath_t, 210  input_to_process analysepath_t, 210  input_wave testplugin::signal_parser_t, 911  input_to_process analysepath_t, 210  inputPow noisePowProposedScale::noisePow Proposed, 833  inputSpec noisePowProposedScale::noisePow Proposed, 833  inputchannels MHAFilter::fftfilterbank_t, 506 insert acPooling_wave_config, 155 acSteer_config, 167 coherence::cohflt_t, 232 fftfilterbank::fftfb_plug_t, 323	• • —	• — — —
MHAPlugin_Resampling::resampling_t, 711  inner_in  MHASignal::doublebuffer_t, 747  inner_input  analysepath_t, 210  inner_out  mHASignal::doublebuffer_t, 747  inner_out  analysepath_t, 210  inner_out_domain  analysepath_t, 210  inner_process  db_t, 244  MHASignal::doublebuffer_t, 746  inner_process_wave2spec  analysepath_t, 210  inner_process_wave2wave  analysepath_t, 210  input_wave  testplugin::signal_parser_t, 911  inputPow  noisePowProposedScale::noisePow  Proposed, 833  inputSpec  noisePowProposedScale::noisePow  Proposed, 833  inputchannels  MHAFilter::fftfilterbank_t, 506  insert  acPooling_wave_config, 155  acSteer_config, 167  coherence::cohflt_t, 232  fftfilterbank::fftfb_plug_t, 323	<del>_</del>	$\cdot$ – $\cdot$
nner_in  MHASignal::doublebuffer_t, 747  inner_input     analysepath_t, 210  inner_input     analysepath_t, 210  inner_out     mHASignal::doublebuffer_t, 747  inner_out     mhaSignal::doublebuffer_t, 747  inner_out_domain     analysepath_t, 210  inner_process     db_t, 244     MHASignal::doublebuffer_t, 746  inner_process_wave2spec     analysepath_t, 210  inner_process_wave2wave     analysepath_t, 210  inner_process_wave2wave     analysepath_t, 210  input_wave     testplugin::signal_parser_t, 911  inputPow     noisePowProposedScale::noisePow←     noisePowProp	_ •	
inner_in  MHASignal::doublebuffer_t, 747  inner_input  analysepath_t, 210  inner_out  MHASignal::doublebuffer_t, 747  inner_out  MHASignal::doublebuffer_t, 747  inner_out_domain  analysepath_t, 210  inner_process  db_t, 244  MHASignal::doublebuffer_t, 746  inner_process_wave2spec  analysepath_t, 210  inner_process_wave2wave  analysepath_t, 210  inner_process_wave2wave  analysepath_t, 210  inner_process_wave2wave  analysepath_t, 210  inner_process_wave2wave  analysepath_t, 210  infilterbank::fftfb_plug_t, 323		• — —
MHASignal::doublebuffer_t, 747 inner_input analysepath_t, 210 inner_out MHASignal::doublebuffer_t, 747 inner_out analysepath_t, 210 inner_out_domain analysepath_t, 210 inner_process db_t, 244 MHASignal::doublebuffer_t, 746 inner_process_wave2spec analysepath_t, 210 inner_process_wave2wave analysepath_t, 210  MHASignal::doublebuffer_t, 746 inner_process_wave2wave analysepath_t, 210  MHASignal::doublebuffer_t, 746 insert inputSpec noisePowProposedScale::noisePow← noisePowPowPowPowedDealerererererererererererererererererere		• • —
inner_input     analysepath_t, 210     inner_out     MHASignal::doublebuffer_t, 747     inner_out_domain         analysepath_t, 210     inner_process     db_t, 244     MHASignal::doublebuffer_t, 746     inner_process_wave2spec     analysepath_t, 210     inner_process_wave2spec     analysepath_t, 210     inner_process_wave2wave     analysepath_t, 210     inner_process_wave2wave     analysepath_t, 210     inner_process_wave2wave     analysepath_t, 210     insert     inner_process_wave2wave     analysepath_t, 210     insert     insert     acPooling_wave_config, 155     acSteer_config, 167     coherence::cohflt_t, 232     fftfilterbank::fftfb_plug_t, 323		• —
analysepath_t, 210  inner_out  MHASignal::doublebuffer_t, 747  inner_out_domain  analysepath_t, 210  inner_process  db_t, 244  MHASignal::doublebuffer_t, 746  inner_process_wave2spec  analysepath_t, 210  inner_process_wave2wave  analysepath_t, 210  noisePowProposedScale::noisePow←  noisePowProposedScale::noisePow←  Proposed, 833  inputchannels  MHAFilter::fftfilterbank_t, 506  insert  acPooling_wave_config, 155  acSteer_config, 167  coherence::cohflt_t, 232  fttfilterbank::fftfb_plug_t, 323		
inner_out Proposed, 833  MHASignal::doublebuffer_t, 747 inner_out_domain nanalysepath_t, 210 inner_process  db_t, 244 MHASignal::doublebuffer_t, 746 inner_process_wave2spec nanalysepath_t, 210 inner_process_wave2wave analysepath_t, 210  Proposed, 833 inputSpec noisePowProposedScale::noisePow← Proposed, 833 inputchannels MHAFilter::fftfilterbank_t, 506 insert acPooling_wave_config, 155 acSteer_config, 167 coherence::cohflt_t, 232 fftfilterbank::fftfb_plug_t, 323	_ ·	•
MHASignal::doublebuffer_t, 747 inner_out_domain     analysepath_t, 210     inner_process     db_t, 244     MHASignal::doublebuffer_t, 746 inner_process_wave2spec     analysepath_t, 210     inner_process_wave2wave     analysepath_t, 210  inputSpec     noisePowProposedScale::noisePow←     Proposed, 833 inputchannels     MHAFilter::fftfilterbank_t, 506 insert     insert     acPooling_wave_config, 155     acSteer_config, 167     coherence::cohflt_t, 232     fftfilterbank::fftfb_plug_t, 323	• • —	•
inner_out_domain	<del>_</del>	•
analysepath_t, 210 Proposed, 833 inner_process inputchannels MHAFilter::fftfilterbank_t, 506 MHASignal::doublebuffer_t, 746 inner_process_wave2spec analysepath_t, 210 inner_process_wave2wave analysepath_t, 210  fftfilterbank::fftfb_plug_t, 323		• •
inner_process  db_t, 244  MHAFilter::fftfilterbank_t, 506  MHASignal::doublebuffer_t, 746  inner_process_wave2spec  analysepath_t, 210  inner_process_wave2wave  analysepath_t, 210  inner_process_wave2wave  analysepath_t, 210  infilterbank::fftfb_plug_t, 323		•
db_t, 244 MHAFilter::fftfilterbank_t, 506 MHASignal::doublebuffer_t, 746 insert  inner_process_wave2spec acPooling_wave_config, 155 analysepath_t, 210 acSteer_config, 167 inner_process_wave2wave coherence::cohflt_t, 232 analysepath_t, 210 fftfilterbank::fftfb_plug_t, 323	• • —	•
MHASignal::doublebuffer_t, 746 inner_process_wave2spec analysepath_t, 210 acSteer_config, 167 inner_process_wave2wave analysepath_t, 210 fftfilterbank::fftfb_plug_t, 323	<del></del>	•
inner_process_wave2spec acPooling_wave_config, 155 analysepath_t, 210 acSteer_config, 167 inner_process_wave2wave coherence::cohflt_t, 232 analysepath_t, 210 fftfilterbank::fftfb_plug_t, 323	— ·	<del>-</del> ·
analysepath_t, 210 acSteer_config, 167 inner_process_wave2wave analysepath_t, 210 acSteer_config, 167 coherence::cohflt_t, 232 fftfilterbank::fftfb_plug_t, 323	_ ·	
inner_process_wave2wave coherence::cohflt_t, 232 analysepath_t, 210 fftfilterbank::fftfb_plug_t, 323	·	<del>-</del> - <del>-</del>
analysepath_t, 210 fftfilterbank::fftfb_plug_t, 323	• • —	
• • • •	<del></del>	<del>_</del> ·
	• • -	_, <del>,</del> _

MHA_AC::ac2matrix_t, 394	interleaved
MHA_AC::acspace2matrix_t, 397	combc_if_t, 236
MHA_AC::spectrum_t, 402	interleaved_
MHA_AC::stat_t, 404	combc_t, 237
MHA_AC::waveform_t, 406	intern level
MHAOvlFilter::fftfb_ac_info_t, 590	MHASignal::loop_wavefragment_t, 756
multibandcompressor::fftfb_plug_t, 821	internal fir
noisePowProposedScale::noisePow↔	MHAFilter::smoothspec_t, 544
Proposed, 832	internal_start
prediction_error_config, 865	MHAJack::client_t, 573
rmslevel_t, 869	internal_stop
rt_nlms_t, 874	MHAJack::client_t, 573
timo_AC, 912	interp
insert_item	MHATableLookup::linear_table_t, 801
MHAParser::parser_t, 665	MHATableLookup::table_t, 804
insert_items	MHATableLookup::xy table t, 806
windowselector_t, 933	interp1
insert member	DynComp, 79
mha_parser.hh, 989	interp2
insert var	DynComp, 80
algo_comm_t, 193	inv_scale
MHAKernel::algo_comm_class_t, 579	MHAOvlFilter::FreqScaleFun, 98
testplugin::ac_parser_t, 906	•
insert_var_float	invalidate_window_data windowselector_t, 934
	invert
algo_comm_t, 194	
MHAKernel::algo_comm_class_t, 579	coherence::vars_t, 234
insert_var_int	invgain
algo_comm_t, 194	alsa_t, 205
MHAKernel::algo_comm_class_t, 579	inwave
inspect	lpc_config, 387
MHAFilter::complex_bandpass_t, 498	io
MHAFilter::gamma_flt_t, 513	MHAJack, 92
MHASignal::delay_t, 743	MHAJack::client_avg_t, 564
inst_name	MHAJack::client_noncont_t, 567
fw_t, 330	io_alsa_t, 341
int_data	alsa_start_counter, 344
testplugin::ac_parser_t, 906	b_process, 344
int_mon_t	dev_in, 344
MHAParser::int_mon_t, 638	dev_out, 344
int_t	format, 344
MHA_AC::int_t, 400	fw_fragsize, 344
MHAParser::int_t, 640	fw_samplerate, 344
integrate	io_alsa_t, 343
Vector and matrix processing toolbox, 43	p_in, 344
intensity	p_out, 344
mha_signal.cpp, 996	patchbay, 344
interface_t	pcmlink, 344
delay::interface_t, 266	prepare, 343, 344
multibandcompressor::interface_t, 823	priority, 344
noisePowProposedScale::interface_t, 831	proc_event, 344
route::interface_t, 871	proc_handle, 344

proc_thread, 344	MHAIOJack::io_jack_t, 551
process, 344	MHAIOJackdb::io_jack_t, 555
release, 343	io_lib
start, 343	fw_t, 331
start_event, 344	io lib t, 349
start_handle, 344	~io_lib_t, 350
stop, 343	IODestroy_cb, 351
stop_event, 344	IOInit_cb, 351
stop_handle, 344	IOPrepare_cb, 351
thread start, 343	IORelease cb, 351
io_err	IOSetVar_cb, 351
io_tcp_fwcb_t, 358	IOStart_cb, 351
io_error	IOStop_cb, 351
fw_t, 331	IOStrError_cb, 351
io_file_t, 345	io lib t, 350
~io file t, 346	lib_data, 351
b_prepared, 348	lib_err, 351
filename_input, 348	lib handle, 351
filename_output, 348	lib_str_error, 351
fragsize, 347	prepare, 350
io_file_t, 346	release, 351
length, 348	start, 351
nchannels_file_in, 347	stop, 351
nchannels_in, 347	test_error, 351
nchannels_out, 347	io name
output_sample_format, 348	fw_t, 330
prepare, 347	io_parser_t, 352
proc_event, 348	~io_parser_t, 353
proc_handle, 348	b_fw_started, 354
release, 347	b_prepared, 354
s_file_in, 348	b_starting, 354
s_in, <mark>348</mark>	b_stopped, 354
s_out, 348	fragsize, 354
samplerate, 347	input, 354
setlock, 347	io_parser_t, 353
sf in, 348	nchannels_in, 354
sf_out, 348	nchannels_out, 354
sfinf_in, 348	output, 354
sfinf out, 348	patchbay, 354
start, 347	prepare, 353
start_event, 348	proc_event, 354
start_handle, 348	proc_handle, 354
startsample, 348	process_frame, 354
stop, 347	release, 354
stop_event, 348	s_in, 354
stop_handle, 348	s_out, 354
stopped, 347	start, 353
strict_channel_match, 348	start event, 354
strict_srate_match, 348	start_handle, 354
total_read, 348	started, 354
io_jack_t	stop, 354
	• *

stop_event, 354	prepare, 366
stop_handle, 354	release, 366
stopped, 354	s_in, 369
io_portaudio_t	samplerate, 368
MHAIOPortAudio::io_portaudio_t, 561	io_tcp_sound_t::float_union, 369
io_tcp_fwcb_t, 355	c, 369
~io_tcp_fwcb_t, 356	f, 369
io_err, 358	i, 369
io_tcp_fwcb_t, 356	io_tcp_t, 369
proc_err, 358	~io_tcp_t, 371
proc_event, 357	accept_loop, 371
proc_handle, 357	connection_loop, 371
process, 356	fwcb, 372
set_errnos, 356	io_tcp_t, 371
start, 356	notify_release, 372
start_event, 357	notify_start, 372
start_handle, 358	notify stop, 372
stop, 357	parse, 372
stop_event, 357	parser, 372
stop_handle, 358	prepare, 371
io_tcp_parser_t, 358	release, 371
~io_tcp_parser_t, 360	server, 372
connected, 363	sound, 372
debug, 363	start, 371
debug_file, 364	stop, 371
debug_filename, 364	thread, 372
get_connected, 361	iob
get_local_address, 360	MHAJack::port_t, 577
get_local_port, 360	irslen
get_server_port_open, 361	
io_tcp_parser_t, 360	frequency_translator_t, 325 irslen inner2outer
local_address, 363	<del>_</del>
	MHAPlugin_Resampling::resampling_if  → 700
local_port, 363	_t, 709
peer_address, 363	irslen_outer2inner
peer_port, 364	MHAPlugin_Resampling::resampling_if  → 700
server_port_open, 363	_t, 709
set_connected, 362	irswnd
set_local_port, 360	MHAOvlFilter::overlap_save_filterbank_
set_new_peer, 362	t::vars_t, 606
set_server_port_open, 361	smoothgains_bridge::overlapadd_if_←
io_tcp_sound_t, 364	t, 889
~io_tcp_sound_t, 365	is_complex
check_sound_data_type, 366	MHA_AC::ac2matrix_helper_t, 392
chunkbytes_in, 366	mha_audio_descriptor_t, 407
fragsize, 368	is_first_run
header, 366	ac2lsl::ac2lsl_t, 125
hton, 368	is_playback_active
io_tcp_sound_t, 365	MHASignal::loop_wavefragment_t, 756
ntoh, 366	is_prepared
num_inchannels, 368	adm_if_t, 189
num_outchannels, 368	MHAPlugin::plugin_t, 706

PluginLoader::mhapluginloader_t, 859	MHAPlugin_Split::posix_threads_t, 720
is_prepared_	MHAPlugin_Split::thread_platform_t, 733
MHAPlugin::plugin_t, 707	kicked
is same size	MHAPlugin_Split::posix_threads_t, 721
MHASignal::matrix_t, 761	km
is_var	lpc_bl_predictor_config, 381
algo_comm_t, 195	kmax
MHAKernel::algo_comm_class_t, 579	hilbert_shifter_t, 338
iscomplex	kmin
MHASignal::matrix_t, 761	hilbert_shifter_t, 338
isempty	kth_smallest
AuditoryProfile::fmap_t, 213	MHASignal, 113
gaintable.cpp, 954	kw_index2type
MHAFilter::transfer_function_t, 548	transducers.cpp, 1051
isval	kw_t
MHAParser::kw_t, 646	MHAParser::kw_t, 645, 646
iter	WITAT 81361RW_t, 043, 040
	L
prediction_error_config, 866	AuditoryProfile::parser_t, 215
iterator	AuditoryProfile::profile t, 219
MHA_TCP::Event_Watcher, 455	I_min
jack_error_handler	dc::wb_inhib_cfg_t, 253
mhajack.cpp, 1032	dc::wideband_inhib_vars_t, 254
	I new
jack_proc_cb	addsndfile::level_adapt_t, 176
MHAJack::client_t, 573	fader_wave::level_adapt_t, 315
jack_xrun_cb	I_old
MHAJack::client_t, 573	addsndfile::level_adapt_t, 176
jc	— · —
MHAJack::client_t, 574	fader_wave::level_adapt_t, 315
MHAJack::port_t, 577	LEVEL
jstate_prev	dc_simple, 78
MHAJack::client_t, 574	LPSCALE
In James	timoconfig.cpp, 1049
k_inner	LTASS_combined
MHASignal::doublebuffer_t, 747	speechnoise_t, 900
k_nyquist	LTASS_female
dc::dc_t, 249	speechnoise_t, 900
k_outer	LTASS_male
MHASignal::doublebuffer_t, 747	speechnoise_t, 900
kappa	lambda
lpc_burglattice_config, 385	lpc_burglattice, 383
kappa_block	lpc_burglattice_config, 385
lpc_burglattice_config, 385	lambda_ceps
kappa_const	timoConfig, 918
timo_params, 915	lambda_ceps_AC
timoSmooth, 921	timo_AC, 913
keyword_list_t	lambda_ceps_prev
MHAParser::keyword_list_t, 642	timoConfig, 918
kick_condition	lambda_ml_AC
MHAPlugin_Split::posix_threads_t, 720	timo_AC, 913
kick_thread	lambda_ml_ceps
MHAPlugin_Split::dummy_threads_t, 717	timoConfig, 918
<b>5</b> — <b>1</b>	<b>.</b>

lambda_ml_ceps_AC	plingploing::plingploing_t, 844
timo_AC, 913	len_A
lambda_ml_full	MHAFilter::filter_t, 511
timoConfig, 918	len_a
lambda_ml_smooth	hanning_ramps_t, 336
timoConfig, 918	len_B
lambda_ml_smooth_AC	MHAFilter::filter_t, 511
timo_AC, 913	len_b
lambda_smoothing_power	hanning_ramps_t, 336
nlms_t, 827	length
lambda_spec	io_file_t, 348
timoConfig, 918	MHASignal::uint_vector_t, 786
lambda_spec_AC	lev
timo_AC, 913	noise_t, 829
lambda_thresh	sine_t, 887
timo_params, 915	level
timoSmooth, 921	addsndfile::addsndfile_if_t, 174
last_complex_bin	plingploing::if_t, 842
MHASignal::subsample_delay_t, 783	plingploing::plingploing_t, 845
last_config	rmslevel_t, 869
MHAPlugin::config_t, 701	level_adapt_t
last_errormsg	addsndfile::level_adapt_t, 175
MHAParser::parser_t, 667	fader_wave::level_adapt_t, 314
last_jack_err	level_adaptor
mhajack.cpp, 1032	addsndfile, 74
last_jack_err_msg	fader_wave, 81
mhajack.cpp, 1032	level_db
mhajack.h, 1034	rmslevel_t, 869
last name	level_in_db
MHAParser::mhapluginloader t, 659	 dc::dc_t, 249
latex_doc_t, 372	level_in_db_adjusted
ac, 374	dc::dc_t, 249
get_ac, 373	level_mode_t
get categories, 373	MHASignal::loop_wavefragment_t, 754
get latex doc, 373	level mon
get_main_category, 373	droptect_t, 281
get_parser_tab, 373	level_smoother_t
get_parser_var, 373	dc_simple::level_smoother_t, 264
latex_doc_t, 373	level_spec
latex_plugname, 374	dc_simple::level_smoother_t, 264
loader, 374	level wave
parsername, 373	dc_simple::level_smoother_t, 264
plugin_macro, 374	levelmode
plugname, 374	addsndfile::addsndfile_if_t, 174
strdom, 373	Levinson2
latex_plugname	lpc.cpp, 958
latex_doc_t, 374	lib_data
len	_ io_lib_t, 351
MHA_AC::acspace2matrix_t, 397	PluginLoader::mhapluginloader_t, 859
MHAFilter::filter_t, 511	lib_err
MHATableLookup::linear_table_t, 803	io_lib_t, 351

PluginLoader::mhapluginloader_t, 859	MHAParser::mhapluginloader_t, 659
lib_handle	load_proc_lib
io_lib_t, 351	fw_t, 329
PluginLoader::mhapluginloader_t, 859	loader
lib_str_error	latex_doc_t, 374
io_lib_t, 351	loadlib
libdata	analysispath_if_t, 212
analysepath_t, 210	local_address
MHAParser::c_ifc_parser_t, 625	io_tcp_parser_t, 363
liberr	local_get_entries
MHAParser::c_ifc_parser_t, 625	MHAKernel::algo_comm_class_t, 580
libname	local_get_var
analysispath_if_t, 212	MHAKernel::algo_comm_class_t, 580
PluginLoader::config_file_splitter_t, 852	local_insert_var
library_paths	MHAKernel::algo_comm_class_t, 580
pluginbrowser_t, 849	local is var
like_ratio	MHAKernel::algo_comm_class_t, 580
acPooling_wave_config, 156	local_port
like_ratio_name	io_tcp_parser_t, 363
acPooling_wave, 154	local_remove_ref
limit	MHAKernel::algo_comm_class_t, 580
coherence::cohflt_t, 232	local_remove_var
coherence::vars_t, 234	MHAKernel::algo_comm_class_t, 580
MHASignal, 113	locate
MHASignal::quantizer_t, 768	MHAIOJackdb::io_jack_t, 557
MHASignal::waveform_t, 795	locate end
limiter	MHASignal::loop_wavefragment_t, 756
dc_simple::dc_t, 259	lock_channels
limiter_threshold	fw_vars_t, 332
dc_simple::dc_t, 259	lock_srate_fragsize
dc_simple::dc_vars_t, 262	fw_vars_t, 332
lin2db	locked
Vector and matrix processing toolbox, 38	MHAParser::variable_t, 676
line t	log_down
dc simple::dc t::line t, 260	MHASignal::schroeder_t, 775
linear	
	log_lambda_spec
MHAOvlFilter::ShapeFun, 99	timoConfig, 918
softclipper_t, 893	log_lambda_spec_AC
softclipper_variables_t, 895	timo_AC, 913
linear_table_t	log_up
MHATableLookup::linear_table_t, 801	MHASignal::schroeder_t, 775
Linearphase_FIR	logGLRFact
ADM::Linearphase_FIR, 185	noisePowProposedScale::noisePow←
list_dir	Proposed, 833
mha_os.cpp, 981	timoConfig, 918
mha_os.h, 983	logfile
lo_addr	mhaserver_t, 738
ac2osc_t, 139	logstring
load_io_lib	mhaserver_t, 737
fw_t, 329	longmsg
load_plug	MHA_Error, 425

lookup	lpc_bl_predictor, 378
MHATableLookup::linear_table_t, 801	lpc_order, 379
MHATableLookup::table_t, 804	name_b, 379
MHATableLookup::xy_table_t, 806	name_f, 379
loop	name_kappa, 379
addsndfile::addsndfile_if_t, 174	name_lpc_b, 379
loop_wavefragment_t	name_lpc_f, 379
MHASignal::loop wavefragment t, 754	patchbay, 379
low incl	prepare, 378
MHAParser::range_var_t, 670	process, 378
low_limit	release, 378
<del>_</del>	update_cfg, 379
MHAParser::range_var_t, 670	•
low_side_flat	lpc_bl_predictor.cpp, 958
MHAOvIFilter::band_descriptor_t, 588	INSERT_PATCH, 958
low_thresh	PATCH_VAR, 958
acPooling_wave_config, 156	lpc_bl_predictor.h, 958
lower_threshold	EPSILON, 959
acPooling_wave, 154	lpc_bl_predictor_config, 379
lp	$\sim$ lpc_bl_predictor_config, 380
DynComp::dc_afterburn_rt_t, 286	ac, 380
lp1i	b_est, 380
coherence::cohflt_t, 232	backward, 380
lp1ltg	f_est, 380
coherence::cohflt_t, 233	forward, 380
lp1r	km, 381
coherence::cohflt_t, 232	lpc_bl_predictor_config, 380
lp coeffs	lpc_order, 380
adm_rtconfig_t, 192	name_b, 381
lp_order	name_f, 380
adm_if_t, 189	name_km, 380
lpc, 374	process, 380
	•
~lpc, 375	s_b, 381
algo_name, 376	s_f, 381
comp_each_iter, 376	lpc_buffer_size
lpc, 375	lpc, 376
lpc_buffer_size, 376	lpc_config, 387
lpc_order, 376	lpc_burg-lattice.cpp, 959
norm, 376	INSERT_PATCH, 959
patchbay, 376	PATCH_VAR, 959
prepare, 375	lpc_burg-lattice.h, 959
process, 375	EPSILON, 959
release, 376	lpc_burglattice, 381
shift, 376	$\sim$ lpc_burglattice, 382
update_cfg, 376	lambda, 383
lpc.cpp, 957	lpc_burglattice, 382
INSERT_PATCH, 958	lpc_order, 383
Levinson2, 958	name_b, 383
PATCH VAR, 958	name_f, 383
lpc.h, 958	name_kappa, 383
lpc_bl_predictor, 377	patchbay, 383
~lpc_bl_predictor, 378	prepare, 383
~ipo_ni_predictor, 3/0	picpaic, 303

	process, 383	Ival
	release, 383	MHAParser::expression_t, 632
lno	update_cfg, 383 burglattice_config, 384	m
ipc_	_	dc simple::dc t::line t, 260
	~lpc_burglattice_config, 384	matrixmixer::cfg_t, 388
	ac, 384	M PI
	backward, 385	mha_defs.h, 968
	dm, 385	mha_signal.hh, 1005
	forward, 384	m_alphas
	kappa, 385	ADM::Linearphase_FIR, 186
	kappa_block, 385	m_beta
	lambda, 385	ADM::ADM, 182
	lpc_burglattice_config, 384	m coeff
	lpc_order, 385	ADM::Delay, 184
	name_b, 385	m decomb
	name_f, 385	ADM::ADM, 182
	nm, 385	m_delay_back
	process, 384	ADM::ADM, 182
	s_b, 385	m_delay_front
	s_f, 385	ADM::ADM, 182
lpc_	config, 385	m_fullsamples
	~lpc_config, 386	ADM::Delay, 184
	A, 387	m_lp_bf
	comp_each_iter, 386	ADM::ADM, 182
	comp_iter, 387	m_lp_result
	corr_out, 387	ADM::ADM, 182
	insert, 386	m_mu_beta
	inwave, 387	ADM::ADM, 182
	lpc_buffer_size, 387	m norm
	lpc_config, 386	ADM::Delay, 184
	lpc_out, 387	m_now
	N, 387	ADM::Linearphase_FIR, 186
	norm, 386	m_now_in
	order, 386	ADM::Delay, 184
	process, 386	m_order
	R, 387	ADM::Linearphase_FIR, 186
	sample, 387	m_output
	shift, 386	ADM::Linearphase_FIR, 186
lpc_	_order	m_powerfilter_coeff
	lpc, 376	ADM::ADM, 182
	lpc_bl_predictor, 379	m_powerfilter_norm
	lpc_bl_predictor_config, 380	ADM::ADM, 182
	lpc_burglattice, 383	m_powerfilter_state
	lpc_burglattice_config, 385	ADM::ADM, 182
	prediction_error, 864	m_state
lpc_	out	ADM::Delay, 184
	lpc_config, 387	MAX_LINE_LENGTH
Itgc	omp	mhamain.cpp, 1035
	coherence::vars_t, 234	MAX_TCP_PORT_STR
Itgta	au	MHAIOTCP.cpp, 1030
	coherence::vars_t, 234	MAX_TCP_PORT

MHAIOTCP.cpp, 1030	ac, 400
MAX_USER_ERR	data, 400
MHAIOFile.cpp, 1016	int t, 400
MHAIOJack.cpp, 1018	MHA AC::spectrum t, 401
MHAIOJackdb.cpp, 1021	~spectrum_t, 402
MHAIOParser.cpp, 1024	ac, 403
MHAIOPortAudio.cpp, 1027	insert, 402
• •	•
MHAIOTCP.cpp, 1030	name, 403
MHAIOalsa.cpp, 1013	spectrum_t, 402
mhajack.h, 1034	MHA_AC::stat_t, 403
MAX	insert, 404
mha_defs.h, 969	mean, 404
MHA_AC::ac2matrix_helper_t, 391	stat_t, 404
ac, 392	std, 404
ac2matrix_helper_t, 391	update, 404
acvar, 392	MHA_AC::waveform_t, 404
getvar, 391	~waveform_t, 405
is_complex, 392	ac, 406
name, 392	insert, 406
size, 392	name, 406
username, 392	waveform t, 405
	MHA AC CHAR
MHA_AC::ac2matrix_t, 392	
ac2matrix_t, 393	mha.h, 964
getname, 393	MHA_AC_DOUBLE
getusername, 394	mha.h, 964
insert, 394	MHA_AC_FLOAT
update, 393	mha.h, 964
MHA_AC::acspace2matrix_t, 394	MHA_AC_INT
$\sim$ acspace2matrix_t, 396	mha.h, 964
acspace2matrix_t, 395	MHA_AC_MHACOMPLEX
data, 397	mha.h, 964
frame, 397	MHA_AC_MHAREAL
frameno, 397	mha.h, 964
insert, 397	MHA AC UNKNOWN
len, 397	 mha.h, 964
operator=, 396	MHA_AC_USER
operator[], 396	mha.h, 964
size, 397	MHA_AC_VEC_FLOAT
update, 397	mha.h, 964
MHA_AC::double_t, 397	MHA_AC, 82
— — — ·	
~double_t, 398	MHA_CALLBACK_TEST_PREFIX
ac, 398	mha.h, 962
data, 398	MHA_CALLBACK_TEST
double_t, 398	mha.h, 962
MHA_AC::float_t, 399	MHA_DOMAIN_MAX
$\sim$ float_t, 399	mha.h, 964
ac, 399	MHA_DOMAIN_UNKNOWN
data, 399	mha.h, 964
float_t, 399	MHA_EAR_LEFT
MHA_AC::int_t, 400	mha_defs.h, 969
 ∼int_t, 400	MHA EAR MAX
<del>,</del>	

mha_defs.h, 969	pipe, 445
MHA_EAR_RIGHT	reset, 445
mha_defs.h, 969	set, 445
MHA_ERR_INVALID_HANDLE	MHA_TCP::Client, 445
mha_errno.h, 971	Client, 446
MHA_ERR_NULL	MHA_TCP::Connection, 447
mha_errno.h, 971	$\sim$ Connection, 449
MHA_ERR_SUCCESS	buffered_incoming_bytes, 453
mha_errno.h, 971	buffered_outgoing_bytes, 453
MHA_ERR_UNKNOWN	can_read_bytes, 451
mha_errno.h, 971	can_read_line, 451
MHA_ERR_USER	can_sysread, 449
mha_errno.h, 971	can_syswrite, 449
MHA_ERR_VARFMT	closed, 453
mha_errno.h, 971	Connection, 449
MHA_ERR_VARRANGE	eof, 450
mha_errno.h, 971	fd, 453
MHA_Error, 423	get_fd, 450
∼MHA_Error, 424	get_peer_address, 450
get_longmsg, 424	get_peer_port, 450
get_msg, 424	get_read_event, 450
longmsg, 425	get_write_event, 450
MHA_Error, 424	inbuf, 453
msg, 425	init_peer_data, 449
operator=, 424	needs_write, 452
what, 424	outbuf, 453
MHA_ErrorMsg	peer_addr, 453
Error handling in the openMHA, 27	read_bytes, 452
MHA_ErrorMsg2	read_event, 453
MHAIOTCP.cpp, 1030	read_line, 451
MHA_ErrorMsg3	sysread, 449
MHAIOTCP.cpp, 1030	syswrite, 450
MHA_ID_MATRIX	try_write, 452
mha_signal.cpp, 996	write, 452
MHA_ID_UINT_VECTOR	write_event, 453
mha_signal.cpp, 996	MHA_TCP::Event_Watcher, 454
MHA_RELEASE_VERSION_STRING	$\sim$ Event_Watcher, 455
mha.h, 963	Events, 455
MHA_RESOLVE_CHECKED	events, 455
mha_os.h, 983	ignore, 455
MHA_RESOLVE	iterator, 455
mha_os.h, 983	observe, 455
MHA_SPECTRUM	wait, 455
mha.h, 964	MHA_TCP::OS_EVENT_TYPE, 456
MHA_STRUCT_SIZEMATCH	fd, 456
mha.h, 963	mode, 456
MHA_STRF	R, 456
mha.h, 962	T, 456
MHA_TCP::Async_Notify, 444	timeout, 456
~Async_Notify, 445	W, 456
Async_Notify, 445	X, 456

MHA_TCP::Server, 457	os_event, 471
$\sim$ Server, 458	os_event_valid, 471
accept, 458	reset, 470
accept_event, 459	status, 471
• —	•
get_accept_event, 458	Wakeup_Event, 470
get_interface, 458	MHA_TCP::sock_init_t, 459
get_port, 458	sock_init_t, 460
iface, 459	MHA_TCP, 83
initialize, 458	dtime, 85
port, 459	G_ERRNO, 85
Server, 457, 458	H ERRNO, 85
serversocket, 459	HSTRERROR, 85
sock_addr, 459	N ERRNO, 85
try_accept, 459	SOCKET, 85
• -	
MHA_TCP::Sockaccept_Event, 460	STRERROR, 85
Sockaccept_Event, 460	sock_initializer, 86
MHA_TCP::Sockread_Event, 461	stime, 85
Sockread_Event, 461	MHA_VERSION_BUILD
MHA_TCP::Sockwrite_Event, 462	mha.h, 963
Sockwrite Event, 462	MHA VERSION MAJOR
MHA TCP::Thread, 462	mha.h, 962
~Thread, 465	MHA_VERSION_MINOR
arg, 465	mha.h, 962
error, 466	MHA_VERSION_RELEASE
•	
FINISHED, 464	mha.h, 963
PREPARED, 464	MHA_VERSION_STRING
RUNNING, 464	mha.h, 963
return_value, 465	MHA_VERSION
run, 465	mha.h, 963
state, 465	MHA_WAVEFORM
thr_f, 464	mha.h, 963
Thread, 464	MHA_XSTRF
thread_arg, 466	mha.h, 962
thread attr, 465	MHA_assert
thread finish event, 465	Error handling in the openMHA, 28
thread func, 466	MHA_assert_equal
thread_handle, 465	Error handling in the openMHA, 28
MHA_TCP::Timeout_Event, 466	MHADestroy_cb
<del>_</del>	<del></del>
end_time, 467	PluginLoader::mhapluginloader_t, 859
get_os_event, 467	MHADestroy_t
Timeout_Event, 467	mha.h, 964
MHA_TCP::Timeout_Watcher, 467	MHAEvents, 86
$\sim$ Timeout_Watcher, 468	MHAEvents::connector_base_t, 482
timeout, 468	$\sim$ connector_base_t, 482
Timeout_Watcher, 468	connector_base_t, 482
MHA_TCP::Wakeup_Event, 469	emit_event, 483
~Wakeup_Event, 470	emitter_die, 483
get_os_event, 470	emitter_is_alive, 483
ignored_by, 470	MHAEvents::connector_t
observed_by, 470	~connector_t, 485
observers, 471	connector_t, 485
00301 VC13, 7/1	COTITIECTOL_T, 400

emit_event, 485	resampling_t, 493
emitter, 486	~blockprocessing_polyphase_resampling-
eventhandler, 486	_t, 494
eventhandler_s, 486	blockprocessing_polyphase_resampling ←
eventhandler_suu, 486	_t, 494
receiver, 486	can_read, 495
MHAEvents::connector_t< receiver_t >, 484	fragsize_in, 495
MHAEvents::emitter_t, 486	fragsize_out, 495
∼emitter_t, 487	num_channels, 495
connect, 487	read, 495
connections, 487	resampling, 495
disconnect, 487	write, 494
operator(), 487	MHAFilter::complex_bandpass_t, 496
MHAEvents::patchbay_t	A_, 498
~patchbay_t, 488	B_, 498
connect, 488, 489	complex_bandpass_t, 497
cons, 489	creator_A, 497
MHAEvents::patchbay_t< receiver_t >, 488	creator_B, 497
MHAFilter, 86	filter, 497, 498
butter_stop_ord1, 89	get_weights, 497
gcd, 90	inspect, 498
make_friendly_number, 88	set_state, 497
o1_lp_coeffs, 88	set_weights, 497
resampling_factors, 90	Yn, 498
sinc, 90	MHAFilter::diff_t, 498
spec2fir, 89	diff_t, 499
MHAFilter::adapt_filter_param_t, 489	MHAFilter::fftfilter_t, 499
adapt_filter_param_t, 490	$\sim$ fftfilter_t, 501
err_in, 490	channels, 502
mu, 490	fft, 503
MHAFilter::adapt_filter_state_t, 490	fftfilter_t, 500
adapt_filter_state_t, 491	fftlen, 502
filter, 491	filter, 501, 502
nchannels, 491	fragsize, 502
ntaps, 491	sInput, 503
od, 491	sWeights, 503
oy, 491	update_coeffs, 501
W, 491	wIRS_fft, 503
X, 491	wInput, 503
MHAFilter::adapt_filter_t, 491	wInput_fft, 502
adapt_filter_t, 492	wOutput, 503
connector, 493	wOutput_fft, 503
err_in, 493	MHAFilter::fftfilterbank_t, 503
filter, 492	$\sim$ fftfilterbank_t, 505
mu, 493	fft, 507
nchannels, 493	fftfilterbank_t, 504
ntaps, 493	fftlen, 506
set_channelcnt, 492	filter, 505, 506
update_mu, 492	firchannels, 506
update_ntaps, 492	fragsize, 506
MHAFilter::blockprocessing_polyphase_←	get_irs, 506

Hs, 506	nchannels, 518
hw, 506	resize, 518
inputchannels, 506	update_filter, 518
outputchannels, 506	MHAFilter::iir_ord1_real_t, 518
tail, 507	A_, 521
update_coeffs, 505	B_, 521
Xs, 506	iir_ord1_real_t, <mark>519</mark>
xw, 506	operator(), 520
Ys, 507	set_state, 520
yw, 506	Yn, 521
yw_temp, 507	MHAFilter::o1_ar_filter_t, 521
MHAFilter::filter_t, 507	c1_a, 524
∼filter_t, 509	c1_r, 524
A, 510	c2_a, <u>524</u>
B, 510	c2_r, 524
channels, 511	fs, 524
filter, 509, 510	o1_ar_filter_t, 522
filter_t, 508, 509	operator(), 523, 524
get_len_A, 510	set_tau_attack, 523
get len B, 510	set_tau_release, 523
len, 511	MHAFilter::o1flt lowpass t, 524
len_A, 511	get_c1, 526
len_B, 511	get_last_output, 526
state, 511	o1flt_lowpass_t, 526
MHAFilter::gamma_flt_t, 511	set_tau, 526
~gamma_flt_t, 512	MHAFilter::o1flt_maxtrack_t, 527
A, 513	o1flt_maxtrack_t, 528
bw_, 514	set_tau, 528
cf_, 514	MHAFilter::01flt_mintrack_t, 528
delay, <u>513</u>	o1flt mintrack t, 530
envelope_delay, 514	set_tau, 530
gamma_flt_t, 512	MHAFilter::partitioned_convolution_t, 530
get_A, 513	~partitioned_convolution_t, 532
get resynthesis gain, 513	bookkeeping, 533
get_weights, 513	current_input_signal_buffer_half_index,
GF, 513	533
inspect, 513	current_output_partition_index, 533
operator(), 512, 513	fft, 534
phase_correction, 513	filter_partitions, 532
reset_state, 513	fragsize, 532
resynthesis_gain, 514	frequency_response, 533
set_weights, 513	input_signal_spec, 533
srate_, 514	input_signal_wave, 532
MHAFilter::iir_filter_state_t, 514	nchannels_in, 532
iir_filter_state_t, 515	nchannels_out, 532
MHAFilter::iir_filter_t, 515	output_partitions, 532
A, 518	output_signal_spec, 533
B, 518	output_signal_wave, 533
connector, 518	partitioned_convolution_t, 531
filter, 517	process, 532
iir_filter_t, 516	$MHAF ilter::partitioned\_convolution\_t::index \leftarrow$

_t, 534	non_empty_partitions, 547
delay, <u>535</u>	partitions, 547
index_t, 534, 535	source_channel_index, 548
source_channel_index, 535	target_channel_index, 548
target_channel_index, 535	transfer_function_t, 547
MHAFilter::polyphase_resampling_t, 535	MHAFilter::transfer_matrix_t, 549
downsampling_factor, 539	non_empty_partitions, 549
impulse_response, 539	partitions, 549
now_index, 539	MHAGetVersion_cb
polyphase resampling t, 537	PluginLoader::mhapluginloader_t, 859
read, 538	MHAGetVersion t
readable_frames, 538	mha.h, 964
ringbuffer, 539	MHAIOFile.cpp, 1014
underflow, 539	DEBUG, 1015
upsampling_factor, 539	dummy_interface_test, 1016, 1017
write, 538	ERR_IHANDLE, 1015
MHAFilter::resampling_filter_t, 540	ERR SUCCESS, 1015
fragsize, 541	ERR_USER, 1016
fragsize_validator, 541	IODestroy, 1016, 1017
resampling_filter_t, 540	IOInit, 1016
MHAFilter::smoothspec_t, 541	IOPrepare, 1016
_linphase_asym, 544	IORelease, 1016, 1017
~smoothspec_t, 543	IOSetVar, 1016, 1017
fft, 544	IOStart, 1016
fftlen, 544	IOStop, 1016
internal_fir, 544	IOStrError, 1016, 1017
minphase, 544	MAX_USER_ERR, 1016
nchannels, 544	user_err_msg, 1017
smoothspec, 543	MHAIOJack, 91
smoothspec_t, 542	MHAIOJack.cpp, 1017
spec2fir, 543	dummy_interface_test, 1019, 1020
tmp_spec, 544	ERR_IHANDLE, 1018
tmp_wave, 544	ERR_SUCCESS, 1018
window, 544	ERR_USER, 1018
MHAFilter::thirdoctave_analyzer_t, 544	IODestroy, 1019, 1020
bw_generator, 545	IOInit, 1018, 1019
cf, 545	IOPrepare, 1019
cf_generator, 545	IORelease, 1019
cfg_, 545	IOSetVar, 1019
dup, 545	IOStart, 1019
fb, 546	IOStop, 1019
get cf hz, 545	• •
<b>o</b> = = ,	IOStrError, 1019, 1020
nbands, 545	MAX_USER_ERR, 1018
nchannels, 545	user_err_msg, 1020
out_chunk, 546	MHAIOJack::io_jack_t, 550
out_chunk_im, 546	clientname, 552
process, 545	connections_in, 552
thirdoctave_analyzer_t, 545	connections_out, 552
MHAFilter::transfer_function_t, 546	delays_in, 552
impulse_response, 548	delays_out, 552
isempty, 548	fw_fragsize, 552

fw_samplerate, 552	fragsize_ratio, 557
get_all_input_ports, 552	get_all_input_ports, 556
get_all_output_ports, 552	get_all_output_ports, 556
• – – . –	· - · - ·
get_delays_in, 552	get_physical_input_ports, 556
get_delays_out, 552	get_physical_output_ports, 556
get_physical_input_ports, 552	IOProcessEvent_inner, 556
get_physical_output_ports, 552	io_jack_t, 555
io_jack_t, 551	locate, 557
patchbay, 553	mha_fragsize, 556
portnames_in, 553	mha_samplerate, 557
portnames_out, 553	patchbay, 557
ports_in_all, 553	portnames_in, 557
ports_in_physical, 553	portnames_out, 557
ports_out_all, 553	ports_in_all, 557
ports_out_physical, 553	ports_in_physical, 557
ports_parser, 553	ports_out_all, 557
prepare, 551	ports_out_physical, 557
read_get_cpu_load, 552	ports_parser, 557
read_get_scheduler, 552	prepare, 555
read_get_xruns, 552	proc_event, 556
reconnect_inports, 552	proc_handle, 556
reconnect_outports, 552	pwinner_out, 557
release, 551	read_get_cpu_load, 556
servername, 552	read_get_scheduler, 556
state_cpuload, 553	read_get_xruns, 556
state_parser, 553	reconnect_inports, 556
state_priority, 553	reconnect_outports, 556
state_scheduler, 553	release, 555
state_xruns, 553	server_fragsize, 557
MHAIOJackdb, 91	server_srate, 557
MHAIOJackdb.cpp, 1020	servername, 557
dummy_interface_test, 1021, 1022	set_locate, 556
ERR_IHANDLE, 1021	set_use_jack_transport, 556
ERR_SUCCESS, 1021	state_cpuload, 557
ERR_USER, 1021	state_parser, 557
IODestroy, 1021, 1022	state_priority, 557
IOInit, 1021, 1022	state_scheduler, 557
IOPrepare, 1021, 1022	state_xruns, 557
IORelease, 1021, 1022	use_jack_transport, 557
IOSetVar, 1021, 1022	MHAIOParser.cpp, 1023
IOStart, 1021, 1022	dummy_interface_test, 1024, 1025
IOStop, 1021, 1022	ERR_IHANDLE, 1024
IOStrError, 1021, 1022	ERR_SUCCESS, 1024
MAX_USER_ERR, 1021	ERR_USER, 1024
user_err_msg, 1022	IODestroy, 1024, 1025
MHAIOJackdb::io_jack_t, 553	IOInit, 1024
clientname, 557	IOPrepare, 1024
connections_in, 557	IORelease, 1024, 1025
connections_out, 557	IOSetVar, 1024, 1025
fail_on_async_jackerr, 557	IOStart, 1024
fail_on_async_jackerror, 556	IOStop, 1024, 1025
· <del>-</del>	•

IOStrError, 1024, 1025	portaudio_callback, 562
MAX_USER_ERR, 1024	portaudio_stream, 562
user_err_msg, 1025	proc_event, 562
MHAIOPortAudio, 91	proc_handle, 562
parserFriendlyName, 91	s_in, 562
MHAIOPortAudio.cpp, 1025	s_out, 562
dummy_interface_test, 1027, 1028	samplerate, 562
ERR_IHANDLE, 1027	start_event, 562
ERR_SUCCESS, 1027	start_handle, 562
ERR_USER, 1027	stop_event, 562
IODestroy, 1027, 1028	stop_handle, 562
IOInit, 1027	MHAIOTCP.cpp, 1028
IOPrepare, 1027	copy_error, 1031
IORelease, 1027, 1028	dummy_interface_test, 1030, 1031
IOSetVar, 1027, 1028	ERR_IHANDLE, 1030
IOStart, 1027, 1028	ERR_SUCCESS, 1030
IOStop, 1027, 1028	ERR_USER, 1030
IOStrError, 1027, 1028	IODestroy, 1030, 1031
MAX_USER_ERR, 1027	IOInit, 1030, 1031
portaudio_callback, 1027, 1028	IOPrepare, 1030, 1031
user_err_msg, 1028	IORelease, 1030, 1031
MHAIOPortAudio::device_info_t, 558	IOSetVar, 1030, 1031
defaultHighInputLatency, 559	IOStart, 1030, 1031
defaultHighOutputLatency, 559	IOStop, 1030, 1031
defaultLowInputLatency, 559	IOStrError, 1030, 1031
defaultLowOutputLatency, 559	MAX_TCP_PORT_STR, 1030
defaultSampleRate, 559	MAX_TCP_PORT, 1030
device_info_t, 559	MAX_USER_ERR, 1030
fill_info, 559	MHA_ErrorMsg2, 1030
hostApi, 559	MHA_ErrorMsg3, 1030
maxInputChannels, 559	MIN_TCP_PORT_STR, 1030
maxOutputChannels, 559	MIN_TCP_PORT, 1030
name, 559	thread_startup_function, 1031
numDevices, 559	user_err_msg, 1032
structVersion, 559	MHAIOalsa.cpp, 1012
MHAIOPortAudio::io_portaudio_t, 560	DBG, 1013
∼io_portaudio_t, 561	dummy_interface_test, 1013, 1014
cmd_prepare, 561	ERR_IHANDLE, 1013
cmd_release, 562	ERR_SUCCESS, 1013
cmd_start, 561	ERR_USER, 1013
cmd_stop, 561	IODestroy, 1013, 1014
device_index, 562	IOInit, 1013
device_index_updated, 561	IOPrepare, 1013, 1014
device_info, 562	IORelease, 1013, 1014
device_name, 562	IOSetVar, 1013, 1014
device_name_updated, 561	IOStart, 1013, 1014
fragsize, 562	IOStop, 1013, 1014
io_portaudio_t, 561	IOStrError, 1013, 1014
nchannels_in, 562	MAX_USER_ERR, 1013
nchannels_out, 562	user_err_msg, 1014
patchbay, 562	MHAInit_cb

PluginLoader::mhapluginloader_t, 859	get_my_output_ports, 572
MHAInit_t	get_ports, 572
mha.h, 964	get_srate, 572
MHAJACK_FW_STARTED	get_xruns, 572
mhajack.h, 1034	get_xruns_reset, 572
MHAJACK STARTING	inch, 574
mhajack.h, 1034	input_portnames, 574
MHAJACK STOPPED	internal_start, 573
mhajack.h, 1034	internal_start, 573
	<del>-</del> •
MHAJack, 91	jack_proc_cb, 573
get_port_capture_latency, 92	jack_xrun_cb, 573
get_port_capture_latency_int, 93	jc, 574
get_port_playback_latency, 93	jstate_prev, 574
get_port_playback_latency_int, 93	nchannels_in, 573
io, 92	nchannels_out, 573
MHAJack::client_avg_t, 563	num_xruns, 573
b_ready, 565	outch, 574
b_stopped, 565	output_portnames, 574
client_avg_t, 564	prepare, 570, 571
frag out, 565	prepare impl, 572
IOStoppedEvent, 565	proc_event, 573
io, 564	proc_handle, 573
n, 565	release, 571
name, 565	s_in, 574
	<del>_</del> :
nrep, 565	s_out, 574
pos, 565	samplerate, 573
proc, 565	set_input_portnames, 572
sn_in, 565	set_output_portnames, 572
sn_out, 565	set_use_jack_transport, 572
MHAJack::client_noncont_t, 566	start, 571
b_stopped, 567	start_event, 574
client_noncont_t, 567	start_handle, 574
frag_out, 568	stop, 571
IOStoppedEvent, 567	stop event, 574
io, 567	stop_handle, 574
name, 568	stopped, 573
pos, 567	str_error, 572
proc, 567	use jack transport, 574
sn_in, 567	MHAJack::port_t, 574
sn_out, 568	~port_t, 576
MHAJack::client_t, 568	• —
<del>-</del> ·	connect_to, 577
b_prepared, 574	dir_t, 575
client_t, 570	dir_type, 577
connect_input, 571	get_short_name, 577
connect_output, 571	input, 575
fail_on_async_jackerror, 574	iob, 577
flags, 574	jc, 577
fragsize, 573	mute, 576
get_cpu_load, 572	output, 575
get_fragsize, 571	port, 577
get_my_input_ports, 572	port_t, 575, 576

read, 576	hz2bark, 97
write, 576	hz2bark_analytic, 97
MHAKernel, 93	hz2erb, 97
algo_comm_safe_cast, 94	hz2erb_glasberg1990, 97
MHAKernel::algo_comm_class_t, 578	hz2hz, 96
~algo_comm_class_t, 579	hz2khz, 97
ac, 581	hz2log, 97
algo_comm_class_t, 579	hz2octave, 97
algo_comm_id_string, 581	hz2third_octave, 97
algo_comm_id_string_len, 581	inv scale, 98
get_c_handle, 579	MHAOvlFilter::ShapeFun, 98
get_entries, 580	expflt, 99
get_error, 580	gauss, 99
get_var, 580	hann, 99
get_var_float, 580	linear, 99
get_var_int, 580	rect, 98
insert_var, 579	MHAOvIFilter::band_descriptor_t, 587
insert_var_float, 579	cf, 588
insert_var_int, 579	cf_h, 588
is var, 579	cf_l, 588
local get entries, 580	ef_h, 588
local_get_var, 580	ef I, 588
	<u>_</u> ;
local_insert_var, 580	high_side_flat, 588
local_is_var, 580	low_side_flat, 588
local_remove_ref, 580	MHAOvlFilter::barkscale, 95
local_remove_var, 580	vbark, 96
remove_ref, 579	vfreq, 96
remove_var, 579	MHAOvlFilter::barkscale::bark2hz_t, 588
size, 580	~bark2hz_t, 589
vars, 581	bark2hz_t, 589
MHAKernel::comm_var_map_t, 581	MHAOvlFilter::barkscale::hz2bark_t, 589
has_key, 581	~hz2bark_t, 590
MHAMultiSrc, 94	hz2bark_t, 590
MHAMultiSrc::base_t, 582	MHAOvlFilter::fftfb_ac_info_t, 590
ac, 583	bwv, 591
base_t, 583	cLTASS, 591
select_source, 583	cfv, 590
MHAMultiSrc::channel_t, 583	efv, 590
channel, 583	fftfb_ac_info_t, 590
name, 583	insert, 590
MHAMultiSrc::channels_t, 584	MHAOvIFilter::fftfb_t, 591
channels_t, 584	$\sim$ fftfb_t, 592
MHAMultiSrc::spectrum_t, 585	apply_gains, 592
spectrum_t, 585	bin1, 593
update, 585	bin2, 593
MHAMultiSrc::waveform_t, 586	fftfb_t, 592
update, 587	fftlen, 593
waveform_t, 587	get_fbpower, 592
MHAOvlFilter, 94	get_fbpower_db, 592
scale_fun_t, 95	get_fftlen, 593
MHAOvlFilter::FreqScaleFun, 96	get_ltass_gain_db, 593

samplingrate, 593	filter_analytic, 603
shape, 593	imagfb, 603
vbin1, 593	overlap_save_filterbank_analytic_t, 603
vbin2, 593	MHAOvlFilter::overlap_save_filterbank_t, 603
w, 593	channelconfig_out_, 605
MHAOvlFilter::fftfb_vars_t, 594	get_channelconfig, 605
cLTASS, 596	overlap_save_filterbank_t, 605
cf, 596	MHAOvlFilter::overlap_save_filterbank_t
ef, 596	::vars_t, 605
f, 596	fftlen, 606
fail_on_nonmonotonic, 596	irswnd, 606
fail_on_unique_bins, 596	phasemodel, 606
fftfb_vars_t, 595	vars_t, 606
fscale, 595	MHAOvlFilter::scale_var_t, 607
ftype, 596	add_fun, 608
normalize, 596	funs, 608
ovltype, 595	get fun, 608
plateau, 595	get name, 608
shapes, 596	hz2unit, 608
MHAOvlFilter::fscale_bw_t, 597	names, 608
bw, 598	scale_var_t, 608
bw_hz, 598	unit2hz, 608
fscale_bw_t, 598	MHAPLATFORM
— — ·	
get_bw_hz, 598	mha_parser.cpp, 985
update_hz, 598	MHAPLUGIN_CALLBACKS_PREFIX
updater, 598	The openMHA Plugins (programming in-
MHAOvlFilter::fscale_t, 598	terface), 8
f, 599	MHAPLUGIN_CALLBACKS
f_hz, 599	The openMHA Plugins (programming in-
fscale_t, 599	terface), 8
get_f_hz, 599	MHAPLUGIN_DOCUMENTATION_PREFIX
unit, 599	mha_plugin.hh, 991
update_hz, 599	MHAPLUGIN_DOCUMENTATION
updater, 599	The openMHA Plugins (programming in-
MHAOvIFilter::fspacing_t, 600	terface), 9
bands, 601	MHAPLUGIN_INIT_CALLBACKS_PREFIX
cf2bands, 601	mha_plugin.hh, 991
ef2bands, 601	MHAPLUGIN_INIT_CALLBACKS
equidist2bands, 601	mha_plugin.hh, 991
fail_on_nonmonotonic_cf, 601	MHAPLUGIN_OVERLOAD_OUTDOMAIN
fail_on_unique_fftbins, 601	altplugs.cpp, 941
fs_, 601	mha_generic_chain.h, 979
fspacing_t, 601	split.cpp, 1047
get_cf_fftbin, 601	wave2spec.cpp, 1051
get_cf_hz, 601	MHAPLUGIN_PROC_CALLBACK_PREFIX
get_ef_hz, 601	mha_plugin.hh, 991
nbands, 601	MHAPLUGIN_PROC_CALLBACK
nfft_, 601	mha_plugin.hh, 991
symmetry_scale, 601	MHAParser, 100
MHAOvlFilter::overlap_save_filterbank_←	all_dump, 103
analytic_t, 602	all_ids, 103

c_parse_cmd_t, 103	query_readfile, 614
c_parse_err_t, 103	query_savefile, 614
cfg_dump, 103	query savefile compact, 615
cfg_dump_short, 103	query_saveme_compact, 615
commentate, 103	• •
•	query_subst, 615
entry_map_t, 103	query_type, 614
envreplace, 104	query_val, 614
get_precision, 103	query_version, 615
mon_dump, 103	readaccess, 617
opact_map_t, 103	repl_list, 617
opact_t, 103	repl_list_t, 612
query_map_t, 103	rm_parent_on_remove, 616
query_t, 103	set_help, 616
strreplace, 103	set_node_id, 615
trim, 103	thefullname, 617
MHAParser::StrCnv, 104	valuechanged, 616
bracket_balance, 106	writeaccess, 616
num_brackets, 105	MHAParser::base_t::replace_t, 618
str2val, 106, 107	a, 618
str2val $<$ mha real t $>$ , 106	b, 618
val2str, 107, 108	get_a, 618
MHAParser::base_t, 609	get_b, 618
$\sim$ base_t, 612	replace, 618
activate_query, 616	replace_t, 618
add_parent_on_insert, 616	MHAParser::bool_mon_t, 619
add_replace_pair, 616	bool_mon_t, 619
base_t, 612	data, 620
data_is_initialized, 617	
<del>_</del> _	query_type, 620
fullname, 616	query_val, 620
help, 617	MHAParser::bool_t, 620
id_str, 617	bool_t, 622
nested_lock, 617	data, 622
notify, 616	op_setval, 622
op_query, 613	query_type, 622
op_setval, 613	query_val, 622
op_subparse, 613	MHAParser::c_ifc_parser_t, 623
operators, 617	$\sim$ c_ifc_parser_t, 624
oplist, 616	c_ifc_parser_t, 624
parent, 617	c_parse_cmd, 625
parse, 612, 613	c_parse_err, 625
prereadaccess, 617	libdata, 625
queries, 617	liberr, 625
query_addsubst, 615	modulename, 625
query_cmds, 615	op_query, 624
query_dump, 613	op_setval, 624
query_entries, 613	op_subparse, 624
query_help, 615	ret_size, 625
query_id, 615	retv, 625
query_listids, 615	set_parse_cb, 624
query_perm, 614	test error, 624
query_range, 614	MHAParser::commit_t
query_range, 014	IVITAFAISEICOIIIIIIIL_L

commit_t, 627	get_value, 643
extern_connector, 627	index, 644
MHAParser::commit_t< receiver_t >, 625	keyword_list_t, 642
MHAParser::complex_mon_t, 627	set entries, 643
complex_mon_t, 628	set_index, 643
data, 629	set_value, 643
query_type, 628	size_t, 642
query_val, 628	validate, 643
MHAParser::complex_t, 629	MHAParser::kw t, 644
complex_t, 630	data, 647
data, 631	isval, 646
op_setval, 630	kw_t, 645, 646
query_type, 630	op_setval, 646
query_val, 630	query_range, 646
MHAParser::entry t, 631	query_type, 646
entry, 631	query_val, 646
entry_t, 631	set range, 646
name, 631	validate, 646
MHAParser::expression_t, 632	MHAParser::mcomplex_mon_t, 647
expression_t, 632	data, 648
lval, 632	mcomplex_mon_t, 648
op, 632	query_type, 648
rval, 632	query_val, 648
MHAParser::float_mon_t, 633	MHAParser::mcomplex_t, 649
— — — ·	data, 650
data, 634	•
float_mon_t, 633	mcomplex_t, 650
query_type, 634	op_setval, 650
query_val, 634	query_type, 650 query_val, 650
MHAParser::float_t, 634	• • •
data, 637	MHAParser::mfloat_mon_t, 651
float_t, 636	data, 652
op_setval, 636	mfloat_mon_t, 651
query_type, 636	query_type, 652
query_val, 636	query_val, 652
MHAParser::int_mon_t, 637	MHAParser::mfloat_t, 652
data, 639	data, 655
int_mon_t, 638	mfloat_t, 654
query_type, 638	op_setval, 654
query_val, 638	query_type, 654
MHAParser::int_t, 639	query_val, 654
data, 641	MHAParser::mhaconfig_mon_t, 655
int_t, 640	channels, 656
op_setval, 641	domain, 656
query_type, 641	fftlen, 656
query_val, 641	fragsize, 656
MHAParser::keyword_list_t, 641	mhaconfig_mon_t, 656
add_entry, 643	srate, 657
empty_string, 644	update, 656
entries, 644	wndlen, 656
get_entries, 643	MHAParser::mhapluginloader_t, 657
get_index, 643	$\sim$ mhapluginloader_t, 658

ac_, 659	srcfile, 667
bookkeeping, 659	srcline, 667
cf_in_, 659	MHAParser::range_var_t, 668
cf_out_, 659	check_low, 670
connector, 659	check_range, 670
get_cfin, 659	check_up, 670
get_cfout, 659	low_incl, 670
get_last_name, 659	low_limit, 670
last_name, 659	query_range, 669
load_plug, 659	range_var_t, 669
mhapluginloader_t, 658	set_range, 669
parent_, 659	up_incl, 670
plug, 659	up_limit, 670
plugname, 659	validate, 669, 670
plugname_name_, 659	MHAParser::string_mon_t, 671
prefix , 659	data, 672
prepare, 658	query_type, 672
process, 658, 659	query_val, 672
release, 658	string_mon_t, 671
MHAParser::mint_mon_t, 660	MHAParser::string t, 672
— — ·	<u>5</u> _ ·
data, 661	data, 674
mint_mon_t, 660	op_setval, 674
query_type, 661	query_type, 674
query_val, 661	query_val, 674
MHAParser::monitor_t, 661	string_t, 674
monitor_t, 662	MHAParser::variable_t, 675
op_query, 662	locked, 676
query_dump, 662	op_setval, 676
query_perm, 662	query_perm, 676
MHAParser::parser_t, 663	setlock, 676
~parser_t, 665	variable_t, 676
entries, 667	MHAParser::vcomplex_mon_t, 677
force_remove_item, 665	data, 679
id_string, 667	query_type, 679
insert_item, 665	query_val, 679
last_errormsg, 667	vcomplex_mon_t, 678
op_query, 666	MHAParser::vcomplex_t, 679
op_setval, 666	data, 681
op_subparse, 666	op_setval, 681
parser_t, 664	query_type, 681
query_dump, 666	query_val, 681
query_entries, 666	vcomplex_t, 681
query_listids, 667	MHAParser::vfloat_mon_t, 682
query_readfile, 666	data, 683
query_savefile, 666	query_type, 683
query_savefile_compact, 667	query_val, 683
query_savemons, 667	vfloat_mon_t, 683
query_type, 666	MHAParser::vfloat_t, 684
query_val, 667	data, 686
remove_item, 665, 666	op_setval, 685
set_id_string, 667	query_type, 685
<del>-</del>	

query_val, 685	cleanup_unused_cfg, 703
vfloat_t, 685	config_t, 701
MHAParser::vint_mon_t, 686	last_config, 701
data, 687	poll_config, 701
query_type, 687	push_config, 701
query_val, 687	remove_all_cfg, 703
vint_mon_t, 687	MHAPlugin::config_t< runtime_cfg_t >, 698
MHAParser::vint_t, 688	MHAPlugin::plugin_t
data, 690	$\sim$ plugin_t, 705
op_setval, 689	ac, 707
query_type, 689	input_cfg, 706
query_val, 689	input_cfg_, 707
vint_t, 689	is_prepared, 706
MHAParser::vstring_mon_t, 690	is_prepared_, 707
data, 691	mhaconfig_in, 707
query_type, 691	mhaconfig_out, 707
query_val, 691	output_cfg, 707
vstring_mon_t, 691	output_cfg_, 707
MHAParser::vstring_t, 692	plugin_t, 705
data, 693	prepare, 705
op_setval, 693	prepare_, 706
query_type, 693	release, 706
query_val, 693	release_, 706
vstring_t, 693	tftype, 707
MHAParser::window_t, 694	MHAPlugin::plugin_t< runtime_cfg_t >, 703
get_type, 696	MHAPlugin_Resampling, 109
get_type, 600 get_window, 695, 696	MHAPlugin_Resampling::resampling_if_←
user, 696	t, 708
window_t, 695	algo, 709
wnd_bartlett, 695	chain, 709
wnd_blackman, 695	fragsize, 709
wnd_blackman, 655 wnd_hamming, 695	irslen_inner2outer, 709
wnd_hann, 695	irslen_outer2inner, 709
wnd_rect, 695	nyquist ratio, 709
wnd_rect, 695 wnd_user, 695	plugloader, 709
wtype, 696	prepare, 709
2, ,	process, 709
wtype_t, 695	release, 709
MHAPlugin, 108	,
MHAPlugin::cfg_chain_t	resampling_if_t, 709
~cfg_chain_t, 698	srate, 709
cfg_chain_t, 698	MHAPlugin_Resampling::resampling_t, 710
data, 698	inner2outer_resampling, 711
next, 698	inner_fragsize, 711
not_in_use, 698	inner_signal, 711
MHAPlugin::cfg_chain_t< runtime_cfg_t >,	inner_srate, 711
697	nchannels_in, 711
MHAPlugin::config_t	nchannels_out, 711
∼config_t, 701	outer2inner_resampling, 711
cfg, 703	outer_fragsize, 710
cfg_chain, 703	outer_srate, 711
cfg_chain_current, 703	output_signal, 711

plugloader, 711	copy_output_wave, 724
process, 710	delay, <mark>726</mark>
resampling_t, 710	framework_thread_priority, 726
MHAPlugin_Split, 109	framework_thread_scheduler, 725
INVALID_THREAD_PRIORITY, 110	patchbay, 725
MHAPlugin_Split::domain_handler_t, 711	prepare_, <mark>724</mark>
$\sim$ domain_handler_t, 713	process, 724
deallocate_domains, 714	release_, 724
domain_handler_t, 713	signal_out, 725
get_signal, 715	spec_out, 726
operator=, 713	split_t, 724
process, 715	thread_platform, 725
processor, 716	trigger_processing, 724
put_signal, 714	update, 724
set_input_domain, 713	wave_out, 726
set_output_domain, 713	worker_thread_priority, 725
spec_in, 716	worker_thread_scheduler, 725
spec_out, 716	MHAPlugin_Split::splitted_part_t, 726
wave_in, 716	~splitted_part_t, 728
wave_out, 716	collect_result, 730
MHAPlugin_Split::dummy_threads_t, 716	domain, 730
catch_thread, 717	operator=, 729
dummy_threads_t, 717	parse, 729
kick_thread, 717	plug, 730
MHAPlugin_Split::posix_threads_t, 718	prepare, 729
~posix_threads_t, 720	release, 729
attr, 721	splitted_part_t, 728
catch_condition, 721	thread, 731
catch_thread, 720	trigger_processing, 730
current_thread_priority, 720	MHAPlugin_Split::thread_platform_t, 731
current_thread_scheduler, 720	~thread_platform_t, 732
kick_condition, 720	catch_thread, 733
kick_thread, 720	kick_thread, 733
kicked, 721	operator=, 733
main, 720	processor, 733
mutex, 720	thread_platform_t, 732
posix_threads_t, 719	MHAPlugin_Split::uni_processor_t, 734
priority, 721	~uni_processor_t, 734
processing_done, 721	process, 735
scheduler, 721	MHAPluginCategory_t
termination_request, 721	mha.h, 965
thread, 721	MHAPluginDocumentation_t
thread_start, 720	mha.h, 965
MHAPlugin_Split::split_t, 722	MHAPrepare_cb
~split_t, 724	PluginLoader::mhapluginloader_t, 859
algos, 725	MHAPrepare_t
chains, 726	mha.h, 964
channels, 725	MHAProc_spec2spec_cb
clear_chains, 724	PluginLoader::mhapluginloader_t, 859
collect_result, 724	MHAProc_spec2spec_t
copy_output_spec, 724	mha.h, 965

MHAProc_spec2wave_cb	pos, 743
PluginLoader::mhapluginloader_t, 860	process, 742
MHAProc_spec2wave_t	MHASignal::delay_wave_t, 743
mha.h, 965	$\sim$ delay_wave_t, 744
MHAProc_wave2spec_cb	buffer, 744
PluginLoader::mhapluginloader_t, 859	delay, 744
MHAProc_wave2spec_t	delay_wave_t, 744
mha.h, 965	pos, 744
MHAProc_wave2wave_cb	process, 744
PluginLoader::mhapluginloader_t, 859	MHASignal::doublebuffer t, 744
MHAProc_wave2wave_t	~doublebuffer_t, 746
mha.h, 965	ch, 747
MHARelease cb	doublebuffer_t, 745
PluginLoader::mhapluginloader_t, 859	inner_in, 747
MHARelease t	inner out, 747
mha.h, 964	inner_process, 746
MHASet cb	k inner, 747
PluginLoader::mhapluginloader_t, 860	k_outer, 747
MHASet_t	min, 746
mha.h, 964	outer out, 747
	<u> </u>
MHASignal, 110	outer_process, 746
copy_permuted, 116	this_outer_out, 747
kth_smallest, 113	MHASignal::fft_t, 747
limit, 113	$\sim$ fft_t, 748
mean, 115	backward, 749
median, 114	backward_scale, 749
quantile, 115	buf_in, 750
saveas_mat4, 115, 116	buf_out, 750
scale, 113	fft_t, 748
signal_counter, 117	fftw_plan_fft, 750
MHASignal::async_rmslevel_t, 738	fftw_plan_ifft, 750
async_rmslevel_t, 739	fftw_plan_spec2wave, 750
filled, 740	fftw_plan_wave2spec, 750
peaklevel, 740	forward, 748
pos, 740	forward_scale, 749
process, 740	n_im, 750
rmslevel, 739	n_re, 750
MHASignal::delay_spec_t, 740	nfft, 750
$\sim$ delay_spec_t, 741	scale, 750
buffer, 741	sort_fftw2spec, 749
delay, 741	sort_spec2fftw, 749
delay_spec_t, 741	spec2wave, 748
pos, 741	spec2wave_scale, 749
process, 741	wave2spec, 748
MHASignal::delay_t, 741	wave2spec_scale, 749
$\sim$ delay_t, 742	MHASignal::hilbert_fftw_t, 750
buffer, 743	buf_c_in, 751
channels, 743	buf_c_out, 751
delay_t, 742	buf_r_in, 751
delays, 743	buf_r_out, 751
inspect, 743	hilbert, 751
	•

hilbert_fftw_t, 751	operator=, 760
n, 751	rdata, 765
p1, 751	real, 761–763
p2, 751	size, 761
sc, 751	write, 764
MHASignal::hilbert_t, 751	MHASignal::minphase_t, 765
~hilbert_t, 752	minphase_t, 766
h, 752	operator(), 766
hilbert_t, 752	phase, 767
operator(), 752	MHASignal::quantizer_t, 767
MHASignal::loop_wavefragment_t, 753	downscale, 768
add, 754	limit, 768
b_loop, 756	operator(), 768
get_mapping, 755	quantizer_t, 767
input, 754	up_limit, 768
intern_level, 756	upscale, 768
is_playback_active, 756	MHASignal::ringbuffer_t, 768
level_mode_t, 754	contained frames, 770
locate_end, 756	discard, 771
loop_wavefragment_t, 754	next_read_frame_index, 771
mute, 754	next_write_frame_index, 772
peak, 754	ringbuffer_t, 770
playback, 755, 756	value, 770
playback_channels, 756	write, 771
playback_mode_t, 754	MHASignal::schroeder_t, 772
pos, 756	down, 774
relative, 754	groupdelay_t, 773
replace, 754	identity, 775
rewind, 756	log_down, 775
rms, 754	log_up, 775
rms_limit40, 754	schroeder_t, 774
set_level_db, 756	sign_t, 774
set_level_lin, 756	up, 774
MHASignal::matrix_t, 757	MHASignal::spectrum_t, 775
$\sim$ matrix_t, 760	$\sim$ spectrum_t, 777
cdata, 765	copy, 778
complex_ofs, 765	copy_channel, 779
dimension, 761	export_to, 779
get_cdata, 765	operator(), 778
get_comm_var, 760	operator[], 778
get_index, 764	scale, 779
get_nelements, 761	scale_channel, 780
get_nreals, 764	spectrum_t, 777
get_rdata, 765	value, 778
imag, 762–764	MHASignal::stat_t, 780
is_same_size, 761	mean, <mark>781</mark>
iscomplex, 761	mean_std, 781
matrix_t, 759, 760	n, 781
nelements, 765	push, 781
numbytes, 764	stat_t, 781
operator(), 762–764	sum, 781

sum2, 781	MHAStrError_t
MHASignal::subsample_delay_t, 781	mha.h, 965
last_complex_bin, 783	MHATableLookup, 117
phase_gains, 783	MHATableLookup::linear_table_t, 799
process, 783	~linear_table_t, 801
subsample_delay_t, 782	add_entry, 802
MHASignal::uint_vector_t, 784	clear, 802
$\sim$ uint_vector_t, 785	interp, 801
data, 786	len, 803
get_length, 786	linear_table_t, 801
getdata, 786	lookup, 801
length, 786	prepare, 802
numbytes, 786	scalefac, 803
operator=, 785	set_xmax, 802
operator==, 785	set_xmin, 801
operator[], 786	vec_y, 803
uint_vector_t, 785	vy, 803
write, 786	xmax, 803
MHASignal::waveform_t, 787	xmin, 803
~waveform_t, 789	MHATableLookup::table_t, 803
assign, 793	$\sim$ table_t, 804
assign_channel, 793	clear, 804
assign_frame, 793	interp, 804
copy, 794	lookup, 804
copy_channel, 794	table_t, 804
copy_from_at, 794	MHATableLookup::xy_table_t, 805
export_to, 795	add_entry, 807
get_size, 797	clear, 807
limit, 795	get_xlimits, 808
operator(), 790, 791	interp, 806
operator=, 790	lookup, 806
operator[], 790	mXY, 808
power, 795	set_xfun, 807
powspec, 796	set_xyfun, 808
scale, 796	set_yfun, 808
scale_channel, 796	xfun, 808
scale_frame, 797	xy_table_t, 806
sum, 791, 792	xyfun, 808
sum_channel, 792	yfun, 808
sumsqr, 792	MHAWindow, 117
value, 790, 791	bartlett, 118
waveform_t, 789	blackman, 119
MHASndFile, 117	hamming, 119
MHASndFile::sf_t, 797	hanning, 119
$\sim$ sf t, 798	rect, 118
~Si_t, 798 sf, 798	•
•	MHAWindow::bartlett_t, 809
sf_t, 798	bartlett_t, 809
MHASndFile::sf_wave_t, 798	MHAWindow::base_t, 810
sf_wave_t, 799	base_t, 810, 811
MHAStrError_cb	operator(), 811
PluginLoader::mhapluginloader_t, 860	ramp_begin, 811

ramp_end, 811	matrixmixer::matmix_t, 389
MHAWindow::blackman_t, 812	ci, 390
blackman_t, 812	co, 390
MHAWindow::fun_t, 813	matmix_t, 390
fun_t, 813	mixer, 390
MHAWindow::hamming_t, 814	patchbay, 390
hamming_t, 815	prepare, 390
MHAWindow::hanning_t, 815	process, 390
hanning_t, 816	update_m, 390
MHAWindow::rect_t, 816	max
rect_t, 817	spec2wave.cpp, 1043
MHAWindow::user_t, 817	Vector and matrix processing toolbox, 54
user_t, 818	max_clipped
MIN_TCP_PORT_STR	softclipper_variables_t, 895
MHAIOTCP.cpp, 1030	max_fill_count
MIN_TCP_PORT	mha_fifo_t, 434
MHAIOTCP.cpp, 1030	max frames
MIN	acsave::cfg_t, 161
mha_defs.h, 968	max_lag
mXY	doasym_feature_extraction, 277
MHATableLookup::xy_table_t, 808	max_level_difference
main	dc::dc_t, 249
analysemhaplugin.cpp, 942	dc::dc_vars_t, 251
browsemhaplugins.cpp, 943	max_p_ind_name
generatemhaplugindoc.cpp, 955	doasvm_classification, 273
MHAPlugin_Split::posix_threads_t, 720	max_pool_ind_name
mha.cpp, 960	acPooling_wave, 154
testalsadevice.c, 1048	max_q
make_friendly_number	timoConfig, 918
MHAFilter, 88	max_q_AC
mhajack.cpp, 1032	timo_AC, 913
make_friendly_number_by_limiting	max_val
nlms_wave.cpp, 1038	timoConfig, 918
prediction_error.cpp, 1040	max_val_AC
make_or_replace_var	timo_AC, 913
ac2lsl::cfg_t, 127	maxInputChannels
mapping	MHAIOPortAudio::device_info_t, 559
addsndfile::addsndfile_if_t, 174	maxOutputChannels
coherence::vars_t, 234	MHAIOPortAudio::device_info_t, 559
matmix_t	maxabs
matrixmixer::matmix_t, 390	Vector and matrix processing toolbox, 52,
matrix_t	53
MHASignal::matrix_t, 759, 760	maxframe
matrixmixer, 81	acsave::save_var_t, 163
matrixmixer.cpp, 959	maxgain
matrixmixer::cfg_t, 387	dc_simple::dc_t, 259
cfg_t, 388	dc_simple::dc_vars_t, 261
m, 388	DynComp::dc_afterburn_rt_t, 286
process, 388	DynComp::dc_afterburn_vars_t, 290
sout, 388	maximum_reader_xruns_in_succession_←
wout, 388	before_stop

mbo drifter fife + 400	MHA VEDSIONI MINIOD 060
mha_drifter_fifo_t, 422	MHA_VERSION_MINOR, 962
maximum_writer_xruns_in_succession_←	MHA_VERSION_RELEASE, 963
before_stop	MHA_VERSION_STRING, 963
mha_drifter_fifo_t, 422	MHA_VERSION, 963
maxlen	MHA_WAVEFORM, 963
plingploing::if_t, 842	MHA_XSTRF, 962
maxlen_	MHADestroy_t, 964
plingploing::plingploing_t, 844	MHAGetVersion_t, 964
mcomplex_mon_t	MHAInit_t, 964
MHAParser::mcomplex_mon_t, 648	MHAPluginCategory_t, 965
mcomplex_t	MHAPluginDocumentation_t, 965
MHAParser::mcomplex_t, 650	MHAPrepare_t, 964
mean	MHAProc_spec2spec_t, 965
MHA_AC::stat_t, 404	MHAProc_spec2wave_t, 965
MHASignal, 115	MHAProc_wave2spec_t, 965
MHASignal::stat_t, 781	MHAProc_wave2wave_t, 965
mean_std	MHARelease_t, 964
MHASignal::stat_t, 781	MHASet_t, 964
median	MHAStrError_t, 965
MHASignal, 114	mha_domain_t, 964
mfloat_mon_t	mha_algo_comm.cpp, 965
MHAParser::mfloat_mon_t, 651	AC_DIM_MISMATCH, 965
mfloat_t	AC_INVALID_HANDLE, 965
MHAParser::mfloat_t, 654	AC_INVALID_NAME, 965
mha	AC_INVALID_OUTPTR, 965
speechnoise_t, 900	AC_STRING_TRUNCATED, 965
mha.cpp, 960	AC_SUCCESS, 965
main, 960	AC_TYPE_MISMATCH, 965
mhamain, 960	algo_comm_default, 965
mha.h, 960	mha_algo_comm.h, 965
algo_comm_t, 964	mha_algo_comm.hh, 967
MHA AC CHAR, 964	ALGO_COMM_ID_STR, 967
MHA AC DOUBLE, 964	algo_comm_default, 967
MHA_AC_FLOAT, 964	mha alloc
MHA AC INT, 964	mha ruby.cpp, 993
MHA AC MHACOMPLEX, 964	mha_audio_descriptor_t, 406
MHA_AC_MHAREAL, 964	cf, 407
MHA AC UNKNOWN, 964	chdir, 407
MHA_AC_USER, 964	dt, 407
MHA AC VEC FLOAT, 964	is complex, 407
MHA CALLBACK TEST PREFIX, 962	n_channels, 407
MHA CALLBACK TEST, 962	n_freqs, 407
MHA DOMAIN MAX, 964	n samples, 407
MHA_DOMAIN_UNKNOWN, 964	mha_audio_t, 407
MHA RELEASE VERSION STRING,	cdata, 408
963	descriptor, 408
MHA SPECTRUM, 964	rdata, 408
MHA_STRUCT_SIZEMATCH, 963	mha_channel_info_t, 408
MHA_STRF, 962	dir, 409
MHA_VERSION_BUILD, 963	id, 409
MHA VERSION MAJOR, 962	idstr, 409
	เนอน, ฯบฮ

peaklevel, 409	mha_direction_t, 416
side, 409	azimuth, 416
mha_complex	distance, 417
Complex arithmetics in the openMHA, 58	elevation, 416
mha_complex_t, 410	mha_domain_t
im, 410	mha.h, 964
re, 410	mha_drifter_fifo_t
mha_dblbuf_t	desired fill count, 421
$\sim$ mha dblbuf t, 413	get_available_space, 420
delay, 415	get_des_fill_count, 420
fifo size, 415	get_fill_count, 420
get_delay, 413	get_min_fill_count, 421
get_fifo_size, 413	maximum_reader_xruns_in_succession
get_inner_error, 413	_before_stop, 422
get_inner_size, 413	maximum_writer_xruns_in_succession↔
get input channels, 413	before stop, 422
get_input_fifo_fill_count, 413	mha drifter fifo t, 419
get_input_fifo_space, 413	minimum_fill_count, 421
get_outer_size, 413	null_data, 422
get_output_channels, 413	read, 420
get_output_fifo_fill_count, 413	reader_started, 421
get_output_fifo_space, 413	reader_xruns_in_succession, 422
inner_error, 416	reader_xruns_since_start, 422
inner_size, 415	reader_xruns_total, 422
input, 414	starting, 421
input_channels, 415	startup_zeros, 423
input_fifo, 415	stop, 421
mha_dblbuf_t, 412	write, 419
outer_error, 416	writer started, 421
outer_size, 415	writer_xruns_in_succession, 422
output, 414	writer_xruns_since_start, 422
output channels, 415	writer_xruns_total, 422
output_fifo, 415	mha_drifter_fifo_t< T >, 417
process, 414	mha_errno.c, 969
provoke_inner_error, 414	cstr_strerror, 970
provoke_uniter_error, 414	mha_set_user_error, 970
value_type, 412	mha strerror, 970
mha dblbuf $t < FIFO >$ , 410	next_except_str, 970
mha_debug	STRLEN, 970
Error handling in the openMHA, 28	mha_errno.h, 970
mha_defs.h, 967	MHA ERR INVALID HANDLE, 971
MHA_FUN, 968	MHA ERR NULL, 971
	MHA_ERR_NOLL, 971 MHA_ERR_SUCCESS, 971
declspec, 968	MHA_ERR_JUCCESS, 971 MHA_ERR_UNKNOWN, 971
CHECK VAR 968	
CHECK_VAR, 968	MHA_ERR_USER, 971
M_PI, 968	MHA_ERR_VARFMT, 971
MAX, 969	MHA_ERR_VARRANGE, 971
MHA_EAR_LEFT, 969	mha_set_user_error, 971
MHA_EAR_MAX, 969	mha_strerror, 971
MHA_EAR_RIGHT, 969	mha_error.cpp, 971
MIN, 968	mha_error.hh, 972

Getmsg, 973	~mha_fifo_posix_threads_t, 429
mha_error_helpers, 83	aquire_mutex, 429
digits, 83	decrease_condition, 430
snprintf_required_length, 83	decrement, 429
mha_event_emitter.h, 973	increase_condition, 430
mha_events.cpp, 973	increment, 429
mha_events.h, 973	mha_fifo_posix_threads_t, 429
mha_exit_request	mutex, 430
mha_ruby.cpp, 993	release_mutex, 429
mha fft	wait_for_decrease, 429
timoConfig, 917	wait_for_increase, 429
mha_fft_backward	mha_fifo_t
Fast Fourier Transform functions, 70	~mha_fifo_t, 432
mha_fft_backward_scale	buf, 434
Fast Fourier Transform functions, 71	buf_uses_placement_new, 434
	clear, 434
mha_fft_forward	·
Fast Fourier Transform functions, 70	get_available_space, 433
mha_fft_forward_scale	get_fill_count, 433
Fast Fourier Transform functions, 71	get_max_fill_count, 433
mha_fft_free	max_fill_count, 434
Fast Fourier Transform functions, 67	mha_fifo_t, 432
mha_fft_new	operator=, 433
Fast Fourier Transform functions, 67	read, 433
mha_fft_spec2wave	read_ptr, 434
Fast Fourier Transform functions, 69	value_type, 432
mha_fft_spec2wave_scale	write, 432
Fast Fourier Transform functions, 72	write_ptr, 434
mha_fft_t	$mha\_fifo\_t < T >, 430$
Fast Fourier Transform functions, 67	mha_fifo_thread_guard_t, 434
mha_fft_wave2spec	$\sim$ mha_fifo_thread_guard_t, 435
Fast Fourier Transform functions, 68	mha_fifo_thread_guard_t, 435
mha_fft_wave2spec_scale	sync, 435
Fast Fourier Transform functions, 71	mha_fifo_thread_platform_implementation_t
mha_fftfb.cpp, 973	mha_fifo.h, 976
BARKSCALE_ENTRIES, 975	mha_fifo_thread_platform_t, 435
filtershapefun, 975	$\sim$ mha_fifo_thread_platform_t, 436
mha_fftfb.hh, 975	aquire_mutex, 437
mha_fifo.cpp, 976	decrement, 437
mha_fifo.h, 976	increment, 437
mha_fifo_thread_platform_implementation <	→ mha_fifo_thread_platform_t, 436
_t, 976	operator=, 438
mha_fifo_lw_t	release_mutex, 437
$\sim$ mha_fifo_lw_t, 426	wait for decrease, 437
error, 428	wait_for_increase, 437
mha_fifo_lw_t, 426	mha_filter.cpp, 976
read, 427	diff_coeffs, 977
set_error, 427	mha_filter.hh, 977
sync, 427	mha_fragsize
write, 426	MHAIOJackdb::io_jack_t, 556
mha_fifo_lw_t< T >, 425	mha free
mha_fifo_posix_threads_t, 428	mha_ruby.cpp, 993
— — — — <i>'</i>	— , , , , , ,

mha_freelib	mha_getenv, 981
mha_os.h, 982	mha_library_paths, 981
mha_freelib_success	mha_os.h, 981
mha_os.h, 982	FMTsz, 983
mha_generic_chain.cpp, 978	list_dir, 983
mhaconfig_compare, 979	MHA_RESOLVE_CHECKED, 983
mha_generic_chain.h, 979	MHA_RESOLVE, 983
MHAPLUGIN_OVERLOAD_OUTDOM $\hookleftarrow$	mha_freelib, 982
AIN, 979	mha_freelib_success, 982
mha_getenv	mha_getenv, 983
mha_os.cpp, 981	mha_getlibfun, 982
mha_os.h, 983	mha_getlibfun_checked, 983
mha_getlibfun	mha_hton, 983, 984
mha_os.h, 982	mha_lib_extension, 983
mha_getlibfun_checked	mha_libhandle_t, 983
mha_os.h, 983	mha_library_paths, 983
mha_hton	mha loadlib, 982
mha_os.h, 983, 984	mha_loadlib_error, 983
mha_io_ifc.h, 979	mha_msleep, 983
IODestroy t, 980	mha_ntoh, 984
IOInit t, 980	mha_parse
IOPrepare_t, 980	mha_ruby.cpp, 993
IOProcessEvent_t, 980	mha_parser.cpp, 984
IORelease_t, 980	MHAPLATFORM, 985
IOSetVar_t, 980	parse_1_complex, 985
IOStart_t, 980	parse_1_float, 985
IOStartedEvent_t, 980	write_float, 985
IOStop_t, 980	mha_parser.hh, 985
IOStoppedEvent_t, 980	DEFAULT_RETSIZE, 989
IOStrError_t, 980	insert_member, 989
mha_lib_extension	mha platform tic
mha os.h, 983	mha_profiling.c, 992
mha_libhandle_t	mha_profiling.h, 993
mha_os.h, 983	mha_platform_tictoc_t
mha_library_paths	mha_profiling.h, 993
mha os.cpp, 981	_, _ ,
mha_os.h, 983	mha_platform_toc
<del>_</del>	mha_profiling.c, 992
mha_loadlib	mha_profiling.h, 993
mha_os.h, 982 mha loadlib error	mha_plugin.hh, 989
	attribute, 991
mha_os.h, 983	declspec, 991
mha_min_1	GITCOMMITHASH, 991
mha_signal.hh, 1005	HINSTANCE, 991
mha_msleep	MHAPLUGIN_DOCUMENTATION_PR
mha_os.h, 983	EFIX, 991
mha_multisrc.cpp, 980	MHAPLUGIN_INIT_CALLBACKS_PRE
mha_multisrc.h, 981	FIX, 991
mha_ntoh	MHAPLUGIN_INIT_CALLBACKS, 991
mha_os.h, 984	MHAPLUGIN_PROC_CALLBACK_PR↔
mha_os.cpp, 981	EFIX, 991
list_dir, 981	MHAPLUGIN_PROC_CALLBACK, 991

WINAPI, 991	set minabs, 996
mha_profiling.c, 992	mha_signal.hh, 996
mha_platform_tic, 992	M_PI, 1005
mha_platform_toc, 992	mha_min_1, 1005
mha_tic, 992	mha_round, 1005
mha_toc, 992	operator<<, 1005
mha_profiling.h, 992	operator>>, 1005
mha_platform_tic, 993	safe_div, 1005
mha_platform_tictoc_t, 993	set_minabs, 1005
mha_platform_toc, 993	value, 1005
mha_real_t	mha_signal_fft.h, 1006
Vector and matrix processing toolbox, 37	mha_spec_t, 442
mha round	buf, 443
mha_signal.hh, 1005	channel_info, 443
mha_rt_fifo_element_t	num_channels, 443
~mha_rt_fifo_element_t, 439	num_frames, 443
abandonned, 439	mha strerror
data, 439	mha_errno.c, 970
mha_rt_fifo_element_t, 438	mha_errno.h, 971
next, 439	mha_tablelookup.cpp, 1006
mha rt fifo element $t < T >$ , 438	mha tablelookup.hh, 1006
	<u> </u>
mha_rt_fifo_t	mha_tcp.cpp, 1007
~mha_rt_fifo_t, 440	ASYNC_CONNECT_STARTED, 1008
current, 442	closesocket, 1008
mha_rt_fifo_t, 440	host_port_to_sock_addr, 1008
poll, 441	INVALID_SOCKET, 1008
poll_1, 441	SOCKET_ERROR, 1008
push, 441	SOCKET, 1008
remove_abandonned, 441	tcp_connect_to, 1008
remove_all, 441	tcp_connect_to_with_timeout, 1008
root, 442	thread_start_func, 1008
mha_rt_fifo_t< T >, 439	mha_tcp.hh, 1008
mha_ruby.cpp, 993	Sleep, 1010
Init_mha_ruby, 993	mha_test_struct_size
mha_alloc, 993	PluginLoader::mhapluginloader_t, 859
mha_exit_request, 993	mha_tic
mha_free, 993	mha_profiling.c, 992
mha_parse, 993	mha_tictoc_t, 471
rb_f_t, 993	t, 471
mha_samplerate	tv1, 471
MHAIOJackdb::io_jack_t, 557	tv2, 471
mha_set_user_error	tz, 471
mha_errno.c, 970	mha_toc
mha_errno.h, 971	mha_profiling.c, 992
mha_signal.cpp, 993	mha_toolbox.h, 1010
ASSERT_EQUAL_DIM_PTR, 996	mha_wave_t, 472
ASSERT_EQUAL_DIM, 996	buf, 473
intensity, 996	channel_info, 473
MHA_ID_MATRIX, 996	num_channels, 473
MHA_ID_UINT_VECTOR, 996	num_frames, 473
safe_div, 996	mha_windowparser.cpp, 1010

wnd funs, 1010	mhachannels
mha_windowparser.h, 1010	addsndfile::addsndfile_if_t, 174
mhachain, 86	mhaconfig_compare
mhachain.cpp, 1011	mha_generic_chain.cpp, 979
mhachain::chain_base_t, 473	PluginLoader, 121
algos, 475	mhaconfig_in
b_prepared, 475	MHAPlugin::plugin_t, 707
bprofiling, 475	mhaconfig_mon_t
cfin, 475	MHAParser::mhaconfig_mon_t, 656
cfout, 475	mhaconfig_out
chain, 475	MHAPlugin::plugin t, 707
•	mhaconfig_t, 480
chain_base_t, 474	<del>-</del>
old_algos, 475	channels, 481
patchbay, 475	domain, 481
prepare, 475	fftlen, 481
process, 474, 475	fragsize, 481
release, 475	srate, 481
update, 475	wndlen, 481
mhachain::mhachain_t, 476	mhafft
mhachain_t, 476	hilbert_shifter_t, 338
mhachain::plugs_t, 477	mhafw_lib.cpp, 1011
∼plugs_t, 478	mhafw_lib.h, 1011
ac, 478	mhajack.cpp, 1032
algos, 478	dummy_jack_proc_cb, 1032
alloc_plugs, 478	jack_error_handler, 1032
b_prepared, 478	last_jack_err, 1032
b_use_profiling, 479	last_jack_err_msg, 1032
chain, 479	make_friendly_number, 1032
cleanup_plugs, 478	mhajack.h, 1032
parser, 478	IO_ERROR_JACK, 1034
plugs_t, 478	IO_ERROR_MHAJACKLIB, 1034
prepare, 478	last_jack_err_msg, 1034
prepared, 478	MAX_USER_ERR, 1034
proc_cnt, 479	MHAJACK_FW_STARTED, 1034
process, 478	MHAJACK_STARTING, 1034
prof_algos, 479	MHAJACK_STOPPED, 1034
prof_cfg, 479	mhamain
prof_init, 479	mha.cpp, 960
prof_load_con, 479	mhamain.cpp, 1035
prof_prepare, 479	mhamain.cpp, 1034
prof_process, 479	create_lock, 1035
prof_process_load, 479	GREETING_TEXT, 1035
prof_process_tt, 479	HELP_TEXT, 1035
prof_release, 479	MAX LINE LENGTH, 1035
prof_tt_con, 479	mhamain, 1035
profiling, 479	remove_lock, 1035
release, 478	mhaplug_cfg_t, 697
tictoc, 479	~mhaplug_cfg_t, 697
update_proc_load, 478	mhaplug_cfg_t, 697
mhachain t	mhapluginloader.cpp, 1035
mhachain::mhachain_t, 476	mhapluginloader.h, 1035
— <i>i</i>	

mhapluginloader_t	hilbert_shifter_t, 338
MHAParser::mhapluginloader_t, 658	mixw_shift
PluginLoader::mhapluginloader_t, 857	hilbert_shifter_t, 338
mhaserver_t, 735	mode
~mhaserver_t, 737	ac2osc_t, 138
acceptor_started, 737	addsndfile::addsndfile_if_t, 174
ack fail, 738	MHA_TCP::OS_EVENT_TYPE, 456
ack_ok, 738	noise_t, 829
announce_port, 738	sine_t, 887
logfile, 738	smoothgains_bridge::overlapadd_if_
logstring, 737	t, 889
mhaserver_t, 736	modified
pid_mon, 738	dc::dc_vars_t, 251
port, 738	dc_simple::dc_if_t, 257
received_group, 737	modulename
run, 737	dynamiclib_t, 284
set_announce_port, 737	MHAParser::c_ifc_parser_t, 625
tcpserver, 738	mon
mhasndfile.cpp, 1036	acmon::ac_monitor_t, 148
validator_channels, 1036	mon_complex
validator_length, 1036	acmon::ac_monitor_t, 148
write_wave, 1036	mon_dump
mhasndfile.h, 1036	MHAParser, 103
write_wave, 1037	mon_g
mhastrdomain	dc_simple::dc_if_t, 257
PluginLoader, 121	dc_simple::dc_t, 259
min	mon I
MHASignal::doublebuffer_t, 746	dc_simple::dc_if_t, 257
spec2wave.cpp, 1043	dc_simple::dc_t, 259
Vector and matrix processing toolbox, 54	mon_mat
minimum fill count	acmon::ac_monitor_t, 148
mha_drifter_fifo_t, 421	mon_mat_complex
minlen	acmon::ac_monitor_t, 148
plingploing::if t, 842	mon t, 819
minlen	mon t, 819
plingploing::plingploing t, 844	store, 819
minphase	monitor variable, 4
MHAFilter::smoothspec_t, 544	monitor_t
minphase_t	MHAParser::monitor_t, 662
MHASignal::minphase_t, 766	mpo
mint_mon_t	DynComp::dc_afterburn_vars_t, 290
MHAParser::mint_mon_t, 660	mpo_inv
minw_	DynComp::dc_afterburn_rt_t, 286
wavwriter_t, 931	. – – –
minwrite	msg MHA_Error, 425
	·
wavrec_t, 930	MULA Filterundent filter perem t 400
mix	MHAFilter::adapt_filter_param_t, 490
sine_cfg_t, 885	MHAFilter::adapt_filter_t, 493
mixer	mu_beta
matrixmixer::matmix_t, 390	adm_if_t, 189
mixw_ref	multibandcompressor, 119

multibandcompressor.cpp, 1037	n_no_update_
multibandcompressor::fftfb_plug_t, 820	prediction_error_config, 866
bwv, 821	rt_nlms_t, 875
cfv, 821	n_pad1
efv, 821	overlapadd::overlapadd_t, 838
fftfb_plug_t, 821	n_pad2
insert, 821	overlapadd::overlapadd_t, 838
multibandcompressor::interface_t, 822	• —
•	n_re
algo, 823	MHASignal::fft_t, 750
burn, 823	n_samples
interface_t, 823	mha_audio_descriptor_t, 407
num_channels, 823	n_zero
patchbay, 823	overlapadd::overlapadd_t, 838
plug, <mark>824</mark>	NORM DEFAULT
plug_sigs, 824	nlms_wave.cpp, 1038
prepare, 823	NORM NONE
process, 823	nlms_wave.cpp, 1038
release, 823	NORM SUM
update_cfg, 823	<del>-</del>
multibandcompressor::plugin_signals_t, 824	nlms_wave.cpp, 1038
apply_gains, 824	NORMALIZATION_TYPES
· · · <del>· · ·</del>	nlms_wave.cpp, 1038
gain, 825	NUM_ENTR_LTASS
plug_level, 825	speechnoise.cpp, 1044
plug_output, 825	NUM_ENTR_MHAORIG
plugin_signals_t, 824	speechnoise.cpp, 1044
update_levels, 824	NUM ENTR OLNOISE
mute	speechnoise.cpp, 1044
MHAJack::port_t, 576	name
MHASignal::loop_wavefragment_t, 754	ac2wave_if_t, 141
mutex	
MHAPlugin_Split::posix_threads_t, 720	ac2wave_t, 142
mha_fifo_posix_threads_t, 430	acmon::ac_monitor_t, 148
mylogf	acsave::save_var_t, 163
dc_afterburn.cpp, 947	fftfbpow::fftfbpow_interface_t, 317
	MHA_AC::ac2matrix_helper_t, 392
N	MHA_AC::spectrum_t, 403
lpc_config, 387	MHA_AC::waveform_t, 406
n	MHAIOPortAudio::device_info_t, 559
MHAJack::client avg t, 565	MHAJack::client_avg_t, 565
MHASignal::hilbert fftw t, 751	MHAJack::client_noncont_t, 568
= =:	MHAMultiSrc::channel_t, 583
MHASignal::stat_t, 781	MHAParser::entry_t, 631
N_ERRNO	• • • • • • • • • • • • • • • • • • •
MHA_TCP, 85	noisePowProposedScale::interface_t, 831
n_channels	plugindescription_t, 850
mha_audio_descriptor_t, 407	rmslevel_if_t, 868
n_freqs	shadowfilter_end::cfg_t, 882
mha_audio_descriptor_t, 407	name_
n_im	AuditoryProfile::parser_t::fmap_t, 217
MHASignal::fft_t, 750	name_b
n_no_update	lpc_bl_predictor, 379
nlms_t, 827	lpc_bl_predictor_config, 381
prediction_error, 864	lpc_burglattice, 383
prediction_error, out	ipo_buigiattioe, boo

lpc_burglattice_config, 385	dc_simple::level_smoother_t, 264
name_conAC	DynComp::gaintable_t, 294
acConcat_wave, 145	fftfilterbank::fftfb_interface_t, 322
name_d	MHAFilter::thirdoctave_analyzer_t, 545
 nlms_t, 827	MHAOvlFilter::fspacing_t, 601
name_d_	nbits
prediction_error_config, 866	calibrator_variables_t, 226
rt_nlms_t, 875	nch
name_e	shadowfilter_begin::cfg_t, 879
nlms_t, 827	shadowfilter_begin::shadowfilter_begin↔
prediction_error, 863	_t, 881
name_e_	spec_fader_t, 899
rt_nlms_t, 875	nch_out
name_f	shadowfilter_end::cfg_t, 882
	nchan
lpc_bl_predictor, 379	
lpc_bl_predictor_config, 380	acSteer_config, 167
lpc_burglattice, 383	steerbf_config, 904
lpc_burglattice_config, 385	timoConfig, 917
nlms_t, 827	nchannels
prediction_error, 863	DynComp::gaintable_t, 294
name_kappa	fftfilterbank::fftfb_interface_t, 322
lpc_bl_predictor, 379	MHAFilter::adapt_filter_state_t, 491
lpc_burglattice, 383	MHAFilter::adapt_filter_t, 493
name_km	MHAFilter::iir_filter_t, 518
lpc_bl_predictor_config, 380	MHAFilter::smoothspec_t, 544
name_lpc	MHAFilter::thirdoctave_analyzer_t, 545
prediction_error, 863	nchannels_file_in
name_lpc_	io_file_t, 347
prediction_error_config, 866	nchannels_in
name_lpc_b	io_file_t, 347
lpc_bl_predictor, 379	io_parser_t, 354
name_lpc_f	MHAFilter::partitioned_convolution_t, 532
lpc_bl_predictor, 379	MHAIOPortAudio::io_portaudio_t, 562
name_u	MHAJack::client t, 573
nlms_t, 827	MHAPlugin_Resampling::resampling_t,
name_u_	711
rt_nlms_t, 875	nchannels_out
namelen	fw_t, 330
acsave::mat4head_t, 161	io_file_t, 347
names	io_parser_t, 354
	MHAFilter::partitioned_convolution_t, 532
MHAOvlFilter::scale_var_t, 608	• – – –
nangle	MHAIOPortAudio::io_portaudio_t, 562
acSteer_config, 167	MHAJack::client_t, 573
steerbf_config, 904	MHAPlugin_Resampling::resampling_t,
naudiochannels	711
dc::dc_t, 249	ndim
nbands	acsave::save_var_t, 163
coherence::cohflt_t, 232	needs_write
combc_t, 237	MHA_TCP::Connection, 452
dc::dc_t, 249	neigh
dc_simple::dc_t, 259	acPooling_wave_config, 156

neighbourhood	ESTIM_CUR, 1038
acPooling_wave, 154	ESTIM_PREV, 1038
nelements	ESTIMATION_TYPES, 1038
MHASignal::matrix_t, 765	make_friendly_number_by_limiting, 1038
nested_lock	NORM_DEFAULT, 1038
MHAParser::base_t, 617	NORM NONE, 1038
newgains	NORM SUM, 1038
fader_if_t, 311	NORMALIZATION TYPES, 1038
next	nm
MHAPlugin::cfg_chain_t, 698	lpc_burglattice_config, 385
mha_rt_fifo_element_t, 439	no_iter
next_except_str	prediction_error_config, 866
mha_errno.c, 970	rt_nlms_t, 875
next_read_frame_index	noise.cpp, 1038
MHASignal::ringbuffer t, 771	noise_t, 828
next_write_frame_index	frozennoise_length, 829
MHASignal::ringbuffer_t, 772	lev, 829
nfft	mode, 829
MHASignal::fft t, 750	noise_t, 829
overlapadd::overlapadd_if_t, 835	<del>-</del> ·
	patchbay, 829
shadowfilter_end::cfg_t, 882	prepare, 829
spec2wave_t, 898	process, 829
wave2spec_if_t, 925	update_cfg, 829
nfft_	noise_type_t
MHAOvIFilter::fspacing_t, 601	speechnoise_t, 900
nframes	noisePow
acsave::save_var_t, 163	noisePowProposedScale::noisePow
nfreq	Proposed, 833
acSteer_config, 167	timoConfig, 918
steerbf_config, 904	noisePow_name
timoConfig, 917	timo_params, 915
nlms_t, 825	timoSmooth, 922
algo, <mark>827</mark>	noisePowProposed
c, 827	noisePowProposedScale::noisePow←
estimtype, 827	Proposed, 832
lambda_smoothing_power, 827	noisePowProposedScale, 119
n_no_update, 827	noisePowProposedScale.cpp, 1038
name_d, 827	POWSPEC_FACTOR, 1039
name_e, 827	noisePowProposedScale::interface_t, 830
name_f, 827	alphaPH1mean, 831
name_u, 827	alphaPSD, 831
nlms_t, 826	interface_t, 831
normtype, 827	name, 831
ntaps, <mark>827</mark>	patchbay, 831
patchbay, 827	prepare, 831
prepare, 826	process, 831
process, 827	g, 831
release, 826	update_cfg, 831
rho, 827	xiOptDb, 831
update, 827	noisePowProposedScale::noisePowProposed
nlms_wave.cpp, 1037	832
—	

alphaPH1mean , 833	wave2spec_t, 927
alphaPSD_, 833	npad2
estimateDebug, 833	spec2wave_t, 898
frameno, 833	wave2spec_t, 927
GLRDebug, 833	nperiods
GLRexp, 833	alsa_dev_par_parser_t, 201
inputPow, 833	nrefmic
inputSpec, 833	acSteer, 166
insert, 832	acSteer_config, 167
logGLRFact, 833	nrep
noisePow, 833	MHAJack::client_avg_t, 565
noisePowProposed, 832	nsteerchan
noisyPer, 833	acSteer, 166
PH1Debug, 833	acSteer_config, 167
PH1mean, 833	ntaps
priorFact, 833	MHAFilter::adapt_filter_state_t, 491
process, 832	MHAFilter::adapt_filter_t, 493
snrPost1Debug, 833	nlms_t, 827
xiOpt, 833	prediction_error, 863
noisyPer	prediction_error_config, 865
noisePowProposedScale::noisePow←	rt_nlms_t, 874
Proposed, 833	ntoh
non_empty_partitions	io_tcp_sound_t, 366
MHAFilter::transfer_function_t, 547	ntracks
MHAFilter::transfer_matrix_t, 549	shadowfilter_begin::cfg_t, 879
nondefault_labels	shadowfilter_begin::shadowfilter_begin ←
altplugs_t, 208	_t, 881
norm	shadowfilter_end::cfg_t, 882
lpc, 376	null_data
lpc_config, 386	mha_drifter_fifo_t, 422
normalize	num_AC
Complex arithmetics in the openMHA, 64	acConcat_wave, 145
MHAOvlFilter::fftfb_vars_t, 596	num_adms
normtype	adm_rtconfig_t, 191
nlms_t, 827	num_brackets
not_in_use	MHAParser::StrCnv, 105
MHAPlugin::cfg_chain_t, 698	num_channels
not_zero	calibrator_variables_t, 226
dc_simple, 78	DynComp::gaintable_t, 294
notify	MHAFilter::blockprocessing_polyphase ←
MHAParser::base_t, 616	_resampling_t, 495
notify_release	mha_spec_t, 443
io_tcp_t, 372	mha_wave_t, 473
notify_start	multibandcompressor::interface_t, 823
io_tcp_t, 372	num_entries
notify_stop	comm_var_t, 238
io_tcp_t, 372	testplugin::ac_parser_t, 906
now_index	num_F
MHAFilter::polyphase_resampling_t, 539	DynComp::gaintable_t, 294
npad1	num_frames
spec2wave_t, 897	mha_spec_t, 443

mha_wave_t, 473	observers
num_inchannels	MHA_TCP::Wakeup_Event, 471
io_tcp_sound_t, 368	od
num_L	MHAFilter::adapt_filter_state_t, 491
DynComp::gaintable_t, 294	offset
num_outchannels	acTransform_wave_config, 171
io_tcp_sound_t, 368	ola1
num_xruns	overlapadd::overlapadd_t, 837
MHAJack::client_t, 573	ola2
numDevices	overlapadd::overlapadd_t, 837
MHAIOPortAudio::device_info_t, 559	ola_powspec_scale
numSamples_AC	- · -
acConcat_wave_config, 146	timoConfig, 917
numbytes	old_algos
MHASignal::matrix_t, 764	mhachain::chain_base_t, 475
<u> </u>	olnoise
MHASignal::uint_vector_t, 786 numchannels	speechnoise_t, 900
	on_model_param_valuechanged
addsndfile::addsndfile_if_t, 174	timoSmooth, 921
numsamples	on_prereadaccess
acPooling_wave, 154	example3_t, 302
acTransform_wave, 170	example4_t, 306
nupsample	on_scale_ch_readaccess
doasvm_feature_extraction, 277	example3_t, 302
nvars	example4_t, 306
acsave::cfg_t, 161	on_scale_ch_valuechanged
nwnd	example3_t, 302
overlapadd::overlapadd_if_t, 835	example4_t, 306
wave2spec_if_t, 925	on_scale_ch_writeaccess
wave2spec_t, 927	example3_t, 302
nwndshift	example4_t, 306
spec2wave_t, 898	op
wave2spec_t, 927	MHAParser::expression_t, 632
nyquist_ratio	• —
MHAPlugin_Resampling::resampling_if←	op_query
t, 709	MHAParser::base_t, 613
	MHAParser::c_ifc_parser_t, 624
o1_ar_filter_t	MHAParser::monitor_t, 662
MHAFilter::o1_ar_filter_t, 522	MHAParser::parser_t, 666
o1_lp_coeffs	op_setval
MHAFilter, 88	MHAParser::base_t, 613
o1flt_lowpass_t	MHAParser::bool_t, 622
MHAFilter::o1flt_lowpass_t, 526	MHAParser::c_ifc_parser_t, 624
o1flt_maxtrack_t	MHAParser::complex_t, 630
MHAFilter::o1flt_maxtrack_t, 528	MHAParser::float_t, 636
o1flt mintrack t	MHAParser::int_t, 641
MHAFilter::o1flt_mintrack_t, 530	MHAParser::kw t, 646
OVERLAP FACTOR	MHAParser::mcomplex_t, 650
timoconfig.cpp, 1049	MHAParser::mfloat_t, 654
observe	MHAParser::parser_t, 666
MHA_TCP::Event_Watcher, 455	MHAParser::string_t, 674
observed by	MHAParser::variable_t, 676
MHA_TCP::Wakeup_Event, 470	MHAParser::vcomplex_t, 681
_ r	- r

MILA Davida www.fla.at. + COE	an analan
MHAParser::vfloat_t, 685	operator-=
MHAParser::vint_t, 689	Complex arithmetics in the openMHA, 60
MHAParser::vstring_t, 693	Vector and matrix processing toolbox, 49
op_subparse	operator/
MHAParser::base_t, 613	Complex arithmetics in the openMHA, 62,
MHAParser::c_ifc_parser_t, 624	63
MHAParser::parser_t, 666	operator/=
opact_map_t	Complex arithmetics in the openMHA, 62
MHAParser, 103	Vector and matrix processing toolbox, 50
	operator=
opact_t	•
MHAParser, 103	MHA_AC::acspace2matrix_t, 396
operator!=	MHA_Error, 424
Complex arithmetics in the openMHA, 63	MHAPlugin_Split::domain_handler_t, 713
operator<	MHAPlugin_Split::splitted_part_t, 729
Complex arithmetics in the openMHA, 64	MHAPlugin_Split::thread_platform_t, 733
operator<<	MHASignal::matrix_t, 760
mha_signal.hh, 1005	MHASignal::uint_vector_t, 785
operator>>	MHASignal::waveform_t, 790
mha_signal.hh, 1005	mha_fifo_t, 433
operator*	mha_fifo_thread_platform_t, 438
Complex arithmetics in the openMHA, 61,	operator==
62	Complex arithmetics in the openMHA, 63
	· · · · · · · · · · · · · · · · · · ·
operator*=	MHASignal::uint_vector_t, 785
Complex arithmetics in the openMHA, 61	operator[]
Vector and matrix processing toolbox, 49,	MHA_AC::acspace2matrix_t, 396
50	MHASignal::spectrum_t, 778
operator^=	MHASignal::uint_vector_t, 786
Vector and matrix processing toolbox, 51	MHASignal::waveform_t, 790
operator()	operators
dc_simple::dc_t::line_t, 260	MHAParser::base_t, 617
hanning_ramps_t, 336	oplist
MHAEvents::emitter_t, 487	MHAParser::base_t, 616
MHAFilter::gamma_flt_t, 512, 513	order
MHAFilter::iir_ord1_real_t, 520	lpc_config, 386
MHAFilter::01_ar_filter_t, 523, 524	origname
	<u> </u>
MHASignal::hilbert_t, 752	PluginLoader::config_file_splitter_t, 852
MHASignal::matrix_t, 762–764	os_event
MHASignal::minphase_t, 766	MHA_TCP::Wakeup_Event, 471
MHASignal::quantizer_t, 768	os_event_valid
MHASignal::spectrum_t, 778	MHA_TCP::Wakeup_Event, 471
MHASignal::waveform_t, 790, 791	out
MHAWindow::base_t, 811	adm_if_t, 189
operator+	delaysum::delaysum_t, 270
Complex arithmetics in the openMHA, 60	out buf
operator+=	overlapadd::overlapadd_t, 838
Complex arithmetics in the openMHA, 60	spec2wave_t, 898
Vector and matrix processing toolbox, 49,	out_chunk
50	<del>_</del>
	MHAFilter::thirdoctave_analyzer_t, 546
operator-	out_chunk_im
Complex arithmetics in the openMHA, 60,	MHAFilter::thirdoctave_analyzer_t, 546
61, 63	out_spec

shadowfilter_begin::cfg_t, 879	output_signal
shadowfilter_end::cfg_t, 882	MHAPlugin_Resampling::resampling_t,
outSpec	711
steerbf_config, 904	output_signal_spec
outbuf	MHAFilter::partitioned_convolution_t, 533
MHA_TCP::Connection, 453	output_signal_wave
outch	MHAFilter::partitioned_convolution_t, 533
MHAJack::client_t, 574	output_spec
outchannels	testplugin::signal_parser_t, 911
	output_wave
combc_if_t, 236	. —
outer2inner_resampling	testplugin::signal_parser_t, 911
MHAPlugin_Resampling::resampling_t,	outputchannels
711	MHAFilter::fftfilterbank_t, 506
outer_ac	overlap_save_filterbank_analytic_t
analysepath_t, 210	MHAOvIFilter::overlap_save_filterbank_
outer_ac_copy	analytic_t, 603
analysepath_t, 210	overlap_save_filterbank_t
outer_error	MHAOvlFilter::overlap_save_filterbank_t,
mha_dblbuf_t, 416	605
outer_fragsize	overlapadd, 119
MHAPlugin_Resampling::resampling_t,	overlapadd.cpp, 1039
710	overlapadd::overlapadd_if_t, 834
outer_out	~overlapadd_if_t, 835
MHASignal::doublebuffer_t, 747	algo, 836
outer_process	cf_in, 836
MHASignal::doublebuffer_t, 746	cf_out, 836
outer_size	nfft, 835
mha_dblbuf_t, 415	nwnd, 835
outer_srate	overlapadd_if_t, 835
MHAPlugin_Resampling::resampling_t,	patchbay, 835
711	plugloader, 836
output	postscale, 836
io_parser_t, 354	prepare, 835
MHAJack::port_t, 575	prescale, 836
mha_dblbuf_t, 414	process, 835
output_cfg	release, 835
MHAPlugin::plugin_t, 707	update, 835
output_cfg_	window, 836
MHAPlugin::plugin_t, 707	wndexp, 836
output_channels	wndpos, 836
mha_dblbuf_t, 415	zerowindow, 836
output_domain	overlapadd::overlapadd_t, 836
PluginLoader::mhapluginloader_t, 858	~overlapadd_t, 837
	• —
output_fifo	calc_out, 838
mha_dblbuf_t, 415	fft, 837
output_partitions	n_pad1, 838
MHAFilter::partitioned_convolution_t, 532	n_pad2, 838
output_portnames	n_zero, 838
MHAJack::client_t, 574	ola1, 837
output_sample_format	ola2, 837
io_file_t, 348	out_buf, 838

	overlapadd_t, 837	lpc_bl_predictor.cpp, 958
	postwnd, 837	lpc_burg-lattice.cpp, 959
	prewnd, 837	prediction_error.cpp, 1040
	spec_in, 838	steerbf.cpp, 1048
	wave in1, 837	timoSmooth.cpp, 1050
	wave_out1, 838	PH1Debug
	write_buf, 838	noisePowProposedScale::noisePow↔
ove	erlapadd_if_t	Proposed, 833
•	overlapadd::overlapadd_if_t, 835	PH1mean
	smoothgains_bridge::overlapadd_if_	noisePowProposedScale::noisePow⇔
	t, 888	Proposed, 833
ove	erlapadd_t	POWSPEC FACTOR
0,0	overlapadd::overlapadd_t, 837	<u> </u>
ovlt	type	noisePowProposedScale.cpp, 1039
OVII	MHAOvIFilter::fftfb_vars_t, 595	timoconfig.cpp, 1049 PREPARED
ΟV	WITHOVIT IIIIIID_vars_t, 555	
oy	MHAFilter::adapt_filter_state_t, 491	MHA_TCP::Thread, 464
	will interadapt_litter_state_t, 491	pa22dbspl
р		Vector and matrix processing toolbox, 39
۲	acPooling wave config, 156	pa2dbspl
	doasym_classification_config, 274	Vector and matrix processing toolbox, 38
	pluginbrowser_t, 849	params
n1	plugilibrowsci_t, 0+0	timoConfig, 917
p1	MHASignal::hilbert_fftw_t, 751	parent
ກາ	WITASignalIllibert_litw_t, 751	MHAParser::base_t, 617
p2	MUASignal chilhort fftw t 751	parent_
D (	MHASignal::hilbert_fftw_t, 751	MHAParser::mhapluginloader_t, 659
P_(	Sum	parse
l	rt_nlms_t, 875	altplugs_t, 207
b_r	piased	io_tcp_t, 372
	acPooling_wave_config, 156	MHAParser::base_t, 612, 613
<b>p_</b> t	piased_name	MHAPlugin_Split::splitted_part_t, 729
	acPooling_wave, 154	PluginLoader::fourway_processor_t, 855
p_i		PluginLoader::mhapluginloader_t, 857
	io_alsa_t, 344	parse_1_complex
p_r	max	. – – .
	acPooling_wave_config, 156	mha_parser.cpp, 985
	doasvm_classification_config, 274	parse_1_float
p_r	name	mha_parser.cpp, 985
	acPooling_wave, 154	parser
	doasvm_classification, 273	io_tcp_t, 372
p_c	out	mhachain::plugs_t, 478
	io_alsa_t, 344	parser_int_dyn, 839
p_p	parser	parser_int_dyn, <mark>839</mark>
	acmon::ac_monitor_t, 148	set_max_angle_ind, 840
PA	TCH_VAR	parser_plugs
	acConcat_wave.cpp, 936	altplugs_t, 208
	acPooling_wave.cpp, 937	parser_t
	acSteer.cpp, 938	AuditoryProfile::parser_t, 215
	acTransform_wave.cpp, 939	MHAParser::parser_t, 664
	doasym_classification.cpp, 949	parserFriendlyName
	doasvm_feature_extraction.cpp, 949	MHAIOPortAudio, 91
	lpc.cpp, 958	parsername
	المامات عار	L 21. 2 2

latex_doc_t, 373	MHAIOPortAudio::io_portaudio_t, 562
parserstate	MHAPlugin_Split::split_t, 725
fw_t, 330	matrixmixer::matmix_t, 390
partitioned_convolution_t	mhachain::chain_base_t, 475
MHAFilter::partitioned_convolution_t, 531	multibandcompressor::interface_t, 823
partitions	nlms_t, 827
MHAFilter::transfer_function_t, 547	noise_t, 829
MHAFilter::transfer_matrix_t, 549	noisePowProposedScale::interface_t, 83
patchbay	overlapadd::overlapadd if t, 835
ac2lsl::ac2lsl_t, 125	plingploing::if_t, 842
ac2osc t, 139	plugin_interface_t, 848
ac2wave_if_t, 141	prediction_error, 864
acConcat_wave, 145	route::interface_t, 871
acPooling_wave, 154	sine_t, 887
acSteer, 166	smoothgains_bridge::overlapadd_if_←
acTransform_wave, 170	t, 889
acmon::acmon t, 151	softclip_t, 892
acsave::acsave_t, 159	spec2wave_if_t, 896
addsndfile::addsndfile_if_t, 174	steerbf, 903
addshdhleaddshdhle_ii_t, 174 adm if t, 189	•
<b>=</b> = '	testplugin::ac_parser_t, 906
altplugs_t, 208	testplugin::if_t, 910
analysispath_if_t, 212	timoSmooth, 922
AuditoryProfile::parser_t::fmap_t, 217	wave2spec_if_t, 925
calibrator_t, 225	wavrec_t, 930
coherence::cohflt_if_t, 230	windowselector_t, 934
db_if_t, 243	path
dc::dc_if_t, 246	addsndfile::addsndfile_if_t, 174
dc::wideband_inhib_vars_t, 255	pcm
dc_simple::dc_if_t, 257	alsa_base_t, 200
delay::interface_t, 266	pcm_format
delaysum::delaysum_if_t, 268	alsa_t, 205
doasvm_classification, 273	pcmlink
doasvm_feature_extraction, 277	io_alsa_t, 344
DynComp::dc_afterburn_t, 288	peak
example3_t, 303	MHASignal::loop_wavefragment_t, 754
example4_t, 307	rmslevel_t, 869
example6_t, 309	peak_db
fader_if_t, 311	rmslevel_t, 869
fader_wave::fader_wave_if_t, 313	peaklevel
fftfbpow::fftfbpow_interface_t, 317	calibrator_variables_t, 226
fftfilterbank::fftfb_interface_t, 322	MHASignal::async_rmslevel_t, 740
frequency_translator_t, 325	mha_channel_info_t, 409
fw_t, 331	peer_addr
gain::gain_if_t, 334	MHA_TCP::Connection, 453
io_alsa_t, 344	peer_address
io_parser_t, 354	io_tcp_parser_t, 363
Ipc, 376	peer_port
lpc_bl_predictor, 379	io_tcp_parser_t, 364
lpc_burglattice, 383	period
MHAIOJack::io_jack_t, 553	droptect_t, 281
MHAIOJackdb::io_jack_t, 557	pfragmentsize
<b></b> ,,	1 0

fw_vars_t, 332	playback_mode_t
phase	MHASignal::loop_wavefragment_t, 754
cpuload_t, 241	plingploing, 120
MHASignal::minphase_t, 767	drand, 120
phase_correction	plingploing.cpp, 1039
MHAFilter::gamma_flt_t, 513	plingploing::if_t, 840
phase_div_2pi	bassmod, 842
sine_t, 887	bassperiod, 843
phase_gains	bpm, 842
MHASignal::subsample_delay_t, 783	fun1_key, <mark>842</mark>
phase_increment_div_2pi	fun1_range, 842
sine_cfg_t, 885	fun2_key, <mark>842</mark>
phasemode	fun2_range, 842
frequency_translator_t, 325	if_t, 841
phasemodel	level, 842
MHAOvIFilter::overlap_save_filterbank_←	maxlen, 842
t::vars_t, 606	minlen, 842
phi	patchbay, 842
hilbert_shifter_t, 338	pitch, 842
PI	prepare, 841
ADM, 76	process, 841
hann.cpp, 956	update, 841
pid_mon	plingploing::plingploing_t, 843
mhaserver_t, 738	alph, 845
pinchannels	bass, 844
fw_vars_t, 332	bassmod_, 845
pink	bassperiod_, 845
speechnoise_t, 900	bt, 844
pipe	cf, 844
MHA_TCP::Async_Notify, 445	dist, 845
pitch	dist1, 845
plingploing::if_t, 842	dur_, 844
pitch_	freq, 844
plingploing::plingploing_t, 844	fun1, 845
pitch_set_first	fun1_key, 845
timoConfig, 918 pitch_set_first_AC	fun1_range, 845 fun2, 845
timo_AC, 913	fun2_key, 845
pitch_set_last	fun2_range, 845
timoConfig, 918	hann1, 845
pitch_set_last_AC	hann2, 845
timo AC, 913	len, 844
plan_spec2analytic	level, 845
hilbert_shifter_t, 338	maxlen_, 844
plateau	minlen_, 844
MHAOvlFilter::fftfb_vars_t, 595	pitch_, 844
playback	plingploing_t, 844
MHASignal::loop_wavefragment_t, 755,	process, 844
756	rms, 845
playback_channels	t, 844
MHASignal::loop_wavefragment_t, 756	plingploing_t

plingploing::plingploing_t, 844	configname, 852
plug	get_configfile, 852
analysispath_if_t, 212	get_configname, 851
MHAParser::mhapluginloader_t, 659	get_libname, 852
MHAPlugin_Split::splitted_part_t, 730	get_origname, 852
multibandcompressor::interface_t, 824	libname, 852
testplugin::if_t, 910	origname, 852
plug_level	PluginLoader::fourway_processor_t, 852
multibandcompressor::plugin_signals_t,	~fourway_processor_t, 853
825	parse, 855
plug_output	prepare, 855
multibandcompressor::plugin_signals_t,	process, 853, 854
825	release, 855
plug_sigs	PluginLoader::mhapluginloader_t, 855
multibandcompressor::interface_t, 824	~mhapluginloader_t, 857
plug_t, 845	ac, 859
~plug_t, 846	b_check_version, 860
get_ac, 846	b_is_prepared, 860
get handle, 846	cf_input, 860
get_process_spec, 846	cf_output, 860
get_process_wave, 846	get_categories, 859
plug_t, 846	get_documentation, 859
plugin_categories	getfullname, 858
PluginLoader::mhapluginloader_t, 860	has_parser, 858
plugin_documentation	has_process, 858
PluginLoader::mhapluginloader_t, 860	input_domain, 858
plugin_extension	is_prepared, 859
pluginbrowser_t, 849	lib_data, 859
plugin_interface_t, 847	lib_err, 859
factor, 848	lib_handle, 859
patchbay, 848	MHADestroy_cb, 859
plugin_interface_t, 848	MHAGetVersion cb, 859
prepare, 848	MHAInit_cb, 859
process, 848	MHAPrepare_cb, 859
scale_ch, 848	MHAProc_spec2spec_cb, 859
update_cfg, 848	MHAProc_spec2wave_cb, 860
plugin_macro	MHAProc wave2spec cb, 859
latex_doc_t, 374	MHAProc_wave2wave_cb, 859
plugin_paths	MHARelease_cb, 859
fw_t, 330	MHASet_cb, 860
plugin_signals_t	MHAStrError_cb, 860
multibandcompressor::plugin_signals_t,	mha_test_struct_size, 859
824	mhapluginloader_t, 857
plugin_t	output_domain, 858
MHAPlugin::plugin_t, 705	parse, 857
PluginLoader, 120	plugin_categories, 860
mhaconfig_compare, 121	plugin_documentation, 860
mhastrdomain, 121	prepare, 858
PluginLoader::config_file_splitter_t, 851	process, 858
config_file_splitter_t, 851	release, 858
configfile, 852	resolve_and_init, 859
	1000110_4114_11111, 000

test error, 859	altplugs_t, 208
test_version, 859	plugs_t
pluginbrowser.cpp, 1040	mhachain::plugs_t, 478
pluginbrowser.h, 1040	pmode
pluginbrowser_t, 848	calibrator_runtime_layer_t, 223
add_plugin, 849	poll
add_plugins, 849	mha_rt_fifo_t, 441
clear_plugins, 849	poll_1
get_paths, 849	mha_rt_fifo_t, 441
get plugins, 849	poll_config
library_paths, 849	MHAPlugin::config_t, 701
p, 849	polyphase_resampling_t
plugin_extension, 849	MHAFilter::polyphase_resampling_t, 537
pluginbrowser_t, 849	pool
plugins, 849	acPooling_wave_config, 156
scan_plugin, 849	pool_name
scan_plugins, 849	acPooling_wave, 154
plugindescription_t, 850	pooling_ind
categories, 850	acPooling_wave_config, 156
documentation, 850	pooling_option
fullname, 850	acPooling_wave_config, 156
name, 850	pooling_size
queries, 850	acPooling_wave_config, 156
query_cmds, 850	pooling_type
• •	
spec2spec, 850	acPooling_wave, 154 pooling_wndlen
spec2wave, 850 wave2spec, 850	acPooling_wave, 154
wave2spec, 850 wave2wave, 850	<u>~</u>
pluginloader_t, 860	port ac2osc_t, 138
~pluginloader_t, 861	MHA_TCP::Server, 459
	MHAJack::port_t, 577
pluginloader_t, 861	mhaserver_t, 738
plugins fw_t, 330	<del>-</del> ·
	port_t
pluginbrowser_t, 849	MHAJack::port_t, 575, 576 portaudio_callback
plugloader	•
bbcalib_interface_t, 221	MHAIOPortAudio.cpp, 1027, 1028 MHAIOPortAudio::io portaudio t, 562
db_if_t, 243	_,
db_t, 244	portaudio_stream MHAIOPortAudio::io portaudio t, 562
MHAPlugin_Resampling::resampling_if  + 700	_,
_t, 709	portnames_in
MHAPlugin_Resampling::resampling_t, 711	MHAIO Jackdhija jack t 553
	MHAIOJackdb::io_jack_t, 557
overlapadd::overlapadd_if_t, 836	portnames_out
smoothgains_bridge::overlapadd_if_  + 888	MHAIOJack::io_jack_t, 553
t, 889	MHAIOJackdb::io_jack_t, 557
plugname	ports_in_all
latex_doc_t, 374	MHAIOJack::io_jack_t, 553
MHAParser::mhapluginloader_t, 659	MHAIOJackdb::io_jack_t, 557
plugname_name_	ports_in_physical
MHAParser::mhapluginloader_t, 659	MHAIOJack::io_jack_t, 553
plugs	MHAIOJackdb::io_jack_t, 557

ports_out_all	name_lpc, 863
MHAIOJack::io_jack_t, 553	ntaps, 863
MHAIOJackdb::io_jack_t, 557	patchbay, 864
ports_out_physical	pred_err_delay, 864
MHAIOJack::io_jack_t, 553	prediction_error, 862
MHAIOJackdb::io_jack_t, 557	prepare, 863
ports_parser	process, 863
MHAIOJack::io jack t, 553	release, 863
MHAIOJackdb::io_jack_t, 557	rho, 863
pos	update_cfg, 863
addsndfile::level_adapt_t, 176	prediction_error.cpp, 1040
cfg_t, 228	INSERT PATCH, 1040
fader_wave::level_adapt_t, 315	make_friendly_number_by_limiting, 1040
MHAJack::client_avg_t, 565	PATCH_VAR, 1040
MHAJack::client noncont t, 567	prediction error.h, 1040
MHASignal::async_rmslevel_t, 740	prediction error config, 864
MHASignal::delay_spec_t, 741	~prediction_error_config, 865
MHASignal::delay_t, 743	ac, 865
MHASignal::delay_wave_t, 744	channels, 866
MHASignal::loop_wavefragment_t, 756	EPrew, 867
posix_threads_t	F, 866
MHAPlugin_Split::posix_threads_t, 719	F_Uflt, 866
posixthreads	frames, 865
split.cpp, 1047	insert, 865
postscale	iter, 866
overlapadd::overlapadd_if_t, 836	n_no_update_, 866
postwindow	name_d_, 866
spec2wave_t, 898	name_lpc_, 866
postwnd	no_iter, 866
overlapadd::overlapadd_t, 837	ntaps, 865
powSpec	prediction_error_config, 865
timoConfig, 918	process, 865
•	•
power MIASignalinuovafarm + 705	Pu, 866
MHASignal::waveform_t, 795	s_E_pred_err_delay, 866
powersum	s_LPC, 866 s U delay, 866
do::dc_t, 248	*
dc::dc_vars_t, 250	s_U_delayflt, 866 s Usmpl, 867
powspec	_ , ,
MHASignal::waveform_t, 796	s_Wflt, 866
pred_err_delay	s_Y_delay, 866
prediction_error, 864	s_Y_delayflt, 866
prediction_error, 861	s_E, 866
~prediction_error, 862	s_U, 866
c, 863	s_W, 866
delay_d, 864	smpl, 867
delay_w, 864	UPrew, 867
gains, 863	UPrewW, 867
lpc_order, 864	UbufferPrew, 866
n_no_update, 864	v_G, 866
name_e, 863	YPrew, 867
name_f, 863	prefix

wavrec_t, 930	io_tcp_t, 371
prefix_	lpc, 375
MHAParser::mhapluginloader_t, 659	lpc_bl_predictor, 378
prefix_names_AC	lpc_burglattice, 383
acConcat_wave, 145	MHAIOJack::io_jack_t, 551
prepare	MHAIOJackdb::io_jack_t, 555
ac2lsl::ac2lsl_t, 124	MHAJack::client_t, 570, 571
ac2osc_t, 137	MHAParser::mhapluginloader_t, 658
ac2wave_if_t, 140	MHAPlugin::plugin_t, 705
acConcat_wave, 144	MHAPlugin_Resampling::resampling_if←
acPooling wave, 153	_t, 709
acSteer, 165	MHAPlugin_Split::splitted_part_t, 729
acTransform_wave, 169	MHATableLookup::linear_table_t, 802
acmon::acmon_t, 150	matrixmixer::matmix_t, 390
acsave::acsave_t, 158	mhachain::chain_base_t, 475
addsndfile::addsndfile if t, 173	mhachain::plugs_t, 478
adm_if_t, 188	multibandcompressor::interface_t, 823
altplugs_t, 206	nlms_t, 826
analysispath_if_t, 212	<del>_</del> :
bbcalib_interface_t, 221	noise_t, 829 noisePowProposedScale::interface_t, 831
— — ·	•
calibrator_t, 224	overlapadd::overlapadd_if_t, 835
coherence::cohflt_if_t, 230	plingploing::if_t, 841
combc_if_t, 236	plugin_interface_t, 848
cpuload_t, 240	PluginLoader::fourway_processor_t, 855
db_if_t, 242	PluginLoader::mhapluginloader_t, 858
dc::dc_if_t, 246	prediction_error, 863
dc_simple::dc_if_t, 256	rmslevel_if_t, 868
delay::interface_t, 266	route::interface_t, 871
delaysum::delaysum_if_t, 268	save_spec_t, 877
doasvm_classification, 272	save_wave_t, 878
doasym_feature_extraction, 276	shadowfilter_begin::shadowfilter_begin ←
droptect_t, 280	_t, 881
ds_t, 283	shadowfilter_end::shadowfilter_end_←
example1_t, 296	t, 884
example2_t, 299	sine_t, 886
example3_t, 302	smoothgains_bridge::overlapadd_if_
example4_t, 306	t, 888
example6_t, 309	softclip_t, 892
fader_if_t, 311	spec2wave_if_t, 896
fader_wave::fader_wave_if_t, 313	steerbf, 902
fftfbpow::fftfbpow_interface_t, 317	testplugin::if_t, 910
fftfilterbank::fftfb_interface_t, 321	timoSmooth, 921
frequency_translator_t, 325	us_t, 923
fw_t, 328	wave2spec_if_t, 925
gain::gain_if_t, <mark>334</mark>	wavrec_t, 929
identity_t, 340	prepare_
io_alsa_t, 343, 344	iirfilter_t, 341
io_file_t, 347	MHAPlugin::plugin_t, 706
io_lib_t, 350	MHAPlugin_Split::split_t, 724
io_parser_t, 353	prepare_impl
io_tcp_sound_t, 366	MHAJack::client_t, 572

prepare_vars	mhachain::plugs t, 479
fw_t, 330	proc_err
prepared	io_tcp_fwcb_t, 358
ac2wave_if_t, 141	proc_error
altplugs_t, 208	fw_t, 331
calibrator_t, 225	proc_error_string
dc_simple::dc_if_t, 257	fw_t, 331
example3_t, 303	proc_event
example4_t, 307	io_alsa_t, 344
fader_wave::fader_wave_if_t, 313	io_file_t, 348
fftfilterbank::fftfb_interface_t, 322	io_parser_t, 354
mhachain::plugs_t, 478	io_tcp_fwcb_t, 357
route::interface_t, 871	MHAIOJackdb::io_jack_t, 556
timoSmooth, 922	MHAIOPortAudio::io_portaudio_t, 562
prereadaccess	MHAJack::client_t, 573
MHAParser::base_t, 617	proc_handle
prescale	io_alsa_t, 344
overlapadd::overlapadd_if_t, 836	io_file_t, 348
preset	io_parser_t, 354
dc::dc_vars_t, 251	io_tcp_fwcb_t, 357
dc_simple::dc_if_t, 257	MHAIOJackdb::io_jack_t, 556
prewnd	MHAIOPortAudio::io_portaudio_t, 562
overlapadd::overlapadd_t, 837	MHAJack::client_t, 573
print_ac	proc_lib
analysemhaplugin.cpp, 942	fw_t, 331
prior_q	proc_name
timo_params, 915	fw_t, 330
timoSmooth, 922	proc_ramp altplugs_t, 207
priorFact noisePowProposedScale::noisePow←	proc_thread
Proposed, 833	io_alsa_t, 344
timoConfig, 918	proc_wave
priority	doasvm_feature_extraction_config, 278
analysepath_t, 210	process
analysispath_if_t, 212	ADM::ADM, 181
io_alsa_t, 344	ADM::Delay, 184
MHAPlugin_Split::posix_threads_t, 721	ADM::Linearphase FIR, 186
prob_bias	ac2lsl::ac2lsl t, 124
acPooling wave, 154	ac2lsl::cfg_t, 127
prob_bias_func	ac2osc_t, 137
acPooling_wave_config, 156	ac2wave_if_t, 140
proc	ac2wave_t, 142
MHAJack::client_avg_t, 565	acConcat_wave, 144
MHAJack::client_noncont_t, 567	acConcat_wave_config, 146
proc_1	acPooling_wave, 153
smoothgains_bridge::smoothspec_←	acPooling_wave_config, 155
wrap_t, 890	acSteer, 165
proc_2	acTransform_wave, 169
smoothgains_bridge::smoothspec_←	acTransform_wave_config, 171
wrap_t, 890	acmon::acmon_t, 150, 151
proc_cnt	acsave::acsave_t, 158, 159

addsndfile::addsndfile_if_t, 173	lpc_burglattice_config, 384
adm_if_t, 188	lpc_config, 386
altplugs_t, 207	MHAFilter::partitioned_convolution_t, 532
analysispath_if_t, 212	MHAFilter::thirdoctave_analyzer_t, 545
bbcalib_interface_t, 221	MHAParser::mhapluginloader_t, 658, 659
calibrator_runtime_layer_t, 222	MHAPlugin_Resampling::resampling_if
calibrator_t, 224	_t, 709
cfg_t, 228	MHAPlugin_Resampling::resampling_t,
coherence::cohflt_if_t, 230	710
coherence::cohflt_t, 232	MHAPlugin_Split::domain_handler_t, 715
combc if t, 236	MHAPlugin_Split::split_t, 724
combc_t, 237	MHAPlugin_Split::uni_processor_t, 735
cpuload_t, 240	MHASignal::async_rmslevel_t, 740
db_if_t, 242	MHASignal::delay_spec_t, 741
dc::dc_if_t, 246	MHASignal::delay t, 742
dc::dc_t, 248	MHASignal::delay wave t, 744
dc_simple::dc_if_t, 256, 257	MHASignal::subsample_delay_t, 783
dc_simple::dc_t, 259	matrixmixer::cfg_t, 388
dc_simple::level_smoother_t, 264	matrixmixer::matmix_t, 390
delay::interface_t, 266	mha_dblbuf_t, 414
delaysum::delaysum_if_t, 268	mhachain::chain_base_t, 474, 475
delaysum::delaysum_t, 270	mhachain::plugs_t, 478
doasym_classification, 272	multibandcompressor::interface_t, 823
doasym_classification_config, 274	nlms_t, 827
doasym_feature_extraction, 276	noise_t, 829
doasym_feature_extraction_config, 278	noisePowProposedScale::interface_t, 831
droptect_t, 280	noisePowProposedScale::noisePow←
ds_t, 283	Proposed, 832
example1_t, 297	overlapadd::overlapadd_if_t, 835
example2_t, 299	plingploing::if_t, 841
example3_t, 303	plingploing::plingploing_t, 844
example4_t, 306	plugin_interface_t, 848
example5_t, 308	PluginLoader::fourway_processor_t, 853,
example6_t, 309	854
fader_if_t, 311	PluginLoader::mhapluginloader_t, 858
fader_wave::fader_wave_if_t, 313	prediction_error, 863
fftfbpow::fftfbpow interface t, 317	prediction_error_config, 865
fftfilterbank::fftfb_interface_t, 321	rmslevel_if_t, 868
fftfilterbank::fftfb_plug_t, 323	rmslevel_t, 869
frequency_translator_t, 325	route::interface_t, 871
fw_t, 329	route::process t, 872
gain::gain_if_t, 334	rt nlms t, 874
hilbert_shifter_t, 338	save_spec_t, 877
identity_t, 339, 340	save_wave_t, 878
iirfilter_t, 341	shadowfilter_begin::cfg_t, 879
io_alsa_t, 344	shadowfilter_begin::shadowfilter_begin←
io_tcp_fwcb_t, 356	_t, 881
lpc, 375	shadowfilter_end::cfg_t, 882
lpc_bl_predictor, 378	shadowfilter_end::shadowfilter_end_←
lpc_bl_predictor_config, 380	t, 884
lpc_burglattice, 383	sine_t, 886
.po_sa.giatiloo, 000	J

smoothgains_bridge::overlapadd_if_↔	provoke_outer_error
t, 888	mha_dblbuf_t, 414
softclip_t, 892	psrate
softclipper_t, 893	fw_vars_t, 332
spec2wave_if_t, 896	Pu prodiction ower confin 800
spec2wave_t, 897	prediction_error_config, 866
steerbf, 902	rt_nlms_t, 874
steerbf_config, 904	push
testplugin::if_t, 910	MHASignal::stat_t, 781
timoConfig, 917	mha_rt_fifo_t, 441
timoSmooth, 920	push_config
us_t, 923	MHAPlugin::config_t, 701
wave2spec_if_t, 925	put_signal
wave2spec_t, 927	MHAPlugin_Split::domain_handler_t, 714
wavrec_t, 929	pwinner_out
wavwriter_t, 931	MHAIOJackdb::io_jack_t, 557
process_frame	
io_parser_t, 354	q noisePowProposedScale::interface_t, 831
process_t	q_high
route::process_t, 872	timoConfig, 917
ProcessMutex	q_low
analysepath_t, 210	timoConfig, 917
processing_done	_
MHAPlugin_Split::posix_threads_t, 721	quant calibrator_runtime_layer_t, 222
processor	quantile
MHAPlugin_Split::domain_handler_t, 716	
MHAPlugin_Split::thread_platform_t, 733	MHASignal, 115
prof_algos	quantizer_t
mhachain::plugs_t, 479	MHASignal::quantizer_t, 767 queries
prof_cfg	MHAParser::base_t, 617
mhachain::plugs_t, 479	
prof_init	plugindescription_t, 850
mhachain::plugs_t, 479	query_addsubst
prof_load_con	MHAParser::base_t, 615
mhachain::plugs_t, 479	query_cmds MHAParser::base_t, 615
prof_prepare	<del>_</del> ·
mhachain::plugs_t, 479	plugindescription_t, 850 query_dump
prof_process	MHAParser::base t, 613
mhachain::plugs_t, 479	MHAParser::monitor_t, 662
prof_process_load	MHAParser::parser_t, 666
mhachain::plugs_t, 479	• —
prof_process_tt	query_entries MHAParser::base_t, 613
mhachain::plugs_t, 479	
prof_release	MHAParser::parser_t, 666
mhachain::plugs_t, 479	query_help
prof_tt_con	MHAParser::base_t, 615
• — —	query_id
mhachain::plugs_t, 479	MHAParser::base_t, 615
profiling	query_listids
mhachain::plugs_t, 479	MHAParser::base_t, 615
provoke_inner_error	MHAParser::parser_t, 667
mha_dblbuf_t, 414	query_map_t

MHAParser, 103	MHAParser::vstring_t, 693
query_perm	query_val
MHAParser::base t, 614	MHAParser::base_t, 614
MHAParser::monitor_t, 662	MHAParser::bool mon t, 620
MHAParser::variable t, 676	MHAParser::bool_t, 622
query_range	MHAParser::complex_mon_t, 628
MHAParser::base_t, 614	MHAParser::complex_t, 630
MHAParser::kw_t, 646	MHAParser::float_mon_t, 634
MHAParser::range var t, 669	MHAParser::float_t, 636
query readfile	MHAParser::int_mon_t, 638
MHAParser::base_t, 614	MHAParser::int_t, 641
MHAParser::parser_t, 666	MHAParser::kw t, 646
query_savefile	MHAParser::mcomplex_mon_t, 648
MHAParser::base_t, 614	MHAParser::mcomplex_t, 650
MHAParser::parser_t, 666	MHAParser::mfloat_mon_t, 652
query_savefile_compact	MHAParser::mfloat_t, 654
	MHAParser::mint_mon_t, 661
MHAParser::base_t, 615	MHAParser::parser_t, 667
MHAParser::parser_t, 667	MHAParser::string_mon_t, 672
query_savemons	MHAParser::string_t, 674
MHAParser::base_t, 615	MHAParser::vcomplex mon t, 679
MHAParser::parser_t, 667	MHAParser::vcomplex_t, 681
query_subst	MHAParser::vfloat_mon_t, 683
MHAParser::base_t, 615	MHAParser::vfloat_t, 685
query_t	MHAParser::vint_mon_t, 687
MHAParser, 103	MHAParser::vint_t, 689
query_type	MHAParser::vstring_mon_t, 691
MHAParser::base_t, 614	MHAParser::vstring_t, 693
MHAParser::bool_mon_t, 620	query_version
MHAParser::bool_t, 622	MHAParser::base_t, 615
MHAParser::complex_mon_t, 628	quit
MHAParser::complex_t, 630	fw_t, 329
MHAParser::float_mon_t, 634	IW_t, 329
MHAParser::float_t, 636	R
MHAParser::int_mon_t, 638	AuditoryProfile::parser_t, 215
MHAParser::int_t, 641	AuditoryProfile::profile_t, 219
MHAParser::kw_t, 646	lpc_config, 387
MHAParser::mcomplex_mon_t, 648	MHA_TCP::OS_EVENT_TYPE, 456
MHAParser::mcomplex_t, 650	RUNNING
MHAParser::mfloat_mon_t, 652	MHA TCP::Thread, 464
MHAParser::mfloat_t, 654	rad2smp
MHAParser::mint_mon_t, 661	Vector and matrix processing toolbox, 41
MHAParser::parser t, 666	ramp_a
MHAParser::string_mon_t, 672	hanning_ramps_t, 336
MHAParser::string_t, 674	ramp_b
MHAParser::vcomplex_mon_t, 679	hanning_ramps_t, 336
MHAParser::vcomplex_t, 681	ramp_begin
MHAParser::vfloat_mon_t, 683	MHAWindow::base_t, 811
MHAParser::vfloat_t, 685	ramp_counter
MHAParser::vint_mon_t, 687	• —
MHAParser::vint_t, 689	altplugs_t, 208
<del>-</del> '	ramp_end
MHAParser::vstring_mon_t, 691	MHAWindow::base_t, 811

ramp_len	MHAIOJack::io_jack_t, 552
altplugs_t, 208	MHAIOJackdb::io_jack_t, 556
ramplen	read_levels
addsndfile::addsndfile_if_t, 174	calibrator_t, 225
altplugs_t, 208	read_line
fader_wave::fader_wave_if_t, 313	MHA_TCP::Connection, 451
spec2wave_if_t, 896	read_modified
ramps	dc_simple::dc_if_t, 257
spec2wave_t, 898	read_ptr
range	mha fifo t, 434
Vector and matrix processing toolbox, 37	readable frames
range_var_t	MHAFilter::polyphase_resampling_t, 538
MHAParser::range_var_t, 669	readaccess
ratio	MHAParser::base_t, 617
ds_t, 283	reader_started
us_t, 923	mha_drifter_fifo_t, 421
raw_p_max_name	reader_xruns_in_succession
acTransform_wave, 170	mha_drifter_fifo_t, 422
acTransform_wave_config, 171	reader xruns since start
raw_p_name	mha drifter fifo t, 422
acPooling_wave_config, 156	reader xruns total
acTransform_wave, 170	mha_drifter_fifo_t, 422
acTransform_wave_config, 171	real
rb_f_t	MHASignal::matrix_t, 761–763
mha_ruby.cpp, 993	rear channel
rdata	adm_rtconfig_t, 192
MHASignal::matrix_t, 765	rear_channels
mha_audio_t, 408	adm_if_t, 189
re	adm_rtconfig_t, 192
mha_complex_t, 410	rec_frames
read	acsave::cfg_t, 161
alsa_base_t, 199	received_group
alsa_base_t, 199 alsa_t, 204	mhaserver_t, 737
MHAFilter::blockprocessing_polyphase↔	receiver
_resampling_t, 495	MHAEvents::connector t, 486
MHAFilter::polyphase_resampling_t, 538	reciprocal
MHAJack::port_t, 576	Complex arithmetics in the openMHA, 63
mha drifter fifo t, 420	reclen
mha fifo lw t, 427	
mha_fifo_t, 433	acsave::acsave_t, 159 recmode
read_bytes	
MHA_TCP::Connection, 452	acmon::acmon_t, 151
<del>-</del>	reconnect_inports
read_event MHA_TCP::Connection, 453	MHAIO Jackship, jacks t 556
	MHAIOJackdb::io_jack_t, 556
read_get_cpu_load	reconnect_outports
MHAIOJack::io_jack_t, 552	MHAIOJack::io_jack_t, 552
MHAIOJackdb::io_jack_t, 556	MHAIOJackdb::io_jack_t, 556
read_get_scheduler	record
MHAIOJack::io_jack_t, 552	wavrec_t, 930
MHAIOJackdb::io_jack_t, 556	rect
read_get_xruns	MHAOvlFilter::ShapeFun, 98

MHAWindow, 118	MHAParser::mhapluginloader_t, 658
rect_t	MHAPlugin::plugin_t, 706
MHAWindow::rect_t, 817	MHAPlugin_Resampling::resampling_if ←
relative	_t, 709
MHASignal::loop_wavefragment_t, 754	MHAPlugin_Split::splitted_part_t, 729
release	mhachain::chain_base_t, 475
ac2lsl::ac2lsl_t, 124	mhachain::plugs_t, 478
ac2osc_t, 137	multibandcompressor::interface_t, 823
ac2wave_if_t, 140	nlms_t, 826
acConcat_wave, 144	overlapadd::overlapadd_if_t, 835
acPooling_wave, 154	PluginLoader::fourway_processor_t, 855
acSteer, 165	PluginLoader::mhapluginloader_t, 858
acTransform_wave, 169	prediction_error, 863
acmon::acmon_t, 150	route::interface_t, 871
acsave::acsave_t, 158	smoothgains_bridge::overlapadd_if_ ←
addsndfile::addsndfile if t, 173	t, 888
adm_if_t, 188	steerbf, 903
altplugs_t, 206	timoSmooth, 921
analysispath_if_t, 212	us_t, 923
bbcalib interface t, 221	wavrec_t, 929
calibrator_t, 224	release
coherence::cohflt_if_t, 230	iirfilter_t, 341
db_if_t, 242	MHAPlugin::plugin_t, 706
dc_simple::dc_if_t, 256	MHAPlugin_Split::split_t, 724
delaysum::delaysum_if_t, 268	release mutex
doasym_classification, 272	mha_fifo_posix_threads_t, 429
doasym_feature_extraction, 276	mha_fifo_thread_platform_t, 437
droptect_t, 280	remove_abandonned
ds_t, 283	mha rt fifo t, 441
example1_t, 296	remove_all
example 1_t, 290 example 2_t, 299	mha_rt_fifo_t, 441
example3_t, 303	remove_all_cfg
exampled_t, 306	MHAPlugin::config_t, 703
fader wave::fader wave if t, 313	remove_item
fftfilterbank::fftfb interface t, 321	MHAParser::parser_t, 665, 666
frequency_translator_t, 325	remove_lock
fw_t, 329	mhamain.cpp, 1035
gain::gain_if_t, 334	remove ref
identity_t, 340	algo_comm_t, 195
io_alsa_t, 343	MHAKernel::algo_comm_class_t, 579
io_file_t, 347	<b>~</b> — — — ·
— — ·	remove_var
io_lib_t, 351	algo_comm_t, 194
io_parser_t, 354	MHAKernel::algo_comm_class_t, 579
io_tcp_sound_t, 366	repl_list
io_tcp_t, 371	MHAParser::base_t, 617
lpc, 376	repl_list_t
lpc_bl_predictor, 378	MHAParser::base_t, 612
lpc_burglattice, 383	replace
MHAIOJack::io_jack_t, 551	MHAParser::base_t::replace_t, 618
MHAIOJackdb::io_jack_t, 555	MHASignal::loop_wavefragment_t, 754
MHAJack::client_t, 571	replace_

cfg_t, 228	return_wave
replace_t	wave2spec_if_t, 925
MHAParser::base_t::replace_t, 618	retv
resampled_num_frames	MHAParser::c_ifc_parser_t, 625
addsndfile, 75	rewind
resampled_soundfile_t	MHASignal::loop_wavefragment_t, 756
addsndfile::resampled_soundfile_t, 177	rho
resampling	nlms_t, 827
MHAFilter::blockprocessing_polyphase←	prediction_error, 863
_resampling_t, 495	ringbuffer
resampling.cpp, 1041	MHAFilter::polyphase_resampling_t, 539
resampling_factors	ringbuffer_t
MHAFilter, 90	MHASignal::ringbuffer_t, 770
resampling_filter_t	rm_parent_on_remove
MHAFilter::resampling_filter_t, 540	MHAParser::base_t, 616
resampling_if_t	rms
MHAPlugin_Resampling::resampling_if↔	MHASignal::loop_wavefragment_t, 754
t, 709	plingploing::plingploing_t, 845
resampling_t	rms_limit40
MHAPlugin_Resampling::resampling_t,	MHASignal::loop_wavefragment_t, 754
710	rmsdb
resamplingmode	example6_t, 309
addsndfile::addsndfile_if_t, 174	rmslevel
reset	calibrator_variables_t, 226
droptect_t, 281	dc::dc t, 248
MHA_TCP::Async_Notify, 445	MHASignal::async_rmslevel_t, 739
MHA_TCP::Wakeup_Event, 470	Vector and matrix processing toolbox, 52,
reset_state	53
MHAFilter::gamma_flt_t, 513	rmslevel.cpp, 1041
resize	rmslevel_if_t, 867
MHAFilter::iir_filter_t, 518	name, 868
resolution	prepare, 868
acTransform_wave_config, 171	process, 868
resolve	rmslevel if t, 868
dynamiclib_t, 284	rmslevel t, 869
resolve_and_init	fftlen, 869
PluginLoader::mhapluginloader_t, 859	insert, 869
resolve_checked	level, 869
dynamiclib_t, 284	level_db, 869
result	peak, 869
	peak, 869
cpuload_t, 241 resynthesis gain	process, 869
MHAFilter::gamma_flt_t, 514	•
	rmslevel_t, 869 rmslevelmeter
ret_size	
MHAParser::c_ifc_parser_t, 625	transducers.cpp, 1051
return_imag	root
fftfilterbank::fftfb_interface_t, 322	mha_rt_fifo_t, 442
return_imag	rotated_i
fftfilterbank::fftfb_plug_t, 323	acTransform_wave_config, 171
return_value	rotated_p
MHA_TCP::Thread, 465	acTransform_wave_config, 171

rotated_p_max_name	process, 874
acTransform_wave, 170	Pu, 874
rotated_p_name	rt_nlms_t, 874
acTransform_wave, 170	s_E, 875
route, 121	U, 874
route.cpp, 1041	Uflt, 874
route::interface_t, 870	y_previous, 875
algo, 871	rt_process
cfac, 871	analysepath_t, 210
cfin, 871	rt_strict
cfout, 871	ac2lsl::ac2lsl_t, 125
interface_t, 871	ac2osc_t, 138
patchbay, 871	rt_strict_flag
prepare, 871	ac2osc_t, 139
prepared, 871	rtcalibrator
process, 871	transducers.cpp, 1051
release, 871	rtmem
route_ac, 871	ac2osc t, 139
route out, 871	run
stopped, 871	MHA TCP::Thread, 465
update, 871	mhaserver_t, 737
route::process_t, 872	runtime configuration, 4
process, 872	rval
•	MHAParser::expression_t, 632
process_t, 872 sout, 872	• —
	s_E_pred_err_delay
sout_ac, 872	prediction_error_config, 866
wout, 872	s_LPC
wout_ac, 872	prediction_error_config, 866
route_ac	s_U_delay
route::interface_t, 871	prediction_error_config, 866
route_out	s_U_delayflt
route::interface_t, 871	prediction_error_config, 866
rows	s_Usmpl
acsave::mat4head_t, 161	prediction_error_config, 867
rt_nlms_t, 873	s_Wflt
~rt_nlms_t, 874	prediction_error_config, 866
ac, 874	s_Y_delay
channels, 874	prediction_error_config, 866
F, 874	s_Y_delayflt
frames, 874	prediction_error_config, 866
fu, 875	s_b
fu_previous, 875	lpc_bl_predictor_config, 381
fuflt, 875	_lpc_burglattice_config, 385
insert, 874	s_E
n_no_update_, 875	prediction_error_config, 866
name_d_, 875	rt_nlms_t, 875
name_e_, 875	s_f
name_u_, 875	lpc_bl_predictor_config, 381
no_iter, 875	lpc_burglattice_config, 385
ntaps, 874	s_file_in
P_Sum, 875	io_file_t, 348

s_in	acsave::save_var_t, 163
io_file_t, 348	save_mat4
io_parser_t, 354	acsave::save_var_t, 162
io_tcp_sound_t, 369	save_spec.cpp, 1041
MHAIOPortAudio::io_portaudio_t, 562	save_spec_t, 876
MHAJack::client_t, 574	basename, 877
s_out	prepare, 877
coherence::cohflt_t, 233	process, 877
combc_t, 237	save_spec_t, 876
fftfilterbank::fftfb_plug_t, 323	save_txt
io_file_t, 348	acsave::save_var_t, 162
io_parser_t, 354	save_var_t
MHAIOPortAudio::io_portaudio_t, 562	ac2lsl::save_var_t, 130
MHAJack::client_t, 574	— — ·
<del>-</del> ·	ac2lsl::save_var_t< mha_complex_t >,
s_U	133
prediction_error_config, 866	acsave::save_var_t, 162
s_W	save_vars
prediction_error_config, 866	acmon::acmon_t, 151
sInput	save_wave.cpp, 1041
MHAFilter::fftfilter_t, 503	save_wave_t, 877
SOCKET_ERROR	basename, 878
mha_tcp.cpp, 1008	prepare, 878
SOCKET	process, 878
MHA_TCP, 85	save_wave_t, 878
mha_tcp.cpp, 1008	saveas_mat4
SPP	MHASignal, 115, 116
timo_AC, 913	SC NUMBER OF THE STATE OF THE S
START_BETA	MHASignal::hilbert_fftw_t, 751
ADM, 76	spec2wave_t, 898
STRERROR	scale
MHA_TCP, 85	example5_t, 308
STRLEN	MHASignal, 113
mha_errno.c, 970	MHASignal::fft_t, 750
sWeights	MHASignal::spectrum_t, 779
MHAFilter::fftfilter_t, 503	MHASignal::waveform_t, 796
safe_div	scale_ch
Complex arithmetics in the openMHA, 62	example2_t, 300
mha_signal.cpp, 996	example3_t, 303
mha_signal.hh, 1005	example4_t, 307
sample	plugin_interface_t, 848
lpc_config, 387	scale_channel
samplerate	MHASignal::spectrum_t, 780
io_file_t, 347	MHASignal::waveform_t, 796
io_tcp_sound_t, 368	scale_frame
MHAIOPortAudio::io_portaudio_t, 562	MHASignal::waveform_t, 797
MHAJack::client_t, 573	scale_fun_t
samples_AC	MHAOvlFilter, 95
acConcat_wave, 145	scale_var_t
samplingrate	MHAOvlFilter::scale_var_t, 608
MHAOvIFilter::fftfb_t, 593	scalefac
save_m	MHATableLookup::linear_table_t, 803

scaler_t	testplugin::config_parser_t, 908
gain::scaler_t, 335	set_announce_port
scan_dir	mhaserver_t, 737
addsndfile::addsndfile_if_t, 174	set_buf_address
scan_plugin	ac2lsl::save_var_base_t, 129
pluginbrowser_t, 849	ac2lsl::save_var_t, 131
scan_plugins	ac2lsl::save_var_t< mha_complex_t >,
pluginbrowser_t, 849	134
scheduler	set_channelcnt
analysepath_t, 210	MHAFilter::adapt_filter_t, 492
MHAPlugin_Split::posix_threads_t, 721	set_connected
schroeder_t	io_tcp_parser_t, 362
MHASignal::schroeder_t, 774	set_entries
search_pattern	MHAParser::keyword_list_t, 643
addsndfile::addsndfile_if_t, 174	set_errnos
search_result	io_tcp_fwcb_t, 356
addsndfile::addsndfile_if_t, 174	set_error
sec2smp	mha_fifo_lw_t, 427
Vector and matrix processing toolbox, 39	set_fb_pars
select_plug	DynComp::dc_afterburn_t, 287
altplugs_t, 208	set_help
select_source	MHAParser::base_t, 616
MHAMultiSrc::base_t, 583	set_id_string
selected_plug	MHAParser::parser_t, 667
altplugs_t, 208	set index
send_frame	MHAParser::keyword_list_t, 643
ac2lsl::save_var_base_t, 128	set_input_domain
ac2lsl::save_var_t, 131	MHAPlugin_Split::domain_handler_t, 713
ac2lsl::save_var_t< mha_complex_t >,	set_input_portnames
134	MHAJack::client_t, 572
send_osc_float	set_level
ac2osc_t, 138	addsndfile::addsndfile_if_t, 174
Server	fader_wave::fader_wave_if_t, 313
MHA TCP::Server, 457, 458	set_level_db
server	MHASignal::loop_wavefragment_t, 756
io_tcp_t, 372	set_level_lin
server_fragsize	MHASignal::loop_wavefragment_t, 756
MHAIOJackdb::io_jack_t, 557	set_local_port
server_port_open	io_tcp_parser_t, 360
io_tcp_parser_t, 363	set_locate
server_srate	MHAIOJackdb::io_jack_t, 556
MHAIOJackdb::io_jack_t, 557	set_max_angle_ind
servername	parser_int_dyn, 840
MHAIOJack::io_jack_t, 552	set_minabs
MHAIOJackdb::io_jack_t, 557	mha_signal.cpp, 996
serversocket	mha_signal.hh, 1005
MHA_TCP::Server, 459	set_new_peer
set	io_tcp_parser_t, 362
Complex arithmetics in the openMHA, 58,	set_node_id
59	MHAParser::base_t, 615
MHA_TCP::Async_Notify, 445	set_output_domain
<del>-</del>	-

sat	MHAPlugin_Split::domain_handler_t, 713 _output_portnames	io_file_t, 348 sf_t
301_	MHAJack::client_t, 572	MHASndFile::sf_t, 798
set	parse_cb	sf_wave_t
001_	MHAParser::c_ifc_parser_t, 624	MHASndFile::sf wave t, 799
set	range	sfinf in
-	MHAParser::kw_t, 646	io_file_t, 348
	MHAParser::range_var_t, 669	sfinf_out
set	_server_port_open	io_file_t, 348
-	io_tcp_parser_t, 361	shadowfilter_begin, 121
set	_state	shadowfilter_begin.cpp, 1042
001_	MHAFilter::complex_bandpass_t, 497	shadowfilter_begin::cfg_t, 878
	MHAFilter::iir_ord1_real_t, 520	cfg_t, 879
set		in_spec_copy, 879
001_	MHAFilter::o1flt_lowpass_t, 526	nch, 879
	MHAFilter::o1flt maxtrack t, 528	ntracks, 879
	MHAFilter::01flt_mintrack_t, 530	out_spec, 879
set	tau_attack	process, 879
001_	MHAFilter::o1 ar filter t, 523	shadowfilter_begin::shadowfilter_begin_t, 880
set	tau_release	basename, 881
001_	MHAFilter::o1_ar_filter_t, 523	nch, 881
set	_use_jack_transport	ntracks, 881
001_	MHAIOJackdb::io_jack_t, 556	prepare, 881
	MHAJack::client_t, 572	process, 881
set	value	shadowfilter_begin_t, 880
001_	MHAParser::keyword_list_t, 643	shadowfilter_begin_t
set	_weights	shadowfilter_begin::shadowfilter_begin ←
_	MHAFilter::complex_bandpass_t, 497	_t, 880
	MHAFilter::gamma_flt_t, 513	shadowfilter_end, 121
set	xfun	shadowfilter_end.cpp, 1042
_	MHATableLookup::xy_table_t, 807	shadowfilter_end::cfg_t, 881
set	xmax	ac, 882
_	MHATableLookup::linear_table_t, 802	cfg_t, 882
set	xmin	gains, 882
_	MHATableLookup::linear_table_t, 801	in_spec, 882
set	_xyfun	name, 882
	MHATableLookup::xy table t, 808	nch_out, 882
set	yfun	nfft, 882
	MHATableLookup::xy_table_t, 808	ntracks, 882
seto	channels	out spec, 882
	dc::wideband inhib vars t, 254	process, 882
setl	ock	shadowfilter_end::shadowfilter_end_t, 883
	io_file_t, 347	basename, 884
	MHAParser::variable_t, 676	prepare, 884
	testplugin::config_parser_t, 908	process, 884
sf		shadowfilter_end_t, 883
	MHASndFile::sf_t, 798	shadowfilter_end_t
	wavwriter_t, 931	shadowfilter_end::shadowfilter_end_
sf_i	<del>_</del> :	t, 883
_	io_file_t, 348	shape
sf_c	out	MHAOvIFilter::fftfb_t, 593

shapes MHAOvIFilter::fftfb_vars_t, 596	process, 886 sine_t, 886
shift	update_cfg, 886
lpc, 376	size
lpc_config, 386	MHA_AC::ac2matrix_helper_t, 392
shifted	MHA_AC::acspace2matrix_t, 397
hilbert_shifter_t, 338	MHAKernel::algo_comm_class_t, 580
side	MHASignal::matrix_t, 761
	<u> </u>
mha_channel_info_t, 409	Vector and matrix processing toolbox, 43
sign_t	
MHASignal::schroeder_t, 774	Size_t
signal	MHAParser::keyword_list_t, 642
testplugin::if_t, 910	skip
signal_counter	ac2lsl::ac2lsl_t, 125
MHASignal, 117	ac2lsl::cfg_t, 127
signal_out	ac2osc_t, 138
MHAPlugin_Split::split_t, 725	skipcnt
signal_parser_t	ac2lsl::cfg_t, 127
testplugin::signal_parser_t, 911	ac2osc_t, 139
sin125	Sleep
speechnoise_t, 900	mha_tcp.hh, 1010
sin1k	slope
speechnoise_t, 900	softclipper_t, 893
sin250	softclipper_variables_t, 895
speechnoise_t, 900	slope_db
sin2k	softclip_t, 892
speechnoise_t, 900	smoothgains_bridge, 122
sin4k	smoothgains_bridge.cpp, 1042
speechnoise_t, 900	smoothgains_bridge::overlapadd_if_t, 887
sin500	~overlapadd_if_t, 888
	~overiapadd_ii_t, 866 algo, 889
speechnoise_t, 900 sin8k	•
	cf_in, 889
speechnoise_t, 900	cf_out, 889
sinc	epsilon, 889
MHAFilter, 90	irswnd, 889
sine.cpp, 1042	mode, 889
sine_cfg_t, 884	overlapadd_if_t, 888
amplitude, 885	patchbay, 889
channels, 885	plugloader, 889
mix, 885	prepare, 888
phase_increment_div_2pi, 885	process, 888
sine_cfg_t, 885	release, 888
sine_t, 885	update, 889
$\sim$ sine_t, 886	smoothgains_bridge::smoothspec_wrap_
channels, 887	t, 889
frequency, 887	proc_1, 890
lev, 887	proc_2, 890
mode, 887	smoothspec, 890
patchbay, 887	smoothspec_epsilon, 890
phase_div_2pi, 887	smoothspec_wrap_t, 890
prepare, 886	spec_in_copy, 890
prepare, <del>ooo</del>	3pec_iii_copy, 030

use_smoothspec, 890	patchbay, 892
smoothspec	prepare, 892
MHAFilter::smoothspec t, 543	process, 892
smoothgains_bridge::smoothspec_	slope_db, 892
wrap_t, 890	softclip_t, 892
smoothspec_epsilon	start_limit, 892
smoothgains_bridge::smoothspec_←	tftype, 892
wrap_t, 890	update, 892
• —	•
smoothspec_t	softclipper_t, 892
MHAFilter::smoothspec_t, 542	attack, 893
smoothspec_wrap_t	clipmeter, 893
smoothgains_bridge::smoothspec_←	decay, 893
wrap_t, 890	hardlimit, 893
smp2rad	linear, 893
Vector and matrix processing toolbox, 40	process, 893
smp2sec	slope, 893
Vector and matrix processing toolbox, 39	softclipper_t, 893
smpl	threshold, 893
prediction_error_config, 867	softclipper_variables_t, 894
sn_in	clipped, 895
MHAJack::client_avg_t, 565	hardlimit, 895
MHAJack::client_noncont_t, 567	linear, 895
sn_out	max_clipped, 895
MHAJack::client_avg_t, 565	slope, 895
MHAJack::client_noncont_t, 568	softclipper_variables_t, 894
sndfile t	tau_attack, 894
addsndfile::sndfile_t, 178	tau_clip, 895
snprintf_required_length	tau_decay, 895
mha_error_helpers, 83	threshold, 895
snrPost1Debug	sort_fftw2spec
noisePowProposedScale::noisePow↔	MHASignal::fft_t, 749
Proposed, 833	sort_spec2fftw
sock_addr	MHASignal::fft t, 749
<del>_</del>	
MHA_TCP::Server, 459	sound
sock_init_t	io_tcp_t, 372
MHA_TCP::sock_init_t, 460	source_channel_index
sock_initializer	MHAFilter::partitioned_convolution_t
MHA_TCP, 86	::index_t, 535
Sockaccept_Event	MHAFilter::transfer_function_t, 548
MHA_TCP::Sockaccept_Event, 460	source_id
Sockread_Event	ac2lsl::ac2lsl_t, 125
MHA_TCP::Sockread_Event, 461	ac2lsl::cfg_t, 127
Sockwrite_Event	sout
MHA_TCP::Sockwrite_Event, 462	matrixmixer::cfg_t, 388
softclip	route::process_t, 872
calibrator_runtime_layer_t, 222	sout_ac
calibrator_variables_t, 226	route::process_t, 872
softclip.cpp, 1043	spec2fir
softclip_t, 891	MHAFilter, 89
attack, 892	MHAFilter::smoothspec_t, 543
decay, 892	spec2spec

plugindescription_t, 850	specSteer2
spec2wave	acSteer_config, 167
MHASignal::fft_t, 748	spectrum_t
plugindescription_t, 850	MHA_AC::spectrum_t, 402
spec2wave.cpp, 1043	MHAMultiSrc::spectrum_t, 585
max, 1043	MHASignal::spectrum_t, 777
min, 1043	speechnoise
spec2wave_if_t, 895	calibrator_runtime_layer_t, 223
patchbay, 896	speechnoise.cpp, 1043
prepare, 896	bandw_correction, 1045
process, 896	erb_hz_f_hz, 1045
ramplen, 896	fhz2bandno, 1045
spec2wave_if_t, 896	hz2hz, 1045
update, 896	NUM_ENTR_LTASS, 1044
window_config, 896	NUM ENTR MHAORIG, 1044
spec2wave_scale	NUM_ENTR_OLNOISE, 1044
MHASignal::fft_t, 749	vLTASS combined lev, 1046
spec2wave_t, 897	vLTASS_female_lev, 1046
~spec2wave_t, 897	vLTASS_freq, 1045
calc_out, 898	vLTASS male lev, 1046
ft, 897	vMHAOrigFreq, 1045
nfft, 898	vMHAOrigSpec, 1045
npad1, 897	vOlnoiseFreq, 1046
npad2, 898	vOlnoiseLev, 1046
nwndshift, 898	speechnoise.h, 1046
out_buf, 898	speechnoise_t, 899
postwindow, 898	brown, 900
process, 897	creator, 901
ramps, 898	LTASS combined, 900
sc, 898	LTASS_female, 900
spec2wave t, 897	LTASS male, 900
write_buf, 898	mha, 900
spec_fader_t, 898	noise_type_t, 900
~spec_fader_t, 899	olnoise, 900
fr, 899	pink, 900
gains, 899	sin125, 900
nch, 899	sin1k, 900
spec_fader_t, 899	sin250, 900
spec_in	sin2k, 900
MHAPlugin_Split::domain_handler_t, 716	sin4k, 900
overlapadd::overlapadd_t, 838	sin500, 900
wave2spec_t, 928	sin8k, 900
spec_in_copy	speechnoise_t, 901
smoothgains_bridge::smoothspec_←	TEN_SPL_250_8k, 900
wrap_t, 890	TEN_SPL_50_16k, 900
spec_out	TEN SPL, 900
MHAPlugin_Split::domain_handler_t, 716	white, 900
MHAPlugin_Split::split_t, 726	split.cpp, 1046
timoConfig, 918	default_thread_platform_string, 1047
specSteer1	default_thread_platform_type, 1047
acSteer_config, 167	MHAPLUGIN_OVERLOAD_OUTDOM←
_ 5,	<del>-</del>

AIN, 1047	io_file_t, 348
posixthreads, 1047	io_parser_t, 354
split_t	io_tcp_fwcb_t, 358
MHAPlugin_Split::split_t, 724	MHAIOPortAudio::io_portaudio_t, 562
splitted_part_t	MHAJack::client_t, 574
MHAPlugin_Split::splitted_part_t, 728	start_limit
spnoise_channels	softclip_t, 892
calibrator_variables_t, 226	start_lin
spnoise_level	cfg_t, 228
calibrator_variables_t, 226	start_new_session
spnoise mode	wavrec_t, 929
calibrator_variables_t, 226	started
spnoise_parser	fw_t, 329
calibrator_variables_t, 226	io_parser_t, 354
spp	starting
timoSmooth, 922	mha_drifter_fifo_t, 421
srate	startpos
ac2lsl::cfg_t, 127	addsndfile::addsndfile_if_t, 174
adm_if_t, 189	startsample
calibrator_variables_t, 226	io_file_t, 348
MHAParser::mhaconfig_mon_t, 657	startup_zeros
MHAPlugin_Resampling::resampling_if←	mha_drifter_fifo_t, 423
_t, 709	stat_t
mhaconfig_t, 481	MHA_AC::stat_t, 404
testplugin::config_parser_t, 908	MHASignal::stat_t, 781
srate	state
MHAFilter::gamma_flt_t, 514	fw_t, 331
srcfile	MHA_TCP::Thread, 465
MHAParser::parser_t, 667	MHAFilter::filter_t, 511
srcline	state_cpuload
MHAParser::parser_t, 667	MHAIOJack::io_jack_t, 553
start	MHAIOJackdb::io_jack_t, 557
alsa_base_t, 199	state_parser
alsa_base_t, 199 alsa_t, 203	MHAIOJack::io_jack_t, 553
fw_t, 328	MHAIOJackdb::io_jack_t, 557
io_alsa_t, 343	<del>-</del> -
	state_priority
io_file_t, 347	MHAIOJack::io_jack_t, 553
io_lib_t, 351	MHAIOJackdb::io_jack_t, 557
io_parser_t, 353	state_scheduler
io_tcp_fwcb_t, 356	MHAIOJack::io_jack_t, 553
io_tcp_t, 371	MHAIOJackdb::io_jack_t, 557
MHAJack::client_t, 571	state_t
start_event	fw_t, 328
io_alsa_t, 344	state_xruns
io_file_t, 348	MHAIOJack::io_jack_t, 553
io_parser_t, 354	MHAIOJackdb::io_jack_t, 557
io_tcp_fwcb_t, 357	staticgain
MHAIOPortAudio::io_portaudio_t, 562	coherence::cohflt_t, 233
MHAJack::client_t, 574	coherence::vars_t, 234
start_handle	status
io_alsa_t, 344	MHA_TCP::Wakeup_Event, 471

	MIIA laskwaliant t E74
std MUA ACceptat to 404	MHAJack::client_t, 571
MHA_AC::stat_t, 404	mha_drifter_fifo_t, 421
std_vector_float	stop_event
Vector and matrix processing toolbox, 48	io_alsa_t, 344
std_vector_vector_complex	io_file_t, 348
Vector and matrix processing toolbox, 49	io_parser_t, 354
std_vector_vector_float	io_tcp_fwcb_t, 357
Vector and matrix processing toolbox, 48	MHAIOPortAudio::io_portaudio_t, 562
stdcomplex	MHAJack::client_t, 574
Complex arithmetics in the openMHA, 59	stop_handle
steerFile	io_alsa_t, 344
acSteer, 166	io_file_t, 348
steerbf, 901	io_parser_t, 354
$\sim$ steerbf, 902	io_tcp_fwcb_t, 358
angle_ind, 903	MHAIOPortAudio::io_portaudio_t, 562
angle_src, 903	MHAJack::client_t, 574
bf_src, 903	stopped
patchbay, 903	fw_t, 329
prepare, 902	io_file_t, 347
process, 902	io_parser_t, 354
release, 903	MHAJack::client_t, 573
steerbf, 902	route::interface_t, 871
update_cfg, 903	store
steerbf.cpp, 1047	mon_t, 819
INSERT_PATCH, 1048	store_frame
PATCH_VAR, 1048	acsave::cfg_t, 160
steerbf.h, 1048	acsave::save_var_t, 162
steerbf_config, 903	str2val
_steerbf, 904	MHAParser::StrCnv, 106, 107
~steerbf_config, 904	str2val< mha_real_t >
ac, 904	MHAParser::StrCnv, 106
bf_src_copy, 904	
bf_vec, 904	str_error MHAJack::client_t, 572
nangle, 904	strNames AC
<b>G</b> ,	<b>—</b>
nchan, 904	acConcat_wave_config, 146
nfreq, 904	strdom
outSpec, 904	analysemhaplugin.cpp, 942
process, 904	latex_doc_t, 373
steerbf_config, 904	stream
stime	ac2lsl::save_var_t, 132
MHA_TCP, 85	ac2lsl::save_var_t< mha_complex_t >,
stop	135
alsa_base_t, 199	stream_dir
alsa_t, 203	alsa_dev_par_parser_t, 201
fw_t, 328	strict_channel_match
io_alsa_t, <mark>343</mark>	io_file_t, 348
io_file_t, 347	strict_srate_match
io_lib_t, 351	io_file_t, 348
io_parser_t, 354	stride
io_tcp_fwcb_t, 357	comm_var_t, 239
io_tcp_t, 371	testplugin::ac_parser_t, 906

string_mon_t	cpuload_t, 241
MHAParser::string_mon_t, 671	table_t
string_t	MHATableLookup::table_t, 804
MHAParser::string_t, 674	tail
strreplace	MHAFilter::fftfilterbank_t, 507
MHAParser, 103	target_channel_index
structVersion	MHAFilter::partitioned_convolution_t
MHAIOPortAudio::device_info_t, 559	::index t, 535
subsample_delay_t	MHAFilter::transfer_function_t, 548
MHASignal::subsample_delay_t, 782	tau
subsampledelay_coeff	coherence::vars_t, 234
ADM, 75	droptect_t, 281
sum	fader_if_t, 311
MHASignal::stat_t, 781	tau_attack
MHASignal::waveform_t, 791, 792	softclipper_variables_t, 894
sum2	tau_beta
MHASignal::stat_t, 781	adm_if_t, 189
sum_channel	
MHASignal::waveform_t, 792	tau_clip
sumsqr	softclipper_variables_t, 895
MHASignal::waveform_t, 792	tau_decay
sumsqr_channel	softclipper_variables_t, 895
Vector and matrix processing toolbox, 54	tau_level
sumsqr_frame	calibrator_variables_t, 226
Vector and matrix processing toolbox, 55	tau_unit
SVC	coherence::vars_t, 234
analysepath_t, 210	tauattack
symmetry_scale	dc::dc_vars_t, 250
MHAOvIFilter::fspacing_t, 601	dc_simple::dc_vars_t, 262
sync	taudecay
mha_fifo_lw_t, 427	dc::dc_vars_t, 251
mha_fifo_thread_guard_t, 435	dc_simple::dc_vars_t, 262
sysread	taugain
MHA_TCP::Connection, 449	DynComp::dc_afterburn_vars_t, 290
syswrite	taurmslevel
MHA_TCP::Connection, 450	dc::dc_vars_t, 250
WITA_TOTCommection, 450	tcp_connect_to
Т	mha_tcp.cpp, 1008
MHA_TCP::OS_EVENT_TYPE, 456	tcp_connect_to_with_timeout
t	mha_tcp.cpp, 1008
acsave::mat4head_t, 161	tcpserver
mha tictoc t, 471	mhaserver_t, 738
plingploing::plingploing_t, 844	termination_request
tAC	MHAPlugin_Split::posix_threads_t, 721
timoConfig, 917	test_error
TEN_SPL_250_8k	io_lib_t, 351
speechnoise_t, 900	MHAParser::c_ifc_parser_t, 624
TEN_SPL_50_16k	PluginLoader::mhapluginloader_t, 859
speechnoise_t, 900	test_fail
TEN_SPL	dc_simple, 78
<del>_</del>	<u> </u>
speechnoise_t, 900	test_prepare
table	testplugin::if_t, 910

test_process	signal, 910
testplugin::if_t, 910	test_prepare, 910
test_version	test_process, 910
PluginLoader::mhapluginloader_t, 859	testplugin::signal_parser_t, 911
testalsadevice.c, 1048	input_spec, 911
main, 1048	input_wave, 911
testplugin, 122	output_spec, 911
testplugin.cpp, 1048	output_wave, 911
testplugin::ac_parser_t, 905	signal parser t, 911
MHA_AC_CHAR, 906	tftype
_MHA_AC_DOUBLE, 906	MHAPlugin::plugin_t, 707
_MHA_AC_FLOAT, 906	softclip_t, 892
_MHA_AC_INT, 906	The MHA Framework interface, 22
MHA AC MHACOMPLEX, 906	The openMHA configuration language, 29
MHA AC MHAREAL, 906	The openMHA Plugins (programming inter-
_unknown, 906	face), 6
ac_parser_t, 906	MHAPLUGIN_CALLBACKS_PREFIX, 8
char_data, 906	MHAPLUGIN_CALLBACKS, 8
complex_data, 906	MHAPLUGIN_DOCUMENTATION, 9
data_type, 906	The openMHA Toolbox library, 30
data_type, 500 data_type_t, 906	thefullname
do get var, 906	MHAParser::base_t, 617
do_insert_var, 906	thirdoctave_analyzer_t
float_data, 906	MHAFilter::thirdoctave_analyzer_t, 545
get_var, 906	this_outer_out
insert_var, 906	MHASignal::doublebuffer_t, 747
int_data, 906	thr f
num_entries, 906	MHA_TCP::Thread, 464
patchbay, 906	Thread
stride, 906	MHA_TCP::Thread, 464
testplugin::config_parser_t, 907	thread
channels, 908	analysepath_t, 210
	· · —
config_parser_t, 907	io_tcp_t, 372
domain, 908	MHAPlugin_Split::posix_threads_t, 721
fftlen, 908	MHAPlugin_Split::splitted_part_t, 731
fragsize, 908	thread_arg
get, 908	MHA_TCP::Thread, 466
set, 908	thread_attr
setlock, 908	MHA_TCP::Thread, 465
srate, 908	thread_finish_event
wndlen, 908	MHA_TCP::Thread, 465
testplugin::if_t, 909	thread_func
_prepare, 910	MHA_TCP::Thread, 466
ac, 910	thread_handle
config_in, 910	MHA_TCP::Thread, 465
config_out, 910	thread_platform
if_t, 910	MHAPlugin_Split::split_t, 725
patchbay, 910	thread_platform_t
plug, 910	MHAPlugin_Split::thread_platform_t, 732
prepare, 910	thread_start
process, 910	analysispath.cpp, 942

io_alsa_t, 343	gain_min_db, 915
MHAPlugin_Split::posix_threads_t, 720	in_cfg, 915
thread_start_func	kappa_const, 915
mha_tcp.cpp, 1008	lambda_thresh, 915
thread_startup_function	noisePow_name, 915
MHAIOTCP.cpp, 1031	prior g, 915
threshold	timo_params, 914
droptect_t, 281	winF0, 915
softclipper_t, 893	xi_min_db, 915
softclipper variables t, 895	xi_opt_db, 915
tictoc	timoConfig, 915
mhachain::plugs_t, 479	∼timoConfig, 917
timeout	ac, 917
MHA_TCP::OS_EVENT_TYPE, 456	alpha_const, 917
MHA_TCP::Timeout_Watcher, 468	alpha_frame, 918
Timeout Event	alpha_hat, 918
MHA TCP::Timeout Event, 467	alpha_prev, 918
Timeout Watcher	copy_AC, 917
MHA_TCP::Timeout_Watcher, 468	fftlen, 917
timeshift	GLRexp, 918
Vector and matrix processing toolbox, 45	GLR, 918
timo AC, 912	gain_min, 917
alpha_frame_AC, 913	gain_wiener, 918
alpha_hat_AC, 913	gamma_post, 918
copy, 912	lambda_ceps, 918
gain_wiener_AC, 913	lambda_ceps_prev, 918
gamma_post_AC, 912	lambda_ml_ceps, 918
<del>-</del>	— — ·
insert, 912	lambda_ml_full, 918
lambda_ceps_AC, 913	lambda_ml_smooth, 918
lambda_ml_AC, 913	lambda_spec, 918
lambda_ml_ceps_AC, 913	log_lambda_spec, 918
lambda_ml_smooth_AC, 913	logGLRFact, 918
lambda_spec_AC, 913	max_q, 918
log_lambda_spec_AC, 913	max_val, 918
max_q_AC, 913	mha_fft, 917
max_val_AC, 913	nchan, 917
pitch_set_first_AC, 913	nfreq, 917
pitch_set_last_AC, 913	noisePow, 918
SPP, 913	ola_powspec_scale, 917
timo_AC, 912	params, 917
winF0_AC, 913	pitch_set_first, 918
xi_est_AC, 913	pitch_set_last, 918
xi_ml_AC, 913	powSpec, 918
timo_params, 914	priorFact, 918
alpha_const_limits_hz, 915	process, 917
alpha_const_vals, 915	q_high, 917
alpha_pitch, 915	q_low, 917
beta_const, 915	spec_out, 918
delta_pitch, 915	tAC, 917
f0_high, 915	timoConfig, 917
f0_low, 915	winF0, 917

xi_est, 918 xi_min, 917 xi_ml, 918 xiOpt, 918	transducers.cpp, 1050 kw_index2type, 1051 rmslevelmeter, 1051 rtcalibrator, 1051
timoSmooth, 919	vint_0123n1, 1051
∼timoSmooth, 920	transfer_function_t
alpha_const_limits_hz, 922	MHAFilter::transfer_function_t, 547
alpha_const_vals, 922	trigger_processing
• – –	MHAPlugin_Split::split_t, 724
alpha_pitch, 921	MHAPlugin_Split::splitted_part_t, 730
beta_const, 921	trim
delta_pitch, 921	MHAParser, 103
f0_high, 921	•
f0_low, 921	try_accept  MHA_TCB::Server_450
gain_min_db, 922	MHA_TCP::Server, 459
kappa_const, 921	try_write
lambda_thresh, 921	MHA_TCP::Connection, 452
noisePow_name, 922	ttl
on_model_param_valuechanged, 921	ac2osc_t, 138
patchbay, 922	tv1
prepare, 921	mha_tictoc_t, 471
prepared, 922	tv2
prior_q, 922	mha_tictoc_t, 471
process, 920	tz
release, 921	mha_tictoc_t, 471
spp, 922	U
timoSmooth, 920	
update_cfg, 921	rt_nlms_t, 874
win_f0, 922	UCL
xi_min_db, 921	AuditoryProfile::parser_t::ear_t, 216
xi_opt_db, 922	AuditoryProfile::profile_t::ear_t, 219
timoSmooth.cpp, 1049	UPrew
INSERT_PATCH, 1050	prediction_error_config, 867
INSERT_VAR, 1050	UPrewW
PATCH_VAR, 1050	prediction_error_config, 867
timoconfig.cpp, 1049	UbufferPrew
CHANLOOP, 1049	prediction_error_config, 866
EPSILON, 1049	Ufit
•	rt_nlms_t, 874
LPSCALE, 1049	uint_mode
OVERLAP_FACTOR, 1049	addsndfile::addsndfile_if_t, 174
POWSPEC_FACTOR, 1049	uint_vector_t
timoconfig.h, 1049	MHASignal::uint_vector_t, 785
timosmooth.h, 1050	underflow
tmp_spec	MHAFilter::polyphase_resampling_t, 539
MHAFilter::smoothspec_t, 544	unit
tmp_wave	MHAOvlFilter::fscale_t, 599
MHAFilter::smoothspec_t, 544	unit2hz
to_from	MHAOvIFilter::scale_var_t, 608
acTransform_wave, 170	unlock_channels
acTransform_wave_config, 171	fw_vars_t, 332
total_read	unlock_srate_fragsize
io_file_t, 348	fw_vars_t, 332

unset_fb_pars	doasvm_classification, 273
DynComp::dc_afterburn_t, 287	doasvm_feature_extraction, 277
up	example6_t, 309
MHASignal::schroeder_t, 774	fader_if_t, 311
up_incl	fftfbpow::fftfbpow_interface_t, 317
MHAParser::range_var_t, 670	fftfilterbank::fftfb_interface_t, 321
up_limit	lpc, 376
MHAParser::range_var_t, 670	lpc_bl_predictor, 379
MHASignal::quantizer t, 768	lpc_burglattice, 383
up_thresh	multibandcompressor::interface_t, 823
acPooling_wave_config, 156	noise_t, 829
update	noisePowProposedScale::interface_t, 83
ac2lsl::ac2lsl_t, 125	plugin_interface_t, 848
ac2wave_if_t, 141	prediction_error, 863
addsndfile::addsndfile_if_t, 173	sine_t, 886
adm_if_t, 188	steerbf, 903
calibrator_t, 225	timoSmooth, 921
coherence::cohflt if t, 230	update_coeffs
dc::dc_if_t, 246	MHAFilter::fftfilter_t, 501
dc::wideband inhib vars t, 254	MHAFilter::fftfilterbank t, 505
	<u> </u>
delay::interface_t, 266	update_dc
DynComp::dc_afterburn_t, 288	dc_simple::dc_if_t, 257
DynComp::gaintable_t, 293	update_filter
frequency_translator_t, 325	MHAFilter::iir_filter_t, 518
MHA_AC::ac2matrix_t, 393	update_frame
MHA_AC::acspace2matrix_t, 397	addsndfile::level_adapt_t, 176
MHA_AC::stat_t, 404	fader_wave::level_adapt_t, 315
MHAMultiSrc::spectrum_t, 585	update_gain
MHAMultiSrc::waveform_t, 587	gain::gain_if_t, 334
MHAParser::mhaconfig_mon_t, 656	update_gain_mon
MHAPlugin_Split::split_t, 724	dc_simple::dc_if_t, 257
mhachain::chain_base_t, 475	update_hz
nlms_t, 827	MHAOvIFilter::fscale_bw_t, 598
overlapadd::overlapadd_if_t, 835	MHAOvlFilter::fscale_t, 599
plingploing::if_t, 841	update_level
route::interface_t, 871	dc_simple::dc_if_t, 257
$smoothgains\_bridge::overlapadd\_if\_{\leftarrow}$	update_level_mon
t, 889	dc_simple::dc_if_t, 257
softclip_t, 892	update_levels
spec2wave_if_t, 896	multibandcompressor::plugin_signals_t,
wave2spec_if_t, 925	824
update_bbgain	update_m
gain::gain_if_t, 334	matrixmixer::matmix_t, 390
update_burner	update_minmax
DynComp::dc_afterburn_t, 287	gain::gain_if_t, 334
update_cfg	update_mode
acConcat_wave, 145	ac2osc_t, 138
acPooling_wave, 154	update_monitors
acSteer, 166	dc::dc_if_t, 246
acTransform_wave, 170	update_mu
delaysum::delaysum_if_t, 268	MHAFilter::adapt_filter_t, 492
,	

update_ntaps	use_wbinhib
MHAFilter::adapt_filter_t, 492	dc::dc_vars_t, 251
update_parser	user
windowselector_t, 934	MHAParser::window_t, 696
update_proc_load	user_err_msg
mhachain::plugs_t, 478	MHAIOFile.cpp, 1017
update_ramplen	MHAIOJack.cpp, 1020
altplugs_t, 207	MHAIOJackdb.cpp, 1022
update_recmode	MHAIOParser.cpp, 1025
acmon::acmon_t, 151	MHAIOPortAudio.cpp, 1028
update_selector_list	MHAIOTCP.cpp, 1032
altplugs_t, 207	MHAIOalsa.cpp, 1014
update_tau_level	user_t
calibrator_t, 225	MHAWindow::user_t, 818
update_varlist	username
• —	MHA_AC::ac2matrix_helper_t, 392
ac2lsl::cfg_t, 127	userwnd
updated	windowselector_t, 934
windowselector_t, 934	William Scientific to the second seco
updater	v_G
MHAOvlFilter::fscale_bw_t, 598	prediction_error_config, 866
MHAOvlFilter::fscale_t, 599	vFlog
upper_threshold	DynComp::gaintable_t, 295
acPooling_wave, 154	vGCC ac
upsample.cpp, 1051	doasym_feature_extraction_config, 278
upsampling_factor	vGCC_con
MHAFilter::polyphase_resampling_t, 539	acConcat_wave_config, 146
upscale	vGCC_name
MHASignal::quantizer_t, 768	doasym_classification, 273
us_t, 922	doasym_feature_extraction, 277
antialias, 923	vGCC
prepare, 923	acConcat_wave_config, 146
process, 923	
ratio, 923	doasvm_feature_extraction_config, 278 vLTASS combined lev
release, 923	
us_t, 923	speechnoise.cpp, 1046
use_date	vLTASS_female_lev
wavrec_t, 930	speechnoise.cpp, 1046
use_frozen_	vLTASS_freq
cfg_t, 228	speechnoise.cpp, 1045
<del>y_</del> :	vLTASS_male_lev
use_jack_transport	speechnoise.cpp, 1046
MHAIOJackdb::io_jack_t, 557	vMHAOrigFreq
MHAJack::client_t, 574	speechnoise.cpp, 1045
use_mat	vMHAOrigSpec
acmon::ac_monitor_t, 148	speechnoise.cpp, 1045
use_own_ac	vOlnoiseFreq
altplugs_t, 208	speechnoise.cpp, 1046
use_sine	vOlnoiseLev
cpuload_t, 241	speechnoise.cpp, 1046
use_smoothspec	val2str
smoothgains_bridge::smoothspec_←	MHAParser::StrCnv, 107, 108
wrap_t, 890	val_max

alsa_t, 205	vbin1
val_min	MHAOvlFilter::fftfb_t, 593
 alsa_t, 205	vbin2
validate	MHAOvIFilter::fftfb_t, 593
AuditoryProfile::parser_t::fmap_t, 217	vcomplex_mon_t
MHAParser::keyword_list_t, 643	MHAParser::vcomplex_mon_t, 678
MHAParser::kw_t, 646	vcomplex_t
MHAParser::range_var_t, 669, 670	MHAParser::vcomplex_t, 681
validator_channels	vec_y
mhasndfile.cpp, 1036	MHATableLookup::linear_table_t, 803
validator_length	Vector and matrix processing toolbox, 32
mhasndfile.cpp, 1036	assign, 44, 45
value	bin2freq, 40
AuditoryProfile::parser_t::fmap_t, 217	channels, 37
MHASignal::ringbuffer_t, 770	clear, 44
MHASignal::spectrum_t, 778	colored_intensity, 52
MHASignal::waveform_t, 790, 791	conjugate, 55
mha_signal.hh, 1005	copy_channel, 51
Vector and matrix processing toolbox, 45–	db2lin, 38
48	dbspl2pa, 39
value_type	dupvec, 41
mha_dblbuf_t, 412	dupvec_chk, 42
mha_fifo_t, 432	equal_dim, 42, 43
valuechanged	for_each, 38
MHAParser::base_t, 616	freq2bin, 40
variable, 4	integrate, 43
variable_t	lin2db, 38
MHAParser::variable_t, 676	max, 54
variables, 4	maxabs, 52, 53
acsave::acsave_t, 159	mha_real_t, 37
varlist	min, 54
ac2lsl::cfg_t, 127	operator*=, 49, 50
acmon::acmon_t, 151	operator^=, 51
acsave::acsave_t, 159	operator+=, 49, 50
acsave::cfg_t, 161	operator-=, 49
varlist_t	operator/=, 50
acsave::acsave_t, 158	pa22dbspl, 39
vars	pa2dbspl, 38
ac2lsl::ac2lsl_t, 125	rad2smp, 41
ac2osc t, 138	range, 37
acmon::acmon t, 151	rmslevel, 52, 53
analysispath_if_t, 212	sec2smp, 39
calibrator_t, 225	size, 43, 44
coherence::cohflt_if_t, 230	smp2rad, 40
MHAKernel::algo_comm_class_t, 581	smp2sec, 39
vars_t	std_vector_float, 48
coherence::vars_t, 234	std_vector_noat, 40
MHAOvIFilter::overlap_save_filterbank_	std_vector_vector_float, 48
t::vars_t, 606	sumsqr_channel, 54
vbark	sumsqr_frame, 55
MHAOvlFilter::barkscale, 96	timeshift, 45
10 1	

value, 45–48	mha_fifo_posix_threads_t, 429
vF	mha_fifo_thread_platform_t, 437
DynComp::gaintable_t, 295	wait_for_increase
vfloat_mon_t	mha_fifo_posix_threads_t, 429
MHAParser::vfloat_mon_t, 683	mha_fifo_thread_platform_t, 437
vfloat_t	Wakeup_Event
MHAParser::vfloat_t, 685	MHA_TCP::Wakeup_Event, 470
vfreq	wave
MHAOvlFilter::barkscale, 96	alsa_t, 204
vint_0123n1	wave2spec
transducers.cpp, 1051	MHASignal::fft_t, 748
vint_mon_t	plugindescription_t, 850
MHAParser::vint_mon_t, 687	wave2spec.cpp, 1051
vint_t	MHAPLUGIN_OVERLOAD_OUTDOM↔
MHAParser::vint_t, 689	AIN, 1051
νL	wave2spec_if_t, 924
DynComp::gaintable_t, 294	algo, 925
vmax	nfft, 925
gain::gain_if_t, 334	nwnd, 925
vmin	patchbay, 925
gain::gain_if_t, 334	prepare, 925
vstring_mon_t	process, 925
MHAParser::vstring_mon_t, 691	return_wave, 925
vstring_t	update, 925
MHAParser::vstring_t, 693	wave2spec_if_t, 925
vy	window_config, 925
MHATableLookup::linear_table_t, 803	wndow_comg, 323 wndpos, 925
	wave2spec_scale
W	MHASignal::fft_t, 749
MHA_TCP::OS_EVENT_TYPE, 456	wave2spec_t, 926
MHAFilter::adapt_filter_state_t, 491	~wave2spec_t, 927
W	calc_in, 928
ac2wave_t, 142	<del>-</del> :
doasym_classification, 273	calc_pre_wnd, 927
MHAOvlFilter::fftfb_t, 593	ft, 927
w_out	in_buf, 928
combc_t, 237	npad1, 927
WINAPI	npad2, 927 nwnd, 927
mha_plugin.hh, 991	•
wIRS_fft	nwndshift, 927
MHAFilter::fftfilter_t, 503	process, 927
wInput	spec_in, 928
MHAFilter::fftfilter_t, 503	wave2spec_t, 927
wInput_fft	window, 928
MHAFilter::fftfilter_t, 502	wave2wave
wOutput	plugindescription_t, 850
MHAFilter::fftfilter_t, 503	wave_fifo
wOutput_fft	analysepath_t, 210
MHAFilter::fftfilter_t, 503	wave_in
wait	MHAPlugin_Split::domain_handler_t, 716
MHA_TCP::Event_Watcher, 455	wave_in1
wait_for_decrease	overlapadd::overlapadd_t, 837

wave_out	white
MHAPlugin_Split::domain_handler_t, 716	speechnoise_t, 900
MHAPlugin_Split::split_t, 726	wideband_inhib_vars_t
wave_out1	dc::wideband_inhib_vars_t, 254
overlapadd::overlapadd_t, 838	win f0
wave_reader	timoSmooth, 922
addsndfile, 74	winF0
waveform_proxy_t	timo_params, 915
addsndfile::waveform proxy t, 180	timoConfig, 917
waveform t	winF0 AC
MHA_AC::waveform_t, 405	timo_AC, 913
MHAMultiSrc::waveform_t, 587	window
MHASignal::waveform_t, 789	MHAFilter::smoothspec_t, 544
wavrec.cpp, 1051	overlapadd::overlapadd_if_t, 836
DEBUG, 1052	wave2spec_t, 928
wavrec_t, 928	window_config
fifolen, 930	spec2wave if t, 896
minwrite, 930	wave2spec_if_t, 925
patchbay, 930	wave2spec_n_t, 525 window t
prefix, 930	MHAParser::window t, 695
prepare, 929	windowselector.cpp, 1052
process, 929	windowselector.h, 1052
record, 930	windowselector_t, 932
release, 929	~windowselector_t, 933
start_new_session, 929	get_window_data, 933
use_date, 930	insert_items, 933
wavrec_t, 929	invalidate_window_data, 934
wavvec_t, 929 wavwriter_t, 930	patchbay, 934
~wavwriter t, 931	update_parser, 934
act_, 931	update_parser, 934 updated, 934
cf_, 931	userwnd, 934
close_session, 931	windowselector_t, 933
data, 931	wnd, 934
fifo, 931	wnd, 934 wndexp, 934
minw_, 931	wndtype, 934
process, 931	whatype, 934 wnd
sf, 931	addsndfile::level_adapt_t, 176
•	fader_wave::level_adapt_t, 315
wavwriter_t, 931 write_thread, 931	windowselector t, 934
writethread, 931 writethread, 931	wnd_bartlett
white in eau, 951 wb_inhib_cfg_t	MHAParser::window_t, 695
	wnd blackman
dc::wb_inhib_cfg_t, 253 wbinhib	<del>_</del>
	MHAParser::window_t, 695
dc::dc_if_t, 246	wnd_funs
weights	mha_windowparser.cpp, 1010
dc::wb_inhib_cfg_t, 253	wnd_hamming
dc::wideband_inhib_vars_t, 254	MHAParser::window_t, 695
delaysum::delaysum_if_t, 268	wnd_hann
delaysum::delaysum_t, 270	MHAParser::window_t, 695
what	wnd_rect
MHA_Error, 424	MHAParser::window_t, 695

wnd_user	mhasndfile.h, 1037
MHAParser::window_t, 695	writeaccess
wndexp	MHAParser::base_t, 616
overlapadd::overlapadd_if_t, 836	writer_started
windowselector_t, 934	mha_drifter_fifo_t, 421
wndlen	writer_xruns_in_succession
doasvm_feature_extraction_config, 278	mha_drifter_fifo_t, 422
MHAParser::mhaconfig_mon_t, 656	writer_xruns_since_start
mhaconfig_t, 481	mha_drifter_fifo_t, 422
testplugin::config_parser_t, 908	writer_xruns_total
wndpos	mha_drifter_fifo_t, 422
overlapadd::overlapadd_if_t, 836	writethread
wave2spec_if_t, 925	wavwriter_t, 931
wndtype	Writing openMHA Plugins. A step-by-step tu-
windowselector_t, 934	torial, 10
worker_thread_priority	MHAParaar:::window t 606
MHAPlugin_Split::split_t, 725	MHAParser::window_t, 696
worker_thread_scheduler	wtype_t MHAParser::window_t, 695
MHAPlugin_Split::split_t, 725	WITAT arserwindow_t, 093
wout	Χ
matrixmixer::cfg_t, 388	MHA_TCP::OS_EVENT_TYPE, 456
route::process_t, 872	MHAFilter::adapt_filter_state_t, 491
wout_ac	X
route::process_t, 872	doasvm_classification, 273
write	xfun
alsa_base_t, 199	MHATableLookup::xy_table_t, 808
alsa_t, 204	xi_est
MHA_TCP::Connection, 452	timoConfig, 918
MHAFilter::blockprocessing_polyphase _resampling_t, 494	xi_est_AC
MHAFilter::polyphase_resampling_t, 538	timo_AC, 913
MHAJack::port_t, 576	xi_min
MHASignal::matrix_t, 764	timoConfig, 917
MHASignal::ringbuffer_t, 771	xi_min_db
MHASignal::uint_vector_t, 786	timo_params, 915
mha_drifter_fifo_t, 419	timoSmooth, 921
mha_fifo_lw_t, 426	xi_ml
mha_fifo_t, 432	timoConfig, 918 xi ml AC
write_buf	timo AC, 913
overlapadd::overlapadd_t, 838	xi_opt_db
spec2wave_t, 898	timo_params, 915
write_event	timoSmooth, 922
MHA_TCP::Connection, 453	xiOpt
write_float	noisePowProposedScale::noisePow↔
mha_parser.cpp, 985	Proposed, 833
write_ptr	timoConfig, 918
mha_fifo_t, 434	xiOptDb
write_thread	noisePowProposedScale::interface_t, 831
wavwriter_t, 931	xmax
write_wave	MHATableLookup::linear_table_t, 803
mhasndfile.cpp, 1036	xmin

```
MHATableLookup::linear_table_t, 803
Xs
    MHAFilter::fftfilterbank_t, 506
XW
    MHAFilter::fftfilterbank_t, 506
xy_table_t
    MHATableLookup::xy_table_t, 806
xyfun
    MHATableLookup::xy_table_t, 808
У
    doasym_classification, 273
y0
    dc_simple::dc_t::line_t, 260
y_previous
    rt_nlms_t, 875
YPrew
    prediction_error_config, 867
yfun
    MHATableLookup::xy_table_t, 808
Yn
    MHAFilter::complex_bandpass_t, 498
    MHAFilter::iir_ord1_real_t, 521
Ys
    MHAFilter::fftfilterbank_t, 507
yw
    MHAFilter::fftfilterbank_t, 506
yw_temp
    MHAFilter::fftfilterbank t, 507
zeros
    ac2wave_if_t, 141
zerowindow
    overlapadd::overlapadd_if_t, 836
```