# The Open Master Hearing Aid (openMHA)

4.6.4

## Plugin Developers' Manual



© 2005-2018 by HörTech gGmbH, Marie-Curie-Str. 2, D-26129 Oldenburg, Germany

#### LICENSE AGREEMENT

This file is part of the HörTech Open Master Hearing Aid (openMHA) Copyright © 2005 2006 2007 2008 2009 2010 2012 2013 2014 2015 2016 HörTech gGmbH. Copyright © 2017 2018 HörTech gGmbH.

openMHA is free software: you can redistribute it and/or modify it under the terms of the GNU Affero General Public License as published by the Free Software Foundation, version 3 of the License.

openMHA is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Affero General Public License, version 3 for more details.

You should have received a copy of the GNU Affero General Public License, version 3 along with openMHA. If not, see <a href="http://www.gnu.org/licenses/">http://www.gnu.org/licenses/</a>>.

### **Contents**

1	Over	view	1
	1.1		1
	1.2	Platform Services and Conventions	2
2	Todo	List	4
3	Modu	ule Documentation	4
	3.1	Concept of Variables and Data Exchange in the openMHA	4
	3.2	The openMHA Plugins (programming interface)	6
	3.3	Writing openMHA Plugins. A step-by-step tutorial	10
	3.4	The MHA Framework interface	26
	3.5	Communication between algorithms	27
	3.6	Error handling in the openMHA	31
	3.7	The openMHA configuration language	33
	3.8	The openMHA Toolbox library	34
	3.9		36
	3.10		60
	3.11	Fast Fourier Transform functions	70
4	Name	espace Documentation	77
	4.1	ac2lsl Namespace Reference	77
	4.2	and the state of t	77
	4.3	· · · · · · · · · · · · · · · · · · ·	78
	4.4	·	78
	4.5		79
	4.6		80
	4.7	· · · · · · · · · · · · · · · · · · ·	80
	4.8	· · · · · · · · · · · · · · · · · · ·	81
	4.9	_ '	81
	4.10		82
	4.11	· · · · · · · · · · · · · · · · · · ·	82
	4.12		83
		<del>_</del>	84
	4.14		85
	4.15 4.16	·	85 85
	4.17		ອວ 85
	4.17		86
	4.19	<del>-</del> '	30 87
	4.20	'	37 87
	4.21	<del>-</del>	90
	4.22		90
	4.23	· · · · · · · · · · · · · · · · · · ·	90
	4.24	•	95
	4.25		95
	4.26		95
	4.27	·	95
	4.28	•	97
	4.29	·	98
		•	98

	4.31	MHAOvlFilter::barkscale Namespace Reference
	4.32	MHAOvlFilter::FreqScaleFun Namespace Reference
	4.33	MHAOvlFilter::ShapeFun Namespace Reference
	4.34	MHAParser Namespace Reference
	4.35	MHAParser::StrCnv Namespace Reference
	4.36	MHAPlugin Namespace Reference
	4.37	MHAPlugin_Resampling Namespace Reference
	4.38	MHAPlugin_Split Namespace Reference
	4.39	MHASignal Namespace Reference
	4.40	MHASndFile Namespace Reference
	4.41	MHATableLookup Namespace Reference
	4.42	MHAWindow Namespace Reference
	4.43	multibandcompressor Namespace Reference
	4.44	noisePowProposedScale Namespace Reference
	4.45	overlapadd Namespace Reference
	4.46	plingploing Namespace Reference
	4.47	PluginLoader Namespace Reference
	4.48	route Namespace Reference
	4.49	shadowfilter_begin Namespace Reference
	4.50	shadowfilter_end Namespace Reference
	4.51	smoothgains bridge Namespace Reference
	4.51	Smootingains_bridge Namespace reference
5	Class	Documentation 125
	5.1	ac2lsl::ac2lsl t Class Reference
	5.2	ac2lsl::cfg_t Class Reference
	5.3	ac2lsl::save_var_base_t Class Reference
	5.4	ac2lsl::save_var_t< T > Class Template Reference
	5.5	ac2lsl::save_var_t< mha_complex_t > Class Template Reference
	5.6	ac2osc t Class Reference
	5.7	ac2wave_if_t Class Reference
	5.8	ac2wave t Class Reference
	5.9	acConcat_wave Class Reference
	5.10	acConcat wave config Class Reference
	5.11	acmon::ac_monitor_t Class Reference
	5.12	acmon::acmon t Class Reference
	5.13	acPooling wave Class Reference
	5.14	acPooling_wave_config_Class_Reference
	5.15	acsave::acsave_t Class Reference
	5.16	acsave::cfg_t Class Reference
	5.17	acsave::mat4head t Struct Reference
	5.18	acsave::save_var_t Class Reference
	5.19	acSteer Class Reference
	5.20	acSteer config Class Reference
	5.21	acTransform wave Class Reference
	5.22	acTransform_wave_config Class Reference
	5.23	addsndfile::addsndfile_if_t Class Reference
	5.24	addsndfile::level_adapt_t Class Reference
	5.25	addsndfile::resampled_soundfile_t Class Reference
	5.26	addsndfile::sndfile_t Class Reference
	5.27	addsndfile::waveform_proxy_t Class Reference
	5.28	ADM::ADM< F > Class Template Reference
		ADM::Delay< F > Class Template Reference
	5 20	$\Delta \Gamma IM \cap D I IM = \Gamma \Gamma I I I I I I I I I I I I I I I I I$

vi CONTENTS

5.30	ADM::Linearphase_FIR< F > Class Template Reference	186
5.31	adm_if_t Class Reference	
5.32	adm_rtconfig_t Class Reference	190
5.33	algo_comm_t Struct Reference	194
5.34	altplugs_t Class Reference	199
5.35	analysepath_t Class Reference	203
5.36	analysispath_if_t Class Reference	
5.37	AuditoryProfile::fmap t Class Reference	
5.38	AuditoryProfile::parser_t Class Reference	
5.39	AuditoryProfile::parser_t::ear_t Class Reference	
5.40	AuditoryProfile::parser t::fmap t Class Reference	
5.41	AuditoryProfile::profile_t Class Reference	
5.42	AuditoryProfile::profile_t::ear_t Class Reference	
5.43	bbcalib_interface_t Class Reference	
5.44	calibrator_runtime_layer_t Class Reference	
5.45	calibrator_t Class Reference	
5.46	calibrator_variables_t Class Reference	
5.47	cfg_t Class Reference	
5.48	coherence::cohflt if t Class Reference	
5.49	coherence::cohflt_t Class Reference	
5.50	coherence::vars_t Class Reference	
5.51	combc if t Class Reference	
5.52	combc t Class Reference	
5.53	_	
	comm_var_t Struct Reference	
5.54	cpuload_t Class Reference	
5.55	db_if_t Class Reference	
5.56	db_t Class Reference	
5.57	dc::dc_if_t Class Reference	
5.58	dc::dc_t Class Reference	
5.59	dc::dc_vars_t Class Reference	
5.60	dc::dc_vars_validator_t Class Reference	
5.61	dc::wb_inhib_cfg_t Class Reference	
	dc::wideband_inhib_vars_t Class Reference	
5.63	dc_simple::dc_if_t Class Reference	
5.64	dc_simple::dc_t Class Reference	
5.65	dc_simple::dc_t::line_t Class Reference	
5.66	dc_simple::dc_vars_t Class Reference	
5.67	dc_simple::dc_vars_validator_t Class Reference	
5.68	dc_simple::level_smoother_t Class Reference	
5.69	delay::interface_t Class Reference	
5.70	delaysum::delaysum_if_t Class Reference	
5.71	delaysum::delaysum_t Class Reference	
5.72	doasvm_classification Class Reference	265
5.73	doasvm_classification_config Class Reference	
5.74	doasvm_feature_extraction Class Reference	269
5.75	doasvm_feature_extraction_config Class Reference	
5.76	droptect_t Class Reference	273
5.77	ds_t Class Reference	
5.78	dynamiclib_t Class Reference	277
5.79	DynComp::dc_afterburn_rt_t Class Reference	278
5.80	DynComp::dc_afterburn_t Class Reference	280

CONTENTS vii

5.81 DynComp::dc_afterburn_vars_t Class Reference	
5.82 DynComp::gaintable_t Class Reference	
5.83 example1_t Class Reference	289
5.84 example2_t Class Reference	291
5.85 example3_t Class Reference	294
5.86 example4_t Class Reference	298
5.87 example5_t Class Reference	301
5.88 example6_t Class Reference	302
5.89 expression_t Class Reference	304
5.90 fader_if_t Class Reference	304
5.91 fader_wave::fader_wave_if_t Class Reference	306
5.92 fader_wave::level_adapt_t Class Reference	
5.93 fftfbpow::fftfbpow_interface_t Class Reference	309
5.94 fftfbpow::fftfbpow_t Class Reference	312
5.95 fftfilterbank::fftfb_interface_t Class Reference	314
5.96 fftfilterbank::fftfb_plug_t Class Reference	
5.97 frequency_translator_t Class Reference	
5.98 fw_t Class Reference	
5.99 fw_vars_t Class Reference	
5.100 gain::gain if t Class Reference	
5.101 gain::scaler t Class Reference	
5.102 hanning_ramps_t Class Reference	
5.103 hilbert_shifter_t Class Reference	
5.104 identity_t Class Reference	
5.105 iirfilter_t Class Reference	
5.106 io_file_t Class Reference	
5.107 io lib t Class Reference	
5.108 io_parser_t Class Reference	
5.109 io tcp_fwcb_t Class Reference	
5.110 io_tcp_parser_t Class Reference	
5.111 io_tcp_sound_t Class Reference	
5.112 io tcp sound t::float union Union Reference	
5.113 io_tcp_t Class Reference	
5.114 latex_doc_t Class Reference	
5.115 lpc Class Reference	
5.116 lpc_bl_predictor Class Reference	
5.117 lpc_bl_predictor_config Class Reference	
5.118 lpc_burglattice Class Reference	
5.119 lpc_burglattice_config Class Reference	
5.120 lpc_config Class Reference	
5.121 matrixmixer::cfg_t Class Reference	
5.122 matrixmixer::matmix t Class Reference	
5.123 MHA_AC::ac2matrix_helper_t Class Reference	
5.124 MHA_AC::ac2matrix_t Class Reference	
5.125 MHA_AC::acspace2matrix_t Class Reference	
5.126 MHA_AC::double_t Class Reference	
5.127 MHA AC::float t Class Reference	
5.128 MHA AC::int t Class Reference	
5.129 MHA_AC::spectrum_t Class Reference	
5.130 MHA_AC::stat_t Class Reference	
5.131 MHA_AC::waveform_t Class Reference	394

viii CONTENTS

5.132 mha_audio_descriptor_t Struct Reference	. 396
5.133 mha_audio_t Struct Reference	. 397
5.134 mha_channel_info_t Struct Reference	. 398
5.135 mha_complex_t Struct Reference	. 400
5.136 mha_dblbuf_t< FIFO > Class Template Reference	. 400
5.137 mha_direction_t Struct Reference	. 406
5.138 mha_drifter_fifo_t< T > Class Template Reference	. 407
5.139 MHA_Error Class Reference	
5.140 mha_fifo_lw_t< T > Class Template Reference	
5.141 mha_fifo_posix_threads_t Class Reference	
5.142 mha_fifo_t< T > Class Template Reference	
5.143 mha_fifo_thread_guard_t Class Reference	
5.144 mha_fifo_thread_platform_t Class Reference	
5.145 mha_rt_fifo_element_t< T > Class Template Reference	
5.146 mha_rt_fifo_t< T > Class Template Reference	
5.147 mha spec t Struct Reference	
5.148 MHA_TCP::Async_Notify Class Reference	
5.149 MHA_TCP::Client Class Reference	
5.150 MHA_TCP::Connection Class Reference	
5.151 MHA_TCP::Event_Watcher Class Reference	
5.152 MHA_TCP::OS_EVENT_TYPE Struct Reference	
5.153 MHA_TCP::Server Class Reference	
5.154 MHA_TCP::sock_init_t Class Reference	
5.155 MHA_TCP::Sockaccept_Event Class Reference	
5.156 MHA_TCP::Sockread_Event Class Reference	
5.157 MHA_TCP::Sockwrite_Event Class Reference	
5.158 MHA_TCP::Thread Class Reference	
5.159 MHA_TCP::Timeout_Event Class Reference	
5.160 MHA_TCP::Timeout_Watcher Class Reference	
5.161 MHA_TCP::Wakeup_Event Class Reference	
5.162 mha_tictoc_t Struct Reference	
5.163 mha_wave_t Struct Reference	. 462
5.164 mhachain::chain_base_t Class Reference	. 463
5.165 mhachain::mhachain_t Class Reference	. 466
5.166 mhachain::plugs_t Class Reference	. 467
5.167 mhaconfig_t Struct Reference	. 470
5.168 MHAEvents::connector_base_t Class Reference	. 472
5.169 MHAEvents::connector_t < receiver_t > Class Template Reference	. 474
5.170 MHAEvents::emitter_t Class Reference	
5.171 MHAEvents::patchbay_t< receiver_t > Class Template Reference	. 478
5.172 MHAFilter::adapt_filter_param_t Class Reference	
5.173 MHAFilter::adapt filter state t Class Reference	
5.174 MHAFilter::adapt_filter_t Class Reference	
5.175 MHAFilter::blockprocessing_polyphase_resampling_t Class Reference	
5.176 MHAFilter::complex_bandpass_t Class Reference	
5.177 MHAFilter::diff_t Class Reference	
5.178 MHAFilter::fftfilter_t Class Reference	
5.179 MHAFilter::fftfilterbank_t Class Reference	
5.180 MHAFilter::filter_t Class Reference	
5.181 MHAFilter::gamma_flt_t Class Reference	
5.182 MHAFilter::iir_filter_state_t Class Reference	
3. 102 WILLAL III. III. III. III. III. III. SIAIE L. CHASS MEIELEINE	. 504

CONTENTS ix

5.183 MHAFilter::iir_filter_t Class Reference	505
5.184 MHAFilter::iir_ord1_real_t Class Reference	508
5.185 MHAFilter::o1_ar_filter_t Class Reference	. 511
5.186 MHAFilter::o1flt_lowpass_t Class Reference	514
5.187 MHAFilter::o1flt_maxtrack_t Class Reference	
5.188 MHAFilter::o1flt_mintrack_t Class Reference	518
5.189 MHAFilter::partitioned_convolution_t Class Reference	520
5.190 MHAFilter::partitioned_convolution_t::index_t Struct Reference	
5.191 MHAFilter::polyphase_resampling_t Class Reference	
5.192 MHAFilter::resampling_filter_t Class Reference	
5.193 MHAFilter::smoothspec_t Class Reference	
5.194 MHAFilter::thirdoctave_analyzer_t Class Reference	
5.195 MHAFilter::transfer_function_t Struct Reference	
5.196 MHAFilter::transfer_matrix_t Struct Reference	
5.197 MHAIOJack::io_jack_t Class Reference	
5.198 MHAIOJackdb::io_jack_t Class Reference	
5.199 MHAIOPortAudio::device_info_t Class Reference	
5.200 MHAIOPortAudio::io_portaudio_t Class Reference	
5.201 MHAJack::client_avg_t Class Reference	
5.202 MHAJack::client_noncont_t Class Reference	
5.203 MHAJack::client_t Class Reference	
5.204 MHAJack::port_t Class Reference	
5.205 MHAKernel::algo_comm_class_t Class Reference	
5.206 MHAKernel::comm_var_map_t Class Reference	
5.207 MHAMultiSrc::base_t Class Reference	
5.208 MHAMultiSrc::channel_t Class Reference	
5.209 MHAMultiSrc::channels_t Class Reference	
5.210 MHAMultiSrc::spectrum_t Class Reference	
5.211 MHAMultiSrc::waveform_t Class Reference	
5.212 MHAOvlFilter::band_descriptor_t Class Reference	
5.213 MHAOvlFilter::barkscale::bark2hz_t Class Reference	
5.214 MHAOvlFilter::barkscale::hz2bark_t Class Reference	579
5.215 MHAOvlFilter::fftfb_ac_info_t Class Reference	. 580
5.216 MHAOvlFilter::fftfb_t Class Reference	. 581
5.217 MHAOvlFilter::fftfb_vars_t Class Reference	584
5.218 MHAOvlFilter::fscale_bw_t Class Reference	. 587
5.219 MHAOvlFilter::fscale_t Class Reference	588
5.220 MHAOvlFilter::fspacing_t Class Reference	590
5.221 MHAOvlFilter::overlap_save_filterbank_analytic_t Class Reference	592
5.222 MHAOvlFilter::overlap_save_filterbank_t Class Reference	
5.223 MHAOvlFilter::overlap_save_filterbank_t::vars_t Class Reference	
5.224 MHAOvlFilter::scale var t Class Reference	
5.225 MHAParser::base t Class Reference	
5.226 MHAParser::base_t::replace_t Class Reference	
5.227 MHAParser::bool_mon_t Class Reference	
5.228 MHAParser::bool_t Class Reference	
5.229 MHAParser::c_ifc_parser_t Class Reference	
5.230 MHAParser::commit_t< receiver_t > Class Template Reference	
5.231 MHAParser::complex_mon_t Class Reference	
5.232 MHAParser::complex_t Class Reference	
·	
5.233 MHAParser::entry_t Class Reference	021

X CONTENTS

5.234 MHAParser::expression_t Class Reference	622
5.235 MHAParser::float_mon_t Class Reference	623
5.236 MHAParser::float_t Class Reference	624
5.237 MHAParser::int_mon_t Class Reference	627
5.238 MHAParser::int_t Class Reference	
5.239 MHAParser::keyword_list_t Class Reference	631
5.240 MHAParser::kw_t Class Reference	
5.241 MHAParser::mcomplex_mon_t Class Reference	
5.242 MHAParser::mcomplex_t Class Reference	
5.243 MHAParser::mfloat_mon_t Class Reference	
5.244 MHAParser::mfloat_t Class Reference	
5.245 MHAParser::mhaconfig_mon_t Class Reference	
5.246 MHAParser::mhapluginloader_t Class Reference	
5.247 MHAParser::monitor_t Class Reference	
5.248 MHAParser::parser_t Class Reference	
5.249 MHAParser::range_var_t Class Reference	
5.250 MHAParser::string_mon_t Class Reference	
5.251 MHAParser::string_t Class Reference	
5.252 MHAParser::variable_t Class Reference	
5.253 MHAParser::vcomplex_mon_t Class Reference	
5.254 MHAParser::vcomplex_t Class Reference	
5.255 MHAParser::vfloat_mon_t Class Reference	
5.256 MHAParser::vfloat_t Class Reference	
5.257 MHAParser::vint_mon_t Class Reference	
5.258 MHAParser::vint_t Class Reference	
5.259 MHAParser::vstring_mon_t Class Reference	
5.260 MHAParser::vstring_t Class Reference	
5.261 MHAParser::window_t Class Reference	
5.262 mhaplug_cfg_t Class Reference	
5.263 MHAPlugin::cfg_chain_t< runtime_cfg_t > Class Template Reference	684
$5.264\ MHAP lugin:: config\_t < runtime\_cfg\_t > Class\ Template\ Reference \dots \dots \dots$	685
$5.265MHAP lugin::plugin\_t < runtime\_cfg\_t > ClassTemplateReference \dots \dots \dots$	690
5.266 MHAPlugin_Resampling::resampling_if_t Class Reference	695
5.267 MHAPlugin_Resampling::resampling_t Class Reference	697
5.268 MHAPlugin_Split::domain_handler_t Class Reference	698
5.269 MHAPlugin_Split::dummy_threads_t Class Reference	703
5.270 MHAPlugin_Split::posix_threads_t Class Reference	705
5.271 MHAPlugin_Split::split_t Class Reference	
5.272 MHAPlugin_Split::splitted_part_t Class Reference	
5.273 MHAPlugin_Split::thread_platform_t Class Reference	
5.274 MHAPlugin_Split::uni_processor_t Class Reference	
5.275 mhaserver t Class Reference	
5.276 MHASignal::async_rmslevel_t Class Reference	
5.277 MHASignal::delay_spec_t Class Reference	
5.278 MHASignal::delay_t Class Reference	
5.279 MHASignal::delay_wave_t Class Reference	
5.280 MHASignal::doublebuffer_t Class Reference	
5.281 MHASignal::fft_t Class Reference	
5.282 MHASignal::hilbert_fftw_t Class Reference	
<del>-</del> _	
5.283 MHASignal::hilbert_t Class Reference	
5.284 MHASignal::loop_wavefragment_t Class Reference	740

CONTENTS xi

5.285 MHASignal::matrix_t Class Reference	
5.286 MHASignal::minphase_t Class Reference	. 752
5.287 MHASignal::quantizer_t Class Reference	. 754
5.288 MHASignal::ringbuffer_t Class Reference	. 755
5.289 MHASignal::schroeder_t Class Reference	
5.290 MHASignal::spectrum_t Class Reference	
5.291 MHASignal::stat_t Class Reference	
5.292 MHASignal::subsample_delay_t Class Reference	
5.293 MHASignal::uint_vector_t Class Reference	
5.294 MHASignal::waveform_t Class Reference	
5.295 MHASndFile::sf_t Class Reference	
5.296 MHASndFile::sf_wave_t Class Reference	
5.297 MHATableLookup::linear_table_t Class Reference	
5.298 MHATableLookup::table_t Class Reference	
•	
5.299 MHATableLookup::xy_table_t Class Reference	
5.300 MHAWindow::bartlett_t Class Reference	
5.301 MHAWindow::base_t Class Reference	
5.302 MHAWindow::blackman_t Class Reference	
5.303 MHAWindow::fun_t Class Reference	
5.304 MHAWindow::hamming_t Class Reference	
5.305 MHAWindow::hanning_t Class Reference	
5.306 MHAWindow::rect_t Class Reference	803
5.307 MHAWindow::user_t Class Reference	804
5.308 mon_t Class Reference	. 806
5.309 multibandcompressor::fftfb_plug_t Class Reference	. 807
5.310 multibandcompressor::interface_t Class Reference	. 809
5.311 multibandcompressor::plugin_signals_t Class Reference	. 811
5.312 nlms_t Class Reference	
5.313 noise_t Class Reference	
5.314 noisePowProposedScale::interface_t Class Reference	
5.315 noisePowProposedScale::noisePowProposed Class Reference	
5.316 overlapadd::overlapadd_if_t Class Reference	
5.317 overlapadd::overlapadd_t Class Reference	
5.318 parser_int_dyn Class Reference	
5.319 plingploing::if_t Class Reference	
5.320 plingploing::plingploing_t Class Reference	
5.321 plug t Class Reference	
1 0_	
5.322 plugin_interface_t Class Reference	
5.323 pluginbrowser_t Class Reference	
5.324 plugindescription_t Class Reference	
5.325 PluginLoader::config_file_splitter_t Class Reference	
5.326 PluginLoader::fourway_processor_t Class Reference	
5.327 PluginLoader::mhapluginloader_t Class Reference	
5.328 pluginloader_t Class Reference	
5.329 prediction_error Class Reference	
5.330 prediction_error_config Class Reference	
5.331 rmslevel_if_t Class Reference	. 854
5.332 rmslevel_t Class Reference	
5.333 route::interface_t Class Reference	. 857
5.334 route::process_t Class Reference	
5.335 rt_nlms_t Class Reference	

xii CONTENTS

5.336 RunOnce Struct Reference	862
5.337 save_spec_t Class Reference	
5.338 save_wave_t Class Reference	
5.339 shadowfilter_begin::cfg_t Class Reference	
5.340 shadowfilter_begin::shadowfilter_begin_t Class Reference	
5.341 shadowfilter_end::cfg_t Class Reference	
5.342 shadowfilter_end::shadowfilter_end_t Class Reference	
5.343 sine_cfg_t Struct Reference	
5.344 sine_t Class Reference	
5.345 smoothgains_bridge::overlapadd_if_t Class Reference	
5.346 smoothgains_bridge::smoothspec_wrap_t Class Reference	
5.347 softclip_t Class Reference	
5.348 softclipper_t Class Reference	880
5.349 softclipper_variables_t Class Reference	882
5.350 spec2wave_if_t Class Reference	883
5.351 spec2wave_t Class Reference	
5.352 spec_fader_t Class Reference	
5.353 speechnoise_t Class Reference	
5.354 steerbf Class Reference	
5.355 steerbf_config Class Reference	
5.356 timo AC Class Reference	
5.357 timo_params Class Reference	
5.358 timoConfig Class Reference	
5.359 timoSmooth Class Reference	
5.360 us_t Class Reference	
5.361 wave2spec_if_t Class Reference	
5.362 wave2spec_t Class Reference	
5.363 wavrec_t Class Reference	909
5.364 wavwriter_t Class Reference	911
5.365 windowselector t Class Reference	913
File Documentation	916
6.1 ac2lsl.cpp File Reference	916
6.2 ac2osc.cpp File Reference	916
6.3 ac2wave.cpp File Reference	
6.4 ac_monitor_type.cpp File Reference	
6.5 ac_monitor_type.hh File Reference	
6.6 acConcat_wave.cpp File Reference	
6.7 acConcat_wave.h File Reference	
6.8 acmon.cpp File Reference	
·	
<del>0_</del> 11	
6.10 acPooling_wave.h File Reference	
6.11 acsave.cpp File Reference	
6.12 acSteer.cpp File Reference	
6.13 acSteer.h File Reference	
6.14 acTransform_wave.cpp File Reference	
6.15 acTransform_wave.h File Reference	
6.16 addsndfile.cpp File Reference	920
6.17 adm.cpp File Reference	921
6.18 adm.hh File Reference	922
6.19 altplugs.cpp File Reference	923
6.20 analysemhaplugin.cpp File Reference	
was a company of the contraction	

6

CONTENTS xiii

6.21	analysispath.cpp File Reference	
6.22	auditory_profile.cpp File Reference	924
6.23	auditory_profile.h File Reference	924
6.24	browsemhaplugins.cpp File Reference	924
6.25	coherence.cpp File Reference	925
6.26	combinechannels.cpp File Reference	925
6.27	complex_filter.cpp File Reference	925
6.28	complex_filter.h File Reference	925
6.29	cpuload.cpp File Reference	
6.30	db.cpp File Reference	
6.31	dc.cpp File Reference	
6.32	dc_afterburn.cpp File Reference	
6.33	dc afterburn.h File Reference	
6.34	dc_simple.cpp File Reference	
6.35	delay.cpp File Reference	
6.36	delaysum.cpp File Reference	
6.37	doasym_classification.cpp File Reference	
6.38	doasym classification.h File Reference	
6.39	doasym_feature_extraction.cpp File Reference	
6.40	doasym feature extraction.h File Reference	
6.41	doc_appendix.h File Reference	
6.42	doc_examples.h File Reference	
6.43	doc_frameworks.h File Reference	
6.44	doc_general.h File Reference	
6.45	<del></del>	
6.46	doc_kernel.h File Reference	
6.47	doc_matlab.h File Reference	
	doc_mhamain.h File Reference	
6.48	doc_parser.h File Reference	
6.49	doc_plugif.cpp File Reference	
6.50	doc_plugins.h File Reference	
6.51	doc_system.h File Reference	
6.52	doc_toolbox.h File Reference	
6.53	downsample.cpp File Reference	930
6.54		
6.55	example1.cpp File Reference	
6.56	example2.cpp File Reference	
6.57	example3.cpp File Reference	
6.58	example4.cpp File Reference	
6.59	example5.cpp File Reference	
6.60	example6.cpp File Reference	
6.61	fader_spec.cpp File Reference	
6.62	fader_wave.cpp File Reference	
6.63	fftfbpow.cpp File Reference	
6.64	fftfilterbank.cpp File Reference	
6.65	fshift_hilbert.cpp File Reference	
6.66	gain.cpp File Reference	934
6.67	gaintable.cpp File Reference	934
6.68	gaintable.h File Reference	934
6.69	generatemhaplugindoc.cpp File Reference	935
6.70	hann.cpp File Reference	935
6.71	hann.h File Reference	936

xiv CONTENTS

6.72	identity.cpp File Reference	936
6.73	ifftshift.cpp File Reference	
6.74	ifftshift.h File Reference	937
6.75	iirfilter.cpp File Reference	937
6.76	Ipc.cpp File Reference	937
6.77	lpc.h File Reference	938
6.78	lpc_bl_predictor.cpp File Reference	938
6.79	lpc_bl_predictor.h File Reference	
6.80	lpc_burg-lattice.cpp File Reference	939
6.81	lpc_burg-lattice.h File Reference	
6.82	matrixmixer.cpp File Reference	
6.83	mha.cpp File Reference	
6.84	mha.h File Reference	
6.85	mha_algo_comm.cpp File Reference	
6.86	mha_algo_comm.h File Reference	
6.87	mha_algo_comm.hh File Reference	
6.88	mha defs.h File Reference	
6.89	mha_errno.c File Reference	
6.90	mha_errno.h File Reference	
6.91	mha_error.cpp File Reference	
6.92	mha error.hh File Reference	
6.93	mha_event_emitter.h File Reference	
6.94	mha_events.cpp File Reference	
6.95	mha_events.h File Reference	
6.96	mha_fftfb.cpp File Reference	
6.97	mha_fftfb.hh File Reference	
6.98	mha_fifo.cpp File Reference	
6.99	mha_fifo.h File Reference	
	mha_filter.cpp File Reference	
	mha filter.hh File Reference	
	mha_generic_chain.cpp File Reference	
	mha generic chain.h File Reference	
	mha_io_ifc.h File Reference	
	mha_multisrc.cpp File Reference	
	mha multisrc.h File Reference	
	mha_os.cpp File Reference	
	mha_os.h File Reference	
	mha_parser.cpp File Reference	
	mha_parser.hh File Reference	
	<del>-</del>	
	mha_plugin.hh File Reference	
	mha_profiling.c File Reference	
	mha_profiling.h File Reference	
	mha_ruby.cpp File Reference	
	mha_signal.cpp File Reference	
	mha_signal.hh File Reference	
	mha_signal_fft.h File Reference	
	mha_tablelookup.cpp File Reference	
	mha_tablelookup.hh File Reference	
	mha_tcp.cpp File Reference	
	mha_tcp.hh File Reference	
6.122	mha_toolbox.h File Reference	990

CONTENTS xv

6.123 mha_windowparser.cpp File Reference	
6.124 mha_windowparser.h File Reference	. 990
6.125 mhachain.cpp File Reference	. 991
6.126 mhafw_lib.cpp File Reference	. 991
6.127 mhafw_lib.h File Reference	
6.128 MHAIOFile.cpp File Reference	. 992
6.129 MHAIOJack.cpp File Reference	
6.130 MHAIOJackdb.cpp File Reference	
6.131 MHAIOParser.cpp File Reference	
6.132 MHAIOPortAudio.cpp File Reference	
6.133 MHAIOTCP.cpp File Reference	
6.134 mhajack.cpp File Reference	
6.135 mhajack.h File Reference	
6.136 mhamain.cpp File Reference	
6.137 mhapluginloader.cpp File Reference	
6.138 mhapluginloader.h File Reference	
6.139 mhasndfile.cpp File Reference	
6.140 mhasndfile.h File Reference	
6.141 multibandcompressor.cpp File Reference	
6.142 nlms_wave.cpp File Reference	
6.143 noise.cpp File Reference	
6.144 noisePowProposedScale.cpp File Reference	
6.145 overlapadd.cpp File Reference	
6.146 plingploing.cpp File Reference	
6.147 pluginbrowser.cpp File Reference	
6.148 pluginbrowser.h File Reference	
6.149 prediction_error.cpp File Reference	
6.150 prediction_error.h File Reference	
6.151 resampling.cpp File Reference	
6.152 rmslevel.cpp File Reference	
6.153 route.cpp File Reference	
6.154 save_spec.cpp File Reference	
6.155 save_wave.cpp File Reference	
6.156 shadowfilter_begin.cpp File Reference	
6.157 shadowfilter_end.cpp File Reference	
6.158 sine.cpp File Reference	
6.159 smoothgains_bridge.cpp File Reference	
6.160 softclip.cpp File Reference	.1020
6.161 spec2wave.cpp File Reference	.1020
6.162 speechnoise.cpp File Reference	.1020
6.163 speechnoise.h File Reference	.1023
6.164 split.cpp File Reference	
6.165 steerbf.cpp File Reference	
6.166 steerbf.h File Reference	.1025
6.167 testalsadevice.c File Reference	
6.168 timoconfig.cpp File Reference	
6.169 timoconfig.h File Reference	
6.170 timoSmooth.cpp File Reference	
6.171 timosmooth.h File Reference	
6.172 transducers.cpp File Reference	
6.173 upsample.cpp File Reference	
The first state of the state of	

xvi	CONTENTS
KVI	CONTENTS

In	ndex	1029
	6.177 windowselector.h File Reference	.1028
	6.176 windowselector.cpp File Reference	.1028
	6.175 wavrec.cpp File Reference	.1028
	6.174 wave2spec.cpp File Reference	.1028

1 Overview 1

#### 1 Overview

The HörTech Open Master Hearing Aid (openMHA), is a development and evaluation software platform that is able to execute hearing aid signal processing in real-time on standard computing hardware with a low delay between sound input and output.

#### 1.1 Structure

The openMHA can be split into four major components:

- The openMHA command line application (MHA) (p. 33)
- Signal processing plugins (p. 6)
- Audio input-output (IO) plugins (see io\_file\_t (p. 335), MHAIOJack (p. 95), io\_parser\_t (p. 343), io tcp parser t (p. 349))
- The openMHA toolbox library (p. 34)

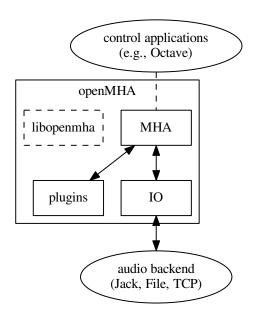


Figure 1 openMHA structure

The openMHA command line application (MHA) (p. 33) acts as a plugin host. It can load signal processing plugins as well as audio input-output (IO) plugins. Additionally, it provides the command line configuration interface and a TCP/IP based configuration interface. Several IO plugins exist: For real-time signal processing, commonly the openMHA MHAIOJack (p. 95) plugin (see plugins' manual) is used, which provides an interface to the Jack Audio Connection Kit (JACK). Other IO plugins provide audio file access or TCP/IP-based processing.

**openMHA plugins** (p. 6) provide the audio signal processing capabilities and audio signal handling. Typically, one openMHA plugin implements one specific algorithm. The complete virtual hearing aid signal processing can be achieved by a combination of several openMHA plugins.

#### 1.2 Platform Services and Conventions

The openMHA platform offers some services and conventions to algorithms implemented in plugins, that make it especially well suited to develop hearing aid algorithms, while still supporting general-purpose signal processing.

#### 1.2.1 Audio Signal Domains

As in most other plugin hosts, the audio signal in the openMHA is processed in audio chunks. However, plugins are not restricted to propagate audio signal as blocks of audio samples in the time domain another option is to propagate the audio signal in the short time Fourier transform (STFT) domain, i.e. as spectra of blocks of audio signal, so that not every plugin has to perform its own STFT analysis and synthesis. Since STFT analysis and re-synthesis of acceptable audio quality always introduces an algorithmic delay, sharing STFT data is a necessity for a hearing aid signal processing platform, because the overall delay of the complete processing has to be as short as possible.

Similar to some other platforms, the openMHA allows also arbitrary data to be exchanged between plugins through a mechanism called **algorithm communication variables** (p. 27) or short "AC vars". This mechanism is commonly used to share data such as filter coefficients or filter states.

#### 1.2.2 Real-Time Safe Complex Configuration Changes

Hearing aid algorithms in the openMHA can export configuration settings that may be changed by the user at run time.

To ensure real-time safe signal processing, the audio processing will normally be done in a signal processing thread with real-time priority, while user interaction with configuration parameters would be performed in a configuration thread with normal priority, so that the audio processing does not get interrupted by configuration tasks. Two types of problems may occur when the user is changing parameters in such a setup:

- The change of a simple parameter exposed to the user may cause an involved recalculation of internal runtime parameters that the algorithm actually uses in processing. The duration required to perform this recalculation may be a significant portion of (or take even longer than) the time available to process one block of audio signal. In hearing aid usage, it is not acceptable to halt audio processing for the duration that the recalculation may require.
- If the user needs to change multiple parameters to reach a desired configuration state
  of an algorithm from the original configuration state, then it may not be acceptable that
  processing is performed while some of the parameters have already been changed while
  others still retain their original values. It is also not acceptable to interrupt signal processing until all pending configuration changes have been performed.

The openMHA provides a mechanism in its toolbox library to enable real-time safe configuration changes in openMHA plugins:

Basically, existing runtime configurations are used in the processing thread until the work of creating an updated runtime configuration has been completed in the configuration thread.

In hearing aids, it is more acceptable to continue to use an outdated configuration for a few more milliseconds than blocking all processing.

The openMHA toolbox library provides an easy-to-use mechanism to integrate real-time safe runtime configuration updates into every plugin.

#### 1.2.3 Plugins can Themselves Host Other Plugins

An openMHA plugin can itself act as a plugin host. This allows to combine analysis and resynthesis methods in a single plugin. We call plugins that can themselves load other plugins "bridge plugins" in the openMHA.

When such a bridge plugin is then called by the openMHA to process one block of signal, it will first perform its analysis, then invoke (as a function call) the signal processing in the loaded plugin to process the block of signal in the analysis domain, wait to receive a processed block of signal in the analysis domain back from the loaded plugin when the signal processing function call to that plugin returns, then perform the re-synthesis transform, and finally return the block of processed signal in the original domain back to the caller of the bridge plugin.

#### 1.2.4 Central Calibration

The purpose of hearing aid signal processing is to enhance the sound for hearing impaired listeners. Hearing impairment generally means that people suffering from it have increased hearing thresholds, i.e. soft sounds that are audible for normal hearing listeners may be imperceptible for hearing impaired listeners. To provide accurate signal enhancement for hearing impaired people, hearing aid signal processing algorithms have to be able to determine the absolute physical sound pressure level corresponding to a digital signal given to any openM← HA plugin for processing. Inside the openMHA, we achieve this with the following convention: The single-precision floating point time-domain sound signal samples, that are processed inside the openMHA plugins in blocks of short durations, have the physical pressure unit Pascal (  $1Pa = 1N/m^2$ ). With this convention in place, all plugins can determine the absolute physical sound pressure level from the sound samples that they process. A derived convention is employed in the spectral domain for STFT signals. Due to the dependency of the calibration on the hardware used, it is the responsibility of the user of the openMHA to perform calibration measurements and adapt the openMHA settings to make sure that this calibration convention is met. We provide the plugin transducers which can be configured to perform the necessary signal adjustments.

#### 2 Todo List

#### Class AuditoryProfile::profile t (p. 212)

Give more documentation; implement all parts of the auditory profile.

#### Class mhaconfig\_t (p. 470)

Add information on number of bands and on center frequencies, or replace by **mha\_audio**← **\_descriptor\_t** (p. 396).

#### Class MHAFilter::filter\_t (p. 497)

Implement a more robust filter form.

#### Member MHAFilter::polyphase resampling t::now index (p. 529)

Index into what? What is the meaning of now?

```
Class MHAPlugin::plugin_t< runtime_cfg_t > (p. 690)
```

Describe all services provided by this class, so that the reason why it is recommended that all plugins use this class as their base is evident. Document all relevant methods and fields.

#### 3 Module Documentation

#### 3.1 Concept of Variables and Data Exchange in the openMHA

Accessibility of configuration variables and data exchange between plugins (processing blocks) are an important issue in the openMHA.

Accessibility of configuration variables and data exchange between plugins (processing blocks) are an important issue in the openMHA.

In general, variable types in the openMHA are distinguished by their different access methods. The variable types in the openMHA are:

- Configuration variables: Read and write accesses are possible through the openM← HA configuration language interface. Configuration variables are implemented as C++ classes with a public data member of the underlying C type. Configuration variables can be read and modified from "outside" using the configuration language. The plugin which provides the configuration variable can use the exposed data member directly. All accesses through the openMHA configuration language are checked for data type, valid range, and access restrictions.
- **Monitor variables**: Read access is possible through the openMHA configuration language. Write access is only possible from the C++ code. Internally, monitor variables have a similar C++ class interface as configuration variables.
- AC variables (algorithm communication variables (p. 27)): Any C or C++ data structure can be shared within an openMHA chain. Access management and name space is realised in openMHA chain plugin ('mhachain'). AC variables are not available to the openMHA configuration language interface, although a read-only converter plugin acmon is available.

• Runtime configuration: Algorithms usually derive more parameters (runtime configuration) from the openMHA configuration language variables. When a configuration variable changes through configuration language write access, then the runtime configuration has to be recomputed. Plugin developers are encouraged to encapsulate the runtime configuration in a C++ class, which recomputes the runtime configuration from configuration variables in the constructor. The openMHA supports lock-free and thread-safe replacement of the runtime configuration instance (see example5.cpp (p. 20) and references therein).

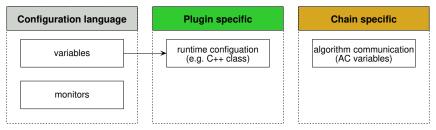


Figure 2 Variable types in the openMHA

The C++ data types are shown in the figure below. These variables can be accessed via the openMHA host application using the openMHA configuration language. For more details see 'Application engineers' manual'.

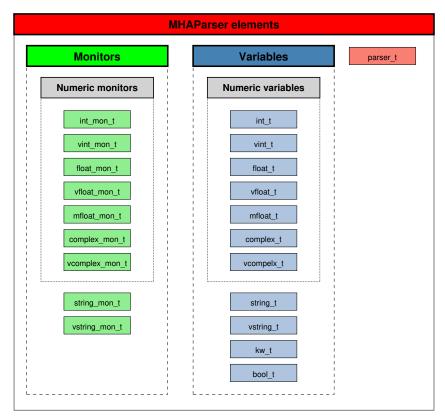


Figure 3 MHAParser elements

#### 3.2 The openMHA Plugins (programming interface)

An openMHA plugin is the signal processing unit, usually an algorithm.

#### Classes

class MHAPlugin::plugin\_t < runtime\_cfg\_t >
 The template class for C++ openMHA plugins.

#### **Macros**

- #define **MHAPLUGIN\_CALLBACKS\_PREFIX**(prefix, classname, indom, outdom)

  C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN\_CALLBACKS(plugname, classname, indom, outdom) MHAPLU
  GIN\_CALLBACKS\_PREFIX(MHA\_STATIC\_## plugname ## \_,classname,indom,outdom)
  C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN\_DOCUMENTATION(plugname, cat, doc) MHAPLUGIN\_DOCU
   MENTATION\_PREFIX(MHA\_STATIC\_ ## plugname ## \_,cat,doc)

Wrapper macro for the plugin documentation interface.

#### 3.2.1 Detailed Description

An openMHA plugin is the signal processing unit, usually an algorithm.

openMHA plugins can be combined into processing chains. One of the configured chains can be selected for output which allows direct comparison of single algorithms or complex signal processing configurations. Algorithms within one chain can communicate with each other by sharing some of their variables, see section **Communication between algorithms** (p. 27).

The openMHA plugins can use the openMHA configuration language for their configuration. If they do so, the configuration can be changed through the framework even at run time. A description of this language can be found in section **The openMHA configuration language** (p. 33). If the algorithms should make use of the openMHA configuration language, they need to be written in C++ rather than pure C.

In the openMHA package a set of example plugins is included. These examples are the base of a step by step tutorial on how to write an openMHA plugin. See section **Writing openMHA Plugins. A step-by-step tutorial** (p. 10) for detailes.

openMHA plugins communicate with the openMHA using a simple ANSI-C interface. This way it is easy to mix plugins compiled with different C++ compilers. For convenience, we provide C++ classes which can be connected to the C++ interface. We strongly recommend the usage of these C++ wrappers. They include out-of-the box support exporting variables to the configuration interface and for thread safe configuration update.

The openMHA C++ plugin interface consists of a few number of method prototypes:

The output domain (spectrum or waveform) of an openMHA plugin will typically be the same as the input domain:

- mha\_wave\_t (p. 462) \* process(mha\_wave\_t (p. 462) \*): pure waveform processing
- mha\_spec\_t (p. 432) \* process(mha\_spec\_t (p. 432) \*): pure spectral processing

But it is also possible to implement domain transformations (from the time domain into spectrum or vice versa). The corresponding method signatures are:

- mha\_spec\_t (p. 432) \* process(mha\_wave\_t (p. 462) \*): Domain transformation from waveform to spectrum
- mha\_wave\_t (p. 462) \* process(mha\_spec\_t (p. 432) \*): Domain transformation from spectrum to waveform

For preparation and release of a plugin, the methods

- void prepare(mhaconfig\_t (p. 470) &) and
- void release(void)

have to be implemented. The openMHA will call the process() method only ater the prepare method has returned and before release() is invoked. It is guarantteed by the open $\leftarrow$  MHA framework that signal processing is performed only between calls of prepare() and release(). Each call of prepare() is followed by a call of release() (after some optional signal processing).

For configuration purposes, the plugin class has to export a method called <code>parse()</code> which implements the openMHA configuration language. We strongly recommend that you do not implement this method yourself, but by inheriting from the class <code>MHAParser::parser\_t</code> (p. 651) from the openMHA toolbox, directly or indirectly (inheriting from a class that itself inherits from <code>MHAParser::parser\_t</code> (p. 651)).

#### 3.2.2 Connecting the C++ class with the C Interface

A C++ class which provides the appropriate methods can be used as an openMHA Plugin by connecting it to the C interface using the **MHAPLUGIN\_CALLBACKS** (p. 9) macro.

The openMHA Toolbox library provides a base class **MHAPlugin::plugin\_t** (p. 690)<T> (a template class) which can be used as the base class for a plugin class. This base class implements some necessary features for openMHA plugin developers like integration into the openMHA configuration language environment (it inherits from **MHAParser::parser\_t** (p. 651)) and thread-safe runtime configuration update.

#### 3.2.3 Error reporting

When your plugin detects a situation that it cannot handle, like input signal of the wrong signal domain at preparation time, unsupported number of input channels at preparation time, unsupported combinations of values in the plugin's variables during configuration, it should throw a C++ exception. The exception should be of type MHAError. Exceptions of this type are caught by the **MHAPLUGIN\_CALLBACKS** (p. 9) macro for further error Reporting.

Throwing exceptions in response to unsupported configuration changes does not stop the signal processing. The openMHA configuration language parser will restore the previous value of that variable and report an error to the configurator, while the signal processing continues. Throwing exceptions from the signal processing thread will terminate the signal processing. Therefore, you should generally avoid throwing exceptions from the process method. Only do this if you detected a defect in your plugin, and then you should include enough information in the error message to be able to fix the defect.

- 3.2.4 Contents of the openMHA Plugin programming interface
- 3.2.5 Macro Definition Documentation

C++ wrapper macro for the plugin interface.

#### **Parameters**

classname	The name of the plugin class
indom	Input domain (wave or spec)
outdom	Output domain (wave or spec)

This macro defines all required openMHA Plugin interface functions and passes calls of these functions to the corresponding member functions of the class `classname'. The parameters `indom' and `outdom' specify the input and output domain of the processing method. The MHAInit() and MHADestroy() functions will create or destroy an instance of the class. The approriate member functions have to be defined in the class. It is suggested to make usage of the MHAPlugin::plugin\_t (p. 690) template class. Exceptions of type MHA\_Error (p. 413) are caught and transformed into apropriate error codes with their corresponding error messages.

#### 3.2.5.2 #define MHAPLUGIN CALLBACKS(

```
plugname,
classname,
indom,
outdom ) MHAPLUGIN_CALLBACKS_PREFIX(MHA_STATIC_ ## plugname
## _,classname,indom,outdom)
```

C++ wrapper macro for the plugin interface.

#### **Parameters**

plugname	The file name of the plugin without the .so or .dll extension
classname	The name of the plugin class
indom	Input domain (wave or spec)
outdom	Output domain (wave or spec)

This macro defines all required openMHA Plugin interface functions and passes calls of these functions to the corresponding member functions of the class 'classname'. The parameters 'indom' and 'outdom' specify the input and output domain of the processing method. The MHA← Init() and MHADestroy() functions will create or destroy an instance of the class. The approriate member functions have to be defined in the class. It is suggested to make usage of the MH← APlugin::plugin\_t (p. 690) template class. Exceptions of type MHA\_Error (p. 413) are caught and transformed into apropriate error codes with their corresponding error messages.

Wrapper macro for the plugin documentation interface.

plugname ## \_,cat,doc)

#### **Parameters**

plugin	The file name of the plugin without the .so or .dll extension
cat	Space separated list of categories to which belong the plugin (as const char*)
doc	Documentation of the plugin (as const char*)

This macro defines the openMHA Plugin interface function for the documentation. The categories can be any space seperated list of category names. An empty string will categorize the plugin in the category 'other'.

The documentation should contain a description of the plugin including a description of the underlying models, and a paragraph containing hints for usage. The text should be LaTeX compatible (e.g., avoid or quote underscores in the text part); equations should be formatted as LaTeX.

#### 3.3 Writing openMHA Plugins. A step-by-step tutorial

A step-by-step tutorial on writing openMHA plugins.

A step-by-step tutorial on writing openMHA plugins.

openMHA contains a small number of example plugins as C++ source code. They are meant to help developers in understanding the concepts of openMHA plugin programming starting from the simplest example and increasing in complexity. This tutorial explains the basic parts of the example files.

#### 3.3.1 example1.cpp

The example plugin file <code>example1.cpp</code> (p. 931) demonstrates the easiest way to implement an openMHA Plugin. It attenuates the sound signal in the first channel by multiplying the sound samples with a factor. The plugin class <code>MHAPlugin::plugin\_t</code> (p. 690) exports several methods, but only two of them need a non-empty implementation: <code>prepare()</code> method is a pure virtual function and <code>process()</code> is called when signal processing starts.

Every plugin implementation should include the 'mha\_plugin.hh (p. 969)' header file. C++ helper classes for plugin development are declared in this header file, and most header files needed for plugin development are included by mha plugin.hh (p. 969).

The class plugin1\_t inherits from the class **MHAPlugin::plugin\_t** (p. 690), which then inherits from **MHAParser::parser\_t** (p. 651) – the configuration language interface in the method "parse". Our plugin class therefore exports the working "parse" method inherited from **MHA**← **Parser::parser t** (p. 651), and the plugin is visible in the openMHA configuration tree.

The constructor has to accept 3 parameters of correct types. In this simple example, we do not make use of them.

The release() method is used to free resources after signal processing. In this simple example, we do not allocate resources, so there is no need to free them.

#### 3.3.1.1 The prepare method

#### **Parameters**

signal_info	Contains information about the input signal's parameters, see <b>mhaconfig_t</b>	
	(p. 470).	

The prepare () method of the plugin is called before the signal processing starts, when the input signal parameters like domain, number of channels, frames per block, and sampling rate are known. The prepare () method can check these values and raise an exception if the plugin cannot cope with them, as is done here. The plugin can also change these values if the signal processing performed in the plugin results in an output signal with different parameters. This plugin does not change the signal's parameters, therefore they are not modified here.

#### 3.3.1.2 The signal processing method

```
mha_wave_t * process(mha_wave_t * signal)
{
   unsigned int channel = 0; // channels and frames counting starts with 0
   float factor = 0.1f;
   unsigned int frame;

   // Scale channel number "channel" by "factor":
   for(frame = 0; frame < signal->num_frames; frame++) {
      // Waveform channels are stored interleaved.
      signal->buf[signal->num_channels * frame + channel] *= factor;
   }
   // Algorithms may process data in-place and return the input signal
   // structure as their output signal:
   return signal;
}
```

#### **Parameters**

signal Pointer to the input signal structure **mha\_wave\_t** (p. 462).

#### Returns

Pointer to the output signal structure. The input signal structure may be reused if the signal has the same domain and dimensions.

The plugin works with time domain input signal (indicated by the data type **mha\_wave\_t** (p. 462) of the process method's parameter). It scales the first channel by a factor of 0.1. The output signal reuses the structure that previously contained the input signal (in-place processing).

#### 3.3.1.3 Connecting the C++ class with the C plugin interface

Plugins have to export C functions as their interface (to avoid C++ name-mangling issues and other incompatibilities when mixing plugins compiled with different C++ compilers).

```
MHAPLUGIN_CALLBACKS(example1, example1_t, wave, wave)
```

This macro takes care of accessing the C++ class from the C functions required as the plugin's interface. It implements the C funtions and calls the corresponding C++ instance methods. Plugin classes should be derived from the template class **MHAPlugin::plugin\_t** (p. 690) to be compatible with the C interface wrapper.

This macro also catches C++ exceptions of type MHA\_Error (p. 413), when raised in the methods of the plugin class, and reports the error using an error flag as the return value of the underlying C function. It is therefore important to note that only C++ exceptions of type MH← A\_Error (p. 413) may be raised by your plugin. If your code uses different Exception classes, you will have to catch them yourself before control leaves your plugin class, and maybe report the error by throwing an instance of MHA\_Error (p. 413). This is important, because: (1) C++ exceptions cannot cross the plugin interface, which is in C, and (2) there is no error handling code for your exception classes in the openMHA framework anyways.

#### 3.3.2 example2.cpp

This is another simple example of openMHA plugin written in C++. This plugin also scales one channel of the input signal, working in the time domain. The scale factor and which channel to scale (index number) are made accessible to the configuration language.

The algorithm is again implemented as a C++ class.

#### **Parameters**

scale_ch	- the channel number to be scaled
factor	<ul> <li>the scale factor of the scaling.</li> </ul>

This class again inherits from the template class **MHAPlugin::plugin\_t** (p. 690) for intergration with the openMHA configuration language. The two data members serve as externally visible configuration variables. All methods of this class have a non-empty implementation.

#### 3.3.2.1 Constructor

The constructor invokes the superclass constructor with a string parameter. This string parameter serves as the help text that describes the functionality of the plugin. The constructor registers configuration variables with the openMHA configuration tree and sets their default values and permitted ranges. The minimum permitted value for both variables is zero, and there is no maximum limit (apart from the limitations of the underlying C data type). The configuration variables have to be registered with the parser node instance using the **MHAParser::parser**—**\_t::insert\_item** (p. 653) method.

#### 3.3.2.2 The prepare method

#### **Parameters**

```
signal_info – contains information about the input signal's parameters, see mhaconfig_t (p. 470).
```

The user may have changed the configuration variables before preparing the openMHA plugin. A consequence of this is that it is not sufficient any more to check if the input signal has at least 1 audio channel.

Instead, this prepare method checks that the input signal has enough channels so that the current value of  $scale\_ch.data$  is a valid channel index, i.e.  $0 \le scale\_ch.data < signal \leftarrow \_info.channels$ . The prepare method does not have to check that  $0 \le scale\_ch.data$ , since this is guaranteed by the valid range setting of the configuration variable.

The prepare method then modifies the valid range of the <code>scale\_ch</code> variable, it modifies the upper bound so that the user cannot set the variable to a channel index higher than the available channels. Setting the range is done using a string parameter. The prepare method contatenates a string of the form "[0,n[". n is the number of channels in the input signal, and is used here as an exclusive upper boundary. To convert the number of channels into a string, a helper function for string conversion from the openMHA Toolbox is used. This function is overloaded and works for several data types.

It is safe to assume that the value of configuration variables does not change while the prepare method executes, since openMHA preparation is triggered from a configuration language command, and the openMHA configuration language parser is busy and cannot accept other commands until all openMHA plugins are prepared (or one of them stops the process by raising an exception). As we will see later in this tutorial, the same assumption cannot be made for the process method.

#### 3.3.2.3 The release method

```
void example2_t::release(void)
{
    scale_ch.set_range("[0,[");})
```

The release method should undo the state changes that were performed by the prepare method. In this example, the prepare method has reduced the valid range of the scale\_ch, so that only valid channels could be selected during signal processing.

The release method reverts this change by setting the valid range back to its original value, "[0,[".

#### 3.3.2.4 The signal processing method

```
mha_wave_t * example2_t::process(mha_wave_t * signal)
{
    unsigned int frame;
    for(frame = 0; frame < signal->num_frames; frame++)
        value(signal, frame, scale_ch.data) *= factor.data;
    return signal;
}
```

The processing function uses the current values of the configuration variables to scale every frame in the selected audio channel.

Note that the value of each configuration variable can change while the processing method executes, since the process method usually executes in a different thread than the configuration interface.

For this simple plugin, this is not a problem, but for more advanced plugins, it has to be taken into consideration. The next section takes a closer look at the problem.

#### Consistency

Assume that one thread reads the value stored in a variable while another thread writes a new value to that variable concurrently. In this case, you may have a consistency problem. You would perhaps expect that the value retrieved from the variable either (a) the old value, or (b) the new value, but not (c) something else. Yet generally case (c) is a possibility.

Fortunately, for some data types on PC systems, case (c) cannot happen. These are 32bit wide data types with a 4-byte alignment. Therefore, the values in **MHAParser::int\_t** (p. 629) and **MHAParser::float\_t** (p. 624) are always consistent, but this is not the case for vectors, strings, or complex values. With these, you can get a mixture of the bit patterns of old and new values, or you can even cause a memory access violation in case a vector or string grows and has to be reallocated to a different memory address.

There is also a consistency problem if you take the combination of two "safe" datatypes. The openMHA provides a mechanism that can cope with these types of problems. This thread-safe runtime configuration update mechanism is introduced in example 5.

#### 3.3.3 example3.cpp

This example introduces the openMHA Event mechanism. Plugins that provide configuration variable can receive a callback from the parser base class when a configuration variable is accessed through the configuration language interface.

The third example performes the same processing as before, but now only even channel indices are permitted when selecting the audio channel to scale. This restriction cannot be ensured by setting the range of the channel index configuration variable. Instead, the event mechanism of openMHA configuration variables is used. Configuration variables emit 4 different events, and your plugin can connect callback methods that are called when the events are triggered. These events are:

#### writeaccess

• triggered on write access to a configuration variable.

#### valuechanged

 triggered when write access to a configuration variable actually changes the value of this variable.

#### readaccess

triggered after the value of the configuration variable has been read.

#### prereadaccess

• triggered before the value of a configuration variable is read, i.e. the value of the requested variable can be changed by the callback to implement computation on demand.

All of these callbacks are executed in the configuration thread. Therefore, the callback implementation does not have to be realtime-safe. No other updates of configuration language variables through the configuration language can happen in parallel, but your processing method can execute in parallel and may change values.

#### 3.3.3.1 Data member declarations

```
class example3_t : public MHAPlugin::plugin_t<int> {
    MHAParser::int_t scale_ch;
    MHAParser::float_t factor;
    MHAParser::int_mon_t prepared;

MHAEvents::patchbay_t<example3_t> patchbay;
```

This plugin exposes another configuration variable, "prepared", that keeps track of the prepared state of the plugin. This is a read-only (monitor) integer variable, i.e. its value can only be changed by your plugin's C++ code. When using the configuration language interface, the value of this variable can only be read, but not changed.

The patchbay member is an instance of a connector class that connects event sources with callbacks.

#### 3.3.3.2 Method declarations

This plugin exposes 4 callback methods that are triggered by events. Multiple events (from the same or different configuration variables) can be connected to the same callback method, if desired.

This example plugin uses the valuechanged event to check that the scale\_ch configuration variable is only set to valid values.

The other callbacks only cause log messages to stdout, but the comments in the logging callbacks give a hint when listening on the events would be useful.

#### 3.3.3.3 Example 3 constructor

```
example3_t::example3_t(algo_comm_t & ac,
                       const std::string & chain_name,
                       const std::string & algo_name)
    : MHAPlugin::plugin_t<int>("This plugin multiplies the sound signal"
                               " in one audio channel by a factor", ac),
      scale_ch("Index of audio channel to scale. Indices start from 0."
               " Only channels with even indices may be scaled.",
               "O",
               "[0,["),
      factor ("The scaling factor that is applied to the selected channel.",
             "0.1",
             "[0,["),
     prepared("State of this plugin: 0 = unprepared, 1 = prepared")
    insert_item("channel", &scale_ch);
   insert_item("factor", &factor);
    prepared.data = 0;
    insert_item("prepared", &prepared);
    patchbay.connect(&scale_ch.writeaccess, this,
                     &example3 t::on scale ch writeaccess);
    patchbay.connect(&scale_ch.valuechanged, this,
                    &example3_t::on_scale_ch_valuechanged);
    patchbay.connect(&scale_ch.readaccess, this,
                     &example3_t::on_scale_ch_readaccess);
    patchbay.connect(&scale_ch.prereadaccess, this,
                     &example3_t::on_prereadaccess);
    patchbay.connect(&factor.prereadaccess, this,
                     &example3 t::on prereadaccess);
    patchbay.connect(&prepared.prereadaccess, this,
                    &example3_t::on_prereadaccess);
}
```

The constructor of monitor variables does not take a parameter for setting the initial value. The single parameter here is the help text describing the contents of the read-only variable. If the initial value should differ from 0, then the .data member of the configuration variable has to be set to the initial value in the plugin constructor's body explicitly, as is done here for demonstration although the initial value of this monitor variable is 0.

Events and callback methods are then connected using the patchbay member variable.

#### 3.3.3.4 The prepare method

The prepare method checks wether the current setting of the scale\_ch variable is possible with the input signal dimension. It does not adjust the range of the variable, since the range alone is not sufficient to ensure all future settings are also valid: The scale channel index has to be even.

#### 3.3.3.5 The release method

```
void example3_t::release(void)
{
   prepared.data = 0;
}
```

The release method is needed for tracking the prepared state only in this example.

#### 3.3.3.6 The signal processing method

```
mha_wave_t * example3_t::process(mha_wave_t * signal)
{
    unsigned int frame;
    for(frame = 0; frame < signal->num_frames; frame++)
        value(signal,frame,scale_ch.data) *= factor.data;
    return signal;
}
```

The signal processing member function is the same as in example 2.

#### 3.3.3.7 The callback methods

```
void example3_t::on_scale_ch_writeaccess()
    printf("Write access: Attempt to set scale_ch=%d.\n", scale_ch.data);
    // Can be used to track any writeaccess to the configuration, even
    // if it does not change the value. E.g. setting the name of the
    // sound file in a string configuration variable can cause a sound
    // file player plugin to start playing the sound file from the
    // beginning.
void example3_t::on_scale_ch_valuechanged()
    if (scale_ch.data & 1)
       throw MHA_Error(__FILE__,__LINE_
                        "Attempt to set scale_ch to non-even value %d",
                        scale_ch.data);
    // Can be used to recompute a runtime configuration only if some
    // configuration variable actually changed.
void example3_t::on_scale_ch_readaccess()
    printf("scale_ch has been read.\n");
    // A configuration variable used as an accumulator can be reset
    // after it has been read.
void example3_t::on_prereadaccess()
    printf("A configuration language variable is about to be read.\n");
    // Can be used to compute the value on demand.
MHAPLUGIN_CALLBACKS (example3, example3_t, wave, wave)
```

When the writeaccess or valuechanged callbacks throw an MHAError exception, then the change made to the value of the configuration variable is reverted.

If multiple event sources are connected to a single callback method, then it is not possible to determine which event has caused the callback to execute. Often, this information is not crucial, i.e. when the answer to a change of any variable in a set of variables is the same, e.g. the recomputation of a new runtime configuration that takes all variables of this set as input.

#### 3.3.4 example4.cpp

This plugin is the same as example 3 except that it works on the spectral domain (STFT).

#### 3.3.4.1 The Prepare method

The prepare method now checks that the signal domain is MHA SPECTRUM.

#### 3.3.4.2 The signal processing method

```
mha_spec_t * example4_t::process(mha_spec_t * signal)
{
    unsigned int bin;
    // spectral signal is stored non-interleaved.
    mha_complex_t * channeldata =
        signal->buf + signal->num_frames * scale_ch.data;
    for(bin = 0; bin < signal->num_frames; bin++)
        channeldata[bin] *= factor.data;
    return signal;
}
```

The signal processing member function works on the spectral signal instead of the wave signal as before.

The **mha\_spec\_t** (p. 432) instance stores the complex (**mha\_complex\_t** (p. 400)) spectral signal for positive frequences only (since the waveform signal is always real). The num\_frames member of **mha\_spec\_t** (p. 432) actually denotes the number of STFT bins.

Please note that different from **mha\_wave\_t** (p. 462), a multichannel signal in **mha\_spec\_t** (p. 432) is stored non-interleaved in the signal buffer.

Some arithmetic operations are defined on struct **mha\_complex\_t** (p. 400) to facilitate efficient complex computations. The \*= operator used here (defined for real and for complex arguments) is one of them.

#### 3.3.4.3 Connecting the C++ class with the C plugin interface

```
MHAPLUGIN_CALLBACKS(example4, example4_t, spec, spec)
```

When connecting a class that performs spectral processing with the C interface, use spec instead of wave as the domain indicator.

#### 3.3.5 example5.cpp

Many algorithms use complex operations to transform the user space variables into run time configurations. If this takes a noticeable time (e.g. more than 100-500  $\mu$  sec), the update of the runtime configuration can not take place in the real time processing thread. Furthermore, the parallel access to complex structures may cause unpredictable results if variables are read while only parts of them are written to memory (cf. section **Consistency** (p. 15)). To handle these situations, a special C++ template class **MHAPlugin::plugin\_t** (p. 690) was designed. This class helps keeping all access to the configuration language variables in the **configuration** thread rather than in the **processing** thread.

The runtime configuration class <code>example5\_t</code> (p. 301) is the parameter of the template class <code>MHAPlugin::plugin\_t</code> (p. 690). Its constructor converts the user variables into a runtime configuration. Because the constructor executes in the configuration thread, there is no harm if the constructor takes a long time. All other member functions and data members of the runtime configurations are accessed only from the signal processing thread (real-time thread).

```
class example5_t {
public:
    example5_t (unsigned int,unsigned int,mha_real_t);
    mha_spec_t* process(mha_spec_t*);
private:
    unsigned int channel;
    mha_real_t scale;
};
```

The plugin interface class inherits from the plugin template class **MHAPlugin::plugin**\_← **t** (p. 690), parameterised by the runtime configuration. Configuration changes (write access to the variables) will emit a write access event of the changed variables. These events can be connected to member functions of the interface class by the help of a **MHAEvents::patchbay**← **\_t** (p. 478) instance.

```
class plugin_interface_t : public MHAPlugin::plugin_t<example5_t> {
public:
    plugin_interface_t(const algo_comm_t&,const std::string&,const std::string&);
    mha_spec_t* process(mha_spec_t*);
    void prepare(mhaconfig_t&);
private:
    void update_cfg();
    /* integer variable of MHA-parser: */
    MHAParser::int_t scale_ch;
    /* float variable of MHA-parser: */
    MHAParser::float_t factor;
    /* patch bay for connecting configuration parser
        events with local member functions: */
    MHAEvents::patchbay_t<plugin_interface_t> patchbay;
};
```

The constructor of the runtime configuration analyses and validates the user variables. If the configuration is invalid, an exception of type **MHA\_Error** (p. 413) is thrown. This will cause the openMHA configuration language command which caused the change to fail: The modified configuration language variable is then reset to its original value, and the error message will contain the message string of the **MHA\_Error** (p. 413) exception.

In this example, the run time configuration class example5\_t (p. 301) has a signal processing member function. In this function, the selected channel is scaled by the given scaling factor.

```
mha_spec_t* example5_t::process(mha_spec_t* spec)
{
    /* Scale channel number "scale_ch" by "factor": */
    for(unsigned int fr = 0; fr < spec->num_frames; fr++) {
        spec->buf[fr + channel * spec->num_frames].re *= scale;
        spec->buf[fr + channel * spec->num_frames].im *= scale;
    }
    return spec;
}
```

The constructor of the example plugin class is similar to the previous examples. A callback triggered on write access to the variables is registered using the **MHAEvents::patchbay\_t** (p. 478) instance.

```
plugin_interface_t::plugin_interface_t(
   const algo_comm_t& iac,
    const std::string&,const std::string&)
    : MHAPlugin::plugin_t<example5_t>("example plugin configuration structure",iac),
      /\star initialzing variable 'scale_ch' with MHAParser::int_t(char* name, .... ) \star/
      scale_ch("channel number to be scaled", "0", "[0, ["),
      /* initialzing variable 'factor' with MHAParser::float_t(char* name, .... ) */
     factor("scale factor","1.0","[0,2]")
    /\star Register variables to the configuration parser: \star/
    insert_item("channel", &scale_ch);
    insert_item("factor", &factor);
    * On write access to the parser variables a notify callback of
    \star this class will be called. That funtion will update the runtime
    * configuration.
    patchbay.connect(&scale_ch.writeaccess,this,&plugin_interface_t::update_cfg);
    patchbay.connect(&factor.writeaccess,this,&plugin_interface_t::update_cfg);
```

The processing function can gather the latest valid runtime configuration by a call of poll\_config. On success, the class member cfg points to this configuration. On error, if there is no usable runtime configuration instance, an exception is thrown. In this example, the prepare method ensures that there is a valid runtime configuration, so that in this example, no error can be raised at this point. The prepare method is always executed before the process method is called. The runtime configuration class in this example provides a signal processing method. The process method of the plugin interface calls the process method of this instance to perform the actual signal processing.

```
mha_spec_t* plugin_interface_t::process(mha_spec_t* spec)
{
    poll_config();
    return cfg->process(spec);
}
```

The prepare method ensures that a valid runtime configuration exists by creating a new runtime configuration from the current configuration language variables. If the configuration is invalid, then an exception of type **MHA\_Error** (p. 413) is raised and the preparation of the openMHA fails with an error message.

The update\_cfg member function is called when the value of a configuration language variable changes, or from the prepare method. It allocates a new runtime configuration and registers it for later access from the real time processing thread. The function **push\_config** (p. 688) stores the configuration in a FiFo queue of runtime configurations. Once they are inserted in the FiFo, the **MHAPlugin::plugin\_t** (p. 690) template is responsible for deleting runtime configuration instances stored in the FiFo. You don't need to keep track of the created instances, and you must not delete them yourself.

```
void plugin_interface_t::update_cfg()
{
    if( tftype.channels )
        push_config(new example5_t(scale_ch.data,tftype.channels,factor.data));
}
```

In the end of the example code file, the macro **MHAPLUGIN\_CALLBACKS** (p. 9) defines all ANSI-C interface functions and passes them to the corresponding C++ class member functions (partly defined by the **MHAPlugin::plugin\_t** (p. 690) template class). All exceptions of type **MHA\_Error** (p. 413) are caught and transformed into an appropriate error code and error message.

MHAPLUGIN\_CALLBACKS(example5,plugin\_interface\_t,spec,spec)

#### 3.3.6 example6.cpp

This last example is the same as the previous one, but it additionally creates an 'Algorithm Communication Variable' (AC variable). It calculates the RMS level of a given channel and stores it into this variable. The variable can be accessed by any other algorithm in the same chain. To store the data onto disk, the 'acsave' plugin can be used. 'acmon' is a plugin which converts AC variables into parsable monitor variables.

In the constructor of the plugin class the variable rmsdb is registered under the name example6\_rmslev as a one-dimensional AC variable of type float. For registration of other types, read access and other detailed informations please see **Communication between algorithms** (p. 27).

```
example6_t::example6_t(const algo_comm_t& iac,
                        const std::string&,const std::string&)
    : MHAPlugin::plugin_t<cfg_t>("example plugin configuration structure",iac),
/* initialzing variable 'channel_no' with MHAParser::int_t(char* name, ....) */
      channel_no("channel in which the RMS level is measured", "0", "[0, [")
    /* Register variables to the configuration parser: */
    insert_item("channel", &channel_no);
     * On write access to the parser variables a notify callback of
     * this class will be called. That funtion will update the runtime
     * configuration.
    patchbay.connect(&channel_no.writeaccess,this,&example6_t::update_cfg);
     * Propagate the level variable to all algorithms in the
     * processing chain. If multiple instances of this algorithm are
     * required, than it is necessary to use different names for this
     * variable (i.e. prefixing the name with the algorithm name
     * passed to MHAInit).
    ac.insert_var_float( ac.handle, "example6_rmslev", &rmsdb );
```

#### 3.3.7 Debugging openMHA plugins

Suppose you would want to step through the code of your openMHA plugin with a debugger. This example details how to use the linux gdb debugger to inspect the example6\_t :: prepare() (p. 303) and example6\_t::process() (p. 303) routines of example6. 
cpp (p. 23) example 6.

First, make sure that your plugin is compiled with the compiler option to include debugging symbols: Apply the -ggdb switch to all gcc, g++ invocations.

Once the plugin is compiled, with debugging symbols, create a test configuration. For example 6, assuming there is an audio file named input.wav in your working directory, you could create a configuration file named 'debugexample6.cfg', with the following content:

```
# debugexample6.cfg
fragsize = 64
srate = 44100
nchannels_in = 2
iolib = MHAIOFile

io.in = input.wav
io.out = output.wav
mhalib = example6
mha.channel = 1
cmd=start
```

Assuming all your binaries and shared-object libraries are in your 'bin' directory (see READ← ME.md), you could start gdb using

```
$ export MHA_LIBRARY_PATH=$PWD/bin
$ gdb $MHA_LIBRARY_PATH/mha
```

Set breakpoints in prepare and process methods, and start execution. Note that specifying the breakpoint by symbol (example6\_t::prepare (p. 303)) does not yet work, as the symbol lives in the openMHA plugin that has not yet been loaded. Specifying by line number works, however. Specifying the breakpoint by symbol also works once the plugin is loaded (i.e. when the debugger stops in the first break point). You can set the breakpoints like this (example shown here is run in gdb version 7.11.1):

```
(gdb) run ?read:debugexample6.cfg
Starting program: {openMHA_directory}/bin/mha ?read:debugexample6.cfg
[Thread debugging using libthread_db enabled]
Using host libthread_db library "/lib/x86_64-linux-gnu/libthread_db.so.1".
The Open Master Hearing Aid (openMHA) server
Copyright (c) 2005-2017 HoerTech gGmbH, D-26129 Oldenburg, Germany
This program comes with ABSOLUTELY NO WARRANTY; for details see file COPYING.
This is free software, and you are welcome to redistribute it
under the terms of the GNU AFFERO GENERAL PUBLIC LICENSE, Version 3;
for details see file COPYING.
Breakpoint 1, example6_t::prepare (this=0x6478b0, tfcfg=...)
   at example6.cpp:192
          if( tfcfg.domain != MHA_WAVEFORM )
(qdb) b example6.cpp:162
Breakpoint 2 at 0x7ffff589744a: file example6.cpp, line 162.
(gdb) c
Continuing.
```

Where '{openMHA\_directory}' is the directory where openMHA is located (which should also be your working directory in this case). Next stop is the process() method. You can now examine and change the variables, step through the program as needed (using, for example 'n' to step in the next line):

3.4 The MHA Framework interface

# 3.5 Communication between algorithms

Algorithms within one chain can share variables for communication with other algorithms.

Collaboration diagram for Communication between algorithms:

#### **Files**

file mha\_algo\_comm.h

Header file for Algorithm Communication.

### **Namespaces**

· MHA AC

Functions and classes for Algorithm Communication (AC) support.

#### **Classes**

class MHA AC::spectrum t

Insert a MHASignal::spectrum\_t (p. 762) class into the AC space.

class MHA\_AC::waveform\_t

Insert a MHASignal::waveform\_t (p. 774) class into the AC space.

class MHA AC::int t

Insert a integer variable into the AC space.

class MHA\_AC::float\_t

Insert a float point variable into the AC space.

class MHA\_AC::double\_t

Insert a double precision floating point variable into the AC space.

class MHA\_AC::ac2matrix\_t

Copy AC variable to a matrix.

class MHA\_AC::acspace2matrix\_t

Copy all or a subset of all numeric AC variables into an array of matrixes.

struct algo\_comm\_t

A reference handle for algorithm communication variables.

struct comm var t

Algorithm communication variable structure.

#### **Functions**

• mha\_spec\_t MHA\_AC::get\_var\_spectrum (algo\_comm\_t ac, const std::string &name)

Convert an AC variable into a spectrum.

mha\_wave\_t MHA\_AC::get\_var\_waveform (algo\_comm\_t ac, const std::string &name)

Convert an AC variable into a waveform.

- int MHA\_AC::get\_var\_int (algo\_comm\_t ac, const std::string &name)
  - Return value of an integer scalar AC variable.
- float MHA\_AC::get\_var\_float (algo\_comm\_t ac, const std::string &name)

  Return value of an floating point scalar AC variable.
- std::vector< float > MHA\_AC::get\_var\_vfloat (algo\_comm\_t ac, const std::string &name)

Return value of an floating point vector AC variable as standard vector of floats.

## 3.5.1 Detailed Description

Algorithms within one chain can share variables for communication with other algorithms.

This mechanism allows interaction between algorithms (i.e. separation of noise estimation and noise reduction algorithms, combination of dynamic compression and noise estimation). Through a set of simple C functions, algorithms can propagate variables of any type, even C++ classes, to other algorithms.

An algorithm communication handle (algo\_comm\_t (p. 194)) is passed at initialisation time to the constructor of each plugin class constructor (p. 690). This handle contains a reference handle, algo\_comm\_t::handle (p. 194), and a number of function pointers, algo\_comm\_t ::insert\_var (p. 194) etc.. An algorithm communication variable is an object of type comm\_← var\_t (p. 232).

For AC variables of numeric types, openMHA Plugins for conversion into parsable monitor variables, acmon, and storage into Matlab or text files, acsave, are available.

### 3.5.2 Function Documentation

Convert an AC variable into a spectrum.

This function reads an AC variable and tries to convert it into a valid spectrum. The Spectrum variable is granted to be valid only for one call of the processing function.

### **Parameters**

ac	AC handle
name	Name of the variable

#### **Returns**

Spectrum structure

Convert an AC variable into a waveform.

This function reads an AC variable and tries to convert it into a valid waveform. The waveform variable is granted to be valid only for one call of the processing function.

### **Parameters**

ac	AC handle
name	Name of the variable

## **Returns**

waveform structure

Return value of an integer scalar AC variable.

# **Parameters**

ac	AC handle	
name	Name of the variable	

### **Returns**

Variable value

Return value of an floating point scalar AC variable.

### **Parameters**

ac	AC handle
name	Name of the variable

# **Returns**

Variable value

Return value of an floating point vector AC variable as standard vector of floats.

# **Parameters**

ac	AC handle	
name	Name of the variable	


# **Returns**

Variable value

# 3.6 Error handling in the openMHA

Errors are reported to the user via the MHA\_Error (p. 413) exception.

Collaboration diagram for Error handling in the openMHA:

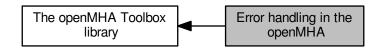

#### Classes

· class MHA Error

Error reporting exception class.

#### Macros

- #define MHA\_ErrorMsg(x) MHA\_Error(\_\_FILE\_\_,\_\_LINE\_\_,"%s",x)

  Throw an openMHA error with a text message.
- #define MHA\_assert(x) if(!(x)) throw MHA\_Error(\_\_FILE\_\_,\_\_LINE\_\_,"\"%s\" is false.",#x)

Assertion macro, which throws an **MHA\_Error** (p. 413).

• #define MHA\_assert\_equal(a, b) if( a != b ) throw MHA\_Error(\_\_FILE\_\_,\_\_LINE\_\_ ,"\"%s == %s\" is false (%s = %g, %s = %g).",#a,#b,#a,(double)(a),#b,(double)(b))

Equality assertion macro, which throws an MHA\_Error (p. 413) with the values.

## **Functions**

• void **mha\_debug** (const char \*fmt,...)

Print an info message (stderr on Linux, OutputDebugString in Windows).

# 3.6.1 Detailed Description

Errors are reported to the user via the **MHA\_Error** (p. 413) exception.

3.6.2 Macro Definition Documentation

Throw an openMHA error with a text message.

### **Parameters**

```
x Text message.
```

```
3.6.2.2 #define MHA_assert(
```

```
x ) if(!(x)) throw MHA_Error(__FILE__,__LINE__,"\"%s\" is false.",#x)
```

Assertion macro, which throws an MHA\_Error (p. 413).

#### **Parameters**

```
x Boolean expression which should be true.
```

3.6.2.3 #define MHA\_assert\_equal(

```
a,
b ) if( a != b ) throw MHA_Error(__FILE__,__LINE__,"\"%s == %s\" is false (%s = %g, %s = %g).",#a,#b,#a,(double)(a),#b,(double)(b))
```

Equality assertion macro, which throws an MHA\_Error (p. 413) with the values.

### **Parameters**

```
a Numeric expression which can be converted to double (for printing).b Numeric expression which should be equal to a
```

#### 3.6.3 Function Documentation

```
3.6.3.1 void mha_debug ( const char * \textit{fmt}, ... )
```

Print an info message (stderr on Linux, OutputDebugString in Windows).

# 3.7 The openMHA configuration language

openMHA Plugins that should use the openMHA configuration language for their configuration have to be implemented in C++ and need to include **mha\_parser.hh** (p. 965).

openMHA Plugins that should use the openMHA configuration language for their configuration have to be implemented in C++ and need to include **mha\_parser.hh** (p. 965).

All required classes and functions for parser access are declared in the namespace MH← AParser (p. 104). The plugin class should be derived from the class MHAParser::parser\_t (p. 651) (or MHAPlugin::plugin\_t (p. 690)), which symbolises a sub-parser node in the open← MHA script hierarchy. Variables of many types can be registered to the sub-parser node by calling the member function insert\_item (p. 653).


The openMHA Plugin template class **MHAPlugin::plugin\_t** (p. 690) together with the Plugin macro **MHAPLUGIN\_CALLBACKS** (p. 9) provide the callback mappings and correct inheritance. If your plugin is based on that template class, you simply have to use the insert\_item command to give access to your variables, everything else is managed internally.

A complete list of all openMHA script items is given in the description of the **MHAParser** (p. 104) namespace.

# 3.8 The openMHA Toolbox library

The openMHA toolbox is a static C++ library which makes it more comfortable to develop openMHA plugins.

Collaboration diagram for The openMHA Toolbox library:

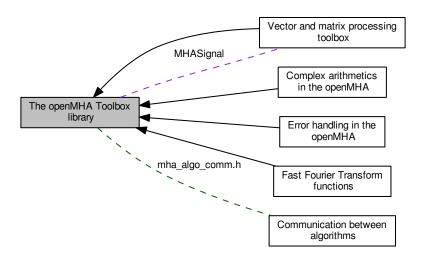

#### **Modules**

· Error handling in the openMHA

Errors are reported to the user via the MHA\_Error (p. 413) exception.

Vector and matrix processing toolbox

The vector and matrix processing toolbox consists of a number of classes defined in the namespace **MHASignal** (p. 114), and many functions and operators for use with the structures **mha\_wave\_t** (p. 462) and **mha\_spec\_t** (p. 432).

- · Complex arithmetics in the openMHA
- · Fast Fourier Transform functions

### Files

file mha\_algo\_comm.h

Header file for Algorithm Communication.

· file mha filter.hh

Header file for IIR filter classes.

file mha\_signal.hh

Header file for audio signal handling and processing classes.

• file mha tablelookup.hh

Header file for table lookup classes.

### Namespaces

# MHAOvlFilter

Namespace for overlapping FFT based filter bank classes and functions.

### MHAFilter

Namespace for IIR and FIR filter classes.

# MHAParser

Name space for the openMHA-Parser configuration language.

# MHASignal

Namespace for audio signal handling and processing classes.

# MHATableLookup

Namespace for table lookup classes.

# 3.8.1 Detailed Description

The openMHA toolbox is a static C++ library which makes it more comfortable to develop openMHA plugins.

It contains the openMHA script language classes.

# 3.9 Vector and matrix processing toolbox

The vector and matrix processing toolbox consists of a number of classes defined in the namespace **MHASignal** (p. 114), and many functions and operators for use with the structures **mha**← **\_wave\_t** (p. 462) and **mha\_spec\_t** (p. 432).

Collaboration diagram for Vector and matrix processing toolbox:



### **Namespaces**

MHASignal

Namespace for audio signal handling and processing classes.

MHAWindow

Collection of Window types.

#### **Classes**

struct mha\_wave\_t

Waveform signal structure.

struct mha\_spec\_t

Spectrum signal structure.

struct mha\_audio\_descriptor\_t

Description of an audio fragment (planned as a replacement of mhaconfig\_t (p. 470)).

struct mha\_audio\_t

An audio fragment in the openMHA (planned as a replacement of **mha\_wave\_t** (p. 462) and **mha\_spec\_t** (p. 432)).

class MHASignal::spectrum t

a signal processing class for spectral data (based on mha\_spec\_t (p. 432))

class MHASignal::waveform t

signal processing class for waveform data (based on mha\_wave\_t (p. 462))

class MHASignal::doublebuffer t

Double-buffering class.

class MHASignal::hilbert\_t

Hilbert transformation of a waveform segment.

class MHASignal::minphase\_t

Minimal phase function.

class MHASignal::uint\_vector\_t

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

class MHASignal::matrix\_t

n-dimensional matrix with real or complex floating point values.

class MHAParser::window t

MHA configuration interface for a window function generator.

class MHASignal::delay\_wave\_t

Delayline containing wave fragments.

• class MHASignal::async\_rmslevel\_t

Class for asynchronous level metering.

# **Typedefs**

typedef float mha\_real\_t
 openMHA type for real numbers

#### **Functions**

- mha\_wave\_t range (mha\_wave\_t s, unsigned int k0, unsigned int len)

  Return a time interval from a waveform chunk.
- mha\_spec\_t channels (mha\_spec\_t s, unsigned int ch\_start, unsigned int nch)

  Return a channel interval from a spectrum.
- void MHASignal::for\_each (mha\_wave\_t \*s, mha\_real\_t(\*fun)(mha\_real\_t))
   Apply a function to each element of a mha\_wave\_t (p. 462).
- mha\_real\_t MHASignal::lin2db (mha\_real\_t x)

Conversion from linear scale to dB (no SPL reference)

mha\_real\_t MHASignal::db2lin (mha\_real\_t x)

Conversion from dB scale to linear (no SPL reference)

mha\_real\_t MHASignal::pa2dbspl (mha\_real\_t x)

Conversion from linear Pascal scale to dB SPL.

- mha\_real\_t MHASignal::pa22dbspl (mha\_real\_t x, mha\_real\_t eps=1e-20f)

  Conversion from squared Pascal scale to dB SPL.
- mha\_real\_t MHASignal::dbspl2pa (mha\_real\_t x)

Conversion from dB SPL to linear Pascal scale.

- mha\_real\_t MHASignal::smp2sec (mha\_real\_t n, mha\_real\_t srate)
   conversion from samples to seconds
- mha\_real\_t MHASignal::sec2smp (mha\_real\_t sec, mha\_real\_t srate)
   conversion from seconds to samples
- mha\_real\_t MHASignal::bin2freq (mha\_real\_t bin, unsigned fftlen, mha\_real\_t srate)
   conversion from fft bin index to frequency
- mha\_real\_t MHASignal::freq2bin (mha\_real\_t freq, unsigned fftlen, mha\_real\_t srate)
   conversion from frequency to fft bin index
- mha\_real\_t MHASignal::smp2rad (mha\_real\_t samples, unsigned bin, unsigned fftlen) conversion from delay in samples to phase shift

mha\_real\_t MHASignal::rad2smp (mha\_real\_t phase\_shift, unsigned bin, unsigned fftlen)

conversion from phase shift to delay in samples

template < class elem\_type >
 std::vector < elem\_type > MHASignal::dupvec (std::vector < elem\_type > vec, unsigned n)

Duplicate last vector element to match desired size.

template<class elem\_type >

std::vector< elem\_type > MHASignal::dupvec\_chk (std::vector< elem\_type > vec, unsigned n)

Duplicate last vector element to match desired size, check for dimension.

bool equal\_dim (const mha\_wave\_t &a, const mha\_wave\_t &b)

Test for equal dimension of waveform structures.

• bool equal dim (const mha wave t &a, const mhaconfig t &b)

Test for match of waveform dimension with mhaconfig structure.

• bool equal\_dim (const mha\_spec\_t &a, const mha\_spec\_t &b)

Test for equal dimension of spectrum structures.

bool equal\_dim (const mha\_spec\_t &a, const mhaconfig\_t &b)

Test for match of spectrum dimension with mhaconfig structure.

bool equal\_dim (const mha\_wave\_t &a, const mha\_spec\_t &b)

Test for equal dimension of waveform/spectrum structures.

bool equal\_dim (const mha\_spec\_t &a, const mha\_wave\_t &b)

Test for equal dimension of waveform/spectrum structures.

void integrate (mha\_wave\_t &s)

Numeric integration of a signal vector (real values)

void integrate (mha\_spec\_t &s)

Numeric integration of a signal vector (complex values)

unsigned int size (const mha wave t &s)

Return size of a waveform structure.

unsigned int size (const mha\_spec\_t &s)

Return size of a spectrum structure.

unsigned int size (const mha\_wave\_t \*s)

Return size of a waveform structure.

unsigned int size (const mha spec t \*s)

Return size of a spectrum structure.

void clear (mha\_wave\_t &s)

Set all values of waveform to zero.

void clear (mha wave t \*s)

Set all values of waveform to zero.

void clear (mha spec t &s)

Set all values of spectrum to zero.

void clear (mha\_spec\_t \*s)

Set all values of spectrum to zero.

void assign (mha wave t self, mha real t val)

Set all values of waveform 'self' to 'val'.

void assign (mha\_wave\_t self, const mha\_wave\_t &val)

Set all values of waveform 'self' to 'val'.

void assign (mha\_spec\_t self, const mha\_spec\_t &val)

Set all values of spectrum 'self' to 'val'.

void timeshift (mha wave t &self, int shift)

Time shift of waveform chunk.

mha\_real\_t & value (mha\_wave\_t \*s, unsigned int fr, unsigned int ch)

Access an element of a waveform structure.

const mha\_real\_t & value (const mha\_wave\_t \*s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

• mha complex t & value (mha spec t \*s, unsigned int fr, unsigned int ch)

Access to an element of a spectrum.

- const **mha\_complex\_t** & **value** (const **mha\_spec\_t** \*s, unsigned int fr, unsigned int ch)

  Constant access to an element of a spectrum.
- mha\_real\_t & value (mha\_wave\_t &s, unsigned int fr, unsigned int ch)

Access to an element of a waveform structure.

const mha\_real\_t & value (const mha\_wave\_t &s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

mha\_complex\_t & value (mha\_spec\_t &s, unsigned int fr, unsigned int ch)

Access to an element of a spectrum.

- const **mha\_complex\_t** & **value** (const **mha\_spec\_t** &s, unsigned int fr, unsigned int ch)

  Constant access to an element of a spectrum.
- std::vector< float > std\_vector\_float (const mha\_wave\_t &)

Converts a mha\_wave\_t (p. 462) structure into a std::vector<float> (interleaved order).

• std::vector< std::vector< float >> std\_vector\_vector\_float (const mha\_wave\_t &)

Converts a **mha\_wave\_t** (p. 462) structure into a std::vector< std::vector< float> > (outer vector represents channels).

 std::vector< std::vector< mha\_complex\_t >> std\_vector\_vector\_complex (const mha\_spec\_t &)

Converts a **mha\_spec\_t** (p. 432) structure into a std::vector< std::vector< mha\_complex\_t> > (outer vector represents channels).

mha\_wave\_t & operator+= (mha\_wave\_t &, const mha\_real\_t &)

Addition operator.

mha\_wave\_t & operator+= (mha\_wave\_t &, const mha\_wave\_t &)

Addition operator.

• mha wave t & operator-= (mha wave t &, const mha wave t &)

Subtraction operator.

mha\_spec\_t & operator-= (mha\_spec\_t &, const mha\_spec\_t &)

Subtraction operator.

• mha\_wave\_t & operator\*= (mha\_wave\_t &, const mha\_real\_t &)

Element-wise multiplication operator.

• mha wave t & operator\*= (mha wave t &, const mha wave t &)

Element-wise multiplication operator.

mha\_spec\_t & operator\*= (mha\_spec\_t &, const mha\_real\_t &)

Element-wise multiplication operator.

mha\_spec\_t & operator\*= (mha\_spec\_t &, const mha\_wave\_t &)

Element-wise multiplication operator.

mha\_spec\_t & operator\*= (mha\_spec\_t &, const mha\_spec\_t &)

Element-wise multiplication operator.

mha\_spec\_t & operator/= (mha\_spec\_t &, const mha\_spec\_t &)

Element-wise division operator.

mha\_wave\_t & operator/= (mha\_wave\_t &, const mha\_wave\_t &)

Element-wise division operator.

• mha\_spec\_t & operator+= (mha\_spec\_t &, const mha\_spec\_t &)

Addition operator.

• mha spec t & operator+= (mha spec t &, const mha real t &)

Addition operator.

• mha wave t & operator = (mha wave t & self, const mha real t & arg)

Exponent operator.

void MHASignal::copy\_channel (mha\_spec\_t &self, const mha\_spec\_t &src, unsigned sch, unsigned dch)

Copy one channel of a source signal.

• void MHASignal::copy\_channel (mha\_wave\_t &self, const mha\_wave\_t &src, unsigned src\_channel, unsigned dest\_channel)

Copy one channel of a source signal.

mha\_real\_t MHASignal::rmslevel (const mha\_spec\_t &s, unsigned int channel, unsigned int fftlen)

Return RMS level of a spectrum channel.

mha\_real\_t MHASignal::colored\_intensity (const mha\_spec\_t &s, unsigned int channel, unsigned int fftlen, mha\_real\_t sqfreq\_response[])

Colored spectrum intensity.

• mha\_real\_t MHASignal::maxabs (const mha\_spec\_t &s, unsigned int channel)

Find maximal absolute value.

mha\_real\_t MHASignal::rmslevel (const mha\_wave\_t &s, unsigned int channel)

Return RMS level of a waveform channel.

mha\_real\_t MHASignal::maxabs (const mha\_wave\_t &s, unsigned int channel)

Find maximal absolute value.

mha\_real\_t MHASignal::maxabs (const mha\_wave\_t &s)

Find maximal absolute value.

mha\_real\_t MHASignal::max (const mha\_wave\_t &s)

Find maximal value.

• mha real t MHASignal::min (const mha wave t &s)

Find minimal value.

mha\_real\_t MHASignal::sumsqr\_channel (const mha\_wave\_t &s, unsigned int channel)

Calculate sum of squared values in one channel.

• mha\_real\_t MHASignal::sumsqr\_frame (const mha\_wave\_t &s, unsigned int frame)

Calculate sum over all channels of squared values.

void conjugate (mha spec t &self)

Replace (!) the value of this **mha\_spec\_t** (p. 432) with its conjugate.

# 3.9.1 Detailed Description

The vector and matrix processing toolbox consists of a number of classes defined in the namespace **MHASignal** (p. 114), and many functions and operators for use with the structures **mha**← **\_wave\_t** (p. 462) and **mha\_spec\_t** (p. 432).

- 3.9.2 Typedef Documentation
- 3.9.2.1 typedef float mha\_real\_t

openMHA type for real numbers

This type is expected to be allways the C-type 'float' (IEEE 754 single).

3.9.3 Function Documentation

Return a time interval from a waveform chunk.

A waveform chunk containing a time intervall of a larger waveform chunk is returned. The number of channels remains constant. The data of the output waveform structure points to the data of the input structure, i.e., write access to the output waveform chunk modifies the corresponding entries in the input chunk.

#### **Parameters**

s	Waveform structure
k0	Index of first value in output
len	Number of frames in output

### Returns

Waveform structure representing the sub-interval.

Return a channel interval from a spectrum.

### **Parameters**

s	Input spectrum
ch_start	Index of first channel in output
nch	Number of channels in output

### **Returns**

Spectrum structure representing the sub-interval.

Apply a function to each element of a **mha\_wave\_t** (p. 462).

#### **Parameters**

s	Pointer to a <b>mha_wave_t</b> (p. 462) structure	
fun	Function to be applied (one argument)	

Conversion from linear scale to dB (no SPL reference)

## **Parameters**

```
x Linear input.
```

Conversion from dB scale to linear (no SPL reference)

# **Parameters**

```
x dB input.
```

Conversion from linear Pascal scale to dB SPL.

### **Parameters**

```
x Linear input.
```

Conversion from squared Pascal scale to dB SPL.

### **Parameters**

X	squared pascal input
eps	minimum squared-pascal value

Conversion from dB SPL to linear Pascal scale.

#### **Parameters**

conversion from samples to seconds

### **Parameters**

n	number of samples
srate	sampling rate / Hz

conversion from seconds to samples

# **Parameters**

sec	time in seconds	
srate	sampling rate / Hz	

### Returns

number of samples, generally has non-zero fractional part

conversion from fft bin index to frequency

### **Parameters**

bin	index of fft bin, index 0 has dc
fftlen	FFT length
srate	sampling frequency / Hz

#### **Returns**

frequency of fft bin / Hz

conversion from frequency to fft bin index

## **Parameters**

freq	frequency / Hz
fftlen	FFT length
srate	sampling frequency / Hz

### Returns

0-based index of fft bin, generally has non-zero fractional part

conversion from delay in samples to phase shift

Compute phase shift that needs to be applied to fft spectrum to achieve the desired delay.

#### **Parameters**

samples	delay in samples. Positive delay: shift current signal to future.
bin	index of fft bin, index 0 has dc (index 0 and nyqvist bin cannot be delayed)
fftlen	FFT length

### Returns

The phase shift in radiant that needs to be applied to fft bin to achieve the desired delay. A positive delay requires a negative phase shift. If required phase shift is >pi or <-pi, then the desired delay cannot be applied in the fft domain with given parameters. Required phase shifts close to pi should not be used. If bin is 0 or nyqvist, returns 0 phase shift.

conversion from phase shift to delay in samples

Compute delay in samples that is achieved by a phase shift.

#### **Parameters**

phase_shift	phase shift in radiant
bin	index of fft bin, index 0 has dc (index 0 and nyqvist bin cannot be delayed)
fftlen	FFT length

## Returns

The delay in samples achieved by applying the phase shift. A negative phase shift causes a positive delay: shifts current signal to future.

```
3.9.3.15 template < class elem_type > std::vector < elem_type > MHASignal::dupvec ( std::vector < elem_type > vec, unsigned n)
```

Duplicate last vector element to match desired size.

#### **Parameters**

vec	Input vector.
n	Target number of elements.

### **Return values**

```
Resized vector.
```

```
3.9.3.16 template < class elem_type > std::vector < elem_type > MHASignal::dupvec_chk ( std::vector < elem_type > vec, unsigned n)
```

Duplicate last vector element to match desired size, check for dimension.

The input dimension can be either 1 or the target length.

#### **Parameters**

vec	Input vector.
n	Target number of elements.

#### **Return values**

```
Resized vector.
```

```
3.9.3.17 bool equal_dim (

const mha_wave_t & a,

const mha wave t & b ) [inline]
```

Test for equal dimension of waveform structures.

```
3.9.3.18 bool equal_dim (

const mha_wave_t & a,

const mhaconfig_t & b ) [inline]
```

Test for match of waveform dimension with mhaconfig structure.

```
3.9.3.19 bool equal_dim (

const mha_spec_t & a,

const mha spec_t & b) [inline]
```

Test for equal dimension of spectrum structures.

```
3.9.3.20 bool equal_dim (

const mha_spec_t & a,

const mhaconfig_t & b ) [inline]
```

Test for match of spectrum dimension with mhaconfig structure.

```
3.9.3.21 bool equal_dim (

const mha_wave_t & a,

const mha spec t & b ) [inline]
```

Test for equal dimension of waveform/spectrum structures.

### Warning

Waveform structures **mha\_wave\_t** (p. 462) use interleaved data order, while spectrum structures **mha\_spec\_t** (p. 432) use non-interleaved.

```
3.9.3.22 bool equal_dim (

const mha_spec_t & a,

const mha_wave_t & b ) [inline]
```

Test for equal dimension of waveform/spectrum structures.

# Warning

Waveform structures **mha\_wave\_t** (p. 462) use interleaved data order, while spectrum structures **mha\_spec\_t** (p. 432) use non-interleaved.

```
3.9.3.23 void integrate (
mha_wave_t & s )
```

Numeric integration of a signal vector (real values)

## **Parameters**

```
s Input signal vector
```

```
3.9.3.24 void integrate (
mha_spec_t & s )
```

Numeric integration of a signal vector (complex values)

### **Parameters**

```
s Input signal vector
```

```
3.9.3.25 unsigned int size (

const mha wave t & s ) [inline]
```

Return size of a waveform structure.

```
3.9.3.26 unsigned int size (
                    const mha_spec_t & s ) [inline]
Return size of a spectrum structure.
3.9.3.27 unsigned int size (
                    const mha_wave_t * s ) [inline]
Return size of a waveform structure.
3.9.3.28 unsigned int size (
                     const mha_spec_t * s ) [inline]
Return size of a spectrum structure.
3.9.3.29 void clear (
                     mha_wave_t & s ) [inline]
Set all values of waveform to zero.
3.9.3.30 void clear (
                     mha_wave_t * s ) [inline]
Set all values of waveform to zero.
3.9.3.31 void clear (
                     mha_spec_t & s ) [inline]
Set all values of spectrum to zero.
3.9.3.32 void clear (
                     mha_spec_t * s ) [inline]
Set all values of spectrum to zero.
3.9.3.33 void assign (
                     mha wave t self,
                     mha real t val ) [inline]
```

Set all values of waveform 'self' to 'val'.

# **Parameters**

self	Waveform to be modified.
val	Value to be assigned to all entries of waveform.

```
3.9.3.34 void assign (

mha_wave_t self,

const mha_wave_t & val )
```

Set all values of waveform 'self' to 'val'.

### **Parameters**

self	Waveform to be modified.
val	Source waveform structure.

```
3.9.3.35 void assign (

mha_spec_t self,

const mha_spec_t & val )
```

Set all values of spectrum 'self' to 'val'.

### **Parameters**

self	Spectrum to be modified.
val	Source spectrum.

```
3.9.3.36 void timeshift (

mha_wave_t & self,

int shift )
```

Time shift of waveform chunk.

Shifted areas are filled with zeros.

### **Parameters**

self	Waveform chunk to be shifted
shift	Shift amount, positive values shift to later times

Access an element of a waveform structure.

### **Parameters**

s	Waveform structure
fr	Frame number
ch	Channel number

### Returns

Reference to element

Constant access to an element of a waveform structure.

### **Parameters**

s	Waveform structure
fr	Frame number
ch	Channel number

#### Returns

Reference to element

Access to an element of a spectrum.

### **Parameters**

s	Spectrum structure
fr	Bin number
ch	Channel number

## Returns

Reference to element

Constant access to an element of a spectrum.

# **Parameters**

s	Spectrum structure
fr	Bin number
ch	Channel number

### **Returns**

Reference to element

Access to an element of a waveform structure.

### **Parameters**

s	Waveform structure
fr	Frame number
ch	Channel number

# **Returns**

Reference to element

Constant access to an element of a waveform structure.

# **Parameters**

s	Waveform structure
fr	Frame number
ch	Channel number

### **Returns**

Reference to element

Access to an element of a spectrum.

#### **Parameters**

s	Spectrum structure
fr	Bin number
ch	Channel number

#### **Returns**

Reference to element

Constant access to an element of a spectrum.

### **Parameters**

s	Spectrum structure
fr	Bin number
ch	Channel number

#### Returns

Reference to element

Converts a **mha\_wave\_t** (p. 462) structure into a std::vector<float> (interleaved order).

# Warning

This function is not real-time safe. Do not use in signal processing thread.

Converts a **mha\_wave\_t** (p. 462) structure into a std::vector< std::vector<float> > (outer vector represents channels).

### Warning

This function is not real-time safe. Do not use in signal processing thread.

Converts a **mha\_spec\_t** (p. 432) structure into a std::vector< std::vector<mha\_complex\_t>> (outer vector represents channels).

## Warning

This function is not real-time safe. Do not use in signal processing thread.

Addition operator.

Addition operator.

Subtraction operator.

Subtraction operator.

```
3.9.3.52 mha_wave_t& operator*= (
                    mha_wave_t &,
                    const mha real t & )
Element-wise multiplication operator.
3.9.3.53 mha_wave_t& operator*= (
                    mha wave t&,
                    const mha wave t & )
Element-wise multiplication operator.
3.9.3.54 mha spec t& operator*= (
                    mha spec t&,
                    const mha real t & )
Element-wise multiplication operator.
3.9.3.55 mha_spec_t& operator*= (
                    mha_spec_t &,
                    const mha_wave_t & )
Element-wise multiplication operator.
3.9.3.56 mha_spec_t& operator*= (
                    mha_spec_t &,
                    const mha spec t & )
Element-wise multiplication operator.
3.9.3.57 mha_spec_t& operator/= (
                    mha_spec_t &,
                    const mha_spec_t & )
Element-wise division operator.
3.9.3.58 mha_wave_t& operator/= (
                    mha_wave_t &,
                    const mha_wave_t & )
Element-wise division operator.
3.9.3.59 mha spec t& operator+= (
                    mha_spec_t &,
                    const mha_spec_t & )
```

Addition operator.

Addition operator.

Exponent operator.

# Warning

This overwrites the xor operator!

Copy one channel of a source signal.

# **Parameters**

self	Destination.
src	Source
sch	Source channel number
dch	Destination channel number

Copy one channel of a source signal.

#### **Parameters**

self	Destination.
src	Source
src_channel	Source channel number
dest channel	Destination channel number

Return RMS level of a spectrum channel.

#### **Parameters**

S	Input spectrum
channel	Channel number to be tested
fftlen	FFT length (to correctly count the level of the Nyquist bin)

### **Returns**

RMS level in Pa

Colored spectrum intensity.

computes the squared sum of the spectrum after filtering with the frequency response

#### **Parameters**

S	Input spectrum
channel	Channel number to be tested
fftlen	FFT length (to correctly count the level of the Nyquist bin)
sqfreq_response	A squared weighting factor for every fft bin.

# **Returns**

sum of squares. Root of this is the colored level in Pa

Find maximal absolute value.

# **Parameters**

S	Input signal
channel	Channel to be tested

# **Returns**

maximum absolute value

Return RMS level of a waveform channel.

# **Parameters**

s	Input waveform signal
channel	Channel number to be tested

## **Returns**

RMS level in Pa

Find maximal absolute value.

# **Parameters**

s Input signal	
channel	Channel to be tested

# **Returns**

maximum absolute value

Find maximal absolute value.

# **Parameters**

```
s Input signal
```

# **Returns**

maximum absolute value

```
3.9.3.70 mha_real_t MHASignal::max (
const mha_wave_t & s )
```

Find maximal value.

**Parameters** 

```
s Input signal
```

#### **Returns**

maximum absolute value

```
3.9.3.71 mha_real_t MHASignal::min (
const mha_wave_t & s )
```

Find minimal value.

**Parameters** 

```
s Input signal
```

# **Returns**

maximum absolute value

Calculate sum of squared values in one channel.

s	Input signal
channel	Channel

**Returns** 

$$\sum x^2$$

Calculate sum over all channels of squared values.

# **Parameters**

s	s Input signal	
frame	Frame number	


**Returns** 

$$\sum x^2$$

Replace (!) the value of this **mha\_spec\_t** (p. 432) with its conjugate.

# 3.10 Complex arithmetics in the openMHA

Collaboration diagram for Complex arithmetics in the openMHA:

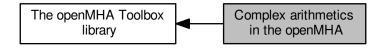

#### Classes

struct mha\_complex\_t

Type for complex floating point values.

#### **Functions**

- mha\_complex\_t & set (mha\_complex\_t &self, mha\_real\_t real, mha\_real\_t imag=0)

  Assign real and imaginary parts to a mha\_complex\_t (p. 400) variable.
- mha\_complex\_t mha\_complex (mha\_real\_t real, mha\_real\_t imag=0)
   Create a new mha\_complex\_t (p. 400) with specified real and imaginary parts.
- mha\_complex\_t & set (mha\_complex\_t &self, const std::complex < mha\_real\_t > &stdcomplex)

Assign a **mha\_complex\_t** (p. 400) variable from a std::complex.

- std::complex < mha\_real\_t > stdcomplex (const mha\_complex\_t &self)
   Create a std::complex from mha complex t (p. 400).
- mha\_complex\_t & expi (mha\_complex\_t &self, mha\_real\_t angle)

  replaces the value of the given mha\_complex\_t (p. 400) with exp(i\*b).
- double angle (const mha complex t &self)

Computes the angle of a complex number in the complex plane.

- mha\_complex\_t & operator+= (mha\_complex\_t &self, const mha\_complex\_t &other)

  Addition of two complex numbers, overwriting the first.
- mha\_complex\_t operator+ (const mha\_complex\_t &self, const mha\_complex\_
   t &other)

Addition of two complex numbers, result is a temporary object.

- mha\_complex\_t & operator+= (mha\_complex\_t &self, mha\_real\_t other\_real)

  Addition of a complex and a real number, overwriting the complex.
- mha\_complex\_t operator+ (const mha\_complex\_t &self, mha\_real\_t other\_real)

  Addition of a complex and a real number, result is a temporary object.
- mha\_complex\_t & operator-= (mha\_complex\_t &self, const mha\_complex\_t &other)

  Subtraction of two complex numbers, overwriting the first.

mha\_complex\_t operator- (const mha\_complex\_t &self, const mha\_complex\_
 t &other)

Subtraction of two complex numbers, result is a temporary object.

mha\_complex\_t & operator-= (mha\_complex\_t &self, mha\_real\_t other\_real)

Subtraction of a complex and a real number, overwriting the complex.

• mha\_complex\_t operator- (const mha\_complex\_t &self, mha\_real\_t other\_real)

Subtraction of a complex and a real number, result is a temporary object.

- mha\_complex\_t & operator\*= (mha\_complex\_t &self, const mha\_complex\_t &other)

  Multiplication of two complex numbers, overwriting the first.
- mha\_complex\_t operator\* (const mha\_complex\_t &self, const mha\_complex\_
   t &other)

Multiplication of two complex numbers, result is a temporary object.

• mha\_complex\_t & operator\*= (mha\_complex\_t &self, mha\_real\_t other\_real)

Multiplication of a complex and a real number, overwriting the complex.

- mha\_complex\_t & expi (mha\_complex\_t &self, mha\_real\_t angle, mha\_real\_t factor)
   replaces (!) the value of the given mha\_complex\_t (p. 400) with a \* exp(i\*b)
- mha\_complex\_t operator\* (const mha\_complex\_t &self, mha\_real\_t other\_real)

  Multiplication of a complex and a real number, result is a temporary object.
- mha\_real\_t abs2 (const mha\_complex\_t &self)

Compute the square of the absolute value of a complex value.

mha\_real\_t abs (const mha\_complex\_t &self)

Compute the absolute value of a complex value.

mha\_complex\_t & operator/= (mha\_complex\_t &self, mha\_real\_t other\_real)

Division of a complex and a real number, overwriting the complex.

• mha\_complex\_t operator/ (const mha\_complex\_t &self, mha\_real\_t other\_real)

Division of a complex and a real number, result is a temporary object.

 mha\_complex\_t & safe\_div (mha\_complex\_t &self, const mha\_complex\_t &other, mha\_real\_t eps, mha\_real\_t eps2)

Safe division of two complex numbers, overwriting the first.

- mha\_complex\_t & operator/= (mha\_complex\_t &self, const mha\_complex\_t &other)

  Division of two complex numbers, overwriting the first.
- mha\_complex\_t operator/ (const mha\_complex\_t &self, const mha\_complex\_← t &other)

Division of two complex numbers, result is a temporary object.

• mha complex t operator- (const mha complex t &self)

Unary minus on a complex results in a negative temporary object.

• bool operator== (const mha\_complex\_t &x, const mha\_complex\_t &y)

Compare two complex numbers for equality.

• bool operator!= (const mha\_complex\_t &x, const mha\_complex\_t &y)

Compare two complex numbers for inequality.

void conjugate (mha\_complex\_t &self)

Replace (!) the value of this **mha** complex t (p. 400) with its conjugate.

mha\_complex\_t \_conjugate (const mha\_complex\_t &self)

Compute the cojugate of this complex value.

void reciprocal (mha\_complex\_t &self)

Replace the value of this complex with its reciprocal.

mha\_complex\_t \_reciprocal (const mha\_complex\_t &self)

compute the reciprocal of this complex value.

void normalize (mha\_complex\_t &self)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle).

void normalize (mha\_complex\_t &self, mha\_real\_t margin)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle), with a safety margin.

bool almost (const mha\_complex\_t &self, const mha\_complex\_t &other, mha\_real\_t times\_epsilon=1e2)

Compare two complex numbers for equality except for a small relative error.

bool operator< (const mha\_complex\_t &x, const mha\_complex\_t &y)</li>

Compares the absolute values of two complex numbers.

# 3.10.1 Detailed Description

#### 3.10.2 Function Documentation

Assign real and imaginary parts to a **mha\_complex\_t** (p. 400) variable.

#### **Parameters**

self	The <b>mha_complex_t</b> (p. 400) variable whose value is about to change.
real	The new real part.
imag	The new imaginary part.

#### Returns

A reference to the changed variable.

Create a new **mha** complex t (p. 400) with specified real and imaginary parts.

real	The real part.
imag	The imaginary part.

# Returns

The new value.

Assign a **mha\_complex\_t** (p. 400) variable from a std::complex.

#### **Parameters**

self	The <b>mha_complex_t</b> (p. 400) variable whose value is about to change.
stdcomplex	The new complex value.

# Returns

A reference to the changed variable.

Create a std::complex from **mha\_complex\_t** (p. 400).

replaces the value of the given **mha\_complex\_t** (p. 400) with exp(i\*b).

# **Parameters**

self	The <b>mha_complex_t</b> (p. 400) variable whose value is about to change.
angle	The angle in the complex plane [rad].

#### **Returns**

A reference to the changed variable.

```
3.10.2.6 double angle ( const mha_complex_t & self ) [inline]
```

Computes the angle of a complex number in the complex plane.

# **Parameters**

self The complex number whose angle is needed.

#### **Returns**

The angle of a complex number in the complex plane.

Addition of two complex numbers, overwriting the first.

Addition of two complex numbers, result is a temporary object.

Addition of a complex and a real number, overwriting the complex.

Addition of a complex and a real number, result is a temporary object.

Subtraction of two complex numbers, overwriting the first.

Subtraction of two complex numbers, result is a temporary object.

Subtraction of a complex and a real number, overwriting the complex.

```
3.10.2.14 mha_complex_t operator-(
const mha_complex_t & self,
mha_real_t other_real) [inline]
```

Subtraction of a complex and a real number, result is a temporary object.

Multiplication of two complex numbers, overwriting the first.

Multiplication of two complex numbers, result is a temporary object.

Multiplication of a complex and a real number, overwriting the complex.

replaces (!) the value of the given **mha\_complex\_t** (p. 400) with a \* exp(i\*b)

self	The <b>mha_complex_t</b> (p. 400) variable whose value is about to change.
angle	The imaginary exponent.
factor	The absolute value of the result.

#### **Returns**

A reference to the changed variable.

```
3.10.2.19 mha_complex_t operator* (

const mha_complex_t & self,

mha_real_t other_real ) [inline]
```

Multiplication of a complex and a real number, result is a temporary object.

```
3.10.2.20 mha_real_t abs2 (
const mha_complex_t & self ) [inline]
```

Compute the square of the absolute value of a complex value.

#### Returns

The square of the absolute value of self.

```
3.10.2.21 mha_real_t abs (

const mha complex t & self ) [inline]
```

Compute the absolute value of a complex value.

# **Returns**

The absolute value of self.

Division of a complex and a real number, overwriting the complex.

```
3.10.2.23 mha_complex_t operator/ (

const mha_complex_t & self,

mha real t other real ) [inline]
```

Division of a complex and a real number, result is a temporary object.

Safe division of two complex numbers, overwriting the first.

If abs(divisor) < eps, then divisor is replaced by eps. eps2 = eps\*eps.

```
3.10.2.25 mha_complex_t& operator/= (
                     mha_complex_t & self,
                     const mha complex t & other ) [inline]
Division of two complex numbers, overwriting the first.
3.10.2.26 mha_complex_t operator/ (
                     const mha complex t & self,
                     const mha complex t & other ) [inline]
Division of two complex numbers, result is a temporary object.
3.10.2.27 mha_complex_t operator- (
                     const mha_complex_t & self ) [inline]
Unary minus on a complex results in a negative temporary object.
3.10.2.28 bool operator== (
                     const mha_complex_t & x,
                     const mha_complex_t & y ) [inline]
Compare two complex numbers for equality.
3.10.2.29 bool operator!= (
                     const mha_complex_t & x,
                     const mha_complex_t & y ) [inline]
Compare two complex numbers for inequality.
3.10.2.30 void conjugate (
                     mha_complex_t & self ) [inline]
Replace (!) the value of this mha_complex_t (p. 400) with its conjugate.
3.10.2.31 mha_complex_t _conjugate (
                     const mha_complex_t & self ) [inline]
```

**Returns** 

A temporary object holding the conjugate value.

Compute the cojugate of this complex value.

Replace the value of this complex with its reciprocal.

compute the reciprocal of this complex value.

#### **Returns**

A temporary object holding the reciprocal value.

```
3.10.2.34 void normalize (

mha_complex_t & self ) [inline]
```

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle).

```
3.10.2.35 void normalize (

mha_complex_t & self,

mha_real_t margin ) [inline]
```

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle), with a safety margin.

```
3.10.2.36 bool almost (

const mha_complex_t & self,

const mha_complex_t & other,

mha_real_t times_epsilon = 1e2 ) [inline]
```

Compare two complex numbers for equality except for a small relative error.

# **Parameters**

self	The first complex number.
other	The second complex number.
times_epsilon	Permitted relative error is this number multiplied with the machine accuracy for this Floating point format (std::numeric_limits <mha_real_t>::epsilon)</mha_real_t>


## Returns

true if the relative difference is below times\_epsilon \* std::numeric\_limits<mha\_real\_t> $\leftarrow$  ::epsilon

Compares the absolute values of two complex numbers.

# 3.11 Fast Fourier Transform functions

Collaboration diagram for Fast Fourier Transform functions:

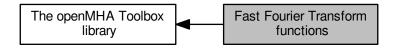

# **Typedefs**

typedef void \* mha\_fft\_t
 Handle for an FFT object.

#### **Functions**

mha\_fft\_t mha\_fft\_new (unsigned int n)

Create a new FFT handle.

void mha\_fft\_free (mha\_fft\_t h)

Destroy an FFT handle.

- void mha\_fft\_wave2spec (mha\_fft\_t h, const mha\_wave\_t \*in, mha\_spec\_t \*out)

  Tranform waveform segment into spectrum.
- void mha\_fft\_wave2spec (mha\_fft\_t h, const mha\_wave\_t \*in, mha\_spec\_t \*out, bool swaps)

Tranform waveform segment into spectrum.

- void mha\_fft\_spec2wave (mha\_fft\_t h, const mha\_spec\_t \*in, mha\_wave\_t \*out)

  Tranform spectrum into waveform segment.
- void mha\_fft\_spec2wave (mha\_fft\_t h, const mha\_spec\_t \*in, mha\_wave\_t \*out, unsigned int offset)

Tranform spectrum into waveform segment.

- void mha\_fft\_forward (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (forward).
- void mha\_fft\_backward (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (backward).
- void mha\_fft\_forward\_scale (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (forward).
- void mha\_fft\_backward\_scale (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (backward).
- void mha\_fft\_wave2spec\_scale (mha\_fft\_t h, const mha\_wave\_t \*in, mha\_spec\_← t \*out)

Tranform waveform segment into spectrum.

void mha\_fft\_spec2wave\_scale (mha\_fft\_t h, const mha\_spec\_t \*in, mha\_wave\_←
t \*out)

Tranform spectrum into waveform segment.

- 3.11.1 Detailed Description
- 3.11.2 Typedef Documentation
- 3.11.2.1 typedef void\* mha\_fft\_t

Handle for an FFT object.

This FFT object is used by the functions mha\_fft\_wave2spec and mha\_fft\_spec2wave. The F← FT back-end is the FFTW library. The back-end is completely hidden, including external header files or linking external libraries is not required.

3.11.3 Function Documentation

Create a new FFT handle.

**Parameters** 

```
n FFT length.
```

Create a new FFT handle.

**Parameters** 

```
n FFT length
```

**Return values** 

Destroy an FFT handle.

**Parameters** 

```
h Handle to be destroyed.
```

Destroy an FFT handle.

# **Parameters**

_		
ĺ	h	FFT object to be removed

Tranform waveform segment into spectrum.

#### **Parameters**

h	FFT handle.
in	Input waveform segment.
out	Output spectrum.

Tranform waveform segment into spectrum.

#### **Parameters**

<ul><li>h FFT object handle</li><li>in pointer to input waveform signal</li></ul>		FFT object handle
		pointer to input waveform signal
	out	pointer to output spectrum signal (has to be allocated)

Tranform waveform segment into spectrum.

Like normal wave2spec, but swaps wave buffer halves before transforming if the swaps parameter is true.

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the '\_scale' methods instead.

h	FFT handle.	
in	Input waveform segment.	
out	Output spectrum.	
swaps	waps Function swaps the first and second half of the waveform buffer before the FFT transform when this parameter is set to true.	

Tranform spectrum into waveform segment.

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the 'scale' methods instead.

#### **Parameters**

h	FFT handle.	
in	Input spectrum.	
out	Output waveform segment.	

Tranform spectrum into waveform segment.

#### **Parameters**

h	FFT object handle	
in	pointer to input spectrum	
out	pointer to output waveform signal (has to be allocated)	

Tranform spectrum into waveform segment.

out may have fewer number of frames than needed for a complete iFFT. Only as many frames are written into out as fit, starting with offset offset of the complete iFFT.

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the 'scale' methods instead.

h	FFT handle.
in	Input spectrum.
out	Output waveform segment.
offset	Offset into iFFT wave buffer

Tranform spectrum into waveform segment.

Only part of the iFFT is tranferred into the out buffer.

Out may have fewer number of freames than needed for a complete iFFT. Only as many frames are written into out as fit, starting with offset offset of the complete iFFT.

#### **Parameters**

h	FFT object handle	
in	pointer to input spectrum	
out	pointer to output waveform signal (has to be allocated)	
offset	Offset into complete iFFT buffer.	

Complex to complex FFT (forward).

sIn and sOut need to have nfft bins (please note that **mha\_spec\_t** (p. 432) typically has nfft/2+1 bins for half-complex representation).

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the 'scale' methods instead.

## **Parameters**

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Complex to complex FFT (backward).

sln and sOut need to have nfft bins (please note that **mha\_spec\_t** (p. 432) typically has nfft/2+1 bins for half-complex representation).

Warning: These openMHA FFTs adopt a nonstandard scaling scheme in which the forward transform scales by 1/N and the backward does not scale. We would recommend using the '\_scale' methods instead.

## **Parameters**

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Complex to complex FFT (forward).

sIn and sOut need to have nfft bins (please note that **mha\_spec\_t** (p. 432) typically has nfft/2+1 bins for half-complex representation).

The \_scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

#### **Parameters**

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Complex to complex FFT (backward).

sIn and sOut need to have nfft bins (please note that **mha\_spec\_t** (p. 432) typically has nfft/2+1 bins for half-complex representation).

The \_scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

h	FFT handle.
sIn	Input spectrum.
sOut	Output spectrum.

Tranform waveform segment into spectrum.

The \_scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

# **Parameters**

h	FFT handle.
in	Input waveform segment.
out	Output spectrum.

Tranform spectrum into waveform segment.

The \_scale methods use standard DFT scaling: There is no scaling in the forward transformation, and 1/N scaling for the backward.

h	FFT handle.
in	Input spectrum.
out	Output waveform segment.

# 4 Namespace Documentation

# 4.1 ac2lsl Namespace Reference

All types for the **ac2IsI** (p. 77) plugins live in this namespace.

#### Classes

class ac2lsl\_t

Plugin class of ac2lsl (p. 77).

· class cfg\_t

Runtime configuration class of the ac2lsl (p. 77) plugin.

class save\_var\_base\_t

Interface for ac to Isl bridge variable.

class save\_var\_t

Implementation for all ac to Isl bridges except complex types.

class save\_var\_t< mha\_complex\_t >

Template specialization of the ac2lsl (p. 77) bridge to take care of complex numbers.

# 4.1.1 Detailed Description

All types for the **ac2IsI** (p. 77) plugins live in this namespace.

# 4.2 acmon Namespace Reference

Namespace for displaying ac variables as parser monitors.

#### **Classes**

class ac\_monitor\_t

A class for converting AC variables to Parser monitors of correct type.

class acmon\_t

# 4.2.1 Detailed Description

Namespace for displaying ac variables as parser monitors.

# 4.3 acsave Namespace Reference

#### Classes

- class acsave\_t
- class cfg t
- struct mat4head t
- class save\_var\_t

# 4.4 addsndfile Namespace Reference

#### Classes

- · class addsndfile if t
- · class level\_adapt\_t
- class resampled\_soundfile\_t

Reads sound from file and resamples it if necessary and wanted.

- class sndfile t
- class waveform\_proxy\_t

Class helps to specify which instance of MHASignal\_waveform\_t parent instance is meant in **resampled\_soundfile\_t** (p. 177).

# **Typedefs**

- typedef MHAPlugin::config\_t< level\_adapt\_t > level\_adaptor
- typedef MHAPlugin::plugin\_t< sndfile\_t > wave\_reader

## **Enumerations**

## **Functions**

- static unsigned resampled\_num\_frames (unsigned num\_source\_frames, float source
   —rate, float target\_rate, addsndfile\_resampling\_mode\_t resampling\_mode)
- 4.4.1 Typedef Documentation
- 4.4.1.1 typedef MHAPlugin::config\_t<level\_adapt\_t> addsndfile::level\_adaptor
- 4.4.1.2 typedef MHAPlugin::plugin\_t<sndfile\_t> addsndfile::wave\_reader
- 4.4.2 Enumeration Type Documentation
- 4.4.2.1 enum addsndfile::addsndfile\_resampling\_mode\_t

Specifies the resampling mode in **resampled\_soundfile\_t** (p. 177).

#### **Enumerator**

# DONT\_RESAMPLE\_PERMISSIVE

**DONT\_RESAMPLE\_STRICT** Do not resample, if the sample rate of the MHA differs from the sample rate of the sound file, raise an error.

DO\_RESAMPLE Resample.

## 4.4.3 Function Documentation

# 4.5 ADM Namespace Reference

#### Classes

class ADM

Adaptive differential microphone, working for speech frequency range.

class Delay

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

• class Linearphase\_FIR

An efficient linear-phase fir filter implementation.

#### **Functions**

• static double **subsampledelay\_coeff** (double samples, double f\_design, double fs=1.0) compute IIR coefficient for subsample delay

#### **Variables**

- const double **PI** = 3.14159265358979312
- const double **C** = 340
- const double DELAY\_FREQ = 2000
- const double **START\_BETA** = 0.5

#### 4.5.1 Function Documentation

compute IIR coefficient for subsample delay

samples	Constraint: 0.0 <= samples < 1.0; Amount of sub-sample delay	
	design frequency (subsample delay is accurate for this frequency)	
© 2005-2018 Hör Tach group Haledenburg		

#### **Returns**

IIR coefficient for subsample delay

#### 4.5.2 Variable Documentation

- 4.5.2.1 const double ADM::PI = 3.14159265358979312
- 4.5.2.2 const double ADM::C = 340
- 4.5.2.3 const double ADM::DELAY FREQ = 2000
- 4.5.2.4 const double ADM::START\_BETA = 0.5

# 4.6 AuditoryProfile Namespace Reference

Namespace for classes and functions around the auditory profile (e.g., audiogram handling)

#### Classes

· class fmap t

A class to store frequency dependent data (e.g., HTL and UCL).

class parser\_t

Class to make the auditory profile accessible through the parser interface.

class profile\_t

The Auditory Profile class.

# 4.6.1 Detailed Description

Namespace for classes and functions around the auditory profile (e.g., audiogram handling)

The auditory profile as defined by HearCom or BMBF Modellbasierte Hoergeraete is stored in the class **AuditoryProfile::profile\_t** (p. 212). Until a complete definition is available, only the currently needed elements are implemented.

# 4.7 coherence Namespace Reference

## **Classes**

- · class cohflt if t
- · class cohflt t
- class vars t

#### **Functions**

 void getcipd (mha\_complex\_t &c, mha\_real\_t &a, const mha\_complex\_t &xl, const mha\_complex\_t &xr)

#### 4.7.1 Function Documentation

```
4.7.1.1 void coherence::getcipd (

mha_complex_t & c,

mha_real_t & a,

const mha_complex_t & xl,

const mha_complex_t & xr ) [inline]
```

# 4.8 dc Namespace Reference

#### Classes

- · class dc\_if\_t
- class dc t
- class dc\_vars\_t
- class dc\_vars\_validator\_t
- · class wb inhib cfg t
- class wideband\_inhib\_vars\_t

# **Functions**

unsigned int get\_audiochannels (unsigned int totalchannels, std::string acname, algo
 \_comm\_t ac)

# 4.8.1 Function Documentation

# 4.9 dc\_simple Namespace Reference

# Classes

- · class dc if t
- class dc\_t
- class dc\_vars\_t
- class dc\_vars\_validator\_t
- class level\_smoother\_t

# **Typedefs**

- typedef MHAPlugin::plugin\_t< dc\_t > DC
- typedef MHAPlugin::config\_t< level\_smoother\_t > LEVEL

#### **Functions**

- void **test\_fail** (const std::vector< float > &v, unsigned int s, const std::string &name)
- std::vector< float > force\_resize (const std::vector< float > &v, unsigned int s, const std::string &name)
- mha\_real\_t not\_zero (mha\_real\_t x, const std::string &comment="")
- 4.9.1 Typedef Documentation
- 4.9.1.1 typedef MHAPlugin::plugin\_t<dc\_t> dc\_simple::DC
- 4.9.1.2 typedef MHAPlugin::config\_t<level\_smoother\_t> dc\_simple::LEVEL
- 4.9.2 Function Documentation
- 4.9.2.1 void dc\_simple::test\_fail ( const std::vector< float > & v, unsigned int s, const std::string & name)
- 4.9.2.2 std::vector<float> dc\_simple::force\_resize ( const std::vector< float > & v, unsigned int s, const std::string & name)
- 4.10 delay Namespace Reference

## Classes

- class interface\_t
- 4.11 delaysum Namespace Reference

This namespace contains the delaysum plugin.

#### **Classes**

class delaysum\_if\_t

Interface class for the delaysum plugin.

class delaysum\_t

Runtime configuration of the delaysum plugin.

# 4.11.1 Detailed Description

This namespace contains the delaysum plugin.

# 4.12 DynComp Namespace Reference

dynamic compression related classes and functions

#### Classes

class dc\_afterburn\_rt\_t

Real-time class for after burn effect.

class dc\_afterburn\_t

Afterburn class, to be defined as a member of compressors.

class dc\_afterburn\_vars\_t

Variables for dc\_afterburn\_t (p. 280) class.

class gaintable t

Gain table class.

# **Functions**

mha\_real\_t interp1 (const std::vector< mha\_real\_t > &vX, const std::vector< mha\_←
real\_t > &vY, mha\_real\_t X)

One-dimensional linear interpolation.

mha\_real\_t interp2 (const std::vector< mha\_real\_t > &vX, const std::vector< mha←
 \_real\_t > &vY, const std::vector< std::vector< mha\_real\_t >> &mZ, mha\_real\_t X,
 mha\_real\_t Y)

Linear interpolation in a two-dimensional field.

# 4.12.1 Detailed Description

dynamic compression related classes and functions

#### 4.12.2 Function Documentation

```
4.12.2.1 mha_real_t DynComp::interp1 ( const std::vector< mha_real_t > & vX, const std::vector< mha_real_t > & vY, mha_real_t X)
```

One-dimensional linear interpolation.

# **Parameters**

νX	Vector with input samples.	
νY	Vector with values at input samples.	
Χ	Input value to be interpolated.	

#### **Return values**

Interpolated	value $Y(X)$ at position $X$ .
--------------	--------------------------------

```
4.12.2.2 mha_real_t DynComp::interp2 (  const \ std::vector < mha\_real\_t > \& \ vX, \\ const \ std::vector < mha\_real\_t > \& \ vY, \\ const \ std::vector < std::vector < mha\_real\_t > & \ mZ, \\ mha\_real\_t \ X, \\ mha\_real\_t \ Y \ )
```

Linear interpolation in a two-dimensional field.

# **Parameters**

νX	Vector with input samples, first dimension.	
νY	Vector with input samples, second dimension.	
mΖ	Field with values at input samples.	
X	First dimension of input value to be interpolated.	
Y	Second dimension of input value to be interpolated.	

# **Return values**

```
Interpolated value Z(X,Y) at position X,Y.
```

4.13 fader\_wave Namespace Reference

# Classes

- class fader\_wave\_if\_t
- class level\_adapt\_t

# **Typedefs**

typedef MHAPlugin::plugin\_t< level\_adapt\_t > level\_adaptor

# 4.13.1 Typedef Documentation

4.13.1.1 typedef MHAPlugin::plugin\_t<level\_adapt\_t> fader\_wave::level\_adaptor

4.14 fftfbpow Namespace Reference

Namespace for the fftfbpow plugin.

#### Classes

class fftfbpow\_interface\_t
 Interface class for fftfbpow plugin.

class fftfbpow\_t

Run time configuration for the fftfbpow plugin.

# 4.14.1 Detailed Description

Namespace for the fftfbpow plugin.

# 4.15 fftfilterbank Namespace Reference

# Classes

- class fftfb\_interface\_t
- class fftfb\_plug\_t

# 4.16 gain Namespace Reference

# Classes

- class gain\_if\_t
- class scaler t

# 4.17 matrixmixer Namespace Reference

#### **Classes**

- class cfg\_t
- class matmix\_t

# 4.18 MHA\_AC Namespace Reference

Functions and classes for Algorithm Communication (AC) support.

#### Classes

- class ac2matrix\_helper\_t
- class ac2matrix t

Copy AC variable to a matrix.

class acspace2matrix t

Copy all or a subset of all numeric AC variables into an array of matrixes.

· class double t

Insert a double precision floating point variable into the AC space.

class float t

Insert a float point variable into the AC space.

• class int t

Insert a integer variable into the AC space.

class spectrum\_t

Insert a MHASignal::spectrum\_t (p. 762) class into the AC space.

- · class stat t
- · class waveform t

Insert a MHASignal::waveform\_t (p. 774) class into the AC space.

## **Functions**

- mha\_spec\_t get\_var\_spectrum (algo\_comm\_t ac, const std::string &name)

  Convert an AC variable into a spectrum.
- mha\_wave\_t get\_var\_waveform (algo\_comm\_t ac, const std::string &name)
   Convert an AC variable into a waveform.
- int **get\_var\_int** (**algo\_comm\_t** ac, const std::string &name)

Return value of an integer scalar AC variable.

float get\_var\_float (algo\_comm\_t ac, const std::string &name)

Return value of an floating point scalar AC variable.

std::vector< float > get\_var\_vfloat (algo\_comm\_t ac, const std::string &name)
 Return value of an floating point vector AC variable as standard vector of floats.

# 4.18.1 Detailed Description

Functions and classes for Algorithm Communication (AC) support.

# 4.19 mha\_error\_helpers Namespace Reference

# **Functions**

- unsigned digits (unsigned n)
   Compute number of decimal digits required to represent an unsigned integer.
- unsigned **snprintf\_required\_length** (const char \*formatstring,...)

  snprintf\_required\_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.

#### 4.19.1 Function Documentation

```
4.19.1.1 unsigned mha_error_helpers::digits ( unsigned n )
```

Compute number of decimal digits required to represent an unsigned integer.

#### **Parameters**

n The unsigned integer that we want to know the number of required decimal digits for. return The number of decimal digits in n.

```
4.19.1.2 unsigned mha_error_helpers::snprintf_required_length ( const char * formatstring, ... )
```

snprintf\_required\_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.

#### **Parameters**

۱	( t - t	The format string with standard printf formatstring
۱	tormatstring	The format string with standard brintt formatstring
- 1	ioimatetimg	The format caming with clarical a printe formationing

## **Returns**

the number of bytes required by printf without the terminating nul

# 4.20 MHA\_TCP Namespace Reference

A Namespace for TCP helper classes.

#### **Classes**

class Async\_Notify

Portable Multiplexable cross-thread notification.

class Client

A portable class for a tcp client connections.

class Connection

Connection (p. 437) handles Communication between client and server, is used on both sides.

class Event\_Watcher

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

- struct OS EVENT TYPE
- class Server
- class sock\_init\_t
- class Sockaccept Event
- class Sockread Event

Watch socket for incoming data.

- class Sockwrite\_Event
- · class Thread

A very simple class for portable threads.

- class Timeout\_Event
- · class Timeout Watcher

OS-independent event watcher with internal fixed-end-time timeout.

class Wakeup\_Event

A base class for asynchronous wakeup events.

# **Typedefs**

typedef int SOCKET

#### **Functions**

std::string STRERROR (int err)

Portable conversion from error number to error string.

std::string HSTRERROR (int err)

Portable conversion from hostname error number to error string.

int **N\_ERRNO** ()

Portable access to last network error number.

• int **H\_ERRNO** ()

Portable access to last hostname error number.

int **G\_ERRNO** ()

Portable access to last non-network error number.

• double dtime ()

Time access function for system's high resolution time, retrieve current time as double.

• double **dtime** (const struct timeval &tv)

Time access function for unix' high resolution time, converts struct timeval to double.

struct timeval stime (double d)

Time access function for unix' high resolution time, converts time from double to struct timeval.

**Variables** 

```
    class MHA_TCP::sock_init_t sock_initializer
```

```
4.20.1 Detailed Description
```

A Namespace for TCP helper classes.

```
4.20.2 Typedef Documentation
```

```
4.20.2.1 typedef int MHA_TCP::SOCKET
```

4.20.3 Function Documentation

```
4.20.3.1 std::string MHA_TCP::STRERROR ( int err )
```

Portable conversion from error number to error string.

```
4.20.3.2 std::string MHA_TCP::HSTRERROR ( int err )
```

Portable conversion from hostname error number to error string.

```
4.20.3.3 int MHA_TCP::N_ERRNO ( )
```

Portable access to last network error number.

```
4.20.3.4 int MHA_TCP::H_ERRNO ( )
```

Portable access to last hostname error number.

```
4.20.3.5 int MHA_TCP::G_ERRNO ( )
```

Portable access to last non-network error number.

```
4.20.3.6 double MHA_TCP::dtime ( )
```

Time access function for system's high resolution time, retrieve current time as double.

```
4.20.3.7 double MHA_TCP::dtime ( const struct timeval & tv )
```

Time access function for unix' high resolution time, converts struct timeval to double.

# 4.20.3.8 struct timeval MHA\_TCP::stime ( double *d* )

Time access function for unix' high resolution time, converts time from double to struct timeval.

- 4.20.4 Variable Documentation
- 4.20.4.1 class MHA\_TCP::sock\_init\_t MHA\_TCP::sock\_initializer
- 4.21 mhachain Namespace Reference

#### Classes

- class chain base t
- class mhachain\_t
- · class plugs\_t
- 4.22 MHAEvents Namespace Reference

Collection of event handling classes.

# **Classes**

- class connector\_base\_t
- class connector\_t
- · class emitter t

Class for emitting openMHA events.

class patchbay\_t

Patchbay which connects any event emitter with any member function of the parameter class.

4.22.1 Detailed Description

Collection of event handling classes.

4.23 MHAFilter Namespace Reference

Namespace for IIR and FIR filter classes.

#### **Classes**

- class adapt\_filter\_param\_t
- class adapt\_filter\_state\_t
- class adapt\_filter\_t

Adaptive filter.

class blockprocessing\_polyphase\_resampling\_t

A class that does polyphase resampling and takes into account block processing.

· class complex bandpass t

Complex bandpass filter.

class diff\_t

Differentiator class (non-normalized)

class fftfilter\_t

FFT based FIR filter implementation.

class fftfilterbank t

FFT based FIR filterbank implementation.

· class filter t

Generic IIR filter class.

class gamma\_flt\_t

Class for gammatone filter.

- class iir\_filter\_state\_t
- class iir\_filter\_t

IIR filter class wrapper for integration into parser structure.

class iir\_ord1\_real\_t

First order recursive filter.

class o1\_ar\_filter\_t

First order attack-release lowpass filter.

class o1flt\_lowpass\_t

First order low pass filter.

class o1flt\_maxtrack\_t

First order maximum tracker.

class o1flt\_mintrack\_t

First order minimum tracker.

class partitioned\_convolution\_t

A filter class for partitioned convolution.

class polyphase\_resampling\_t

A class that performs polyphase resampling.

class resampling\_filter\_t

Hann shaped low pass filter for resampling.

class smoothspec t

Smooth spectral gains, create a windowed impulse response.

- class thirdoctave\_analyzer\_t
- struct transfer\_function\_t

a structure containing a source channel number, a target channel number, and an impulse response.

• struct transfer\_matrix\_t

A sparse matrix of transfer function partitionss.

#### **Functions**

- void make\_friendly\_number (mha\_real\_t &x)
- void make\_friendly\_number (mha\_complex\_t &x)
- void make\_friendly\_number (double &x)
- void o1\_lp\_coeffs (const mha\_real\_t tau, const mha\_real\_t fs, mha\_real\_t &c1, mha
   \_real\_t &c2)

Set first order filter coefficients from time constant and sampling rate.

- void **butter\_stop\_ord1** (double \*A, double \*B, double f1, double f2, double fs) Setup a first order butterworth band stop filter.
- MHASignal::waveform\_t \* spec2fir (const mha\_spec\_t \*spec, const unsigned int fftlen, const MHAWindow::base\_t &window, const bool minphase)

Create a windowed impulse response/FIR filter coefficients from a spectrum.

- unsigned **gcd** (unsigned a, unsigned b)
  - greatest common divisor
- double **sinc** (double x)

sin(x)/x function, coping with x=0.

• std::pair< unsigned, unsigned > **resampling\_factors** (float source\_sampling\_rate, float target\_sampling\_rate, float factor=1.0f)

Computes rational resampling factor from two sampling rates.

# 4.23.1 Detailed Description

Namespace for IIR and FIR filter classes.

```
4.23.2 Function Documentation
```

Set first order filter coefficients from time constant and sampling rate.

## **Parameters**

tau	Time constant
fs	Sampling rate

## Return values

c1	Recursive filter coefficient	
c2	Non-recursive filter coefficient	

Setup a first order butterworth band stop filter.

This function calculates the filter coefficients of a first order butterworth band stop filter.

# **Return values**

Α	recursive filter coefficients
В	non recursive filter coefficients

# **Parameters**

f1	lower frequency	
f2	upper frequency	
fs sample frequence		

Create a windowed impulse response/FIR filter coefficients from a spectrum.

## **Parameters**

spec	Input spectrum
fftlen	FFT length of spectrum
window	Window shape (with length, e.g. initialized with MHAWindow::hanning(54)).

## **Parameters**

minphase	Flag, true if original phase should be discarded and replaced by a minimal	
	phase function.	

greatest common divisor

```
4.23.2.8 double MHAFilter::sinc ( double x )
```

 $\sin(x)/x$  function, coping with x=0.

This is the historical sinc function, not the normalized sinc function.

Computes rational resampling factor from two sampling rates.

The function will fail if either sampling\_rate \* factor is not an integer

## **Parameters**

source_sampling_rate	The original sampling rate
target_sampling_rate	The desired sampling rate
factor	A helper factor to use for non-integer sampling rates

## **Returns**

a pair that contains first the upsampling factor and second the downsampling factor required for the specified resampling.

# **Exceptions**

<b>MHA_Error</b> (p. <b>413</b> )	if no rational resampling factor can be found.

# 4.24 MHAIOJack Namespace Reference

JACK IO.

## **Classes**

class io\_jack\_t
 Main class for JACK IO.

## 4.24.1 Detailed Description

JACK IO.

# 4.25 MHAIOJackdb Namespace Reference

## Classes

class io\_jack\_t
 Main class for JACK IO.

# 4.26 MHAIOPortAudio Namespace Reference

## **Classes**

- class device\_info\_t
- class io\_portaudio\_t

Main class for Portaudio sound IO.

## **Functions**

• static std::string parserFriendlyName (const std::string &in)

## 4.26.1 Function Documentation

4.26.1.1 static std::string MHAIOPortAudio::parserFriendlyName (
const std::string & in ) [static]

# 4.27 MHAJack Namespace Reference

Classes and functions for openMHA and JACK interaction.

#### **Classes**

class client\_avg\_t

Generic JACK client for averaging a system response across time.

class client noncont t

Generic client for synchronous playback and recording of waveform fragments.

· class client t

Generic asynchronous JACK client.

class port\_t

Class for one channel/port.

#### **Functions**

void io (mha\_wave\_t \*s\_out, mha\_wave\_t \*s\_in, const std::string &name, const std
 ::vector< std::string > &p\_out, const std::vector< std::string > &p\_in, float \*srate=NULL,
 unsigned int \*fragsize=NULL, bool use\_jack\_transport=false)

Functional form of generic client for synchronous playback and recording of waveform fragments.

std::vector< unsigned int > get\_port\_capture\_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< int > get\_port\_capture\_latency\_int (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< unsigned int > get\_port\_playback\_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< int > get\_port\_playback\_latency\_int (const std::vector< std::string > &ports)

## 4.27.1 Detailed Description

Classes and functions for openMHA and JACK interaction.

## 4.27.2 Function Documentation

```
4.27.2.1 void MHAJack::io (

mha_wave_t * s_out,

mha_wave_t * s_in,

const std::string & name,

const std::vector < std::string > & p_out,

const std::vector < std::string > & p_in,

float * srate = NULL,

unsigned int * fragsize = NULL,

bool use_jack_transport = false )
```

Functional form of generic client for synchronous playback and recording of waveform fragments.

```
4.27.2.2 std::vector< unsigned int > MHAJack::get_port_capture_latency ( const std::vector< std::string > & ports )
```

Return the JACK port latency of ports.

#### **Parameters**

ports	Ports to be tested
-------	--------------------

#### **Returns**

Latency vector (one entry for each port)

Return the JACK port latency of ports.

# **Parameters**

```
ports Ports to be tested
```

## **Returns**

Latency vector (one entry for each port)

Return the JACK port latency of ports.

#### **Parameters**

```
ports | Ports to be tested
```

# **Returns**

Latency vector (one entry for each port)

# 4.28 MHAKernel Namespace Reference

## Classes

- class algo\_comm\_class\_t
- class comm\_var\_map\_t

#### **Functions**

algo\_comm\_class\_t \* algo\_comm\_safe\_cast (void \*)

## 4.28.1 Function Documentation

```
4.28.1.1 MHAKernel::algo_comm_class_t * MHAKernel::algo_comm_safe_cast ( void * h )
```

# 4.29 MHAMultiSrc Namespace Reference

Collection of classes for selecting audio chunks from multiple sources.

#### **Classes**

· class base\_t

Base class for source selection.

- class channel\_t
- class channels t
- class spectrum\_t
- · class waveform\_t

## 4.29.1 Detailed Description

Collection of classes for selecting audio chunks from multiple sources.

# 4.30 MHAOvIFilter Namespace Reference

Namespace for overlapping FFT based filter bank classes and functions.

# **Namespaces**

- barkscale
- FreqScaleFun

Transform functions from linear scale in Hz to new frequency scales.

ShapeFun

Shape functions for overlapping filters.

#### **Classes**

- class band\_descriptor\_t
- class fftfb\_ac\_info\_t
- class fftfb\_t

FFT based overlapping filter bank.

class fftfb\_vars\_t

Set of configuration variables for FFT-based overlapping filters.

- class fscale\_bw\_t
- · class fscale t
- class fspacing\_t

Class for frequency spacing, used by filterbank shape generator class.

- class overlap\_save\_filterbank\_analytic\_t
- class overlap\_save\_filterbank\_t

A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb\_t** (p. 581).

class scale\_var\_t

## **Typedefs**

typedef mha\_real\_t( scale\_fun\_t) (mha\_real\_t)

# 4.30.1 Detailed Description

Namespace for overlapping FFT based filter bank classes and functions.

- 4.30.2 Typedef Documentation
- 4.30.2.1 typedef mha\_real\_t( MHAOvlFilter::scale\_fun\_t) (mha\_real\_t)
- 4.31 MHAOvIFilter::barkscale Namespace Reference

## Classes

- · class bark2hz t
- · class hz2bark t

## **Variables**

- mha\_real\_t vfreq [BARKSCALE\_ENTRIES]
- mha\_real\_t vbark [BARKSCALE\_ENTRIES]

#### 4.31.1 Variable Documentation

- 4.31.1.1 mha\_real\_t MHAOvlFilter::barkscale::vfreq
- 4.31.1.2 mha\_real\_t MHAOvIFilter::barkscale::vbark
- 4.32 MHAOvlFilter::FreqScaleFun Namespace Reference

Transform functions from linear scale in Hz to new frequency scales.

## **Functions**

- mha real t hz2hz (mha real t x)
  - Dummy scale transformation Hz to Hz.
- mha\_real\_t hz2khz (mha\_real\_t x)
- mha\_real\_t hz2octave (mha\_real\_t x)
- mha\_real\_t hz2third\_octave (mha\_real\_t x)
- mha\_real\_t hz2bark (mha\_real\_t x)

Transformation to bark scale.

- mha\_real\_t hz2bark\_analytic (mha\_real\_t)
- mha real t hz2erb (mha real t)
- mha\_real\_t hz2erb\_glasberg1990 (mha\_real\_t)
- mha\_real\_t hz2log (mha\_real\_t x)

Third octave frequency scale.

mha\_real\_t inv\_scale (mha\_real\_t, mha\_real\_t(\*)(mha\_real\_t))

## 4.32.1 Detailed Description

Transform functions from linear scale in Hz to new frequency scales.

# 4.32.2 Function Documentation

```
4.32.2.1 mha_real_t MHAOvlFilter::FreqScaleFun::hz2hz ( mha_real_t x )
```

Dummy scale transformation Hz to Hz.

This function implements a dummy scale transformation (linear frequency scale).

# **Parameters**

x Input frequency in Hz

**Returns** 

Frequency in Hz

Transformation to bark scale.

This function implements a critical band rate (bark) scale.

## **Parameters**

```
x | Input frequency in Hz
```

# Returns

Critical band rate in Bark

Third octave frequency scale.

This function implements a third octave scale. Frequencies below 16 Hz are mapped to 16 Hz.

## **Parameters**

x Frequency in Hz

## **Returns**

Third octaves relative to 1000 Hz

4.33 MHAOvlFilter::ShapeFun Namespace Reference

Shape functions for overlapping filters.

## **Functions**

- mha\_real\_t rect (mha\_real\_t x)
  - Filter shape function for rectangular filters.
- mha\_real\_t linear (mha\_real\_t x)

Filter shape function for sawtooth filters.

mha\_real\_t hann (mha\_real\_t x)

Filter shape function for hanning shaped filters.

- mha\_real\_t expflt (mha\_real\_t)
- mha\_real\_t gauss (mha\_real\_t)

## 4.33.1 Detailed Description

Shape functions for overlapping filters.

4.33.2 Function Documentation

```
4.33.2.1 mha_real_t MHAOvlFilter::ShapeFun::rect ( mha_real_t x )
```

Filter shape function for rectangular filters.

This function creates rectangular filter shapes. The edge is exactly half way between two center frequencies (on a given scale).

## **Parameters**

```
x Input value in the range [-1,1].
```

## **Returns**

Weigth function in the range [0,1]

Filter shape function for sawtooth filters.

This function creates sawtooth filter shapes. They rise linearly form 0 to 1 in the interval from the lower neighbor center frequency to the band center frequency and from 1 to 0 in the interval from the band center frequency to the upper neighbour band center frequency. Linear means linear on a given frequency scale.

## **Parameters**

```
x Input value in the range [-1,1].
```

## **Returns**

Weigth function in the range [0,1]

```
4.33.2.3 mha_real_t MHAOvIFilter::ShapeFun::hann ( mha_real_t x )
```

Filter shape function for hanning shaped filters.

This function creates hanning window shaped filters.

## **Parameters**

```
x Input value in the range [-1,1].
```

## **Returns**

Weigth function in the range [0,1]

# 4.34 MHAParser Namespace Reference

Name space for the openMHA-Parser configuration language.

## **Namespaces**

StrCnv

String converter namespace.

## Classes

class base\_t

Base class for all parser items.

class bool\_mon\_t

Monitor with string value.

class bool\_t

Variable with a boolean value ("yes"/"no")

- class c\_ifc\_parser\_t
- · class commit t

Parser variable with event-emission functionality.

class complex\_mon\_t

Monitor with complex value.

class complex\_t

Variable with complex value.

- class entry\_t
- class expression\_t
- class float\_mon\_t

Monitor with float value.

class float\_t

Variable with float value.

class int mon t

Monitor variable with int value.

· class int t

Variable with integer value.

class keyword\_list\_t

Keyword list class.

class kw\_t

Variable with keyword list value.

class mcomplex\_mon\_t

Matrix of complex numbers monitor.

class mcomplex\_t

Matrix variable with complex value.

class mfloat\_mon\_t

Matrix of floats monitor.

· class mfloat\_t

Matrix variable with float value.

- · class mhaconfig mon t
- class mhapluginloader\_t

Class to create a plugin loader in a parser, including the load logic.

class monitor\_t

Base class for monitors and variable nodes.

class parser t

Parser node class.

class range\_var\_t

Base class for all variables with a numeric value range.

class string\_mon\_t

Monitor with string value.

class string\_t

Variable with a string value.

· class variable t

Base class for variable nodes.

class vcomplex\_mon\_t

Monitor with vector of complex values.

class vcomplex\_t

Vector variable with complex value.

class vfloat\_mon\_t

Vector of floats monitor.

class vfloat\_t

Vector variable with float value.

class vint\_mon\_t

Vector of ints monitor.

class vint\_t

Variable with vector<int> value.

class vstring\_mon\_t

Vector of monitors with string value.

class vstring\_t

Vector variable with string values.

class window\_t

MHA configuration interface for a window function generator.

# **Typedefs**

- typedef std::string(base\_t::\* opact\_t) (expression\_t &)
- typedef std::string(base\_t::\* query\_t) (const std::string &)
- typedef std::map< std::string, opact\_t > opact\_map\_t
- typedef std::map< std::string, query\_t > query\_map\_t
- typedef std::list< entry\_t > entry\_map\_t
- typedef int(\* c\_parse\_cmd\_t) (void \*, const char \*, char \*, unsigned int)
- typedef const char \*(\* c\_parse\_err\_t) (void \*, int)

#### **Functions**

- int get precision ()
- std::string commentate (const std::string &s)
- void **trim** (std::string &s)
- std::string cfg\_dump (base\_t \*, const std::string &)
- std::string cfg\_dump\_short (base\_t \*, const std::string &)
- std::string all\_dump (base\_t \*, const std::string &)
- std::string mon\_dump (base\_t \*, const std::string &)
- std::string all\_ids (base\_t \*, const std::string &, const std::string &="")
- void **strreplace** (std::string &, const std::string &, const std::string &) string replace function
- void envreplace (std::string &s)

## 4.34.1 Detailed Description

Name space for the openMHA-Parser configuration language.

This namespace contains all classes which are needed for the implementation of the open 
MHA configuration language. For details on the script language itself please see section **The**openMHA configuration language (p. 33).

## 4.34.2 List of valid MHAParser items

- Sub-parser: parser\_t (p. 651)
- Variables:

```
Numeric variables: int_t (p. 629), vint_t (p. 675), float_t (p. 624), vfloat_t (p. 671), mfloat_t (p. 642)

Other variables: string_t (p. 661), vstring_t (p. 679), kw_t (p. 634), bool_t (p. 610)
```

Monitors:

```
Numeric monitors: int_mon_t (p. 627), vint_mon_t (p. 673), float_mon_t (p. 623), vfloat_mon_t (p. 669)
mfloat_mon_t (p. 641)
mcomplex_mon_t (p. 637)
Other monitors: bool_mon_t (p. 609), string_mon_t (p. 659), vstring_mon_t (p. 677)
```

Members can be inserted into the configuration namespace by using MHAParser::insert\_item() or the **insert\_member()** (p. 969) macro.

```
4.34.3 Typedef Documentation
4.34.3.1 typedef std::string(base_t::* MHAParser::opact_t) (expression t &)
4.34.3.2
         typedef std::string(base_t::* MHAParser::query_t) (const std::string &)
4.34.3.3 typedef std::map<std::string,opact_t> MHAParser::opact_map_t
4.34.3.4 typedef std::map<std::string,query_t> MHAParser::query_map_t
4.34.3.5 typedef std::list<entry_t> MHAParser::entry_map_t
4.34.3.6 typedef int(* MHAParser::c_parse_cmd_t) (void *, const char *, char *, unsigned int)
4.34.3.7 typedef const char*(* MHAParser::c_parse_err_t) (void *, int)
4.34.4 Function Documentation
4.34.4.1 int MHAParser::get_precision ( )
4.34.4.2 std::string MHAParser::commentate (
                      const std::string & s )
4.34.4.3 void MHAParser::trim (
                      std::string & s )
4.34.4.4 std::string MHAParser::cfg_dump (
                      base_t * p,
                      const std::string & pref )
4.34.4.5 std::string MHAParser::cfg_dump_short (
                      base_t * p,
                      const std::string & pref )
4.34.4.6 std::string MHAParser::all_dump (
                      base t*p,
                      const std::string & pref )
4.34.4.7 std::string MHAParser::mon_dump (
                      base t*p,
                      const std::string & pref )
4.34.4.8 std::string MHAParser::all_ids (
                      base_t * p,
                      const std::string & pref,
                      const std::string & id = " " )
4.34.4.9 void MHAParser::strreplace (
                      std::string & s,
                      const std::string & arg,
                      const std::string & rep )
```

string replace function

## **Parameters**

s	target string
arg	search pattern
rep	replace pattern

4.34.4.10 void MHAParser::envreplace ( std::string & s )

4.35 MHAParser::StrCnv Namespace Reference

String converter namespace.

## **Functions**

• int **num\_brackets** (const std::string &s)

Return number of brackets at beginning and end of string.

- int **bracket balance** (const std::string &s)
- void str2val (const std::string &, bool &)

Convert from string.

void str2val (const std::string &, float &)

Convert from string.

void str2val (const std::string &, mha\_complex\_t &)

Convert from string.

• void **str2val** (const std::string &, int &)

Convert from string.

void str2val (const std::string &, keyword\_list\_t &)

Convert from string.

void str2val (const std::string &, std::string &)

Convert from string.

template<class arg\_t >

void **str2val** (const std::string &s, std::vector< arg\_t > &val)

Converter for vector types.

• template<>

void **str2val**< **mha\_real\_t** > (const std::string &s, std::vector< **mha\_real\_t** > &v)

Converter for vector<mha real t> with Matlab-style expansion.

template<class arg\_t >

void **str2val** (const std::string &s, std::vector< std::vector< arg t >> &val)

Converter for matrix types.

• std::string val2str (const bool &)

Convert to string.

std::string val2str (const float &)

Convert to string.

std::string val2str (const mha\_complex\_t &)

Convert to string.

std::string val2str (const int &)

Convert to string.

std::string val2str (const keyword\_list\_t &)

Convert to string.

• std::string val2str (const std::string &)

Convert to string.

std::string val2str (const std::vector< float > &)

Convert to string.

std::string val2str (const std::vector< mha\_complex\_t > &)

Convert to string.

std::string val2str (const std::vector< int > &)

Convert to string.

std::string val2str (const std::vector< std::string > &)

Convert to string.

std::string val2str (const std::vector< std::vector< float >> &)

Convert to string.

std::string val2str (const std::vector< std::vector< mha\_complex\_t >> &)

Convert to string.

## 4.35.1 Detailed Description

String converter namespace.

The functions defined in this namespace manage the conversions from C++ variables to strings and back. It was tried to keep a matlab compatible string format for vectors and vectors of vectors.

## 4.35.2 Function Documentation

```
4.35.2.1 int MHAParser::StrCnv::num_brackets ( const std::string & s )
```

Return number of brackets at beginning and end of string.

#### **Parameters**

s String

## Returns

Number of brackets, or -1 for empty string

```
4.35.2.2 int MHAParser::StrCnv::bracket_balance (
                      const std::string & s )
4.35.2.3 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                      bool & v)
Convert from string.
4.35.2.4 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                      float & v)
Convert from string.
4.35.2.5 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                       mha_complex_t & v )
Convert from string.
4.35.2.6 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                      int & v)
Convert from string.
4.35.2.7 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                       MHAParser::keyword_list_t & v )
Convert from string.
4.35.2.8 void MHAParser::StrCnv::str2val (
                      const std::string & s,
                      std::string & v )
Convert from string.
4.35.2.9 template < class arg_t > void MHAParser::StrCnv::str2val (
                      const std::string & s,
                       std::vector< arg_t > & val )
Converter for vector types.
```

```
4.35.2.10 template<> void MHAParser::StrCnv::str2val< mha_real_t > (
                       const std::string & s,
                        std::vector < mha real t > \& v)
Converter for vector<mha real t> with Matlab-style expansion.
4.35.2.11 template < class arg_t > void MHAParser::StrCnv::str2val (
                       const std::string & s,
                       std::vector< std::vector< arg_t >> & val )
Converter for matrix types.
4.35.2.12 std::string MHAParser::StrCnv::val2str (
                       const bool & v )
Convert to string.
4.35.2.13 std::string MHAParser::StrCnv::val2str (
                       const float & v )
Convert to string.
4.35.2.14 std::string MHAParser::StrCnv::val2str (
                       const mha_complex_t & v )
Convert to string.
4.35.2.15 std::string MHAParser::StrCnv::val2str (
                       const int & v )
Convert to string.
4.35.2.16 std::string MHAParser::StrCnv::val2str (
                       const keyword_list_t & v )
Convert to string.
4.35.2.17 std::string MHAParser::StrCnv::val2str (
                       const std::string & v )
Convert to string.
4.35.2.18 std::string MHAParser::StrCnv::val2str (
                       const std::vector< float > & \nu )
Convert to string.
```

# 4.36 MHAPlugin Namespace Reference

Namespace for openMHA plugin class templates and thread-safe runtime configurations.

## Classes

- class cfg chain t
- class config\_t

Template class for thread safe configuration.

class plugin\_t

The template class for C++ openMHA plugins.

## 4.36.1 Detailed Description

Namespace for openMHA plugin class templates and thread-safe runtime configurations.

# 4.37 MHAPlugin\_Resampling Namespace Reference

#### Classes

- · class resampling if t
- class resampling\_t

# 4.38 MHAPlugin\_Split Namespace Reference

## **Classes**

· class domain handler t

Handles domain-specific partial input and output signal.

class dummy\_threads\_t

Dummy specification of a thread platform: This class implements everything in a single thread.

class posix\_threads\_t

Posix threads specification of thread platform.

• class split\_t

Implements split plugin.

class splitted\_part\_t

The **splitted\_part\_t** (p. 713) instance manages the plugin that performs processing on the reduced set of channels.

class thread\_platform\_t

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

class uni\_processor\_t

An interface to a class that sports a process method with no parameters and no return value.

## **Enumerations**

## 4.38.1 Detailed Description

A namespace for the split plugin. Helps testability and documentation.

4.38.2 Enumeration Type Documentation

4.38.2.1 anonymous enum

Invalid thread priority.

#### **Enumerator**

# INVALID\_THREAD\_PRIORITY

# 4.39 MHASignal Namespace Reference

Namespace for audio signal handling and processing classes.

## Classes

class async\_rmslevel\_t

Class for asynchronous level metering.

- class delay\_spec\_t
- · class delay\_t

Class to realize a simple delay of waveform streams.

class delay\_wave\_t

Delayline containing wave fragments.

class doublebuffer\_t

Double-buffering class.

- class fft\_t
- class hilbert fftw t
- · class hilbert\_t

Hilbert transformation of a waveform segment.

· class loop wavefragment t

Copy a fixed waveform fragment to a series of waveform fragments of other size.

class matrix t

n-dimensional matrix with real or complex floating point values.

· class minphase t

Minimal phase function.

· class quantizer\_t

Simple simulation of fixpoint quantization.

class ringbuffer\_t

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

· class schroeder t

Schroeder tone complex class.

class spectrum\_t

a signal processing class for spectral data (based on **mha\_spec\_t** (p. 432))

- class stat\_t
- class subsample\_delay\_t

implements subsample delay in spectral domain.

· class uint vector t

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

· class waveform t

signal processing class for waveform data (based on mha\_wave\_t (p. 462))

#### **Functions**

 $\bullet \ \ \mathsf{void} \ \textbf{for\_each} \ (\textbf{mha\_wave\_t} \ *s, \ \textbf{mha\_real\_t}(*\mathsf{fun})(\textbf{mha\_real\_t})) \\$ 

Apply a function to each element of a **mha\_wave\_t** (p. 462).

mha\_real\_t lin2db (mha\_real\_t x)

Conversion from linear scale to dB (no SPL reference)

mha\_real\_t db2lin (mha\_real\_t x)

Conversion from dB scale to linear (no SPL reference)

mha\_real\_t pa2dbspl (mha\_real\_t x)

Conversion from linear Pascal scale to dB SPL.

mha\_real\_t pa22dbspl (mha\_real\_t x, mha\_real\_t eps=1e-20f)

Conversion from squared Pascal scale to dB SPL.

mha\_real\_t dbspl2pa (mha\_real\_t x)

Conversion from dB SPL to linear Pascal scale.

mha\_real\_t smp2sec (mha\_real\_t n, mha\_real\_t srate)

conversion from samples to seconds

mha\_real\_t sec2smp (mha\_real\_t sec, mha\_real\_t srate)

conversion from seconds to samples

mha\_real\_t bin2freq (mha\_real\_t bin, unsigned fftlen, mha\_real\_t srate)
 conversion from fft bin index to frequency

mha\_real\_t freq2bin (mha\_real\_t freq, unsigned fftlen, mha\_real\_t srate)
 conversion from frequency to fft bin index

mha\_real\_t smp2rad (mha\_real\_t samples, unsigned bin, unsigned fftlen)
 conversion from delay in samples to phase shift

mha\_real\_t rad2smp (mha\_real\_t phase\_shift, unsigned bin, unsigned fftlen)
 conversion from phase shift to delay in samples

template<class elem\_type >

 $std:: vector < elem\_type > \textbf{dupvec} \; (std:: vector < elem\_type > vec, \; unsigned \; n)$ 

Duplicate last vector element to match desired size.

template < class elem\_type >

 $std:: vector < elem\_type > \textbf{dupvec\_chk} \; (std:: vector < elem\_type > vec, \; unsigned \; n) \\$ 

Duplicate last vector element to match desired size, check for dimension.

void copy\_channel (mha\_spec\_t &self, const mha\_spec\_t &src, unsigned sch, unsigned dch)

Copy one channel of a source signal.

 void copy\_channel (mha\_wave\_t &self, const mha\_wave\_t &src, unsigned src\_← channel, unsigned dest\_channel)

Copy one channel of a source signal.

- mha\_real\_t rmslevel (const mha\_spec\_t &s, unsigned int channel, unsigned int fftlen)

  Return RMS level of a spectrum channel.
- mha\_real\_t colored\_intensity (const mha\_spec\_t &s, unsigned int channel, unsigned int fftlen, mha\_real\_t sqfreq\_response[])

Colored spectrum intensity.

Find maximal absolute value.

-  $mha\_real\_t\ maxabs$  (const  $mha\_spec\_t\ \&s$ , unsigned int channel)

• mha\_real\_t rmslevel (const mha\_wave\_t &s, unsigned int channel)

Return RMS level of a waveform channel.

• mha real t maxabs (const mha wave t &s, unsigned int channel)

Find maximal absolute value.

mha\_real\_t maxabs (const mha\_wave\_t &s)

Find maximal absolute value.

• mha real t max (const mha wave t &s)

Find maximal value.

• mha real t min (const mha wave t &s)

Find minimal value.

mha\_real\_t sumsqr\_channel (const mha\_wave\_t &s, unsigned int channel)

Calculate sum of squared values in one channel.

mha\_real\_t sumsqr\_frame (const mha\_wave\_t &s, unsigned int frame)

Calculate sum over all channels of squared values.

- void scale (mha\_spec\_t \*dest, const mha\_wave\_t \*src)
- void limit (mha\_wave\_t &s, const mha\_real\_t &min, const mha\_real\_t &max)

Limit the singal in the waveform buffer to the range [min, max].

template<class elem\_type >

elem\_type kth\_smallest (elem\_type array[], unsigned n, unsigned k)

Fast search for the kth smallest element of an array.

template<class elem type >

elem\_type median (elem\_type array[], unsigned n)

Fast median search.

template<class elem\_type >

elem\_type **mean** (const std::vector< elem\_type > &data, elem\_type start\_val)

Calculate average of elements in a vector.

template < class elem\_type >

 $\mbox{std::vector} < \mbox{elem\_type} > \mbox{\bf quantile} \mbox{ (std::vector} < \mbox{elem\_type} > \mbox{data, const std::vector} < \mbox{elem\_type} > \mbox{\&p)}$ 

Calculate quantile of elements in a vector.

• void **saveas\_mat4** (const **mha\_spec\_t** &data, const std::string &varname, FILE \*fh)

Save a openMHA spectrum as a variable in a Matlab4 file.

• void **saveas\_mat4** (const **mha\_wave\_t** &data, const std::string &varname, FILE \*fh)

Save a openMHA waveform as a variable in a Matlab4 file.

void saveas\_mat4 (const std::vector< mha\_real\_t > &data, const std::string &varname,
 FILE \*fh)

Save a float vector as a variable in a Matlab4 file.

void copy\_permuted (mha\_wave\_t \*dest, const mha\_wave\_t \*src)

Copy contents of a waveform to a permuted waveform.

#### Variables

• unsigned long int signal counter = 0

Signal counter to produce signal ID strings.

## 4.39.1 Detailed Description

Namespace for audio signal handling and processing classes.

#### 4.39.2 Function Documentation

```
4.39.2.1 void MHASignal::scale (

mha_spec_t * dest,

const mha_wave_t * src )
```

```
4.39.2.2 void MHASignal::limit (

mha_wave_t & s,

const mha_real_t & min,

const mha_real_t & max )
```

Limit the singal in the waveform buffer to the range [min, max].

## **Parameters**

S	The signal to limit. The signal in this wave buffer is modified.		
min	lower limit		
max	upper limit		

```
4.39.2.3 template < class elem_type > elem_type MHASignal::kth_smallest ( elem_type array[\ ], unsigned n, unsigned k )
```

Fast search for the kth smallest element of an array.

The order of elements is altered, but not completely sorted. Using the algorithm from N. Wirth, published in "Algorithms + data structures = programs", Prentice-Hall, 1976

#### **Parameters**

```
array Element array
```

## **Postcondition**

The order of elements in the array is altered. array[k] then holds the result.

## **Parameters**

n number of elements in a	array
---------------------------	-------

Pre		

n >= 1

## **Parameters**

K The k'th smalles element is returned: k = 0 returns the minimum, k = (n-1)/2 returns the median, k=(n-1) returns the maximum

# Precondition

k < n

## **Returns**

The kth smallest array element

Fast median search.

The order of elements is altered, but not completely sorted.

# **Parameters**

array Element array

# **Postcondition**

The order of elements in the array is altered. array[(n-1)/2] then holds the median.

## **Parameters**

n number of elements in array

# Precondition

n >= 1

## **Returns**

The median of the array elements

Calculate average of elements in a vector.

#### **Parameters**

data	Input vector
start_val	Value for initialization of the return value before sum.

## **Returns**

The average of the vector elements

```
4.39.2.6 template < class elem_type > std::vector < elem_type > MHASignal::quantile ( std::vector < elem_type > data, const std::vector < elem_type > & p ) [inline]
```

Calculate quantile of elements in a vector.

## **Parameters**

data	Input vector
p	Vector of probability values.

## **Returns**

Vector of quantiles of input data, one entry for each probability value.

Save a openMHA spectrum as a variable in a Matlab4 file.

## **Parameters**

data	openMHA spectrum to be saved.
varname	Matlab variable name (Matlab4 limitations on maximal length are not checked).
fh	File handle to Matlab4 file.

Save a openMHA waveform as a variable in a Matlab4 file.

#### **Parameters**

data	openMHA waveform to be saved.
varname	Matlab variable name (Matlab4 limitations on maximal length are not checked).
fh	File handle to Matlab4 file.

Save a float vector as a variable in a Matlab4 file.

## **Parameters**

data	Float vector to be saved.
varname	Matlab variable name (Matlab4 limitations on maximal length are not checked).
fh	File handle to Matlab4 file.

Copy contents of a waveform to a permuted waveform.

## **Parameters**

dest	Destination waveform
src	Source waveform

The total size of src and dest must be the same, num\_frames and num\_channels must be exchanged in dest.

4.39.3 Variable Documentation

4.39.3.1 unsigned long int MHASignal::signal\_counter = 0

Signal counter to produce signal ID strings.

# 4.40 MHASndFile Namespace Reference

## Classes

- class sf t
- · class sf\_wave\_t

# 4.41 MHATableLookup Namespace Reference

Namespace for table lookup classes.

## **Classes**

• class linear\_table\_t

Class for interpolation with equidistant x values.

- class table\_t
- class xy\_table\_t

Class for interpolation with non-equidistant x values.

# 4.41.1 Detailed Description

Namespace for table lookup classes.

# 4.42 MHAWindow Namespace Reference

Collection of Window types.

## **Classes**

class bartlett\_t

Bartlett window.

class base\_t

Common base for window types.

· class blackman t

Blackman window.

class fun\_t

Generic window based on a generator function.

class hamming\_t

Hamming window.

class hanning\_t

von-Hann window

class rect\_t

Rectangular window.

class user t

User defined window.

## **Functions**

• float rect (float)

Rectangular window function.

float bartlett (float)

Bartlett window function.

float hanning (float)

Hanning window function.

float hamming (float)

Hamming window function.

• float blackman (float)

Blackman window function.

4.42.1 Detailed Description

Collection of Window types.

4.42.2 Function Documentation

4.42.2.1 float MHAWindow::rect ( float x )

Rectangular window function.

4.42.2.2 float MHAWindow::bartlett ( float x )

Bartlett window function.

4.42.2.3 float MHAWindow::hanning ( float x )

Hanning window function.

4.42.2.4 float MHAWindow::hamming ( float x )

Hamming window function.

4.42.2.5 float MHAWindow::blackman ( float x )

Blackman window function.

# 4.43 multibandcompressor Namespace Reference

## **Classes**

- · class fftfb\_plug\_t
- class interface\_t
- class plugin\_signals\_t

# 4.44 noisePowProposedScale Namespace Reference

## Classes

- · class interface\_t
- class noisePowProposed

# 4.45 overlapadd Namespace Reference

## Classes

- · class overlapadd if t
- class overlapadd\_t

# 4.46 plingploing Namespace Reference

All classes for the plingploing music generator live in this namespace.

# Classes

class if\_t

Plugin class of the plingploing music generator.

class plingploing\_t

Run-time configuration of the plingploing music generator.

## **Functions**

• double **drand** (double a, double b)

# 4.46.1 Detailed Description

All classes for the plingploing music generator live in this namespace.

#### 4.46.2 Function Documentation

```
4.46.2.1 double plingploing::drand ( double a, double b )
```

# 4.47 PluginLoader Namespace Reference

## Classes

- class config\_file\_splitter\_t
- class fourway\_processor\_t

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

class mhapluginloader\_t

## **Functions**

- const char \* mhastrdomain (mha\_domain\_t)
- void mhaconfig\_compare (const mhaconfig\_t &req, const mhaconfig\_t &avail, const std::string &pref="")

Compare two **mhaconfig\_t** (p. 470) structures, and report differences as an error.

# 4.47.1 Function Documentation

```
4.47.1.1 const char * PluginLoader::mhastrdomain ( mha_domain_t d )
```

Compare two **mhaconfig** t (p. 470) structures, and report differences as an error.

## **Parameters**

req	Expected <b>mhaconfig_t</b> (p. 470) structure
avail	Available <b>mhaconfig_t</b> (p. 470) structure
pref	Prefix for error messages

# 4.48 route Namespace Reference

## **Classes**

- class interface\_t
- · class process\_t
- 4.49 shadowfilter\_begin Namespace Reference

## Classes

- class cfg\_t
- class shadowfilter\_begin\_t
- 4.50 shadowfilter\_end Namespace Reference

## Classes


- class cfg\_t
- class shadowfilter\_end\_t
- 4.51 smoothgains\_bridge Namespace Reference

## Classes

- class overlapadd\_if\_t
- class smoothspec\_wrap\_t
- 5 Class Documentation
- 5.1 ac2lsl::ac2lsl\_t Class Reference

Plugin class of ac2lsl (p. 77).

Inheritance diagram for ac2lsl::ac2lsl\_t:

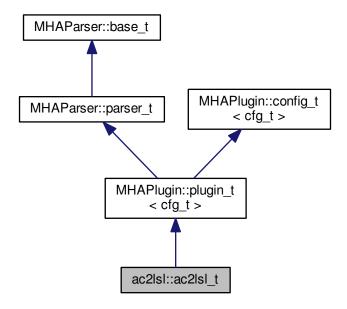

## **Public Member Functions**

- ac2lsl\_t (algo\_comm\_t iac, const char \*chain, const char \*algo)
- void prepare (mhaconfig\_t &)

Prepare constructs the vector of bridge variables and locks the configuration, then calls **up-date()** (p. 128).

mha\_wave\_t \* process (mha\_wave\_t \*s)

Processing fct for waveforms.

mha\_spec\_t \* process (mha\_spec\_t \*s)

Processing fct for spectra.

• void process ()

Process function.

• void release ()

Release fct.

## **Private Member Functions**

• void update ()

Construct new runtime configuration.

#### **Private Attributes**

```
    MHAParser::vstring t vars

    MHAParser::bool t rt strict

    MHAParser::bool t activate

    MHAParser::int_t skip

    MHAEvents::patchbay_t< ac2lsl_t > patchbay

   std::vector< std::unique_ptr< save_var_base_t >> varlist
Additional Inherited Members
5.1.1 Detailed Description
Plugin class of ac2lsl (p. 77).
5.1.2 Constructor & Destructor Documentation
5.1.2.1 ac2lsl::ac2lsl_t::ac2lsl_t (
                    algo_comm_t iac,
                    const char * chain,
                    const char * algo )
5.1.3 Member Function Documentation
5.1.3.1 void ac2lsl::ac2lsl_t::prepare (
                    mhaconfig_t & cf ) [virtual]
Prepare constructs the vector of bridge variables and locks the configuration, then calls up-
date() (p. 128).
Implements MHAPlugin::plugin_t < cfg_t > (p. 692).
5.1.3.2 mha_wave_t* ac2lsl::ac2lsl_t::process (
                    mha wave t * s ) [inline]
Processing fct for waveforms.
```

```
Processing fct for spectra.
```

Calls **process(void)** (p. 128).

Calls **process(void)** (p. 128).

5.1.3.3 mha\_spec\_t\* ac2lsl::ac2lsl\_t::process (

mha\_spec\_t \* s ) [inline]

```
5.1.3.4 void ac2lsl::ac2lsl_t::process ( void )
```

Process function.

Checks once if the plugin is run in a real-time thread and throws if rt\_strict is true, then forwards to **cfg\_t::process()** (p. 130).

```
5.1.3.5 void ac2lsl::ac2lsl_t::release() [virtual]
```

Release fct.

Unlocks variable name list

Reimplemented from MHAPlugin::plugin\_t <  $cfg_t > (p. 693)$ .

```
5.1.3.6 void ac2|s|::ac2|s|_t::update( ) [private]
```

Construct new runtime configuration.

- 5.1.4 Member Data Documentation
- **5.1.4.1 MHAParser::vstring\_t ac2lsl::ac2lsl\_t::vars** [private]
- **5.1.4.2 MHAParser::bool t ac2lsl::ac2lsl\_t::rt\_strict** [private]
- **5.1.4.3** MHAParser::bool t ac2lsl::ac2lsl t::activate [private]
- **5.1.4.4** MHAParser::int\_t ac2lsl::ac2lsl\_t::skip [private]
- **5.1.4.5** MHAEvents::patchbay\_t<ac2lsl\_t> ac2lsl::ac2lsl\_t::patchbay [private]
- **5.1.4.6** std::vector<std::unique\_ptr<save\_var\_base\_t>> ac2lsl::ac2lsl\_t::varlist [private]

The documentation for this class was generated from the following file:

- · ac2lsl.cpp
- 5.2 ac2lsl::cfg\_t Class Reference

Runtime configuration class of the ac2lsl (p. 77) plugin.

# **Public Member Functions**

• cfg\_t (bool activate\_, unsigned skipcnt\_, std::vector< std::unique\_ptr<  $save\_var\_{\leftarrow} base\_t >> *varlist\_)$ 

C'tor of ac2lsl (p. 77) run time configuration.

void process ()

#### **Private Attributes**

- std::vector< std::unique\_ptr< save\_var\_base\_t >> \* varlist

  Pointer to vector of unique ptr's of ac to lsl bridges.
- unsigned skipcnt

Counter of frames to skip.

unsigned skip

Number of frames to skip after each send.

• bool activate

Activate/Deactivate sending to Isl.

## 5.2.1 Detailed Description

Runtime configuration class of the **ac2lsl** (p. 77) plugin.

## 5.2.2 Constructor & Destructor Documentation

C'tor of ac2lsl (p. 77) run time configuration.

### **Parameters**

activate⇔	Activate/Deactivate sending
_	
skipcnt⇔	Number of frames to skip after each send
_	
varlist⇔	Pointer to vector of unique ptr's of ac to Isl bridges.

# 5.2.3 Member Function Documentation

5.2.3.1 void cfg\_t::process ( void )

#### 5.2.4 Member Data Documentation

**5.2.4.1** std::vector<std::unique\_ptr<save\_var\_base\_t>>\* ac2lsl::cfg\_t::varlist [private]

Pointer to vector of unique ptr's of ac to Isl bridges.

Raw pointer because we do not take ownership

**5.2.4.2 unsigned ac2lsl::cfg\_t::skipcnt** [private]

Counter of frames to skip.

**5.2.4.3 unsigned ac2lsl::cfg\_t::skip** [private]

Number of frames to skip after each send.

**5.2.4.4** bool ac2lsl::cfg\_t::activate [private]

Activate/Deactivate sending to Isl.


The documentation for this class was generated from the following file:

## · ac2lsl.cpp

# 5.3 ac2lsl::save\_var\_base\_t Class Reference

Interface for ac to Isl bridge variable.

Inheritance diagram for ac2lsl::save\_var\_base\_t:

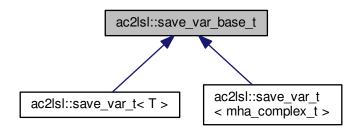

**Public Member Functions** 

- virtual void send frame ()=0
- virtual ~save\_var\_base\_t ()=default

# 5.3.1 Detailed Description

Interface for ac to Isl bridge variable.

# 5.3.2 Constructor & Destructor Documentation

- **5.3.2.1** virtual ac2lsl::save\_var\_base\_t::~save\_var\_base\_t( ) [virtual], [default]
- 5.3.3 Member Function Documentation
- **5.3.3.1 virtual void ac2lsl::save\_var\_base\_t::send\_frame()** [pure virtual]

Implemented in ac2lsl::save\_var\_t< mha\_complex\_t > (p. 135), and ac2lsl::save\_var\_t< T > (p. 133).


The documentation for this class was generated from the following file:

# · ac2lsl.cpp

# 5.4 ac2lsl::save\_var\_t < T > Class Template Reference

Implementation for all ac to Isl bridges except complex types.

Inheritance diagram for ac2lsl::save\_var\_t< T >:

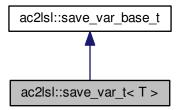

# **Public Member Functions**

save\_var\_t (const std::string &name, const std::string &type, void \*data, size\_t num\_
entries)

C'tor of generic ac to Isl bridge.

- virtual ~save\_var\_t ()=default
- virtual void send\_frame ()

Send a frame to Isl.

#### **Private Attributes**

• Isl::stream\_outlet **stream**LSL stream outlet.

• T \* buf

Pointer to data buffer of the ac variable.

# 5.4.1 Detailed Description

```
template<typename T> class ac2lsl::save_var_t< T>
```

Implementation for all ac to Isl bridges except complex types.

## 5.4.2 Constructor & Destructor Documentation

C'tor of generic ac to Isl bridge.

# **Parameters**

name	Name of variable as seen in Isl
type	Type of variable as seen in Isl
data	Pointer to data buffer of the ac variable
num_entries	Number of entries if the ac variable is a vector. Should be set to one if not a vector.

5.4.2.2 template < typename T > virtual ac2lsl::save\_var\_t < T > ::  $\sim$  save\_var\_t ( ) [virtual], [default]

- 5.4.3 Member Function Documentation

Send a frame to Isl.

Implements ac2lsl::save\_var\_base\_t (p. 131).

- 5.4.4 Member Data Documentation
- **5.4.4.1** template<typename T > Isl::stream\_outlet ac2Isl::save\_var\_t< T >::stream [private]

LSL stream outlet.

Interface to Isl

5.4.4.2 template<typename T > T\* ac2lsl::save\_var\_t < T >::buf [private]


Pointer to data buffer of the ac variable.

The documentation for this class was generated from the following file:

- ac2lsl.cpp
- 5.5 ac2lsl::save\_var\_t < mha\_complex\_t > Class Template Reference

Template specialization of the ac2lsl (p. 77) bridge to take care of complex numbers.

Inheritance diagram for ac2lsl::save\_var\_t< mha\_complex\_t >:

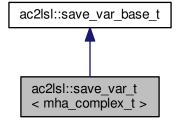

#### **Public Member Functions**

save\_var\_t (const std::string &name, const std::string &type, void \*data, size\_t \_num\_← entries)

C'tor of specialization for complex types.

- virtual ~save\_var\_t ()=default
- virtual void send\_frame ()

Send a frame of complex types.

## **Private Attributes**

• lsl::stream\_outlet stream

LSL stream outlet.

std::vector< mha\_real\_t > vec

Vector that gets sent over to the Isl instead of the actual complex type.

mha\_complex\_t \* buf

Pointer to data buffer of the ac variable.

size\_t num\_entries

Number of entries in the vector.

#### 5.5.1 Detailed Description

```
template<> class ac2lsl::save_var_t< mha_complex_t >
```

Template specialization of the **ac2lsl** (p. 77) bridge to take care of complex numbers.

This specialization is needed because Isl does not support complex numbers. Order is [re(0), im(0), re(1), im(1), ...]

#### 5.5.2 Constructor & Destructor Documentation

C'tor of specialization for complex types.

See generic c'tor for details.

135

5.5.3 Member Function Documentation

Send a frame of complex types.

Reorders real and imaginary parts into one vector.

Implements ac2lsl::save\_var\_base\_t (p. 131).

5.5.4 Member Data Documentation

**5.5.4.1** Isl::stream\_outlet ac2lsl::save\_var\_t < mha\_complex\_t >::stream [private]

LSL stream outlet.

Interface to Isl

5.5.4.2 std::vector<mha\_real\_t> ac2lsl::save\_var\_t< mha\_complex\_t>::vec [private]

Vector that gets sent over to the Isl instead of the actual complex type.

5.5.4.3 mha\_complex\_t\* ac2lsl::save\_var\_t< mha\_complex\_t >::buf [private]

Pointer to data buffer of the ac variable.

5.5.4.4 size\_t ac2lsl::save\_var\_t < mha\_complex\_t >::num\_entries [private]

Number of entries in the vector.


The documentation for this class was generated from the following file:

ac2lsl.cpp

# 5.6 ac2osc\_t Class Reference

Plugin class of the ac2osc plugin.

Inheritance diagram for ac2osc\_t:

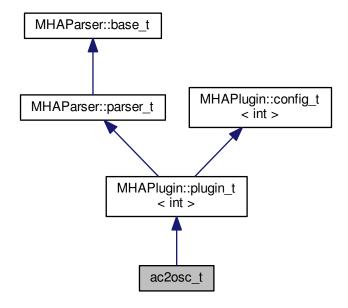

# **Public Member Functions**

- ac2osc\_t (algo\_comm\_t iac, const char \*chain, const char \*algo)
   C'tor of plugin class.
- void prepare (mhaconfig\_t &)
- mha\_wave\_t \* process (mha\_wave\_t \*s)

Processing fct for waveforms.

mha\_spec\_t \* process (mha\_spec\_t \*s)

Processing fct for spectra.

• void process ()

Process function.

• void release ()

Release frees osc related memory, does cleanup.

# **Private Member Functions**

- void send\_osc\_float ()
- void update\_mode ()

Start/Stop sending of messages.

#### **Private Attributes**

MHAParser::string\_t host

OSC server host name.

MHAParser::string\_t port

OSC server port.

MHAParser::int\_t ttl

Time-to-live of UDP packages.

MHAParser::vstring\_t vars

List of AC variables to be saved, empty for all.

MHAParser::kw\_t mode

Record mode.

MHAParser::int\_t skip

number of frames to skip after sending

MHAParser::bool\_t rt\_strict

abort if used in real-time thread?

- MHA\_AC::acspace2matrix\_t \* acspace
- MHAEvents::patchbay\_t< ac2osc\_t > patchbay
- bool b\_record
- uint8\_t \* rtmem
- float framerate
- int skipcnt
- lo\_address lo\_addr

**Additional Inherited Members** 

5.6.1 Detailed Description

Plugin class of the ac2osc plugin.

5.6.2 Constructor & Destructor Documentation

C'tor of plugin class.

5.6.3 Member Function Documentation

Implements MHAPlugin::plugin\_t< int > (p. 692).

Processing fct for waveforms.

Calls process(void) (p. 138).

Processing fct for spectra.

Calls process(void) (p. 138).

```
5.6.3.4 void ac2osc_t::process ( void )
```

Process function.

Checks once if the plugin is run in a real-time thread and throws if rt\_strict is true, sends osc messages according to config.

Release frees osc related memory, does cleanup.

Reimplemented from **MHAPlugin::plugin** t < int > (p. 693).

```
5.6.3.6 void ac2osc_t::send_osc_float( ) [private]
```

```
5.6.3.7 void ac2osc_t::update_mode( ) [private]
```

Start/Stop sending of messages.

5.6.4 Member Data Documentation

**5.6.4.1** MHAParser::string\_t ac2osc\_t::host [private]

OSC server host name.

**5.6.4.2** MHAParser::string\_t ac2osc\_t::port [private]

OSC server port.


```
5.6.4.3 MHAParser::int_t ac2osc_t::ttl [private]
Time-to-live of UDP packages.
5.6.4.4 MHAParser::vstring_t ac2osc_t::vars [private]
List of AC variables to be saved, empty for all.
5.6.4.5 MHAParser::kw_t ac2osc_t::mode [private]
Record mode.
5.6.4.6 MHAParser::int_t ac2osc_t::skip [private]
number of frames to skip after sending
5.6.4.7 MHAParser::bool_t ac2osc_t::rt_strict [private]
abort if used in real-time thread?
5.6.4.8 MHA_AC::acspace2matrix_t* ac2osc_t::acspace [private]
5.6.4.9 MHAEvents::patchbay_t<ac2osc_t>ac2osc_t::patchbay [private]
5.6.4.10 bool ac2osc_t::b_record [private]
5.6.4.11 uint8_t* ac2osc_t::rtmem [private]
5.6.4.12 float ac2osc_t::framerate [private]
5.6.4.13 int ac2osc_t::skipcnt [private]
5.6.4.14 lo_address ac2osc_t::lo_addr [private]
```

The documentation for this class was generated from the following file:

## ac2osc.cpp

# 5.7 ac2wave\_if\_t Class Reference

Inheritance diagram for ac2wave\_if\_t:

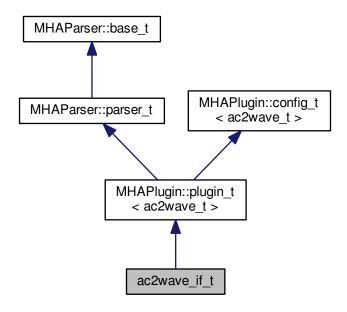

### **Public Member Functions**

- ac2wave\_if\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_wave\_t \* process (mha\_spec\_t \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

#### **Private Member Functions**

• void update ()

## **Private Attributes**

- MHAParser::string\_t name
- MHAParser::float\_t gain\_in
- MHAParser::float\_t gain\_ac
- MHAParser::int\_t delay\_in
- MHAParser::int\_t delay\_ac
- MHASignal::waveform\_t \* zeros
- bool prepared
- MHAEvents::patchbay\_t< ac2wave\_if\_t > patchbay

**Additional Inherited Members** 

```
5.7.1 Constructor & Destructor Documentation
5.7.1.1 ac2wave if t::ac2wave if t(
                   const algo_comm_t & iac,
                   const std::string & ith,
                   const std::string & ial )
5.7.2 Member Function Documentation
5.7.2.1 mha_wave_t * ac2wave_if_t::process (
                   mha spec t*)
5.7.2.2 mha wave t * ac2wave if t::process (
                   mha_wave_t * s
5.7.2.3 void ac2wave_if_t::prepare (
                   mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < ac2wave_t > (p. 692).
5.7.2.4 void ac2wave if t::release (
                   void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< ac2wave_t > (p. 693).
5.7.2.5 void ac2wave_if_t::update( ) [private]
5.7.3 Member Data Documentation
5.7.3.1 MHAParser::string_t ac2wave_if_t::name [private]
5.7.3.2 MHAParser::float_t ac2wave_if_t::gain_in [private]
5.7.3.3 MHAParser::float_t ac2wave_if_t::gain_ac [private]
5.7.3.4 MHAParser::int_t ac2wave_if_t::delay_in [private]
5.7.3.5 MHAParser::int_t ac2wave_if_t::delay_ac [private]
5.7.3.6 MHASignal::waveform_t* ac2wave_if_t::zeros [private]
5.7.3.7 bool ac2wave if t::prepared [private]
5.7.3.8 MHAEvents::patchbay_t<ac2wave_if_t> ac2wave_if_t::patchbay [private]
The documentation for this class was generated from the following file:
```

ac2wave.cpp

# 5.8 ac2wave\_t Class Reference

#### **Public Member Functions**

- ac2wave\_t (unsigned int frames\_, unsigned int channels\_, algo\_comm\_t ac\_, std::string name\_, float gain\_in\_, float gain\_ac\_, unsigned int delay\_in\_, unsigned int delay\_ac\_)
- mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Private Attributes**

- · unsigned int frames
- unsigned int channels
- · mha wave tw
- · algo\_comm\_t ac
- std::string name
- MHASignal::delay\_wave\_t delay\_in
- MHASignal::delay\_wave\_t delay\_ac
- mha\_real\_t gain\_in
- · mha\_real\_t gain\_ac
- 5.8.1 Constructor & Destructor Documentation

- 5.8.2 Member Function Documentation
- 5.8.2.1 mha\_wave\_t \* ac2wave\_t::process ( mha\_wave\_t \* s )
- 5.8.3 Member Data Documentation
- **5.8.3.1 unsigned int ac2wave\_t::frames** [private]
- **5.8.3.2 unsigned int ac2wave\_t::channels** [private]
- 5.8.3.3 mha wave tac2wave\_t::w [private]


```
5.8.3.4 algo_comm_t ac2wave_t::ac [private]
5.8.3.5 std::string ac2wave_t::name [private]
5.8.3.6 MHASignal::delay_wave_t ac2wave_t::delay_in [private]
5.8.3.7 MHASignal::delay_wave_t ac2wave_t::delay_ac [private]
5.8.3.8 mha_real_t ac2wave_t::gain_in [private]
5.8.3.9 mha_real_t ac2wave_t::gain_ac [private]
```

The documentation for this class was generated from the following file:

# · ac2wave.cpp

# 5.9 acConcat\_wave Class Reference

Inheritance diagram for acConcat\_wave:

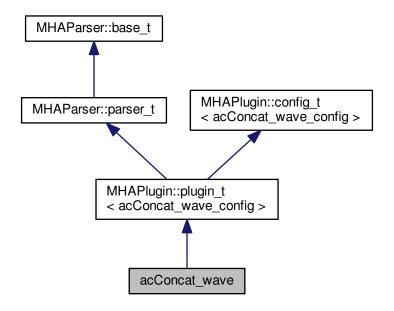

#### **Public Member Functions**

acConcat\_wave (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

Constructs our plugin.

- ∼acConcat\_wave ()
- mha wave t \* process (mha wave t \*)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig\_t &)

Plugin preparation.

void release (void)

## **Public Attributes**

- MHAParser::int\_t num\_AC
- MHAParser::string\_t prefix\_names\_AC
- MHAParser::vint t samples AC
- MHAParser::string\_t name\_conAC

#### **Private Member Functions**

void update\_cfg ()

#### **Private Attributes**

MHAEvents::patchbay\_t< acConcat\_wave > patchbay

**Additional Inherited Members** 

```
5.9.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.9.1.2 acConcat_wave::~acConcat_wave()
```

5.9.2 Member Function Documentation

```
5.9.2.1 mha_wave_t * acConcat_wave::process ( mha wave t * signal )
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

#### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin\_t< acConcat\_wave\_config > (p. 692).

Reimplemented from MHAPlugin::plugin\_t< acConcat\_wave\_config > (p. 693).

- 5.9.2.4 void acConcat\_wave::update\_cfg( ) [private]
- 5.9.3 Member Data Documentation
- 5.9.3.1 MHAParser::int\_t acConcat\_wave::num\_AC
- 5.9.3.2 MHAParser::string t acConcat\_wave::prefix\_names\_AC
- 5.9.3.3 MHAParser::vint\_t acConcat\_wave::samples\_AC
- 5.9.3.4 MHAParser::string\_t acConcat\_wave::name\_conAC
- 5.9.3.5 MHAEvents::patchbay t<acConcat wave> acConcat\_wave::patchbay [private]

The documentation for this class was generated from the following files:

- · acConcat wave.h
- acConcat\_wave.cpp
- 5.10 acConcat\_wave\_config Class Reference

**Public Member Functions** 

- acConcat\_wave\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, acConcat\_
   wave \*\_concat)
- ~acConcat\_wave\_config ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Public Attributes**

```
algo_comm_t & ac
```

- std::vector< std::string > strNames\_AC
- std::vector< int > numSamples\_AC
- mha\_wave\_t vGCC
- MHA\_AC::waveform\_t \* vGCC\_con

#### 5.10.1 Constructor & Destructor Documentation

- 5.10.1.2 acConcat\_wave\_config::~acConcat\_wave\_config()
- 5.10.2 Member Function Documentation
- 5.10.3 Member Data Documentation
- 5.10.3.1 algo comm t& acConcat\_wave\_config::ac
- 5.10.3.2 std::vector<std::string> acConcat\_wave\_config::strNames\_AC
- 5.10.3.3 std::vector<int> acConcat\_wave\_config::numSamples\_AC
- 5.10.3.4 mha\_wave\_t acConcat\_wave\_config::vGCC
- 5.10.3.5 MHA\_AC::waveform\_t\* acConcat\_wave\_config::vGCC\_con

The documentation for this class was generated from the following files:

- acConcat\_wave.h
- acConcat\_wave.cpp
- 5.11 acmon::ac monitor t Class Reference

A class for converting AC variables to Parser monitors of correct type.

#### **Public Member Functions**

ac\_monitor\_t (MHAParser::parser\_t &parent, const std::string &name\_, algo\_comm
 \_t ac, bool use\_matrix)

Converts AC variable to parser monitor.

void getvar (algo\_comm\_t ac)

Update values of monitor.

#### **Public Attributes**

• std::string name

name of AC variable and parser monitor

std::string dimstr

columns x rows

MHAParser::vfloat\_mon\_t mon

Monitor used for real vectors.

· MHAParser::mfloat mon t mon mat

Monitor used for real matrices.

MHAParser::vcomplex\_mon\_t mon\_complex

monitor used for complex vectors

MHAParser::mcomplex\_mon\_t mon\_mat\_complex

monitor used for complex matrices

MHAParser::parser\_t & p\_parser

parent parser to insert monitor into

#### **Private Attributes**

· bool use mat

if true, use matrix monitor, else use vector monitor

## 5.11.1 Detailed Description

A class for converting AC variables to Parser monitors of correct type.

### 5.11.2 Constructor & Destructor Documentation

```
5.11.2.1 acmon::ac_monitor_t::ac_monitor_t (

MHAParser::parser_t & parent,

const std::string & name_,

algo_comm_t ac,

bool use_matrix )
```

Converts AC variable to parser monitor.

### **Parameters**

parent	The parser to insert a monitor into
name_	The name of the AC variable and the monitor variable
ac	Handle to algorithm communication space
use_matrix	Indicates if a matrix monitor type should be used.

#### 5.11.3 Member Function Documentation

Update values of monitor.

## **Parameters**

ac	Handle to algorithm communication space
----	---

## 5.11.4 Member Data Documentation

5.11.4.1 std::string acmon::ac\_monitor\_t::name

name of AC variable and parser monitor

5.11.4.2 std::string acmon::ac\_monitor\_t::dimstr

columns x rows

5.11.4.3 MHAParser::vfloat\_mon\_t acmon::ac\_monitor\_t::mon

Monitor used for real vectors.

5.11.4.4 MHAParser::mfloat\_mon\_t acmon::ac\_monitor\_t::mon\_mat

Monitor used for real matrices.

5.11.4.5 MHAParser::vcomplex\_mon\_t acmon::ac\_monitor\_t::mon\_complex

monitor used for complex vectors

5.11.4.6 MHAParser::mcomplex\_mon\_t acmon::ac\_monitor\_t::mon\_mat\_complex

monitor used for complex matrices

5.11.4.7 MHAParser::parser\_t& acmon::ac\_monitor\_t::p\_parser

parent parser to insert monitor into


**5.11.4.8** bool acmon::ac\_monitor\_t::use\_mat [private]

if true, use matrix monitor, else use vector monitor

The documentation for this class was generated from the following files:

- ac\_monitor\_type.hh
- ac\_monitor\_type.cpp
- 5.12 acmon::acmon\_t Class Reference

Inheritance diagram for acmon::acmon\_t:

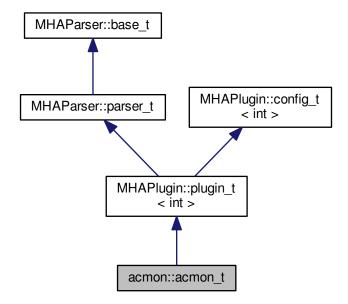

#### **Public Member Functions**

```
• acmon_t (const algo_comm_t &, const std::string &, const std::string &)
```

- ~acmon t ()
- void prepare (mhaconfig\_t &)
- void release ()
- mha spec t \* process (mha spec t \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)

## **Private Member Functions**

- void save\_vars ()
- void update\_recmode ()

#### **Private Attributes**

- algo\_comm\_t ac
- MHAParser::vstring\_mon\_t varlist
- MHAParser::vstring\_mon\_t dimensions
- MHAParser::kw t dispmode
- MHAParser::kw\_t recmode
- std::vector< ac\_monitor\_t \* > vars
- MHAEvents::patchbay t< acmon t > patchbay
- std::string chain
- std::string algo
- bool b\_cont
- bool b\_snapshot

#### **Additional Inherited Members**

# 5.12.1 Constructor & Destructor Documentation

```
5.12.1.2 acmon::acmon_t::\simacmon_t ( void )
```

#### 5.12.2 Member Function Documentation

Implements MHAPlugin::plugin\_t< int > (p. 692).


```
5.12.2.2 void acmon::acmon t::release (
                   void ) [inline],[virtual]
Reimplemented from MHAPlugin::plugin_t< int > (p. 693).
5.12.2.3 mha_spec_t * acmon::acmon_t::process (
                   mha spec t * s)
5.12.2.4 mha wave t * acmon::acmon_t::process (
                   mha wave t * s)
5.12.2.5 void acmon::acmon_t::save_vars() [private]
5.12.2.6 void acmon::acmon_t::update_recmode( ) [private]
5.12.3 Member Data Documentation
5.12.3.1 algo_comm_t acmon::acmon_t::ac [private]
5.12.3.2 MHAParser::vstring mon t acmon::acmon t::varlist [private]
5.12.3.3
        MHAParser::vstring mon tacmon::acmon t::dimensions [private]
5.12.3.4
        MHAParser::kw_t acmon::acmon_t::dispmode [private]
        MHAParser::kw_t acmon::acmon_t::recmode [private]
5.12.3.5
5.12.3.6 std::vector<ac_monitor_t*> acmon::acmon_t::vars [private]
5.12.3.7 MHAEvents::patchbay_t<acmon_t> acmon::acmon_t::patchbay [private]
5.12.3.8
        std::string acmon::acmon_t::chain [private]
5.12.3.9 std::string acmon::acmon_t::algo [private]
5.12.3.10 bool acmon::acmon_t::b_cont [private]
5.12.3.11 bool acmon::acmon_t::b_snapshot [private]
```

The documentation for this class was generated from the following file:

## · acmon.cpp

# 5.13 acPooling\_wave Class Reference

Inheritance diagram for acPooling\_wave:

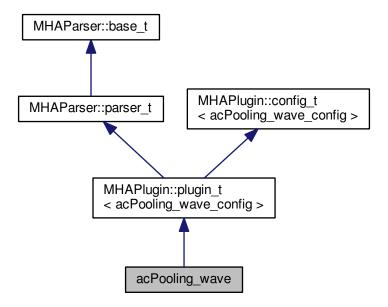

#### **Public Member Functions**

acPooling\_wave (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

Constructs our plugin.

- ∼acPooling\_wave ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig\_t &)

Plugin preparation.

void release (void)

## **Public Attributes**

- MHAParser::int\_t numsamples
- MHAParser::int\_t pooling\_wndlen
- MHAParser::kw\_t pooling\_type
- MHAParser::float\_t upper\_threshold
- MHAParser::float\_t lower\_threshold
- MHAParser::int\_t neighbourhood

```
    MHAParser::float_t alpha
```

- MHAParser::string\_t p\_name
- MHAParser::string\_t pool\_name
- MHAParser::string\_t max\_pool\_ind\_name
- · MHAParser::string t like ratio name

**Private Member Functions** 

void update\_cfg ()

**Private Attributes** 

MHAEvents::patchbay\_t< acPooling\_wave > patchbay

**Additional Inherited Members** 

```
5.13.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.13.1.2 acPooling_wave::~acPooling_wave()
```

5.13.2 Member Function Documentation

```
5.13.2.1 mha_wave_t * acPooling_wave::process ( mha_wave_t * signal )
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin\_t< acPooling\_wave\_config > (p. 692).

Reimplemented from MHAPlugin::plugin\_t< acPooling\_wave\_config > (p. 693).

```
5.13.2.4 void acPooling_wave::update_cfg( ) [private]
```

5.13.3 Member Data Documentation

```
5.13.3.1 MHAParser::int_t acPooling_wave::numsamples
```

5.13.3.2 MHAParser::int\_t acPooling\_wave::pooling\_wndlen

5.13.3.3 MHAParser::kw\_t acPooling\_wave::pooling\_type

5.13.3.4 MHAParser::float\_t acPooling\_wave::upper\_threshold

5.13.3.5 MHAParser::float tacPooling\_wave::lower\_threshold

5.13.3.6 MHAParser::int\_t acPooling\_wave::neighbourhood

5.13.3.7 MHAParser::float\_t acPooling\_wave::alpha

5.13.3.8 MHAParser::string\_t acPooling\_wave::p\_name

5.13.3.9 MHAParser::string\_t acPooling\_wave::pool\_name

5.13.3.10 MHAParser::string\_t acPooling\_wave::max\_pool\_ind\_name

5.13.3.11 MHAParser::string\_t acPooling\_wave::like\_ratio\_name

**5.13.3.12** MHAEvents::patchbay\_t<acPooling\_wave> acPooling\_wave::patchbay [private]

The documentation for this class was generated from the following files:

- acPooling\_wave.h
- acPooling\_wave.cpp

# 5.14 acPooling\_wave\_config Class Reference

#### **Public Member Functions**

- acPooling\_wave\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, acPooling
   —wave \*\_pooling)
- ~acPooling\_wave\_config ()
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void insert ()

#### **Public Attributes**

- · algo comm t & ac
- std::string raw\_p\_name
- MHA\_AC::waveform\_t p
- MHA AC::waveform t p max
- MHA\_AC::waveform\_t like\_ratio
- mha\_wave\_t c
- unsigned int pooling\_ind
- unsigned int pooling\_option
- unsigned int pooling\_size
- float up\_thresh
- float low thresh
- int neigh
- float alpha
- MHASignal::waveform\_t pool
- 5.14.1 Constructor & Destructor Documentation
- 5.14.1.2 acPooling\_wave\_config::~acPooling\_wave\_config()
- 5.14.2 Member Function Documentation
- 5.14.2.2 void acPooling\_wave\_config::insert ( )
- 5.14.3 Member Data Documentation

5.14.3.1	algo_comm_t& acPooling_wave_config::ac
5.14.3.2	std::string acPooling_wave_config::raw_p_name
5.14.3.3	MHA_AC::waveform_t acPooling_wave_config::p
5.14.3.4	MHA_AC::waveform_t acPooling_wave_config::p_max
5.14.3.5	MHA_AC::waveform_t acPooling_wave_config::like_ratio
5.14.3.6	mha_wave_t acPooling_wave_config::c
5.14.3.7	unsigned int acPooling_wave_config::pooling_ind
5.14.3.8	unsigned int acPooling_wave_config::pooling_option
5.14.3.9	unsigned int acPooling_wave_config::pooling_size
5.14.3.10	float acPooling_wave_config::up_thresh
5.14.3.11	float acPooling_wave_config::low_thresh
5.14.3.12	int acPooling_wave_config::neigh
5.14.3.13	float acPooling_wave_config::alpha


The documentation for this class was generated from the following files:

5.14.3.14 MHASignal::waveform\_t acPooling\_wave\_config::pool

- · acPooling\_wave.h
- acPooling\_wave.cpp

# 5.15 acsave::acsave\_t Class Reference

Inheritance diagram for acsave::acsave\_t:

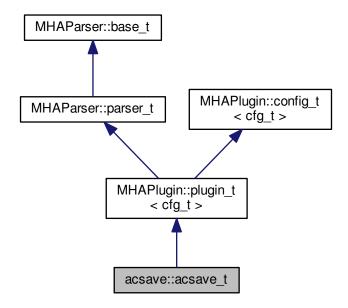

# **Public Member Functions**

- acsave\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- void prepare (mhaconfig\_t &)
- void release ()
- mha\_spec\_t \* process (mha\_spec\_t \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void event\_start\_recording ()
- void event\_stop\_and\_flush ()

# **Private Types**

typedef std::vector< save\_var\_t \* > varlist\_t

## **Private Member Functions**

• void process ()

### **Private Attributes**

```
MHAParser::bool_t bflush
MHAParser::kw_t fileformat
MHAParser::string_t fname
MHAParser::float_t reclen
MHAParser::vstring_t variables
varlist_t varlist
std::string chain
std::string algo
bool b_prepared
bool b_flushed
MHAEvents::patchbay_t< acsave_t > patchbay
```

#### **Additional Inherited Members**

Reimplemented from MHAPlugin::plugin\_t < cfg\_t > (p. 693).

```
5.15.3.3 mha_spec_t * acsave::acsave_t::process (
                    mha\_spec\_t * s)
5.15.3.4 mha_wave_t * acsave::acsave_t::process (
                    mha wave t * s)
5.15.3.5 void acsave::acsave_t::event_start_recording()
5.15.3.6 void acsave::acsave_t::event_stop_and_flush()
5.15.3.7 void acsave::acsave_t::process (
                    void ) [private]
5.15.4 Member Data Documentation
5.15.4.1 MHAParser::bool tacsave::acsave_t::bflush [private]
5.15.4.2 MHAParser::kw t acsave::acsave_t::fileformat [private]
5.15.4.3 MHAParser::string_t acsave::acsave_t::fname [private]
5.15.4.4 MHAParser::float tacsave::acsave_t::reclen [private]
5.15.4.5 MHAParser::vstring_t acsave::acsave_t::variables [private]
5.15.4.6 varlist tacsave::acsave_t::varlist [private]
        std::string acsave::acsave_t::chain [private]
5.15.4.8 std::string acsave::acsave_t::algo [private]
5.15.4.9 bool acsave::acsave_t::b_prepared [private]
5.15.4.10 bool acsave::acsave_t::b_flushed [private]
5.15.4.11 MHAEvents::patchbay_t<acsave_t> acsave_t::patchbay [private]
```

The documentation for this class was generated from the following file:

# · acsave.cpp

# 5.16 acsave::cfg\_t Class Reference

#### **Public Member Functions**

- cfg\_t (const algo\_comm\_t &iac, unsigned int imax\_frames, std::vector< std::string > &var\_names)
- ~cfg\_t ()
- void store\_frame ()
- void flush\_data (const std::string &, unsigned int)

## **Private Attributes**

- · algo\_comm\_t ac
- · unsigned int nvars
- save\_var\_t \*\* varlist
- unsigned int rec\_frames
- unsigned int max\_frames

# 5.16.1 Constructor & Destructor Documentation

```
5.16.1.2 cfg_t::\simcfg_t()
```

5.16.2 Member Function Documentation

```
5.16.2.1 void cfg_t::store_frame ( )
```

This function is called in the processing thread.

This function is called in the configuration thread.

# **Parameters**

filename	Output file name
fmt	Output file format

#### 5.16.3 Member Data Documentation

```
5.16.3.1 algo_comm_t acsave::cfg_t::ac [private]
5.16.3.2 unsigned int acsave::cfg_t::nvars [private]
5.16.3.3 save_var_t** acsave::cfg_t::varlist [private]
5.16.3.4 unsigned int acsave::cfg_t::rec_frames [private]
```

**5.16.3.5** unsigned int acsave::cfg\_t::max\_frames [private]

The documentation for this class was generated from the following file:

## · acsave.cpp

## 5.17 acsave::mat4head t Struct Reference

## **Public Attributes**

- int32\_t t
- int32\_t rows
- int32 t cols
- int32\_t imag
- int32\_t namelen

#### 5.17.1 Member Data Documentation

- 5.17.1.1 int32 t acsave::mat4head t::t
- 5.17.1.2 int32\_t acsave::mat4head\_t::rows
- 5.17.1.3 int32\_t acsave::mat4head\_t::cols
- 5.17.1.4 int32\_t acsave::mat4head\_t::imag
- 5.17.1.5 int32\_t acsave::mat4head\_t::namelen

The documentation for this struct was generated from the following file:

# · acsave.cpp

## 5.18 acsave::save\_var\_t Class Reference

#### **Public Member Functions**

```
• save_var_t (const std::string &, int, const algo_comm_t &)
```

- $\sim$ save\_var\_t ()
- void store\_frame ()
- void save\_txt (FILE \*, unsigned int)
- void save\_mat4 (FILE \*, unsigned int)
- void save\_m (FILE \*, unsigned int)

## **Public Attributes**

• double \* data

## **Private Attributes**

- std::string name
- unsigned int **nframes**
- · unsigned int ndim
- · unsigned int maxframe
- algo\_comm\_t ac
- unsigned int framecnt
- bool b\_complex

## 5.18.1 Constructor & Destructor Documentation

5.18.2 Member Function Documentation

```
5.18.2.1 void acsave::save_var_t::store_frame ( )
```


```
5.18.2.3 void acsave::save_var_t::save_mat4 (
                     FILE * fh,
                     unsigned int writeframes )
5.18.2.4 void acsave::save_var_t::save_m (
                     FILE * fh.
                     unsigned int writeframes )
5.18.3 Member Data Documentation
5.18.3.1 double* acsave::save_var_t::data
5.18.3.2 std::string acsave::save_var_t::name [private]
5.18.3.3 unsigned int acsave::save_var_t::nframes [private]
5.18.3.4 unsigned int acsave::save_var_t::ndim [private]
5.18.3.5 unsigned int acsave::save_var_t::maxframe [private]
5.18.3.6 algo_comm_t acsave::save_var_t::ac [private]
5.18.3.7 unsigned int acsave::save_var_t::framecnt [private]
5.18.3.8 bool acsave::save_var_t::b_complex [private]
```

The documentation for this class was generated from the following file:

## acsave.cpp

# 5.19 acSteer Class Reference

Inheritance diagram for acSteer:

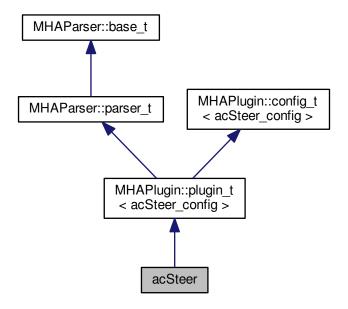

### **Public Member Functions**

acSteer (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_←
name)

Constructs our plugin.

- ~acSteer ()
- mha\_spec\_t \* process (mha\_spec\_t \*)

Thos method is a NOOP.

void prepare (mhaconfig\_t &)

Plugin preparation.

void release (void)

### **Public Attributes**

- MHAParser::string\_t steerFile
- MHAParser::string\_t acSteerName1
- MHAParser::string\_t acSteerName2
- MHAParser::int\_t nsteerchan
- MHAParser::int\_t nrefmic

### **Private Member Functions**

void update\_cfg ()

**Private Attributes** 

MHAEvents::patchbay\_t< acSteer > patchbay

**Additional Inherited Members** 

```
5.19.1 Constructor & Destructor Documentation
```

```
5.19.1.1 acSteer::acSteer (

algo_comm_t & ac,

const std::string & chain_name,

const std::string & algo name )
```

Constructs our plugin.

```
5.19.1.2 acSteer:: ~acSteer ( )
```

5.19.2 Member Function Documentation

Thos method is a NOOP.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin\_t< acSteer\_config > (p. 692).

The documentation for this class was generated from the following files:

- · acSteer.h
- acSteer.cpp

# 5.20 acSteer\_config Class Reference

**Public Member Functions** 

- acSteer\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, acSteer \*acSteer)
- ~acSteer\_config ()
- void **insert** ()

### **Public Attributes**

- unsigned int nchan
- unsigned int nfreq
- unsigned int **nsteerchan**
- · unsigned int nrefmic
- unsigned int nangle
- MHA\_AC::spectrum\_t specSteer1
- MHA\_AC::spectrum\_t specSteer2

```
5.20.1 Constructor & Destructor Documentation
```


- 5.20.1.2 acSteer\_config::~acSteer\_config()
- 5.20.2 Member Function Documentation
- 5.20.2.1 void acSteer\_config::insert ( )
- 5.20.3 Member Data Documentation
- 5.20.3.1 unsigned int acSteer\_config::nchan
- 5.20.3.2 unsigned int acSteer\_config::nfreq
- 5.20.3.3 unsigned int acSteer\_config::nsteerchan
- 5.20.3.4 unsigned int acSteer\_config::nrefmic
- 5.20.3.5 unsigned int acSteer\_config::nangle
- 5.20.3.6 MHA\_AC::spectrum\_t acSteer\_config::specSteer1
- 5.20.3.7 MHA\_AC::spectrum\_t acSteer\_config::specSteer2

The documentation for this class was generated from the following files:

- · acSteer.h
- · acSteer.cpp

# 5.21 acTransform wave Class Reference

Inheritance diagram for acTransform\_wave:

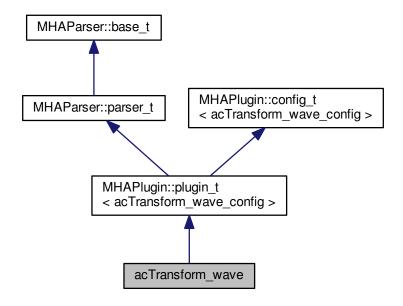

## **Public Member Functions**

acTransform\_wave (algo\_comm\_t &ac, const std::string &chain\_name, const std
 ::string &algo\_name)

Constructs our plugin.

- ~acTransform\_wave ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig\_t &)

Plugin preparation.

void release (void)

# **Public Attributes**

- MHAParser::string\_t ang\_name
- MHAParser::string\_t raw\_p\_name
- MHAParser::string\_t raw\_p\_max\_name
- MHAParser::string\_t rotated\_p\_name
- MHAParser::string\_t rotated\_p\_max\_name
- MHAParser::int\_t numsamples
- MHAParser::bool\_t to\_from

**Private Member Functions** 

void update\_cfg ()

**Private Attributes** 

MHAEvents::patchbay\_t< acTransform\_wave > patchbay

**Additional Inherited Members** 

```
5.21.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.21.1.2 acTransform_wave::~acTransform_wave( )
```

5.21.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin\_t< acTransform\_wave\_config > (p. 692).

The documentation for this class was generated from the following files:

5.21.3.8 MHAEvents::patchbay\_t<acTransform\_wave> acTransform\_wave::patchbay

· acTransform wave.h

[private]

- acTransform\_wave.cpp
- 5.22 acTransform wave config Class Reference

**Public Member Functions** 

- acTransform\_wave\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, ac
   — Transform\_wave \*\_transform)
- ~acTransform\_wave\_config ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

### **Public Attributes**

- · algo\_comm\_t & ac
- std::string ang\_name
- std::string raw p name
- std::string raw p max name
- MHA\_AC::waveform\_t rotated\_p
- MHA\_AC::int\_t rotated\_i
- unsigned int offset
- unsigned int resolution
- · unsigned int to from
- 5.22.1 Constructor & Destructor Documentation


- 5.22.1.2 acTransform\_wave\_config::~acTransform\_wave\_config()
- 5.22.2 Member Function Documentation
- 5.22.3 Member Data Documentation
- 5.22.3.1 algo\_comm\_t& acTransform\_wave\_config::ac
- 5.22.3.2 std::string acTransform\_wave\_config::ang\_name
- 5.22.3.3 std::string acTransform\_wave\_config::raw\_p\_name
- 5.22.3.4 std::string acTransform\_wave\_config::raw\_p\_max\_name
- 5.22.3.5 MHA\_AC::waveform\_t acTransform\_wave\_config::rotated\_p
- 5.22.3.6 MHA\_AC::int\_t acTransform\_wave\_config::rotated\_i
- 5.22.3.7 unsigned int acTransform\_wave\_config::offset
- 5.22.3.8 unsigned int acTransform\_wave\_config::resolution
- 5.22.3.9 unsigned int acTransform\_wave\_config::to\_from

The documentation for this class was generated from the following files:

- · acTransform wave.h
- acTransform\_wave.cpp

# 5.23 addsndfile::addsndfile\_if\_t Class Reference

Inheritance diagram for addsndfile::addsndfile\_if\_t:

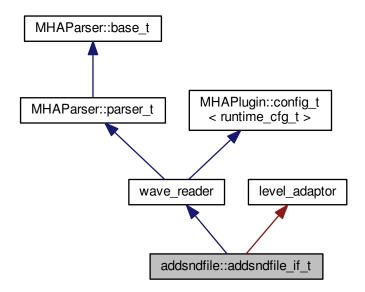

### **Public Member Functions**

- addsndfile\_if\_t (algo\_comm\_t, const char \*, const char \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

#### **Private Member Functions**

- void **update** ()
- void change\_mode ()
- void set\_level ()
- void scan\_dir ()

# **Private Attributes**

- MHAParser::string\_t filename
- MHAParser::string\_t path
- MHAParser::bool\_t loop
- MHAParser::float\_t level

```
    MHAParser::kw_t levelmode
```

- MHAParser::kw t resamplingmode
- MHAParser::vint t channels
- MHAParser::kw t mode
- MHAParser::float\_t ramplen
- MHAParser::int t startpos
- MHAParser::vint\_mon\_t mapping
- MHAParser::int\_mon\_t numchannels
- MHAParser::int\_mon\_t mhachannels
- MHAParser::int\_mon\_t active
- MHAParser::string\_t search\_pattern
- MHAParser::vstring\_mon\_t search\_result
- unsigned int uint\_mode
- MHAEvents::patchbay\_t< addsndfile\_if\_t > patchbay

```
Additional Inherited Members
```

```
5.23.1 Constructor & Destructor Documentation
```

5.23.2 Member Function Documentation

Implements MHAPlugin::plugin\_t< runtime\_cfg\_t > (p. 692).

Reimplemented from MHAPlugin::plugin\_t< runtime\_cfg\_t > (p. 693).


```
5.23.2.4 void addsndfile::addsndfile_if_t::update( ) [private]
5.23.2.5 void addsndfile::addsndfile_if_t::change_mode( ) [private]
5.23.2.6 void addsndfile::addsndfile_if_t::set_level() [private]
5.23.2.7 void addsndfile::addsndfile_if_t::scan_dir( ) [private]
5.23.3 Member Data Documentation
        MHAParser::string_t addsndfile::addsndfile_if_t::filename [private]
5.23.3.1
5.23.3.2 MHAParser::string taddsndfile::addsndfile if t::path [private]
5.23.3.3
        MHAParser::bool taddsndfile::addsndfile_if_t::loop [private]
5.23.3.4
        MHAParser::float t addsndfile::addsndfile if t::level [private]
5.23.3.5
        MHAParser::kw t addsndfile::addsndfile_if_t::levelmode [private]
5.23.3.6
        MHAParser::kw t addsndfile::addsndfile_if_t::resamplingmode [private]
5.23.3.7
        MHAParser::vint t addsndfile::addsndfile if t::channels [private]
5.23.3.8
        MHAParser::kw t addsndfile::addsndfile_if_t::mode [private]
5.23.3.9
        MHAParser::float taddsndfile::addsndfile if t::ramplen [private]
5.23.3.10 MHAParser::int_t addsndfile::addsndfile_if_t::startpos [private]
5.23.3.11 MHAParser::vint mon taddsndfile::addsndfile_if_t::mapping [private]
5.23.3.12 MHAParser::int_mon_t addsndfile::addsndfile_if_t::numchannels [private]
5.23.3.13 MHAParser::int_mon_t addsndfile::addsndfile_if_t::mhachannels [private]
5.23.3.14 MHAParser::int mon taddsndfile::addsndfile_if_t::active [private]
5.23.3.15 MHAParser::string_t addsndfile::addsndfile_if_t::search_pattern [private]
5.23.3.16 MHAParser::vstring mon t addsndfile::addsndfile_if_t::search_result [private]
5.23.3.17 unsigned int addsndfile::addsndfile_if_t::uint_mode [private]
5.23.3.18 MHAEvents::patchbay_t<addsndfile_if_t> addsndfile::addsndfile_if_t::patchbay
         [private]
```

The documentation for this class was generated from the following file:

# addsndfile.cpp

# 5.24 addsndfile::level\_adapt\_t Class Reference

Inheritance diagram for addsndfile::level\_adapt\_t:

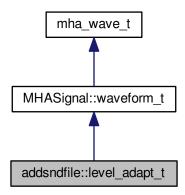

#### **Public Member Functions**

- level\_adapt\_t (mhaconfig\_t cf, mha\_real\_t adapt\_len, mha\_real\_t l\_new\_, mha\_real \_t l\_old\_)
- void update\_frame ()
- mha\_real\_t get\_level () const
- bool can\_update () const

#### **Private Attributes**

- unsigned int ilen
- unsigned int pos
- MHAWindow::fun\_t wnd
- mha\_real\_t l\_new
- mha\_real\_t l\_old

### **Additional Inherited Members**

# 5.24.1 Constructor & Destructor Documentation


- 5.24.2 Member Function Documentation
- 5.24.2.1 void addsndfile::level\_adapt\_t::update\_frame ( )
- 5.24.2.2 mha\_real\_t addsndfile::level\_adapt\_t::get\_level( ) const [inline]
- **5.24.2.3** bool addsndfile::level\_adapt\_t::can\_update() const [inline]
- 5.24.3 Member Data Documentation
- **5.24.3.1** unsigned int addsndfile::level\_adapt\_t::ilen [private]
- **5.24.3.2 unsigned int addsndfile::level\_adapt\_t::pos** [private]
- **5.24.3.3 MHAWindow::fun\_t addsndfile::level\_adapt\_t::wnd** [private]
- **5.24.3.4 mha real t addsndfile::level\_adapt\_t::l\_new** [private]
- **5.24.3.5 mha\_real\_t** addsndfile::level\_adapt\_t::l\_old [private]

The documentation for this class was generated from the following file:

# addsndfile.cpp

# 5.25 addsndfile::resampled\_soundfile\_t Class Reference

Reads sound from file and resamples it if necessary and wanted. Inheritance diagram for addsndfile::resampled\_soundfile\_t:

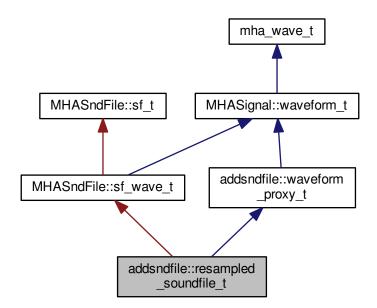

### **Public Member Functions**

resampled\_soundfile\_t (const std::string &name, float mha\_sampling\_rate, addsndfile ←
 \_resampling\_mode\_t resampling\_mode)

Reads sound from file and resamples if necessary and wanted.

#### **Additional Inherited Members**

### 5.25.1 Detailed Description

Reads sound from file and resamples it if necessary and wanted.

Sound data can then be used by addsndfile.

### 5.25.2 Constructor & Destructor Documentation

Reads sound from file and resamples if necessary and wanted.

If the sound file does not specify a sampling rate, then the sound data is always used without resampling.

#### **Parameters**

name	Sound file name	
mha_sampling_rate	The sampling rate of the MHA signal processing at the point of the addsndfile plugin	
resampling_mode	DONT_RESAMPLE_STRICT: Do not resample, just use the samples from the sound file at the current sample rate, even if the sample rate of the sound file differs. DONT_RESAMPLE_PERMISSIVE: Do not resample, if the sample rate of the MHA differs from the sample rate of the sound file, raise an error. DO_RESAMPLE: Resample.	

# **Exceptions**


<b>MHA_Error</b> (p. 413)	If the sampling rate of the file does not match the sampling rate of
	the MHA and DONT_RESAMPLE_STRICT was requested. If
	resampling failed (e.g. due to non-rational quotient of MHA sampling
	rate and sound file sampling rate).

The documentation for this class was generated from the following file:

# addsndfile.cpp

## 5.26 addsndfile::sndfile t Class Reference

Inheritance diagram for addsndfile::sndfile\_t:

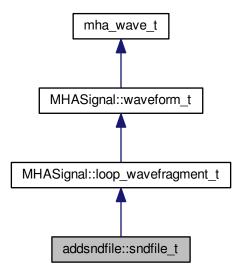

### **Public Member Functions**

sndfile\_t (const std::string &name, bool loop, unsigned int level\_mode, std::vector< int > channels\_, unsigned int nchannels, std::vector< int > &mapping, int &numchannels, unsigned int startpos, float mha\_sampling\_rate, addsndfile\_resampling\_mode\_t resampling\_mode)

### **Additional Inherited Members**

#### 5.26.1 Constructor & Destructor Documentation


The documentation for this class was generated from the following file:

# · addsndfile.cpp

# 5.27 addsndfile::waveform\_proxy\_t Class Reference

Class helps to specify which instance of MHASignal\_waveform\_t parent instance is meant in **resampled\_soundfile\_t** (p. 177).

Inheritance diagram for addsndfile::waveform\_proxy\_t:

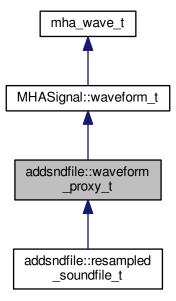

**Public Member Functions** 

waveform\_proxy\_t (unsigned frames, unsigned channels)

**Additional Inherited Members** 

#### 5.27.1 Detailed Description

Class helps to specify which instance of MHASignal\_waveform\_t parent instance is meant in **resampled\_soundfile\_t** (p. 177).

#### 5.27.2 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

· addsndfile.cpp

# 5.28 ADM::ADM < F > Class Template Reference

Adaptive differential microphone, working for speech frequency range.

### **Public Member Functions**

- **ADM** (F fs, F dist, unsigned lp\_order, const F \*lp\_alphas, unsigned decomb\_order, const F \*decomb\_alphas, F tau\_beta=F(50e-3), F mu\_beta=F(1e-4))

  Create Adaptive Differential Microphone.
- F process (const F &front, const F &back, const F &external\_beta=F(-1))
   ADM (p. 181) processes one frame.
- F beta () const

# **Private Attributes**

- Delay
   F > m\_delay\_front
- Delay
   F > m\_delay\_back
- Linearphase\_FIR< F > m\_lp\_bf
- Linearphase\_FIR< F > m\_lp\_result
- Linearphase\_FIR< F> m\_decomb
- Fm beta
- F m\_mu\_beta
- F m\_powerfilter\_coeff
- F m\_powerfilter\_norm
- F m\_powerfilter\_state

# 5.28.1 Detailed Description

```
template<class F> class ADM::ADM< F>
```

Adaptive differential microphone, working for speech frequency range.

#### 5.28.2 Constructor & Destructor Documentation

```
5.28.2.1 template < class F > ADM::ADM< F >::ADM ( F fs, F dist, unsigned lp_order, const F * lp_alphas, unsigned decomb_order, const F * decomb_alphas, F tau_beta = F (50e-3), F mu_beta = F (1e-4)
```

Create Adaptive Differential Microphone.

#### **Parameters**

fs	Sampling rate / Hz
dist	Distance between physical microphones / m
lp_order	Filter order of FIR lowpass filter used for adaptation
lp_alphas	Pointer to array of alpha coefficients for the lowpass filter used for adaptation. Since this class uses linear phase FIR filters only, only the first half (order/2 + 1) of the coefficients will be read (coefficients for linear-phase FIR filters are symmetric).
decomb_order	Filter order of FIR compensation filter (compensates for comb filter characteristic)
decomb_alphas	Pointer to array of alpha coefficients for the compensation filter used to compensate for the comb filter characteristic. Since this class uses linear phase FIR filters only, only the first half (order/2 + 1)of the coefficients will be read (coefficients for linear-phase FIR filters are symmetric).
tau_beta	Time constant of the lowpass filter used for averaging the power of the output signal
mu_beta	adaption speed

# 5.28.3 Member Function Documentation

**ADM** (p. 181) processes one frame.

#### **Parameters**

front	The current front input signal sample	
back	The current rear input signal sample	
external_beta	If >= 0, this is used as the "beta" parameter for direction to filter out. Else, the beta parameter is adapted to filtered out a direction so that best reduction of signal intensity from the back hemisphere is achieved.	

### **Returns**

The computed output sample

```
5.28.3.2 template < class F > F ADM::ADM < F >::beta ( ) const [inline]
5.28.4 Member Data Documentation
5.28.4.1 template < class F > Delay < F > ADM::ADM < F >::m_delay_front [private]
5.28.4.2 template < class F > Delay < F > ADM::ADM < F >::m_delay_back [private]
5.28.4.3 template < class F > Linearphase_FIR < F > ADM::ADM < F >::m_lp_bf [private]
5.28.4.4 template < class F > Linearphase_FIR < F > ADM::ADM < F >::m_lp_result [private]
5.28.4.5 template < class F > Linearphase_FIR < F > ADM::ADM < F >::m_decomb [private]
5.28.4.6 template < class F > F ADM::ADM < F >::m_beta [private]
5.28.4.7 template < class F > F ADM::ADM < F >::m_mu_beta [private]
5.28.4.8 template < class F > F ADM::ADM < F >::m_powerfilter_coeff [private]
5.28.4.9 template < class F > F ADM::ADM < F >::m_powerfilter_norm [private]
5.28.4.10 template < class F > F ADM::ADM < F >::m_powerfilter_state [private]
```

The documentation for this class was generated from the following file:

#### · adm.hh

# 5.29 ADM::Delay < F > Class Template Reference

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

### **Public Member Functions**

- Delay (F samples, F f\_design, F fs)
   Create a signal delay object.
- ∼Delay ()
- F process (const F &in sample)

Apply delay to signal.

## **Private Attributes**

unsigned m\_fullsamples

Integer part of delay.

F m\_coeff

coefficient for 1st order IIR lowpass filter which does the subsample delay

• F m\_norm

normalization for the IIR subsample delay filter

• F \* m\_state

Ringbuffer: Delayline.

unsigned m\_now\_in

current position for inserting new samples into m\_state ringbuffer

# 5.29.1 Detailed Description

```
template < class F> class ADM::Delay < F >
```

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4.

#### 5.29.2 Constructor & Destructor Documentation

Create a signal delay object.

### **Parameters**

samples	number of samples to delay (may be non-integer)
f_design	subsampledelay is exact for this frequency
fs	sampling frequency

5.29.2.2 template 
$$<$$
 class F  $>$  ADM::Delay  $<$  F  $>$ :: $\sim$  Delay  $($ 

**5.29.3** Member Function Documentation

Apply delay to signal.

#### **Parameters**

ample The current input signal sample
---------------------------------------

#### **Returns**

The computed output sample

# 5.29.4 Member Data Documentation

5.29.4.1 template < class F > unsigned ADM::Delay < F >::m\_fullsamples [private] Integer part of delay.

coefficient for 1st order IIR lowpass filter which does the subsample delay

5.29.4.3 template 
$$<$$
 class  $F > F$  ADM::Delay  $< F >$ ::m\_norm [private]

normalization for the IIR subsample delay filter

Ringbuffer: Delayline.

**5.29.4.5** template < class F > unsigned ADM::Delay < F >::m\_now\_in [private]

current position for inserting new samples into m\_state ringbuffer

The documentation for this class was generated from the following file:

· adm.hh

# 5.30 ADM::Linearphase\_FIR< F > Class Template Reference

An efficient linear-phase fir filter implementation.

## **Public Member Functions**

- Linearphase\_FIR (unsigned order, const F \*alphas)
   Create linear-phase FIR filter.
- ∼Linearphase\_FIR ()
- F process (const F &in\_sample)

Filter one sample with this linear-phase FIR filter.

#### **Private Attributes**

unsigned m\_order

The filter order of this linear-phase FIR filter.

F \* m\_alphas

FIR filter coefficients.

• F \* m output

Ringbuffer for building future output.

unsigned m now

current start of ringbuffer

### 5.30.1 Detailed Description

```
template < class F> class ADM::Linearphase_FIR < F >
```

An efficient linear-phase fir filter implementation.

5.30.2 Constructor & Destructor Documentation

```
5.30.2.1 template < class F > ADM::Linearphase_FIR < F > ::Linearphase_FIR (unsigned order, const F * alphas )
```

Create linear-phase FIR filter.

### **Parameters**

order	filter order of this FIR filter. restriction: must be even.	
alphas	pointer to Array of alpha coefficients. Since this class is for linear phase FIR filters	
	only, only (order / 2 + 1) coefficients will be read. (Coefficients for linear-phase FIR	
	filters are symmetric.)	

5.30.2.2 template 
$$<$$
 class F  $>$  ADM::Linearphase\_FIR  $<$  F  $>$ :: $\sim$  Linearphase\_FIR  $($ 

5.30.3 Member Function Documentation

5.30.3.1 template 
$$<$$
 class F  $>$  F ADM::Linearphase\_FIR  $<$  F  $>$ ::process ( const F & in\_sample ) [inline]

Filter one sample with this linear-phase FIR filter.

#### **Parameters**

in_sample	the current input sample
-----------	--------------------------

### **Returns**

the computed output sample

### 5.30.4 Member Data Documentation

**5.30.4.1** template < class F > unsigned ADM::Linearphase\_FIR < F >::m\_order [private]

The filter order of this linear-phase FIR filter.

**5.30.4.2** template < class F > F\* ADM::Linearphase\_FIR < F >::m\_alphas [private]

FIR filter coefficients.

Only m\_order / 2 + 1 coefficients need to be stored since coefficients of linear-phase FIR filters are symmetric

**5.30.4.3** template < class F > F\* ADM::Linearphase\_FIR < F >::m\_output [private]

Ringbuffer for building future output.

**5.30.4.4** template < class F > unsigned ADM::Linearphase\_FIR < F >::m\_now [private]


current start of ringbuffer

The documentation for this class was generated from the following file:

#### · adm.hh

# 5.31 adm\_if\_t Class Reference

Inheritance diagram for adm\_if\_t:

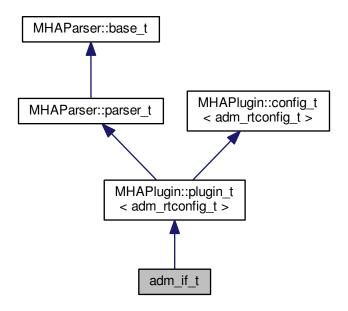

# **Public Member Functions**

- adm\_if\_t (const algo\_comm\_t &ac, const std::string &thread\_name, const std::string &algo\_name)
- mha\_wave\_t \* process (mha\_wave\_t \*in)
- virtual void prepare (mhaconfig\_t &)
- virtual void release ()

### **Private Member Functions**

- void **update** ()
- bool is\_prepared ()

### **Private Attributes**

```
MHASignal::waveform_t * out
MHAParser::vint_t front_channels
MHAParser::vint_t rear_channels
MHAParser::vfloat_t distances
MHAParser::int_t lp_order
MHAParser::int_t decomb_order
MHAParser::int_t bypass
MHAParser::float_t beta
MHAParser::vfloat_t mu_beta
MHAParser::vfloat_t tau_beta
```

- MHAParser::vfloat\_mon\_t coeff\_lp
- MHAParser::vfloat\_mon\_t coeff\_decomb
- unsigned input\_channels
- mha\_real\_t srate
- MHAEvents::patchbay\_t< adm\_if\_t > patchbay

#### **Additional Inherited Members**

```
5.31.1 Constructor & Destructor Documentation
```

5.31.2 Member Function Documentation

```
5.31.2.1 mha_wave_t * adm_if_t::process (
mha_wave_t * in )
```

Implements MHAPlugin::plugin\_t < adm\_rtconfig\_t > (p. 692).

Reimplemented from MHAPlugin::plugin\_t< adm\_rtconfig\_t > (p. 693).

```
5.31.2.4 void adm_if_t::update( ) [private]
5.31.2.5 bool adm_if_t::is_prepared() [inline], [private]
5.31.3 Member Data Documentation
        MHASignal::waveform t*adm_if_t::out [private]
5.31.3.2 MHAParser::vint tadm_if_t::front_channels [private]
5.31.3.3 MHAParser::vint_t adm_if_t::rear_channels [private]
5.31.3.4 MHAParser::vfloat_t adm_if_t::distances [private]
5.31.3.5 MHAParser::int_t adm_if_t::lp_order [private]
5.31.3.6 MHAParser::int_t adm_if_t::decomb_order [private]
5.31.3.7 MHAParser::int_t adm_if_t::bypass [private]
5.31.3.8 MHAParser::float_t adm_if_t::beta [private]
        MHAParser::vfloat_t adm_if_t::mu_beta [private]
5.31.3.10 MHAParser::vfloat_t adm_if_t::tau_beta [private]
5.31.3.11 MHAParser::vfloat mon tadm_if_t::coeff_lp [private]
5.31.3.12 MHAParser::vfloat mon tadm_if_t::coeff_decomb [private]
5.31.3.13 unsigned adm_if_t::input_channels [private]
5.31.3.14 mha_real_t adm_if_t::srate [private]
5.31.3.15 MHAEvents::patchbay_t<adm_if_t> adm_if_t::patchbay [private]
```

The documentation for this class was generated from the following file:

### adm.cpp

5.32 adm\_rtconfig\_t Class Reference

**Public Types** 

typedef ADM::ADM< mha\_real\_t > adm\_t

#### **Public Member Functions**

adm\_rtconfig\_t (unsigned nchannels\_in, unsigned nchannels\_out, const std::vector< int > &front\_channels, const std::vector< int > &rear\_channels, const mha\_real\_t fs, const std::vector< mha\_real\_t > &distances, const int lp\_order, const int decomb\_order, const std::vector< mha\_real\_t > &tau\_beta, const std::vector< mha\_real\_t > &mu\_
beta)

Construct new ADMs.

- virtual ~adm rtconfig t ()
- size\_t num\_adms () const
- adm\_t & adm (unsigned index)

Returns adm object number index.

• int front\_channel (unsigned index) const

Returns index of front channel for adm number index.

• int rear channel (unsigned index) const

Returns index of rear channel for adm number index.

#### **Private Member Functions**

void check\_index (unsigned index) const

Index checking for all internal arrays.

#### **Private Attributes**

std::vector< int > front\_channels

Indices of channels containing the signals from the front microphones.

std::vector< int > rear\_channels

Indices of channels containing the signals from the rear microphones.

MHASignal::waveform\_t \* lp\_coeffs

Lowpass filter coefficients.

std::vector< MHASignal::waveform\_t \* > decomb\_coeffs

Decomb-Filter coefficients.

std::vector< adm\_t \* > adms

ADMs.

- 5.32.1 Member Typedef Documentation
- 5.32.1.1 typedef ADM::ADM<mha\_real\_t> adm\_rtconfig\_t::adm\_t
- 5.32.2 Constructor & Destructor Documentation

### Construct new ADMs.

Used when configuration changes.

#### **Parameters**

nchannels_in	Number of input channels
nchannels_out	Number of output channels
front_channels	Parser's front_channels setting
rear_channels	Parser's front_channels setting
fs	Sampling rate / Hz
distances	Distances between microphones / m
lp_order	Filter order of FIR lowpass filter for adaptation
decomb_order	Filter order of FIR compensation filter (compensates for comb filter characteristic)
tau_beta	Time constants of the lowpass filter used for averaging the power of the output signal used for adaptation
mu_beta	Adaptation step sizes

```
5.32.2.2 adm_rtconfig_t::~adm_rtconfig_t() [virtual]
```

# 5.32.3 Member Function Documentation

Index checking for all internal arrays.

# **Exceptions**

<b>MHA_Error</b> (p. <b>413</b> )	if index out of range.
-----------------------------------	------------------------

```
5.32.3.2 size_t adm_rtconfig_t::num_adms() const [inline]
5.32.3.3 adm_t& adm_rtconfig_t::adm (
                    unsigned index ) [inline]
Returns adm object number index.
5.32.3.4 int adm_rtconfig_t::front_channel (
                    unsigned index ) const [inline]
Returns index of front channel for adm number index.
5.32.3.5 int adm_rtconfig_t::rear_channel (
                    unsigned index ) const [inline]
Returns index of rear channel for adm number index.
5.32.4 Member Data Documentation
5.32.4.1 std::vector<int> adm_rtconfig_t::front_channels [private]
Indices of channels containing the signals from the front microphones.
5.32.4.2 std::vector<int> adm_rtconfig_t::rear_channels [private]
Indices of channels containing the signals from the rear microphones.
5.32.4.3 MHASignal::waveform_t*adm_rtconfig_t::lp_coeffs [private]
Lowpass filter coefficients.
5.32.4.4 std::vector<MHASignal::waveform_t*>adm_rtconfig_t::decomb_coeffs [private]
Decomb-Filter coefficients.
5.32.4.5 std::vector<adm_t *> adm_rtconfig_t::adms [private]
ADMs.
```

The documentation for this class was generated from the following file:

adm.cpp

### 5.33 algo\_comm\_t Struct Reference

A reference handle for algorithm communication variables.

#### **Public Attributes**

• void \* handle

AC variable control handle.

int(\* insert\_var )(void \*, const char \*, comm\_var\_t)

Register an AC variable.

int(\* insert\_var\_int )(void \*, const char \*, int \*)

Register an int as an AC variable.

int(\* insert\_var\_float )(void \*, const char \*, float \*)

Register a float as an AC variable.

int(\* remove\_var )(void \*, const char \*)

Remove an AC variable.

int(\* remove\_ref )(void \*, void \*)

Remove all AC variable which refer to address.

int(\* is\_var )(void \*, const char \*)

Test if an AC variable exists.

int(\* get\_var )(void \*, const char \*, comm\_var\_t \*)

Get the variable handle of an AC variable.

int(\* get\_var\_int )(void \*, const char \*, int \*)

Get the value of an int AC variable.

int(\* get\_var\_float )(void \*, const char \*, float \*)

Get the value of a float AC variable.

int(\* get entries)(void \*, char \*, unsigned int)

Return a space separated list of all variable names.

const char \*(\* get\_error )(int)

Convert AC error codes into human readable error messages.

# 5.33.1 Detailed Description

A reference handle for algorithm communication variables.

This structure contains a coontrol handle and a set of function pointers for sharing variables within one processing chain. See also section **Communication between algorithms** (p. 27).

#### 5.33.2 Member Data Documentation

5.33.2.1 algo\_comm\_t::handle

AC variable control handle.

5.33.2.2 algo\_comm\_t::insert\_var

Register an AC variable.

This function can register a variable to be shared within one chain. If a variable of this name exists it will be overwritten.

# **Parameters**

h	AC handle
n	name of variable. May not be empty. Must not contain space character. The name is
	copied, therefore it is allowed that the char array pointed to gets invalid after return.
V	variable handle of type <b>comm_var_t</b> (p. 232)

### **Returns**

Error code or zero on success

5.33.2.3 algo\_comm\_t::insert\_var\_int

Register an int as an AC variable.

This function can register an int variable to be shared with other algorithms. It behaves similar to ac.insert\_var.

# **Parameters**

h	AC handle
n	name of variable
V	pointer on the variable

# Returns

Error code or zero on success

5.33.2.4 algo\_comm\_t::insert\_var\_float

Register a float as an AC variable.

This function can register a float variable to be shared with other algorithms. It behaves similar to ac.insert\_var.

# **Parameters**

h	AC handle
n	name of variable
V	pointer on the variable

### **Returns**

Error code or zero on success

5.33.2.5 algo\_comm\_t::remove\_var

Remove an AC variable.

Remove (unregister) an AC variable. After calling this function, the variable is not available to ac.is\_var or ac.get\_var. The data pointer is not affected.

#### **Parameters**

h	AC handle
n	name of variable to be removed

### **Returns**

Error code or zero on success

5.33.2.6 algo\_comm\_t::remove\_ref

Remove all AC variable which refer to address.

This function removes all AC variables whos data field points to the given address.

### **Parameters**

h	AC handle
p	address which should not be referred to any more

#### **Returns**

Error code or zero on success

5.33.2.7 algo\_comm\_t::is\_var

Test if an AC variable exists.

This function tests if an AC variable of a given name exists. Use ac.get\_var to get information about the variables type and dimension.

### **Parameters**

h	AC handle
n	name of variable

#### **Returns**

1 if the variable exists, 0 otherwise

5.33.2.8 algo\_comm\_t::get\_var

Get the variable handle of an AC variable.

This function returns the variable handle **comm\_var\_t** (p. 232) of a variable of the given name. If no variable of that name exists, an error code is returned.

#### **Parameters**

h	AC handle
n	name of variable
V	pointer to a AC variable object

#### Returns

Error code or zero on success

5.33.2.9 algo\_comm\_t::get\_var\_int

Get the value of an int AC variable.

This function returns the value of an int AC variable of the given name. If no variable exists, the variable type is mismatching or more than one entry is registered, a corresponding error code is returned. This is a special version of ac.get\_var.

#### **Parameters**

h	AC handle
n	name of variable
V	pointer on an int variable to store the result

# Returns

Error code or zero on success

5.33.2.10 algo\_comm\_t::get\_var\_float

Get the value of a float AC variable.

This function returns the value of a float AC variable of the given name. If no variable exists, the variable type is mismatching or more than one entry is registered, a corresponding error code is returned. This is a special version of ac.get\_var.

### **Parameters**

h	AC handle
n	name of variable
V	pointer on a float variable to store the result

## **Returns**

Error code or zero on success

5.33.2.11 algo\_comm\_t::get\_entries

Return a space separated list of all variable names.

This function returns the names of all registered variables, separated by a single space.

#### **Parameters**

h AC handle

# **Return values**

ret Character buffer for return value

#### **Parameters**

len length of character buffer

## **Returns**

Error code or zero on success. -1: invalid ac handle. -3: not enough room in character buffer to store all variable names.

5.33.2.12 algo\_comm\_t::get\_error

Convert AC error codes into human readable error messages.

#### **Parameters**

e Error code

#### **Returns**


Error message

The documentation for this struct was generated from the following files:

- · mha.h
- mha\_algo\_comm.cpp

## 5.34 altplugs\_t Class Reference

Inheritance diagram for altplugs\_t:

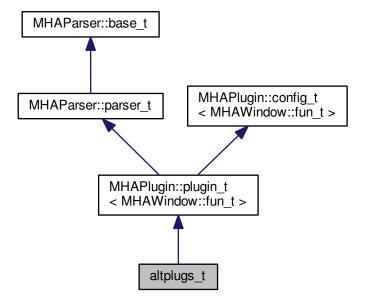

### **Public Member Functions**

- altplugs\_t (algo\_comm\_t iac, const char \*chain, const char \*algo)
- void prepare (mhaconfig\_t &)
- void release ()
- void process (mha\_wave\_t \*, mha\_wave\_t \*\*)
- void process (mha\_spec\_t \*, mha\_wave\_t \*\*)
- void process (mha\_wave\_t \*, mha\_spec\_t \*\*)
- void process (mha\_spec\_t \*, mha\_spec\_t \*\*)
- virtual std::string parse (const std::string &arg)
- virtual void parse (const char \*a1, char \*a2, unsigned int a3)

#### **Private Member Functions**

```
void event_set_plugs ()
```

- void event\_add\_plug ()
- void event\_delete\_plug ()
- void event\_select\_plug ()
- void update\_selector\_list ()
- void update\_ramplen ()
- void proc\_ramp (mha\_wave\_t \*s)

#### **Private Attributes**

- MHAParser::bool\_t use\_own\_ac
- MHAParser::vstring t parser plugs
- MHAParser::string\_t add\_plug
- MHAParser::string\_t delete\_plug
- MHAParser::float t ramplen
- MHAParser::kw\_t select\_plug
- MHAParser::parser\_t current
- MHAParser::vstring\_mon\_t nondefault\_labels
- std::vector< mhaplug\_cfg\_t \* > plugs
- mhaplug\_cfg\_t \* selected\_plug
- MHAEvents::patchbay t< altplugs t > patchbay
- MHASignal::waveform t \* fallback wave
- MHASignal::spectrum\_t \* fallback\_spec
- mhaconfig t cfin
- · mhaconfig\_t cfout
- bool prepared
- bool added via plugs
- unsigned int ramp\_counter
- unsigned int ramp\_len

## **Additional Inherited Members**

```
5.34.1 Constructor & Destructor Documentation
```

5.34.2 Member Function Documentation

Implements MHAPlugin::plugin\_t < MHAWindow::fun\_t > (p. 692).

```
5.34.2.2 void altplugs_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t < MHAWindow::fun_t > (p. 693).
5.34.2.3 void altplugs t::process (
                     mha_wave_t * sln,
                     mha_wave_t ** sOut )
5.34.2.4 void altplugs_t::process (
                     mha_spec_t * sln,
                     mha_wave_t ** sOut )
5.34.2.5 void altplugs t::process (
                     mha_wave_t * sln,
                     mha_spec_t ** sOut )
5.34.2.6 void altplugs_t::process (
                     mha_spec_t * sln,
                     mha spec t ** sOut )
5.34.2.7 std::string altplugs_t::parse (
                    const std::string & arg ) [virtual]
Reimplemented from MHAParser::base_t (p. 602).
5.34.2.8 virtual void altplugs_t::parse (
                     const char * a1,
                     char * a2.
                     unsigned int a3 ) [inline], [virtual]
Reimplemented from MHAParser::base_t (p. 603).
5.34.2.9 void altplugs_t::event_set_plugs() [private]
5.34.2.10 void altplugs_t::event_add_plug( ) [private]
5.34.2.11
         void altplugs_t::event_delete_plug( ) [private]
5.34.2.12 void altplugs_t::event_select_plug( ) [private]
5.34.2.13 void altplugs_t::update_selector_list() [private]
5.34.2.14 void altplugs_t::update_ramplen() [private]
```

```
5.34.2.15 void altplugs_t::proc_ramp (
                     mha_wave_t * s ) [private]
5.34.3 Member Data Documentation
5.34.3.1
        MHAParser::bool_t altplugs_t::use_own_ac [private]
5.34.3.2 MHAParser::vstring_t altplugs_t::parser_plugs [private]
5.34.3.3
        MHAParser::string_t altplugs_t::add_plug [private]
5.34.3.4
        MHAParser::string t altplugs_t::delete_plug [private]
5.34.3.5
        MHAParser::float_t altplugs_t::ramplen [private]
5.34.3.6
        MHAParser::kw_t altplugs_t::select_plug [private]
5.34.3.7
        MHAParser::parser taltplugs_t::current [private]
5.34.3.8
        MHAParser::vstring_mon_t altplugs_t::nondefault_labels [private]
5.34.3.9 std::vector<mhaplug_cfg_t*> altplugs_t::plugs [private]
5.34.3.10 mhaplug_cfg_t* altplugs_t::selected_plug [private]
5.34.3.11 MHAEvents::patchbay_t<altplugs_t> altplugs_t::patchbay [private]
5.34.3.12 MHASignal::waveform_t* altplugs_t::fallback_wave [private]
5.34.3.13 MHASignal::spectrum_t* altplugs_t::fallback_spec [private]
5.34.3.14 mhaconfig taltplugs_t::cfin [private]
5.34.3.15 mhaconfig_t altplugs_t::cfout [private]
5.34.3.16 bool altplugs_t::prepared [private]
5.34.3.17 bool altplugs_t::added_via_plugs [private]
5.34.3.18 unsigned int altplugs_t::ramp_counter [private]
5.34.3.19 unsigned int altplugs_t::ramp_len [private]
```

The documentation for this class was generated from the following file:

## · altplugs.cpp

### 5.35 analysepath\_t Class Reference

### **Public Member Functions**

- virtual ~analysepath\_t ()
- void rt process (mha wave t \*)
- virtual int svc ()

### **Private Attributes**

- MHAProc wave2wave tinner process wave2wave
- MHAProc wave2spec tinner process wave2spec
- MHASignal::waveform\_t inner\_input
- void \* libdata
- mha\_fifo\_t< mha\_real\_t > wave\_fifo
- mha\_fifo\_t< MHA\_AC::acspace2matrix\_t > ac\_fifo
- MHA\_AC::acspace2matrix\_t inner\_ac\_copy
- MHA\_AC::acspace2matrix\_t outer\_ac\_copy
- · algo\_comm\_t outer\_ac
- mha\_domain\_t inner\_out\_domain
- MHA\_Error inner\_error
- bool has\_inner\_error
- bool flag\_terminate\_inner\_thread
- int input\_to\_process
- pthread\_mutex\_t ProcessMutex
- pthread\_attr\_t attr
- struct sched param priority
- · int scheduler
- pthread\_t thread
- pthread\_cond\_t cond\_to\_process

#### 5.35.1 Constructor & Destructor Documentation


```
5.35.1.2 analysepath_t::~analysepath_t( ) [virtual]
5.35.2 Member Function Documentation
5.35.2.1 void analysepath_t::rt_process (
                    mha_wave_t * outer_input )
5.35.2.2 int analysepath_t::svc( ) [virtual]
5.35.3
      Member Data Documentation
5.35.3.1
        MHAProc_wave2wave_t analysepath_t::inner_process_wave2wave [private]
5.35.3.2
        MHAProc_wave2spec_t analysepath_t::inner_process_wave2spec [private]
5.35.3.3
        MHASignal::waveform_t analysepath_t::inner_input [private]
5.35.3.4 void* analysepath_t::libdata [private]
5.35.3.5
        mha_fifo_t<mha_real_t> analysepath_t::wave_fifo [private]
5.35.3.6
        mha_fifo_t<MHA_AC::acspace2matrix_t> analysepath_t::ac_fifo [private]
5.35.3.7
        MHA_AC::acspace2matrix_t analysepath_t::inner_ac_copy [private]
5.35.3.8
        MHA_AC::acspace2matrix_t analysepath_t::outer_ac_copy [private]
5.35.3.9
        algo_comm_t analysepath_t::outer_ac [private]
5.35.3.10 mha_domain_t analysepath_t::inner_out_domain [private]
5.35.3.11 MHA_Error analysepath_t::inner_error [private]
5.35.3.12 bool analysepath_t::has_inner_error [private]
5.35.3.13 bool analysepath_t::flag_terminate_inner_thread [private]
5.35.3.14 int analysepath_t::input_to_process [private]
5.35.3.15 pthread_mutex_t analysepath_t::ProcessMutex [private]
5.35.3.16
         pthread_attr_t analysepath_t::attr [private]
5.35.3.17
         struct sched_param analysepath_t::priority [private]
         int analysepath_t::scheduler [private]
5.35.3.18
5.35.3.19
         pthread_t analysepath_t::thread [private]
5.35.3.20
         pthread_cond_t analysepath_t::cond_to_process [private]
```

The documentation for this class was generated from the following file:

## · analysispath.cpp

# 5.36 analysispath\_if\_t Class Reference

Inheritance diagram for analysispath\_if\_t:

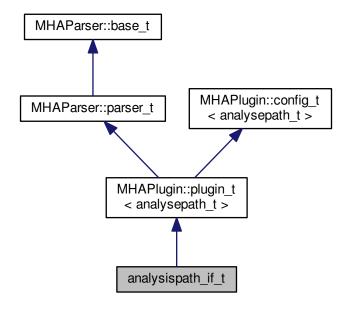

### **Public Member Functions**

- analysispath\_if\_t (algo\_comm\_t, std::string, std::string)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()
- ~analysispath\_if\_t ()

### **Private Member Functions**

• void loadlib ()

### **Private Attributes**

- MHAEvents::patchbay\_t< analysispath\_if\_t > patchbay
- MHAParser::string\_t libname
- MHAParser::int\_t fragsize
- MHAParser::int\_t fifolen
- MHAParser::int\_t priority
- MHAParser::vstring\_t vars
- plug\_t \* plug
- std::string chain
- std::string algo
- MHA\_AC::acspace2matrix\_t \* acspace\_template

```
Additional Inherited Members
```

```
5.36.1 Constructor & Destructor Documentation
5.36.1.1 analysispath_if_t::analysispath_if_t (
                     algo comm t iac,
                     std::string th,
                     std::string al )
5.36.1.2 analysispath_if_t::~analysispath_if_t ( )
5.36.2 Member Function Documentation
5.36.2.1 mha_wave_t * analysispath_if_t::process (
                     mha_wave_t * s )
5.36.2.2 void analysispath_if_t::prepare (
                     mhaconfig_t & conf ) [virtual]
Implements MHAPlugin::plugin_t< analysepath_t > (p. 692).
5.36.2.3 void analysispath_if_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< analysepath_t > (p. 693).
5.36.2.4 void analysispath_if_t::loadlib( ) [private]
5.36.3 Member Data Documentation
5.36.3.1
        MHAEvents::patchbay_t< analysispath_if_t > analysispath_if_t::patchbay
         [private]
5.36.3.2
        MHAParser::string_t analysispath_if_t::libname [private]
5.36.3.3 MHAParser::int_t analysispath_if_t::fragsize [private]
5.36.3.4 MHAParser::int tanalysispath if t::fifolen [private]
5.36.3.5 MHAParser::int_t analysispath_if_t::priority [private]
5.36.3.6 MHAParser::vstring_t analysispath_if_t::vars [private]
5.36.3.7 plug t* analysispath_if_t::plug [private]
5.36.3.8 std::string analysispath_if_t::chain [private]
5.36.3.9 std::string analysispath_if_t::algo [private]
5.36.3.10 MHA AC::acspace2matrix t* analysispath if t::acspace template [private]
```

The documentation for this class was generated from the following file:

analysispath.cpp

# 5.37 AuditoryProfile::fmap\_t Class Reference

A class to store frequency dependent data (e.g., HTL and UCL).

Inherits map< mha\_real\_t, mha\_real\_t >.

#### **Public Member Functions**

- std::vector< mha\_real\_t > get\_frequencies () const
   Return configured frequencies.
- std::vector < mha\_real\_t > get\_values () const
   Return stored values corresponding to the frequencies.
- bool **isempty** () const

## 5.37.1 Detailed Description

A class to store frequency dependent data (e.g., HTL and UCL).

## 5.37.2 Member Function Documentation

5.37.2.1 std::vector < mha real t > AuditoryProfile::fmap t::get frequencies ( ) const

Return configured frequencies.

5.37.2.2 std::vector< mha\_real\_t > AuditoryProfile::fmap\_t::get\_values ( ) const

Return stored values corresponding to the frequencies.

5.37.2.3 bool AuditoryProfile::fmap\_t::isempty() const [inline]


The documentation for this class was generated from the following files:

- · auditory profile.h
- auditory\_profile.cpp

# 5.38 AuditoryProfile::parser\_t Class Reference

Class to make the auditory profile accessible through the parser interface.

Inheritance diagram for AuditoryProfile::parser\_t:

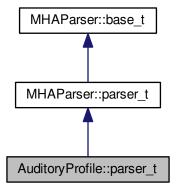

## Classes

- · class ear t
- class fmap\_t

### **Public Member Functions**

- parser\_t ()
- AuditoryProfile::profile\_t get\_current\_profile ()

## **Private Attributes**

- AuditoryProfile::parser\_t::ear\_t L
- AuditoryProfile::parser\_t::ear\_t R

## **Additional Inherited Members**

## 5.38.1 Detailed Description


Class to make the auditory profile accessible through the parser interface.

- 5.38.2 Constructor & Destructor Documentation
- 5.38.2.1 AuditoryProfile::parser\_t::parser\_t ( )
- 5.38.3 Member Function Documentation
- 5.38.3.1 AuditoryProfile::profile\_t AuditoryProfile::parser\_t::get\_current\_profile ( )
- 5.38.4 Member Data Documentation
- **5.38.4.1 AuditoryProfile::parser\_t::ear\_t AuditoryProfile::parser\_t::L** [private]
- **5.38.4.2 AuditoryProfile::parser\_t::ear\_t AuditoryProfile::parser\_t::R** [private]

The documentation for this class was generated from the following files:

- auditory\_profile.h
- auditory\_profile.cpp
- 5.39 AuditoryProfile::parser\_t::ear\_t Class Reference

Inheritance diagram for AuditoryProfile::parser\_t::ear\_t:

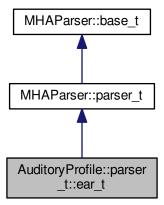

### **Public Member Functions**

- ear\_t ()
- AuditoryProfile::profile\_t::ear\_t get\_ear () const

### **Private Attributes**

- AuditoryProfile::parser\_t::fmap\_t HTL
- AuditoryProfile::parser\_t::fmap\_t UCL


### **Additional Inherited Members**

- 5.39.1 Constructor & Destructor Documentation
- 5.39.1.1 AuditoryProfile::parser\_t::ear\_t::ear\_t ( )
- 5.39.2 Member Function Documentation
- 5.39.2.1 AuditoryProfile::profile\_t::ear\_t AuditoryProfile::parser\_t::ear\_t::get\_ear( ) const
- 5.39.3 Member Data Documentation
- **5.39.3.1 AuditoryProfile::parser\_t::fmap\_t** AuditoryProfile::parser\_t::ear\_t::HTL [private]
- **5.39.3.2** AuditoryProfile::parser\_t::fmap\_t AuditoryProfile::parser\_t::ear\_t::UCL [private]

The documentation for this class was generated from the following files:

- · auditory\_profile.h
- auditory\_profile.cpp
- 5.40 AuditoryProfile::parser\_t::fmap\_t Class Reference

Inheritance diagram for AuditoryProfile::parser\_t::fmap\_t:

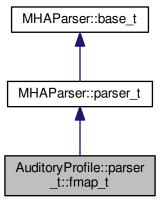

### **Public Member Functions**

- fmap\_t (const std::string &name, const std::string &help)
- AuditoryProfile::fmap t get fmap () const

### **Private Member Functions**

• void validate ()

#### **Private Attributes**

- MHAEvents::patchbay\_t< AuditoryProfile::parser\_t::fmap\_t > patchbay
- · MHAParser::vfloat tf
- MHAParser::vfloat t value
- std::string name\_

### **Additional Inherited Members**

```
5.40.1 Constructor & Destructor Documentation
```

- 5.40.2 Member Function Documentation
- 5.40.2.1 AuditoryProfile::fmap\_t AuditoryProfile::parser\_t::fmap\_t::get\_fmap( ) const
- **5.40.2.2 void AuditoryProfile::parser\_t::fmap\_t::validate( )** [private]
- 5.40.3 Member Data Documentation
- 5.40.3.1 MHAEvents::patchbay\_t<AuditoryProfile::parser\_t::fmap\_t>
  AuditoryProfile::parser\_t::fmap\_t::patchbay [private]
- **5.40.3.2** MHAParser::vfloat\_t AuditoryProfile::parser\_t::fmap\_t::f [private]
- **5.40.3.3** MHAParser::vfloat\_t AuditoryProfile::parser\_t::fmap\_t::value [private]
- **5.40.3.4 std::string AuditoryProfile::parser\_t::fmap\_t::name** [private]

The documentation for this class was generated from the following files:

- auditory\_profile.h
- auditory\_profile.cpp

# 5.41 AuditoryProfile::profile\_t Class Reference

The Auditory Profile class.

### Classes

class ear\_t

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.

**Public Member Functions** 

• AuditoryProfile::profile\_t::ear\_t get\_ear (unsigned int channel) const Return ear information of channel number.

#### **Public Attributes**

- AuditoryProfile::profile\_t::ear\_t L
   Left ear data.
- AuditoryProfile::profile\_t::ear\_t R

  Right ear data.
- 5.41.1 Detailed Description

The Auditory Profile class.

See definition of auditory profile

**Todo** Give more documentation; implement all parts of the auditory profile.

Currently only the audiogram data is stored.

- 5.41.2 Member Function Documentation

Return ear information of channel number.

5.41.3 Member Data Documentation

5.41.3.1 AuditoryProfile::profile\_t::ear\_t AuditoryProfile::profile\_t::L

Left ear data.

5.41.3.2 AuditoryProfile::profile\_t::ear\_t AuditoryProfile::profile\_t::R

Right ear data.

The documentation for this class was generated from the following file:

auditory\_profile.h

5.42 AuditoryProfile::profile\_t::ear\_t Class Reference

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.

**Public Member Functions** 

void convert\_empty2normal ()

**Public Attributes** 

- AuditoryProfile::fmap\_t HTL
- AuditoryProfile::fmap\_t UCL
- 5.42.1 Detailed Description

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.


- 5.42.2 Member Function Documentation
- 5.42.2.1 void AuditoryProfile::profile\_t::ear\_t::convert\_empty2normal()
- 5.42.3 Member Data Documentation
- 5.42.3.1 AuditoryProfile::fmap\_t AuditoryProfile::profile\_t::ear\_t::HTL
- 5.42.3.2 AuditoryProfile::fmap t AuditoryProfile::profile t::ear t::UCL

The documentation for this class was generated from the following files:

- auditory\_profile.h
- auditory\_profile.cpp

# 5.43 bbcalib\_interface\_t Class Reference

Inheritance diagram for bbcalib\_interface\_t:

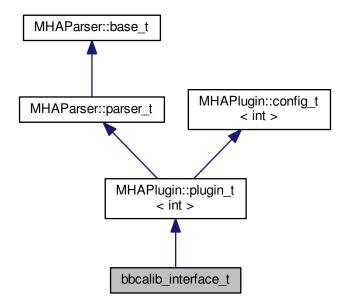

### **Public Member Functions**

- bbcalib\_interface\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- ~bbcalib\_interface\_t ()
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

### **Private Attributes**

- calibrator\_t calib\_in
- calibrator\_t calib\_out
- MHAParser::mhapluginloader\_t plugloader

**Additional Inherited Members** 

```
5.43.1 Constructor & Destructor Documentation
5.43.1.1 bbcalib_interface_t::bbcalib_interface_t (
                     const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & )
5.43.1.2 bbcalib interface t::~bbcalib interface t()
5.43.2 Member Function Documentation
5.43.2.1 mha_wave_t * bbcalib_interface_t::process (
                     mha wave t * s)
5.43.2.2 void bbcalib_interface_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t< int > (p. 692).
5.43.2.3 void bbcalib_interface_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< int > (p. 693).
5.43.3 Member Data Documentation
5.43.3.1 calibrator_t bbcalib_interface_t::calib_in [private]
5.43.3.2 calibrator t bbcalib_interface_t::calib_out [private]
5.43.3.3 MHAParser::mhapluginloader t bbcalib_interface_t::plugloader [private]
The documentation for this class was generated from the following file:

    transducers.cpp

5.44 calibrator_runtime_layer_t Class Reference
Public Member Functions
```

• calibrator\_runtime\_layer\_t (bool is\_input, const mhaconfig\_t &tf, calibrator\_

mha\_real\_t process (mha\_wave\_t \*\*)

variables\_t &vars)

#### **Static Private Member Functions**

- static unsigned int **firfirlen** (const std::vector< std::vector< float >> &)
- static unsigned int **firfir2fftlen** (unsigned int, const std::vector< std::vector< float >> &)

#### **Private Attributes**

- MHAFilter::fftfilter t fir
- MHASignal::quantizer\_t quant
- MHASignal::waveform\_t gain
- softclipper\_t softclip
- bool b\_is\_input
- · bool b use fir
- bool b\_use\_clipping
- MHASignal::loop\_wavefragment\_t speechnoise
- MHASignal::loop wavefragment t::playback mode t pmode
- 5.44.1 Constructor & Destructor Documentation
- 5.44.2 Member Function Documentation
- 5.44.2.2 unsigned int calibrator\_runtime\_layer\_t::firfirlen (
  - const std::vector < std::vector < float > > & fir ) [static], [private]
- 5.44.2.3 unsigned int calibrator\_runtime\_layer\_t::firfir2fftlen ( unsigned int *fragsize*,

```
const std::vector < std::vector < float > > & fir ) [static], [private]
```

- 5.44.3 Member Data Documentation
- **5.44.3.1** MHAFilter::fftfilter\_t calibrator\_runtime\_layer\_t::fir [private]
- **5.44.3.2** MHASignal::quantizer\_t calibrator\_runtime\_layer\_t::quant [private]
- **5.44.3.3** MHASignal::waveform\_t calibrator\_runtime\_layer\_t::gain [private]


- **5.44.3.4 softclipper\_t calibrator\_runtime\_layer\_t::softclip** [private]
- **5.44.3.5** bool calibrator\_runtime\_layer\_t::b\_is\_input [private]
- **5.44.3.6** bool calibrator\_runtime\_layer\_t::b\_use\_fir [private]
- **5.44.3.7 bool calibrator\_runtime\_layer\_t::b\_use\_clipping** [private]
- **5.44.3.8** MHASignal::loop\_wavefragment\_t calibrator\_runtime\_layer\_t::speechnoise [private]

The documentation for this class was generated from the following file:

## transducers.cpp

## 5.45 calibrator\_t Class Reference

Inheritance diagram for calibrator\_t:

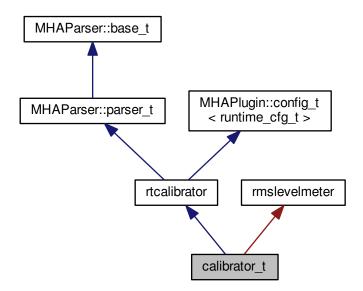

### **Public Member Functions**

```
    calibrator_t (algo_comm_t, bool is_input)
```

- void prepare (mhaconfig\_t &tf)
- void release ()
- mha\_wave\_t \* process (mha\_wave\_t \*s)

### **Private Member Functions**

- void update ()
- void update\_tau\_level ()
- void read levels ()

### **Private Attributes**

- bool b\_is\_input
- MHAEvents::patchbay\_t< calibrator\_t > patchbay
- calibrator\_variables\_t vars
- bool prepared

### **Additional Inherited Members**

```
5.45.1 Constructor & Destructor Documentation
```

**5.45.2** Member Function Documentation

Implements MHAPlugin::plugin\_t < runtime\_cfg\_t > (p. 692).

Reimplemented from  $MHAPlugin::plugin_t < runtime_cfg_t > (p. 693)$ .

The documentation for this class was generated from the following file:

transducers.cpp

5.46 calibrator\_variables\_t Class Reference

**Public Member Functions** 

calibrator\_variables\_t (bool is\_input, MHAParser::parser\_t &parent)

### **Public Attributes**

- MHAParser::vfloat\_t peaklevel
- MHAParser::mfloat t fir
- MHAParser::int t nbits
- MHAParser::float\_t tau\_level
- MHAParser::kw\_t spnoise\_mode
- MHAParser::vint\_t spnoise\_channels
- MHAParser::float\_t spnoise\_level
- MHAParser::vfloat mon t rmslevel
- MHAParser::parser\_t spnoise\_parser
- MHAParser::float\_mon\_t srate
- MHAParser::int\_mon\_t fragsize
- MHAParser::int\_mon\_t num\_channels
- MHAParser::parser\_t config\_parser
- softclipper\_variables\_t softclip
- MHAParser::bool\_t do\_clipping

```
5.46.1 Constructor & Destructor Documentation
5.46.1.1 calibrator variables t::calibrator variables t (
                      bool is input,
                      MHAParser::parser t & parent )
5.46.2 Member Data Documentation
5.46.2.1
         MHAParser::vfloat_t calibrator_variables_t::peaklevel
5.46.2.2
         MHAParser::mfloat t calibrator_variables_t::fir
         MHAParser::int t calibrator_variables_t::nbits
5.46.2.3
         MHAParser::float t calibrator variables t::tau level
         MHAParser::kw_t calibrator_variables_t::spnoise_mode
5.46.2.5
5.46.2.6
         MHAParser::vint t calibrator_variables_t::spnoise_channels
5.46.2.7
         MHAParser::float t calibrator_variables_t::spnoise_level
5.46.2.8
         MHAParser::vfloat mon t calibrator_variables_t::rmslevel
         MHAParser::parser t calibrator variables t::spnoise parser
5.46.2.10 MHAParser::float mon t calibrator variables t::srate
5.46.2.11
         MHAParser::int mon t calibrator variables t::fragsize
5.46.2.12 MHAParser::int mon t calibrator_variables_t::num_channels
5.46.2.13 MHAParser::parser_t calibrator_variables_t::config_parser
5.46.2.14 softclipper_variables_t calibrator_variables_t::softclip
5.46.2.15 MHAParser::bool t calibrator variables t::do clipping
```

The documentation for this class was generated from the following file:

### · transducers.cpp

### 5.47 cfg\_t Class Reference

### **Public Member Functions**

- cfg\_t (mha\_real\_t tau\_attack, mha\_real\_t tau\_decay, unsigned int nch, mha\_real\_←
   t start\_limit, mha\_real\_t slope\_db, mha\_real\_t fs)
- cfg\_t (unsigned int, unsigned int)
- cfg\_t (mhaconfig\_t chcfg, mha\_real\_t newlev, bool replace, mha\_real\_t len)
- void process (mha\_wave\_t \*)
- void process (mha\_spec\_t \*)

### **Public Attributes**

- mha\_real\_t start\_lin
- · mha\_real\_t alpha
- MHAFilter::o1flt\_lowpass\_t attack
- MHAFilter::o1flt\_maxtrack\_t decay
- · unsigned int channel

### **Private Attributes**

- mha\_real\_t gain\_wave\_
- mha\_real\_t gain\_spec\_
- bool replace\_
- bool use\_frozen\_
- MHASignal::waveform t frozen noise
- unsigned int pos

### 5.47.1 Constructor & Destructor Documentation

```
5.47.1.1 cfg_t::cfg_t (

mha_real_t tau_attack,
mha_real_t tau_decay,
unsigned int nch,
mha_real_t start_limit,
mha_real_t slope_db,
mha_real_t fs )

5.47.1.2 cfg_t::cfg_t (
```

unsigned int *ichannel*, unsigned int *numchannels* )


```
5.47.1.3 cfg_t::cfg_t (
                     mhaconfig_t chcfg,
                     mha real t newlev,
                     bool replace,
                     mha_real_t len )
5.47.2 Member Function Documentation
5.47.2.1 void cfg_t::process (
                     mha_wave_t * s ) [inline]
5.47.2.2 void cfg t::process (
                     mha_spec_t * s ) [inline]
5.47.3 Member Data Documentation
5.47.3.1 mha_real_t cfg_t::start_lin
5.47.3.2 mha_real_t cfg_t::alpha
5.47.3.3 MHAFilter::o1flt lowpass t cfg_t::attack
5.47.3.4
        MHAFilter::o1flt_maxtrack_t cfg_t::decay
5.47.3.5 unsigned int cfg t::channel
5.47.3.6
        mha_real_t cfg_t::gain_wave_ [private]
5.47.3.7 mha_real_t cfg_t::gain_spec_ [private]
5.47.3.8
        bool cfg_t::replace_ [private]
5.47.3.9 bool cfg_t::use_frozen_ [private]
5.47.3.10 MHASignal::waveform_t cfg_t::frozen_noise_ [private]
5.47.3.11 unsigned int cfg_t::pos [private]
```

The documentation for this class was generated from the following files:

- softclip.cpp
- example6.cpp
- noise.cpp

# 5.48 coherence::cohflt\_if\_t Class Reference

Inheritance diagram for coherence::cohflt\_if\_t:

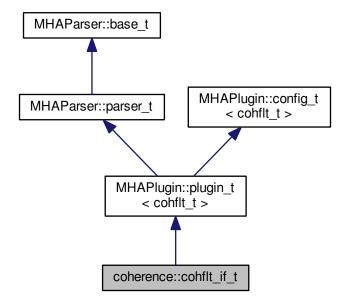

#### **Public Member Functions**

- cohflt\_if\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- void prepare (mhaconfig\_t &)
- void release ()
- mha\_spec\_t \* process (mha\_spec\_t \*)

### **Private Member Functions**

• void update ()

### **Private Attributes**

- MHAEvents::patchbay\_t< cohflt\_if\_t > patchbay
- vars\_t vars
- · const std::string algo

```
Additional Inherited Members
```


```
5.48.1 Constructor & Destructor Documentation
5.48.1.1 coherence::cohflt_if_t::cohflt_if_t (
                     const algo_comm_t & ac,
                     const std::string & th,
                     const std::string & al )
5.48.2 Member Function Documentation
5.48.2.1 void coherence::cohflt_if_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < cohflt t > (p. 692).
5.48.2.2 void coherence::cohflt_if_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin_t < cohflt_t > (p. 693).
5.48.2.3 mha spec t * coherence::cohflt_if_t::process (
                     mha_spec_t * s )
5.48.2.4 void coherence::cohflt_if_t::update( ) [private]
5.48.3 Member Data Documentation
5.48.3.1 MHAEvents::patchbay_t<cohflt_if_t> coherence::cohflt_if_t::patchbay [private]
5.48.3.2 vars_t coherence::cohflt_if_t::vars [private]
5.48.3.3 const std::string coherence::cohflt if t::algo [private]
```

The documentation for this class was generated from the following file:

coherence.cpp

## 5.49 coherence::cohflt\_t Class Reference

Inheritance diagram for coherence::cohflt\_t:

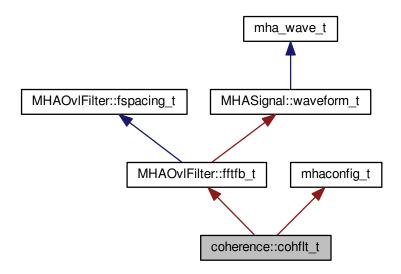

### **Public Member Functions**

- cohflt\_t (vars\_t &v, const mhaconfig\_t &icf, algo\_comm\_t iac, const std::string &name)
- mha spec t \* process (mha spec t \*)
- void insert ()

### **Private Attributes**

- unsigned int **nbands**
- bool avg\_ipd
- mha\_complex\_t cg
- float g
- float c\_scale
- float **c\_min**
- MHASignal::waveform\_t alpha
- · float limit
- MHAFilter::o1flt\_lowpass\_t lp1r
- MHAFilter::o1flt\_lowpass\_t lp1i
- MHA\_AC::spectrum\_t coh\_c
- MHA\_AC::waveform\_t coh\_rlp
- MHASignal::waveform\_t gain
- MHASignal::delay\_wave\_t gain\_delay

- MHASignal::spectrum\_t s\_out
- bool binvert
- MHAFilter::o1flt\_lowpass\_t lp1ltg
- bool b\_ltg
- std::vector< float > staticgain

### **Additional Inherited Members**

```
5.49.1 Constructor & Destructor Documentation
5.49.1.1 coherence::cohflt_t::cohflt_t (
                     vars t& v,
                     const mhaconfig t & icf,
                     algo comm t iac,
                     const std::string & name )
5.49.2 Member Function Documentation
5.49.2.1 mha spec t * coherence::cohflt_t::process (
                     mha spec t * s)
5.49.2.2 void coherence::cohflt t::insert ( )
5.49.3 Member Data Documentation
5.49.3.1 unsigned int coherence::cohflt_t::nbands [private]
5.49.3.2 bool coherence::cohflt_t::avg_ipd [private]
5.49.3.3 mha_complex_t coherence::cohflt_t::cg [private]
5.49.3.4 float coherence::cohflt_t::g [private]
5.49.3.5 float coherence::cohflt_t::c_scale [private]
5.49.3.6 float coherence::cohflt_t::c_min [private]
5.49.3.7
        MHASignal::waveform_t coherence::cohflt_t::alpha [private]
5.49.3.8 float coherence::cohflt_t::limit [private]
```

**5.49.3.9** MHAFilter::o1flt\_lowpass\_t coherence::cohflt\_t::lp1r [private]


```
5.49.3.10 MHAFilter::o1flt_lowpass_t coherence::cohflt_t::lp1i [private]
5.49.3.11 MHA_AC::spectrum_t coherence::cohflt_t::coh_c [private]
5.49.3.12 MHA_AC::waveform_t coherence::cohflt_t::coh_rlp [private]
5.49.3.13 MHASignal::waveform_t coherence::cohflt_t::gain [private]
5.49.3.14 MHASignal::delay_wave_t coherence::cohflt_t::gain_delay [private]
5.49.3.15 MHASignal::spectrum_t coherence::cohflt_t::s_out [private]
5.49.3.16 bool coherence::cohflt_t::blnvert [private]
5.49.3.17 MHAFilter::o1flt_lowpass_t coherence::cohflt_t::lp1ltg [private]
5.49.3.18 bool coherence::cohflt_t::b_ltg [private]
5.49.3.19 std::vector<float> coherence::cohflt_t::staticgain [private]
```

The documentation for this class was generated from the following file:

## coherence.cpp

## 5.50 coherence::vars\_t Class Reference

Inheritance diagram for coherence::vars\_t:

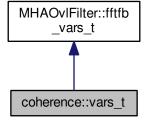

### **Public Member Functions**

## vars\_t (MHAParser::parser\_t \*)

### **Public Attributes**

- MHAParser::kw\_t tau\_unitMHAParser::vfloat t tau
- MHAParser::vfloat\_t alpha
- MHAParser::float\_t limit
- MHAParser::vfloat\_t mapping
- MHAParser::kw t average
- MHAParser::bool\_t invert
- MHAParser::bool\_t ltgcomp
- MHAParser::vfloat\_t ltgtau
- MHAParser::vfloat\_t staticgain
- MHAParser::int\_t delay
- 5.50.1 Constructor & Destructor Documentation
- 5.50.1.1 coherence::vars\_t::vars\_t (


  MHAParser::parser t \* p )
- 5.50.2 Member Data Documentation
- 5.50.2.1 MHAParser::kw\_t coherence::vars\_t::tau\_unit
- 5.50.2.2 MHAParser::vfloat\_t coherence::vars\_t::tau
- 5.50.2.3 MHAParser::vfloat\_t coherence::vars\_t::alpha
- 5.50.2.4 MHAParser::float\_t coherence::vars\_t::limit
- 5.50.2.5 MHAParser::vfloat t coherence::vars\_t::mapping
- 5.50.2.6 MHAParser::kw\_t coherence::vars\_t::average
- 5.50.2.7 MHAParser::bool\_t coherence::vars\_t::invert
- 5.50.2.8 MHAParser::bool\_t coherence::vars\_t::ltgcomp
- 5.50.2.9 MHAParser::vfloat\_t coherence::vars\_t::ltgtau
- 5.50.2.10 MHAParser::vfloat t coherence::vars t::staticgain
- 5.50.2.11 MHAParser::int t coherence::vars\_t::delay

The documentation for this class was generated from the following file:

· coherence.cpp

## 5.51 combc\_if\_t Class Reference

Inheritance diagram for combc\_if\_t:

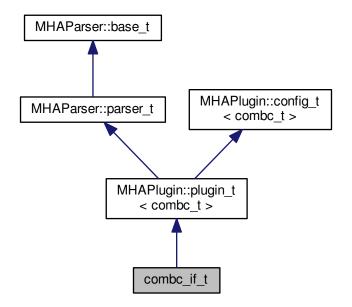

### **Public Member Functions**

- combc\_if\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- void prepare (mhaconfig\_t &)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*)

# **Private Attributes**

- MHAParser::int\_t outchannels
- MHAParser::bool\_t interleaved
- MHAParser::string\_t channel\_gain\_name
- MHAParser::string\_t element\_gain\_name

**Additional Inherited Members** 

```
5.51.1 Constructor & Destructor Documentation
5.51.1.1 combc_if_t::combc_if_t (
                    const algo comm t & iac,
                    const std::string & ,
                    const std::string & )
5.51.2 Member Function Documentation
5.51.2.1 void combc_if_t::prepare (
                    mhaconfig t & chcfg ) [virtual]
Implements MHAPlugin::plugin_t < combc_t > (p. 692).
5.51.2.2 mha_wave_t * combc_if_t::process (
                    mha wave t * s)
5.51.2.3 mha_spec_t * combc_if_t::process (
                    mha\_spec\_t * s)
5.51.3 Member Data Documentation
5.51.3.1 MHAParser::int tcombc_if_t::outchannels [private]
5.51.3.2 MHAParser::bool_t combc_if_t::interleaved [private]
5.51.3.3 MHAParser::string t combc_if_t::channel_gain_name [private]
        MHAParser::string t combc if t::element gain name [private]
```

The documentation for this class was generated from the following file:

combinechannels.cpp

5.52 combc\_t Class Reference

**Public Member Functions** 

- combc\_t (algo\_comm\_t ac, mhaconfig\_t cfg\_input, mhaconfig\_t cfg\_output, std ::vector < float > channel\_gains, const std::string &element\_gain\_name, bool interleaved)
- mha\_wave\_t \* process (mha\_wave\_t \*s)
- mha\_spec\_t \* process (mha\_spec\_t \*s)

#### **Private Attributes**

```
    algo_comm_t ac_

    bool interleaved

    unsigned int nbands

    MHASignal::waveform_t w_out

    MHASignal::spectrum t s out

   std::vector< mha_real_t > channel_gains_
   std::string element_gain_name_
5.52.1 Constructor & Destructor Documentation
5.52.1.1 combc_t::combc_t (
                    algo_comm_t ac,
                    mhaconfig_t cfg_input,
                    mhaconfig t cfg_output,
                    std::vector< float > channel_gains,
                    const std::string & element_gain_name,
                    bool interleaved )
5.52.2 Member Function Documentation
5.52.2.1 mha_wave_t * combc_t::process (
                    mha_wave_t * s )
5.52.2.2 mha_spec_t * combc_t::process (
                    mha_spec_t * s )
5.52.3 Member Data Documentation
5.52.3.1 algo_comm_t combc_t::ac_ [private]
5.52.3.2 bool combc_t::interleaved_ [private]
5.52.3.3 unsigned int combc_t::nbands [private]
5.52.3.4
        MHASignal::waveform_t combc_t::w_out [private]
5.52.3.5 MHASignal::spectrum_t combc_t::s_out [private]
5.52.3.6 std::vector<mha_real_t> combc_t::channel_gains_ [private]
        std::string combc_t::element_gain_name_ [private]
```

The documentation for this class was generated from the following file:

### combinechannels.cpp

### 5.53 comm\_var\_t Struct Reference

Algorithm communication variable structure.

### **Public Attributes**

• unsigned int data\_type

Type of data.

unsigned int num entries

Number of entries.

· unsigned int stride

length of one row (C interpretation) or of one column (Fortran interpretation)

void \* data

Pointer to variable data.

## 5.53.1 Detailed Description

Algorithm communication variable structure.

Algorithm communication variables (AC variables) are objects of this type. The member data is a pointer to the variable 'data'. This pointer has to be valid for the lifetime of this AC variable. The member 'data\_type' can be one of the predefined types or any user defined type. The member 'num\_entries' describes the number of elements of this base type stored at the pointer address.

```
An AC variable can be registered with the \ref algo_comm_t::insert_var "insert_var" function.
```

## 5.53.2 Member Data Documentation

5.53.2.1 comm\_var\_t::data\_type

Type of data.

This can be one of the predefined types

- MHA AC CHAR
- · MHA AC INT
- MHA AC MHAREAL
- · MHA AC FLOAT
- · MHA AC DOUBLE
- MHA AC MHACOMPLEX
- MHA AC VEC FLOAT or any user defined type with a value greater than
- MHA\_AC\_USER

5.53.2.2 comm\_var\_t::num\_entries

Number of entries.

5.53.2.3 comm\_var\_t::stride

length of one row (C interpretation) or of one column (Fortran interpretation)

5.53.2.4 comm\_var\_t::data


Pointer to variable data.

The documentation for this struct was generated from the following files:

- · mha.h
- mha\_algo\_comm.cpp

# 5.54 cpuload\_t Class Reference

Inheritance diagram for cpuload\_t:

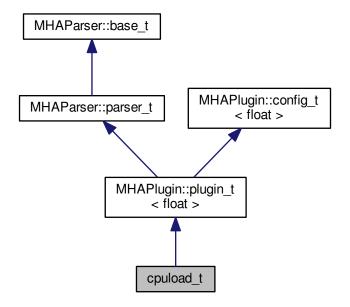

### **Public Member Functions**

```
cpuload_t (algo_comm_t, const char *, const char *)
mha_spec_t * process (mha_spec_t *)
mha_wave_t * process (mha_wave_t *)
void prepare (mhaconfig_t &)
```

### **Private Member Functions**

- void compute\_something ()
- void compute\_something\_else ()

### **Private Attributes**

```
    MHAParser::float_t factor
```

- MHAParser::bool\_t use\_sine
- · float phase
- · volatile float result
- std::vector< float > table

### **Additional Inherited Members**

```
5.54.1 Constructor & Destructor Documentation
```

5.54.2 Member Function Documentation

Implements MHAPlugin::plugin\_t< float > (p. 692).

mhaconfig\_t & cf ) [virtual]

```
5.54.2.4 void cpuload_t::compute_something() [inline], [private]
5.54.2.5 void cpuload_t::compute_something_else() [inline], [private]
5.54.3 Member Data Documentation
5.54.3.1 MHAParser::float_t cpuload_t::factor [private]
5.54.3.2 MHAParser::bool_t cpuload_t::use_sine [private]
5.54.3.3 float cpuload_t::phase [private]
5.54.3.4 volatile float cpuload_t::result [private]
```


The documentation for this class was generated from the following file:

**5.54.3.5** std::vector<float> cpuload\_t::table [private]

## · cpuload.cpp

# 5.55 db\_if\_t Class Reference

Inheritance diagram for db\_if\_t:

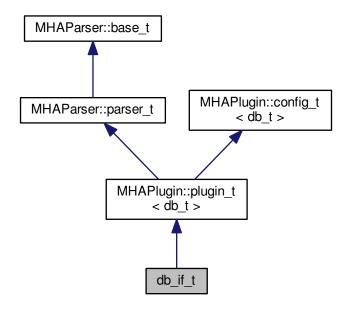

### **Public Member Functions**

```
    db_if_t (algo_comm_t, std::string, std::string)
    mha_wave_t * process (mha_wave_t *)
```

- void prepare (mhaconfig\_t &)
- void release ()
- ~db\_if\_t ()

# **Private Attributes**

- MHAEvents::patchbay\_t< db\_if\_t > patchbay
- MHAParser::int\_t fragsize
- MHAParser::mhapluginloader\_t plugloader
- std::string chain
- std::string algo
- bool bypass

#### **Additional Inherited Members**

```
5.55.1 Constructor & Destructor Documentation
```

Reimplemented from  $MHAPlugin::plugin_t < db_t > (p. 693)$ .

void ) [virtual]

### 5.55.3 Member Data Documentation

```
5.55.3.1 MHAEvents::patchbay_t < db_if_t > db_if_t::patchbay [private]
```

```
5.55.3.2 MHAParser::int_t db_if_t::fragsize [private]
```

**5.55.3.3** MHAParser::mhapluginloader\_t db\_if\_t::plugloader [private]

```
5.55.3.4 std::string db_if_t::chain [private]
```


5.55.3.5 std::string db\_if\_t::algo [private]

The documentation for this class was generated from the following file:

### · db.cpp

## 5.56 db\_t Class Reference

Inheritance diagram for db\_t:

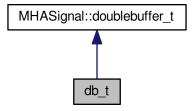

#### **Public Member Functions**

- **db\_t** (unsigned int outer\_fragsize, unsigned int inner\_fragsize, unsigned int nch\_in, unsigned int nch\_out, **MHAParser::mhapluginloader\_t** &plug)
- mha\_wave\_t \* inner\_process (mha\_wave\_t \*)

#### **Private Attributes**

MHAParser::mhapluginloader\_t & plugloader

**Additional Inherited Members** 

```
5.56.1 Constructor & Destructor Documentation
```

5.56.2 Member Function Documentation

Implements MHASignal::doublebuffer\_t (p. 733).

5.56.3 Member Data Documentation


**5.56.3.1** MHAParser::mhapluginloader\_t&db\_t::plugloader [private]

The documentation for this class was generated from the following file:

· db.cpp

## 5.57 dc::dc\_if\_t Class Reference

Inheritance diagram for dc::dc\_if\_t:

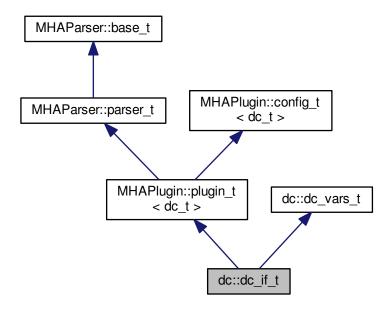

#### **Public Member Functions**

- dc\_if\_t (const algo\_comm\_t &ac\_, const std::string &th\_, const std::string &al\_)
- void prepare (mhaconfig\_t &tf)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*)

### **Private Member Functions**

- void update\_monitors ()
  - Called from within the processing routines: updates the monitor variables.
- void update ()

Called by MHA configuration change event mechanism: creates new runtime configuration.

#### **Private Attributes**

- std::string algo
- wideband\_inhib\_vars\_t wbinhib
- MHAEvents::patchbay\_t< dc\_if\_t > patchbay

```
Additional Inherited Members
```


```
5.57.1 Constructor & Destructor Documentation
5.57.1.1 dc::dc_if_t::dc_if_t (
                     const algo_comm_t & ac_,
                     const std::string & th_,
                     const std::string & al )
5.57.2 Member Function Documentation
5.57.2.1 void dc::dc_if_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < dc \ t > (p. 692).
5.57.2.2 mha_wave_t * dc::dc_if_t::process (
                     mha_wave_t * s_in )
5.57.2.3 mha_spec_t * dc::dc_if_t::process (
                     mha spec t * s_in)
5.57.2.4 void dc::dc_if_t::update_monitors() [private]
Called from within the processing routines: updates the monitor variables.
5.57.2.5 void dc::dc if t::update() [private]
Called by MHA configuration change event mechanism: creates new runtime configuration.
5.57.3 Member Data Documentation
5.57.3.1 std::string dc::dc_if_t::algo [private]
        wideband inhib vars t dc::dc_if_t::wbinhib [private]
5.57.3.3 MHAEvents::patchbay_t<dc_if_t> dc::dc_if_t::patchbay [private]
```

The documentation for this class was generated from the following file:

dc.cpp

## 5.58 dc::dc t Class Reference

### Inheritance diagram for dc::dc\_t:

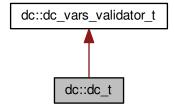

#### **Public Member Functions**

- dc\_t (dc\_vars\_t vars, mha\_real\_t filter\_rate, unsigned int nch, algo\_comm\_t ac, mha
   \_domain\_t domain, unsigned int fftlen, std::string algo)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*, wb\_inhib\_cfg\_t \*wbinhib)
- void explicit\_insert ()
- unsigned get\_nbands () const

Number of frequency bands accessor.

- const MHASignal::waveform t & get level in db () const
- const MHASignal::waveform\_t & get\_level\_in\_db\_adjusted () const

### **Private Attributes**

- std::vector< MHATableLookup::linear\_table\_t > gt
- MHAFilter::o1flt lowpass t rmslevel
- MHAFilter::o1flt\_lowpass\_t attack
- MHAFilter::o1flt\_maxtrack\_t decay
- bool powersum
- bool bypass
- unsigned int naudiochannels
- unsigned int nbands
- MHA\_AC::waveform\_t level\_in\_db
- MHA\_AC::waveform\_t level\_in\_db\_adjusted
- MHA\_AC::waveform\_t inhib\_gain
- MHASignal::waveform\_t max\_level\_difference
- unsigned int k\_nyquist

#### **Additional Inherited Members**

```
5.58.1 Constructor & Destructor Documentation
5.58.1.1 dc::dc_t::dc_t (
                    dc vars t vars,
                    mha real t filter_rate,
                    unsigned int nch,
                    algo comm t ac,
                    mha_domain_t domain,
                    unsigned int fftlen,
                    std::string algo )
5.58.2 Member Function Documentation
5.58.2.1 mha wave t * dc::dc_t::process (
                    mha wave t * s)
5.58.2.2 mha_spec_t * dc::dc_t::process (
                    mha spec t * s,
                    wb_inhib_cfg_t * wbinhib )
5.58.2.3 void dc::dc_t::explicit_insert ( )
5.58.2.4 unsigned dc::dc_t::get_nbands ( ) const [inline]
Number of frequency bands accessor.
5.58.2.5 const MHASignal::waveform_t& dc::dc_t::get_level_in_db( ) const [inline]
5.58.2.6 const MHASignal::waveform_t& dc::dc_t::get_level_in_db_adjusted ( ) const
         [inline]
5.58.3 Member Data Documentation
5.58.3.1 std::vector<MHATableLookup::linear_table_t> dc::dc_t::gt [private]
5.58.3.2
        MHAFilter::o1flt lowpass t dc::dc_t::rmslevel [private]
5.58.3.3 MHAFilter::o1flt_lowpass_t dc::dc_t::attack [private]
5.58.3.4
        MHAFilter::o1flt_maxtrack_t dc::dc_t::decay [private]
5.58.3.5 booldc::dc_t::powersum [private]
```


```
5.58.3.6 bool dc::dc_t::bypass [private]
5.58.3.7 unsigned int dc::dc_t::naudiochannels [private]
5.58.3.8 unsigned int dc::dc_t::nbands [private]
5.58.3.9 MHA_AC::waveform_t dc::dc_t::level_in_db [private]
5.58.3.10 MHA_AC::waveform_t dc::dc_t::level_in_db_adjusted [private]
5.58.3.11 MHA_AC::waveform_t dc::dc_t::inhib_gain [private]
5.58.3.12 MHASignal::waveform_t dc::dc_t::max_level_difference [private]
5.58.3.13 unsigned int dc::dc_t::k_nyquist [private]
```

The documentation for this class was generated from the following file:

## · dc.cpp

5.59 dc::dc\_vars\_t Class Reference

Inheritance diagram for dc::dc\_vars\_t:

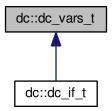

**Public Member Functions** 

dc\_vars\_t (MHAParser::parser\_t &)

#### **Public Attributes**

- MHAParser::bool t powersum
- MHAParser::mfloat\_t gtdata
- MHAParser::vfloat t gtmin
- MHAParser::vfloat t gtstep
- MHAParser::vfloat\_t taurmslevel
- MHAParser::vfloat t tauattack
- MHAParser::vfloat t taudecay
- MHAParser::string\_t filterbank
- std::string cf\_name
- std::string **ef\_name**
- std::string bw name
- MHAParser::string t chname
- MHAParser::bool\_t bypass
- MHAParser::string\_t clientid
- MHAParser::string\_t gainrule
- MHAParser::string t preset
- MHAParser::int mon t modified
- MHAParser::mfloat\_t max\_level\_difference
- MHAParser::vfloat\_mon\_t input\_level
- MHAParser::vfloat\_mon\_t filtered\_level
- MHAParser::vfloat\_mon\_t center\_frequencies
- MHAParser::vfloat\_mon\_t edge\_frequencies
- MHAParser::vfloat mon t band weights
- · MHAParser::bool tuse wbinhib
- 5.59.1 Constructor & Destructor Documentation
- 5.59.1.1 dc::dc\_vars\_t::dc\_vars\_t (

  MHAParser::parser\_t & p )
- 5.59.2 Member Data Documentation
- 5.59.2.1 MHAParser::bool\_t dc::dc\_vars\_t::powersum
- 5.59.2.2 MHAParser::mfloat\_t dc::dc\_vars\_t::gtdata
- 5.59.2.3 MHAParser::vfloat\_t dc::dc\_vars\_t::gtmin
- 5.59.2.4 MHAParser::vfloat\_t dc::dc\_vars\_t::gtstep
- 5.59.2.5 MHAParser::vfloat t dc::dc vars t::taurmslevel


5.59.2.6	MHAParser::vfloat_t dc::dc_vars_t::tauattack
5.59.2.7	MHAParser::vfloat_t dc::dc_vars_t::taudecay
5.59.2.8	MHAParser::string_t dc::dc_vars_t::filterbank
5.59.2.9	std::string dc::dc_vars_t::cf_name
5.59.2.10	std::string dc::dc_vars_t::ef_name
5.59.2.11	std::string dc::dc_vars_t::bw_name
5.59.2.12	MHAParser::string_t dc::dc_vars_t::chname
5.59.2.13	MHAParser::bool_t dc::dc_vars_t::bypass
5.59.2.14	MHAParser::string_t dc::dc_vars_t::clientid
5.59.2.15	MHAParser::string_t dc::dc_vars_t::gainrule
5.59.2.16	MHAParser::string_t dc::dc_vars_t::preset
5.59.2.17	MHAParser::int_mon_t dc::dc_vars_t::modified
5.59.2.18	MHAParser::mfloat_t dc::dc_vars_t::max_level_difference
5.59.2.19	MHAParser::vfloat_mon_t dc::dc_vars_t::input_level
5.59.2.20	MHAParser::vfloat_mon_t dc::dc_vars_t::filtered_level
5.59.2.21	MHAParser::vfloat_mon_t dc::dc_vars_t::center_frequencies
5.59.2.22	MHAParser::vfloat_mon_t dc::dc_vars_t::edge_frequencies
5.59.2.23	MHAParser::vfloat_mon_t dc::dc_vars_t::band_weights
5.59.2.24	MHAParser::bool_t dc::dc_vars_t::use_wbinhib

The documentation for this class was generated from the following file:

# • dc.cpp

5.60 dc::dc\_vars\_validator\_t Class Reference

Inheritance diagram for dc::dc\_vars\_validator\_t:

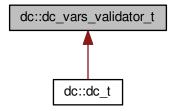

### **Public Member Functions**

• dc\_vars\_validator\_t (dc\_vars\_t &v, unsigned int s, mha\_domain\_t domain)

5.60.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

dc.cpp

5.61 dc::wb\_inhib\_cfg\_t Class Reference

**Public Member Functions** 

wb\_inhib\_cfg\_t (const wideband\_inhib\_vars\_t &vars)

### **Public Attributes**

- std::vector< float > weights
- float dl\_map\_min
- float dl\_map\_max
- float dl diff
- float I\_min
- std::vector< std::vector< float >> g\_scale

### 5.61.1 Constructor & Destructor Documentation

#### 5.61.2 Member Data Documentation


- 5.61.2.1 std::vector<float> dc::wb\_inhib\_cfg\_t::weights
- 5.61.2.2 float dc::wb\_inhib\_cfg\_t::dl\_map\_min
- 5.61.2.3 float dc::wb\_inhib\_cfg\_t::dl\_map\_max
- 5.61.2.4 float dc::wb\_inhib\_cfg\_t::dl\_diff
- 5.61.2.5 float dc::wb\_inhib\_cfg\_t::l\_min
- 5.61.2.6 std::vector<std::vector<float> > dc::wb\_inhib\_cfg\_t::g\_scale

The documentation for this class was generated from the following file:

## dc.cpp

## 5.62 dc::wideband\_inhib\_vars\_t Class Reference

Inheritance diagram for dc::wideband\_inhib\_vars\_t:

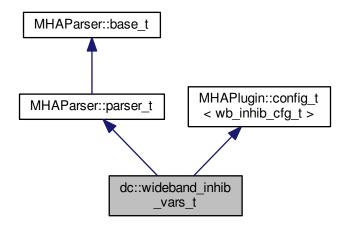

#### **Public Member Functions**

- wideband\_inhib\_vars\_t ()
- void **setchannels** (unsigned int ch, unsigned int bnds)
- wb\_inhib\_cfg\_t \* current ()
- void update ()

#### **Public Attributes**

- MHAParser::vfloat\_t weights
- MHAParser::float\_t dl\_map\_min
- MHAParser::float\_t dl\_map\_max
- MHAParser::float t1 min
- MHAParser::mfloat\_t g\_scale
- MHAEvents::patchbay\_t< wideband\_inhib\_vars\_t > patchbay
- unsigned int channels
- · unsigned int bands

#### **Additional Inherited Members**

```
5.62.1 Constructor & Destructor Documentation
```

- 5.62.1.1 dc::wideband\_inhib\_vars\_t::wideband\_inhib\_vars\_t()
- 5.62.2 Member Function Documentation
- 5.62.2.2 wb\_inhib\_cfg\_t\* dc::wideband\_inhib\_vars\_t::current() [inline]
- 5.62.2.3 void dc::wideband\_inhib\_vars\_t::update ( )
- 5.62.3 Member Data Documentation
- 5.62.3.1 MHAParser::vfloat t dc::wideband inhib vars t::weights
- 5.62.3.2 MHAParser::float\_t dc::wideband\_inhib\_vars\_t::dl\_map\_min
- 5.62.3.3 MHAParser::float t dc::wideband\_inhib\_vars\_t::dl\_map\_max
- 5.62.3.4 MHAParser::float t dc::wideband inhib vars t::1 min


- 5.62.3.5 MHAParser::mfloat\_t dc::wideband\_inhib\_vars\_t::g\_scale
- 5.62.3.6 MHAEvents::patchbay\_t<wideband\_inhib\_vars\_t> dc::wideband\_inhib\_vars\_t← ::patchbay
- 5.62.3.7 unsigned int dc::wideband\_inhib\_vars\_t::channels
- 5.62.3.8 unsigned int dc::wideband\_inhib\_vars\_t::bands

The documentation for this class was generated from the following file:

## · dc.cpp

## 5.63 dc\_simple::dc\_if\_t Class Reference

Inheritance diagram for dc\_simple::dc\_if\_t:

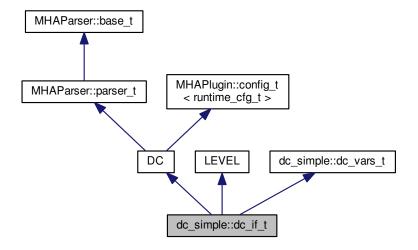

#### **Public Member Functions**

- dc\_if\_t (const algo\_comm\_t &ac\_, const std::string &th\_, const std::string &al\_)
- void prepare (mhaconfig\_t &tf)
- void release ()
- mha\_spec\_t \* process (mha\_spec\_t \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Private Member Functions**

```
    void update_dc ()
```

- void update\_level ()
- void has\_been\_modified ()
- void read\_modified ()
- void update\_level\_mon ()
- void update gain mon ()

#### **Private Attributes**

```
    MHAParser::string_t clientid
```

- MHAParser::string\_t gainrule
- MHAParser::string\_t preset
- MHAParser::int mon t modified
- MHAParser::vfloat\_mon\_t mon\_l
- MHAParser::vfloat\_mon\_t mon\_g
- MHAParser::string t filterbank
- MHAParser::vfloat\_mon\_t center\_frequencies
- MHAParser::vfloat mon t edge frequencies
- MHAEvents::patchbay\_t< dc\_if\_t > patchbay
- bool prepared

#### **Additional Inherited Members**

```
5.63.1 Constructor & Destructor Documentation
```

5.63.2 Member Function Documentation

Implements MHAPlugin::plugin\_t < runtime\_cfg\_t > (p. 692).

Reimplemented from MHAPlugin::plugin\_t< runtime\_cfg\_t > (p. 693).


```
5.63.2.3 mha_spec_t * dc_simple::dc_if_t::process (
                    mha\_spec\_t * s)
5.63.2.4 mha_wave_t * dc_simple::dc_if_t::process (
                    mha_wave_t * s
5.63.2.5 void dc_simple::dc_if_t::update_dc( ) [private]
5.63.2.6 void dc_simple::dc_if_t::update_level( ) [private]
5.63.2.7 void dc_simple::dc_if_t::has_been_modified( ) [inline], [private]
5.63.2.8 void dc_simple::dc_if_t::read_modified() [inline], [private]
5.63.2.9 void dc_simple::dc_if_t::update_level_mon() [private]
5.63.2.10 void dc_simple::dc_if_t::update_gain_mon() [private]
5.63.3 Member Data Documentation
        MHAParser::string t dc_simple::dc_if_t::clientid [private]
        MHAParser::string t dc_simple::dc_if_t::gainrule [private]
5.63.3.3 MHAParser::string_t dc_simple::dc_if_t::preset [private]
5.63.3.4
        MHAParser::int_mon_t dc_simple::dc_if_t::modified [private]
5.63.3.5 MHAParser::vfloat_mon_t dc_simple::dc_if_t::mon_l [private]
5.63.3.6
        MHAParser::vfloat_mon_t dc_simple::dc_if_t::mon_g [private]
5.63.3.7
        MHAParser::string_t dc_simple::dc_if_t::filterbank [private]
5.63.3.8
        MHAParser::vfloat_mon_t dc_simple::dc_if_t::center_frequencies [private]
5.63.3.9 MHAParser::vfloat_mon_t dc_simple::dc_if_t::edge_frequencies [private]
5.63.3.10 MHAEvents::patchbay_t<dc_if_t> dc_simple::dc_if_t::patchbay [private]
5.63.3.11 bool dc_simple::dc_if_t::prepared [private]
```

The documentation for this class was generated from the following file:

## dc\_simple.cpp

## 5.64 dc\_simple::dc\_t Class Reference

Inheritance diagram for dc\_simple::dc\_t:

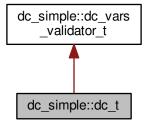

#### Classes

· class line\_t

### **Public Member Functions**

- dc\_t (const dc\_vars\_t &vars, mha\_real\_t filter\_rate, unsigned int nch, unsigned int fftlen)
- mha\_spec\_t \* process (mha\_spec\_t \*, mha\_wave\_t \*level\_db)
- mha\_wave\_t \* process (mha\_wave\_t \*, mha\_wave\_t \*level\_db)

#### **Public Attributes**

- std::vector< float > mon\_l
- std::vector< float > mon\_g

#### **Private Attributes**

- std::vector< mha\_real\_t > expansion\_threshold
- std::vector< mha\_real\_t > limiter\_threshold
- std::vector< line\_t > compression
- std::vector< line\_t > expansion
- std::vector< line\_t > limiter
- std::vector< mha\_real\_t > maxgain
- unsigned int nbands

**Additional Inherited Members** 

```
5.64.1 Constructor & Destructor Documentation
5.64.1.1 dc_simple::dc_t::dc_t (
                      const dc_vars_t & vars,
                      mha_real_t filter_rate,
                      unsigned int nch,
                      unsigned int fftlen )
5.64.2 Member Function Documentation
5.64.2.1 mha_spec_t * dc_simple::dc_t::process (
                      mha_spec_t * s,
                      mha_wave_t * level_db )
5.64.2.2 mha_wave_t * dc_simple::dc_t::process (
                      mha_wave_t * s,
                      mha wave t * level_db )
5.64.3 Member Data Documentation
5.64.3.1 std::vector<mha_real_t> dc_simple::dc_t::expansion_threshold [private]
5.64.3.2 std::vector<mha_real_t> dc_simple::dc_t::limiter_threshold [private]
\textbf{5.64.3.3} \quad \textbf{std::vector} < \textbf{line\_t} > \textbf{dc\_simple::dc\_t::compression} \quad \texttt{[private]}
5.64.3.4
         std::vector<line_t> dc_simple::dc_t::expansion [private]
5.64.3.5
         std::vector<line t> dc_simple::dc_t::limiter [private]
         std::vector<mha real t> dc simple::dc t::maxgain [private]
5.64.3.7
         unsigned int dc_simple::dc_t::nbands [private]
5.64.3.8
         std::vector<float> dc simple::dc t::mon l
5.64.3.9 std::vector<float> dc_simple::dc_t::mon_g
```

The documentation for this class was generated from the following file:

## dc\_simple.cpp

```
5.65 dc_simple::dc_t::line_t Class Reference
```

**Public Member Functions** 

```
    line_t (mha_real_t x1, mha_real_t y1, mha_real_t x2, mha_real_t y2)
    line_t (mha_real_t x1, mha_real_t y1, mha_real_t slope)
    mha_real_t operator() (mha_real_t x)
```

**Private Attributes** 

```
mha_real_t m
```

mha\_real\_t y0

```
5.65.1 Constructor & Destructor Documentation
```

```
5.65.1.1 dc_simple::dc_t::line_t::line_t (

mha_real_t x1,

mha_real_t y1,

mha_real_t x2,

mha_real_t y2 )

5.65.1.2 dc_simple::dc_t::line_t::line_t (
```

```
mha_real_t y1,
mha_real_t y1,
mha_real_t slope )
```

5.65.2 Member Function Documentation

5.65.3 Member Data Documentation

```
5.65.3.1 mha_real_t dc_simple::dc_t::line_t::m [private]
```


```
5.65.3.2 mha_real_t dc_simple::dc_t::line_t::y0 [private]
```

The documentation for this class was generated from the following file:

dc\_simple.cpp

## 5.66 dc\_simple::dc\_vars\_t Class Reference

Inheritance diagram for dc\_simple::dc\_vars\_t:

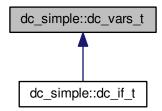

#### **Public Member Functions**

dc\_vars\_t (MHAParser::parser\_t &)

#### **Public Attributes**

- MHAParser::vfloat\_t g50
- MHAParser::vfloat\_t g80
- MHAParser::vfloat\_t maxgain
- MHAParser::vfloat\_t expansion\_threshold
- MHAParser::vfloat\_t expansion\_slope
- MHAParser::vfloat\_t limiter\_threshold
- MHAParser::vfloat t tauattack
- MHAParser::vfloat\_t taudecay
- MHAParser::bool\_t bypass

### 5.66.1 Constructor & Destructor Documentation

- 5.66.1.1 dc\_simple::dc\_vars\_t::dc\_vars\_t (


  MHAParser::parser\_t & p )
- 5.66.2 Member Data Documentation
- 5.66.2.1 MHAParser::vfloat\_t dc\_simple::dc\_vars\_t::g50
- 5.66.2.2 MHAParser::vfloat\_t dc\_simple::dc\_vars\_t::g80

- 5.66.2.3 MHAParser::vfloat\_t dc\_simple::dc\_vars\_t::maxgain
- 5.66.2.4 MHAParser::vfloat\_t dc\_simple::dc\_vars\_t::expansion\_threshold
- 5.66.2.5 MHAParser::vfloat\_t dc\_simple::dc\_vars\_t::expansion\_slope
- 5.66.2.6 MHAParser::vfloat t dc\_simple::dc\_vars\_t::limiter\_threshold
- 5.66.2.7 MHAParser::vfloat\_t dc\_simple::dc\_vars\_t::tauattack
- 5.66.2.8 MHAParser::vfloat\_t dc\_simple::dc\_vars\_t::taudecay
- 5.66.2.9 MHAParser::bool\_t dc\_simple::dc\_vars\_t::bypass

The documentation for this class was generated from the following file:

- · dc simple.cpp
- 5.67 dc simple::dc vars validator t Class Reference

Inheritance diagram for dc\_simple::dc\_vars\_validator\_t:

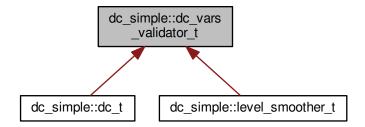

**Public Member Functions** 

dc\_vars\_validator\_t (const dc\_vars\_t &v, unsigned int s)


#### 5.67.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

· dc\_simple.cpp

## 5.68 dc\_simple::level\_smoother\_t Class Reference

Inheritance diagram for dc\_simple::level\_smoother\_t:

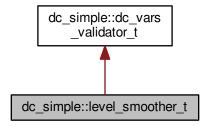

#### **Public Member Functions**

- level\_smoother\_t (const dc\_vars\_t &vars, mha\_real\_t filter\_rate, mhaconfig\_t buscfg)
- mha\_wave\_t \* process (mha\_spec\_t \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)

## **Private Attributes**

- MHAFilter::o1flt\_lowpass\_t attack
- MHAFilter::o1flt\_maxtrack\_t decay
- unsigned int nbands
- unsigned int fftlen
- MHASignal::waveform\_t level\_wave
- MHASignal::waveform\_t level\_spec

#### **Additional Inherited Members**


```
5.68.1 Constructor & Destructor Documentation
5.68.1.1 dc_simple::level_smoother_t::level_smoother_t (
                    const dc_vars_t & vars,
                    mha real t filter rate,
                    mhaconfig_t buscfg )
5.68.2 Member Function Documentation
5.68.2.1 mha wave t * dc_simple::level_smoother_t::process (
                    mha_spec_t * s )
5.68.2.2 mha_wave_t * dc_simple::level_smoother_t::process (
                    mha_wave_t * s
5.68.3 Member Data Documentation
5.68.3.1 MHAFilter::o1flt_lowpass_t dc_simple::level_smoother_t::attack [private]
5.68.3.2 MHAFilter::o1flt maxtrack tdc_simple::level_smoother_t::decay [private]
5.68.3.3
        unsigned int dc_simple::level_smoother_t::nbands [private]
5.68.3.4 unsigned int dc_simple::level_smoother_t::fftlen [private]
        MHASignal::waveform_t dc_simple::level_smoother_t::level_wave [private]
5.68.3.5
5.68.3.6 MHASignal::waveform t dc simple::level smoother t::level spec [private]
```

The documentation for this class was generated from the following file:

## dc\_simple.cpp

## 5.69 delay::interface\_t Class Reference

Inheritance diagram for delay::interface\_t:

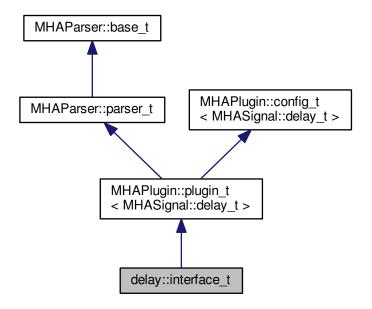

## **Public Member Functions**

- interface\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- void prepare (mhaconfig\_t &)
- mha\_wave\_t \* process (mha\_wave\_t \*)

### **Private Member Functions**

• void update ()


## **Private Attributes**

- MHAParser::vint\_t delays
- MHAEvents::patchbay\_t< interface\_t > patchbay

```
Additional Inherited Members
```

```
5.69.1 Constructor & Destructor Documentation
5.69.1.1 delay::interface_t::interface_t (
                     const algo comm t & iac,
                     const std::string & ,
                     const std::string & )
5.69.2 Member Function Documentation
5.69.2.1 void delay::interface_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < MHASignal::delay_t > (p. 692).
5.69.2.2 mha wave t * delay::interface_t::process (
                     mha wave t * s)
5.69.2.3 void delay::interface_t::update() [private]
5.69.3 Member Data Documentation
        MHAParser::vint_t delay::interface_t::delays [private]
5.69.3.2 MHAEvents::patchbay_t<interface_t> delay::interface_t::patchbay [private]
The documentation for this class was generated from the following file:
   · delay.cpp
5.70
      delaysum::delaysum_if_t Class Reference
Interface class for the delaysum plugin.
```

Inheritance diagram for delaysum::delaysum\_if\_t:

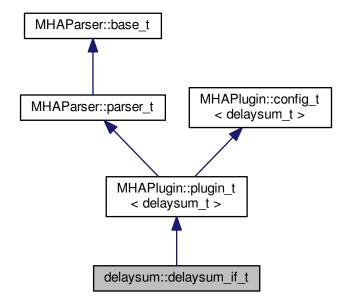

#### **Public Member Functions**

- delaysum\_if\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

### **Private Member Functions**

void update\_cfg ()

### **Private Attributes**

MHAParser::vfloat\_t weights

Linear weights to be multiplied with the audio signal, one factor for each channel.

MHAParser::vint\_t delay

vector of channel-specific delays, in samples.

 $\bullet \ \ MHAE vents::patchbay\_t < delaysum\_if\_t > patchbay$ 

The patchbay to react to config changes.

**Additional Inherited Members** 

### 5.70.1 Detailed Description

Interface class for the delaysum plugin.

This plugin allows to delay and sum multiple input channels using individual delays and weights. After each channel gets delayed it is multiplied with the given weight and then added to the single outout channel.

```
5.70.2 Constructor & Destructor Documentation
5.70.2.1 delaysum::delaysum if t::delaysum if t (
                     const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & )
5.70.3 Member Function Documentation
5.70.3.1 mha_wave_t * delaysum::delaysum_if_t::process (
                     mha_wave_t * wave )
5.70.3.2 void delaysum::delaysum if t::prepare (
                     mhaconfig t & tfcfg ) [virtual]
Implements MHAPlugin::plugin_t < delaysum_t > (p. 692).
5.70.3.3 void delaysum::delaysum_if_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin_t < delaysum_t > (p. 693).
5.70.3.4 void delaysum::delaysum_if_t::update_cfg (
                     void ) [private]
5.70.4 Member Data Documentation
5.70.4.1 MHAParser::vfloat_t delaysum::delaysum_if_t::weights [private]
Linear weights to be multiplied with the audio signal, one factor for each channel.
Order is [chan0, chan1, ...]
```

**5.70.4.2** MHAParser::vint\_t delaysum::delaysum\_if\_t::delay [private]

vector of channel-specific delays, in samples.

**5.70.4.3 MHAE**vents::patchbay\_t<delaysum\_if\_t> delaysum::delaysum\_if\_t::patchbay [private]

The patchbay to react to config changes.


The documentation for this class was generated from the following file:

· delaysum.cpp

## 5.71 delaysum::delaysum\_t Class Reference

Runtime configuration of the delaysum plugin.

Inheritance diagram for delaysum::delaysum\_t:

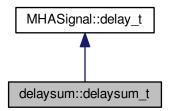

### **Public Member Functions**

delaysum\_t (unsigned int nch, unsigned int fragsize, const std::vector< mha\_real\_t > &weights\_, const std::vector< int > &delays\_)

Constructor of the runtime configuration.

mha\_wave\_t \* process (mha\_wave\_t \*)

### **Private Attributes**

- std::vector< mha\_real\_t > weights
   Relative weights for each channel. Order is [chan0, chan1, ...].
- MHASignal::waveform\_t out

Output waveform.

### 5.71.1 Detailed Description

Runtime configuration of the delaysum plugin.

Inherits from the already present delay\_t class. The constructor initializes and validates the runtime configuration and forwards the delay vector to the delay\_t class. The process function first calls delay\_t::process and then multiplies every output channel with its weight and adds them into the output channel.

#### 5.71.2 Constructor & Destructor Documentation

Constructor of the runtime configuration.

### **Parameters**

nch	Number of input channels.
fragsize	Size of one input fragment in frames.
weights⇔ –	Vector of weights for each channel.
delays⇔	Vector of delays, one entry per channel.
_	

#### 5.71.3 Member Function Documentation

```
5.71.3.1 mha_wave_t * delaysum::delaysum_t::process ( mha_wave_t * signal )
```

### 5.71.4 Member Data Documentation

```
5.71.4.1 std::vector<mha_real_t> delaysum::delaysum_t::weights [private]
```

Relative weights for each channel. Order is [chan0, chan1, ...].

```
5.71.4.2 MHASignal::waveform_t delaysum::delaysum_t::out [private]
```


Output waveform.

The documentation for this class was generated from the following file:

## · delaysum.cpp

## 5.72 doasym\_classification Class Reference

Inheritance diagram for doasym\_classification:

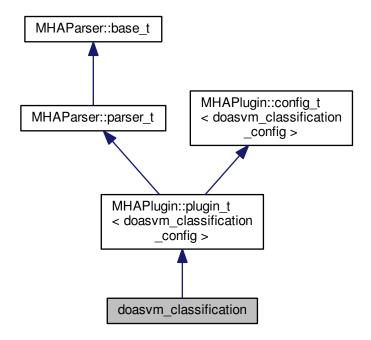

#### **Public Member Functions**

doasvm\_classification (algo\_comm\_t &ac, const std::string &chain\_name, const std
 ::string &algo\_name)

Constructs our plugin.

- ~doasvm\_classification ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig\_t &)

Plugin preparation.

void release (void)

### **Public Attributes**

- MHAParser::vfloat\_t angles
- MHAParser::mfloat\_t w
- MHAParser::vfloat t b
- MHAParser::vfloat\_t x
- MHAParser::vfloat\_t y
- MHAParser::string\_t p\_name
- MHAParser::string\_t max\_p\_ind\_name
- MHAParser::string\_t vGCC\_name

**Private Member Functions** 

void update\_cfg ()

**Private Attributes** 

MHAEvents::patchbay\_t< doasym\_classification > patchbay

**Additional Inherited Members** 

```
5.72.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.72.1.2 doasym_classification::~doasym_classification()
```

5.72.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin\_t< doasym\_classification\_config > (p. 692).

```
5.72.2.3 void doasym_classification::release (
                    void ) [inline], [virtual]
Reimplemented from MHAPlugin::plugin_t< doasym_classification_config > (p. 693).
5.72.2.4 void doasvm_classification::update_cfg( ) [private]
5.72.3 Member Data Documentation
5.72.3.1 MHAParser::vfloat_t doasym_classification::angles
5.72.3.2 MHAParser::mfloat_t doasym_classification::w
5.72.3.3 MHAParser::vfloat t doasvm_classification::b
5.72.3.4 MHAParser::vfloat_t doasym_classification::x
5.72.3.5 MHAParser::vfloat t doasym_classification::y
5.72.3.6 MHAParser::string_t doasym_classification::p_name
5.72.3.7 MHAParser::string_t doasym_classification::max_p_ind_name
5.72.3.8 MHAParser::string_t doasym_classification::vGCC_name
```

5.72.3.9 MHAEvents::patchbay\_t<doasvm\_classification> doasvm\_classification::patchbay

The documentation for this class was generated from the following files:

· doasvm\_classification.h

[private]

- doasym classification.cpp
- 5.73 doasym\_classification\_config Class Reference

**Public Member Functions** 

- doasvm\_classification\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, doasvm\_classification \*\_doasvm)
- ~doasym\_classification\_config ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Public Attributes**

```
· algo_comm_t & ac
```

doasym\_classification \* doasym

MHA AC::waveform t p

- MHA\_AC::int\_t p\_max
- mha\_wave\_t c
- 5.73.1 Constructor & Destructor Documentation


- 5.73.1.2 doasym\_classification\_config::~doasym\_classification\_config()
- 5.73.2 Member Function Documentation
- 5.73.2.1 mha\_wave\_t \* doasym\_classification\_config::process ( mha\_wave\_t \* wave )
- 5.73.3 Member Data Documentation
- 5.73.3.1 algo\_comm\_t& doasym\_classification\_config::ac
- 5.73.3.2 doasvm\_classification\* doasvm\_classification\_config::doasvm
- 5.73.3.3 MHA\_AC::waveform\_t doasym\_classification\_config::p
- 5.73.3.4 MHA\_AC::int\_t doasym\_classification\_config::p\_max
- 5.73.3.5 mha\_wave\_t doasym\_classification\_config::c

The documentation for this class was generated from the following files:

- · doasym classification.h
- · doasvm\_classification.cpp

## 5.74 doasym\_feature\_extraction Class Reference

Inheritance diagram for doasym\_feature\_extraction:

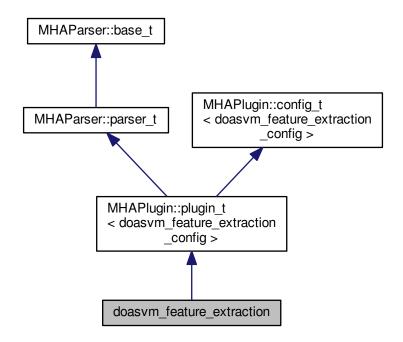

### **Public Member Functions**

 doasvm\_feature\_extraction (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

Constructs our plugin.

- ~doasvm\_feature\_extraction ()
- mha wave t \* process (mha wave t \*)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig\_t &)

Plugin preparation.

void release (void)

### **Public Attributes**

- MHAParser::int\_t fftlen
- MHAParser::int\_t max\_lag
- MHAParser::int\_t nupsample
- MHAParser::string\_t vGCC\_name

**Private Member Functions** 

void update\_cfg ()

**Private Attributes** 

MHAEvents::patchbay\_t< doasvm\_feature\_extraction > patchbay

**Additional Inherited Members** 

```
5.74.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.74.1.2 doasym_feature_extraction::~doasym_feature_extraction()
```

5.74.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin\_t< doasvm\_feature\_extraction\_config > (p. 692).

The documentation for this class was generated from the following files:

- · doasvm\_feature\_extraction.h
- doasym\_feature\_extraction.cpp

## 5.75 doasym\_feature\_extraction\_config Class Reference

#### **Public Member Functions**

- doasvm\_feature\_extraction\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, doasvm\_feature\_extraction \*\_doagcc)
- ~doasym feature extraction config ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Public Attributes**

- doasym\_feature\_extraction \* doagcc
- unsigned int wndlen
- · unsigned int fftlen
- unsigned int G\_length
- unsigned int GCC\_start
- unsigned int GCC\_end
- MHA AC::waveform t vGCC ac
- mha\_fft\_t fft
- mha\_fft\_t ifft
- double hifftwin\_sum
- MHASignal::waveform t proc wave
- MHASignal::waveform t hwin
- MHASignal::waveform\_t hifftwin
- MHASignal::waveform\_t vGCC
- MHASignal::spectrum t in spec
- MHASignal::spectrum\_t G

```
5.75.1 Constructor & Destructor Documentation
5.75.1.1 doasym_feature_extraction_config::doasym_feature_extraction_config (
                     algo_comm_t & ac,
                     const mhaconfig_t in_cfg,
                     doasym feature extraction * _doagcc )
5.75.1.2 doasym_feature_extraction_config::~doasym_feature_extraction_config()
5.75.2 Member Function Documentation
5.75.2.1 mha_wave_t * doasym_feature_extraction_config::process (
                     mha_wave_t * wave )
       Member Data Documentation
5.75.3
        doasym_feature_extraction* doasym_feature_extraction_config::doagcc
5.75.3.2
        unsigned int doasym_feature_extraction_config::wndlen
5.75.3.3
        unsigned int doasym_feature_extraction_config::fftlen
5.75.3.4
        unsigned int doasym_feature_extraction_config::G_length
5.75.3.5
        unsigned int doasym feature extraction config::GCC start
5.75.3.6
        unsigned int doasym_feature_extraction_config::GCC_end
5.75.3.7
         MHA_AC::waveform_t doasym_feature_extraction_config::vGCC_ac
5.75.3.8
        mha fft t doasym_feature_extraction_config::fft
5.75.3.9
        mha fft t doasym feature extraction config::ifft
5.75.3.10 double doasym_feature_extraction_config::hifftwin_sum
5.75.3.11 MHASignal::waveform t doasym feature extraction config::proc wave
5.75.3.12 MHASignal::waveform t doasym_feature_extraction_config::hwin
5.75.3.13 MHASignal::waveform t doasym feature extraction config::hifftwin
5.75.3.14 MHASignal::waveform t doasym_feature_extraction_config::vGCC
5.75.3.15 MHASignal::spectrum t doasym feature extraction config::in spec
5.75.3.16 MHASignal::spectrum t doasym_feature_extraction_config::G
```


The documentation for this class was generated from the following files:

- · doasym feature extraction.h
- doasym\_feature\_extraction.cpp

## 5.76 droptect\_t Class Reference

Detect dropouts in a signal with a constant spectrum.

Inheritance diagram for droptect\_t:

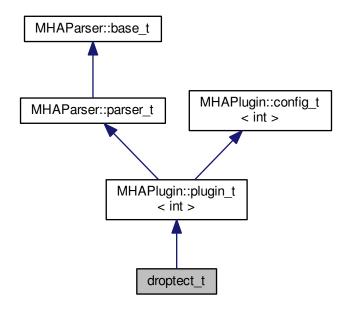

## **Public Member Functions**

droptect\_t (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo
 —name)

This constructor initializes the configuration language variables and inserts them into the MHA configuration tree.

- void prepare (mhaconfig\_t &signal\_info)
- void release (void)
- mha\_spec\_t \* process (mha\_spec\_t \*signal)

### **Private Attributes**

- MHAParser::vint\_mon\_t dropouts
- MHAParser::vint\_mon\_t consecutive\_dropouts
- MHAParser::int\_mon\_t blocks
- MHAParser::bool\_t reset
- MHAParser::float\_t threshold
- MHASignal::waveform\_t \* current\_powspec

```
    MHASignal::waveform_t * filtered_powspec
```

- · MHAParser::float t tau
- std::vector< bool > filter\_activated
- float period

The period of the process callback.

MHAParser::mfloat\_mon\_t filtered\_powspec\_mon

User access to filtered spectrum.

MHAParser::float mon t level mon

**Additional Inherited Members** 

## 5.76.1 Detailed Description

Detect dropouts in a signal with a constant spectrum.

### 5.76.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the MHA configuration tree.

```
5.76.3 Member Function Documentation
```

Implements MHAPlugin::plugin\_t < int > (p. 692).

Reimplemented from **MHAPlugin::plugin\_t**< int > (p. 693).

```
5.76.3.3 mha_spec_t * droptect_t::process (
                    mha_spec_t * signal )
5.76.4 Member Data Documentation
5.76.4.1 MHAParser::vint mon t droptect_t::dropouts [private]
5.76.4.2 MHAParser::vint_mon_t droptect_t::consecutive_dropouts [private]
5.76.4.3 MHAParser::int_mon_t droptect_t::blocks [private]
5.76.4.4 MHAParser::bool_t droptect_t::reset [private]
5.76.4.5 MHAParser::float_t droptect_t::threshold [private]
5.76.4.6 MHASignal::waveform_t* droptect_t::current_powspec [private]
5.76.4.7 MHASignal::waveform_t* droptect_t::filtered_powspec [private]
5.76.4.8 MHAParser::float_t droptect_t::tau [private]
5.76.4.9 std::vector<bool> droptect_t::filter_activated [private]
5.76.4.10 float droptect_t::period [private]
The period of the process callback.
5.76.4.11 MHAParser::mfloat_mon_t droptect_t::filtered_powspec_mon [private]
User access to filtered spectrum.
```


The documentation for this class was generated from the following file:

**5.76.4.12** MHAParser::float mon t droptect t::level mon [private]

## droptect.cpp

# 5.77 ds\_t Class Reference

# Inheritance diagram for ds\_t:

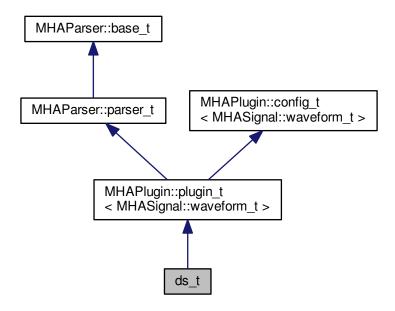

## **Public Member Functions**

- ds\_t (algo\_comm\_t, std::string, std::string)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

## **Private Attributes**

- MHAParser::int\_t ratio
- MHAFilter::iir\_filter\_t antialias

## **Additional Inherited Members**

## 5.77.1 Constructor & Destructor Documentation

```
5.77.1.1 ds_t::ds_t (
                    algo_comm_t iac,
                    std::string,
                    std::string )
5.77.2 Member Function Documentation
5.77.2.1 mha wave t * ds_t::process (
                    mha_wave_t * s )
5.77.2.2 void ds_t::prepare (
                    mhaconfig_t & cf ) [virtual]
Implements MHAPlugin::plugin_t< MHASignal::waveform_t > (p. 692).
5.77.2.3 void ds_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t < MHASignal::waveform_t > (p. 693).
5.77.3 Member Data Documentation
5.77.3.1
        MHAParser::int_t ds_t::ratio [private]
5.77.3.2 MHAFilter::iir_filter_t ds_t::antialias [private]
```

The documentation for this class was generated from the following file:

## downsample.cpp

## 5.78 dynamiclib\_t Class Reference

**Public Member Functions** 

- dynamiclib\_t (const std::string &)
- void \* resolve (const std::string &)
- void \* resolve\_checked (const std::string &)
- ~dynamiclib\_t ()
- const std::string & getmodulename () const
- const std::string & getname () const

### **Private Attributes**

- std::string fullname
- std::string modulename
- mha\_libhandle\_t h

```
5.78.1 Constructor & Destructor Documentation
```

The documentation for this class was generated from the following files:

- · mha\_os.h
- mha\_os.cpp
- 5.79 DynComp::dc\_afterburn\_rt\_t Class Reference

**5.78.3.3 mha\_libhandle\_t dynamiclib\_t::h** [private]

Real-time class for after burn effect.

### **Public Member Functions**

- dc\_afterburn\_rt\_t (const std::vector< float > &cf, unsigned int channels, float srate, const dc\_afterburn\_vars\_t &vars)
- void **burn** (float &Gin, float Lin, unsigned int band, unsigned int channel) gain modifier method (afterburn).

#### **Private Attributes**

```
std::vector< float > drain_inv
```

- std::vector< float > conflux
- std::vector< float > maxgain
- std::vector< float > mpo\_inv
- std::vector< MHAFilter::o1flt\_lowpass\_t > lp

### 5.79.1 Detailed Description

Real-time class for after burn effect.

The constructor processes the parameters and creates pre-processed variables for efficient realtime processing.

## 5.79.2 Constructor & Destructor Documentation

## 5.79.3 Member Function Documentation

gain modifier method (afterburn).

### **Parameters**

Gin	Linear gain.	
Lin	Input level (Pascal).	
band	Filter band number.	
≈ebænnel i	-Ghannel bumber burg	

© 2006-2048 Hörzedh g@hbH, Oldehburg

Output level for MPO is estimated by Gin \* Lin.

### 5.79.4 Member Data Documentation

```
5.79.4.1 std::vector<float> DynComp::dc_afterburn_rt_t::drain_inv [private]

5.79.4.2 std::vector<float> DynComp::dc_afterburn_rt_t::conflux [private]

5.79.4.3 std::vector<float> DynComp::dc_afterburn_rt_t::maxgain [private]

5.79.4.4 std::vector<float> DynComp::dc_afterburn_rt_t::mpo_inv [private]
```

std::vector<MHAFilter::o1flt lowpass t> DynComp::dc\_afterburn\_rt\_t::lp [private]


The documentation for this class was generated from the following files:

- · dc\_afterburn.h
- dc\_afterburn.cpp

# 5.80 DynComp::dc\_afterburn\_t Class Reference

Afterburn class, to be defined as a member of compressors.

Inheritance diagram for DynComp::dc\_afterburn\_t:

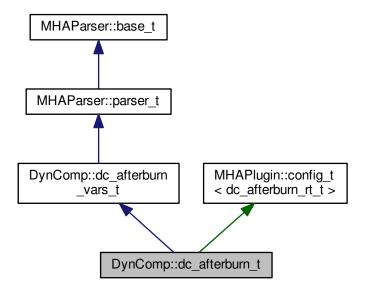

### **Public Member Functions**

- dc afterburn t ()
- void **set\_fb\_pars** (const std::vector< float > &cf, unsigned int **channels**, float srate)
- void unset\_fb\_pars ()
- void update\_burner ()
- void **burn** (float &Gin, float Lin, unsigned int band, unsigned int channel)

### **Private Member Functions**

• void update ()

#### **Private Attributes**

- MHAEvents::patchbay\_t< dc\_afterburn\_t > patchbay
- std::vector< float > \_cf
- unsigned int \_channels
- float srate
- bool commit\_pending
- bool fb\_pars\_configured

### **Additional Inherited Members**

## 5.80.1 Detailed Description

Afterburn class, to be defined as a member of compressors.

```
5.80.2 Constructor & Destructor Documentation
```

```
5.80.2.1 DynComp::dc_afterburn_t::dc_afterburn_t ( )
```

5.80.3 Member Function Documentation

```
5.80.3.2 void DynComp::dc_afterburn_t::unset_fb_pars ( )
```

5.80.3.3 void DynComp::dc\_afterburn\_t::update\_burner( ) [inline]


```
5.80.3.4 void DynComp::dc_afterburn_t::burn (
                     float & Gin,
                     float Lin.
                     unsigned int band,
                     unsigned int channel ) [inline]
5.80.3.5 void DynComp::dc_afterburn_t::update( ) [private]
5.80.4 Member Data Documentation
5.80.4.1 MHAEvents::patchbay_t<dc_afterburn_t> DynComp::dc_afterburn_t::patchbay
         [private]
5.80.4.2 std::vector<float> DynComp::dc_afterburn_t::_cf [private]
5.80.4.3 unsigned int DynComp::dc_afterburn_t::_channels [private]
5.80.4.4 float DynComp::dc_afterburn_t::_srate [private]
5.80.4.5 bool DynComp::dc_afterburn_t::commit_pending [private]
5.80.4.6 bool DynComp::dc_afterburn_t::fb_pars_configured [private]
The documentation for this class was generated from the following files:
   · dc afterburn.h

    dc_afterburn.cpp
```

5.81 DynComp::dc\_afterburn\_vars\_t Class Reference

Variables for dc\_afterburn\_t (p. 280) class.

Inheritance diagram for DynComp::dc\_afterburn\_vars\_t:

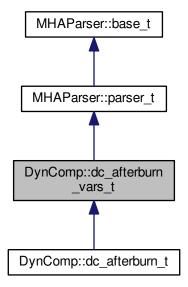

## **Public Member Functions**

dc\_afterburn\_vars\_t ()

### **Public Attributes**

MHAParser::vfloat\_t f

MHAParser::vfloat\_t drain

MHAParser::vfloat\_t conflux

MHAParser::vfloat\_t maxgain

MHAParser::vfloat\_t mpo

MHAParser::float\_t taugain

MHAParser::kw\_t commit

MHAParser::bool\_t bypass

# **Additional Inherited Members**

## 5.81.1 Detailed Description

Variables for dc\_afterburn\_t (p. 280) class.

5.81.2	Constructor & Destructor Documentation
5.81.2.1	DynComp::dc_afterburn_vars_t::dc_afterburn_vars_t ( )
5.81.3	Member Data Documentation
5.81.3.1	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::f
5.81.3.2	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::drain
5.81.3.3	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::conflux
5.81.3.4	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::maxgain
5.81.3.5	MHAParser::vfloat_t DynComp::dc_afterburn_vars_t::mpo
5.81.3.6	MHAParser::float_t DynComp::dc_afterburn_vars_t::taugain
5.81.3.7	MHAParser::kw_t DynComp::dc_afterburn_vars_t::commit
5.81.3.8	MHAParser::bool_t DynComp::dc_afterburn_vars_t::bypass

The documentation for this class was generated from the following files:

- · dc\_afterburn.h
- dc\_afterburn.cpp
- 5.82 DynComp::gaintable\_t Class Reference

Gain table class.

#### **Public Member Functions**

gaintable\_t (const std::vector< mha\_real\_t > &LInput, const std::vector< mha\_real\_t > &FCenter, unsigned int channels)

Constructor.

- ∼gaintable t ()
- void update (std::vector< std::vector< mha\_real\_t >> > newGain)
   Update gains from an external table.
- mha\_real\_t get\_gain (mha\_real\_t Lin, mha\_real\_t Fin, unsigned int channel)
   Read Gain from gain table.
- mha\_real\_t get\_gain (mha\_real\_t Lin, unsigned int band, unsigned int channel)
   Read Gain from gain table.
- void **get\_gain** (const **mha\_wave\_t** &Lin, **mha\_wave\_t** &Gain)

Read Gains from gain table.

• unsigned int nbands () const

Return number of frequency bands.

• unsigned int nchannels () const

Return number of audio channels.

- std::vector< std::vector< mha\_real\_t >> get\_iofun () const
   Return current input-output function.
- std::vector< mha\_real\_t > get\_vL () const
- std::vector< mha real t > get vF () const

## **Private Attributes**

- unsigned int num\_L
- unsigned int num F
- unsigned int num\_channels
- std::vector< mha real t > vL
- std::vector< mha\_real\_t > vF
- std::vector< mha real t > vFlog
- std::vector< std::vector< mha\_real\_t >>> data

# 5.82.1 Detailed Description

## Gain table class.

This gain table is intended to efficient table lookup, i.e, interpolation of levels, and optional interpolation of frequencies. Sample input levels and sample frequencies are given in the constructor. The gain entries can be updated with the **update()** (p. 287) member function via a gain prescription rule from an auditory profile.

# 5.82.2 Constructor & Destructor Documentation

Constructor.

## **Parameters**

LInput	Input level samples, in equivalent LTASS_combined dB SPL.
FCenter	Frequency samples in Hz (e.g., center frequencies of filterbank).
channels	Number of audio channels (typically 2).

```
5.82.2.2 gaintable_t::~gaintable_t()
```

#### 5.82.3 Member Function Documentation

```
5.82.3.1 void gaintable_t::update (  std::vector < std::vector < mha\_real\_t >> \textit{newGain} \ )
```

Update gains from an external table.

### **Parameters**

newGain	New gain table entries.
---------	-------------------------

Dimension change is not allowed. The number of entries are checked.

Read Gain from gain table.

### **Parameters**

Lin	Input level
Fin	Input frequency (no match required)
channel	Audio channel

Read Gain from gain table.

### **Parameters**

Lin Input level	
-----------------	--

### **Parameters**

band	Input frequency band
channel	Audio channel

```
5.82.3.4 void gaintable_t::get_gain (
const mha_wave_t & Lin,
mha_wave_t & Gain )
```

Read Gains from gain table.

#### **Parameters**

Lin	Input levels.
Gain	Output gain.

The number of channels in Lin and Gain must match the number of bands times number of channels in the gaintable.

```
5.82.3.5 unsigned int DynComp::gaintable_t::nbands ( ) const [inline]
```

Return number of frequency bands.

```
5.82.3.6 unsigned int DynComp::gaintable t::nchannels ( ) const [inline]
```

Return number of audio channels.

```
5.82.3.7 std::vector< std::vector< mha real t >> gaintable_t::get_iofun( ) const
```

Return current input-output function.

```
5.82.3.8 std::vector<mha_real_t> DynComp::gaintable_t::get_vL( ) const [inline]
```

```
5.82.3.9 std::vector<mha_real_t> DynComp::gaintable_t::get_vF( ) const [inline]
```

5.82.4 Member Data Documentation

```
5.82.4.1 unsigned int DynComp::gaintable_t::num_L [private]
```

**5.82.4.2 unsigned int DynComp::gaintable\_t::num\_F** [private]

**5.82.4.3 unsigned int DynComp::gaintable\_t::num\_channels** [private]

```
5.82.4.4 std::vector<mha_real_t> DynComp::gaintable_t::vL [private]
5.82.4.5 std::vector<mha_real_t> DynComp::gaintable_t::vF [private]
5.82.4.6 std::vector<mha_real_t> DynComp::gaintable_t::vFlog [private]
5.82.4.7 std::vector<std::vector<std::vector<mha_real_t> > DynComp::gaintable_t::data [private]
```


The documentation for this class was generated from the following files:

- · gaintable.h
- · gaintable.cpp

# 5.83 example1\_t Class Reference

This C++ class implements the simplest example plugin for the step-by-step tutorial.

Inheritance diagram for example1\_t:

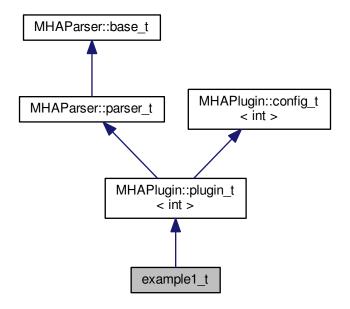

### **Public Member Functions**

• example1\_t (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

Do-nothing constructor.

void release (void)

Release may be empty.

void prepare (mhaconfig\_t &signal\_info)

Plugin preparation.

mha wave t \* process (mha wave t \*signal)

Signal processing performed by the plugin.

### **Additional Inherited Members**

### 5.83.1 Detailed Description

This C++ class implements the simplest example plugin for the step-by-step tutorial.

It inherits from **MHAPlugin::plugin\_t** (p. 690) for correct integration in the configuration language interface.

### 5.83.2 Constructor & Destructor Documentation

Do-nothing constructor.

The constructor has to take these three arguments, but it does not have to use them. However, the base class has to be initialized.

### 5.83.3 Member Function Documentation

Release may be empty.

Reimplemented from **MHAPlugin::plugin\_t**< int > (p. 693).

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains at least one channel

## **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin\_t < int > (p. 692).

Signal processing performed by the plugin.

This plugin multiplies the signal in the first audio channel by a factor 0.1.

## **Parameters**

## **Returns**

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)


The documentation for this class was generated from the following file:

# example1.cpp

# 5.84 example2\_t Class Reference

This C++ class implements the second example plugin for the step-by-step tutorial.

Inheritance diagram for example2\_t:

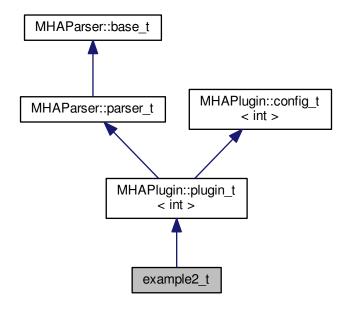

## **Public Member Functions**

example2\_t (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

void prepare (mhaconfig\_t &signal\_info)

Plugin preparation.

• void release (void)

Undo restrictions posed in prepare.

mha\_wave\_t \* process (mha\_wave\_t \*signal)

Signal processing performed by the plugin.

## **Private Attributes**

MHAParser::int\_t scale\_ch

Index of audio channel to scale.

MHAParser::float\_t factor

The scaling factor applied to the selected channel.

**Additional Inherited Members** 

## 5.84.1 Detailed Description

This C++ class implements the second example plugin for the step-by-step tutorial.

It extends the first example by using configuration language variables to influence the processing.

### 5.84.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

#### 5.84.3 Member Function Documentation

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains enough channels.

### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin\_t< int > (p. 692).

Undo restrictions posed in prepare.

Reimplemented from **MHAPlugin::plugin\_t**< int > (p. 693).

```
5.84.3.3 mha_wave_t * example2_t::process ( mha_wave_t * signal )
```

Signal processing performed by the plugin.

This plugin multiplies the signal in the selected audio channel by the configured factor.

### **Parameters**

```
signal Pointer to the input signal structure.
```

### **Returns**

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)

5.84.4 Member Data Documentation

```
5.84.4.1 MHAParser::int_t example2_t::scale_ch [private]
```

Index of audio channel to scale.

```
5.84.4.2 MHAParser::float_t example2_t::factor [private]
```

The scaling factor applied to the selected channel.


The documentation for this class was generated from the following file:

example2.cpp

5.85 example3 t Class Reference

A Plugin class using the openMHA Event mechanism.

Inheritance diagram for example3\_t:

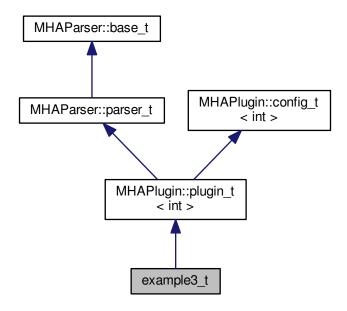

# **Public Member Functions**

• example3\_t (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo name)

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

void prepare (mhaconfig\_t &signal\_info)

Plugin preparation.

void release (void)

Bookkeeping only.

mha\_wave\_t \* process (mha\_wave\_t \*signal)

Signal processing performed by the plugin.

#### **Private Member Functions**

- void on\_scale\_ch\_writeaccess ()
- void on\_scale\_ch\_valuechanged ()
- void on\_scale\_ch\_readaccess ()
- void on\_prereadaccess ()

### **Private Attributes**

MHAParser::int\_t scale\_ch

Index of audio channel to scale.

MHAParser::float t factor

The scaling factor applied to the selected channel.

MHAParser::int mon t prepared

Keep Track of the prepare/release calls.

MHAEvents::patchbay\_t< example3\_t > patchbay

The Event connector.

#### **Additional Inherited Members**

## 5.85.1 Detailed Description

A Plugin class using the openMHA Event mechanism.

This is the third example plugin for the step-by-step tutorial.

#### 5.85.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

It connects the openMHA Events triggered by these configuration variables to the respective callbacks.

### 5.85.3 Member Function Documentation

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains enough channels.

### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

Implements  $MHAPlugin::plugin_t < int > (p. 692)$ .

Bookkeeping only.

Reimplemented from **MHAPlugin::plugin\_t**< int > (p. 693).

```
5.85.3.7 mha_wave_t * example3_t::process ( mha_wave_t * signal )
```

Signal processing performed by the plugin.

This plugin multiplies the signal in the selected audio channel by the configured factor.

#### **Parameters**

```
signal Pointer to the input signal structure.
```

## **Returns**

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)

5.85.4 Member Data Documentation

```
5.85.4.1 MHAParser::int_t example3_t::scale_ch [private]
```

Index of audio channel to scale.

```
5.85.4.2 MHAParser::float_t example3_t::factor [private]
```

The scaling factor applied to the selected channel.

```
5.85.4.3 MHAParser::int_mon_t example3_t::prepared [private]
```

Keep Track of the prepare/release calls.

## 5.85.4.4 MHAEvents::patchbay\_t<example3\_t> example3\_t::patchbay [private]

The Event connector.


The documentation for this class was generated from the following file:

## example3.cpp

## 5.86 example4\_t Class Reference

A Plugin class using the spectral signal.

Inheritance diagram for example4\_t:

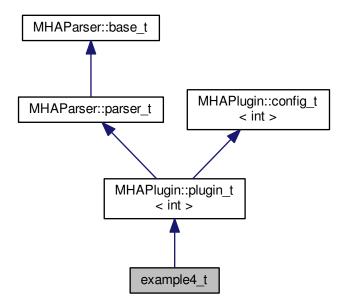

## **Public Member Functions**

example4\_t (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

void prepare (mhaconfig\_t &signal\_info)

Plugin preparation.

void release (void)

Bookkeeping only.

mha\_spec\_t \* process (mha\_spec\_t \*signal)

Signal processing performed by the plugin.

### **Private Member Functions**

- void on\_scale\_ch\_writeaccess ()
- void on\_scale\_ch\_valuechanged ()
- void on\_scale\_ch\_readaccess ()
- void on\_prereadaccess ()

### **Private Attributes**

MHAParser::int\_t scale\_ch

Index of audio channel to scale.

MHAParser::float\_t factor

The scaling factor applied to the selected channel.

MHAParser::int\_mon\_t prepared

Keep Track of the prepare/release calls.

MHAEvents::patchbay\_t< example4\_t > patchbay

The Event connector.

**Additional Inherited Members** 

5.86.1 Detailed Description

A Plugin class using the spectral signal.

This is the fourth example plugin for the step-by-step tutorial.

5.86.2 Constructor & Destructor Documentation

This constructor initializes the configuration language variables and inserts them into the openMHA configuration tree.

It connects the openMHA Events triggered by these configuration variables to the respective callbacks.

## 5.86.3 Member Function Documentation

Plugin preparation.

This plugin checks that the input signal has the waveform domain and contains enough channels.

### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin t < int > (p. 692).

Bookkeeping only.

Reimplemented from **MHAPlugin::plugin** t < int > (p. 693).

```
5.86.3.7 mha_spec_t * example4_t::process ( mha_spec_t * signal )
```

Signal processing performed by the plugin.

This plugin multiplies the spectral signal in the selected audio channel by the configured factor.

### **Parameters**

signal Pointer to the input signal structure.

**Returns** 

Returns a pointer to the input signal structure, with a the signal modified by this plugin. (In-place processing)

5.86.4 Member Data Documentation

**5.86.4.1** MHAParser::int\_t example4\_t::scale\_ch [private]

Index of audio channel to scale.

**5.86.4.2** MHAParser::float\_t example4\_t::factor [private]

The scaling factor applied to the selected channel.

**5.86.4.3** MHAParser::int\_mon\_t example4\_t::prepared [private]

Keep Track of the prepare/release calls.

**5.86.4.4 MHAEvents::patchbay\_t<example4\_t> example4\_t::patchbay** [private]

The Event connector.

The documentation for this class was generated from the following file:

example4.cpp

5.87 example5\_t Class Reference

**Public Member Functions** 

- example5\_t (unsigned int, unsigned int, mha\_real\_t)
- mha\_spec\_t \* process (mha\_spec\_t \*)

**Private Attributes** 

- · unsigned int channel
- · mha\_real\_t scale

## 5.87.1 Constructor & Destructor Documentation

5.87.2 Member Function Documentation

5.87.3 Member Data Documentation


**5.87.3.1** unsigned int example5\_t::channel [private]

The documentation for this class was generated from the following file:

# · example5.cpp

## 5.88 example6\_t Class Reference

Inheritance diagram for example6\_t:

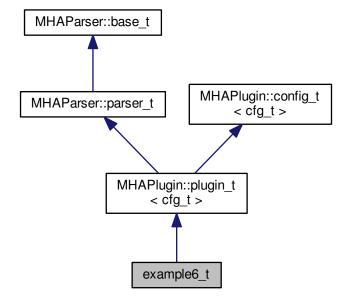

**Public Member Functions** 

```
• example6_t (const algo_comm_t &, const std::string &, const std::string &)
```

- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)

**Private Member Functions** 

void update\_cfg ()

**Private Attributes** 

- MHAParser::int\_t channel\_no
- · float rmsdb
- MHAEvents::patchbay\_t< example6\_t > patchbay

**Additional Inherited Members** 

MHAEvents::patchbay\_t<example6\_t> example6\_t::patchbay [private]

The documentation for this class was generated from the following file:

example6.cpp

## 5.89 expression\_t Class Reference

Class for separating a string into a left hand value and a right hand value.

## 5.89.1 Detailed Description

Class for separating a string into a left hand value and a right hand value.


A list of valid operators can be provided. After construction, the class members Ival, rval and op contain the apropriate contents.

The documentation for this class was generated from the following file:

# mha\_parser.cpp

## 5.90 fader\_if\_t Class Reference

Inheritance diagram for fader if t:

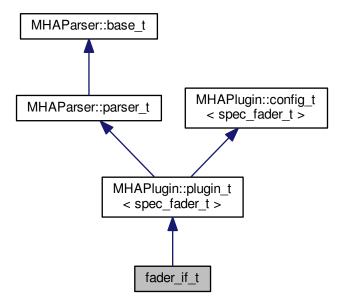

## **Public Member Functions**

- fader\_if\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)

**Private Member Functions** 

void update\_cfg ()

```
Private Attributes
```

```
    MHAEvents::patchbay_t< fader_if_t > patchbay
```

- · MHAParser::float t tau
- MHAParser::vfloat\_t newgains
- mha\_real\_t \* actgains

```
Additional Inherited Members
```

```
5.90.1 Constructor & Destructor Documentation
```

5.90.2 Member Function Documentation

```
5.90.2.1 mha_spec_t * fader_if_t::process (
mha_spec_t * s )
```

Implements MHAPlugin::plugin\_t< spec\_fader\_t > (p. 692).

5.90.3 Member Data Documentation

```
5.90.3.1 MHAEvents::patchbay_t<fader_if_t> fader_if_t::patchbay [private]
```

**5.90.3.2** MHAParser::float\_t fader\_if\_t::tau [private]

**5.90.3.3** MHAParser::vfloat\_t fader\_if\_t::newgains [private]


**5.90.3.4 mha\_real\_t**\* **fader\_if\_t**::actgains [private]

The documentation for this class was generated from the following file:

fader\_spec.cpp

# 5.91 fader\_wave::fader\_wave\_if\_t Class Reference

Inheritance diagram for fader\_wave::fader\_wave\_if\_t:

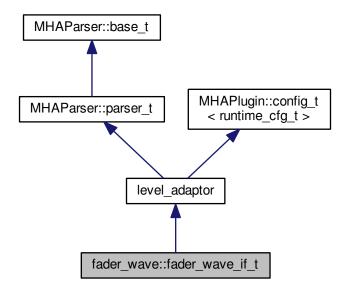

## **Public Member Functions**

- fader\_wave\_if\_t (algo\_comm\_t, const char \*, const char \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

### **Private Member Functions**

void set\_level ()

## **Private Attributes**

- MHAParser::vfloat\_t gain
- MHAParser::float\_t ramplen
- MHAEvents::patchbay\_t< fader\_wave\_if\_t > patchbay
- bool prepared

**Additional Inherited Members** 


```
5.91.1 Constructor & Destructor Documentation
5.91.1.1 fader_wave::fader_wave_if_t::fader_wave_if_t (
                    algo comm t iac,
                    const char *,
                    const char * )
5.91.2 Member Function Documentation
5.91.2.1 mha_wave_t * fader_wave::fader_wave_if_t::process (
                    mha_wave_t * s )
5.91.2.2 void fader_wave::fader_wave_if_t::prepare (
                    mhaconfig t&tf) [virtual]
Implements MHAPlugin::plugin_t < runtime_cfg_t > (p. 692).
5.91.2.3 void fader_wave::fader_wave_if_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< runtime_cfg_t > (p. 693).
5.91.2.4 void fader_wave::fader_wave_if_t::set_level( ) [private]
5.91.3 Member Data Documentation
5.91.3.1 MHAParser::vfloat_t fader_wave::fader_wave_if_t::gain [private]
5.91.3.2 MHAParser::float t fader_wave::fader_wave_if_t::ramplen [private]
5.91.3.3 MHAEvents::patchbay t<fader wave if t> fader_wave::fader_wave_if_t::patchbay
         [private]
5.91.3.4 bool fader_wave::fader_wave_if_t::prepared [private]
```

The documentation for this class was generated from the following file:

fader\_wave.cpp

# 5.92 fader\_wave::level\_adapt\_t Class Reference

Inheritance diagram for fader\_wave::level\_adapt\_t:

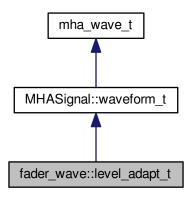

### **Public Member Functions**

- level\_adapt\_t (mhaconfig\_t cf, mha\_real\_t adapt\_len, std::vector< float > l\_new\_← , std::vector< float > l\_old\_)
- void update\_frame ()
- std::vector< float > get\_level () const
- bool can\_update () const

### **Private Attributes**

- unsigned int ilen
- unsigned int pos
- MHAWindow::fun\_t wnd
- std::vector< float > I new
- std::vector< float > I\_old

## **Additional Inherited Members**

## 5.92.1 Constructor & Destructor Documentation

# 5.92.2 Member Function Documentation

- 5.92.2.1 void fader\_wave::level\_adapt\_t::update\_frame ( )
- 5.92.2.2 std::vector<float> fader\_wave::level\_adapt\_t::get\_level( ) const [inline]
- 5.92.2.3 bool fader\_wave::level\_adapt\_t::can\_update() const [inline]
- 5.92.3 Member Data Documentation
- **5.92.3.1** unsigned int fader\_wave::level\_adapt\_t::ilen [private]
- **5.92.3.2 unsigned int fader\_wave::level\_adapt\_t::pos** [private]
- **5.92.3.3 MHAWindow::fun\_t fader\_wave::level\_adapt\_t::wnd** [private]
- **5.92.3.4** std::vector<float> fader wave::level adapt t::l new [private]
- **5.92.3.5** std::vector<float> fader\_wave::level\_adapt\_t::l\_old [private]


The documentation for this class was generated from the following file:

# fader\_wave.cpp

# 5.93 fftfbpow::fftfbpow\_interface\_t Class Reference

Interface class for fftfbpow plugin.

Inheritance diagram for fftfbpow::fftfbpow\_interface\_t:

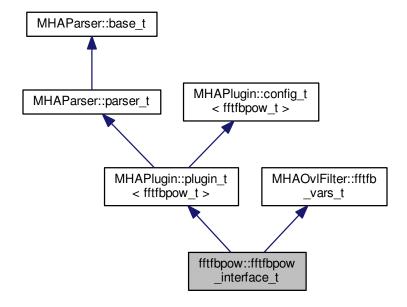

#### **Public Member Functions**

• fftfbpow\_interface\_t (const algo\_comm\_t &ac, const std::string &, const std::string &algo\_name)

Constructor with standard MHA constructor parameters.

void prepare (mhaconfig\_t &tf)

Standard MHA plugin prepare function.

mha\_spec\_t \* process (mha\_spec\_t \*s)

Standard MHA plugin process fct.

#### **Private Member Functions**

void update\_cfg ()

Constructs new runtime configuration in thread-safe manner.

# **Private Attributes**

std::string name

Configured name of this plugin instance.

MHAEvents::patchbay\_t< fftfbpow\_interface\_t > patchbay

Patchbay to connect to MHA configuration interface.

# **Additional Inherited Members**

5.93.1 Detailed Description

Interface class for fftfbpow plugin.

5.93.2 Constructor & Destructor Documentation

Constructor with standard MHA constructor parameters.

## **Parameters**

ac	Handle to algorithm communication variable space
algo_name	Configured name of this plugin instance

5.93.3 Member Function Documentation

Standard MHA plugin prepare function.

Ensures that the input is in the frequency domain, calls **update\_cfg()** (p. 311) and inserts fbpow into the AC space.

#### **Parameters**

tf | Incoming mha configuration structure, contains information about input signal

Implements MHAPlugin::plugin\_t < fftfbpow\_t > (p. 692).

Standard MHA plugin process fct.

Polls new config and calls **process()** (p. 311) of the runtime configuration.

## **Parameters**

```
s Input spectrum
```

## **Returns**

Unchanged input spectrum

Constructs new runtime configuration in thread-safe manner.

5.93.4 Member Data Documentation

**5.93.4.1 std::string fftfbpow::fftfbpow\_interface\_t::name** [private]

Configured name of this plugin instance.

# 5.93.4.2 MHAEvents::patchbay\_t<fftfbpow\_interface\_t> fftfbpow::fftfbpow\_interface\_t ::patchbay [private]

Patchbay to connect to MHA configuration interface.


The documentation for this class was generated from the following file:

# · fftfbpow.cpp

# 5.94 fftfbpow::fftfbpow\_t Class Reference

Run time configuration for the fftfbpow plugin.

Inheritance diagram for fftfbpow::fftfbpow\_t:

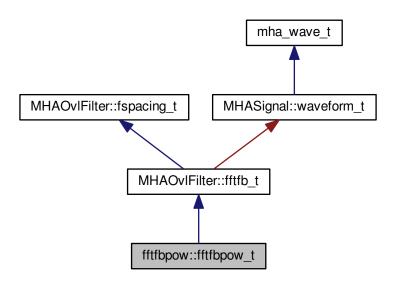

# **Public Member Functions**

• fftfbpow\_t (MHAOvIFilter::fftfb\_vars\_t &vars, unsigned int nch, unsigned int nfft, mha
—real\_t fs, algo\_comm\_t ac, std::string name)

Constructor of the run time configuration.

# **Public Attributes**

MHA\_AC::waveform\_t fbpow

AC variable containing the estimated power in each frequency band.

**Additional Inherited Members** 

# 5.94.1 Detailed Description

Run time configuration for the fftfbpow plugin.

#### 5.94.2 Constructor & Destructor Documentation

Constructor of the run time configuration.

#### **Parameters**

vars	Set of configuration variables for FFT-based overlapping filters
nch	Number of audio input channels
nfft	Length of FFT
fs	Sampling rate
ac	AC space
name	Configured name of plugin interface, used as prefix for AC variable names

#### 5.94.3 Member Data Documentation

# 5.94.3.1 MHA\_AC::waveform\_t fftfbpow::fftfbpow\_t::fbpow


AC variable containing the estimated power in each frequency band.

The documentation for this class was generated from the following file:

# fftfbpow.cpp

# 5.95 fftfilterbank::fftfb\_interface\_t Class Reference

Inheritance diagram for fftfilterbank::fftfb\_interface\_t:

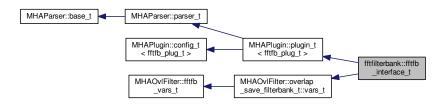

#### **Public Member Functions**

- fftfb\_interface\_t (const algo\_comm\_t &ac, const std::string &th, const std::string &al)

  Default values are set and MHA configuration variables registered into the parser.
- void prepare (mhaconfig\_t &)

Prepare all variables for processing.

- void release ()
- mha\_spec\_t \* process (mha\_spec\_t \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Private Member Functions**

void update\_cfg ()

# **Private Attributes**

- MHAParser::bool\_t return\_imag
- MHAEvents::patchbay t< fftfb interface t > patchbay
- MHA\_AC::int\_t nchannels
- std::string algo
- bool prepared
- · unsigned int nbands

# **Additional Inherited Members**

## 5.95.1 Constructor & Destructor Documentation

Default values are set and MHA configuration variables registered into the parser.

## **Parameters**

ac	algorithm communication handle
th	chain name
al	algorithm name

#### 5.95.2 Member Function Documentation

Prepare all variables for processing.

In this function, all variables are initialised and the filter shapes for each band are calculated. The filter shapes W(f) are defined as

$$W(f) = W(T(S(f))) = W(x), \quad x = T(S(f)) = T(\hat{f}),$$

W(x) beeing a symmetric window function in the interval [-1,1] and S(f) the transformation from the linear scale to the given frequency scale (see functions in FreqScaleFun). The function  $T(\hat{f})$  transforms the frequency range between the center frequencies  $[\hat{f}_{k-1},\hat{f}_k]$  and  $[\hat{f}_k,\hat{f}_{k+1}]$  into the interval [-1,0] and [0,1], respectively. This function is realised by the function linecale().

# **Parameters**

tf Channel configuration

Implements MHAPlugin::plugin\_t < fftfb\_plug\_t > (p. 692).

Reimplemented from MHAPlugin::plugin\_t < fftfb\_plug\_t > (p. 693).


- 5.95.3 Member Data Documentation
- 5.95.3.1 MHAParser::bool t fftfilterbank::fftfb\_interface\_t::return\_imag [private]
- **5.95.3.2 MHAEvents::patchbay\_t**<**fftfb\_interface\_t**> **fftfilterbank::fftfb\_interface\_t::patchbay**[private]
- **5.95.3.3** MHA\_AC::int\_t fftfilterbank::fftfb\_interface\_t::nchannels [private]
- **5.95.3.4 std::string fftfilterbank::fftfb\_interface\_t::algo** [private]
- **5.95.3.5** bool fftfilterbank::fftfb\_interface\_t::prepared [private]
- **5.95.3.6** unsigned int fftfilterbank::fftfb\_interface\_t::nbands [private]

The documentation for this class was generated from the following file:

# fftfilterbank.cpp

# 5.96 fftfilterbank::fftfb\_plug\_t Class Reference

Inheritance diagram for fftfilterbank::fftfb\_plug\_t:

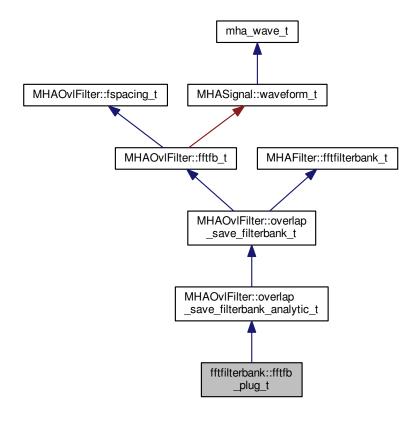

#### **Public Member Functions**

```
    fftfb_plug_t (MHAOvIFilter::overlap_save_filterbank_t::vars_t &, mhaconfig_←
t chcfg, algo_comm_t ac, std::string alg, bool return_imag)
```

- mha\_spec\_t \* process (mha\_spec\_t \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void insert ()

#### **Private Attributes**

- MHAOvIFilter::fftfb\_ac\_info\_t fb\_acinfo
- MHASignal::spectrum\_t s\_out
- MHA\_AC::waveform\_t imag
- bool return imag

#### **Additional Inherited Members**

```
5.96.1 Constructor & Destructor Documentation
```

```
5.96.1.1 fftfilterbank::fftfb_plug_t::fftfb_plug_t (

MHAOvIFilter::overlap_save_filterbank_t::vars_t & vars,

mhaconfig_t chcfg,

algo_comm_t ac,

std::string alg,

bool return_imag )
```

5.96.2 Member Function Documentation

```
5.96.2.1 mha_spec_t * fftfilterbank::fftfb_plug_t::process ( mha_spec_t * s )
```


- 5.96.2.3 void fftfilterbank::fftfb\_plug\_t::insert ( )
- 5.96.3 Member Data Documentation
- **5.96.3.1** MHAOvlFilter::fftfb\_ac\_info\_t fftfilterbank::fftfb\_plug\_t::fb\_acinfo [private]
- **5.96.3.2** MHASignal::spectrum\_t fftfilterbank::fftfb\_plug\_t::s\_out [private]
- **5.96.3.3 MHA AC::waveform t fftfilterbank::fftfb\_plug\_t::imag** [private]
- **5.96.3.4 bool fftfilterbank::fftfb\_plug\_t::return\_imag\_** [private]

The documentation for this class was generated from the following file:

# fftfilterbank.cpp

# 5.97 frequency\_translator\_t Class Reference

Inheritance diagram for frequency\_translator\_t:

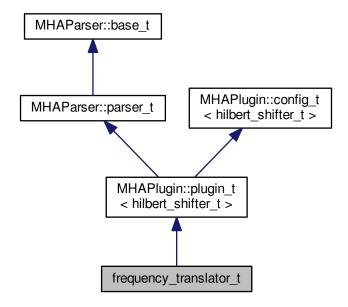

## **Public Member Functions**

- frequency\_translator\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

#### **Private Member Functions**

• void update ()

#### **Private Attributes**

- MHAEvents::patchbay\_t< frequency\_translator\_t > patchbay
- MHAParser::vfloat\_t df
- MHAParser::float\_t fmin
- MHAParser::float\_t fmax
- MHAParser::int\_t irslen
- MHAParser::kw\_t phasemode

**Additional Inherited Members** 


```
5.97.1 Constructor & Destructor Documentation
5.97.1.1 frequency translator t::frequency translator t (
                    const algo comm t & iac,
                    const std::string & ith,
                    const std::string & ial )
5.97.2 Member Function Documentation
5.97.2.1 mha_spec_t * frequency_translator_t::process (
                    mha spec t * s)
5.97.2.2 void frequency translator t::prepare (
                    mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t< hilbert_shifter_t > (p. 692).
5.97.2.3 void frequency_translator_t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t< hilbert_shifter_t > (p. 693).
5.97.2.4 void frequency_translator_t::update( ) [private]
5.97.3 Member Data Documentation
5.97.3.1 MHAEvents::patchbay_t<frequency_translator_t> frequency_translator_t::patchbay
         [private]
5.97.3.2 MHAParser::vfloat_t frequency_translator_t::df [private]
5.97.3.3 MHAParser::float_t frequency_translator_t::fmin [private]
5.97.3.4 MHAParser::float_t frequency_translator_t::fmax [private]
5.97.3.5 MHAParser::int_t frequency_translator_t::irslen [private]
5.97.3.6 MHAParser::kw_t frequency_translator_t::phasemode [private]
```

fshift\_hilbert.cpp

The documentation for this class was generated from the following file:

# 5.98 fw\_t Class Reference

# Inheritance diagram for fw\_t:

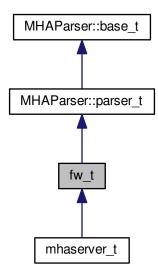

# **Public Member Functions**

- fw\_t ()
- ~fw\_t ()
- bool exit\_request () const

# **Protected Attributes**

- int proc\_error
- int io\_error

# **Private Types**

# **Private Member Functions**

- void **prepare** () preparation for processing
- void **start** () start of processing
- void stop ()

stop/pause of processing

· void release ()

release of IO device

void quit ()

controlled quit

- void stopped (int, int)
- void started ()
- int process (mha\_wave\_t \*, mha\_wave\_t \*\*)
- void exec\_fw\_command ()
- void load\_proc\_lib ()
- void load\_io\_lib ()
- void fw\_sleep\_cmd ()
- void fw\_until\_cmd ()
- void get\_input\_signal\_dimension ()
- void async\_read ()
- void async\_poll\_msg ()
- void get\_parserstate ()

#### **Static Private Member Functions**

- static void stopped (void \*h, int proc\_err, int io\_err)
- static void started (void \*h)
- static int process (void \*h, mha\_wave\_t \*sln, mha\_wave\_t \*\*sOut)

#### **Private Attributes**

- fw\_vars\_t prepare\_vars
- · MHAParser::int mon t nchannels out
- MHAParser::string\_t proc\_name
- MHAParser::string\_t io\_name
- MHAParser::bool\_t exit\_on\_stop
- MHAParser::int\_t fw\_sleep
- MHAParser::string t fw until
- MHAParser::kw\_t fw\_cmd
- MHAParser::string\_mon\_t parserstate
- MHAParser::string t errorlog
- MHAParser::string\_t fatallog
- MHAParser::vstring\_t plugins
- MHAParser::vstring\_t plugin\_paths
- MHAParser::bool\_t dump\_mha
- MHAParser::string\_t inst\_name

A variable for naming MHA instances.

- MHAKernel::algo\_comm\_class\_t ac
- PluginLoader::mhapluginloader\_t \* proc\_lib
- io\_lib\_t \* io\_lib

- mhaconfig\_t cfin
- · mhaconfig t cfout
- state\_t state
- bool b\_exit\_request
- MHAParser::string\_mon\_t proc\_error\_string
- MHAEvents::patchbay\_t< fw\_t > patchbay

# **Additional Inherited Members**

```
5.98.1 Member Enumeration Documentation
```

```
5.98.1.1 enum fw_t::state_t [private]
```

# **Enumerator**

```
fw_unprepared
```

fw\_stopped

fw\_starting

fw\_running

fw\_stopping

fw\_exiting

# 5.98.2 Constructor & Destructor Documentation

```
5.98.2.1 fw_t::fw_t ( )
```

# 5.98.3 Member Function Documentation

```
5.98.3.1 bool fw_t::exit_request() const [inline]
```

preparation for processing

```
5.98.3.3 void fw_t::start() [private]
```

start of processing

```
5.98.3.4 void fw_t::stop() [private]
stop/pause of processing
5.98.3.5 void fw_t::release( ) [private]
release of IO device
5.98.3.6 void fw_t::quit() [private]
controlled quit
5.98.3.7 static void fw_t::stopped (
                    void *h,
                    int proc_err,
                    int io_err ) [inline], [static], [private]
5.98.3.8 static void fw_t::started (
                    void * h ) [inline], [static], [private]
5.98.3.9 static int fw_t::process (
                    void *h,
                    mha wave t * sln,
                    mha_wave_t ** sOut ) [inline], [static], [private]
5.98.3.10 void fw_t::stopped (
                     int proc_err,
                     int io_err ) [private]
5.98.3.11 void fw_t::started( ) [private]
5.98.3.12 int fw_t::process (
                     mha_wave_t * s_in,
                     mha_wave_t ** s_out ) [private]
5.98.3.13 void fw_t::exec_fw_command() [private]
5.98.3.14 void fw_t::load_proc_lib( ) [private]
5.98.3.15 void fw_t::load_io_lib( ) [private]
5.98.3.16 void fw_t::fw_sleep_cmd( ) [private]
5.98.3.17 void fw_t::fw_until_cmd( ) [private]
```

```
5.98.3.18 void fw_t::get_input_signal_dimension() [private]
5.98.3.19 void fw_t::async_read( ) [inline], [private]
5.98.3.20 void fw_t::async_poll_msg( ) [private]
5.98.3.21 void fw_t::get_parserstate( ) [private]
5.98.4 Member Data Documentation
5.98.4.1 fw_vars_t fw_t::prepare_vars [private]
5.98.4.2 MHAParser::int_mon_t fw_t::nchannels_out [private]
5.98.4.3 MHAParser::string_t fw_t::proc_name [private]
5.98.4.4 MHAParser::string tfw_t::io_name [private]
5.98.4.5 MHAParser::bool_t fw_t::exit_on_stop [private]
5.98.4.6 MHAParser::int_t fw_t::fw_sleep [private]
5.98.4.7 MHAParser::string_t fw_t::fw_until [private]
5.98.4.8 MHAParser::kw_t fw_t::fw_cmd [private]
5.98.4.9
        MHAParser::string_mon_t fw_t::parserstate [private]
5.98.4.10 MHAParser::string_t fw_t::errorlog [private]
5.98.4.11 MHAParser::string_t fw_t::fatallog [private]
5.98.4.12 MHAParser::vstring tfw_t::plugins [private]
5.98.4.13 MHAParser::vstring_t fw_t::plugin_paths [private]
5.98.4.14 MHAParser::bool_t fw_t::dump_mha [private]
5.98.4.15 MHAParser::string_t fw_t::inst_name [private]
A variable for naming MHA instances.
```

```
5.98.4.16 MHAKernel::algo_comm_class_t fw_t::ac [private]
5.98.4.17 PluginLoader::mhapluginloader_t* fw_t::proc_lib [private]
5.98.4.18 io_lib_t* fw_t::io_lib [private]
5.98.4.19 mhaconfig_t fw_t::cfin [private]
5.98.4.20 mhaconfig_t fw_t::cfout [private]
5.98.4.21 state_t fw_t::state [private]
5.98.4.22 bool fw_t::b_exit_request [private]
5.98.4.23 int fw_t::proc_error [protected]
5.98.4.24 int fw_t::io_error [protected]
5.98.4.25 MHAParser::string_mon_t fw_t::proc_error_string [private]
5.98.4.26 MHAEvents::patchbay_t<fw_t> fw_t::patchbay [private]
```

The documentation for this class was generated from the following files:

- mhafw\_lib.h
- mhafw\_lib.cpp

# 5.99 fw\_vars\_t Class Reference

## **Public Member Functions**

- fw\_vars\_t (MHAParser::parser\_t &)
- void lock srate fragsize ()
- void lock\_channels ()
- void unlock\_srate\_fragsize ()
- void unlock channels ()

## **Public Attributes**

- MHAParser::int\_t pinchannels
- MHAParser::int\_t pfragmentsize
- MHAParser::float\_t psrate

```
5.99.1 Constructor & Destructor Documentation
```

```
5.99.1.1 fw_vars_t::fw_vars_t (

MHAParser::parser_t & p )
```

5.99.2 Member Function Documentation

```
5.99.2.1 void fw_vars_t::lock_srate_fragsize ( )
```

5.99.2.2 void fw\_vars\_t::lock\_channels ( )

5.99.2.3 void fw\_vars\_t::unlock\_srate\_fragsize ( )

5.99.2.4 void fw\_vars\_t::unlock\_channels ( )

5.99.3 Member Data Documentation

5.99.3.1 MHAParser::int\_t fw\_vars\_t::pinchannels

5.99.3.2 MHAParser::int\_t fw\_vars\_t::pfragmentsize


5.99.3.3 MHAParser::float\_t fw\_vars\_t::psrate

The documentation for this class was generated from the following files:

- · mhafw\_lib.h
- · mhafw\_lib.cpp

# 5.100 gain::gain\_if\_t Class Reference

Inheritance diagram for gain::gain\_if\_t:

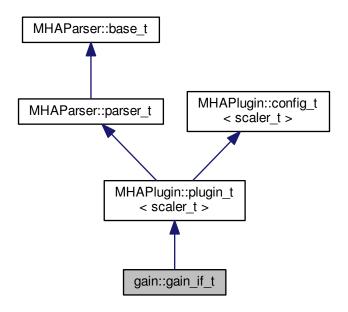

# **Public Member Functions**

- gain\_if\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

# **Private Member Functions**

- void update\_gain ()
- void update\_bbgain ()
- void update\_minmax ()

#### **Private Attributes**

- MHAEvents::patchbay\_t< gain\_if\_t > patchbay
- MHAParser::vfloat\_t gains
- MHAParser::float\_t bbgain
- MHAParser::float\_t vmin
- MHAParser::float\_t vmax

#### **Additional Inherited Members**


```
5.100.1 Constructor & Destructor Documentation
5.100.1.1 gain::gain_if_t::gain_if_t (
                      const algo_comm_t & iac,
                      const std::string &,
                      const std::string & )
5.100.2 Member Function Documentation
5.100.2.1
         mha_wave_t * gain::gain_if_t::process (
                      mha_wave_t * s )
5.100.2.2 mha_spec_t * gain::gain_if_t::process (
                      mha_spec_t * s )
5.100.2.3 void gain::gain_if_t::prepare (
                      mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < scaler t > (p. 692).
5.100.2.4 void gain::gain_if_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin t < scaler t > (p. 693).
5.100.2.5 void gain::gain_if_t::update_gain() [private]
5.100.2.6
         void gain::gain_if_t::update_bbgain( ) [private]
5.100.2.7 void gain::gain if t::update minmax() [private]
5.100.3 Member Data Documentation
5.100.3.1
         MHAEvents::patchbay_t<gain_if_t> gain::gain_if_t::patchbay [private]
5.100.3.2 MHAParser::vfloat_t gain::gain_if_t::gains [private]
5.100.3.3 MHAParser::float_t gain::gain_if_t::bbgain [private]
5.100.3.4 MHAParser::float t gain::gain_if_t::vmin [private]
5.100.3.5 MHAParser::float t gain::gain_if_t::vmax [private]
```

The documentation for this class was generated from the following file:

gain.cpp

# 5.101 gain::scaler\_t Class Reference

Inheritance diagram for gain::scaler\_t:

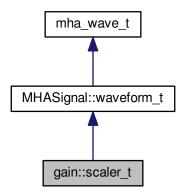

#### **Public Member Functions**

• scaler\_t (const unsigned int &channels, const MHAParser::vfloat\_t &gains)

**Additional Inherited Members** 

5.101.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

· gain.cpp

# 5.102 hanning\_ramps\_t Class Reference

**Public Member Functions** 

- hanning\_ramps\_t (unsigned int, unsigned int)
- ∼hanning\_ramps\_t ()
- void operator() (MHASignal::waveform\_t &)

# **Private Attributes**

```
• unsigned int len_a
```

```
unsigned int len_b
```

- mha\_real\_t \* ramp\_a
- mha\_real\_t \* ramp\_b

```
5.102.1 Constructor & Destructor Documentation
```

```
5.102.1.2 hanning_ramps_t::~hanning_ramps_t ( void )
```

5.102.2 Member Function Documentation

```
5.102.2.1 void hanning_ramps_t::operator() (

MHASignal::waveform_t & b)
```

5.102.3 Member Data Documentation

```
5.102.3.1 unsigned int hanning_ramps_t::len_a [private]
```

**5.102.3.2 unsigned int hanning\_ramps\_t::len\_b** [private]

**5.102.3.3 mha\_real\_t**\* **hanning\_ramps\_t::ramp\_a** [private]


**5.102.3.4 mha\_real\_t**\* **hanning\_ramps\_t::ramp\_b** [private]

The documentation for this class was generated from the following file:

spec2wave.cpp

# 5.103 hilbert\_shifter\_t Class Reference

Inheritance diagram for hilbert\_shifter\_t:

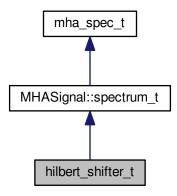

#### **Public Member Functions**

- hilbert\_shifter\_t (unsigned int fftlen, unsigned int channels, mha\_real\_t srate, unsigned int kmin, unsigned int kmax, std::vector< mha\_real\_t > dphi, unsigned int frameshift, unsigned int maxirslen, unsigned int phasemode)
- ∼hilbert shifter t()
- void process (mha\_spec\_t \*)

# **Private Attributes**

- MHASignal::spectrum\_t fullspec
- MHASignal::spectrum t analytic
- MHASignal::waveform\_t shifted
- MHASignal::spectrum\_t mixw\_shift
- MHASignal::spectrum\_t mixw\_ref
- fftw\_plan plan\_spec2analytic
- · mha fft t mhafft
- MHASignal::waveform\_t phi
- MHASignal::waveform\_t dphi
- unsigned int kmin
- unsigned int kmax
- unsigned int frameshift

#### **Additional Inherited Members**


```
5.103.1 Constructor & Destructor Documentation
5.103.1.1 hilbert shifter t::hilbert shifter t (
                      unsigned int fftlen,
                      unsigned int channels,
                      mha real t srate,
                      unsigned int kmin,
                      unsigned int kmax,
                      std::vector< mha_real_t > dphi,
                      unsigned int frameshift,
                      unsigned int maxirslen,
                      unsigned int phasemode )
5.103.1.2 hilbert_shifter_t::~hilbert_shifter_t()
5.103.2 Member Function Documentation
5.103.2.1
         void hilbert_shifter_t::process (
                      mha spec t * s)
5.103.3 Member Data Documentation
5.103.3.1
          MHASignal::spectrum_t hilbert_shifter_t::fullspec [private]
5.103.3.2 MHASignal::spectrum_t hilbert_shifter_t::analytic [private]
5.103.3.3 MHASignal::waveform t hilbert_shifter_t::shifted [private]
5.103.3.4 MHASignal::spectrum_t hilbert_shifter_t::mixw_shift [private]
5.103.3.5 MHASignal::spectrum_t hilbert_shifter_t::mixw_ref [private]
5.103.3.6 fftw_plan hilbert_shifter_t::plan_spec2analytic [private]
5.103.3.7 mha_fft_t hilbert_shifter_t::mhafft [private]
5.103.3.8 MHASignal::waveform_t hilbert_shifter_t::phi [private]
5.103.3.9 MHASignal::waveform t hilbert_shifter_t::dphi [private]
5.103.3.10 unsigned int hilbert_shifter_t::kmin [private]
5.103.3.11 unsigned int hilbert_shifter_t::kmax [private]
5.103.3.12 unsigned int hilbert_shifter_t::frameshift [private]
```

The documentation for this class was generated from the following file:

# fshift hilbert.cpp

# 5.104 identity\_t Class Reference

Inheritance diagram for identity\_t:

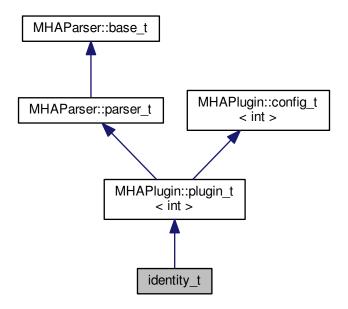

# **Public Member Functions**

- identity\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

## **Additional Inherited Members**

#### 5.104.1 Constructor & Destructor Documentation

# 5.104.2 Member Function Documentation


Reimplemented from MHAPlugin::plugin\_t < int > (p. 693).

The documentation for this class was generated from the following file:

# · identity.cpp

# 5.105 iirfilter\_t Class Reference

Inheritance diagram for iirfilter\_t:

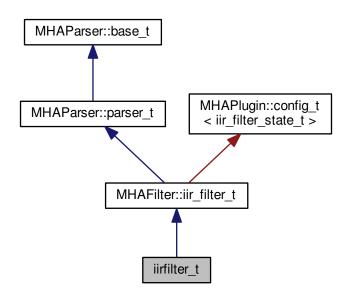

**Public Member Functions** 

```
• iirfilter_t (const algo_comm_t &, const std::string &, const std::string &)
```

- void prepare\_ (mhaconfig\_t &)
- void release\_()
- mha\_wave\_t \* process (mha\_wave\_t \*)

**Additional Inherited Members** 

```
5.105.1 Constructor & Destructor Documentation
```

5.105.2 Member Function Documentation

The documentation for this class was generated from the following file:


mha\_wave\_t \* s )

# iirfilter.cpp

5.106 io\_file\_t Class Reference

File IO.

Inheritance diagram for io\_file\_t:

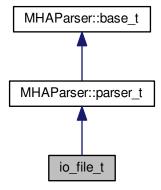

#### **Public Member Functions**

- io\_file\_t (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_←
  handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop←
  \_event, void \*stop\_handle)
- ~io\_file\_t ()
- void prepare (int, int)

Allocate buffers, activate FILE client and install internal ports.

- void start ()
- void stop ()
- void release ()

Remove FILE client and deallocate internal ports and buffers.

#### **Private Member Functions**

- void stopped (int, int)
- void setlock (bool locked)

lock or unlock all parser variables.

# **Private Attributes**

- int fragsize
- · float samplerate
- · int nchannels in
- int nchannels\_file\_in
- int nchannels out
- IOProcessEvent\_t proc\_event
- void \* proc handle
- IOStartedEvent t start event
- void \* start\_handle
- IOStoppedEvent t stop event
- void \* stop\_handle
- MHAParser::string\_t filename\_input
- MHAParser::string\_t filename\_output
- MHAParser::kw t output sample format
- MHAParser::int\_t startsample
- MHAParser::int\_t length
- MHAParser::bool t strict channel match
- MHAParser::bool\_t strict\_srate\_match
- MHASignal::waveform t \* s in
- MHASignal::waveform\_t \* s\_file\_in
- mha\_wave\_t \* s\_out
- bool b prepared
- SNDFILE \* sf in
- SNDFILE \* sf out
- · SF INFO sfinf in
- SF\_INFO sfinf\_out
- · sf count t total read

```
Additional Inherited Members
```

```
5.106.1 Detailed Description
```

File IO.

```
5.106.2 Constructor & Destructor Documentation
```

```
5.106.2.2 io_file_t:: ~io_file_t ( )
```

5.106.3 Member Function Documentation

Allocate buffers, activate FILE client and install internal ports.

```
5.106.3.2 void io_file_t::start ( )

5.106.3.3 void io_file_t::stop ( )

5.106.3.4 void io_file_t::release ( void )
```

Remove FILE client and deallocate internal ports and buffers.

lock or unlock all parser variables.

Used in prepare/release.

## **Parameters**

locked When true, locks. When false, unlocks.

```
5.106.4 Member Data Documentation
5.106.4.1 int io_file_t::fragsize [private]
5.106.4.2 float io_file_t::samplerate [private]
5.106.4.3 int io_file_t::nchannels_in [private]
5.106.4.4 int io_file_t::nchannels_file_in [private]
5.106.4.5 int io_file_t::nchannels_out [private]
5.106.4.6 IOProcessEvent_t io_file_t::proc_event [private]
5.106.4.7 void* io_file_t::proc_handle [private]
5.106.4.8 IOStartedEvent_t io_file_t::start_event [private]
5.106.4.9 void* io_file_t::start_handle [private]
5.106.4.10 IOStoppedEvent tio_file_t::stop_event [private]
5.106.4.11 void* io_file_t::stop_handle [private]
5.106.4.12 MHAParser::string_t io_file_t::filename_input [private]
5.106.4.13 MHAParser::string_t io_file_t::filename_output [private]
5.106.4.14 MHAParser::kw_t io_file_t::output_sample_format [private]
5.106.4.15 MHAParser::int_t io_file_t::startsample [private]
5.106.4.16 MHAParser::int_t io_file_t::length [private]
5.106.4.17 MHAParser::bool_t io_file_t::strict_channel_match [private]
5.106.4.18 MHAParser::bool_t io_file_t::strict_srate_match [private]
```

```
5.106.4.19 MHASignal::waveform_t*io_file_t::s_in [private]
5.106.4.20 MHASignal::waveform_t*io_file_t::s_file_in [private]
5.106.4.21 mha_wave_t*io_file_t::s_out [private]
5.106.4.22 bool io_file_t::b_prepared [private]
5.106.4.23 SNDFILE*io_file_t::sf_in [private]
5.106.4.24 SNDFILE*io_file_t::sf_out [private]
5.106.4.25 SF_INFO io_file_t::sfinf_in [private]
5.106.4.26 SF_INFO io_file_t::sfinf_out [private]
5.106.4.27 sf_count_t io_file_t::total_read [private]
```


The documentation for this class was generated from the following file:

# MHAIOFile.cpp

5.107 io\_lib\_t Class Reference

Class for loading MHA sound IO module.

Inheritance diagram for io\_lib\_t:

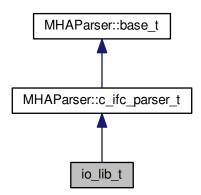

#### **Public Member Functions**

io\_lib\_t (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_
handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_
event, void \*stop\_handle, std::string libname)

load and initialize MHA sound io module.

• ~io\_lib\_t ()

Deinitialize and unload this MHA sound io module.

• void **prepare** (unsigned int inch, unsigned int outch)

Prepare the sound io module.

• void start ()

Tell the sound io module to start sound processing.

- void stop ()
- void release ()
- std::string lib\_str\_error (int err)

# **Protected Member Functions**

void test\_error ()

#### **Protected Attributes**

- int lib\_err
- · dynamiclib t lib handle
- void \* lib data
- IOInit\_t IOInit\_cb
- IOPrepare\_t IOPrepare\_cb
- · IOStart t IOStart cb
- IOStop\_t IOStop\_cb
- IORelease\_t IORelease\_cb
- IOSetVar\_t IOSetVar\_cb
- IOStrError\_t IOStrError\_cb
- IODestroy\_t IODestroy\_cb

#### **Additional Inherited Members**

# 5.107.1 Detailed Description

Class for loading MHA sound IO module.

## 5.107.2 Constructor & Destructor Documentation

load and initialize MHA sound io module.

```
5.107.2.2 io_lib_t::~io_lib_t( )
```

Deinitialize and unload this MHA sound io module.

5.107.3 Member Function Documentation

Prepare the sound io module.

After preparation, the sound io module may start the sound processing at any time (external trigger). When the sound processing is started, the sound io module will call the start\_event callback.

## **Parameters**

inch	number of input channels
outch	number of output channels

```
5.107.3.2 void io_lib_t::start ( )
```

Tell the sound io module to start sound processing.

Some io modules need this, for others that wait for external events this method might do nothing.

```
5.107.3.3 void io_lib_t::stop ( )
5.107.3.4 void io_lib_t::release()
5.107.3.5 std::string io_lib_t::lib_str_error (
                      int err )
5.107.3.6 void io_lib_t::test_error() [protected]
5.107.4 Member Data Documentation
5.107.4.1 int io_lib_t::lib_err [protected]
5.107.4.2 dynamiclib tio_lib_t::lib_handle [protected]
5.107.4.3 void* io_lib_t::lib_data [protected]
5.107.4.4 IOInit_t io_lib_t::IOInit_cb [protected]
5.107.4.5 IOPrepare_t io_lib_t::IOPrepare_cb [protected]
5.107.4.6 IOStart_t io_lib_t::IOStart_cb [protected]
5.107.4.7 IOStop_t io_lib_t::IOStop_cb [protected]
5.107.4.8 | IORelease tio lib t::IORelease cb [protected]
5.107.4.9 IOSetVar_t io_lib_t::IOSetVar_cb [protected]
5.107.4.10 IOStrError_t io_lib_t::IOStrError_cb [protected]
5.107.4.11 IODestroy_t io_lib_t::IODestroy_cb [protected]
```


The documentation for this class was generated from the following files:

- · mhafw lib.h
- mhafw\_lib.cpp

5.108 io\_parser\_t Class Reference

Main class for Parser IO.

Inheritance diagram for io parser t:

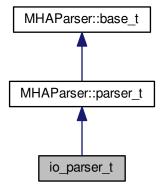

## **Public Member Functions**

- io\_parser\_t (unsigned int fragsize, IOProcessEvent\_t proc\_event, void \*proc\_handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_event, void \*stop\_handle)
- ~io\_parser\_t ()
- void **prepare** (int, int)

Allocate buffers, activate JACK client and install internal ports.

- void start ()
- void stop ()
- void release ()

Remove JACK client and deallocate internal ports and buffers.

#### **Private Member Functions**

- void stopped (int, int)
- void started ()
- void process\_frame ()

#### **Private Attributes**

- · unsigned int fragsize
- unsigned int nchannels\_in
- unsigned int nchannels\_out
- IOProcessEvent\_t proc\_event
- void \* proc handle
- IOStartedEvent\_t start\_event
- void \* start\_handle
- IOStoppedEvent\_t stop\_event
- void \* stop handle
- MHAParser::mfloat\_t input
- MHAParser::mfloat mon t output
- MHASignal::waveform\_t \* s\_in
- mha\_wave\_t \* s\_out
- bool b\_fw\_started
- bool b\_stopped
- bool b\_prepared
- bool b\_starting
- MHAEvents::patchbay\_t< io\_parser\_t > patchbay

#### **Additional Inherited Members**

```
5.108.1 Detailed Description
```

Main class for Parser IO.

```
5.108.2 Constructor & Destructor Documentation
```

```
5.108.2.2 io_parser_t::\simio_parser_t ( )
```

5.108.3 Member Function Documentation

Allocate buffers, activate JACK client and install internal ports.

```
5.108.3.2 void io_parser_t::start ( )
5.108.3.3 void io_parser_t::stop ( )
5.108.3.4 void io_parser_t::release (
                     void )
Remove JACK client and deallocate internal ports and buffers.
5.108.3.5 void io_parser_t::stopped (
                     int proc_err,
                     int io_err ) [private]
5.108.3.6 void io_parser_t::started( ) [private]
5.108.3.7 void io_parser_t::process_frame() [private]
5.108.4 Member Data Documentation
5.108.4.1 unsigned int io parser t::fragsize [private]
5.108.4.2 unsigned int io_parser_t::nchannels_in [private]
5.108.4.3 unsigned int io_parser_t::nchannels_out [private]
5.108.4.4 IOProcessEvent_t io_parser_t::proc_event [private]
5.108.4.5 void*io_parser_t::proc_handle [private]
5.108.4.6 IOStartedEvent_t io_parser_t::start_event [private]
5.108.4.7 void* io_parser_t::start_handle [private]
5.108.4.8 IOStoppedEvent_t io_parser_t::stop_event [private]
5.108.4.9 void*io_parser_t::stop_handle [private]
5.108.4.10 MHAParser::mfloat_t io_parser_t::input [private]
5.108.4.11 MHAParser::mfloat_mon_t io_parser_t::output [private]
5.108.4.12 MHASignal::waveform_t* io_parser_t::s_in [private]
5.108.4.13 mha_wave_t* io_parser_t::s_out [private]
5.108.4.14 boolio_parser_t::b_fw_started [private]
5.108.4.15 bool io_parser_t::b_stopped [private]
5.108.4.16 bool io_parser_t::b_prepared [private]
5.108.4.17 bool io_parser_t::b_starting [private]
5.108.4.18 MHAEvents::patchbay_t<io_parser_t>io_parser_t::patchbay [private]
```

The documentation for this class was generated from the following file:

# MHAIOParser.cpp

## 5.109 io\_tcp\_fwcb\_t Class Reference

TCP sound-io library's interface to the framework callbacks.

## **Public Member Functions**

io\_tcp\_fwcb\_t (IOProcessEvent\_t proc\_event, void \*proc\_handle, IOStartedEvent
 \_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_event, void \*stop\_
 handle)

Constructor stores framework handles and initializes error numbers to 0.

virtual ~io\_tcp\_fwcb\_t ()

Do-nothing destructor.

virtual void start ()

Call the framework's start callback.

virtual int process (mha\_wave\_t \*sln, mha\_wave\_t \*&sOut)

Call the frameworks processing callback.

• virtual void set errnos (int proc err, int io err)

Save error numbers to use during.

• virtual void stop ()

Call the frameworks stop callback.

## **Private Attributes**

IOProcessEvent\_t proc\_event

Pointer to signal processing callback function.

IOStartedEvent t start event

Pointer to start notification callback function.

IOStoppedEvent\_t stop\_event

Pointer to stop notification callback function.

void \* proc\_handle

Handles belonging to framework.

- void \* start\_handle
- void \* stop handle
- int proc\_err

Errors from the processing callback and from the TCP IO itself are stored here before closing Network handles.

int io\_err

## 5.109.1 Detailed Description

TCP sound-io library's interface to the framework callbacks.

## 5.109.2 Constructor & Destructor Documentation

Constructor stores framework handles and initializes error numbers to 0.

```
5.109.2.2 virtual io_tcp_fwcb_t::~io_tcp_fwcb_t() [inline], [virtual]
```

Do-nothing destructor.

```
5.109.3 Member Function Documentation
```

```
5.109.3.1 void io_tcp_fwcb_t::start( ) [virtual]
```

Call the framework's start callback.

Call the frameworks processing callback.

## **Parameters**

sIn	The input sound data just received from TCP.
sOut	A pointer to output sound data. Will point to the output sound data storage when the
	callback finishes.

## **Returns**

Status, an error number from the signal processing callback. If this is != 0, then the connection should be closed.

Save error numbers to use during.

See also

```
stop (p. 348)
```

#### **Parameters**

```
proc_err The error number from the
```

See also

```
process (p. 347) callback.
```

#### **Parameters**

io_err	The error number from the io library itself.
--------	--

```
5.109.3.4 void io_tcp_fwcb_t::stop( ) [virtual]
```

Call the frameworks stop callback.

Uses the error numbers set previously with

See also

```
set_errnos (p. 347).
```

5.109.4 Member Data Documentation

```
5.109.4.1 IOProcessEvent_t io_tcp_fwcb_t::proc_event [private]
```

Pointer to signal processing callback function.

```
5.109.4.2 IOStartedEvent_t io_tcp_fwcb_t::start_event [private]
```

Pointer to start notification callback function.

Called when a new TCP connection is established or the user issues the start command while there is a connection.

```
5.109.4.3 IOStoppedEvent_tio_tcp_fwcb_t::stop_event [private]
```

Pointer to stop notification callback function.

Called when the connection is closed.

```
5.109.4.4 void* io_tcp_fwcb_t::proc_handle [private]
```

Handles belonging to framework.

```
5.109.4.5 void * io_tcp_fwcb_t::start_handle [private]
```

Errors from the processing callback and from the TCP IO itself are stored here before closing Network handles.

MHAIOTCP is notified by the server when the connection has been taken down, and calls

#### See also

**stop** (p. 348) from that callback. Within **stop** (p. 348), these error numbers are read again and transmitted to the framework.


The documentation for this class was generated from the following file:

# MHAIOTCP.cpp

# 5.110 io\_tcp\_parser\_t Class Reference

The parser interface of the IOTCP library.

Inheritance diagram for io\_tcp\_parser\_t:

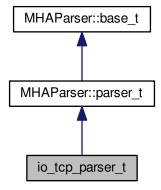

#### **Public Member Functions**

• virtual const std::string & get local address () const

Read parser variable local\_address, this is the address of the network interface that should listen for incoming connections.

virtual unsigned short get\_local\_port () const

Read parser variable local\_port, this is the TCP port that should be used for incoming connections.

virtual void set local port (unsigned short port)

Set parser variable local\_port.

virtual bool get\_server\_port\_open () const

Return the status of the server port as it is known to the parser.

virtual void set\_server\_port\_open (bool open)

Inform the parser of the current status of the server socket.

virtual bool get\_connected () const

Return the parser's knowledge concerning wether there currently exists an established sound data TCP connection or not.

virtual void set\_connected (bool connected)

Inform the parser about the existance of a sound data connection.

virtual void set\_new\_peer (unsigned short port, const std::string &host)

Set parser monitor variables peer port and peer address, and calls set connected(true).

io\_tcp\_parser\_t ()

Constructor initializes parser variables.

virtual ~io\_tcp\_parser\_t ()

Do-nothing destructor.

virtual void debug (const std::string &message)

## **Private Attributes**

MHAParser::string t local address

Lets the user set the local network interface to listen on.

MHAParser::int\_t local\_port

Lets the user choose the local tcp port to listen on.

MHAParser::int\_mon\_t server\_port\_open

Indicates wether the TCP server socket is currently open.

MHAParser::int mon t connected

Indicator if there currently is a sound data connection over TCP.

MHAParser::string\_mon\_t peer\_address

Display the ip address of the currently connected sound data client.

MHAParser::int\_mon\_t peer\_port

Display the tcp port used by the current sound data client.

MHAParser::string\_t debug\_filename

filename to write debugging info to (if non-empty)

• FILE \* debug file

file handle to write debugging info to

**Additional Inherited Members** 

5.110.1 Detailed Description

The parser interface of the IOTCP library.

5.110.2 Constructor & Destructor Documentation

```
5.110.2.1 io_tcp_parser_t::io_tcp_parser_t ( )
```

Constructor initializes parser variables.

```
5.110.2.2 virtual io_tcp_parser_t::~io_tcp_parser_t() [inline], [virtual]
```

Do-nothing destructor.

5.110.3 Member Function Documentation

```
5.110.3.1 virtual const std::string& io_tcp_parser_t::get_local_address ( ) const [inline], [virtual]
```

Read parser variable local\_address, this is the address of the network interface that should listen for incoming connections.

#### Returns

A string containing the address of the local interface as it was set by the user.

```
5.110.3.2 unsigned short io_tcp_parser_t::get_local_port() const [virtual]
```

Read parser variable local\_port, this is the TCP port that should be used for incoming connections.

#### Returns

The local tcp port to listen on as it was chosen by the user. The port number is between MIN\_TCP\_PORT and MAX\_TCP\_PORT.

Set parser variable local port.

This is needed when it was set to 0 before: In this case, the OS chooses a free port for the TCP server socket, and the port that it chose has to be published to the user via the parser interface.

## **Parameters**

port	The TCP port number that is currently used. In the range [MIN_TCP_PORT,
	MAX_TCP_PORT], excluding 0.

## Precondition

```
get_local_port() (p. 351) currently returns 0.
```

```
5.110.3.4 boolio_tcp_parser_t::get_server_port_open() const [virtual]
```

Return the status of the server port as it is known to the parser.

#### Returns

false after initialization, or the value most recently set via

#### See also

```
set_server_port_open (p. 352).
```

Inform the parser of the current status of the server socket.

#### **Parameters**

*open* Indicates wether the server socket has just been opened or closed.

## Precondition

open may only have the value true if **get\_server\_port\_open()** (p. 352) currently returns false.

## **Postcondition**

# See also

get\_server\_port\_open (p. 352) returns the value (p. 52) of open.

```
5.110.3.6 bool io_tcp_parser_t::get_connected( ) const [virtual]
```

Return the parser's knowledge concerning wether there currently exists an established sound data TCP connection or not.

#### **Returns**

false after initialization, or the value most recently set via

See also

```
set_connected (p. 353).
```

Inform the parser about the existance of a sound data connection.

#### **Parameters**

```
connected Indicates wether there currently is a connection or not.
```

#### Precondition

connected must not have the same value that is currently returned by

See also

```
get_connected (p. 353).
```

**Postcondition** 

See also

```
get_connected (p. 353) returns the value (p. 52) of open.
```

Set parser monitor variables peer\_port and peer\_address, and calls set\_connected(true).

This method should be called when a new connection is established.

## **Parameters**

port	The TCP port number used by the peer.
host	The Internet host where the peer is located.

Precondition

See also

get\_connected (p. 353) currently returns false.

Postcondition

See also

**get\_connected** (p. 353) returns true.

5.110.4 Member Data Documentation

```
5.110.4.1 MHAParser::string_t io_tcp_parser_t::local_address [private]
```

Lets the user set the local network interface to listen on.

```
5.110.4.2 MHAParser::int_t io_tcp_parser_t::local_port [private]
```

Lets the user choose the local tcp port to listen on.

```
5.110.4.3 MHAParser::int_mon_t io_tcp_parser_t::server_port_open [private]
```

Indicates wether the TCP server socket is currently open.

```
5.110.4.4 MHAParser::int_mon_t io_tcp_parser_t::connected [private]
```

Indicator if there currently is a sound data connection over TCP.

5.110.4.5 MHAParser::string\_mon\_t io\_tcp\_parser\_t::peer\_address [private]

Display the ip address of the currently connected sound data client.

**5.110.4.6** MHAParser::int\_mon\_t io\_tcp\_parser\_t::peer\_port [private]

Display the tcp port used by the current sound data client.

**5.110.4.7 MHAParser::string\_t io\_tcp\_parser\_t::debug\_filename** [private]

filename to write debugging info to (if non-empty)

**5.110.4.8 FILE**\* **io\_tcp\_parser\_t::debug\_file** [private]

file handle to write debugging info to

The documentation for this class was generated from the following file:

MHAIOTCP.cpp

5.111 io\_tcp\_sound\_t Class Reference

Sound data handling of io top library.

## Classes

union float union

This union helps in conversion of floats from host byte order to network byte order and back again.

**Public Member Functions** 

• io\_tcp\_sound\_t (int fragsize, float samplerate)

Initialize sound data handling.

virtual ~io\_tcp\_sound\_t ()

Do-nothing destructor.

virtual void prepare (int num\_inchannels, int num\_outchannels)

Called during prepare, sets number of audio channels and allocates sound data storage.

virtual void release ()

Called during release.

virtual int chunkbytes\_in () const

Number of bytes that constitute one input sound chunk.

virtual std::string header () const

Create the tcp sound header lines.

virtual mha\_wave\_t \* ntoh (const std::string &data)

Copy data received from tcp into mha\_wave\_t (p. 462) structure.

virtual std::string hton (const mha\_wave\_t \*s\_out)

Copy sound data from the output sound structure to a string.

## **Static Private Member Functions**

static void check\_sound\_data\_type ()

Check if mha\_real\_t is a usable 32-bit floating point type.

#### **Private Attributes**

• int fragsize

Number of sound samples in each channel expected and returned from processing callback.

float samplerate

Sampling rate.

• int num\_inchannels

Number of input channels.

- int num outchannels
- MHASignal::waveform\_t \* s\_in

Storage for input signal.

# 5.111.1 Detailed Description

Sound data handling of io tcp library.

## 5.111.2 Constructor & Destructor Documentation

Initialize sound data handling.

Checks sound data type by calling

## See also

```
check_sound_data_type (p. 357).
```

## **Parameters**

fragsize	Number of sound samples in each channel expected and returned from processing callback.
samplerate	Number of samples per second in each channel.

```
5.111.2.2 virtual io_tcp_sound_t::~io_tcp_sound_t( ) [inline], [virtual]
```

Do-nothing destructor.

#### 5.111.3 Member Function Documentation

```
5.111.3.1 void io_tcp_sound_t::check_sound_data_type( ) [static], [private]
```

Check if mha\_real\_t is a usable 32-bit floating point type.

## **Exceptions**

```
MHA_Error (p. 413) if mha_real_t is not compatible to 32-bit float.
```

Called during prepare, sets number of audio channels and allocates sound data storage.

#### **Parameters**

num_inchannels	Number of input audio channels.
num_outchannels	Number of output audio channels.

Called during release.

Deletes sound data storage.

```
5.111.3.4 int io_tcp_sound_t::chunkbytes_in() const [virtual]
```

Number of bytes that constitute one input sound chunk.

# **Returns**

Number of bytes to read from TCP connection before invoking signal processing.

```
5.111.3.5 std::string io_tcp_sound_t::header( ) const [virtual]
```

Create the tcp sound header lines.

Copy data received from tcp into **mha\_wave\_t** (p. 462) structure.

Doing network-to-host byte order swapping in the process.

#### **Parameters**

```
data One chunk (
```

## See also

```
chunkbytes_in (p. 357)) of sound data to process.
```

#### Returns

Pointer to the sound data storage.

Copy sound data from the output sound structure to a string.

Doing host-to-network byte order swapping while at it.

#### **Parameters**

```
s_out Pointer to the storage of the sound to put out.
```

## **Returns**

The sound data in network byte order.

5.111.4 Member Data Documentation

```
5.111.4.1 int io_tcp_sound_t::fragsize [private]
```

Number of sound samples in each channel expected and returned from processing callback.

```
5.111.4.2 float io_tcp_sound_t::samplerate [private]
```

Sampling rate.

Number of samples per second in each channel.

**5.111.4.3** int io\_tcp\_sound\_t::num\_inchannels [private]

Number of input channels.

Number of channels expected from and returned by signal processing callback.

```
5.111.4.4 int io_tcp_sound_t::num_outchannels [private]
```

**5.111.4.5** MHASignal::waveform\_t\* io\_tcp\_sound\_t::s\_in [private]

Storage for input signal.

The documentation for this class was generated from the following file:

# MHAIOTCP.cpp

# 5.112 io\_tcp\_sound\_t::float\_union Union Reference

This union helps in conversion of floats from host byte order to network byte order and back again.

#### **Public Attributes**

- float f
- unsigned int i
- char **c** [4]

## 5.112.1 Detailed Description

This union helps in conversion of floats from host byte order to network byte order and back again.

# 5.112.2 Member Data Documentation

5.112.2.1 float io tcp sound t::float union::f

5.112.2.2 unsigned int io\_tcp\_sound\_t::float\_union::i

5.112.2.3 char io\_tcp\_sound\_t::float\_union::c[4]

The documentation for this union was generated from the following file:

# MHAIOTCP.cpp

## 5.113 io\_tcp\_t Class Reference

The tcp sound io library.

#### **Public Member Functions**

io\_tcp\_t (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_
handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_
event, void \*stop\_handle)

• void **prepare** (int num\_inchannels, int num\_outchannels)

Allocate server socket and start thread waiting for sound data exchange.

• void start ()

Call frameworks start callback if there is a sound data connection at the moment.

• void stop ()

Close the current connection if there is one.

• void release ()

Close the current connection and close the server socket.

virtual void accept\_loop ()

IO thread executes this method.

virtual void connection\_loop (MHA\_TCP::Connection \*c)

IO thread executes this method for each connection.

virtual void parse (const char \*cmd, char \*retval, unsigned int len)

Parser interface.

virtual ~io\_tcp\_t ()

#### **Private Attributes**

- io\_tcp\_parser\_t parser
- io\_tcp\_sound\_t sound
- · io\_tcp\_fwcb\_t fwcb
- MHA\_TCP::Server \* server
- MHA TCP::Thread \* thread
- MHA TCP::Async Notify notify start
- MHA\_TCP::Async\_Notify\_stop
- MHA\_TCP::Async\_Notify\_release

## 5.113.1 Detailed Description

The tcp sound io library.

```
5.113.2 Constructor & Destructor Documentation
```

Allocate server socket and start thread waiting for sound data exchange.

int num\_outchannels )

prepare opens the tcp server socket and starts the io thread that listens for audio data on the tcp socket after doing some sanity checks

```
5.113.3.2 void io_tcp_t::start ( )
```

Call frameworks start callback if there is a sound data connection at the moment.

```
5.113.3.3 void io_tcp_t::stop ( )
```

Close the current connection if there is one.

stop IO thread

```
5.113.3.4 void io_tcp_t::release ( void )
```

Close the current connection and close the server socket.

Stop IO thread and close server socket.

```
5.113.3.5 void io_tcp_t::accept_loop( ) [virtual]
```

IO thread executes this method.

IO thread executes this method for each connection.

## **Parameters**

c pointer to connection. connection\_loop deletes connection before exiting.

Parser interface.

```
5.113.4 Member Data Documentation
```

```
5.113.4.1 io_tcp_parser_t io_tcp_t::parser [private]
```

```
5.113.4.2 io_tcp_sound_t io_tcp_t::sound [private]
```

```
5.113.4.3 io tcp fwcb tio_tcp_t::fwcb [private]
```

```
5.113.4.4 MHA_TCP::Server* io_tcp_t::server [private]
```

```
5.113.4.5 MHA TCP::Thread*io_tcp_t::thread [private]
```

```
5.113.4.6 MHA_TCP::Async_Notify io_tcp_t::notify_start [private]
```

```
5.113.4.7 MHA_TCP::Async_Notify io_tcp_t::notify_stop [private]
```

5.113.4.8 MHA TCP::Async Notify io\_tcp\_t::notify\_release [private]

The documentation for this class was generated from the following file:

# MHAIOTCP.cpp

## 5.114 latex doc t Class Reference

**Public Member Functions** 

- latex\_doc\_t (const std::string &plugname, const std::string &plugin\_macro)
- std::string get\_latex\_doc ()
- std::string get\_main\_category ()
- std::vector< std::string > get\_categories ()

## **Private Member Functions**

- std::string strdom (mha domain t d)
- std::string get\_ac (MHAKernel::algo\_comm\_class\_t &ac, std::string txt)
- std::string parsername (std::string s)
- std::string get\_parser\_var (MHAParser::base\_t \*p, std::string name)
- std::string **get\_parser\_tab** (**MHAParser::base\_t** \*p, std::string prefix)

## **Private Attributes**

- std::string plugname
- std::string latex\_plugname
- · MHAKernel::algo comm class tac
- PluginLoader::mhapluginloader\_t loader
- std::string plugin\_macro


```
5.114.1 Constructor & Destructor Documentation
5.114.1.1 latex_doc_t::latex_doc_t (
                       const std::string & plugname,
                       const std::string & plugin_macro )
5.114.2 Member Function Documentation
5.114.2.1 std::string latex_doc_t::get_latex_doc()
5.114.2.2 std::string latex_doc_t::get_main_category ( )
5.114.2.3 std::vector< std::string > latex_doc_t::get_categories ( )
5.114.2.4 std::string latex_doc_t::strdom (
                       mha_domain_t d ) [private]
5.114.2.5 std::string latex_doc_t::get_ac (
                       MHAKernel::algo_comm_class_t & ac,
                       std::string txt ) [private]
5.114.2.6 std::string latex_doc_t::parsername (
                       std::string s ) [private]
5.114.2.7 std::string latex_doc_t::get_parser_var (
                       MHAParser::base t * p,
                       std::string name ) [private]
```

The documentation for this class was generated from the following file:

# · generatemhaplugindoc.cpp

# 5.115 lpc Class Reference

Inheritance diagram for lpc:

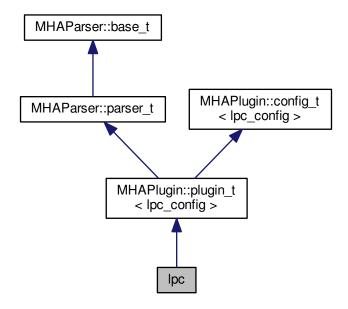

## **Public Member Functions**

- **lpc** (**algo\_comm\_t** &ac, const std::string &chain\_name, const std::string &algo\_name)

  \*\*Constructs our plugin.
- ~lpc ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig\_t &)

Plugin preparation.

• void release (void)

## **Private Member Functions**

void update\_cfg ()

#### **Private Attributes**

- std::string algo name
- MHAParser::int t lpc order
- MHAParser::int\_t lpc\_buffer\_size
- MHAParser::bool t shift
- MHAParser::int\_t comp\_each\_iter
- MHAParser::bool\_t norm
- MHAEvents::patchbay\_t< lpc > patchbay

#### **Additional Inherited Members**

```
5.115.1 Constructor & Destructor Documentation
```

```
5.115.1.1 lpc::lpc (

algo_comm_t & ac,

const std::string & chain_name,

const std::string & algo_name )
```

# Constructs our plugin.

```
5.115.1.2 lpc::\simlpc ( )
```

5.115.2 Member Function Documentation

```
5.115.2.1 mha_wave_t * lpc::process (
mha_wave_t * signal )
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

## **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.


```
Implements MHAPlugin::plugin_t< lpc_config > (p. 692).
5.115.2.3 void lpc::release (
                    void ) [inline], [virtual]
Reimplemented from MHAPlugin::plugin_t< lpc_config > (p. 693).
5.115.2.4 void lpc::update_cfg( ) [private]
5.115.3 Member Data Documentation
5.115.3.1 std::string lpc::algo_name [private]
5.115.3.2 MHAParser::int t lpc::lpc_order [private]
5.115.3.3 MHAParser::int_t lpc::lpc_buffer_size [private]
5.115.3.4 MHAParser::bool tlpc::shift [private]
5.115.3.5 MHAParser::int_t lpc::comp_each_iter [private]
5.115.3.6 MHAParser::bool_t lpc::norm [private]
5.115.3.7 MHAEvents::patchbay_t<lpc>lpc::patchbay [private]
```

The documentation for this class was generated from the following files:

- lpc.h
- lpc.cpp

#### 

Inheritance diagram for lpc\_bl\_predictor:

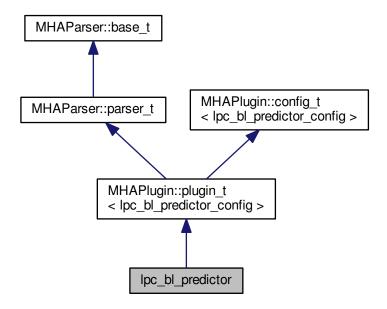

#### **Public Member Functions**

lpc\_bl\_predictor (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

Constructs our plugin.

- ∼lpc\_bl\_predictor ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

Checks for the most recent configuration and defers processing to it.

- void prepare (mhaconfig\_t &)
  - Plugin preparation.
- void release (void)

# **Public Attributes**

- MHAParser::int\_t lpc\_order
- MHAParser::string\_t name\_kappa
- MHAParser::string\_t name\_lpc\_f
- MHAParser::string\_t name\_lpc\_b
- MHAParser::string\_t name\_f
- MHAParser::string\_t name\_b

#### **Private Member Functions**

void update\_cfg ()

#### **Private Attributes**

MHAEvents::patchbay\_t< lpc\_bl\_predictor > patchbay

**Additional Inherited Members** 

```
5.116.1 Constructor & Destructor Documentation
```

Constructs our plugin.

```
5.116.1.2 lpc_bl_predictor::~lpc_bl_predictor()
```

5.116.2 Member Function Documentation

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

# **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of
	channels, frames per block, sampling rate.

Implements MHAPlugin::plugin\_t< lpc\_bl\_predictor\_config > (p. 692).

The documentation for this class was generated from the following files:

- lpc\_bl\_predictor.h
- lpc\_bl\_predictor.cpp

[private]

# 5.117 lpc\_bl\_predictor\_config Class Reference

**Public Member Functions** 

- lpc\_bl\_predictor\_config (algo\_comm\_t &iac, const mhaconfig\_t in\_cfg, lpc\_bl\_← predictor \*\_lpc)
- ~lpc\_bl\_predictor\_config ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Private Attributes**

```
· algo_comm_t ac

    MHA_AC::waveform_t f_est

    MHA_AC::waveform_t b_est

    MHASignal::waveform t forward

    MHASignal::waveform t backward

    int lpc order

    std::string name km

    std::string name f

   std::string name_b

    mha wave t km

   mha_wave_t s_f
   · mha wave ts b
5.117.1 Constructor & Destructor Documentation
5.117.1.1 lpc_bl_predictor_config::lpc_bl_predictor_config (
                     algo comm t & iac,
                     const mhaconfig_t in_cfg,
                     lpc_bl_predictor * _lpc )
5.117.1.2 lpc_bl_predictor_config::~lpc_bl_predictor_config( )
5.117.2 Member Function Documentation
5.117.2.1 mha wave t * lpc_bl_predictor_config::process (
                     mha wave t * wave )
5.117.3 Member Data Documentation
5.117.3.1 algo_comm_t lpc_bl_predictor_config::ac [private]
5.117.3.2 MHA AC::waveform tlpc_bl_predictor_config::f_est [private]
5.117.3.3 MHA_AC::waveform_t lpc_bl_predictor_config::b_est [private]
5.117.3.4 MHASignal::waveform t lpc_bl_predictor_config::forward [private]
5.117.3.5 MHASignal::waveform t lpc_bl_predictor_config::backward [private]
5.117.3.6 int lpc_bl_predictor_config::lpc_order [private]
```

**5.117.3.7 std::string lpc\_bl\_predictor\_config::name\_km** [private]


```
5.117.3.8 std::string lpc_bl_predictor_config::name_f [private]
5.117.3.9 std::string lpc_bl_predictor_config::name_b [private]
5.117.3.10 mha_wave_t lpc_bl_predictor_config::km [private]
5.117.3.11 mha_wave_t lpc_bl_predictor_config::s_f [private]
5.117.3.12 mha_wave_t lpc_bl_predictor_config::s_b [private]
```

The documentation for this class was generated from the following files:

- lpc\_bl\_predictor.h
- lpc\_bl\_predictor.cpp

# 5.118 lpc\_burglattice Class Reference

Inheritance diagram for lpc\_burglattice:

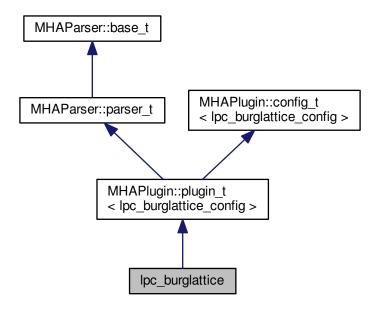

#### **Public Member Functions**

• **lpc\_burglattice** (**algo\_comm\_t** &ac, const std::string &chain\_name, const std::string &algo\_name)

Constructs our plugin.

- ∼lpc\_burglattice ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

Checks for the most recent configuration and defers processing to it.

• void prepare (mhaconfig\_t &)

Plugin preparation.

• void release (void)

#### **Public Attributes**

```
    MHAParser::int_t lpc_order
```

MHAParser::string\_t name\_kappa

MHAParser::string\_t name\_f

MHAParser::string\_t name\_b

MHAParser::float t lambda

## **Private Member Functions**

void update\_cfg ()

## **Private Attributes**

MHAEvents::patchbay t< lpc burglattice > patchbay

# **Additional Inherited Members**

5.118.1 Constructor & Destructor Documentation

# Constructs our plugin.

```
5.118.1.2 lpc_burglattice::~lpc_burglattice ( )
5.118.2 Member Function Documentation
5.118.2.1 mha_wave_t * lpc_burglattice::process ( mha_wave_t * signal )
Checks for the most recent configuration and def
```

Checks for the most recent configuration and defers processing to it.

Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

## **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of	1
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin\_t< lpc\_burglattice\_config > (p. 692).

Reimplemented from MHAPlugin::plugin\_t< lpc\_burglattice\_config > (p. 693).

```
5.118.2.4 void lpc_burglattice::update_cfg( ) [private]
```

5.118.3 Member Data Documentation

5.118.3.1 MHAParser::int\_t lpc\_burglattice::lpc\_order

5.118.3.2 MHAParser::string\_t lpc\_burglattice::name\_kappa

5.118.3.3 MHAParser::string\_t lpc\_burglattice::name\_f

5.118.3.4 MHAParser::string t lpc\_burglattice::name\_b

5.118.3.5 MHAParser::float\_t lpc\_burglattice::lambda

5.118.3.6 MHAEvents::patchbay t<lpc burglattice>lpc\_burglattice::patchbay [private]

The documentation for this class was generated from the following files:

- lpc\_burg-lattice.h
- lpc\_burg-lattice.cpp

# 5.119 lpc\_burglattice\_config Class Reference

#### **Public Member Functions**

- lpc\_burglattice\_config (algo\_comm\_t &iac, const mhaconfig\_t in\_cfg, lpc\_← burglattice \*\_lpc)
- ~lpc burglattice config ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Private Attributes**

- · algo\_comm\_t ac
- MHASignal::waveform\_t forward
- MHASignal::waveform\_t backward
- MHASignal::waveform\_t kappa
- MHA\_AC::waveform\_t kappa\_block
- MHASignal::waveform\_t dm
- MHASignal::waveform\_t nm
- mha\_real\_t lambda
- int lpc\_order
- std::string name\_f
- std::string name b
- mha\_wave\_t s\_f
- · mha wave ts b
- 5.119.1 Constructor & Destructor Documentation
- 5.119.1.2 lpc\_burglattice\_config::~lpc\_burglattice\_config ( )
- 5.119.2 Member Function Documentation
- 5.119.2.1 mha\_wave\_t \* lpc\_burglattice\_config::process ( mha\_wave\_t \* wave )
- 5.119.3 Member Data Documentation
- **5.119.3.1 algo\_comm\_t lpc\_burglattice\_config::ac** [private]

```
5.119.3.2 MHASignal::waveform_t lpc_burglattice_config::forward [private]
5.119.3.3 MHASignal::waveform_t lpc_burglattice_config::backward [private]
5.119.3.4 MHASignal::waveform_t lpc_burglattice_config::kappa [private]
5.119.3.5 MHA_AC::waveform_t lpc_burglattice_config::kappa_block [private]
5.119.3.6 MHASignal::waveform_t lpc_burglattice_config::dm [private]
5.119.3.7 MHASignal::waveform_t lpc_burglattice_config::nm [private]
5.119.3.8 mha_real_t lpc_burglattice_config::lambda [private]
5.119.3.9 int lpc_burglattice_config::lpc_order [private]
5.119.3.10 std::string lpc_burglattice_config::name_f [private]
5.119.3.11 std::string lpc_burglattice_config::name_b [private]
5.119.3.12 mha_wave_t lpc_burglattice_config::s_f [private]
5.119.3.13 mha_wave_t lpc_burglattice_config::s_b [private]
```

The documentation for this class was generated from the following files:

- lpc\_burg-lattice.h
- lpc\_burg-lattice.cpp

## 5.120 lpc\_config Class Reference

## **Public Member Functions**

- lpc\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, std::string &algo\_name, unsigned int \_order, unsigned int \_lpc\_buffer\_size, bool \_shift, unsigned int \_comp\_each \_iter, bool \_norm)
- ∼lpc\_config ()
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void insert ()

#### **Private Attributes**

- bool norm
- · bool shift
- unsigned int comp\_each\_iter
- unsigned int order
- unsigned int lpc\_buffer\_size
- · unsigned int N
- unsigned int comp\_iter
- mha\_wave\_t sample
- std::vector< mha\_real\_t > R
- std::vector< mha\_real\_t > A
- MHASignal::ringbuffer\_t inwave
- MHA\_AC::waveform\_t lpc\_out
- MHA\_AC::waveform\_t corr\_out

```
5.120.1 Constructor & Destructor Documentation
```

- 5.120.1.2 lpc\_config::~lpc\_config()
- 5.120.2 Member Function Documentation

```
5.120.2.1 mha_wave_t * lpc_config::process ( mha_wave_t * wave )
```

- 5.120.2.2 void lpc\_config::insert ( )
- 5.120.3 Member Data Documentation
- **5.120.3.1** boollpc\_config::norm [private]
- 5.120.3.2 bool lpc\_config::shift [private]
- **5.120.3.3 unsigned int lpc\_config::comp\_each\_iter** [private]

```
5.120.3.4 unsigned int lpc_config::order [private]

5.120.3.5 unsigned int lpc_config::lpc_buffer_size [private]

5.120.3.6 unsigned int lpc_config::N [private]

5.120.3.7 unsigned int lpc_config::comp_iter [private]

5.120.3.8 mha_wave_t lpc_config::sample [private]

5.120.3.9 std::vector<mha_real_t> lpc_config::R [private]

5.120.3.10 std::vector<mha_real_t> lpc_config::A [private]

5.120.3.11 MHASignal::ringbuffer_t lpc_config::inwave [private]

5.120.3.12 MHA_AC::waveform_t lpc_config::lpc_out [private]

5.120.3.13 MHA_AC::waveform_t lpc_config::corr_out [private]
```

The documentation for this class was generated from the following files:

- lpc.h
- · lpc.cpp

# 5.121 matrixmixer::cfg\_t Class Reference

## **Public Member Functions**

- cfg\_t (std::vector< std::vector< float > > imixer, unsigned int ci, unsigned int co, unsigned int fragsize, unsigned int nfft)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*)

## **Private Attributes**

- MHASignal::waveform\_t m
- MHASignal::waveform\_t wout
- MHASignal::spectrum\_t sout

```
5.121.1 Constructor & Destructor Documentation
```

```
5.121.1.1 cfg_t::cfg_t (  std::vector < std::vector < float > > imixer, \\ unsigned int \textit{ci,} \\ unsigned int \textit{co,} \\ unsigned int \textit{fragsize,} \\ unsigned int \textit{nfft} \ )
```

5.121.2 Member Function Documentation

```
5.121.2.1 mha_wave_t * cfg_t::process (
mha_wave_t * s )
```

```
5.121.2.2 mha_spec_t * cfg_t::process (
mha_spec_t * s )
```

5.121.3 Member Data Documentation

```
5.121.3.1 MHASignal::waveform t matrixmixer::cfg_t::m [private]
```

**5.121.3.2** MHASignal::waveform t matrixmixer::cfg t::wout [private]


**5.121.3.3 MHASignal::spectrum\_t** matrixmixer::cfg\_t::sout [private]

The documentation for this class was generated from the following file:

# matrixmixer.cpp

# 5.122 matrixmixer::matmix\_t Class Reference

Inheritance diagram for matrixmixer::matmix\_t:

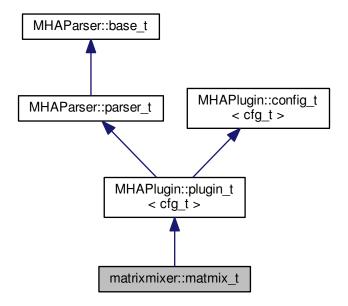

## **Public Member Functions**

- matmix\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- void **prepare** (**mhaconfig\_t** &)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*)

# **Private Member Functions**

void update\_m ()

## **Private Attributes**

- MHAEvents::patchbay\_t< matmix\_t > patchbay
- MHAParser::mfloat\_t mixer
- unsigned int ci
- unsigned int co

```
Additional Inherited Members
```


```
5.122.1 Constructor & Destructor Documentation
5.122.1.1 matrixmixer::matmix t::matmix t(
                      const algo_comm_t & iac,
                      const std::string & ,
                      const std::string & )
5.122.2 Member Function Documentation
5.122.2.1 void matrixmixer::matmix t::prepare (
                      mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < cfg t > (p. 692).
5.122.2.2 mha wave t * matrixmixer::matmix_t::process (
                      mha_wave_t * s )
5.122.2.3 mha_spec_t * matrixmixer::matmix_t::process (
                      mha\_spec\_t * s)
5.122.2.4 void matrixmixer::matmix t::update m (
                     void ) [private]
5.122.3 Member Data Documentation
5.122.3.1 MHAEvents::patchbay_t<matmix_t> matrixmixer::matmix_t::patchbay [private]
5.122.3.2 MHAParser::mfloat t matrixmixer::matmix t::mixer [private]
5.122.3.3 unsigned int matrixmixer::matmix_t::ci [private]
5.122.3.4 unsigned int matrixmixer::matmix_t::co [private]
```

The documentation for this class was generated from the following file:

# matrixmixer.cpp

# 5.123 MHA\_AC::ac2matrix\_helper\_t Class Reference

Inheritance diagram for MHA\_AC::ac2matrix\_helper\_t:

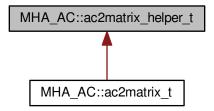

## **Public Member Functions**

- ac2matrix\_helper\_t (algo\_comm\_t, const std::string &)
- void getvar ()

## **Public Attributes**

- · algo\_comm\_t ac
- std::string name
- std::string username
- MHASignal::uint\_vector\_t size
- bool is\_complex

## **Protected Attributes**

comm\_var\_t acvar

## 5.123.1 Constructor & Destructor Documentation

#### 5.123.2 Member Function Documentation

5.123.2.1 void MHA\_AC::ac2matrix\_helper\_t::getvar ( )

#### 5.123.3 Member Data Documentation


- 5.123.3.1 algo\_comm\_t MHA\_AC::ac2matrix\_helper\_t::ac
- 5.123.3.2 std::string MHA\_AC::ac2matrix\_helper\_t::name
- 5.123.3.3 std::string MHA\_AC::ac2matrix\_helper\_t::username
- 5.123.3.4 MHASignal::uint\_vector\_t MHA\_AC::ac2matrix\_helper\_t::size
- 5.123.3.5 bool MHA\_AC::ac2matrix\_helper\_t::is\_complex
- **5.123.3.6 comm\_var\_t** MHA\_AC::ac2matrix\_helper\_t::acvar [protected]

The documentation for this class was generated from the following files:

- mha\_algo\_comm.h
- mha\_algo\_comm.cpp
- 5.124 MHA\_AC::ac2matrix\_t Class Reference

Copy AC variable to a matrix.

Inheritance diagram for MHA\_AC::ac2matrix\_t:

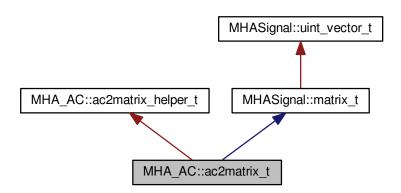

**Public Member Functions** 

ac2matrix\_t (algo\_comm\_t ac, const std::string &name)

Constructor.

void update ()

Update contents of the matrix from the AC space.

• const std::string & getname () const

Return name of AC variable/matrix.

const std::string & getusername () const

Return user specified name of AC variable/matrix.

• void insert (algo\_comm\_t ac)

Insert matrix into an AC space (other than source AC space)

**Additional Inherited Members** 

5.124.1 Detailed Description

Copy AC variable to a matrix.

This class constructs a matrix of same size as an AC variable and can copy the AC variable to itself. The **update()** (p. 383) function is real-time safe.

5.124.2 Constructor & Destructor Documentation

Constructor.

#### **Parameters**

ac	AC handle
name	Name of AC variable to be copied

5.124.3 Member Function Documentation

5.124.3.1 void MHA\_AC::ac2matrix\_t::update ( )

Update contents of the matrix from the AC space.

This function is real-time safe. The copy operation performance is of the order of the number of elements in the matrix.

5.124.3.2 const std::string& MHA\_AC::ac2matrix\_t::getname( ) const [inline]

Return name of AC variable/matrix.

5.124.3.3 const std::string& MHA\_AC::ac2matrix\_t::getusername( ) const [inline]

Return user specified name of AC variable/matrix.

```
5.124.3.4 void MHA_AC::ac2matrix_t::insert ( algo_comm_t ac )
```

Insert matrix into an AC space (other than source AC space)

#### **Parameters**

ac | AC space handle to insert data

#### Note

The AC variable data buffer points to the data of the matrix. Modifications of the AC variable directly modify the data of the matrix; after deletion of the matrix, the data buffer is invalid.

The documentation for this class was generated from the following files:

- · mha algo comm.h
- mha\_algo\_comm.cpp

## 5.125 MHA\_AC::acspace2matrix\_t Class Reference

Copy all or a subset of all numeric AC variables into an array of matrixes.

**Public Member Functions** 

- acspace2matrix\_t (algo\_comm\_t ac, const std::vector< std::string > &names)
   Constructor.
- acspace2matrix\_t (const MHA\_AC::acspace2matrix\_t &src)

Constructor with initialization from an instance.

- ∼acspace2matrix t ()
- MHA\_AC::acspace2matrix\_t & operator= (const MHA\_AC::acspace2matrix\_t &src)

  Copy all contents (deep copy).
- MHA\_AC::ac2matrix\_t & operator[] (unsigned int k)
   Access operator.

- const MHA\_AC::ac2matrix\_t & operator[] (unsigned int k) const Constant access operator.
- void update ()

Update function.

• unsigned int **size** () const

Number of matrixes in AC space.

• unsigned int frame () const

Actual frame number.

void insert (algo\_comm\_t ac)

Insert AC space copy into an AC space (other than source AC space)

#### **Private Attributes**

- unsigned int len
- MHA\_AC::ac2matrix\_t \*\* data
- · unsigned int frameno

## 5.125.1 Detailed Description

Copy all or a subset of all numeric AC variables into an array of matrixes.

5.125.2 Constructor & Destructor Documentation

#### Constructor.

Scan all given AC variables and allocate corresponding matrixes.

### **Parameters**

ac	AC handle.
names	Names of AC variables, or empty for all.

Constructor with initialization from an instance.

## **Parameters**

src Instance to be copied.

5.125.2.3 MHA\_AC::acspace2matrix\_t::~acspace2matrix\_t ( )

5.125.3 Member Function Documentation

Copy all contents (deep copy).

## **Parameters**

*src* Array of matrixes to be copied.

Access operator.

### **Parameters**

k index into array; should not exceed **size()** (p. 387)-1.

# Return values

Reference to matrix.

Constant access operator.

## **Parameters**

k index into array; should not exceed **size()** (p. 387)-1.

## **Return values**

Constant reference to matrix.

```
5.125.3.4 void MHA_AC::acspace2matrix_t::update( ) [inline]
```

Update function.

This function updates all matrixes from their corresponding AC variables. It can be called from the MHA Framework prepare function or in the processing callback.

```
5.125.3.5 unsigned int MHA_AC::acspace2matrix_t::size() const [inline]
```

Number of matrixes in AC space.

```
5.125.3.6 unsigned int MHA_AC::acspace2matrix_t::frame( ) const [inline]
```

Actual frame number.

```
5.125.3.7 void MHA_AC::acspace2matrix_t::insert ( algo_comm_t ac )
```

Insert AC space copy into an AC space (other than source AC space)

#### **Parameters**

```
ac AC space handle to insert data
```

5.125.4 Member Data Documentation

```
5.125.4.1 unsigned int MHA_AC::acspace2matrix_t::len [private]
```

```
5.125.4.2 MHA_AC::ac2matrix_t** MHA_AC::acspace2matrix_t::data [private]
```

**5.125.4.3 unsigned int MHA\_AC::acspace2matrix\_t::frameno** [private]

The documentation for this class was generated from the following files:

- mha\_algo\_comm.h
- mha\_algo\_comm.cpp

5.126 MHA\_AC::double\_t Class Reference

Insert a double precision floating point variable into the AC space.

## **Public Member Functions**

```
    double_t (algo_comm_t, std::string, double=0)
    ~double t ()
```

#### **Public Attributes**

· double data

Floating point value variable.

#### **Private Attributes**

· algo\_comm\_t ac

## 5.126.1 Detailed Description

Insert a double precision floating point variable into the AC space.

The variable is automatically removed on destruction.

```
5.126.2 Constructor & Destructor Documentation
```

```
5.126.2.2 MHA_AC::double_t::\simdouble_t()
```

5.126.3 Member Data Documentation

5.126.3.1 double MHA\_AC::double\_t::data

Floating point value variable.

```
5.126.3.2 algo_comm_t MHA_AC::double_t::ac [private]
```

The documentation for this class was generated from the following files:

```
mha_algo_comm.h
```

mha\_algo\_comm.cpp

# 5.127 MHA\_AC::float\_t Class Reference

Insert a float point variable into the AC space.

**Public Member Functions** 

- float\_t (algo\_comm\_t, std::string, float=0)

  Constructor.
- ~float\_t ()

#### **Public Attributes**

float data

Floating point value variable.

## **Private Attributes**

· algo\_comm\_t ac

## 5.127.1 Detailed Description

Insert a float point variable into the AC space.

The variable is automatically removed on destruction.

5.127.2 Constructor & Destructor Documentation

Constructor.

```
5.127.2.2 MHA_AC::float_t::~float_t()
```

5.127.3 Member Data Documentation

5.127.3.1 float MHA\_AC::float\_t::data

Floating point value variable.

```
5.127.3.2 algo_comm_t MHA_AC::float_t::ac [private]
```

The documentation for this class was generated from the following files:

- mha\_algo\_comm.h
- mha\_algo\_comm.cpp

# 5.128 MHA\_AC::int\_t Class Reference

Insert a integer variable into the AC space.

**Public Member Functions** 

```
int_t (algo_comm_t, std::string, int=0)∼int_t ()
```

## **Public Attributes**

• int data

Integer value variable.

## **Private Attributes**

· algo\_comm\_t ac

## 5.128.1 Detailed Description

Insert a integer variable into the AC space.

The variable is automatically removed on destruction.

5.128.2 Constructor & Destructor Documentation

```
5.128.2.1 MHA_AC::int_t::int_t ( algo_comm_t iac, std::string n, int v = 0 )
```

- 5.128.2.2 MHA\_AC::int\_t::~int\_t ( )
- 5.128.3 Member Data Documentation
- 5.128.3.1 int MHA\_AC::int\_t::data

Integer value variable.

5.128.3.2 algo\_comm\_t MHA\_AC::int\_t::ac [private]


The documentation for this class was generated from the following files:

- mha\_algo\_comm.h
- mha\_algo\_comm.cpp

# 5.129 MHA\_AC::spectrum\_t Class Reference

Insert a MHASignal::spectrum\_t (p. 762) class into the AC space.

Inheritance diagram for MHA\_AC::spectrum\_t:

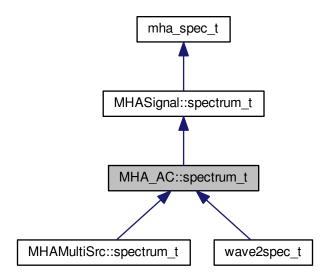

## **Public Member Functions**

spectrum\_t (algo\_comm\_t ac, std::string name, unsigned int bins, unsigned int channels, bool insert\_now)

Create the AC variable.

- ~spectrum\_t ()
- void **insert** ()

Insert AC variable into AC space.

## **Protected Attributes**

- algo\_comm\_t ac
- std::string name

## **Additional Inherited Members**

## 5.129.1 Detailed Description

Insert a MHASignal::spectrum\_t (p. 762) class into the AC space.

The variable is automatically removed on destruction.

## 5.129.2 Constructor & Destructor Documentation

Create the AC variable.

#### **Parameters**

ac	AC handle
name	Name of variable in AC space
bins	Number of FFT bins in the waveform_t (p. 394) class
channels	Number of audio channels in the waveform_t (p. 394) class
insert_now	Insert implicitely in the constructor (true) or explicitely in the <b>insert()</b> (p. 392) function (false)

```
5.129.2.2 MHA_AC::spectrum_t::~spectrum_t (
void ) [virtual]
```

Reimplemented from **MHASignal::spectrum\_t** (p. 764).

5.129.3 Member Function Documentation

5.129.3.1 void MHA\_AC::spectrum\_t::insert ( )

Insert AC variable into AC space.

5.129.4 Member Data Documentation

5.129.4.1 algo\_comm\_t MHA\_AC::spectrum\_t::ac [protected]


**5.129.4.2 std::string MHA\_AC::spectrum\_t::name** [protected]

The documentation for this class was generated from the following files:

- mha\_algo\_comm.h
- mha\_algo\_comm.cpp

5.130 MHA\_AC::stat\_t Class Reference

Inheritance diagram for MHA\_AC::stat\_t:

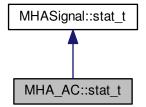

#### **Public Member Functions**

- stat\_t (algo\_comm\_t ac, const std::string &name, const unsigned int &frames, const unsigned int &channels, bool insert\_now)
- void update ()
- void insert ()

#### **Private Attributes**

- MHA\_AC::waveform\_t mean
- MHA\_AC::waveform\_t std

## 5.130.1 Constructor & Destructor Documentation

5.130.2 Member Function Documentation

5.130.2.1 void MHA\_AC::stat\_t::update ( )

5.130.2.2 void MHA\_AC::stat\_t::insert ( )

5.130.3 Member Data Documentation

5.130.3.1 MHA\_AC::waveform\_t MHA\_AC::stat\_t::mean [private]


**5.130.3.2** MHA\_AC::waveform\_t MHA\_AC::stat\_t::std [private]

The documentation for this class was generated from the following files:

- mha\_algo\_comm.h
- mha\_algo\_comm.cpp

## 5.131 MHA\_AC::waveform\_t Class Reference

Insert a **MHASignal::waveform\_t** (p. 774) class into the AC space. Inheritance diagram for MHA\_AC::waveform\_t:

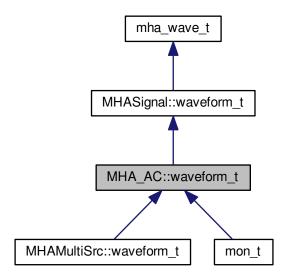

## **Public Member Functions**

 waveform\_t (algo\_comm\_t ac, std::string name, unsigned int frames, unsigned int channels, bool insert\_now)

Create the AC variable.

- ~waveform t ()
- void insert ()

Insert AC variable into AC space.

#### **Protected Attributes**

- algo\_comm\_t ac
- std::string name

#### **Additional Inherited Members**

## 5.131.1 Detailed Description

Insert a **MHASignal::waveform\_t** (p. 774) class into the AC space.

The variable is automatically removed on destruction.

### 5.131.2 Constructor & Destructor Documentation

Create the AC variable.

#### **Parameters**

ac	AC handle
name	Name of variable in AC space
frames	Number of frames in the waveform_t (p. 394) class
channels	Number of audio channels in the waveform_t (p. 394) class
insert_now	Insert implicitely in the constructor (true) or explicitely in the <b>insert()</b> (p. 396) function (false)

```
5.131.2.2 MHA_AC::waveform_t::\simwaveform_t ( void ) [virtual]
```

Reimplemented from MHASignal::waveform\_t (p. 777).

5.131.3 Member Function Documentation

```
5.131.3.1 void MHA_AC::waveform_t::insert ( )
```

Insert AC variable into AC space.

5.131.4 Member Data Documentation

```
5.131.4.1 algo_comm_t MHA_AC::waveform_t::ac [protected]
```

```
5.131.4.2 std::string MHA_AC::waveform_t::name [protected]
```

The documentation for this class was generated from the following files:

- mha\_algo\_comm.h
- mha\_algo\_comm.cpp

## 5.132 mha\_audio\_descriptor\_t Struct Reference

Description of an audio fragment (planned as a replacement of **mhaconfig t** (p. 470)).

## **Public Attributes**

unsigned int n\_samples

Number of samples.

unsigned int n channels

Number of audio channels.

unsigned int n\_freqs

Number of frequency bands.

unsigned int is\_complex

Flag about sample type.

mha\_real\_t dt

Time distance between samples (only equidistant samples allowed)

mha\_real\_t \* cf

Center frequencies of frequency bands.

mha\_real\_t \* chdir

Hint on source direction of channel, values below zero is left, values above zero is right, zero means unknown.

5.132.1 Detailed Description

Description of an audio fragment (planned as a replacement of **mhaconfig\_t** (p. 470)).

5.132.2 Member Data Documentation

5.132.2.1 unsigned int mha\_audio\_descriptor\_t::n\_samples

Number of samples.

5.132.2.2 unsigned int mha\_audio\_descriptor\_t::n\_channels

Number of audio channels.

5.132.2.3 unsigned int mha\_audio\_descriptor\_t::n\_freqs

Number of frequency bands.

5.132.2.4 unsigned int mha\_audio\_descriptor\_t::is\_complex

Flag about sample type.

5.132.2.5 mha real t mha\_audio\_descriptor\_t::dt

Time distance between samples (only equidistant samples allowed)

5.132.2.6 mha\_real\_t\* mha\_audio\_descriptor\_t::cf

Center frequencies of frequency bands.

5.132.2.7 mha\_real\_t\* mha\_audio\_descriptor\_t::chdir

Hint on source direction of channel, values below zero is left, values above zero is right, zero means unknown.

The documentation for this struct was generated from the following file:

· mha.h

5.133 mha\_audio\_t Struct Reference

An audio fragment in the openMHA (planned as a replacement of **mha\_wave\_t** (p. 462) and **mha\_spec\_t** (p. 432)).

#### **Public Attributes**

mha\_audio\_descriptor\_t descriptor

Dimension and description of the data.

• mha real t \* rdata

Data pointer if flag mha\_audio\_descriptor\_t::is\_complex (p. 397) is unset.

mha\_complex\_t \* cdata

Data pointer if flag mha\_audio\_descriptor\_t::is\_complex (p. 397) is set.

#### 5.133.1 Detailed Description

An audio fragment in the openMHA (planned as a replacement of **mha\_wave\_t** (p. 462) and **mha\_spec\_t** (p. 432)).

The data alignment is  $(t_0, c_0, f_0), (t_0, c_0, f_1), \dots, (t_0, c_0, f_{freqs}), (t_0, c_1, f_0), \dots$  This allows a direct cast of the current **mha\_wave\_t** (p. 462) and **mha\_spec\_t** (p. 432) data pointers into corresponding **mha audio t** (p. 397) objects.

5.133.2 Member Data Documentation

5.133.2.1 mha audio descriptor t mha\_audio\_t::descriptor

Dimension and description of the data.

5.133.2.2 mha real t\* mha\_audio\_t::rdata

Data pointer if flag mha\_audio\_descriptor\_t::is\_complex (p. 397) is unset.

5.133.2.3 mha complex t\* mha\_audio\_t::cdata

Data pointer if flag mha\_audio\_descriptor\_t::is\_complex (p. 397) is set.

The documentation for this struct was generated from the following file:

· mha.h

5.134 mha\_channel\_info\_t Struct Reference

Channel information structure.

## **Public Attributes**

• int id

channel id

• char idstr [32]

channel id

unsigned int side

side (left/right)

mha\_direction\_t dir

source direction

mha\_real\_t peaklevel

Peak level corresponds to this SPL (dB) level.

## 5.134.1 Detailed Description

Channel information structure.

5.134.2 Member Data Documentation

5.134.2.1 int mha\_channel\_info\_t::id

channel id

5.134.2.2 char mha\_channel\_info\_t::idstr[32]

channel id

5.134.2.3 unsigned int mha\_channel\_info\_t::side

side (left/right)

5.134.2.4 mha\_direction\_t mha\_channel\_info\_t::dir

source direction

5.134.2.5 mha\_real\_t mha\_channel\_info\_t::peaklevel

Peak level corresponds to this SPL (dB) level.

The documentation for this struct was generated from the following file:

## · mha.h

## 5.135 mha\_complex\_t Struct Reference

Type for complex floating point values.

**Public Attributes** 

- mha\_real\_t re
   Real part.
- mha\_real\_t im
  Imaginary part.

## 5.135.1 Detailed Description

Type for complex floating point values.

5.135.2 Member Data Documentation

5.135.2.1 mha\_real\_t mha\_complex\_t::re

Real part.

5.135.2.2 mha\_real\_t mha\_complex\_t::im

Imaginary part.

The documentation for this struct was generated from the following file:

· mha.h

5.136 mha\_dblbuf\_t< FIFO > Class Template Reference

The doublebuffer adapts blocksizes between an outer process, which provides input data and takes output data, and an inner process, which processes the input signal and generates output data using a different block size than the outer process.

**Public Types** 

typedef FIFO::value\_type value\_type
 The datatype exchanged by the FIFO and this doublebuffer.

#### **Public Member Functions**

- virtual unsigned get\_inner\_size () const
- virtual unsigned get\_outer\_size () const
- virtual unsigned get\_delay () const
- virtual unsigned **get\_fifo\_size** () const
- virtual unsigned get input channels () const
- · virtual unsigned get output channels () const
- virtual unsigned get\_input\_fifo\_fill\_count () const
- virtual unsigned get\_output\_fifo\_fill\_count () const
- virtual unsigned **get\_input\_fifo\_space** () const
- virtual unsigned get\_output\_fifo\_space () const
- virtual MHA\_Error \* get\_inner\_error () const
- virtual void provoke\_inner\_error (const MHA\_Error &)
- virtual void provoke\_outer\_error (const MHA\_Error &)
- mha\_dblbuf\_t (unsigned outer\_size, unsigned inner\_size, unsigned delay, unsigned input\_channels, unsigned output\_channels, const value\_type &delay\_data)

Constructor creates FIFOs with specified delay.

- virtual ~mha\_dblbuf\_t ()
- virtual void process (const value\_type \*input\_signal, value\_type \*output\_signal, un-signed count)

The outer process has to call this method to propagate the input signal to the inner process, and receives back the output signal.

virtual void input (value\_type \*input\_signal)

The inner process has to call this method to receive its input signal.

virtual void output (const value\_type \*output\_signal)

The outer process has to call this method to deliver its output signal.

# **Private Attributes**

unsigned outer size

The block size used by the outer process.

• unsigned inner size

The block size used by the inner process.

· unsigned delay

The delay introduced by bidirectional buffer size adaptation.

• unsigned fifo\_size

The size of each of the FIFOs.

unsigned input\_channels

The number of input channels.

unsigned output\_channels

The number of output channels.

FIFO input\_fifo

The FIFO for transporting the input signal from the outer process to the inner process.

FIFO output fifo

The FIFO for transporting the output signal from the inner process to the outer process.

MHA\_Error \* inner\_error

Owned copy of exception to be thrown in inner thread.

MHA\_Error \* outer\_error

Owned copy of exception to be thrown in outer thread.

## 5.136.1 Detailed Description

```
template < class FIFO > class mha_dblbuf_t < FIFO >
```

The doublebuffer adapts blocksizes between an outer process, which provides input data and takes output data, and an inner process, which processes the input signal and generates output data using a different block size than the outer process.

This class introduces the channels concept. Input and output may have different channel counts.

5.136.2 Member Typedef Documentation

5.136.2.1 template < class FIFO > typedef FIFO::value\_type mha\_dblbuf\_t < FIFO >::value\_type

The datatype exchanged by the FIFO and this doublebuffer.

#### 5.136.3 Constructor & Destructor Documentation

Constructor creates FIFOs with specified delay.

## Warning

The doublebuffer may block or raise an exception if the delay is too small. To avoid this, the delay should be

$$delay >= (inner\_size - gcd(inner\_size, outer\_size))$$

.

#### **Parameters**

outer_size	The block size used by the outer process.
inner_size	The block size used by the inner process.
delay	The total delay
input_channels	Number of input channels
output_channels	Number of output channels
delay_data	The delay consists of copies of this value.

- 5.136.4 Member Function Documentation
- 5.136.4.1 template < class FIFO > virtual unsigned mha\_dblbuf\_t < FIFO >::get\_inner\_size ( ) const [inline], [virtual]
- 5.136.4.2 template < class FIFO > virtual unsigned mha\_dblbuf\_t < FIFO >::get\_outer\_size ( ) const [inline], [virtual]
- 5.136.4.3 template < class FIFO > virtual unsigned mha\_dblbuf\_t < FIFO >::get\_delay ( ) const [inline], [virtual]
- 5.136.4.4 template < class FIFO > virtual unsigned mha\_dblbuf\_t< FIFO >::get\_fifo\_size ( ) const [inline], [virtual]
- 5.136.4.5 template < class FIFO > virtual unsigned mha\_dblbuf\_t< FIFO >::get\_input\_channels ( ) const [inline], [virtual]
- 5.136.4.6 template < class FIFO > virtual unsigned mha\_dblbuf\_t < FIFO >::get\_output\_channels() const [inline], [virtual]
- 5.136.4.7 template < class FIFO > virtual unsigned mha\_dblbuf\_t < FIFO >::get\_input\_fifo\_fill\_count (
  ) const [inline], [virtual]
- 5.136.4.9 template < class FIFO > virtual unsigned mha\_dblbuf\_t < FIFO >::get\_input\_fifo\_space( ) const [inline], [virtual]
- 5.136.4.10 template < class FIFO > virtual unsigned mha\_dblbuf\_t < FIFO >::get\_output\_fifo\_space ( ) const [inline], [virtual]

The outer process has to call this method to propagate the input signal to the inner process, and receives back the output signal.

#### **Parameters**

input_signal	Pointer to the input signal array.
output_signal	Pointer to the output signal array.
count	The number of data instances provided and expected, lower or equal to inner_size given to constructor.

## **Exceptions**

<b>MHA_Error</b> (p. 413)	When count is > outer_size as given to constructor or the underlying
	fifo implementation detects an error.

```
5.136.4.15 template < class FIFO > void mha_dblbuf_t < FIFO >::input ( value_type * input_signal ) [virtual]
```

The inner process has to call this method to receive its input signal.

## **Parameters**

Innut ciana	Array where the doublebuffer can store the signal.
iliput sigila	Array where the doubleburier can store the signal.

# **Exceptions**

MHA_Error (p. 413) When the underlying fifo implementation detects an err
---

The outer process has to call this method to deliver its output signal.

#### **Parameters**

output\_signal Array from which doublebuffer reads outputsignal.

## **Exceptions**

## 5.136.5 Member Data Documentation

**5.136.5.1** template < class FIFO > unsigned mha\_dblbuf\_t < FIFO >::outer\_size [private]

The block size used by the outer process.

**5.136.5.2** template < class FIFO > unsigned mha\_dblbuf\_t < FIFO >::inner\_size [private]

The block size used by the inner process.

5.136.5.3 template < class FIFO > unsigned mha\_dblbuf\_t < FIFO >::delay [private]

The delay introduced by bidirectional buffer size adaptation.

**5.136.5.4** template < class FIFO > unsigned mha\_dblbuf\_t < FIFO >::fifo\_size [private]

The size of each of the FIFOs.

**5.136.5.5** template < class FIFO > unsigned mha\_dblbuf\_t < FIFO >::input\_channels [private]

The number of input channels.

**5.136.5.6** template < class FIFO > unsigned mha\_dblbuf\_t < FIFO >::output\_channels [private]

The number of output channels.

**5.136.5.7** template < class FIFO > FIFO mha\_dblbuf\_t < FIFO >::input\_fifo [private]

The FIFO for transporting the input signal from the outer process to the inner process.

5.136.5.8 template < class FIFO > FIFO mha\_dblbuf\_t < FIFO >::output\_fifo [private]

The FIFO for transporting the output signal from the inner process to the outer process.

5.136.5.9 template < class FIFO > MHA\_Error\* mha\_dblbuf\_t < FIFO >::inner\_error [private]

Owned copy of exception to be thrown in inner thread.

5.136.5.10 template < class FIFO > MHA\_Error\* mha\_dblbuf\_t < FIFO >::outer\_error [private]

Owned copy of exception to be thrown in outer thread.

The documentation for this class was generated from the following files:

- · mha\_fifo.h
- · mha\_fifo.cpp

5.137 mha\_direction\_t Struct Reference

Channel source direction structure.

**Public Attributes** 

- mha\_real\_t azimuth
   azimuth in radiants
- mha\_real\_t elevation
   elevation in radiants
- mha\_real\_t distance distance in meters

5.137.1 Detailed Description

Channel source direction structure.

5.137.2 Member Data Documentation

5.137.2.1 mha real t mha\_direction\_t::azimuth

azimuth in radiants

5.137.2.2 mha\_real\_t mha\_direction\_t::elevation

elevation in radiants

5.137.2.3 mha\_real\_t mha\_direction\_t::distance

distance in meters


The documentation for this struct was generated from the following file:

#### · mha.h

5.138 mha\_drifter\_fifo\_t < T > Class Template Reference

A FIFO class for blocksize adaptation without Synchronization.

Inheritance diagram for mha\_drifter\_fifo\_t< T >:

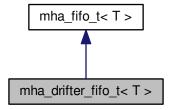

## **Public Member Functions**

- virtual void write (const T \*data, unsigned count)
   write data to fifo
- virtual void read (T \*buf, unsigned count)

Read data from fifo.

virtual unsigned get\_fill\_count () const

Return fill\_count, adding **mha\_drifter\_fifo\_t**<**T**>::startup\_zeros (p. 413) to the number of samples actually in the fifo's buffer.

virtual unsigned get\_available\_space () const

Return available space, subtracting number of **mha\_drifter\_fifo\_t**<**T**>::**startup\_zeros** (p. **413**) from the available\_space actually present in the fifo's buffer.

virtual unsigned get des fill count () const

The desired fill count of this fifo.

virtual unsigned get\_min\_fill\_count () const

The minimum fill count of this fifo.

virtual void stop ()

Called by **mha\_drifter\_fifo\_t**<**T**>::**read** (p. 410) or **mha\_drifter\_fifo\_t**<**T**>::**write** (p. 409) when their xrun in succession counter exceeds its limit.

virtual void starting ()

Called by mha\_drifter\_fifo\_t<T>::read (p. 410) or mha\_drifter\_fifo\_t<T>::write (p. 409) when the respective flag (mha\_drifter\_fifo\_t<T>::reader\_started (p. 412) or mha\_drifter← fifo\_t<T>::writer\_started (p. 411)) is about to be toggled from false to true.

mha\_drifter\_fifo\_t (unsigned min\_fill\_count, unsigned desired\_fill\_count, unsigned max\_fill\_count)

Create drifter FIFO.

mha\_drifter\_fifo\_t (unsigned min\_fill\_count, unsigned desired\_fill\_count, unsigned max\_fill\_count, const T &t)

Create drifter FIFO where all (initially unused) copies of T are initialized as copies of t.

#### **Private Attributes**

const unsigned minimum\_fill\_count

The minimum fill count of this fifo.

const unsigned desired\_fill\_count

The desired fill count of the fifo.

bool writer started

Flag set to true when write is called the first time.

bool reader\_started

Flag set to true when read is called for the first time.

unsigned writer xruns total

The number of xruns seen by the writer since object instantiation.

unsigned reader\_xruns\_total

The number of xruns seen by the reader since object instantiation.

unsigned writer\_xruns\_since\_start

The number of xruns seen by the writer since the last start of processing.

• unsigned reader\_xruns\_since\_start

The number of xruns seen by the reader since the last start of processing.

unsigned writer xruns in succession

The number of xruns seen by the writer in succession.

unsigned reader\_xruns\_in\_succession

The number of xruns seen by the reader in succession.

unsigned maximum writer xruns in succession before stop

A limit to the number of xruns seen in succession during write before the data transmission through the FIFO is stopped.

unsigned maximum\_reader\_xruns\_in\_succession\_before\_stop

A limit to the number of xruns seen in succession during read before the data transmission through the FIFO is stopped.

mha fifo t< T>::value type null data

The value used in place of missing data.

#### unsigned startup\_zeros

When processing starts, that is when both  $mha\_drifter\_fifo\_t < T>::reader\_started$  (p. 412) and  $mha\_drifter\_fifo\_t < T>::writer\_started$  (p. 411) are true, then first  $mha\_drifter\_fifo \leftarrow \_t < T>::desired\_fill\_count$  (p. 411) instances of  $mha\_drifter\_fifo\_t < T>::null\_data$  (p. 413) are delivered to the reader.

**Additional Inherited Members** 

5.138.1 Detailed Description

```
template < class T> class mha drifter fifo t< T>
```

A FIFO class for blocksize adaptation without Synchronization.

Features: delay concept (desired, minimum and maximum delay), drifting support by throwing away data or inserting zeroes.

5.138.2 Constructor & Destructor Documentation

Create drifter FIFO.

Create drifter FIFO where all (initially unused) copies of T are initialized as copies of t.

5.138.3 Member Function Documentation

```
5.138.3.1 template < class T > void mha_drifter_fifo_t< T >::write ( const T * data, unsigned count ) [virtual]
```

write data to fifo

Sets writer\_started (p. 411) to true.

When processing has started, i.e. both **reader\_started** (p. 412) and **writer\_started** (p. 411) are true, write specified ammount of data to the fifo. If there is not enough space available, then the exceeding data is lost and the writer xrun counters are increased.

Processing is stopped when writer\_xruns\_in\_succession (p. 412) exceeds maximum\_ writer\_xruns\_in\_succession\_before\_stop (p. 412).

#### **Parameters**

data	Pointer to source data.
count	Number of instances to copy

Reimplemented from  $mha_fifo_t < T > (p. 422)$ .

```
5.138.3.2 template < class T > void mha_drifter_fifo_t< T >::read ( T * buf, unsigned count ) [virtual]
```

Read data from fifo.

Sets reader\_started (p. 412) to true.

When processing has started, i.e. both **reader\_started** (p. 412) and **writer\_started** (p. 411) are true, then read specified ammount of data from the fifo. As long as **startup\_zeros** (p. 413) is > 0, **null\_data** (p. 413) is delivered to the reader and **startup\_zeros** (p. 413) is diminished. Only when **startup\_zeros** (p. 413) has reached 0, data is actually read from the fifo's buffer.

If the read would cause the fifo's fill count to drop below **minimum\_fill\_count** (p. 411), then only so much data are read that **minimum\_fill\_count** (p. 411) entries remain in the fifo, the missing data is replaced with **null\_data** (p. 413), and the reader xrun counters are increased.

Processing is stopped when reader\_xruns\_in\_succession (p. 412) exceeds maximum\_creader\_xruns\_in\_succession\_before\_stop (p. 412).

#### **Parameters**

buf	Pointer to the target buffer
count	Number of instances to copy

Reimplemented from **mha fifo** t < T > (p. 423).

```
5.138.3.3 template < class T > unsigned mha_drifter_fifo_t < T >::get_fill_count ( ) const [virtual]
```

Return fill\_count, adding **mha\_drifter\_fifo\_t**<**T**>::**startup\_zeros** (p. 413) to the number of samples actually in the fifo's buffer.

Reimplemented from  $mha_fifo_t < T > (p. 423)$ .

```
5.138.3.4 template < class T > unsigned mha_drifter_fifo_t < T > ::get_available_space ( ) const [virtual]
```

Return available space, subtracting number of **mha\_drifter\_fifo\_t**<**T**>::**startup\_zeros** (p. 413) from the available space actually present in the fifo's buffer.

TODO: uncertain if this is a good idea.

Reimplemented from  $mha_fifo_t < T > (p. 423)$ .

5.138.3.5 template < class T > virtual unsigned mha\_drifter\_fifo\_t < T >::get\_des\_fill\_count() const [inline], [virtual]

The desired fill count of this fifo.

5.138.3.6 template < class T > virtual unsigned mha\_drifter\_fifo\_t < T > ::get\_min\_fill\_count() const [inline], [virtual]

The minimum fill count of this fifo.

```
5.138.3.7 template < class T > void mha_drifter_fifo_t < T >::stop() [virtual]
```

Called by mha\_drifter\_fifo\_t<T>::read (p. 410) or mha\_drifter\_fifo\_t<T>::write (p. 409) when their xrun in succession counter exceeds its limit.

Called by **read** (p. 410) or **write** (p. 409) when their xrun in succession counter exceeds its limit.

May also be called explicitly.

```
5.138.3.8 template < class T > void mha_drifter_fifo_t < T >::starting() [virtual]
```

Called by  $mha\_drifter\_fifo\_t < T>::read$  (p. 410) or  $mha\_drifter\_fifo\_t < T>::write$  (p. 409) when the respective flag ( $mha\_drifter\_fifo\_t < T>::reader\_started$  (p. 412) or  $mha\_drifter\_t$  fifo\_t < T>::writer\_started (p. 411)) is about to be toggled from false to true.

The fifo's buffer is emptied, this method resets **startup\_zeros** (p. 413) to **desired\_fill\_count** (p. 411), and it also resets **reader\_xruns\_since\_start** (p. 412) and **writer\_xruns\_since\_start** (p. 412) to 0.

5.138.4 Member Data Documentation

5.138.4.1 template < class T > const unsigned mha\_drifter\_fifo\_t < T >::minimum\_fill\_count [private]

The minimum fill count of this fifo.

5.138.4.2 template < class T > const unsigned mha\_drifter\_fifo\_t < T >::desired\_fill\_count [private]

The desired fill count of the fifo.

The fifo is initialized with this ammount of data when data transmission starts.

**5.138.4.3** template < class T > bool mha\_drifter\_fifo\_t < T >::writer\_started [private]

Flag set to true when write is called the first time.

**5.138.4.4** template < class T > bool mha\_drifter\_fifo\_t < T >::reader\_started [private]

Flag set to true when read is called for the first time.

5.138.4.5 template < class T > unsigned mha drifter fifo t < T >::writer\_xruns\_total [private]

The number of xruns seen by the writer since object instantiation.

**5.138.4.6** template < class T > unsigned mha drifter fifo t < T >::reader\_xruns\_total [private]

The number of xruns seen by the reader since object instantiation.

5.138.4.7 template < class T > unsigned mha\_drifter\_fifo\_t < T >::writer\_xruns\_since\_start [private]

The number of xruns seen by the writer since the last start of processing.

5.138.4.8 template < class T > unsigned mha\_drifter\_fifo\_t < T >::reader\_xruns\_since\_start [private]

The number of xruns seen by the reader since the last start of processing.

5.138.4.9 template < class T > unsigned mha\_drifter\_fifo\_t < T >::writer\_xruns\_in\_succession [private]

The number of xruns seen by the writer in succession.

Reset to 0 every time a write succeeds without xrun.

5.138.4.10 template < class T > unsigned mha\_drifter\_fifo\_t < T >::reader\_xruns\_in\_succession [private]

The number of xruns seen by the reader in succession.

Reset to 0 every time a read succeeds without xrun.

5.138.4.11 template < class T > unsigned mha\_drifter\_fifo\_t < T > ::maximum\_writer\_xruns\_in\_← succession\_before\_stop [private]

A limit to the number of xruns seen in succession during write before the data transmission through the FIFO is stopped.

5.138.4.12 template < class T > unsigned mha\_drifter\_fifo\_t < T >::maximum\_reader\_xruns\_in\_ $\leftarrow$  succession\_before\_stop [private]

A limit to the number of xruns seen in succession during read before the data transmission through the FIFO is stopped.

5.138.4.13 template < class T > mha\_fifo\_t < T > :: value\_type mha\_drifter\_fifo\_t < T > :: null\_data [private]

The value used in place of missing data.

**5.138.4.14** template < class T > unsigned mha\_drifter\_fifo\_t < T >::startup\_zeros [private]

When processing starts, that is when both  $mha\_drifter\_fifo\_t < T > :: reader\_started$  (p. 412) and  $mha\_drifter\_fifo\_t < T > :: writer\_started$  (p. 411) are true, then first  $mha\_drifter\_fifo\_t < \leftarrow T > :: desired\_fill\_count$  (p. 411) instances of  $mha\_drifter\_fifo\_t < T > :: null\_data$  (p. 413) are delivered to the reader.

These **null\_data** (p. 413) instances are not transmitted through the fifo because filling the fifo with enough **null\_data** (p. 413) might not be realtime safe and this filling has to be initiated by **starting** (p. 411) or **stop** (p. 411) (this implementation: **starting** (p. 411)) which are be called with realtime constraints.

The documentation for this class was generated from the following file:

· mha\_fifo.h

# 5.139 MHA\_Error Class Reference

Error reporting exception class.

Inherits exception.

**Public Member Functions** 

- MHA\_Error (const char \*file, int line, const char \*fmt,...)
   Create an instance of a MHA\_Error (p. 413).
- MHA\_Error (const MHA\_Error &)
- MHA\_Error & operator= (const MHA\_Error &)
- $\sim$ MHA Error () throw ()
- const char \* get\_msg () const

Return the error message without source position.

const char \* get\_longmsg () const

Return the error message with source position.

const char \* what () const throw ()
 overwrite std::execption::what()

## **Private Attributes**

- char \* msg
- char \* longmsg

## 5.139.1 Detailed Description

Error reporting exception class.

This class is used for error handling in the openMHA. It is used by the openMHA kernel and by the openMHA toolbox library. Please note that exceptions should not be used accross ANSI-C interfaces. It is necessary to catch exceptions within the library.

The MHA\_Error (p. 413) class holds source file name, line number and an error message.

5.139.2 Constructor & Destructor Documentation

```
5.139.2.1 MHA_Error::MHA_Error ( const char * s_file, int I, const char * fmt, ... )
```

Create an instance of a MHA\_Error (p. 413).

#### **Parameters**

s_file	source file name (FILE)
1	source line (LINE)
fmt	format string for error message (as in printf)

5.139.3.3 const char\* MHA\_Error::get\_longmsg( ) const [inline]

Return the error message with source position.

5.139.3.4 const char\* MHA\_Error::what ( ) const throw ) [inline]

overwrite std::execption::what()

5.139.4 Member Data Documentation

5.139.4.1 char\* MHA\_Error::msg [private]

**5.139.4.2 char**\* **MHA\_Error**::**longmsg** [private]


The documentation for this class was generated from the following files:

- mha\_error.hh
- mha\_error.cpp

5.140 mha\_fifo\_lw\_t < T > Class Template Reference

This FIFO uses locks to synchronize access.

Inheritance diagram for mha\_fifo\_lw\_t< T >:

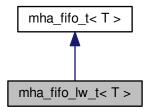

#### **Public Member Functions**

- virtual void write (const T \*data, unsigned count)
   write specified ammount of data to the fifo.
- virtual void read (T \*buf, unsigned count)
   read data from fifo.
- mha\_fifo\_lw\_t (unsigned max\_fill\_count)
   Create FIFO with fixed buffer size.
- virtual ~mha\_fifo\_lw\_t ()
   release synchronization object
- virtual void set\_error (unsigned index, MHA\_Error \*error)
   Process waiting for more data or space should bail out, throwing this error.

#### **Private Attributes**

mha\_fifo\_thread\_platform\_t \* sync
 platform specific thread synchronization

• MHA Error \* error [2]

If waiting for synchronization should be aborted then exception to be thrown by reader process (index 0) or writer process (index 1) has to be placed here.

**Additional Inherited Members** 

5.140.1 Detailed Description

```
\label{template} \begin{array}{l} \text{template} \! < \! \text{class T} \! > \\ \text{class mha\_fifo\_lw\_t} \! < \! \text{T} > \\ \end{array}
```

This FIFO uses locks to synchronize access.

Reading and writing can block until the operation can be executed.

5.140.2 Constructor & Destructor Documentation

Create FIFO with fixed buffer size.

```
5.140.2.2 template < class T > mha_fifo_lw_t < T >::\sim mha_fifo_lw_t ( ) [virtual]
```

release synchronization object

5.140.3 Member Function Documentation

```
5.140.3.1 template < class T > void mha_fifo_lw_t< T >::write ( const T * data, unsigned count ) [virtual]
```

write specified ammount of data to the fifo.

If there is not enough space, then wait for more space.

## **Parameters**

data	Pointer to source data.	
count	Number of instances to copy.	

## **Exceptions**

```
MHA_Error (p. 413) when detecting a deadlock situation.
```

Reimplemented from  $mha_fifo_t < T > (p. 422)$ .

5.140.3.2 template 
$$<$$
 class T  $>$  void mha\_fifo\_lw\_t $<$  T  $>$ ::read ( T  $*$  buf, unsigned count ) [virtual]

read data from fifo.

If there is not enough data, then wait for more data.

### **Parameters**

buf	Pointer to the target buffer.
count	Number of instances to copy.

## **Exceptions**

<b>MHA_Error</b> (p. <b>413</b> )	when detecting a deadlock situation.

Reimplemented from  $mha_fifo_t < T > (p. 423)$ .

5.140.3.3 template 
$$<$$
 class T  $>$  void mha\_fifo\_lw\_t $<$  T  $>$ ::set\_error ( unsigned index, MHA\_Error  $*$  error ) [virtual]

Process waiting for more data or space should bail out, throwing this error.

## **Parameters**

index	Use 0 for terminating reader, 1 for terminating writer.
error	MHA_Error (p. 413) to be thrown

# 5.140.4 Member Data Documentation

5.140.4.1 template < class T > mha\_fifo\_thread\_platform\_t\* mha\_fifo\_lw\_t < T >::sync [private]

platform specific thread synchronization


If waiting for synchronization should be aborted then exception to be thrown by reader process (index 0) or writer process (index 1) has to be placed here.

The documentation for this class was generated from the following files:

- · mha\_fifo.h
- mha\_fifo.cpp

5.141 mha\_fifo\_posix\_threads\_t Class Reference

Inheritance diagram for mha\_fifo\_posix\_threads\_t:

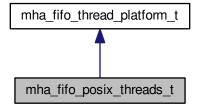

#### **Public Member Functions**

- mha\_fifo\_posix\_threads\_t ()
- virtual void aquire\_mutex ()
- virtual void release\_mutex ()
- virtual void wait\_for\_decrease ()
- virtual void wait for increase ()
- virtual void increment ()
- virtual void decrement ()
- virtual ~mha\_fifo\_posix\_threads\_t ()

### **Private Attributes**

```
pthread_mutex_t mutex
```

- pthread\_cond\_t decrease\_condition
- pthread\_cond\_t increase\_condition

```
5.141.1 Constructor & Destructor Documentation
5.141.1.1 mha_fifo_posix_threads_t::mha_fifo_posix_threads_t( ) [inline]
5.141.1.2 virtual mha_fifo_posix_threads_t::~mha_fifo_posix_threads_t( ) [inline],
         [virtual]
5.141.2 Member Function Documentation
5.141.2.1 virtual void mha_fifo_posix_threads_t::aquire_mutex( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 427).
5.141.2.2 virtual void mha fifo posix threads t::release mutex ( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 427).
5.141.2.3 virtual void mha_fifo_posix_threads_t::wait_for_decrease( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 427).
5.141.2.4 virtual void mha_fifo_posix_threads_t::wait_for_increase( ) [inline], [virtual]
Implements mha fifo thread platform t (p. 427).
5.141.2.5 virtual void mha_fifo_posix_threads_t::increment( ) [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 427).
5.141.2.6 virtual void mha_fifo_posix_threads_t::decrement() [inline], [virtual]
Implements mha_fifo_thread_platform_t (p. 428).
```

## 5.141.3 Member Data Documentation

5.141.3.1 pthread\_mutex\_t mha\_fifo\_posix\_threads\_t::mutex [private]

**5.141.3.2** pthread\_cond\_t mha\_fifo\_posix\_threads\_t::decrease\_condition [private]

**5.141.3.3** pthread\_cond\_t mha\_fifo\_posix\_threads\_t::increase\_condition [private]


The documentation for this class was generated from the following file:

· mha\_fifo.h

5.142 mha\_fifo\_t < T > Class Template Reference

A FIFO class for blocksize adaptation Synchronization: None.

Inheritance diagram for mha\_fifo\_t< T >:

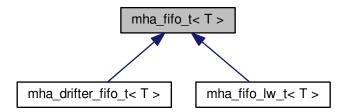

**Public Types** 

• typedef T value\_type

The data type exchanged by this fifo.

#### **Public Member Functions**

virtual void write (const T \*data, unsigned count)

write specified ammount of data to the fifo.

virtual void read (T \*buf, unsigned count)

read data from fifo

virtual unsigned get\_fill\_count () const

Read-only access to fill count.

• virtual unsigned get\_available\_space () const

Read-only access to available space.

virtual unsigned get\_max\_fill\_count () const

The capacity of this fifo.

mha\_fifo\_t (unsigned max\_fill\_count)

Create FIFO with fixed buffer size.

mha\_fifo\_t (unsigned max\_fill\_count, const T &t)

Create FIFO with fixed buffer size, where all (initially unused) copies of T are initialized as copies of t.

mha\_fifo\_t (const mha\_fifo\_t &src)

Copy constructor.

virtual ~mha\_fifo\_t ()

Destroy FIFO.

mha\_fifo\_t< T > & operator= (const mha\_fifo\_t< T > &)

Assignment operator.

## **Protected Member Functions**

• void clear ()

Empty the fifo at once.

#### **Private Attributes**

const unsigned max fill count

The maximum fill count of this FIFO.

• T \* buf

The memory allocated to store the data.

• T \* write ptr

points to location where to write next

const T \* read ptr

points to location where to read next

bool buf uses placement new

wether buf was allocated using placement new or array new.

```
5.142.1 Detailed Description
```

```
template < class T > class mha_fifo_t < T >
```

A FIFO class for blocksize adaptation Synchronization: None.

Use external synchronisation or synchronization in inheriting class.

```
5.142.2 Member Typedef Documentation
```

```
5.142.2.1 template < class T > typedef T mha_fifo_t < T >::value_type
```

The data type exchanged by this fifo.

5.142.3 Constructor & Destructor Documentation

Create FIFO with fixed buffer size.

Create FIFO with fixed buffer size, where all (initially unused) copies of T are initialized as copies of t.

```
5.142.3.3 template < class T> mha_fifo_t < T>::mha_fifo_t ( const mha_fifo_t < T> & src )
```

Copy constructor.

```
5.142.3.4 template < class T > mha fifo t < T >::\sim mha fifo t () [virtual]
```

Destroy FIFO.

5.142.4 Member Function Documentation

```
5.142.4.1 template < class T > void mha_fifo_t < T >::write ( const T * data, unsigned count ) [virtual]
```

write specified ammount of data to the fifo.

### **Parameters**

data	Pointer to source data.	
count	Number of instances to copy	

## **Exceptions**

```
MHA_Error (p. 413) when there is not enough space available.
```

Reimplemented in  $mha_fifo_lw_t < T > (p. 416)$ , and  $mha_drifter_fifo_t < T > (p. 409)$ .

read data from fifo

### **Parameters**

buf	Pointer to the target buffer	
count	Number of instances to copy	

# **Exceptions**

```
MHA_Error (p. 413) when there is not enough data available.
```

Reimplemented in  $mha_fifo_lw_t < T > (p. 417)$ , and  $mha_drifter_fifo_t < T > (p. 410)$ .

Read-only access to fill count.

Reimplemented in **mha\_drifter\_fifo\_t** < **T** > (p. 410).

Read-only access to available\_space.

Reimplemented in **mha\_drifter\_fifo\_t** < **T** > (p. 410).

The capacity of this fifo.

```
5.142.4.6 template < class T > mha_fifo_t < T > & mha_fifo_t < T > ::operator= ( const mha_fifo_t < T > & src )
```

Assignment operator.

5.142.4.7 template < class T > void mha\_fifo\_t < T >::clear( ) [inline], [protected]

Empty the fifo at once.

Should be called by the reader, or when the reader is inactive.

5.142.5 Member Data Documentation

**5.142.5.1** template < class T > const unsigned mha\_fifo\_t < T >::max\_fill\_count [private]

The maximum fill count of this FIFO.

5.142.5.2 template < class T > T \* mha\_fifo\_t < T >::buf [private]

The memory allocated to store the data.

max\_fill\_count + 1 locations are allocated: At least one location is always unused, because we have max\_fill\_count + 1 possible fillcounts [0:max\_fill\_count] that we need to distinguish.

5.142.5.3 template < class T > T \* mha\_fifo\_t < T >::write\_ptr [private]

points to location where to write next

5.142.5.4 template < class T > const T \* mha\_fifo\_t < T >::read\_ptr [private]

points to location where to read next

**5.142.5.5** template < class T > bool mha\_fifo\_t < T >::buf\_uses\_placement\_new [private]

wether buf was allocated using placement new or array new.

The documentation for this class was generated from the following file:

· mha fifo.h

5.143 mha\_fifo\_thread\_guard\_t Class Reference

Simple Mutex Guard Class.

**Public Member Functions** 

- mha\_fifo\_thread\_guard\_t (mha\_fifo\_thread\_platform\_t \*sync)
- ~mha\_fifo\_thread\_guard\_t ()

**Private Attributes** 

mha fifo thread platform t \* sync

5.143.1 Detailed Description

Simple Mutex Guard Class.

5.143.2 Constructor & Destructor Documentation


- **5.143.2.2** mha\_fifo\_thread\_guard\_t::~mha\_fifo\_thread\_guard\_t( ) [inline]
- 5.143.3 Member Data Documentation
- **5.143.3.1 mha\_fifo\_thread\_platform\_t**\* **mha\_fifo\_thread\_guard\_t::sync** [private]

The documentation for this class was generated from the following file:

· mha\_fifo.h

5.144 mha\_fifo\_thread\_platform\_t Class Reference

Abstract base class for synchronizing multithreaded (producer/consumer) fifo operations. Inheritance diagram for mha\_fifo\_thread\_platform\_t:

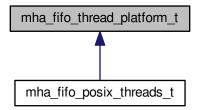

#### **Public Member Functions**

virtual void aquire mutex ()=0

Calling thread waits until it aquires the lock.

• virtual void release\_mutex ()=0

Calling thread releases the lock.

virtual void wait\_for\_decrease ()=0

Calling producer thread must own the lock.

• virtual void wait for increase ()=0

Calling consumer thread must own the lock.

virtual void increment ()=0

To be called by producer thread after producing.

• virtual void decrement ()=0

To be called by consumer thread after consuming.

virtual ~mha\_fifo\_thread\_platform\_t ()

Make destructor virtual.

mha\_fifo\_thread\_platform\_t ()

Make default constructor accessible.

### **Private Member Functions**

```
    mha_fifo_thread_platform_t (const mha_fifo_thread_platform_t &)
```

```
• mha fifo thread platform t & operator= (const mha fifo thread platform t &)
```

### 5.144.1 Detailed Description

Abstract base class for synchronizing multithreaded (producer/consumer) fifo operations.

Works only with single producer and single consumer.

```
5.144.2 Constructor & Destructor Documentation
```

```
5.144.2.1 virtual mha_fifo_thread_platform_t::~mha_fifo_thread_platform_t( ) [inline], [virtual]
```

Make destructor virtual.

```
5.144.2.3 mha_fifo_thread_platform_t::mha_fifo_thread_platform_t() [inline]
```

Make default constructor accessible.

```
5.144.3 Member Function Documentation
```

```
5.144.3.1 virtual void mha_fifo_thread_platform_t::aquire_mutex( ) [pure virtual]
```

Calling thread waits until it aquires the lock.

Must not be called when the lock is already aquired.

Implemented in **mha\_fifo\_posix\_threads\_t** (p. 419).

```
5.144.3.2 virtual void mha fifo thread platform t::release mutex ( ) [pure virtual]
```

Calling thread releases the lock.

May only be called when lock is owned.

Implemented in **mha\_fifo\_posix\_threads\_t** (p. 419).

```
5.144.3.3 virtual void mha_fifo_thread_platform_t::wait_for_decrease() [pure virtual]
```

Calling producer thread must own the lock.

Method releases lock, and waits for consumer thread to call decrease(). Then reaquires lock and returns

Implemented in **mha\_fifo\_posix\_threads\_t** (p. 419).

```
5.144.3.4 virtual void mha_fifo_thread_platform_t::wait_for_increase() [pure virtual]
```

Calling consumer thread must own the lock.

Method releases lock, and waits for producer thread to call increase(). Then reaquires lock and returns

```
Implemented in mha_fifo_posix_threads_t (p. 419).
```

```
5.144.3.5 virtual void mha_fifo_thread_platform_t::increment() [pure virtual]
```

To be called by producer thread after producing.

Producer thread needs to own the lock to call this method.

Implemented in **mha\_fifo\_posix\_threads\_t** (p. 419).

```
5.144.3.6 virtual void mha_fifo_thread_platform_t::decrement( ) [pure virtual]
To be called by consumer thread after consuming.
```

Consumer thread needs to own the lock to call this method.

Implemented in mha\_fifo\_posix\_threads\_t (p. 419).

The documentation for this class was generated from the following file:

· mha\_fifo.h

```
5.145 mha_rt_fifo_element_t < T > Class Template Reference
```

Object wrapper for **mha\_rt\_fifo\_t** (p. 429).

**Public Member Functions** 

- mha\_rt\_fifo\_element\_t (T \*data)
   Constructor.
- ~mha\_rt\_fifo\_element\_t ()

**Public Attributes** 

- mha\_rt\_fifo\_element\_t < T > \* next
   Pointer to next fifo element. NULL for the last (newest) fifo element.
- bool abandonned

Indicates that this element will no longer be used and may be deleted.

• T \* data

Pointer to user data.

5.145.1 Detailed Description

```
\label{eq:template} \begin{split} \text{template} \! < \! \text{class T} \! > \\ \text{class mha\_rt\_fifo\_element\_t} \! < \! \text{T} > \end{split}
```

Object wrapper for **mha\_rt\_fifo\_t** (p. 429).

5.145.2 Constructor & Destructor Documentation

Constructor.

This element assumes ownership of user data.

#### **Parameters**

data User data. Has to be allocated on the heap with standard operator new, because it will be deleted in this element's destructor.

5.145.2.2 template 
$$<$$
 class T  $>$  mha\_rt\_fifo\_element\_t  $<$  T  $>$ :: $\sim$  mha\_rt\_fifo\_element\_t ( ) [inline]

5.145.3 Member Data Documentation

Pointer to next fifo element. NULL for the last (newest) fifo element.

Indicates that this element will no longer be used and may be deleted.

Pointer to user data.

The documentation for this class was generated from the following file:

· mha\_fifo.h

# 5.146 mha rt fifo t < T > Class Template Reference

Template class for thread safe, half real time safe fifo without explixit locks.

**Public Member Functions** 

mha\_rt\_fifo\_t ()

Construct empty fifo.

• ~mha\_rt\_fifo\_t ()

Destructor will delete all data currently in the fifo.

• T \* poll ()

Retrieve the latest element in the Fifo.

• T \* poll\_1 ()

Retrieve the next element in the Fifo, if there is one, and mark the previous element as abandonned.

void push (T \*data)

Add element to the Fifo.

#### **Private Member Functions**

void remove\_abandonned ()

Deletes abandonned elements.

void remove\_all ()

Deletes all elements.

#### **Private Attributes**

```
    mha_rt_fifo_element_t < T > * root
```

The first element in the fifo. Deleting elements starts here.

mha\_rt\_fifo\_element\_t< T > \* current

The element most recently returned by **poll** (p. 431) or **poll** 1 (p. 431).

## 5.146.1 Detailed Description

```
template < class T > class mha_rt_fifo_t < T >
```

Template class for thread safe, half real time safe fifo without explixit locks.

Reading from this fifo is realtime safe, writing to it is not. This fifo is designed for objects that were constructed on the heap. It assumes ownership of these objects and calls delete on them when they are no longer used. Objects remain inside the Fifo while being used by the reader.

A new fifo element is inserted by using **push** (p. 431). The push operation is not real time safe, it allocates and deallocates memory. The latest element is retrieved by calling **poll** (p. 431). This operation will skip fifo elements if more than one **push** (p. 431) has been occured since the last poll. To avoid skipping, call the **poll\_1** (p. 431) operation instead.

## 5.146.2 Constructor & Destructor Documentation

```
5.146.2.1 template < class T > mha_rt_fifo_t < T > ::mha_rt_fifo_t ( ) [inline]
```

Construct empty fifo.

```
5.146.2.2 template < class T > mha_rt_fifo_t < T >::~mha_rt_fifo_t ( ) [inline]
```

Destructor will delete all data currently in the fifo.

5.146.3 Member Function Documentation

Retrieve the latest element in the Fifo.

Will skip fifo elements if more than one element has been added since last poll invocation. Will return the same element as on last call if no elements have been added in the mean time. Marks former elements as abandonned.

## **Returns**

The latest element in this Fifo. Returns NULL if the Fifo is empty.

Retrieve the next element in the Fifo, if there is one, and mark the previous element as abandonned.

Else, if there is no newer element, returns the same element as on last **poll()** (p. 431) or **poll\_1()** (p. 431) invocation.

### **Returns**

The next element in this Fifo, if there is one, or the same as before. Returns NULL if the Fifo is empty.

5.146.3.3 template 
$$<$$
 class T  $>$  void mha\_rt\_fifo\_t $<$  T  $>$ ::push ( T  $*$  data ) [inline]

Add element to the Fifo.

Deletes abandonned elements in the fifo.

# **Parameters**

data The new user data to place at the end of the fifo. After this invocation, the fifo is the owner of this object and will delete it when it is no longer used. data must have been allocated on the heap with standard operator new.

5.146.3.4 template 
$$<$$
 class T  $>$  void mha\_rt\_fifo\_t  $<$  T  $>$  ::remove\_abandonned ( ) [inline], [private]

Deletes abandonned elements.

5.146.3.5 template < class T > void mha\_rt\_fifo\_t < T >::remove\_all() [inline], [private]

Deletes all elements.

5.146.4 Member Data Documentation

The first element in the fifo. Deleting elements starts here.

The element most recently returned by **poll** (p. 431) or **poll\_1** (p. 431).

Searching for new elements starts here.


The documentation for this class was generated from the following file:

mha\_fifo.h

5.147 mha\_spec\_t Struct Reference

Spectrum signal structure.

Inheritance diagram for mha\_spec\_t:

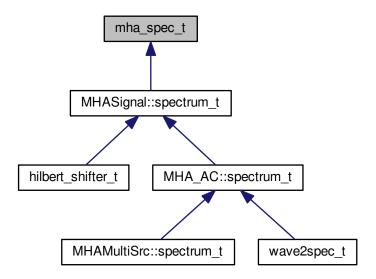

### **Public Attributes**

mha\_complex\_t \* buf

signal buffer

unsigned int num\_channels

number of channels

• unsigned int num\_frames

number of frames in each channel

mha\_channel\_info\_t \* channel\_info

detailed channel description

## 5.147.1 Detailed Description

Spectrum signal structure.

This structure contains the short time fourier transform output of the windowed input signal. The member  $num\_frames$  describes the number of frequency bins in each channel. For an even FFT length N, this is N/2+1. With odd FFT lengths, it is (N+1)/2. The imaginary part of the first bin is zero. For even FFT lengths, also the imaginary part at the Nyquist frequency is zero.

buf[k].re	Re(0)	Re(1)	Re(2)	Re(3)	Re(4)	 Re(n/2-1)	Re(n/2)
buf[k].im		Im(1)	Im(2)	Im(3)	Im(4)	 Im(n/2-1)	
k	0	1	2	3	4	n/2-1	n/2

Figure 4 Data order of FFT spectrum.

## 5.147.2 Member Data Documentation

5.147.2.1 mha\_complex\_t\* mha\_spec\_t::buf

signal buffer

5.147.2.2 unsigned int mha\_spec\_t::num\_channels

number of channels

5.147.2.3 unsigned int mha\_spec\_t::num\_frames

number of frames in each channel

5.147.2.4 mha\_channel\_info\_t\* mha\_spec\_t::channel\_info

detailed channel description


The documentation for this struct was generated from the following file:

· mha.h

# 5.148 MHA\_TCP::Async\_Notify Class Reference

Portable Multiplexable cross-thread notification.

Inheritance diagram for MHA\_TCP::Async\_Notify:

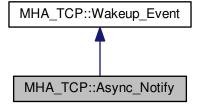

## **Public Member Functions**

- Async\_Notify ()
- virtual void reset ()
- virtual void set ()
- virtual ~Async\_Notify ()

**Private Attributes** 

• int **pipe** [2]

**Additional Inherited Members** 

5.148.1 Detailed Description

Portable Multiplexable cross-thread notification.

5.148.2 Constructor & Destructor Documentation

5.148.2.1 Async\_Notify::Async\_Notify()

**5.148.2.2** Async\_Notify::~Async\_Notify() [virtual]

5.148.3 Member Function Documentation

5.148.3.1 void Async\_Notify::reset( ) [virtual]

Reimplemented from MHA\_TCP::Wakeup\_Event (p. 461).

5.148.3.2 void Async\_Notify::set( ) [virtual]

5.148.4 Member Data Documentation

5.148.4.1 int MHA\_TCP::Async\_Notify::pipe[2] [private]


The documentation for this class was generated from the following files:

- mha\_tcp.hh
- mha\_tcp.cpp

# 5.149 MHA\_TCP::Client Class Reference

A portable class for a tcp client connections.

Inheritance diagram for MHA\_TCP::Client:

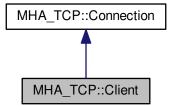

### **Public Member Functions**

• **Client** (const std::string &host, unsigned short port)

Constructor connects to host, port via TCP.

• Client (const std::string &host, unsigned short port, Timeout\_Watcher &timeout\_← watcher)

Constructor connects to host, port via TCP, using a timeout.

## **Additional Inherited Members**

### 5.149.1 Detailed Description

A portable class for a tcp client connections.

5.149.2 Constructor & Destructor Documentation

```
5.149.2.1 Client::Client (
const std::string & host,
unsigned short port )
```

Constructor connects to host, port via TCP.

## **Parameters**

host	The hostname of the TCP <b>Server</b> (p. 447).
port	The port or the TCP <b>Server</b> (p. 447).

```
5.149.2.2 Client::Client (

const std::string & host,

unsigned short port,

Timeout Watcher & timeout_watcher )
```

Constructor connects to host, port via TCP, using a timeout.

# **Parameters**

host	The hostname of the TCP <b>Server</b> (p. 447).	
port	The port or the TCP <b>Server</b> (p. 447).	
timeout_watcher	an Event watcher that implements a timeout.	

The documentation for this class was generated from the following files:


mha\_tcp.hh

mha\_tcp.cpp

## 5.150 MHA\_TCP::Connection Class Reference

Connection (p. 437) handles Communication between client and server, is used on both sides.

Inheritance diagram for MHA TCP::Connection:

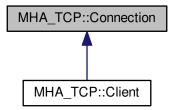

## **Public Member Functions**

- Sockread\_Event \* get\_read\_event ()
- Sockwrite\_Event \* get\_write\_event ()
- std::string get\_peer\_address ()

Get peer's IP Address.

unsigned short get\_peer\_port ()

Get peer's TCP port.

• SOCKET get\_fd () const

Return the (protected) file descriptor of the connection.

virtual ~Connection ()

Destructor closes the underlying file descriptor.

• bool **eof** ()

Checks if the peer has closed the connection.

bool can\_read\_line (char delim= '\n')

Checks if a full line of text has arrived by now.

bool can\_read\_bytes (unsigned howmany)

Checks if the specified ammount of data can be read.

std::string read\_line (char delim= '\n')

Reads a single line of data from the socket.

std::string read\_bytes (unsigned howmany)

Reads the specified ammount of dat from the socket.

void try\_write (const std::string &data="")

Adds data to the internal "outgoing" buffer, and then tries to write as much data from that buffer to the socket as possible without blocking.

void write (const std::string &data="")

Adds data to the internal "outgoing" buffer, and then writes that that buffer to the socket, regardless of blocking.

bool needs\_write ()

Checks if the internal "outgoing" buffer contains data.

• unsigned buffered\_incoming\_bytes () const

Returns the number of bytes in the internal "incoming" buffer.

• unsigned buffered\_outgoing\_bytes () const

Returns the number of bytes in the internal "outgoing" buffer.

#### **Protected Member Functions**

Connection (SOCKET \_fd)

Create a connection instance from a socket filedescriptor.

### **Protected Attributes**

SOCKET fd

The file descriptor of the TCP Socket.

### **Private Member Functions**

• void init peer data ()

determine peer address and port

• bool can sysread ()

Determine wether at least 1 byte can be read without blocking.

• bool can\_syswrite ()

Determine wether at least 1 byte can be written without blocking.

std::string sysread (unsigned bytes)

Call the system's read function and try to read bytes.

std::string syswrite (const std::string &data)

Call the system's write function and try to write all characters in the string data.

#### **Private Attributes**

- · std::string outbuf
- std::string inbuf
- Sockread Event \* read event
- Sockwrite\_Event \* write\_event
- bool closed
- struct sockaddr\_in peer\_addr

### 5.150.1 Detailed Description

**Connection** (p. 437) handles Communication between client and server, is used on both sides.

## 5.150.2 Constructor & Destructor Documentation

```
5.150.2.1 MHA_TCP::Connection::Connection (
SOCKET_fd) [protected]
```

Create a connection instance from a socket filedescriptor.

### **Parameters**

```
    ← The file descriptor of the TCP Socket. This file descriptor is closed again in the destructor.
    fd
```

## **Exceptions**

```
MHA_Error (p. 413) If the file descriptor is < 0.
```

**5.150.2.2 Connection:** Connection ( ) [virtual]

Destructor closes the underlying file descriptor.

5.150.3 Member Function Documentation

5.150.3.1 void MHA\_TCP::Connection::init\_peer\_data() [private]

determine peer address and port

**5.150.3.2** bool Connection::can\_sysread() [private]

Determine wether at least 1 byte can be read without blocking.

**5.150.3.3** bool Connection::can\_syswrite( ) [private]

Determine wether at least 1 byte can be written without blocking.

```
5.150.3.4 std::string Connection::sysread (
unsigned bytes ) [private]
```

Call the system's read function and try to read bytes.

This will block in a situation where can\_sysread returns false.

## **Parameters**

### **Returns**

The characters read from the socket. The result may have fewer characters than specified by bytes. If the result is an empty string, then the socket has been closed by the peer.

```
5.150.3.5 std::string Connection::syswrite (
const std::string & data ) [private]
```

Call the system's write function and try to write all characters in the string data.

May write fewer characters, but will at least write one character.

### **Parameters**

data A string of characters to write to the socket.
---

### **Returns**

The rest of the characters that have not yet been written.

```
5.150.3.6 Sockread_Event * Connection::get_read_event()

5.150.3.7 Sockwrite_Event * Connection::get_write_event()

5.150.3.8 std::string Connection::get_peer_address()

Get peer's IP Address.

5.150.3.9 unsigned short Connection::get_peer_port()

Get peer's TCP port.

5.150.3.10 SOCKET MHA_TCP::Connection::get_fd() const [inline]
```

Return the (protected) file descriptor of the connection.

Will be required for SSL.

```
5.150.3.11 bool Connection::eof ( )
```

Checks if the peer has closed the connection.

As a side effect, this method fills the internal "incoming" buffer if it was empty and the socket is readable and not eof.

```
5.150.3.12 bool Connection::can_read_line ( char delim = '\n')
```

Checks if a full line of text has arrived by now.

This method reads data from the socket into the internal "incoming" buffer if it can be done without blocking.

#### **Parameters**

```
delim The line delimiter.
```

## **Returns**

true if at least one full line of text is present in the internal buffer after this method call, false otherwise.

```
5.150.3.13 bool Connection::can_read_bytes ( unsigned howmany )
```

Checks if the specified ammount of data can be read.

This method reads data from the socket into an internal "incoming" buffer if it can be done without blocking.

#### **Parameters**

```
howmany The number of bytes that the caller wants to have checked.
```

### **Returns**

true if at least the specified ammount of data is present in the internal buffer after this method call, false otherwise

```
5.150.3.14 std::string Connection::read_line ( char delim = ' \n ' )
```

Reads a single line of data from the socket.

Blocks if necessary.

### **Parameters**

delim Th	e line delimiter.
----------	-------------------

### **Returns**

The string of characters in this line, including the trailing delimiter. The delimiter may be missing if the last line before EOF does not have a delimiter.

```
5.150.3.15 std::string Connection::read_bytes ( unsigned howmany )
```

Reads the specified ammount of dat from the socket.

Blocks if necessary.

### **Parameters**

howmany	The number of bytes to read.
---------	------------------------------

### Returns

The string of characters read. The string may be shorter if EOF is encountered.

```
5.150.3.16 void Connection::try_write (
const std::string & data = " " )
```

Adds data to the internal "outgoing" buffer, and then tries to write as much data from that buffer to the socket as possible without blocking.

## **Parameters**

```
data data to send over the socket.
```

```
5.150.3.17 void Connection::write (

const std::string & data = " " )
```

Adds data to the internal "outgoing" buffer, and then writes that that buffer to the socket, regardless of blocking.

## **Parameters**

```
5.150.3.18 bool Connection::needs_write ( )
```

Checks if the internal "outgoing" buffer contains data.

```
5.150.3.19 unsigned Connection::buffered incoming bytes ( ) const
```

Returns the number of bytes in the internal "incoming" buffer.

```
5.150.3.20 unsigned Connection::buffered_outgoing_bytes ( ) const
```

Returns the number of bytes in the internal "outgoing" buffer.

#### 5.150.4 Member Data Documentation

```
5.150.4.1 std::string MHA_TCP::Connection::outbuf [private]
```

**5.150.4.2 std::string MHA\_TCP::Connection::inbuf** [private]

**5.150.4.3 Sockread\_Event**\* MHA\_TCP::Connection::read\_event [private]

**5.150.4.4 Sockwrite\_Event**\* MHA\_TCP::Connection::write\_event [private]

**5.150.4.5 bool** MHA\_TCP::Connection::closed [private]

**5.150.4.6 struct sockaddr\_in MHA\_TCP::Connection::peer\_addr** [private]

**5.150.4.7 SOCKET MHA\_TCP::Connection::fd** [protected]

The file descriptor of the TCP Socket.


The documentation for this class was generated from the following files:

- mha\_tcp.hh
- mha\_tcp.cpp

# 5.151 MHA\_TCP::Event\_Watcher Class Reference

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

Inheritance diagram for MHA\_TCP::Event\_Watcher:

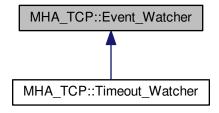

## **Public Types**

- typedef std::set< Wakeup\_Event \* > Events
- typedef std::set< Wakeup\_Event \* >::iterator iterator

## **Public Member Functions**

- void observe (Wakeup\_Event \*event)
  - Add an event to this observer.
- void ignore (Wakeup\_Event \*event)

Remove an event from this observer.

- std::set< Wakeup\_Event \* > wait ()
  - \ Wait for some event to occur.
- virtual ~Event\_Watcher ()

## **Private Attributes**

 $\bullet \ \, \text{std::set}{<} \ \, \text{Wakeup\_Event} \, *> \text{events}$ 

The list of events to watch.

## 5.151.1 Detailed Description

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

```
5.151.2 Member Typedef Documentation
```

```
5.151.2.1 typedef std::set<Wakeup_Event*> MHA_TCP::Event_Watcher::Events
```

```
5.151.2.2 typedef std::set<Wakeup_Event*>::iterator MHA_TCP::Event_Watcher::iterator
```

```
5.151.3 Constructor & Destructor Documentation
```

```
5.151.3.1 Event_Watcher::~Event_Watcher() [virtual]
```

5.151.4 Member Function Documentation

```
5.151.4.1 void Event_Watcher::observe (

Wakeup_Event * event )
```

Add an event to this observer.

```
5.151.4.2 void Event_Watcher::ignore (
Wakeup_Event * event )
```

Remove an event from this observer.

```
5.151.4.3 std::set < Wakeup_Event * > Event_Watcher::wait ( )
```

\ Wait for some event to occur.

Return all events that are ready

5.151.5 Member Data Documentation

```
5.151.5.1 std::set<Wakeup_Event*> MHA_TCP::Event_Watcher::events [private]
```

The list of events to watch.

The documentation for this class was generated from the following files:

- mha\_tcp.hh
- mha\_tcp.cpp

# 5.152 MHA\_TCP::OS\_EVENT\_TYPE Struct Reference

**Public Types** 

**Public Attributes** 

```
    enum MHA_TCP::OS_EVENT_TYPE:: { ... } mode
    union {
        int fd
        double timeout
        };
```

- 5.152.1 Member Enumeration Documentation
- 5.152.1.1 anonymous enum

**Enumerator** 

R

W

X

T

- 5.152.2 Member Data Documentation
- 5.152.2.1 enum { ... } MHA\_TCP::OS\_EVENT\_TYPE::mode
- 5.152.2.2 int MHA\_TCP::OS\_EVENT\_TYPE::fd
- 5.152.2.3 double MHA\_TCP::OS\_EVENT\_TYPE::timeout
- 5.152.2.4 union { ... }

The documentation for this struct was generated from the following file:

mha\_tcp.hh

## 5.153 MHA TCP::Server Class Reference

### **Public Member Functions**

• Server (unsigned short port=0, const std::string &iface="0.0.0.0")

Create a TCP server socket.

Server (const std::string &iface, unsigned short port=0)

Create a TCP server socket.

• ∼Server ()

Close the TCP server socket.

• std::string **get\_interface** () const

Get the name given in the constructor for the network interface.

unsigned short get\_port () const

Get the port that the TCP server socket currently listens to.

Sockaccept\_Event \* get\_accept\_event ()

Produces an event that can be observed by an Event\_Watcher (p. 444).

Connection \* accept ()

Accept an incoming connection.

Connection \* try\_accept ()

Accept an incoming connection if it can be done without blocking.

### **Private Member Functions**

• void initialize (const std::string &iface, unsigned short port)

## **Private Attributes**

- sockaddr\_in sock\_addr
- SOCKET serversocket
- std::string iface
- unsigned short port
- Sockaccept\_Event \* accept\_event

### 5.153.1 Constructor & Destructor Documentation

```
5.153.1.1 Server::Server (

unsigned short port = 0,

const std::string & iface = " 0 . 0 . 0 . 0 " )
```

Create a TCP server socket.

## **Parameters**

port	The TCP port to listen to.
iface	The network interface to bind to.

```
5.153.1.2 Server::Server ( const std::string & iface, unsigned short port = 0 )
```

Create a TCP server socket.

### **Parameters**

port	The TCP port to listen to.
iface	The network interface to bind to.

```
5.153.1.3 Server::∼Server ( )
```

Close the TCP server socket.

5.153.2 Member Function Documentation

5.153.2.2 std::string Server::get\_interface ( ) const

Get the name given in the constructor for the network interface.

5.153.2.3 unsigned short Server::get\_port ( ) const

Get the port that the TCP server socket currently listens to.

5.153.2.4 Sockaccept\_Event \* Server::get\_accept\_event()

Produces an event that can be observed by an **Event\_Watcher** (p. 444).

This event signals incoming connections that can be accepted.

5.153.2.5 Connection \* Server::accept ( )

Accept an incoming connection.

blocks if necessary.

### **Returns**

The new TCP connection. The connection has to be deleted by the caller.

```
5.153.2.6 Connection * Server::try_accept ( )
```

Accept an incoming connection if it can be done without blocking.

### **Returns**

The new TCP connection or 0 if there is no immediate connection. The connection has to be deleted by the caller.

## 5.153.3 Member Data Documentation

```
5.153.3.1 sockaddr_in MHA_TCP::Server::sock_addr [private]
```

**5.153.3.2 SOCKET MHA\_TCP::Server::serversocket** [private]

**5.153.3.3 std::string MHA\_TCP::Server::iface** [private]

**5.153.3.4 unsigned short MHA\_TCP::Server::port** [private]

5.153.3.5 Sockaccept\_Event\* MHA\_TCP::Server::accept\_event [private]

The documentation for this class was generated from the following files:

- mha\_tcp.hh
- mha\_tcp.cpp

# 5.154 MHA\_TCP::sock\_init\_t Class Reference

**Public Member Functions** 

sock\_init\_t ()


5.154.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

mha\_tcp.cpp

5.155 MHA\_TCP::Sockaccept\_Event Class Reference

Inheritance diagram for MHA\_TCP::Sockaccept\_Event:

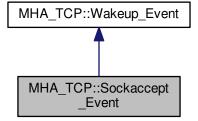

**Public Member Functions** 

Sockaccept\_Event (SOCKET)

**Additional Inherited Members** 

5.155.1 Constructor & Destructor Documentation

5.155.1.1 MHA\_TCP::Sockaccept\_Event::Sockaccept\_Event ( SOCKET s )


The documentation for this class was generated from the following files:

- mha\_tcp.hh
- mha\_tcp.cpp

# 5.156 MHA\_TCP::Sockread\_Event Class Reference

Watch socket for incoming data.

Inheritance diagram for MHA\_TCP::Sockread\_Event:

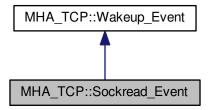

## **Public Member Functions**

# Sockread\_Event (SOCKET s)

Set socket to watch for.

**Additional Inherited Members** 

5.156.1 Detailed Description

Watch socket for incoming data.

5.156.2 Constructor & Destructor Documentation

5.156.2.1 MHA\_TCP::Sockread\_Event::Sockread\_Event ( SOCKET s )

Set socket to watch for.

**Parameters** 


s The socket to observe incoming data on.

The documentation for this class was generated from the following files:

- · mha\_tcp.hh
- · mha\_tcp.cpp

# 5.157 MHA\_TCP::Sockwrite\_Event Class Reference

Inheritance diagram for MHA\_TCP::Sockwrite\_Event:

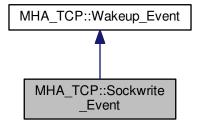

## **Public Member Functions**

Sockwrite\_Event (SOCKET s)

**Additional Inherited Members** 

5.157.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following files:

- mha\_tcp.hh
- mha\_tcp.cpp

# 5.158 MHA\_TCP::Thread Class Reference

A very simple class for portable threads.

## **Public Types**

typedef void \*(\* thr\_f) (void \*)

The thread function signature to use with this class.

#### **Public Member Functions**

Thread (thr\_f func, void \*arg=0)

Constructor starts a new thread.

virtual ∼Thread ()

The destructor should only be called when the Thread (p. 452) is finished.

virtual void run ()

The internal method that delegated the new thread to the registered **Thread** (p. 452) function.

#### **Public Attributes**

Async\_Notify thread\_finish\_event

Event will be triggered when the thread exits.

enum MHA\_TCP::Thread:: { ... } state

The current state of the thread.

thr\_f thread\_func

The thread function that the client has registered.

void \* thread\_arg

The argument that the client wants to be handed through to the thread function.

MHA\_Error \* error

The **MHA\_Error** (p. 413) that caused the thread to abort, if any.

## **Protected Member Functions**

Thread ()

Default constructor may only be used by derived classes that want to start the thread themselves.

# **Protected Attributes**

void \* arg

The argument for the client's thread function.

void \* return value

The return value from the client's thread function is stored here When that function returns.

#### **Private Attributes**

pthread\_t thread\_handle

The posix thread handle.

pthread\_attr\_t thread\_attr

The posix thread attribute structure.

## 5.158.1 Detailed Description

A very simple class for portable threads.

5.158.2 Member Typedef Documentation

```
5.158.2.1 typedef void*(* MHA_TCP::Thread::thr_f) (void *)
```

The thread function signature to use with this class.

Derive from this class and call protected standard constructor to start threads differently.

5.158.3 Member Enumeration Documentation

5.158.3.1 anonymous enum

The current state of the thread.

Enumerator

PREPARED RUNNING FINISHED

5.158.4 Constructor & Destructor Documentation

```
5.158.4.1 MHA_TCP::Thread::Thread( ) [protected]
```

Default constructor may only be used by derived classes that want to start the thread themselves.

Constructor starts a new thread.

#### **Parameters**

func	The function to be executed by the thread.
arg	The argument given to pass to the thread function.

```
5.158.4.3 Thread::~Thread() [virtual]
```

The destructor should only be called when the **Thread** (p. 452) is finished.

There is preliminary support for forceful thread cancellation in the destructor, but probably not very robust or portable..

5.158.5 Member Function Documentation

```
5.158.5.1 void Thread::run ( ) [virtual]
```

The internal method that delegated the new thread to the registered **Thread** (p. 452) function.

5.158.6 Member Data Documentation

```
5.158.6.1 pthread_t MHA_TCP::Thread::thread_handle [private]
```

The posix thread handle.

```
5.158.6.2 pthread_attr_t MHA_TCP::Thread::thread_attr [private]
```

The posix thread attribute structure.

Required for starting a thread in detached state. Detachment is required to eliminate the need for joining this thread.

```
5.158.6.3 void* MHA_TCP::Thread::arg [protected]
```

The argument for the client's thread function.

```
5.158.6.4 void* MHA_TCP::Thread::return_value [protected]
```

The return value from the client's thread function is stored here When that function returns.

5.158.6.5 Async\_Notify MHA\_TCP::Thread::thread\_finish\_event

Event will be triggered when the thread exits.

5.158.6.6 enum { ... } MHA\_TCP::Thread::state

The current state of the thread.

5.158.6.7 thr\_f MHA\_TCP::Thread::thread\_func

The thread function that the client has registered.

5.158.6.8 void\* MHA\_TCP::Thread::thread\_arg

The argument that the client wants to be handed through to the thread function.

5.158.6.9 MHA\_Error\* MHA\_TCP::Thread::error


The MHA\_Error (p. 413) that caused the thread to abort, if any.

The documentation for this class was generated from the following files:

- mha\_tcp.hh
- · mha\_tcp.cpp

5.159 MHA\_TCP::Timeout\_Event Class Reference

Inheritance diagram for MHA\_TCP::Timeout\_Event:

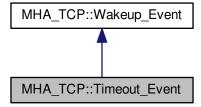

**Public Member Functions** 

- Timeout\_Event (double interval)
- virtual OS\_EVENT\_TYPE get\_os\_event ()

**Private Attributes** 

double end\_time

**Additional Inherited Members** 

- 5.159.1 Constructor & Destructor Documentation
- 5.159.1.1 Timeout\_Event::Timeout\_Event ( double *interval* )
- 5.159.2 Member Function Documentation
- 5.159.2.1 OS\_EVENT\_TYPE Timeout\_Event::get\_os\_event() [virtual]

Reimplemented from MHA\_TCP::Wakeup\_Event (p. 460).


- 5.159.3 Member Data Documentation
- **5.159.3.1** double MHA\_TCP::Timeout\_Event::end\_time [private]

The documentation for this class was generated from the following files:

- mha\_tcp.hh
- mha\_tcp.cpp
- 5.160 MHA\_TCP::Timeout\_Watcher Class Reference

OS-independent event watcher with internal fixed-end-time timeout.

Inheritance diagram for MHA TCP::Timeout Watcher:

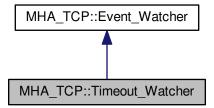

## **Public Member Functions**

- Timeout\_Watcher (double interval)
- virtual ~Timeout\_Watcher ()

#### **Private Attributes**

Timeout Event timeout

**Additional Inherited Members** 

5.160.1 Detailed Description

OS-independent event watcher with internal fixed-end-time timeout.

5.160.2 Constructor & Destructor Documentation

**5.160.2.2** Timeout\_Watcher::~Timeout\_Watcher( ) [virtual]

5.160.3 Member Data Documentation

**5.160.3.1 Timeout\_Event** MHA\_TCP::Timeout\_Watcher::timeout [private]


The documentation for this class was generated from the following files:

- · mha\_tcp.hh
- mha\_tcp.cpp

# 5.161 MHA\_TCP::Wakeup\_Event Class Reference

A base class for asynchronous wakeup events.

Inheritance diagram for MHA\_TCP::Wakeup\_Event:

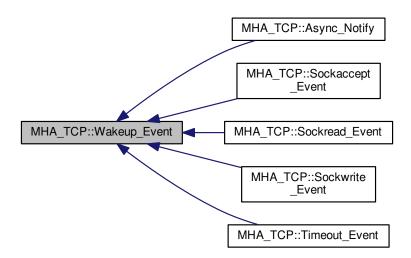

#### **Public Member Functions**

Wakeup\_Event ()

Event Constructor.

virtual void observed\_by (Event\_Watcher \*observer)

Called by the Event\_Watcher (p. 444) when this event is added to its list of observed events.

virtual void ignored\_by (Event\_Watcher \*observer)

Called by the **Event\_Watcher** (p. 444) when this event is removed from its list of observed events.

virtual ~Wakeup Event ()

Destructor deregisters from observers.

virtual OS\_EVENT\_TYPE get\_os\_event ()

Get necessary information for the Event Watcher.

• virtual void reset ()

For pure notification events, reset the "signalled" status.

• virtual bool status ()

Query wether the event is in signalled state now.

## **Protected Attributes**

- OS\_EVENT\_TYPE os\_event
- bool os\_event\_valid

**Private Attributes** 

```
    std::set< class Event Watcher * > observers
```

A list of all **Event\_Watcher** (p. 444) instances that this **Wakeup\_Event** (p. 459) is observed by (stored here for proper deregistering).

## 5.161.1 Detailed Description

A base class for asynchronous wakeup events.

```
5.161.2 Constructor & Destructor Documentation
```

```
5.161.2.1 Wakeup_Event::Wakeup_Event()
```

Event Constructor.

The new event has invalid state.

```
5.161.2.2 Wakeup_Event::~Wakeup_Event() [virtual]
```

Destructor deregisters from observers.

5.161.3 Member Function Documentation

Called by the **Event\_Watcher** (p. 444) when this event is added to its list of observed events.

Called by the **Event\_Watcher** (p. 444) when this event is removed from its list of observed events.

```
5.161.3.3 OS_EVENT_TYPE Wakeup_Event::get_os_event() [virtual]
```

Get necessary information for the Event Watcher.

Reimplemented in MHA\_TCP::Timeout\_Event (p. 457).

```
5.161.3.4 void Wakeup_Event::reset( ) [virtual]
```

For pure notification events, reset the "signalled" status.

Reimplemented in MHA\_TCP::Async\_Notify (p. 435).

```
5.161.3.5 bool Wakeup_Event::status() [virtual]
```

Query wether the event is in signalled state now.

## 5.161.4 Member Data Documentation

```
5.161.4.1 std::set<class Event_Watcher *> MHA_TCP::Wakeup_Event::observers [private]
```

A list of all **Event\_Watcher** (p. 444) instances that this **Wakeup\_Event** (p. 459) is observed by (stored here for proper deregistering).

```
5.161.4.2 OS_EVENT_TYPE MHA_TCP::Wakeup_Event::os_event [protected]
```

```
5.161.4.3 bool MHA_TCP::Wakeup_Event::os_event_valid [protected]
```

The documentation for this class was generated from the following files:

- mha\_tcp.hh
- mha\_tcp.cpp

## 5.162 mha\_tictoc\_t Struct Reference

**Public Attributes** 

- struct timeval tv1
- struct timeval tv2
- struct timezone tz
- float t

## 5.162.1 Member Data Documentation

5.162.1.1 struct timeval mha\_tictoc\_t::tv1

5.162.1.2 struct timeval mha\_tictoc\_t::tv2

5.162.1.3 struct timezone mha tictoc t::tz

5.162.1.4 float mha\_tictoc\_t::t


The documentation for this struct was generated from the following file:

## mha\_profiling.h

# 5.163 mha\_wave\_t Struct Reference

Waveform signal structure.

Inheritance diagram for mha\_wave\_t:

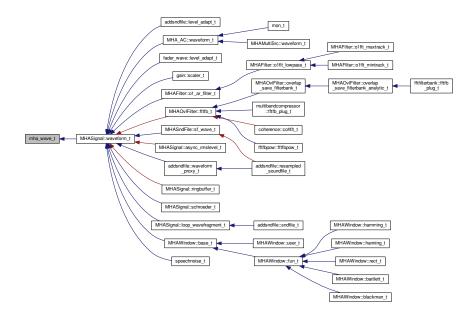

## **Public Attributes**

mha\_real\_t \* buf

signal buffer

unsigned int num\_channels

number of channels

unsigned int num\_frames

number of frames in each channel

mha\_channel\_info\_t \* channel\_info

detailed channel description

# 5.163.1 Detailed Description

Waveform signal structure.

This structure contains one fragment of a waveform signal. The member num\_frames describes the number of audio samples in each audio channel.

The field channel\_info must be an array of num\_channels entries or NULL.

5.163.2 Member Data Documentation

5.163.2.1 mha\_real\_t\* mha\_wave\_t::buf

signal buffer

5.163.2.2 unsigned int mha\_wave\_t::num\_channels

number of channels

5.163.2.3 unsigned int mha\_wave\_t::num\_frames

number of frames in each channel

5.163.2.4 mha\_channel\_info\_t\* mha\_wave\_t::channel\_info


detailed channel description

The documentation for this struct was generated from the following file:

#### mha.h

# 5.164 mhachain::chain\_base\_t Class Reference

Inheritance diagram for mhachain::chain\_base\_t:

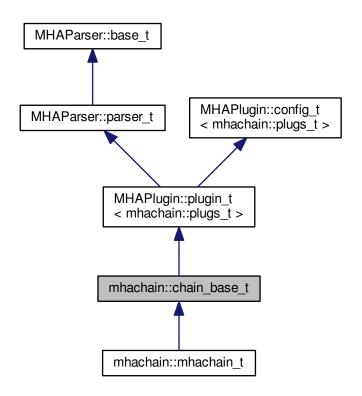

#### **Public Member Functions**

```
chain_base_t (algo_comm_t, const std::string &, const std::string &)
void process (mha_wave_t *, mha_wave_t **)
void process (mha_spec_t *, mha_wave_t **)
void process (mha_wave_t *, mha_spec_t **)
void process (mha_spec_t *, mha_spec_t **)
void prepare (mhaconfig_t &)
```

• void release ()

## **Protected Attributes**

MHAParser::bool\_t bprofilingMHAParser::vstring\_t algos

#### **Private Member Functions**

• void update ()

#### **Private Attributes**

- std::vector< std::string > old\_algos
- MHAEvents::patchbay t< mhachain::chain base t > patchbay
- · mhaconfig t cfin
- mhaconfig\_t cfout
- bool b\_prepared
- std::string chain

## **Additional Inherited Members**

```
5.164.1 Constructor & Destructor Documentation
```

## 5.164.2 Member Function Documentation


```
5.164.2.2 void mhachain::chain_base_t::process (
                     mha_spec_t * sin,
                     mha wave t ** sout )
5.164.2.3 void mhachain::chain_base_t::process (
                     mha_wave_t * sin,
                     mha_spec_t ** sout )
5.164.2.4 void mhachain::chain base t::process (
                     mha spec t * sin,
                     mha_spec_t ** sout )
5.164.2.5 void mhachain::chain_base_t::prepare (
                     mhaconfig_t & cf ) [virtual]
Implements MHAPlugin::plugin_t< mhachain::plugs_t > (p. 692).
5.164.2.6 void mhachain::chain_base_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin t < mhachain::plugs t > (p. 693).
5.164.2.7 void mhachain::chain base t::update() [private]
5.164.3 Member Data Documentation
5.164.3.1 MHAParser::bool_t mhachain::chain_base_t::bprofiling [protected]
5.164.3.2 MHAParser::vstring t mhachain::chain_base_t::algos [protected]
5.164.3.3 std::vector<std::string> mhachain::chain_base_t::old_algos [private]
5.164.3.4 MHAEvents::patchbay t < mhachain::chain base t >
         mhachain::chain_base_t::patchbay [private]
5.164.3.5 mhaconfig t mhachain::chain_base_t::cfin [private]
5.164.3.6 mhaconfig t mhachain::chain base t::cfout [private]
5.164.3.7 bool mhachain::chain_base_t::b_prepared [private]
5.164.3.8 std::string mhachain::chain_base_t::chain [private]
```

The documentation for this class was generated from the following files:

- mha\_generic\_chain.h
- mha\_generic\_chain.cpp

# 5.165 mhachain::mhachain\_t Class Reference

Inheritance diagram for mhachain::mhachain\_t:

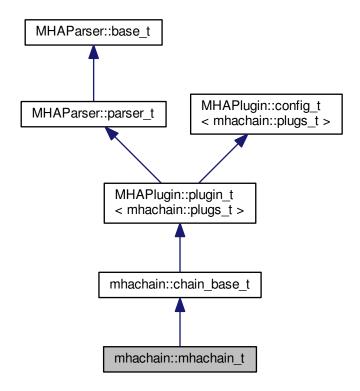

## **Public Member Functions**

• mhachain t (algo comm t iac, const std::string &ichain, const std::string &ialgo)

## **Additional Inherited Members**

5.165.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

· mhachain.cpp

## 5.166 mhachain::plugs\_t Class Reference

#### **Public Member Functions**

- plugs\_t (std::vector< std::string > algos, mhaconfig\_t cfin, mhaconfig\_t cfout, bool do\_prepare, MHAParser::parser\_t &p, algo\_comm\_t iac, std::string ichain, bool use\_← profiling)
- ~plugs\_t ()
- void prepare (mhaconfig t &)
- void release ()
- void process (mha\_wave\_t \*, mha\_spec\_t \*, mha\_wave\_t \*\*, mha\_spec\_t \*\*)
- bool **prepared** () const

#### **Private Member Functions**

- void alloc\_plugs (std::vector< std::string > algos)
- void cleanup plugs ()
- void update\_proc\_load ()

# **Private Attributes**

- bool b\_prepared
- std::vector< PluginLoader::mhapluginloader\_t \* > algos
- MHAParser::parser\_t & parser
- · algo comm tac
- std::string chain
- MHAParser::parser\_t profiling
- MHAParser::vstring\_mon\_t prof\_algos
- MHAParser::vfloat mon t prof init
- MHAParser::vfloat\_mon\_t prof\_prepare
- MHAParser::vfloat\_mon\_t prof\_release
- MHAParser::vfloat\_mon\_t prof\_process
- MHAParser::float\_mon\_t prof\_process\_tt
- MHAParser::vfloat\_mon\_t prof\_process\_load
- unsigned int proc\_cnt
- mhaconfig\_t prof\_cfg
- MHAEvents::connector t< mhachain::plugs t > prof load con
- MHAEvents::connector\_t< mhachain::plugs\_t > prof\_tt\_con
- bool b use profiling
- mha\_platform\_tictoc\_t tictoc

```
5.166.1 Constructor & Destructor Documentation
5.166.1.1 mhachain::plugs_t::plugs_t (
                      std::vector < std::string > algos,
                      mhaconfig_t cfin,
                      mhaconfig t cfout,
                      bool do_prepare,
                      MHAParser::parser t & p,
                      algo_comm_t iac,
                      std::string ichain,
                      bool use_profiling )
5.166.1.2 mhachain::plugs_t::~plugs_t ( )
5.166.2 Member Function Documentation
5.166.2.1
         void mhachain::plugs_t::prepare (
                      mhaconfig t & tf)
5.166.2.2 void mhachain::plugs_t::release (
                      void )
5.166.2.3 void mhachain::plugs t::process (
                      mha_wave_t * win,
                      mha_spec_t * sin,
                      mha_wave_t ** wout,
                      mha spec t ** sout )
5.166.2.4 bool mhachain::plugs_t::prepared ( ) const [inline]
5.166.2.5 void mhachain::plugs_t::alloc_plugs (
                      std::vector < std::string > algos ) [private]
5.166.2.6
         void mhachain::plugs_t::cleanup_plugs( ) [private]
5.166.2.7 void mhachain::plugs_t::update_proc_load( ) [private]
5.166.3 Member Data Documentation
5.166.3.1 bool mhachain::plugs_t::b_prepared [private]
5.166.3.2 std::vector< PluginLoader::mhapluginloader_t* > mhachain::plugs_t::algos
          [private]
5.166.3.3 MHAParser::parser_t& mhachain::plugs_t::parser [private]
```

```
5.166.3.4 algo_comm_t mhachain::plugs_t::ac [private]
5.166.3.5 std::string mhachain::plugs_t::chain [private]
5.166.3.6 MHAParser::parser_t mhachain::plugs_t::profiling [private]
5.166.3.7 MHAParser::vstring_mon_t mhachain::plugs_t::prof_algos [private]
5.166.3.8 MHAParser::vfloat mon t mhachain::plugs_t::prof_init [private]
5.166.3.9 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_prepare [private]
5.166.3.10 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_release [private]
5.166.3.11 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_process [private]
5.166.3.12 MHAParser::float_mon_t mhachain::plugs_t::prof_process_tt [private]
5.166.3.13 MHAParser::vfloat_mon_t mhachain::plugs_t::prof_process_load [private]
5.166.3.14 unsigned int mhachain::plugs_t::proc_cnt [private]
5.166.3.15 mhaconfig_t mhachain::plugs_t::prof_cfg [private]
5.166.3.16 MHAEvents::connector t<mhachain::plugs t> mhachain::plugs t::prof load con
          [private]
5.166.3.17 MHAEvents::connector_t<mhachain::plugs_t> mhachain::plugs_t::prof_tt_con
          [private]
5.166.3.18 bool mhachain::plugs_t::b_use_profiling [private]
5.166.3.19 mha_platform_tictoc_t mhachain::plugs_t::tictoc [private]
```


The documentation for this class was generated from the following files:

- mha\_generic\_chain.h
- mha\_generic\_chain.cpp

# 5.167 mhaconfig\_t Struct Reference

MHA prepare configuration structure.

Inheritance diagram for mhaconfig\_t:

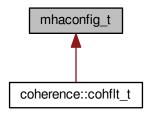

#### **Public Attributes**

· unsigned int channels

Number of audio channels.

unsigned int domain

Signal domain (MHA\_WAVEFORM or MHA\_SPECTRUM)

· unsigned int fragsize

Fragment size of waveform data.

• unsigned int wndlen

Window length of spectral data.

· unsigned int fftlen

FFT length of spectral data.

mha\_real\_t srate

Sampling rate in Hz.

## 5.167.1 Detailed Description

MHA prepare configuration structure.

This structure contains information about channel number and domain for input and output signals of a openMHA Plugin. Each plugin can change any of these parameters, e.g. by resampling of the signal. The only limitation is that the callback frequency is fixed (except for the plugins db and dbasync).

**Todo** Add information on number of bands and on center frequencies, or replace by **mha**\_← **audio\_descriptor\_t** (p. 396).


5.167.2 Member Data Documentation 5.167.2.1 unsigned int mhaconfig\_t::channels Number of audio channels. 5.167.2.2 unsigned int mhaconfig\_t::domain Signal domain (MHA\_WAVEFORM or MHA\_SPECTRUM) 5.167.2.3 unsigned int mhaconfig\_t::fragsize Fragment size of waveform data. 5.167.2.4 unsigned int mhaconfig\_t::wndlen Window length of spectral data. 5.167.2.5 unsigned int mhaconfig\_t::fftlen FFT length of spectral data. 5.167.2.6 mha\_real\_t mhaconfig\_t::srate Sampling rate in Hz.

The documentation for this struct was generated from the following file:

· mha.h

# 5.168 MHAEvents::connector\_base\_t Class Reference

Inheritance diagram for MHAEvents::connector\_base\_t:

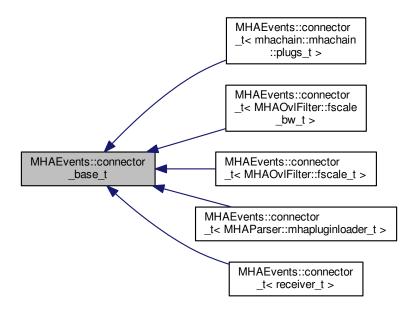

## **Public Member Functions**

- connector\_base\_t ()
- virtual ~connector\_base\_t ()
- virtual void emit\_event ()
- virtual void emit\_event (const std::string &)
- virtual void emit\_event (const std::string &, unsigned int, unsigned int)
- void emitter\_die ()

### **Protected Attributes**

• bool emitter\_is\_alive

# 5.168.1 Constructor & Destructor Documentation

- 5.168.1.1 MHAEvents::connector\_base\_t::connector\_base\_t ( )
- 5.168.1.2 MHAEvents::connector\_base\_t::~connector\_base\_t() [virtual]

```
5.168.2 Member Function Documentation
5.168.2.1 void MHAEvents::connector_base_t::emit_event() [virtual]
Reimplemented in MHAEvents::connector_t< receiver_t >
                                                             (p. 475), MHAEvents ←
::connector_t< MHAOvIFilter::fscale_bw_t > (p. 475), MHAEvents::connector_t<
MHAParser::mhapluginloader_t > (p. 475), MHAEvents::connector_t < mhachain <--
::mhachain::plugs t > (p. 475), and MHAEvents::connector t < MHAOvIFilter::fscale <math>t >
(p. 475).
5.168.2.2 void MHAEvents::connector_base_t::emit_event (
                   const std::string & ) [virtual]
Reimplemented in MHAEvents::connector_t< receiver_t >
                                                             (p. 475), MHAEvents ←
::connector t < MHAOvIFilter::fscale bw t > (p. 475), MHAEvents::connector t <
MHAParser::mhapluginloader_t > (p. 475), MHAEvents::connector_t < mhachain ~
::mhachain::plugs_t > (p. 475), and MHAEvents::connector_t < MHAOvlFilter::fscale_t >
(p. 475).
5.168.2.3 void MHAEvents::connector_base_t::emit_event (
                   const std::string & ,
                    unsigned int,
                    unsigned int ) [virtual]
Reimplemented in MHAEvents::connector_t< receiver_t > (p. 475), MHAEvents
::connector_t< MHAOvlFilter::fscale_bw_t > (p. 475), MHAEvents::connector_t<
MHAParser::mhapluginloader_t > (p. 475), MHAEvents::connector_t< mhachain←
::mhachain::plugs_t > (p. 475), and MHAEvents::connector_t < MHAOvIFilter::fscale_t >
(p. 475).
5.168.2.4 void MHAEvents::connector_base_t::emitter_die ( )
5.168.3 Member Data Documentation
5.168.3.1 bool MHAEvents::connector_base_t::emitter_is_alive [protected]
```


· mha event emitter.h

The documentation for this class was generated from the following files:

mha\_events.cpp

# 5.169 MHAEvents::connector\_t< receiver\_t > Class Template Reference

Inheritance diagram for MHAEvents::connector\_t< receiver\_t >:

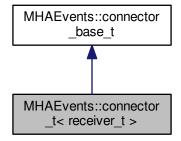

#### **Public Member Functions**

- connector\_t (emitter\_t \*, receiver\_t \*, void(receiver\_t::\*)())
- connector\_t (emitter\_t \*, receiver\_t \*, void(receiver\_t::\*)(const std::string &))
- connector\_t (emitter\_t \*, receiver\_t \*, void(receiver\_t::\*)(const std::string &, unsigned int, unsigned int))
- ~connector\_t ()

## **Private Member Functions**

- void emit\_event ()
- void emit\_event (const std::string &)
- void emit\_event (const std::string &, unsigned int, unsigned int)

# **Private Attributes**

- emitter\_t \* emitter
- receiver t \* receiver
- void(receiver\_t::\* eventhandler )()
- void(receiver t::\* eventhandler s)(const std::string &)
- void(receiver\_t::\* eventhandler\_suu )(const std::string &, unsigned int, unsigned int)

**Additional Inherited Members** 

```
5.169.1 Constructor & Destructor Documentation
5.169.1.1 template < class receiver_t > MHAEvents::connector t < receiver_t >::connector t (
                       emitter t * e,
                       receiver_t * r,
                       void(receiver_t::*)() rfun )
5.169.1.2 template < class receiver_t > MHAEvents::connector_t < receiver_t >::connector_t (
                      emitter t * e.
                       receiver t * r.
                       void(receiver_t::*)(const std::string &) rfun )
5.169.1.3 template < class receiver_t > MHAEvents::connector t < receiver_t >::connector t (
                      emitter t * e,
                      receiver_t * r,
                       void(receiver_t::*)(const std::string &, unsigned int, unsigned int) rfun )
5.169.1.4 template < class receiver_t > MHAEvents::connector t < receiver_t >::~connector t (
          )
5.169.2 Member Function Documentation
5.169.2.1 template < class receiver_t > void MHAEvents::connector_t < receiver_t > ::emit_event (
          ) [private], [virtual]
Reimplemented from MHAEvents::connector base t (p. 473).
5.169.2.2 template < class receiver_t > void MHAEvents::connector t < receiver_t > ::emit_event (
                       const std::string & arg ) [private], [virtual]
Reimplemented from MHAEvents::connector_base_t (p. 473).
5.169.2.3 template < class receiver_t > void MHAEvents::connector t < receiver_t > ::emit_event (
                       const std::string & arg,
                       unsigned int arg2,
                       unsigned int arg3 ) [private], [virtual]
```

Reimplemented from **MHAEvents::connector\_base\_t** (p. 473).

#### 5.169.3 Member Data Documentation

```
5.169.3.1 template < class receiver_t > emitter_t * MHAEvents::connector_t < receiver_t >::emitter [private]
```

```
5.169.3.2 template < class receiver_t > receiver_t * MHAEvents::connector_t < receiver_t >::receiver [private]
```

```
5.169.3.3 template < class receiver_t > void(receiver_t::* MHAEvents::connector_t < receiver_t >::eventhandler) () [private]
```

```
5.169.3.4 template < class receiver_t > void(receiver_t::* MHAEvents::connector_t < receiver_t >::eventhandler_s) (const std::string &) [private]
```

5.169.3.5 template < class receiver\_t > void(receiver\_t::\* MHAEvents::connector\_t < receiver\_t >::eventhandler\_suu) (const std::string &, unsigned int, unsigned int) [private]

The documentation for this class was generated from the following file:

· mha\_events.h

5.170 MHAEvents::emitter t Class Reference

Class for emitting openMHA events.

**Public Member Functions** 

- ~emitter\_t ()
- void operator() ()

Emit an event without parameter.

• void **operator()** (const std::string &)

Emit an event with string parameter.

• void operator() (const std::string &, unsigned int, unsigned int)

Emit an event with string parameter and two unsigned int parameters.

- void connect (connector\_base\_t \*)
- void disconnect (connector\_base\_t \*)

## **Private Attributes**

std::list< connector\_base\_t \* > connections

```
5.170.1 Detailed Description
```

Class for emitting openMHA events.

Use the template class **MHAEvents::patchbay\_t** (p. 478) for connecting to an emitter.

```
5.170.2 Constructor & Destructor Documentation
```

```
5.170.2.1 MHAEvents::emitter_t::~emitter_t ( )
```

5.170.3 Member Function Documentation

```
5.170.3.1 void MHAEvents::emitter_t::operator() ( )
```

Emit an event without parameter.

```
5.170.3.2 void MHAEvents::emitter_t::operator() ( const std::string & arg )
```

Emit an event with string parameter.

Emit an event with string parameter and two unsigned int parameters.

```
5.170.3.4 void MHAEvents::emitter_t::connect ( connector\_base\_t*c )
```

```
5.170.3.5 void MHAEvents::emitter_t::disconnect ( connector\_base\_t*c )
```

5.170.4 Member Data Documentation

```
5.170.4.1 std::list<connector_base_t*> MHAEvents::emitter_t::connections [private]
```

The documentation for this class was generated from the following files:

- mha\_event\_emitter.h
- mha\_events.cpp

# 5.171 MHAEvents::patchbay\_t < receiver\_t > Class Template Reference

Patchbay which connects any event emitter with any member function of the parameter class.

**Public Member Functions** 

- ~patchbay t ()
- void connect (emitter\_t \*, receiver\_t \*, void(receiver\_t::\*)())

Connect a receiver member function void (receiver\_t::\*)() with an event emitter.

- void connect (emitter\_t \*, receiver\_t \*, void(receiver\_t::\*)(const std::string &))
   Connect a receiver member function void (receiver\_t::\*)(const std::string&) with an event emitter
- void connect (emitter\_t \*, receiver\_t \*, void(receiver\_t::\*)(const std::string &, unsigned int, unsigned int))

#### **Private Attributes**

std::list< connector t< receiver t > \* > cons

## 5.171.1 Detailed Description

```
template < class receiver_t > class MHAEvents::patchbay_t < receiver_t >
```

Patchbay which connects any event emitter with any member function of the parameter class.

The connections created by the **connect()** (p. 478) function are hold until the destructor is called. To avoid access to invalid function pointers, it is required to destruct the patchbay before the receiver, usually by declaring the patchbay as a member of the receiver.

The receiver can be any claas or structure; the event callback can be either a member function without arguments or with const std::string& argument.

```
5.171.2 Constructor & Destructor Documentation
```

```
5.171.2.1 template < class receiver_t > MHAEvents::patchbay_t < receiver_t >::\sim patchbay_t ( )
```

## 5.171.3 Member Function Documentation

Connect a receiver member function void (receiver\_t::\*)() with an event emitter.

Create a connection.

The connection is removed when the patchbay is destructed.

## **Parameters**

е	Pointer to an event emitter
r	Pointer to the receiver
rfun	Pointer to a member function of the receiver class

Connect a receiver member function void (receiver\_t::\*)(const std::string&) with an event emitter.

Create a connection.

The connection is removed when the patchbay is destructed.

### **Parameters**

e	Pointer to an event emitter
r	Pointer to the receiver
rfun	Pointer to a member function of the receiver class

5.171.4 Member Data Documentation

```
5.171.4.1 template < class receiver_t > std::list < connector_t < receiver_t > *> MHAEvents::patchbay_t < receiver_t > ::cons [private]
```

The documentation for this class was generated from the following file:

· mha\_events.h

5.172 MHAFilter::adapt\_filter\_param\_t Class Reference

**Public Member Functions** 

adapt\_filter\_param\_t (mha\_real\_t imu, bool ierr\_in)

## **Public Attributes**

- mha\_real\_t mu
- bool err\_in
- 5.172.1 Constructor & Destructor Documentation

- 5.172.2 Member Data Documentation
- 5.172.2.1 mha\_real\_t MHAFilter::adapt\_filter\_param\_t::mu
- 5.172.2.2 bool MHAFilter::adapt\_filter\_param\_t::err\_in

The documentation for this class was generated from the following files:

- mha\_filter.hh
- mha\_filter.cpp
- 5.173 MHAFilter::adapt\_filter\_state\_t Class Reference

**Public Member Functions** 

- adapt\_filter\_state\_t (int ntaps, int nchannels)
- void filter (mha\_wave\_t y, mha\_wave\_t e, mha\_wave\_t x, mha\_wave\_t d, mha\_real
   \_t mu, bool err\_in)

# **Private Attributes**

- int ntaps
- int nchannels
- MHASignal::waveform t W
- MHASignal::waveform\_t X
- · MHASignal::waveform t od
- MHASignal::waveform\_t oy

```
5.173.1 Constructor & Destructor Documentation
```

#### 5.173.2 Member Function Documentation

#### 5.173.3 Member Data Documentation

```
5.173.3.1 int MHAFilter::adapt_filter_state_t::ntaps [private]
```

**5.173.3.2** int MHAFilter::adapt\_filter\_state\_t::nchannels [private]

5.173.3.3 MHASignal::waveform\_t MHAFilter::adapt\_filter\_state\_t::W [private]

**5.173.3.4** MHASignal::waveform\_t MHAFilter::adapt\_filter\_state\_t::X [private]

**5.173.3.5** MHASignal::waveform\_t MHAFilter::adapt\_filter\_state\_t::od [private]

**5.173.3.6 MHASignal::waveform\_t** MHAFilter::adapt\_filter\_state\_t::oy [private]


The documentation for this class was generated from the following files:

- mha\_filter.hh
- mha\_filter.cpp

## 5.174 MHAFilter::adapt\_filter\_t Class Reference

Adaptive filter.

Inheritance diagram for MHAFilter::adapt\_filter\_t:

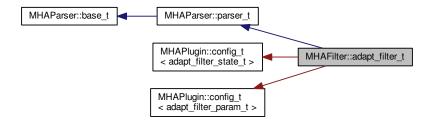

#### **Public Member Functions**

```
adapt_filter_t (std::string)
```

- void filter (mha\_wave\_t y, mha\_wave\_t e, mha\_wave\_t x, mha\_wave\_t d)
- void set\_channelcnt (unsigned int)

# **Private Member Functions**

- void update mu ()
- void update\_ntaps ()

## **Private Attributes**

```
    MHAParser::float_t mu
```

- MHAParser::int t ntaps
- MHAParser::bool\_t err\_in
- MHAEvents::patchbay\_t< adapt\_filter\_t > connector
- unsigned int nchannels

#### **Additional Inherited Members**

## 5.174.1 Detailed Description

Adaptive filter.

```
5.174.2 Constructor & Destructor Documentation
```

```
5.174.2.1 MHAFilter::adapt_filter_t (
std::string help )
```

5.174.3 Member Function Documentation

```
5.174.3.1 void MHAFilter::adapt_filter_t::filter (

mha_wave_t y,

mha_wave_t e,

mha_wave_t x,

mha_wave_t d)
```

```
5.174.3.2 void MHAFilter::adapt_filter_t::set_channelcnt ( unsigned int nch )
```

5.174.3.3 void MHAFilter::adapt\_filter\_t::update\_mu( ) [private]

# 5.175 MHAFilter::blockprocessing\_polyphase\_resampling\_t Class Reference 483

```
5.174.3.4 void MHAFilter::adapt_filter_t::update_ntaps( ) [private]
5.174.4 Member Data Documentation
5.174.4.1 MHAParser::float_t MHAFilter::adapt_filter_t::mu [private]
5.174.4.2 MHAParser::int_t MHAFilter::adapt_filter_t::ntaps [private]
5.174.4.3 MHAParser::bool_t MHAFilter::adapt_filter_t::err_in [private]
5.174.4.4 MHAEvents::patchbay_t<adapt_filter_t> MHAFilter::adapt_filter_t::connector [private]
```

**5.174.4.5** unsigned int MHAFilter::adapt\_filter\_t::nchannels [private]

The documentation for this class was generated from the following files:

- · mha filter.hh
- mha\_filter.cpp
- 5.175 MHAFilter::blockprocessing\_polyphase\_resampling\_t Class Reference

A class that does polyphase resampling and takes into account block processing.

## **Public Member Functions**

 blockprocessing\_polyphase\_resampling\_t (float source\_srate, unsigned source\_← fragsize, float target\_srate, unsigned target\_fragsize, float nyquist\_ratio, float irslen, unsigned nchannels, bool add delay)

Contructs a polyphase resampling filter that can be used for blockprocessing with the given parameters.

- virtual ~blockprocessing polyphase resampling t ()
- void write (mha\_wave\_t &signal)

Write signal to the ringbuffer.

void read (mha\_wave\_t &signal)

Read resampled signal.

• bool can read () const

Checks if the resampling ring buffer can produce another output signal block.

#### **Private Attributes**

- polyphase\_resampling\_t \* resampling
- · unsigned fragsize in
- unsigned fragsize\_out
- unsigned num\_channels

## 5.175.1 Detailed Description

A class that does polyphase resampling and takes into account block processing.

#### 5.175.2 Constructor & Destructor Documentation

 $\textbf{5.175.2.1} \quad \textbf{MHAFilter::blockprocessing\_polyphase\_resampling\_t::blockprocessing\_polyphase\_} \\ \leftarrow \\ \text{resampling\_t} \ ($ 

float source\_srate, unsigned source\_fragsize, float target\_srate, unsigned target\_fragsize, float nyquist\_ratio, float irslen, unsigned nchannels, bool add\_delay)

Contructs a polyphase resampling filter that can be used for blockprocessing with the given parameters.

#### **Parameters**

source_srate	Source sampling rate / Hz
source_fragsize	Fragment size of incoming audio blocks / frames at source_srate
target_srate	Target sampling rate / Hz
target_fragsize	Fragment size of produced audio blocks / frames at target_srate
nyquist_ratio	Low pass filter cutoff frequency relative to the nyquist frequency of the smaller of the two sampling rates. Example values: 0.8, 0.9
irslen	Impulse response length used for low pass filtering / s
nchannels	Number of audio channels
add_delay	To avoid underruns, a delay is generally necessary for round trip block size adaptations. It is only necessary to add this delay to one of the two resampling chains. Set this parameter to true for the first resampling object of a round trip pair. It will add the necessary delay, and calculate the size of the ring buffer appropriately, When set to false, only the ringbuffer size will be set sufficiently.

```
5.175.2.2 virtual MHAFilter::blockprocessing_polyphase_resampling_t::~blockprocessing_polyphase ← _ resampling_t( ) [inline], [virtual]
```

## 5.175.3 Member Function Documentation

5.175.3.1 void MHAFilter::blockprocessing\_polyphase\_resampling\_t::write ( mha\_wave\_t & signal )

Write signal to the ringbuffer.

# 5.175 MHAFilter::blockprocessing\_polyphase\_resampling\_t Class Reference 485

#### **Parameters**

signal	input signal in original sampling rate
9.151.	

## **Exceptions**

<b>MHA_Error</b> (p. 413)	Raises exception if there is not enough room, if the number of
	channels does not match, or if the number of frames is not equal to
	the number specified in the constructor

5.175.3.2 void MHAFilter::blockprocessing\_polyphase\_resampling\_t::read ( mha\_wave\_t & signal )

Read resampled signal.

Will perform the resampling and remove no longer needed samples from the input buffer.

#### **Parameters**

signal	buffer to write the resampled signal to.
--------	--

## **Exceptions**

<b>MHA_Error</b> (p. 413)	Raises exception if there is not enough input signal, if the number of
	channels of frames does not match.

**5.175.3.3** bool MHAFilter::blockprocessing\_polyphase\_resampling\_t::can\_read( ) const [inline]

Checks if the resampling ring buffer can produce another output signal block.

- 5.175.4 Member Data Documentation
- 5.175.4.1 polyphase\_resampling\_t∗ MHAFilter::blockprocessing\_polyphase\_resampling\_t 
  ::resampling [private]
- **5.175.4.2** unsigned MHAFilter::blockprocessing\_polyphase\_resampling\_t::fragsize\_in [private]
- **5.175.4.3 unsigned MHAFilter::blockprocessing\_polyphase\_resampling\_t::fragsize\_out** [private]
- **5.175.4.4** unsigned MHAFilter::blockprocessing\_polyphase\_resampling\_t::num\_channels [private]

The documentation for this class was generated from the following files:

- mha filter.hh
- mha\_filter.cpp

# 5.176 MHAFilter::complex\_bandpass\_t Class Reference

Complex bandpass filter.

#### **Public Member Functions**

complex\_bandpass\_t (std::vector< mha\_complex\_t > A, std::vector< mha\_←
 complex\_t > B)

Constructor with filter coefficients (one per channel)

- void set\_state (mha\_real\_t val)
- void set state (std::vector< mha real t > val)
- void set\_state (mha\_complex\_t val)
- void set\_weights (std::vector< mha\_complex\_t > new\_B)

Allow to modify the input weights at a later stage.

- std::vector< mha\_complex\_t > get\_weights () const
- void filter (const mha\_wave\_t &X, mha\_spec\_t &Y)

Filter method for real value input.

void filter (const mha\_wave\_t &X, mha\_wave\_t &Yre, mha\_wave\_t &Yim)

Filter method for real value input.

void filter (const mha\_spec\_t &X, mha\_spec\_t &Y)

Filter method for complex value input.

 void filter (const mha\_wave\_t &Xre, const mha\_wave\_t &Xim, mha\_wave\_t &Yre, mha\_wave\_t &Yim)

Filter method for complex value input.

• std::string inspect () const

#### Static Public Member Functions

- static std::vector< mha\_complex\_t > creator\_A (std::vector< mha\_real\_t > cf, std←
   ::vector< mha\_real\_t > bw, mha\_real\_t srate, unsigned int order)
- static std::vector< mha\_complex\_t > creator\_B (std::vector< mha\_complex\_t > A, unsigned int order)

## **Private Attributes**

- std::vector< mha\_complex\_t > A\_
- std::vector< mha\_complex\_t > B\_
- std::vector< mha complex t > Yn

#### 5.176.1 Detailed Description

Complex bandpass filter.

```
5.176.2 Constructor & Destructor Documentation
```

Constructor with filter coefficients (one per channel)

#### **Parameters**

```
A complex filter coefficients, one per bandB complex weights
```

```
5.176.3 Member Function Documentation
```

```
5.176.3.3 void MHAFilter::complex_bandpass_t::set_state ( mha_real_t val )
```

```
5.176.3.4 void MHAFilter::complex_bandpass_t::set_state ( std::vector< mha_real_t > val )
```

```
5.176.3.5 void MHAFilter::complex_bandpass_t::set_state ( mha_complex_t val )
```

Allow to modify the input weights at a later stage.

```
5.176.3.7 std::vector<mha_complex_t> MHAFilter::complex_bandpass_t::get_weights ( ) const [inline]
```

Filter method for real value input.

Filter method for real value input.

Filter method for complex value input.

Filter method for complex value input.

```
5.176.3.12 std::string MHAFilter::complex_bandpass_t::inspect( ) const [inline]
```

5.176.4 Member Data Documentation

```
5.176.4.1 std::vector<mha_complex_t> MHAFilter::complex_bandpass_t::A_ [private]
```

**5.176.4.2** std::vector<mha\_complex\_t> MHAFilter::complex\_bandpass\_t::B\_ [private]

5.176.4.3 std::vector<mha complex t> MHAFilter::complex\_bandpass\_t::Yn [private]


The documentation for this class was generated from the following files:

- complex\_filter.h
- complex\_filter.cpp

## 5.177 MHAFilter::diff\_t Class Reference

Differentiator class (non-normalized)

Inheritance diagram for MHAFilter::diff\_t:

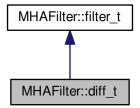

**Public Member Functions** 

diff\_t (unsigned int ch)

**Additional Inherited Members** 

5.177.1 Detailed Description

Differentiator class (non-normalized)

5.177.2 Constructor & Destructor Documentation


The documentation for this class was generated from the following files:

- mha\_filter.hh
- mha\_filter.cpp

5.178 MHAFilter::fftfilter\_t Class Reference

FFT based FIR filter implementation.

Inheritance diagram for MHAFilter::fftfilter\_t:

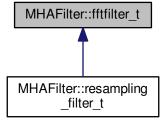

#### **Public Member Functions**

- fftfilter\_t (unsigned int fragsize, unsigned int channels, unsigned int fftlen)
   Constructor.
- ∼fftfilter t ()
- void update\_coeffs (const mha\_wave\_t \*pwIRS)

Update the set of coefficients.

void filter (const mha\_wave\_t \*pwln, mha\_wave\_t \*\*ppwOut, const mha\_wave\_t \*pw← IRS)

Apply filter with changing coefficients to a waveform fragment.

void filter (const mha\_wave\_t \*pwln, mha\_wave\_t \*\*ppwOut)

Apply filter to waveform fragment, without changing the coefficients.

void filter (const mha\_wave\_t \*pwln, mha\_wave\_t \*\*ppwOut, const mha\_spec\_t \*ps
 Weights)

Apply filter with changing coefficients to a waveform fragment.

#### **Private Attributes**

- unsigned int fragsize
- unsigned int channels
- unsigned int fftlen
- MHASignal::waveform\_t wInput\_fft
- mha\_wave\_t wInput
- MHASignal::waveform t wOutput fft
- · mha wave twOutput
- MHASignal::spectrum\_t sInput
- MHASignal::spectrum t sWeights
- MHASignal::waveform\_t wIRS\_fft
- mha\_fft\_t fft

### 5.178.1 Detailed Description

FFT based FIR filter implementation.

The maximal number of coefficients can be FFT length - fragsize + 1.

# 5.178.2 Constructor & Destructor Documentation

### Constructor.

### **Parameters**

fragsize	Number of frames expected in input signal (each cycle).
channels	Number of channels expected in input signal.
fftlen	FFT length of filter.

```
5.178.2.2 MHAFilter::fftfilter_t::~fftfilter_t ( )
```

### 5.178.3 Member Function Documentation

Update the set of coefficients.

#### **Parameters**

#### Note

The number of channels in h must match the number of channels given in the constructor. The filter length is limited to fftlen-fragsize+1 (longer IRS will be shortened).

Apply filter with changing coefficients to a waveform fragment.

#### **Parameters**

pw⊷	Input signal pointer.
In	

#### Return values

ſ	ppwQut	Pointer to output signal pointer, will be set to a valid signal.
- 1	P	i contente de compart organar por tron, tron de contre a tamb organar

### **Parameters**

pwIRS	Pointer to FIR coefficients structure.
-------	--

Apply filter to waveform fragment, without changing the coefficients.

#### **Parameters**

```
pw lnput signal pointer.

In
```

#### **Return values**

```
ppwOut Pointer to output signal pointer, will be set to a valid signal
```

Apply filter with changing coefficients to a waveform fragment.

#### **Parameters**

ри⊷	Input signal pointer.
In	

### **Return values**

<b>-</b>
Pointer to output signal pointer, will be set to a valid signal.
Folhier to outout Signal Dointer, will be set to a valid Signal.
. on to to output digital pointer, this be cot to a raine digital

### **Parameters**

```
psWeights Pointer to filter weights structure.
```

# 5.178.4 Member Data Documentation

```
5.178.4.1 unsigned int MHAFilter::fftfilter_t::fragsize [private]
```

**5.178.4.2** unsigned int MHAFilter::fftfilter\_t::channels [private]

**5.178.4.3 unsigned int MHAFilter::fftfilter\_t::fftlen** [private]

```
5.178.4.4 MHASignal::waveform_t MHAFilter::fftfilter_t::wlnput_fft [private]
5.178.4.5 mha_wave_t MHAFilter::fftfilter_t::wlnput [private]
5.178.4.6 MHASignal::waveform_t MHAFilter::fftfilter_t::wOutput_fft [private]
5.178.4.7 mha_wave_t MHAFilter::fftfilter_t::wOutput [private]
5.178.4.8 MHASignal::spectrum_t MHAFilter::fftfilter_t::slnput [private]
5.178.4.9 MHASignal::spectrum_t MHAFilter::fftfilter_t::sWeights [private]
5.178.4.10 MHASignal::waveform_t MHAFilter::fftfilter_t::wIRS_fft [private]
5.178.4.11 mha_fft_t MHAFilter::fftfilter_t::fft [private]
```


The documentation for this class was generated from the following files:

- mha\_filter.hh
- mha\_filter.cpp

# 5.179 MHAFilter::fftfilterbank\_t Class Reference

FFT based FIR filterbank implementation.

Inheritance diagram for MHAFilter::fftfilterbank\_t:

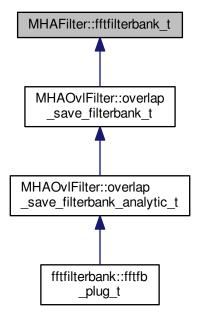

### **Public Member Functions**

• fftfilterbank\_t (unsigned int fragsize, unsigned int inputchannels, unsigned int firchannels, unsigned int fftlen)

Constructor.

- ∼fftfilterbank\_t ()
- void update\_coeffs (const mha\_wave\_t \*h)

Update the set of coefficients.

void filter (const mha\_wave\_t \*s\_in, mha\_wave\_t \*\*s\_out, const mha\_wave\_t \*h)
 Apply filter with changing coefficients to a waveform fragment.

void filter (const mha wave t \*s in, mha wave t \*s out)

Apply filter to waveform fragment, without changing the coefficients.

const mha\_wave\_t \* get\_irs () const

Return the current IRS.

#### **Private Attributes**

- · unsigned int fragsize
- unsigned int inputchannels
- · unsigned int firchannels
- unsigned int outputchannels
- · unsigned int fftlen
- MHASignal::waveform\_t hw
- MHASignal::spectrum t Hs
- MHASignal::waveform\_t xw
- MHASignal::spectrum\_t Xs
- MHASignal::waveform\_t yw
- MHASignal::spectrum t Ys
- MHASignal::waveform t yw temp
- MHASignal::waveform t tail
- · mha fft t fft

#### 5.179.1 Detailed Description

FFT based FIR filterbank implementation.

This class convolves n input channels with m filter coefficient sets and returns n\*m output channels.

The maximal number of coefficients can be FFT length - fragsize + 1.

# 5.179.2 Constructor & Destructor Documentation

Constructor.

### **Parameters**

fragsize	Number of frames expected in input signal (each cycle).
inputchannels	Number of channels expected in input signal.
firchannels	Number of channels expected in FIR filter coefficients (= number of bands).
fftlen	FFT length of filter.

The number of output channels is inputchannels\*firchannels.

```
5.179.2.2 MHAFilter::fftfilterbank_t::~fftfilterbank_t()
```

5.179.3 Member Function Documentation

Update the set of coefficients.

#### **Parameters**

h Coefficients structure
--------------------------

#### Note

The number of channels in h must match the number of channels given in the constructor, and the number of frames can not be more than fftlen-fragsize+1.

Apply filter with changing coefficients to a waveform fragment.

### **Parameters**

<i>S</i> ⊷	Input signal pointer.
in	

# **Return values**

pinter to output signal pointer, will be set to a valid signal
--

#### **Parameters**

```
h FIR coefficients
```

```
5.179.3.3 void MHAFilter::fftfilterbank_t::filter (

const mha_wave_t * s_in,

mha wave t ** s out )
```

Apply filter to waveform fragment, without changing the coefficients.

#### **Parameters**

<i>S</i> ⊷	Input signal pointer.
_in	

#### **Return values**

s_out	Pointer to output signal pointer, will be set to a valid signal
-------	---

5.179.3.4 const mha\_wave\_t\* MHAFilter::fftfilterbank\_t::get\_irs() const [inline]

Return the current IRS.

5.179.4 Member Data Documentation

```
5.179.4.1 unsigned int MHAFilter::fftfilterbank_t::fragsize [private]
```

**5.179.4.2 unsigned int MHAFilter::fftfilterbank\_t::inputchannels** [private]

**5.179.4.3** unsigned int MHAFilter::fftfilterbank\_t::firchannels [private]

**5.179.4.4** unsigned int MHAFilter::fftfilterbank\_t::outputchannels [private]

**5.179.4.5** unsigned int MHAFilter::fftfilterbank\_t::fftlen [private]

**5.179.4.6** MHASignal::waveform t MHAFilter::fftfilterbank\_t::hw [private]

**5.179.4.7 MHASignal::spectrum\_t** MHAFilter::fftfilterbank\_t::Hs [private]

**5.179.4.8** MHASignal::waveform t MHAFilter::fftfilterbank\_t::xw [private]

**5.179.4.9** MHASignal::spectrum\_t MHAFilter::fftfilterbank\_t::Xs [private]


- 5.179.4.10 MHASignal::waveform\_t MHAFilter::fftfilterbank\_t::yw [private]
  5.179.4.11 MHASignal::spectrum\_t MHAFilter::fftfilterbank\_t::Ys [private]
  5.179.4.12 MHASignal::waveform\_t MHAFilter::fftfilterbank\_t::yw\_temp [private]
  5.179.4.13 MHASignal::waveform\_t MHAFilter::fftfilterbank\_t::tail [private]
- **5.179.4.14 mha\_fft\_t** MHAFilter::fftfilterbank\_t::fft [private]

The documentation for this class was generated from the following files:

- · mha\_filter.hh
- · mha\_filter.cpp
- 5.180 MHAFilter::filter\_t Class Reference

Generic IIR filter class.

Inheritance diagram for MHAFilter::filter\_t:

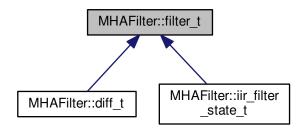

### **Public Member Functions**

- **filter\_t** (unsigned int ch, unsigned int lena, unsigned int lenb) *Constructor.*
- filter\_t (unsigned int ch, const std::vector< mha\_real\_t > &vA, const std::vector< mha
   —real\_t > &vB)

Constructor with initialization of coefficients.

- filter\_t (const MHAFilter::filter\_t &src)
- ∼filter t()
- void filter (mha\_wave\_t \*out, const mha\_wave\_t \*in)

Filter all channels in a waveform structure.

void filter (mha\_real\_t \*dest, const mha\_real\_t \*src, unsigned int dframes, unsigned int frame\_dist, unsigned int channel\_dist, unsigned int channel\_begin, unsigned int channel end)

Filter parts of a waveform structure.

mha\_real\_t filter (mha\_real\_t x, unsigned int ch)

Filter one sample.

• unsigned int get\_len\_A () const

Return length of recursive coefficients.

• unsigned int get\_len\_B () const

Return length of non-recursive coefficients.

### **Public Attributes**

double \* A

Pointer to recursive coefficients.

• double \* B

Pointer to non-recursive coefficients.

#### **Private Attributes**

- unsigned int len\_A
- · unsigned int len B
- unsigned int len
- unsigned int channels
- double \* state

### 5.180.1 Detailed Description

Generic IIR filter class.

This class implements a generic multichannel IIR filter. It is realized as direct form II. It can work on any float array or on **mha\_wave\_t** (p. 462) structs. The filter coefficients can be directly accessed.

**Todo** Implement a more robust filter form.

5.180.2 Constructor & Destructor Documentation

#### Constructor.

# **Parameters**

ch Number of channels	
lena	Number of recursive coefficients
lenb	Number of non-recursive coefficients

Constructor with initialization of coefficients.

### **Parameters**

ch	Number of channels.
vΑ	Recursive coefficients.
νB	Non-recursive coefficients.

Filter all channels in a waveform structure.

### **Parameters**

out	Output signal
in	Input signal

Filter parts of a waveform structure.

#### **Parameters**

dest	Output signal.
src	Input signal.
dframes	Number of frames to be filtered.
frame_dist	Index distance between frames of one channel
channel_dist	Index distance between audio channels
channel_begin	Number of first channel to be processed
channel_end	Number of last channel to be processed

```
5.180.3.3 mha_real_t MHAFilter::filter(::filter(::filter_t::filter(::filter_t::filter), unsigned int ch )
```

Filter one sample.

### **Parameters**

Х	Input value	
ch	Channel number to use in filter state	

5.180.3.4 unsigned int MHAFilter::filter\_t::get\_len\_A ( ) const [inline]

Return length of recursive coefficients.

5.180.3.5 unsigned int MHAFilter::filter\_t::get\_len\_B ( ) const [inline]

Return length of non-recursive coefficients.

5.180.4 Member Data Documentation

5.180.4.1 double \* MHAFilter::filter\_t::A

Pointer to recursive coefficients.

```
5.180.4.2 double * MHAFilter::filter_t::B
```

Pointer to non-recursive coefficients.

```
5.180.4.3 unsigned int MHAFilter::filter_t::len_A [private]
5.180.4.4 unsigned int MHAFilter::filter_t::len_B [private]
5.180.4.5 unsigned int MHAFilter::filter_t::len [private]
```

**5.180.4.6 unsigned int MHAFilter::filter\_t::channels** [private]

```
5.180.4.7 double* MHAFilter::filter_t::state [private]
```

The documentation for this class was generated from the following files:

- · mha\_filter.hh
- · mha filter.cpp

# 5.181 MHAFilter::gamma\_flt\_t Class Reference

Class for gammatone filter.

**Public Member Functions** 

gamma\_flt\_t (std::vector < mha\_real\_t > cf, std::vector < mha\_real\_t > bw, mha\_real ←
 \_t srate, unsigned int order)

Constructor.

- ~gamma\_flt\_t ()
- void operator() (mha\_wave\_t &X, mha\_spec\_t &Y)

Filter method.

- void operator() (mha\_wave\_t &X, mha\_wave\_t &Yre, mha\_wave\_t &Yim) Filter method.
- void **operator()** (**mha\_wave\_t** &Yre, **mha\_wave\_t** &Yim, unsigned int stage) Filter method for specific stage.
- void phase\_correction (unsigned int desired\_delay, unsigned int inchannels)
- void set\_weights (std::vector< mha\_complex\_t > new\_B)
- void set weights (unsigned int stage, std::vector< mha complex t > new B)
- std::vector<  $mha\_complex\_t > get\_weights$  () const
- std::vector< **mha complex t** > **get weights** (unsigned int stage) const
- std::vector< mha\_real\_t > get\_resynthesis\_gain () const
- void reset\_state ()
- const std::vector< mha\_complex\_t > & get\_A ()
- std::string **inspect** () const

### **Private Attributes**

```
 std::vector< mha complex t > A
```

- $\bullet \ \, \text{std::vector} < \textbf{complex\_bandpass\_t} > \textbf{GF}$
- MHASignal::delay\_t \* delay
- std::vector< int > envelope\_delay
- std::vector< mha\_real\_t > resynthesis\_gain
- std::vector< mha real t > cf
- std::vector< mha\_real\_t > bw\_
- mha\_real\_t srate\_

# 5.181.1 Detailed Description

Class for gammatone filter.

#### 5.181.2 Constructor & Destructor Documentation

```
5.181.2.1 MHAFilter::gamma_flt_t::gamma_flt_t (  std::vector < mha\_real\_t > \textit{cf}, \\ std::vector < mha\_real\_t > \textit{bw}, \\ mha\_real\_t \; \textit{srate}, \\ unsigned int \; \textit{order} \; )
```

### Constructor.

### **Parameters**

cf	Center frequency in Hz.	
bw	Bandwidth in Hz (same number of entries as in cf).	
srate Sampling frequency in Hz.		
order	Filter order.	

```
5.181.2.2 MHAFilter::gamma_flt_t::~gamma_flt_t ( )
```

### 5.181.3 Member Function Documentation

Filter method.

```
5.181.3.2 void MHAFilter::gamma_flt_t::operator() (
                      mha_wave_t & X,
                      mha wave t & Yre,
                      mha_wave_t & Yim ) [inline]
Filter method.
5.181.3.3 void MHAFilter::gamma_flt_t::operator() (
                      mha wave t & Yre,
                      mha_wave_t & Yim,
                      unsigned int stage ) [inline]
Filter method for specific stage.
5.181.3.4 void MHAFilter::gamma_flt_t::phase_correction (
                      unsigned int desired_delay,
                      unsigned int inchannels )
5.181.3.5 void MHAFilter::gamma_flt_t::set_weights (
                      std::vector< mha_complex_t > new_B)
5.181.3.6 void MHAFilter::gamma_flt_t::set_weights (
                      unsigned int stage,
                      std::vector< mha complex t > new_B)
5.181.3.7 std::vector<mha complex t> MHAFilter::gamma flt t::get weights ( ) const
          [inline]
5.181.3.8 std::vector<mha complex t> MHAFilter::gamma_flt_t::get_weights (
                      unsigned int stage ) const [inline]
5.181.3.9 std::vector<mha_real_t> MHAFilter::gamma_flt_t::get_resynthesis_gain ( ) const
          [inline]
5.181.3.10 void MHAFilter::gamma_flt_t::reset_state ( )
5.181.3.11 const std::vector<mha_complex_t>& MHAFilter::gamma_flt_t::get_A( ) [inline]
5.181.3.12 std::string MHAFilter::gamma_flt_t::inspect ( ) const [inline]
5.181.4 Member Data Documentation
5.181.4.1 std::vector<mha_complex_t> MHAFilter::gamma_flt_t::A [private]
5.181.4.2 std::vector<complex_bandpass_t> MHAFilter::gamma_flt_t::GF [private]
```


```
5.181.4.3 MHASignal::delay_t* MHAFilter::gamma_flt_t::delay [private]
5.181.4.4 std::vector<int> MHAFilter::gamma_flt_t::envelope_delay [private]
5.181.4.5 std::vector<mha_real_t> MHAFilter::gamma_flt_t::resynthesis_gain [private]
5.181.4.6 std::vector<mha_real_t> MHAFilter::gamma_flt_t::cf_ [private]
5.181.4.7 std::vector<mha_real_t> MHAFilter::gamma_flt_t::bw_ [private]
5.181.4.8 mha_real_t MHAFilter::gamma_flt_t::srate_ [private]
```

The documentation for this class was generated from the following files:

- complex\_filter.h
- complex\_filter.cpp

5.182 MHAFilter::iir\_filter\_state\_t Class Reference

Inheritance diagram for MHAFilter::iir\_filter\_state\_t:

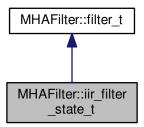

# **Public Member Functions**

iir\_filter\_state\_t (unsigned int channels, std::vector< float > cf\_A, std::vector< float > cf\_B)

**Additional Inherited Members** 

#### 5.182.1 Constructor & Destructor Documentation

```
5.182.1.1 MHAFilter::iir_filter_state_t::iir_filter_state_t ( unsigned int channels, std::vector< float > cf_A, std::vector< float > cf_B )
```


The documentation for this class was generated from the following files:

- mha\_filter.hh
- · mha\_filter.cpp

# 5.183 MHAFilter::iir filter t Class Reference

IIR filter class wrapper for integration into parser structure.

Inheritance diagram for MHAFilter::iir\_filter\_t:

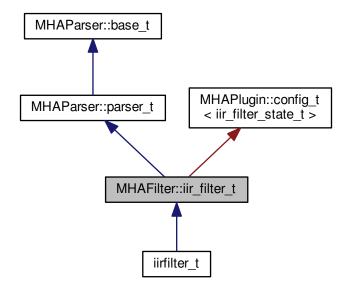

#### **Public Member Functions**

iir\_filter\_t (std::string help="IIR filter structure", std::string def\_A="[1]", std::string def — B="[1]", unsigned int channels=1)

Constructor of the IIR filter.

void filter (mha\_wave\_t \*y, const mha\_wave\_t \*x)

The filter processes the audio signal.

• mha\_real\_t filter (mha\_real\_t x, unsigned int ch)

Filter a single audio sample.

void resize (unsigned int channels)

Change the number of channels after object creation.

#### **Private Member Functions**

void update\_filter ()

#### **Private Attributes**

- MHAParser::vfloat\_t A
- MHAParser::vfloat\_t B
- MHAEvents::patchbay t< iir filter t > connector
- unsigned int nchannels

#### **Additional Inherited Members**

#### 5.183.1 Detailed Description

IIR filter class wrapper for integration into parser structure.

This class implements an infinite impulse response filter. Since it inherits from **MHAParser**← ::parser\_t (p. 651), it can easily be integrated in the openMHA configuration tree. It provides the configuration language variables "A" (vector of recursive filter coefficients) and "B" (vector of non-recursive filter coefficients).

The filter instance reacts to changes in filter coefficients through the openMHA configuration language, and uses the updated coefficients in the next invocation of the filter method.

Update of the coefficients is thread-safe and non-blocking. Simply add this subparser to your parser items and use the "filter" member function. Filter states are reset to all 0 on update.

#### 5.183.2 Constructor & Destructor Documentation

```
5.183.2.1 MHAFilter::iir_filter_t:(

std::string help = "IIR filter structure",

std::string def_A = "[1]",

std::string def_B = "[1]",

unsigned int channels = 1)
```

Constructor of the IIR filter.

Initialises the sub-parser structure and the memory for holding the filter's state.

# **Parameters**

help	The help string for the parser that groups the configuration variables of this filter.  Could be used to describe the purpose of this IIR filter.
def_A	The initial value of the vector of the recursive filter coefficients, represented as string.
def_B	The initial value of the vector of the non-recursive filter coefficients, represented as string.
channels	The number of indipendent audio channels to process with this filter. Needed to allocate a state vector for each audio channel.

### 5.183.3 Member Function Documentation

The filter processes the audio signal.

All channels in the audio signal are processed using the same filter coefficients. Indipendent state is stored between calls for each audio channel.

# **Parameters**

У	Pointer to output signal holder. The output signal is stored here. Has to have the same signal dimensions as the input signal x. In-place processing (y and x pointing to the same signal holder) is possible.
λ	Pointer to input signal holder. Number of channels has to be the same as given to the constructor, or to the <b>resize</b> (p. 508) method.

Filter a single audio sample.

# **Parameters**

X	The single audio sample	
ch	Zero-based channel index. Use and change the state of channel ch. ch has to be less	
	than the number of channels given to the constructor or the <b>resize</b> (p. 508) method.	

### Returns

the filtered result sample.

```
5.183.3.3 void MHAFilter::iir_filter_t::resize ( unsigned int channels )
```

Change the number of channels after object creation.

### **Parameters**

```
5.183.3.4 void MHAFilter::iir_filter_t::update_filter( ) [private]
```

5.183.4 Member Data Documentation

```
5.183.4.1 MHAParser::vfloat_t MHAFilter::iir_filter_t::A [private]
```

```
5.183.4.2 MHAParser::vfloat_t MHAFilter::iir_filter_t::B [private]
```

```
5.183.4.3 MHAEvents::patchbay_t<iir_filter_t> MHAFilter::iir_filter_t::connector [private]
```

**5.183.4.4 unsigned int MHAFilter::iir\_filter\_t::nchannels** [private]

The documentation for this class was generated from the following files:

- mha\_filter.hh
- · mha\_filter.cpp

5.184 MHAFilter::iir\_ord1\_real\_t Class Reference

First order recursive filter.

#### **Public Member Functions**

- iir\_ord1\_real\_t (std::vector< mha\_real\_t > A, std::vector< mha\_real\_t > B)
   Constructor with filter coefficients (one per channel)
- iir\_ord1\_real\_t (std::vector< mha\_real\_t > tau, mha\_real\_t srate)

Constructor for low pass filter (one time constant per channel)

- void set\_state (mha\_real\_t val)
- void set\_state (std::vector< mha\_real\_t > val)
- void set\_state (mha\_complex\_t val)
- mha\_real\_t operator() (unsigned int ch, mha\_real\_t x)

Filter method for real value input, one element.

mha\_complex\_t operator() (unsigned int ch, mha\_complex\_t x)

Filter method for complex input, one element.

void operator() (const mha\_wave\_t &X, mha\_wave\_t &Y)

Filter method for real value input.

void operator() (const mha\_spec\_t &X, mha\_spec\_t &Y)

Filter method for complex value input.

 void operator() (const mha\_wave\_t &Xre, const mha\_wave\_t &Xim, mha\_wave\_t &Yre, mha\_wave\_t &Yim)

Filter method for complex value input.

#### **Private Attributes**

- std::vector< mha real t > A
- std::vector< mha\_real\_t > B\_
- std::vector< mha\_complex\_t > Yn

### 5.184.1 Detailed Description

First order recursive filter.

### 5.184.2 Constructor & Destructor Documentation

Constructor with filter coefficients (one per channel)

Constructor for low pass filter (one time constant per channel)

```
5.184.3 Member Function Documentation
5.184.3.1 void MHAFilter::iir_ord1_real_t::set_state (
                      mha_real_t val )
5.184.3.2 void MHAFilter::iir_ord1_real_t::set_state (
                      std::vector< mha real t > val )
5.184.3.3 void MHAFilter::iir_ord1_real_t::set_state (
                      mha_complex_t val )
5.184.3.4 mha_real_t MHAFilter::iir_ord1_real_t::operator() (
                      unsigned int ch,
                      mha_real_t x ) [inline]
Filter method for real value input, one element.
5.184.3.5 mha_complex_t MHAFilter::iir_ord1_real_t::operator() (
                      unsigned int ch,
                      mha_complex_t x ) [inline]
Filter method for complex input, one element.
5.184.3.6 void MHAFilter::iir_ord1_real_t::operator() (
                      const mha wave t & X,
                      mha wave t&Y) [inline]
Filter method for real value input.
5.184.3.7 void MHAFilter::iir ord1 real t::operator() (
                      const mha spec t & X,
                      mha_spec_t & Y ) [inline]
Filter method for complex value input.
5.184.3.8 void MHAFilter::iir_ord1_real_t::operator() (
                      const mha wave t & Xre,
                      const mha_wave_t & Xim,
                      mha wave t & Yre,
                      mha_wave_t & Yim ) [inline]
```

Filter method for complex value input.

5.184.4 Member Data Documentation

**5.184.4.1** std::vector<mha\_real\_t> MHAFilter::iir\_ord1\_real\_t::A\_ [private]

**5.184.4.2** std::vector<mha\_real\_t> MHAFilter::iir\_ord1\_real\_t::B\_ [private]

**5.184.4.3** std::vector<mha\_complex\_t> MHAFilter::iir\_ord1\_real\_t::Yn [private]


The documentation for this class was generated from the following files:

- mha\_filter.hh
- · mha\_filter.cpp

5.185 MHAFilter::o1\_ar\_filter\_t Class Reference

First order attack-release lowpass filter.

Inheritance diagram for MHAFilter::o1\_ar\_filter\_t:

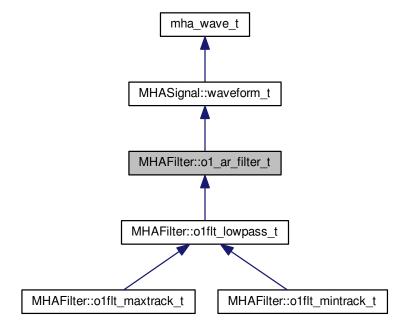

#### **Public Member Functions**

• o1\_ar\_filter\_t (unsigned int channels, mha\_real\_t fs=1.0f, std::vector< mha\_real\_t > tau\_a=std::vector< float >(1, 0.0f), std::vector< mha\_real\_t > tau\_r=std::vector< float >(1, 0.0f))

Constructor, setting all taus to zero.

• void **set tau attack** (unsigned int ch, **mha real t** tau)

Set the attack time constant.

void set\_tau\_release (unsigned int ch, mha\_real\_t tau)

Set the release time constant.

mha\_real\_t operator() (unsigned int ch, mha\_real\_t x)

Apply filter to value x, using state channel ch.

void operator() (const mha\_wave\_t &in, mha\_wave\_t &out)

Apply filter to a **mha\_wave\_t** (p. 462) data.

#### **Protected Attributes**

```
• MHASignal::waveform t c1 a
```

- MHASignal::waveform\_t c2\_a
- MHASignal::waveform\_t c1\_r
- MHASignal::waveform\_t c2\_r
- mha real t fs

### **Additional Inherited Members**

### 5.185.1 Detailed Description

First order attack-release lowpass filter.

This filter is the base of first order lowpass filter, maximum tracker and minimum tracker.

### 5.185.2 Constructor & Destructor Documentation

Constructor, setting all taus to zero.

The filter state can be accessed through the member functions of **MHASignal::waveform\_t** (p. 774).

# **Parameters**

channels	Number of independent filters
fs	Sampling rate (optional, default = 1)
tau_a	Attack time constants (optional, default = 0)
tau_r	Release time constants (optional, default = 0)

# 5.185.3 Member Function Documentation

Set the attack time constant.

### **Parameters**

ch	Channel number
tau	Time constant

Set the release time constant.

### **Parameters**

ch	Channel number
tau	Time constant

Apply filter to value x, using state channel ch.

# **Parameters**

ch	Cannel number
Χ	Input value

### Returns

Output value

Apply filter to a **mha\_wave\_t** (p. 462) data.

#### **Parameters**

in	Input signal
out	Output signal

The number of channels must match the number of filter bands.

5.185.4 Member Data Documentation

```
5.185.4.1 MHASignal::waveform_t MHAFilter::o1_ar_filter_t::c1_a [protected]
```

5.185.4.2 MHASignal::waveform t MHAFilter::o1\_ar\_filter\_t::c2\_a [protected]

**5.185.4.3** MHASignal::waveform\_t MHAFilter::o1\_ar\_filter\_t::c1\_r [protected]

**5.185.4.4** MHASignal::waveform\_t MHAFilter::o1\_ar\_filter\_t::c2\_r [protected]

**5.185.4.5 mha\_real\_t** MHAFilter::o1\_ar\_filter\_t::fs [protected]


The documentation for this class was generated from the following files:

- mha\_filter.hh
- mha\_filter.cpp

5.186 MHAFilter::o1flt\_lowpass\_t Class Reference

First order low pass filter.

Inheritance diagram for MHAFilter::o1flt\_lowpass\_t:

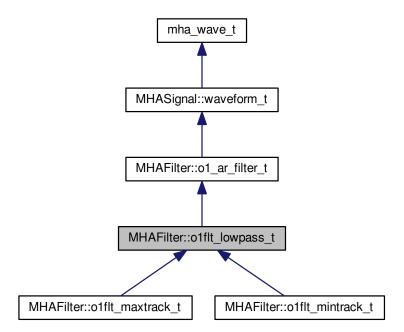

### **Public Member Functions**

- o1flt\_lowpass\_t (const std::vector< mha\_real\_t > &, mha\_real\_t, mha\_real\_t=0)
   Constructor of low pass filter, sets sampling rate and time constants.
- void set\_tau (unsigned int ch, mha\_real\_t tau)
   change the time constant in one channel
- void set\_tau (mha\_real\_t tau)
   set time constant in all channels to tau
- mha\_real\_t get\_c1 (unsigned int ch) const
- mha\_real\_t get\_last\_output (unsigned int ch) const

### **Additional Inherited Members**

# 5.186.1 Detailed Description

First order low pass filter.

### 5.186.2 Constructor & Destructor Documentation

Constructor of low pass filter, sets sampling rate and time constants.

### **Parameters**

tau	Vector of time constants
fs	Sampling rate
startval	Initial internal state value

### 5.186.3 Member Function Documentation

change the time constant in one channel

```
5.186.3.2 void MHAFilter::o1flt_lowpass_t::set_tau ( mha_real_t tau )
```

set time constant in all channels to tau


The documentation for this class was generated from the following files:

- · mha filter.hh
- · mha\_filter.cpp

# 5.187 MHAFilter::o1flt\_maxtrack\_t Class Reference

First order maximum tracker.

Inheritance diagram for MHAFilter::o1flt\_maxtrack\_t:

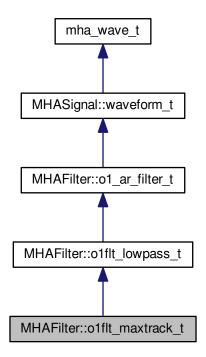

### **Public Member Functions**

- o1flt\_maxtrack\_t (const std::vector< mha\_real\_t > &, mha\_real\_t, mha\_real\_t=0)

  Constructor of low pass filter, sets sampling rate and time constants.
- void set\_tau (unsigned int ch, mha\_real\_t tau)
   change the time constant in one channel
- void set\_tau (mha\_real\_t tau)
   set time constant in all channels to tau

**Additional Inherited Members** 

# 5.187.1 Detailed Description

First order maximum tracker.

### 5.187.2 Constructor & Destructor Documentation

Constructor of low pass filter, sets sampling rate and time constants.

### **Parameters**

tau	Vector of time constants
fs	Sampling rate
startval	Initial internal state value

#### 5.187.3 Member Function Documentation

```
5.187.3.1 void MHAFilter::o1flt_maxtrack_t::set_tau (
unsigned int ch,
mha real t tau )
```

change the time constant in one channel

```
5.187.3.2 void MHAFilter::o1flt_maxtrack_t::set_tau ( mha real t tau )
```

set time constant in all channels to tau


The documentation for this class was generated from the following files:

- mha\_filter.hh
- mha\_filter.cpp

# 5.188 MHAFilter::o1flt\_mintrack\_t Class Reference

First order minimum tracker.

Inheritance diagram for MHAFilter::o1flt\_mintrack\_t:

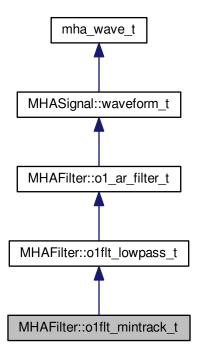

#### **Public Member Functions**

- o1flt\_mintrack\_t (const std::vector< mha\_real\_t > &, mha\_real\_t, mha\_real\_t=0)
- void set\_tau (unsigned int ch, mha\_real\_t tau)
   change the time constant in one channel
- void set\_tau (mha\_real\_t tau)
   set time constant in all channels to tau

**Additional Inherited Members** 

5.188.1 Detailed Description

First order minimum tracker.

```
5.188.2 Constructor & Destructor Documentation
```

5.188.3 Member Function Documentation

change the time constant in one channel

```
5.188.3.2 void MHAFilter::o1flt_mintrack_t::set_tau ( mha_real_t tau )
```

set time constant in all channels to tau

The documentation for this class was generated from the following files:

- · mha filter.hh
- mha\_filter.cpp
- 5.189 MHAFilter::partitioned\_convolution\_t Class Reference

A filter class for partitioned convolution.

**Classes** 

struct index\_t

Bookkeeping class.

**Public Member Functions** 

• partitioned\_convolution\_t (unsigned int fragsize, unsigned int nchannels\_in, unsigned int nchannels out, const transfer matrix t &transfer)

Create a new partitioned convolver.

~partitioned\_convolution\_t ()

Free fftw resource allocated in constructor.

mha\_wave\_t \* process (const mha\_wave\_t \*s\_in)processing

#### **Public Attributes**

· unsigned int fragsize

Audio fragment size, always equal to partition size.

• unsigned int nchannels\_in

Number of audio input channels.

unsigned int nchannels\_out

Number of audio output channels.

unsigned int output partitions

The maximum number of partitions in any of the impulse responses.

unsigned int filter\_partitions

The total number of non-zero impulse response partitions.

MHASignal::waveform\_t input\_signal\_wave

Buffer for input signal.

unsigned int current\_input\_signal\_buffer\_half\_index

A counter modulo 2.

MHASignal::spectrum\_t input\_signal\_spec

Buffer for FFT transformed input signal.

MHASignal::spectrum\_t frequency\_response

Buffers for frequency response spectra of impulse response partitions.

std::vector< index\_t > bookkeeping

Keeps track of input channels, output channels, impulse response partition, and delay.

std::vector< MHASignal::spectrum\_t > output\_signal\_spec

Buffers for FFT transformed output signal.

unsigned int current\_output\_partition\_index

A counter modulo output\_partitions, indexing the "current" output partition.

MHASignal::waveform t output signal wave

Buffer for the wave output signal.

· mha fft t fft

The FFT transformer.

### 5.189.1 Detailed Description

A filter class for partitioned convolution.

Impulse responses are partitioned into sections of fragment size. Audio signal is convolved with every partition and delayed as needed. Convolution is done according to overlap-save. FFT length used is 2 times fragment size.

5.189.2 Constructor & Destructor Documentation

5.189.2.1 MHAFilter::partitioned\_convolution\_t::partitioned\_convolution\_t (

unsigned int fragsize, unsigned int nchannels\_in, unsigned int nchannels\_out,

const transfer matrix t & transfer )

Create a new partitioned convolver.

# **Parameters**

fragsize	Audio fragment size, equal to partition size.
nchannels_in	Number of input audio channels.
nchannels_out	Number of output audio channels.
transfer	A sparse matrix of impulse responses.

5.189.2.2 MHAFilter::partitioned\_convolution\_t::~partitioned\_convolution\_t ( )

Free fftw resource allocated in constructor.

5.189.3 Member Function Documentation

processing

5.189.4 Member Data Documentation

5.189.4.1 unsigned int MHAFilter::partitioned convolution t::fragsize

Audio fragment size, always equal to partition size.

5.189.4.2 unsigned int MHAFilter::partitioned\_convolution\_t::nchannels\_in

Number of audio input channels.

5.189.4.3 unsigned int MHAFilter::partitioned convolution t::nchannels out

Number of audio output channels.

5.189.4.4 unsigned int MHAFilter::partitioned\_convolution\_t::output\_partitions

The maximum number of partitions in any of the impulse responses.

Determines the size if the delay line.

5.189.4.5 unsigned int MHAFilter::partitioned\_convolution\_t::filter\_partitions

The total number of non-zero impulse response partitions.

5.189.4.6 MHASignal::waveform\_t MHAFilter::partitioned\_convolution\_t::input\_signal\_wave

Buffer for input signal.

Has nchannels\_in channels and fragsize\*2 frames

5.189.4.7 unsigned int MHAFilter::partitioned\_convolution\_t::current\_input\_signal\_buffer\_half\_index

A counter modulo 2.

Indicates the buffer half in input signal wave into which to copy the current input signal.

5.189.4.8 MHASignal::spectrum\_t MHAFilter::partitioned\_convolution\_t::input\_signal\_spec

Buffer for FFT transformed input signal.

Has nchannels\_in channels and fragsize+1 frames (fft bins).

5.189.4.9 MHASignal::spectrum\_t MHAFilter::partitioned\_convolution\_t::frequency\_response

Buffers for frequency response spectra of impulse response partitions.

Each "channel" contains another partition of some impulse response. The bookkeeping array is used to keep track what to do with these frequency responses. This container has filter\_ partitions channels and fragsize+1 frames (fft bins).

5.189.4.10 std::vector<index t> MHAFilter::partitioned convolution t::bookkeeping

Keeps track of input channels, output channels, impulse response partition, and delay.

The index into this array is the same as the "channel" index into the frequency\_response array. Array has filter\_partitions entries.

5.189.4.11 std::vector<MHASignal::spectrum\_t> MHAFilter::partitioned\_convolution\_t::output\_← signal\_spec

Buffers for FFT transformed output signal.

For each array member, Number of channels is equal to nchannels\_out, number of frames (fft bins) is equal to fragsize+1. Array size is equal to output partitions.

5.189.4.12 unsigned int MHAFilter::partitioned\_convolution\_t::current\_output\_partition\_index

A counter modulo output\_partitions, indexing the "current" output partition.

5.189.4.13 MHASignal::waveform\_t MHAFilter::partitioned\_convolution\_t::output\_signal\_wave

Buffer for the wave output signal.

Number of channels is equal to nchannels\_out, number of frames is equal to fragsize

5.189.4.14 mha fft t MHAFilter::partitioned\_convolution\_t::fft

The FFT transformer.

The documentation for this class was generated from the following files:

- · mha filter.hh
- · mha filter.cpp

# 5.190 MHAFilter::partitioned\_convolution\_t::index\_t Struct Reference

Bookkeeping class.

**Public Member Functions** 

- index\_t (unsigned int src, unsigned int tgt, unsigned int dly)
   Data constructor.
- index t()

Default constructor for STL compatibility.

### **Public Attributes**

unsigned int source\_channel\_index

The input channel index to apply the current partition to.

unsigned int target\_channel\_index

The index of the output channel to which the filter result should go.

unsigned int delay

The delay (in blocks) of this partition.

### 5.190.1 Detailed Description

Bookkeeping class.

For each impulse response partition, keeps track of which input to filter, which output channel to filter to, and the delay in blocks. Objects of class Index should be kept in an array with the same indices as the corresponding inpulse response partitions.

# 5.190.2 Constructor & Destructor Documentation

Data constructor.

### **Parameters**

src	The input channel index to apply the current partition to.	
tgt	The index of the output channel to which the filter result should go.	
dly	The delay (in blocks) of this partition	

**5.190.2.2** MHAFilter::partitioned\_convolution\_t::index\_t::index\_t() [inline]

Default constructor for STL compatibility.

5.190.3 Member Data Documentation

5.190.3.1 unsigned int MHAFilter::partitioned\_convolution\_t::index\_t::source\_channel\_index

The input channel index to apply the current partition to.

5.190.3.2 unsigned int MHAFilter::partitioned\_convolution\_t::index\_t::target\_channel\_index

The index of the output channel to which the filter result should go.

5.190.3.3 unsigned int MHAFilter::partitioned\_convolution\_t::index\_t::delay

The delay (in blocks) of this partition.

The documentation for this struct was generated from the following file:

· mha filter.hh

5.191 MHAFilter::polyphase\_resampling\_t Class Reference

A class that performs polyphase resampling.

**Public Member Functions** 

- polyphase\_resampling\_t (unsigned n\_up, unsigned n\_down, mha\_real\_t nyquist\_ratio, unsigned n\_irs, unsigned n\_ringbuffer, unsigned n\_channels, unsigned n\_prefill)

  Construct a polyphase resampler instance.
- void write (mha\_wave\_t &signal)

Write signal to the ringbuffer.

void read (mha\_wave\_t &signal)

Read resampled signal.

unsigned readable\_frames () const

Number of frames at target sampling rate that can be produced.

#### **Private Attributes**

unsigned upsampling factor

Integer upsampling factor.

unsigned downsampling\_factor

Integer downsampling factor.

unsigned now index

Index of "now" in the interpolated sampling rate.

bool underflow

Set to true when an underflow has occurred.

MHAWindow::hanning\_t impulse\_response

Contains the impulse response of the lowpass filter needed for anti-aliasing.

MHASignal::ringbuffer\_t ringbuffer

Storage of input signal.

## 5.191.1 Detailed Description

A class that performs polyphase resampling.

Background information: When resampling from one sampling rate to another, it helps when one sampling rate is a multiple of the other sampling rate: In the case of upsampling, the samples at the original rate are copied to the upsampled signal spread out with a constant number of zero samples between the originally adjacent samples. The signal is then low-pass filtered to avoid frequency aliasing and to fill the zero-samples with interpolated values. In the case of down-sampling, the signal is first low-pass filtered for anti-aliasing, and only every n<sup>th</sup> sample of the filtered output is used for the signal at the new sample rate. Of course, for finite-impulse-response (FIR) filters this means that only every n<sup>th</sup> sample needs to be computed.

When resampling from one sampling rate to another where neither is a multiple of the other, the signal first needs to be upsampled to a sampling rate that is a multiple of both (source and target) sampling rates, and then downsampled again to the target sampling rate. Instead of applying two separate lowpass filters directly after each other (one filter for upsampling and another for downsampling), it is sufficient to apply only one low-pass filter, when producing the output at the final target rate, with a cut-off frequency equal to the lower cut-off-frequency of the replaced two low-pass filters. Not filtering to produce a filtered signal already at the common multiple sampling rate has the side effect that this intermediate signal at the common multiple sampling rate keeps its filler zero samples unaltered. These zero samples can be taken advantage of when filtering to produce the output at the target rate: The zeros do not need to be multiplied with their corresponding filter coefficients, because the result is known to be zero again, and this zero product has no effect on the summation operation to compute a target sample at the target rate. To summarize, the following optimization techniques are available:

- The signal does not need to be stored in memory at the interpolation rate. It is sufficient to have the signal available at the source rate and to know where the zeros would be.
- The signal needs to be low-pass-filtered only once.
- The FIR low-pass filtering can take advantage of

- computing only filter outputs for the required samples at the target rate,
- skipping over zero-samples at the interpolation rate.

The procedure that takes advantage of these optimization possibilities is known as polyphase resampling.

This class implements polyphase resampling in this way for a source sampling rate and a target sampling rate that have common multiple, the interpolation sampling rate. Non-rational and drifting sample rates are outside the scope of this resampler.

#### 5.191.2 Constructor & Destructor Documentation

Construct a polyphase resampler instance.

Allocates a ringbuffer with the given capacity  $n\_ringbuffer$ . Client that triggers the constructor must ensure that the capacity  $n\_ringbuffer$  and the delay  $n\_prefill$  are sufficient, i.e. enough old and new samples are always available to compute sufficient samples in using an impulse response of length  $n\_irs$ . Audio block sizes at both sides of the resampler have to be taken into account. Class MHASignal::blockprocessing\_polyphase\_resampling\_t takes care of this, and it is recommended to use this class for block-based processing.

Based on *n\_up*, *n\_down*, *n\_irs* and *nyquist\_ratio*, a suitable sinc impulse response is computed and windowed with a hanning window to limit its extent.

The actual source sampling rate, target sampling rate, and interpolation sampling rate are not parameters to this constructors, because only their ratios matter.

## **Parameters**

n_up	upsampling factor, ratio between interpolation rate and source rate.
n_down	downsampling factor, ratio between interpolation rate and target rate.
nyquist_ratio	low pass filter cutoff frequency relative to the nyquist frequency of the smaller of the two sampling rates. Example values: E.g. 0.8, 0.9
n_irs	length of impulse response (in samples at interpolation rate)
n_ringbuffer	length of ringbuffer, in samples at source sampling rate
n_channels	audio channels count
n_prefill	Prefill the ringbuffer with this many zero frames in samples at source sampling rate

### 5.191.3 Member Function Documentation

```
5.191.3.1 void MHAFilter::polyphase_resampling_t::write ( mha wave t & signal )
```

Write signal to the ringbuffer.

Signal contained in signal is appended to the audio frames already present in the ringbuffer.

## **Parameters**

## **Exceptions**

<b>MHA_Error</b> (p. 413)	MHA_Error (p. 413) Raises exception if there is not enough room or if the number of	
	channels does not match.	

```
5.191.3.2 void MHAFilter::polyphase_resampling_t::read ( mha_wave_t & signal )
```

Read resampled signal.

Will perform the resampling and remove no longer needed samples from the input buffer.

## **Parameters**

	buffer to write the resampled signal to.
sianai	Duffer to write the resampled signal to
oigi iai	baner to write the recampled eighar to:

# **Exceptions**

<b>MHA_Error</b> (p. 413)	Raises exception if there is not enough input signal or if the number
	of channels is too high.

**5.191.3.3** unsigned MHAFilter::polyphase\_resampling\_t::readable\_frames ( ) const [inline]

Number of frames at target sampling rate that can be produced.

This method only checks for enough future samples present, therefore, this number can be positive and a read operation can still fail if there are not enough past samples present to perform the filtering for the first output sample. This could only happen if the constructor parameters  $n_ringbuffer$  or  $n_ringbuffer$  or  $n_ringbuffer$  or  $n_ringbuffer$  or  $n_ringbuffer$  are present to compute the next target sample.

5.191.4 Member Data Documentation

**5.191.4.1 unsigned MHAFilter::polyphase\_resampling\_t::upsampling\_factor** [private]

Integer upsampling factor.

Interpolation rate divided by source rate.

**5.191.4.2** unsigned MHAFilter::polyphase\_resampling\_t::downsampling\_factor [private]

Integer downsampling factor.

Interpolation rate divided by target rate.

**5.191.4.3 unsigned MHAFilter::polyphase\_resampling\_t::now\_index** [private]

Index of "now" in the interpolated sampling rate.

**Todo** Index into what? What is the meaning of now?

**5.191.4.4 bool MHAFilter::polyphase\_resampling\_t::underflow** [private]

Set to true when an underflow has occurred.

When this is true, then the object can no longer be used. Underflows have to be avoided by clients, e.g. by checking that enough **readable\_frames** (p. 528) are present before calling **read** (p. 528)

5.191.4.5 MHAWindow::hanning\_t MHAFilter::polyphase\_resampling\_t::impulse\_response [private]

Contains the impulse response of the lowpass filter needed for anti-aliasing.

The impulse response is stored at the interpolation sampling rate. We use an instance of  $\mathbf{M} \leftarrow \mathbf{HAWindow::hanning_t}$  (p. 802) here because we are limiting the sinc impulse response with a Hanning window (otherwise the impulse response would extend indefinitely into past and future). And the samples inside an  $\mathbf{MHAWindow::hanning_t}$  (p. 802) can be altered with \*=, which our constructor does.

**5.191.4.6** MHASignal::ringbuffer\_t MHAFilter::polyphase\_resampling\_t::ringbuffer [private]

Storage of input signal.

Part of the polyphase resampling optimization is that apart from the FIR impulse response, nothing is stored at the interpolation rate, saving memory and computation cycles.


The documentation for this class was generated from the following files:

- mha\_filter.hh
- · mha\_filter.cpp

# 5.192 MHAFilter::resampling\_filter\_t Class Reference

Hann shaped low pass filter for resampling.

Inheritance diagram for MHAFilter::resampling\_filter\_t:

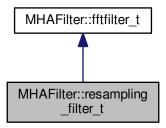

### **Public Member Functions**

resampling\_filter\_t (unsigned int fftlen, unsigned int irslen, unsigned int channels, unsigned int Nup, unsigned int Ndown, double fCutOff)
 Constructor.

## Static Public Member Functions

• static unsigned int fragsize validator (unsigned int fftlen, unsigned int irslen)

## **Private Attributes**

· unsigned int fragsize

# 5.192.1 Detailed Description

Hann shaped low pass filter for resampling.

This class uses FFT filter at upsampled rate.

# 5.192.2 Constructor & Destructor Documentation

# 

## Constructor.

### **Parameters**

fftlen	FFT length.
irslen	Length of filter.
channels	Number of channels to be filtered.
Nup	Upsampling ratio.
Ndown	Downsampling ratio.
fCutOff	Cut off frequency (relative to lower Nyquist Frequency)

## 5.192.3 Member Function Documentation

### 5.192.4 Member Data Documentation

**5.192.4.1 unsigned int MHAFilter::resampling\_filter\_t::fragsize** [private]

The documentation for this class was generated from the following files:

- mha\_filter.hh
- · mha\_filter.cpp

# 5.193 MHAFilter::smoothspec\_t Class Reference

Smooth spectral gains, create a windowed impulse response.

**Public Member Functions** 

Constructor.

- void **smoothspec** (const **mha\_spec\_t** &s\_in, **mha\_spec\_t** &s\_out)

  Create a smoothed spectrum.
- void smoothspec (mha\_spec\_t &spec)

Create a smoothed spectrum (in place)

void spec2fir (const mha\_spec\_t &spec, mha\_wave\_t &fir)

Return FIR coefficients.

∼smoothspec\_t ()

### **Private Member Functions**

void internal\_fir (const mha\_spec\_t &)

### **Private Attributes**

- · unsigned int fftlen
- unsigned int nchannels
- MHAWindow::base t window
- MHASignal::waveform\_t tmp\_wave
- MHASignal::spectrum\_t tmp\_spec
- MHASignal::minphase\_t \* minphase
- bool \_linphase\_asym
- mha\_fft\_t fft

## 5.193.1 Detailed Description

Smooth spectral gains, create a windowed impulse response.

Spectral gains are smoothed by multiplicating the impulse response with a window function.

If a minimal phase is used, then the original phase is discarded and replaced by the minimal phase function. In this case, the window is applied to the beginning of the inverse Fourier transform of the input spectrum, and the remaining signal set to zero. If the original phase is kept, the window is applied symmetrical arround zero, i.e. to the first and last samples of the inverse Fourier transform of the input spectrum. The **spec2fir()** (p. 533) function creates a causal impulse response by circular shifting the impulse response by half of the window length.

The signal dimensions of the arguments of **smoothspec()** (p. 533) must correspond to the FFT length and number of channels provided in the constructor. The function **spec2fir()** (p. 533) can fill signal structures with more than window length frames.

## 5.193.2 Constructor & Destructor Documentation

## Constructor.

## **Parameters**

fftlen	FFT length of input spectrum (fftlen/2+1 bins)
nchannels	Number of channels in input spectrum
window	Window used for smoothing
minphase	Use minimal phase (true) or original phase (false)
linphase_asym	Keep phase, but apply full window at beginning of IRS

```
5.193.2.2 MHAFilter::smoothspec_t::~smoothspec_t ( )
```

5.193.3 Member Function Documentation

Create a smoothed spectrum.

### **Parameters**

S⇔	Input spectrum
_in	

## **Return values**

```
s_out Output spectrum
```

Create a smoothed spectrum (in place)

## **Parameters**

```
spec | Spectrum to be smoothed.
```

Return FIR coefficients.

## **Parameters**

```
spec Input spectrum
```

#### **Return values**

```
fir | FIR coefficients, minimum length is window length
```

The documentation for this class was generated from the following files:

- · mha\_filter.hh
- mha filter.cpp

# 5.194 MHAFilter::thirdoctave\_analyzer\_t Class Reference

**Public Member Functions** 

- thirdoctave\_analyzer\_t (mhaconfig\_t cfg)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- unsigned int **nbands** ()
- unsigned int **nchannels** ()
- std::vector< mha\_real\_t > get\_cf\_hz ()

#### **Static Public Member Functions**

- static std::vector< mha\_real\_t > cf\_generator (mhaconfig\_t cfg)
- static std::vector< mha\_real\_t > bw\_generator (mhaconfig\_t cfg)
- static std::vector< mha\_real\_t > dup (std::vector< mha\_real\_t >, mhaconfig\_t cfg)

### **Private Attributes**

- mhaconfig\_t cfg\_
- std::vector< mha\_real\_t > cf
- MHAFilter::gamma\_flt\_t fb
- MHASignal::waveform\_t out\_chunk
- MHASignal::waveform\_t out\_chunk\_im

```
5.194.1 Constructor & Destructor Documentation
```

5.194.2 Member Function Documentation

```
5.194.2.1 mha_wave_t * MHAFilter::thirdoctave_analyzer_t::process ( mha_wave_t * sln )
```

```
5.194.2.2 unsigned int MHAFilter::thirdoctave_analyzer_t::nbands ( )
```

```
5.194.2.3 unsigned int MHAFilter::thirdoctave_analyzer_t::nchannels ( )
```

```
5.194.2.4 std::vector< mha_real_t > MHAFilter::thirdoctave_analyzer_t::get_cf_hz( )
```

```
5.194.2.5 std::vector< mha_real_t > MHAFilter::thirdoctave_analyzer_t::cf_generator ( mhaconfig t cfg ) [static]
```

```
5.194.2.6 std::vector< mha_real_t > MHAFilter::thirdoctave_analyzer_t::bw_generator ( mhaconfig_t cfg ) [static]
```

5.194.3 Member Data Documentation

**5.194.3.1 mhaconfig\_t** MHAFilter::thirdoctave\_analyzer\_t::cfg\_ [private]

```
5.194.3.2 std::vector<mha_real_t> MHAFilter::thirdoctave_analyzer_t::cf [private]
5.194.3.3 MHAFilter::gamma_flt_t MHAFilter::thirdoctave_analyzer_t::fb [private]
5.194.3.4 MHASignal::waveform_t MHAFilter::thirdoctave_analyzer_t::out_chunk [private]
5.194.3.5 MHASignal::waveform_t MHAFilter::thirdoctave_analyzer_t::out_chunk_im
```

The documentation for this class was generated from the following files:

- · complex\_filter.h
- complex\_filter.cpp

[private]

5.195 MHAFilter::transfer\_function\_t Struct Reference

a structure containing a source channel number, a target channel number, and an impulse response.

## **Public Member Functions**

transfer function t ()

Default constructor for STL conformity.

 transfer\_function\_t (unsigned int source\_channel\_index, unsigned int target\_← channel\_index, const std::vector< float > &impulse\_response)

Data constructor.

- unsigned int **partitions** (unsigned int fragsize) const
  - for the given partition size, return the number of partitions of the impulse response.
- unsigned int non\_empty\_partitions (unsigned int fragsize) const
  - for the given partition size, return the number of non-empty partitions of the impulse response.
- bool isempty (unsigned int fragsize, unsigned int index) const checks if the partition contains only zeros

### **Public Attributes**

• unsigned int source\_channel\_index

Source audio channel index for this transfer function.

unsigned int target\_channel\_index

Target audio channel index for this transfer function.

• std::vector< float > impulse response

Impulse response of transfer from source to target channel.

# 5.195.1 Detailed Description

a structure containing a source channel number, a target channel number, and an impulse response.

### 5.195.2 Constructor & Destructor Documentation

```
5.195.2.1 MHAFilter::transfer_function_t::transfer_function_t() [inline]
```

Default constructor for STL conformity.

Not used.

Data constructor.

#### **Parameters**

source_channel_index	Source audio channel index for this transfer function
target_channel_index	Target audio channel index for this transfer function
impulse_response	Impulse response of transfer from source to target channel

### 5.195.3 Member Function Documentation

for the given partition size, return the number of partitions of the impulse response.

## **Parameters**

fragsize	partition size

## **Returns**

number of partitions occupied by the impulse response

# 

for the given partition size, return the number of non-empty partitions of the impulse response.

### **Parameters**

fragsize partition size
-------------------------

### **Returns**

the number of non-empty partitions of the impulse response, i.e. partitions containing only zeros are not counted.

checks if the partition contains only zeros

#### **Parameters**

fragsize	partition size
index	partition index

## **Returns**

true when this partition of the impulse response contains only zeros.

- 5.195.4 Member Data Documentation
- 5.195.4.1 unsigned int MHAFilter::transfer\_function\_t::source\_channel\_index

Source audio channel index for this transfer function.

5.195.4.2 unsigned int MHAFilter::transfer\_function\_t::target\_channel\_index

Target audio channel index for this transfer function.

5.195.4.3 std::vector<float> MHAFilter::transfer\_function\_t::impulse\_response

Impulse response of transfer from source to target channel.

The documentation for this struct was generated from the following files:

- mha filter.hh
- mha\_filter.cpp

# 5.196 MHAFilter::transfer\_matrix\_t Struct Reference

A sparse matrix of transfer function partitionss.

Inherits vector< transfer\_function\_t >.

### **Public Member Functions**

- std::valarray< unsigned int > partitions (unsigned fragsize) const
   Returns an array of the results of calling the partitions() (p. 539) method on every matrix member.
- std::valarray < unsigned int > non\_empty\_partitions (unsigned int fragsize) const
   Returns an array of the results of calling the non\_empty\_partitions() (p. 539) method on every
   matrix member.

## 5.196.1 Detailed Description

A sparse matrix of transfer function partitionss.

Each matrix element knows its position in the matrix, so they can be stored as a vector.

## 5.196.2 Member Function Documentation

```
5.196.2.1 std::valarray<unsigned int> MHAFilter::transfer_matrix_t::partitions ( unsigned fragsize ) const [inline]
```

Returns an array of the results of calling the **partitions()** (p. 539) method on every matrix member.

```
5.196.2.2 std::valarray<unsigned int> MHAFilter::transfer_matrix_t::non_empty_partitions ( unsigned int fragsize ) const [inline]
```

Returns an array of the results of calling the **non\_empty\_partitions()** (p. 539) method on every matrix member.


The documentation for this struct was generated from the following file:

# · mha\_filter.hh

# 5.197 MHAIOJack::io\_jack\_t Class Reference

Main class for JACK IO.

Inheritance diagram for MHAIOJack::io jack t:

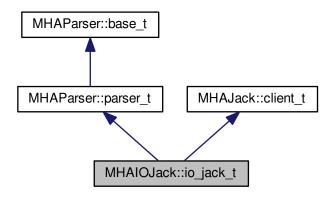

## **Public Member Functions**

- io\_jack\_t (unsigned int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent← \_t stop\_event, void \*stop\_handle)
- void **prepare** (int, int)

  Allocate buffers, activate JACK client and install internal ports.
- void release ()

## **Private Member Functions**

void reconnect\_inports ()

Connect the input ports when connection variable is accessed.

void reconnect\_outports ()

Connect the output ports when connection variable is accessed.

- void get\_physical\_input\_ports ()
- void get\_physical\_output\_ports ()
- void get\_all\_input\_ports ()
- void get\_all\_output\_ports ()
- void get delays in ()
- void get\_delays\_out ()
- void read\_get\_cpu\_load ()
- void read\_get\_xruns ()
- void read\_get\_scheduler ()

## **Private Attributes**

- unsigned int fw\_fragsize
- float fw samplerate
- MHAParser::string\_t servername
- MHAParser::string\_t clientname
- MHAParser::vstring\_t connections\_in
- MHAParser::vint\_mon\_t delays\_in
- MHAParser::vstring t connections out
- MHAParser::vint\_mon\_t delays\_out
- MHAParser::vstring\_t portnames\_in
- MHAParser::vstring\_t portnames\_out
- MHAParser::vstring\_mon\_t ports\_in\_physical
- MHAParser::vstring\_mon\_t ports\_out\_physical
- MHAParser::vstring\_mon\_t ports\_in\_all
- MHAParser::vstring\_mon\_t ports\_out\_all
- MHAParser::parser\_t ports\_parser
- MHAParser::float\_mon\_t state\_cpuload
- MHAParser::int\_mon\_t state\_xruns
- MHAParser::int\_mon\_t state\_priority
- MHAParser::string\_mon\_t state\_scheduler
- MHAParser::parser\_t state\_parser
- MHAEvents::patchbay\_t< io\_jack\_t > patchbay

### **Additional Inherited Members**

## 5.197.1 Detailed Description

Main class for JACK IO.

This class registers a JACK client. JACK and framework states are managed by this class.

## 5.197.2 Constructor & Destructor Documentation

### 5.197.3 Member Function Documentation

Allocate buffers, activate JACK client and install internal ports.

```
5.197.3.2 void io_jack_t::release (
                     void )
5.197.3.3 void io_jack_t::reconnect_inports() [private]
Connect the input ports when connection variable is accessed.
5.197.3.4 void io_jack_t::reconnect_outports( ) [private]
Connect the output ports when connection variable is accessed.
5.197.3.5 void io_jack_t::get_physical_input_ports() [private]
5.197.3.6 void io_jack_t::get_physical_output_ports() [private]
5.197.3.7 void io_jack_t::get_all_input_ports( ) [private]
5.197.3.8 void io_jack_t::get_all_output_ports( ) [private]
5.197.3.9 void io_jack_t::get_delays_in( ) [private]
5.197.3.10 void io_jack_t::get_delays_out( ) [private]
5.197.3.11 void io_jack_t::read_get_cpu_load( ) [private]
5.197.3.12 void io_jack_t::read_get_xruns( ) [private]
5.197.3.13 void io_jack_t::read_get_scheduler( ) [private]
5.197.4 Member Data Documentation
5.197.4.1
         unsigned int MHAIOJack::io_jack_t::fw_fragsize [private]
5.197.4.2 float MHAIOJack::io_jack_t::fw_samplerate [private]
5.197.4.3 MHAParser::string_t MHAIOJack::io_jack_t::servername [private]
5.197.4.4 MHAParser::string_t MHAIOJack::io_jack_t::clientname [private]
5.197.4.5 MHAParser::vstring_t MHAIOJack::io_jack_t::connections_in [private]
5.197.4.6 MHAParser::vint_mon_t MHAIOJack::io_jack_t::delays_in [private]
```

```
5.197.4.7 MHAParser::vstring_t MHAIOJack::io_jack_t::connections_out [private]
5.197.4.8 MHAParser::vint_mon_t MHAIOJack::io_jack_t::delays_out [private]
5.197.4.9 MHAParser::vstring_t MHAIOJack::io_jack_t::portnames_in [private]
5.197.4.10 MHAParser::vstring_t MHAIOJack::io_jack_t::portnames_out [private]
5.197.4.11 MHAParser::vstring mon t MHAIOJack::io jack t::ports in physical [private]
5.197.4.12 MHAParser::vstring mon t MHAIOJack::io jack t::ports out physical [private]
5.197.4.13 MHAParser::vstring_mon_t MHAIOJack::io_jack_t::ports_in_all [private]
5.197.4.14 MHAParser::vstring_mon_t MHAIOJack::io_jack_t::ports_out_all [private]
5.197.4.15 MHAParser::parser_t MHAIOJack::io_jack_t::ports_parser [private]
5.197.4.16 MHAParser::float mon t MHAlOJack::io_jack_t::state_cpuload [private]
5.197.4.17 MHAParser::int mon t MHAIOJack::io_jack_t::state_xruns [private]
5.197.4.18 MHAParser::int_mon_t MHAIOJack::io_jack_t::state_priority [private]
5.197.4.19 MHAParser::string mon t MHAIOJack::io_jack_t::state_scheduler [private]
5.197.4.20 MHAParser::parser t MHAIOJack::io_jack_t::state_parser [private]
5.197.4.21 MHAEvents::patchbay t<io jack t> MHAIOJack::io_jack_t::patchbay [private]
```


The documentation for this class was generated from the following file:

# MHAIOJack.cpp

## 5.198 MHAIOJackdb::io\_jack\_t Class Reference

Main class for JACK IO.

Inheritance diagram for MHAIOJackdb::io\_jack\_t:

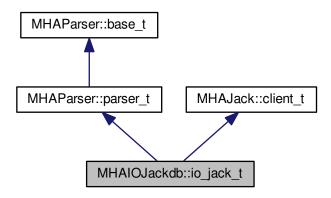

#### **Public Member Functions**

- io\_jack\_t (unsigned int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent← \_t stop\_event, void \*stop\_handle)
- void prepare (int, int)

Allocate buffers, activate JACK client and install internal ports.

- void release ()
- bool fail\_on\_async\_jackerror () const

## **Private Member Functions**

- int IOProcessEvent inner (mha wave t \*sln, mha wave t \*\*sOut)
- void reconnect\_inports ()

Connect the input ports when connection variable is accessed.

void reconnect\_outports ()

Connect the output ports when connection variable is accessed.

- void get physical input ports ()
- void get\_physical\_output\_ports ()
- void get\_all\_input\_ports ()
- void get all output ports ()
- void read\_get\_cpu\_load ()
- void read\_get\_xruns ()
- void read\_get\_scheduler ()
- void set\_use\_jack\_transport ()
- void set locate ()

#### **Static Private Member Functions**

static int IOProcessEvent\_inner (void \*handle, mha\_wave\_t \*sIn, mha\_wave\_t \*\*s
 — Out)

### **Private Attributes**

- IOProcessEvent\_t proc\_event
- void \* proc handle
- unsigned int mha\_fragsize
- float mha\_samplerate
- unsigned int fragsize\_ratio
- MHAParser::string\_t servername
- MHAParser::string\_t clientname
- MHAParser::vstring\_t connections\_in
- MHAParser::vstring\_t connections\_out
- MHAParser::vstring\_t portnames\_in
- MHAParser::vstring\_t portnames\_out
- MHAParser::bool\_t fail\_on\_async\_jackerr
- MHAParser::bool\_t use\_jack\_transport
- MHAParser::float\_t locate
- MHAParser::float\_mon\_t server\_srate
- MHAParser::int\_mon\_t server\_fragsize
- MHAParser::vstring\_mon\_t ports\_in\_physical
- MHAParser::vstring\_mon\_t ports\_out\_physical
- MHAParser::vstring\_mon\_t ports\_in\_all
- MHAParser::vstring\_mon\_t ports\_out\_all
- MHAParser::parser\_t ports\_parser
- · MHAParser::float mon t state cpuload
- MHAParser::int\_mon\_t state\_xruns
- MHAParser::int mon t state priority
- MHAParser::string\_mon\_t state\_scheduler
- MHAParser::parser\_t state\_parser
- MHASignal::waveform\_t \* pwinner\_out
- MHAEvents::patchbay\_t< io\_jack\_t > patchbay

## **Additional Inherited Members**

# 5.198.1 Detailed Description

## Main class for JACK IO.

This class registers a JACK client. JACK and framework states are managed by this class.

```
5.198.2.1 io_jack_t::io_jack_t (
                      unsigned int fragsize,
                      float samplerate,
                      IOProcessEvent t proc event,
                      void * proc_handle,
                      IOStartedEvent_t start_event,
                      void * start_handle,
                      IOStoppedEvent t stop event,
                      void * stop_handle )
5.198.3 Member Function Documentation
5.198.3.1 void io_jack_t::prepare (
                      int nch_in,
                      int nch_out )
Allocate buffers, activate JACK client and install internal ports.
5.198.3.2 void io_jack_t::release (
                      void )
5.198.3.3 bool MHAIOJackdb::io_jack_t::fail_on_async_jackerror( ) const [inline]
5.198.3.4 int io_jack_t::IOProcessEvent_inner (
                      void * handle,
                      mha wave t * sln.
                      mha_wave_t ** sOut ) [static], [private]
5.198.3.5 int io_jack_t::IOProcessEvent_inner (
                      mha wave t * sln,
                      mha_wave_t ** sOut ) [private]
5.198.3.6 void io_jack_t::reconnect_inports() [private]
Connect the input ports when connection variable is accessed.
5.198.3.7 void io_jack_t::reconnect_outports() [private]
```

Connect the output ports when connection variable is accessed.

5.198.2 Constructor & Destructor Documentation

```
5.198.3.8 void io_jack_t::get_physical_input_ports() [private]
5.198.3.9 void io_jack_t::get_physical_output_ports( ) [private]
5.198.3.10 void io_jack_t::get_all_input_ports() [private]
5.198.3.11 void io_jack_t::get_all_output_ports( ) [private]
5.198.3.12 void io_jack_t::read_get_cpu_load( ) [private]
5.198.3.13 void io_jack_t::read_get_xruns( ) [private]
5.198.3.14 void io_jack_t::read_get_scheduler( ) [private]
5.198.3.15 void io_jack_t::set_use_jack_transport() [private]
5.198.3.16 void io_jack_t::set_locate() [private]
5.198.4 Member Data Documentation
5.198.4.1 IOProcessEvent_t MHAIOJackdb::io_jack_t::proc_event [private]
5.198.4.2 void* MHAIOJackdb::io_jack_t::proc_handle [private]
5.198.4.3 unsigned int MHAIOJackdb::io_jack_t::mha_fragsize [private]
5.198.4.4 float MHAIOJackdb::io_jack_t::mha_samplerate [private]
5.198.4.5 unsigned int MHAIOJackdb::io_jack_t::fragsize_ratio [private]
5.198.4.6
         MHAParser::string t MHAIOJackdb::io_jack_t::servername [private]
5.198.4.7 MHAParser::string t MHAIOJackdb::io_jack_t::clientname [private]
5.198.4.8 MHAParser::vstring t MHAIOJackdb::io_jack_t::connections_in [private]
5.198.4.9 MHAParser::vstring_t MHAIOJackdb::io_jack_t::connections_out [private]
5.198.4.10 MHAParser::vstring t MHAIOJackdb::io_jack_t::portnames_in [private]
5.198.4.11 MHAParser::vstring_t MHAIOJackdb::io_jack_t::portnames_out [private]
5.198.4.12 MHAParser::bool_t MHAlOJackdb::io_jack_t::fail_on_async_jackerr [private]
```


```
5.198.4.13 MHAParser::bool t MHAIOJackdb::io jack t::use jack transport [private]
5.198.4.14 MHAParser::float t MHAIOJackdb::io_jack_t::locate [private]
5.198.4.15 MHAParser::float mon t MHAIOJackdb::io_jack_t::server_srate [private]
5.198.4.16 MHAParser::int_mon_t MHAIOJackdb::io_jack_t::server_fragsize [private]
5.198.4.17 MHAParser::vstring mon t MHAlOJackdb::io_jack_t::ports_in_physical [private]
5.198.4.18 MHAParser::vstring mon t MHAlOJackdb::io jack t::ports out physical
          [private]
5.198.4.19 MHAParser::vstring mon t MHAIOJackdb::io_jack_t::ports_in_all [private]
5.198.4.20 MHAParser::vstring_mon_t MHAlOJackdb::io_jack_t::ports_out_all [private]
5.198.4.21 MHAParser::parser t MHAIOJackdb::io jack t::ports parser [private]
5.198.4.22 MHAParser::float mon t MHAIOJackdb::io_jack_t::state_cpuload [private]
5.198.4.23 MHAParser::int mon t MHAIOJackdb::io jack t::state xruns [private]
5.198.4.24 MHAParser::int_mon_t MHAIOJackdb::io_jack_t::state_priority [private]
5.198.4.25 MHAParser::string mon t MHAIOJackdb::io jack t::state scheduler [private]
5.198.4.26 MHAParser::parser t MHAlOJackdb::io_jack_t::state_parser [private]
5.198.4.27 MHASignal::waveform_t* MHAIOJackdb::io_jack_t::pwinner_out [private]
5.198.4.28 MHAEvents::patchbay_t<io_jack_t> MHAIOJackdb::io_jack_t::patchbay
          [private]
```

The documentation for this class was generated from the following file:

## MHAIOJackdb.cpp

# 5.199 MHAIOPortAudio::device\_info\_t Class Reference

Inheritance diagram for MHAIOPortAudio::device\_info\_t:

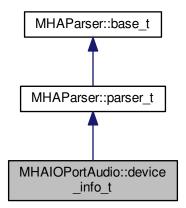

## **Public Member Functions**

- device\_info\_t ()
- void fill\_info ()

## **Public Attributes**

- MHAParser::int\_mon\_t numDevices
- MHAParser::vint\_mon\_t structVersion
- MHAParser::vstring\_mon\_t name
- MHAParser::vint\_mon\_t hostApi
- MHAParser::vint\_mon\_t maxInputChannels
- MHAParser::vint\_mon\_t maxOutputChannels
- MHAParser::vfloat\_mon\_t defaultLowInputLatency
- MHAParser::vfloat\_mon\_t defaultLowOutputLatency
- MHAParser::vfloat\_mon\_t defaultHighInputLatency
- MHAParser::vfloat\_mon\_t defaultHighOutputLatency
- MHAParser::vfloat\_mon\_t defaultSampleRate

### **Additional Inherited Members**


```
5.199.1 Constructor & Destructor Documentation
5.199.1.1 MHAIOPortAudio::device info t::device info t( ) [inline]
5.199.2 Member Function Documentation
5.199.2.1 void MHAIOPortAudio::device_info_t::fill_info() [inline]
5.199.3 Member Data Documentation
5.199.3.1 MHAParser::int mon t MHAIOPortAudio::device_info_t::numDevices
5.199.3.2 MHAParser::vint_mon_t MHAIOPortAudio::device_info_t::structVersion
5.199.3.3 MHAParser::vstring mon t MHAIOPortAudio::device info t::name
5.199.3.4 MHAParser::vint mon t MHAIOPortAudio::device_info_t::hostApi
5.199.3.5 MHAParser::vint_mon_t MHAIOPortAudio::device_info_t::maxInputChannels
5.199.3.6 MHAParser::vint mon t MHAIOPortAudio::device info t::maxOutputChannels
5.199.3.7 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultLowInputLatency
5.199.3.8 MHAParser::vfloat mon t MHAIOPortAudio::device_info_t::defaultLowOutputLatency
5.199.3.9 MHAParser::vfloat mon t MHAIOPortAudio::device_info_t::defaultHighInputLatency
5.199.3.10 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultHighOutputLatency
5.199.3.11 MHAParser::vfloat_mon_t MHAIOPortAudio::device_info_t::defaultSampleRate
The documentation for this class was generated from the following file:
```

## MHAIOPortAudio.cpp

# 5.200 MHAIOPortAudio::io\_portaudio\_t Class Reference

Main class for Portaudio sound IO.

Inheritance diagram for MHAIOPortAudio::io\_portaudio\_t:

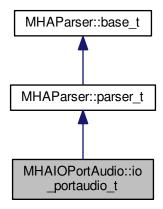

# **Public Member Functions**

- io\_portaudio\_t (unsigned int fragsize, float samplerate, IOProcessEvent\_t proc\_⇔ event, void \*proc\_handle, IOStartedEvent\_t start\_event, void \*start\_handle, IO⇔ StoppedEvent\_t stop\_event, void \*stop\_handle)
- void device\_name\_updated ()
- void device\_index\_updated ()
- ~io portaudio t ()
- void cmd\_prepare (int, int)
- void cmd\_start ()
- void cmd\_stop ()
- void cmd\_release ()
- int **portaudio\_callback** (const void \*input, void \*output, unsigned long frame\_count, const PaStreamCallbackTimeInfo \*time\_info, PaStreamCallbackFlags status\_flags)

### **Private Attributes**

- · device\_info\_t device\_info
- MHASignal::waveform\_t \* s\_in
- mha\_wave\_t \* s\_out
- float samplerate
- unsigned int nchannels\_out
- · unsigned int nchannels\_in

- · unsigned int fragsize
- IOProcessEvent\_t proc\_event
- void \* proc handle
- IOStartedEvent\_t start\_event
- void \* start handle
- IOStoppedEvent\_t stop\_event
- void \* stop\_handle
- PaStream \* portaudio\_stream
- MHAParser::string\_t device\_name
- MHAParser::int\_t device\_index
- MHAEvents::patchbay\_t< io\_portaudio\_t > patchbay

```
Additional Inherited Members
```

```
5.200.1 Detailed Description
```

Main class for Portaudio sound IO.

```
5.200.2 Constructor & Destructor Documentation
```

```
5.200.2.2 MHAIOPortAudio::io portaudio t::~io portaudio t() [inline]
```

5.200.3 Member Function Documentation

```
5.200.3.1 void MHAIOPortAudio::io_portaudio_t::device_name_updated( ) [inline]
```

5.200.3.2 void MHAIOPortAudio::io\_portaudio\_t::device\_index\_updated( ) [inline]

5.200.3.4 void MHAIOPortAudio::io\_portaudio\_t::cmd\_start ( )

```
5.200.3.5 void MHAIOPortAudio::io_portaudio_t::cmd_stop ( )
5.200.3.6 void MHAIOPortAudio::io portaudio t::cmd release ( )
5.200.3.7 int MHAIOPortAudio::io_portaudio_t::portaudio_callback (
                      const void * input,
                      void * output.
                      unsigned long frame_count,
                      const PaStreamCallbackTimeInfo * time info,
                      PaStreamCallbackFlags status_flags )
5.200.4 Member Data Documentation
5.200.4.1 device_info_t MHAIOPortAudio::io_portaudio_t::device_info [private]
5.200.4.2 MHASignal::waveform t* MHAIOPortAudio::io_portaudio_t::s_in [private]
5.200.4.3 mha wave t* MHAIOPortAudio::io_portaudio_t::s_out [private]
5.200.4.4 float MHAIOPortAudio::io_portaudio_t::samplerate [private]
5.200.4.5 unsigned int MHAIOPortAudio::io_portaudio_t::nchannels_out [private]
5.200.4.6 unsigned int MHAIOPortAudio::io_portaudio_t::nchannels_in [private]
5.200.4.7 unsigned int MHAIOPortAudio::io portaudio t::fragsize [private]
5.200.4.8 IOProcessEvent_t MHAIOPortAudio::io_portaudio_t::proc_event [private]
5.200.4.9 void* MHAIOPortAudio::io_portaudio_t::proc_handle [private]
5.200.4.10 IOStartedEvent_t MHAIOPortAudio::io_portaudio_t::start_event [private]
5.200.4.11 void* MHAIOPortAudio::io_portaudio_t::start_handle [private]
5.200.4.12 IOStoppedEvent tMHAIOPortAudio::io_portaudio_t::stop_event [private]
5.200.4.13 void* MHAIOPortAudio::io_portaudio_t::stop_handle [private]
5.200.4.14 PaStream * MHAIOPortAudio::io_portaudio_t::portaudio_stream [private]
5.200.4.15 MHAParser::string t MHAlOPortAudio::io_portaudio_t::device_name [private]
5.200.4.16 MHAParser::int_t MHAIOPortAudio::io_portaudio_t::device_index [private]
5.200.4.17
          MHAEvents::patchbay_t<io_portaudio_t> MHAIOPortAudio::io_portaudio_t \leftarrow
           ::patchbay [private]
```


The documentation for this class was generated from the following file:

# MHAIOPortAudio.cpp

# 5.201 MHAJack::client\_avg\_t Class Reference

Generic JACK client for averaging a system response across time.

Inheritance diagram for MHAJack::client\_avg\_t:

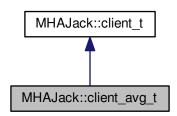

## **Public Member Functions**

- client\_avg\_t (const std::string &name, const unsigned int &nrep\_)
   Constructor for averaging client.
- void io (mha\_wave\_t \*s\_out, mha\_wave\_t \*s\_in, const std::vector< std::string</li>
   &p\_out, const std::vector< std::string</li>
   &p\_in, float \*srate=NULL, unsigned int \*fragsize=NULL)

Recording function.

## **Private Member Functions**

- void proc (mha\_wave\_t \*sIn, mha\_wave\_t \*\*sOut)
- void IOStoppedEvent ()

#### **Static Private Member Functions**

- static int proc (void \*handle, mha\_wave\_t \*sln, mha\_wave\_t \*\*sOut)
- static void IOStoppedEvent (void \*handle, int proc\_err, int io\_err)

## **Private Attributes**

- bool b\_stopped
- unsigned int pos
- mha\_wave\_t \* sn\_in
- mha wave t \* sn out
- std::string name
- MHASignal::waveform\_t \* frag\_out
- const unsigned int nrep
- unsigned int **n**
- bool b\_ready

**Additional Inherited Members** 

# 5.201.1 Detailed Description

Generic JACK client for averaging a system response across time.

### 5.201.2 Constructor & Destructor Documentation

Constructor for averaging client.

### **Parameters**

name⊷	Name of JACK client
_ nrep⊷	Number of repetitions
_	

## 5.201.3 Member Function Documentation

Recording function.

long-description

# **Parameters**

is_out	Input (test) signal, which will be repeated
is_in	System response (averaged, same length as input required)
p_out	Ports to play back the test signal
p_in	Ports to record from the system response
srate	Pointer to sampling rate variable, will be filled with server sampling rate
fragsize	Pointer to fragment size variable, will be filled with server fragment size

```
5.201.3.2 int MHAJack::client_avg_t::proc (
                     void * handle,
                     mha wave_t * sln,
                     mha_wave_t ** sOut ) [static], [private]
5.201.3.3 void MHAJack::client_avg_t::IOStoppedEvent (
                     void * handle,
                     int proc err,
                     int io_err ) [static], [private]
5.201.3.4 void MHAJack::client_avg_t::proc (
                     mha wave t * sln,
                     mha_wave_t ** sOut ) [private]
5.201.3.5 void MHAJack::client_avg_t::IOStoppedEvent() [private]
5.201.4 Member Data Documentation
5.201.4.1 bool MHAJack::client_avg_t::b_stopped [private]
5.201.4.2 unsigned int MHAJack::client_avg_t::pos [private]
5.201.4.3 mha_wave_t* MHAJack::client_avg_t::sn_in [private]
5.201.4.4 mha wave t* MHAJack::client_avg_t::sn_out [private]
5.201.4.5 std::string MHAJack::client_avg_t::name [private]
5.201.4.6 MHASignal::waveform_t* MHAJack::client_avg_t::frag_out [private]
5.201.4.7 const unsigned int MHAJack::client_avg_t::nrep [private]
5.201.4.8 unsigned int MHAJack::client_avg_t::n [private]
5.201.4.9 bool MHAJack::client_avg_t::b_ready [private]
```


The documentation for this class was generated from the following files:

- · mhajack.h
- mhajack.cpp

# 5.202 MHAJack::client\_noncont\_t Class Reference

Generic client for synchronous playback and recording of waveform fragments.

Inheritance diagram for MHAJack::client\_noncont\_t:

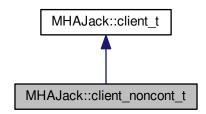

#### **Public Member Functions**

- client\_noncont\_t (const std::string &name, bool use\_jack\_transport=false)
- void io (mha\_wave\_t \*s\_out, mha\_wave\_t \*s\_in, const std::vector< std::string > &p\_out, const std::vector< std::string > &p\_in, float \*srate=NULL, unsigned int \*fragsize=NULL)

## **Private Member Functions**

- void proc (mha\_wave\_t \*sIn, mha\_wave\_t \*\*sOut)
- void IOStoppedEvent ()

## **Static Private Member Functions**

- static int proc (void \*handle, mha\_wave\_t \*sln, mha\_wave\_t \*\*sOut)
- static void **IOStoppedEvent** (void \*handle, int proc err, int io err)

## **Private Attributes**

- bool b\_stopped
- unsigned int pos
- mha\_wave\_t \* sn\_in
- mha\_wave\_t \* sn\_out
- std::string name
- MHASignal::waveform\_t \* frag\_out

**Additional Inherited Members** 

```
5.202.1 Detailed Description
```

Generic client for synchronous playback and recording of waveform fragments.

```
5.202.2 Constructor & Destructor Documentation
5.202.2.1 MHAJack::client_noncont_t::client_noncont_t (
                      const std::string & name,
                      bool use_jack_transport = false )
5.202.3 Member Function Documentation
5.202.3.1 void MHAJack::client_noncont_t::io (
                      mha wave t * s out,
                      mha wave t * s in,
                      const std::vector< std::string > & p_out,
                      const std::vector< std::string > & p_in,
                      float * srate = NULL,
                      unsigned int * fragsize = NULL )
5.202.3.2 int MHAJack::client noncont t::proc (
                      void * handle,
                      mha wave t * sln,
                      mha wave t ** sOut ) [static], [private]
5.202.3.3 void MHAJack::client_noncont_t::IOStoppedEvent (
                      void * handle,
                      int proc_err,
                      int io_err ) [static], [private]
5.202.3.4 void MHAJack::client_noncont_t::proc (
                      mha wave t * sln.
                      mha wave t ** sOut ) [private]
5.202.3.5 void MHAJack::client_noncont_t::lOStoppedEvent() [private]
5.202.4 Member Data Documentation
5.202.4.1 bool MHAJack::client_noncont_t::b_stopped [private]
5.202.4.2 unsigned int MHAJack::client_noncont_t::pos [private]
```

```
5.202.4.3 mha_wave_t* MHAJack::client_noncont_t::sn_in [private]
```

**5.202.4.4 mha\_wave\_t**\* **MHAJack::client\_noncont\_t::sn\_out** [private]

**5.202.4.5** std::string MHAJack::client\_noncont\_t::name [private]

**5.202.4.6** MHASignal::waveform\_t\* MHAJack::client\_noncont\_t::frag\_out [private]


The documentation for this class was generated from the following files:

- · mhajack.h
- mhajack.cpp

5.203 MHAJack::client\_t Class Reference

Generic asynchronous JACK client.

Inheritance diagram for MHAJack::client\_t:

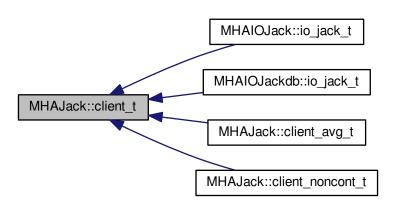

## **Public Member Functions**

- client\_t (IOProcessEvent\_t proc\_event, void \*proc\_handle=NULL, IOStartedEvent
   \_t start\_event=NULL, void \*start\_handle=NULL, IOStoppedEvent\_t stop\_event=N
   ULL, void \*stop\_handle=NULL, bool use\_jack\_transport=false)
- void **prepare** (const std::string &client\_name, const unsigned int &**nchannels\_in**, const unsigned int &**nchannels\_out**)

Allocate buffers, activate JACK client and install internal ports.

void prepare (const std::string &server\_name, const std::string &client\_name, const unsigned int &nchannels\_in, const unsigned int &nchannels\_out)

Allocate buffers, ports, and activates JACK client.

void release ()

Remove JACK client and deallocate internal ports and buffers.

- void start (bool fail\_on\_async\_jack\_error=true)
- void stop ()
- void connect\_input (const std::vector< std::string > &)

Connect the input ports when connection variable is accessed.

void connect\_output (const std::vector< std::string > &)

Connect the output ports when connection variable is accessed.

- unsigned int get\_fragsize () const
- float get srate () const
- unsigned long **get xruns** ()
- unsigned long get xruns reset ()
- std::string **str error** (int err)
- void get\_ports (std::vector< std::string > &, unsigned long jack\_flags)
   Get a list of Jack ports.
- std::vector< std::string > get\_my\_input\_ports ()
- std::vector< std::string > get\_my\_output\_ports ()
- void **set input portnames** (const std::vector< std::string > &)
- void set output portnames (const std::vector< std::string > &)
- float get\_cpu\_load ()
- void set use jack transport (bool ut)

## **Protected Attributes**

• jack\_client\_t \* jc

### **Private Member Functions**

void prepare\_impl (const char \*server\_name, const char \*client\_name, const unsigned int &nchannels\_in, const unsigned int &nchannels\_out)

Allocate buffers, activate JACK client and allocates jack ports Registers the jack client with the given server and activates it.

- void internal start ()
- void internal\_stop ()
- void stopped (int, int)
- int jack\_proc\_cb (jack\_nframes\_t)

This is the main processing callback.

• int jack\_xrun\_cb ()

## **Static Private Member Functions**

- static int jack\_proc\_cb (jack\_nframes\_t, void \*)
- static int jack\_xrun\_cb (void \*)

#### **Private Attributes**

- unsigned long num\_xruns
- unsigned int fragsize
- float samplerate
- unsigned int nchannels\_in
- unsigned int nchannels\_out
- IOProcessEvent\_t proc\_event
- void \* proc handle
- IOStartedEvent\_t start\_event
- void \* start\_handle
- IOStoppedEvent\_t stop\_event
- void \* stop\_handle
- MHASignal::waveform\_t \* s\_in
- mha\_wave\_t \* s\_out
- MHAJack::port t \*\* inch
- MHAJack::port\_t \*\* outch
- · unsigned int flags
- bool b\_prepared
- bool use\_jack\_transport
- jack\_transport\_state\_t jstate\_prev
- std::vector< std::string > input portnames
- std::vector< std::string > output portnames
- bool fail\_on\_async\_jackerror

#### 5.203.1 Detailed Description

Generic asynchronous JACK client.

#### 5.203.2 Constructor & Destructor Documentation

```
5.203.2.1 MHAJack::client t::client t (
```

```
IOProcessEvent_t proc_event, void * proc_handle = NULL,
```

IOStartedEvent t start event = NULL,

void \* start handle = NULL,

**IOStoppedEvent\_t** stop\_event = NULL,

void \* stop\_handle = NULL,
bool use\_jack\_transport = false )

# 5.203.3 Member Function Documentation

```
5.203.3.1 void MHAJack::client_t::prepare (
```

const std::string & client\_name, const unsigned int & nch\_in, const unsigned int & nch\_out )

Allocate buffers, activate JACK client and install internal ports.

Registers the jack client with the default jack server and activates it.

## **Parameters**

client_name	Name of this jack client
nch_in	Input ports to register
nch_out	Output ports to register

Allocate buffers, ports, and activates JACK client.

Registers the jack client with specified jack server and activates it.

#### **Parameters**

server_name	Name of the jack server to register with
client_name	Name of this jack client
nch_in	Input ports to register
nch_out	Output ports to register

```
5.203.3.3 void MHAJack::client_t::release ( void )
```

Remove JACK client and deallocate internal ports and buffers.

Connect the input ports when connection variable is accessed.

Connect the output ports when connection variable is accessed.

Get a list of Jack ports.

#### **Parameters**

res	Result string vector
jack_flags	Jack port flags (JackPortInput etc.)

Allocate buffers, activate JACK client and allocates jack ports Registers the jack client with the given server and activates it.

#### **Parameters**

server_name	Name of the jack server to register with
client_name	Name of this jack client
nch_in	Input ports to register
nch_out	Output ports to register

```
5.203.3.21 void MHAJack::client_t::internal_start() [private]
5.203.3.22 void MHAJack::client_t::internal_stop( ) [private]
5.203.3.23 void MHAJack::client_t::stopped (
                       int proc_err,
                       int io_err ) [private]
5.203.3.24 int MHAJack::client_t::jack_proc_cb (
                       jack_nframes_t n,
                       void * h ) [static], [private]
5.203.3.25 int MHAJack::client_t::jack_proc_cb (
                       jack_nframes_t n ) [private]
This is the main processing callback.
Here happens double buffering and downsampling.
5.203.3.26 int MHAJack::client_t::jack_xrun_cb (
                       void * h ) [static], [private]
5.203.3.27 int MHAJack::client_t::jack_xrun_cb() [inline], [private]
5.203.4 Member Data Documentation
5.203.4.1
         unsigned long MHAJack::client_t::num_xruns [private]
5.203.4.2 unsigned int MHAJack::client_t::fragsize [private]
5.203.4.3 float MHAJack::client_t::samplerate [private]
5.203.4.4 unsigned int MHAJack::client t::nchannels in [private]
5.203.4.5 unsigned int MHAJack::client_t::nchannels_out [private]
5.203.4.6 IOProcessEvent_t MHAJack::client_t::proc_event [private]
```

```
5.203.4.7 void* MHAJack::client_t::proc_handle [private]
5.203.4.8 IOStartedEvent_t MHAJack::client_t::start_event [private]
5.203.4.9 void* MHAJack::client_t::start_handle [private]
5.203.4.10 IOStoppedEvent_t MHAJack::client_t::stop_event [private]
5.203.4.11 void* MHAJack::client_t::stop_handle [private]
5.203.4.12 MHASignal::waveform_t* MHAJack::client_t::s_in [private]
5.203.4.13 mha_wave_t* MHAJack::client_t::s_out [private]
5.203.4.14 MHAJack::port_t** MHAJack::client_t::inch [private]
5.203.4.15 MHAJack::port_t** MHAJack::client_t::outch [private]
5.203.4.16 jack_client_t* MHAJack::client_t::jc [protected]
5.203.4.17 unsigned int MHAJack::client_t::flags [private]
5.203.4.18 bool MHAJack::client_t::b_prepared [private]
5.203.4.19 bool MHAJack::client_t::use_jack_transport [private]
5.203.4.20 jack_transport_state_t MHAJack::client_t::jstate_prev [private]
5.203.4.21 std::vector<std::string> MHAJack::client_t::input_portnames [private]
5.203.4.22 std::vector<std::string> MHAJack::client_t::output_portnames [private]
5.203.4.23 bool MHAJack::client_t::fail_on_async_jackerror [private]
```

The documentation for this class was generated from the following files:

- mhajack.h
- mhajack.cpp

5.204 MHAJack::port t Class Reference

Class for one channel/port.

## **Public Types**

```
Public Member Functions
```

```
    port_t (jack_client_t *jc, dir_t dir, int id)
```

• port\_t (jack\_client\_t \*jc, dir\_t dir, const std::string &id)

Constructor to create port with specific name.

• ~port t()

- void read (mha wave t \*s, unsigned int ch)
- void write (mha\_wave\_t \*s, unsigned int ch)
- void **mute** (unsigned int n)
- void **connect\_to** (const char \*pn)
- const char \* get\_short\_name ()

Return the port name.

#### **Private Attributes**

```
· dir_t dir_type
```

- jack\_port\_t \* port
- jack\_default\_audio\_sample\_t \* iob
- jack client t \* jc

## 5.204.1 Detailed Description

Class for one channel/port.

This class represents one JACK port. Double buffering for asynchronous process callbacks is managed by this class.

```
5.204.2 Member Enumeration Documentation
```

```
5.204.2.1 enum MHAJack::port_t::dir_t
```

## **Enumerator**

input

output

5.204.3 Constructor & Destructor Documentation

## **Parameters**

jc	JACK client.
dir	Direction (input/output).
id	Number in port name (starting with 1).

Constructor to create port with specific name.

#### **Parameters**

jc	JACK client.
dir	Direction (input/output).
id	Port name.

```
5.204.3.3 MHAJack::port_t::~port_t ( )
```

5.204.4 Member Function Documentation

## **Parameters**

s	Signal structure to store the audio data.	
ch	Channel number in audio data structure to be used.	

```
5.204.4.2 void MHAJack::port_t::write ( mha_wave_t * s, unsigned int ch )
```

### **Parameters**

s	Signal structure from which the audio data is read.
ch	Channel number in audio data structure to be used.

```
5.204.4.3 void MHAJack::port_t::mute ( unsigned int n )
```

## **Parameters**

*n* Number of samples to be muted (must be the same as reported by Jack processing callback).

#### **Parameters**

pn | Port name to connect to

5.204.4.5 const char \* MHAJack::port\_t::get\_short\_name ( )

Return the port name.

5.204.5 Member Data Documentation

**5.204.5.1** dir\_t MHAJack::port\_t::dir\_type [private]

**5.204.5.2** jack\_port\_t\* MHAJack::port\_t::port [private]

**5.204.5.3** jack\_default\_audio\_sample\_t\* MHAJack::port\_t::iob [private]


**5.204.5.4** jack\_client\_t\* MHAJack::port\_t::jc [private]

The documentation for this class was generated from the following files:

- · mhajack.h
- · mhajack.cpp

5.205 MHAKernel::algo\_comm\_class\_t Class Reference

Inheritance diagram for MHAKernel::algo comm class t:

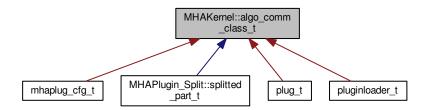

#### **Public Member Functions**

- algo\_comm\_class\_t ()
- virtual ~algo\_comm\_class\_t ()
- algo\_comm\_t get\_c\_handle ()
- virtual void local\_insert\_var (const char \*, comm\_var\_t)
- virtual void local\_remove\_var (const char \*)
- virtual void local\_remove\_ref (void \*)
- virtual bool local\_is\_var (const char \*)
- virtual void local\_get\_var (const char \*, comm\_var\_t \*)
- virtual std::string local\_get\_entries ()
- virtual comm\_var\_map\_t::size\_type size () const

#### **Static Public Member Functions**

- static int insert\_var (void \*, const char \*, comm\_var\_t)
- static int insert\_var\_int (void \*, const char \*, int \*)
- static int insert\_var\_float (void \*, const char \*, float \*)
- static int remove\_var (void \*, const char \*)
- static int remove\_ref (void \*, void \*)
- static int is\_var (void \*, const char \*)
- static int get\_var (void \*, const char \*, comm\_var\_t \*)
- static int **get\_var\_int** (void \*, const char \*, int \*)
- static int get\_var\_float (void \*, const char \*, float \*)
- static int get entries (void \*, char \*, unsigned int)
- static const char \* get\_error (int)

## **Public Attributes**

char \* algo\_comm\_id\_string

#### **Private Attributes**

- · algo\_comm\_t ac
- int algo\_comm\_id\_string\_len
- comm\_var\_map\_t vars

```
5.205.1 Constructor & Destructor Documentation
5.205.1.1
         MHAKernel::algo_comm_class_t::algo_comm_class_t ( )
5.205.1.2 MHAKernel::algo_comm_class_t::~algo_comm_class_t( ) [virtual]
5.205.2 Member Function Documentation
5.205.2.1
         algo comm t MHAKernel::algo_comm_class_t::get_c_handle ( )
5.205.2.2 int MHAKernel::algo comm class t::insert var (
                      void * handle.
                      const char * name,
                      comm_var_t var ) [static]
5.205.2.3 int MHAKernel::algo_comm_class_t::insert_var_int (
                      void * handle,
                      const char * name.
                      int * ivar ) [static]
5.205.2.4 int MHAKernel::algo_comm_class_t::insert_var_float (
                      void * handle.
                      const char * name,
                      float * ivar ) [static]
5.205.2.5 int MHAKernel::algo comm class t::remove var (
                      void * handle.
                      const char * name ) [static]
5.205.2.6 int MHAKernel::algo_comm_class_t::remove_ref (
                      void * handle,
                      void * ref ) [static]
5.205.2.7 int MHAKernel::algo_comm_class_t::is_var (
                      void * handle,
                      const char * name ) [static]
5.205.2.8 int MHAKernel::algo_comm_class_t::get_var (
                      void * handle,
                      const char * name,
                      comm_var_t * var ) [static]
5.205.2.9 int MHAKernel::algo_comm_class_t::get_var_int (
                      void * handle.
                      const char * name,
                      int * ivar ) [static]
```

```
5.205.2.10 int MHAKernel::algo_comm_class_t::get_var_float (
                       void * handle,
                       const char * name.
                       float * ivar ) [static]
5.205.2.11 int MHAKernel::algo_comm_class_t::get_entries (
                       void * handle,
                       char * ret,
                       unsigned int len ) [static]
5.205.2.12 const char * MHAKernel::algo_comm_class_t::get_error (
                       int e ) [static]
5.205.2.13 void MHAKernel::algo_comm_class_t::local_insert_var (
                       const char * name,
                       comm_var_t var ) [virtual]
5.205.2.14 void MHAKernel::algo_comm_class_t::local_remove_var (
                       const char * name ) [virtual]
5.205.2.15 void MHAKernel::algo_comm_class_t::local_remove_ref (
                       void * addr ) [virtual]
5.205.2.16 bool MHAKernel::algo_comm_class_t::local_is_var (
                       const char * name ) [virtual]
5.205.2.17 void MHAKernel::algo comm class t::local get var (
                       const char * name,
                       comm_var_t * var ) [virtual]
5.205.2.18 std::string MHAKernel::algo comm class t::local get entries ( ) [virtual]
5.205.2.19 MHAKernel::comm var map t::size type MHAKernel::algo comm class t::size ( ) const
           [virtual]
5.205.3 Member Data Documentation
5.205.3.1 char* MHAKernel::algo_comm_class_t::algo_comm_id_string
5.205.3.2 algo_comm_t MHAKernel::algo_comm_class_t::ac [private]
5.205.3.3 int MHAKernel::algo_comm_class_t::algo_comm_id_string_len [private]
5.205.3.4 comm_var_map_t MHAKernel::algo_comm_class_t::vars [private]
```

mha\_algo\_comm.hh

The documentation for this class was generated from the following files:

mha\_algo\_comm.cpp

5.206 MHAKernel::comm\_var\_map\_t Class Reference

Inherits map< std::string, comm\_var\_t >.

**Public Member Functions** 

bool has\_key (const std::string &name)

5.206.1 Member Function Documentation


The documentation for this class was generated from the following file:

· mha\_algo\_comm.hh

5.207 MHAMultiSrc::base\_t Class Reference

Base class for source selection.

Inheritance diagram for MHAMultiSrc::base\_t:

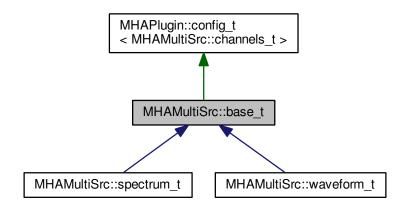

**Public Member Functions** 

- base\_t (algo\_comm\_t iac)
- void **select\_source** (const std::vector< std::string > &src, int in\_channels)

  Change the selection of input sources.

**Protected Attributes** 

algo\_comm\_t ac

**Additional Inherited Members** 

5.207.1 Detailed Description

Base class for source selection.

See also

```
MHAMultiSrc::channel_t (p. 574)
MHAMultiSrc::channels t (p. 574)
```

5.207.2 Constructor & Destructor Documentation

```
5.207.2.1 MHAMultiSrc::base_t::base_t (
algo comm t iac )
```

5.207.3 Member Function Documentation

```
5.207.3.1 void MHAMultiSrc::base_t::select_source ( const std::vector < std::string > & src, int in_channels )
```

Change the selection of input sources.

This function is real-time and thread safe.

#### **Parameters**

src	List of input sources
in_channels	Number of input channels in direct input (the processed signal)

5.207.4 Member Data Documentation

```
5.207.4.1 algo_comm_t MHAMultiSrc::base_t::ac [protected]
```

The documentation for this class was generated from the following files:

- · mha\_multisrc.h
- mha\_multisrc.cpp

5.208 MHAMultiSrc::channel\_t Class Reference

**Public Attributes** 

- std::string name
- int channel
- 5.208.1 Member Data Documentation
- 5.208.1.1 std::string MHAMultiSrc::channel\_t::name
- 5.208.1.2 int MHAMultiSrc::channel\_t::channel

The documentation for this class was generated from the following file:

mha\_multisrc.h

5.209 MHAMultiSrc::channels t Class Reference

Inherits vector< MHAMultiSrc::channel\_t >.

**Public Member Functions** 

- channels\_t (const std::vector< std::string > &src, int in\_channels)

  Separate a list of input sources into a parsable channel list.
- 5.209.1 Constructor & Destructor Documentation

Separate a list of input sources into a parsable channel list.

The number of input channels if verified, a list of MHAMultiSrc::channel\_t (p. 574) is filled.

#### **Parameters**


route	vector of source channel ids
in_channels	number of channels in the processed input signal

The documentation for this class was generated from the following files:

- · mha\_multisrc.h
- mha\_multisrc.cpp

## 5.210 MHAMultiSrc::spectrum\_t Class Reference

Inheritance diagram for MHAMultiSrc::spectrum\_t:

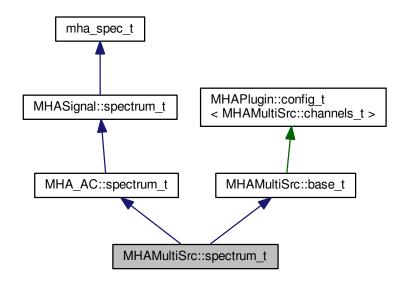

## **Public Member Functions**

- spectrum\_t (algo\_comm\_t iac, std::string name, unsigned int frames, unsigned int channels)
- mha\_spec\_t \* update (mha\_spec\_t \*s)

Update data of spectrum to hold actual input data.

## **Additional Inherited Members**

## 5.210.1 Constructor & Destructor Documentation

## 

## 5.210.2 Member Function Documentation

Update data of spectrum to hold actual input data.

#### **Parameters**

```
s Input signal chunk
```

## **Returns**


Return pointer to spectrum structure

The documentation for this class was generated from the following files:

- · mha\_multisrc.h
- mha\_multisrc.cpp

## 5.211 MHAMultiSrc::waveform\_t Class Reference

Inheritance diagram for MHAMultiSrc::waveform\_t:

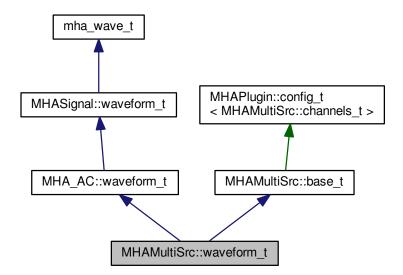

**Public Member Functions** 

- waveform\_t (algo\_comm\_t iac, std::string name, unsigned int frames, unsigned int channels)
- mha\_wave\_t \* update (mha\_wave\_t \*s)

Update data of waveform to hold actual input data.

**Additional Inherited Members** 

```
5.211.1 Constructor & Destructor Documentation
```

5.211.2 Member Function Documentation

```
5.211.2.1 mha_wave_t * MHAMultiSrc::waveform_t::update ( mha_wave_t * s )
```

Update data of waveform to hold actual input data.

**Parameters** 

```
s Input signal chunk
```

**Returns** 

Return pointer to waveform structure

The documentation for this class was generated from the following files:

- · mha\_multisrc.h
- mha\_multisrc.cpp

5.212 MHAOvlFilter::band\_descriptor\_t Class Reference

**Public Attributes** 

```
mha_real_t cf_l
```

mha\_real\_t ef\_l


- mha\_real\_t cf
- mha\_real\_t ef\_h
- mha\_real\_t cf\_h
- bool low\_side\_flat
- bool high\_side\_flat
- 5.212.1 Member Data Documentation
- 5.212.1.1 mha\_real\_t MHAOvlFilter::band\_descriptor\_t::cf\_l
- 5.212.1.2 mha real t MHAOvlFilter::band\_descriptor\_t::ef\_l
- 5.212.1.3 mha\_real\_t MHAOvlFilter::band\_descriptor\_t::cf
- 5.212.1.4 mha\_real\_t MHAOvlFilter::band\_descriptor\_t::ef\_h
- 5.212.1.5 mha\_real\_t MHAOvlFilter::band\_descriptor\_t::cf\_h
- 5.212.1.6 bool MHAOvlFilter::band\_descriptor\_t::low\_side\_flat
- 5.212.1.7 bool MHAOvlFilter::band\_descriptor\_t::high\_side\_flat

The documentation for this class was generated from the following file:

## · mha\_fftfb.hh

## 5.213 MHAOvlFilter::barkscale::bark2hz t Class Reference

Inheritance diagram for MHAOvIFilter::barkscale::bark2hz\_t:

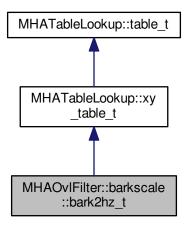

**Public Member Functions** 

- bark2hz\_t ()
- ~bark2hz\_t ()


**Additional Inherited Members** 

- 5.213.1 Constructor & Destructor Documentation
- 5.213.1.1 MHAOvlFilter::barkscale::bark2hz\_t::bark2hz\_t ( )
- 5.213.1.2 MHAOvlFilter::barkscale::bark2hz\_t::~bark2hz\_t ( )

The documentation for this class was generated from the following file:

- · mha\_fftfb.cpp
- 5.214 MHAOvlFilter::barkscale::hz2bark\_t Class Reference

Inheritance diagram for MHAOvIFilter::barkscale::hz2bark\_t:

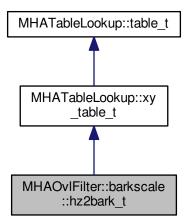

**Public Member Functions** 

- hz2bark\_t ()
- ~hz2bark\_t ()

#### **Additional Inherited Members**

```
5.214.1 Constructor & Destructor Documentation
```

```
5.214.1.1 MHAOvlFilter::barkscale::hz2bark_t::hz2bark_t ( )
```

```
5.214.1.2 MHAOvlFilter::barkscale::hz2bark_t::~hz2bark_t ( )
```

The documentation for this class was generated from the following file:

mha\_fftfb.cpp

5.215 MHAOvlFilter::fftfb\_ac\_info\_t Class Reference

**Public Member Functions** 

- fftfb\_ac\_info\_t (const MHAOvIFilter::fftfb\_t &fb, algo\_comm\_t ac, const std::string &prefix)
- void insert ()

#### **Private Attributes**

MHA AC::waveform t cfv

vector of nominal center frequencies / Hz

MHA\_AC::waveform\_t efv

vector of edge frequencies / Hz

MHA\_AC::waveform\_t bwv

vector of band-weigths (sum of squared fft-bin-weigths)/num\_frames

MHA\_AC::waveform\_t cLTASS

vector of LTASS correction

- 5.215.1 Constructor & Destructor Documentation
- 5.215.2 Member Function Documentation
- 5.215.2.1 void MHAOvlFilter::fftfb\_ac\_info\_t::insert()
- 5.215.3 Member Data Documentation
- **5.215.3.1** MHA AC::waveform t MHAOvlFilter::fftfb\_ac\_info\_t::cfv [private]

vector of nominal center frequencies / Hz

**5.215.3.2** MHA\_AC::waveform\_t MHAOvlFilter::fftfb\_ac\_info\_t::efv [private]

vector of edge frequencies / Hz

**5.215.3.3** MHA\_AC::waveform\_t MHAOvlFilter::fftfb\_ac\_info\_t::bwv [private]

vector of band-weigths (sum of squared fft-bin-weigths)/num\_frames

**5.215.3.4** MHA\_AC::waveform\_t MHAOvlFilter::fftfb\_ac\_info\_t::cLTASS [private]

vector of LTASS correction


The documentation for this class was generated from the following files:

- · mha fftfb.hh
- mha\_fftfb.cpp

## 5.216 MHAOvIFilter::fftfb\_t Class Reference

FFT based overlapping filter bank.

Inheritance diagram for MHAOvIFilter::fftfb t:

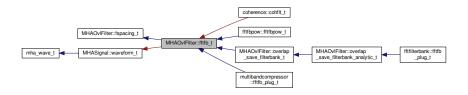

#### **Public Member Functions**

- fftfb\_t (MHAOvlFilter::fftfb\_vars\_t &par, unsigned int nfft, mha\_real\_t fs)

  Constructor for a FFT-based overlapping filter bank.
- ~fftfb t ()
- void apply\_gains (mha\_spec\_t \*s\_out, const mha\_spec\_t \*s\_in, const mha\_wave\_t \*gains)
- void get\_fbpower (mha\_wave\_t \*fbpow, const mha\_spec\_t \*s\_in)
- void get fbpower db (mha wave t \*fbpow, const mha spec t \*s in)
- std::vector< mha\_real\_t > get\_ltass\_gain\_db () const
- unsigned int bin1 (unsigned int band) const

Return index of first non-zero filter shape window.

unsigned int bin2 (unsigned int band) const

Return index of first zero filter shape window above center frequency.

unsigned int get\_fftlen () const

Return fft length.

mha\_real\_t w (unsigned int k, unsigned int b) const

Return filter shape window at index k in band b.

#### **Private Attributes**

```
• unsigned int * vbin1
```

- unsigned int \* vbin2
- mha\_real\_t(\* shape )(mha\_real\_t)
- unsigned int fftlen
- mha\_real\_t samplingrate

#### **Additional Inherited Members**

5.216.1 Detailed Description

FFT based overlapping filter bank.

5.216.2 Constructor & Destructor Documentation

```
5.216.2.1 MHAOvlFilter::fftfb_t::fftfb_t (

MHAOvlFilter::fftfb_vars_t & par,

unsigned int nfft,

mha_real_t fs )
```

Constructor for a FFT-based overlapping filter bank.

## **Parameters**

par	Parameters for the FFT filterbank that can not be deduced from the signal dimensions are taken from this set of configuration variables.
nfft	FFT length
fs	Sampling rate / Hz

```
5.216.2.2 MHAOvIFilter::fftfb_t::~fftfb_t ( )

5.216.3 Member Function Documentation
```

Return filter shape window at index k in band b.

unsigned int k,

#### **Parameters**

k	Frequency index
b	Band index

5.216.4 Member Data Documentation

```
5.216.4.1 unsigned int* MHAOvlFilter::fftfb_t::vbin1 [private]
5.216.4.2 unsigned int* MHAOvlFilter::fftfb_t::vbin2 [private]
5.216.4.3 mha_real_t(* MHAOvlFilter::fftfb_t::shape) (mha_real_t) [private]
5.216.4.4 unsigned int MHAOvlFilter::fftfb_t::fftlen [private]
5.216.4.5 mha_real_t MHAOvlFilter::fftfb_t::samplingrate [private]
```

unsigned int b ) const [inline]


The documentation for this class was generated from the following files:

- mha fftfb.hh
- mha\_fftfb.cpp

## 5.217 MHAOvIFilter::fftfb\_vars\_t Class Reference

Set of configuration variables for FFT-based overlapping filters.

Inheritance diagram for MHAOvIFilter::fftfb\_vars\_t:

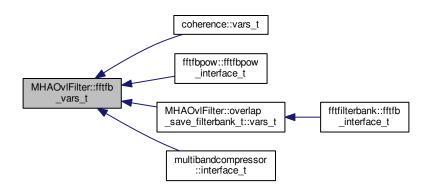

## **Public Member Functions**

fftfb\_vars\_t (MHAParser::parser\_t &p)

construct a set of openMHA configuration language variables suitable for configuring the FFT-based overlapping filterbank.

## **Public Attributes**

scale\_var\_t fscale

Frequency scale type (lin/bark/log/erb).

scale\_var\_t ovltype

Filter shape (rect/lin/hann).

MHAParser::float\_t plateau

relative plateau width.

MHAParser::kw\_t ftype

Flag to decide wether edge or center frequencies are used.

fscale\_t f

Frequency.

MHAParser::bool t normalize

Normalize sum of channels.

MHAParser::bool\_t fail\_on\_nonmonotonic

Fail if frequency entries are non-monotonic (otherwise sort)

MHAParser::bool\_t fail\_on\_unique\_bins

Fail if center frequencies share the same FFT bin.

MHAParser::vfloat\_mon\_t cf

Final center frequencies in Hz.

MHAParser::vfloat\_mon\_t ef

Final edge frequencies in Hz.

MHAParser::vfloat\_mon\_t cLTASS

Bandwidth correction for LTASS noise (level of 0 dB RMS LTASS noise)

MHAParser::mfloat\_mon\_t shapes

#### 5.217.1 Detailed Description

Set of configuration variables for FFT-based overlapping filters.

This class enables easy configuration of the FFT-based overlapping filterbank. An instance of **fftfb\_vars\_t** (p. 584) creates openMHA configuration language variables needed for configuring the filterbank, and inserts these variables in the openMHA configuration tree.

This way, the variables are visible to the user and can be configured using the openMHA configuration language.

5.217.2 Constructor & Destructor Documentation

construct a set of openMHA configuration language variables suitable for configuring the FFT-based overlapping filterbank.

## **Parameters**

*p* The node of the configuration tree where the variables created by this instance are inserted.

5.217.3 Member Data Documentation

5.217.3.1 scale\_var\_t MHAOvlFilter::fftfb\_vars\_t::fscale

Frequency scale type (lin/bark/log/erb).

5.217.3.2 scale\_var\_t MHAOvlFilter::fftfb\_vars\_t::ovltype

Filter shape (rect/lin/hann).

5.217.3.3 MHAParser::float\_t MHAOvlFilter::fftfb\_vars\_t::plateau

relative plateau width.

5.217.3.4 MHAParser::kw\_t MHAOvlFilter::fftfb\_vars\_t::ftype

Flag to decide wether edge or center frequencies are used.

5.217.3.5 fscale\_t MHAOvIFilter::fftfb\_vars\_t::f

Frequency.

5.217.3.6 MHAParser::bool t MHAOvlFilter::fftfb\_vars\_t::normalize

Normalize sum of channels.

5.217.3.7 MHAParser::bool\_t MHAOvlFilter::fftfb\_vars\_t::fail\_on\_nonmonotonic

Fail if frequency entries are non-monotonic (otherwise sort)

5.217.3.8 MHAParser::bool\_t MHAOvlFilter::fftfb\_vars\_t::fail\_on\_unique\_bins

Fail if center frequencies share the same FFT bin.

5.217.3.9 MHAParser::vfloat\_mon\_t MHAOvlFilter::fftfb\_vars\_t::cf

Final center frequencies in Hz.

5.217.3.10 MHAParser::vfloat\_mon\_t MHAOvlFilter::fftfb\_vars\_t::ef

Final edge frequencies in Hz.

5.217.3.11 MHAParser::vfloat\_mon\_t MHAOvlFilter::fftfb\_vars\_t::cLTASS

Bandwidth correction for LTASS noise (level of 0 dB RMS LTASS noise)


5.217.3.12 MHAParser::mfloat\_mon\_t MHAOvlFilter::fftfb\_vars\_t::shapes

The documentation for this class was generated from the following files:

- mha\_fftfb.hh
- mha\_fftfb.cpp

5.218 MHAOvlFilter::fscale\_bw\_t Class Reference

Inheritance diagram for MHAOvIFilter::fscale\_bw\_t:

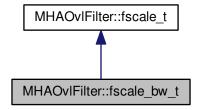

## **Public Member Functions**

- fscale\_bw\_t (MHAParser::parser\_t &parent)
- std::vector< mha\_real\_t > get\_bw\_hz () const

## **Protected Attributes**

MHAParser::vfloat\_t bw

MHAParser::vfloat\_mon\_t bw\_hz

**Private Member Functions** 

• void update\_hz ()

**Private Attributes** 

MHAEvents::connector\_t< fscale\_bw\_t > updater

#### **Additional Inherited Members**

```
5.218.1 Constructor & Destructor Documentation
```

```
5.218.1.1 MHAOvlFilter::fscale_bw_t::fscale_bw_t (
MHAParser::parser_t & parent )
```

5.218.2 Member Function Documentation

```
5.218.2.1 std::vector< mha_real_t > MHAOvlFilter::fscale_bw_t::get_bw_hz ( ) const
```

```
5.218.2.2 void MHAOvlFilter::fscale_bw_t::update_hz( ) [private]
```

5.218.3 Member Data Documentation

```
5.218.3.1 MHAParser::vfloat_t MHAOvlFilter::fscale_bw_t::bw [protected]
```

**5.218.3.2** MHAParser::vfloat mon t MHAOvlFilter::fscale\_bw\_t::bw\_hz [protected]


**5.218.3.3 MHAEvents::connector\_t**<**fscale\_bw\_t**> MHAOvlFilter::fscale\_bw\_t::updater [private]

The documentation for this class was generated from the following files:

- · mha\_fftfb.hh
- mha\_fftfb.cpp

## 5.219 MHAOvlFilter::fscale\_t Class Reference

Inheritance diagram for MHAOvIFilter::fscale\_t:

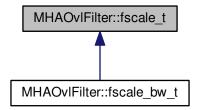

#### **Public Member Functions**

- fscale\_t (MHAParser::parser\_t &parent)
- std::vector< mha\_real\_t > get\_f\_hz () const

#### **Public Attributes**

- scale\_var\_t unit
- MHAParser::vfloat\_t f
- MHAParser::vfloat\_mon\_t f\_hz

## **Private Member Functions**

void update\_hz ()

#### **Private Attributes**

MHAEvents::connector\_t< fscale\_t > updater

```
5.219.1 Constructor & Destructor Documentation
```

```
5.219.1.1 MHAOvlFilter::fscale_t::fscale_t (
MHAParser::parser_t & parent )
```

5.219.2 Member Function Documentation

```
5.219.2.1 std::vector< mha real t > MHAOvlFilter::fscale_t::get_f_hz( ) const
```

- 5.219.2.2 void MHAOvlFilter::fscale\_t::update\_hz( ) [private]
- 5.219.3 Member Data Documentation
- 5.219.3.1 scale\_var\_t MHAOvlFilter::fscale\_t::unit
- 5.219.3.2 MHAParser::vfloat\_t MHAOvlFilter::fscale\_t::f
- 5.219.3.3 MHAParser::vfloat\_mon\_t MHAOvlFilter::fscale\_t::f\_hz
- **5.219.3.4** MHAEvents::connector\_t<fscale\_t> MHAOvlFilter::fscale\_t::updater [private]

The documentation for this class was generated from the following files:

- · mha\_fftfb.hh
- mha\_fftfb.cpp

## 5.220 MHAOvIFilter::fspacing\_t Class Reference

Class for frequency spacing, used by filterbank shape generator class.

Inheritance diagram for MHAOvIFilter::fspacing\_t:



#### **Public Member Functions**

- fspacing\_t (const MHAOvIFilter::fftfb\_vars\_t &par, unsigned int nfft, mha\_real\_t fs)
- std::vector< unsigned int > get\_cf\_fftbin () const
- std::vector< mha real t > get cf hz () const
- std::vector< mha\_real\_t > get\_ef\_hz () const
- unsigned int **nbands** () const

Return number of bands in filter bank.

#### **Protected Member Functions**

- void fail\_on\_nonmonotonic\_cf ()
- void fail\_on\_unique\_fftbins ()

## **Protected Attributes**

- std::vector< MHAOvIFilter::band descriptor t > bands
- mha\_real\_t(\* symmetry\_scale )(mha\_real\_t)

## **Private Member Functions**

- void ef2bands (std::vector< mha real t > vef)
- void cf2bands (std::vector< mha\_real\_t > vcf)
- void equidist2bands (std::vector< mha\_real\_t > vcf)

## **Private Attributes**

- unsigned int nfft\_
- mha\_real\_t fs\_

```
5.220.1 Detailed Description
```

Class for frequency spacing, used by filterbank shape generator class.


```
5.220.2 Constructor & Destructor Documentation
5.220.2.1 MHAOvlFilter::fspacing_t::fspacing_t (
                      const MHAOvlFilter::fftfb_vars_t & par,
                      unsigned int nfft,
                      mha real t fs )
5.220.3 Member Function Documentation
5.220.3.1 std::vector< unsigned int > MHAOvIFilter::fspacing_t::get_cf_fftbin( ) const
5.220.3.2 std::vector< mha_real_t > MHAOvlFilter::fspacing_t::get_cf_hz( ) const
5.220.3.3 std::vector< mha real t > MHAOvIFilter::fspacing_t::get_ef_hz( ) const
5.220.3.4 unsigned int MHAOvIFilter::fspacing_t::nbands ( ) const [inline]
Return number of bands in filter bank.
5.220.3.5 void MHAOvIFilter::fspacing_t::fail_on_nonmonotonic_cf( ) [protected]
5.220.3.6 void MHAOvlFilter::fspacing_t::fail_on_unique_fftbins() [protected]
5.220.3.7 void MHAOvlFilter::fspacing_t::ef2bands (
                      std::vector< mha_real_t > vef ) [private]
5.220.3.8 void MHAOvlFilter::fspacing t::cf2bands (
                      std::vector< mha_real_t > vcf ) [private]
5.220.3.9 void MHAOvlFilter::fspacing_t::equidist2bands (
                      std::vector< mha_real_t > vcf ) [private]
5.220.4 Member Data Documentation
5.220.4.1 std::vector<MHAOvIFilter::band descriptor t> MHAOvIFilter::fspacing t::bands
          [protected]
5.220.4.2 mha real t(* MHAOvIFilter::fspacing_t::symmetry_scale) (mha real t) [protected]
5.220.4.3 unsigned int MHAOvlFilter::fspacing_t::nfft_ [private]
5.220.4.4 mha_real_t MHAOvlFilter::fspacing_t::fs_ [private]
```

The documentation for this class was generated from the following files:

- mha fftfb.hh
- mha\_fftfb.cpp

## 5.221 MHAOvlFilter::overlap\_save\_filterbank\_analytic\_t Class Reference

Inheritance diagram for MHAOvIFilter::overlap\_save\_filterbank\_analytic\_t:

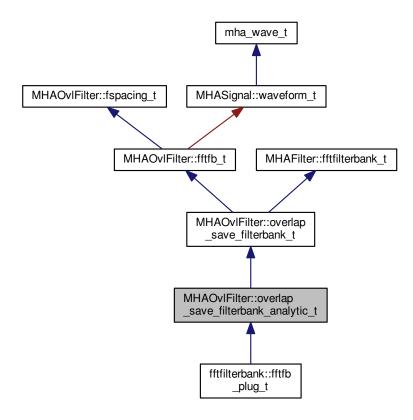

## **Public Member Functions**

- overlap\_save\_filterbank\_analytic\_t (MHAOvlFilter::overlap\_save\_filterbank\_t←
   ::vars\_t &fbpar, mhaconfig\_t channelconfig\_in)
- void filter\_analytic (const mha\_wave\_t \*sln, mha\_wave\_t \*\*fltRe, mha\_wave\_t \*\*fltColor
   lm)

## **Private Attributes**

MHAFilter::fftfilterbank\_t imagfb

# 5.222 MHAOvlFilter::overlap\_save\_filterbank\_t Class Reference 593

Additional Inherited Members
5.221.1 Constructor & Destructor Documentation
5.221.1.1 MHAOvlFilter::overlap_save_filterbank_analytic_t::overlap_save_filterbank_analytic_t (
5.221.2 Member Function Documentation
5.221.2.1 void MHAOvlFilter::overlap_save_filterbank_analytic_t::filter_analytic (
5.221.3 Member Data Documentation
5.221.3.1 MHAFilter::fftfilterbank_t MHAOvlFilter::overlap_save_filterbank_analytic_t::imagfb [private]
The documentation for this class was generated from the following files:


(p. 581).

5.222 MHAOvlFilter::overlap\_save\_filterbank\_t Class Reference

A time-domain minimal phase filter bank with frequency shapes from MHAOvIFilter::fftfb\_t

mha\_fftfb.hhmha\_fftfb.cpp

Inheritance diagram for MHAOvIFilter::overlap\_save\_filterbank\_t:

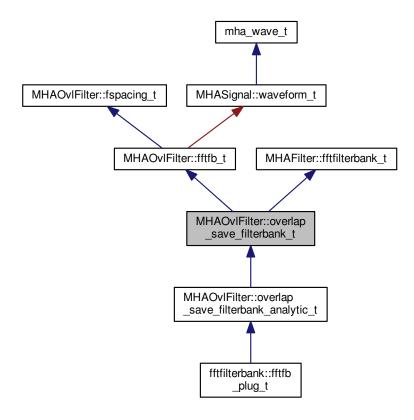

## Classes

class vars\_t

## **Public Member Functions**

- overlap\_save\_filterbank\_t (MHAOvlFilter::overlap\_save\_filterbank\_t::vars\_t &fbpar, mhaconfig\_t channelconfig\_in)
- mhaconfig\_t get\_channelconfig () const

## **Private Attributes**

mhaconfig\_t channelconfig\_out\_

#### **Additional Inherited Members**

## 5.222.1 Detailed Description


A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb\_t** (p. 581).

- 5.222.2 Constructor & Destructor Documentation
- 5.222.3 Member Function Documentation
- 5.222.3.1 mhaconfig\_t MHAOvlFilter::overlap\_save\_filterbank\_t::get\_channelconfig ( ) const [inline]
- 5.222.4 Member Data Documentation
- **5.222.4.1 mhaconfig\_t** MHAOvlFilter::overlap\_save\_filterbank\_t::channelconfig\_out\_ [private]

The documentation for this class was generated from the following files:

- · mha fftfb.hh
- mha\_fftfb.cpp
- 5.223 MHAOvlFilter::overlap\_save\_filterbank\_t::vars\_t Class Reference

Inheritance diagram for MHAOvIFilter::overlap\_save\_filterbank\_t::vars\_t:

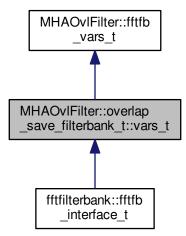

**Public Member Functions** 

vars\_t (MHAParser::parser\_t &p)

## **Public Attributes**


- MHAParser::int\_t fftlen
- MHAParser::kw\_t phasemodel
- MHAParser::window\_t irswnd
- 5.223.1 Constructor & Destructor Documentation
- 5.223.2 Member Data Documentation
- 5.223.2.1 MHAParser::int\_t MHAOvlFilter::overlap\_save\_filterbank\_t::vars\_t::fftlen
- 5.223.2.2 MHAParser::kw\_t MHAOvlFilter::overlap\_save\_filterbank\_t::vars\_t::phasemodel
- 5.223.2.3 MHAParser::window\_t MHAOvlFilter::overlap\_save\_filterbank\_t::vars\_t::irswnd

The documentation for this class was generated from the following files:

- mha\_fftfb.hh
- mha\_fftfb.cpp

# 5.224 MHAOvlFilter::scale\_var\_t Class Reference

Inheritance diagram for MHAOvIFilter::scale\_var\_t:

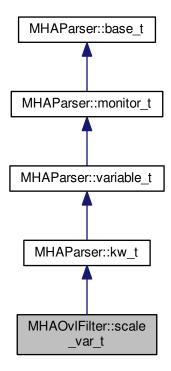

## **Public Member Functions**

- scale\_var\_t (const std::string &help)
- void add\_fun (const std::string &name, scale\_fun\_t \*fun)
- std::string **get\_name** () const
- scale\_fun\_t \* get\_fun () const
- mha\_real\_t hz2unit (mha\_real\_t x) const
- mha\_real\_t unit2hz (mha\_real\_t x) const

# **Private Attributes**

- std::vector< std::string > names
- std::vector< scale\_fun\_t \*> funs

```
Additional Inherited Members
```

```
5.224.1 Constructor & Destructor Documentation
5.224.1.1 MHAOvIFilter::scale_var_t::scale_var_t (
                      const std::string & help )
5.224.2 Member Function Documentation
5.224.2.1 void MHAOvlFilter::scale_var_t::add_fun (
                       const std::string & name,
                       scale_fun_t * fun )
5.224.2.2 std::string MHAOvlFilter::scale_var_t::get_name( ) const [inline]
5.224.2.3 scale fun t* MHAOvlFilter::scale_var_t::get_fun( ) const [inline]
5.224.2.4 mha_real_t MHAOvlFilter::scale_var_t::hz2unit (
                       mha_real_t x ) const
5.224.2.5 mha real t MHAOvlFilter::scale_var_t::unit2hz (
                      mha real tx) const
5.224.3 Member Data Documentation
5.224.3.1 std::vector<std::string> MHAOvlFilter::scale_var_t::names [private]
5.224.3.2 std::vector<scale_fun_t*> MHAOvlFilter::scale_var_t::funs [private]
```


The documentation for this class was generated from the following files:

- · mha\_fftfb.hh
- mha\_fftfb.cpp

# 5.225 MHAParser::base\_t Class Reference

Base class for all parser items.

Inheritance diagram for MHAParser::base\_t:

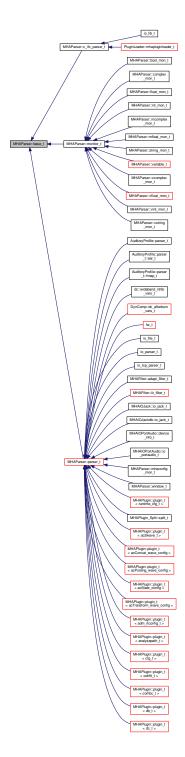

# **Classes**

class replace\_t

#### **Public Member Functions**

base\_t (const std::string &)

Constructor for base class of all parser nodes.

- base\_t (const base\_t &)
- virtual ~base t ()
- virtual std::string parse (const std::string &)

Causes this node to process a command in the openMHA configuration language.

virtual void parse (const char \*, char \*, unsigned int)

This function parses a command and writes the parsing result into a C character array.

- virtual void **parse** (const std::vector< std::string > &, std::vector< std::string > &)
- virtual std::string op subparse (expression t &)
- virtual std::string op\_setval (expression\_t &)
- virtual std::string op\_query (expression\_t &)
- virtual std::string query\_dump (const std::string &)
- virtual std::string query\_entries (const std::string &)
- virtual std::string query\_perm (const std::string &)
- virtual std::string query\_range (const std::string &)
- virtual std::string query\_type (const std::string &)
- virtual std::string query\_val (const std::string &)
- virtual std::string query\_readfile (const std::string &)
- virtual std::string query savefile (const std::string &)
- virtual std::string query\_savefile\_compact (const std::string &)
- virtual std::string query\_savemons (const std::string &)
- virtual std::string query\_listids (const std::string &)
- std::string query version (const std::string &)
- std::string query\_id (const std::string &)
- std::string query\_subst (const std::string &)
- std::string query addsubst (const std::string &)
- std::string query\_help (const std::string &)
- std::string query\_cmds (const std::string &)
- void set\_node\_id (const std::string &)

Set the identification string of this parser node.

• void set help (const std::string &)

Set the help comment of a variable or parser.

- void add\_parent\_on\_insert (parser\_t \*, std::string)
- void rm\_parent\_on\_remove (parser\_t \*)
- const std::string & fullname () const

Return the full dot-separated path name of this parser node in the openMHA configuration tree.

## **Public Attributes**

MHAEvents::emitter t writeaccess

Event emitted on write access.

MHAEvents::emitter t valuechanged

Event emitted if the value has changed.

MHAEvents::emitter\_t readaccess

Event emitted on read access.

MHAEvents::emitter\_t prereadaccess

Event emitted on read access, before the data field is accessed.

#### **Protected Member Functions**

- void activate\_query (const std::string &, query\_t)
- · void notify ()

#### **Protected Attributes**

- query\_map\_t queries
- bool data\_is\_initialized

## **Private Types**

typedef std::vector< replace\_t > repl\_list\_t

#### **Private Member Functions**

- void add\_replace\_pair (const std::string &, const std::string &)
- std::string oplist ()

## **Private Attributes**

- std::string help
- std::string id\_str
- opact\_map\_t operators
- repl\_list\_t repl\_list
- bool nested lock
- parser\_t \* parent
- std::string thefullname

#### 5.225.1 Detailed Description

Base class for all parser items.

The key method of the parser base class is the std::string **parse(const std::string&)** (p. 602) method. Parser proxy derivatives which overwrite any of the other **parse()** (p. 602) methods to be the key method must make sure that the original **parse()** (p. 602) method utilizes the new key method.

```
5.225.2 Member Typedef Documentation
```

```
5.225.2.1 typedef std::vector<replace_t> MHAParser::base_t::repl_list_t [private]
```

5.225.3 Constructor & Destructor Documentation

```
5.225.3.1 MHAParser::base_t::base_t (
const std::string & h )
```

Constructor for base class of all parser nodes.

#### **Parameters**

h Help text describing this parser node. This help text is accessible to the configuration language through the "?help" query command.

Causes this node to process a command in the openMHA configuration language.

## **Parameters**

```
cs The command to parse
```

# Returns

The response to the command, if successful

# **Exceptions**

<b>MHA_Error</b> (p. 413)	If the command cannot be executed successfully. The reason for
	failure is given in the message string of the exception.

Reimplemented in **PluginLoader::mhapluginloader\_t** (p. 845), and **altplugs\_t** (p. 201).

```
5.225.4.2 void MHAParser::base t::parse (
                       const char * cmd,
                       char * retv.
                       unsigned int len ) [virtual]
```

This function parses a command and writes the parsing result into a C character array.

This base class implementation delegates to parse(const std::string &) (p. 602).

#### **Parameters**

cmd	Command to be parsed
retv	Buffer for the result
len	Length of buffer

```
Reimplemented in altplugs_t (p. 201).
5.225.4.3 void MHAParser::base_t::parse (
                     const std::vector< std::string > & cs,
                     std::vector < std::string > & retv ) [virtual]
5.225.4.4 std::string MHAParser::base t::op subparse (
                     expression t& ) [virtual]
Reimplemented in MHAParser::c_ifc_parser_t (p. 614), and MHAParser::parser_t (p. 654).
5.225.4.5 std::string MHAParser::base_t::op_setval (
                     expression_t & ) [virtual]
Reimplemented in MHAParser::mcomplex_t (p. 640), MHAParser::mfloat_t (p. 644), MH←
AParser::vcomplex_t (p. 668), MHAParser::vfloat_t (p. 672), MHAParser::vint_t (p. 676),
MHAParser::complex_t (p. 620), MHAParser::float_t (p. 626), MHAParser::int_t (p. 631),
MHAParser::bool_t (p. 612), MHAParser::vstring_t (p. 680), MHAParser::string_t (p. 662),
MHAParser::kw_t (p. 636), MHAParser::variable_t (p. 664), MHAParser::c_ifc_parser_
t (p. 614), and MHAParser::parser_t (p. 654).
5.225.4.6 std::string MHAParser::base_t::op_query (
                     expression t& ) [virtual]
Reimplemented in MHAParser::monitor_t (p. 650), MHAParser::c_ifc_parser_t (p. 614),
and MHAParser::parser_t (p. 654).
5.225.4.7 std::string MHAParser::base_t::query_dump (
                     const std::string & s ) [virtual]
```

Reimplemented in MHAParser::monitor\_t (p. 651), and MHAParser::parser\_t (p. 654).

```
5.225.4.8 std::string MHAParser::base_t::query_entries (
                    const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 655).
5.225.4.9 std::string MHAParser::base_t::query_perm (
                    const std::string & s ) [virtual]
Reimplemented in MHAParser::variable t (p. 664), and MHAParser::monitor t (p. 651).
5.225.4.10 std::string MHAParser::base t::query range (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::kw_t (p. 636), and MHAParser::range_var_t (p. 657).
5.225.4.11 std::string MHAParser::base_t::query_type (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::mcomplex mon t (p. 638), MHAParser::vcomplex mon ←
t (p. 666), MHAParser::complex mon t (p. 618), MHAParser::float mon t (p. 624),
MHAParser::mfloat mon t (p. 642), MHAParser::vfloat mon t (p. 670), MHAParser↔
::vint_mon_t (p. 674), MHAParser::vstring_mon_t (p. 678), MHAParser::string_mon \infty
_t (p. 660), MHAParser::bool_mon_t (p. 610), MHAParser::int_mon_t (p. 628), MH←
AParser::mcomplex_t (p. 640), MHAParser::mfloat_t (p. 644), MHAParser::vcomplex_t
(p. 668), MHAParser::vfloat t (p. 672), MHAParser::vint t (p. 676), MHAParser::complex←
_t (p. 620), MHAParser::float_t (p. 626), MHAParser::int_t (p. 631), MHAParser::bool_t
(p. 612), MHAParser::vstring_t (p. 680), MHAParser::string_t (p. 662), MHAParser::kw_t
(p. 636), and MHAParser::parser_t (p. 654).
5.225.4.12 std::string MHAParser::base_t::query_val (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::mcomplex mon t (p. 638), MHAParser::vcomplex mon←
_t (p. 666), MHAParser::complex_mon_t (p. 618), MHAParser::float_mon_t (p. 624),
MHAParser::mfloat_mon_t (p. 642), MHAParser::vfloat_mon_t (p. 670), MHAParser (p. 670)
::vint_mon_t (p. 674), MHAParser::vstring_mon_t (p. 678), MHAParser::string_mon \infty
t (p. 660), MHAParser::bool mon t (p. 610), MHAParser::int mon t (p. 628), MH←
AParser::mcomplex_t (p. 640), MHAParser::mfloat_t (p. 644), MHAParser::vcomplex_t
(p. 668), MHAParser::vfloat_t (p. 672), MHAParser::vint_t (p. 676), MHAParser::complex
_t (p. 620), MHAParser::float_t (p. 626), MHAParser::int_t (p. 631), MHAParser::bool_t
(p. 612), MHAParser::vstring_t (p. 680), MHAParser::string_t (p. 662), MHAParser::kw_t
(p. 636), and MHAParser::parser_t (p. 655).
5.225.4.13 std::string MHAParser::base_t::query_readfile (
                     const std::string & s ) [virtual]
Reimplemented in MHAParser::parser t (p. 655).
```

```
5.225.4.14 std::string MHAParser::base_t::query_savefile (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 655).
5.225.4.15 std::string MHAParser::base_t::query_savefile_compact (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 655).
5.225.4.16 std::string MHAParser::base_t::query_savemons (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser t (p. 655).
5.225.4.17 std::string MHAParser::base_t::query_listids (
                        const std::string & s ) [virtual]
Reimplemented in MHAParser::parser_t (p. 655).
5.225.4.18 std::string MHAParser::base_t::query_version (
                        const std::string & )
5.225.4.19 std::string MHAParser::base_t::query_id (
                        const std::string & )
5.225.4.20 std::string MHAParser::base_t::query_subst (
                        const std::string & s )
5.225.4.21 std::string MHAParser::base_t::query_addsubst (
                        const std::string & s )
5.225.4.22 std::string MHAParser::base_t::query_help (
                        const std::string & s )
5.225.4.23 std::string MHAParser::base_t::query_cmds (
                        const std::string & s )
5.225.4.24 void MHAParser::base_t::set_node_id (
                        const std::string & s )
```

Set the identification string of this parser node.

The id can be queried from the configuration language using the ?id query command. Nodes can be found by id using the ?listid query command on a containing parser node.

# **Parameters**

s The new identification string.

```
5.225.4.25 void MHAParser::base_t::set_help (
const std::string & s)
```

Set the help comment of a variable or parser.

#### **Parameters**

```
s | New help comment.
```

Return the full dot-separated path name of this parser node in the openMHA configuration tree.

Event emitted on write access.

To connect a callback that is invoked on write access to this parser variable, use MHAEvents—::patchbay\_t<receiver\_t> method connect(&writeaccess,&receiver\_t::callback) where callback is a method that expects no parameters and returns void.

# 5.225.5.2 MHAEvents::emitter\_t MHAParser::base\_t::valuechanged

Event emitted if the value has changed.

To connect a callback that is invoked when write access to this parser variable actually changes its value, use MHAEvents::patchbay\_t<receiver\_t> method connect(&valuechanged,&receiver — t::callback) where callback is a method that expects no parameters and returns void.

# 5.225.5.3 MHAEvents::emitter\_t MHAParser::base\_t::readaccess

Event emitted on read access.

To connect a callback that is invoked after the value of this variable has been read through the configuration interface, use MHAEvents::patchbay\_t<receiver\_t> method connect(&readaccess,&receiver\_t::callback) where callback is a method that expects no parameters and returns void.

## 5.225.5.4 MHAEvents::emitter\_t MHAParser::base\_t::prereadaccess

Event emitted on read access, before the data field is accessed.

To connect a callback that is invoked when the value of this variable is about to be read through the configuration interface, so that the callback can influence the value that is reported, use MHAEvents::patchbay\_t<receiver\_t> method connect(&prereadaccess,&receiver\_t::callback) where callback is a method that expects no parameters and returns void.

```
5.225.5.5 query_map_t MHAParser::base_t::queries [protected]
5.225.5.6 bool MHAParser::base_t::data_is_initialized [protected]
5.225.5.7 std::string MHAParser::base_t::help [private]
5.225.5.8 std::string MHAParser::base_t::id_str [private]
5.225.5.9 opact_map_t MHAParser::base_t::operators [private]
5.225.5.10 repl_list_t MHAParser::base_t::repl_list [private]
5.225.5.11 bool MHAParser::base_t::nested_lock [private]
5.225.5.12 parser_t* MHAParser::base_t::parent [private]
5.225.5.13 std::string MHAParser::base_t::thefullname [private]
```

The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.226 MHAParser::base\_t::replace\_t Class Reference

#### **Public Member Functions**

```
    replace_t (const std::string &, const std::string &)
```

- void replace (std::string &)
- const std::string & get\_a () const
- const std::string & get\_b () const

#### **Private Attributes**

- std::string a
- std::string b
- 5.226.1 Constructor & Destructor Documentation
- 5.226.2 Member Function Documentation
- 5.226.2.1 void MHAParser::base\_t::replace\_t::replace ( std::string & s )
- 5.226.2.2 const std::string& MHAParser::base\_t::replace\_t::get\_a( ) const [inline]
- 5.226.2.3 const std::string& MHAParser::base\_t::replace\_t::get\_b ( ) const [inline]
- 5.226.3 Member Data Documentation
- **5.226.3.1** std::string MHAParser::base\_t::replace\_t::a [private]
- **5.226.3.2 std::string** MHAParser::base\_t::replace\_t::b [private]


The documentation for this class was generated from the following files:

- · mha parser.hh
- mha\_parser.cpp

5.227 MHAParser::bool\_mon\_t Class Reference

Monitor with string value.

Inheritance diagram for MHAParser::bool\_mon\_t:

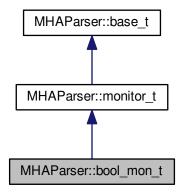

#### **Public Member Functions**

bool\_mon\_t (const std::string &hlp)
 Create a monitor variable for string values.

# **Public Attributes**

• bool **data**Data field.

## **Protected Member Functions**

- std::string query\_val (const std::string &)
- std::string query\_type (const std::string &)

#### **Additional Inherited Members**

5.227.1 Detailed Description

Monitor with string value.

5.227.2 Constructor & Destructor Documentation

Create a monitor variable for string values.

Pa	ra	m	e	ŀρ	rs

*hlp* A help text describing this monitor variable.

5.227.3 Member Function Documentation

Reimplemented from MHAParser::base\_t (p. 604).

Reimplemented from **MHAParser::base\_t** (p. 604).

5.227.4 Member Data Documentation

5.227.4.1 bool MHAParser::bool\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

5.228 MHAParser::bool\_t Class Reference

Variable with a boolean value ("yes"/"no")

Inheritance diagram for MHAParser::bool\_t:

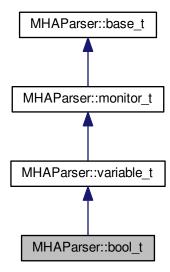

## **Public Member Functions**

• **bool\_t** (const std::string &help\_text, const std::string &initial\_value)

Constructor for a configuration language variable for boolean values.

# **Public Attributes**

• bool **data**Data field.

# **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

## **Additional Inherited Members**

# 5.228.1 Detailed Description

Variable with a boolean value ("yes"/"no")

## 5.228.2 Constructor & Destructor Documentation

Constructor for a configuration language variable for boolean values.

#### **Parameters**

help_text	A human-readable text describing the purpose of this configuration variable.
initial_value	The initial value for this variable as a string. The string representation of 'true'
	is either "yes" or "1". The string representation of 'false' is either "no" or "0".

#### 5.228.3 Member Function Documentation

Reimplemented from **MHAParser::variable\_t** (p. 664).

Reimplemented from MHAParser::base\_t (p. 604).

Reimplemented from **MHAParser::base\_t** (p. 604).

5.228.4 Member Data Documentation

5.228.4.1 bool MHAParser::bool\_t::data


Data field.

The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.229 MHAParser::c\_ifc\_parser\_t Class Reference

Inheritance diagram for MHAParser::c\_ifc\_parser\_t:

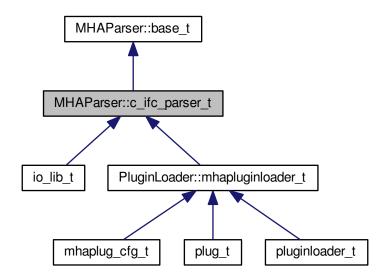

## **Public Member Functions**

- c\_ifc\_parser\_t (const std::string &modulename\_)
- $\sim$ c\_ifc\_parser\_t ()
- void set\_parse\_cb (c\_parse\_cmd\_t, c\_parse\_err\_t, void \*)

# **Protected Member Functions**

- std::string op\_subparse (MHAParser::expression\_t &)
- std::string op\_setval (MHAParser::expression\_t &)
- std::string op\_query (MHAParser::expression\_t &)

## **Private Member Functions**

void test\_error ()

#### **Private Attributes**

```
    std::string modulename
```

- c\_parse\_cmd\_t c\_parse\_cmd
- · c\_parse\_err\_t c\_parse\_err
- int liberr
- void \* libdata
- unsigned int ret\_size
- char \* retv

#### **Additional Inherited Members**

```
5.229.1 Constructor & Destructor Documentation
5.229.1.1 MHAParser::c ifc parser t::c ifc parser t (
                     const std::string & modulename )
5.229.1.2 MHAParser::c_ifc_parser_t::~c_ifc_parser_t ( )
5.229.2 Member Function Documentation
5.229.2.1 void MHAParser::c_ifc_parser_t::set_parse_cb (
                     MHAParser::c parse cmd t cb,
                     MHAParser::c_parse_err_t strerr,
                     void * d)
5.229.2.2 std::string MHAParser::c ifc parser t::op subparse (
                     MHAParser::expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 603).
5.229.2.3 std::string MHAParser::c_ifc_parser_t::op_setval (
                     MHAParser::expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 603).
5.229.2.4 std::string MHAParser::c_ifc_parser_t::op_query (
                     MHAParser::expression_t & x ) [protected], [virtual]
```

Reimplemented from **MHAParser::base\_t** (p. 603).

**5.229.2.5** void MHAParser::c\_ifc\_parser\_t::test\_error( ) [private]

5.229.3 Member Data Documentation

**5.229.3.1 std::string MHAParser::c\_ifc\_parser\_t::modulename** [private]

**5.229.3.2 c\_parse\_cmd\_t** MHAParser::c\_ifc\_parser\_t::c\_parse\_cmd [private]

**5.229.3.3 c\_parse\_err\_t** MHAParser::c\_ifc\_parser\_t::c\_parse\_err [private]

**5.229.3.4** int MHAParser::c\_ifc\_parser\_t::liberr [private]

**5.229.3.5 void**\* **MHAParser::c\_ifc\_parser\_t::libdata** [private]

**5.229.3.6 unsigned int MHAParser::c\_ifc\_parser\_t::ret\_size** [private]

**5.229.3.7 char**\* **MHAParser::c\_ifc\_parser\_t::retv** [private]


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

5.230 MHAParser::commit\_t< receiver\_t > Class Template Reference

Parser variable with event-emission functionality.

Inheritance diagram for MHAParser::commit\_t< receiver\_t >:

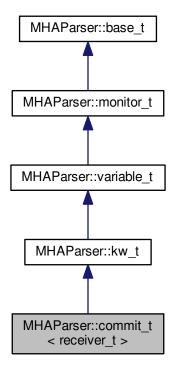

# **Public Member Functions**

commit\_t (receiver\_t \*, void(receiver\_t::\*)(), const std::string &help="Variable changes action")

# **Private Attributes**

MHAEvents::connector\_t< receiver\_t > extern\_connector

## **Additional Inherited Members**

# 5.230.1 Detailed Description

```
\label{template} \begin{split} & template {<} class \ receiver\_t {>} \\ & class \ MHAParser::commit\_t {<} \ receiver\_t {>} \\ \end{split}
```

Parser variable with event-emission functionality.

The **commit\_t** (p. 615) variable can register an event receiver in its constructor, which is called whenever the variable is set to "commit".

### 5.230.2 Constructor & Destructor Documentation

5.230.3 Member Data Documentation

```
5.230.3.1 template < class receiver_t > MHAEvents::connector_t < receiver_t > MHAParser::commit_t < receiver_t > ::extern_connector [private]
```


The documentation for this class was generated from the following file:

mha\_parser.hh

# 5.231 MHAParser::complex\_mon\_t Class Reference

Monitor with complex value.

Inheritance diagram for MHAParser::complex\_mon\_t:

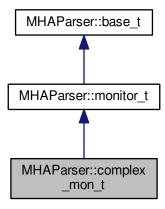

**Public Member Functions** 

complex\_mon\_t (const std::string &hlp)
 Create a complex monitor variable.

## **Public Attributes**

mha\_complex\_t data

Data field.

**Protected Member Functions** 

```
    std::string query_val (const std::string &)
```

• std::string query\_type (const std::string &)

**Additional Inherited Members** 

5.231.1 Detailed Description

Monitor with complex value.

5.231.2 Constructor & Destructor Documentation

5.231.2.1 MHAParser::complex\_mon\_t::complex\_mon\_t ( const std::string & hlp )

Create a complex monitor variable.

**Parameters** 

```
hlp A help text describing this monitor variable.
```

5.231.3 Member Function Documentation

Reimplemented from **MHAParser::base\_t** (p. 604).

Reimplemented from **MHAParser::base\_t** (p. 604).

#### 5.231.4 Member Data Documentation

# 5.231.4.1 mha\_complex\_t MHAParser::complex\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.232 MHAParser::complex\_t Class Reference

Variable with complex value.

Inheritance diagram for MHAParser::complex\_t:

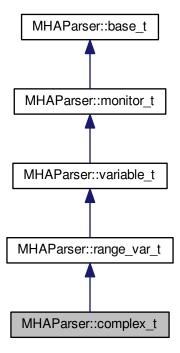

# **Public Member Functions**

complex\_t (const std::string &, const std::string &="")

#### **Public Attributes**

mha\_complex\_t data
 Data field.

**Protected Member Functions** 

```
std::string op_setval (expression_t &)
std::string query_type (const std::string &)
std::string query_val (const std::string &)
```

**Additional Inherited Members** 

```
5.232.1 Detailed Description
```

Variable with complex value.

```
5.232.2 Constructor & Destructor Documentation
```

5.232.3 Member Function Documentation

Reimplemented from **MHAParser::variable\_t** (p. 664).

Reimplemented from **MHAParser::base\_t** (p. 604).

Reimplemented from **MHAParser::base\_t** (p. 604).

```
5.232.4 Member Data Documentation
```

```
5.232.4.1 mha_complex_t MHAParser::complex_t::data
```

Data field.

The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.233 MHAParser::entry\_t Class Reference

**Public Member Functions** 

entry\_t (const std::string &, base\_t \*)

**Public Attributes** 

- std::string name
- base\_t \* entry

## 5.233.1 Constructor & Destructor Documentation

5.233.2 Member Data Documentation

5.233.2.1 std::string MHAParser::entry\_t::name

5.233.2.2 base\_t\* MHAParser::entry\_t::entry

The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.234 MHAParser::expression\_t Class Reference

# **Public Member Functions**

- expression\_t (const std::string &, const std::string &)
   Constructor.
- expression\_t ()

## **Public Attributes**

- std::string Ival
- std::string rval
- std::string op
- 5.234.1 Constructor & Destructor Documentation

## Constructor.

## **Parameters**

s	String to be splitted	
0	List of valid operators (single character only)	

```
5.234.1.2 expression_t::expression_t()
```

5.234.2 Member Data Documentation

5.234.2.1 std::string MHAParser::expression\_t::lval

5.234.2.2 std::string MHAParser::expression\_t::rval

5.234.2.3 std::string MHAParser::expression\_t::op


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.235 MHAParser::float\_mon\_t Class Reference

Monitor with float value.

Inheritance diagram for MHAParser::float\_mon\_t:

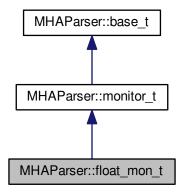

#### **Public Member Functions**

• float\_mon\_t (const std::string &hlp)
Initialize a floating point (32 bits) monitor variable.

# **Public Attributes**

float data

Data field.

# **Protected Member Functions**

- std::string query\_val (const std::string &)
- std::string query\_type (const std::string &)

#### **Additional Inherited Members**

5.235.1 Detailed Description

Monitor with float value.

5.235.2 Constructor & Destructor Documentation

5.235.2.1 MHAParser::float\_mon\_t::float\_mon\_t ( const std::string & hlp )

Initialize a floating point (32 bits) monitor variable.

_					
Pa	ra	m	D.	l۵	re

*hlp* A help text describing this monitor variable.

5.235.3 Member Function Documentation

Reimplemented from MHAParser::base\_t (p. 604).

Reimplemented from **MHAParser::base\_t** (p. 604).

5.235.4 Member Data Documentation

5.235.4.1 float MHAParser::float\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

5.236 MHAParser::float\_t Class Reference

Variable with float value.

Inheritance diagram for MHAParser::float\_t:

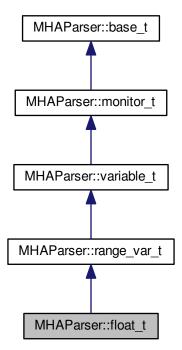

# **Public Member Functions**

• float\_t (const std::string &help\_text, const std::string &initial\_value, const std::string &range="")

Constructor for a configuration language variable for 32bit ieee floating-point values.

## **Public Attributes**

· float data

Data field.

## **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

**Additional Inherited Members** 

## 5.236.1 Detailed Description

Variable with float value.

#### 5.236.2 Constructor & Destructor Documentation

Constructor for a configuration language variable for 32bit ieee floating-point values.

#### **Parameters**

help_text	A human-readable text describing the purpose of this configuration variable.		
initial_value	The initial value for this variable as a string (decimal representation of the floating-point variable). If a range is given in the third parameter, then the initial value has to be within the range. A human-readable text describing the purpose of this configuration variable.		
range	The range of values that this variable can hold can be restricted. A range is a string of the form "[a,b]", where a and b are decimal representations of the inclusive boundaries of the range. a<=b. In a range of the form "]a,b[", both boundaries are excluded. Mixed forms are permitted. a or b can also be omitted if there is no lower or upper limit. The range of values is always restricted by the representable range of the underlying C data type.		

```
5.236.3 Member Function Documentation
```

Reimplemented from **MHAParser::base\_t** (p. 604).

## 5.236.4 Member Data Documentation

# 5.236.4.1 float MHAParser::float\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.237 MHAParser::int\_mon\_t Class Reference

Monitor variable with int value.

Inheritance diagram for MHAParser::int\_mon\_t:

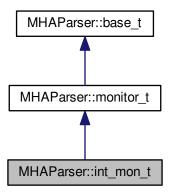

## **Public Member Functions**

int\_mon\_t (const std::string &hlp)
 Create a monitor variable for integral values.

## **Public Attributes**

• int data

Data field.

#### **Protected Member Functions**

```
• std::string query_val (const std::string &)
```

std::string query\_type (const std::string &)

**Additional Inherited Members** 

5.237.1 Detailed Description

Monitor variable with int value.

Monitor variables can be of many types. These variables can be queried through the parser. The public data element contains the monitored state. Write access is only possible from the C++ code by direct access to the data field.

5.237.2 Constructor & Destructor Documentation

Create a monitor variable for integral values.

#### **Parameters**

```
hlp A help text describing this monitor variable.
```

5.237.3 Member Function Documentation

Reimplemented from **MHAParser::base\_t** (p. 604).

Reimplemented from **MHAParser::base\_t** (p. 604).

## 5.237.4 Member Data Documentation

# 5.237.4.1 int MHAParser::int\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.238 MHAParser::int\_t Class Reference

Variable with integer value.

Inheritance diagram for MHAParser::int\_t:

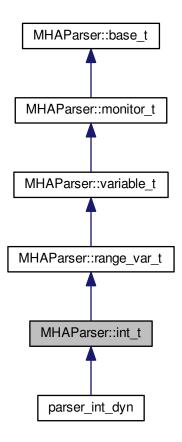

## **Public Member Functions**

• int\_t (const std::string &help\_text, const std::string &initial\_value, const std::string &range="")

Constructor for a configuration language variable for integral values.

# **Public Attributes**

• int data

Data field.

## **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

#### **Additional Inherited Members**

5.238.1 Detailed Description

Variable with integer value.

5.238.2 Constructor & Destructor Documentation

Constructor for a configuration language variable for integral values.

## **Parameters**

help_text	A human-readable text describing the purpose of this configuration variable.
initial_value	The initial value for this variable as a string (decimal representation of the integer variable). If a range is given in the third parameter, then the initial value has to be within the range.
range	The range of values that this variable can hold can be restricted. A range is a string of the form "[a,b]", where a and b are decimal representations of the integral inclusive boundaries of the range. a<=b. In a range of the form "]a,b[", both boundaries are excluded. Mixed forms are permitted. a or b can also be omitted if there is no lower or upper limit. The range of values is always restricted by the representable range of the underlying C data type (usually 32 bits, [-2147483648,2147483647]). © 2005-2018 HörTech gGmbH, Oldenburg

```
5.238.3 Member Function Documentation
5.238.3.1 std::string MHAParser::int_t::op_setval (
                     expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 664).
5.238.3.2 std::string MHAParser::int_t::query_type (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 604).
5.238.3.3 std::string MHAParser::int_t::query_val (
                     const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 604).
5.238.4 Member Data Documentation
5.238.4.1 int MHAParser::int_t::data
Data field.
The documentation for this class was generated from the following files:
   mha_parser.hh
   mha_parser.cpp
5.239 MHAParser::keyword_list_t Class Reference
Keyword list class.
Public Types
```

typedef std::vector< std::string >::size\_type size\_t

#### **Public Member Functions**

void set\_value (const std::string &)

Select a value from keyword list.

void set\_entries (const std::string &)

Set keyword list entries.

const std::string & get\_value () const

Return selected value.

const std::vector< std::string > & get\_entries () const

Return keyword list.

const size\_t & get\_index () const

Return index of selected value.

- void **set\_index** (unsigned int)
- void validate () const

Check if index of selected value is valid.

- void add\_entry (const std::string &en)
- keyword\_list\_t ()

Constructor.

## **Private Attributes**

size t index

Index into list.

std::vector< std::string > entries

List of valid entries.

std::string empty string

# 5.239.1 Detailed Description

Keyword list class.

The stucture **keyword\_list\_t** (p. 631) defines a keyword list (vector of strings) with an index into the list. Used as **MHAParser::kw\_t** (p. 634), it can be used to access a set of valid keywords through the parser (i.e. one of "pear apple banana").

5.239.2 Member Typedef Documentation

5.239.2.1 typedef std::vector<std::string>::size\_type MHAParser::keyword\_list\_t::size\_t

5.239.3 Constructor & Destructor Documentation

5.239.3.1 MHAParser::keyword\_list\_t::keyword\_list\_t ( )

Constructor.

```
5.239.4 Member Function Documentation
```

```
5.239.4.1 void MHAParser::keyword_list_t::set_value ( const std::string & s )
```

Select a value from keyword list.

This function selects a value from the keyword list. The index is set to the last matching entry.

#### **Parameters**

```
s Value to be selected.
```

```
5.239.4.2 void MHAParser::keyword_list_t::set_entries ( const std::string & s )
```

Set keyword list entries.

With this function, the keyword list can be set from a space separated string list.

#### **Parameters**

```
s | Space separated entry list.
```

```
5.239.4.3 const std::string & MHAParser::keyword_list_t::get_value ( ) const
```

Return selected value.

```
5.239.4.4 const std::vector< std::string > & MHAParser::keyword_list_t::get_entries ( ) const
```

Return keyword list.

```
5.239.4.5 const MHAParser::keyword_list_t::size_t & MHAParser::keyword_list_t::get_index ( ) const
```

Return index of selected value.

```
5.239.4.6 void MHAParser::keyword_list_t::set_index ( unsigned int idx )
```

5.239.4.7 void MHAParser::keyword\_list\_t::validate( ) const

Check if index of selected value is valid.

5.239.5 Member Data Documentation

**5.239.5.1 size\_t** MHAParser::keyword\_list\_t::index [private]

Index into list.

**5.239.5.2** std::vector<std::string> MHAParser::keyword\_list\_t::entries [private]

List of valid entries.

**5.239.5.3 std::string MHAParser::keyword\_list\_t::empty\_string** [private]


The documentation for this class was generated from the following files:

- · mha parser.hh
- mha\_parser.cpp

## 5.240 MHAParser::kw\_t Class Reference

Variable with keyword list value.

Inheritance diagram for MHAParser::kw\_t:

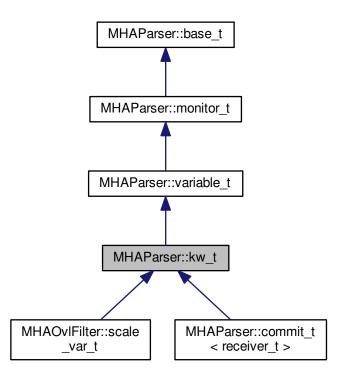

#### **Public Member Functions**

- **kw\_t** (const std::string &, const std::string &, const std::string &)

  Constructor of a keyword list openMHA configuration variable.
- kw\_t (const kw\_t &)

Copy constructor.

• void **set\_range** (const std::string &)

Set/change the list of valid entries.

bool isval (const std::string &) const

Test if the given value is selected.

### **Public Attributes**

keyword\_list\_t data

Variable data in its native type.

#### **Protected Member Functions**

- void validate (const keyword\_list\_t &)
- std::string op\_setval (expression\_t &)
- std::string query\_range (const std::string &)
- std::string query\_val (const std::string &)
- std::string query\_type (const std::string &)

**Additional Inherited Members** 

5.240.1 Detailed Description

Variable with keyword list value.

5.240.2 Constructor & Destructor Documentation

Constructor of a keyword list openMHA configuration variable.

#### **Parameters**

h	A help string describing the purpose of this variable.
V	The initial value, has to be a value from the list of possible values given in the last
© 200	parameter. 5-2018 HörTech gGmbH, Oldenburg
rg	
	The list of entries has to be delimited by brackets "[", "]".

```
5.240.2.2 MHAParser::kw_t::kw_t (
                      const kw_t & src )
Copy constructor.
5.240.3 Member Function Documentation
5.240.3.1 void MHAParser::kw_t::set_range (
                      const std::string & r )
Set/change the list of valid entries.
Parameters
    A string containing the list of valid entries. The entries have to be separated by spaces.
    The list of entries has to be delimited by brackets "[", "]".
5.240.3.2 bool MHAParser::kw_t::isval (
                      const std::string & testval ) const
Test if the given value is selected.
5.240.3.3 void MHAParser::kw t::validate (
                      const keyword_list_t & s ) [protected]
5.240.3.4 std::string MHAParser::kw_t::op_setval (
                      expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 664).
5.240.3.5 std::string MHAParser::kw_t::query_range (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 604).
5.240.3.6 std::string MHAParser::kw_t::query_val (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 604).
5.240.3.7 std::string MHAParser::kw_t::query_type (
                      const std::string & s ) [protected], [virtual]
```

Reimplemented from **MHAParser::base\_t** (p. 604).

5.240.4 Member Data Documentation

5.240.4.1 keyword\_list\_t MHAParser::kw\_t::data

Variable data in its native type.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

## 5.241 MHAParser::mcomplex\_mon\_t Class Reference

Matrix of complex numbers monitor.

Inheritance diagram for MHAParser::mcomplex\_mon\_t:

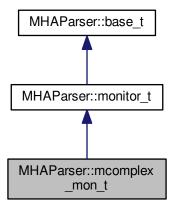

### **Public Member Functions**

mcomplex\_mon\_t (const std::string &hlp)
 Create a matrix of complex floating point monitor values.

## **Public Attributes**

std::vector< std::vector< mha\_complex\_t >> data
 Data field.

#### **Protected Member Functions**

```
std::string query_val (const std::string &)
```

std::string query\_type (const std::string &)

**Additional Inherited Members** 

5.241.1 Detailed Description

Matrix of complex numbers monitor.

5.241.2 Constructor & Destructor Documentation

```
5.241.2.1 MHAParser::mcomplex_mon_t::mcomplex_mon_t ( const std::string & hlp )
```

Create a matrix of complex floating point monitor values.

#### **Parameters**

```
hlp A help text describing this monitor variable.
```

```
5.241.3 Member Function Documentation
```

Reimplemented from MHAParser::base\_t (p. 604).

Reimplemented from MHAParser::base\_t (p. 604).

5.241.4 Member Data Documentation

 $\textbf{5.241.4.1} \quad \textbf{std::vector} < \textbf{mha\_complex\_t} >> \textbf{MHAParser::mcomplex\_mon\_t::data}$ 

Data field.


The documentation for this class was generated from the following files:

- · mha parser.hh
- mha\_parser.cpp

## 5.242 MHAParser::mcomplex\_t Class Reference

Matrix variable with complex value.

Inheritance diagram for MHAParser::mcomplex\_t:

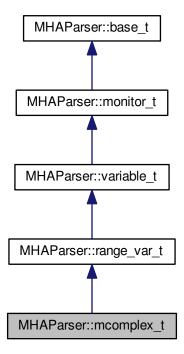

## **Public Member Functions**

mcomplex\_t (const std::string &, const std::string &="")

## **Public Attributes**

std::vector< std::vector< mha\_complex\_t >> data
 Data field.

# **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

```
Additional Inherited Members
```

```
5.242.1 Detailed Description
```

Matrix variable with complex value.

```
5.242.2 Constructor & Destructor Documentation
```

5.242.3 Member Function Documentation

Reimplemented from **MHAParser::variable\_t** (p. 664).

Reimplemented from MHAParser::base\_t (p. 604).

Reimplemented from **MHAParser::base\_t** (p. 604).

5.242.4 Member Data Documentation

```
5.242.4.1 std::vector<std::vector<mha_complex_t>> MHAParser::mcomplex_t::data
```

Data field.


The documentation for this class was generated from the following files:

- · mha parser.hh
- mha\_parser.cpp

5.243 MHAParser::mfloat\_mon\_t Class Reference

Matrix of floats monitor.

Inheritance diagram for MHAParser::mfloat\_mon\_t:

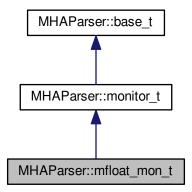

#### **Public Member Functions**

mfloat\_mon\_t (const std::string &hlp)
 Create a matrix of floating point monitor values.

## **Public Attributes**

std::vector< std::vector< float > > data
 Data field.

## **Protected Member Functions**

- std::string query\_val (const std::string &)
- std::string query\_type (const std::string &)

#### **Additional Inherited Members**

5.243.1 Detailed Description

Matrix of floats monitor.

5.243.2 Constructor & Destructor Documentation

5.243.2.1 MHAParser::mfloat\_mon\_t::mfloat\_mon\_t ( const std::string & hlp )

Create a matrix of floating point monitor values.

_					
Pa	ra	m	D.	l۵	re

*hlp* A help text describing this monitor variable.

5.243.3 Member Function Documentation

Reimplemented from MHAParser::base\_t (p. 604).

Reimplemented from **MHAParser::base\_t** (p. 604).

5.243.4 Member Data Documentation

```
5.243.4.1 std::vector < std::vector < float > > MHAParser::mfloat_mon_t::data
```

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

5.244 MHAParser::mfloat\_t Class Reference

Matrix variable with float value.

Inheritance diagram for MHAParser::mfloat\_t:

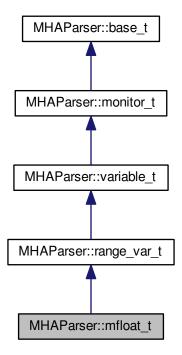

## **Public Member Functions**

mfloat\_t (const std::string &, const std::string &="")
 Create a float matrix parser variable.

### **Public Attributes**

std::vector< std::vector< float > > data
 Data field.

## **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

**Additional Inherited Members** 

```
5.244.1 Detailed Description
```

Matrix variable with float value.

5.244.2 Constructor & Destructor Documentation

Create a float matrix parser variable.

#### **Parameters**

h	A human-readable text describing the purpose of this configuration variable.
V	The initial value of the variable, as a string, in openMHA configuration language: (e.g. "[[0 1]; [2 3]]" for a matrix), described in the "Multidimensional Variables" s2.1.3 section of the openMHA User Manual.
rg	The numeric range to enforce on all members of the matrix.

```
5.244.3 Member Function Documentation
```

Reimplemented from **MHAParser::variable\_t** (p. 664).

Reimplemented from MHAParser::base\_t (p. 604).

Reimplemented from **MHAParser::base\_t** (p. 604).

5.244.4 Member Data Documentation

 $\textbf{5.244.4.1} \quad \textbf{std::vector} < \textbf{std::vector} < \textbf{float} >> \textbf{MHAParser::mfloat\_t::data}$ 


Data field.

The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

5.245 MHAParser::mhaconfig\_mon\_t Class Reference

Inheritance diagram for MHAParser::mhaconfig\_mon\_t:

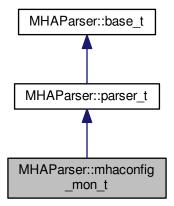

#### **Public Member Functions**

- mhaconfig\_mon\_t (const std::string &help="")
- void update (const mhaconfig\_t &cf)

#### **Private Attributes**

MHAParser::int mon t channels

Number of audio channels.

MHAParser::string\_mon\_t domain

Signal domain (MHA WAVEFORM or MHA SPECTRUM)

MHAParser::int\_mon\_t fragsize

Fragment size of waveform data.

MHAParser::int\_mon\_t wndlen

Window length of spectral data.

· MHAParser::int mon t fftlen

FFT length of spectral data.

MHAParser::float\_mon\_t srate

Sampling rate in Hz.

#### **Additional Inherited Members**

```
5.245.1 Constructor & Destructor Documentation
```

5.245.2 Member Function Documentation

```
5.245.2.1 void MHAParser::mhaconfig_mon_t::update ( const mhaconfig_t & cf )
```

5.245.3 Member Data Documentation

```
5.245.3.1 MHAParser::int mon t MHAParser::mhaconfig_mon_t::channels [private]
```

Number of audio channels.

**5.245.3.2** MHAParser::string mon t MHAParser::mhaconfig\_mon\_t::domain [private]

Signal domain (MHA WAVEFORM or MHA SPECTRUM)

**5.245.3.3** MHAParser::int\_mon\_t MHAParser::mhaconfig\_mon\_t::fragsize [private]

Fragment size of waveform data.

**5.245.3.4** MHAParser::int\_mon\_t MHAParser::mhaconfig\_mon\_t::wndlen [private]

Window length of spectral data.

**5.245.3.5** MHAParser::int\_mon\_t MHAParser::mhaconfig\_mon\_t::fftlen [private]

FFT length of spectral data.

**5.245.3.6** MHAParser::float\_mon\_t MHAParser::mhaconfig\_mon\_t::srate [private]

Sampling rate in Hz.

The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.246 MHAParser::mhapluginloader\_t Class Reference

Class to create a plugin loader in a parser, including the load logic.

#### **Public Member Functions**

- mhapluginloader\_t (MHAParser::parser\_t &parent, algo\_comm\_t ac, const std::string &plugname\_name="plugin\_name", const std::string &prefix="")
- ~mhapluginloader\_t ()
- void prepare (mhaconfig\_t &cf)
- void release ()
- void process (mha\_wave\_t \*sIn, mha\_wave\_t \*\*sOut)
- void process (mha\_spec\_t \*sIn, mha\_spec\_t \*\*sOut)
- void process (mha\_wave\_t \*sln, mha\_spec\_t \*\*sOut)
- void process (mha\_spec\_t \*sIn, mha\_wave\_t \*\*sOut)
- mhaconfig\_t get\_cfin () const
- mhaconfig\_t get\_cfout () const
- const std::string & get\_last\_name () const

## **Protected Attributes**

PluginLoader::mhapluginloader\_t \* plug

#### **Private Member Functions**

void load\_plug ()

#### **Private Attributes**

- MHAParser::parser\_t & parent\_
- MHAParser::string\_t plugname
- std::string prefix
- MHAEvents::connector t< mhapluginloader t > connector
- · algo\_comm\_t ac\_
- std::string last\_name
- std::string plugname\_name\_
- mhaconfig\_t cf\_in\_
- mhaconfig\_t cf\_out\_

#### **Static Private Attributes**

static double bookkeeping

## 5.246.1 Detailed Description

Class to create a plugin loader in a parser, including the load logic.

```
5.246.2 Constructor & Destructor Documentation
```

- 5.246.2.2 MHAParser::mhapluginloader\_t:: $\sim$ mhapluginloader\_t ( )
- 5.246.3 Member Function Documentation
- 5.246.3.1 void MHAParser::mhapluginloader\_t::prepare ( mhaconfig\_t & cf )
- 5.246.3.2 void MHAParser::mhapluginloader\_t::release ( )
- 5.246.3.3 void MHAParser::mhapluginloader\_t::process ( mha\_wave\_t \* sln,
- 5.246.3.4 void MHAParser::mhapluginloader\_t::process (

```
mha_spec_t * sln,
mha_spec_t ** sOut ) [inline]
```

mha\_wave\_t \*\* sOut ) [inline]

```
5.246.3.5 void MHAParser::mhapluginloader t::process (
                     mha_wave_t * sln,
                     mha spec t ** sOut ) [inline]
5.246.3.6 void MHAParser::mhapluginloader_t::process (
                     mha spec t * sln,
                     mha_wave_t ** sOut ) [inline]
5.246.3.7 mhaconfig_t MHAParser::mhapluginloader_t::get_cfin( ) const [inline]
5.246.3.8 mhaconfig t MHAParser::mhapluginloader_t::get_cfout( ) const [inline]
5.246.3.9 const std::string& MHAParser::mhapluginloader_t::get_last_name( ) const [inline]
5.246.3.10 void MHAParser::mhapluginloader_t::load_plug( ) [private]
5.246.4 Member Data Documentation
5.246.4.1 PluginLoader::mhapluginloader_t* MHAParser::mhapluginloader_t::plug
         [protected]
5.246.4.2 MHAParser::parser_t& MHAParser::mhapluginloader_t::parent_ [private]
5.246.4.3 MHAParser::string_t MHAParser::mhapluginloader_t::plugname [private]
5.246.4.4 std::string MHAParser::mhapluginloader_t::prefix_ [private]
5.246.4.5 MHAEvents::connector t<mhapluginloader t> MHAParser::mhapluginloader_t ←
         ::connector [private]
5.246.4.6 algo_comm_t MHAParser::mhapluginloader_t::ac_ [private]
5.246.4.7 std::string MHAParser::mhapluginloader_t::last_name [private]
5.246.4.8 std::string MHAParser::mhapluginloader_t::plugname_name_ [private]
5.246.4.9 mhaconfig_t MHAParser::mhapluginloader_t::cf_in_ [private]
5.246.4.10 mhaconfig_t MHAParser::mhapluginloader_t::cf_out_ [private]
5.246.4.11 double MHAParser::mhapluginloader_t::bookkeeping [static], [private]
```


The documentation for this class was generated from the following files:

- mhapluginloader.h
- mhapluginloader.cpp

## 5.247 MHAParser::monitor\_t Class Reference

Base class for monitors and variable nodes.

Inheritance diagram for MHAParser::monitor\_t:

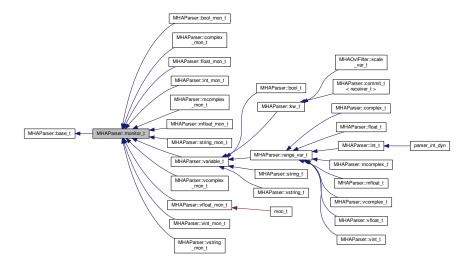

#### **Public Member Functions**

- monitor\_t (const std::string &)
- monitor t (const monitor t &)
- std::string op query (expression t &)
- std::string query\_dump (const std::string &)
- std::string query\_perm (const std::string &)

### **Additional Inherited Members**

## 5.247.1 Detailed Description

Base class for monitors and variable nodes.

- 5.247.2 Constructor & Destructor Documentation

- 5.247.3 Member Function Documentation
- 5.247.3.1 std::string MHAParser::monitor\_t::op\_query (
  expression t & x ) [virtual]

Reimplemented from MHAParser::base\_t (p. 603).

The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

5.248 MHAParser::parser\_t Class Reference

Parser node class.

Inherits MHAParser::base\_t.

Inherited by AuditoryProfile::parser\_t, AuditoryProfile::parser\_t::ear\_t, AuditoryProfile← ::parser\_t::fmap\_t, dc::wideband\_inhib\_vars\_t, DynComp::dc\_afterburn\_vars\_t, fw\_t, io\_file\_t, io\_parser\_t, io\_tcp\_parser\_t, MHAFilter::adapt\_filter\_t, MHAFilter::iir\_filter\_t, MHAIOJack::io jack t, MHAIOJackdb::io jack t, MHAIOPortAudio::device info t, MH← AIOPortAudio::io portaudio t, MHAParser::mhaconfig mon t, MHAParser::window t, MHAPlugin::plugin\_t< runtime\_cfg\_t >, MHAPlugin\_Split::split\_t, MHAPlugin::plugin\_ t< ac2wave t>, MHAPlugin::plugin t< acConcat wave config>, MHAPlugin::plugin← \_t< acPooling\_wave\_config >, MHAPlugin::plugin\_t< acSteer\_config >, MHAPlugin←  $\hbox{::plugin\_t< acTransform\_wave\_config}>, \ MHAPlugin::plugin\_t< adm\_rtconfig\_t>, \ M_{\hookleftarrow}$ HAPlugin::plugin\_t< analysepath\_t >, MHAPlugin::plugin\_t< cfg\_t >, MHAPlugin⊷ ::plugin t< cohflt t >, MHAPlugin::plugin t< combc t >, MHAPlugin::plugin t< db t >, MHAPlugin::plugin\_t< dc\_t >, MHAPlugin::plugin\_t< delaysum\_t >, MHAPlugin-::plugin\_t< doasym\_classification\_config >, MHAPlugin::plugin\_t< doasym\_feature\_ extraction\_config >, MHAPlugin::plugin\_t< example5\_t >, MHAPlugin::plugin\_t< fftfbplug t >, MHAPlugin::plugin t< fftfbpow t >, MHAPlugin::plugin t< float >, MHA← Plugin::plugin t< hilbert shifter t >, MHAPlugin::plugin t< int >, MHAPlugin::plugin ← t< lpc bl predictor config >, MHAPlugin::plugin t< lpc burglattice config >, MHA← Plugin::plugin\_t< lpc\_config >, MHAPlugin::plugin\_t< MHA\_AC::spectrum\_t >, MH APlugin::plugin\_t< MHA\_AC::waveform\_t >, MHAPlugin::plugin\_t< mhachain::plugs\_t >, MHAPlugin::plugin\_t< MHASignal::delay\_t >, MHAPlugin::plugin\_t< MHASignal-::waveform\_t >, MHAPlugin::plugin\_t< MHAWindow::fun\_t >, MHAPlugin::plugin\_t< noisePowProposed >, MHAPlugin::plugin\_t< overlapadd\_t >, MHAPlugin::plugin\_← t< plingploing\_t >, MHAPlugin::plugin\_t< prediction\_error\_config >, MHAPlugin-::plugin\_t< resampling\_t >, MHAPlugin::plugin\_t< rmslevel\_t >, MHAPlugin::plugin\_t< route::process\_t >, MHAPlugin::plugin\_t< rt\_nlms\_t >, MHAPlugin::plugin\_t< scaler\_t >, MHAPlugin::plugin\_t< sine\_cfg\_t >, MHAPlugin::plugin\_t< smoothspec\_wrap\_t >, MHAPlugin::plugin\_t< spec2wave\_t >, MHAPlugin::plugin\_t< spec\_fader\_t >, MHA-Plugin::plugin t< steerbf config >, MHAPlugin::plugin t< timoConfig >, MHAPlugin⊷ ::plugin\_t< wave2spec\_t >, MHAPlugin::plugin\_t< wavwriter\_t >, and softclipper\_← variables t.

#### **Public Member Functions**

parser\_t (const std::string &help\_text="")

Construct detached node to be used in the configuration tree.

- ~parser t ()
- void insert\_item (const std::string &, base\_t \*)

Register a parser item into this sub-parser.

void remove\_item (const std::string &)

Remove an item by name.

void force\_remove\_item (const std::string &)

Remove an item by name.

void remove\_item (const base\_t \*)

Remove an item by address.

#### **Protected Member Functions**

- std::string op\_subparse (expression\_t &)
- std::string op\_setval (expression\_t &)
- std::string op\_query (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_dump (const std::string &)
- std::string query\_entries (const std::string &)
- std::string query\_readfile (const std::string &)
- std::string query\_savefile (const std::string &)
- std::string query\_savefile\_compact (const std::string &)
- std::string query\_savemons (const std::string &)
- std::string query\_val (const std::string &)
- std::string query\_listids (const std::string &)
- void set id string (const std::string &)

### **Private Attributes**

- entry map t entries
- std::string id\_string

identification string

- std::string srcfile
- unsigned int srcline
- std::string last errormsg

#### **Additional Inherited Members**

## 5.248.1 Detailed Description

#### Parser node class.

A parser\_t (p. 651) instance is a node in the configuration tree. A parser node can contain any number of other parser\_t (p. 651) instances or configuration language variables. These items are inserted into a parser node using the parser\_t::insert\_item (p. 653) method.

#### 5.248.2 Constructor & Destructor Documentation

```
5.248.2.1 MHAParser::parser_t::parser_t (
const std::string & help_text = " " )
```

Construct detached node to be used in the configuration tree.

#### **Parameters**

help_text	A text describing this node. E.g. if this node lives at the root of some openMHA
	plugin, then the help text should describe the functionality of the plugin.

```
5.248.2.2 MHAParser::parser_t::~parser_t ( )
```

5.248.3 Member Function Documentation

Register a parser item into this sub-parser.

This function registers an item under a given name into this sub-parser and makes it accessible to the parser interface.

## **Parameters**

n	Name of the item in the configuration tree
е	C++ pointer to the item instance. e can either point to a variable, to a monitor, or to
	another sub-parser.

```
5.248.3.2 void MHAParser::parser_t::remove_item ( const std::string & n )
```

Remove an item by name.

If the item does not exist, an error is being reported.

#### **Parameters**

n Name of parser item to be removed from list.

```
5.248.3.3 void MHAParser::parser_t::force_remove_item ( const std::string & n )
```

Remove an item by name.

Non-existing items are ignored.

#### **Parameters**

```
n Name of parser item to be removed from list.
```

```
5.248.3.4 void MHAParser::parser_t::remove_item ( const base t * addr )
```

Remove an item by address.

The item belonging to an address is being removed from the list of items.

#### **Parameters**

```
addr Address of parser item to be removed.
```

Reimplemented from **MHAParser::base\_t** (p. 603).

```
5.248.3.10 std::string MHAParser::parser_t::query_entries (
                       const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 604).
5.248.3.11 std::string MHAParser::parser_t::query_readfile (
                       const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 604).
5.248.3.12 std::string MHAParser::parser_t::query_savefile (
                       const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 605).
5.248.3.13 std::string MHAParser::parser_t::query_savefile_compact (
                       const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 605).
5.248.3.14 std::string MHAParser::parser t::query savemons (
                       const std::string & fname ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 605).
5.248.3.15 std::string MHAParser::parser_t::query_val (
                       const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base t (p. 604).
5.248.3.16 std::string MHAParser::parser_t::query_listids (
                       const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 605).
5.248.3.17 void MHAParser::parser_t::set_id_string (
                       const std::string & s ) [protected]
5.248.4 Member Data Documentation
5.248.4.1 entry_map_t MHAParser::parser_t::entries [private]
5.248.4.2 std::string MHAParser::parser_t::id_string [private]
identification string
```

- **5.248.4.3** std::string MHAParser::parser\_t::srcfile [private]
- **5.248.4.4** unsigned int MHAParser::parser\_t::srcline [private]
- **5.248.4.5** std::string MHAParser::parser\_t::last\_errormsg [private]


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.249 MHAParser::range\_var\_t Class Reference

Base class for all variables with a numeric value range.

Inheritance diagram for MHAParser::range\_var\_t:

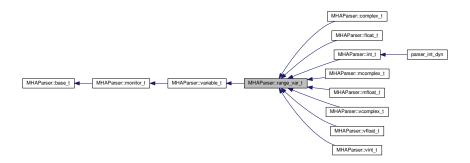

#### **Public Member Functions**

- range\_var\_t (const std::string &, const std::string &="")
- range var t (const range var t &)
- std::string query\_range (const std::string &)
- void set\_range (const std::string &r)
   Change the valid range of a variable.
- void validate (const int &)
- void validate (const float &)
- void validate (const mha\_complex\_t &)
- void validate (const std::vector< int > &)
- void validate (const std::vector< float > &)
- void validate (const std::vector< mha\_complex\_t > &)
- void validate (const std::vector< std::vector< float > > &)
- void validate (const std::vector< std::vector< mha\_complex\_t >> &)

#### **Protected Attributes**

float low\_limit

Lower limit of range.

float up\_limit

Upper limit of range.

bool low\_incl

Lower limit is included (or excluded) in range.

bool up\_incl

Upper limit is included (or excluded) in range.

· bool check\_low

Check lower limit.

bool check\_up

Check upper limit.

• bool check\_range

Range checking is active.

### **Additional Inherited Members**

## 5.249.1 Detailed Description

Base class for all variables with a numeric value range.

```
5.249.2 Constructor & Destructor Documentation
```

5.249.3 Member Function Documentation

Reimplemented from **MHAParser::base\_t** (p. 604).

```
5.249.3.2 void MHAParser::range_var_t::set_range ( const std::string & r )
```

Change the valid range of a variable.

### **Parameters**

New range of the variable (string representation) 5.249.3.3 void MHAParser::range\_var\_t::validate ( const int & v ) 5.249.3.4 void MHAParser::range\_var\_t::validate ( const float & v ) 5.249.3.5 void MHAParser::range\_var\_t::validate ( const mha\_complex\_t & v ) 5.249.3.6 void MHAParser::range\_var\_t::validate ( const std::vector< int > & v ) 5.249.3.7 void MHAParser::range\_var\_t::validate ( const std::vector< float > & v ) 5.249.3.8 void MHAParser::range\_var\_t::validate ( const std::vector< mha\_complex\_t > &  $\nu$  ) 5.249.3.9 void MHAParser::range var t::validate ( const std::vector< std::vector< float > > &  $\nu$  ) 5.249.3.10 void MHAParser::range var t::validate ( const std::vector< std::vector< mha\_complex\_t >> & v ) 5.249.4 Member Data Documentation **5.249.4.1 float** MHAParser::range\_var\_t::low\_limit [protected] Lower limit of range. **5.249.4.2 float** MHAParser::range\_var\_t::up\_limit [protected] Upper limit of range. **5.249.4.3** bool MHAParser::range\_var\_t::low\_incl [protected] Lower limit is included (or excluded) in range. **5.249.4.4 bool MHAParser::range\_var\_t::up\_incl** [protected]

Upper limit is included (or excluded) in range.

**5.249.4.5** bool MHAParser::range\_var\_t::check\_low [protected]

Check lower limit.

**5.249.4.6 bool** MHAParser::range\_var\_t::check\_up [protected]

Check upper limit.

**5.249.4.7** bool MHAParser::range\_var\_t::check\_range [protected]

Range checking is active.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

5.250 MHAParser::string\_mon\_t Class Reference

Monitor with string value.

Inheritance diagram for MHAParser::string\_mon\_t:

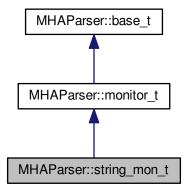

**Public Member Functions** 

string\_mon\_t (const std::string &hlp)
 Create a monitor variable for string values.

# **Public Attributes**

• std::string data

Data field.

#### **Protected Member Functions**

```
• std::string query_val (const std::string &)
```

• std::string query\_type (const std::string &)

**Additional Inherited Members** 

5.250.1 Detailed Description

Monitor with string value.

5.250.2 Constructor & Destructor Documentation

```
5.250.2.1 MHAParser::string_mon_t::string_mon_t ( const std::string & hlp )
```

Create a monitor variable for string values.

#### **Parameters**

```
hlp A help text describing this monitor variable.
```

```
5.250.3 Member Function Documentation
```

Reimplemented from **MHAParser::base\_t** (p. 604).

Reimplemented from **MHAParser::base\_t** (p. 604).

### 5.250.4 Member Data Documentation

## 5.250.4.1 std::string MHAParser::string\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.251 MHAParser::string\_t Class Reference

Variable with a string value.

Inheritance diagram for MHAParser::string\_t:

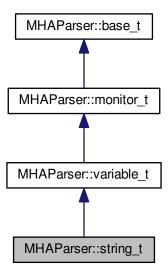

#### **Public Member Functions**

string\_t (const std::string &, const std::string &)
 Constructor of a openMHA configuration variable for string values.

## **Public Attributes**

• std::string data

Data field.

#### **Protected Member Functions**

```
• std::string op setval (expression t &)
```

- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

**Additional Inherited Members** 

5.251.1 Detailed Description

Variable with a string value.

5.251.2 Constructor & Destructor Documentation

Constructor of a openMHA configuration variable for string values.

#### **Parameters**

```
h A help string describing the purpose of this variable.v The initial string value
```

```
5.251.3 Member Function Documentation
```

Reimplemented from **MHAParser::variable\_t** (p. 664).

Reimplemented from **MHAParser::base\_t** (p. 604).

Reimplemented from **MHAParser::base\_t** (p. 604).

#### 5.251.4 Member Data Documentation

## 5.251.4.1 std::string MHAParser::string\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

## 5.252 MHAParser::variable\_t Class Reference

Base class for variable nodes.

Inheritance diagram for MHAParser::variable\_t:

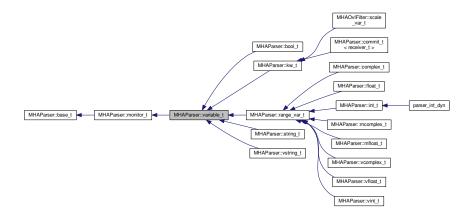

## **Public Member Functions**

- variable\_t (const std::string &)
- std::string op\_setval (expression\_t &)
- std::string query\_perm (const std::string &)
- void setlock (const bool &)

Lock a variable against write access.

### **Private Attributes**

bool locked

```
Additional Inherited Members
5.252.1 Detailed Description
Base class for variable nodes.
5.252.2 Constructor & Destructor Documentation
5.252.2.1 MHAParser::variable_t::variable_t (
                     const std::string & h )
5.252.3 Member Function Documentation
5.252.3.1 std::string MHAParser::variable_t::op_setval (
                     expression t&x) [virtual]
Reimplemented from MHAParser::base_t (p. 603).
Reimplemented in MHAParser::mcomplex_t (p. 640), MHAParser::mfloat_t (p. 644), MH
AParser::vcomplex_t (p. 668), MHAParser::vfloat_t (p. 672), MHAParser::vint_t (p. 676),
MHAParser::complex_t (p. 620), MHAParser::float_t (p. 626), MHAParser::int_t (p. 631),
MHAParser::bool_t (p. 612), MHAParser::vstring_t (p. 680), MHAParser::string_t (p. 662),
and MHAParser::kw t (p. 636).
5.252.3.2 std::string MHAParser::variable_t::query_perm (
                     const std::string & s ) [virtual]
Reimplemented from MHAParser::monitor_t (p. 651).
5.252.3.3 void MHAParser::variable_t::setlock (
                     const bool & b)
Lock a variable against write access.
Parameters
    Lock state
5.252.4 Member Data Documentation
5.252.4.1 bool MHAParser::variable t::locked [private]
```

The documentation for this class was generated from the following files:


© 2005-2018 HörTech gGmbH, Oldenburg

- mha\_parser.hh
- mha\_parser.cpp

## 5.253 MHAParser::vcomplex\_mon\_t Class Reference

Monitor with vector of complex values.

Inheritance diagram for MHAParser::vcomplex\_mon\_t:

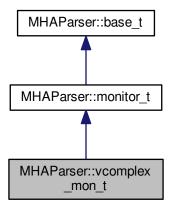

## **Public Member Functions**

vcomplex\_mon\_t (const std::string &hlp)
 Create a vector of complex monitor values.

#### **Public Attributes**

std::vector < mha\_complex\_t > data
 Data field.

## **Protected Member Functions**

- std::string query\_val (const std::string &)
- std::string query\_type (const std::string &)

```
Additional Inherited Members
```

5.253.1 Detailed Description

Monitor with vector of complex values.

5.253.2 Constructor & Destructor Documentation

```
5.253.2.1 MHAParser::vcomplex_mon_t::vcomplex_mon_t ( const std::string & hlp )
```

Create a vector of complex monitor values.

#### **Parameters**

```
hlp A help text describing this monitor variable.
```

5.253.3 Member Function Documentation

Reimplemented from **MHAParser::base\_t** (p. 604).

Reimplemented from MHAParser::base\_t (p. 604).

5.253.4 Member Data Documentation

```
5.253.4.1 std::vector<mha_complex_t> MHAParser::vcomplex_mon_t::data
```

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

## 5.254 MHAParser::vcomplex\_t Class Reference

Vector variable with complex value.

Inheritance diagram for MHAParser::vcomplex\_t:

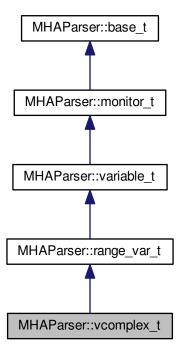

## **Public Member Functions**

vcomplex\_t (const std::string &, const std::string &, const std::string &="")

## **Public Attributes**

std::vector < mha\_complex\_t > data
 Data field.

### **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

```
Additional Inherited Members
```

```
5.254.1 Detailed Description
```

Vector variable with complex value.

```
5.254.2 Constructor & Destructor Documentation
```

5.254.3 Member Function Documentation

Reimplemented from **MHAParser::variable\_t** (p. 664).

Reimplemented from MHAParser::base\_t (p. 604).

Reimplemented from **MHAParser::base\_t** (p. 604).

5.254.4 Member Data Documentation

```
5.254.4.1 std::vector<mha_complex_t> MHAParser::vcomplex_t::data
```

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.255 MHAParser::vfloat\_mon\_t Class Reference

Vector of floats monitor.

Inheritance diagram for MHAParser::vfloat\_mon\_t:

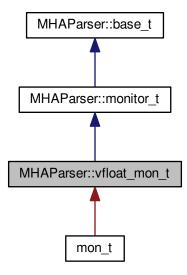

# **Public Member Functions**

vfloat\_mon\_t (const std::string &hlp)
 Create a vector of floating point monitor values.

# **Public Attributes**

std::vector< float > data
 Data field.

#### **Protected Member Functions**

- std::string query\_val (const std::string &)
- std::string query\_type (const std::string &)

## **Additional Inherited Members**

# 5.255.1 Detailed Description

Vector of floats monitor.

```
5.255.2 Constructor & Destructor Documentation
```

```
5.255.2.1 MHAParser::vfloat_mon_t::vfloat_mon_t ( const std::string & hlp )
```

Create a vector of floating point monitor values.

#### **Parameters**

```
hlp A help text describing this monitor variable.
```

```
5.255.3 Member Function Documentation
```

Reimplemented from **MHAParser::base\_t** (p. 604).

Reimplemented from **MHAParser::base\_t** (p. 604).

5.255.4 Member Data Documentation

5.255.4.1 std::vector<float> MHAParser::vfloat\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.256 MHAParser::vfloat\_t Class Reference

Vector variable with float value.

Inheritance diagram for MHAParser::vfloat\_t:

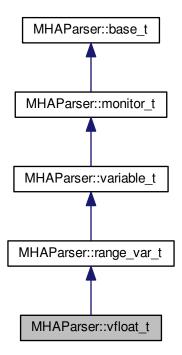

# **Public Member Functions**

vfloat\_t (const std::string &, const std::string &="")
 Create a float vector parser variable.

#### **Public Attributes**

std::vector< float > data
 Data field.

### **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

**Additional Inherited Members** 

```
5.256.1 Detailed Description
```

Vector variable with float value.

```
5.256.2 Constructor & Destructor Documentation
```

Create a float vector parser variable.

#### **Parameters**

h	A human-readable text describing the purpose of this configuration variable.
V	The initial value of the variable, as a string, in openMHA configuration language: (e.g. "[0 1 2.1 3]" for a vector), described in the "Multidimensional Variables" s2.1.3 section of the openMHA User Manual.
rg	The numeric range to enforce on all members of the vector.

5.256.3 Member Function Documentation

Reimplemented from **MHAParser::variable\_t** (p. 664).

Reimplemented from MHAParser::base\_t (p. 604).

Reimplemented from **MHAParser::base\_t** (p. 604).

## 5.256.4 Member Data Documentation

5.256.4.1 std::vector<float> MHAParser::vfloat\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.257 MHAParser::vint\_mon\_t Class Reference

Vector of ints monitor.

Inheritance diagram for MHAParser::vint\_mon\_t:

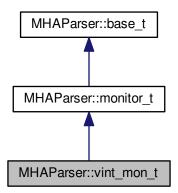

## **Public Member Functions**

vint\_mon\_t (const std::string &hlp)
 Create a vector of integer monitor values.

# **Public Attributes**

std::vector< int > data
 Data field.

#### **Protected Member Functions**

```
std::string query_val (const std::string &)
```

std::string query\_type (const std::string &)

**Additional Inherited Members** 

5.257.1 Detailed Description

Vector of ints monitor.

5.257.2 Constructor & Destructor Documentation

```
5.257.2.1 MHAParser::vint_mon_t::vint_mon_t ( const std::string & hlp )
```

Create a vector of integer monitor values.

#### **Parameters**

```
hlp A help text describing this monitor variable.
```

```
5.257.3 Member Function Documentation
```

Reimplemented from MHAParser::base\_t (p. 604).

Reimplemented from **MHAParser::base\_t** (p. 604).

5.257.4 Member Data Documentation

5.257.4.1 std::vector<int> MHAParser::vint\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- · mha parser.hh
- mha\_parser.cpp

# 5.258 MHAParser::vint\_t Class Reference

Variable with vector<int> value.

Inheritance diagram for MHAParser::vint\_t:

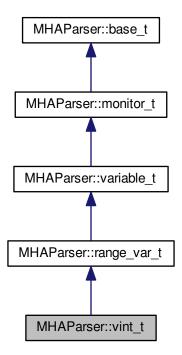

# **Public Member Functions**

vint\_t (const std::string &, const std::string &="")
 Constructor.

#### **Public Attributes**

std::vector< int > data
 Data field.

### **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

**Additional Inherited Members** 

```
5.258.1 Detailed Description
```

Variable with vector<int> value.

5.258.2 Constructor & Destructor Documentation

Constructor.

#### **Parameters**

h	help string
V	initial value
rg	optional: range constraint for all elements

```
5.258.3 Member Function Documentation
```

Reimplemented from **MHAParser::variable\_t** (p. 664).

Reimplemented from **MHAParser::base\_t** (p. 604).

Reimplemented from **MHAParser::base\_t** (p. 604).

## 5.258.4 Member Data Documentation

5.258.4.1 std::vector<int> MHAParser::vint\_t::data

Data field.


The documentation for this class was generated from the following files:

- mha\_parser.hh
- mha\_parser.cpp

# 5.259 MHAParser::vstring\_mon\_t Class Reference

Vector of monitors with string value.

Inheritance diagram for MHAParser::vstring\_mon\_t:

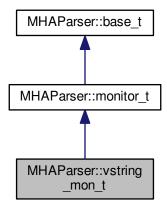

# **Public Member Functions**

vstring\_mon\_t (const std::string &hlp)
 Create a vector of string monitor values.

# **Public Attributes**

std::vector< std::string > data
 Data field.

#### **Protected Member Functions**

```
std::string query_val (const std::string &)
```

std::string query\_type (const std::string &)

**Additional Inherited Members** 

5.259.1 Detailed Description

Vector of monitors with string value.

5.259.2 Constructor & Destructor Documentation

5.259.2.1 MHAParser::vstring\_mon\_t::vstring\_mon\_t ( const std::string & hlp )

Create a vector of string monitor values.

#### **Parameters**

```
hlp A help text describing this monitor variable.
```

```
5.259.3 Member Function Documentation
```

Reimplemented from MHAParser::base\_t (p. 604).

Reimplemented from MHAParser::base\_t (p. 604).

5.259.4 Member Data Documentation

5.259.4.1 std::vector<std::string> MHAParser::vstring\_mon\_t::data

Data field.


The documentation for this class was generated from the following files:

- · mha parser.hh
- mha\_parser.cpp

# 5.260 MHAParser::vstring\_t Class Reference

Vector variable with string values.

Inheritance diagram for MHAParser::vstring\_t:

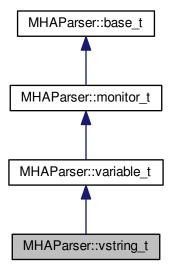

# **Public Member Functions**

vstring\_t (const std::string &, const std::string &)

## **Public Attributes**

std::vector< std::string > data
 Data field.

# **Protected Member Functions**

- std::string op\_setval (expression\_t &)
- std::string query\_type (const std::string &)
- std::string query\_val (const std::string &)

#### **Additional Inherited Members**

# 5.260.1 Detailed Description

Vector variable with string values.


```
5.260.2 Constructor & Destructor Documentation
5.260.2.1 MHAParser::vstring_t::vstring_t (
                      const std::string & h,
                      const std::string & v )
5.260.3 Member Function Documentation
5.260.3.1 std::string MHAParser::vstring_t::op_setval (
                      expression_t & x ) [protected], [virtual]
Reimplemented from MHAParser::variable_t (p. 664).
5.260.3.2 std::string MHAParser::vstring_t::query_type (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 604).
5.260.3.3 std::string MHAParser::vstring_t::query_val (
                      const std::string & s ) [protected], [virtual]
Reimplemented from MHAParser::base_t (p. 604).
5.260.4 Member Data Documentation
5.260.4.1 std::vector<std::string> MHAParser::vstring_t::data
Data field.
The documentation for this class was generated from the following files:
```

- mha\_parser.hh
- mha\_parser.cpp

# 5.261 MHAParser::window\_t Class Reference

MHA configuration interface for a window function generator.

Inheritance diagram for MHAParser::window\_t:

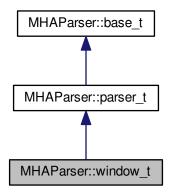

# **Public Types**

#### **Public Member Functions**

- window\_t (const std::string &help="Window type configuration.")
   Constructor to create parser class.
- MHAWindow::base\_t get\_window (unsigned int len) const Create a window instance, use default parameters.
- MHAWindow::base\_t get\_window (unsigned int len, float xmin) const Create a window instance.
- MHAWindow::base\_t get\_window (unsigned int len, float xmin, float xmax) const Create a window instance.
- MHAWindow::base\_t get\_window (unsigned int len, float xmin, float xmax, bool minincluded) const

Create a window instance.

 MHAWindow::base\_t get\_window (unsigned int len, float xmin, float xmax, bool minincluded, bool maxincluded) const

Create a window instance.

MHAParser::window\_t::wtype\_t get\_type () const

Return currently selected window type.

## **Private Attributes**

MHAParser::kw\_t wtypeMHAParser::vfloat\_t user

**Additional Inherited Members** 

## 5.261.1 Detailed Description

MHA configuration interface for a window function generator.

This class implements a configuration interface (sub-parser) for window type selection and user-defined window type. It provides member functions to generate an instance of **MHA** $\leftarrow$ **Window::base\_t** (p. 797) based on the values provided by the configuration interface.

The configuration interface is derived from **MHAParser::parser\_t** (p. 651) and can thus be inserted into the configuration tree using the **insert\_item()** (p. 653) method of the parent parser.

If one of the pre-defined window types is used, then the window is generated using the **MHA** $\leftarrow$  **Window::fun\_t** (p. 800) class constructor; for the user-defined type the values from the "user" variable are copied.

```
5.261.2 Member Enumeration Documentation
```

```
5.261.2.1 enum MHAParser::window_t::wtype_t
```

**Enumerator** 

```
wnd_rect
wnd_hann
wnd_hamming
wnd_blackman
wnd_bartlett
wnd_user
```

5.261.3 Constructor & Destructor Documentation

Constructor to create parser class.

5.261.4 Member Function Documentation

```
5.261.4.1 MHAWindow::base_t MHAParser::window_t::get_window ( unsigned int len ) const
```

Create a window instance, use default parameters.

Create a window instance.

Create a window instance.

Create a window instance.

Create a window instance.

```
5.261.4.6 MHAParser::window_t::wtype_t MHAParser::window_t::get_type ( ) const
```

Return currently selected window type.

```
5.261.5 Member Data Documentation
```

```
5.261.5.1 MHAParser::kw_t MHAParser::window_t::wtype [private]
```


```
5.261.5.2 MHAParser::vfloat_t MHAParser::window_t::user [private]
```

The documentation for this class was generated from the following files:

- mha\_windowparser.h
- mha\_windowparser.cpp

# 5.262 mhaplug\_cfg\_t Class Reference

Inheritance diagram for mhaplug\_cfg\_t:

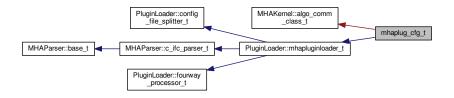

**Public Member Functions** 

- mhaplug\_cfg\_t (algo\_comm\_t iac, const std::string &libname, bool use\_own\_ac)
- ~mhaplug\_cfg\_t () throw ()

**Additional Inherited Members** 

5.262.1 Constructor & Destructor Documentation

**5.262.1.2** mhaplug\_cfg\_t::~mhaplug\_cfg\_t( )throw) [inline]

The documentation for this class was generated from the following file:

- altplugs.cpp
- 5.263 MHAPlugin::cfg\_chain\_t< runtime\_cfg\_t > Class Template Reference

**Public Member Functions** 

- cfg\_chain\_t (runtime\_cfg\_t \*id)
- ~cfg\_chain\_t ()

**Public Attributes** 

```
cfg_chain_t< runtime_cfg_t > * next
```


- bool not\_in\_use
- runtime\_cfg\_t \* data
- 5.263.1 Constructor & Destructor Documentation
- 5.263.1.1 template < class runtime\_cfg\_t > ::cfg\_chain\_t < runtime\_cfg\_t > ::cfg\_chain\_t ( runtime\_cfg\_t \* id )
- 5.263.1.2 template < class runtime\_cfg\_t > MHAPlugin::cfg\_chain\_t < runtime\_cfg\_t >::~cfg\_chain\_t( )
- 5.263.2 Member Data Documentation
- $\label{eq:continuous} \begin{array}{lll} \textbf{5.263.2.1} & \textbf{template} < \textbf{class runtime\_cfg\_t} > \textbf{cfg\_chain\_t} < \textbf{runtime\_cfg\_t} > * \\ & \textbf{MHAPlugin::cfg\_chain\_t} < \textbf{runtime\_cfg\_t} > :: \textbf{next} \end{array}$
- 5.263.2.2 template < class runtime\_cfg\_t > bool MHAPlugin::cfg\_chain\_t < runtime\_cfg\_t >::not\_in\_use
- 5.263.2.3 template < class runtime\_cfg\_t > runtime\_cfg\_t \* MHAPlugin::cfg\_chain\_t < runtime\_cfg\_t > ::data

The documentation for this class was generated from the following file:

- mha\_plugin.hh
- 5.264 MHAPlugin::config\_t< runtime\_cfg\_t > Class Template Reference

Template class for thread safe configuration.

Inheritance diagram for MHAPlugin::config\_t< runtime\_cfg\_t >:

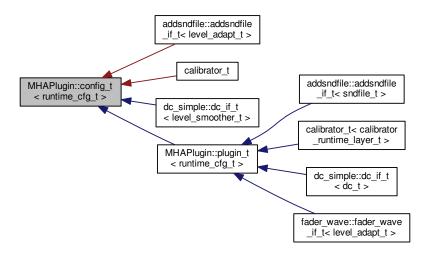

## **Public Member Functions**

- · config\_t ()
- $\sim$ config\_t ()

# **Protected Member Functions**

- runtime\_cfg\_t \* poll\_config ()
   Receive the latest run time configuration.
- runtime\_cfg\_t \* last\_config ()

  Receive the latest run time configuration.
- void push\_config (runtime\_cfg\_t \*ncfg)
   Push a new run time configuration into the configuration fifo.
- void cleanup\_unused\_cfg ()

# **Protected Attributes**

• runtime\_cfg\_t \* cfg

## **Private Member Functions**

void remove\_all\_cfg ()

#### **Private Attributes**

- MHAPlugin::cfg\_chain\_t< runtime\_cfg\_t > \* cfg\_chain
- MHAPlugin::cfg\_chain\_t< runtime\_cfg\_t > \* cfg\_chain\_current

# 5.264.1 Detailed Description

```
template < class runtime_cfg_t > class MHAPlugin::config_t < runtime_cfg_t >
```

Template class for thread safe configuration.

This template class provides a mechanism for the handling of thread safe configuration which is required for run time configuration changes of the openMHA plugins.

The template parameter runtime\_cfg\_t is the run time configuration class of the openMHA plugin. The constructor of that class should transform the **MHAParser** (p. 104) variables into derived runtime configuration. The constructor should fail if the configuration is invalid by any reason.

A new runtime configuration is provided by the function **push\_config()** (p. 688). In the processing thread, the actual configuration can be received by a call of **poll\_config()** (p. 688).

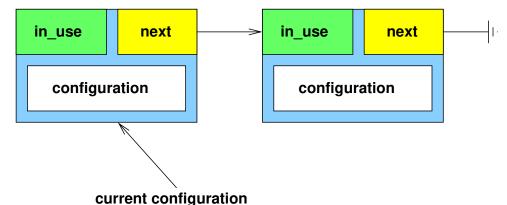


Figure 5 Schematic drawing of runtime configuration update: configuration updated, but not used yet.

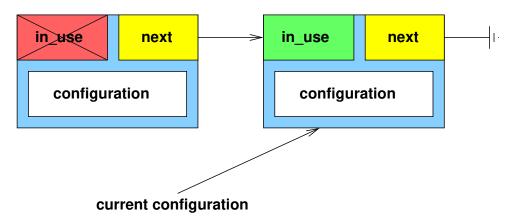


Figure 6 Schematic drawing of runtime configuration update: configuration in use.

```
5.264.2 Constructor & Destructor Documentation
```

```
5.264.2.1 template < class runtime_cfg_t > MHAPlugin::config_t < runtime_cfg_t > ::config_t()

5.264.2.2 template < class runtime_cfg_t > MHAPlugin::config_t < runtime_cfg_t > ::~config_t()

5.264.3.1 template < class runtime_cfg_t > runtime_cfg_t * MHAPlugin::config_t < runtime_cfg_t

5.264.3.1 template < class runtime_cfg_t > runtime_cfg_t * MHAPlugin::config_t < runtime_cfg_t
```

Receive the latest run time configuration.

>::poll\_config( ) [protected]

This function stores the latest run time configuration into the protected class member variable 'cfg'. If no configuration exists, then an exception will be thrown. If no changes occured, then the value of 'cfg' will be untouched. This function should be called before any access to the 'cfg' variable, typically once in each signal processing call.

This function should be only called from the *processing* thread.

# **Exceptions**

<b>MHA_Error</b> (p. <b>413</b> )	if the resulting runtime configuration is NULL. This usually means
	that no push_config has occured.

```
5.264.3.2 template < class runtime_cfg_t > runtime_cfg_t * MHAPlugin::config_t < runtime_cfg_t >::last config ( ) [protected]
```

Receive the latest run time configuration.

This function stores the latest run time configuration into the protected class member variable 'cfg'. If no configuration exists, then an exception will be thrown. If no changes occured, then the value of 'cfg' will be untouched. This function may be called instead of poll\_config.

The difference between poll\_config and last\_config is that poll\_config marks previous configurations as ready for deletion, while this function does not. Therefore, memory usage of all runtime configurations will accumulate if only this function is called, but it enables safe access to previous runtime configurations.

Also, last config does not raise an Exception when the latest run time configuration is NULL.

```
5.264.3.3 template < class runtime_cfg_t > void MHAPlugin::config_t < runtime_cfg_t > ::push_config (  runtime\_cfg\_t * \textit{ncfg} \ ) \quad \texttt{[protected]}
```

Push a new run time configuration into the configuration fifo.

5.264	MHAPlugin::config_t< runtime_cfg_t > Class Template	
Refere	ence	689

This function adds a new run time configuration. The next time **poll\_config** (p. 688) is called, this configuration will be available. Configurations which are not in use or are outdated will be removed.

This function should be only called from the *configuration* thread.

#### **Parameters**

ncfg pointer on a new configuration

#### Warning

The runtime configuration passed to this function will be removed by the internal garbage collector. Do not free manually.

- 5.264.3.4 template < class runtime\_cfg\_t > void MHAPlugin::config\_t < runtime\_cfg\_t > ::cleanup\_unused\_cfg() [protected]
- 5.264.3.5 template < class runtime\_cfg\_t > void MHAPlugin::config\_t < runtime\_cfg\_t >::remove\_all\_cfg( ) [private]
- 5.264.4 Member Data Documentation
- 5.264.4.1 template < class runtime\_cfg\_t > runtime\_cfg\_t \* MHAPlugin::config\_t < runtime\_cfg\_t >::cfg [protected]
- 5.264.4.2 template < class runtime\_cfg\_t > MHAPlugin::cfg\_chain\_t < runtime\_cfg\_t > \* MHAPlugin::config\_t < runtime\_cfg\_t > ::cfg\_chain [private]
- 5.264.4.3 template < class runtime\_cfg\_t > MHAPlugin::cfg\_chain\_t < runtime\_cfg\_t > \* MHAPlugin::config\_t < runtime\_cfg\_t > ::cfg\_chain\_current [private]


The documentation for this class was generated from the following file:

# mha\_plugin.hh

5.265 MHAPlugin::plugin t< runtime cfg t > Class Template Reference

The template class for C++ openMHA plugins.

Inheritance diagram for MHAPlugin::plugin t< runtime cfg t >:

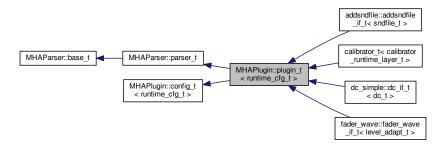

#### **Public Member Functions**

- plugin\_t (const std::string &, const algo\_comm\_t &)
   Constructor of plugin template.
- virtual ~plugin t ()
- virtual void prepare (mhaconfig\_t &)=0
- virtual void release ()
- void prepare\_ (mhaconfig\_t &)
- void release\_()
- bool is\_prepared () const

Flag, if the prepare method is successfully called (or currently evaluated)

mhaconfig\_t input\_cfg () const

Current input channel configuration.

mhaconfig\_t output\_cfg () const

Current output channel configuration.

#### **Protected Attributes**

mhaconfig\_t tftype

Member for storage of plugin interface configuration.

algo\_comm\_t ac

AC handle of the chain.

# **Private Attributes**

- bool is prepared
- mhaconfig\_t input\_cfg\_
- mhaconfig\_t output\_cfg\_
- MHAParser::mhaconfig mon t mhaconfig in
- MHAParser::mhaconfig\_mon\_t mhaconfig\_out

### **Additional Inherited Members**

# 5.265.1 Detailed Description

```
\label{lem:condition} \begin{split} & template {<} class \ runtime\_cfg\_t {>} \\ & class \ MHAPlugin::plugin\_t {<} \ runtime\_cfg\_t {>} \\ \end{split}
```

The template class for C++ openMHA plugins.

# **Template Parameters**

runtime_ ←	run-time configuration.
cfg_t	

**Todo** Describe all services provided by this class, so that the reason why it is recommended that all plugins use this class as their base is evident. Document all relevant methods and fields.

This template class provides thread safe configuration handling and standard methods to be compatible to the C++ openMHA plugin wrapper macro **MHAPLUGIN\_CALLBACKS** (p. 9).

The template parameter runtime\_cfg\_t should be the runtime configuration of the plugin.

See **MHAPlugin::config\_t** (p. 685) for details on the thread safe communication update mechanism.

```
5.265.2 Constructor & Destructor Documentation
```

```
5.265.2.1 template < class runtime_cfg_t > MHAPlugin::plugin_t < runtime_cfg_t >::plugin_t ( const std::string & help, const algo_comm_t & iac )
```

Constructor of plugin template.

# **Parameters**

help	Help comment to provide some general information about the plugin.
iac	AC space handle (will be stored into the member variable ac).

```
5.265.2.2 template < class runtime_cfg_t > MHAPlugin::plugin_t < runtime_cfg_t > :: \sim plugin_t ( ) [virtual]
```

5.265.3 Member Function Documentation

```
5.265.3.1 template < class runtime_cfg_t > virtual void MHAPlugin::plugin_t < runtime_cfg_t >::prepare (

mhaconfig_t & ) [pure virtual]
```

```
Implemented in bbcalib_interface_t (p. 215), calibrator_t (p. 218), addsndfile::addsndfile \leftarrow _if_t (p. 174), analysispath_if_t (p. 206), adm_if_t (p. 189), overlapadd::overlapadd_\leftarrow if_t (p. 822), frequency_translator_t (p. 319), noisePowProposedScale::interface_\leftarrow t (p. 818), ac2lsl::ac2lsl_t (p. 127), dc_simple::dc_if_t (p. 250), dc::dc_if_t (p. 240),
```

multibandcompressor::interface\_t (p. 810), plingploing::if\_t (p. 828), combc if ← t (p. 230), coherence::cohflt\_if\_t (p. 224), plugin\_interface\_t (p. 835), example6\_t (p. 303), smoothgains bridge::overlapadd if t (p. 876), MHAPlugin Resampling::resampling \_if\_t (p. 696), shadowfilter\_end::shadowfilter\_end\_t (p. 872), ac2wave\_if\_t (p. 141), noise\_t (p. 816), nlms\_t (p. 813), prediction\_error (p. 850), spec2wave\_if\_t (p. 884), mhachain::chain\_base\_t (p. 465), acsave::acsave\_t (p. 159), fader\_wave::fader\_wave if t (p. 307), doasym feature extraction (p. 270), rmslevel if t (p. 855), shadowfilter begin::shadowfilter begin t (p. 869), example3 t (p. 296), example4 t (p. 300), lpc  $\leftarrow$ bl\_predictor (p. 368), lpc\_burglattice (p. 373), steerbf (p. 890), delaysum::delaysum\_~ if\_t (p. 262), acPooling\_wave (p. 154), lpc (p. 365), fader\_if\_t (p. 305), acConcat\_wave (p. 145), db if t (p. 236), acSteer (p. 166), acTransform wave (p. 170), wave2spec if← t (p. 906), gain::gain if t (p. 328), fftfbpow::fftfbpow interface t (p. 311), droptect t (p. 274), example1 t (p. 290), sine t (p. 874), doasym classification (p. 266), example2 \_t (p. 293), wavrec\_t (p. 910), fftfilterbank::fftfb\_interface\_t (p. 315), route::interface\_t (p. 858), matrixmixer::matmix\_t (p. 380), altplugs\_t (p. 200), softclip\_t (p. 880), ac2osc\_t (p. 137), save\_spec\_t (p. 864), save\_wave\_t (p. 866), acmon::acmon\_t (p. 151), timo← Smooth (p. 902), identity t (p. 334), delay::interface t (p. 260), cpuload t (p. 234), ds t (p. 277), and **us\_t** (p. 904).

Reimplemented in bbcalib\_interface\_t (p.215), calibrator\_t (p.218), addsndfile  $\leftarrow$  ::addsndfile\_if\_t (p.174), analysispath\_if\_t (p.206), adm\_if\_t (p.189), overlapadd  $\leftarrow$  ::overlapadd\_if\_t (p.822), frequency\_translator\_t (p.319), ac2lsl::ac2lsl\_t (p.128), dc\_  $\leftarrow$  simple::dc\_if\_t (p.250), multibandcompressor::interface\_t (p.810), coherence::cohflt  $\leftarrow$  if\_t (p.224), smoothgains\_bridge::overlapadd\_if\_t (p.876), MHAPlugin\_Resampling  $\leftarrow$  ::resampling\_if\_t (p.696), ac2wave\_if\_t (p.141), nlms\_t (p.814), prediction\_error (p.850), mhachain::chain\_base\_t (p.465), acsave::acsave\_t (p.159), fader\_wave  $\leftarrow$  ::fader\_wave\_if\_t (p.307), doasvm\_feature\_extraction (p.271), example3\_t (p.297), example4\_t (p.300), lpc\_bl\_predictor (p.369), lpc\_burglattice (p.373), steerbf (p.891), delaysum::delaysum\_if\_t (p.262), acPooling\_wave (p.155), lpc (p.366), acConcat\_wave (p.146), db\_if\_t (p.236), acSteer (p.167), acTransform\_wave (p.171), droptect\_t (p.274), gain::gain\_if\_t (p.328), example2\_t (p.293), doasvm\_classification (p.267), wavrec  $\leftarrow$  t (p.910), fftfilterbank::fftfb\_interface\_t (p.315), route::interface\_t (p.858), ac2osc\_t (p.138), example1\_t (p.290), altplugs\_t (p.201), acmon::acmon\_t (p.152), timoSmooth (p.902), identity\_t (p.334), ds\_t (p.277), and us\_t (p.904).

Flag, if the prepare method is successfully called (or currently evaluated)

5.265.3.6 template < class runtime\_cfg\_t > mhaconfig\_t MHAPlugin::plugin\_t < runtime\_cfg\_t >::input\_cfg() const [inline]

Current input channel configuration.

5.265.3.7 template < class runtime\_cfg\_t > mhaconfig\_t MHAPlugin::plugin\_t < runtime\_cfg\_t >::output\_cfg ( ) const [inline]

Current output channel configuration.

- 5.265.4 Member Data Documentation
- 5.265.4.1 template < class runtime\_cfg\_t > mhaconfig\_t MHAPlugin::plugin\_t < runtime\_cfg\_t > ::tftype [protected]

Member for storage of plugin interface configuration.

This member is defined for convenience of the developer. Typically, the actual contents of **mhaconfig\_t** (p. 470) are stored in this member in the **prepare()** (p. 692) method.

Note

This member is likely to be removed in later versions, use **input\_cfg()** (p. 694) and **output\_cfg()** (p. 694) instead.

5.265.4.2 template < class runtime\_cfg\_t > algo\_comm\_t MHAPlugin::plugin\_t < runtime\_cfg\_t >::ac [protected]

AC handle of the chain.

This variable is initialized in the constructor and can be used by derived plugins to access the AC space. Its contents should not be modified.


- 5.265.4.3 template < class runtime\_cfg\_t > bool MHAPlugin::plugin\_t < runtime\_cfg\_t >::is\_prepared\_ [private]
- 5.265.4.4 template < class runtime\_cfg\_t > mhaconfig\_t MHAPlugin::plugin\_t < runtime\_cfg\_t > ::input cfg [private]
- 5.265.4.5 template < class runtime\_cfg\_t > mhaconfig\_t MHAPlugin::plugin\_t < runtime\_cfg\_t >::output\_cfg\_ [private]

The documentation for this class was generated from the following file:

· mha plugin.hh

# 5.266 MHAPlugin\_Resampling::resampling\_if\_t Class Reference

Inheritance diagram for MHAPlugin\_Resampling::resampling\_if\_t:

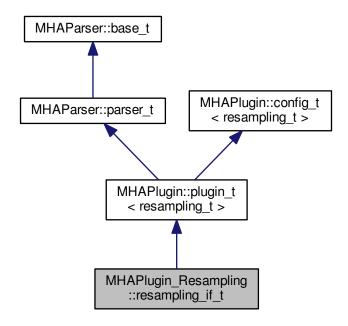

### **Public Member Functions**

- resampling\_if\_t (algo\_comm\_t, std::string, std::string)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)
- void release ()

### **Private Attributes**

- MHAParser::float\_t srate
- MHAParser::int\_t fragsize
- MHAParser::float\_t nyquist\_ratio
- MHAParser::float\_t irslen\_outer2inner
- MHAParser::float t irslen inner2outer
- MHAParser::mhapluginloader\_t plugloader
- std::string chain
- std::string algo

```
Additional Inherited Members
```

```
5.266.1 Constructor & Destructor Documentation
         MHAPlugin Resampling::resampling if t::resampling if t(
5.266.1.1
                      algo comm t iac,
                      std::string th,
                      std::string al )
5.266.2 Member Function Documentation
5.266.2.1 mha wave t * MHAPlugin_Resampling::resampling_if_t::process (
                      mha wave t * s)
5.266.2.2 void MHAPlugin Resampling::resampling if t::prepare (
                      mhaconfig t&conf) [virtual]
Implements MHAPlugin::plugin_t < resampling_t > (p. 692).
5.266.2.3 void MHAPlugin_Resampling::resampling_if_t::release (
                     void ) [virtual]
Reimplemented from MHAPlugin::plugin t < resampling t > (p. 693).
5.266.3 Member Data Documentation
5.266.3.1 MHAParser::float_t MHAPlugin_Resampling::resampling_if_t::srate [private]
5.266.3.2 MHAParser::int_t MHAPlugin_Resampling::resampling_if_t::fragsize [private]
5.266.3.3 MHAParser::float_t MHAPlugin_Resampling::resampling_if_t::nyquist_ratio
          [private]
5.266.3.4 MHAParser::float_t MHAPlugin_Resampling::resampling_if_t::irslen_outer2inner
          [private]
5.266.3.5 MHAParser::float t MHAPlugin Resampling::resampling if t::irslen inner2outer
          [private]
5.266.3.6 MHAParser::mhapluginloader t MHAPlugin Resampling::resampling if t::plugloader
          [private]
5.266.3.7 std::string MHAPlugin_Resampling::resampling_if_t::chain [private]
5.266.3.8 std::string MHAPlugin_Resampling::resampling_if_t::algo [private]
The documentation for this class was generated from the following file:
```

· resampling.cpp

# 5.267 MHAPlugin\_Resampling::resampling\_t Class Reference

#### **Public Member Functions**

- resampling\_t (unsigned int outer\_fragsize, float outer\_srate, unsigned int inner\_
   fragsize, float inner\_scrate, unsigned int nch\_in, float filter\_length\_in, unsigned int nch
   out, float filter\_length\_out, float nyquist\_ratio, MHAParser::mhapluginloader\_t &plug)
- mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Private Attributes**

- unsigned outer\_fragsize
- unsigned inner\_fragsize
- float outer\_srate
- float inner\_srate
- unsigned nchannels\_in
- unsigned nchannels\_out
- MHAFilter::blockprocessing polyphase resampling t outer2inner resampling
- MHAFilter::blockprocessing\_polyphase\_resampling\_t inner2outer\_resampling
- MHAParser::mhapluginloader\_t & plugloader
- MHASignal::waveform\_t inner\_signal
- MHASignal::waveform\_t output\_signal

### 5.267.1 Constructor & Destructor Documentation

# 5.267.2 Member Function Documentation

```
5.267.2.1 mha_wave_t * MHAPlugin_Resampling::resampling_t::process ( mha_wave_t * s )
```

5.267.3 Member Data Documentation

5.267.3.1	<pre>unsigned MHAPlugin_Resampling::resampling_t::outer_fragsize [private]</pre>
5.267.3.2	<pre>unsigned MHAPlugin_Resampling::resampling_t::inner_fragsize [private]</pre>
5.267.3.3	float MHAPlugin_Resampling::resampling_t::outer_srate [private]
5.267.3.4	float MHAPlugin_Resampling::resampling_t::inner_srate [private]
5.267.3.5	<pre>unsigned MHAPlugin_Resampling::resampling_t::nchannels_in [private]</pre>
5.267.3.6	<pre>unsigned MHAPlugin_Resampling::resampling_t::nchannels_out [private]</pre>
5.267.3.7	MHAFilter::blockprocessing_polyphase_resampling_t MHAPlugin_Resampling::resampling_t::outer2inner_resampling [private]
5.267.3.8	MHAFilter::blockprocessing_polyphase_resampling_t MHAPlugin_Resampling::resampling_t::inner2outer_resampling [private]
5.267.3.9	<b>MHAParser::mhapluginloader_t&amp; MHAPlugin_Resampling::resampling_t::plugloader</b> [private]
5.267.3.10	MHASignal::waveform_t MHAPlugin_Resampling::resampling_t::inner_signal [private]
5.267.3.11	MHASignal::waveform_t MHAPlugin_Resampling::resampling_t::output_signal [private]


The documentation for this class was generated from the following file:

# resampling.cpp

5.268 MHAPlugin\_Split::domain\_handler\_t Class Reference

Handles domain-specific partial input and output signal.

Inheritance diagram for MHAPlugin\_Split::domain\_handler\_t:

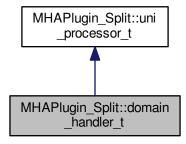

#### **Public Member Functions**

void set\_input\_domain (const mhaconfig\_t &settings\_in)

Set parameters of input signal.

void set\_output\_domain (const mhaconfig\_t &settings\_out)

Set output signal parameters.

void deallocate domains ()

Deallocate domain indicators and signal holders.

domain\_handler\_t (const mhaconfig\_t &settings\_in, const mhaconfig\_t &settings\_out,
 PluginLoader::fourway\_processor\_t \*processor)

Construct a new domain handler once the domains and dimensions of input and output signal of one of the child plugins of split are known.

virtual ~domain\_handler\_t ()

Deallocation of signal holders.

unsigned put\_signal (mha\_wave\_t \*s\_in, unsigned start\_channel)

Store the relevant channels from the input signal for processing.

unsigned put\_signal (mha\_spec\_t \*s\_in, unsigned start\_channel)

Store the relevant channels from the input signal for processing.

• unsigned **get\_signal** (**MHASignal::waveform\_t** \*s\_out, unsigned start\_channel)

Store all partial signal output channels in the combined waveform signal with the given channel offset.

unsigned get\_signal (MHASignal::spectrum\_t \*s\_out, unsigned start\_channel)

Store all partial signal output channels in the combined spectrum signal with the given channel offset.

void process ()

Call the processing method of the processor with configured input/output signal domains.

#### **Public Attributes**

MHASignal::waveform t \* wave in

Partial wave input signal.

mha\_wave\_t \*\* wave\_out

Partial wave output signal.

MHASignal::spectrum t \* spec in

Partial spec input signal.

mha\_spec\_t \*\* spec\_out

Partial spec input signal.

PluginLoader::fourway\_processor\_t \* processor\_

The domain-specific signal processing methods are implemented here.

### **Private Member Functions**

domain handler t (const domain handler t &)

Disallow copy constructor.

domain\_handler\_t & operator= (const domain\_handler\_t &)

Disallow assignment operator.

## 5.268.1 Detailed Description

Handles domain-specific partial input and output signal.

```
5.268.2 Constructor & Destructor Documentation
```

Disallow copy constructor.

Construct a new domain handler once the domains and dimensions of input and output signal of one of the child plugins of split are known.

```
5.268.2.3 virtual MHAPlugin_Split::domain_handler_t::~domain_handler_t ( ) [inline], [virtual]
```

Deallocation of signal holders.

5.268.3 Member Function Documentation

Disallow assignment operator.

Set parameters of input signal.

### **Parameters**

settings⇔	domain and dimensions of partial input signal
in	

Set output signal parameters.

#### **Parameters**

settings_out   domain and dimensions of partial
---

```
5.268.3.4 void MHAPlugin_Split::domain_handler_t::deallocate_domains() [inline]
```

Deallocate domain indicators and signal holders.

Store the relevant channels from the input signal for processing.

The number of channels to store is taken from the dimensions of the partial input signal holder wave\_in (p. 703).

### **Parameters**

s_in T	The combined waveform input signal.
_	The index (0-based) of the first channel in s_in to be copied to the partial input signal.

#### **Returns**

The number of channels that were copied from the input signal

Store the relevant channels from the input signal for processing.

The number of channels to store is taken from the dimensions of the partial input signal holder **spec\_in** (p. 703).

# **Parameters**

s_in	The combined spectrum input signal.
start_channel	The index (0-based) of the first channel in s_in to be copied to the partial
	input signal.

#### **Returns**

The number of channels that were copied from the input signal

Store all partial signal output channels in the combined waveform signal with the given channel offset.

All channels present in **wave\_out** (p. 703) will be copied. Caller may use (\*wave\_out)->numchannels to check the number of channels in advance.

#### **Parameters**

s_out	The combined waveform output signal.
start_channel	The channel offset (0-based) in s_out.

### **Returns**

The number of channels that were copied to the output signal

Store all partial signal output channels in the combined spectrum signal with the given channel offset.

All channels present in **spec\_out** (p. 703) will be copied. Caller may use (\*spec\_out)->numcohannels to check the number of channels in advance.

#### **Parameters**

s_out	The combined spectrum output signal.
start_channel	The channel offset (0-based) in s_out.

#### Returns

The number of channels that were copied to the output signal

Call the processing method of the processor with configured input/output signal domains.

The input signal has to be stored using **put\_signal** (p. 701) before this method may be called. Implements **MHAPlugin\_Split::uni\_processor\_t** (p. 722).

5.268.4 Member Data Documentation

5.268.4.1 MHASignal::waveform t\* MHAPlugin\_Split::domain\_handler\_t::wave\_in

Partial wave input signal.

5.268.4.2 mha\_wave\_t\*\* MHAPlugin\_Split::domain\_handler\_t::wave\_out

Partial wave output signal.

5.268.4.3 MHASignal::spectrum\_t\* MHAPlugin\_Split::domain\_handler\_t::spec\_in

Partial spec input signal.

5.268.4.4 mha\_spec\_t\*\* MHAPlugin\_Split::domain\_handler\_t::spec\_out

Partial spec input signal.

5.268.4.5 PluginLoader::fourway\_processor\_t\* MHAPlugin\_Split::domain\_handler\_t::processor


The domain-specific signal processing methods are implemented here.

The documentation for this class was generated from the following file:

## split.cpp

# 5.269 MHAPlugin\_Split::dummy\_threads\_t Class Reference

Dummy specification of a thread platform: This class implements everything in a single thread. Inheritance diagram for MHAPlugin\_Split::dummy\_threads\_t:

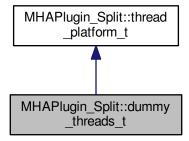

#### **Public Member Functions**

void kick\_thread ()

perform signal processing immediately (no multiple threads in this dummy class)

void catch\_thread ()

No implementation needed: Processing has been completed during ummy\_threads\_t::kick\_← thread.

 dummy\_threads\_t (uni\_processor\_t \*proc, const std::string &thread\_scheduler, int thread\_priority)

Constructor.

## **Additional Inherited Members**

## 5.269.1 Detailed Description

Dummy specification of a thread platform: This class implements everything in a single thread.

#### 5.269.2 Constructor & Destructor Documentation

## Constructor.

### **Parameters**

proc	Pointer to the associated plugin loader
thread_scheduler	Unused in dummy thread platform
thread_priority	Unused in dummy thread platform

# 5.269.3 Member Function Documentation

```
5.269.3.1 void MHAPlugin_Split::dummy_threads_t::kick_thread( ) [inline], [virtual]
```

perform signal processing immediately (no multiple threads in this dummy class)

Implements MHAPlugin\_Split::thread\_platform\_t (p. 720).

5.269.3.2 void MHAPlugin\_Split::dummy\_threads\_t::catch\_thread( ) [inline], [virtual]

No implementation needed: Processing has been completed during ummy\_threads\_t::kick\_ thread.

Implements MHAPlugin\_Split::thread\_platform\_t (p. 720).


The documentation for this class was generated from the following file:

split.cpp

5.270 MHAPlugin\_Split::posix\_threads\_t Class Reference

Posix threads specification of thread platform.

Inheritance diagram for MHAPlugin\_Split::posix\_threads\_t:

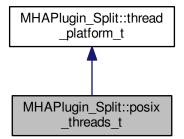

#### **Public Member Functions**

void kick\_thread ()

Start signal processing in separate thread.

void catch\_thread ()

Wait for signal processing to finish.

 posix\_threads\_t (uni\_processor\_t \*proc, const std::string &thread\_scheduler, int thread\_priority)

Constructor.

~posix\_threads\_t ()

Terminate thread.

• void main ()

Thread main loop. Wait for process/termination trigger, then act.

#### Static Public Member Functions

static void \* thread\_start (void \*thr)

Thread start function.

- static std::string current\_thread\_scheduler ()
- static int current\_thread\_priority ()

#### **Private Attributes**

pthread\_mutex\_t mutex

The mutex.

pthread\_cond\_t kick\_condition

The condition for signalling the kicking and termination.

pthread\_cond\_t catch\_condition

The condition for signalling the processing is finished.

• pthread\_attr\_t attr

Thread attributes.

struct sched\_param priority

Thread scheduling priority.

- · int scheduler
- · pthread t thread

The thread object.

bool kicked

A flag that is set to true by kick\_thread and to false by the thread after it has woken up from the kicking.

• bool processing\_done

A flag that is set to true by the thread when it returns from processing and to false by catch\_
thread after it has waited for that return.

bool termination request

Set to true by the destructor.

#### **Additional Inherited Members**

5.270.1 Detailed Description

Posix threads specification of thread platform.

5.270.2 Constructor & Destructor Documentation

Constructor.

### **Parameters**

proc	Pointer to the associated signal processor instance
thread_scheduler	A string describing the posix thread scheduler. Possible values:
	"SCHED_OTHER", "SCHED_RR", "SCHED_FIFO".
thread_priority	The scheduling priority of the new thread.

```
5.270.2.2 MHAPlugin_Split::posix_threads_t::~posix_threads_t() [inline]
```

Terminate thread.

```
5.270.3 Member Function Documentation
```

```
5.270.3.1 void MHAPlugin_Split::posix_threads_t::kick_thread( ) [inline], [virtual]
```

Start signal processing in separate thread.

Implements MHAPlugin\_Split::thread\_platform\_t (p. 720).

```
5.270.3.2 void MHAPlugin_Split::posix_threads_t::catch_thread( ) [inline], [virtual]
```

Wait for signal processing to finish.

Implements MHAPlugin\_Split::thread\_platform\_t (p. 720).

```
5.270.3.3 static void* MHAPlugin_Split::posix_threads_t::thread_start ( void * thr ) [inline], [static]
```

Thread start function.

```
5.270.3.4 void MHAPlugin_Split::posix_threads_t::main() [inline]
```

Thread main loop. Wait for process/termination trigger, then act.

```
5.270.3.5 static std::string MHAPlugin_Split::posix_threads_t::current_thread_scheduler( ) [inline], [static]
```

```
5.270.3.6 static int MHAPlugin_Split::posix_threads_t::current_thread_priority( ) [inline], [static]
```

5.270.4 Member Data Documentation

```
5.270.4.1 pthread_mutex_t MHAPlugin_Split::posix_threads_t::mutex [private]
```

The mutex.

**5.270.4.2** pthread\_cond\_t MHAPlugin\_Split::posix\_threads\_t::kick\_condition [private]

The condition for signalling the kicking and termination.

**5.270.4.3** pthread\_cond\_t MHAPlugin\_Split::posix\_threads\_t::catch\_condition [private]

The condition for signalling the processing is finished.

**5.270.4.4 pthread\_attr\_t MHAPlugin\_Split::posix\_threads\_t::attr** [private]

Thread attributes.

**5.270.4.5** struct sched\_param MHAPlugin\_Split::posix\_threads\_t::priority [private]

Thread scheduling priority.

**5.270.4.6** int MHAPlugin\_Split::posix\_threads\_t::scheduler [private]

**5.270.4.7** pthread\_t MHAPlugin\_Split::posix\_threads\_t::thread [private]

The thread object.

**5.270.4.8 bool MHAPlugin\_Split::posix\_threads\_t::kicked** [private]

A flag that is set to true by kick\_thread and to false by the thread after it has woken up from the kicking.

**5.270.4.9** bool MHAPlugin\_Split::posix\_threads\_t::processing\_done [private]

A flag that is set to true by the thread when it returns from processing and to false by catch\_ thread after it has waited for that return.

**5.270.4.10** bool MHAPlugin\_Split::posix\_threads\_t::termination\_request [private]

Set to true by the destructor.


The documentation for this class was generated from the following file:

· split.cpp

# 5.271 MHAPlugin\_Split::split\_t Class Reference

Implements split plugin.

Inheritance diagram for MHAPlugin\_Split::split\_t:

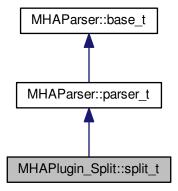

#### **Public Member Functions**

- **split\_t** (**algo\_comm\_t** iac, const std::string &chain\_name, const std::string &algo\_name) *Plugin constructor.*
- ~split\_t ()

Plugin destructor. Unloads nested plugins.

void prepare\_ (mhaconfig\_t &)

Check signal parameters, prepare chains, and allocate output signal holders.

void release\_ ()

Delete output signal holder and release chains.

template<class SigTypeIn , class SigTypeOut > void process (SigTypeIn \*, SigTypeOut \*\*)

Let the parallel plugins process channel groups of the input signal.

# **Private Member Functions**

• void update ()

Load plugins in response to a value change in the algos variable.

void clear\_chains ()

Unload the plugins.

- mha\_wave\_t \* copy\_output\_wave ()
- mha\_spec\_t \* copy\_output\_spec ()

template<class SigType >

void trigger\_processing (SigType \*s\_in)

Split the argument input signal to groups of channels for the plugins and initiate signal processing.

template<class SigType >

void collect\_result (SigType \*s\_out)

Combine the output signal from the plugins.

MHASignal::waveform\_t \* signal\_out (mha\_wave\_t \*\*)

Waveform domain output signal structure accessor.

MHASignal::spectrum\_t \* signal\_out (mha\_spec\_t \*\*)

Spectrum domain output signal structure. Parameter is ignored.

#### **Private Attributes**

MHAEvents::patchbay\_t< split\_t > patchbay

Reload plugins when the algos variable changes.

MHAParser::vstring\_t algos

Vector of plugins to load in parallel.

• MHAParser::vint t channels

Number of channels to route through each plugin.

MHAParser::kw t thread platform

Thread platform chooser.

MHAParser::kw\_t worker\_thread\_scheduler

Scheduler used for worker threads.

MHAParser::int\_t worker\_thread\_priority

Priority of worker threads.

MHAParser::string\_mon\_t framework\_thread\_scheduler

Scheduler of the signal processing thread.

MHAParser::int\_mon\_t framework\_thread\_priority

Priority of signal processing thread.

MHAParser::bool t delay

Switch to activate parallel processing of plugins at the cost of one block of additional delay.

std::vector< splitted\_part\_t \* > chains

Interfaces to parallel plugins.

MHASignal::waveform\_t \* wave\_out

Combined output waveforms structure.

MHASignal::spectrum\_t \* spec\_out

Combined output spectra structure.

#### **Additional Inherited Members**

## 5.271.1 Detailed Description

## Implements split plugin.

An instance of class **split\_t** (p. 709) implements the split plugin functionality: The audio channels are splitted and groups of audio channels are processed by different plugins in parallel.

5.271.3 Member Function Documentation

Check signal parameters, prepare chains, and allocate output signal holders.

```
5.271.3.2 void MHAPlugin_Split::split_t::release_( )
```

Delete output signal holder and release chains.

```
5.271.3.3 template < class SigTypeIn , class SigTypeOut > void MHAPlugin_Split::split_t::process ( SigTypeIn * s_in, SigTypeOut ** s_out )
```

Let the parallel plugins process channel groups of the input signal.

```
5.271.3.4 void MHAPlugin Split::split t::update( ) [private]
```

Load plugins in response to a value change in the algos variable.

```
5.271.3.5 void MHAPlugin_Split::split_t::clear_chains( ) [private]
```

Unload the plugins.

```
5.271.3.6 mha_wave_t* MHAPlugin_Split::split_t::copy_output_wave( ) [private]
5.271.3.7 mha_spec_t* MHAPlugin_Split::split_t::copy_output_spec( ) [private]
```

Split the argument input signal to groups of channels for the plugins and initiate signal processing.

Combine the output signal from the plugins.

Waveform domain output signal structure accessor.

Parameter is only for domain disambiguation and is ignored.

Spectrum domain output signal structure. Parameter is ignored.

5.271.4 Member Data Documentation

**5.271.4.1** MHAEvents::patchbay\_t<split\_t> MHAPlugin\_Split::split\_t::patchbay [private]

Reload plugins when the algos variable changes.

**5.271.4.2** MHAParser::vstring\_t MHAPlugin\_Split::split\_t::algos [private]

Vector of plugins to load in parallel.

**5.271.4.3** MHAParser::vint\_t MHAPlugin\_Split::split\_t::channels [private]

Number of channels to route through each plugin.

**5.271.4.4** MHAParser::kw t MHAPlugin\_Split::split\_t::thread\_platform [private]

Thread platform chooser.

**5.271.4.5** MHAParser::kw\_t MHAPlugin\_Split::split\_t::worker\_thread\_scheduler [private]

Scheduler used for worker threads.

**5.271.4.6** MHAParser::int t MHAPlugin\_Split::split\_t::worker\_thread\_priority [private]

Priority of worker threads.

**5.271.4.7 MHAParser::string\_mon\_t** MHAPlugin\_Split::split\_t::framework\_thread\_scheduler [private]

Scheduler of the signal processing thread.

**5.271.4.8 MHAParser::int\_mon\_t** MHAPlugin\_Split::split\_t::framework\_thread\_priority [private]

Priority of signal processing thread.

**5.271.4.9** MHAParser::bool t MHAPlugin\_Split::split\_t::delay [private]

Switch to activate parallel processing of plugins at the cost of one block of additional delay.

**5.271.4.10** std::vector<splitted\_part\_t\*> MHAPlugin\_Split::split\_t::chains [private]

Interfaces to parallel plugins.

**5.271.4.11** MHASignal::waveform t\* MHAPlugin\_Split::split\_t::wave\_out [private]

Combined output waveforms structure.

**5.271.4.12** MHASignal::spectrum\_t\* MHAPlugin\_Split::split\_t::spec\_out [private]

Combined output spectra structure.


The documentation for this class was generated from the following file:

## split.cpp

## 5.272 MHAPlugin\_Split::splitted\_part\_t Class Reference

The **splitted\_part\_t** (p. 713) instance manages the plugin that performs processing on the reduced set of channels.

Inheritance diagram for MHAPlugin\_Split::splitted\_part\_t:

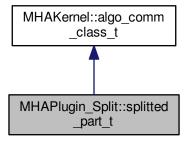

#### **Public Member Functions**

splitted\_part\_t (const std::string &plugname, MHAParser::parser\_t \*parent)

Load the plugin for this partial signal path.

• splitted\_part\_t (PluginLoader::fourway\_processor\_t \*plugin)

Create the handler for the partial signal.

• ~splitted part t () throw ()

Destructor. Deletes the plugin plug (p. 717).

 void prepare (mhaconfig\_t &signal\_parameters, const std::string &thread\_platform, const std::string &thread\_scheduler, int thread\_priority)

Delegates the prepare method to the plugin and allocates a suitable **MHAPlugin\_Split** ← ::domain\_handler\_t (p. 698) instance.

• void release ()

Delegates the release method to the plugin and deletes the **MHAPlugin\_Split::domain\_**← **handler\_t** (p. 698) instance.

std::string parse (const std::string &str)

Delegates parser incovation to plugin.

template<class SigType >

unsigned **trigger\_processing** (SigType \*s\_in, unsigned start\_channel)

The domain handler copies the input signal channels.

template<class SigType >

unsigned **collect\_result** (SigType \*s\_out, unsigned start\_channel)

Wait until processing is finished, then copy the output data.

#### **Private Member Functions**

splitted\_part\_t (const splitted\_part\_t &)

Disallow copy constructor.

splitted\_part\_t & operator= (const splitted\_part\_t &)

Disallow assignment operator.

### **Private Attributes**

PluginLoader::fourway\_processor\_t \* plug

The plugin that performs the signal processing on the prepared channels.

domain\_handler\_t \* domain

The domain specific signal handler, allocated from prepare when input and output domains and signal parameters are known.

thread platform t \* thread

The platform-dependent thread synchronization implementation.

**Additional Inherited Members** 

## 5.272.1 Detailed Description

The **splitted\_part\_t** (p. 713) instance manages the plugin that performs processing on the reduced set of channels.

The signal is split by channels by this instance, but the signal is combined again by the calling class.

#### 5.272.2 Constructor & Destructor Documentation

Disallow copy constructor.

Load the plugin for this partial signal path.

Loads the MHA plugin for a signal path of these audio channels.

#### **Parameters**

plugname	The name of the MHA plugin, optionally followed by a colon and the algorithm
	name.
parent	The parser node where the configuration of the new plugin is inserted. The plugin's parser name is the configured name (colon syntax).

Create the handler for the partial signal.

The plugin is loaded by the caller, but it will be deleted by the destructor of this class. This constructor exists solely for testing purposes.

## **Parameters**

plugin	The plugin used for processing the signal. The new splitted_part_t (p. 715)
	instance will take ownership of this instance and release it in the destructor.

```
5.272.2.4 MHAPlugin_Split::splitted_part_t::~splitted_part_t ( ) throw )
```

Destructor. Deletes the plugin **plug** (p. 717).

5.272.3 Member Function Documentation

Disallow assignment operator.

Delegates the prepare method to the plugin and allocates a suitable **MHAPlugin\_Split**—::domain\_handler\_t (p. 698) instance.

Prepare the loaded plugin.

Plugin preparation.

#### **Parameters**

signal_parameters	The signal description parameters for this path.
thread_platform	The name of the thread platform to use. Possible values: "posix", "win32", "dummy".
thread_scheduler	The name of the scheduler to use. Posix threads support "SCHED_OTHER", "SCHED_RR", "SCHED_FIFO". The other thread platforms do not support different thread schedulers. This value is not used for platforms other than "posix".
thread_priority	The new thread priority. Interpretation and permitted range depend on the thread platform and possibly on the scheduler.

```
5.272.3.3 void MHAPlugin_Split::splitted_part_t::release ( void )
```

Delegates the release method to the plugin and deletes the **MHAPlugin\_Split::domain\_**  $\leftarrow$  **handler\_t** (p. 698) instance.

Release the loaded plugin.

Plugin release.

Delegates parser incovation to plugin.

```
5.272.3.5 template < class SigType > unsigned MHAPlugin_Split::splitted_part_t::trigger_processing ( SigType * s_in, unsigned start_channel ) [inline]
```

The domain handler copies the input signal channels.

Then, processing is initiated.

#### **Parameters**

s_in	The combined input signal.
start_channel	The index (0-based) of the first channel in s_in to be copied to the partial input signal.

## **Returns**

The number of channels that were copied from the input signal

Wait until processing is finished, then copy the output data.

#### **Parameters**

s_out	The combined waveform output signal.
start_channel	The channel offset (0-based) in s_out.

#### Returns

The number of channels that were copied to the output signal

#### 5.272.4 Member Data Documentation

# 5.272.4.1 PluginLoader::fourway\_processor\_t\* MHAPlugin\_Split::splitted\_part\_t::plug [private]

The plugin that performs the signal processing on the prepared channels.

**5.272.4.2 domain\_handler\_t\*** MHAPlugin\_Split::splitted\_part\_t::domain [private]

The domain specific signal handler, allocated from prepare when input and output domains and signal parameters are known.

**5.272.4.3 thread\_platform\_t\* MHAPlugin\_Split::splitted\_part\_t::thread** [private]

The platform-dependent thread synchronization implementation.


The documentation for this class was generated from the following file:

## split.cpp

## 5.273 MHAPlugin\_Split::thread\_platform\_t Class Reference

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

Inheritance diagram for MHAPlugin\_Split::thread\_platform t:

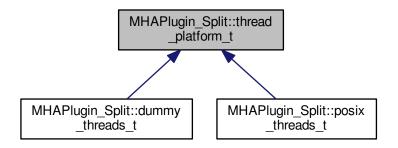

## **Public Member Functions**

thread\_platform\_t (uni\_processor\_t \*proc)

Constructor.

virtual ~thread\_platform\_t ()

Make derived classes destructable via pointer to this base class.

• virtual void kick thread ()=0

Derived classes notify their processing thread that it should call processor->process().

• virtual void catch\_thread ()=0

Derived classes wait for their signal processing thread to return from the call to part->process().

#### **Protected Attributes**

uni\_processor\_t \* processor

A pointer to the plugin loader that processes the sound data in the channels for which this thread was created.

#### **Private Member Functions**

- thread\_platform\_t (const thread\_platform\_t &)
   Disallow copy constructor.
- thread\_platform\_t & operator= (const thread\_platform\_t &)

Disallow assignment operator.

## 5.273.1 Detailed Description

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

Derived classes specialize in the actual thread platform.

```
5.273.2 Constructor & Destructor Documentation
```

Disallow copy constructor.

Constructor.

Derived classes create the thread in the constructor.

#### **Parameters**

```
proc Pointer to the associated plugin loader. This plugin loader has to live at least as long as this instance. This instance does not take possession of the plugin loader. In production code, this thread platform and the plugin loader are both created and destroyed by the MHAPlugin_Split::splitted_part_t (p. 713) instance.
```

```
5.273.2.3 virtual MHAPlugin_Split::thread_platform_t::~thread_platform_t ( ) [inline], [virtual]
```

Make derived classes destructable via pointer to this base class.

Derived classes' destructors notify the thread that it should terminate itself, and wait for the termination to occur.

5.273.3 Member Function Documentation

Disallow assignment operator.

```
5.273.3.2 virtual void MHAPlugin_Split::thread_platform_t::kick_thread() [pure virtual]
```

Derived classes notify their processing thread that it should call processor->process().

Implemented in MHAPlugin\_Split::posix\_threads\_t (p. 707), and MHAPlugin\_Split ::dummy\_threads\_t (p. 704).

```
5.273.3.3 virtual void MHAPlugin Split::thread platform t::catch thread ( ) [pure virtual]
```

Derived classes wait for their signal processing thread to return from the call to part->process().

Implemented in MHAPlugin\_Split::posix\_threads\_t (p. 707), and MHAPlugin\_Split $\leftarrow$  ::dummy threads t (p. 705).

5.273.4 Member Data Documentation

```
5.273.4.1 uni processor t* MHAPlugin_Split::thread_platform_t::processor [protected]
```

A pointer to the plugin loader that processes the sound data in the channels for which this thread was created.

Using the **MHAPlugin\_Split::uni\_processor\_t** (p. 721) interface instead of the mhaplugin-loader class directly for testability (no need to load real plugins for testing the thread platform).


The documentation for this class was generated from the following file:

split.cpp

# 5.274 MHAPlugin\_Split::uni\_processor\_t Class Reference

An interface to a class that sports a process method with no parameters and no return value.

Inheritance diagram for MHAPlugin\_Split::uni\_processor\_t:

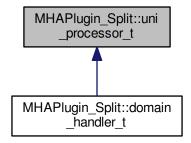

#### **Public Member Functions**

• virtual void process ()=0

This method uses some input signal, performs processing and stores the output signal somewhere.

virtual ~uni\_processor\_t ()

Classes containing virtual methods need virtual destructors.

## 5.274.1 Detailed Description

An interface to a class that sports a process method with no parameters and no return value.

No signal transfer occurs through this interface, because the signal transfer is performed in another thread than the processing.

#### 5.274.2 Constructor & Destructor Documentation

**5.274.2.1** virtual MHAPlugin\_Split::uni\_processor\_t::~uni\_processor\_t( ) [inline], [virtual]

Classes containing virtual methods need virtual destructors.

## 5.274.3 Member Function Documentation

**5.274.3.1 virtual void MHAPlugin\_Split::uni\_processor\_t::process()** [pure virtual]

This method uses some input signal, performs processing and stores the output signal somewhere

This method also has to dispatch the process call based on the configured domains.

Signal transfer and domain configuration have to be done in derived class in different methods.

Implemented in MHAPlugin\_Split::domain\_handler\_t (p. 702).


The documentation for this class was generated from the following file:

## split.cpp

# 5.275 mhaserver\_t Class Reference

MHA Framework listening on TCP port for commands.

Inheritance diagram for mhaserver\_t:

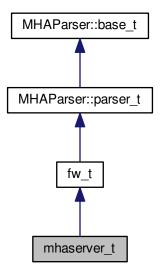

#### **Public Member Functions**

- mhaserver\_t (const std::string &ao, const std::string &af, const std::string &lf)
- ∼mhaserver t ()
- virtual std::string **received\_group** (const std::string &line)

A line of text was received from network client.

virtual void acceptor\_started (int status)

Notification: "TCP port is open".

virtual void set\_announce\_port (unsigned short announce\_port)

If set to nonzero, the spawning process has asked to be notified of the TCP port used by this process.

void logstring (const std::string &)

Log a message to log file.

int run (unsigned short port, const std::string &\_interface)

Accept network connections and act on commands.

#### **Public Attributes**

MHAParser::int\_t port

#### **Private Attributes**

- MHA\_TCP::Server \* tcpserver
- std::string ack\_ok
- std::string ack\_fail
- std::string logfile
- unsigned short announce\_port
- MHAParser::int\_mon\_t pid\_mon

# **Additional Inherited Members**

5.275.1 Detailed Description

MHA Framework listening on TCP port for commands.

5.275.2 Constructor & Destructor Documentation

## **Parameters**

а	0	Acknowledgement string at end of successful command responses
a	f	Achknoledgement string at end of failed command responses
lf		File system path of file to use as log file. MHA appends.

Accept network connections and act on commands.

unsigned short port,

const std::string & \_interface )

5.275.3.5 int mhaserver\_t::run (

Calls **acceptor\_started()** (p. 724) when the TCP port is opened. Calls received\_group for every line received.

#### Returns

exit code that can be used as process exit code

#### 5.275.4 Member Data Documentation

```
5.275.4.1 MHA_TCP::Server* mhaserver_t::tcpserver [private]
```

**5.275.4.2 std::string mhaserver\_t::ack\_ok** [private]

**5.275.4.3 std::string mhaserver\_t::ack\_fail** [private]

**5.275.4.4** std::string mhaserver\_t::logfile [private]

**5.275.4.5** unsigned short mhaserver\_t::announce\_port [private]

**5.275.4.6** MHAParser::int\_mon\_t mhaserver\_t::pid\_mon [private]

5.275.4.7 MHAParser::int\_t mhaserver\_t::port


The documentation for this class was generated from the following file:

# · mhamain.cpp

# 5.276 MHASignal::async\_rmslevel\_t Class Reference

Class for asynchronous level metering.

Inheritance diagram for MHASignal::async\_rmslevel\_t:

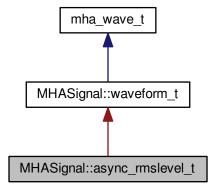

#### **Public Member Functions**

• async\_rmslevel\_t (unsigned int frames, unsigned int channels)

Constructor for level metering class.

• std::vector< float > rmslevel () const

Read-only function for querying the current RMS level.

• std::vector< float > peaklevel () const

Read-only function for querying the current peak level.

void process (mha\_wave\_t \*s)

Function to store a chunk of audio in the level meter.

## **Private Attributes**

- unsigned int pos
- unsigned int filled

#### **Additional Inherited Members**

5.276.1 Detailed Description

Class for asynchronous level metering.

5.276.2 Constructor & Destructor Documentation

Constructor for level metering class.

Allocate memory for metering. The RMS integration time corresponds to the number of frames in the buffer.

## **Parameters**

frames	Number of frames to integrate.
channels	Number of channels used for level-metering.

#### 5.276.3 Member Function Documentation

5.276.3.1 std::vector< float > MHASignal::async\_rmslevel\_t::rmslevel ( ) const

Read-only function for querying the current RMS level.

## **Returns**

Vector of floats, one value for each channel, containing the RMS level in dB (SPL if calibrated properly).

5.276.3.2 std::vector< float > MHASignal::async\_rmslevel\_t::peaklevel ( ) const

Read-only function for querying the current peak level.

#### **Returns**

Vector of floats, one value for each channel, containing the peak level in dB (SPL if calibrated properly).

```
5.276.3.3 void MHASignal::async_rmslevel_t::process ( mha_wave_t * s )
```

Function to store a chunk of audio in the level meter.

### **Parameters**

s | Audio chunk (same number of channels required as given in the constructor).

5.276.4 Member Data Documentation

**5.276.4.1 unsigned int MHASignal::async\_rmslevel\_t::pos** [private]

**5.276.4.2** unsigned int MHASignal::async\_rmslevel\_t::filled [private]

The documentation for this class was generated from the following files:

- mha\_signal.hh
- · mha\_signal.cpp

## 5.277 MHASignal::delay\_spec\_t Class Reference

**Public Member Functions** 

- delay\_spec\_t (unsigned int delay, unsigned int frames, unsigned int channels)
- ~delay spec t ()
- mha\_spec\_t \* process (mha\_spec\_t \*)

#### **Private Attributes**


- · unsigned int delay
- MHASignal::spectrum\_t \*\* buffer
- unsigned int pos
- 5.277.1 Constructor & Destructor Documentation
- 5.277.1.2 MHASignal::delay\_spec\_t::~delay\_spec\_t()
- 5.277.2 Member Function Documentation
- 5.277.2.1 mha\_spec\_t \* MHASignal::delay\_spec\_t::process ( mha\_spec\_t \* s )
- 5.277.3 Member Data Documentation
- **5.277.3.1** unsigned int MHASignal::delay\_spec\_t::delay [private]
- **5.277.3.2** MHASignal::spectrum\_t\*\* MHASignal::delay\_spec\_t::buffer [private]
- **5.277.3.3 unsigned int MHASignal::delay spec t::pos** [private]

The documentation for this class was generated from the following files:

- mha\_signal.hh
- · mha signal.cpp
- 5.278 MHASignal::delay\_t Class Reference

Class to realize a simple delay of waveform streams.

Inheritance diagram for MHASignal::delay\_t:

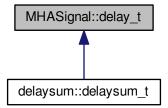

## **Public Member Functions**

- delay\_t (std::vector< int > delays, unsigned int channels)
   Constructor.
- mha\_wave\_t \* process (mha\_wave\_t \*s)
   Processing method.
- ~delay\_t ()
- std::string inspect () const

#### **Private Attributes**

- unsigned int channels
- unsigned int \* delays
- unsigned int \* pos
- mha\_real\_t \*\* buffer

# 5.278.1 Detailed Description

Class to realize a simple delay of waveform streams.

## 5.278.2 Constructor & Destructor Documentation

#### Constructor.

#### **Parameters**

delays	Vector of delays, one entry for each channel.
channels	Number of channels expected.

```
5.278.2.2 MHASignal::delay_t::~delay_t()
```

## 5.278.3 Member Function Documentation

Processing method.

## **Parameters**

s | Input waveform fragment, with number of channels provided in constructor.

#### **Returns**

Output waveform fragment.

```
5.278.3.2 std::string MHASignal::delay_t::inspect() const [inline]
5.278.4 Member Data Documentation
5.278.4.1 unsigned int MHASignal::delay_t::channels [private]
5.278.4.2 unsigned int* MHASignal::delay_t::delays [private]
5.278.4.3 unsigned int* MHASignal::delay_t::pos [private]
```

The documentation for this class was generated from the following files:

**5.278.4.4 mha\_real\_t**\*\* **MHASignal::delay\_t::buffer** [private]

- · mha\_signal.hh
- · mha signal.cpp

## 5.279 MHASignal::delay\_wave\_t Class Reference

Delayline containing wave fragments.

#### **Public Member Functions**

- delay\_wave\_t (unsigned int delay, unsigned int frames, unsigned int channels)
- ~delay\_wave\_t ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

# **Private Attributes**

- unsigned int delay
- MHASignal::waveform\_t \*\* buffer
- unsigned int pos

## 5.279.1 Detailed Description

Delayline containing wave fragments.

The delayline contains waveform fragments. The delay can be configured in integer fragments (sample delay or sub-sample delay is not possible).

```
5.279.2 Constructor & Destructor Documentation
```

```
5.279.2.2 MHASignal::delay wave t::~delay wave t()
```

5.279.3 Member Function Documentation

5.279.4 Member Data Documentation

```
5.279.4.1 unsigned int MHASignal::delay_wave_t::delay [private]
```

**5.279.4.2** MHASignal::waveform\_t\*\* MHASignal::delay\_wave\_t::buffer [private]

**5.279.4.3 unsigned int MHASignal::delay\_wave\_t::pos** [private]


The documentation for this class was generated from the following files:

- · mha signal.hh
- mha\_signal.cpp

## 5.280 MHASignal::doublebuffer\_t Class Reference

Double-buffering class.

Inheritance diagram for MHASignal::doublebuffer\_t:

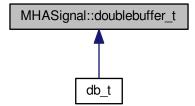

#### **Public Member Functions**

 doublebuffer\_t (unsigned int nchannels\_in, unsigned int nchannels\_out, unsigned int outer\_fragsize, unsigned int inner\_fragsize)

Constructor of double buffer.

- virtual ~doublebuffer t ()
- mha wave t \* outer process (mha wave t \*s)

Method to pass audio fragments into the inner layer.

#### **Protected Member Functions**

• virtual **mha\_wave\_t** \* **inner\_process** (**mha\_wave\_t** \*s)=0 *Method to realize inner processing callback.* 

#### **Private Member Functions**

• unsigned int **min** (unsigned int a, unsigned int b)

#### **Private Attributes**

- waveform\_t outer\_out
- · mha wave t this outer out
- · waveform tinner in
- waveform\_t inner\_out
- unsigned int k inner
- unsigned int k\_outer
- unsigned int **ch**

# 5.280.1 Detailed Description

## Double-buffering class.

This class has two layers: The outer layer, with an outer fragment size, and an inner layer, with its own fragment size. Data is passed into the inner layer through the doublebuffer\_t.::outr\_process() callback. The pure virtual method **doublebuffer\_t::inner\_process()** (p. 733) is called whenever enough data is available.

## 5.280.2 Constructor & Destructor Documentation

#### Constructor of double buffer.

#### **Parameters**

nchannels_in	Number of channels at the input (both layers).
nchannels_out	Number of channels at the output (both layers).
outer_fragsize	Fragment size of the outer layer (e.g., hardware fragment size)
inner_fragsize	Fragment size of the inner layer (e.g., software fragment size)

```
5.280.2.2 MHASignal::doublebuffer_t::~doublebuffer_t() [virtual]
```

5.280.3 Member Function Documentation

Method to pass audio fragments into the inner layer.

#### **Parameters**

s | Pointer to input waveform fragment.

#### **Returns**

Pointer to output waveform fragment.

Method to realize inner processing callback.

To be overwritten by derived classes.

## **Parameters**

s Pointer to input waveform fragment.

#### **Returns**

Pointer to output waveform fragment.

Implemented in **db\_t** (p. 238).

The documentation for this class was generated from the following files:

- mha\_signal.hh
- mha\_signal.cpp

## 5.281 MHASignal::fft\_t Class Reference

**Public Member Functions** 

- fft\_t (const unsigned int &)
- ∼fft\_t ()
- void wave2spec (const mha\_wave\_t \*, mha\_spec\_t \*, bool swap)
   fast fourier transform.
- void spec2wave (const mha\_spec\_t \*, mha\_wave\_t \*)
- void spec2wave (const mha\_spec\_t \*, mha\_wave\_t \*, unsigned int offset)
   wave may have fewer number of frames than needed for a complete iFFT.
- void forward (mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)
- void backward (mha spec t \*sIn, mha spec t \*sOut)
- void wave2spec\_scale (const mha\_wave\_t \*, mha\_spec\_t \*, bool swap)
- void spec2wave\_scale (const mha\_spec\_t \*, mha\_wave\_t \*)
- void forward\_scale (mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)
- void backward\_scale (mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

#### **Private Member Functions**

- void **sort\_fftw2spec** (fftw\_real \*s\_fftw, **mha\_spec\_t** \*s\_spec, unsigned int ch)

  Arrange the order of an fftw spectrum to the internal order.
- void **sort\_spec2fftw** (fftw\_real \*s\_fftw, const **mha\_spec\_t** \*s\_spec, unsigned int ch)

  Arrange the order of an internal spectrum to the fftw order.

#### **Private Attributes**

- · unsigned int nfft
- unsigned int n\_re
- unsigned int n\_im
- · mha real t scale
- mha\_real\_t \* buf\_in
- mha\_real\_t \* buf\_out
- rfftw\_plan\_wave2spec
- rfftw\_plan\_spec2wave
- fftw\_plan fftw\_plan\_fft
- fftw\_plan fftw\_plan\_ifft
- 5.281.1 Constructor & Destructor Documentation

```
5.281.1.1 MHASignal::fft_t::fft_t (
const unsigned int & n )
```

- 5.281.1.2 MHASignal::fft\_t:: $\sim$ fft\_t ( )
- 5.281.2 Member Function Documentation

fast fourier transform.

if swap is set, the buffer halfes of the wave signal are exchanged before computing the fft.

wave may have fewer number of frames than needed for a complete iFFT.

Only as many frames are written into wave as fit, starting with offset offset of the complete iFFT.

```
5.281.2.4 void MHASignal::fft_t::forward (
                       mha_spec_t * sln,
                       mha spec t * sOut )
5.281.2.5 void MHASignal::fft_t::backward (
                       mha spec t * sln,
                       mha_spec_t * sOut )
5.281.2.6 void MHASignal::fft_t::wave2spec_scale (
                       const mha_wave_t * wave,
                       mha_spec_t * spec,
                       bool swap )
5.281.2.7 void MHASignal::fft_t::spec2wave_scale (
                       const mha spec t * spec,
                       mha wave t * wave )
5.281.2.8 void MHASignal::fft t::forward scale (
                       mha_spec_t * sln,
                       mha_spec_t * sOut )
5.281.2.9 void MHASignal::fft_t::backward_scale (
                       mha_spec_t * sln,
                       mha_spec_t * sOut )
5.281.2.10 void MHASignal::fft_t::sort_fftw2spec (
                        fftw_real * s_fftw,
                        mha spec t * s\_spec,
                        unsigned int ch ) [private]
Arrange the order of an fftw spectrum to the internal order.
The fftw spectrum is arranged [r0 r1 r2 ... rn-1 in in-1 ... i1], while the interal order is [r0 - r1 i1
r2 i2 ... rn-1 in-1 rn –].
5.281.2.11 void MHASignal::fft_t::sort_spec2fftw (
                        fftw real * s fftw,
                        const mha_spec_t * s_spec,
```

Arrange the order of an internal spectrum to the fftw order.

unsigned int ch ) [private]

```
5.281.3.1 unsigned int MHASignal::fft_t::nfft [private]
5.281.3.2 unsigned int MHASignal::fft_t::n_re [private]
5.281.3.3 unsigned int MHASignal::fft_t::n_im [private]
5.281.3.4 mha_real_t MHASignal::fft_t::scale [private]
5.281.3.5 mha_real_t* MHASignal::fft_t::buf_in [private]
5.281.3.6 mha_real_t* MHASignal::fft_t::buf_out [private]
5.281.3.7 rfftw_plan MHASignal::fft_t::fftw_plan_wave2spec [private]
5.281.3.8 rfftw_plan MHASignal::fft_t::fftw_plan_spec2wave [private]
5.281.3.9 fftw_plan MHASignal::fft_t::fftw_plan_fft [private]
5.281.3.10 fftw_plan MHASignal::fft_t::fftw_plan_ifft [private]
```

The documentation for this class was generated from the following files:

- mha signal fft.h
- mha\_signal.cpp

# 5.282 MHASignal::hilbert\_fftw\_t Class Reference

#### **Public Member Functions**

- hilbert\_fftw\_t (unsigned int len)
- void hilbert (const mha\_wave\_t \*, mha\_wave\_t \*)

## **Private Attributes**

- unsigned int n
- rfftw\_plan **p1**
- fftw\_plan p2
- fftw real \* buf r in
- fftw\_real \* buf\_r\_out
- fftw\_complex \* buf\_c\_in
- fftw\_complex \* buf\_c\_out
- mha\_real\_t sc

```
5.282.1 Constructor & Destructor Documentation
5.282.1.1
          MHASignal::hilbert_fftw_t::hilbert_fftw_t (
                       unsigned int len )
5.282.2 Member Function Documentation
5.282.2.1
          void MHASignal::hilbert_fftw_t::hilbert (
                       const mha_wave_t * s_in,
                       mha wave t * s out)
5.282.3
        Member Data Documentation
5.282.3.1
          unsigned int MHASignal::hilbert_fftw_t::n [private]
5.282.3.2
          rfftw_plan MHASignal::hilbert_fftw_t::p1 [private]
5.282.3.3 fftw_plan MHASignal::hilbert_fftw_t::p2 [private]
5.282.3.4 fftw_real* MHASignal::hilbert_fftw_t::buf_r_in [private]
5.282.3.5 fftw_real* MHASignal::hilbert_fftw_t::buf_r_out [private]
5.282.3.6
          fftw_complex* MHASignal::hilbert_fftw_t::buf_c_in [private]
5.282.3.7
          fftw_complex* MHASignal::hilbert_fftw_t::buf_c_out [private]
5.282.3.8 mha_real_t MHASignal::hilbert_fftw_t::sc [private]
```


The documentation for this class was generated from the following file:

## · mha\_signal.cpp

## 5.283 MHASignal::hilbert t Class Reference

Hilbert transformation of a waveform segment.

Inheritance diagram for MHASignal::hilbert\_t:

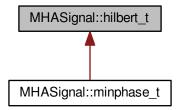

**Public Member Functions** 

- hilbert\_t (unsigned int len)
- ∼hilbert\_t ()
- void operator() (const mha\_wave\_t \*, mha\_wave\_t \*)

Apply Hilbert transformation on a waveform segment.

**Private Attributes** 

• void \* **h** 

#### 5.283.1 Detailed Description

Hilbert transformation of a waveform segment.

Returns the imaginary part of the inverse Fourier transformation of the Fourier transformed input signal with negative frequencies set to zero.

```
5.283.2 Constructor & Destructor Documentation
```

```
5.283.2.1 MHASignal::hilbert_t::hilbert_t ( unsigned int len )
```

## **Parameters**

```
len Length of waveform segment
```

```
5.283.2.2 MHASignal::hilbert_t::~hilbert_t ( )
```

5.283.3 Member Function Documentation

Apply Hilbert transformation on a waveform segment.

5.283.4 Member Data Documentation

```
5.283.4.1 void* MHASignal::hilbert_t::h [private]
```


The documentation for this class was generated from the following files:

- · mha signal.hh
- mha\_signal.cpp

# 5.284 MHASignal::loop\_wavefragment\_t Class Reference

Copy a fixed waveform fragment to a series of waveform fragments of other size.

Inheritance diagram for MHASignal::loop\_wavefragment\_t:

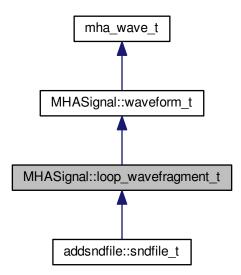

## **Public Types**

### **Public Member Functions**

 loop\_wavefragment\_t (const mha\_wave\_t &src, bool loop, level\_mode\_t level\_mode, std::vector< int > channels, unsigned int startpos=0)

Constructor to create an instance of **loop\_wavefragment\_t** (p. 740) based on an existing waveform block.

- std::vector< int > get\_mapping (unsigned int channels)
- void playback (mha\_wave\_t \*s, playback\_mode\_t pmode, mha\_wave\_t \*level\_pa, const std::vector< int > &channels)

Add source waveform block to an output block.

- void playback (mha\_wave\_t \*s, playback\_mode\_t pmode, mha\_wave\_t \*level\_pa)

  Add source waveform block to an output block.
- void playback (mha\_wave\_t \*s, playback\_mode\_t pmode)

Add source waveform block to an output block.

- void set\_level\_lin (mha\_real\_t l)
- void set\_level\_db (mha\_real\_t l)
- void rewind ()
- void locate\_end ()
- bool is\_playback\_active () const

### **Private Attributes**

- std::vector< int > playback channels
- bool b loop
- unsigned int pos
- MHASignal::waveform\_t intern\_level

### **Additional Inherited Members**

## 5.284.1 Detailed Description

Copy a fixed waveform fragment to a series of waveform fragments of other size.

This class is designed to continously play back a waveform to an output stream, with variable output block size.

### 5.284.2 Member Enumeration Documentation

```
5.284.2.1 enum MHASignal::loop wavefragment t::level mode t
```

Switch for playback level mode.

### **Enumerator**

```
relative The nominal level is applied as a gain to the source signal.
peak The nominal level is the peak level of source signal in Pascal.
rms The nominal level is the RMS level of the source signal in Pascal.
rms limit40
```

## 5.284.2.2 enum MHASignal::loop\_wavefragment\_t::playback\_mode\_t

Switch for playback mode.

### **Enumerator**

```
add Add source signal to output stream.
replace Replace output stream by source signal.
input Do nothing, keep output stream (source position is unchanged).
mute Mute output stream (source position is unchanged).
```

#### 5.284.3 Constructor & Destructor Documentation

Constructor to create an instance of **loop\_wavefragment\_t** (p. 740) based on an existing waveform block.

## **Parameters**

src	Waveform block to copy data from.
Іоор	Flag whether the block should be looped or played once.
level_mode	, , , , , , , , , , , , , , , , , , , ,
	MHASignal::loop_wavefragment_t::level_mode_t (p. 741) for details)
channels	MHASignal::loop_wavefragment_t::level_mode_t (p. 741) for details)  Mapping of input to output channels.

## 5.284.4 Member Function Documentation

```
5.284.4.1 std::vector< int > MHASignal::loop_wavefragment_t::get_mapping ( unsigned int channels )
```

Add source waveform block to an output block.

## **Parameters**

S	Output block (streamed signal).
pmode	Playback mode (add, replace, input, mute).
level_pa	Linear output level/gain (depending on level_mode parameter in constructor); one value for each sample in output block.
channels	Output channels

Add source waveform block to an output block.

## **Parameters**

s	Output block (streamed signal).
pmode	Playback mode (add, replace, input, mute).
level_pa	Linear output level/gain (depending on level_mode parameter in constructor); one value for each sample in output block.

Add source waveform block to an output block.

#### **Parameters**

S	Output block (streamed signal).	
pmode	Playback mode (add, replace, input, mute).	

```
5.284.4.5 void MHASignal::loop_wavefragment_t::set_level_lin (
                     mha real t/)
5.284.4.6 void MHASignal::loop_wavefragment_t::set_level_db (
                     mha real t/)
5.284.4.7 void MHASignal::loop_wavefragment_t::rewind() [inline]
5.284.4.8 void MHASignal::loop_wavefragment_t::locate_end() [inline]
5.284.4.9 bool MHASignal::loop_wavefragment_t::is_playback_active( ) const [inline]
5.284.5 Member Data Documentation
5.284.5.1 std::vector<int> MHASignal::loop_wavefragment_t::playback_channels [private]
5.284.5.2 bool MHASignal::loop_wavefragment_t::b_loop [private]
5.284.5.3 unsigned int MHASignal::loop_wavefragment_t::pos [private]
5.284.5.4 MHASignal::waveform t MHASignal::loop_wavefragment_t::intern_level [private]
```


The documentation for this class was generated from the following files:

- · mha signal.hh
- mha\_signal.cpp

# 5.285 MHASignal::matrix t Class Reference

n-dimensional matrix with real or complex floating point values.

Inheritance diagram for MHASignal::matrix\_t:

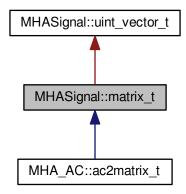

## **Public Member Functions**

- matrix\_t (unsigned int nrows, unsigned int ncols, bool b\_is\_complex=true)
   Create a two-dimensional matrix.
- matrix\_t (const mha\_spec\_t &spec)

Create a two-dimensional matrix from a spectrum, copy values.

- matrix\_t (const MHASignal::uint\_vector\_t &size, bool b\_is\_complex=true)
   Create n-dimensional matrix, descriped by size argument.
- matrix t (const MHASignal::matrix t &)
- matrix t (const uint8 t \*buf, unsigned int len)

Construct from memory area.

- ∼matrix t ()
- MHASignal::matrix t & operator= (const MHASignal::matrix t &)
- MHASignal::matrix\_t & operator= (const comm\_var\_t &v)

Fill matrix with data of an AC variable object.

comm\_var\_t get\_comm\_var ()

Return a AC communication variable pointing to the data of the current matrix.

• unsigned int dimension () const

Return the dimension of the matrix.

• unsigned int size (unsigned int k) const

Return the size of the matrix.

• unsigned int **get\_nelements** () const

Return total number of elements.

bool is\_same\_size (const MHASignal::matrix\_t &)

Test if matrix has same size as other.

• bool iscomplex () const

Return information about complexity.

mha\_real\_t & real (const MHASignal::uint\_vector\_t &index)

Access real part of an element in a n-dimensional matrix.

mha\_real\_t & imag (const MHASignal::uint\_vector\_t &index)

Access imaginary part of an element in a n-dimensional matrix.

mha\_complex\_t & operator() (const MHASignal::uint\_vector\_t &index)

Access complex value of an element in a n-dimensional matrix.

const mha\_real\_t & real (const MHASignal::uint\_vector\_t &index) const
 Access real part of an element in a n-dimensional matrix.

const mha\_real\_t & imag (const MHASignal::uint\_vector\_t &index) const

Access imaginary part of an element in a n-dimensional matrix.

• const mha\_complex\_t & operator() (const MHASignal::uint\_vector\_t &index) const Access complex value of an element in a n-dimensional matrix.

• mha\_real\_t & real (unsigned int row, unsigned int col)

Access real part of an element in a two-dimensional matrix.

mha\_real\_t & imag (unsigned int row, unsigned int col)

Access imaginary part of an element in a two-dimensional matrix.

mha\_complex\_t & operator() (unsigned int row, unsigned int col)

Access complex value of an element in a two-dimensional matrix.

• const mha\_real\_t & real (unsigned int row, unsigned int col) const

Access real part of an element in a two-dimensional matrix.

• const mha\_real\_t & imag (unsigned int row, unsigned int col) const

Access imaginary part of an element in a two-dimensional matrix.

• const mha\_complex\_t & operator() (unsigned int row, unsigned int col) const

Access complex value of an element in a two-dimensional matrix.

- unsigned int **get\_nreals** () const
- unsigned int get\_index (unsigned int row, unsigned int col) const
- unsigned int **get\_index** (const **MHASignal::uint\_vector\_t** &index) const
- unsigned int **numbytes** () const

Return number of bytes needed to store into memory.

unsigned int write (uint8\_t \*buf, unsigned int len) const

Copy to memory area.

const mha\_real\_t \* get\_rdata () const

Return pointer of real data.

const mha\_complex\_t \* get\_cdata () const

Return pointer of complex data.

## **Private Attributes**

```
uint32_t complex_ofs
uint32_t nelements
union {
    mha_real_t * rdata
    mha_complex_t * cdata
};
```

## **Additional Inherited Members**

## 5.285.1 Detailed Description

n-dimensional matrix with real or complex floating point values.

## Warning

The member functions **imag()** (p. 749) and operator() should only be called if the matrix is defined to hold complex values.

### 5.285.2 Constructor & Destructor Documentation

Create a two-dimensional matrix.

## **Parameters**

nrows	Number of rows
ncols	Number of columns
b_is_complex	Add space for complex values

Create a two-dimensional matrix from a spectrum, copy values.

#### **Parameters**

spec	Source spectrum structure
------	---------------------------

Create n-dimensional matrix, descriped by size argument.

#### **Parameters**

size	Size vector
b_is_complex	Add space for complex values

Construct from memory area.

## Warning

This constructor is not real time safe

```
5.285.2.6 MHASignal::matrix_t::~matrix_t ( )
```

5.285.3 Member Function Documentation

Fill matrix with data of an AC variable object.

## **Parameters**

```
v Source AC variable (comm_var_t (p. 232))
```

### Note

The type and dimension of the AC variable must match the type and dimension of the matrix.

```
5.285.3.3 comm_var_t MHASignal::matrix_t::get_comm_var( )
```

Return a AC communication variable pointing to the data of the current matrix.

## **Returns**

AC variable object (**comm\_var\_t** (p. 232)), valid for the life time of the matrix.

```
5.285.3.4 unsigned int MHASignal::matrix_t::dimension ( ) const [inline]
```

Return the dimension of the matrix.

### **Returns**

Dimension of the matrix

Return the size of the matrix.

### **Parameters**

```
k Dimension
```

## **Returns**

Size of the matrix in dimension k

```
5.285.3.6 unsigned int MHASignal::matrix_t::get_nelements ( ) const
```

Return total number of elements.

Test if matrix has same size as other.

```
5.285.3.8 bool MHASignal::matrix_t::iscomplex ( ) const [inline]
```

Return information about complexity.

Access real part of an element in a n-dimensional matrix.

### **Parameters**

index Index vector	index	Index vector
--------------------	-------	--------------

```
5.285.3.10 mha_real_t& MHASignal::matrix_t::imag (

const MHASignal::uint_vector_t & index ) [inline]
```

Access imaginary part of an element in a n-dimensional matrix.

## **Parameters**

```
index Index vector
```

Access complex value of an element in a n-dimensional matrix.

### **Parameters**

```
index Index vector
```

Access real part of an element in a n-dimensional matrix.

## **Parameters**

Access imaginary part of an element in a n-dimensional matrix.

### **Parameters**

index	Index vector
muex	muex vector

Access complex value of an element in a n-dimensional matrix.

### **Parameters**

index Index vector	•
--------------------	---

Access real part of an element in a two-dimensional matrix.

### **Parameters**

row	Row number of element
col	Column number of element

Access imaginary part of an element in a two-dimensional matrix.

# **Parameters**

row	Row number of element
col	Column number of element

Access complex value of an element in a two-dimensional matrix.

### **Parameters**

row	Row number of element
col	Column number of element

Access real part of an element in a two-dimensional matrix.

#### **Parameters**

row	Row number of element
col	Column number of element

Access imaginary part of an element in a two-dimensional matrix.

### **Parameters**

row	Row number of element
col	Column number of element

Access complex value of an element in a two-dimensional matrix.

### **Parameters**

row	Row number of element
col	Column number of element

Return number of bytes needed to store into memory.

```
5.285.3.25 unsigned int MHASignal::matrix_t::write ( uint8_t * buf, unsigned int len ) const
```

Copy to memory area.

5.285.3.26 const mha\_real\_t\* MHASignal::matrix\_t::get\_rdata() const [inline]

Return pointer of real data.

5.285.3.27 const mha complex t\* MHASignal::matrix\_t::get\_cdata() const [inline]

Return pointer of complex data.

5.285.4 Member Data Documentation

```
5.285.4.1 uint32 t MHASignal::matrix t::complex ofs [private]
```

**5.285.4.2 uint32\_t MHASignal::matrix\_t::nelements** [private]

5.285.4.3 mha real t\* MHASignal::matrix\_t::rdata

5.285.4.4 mha\_complex\_t\* MHASignal::matrix\_t::cdata

**5.285.4.5 union {...}** [private]


The documentation for this class was generated from the following files:

- mha\_signal.hh
- mha\_signal.cpp

5.286 MHASignal::minphase\_t Class Reference

Minimal phase function.

Inheritance diagram for MHASignal::minphase t:

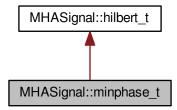

**Public Member Functions** 

- minphase\_t (unsigned int fftlen, unsigned int ch)
   Constructor.
- void operator() (mha\_spec\_t \*s)

Transform input spectrum to a minimal-phase spectrum, discarding the original phase.

**Private Attributes** 

MHASignal::waveform\_t phase

**Additional Inherited Members** 

5.286.1 Detailed Description

Minimal phase function.

The output spectrum Y(f) is

$$Y(f) = |X(f)|e^{i\mathcal{H}\{\log|X(f)|\}},$$

with the input spectrum X(f) and the Hilbert transformation  $\mathcal{H}\{\cdots\}$ .

5.286.2 Constructor & Destructor Documentation

Constructor.

#### **Parameters**

fftlen	FFT length
ch	Number of channels

5.286.3 Member Function Documentation

Transform input spectrum to a minimal-phase spectrum, discarding the original phase.

## **Parameters**

s | Spectrum to operate on.

5.286.4 Member Data Documentation

5.286.4.1 MHASignal::waveform\_t MHASignal::minphase\_t::phase [private]

The documentation for this class was generated from the following files:

- mha\_signal.hh
- mha\_signal.cpp

5.287 MHASignal::quantizer\_t Class Reference

Simple simulation of fixpoint quantization.

**Public Member Functions** 

- quantizer\_t (unsigned int num\_bits)
   Constructor.
- void operator() (mha\_wave\_t &s)
   Quantization of a waveform fragment.

## **Private Attributes**

- · bool limit
- mha\_real\_t upscale
- mha\_real\_t downscale
- · mha real tup limit
- 5.287.1 Detailed Description

Simple simulation of fixpoint quantization.

5.287.2 Constructor & Destructor Documentation

5.287.2.1 MHASignal::quantizer\_t::quantizer\_t ( unsigned int *num\_bits* )

Constructor.

### **Parameters**

### 5.287.3 Member Function Documentation

Quantization of a waveform fragment.

## **Parameters**

```
s | Waveform fragment to be quantized.
```

## 5.287.4 Member Data Documentation

```
5.287.4.1 bool MHASignal::quantizer_t::limit [private]
```

```
5.287.4.2 mha_real_t MHASignal::quantizer_t::upscale [private]
```

```
5.287.4.3 mha_real_t MHASignal::quantizer_t::downscale [private]
```

```
5.287.4.4 mha_real_t MHASignal::quantizer_t::up_limit [private]
```


The documentation for this class was generated from the following files:

- mha\_signal.hh
- mha signal.cpp

# 5.288 MHASignal::ringbuffer\_t Class Reference

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

Inheritance diagram for MHASignal::ringbuffer\_t:

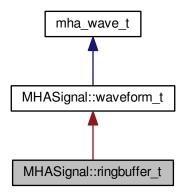

#### **Public Member Functions**

- ringbuffer\_t (unsigned frames, unsigned channels, unsigned prefilled\_frames)

  Creates new ringbuffer for time domain signal.
- unsigned **contained\_frames** () const number of currently contained frames
- mha\_real\_t & value (unsigned frame, unsigned channel)

Access to value stored in ringbuffer.

void discard (unsigned frames)

Discards the oldest frames.

void write (mha\_wave\_t &signal)

Copies the contents of the signal into the ringbuffer if there is enough space.

## **Private Attributes**

unsigned next\_read\_frame\_index
 Index of oldest frame in underlying storage for the ringbuffer.

unsigned next\_write\_frame\_index

Index of first free frame in underlying storage.

#### **Additional Inherited Members**

### 5.288.1 Detailed Description

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

Blocks of audio signal can be placed into the ringbuffer using the **write** (p. 758) method. Individual audio samples can be accessed and altered using the **value** (p. 757) method. Blocks of audio data can be deleted from the ringbuffer using the **discard** (p. 758) method.

### 5.288.2 Constructor & Destructor Documentation

Creates new ringbuffer for time domain signal.

Constructor allocates enough storage so that *frames* audio samples can be stored in the ring-buffer.

### **Parameters**

frames	Size of ringbuffer in samples per channel. Maximum number of frames that can be stored in the ringbuffer at one time. This number cannot be changed after instance creation.
channels	Number of audio channels.
prefilled_frames	Number of frames to be prefilled with zero values. Many applications of a ringbuffer require the introduction of a delay. In practice, this delay is achieved by inserting silence audio samples (zeros) into the ringbuffer before the start of the actual signal is inserted for the first time.

## **Exceptions**

### 5.288.3 Member Function Documentation

```
5.288.3.1 unsigned MHASignal::ringbuffer_t::contained_frames( ) const [inline]
```

number of currently contained frames

Access to value stored in ringbuffer.

*frame* index is relative to the oldest frame stored in the ringbuffer, therefore, the meaning of the *frame* changes when the **discard** (p. 758) method is called.

### **Parameters**

frame	frame index, 0 corresponds to oldest frame stored.
channel	audio channel

### **Returns**

reference to contained sample value

## **Exceptions**

```
MHA_Error (p. 413) if channel or frame out of bounds.
```

```
5.288.3.3 void MHASignal::ringbuffer_t::discard (
unsigned frames ) [inline]
```

Discards the oldest frames.

Makes room for new write (p. 758), alters base frame index for value (p. 757)

### **Parameters**

```
frames how many frames to discard.
```

## **Exceptions**

```
MHA_Error (p. 413) if frames > contained_frames (p. 757)
```

```
5.288.3.4 void MHASignal::ringbuffer_t::write (

mha_wave_t & signal) [inline]
```

Copies the contents of the signal into the ringbuffer if there is enough space.

## **Parameters**

signal New signal to be appended to the signal already present in the ringbuffer

# **Exceptions**

<b>MHA_Error</b> (p. 413)	if there is not enough space or if the channel count mismatches.
	Nothing is copied if the space is insufficient.

5.288.4 Member Data Documentation

**5.288.4.1 unsigned MHASignal::ringbuffer\_t::next\_read\_frame\_index** [private]

Index of oldest frame in underlying storage for the ringbuffer.

This value is added to the frame parameter of the **value** (p. 757) method, and this value is altered when **discard** (p. 758) is called.

**5.288.4.2 unsigned MHASignal::ringbuffer\_t::next\_write\_frame\_index** [private]

Index of first free frame in underlying storage.

Next frame to be stored will be placed here.


The documentation for this class was generated from the following files:

- mha\_signal.hh
- mha\_signal.cpp

5.289 MHASignal::schroeder\_t Class Reference

Schroeder tone complex class.

Inheritance diagram for MHASignal::schroeder\_t:

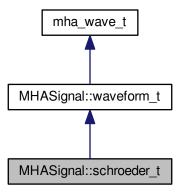

## **Public Types**

• typedef float(\* **groupdelay\_t**) (float f, float fmin, float fmax)

Function type for group delay definition.

### **Public Member Functions**

 schroeder\_t (unsigned int len, unsigned int channels=1, schroeder\_t::sign\_t sign=up, mha\_real\_t speed=1)

Constructor.

• schroeder\_t (unsigned int len, unsigned int channels=1, schroeder\_t::groupdelay\_t freqfun=MHASignal::schroeder\_t::identity, float fmin=0, float fmax=1, float eps=1e-10)

Construct create Schroeder tone complex from a given frequency function.

#### Static Public Member Functions

- static float **identity** (float x, float, float)
- static float **log\_up** (float x, float fmin, float fmax)
- static float **log\_down** (float x, float fmin, float fmax)

### **Additional Inherited Members**

### 5.289.1 Detailed Description

Schroeder tone complex class.

The Schroeder tone complex is a sweep defined in the sampled spectrum:

$$\Phi(f) = \sigma 2\pi \tau (2f/f_s)^{2\alpha}, \quad S(f) = e^{i\Phi(f)}$$

f is the sampled frequency in Hz,  $\sigma$  is the sign of the sweep (-1 for up sweep, +1 for down sweep),  $\tau$  is the sweep duration in samples,  $f_s$  is the sampling rate in Hz and  $\alpha$  is the relative sweep speed.

## 5.289.2 Member Typedef Documentation

5.289.2.1 typedef float(\* MHASignal::schroeder\_t::groupdelay\_t) (float f, float fmin, float fmax)

Function type for group delay definition.

## **Parameters**

f	Frequency relative to Nyquist frequency.
fmin	Minimum frequency relative to Nyquist frequency.
fmax	Maximum frequency relative to Nyquist frequency.

### 5.289.3 Member Enumeration Documentation

```
5.289.3.1 enum MHASignal::schroeder_t::sign_t
```

Enumerator for sign of Schroeder tone complex sweep direction.

### **Enumerator**

```
\it up Sweep from zero to Nyquist frequency ( \sigma=-1) \it down Sweep from Nyquist frequency to zero ( \sigma=+1)
```

#### 5.289.4 Constructor & Destructor Documentation

### Constructor.

Parameters of the Schroeder tone complex are configured in the constructor.

#### **Parameters**

len	Length $ au$ of the Schroeder tone complex in samples
channels	Number of channels
sign	Sign $\sigma$ of Schroeder sweep
speed	Relative speed $\alpha$ (curvature of phase function)

Construct create Schroeder tone complex from a given frequency function.

The frequency function g(f) defines the sweep speed and sign (based on the group delay). It must be defined in the interval [0,1) and should return values in the interval [0,1].

$$\Phi(f) = -4\pi\tau \int\limits_0^\tau g(f)\,\mathrm{d}f, \quad S(f) = e^{i\Phi(f)}$$

## **Parameters**

len	len Length $ au$ of the Schroeder tone complex in samples.	
channels	nannels Number of channels.	
freqfun	q fun Frequency function $g(f)$ .	
fmin	Start frequency (relative to Nyquist frequency).	
fmax	fmax End frequency (relative to Nyquist frequency).	
eps Stability constant for frequency ranges not covered by Schroeder tone comple		

## 5.289.5 Member Function Documentation


The documentation for this class was generated from the following files:

float fmax ) [inline],[static]

- mha\_signal.hh
- mha\_signal.cpp
- 5.290 MHASignal::spectrum\_t Class Reference

a signal processing class for spectral data (based on **mha\_spec\_t** (p. 432))

Inheritance diagram for MHASignal::spectrum\_t:

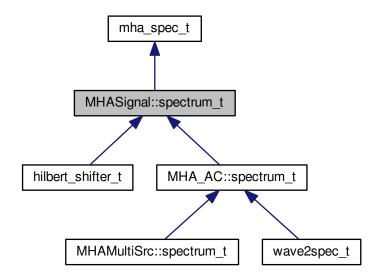

## **Public Member Functions**

- spectrum\_t (const unsigned int &frames, const unsigned int &channels)
   constructor of spectrum class
- spectrum\_t (const mha\_spec\_t &)

Copy constructor.

spectrum\_t (const MHASignal::spectrum\_t &)

Copy constructor.

- spectrum\_t (const std::vector< mha\_complex\_t > &)
- virtual ~spectrum\_t (void)
- mha\_complex\_t & operator() (unsigned int f, unsigned int ch)

Access to element.

mha\_complex\_t & operator[] (unsigned int k)

Access to a single element, direct index into data buffer.

• mha\_complex\_t & value (unsigned int f, unsigned int ch)

Access to element.

void copy (const mha\_spec\_t &)

copy all elements from a spectrum

• void **copy\_channel** (const **mha\_spec\_t** &s, unsigned sch, unsigned dch)

Copy one channel of a given spectrum signal to a target channel.

void export\_to (mha\_spec\_t &)

copy elements to spectrum structure

void scale (const unsigned int &, const unsigned int &, const unsigned int &, const mha
 —real\_t &)

```
scale section [a,b) in channel "ch" by "val"
```

void scale\_channel (const unsigned int &, const mha\_real\_t &)
 scale all elements in one channel

**Additional Inherited Members** 

5.290.1 Detailed Description

a signal processing class for spectral data (based on **mha\_spec\_t** (p. 432))

5.290.2 Constructor & Destructor Documentation

constructor of spectrum class

Allocates buffers and initializes memory to zeros.

### **Parameters**

frames	number of frames (fft bins) in one channel. Number of Frames is usually fftlen / 2 + 1
channels	number of channels

void ) [virtual]

Reimplemented in MHA\_AC::spectrum\_t (p. 392).

## 5.290.3 Member Function Documentation

Access to element.

### **Parameters**

f	Bin number
ch	Channel number

## **Returns**

Reference to element

Access to a single element, direct index into data buffer.

## **Parameters**

### Returns

Reference to element

Access to element.

## **Parameters**

f	Bin number	
ch	Channel number	

## **Returns**

Reference to element

```
5.290.3.4 void spectrum_t::copy (
const mha_spec_t & src )
```

copy all elements from a spectrum

## **Parameters**

src input spec	ctrum
----------------	-------

Copy one channel of a given spectrum signal to a target channel.

### **Parameters**

S	s Input spectrum signal	
sch	Channel index in source signal	
dch	Channel index in destination (this) signal	

copy elements to spectrum structure

## **Parameters**

dest	destination spectrum structure
------	--------------------------------

scale section [a,b) in channel "ch" by "val"

### **Parameters**

а	starting frame
b	end frame (excluded)
ch	channel number
val	scale factor

scale all elements in one channel

#### **Parameters**


ch	channel number
src	scale factor

The documentation for this class was generated from the following files:

- · mha\_signal.hh
- mha\_signal.cpp

# 5.291 MHASignal::stat\_t Class Reference

Inheritance diagram for MHASignal::stat\_t:

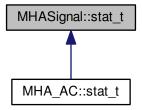

## **Public Member Functions**

- stat\_t (const unsigned int &frames, const unsigned int &channels)
- void mean (mha\_wave\_t &m)
- void mean\_std (mha\_wave\_t &m, mha\_wave\_t &s)
- void push (const mha\_wave\_t &)
- void **push** (const **mha\_real\_t** &x, const unsigned int &k, const unsigned int &ch)

## **Private Attributes**

- MHASignal::waveform\_t n
- MHASignal::waveform\_t sum
- MHASignal::waveform\_t sum2

```
5.291.1 Constructor & Destructor Documentation
5.291.1.1 MHASignal::stat_t::stat_t (
                      const unsigned int & frames,
                      const unsigned int & channels )
5.291.2 Member Function Documentation
5.291.2.1 void MHASignal::stat_t::mean (
                      mha wave t&m)
5.291.2.2 void MHASignal::stat_t::mean_std (
                      mha_wave_t & m,
                      mha_wave_t & s)
5.291.2.3 void MHASignal::stat_t::push (
                      const mha_wave_t & x )
5.291.2.4 void MHASignal::stat_t::push (
                      const mha_real_t & x,
                      const unsigned int & k,
                      const unsigned int & ch )
5.291.3 Member Data Documentation
5.291.3.1
          MHASignal::waveform_t MHASignal::stat_t::n [private]
5.291.3.2 MHASignal::waveform t MHASignal::stat_t::sum [private]
5.291.3.3
          MHASignal::waveform_t MHASignal::stat_t::sum2 [private]
The documentation for this class was generated from the following files:
   mha_signal.hh
```

5.292 MHASignal::subsample\_delay\_t Class Reference

implements subsample delay in spectral domain.

· mha signal.cpp

#### **Public Member Functions**

- **subsample\_delay\_t** (const std::vector< float > &subsample\_delay, unsigned fftlen)

  Constructor computes complex phase factors to apply to achieve subsample delay.
- void process (mha\_spec\_t \*s)

Apply the phase\_gains to s to achieve the subsample delay.

void process (mha\_spec\_t \*s, unsigned idx)

Apply the pase gains to channel idx in s to achieve the subsample delay in channel idx.

#### **Public Attributes**

spectrum\_t phase\_gains

The complex factors to apply to achieve the necessary phase shift.

### **Private Attributes**

• unsigned last\_complex\_bin

index of the last complex fft bin for the used fft length.

## 5.292.1 Detailed Description

implements subsample delay in spectral domain.

When transformed back to the time domain, the signal is delayed by the configured fraction of a sample. This operation must not be used in a smoothgains bracket.

5.292.2 Constructor & Destructor Documentation

Constructor computes complex phase factors to apply to achieve subsample delay.

## **Parameters**

subsample_delay	The subsample delay to apply0.5 <= subsample_delay <= 0.5
fftlen	FFT length

## **Exceptions**

## 5.292.3 Member Function Documentation

```
5.292.3.1 void MHASignal::subsample_delay_t::process ( mha spec t * s )
```

Apply the phase\_gains to s to achieve the subsample delay.

```
5.292.3.2 void MHASignal::subsample_delay_t::process ( mha_spec_t * s, unsigned idx )
```

Apply the pase gains to channel idx in s to achieve the subsample delay in channel idx.

## **Parameters**

s	signal
idx	channel index, 0-based

## **Exceptions**

```
MHA_Error (p. 413) if idx >= s->num_channels
```

### 5.292.4 Member Data Documentation

5.292.4.1 spectrum\_t MHASignal::subsample\_delay\_t::phase\_gains

The complex factors to apply to achieve the necessary phase shift.

**5.292.4.2** unsigned MHASignal::subsample\_delay\_t::last\_complex\_bin [private]

index of the last complex fft bin for the used fft length.


The documentation for this class was generated from the following files:

- · mha\_signal.hh
- mha\_signal.cpp

# 5.293 MHASignal::uint\_vector\_t Class Reference

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

Inheritance diagram for MHASignal::uint\_vector\_t:

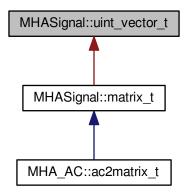

## **Public Member Functions**

uint\_vector\_t (unsigned int len)

Constructor, initializes all elements to zero.

- uint\_vector\_t (const uint\_vector\_t &)
- uint\_vector\_t (const uint8\_t \*buf, unsigned int len)
   Construct from memory area.
- • • •
- $\sim$ uint\_vector\_t ()
- bool operator== (const uint\_vector\_t &) const Check for equality.
- uint vector t & operator= (const uint vector t &)

Assign from other uint\_vector\_t (p. 771).

• unsigned int get length () const

Return the length of the vector.

const uint32\_t & operator[] (unsigned int k) const

Read-only access to elements.

uint32\_t & operator[] (unsigned int k)

Access to elements.

unsigned int numbytes () const

Return number of bytes needed to store into memory.

• unsigned int **write** (uint8\_t \*buf, unsigned int len) const

Copy to memory area.

• const uint32\_t \* **getdata** () const

Return pointer to the data field.

## **Protected Attributes**

```
• uint32_t length
```

```
• uint32_t * data
```

## 5.293.1 Detailed Description

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

```
5.293.2 Constructor & Destructor Documentation
```

```
5.293.2.1 MHASignal::uint_vector_t::uint_vector_t ( unsigned int len )
```

Constructor, initializes all elements to zero.

### **Parameters**

```
len Length of vector.
```

Construct from memory area.

# Warning

This constructor is not real time safe

```
5.293.2.4 MHASignal::uint_vector_t::~uint_vector_t ( )
```

5.293.3 Member Function Documentation

Check for equality.

Assign from other **uint\_vector\_t** (p. 771).

Warning

This assignment will fail if the lengths mismatch.

```
5.293.3.3 unsigned int MHASignal::uint_vector_t::get_length() const [inline]
```

Return the length of the vector.

Read-only access to elements.

Access to elements.

5.293.3.6 unsigned int MHASignal::uint\_vector\_t::numbytes ( ) const

Return number of bytes needed to store into memory.

Copy to memory area.

```
5.293.3.8 const uint32_t* MHASignal::uint_vector_t::getdata( ) const [inline]
```

Return pointer to the data field.

5.293.4 Member Data Documentation

```
5.293.4.1 uint32_t MHASignal::uint_vector_t::length [protected]
```

**5.293.4.2 uint32\_t\* MHASignal::uint\_vector\_t::data** [protected]


The documentation for this class was generated from the following files:

- mha\_signal.hh
- mha\_signal.cpp

## 5.294 MHASignal::waveform\_t Class Reference

signal processing class for waveform data (based on **mha\_wave\_t** (p. 462))

Inheritance diagram for MHASignal::waveform\_t:

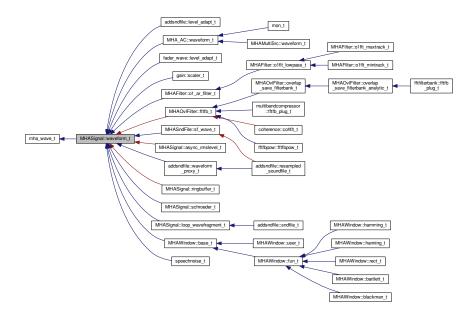

#### **Public Member Functions**

- waveform\_t (const unsigned int &frames, const unsigned int &channels)
   constructor of waveform\_t (p. 774)
- waveform\_t (const mhaconfig\_t &cf)

Constructor to create a waveform from plugin configuration.

waveform\_t (const mha\_wave\_t &src)

Copy contructor for **mha\_wave\_t** (p. 462) source.

- waveform\_t (const MHASignal::waveform\_t &src)
   Copy contructor.
- waveform\_t (const std::vector< mha\_real\_t > &src)

Copy contructor for std::vector<mha real t> source.

virtual ~waveform\_t (void)

Element accessor.

- void operator= (const mha\_real\_t &v)
- mha\_real\_t & operator[] (unsigned int k)
- const mha\_real\_t & operator[] (unsigned int k) const
- mha\_real\_t & value (unsigned int t, unsigned int ch)
- mha\_real\_t & operator() (unsigned int t, unsigned int ch) Element accessor.
- const mha\_real\_t & value (unsigned int t, unsigned int ch) const

Constant element accessor.

• const mha\_real\_t & operator() (unsigned int t, unsigned int ch) const

Constant element accessor.

mha\_real\_t sum (const unsigned int &a, const unsigned int &b)

sum of all elements between [a,b) in all channels

• mha\_real\_t sum (const unsigned int &a, const unsigned int &b, const unsigned int &ch) sum of all elements between [a,b) in channel ch

mha\_real\_t sum ()

sum of all elements

• mha real t sumsqr ()

sum of square of all elements

• mha\_real\_t sum\_channel (const unsigned int &)

return sum of all elements in one channel

void assign (const unsigned int &k, const unsigned int &ch, const mha\_real\_t &val)
 set frame "k" in channel "ch" to value "val"

void assign (const mha\_real\_t &)

set all elements to value

void assign\_frame (const unsigned int &k, const mha\_real\_t &val)

assign value "val" to frame k in all channels

void assign\_channel (const unsigned int &c, const mha\_real\_t &val)

assign value "val" to channel ch in all frames

- void copy (const std::vector< mha\_real\_t > &v)
- void copy (const mha\_wave\_t &)

copy data from source into current waveform

- void copy (const mha\_wave\_t \*)
- void copy\_channel (const mha\_wave\_t &, unsigned int, unsigned int)

Copy one channel of a given waveform signal to a target channel.

void copy\_from\_at (unsigned int, unsigned int, const mha\_wave\_t &, unsigned int)

Copy part of the source signal into part of this waveform object.

void export\_to (mha\_wave\_t &)

copy data into allocated **mha\_wave\_t** (p. 462) structure

void limit (const mha\_real\_t &min, const mha\_real\_t &max)

limit target to range [min,max]

void power (const waveform\_t &)

transform waveform signal (in Pa) to squared signal (in W/m^2)

void powspec (const mha\_spec\_t &)

get the power spectrum (in W/m\^2) from a complex spectrum

 void scale (const unsigned int &a, const unsigned int &b, const unsigned int &ch, const mha\_real\_t &val)

scale section [a,b) in channel "ch" by "val"

void scale (const unsigned int &k, const unsigned int &ch, const mha\_real\_t &val)

scale one element

void scale\_channel (const unsigned int &, const mha\_real\_t &)

scale one channel of target with a scalar

- void scale\_frame (const unsigned int &, const mha\_real\_t &)
- unsigned int get\_size () const

### **Additional Inherited Members**

## 5.294.1 Detailed Description

signal processing class for waveform data (based on mha\_wave\_t (p. 462))

#### 5.294.2 Constructor & Destructor Documentation

```
constructor of waveform_t (p. 774)
```

Allocates buffer memory and initializes values to zero.

### **Parameters**

frames	number of frames in each channel
channels	number of channels

```
5.294.2.2 waveform_t::waveform_t(

const mhaconfig_t & cf ) [explicit]
```

Constructor to create a waveform from plugin configuration.

# **Parameters**

```
cf Plugin configuration
```

Copy contructor for **mha\_wave\_t** (p. 462) source.

Copy contructor.

Copy contructor for std::vector<mha\_real\_t> source.

A waveform structure with a single channel is created, the length is equal to the number of elements in the source vector.

```
5.294.2.6 waveform_t::\sim waveform_t ( void ) [virtual]
```

Reimplemented in MHA\_AC::waveform\_t (p. 396).

5.294.3 Member Function Documentation

Element accessor.

## **Parameters**

t	Frame number
ch	Channel number

#### **Returns**

Reference to element

Element accessor.

t	Frame number
ch	Channel number

## Returns

Reference to element

Constant element accessor.

# **Parameters**

t	Frame number
ch	Channel number

#### **Returns**

Reference to element

Constant element accessor.

## **Parameters**

t	Frame number
ch	Channel number

#### **Returns**

Reference to element

sum of all elements between [a,b) in all channels

а	starting frame
b	end frame (excluded)

```
Returns
```

sum

sum of all elements between [a,b) in channel ch

#### **Parameters**

а	starting frame
b	end frame (exluded)
ch	channel number

#### **Returns**

sum

```
5.294.3.10 mha_real_t waveform_t::sum ( )
```

sum of all elements

## **Returns**

sum of all elements

```
5.294.3.11 mha_real_t waveform_t::sumsqr()
```

sum of square of all elements

#### Returns

sum of square of all elements

return sum of all elements in one channel

# **Parameters**

ch	channel number
0	oriarii or manibor

# **Returns**

sum

```
5.294.3.13 void waveform_t::assign (
const unsigned int & k,
const unsigned int & ch,
const mha_real_t & val )
```

set frame "k" in channel "ch" to value "val"

#### **Parameters**

k	frame number
ch	channel number
val	new value

set all elements to value

#### **Parameters**

```
val new value
```

assign value "val" to frame k in all channels

k	frame number
val	new value

assign value "val" to channel ch in all frames

#### **Parameters**

ch	channel number
val	new value

copy data from source into current waveform

#### **Parameters**

src	input data (need to be same size as target)
-----	---

Copy one channel of a given waveform signal to a target channel.

src	Input waveform signal
src_channel	Channel in source signal
dest_channel	Channel number in destination signal

Copy part of the source signal into part of this waveform object.

Source and target have to have the same number of channels.

## **Parameters**

to_pos	Offset in target	
len	Number of frames copied	
src	Source	
from_pos	Offset in source	

copy data into allocated mha\_wave\_t (p. 462) structure

## **Parameters**

dest	destination structure
------	-----------------------

```
5.294.3.23 void waveform_t::limit (
const mha_real_t & min,
const mha_real_t & max )
```

limit target to range [min,max]

## **Parameters**

min	lower limit
max	upper limit

```
5.294.3.24 void waveform_t::power (
const waveform t & src )
```

transform waveform signal (in Pa) to squared signal (in W/m<sup>2</sup>)

)
)

```
5.294.3.25 void waveform_t::powspec (
const mha_spec_t & src )
```

get the power spectrum (in W/m<sup>2</sup>) from a complex spectrum

#### **Parameters**

src	complex spectrum	(normalized to Pa)
-----	------------------	--------------------

scale section [a,b) in channel "ch" by "val"

#### **Parameters**

а	starting frame
b	end frame (excluded)
ch	channel number
val	scale factor

scale one element

## **Parameters**

k	frame number
ch	channel number
val	scale factor

scale one channel of target with a scalar

## **Parameters**

ch	channel number	
src	factor	


5.294.3.30 unsigned int MHASignal::waveform\_t::get\_size( ) const [inline]

The documentation for this class was generated from the following files:

- · mha\_signal.hh
- · mha\_signal.cpp

5.295 MHASndFile::sf\_t Class Reference

Inheritance diagram for MHASndFile::sf\_t:

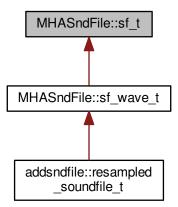

## **Public Member Functions**

- **sf\_t** (const std::string &fname)
- $\sim$ sf\_t ()

**Public Attributes** 

• SNDFILE \* sf

5.295.1 Constructor & Destructor Documentation


- 5.295.1.2 MHASndFile::sf\_t::~sf\_t()
- 5.295.2 Member Data Documentation
- 5.295.2.1 SNDFILE\* MHASndFile::sf\_t::sf

The documentation for this class was generated from the following files:

- · mhasndfile.h
- · mhasndfile.cpp

# 5.296 MHASndFile::sf\_wave\_t Class Reference

Inheritance diagram for MHASndFile::sf\_wave\_t:

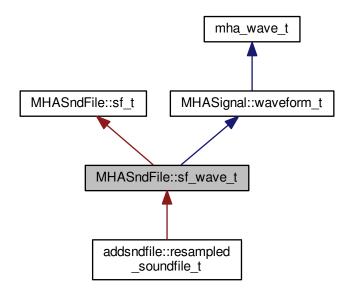

#### **Public Member Functions**

• **sf\_wave\_t** (const std::string &fname, **mha\_real\_t** peaklevel\_db, unsigned int maxlen=std::numeric\_limits< unsigned int >::**max**(), unsigned int startpos=0, std← ::vector< int > channel map=std::vector< int >())

**Additional Inherited Members** 

#### 5.296.1 Constructor & Destructor Documentation


The documentation for this class was generated from the following files:

- · mhasndfile.h
- · mhasndfile.cpp

# 5.297 MHATableLookup::linear\_table\_t Class Reference

Class for interpolation with equidistant x values.

Inheritance diagram for MHATableLookup::linear\_table\_t:

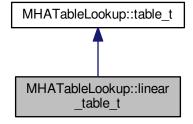

#### **Public Member Functions**

linear\_table\_t (void)

contructor creates an empty linear\_table\_t (p. 786) object.

mha\_real\_t lookup (mha\_real\_t x) const

look up the y value that is stored for the mesh point where x is lower than or equal to the x value given here.

mha\_real\_t interp (mha\_real\_t x) const

interpolate y value for the given x value.

• ∼linear\_table\_t (void)

destructor

void set\_xmin (mha\_real\_t xmin)

set the x value for the first mesh point.

void add\_entry (mha\_real\_t y)

set the y value for the next mesh point.

void set xmax (mha real t xmax)

this sets the x value for a past-the-end, not added mesh point.

void prepare (void)

prepare computes the x distance of the mesh points based on the values given to set\_xmin, set\_xmax, and the number of times that add\_entry was called.

void clear (void)

clear resets the state of this object to the state directly after construction.

#### **Protected Attributes**

- mha\_real\_t \* vy
- unsigned int len

#### **Private Attributes**

- vector< mha\_real\_t > vec\_y
- mha\_real\_t xmin
- mha\_real\_t xmax
- · mha\_real\_t scalefac

#### **Additional Inherited Members**

#### 5.297.1 Detailed Description

Class for interpolation with equidistant x values.

This class can be used for linear interpolation tasks where the mesh points are known for equidistant x values.

Before the class can be used for interpolation, it has to be filled with the y values for the mesh points, the x range has to be specified, and when all values are given, the prepare method has to be called so that the object can determine the distance between x values from the range and the number of mesh points given.

Only after prepare has returned, the object may be used for interpolation.

#### 5.297.2 Constructor & Destructor Documentation

```
5.297.2.1 linear_table_t::linear_table_t ( void )
```

contructor creates an empty linear\_table\_t (p. 786) object.

add\_entry, set\_xmin, set\_xmax and prepare methods have to be called before the object can be used to lookup and interpolate values.

```
5.297.2.2 linear_table_t::\simlinear_table_t ( void )
```

destructor

5.297.3 Member Function Documentation

look up the y value that is stored for the mesh point where x is lower than or equal to the x value given here.

This method does not extrapolate, so for x < xmin, the y value for xmin is returned. For all x greater than the x of the last mesh point, the y value of the last mesh point is returned.

## Precondition

prepare must have been called before lookup may be called.

Implements MHATableLookup::table\_t (p. 791).

interpolate y value for the given x value.

The y values for the neighbouring mesh points are looked up and linearly interpolated. For x values outside the range of mesh points, the y value is extrapolated from the nearest two mesh points.

#### Precondition

prepare must have been called before interp may be called.

Implements MHATableLookup::table\_t (p. 791).

```
5.297.3.3 void linear_table_t::set_xmin (
mha_real_t xmin )
```

set the x value for the first mesh point.

Must be called before prepare can be called.

```
5.297.3.4 void linear_table_t::add_entry (
mha real t y )
```

set the y value for the next mesh point.

Must be called at least twice before prepare can be called.

```
5.297.3.5 void linear_table_t::set_xmax (
mha_real_t xmax )
```

this sets the x value for a past-the-end, not added mesh point.

# Example:

prepare computes the x distance of the mesh points based on the values given to set\_xmin, set\_xmax, and the number of times that add\_entry was called.

#### Precondition

set\_xmin, set\_xmax, add\_entry functions must have been called before calling prepare, add\_entry must have been called at least twice.

Only after this method has been called, interp or lookup may be called.

clear resets the state of this object to the state directly after construction.

mesh entries and x range are deleted.

interp and lookup may not be called after this function has been called unless prepare and before that its precondition methods are called again.

Implements MHATableLookup::table\_t (p. 791).

```
5.297.4 Member Data Documentation
```

```
\textbf{5.297.4.1} \quad \textbf{mha\_real\_t} * \text{MHATableLookup::linear\_table\_t::vy} \quad \texttt{[protected]}
```

**5.297.4.2 unsigned int MHATableLookup::linear\_table\_t::len** [protected]

**5.297.4.3 vector**<**mha\_real\_t**> MHATableLookup::linear\_table\_t::vec\_y [private]

**5.297.4.4 mha real t MHATableLookup::linear\_table\_t::xmin** [private]

**5.297.4.5 mha\_real\_t** MHATableLookup::linear\_table\_t::xmax [private]


**5.297.4.6** mha\_real\_t MHATableLookup::linear\_table\_t::scalefac [private]

The documentation for this class was generated from the following files:

- mha tablelookup.hh
- mha\_tablelookup.cpp

# 5.298 MHATableLookup::table\_t Class Reference

Inheritance diagram for MHATableLookup::table\_t:

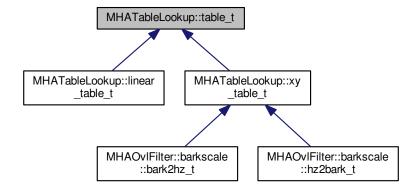

**Public Member Functions** 

```
    table_t (void)
    virtual ~table_t (void)
    virtual mha_real_t lookup (mha_real_t) const =0
    virtual mha_real_t interp (mha_real_t) const =0
```

#### **Protected Member Functions**

• virtual void clear (void)=0

```
5.298.1 Constructor & Destructor Documentation
5.298.1.1 table_t::table_t (
                     void )
5.298.1.2 table_t:: ~table_t (
                     void ) [virtual]
5.298.2 Member Function Documentation
5.298.2.1 virtual mha_real_t MHATableLookup::table_t::lookup (
                     mha_real_t )const [pure virtual]
Implemented in MHATableLookup::xy_table_t (p. 793), and MHATableLookup::linear_ 
table_t (p. 788).
5.298.2.2 virtual mha real t MHATableLookup::table t::interp (
                     mha_real_t )const [pure virtual]
Implemented in MHATableLookup::xy_table_t (p. 794), and MHATableLookup::linear_ 
table_t (p. 788).
5.298.2.3 virtual void MHATableLookup::table_t::clear (
                     void ) [protected], [pure virtual]
```

Implemented in MHATableLookup::xy\_table\_t (p. 794), and MHATableLookup::linear\_ <--

The documentation for this class was generated from the following files:

mha\_tablelookup.hh


table\_t (p. 790).

mha\_tablelookup.cpp

# 5.299 MHATableLookup::xy\_table\_t Class Reference

Class for interpolation with non-equidistant x values.

Inheritance diagram for MHATableLookup::xy\_table\_t:

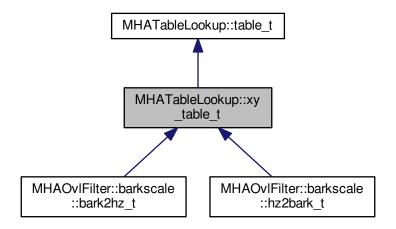

#### **Public Member Functions**

- xy\_table\_t ()
- mha\_real\_t lookup (mha\_real\_t x) const

Return the y-value at the position of the nearest x value below input.

mha\_real\_t interp (mha\_real\_t x) const

Linear interpolation function.

void add\_entry (mha\_real\_t x, mha\_real\_t y)

Add a single x-y pair entry.

• void add\_entry (mha\_real\_t \*pVX, mha\_real\_t \*pVY, unsigned int len)

Add multiple entries at once.

• void clear ()

Clear the table and transformation functions.

void set\_xfun (float(\*pXFun)(float))

Set transformation function for x values.

void set yfun (float(\*pYFun)(float))

Set transformation function for y values during insertion.

void set\_xyfun (float(\*pYFun)(float, float))

Set transformation function for y values during insertion, based on x and y values.

- std::pair<  $mha\_real\_t$ ,  $mha\_real\_t > get\_xlimits$  () const

returns the min and max x of all mesh points that are stored in the lookup table, i.e.

#### **Private Attributes**

- std::map< mha\_real\_t, mha\_real\_t > mXY
- float(\* xfun )(float)
- float(\* yfun )(float)
- float(\* xyfun )(float, float)

#### **Additional Inherited Members**

## 5.299.1 Detailed Description

Class for interpolation with non-equidistant x values.

Linear interpolation of the x-y table is performed. A transformation of x and y-values is possible; if a transformation function is provided for the x-values, the same function is applied to the argument of **xy\_table\_t::interp()** (p. 794) and **xy\_table\_t::lookup()** (p. 793). The transformation of y values is applied only during insertion into the table. Two functions for y-transformation can be provided: a simple transformation which depends only on the y values, or a transformation which takes both (non-transformed) x and y value as an argument. The two-argument transformation is applied before the one-argument transformation.

```
5.299.2 Constructor & Destructor Documentation
```

```
5.299.2.1 xy_table_t::xy_table_t ( )
```

5.299.3 Member Function Documentation

Return the y-value at the position of the nearest x value below input.

#### **Parameters**

```
x Input value
```

#### Returns

y value at nearest x value below input.

Implements MHATableLookup::table\_t (p. 791).

Linear interpolation function.

## **Parameters**

```
x x value
```

#### Returns

interpolated y value

Implements MHATableLookup::table\_t (p. 791).

Add a single x-y pair entry.

## **Parameters**

X	x value
У	corresponding y value

Add multiple entries at once.

## **Parameters**

pVX	array of x values
pVY	array of y values
uLength	Length of x and y arrays

Clear the table and transformation functions.

Implements MHATableLookup::table\_t (p. 791).

```
5.299.3.6 void xy_table_t::set_xfun (
float(*)(float) fun )
```

Set transformation function for x values.

## **Parameters**

```
fun Transformation function.
```

Set transformation function for y values during insertion.

#### **Parameters**

```
fun Transformation function.
```

Set transformation function for y values during insertion, based on x and y values.

#### **Parameters**

```
fun Transformation function.
```

returns the min and max x of all mesh points that are stored in the lookup table, i.e. after transformation with xfun, if any. Not real-time safe

```
5.299.4 Member Data Documentation
```

```
5.299.4.1 std::map<mha_real_t,mha_real_t> MHATableLookup::xy_table_t::mXY [private]
```

5.299.4.2 float(\* MHATableLookup::xy\_table\_t::xfun) (float) [private]

5.299.4.3 float(\* MHATableLookup::xy\_table\_t::yfun) (float) [private]

**5.299.4.4** float(\* MHATableLookup::xy\_table\_t::xyfun) (float, float) [private]


The documentation for this class was generated from the following files:

- mha tablelookup.hh
- mha\_tablelookup.cpp

# 5.300 MHAWindow::bartlett\_t Class Reference

Bartlett window.

Inheritance diagram for MHAWindow::bartlett\_t:

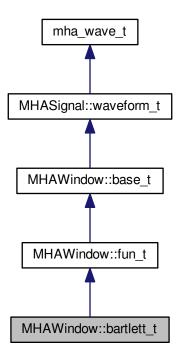

# **Public Member Functions**

bartlett\_t (unsigned int n)

**Additional Inherited Members** 

5.300.1 Detailed Description

Bartlett window.

5.300.2 Constructor & Destructor Documentation

**5.300.2.1** MHAWindow::bartlett\_t::bartlett\_t ( unsigned int *n* ) [inline]


The documentation for this class was generated from the following file:

mha\_windowparser.h

# 5.301 MHAWindow::base\_t Class Reference

Common base for window types.

Inheritance diagram for MHAWindow::base\_t:

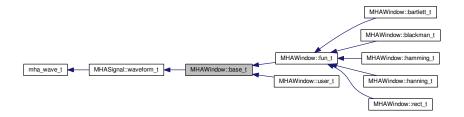

## **Public Member Functions**

base\_t (unsigned int len)

Constructor.

base\_t (const MHAWindow::base\_t &src)

Copy constructor.

• void **operator()** (**mha\_wave\_t** &) const

Apply window to waveform segment (reference)

void operator() (mha\_wave\_t \*) const

Apply window to waveform segment (pointer)

void ramp\_begin (mha\_wave\_t &) const

Apply a ramp at the begining.

void ramp\_end (mha\_wave\_t &) const

Apply a ramp at the end.

## **Additional Inherited Members**

## 5.301.1 Detailed Description

Common base for window types.

# 5.301.2 Constructor & Destructor Documentation

Constructor.

## **Parameters**

```
len Window length in samples.
```

Copy constructor.

#### **Parameters**

```
src | Source to be copied
```

```
5.301.3 Member Function Documentation
```

```
5.301.3.1 void MHAWindow::base_t::operator() (
mha_wave_t & s ) const
```

Apply window to waveform segment (reference)

```
5.301.3.2 void MHAWindow::base_t::operator() (
mha_wave_t * s ) const
```

Apply window to waveform segment (pointer)

```
5.301.3.3 void MHAWindow::base_t::ramp_begin (
mha_wave_t & s ) const
```

Apply a ramp at the begining.

```
5.301.3.4 void MHAWindow::base_t::ramp_end (
mha wave t & s ) const
```

Apply a ramp at the end.


The documentation for this class was generated from the following files:

- · mha windowparser.h
- mha\_windowparser.cpp

5.302 MHAWindow::blackman\_t Class Reference

Blackman window.

Inheritance diagram for MHAWindow::blackman\_t:

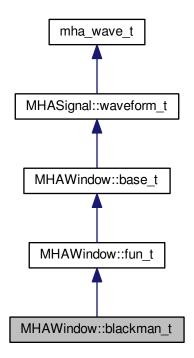

**Public Member Functions** 

blackman\_t (unsigned int n)

**Additional Inherited Members** 

5.302.1 Detailed Description

Blackman window.

5.302.2 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

mha\_windowparser.h

# 5.303 MHAWindow::fun\_t Class Reference

Generic window based on a generator function.

Inheritance diagram for MHAWindow::fun\_t:



## **Public Member Functions**

fun\_t (unsigned int n, float(\*fun)(float), float xmin=-1, float xmax=1, bool min\_← included=true, bool max\_included=false)
 Constructor.

#### **Additional Inherited Members**

## 5.303.1 Detailed Description

Generic window based on a generator function.

The generator function should return a valid window function in the interval [-1,1].

## 5.303.2 Constructor & Destructor Documentation

## Constructor.

# **Parameters**

n	Window length
fun	Generator function, i.e. MHAWindow::hanning() (p. 122)
xmin	Start value of window, i.e1 for full window or 0 for fade-out ramp.
xmax	Last value of window, i.e. 1 for full window
min_included	Flag if minimum value is included
max_included	Flag if maximum value is included


The documentation for this class was generated from the following files:

- mha\_windowparser.h
- mha\_windowparser.cpp

# 5.304 MHAWindow::hamming\_t Class Reference

Hamming window.

Inheritance diagram for MHAWindow::hamming\_t:

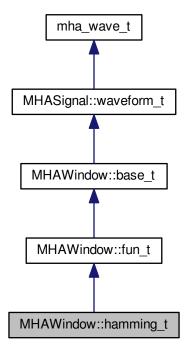

**Public Member Functions** 

• hamming\_t (unsigned int n)

**Additional Inherited Members** 

5.304.1 Detailed Description

Hamming window.

5.304.2 Constructor & Destructor Documentation

5.304.2.1 MHAWindow::hamming\_t::hamming\_t (
unsigned int n ) [inline]


The documentation for this class was generated from the following file:

mha\_windowparser.h

5.305 MHAWindow::hanning\_t Class Reference

von-Hann window

Inheritance diagram for MHAWindow::hanning\_t:

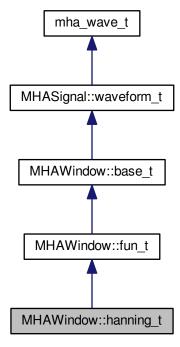

**Public Member Functions** 

• hanning\_t (unsigned int n)

**Additional Inherited Members** 

5.305.1 Detailed Description

von-Hann window

5.305.2 Constructor & Destructor Documentation

5.305.2.1 MHAWindow::hanning\_t::hanning\_t (
unsigned int n ) [inline]


The documentation for this class was generated from the following file:

mha\_windowparser.h

5.306 MHAWindow::rect\_t Class Reference

Rectangular window.

Inheritance diagram for MHAWindow::rect\_t:

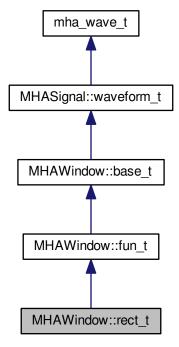

**Public Member Functions** 

• rect\_t (unsigned int n)

**Additional Inherited Members** 

5.306.1 Detailed Description

Rectangular window.

5.306.2 Constructor & Destructor Documentation

```
5.306.2.1 MHAWindow::rect_t::rect_t (
unsigned int n ) [inline]
```


The documentation for this class was generated from the following file:

mha\_windowparser.h

5.307 MHAWindow::user\_t Class Reference

User defined window.

Inheritance diagram for MHAWindow::user\_t:

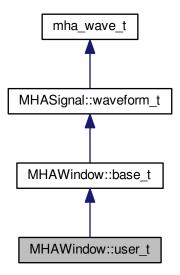

**Public Member Functions** 

user\_t (const std::vector< mha\_real\_t > &wnd)
 Constructor.

**Additional Inherited Members** 

5.307.1 Detailed Description

User defined window.

5.307.2 Constructor & Destructor Documentation

Constructor.

**Parameters** 


wnd User defined window

The documentation for this class was generated from the following files:

- mha\_windowparser.h
- mha\_windowparser.cpp

# 5.308 mon\_t Class Reference

Inheritance diagram for mon\_t:

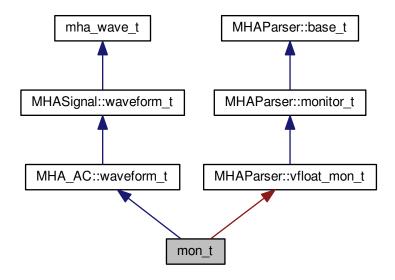

#### **Public Member Functions**

- mon\_t (unsigned int nch, std::string name, algo\_comm\_t ac, std::string base, MHA←
   Parser::parser\_t &p, std::string help)
- void store ()

## **Additional Inherited Members**

# 5.308.1 Constructor & Destructor Documentation

#### 5.308.2 Member Function Documentation


```
5.308.2.1 void mon_t::store ( )
```

The documentation for this class was generated from the following file:

# rmslevel.cpp

5.309 multibandcompressor::fftfb\_plug\_t Class Reference

Inheritance diagram for multibandcompressor::fftfb\_plug\_t:

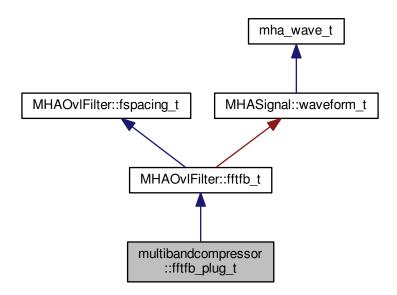

## **Public Member Functions**

- fftfb\_plug\_t (MHAOvlFilter::fftfb\_vars\_t &, const mhaconfig\_t &cfg, algo\_comm\_← t ac, std::string alg)
- void insert ()

# **Private Attributes**

- MHA\_AC::waveform\_t cfv
   vector of nominal center frequencies / Hz
- MHA\_AC::waveform\_t efv
   vector of edge frequencies / Hz
- MHA\_AC::waveform\_t bwv

  vector of band-weigths (sum of squared fft-bin-weigths)/num\_frames


```
Additional Inherited Members
```

```
5.309.1 Constructor & Destructor Documentation
5.309.1.1 multibandcompressor::fftfb_plug_t::fftfb_plug_t (
                      MHAOvIFilter::fftfb vars t & vars,
                      const mhaconfig_t & cfg,
                      algo_comm_t ac,
                      std::string alg )
5.309.2 Member Function Documentation
5.309.2.1 void multibandcompressor::fftfb_plug_t::insert ( )
5.309.3 Member Data Documentation
5.309.3.1 MHA_AC::waveform_t multibandcompressor::fftfb_plug_t::cfv [private]
vector of nominal center frequencies / Hz
5.309.3.2 MHA_AC::waveform_t multibandcompressor::fftfb_plug_t::efv [private]
vector of edge frequencies / Hz
5.309.3.3 MHA_AC::waveform_t multibandcompressor::fftfb_plug_t::bwv [private]
vector of band-weigths (sum of squared fft-bin-weigths)/num_frames
The documentation for this class was generated from the following file:
```

# multibandcompressor.cpp

# 5.310 multibandcompressor::interface\_t Class Reference

Inheritance diagram for multibandcompressor::interface\_t:

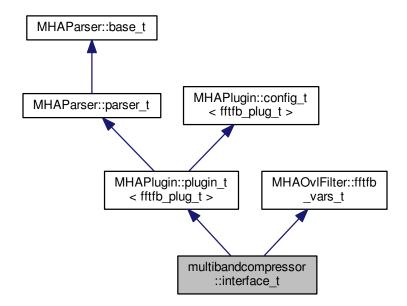

# **Public Member Functions**

- interface\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- void prepare (mhaconfig\_t &)
- void release ()
- mha\_spec\_t \* process (mha\_spec\_t \*)

# **Private Member Functions**

void update\_cfg ()

#### **Private Attributes**

- int num\_channels
- DynComp::dc\_afterburn\_t burn
- MHAEvents::patchbay\_t< interface\_t > patchbay
- std::string algo
- MHAParser::mhapluginloader\_t plug
- plugin\_signals\_t \* plug\_sigs

#### **Additional Inherited Members**

```
5.310.1 Constructor & Destructor Documentation
```

Default values are set and MHA configuration variables registered into the parser.

#### **Parameters**

ac⊷	algorithm communication handle
_	
th	chain name
al	algorithm name

#### 5.310.2 Member Function Documentation

Implements MHAPlugin::plugin\_t < fftfb\_plug\_t > (p. 692).

```
5.310.2.2 void multibandcompressor::interface_t::release ( void ) [virtual]
```

Reimplemented from MHAPlugin::plugin\_t < fftfb\_plug\_t > (p. 693).

- **5.310.2.4 void multibandcompressor::interface\_t::update\_cfg( )** [private]
- 5.310.3 Member Data Documentation
- **5.310.3.1** int multibandcompressor::interface\_t::num\_channels [private]
- **5.310.3.2 DynComp::dc\_afterburn\_t** multibandcompressor::interface\_t::burn [private]
- **5.310.3.3 MHAEvents::patchbay\_t**<interface\_t> multibandcompressor::interface\_t::patchbay [private]

# 5.311 multibandcompressor::plugin\_signals\_t Class Reference 811

```
5.310.3.4 std::string multibandcompressor::interface_t::algo [private]
5.310.3.5 MHAParser::mhapluginloader_t multibandcompressor::interface_t::plug [private]
5.310.3.6 plugin_signals_t* multibandcompressor::interface_t::plug_sigs [private]
The documentation for this class was generated from the following file:

    multibandcompressor.cpp

5.311
       multibandcompressor::plugin_signals_t Class Reference
Public Member Functions
   • plugin_signals_t (unsigned int channels, unsigned int bands)

    void update levels (MHAOvlFilter::fftfb t *, mha spec t *s in)

   • void apply_gains (MHAOvlFilter::fftfb_t *, DynComp::dc_afterburn_t &burn, mha_ <--
     spec_t *s_out)
Public Attributes

    mha wave t * plug output

Private Attributes

    MHASignal::waveform t plug level

    MHASignal::waveform_t gain

5.311.1 Constructor & Destructor Documentation
5.311.1.1 multibandcompressor::plugin_signals_t::plugin_signals_t (
                      unsigned int channels,
                      unsigned int bands )
5.311.2 Member Function Documentation
```

5.311.2.1 void multibandcompressor::plugin\_signals\_t::update\_levels (

mha\_spec\_t \* s\_in )

MHAOvlFilter::fftfb t \* pFb,


- 5.311.3 Member Data Documentation
- **5.311.3.1 MHASignal::waveform\_t** multibandcompressor::plugin\_signals\_t::plug\_level [private]
- **5.311.3.2** MHASignal::waveform\_t multibandcompressor::plugin\_signals\_t::gain [private]
- 5.311.3.3 mha wave t\* multibandcompressor::plugin\_signals\_t::plug\_output

The documentation for this class was generated from the following file:

## multibandcompressor.cpp

# 5.312 nlms\_t Class Reference

Inheritance diagram for nlms\_t:

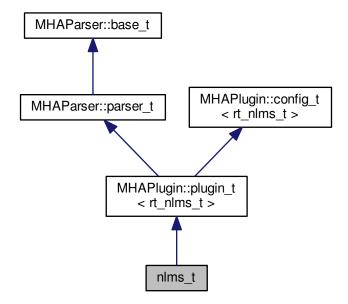

### **Public Member Functions**

```
• nlms_t (algo_comm_t, const char *, const char *)
```

- void prepare (mhaconfig\_t &)
- void release ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

#### **Private Member Functions**

• void update ()

### **Private Attributes**

```
    MHAParser::float_t rho
```

- MHAParser::float t c
- MHAParser::int\_t ntaps
- MHAParser::string\_t name\_u
- MHAParser::string\_t name\_d
- MHAParser::kw\_t normtype
- MHAParser::kw\_t estimtype
- MHAParser::float\_t lambda\_smoothing\_power
- MHAParser::string t name e
- MHAParser::string\_t name\_f
- MHAParser::int\_t n\_no\_update
- std::string algo
- MHAEvents::patchbay\_t< nlms\_t > patchbay

#### **Additional Inherited Members**

```
5.312.1 Constructor & Destructor Documentation
```

5.312.2 Member Function Documentation

Implements MHAPlugin::plugin\_t < rt\_nlms\_t > (p. 692).


```
5.312.2.2 void nlms t::release (
                    void ) [virtual]
Reimplemented from MHAPlugin::plugin_t < rt_nlms_t > (p. 693).
5.312.2.3 mha_wave_t * nlms_t::process (
                    mha_wave_t * s
5.312.2.4 void nlms_t::update() [private]
5.312.3 Member Data Documentation
5.312.3.1 MHAParser::float t nlms_t::rho [private]
5.312.3.2 MHAParser::float t nlms_t::c [private]
5.312.3.3 MHAParser::int t nlms_t::ntaps [private]
5.312.3.4 MHAParser::string_t nlms_t::name_u [private]
5.312.3.5 MHAParser::string_t nlms_t::name_d [private]
5.312.3.6 MHAParser::kw_t nlms_t::normtype [private]
5.312.3.7 MHAParser::kw t nlms_t::estimtype [private]
5.312.3.8 MHAParser::float t nlms_t::lambda_smoothing_power [private]
5.312.3.9 MHAParser::string_t nlms_t::name_e [private]
5.312.3.10 MHAParser::string_t nlms_t::name_f [private]
5.312.3.11 MHAParser::int_t nlms_t::n_no_update [private]
5.312.3.12 std::string nlms_t::algo [private]
5.312.3.13 MHAEvents::patchbay t<nlms t> nlms_t::patchbay [private]
```

The documentation for this class was generated from the following file:

## nlms\_wave.cpp

# 5.313 noise\_t Class Reference

Inheritance diagram for noise\_t:

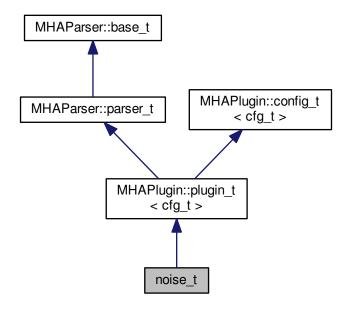

### **Public Member Functions**

- noise\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)
- void update\_cfg ()

### **Private Attributes**

- MHAParser::float\_t lev
- MHAParser::kw\_t mode
- MHAParser::float\_t frozennoise\_length
- MHAEvents::patchbay\_t< noise\_t > patchbay

**Additional Inherited Members** 


```
5.313.1 Constructor & Destructor Documentation
5.313.1.1 noise_t::noise_t (
                     const algo_comm_t & iac,
                     const std::string &,
                     const std::string & )
5.313.2 Member Function Documentation
5.313.2.1 mha_wave_t * noise_t::process (
                     mha_wave_t * s )
5.313.2.2 mha_spec_t * noise_t::process (
                     mha spec t * s)
5.313.2.3 void noise t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin_t < cfg_t > (p. 692).
5.313.2.4 void noise_t::update_cfg()
5.313.3 Member Data Documentation
5.313.3.1 MHAParser::float_t noise_t::lev [private]
5.313.3.2 MHAParser::kw_t noise_t::mode [private]
5.313.3.3 MHAParser::float t noise_t::frozennoise_length [private]
5.313.3.4 MHAEvents::patchbay_t<noise_t> noise_t::patchbay [private]
```

The documentation for this class was generated from the following file:

noise.cpp

# 5.314 noisePowProposedScale::interface\_t Class Reference

Inheritance diagram for noisePowProposedScale::interface\_t:

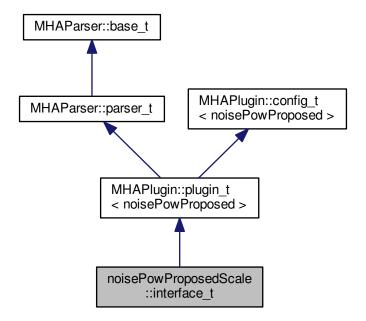

## **Public Member Functions**

- interface\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)

### **Private Member Functions**

void update\_cfg ()

#### **Private Attributes**

- MHAParser::float\_t alphaPH1mean
- MHAParser::float t alphaPSD
- MHAParser::float\_t q
- MHAParser::float\_t xiOptDb
- std::string name
- MHAEvents::patchbay\_t< interface\_t > patchbay

```
Additional Inherited Members
```

```
5.314.1 Constructor & Destructor Documentation
5.314.1.1 noisePowProposedScale::interface t:interface t(
                     const algo comm t & iac,
                     const std::string & ,
                     const std::string & iname )
5.314.2 Member Function Documentation
5.314.2.1 mha_spec_t * noisePowProposedScale::interface_t::process (
                     mha\_spec\_t * s)
5.314.2.2 void noisePowProposedScale::interface t::prepare (
                     mhaconfig t&cf) [virtual]
Implements MHAPlugin::plugin_t< noisePowProposed > (p. 692).
5.314.2.3 void noisePowProposedScale::interface_t::update_cfg (
                     void ) [private]
5.314.3 Member Data Documentation
5.314.3.1 MHAParser::float_t noisePowProposedScale::interface_t::alphaPH1mean [private]
5.314.3.2 MHAParser::float t noisePowProposedScale::interface t::alphaPSD [private]
5.314.3.3 MHAParser::float_t noisePowProposedScale::interface_t::q [private]
5.314.3.4 MHAParser::float t noisePowProposedScale::interface_t::xiOptDb [private]
5.314.3.5 std::string noisePowProposedScale::interface_t::name [private]
5.314.3.6 MHAEvents::patchbay t<interface t> noisePowProposedScale::interface_t::patchbay
          [private]
```

The documentation for this class was generated from the following file:

## noisePowProposedScale.cpp

## 5.315 noisePowProposedScale::noisePowProposed Class Reference

#### **Public Member Functions**

- noisePowProposed (const mhaconfig\_t &cf, algo\_comm\_t ac, const std::string &name, float alphaPH1mean, float alphaPSD, float q, float xiOptDb)
- void process (mha\_spec\_t \*noisyDftFrame)
- void **insert** ()

#### **Private Attributes**

- MHASignal::waveform\_t noisyPer
- MHASignal::waveform t PH1mean
- MHA\_AC::waveform\_t noisePow
- MHA\_AC::waveform\_t inputPow
- MHA\_AC::waveform\_t snrPost1Debug
- MHA\_AC::waveform\_t GLRDebug
- MHA\_AC::waveform\_t PH1Debug
- MHA\_AC::waveform\_t estimateDebug
- MHA\_AC::spectrum\_t inputSpec
- float alphaPH1mean\_
- float alphaPSD\_
- float priorFact
- float xiOpt
- float logGLRFact
- float GLRexp
- int frameno

### 5.315.1 Constructor & Destructor Documentation

#### 5.315.2 Member Function Documentation

```
5.315.2.1 void noisePowProposedScale::noisePowProposed::process ( mha_spec_t * noisyDftFrame )
```


5.315.2.2	void noisePowProposedScale::noisePowProposed::insert( ) [inline]
5.315.3 N	Member Data Documentation
5.315.3.1	MHASignal::waveform_t noisePowProposedScale::noisePowProposed::noisyPer [private]
5.315.3.2	MHASignal::waveform_t noisePowProposedScale::noisePowProposed::PH1mean [private]
5.315.3.3	<pre>MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::noisePow [private]</pre>
5.315.3.4	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::inputPow [private]
5.315.3.5	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::snrPost1Debug [private]
5.315.3.6	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::GLRDebug [private]
5.315.3.7	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::PH1Debug [private]
5.315.3.8	MHA_AC::waveform_t noisePowProposedScale::noisePowProposed::estimateDebug [private]
5.315.3.9	MHA_AC::spectrum_t noisePowProposedScale::noisePowProposed::inputSpec [private]
5.315.3.10	float noisePowProposedScale::noisePowProposed::alphaPH1mean_ [private]
5.315.3.11	float noisePowProposedScale::noisePowProposed::alphaPSD_ [private]
5.315.3.12	float noisePowProposedScale::noisePowProposed::priorFact [private]
5.315.3.13	float noisePowProposedScale::noisePowProposed::xiOpt [private]
5.315.3.14	float noisePowProposedScale::noisePowProposed::logGLRFact [private]
5.315.3.15	float noisePowProposedScale::noisePowProposed::GLRexp [private]
5.315.3.16	<pre>int noisePowProposedScale::noisePowProposed::frameno [private]</pre>

The documentation for this class was generated from the following file:

# noisePowProposedScale.cpp

## 5.316 overlapadd::overlapadd\_if\_t Class Reference

Inheritance diagram for overlapadd::overlapadd\_if\_t:

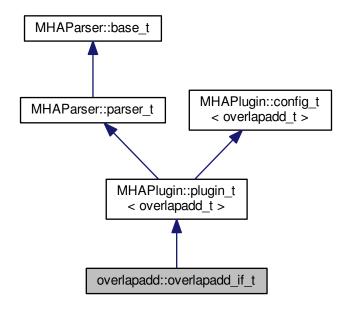

#### **Public Member Functions**

- overlapadd\_if\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- ∼overlapadd\_if\_t ()
- void prepare (mhaconfig\_t &)
- void release ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

### **Private Member Functions**

• void update ()

### **Private Attributes**

- MHAEvents::patchbay\_t< overlapadd\_if\_t > patchbay
- MHAParser::int\_t nfft

FFT length to be used, zero-padding is FFT length-wndlength.

MHAParser::int\_t nwnd

Window length to be used (overlap is 1-fragsize/wndlength)

```
    MHAParser::float_t wndpos
```

Relative position of zero padding (0 end, 0.5 center, 1 start)

- MHAParser::window t window
- MHAParser::float\_t wndexp
- MHAParser::window t zerowindow
- MHAParser::mhapluginloader\_t plugloader
- MHAParser::float\_mon\_t prescale
- MHAParser::float\_mon\_t postscale
- std::string algo
- mhaconfig\_t cf\_in
- · mhaconfig t cf out

#### **Additional Inherited Members**

```
5.316.1 Constructor & Destructor Documentation
```

- 5.316.1.2 overlapadd::overlapadd\_if\_t::~overlapadd\_if\_t ( )
- 5.316.2 Member Function Documentation

Implements MHAPlugin::plugin t < overlapadd t > (p. 692).

Reimplemented from MHAPlugin::plugin\_t< overlapadd\_t > (p. 693).

```
5.316.2.3 mha_wave_t * overlapadd::overlapadd_if_t::process ( mha_wave_t * wave_in )
```

- **5.316.2.4 void overlapadd::overlapadd\_if\_t::update( )** [private]
- 5.316.3 Member Data Documentation
- **5.316.3.1 MHAEvents::patchbay\_t**<overlapadd\_if\_t> overlapadd::overlapadd\_if\_t::patchbay [private]
- **5.316.3.2 MHAParser::int\_t** overlapadd::overlapadd\_if\_t::nfft [private]

FFT length to be used, zero-padding is FFT length-wndlength.

```
5.316.3.3 MHAParser::int_t overlapadd::overlapadd_if_t::nwnd [private]
Window length to be used (overlap is 1-fragsize/wndlength)
5.316.3.4 MHAParser::float toverlapadd::overlapadd_if_t::wndpos [private]
Relative position of zero padding (0 end, 0.5 center, 1 start)
5.316.3.5 MHAParser::window t overlapadd::overlapadd_if_t::window [private]
5.316.3.6 MHAParser::float t overlapadd::overlapadd_if_t::wndexp [private]
5.316.3.7 MHAParser::window t overlapadd::overlapadd_if_t::zerowindow [private]
5.316.3.8 MHAParser::mhapluginloader toverlapadd::overlapadd_if_t::plugloader [private]
5.316.3.9 MHAParser::float_mon_t overlapadd::overlapadd_if_t::prescale [private]
5.316.3.10 MHAParser::float_mon_t overlapadd::overlapadd_if_t::postscale [private]
5.316.3.11 std::string overlapadd::overlapadd_if_t::algo [private]
5.316.3.12 mhaconfig toverlapadd::overlapadd if t::cf in [private]
5.316.3.13 mhaconfig_t overlapadd::overlapadd_if_t::cf_out [private]
```

The documentation for this class was generated from the following file:

### overlapadd.cpp

### 5.317 overlapadd::overlapadd\_t Class Reference

**Public Member Functions** 

- overlapadd\_t (mhaconfig\_t spar\_in, mhaconfig\_t spar\_out, float wexp, float wnd-pos, const MHAParser::window\_t &window, const MHAParser::window\_t &zerowindow, float &prescale\_fac, float &postscale\_fac)
- ∼overlapadd\_t ()
- mha\_spec\_t \* ola1 (mha\_wave\_t \*)
- mha\_wave\_t \* ola2 (mha\_spec\_t \*)

#### **Private Attributes**

```
· mha fft t fft

    MHAWindow::base t prewnd

    MHAWindow::base_t postwnd

    MHASignal::waveform t wave in1

    MHASignal::waveform_t wave_out1

    MHASignal::spectrum t spec in

    MHASignal::waveform t calc out

    MHASignal::waveform_t out_buf

    MHASignal::waveform t write buf

    unsigned int n zero

    unsigned int n_pad1

    unsigned int n pad2

5.317.1 Constructor & Destructor Documentation
5.317.1.1 overlapadd::overlapadd_t::overlapadd_t (
                      mhaconfig t spar_in,
                      mhaconfig_t spar_out,
                      float wexp,
                      float wndpos,
                      const MHAParser::window t & window,
                      const MHAParser::window t & zerowindow,
                      float & prescale fac,
                      float & postscale_fac )
5.317.1.2 overlapadd::overlapadd_t::~overlapadd_t ( )
5.317.2 Member Function Documentation
5.317.2.1 mha spec t * overlapadd::overlapadd_t::ola1 (
                      mha wave t * s)
5.317.2.2 mha_wave_t * overlapadd::overlapadd_t::ola2 (
                      mha\_spec\_t * s)
5.317.3 Member Data Documentation
5.317.3.1 mha_fft_t overlapadd::overlapadd_t::fft [private]
5.317.3.2 MHAWindow::base toverlapadd::overlapadd_t::prewnd [private]
```

**5.317.3.3 MHAWindow::base\_t overlapadd::overlapadd\_t::postwnd** [private]


```
5.317.3.4 MHASignal::waveform_t overlapadd::overlapadd_t::wave_in1 [private]
5.317.3.5 MHASignal::waveform_t overlapadd::overlapadd_t::wave_out1 [private]
5.317.3.6 MHASignal::spectrum_t overlapadd::overlapadd_t::spec_in [private]
5.317.3.7 MHASignal::waveform_t overlapadd::overlapadd_t::calc_out [private]
5.317.3.8 MHASignal::waveform_t overlapadd::overlapadd_t::out_buf [private]
5.317.3.9 MHASignal::waveform_t overlapadd::overlapadd_t::write_buf [private]
5.317.3.10 unsigned int overlapadd::overlapadd_t::n_zero [private]
5.317.3.11 unsigned int overlapadd::overlapadd_t::n_pad1 [private]
5.317.3.12 unsigned int overlapadd::overlapadd_t::n_pad2 [private]
```

The documentation for this class was generated from the following file:

## overlapadd.cpp

## 5.318 parser\_int\_dyn Class Reference

Inheritance diagram for parser\_int\_dyn:

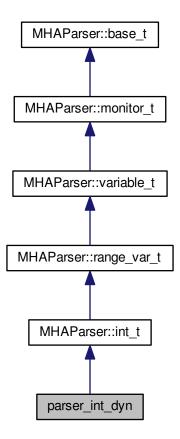

### **Public Member Functions**

- parser\_int\_dyn (const std::string &help\_text, const std::string &initial\_value, const std
   ::string &range)
- void set\_max\_angle\_ind (unsigned int max\_ind)

### **Additional Inherited Members**

### 5.318.1 Constructor & Destructor Documentation

### 5.318.2 Member Function Documentation


The documentation for this class was generated from the following file:

### · steerbf.h

# 5.319 plingploing::if\_t Class Reference

Plugin class of the plingploing music generator.

Inheritance diagram for plingploing::if\_t:

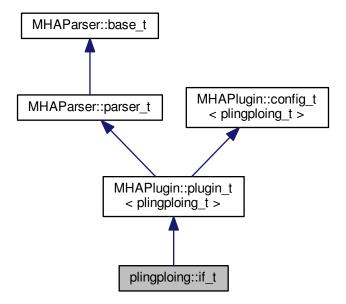

#### **Public Member Functions**

- if\_t (algo\_comm\_t, const char \*, const char \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &cf)

## **Private Member Functions**

• void update ()

#### **Private Attributes**

MHAEvents::patchbay\_t< if\_t > patchbay

MHAParser::float\_t level

Output level in dB SPL.

MHAParser::float\_t pitch

Bass pitch in Hz.

MHAParser::float\_t fun1\_key
 Key1.

• MHAParser::float\_t fun1\_range Range1.

MHAParser::float\_t fun2\_key
 Key 2.

• MHAParser::float\_t fun2\_range Range 2.

MHAParser::float\_t bpm

Speed in beats per minute (bpm)

MHAParser::float\_t minlen

Minimum note length in beats.

MHAParser::float\_t maxlen

Maximum note length in beats.

MHAParser::float\_t bassmod

Bass key modulation depth.

MHAParser::float\_t bassperiod

Bass key modulation period.

**Additional Inherited Members** 

5.319.1 Detailed Description

Plugin class of the plingploing music generator.

```
5.319.2 Constructor & Destructor Documentation
```

5.319.3 Member Function Documentation

Implements MHAPlugin::plugin\_t< plingploing\_t > (p. 692).

mhaconfig\_t & cf ) [virtual]

```
5.319.3.3 void plingploing::if_t::update( ) [private]
5.319.4 Member Data Documentation
5.319.4.1 MHAEvents::patchbay_t<if_t> plingploing::if_t::patchbay [private]
5.319.4.2 MHAParser::float_t plingploing::if_t::level [private]
Output level in dB SPL.
5.319.4.3 MHAParser::float_t plingploing::if_t::pitch [private]
Bass pitch in Hz.
5.319.4.4 MHAParser::float_t plingploing::if_t::fun1_key [private]
Key1.
5.319.4.5 MHAParser::float_t plingploing::if_t::fun1_range [private]
Range1.
5.319.4.6 MHAParser::float_t plingploing::if_t::fun2_key [private]
Key 2.
5.319.4.7 MHAParser::float_t plingploing::if_t::fun2_range [private]
Range 2.
5.319.4.8 MHAParser::float_t plingploing::if_t::bpm [private]
Speed in beats per minute (bpm)
5.319.4.9 MHAParser::float_t plingploing::if_t::minlen [private]
Minimum note length in beats.
5.319.4.10 MHAParser::float_t plingploing::if_t::maxlen [private]
Maximum note length in beats.
```

**5.319.4.11** MHAParser::float\_t plingploing::if\_t::bassmod [private]

Bass key modulation depth.

**5.319.4.12** MHAParser::float\_t plingploing::if\_t::bassperiod [private]

Bass key modulation period.

The documentation for this class was generated from the following file:

· plingploing.cpp

5.320 plingploing::plingploing\_t Class Reference

Run-time configuration of the plingploing music generator.

#### **Public Member Functions**

- plingploing\_t (mhaconfig\_t, mha\_real\_t level, mha\_real\_t pitch, mha\_real\_t k1, mha\_real\_t k2, mha\_real\_t i1, mha\_real\_t i2, mha\_real\_t bpm, mha\_real\_t minlen, mha\_real\_t maxlen, mha\_real\_t bassmod, mha\_real\_t bassperiod)
- void process (mha wave t \*)

#### **Private Attributes**

- · mhaconfig\_t cf
- mha\_real\_t pitch\_
- · unsigned int bt
- unsigned int t
- unsigned int len
- mha\_real\_t dur\_
- mha real t minlen
- mha\_real\_t maxlen\_
- mha\_real\_t bass
- · mha real t freq
- mha\_real\_t fun1\_key
- mha\_real\_t fun1\_range
- · mha real t fun1
- mha\_real\_t fun2
- mha real t fun2 key
- mha\_real\_t fun2\_range
- mha\_real\_t dist
- mha real t dist1
- mha\_real\_t alph
- mha\_real\_t rms
- mha\_real\_t bassmod\_
- mha\_real\_t bassperiod\_
- MHAWindow::hanning\_t hann1
- MHAWindow::hanning t hann2
- mha\_real\_t level

### 5.320.1 Detailed Description

Run-time configuration of the plingploing music generator.

```
5.320.2 Constructor & Destructor Documentation
5.320.2.1 plingploing::plingploing t::plingploing t (
                      mhaconfig_t c,
                      mha_real_t level,
                      mha_real_t pitch,
                      mha_real_t k1,
                      mha real t k2,
                      mha real t i1,
                      mha_real_t i2,
                      mha real t bpm,
                      mha_real_t minlen,
                      mha_real_t maxlen,
                      mha_real_t bassmod,
                      mha_real_t bassperiod )
5.320.3 Member Function Documentation
5.320.3.1 void plingploing::plingploing_t::process (
                      mha_wave_t * s
5.320.4 Member Data Documentation
5.320.4.1
         mhaconfig_t plingploing::plingploing_t::cf [private]
5.320.4.2 mha_real_t plingploing::plingploing_t::pitch_ [private]
5.320.4.3 unsigned int plingploing::plingploing_t::bt [private]
5.320.4.4 unsigned int plingploing::plingploing_t::t [private]
5.320.4.5
         unsigned int plingploing::plingploing_t::len [private]
5.320.4.6 mha_real_t plingploing::plingploing_t::dur_ [private]
5.320.4.7 mha real t plingploing::plingploing t::minlen [private]
5.320.4.8 mha_real_t plingploing::plingploing_t::maxlen_ [private]
5.320.4.9 mha_real_t plingploing::plingploing_t::bass [private]
```


```
5.320.4.10
          mha_real_t plingploing::plingploing_t::freq [private]
5.320.4.11
          mha_real_t plingploing::plingploing_t::fun1_key [private]
5.320.4.12
          mha_real_t plingploing::plingploing_t::fun1_range [private]
5.320.4.13
          mha_real_t plingploing::plingploing_t::fun1 [private]
5.320.4.14
          mha_real_t plingploing::plingploing_t::fun2 [private]
5.320.4.15
          mha_real_t plingploing::plingploing_t::fun2_key [private]
5.320.4.16
          mha_real_t plingploing::plingploing_t::fun2_range [private]
5.320.4.17
          mha_real_t plingploing::plingploing_t::dist [private]
5.320.4.18
          mha_real_t plingploing::plingploing_t::dist1 [private]
5.320.4.19
          mha_real_t plingploing::plingploing_t::alph [private]
5.320.4.20
          mha_real_t plingploing::plingploing_t::rms [private]
5.320.4.21
          mha real t plingploing::plingploing_t::bassmod_ [private]
5.320.4.22
          mha_real_t plingploing::plingploing_t::bassperiod_ [private]
5.320.4.23
          MHAWindow::hanning_t plingploing::plingploing_t::hann1 [private]
5.320.4.24
          MHAWindow::hanning_t plingploing::plingploing_t::hann2 [private]
5.320.4.25
          mha_real_t plingploing::plingploing_t::level [private]
```

The documentation for this class was generated from the following file:

## plingploing.cpp

## 5.321 plug\_t Class Reference

Inheritance diagram for plug\_t:

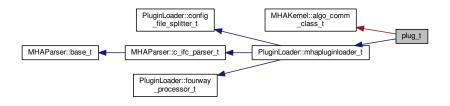

**Public Member Functions** 

```
    plug_t (const std::string &libname, const std::string &chain, const std::string &algo)
    ~plug_t () throw ()
    MHAProc_wave2wave_t get_process_wave ()
```

```
void * get_handle ()
```

algo\_comm\_t get\_ac ()

### **Additional Inherited Members**

```
5.321.1 Constructor & Destructor Documentation
```


MHAProc\_wave2spec\_t get\_process\_spec ()

The documentation for this class was generated from the following file:

## analysispath.cpp

# 5.322 plugin\_interface\_t Class Reference

Inheritance diagram for plugin\_interface\_t:

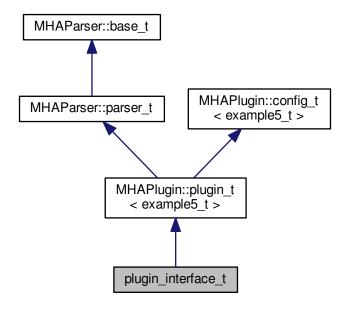

## **Public Member Functions**

- plugin\_interface\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)

## **Private Member Functions**

void update\_cfg ()

### **Private Attributes**

- MHAParser::int\_t scale\_ch
- MHAParser::float\_t factor
- MHAEvents::patchbay\_t< plugin\_interface\_t > patchbay

**Additional Inherited Members** 

```
5.322.1 Constructor & Destructor Documentation
5.322.1.1 plugin_interface_t::plugin_interface_t (
                      const algo_comm_t & iac,
                      const std::string & ,
                      const std::string & )
5.322.2 Member Function Documentation
5.322.2.1 mha spec t * plugin_interface_t::process (
                      mha_spec_t * spec )
5.322.2.2 void plugin_interface_t::prepare (
                      mhaconfig_t & tfcfg ) [virtual]
Implements MHAPlugin::plugin_t < example5_t > (p. 692).
5.322.2.3 void plugin_interface_t::update_cfg( ) [private]
5.322.3 Member Data Documentation
5.322.3.1 MHAParser::int_t plugin_interface_t::scale_ch [private]
5.322.3.2 MHAParser::float_t plugin_interface_t::factor [private]
5.322.3.3 MHAEvents::patchbay_t<plugin_interface_t> plugin_interface_t::patchbay
          [private]
```

The documentation for this class was generated from the following file:

## example5.cpp

# 5.323 pluginbrowser\_t Class Reference

**Public Member Functions** 

- pluginbrowser t()
- void get\_paths ()
- plugindescription\_t scan\_plugin (const std::string &name)
- void add\_plugins ()
- void clear\_plugins ()
- void scan\_plugins ()
- void add\_plugin (const std::string &name)
- std::list< plugindescription\_t > get\_plugins () const

#### **Private Attributes**

```
• std::string plugin_extension
```

- std::list< std::string > library\_paths
- std::list< plugindescription\_t > plugins
- std::map< std::string, pluginloader\_t \* > p

```
5.323.1 Constructor & Destructor Documentation
5.323.1.1
          pluginbrowser_t::pluginbrowser_t ( )
5.323.2 Member Function Documentation
          void pluginbrowser_t::get_paths ( )
5.323.2.1
5.323.2.2 plugindescription t pluginbrowser_t::scan_plugin (
                       const std::string & name )
5.323.2.3 void pluginbrowser_t::add_plugins ( )
5.323.2.4
          void pluginbrowser_t::clear_plugins ( )
5.323.2.5 void pluginbrowser_t::scan_plugins ( )
5.323.2.6 void pluginbrowser_t::add_plugin (
                       const std::string & name )
          std::list<plugindescription_t> pluginbrowser_t::get_plugins( ) const [inline]
5.323.2.7
5.323.3 Member Data Documentation
5.323.3.1
          std::string pluginbrowser_t::plugin_extension [private]
5.323.3.2
          std::list<std::string> pluginbrowser_t::library_paths [private]
5.323.3.3 std::list<plugindescription_t> pluginbrowser_t::plugins [private]
         std::map<std::string,pluginloader t*> pluginbrowser_t::p [private]
```

The documentation for this class was generated from the following files:

- · pluginbrowser.h
- pluginbrowser.cpp

# 5.324 plugindescription\_t Class Reference

#### **Public Attributes**

- std::string name
- std::string fullname
- std::string documentation
- std::vector< std::string > categories
- bool wave2wave
- bool wave2spec
- bool spec2wave
- bool spec2spec
- std::vector< std::string > query\_cmds
- std::map< std::string, std::string > queries

#### 5.324.1 Member Data Documentation


- 5.324.1.1 std::string plugindescription\_t::name
- 5.324.1.2 std::string plugindescription\_t::fullname
- 5.324.1.3 std::string plugindescription\_t::documentation
- 5.324.1.4 std::vector<std::string> plugindescription\_t::categories
- 5.324.1.5 bool plugindescription\_t::wave2wave
- 5.324.1.6 bool plugindescription\_t::wave2spec
- 5.324.1.7 bool plugindescription t::spec2wave
- 5.324.1.8 bool plugindescription\_t::spec2spec
- 5.324.1.9 std::vector<std::string> plugindescription\_t::query\_cmds
- 5.324.1.10 std::map<std::string,std::string> plugindescription\_t::queries

The documentation for this class was generated from the following file:

## · pluginbrowser.h

# 5.325 PluginLoader::config\_file\_splitter\_t Class Reference

Inheritance diagram for PluginLoader::config\_file\_splitter\_t:

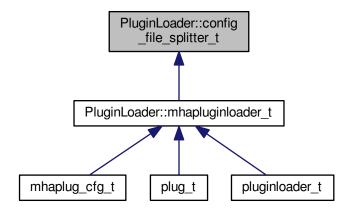

#### **Public Member Functions**

- config\_file\_splitter\_t (const std::string &name)
- const std::string & get\_configname () const
- const std::string & get\_libname () const
- const std::string & get origname () const
- const std::string & get\_configfile () const

### **Private Attributes**

- std::string libname
- std::string configname
- std::string origname
- std::string configfile

## 5.325.1 Constructor & Destructor Documentation

- 5.325.1.1 PluginLoader::config\_file\_splitter\_t ( const std::string & name )
- 5.325.2 Member Function Documentation

```
5.325.2.1
          const std::string& PluginLoader::config_file_splitter_t::get_configname ( ) const
           [inline]
          const std::string& PluginLoader::config_file_splitter_t::get_libname( ) const [inline]
5.325.2.2
          const std::string& PluginLoader::config file splitter t::get origname( ) const [inline]
5.325.2.3
5.325.2.4
          const std::string& PluginLoader::config_file_splitter_t::get_configfile() const [inline]
5.325.3 Member Data Documentation
5.325.3.1
          std::string PluginLoader::config_file_splitter_t::libname [private]
5.325.3.2
          std::string PluginLoader::config file splitter t::configname [private]
5.325.3.3
          std::string PluginLoader::config_file_splitter_t::origname [private]
5.325.3.4
          std::string PluginLoader::config_file_splitter_t::configfile [private]
```


The documentation for this class was generated from the following files:

- · mhapluginloader.h
- mhapluginloader.cpp

## 5.326 PluginLoader::fourway\_processor\_t Class Reference

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

Inheritance diagram for PluginLoader::fourway\_processor\_t:

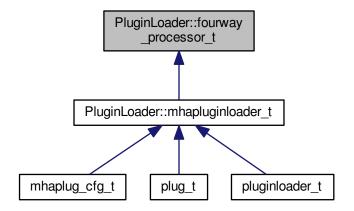

#### **Public Member Functions**

- virtual void process (mha\_wave\_t \*s\_in, mha\_wave\_t \*\*s\_out)=0
   Pure waveform processing.
- virtual void **process** (**mha\_spec\_t** \*s\_in, **mha\_spec\_t** \*\*s\_out)=0 *Pure spectrum processing.*
- virtual void **process** (**mha\_wave\_t** \*s\_in, **mha\_spec\_t** \*\*s\_out)=0

  Signal processing with domain transformation from waveform to spectrum.
- virtual void **process** (**mha\_spec\_t** \*s\_in, **mha\_wave\_t** \*\*s\_out)=0

  Signal processing with domain transformation from spectrum to waveform.
- virtual void prepare (mhaconfig\_t &settings)=0
   Prepares the processor for signal processing.
- virtual void release ()=0

Resources allocated for signal processing in **fourway\_processor\_t::prepare** (p. 842) are released here in **fourway\_processor\_t::release** (p. 842).

- virtual std::string parse (const std::string &query)=0
   Parser interface.
- virtual ~fourway\_processor\_t ()

Classes with virtual methods need virtual destructor.

### 5.326.1 Detailed Description

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

For supporting different output domains for the same input domain, the processing methods are overloaded with respect to input domain and output domain.

```
5.326.2 Constructor & Destructor Documentation
```

```
5.326.2.1 virtual PluginLoader::fourway_processor_t::∼fourway_processor_t( ) [inline], [virtual]
```

Classes with virtual methods need virtual destructor.

This destructor is empty.

# 5.326.3 Member Function Documentation

Pure waveform processing.

#### **Parameters**

s_in	input waveform signal
s_out	output waveform signal

Implemented in **PluginLoader::mhapluginloader\_t** (p. 845).

Pure spectrum processing.

### **Parameters**

s_in	input spectrum signal
s_out	output spectrum signal

Implemented in PluginLoader::mhapluginloader\_t (p. 845).

Signal processing with domain transformation from waveform to spectrum.

### **Parameters**

s_in	input waveform signal
s_out	output spectrum signal

Implemented in **PluginLoader::mhapluginloader\_t** (p. 845).

Signal processing with domain transformation from spectrum to waveform.

#### **Parameters**

s_in	input spectrum signal
s_out	output waveform signal

Implemented in PluginLoader::mhapluginloader\_t (p. 845).

Prepares the processor for signal processing.

### **Parameters**

settings	domain and dimensions of the signal. The contents of settings may be modified
	by the prepare implementation. Upon calling fourway_processor_t::prepare
	(p. 842), settings reflects domain and dimensions of the input signal. When
	fourway_processor_t::prepare (p. 842) returns, settings reflects domain and
	dimensions of the output signal.

Implemented in **PluginLoader::mhapluginloader\_t** (p. 845).

```
5.326.3.6 virtual void PluginLoader::fourway processor t::release ( ) [pure virtual]
```

Resources allocated for signal processing in **fourway\_processor\_t::prepare** (p. 842) are released here in **fourway processor t::release** (p. 842).

Implemented in PluginLoader::mhapluginloader\_t (p. 845).

Parser interface.


Implemented in PluginLoader::mhapluginloader\_t (p. 845).

The documentation for this class was generated from the following file:

## mhapluginloader.h

5.327 PluginLoader::mhapluginloader\_t Class Reference

Inheritance diagram for PluginLoader::mhapluginloader\_t:

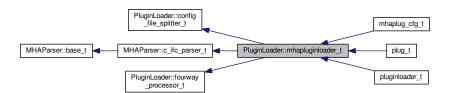

#### **Public Member Functions**

- std::string **parse** (const std::string &str)
- mhapluginloader\_t (algo\_comm\_t iac, const std::string &libname, bool check\_
   version=true)

Loads and initializes mha plugin and establishes interface.

- ~mhapluginloader\_t () throw ()
- bool has\_process (mha\_domain\_t in, mha\_domain\_t out) const
- bool has parser () const
- mha\_domain\_t input\_domain () const
- mha\_domain\_t output\_domain () const
- void prepare (mhaconfig\_t &)
- void release ()
- void process (mha\_wave\_t \*, mha\_wave\_t \*\*)
- void process (mha spec t \*, mha spec t \*\*)
- void process (mha\_wave\_t \*, mha\_spec\_t \*\*)
- void process (mha spec t \*, mha wave t \*\*)
- std::string getfullname () const
- std::string get\_documentation () const
- std::vector< std::string > get\_categories () const
- bool **is\_prepared** () const

#### **Protected Member Functions**

- void test error ()
- void test\_version ()
- void mha\_test\_struct\_size (unsigned int s)
- void resolve\_and\_init ()

### **Protected Attributes**

- int lib\_err
- · algo\_comm\_t ac
- dynamiclib\_t lib\_handle
- void \* lib\_data
- MHAGetVersion t MHAGetVersion cb
- MHAInit\_t MHAInit\_cb
- MHADestroy\_t MHADestroy\_cb
- MHAPrepare\_t MHAPrepare\_cb
- MHARelease t MHARelease cb
- MHAProc\_wave2wave\_t MHAProc\_wave2wave\_cb
- MHAProc\_spec2spec\_t MHAProc\_spec2spec\_cb
- MHAProc\_wave2spec\_t MHAProc\_wave2spec\_cb
- MHAProc\_spec2wave\_t MHAProc\_spec2wave\_cb
- MHASet\_t MHASet\_cb
- MHAStrError\_t MHAStrError\_cb

- mhaconfig\_t cf\_input
- mhaconfig\_t cf\_output
- std::string plugin\_documentation
- std::vector< std::string > plugin\_categories
- bool b\_check\_version
- bool b\_is\_prepared

#### **Additional Inherited Members**

#### 5.327.1 Constructor & Destructor Documentation

Loads and initializes mha plugin and establishes interface.

#### **Parameters**

iac	AC space (algorithm communication variables)
libname	Either file name of MHA plugin without platform-specific extension (i.e. "identity" for "identity.so" or "identity.dll") to be found on the MHA_LIBRARY_PATH (which is an environment variable). Or the same file name without extension followed by a colon ":" followed by the "configuration name" of the MHA plugin, which may be used to differentiate between multiple identical MHA plugins or to give the plugin a self-documenting name that fits its purpose. The library name - configuration name expression can be followed by a "<" followed by a configuration file name, which will be read after initialization of the plugin.

Example: "overlapadd:agc<compression.cfg" will load the plugin "overlapadd.so" or "overlapadd.dll", insert it as the configuration node "agc", and reads the configuration file "compression.cfg" into that node.

#### **Parameters**

check_version	Pluginloader will not check that the plugin was built using a known
	compatible MHA version if this flag is set to false. Disabling version check
	is discouraged.

5.327.1.2 PluginLoader::mhapluginloader\_t::~mhapluginloader\_t ( ) throw )

#### 5.327.2 Member Function Documentation

```
5.327.2.1 std::string PluginLoader::mhapluginloader_t::parse (
                     const std::string & str ) [inline], [virtual]
Implements PluginLoader::fourway processor t (p. 842).
5.327.2.2 bool PluginLoader::mhapluginloader t::has process (
                     mha_domain_t in,
                     mha domain t out ) const
5.327.2.3 bool PluginLoader::mhapluginloader_t::has_parser ( ) const
5.327.2.4 mha domain t PluginLoader::mhapluginloader_t::input_domain ( ) const
5.327.2.5 mha_domain_t PluginLoader::mhapluginloader_t::output_domain() const
5.327.2.6 void PluginLoader::mhapluginloader_t::prepare (
                     mhaconfig_t & tf ) [virtual]
Implements PluginLoader::fourway processor t (p. 842).
5.327.2.7 void PluginLoader::mhapluginloader t::release() [virtual]
Implements PluginLoader::fourway processor t (p. 842).
5.327.2.8 void PluginLoader::mhapluginloader_t::process (
                     mha wave t * s_in,
                     mha_wave_t ** s_out ) [virtual]
Implements PluginLoader::fourway_processor_t (p. 840).
5.327.2.9 void PluginLoader::mhapluginloader_t::process (
                     mha spec t * s_in,
                     mha_spec_t ** s_out ) [virtual]
Implements PluginLoader::fourway_processor_t (p. 841).
5.327.2.10 void PluginLoader::mhapluginloader t::process (
                      mha wave t * s_in,
                      mha_spec_t ** s_out ) [virtual]
Implements PluginLoader::fourway processor t (p. 841).
5.327.2.11 void PluginLoader::mhapluginloader t::process (
                      mha_spec_t * s_in,
                      mha_wave_t ** s_out ) [virtual]
Implements PluginLoader::fourway_processor_t (p. 841).
```

```
5.327.2.12
          std::string PluginLoader::mhapluginloader_t::getfullname ( ) const [inline]
5.327.2.13 std::string PluginLoader::mhapluginloader_t::get_documentation() const [inline]
5.327.2.14
          std::vector<std::string> PluginLoader::mhapluginloader t::get categories ( ) const
           [inline]
5.327.2.15 bool PluginLoader::mhapluginloader_t::is_prepared() const [inline]
5.327.2.16 void PluginLoader::mhapluginloader_t::test_error() [protected]
5.327.2.17 void PluginLoader::mhapluginloader_t::test_version() [protected]
5.327.2.18 void PluginLoader::mhapluginloader_t::mha_test_struct_size (
                      unsigned int s ) [protected]
5.327.2.19 void PluginLoader::mhapluginloader_t::resolve_and_init() [protected]
5.327.3 Member Data Documentation
         int PluginLoader::mhapluginloader_t::lib_err [protected]
5.327.3.1
5.327.3.2
         algo_comm_t PluginLoader::mhapluginloader_t::ac [protected]
5.327.3.3
         dynamiclib_t PluginLoader::mhapluginloader_t::lib_handle [protected]
5.327.3.4 void* PluginLoader::mhapluginloader_t::lib_data [protected]
5.327.3.5
         MHAGetVersion_t PluginLoader::mhapluginloader_t::MHAGetVersion_cb
          [protected]
5.327.3.6 MHAInit t PluginLoader::mhapluginloader_t::MHAInit_cb [protected]
5.327.3.7
         MHADestroy_t PluginLoader::mhapluginloader_t::MHADestroy_cb [protected]
5.327.3.8
         MHAPrepare t PluginLoader::mhapluginloader_t::MHAPrepare_cb [protected]
5.327.3.9 MHARelease t PluginLoader::mhapluginloader_t::MHARelease_cb [protected]
5.327.3.10
          MHAProc wave2wave t PluginLoader::mhapluginloader_t::MHAProc_wave2wave_cb
           [protected]
5.327.3.11
          MHAProc spec2spec t PluginLoader::mhapluginloader_t::MHAProc_spec2spec_cb
           [protected]
```

5.327.3.13 MHAProc\_wave2spec\_t PluginLoader::mhapluginloader\_t::MHAProc\_wave2spec\_cb [protected]
5.327.3.13 MHAProc\_spec2wave\_t PluginLoader::mhapluginloader\_t::MHAProc\_spec2wave\_cb [protected]
5.327.3.14 MHASet\_t PluginLoader::mhapluginloader\_t::MHASet\_cb [protected]
5.327.3.15 MHAStrError\_t PluginLoader::mhapluginloader\_t::MHAStrError\_cb [protected]
5.327.3.16 mhaconfig\_t PluginLoader::mhapluginloader\_t::cf\_input [protected]
5.327.3.17 mhaconfig\_t PluginLoader::mhapluginloader\_t::cf\_output [protected]
5.327.3.18 std::string PluginLoader::mhapluginloader\_t::plugin\_documentation [protected]
5.327.3.19 std::vector<std::string> PluginLoader::mhapluginloader\_t::plugin\_categories [protected]
5.327.3.20 bool PluginLoader::mhapluginloader\_t::b\_check\_version [protected]


The documentation for this class was generated from the following files:

**5.327.3.21** bool PluginLoader::mhapluginloader\_t::b\_is\_prepared [protected]

- mhapluginloader.h
- mhapluginloader.cpp

## 5.328 pluginloader\_t Class Reference

Inheritance diagram for pluginloader t:

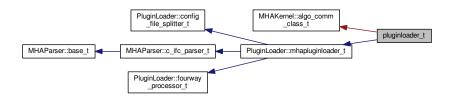

### **Public Member Functions**

- pluginloader\_t (const std::string &name)
- ~pluginloader\_t () throw ()

**Additional Inherited Members** 

5.328.1 Constructor & Destructor Documentation


5.328.1.2 pluginloader\_t::~pluginloader\_t ( ) throw )

The documentation for this class was generated from the following files:

- · pluginbrowser.h
- · pluginbrowser.cpp

# 5.329 prediction\_error Class Reference

Inheritance diagram for prediction\_error:

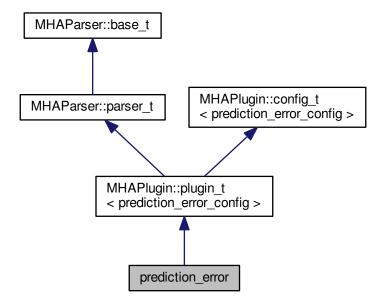

#### **Public Member Functions**

prediction\_error (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

Constructs our plugin.

- ~prediction\_error ()
- mha\_wave\_t \* process (mha\_wave\_t \*)

Checks for the most recent configuration and defers processing to it.

void prepare (mhaconfig\_t &)

Plugin preparation.

void release (void)

#### **Public Attributes**

```
    MHAParser::float t rho
```

MHAParser::float\_t c

MHAParser::int\_t ntaps

MHAParser::vfloat\_t gains

• MHAParser::string t name e

MHAParser::string\_t name\_f

MHAParser::string\_t name\_lpc

MHAParser::int\_t lpc\_order

MHAParser::vint\_t pred\_err\_delay

MHAParser::vint\_t delay\_w

MHAParser::vint\_t delay\_d

MHAParser::int\_t n\_no\_update

## **Private Member Functions**

• void update cfg ()

### **Private Attributes**

MHAEvents::patchbay\_t< prediction\_error > patchbay

#### **Additional Inherited Members**

```
5.329.1 Constructor & Destructor Documentation
```

## Constructs our plugin.

```
5.329.1.2 prediction error::~prediction error()
5.329.2 Member Function Documentation
         mha_wave_t * prediction_error::process (
5.329.2.1
                      mha wave t * signal )
Checks for the most recent configuration and defers processing to it.
5.329.2.2 void prediction_error::prepare (
                      mhaconfig_t & signal_info ) [virtual]
Plugin preparation.
An opportunity to validate configuration parameters before instantiating a configuration.
Parameters
              Structure containing a description of the form of the signal (domain, number of
 signal info
              channels, frames per block, sampling rate.
Implements MHAPlugin::plugin t < prediction error config > (p. 692).
5.329.2.3 void prediction_error::release (
                      void ) [inline], [virtual]
Reimplemented from MHAPlugin::plugin_t< prediction_error_config > (p. 693).
         void prediction_error::update_cfg( ) [private]
5.329.2.4
5.329.3 Member Data Documentation
5.329.3.1
         MHAParser::float_t prediction_error::rho
5.329.3.2 MHAParser::float_t prediction_error::c
5.329.3.3 MHAParser::int_t prediction_error::ntaps
5.329.3.4 MHAParser::vfloat_t prediction_error::gains
```

5.329.3.5 MHAParser::string\_t prediction\_error::name\_e

5.329.3.6 MHAParser::string\_t prediction\_error::name\_f

```
5.329.3.7 MHAParser::string_t prediction_error::name_lpc
5.329.3.8 MHAParser::int_t prediction_error::lpc_order
5.329.3.9 MHAParser::vint_t prediction_error::pred_err_delay
5.329.3.10 MHAParser::vint_t prediction_error::delay_w
5.329.3.11 MHAParser::vint_t prediction_error::delay_d
5.329.3.12 MHAParser::int_t prediction_error::n_no_update
5.329.3.13 MHAEvents::patchbay_tprediction_error::patchbay_private
```

The documentation for this class was generated from the following files:

- · prediction\_error.h
- prediction\_error.cpp

# 5.330 prediction\_error\_config Class Reference

### **Public Member Functions**

- prediction\_error\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, prediction
   —error \*pred\_err)
- ~prediction\_error\_config ()
- mha\_wave\_t \* process (mha\_wave\_t \*s\_Y, mha\_real\_t rho, mha\_real\_t c)
- void insert ()

### **Private Attributes**

- · algo\_comm\_t ac
- unsigned int ntaps
- · unsigned int frames
- unsigned int channels
- MHA AC::waveform ts E
- MHA\_AC::waveform\_t F
- MHASignal::waveform\_t Pu

Power of input signal delayline.

- std::string name\_d\_
- std::string name\_lpc\_
- int n\_no\_update\_
- int no\_iter

```
    int iter
```

- MHASignal::waveform\_t v\_G
- MHASignal::waveform\_t s\_U
- MHASignal::delay\_t s\_E\_pred\_err\_delay
- MHASignal::delay\_t s\_W
- MHASignal::ringbuffer ts Wflt
- MHASignal::delay\_t s\_U\_delay
- MHASignal::ringbuffer\_t s\_U\_delayflt
- MHASignal::waveform\_t F\_Uflt
- MHASignal::delay\_t s\_Y\_delay
- MHASignal::ringbuffer\_t s\_Y\_delayflt
- MHASignal::ringbuffer\_t UbufferPrew
- mha wave ts LPC
- mha\_wave\_t UPrew
- mha\_wave\_t YPrew
- · mha wave t EPrew
- mha\_wave\_t UPrewW
- mha wave t smpl
- mha\_wave\_t \* s\_Usmpl
- 5.330.1 Constructor & Destructor Documentation
- 5.330.1.2 prediction\_error\_config::~prediction\_error\_config()
- 5.330.2 Member Function Documentation
- 5.330.2.2 void prediction\_error\_config::insert ( )
- 5.330.3 Member Data Documentation
- **5.330.3.1** algo\_comm\_t prediction\_error\_config::ac [private]
- **5.330.3.2 unsigned int prediction\_error\_config::ntaps** [private]

```
5.330.3.3
         unsigned int prediction_error_config::frames [private]
5.330.3.4 unsigned int prediction_error_config::channels [private]
5.330.3.5 MHA_AC::waveform_t prediction_error_config::s_E [private]
5.330.3.6 MHA_AC::waveform_t prediction_error_config::F [private]
5.330.3.7 MHASignal::waveform_t prediction_error_config::Pu [private]
Power of input signal delayline.
5.330.3.8 std::string prediction_error_config::name_d_ [private]
5.330.3.9 std::string prediction_error_config::name_lpc_ [private]
5.330.3.10 int prediction_error_config::n_no_update_ [private]
5.330.3.11 int prediction_error_config::no_iter [private]
5.330.3.12 int prediction_error_config::iter [private]
5.330.3.13 MHASignal::waveform_t prediction_error_config::v_G [private]
5.330.3.14 MHASignal::waveform_t prediction_error_config::s_U [private]
5.330.3.15 MHASignal::delay_t prediction_error_config::s_E_pred_err_delay [private]
5.330.3.16 MHASignal::delay_t prediction_error_config::s_W [private]
5.330.3.17 MHASignal::ringbuffer_t prediction_error_config::s_Wflt [private]
5.330.3.18 MHASignal::delay_t prediction_error_config::s_U_delay [private]
5.330.3.19 MHASignal::ringbuffer_t prediction_error_config::s_U_delayflt [private]
5.330.3.20 MHASignal::waveform_t prediction_error_config::F_Uflt [private]
5.330.3.21 MHASignal::delay_t prediction_error_config::s_Y_delay [private]
5.330.3.22 MHASignal::ringbuffer_t prediction_error_config::s_Y_delayflt [private]
5.330.3.23 MHASignal::ringbuffer_t prediction_error_config::UbufferPrew [private]
```


```
5.330.3.24 mha_wave_t prediction_error_config::s_LPC [private]
5.330.3.25 mha_wave_t prediction_error_config::UPrew [private]
5.330.3.26 mha_wave_t prediction_error_config::YPrew [private]
5.330.3.27 mha_wave_t prediction_error_config::EPrew [private]
5.330.3.28 mha_wave_t prediction_error_config::UPrewW [private]
5.330.3.29 mha_wave_t prediction_error_config::smpl [private]
5.330.3.30 mha_wave_t* prediction_error_config::s_Usmpl [private]
```

The documentation for this class was generated from the following files:

- · prediction\_error.h
- prediction\_error.cpp

# 5.331 rmslevel\_if\_t Class Reference

Inheritance diagram for rmslevel\_if\_t:

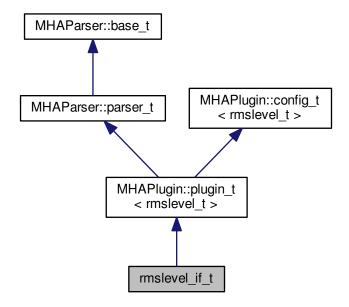

**Public Member Functions** 

```
    rmslevel_if_t (const algo_comm_t &, const std::string &, const std::string &)

   mha_spec_t * process (mha_spec_t *)
   mha_wave_t * process (mha_wave_t *)
   void prepare (mhaconfig_t &)
Private Attributes

    std::string name

Additional Inherited Members
5.331.1 Constructor & Destructor Documentation
5.331.1.1 rmslevel_if_t::rmslevel_if_t (
                      const algo_comm_t & iac,
                      const std::string & ith,
                      const std::string & ial )
5.331.2 Member Function Documentation
5.331.2.1 mha_spec_t * rmslevel_if_t::process (
                      mha\_spec\_t * s)
5.331.2.2 mha_wave_t * rmslevel_if_t::process (
```

Implements MHAPlugin::plugin\_t< rmslevel\_t > (p. 692).

mha\_wave\_t \* s )

mhaconfig\_t & tf ) [virtual]

5.331.3 Member Data Documentation

5.331.2.3 void rmslevel\_if\_t::prepare (

**5.331.3.1** std::string rmslevel\_if\_t::name [private]

The documentation for this class was generated from the following file:

rmslevel.cpp

## 5.332 rmslevel\_t Class Reference

**Public Member Functions** 

```
    rmslevel_t (unsigned int nch, algo_comm_t ac, std::string name, MHAParser::parser
        _t &p, unsigned int fftlen_)
```

- mha\_spec\_t \* process (mha\_spec\_t \*)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void insert ()

#### **Private Attributes**

- mon\_t level\_db
- · mon\_t peak\_db
- mon\_t level
- mon\_t peak
- · unsigned int fftlen

```
5.332.1 Constructor & Destructor Documentation
```

5.332.2 Member Function Documentation

```
5.332.2.1 mha_spec_t * rmslevel_t::process ( mha_spec_t * s )
```

```
5.332.2.3 void rmslevel_t::insert ( )
```

5.332.3 Member Data Documentation

```
5.332.3.1 mon_t rmslevel_t::level_db [private]
```

**5.332.3.2** mon\_t rmslevel\_t::peak\_db [private]

**5.332.3.3** mon\_t rmslevel\_t::level [private]

**5.332.3.4** mon\_t rmslevel\_t::peak [private]


**5.332.3.5** unsigned int rmslevel\_t::fftlen [private]

The documentation for this class was generated from the following file:

rmslevel.cpp

# 5.333 route::interface\_t Class Reference

Inheritance diagram for route::interface\_t:

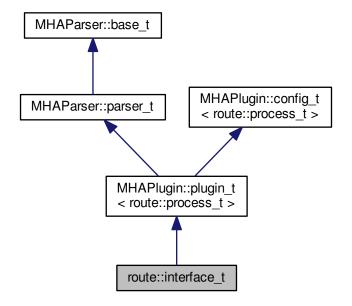

# **Public Member Functions**

- interface\_t (algo\_comm\_t iac, const std::string &, const std::string &)
- void prepare (mhaconfig\_t &)
- void release ()
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha\_spec\_t \* process (mha\_spec\_t \*)

# **Private Member Functions**

· void update ()

# **Private Attributes**

- MHAEvents::patchbay\_t< route::interface\_t > patchbay
- MHAParser::vstring\_t route\_out
- MHAParser::vstring\_t route\_ac
- mhaconfig\_t cfin
- mhaconfig\_t cfout
- mhaconfig\_t cfac
- bool prepared
- · bool stopped
- std::string algo

```
Additional Inherited Members
```

```
5.333.1 Constructor & Destructor Documentation
5.333.1.1 route::interface_t::interface_t (
                      algo comm t iac,
                      const std::string & ,
                      const std::string & ialg )
5.333.2 Member Function Documentation
5.333.2.1 void route::interface_t::prepare (
                      mhaconfig_t & cf ) [virtual]
Implements MHAPlugin::plugin t < route::process t > (p. 692).
5.333.2.2 void route::interface_t::release (
                      void ) [virtual]
Reimplemented from MHAPlugin::plugin t < route::process t > (p. 693).
5.333.2.3 mha wave t * route::interface_t::process (
                      mha wave t * s)
5.333.2.4
         mha spec t * route::interface t::process (
                      mha spec t * s)
5.333.2.5 void route::interface_t::update() [private]
5.333.3 Member Data Documentation
5.333.3.1 MHAEvents::patchbay_t<route::interface_t> route::interface_t::patchbay
          [private]
5.333.3.2 MHAParser::vstring t route::interface_t::route_out [private]
5.333.3.3 MHAParser::vstring_t route::interface_t::route_ac [private]
5.333.3.4 mhaconfig t route::interface_t::cfin [private]
5.333.3.5 mhaconfig_t route::interface_t::cfout [private]
5.333.3.6 mhaconfig_t route::interface_t::cfac [private]
5.333.3.7 bool route::interface t::prepared [private]
5.333.3.8 bool route::interface_t::stopped [private]
5.333.3.9 std::string route::interface_t::algo [private]
```

The documentation for this class was generated from the following file:

# route.cpp

### 5.334 route::process\_t Class Reference

#### **Public Member Functions**

- process\_t (algo\_comm\_t iac, const std::string acname, const std::vector< std::string > &r\_out, const std::vector< std::string > &r\_ac, const mhaconfig\_t &cf\_in, const mhaconfig\_t &cf\_out, const mhaconfig\_t &cf\_ac, bool sync)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- mha spec t \* process (mha spec t \*)

#### **Private Attributes**

- MHAMultiSrc::waveform\_t wout
- MHAMultiSrc::spectrum\_t sout
- MHAMultiSrc::waveform\_t wout\_ac
- MHAMultiSrc::spectrum t sout ac

## 5.334.1 Constructor & Destructor Documentation

5.334.2 Member Function Documentation

```
5.334.2.1 mha_wave_t * route::process_t::process ( mha_wave_t * s )
```

5.334.3 Member Data Documentation

```
5.334.3.1 MHAMultiSrc::waveform_t route::process_t::wout [private]
```

**5.334.3.2** MHAMultiSrc::spectrum\_t route::process\_t::sout [private]

**5.334.3.3 MHAMultiSrc::waveform t route::process\_t::wout\_ac** [private]

**5.334.3.4 MHAMultiSrc::spectrum\_t route::process\_t::sout\_ac** [private]

The documentation for this class was generated from the following file:

route.cpp

### 5.335 rt\_nlms\_t Class Reference

#### **Public Member Functions**

• rt\_nlms\_t (algo\_comm\_t iac, const std::string &name, const mhaconfig\_t &cfg, unsigned int ntaps\_, const std::string &name\_u, const std::string &name\_d, const std::string &name\_e, const std::string &name\_f, const int n\_no\_update)

- ~rt\_nlms\_t ()
- mha\_wave\_t \* process (mha\_wave\_t \*sUD, mha\_real\_t rho, mha\_real\_t c, unsigned int norm\_type, unsigned int estim\_type, mha\_real\_t lambda\_smooth)
- void **insert** ()

### **Private Attributes**

- · algo\_comm\_t ac
- unsigned int ntaps
- · unsigned int frames
- · unsigned int channels
- MHA\_AC::waveform\_t F
- MHASignal::waveform\_t U

Input signal cache.

MHASignal::waveform\_t Uflt

Input signal cache (second filter)

MHASignal::waveform t Pu

Power of input signal delayline.

MHASignal::waveform\_t fu

Filtered input signal.

MHASignal::waveform\_t fuflt

Filtered input signal.

- MHASignal::waveform\_t fu\_previous
- MHASignal::waveform\_t y\_previous
- MHASignal::waveform\_t P\_Sum
- std::string name\_u\_
- std::string name d
- std::string name\_e\_
- int n\_no\_update\_
- int no iter
- mha\_wave\_t s\_E

```
5.335.1 Constructor & Destructor Documentation
5.335.1.1 rt_nlms_t::rt_nlms_t (
                      algo_comm_t iac,
                      const std::string & name,
                      const mhaconfig_t & cfg,
                      unsigned int ntaps_,
                      const std::string & name u,
                      const std::string & name_d,
                      const std::string & name_e,
                      const std::string & name_f,
                      const int n_no_update )
5.335.1.2 rt_nlms_t::~rt_nlms_t( ) [inline]
5.335.2 Member Function Documentation
5.335.2.1 mha_wave_t * rt_nlms_t::process (
                      mha wave t * sUD,
                      mha_real_t rho,
                      mha_real_t c,
                      unsigned int norm_type,
                      unsigned int estim_type,
                      mha real t lambda_smooth )
5.335.2.2 void rt nlms t::insert ( )
5.335.3 Member Data Documentation
5.335.3.1
         algo_comm_t rt_nlms_t::ac [private]
5.335.3.2 unsigned int rt_nlms_t::ntaps [private]
5.335.3.3 unsigned int rt_nlms_t::frames [private]
5.335.3.4 unsigned int rt nlms t::channels [private]
5.335.3.5 MHA AC::waveform trt_nlms_t::F [private]
5.335.3.6 MHASignal::waveform_t rt_nlms_t::U [private]
Input signal cache.
5.335.3.7 MHASignal::waveform_t rt_nlms_t::Uflt [private]
Input signal cache (second filter)
```

```
5.335.3.8 MHASignal::waveform_t rt_nlms_t::Pu [private]
Power of input signal delayline.
5.335.3.9 MHASignal::waveform_t rt_nlms_t::fu [private]
Filtered input signal.
5.335.3.10 MHASignal::waveform_t rt_nlms_t::fuflt [private]
Filtered input signal.
5.335.3.11
          MHASignal::waveform_t rt_nlms_t::fu_previous [private]
5.335.3.12 MHASignal::waveform trt_nlms_t::y_previous [private]
5.335.3.13 MHASignal::waveform_t rt_nlms_t::P_Sum [private]
5.335.3.14 std::string rt_nlms_t::name_u_ [private]
5.335.3.15 std::string rt_nlms_t::name_d_ [private]
5.335.3.16 std::string rt_nlms_t::name_e_ [private]
5.335.3.17 int rt_nlms_t::n_no_update_ [private]
5.335.3.18 int rt_nlms_t::no_iter [private]
```

The documentation for this class was generated from the following file:

**5.335.3.19 mha\_wave\_t rt\_nlms\_t::s\_E** [private]

nlms\_wave.cpp

## 5.336 RunOnce Struct Reference

**Public Member Functions** 

- template<typename T, typename... Args>
   RunOnce (T &&f, Args...args)
- template<typename T, typename... Args>
   RunOnce (T &&f, Args...args)

### 5.336.1 Constructor & Destructor Documentation


5.336.1.2 template 
$$<$$
 typename T , typename... Args $>$  RunOnce::RunOnce ( T && f, Args... args ) [inline]

The documentation for this struct was generated from the following files:

- ac2lsl.cpp
- ac2osc.cpp

# 5.337 save\_spec\_t Class Reference

Inheritance diagram for save\_spec\_t:

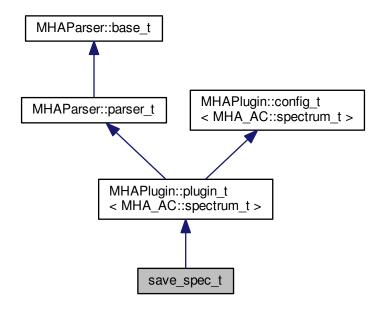

## **Public Member Functions**

- save\_spec\_t (const algo\_comm\_t &iac, const std::string &ith, const std::string &ial)
- mha\_spec\_t \* process (mha\_spec\_t \*s)
- void prepare (mhaconfig\_t &tf)

**Private Attributes** 

• std::string basename

```
Additional Inherited Members
```

5.337.1 Constructor & Destructor Documentation

5.337.2 Member Function Documentation

Implements MHAPlugin::plugin\_t< MHA\_AC::spectrum\_t > (p. 692).

5.337.3 Member Data Documentation


```
5.337.3.1 std::string save_spec_t::basename [private]
```

The documentation for this class was generated from the following file:

save\_spec.cpp

# 5.338 save\_wave\_t Class Reference

Inheritance diagram for save\_wave\_t:

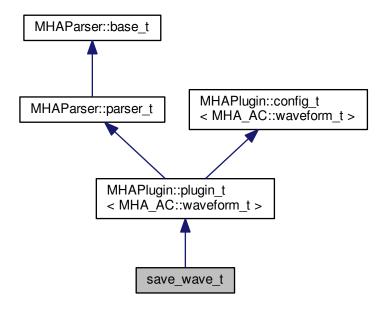

#### **Public Member Functions**

- save\_wave\_t (const algo\_comm\_t &iac, const std::string &ith, const std::string &ial)
- mha\_wave\_t \* process (mha\_wave\_t \*s)
- void prepare (mhaconfig\_t &tf)

### **Private Attributes**

std::string basename

#### **Additional Inherited Members**

# 5.338.1 Constructor & Destructor Documentation

```
5.338.2 Member Function Documentation
```

5.338.3 Member Data Documentation

```
5.338.3.1 std::string save_wave_t::basename [private]
```

The documentation for this class was generated from the following file:

save\_wave.cpp

5.339 shadowfilter\_begin::cfg\_t Class Reference

**Public Member Functions** 

- cfg\_t (int nfft, int inch, int outch, algo\_comm\_t ac, std::string name)
- mha\_spec\_t \* process (mha\_spec\_t \*)

## **Private Attributes**

- MHA\_AC::spectrum\_t in\_spec\_copy
- MHASignal::spectrum\_t out\_spec
- · MHA AC::int t nch
- MHA\_AC::int\_t ntracks

```
5.339.1 Constructor & Destructor Documentation
```

5.339.2 Member Function Documentation

```
5.339.2.1 mha_spec_t * cfg_t::process (
mha_spec_t * s )
```

5.339.3 Member Data Documentation

```
5.339.3.1 MHA_AC::spectrum_t shadowfilter_begin::cfg_t::in_spec_copy [private]
```

**5.339.3.2** MHASignal::spectrum\_t shadowfilter\_begin::cfg\_t::out\_spec [private]

```
5.339.3.3 MHA_AC::int_t shadowfilter_begin::cfg_t::nch [private]
```


**5.339.3.4** MHA\_AC::int\_t shadowfilter\_begin::cfg\_t::ntracks [private]

The documentation for this class was generated from the following file:

# shadowfilter\_begin.cpp

# 5.340 shadowfilter\_begin::shadowfilter\_begin\_t Class Reference

Inheritance diagram for shadowfilter\_begin::shadowfilter\_begin\_t:

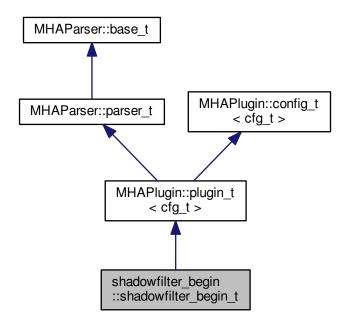

## **Public Member Functions**

- shadowfilter\_begin\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)

### **Private Attributes**

- std::string basename
- MHAParser::int\_t nch
- MHAParser::int\_t ntracks

### **Additional Inherited Members**

### 5.340.1 Constructor & Destructor Documentation

The documentation for this class was generated from the following file:

shadowfilter\_begin.cpp

5.341 shadowfilter\_end::cfg\_t Class Reference

**Public Member Functions** 

- cfg\_t (int nfft\_, algo\_comm\_t ac\_, std::string name\_)
- mha\_spec\_t \* process (mha\_spec\_t \*)

#### **Private Attributes**

- algo\_comm\_t ac
- std::string name
- int **nfft**
- int ntracks
- int nch\_out
- mha\_spec\_t in\_spec
- MHASignal::spectrum\_t out\_spec
- MHA\_AC::spectrum\_t gains

```
5.341.1 Constructor & Destructor Documentation
```

5.341.3 Member Data Documentation

```
5.341.3.1 algo_comm_t shadowfilter_end::cfg_t::ac [private]
```

**5.341.3.2** std::string shadowfilter\_end::cfg\_t::name [private]

**5.341.3.3** int shadowfilter\_end::cfg\_t::nfft [private]

**5.341.3.4** int shadowfilter\_end::cfg\_t::ntracks [private]

**5.341.3.5** int shadowfilter\_end::cfg\_t::nch\_out [private]

**5.341.3.6 mha\_spec\_t shadowfilter\_end::cfg\_t::in\_spec** [private]

**5.341.3.7** MHASignal::spectrum t shadowfilter\_end::cfg\_t::out\_spec [private]


**5.341.3.8** MHA\_AC::spectrum\_t shadowfilter\_end::cfg\_t::gains [private]

The documentation for this class was generated from the following file:

shadowfilter\_end.cpp

# 5.342 shadowfilter\_end::shadowfilter\_end\_t Class Reference

Inheritance diagram for shadowfilter\_end::shadowfilter\_end\_t:

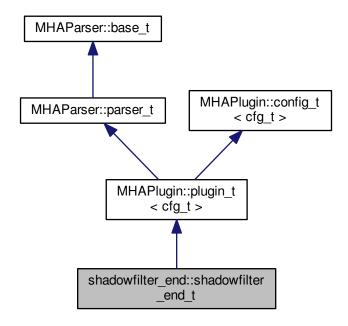

## **Public Member Functions**

- shadowfilter\_end\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_spec\_t \* process (mha\_spec\_t \*)
- void prepare (mhaconfig\_t &)

## **Private Attributes**

MHAParser::string\_t basename

# **Additional Inherited Members**

### 5.342.1 Constructor & Destructor Documentation

```
5.342.2 Member Function Documentation
```

```
Implements MHAPlugin::plugin_t < cfg_t > (p. 692).
```

5.342.3 Member Data Documentation

```
5.342.3.1 MHAParser::string_t shadowfilter_end::shadowfilter_end_t::basename [private]
```

The documentation for this class was generated from the following file:

shadowfilter\_end.cpp

5.343 sine\_cfg\_t Struct Reference

**Public Member Functions** 

• sine\_cfg\_t (double sampling\_rate, mha\_real\_t frequency, mha\_real\_t newlev, int \_mix, const std::vector< int > &\_channels)

## **Public Attributes**

- double phase\_increment\_div\_2pi
- · double amplitude
- int mix
- const std::vector< int > channels

### 5.343.1 Constructor & Destructor Documentation

#### 5.343.2 Member Data Documentation


- 5.343.2.1 double sine\_cfg\_t::phase\_increment\_div\_2pi
- 5.343.2.2 double sine\_cfg\_t::amplitude
- 5.343.2.3 int sine\_cfg\_t::mix
- 5.343.2.4 const std::vector<int> sine\_cfg\_t::channels

The documentation for this struct was generated from the following file:

## sine.cpp

# 5.344 sine\_t Class Reference

Inheritance diagram for sine\_t:

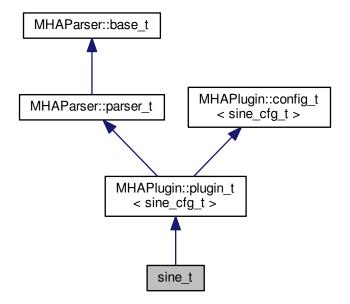

### **Public Member Functions**

```
    sine_t (const algo_comm_t &, const std::string &chain_name, const std::string &algo← _name)
```

- ~sine\_t ()
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)

#### **Private Member Functions**

void update\_cfg ()

#### **Private Attributes**

- MHAParser::float t lev
- MHAParser::float\_t frequency
- MHAParser::kw\_t mode
- MHAParser::vint\_t channels
- double phase\_div\_2pi
- MHAEvents::patchbay\_t< sine\_t > patchbay

## **Additional Inherited Members**

```
5.344.1 Constructor & Destructor Documentation
```

Implements MHAPlugin::plugin\_t <  $sine_cfg_t > (p. 692)$ .

```
5.344.2.3 void sine_t::update_cfg() [private]
5.344.3 Member Data Documentation
5.344.3.1 MHAParser::float_t sine_t::lev [private]
5.344.3.2 MHAParser::float_t sine_t::frequency [private]
5.344.3.3 MHAParser::kw_t sine_t::mode [private]
5.344.3.4 MHAParser::vint_t sine_t::channels [private]
5.344.3.5 double sine_t::phase_div_2pi [private]
```


**5.344.3.6** MHAEvents::patchbay\_t<sine\_t> sine\_t::patchbay [private]

The documentation for this class was generated from the following file:

# sine.cpp

# 5.345 smoothgains\_bridge::overlapadd\_if\_t Class Reference

Inheritance diagram for smoothgains\_bridge::overlapadd\_if\_t:

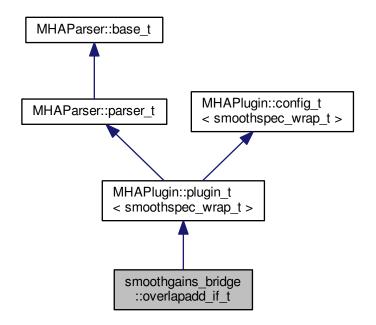

### **Public Member Functions**

```
• overlapadd_if_t (const algo_comm_t &, const std::string &, const std::string &)
```

- ∼overlapadd\_if\_t ()
- void prepare (mhaconfig\_t &)
- void release ()
- mha spec t \* process (mha spec t \*)

#### **Private Member Functions**

· void update ()

#### **Private Attributes**

- MHAEvents::patchbay\_t< overlapadd\_if\_t > patchbay
- MHAParser::kw t mode
- MHAParser::window\_t irswnd
- MHAParser::float\_t epsilon
- MHAParser::mhapluginloader\_t plugloader
- std::string algo
- mhaconfig\_t cf\_in
- mhaconfig\_t cf\_out

#### **Additional Inherited Members**

```
5.345.1 Constructor & Destructor Documentation
```

- 5.345.1.2 smoothgains\_bridge::overlapadd\_if\_t::~overlapadd\_if\_t ( )
- 5.345.2 Member Function Documentation

Implements MHAPlugin::plugin\_t < smoothspec\_wrap\_t > (p. 692).

5.345.2.2 void smoothgains\_bridge::overlapadd\_if\_t::release ( void ) [virtual]

Reimplemented from MHAPlugin::plugin\_t< smoothspec\_wrap\_t > (p. 693).

## 5.346 smoothgains\_bridge::smoothspec\_wrap\_t Class Reference77

The documentation for this class was generated from the following file:

**5.345.3.8 mhaconfig t smoothgains\_bridge::overlapadd\_if\_t::cf\_out** [private]

- smoothgains\_bridge.cpp
- 5.346 smoothgains\_bridge::smoothspec\_wrap\_t Class Reference

**Public Member Functions** 

- smoothspec\_wrap\_t (mhaconfig\_t spar\_in, mhaconfig\_t spar\_out, const MHA←
   Parser::kw\_t &mode, const MHAParser::window\_t &irswnd, const MHAParser::float←
   t &epsilon)
- mha\_spec\_t \* proc\_1 (mha\_spec\_t \*)
- mha\_spec\_t \* proc\_2 (mha\_spec\_t \*)

#### **Private Attributes**

- MHASignal::spectrum\_t spec\_in\_copy

  Copy of input spectrum for smoothspec.
- MHAFilter::smoothspec\_t smoothspec Smoothspec calculator.
- bool use\_smoothspec
- float smoothspec\_epsilon


```
5.346.1 Constructor & Destructor Documentation
5.346.1.1 smoothgains_bridge::smoothspec_wrap_t::smoothspec_wrap_t (
                     mhaconfig t spar in,
                     mhaconfig_t spar_out,
                     const MHAParser::kw t & mode,
                     const MHAParser::window_t & irswnd,
                     const MHAParser::float t & epsilon )
5.346.2 Member Function Documentation
5.346.2.1 mha_spec_t * smoothgains_bridge::smoothspec_wrap_t::proc_1 (
                     mha spec t * s)
5.346.2.2 mha spec t * smoothgains_bridge::smoothspec_wrap_t::proc_2 (
                     mha spec t * s)
5.346.3 Member Data Documentation
5.346.3.1 MHASignal::spectrum_t smoothgains_bridge::smoothspec_wrap_t::spec_in_copy
         [private]
Copy of input spectrum for smoothspec.
5.346.3.2 MHAFilter::smoothspec_t smoothgains_bridge::smoothspec_wrap_t::smoothspec
         [private]
Smoothspec calculator.
5.346.3.3 bool smoothgains_bridge::smoothspec_wrap_t::use_smoothspec [private]
5.346.3.4 float smoothgains_bridge::smoothspec_wrap_t::smoothspec_epsilon [private]
```

smoothgains\_bridge.cpp

The documentation for this class was generated from the following file:

# 5.347 softclip\_t Class Reference

Inheritance diagram for softclip\_t:

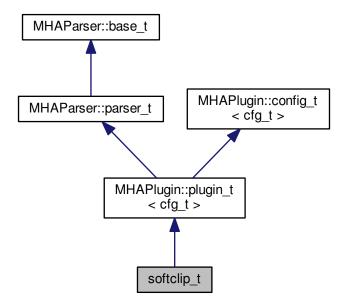

### **Public Member Functions**

- softclip\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- mha\_wave\_t \* process (mha\_wave\_t \*)
- void prepare (mhaconfig\_t &)
- void update ()

# **Private Attributes**

- mhaconfig\_t tftype
- MHAParser::float\_t attack
- MHAParser::float\_t decay
- MHAParser::float\_t start\_limit
- MHAParser::float\_t slope\_db
- MHAEvents::patchbay\_t< softclip\_t > patchbay

**Additional Inherited Members** 

```
5.347.1 Constructor & Destructor Documentation
5.347.1.1 softclip_t::softclip_t (
                      const algo comm t & iac,
                      const std::string & chain,
                      const std::string & name )
5.347.2 Member Function Documentation
5.347.2.1 mha_wave_t * softclip_t::process (
                      mha_wave_t * s )
5.347.2.2 void softclip_t::prepare (
                      mhaconfig_t & tf ) [virtual]
Implements MHAPlugin::plugin t < cfg t > (p. 692).
5.347.2.3 void softclip_t::update()
5.347.3 Member Data Documentation
5.347.3.1
         mhaconfig t softclip_t::tftype [private]
5.347.3.2 MHAParser::float_t softclip_t::attack [private]
5.347.3.3 MHAParser::float_t softclip_t::decay [private]
5.347.3.4 MHAParser::float_t softclip_t::start_limit [private]
5.347.3.5 MHAParser::float_t softclip_t::slope_db [private]
5.347.3.6 MHAEvents::patchbay_t<softclip_t> softclip_t::patchbay [private]
```

The documentation for this class was generated from the following file:

softclip.cpp

5.348 softclipper\_t Class Reference

**Public Member Functions** 

- softclipper\_t (const softclipper\_variables\_t &v, const mhaconfig\_t &)
- mha\_real\_t process (mha\_wave\_t \*)

### **Private Attributes**

```
    MHAFilter::o1flt_lowpass_t attack
```

- MHAFilter::o1flt\_maxtrack\_t decay
- MHAFilter::o1flt lowpass t clipmeter
- mha\_real\_t threshold
- · mha real t hardlimit
- mha\_real\_t slope
- bool linear

```
5.348.1 Constructor & Destructor Documentation
```

5.348.2 Member Function Documentation

5.348.3 Member Data Documentation

```
5.348.3.1 MHAFilter::o1flt_lowpass_t softclipper_t::attack [private]
```

**5.348.3.2** MHAFilter::o1flt\_maxtrack\_t softclipper\_t::decay [private]

**5.348.3.3** MHAFilter::o1flt\_lowpass\_t softclipper\_t::clipmeter [private]

**5.348.3.4 mha real t softclipper t::threshold** [private]

**5.348.3.5 mha\_real\_t softclipper\_t::hardlimit** [private]

**5.348.3.6 mha\_real\_t softclipper\_t::slope** [private]


**5.348.3.7** bool softclipper\_t::linear [private]

The documentation for this class was generated from the following file:

## · transducers.cpp

# 5.349 softclipper\_variables\_t Class Reference

Inheritance diagram for softclipper\_variables\_t:

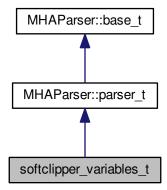

#### **Public Member Functions**

softclipper\_variables\_t ()

## **Public Attributes**

- MHAParser::float t tau attack
- MHAParser::float\_t tau\_decay
- · MHAParser::float t tau clip
- MHAParser::float\_t threshold
- MHAParser::float\_t hardlimit
- MHAParser::float\_t slope
- MHAParser::bool\_t linear
- MHAParser::float\_mon\_t clipped
- MHAParser::float\_t max\_clipped

## **Additional Inherited Members**

- 5.349.1 Constructor & Destructor Documentation
- 5.349.1.1 softclipper\_variables\_t::softclipper\_variables\_t()
- 5.349.2 Member Data Documentation


5.349.2.1 MHAParser::float\_t softclipper\_variables\_t::tau\_attack
5.349.2.2 MHAParser::float\_t softclipper\_variables\_t::tau\_decay
5.349.2.3 MHAParser::float\_t softclipper\_variables\_t::tau\_clip
5.349.2.4 MHAParser::float\_t softclipper\_variables\_t::threshold
5.349.2.5 MHAParser::float\_t softclipper\_variables\_t::hardlimit
5.349.2.6 MHAParser::float\_t softclipper\_variables\_t::slope
5.349.2.7 MHAParser::bool\_t softclipper\_variables\_t::linear
5.349.2.8 MHAParser::float\_mon\_t softclipper\_variables\_t::clipped
5.349.2.9 MHAParser::float\_t softclipper\_variables\_t::max\_clipped

The documentation for this class was generated from the following file:

## transducers.cpp

# 5.350 spec2wave\_if\_t Class Reference

Inheritance diagram for spec2wave\_if\_t:

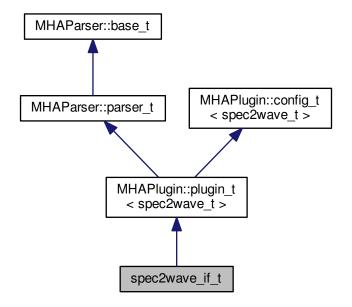

### **Public Member Functions**

- spec2wave\_if\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- void prepare (mhaconfig\_t &)
- mha\_wave\_t \* process (mha\_spec\_t \*)

### **Private Member Functions**

• void update ()

#### **Private Attributes**

- MHAEvents::patchbay\_t< spec2wave\_if\_t > patchbay
- MHAParser::float t ramplen
- · windowselector\_t window\_config

#### **Additional Inherited Members**

```
5.350.1 Constructor & Destructor Documentation
5.350.1.1 spec2wave_if_t::spec2wave_if_t (
                     const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & )
5.350.2 Member Function Documentation
5.350.2.1
         void spec2wave_if_t::prepare (
                     mhaconfig t&t) [virtual]
Implements MHAPlugin::plugin_t< spec2wave_t > (p. 692).
5.350.2.2 mha wave t * spec2wave_if_t::process (
                     mha_spec_t * spec_in )
5.350.2.3 void spec2wave_if_t::update( ) [private]
5.350.3 Member Data Documentation
5.350.3.1
         MHAEvents::patchbay_t<spec2wave_if_t> spec2wave_if_t::patchbay [private]
5.350.3.2 MHAParser::float_t spec2wave_if_t::ramplen [private]
5.350.3.3 windowselector_t spec2wave_if_t::window_config [private]
```

The documentation for this class was generated from the following file:

spec2wave.cpp

# 5.351 spec2wave\_t Class Reference

#### **Public Member Functions**

- **spec2wave\_t** (unsigned int nfft\_, unsigned int nwnd\_, unsigned int nwndshift\_, unsigned int nch, **mha\_real\_t** ramplen, const **MHAWindow::base\_t** &postwin)
- ∼spec2wave t()
- mha\_wave\_t \* process (mha\_spec\_t \*)

### **Private Attributes**

· mha fft t ft

FFT class.

unsigned int npad1

length of zero padding before window

• unsigned int npad2

length of zero padding after window

- hanning\_ramps\_t ramps
- MHASignal::waveform\_t calc\_out
- MHASignal::waveform t out buf
- MHASignal::waveform\_t write\_buf
- mha\_real\_t sc
- · unsigned int nfft
- unsigned int nwndshift
- MHAWindow::base\_t postwindow

```
5.351.1 Constructor & Destructor Documentation
```

```
5.351.2 Member Function Documentation
```

5.351.3 Member Data Documentation

**5.351.3.1 mha\_fft\_t spec2wave\_t::ft** [private]

FFT class.

```
length of zero padding before window

5.351.3.3 unsigned int spec2wave_t::npad2 [private]

length of zero padding after window

5.351.3.4 hanning_ramps_t spec2wave_t::ramps [private]

5.351.3.5 MHASignal::waveform_t spec2wave_t::calc_out [private]

5.351.3.6 MHASignal::waveform_t spec2wave_t::out_buf [private]

5.351.3.7 MHASignal::waveform_t spec2wave_t::write_buf [private]

5.351.3.8 mha_real_t spec2wave_t::sc [private]

5.351.3.9 unsigned int spec2wave_t::nfft [private]

5.351.3.10 unsigned int spec2wave_t::nwndshift [private]
```

The documentation for this class was generated from the following file:

**5.351.3.11 MHAWindow::base\_t spec2wave\_t::postwindow** [private]

spec2wave.cpp

5.352 spec\_fader\_t Class Reference

**Public Member Functions** 

- spec\_fader\_t (unsigned int ch, mha\_real\_t fr, MHAParser::vfloat\_t &ng, MHAParser ← ::float\_t &t)
- $\sim$ spec\_fader\_t ()

## **Public Attributes**

- unsigned int nch
- mha\_real\_t \* gains
- · unsigned int fr

## 5.352.1 Constructor & Destructor Documentation


- 5.352.1.2 spec\_fader\_t::~spec\_fader\_t() [inline]
- 5.352.2 Member Data Documentation
- 5.352.2.1 unsigned int spec\_fader\_t::nch
- 5.352.2.2 mha\_real\_t\* spec\_fader\_t::gains
- 5.352.2.3 unsigned int spec\_fader\_t::fr

The documentation for this class was generated from the following file:

# · fader\_spec.cpp

# 5.353 speechnoise\_t Class Reference

Inheritance diagram for speechnoise\_t:

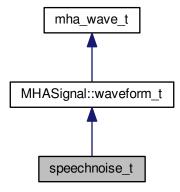

## **Public Types**

## **Public Member Functions**

speechnoise\_t (float duration, float srate, unsigned int channels, speechnoise\_t
 ::noise\_type\_t noise\_type=speechnoise\_t::mha)

 speechnoise\_t (unsigned int length\_samples, float srate, unsigned int channels, speechnoise\_t::noise\_type\_t noise\_type=speechnoise\_t::mha)

### **Private Member Functions**

• void **creator** (**speechnoise\_t::noise\_type\_t** noise\_type, float srate)

### **Additional Inherited Members**

```
5.353.1 Member Enumeration Documentation
```

```
5.353.1.1 enum speechnoise_t::noise_type_t
```

### **Enumerator**

mha

olnoise

LTASS\_combined

LTASS\_female

LTASS\_male

white

pink

brown

TEN SPL

TEN\_SPL\_250\_8k

TEN\_SPL\_50\_16k

sin125

sin250

sin500

sin1k

sin2k

sin4k

sin8k


### 5.353.2 Constructor & Destructor Documentation

The documentation for this class was generated from the following files:

- · speechnoise.h
- · speechnoise.cpp

## 5.354 steerbf Class Reference

Inheritance diagram for steerbf:

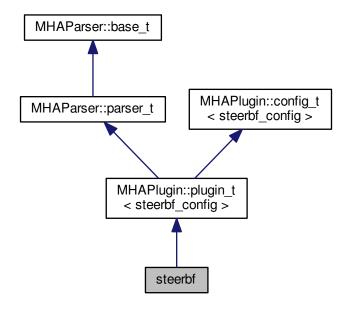

### **Public Member Functions**

steerbf (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_←
name)

Constructs our plugin.

- ∼steerbf ()
- mha\_spec\_t \* process (mha\_spec\_t \*)

Defers to configuration class.

void prepare (mhaconfig\_t &)

Plugin preparation.

• void release (void)

## **Public Attributes**

- MHAParser::string\_t bf\_src
- · parser int dyn angle ind
- MHAParser::string\_t angle\_src

## **Private Member Functions**

void update\_cfg ()

### **Private Attributes**

MHAEvents::patchbay\_t< steerbf > patchbay

### **Additional Inherited Members**

```
5.354.1 Constructor & Destructor Documentation
```

```
5.354.1.1 steerbf::steerbf (

algo_comm_t & ac,

const std::string & chain_name,

const std::string & algo_name )
```

## Constructs our plugin.

```
5.354.1.2 steerbf::∼steerbf ( )
```

5.354.2 Member Function Documentation

```
5.354.2.1 mha_spec_t * steerbf::process (
mha_spec_t * signal )
```

Defers to configuration class.

## Plugin preparation.

An opportunity to validate configuration parameters before instantiating a configuration.

### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of	1
	channels, frames per block, sampling rate.	

Implements MHAPlugin::plugin\_t< steerbf\_config > (p. 692).

Reimplemented from MHAPlugin::plugin\_t < steerbf\_config > (p. 693).

```
5.354.2.4 void steerbf::update_cfg( ) [private]
```

5.354.3 Member Data Documentation

```
5.354.3.1 MHAParser::string_t steerbf::bf_src
```

```
5.354.3.2 parser_int_dyn steerbf::angle_ind
```

5.354.3.3 MHAParser::string\_t steerbf::angle\_src

**5.354.3.4** MHAEvents::patchbay\_t<steerbf> steerbf::patchbay [private]

The documentation for this class was generated from the following files:

- · steerbf.h
- steerbf.cpp

## 5.355 steerbf\_config Class Reference

**Public Member Functions** 

- steerbf\_config (algo\_comm\_t &ac, const mhaconfig\_t in\_cfg, steerbf) \*steerbf)
- ~steerbf\_config ()
- mha\_spec\_t \* process (mha\_spec\_t \*)

### **Private Attributes**

- unsigned int nchan
- unsigned int nfreq
- MHASignal::spectrum t outSpec
- mha\_spec\_t bf\_vec
- unsigned int nangle
- steerbf \* \_steerbf
- algo\_comm\_t & ac
- std::string bf\_src\_copy

```
5.355.1 Constructor & Destructor Documentation
5.355.1.1 steerbf_config::steerbf_config (
                      algo_comm_t & ac,
                      const mhaconfig t in_cfg,
                      steerbf * steerbf )
5.355.1.2 steerbf_config::~steerbf_config()
5.355.2 Member Function Documentation
5.355.2.1 mha_spec_t * steerbf_config::process (
                      mha_spec_t * inSpec )
5.355.3 Member Data Documentation
5.355.3.1
         unsigned int steerbf_config::nchan [private]
5.355.3.2
         unsigned int steerbf_config::nfreq [private]
5.355.3.3 MHASignal::spectrum_t steerbf_config::outSpec [private]
5.355.3.4 mha_spec_t steerbf_config::bf_vec [private]
5.355.3.5 unsigned int steerbf_config::nangle [private]
5.355.3.6 steerbf* steerbf_config::_steerbf [private]
5.355.3.7 algo_comm_t& steerbf_config::ac [private]
         std::string steerbf_config::bf_src_copy [private]
```

The documentation for this class was generated from the following files:

- · steerbf.h
- steerbf.cpp

## 5.356 timo\_AC Class Reference

**Public Member Functions** 

- timo\_AC (algo\_comm\_t &ac, unsigned int fftlen, unsigned int nfreq, unsigned int nchan)
- void copy ()
- void insert ()

#### **Public Attributes**

```
    MHA_AC::waveform_t gamma_post_AC

    MHA AC::waveform t xi ml AC

    MHA_AC::spectrum_t lambda_ml_AC

    MHA AC::spectrum t lambda ml ceps AC

    MHA AC::waveform t lambda ml smooth AC

    MHA_AC::waveform_t max_q_AC

    MHA AC::waveform t max val AC

    MHA AC::waveform t pitch set first AC

    MHA_AC::waveform_t pitch_set_last_AC

    MHA_AC::waveform_t alpha_hat_AC

    MHA AC::waveform t alpha frame AC

    MHA AC::spectrum t lambda ceps AC

    MHA_AC::spectrum_t log_lambda_spec_AC

    MHA_AC::waveform_t lambda_spec_AC

    MHA_AC::waveform_t xi_est_AC

    MHA_AC::waveform_t gain_wiener_AC

    MHA_AC::waveform_t winF0_AC

    MHA AC::waveform t SPP

5.356.1 Constructor & Destructor Documentation
5.356.1.1 timo_AC::timo_AC (
                    algo_comm_t & ac,
                    unsigned int fftlen,
                    unsigned int nfreq,
                    unsigned int nchan ) [inline]
5.356.2 Member Function Documentation
5.356.2.1 void timo_AC::copy ( )
5.356.2.2 void timo_AC::insert ( )
5.356.3 Member Data Documentation
5.356.3.1 MHA_AC::waveform_t timo_AC::gamma_post_AC
5.356.3.2 MHA_AC::waveform_t timo_AC::xi_ml_AC
5.356.3.3 MHA_AC::spectrum_t timo_AC::lambda_ml_AC
```

5.356.3.4 MHA\_AC::spectrum\_t timo\_AC::lambda\_ml\_ceps\_AC

5.356.3.5	MHA_AC::waveform_t timo_AC::lambda_ml_smooth_AC
5.356.3.6	MHA_AC::waveform_t timo_AC::max_q_AC
5.356.3.7	MHA_AC::waveform_t timo_AC::max_val_AC
5.356.3.8	MHA_AC::waveform_t timo_AC::pitch_set_first_AC
5.356.3.9	MHA_AC::waveform_t timo_AC::pitch_set_last_AC
5.356.3.10	MHA_AC::waveform_t timo_AC::alpha_hat_AC
5.356.3.11	MHA_AC::waveform_t timo_AC::alpha_frame_AC
5.356.3.12	MHA_AC::spectrum_t timo_AC::lambda_ceps_AC
5.356.3.13	MHA_AC::spectrum_t timo_AC::log_lambda_spec_AC
5.356.3.14	MHA_AC::waveform_t timo_AC::lambda_spec_AC
5.356.3.15	MHA_AC::waveform_t timo_AC::xi_est_AC
5.356.3.16	MHA_AC::waveform_t timo_AC::gain_wiener_AC
5.356.3.17	MHA_AC::waveform_t timo_AC::winF0_AC
5.356.3.18	MHA_AC::waveform_t timo_AC::SPP

The documentation for this class was generated from the following files:

- · timoconfig.h
- · timoconfig.cpp

# 5.357 timo\_params Class Reference

### **Public Member Functions**

timo\_params (const mhaconfig\_t &\_in\_cfg, float \_xi\_min\_db, float \_f0\_low, float \_f0\_ ← high, float \_delta\_pitch, float \_lambda\_thresh, float \_alpha\_pitch, float \_beta\_const, float \_kappa\_const, float \_prior\_q, float \_xi\_opt\_db, float \_gain\_min\_db, std::vector< float > &\_winF0, std::vector< float > &\_alpha\_const\_vals, std::vector< float > &\_alpha\_const ← \_limits\_hz, std::string &\_noisePow\_name)

## **Public Attributes**

- · const mhaconfig\_t in\_cfg
- float xi\_min\_db
- float f0\_low
- · float f0 high
- · float delta pitch
- float lambda\_thresh
- float alpha\_pitch
- float beta\_const
- float kappa\_const
- float prior\_q
- float xi\_opt\_db
- float gain\_min\_db
- std::vector< float > winF0
- std::vector< float > alpha\_const\_vals
- std::vector< float > alpha\_const\_limits\_hz
- std::string noisePow\_name

## 5.357.1 Constructor & Destructor Documentation

```
5.357.1.1 timo_params::timo_params (
                        const mhaconfig_t & _in_cfg,
                        float _xi_min_db,
                        float _f0_low,
                        float _f0_high,
                        float _delta_pitch,
                        float _lambda_thresh,
                        float _alpha_pitch,
                        float _beta_const,
                        float _kappa_const,
                        float _prior_q,
                        float _xi_opt_db,
                        float _gain_min_db,
                        std::vector< float > & _winF0,
                        std::vector< float > & _alpha_const_vals,
                        std::vector< float > & _alpha_const_limits_hz,
                        std::string & _noisePow_name ) [inline]
```

## 5.357.2 Member Data Documentation

- 5.357.2.1 const mhaconfig\_t timo\_params::in\_cfg
- 5.357.2.2 float timo\_params::xi\_min\_db
- 5.357.2.3 float timo\_params::f0\_low

```
5.357.2.4 float timo_params::f0_high

5.357.2.5 float timo_params::delta_pitch

5.357.2.6 float timo_params::lambda_thresh

5.357.2.7 float timo_params::alpha_pitch

5.357.2.8 float timo_params::beta_const

5.357.2.9 float timo_params::kappa_const

5.357.2.10 float timo_params::prior_q

5.357.2.11 float timo_params::xi_opt_db

5.357.2.12 float timo_params::gain_min_db

5.357.2.13 std::vector<float> timo_params::winF0

5.357.2.14 std::vector<float> timo_params::alpha_const_vals

5.357.2.15 std::vector<float> timo_params::alpha_const_limits_hz

5.357.2.16 std::string timo_params::noisePow_name
```

The documentation for this class was generated from the following file:

# · timoconfig.h

## 5.358 timoConfig Class Reference

**Public Member Functions** 

- timoConfig (algo\_comm\_t &ac, timo\_params &params)
- ∼timoConfig ()
- mha\_spec\_t \* process (mha\_spec\_t \*)

## **Private Member Functions**

void copy\_AC (timo\_AC &tAC)

### **Private Attributes**

- algo\_comm\_t ac
- timo\_params params
- unsigned int fftlen
- mha\_fft\_t mha\_fft
- unsigned int nfreq
- unsigned int nchan
- · timo AC tAC
- float ola\_powspec\_scale
- float q low
- float q\_high
- MHASignal::waveform t winF0
- · float xi min
- float gain\_min
- MHASignal::waveform\_t alpha\_const
- MHASignal::waveform\_t alpha\_prev
- MHASignal::waveform\_t noisePow
- MHASignal::waveform\_t powSpec
- MHASignal::waveform\_t gamma\_post
- MHASignal::waveform\_t xi\_ml
- MHASignal::spectrum\_t lambda\_ml\_full
- MHASignal::spectrum\_t lambda\_ml\_ceps
- MHASignal::waveform\_t lambda\_ml\_smooth
- MHASignal::waveform\_t alpha\_hat
- MHASignal::waveform t alpha frame
- MHASignal::spectrum\_t lambda\_ceps
- MHASignal::waveform t lambda ceps prev
- MHASignal::spectrum\_t log\_lambda\_spec
- MHASignal::waveform t lambda spec
- MHASignal::waveform\_t xi\_est
- MHASignal::waveform\_t gain\_wiener
- MHASignal::spectrum\_t spec\_out
- double \* max val
- int \* max\_q
- int \* pitch\_set\_first
- int \* pitch set last
- float priorFact
- float xiOpt
- float logGLRFact
- float GLRexp
- MHASignal::waveform\_t GLR

```
5.358.1 Constructor & Destructor Documentation
5.358.1.1
         timoConfig::timoConfig (
                     algo comm t & ac,
                     timo params & params )
5.358.1.2 timoConfig::~timoConfig()
5.358.2 Member Function Documentation
5.358.2.1
         mha spec t * timoConfig::process (
                     mha_spec_t * noisyFrame )
5.358.2.2 void timoConfig::copy_AC (
                     timo_AC & tAC ) [private]
5.358.3 Member Data Documentation
5.358.3.1
         algo comm t timoConfig::ac [private]
5.358.3.2
         timo_params timoConfig::params [private]
5.358.3.3
         unsigned int timoConfig::fftlen [private]
5.358.3.4
         mha_fft_t timoConfig::mha_fft [private]
5.358.3.5
         unsigned int timoConfig::nfreq [private]
5.358.3.6
         unsigned int timoConfig::nchan [private]
         timo AC timoConfig::tAC [private]
5.358.3.7
5.358.3.8
         float timoConfig::ola_powspec_scale [private]
         float timoConfig::q_low [private]
5.358.3.9
5.358.3.10 float timoConfig::q_high [private]
5.358.3.11 MHASignal::waveform_t timoConfig::winF0 [private]
5.358.3.12 float timoConfig::xi_min [private]
5.358.3.13 float timoConfig::gain_min [private]
```


```
5.358.3.14
          MHASignal::waveform_t timoConfig::alpha_const [private]
5.358.3.15 MHASignal::waveform_t timoConfig::alpha_prev [private]
5.358.3.16 MHASignal::waveform t timoConfig::noisePow [private]
5.358.3.17 MHASignal::waveform_t timoConfig::powSpec [private]
5.358.3.18 MHASignal::waveform_t timoConfig::gamma_post [private]
5.358.3.19 MHASignal::waveform_t timoConfig::xi_ml [private]
5.358.3.20 MHASignal::spectrum_t timoConfig::lambda_ml_full [private]
5.358.3.21 MHASignal::spectrum_t timoConfig::lambda_ml_ceps [private]
5.358.3.22 MHASignal::waveform_t timoConfig::lambda_ml_smooth [private]
5.358.3.23 MHASignal::waveform t timoConfig::alpha_hat [private]
5.358.3.24 MHASignal::waveform_t timoConfig::alpha_frame [private]
5.358.3.25
         MHASignal::spectrum_t timoConfig::lambda_ceps [private]
5.358.3.26 MHASignal::waveform_t timoConfig::lambda_ceps_prev [private]
5.358.3.27 MHASignal::spectrum_t timoConfig::log_lambda_spec [private]
5.358.3.28 MHASignal::waveform_t timoConfig::lambda_spec [private]
5.358.3.29 MHASignal::waveform_t timoConfig::xi_est [private]
5.358.3.30 MHASignal::waveform_t timoConfig::gain_wiener [private]
5.358.3.31 MHASignal::spectrum_t timoConfig::spec_out [private]
5.358.3.32 double* timoConfig::max_val [private]
5.358.3.33 int* timoConfig::max_q [private]
5.358.3.34 int* timoConfig::pitch_set_first [private]
5.358.3.35 int* timoConfig::pitch set last [private]
5.358.3.36 float timoConfig::priorFact [private]
5.358.3.37 float timoConfig::xiOpt [private]
5.358.3.38 float timoConfig::logGLRFact [private]
5.358.3.39 float timoConfig::GLRexp [private]
5.358.3.40 MHASignal::waveform_t timoConfig::GLR [private]
```

The documentation for this class was generated from the following files:

- · timoconfig.h
- timoconfig.cpp

## 5.359 timoSmooth Class Reference

Inheritance diagram for timoSmooth:

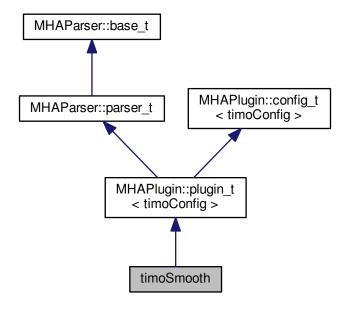

### **Public Member Functions**

• timoSmooth (algo\_comm\_t &ac, const std::string &chain\_name, const std::string &algo\_name)

Constructs the beamforming plugin.

- ∼timoSmooth ()
- mha\_spec\_t \* process (mha\_spec\_t \*)

This plugin implements noise reduction using spectral subtraction: by nonnegative subtraction from the output magnitude of the estimated noise magnitude spectrum.

void prepare (mhaconfig\_t &)

Plugin preparation.

void release (void)

### **Private Member Functions**

- void update\_cfg ()
- void on\_model\_param\_valuechanged ()

### **Private Attributes**

 MHAParser::float t xi min db MHAParser::float\_t f0\_low MHAParser::float\_t f0\_high MHAParser::float t delta pitch MHAParser::float\_t lambda\_thresh MHAParser::float t alpha pitch MHAParser::float t beta const MHAParser::float\_t kappa\_const MHAParser::float t gain min db MHAParser::vfloat t win f0 MHAParser::vfloat\_t alpha\_const\_vals MHAParser::vfloat t alpha const limits hz MHAParser::string\_t noisePow\_name MHAParser::parser t spp MHAParser::float\_t prior\_q MHAParser::float\_t xi\_opt\_db MHAEvents::patchbay\_t< timoSmooth > patchbay bool prepared **Additional Inherited Members** 5.359.1 Constructor & Destructor Documentation

algo\_comm\_t & ac,

const std::string & chain\_name, const std::string & algo\_name)

```
Constructs the beamforming plugin.
```

5.359.1.1 timoSmooth::timoSmooth (

```
5.359.1.2 timoSmooth::~timoSmooth ( )
5.359.2 Member Function Documentation
5.359.2.1 mha_spec_t * timoSmooth::process ( mha_spec_t * signal )
```

This plugin implements noise reduction using spectral subtraction: by nonnegative subtraction from the output magnitude of the estimated noise magnitude spectrum.

## **Parameters**

signal Pointer to the input signal structure.

### **Returns**

Returns a pointer to the input signal structure, with a the signal modified by this plugin.

Plugin preparation.

This plugin checks that the input signal has the spectral domain and contains at least one channel

#### **Parameters**

signal_info	Structure containing a description of the form of the signal (domain, number of	
	channels, frames per block, sampling rate.	

```
Implements MHAPlugin::plugin_t < timoConfig > (p. 692).
```

Reimplemented from MHAPlugin::plugin\_t< timoConfig > (p. 693).

- **5.359.2.5 void timoSmooth::on\_model\_param\_valuechanged( )** [private]
- 5.359.3 Member Data Documentation

```
5.359.3.1 MHAParser::float_t timoSmooth::xi_min_db [private]
```

**5.359.3.2** MHAParser::float\_t timoSmooth::f0\_low [private]

**5.359.3.3** MHAParser::float t timoSmooth::f0\_high [private]

**5.359.3.4** MHAParser::float t timoSmooth::delta\_pitch [private]

**5.359.3.5 MHAParser::float\_t timoSmooth::lambda\_thresh** [private]

**5.359.3.6 MHAParser::float\_t timoSmooth::alpha\_pitch** [private]

**5.359.3.7 MHAParser::float ttimoSmooth::beta\_const** [private]


```
5.359.3.8 MHAParser::float_t timoSmooth::kappa_const [private]
5.359.3.9 MHAParser::float_t timoSmooth::gain_min_db [private]
5.359.3.10 MHAParser::vfloat_t timoSmooth::win_f0 [private]
5.359.3.11 MHAParser::vfloat_t timoSmooth::alpha_const_vals [private]
5.359.3.12 MHAParser::vfloat_t timoSmooth::alpha_const_limits_hz [private]
5.359.3.13 MHAParser::string_t timoSmooth::noisePow_name [private]
5.359.3.14 MHAParser::parser_t timoSmooth::spp [private]
5.359.3.15 MHAParser::float_t timoSmooth::prior_q [private]
5.359.3.16 MHAParser::float_t timoSmooth::xi_opt_db [private]
5.359.3.17 MHAEvents::patchbay_t<timoSmooth>timoSmooth::patchbay [private]
5.359.3.18 bool timoSmooth::prepared [private]
```

The documentation for this class was generated from the following files:

- · timosmooth.h
- · timoSmooth.cpp

## 5.360 us t Class Reference

Inheritance diagram for us\_t:

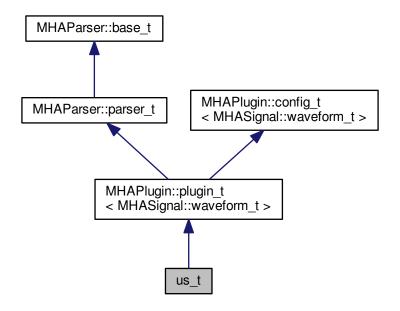

**Public Member Functions** 

```
    us_t (algo_comm_t, std::string, std::string)
    mha_wave_t * process (mha_wave_t *)
    void prepare (mhaconfig_t &)
    void release ()
```

### **Private Attributes**

- MHAParser::int\_t ratio
- MHAFilter::iir\_filter\_t antialias

**Additional Inherited Members** 

5.360.3 Member Data Documentation


```
5.360.3.1 MHAParser::int_t us_t::ratio [private]
5.360.3.2 MHAFilter::iir filter t us_t::antialias [private]
```

The documentation for this class was generated from the following file:

· upsample.cpp

# 5.361 wave2spec\_if\_t Class Reference

Inheritance diagram for wave2spec\_if\_t:

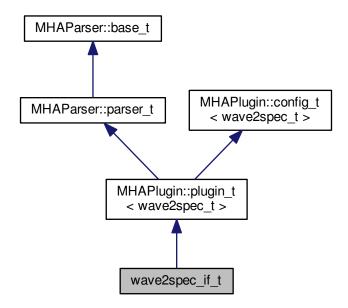

### **Public Member Functions**

- wave2spec\_if\_t (const algo\_comm\_t &, const std::string &, const std::string &)
- void prepare (mhaconfig\_t &)
- void process (mha\_wave\_t \*, mha\_spec\_t \*\*)
- void process (mha\_wave\_t \*, mha\_wave\_t \*\*)

## **Private Member Functions**

• void update ()

# **Private Attributes**

- MHAEvents::patchbay\_t< wave2spec\_if\_t > patchbay
- MHAParser::int\_t nfft
- MHAParser::int\_t nwnd
- MHAParser::float\_t wndpos
- windowselector\_t window\_config
- MHAParser::bool\_t return\_wave
- std::string algo

**Additional Inherited Members** 


```
5.361.1 Constructor & Destructor Documentation
5.361.1.1 wave2spec_if_t::wave2spec_if_t (
                     const algo_comm_t & iac,
                     const std::string & ,
                     const std::string & ialg )
5.361.2 Member Function Documentation
5.361.2.1 void wave2spec_if_t::prepare (
                     mhaconfig_t & t ) [virtual]
Implements MHAPlugin::plugin_t< wave2spec_t > (p. 692).
5.361.2.2 void wave2spec_if_t::process (
                     mha_wave_t * wave_in,
                     mha spec t ** sout )
5.361.2.3 void wave2spec_if_t::process (
                     mha_wave_t * wave_in,
                     mha_wave_t ** sout )
5.361.2.4 void wave2spec_if_t::update( ) [private]
5.361.3 Member Data Documentation
5.361.3.1
         MHAEvents::patchbay t<wave2spec if t> wave2spec if t::patchbay [private]
5.361.3.2 MHAParser::int t wave2spec if t::nfft [private]
5.361.3.3 MHAParser::int t wave2spec_if_t::nwnd [private]
5.361.3.4 MHAParser::float t wave2spec_if_t::wndpos [private]
5.361.3.5 windowselector t wave2spec_if_t::window_config [private]
5.361.3.6 MHAParser::bool_t wave2spec_if_t::return_wave [private]
5.361.3.7 std::string wave2spec_if_t::algo [private]
```

The documentation for this class was generated from the following file:

· wave2spec.cpp

# 5.362 wave2spec\_t Class Reference

Inheritance diagram for wave2spec\_t:

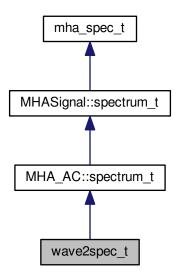

### **Public Member Functions**

- wave2spec\_t (unsigned int nfft, unsigned int nwnd\_, unsigned int nwndshift\_, unsigned int nch, mha\_real\_t wndpos, const MHAWindow::base\_t &window, algo\_comm\_t ac, std::string algo)
- mha\_spec\_t \* process (mha\_wave\_t \*)
- ~wave2spec\_t ()

## **Private Member Functions**

void calc\_pre\_wnd (MHASignal::waveform\_t &, const MHASignal::waveform\_t &)

### **Private Attributes**

- unsigned int nwnd
- · unsigned int nwndshift
- mha\_fft\_t ft

FFT class.

unsigned int npad1

length of zero padding before window

unsigned int npad2

length of zero padding after window

```
    MHAWindow::base_t window
    MHASignal::waveform_t calc_in
    MHASignal::waveform_t in_buf
    MHASignal::spectrum_t spec_in
non-interleaved, complex, fftlen
```

### **Additional Inherited Members**

length of zero padding before window

```
5.362.1 Constructor & Destructor Documentation
5.362.1.1 wave2spec_t::wave2spec_t (
                      unsigned int nfft.
                      unsigned int nwnd_,
                      unsigned int nwndshift_,
                      unsigned int nch,
                      mha real t wndpos,
                      const MHAWindow::base t & window,
                      algo_comm_t ac,
                      std::string algo )
5.362.1.2 wave2spec_t::~wave2spec_t()
5.362.2 Member Function Documentation
5.362.2.1 mha_spec_t * wave2spec_t::process (
                      mha_wave_t * wave_in )
5.362.2.2 void wave2spec_t::calc_pre_wnd (
                      MHASignal::waveform_t & dest,
                      const MHASignal::waveform_t & src ) [private]
5.362.3 Member Data Documentation
5.362.3.1
         unsigned int wave2spec_t::nwnd [private]
5.362.3.2 unsigned int wave2spec_t::nwndshift [private]
5.362.3.3 mha fft t wave2spec_t::ft [private]
FFT class.
5.362.3.4 unsigned int wave2spec_t::npad1 [private]
```

**5.362.3.5** unsigned int wave2spec\_t::npad2 [private]

length of zero padding after window

**5.362.3.6** MHAWindow::base\_t wave2spec\_t::window [private]

**5.362.3.7** MHASignal::waveform\_t wave2spec\_t::calc\_in [private]

**5.362.3.8** MHASignal::waveform\_t wave2spec\_t::in\_buf [private]

**5.362.3.9** MHASignal::spectrum\_t wave2spec\_t::spec\_in [private]


non-interleaved, complex, fftlen

The documentation for this class was generated from the following file:

## wave2spec.cpp

## 5.363 wavrec t Class Reference

Inheritance diagram for wavrec\_t:

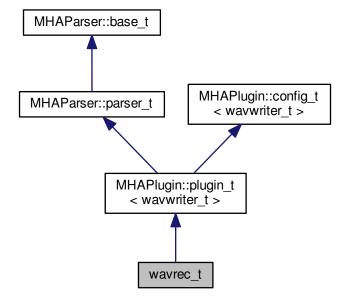

### **Public Member Functions**

```
mha_wave_t * process (mha_wave_t *)
```

- void prepare (mhaconfig\_t &cf)
- void release ()
- wavrec\_t (const algo\_comm\_t &iac, const std::string &, const std::string &)

## **Private Member Functions**

• void start\_new\_session ()

## **Private Attributes**

- MHAParser::bool\_t record
- MHAParser::int\_t fifolen
- MHAParser::int t minwrite
- MHAParser::string\_t prefix
- MHAParser::bool\_t use\_date
- MHAEvents::patchbay\_t< wavrec\_t > patchbay

## **Additional Inherited Members**

```
5.363.1 Constructor & Destructor Documentation
```

5.363.2 Member Function Documentation

Implements MHAPlugin::plugin\_t< wavwriter\_t > (p. 692).

Reimplemented from MHAPlugin::plugin\_t< wavwriter\_t > (p. 693).

mhaconfig\_t & cf ) [virtual]

```
5.363.2.4 void wavrec_t::start_new_session() [private]

5.363.3 Member Data Documentation

5.363.3.1 MHAParser::bool_t wavrec_t::record [private]

5.363.3.2 MHAParser::int_t wavrec_t::fifolen [private]

5.363.3.3 MHAParser::int_t wavrec_t::minwrite [private]

5.363.3.4 MHAParser::string_t wavrec_t::prefix [private]

5.363.3.5 MHAParser::bool_t wavrec_t::use_date [private]

5.363.3.6 MHAEvents::patchbay_t<wavrec_t> wavrec_t::patchbay [private]
```

The documentation for this class was generated from the following file:

## · wavrec.cpp

## 5.364 wavwriter\_t Class Reference

**Public Member Functions** 

- wavwriter\_t (bool active, const mhaconfig\_t &cf, unsigned int fifosize, unsigned int minwrite, const std::string &prefix, bool use\_date)
- ~wavwriter\_t ()
- void process (mha\_wave\_t \*)

**Private Member Functions** 

void write\_thread ()

**Static Private Member Functions** 

static void \* write\_thread (void \*this\_)

### **Private Attributes**

```
• bool close session

    bool act

   · mhaconfig_t cf_
   • SNDFILE * sf
   mha fifo t< mha real t > fifo

    unsigned int minw

    · pthread t writethread
    • float * data
5.364.1 Constructor & Destructor Documentation
5.364.1.1 wavwriter_t::wavwriter_t (
                      bool active.
                      const mhaconfig_t & cf,
                      unsigned int fifosize,
                      unsigned int minwrite,
                      const std::string & prefix,
                      bool use date )
5.364.1.2 wavwriter_t::~wavwriter_t ( )
5.364.2 Member Function Documentation
5.364.2.1 void wavwriter_t::process (
                      mha wave t * s)
5.364.2.2 static void* wavwriter_t::write_thread (
                      void * this_ ) [inline],[static],[private]
5.364.2.3 void wavwriter_t::write_thread() [private]
5.364.3 Member Data Documentation
5.364.3.1
         bool wavwriter t::close session [private]
5.364.3.2 bool wavwriter_t::act_ [private]
5.364.3.3 mhaconfig_t wavwriter_t::cf_ [private]
5.364.3.4 SNDFILE* wavwriter_t::sf [private]
5.364.3.5 mha_fifo_t<mha_real_t> wavwriter_t::fifo [private]
5.364.3.6 unsigned int wavwriter_t::minw_ [private]
5.364.3.7 pthread_t wavwriter_t::writethread [private]
5.364.3.8 float* wavwriter_t::data [private]
```

The documentation for this class was generated from the following file:

· wavrec.cpp

## 5.365 windowselector\_t Class Reference

A combination of mha parser variables to describe an overalapadd analysis window.

#### **Public Member Functions**

- windowselector\_t (const std::string &default\_type)

  constructor creates the mha parser variables that describe an overlapadd analysis window.
- ~windowselector\_t ()

destructor frees window data that were allocated

- const MHAWindow::base\_t & get\_window\_data (unsigned length)
   re-computes the window if required.
- void insert\_items (MHAParser::parser\_t \*p)

insert the window parameters "wndtype", "wndexp", and "userwnd" as mha configuration parameters into the given mha configuration parser.

### **Public Attributes**

MHAEvents::emitter\_t updated

A collector event that fires when any of the window parameters managed here is written to.

## **Private Member Functions**

- void invalidate\_window\_data ()
  - invalidates any allocated window samples.
- void update\_parser ()

invoked when a parser parameter changes.

### **Private Attributes**

MHAWindow::base t \* wnd

Storage for the window data returned by **get\_window\_data()** (p. 914)

MHAParser::kw\_t wndtype

parser variable for window type

MHAParser::float\_t wndexp

parser variable for window exponent

MHAParser::vfloat\_t userwnd

parser variable for user window samples to use

MHAEvents::patchbay\_t< windowselector\_t > patchbay

patchbay to watch for changes for the parser variables

### 5.365.1 Detailed Description

A combination of mha parser variables to describe an overalapadd analysis window.

Provides a method to get the window samples as an instance of **MHAWindow::base\_t** (p. 797) when needed.

```
5.365.2 Constructor & Destructor Documentation
```

constructor creates the mha parser variables that describe an overlapadd analysis window.

#### **Parameters**

default_type	name of the default analysis window type. Must be one of: "rect", "bartlett",	]
	"hanning", "hamming", "blackman"	

```
5.365.2.2 windowselector t::~windowselector t()
```

destructor frees window data that were allocated

5.365.3 Member Function Documentation

```
5.365.3.1 const MHAWindow::base_t & windowselector_t::get_window_data ( unsigned length )
```

re-computes the window if required.

## **Parameters**

```
the desired window length in samples return the window's samples as a constref to MHAWindow::base_t (p. 797) instance. The referenced instance lives until the window parameters are changed, or this windowselector_t (p. 913) instance is destroyed.
```

```
5.365.3.2 void windowselector_t::insert_items (

MHAParser::parser_t * p )
```

insert the window parameters "wndtype", "wndexp", and "userwnd" as mha configuration parameters into the given mha configuration parser.

### **Parameters**

*p* The configuration parser where to insert the window parameters. E.g. the plugin wave2spec's interface class.

**5.365.3.3 void windowselector\_t::invalidate\_window\_data( )** [private]

invalidates any allocated window samples.

**5.365.3.4 void windowselector\_t::update\_parser( )** [private]

invoked when a parser parameter changes.

Calls **invalidate\_window\_data()** (p. 915) and emits the updated event.

5.365.4 Member Data Documentation

5.365.4.1 MHAEvents::emitter\_t windowselector\_t::updated

A collector event that fires when any of the window parameters managed here is written to.

**5.365.4.2 MHAWindow::base\_t**\* windowselector\_t::wnd [private]

Storage for the window data returned by **get\_window\_data()** (p. 914)

**5.365.4.3** MHAParser::kw\_t windowselector\_t::wndtype [private]

parser variable for window type

**5.365.4.4 MHAParser::float twindowselector\_t::wndexp** [private]

parser variable for window exponent

**5.365.4.5** MHAParser::vfloat\_t windowselector\_t::userwnd [private]

parser variable for user window samples to use

**5.365.4.6 MHAE**vents::patchbay\_t<windowselector\_t> windowselector\_t::patchbay [private]

patchbay to watch for changes for the parser variables

The documentation for this class was generated from the following files:

- · windowselector.h
- windowselector.cpp

# 6 File Documentation

## 6.1 ac2lsl.cpp File Reference

### Classes

• class ac2lsl::save\_var\_base\_t

Interface for ac to Isl bridge variable.

class ac2lsl::save\_var\_t< T >

Implementation for all ac to Isl bridges except complex types.

class ac2lsl::save\_var\_t< mha\_complex\_t >

Template specialization of the ac2lsl (p. 77) bridge to take care of complex numbers.

· class ac2lsl::cfg\_t

Runtime configuration class of the ac2lsl (p. 77) plugin.

· class ac2lsl::ac2lsl\_t

Plugin class of ac2lsl (p. 77).

• struct RunOnce

## **Namespaces**

· ac2lsl

All types for the ac2lsI (p. 77) plugins live in this namespace.

## 6.2 ac2osc.cpp File Reference

### Classes

class ac2osc\_t

Plugin class of the ac2osc plugin.

struct RunOnce

## 6.3 ac2wave.cpp File Reference

## Classes

- · class ac2wave t
- class ac2wave\_if\_t

- 6.4 ac\_monitor\_type.cpp File Reference
- 6.5 ac\_monitor\_type.hh File Reference

### Classes

class acmon::ac\_monitor\_t

A class for converting AC variables to Parser monitors of correct type.

## **Namespaces**

acmon

Namespace for displaying ac variables as parser monitors.

6.6 acConcat\_wave.cpp File Reference

### **Macros**

- #define PATCH\_VAR(var) patchbay.connect(&var.valuechanged, this, &acConcat\_←
  wave::update\_cfg)
- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)
- 6.6.1 Macro Definition Documentation
- 6.6.1.1 #define PATCH\_VAR(

  var ) patchbay.connect(&var.valuechanged, this, &acConcat\_wave::update

  \_cfg)
- 6.6.1.2 #define INSERT\_PATCH(

  var ) insert\_member(var); PATCH\_VAR(var)
- 6.7 acConcat wave.h File Reference

#### Classes

- class acConcat\_wave\_config
- class acConcat\_wave
- 6.8 acmon.cpp File Reference

### Classes

· class acmon::acmon\_t

## Namespaces

### acmon

Namespace for displaying ac variables as parser monitors.

6.9 acPooling\_wave.cpp File Reference

## **Macros**

- #define PATCH\_VAR(var) patchbay.connect(&var.valuechanged, this, &acPooling\_
   wave::update\_cfg)
- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)
- 6.9.1 Macro Definition Documentation
- 6.9.1.1 #define PATCH\_VAR(

  var ) patchbay.connect(&var.valuechanged, this, &acPooling\_wave::update

  \_cfg)
- 6.9.1.2 #define INSERT\_PATCH(

  var ) insert member(var); PATCH VAR(var)
- 6.10 acPooling\_wave.h File Reference

#### Classes

- · class acPooling wave config
- class acPooling\_wave
- 6.11 acsave.cpp File Reference

## Classes

- class acsave::save\_var\_t
- class acsave::cfg\_t
- class acsave::acsave t
- struct acsave::mat4head\_t

## **Namespaces**

acsave

#### **Macros**

- #define ACSAVE\_FMT\_TXT 0
- #define ACSAVE SFMT TXT "txt"
- #define ACSAVE\_FMT\_MAT4 1
- #define ACSAVE\_SFMT\_MAT4 "mat4"
- #define ACSAVE FMT M 2
- #define ACSAVE\_SFMT\_M "m"
- 6.11.1 Macro Definition Documentation
- 6.11.1.1 #define ACSAVE\_FMT\_TXT 0
- 6.11.1.2 #define ACSAVE\_SFMT\_TXT "txt"
- 6.11.1.3 #define ACSAVE\_FMT\_MAT4 1
- 6.11.1.4 #define ACSAVE SFMT MAT4 "mat4"
- 6.11.1.5 #define ACSAVE\_FMT\_M 2
- 6.11.1.6 #define ACSAVE\_SFMT\_M "m"
- 6.12 acSteer.cpp File Reference

#### **Macros**

- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)
- 6.12.1 Macro Definition Documentation
- 6.12.1.1 #define PATCH\_VAR(

var ) patchbay.connect(&var.valuechanged, this, &acSteer::update\_cfg)

6.12.1.2 #define INSERT\_PATCH(

var ) insert\_member(var); PATCH\_VAR(var)

6.13 acSteer.h File Reference

### Classes

- class acSteer\_config
- · class acSteer

## 6.14 acTransform\_wave.cpp File Reference

## Macros

#define PATCH\_VAR(var) patchbay.connect(&var.valuechanged, this, &acTransform\_←
wave::update\_cfg)

• #define INSERT PATCH(var) insert member(var); PATCH VAR(var)

### 6.14.1 Macro Definition Documentation

```
6.14.1.1 #define PATCH_VAR(
```

var ) patchbay.connect(&var.valuechanged, this, &acTransform\_wave
::update\_cfg)

6.14.1.2 #define INSERT\_PATCH(

var ) insert\_member(var); PATCH\_VAR(var)

6.15 acTransform\_wave.h File Reference

### Classes

- class acTransform wave config
- class acTransform wave

## 6.16 addsndfile.cpp File Reference

#### **Classes**

class addsndfile::waveform\_proxy\_t

Class helps to specify which instance of MHASignal\_waveform\_t parent instance is meant in **resampled\_soundfile\_t** (p. 177).

class addsndfile::resampled\_soundfile\_t

Reads sound from file and resamples it if necessary and wanted.

- · class addsndfile::sndfile t
- class addsndfile::level\_adapt\_t
- class addsndfile::addsndfile\_if\_t

## **Namespaces**

· addsndfile

#### **Macros**

#define **DEBUG**(x) std::cerr << \_\_FILE\_\_ << ":" << \_\_LINE\_\_ << " " #x "=" << x << std::endl</li>

## **Typedefs**

- typedef MHAPlugin::config\_t< level\_adapt\_t > addsndfile::level\_adaptor
- typedef MHAPlugin::plugin\_t< sndfile\_t > addsndfile::wave\_reader

### **Enumerations**

### **Functions**

- static unsigned **addsndfile::resampled\_num\_frames** (unsigned num\_source\_frames, float source\_rate, float target\_rate, addsndfile\_resampling\_mode\_t resampling\_mode)
- 6.16.1 Macro Definition Documentation
- 6.17 adm.cpp File Reference

## **Classes**

- · class adm rtconfig t
- class adm\_if\_t

### **Functions**

- MHASignal::waveform\_t \* adm\_fir\_lp (unsigned int fs, unsigned f\_pass, unsigned int f\_stop, unsigned int order)
- MHASignal::waveform\_t \* adm\_fir\_decomb (unsigned int fs, float dist\_m, unsigned int order)

## 6.17.1 Function Documentation

### 6.18 adm.hh File Reference

## Classes

class ADM::Linearphase\_FIR< F >

An efficient linear-phase fir filter implementation.

class ADM::Delay< F >

A delay-line class which can also do subsample-delays for a limited frequency range below fs/4

class ADM::ADMF >

Adaptive differential microphone, working for speech frequency range.

# **Namespaces**

ADM

## **Functions**

static double ADM::subsampledelay\_coeff (double samples, double f\_design, double fs=1.0)

compute IIR coefficient for subsample delay

## **Variables**

- const double **ADM::PI** = 3.14159265358979312
- const double **ADM::C** = 340
- const double ADM::DELAY FREQ = 2000
- const double **ADM::START\_BETA** = 0.5

## 6.19 altplugs.cpp File Reference

### Classes

- class mhaplug\_cfg\_t
- class altplugs\_t

### **Macros**

- #define MHAPLUGIN\_OVERLOAD\_OUTDOMAIN
- 6.19.1 Macro Definition Documentation
- 6.19.1.1 #define MHAPLUGIN\_OVERLOAD\_OUTDOMAIN
- 6.20 analysemhaplugin.cpp File Reference

### **Functions**

- std::string strdom (mha\_domain\_t d)
- void print\_ac (MHAKernel::algo\_comm\_class\_t &ac, std::string txt)
- int **main** (int argc, char \*\*argv)
- 6.20.1 Function Documentation
- 6.20.1.1 std::string strdom ( mha\_domain\_t d )
- 6.20.1.2 void print\_ac (

MHAKernel::algo\_comm\_class\_t & ac, std::string txt)

6.20.1.3 int main ( int *argc*,

char \*\* argv )

6.21 analysispath.cpp File Reference

### **Classes**

- class analysepath\_t
- class plug\_t
- class analysispath\_if\_t

### **Functions**

static void \* thread start (void \*instance)

6.21.1 Function Documentation

- 6.22 auditory\_profile.cpp File Reference
- 6.23 auditory\_profile.h File Reference

#### **Classes**

class AuditoryProfile::fmap\_t

A class to store frequency dependent data (e.g., HTL and UCL).

• class AuditoryProfile::profile t

The Auditory Profile class.

class AuditoryProfile::profile\_t::ear\_t

Class for ear-dependent parameters, e.g., audiograms or unilateral loudness scaling.

class AuditoryProfile::parser\_t

Class to make the auditory profile accessible through the parser interface.

- class AuditoryProfile::parser\_t::fmap\_t
- class AuditoryProfile::parser\_t::ear\_t

## Namespaces

AuditoryProfile

Namespace for classes and functions around the auditory profile (e.g., audiogram handling)

6.24 browsemhaplugins.cpp File Reference

### **Macros**

• #define **DEBUG**(x) std::cerr << \_\_FILE\_\_ << ":" << \_\_LINE\_\_ << " " << #x << "=" << x << std::endl

## **Functions**

• int **main** (int argc, char \*\*argv)

## 6.24.1 Macro Definition Documentation

## 6.24.2 Function Documentation

6.25 coherence.cpp File Reference

## Classes

- class coherence::vars\_t
- class coherence::cohflt t
- class coherence::cohflt\_if\_t

## **Namespaces**

coherence

## **Functions**

- void coherence::getcipd (mha\_complex\_t &c, mha\_real\_t &a, const mha\_complex←
   \_t &xl, const mha\_complex\_t &xr)
- 6.26 combinechannels.cpp File Reference

### Classes

- · class combc t
- · class combc\_if\_t
- 6.27 complex\_filter.cpp File Reference
- 6.28 complex filter.h File Reference

### **Classes**

class MHAFilter::complex\_bandpass\_t

Complex bandpass filter.

class MHAFilter::gamma\_flt\_t
 Class for gammatone filter.

class MHAFilter::thirdoctave\_analyzer\_t

## Namespaces

MHAFilter

Namespace for IIR and FIR filter classes.

6.29 cpuload.cpp File Reference

## Classes

- · class cpuload\_t
- 6.30 db.cpp File Reference

## **Classes**

- class db\_t
- class db\_if\_t
- 6.31 dc.cpp File Reference

## Classes

- class dc::wb\_inhib\_cfg\_t
- class dc::wideband\_inhib\_vars\_t
- class dc::dc\_vars\_t
- class dc::dc\_vars\_validator\_t
- class dc::dc\_t
- class dc::dc\_if\_t

## **Namespaces**

• dc

## **Macros**

#define DUPVEC(x) v.x.data = MHASignal::dupvec\_chk(v.x.data,s)

## **Functions**

 unsigned int dc::get\_audiochannels (unsigned int totalchannels, std::string acname, algo\_comm\_t ac)

### 6.31.1 Macro Definition Documentation

```
6.31.1.1 #define DUPVEC(
 x ) v.x.data = MHASignal::dupvec_chk(v.x.data,s)
```

## 6.32 dc\_afterburn.cpp File Reference

## **Namespaces**

# DynComp

dynamic compression related classes and functions

### **Functions**

• float **mylogf** (float x)

### 6.32.1 Function Documentation

6.32.1.1 float mylogf ( float 
$$x$$
 )

## 6.33 dc\_afterburn.h File Reference

### Classes

- class DynComp::dc\_afterburn\_vars\_t
   Variables for dc\_afterburn\_t (p. 280) class.
- class DynComp::dc\_afterburn\_rt\_t
   Real-time class for after burn effect.
- class DynComp::dc\_afterburn\_t

Afterburn class, to be defined as a member of compressors.

## **Namespaces**

## DynComp

dynamic compression related classes and functions

## 6.34 dc\_simple.cpp File Reference

## Classes

- class dc\_simple::dc\_vars\_t
- class dc\_simple::dc\_vars\_validator\_t
- class dc\_simple::level\_smoother\_t
- class dc simple::dc t
- class dc\_simple::dc\_t::line\_t
- class dc\_simple::dc\_if\_t

### **Namespaces**

· dc\_simple

## **Typedefs**

- typedef MHAPlugin::plugin\_t < dc\_t > dc\_simple::DC
- typedef MHAPlugin::config\_t< level\_smoother\_t > dc\_simple::LEVEL

## **Functions**

- void dc\_simple::test\_fail (const std::vector< float > &v, unsigned int s, const std::string &name)
- std::vector< float > dc\_simple::force\_resize (const std::vector< float > &v, unsigned int s, const std::string &name)
- mha\_real\_t dc\_simple::not\_zero (mha\_real\_t x, const std::string &comment="")

# 6.35 delay.cpp File Reference

### **Classes**

· class delay::interface\_t

## **Namespaces**

delay

# 6.36 delaysum.cpp File Reference

#### **Classes**

• class delaysum::delaysum\_t

Runtime configuration of the delaysum plugin.

class delaysum::delaysum\_if\_t

Interface class for the delaysum plugin.

## **Namespaces**

delaysum

This namespace contains the delaysum plugin.

# 6.37 doasym\_classification.cpp File Reference

#### **Macros**

- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)
- 6.37.1 Macro Definition Documentation
- 6.37.1.1 #define PATCH VAR(

var ) patchbay.connect (&var.valuechanged, this, &doasvm\_classification  $\hookleftarrow$  ::update\_cfg)

6.37.1.2 #define INSERT PATCH(

var ) insert\_member(var); PATCH\_VAR(var)

6.38 doasym\_classification.h File Reference

### Classes

- class doasvm\_classification\_config
- class doasvm\_classification
- 6.39 doasym\_feature\_extraction.cpp File Reference

### **Macros**

- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)

```
6.39.1 Macro Definition Documentation
6.39.1.1 #define PATCH_VAR(
                     var ) patchbay.connect(&var.valuechanged, this, &doasvm_feature_←
        extraction::update cfg)
6.39.1.2 #define INSERT_PATCH(
                     var ) insert_member(var); PATCH_VAR(var)
6.40 doasym_feature_extraction.h File Reference
Classes

    class doasvm_feature_extraction_config

   · class doasvm feature extraction
6.41
      doc_appendix.h File Reference
6.42 doc_examples.h File Reference
6.43 doc frameworks.h File Reference
6.44 doc_general.h File Reference
6.45 doc_kernel.h File Reference
6.46
     doc_matlab.h File Reference
6.47 doc_mhamain.h File Reference
6.48 doc_parser.h File Reference
6.49 doc_plugif.cpp File Reference
6.50
      doc_plugins.h File Reference
6.51 doc_system.h File Reference
6.52 doc_toolbox.h File Reference
6.53 downsample.cpp File Reference
Classes
```

• class **ds\_t** 

## 6.54 droptect.cpp File Reference

### **Classes**

class droptect\_t

Detect dropouts in a signal with a constant spectrum.

## 6.55 example1.cpp File Reference

## **Classes**

• class example1\_t

This C++ class implements the simplest example plugin for the step-by-step tutorial.

# 6.56 example2.cpp File Reference

### Classes

class example2\_t

This C++ class implements the second example plugin for the step-by-step tutorial.

## 6.57 example3.cpp File Reference

## Classes

class example3\_t

A Plugin class using the openMHA Event mechanism.

# 6.58 example4.cpp File Reference

### Classes

class example4\_t

A Plugin class using the spectral signal.

# 6.59 example5.cpp File Reference

# Classes

- class example5\_t
- class plugin\_interface\_t

## **Macros**

• #define \_\_declspec(p)

6.59.1 Macro Definition Documentation

6.60 example6.cpp File Reference

### Classes

- class cfg\_t
- class example6\_t

## **Macros**

• #define \_\_declspec(p)

6.60.1 Macro Definition Documentation

6.61 fader\_spec.cpp File Reference

## Classes

- class spec\_fader\_t
- class fader\_if\_t

6.62 fader\_wave.cpp File Reference

## Classes

- class fader\_wave::level\_adapt\_t
- class fader\_wave::fader\_wave\_if\_t

## **Namespaces**

· fader\_wave

**Macros** 

#define **DEBUG**(x) std::cerr << \_\_FILE\_\_ << ":" << \_\_LINE\_\_ << " " #x "=" << x << std::endl</li>

**Typedefs** 

- typedef MHAPlugin::plugin\_t< level\_adapt\_t > fader\_wave::level\_adaptor
- 6.62.1 Macro Definition Documentation

6.63 fftfbpow.cpp File Reference

Classes

class fftfbpow::fftfbpow\_t

Run time configuration for the fftfbpow plugin.

• class fftfbpow::fftfbpow\_interface\_t Interface class for fftfbpow plugin.

**Namespaces** 

fftfbpow

Namespace for the fftfbpow plugin.

6.64 fftfilterbank.cpp File Reference

**Classes** 

- class fftfilterbank::fftfb\_plug\_t
- class fftfilterbank::fftfb\_interface\_t

**Namespaces** 

fftfilterbank

## 6.65 fshift\_hilbert.cpp File Reference

## Classes

- class hilbert\_shifter\_t
- class frequency\_translator\_t
- 6.66 gain.cpp File Reference

### Classes

- class gain::scaler\_t
- class gain::gain\_if\_t

## **Namespaces**

• gain

## 6.67 gaintable.cpp File Reference

### **Functions**

- std::vector< mha\_real\_t > convert\_f2logf (const std::vector< mha\_real\_t > &vF)
- bool isempty (const std::vector< std::vector< mha\_real\_t >> &arg)
- 6.67.1 Function Documentation

```
6.67.1.1 std::vector<mha_real_t> convert_f2logf ( const std::vector< mha_real_t > & vF )
```

6.67.1.2 bool isempty (

const std::vector< std::vector< mha\_real\_t >> & arg )

6.68 gaintable.h File Reference

#### Classes

class DynComp::gaintable\_t

Gain table class.

## **Namespaces**

DynComp

dynamic compression related classes and functions

### **Functions**

mha\_real\_t DynComp::interp1 (const std::vector< mha\_real\_t > &vX, const std
 ::vector< mha\_real\_t > &vY, mha\_real\_t X)

One-dimensional linear interpolation.

mha\_real\_t DynComp::interp2 (const std::vector< mha\_real\_t > &vX, const std
 ::vector< mha\_real\_t > &vY, const std::vector< std::vector< mha\_real\_t > > &mZ,
 mha\_real\_t X, mha\_real\_t Y)

Linear interpolation in a two-dimensional field.

## 6.69 generatemhaplugindoc.cpp File Reference

#### Classes

class latex\_doc\_t

### **Functions**

- std::string conv2latex (std::string s, bool iscolored=false)
- void create\_latex\_doc (std::map< std::string, std::string > &doc, const std::string &plug-name, const std::string &plugin\_macro)
- int **main** (int argc, char \*\*argv)

```
6.69.1 Function Documentation
```

## 6.70 hann.cpp File Reference

### **Macros**

#define PI 3.14159265358979323846

## **Functions**

```
    float * hannf (const unsigned int N)
```

• double \* hann (const unsigned int N)

```
6.70.1 Macro Definition Documentation
```

```
6.70.1.1 #define PI 3.14159265358979323846
```

6.70.2 Function Documentation

```
6.70.2.1 float* hannf ( const unsigned int N )
```

```
6.70.2.2 double * hann ( const unsigned int N )
```

## 6.71 hann.h File Reference

### **Functions**

- float \* hannf (const unsigned int N)
- double \* hann (const unsigned int N)

### 6.71.1 Function Documentation

```
6.71.1.1 float* hannf ( const unsigned int N )
```

```
6.71.1.2 double* hann ( const unsigned int N )
```

## 6.72 identity.cpp File Reference

## Classes

class identity\_t

## 6.73 ifftshift.cpp File Reference

### **Functions**

void ifftshift (mha\_wave\_t \*spec)

```
6.73.1 Function Documentation
```

```
6.73.1.1 void ifftshift ( mha_wave_t * spec )
```

## 6.74 ifftshift.h File Reference

### **Functions**

void ifftshift (mha\_wave\_t \*spec)

## 6.74.1 Function Documentation

```
6.74.1.1 void ifftshift (

mha_wave_t * spec )
```

# 6.75 iirfilter.cpp File Reference

### Classes

class iirfilter\_t

# 

# Macros

- #define PATCH\_VAR(var) patchbay.connect(&var.valuechanged, this, &lpc::update\_←
   cfg)
- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)

### **Functions**

void Levinson2 (unsigned int P, const std::vector< mha\_real\_t > &R, std::vector< mha←
 \_real\_t > &A)

```
6.76.1 Macro Definition Documentation
6.76.1.1 #define PATCH_VAR(
                     var ) patchbay.connect(&var.valuechanged, this, &lpc::update_cfg)
6.76.1.2 #define INSERT_PATCH(
                     var ) insert member(var); PATCH VAR(var)
6.76.2 Function Documentation
6.76.2.1 void Levinson2 (
                     unsigned int P,
                     const std::vector< mha_real_t > & R,
                     std::vector< mha_real_t > & A )
6.77 lpc.h File Reference
Classes
   · class lpc config
   • class Ipc
6.78 lpc_bl_predictor.cpp File Reference
Macros

    #define PATCH_VAR(var) patchbay.connect(&var.valuechanged, this, &lpc_bl_←

     predictor::update cfg)
   • #define INSERT_PATCH(var) insert_member(var); PATCH_VAR(var)
6.78.1 Macro Definition Documentation
6.78.1.1 #define PATCH_VAR(
                     var ) patchbay.connect(&var.valuechanged, this, &lpc_bl_predictor←
         ::update_cfg)
6.78.1.2 #define INSERT_PATCH(
                     var ) insert member(var); PATCH VAR(var)
6.79 lpc_bl_predictor.h File Reference
Classes
```

class lpc\_bl\_predictor\_config

class lpc\_bl\_predictor

### **Macros**

- #define **EPSILON** 1e-10
- 6.79.1 Macro Definition Documentation
- 6.79.1.1 #define EPSILON 1e-10
- 6.80 **Ipc\_burg-lattice.cpp** File Reference

### **Macros**

- #define PATCH\_VAR(var) patchbay.connect(&var.valuechanged, this, &lpc\_burglattice
   ::update\_cfg)
- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)
- 6.80.1 Macro Definition Documentation
- 6.80.1.1 #define PATCH\_VAR(

  var ) patchbay.connect(&var.valuechanged, this, &lpc\_burglattice::update

  \_cfg)
- 6.80.1.2 #define INSERT\_PATCH(

  var ) insert\_member(var); PATCH\_VAR(var)
- 6.81 lpc\_burg-lattice.h File Reference

## Classes

- class lpc\_burglattice\_config
- class lpc\_burglattice

## Macros

- #define EPSILON 1e-10
- 6.81.1 Macro Definition Documentation
- 6.81.1.1 #define EPSILON 1e-10
- 6.82 matrixmixer.cpp File Reference

## **Classes**

- class matrixmixer::cfg\_t
- class matrixmixer::matmix\_t

### **Namespaces**

matrixmixer

## 6.83 mha.cpp File Reference

### **Functions**

- int **mhamain** (int argc, char \*argv[])
- int main (int argc, char \*argv[])

### 6.83.1 Function Documentation

### 6.84 mha.h File Reference

common types for MHA kernel, MHA framework applications and external plugins

### **Classes**

struct mha\_complex\_t

Type for complex floating point values.

struct mha\_direction\_t

Channel source direction structure.

struct mha\_channel\_info\_t

Channel information structure.

struct mha\_wave\_t

Waveform signal structure.

struct mha\_spec\_t

Spectrum signal structure.

struct mha\_audio\_descriptor\_t

Description of an audio fragment (planned as a replacement of mhaconfig\_t (p. 470)).

struct mha\_audio\_t

An audio fragment in the openMHA (planned as a replacement of **mha\_wave\_t** (p. 462) and **mha\_spec\_t** (p. 432)).

struct mhaconfig\_t

MHA prepare configuration structure.

struct comm\_var\_t

Algorithm communication variable structure.

struct algo\_comm\_t

A reference handle for algorithm communication variables.

#### **Macros**

#define MHA\_CALLBACK\_TEST(x)

Test macro to compare function type definition and declaration.

- #define MHA\_CALLBACK\_TEST\_PREFIX(prefix, x)
- #define MHA\_XSTRF(x) MHA\_STRF(x)
- #define MHA STRF(x) #x
- #define MHA\_VERSION\_MAJOR 4

Major version number of MHA.

#define MHA\_VERSION\_MINOR 6

Minor version number of MHA.

#define MHA\_VERSION\_RELEASE 4

Release number of MHA.

#define MHA VERSION BUILD 0

Build number of MHA (currently unused)

#define MHA\_STRUCT\_SIZEMATCH (unsigned int)((sizeof(mha\_real\_t)==4)+2\*(sizeof(mha complex\_t)==8)+4\*(sizeof(mha\_wave\_t)==8+2\*sizeof(void\*))+8\*(sizeof(mha\_spec complex\_t)==8+2\*sizeof(void\*))+16\*(sizeof(mhaconfig\_t)==24))

Test number for structure sizes.

#define MHA\_VERSION (unsigned int)((MHA\_STRUCT\_SIZEMATCH | (MHA\_VERS → ION\_RELEASE << 8) | (MHA\_VERSION\_MINOR << 16) | (MHA\_VERSION\_MAJOR << 24)))</li>

Full version number of MHA kernel.

#define MHA\_VERSION\_STRING MHA\_XSTRF(MHA\_VERSION\_MAJOR) "." MHA\_←
XSTRF(MHA\_VERSION\_MINOR)

Version string of MHA kernel (major.minor)

#define MHA\_RELEASE\_VERSION\_STRING MHA\_XSTRF(MHA\_VERSION\_MAJOR)
 "." MHA\_XSTRF(MHA\_VERSION\_MINOR)
 "." MHA\_XSTRF(MHA\_VERSION\_RELE ASE)

Version string of MHA kernel (major.minor.release)

- #define MHA\_WAVEFORM 0
- #define MHA SPECTRUM 1
- #define MHA DOMAIN MAX 2
- #define MHA DOMAIN UNKNOWN MHA DOMAIN MAX
- #define MHA\_AC\_UNKNOWN 0
- #define MHA AC CHAR 1
- #define MHA\_AC\_INT 2
- #define MHA AC MHAREAL 3
- #define MHA AC FLOAT 4
- #define MHA AC DOUBLE 5
- #define MHA AC MHACOMPLEX 6
- #define MHA AC VEC FLOAT 51
- #define MHA AC USER 1000

## **Typedefs**

- typedef unsigned int mha\_domain\_t
- typedef float mha\_real\_t

openMHA type for real numbers

typedef void \* mha\_fft\_t
 Handle for an FFT object.

- typedef struct algo comm t algo comm t
- typedef unsigned int(\* MHAGetVersion\_t) (void)
- typedef int(\* MHAInit\_t) (algo\_comm\_t algo\_comm, const char \*chain, const char \*algo, void \*\*h)
- typedef int(\* MHAPrepare\_t) (void \*h, mhaconfig\_t \*cfg)
- typedef int(\* MHARelease\_t) (void \*h)
- typedef void(\* MHADestroy\_t) (void \*h)
- typedef int(\* MHASet\_t) (void \*h, const char \*cmd, char \*retval, unsigned int len)
- typedef const char \*(\* MHAStrError\_t) (void \*h, int err)
- typedef int(\* MHAProc\_wave2wave\_t) (void \*h, mha\_wave\_t \*sIn, mha\_wave\_t \*\*s⊷
  Out)
- typedef int(\* MHAProc\_wave2spec\_t) (void \*h, mha\_wave\_t \*sIn, mha\_spec\_t \*\*s
   Out)
- typedef int(\* MHAProc\_spec2wave\_t) (void \*h, mha\_spec\_t \*sIn, mha\_wave\_t \*\*s
   Out)
- typedef int(\* MHAProc\_spec2spec\_t) (void \*h, mha\_spec\_t \*sln, mha\_spec\_t \*\*sOut)
- typedef const char \*(\* MHAPluginDocumentation\_t) (void)
- typedef const char \*(\* MHAPluginCategory t) (void)

## 6.84.1 Detailed Description

common types for MHA kernel, MHA framework applications and external plugins

6.84.2 Macro Definition Documentation

Test macro to compare function type definition and declaration.

```
6.84.2.2 #define MHA_CALLBACK_TEST_PREFIX(

prefix,

x )
```

6.84.2.3 #define MHA\_XSTRF( x ) MHA\_STRF(x)

6.84.2.5 #define MHA VERSION MAJOR 4

Major version number of MHA.

6.84.2.6 #define MHA\_VERSION\_MINOR 6

Minor version number of MHA.

6.84.2.7 #define MHA\_VERSION\_RELEASE 4

Release number of MHA.

6.84.2.8 #define MHA\_VERSION\_BUILD 0

Build number of MHA (currently unused)

6.84.2.9 #define MHA\_STRUCT\_SIZEMATCH (unsigned int)((sizeof(mha\_real\_t)==4)+2\*(sizeof(mha← \_complex\_t)==8)+4\*(sizeof(mha\_wave\_t)==8+2\*sizeof(void\*))+8\*(sizeof(mha\_spec\_← t)==8+2\*sizeof(void\*))+16\*(sizeof(mhaconfig\_t)==24))

Test number for structure sizes.

6.84.2.10 #define MHA\_VERSION (unsigned int)((MHA\_STRUCT\_SIZEMATCH | (MHA\_VERSION\_RELEASE << 8) | (MHA\_VERSION\_MINOR << 16) | (MHA\_VERSION\_MAJOR << 24)))

Full version number of MHA kernel.

6.84.2.11 #define MHA\_VERSION\_STRING MHA\_XSTRF(MHA\_VERSION\_MAJOR) "." MHA\_XSTRF(MHA\_VERSION\_MINOR)

Version string of MHA kernel (major.minor)

6.84.2.12 #define MHA\_RELEASE\_VERSION\_STRING MHA\_XSTRF(MHA\_VE← RSION\_MAJOR) "." MHA\_XSTRF(MHA\_VERSION\_MINOR) "." MHA\_XSTRF(MHA\_VERSION\_RELEASE)

Version string of MHA kernel (major.minor.release)

6.84.2.13	#define MHA_WAVEFORM 0
6.84.2.14	#define MHA_SPECTRUM 1
6.84.2.15	#define MHA_DOMAIN_MAX 2
6.84.2.16	#define MHA_DOMAIN_UNKNOWN MHA_DOMAIN_MAX
6.84.2.17	#define MHA_AC_UNKNOWN 0
6.84.2.18	#define MHA_AC_CHAR 1
6.84.2.19	#define MHA_AC_INT 2
6.84.2.20	#define MHA_AC_MHAREAL 3
6.84.2.21	#define MHA_AC_FLOAT 4
6.84.2.22	#define MHA_AC_DOUBLE 5
6.84.2.23	#define MHA_AC_MHACOMPLEX 6
6.84.2.24	#define MHA_AC_VEC_FLOAT 51
6.84.2.25	#define MHA_AC_USER 1000
6.84.3 Typedef Documentation	
6.84.3.1	typedef unsigned int mha_domain_t
6.84.3.2	typedef struct algo_comm_t algo_comm_t
6.84.3.3	typedef unsigned int(* MHAGetVersion_t) (void)
6.84.3.4	typedef int(* MHAInit_t) (algo_comm_t algo_comm, const char *chain, const char *algo, void **h)
6.84.3.5	typedef int(* MHAPrepare_t) (void *h, mhaconfig_t *cfg)
6.84.3.6	typedef int(* MHARelease_t) (void *h)
6.84.3.7	typedef void(* MHADestroy_t) (void *h)

- 6.84.3.8 typedef int(\* MHASet\_t) (void \*h, const char \*cmd, char \*retval, unsigned int len)
  6.84.3.9 typedef const char\*(\* MHAStrError\_t) (void \*h, int err)
- 6.84.3.10 typedef int(\* MHAProc\_wave2wave\_t) (void \*h, mha\_wave\_t \*sln, mha\_wave\_t \*\*sOut)
- 6.84.3.11 typedef int(\* MHAProc\_wave2spec\_t) (void \*h, mha\_wave\_t \*sln, mha\_spec\_t \*\*sOut)
- 6.84.3.12 typedef int(\* MHAProc\_spec2wave\_t) (void \*h, mha\_spec\_t \*sln, mha\_wave\_t \*\*sOut)
- 6.84.3.13 typedef int(\* MHAProc\_spec2spec\_t) (void \*h, mha\_spec\_t \*sln, mha\_spec\_t \*\*sOut)
- 6.84.3.14 typedef const char\*(\* MHAPluginDocumentation\_t) (void)
- 6.84.3.15 typedef const char\*(\* MHAPluginCategory\_t) (void)
- 6.85 mha algo comm.cpp File Reference

### **Macros**

- #define AC\_SUCCESS 0
- #define AC\_INVALID\_HANDLE -1
- #define AC\_INVALID\_NAME -2
- #define AC\_STRING\_TRUNCATED -3
- #define AC\_INVALID\_OUTPTR -4
- #define AC\_TYPE\_MISMATCH -5
- #define AC\_DIM\_MISMATCH -6

# Variables

- algo\_comm\_t algo\_comm\_default
- 6.85.1 Macro Definition Documentation
- 6.85.1.1 #define AC\_SUCCESS 0
- 6.85.1.2 #define AC\_INVALID\_HANDLE -1
- 6.85.1.3 #define AC\_INVALID\_NAME -2
- 6.85.1.4 #define AC\_STRING\_TRUNCATED -3
- 6.85.1.5 #define AC\_INVALID\_OUTPTR -4
- 6.85.1.6 #define AC\_TYPE\_MISMATCH -5
- 6.85.1.7 #define AC\_DIM\_MISMATCH -6
- 6.85.2 Variable Documentation
- 6.85.2.1 algo\_comm\_t algo\_comm\_default
- 6.86 mha\_algo\_comm.h File Reference

Header file for Algorithm Communication.

#### **Classes**

class MHA\_AC::spectrum\_t

Insert a MHASignal::spectrum\_t (p. 762) class into the AC space.

class MHA AC::waveform t

Insert a MHASignal::waveform\_t (p. 774) class into the AC space.

class MHA AC::int t

Insert a integer variable into the AC space.

class MHA\_AC::float\_t

Insert a float point variable into the AC space.

class MHA\_AC::double\_t

Insert a double precision floating point variable into the AC space.

- class MHA\_AC::stat\_t
- class MHA\_AC::ac2matrix\_helper\_t
- class MHA\_AC::ac2matrix\_t

Copy AC variable to a matrix.

class MHA\_AC::acspace2matrix\_t

Copy all or a subset of all numeric AC variables into an array of matrixes.

## **Namespaces**

· MHA AC

Functions and classes for Algorithm Communication (AC) support.

### **Functions**

- mha\_spec\_t MHA\_AC::get\_var\_spectrum (algo\_comm\_t ac, const std::string &name)

  Convert an AC variable into a spectrum.
- mha\_wave\_t MHA\_AC::get\_var\_waveform (algo\_comm\_t ac, const std::string &name)

Convert an AC variable into a waveform.

• int MHA\_AC::get\_var\_int (algo\_comm\_t ac, const std::string &name)

Return value of an integer scalar AC variable.

• float MHA\_AC::get\_var\_float (algo\_comm\_t ac, const std::string &name)

Return value of an floating point scalar AC variable.

• std::vector< float > MHA\_AC::get\_var\_vfloat (algo\_comm\_t ac, const std::string &name)

Return value of an floating point vector AC variable as standard vector of floats.

### 6.86.1 Detailed Description

Header file for Algorithm Communication.

6.87 mha\_algo\_comm.hh File Reference

### Classes

- class MHAKernel::comm\_var\_map\_t
- class MHAKernel::algo\_comm\_class\_t

## **Namespaces**

MHAKernel

#### **Macros**

#define ALGO\_COMM\_ID\_STR "MFVK3jL5rmeus1XtggEl971aXCR/GU7RRehKz4k
 Qtrg="

### **Functions**

• algo\_comm\_class\_t \* MHAKernel::algo\_comm\_safe\_cast (void \*)

## **Variables**

- algo\_comm\_t algo\_comm\_default
- 6.87.1 Macro Definition Documentation
- 6.87.1.1 #define ALGO\_COMM\_ID\_STR "MFVK3jL5rmeus1XtggEl971aXCR/GU7RRehKz4kQtrg="
- 6.87.2 Variable Documentation
- 6.87.2.1 algo\_comm\_t algo\_comm\_default
- 6.88 mha\_defs.h File Reference

Preprocessor definitions common to all MHA components.

#### **Macros**

- #define \_\_MHA\_FUN\_\_ \_\_FUNC\_\_
- #define CHECK\_EXPR(x) {if(!(x)){throw MHA\_Error(\_\_FILE\_\_,\_\_LINE\_\_,"The expression \"" #x "\" is invalid.");}}
- #define CHECK VAR(x) {if(!(x)){throw MHA Error( FILE , LINE ,"The variable \"" #x "\" is not defined.");}}
- #define **declspec**(p)
- #define M PI 3.14159265358979323846

Define pi if it is not defined yet.

• #define **MIN**(a, b) (((a)<(b))?(a):(b))

Macro for minimum function.

• #define **MAX**(a, b) (((a)>(b))?(a):(b))

Macro for maximum function.

- #define MHA\_EAR\_LEFT 0
- #define MHA EAR RIGHT 1
- #define MHA EAR MAX 2

### 6.88.1 Detailed Description

Preprocessor definitions common to all MHA components.

This file contains all preprocessor and type definitions which are common to all Master Hearing Aid components.

```
6.88.2 Macro Definition Documentation
```

```
6.88.2.1 #define __MHA_FUN___FUNC__
```

6.88.2.2 #define CHECK EXPR(

```
x) {if(!(x)){throw MHA Error( FILE , LINE ,"The expression \"" #x "\" is
invalid.");}}
```

6.88.2.3 #define CHECK\_VAR(

```
x ) {if(!(x)){throw MHA_Error(__FILE__,__LINE__,"The variable \"" #x "\" is not
defined.");}}
```

6.88.2.4 #define declspec( **p**)

6.88.2.5 #define M\_PI 3.14159265358979323846

Define pi if it is not defined yet.

6.88.2.6 #define MIN(

Macro for minimum function.

6.88.2.7 #define MAX(

Macro for maximum function.

6.88.2.8 #define MHA\_EAR\_LEFT 0

6.88.2.9 #define MHA\_EAR\_RIGHT 1

6.88.2.10 #define MHA\_EAR\_MAX 2

6.89 mha\_errno.c File Reference

## **Macros**

• #define STRLEN 0x1000

### **Functions**

- const char \* mha\_strerror (int mhaerrno)
- void mha\_set\_user\_error (const char \*str)

## **Variables**

- char next\_except\_str [STRLEN] = ""
- const char \* cstr\_strerror [MHA\_ERR\_USER]

```
6.89.1 Macro Definition Documentation
```

- 6.89.1.1 #define STRLEN 0x1000
- 6.89.2 Function Documentation
- 6.89.2.1 const char\* mha\_strerror ( int *mhaerrno* )
- 6.89.2.2 void mha\_set\_user\_error ( const char \* str )
- 6.89.3 Variable Documentation
- 6.89.3.1 char next\_except\_str[STRLEN] = ""
- 6.89.3.2 const char\* cstr\_strerror[MHA\_ERR\_USER]
- 6.90 mha\_errno.h File Reference

### **Macros**

- #define MHA\_ERR\_SUCCESS 0
- #define MHA\_ERR\_UNKNOWN 1
- #define MHA\_ERR\_INVALID\_HANDLE 2
- #define MHA ERR NULL 3
- #define MHA\_ERR\_VARRANGE 4
- #define MHA\_ERR\_VARFMT 5
- #define MHA\_ERR\_USER 10000

## **Functions**

- const char \* mha\_strerror (int mhaerrno)
- void mha\_set\_user\_error (const char \*str)

```
6.90.1 Macro Definition Documentation
6.90.1.1
        #define MHA_ERR_SUCCESS 0
6.90.1.2 #define MHA_ERR_UNKNOWN 1
6.90.1.3
        #define MHA_ERR_INVALID_HANDLE 2
6.90.1.4
        #define MHA_ERR_NULL 3
6.90.1.5 #define MHA_ERR_VARRANGE 4
6.90.1.6
        #define MHA_ERR_VARFMT 5
6.90.1.7 #define MHA_ERR_USER 10000
6.90.2 Function Documentation
6.90.2.1 const char* mha_strerror (
                     int mhaerrno )
6.90.2.2 void mha_set_user_error (
                     const char * str )
6.91
      mha_error.cpp File Reference
```

Implementation of openMHA error handling.

# **Namespaces**

· mha error helpers

## **Functions**

- unsigned mha\_error\_helpers::digits (unsigned n)
   Compute number of decimal digits required to represent an unsigned integer.
- unsigned **mha\_error\_helpers::snprintf\_required\_length** (const char \*formatstring,...) snprintf\_required\_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.
- void mha\_debug (const char \*fmt,...)
   Print an info message (stderr on Linux, OutputDebugString in Windows).

### 6.91.1 Detailed Description

Implementation of openMHA error handling.

This file forms a seperate library.

6.92 mha error.hh File Reference

Classes

class MHA\_Error

Error reporting exception class.

# **Namespaces**

mha\_error\_helpers

### **Macros**

- #define Getmsg(e) ((e).get\_msg())
- #define MHA\_ErrorMsg(x) MHA\_Error(\_\_FILE\_\_,\_LINE\_\_,"%s",x)

Throw an openMHA error with a text message.

#define MHA\_assert(x) if(!(x)) throw MHA\_Error(\_\_FILE\_\_,\_\_LINE\_\_,"\"%s\" is false.",#x)

Assertion macro, which throws an MHA\_Error (p. 413).

• #define MHA\_assert\_equal(a, b) if( a != b ) throw MHA\_Error(\_\_FILE\_\_,\_\_LINE\_\_  $\leftarrow$  ,"\"%s == %s\" is false (%s = %g, %s = %g).",#a,#b,#a,(double)(a),#b,(double)(b))

Equality assertion macro, which throws an MHA\_Error (p. 413) with the values.

## **Functions**

void mha\_debug (const char \*fmt,...)

Print an info message (stderr on Linux, OutputDebugString in Windows).

- unsigned **mha\_error\_helpers::digits** (unsigned n)
  - Compute number of decimal digits required to represent an unsigned integer.
- unsigned **mha\_error\_helpers::snprintf\_required\_length** (const char \*formatstring,...)

  snprintf\_required\_length Compute the number of bytes (excluding the terminating nul) required to store the result of an snprintf.

### 6.92.1 Macro Definition Documentation

```
6.92.1.1 #define Getmsg(

e ) ((e).get_msg())
```

6.93 mha\_event\_emitter.h File Reference

### **Classes**

- class MHAEvents::connector\_base\_t
- class MHAEvents::emitter\_t

Class for emitting openMHA events.

## **Namespaces**

### MHAEvents

Collection of event handling classes.

- 6.94 mha\_events.cpp File Reference
- 6.95 mha\_events.h File Reference

## Classes

- class MHAEvents::connector\_t< receiver\_t >
- class MHAEvents::patchbay\_t< receiver\_t >

Patchbay which connects any event emitter with any member function of the parameter class.

## **Namespaces**

### MHAEvents

Collection of event handling classes.

## 6.96 mha\_fftfb.cpp File Reference

## Classes

- class MHAOvlFilter::barkscale::hz2bark\_t
- class MHAOvIFilter::barkscale::bark2hz\_t

#### Namespaces

MHAOvIFilter

Namespace for overlapping FFT based filter bank classes and functions.

- MHAOvlFilter::barkscale
- MHAOvlFilter::FreqScaleFun

Transform functions from linear scale in Hz to new frequency scales.

MHAOvlFilter::ShapeFun

Shape functions for overlapping filters.

#### **Macros**

#define BARKSCALE ENTRIES 50

#### **Functions**

mha\_real\_t MHAOvlFilter::FreqScaleFun::hz2hz (mha\_real\_t x)

Dummy scale transformation Hz to Hz.

- mha real t MHAOvIFilter::FreqScaleFun::hz2khz (mha real t x)
- mha real t MHAOvIFilter::FreqScaleFun::hz2octave (mha real t x)
- mha\_real\_t MHAOvlFilter::FreqScaleFun::hz2third\_octave (mha\_real\_t x)
- mha\_real\_t MHAOvlFilter::FreqScaleFun::hz2bark (mha\_real\_t x)

Transformation to bark scale.

- mha\_real\_t MHAOvlFilter::FreqScaleFun::hz2bark\_analytic (mha\_real\_t)
- mha\_real\_t MHAOvIFilter::FreqScaleFun::hz2erb (mha\_real\_t)
- mha\_real\_t MHAOvlFilter::FreqScaleFun::hz2erb\_glasberg1990 (mha\_real\_t)
- mha real t MHAOvlFilter::FreqScaleFun::hz2log (mha real t x)

Third octave frequency scale.

- mha\_real\_t MHAOvlFilter::FreqScaleFun::inv\_scale (mha\_real\_t, mha\_real\_
   —
   t(\*)(mha\_real\_t))
- mha\_real\_t MHAOvlFilter::ShapeFun::rect (mha\_real\_t x)

Filter shape function for rectangular filters.

mha\_real\_t MHAOvlFilter::ShapeFun::linear (mha\_real\_t x)

Filter shape function for sawtooth filters.

• mha real t MHAOvlFilter::ShapeFun::hann (mha real t x)

Filter shape function for hanning shaped filters.

- mha\_real\_t MHAOvlFilter::ShapeFun::expflt (mha\_real\_t)
- mha\_real\_t MHAOvIFilter::ShapeFun::gauss (mha\_real\_t)
- mha\_real\_t filtershapefun (mha\_real\_t f, MHAOvlFilter::band\_descriptor\_t b, mha
   \_real\_t plateau)

### **Variables**

- mha\_real\_t MHAOvlFilter::barkscale::vfreq [BARKSCALE\_ENTRIES]
- mha\_real\_t MHAOvlFilter::barkscale::vbark [BARKSCALE\_ENTRIES]

# Classes

- class MHAOvIFilter::band\_descriptor\_t
- class MHAOvIFilter::scale\_var\_t
- class MHAOvIFilter::fscale\_t

6.97 mha\_fftfb.hh File Reference

- class MHAOvIFilter::fscale\_bw\_t
- class MHAOvIFilter::fftfb\_vars\_t

Set of configuration variables for FFT-based overlapping filters.

class MHAOvIFilter::fspacing\_t

Class for frequency spacing, used by filterbank shape generator class.

class MHAOvIFilter::fftfb\_t

FFT based overlapping filter bank.

class MHAOvlFilter::overlap\_save\_filterbank\_t

A time-domain minimal phase filter bank with frequency shapes from **MHAOvIFilter::fftfb\_t** (p. 581).

- class MHAOvlFilter::overlap save filterbank t::vars t
- class MHAOvlFilter::overlap\_save\_filterbank\_analytic\_t
- class MHAOvIFilter::fftfb\_ac\_info\_t

## Namespaces

### MHAOvlFilter

Namespace for overlapping FFT based filter bank classes and functions.

## **Typedefs**

typedef mha\_real\_t( MHAOvIFilter::scale\_fun\_t) (mha\_real\_t)

- 6.98 mha\_fifo.cpp File Reference
- 6.99 mha\_fifo.h File Reference

#### **Classes**

class mha\_fifo\_t< T >

A FIFO class for blocksize adaptation Synchronization: None.

class mha drifter fifo t< T >

A FIFO class for blocksize adaptation without Synchronization.

class mha\_fifo\_thread\_platform\_t

Abstract base class for synchronizing multithreaded (producer/consumer) fifo operations.

- class mha\_fifo\_posix\_threads\_t
- class mha\_fifo\_thread\_guard\_t

Simple Mutex Guard Class.

class mha\_fifo\_lw\_t< T >

This FIFO uses locks to synchronize access.

class mha\_dblbuf\_t< FIFO >

The doublebuffer adapts blocksizes between an outer process, which provides input data and takes output data, and an inner process, which processes the input signal and generates output data using a different block size than the outer process.

class mha\_rt\_fifo\_element\_t< T >

Object wrapper for **mha\_rt\_fifo\_t** (p. 429).

class mha\_rt\_fifo\_t< T >

Template class for thread safe, half real time safe fifo without explixit locks.

#### **Macros**

- #define mha\_fifo\_thread\_platform\_implementation\_t mha\_fifo\_posix\_threads\_t
- 6.99.1 Macro Definition Documentation
- 6.99.1.1 #define mha\_fifo\_thread\_platform\_implementation\_t mha\_fifo\_posix\_threads\_t
- 6.100 mha\_filter.cpp File Reference

## **Functions**

std::vector< mha\_real\_t > diff\_coeffs ()

6.100.1 Function Documentation

6.100.1.1 std::vector<mha\_real\_t> diff\_coeffs ( )

6.101 mha filter.hh File Reference

Header file for IIR filter classes.

#### Classes

· class MHAFilter::filter t

Generic IIR filter class.

• class MHAFilter::diff t

Differentiator class (non-normalized)

class MHAFilter::o1\_ar\_filter\_t

First order attack-release lowpass filter.

· class MHAFilter::o1flt lowpass t

First order low pass filter.

class MHAFilter::o1flt\_maxtrack\_t

First order maximum tracker.

class MHAFilter::o1flt\_mintrack\_t

First order minimum tracker.

- class MHAFilter::iir\_filter\_state\_t
- class MHAFilter::iir\_filter\_t

IIR filter class wrapper for integration into parser structure.

- class MHAFilter::adapt filter state t
- class MHAFilter::adapt\_filter\_param\_t
- class MHAFilter::adapt\_filter\_t

Adaptive filter.

class MHAFilter::fftfilter\_t

FFT based FIR filter implementation.

class MHAFilter::fftfilterbank\_t

FFT based FIR filterbank implementation.

struct MHAFilter::transfer function t

a structure containing a source channel number, a target channel number, and an impulse response.

struct MHAFilter::transfer\_matrix\_t

A sparse matrix of transfer function partitionss.

class MHAFilter::partitioned\_convolution\_t

A filter class for partitioned convolution.

struct MHAFilter::partitioned\_convolution\_t::index\_t

Bookkeeping class.

class MHAFilter::smoothspec\_t

Smooth spectral gains, create a windowed impulse response.

class MHAFilter::resampling\_filter\_t

Hann shaped low pass filter for resampling.

class MHAFilter::polyphase\_resampling\_t

A class that performs polyphase resampling.

class MHAFilter::blockprocessing\_polyphase\_resampling\_t

A class that does polyphase resampling and takes into account block processing.

class MHAFilter::iir\_ord1\_real\_t

First order recursive filter.

### **Namespaces**

MHAFilter

Namespace for IIR and FIR filter classes.

#### **Functions**

- void MHAFilter::make\_friendly\_number (mha\_real\_t &x)
- void MHAFilter::make\_friendly\_number (mha\_complex\_t &x)
- void MHAFilter::make\_friendly\_number (double &x)
- void MHAFilter::o1\_lp\_coeffs (const mha\_real\_t tau, const mha\_real\_t fs, mha\_real tau, const mha\_real\_t fs, mha\_real tau, const mha\_real\_t sc2)

Set first order filter coefficients from time constant and sampling rate.

void MHAFilter::butter\_stop\_ord1 (double \*A, double \*B, double f1, double f2, double fs)

Setup a first order butterworth band stop filter.

• MHASignal::waveform\_t \* MHAFilter::spec2fir (const mha\_spec\_t \*spec, const unsigned int fftlen, const MHAWindow::base\_t &window, const bool minphase)

Create a windowed impulse response/FIR filter coefficients from a spectrum.

unsigned MHAFilter::gcd (unsigned a, unsigned b)

greatest common divisor

double MHAFilter::sinc (double x)

 $\sin(x)/x$  function, coping with x=0.

std::pair< unsigned, unsigned > MHAFilter::resampling\_factors (float source\_
 sampling\_rate, float target\_sampling\_rate, float factor=1.0f)

Computes rational resampling factor from two sampling rates.

## 6.101.1 Detailed Description

Header file for IIR filter classes.

6.102 mha\_generic\_chain.cpp File Reference

#### **Functions**

• void mhaconfig\_compare (mhaconfig\_t req, mhaconfig\_t avail, const char \*cpref)

```
6.102.1 Function Documentation
```

6.103 mha\_generic\_chain.h File Reference

#### Classes

- class mhachain::plugs\_t
- · class mhachain::chain base t

# **Namespaces**

mhachain

#### **Macros**

- #define MHAPLUGIN\_OVERLOAD\_OUTDOMAIN
- 6.103.1 Macro Definition Documentation
- 6.103.1.1 #define MHAPLUGIN\_OVERLOAD\_OUTDOMAIN
- 6.104 mha\_io\_ifc.h File Reference

### **Typedefs**

typedef int(\* IOProcessEvent\_t) (void \*handle, mha\_wave\_t \*sIn, mha\_wave\_t \*\*s
 Out)

Event handler for signal stream.

 $\bullet \ \ typedef\ void(*\ \textbf{IOStoppedEvent\_t})\ (void\ *handle,\ int\ proc\_err,\ int\ io\_err)\\$ 

Event handler for stop event.

typedef void(\* IOStartedEvent\_t) (void \*handle)

Event handler for start event.

- typedef int(\* IOInit\_t) (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_← t stop\_event, void \*stop\_handle, void \*\*handle)
- typedef int(\* **IOPrepare\_t**) (void \*handle, int num\_inchannels, int num\_outchannels)
- typedef int(\* IOStart t) (void \*handle)
- typedef int(\* IOStop\_t) (void \*handle)
- typedef int(\* IORelease\_t) (void \*handle)
- typedef int(\* IOSetVar\_t) (void \*handle, const char \*cmd, char \*retval, unsigned int len)
- typedef const char \*(\* IOStrError\_t) (void \*handle, int err)
- typedef void(\* IODestroy\_t) (void \*handle)

6.104.1 Typedef Documentation

6.104.1.1 typedef int(\* IOProcessEvent\_t) (void \*handle, mha\_wave\_t \*sln, mha\_wave\_t \*\*sOut)

Event handler for signal stream.

This event handler needs to be realtime compatible. All signal path processing will be performed in this callback.

6.104.1.2 typedef void(\* IOStoppedEvent\_t) (void \*handle, int proc\_err, int io\_err)

Event handler for stop event.

This event handler needs to be realtime compatible. The function must return immediatly.

6.104.1.3 typedef void(\* IOStartedEvent\_t) (void \*handle)

Event handler for start event.

This event handler needs to be realtime compatible. The function must return immediatly.

- 6.104.1.4 typedef int(\* IOInit\_t) (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_event, void \*stop\_handle, void \*\*handle)
- 6.104.1.5 typedef int(\* IOPrepare\_t) (void \*handle, int num\_inchannels, int num\_outchannels)
- 6.104.1.6 typedef int(\* IOStart\_t) (void \*handle)
- 6.104.1.7 typedef int(\* IOStop\_t) (void \*handle)
- 6.104.1.8 typedef int(\* IORelease\_t) (void \*handle)
- 6.104.1.9 typedef int(\* IOSetVar\_t) (void \*handle, const char \*cmd, char \*retval, unsigned int len)
- 6.104.1.10 typedef const char\*(\* IOStrError\_t) (void \*handle, int err)
- 6.104.1.11 typedef void(\* IODestroy\_t) (void \*handle)
- 6.105 mha\_multisrc.cpp File Reference

### **Namespaces**

## MHAMultiSrc

Collection of classes for selecting audio chunks from multiple sources.

# 6.106 mha multisrc.h File Reference

## Classes

- class MHAMultiSrc::channel\_t
   class MHAMultiSrc::channels\_t
   class MHAMultiSrc::base\_t
  - Base class for source selection.
- class MHAMultiSrc::waveform\_tclass MHAMultiSrc::spectrum\_t

## **Namespaces**

## MHAMultiSrc

Collection of classes for selecting audio chunks from multiple sources.

# 6.107 mha\_os.cpp File Reference

#### **Functions**

- std::string mha\_getenv (std::string envvar)
- std::list< std::string > mha\_library\_paths ()
- std::list< std::string > list\_dir (const std::string &path, const std::string &pattern)

```
6.107.1 Function Documentation
```

```
6.107.1.1 std::string mha_getenv (
std::string envvar )
```

```
6.107.1.2 std::list<std::string> mha_library_paths ( )
```

6.108 mha\_os.h File Reference

### **Classes**

class dynamiclib\_t

#### **Macros**

- #define mha\_loadlib(x) dlopen(x,RTLD\_NOW)
- #define mha\_freelib(x) dlclose(x)
- #define mha freelib success(x) (x == 0)
- #define mha\_getlibfun(h, x) x ## \_cb = (x ## \_t)dlsym(h,#x)
- #define **mha\_getlibfun\_checked**(h, x) x ## \_cb = (x ## \_t)dlsym(h,#x);if(! x ## \_cb) throw **MHA\_Error**(\_\_FILE\_\_,\_LINE\_\_,"Function " #x " is undefined.")
- #define mha\_loadlib\_error(x) dlerror()
- #define mha\_lib\_extension ".so"
- #define mha msleep(milliseconds) usleep((milliseconds)\*1000)
- #define FMTsz "%zu"

printf modifier to print integers of type size\_t

- #define MHA\_RESOLVE(h, t) t ## \_cb = (t ## \_t)(h->resolve(#t))
- #define MHA\_RESOLVE\_CHECKED(h, t) t ## \_cb = (t ## \_t)(h->resolve\_checked(#t))

# **Typedefs**

typedef void \* mha\_libhandle\_t

#### **Functions**

- std::string **mha getenv** (std::string envvar)
- std::list< std::string > mha\_library\_paths ()
- std::list< std::string > list\_dir (const std::string &path, const std::string &pattern)
- void mha\_hton (float \*data, unsigned int len)
- void mha\_ntoh (float \*data, unsigned int len)
- void mha\_hton (uint32\_t \*data, unsigned int len)
- void **mha ntoh** (uint32 t \*data, unsigned int len)
- void mha\_hton (int32\_t \*data, unsigned int len)
- void mha\_ntoh (int32\_t \*data, unsigned int len)

### 6.108.1 Macro Definition Documentation

```
6.108.1.1 #define mha_loadlib(
```

x ) dlopen(x,RTLD\_NOW)

6.108.1.2 #define mha freelib(

x ) dlclose(x)

6.108.1.3 #define mha\_freelib\_success(

x) (x == 0)

```
6.108.1.4 #define mha_getlibfun(
                        x ) x ## _cb = (x ## _t)dlsym(h,#x)
6.108.1.5 #define mha_getlibfun_checked(
                         x ) x ## _cb = (x ## _t)dlsym(h,#x);if(! x ## _cb) throw
           MHA_Error(__FILE__,__LINE__,"Function " #x " is undefined.")
6.108.1.6 #define mha loadlib error(
                        x ) dlerror()
6.108.1.7 #define mha_lib_extension ".so"
6.108.1.8 #define mha_msleep(
                        milliseconds ) usleep((milliseconds)*1000)
6.108.1.9 #define FMTsz "%zu"
printf modifier to print integers of type size_t
6.108.1.10 #define MHA_RESOLVE(
                          t ) t ## _cb = (t ## _t)(h->resolve(#t))
6.108.1.11 #define MHA RESOLVE CHECKED(
                          t ) t ## _cb = (t ## _t)(h->resolve_checked(#t))
6.108.2 Typedef Documentation
6.108.2.1 typedef void* mha libhandle t
6.108.3 Function Documentation
6.108.3.1 std::string mha_getenv (
                        std::string envvar )
6.108.3.2 std::list<std::string> mha_library_paths ( )
6.108.3.3 std::list<std::string> list_dir (
                        const std::string & path,
                        const std::string & pattern )
```

```
6.108.3.4 void mha hton (
                       float * data,
                       unsigned int len ) [inline]
6.108.3.5 void mha ntoh (
                       float * data,
                       unsigned int len ) [inline]
6.108.3.6 void mha_hton (
                       uint32 t * data,
                       unsigned int len ) [inline]
6.108.3.7 void mha ntoh (
                       uint32 t * data,
                       unsigned int len ) [inline]
6.108.3.8 void mha hton (
                       int32_t * data,
                       unsigned int len ) [inline]
6.108.3.9 void mha ntoh (
                       int32_t * data,
                       unsigned int len ) [inline]
6.109
       mha parser.cpp File Reference
```

# **Namespaces**

MHAParser

Name space for the openMHA-Parser configuration language.

MHAParser::StrCnv

String converter namespace.

# Macros

• #define MHAPLATFORM "undefined-linux"

### **Functions**

- int MHAParser::get\_precision ()
- int MHAParser::StrCnv::num\_brackets (const std::string &s)

Return number of brackets at beginning and end of string.

- int MHAParser::StrCnv::bracket\_balance (const std::string &s)
- static std::ostream & write\_float (std::ostream &o, const float &f)
- static std::string parse\_1\_float (const std::string &s, mha\_real\_t &v)

This internal function parses a floating point number from the beginning of a string.

static std::string parse\_1\_complex (const std::string &s, mha\_complex\_t &v)

This internal function parses a complex number from the beginning of a string.

```
6.109.1 Macro Definition Documentation
```

```
6.109.1.1 #define MHAPLATFORM "undefined-linux"
```

6.109.2 Function Documentation

This internal function parses a floating point number from the beginning of a string.

### **Parameters**

s	The string to parse
V	The float variable to fill with a value

## **Returns**

The rest of the string.

This internal function parses a complex number from the beginning of a string.

# **Parameters**

s	The string to parse
V	The complex variable to fill with a value

### **Returns**

The rest of the string.

6.110 mha\_parser.hh File Reference

Header file for the MHA-Parser script language.

#### **Classes**

class MHAParser::keyword\_list\_t

Keyword list class.

- class MHAParser::expression t
- class MHAParser::entry\_t
- class MHAParser::base\_t

Base class for all parser items.

- class MHAParser::base\_t::replace\_t
- class MHAParser::parser\_t

Parser node class.

- class MHAParser::c\_ifc\_parser\_t
- class MHAParser::monitor t

Base class for monitors and variable nodes.

class MHAParser::variable\_t

Base class for variable nodes.

class MHAParser::range\_var\_t

Base class for all variables with a numeric value range.

class MHAParser::kw\_t

Variable with keyword list value.

class MHAParser::string\_t

Variable with a string value.

class MHAParser::vstring\_t

Vector variable with string values.

class MHAParser::bool t

Variable with a boolean value ("yes"/"no")

class MHAParser::int\_t

Variable with integer value.

class MHAParser::float\_t

Variable with float value.

class MHAParser::complex t

Variable with complex value.

class MHAParser::vint\_t

Variable with vector<int> value.

class MHAParser::vfloat t

Vector variable with float value.

class MHAParser::vcomplex t

Vector variable with complex value.

· class MHAParser::mfloat\_t

Matrix variable with float value.

class MHAParser::mcomplex\_t

Matrix variable with complex value.

class MHAParser::int\_mon\_t

Monitor variable with int value.

class MHAParser::bool mon t

Monitor with string value.

class MHAParser::string\_mon\_t

Monitor with string value.

class MHAParser::vstring\_mon\_t

Vector of monitors with string value.

class MHAParser::vint\_mon\_t

Vector of ints monitor.

class MHAParser::vfloat\_mon\_t

Vector of floats monitor.

class MHAParser::mfloat mon t

Matrix of floats monitor.

class MHAParser::float mon t

Monitor with float value.

class MHAParser::complex\_mon\_t

Monitor with complex value.

class MHAParser::vcomplex\_mon\_t

Monitor with vector of complex values.

class MHAParser::mcomplex mon t

Matrix of complex numbers monitor.

class MHAParser::commit\_t< receiver\_t >

Parser variable with event-emission functionality.

class MHAParser::mhaconfig\_mon\_t

# **Namespaces**

MHAParser

Name space for the openMHA-Parser configuration language.

MHAParser::StrCnv

String converter namespace.

#### Macros

- #define DEFAULT\_RETSIZE 0x100000
- #define insert\_member(x) insert\_item(#x,&x)

Macro to insert a member variable into a parser.

## **Typedefs**

- typedef std::string(base\_t::\* MHAParser::opact\_t) (expression\_t &)
- typedef std::string(base\_t::\* MHAParser::query\_t) (const std::string &)
- typedef std::map< std::string, opact\_t > MHAParser::opact\_map\_t
- typedef std::map< std::string, query\_t > MHAParser::query\_map\_t
- typedef std::list< entry\_t > MHAParser::entry\_map\_t
- typedef int(\* MHAParser::c\_parse\_cmd\_t) (void \*, const char \*, char \*, unsigned int)
- typedef const char \*(\* MHAParser::c\_parse\_err\_t) (void \*, int)

#### **Functions**

- std::string MHAParser::commentate (const std::string &s)
- void MHAParser::trim (std::string &s)
- std::string MHAParser::cfg\_dump (base\_t \*, const std::string &)
- std::string MHAParser::cfg\_dump\_short (base\_t \*, const std::string &)
- std::string MHAParser::all\_dump (base\_t \*, const std::string &)
- std::string MHAParser::mon dump (base t\*, const std::string &)
- std::string MHAParser::all\_ids (base\_t \*, const std::string &, const std::string &="")
- void **MHAParser::strreplace** (std::string &, const std::string &, const std::string &) string replace function
- void MHAParser::envreplace (std::string &s)
- void MHAParser::StrCnv::str2val (const std::string &, bool &)

Convert from string.

• void MHAParser::StrCnv::str2val (const std::string &, float &)

Convert from string.

void MHAParser::StrCnv::str2val (const std::string &, mha\_complex\_t &)

Convert from string.

void MHAParser::StrCnv::str2val (const std::string &, int &)

Convert from string.

• void MHAParser::StrCnv::str2val (const std::string &, keyword list t &)

Convert from string.

• void MHAParser::StrCnv::str2val (const std::string &, std::string &)

Convert from string.

template<class arg t >

void MHAParser::StrCnv::str2val (const std::string &s, std::vector< arg\_t > &val)

Converter for vector types.

template<>

void MHAParser::StrCnv::str2val< mha\_real\_t > (const std::string &s, std::vector< mha\_real\_t > &v)

Converter for vector<mha\_real\_t> with Matlab-style expansion.

template<class arg\_t >

void **MHAParser::StrCnv::str2val** (const std::string &s, std::vector< std::vector< arg\_t >> &val)

Converter for matrix types.

• std::string MHAParser::StrCnv::val2str (const bool &)

Convert to string.

• std::string MHAParser::StrCnv::val2str (const float &)

Convert to string.

std::string MHAParser::StrCnv::val2str (const mha\_complex\_t &)

Convert to string.

• std::string MHAParser::StrCnv::val2str (const int &)

Convert to string.

std::string MHAParser::StrCnv::val2str (const keyword\_list\_t &)

Convert to string.

std::string MHAParser::StrCnv::val2str (const std::string &)

Convert to string.

- std::string MHAParser::StrCnv::val2str (const std::vector< float > &)
   Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< mha\_complex\_t > &)
   Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< int > &)
   Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::string > &)
   Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::vector< float > > &)
   Convert to string.
- std::string MHAParser::StrCnv::val2str (const std::vector< std::vector< mha\_ $\leftarrow$  complex\_t >> &)

Convert to string.

## 6.110.1 Detailed Description

Header file for the MHA-Parser script language.

- 6.110.2 Macro Definition Documentation
- 6.110.2.1 #define DEFAULT RETSIZE 0x100000

Macro to insert a member variable into a parser.

#### **Parameters**

x Member variable to be inserted. Name of member variable will be used as configuration name.

See also MHAParser::parser\_t::insert\_item() (p. 653).

6.111 mha plugin.hh File Reference

Header file for MHA C++ plugin class templates.

#### **Classes**

- class MHAPlugin::cfg\_chain\_t< runtime\_cfg\_t >
- class MHAPlugin::config\_t< runtime\_cfg\_t >

Template class for thread safe configuration.

class MHAPlugin::plugin\_t< runtime\_cfg\_t >

The template class for C++ openMHA plugins.

### **Namespaces**

### MHAPlugin

Namespace for openMHA plugin class templates and thread-safe runtime configurations.

#### **Macros**

- #define **declspec**(p)
- #define WINAPI
- #define HINSTANCE int
- #define GITCOMMITHASH "independent-plugin-build"
- #define MHAPLUGIN\_PROC\_CALLBACK\_PREFIX(prefix, classname, indom, outdom)
- #define MHAPLUGIN INIT CALLBACKS PREFIX(prefix, classname)
- #define **MHAPLUGIN\_CALLBACKS\_PREFIX**(prefix, classname, indom, outdom)

  C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN\_DOCUMENTATION\_PREFIX(prefix, cat, doc)
- #define MHAPLUGIN\_INIT\_CALLBACKS(plugname, classname) MHAPLUGIN\_INIT—
   \_CALLBACKS\_PREFIX(MHA\_STATIC\_## plugname ## \_,classname)
- #define MHAPLUGIN\_CALLBACKS(plugname, classname, indom, outdom) MHAPLU
  GIN\_CALLBACKS\_PREFIX(MHA\_STATIC\_## plugname ## \_,classname,indom,outdom)
  C++ wrapper macro for the plugin interface.
- #define MHAPLUGIN\_DOCUMENTATION(plugname, cat, doc) MHAPLUGIN\_DOCU
   MENTATION\_PREFIX(MHA\_STATIC\_## plugname ## \_,cat,doc)

Wrapper macro for the plugin documentation interface.

### **Functions**

\_\_attribute\_\_ ((unused)) static const char \*mha\_git\_commit\_hash
 store git commit hash in every binary plgin to support reproducible research

## 6.111.1 Detailed Description

Header file for MHA C++ plugin class templates.

This file defines useful macros and template classes for the development of MHA plugins. A set of macros wraps a C++ interface around the ANSI-C plugin interface. The plugin\_t template class defines a corresponding C++ class with all required members. This class can make use of thread safe configurations (config\_t).

```
6.111.2 Macro Definition Documentation
6.111.2.1 #define __declspec(
                      p)
6.111.2.2 #define WINAPI
6.111.2.3 #define HINSTANCE int
6.111.2.4 #define GITCOMMITHASH "independent-plugin-build"
6.111.2.5 #define MHAPLUGIN PROC CALLBACK PREFIX(
                      prefix,
                      classname,
                      indom,
                      outdom )
6.111.2.6 #define MHAPLUGIN_INIT_CALLBACKS_PREFIX(
                      prefix,
                      classname )
6.111.2.7 #define MHAPLUGIN DOCUMENTATION PREFIX(
                      prefix,
                      cat,
                      doc )
6.111.2.8 #define MHAPLUGIN_PROC_CALLBACK(
                      plugname,
                      classname,
                      indom.
                      outdom ) MHAPLUGIN PROC CALLBACK PREFIX(MHA_STATIC_##
         plugname ## _,classname,indom,outdom)
6.111.2.9 #define MHAPLUGIN_INIT_CALLBACKS(
                      plugname,
                      classname ) MHAPLUGIN INIT CALLBACKS PREFIX(MHA STATIC
          ## plugname ## ,classname)
6.111.3 Function Documentation
6.111.3.1
         attribute (
                     (unused) ) const
store git commit hash in every binary plgin to support reproducible research
```

# 6.112 mha\_profiling.c File Reference

## **Functions**

```
void mha_tic (mha_tictoc_t *t)
```

- void mha\_platform\_tic (mha\_platform\_tictoc\_t \*t)
- float mha\_toc (mha\_tictoc\_t \*t)
- float mha\_platform\_toc (mha\_platform\_tictoc\_t \*t)

```
6.112.1 Function Documentation
```

```
6.112.1.1 void mha_tic (  mha\_tictoc\_t*t )
```

```
6.112.1.2 void mha_platform_tic (
mha_platform_tictoc_t * t )
```

```
6.112.1.3 float mha_toc ( mha_tictoc_t *t )
```

```
6.112.1.4 float mha_platform_toc (
mha_platform_tictoc_t * t )
```

6.113 mha\_profiling.h File Reference

# Classes

struct mha\_tictoc\_t

# **Typedefs**

typedef mha\_tictoc\_t mha\_platform\_tictoc\_t

### **Functions**

- void mha\_platform\_tic (mha\_platform\_tictoc\_t \*t)
- float mha\_platform\_toc (mha\_platform\_tictoc\_t \*t)

```
6.113.1 Typedef Documentation
6.113.1.1 typedef mha_tictoc_t mha_platform_tictoc_t
6.113.2 Function Documentation
6.113.2.1 void mha_platform_tic (
                      mha_platform_tictoc_t * t )
6.113.2.2 float mha_platform_toc (
                      mha_platform_tictoc_t * t )
6.114
       mha_ruby.cpp File Reference
Typedefs
   typedef VALUE(* rb_f_t) (...)
Functions

    static void mha_free (void *mha)

    static VALUE mha_alloc (VALUE klass)

    static VALUE mha_exit_request (VALUE self)

    static VALUE mha_parse (VALUE self, VALUE request)

   void Init_mha_ruby ()
6.114.1 Typedef Documentation
6.114.1.1 typedef VALUE(* rb_f_t) (...)
6.114.2 Function Documentation
6.114.2.1 static void mha_free (
                      void * mha ) [static]
6.114.2.2 static VALUE mha_alloc (
                      VALUE klass ) [static]
6.114.2.3 static VALUE mha_exit_request (
                      VALUE self ) [static]
6.114.2.4 static VALUE mha_parse (
                      VALUE self,
                      VALUE request ) [static]
6.114.2.5 void Init_mha_ruby ( )
6.115 mha_signal.cpp File Reference
Classes
```

# © 2005-2018 HörTech gGmbH, Oldenburg

class MHASignal::hilbert\_fftw\_t

### **Namespaces**

# MHASignal

Namespace for audio signal handling and processing classes.

#### **Macros**

- #define MHA ID UINT VECTOR "MHASignal::uint vector t"
- #define MHA\_ID\_MATRIX "MHASignal::matrix\_t"
- #define ASSERT\_EQUAL\_DIM(a, b)
- #define ASSERT\_EQUAL\_DIM\_PTR(a, b)

### **Functions**

- void set minabs (mha spec t &self, const mha real t &m)
- mha\_wave\_t & operator+= (mha\_wave\_t &self, const mha\_real\_t &v)
   Addition operator.
- mha\_wave\_t & operator\*= (mha\_wave\_t &self, const mha\_real\_t &v)
   Element-wise multiplication operator.
- mha\_spec\_t & operator\*= (mha\_spec\_t &self, const mha\_real\_t &v)
   Element-wise multiplication operator.
- mha\_wave\_t & operator\*= (mha\_wave\_t &self, const mha\_wave\_t &v)

  Element-wise multiplication operator.
- mha\_spec\_t & operator\*= (mha\_spec\_t &self, const mha\_wave\_t &v)
   Element-wise multiplication operator.
- mha\_spec\_t & operator\*= (mha\_spec\_t &self, const mha\_spec\_t &v)

  Element-wise multiplication operator.
- mha\_spec\_t & safe\_div (mha\_spec\_t &self, const mha\_spec\_t &v, mha\_real\_t eps)
   In-Place division with lower limit on divisor.
- mha\_spec\_t & operator/= (mha\_spec\_t &self, const mha\_spec\_t &v)
   Element-wise division operator.
- mha\_wave\_t & operator/= (mha\_wave\_t &self, const mha\_wave\_t &v)
   Element-wise division operator.
- mha\_spec\_t & operator+= (mha\_spec\_t &self, const mha\_spec\_t &v)
   Addition operator.
- mha\_spec\_t & operator+= (mha\_spec\_t &self, const mha\_real\_t &v)
   Addition operator.
- mha\_wave\_t & operator+= (mha\_wave\_t &self, const mha\_wave\_t &v)
   Addition operator.
- mha\_wave\_t & operator-= (mha\_wave\_t &self, const mha\_wave\_t &v)
   Subtraction operator.
- mha\_spec\_t & operator-= (mha\_spec\_t &self, const mha\_spec\_t &v)
   Subtraction operator.
- mha\_fft\_t mha\_fft\_new (unsigned int n)

Create a new instance of an FFT object.

void mha\_fft\_free (mha\_fft\_t h)

Remove an FFT object.

- void mha\_fft\_wave2spec (mha\_fft\_t h, const mha\_wave\_t \*in, mha\_spec\_t \*out)

  Perform an FFT on each channel of input waveform signal.
- void mha\_fft\_wave2spec (mha\_fft\_t h, const mha\_wave\_t \*in, mha\_spec\_t \*out, bool swap)

Tranform waveform segment into spectrum.

- void mha\_fft\_spec2wave (mha\_fft\_t h, const mha\_spec\_t \*in, mha\_wave\_t \*out)

  Perform an inverse FFT on each channel of input spectrum.
- void mha\_fft\_spec2wave (mha\_fft\_t h, const mha\_spec\_t \*in, mha\_wave\_t \*out, unsigned int offset)

Perform an inverse FFT on each channel of input spectrum.

- void mha\_fft\_forward (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (forward).
- void mha\_fft\_backward (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (backward).
- void mha\_fft\_forward\_scale (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (forward).
- void mha\_fft\_backward\_scale (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (backward).
- void mha\_fft\_wave2spec\_scale (mha\_fft\_t h, const mha\_wave\_t \*in, mha\_spec\_←
  t \*out)

Tranform waveform segment into spectrum.

void mha\_fft\_spec2wave\_scale (mha\_fft\_t h, const mha\_spec\_t \*in, mha\_wave\_←
t \*out)

Tranform spectrum into waveform segment.

- std::vector< float > std\_vector\_float (const mha\_wave\_t &w)
  - Converts a mha\_wave\_t (p. 462) structure into a std::vector<float> (interleaved order).
- std::vector< std::vector< float >> std\_vector\_vector\_float (const mha\_wave\_t &w)
   Converts a mha\_wave\_t (p. 462) structure into a std::vector< std::vector< float>> (outer vector represents channels).
- std::vector< std::vector< mha\_complex\_t >> std\_vector\_vector\_complex (const mha\_spec\_t &w)

Converts a **mha\_spec\_t** (p. 432) structure into a std::vector< std::vector< mha\_complex\_t> > (outer vector represents channels).

- static mha\_real\_t intensity (const mha\_spec\_t &s, unsigned int channel, unsigned int fftlen, mha\_real\_t \*sqfreq\_response=0)
- void integrate (mha\_wave\_t &s)

Numeric integration of a signal vector (real values)

void integrate (mha\_spec\_t &s)

Numeric integration of a signal vector (complex values)

- mha\_wave\_t & operator^= (mha\_wave\_t &self, const mha\_real\_t &arg)
   Exponent operator.
- mha\_wave\_t range (mha\_wave\_t s, unsigned int k0, unsigned int len)

Return a time interval from a waveform chunk.

```
    mha_spec_t channels (mha_spec_t s, unsigned int ch_start, unsigned int nch)

        Return a channel interval from a spectrum.
   void assign (mha_wave_t self, const mha_wave_t &val)
         Set all values of waveform 'self' to 'val'.
   void assign (mha_spec_t self, const mha_spec_t &val)
         Set all values of spectrum 'self' to 'val'.
   void timeshift (mha_wave_t &self, int shift)
         Time shift of waveform chunk.
6.115.1 Macro Definition Documentation
6.115.1.1 #define MHA_ID_UINT_VECTOR "MHASignal::uint_vector_t"
6.115.1.2 #define MHA_ID_MATRIX "MHASignal::matrix_t"
6.115.1.3 #define ASSERT EQUAL DIM(
                       b)
6.115.1.4 #define ASSERT_EQUAL_DIM_PTR(
                       a,
                       b)
6.115.2 Function Documentation
6.115.2.1 void set_minabs (
                      mha_spec_t & self,
                      const mha real t & m)
6.115.2.2 mha_spec_t& safe_div (
                      mha_spec_t & self,
                      const mha spec t & v,
                      mha_real_t eps )
In-Place division with lower limit on divisor.
```

```
6.115.2.3 static mha_real_t intensity (
                      const mha_spec_t & s,
                       unsigned int channel,
                       unsigned int fftlen,
                       mha real t * sqfreq_response = 0 ) [static]
```

6.116 mha\_signal.hh File Reference

Header file for audio signal handling and processing classes.

#### **Classes**

class MHASignal::spectrum\_t

a signal processing class for spectral data (based on **mha\_spec\_t** (p. 432))

class MHASignal::waveform\_t

signal processing class for waveform data (based on mha\_wave\_t (p. 462))

class MHASignal::doublebuffer\_t

Double-buffering class.

class MHASignal::ringbuffer\_t

A ringbuffer class for time domain audio signal, which makes no assumptions with respect to fragment size.

class MHASignal::hilbert\_t

Hilbert transformation of a waveform segment.

class MHASignal::minphase\_t

Minimal phase function.

- class MHASignal::stat t
- class MHASignal::delay\_wave\_t

Delayline containing wave fragments.

- class MHASignal::delay\_spec\_t
- class MHASignal::async\_rmslevel\_t

Class for asynchronous level metering.

class MHASignal::uint\_vector\_t

Vector of unsigned values, used for size and index description of n-dimensional matrixes.

class MHASignal::matrix\_t

n-dimensional matrix with real or complex floating point values.

class MHASignal::schroeder\_t

Schroeder tone complex class.

class MHASignal::quantizer\_t

Simple simulation of fixpoint quantization.

class MHASignal::loop\_wavefragment\_t

Copy a fixed waveform fragment to a series of waveform fragments of other size.

class MHASignal::delay\_t

Class to realize a simple delay of waveform streams.

• class MHASignal::subsample\_delay\_t

implements subsample delay in spectral domain.

### Namespaces

MHASignal

Namespace for audio signal handling and processing classes.

### **Macros**

- #define M\_PI 3.14159265358979323846
- #define mha\_round(x) (int)((float)x+0.5)

#### **Functions**

void MHASignal::for\_each (mha\_wave\_t \*s, mha\_real\_t(\*fun)(mha\_real\_t))
 Apply a function to each element of a mha\_wave\_t (p. 462).

mha\_real\_t MHASignal::lin2db (mha\_real\_t x)

Conversion from linear scale to dB (no SPL reference)

mha\_real\_t MHASignal::db2lin (mha\_real\_t x)

Conversion from dB scale to linear (no SPL reference)

mha\_real\_t MHASignal::pa2dbspl (mha\_real\_t x)

Conversion from linear Pascal scale to dB SPL.

• mha\_real\_t MHASignal::pa22dbspl (mha\_real\_t x, mha\_real\_t eps=1e-20f)

Conversion from squared Pascal scale to dB SPL.

• mha real t MHASignal::dbspl2pa (mha real t x)

Conversion from dB SPL to linear Pascal scale.

mha\_real\_t MHASignal::smp2sec (mha\_real\_t n, mha\_real\_t srate)

conversion from samples to seconds

mha\_real\_t MHASignal::sec2smp (mha\_real\_t sec, mha\_real\_t srate)

conversion from seconds to samples

- mha\_real\_t MHASignal::bin2freq (mha\_real\_t bin, unsigned fftlen, mha\_real\_t srate)
   conversion from fft bin index to frequency
- mha\_real\_t MHASignal::freq2bin (mha\_real\_t freq, unsigned fftlen, mha\_real\_t srate)
   conversion from frequency to fft bin index
- mha\_real\_t MHASignal::smp2rad (mha\_real\_t samples, unsigned bin, unsigned fftlen)
   conversion from delay in samples to phase shift
- mha\_real\_t MHASignal::rad2smp (mha\_real\_t phase\_shift, unsigned bin, unsigned fftlen)

conversion from phase shift to delay in samples

template < class elem\_type > std::vector < elem\_type > MHASignal::dupvec (std::vector < elem\_type > vec, unsigned n)

Duplicate last vector element to match desired size.

template<class elem\_type >

std::vector< elem\_type > MHASignal::dupvec\_chk (std::vector< elem\_type > vec, unsigned n)

Duplicate last vector element to match desired size, check for dimension.

bool equal\_dim (const mha\_wave\_t &a, const mha\_wave\_t &b)

Test for equal dimension of waveform structures.

bool equal dim (const mha wave t &a, const mhaconfig t &b)

Test for match of waveform dimension with mhaconfig structure.

• bool equal\_dim (const mha\_spec\_t &a, const mha\_spec\_t &b)

Test for equal dimension of spectrum structures.

• bool equal\_dim (const mha\_spec\_t &a, const mhaconfig\_t &b)

Test for match of spectrum dimension with mhaconfig structure.

bool equal\_dim (const mha\_wave\_t &a, const mha\_spec\_t &b)

Test for equal dimension of waveform/spectrum structures.

bool equal\_dim (const mha\_spec\_t &a, const mha\_wave\_t &b)

Test for equal dimension of waveform/spectrum structures.

void integrate (mha\_wave\_t &s)

Numeric integration of a signal vector (real values)

void integrate (mha\_spec\_t &s)

Numeric integration of a signal vector (complex values)

- unsigned int mha\_min\_1 (unsigned int a)
- unsigned int size (const mha\_wave\_t &s)

Return size of a waveform structure.

unsigned int size (const mha\_spec\_t &s)

Return size of a spectrum structure.

unsigned int size (const mha\_wave\_t \*s)

Return size of a waveform structure.

unsigned int size (const mha\_spec\_t \*s)

Return size of a spectrum structure.

void clear (mha\_wave\_t &s)

Set all values of waveform to zero.

void clear (mha\_wave\_t \*s)

Set all values of waveform to zero.

void clear (mha\_spec\_t &s)

Set all values of spectrum to zero.

void clear (mha\_spec\_t \*s)

Set all values of spectrum to zero.

void assign (mha\_wave\_t self, mha\_real\_t val)

Set all values of waveform 'self' to 'val'.

void assign (mha\_wave\_t self, const mha\_wave\_t &val)

Set all values of waveform 'self' to 'val'.

void assign (mha\_spec\_t self, const mha\_spec\_t &val)

Set all values of spectrum 'self' to 'val'.

void timeshift (mha\_wave\_t &self, int shift)

Time shift of waveform chunk.

mha\_wave\_t range (mha\_wave\_t s, unsigned int k0, unsigned int len)

Return a time interval from a waveform chunk.

• mha\_spec\_t channels (mha\_spec\_t s, unsigned int ch\_start, unsigned int nch)

Return a channel interval from a spectrum.

mha real t & value (mha wave t \*s, unsigned int fr, unsigned int ch)

Access an element of a waveform structure.

• const mha\_real\_t & value (const mha\_wave\_t \*s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

- mha real t & value (mha wave t \*s, unsigned int k)
- mha complex t & value (mha spec t \*s, unsigned int k)
- mha\_complex\_t & value (mha\_spec\_t \*s, unsigned int fr, unsigned int ch)

Access to an element of a spectrum.

const mha\_complex\_t & value (const mha\_spec\_t \*s, unsigned int fr, unsigned int ch)

Constant access to an element of a spectrum.

mha\_real\_t & value (mha\_wave\_t &s, unsigned int fr, unsigned int ch)

Access to an element of a waveform structure.

• const mha\_real\_t & value (const mha\_wave\_t &s, unsigned int fr, unsigned int ch)

Constant access to an element of a waveform structure.

mha\_complex\_t & value (mha\_spec\_t &s, unsigned int fr, unsigned int ch)
 Access to an element of a spectrum.

- const mha\_complex\_t & value (const mha\_spec\_t &s, unsigned int fr, unsigned int ch)

  Constant access to an element of a spectrum.
- std::vector< float > std\_vector\_float (const mha\_wave\_t &)
   Converts a mha\_wave\_t (p. 462) structure into a std::vector<float> (interleaved order).
- std::vector< std::vector< float >> std\_vector\_vector\_float (const mha\_wave\_t &)
   Converts a mha\_wave\_t (p. 462) structure into a std::vector< std::vector<float> > (outer vector represents channels).
- std::vector< std::vector< mha\_complex\_t > > std\_vector\_vector\_complex (const mha\_spec\_t &)

Converts a **mha\_spec\_t** (p. 432) structure into a std::vector< std::vector< mha\_complex\_t> > (outer vector represents channels).

- mha\_wave\_t & operator+= (mha\_wave\_t &, const mha\_real\_t &)
   Addition operator.
- mha\_wave\_t & operator+= (mha\_wave\_t &, const mha\_wave\_t &)
   Addition operator.
- mha\_wave\_t & operator-= (mha\_wave\_t &, const mha\_wave\_t &)
   Subtraction operator.
- mha\_spec\_t & operator-= (mha\_spec\_t &, const mha\_spec\_t &)
   Subtraction operator.
- mha\_wave\_t & operator\*= (mha\_wave\_t &, const mha\_real\_t &)
   Element-wise multiplication operator.
- mha\_wave\_t & operator\*= (mha\_wave\_t &, const mha\_wave\_t &)
   Element-wise multiplication operator.
- mha\_spec\_t & operator\*= (mha\_spec\_t &, const mha\_real\_t &)
   Element-wise multiplication operator.
- mha\_spec\_t & operator\*= (mha\_spec\_t &, const mha\_wave\_t &)

  Element-wise multiplication operator.
- mha\_spec\_t & operator\*= (mha\_spec\_t &, const mha\_spec\_t &)

  Element-wise multiplication operator.
- mha\_spec\_t & operator/= (mha\_spec\_t &, const mha\_spec\_t &)
   Element-wise division operator.
- mha\_wave\_t & operator/= (mha\_wave\_t &, const mha\_wave\_t &)
   Element-wise division operator.
- mha\_spec\_t & operator+= (mha\_spec\_t &, const mha\_spec\_t &)
   Addition operator.
- mha\_spec\_t & operator+= (mha\_spec\_t &, const mha\_real\_t &)
   Addition operator.
- void set\_minabs (mha\_spec\_t &, const mha\_real\_t &)
- mha\_spec\_t & safe\_div (mha\_spec\_t &self, const mha\_spec\_t &v, mha\_real\_t eps)
   In-Place division with lower limit on divisor.

mha\_wave\_t & operator^= (mha\_wave\_t &self, const mha\_real\_t &arg)
 Exponent operator.

void MHASignal::copy\_channel (mha\_spec\_t &self, const mha\_spec\_t &src, unsigned sch, unsigned dch)

Copy one channel of a source signal.

void MHASignal::copy\_channel (mha\_wave\_t &self, const mha\_wave\_t &src, unsigned src\_channel, unsigned dest\_channel)

Copy one channel of a source signal.

mha\_real\_t MHASignal::rmslevel (const mha\_spec\_t &s, unsigned int channel, unsigned int fftlen)

Return RMS level of a spectrum channel.

mha\_real\_t MHASignal::colored\_intensity (const mha\_spec\_t &s, unsigned int channel, unsigned int fftlen, mha\_real\_t sqfreq\_response[])

Colored spectrum intensity.

mha\_real\_t MHASignal::maxabs (const mha\_spec\_t &s, unsigned int channel)
 Find maximal absolute value.

mha\_real\_t MHASignal::rmslevel (const mha\_wave\_t &s, unsigned int channel)
 Return RMS level of a waveform channel.

mha\_real\_t MHASignal::maxabs (const mha\_wave\_t &s, unsigned int channel)
 Find maximal absolute value.

mha\_real\_t MHASignal::maxabs (const mha\_wave\_t &s)

Find maximal absolute value.

mha\_real\_t MHASignal::max (const mha\_wave\_t &s)

Find maximal value.

mha\_real\_t MHASignal::min (const mha\_wave\_t &s)

Find minimal value.

mha\_real\_t MHASignal::sumsqr\_channel (const mha\_wave\_t &s, unsigned int channel)

Calculate sum of squared values in one channel.

- mha\_real\_t MHASignal::sumsqr\_frame (const mha\_wave\_t &s, unsigned int frame)

  Calculate sum over all channels of squared values.
- void MHASignal::scale (mha\_spec\_t \*dest, const mha\_wave\_t \*src)
- void MHASignal::limit (mha\_wave\_t &s, const mha\_real\_t &min, const mha\_real\_t &max)

Limit the singal in the waveform buffer to the range [min, max].

- mha\_complex\_t & set (mha\_complex\_t &self, mha\_real\_t real, mha\_real\_t imag=0)

  Assign real and imaginary parts to a mha\_complex\_t (p. 400) variable.
- mha\_complex\_t mha\_complex (mha\_real\_t real, mha\_real\_t imag=0)

Create a new mha\_complex\_t (p. 400) with specified real and imaginary parts.

mha\_complex\_t & set (mha\_complex\_t &self, const std::complex < mha\_real\_t > &stdcomplex)

Assign a mha\_complex\_t (p. 400) variable from a std::complex.

std::complex< mha\_real\_t > stdcomplex (const mha\_complex\_t &self)

Create a std::complex from mha\_complex\_t (p. 400).

mha\_complex\_t & expi (mha\_complex\_t &self, mha\_real\_t angle)

replaces the value of the given **mha\_complex\_t** (p. 400) with exp(i\*b).

double angle (const mha\_complex\_t &self)

Computes the angle of a complex number in the complex plane.

• mha\_complex\_t & operator+= (mha\_complex\_t &self, const mha\_complex\_t &other)

Addition of two complex numbers, overwriting the first.

mha\_complex\_t operator+ (const mha\_complex\_t &self, const mha\_complex\_
 t &other)

Addition of two complex numbers, result is a temporary object.

mha\_complex\_t & operator+= (mha\_complex\_t &self, mha\_real\_t other\_real)

Addition of a complex and a real number, overwriting the complex.

• mha\_complex\_t operator+ (const mha\_complex\_t &self, mha\_real\_t other\_real)

Addition of a complex and a real number, result is a temporary object.

- mha\_complex\_t & operator-= (mha\_complex\_t &self, const mha\_complex\_t &other)

  Subtraction of two complex numbers, overwriting the first.
- mha\_complex\_t operator- (const mha\_complex\_t &self, const mha\_complex\_← t &other)

Subtraction of two complex numbers, result is a temporary object.

- mha\_complex\_t & operator-= (mha\_complex\_t &self, mha\_real\_t other\_real)

  Subtraction of a complex and a real number, overwriting the complex.
- mha\_complex\_t operator- (const mha\_complex\_t &self, mha\_real\_t other\_real)

  Subtraction of a complex and a real number, result is a temporary object.
- mha\_complex\_t & operator\*= (mha\_complex\_t &self, const mha\_complex\_t &other)
   Multiplication of two complex numbers, overwriting the first.
- mha\_complex\_t operator\* (const mha\_complex\_t &self, const mha\_complex\_
   t &other)

Multiplication of two complex numbers, result is a temporary object.

- mha\_complex\_t & operator\*= (mha\_complex\_t &self, mha\_real\_t other\_real)

  Multiplication of a complex and a real number, overwriting the complex.
- mha\_complex\_t & expi (mha\_complex\_t &self, mha\_real\_t angle, mha\_real\_t factor)
   replaces (!) the value of the given mha\_complex\_t (p. 400) with a \* exp(i\*b)
- mha\_complex\_t operator\* (const mha\_complex\_t &self, mha\_real\_t other\_real)

  Multiplication of a complex and a real number, result is a temporary object.
- mha real t abs2 (const mha complex t &self)

Compute the square of the absolute value of a complex value.

mha\_real\_t abs (const mha\_complex\_t &self)

Compute the absolute value of a complex value.

- mha\_complex\_t & operator/= (mha\_complex\_t &self, mha\_real\_t other\_real)

  Division of a complex and a real number, overwriting the complex.
- mha\_complex\_t operator/ (const mha\_complex\_t &self, mha\_real\_t other\_real)

  Division of a complex and a real number, result is a temporary object.
- mha\_complex\_t & safe\_div (mha\_complex\_t &self, const mha\_complex\_t &other, mha\_real\_t eps, mha\_real\_t eps2)

Safe division of two complex numbers, overwriting the first.

- mha\_complex\_t & operator/= (mha\_complex\_t &self, const mha\_complex\_t &other)

  Division of two complex numbers, overwriting the first.
- mha\_complex\_t operator/ (const mha\_complex\_t &self, const mha\_complex\_← t &other)

Division of two complex numbers, result is a temporary object.

mha\_complex\_t operator- (const mha\_complex\_t &self)

Unary minus on a complex results in a negative temporary object.

• bool operator== (const mha\_complex\_t &x, const mha\_complex\_t &y)

Compare two complex numbers for equality.

• bool operator!= (const mha\_complex\_t &x, const mha\_complex\_t &y)

Compare two complex numbers for inequality.

void conjugate (mha\_complex\_t &self)

Replace (!) the value of this **mha\_complex\_t** (p. 400) with its conjugate.

void conjugate (mha\_spec\_t &self)

Replace (!) the value of this **mha\_spec\_t** (p. 432) with its conjugate.

mha\_complex\_t \_conjugate (const mha\_complex\_t &self)

Compute the cojugate of this complex value.

void reciprocal (mha\_complex\_t &self)

Replace the value of this complex with its reciprocal.

• mha\_complex\_t \_reciprocal (const mha\_complex\_t &self)

compute the reciprocal of this complex value.

void normalize (mha complex t &self)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle).

void normalize (mha\_complex\_t &self, mha\_real\_t margin)

Divide a complex by its absolute value, thereby normalizing it (projecting onto the unit circle), with a safety margin.

bool almost (const mha\_complex\_t &self, const mha\_complex\_t &other, mha\_real\_t times epsilon=1e2)

Compare two complex numbers for equality except for a small relative error.

• bool operator< (const mha\_complex\_t &x, const mha\_complex\_t &y)

Compares the absolute values of two complex numbers.

• std::ostream & operator<< (std::ostream &o, const mha\_complex\_t &c)

ostream operator for **mha\_complex\_t** (p. 400)

std::istream & operator>> (std::istream &i, mha\_complex\_t &c)

preliminary istream operator for mha\_complex\_t (p. 400) without error checking

mha\_fft\_t mha\_fft\_new (unsigned int n)

Create a new FFT handle.

void mha\_fft\_free (mha\_fft\_t h)

Destroy an FFT handle.

 $\bullet \ \ \mathsf{void} \ \ \boldsymbol{\mathsf{mha\_fft\_wave2spec}} \ (\boldsymbol{\mathsf{mha\_fft\_t}} \ \mathsf{h}, \, \mathsf{const} \ \boldsymbol{\mathsf{mha\_wave\_t}} \ *\mathsf{in}, \, \boldsymbol{\mathsf{mha\_spec\_t}} \ *\mathsf{out})$ 

Tranform waveform segment into spectrum.

void mha\_fft\_wave2spec (mha\_fft\_t h, const mha\_wave\_t \*in, mha\_spec\_t \*out, bool swaps)

Tranform waveform segment into spectrum.

void mha\_fft\_spec2wave (mha\_fft\_t h, const mha\_spec\_t \*in, mha\_wave\_t \*out)

Tranform spectrum into waveform segment.

void mha\_fft\_spec2wave (mha\_fft\_t h, const mha\_spec\_t \*in, mha\_wave\_t \*out, unsigned int offset)

Tranform spectrum into waveform segment.

• void mha\_fft\_forward (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

Complex to complex FFT (forward).

• void mha\_fft\_backward (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

Complex to complex FFT (backward).

- void mha\_fft\_forward\_scale (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (forward).
- void mha\_fft\_backward\_scale (mha\_fft\_t h, mha\_spec\_t \*sIn, mha\_spec\_t \*sOut)

  Complex to complex FFT (backward).
- void mha\_fft\_wave2spec\_scale (mha\_fft\_t h, const mha\_wave\_t \*in, mha\_spec\_←
  t \*out)

Tranform waveform segment into spectrum.

void mha\_fft\_spec2wave\_scale (mha\_fft\_t h, const mha\_spec\_t \*in, mha\_wave\_←
t \*out)

Tranform spectrum into waveform segment.

template<class elem\_type >

elem\_type MHASignal::kth\_smallest (elem\_type array[], unsigned n, unsigned k)

Fast search for the kth smallest element of an array.

template < class elem type >

elem\_type **MHASignal::median** (elem\_type array[], unsigned n)

Fast median search.

template < class elem type >

elem\_type **MHASignal::mean** (const std::vector< elem\_type > &data, elem\_type start ← \_val)

Calculate average of elements in a vector.

template<class elem\_type >

std::vector< elem\_type > MHASignal::quantile (std::vector< elem\_type > data, const std::vector< elem\_type > &p)

Calculate quantile of elements in a vector.

 void MHASignal::saveas\_mat4 (const mha\_spec\_t &data, const std::string &varname, FILE \*fh)

Save a openMHA spectrum as a variable in a Matlab4 file.

 void MHASignal::saveas\_mat4 (const mha\_wave\_t &data, const std::string &varname, FILE \*fh)

Save a openMHA waveform as a variable in a Matlab4 file.

Save a float vector as a variable in a Matlab4 file.

void MHASignal::copy permuted (mha wave t \*dest, const mha wave t \*src)

Copy contents of a waveform to a permuted waveform.

# **Variables**

unsigned long int MHASignal::signal counter = 0

Signal counter to produce signal ID strings.

## 6.116.1 Detailed Description

Header file for audio signal handling and processing classes.

The classes for waveform, spectrum and filterbank signals defined in this file are "intelligent" versions of the basic waveform, spectrum and filterbank structures used in the C function calls.

```
6.116.2 Macro Definition Documentation
6.116.2.1 #define M_PI 3.14159265358979323846
6.116.2.2 #define mha_round(
                      x ) (int)((float)x+0.5)
6.116.3 Function Documentation
6.116.3.1 unsigned int mha_min_1 (
                      unsigned int a ) [inline]
6.116.3.2 mha real t& value (
                      mha_wave_t * s,
                      unsigned int k ) [inline]
6.116.3.3 mha_complex_t& value (
                      mha_spec_t * s,
                      unsigned int k ) [inline]
6.116.3.4 void set_minabs (
                      mha_spec_t &,
                      const mha_real_t & )
6.116.3.5 mha_spec_t& safe_div (
                      mha_spec_t & self,
                      const mha_spec_t & v,
                      mha_real_t eps )
In-Place division with lower limit on divisor.
6.116.3.6 std::ostream& operator<< (
                      std::ostream & o,
                      const mha_complex_t & c ) [inline]
ostream operator for mha_complex_t (p. 400)
```

preliminary istream operator for mha\_complex\_t (p. 400) without error checking

6.117 mha\_signal\_fft.h File Reference

### Classes

class MHASignal::fft\_t

# **Namespaces**

# MHASignal

Namespace for audio signal handling and processing classes.

- 6.118 mha\_tablelookup.cpp File Reference
- 6.119 mha\_tablelookup.hh File Reference

Header file for table lookup classes.

## Classes

- class MHATableLookup::table\_t
- class MHATableLookup::linear\_table\_t

Class for interpolation with equidistant x values.

class MHATableLookup::xy\_table\_t

Class for interpolation with non-equidistant x values.

# **Namespaces**

# MHATableLookup

Namespace for table lookup classes.

6.119.1 Detailed Description

Header file for table lookup classes.

# 6.120 mha\_tcp.cpp File Reference

#### **Classes**

class MHA\_TCP::sock\_init\_t

## **Namespaces**

MHA TCP

A Namespace for TCP helper classes.

#### **Macros**

- #define INVALID\_SOCKET (-1)
- #define SOCKET ERROR (-1)
- #define closesocket(fd) (close((fd)))
- #define ASYNC\_CONNECT\_STARTED EINPROGRESS

# **Typedefs**

· typedef int SOCKET

### **Functions**

std::string MHA\_TCP::STRERROR (int err)

Portable conversion from error number to error string.

std::string MHA\_TCP::HSTRERROR (int err)

Portable conversion from hostname error number to error string.

• int MHA\_TCP::N\_ERRNO ()

Portable access to last network error number.

int MHA\_TCP::H\_ERRNO ()

Portable access to last hostname error number.

• int MHA\_TCP::G\_ERRNO ()

Portable access to last non-network error number.

- static sockaddr\_in host\_port\_to\_sock\_addr (const std::string &host, unsigned short port)
- static SOCKET tcp\_connect\_to (const std::string &host, unsigned short port)
- static SOCKET tcp\_connect\_to\_with\_timeout (const std::string &host, unsigned short port, Timeout\_Watcher &timeout\_watcher)
- static void \* thread\_start\_func (void \*thread)

### **Variables**

class MHA\_TCP::sock\_init\_t MHA\_TCP::sock\_initializer

```
6.120.1 Macro Definition Documentation
6.120.1.1 #define INVALID_SOCKET (-1)
6.120.1.2 #define SOCKET_ERROR (-1)
6.120.1.3 #define closesocket(
                       fd ) (close((fd)))
6.120.1.4 #define ASYNC_CONNECT_STARTED EINPROGRESS
6.120.2 Typedef Documentation
6.120.2.1 typedef int SOCKET
6.120.3 Function Documentation
6.120.3.1 static sockaddr_in host_port_to_sock_addr (
                      const std::string & host,
                      unsigned short port ) [static]
6.120.3.2 static SOCKET tcp_connect_to (
                      const std::string & host,
                      unsigned short port ) [static]
6.120.3.3 static SOCKET tcp_connect_to_with_timeout (
                      const std::string & host,
                      unsigned short port,
                      Timeout_Watcher & timeout_watcher ) [static]
6.120.3.4 static void* thread_start_func (
                      void * thread ) [static]
6.121
       mha tcp.hh File Reference
```

### Classes

- struct MHA TCP::OS EVENT TYPE
- class MHA\_TCP::Wakeup\_Event

A base class for asynchronous wakeup events.

class MHA\_TCP::Async\_Notify

Portable Multiplexable cross-thread notification.

class MHA\_TCP::Event\_Watcher

OS-independent event watcher, uses select on Unix and WaitForMultipleObjects on Windows.

class MHA\_TCP::Timeout\_Event

• class MHA\_TCP::Timeout\_Watcher

OS-independent event watcher with internal fixed-end-time timeout.

class MHA\_TCP::Sockread\_Event

Watch socket for incoming data.

- class MHA\_TCP::Sockwrite\_Event
- class MHA TCP::Sockaccept Event
- class MHA\_TCP::Connection

Connection (p. 437) handles Communication between client and server, is used on both sides.

- class MHA TCP::Server
- class MHA\_TCP::Client

A portable class for a tcp client connections.

class MHA\_TCP::Thread

A very simple class for portable threads.

# **Namespaces**

MHA\_TCP

A Namespace for TCP helper classes.

#### **Macros**

• #define **Sleep**(x) usleep((x)\*1000);

# **Typedefs**

• typedef int MHA\_TCP::SOCKET

#### **Functions**

• std::string MHA\_TCP::STRERROR (int err)

Portable conversion from error number to error string.

std::string MHA\_TCP::HSTRERROR (int err)

Portable conversion from hostname error number to error string.

int MHA\_TCP::N\_ERRNO ()

Portable access to last network error number.

• int MHA\_TCP::H\_ERRNO ()

Portable access to last hostname error number.

• int MHA\_TCP::G\_ERRNO ()

Portable access to last non-network error number.

double MHA\_TCP::dtime ()

Time access function for system's high resolution time, retrieve current time as double.

double MHA TCP::dtime (const struct timeval &tv)

Time access function for unix' high resolution time, converts struct timeval to double.

struct timeval MHA\_TCP::stime (double d)

Time access function for unix' high resolution time, converts time from double to struct timeval.

# 6.121.1 Macro Definition Documentation

6.121.1.1 #define Sleep(

x ) usleep((x)\*1000);

- 6.122 mha\_toolbox.h File Reference
- 6.123 mha\_windowparser.cpp File Reference

**Variables** 

- float(\* wnd\_funs [])(float)
- 6.123.1 Variable Documentation
- 6.123.1.1 float(\* wnd\_funs[])(float)
- 6.124 mha\_windowparser.h File Reference

Classes

· class MHAWindow::base\_t

Common base for window types.

class MHAWindow::fun\_t

Generic window based on a generator function.

class MHAWindow::rect\_t

Rectangular window.

class MHAWindow::bartlett\_t

Bartlett window.

class MHAWindow::hanning\_t

von-Hann window

class MHAWindow::hamming\_t

Hamming window.

· class MHAWindow::blackman t

Blackman window.

class MHAWindow::user t

User defined window.

class MHAParser::window t

MHA configuration interface for a window function generator.

## **Namespaces**

MHAWindow

Collection of Window types.

MHAParser

Name space for the openMHA-Parser configuration language.

## **Functions**

float MHAWindow::rect (float)

Rectangular window function.

float MHAWindow::bartlett (float)

Bartlett window function.

float MHAWindow::hanning (float)

Hanning window function.

float MHAWindow::hamming (float)

Hamming window function.

float MHAWindow::blackman (float)

Blackman window function.

# 6.125 mhachain.cpp File Reference

## Classes

class mhachain::mhachain\_t

## **Namespaces**

- mhachain
- 6.126 mhafw\_lib.cpp File Reference
- 6.127 mhafw\_lib.h File Reference

### Classes

- · class io\_lib\_t
  - Class for loading MHA sound IO module.
- class fw\_vars\_t
- class fw\_t

# 6.128 MHAIOFile.cpp File Reference

#### Classes

• class io\_file\_t
File IO.

### **Macros**

- #define DEBUG(x) std::cerr << \_\_FILE\_\_ << ":" << \_\_LINE\_\_ << " " << #x " = " << x</li>
   std::endl
- #define ERR SUCCESS 0
- #define ERR\_IHANDLE -1
- #define ERR\_USER -1000
- #define MAX USER ERR 0x500
- #define IOInit MHA\_STATIC\_MHAIOFile\_IOInit
- #define IOPrepare MHA STATIC MHAIOFile IOPrepare
- #define IOStart MHA\_STATIC\_MHAIOFile\_IOStart
- #define IOStop MHA STATIC MHAIOFile IOStop
- #define IORelease MHA STATIC MHAIOFile IORelease
- #define IOSetVar MHA STATIC MHAIOFile IOSetVar
- #define IOStrError MHA\_STATIC\_MHAIOFile\_IOStrError
- #define IODestroy MHA\_STATIC\_MHAIOFile\_IODestroy
- #define dummy\_interface\_test MHA\_STATIC\_MHAIOFile\_dummy\_interface\_test

### **Functions**

- int IOInit (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_←
  handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_←
  event, void \*stop handle, void \*\*handle)
- int IOPrepare (void \*handle, int nch\_in, int nch\_out)
- int IOStart (void \*handle)
- int IOStop (void \*handle)
- int IORelease (void \*handle)
- int IOSetVar (void \*handle, const char \*command, char \*retval, unsigned int maxretlen)
- const char \* IOStrError (void \*handle, int err)
- void IODestroy (void \*handle)
- void dummy\_interface\_test (void)

### **Variables**

static char user\_err\_msg [MAX\_USER\_ERR]

```
6.128.1 Macro Definition Documentation
6.128.1.1 #define DEBUG(
                       x ) std::cerr << FILE << ":" << LINE << " " << #x " = " << x <<
          std::endl
6.128.1.2 #define ERR SUCCESS 0
6.128.1.3 #define ERR IHANDLE -1
6.128.1.4 #define ERR_USER -1000
6.128.1.5 #define MAX_USER_ERR 0x500
6.128.1.6 #define IOInit MHA_STATIC_MHAIOFile_IOInit
6.128.1.7 #define IOPrepare MHA_STATIC_MHAIOFile_IOPrepare
6.128.1.8 #define IOStart MHA_STATIC_MHAIOFile_IOStart
6.128.1.9 #define IOStop MHA_STATIC_MHAIOFile_IOStop
6.128.1.10 #define IORelease MHA_STATIC_MHAIOFile_IORelease
6.128.1.11 #define IOSetVar MHA_STATIC_MHAIOFile_IOSetVar
6.128.1.12 #define IOStrError MHA_STATIC_MHAIOFile_IOStrError
6.128.1.13 #define IODestroy MHA_STATIC_MHAIOFile_IODestroy
6.128.1.14 #define dummy_interface_test MHA_STATIC_MHAIOFile_dummy_interface_test
6.128.2 Function Documentation
6.128.2.1 int IOInit (
                      int fragsize,
                      float samplerate,
                      IOProcessEvent t proc_event,
                      void * proc_handle,
                      IOStartedEvent t start_event,
                      void * start_handle,
                      IOStoppedEvent t stop_event,
                      void * stop_handle,
                      void ** handle )
```

```
6.128.2.2 int IOPrepare (
                        void * handle,
                        int nch_in,
                       int nch_out )
6.128.2.3 int IOStart (
                        void * handle )
6.128.2.4 int IOStop (
                       void * handle )
6.128.2.5 int IORelease (
                        void * handle )
6.128.2.6 int IOSetVar (
                        void * handle,
                        const char * command,
                        char * retval,
                        unsigned int maxretlen )
6.128.2.7 const char* IOStrError (
                        void * handle,
                       int err )
6.128.2.8 void IODestroy (
                       void * handle )
6.128.2.9 void dummy_interface_test (
                        void )
6.128.3 Variable Documentation
6.128.3.1 char user_err_msg[MAX_USER_ERR] [static]
       MHAIOJack.cpp File Reference
6.129
Classes

    class MHAIOJack::io_jack_t

         Main class for JACK IO.
```

**Namespaces** 

MHAIOJack

JACK IO.

#### **Macros**

- #define ERR SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR\_USER -1000
- #define MAX\_USER\_ERR 0x500
- #define IOInit MHA\_STATIC\_MHAIOJack\_IOInit
- #define IOPrepare MHA\_STATIC\_MHAIOJack\_IOPrepare
- #define IOStart MHA\_STATIC\_MHAIOJack\_IOStart
- #define IOStop MHA\_STATIC\_MHAIOJack\_IOStop
- #define IORelease MHA\_STATIC\_MHAIOJack\_IORelease
- #define IOSetVar MHA\_STATIC\_MHAIOJack\_IOSetVar
- #define IOStrError MHA\_STATIC\_MHAIOJack\_IOStrError
- #define IODestroy MHA\_STATIC\_MHAIOJack\_IODestroy
- #define dummy\_interface\_test MHA\_STATIC\_MHAIOJack\_dummy\_interface\_test

#### **Functions**

- int IOInit (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_
  handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_
  event, void \*stop\_handle, void \*\*handle)
- int IOPrepare (void \*handle, int nch\_in, int nch\_out)
- int IOStart (void \*handle)
- int IOStop (void \*handle)
- int **IORelease** (void \*handle)
- int IOSetVar (void \*handle, const char \*command, char \*retval, unsigned int maxretlen)
- const char \* IOStrError (void \*handle, int err)
- void IODestroy (void \*handle)
- void dummy\_interface\_test (void)

## **Variables**

static char user\_err\_msg [MAX\_USER\_ERR] = ""

#### 6.129.1 Macro Definition Documentation

- 6.129.1.1 #define ERR\_SUCCESS 0
- 6.129.1.2 #define ERR\_IHANDLE -1
- 6.129.1.3 #define ERR\_USER -1000
- 6.129.1.4 #define MAX USER ERR 0x500

```
6.129.1.5
          #define IOInit MHA_STATIC_MHAIOJack_IOInit
6.129.1.6
          #define IOPrepare MHA_STATIC_MHAIOJack_IOPrepare
6.129.1.7
         #define IOStart MHA_STATIC_MHAIOJack_IOStart
6.129.1.8 #define IOStop MHA_STATIC_MHAIOJack_IOStop
6.129.1.9
         #define IORelease MHA_STATIC_MHAIOJack_IORelease
6.129.1.10 #define IOSetVar MHA_STATIC_MHAIOJack_IOSetVar
6.129.1.11 #define IOStrError MHA_STATIC_MHAIOJack_IOStrError
6.129.1.12 #define IODestroy MHA_STATIC_MHAIOJack_IODestroy
           #define dummy_interface_test MHA_STATIC_MHAIOJack_dummy_interface_test
6.129.1.13
6.129.2 Function Documentation
6.129.2.1 int IOInit (
                       int fragsize,
                       float samplerate,
                       IOProcessEvent_t proc_event,
                       void * proc_handle,
                       IOStartedEvent t start event,
                       void * start handle,
                       IOStoppedEvent_t stop_event,
                       void * stop_handle,
                       void ** handle )
6.129.2.2 int IOPrepare (
                       void * handle,
                       int nch in,
                       int nch_out )
6.129.2.3 int IOStart (
                       void * handle )
6.129.2.4 int IOStop (
                       void * handle )
6.129.2.5 int IORelease (
                       void * handle )
```

#### Classes

class MHAIOJackdb::io\_jack\_t
 Main class for JACK IO.

# **Namespaces**

## MHAIOJackdb

## **Macros**

- #define ERR\_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR USER -1000
- #define MAX\_USER\_ERR 0x500
- #define IOInit MHA\_STATIC\_MHAIOJackdb\_IOInit
- #define IOPrepare MHA STATIC MHAIOJackdb IOPrepare
- #define IOStart MHA\_STATIC\_MHAIOJackdb\_IOStart
- #define IOStop MHA\_STATIC\_MHAIOJackdb\_IOStop
- #define IORelease MHA\_STATIC\_MHAIOJackdb\_IORelease
- #define IOSetVar MHA\_STATIC\_MHAIOJackdb\_IOSetVar
- #define IOStrError MHA\_STATIC\_MHAIOJackdb\_IOStrError
- #define IODestroy MHA\_STATIC\_MHAIOJackdb\_IODestroy
- #define dummy\_interface\_test MHA\_STATIC\_MHAIOJackdb\_dummy\_interface\_test

#### **Functions**

int IOInit (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_
handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_
event, void \*stop\_handle, void \*\*handle)

- int IOPrepare (void \*handle, int nch\_in, int nch\_out)
- int **IOStart** (void \*handle)
- int **IOStop** (void \*handle)
- int IORelease (void \*handle)
- int IOSetVar (void \*handle, const char \*command, char \*retval, unsigned int maxretlen)
- const char \* IOStrError (void \*handle, int err)
- void **IODestroy** (void \*handle)
- void dummy\_interface\_test (void)

## **Variables**

• static char user\_err\_msg [MAX\_USER\_ERR] = ""

6.130.1 I	Macro Definition Documentation
6.130.1.1	#define ERR_SUCCESS 0
6.130.1.2	#define ERR_IHANDLE -1
6.130.1.3	#define ERR_USER -1000
6.130.1.4	#define MAX_USER_ERR 0x500
6.130.1.5	#define IOInit MHA_STATIC_MHAIOJackdb_IOInit
6.130.1.6	#define IOPrepare MHA_STATIC_MHAIOJackdb_IOPrepare
6.130.1.7	#define IOStart MHA_STATIC_MHAIOJackdb_IOStart
6.130.1.8	#define IOStop MHA_STATIC_MHAIOJackdb_IOStop
6.130.1.9	#define IORelease MHA_STATIC_MHAIOJackdb_IORelease
6.130.1.10	#define IOSetVar MHA_STATIC_MHAIOJackdb_IOSetVar
6.130.1.11	#define IOStrError MHA_STATIC_MHAIOJackdb_IOStrError
6.130.1.12	#define IODestroy MHA_STATIC_MHAIOJackdb_IODestroy

```
#define dummy_interface_test MHA_STATIC_MHAIOJackdb_dummy_interface_test
6.130.2 Function Documentation
6.130.2.1
         int IOInit (
                        int fragsize,
                        float samplerate,
                        IOProcessEvent_t proc_event,
                        void * proc_handle,
                        IOStartedEvent t start event,
                        void * start_handle,
                        IOStoppedEvent_t stop_event,
                        void * stop_handle,
                        void ** handle )
6.130.2.2 int IOPrepare (
                        void * handle,
                        int nch_in,
                        int nch_out )
6.130.2.3 int IOStart (
                        void * handle )
6.130.2.4 int IOStop (
                        void * handle )
6.130.2.5 int IORelease (
                        void * handle )
6.130.2.6 int IOSetVar (
                        void * handle,
                        const char * command,
                        char * retval,
                        unsigned int maxretlen )
6.130.2.7 const char* IOStrError (
                        void * handle,
                        int err )
6.130.2.8 void IODestroy (
                        void * handle )
6.130.2.9 void dummy_interface_test (
                        void )
6.130.3 Variable Documentation
```

6.130.3.1 char user\_err\_msg[MAX USER ERR] = "" [static]

## 6.131 MHAIOParser.cpp File Reference

#### **Classes**

· class io parser t

Main class for Parser IO.

#### **Macros**

- #define ERR\_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR\_USER -1000
- #define MAX USER ERR 0x500
- #define IOInit MHA\_STATIC\_MHAIOParser\_IOInit
- #define IOPrepare MHA STATIC MHAIOParser IOPrepare
- #define IOStart MHA\_STATIC\_MHAIOParser\_IOStart
- #define IOStop MHA STATIC MHAIOParser IOStop
- #define IORelease MHA STATIC MHAIOParser IORelease
- #define IOSetVar MHA\_STATIC\_MHAIOParser\_IOSetVar
- #define IOStrError MHA\_STATIC\_MHAIOParser\_IOStrError
- #define IODestroy MHA STATIC MHAIOParser IODestroy
- #define dummy\_interface\_test MHA\_STATIC\_MHAIOParser\_dummy\_interface\_test

## **Functions**

- int IOInit (int fragsize, float, IOProcessEvent\_t proc\_event, void \*proc\_handle, IO
   StartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_event, void \*stop\_handle, void \*\*handle)
- int IOPrepare (void \*handle, int nch\_in, int nch\_out)
- int **IOStart** (void \*handle)
- int IOStop (void \*handle)
- int IORelease (void \*handle)
- int IOSetVar (void \*handle, const char \*command, char \*retval, unsigned int maxretlen)
- const char \* IOStrError (void \*handle, int err)
- void IODestroy (void \*handle)
- void dummy\_interface\_test (void)

### **Variables**

static char user\_err\_msg [MAX\_USER\_ERR]

```
6.131.1 Macro Definition Documentation
6.131.1.1 #define ERR_SUCCESS 0
6.131.1.2 #define ERR_IHANDLE -1
6.131.1.3 #define ERR_USER -1000
6.131.1.4 #define MAX_USER_ERR 0x500
6.131.1.5 #define IOInit MHA_STATIC_MHAIOParser_IOInit
6.131.1.6 #define IOPrepare MHA_STATIC_MHAIOParser_IOPrepare
6.131.1.7 #define IOStart MHA_STATIC_MHAIOParser_IOStart
6.131.1.8 #define IOStop MHA_STATIC_MHAIOParser_IOStop
6.131.1.9 #define IORelease MHA STATIC MHAIOParser IORelease
6.131.1.10 #define IOSetVar MHA_STATIC_MHAIOParser_IOSetVar
6.131.1.11 #define IOStrError MHA_STATIC_MHAIOParser_IOStrError
6.131.1.12 #define IODestroy MHA STATIC MHAIOParser IODestroy
6.131.1.13 #define dummy_interface_test MHA_STATIC_MHAIOParser_dummy_interface_test
6.131.2 Function Documentation
6.131.2.1 int IOInit (
                      int fragsize,
                      float,
                      IOProcessEvent_t proc_event,
                      void * proc_handle,
                      IOStartedEvent t start_event,
                      void * start_handle,
                      IOStoppedEvent_t stop_event,
                      void * stop handle,
                      void ** handle )
6.131.2.2 int IOPrepare (
                      void * handle,
                      int nch in,
                      int nch_out )
```

```
6.131.2.3 int IOStart (
                       void * handle )
6.131.2.4 int IOStop (
                       void * handle )
6.131.2.5 int IORelease (
                       void * handle )
6.131.2.6 int IOSetVar (
                       void * handle,
                       const char * command,
                       char * retval,
                       unsigned int maxretlen )
6.131.2.7 const char* IOStrError (
                       void * handle,
                       int err )
6.131.2.8 void IODestroy (
                       void * handle )
6.131.2.9 void dummy_interface_test (
                       void )
6.131.3 Variable Documentation
6.131.3.1 char user_err_msg[MAX_USER_ERR] [static]
6.132 MHAIOPortAudio.cpp File Reference
```

### **Classes**

- class MHAIOPortAudio::device\_info\_t
- class MHAIOPortAudio::io\_portaudio\_t

Main class for Portaudio sound IO.

## Namespaces

MHAIOPortAudio

#### **Macros**

- #define ERR\_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR USER -1000
- #define MAX\_USER\_ERR 0x500
- #define IOInit MHA\_STATIC\_MHAIOPortAudio\_IOInit
- #define IOPrepare MHA\_STATIC\_MHAIOPortAudio\_IOPrepare
- #define IOStart MHA\_STATIC\_MHAIOPortAudio\_IOStart
- #define IOStop MHA\_STATIC\_MHAIOPortAudio\_IOStop
- #define IORelease MHA\_STATIC\_MHAIOPortAudio\_IORelease
- #define IOSetVar MHA\_STATIC\_MHAIOPortAudio\_IOSetVar
- #define IOStrError MHA\_STATIC\_MHAIOPortAudio\_IOStrError
- #define IODestroy MHA\_STATIC\_MHAIOPortAudio\_IODestroy
- #define dummy\_interface\_test MHA\_STATIC\_MHAIOPortAudio\_dummy\_interface\_
   test

#### **Functions**

- static std::string MHAIOPortAudio::parserFriendlyName (const std::string &in)
- int portaudio\_callback (const void \*input, void \*output, unsigned long frameCount, const PaStreamCallbackTimeInfo \*timeInfo, PaStreamCallbackFlags statusFlags, void \*user← Data)
- int IOInit (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_
  handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_
  event, void \*stop\_handle, void \*\*handle)
- int IOPrepare (void \*handle, int nch\_in, int nch\_out)
- int IOStart (void \*handle)
- int IOStop (void \*handle)
- int IORelease (void \*handle)
- int IOSetVar (void \*handle, const char \*command, char \*retval, unsigned int maxretlen)
- const char \* IOStrError (void \*handle, int err)
- void IODestroy (void \*handle)
- void dummy\_interface\_test (void)

## **Variables**

- static char user\_err\_msg [MAX\_USER\_ERR] = ""
- PaStreamCallback portaudio callback

```
6.132.1 Macro Definition Documentation
6.132.1.1 #define ERR_SUCCESS 0
6.132.1.2 #define ERR IHANDLE -1
6.132.1.3 #define ERR_USER -1000
6.132.1.4 #define MAX_USER_ERR 0x500
6.132.1.5 #define IOInit MHA_STATIC_MHAIOPortAudio_IOInit
6.132.1.6 #define IOPrepare MHA STATIC MHAIOPortAudio IOPrepare
6.132.1.7 #define IOStart MHA_STATIC_MHAIOPortAudio_IOStart
6.132.1.8 #define IOStop MHA_STATIC_MHAIOPortAudio_IOStop
6.132.1.9 #define IORelease MHA_STATIC_MHAIOPortAudio_IORelease
6.132.1.10 #define IOSetVar MHA_STATIC_MHAIOPortAudio_IOSetVar
6.132.1.11 #define IOStrError MHA_STATIC_MHAIOPortAudio_IOStrError
6.132.1.12 #define IODestroy MHA_STATIC_MHAIOPortAudio_IODestroy
6.132.1.13 #define dummy_interface_test MHA_STATIC_MHAIOPortAudio_dummy_interface_test
6.132.2 Function Documentation
6.132.2.1 int portaudio_callback (
                      const void * input,
                      void * output,
                      unsigned long frameCount,
                      const PaStreamCallbackTimeInfo * timeInfo,
                      PaStreamCallbackFlags statusFlags,
                      void * userData )
6.132.2.2 int IOInit (
                      int fragsize,
                      float samplerate.
                      IOProcessEvent t proc_event,
                      void * proc_handle,
                      IOStartedEvent t start_event,
                      void * start handle.
                      IOStoppedEvent t stop_event,
                      void * stop handle,
                      void ** handle )
```

```
6.132.2.3 int IOPrepare (
                        void * handle,
                        int nch_in,
                        int nch_out )
6.132.2.4 int IOStart (
                        void * handle )
6.132.2.5 int IOStop (
                        void * handle )
6.132.2.6 int IORelease (
                        void * handle )
6.132.2.7 int IOSetVar (
                        void * handle,
                        const char * command,
                        char * retval,
                        unsigned int maxretlen )
6.132.2.8 const char* IOStrError (
                        void * handle,
                        int err )
6.132.2.9 void IODestroy (
                        void * handle )
6.132.2.10 void dummy_interface_test (
                         void )
6.132.3 Variable Documentation
6.132.3.1
          char user_err_msg[MAX_USER_ERR] = "" [static]
6.132.3.2 PaStreamCallback portaudio_callback
6.133 MHAIOTCP.cpp File Reference
```

## **Classes**

class io\_tcp\_parser\_t

The parser interface of the IOTCP library.

class io\_tcp\_sound\_t

Sound data handling of io tcp library.

union io\_tcp\_sound\_t::float\_union

This union helps in conversion of floats from host byte order to network byte order and back again.

class io\_tcp\_fwcb\_t

TCP sound-io library's interface to the framework callbacks.

class io\_tcp\_t

The tcp sound io library.

#### **Macros**

- #define ERR\_SUCCESS 0
- #define ERR IHANDLE -1
- #define ERR USER -1000
- #define MAX\_USER\_ERR 0x2000
- #define MHA\_ErrorMsg2(x, y) MHA\_Error(\_\_FILE\_\_,\_LINE\_\_,(x),(y))
- #define MHA\_ErrorMsg3(x, y, z) MHA\_Error(\_\_FILE\_\_\_,\_\_LINE\_\_\_,(x),(y),(z))
- #define MIN\_TCP\_PORT 0
- #define MIN TCP PORT STR "0"
- #define MAX\_TCP\_PORT 65535
- #define MAX\_TCP\_PORT\_STR "65535"
- #define IOInit MHA\_STATIC\_MHAIOTCP\_IOInit
- #define IOPrepare MHA\_STATIC\_MHAIOTCP\_IOPrepare
- #define IOStart MHA STATIC MHAIOTCP IOStart
- #define IOStop MHA\_STATIC\_MHAIOTCP\_IOStop
- #define IORelease MHA STATIC MHAIOTCP IORelease
- #define IOSetVar MHA\_STATIC\_MHAIOTCP\_IOSetVar
- #define IOStrError MHA\_STATIC\_MHAIOTCP\_IOStrError
- #define IODestroy MHA\_STATIC\_MHAIOTCP\_IODestroy
- #define dummy\_interface\_test MHA\_STATIC\_MHAIOTCP\_dummy\_interface\_test

## **Functions**

- static int copy error (MHA Error &e)
- static void \* thread\_startup\_function (void \*parameter)
- int IOInit (int fragsize, float samplerate, IOProcessEvent\_t proc\_event, void \*proc\_
  handle, IOStartedEvent\_t start\_event, void \*start\_handle, IOStoppedEvent\_t stop\_
  event, void \*stop\_handle, void \*\*handle)
- int IOPrepare (void \*handle, int num inchannels, int num outchannels)
- int IOStart (void \*handle)
- int IOStop (void \*handle)
- int IORelease (void \*handle)
- int IOSetVar (void \*handle, const char \*cmd, char \*retval, unsigned int len)
- const char \* IOStrError (void \*handle, int err)
- void IODestroy (void \*handle)
- void dummy\_interface\_test (void)

#### **Variables**

static char user\_err\_msg [MAX\_USER\_ERR]

```
6.133.1 Macro Definition Documentation
6.133.1.1 #define ERR_SUCCESS 0
6.133.1.2 #define ERR_IHANDLE -1
6.133.1.3 #define ERR_USER -1000
6.133.1.4 #define MAX_USER_ERR 0x2000
6.133.1.5 #define MHA_ErrorMsg2(
                      y ) MHA_Error(__FILE__,_LINE__,(x),(y))
6.133.1.6 #define MHA_ErrorMsg3(
                      z ) MHA_Error(__FILE__,__LINE__,(x),(y),(z))
6.133.1.7 #define MIN_TCP_PORT 0
6.133.1.8 #define MIN_TCP_PORT_STR "0"
6.133.1.9 #define MAX_TCP_PORT 65535
6.133.1.10 #define MAX_TCP_PORT_STR "65535"
6.133.1.11 #define IOInit MHA_STATIC_MHAIOTCP_IOInit
6.133.1.12 #define IOPrepare MHA_STATIC_MHAIOTCP_IOPrepare
6.133.1.13 #define IOStart MHA_STATIC_MHAIOTCP_IOStart
6.133.1.14 #define IOStop MHA_STATIC_MHAIOTCP_IOStop
6.133.1.15 #define IORelease MHA_STATIC_MHAIOTCP_IORelease
6.133.1.16 #define IOSetVar MHA_STATIC_MHAIOTCP_IOSetVar
6.133.1.17 #define IOStrError MHA STATIC MHAIOTCP IOStrError
6.133.1.18 #define IODestroy MHA_STATIC_MHAIOTCP_IODestroy
6.133.1.19 #define dummy_interface_test MHA_STATIC_MHAIOTCP_dummy_interface_test
```

```
6.133.2 Function Documentation
6.133.2.1 static int copy_error (
                        MHA_Error & e ) [static]
6.133.2.2 static void* thread_startup_function (
                        void * parameter ) [static]
6.133.2.3 int IOInit (
                        int fragsize,
                        float samplerate,
                        IOProcessEvent_t proc_event,
                        void * proc handle,
                        IOStartedEvent_t start_event,
                        void * start_handle,
                        IOStoppedEvent_t stop_event,
                        void * stop_handle,
                        void ** handle )
6.133.2.4 int IOPrepare (
                        void * handle,
                        int num_inchannels,
                        int num_outchannels )
6.133.2.5 int IOStart (
                        void * handle )
6.133.2.6 int IOStop (
                        void * handle )
6.133.2.7 int IORelease (
                        void * handle )
6.133.2.8 int IOSetVar (
                        void * handle,
                        const char * cmd,
                        char * retval,
                        unsigned int len )
6.133.2.9 const char* IOStrError (
                        void * handle,
                        int err )
6.133.2.10 void IODestroy (
                         void * handle )
```

#### **Functions**

- static void jack\_error\_handler (const char \*msg)
- static int dummy\_jack\_proc\_cb (jack\_nframes\_t, void \*)
- void make\_friendly\_number (jack\_default\_audio\_sample\_t &x)

#### **Variables**

- char last\_jack\_err\_msg [MAX\_USER\_ERR] = ""
- int last\_jack\_err = 0
- 6.134.1 Function Documentation

- 6.134.2 Variable Documentation
- 6.134.2.1 char last\_jack\_err\_msg[MAX\_USER\_ERR] = ""
- 6.134.2.2 int last\_jack\_err = 0
- 6.135 mhajack.h File Reference

## Classes

class MHAJack::port t

Class for one channel/port.

class MHAJack::client\_t

Generic asynchronous JACK client.

class MHAJack::client\_noncont\_t

Generic client for synchronous playback and recording of waveform fragments.

class MHAJack::client\_avg\_t

Generic JACK client for averaging a system response across time.

#### **Namespaces**

## MHAJack

Classes and functions for openMHA and JACK interaction.

#### **Macros**

- #define MHAJACK FW STARTED 1
- #define MHAJACK STOPPED 2
- #define MHAJACK\_STARTING 8
- #define IO ERROR JACK 11
- #define IO\_ERROR\_MHAJACKLIB 12
- #define MAX USER ERR 0x500

#### **Functions**

void MHAJack::io (mha\_wave\_t \*s\_out, mha\_wave\_t \*s\_in, const std::string &name, const std::vector< std::string > &p\_out, const std::vector< std::string > &p\_in, float \*srate=NULL, unsigned int \*fragsize=NULL, bool use\_jack\_transport=false)

Functional form of generic client for synchronous playback and recording of waveform fragments.

std::vector< unsigned int > MHAJack::get\_port\_capture\_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

Return the JACK port latency of ports.

std::vector< unsigned int > MHAJack::get\_port\_playback\_latency (const std::vector< std::string > &ports)

Return the JACK port latency of ports.

std::vector< int > MHAJack::get\_port\_playback\_latency\_int (const std::vector< std
 ::string > &ports)

## **Variables**

char last\_jack\_err\_msg [MAX\_USER\_ERR]

- **6.135.1** Macro Definition Documentation
- 6.135.1.1 #define MHAJACK\_FW\_STARTED 1
- 6.135.1.2 #define MHAJACK\_STOPPED 2
- 6.135.1.3 #define MHAJACK\_STARTING 8
- 6.135.1.4 #define IO\_ERROR\_JACK 11
- 6.135.1.5 #define IO\_ERROR\_MHAJACKLIB 12
- 6.135.1.6 #define MAX\_USER\_ERR 0x500
- 6.135.2 Variable Documentation
- 6.135.2.1 char last\_jack\_err\_msg[MAX\_USER\_ERR]
- 6.136 mhamain.cpp File Reference

## Classes

· class mhaserver t

MHA Framework listening on TCP port for commands.

## Macros

- #define MAX\_LINE\_LENGTH 0x100000
- #define **HELP\_TEXT**
- #define GREETING\_TEXT

#### **Functions**

- void **create\_lock** (unsigned int p, std::string s)
- void **remove\_lock** (unsigned int p)
- int mhamain (int argc, char \*argv[])

- 6.137 mhapluginloader.cpp File Reference
- 6.138 mhapluginloader.h File Reference

#### **Classes**

- class PluginLoader::config\_file\_splitter\_t
- class PluginLoader::fourway\_processor\_t

This abstract class defines the interface for classes that implement all types of signal domain processing supported by the MHA: wave2wave, spec2spec, wave2spec, and spec2wave.

- class PluginLoader::mhapluginloader t
- class MHAParser::mhapluginloader\_t

Class to create a plugin loader in a parser, including the load logic.

## **Namespaces**

- PluginLoader
- MHAParser

Name space for the openMHA-Parser configuration language.

#### **Functions**

- const char \* PluginLoader::mhastrdomain (mha\_domain\_t)
- void PluginLoader::mhaconfig\_compare (const mhaconfig\_t &req, const mhaconfig←
   \_t &avail, const std::string &pref="")

Compare two **mhaconfig\_t** (p. 470) structures, and report differences as an error.

## 6.139 mhasndfile.cpp File Reference

#### **Functions**

- void write\_wave (const mha\_wave\_t &sig, const char \*fname, const float &srate, const int &format)
- unsigned int validator\_channels (std::vector< int > channel\_map, unsigned int channels)
- unsigned int **validator\_length** (unsigned int maxlen, unsigned int frames, unsigned int startpos)

#### 6.139.1 Function Documentation

```
6.139.1.1 void write_wave (

const mha_wave_t & sig,
const char * fname,
const float & srate,
const int & format )
```

## 6.140 mhasndfile.h File Reference

#### Classes

class MHASndFile::sf\_tclass MHASndFile::sf\_wave\_t

## **Namespaces**

MHASndFile

#### **Functions**

 void write\_wave (const mha\_wave\_t &sig, const char \*fname, const float &srate=44100, const int &format=SF\_FORMAT\_WAV|SF\_FORMAT\_FLOAT|SF\_ENDIAN\_FILE)

```
6.140.1 Function Documentation
```

```
6.140.1.1 void write_wave (

const mha_wave_t & sig,

const char * fname,

const float & srate = 44100,

const int & format = SF_FORMAT_WAV|SF_FORMAT_FLOAT|SF_ENDIAN←

_FILE )
```

6.141 multibandcompressor.cpp File Reference

## Classes

- class multibandcompressor::plugin\_signals\_t
- class multibandcompressor::fftfb\_plug\_t
- class multibandcompressor::interface t

### **Namespaces**

- multibandcompressor
- 6.142 nlms wave.cpp File Reference

### **Classes**

- · class rt nlms t
- · class nlms\_t

#### **Macros**

- #define NORMALIZATION\_TYPES "[none default sum]"
- #define NORM NONE 0
- #define NORM DEFAULT 1
- #define NORM\_SUM 2
- #define ESTIMATION\_TYPES "[previous current]"
- #define ESTIM\_PREV 0
- #define ESTIM\_CUR 1

#### **Functions**

```
    void make_friendly_number_by_limiting (mha_real_t &x)
```

```
6.142.1 Macro Definition Documentation
```

```
6.142.1.1 #define NORMALIZATION_TYPES "[none default sum]"
```

```
6.142.1.2 #define NORM NONE 0
```

6.142.1.3 #define NORM\_DEFAULT 1

```
6.142.1.4 #define NORM_SUM 2
```

6.142.1.5 #define ESTIMATION\_TYPES "[previous current]"

```
6.142.1.6 #define ESTIM_PREV 0
```

6.142.1.7 #define ESTIM CUR 1

6.142.2 Function Documentation

# 6.143 noise.cpp File Reference

#### **Classes**

- · class cfg\_t
- class noise\_t

## 6.144 noisePowProposedScale.cpp File Reference

## Classes

- class noisePowProposedScale::noisePowProposed
- class noisePowProposedScale::interface t

## **Namespaces**

noisePowProposedScale

## **Macros**

• #define **POWSPEC\_FACTOR** 0.0025

6.144.1 Macro Definition Documentation

6.144.1.1 #define POWSPEC\_FACTOR 0.0025

6.145 overlapadd.cpp File Reference

## Classes

- class overlapadd::overlapadd\_t
- class overlapadd::overlapadd\_if\_t

## Namespaces

overlapadd

6.146 plingploing.cpp File Reference

## Classes

class plingploing::plingploing\_t

Run-time configuration of the plingploing music generator.

• class plingploing::if\_t

Plugin class of the plingploing music generator.

## **Namespaces**

plingploing

All classes for the plingploing music generator live in this namespace.

## **Functions**

double plingploing::drand (double a, double b)

- 6.147 pluginbrowser.cpp File Reference
- 6.148 pluginbrowser.h File Reference

#### Classes

- class plugindescription\_t
- · class pluginloader\_t
- class pluginbrowser\_t
- 6.149 prediction\_error.cpp File Reference

#### **Macros**

- #define PATCH\_VAR(var) patchbay.connect(&var.valuechanged, this, &prediction\_
  error::update\_cfg)
- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)

#### **Functions**

- void make\_friendly\_number\_by\_limiting (mha\_real\_t &x)
- 6.149.1 Macro Definition Documentation
- 6.149.1.2 #define INSERT\_PATCH(

  var ) insert\_member(var); PATCH\_VAR(var)
- 6.149.2 Function Documentation
- 6.150 prediction\_error.h File Reference

#### Classes

- class prediction\_error\_config
- class prediction\_error

# 6.151 resampling.cpp File Reference

#### Classes

- class MHAPlugin\_Resampling::resampling\_t
- class MHAPlugin\_Resampling::resampling\_if\_t

## **Namespaces**

- MHAPlugin\_Resampling
- 6.152 rmslevel.cpp File Reference

## Classes

- class mon\_t
- class rmslevel\_t
- · class rmslevel\_if\_t
- 6.153 route.cpp File Reference

#### Classes

- class route::process t
- class route::interface\_t

## **Namespaces**

- route
- 6.154 save\_spec.cpp File Reference

# Classes

- class save\_spec\_t
- 6.155 save\_wave.cpp File Reference

#### Classes

class save\_wave\_t

6.156 shadowfilter\_begin.cpp File Reference

## Classes

- class shadowfilter\_begin::cfg\_t
- class shadowfilter\_begin::shadowfilter\_begin\_t

# **Namespaces**

- shadowfilter\_begin
- 6.157 shadowfilter\_end.cpp File Reference

#### Classes

- class shadowfilter\_end::cfg\_t
- class shadowfilter\_end::shadowfilter\_end\_t

## **Namespaces**

- · shadowfilter\_end
- 6.158 sine.cpp File Reference

## Classes

- struct sine\_cfg\_t
- class sine\_t
- 6.159 smoothgains\_bridge.cpp File Reference

#### **Classes**

- class smoothgains\_bridge::smoothspec\_wrap\_t
- class smoothgains\_bridge::overlapadd\_if\_t

## **Namespaces**

smoothgains\_bridge

## 6.160 softclip.cpp File Reference

#### Classes

- · class cfg\_t
- · class softclip\_t

## 6.161 spec2wave.cpp File Reference

#### Classes

- class hanning\_ramps\_t
- class spec2wave\_t
- class spec2wave\_if\_t

## **Functions**

- unsigned int **max** (unsigned int a, unsigned int b)
- unsigned int **min** (unsigned int a, unsigned int b)
- 6.161.1 Function Documentation

- 6.162 speechnoise.cpp File Reference

#### **Macros**

- #define NUM ENTR MHAORIG 76
- #define **NUM\_ENTR\_LTASS** 25
- #define NUM\_ENTR\_OLNOISE 49

## **Functions**

- float **fhz2bandno** (float x)
- float erb\_hz\_f\_hz (float f\_hz)
- float hz2hz (float x)

Dummy scale transformation Hz to Hz.

float bandw\_correction (float f, float ldb)

#### **Variables**

- float vMHAOrigSpec [NUM\_ENTR\_MHAORIG] = {-1.473, 0, -4.939, -10.14, -13.94, -14.83, -14.27, -15.66, -16.16, -18.22, -20.5, -21.23, -22.13, -22.58, -23.98, -26.58, -26.4, -25.15, -23.89, -25.54, -27, -30.15, -31.68, -30.14, -27.55, -25.79, -25.89, -26.11, -27. ← 48, -30.37, -33.13, -36.23, -36.64, -36.35, -35.03, -35.48, -36.35, -37.95, -40.53, -42.37, -41.29, -38.49, -36.32, -34.85, -34.05, -33.81, -33.48, -34.1, -35.19, -36.29, -36.94, -37. ← 53, -38.71, -38.7, -38.92, -40.36, -41.26, -42.19, -43.65, -44.37, -43.95, -43.15, -42.57, -41.57, -41.86, -42.34, -42.87, -42.35, -42.71, -42.85, -43.47, -47.43, -67.54, -76.3, -77. ← 43, -77.43}
- float **vMHAOrigFreq** [**NUM\_ENTR\_MHAORIG**] =  $\{172.266,344.532,516.797,689. \leftarrow 063,861.329,1033.59,1205.86,1378.13,1550.39,1722.66,1894.92,2067.19,2239. \leftarrow 46,2411.72,2583.99,2756.25,2928.52,3100.78,3273.05,3445.32,3617.58,3789.85,3962. \leftarrow 11,4134.38,4306.64,4478.91,4651.18,4823.44,4995.71,5167.97,5340.24,5512.51,5684. \leftarrow 77,5857.04,6029.3,6201.57,6373.83,6546.1,6718.37,6890.63,7062.9,7235.16,7407. \leftarrow 43,7579.69,7751.96,7924.23,8096.49,8268.76,8441.02,8613.29,8785.56,8957.82,9130. \leftarrow 09,9302.35,9474.62,9646.88,9819.15,9991.42,10163.7,10335.9,10508.2,10680. \leftarrow 5,10852.7,11025,11197.3,11369.5,11541.8,11714.1,11886.3,12058.6,12230.9,12403. \leftarrow 1,12575.4,12747.7,12919.9,13092.2\}$
- float vLTASS\_freq [NUM\_ENTR\_LTASS] = {63, 80, 100, 125, 160, 200, 250, 315, 400, 500, 630, 800, 1000, 1250, 1600, 2000, 2500, 3150, 4000, 5000, 6300, 8000, 10000, 12500, 16000}
- float vLTASS\_combined\_lev [NUM\_ENTR\_LTASS] = {38.6, 43.5, 54.4, 57.7, 56.8, 60.2, 60.3, 59.0, 62.1, 62.1, 60.5, 56.8, 53.7, 53.0, 52.0, 48.7, 48.1, 46.8, 45.6, 44.5, 44.3, 43.7, 43.4, 41.3, 40.7}
- float vLTASS\_female\_lev [NUM\_ENTR\_LTASS] =  $\{37.0,36.0,37.5,40.1,53.4,62.2,60. \leftarrow 9,58.1,61.7,61.7,60.4,58,54.3,52.3,51.7,48.8,47.3,46.7,45.3,44.6,45.2,44.9,45.0,42. \leftarrow 8,41.1\}$
- float vLTASS\_male\_lev [NUM\_ENTR\_LTASS] =  $\{38.6, 43.5, 54.4, 57.7, 56.8, 58.2, 59. \leftarrow 7,60.0,62.4,62.6,60.6,55.7,53.1,53.7,52.3,48.7,48.9,47.0,46.0,44.4,43.3,42.4,41.9,39. \leftarrow 8.40.4\}$
- float **vOlnoiseFreq** [**NUM\_ENTR\_OLNOISE**] =  $\{62.5, 70.1539, 78.7451, 88.3884, 99. \leftarrow 2126, 111.362, 125, 140.308, 157.49, 176.777, 198.425, 222.725, 250, 280.616, 314.98, 353. \leftarrow 553, 396.85, 445.449, 500, 561.231, 629.961, 707.107, 793.701, 890.899, 1000, 1122. \leftarrow 46, 1259.92, 1414.21, 1587.4, 1781.8, 2000, 2244.92, 2519.84, 2828.43, 3174.8, 3563. \leftarrow 59, 4000, 4489.85, 5039.68, 5656.85, 6349.6, 7127.19, 8000, 8979.7, 10079.4, 11313. \leftarrow 7, 12699.2, 14254.4, 16000$
- float vOlnoiseLev [NUM\_ENTR\_OLNOISE] =  $\{45.9042,38.044,48.9444,61.3697,67. \leftarrow 6953,69.7451,71.6201,71.2431,65.2754,63.2547,70.2264,72.1434,73.4433,73.2659,69. \leftarrow 8424,71.0132,70.9577,70.3492,68.691,64.8436,64.0435,64.2879,60.5889,60.6596,60. \leftarrow 3727,61.2003,61.8477,61.1478,61.2312,58.6584,57.2892,56.8299,56.0191,53.3018,56. \leftarrow 0525,54.3592,50.8823,55.992,54.6768,47.2616,46.9914,45.209,50.413,47.5848,43. \leftarrow 3215,43.754,38.5773,-0.39427,5.74224\}$
- 6.162.1 Macro Definition Documentation
- 6.162.1.1 #define NUM\_ENTR\_MHAORIG 76
- 6.162.1.2 #define NUM ENTR LTASS 25

```
6.162.1.3 #define NUM_ENTR_OLNOISE 49
```

6.162.2 Function Documentation

```
6.162.2.1 float fhz2bandno ( float x )
```

```
6.162.2.2 float erb_hz_f_hz ( float f_hz )
```

```
6.162.2.3 float hz2hz ( float x )
```

Dummy scale transformation Hz to Hz.

This function implements a dummy scale transformation (linear frequency scale).

#### **Parameters**

```
x \mid \text{Input frequency in Hz}
```

#### **Returns**

Frequency in Hz

```
6.162.2.4 float bandw_correction (
float f,
float ldb )
```

- 6.162.3 Variable Documentation
- 6.162.3.1 float vMHAOrigSpec[NUM\_ENTR\_MHAORIG] = {-1.473, 0, -4.939, -10.14, -13.94, -14.83, -14.27, -15.66, -16.16, -18.22, -20.5, -21.23, -22.13, -22.58, -23.98, -26.58, -26.4, -25.15, -23.89, -25.54, -27, -30.15, -31.68, -30.14, -27.55, -25.79, -25.89, -26.11, -27.48, -30.37, -33.13, -36.23, -36.64, -36.35, -35.03, -35.48, -36.35, -37.95, -40.53, -42.37, -41.29, -38.49, -36.32, -34.85, -34.05, -33.81, -33.48, -34.1, -35.19, -36.29, -36.94, -37.53, -38.71, -38.7, -38.92, -40.36, -41.26, -42.19, -43.65, -44.37, -43.95, -43.15, -42.57, -41.57, -41.86, -42.34, -42.87, -42.35, -42.71, -42.85, -43.47, -47.43, -67.54, -76.3, -77.43, -77.43}
- 6.162.3.2 float vMHAOrigFreq[NUM\_ENTR\_MHAORIG] =  $\{172.266,344.532,516.797,689.063,861. \leftarrow 329,1033.59,1205.86,1378.13,1550.39,1722.66,1894.92,2067.19,2239.46,2411.72,2583.99,2756. \leftarrow 25,2928.52,3100.78,3273.05,3445.32,3617.58,3789.85,3962.11,4134.38,4306.64,4478.91,4651. \leftarrow 18,4823.44,4995.71,5167.97,5340.24,5512.51,5684.77,5857.04,6029.3,6201.57,6373.83,6546. \leftarrow 1,6718.37,6890.63,7062.9,7235.16,7407.43,7579.69,7751.96,7924.23,8096.49,8268.76,8441. \leftarrow 02,8613.29,8785.56,8957.82,9130.09,9302.35,9474.62,9646.88,9819.15,9991.42,10163.7,10335. \leftarrow 9,10508.2,10680.5,10852.7,11025,11197.3,11369.5,11541.8,11714.1,11886.3,12058.6,12230. \leftarrow 9,12403.1,12575.4,12747.7,12919.9,13092.2\}$

- 6.162.3.3 float vLTASS\_freq[NUM\_ENTR\_LTASS] = {63, 80, 100, 125, 160, 200, 250, 315, 400, 500, 630, 800, 1000, 1250, 1600, 2000, 2500, 3150, 4000, 5000, 6300, 8000, 10000, 12500, 16000}
- 6.162.3.4 float vLTASS\_combined\_lev[NUM\_ENTR\_LTASS] = {38.6, 43.5, 54.4, 57.7, 56.8, 60.2, 60.3, 59.0, 62.1, 62.1, 60.5, 56.8, 53.7, 53.0, 52.0, 48.7, 48.1, 46.8, 45.6, 44.5, 44.3, 43.7, 43.4, 41.3, 40.7}
- 6.162.3.5 float vLTASS\_female\_lev[NUM\_ENTR\_LTASS] = {37.0,36.0,37.5,40.1,53.4,62.2,60.9,58. ← 1,61.7,61.7,60.4,58,54.3,52.3,51.7,48.8,47.3,46.7,45.3,44.6,45.2,44.9,45.0,42.8,41.1}
- 6.162.3.6 float vLTASS\_male\_lev[NUM\_ENTR\_LTASS] = {38.6,43.5,54.4,57.7,56.8,58.2,59.7,60.0,62. 4,62.6,60.6,55.7,53.1,53.7,52.3,48.7,48.9,47.0,46.0,44.4,43.3,42.4,41.9,39.8,40.4}
- 6.162.3.7 float vOlnoiseFreq[NUM\_ENTR\_OLNOISE] =  $\{62.5, 70.1539, 78.7451, 88.3884, 99.2126, 111. \leftarrow 362, 125, 140.308, 157.49, 176.777, 198.425, 222.725, 250, 280.616, 314.98, 353.553, 396.85, 445. \leftarrow 449, 500, 561.231, 629.961, 707.107, 793.701, 890.899, 1000, 1122.46, 1259.92, 1414.21, 1587.4, 1781. \leftarrow 8, 2000, 2244.92, 2519.84, 2828.43, 3174.8, 3563.59, 4000, 4489.85, 5039.68, 5656.85, 6349.6, 7127. \leftarrow 19, 8000, 8979.7, 10079.4, 11313.7, 12699.2, 14254.4, 16000$
- 6.162.3.8 float vOlnoiseLev[NUM\_ENTR\_OLNOISE] =  $\{45.9042,38.044,48.9444,61.3697,67.6953,69. \leftarrow 7451,71.6201,71.2431,65.2754,63.2547,70.2264,72.1434,73.4433,73.2659,69.8424,71.0132,70. \leftarrow 9577,70.3492,68.691,64.8436,64.0435,64.2879,60.5889,60.6596,60.3727,61.2003,61.8477,61. \leftarrow 1478,61.2312,58.6584,57.2892,56.8299,56.0191,53.3018,56.0525,54.3592,50.8823,55.992,54. \leftarrow 6768,47.2616,46.9914,45.209,50.413,47.5848,43.3215,43.754,38.5773,-0.39427,5.74224\}$
- 6.163 speechnoise.h File Reference

## Classes

- class speechnoise\_t
- 6.164 split.cpp File Reference

## Classes

class MHAPlugin\_Split::uni\_processor\_t

An interface to a class that sports a process method with no parameters and no return value.

class MHAPlugin\_Split::thread\_platform\_t

Basic interface for encapsulating thread creation, thread priority setting, and synchronization on any threading platform (i.e., pthreads or win32threads).

class MHAPlugin Split::dummy threads t

Dummy specification of a thread platform: This class implements everything in a single thread.

class MHAPlugin\_Split::posix\_threads\_t

Posix threads specification of thread platform.

class MHAPlugin\_Split::domain\_handler\_t

Handles domain-specific partial input and output signal.

class MHAPlugin\_Split::splitted\_part\_t

The **splitted\_part\_t** (p. 713) instance manages the plugin that performs processing on the reduced set of channels.

class MHAPlugin\_Split::split\_t

Implements split plugin.

### Namespaces

MHAPlugin\_Split

#### Macros

• #define MHAPLUGIN\_OVERLOAD\_OUTDOMAIN

This define modifies the definition of MHAPLUGIN\_CALLBACKS and friends.

- #define posixthreads 1
- #define default\_thread\_platform\_string "posix"
- #define default\_thread\_platform\_type posix\_threads\_t

#### **Enumerations**

#### 6.164.1 Detailed Description

Source code for the split plugin. The split plugin splits the audio signal by channel. The splitted paths execute in parallel.

- 6.164.2 Macro Definition Documentation
- 6.164.2.1 #define MHAPLUGIN\_OVERLOAD\_OUTDOMAIN

This define modifies the definition of MHAPLUGIN\_CALLBACKS and friends.

The output signal is transferred through a second parameter to the process method, enabling all four domain transformations in a single plugin.

- 6.164.2.2 #define posixthreads 1
- 6.164.2.3 #define default\_thread\_platform\_string "posix"
- 6.164.2.4 #define default\_thread\_platform\_type posix\_threads\_t
- 6.165 steerbf.cpp File Reference

### **Macros**

- #define INSERT\_PATCH(var) insert\_member(var); PATCH\_VAR(var)

#### 6.165.1 Macro Definition Documentation

```
6.165.1.1 #define PATCH_VAR(
```

var ) patchbay.connect(&var.valuechanged, this, &steerbf::update\_cfg)

6.165.1.2 #define INSERT\_PATCH(

var ) insert\_member(var); PATCH\_VAR(var)

6.166 steerbf.h File Reference

#### Classes

- class parser\_int\_dyn
- class steerbf\_config
- · class steerbf

## 6.167 testalsadevice.c File Reference

### **Functions**

- int main (int argc, char \*\*argv)
- 6.167.1 Function Documentation
- 6.167.1.1 int main ( int *argc*, char \*\* *argv* )
- 6.168 timoconfig.cpp File Reference

### **Macros**

- #define LPSCALE (5.2429e+007)
- #define POWSPEC\_FACTOR 0.0025
- #define **OVERLAP\_FACTOR** 2
- #define **EPSILON** (1e-10)
- #define **CHANLOOP** for (unsigned int c=0; c<nchan; ++c)

```
6.168.1 Macro Definition Documentation
```

- 6.168.1.1 #define LPSCALE (5.2429e+007)
- 6.168.1.2 #define POWSPEC\_FACTOR 0.0025
- 6.168.1.3 #define OVERLAP FACTOR 2
- 6.168.1.4 #define EPSILON (1e-10)
- 6.168.1.5 #define CHANLOOP for (unsigned int c=0; c<nchan; ++c)
- 6.169 timoconfig.h File Reference

### **Classes**

- · class timo AC
- class timo\_params
- class timoConfig
- 6.170 timoSmooth.cpp File Reference

## **Macros**

- #define INSERT\_VAR(var) insert\_item(#var, &var)
- #define INSERT\_PATCH(var) INSERT\_VAR(var); PATCH\_VAR(var)
- 6.170.1 Macro Definition Documentation
- 6.170.1.1 #define INSERT\_VAR(

  var ) insert\_item(#var, &var)
- 6.170.1.2 #define PATCH\_VAR(

var ) patchbay.connect(&var.valuechanged, this, &timoSmooth::on\_model\_param\_valuechanged)

6.170.1.3 #define INSERT\_PATCH(

var ) INSERT\_VAR(var); PATCH\_VAR(var)

6.171 timosmooth.h File Reference

## Classes

· class timoSmooth

# 6.172 transducers.cpp File Reference

#### Classes

- class softclipper\_variables\_t
- · class softclipper\_t
- class calibrator\_variables\_t
- class calibrator\_runtime\_layer\_t
- · class calibrator t
- class bbcalib\_interface\_t

## **Typedefs**

- typedef MHAPlugin::config\_t< MHASignal::async\_rmslevel\_t > rmslevelmeter
- typedef MHAPlugin::plugin\_t< calibrator\_runtime\_layer\_t > rtcalibrator

## **Functions**

- speechnoise\_t::noise\_type\_t kw\_index2type (unsigned int idx)
- std::vector< int > vint\_0123n1 (unsigned int n)
- 6.172.1 Typedef Documentation
- 6.172.1.1 typedef MHAPlugin::config\_t<MHASignal::async\_rmslevel\_t> rmslevelmeter
- 6.172.1.2 typedef MHAPlugin::plugin\_t<calibrator\_runtime\_layer\_t> rtcalibrator
- 6.172.2 Function Documentation
- 6.172.2.2 std::vector<int> vint\_0123n1 ( unsigned int *n* )
- 6.173 upsample.cpp File Reference

### **Classes**

class us\_t

## 6.174 wave2spec.cpp File Reference

#### Classes

- class wave2spec\_t
- class wave2spec\_if\_t

#### **Macros**

- #define MHAPLUGIN\_OVERLOAD\_OUTDOMAIN
- 6.174.1 Macro Definition Documentation
- 6.174.1.1 #define MHAPLUGIN\_OVERLOAD\_OUTDOMAIN
- 6.175 wavrec.cpp File Reference

#### Classes

- class wavwriter\_t
- class wavrec\_t

#### **Macros**

- #define **DEBUG**(x) std::cerr << \_\_FILE\_\_ << ":" << \_\_LINE\_\_ << " " << #x << "=" << x << std::endl
- 6.175.1 Macro Definition Documentation
- 6.176 windowselector.cpp File Reference
- 6.177 windowselector.h File Reference

### Classes

class windowselector\_t

A combination of mha parser variables to describe an overalapadd analysis window.

## Index

MHA_FUN	acPooling_wave, 154
mha_defs.h, 948	~acPooling_wave_config
attribute	acPooling_wave_config, 156
mha_plugin.hh, 971	~acSteer
declspec	acSteer, 166
example5.cpp, 932	~acSteer_config
example6.cpp, 932	acSteer_config, 168
mha_defs.h, 948	~acTransform_wave
mha_plugin.hh, 971	acTransform_wave, 170
_cf	~acTransform_wave_config
DynComp::dc_afterburn_t, 282	acTransform_wave_config, 172
_channels	~acmon_t
DynComp::dc_afterburn_t, 282	acmon::acmon_t, 151
_conjugate	~acspace2matrix_t
Complex arithmetics in the openMHA, 67	MHA_AC::acspace2matrix_t, 386
_linphase_asym	~adm_rtconfig_t
	adm_rtconfig_t, 192
MHAFilter::smoothspec_t, 534 _reciprocal	~algo_comm_class_t
Complex arithmetics in the openMHA, 68	MHAKernel::algo_comm_class_t, 570
•	<del>-</del>
_srate DynComp::dc afterburn t, 282	~analysepath_t
• = = = -	analysepath_t, 203
_steerbf	~analysispath_if_t
steerbf_config, 892	analysispath_if_t, 206
~Async_Notify	~bark2hz_t
MHA_TCP::Async_Notify, 435	MHAOvlFilter::barkscale::bark2hz_t, 579
~Connection	~base_t
MHA_TCP::Connection, 439	MHAParser::base_t, 602
~Delay	~bbcalib_interface_t
ADM::Delay, 185	bbcalib_interface_t, 215
~Event_Watcher	~blockprocessing_polyphase_resampling_t
MHA_TCP::Event_Watcher, 445	MHAFilter::blockprocessing_polyphase ←
~Linearphase_FIR	_resampling_t, 484
ADM::Linearphase_FIR, 187	$\sim$ c_ifc_parser_t
~MHA_Error	MHAParser::c_ifc_parser_t, 614
MHA_Error, 414	$\sim$ cfg_chain_t
~Server	MHAPlugin::cfg_chain_t, 685
MHA_TCP::Server, 448	∼cfg_t
$\sim$ Thread	acsave::cfg_t, 161
MHA_TCP::Thread, 455	$\sim$ config_t
$\sim$ Timeout_Watcher	MHAPlugin::config_t, 688
MHA_TCP::Timeout_Watcher, 458	$\sim$ connector_base_t
$\sim$ Wakeup_Event	MHAEvents::connector_base_t, 472
MHA_TCP::Wakeup_Event, 460	~connector_t
$\sim$ acConcat_wave	MHAEvents::connector_t, 475
acConcat_wave, 144	$\sim$ db_if_t
~acConcat_wave_config	 db_if_t, 236
acConcat_wave_config, 147	~delay_spec_t
~acPooling_wave	MHASignal::delay_spec_t, 728
	•

$\sim$ delay_t	MHA_AC::int_t, 390
MHASignal::delay_t, 729	~io_file_t
~delay_wave_t	io_file_t, 337
MHASignal::delay_wave_t, 731	~io_lib_t
~doasvm_classification	io_lib_t, 341
doasvm_classification, 266	~io_parser_t
~doasvm_classification_config	io_parser_t, 344
doasym_classification_config, 268	~io portaudio t
~doasvm_feature_extraction	MHAIOPortAudio::io_portaudio_t, 552
doasvm_feature_extraction, 270	~io_tcp_fwcb_t
~doasvm_feature_extraction_config	io_tcp_fwcb_t, 347
doasvm_feature_extraction_config, 272	~io_tcp_parser_t
~domain_handler_t	io_tcp_parser_t, 351
MHAPlugin_Split::domain_handler_t, 700	~io_tcp_sound_t
~double t	io_tcp_sound_t, 356
MHA_AC::double_t, 388	~io_tcp_t
~doublebuffer_t	io_tcp_t, 361
MHASignal::doublebuffer_t, 733	~linear_table_t
~dynamiclib t	MHATableLookup::linear_table_t, 788
dynamiclib_t, 278	~lpc
~emitter_t	lpc, 365
MHAEvents::emitter_t, 477	~lpc_bl_predictor
∼fft t	lpc_bl_predictor, 368
 MHASignal::fft_t, <del>735</del>	~lpc_bl_predictor_config
$\sim$ fftfb t	lpc_bl_predictor_config, 370
MHAOvlFilter::fftfb_t, 582	~lpc_burglattice
~fftfilter_t	lpc_burglattice, 372
MHAFilter::fftfilter_t, 491	~lpc_burglattice_config
$\sim$ fftfilterbank t	lpc_burglattice_config, 374
MHAFilter::fftfilterbank_t, 495	~lpc_config
~filter_t	lpc_config, 376
MHAFilter::filter_t, 499	~matrix_t
$\sim$ float_t	MHASignal::matrix_t, 747
MHA_AC::float_t, 389	~mha_dblbuf_t
~fourway_processor_t	mha_dblbuf_t, 403
PluginLoader::fourway_processor_t, 840	~mha_fifo_lw_t
$\sim$ fw_t	mha_fifo_lw_t, 416
	~mha_fifo_posix_threads_t
$\sim$ gaintable_t	mha_fifo_posix_threads_t, 419
DynComp::gaintable_t, 287	~mha_fifo_t
$\sim$ gamma_flt_t	mha_fifo_t, 422
MHAFilter::gamma_flt_t, 502	$\sim$ mha_fifo_thread_guard_t
~hanning_ramps_t	mha_fifo_thread_guard_t, 425
hanning_ramps_t, 330	~mha_fifo_thread_platform_t
~hilbert_shifter_t	mha_fifo_thread_platform_t, 426
hilbert_shifter_t, 332	~mha_rt_fifo_element_t
~hilbert_t	mha_rt_fifo_element_t, 429
MHASignal::hilbert_t, 739	~mha_rt_fifo_t
~hz2bark_t	mha_rt_fifo_t, 430
MHAOvlFilter::barkscale::hz2bark_t, 580	~mhaplug_cfg_t
∼int_t	mhaplug_cfg_t, 684

$\sim$ mhapluginloader_t	spec_fader_t, 887
MHAParser::mhapluginloader_t, 648	~spectrum_t
PluginLoader::mhapluginloader_t, 844	MHA AC::spectrum t, 392
~mhaserver_t	MHASignal::spectrum_t, 764
mhaserver_t, 724	~split_t
~overlapadd_if_t	MHAPlugin_Split::split_t, 711
overlapadd::overlapadd_if_t, 822	~splitted_part_t
smoothgains_bridge::overlapadd_if_←	MHAPlugin_Split::splitted_part_t, 715
t, 876	~steerbf
~overlapadd_t	steerbf, 890
• —	~steerbf config
overlapadd::overlapadd_t, 824	steerbf_config, 892
~parser_t	~table t
MHAParser::parser_t, 653	MHATableLookup::table_t, 791
~partitioned_convolution_t	~thread_platform_t
MHAFilter::partitioned_convolution_t, 522	<del>-</del>
~patchbay_t	MHAPlugin_Split::thread_platform_t, 719
MHAEvents::patchbay_t, 478	~timoConfig
~plug_t	timoConfig, 898
plug_t, 833	~timoSmooth
~plugin_t	timoSmooth, 901
MHAPlugin::plugin_t, 692	~uint_vector_t
~pluginloader_t	MHASignal::uint_vector_t, 772
pluginloader_t, 848	~uni_processor_t
~plugs_t	MHAPlugin_Split::uni_processor_t, 721
mhachain::plugs_t, 468	$\sim$ wave2spec_t
~port_t	wave2spec_t, 908
MHAJack::port_t, 567	$\sim$ waveform_t
~posix_threads_t	MHA_AC::waveform_t, 395
MHAPlugin_Split::posix_threads_t, 707	MHASignal::waveform_t, 776
~prediction_error	$\sim$ wavwriter_t
prediction_error, 849	wavwriter_t, 912
~prediction_error_config	$\sim$ windowselector_t
	windowselector_t, 914
prediction_error_config, 852	
~rt_nlms_t	A
rt_nlms_t, 861	lpc_config, 377
~save_var_base_t	MHAFilter::filter_t, 500
ac2lsl::save_var_base_t, 131	MHAFilter::gamma_flt_t, 503
~save_var_t	MHAFilter::iir_filter_t, 508
ac2lsl::save_var_t, 132	a
ac2lsl::save_var_t< mha_complex_t >,	MHAParser::base_t::replace_t, 608
134	A_
acsave::save_var_t, 163	MHAFilter::complex_bandpass_t, 488
$\sim$ sf_t	MHAFilter::iir_ord1_real_t, 511
MHASndFile::sf_t, 785	AC_DIM_MISMATCH
$\sim$ sine t	mha_algo_comm.cpp, 945
 sine_t, 874	AC INVALID HANDLE
~smoothspec_t	mha_algo_comm.cpp, 945
MHAFilter::smoothspec_t, 533	AC INVALID NAME
~spec2wave_t	mha_algo_comm.cpp, 945
spec2wave_t, 885	AC INVALID OUTPTR
~spec_wave_t, 000	mha_algo_comm.cpp, 945
· -3pco_iauci_i	1111a_aigo_coiiiiii.cpp, 343

AC_STRING_TRUNCATED	process, 187
mha_algo_comm.cpp, 945	ADM, 79
AC_SUCCESS	ADM::ADM, 182
mha_algo_comm.cpp, 945	C, 80
AC TYPE MISMATCH	DELAY FREQ, 80
mha_algo_comm.cpp, 945	PI, 80
ACSAVE FMT MAT4	START_BETA, 80
acsave.cpp, 919	subsampledelay_coeff, 79
ACSAVE_FMT_TXT	ALGO_COMM_ID_STR
acsave.cpp, 919	mha_algo_comm.hh, 947
ACSAVE FMT M	ASSERT_EQUAL_DIM_PTR
acsave.cpp, 919	mha_signal.cpp, 976
ACSAVE_SFMT_MAT4	ASSERT EQUAL DIM
acsave.cpp, 919	mha_signal.cpp, 976
ACSAVE_SFMT_TXT	ASYNC_CONNECT_STARTED
acsave.cpp, 919	mha_tcp.cpp, 988
ACSAVE_SFMT_M	abandonned
acsave.cpp, 919	mha_rt_fifo_element_t, 429
ADM::ADM< F >, 181	abs
ADM::ADM	Complex arithmetics in the openMHA, 66
ADM, 182	abs2
beta, 183	Complex arithmetics in the openMHA, 66
m_beta, 183	ac
m_decomb, 183	ac2wave_t, 142
m_delay_back, 183	acConcat_wave_config, 147
m_delay_front, 183	acPooling_wave_config, 156
m_lp_bf, 183	acTransform_wave_config, 172
m_lp_result, 183	acmon::acmon_t, 152
m mu beta, 183	acsave::cfg_t, 162
m_powerfilter_coeff, 183	acsave::save_var_t, 164
m_powerfilter_norm, 183	doasym_classification_config, 268
m_powerfilter_state, 183	fw_t, 324
process, 182	latex_doc_t, 364
ADM::Delay	lpc_bl_predictor_config, 370
∼Delay, 185	lpc_burglattice_config, 374
Delay, 184	MHA_AC::ac2matrix_helper_t, 382
m coeff, 185	MHA_AC::double_t, 388
m_fullsamples, 185	MHA AC::float t, 389
m norm, 185	MHA_AC::int_t, 390
m_now_in, 185	MHA AC::spectrum t, 393
m state, 185	MHA_AC::waveform_t, 396
process, 185	MHAKernel::algo_comm_class_t, 571
ADM::Delay< F >, 184	MHAMultiSrc::base_t, 573
ADM::Linearphase_FIR< F >, 186	MHAPlugin::plugin_t, 694
ADM::Linearphase_FIR	mhachain::plugs_t, 468
~Linearphase_FIR, 187	PluginLoader::mhapluginloader_t, 846
• —	,
Linearphase_FIR, 186	prediction_error_config, 852
m_alphas, 187	rt_nlms_t, 861 shadowfilter_end::cfg_t, 870
m_now, 187 m_order, 187	
	steerbf_config, 892
m_output, 187	timoConfig, 898

AC variable, 4	framerate, 139
ac2lsl, 77	host, 138
ac2lsl.cpp, 916	lo addr, 139
ac2lsl::ac2lsl_t, 125	mode, 139
ac2lsl t, 127	patchbay, 139
activate, 128	port, 138
patchbay, 128	prepare, 137
prepare, 127	process, 137, 138
process, 127	release, 138
release, 128	rt_strict, 139
rt_strict, 128	rtmem, 139
skip, 128	send_osc_float, 138
update, 128	skip, 139
varlist, 128	skipont, 139
vars, 128	ttl, 138
ac2lsl::cfg_t, 128	update_mode, 138
activate, 130	vars, 139
cfg_t, 129	ac2wave.cpp, 916
process, 129	ac2wave_if_t, 140
skip, 130	ac2wave_if_t, 141
skipcnt, 130	delay_ac, 141
varlist, 130	delay_in, 141
ac2lsl::save_var_base_t, 130	gain_ac, 141
∼save_var_base_t, 131	gain_in, 141
send_frame, 131	name, 141
ac2lsl::save_var_t	patchbay, 141
∼save_var_t, 132	prepare, 141
buf, 133	prepared, 141
save_var_t, 132	process, 141
send_frame, 133	release, 141
stream, 133	update, 141
ac2lsl::save_var_t< mha_complex_t >, 133	zeros, 141
∼save_var_t, 134	ac2wave_t, 142
buf, 135	ac, 142
num_entries, 135	ac2wave_t, 142
save_var_t, 134	channels, 142
send frame, 135	delay_ac, 143
stream, 135	delay_in, 143
vec, 135	frames, 142
ac2lsl::save_var_t< T >, 131	gain_ac, 143
ac2lsl_t	gain_in, 143
ac2lsl::ac2lsl t, 127	name, 143
ac2matrix_helper_t	process, 142
MHA_AC::ac2matrix_helper_t, 381	w, 142
ac2matrix t	ac_
MHA_AC::ac2matrix_t, 383	combc_t, 231
<del>-</del>	<del>-</del> ·
ac2osc.cpp, 916	MHAParser::mhapluginloader_t, 649
ac2osc_t, 136	ac_fifo
ac2osc_t, 137	analysepath_t, 204
acspace, 139	ac_monitor_t
b_record, 139	acmon::ac_monitor_t, 148

ac_monitor_type.cpp, 917	$\sim$ acPooling_wave_config, 156
ac_monitor_type.hh, 917	ac, 156
acConcat_wave, 143	acPooling_wave_config, 156
$\sim$ acConcat_wave, 144	alpha, 157
acConcat_wave, 144	c, 157
name_conAC, 146	insert, 156
num_AC, 146	like_ratio, 157
patchbay, 146	low thresh, 157
prefix_names_AC, 146	neigh, 157
prepare, 144	p, 157
process, 144	p_max, 157
release, 146	pool, 157
samples_AC, 146	pooling_ind, 157
update_cfg, 146	pooling_option, 157
acConcat_wave.cpp, 917	pooling_size, 157
INSERT PATCH, 917	process, 156
PATCH_VAR, 917	raw_p_name, 157
acConcat_wave.h, 917	up_thresh, 157
acConcat_wave_config, 146	acSteer, 165
~acConcat_wave_config, 147	~acSteer, 166
ac, 147	acSteer, 166
acConcat_wave_config, 147	acSteerName1, 167
numSamples_AC, 147	acSteerName2, 167
process, 147	nrefmic, 167
•	
strNames_AC, 147	nsteerchan, 167
vGCC_con, 147	patchbay, 167
vGCC, 147	prepare, 166
acPooling_wave, 153	process, 166
~acPooling_wave, 154	release, 166
acPooling_wave, 154	steerFile, 167
alpha, 155	update_cfg, 167
like_ratio_name, 155	acSteer.cpp, 919
lower_threshold, 155	INSERT_PATCH, 919
max_pool_ind_name, 155	PATCH_VAR, 919
neighbourhood, 155	acSteer.h, 919
numsamples, 155	acSteer_config, 167
p_name, 155	~acSteer_config, 168
patchbay, 155	acSteer_config, 168
pool_name, 155	insert, 168
pooling_type, 155	nangle, 168
pooling_wndlen, 155	nchan, 168
prepare, 154	nfreq, 168
process, 154	nrefmic, 168
release, 155	nsteerchan, 168
update_cfg, 155	specSteer1, 168
upper_threshold, 155	specSteer2, 168
acPooling_wave.cpp, 918	acSteerName1
INSERT_PATCH, 918	acSteer, 167
PATCH_VAR, 918	acSteerName2
acPooling_wave.h, 918	acSteer, 167
acPooling_wave_config, 156	acTransform_wave, 169

$\sim$ acTransform_wave, 170	mon_mat, 149
acTransform_wave, 170	mon_mat_complex, 149
ang_name, 171	name, 149
numsamples, 171	p_parser, 150
patchbay, 171	use_mat, 150
prepare, 170	acmon::acmon_t, 150
process, 170	$\sim$ acmon_t, 151
raw_p_max_name, 171	ac, 152
raw_p_name, 171	acmon_t, 151
release, 170	algo, 152
rotated_p_max_name, 171	b_cont, 152
rotated_p_name, 171	b_snapshot, 152
to from, 171	chain, 152
update_cfg, 171	dimensions, 152
acTransform_wave.cpp, 920	dispmode, 152
INSERT PATCH, 920	patchbay, 152
PATCH_VAR, 920	prepare, 151
acTransform_wave.h, 920	process, 152
acTransform_wave_config, 171	recmode, 152
~acTransform wave config, 172	release, 151
	save vars, 152
ac, 172	_ '
acTransform_wave_config, 172	update_recmode, 152
ang_name, 172	varlist, 152
offset, 172	vars, 152
process, 172	acmon_t
raw_p_max_name, 172	acmon::acmon_t, 151
raw_p_name, 172	acsave, 78
resolution, 172	acsave.cpp, 918
rotated_i, 172	ACSAVE_FMT_MAT4, 919
rotated_p, 172	ACSAVE_FMT_TXT, 919
to_from, 172	ACSAVE_FMT_M, 919
accept	ACSAVE_SFMT_MAT4, 919
MHA_TCP::Server, 448	ACSAVE_SFMT_TXT, 919
accept_event	ACSAVE_SFMT_M, 919
MHA_TCP::Server, 449	acsave::acsave_t, 158
accept_loop	acsave_t, 159
io_tcp_t, 361	algo, 160
acceptor_started	b_flushed, 160
mhaserver_t, 724	b_prepared, 160
ack_fail	bflush, 160
mhaserver_t, 725	chain, 160
ack_ok	event_start_recording, 160
mhaserver_t, 725	event_stop_and_flush, 160
acmon, 77	fileformat, 160
acmon.cpp, 917	fname, 160
acmon::ac_monitor_t, 147	patchbay, 160
ac_monitor_t, 148	prepare, 159
dimstr, 149	process, 159, 160
getvar, 149	reclen, 160
mon, 149	release, 159
mon_complex, 149	variables, 160
•	

varlist, 160	addsndfile::addsndfile_if_t, 175
varlist_t, 159	acvar
acsave::cfg_t, 161	MHA_AC::ac2matrix_helper_t, 382
~cfg_t, 161	adapt_filter_param_t
ac, 162	MHAFilter::adapt_filter_param_t, 480
cfg_t, 161	adapt_filter_state_t
flush_data, 161	MHAFilter::adapt_filter_state_t, 481
max_frames, 162	adapt_filter_t
nvars, 162	MHAFilter::adapt_filter_t, 482
rec_frames, 162	add
store frame, 161	MHASignal::loop wavefragment t, 741
varlist, 162	add_entry
acsave::mat4head_t, 162	MHAParser::keyword_list_t, 633
cols, 162	MHATableLookup::linear_table_t, 789
imag, 162	MHATableLookup::xy table t, 794
namelen, 162	add_fun
rows, 162	MHAOvlFilter::scale_var_t, 598
t, 162	add_parent_on_insert
acsave::save_var_t, 163	MHAParser::base t, 606
~save_var_t, 163	add_plug
ac, 164	altplugs_t, 202
b_complex, 164	add_plugin
data, 164	pluginbrowser_t, 836
	<u> </u>
framecnt, 164	add_plugins
maxframe, 164	pluginbrowser_t, 836
name, 164	add_replace_pair
ndim, 164	MHAParser::base_t, 606
nframes, 164	added_via_plugs
save_m, 164	altplugs_t, 202
save_mat4, 163	addsndfile, 78
save_txt, 163	addsndfile_resampling_mode_t, 78
save_var_t, 163	DO_RESAMPLE, 78
store_frame, 163	DONT_RESAMPLE_PERMISSIVE, 78
acsave_t	DONT_RESAMPLE_STRICT, 78
acsave::acsave_t, 159	level_adaptor, 78
acspace	resampled_num_frames, 79
ac2osc_t, 139	wave_reader, 78
acspace2matrix_t	addsndfile.cpp, 920
MHA_AC::acspace2matrix_t, 385	DEBUG, 921
acspace_template	addsndfile::addsndfile_if_t, 173
analysispath_if_t, 206	active, 175
act_	addsndfile_if_t, 174
wavwriter_t, 912	change_mode, 175
actgains	channels, 175
fader_if_t, 305	filename, 175
activate	level, 175
ac2lsl::ac2lsl_t, 128	levelmode, 175
ac2lsl::cfg_t, 130	loop, 175
activate_query	mapping, 175
MHAParser::base_t, 606	mhachannels, 175
active	mode, 175

numchannels, 175	decomb_order, 190
patchbay, 175	distances, 190
path, 175	front_channels, 190
prepare, 174	input_channels, 190
process, 174	is_prepared, 190
ramplen, 175	lp_order, 190
release, 174	mu_beta, 190
resamplingmode, 175	out, 190
scan_dir, 175	patchbay, 190
search_pattern, 175	prepare, 189
search_result, 175	process, 189
set level, 175	rear_channels, 190
startpos, 175	release, 189
uint_mode, 175	srate, 190
update, 174	tau_beta, 190
addsndfile::level_adapt_t, 176	update, 189
can_update, 177	adm_rtconfig_t, 190
get_level, 177	~adm_rtconfig_t, 192
ilen, 177	adm, 193
I_new, 177	adm_rtconfig_t, 191
	adm t, 191
level_adapt_t, 176	adms, 193
pos, 177	check_index, 192
update_frame, 177	decomb_coeffs, 193
wnd, 177	front_channel, 193
addsndfile::resampled_soundfile_t, 177	front_channels, 193
resampled_soundfile_t, 178	lp_coeffs, 193
addsndfile::sndfile_t, 179	num_adms, 192
sndfile t, 179	rear channel, 193
addsndfile::waveform_proxy_t, 180	rear_channels, 193
waveform_proxy_t, 181	adm_t
addsndfile_if_t	adm_rtconfig_t, 191
addsndfile::addsndfile_if_t, 174	adms
addsndfile_resampling_mode_t	adm_rtconfig_t, 193
addsndfile, 78	algo
adm	acmon::acmon_t, 152
adm_rtconfig_t, 193	acsave::acsave_t, 160
adm.cpp, 921	analysispath_if_t, 206
adm_fir_decomb, 922	coherence::cohflt_if_t, 224
adm_fir_lp, 922	db_if_t, 237
adm.hh, 922	dc::dc_if_t, 240
adm_fir_decomb	fftfilterbank::fftfb_interface_t, 316
adm.cpp, 922	MHAPlugin_Resampling::resampling_if
adm_fir_lp	_t, 696
adm.cpp, 922	multibandcompressor::interface_t, 810
adm_if_t, 188	nlms_t, 814
adm_if_t, 189	overlapadd::overlapadd_if_t, 823
beta, 190	route::interface_t, 858
bypass, 190	smoothgains_bridge::overlapadd_if_←
coeff_decomb, 190	t, 877
coeff_lp, 190	wave2spec_if_t, 906

algo_comm_class_t	timoSmooth, 903
MHAKernel::algo_comm_class_t, 570	alpha_const_vals
algo_comm_default	timo_params, 896
mha_algo_comm.cpp, 945	timoSmooth, 903
mha_algo_comm.hh, 947	alpha_frame
algo_comm_id_string	timoConfig, 899
MHAKernel::algo_comm_class_t, 571	alpha_frame_AC
algo_comm_id_string_len	timo AC, 894
MHAKernel::algo_comm_class_t, 571	alpha_hat
algo comm safe cast	timoConfig, 899
MHAKernel, 98	alpha_hat_AC
algo_comm_t, 194	timo_AC, 894
get_entries, 198	alpha_pitch
get_error, 198	timo_params, 896
get_var, 197	timoSmooth, 902
get_var_float, 197	alpha_prev
get_var_int, 197	timoConfig, 899
handle, 194	alphaPH1mean
insert_var, 194	noisePowProposedScale::interface_t, 818
insert_var_float, 195	alphaPH1mean
insert_var_int, 195	noisePowProposedScale::noisePow⊷
is_var, 196	Proposed, 820
mha.h, 944	alphaPSD_
remove_ref, 196	noisePowProposedScale::noisePow⊷
remove_var, 195	Proposed, 820
algo_name	alphaPSD
lpc, 366	noisePowProposedScale::interface_t, 818
algos	altplugs.cpp, 923
MHAPlugin_Split::split_t, 712	MHAPLUGIN_OVERLOAD_OUTDOM←
mhachain::chain_base_t, 465	AIN, 923
mhachain::plugs_t, 468	altplugs_t, 199
	• •
all_dump	add_plug, 202
MHAParser, 107	added_via_plugs, 202
all_ids	altplugs_t, 200
MHAParser, 107	cfin, 202
alloc_plugs	cfout, 202
mhachain::plugs_t, 468	current, 202
almost	delete_plug, 202
Complex arithmetics in the openMHA, 68	event_add_plug, 201
alph	event_delete_plug, 201
plingploing::plingploing_t, 832	event_select_plug, 201
alpha	event_set_plugs, 201
acPooling_wave, 155	fallback_spec, 202
acPooling_wave_config, 157	fallback_wave, 202
cfg_t, 222	nondefault_labels, 202
coherence::cohflt_t, 226	parse, 201
coherence::vars_t, 228	parser_plugs, 202
alpha_const	patchbay, 202
timoConfig, 898	plugs, 202
alpha_const_limits_hz	prepare, 200
timo_params, 896	prepared, 202

proc_ramp, 201	fragsize, 206
process, 201	libname, 206
ramp_counter, 202	loadlib, 206
ramp_len, 202	patchbay, 206
ramplen, 202	plug, 206
release, 200	prepare, 206
select_plug, 202	priority, 206
selected_plug, 202	process, 206
update_ramplen, 201	release, 206
update_selector_list, 201	vars, 206
use_own_ac, 202	analytic
amplitude	hilbert_shifter_t, 332
sine_cfg_t, 873	ang_name
analysemhaplugin.cpp, 923	acTransform_wave, 171
main, 923	acTransform wave config, 172
print_ac, 923	angle
strdom, 923	Complex arithmetics in the openMHA, 63
analysepath_t, 203	angle_ind
~analysepath_t, 203	steerbf, 891
ac_fifo, 204	angle_src
analysepath_t, 203	steerbf, 891
attr, 204	angles
cond_to_process, 204	doasvm_classification, 267
flag_terminate_inner_thread, 204	announce_port
has inner_error, 204	mhaserver_t, 725
inner_ac_copy, 204	antialias
inner_error, 204	ds_t, 277
inner_input, 204	us_t, 904
inner_out_domain, 204	
	apply_gains MHAOvlFilter::fftfb_t, 582
inner_process_wave2spec, 204 inner_process_wave2wave, 204	multibandcompressor::plugin_signals_t,
input_to_process, 204	811
libdata, 204	aquire_mutex
outer_ac, 204	• —
	mha_fifo_posix_threads_t, 419
outer_ac_copy, 204	mha_fifo_thread_platform_t, 427
priority, 204 ProcessMutex, 204	arg
·	MHA_TCP::Thread, 455
rt_process, 204 scheduler, 204	assign
	MHASignal::waveform_t, 780
svc, 204	Vector and matrix processing toolbox, 48,
thread, 204	
wave_fifo, 204	assign_channel
analysispath.cpp, 923	MHASignal::waveform_t, 780
thread_start, 924	assign_frame
analysispath_if_t, 205	MHASignal::waveform_t, 780
∼analysispath_if_t, 206	Async_Notify
acspace_template, 206	MHA_TCP::Async_Notify, 435
algo, 206	async_poll_msg
analysispath_if_t, 206	fw_t, 324
chain, 206	async_read
fifolen, 206	fw_t, 324

async_rmslevel_t	MHAFilter::filter_t, 500
MHASignal::async_rmslevel_t, 726	MHAFilter::iir_filter_t, 508
attack	b
cfg_t, 222	doasvm_classification, 267
dc::dc_t, 242	MHAParser::base_t::replace_t, 608
dc_simple::level_smoother_t, 258	B_
softclip_t, 880	MHAFilter::complex_bandpass_t, 488
softclipper_t, 881	MHAFilter::iir_ord1_real_t, 511
attr	b check version
analysepath_t, 204	PluginLoader::mhapluginloader_t, 847
MHAPlugin_Split::posix_threads_t, 708	b_complex
auditory_profile.cpp, 924	acsave::save_var_t, 164
auditory profile.h, 924	b_cont
AuditoryProfile, 80	acmon::acmon_t, 152
AuditoryProfile::fmap_t, 207	b est
get_frequencies, 207	lpc_bl_predictor_config, 370
get values, 207	b exit request
isempty, 207	fw_t, 325
AuditoryProfile::parser_t, 208	b flushed
get_current_profile, 209	<del>_</del>
L, 209	acsave::acsave_t, 160
parser_t, 209	b_fw_started
R, 209	io_parser_t, 345
AuditoryProfile::parser_t::ear_t, 209	b_is_input
ear_t, 210	calibrator_runtime_layer_t, 217
get_ear, 210	calibrator_t, 219
HTL, 210	b_is_prepared
UCL, 210	PluginLoader::mhapluginloader_t, 847
AuditoryProfile::parser_t::fmap_t, 210	b_loop
f, 211	MHASignal::loop_wavefragment_t, 743
fmap_t, 211	b_ltg
get_fmap, 211	coherence::cohflt_t, 227
name_, 211	b_prepared
patchbay, 211	acsave::acsave_t, 160
validate, 211	io_file_t, 339
value, 211	io_parser_t, 345
AuditoryProfile::profile t, 212	MHAJack::client_t, 565
get_ear, 212	mhachain::chain_base_t, 465
L, 213	mhachain::plugs_t, 468
R, 213	b_ready
AuditoryProfile::profile t::ear t, 213	MHAJack::client_avg_t, 556
convert_empty2normal, 213	b_record
HTL, 213	ac2osc_t, 139
UCL, 213	b_snapshot
average	acmon::acmon_t, 152
coherence::vars_t, 228	b_starting
avg_ipd	io_parser_t, 345
<del>-</del>	b_stopped
coherence::cohflt_t, 226 azimuth	io_parser_t, 345
mha_direction_t, 406	MHAJack::client_avg_t, 556
1111a_u1166ti011_t, 400	MHAJack::client_noncont_t, 558
В	b use clipping

calibrator_runtime_layer_t, 217	bbcalib_interface_t, 215
b_use_fir	calib_in, 215
calibrator_runtime_layer_t, 217	calib_out, 215
b use profiling	plugloader, 215
mhachain::plugs_t, 469	prepare, 215
BARKSCALE ENTRIES	process, 215
mha_fftfb.cpp, 955	release, 215
blnvert	bbgain
coherence::cohflt_t, 227	gain::gain_if_t, 328
backward	beta
lpc_bl_predictor_config, 370	ADM::ADM, 183
lpc_burglattice_config, 375	adm_if_t, 190
MHASignal::fft_t, 736	beta_const
backward_scale	timo_params, 896
MHASignal::fft_t, 736	timoSmooth, 902
band_weights	bf_src
dc::dc_vars_t, 245	steerbf, 891
bands	bf src copy
dc::wideband inhib vars t, 249	steerbf_config, 892
MHAOvIFilter::fspacing_t, 591	bf_vec
bandw correction	steerbf_config, 892
speechnoise.cpp, 1022	bflush
bark2hz_t	acsave::acsave_t, 160
MHAOvlFilter::barkscale::bark2hz_t, 579	bin1
bartlett	MHAOvlFilter::fftfb_t, 583
MHAWindow, 122	bin2
bartlett_t	MHAOvlFilter::fftfb_t, 583
MHAWindow::bartlett_t, 796	bin2freq
	Vector and matrix processing toolbox, 44
base_t MHAMultiSrc::base_t, 573	blackman
MHAParser::base t, 602	
<u> </u>	MHAWindow, 122
MHAWindow::base_t, 797, 798	blackman_t
basename	MHAWindow::blackman_t, 799
save_spec_t, 864	blockprocessing_polyphase_resampling_t
save_wave_t, 866	MHAFilter::blockprocessing_polyphase
shadowfilter_begin::shadowfilter_begin →	_resampling_t, 484
_t, 869	blocks
shadowfilter_end::shadowfilter_end_  →	droptect_t, 275
t, 872	bookkeeping
bass	MHAFilter::partitioned_convolution_t, 523
plingploing::plingploing_t, 831	MHAParser::mhapluginloader_t, 649
bassmod	bool_mon_t
plingploing::if_t, 829	MHAParser::bool_mon_t, 609
bassmod_	bool_t
plingploing::plingploing_t, 832	MHAParser::bool_t, 612
bassperiod	bpm
plingploing::if_t, 830	plingploing::if_t, 829
bassperiod_	bprofiling
plingploing::plingploing_t, 832	mhachain::chain_base_t, 465
bbcalib_interface_t, 214	bracket_balance
$\sim$ bbcalib_interface_t, 215	MHAParser::StrCnv, 109

brown	dc::dc_vars_t, 245
speechnoise_t, 888	bwv
browsemhaplugins.cpp, 924 DEBUG, 925	MHAOvlFilter::fftfb_ac_info_t, 581 multibandcompressor::fftfb_plug_t, 808
main, 925	bypass
bt	adm_if_t, 190
plingploing::plingploing_t, 831	db_if_t, 237
	db_n_t, 237 dc::dc_t, 242
buf	dc::dc_t, 242 dc::dc_vars_t, 245
ac2lsl::save_var_t, 133	dc_simple::dc_vars_t, 256
ac2lsl::save_var_t< mha_complex_t >, 135	DynComp::dc_afterburn_vars_t, 284
mha_fifo_t, 424	C
mha_spec_t, 433	ADM, 80
mha_wave_t, 463	C
buf_c_in	acPooling_wave_config, 157
MHASignal::hilbert_fftw_t, 738	doasvm_classification_config, 268
buf_c_out	io_tcp_sound_t::float_union, 359
MHASignal::hilbert_fftw_t, 738	nlms t, 814
buf_in	prediction_error, 850
MHASignal::fft_t, 737	c1_a
buf_out	MHAFilter::o1_ar_filter_t, 514
MHASignal::fft_t, 737	c1 r
buf_r_in	MHAFilter::o1_ar_filter_t, 514
MHASignal::hilbert_fftw_t, 738	c2_a
buf_r_out	MHAFilter::o1_ar_filter_t, 514
MHASignal::hilbert_fftw_t, 738	c2_r
buf_uses_placement_new	MHAFilter::o1_ar_filter_t, 514
mha_fifo_t, 424	c ifc parser t
buffer	MHAParser::c_ifc_parser_t, 614
MHASignal::delay_spec_t, 728	c min
MHASignal::delay_t, 730	coherence::cohflt_t, 226
MHASignal::delay_wave_t, 731	c_parse_cmd
buffered_incoming_bytes	MHAParser::c_ifc_parser_t, 615
MHA_TCP::Connection, 443	c_parse_cmd_t
buffered_outgoing_bytes	MHAParser, 107
MHA_TCP::Connection, 443	c_parse_err
burn	MHAParser::c_ifc_parser_t, 615
DynComp::dc_afterburn_rt_t, 279	c_parse_err_t
DynComp::dc_afterburn_t, 281	MHAParser, 107
multibandcompressor::interface_t, 810	c scale
butter_stop_ord1	coherence::cohflt_t, 226
MHAFilter, 93	CHANLOOP
bw	timoconfig.cpp, 1026
MHAOvlFilter::fscale_bw_t, 588	CHECK EXPR
bw_	mha_defs.h, 948
MHAFilter::gamma_flt_t, 504	CHECK VAR
bw_generator	mha_defs.h, 948
MHAFilter::thirdoctave_analyzer_t, 535	cLTASS
bw_hz	MHAOvlFilter::fftfb_ac_info_t, 581
MHAOvlFilter::fscale_bw_t, 588	MHAOvlFilter::fftfb_vars_t, 586
bw name	calc_in

wave2spec_t, 909	srate, 220
calc_out	tau_level, 220
overlapadd::overlapadd_t, 825	can_read
spec2wave_t, 886	MHAFilter::blockprocessing_polyphase
calc_pre_wnd	_resampling_t, 485
wave2spec_t, 908	can_read_bytes
calib_in	MHA_TCP::Connection, 441
bbcalib_interface_t, 215	can_read_line
calib_out	MHA TCP::Connection, 441
bbcalib_interface_t, 215	can_sysread
calibrator_runtime_layer_t, 215	MHA_TCP::Connection, 439
b_is_input, 217	can_syswrite
b_use_clipping, 217	MHA_TCP::Connection, 439
b_use_fir, 217	can_update
calibrator runtime layer t, 216	addsndfile::level_adapt_t, 177
fir, 216	fader_wave::level_adapt_t, 309
firfir2fftlen, 216	catch_condition
firfirlen, 216	MHAPlugin_Split::posix_threads_t, 708
gain, 216	catch_thread
pmode, 217	MHAPlugin_Split::dummy_threads_t, 704
process, 216	MHAPlugin_Split::posix_threads_t, 707
quant, 216	MHAPlugin_Split::thread_platform_t, 720
softclip, 216	categories
speechnoise, 217	plugindescription_t, 837
calibrator_t, 217	cdata
b_is_input, 219	MHASignal::matrix_t, 752
calibrator_t, 218	mha_audio_t, 398
patchbay, 219	center_frequencies
prepared 010	dc::dc_vars_t, 245
prepared, 219	dc_simple::dc_if_t, 251
process, 218	of MILA Filha muthinda atau a surah man ti 505
read_levels, 219	MHAFilter::thirdoctave_analyzer_t, 535
release, 218	MHAOvIFilter::band_descriptor_t, 578
update, 219	MHAOvIFilter::fftfb_vars_t, 586
update_tau_level, 219	mha_audio_descriptor_t, 397
vars, 219	plingploing::plingploing_t, 831
calibrator_variables_t, 219	cf2bands
calibrator_variables_t, 220	MHAOvlFilter::fspacing_t, 591
config_parser, 220	cf_
do_clipping, 220	MHAFilter::gamma_flt_t, 504
fir, 220	wavwriter_t, 912
fragsize, 220	cf_generator
nbits, 220	MHAFilter::thirdoctave_analyzer_t, 535
num_channels, 220	cf_h
peaklevel, 220	MHAOvlFilter::band_descriptor_t, 578
rmslevel, 220	cf_in
softclip, 220	overlapadd::overlapadd_if_t, 823
spnoise_channels, 220	smoothgains_bridge::overlapadd_if_←
spnoise_level, 220	t, 877
spnoise_mode, 220	cf_in_
spnoise_parser, 220	MHAParser::mhapluginloader_t, 649

cf_input	fw_t, 325
PluginLoader::mhapluginloader_t, 847	mhachain::chain_base_t, 465
cf_l	route::interface_t, 858
MHAOvlFilter::band_descriptor_t, 578	cfout
cf_name	altplugs_t, 202
dc::dc_vars_t, 245	fw_t, 325
cf_out	mhachain::chain_base_t, 465
overlapadd::overlapadd_if_t, 823	route::interface_t, 858
smoothgains_bridge::overlapadd_if_←	cfv
t, 877	MHAOvIFilter::fftfb_ac_info_t, 580
cf_out_	multibandcompressor::fftfb_plug_t, 808
MHAParser::mhapluginloader_t, 649	cg
cf_output	coherence::cohflt_t, 226
PluginLoader::mhapluginloader_t, 847	ch
cfac	MHASignal::doublebuffer t, 734
route::interface t, 858	chain
cfg	acmon::acmon_t, 152
MHAPlugin::config_t, 690	acsave::acsave t, 160
cfg_	analysispath_if_t, 206
MHAFilter::thirdoctave_analyzer_t, 535	db if t, 237
cfg_chain	MHAPlugin_Resampling::resampling_if↔
MHAPlugin::config_t, 690	_t, 696
cfg_chain_current	mhachain::chain_base_t, 465
MHAPlugin::config_t, 690	mhachain::plugs_t, 469
cfg_chain_t	chain_base_t
MHAPlugin::cfg_chain_t, 685	mhachain::chain_base_t, 464
cfg_dump	chains
MHAParser, 107	MHAPlugin_Split::split_t, 713
cfg_dump_short	change_mode
MHAParser, 107	addsndfile::addsndfile_if_t, 175
cfg_t, 221	channel
ac2lsl::cfg_t, 129	cfg_t, 222
	example5_t, 302
acsave::cfg_t, 161 alpha, 222	• —
attack, 222	MHAMultiSrc::channel_t, 574
•	channel_gain_name
cfg_t, 221	combc_if_t, 230
channel, 222	channel_gains_
decay, 222	combc_t, 231
frozen_noise_, 222	channel_info
gain_spec_, 222	mha_spec_t, 433
gain_wave_, 222	mha_wave_t, 463
matrixmixer::cfg_t, 378	channel_no
pos, 222	example6_t, 303
process, 222	channelconfig_out_
replace_, 222	MHAOvlFilter::overlap_save_filterbank_t,
shadowfilter_begin::cfg_t, 867	595
shadowfilter_end::cfg_t, 870	channels
start_lin, 222	ac2wave_t, 142
use_frozen_, 222	addsndfile::addsndfile_if_t, 175
cfin	dc::wideband_inhib_vars_t, 249
altplugs_t, 202	MHAFilter::fftfilter_t, 492

MHAFilter::filter_t, 501	MHAJack::client_t, 561
MHAParser::mhaconfig_mon_t, 646	clientid
MHAPlugin_Split::split_t, 712	dc::dc_vars_t, 245
MHASignal::delay_t, 730	dc_simple::dc_if_t, 251
mhaconfig t, 471	clientname
prediction_error_config, 853	MHAIOJack::io_jack_t, 542
rt_nlms_t, 861	MHAIOJackdb::io_jack_t, 547
sine_cfg_t, 873	clipmeter
sine_t, 875	softclipper_t, 881
Vector and matrix processing toolbox, 41	clipped
channels t	softclipper_variables_t, 883
MHAMultiSrc::channels_t, 574	close_session
chdir	wavwriter_t, 912
mha_audio_descriptor_t, 397	closed
check_index	MHA_TCP::Connection, 443
adm_rtconfig_t, 192	closesocket
check low	mha_tcp.cpp, 988
MHAParser::range_var_t, 658	cmd_prepare
check_range	MHAIOPortAudio::io_portaudio_t, 552
MHAParser::range_var_t, 659	cmd_release
check_sound_data_type	MHAIOPortAudio::io_portaudio_t, 553
io_tcp_sound_t, 357	cmd_start
check_up	MHAIOPortAudio::io_portaudio_t, 552
MHAParser::range_var_t, 659	cmd_stop
chname	MHAIOPortAudio::io_portaudio_t, 552
dc::dc_vars_t, 245	
chunkbytes_in	co matrixmixer::matmix_t, 380
· —	coeff_decomb
io_tcp_sound_t, 357	<del>_</del>
	adm_if_t, 190
matrixmixer::matmix_t, 380	coeff_lp
cleanup_plugs	adm_if_t, 190
mhachain::plugs_t, 468	coh_c
cleanup_unused_cfg	coherence::cohflt_t, 227
MHAPlugin::config_t, 690	coh_rlp
clear	coherence::cohflt_t, 227
MHATableLookup::linear_table_t, 789	coherence, 80
MHATableLookup::table_t, 791	getcipd, 81
MHATableLookup::xy_table_t, 794	coherence.cpp, 925
mha_fifo_t, 424	coherence::cohflt_if_t, 223
Vector and matrix processing toolbox, 48	algo, 224
clear_chains	cohflt_if_t, 224
MHAPlugin_Split::split_t, 711	patchbay, 224
clear_plugins	prepare, 224
pluginbrowser_t, 836	process, 224
Client	release, 224
MHA_TCP::Client, 436	update, 224
client_avg_t	vars, 224
MHAJack::client_avg_t, 555	coherence::cohflt_t, 225
client_noncont_t	alpha, 226
MHAJack::client_noncont_t, 558	avg_ipd, 226
client_t	b_ltg, 227

bInvert, 227	combc_t, 230
c_min, 226	ac_, 231
c_scale, 226	channel_gains_, 231
cg, 226	combc_t, 231
coh_c, 227	element_gain_name_, 231
coh_rlp, 227	interleaved_, 231
cohflt_t, 226	nbands, 231
g, 226	process, 231
gain, 227	s_out, 231
gain_delay, 227	w_out, 231
insert, 226	combinechannels.cpp, 925
limit, 226	comm_var_t, 232
lp1i, 226	data, 233
lp1ltg, 227	data_type, 232
lp1r, 226	num_entries, 232
nbands, 226	stride, 233
process, 226	commentate
s_out, 227	MHAParser, 107
staticgain, 227	commit
coherence::vars_t, 227	DynComp::dc_afterburn_vars_t, 284
alpha, 228	commit_pending
average, 228	DynComp::dc_afterburn_t, 282
delay, 228	commit_t
invert, 228	MHAParser::commit_t, 617
limit, 228	Communication between algorithms, 27
Itgcomp, 228	get_var_float, 29
Itgtau, 228	get_var_int, 29
mapping, 228	get_var_spectrum, 28
staticgain, 228	get_var_vfloat, 30
tau, 228	get_var_waveform, 29
tau_unit, 228	comp_each_iter
vars_t, 228	lpc, 366
cohflt_if_t	lpc_config, 376
coherence::cohflt_if_t, 224	comp_iter
cohflt_t	lpc_config, 377
coherence::cohflt_t, 226	Complex arithmetics in the openMHA, 60
collect_result	_conjugate, 67
MHAPlugin_Split::split_t, 711	_reciprocal, 68
MHAPlugin_Split::splitted_part_t, 717	abs, 66
colored_intensity	abs2, 66
Vector and matrix processing toolbox, 56	almost, 68
cols	angle, 63
acsave::mat4head_t, 162	conjugate, 67
combc_if_t, 229	expi, 63, 65
channel_gain_name, 230	mha_complex, 62
combc_if_t, 230	normalize, 68
element_gain_name, 230	operator!=, 67
interleaved, 230	operator<, 68
outchannels, 230	operator*, 65, 66
prepare, 230	operator*=, 65
process, 230	operator+, 64

operator+=, 64	connect_input
operator-, 64, 65, 67	MHAJack::client_t, 562
operator-=, 64	connect_output
operator/, 66, 67	MHAJack::client_t, 562
operator/=, 66	connect_to
operator==, 67	MHAJack::port_t, 568
reciprocal, 67	connected
safe_div, 66	io_tcp_parser_t, 354
set, 62, 63	Connection
stdcomplex, 63	MHA_TCP::Connection, 439
complex_bandpass_t	connection_loop
MHAFilter::complex_bandpass_t, 487	io_tcp_t, 361
complex_filter.cpp, 925	connections
complex_filter.h, 925	MHAEvents::emitter_t, 477
complex_mon_t	connections in
MHAParser::complex mon t, 618	MHAIOJack::io_jack_t, 542
complex_ofs	MHAIOJackdb::io_jack_t, 547
MHASignal::matrix t, 752	connections out
complex_t	MHAIOJack::io_jack_t, 542
MHAParser::complex_t, 620	MHAIOJackdb::io_jack_t, 547
compression	connector
dc_simple::dc_t, 253	MHAFilter::adapt_filter_t, 483
compute_something	MHAFilter::iir_filter_t, 508
cpuload_t, 234	MHAParser::mhapluginloader_t, 649
compute_something_else	connector_base_t
cpuload_t, 235	MHAEvents::connector_base_t, 472
Concept of Variables and Data Exchange in	connector_t
the openMHA, 4	MHAEvents::connector_t, 475
cond_to_process	cons
analysepath_t, 204	MHAEvents::patchbay_t, 479
config_file_splitter_t	consecutive_dropouts
PluginLoader::config_file_splitter_t, 838	droptect_t, 275
config_parser	contained_frames
calibrator_variables_t, 220	MHASignal::ringbuffer_t, 757
config_t	conv2latex
MHAPlugin::config_t, 688	generatemhaplugindoc.cpp, 935
configfile	convert_empty2normal
PluginLoader::config_file_splitter_t, 839	AuditoryProfile::profile t::ear t, 213
configname	convert_f2logf
PluginLoader::config_file_splitter_t, 839	gaintable.cpp, 934
configuration, 4	сору
configuration variable, 4	MHASignal::spectrum t, 765
conflux	MHASignal::waveform_t, 781
DynComp::dc_afterburn_rt_t, 280	timo_AC, 893
DynComp::dc_afterburn_vars_t, 284	copy_AC
conjugate	timoConfig, 898
Complex arithmetics in the openMHA, 67	copy_channel
Vector and matrix processing toolbox, 59	MHASignal::spectrum_t, 766
connect	MHASignal::waveform_t, 781
MHAEvents::emitter_t, 477	Vector and matrix processing toolbox, 55
MHAEvents::patchbay_t, 478, 479	copy_error
<sub> -</sub> <del></del> , <del></del> , <del>-</del> -	1.4

MHAIOTCP.cpp, 1008	browsemhaplugins.cpp, 925
copy_from_at	fader_wave.cpp, 933
MHASignal::waveform_t, 781	MHAIOFile.cpp, 993
copy_output_spec	wavrec.cpp, 1028
MHAPlugin_Split::split_t, 711	DEFAULT_RETSIZE
copy_output_wave	mha_parser.hh, 969
MHAPlugin_Split::split_t, 711	DELAY_FREQ
copy_permuted	ADM, 80
MHASignal, 120	DO_RESAMPLE
corr_out	addsndfile, 78
lpc_config, 377	DONT_RESAMPLE_PERMISSIVE
cpuload.cpp, 926	addsndfile, 78
cpuload_t, 233	DONT_RESAMPLE_STRICT
compute_something, 234	addsndfile, 78
compute_something_else, 235	DUPVEC
cpuload_t, 234	dc.cpp, 927
factor, 235	data
phase, 235	acsave::save_var_t, 164
prepare, 234	comm_var_t, 233
process, 234	DynComp::gaintable_t, 289
result, 235	MHA_AC::acspace2matrix_t, 387
table, 235	MHA_AC::double_t, 388
use_sine, 235	MHA_AC::float_t, 389
create_latex_doc	MHA_AC::int_t, 390
generatemhaplugindoc.cpp, 935	MHAParser::bool_mon_t, 610
create_lock	MHAParser::bool_t, 612
mhamain.cpp, 1012	MHAParser::complex_mon_t, 619
creator	MHAParser::complex_t, 621
speechnoise_t, 889	MHAParser::float_mon_t, 624
creator_A MHAFilter::complex_bandpass_t, 487	MHAParser::float_t, 627
creator_B	MHAParser::int_mon_t, 629
MHAFilter::complex_bandpass_t, 487	MHAParser::int_t, 631
cstr_strerror	MHAParser::kw_t, 637
mha_errno.c, 950	MHAParser::mcomplex_mon_t, 638
current	MHAParser::mcomplex_t, 640
altplugs t, 202	MHAParser::mfloat_mon_t, 642
dc::wideband_inhib_vars_t, 248	MHAParser::mfloat_t, 645
mha_rt_fifo_t, 432	MHAParser::string_mon_t, 661
current_input_signal_buffer_half_index	MHAParser::string_t, 663
MHAFilter::partitioned_convolution_t, 523	MHAParser::vcomplex_mon_t, 666
current_output_partition_index	MHAParser::vcomplex_t, 668
MHAFilter::partitioned_convolution_t, 523	MHAParser::vfloat_mon_t, 670
current_powspec	MHAParser::vfloat_t, 673
droptect_t, 275	MHAParser::vint_mon_t, 674
current_thread_priority	MHAParser::vint_t, 677
MHAPlugin_Split::posix_threads_t, 707	MHAParser::vstring_mon_t, 678
current_thread_scheduler	MHAParser::vstring_t, 680
MHAPlugin_Split::posix_threads_t, 707	MHAPlugin::cfg_chain_t, 685
2	MHASignal::uint_vector_t, 773
DEBUG	mha_rt_fifo_element_t, 429
addsndfile.cpp, 921	wavwriter_t, 912

data_is_initialized	k_nyquist, 243
MHAParser::base_t, 607	level_in_db, 243
data_type	level_in_db_adjusted, 243
comm_var_t, 232	max_level_difference, 243
db.cpp, 926	naudiochannels, 243
db2lin	nbands, 243
Vector and matrix processing toolbox, 42	powersum, 242
db_if_t, 235	process, 242
~db_if_t, 236	rmslevel, 242
algo, 237	dc::dc_vars_t, 243
bypass, 237	band_weights, 245
chain, 237	bw_name, 245
db_if_t, 236	bypass, 245
fragsize, 237	center_frequencies, 245
patchbay, 237	cf_name, 245
plugloader, 237	chname, 245
prepare, 236	clientid, 245
process, 236	dc_vars_t, 244
release, 236	edge_frequencies, 245
db_t, 237	ef name, 245
	filterbank, 245
db_t, 238	
inner_process, 238	filtered_level, 245
plugloader, 238	gainrule, 245
dbspl2pa	gtdata, 244
Vector and matrix processing toolbox, 43	gtmin, 244
DC	gtstep, 244
dc_simple, 82	input_level, 245
dc, 81	max_level_difference, 245
get_audiochannels, 81	modified, 245
dc.cpp, 926	powersum, 244
DUPVEC, 927	preset, 245
dc::dc_if_t, 239	tauattack, 244
algo, 240	taudecay, 245
dc_if_t, 240	taurmslevel, 244
patchbay, 240	use_wbinhib, 245
prepare, 240	dc::dc_vars_validator_t, 246
process, 240	dc_vars_validator_t, 246
update, 240	dc::wb_inhib_cfg_t, 246
update_monitors, 240	dl_diff, 247
wbinhib, 240	dl_map_max, 247
dc::dc_t, 241	dl_map_min, 247
attack, 242	g_scale, 247
bypass, 242	I_min, 247
dc_t, 242	wb_inhib_cfg_t, 247
decay, 242	weights, 247
explicit_insert, 242	dc::wideband_inhib_vars_t, 247
get_level_in_db, 242	bands, 249
get_level_in_db_adjusted, 242	channels, 249
get_nbands, 242	current, 248
gt, 242	dl_map_max, 248
inhib_gain, 243	dl_map_min, 248

	g_scale, 248	expansion, 253
	I_min, 248	expansion_threshold, 253
	patchbay, 249	limiter, 253
	setchannels, 248	limiter_threshold, 253
	update, 248	maxgain, 253
	weights, 248	mon_g, 253
	wideband_inhib_vars_t, 248	mon_l, 253
dc	afterburn.cpp, 927	nbands, 253
_	mylogf, 927	process, 253
dc	afterburn.h, 927	dc_simple::dc_t::line_t, 254
	afterburn rt t	line_t, 254
U.U_	DynComp::dc_afterburn_rt_t, 279	m, 254
dc	afterburn_t	operator(), 254
uo_	DynComp::dc_afterburn_t, 281	y0, 254
dc	_afterburn_vars_t	dc_simple::dc_vars_t, 255
uc_	DynComp::dc_afterburn_vars_t, 284	bypass, 256
do	if_t	dc_vars_t, 255
uc_	dc::dc_if_t, 240	expansion_slope, 256
	dc_simple::dc_if_t, 250	expansion_slope, 256 expansion_threshold, 256
do	simple, 81	g50, 255
uc_	- •	g80, 255
	DC, 82	<b>G</b> ,
	force_resize, 82	limiter_threshold, 256
	LEVEL, 82	maxgain, 255
	not_zero, 82	tauattack, 256
-1 -	test_fail, 82	taudecay, 256
	simple.cpp, 928	dc_simple::dc_vars_validator_t, 256
ac_	_simple::dc_if_t, 249	dc_vars_validator_t, 257
	center_frequencies, 251	dc_simple::level_smoother_t, 257
	clientid, 251	attack, 258
	dc_if_t, 250	decay, 258
	edge_frequencies, 251	fftlen, 258
	filterbank, 251	level_smoother_t, 258
	gainrule, 251	level_spec, 258
	has_been_modified, 251	level_wave, 258
	modified, 251	nbands, 258
	mon_g, 251	process, 258
	mon_l, 251	dc_t
	patchbay, 251	dc::dc_t, 242
	prepare, 250	dc_simple::dc_t, 253
	prepared, 251	dc_vars_t
	preset, 251	dc::dc_vars_t, 244
	process, 250, 251	dc_simple::dc_vars_t, 255
	read_modified, 251	dc_vars_validator_t
	release, 250	dc::dc_vars_validator_t, 246
	update_dc, 251	dc_simple::dc_vars_validator_t, 257
	update_gain_mon, 251	deallocate_domains
	update_level, 251	MHAPlugin_Split::domain_handler_t, 70
	update_level_mon, 251	debug
dc_	simple::dc_t, 252	io_tcp_parser_t, 354
	compression, 253	debug_file
	dc_t, 253	io_tcp_parser_t, 355

debug_filename	delay_ac
io_tcp_parser_t, 355	ac2wave_if_t, 141
decay	ac2wave_t, 143
cfg_t, 222	delay_d
dc::dc_t, 242	prediction_error, 851
dc_simple::level_smoother_t, 258	delay_in
softclip_t, 880	ac2wave_if_t, 141
softclipper_t, 881	ac2wave_t, 143
decomb coeffs	delay_spec_t
adm_rtconfig_t, 193	MHASignal::delay_spec_t, 728
decomb_order	delay_t
adm_if_t, 190	MHASignal::delay_t, 729
decrease_condition	delay_w
mha fifo posix threads t, 420	prediction_error, 851
decrement	delay wave t
mha_fifo_posix_threads_t, 419	MHASignal::delay_wave_t, 731
mha_fifo_thread_platform_t, 427	delays
default_thread_platform_string	delay::interface_t, 260
split.cpp, 1024	MHASignal::delay t, 730
default_thread_platform_type	delays in
split.cpp, 1024	MHAIOJack::io_jack_t, 542
defaultHighInputLatency	delays_out
MHAIOPortAudio::device_info_t, 550	MHAIOJack::io_jack_t, 543
defaultHighOutputLatency	delaysum, 82
MHAIOPortAudio::device_info_t, 550	delaysum.cpp, 929
defaultLowInputLatency	delaysum::delaysum_if_t, 260
MHAIOPortAudio::device_info_t, 550	delay, 262
defaultLowOutputLatency	delaysum_if_t, 262
MHAIOPortAudio::device_info_t, 550	patchbay, 263
defaultSampleRate	prepare, 262
MHAIOPortAudio::device_info_t, 550	process, 262
Delay	release, 262
ADM::Delay, 184	update_cfg, 262
delay, 82	weights, 262
coherence::vars_t, 228	delaysum::delaysum t, 263
delaysum::delaysum_if_t, 262	delaysum_t, 264
MHAFilter::gamma_flt_t, 503	out, 264
MHAFilter::partitioned_convolution_t	process, 264
::index t, 525	weights, 264
MHAPlugin_Split::split_t, 713	delaysum_if_t
MHASignal::delay_spec_t, 728	delaysum::delaysum_if_t, 262
MHASignal::delay_wave_t, 731	delaysum_t
mha_dblbuf_t, 405	delaysum::delaysum_t, 264
delay.cpp, 928	delete_plug
delay::interface_t, 259	altplugs_t, 202
delays, 260	delta_pitch
interface_t, 260	timo_params, 896
patchbay, 260	timoSmooth, 902
prepare, 260	descriptor
process, 260	mha_audio_t, 398
update, 260	desired_fill_count
- l , —	· · · · · _ · · · _ <b>- · · · · · · · · · · · · · · · · · · </b>

mha_drifter_fifo_t, 411	dc::wideband_inhib_vars_t, 248
device_index	dl_map_min
MHAIOPortAudio::io_portaudio_t, 553	dc::wb_inhib_cfg_t, 247
device_index_updated	dc::wideband_inhib_vars_t, 248
MHAIOPortAudio::io_portaudio_t, 552	dm
device_info	lpc_burglattice_config, 375
MHAIOPortAudio::io_portaudio_t, 553	do clipping
device_info_t	calibrator_variables_t, 220
MHAIOPortAudio::device_info_t, 550	doagcc
device_name	doasym_feature_extraction_config, 272
MHAIOPortAudio::io_portaudio_t, 553	doasvm
device_name_updated	doasvm_classification_config, 268
MHAIOPortAudio::io_portaudio_t, 552	doasym_classification, 265
df	~doasvm_classification, 266
frequency_translator_t, 319	angles, 267
diff coeffs	b, 267
mha_filter.cpp, 957	doasvm_classification, 266
diff t	max_p_ind_name, 267
MHAFilter::diff_t, 489	p_name, 267
digits	patchbay, 267
mha error helpers, 87	prepare, 266
dimension	process, 266
MHASignal::matrix_t, 748	release, 266
dimensions	update_cfg, 267
acmon::acmon_t, 152	vGCC_name, 267
dimstr	w, 267
acmon::ac_monitor_t, 149	x, 267
dir	y, 267
mha_channel_info_t, 399	doasym_classification.cpp, 929
dir_t	INSERT_PATCH, 929
MHAJack::port_t, 566	PATCH_VAR, 929
dir_type	doasvm_classification.h, 929
MHAJack::port_t, 568	doasym_classification_config, 267
discard	~doasym classification config, 268
MHASignal::ringbuffer_t, 758	ac, 268
disconnect	c, 268
MHAEvents::emitter_t, 477	doasvm, 268
dispmode	doasym_classification_config, 268
acmon::acmon_t, 152	p, 268
dist	p_max, 268
plingploing::plingploing t, 832	process, 268
dist1	doasym_feature_extraction, 269
plingploing::plingploing_t, 832	~doasvm_feature_extraction, 270
distance	doasym_feature_extraction, 270
mha_direction_t, 407	fftlen, 271
distances	max_lag, 271
adm_if_t, 190	nupsample, 271
dl_diff	patchbay, 271
dc::wb_inhib_cfg_t, 247	prepare, 270
dl_map_max	process, 270
dc::wb_inhib_cfg_t, 247	release, 270
30WD_IIIIID_OIG_L, 27/	1010400, 270

update_cfg, 271	MHASignal::schroeder_t, 761
vGCC_name, 271	downsample.cpp, 930
doasvm_feature_extraction.cpp, 929	downsampling_factor
INSERT_PATCH, 930	MHAFilter::polyphase_resampling_t, 529
PATCH_VAR, 930	downscale
doasvm_feature_extraction.h, 930	MHASignal::quantizer_t, 755
doasvm_feature_extraction_config, 271	dphi
~doasvm_feature_extraction_config, 272	hilbert_shifter_t, 332
doagcc, 272	drain
doasvm_feature_extraction_config, 272	DynComp::dc_afterburn_vars_t, 284
fft, 272	drain_inv
fftlen, 272	DynComp::dc_afterburn_rt_t, 280
G, 272	drand
G_length, 272	plingploing, 124
GCC_end, 272	dropouts
GCC_start, 272	droptect_t, 275
hifftwin, 272	droptect.cpp, 931
hifftwin_sum, 272	droptect_t, 273
hwin, 272	blocks, 275
ifft, 272	consecutive_dropouts, 275
in_spec, 272	current_powspec, 275
proc_wave, 272	dropouts, 275
process, 272	droptect_t, 274
vGCC_ac, 272	filter_activated, 275
vGCC, 272	filtered_powspec, 275
wndlen, 272	filtered_powspec_mon, 275
doc_appendix.h, 930	level_mon, 275
doc_examples.h, 930	period, 275
doc_frameworks.h, 930	prepare, 274
doc_general.h, 930	process, 274
doc_kernel.h, 930	release, 274
doc_matlab.h, 930	reset, 275
doc_mhamain.h, 930	tau, 275
doc_parser.h, 930	threshold, 275
doc_plugif.cpp, 930	ds_t, 276
doc_plugins.h, 930	antialias, 277
doc_system.h, 930	ds_t, 276
doc_toolbox.h, 930	prepare, 277
documentation	process, 277
plugindescription_t, 837	ratio, 277
domain	release, 277
MHAParser::mhaconfig_mon_t, 646	dt
MHAPlugin_Split::splitted_part_t, 717	mha_audio_descriptor_t, 397
mhaconfig_t, 471	dtime
domain_handler_t	MHA_TCP, 89
MHAPlugin_Split::domain_handler_t, 700	dummy_interface_test
double_t	MHAIOFile.cpp, 993, 994
MHA_AC::double_t, 388	MHAIOJack.cpp, 996, 997
doublebuffer_t	MHAIOJackdb.cpp, 998, 999
MHASignal::doublebuffer_t, 732	MHAIOParser.cpp, 1001, 1002
down	MHAIOPortAudio.cpp, 1004, 1005

MHAIOTCP.cpp, 1007, 1008	data, 289
dummy_jack_proc_cb	gaintable_t, 286
mhajack.cpp, 1009	get_gain, 287, 288
dummy_threads_t	get_iofun, 288
MHAPlugin_Split::dummy_threads_t, 704	get_vF, 288
dump_mha	get_vL, 288
fw_t, 324	nbands, 288
dup	nchannels, 288
MHAFilter::thirdoctave_analyzer_t, 535	num_channels, 288
dupvec	num_F, 288
Vector and matrix processing toolbox, 45	num_L, 288
dupvec_chk	update, 287
Vector and matrix processing toolbox, 46	vFlog, 289
dur	vF, 289
plingploing::plingploing_t, 831	vL, 288
DynComp, 83	dynamiclib_t, 277
interp1, 83	~dynamiclib_t, 278
interp1, 88	dynamiclib_t, 278
DynComp::dc_afterburn_rt_t, 278	fullname, 278
burn, 279	getmodulename, 278
	getname, 278
conflux, 280	h, 278
dc_afterburn_rt_t, 279	modulename, 278
drain_inv, 280	resolve, 278
lp, 280	resolve_checked, 278
maxgain, 280	<u> </u>
mpo_inv, 280	EPSILON
DynComp::dc_afterburn_t, 280	lpc_bl_predictor.h, 939
_cf, 282	lpc_burg-lattice.h, 939
_channels, 282	timoconfig.cpp, 1026
_srate, 282	EPrew
burn, 281	prediction_error_config, 854
commit_pending, 282	ERR_IHANDLE
dc_afterburn_t, 281	MHAIOFile.cpp, 993
fb_pars_configured, 282	MHAIOJack.cpp, 995
patchbay, 282	MHAIOJackdb.cpp, 998
set_fb_pars, 281	MHAIOParser.cpp, 1001
unset_fb_pars, 281	MHAIOPortAudio.cpp, 1004
update, 282	MHAIOTCP.cpp, 1007
update_burner, 281	ERR_SUCCESS
DynComp::dc_afterburn_vars_t, 282	MHAIOFile.cpp, 993
bypass, 284	MHAIOJack.cpp, 995
commit, 284	MHAIOJackdb.cpp, 998
conflux, 284	MHAIOParser.cpp, 1001
dc_afterburn_vars_t, 284	MHAIOPortAudio.cpp, 1004
drain, 284	MHAIOTCP.cpp, 1007
f, 284	ERR_USER
maxgain, 284	MHAIOFile.cpp, 993
mpo, 284	MHAIOJack.cpp, 995
taugain, 284	MHAIOJackdb.cpp, 998
DynComp::gaintable_t, 284	MHAIOParser.cpp, 1001
~gaintable_t, 287	MHAIOPortAudio.cpp, 1004

MHAIOTCP.cpp, 1007	entry_t
ESTIM_CUR	MHAParser::entry_t, 621
nlms_wave.cpp, 1015	envelope_delay
ESTIM_PREV	MHAFilter::gamma_flt_t, 504
nlms_wave.cpp, 1015	envreplace
ESTIMATION_TYPES	MHAParser, 108
nlms_wave.cpp, 1015	eof
ear_t	MHA_TCP::Connection, 440
AuditoryProfile::parser_t::ear_t, 210	epsilon
edge_frequencies	smoothgains_bridge::overlapadd_if_←
dc::dc_vars_t, 245	t, 877
dc_simple::dc_if_t, 251	equal_dim
ef	Vector and matrix processing toolbox, 46
MHAOvlFilter::fftfb_vars_t, 586	47
ef2bands	equidist2bands
MHAOvlFilter::fspacing_t, 591	MHAOvIFilter::fspacing_t, 591
ef_h	erb_hz_f_hz
MHAOvlFilter::band_descriptor_t, 578	speechnoise.cpp, 1022
ef_l	err_in
MHAOvlFilter::band_descriptor_t, 578	MHAFilter::adapt_filter_param_t, 480
ef_name	MHAFilter::adapt_filter_t, 483
dc::dc_vars_t, 245	error
efv	MHA_TCP::Thread, 456
MHAOvlFilter::fftfb_ac_info_t, 580	mha_fifo_lw_t, 418
multibandcompressor::fftfb_plug_t, 808	Error handling in the openMHA, 31
element_gain_name	MHA_ErrorMsg, 31
combc_if_t, 230	MHA_assert, 32
element_gain_name_	MHA_assert_equal, 32
combc_t, 231	mha_debug, 32
elevation	errorlog
mha_direction_t, 406	fw_t, 324
emit_event	estimateDebug
MHAEvents::connector_base_t, 473	noisePowProposedScale::noisePow←
MHAEvents::connector_t, 475	Proposed, 820
emitter	estimtype
MHAEvents::connector_t, 476	nlms_t, 814
emitter_die	event_add_plug
MHAEvents::connector_base_t, 473	altplugs_t, 201
emitter_is_alive	event_delete_plug
MHAEvents::connector_base_t, 473	altplugs_t, 201
empty_string	event_select_plug
MHAParser::keyword_list_t, 634	altplugs_t, 201
end_time	event_set_plugs
MHA_TCP::Timeout_Event, 457	altplugs_t, 201
entries	event_start_recording
MHAParser::keyword_list_t, 634	acsave::acsave_t, 160
MHAParser::parser_t, 655	event_stop_and_flush
entry	acsave::acsave_t, 160
MHAParser::entry_t, 621	eventhandler
entry_map_t	MHAEvents::connector_t, 476
MHAParser, 107	eventhandler_s

MHAEvents::connector_t, 476	example5_t, 301
eventhandler_suu	channel, 302
MHAEvents::connector_t, 476	example5_t, 302
Events	process, 302
MHA TCP::Event Watcher, 445	scale, 302
events	example6.cpp, 932
MHA_TCP::Event_Watcher, 445	declspec, 932
example1.cpp, 931	example6_t, 302
example1_t, 289	channel_no, 303
example1_t, 290	example6_t, 303
prepare, 290	patchbay, 303
process, 291	prepare, 303
release, 290	process, 303
example2.cpp, 931	rmsdb, 303
example2_t, 291	update_cfg, 303
example2_t, 293	exec_fw_command
factor, 294	
prepare, 293	exit_on_stop
process, 293	fw t, 324
release, 293	exit_request
scale ch, 294	fw_t, 322
<u> </u>	expansion
example3.t. 304	dc_simple::dc_t, 253
example3_t, 294	expansion_slope
example3_t, 296	dc_simple::dc_vars_t, 256
factor, 297	expansion_threshold
on_prereadaccess, 296	dc_simple::dc_t, 253
on_scale_ch_readaccess, 296	dc_simple::dc_vars_t, 256
on_scale_ch_valuechanged, 296	expflt
on_scale_ch_writeaccess, 296	MHAOvlFilter::ShapeFun, 103
patchbay, 297	expi
prepare, 296	Complex arithmetics in the openMHA, 63,
prepared, 297	65
process, 297	explicit_insert
release, 297	dc::dc_t, 242
scale_ch, 297	export_to
example4.cpp, 931	MHASignal::spectrum_t, 766
example4_t, 298	MHASignal::waveform_t, 782
example4_t, 299	expression_t, 304
factor, 301	MHAParser::expression t, 622
on_prereadaccess, 300	extern_connector
on_scale_ch_readaccess, 300	MHAParser::commit_t, 617
on_scale_ch_valuechanged, 300	
on_scale_ch_writeaccess, 300	F
patchbay, 301	prediction_error_config, 853
prepare, 300	rt nlms t, 861
prepared, 301	f
process, 300	AuditoryProfile::parser_t::fmap_t, 211
release, 300	DynComp::dc_afterburn_vars_t, 284
scale_ch, 301	io_tcp_sound_t::float_union, 359
example5.cpp, 931	MHAOvIFilter::fftfb_vars_t, 586
declspec, 932	MHAOvIFilter::fscale_t, 589
-	

f0_high	I_old, 309
timo_params, 895	level_adapt_t, 308
timoSmooth, 902	pos, 309
f0_low	update_frame, 309
timo_params, 895	wnd, 309
timoSmooth, 902	fader_wave_if_t
F_Uflt	fader_wave::fader_wave_if_t, 307
prediction_error_config, 853	fail_on_async_jackerr
f_est	MHAIOJackdb::io_jack_t, 547
lpc_bl_predictor_config, 370	fail_on_async_jackerror
f_hz	MHAIOJackdb::io_jack_t, 546
MHAOvlFilter::fscale_t, 589	MHAJack::client_t, 565
FINISHED	fail on nonmonotonic
MHA_TCP::Thread, 454	MHAOvIFilter::fftfb_vars_t, 586
FMTsz	fail_on_nonmonotonic_cf
mha os.h, 963	MHAOvIFilter::fspacing_t, 591
factor	fail on unique bins
cpuload_t, 235	MHAOvlFilter::fftfb_vars_t, 586
example2_t, 294	fail_on_unique_fftbins
example3_t, 297	MHAOvlFilter::fspacing_t, 591
example4_t, 301	fallback spec
plugin_interface_t, 835	altplugs_t, 202
fader_if_t, 304	fallback_wave
actgains, 305	altplugs_t, 202
fader_if_t, 305	Fast Fourier Transform functions, 70
newgains, 305	mha_fft_backward, 74
patchbay, 305	mha_fft_backward_scale, 75
prepare, 305	mha_fft_forward, 74
process, 305	mha_fft_forward_scale, 75
tau, 305	mha_fft_free, 71
update_cfg, 305	mha fft new, 71
fader_spec.cpp, 932	mha_fft_spec2wave, 73
fader_wave, 84	mha_fft_spec2wave_scale, 76
level adaptor, 85	mha_fft_t, 71
fader_wave.cpp, 932	mha_fft_wave2spec, 72
DEBUG, 933	mha_fft_wave2spec_scale, 75
fader_wave::fader_wave_if_t, 306	fatallog
fader wave if t, 307	fw t, 324
gain, 307	fb
patchbay, 307	MHAFilter::thirdoctave_analyzer_t, 536
prepare, 307	fb acinfo
prepared, 307	fftfilterbank::fftfb_plug_t, 317
process, 307	fb_pars_configured
ramplen, 307	DynComp::dc_afterburn_t, 282
release, 307	fbpow
set_level, 307	fftfbpow::fftfbpow_t, 313
fader_wave::level_adapt_t, 308	fd
can_update, 309	MHA TCP::Connection, 443
get_level, 309	MHA_TCP::OS_EVENT_TYPE, 446
ilen, 309	fft
I_new, 309	doasvm_feature_extraction_config, 272
	addorni_idataro_oxtraduori dornig, 272

MHAFilter::fftfilter_t, 493	fb_acinfo, 317
MHAFilter::fftfilterbank_t, 497	fftfb_plug_t, 317
MHAFilter::partitioned_convolution_t, 524	imag, 317
MHAFilter::smoothspec_t, 534	insert, 317
overlapadd::overlapadd_t, 824	process, 317
fft_t	return_imag_, 317
MHASignal::fft_t, 735	s_out, 317
fftfb_ac_info_t	fftfilterbank_t
MHAOvIFilter::fftfb ac info t, 580	MHAFilter::fftfilterbank_t, 494
fftfb_interface_t	fftlen
fftfilterbank::fftfb_interface_t, 314	dc_simple::level_smoother_t, 258
fftfb_plug_t	doasym_feature_extraction, 271
fftfilterbank::fftfb_plug_t, 317	doasvm_feature_extraction_config, 272
multibandcompressor::fftfb_plug_t, 808	MHAFilter::fftfilter_t, 492
fftfb_t	MHAFilter::fftfilterbank_t, 496
MHAOvlFilter::fftfb t, 582	MHAFilter::smoothspec_t, 534
fftfb vars t	MHAOvlFilter::fftfb t, 583
MHAOvlFilter::fftfb_vars_t, 585	MHAOvlFilter::overlap_save_filterbank_
fftfbpow, 85	t::vars_t, 596
fftfbpow.cpp, 933	MHAParser::mhaconfig_mon_t, 646
fftfbpow::fftfbpow_interface_t, 309	mhaconfig_t, 471
fftfbpow_interface_t, 310	rmslevel_t, 856
name, 311	timoConfig, 898
patchbay, 311	fftw plan fft
prepare, 311	MHASignal::fft_t, 737
process, 311	fftw_plan_ifft
update_cfg, 311	MHASignal::fft_t, 737
	_
fftfbpow::fftfbpow_t, 312	fftw_plan_spec2wave
fbpow, 313	MHASignal::fft_t, 737
fftfbpow_t, 313	fftw_plan_wave2spec
fftfbpow_interface_t	MHASignal::fft_t, 737 fhz2bandno
fftfbpow::fftfbpow_interface_t, 310	
fftfbpow_t	speechnoise.cpp, 1022
fftfbpow::fftfbpow_t, 313	fifo
fftfilter_t	wavwriter_t, 912
MHAFilter::fftfilter_t, 490	fifo_size
fftfilterbank, 85	mha_dblbuf_t, 405
fftfilterbank.cpp, 933	fifolen
fftfilterbank::fftfb_interface_t, 314	analysispath_if_t, 206
algo, 316	wavrec_t, 911
fftfb_interface_t, 314	fileformat
nbands, 316	acsave::acsave_t, 160
nchannels, 316	filename
patchbay, 316	addsndfile::addsndfile_if_t, 175
prepare, 315	filename_input
prepared, 316	io_file_t, 338
process, 315	filename_output
release, 315	io_file_t, 338
return_imag, 316	fill_info
update_cfg, 315	MHAIOPortAudio::device_info_t, 550
fftfilterbank::fftfb_plug_t, 316	filled

MHASignal::async_rmslevel_t, 727	AuditoryProfile::parser_t::fmap_t, 211
filter	fmax
MHAFilter::adapt_filter_state_t, 481	frequency_translator_t, 319
MHAFilter::adapt_filter_t, 482	fmin
MHAFilter::complex_bandpass_t, 487,	frequency_translator_t, 319
488	fname
MHAFilter::fftfilter_t, 491, 492	acsave::acsave_t, 160
MHAFilter::fftfilterbank_t, 495, 496	for_each
MHAFilter::filter_t, 499, 500	Vector and matrix processing toolbox, 42
MHAFilter::iir_filter_t, 507	force_remove_item
filter_activated	MHAParser::parser_t, 653
droptect_t, 275	force_resize
filter_analytic	dc_simple, 82
MHAOvlFilter::overlap_save_filterbank_	forward
analytic_t, 593	lpc_bl_predictor_config, 370
filter_partitions	lpc_burglattice_config, 374
MHAFilter::partitioned_convolution_t, 522	MHASignal::fft_t, 735
filter t	forward_scale
MHAFilter::filter_t, 498, 499	MHASignal::fft_t, 736
filterbank	fr
dc::dc_vars_t, 245	spec_fader_t, 887
dc_simple::dc_if_t, 251	frag_out
filtered_level	MHAJack::client_avg_t, 556
dc::dc_vars_t, 245	MHAJack::client_noncont_t, 559
filtered_powspec	fragsize
droptect_t, 275	analysispath_if_t, 206
filtered_powspec_mon	calibrator_variables_t, 220
droptect_t, 275	db_if_t, 237
filtershapefun	io_file_t, 338
mha_fftfb.cpp, 955	io_nre_t, 345
fir	io_tcp_sound_t, 358
calibrator_runtime_layer_t, 216	MHAFilter::fftfilter_t, 492
calibrator_variables_t, 220	MHAFilter::fftfilterbank_t, 496
firchannels	
MHAFilter::fftfilterbank_t, 496	MHAFilter::partitioned_convolution_t, 522
firfir2fftlen	MHAFilter::resampling_filter_t, 531
	MHAIOPortAudio::io_portaudio_t, 553
calibrator_runtime_layer_t, 216	MHAJack::client_t, 564
firfirlen	MHAParser::mhaconfig_mon_t, 646
calibrator_runtime_layer_t, 216	MHAPlugin_Resampling::resampling_if
flag_terminate_inner_thread	_t, 696
analysepath_t, 204	mhaconfig_t, 471
flags	fragsize_in
MHAJack::client_t, 565	MHAFilter::blockprocessing_polyphase  → 405
float_mon_t	_resampling_t, 485
MHAParser::float_mon_t, 623	fragsize_out
float_t	MHAFilter::blockprocessing_polyphase  → 405
MHA_AC::float_t, 389	_resampling_t, 485
MHAParser::float_t, 626	fragsize_ratio
flush_data	MHAIOJackdb::io_jack_t, 547
acsave::cfg_t, 161	fragsize_validator
fmap_t	MHAFilter::resampling_filter_t, 531

frame	fs_
MHA_AC::acspace2matrix_t, 387	MHAOvlFilter::fspacing_t, 591
framecnt	fscale
acsave::save_var_t, 164	MHAOvlFilter::fftfb_vars_t, 585
frameno	fscale_bw_t
MHA_AC::acspace2matrix_t, 387	MHAOvlFilter::fscale_bw_t, 588
noisePowProposedScale::noisePow←	fscale_t
Proposed, 820	MHAOvlFilter::fscale_t, 589
framerate	fshift_hilbert.cpp, 934
ac2osc_t, 139	fspacing_t
frames	MHAOvlFilter::fspacing_t, 591
ac2wave_t, 142	ft
prediction_error_config, 852	spec2wave_t, 885
rt_nlms_t, 861	wave2spec_t, 908
frameshift	ftype
hilbert_shifter_t, 332	MHAOvlFilter::fftfb_vars_t, 586
framework_thread_priority	fu
MHAPlugin_Split::split_t, 713	rt_nlms_t, 862
framework_thread_scheduler	fu_previous
MHAPlugin_Split::split_t, 712	rt_nlms_t, 862
freq	fuflt
plingploing::plingploing_t, 831	rt_nlms_t, 862
freq2bin	fullname
Vector and matrix processing toolbox, 44	dynamiclib_t, 278
frequency	MHAParser::base_t, 606
sine_t, 875	plugindescription_t, 837
frequency_response	fullspec
MHAFilter::partitioned_convolution_t, 523	hilbert_shifter_t, 332
frequency_translator_t, 318	fun1
df, 319	plingploing::plingploing_t, 832
fmax, 319	fun1_key
fmin, 319	plingploing::if_t, 829
frequency_translator_t, 319	plingploing::plingploing_t, 832
irslen, 319	fun1_range
patchbay, 319	plingploing::if_t, 829
phasemode, 319	plingploing::plingploing_t, 832
prepare, 319	fun2
process, 319	plingploing::plingploing_t, 832
release, 319	fun2_key
update, 319	plingploing::if_t, 829
front_channel	plingploing::plingploing_t, 832
adm_rtconfig_t, 193	fun2_range
front_channels	plingploing::if_t, 829
adm_if_t, 190	plingploing::plingploing_t, 832
adm_rtconfig_t, 193	fun_t
frozen_noise_	MHAWindow::fun_t, 800
cfg_t, 222	funs
frozennoise_length	MHAOvlFilter::scale_var_t, 598
noise_t, 816	fw_cmd
fs MILAEThamada an Olhan A Edd	fw_t, 324
MHAFilter::o1_ar_filter_t, 514	fw_exiting

fw_t, 322	nchannels_out, 324
fw_fragsize	parserstate, 324
MHAIOJack::io_jack_t, 542	patchbay, 325
fw_running	plugin_paths, 324
fw_t, 322	plugins, 324
fw_samplerate	prepare, 322
MHAIOJack::io_jack_t, 542	prepare_vars, 324
fw_sleep	proc_error, 325
fw_t, 324	proc_error_string, 325
fw_sleep_cmd	proc_lib, 325
fw_t, 323	proc_name, 324
fw_starting	process, 323
fw_t, 322	quit, 323
fw_stopped	release, 323
fw_t, 322	start, 322
fw_stopping	started, 323
fw_t, 322	state, 325
fw_t, 320	state_t, 322
~fw_t, 322	stop, 322
ac, 324	stopped, 323
async_poll_msg, 324	fw_unprepared
async_read, 324	fw_t, 322
b_exit_request, 325	fw_until
cfin, 325	fw_t, 324
cfout, 325	fw_until_cmd
dump_mha, 324	fw_t, 323
errorlog, 324	fw_vars_t, 325
exec_fw_command, 323	fw_vars_t, 326
exit_on_stop, 324	lock_channels, 326
exit_request, 322	lock_srate_fragsize, 326
fatallog, 324	pfragmentsize, 326
fw cmd, 324	pinchannels, 326
fw_exiting, 322	psrate, 326
fw_running, 322	unlock_channels, 326
fw_sleep, 324	unlock_srate_fragsize, 326
fw_sleep_cmd, 323	fwcb
fw_starting, 322	io_tcp_t, 362
fw_stopped, 322	G
fw_stopping, 322	doasym_feature_extraction_config, 272
fw_t, 322	
fw_unprepared, 322	g coherence::cohflt_t, 226
fw_until, 324	g50
fw_until_cmd, 323	dc_simple::dc_vars_t, 255
get_input_signal_dimension, 323	g80
get_parserstate, 324	dc_simple::dc_vars_t, 255
inst_name, 324	G ERRNO
io_error, 325	MHA_TCP, 89
io_lib, 325	G_length
io_name, 324	doasym_feature_extraction_config, 272
load_io_lib, 323	g_scale
load_no_lib, 323	g_scale dc::wb_inhib_cfg_t, 247
ισαυ_ρισο_ιιυ, <del>σεσ</del>	uowb_iiiiib_oig_i, <del>44</del> /

dc::wideband_inhib_vars_t, 248	timoConfig, 898
GCC_end	gain_min_db
doasym_feature_extraction_config, 272	timo_params, 896
GCC_start	timoSmooth, 903
doasvm_feature_extraction_config, 272	gain_spec_
GITCOMMITHASH	cfg_t, 222
mha_plugin.hh, 971	gain_wave_
GLRDebug	cfg_t, 222
noisePowProposedScale::noisePow⇔	gain_wiener
Proposed, 820	timoConfig, 899
GLRexp	gain_wiener_AC
noisePowProposedScale::noisePow⇔	timo_AC, 894
Proposed, 820	gainrule
•	
timoConfig, 899 GLR	dc::dc_vars_t, 245
	dc_simple::dc_if_t, 251
timoConfig, 899	gains
GREETING_TEXT	gain::gain_if_t, 328
mhamain.cpp, 1012	prediction_error, 850
gain, 85	shadowfilter_end::cfg_t, 870
calibrator_runtime_layer_t, 216	spec_fader_t, 887
coherence::cohflt_t, 227	gaintable.cpp, 934
fader_wave::fader_wave_if_t, 307	convert_f2logf, 934
multibandcompressor::plugin_signals_t,	isempty, 934
812	gaintable.h, 934
gain.cpp, 934	gaintable_t
gain::gain_if_t, 327	DynComp::gaintable_t, 286
bbgain, 328	gamma_flt_t
gain_if_t, 328	MHAFilter::gamma_flt_t, 502
gains, 328	gamma_post
patchbay, 328	timoConfig, 899
prepare, 328	gamma_post_AC
process, 328	timo AC, 893
release, 328	gauss
update_bbgain, 328	MHAOvlFilter::ShapeFun, 103
update_gain, 328	gcd
update_minmax, 328	MHAFilter, 94
vmax, 328	•
vmin, 328	generatemhaplugindoc.cpp, 935
	conv2latex, 935
gain::scaler_t, 329	create_latex_doc, 935
scaler_t, 329	main, 935
gain_ac	get_A
ac2wave_if_t, 141	MHAFilter::gamma_flt_t, 503
ac2wave_t, 143	get_a
gain_delay	MHAParser::base_t::replace_t, 608
coherence::cohflt_t, 227	get_ac
gain_if_t	latex_doc_t, 363
gain::gain_if_t, 328	plug_t, 833
gain_in	get_accept_event
ac2wave_if_t, 141	MHA_TCP::Server, 448
ac2wave_t, 143	get_all_input_ports
gain_min	MHAIOJack::io_jack_t, 542

	MHAIOJackdb::io_jack_t, 547		MHAIOJack::io_jack_t, 542
get	_all_output_ports	get	_des_fill_count
	MHAIOJack::io_jack_t, 542		mha_drifter_fifo_t, 410
	MHAIOJackdb::io_jack_t, 547	get	_documentation
get	_audiochannels		PluginLoader::mhapluginloader_t, 846
	dc, 81	get	_ear
get	_available_space		AuditoryProfile::parser_t::ear_t, 210
	mha_drifter_fifo_t, 410		AuditoryProfile::profile_t, 212
	mha_fifo_t, 423	get	_ef_hz
get			MHAOvlFilter::fspacing_t, 591
	MHAParser::base_t::replace_t, 608	get	_entries
get	_bw_hz		algo_comm_t, 198
	MHAOvIFilter::fscale_bw_t, 588		MHAKernel::algo_comm_class_t, 571
get_			MHAParser::keyword_list_t, 633
	MHAFilter::o1flt_lowpass_t, 516	get	_error
get	_c_handle		algo_comm_t, 198
	MHAKernel::algo_comm_class_t, 570		MHAKernel::algo_comm_class_t, 571
get	_categories	get	_f_hz
	latex_doc_t, 363		MHAOvlFilter::fscale_t, 589
	PluginLoader::mhapluginloader_t, 846	get	_fbpower
get_	_cdata		MHAOvlFilter::fftfb_t, 582
	MHASignal::matrix_t, 752	get	_fbpower_db
get_	_cf_fftbin		MHAOvlFilter::fftfb_t, 582
	MHAOvIFilter::fspacing_t, 591	get	
get	_cf_hz		MHA_TCP::Connection, 440
	MHAFilter::thirdoctave_analyzer_t, 535	get	_fftlen
	MHAOvIFilter::fspacing_t, 591		MHAOvIFilter::fftfb_t, 583
get	_cfin	get	_fifo_size
	MHAParser::mhapluginloader_t, 649		mha_dblbuf_t, 403
get_	_cfout	get	_fill_count
~~+	MHAParser::mhapluginloader_t, 649		mha_drifter_fifo_t, 410
get_	_channelconfig	act	mha_fifo_t, 423
	MHAOvlFilter::overlap_save_filterbank_t,	gei	_fmap
act	595	act	AuditoryProfile::parser_t::fmap_t, 211
gei_	_comm_var	gei	_fragsize
act	MHASignal::matrix_t, 747	act	MHAJack::client_t, 562
gei_	_configfile PluginLoader::config_file_splitter_t, 839	gei	_frequencies AuditoryProfile::fmap_t, 207
aot	_configname	aot	fun
gei_	_configratife PluginLoader::config_file_splitter_t, 838	gei <u>.</u>	_lun MHAOvlFilter::scale_var_t, 598
aet	_connected	aet	gain
gei	io_tcp_parser_t, 352	get <u>.</u>	_yam DynComp::gaintable_t, 287, 288
aet	_cpu_load	aet	_handle
gei_	_cpu_load MHAJack::client_t, 563	yei.	plug_t, 833
net	_current_profile	aet	index
gei	_current_profile AuditoryProfile::parser_t, 209	gei	MHAParser::keyword_list_t, 633
net	_delay		MHASignal::matrix_t, 751
gei_	_delay mha_dblbuf_t, 403	net	_inner_error
net	_delays_in	a <sub>G</sub>	mha_dblbuf_t, 403
ع د ا	_delays_m MHAIOJack::io_jack_t, 542	net	_inner_size
aet	_delays_out	901	mha_dblbuf_t, 403
ع ت ر			

get_input_fifo_fill_count     mha_dblouf_t, 403 get_input_fifo_space     mha_dblouf_t, 403 get_input_signal_dimension     fw_t, 223 get_interface     MHA_TCP::Server, 448 get_ins     DynComp::gaintable_t, 288 get_iris     MHAParser::mhapluginloader_t, 649 get_last_name     MHAParser::mhapluginloader_t, 649 get_last_output     MHAFilter::fiftliflowpass_t, 516 get_lex_doc_t, 363 get_len_A     MHAFilter::filter_t, 500 get_len_B     MHAFilter::filter_t, 500 get_len_B     MHAFilter::filter_t, 500 get_len_B     MHAFilter::filter_t, 500 get_len_d     dc::dc_t, 242 get_level_in_db     dc::dc_t, 242 get_level_in_db     dc::dc_t, 242 get_libname     PluginLoader::config_file_splitter_t, 839 get_level_in_db     dc::dc_t, 242 get_level_in_db.ack::oi_inck_t, 563 get_parser_var     latex_doc_t, 363 get_parser_var     latex_doc_t, 366 get_port     MHACylifer::ffftb_t, 583 get_main_     MHACylifer::ffitc_t, 599  MHACylifer::scale_var_t, 598 get_name     MHACylifer::mtirto_t, 741 get_max_dil_ucount     mha_dblou_t, 403	get_input_channels	get_msg
mha_dblbuf_t, 403 get_input_fifo_space mha_dblbuf_t, 403 get_input_fifo_space mha_dblbuf_t, 403 get_input_signal_dimension fw_t, 323 get_input_signal_dimension fw_t, 324 get_inelements MHASignal:matrix_t, 751 get_origname PluginLoader::config_file_splitter_t, 839 get_os_event MHACSignal:matrix_t, 751 get_origname PluginLoader::config_file_splitter_t, 839 get_os_event MHACIgnal:matrix_t, 751 get_origname PluginLoader::config_file_splitter_t, 839 get_os_event MHACIgnal::matrix_t, 751 get_origname PluginLoader::config_file_splitter_t, 839 get_os_event MHACIgnal::matrix_t, 751 get_origname PluginLoader::doc_t, 450 get_origname PluginLoader::doc_t, 450 get_origname PluginLoader::doc_t, 450 get_origname PluginLoader:ideval_doc_t, 400 get_origname PluginLoader:ideval_doc_t, 400 get_origname MHACIGnal::doc_t, 400 get_origname PluginLoader	mha_dblbuf_t, 403	MHA_Error, 414
get_input_fifo_space     mha_dblbuf_t, 403 get_input_signal_dimension     fw_t, 323 get_interface     MHA_TCP::Server, 448 get_iofun     DynComp::gaintable_t, 288 get_iss_MHAFilter::fftfilterbank_t, 496 get_last_name     MHAParser::mhapluginloader_t, 649 get_last_output     MHAFilter::filt lowpass_t, 516 get_len_A     MHAFilter::filter_t, 500 get_len_B     MHAFilter::filter_t, 500 get_len_B     MHAFilter::filter_t, 500 get_len_B     MHAFilter::filter_t, 500 get_len_B     MHASignal::uint_vector_t, 773 get_level     addsndfile::level_adapt_t, 177     fader_wave::level_adapt_t, 309 get_level_in_db     dc::dc_t, 242 get_level_in_db_adjusted     dc::dc_t, 242 get_level_in_db_adjusted     dc::dc_t, 242 get_level_in_db_adjusted     dc::dc_t, 242 get_local_port     io_tcp_parser_t, 351 get_local_port     io_tcp_parser_tote     io_tcp_parser_tote     io_tcp_parser_tote     io_tcp_parser_tote     io_tcp_parser_tote     io_tcp_parser_tote     io_tcp_parser_tote	get_input_fifo_fill_count	get_my_input_ports
mha_dblbuf_t, 403 get_input_signal_dimension fw_t, 323 get_interface MHA_TCP::Server, 448 get_iofun DynComp::gaintable_t, 288 get_iris MHAFilter::fftfilterbank_t, 496 get_last_name MHAParser::mhapluginloader_t, 649 get_last_name MHAFilter::o1fit_lowpass_t, 516 get_latedoc_t, 363 get_eln_A MHAFilter::filter_t, 500 get_len_B MHASignal::unit_vector_t, 773 get_level mha_dblbuf_t, 403 get_output_file_speliter_t, 403 get_output_file_speliter_t, 403 get_parser_tab latex_doc_t, 363 get_parser_tab latex_doc_t, 3	mha_dblbuf_t, 403	MHAJack::client_t, 563
get_input_signal_dimension	get_input_fifo_space	get_my_output_ports
fw_t, 323 get_interface     MHA_TCP::Server, 448 get_iofun     DynComp::gaintable_t, 288 get_isfun     MHAFilter::fiftfilterbank_t, 496 get_last_name     MHAParser::mhapluginloader_t, 649 get_last_output     MHAFilter::o1flt_lowpass_t, 516 get_len_A     get_len_A     MHAFilter::filter_t, 500 get_len_B     MHASignal::uint_vector_t, 773 get_len_B     MHAFilter::filter_t, 500 get_length     MHASignal::uint_vector_t, 773 get_level     addsndfile::level_adapt_t, 177     fader_wave::level_adapt_t, 309 get_level_in_db     dc::dc_t, 242 get_libname     PluginLoader::config_file_splitter_t, 839 get_output_fifo_fill_count     mha_dblbuf_t, 403 get_output_fifo_space     mha_dblbuf_t, 403 get_parser_tab     latex_doc_t, 363 get_parser_tab     latex_doc_t,	mha_dblbuf_t, 403	MHAJack::client_t, 563
get_interface    MHA_TCP::Server, 448 get_iofun    DynComp::gaintable_t, 288 get_irs    MHAFilter::ffftilterbank_t, 496 get_last_name    MHAParser::mhapluginloader_t, 649 get_last_output   MHAFilter::filter_tofts book    atex_doc_t, 363 get_len_A    MHAFilter::filter_t, 500 get_len_B    MHAFilter::filter_t, 500 get_len_B    MHAFilter::filter_t, 500 get_len_B    MHAFilter::filter_t, 500 get_len_B    MHAFilter::filter_t, 500 get_level    addsndfile::level_adapt_t, 177    fader_wave::level_adapt_t, 309 get_level_in_db    dc::dc_t, 242 get_libname    PluginLoader::config_file_splitter_t, 839 get_output_channels    mha_dblbuf_t, 403 get_output_fifo_file_count    mha_dblbuf_t, 403 get_output_fifo_space    mha_dblbuf_t, 403 get_output_fifo_space    mha_dblbuf_t, 403 get_output_fifo_space    mha_dblbuf_t, 403 get_parser_var    latex_doc_t, 363 get_parser_var    latex_doc_t, 364 get_port_channels    mha_dblbuf_t, 403 get_output_othenument    mha_dblouf_t, 403 get_parser_tab    latex_doc_t,	get_input_signal_dimension	get_name
mHA_TCP::Server, 448 get_iofun DynComp::gaintable_t, 288 get_irs MHAFilter::fftfilterbank_t, 496 get_last_name MHAParser::mhapluginloader_t, 649 get_last_output MHAFilter::o1flt_lowpass_t, 516 get_len_A MHAFilter::filter_t, 500 get_len_B MHAFilter::filter_t, 500 get_level addsndfile::level_adapt_t, 177 fader_wave::level_adapt_t, 309 get_level_in_db dc::dc_t, 242 get_libname PluginLoader::config_file_splitter_t, 839 get_len_B MHAFilter::filter_t, 500 get_outp_: size mha_dblbuf_t, 403 get_output_file_count mha_dblbuf_t, 403 get_output_file_count mha_dblbuf_t, 403 get_output_file_count mha_dblbuf_t, 403 get_output_ifile_count mha_dblbuf_t, 403 get_output_file_splate mha_dblbuf_t, 403 get_output_file_splate mha_dblbuf_t, 403 get_output_file_splate mha_dblbuf_t, 403 get_output_file_count mha_dblbuf_t, 403 get_output_file_splate mha_dblbuf_t, 403 get_output_file_count mha_dblbuf_t, 403 get_output_file_splate mha_dblbuf_t, 403 get_output_file_spl	fw_t, 323	MHAOvlFilter::scale_var_t, 598
get_iofun DynComp::gaintable_t, 288 get_irs MHAFilter::ffitfilterbank_t, 496 get_last_name MHAFilter::mhapluginloader_t, 649 get_last_output MHAFilter::offit_lowpass_t, 516 get_latex_doc latex_doc_t, 363 get_len_A MHAFilter::ffilter_t, 500 get_len_B MHAFilter::ffilter_t, 500 get_length MHASignal::uint_vector_t, 773 get_level_in_db dc::dc_t, 242 get_level_in_db adjusted dc::dc_t, 242 get_libname PluginLoader::config_file_splitter_t, 839 get_output_fifo_fill_count mha_dblbuf_t, 403 get_output_fifo_fill_tount mha_dblbuf_t, 403 get_output_fifo_fill_tount mha_	get_interface	get_nbands
DynComp::gaintable_t, 288 get_irs MHAFilter::fftfilterbank_t, 496 get_last_name MHAParser::mhapluginloader_t, 649 get_last_output MHAFilter::offlt_lowpass_t, 516 get_latex_doc latex_doc_t, 363 get_len_A MHAFilter::filter_t, 500 get_len_B MHAFilter::filter_t, 500 get_lengh MHASignal::uint_vector_t, 773 get_level addsndfile::level_adapt_t, 177 fader_wave::level_adapt_t, 309 get_level in_db dc::dc_t, 242 get_libname PluginLoader::config_file_splitter_t, 839 get_local_address io_tcp_parser_t, 351 get_longmsg MHASignal::oop_wavefragment_t, 742 get_man_fill_count mha_fifo_t, 423 get_min_fill_count mha_fifo_t, 423 get_main_cill_count mha_fill_count mha_fill_count mha_fill_count MHA_TCP::Timeout_Event, 457 MHA_TCP::Wakeup_Event, 460 get_os_event MHA_TCP::Wakeup_Event, 460 get_output_filo_splitter_t, 839 get_output_channels mha_dblbuf_t, 403 get_output_filo_spliter_t, 403 get_output_filo_space mha_dblbuf_t, 403 get_output_sill_decount mha_dblbuf_t, 403	MHA_TCP::Server, 448	dc::dc_t, 242
get_irs MHAFilter::fftfilterbank_t, 496 get_last_name MHAParser::mhapluginloader_t, 649 get_last_output MHAFilter::offit_lowpass_t, 516 get_latex_doc latex_doc_t, 363 get_len_A MHAFilter::filter_t, 500 get_len_B MHAFilter::filter_t, 500 get_length MHASignal::uint_vector_t, 773 get_level addsndfile::level_adapt_t, 177 fader_wave:level_adapt_t, 309 get_level_in_db do::do_t, 242 get_level_in_db, adjusted do::do_t, 242 get_level_in_db, adjusted do::do_t, 242 get_level_in_db_adiusted do::do_t, 242 get_local_address io_tcp_parser_t, 351 get_local_aport io_tcp_parser_t, 351 get_longmsg MHAError, 414 get_tass_gain_db MHACVIFilter::ffftb_t, 583 get_man_category latex_doc_t, 363 get_mapping MHASignal::oont mha_fifo_t, 423 get_min_fill_count mha_fifo_t, 423 get_min_fill_count mha_fifo_t, 423 get_min_ill_count mha_fifo_t, 423 get_min_fill_count mha_fill_count m	get_iofun	get_nelements
MHAFilter::fftfilterbank_t, 496 get_last_name	DynComp::gaintable_t, 288	MHASignal::matrix_t, 748
get_last_name MHAParser:::mhapluginloader_t, 649 get_last_output MHAFilter::o1flt_lowpass_t, 516 get_latex_doc latex_doc_t, 363 get_len_A MHAFilter::filter_t, 500 get_len_B MHAFilter::filter_t, 500 get_length MHASignal::uint_vector_t, 773 get_level_in_db dc::dc_t, 242 get_level_in_db adjusted dc::dc_t, 242 get_libname PluginLoader::config_file_splitter_t, 839 get_os_event MHA_TCP::Wakeup_Event, 457 MHA_TCP::Wakeup_Event, 460 get_outer_size mha_dblbuf_t, 403 get_output_fifo_fill_count mha_dblbuf_t, 403 get_output_fifo_fill_count mha_dblbuf_t, 403 get_output_fifo_space mha_dblbuf_t, 403 get_output_for_oitput mha_dblbuf_t, 403 get_output_for_oitput mha_dblbuf_t, 403 get_output_for	get_irs	get_nreals
MHAParser::mhapluginloader_t, 649 get_last_output  MHAFilter::offtt_lowpass_t, 516 get_latex_doc latex_doc_t, 363 get_len_A  MHAFilter::filter_t, 500 get_len_B MHAFilter::filter_t, 500 get_length MHASignal::uint_vector_t, 773 get_level_in_db dc::dc_t, 242 get_libname PluginLoader::config_file_splitter_t, 839 get_outer_size mha_dblbuf_t, 403 get_output_filo_fill_count mha_dblbuf_t, 403 get_output_filo_fill_count mha_dblbuf_t, 403 get_output_filo_fill_count mha_dblbuf_t, 403 get_output_filo_fill_count mha_dblbuf_t, 403 get_output_filo_space mha_dblbuf_t, 403 get_output_filo_fill_count mha_dblbuf_t, 403 get_output_filo_space mha_dblbuf_t, 40	MHAFilter::fftfilterbank_t, 496	MHASignal::matrix_t, 751
get_last_output MHAFilter::o1flt_lowpass_t, 516 get_latex_doc_t, 363 get_len_A MHAFilter::filter_t, 500 get_len_B MHAFilter::filter_t, 500 get_level addsndfile::level_adapt_t, 177 fader_wave::level_adapt_t, 309 get_level_in_db dc::dc_t, 242 get_level_in_db_adjusted dc::dc_t, 242 get_libname PluginLoader::config_file_splitter_t, 839 get_local_address io_tcp_parser_t, 351 get_local_port io_tcp_parser_t, 351 get_local_input_ports MHA_TCP::Connection, 440 get_per_port MHA_TCP::Connection, 440 get_physical_input_ports MHAIOJack::io_jack_t, 542 MHAIOJack::io_jack_t, 542 MHAIOJack::io_jack_t, 542 MHAIOJack::io_jack_t, 542 MHAIOJack:io_jack_t, 542 MHA	get_last_name	get_origname
MHAFilter::o1fit_lowpass_t, 516 get_latex_doc latex_doc_t, 363 get_len_A MHAFilter::filter_t, 500 get_len_B MHAFilter::filter_t, 500 get_len_B MHAFilter::filter_t, 500 get_length MHASignal::uint_vector_t, 773 get_level addsndfile::level_adapt_t, 177 fader_wave::level_adapt_t, 309 get_level_in_db dc::dc_t, 242 get_libname PluginLoader::config_file_splitter_t, 839 get_local_address io_tcp_parser_t, 351 get_local_port io_tcp_parser_t, 351 get_local_gort io_tcp_parser_t, 351 get_level_sin_db MHA_Error, 414 get_ltass_gain_db MHA_OVIFilter::fiftb_t, 583 get_main_category latex_doc_t, 363 get_mapping MHASignal::loop_wavefragment_t, 742 get_max_fill_count  MHA_TCP::Timeout_Event, 457 MHA_TCP::Wakeup_Event, 460 get_output_fio_sil get_output_channels mha_dblbuf_t, 403 get_output_fifo_fill_count mha_dblbuf_t, 403 get_output_fifo_sill_count mha_dblbuf_t, 403 get_output_fifo_sill_count mha_dblbuf_t, 403 get_output_fifo_sill_count mha_dblbuf_t, 403 get_output_fifo_sill_count mha_dblouf_t, 403 get_output_fifo_sill_count mha_dblbuf_t, 403 get_output_fifo_sill_count mha_dblbuf_t, 403 get_output_fifo_sill_count mha_dblbuf_t, 403 get_output_fifo_sill_count mha_dblbuf_t, 403 get_output_fifo_sill_count mha_dblouf_t, 403 get_output_fifo_s	MHAParser::mhapluginloader_t, 649	PluginLoader::config_file_splitter_t, 839
MHAFilter::o1fit_lowpass_t, 516 get_latex_doc latex_doc_t, 363 get_len_A MHAFilter::filter_t, 500 get_len_B MHAFilter::filter_t, 500 get_len_B MHAFilter::filter_t, 500 get_length MHASignal::uint_vector_t, 773 get_level addsndfile::level_adapt_t, 177 fader_wave::level_adapt_t, 309 get_level_in_db dc::dc_t, 242 get_libname PluginLoader::config_file_splitter_t, 839 get_local_address io_tcp_parser_t, 351 get_local_port io_tcp_parser_t, 351 get_local_gort io_tcp_parser_t, 351 get_level_sin_db MHA_Error, 414 get_ltass_gain_db MHA_OVIFilter::fiftb_t, 583 get_main_category latex_doc_t, 363 get_mapping MHASignal::loop_wavefragment_t, 742 get_max_fill_count  MHA_TCP::Timeout_Event, 457 MHA_TCP::Wakeup_Event, 460 get_output_fio_sil get_output_channels mha_dblbuf_t, 403 get_output_fifo_fill_count mha_dblbuf_t, 403 get_output_fifo_sill_count mha_dblbuf_t, 403 get_output_fifo_sill_count mha_dblbuf_t, 403 get_output_fifo_sill_count mha_dblbuf_t, 403 get_output_fifo_sill_count mha_dblouf_t, 403 get_output_fifo_sill_count mha_dblbuf_t, 403 get_output_fifo_sill_count mha_dblbuf_t, 403 get_output_fifo_sill_count mha_dblbuf_t, 403 get_output_fifo_sill_count mha_dblbuf_t, 403 get_output_fifo_sill_count mha_dblouf_t, 403 get_output_fifo_s	get last output	
latex_doc_t, 363  get_len_A MHAFilter::filter_t, 500  get_len_B MHAFilter::filter_t, 500  get_length MHASignal::uint_vector_t, 773  get_level addsndfile::level_adapt_t, 177 fader_wave::level_adapt_t, 309  get_level_in_db dc::dc_t, 242  get_libname PluginLoader::config_file_splitter_t, 839  get_local_address io_tcp_parser_t, 351  get_local_port io_tcp_parser_t, 351  get_loral_port io_tcp_parser_t, 351  get_parser_tab latex_doc_t, 363  get_parser_tab latex_doc_t, 363  get_parser_var latex_doc_t, 363  get_parser_tab fw_t, 324 get_parser_var latex_doc_t, 363  get_parser_var latex_doc_t, 364  get_parser_var latex_doc_t, 364  get_parser_var latex_doc_t,	MHAFilter::o1flt_lowpass_t, 516	MHA_TCP::Timeout_Event, 457
latex_doc_t, 363 get_len_A MHAFilter::filter_t, 500 get_len_B MHAFilter::filter_t, 500 get_length MHASignal::uint_vector_t, 773 get_level addsndfile::level_adapt_t, 177 fader_wave::level_adapt_t, 309 get_level_in_db dc::dc_t, 242 get_libname PluginLoader::config_file_splitter_t, 839 get_local_address io_tcp_parser_t, 351 get_local_port io_tcp_parser_t, 351 get_longmsg MHA_Cirror, 414 get_ltass_gain_db MHAOVIFilter::fftfb_t, 583 get_manping MHASignal::uont ma_dblbuf_t, 403 get_output_fifo_fill_count mha_dblbuf_t, 403 get_output_fifo_space mha_dblbuf_t, 403 get_output_fifo_fill_count mha_dblbuf_t, 403 get_output_fifo_space mha_dblbuf_t, 403 get_output_fifo_fill_count	get_latex_doc	MHA_TCP::Wakeup_Event, 460
get_len_A MHAFilter::filter_t, 500 get_len_B MHAFilter::filter_t, 500 get_length MHASignal::uint_vector_t, 773 get_level addsndfile::level_adapt_t, 177 fader_wave::level_adapt_t, 309 get_level_in_db dc::dc_t, 242 get_level_in_db_adjusted dc::dc_t, 242 get_local_address io_tcp_parser_t, 351 get_local_port io_tcp_parser_t, 351 get_longmsg MHA_Error, 414 get_lass_gain_db MHAOVIFilter::fiftb_t, 583 get_manping MHASignal::uint_vector_t, 773 get_output_fifo_space mha_dblbuf_t, 403 get_parser_tab latex_doc_t, 363 get_parser_tab		get_outer_size
MHAFilter::filter_t, 500 get_len_B MHAFilter::filter_t, 500 get_length MHASignal::uint_vector_t, 773 get_level addsndfile::level_adapt_t, 177 fader_wave::level_adapt_t, 309 get_level_in_db dc::dc_t, 242 get_level_in_db_adjusted dc::dc_t, 242 get_libname PluginLoader::config_file_splitter_t, 839 get_local_address io_tcp_parser_t, 351 get_local_port io_tcp_parser_t, 351 get_lorams MHA_Error, 414 get_latas_gain_db MHAOVIFilter::fftfb_t, 583 get_main_category latex_doc_t, 363 get_maxping MHASignal::loop_wavefragment_t, 742 get_max_fill_count  get_output_filo_fill_count mha_dblbuf_t, 403 get_output_fifo_fill_count mha_dblbuf_t, 403 get_output_fifo_space mha_dblouder:config_lesplines mha_dblouf_t, 403 get_output_fito_space mha_dblouder:config_lesplines mha_dblouf_taloa		mha dblbuf t, 403
get_len_B  MHAFilter::filter_t, 500 get_length  MHASignal::uint_vector_t, 773 get_level  addsndfile::level_adapt_t, 177 fader_wave::level_adapt_t, 309 get_level_in_db  dc::dc_t, 242 get_libname  PluginLoader::config_file_splitter_t, 839 get_local_address io_tcp_parser_t, 351 get_local_port io_tcp_parser_t, 351 get_longmsg  MHA_Error, 414 get_ltass_gain_db  MHAOVIFilter::fftfb_t, 583 get_main_category latex_doc_t, 363 get_parser_tab latex_doc_t, 363 get_parser_var latex_doc_t, 363 get_parser_var latex_doc_t, 363 get_parser_tab latex_doc_t, 363 get_parser_var latex_doc_t, 363 get_parser_out MHA_TCP::Connection, 440 get_per_port MHA_TCP::Connection, 440 get_physical_input_ports MHAIOJack:io_jack_t, 542 MHAIOJack:io_jack_t, 542 MHAIOJack:io_jack_t, 542 MHAIOJack:io_jack_t, 542 MHAIOJack:io_jack_t, 542 MHAIOJack:io_jack_t, 547 get_plugins pluginbrowser_t, 836 get_physical_output_ports MHAIOJack:io_jack_t, 547 get_plugins pluginbrowser_t, 836 get_port_capture_latency	<b>5</b> — —	
MHAFilter::filter_t, 500  get_length	<del>-</del> '	•
get_length     MHASignal::uint_vector_t, 773 get_level     addsndfile::level_adapt_t, 177     fader_wave::level_adapt_t, 309 get_level_in_db     dc::dc_t, 242 get_level_in_db_adjusted     dc::dc_t, 242 get_libname     PluginLoader::config_file_splitter_t, 839 get_local_address     io_tcp_parser_t, 351 get_local_port     io_tcp_parser_t, 351 get_longmsg     MHA_Error, 414 get_lass_gain_db     MHAOvlFilter::fftfb_t, 583 get_main_category     latex_doc_t, 363 get_parser_var     latex_doc_t, 363 g		<u> </u>
MHASignal::uint_vector_t, 773  get_level     addsndfile::level_adapt_t, 177     fader_wave::level_adapt_t, 309  get_level_in_db     dc::dc_t, 242     get_level_in_db_adjusted     dc::dc_t, 242  get_libname     PluginLoader::config_file_splitter_t, 839  get_local_address     io_tcp_parser_t, 351  get_local_port     io_tcp_parser_t, 351  get_longmsg     MHA_Error, 414  get_lass_gain_db     MHAOvIFilter::fftfb_t, 583  get_main_category     MHASignal::loop_wavefragment_t, 742  get_max_fill_count     MHA_TCP::Server, 448  get_min_fill_count  MHA_TCP::Server, 448  get_port_capture_latency	<del>-</del> '	·
get_level     addsndfile::level_adapt_t, 177     fader_wave::level_adapt_t, 309  get_level_in_db     dc::dc_t, 242     get_level_in_db_adjusted     dc::dc_t, 242  get_libname     PluginLoader::config_file_splitter_t, 839  get_local_address     io_tcp_parser_t, 351     get_local_port     io_tcp_parser_t, 351     get_longmsg     MHA_Error, 414     get_longmsg     MHA_Error, 414     get_latss_gain_db     MHAOVIFilter::ffftb_t, 583     get_max_fill_count     mha_dblbuf_t, 403     get_parser_tab     latex_doc_t, 363     get_parser_var     latex_doc_t, 363     get_parserstate     fw_t, 324     get_paths     pluginbrowser_t, 836     get_per_address     MHA_TCP::Connection, 440     get_per_port     MHA_TCP::Connection, 440     get_physical_input_ports     MHAIOJackdb::io_jack_t, 542     MHAIOJackdb::io_jack_t, 546     get_physical_output_ports     MHAIOJackdb::io_jack_t, 547     get_max_fill_count     mha_fifo_t, 423     get_min_fill_count		— — ·
addsndfile::level_adapt_t, 177 fader_wave::level_adapt_t, 309  get_level_in_db		
fader_wave::level_adapt_t, 309  get_level_in_db	-	<u> </u>
get_level_in_db	_ · _	·
dc::dc_t, 242  get_level_in_db_adjusted     dc::dc_t, 242  get_libname     PluginLoader::config_file_splitter_t, 839  get_local_address     io_tcp_parser_t, 351  get_local_port     io_tcp_parser_t, 351  get_longmsg     MHA_TCP::Connection, 440  get_longmsg     MHA_Error, 414  get_ltass_gain_db     MHAOVIFilter::fftfb_t, 583  get_main_category     latex_doc_t, 363  get_parserstate     fw_t, 324  get_paths     pluginbrowser_t, 836  get_peer_address     MHA_TCP::Connection, 440  get_peer_port     MHA_TCP::Connection, 440  get_peer_port     MHAIOJack::io_jack_t, 542     MHAIOJackb::io_jack_t, 542     MHAIOJackdb::io_jack_t, 546  get_physical_output_ports     MHAIOJackdb::io_jack_t, 542     MHAIOJackdb::io_jack_t, 542     MHAIOJackdb::io_jack_t, 547  get_mapping     MHASignal::loop_wavefragment_t, 742  get_max_fill_count     mha_fifo_t, 423  get_port_capture_latency	· _ ·	
get_level_in_db_adjusted     dc::dc_t, 242  get_libname     PluginLoader::config_file_splitter_t, 839  get_local_address     io_tcp_parser_t, 351  get_local_port     io_tcp_parser_t, 351  get_longmsg     MHA_TCP::Connection, 440  get_longmsg     MHA_Error, 414  get_ltass_gain_db     MHAOvIFilter::fftfb_t, 583  get_main_category     latex_doc_t, 363  get_mayping     MHASignal::loop_wavefragment_t, 742  get_man_fill_count      get_parserstate     fw_t, 324  get_paths     pluginbrowser_t, 836  get_peer_address  MHA_TCP::Connection, 440  get_peer_port  MHA_TCP::Connection, 440  get_physical_input_ports  MHAIOJack:io_jack_t, 542  MHAIOJackdb::io_jack_t, 546  MHAIOJackdb::io_jack_t, 546  MHAIOJackdb::io_jack_t, 547  get_plugins     pluginbrowser_t, 836  get_port     MHA_TCP::Server, 448  get_port_capture_latency	· — — —	<del>-</del>
dc::dc_t, 242  get_libname     PluginLoader::config_file_splitter_t, 839  get_local_address     io_tcp_parser_t, 351  get_local_port     io_tcp_parser_t, 351  get_longmsg     MHA_TCP::Connection, 440  get_longmsg     MHA_Error, 414  get_ltass_gain_db     MHAOvlFilter::fftfb_t, 583  get_main_category     latex_doc_t, 363  get_mapping     MHASignal::loop_wavefragment_t, 742  get_man_fifo_t, 423  get_min_fill_count     mha_fifo_t, 423  get_min_category     mha_firo_t, 423  get_min_fill_count     mha_firo_t, 423  get_min_category     mha_firo_t, 423  get_min_fill_count     mha_firo_t, 423  get_min_category     mha_firo_t, 423  get_min_fill_count     mha_firo_t, 423  get_port_capture_latency		<del>-</del> - :
get_libname     PluginLoader::config_file_splitter_t, 839 get_local_address     io_tcp_parser_t, 351 get_local_port     io_tcp_parser_t, 351 get_longmsg     MHA_TCP::Connection, 440 get_longmsg     MHA_Error, 414 get_ltass_gain_db     MHAOVIFilter::fftfb_t, 583 get_main_category     latex_doc_t, 363 get_mapping     MHASignal::loop_wavefragment_t, 742 get_max_fill_count     mha_fifo_t, 423 get_min_fill_count      Pluginbrowser_t, 836 get_peer_address     MHA_TCP::Connection, 440 get_peer_port     MHA_TCP::Connection, 440 get_peer_port     MHAIOJack::io_jack_t, 542     MHAIOJackdb::io_jack_t, 542     MHAIOJack::io_jack_t, 546 get_plugins     pluginbrowser_t, 836 get_plugins     pluginbrowser_t, 836 get_port     MHAIOJackdb::io_jack_t, 547 get_plugins     pluginbrowser_t, 836 get_port_capture_latency		<del>-</del>
PluginLoader::config_file_splitter_t, 839 get_local_address     io_tcp_parser_t, 351 get_local_port     io_tcp_parser_t, 351 get_longmsg     MHA_TCP::Connection, 440 get_physical_input_ports     MHAIOJack::io_jack_t, 542     MHAIOJackdb::io_jack_t, 546     MHAOVIFilter::fftfb_t, 583 get_main_category     latex_doc_t, 363 get_physical_output_ports     MHAIOJack::io_jack_t, 542     MHAIOJack::io_jack_t, 542     MHAIOJackdb::io_jack_t, 547 get_mapping     MHASignal::loop_wavefragment_t, 742 get_max_fill_count     mha_fifo_t, 423 get_min_fill_count      pluginbrowser_t, 836 get_port     MHA_TCP::Server, 448 get_port_capture_latency		<del></del>
get_local_address io_tcp_parser_t, 351  get_local_port MHA_TCP::Connection, 440 get_local_input_ports MHAIOJack:io_jack_t, 542 MHAIOJackdb::io_jack_t, 542 MHAIOJackdb::io_jack_t, 546 get_main_category latex_doc_t, 363 get_physical_output_ports MHAIOJackdb::io_jack_t, 542 MHAIOJackdb::io_jack_t, 547 get_mapping MHASignal::loop_wavefragment_t, 742 get_max_fill_count get_port MHA_TCP::Server, 448 get_port_capture_latency	-	<del>-</del>
io_tcp_parser_t, 351  get_local_port     io_tcp_parser_t, 351  get_longmsg     MHA_TCP::Connection, 440  get_longmsg     MHA_TCP::Connection, 440  get_longmsg     MHA_TCP::Connection, 440  get_longmsg     MHA_TCP::Connection, 440  get_physical_input_ports     MHAIOJack::io_jack_t, 542     MHAIOJackdb::io_jack_t, 546  MHAOVIFilter::fftfb_t, 583  get_main_category     latex_doc_t, 363  get_mapping     MHASignal::loop_wavefragment_t, 742  get_max_fill_count     mha_fifo_t, 423  get_min_fill_count  MHA_TCP::Connection, 440  get_pet_ports  MHAIOJackdb::io_jack_t, 542  MHAIOJackdb::io_jack_t, 542  MHAIOJackdb::io_jack_t, 547  get_plugins     pluginbrowser_t, 836  get_port     MHA_TCP::Server, 448  get_port_capture_latency	· · · · · · · · · · · · · · · · · · ·	· •
get_local_port io_tcp_parser_t, 351  get_longmsg  MHA_Error, 414  get_ltass_gain_db  MHAOvlFilter::fftfb_t, 583  get_main_category latex_doc_t, 363  get_physical_input_ports  MHAIOJack::io_jack_t, 542  MHAIOJackdb::io_jack_t, 546  get_physical_output_ports  MHAIOJack::io_jack_t, 542  MHAIOJack::io_jack_t, 542  MHAIOJackdb::io_jack_t, 547  get_mapping  MHASignal::loop_wavefragment_t, 742  get_plugins  pluginbrowser_t, 836  get_port  MHA_TCP::Server, 448  get_port_capture_latency	<del>-</del>	
io_tcp_parser_t, 351  get_longmsg  MHA_Error, 414  get_ltass_gain_db  MHAOvlFilter::fftfb_t, 583  get_main_category  latex_doc_t, 363  get_mapping  MHASignal::loop_wavefragment_t, 742  get_max_fill_count  mha_fifo_t, 423  get_port_capture_latency  MHAIOJack::io_jack_t, 542  MHAIOJackdb::io_jack_t, 542  MHAIOJackdb::io_jack_t, 542  MHAIOJackdb::io_jack_t, 547  get_plugins  pluginbrowser_t, 836  get_port  MHA_TCP::Server, 448  get_port_capture_latency		
get_longmsg  MHA_Error, 414  get_ltass_gain_db  MHAOvIFilter::fftfb_t, 583  get_main_category  latex_doc_t, 363  get_mapping  MHASignal::loop_wavefragment_t, 742  get_max_fill_count  mha_fifo_t, 423  get_physical_input_ports  MHAIOJack::io_jack_t, 542  MHAIOJack::io_jack_t, 542  MHAIOJackdb::io_jack_t, 542  MHAIOJackdb::io_jack_t, 547  get_plugins  pluginbrowser_t, 836  get_port  MHA_TCP::Server, 448  get_port_capture_latency	·	<b>-</b> -
MHA_Error, 414  get_ltass_gain_db  MHAIOJack::io_jack_t, 542  MHAIOJackdb::io_jack_t, 546  MHAOvlFilter::fftfb_t, 583  get_main_category  latex_doc_t, 363  get_mapping  MHAIOJack::io_jack_t, 542  MHAIOJack::io_jack_t, 542  MHAIOJack::io_jack_t, 542  MHAIOJackdb::io_jack_t, 547  get_mapping  MHASignal::loop_wavefragment_t, 742  get_plugins  pluginbrowser_t, 836  get_port  mha_fifo_t, 423  get_port  MHA_TCP::Server, 448  get_port_capture_latency		<u> </u>
get_ltass_gain_db MHAOvIFilter::fftfb_t, 583 get_main_category latex_doc_t, 363 get_mapping MHAIOJackdb::io_jack_t, 542 MHAIOJackdb::io_jack_t, 542 MHAIOJackdb::io_jack_t, 547 get_mapping MHASignal::loop_wavefragment_t, 742 get_max_fill_count mha_fifo_t, 423 get_min_fill_count  MHAIOJackdb::io_jack_t, 542 MHAIOJackdb::io_jack_t, 547 get_plugins pluginbrowser_t, 836 get_port MHA_TCP::Server, 448 get_port_capture_latency		
MHAOvlFilter::fftfb_t, 583  get_main_category	<u> </u>	<del></del>
get_main_category		— <del>-</del>
latex_doc_t, 363  get_mapping  MHASignal::loop_wavefragment_t, 742  get_max_fill_count  mha_fifo_t, 423  get_min_fill_count  get_plugins  pluginbrowser_t, 836  get_port  MHA_TCP::Server, 448  get_port_capture_latency	<del>-</del> ·	
get_mapping get_plugins  MHASignal::loop_wavefragment_t, 742 pluginbrowser_t, 836 get_max_fill_count get_port  mha_fifo_t, 423 MHA_TCP::Server, 448 get_min_fill_count get_port_capture_latency		<del>_</del> _ ·
MHASignal::loop_wavefragment_t, 742 pluginbrowser_t, 836 get_max_fill_count get_port mha_fifo_t, 423 get_min_fill_count get_port_capture_latency	— — ·	<del>-</del> -
get_max_fill_count get_port mha_fifo_t, 423 MHA_TCP::Server, 448 get_min_fill_count get_port_capture_latency		<u> </u>
mha_fifo_t, 423 MHA_TCP::Server, 448 get_min_fill_count get_port_capture_latency	• • • • • •	-
get_min_fill_count get_port_capture_latency	· — — —	<del>-</del>
· · · · · · · · · · · · · · · · ·		<del>-</del>
THE STREET THE STREET STREET	mha_drifter_fifo_t, 411	MHAJack, 96

get	_port_capture_latency_int MHAJack, 97	get_var_waveform Communication between algorithms, 29
get	_port_playback_latency MHAJack, 97	get_vF
aet	_port_playback_latency_int	DynComp::gaintable_t, 288 get_vL
900	MHAJack, 97	DynComp::gaintable_t, 288
get	_ports	get_weights
•	MHAJack::client_t, 563	MHAFilter::complex_bandpass_t, 487
get	_precision	MHAFilter::gamma_flt_t, 503
	MHAParser, 107	get_window
get	_process_spec	MHAParser::window_t, 682, 683
	plug_t, 833	get_window_data
get	_process_wave	windowselector_t, 914
	plug_t, 833	get_write_event
get	_rdata	MHA_TCP::Connection, 440
	MHASignal::matrix_t, 752	get_xlimits
get	_read_event	MHATableLookup::xy_table_t, 795
	MHA_TCP::Connection, 440	get_xruns
get	_resynthesis_gain	MHAJack::client_t, 563
	MHAFilter::gamma_flt_t, 503	get_xruns_reset
get	_server_port_open	MHAJack::client_t, 563
	io_tcp_parser_t, 352	getcipd
get	_short_name	coherence, 81
	MHAJack::port_t, 568	getdata
get	_signal	MHASignal::uint_vector_t, 773
	MHAPlugin_Split::domain_handler_t, 702	getfullname
get	_size	PluginLoader::mhapluginloader_t, 845
	MHASignal::waveform_t, 784	getmodulename
get	_srate	dynamiclib_t, 278
	MHAJack::client_t, 563	Getmsg
get	_type	mha_error.hh, 953
	MHAParser::window_t, 683	getname
get	_value	dynamiclib_t, 278
	MHAParser::keyword_list_t, 633	MHA_AC::ac2matrix_t, 383
get	_values	getusername
	AuditoryProfile::fmap_t, 207	MHA_AC::ac2matrix_t, 384
get	_var	getvar
	algo_comm_t, 197	acmon::ac_monitor_t, 149
	MHAKernel::algo_comm_class_t, 570	MHA_AC::ac2matrix_helper_t, 381
get	_var_float	GF
	algo_comm_t, 197	MHAFilter::gamma_flt_t, 503
	Communication between algorithms, 29	groupdelay_t
	MHAKernel::algo_comm_class_t, 570	MHASignal::schroeder_t, 760
get	_var_int	gt
	algo_comm_t, 197	dc::dc_t, 242
	Communication between algorithms, 29	gtdata
	MHAKernel::algo_comm_class_t, 570	dc::dc_vars_t, 244
get	_var_spectrum	gtmin
	Communication between algorithms, 28	dc::dc_vars_t, 244
get	_var_vfloat	gtstep
	Communication between algorithms, 30	dc::dc_vars_t, 244

h	softclipper_t, 881
dynamiclib_t, 278	softclipper_variables_t, 883
MHASignal::hilbert_t, 739	has_been_modified
H_ERRNO	dc_simple::dc_if_t, 251
MHA_TCP, 89	has_inner_error
HELP_TEXT	analysepath_t, 204
mhamain.cpp, 1012	has_key
HINSTANCE	MHAKernel::comm_var_map_t, 572
mha_plugin.hh, 971	has_parser
HSTRERROR	PluginLoader::mhapluginloader_t, 845
MHA_TCP, 89	has_process
HTL	PluginLoader::mhapluginloader_t, 845
AuditoryProfile::parser_t::ear_t, 210	header
AuditoryProfile::profile_t::ear_t, 213	io_tcp_sound_t, 357
hamming	help
MHAWindow, 122	MHAParser::base t, 607
hamming_t	hifftwin
MHAWindow::hamming_t, 802	doasym_feature_extraction_config, 272
handle	hifftwin sum
algo_comm_t, 194	doasvm_feature_extraction_config, 272
hann	high_side_flat
hann.cpp, 936	MHAOvlFilter::band_descriptor_t, 578
hann.h, 936	hilbert
MHAOvlFilter::ShapeFun, 103	MHASignal::hilbert_fftw_t, 738
hann.cpp, 935	hilbert fftw t
hann, 936	MHASignal::hilbert_fftw_t, 738
hannf, 936	hilbert_shifter_t, 331
PI, 936	~hilbert_shifter_t, 332
hann.h, 936	analytic, 332
•	dphi, 332
hann, 936	•
hannf, 936	frameshift, 332
hann1	fullspec, 332
plingploing::plingploing_t, 832	hilbert_shifter_t, 332
hann2	kmax, 332
plingploing::plingploing_t, 832	kmin, 332
hannf	mhafft, 332
hann.cpp, 936	mixw_ref, 332
hann.h, 936	mixw_shift, 332
hanning	phi, 332
MHAWindow, 122	plan_spec2analytic, 332
hanning_ramps_t, 329	process, 332
~hanning_ramps_t, 330	shifted, 332
hanning_ramps_t, 330	hilbert_t
len_a, <mark>330</mark>	MHASignal::hilbert_t, 739
len_b, 330	host
operator(), 330	ac2osc_t, 138
ramp_a, 330	host_port_to_sock_addr
ramp_b, 330	mha_tcp.cpp, 988
hanning_t	hostApi
MHAWindow::hanning_t, 803	MHAIOPortAudio::device_info_t, 550
hardlimit	Hs

MHAFilter::fftfilterbank_t, 496	IO_ERROR_JACK
hton	mhajack.h, 1011
io_tcp_sound_t, 358	IO_ERROR_MHAJACKLIB
hw	mhajack.h, 1011
MHAFilter::fftfilterbank_t, 496	IODestroy
hwin	MHAIOFile.cpp, 993, 994
doasvm_feature_extraction_config, 272	MHAIOJack.cpp, 996, 997
hz2bark	MHAIOJackdb.cpp, 998, 999
MHAOvlFilter::FreqScaleFun, 101	MHAIOParser.cpp, 1001, 1002
hz2bark_analytic	MHAIOPortAudio.cpp, 1004, 1005
MHAOvlFilter::FreqScaleFun, 101	MHAIOTCP.cpp, 1007, 1008
hz2bark_t	IODestroy_cb
MHAOvlFilter::barkscale::hz2bark t, 580	io_lib_t, 342
hz2erb	— — :
MHAOvlFilter::FreqScaleFun, 101	IODestroy_t
hz2erb_glasberg1990	mha_io_ifc.h, 960
MHAOvlFilter::FreqScaleFun, 101	IOInit
hz2hz	MHAIOFile.cpp, 993
MHAOvlFilter::FreqScaleFun, 100	MHAIOJack.cpp, 995, 996
speechnoise.cpp, 1022	MHAIOJackdb.cpp, 998, 999
hz2khz	MHAIOParser.cpp, 1001
MHAOvlFilter::FreqScaleFun, 101	MHAIOPortAudio.cpp, 1004
hz2log	MHAIOTCP.cpp, 1007, 1008
MHAOvlFilter::FreqScaleFun, 101	IOInit_cb
hz2octave	io_lib_t, 342
MHAOvlFilter::FreqScaleFun, 101	IOInit_t
hz2third_octave	mha_io_ifc.h, 960
MHAOvIFilter::FreqScaleFun, 101	IOPrepare
hz2unit	MHAIOFile.cpp, 993
MHAOvlFilter::scale_var_t, 598	MHAIOJack.cpp, 996
IVII IAOVII III.i.scale_val_i, 330	MHAIOJackdb.cpp, 998, 999
i	MHAIOParser.cpp, 1001
io_tcp_sound_t::float_union, 359	MHAIOPortAudio.cpp, 1004
INSERT_PATCH	MHAIOTCP.cpp, 1007, 1008
acConcat wave.cpp, 917	IOPrepare_cb
acPooling wave.cpp, 918	io_lib_t, 342
acSteer.cpp, 919	IOPrepare_t
acTransform_wave.cpp, 920	mha_io_ifc.h, 960
doasym_classification.cpp, 929	IOProcessEvent_inner
doasvm_feature_extraction.cpp, 930	MHAIOJackdb::io_jack_t, 546
lpc.cpp, 938	IOProcessEvent_t
lpc bl predictor.cpp, 938	mha_io_ifc.h, 960
lpc_burg-lattice.cpp, 939	IORelease
prediction_error.cpp, 1017	MHAIOFile.cpp, 993, 994
steerbf.cpp, 1025	MHAIOJack.cpp, 996
timoSmooth.cpp, 1026	MHAIOJackdb.cpp, 998, 999
INSERT_VAR	MHAIOParser.cpp, 1001, 1002
timoSmooth.cpp, 1026	MHAIOPortAudio.cpp, 1004, 1005
INVALID SOCKET	MHAIOTCP.cpp, 1007, 1008
mha_tcp.cpp, 988	IORelease_cb
INVALID THREAD PRIORITY	io_lib_t, 342
MHAPlugin_Split, 113	IORelease t
<del>-</del> - ·	_

mha_io_ifc.h, 960	mha_io_ifc.h, 960
IOSetVar	id
MHAIOFile.cpp, 993, 994	mha_channel_info_t, 399
MHAIOJack.cpp, 996	id_str
MHAIOJackdb.cpp, 998, 999	MHAParser::base_t, 607
MHAIOParser.cpp, 1001, 1002	id string
MHAIOPortAudio.cpp, 1004, 1005	MHAParser::parser_t, 655
MHAIOTCP.cpp, 1007, 1008	identity
IOSetVar_cb	MHASignal::schroeder_t, 762
io_lib_t, 342	identity.cpp, 936
IOSetVar t	identity_t, 333
mha_io_ifc.h, 960	identity_t, 333
IOStart	prepare, 334
MHAIOFile.cpp, 993, 994	process, 333, 334
MHAIOJack.cpp, 996	release, 334
MHAIOJackdb.cpp, 998, 999	idstr
MHAIOParser.cpp, 1001	mha_channel_info_t, 399
MHAIOPortAudio.cpp, 1004, 1005	if_t
MHAIOTCP.cpp, 1007, 1008	plingploing::if_t, 828
IOStart_cb	iface
<del>_</del>	
io_lib_t, 342	MHA_TCP::Server, 449
IOStart_t	ifft
mha_io_ifc.h, 960	doasvm_feature_extraction_config, 272
IOStartedEvent_t	ifftshift
mha_io_ifc.h, 960	ifftshift.cpp, 937
IOStop	ifftshift.h, 937
MHAIOFile.cpp, 993, 994	ifftshift.cpp, 936
MHAIOJack.cpp, 996	ifftshift, 937
MHAIOJackdb.cpp, 998, 999	ifftshift.h, 937
MHAIOParser.cpp, 1001, 1002	ifftshift, 937
MHAIOPortAudio.cpp, 1004, 1005	ignore
MHAIOTCP.cpp, 1007, 1008	MHA_TCP::Event_Watcher, 445
IOStop_cb	ignored_by
io_lib_t, 342	MHA_TCP::Wakeup_Event, 460
IOStop_t	iir_filter_state_t
mha_io_ifc.h, 960	MHAFilter::iir_filter_state_t, 505
IOStoppedEvent	iir_filter_t
MHAJack::client_avg_t, 556	MHAFilter::iir_filter_t, 506
MHAJack::client_noncont_t, 558	iir_ord1_real_t
IOStoppedEvent_t	MHAFilter::iir_ord1_real_t, 509
mha_io_ifc.h, 960	iirfilter.cpp, 937
IOStrError	iirfilter t, 334
MHAIOFile.cpp, 993, 994	iirfilter_t, 335
MHAIOJack.cpp, 996, 997	prepare_, 335
MHAIOJackdb.cpp, 998, 999	process, 335
MHAIOParser.cpp, 1001, 1002	release_, 335
MHAIOPortAudio.cpp, 1004, 1005	ilen
MHAIOTCP.cpp, 1007, 1008	addsndfile::level_adapt_t, 177
IOStrError_cb	fader_wave::level_adapt_t, 309
io_lib_t, 342	im
<del>_</del> :	
IOStrError_t	mha_complex_t, 400

acsave::matdhead_t, 162 ffffilterbank::ffttp_plug_t, 317 MHASignal::matrix_t, 749–751 imagfb MHAOVIFilter::overlap_save_filterbank_analytic_t, 593 impulse_response MHAFilter::polyphase_resampling_t, 529 MHAFilter::transfer_function_t, 538 in_buf wawe2spec_t, 909 in_cfg timo_params, 895 in_spec doasvm_feature_extraction_config, 272 shadowfilter_begin::cfg_t, 867 inbuf MHA_TCP::Connection, 443 inch MHAJack::client_t, 565 increase_condition mha_fifo_posix_threads_t, 420 increment mha_fifo_posix_threads_t, 420 increment mha_fifo_posix_threads_t, 420 increment mha_fifo_posix_threads_t, 420 increment mha_fifo_posix_threads_t, 420 index_t MHAFilter::partitioned_convolution_t-: ::index_t, 524, 525 inhib_gain dc::dc_t, 243 lnit_mha_ruby mha_ruby-cpp, 973 init_peer_data MHA_TCP::Connection, 439 init_peer_data MHA_TCP::Server, 448 inner_ac_copy analysepath_t, 204 inner_sirale inner_inn MHASignal::doublebuffer_t, 734 inner_out_domain analysepath_t, 204 inner_out_domain analysepath_t, 204 inner_process db_t, 238 MHASignal::doublebuffer_t, 734 inner_input analysepath_t, 204 inner_out_domain analysepath_t, 204 inner_out_domain analysepath_t, 204 inner_process wb_t, 238 inner_process_wave2spec analysepath_t, 204 inner_process_wave2wave analysepath_t, 204 inner_sirale MHAPlugin_Resampling::resampling_t, 698 input io_parser_t, 345 MHAPlugin_resampling_:resampling_t, 698 input io_parser_t, 345 MHAPlugin_resampling_:resampling_t, 698 input io_parser_t, 345 MHAPlugin_resampling::resampling_t, 698 input io_parser_t, 345 MHAPlugin_resampli	imag	698
MHASignal::matrix_t, 749-751 imagfb  MHAOViFilter::overlap_save_filterbank analytic_t, 593 impulse_response MHAFilter::polyphase_resampling_t, 529 MHAFilter::polyphase_function_t, 538 in_buf wave2spec_t, 909 in_cfg timo_params, 895 in_spec doasvm_feature_extraction_config, 272 shadowfilter_begin::cfg_t, 867 inbuf MHA_TCP::Connection, 443 inch MHAJack::client_t, 565 increase_condition mha_fifo_posix_threads_t, 420 increment mha_fifo_posix_threads_t, 420 increase_condition mha_fifo_thread_platform_t, 427 index MHAPiter::partitioned_convolution_t- ::index_t, 524, 525 inhib_gain dc::dc_t, 243 Init_mha_ruby mha_ruby,cpp, 973 init_peer_data MHA_TCP::Connection, 439 initialize MHA_TCP::Server, 448 inner_zinput analysepath_t, 204 inner_out_domain MHASignal::doublebuffer_t, 734 inner_orcess db_t, 238 MHASignal::doublebuffer_t, 734 inner_out_domain analysepath_t, 204 inner_orcess db_t, 238 MHASignal::doublebuffer_t, 734 inner_process db_t, 238 MHASignal::doublebuffer_t, 733 inner_process db_t, 238 MHASignal::doublebuffer_t, 733 inner_process db_t, 238 MHASignal::doublebuffer_t, 733 inner_process db_t, 238 MHASignal::doublebuffer_t, 734 inner_process db_t, 238 MHAPlugin:Resampling::resampling_t, 698 input_cfg MHAPlugin::plugin_t, 693 input_cfg MHAPlugin::	acsave::mat4head_t, 162	inner_in
imagfb MHAOViFilter::overlap_save_filterbank_analytic_t, 593 impulse_response MHAFilter::polyphase_resampling_t, 529 MHAFilter:transfer_function_t, 538 in_buf wave2spec_t, 909 in_efg timo_params, 895 in_spec doasvm_feature_extraction_config, 272 shadowfilter_end::cfg_t, 870 in_spec_copy shadowfilter_begin::cfg_t, 867 inbuf MHA_TCP::Connection, 443 inch MHAJack::client_t, 565 increase_condition mha_fifo_posix_threads_t, 419 mha_fifo_thread_platform_t, 427 index MHAFilter::partitioned_convolution_t-::index_t, 524, 525 inhib_gain dc::dc_t, 243 Init_mha_ruby mha_rubycpp, 973 init_peer_data MHA_TCP::Connection, 439 initialize MHA_TCP::Server, 448 inner_eroces MHAPlugin_Resampling::resampling_t, 698 input_cfg MHAPlugin::plugin_t, 693 input_cfg MHAPlugin::plugin_t, 693 input_cfg MHAPlugin::plugin_t, 694 input_cfanmels adm_if_t, 190 mha_dblbuf_t, 405 input_domain MHASignal::doublebuffer_t, 734 inner_out_domain analysepath_t, 204 inner_out_domain analysepath_t,	fftfilterbank::fftfb_plug_t, 317	MHASignal::doublebuffer_t, 734
MHAOVIFilter::overlap_save_filterbank_manalytic_t, 593 impulse_response MHAFilter::polyphase_resampling_t, 529 MHAFilter::transfer_function_t, 538 in_buf wave2spec_t, 909 in_cfg timo_params, 895 in_spec dasvm_feature_extraction_config, 272 shadowfilter_begin::cfg_t, 870 in_spec_copy shadowfilter_begin::cfg_t, 867 inbuf MHA_TCP::Connection, 443 inch MHA_TCP::Connection, 443 inch mha_fifo_posix_threads_t, 420 increase_condition mha_fifo_posix_threads_t, 420 index_tstate_t_t_t_t_t_t_t_t_t_t_t_t_t_t_t_t_t_t	MHASignal::matrix_t, 749-751	inner_input
impulse_response  MHAFilter::polyphase_resampling_t, 529 MHAFilter::transfer_function_t, 538 in_buf     wave2spec_t, 909 in_ofg     timo_params, 895 in_spec     doasvm_feature_extraction_config, 272     shadowfilter_begin::cfg_t, 870 in_spec_copy     shadowfilter_begin::cfg_t, 867 inbuf     MHAJack::client_t, 565 increase_condition     mha_fifo_posix_threads_t, 420 increment     mhAFilter::partitioned_convolution_t     :index_t, 524, 525 inhib_gain     dc::de_t, 243 init_mha_ruby     mha_ruby.cpp, 973 init_peer_data     MHA_TCP::Connection, 439 init_mha_ruby.cpp, 973 init_peer_data     MHA_TCP::Connection, 439 init_peer_data     MHA_TCP::Server, 448 inner:Darabeta     MHA_TCP::Connection, 439 init_peer_data     MHA_TCP::Connection, 439 init_peer_data     MHA_TCP::Server, 448 inner:Darabeta     MHA_TCP::Connection, 439 init_peer_data     MHA	imagfb	analysepath_t, 204
analytic_t, 593 impulse_response MHAFilter::polyphase_resampling_t, 529 MHAFilter::transfer_function_t, 538 in_buf wave2spec_t, 909 in_cfg timo_params, 895 in_spec doasvm_feature_extraction_config, 272 shadowfilter_end::cfg_t, 870 in_spec_copy shadowfilter_begin::cfg_t, 867 inbuf MHA_TCP::Connection, 443 inch MHAJack::client_t, 565 increase_condition mha_fifo_posix_threads_t, 419 mha_fifo_posix_threads_t, 419 mha_fifo_thread_platform_t, 427 index MHAParser::keyword_list_t, 634 index_t MHAFilter::partitioned_convolution_tc- ::index_t, 524, 525 inhib_gain dc::dc_t, 243 Init_mha_ruby mha_rubycpp, 973 init_peer_data MHA_TCP::Connection, 439 inittalize MHA_TCP::Connection, 439 initialize MHA_TCP::Connection, 439 initialize MHA_TCP::Connection, 439 initialize MHAPilugin_Resampling::resampling_t, 698 inner_size MHAPlugin:_plugin_t, 694 input_cfg MHAPlugin::plugin_t, 694 input_domain analysepath_t, 204 inner_process db_t, 238 MHASignal::doublebuffer_t, 734 inner_process db_t, 238 MHASignal::doublebuffer_t, 734 inner_process db_t, 238 MHASignal::doublebuffer_t, 734 inner_process analysepath_t, 204 inner_process_wave2spec analysepath_t, 204 inner_process_wave2wave analysepath_t, 204 inner_process_wave2wave analysepath_t, 204 inner_process_wave2wave analysepath_t, 204 inner_process_wave2spec analysepath_t, 204 inner_size MHAPlugin_Resampling::resa		. –
impulse_response     MHAFilter::polyphase_resampling_t, 529     MHAFilter::polyphase_resampling_t, 529     MHAFilter::partitioned_convolution_t-cindex_t, 524, 525 inhib_gain dc::d_t, 243 inlt_mha_ruby.cpp, 973 inlt_per_data MHA_TCP::Connection, 439 inlt_mha_ruby.cpp, 973 inlt_per_data MHA_TCP::Connection, 439 inlt_mha_ruby.cpp, 973 inlt_per_data MHA_TCP::Connection, 439 inner_ac_opy analysepath_t, 204 inner_process_wave2spec analysepath_t, 204 inner_process_wave2wave analysepath_t, 204 inner_signal MHAPlugin_Resampling::resampling.th 698 inner_size MHAPlugin_Resampling::resampling.th 698 input_dosi input_elevel d::d_tas_index_t_tas_inter_process_wave2wave analysepath_t, 204 inner_process_wave2wave analysepath_t, 204 inner_process_wave2wave analysepath_t, 204 inner_signal MHAPlugin_Resampling::resampling.th 698 inner_size MHAPlugin_Resampling::resampling.th 698 input_signal MHAPlugin:plugin_t, 693 input_elevel d::d_tas_inter_total_tas_inter_process_analysepath_t, 204 inner_process_wave2wave analysepath_t, 204 inner_process_wave2wee analysepath_t, 204 inner_signal MHAPlugin:plugi	•	<del>_</del>
MHAFilter::polyphase_resampling_t, 529 MHAFilter::transfer_function_t, 538 in_buf     wave2spec_t, 909 in_cfg     im_spec     doasvm_feature_extraction_config, 272     shadowfilter_end::cfg_t, 870 in_spec_copy     shadowfilter_begin::cfg_t, 867 inbuf MHA_TCP::Connection, 443 inch     MHAJack::client_t, 565 increase_condition     mha_fifo_posix_threads_t, 420 increment     mha_fifo_posix_threads_t, 420 increment     mha_fifo_posix_threads_t, 427 index     MHAParser::keyword_list_t, 634 index_t MHAPitter::partitioned_convolution_t←     ::index_t, 524, 525 inhib_gain     dc::dc_t, 243 Init_mha_ruby     mha_ruby, cpp, 973 init_pee_data     MHA_TCP::Connection, 439 initalize     MHA_TCP::Connection, 439 input_domain     PluginLoader::mhapluginloader_t, 845 input_domain     PluginLoader::mhapluginloader_t, 845 input_domain     PluginLoader::mhapluginloader_t, 845 input_flevel     dc::dc_vars_t, 245 input_level     dc::dc_vars_t, 245 input_signal_wave     MHAFilter::partitioned_convolution_t, 523 input_signal_wave     MHAFilter::partitioned_convolution_t, 522 input_to_process	· —	
MHAFilter::transfer_function_t, 538 in_buf wave2spec_t, 909 in_cfg timo_params, 895 in_spec doasvm_feature_extraction_config, 272 shadowfilter_end::cfg_t, 870 in_spec_copy mha_fifo_posix_threads_t, 420 increment mha_fifo_posix_threads_t, 420 increment mha_fifo_posix_threads_t, 420 inindex_t MHAPilter::partitioned_convolution_tch ::index_t, 524, 525 inhib_gain dc::dc_t, 243 Init_mha_ruby mha_ruby.cpp, 973 init_peer_data MHAPilugin_Resampling::resampling_t, 698 inner_size mha_dblbuf_t, 405 input_cfg MHAPlugin::plugin_t, 693 input_cfg MHAPlugin::plugin_t, 694 input_domain PluginLoader::mhapluginloader_t, 845 input_domain PluginLoader::mhapluginloader_t, 845 input_level input_signal_spec MHAPlugin_spec MHAPlugin_specampling_t, 698 inner_ac_copy analysepath_t, 204 inner_error analysepath_t, 204 inner_error analysepath_t, 204 inner_fragsize inner_process db, t, 238 MHAASignal::doublebuffer_t, 733 inner_process_wave2spec analysepath_t, 204 inner_process_wave2spec analysepath_t, 204 inner_signal MHAPlugin_Resampling::resampling_t, 698 inner_size mha_dblbuf_t, 405 inner_size mha_dblbuf_t, 405 input_cfg MHAPlugin::plugin_t, 693 input_signal_spec MHAPlugin::plugin_t, 694 input_for mha_dblbuf_t, 405 input_level dc::dc_vars_t, 245 input_portnames MHAJeitter::partitioned_convolution_t, 523 input_signal_spec MHAFilter::partitioned_convolution_t, 523 input_signal_wave MHAFilter::partitioned_convolution_t, 523 input_signal_wave MHAFilter::partitioned_convolution_t, 523 input_signal_wave MHAFilter::partitioned_convolution_t, 523 input_signal_wave MHAFilter::partitioned_convolution_t, 522 input_to_process analysepath_t, 204	. – .	
in_buf wave2spec_t, 909 in_cfg timo_params, 895 in_spec doasvm_feature_extraction_config, 272 shadowfilter_end::cfg_t, 870 in_spec_copy shadowfilter_begin::cfg_t, 867 inbuf MHA_TCP::Connection, 443 inch MHAJack::client_t, 565 increase_condition mha_fifo_posix_threads_t, 420 increment mha_fifo_posix_threads_t, 419 mha_fifo_thread_platform_t, 427 index MHAParser::keyword_list_t, 634 index_t MHAFilter::partitioned_convolution_trace::index_t, 524, 525 inhib_gain do::dc_t, 243 Init_mha_ruby mha_ruby.cpp, 973 init_peer_data MHA_TCP::Connection, 439 init_peer_data MHAPlugin_Resampling:resampling_t, 698 inner_ac_copy analysepath_t, 204 inner_process_wave2spec analysepath_t, 204 inner_sprocess_wave2spec analysepath_t, 204 inner_sproder_soder_t, 405 input_sproder_t,	, ,, , , , , , , , , , , , , , , , , , ,	• • —
wave2spec_t, 909 in_cfg timo_params, 895 in_spec doasvm_feature_extraction_config, 272 shadowfilter_end::cfg_t, 870 in_spec_copy shadowfilter_begin::cfg_t, 867 inbuf MHA_TCP::Connection, 443 inch MHAJack::client_t, 565 increase_condition mha_fifo_posix_threads_t, 420 increment mha_fifo_posix_threads_t, 419 mha_fifo_thread_platform_t, 427 index MHAParser::keyword_list_t, 634 index_t MHAFilter::partitioned_convolution_tcgin :index_t, 524, 525 inhib_gain dc::dc_t, 243 Init_mha_ruby mha_ruby.cpp, 973 init_peer_data MHA_TCP::Connection, 439 innet_accopy analysepath_t, 204 inner_signal  MHAPlugin_Resampling::resampling_t, 698 inner_size mha_dblbuf_t, 405 inner_srate MHAPlugin_Resampling::resampling_t, 698 input_ofg MHAPlugin::plugin_t, 693 input_cfg MHAPlugin::plugin_t, 694 input_domain PluginLoader::mhapluginloader_t, 845 input_domain PluginLoader::mhapluginloader_t, 845 input_evel dc::dc_vars_t, 245 input_signal_spec MHAPilter::partitioned_convolution_t, 523 input_signal_wave MHAFilter::partitioned_convolution_t, 522 input_signal_wave		
in_cfg timo_params, 895 in_spec doasvm_feature_extraction_config, 272 shadowfilter_end::cfg_t, 870 in_spec_copy shadowfilter_begin::cfg_t, 867 inbuf MHA_TCP::Connection, 443 inch MHAJack::client_t, 565 increase_condition mha_fifo_posix_threads_t, 420 increment mha_fifo_posix_threads_t, 419 mha_fifo_thread_platform_t, 427 index MHAParser::keyword_list_t, 634 index_t MHAFilter::partitioned_convolution_t- ::index_t, 524, 525 inhilb_gain dc::do_t, 243 lnit_mha_ruby mha_ruby.cpp, 973 init_peer_data MHA_TCP::Connection, 439 initialize MHA_TCP::Server, 448 inner_ac_copy analysepath_t, 204 inner_size mha_dblbuf_t, 405 inner_size mha_dblbuf_t, 405 inner_size mha_dblbuf_t, 405 input_oparser_t, 345 MHAPlugin_Resampling::resampling_t, 698 input input_cfg MHAPlugin::plugin_t, 693 input_cfg MHAPlugin::plugin_t, 694 input_channels adm_if_t, 190 mha_dblbuf_t, 405 input_domain PluginLoader::mhapluginloader_t, 845 input_level dc::dc_vars_t, 245 input_signal_spec MHAFilter::partitioned_convolution_t, 523 input_signal_wave MHAFilter::partitioned_convolution_t, 522 input_signal_wave MHAFilter::partitioned_convolution_t, 522 input_signal_wave MHAFilter::partitioned_convolution_t, 522 input_toprocess analysepath_t, 204 inner_process_wave2spec analysepath_t, 204 inner_signal inter_signal i		
timo_params, 895 in_spec doasvm_feature_extraction_config, 272 shadowfilter_end::cfg_t, 870 in_spec_copy shadowfilter_begin::cfg_t, 867 inbuf MHA_TCP::Connection, 443 inch MHAJack::client_t, 565 increase_condition mha_fifo_posix_threads_t, 420 increment mha_fifo_posix_threads_t, 419 mha_fifo_posix_threads_t, 419 mha_fifo_thread_platform_t, 427 index MHAPitter::partitioned_convolution_t- ::index_t, 524, 525 inhib_gain dc::dc_t, 243 Init_mha_ruby mha_ruby.cpp, 973 inittlaize MHA_TCP::Connection, 439 initialize MHA_TCP::Server, 448 inner2outer_resampling MHAPlugin_Resampling::resampling_t, 698 inner_ac_copy analysepath_t, 204 inner_signal MHAPlugin_Resampling::resampling_t, 698 inner_size mha_dblbuf_t, 405 inner_srate MHAPlugin_Resampling::resampling_t, 698 input io_parser_t, 345 MHAJack::port_t, 566 MHASignal::loop_wavefragment_t, 741 mha_dblbuf_t, 404 input_cfg MHAPlugin::plugin_t, 693 input_cfg MHAPlugin::plugin_t, 694 input_cfg MHAPlugin::plugin_t, 694 input_cfg MHAPlugin::plugin_t, 694 input_cfg MHAPlugin::plugin_t, 693 input_cfg MHAPlugin::plugin_t, 694 input_cfg MHAPlugin::plugin_t, 695 input_cfg MHAPlugin::plugin_t, 695 input_cfg MHAPlugin::plugin_t, 695 input_cfg MHAPlugin::plugin_t, 695 input_cfg MHAPlugin::plugin_t, 693 input_cfg MHAPlugin::plugin_t, 695 input_cfg MHAPlugin::plugin_	• —	_
in_spec doasvm_feature_extraction_config, 272 shadowfilter_end::cfg_t, 870 in_spec_copy shadowfilter_begin::cfg_t, 867 inbuf MHA_TCP::Connection, 443 inch MHAJack::client_t, 565 increase_condition mha_fifo_posix_threads_t, 420 increment mha_fifo_posix_threads_t, 419 mha_fito_thread_platform_t, 427 index MHAParser::keyword_list_t, 634 index_t MHAFilter::partitioned_convolution_t- ::index_t, 524, 525 inhib_gain dc::dc_t, 243 Init_mha_ruby mha_ruby,cpp, 973 init_peer_data MHA_TCP::Connection, 439 initialize MHAPlugin_Resampling::resampling_t, 698 inner_ac_copy analysepath_t, 204 inner_size MHAPlugin_Resampling::resampling_t, 698 inner_ac_copy analysepath_t, 204 inner_size MHAPlugin_Resampling::resampling_t, 698 inner_ac_copy analysepath_t, 204 inner_size MHAPlugin_resampling_t, 698 inner_ac_copy analysepath_t, 204 inner_size MHAPlugin_resampling_t, 698 MHAPlugin:plugin_t, 694 input_cfg MHAPlugin::plugin_t, 694 input	— :	
doasvm_feature_extraction_config, 272 shadowfilter_end::cfg_t, 870 in_spec_copy shadowfilter_begin::cfg_t, 867 inbuf MHA_TCP::Connection, 443 inner_size MHAPlugin_Resampling::resampling_t, 698 inner_srate MHAPlugin_Resampling::resampling_t, 698 inner_srate MHAPlugin_Resampling::resampling_t, 698 inner_srate MHAPlugin_Resampling::resampling_t, 698 input_cfg MHAPlugin::plugin_t, 693 input_cfg MHAPlugin::plugin_t, 693 input_cfg MHAPlugin::plugin_t, 694 input_channels adm_if_t, 190 mha_dblbuf_t, 405 input_domain PluginLoader::mhapluginloader_t, 845 input_loader::mhapluginloader_t, 845 input_level dc::dc_vars_t, 245 input_level dc::dc_vars_t, 245 input_signal_spec MHAPilter::partitioned_convolution_t, 523 input_signal_spec MHAPilter::partitioned_convolution_t, 523 input_signal_spec MHAPilter::partitioned_convolution_t, 522 input_to_process analysepath_t, 204 inner_signal maysepath_t, 204 inner_signal malysepath_t, 204 inner_signal malpsepath_t, 204 inner_signal malpsepath_t, 204 inner_signal malpsepath_t, 204 inner_signal malpsepath_t, 204 inner_size malpsepath_t, 204 inner_si	_ <del>-</del>	· · · —
in_spec_copy shadowfilter_end::cfg_t, 870 in_spec_copy shadowfilter_begin::cfg_t, 867 inbuf MHA_TCP::Connection, 443 inch MHAJack::client_t, 565 increase_condition mha_fifo_posix_threads_t, 420 increment mha_fifo_thread_platform_t, 427 index MHAParser::keyword_list_t, 634 index_t MHAFilter::partitioned_convolution_t→ ::index_t, 524, 525 inhib_gain dc::dc_t, 243 Init_mha_ruby mha_ruby.cpp, 973 init_peer_data MHA_TCP::Connection, 439 init_peer_data MHA_TCP::Server, 448 inner2outer_resampling MHAPlugin-rypatherioned_convolution_t+ 698 inner_ac_copy analysepath_t, 204 inner_error analysepath_t, 204 inner_fragsize inner_signal MHAPlugin_Resampling::resampling_t, 698 inner_size mha_dblbuf_t, 405 inner_size mha_dblbuf_t, 405 inner_size mha_dblbuf_t, 405 inner_srate MHAPlugin_Resampling::resampling_t, 698 input io_parser_t, 345 MHASignal::loop_wavefragment_t, 741 mha_dblbuf_t, 404 input_cfg MHAPlugin::plugin_t, 693 input_cfg MHAPlugin::plugin_t, 693 input_cfg MHAPlugin::plugin_t, 693 input_cdmain PluginLoader::mhapluginloader_t, 845 input_level dc::dc_vars_t, 245 input_signal_spec MHAFilter::partitioned_convolution_t, 523 input_signal_wave MHAFilter::partitioned_convolution_t, 522 input_signal_wave MHAFilter::partitioned_convolution_t, 522 input_to_process analysepath_t, 204	— ·	<del>-</del> -
in_spec_copy shadowfilter_begin::cfg_t, 867 inbuf  MHA_TCP::Connection, 443 inch  MHAJack::client_t, 565 increase_condition  mha_fifo_posix_threads_t, 420 increment  mha_fifo_posix_threads_t, 419  mha_fifo_thread_platform_t, 427 index  MHAParser::keyword_list_t, 634 index_t  MHAFilter::partitioned_convolution_t→  ::index_t, 524, 525 inhib_gain  dc::dc_t, 243 Init_mha_ruby  mha_ruby.cpp, 973 init_pee_data  MHA_TCP::Connection, 439 initialize  MHA_TCP::Server, 448 inner2outer_resampling  MHAPlugin_Resampling::resampling_t, 698 inner_ac_copy  analysepath_t, 204 inner_error  analysepath_t, 204 inner_fragsize  MHAPilter::partitioned_convolution_t, 522 input_signal_wave  MHAFilter::partitioned_convolution_t, 522 input_to_process analysepath_t, 204 inner_fragsize  MHAPlugin_Resampling::resampling_t, 698 inner_size  MHAPlugin_Resampling::resampling_t, 698 input_cfg  MHAPlugin_Resampling::resampling_t, 405 input_cfg  MHAPlugin_Resampling::resampling_t, 698 input_cfg  M	<del>-</del>	• • —
shadowfilter_begin::cfg_t, 867 inbuf  MHA_TCP::Connection, 443 inch  MHAJack::client_t, 565 increase_condition  mha_fifo_posix_threads_t, 420 increment  mha_fifo_posix_threads_t, 419  mha_fifo_thread_platform_t, 427 index  MHAParser::keyword_list_t, 634 index_t  MHAFilter::partitioned_convolution_t→  :iindex_t, 524, 525 inhib_gain  dc::dc_t, 243 Init_mha_ruby  mha_ruby.cpp, 973 init_peer_data  MHA_TCP::Connection, 439 initialize  MHA_TCP::Connection, 439 initialize  MHAPlugin::plugin_t, 693 input_cfg  MHAPlugin::plugin_t, 693 input_cfg  MHAPlugin::plugin_t, 693 input_cdannels  adm_if_t, 190  mha_dblbuf_t, 405 input_domain  PluginLoader::mhapluginloader_t, 845 input_level  dc::dc_vars_t, 245 input_signal_spec  MHAPlueri::partitioned_convolution_t, 523 input_signal_spec  MHAPlugin::plugin_t, 694 input_cdannels  adm_if_t, 190  mha_dblbuf_t, 405 input_level  dc::dc_vars_t, 245 input_portnames  MHAPlugin::plugin_t, 693 input_cfg  MHAPlugin::plugin_t, 693 input_cdannels  adm_if_t, 190  mha_dblbuf_t, 405 input_level  dc::dc_vars_t, 245 input_portnames  MHAPlugin::plugin_t, 693 input_cfg  MHAPlugin:p	<u> </u>	<del>_</del> •
inbuf     MHA_TCP::Connection, 443 inch     MHAJack::client_t, 565 increase_condition     mha_fifo_posix_threads_t, 420 increment     mha_fifo_posix_threads_t, 419     mha_fifo_thread_platform_t, 427 index     MHAParser::keyword_list_t, 634 index_t     MHAFilter::partitioned_convolution_t←     ::index_t, 524, 525 inhib_gain     dc::dc_t, 243 lnit_mha_ruby     mha_ruby.cpp, 973 init_peer_data     MHA_TCP::Connection, 439 inhit_alize     MHA_TCP::Connection, 439 inner_ac_copy     analysepath_t, 204 inner_error     analysepath_t, 204 inner_fragsize  inner_size     mha_dblbuf_t, 405 inner_sate     MHAPlugin_Resampling::resampling_t, 698 inner_sate     MHAPlugin_Resampling::resampling_t, 698 inner_sate     MHAPlugin_Resampling::resampling_t, 698 input_cfg     MHAPlugin::plugin_t, 693 input_cfg     MHAPlugin::plugin_t, 693 input_cfg     MHAPlugin::plugin_t, 693 input_cfg     MHAPlugin::plugin_t, 694 input_cdannels     adm_if_t, 190     mha_dblbuf_t, 405 input_domain     PluginLoader::mhapluginloader_t, 845 input_level     dc::dc_vars_t, 245 input_portnames     MHAJack::client_t, 565 input_signal_spec     MHAFilter::partitioned_convolution_t, 523 input_signal_wave     MHAFilter::partitioned_convolution_t, 522 input_to_process     analysepath_t, 204	— · — · ·	
MHA_TCP::Connection, 443 inch  MHAJack::client_t, 565 increase_condition  mha_fifo_posix_threads_t, 420 increment  mha_fifo_posix_threads_t, 419  mha_fifo_thread_platform_t, 427 index  MHAParser::keyword_list_t, 634 index_t  MHAPilter::partitioned_convolution_t⊷  ::index_t, 524, 525 inhib_gain  dc::dc_t, 243 Init_mha_ruby  mha_ruby.cpp, 973 init_peer_data  MHA_TCP::Connection, 439 inner_sate  MHAPlugin_Resampling::resampling_t, 698 inner_ac_copy  analysepath_t, 204 inner_fragsize  MHAPlugin_Resampling::resampling_t, 698 inner_fragsize  mha_dlblbuf_t, 405 inner_srate  MHAPlugin_Resampling::resampling_t, 698 input_ cfg  MHAPlugin::plugin_t, 693 input_cfg  MHAPlugin::plugin_t, 693 input_cfg  MHAPlugin::plugin_t, 694 input_cdannels  adm_if_t, 190  mha_dblbuf_t, 405 input_domain  PluginLoader::mhapluginloader_t, 845 input_level  dc::dc_vars_t, 245 input_signal_spec  MHAJack::client_t, 565 input_signal_spec  MHAFilter::partitioned_convolution_t, 523 input_signal_wave  MHAFilter::partitioned_convolution_t, 522 input_signal_wave  MHAFilter::partitioned_convolution_t, 522 input_to_process  analysepath_t, 204	_ • •	
innch  MHAJack::client_t, 565 increase_condition  mha_fifo_posix_threads_t, 420 increment  mha_fifo_posix_threads_t, 419  mha_fifo_thread_platform_t, 427 index  MHAParser::keyword_list_t, 634 index_t  MHAFilter::partitioned_convolution_t→  ::index_t, 524, 525 inhib_gain  dc::dc_t, 243 Init_mha_ruby  mha_ruby.cpp, 973 init_peer_data  MHA_TCP::Connection, 439 initialize  MHA_TCP::Server, 448 inner2outer_resampling  MHAPlugin_Resampling::resampling_t, 698 inner_ac_copy  analysepath_t, 204 inner_error  analysepath_t, 204 inner_fragsize  inner_srate  MHAPlugin_Resampling::resampling_t, 698 input io_parser_t, 345  MHAJack::port_t, 566  MHASignal::loop_wavefragment_t, 741 mha_dblbuf_t, 404 input_cfg  MHAPlugin::plugin_t, 693 input_cofg  MHAPlugin::plugin_t, 693 input_cofg  MHAPlugin::plugin_t, 694 input_domain  PluginLoader::mhapluginloader_t, 845 input_level  dc::dc_vars_t, 245 input_signal_spec  MHAFilter::partitioned_convolution_t, 523 input_signal_wave  MHAFilter::partitioned_convolution_t, 522 input_signal_wave  MHAFilter::partitioned_convolution_t, 522 input_to_process  analysepath_t, 204		<del>_</del>
MHAJack::client_t, 565 increase_condition     mha_fifo_posix_threads_t, 420 increment     mha_fifo_posix_threads_t, 419     mha_fifo_posix_threads_t, 420     index_t     MHAPlugin:plugin_t, 566     MHAPlugin::plugin_t, 693     input_cfg     MHAPlugin::plugin_t, 693     input_cdg     MHAPlugin::plugin_t, 694     input_channels     adm_if_t, 190     mha_dblbuf_t, 405     input_domain     PluginLoader::mhapluginloader_t, 845     input_level     de::dc_vars_t, 245     input_portnames     MHAJack::client_t, 565     input_signal_spec     MHAFilter::partitioned_convolution_t, 523     input_signal_wave     MHAFilter::partitioned_convolution_t, 522     input_signal_wave     MHAFilter::partitioned_convolution_t, 522     input_to_process     analysepath_t, 204     input_cfg     MHAPlugin::plugin_t, 693     input_cfg     MHAPlugin::plugin_t, 694     input_cdg     mha_dblbuf_t, 405     input_domain     PluginLoader::mhapluginloader_t, 845     input_level     de::dc_vars_t, 245     input_portnames     MHAJack::client_t, 565     input_signal_wave     MHAFilter::partitioned_convolution_t, 522     input_signal_wave     MHAFilter::partitioned_convolution_t, 522     input_to_process     analysepath_t, 204		— — ·
increase_condition     mha_fifo_posix_threads_t, 420 increment     mha_fifo_posix_threads_t, 419     mha_fifo_thread_platform_t, 427 index     MHAParser::keyword_list_t, 634 index_t     MHAFilter::partitioned_convolution_t     ::index_t, 524, 525 inhib_gain     dc::dc_t, 243 Init_mha_ruby     mha_ruby.cpp, 973 init_peer_data     MHA_TCP::Connection, 439 initialize     MHA_TCP::Server, 448 inner2outer_resampling     MHAPlugin_Resampling::resampling_t, 698 inner_ac_copy     analysepath_t, 204 inner_error     analysepath_t, 204 mha_dblbuf_t, 406 inner_fragsize  input     io_parser_t, 345     MHAJack::port_t, 566     MHAJack::port_t, 566     MHAJack::port_t, 566     MHAJack::port_t, 566     MHAJack::port_t, 566     MHAJack::port_t, 566     MHAPlagin::plugin_t, 693     input_cfg     MHAPlugin::plugin_t, 693     input_efg     MHAPlugin::plugin_t, 693     input_edam     input_efg     MHAPlugin::plugin_t, 693     input_edg     MHAPlugin::plugin_t, 409     input_opath     input_efg     MHAPlugin::plugin_t, 693     input_edg     MHAPlugin::plugin_t, 693     input_efg     MHAPlugin::plugin_t, 693     input_edg     input_efg     MHAPlugin::plugin_t, 693     input_efg     MHAPlugin::plugin_t, 693     input_edg     input_efg     MHAPlugin::plugin_t, 693     input_efg     MHAPlugin::plugin_t, 694     input_efg     MHAPlugin::plugin_t, 693		<del>_</del>
mha_fifo_posix_threads_t, 420 increment  mha_fifo_posix_threads_t, 419  mha_fifo_posix_threads_t, 419  mha_fifo_posix_threads_t, 419  mha_fifo_thread_platform_t, 427 index  MHAParser::keyword_list_t, 634 index_t  MHAFilter::partitioned_convolution_t→  ::index_t, 524, 525 inhib_gain  dc::dc_t, 243 lnit_mha_ruby  mha_ruby.cpp, 973 init_peer_data  MHA_TCP::Connection, 439 initialize  MHA_TCP::Server, 448 inner2outer_resampling  MHAPlugin::plugin_t, 694 input_cfg  MHAPlugin::plugin_t, 693 input_efg  MHAPlugin::plugin_t, 694 input_channels  adm_if_t, 190  mha_dblbuf_t, 405 input_domain  PluginLoader::mhapluginloader_t, 845 input_fifo  mha_dblbuf_t, 405 input_level  dc::dc_vars_t, 245 input_portnames  MHAJack::client_t, 565 input_signal_spec  MHAPilter::partitioned_convolution_t, 523 input_signal_wave  MHAFilter::partitioned_convolution_t, 522 input_signal_wave  MHAFilter::partitioned_convolution_t, 522 input_oprocess analysepath_t, 204	<del>-</del> ·	
increment     mha_fifo_posix_threads_t, 419     mha_fifo_thread_platform_t, 427 index     MHAParser::keyword_list_t, 634 index_t     MHAFilter::partitioned_convolution_t←	<del>-</del>	
mha_fifo_posix_threads_t, 419     mha_fifo_thread_platform_t, 427 index  MHAParser::keyword_list_t, 634 index_t  MHAFilter::partitioned_convolution_t←     ::index_t, 524, 525 inhib_gain     dc::dc_t, 243 Init_mha_ruby     mha_ruby.cpp, 973 init_peer_data     MHA_TCP::Connection, 439 initialize     MHA_TCP::Server, 448 inner2outer_resampling     MHAPlugin_Resampling::resampling_t, 698 inner_ac_copy     analysepath_t, 204 inner_fragsize  MHAFilter::partitioned_convolution_t←     imput_cfg     MHAPlugin::plugin_t, 693 input_cfg_     MHAPlugin::plugin_t, 694 input_channels     adm_if_t, 190     mha_dblbuf_t, 405 input_domain     PluginLoader::mhapluginloader_t, 845 input_level     dc::dc_vars_t, 245 input_portnames     MHAJack::client_t, 565 input_signal_spec     MHAFilter::partitioned_convolution_t, 523 input_signal_wave     MHAFilter::partitioned_convolution_t, 522 input_to_process     analysepath_t, 204	<b>.</b>	•
mha_fifo_thread_platform_t, 427 index  MHAParser::keyword_list_t, 634 index_t  MHAFilter::partitioned_convolution_t←		_ <del>.</del>
index		• —
MHAParser::keyword_list_t, 634 index_t  MHAFilter::partitioned_convolution_t→  ::index_t, 524, 525  MHAPlugin::plugin_t, 693  input_cfg  MHAPlugin::plugin_t, 694  input_cfg  MHAPlugin::plugin_t, 694  input_channels  adm_if_t, 190  mha_ruby.cpp, 973  init_peer_data  MHA_TCP::Connection, 439  input_domain  PluginLoader::mhapluginloader_t, 845  input_fifo  mha_dblbuf_t, 405  input_level  inner2outer_resampling  MHAPlugin_Resampling::resampling_t, 698  inner_ac_copy  analysepath_t, 204  mha_dblbuf_t, 406  input_signal_spec  MHAFilter::partitioned_convolution_t, 523  input_to_process  analysepath_t, 204  mha_dblbuf_t, 406  input_to_process  analysepath_t, 204		• • • • • • • •
index_t  MHAFilter::partitioned_convolution_t→  ::index_t, 524, 525  inhib_gain  dc::dc_t, 243  Init_mha_ruby  mha_ruby.cpp, 973  init_peer_data  MHA_TCP::Connection, 439  initialize  MHA_TCP::Server, 448  inner2outer_resampling  MHAPlugin_Resampling::resampling_t,  698  inner_ac_copy  analysepath_t, 204  mha_dblbuf_t, 406  input_channels  adm_if_t, 190  mha_dblbuf_t, 405  input_domain  PluginLoader::mhapluginloader_t, 845  input_fifo  mha_dblbuf_t, 405  input_level  dc::dc_vars_t, 245  input_portnames  MHAJack::client_t, 565  input_signal_spec  MHAFilter::partitioned_convolution_t, 523  input_signal_wave  MHAFilter::partitioned_convolution_t, 522  input_to_process  analysepath_t, 204  mha_dblbuf_t, 406  input_to_process  analysepath_t, 204		
MHAFilter::partitioned_convolution_t→	• — —	• — •
::index_t, 524, 525  inhib_gain	<del>_</del>	· · · · ·
inhib_gain dc::dc_t, 243  Init_mha_ruby mha_ruby.cpp, 973  init_peer_data MHA_TCP::Connection, 439 inner2outer_resampling MHAPlugin_Resampling::resampling_t, 698  inner_ac_copy analysepath_t, 204 mha_dblbuf_t, 406 inner_fragsize  input_channels adm_if_t, 190 mha_dblbuf_t, 405 input_domain PluginLoader::mhapluginloader_t, 845 input_fifo mha_dblbuf_t, 405 input_level input_level input_portnames MHAJack::client_t, 565 input_signal_spec MHAFilter::partitioned_convolution_t, 523 input_signal_wave MHAFilter::partitioned_convolution_t, 522 input_to_process analysepath_t, 204 input_to_process analysepath_t, 204		• — •
dc::dc_t, 243  Init_mha_ruby     mha_ruby.cpp, 973  init_peer_data     MHA_TCP::Connection, 439  initialize     MHA_TCP::Server, 448  inner2outer_resampling     MHAPlugin_Resampling::resampling_t, 698  inner_ac_copy     analysepath_t, 204     mha_dblbuf_t, 406  input_level  input_level  input_portnames     MHAJack::client_t, 565  input_signal_spec     MHAFilter::partitioned_convolution_t, 523  input_signal_wave     MHAFilter::partitioned_convolution_t, 522  input_oprocess  input_signal_wave     MHAFilter::partitioned_convolution_t, 522  input_oprocess  analysepath_t, 204  input_to_process  analysepath_t, 204		
Init_mha_ruby mha_ruby.cpp, 973 init_peer_data MHA_TCP::Connection, 439 initialize MHA_TCP::Server, 448 inner2outer_resampling MHAPlugin_Resampling::resampling_t, 698 inner_ac_copy analysepath_t, 204 mha_dblbuf_t, 406 input_domain PluginLoader::mhapluginloader_t, 845 input_fifo mha_dblbuf_t, 405 input_level dc::dc_vars_t, 245 input_portnames MHAJack::client_t, 565 input_signal_spec MHAFilter::partitioned_convolution_t, 523 input_signal_wave MHAFilter::partitioned_convolution_t, 522 input_signal_wave MHAFilter::partitioned_convolution_t, 522 input_oprocess input_signal_wave analysepath_t, 204 mha_dblbuf_t, 406 input_to_process analysepath_t, 204		• —
mha_ruby.cpp, 973 init_peer_data	<del>_</del> ·	<del> :</del>
init_peer_data  MHA_TCP::Connection, 439  initialize  MHA_TCP::Server, 448  inner2outer_resampling  MHAPlugin_Resampling::resampling_t,  698  inner_ac_copy  analysepath_t, 204  inner_error  analysepath_t, 204  mha_dblbuf_t, 406  input_level  input_portnames  MHAJack::client_t, 565  input_signal_spec  MHAFilter::partitioned_convolution_t, 523  input_signal_wave  MHAFilter::partitioned_convolution_t, 522  input_signal_wave  MHAFilter::partitioned_convolution_t, 522  input_to_process  input_to_process  analysepath_t, 204		
MHA_TCP::Connection, 439 injut_fifo mha_dblbuf_t, 405 MHA_TCP::Server, 448 inner2outer_resampling MHAPlugin_Resampling::resampling_t, 698 inner_ac_copy analysepath_t, 204 inner_error analysepath_t, 204 mha_dblbuf_t, 406 input_fifo mha_dblbuf_t, 405 input_level dc::dc_vars_t, 245 input_portnames MHAJack::client_t, 565 input_signal_spec MHAFilter::partitioned_convolution_t, 523 input_signal_wave MHAFilter::partitioned_convolution_t, 522 input_to_process input_to_process analysepath_t, 204		• =
initialize mha_dblbuf_t, 405  MHA_TCP::Server, 448 inner2outer_resampling dc::dc_vars_t, 245  MHAPlugin_Resampling::resampling_t, 698 inner_ac_copy input_signal_spec analysepath_t, 204 inner_error input_signal_wave analysepath_t, 204 mha_dblbuf_t, 406 inner_fragsize MHAFilter::partitioned_convolution_t, 522 input_signal_wave analysepath_t, 204 input_signal_wave input_signal_wave analysepath_t, 204 input_to_process analysepath_t, 204	<b>—</b> , —	
MHA_TCP::Server, 448 inner2outer_resampling	MHA_TCP::Connection, 439	input_fifo
inner2outer_resampling  MHAPlugin_Resampling::resampling_t, 698  inner_ac_copy analysepath_t, 204 inner_error analysepath_t, 204 mha_dblbuf_t, 406 inner_fragsize  dc::dc_vars_t, 245 input_portnames MHAJack::client_t, 565 input_signal_spec MHAFilter::partitioned_convolution_t, 523 input_signal_wave MHAFilter::partitioned_convolution_t, 522 input_to_process analysepath_t, 204	initialize	mha_dblbuf_t, 405
MHAPlugin_Resampling::resampling_t, 698 inner_ac_copy analysepath_t, 204 inner_error analysepath_t, 204 mha_dblbuf_t, 406 inner_fragsize input_portnames MHAJack::client_t, 565 input_signal_spec MHAFilter::partitioned_convolution_t, 523 input_signal_wave MHAFilter::partitioned_convolution_t, 522 input_to_process analysepath_t, 204	MHA_TCP::Server, 448	input_level
698  inner_ac_copy  analysepath_t, 204  inner_error  analysepath_t, 204  mha_dblbuf_t, 406  inner_fragsize  MHAJack::client_t, 565  input_signal_spec  MHAFilter::partitioned_convolution_t, 523  input_signal_wave  MHAFilter::partitioned_convolution_t, 522  input_to_process  analysepath_t, 204	inner2outer_resampling	dc::dc_vars_t, 245
inner_ac_copy input_signal_spec analysepath_t, 204 MHAFilter::partitioned_convolution_t, 523 inner_error input_signal_wave analysepath_t, 204 MHAFilter::partitioned_convolution_t, 522 mha_dblbuf_t, 406 input_to_process inner_fragsize analysepath_t, 204	MHAPlugin_Resampling::resampling_t,	input_portnames
analysepath_t, 204 inner_error analysepath_t, 204 mha_dblbuf_t, 406 inner_fragsize  MHAFilter::partitioned_convolution_t, 523 input_signal_wave MHAFilter::partitioned_convolution_t, 522 input_to_process analysepath_t, 204	698	MHAJack::client_t, 565
inner_error input_signal_wave analysepath_t, 204 MHAFilter::partitioned_convolution_t, 522 mha_dblbuf_t, 406 input_to_process inner_fragsize analysepath_t, 204	inner_ac_copy	input_signal_spec
analysepath_t, 204 MHAFilter::partitioned_convolution_t, 522 mha_dblbuf_t, 406 input_to_process analysepath_t, 204	analysepath_t, 204	MHAFilter::partitioned_convolution_t, 523
mha_dblbuf_t, 406 input_to_process inner_fragsize analysepath_t, 204	inner_error	input_signal_wave
mha_dblbuf_t, 406 input_to_process inner_fragsize analysepath_t, 204		• — • —
inner_fragsize analysepath_t, 204	• • —	• — —
— · · · —	inner_fragsize	• — —•
· · · · · · · · · · · · · · · · · ·		• • —

noisePowProposedScale::noisePow←	MHAParser::int_t, 630
Proposed, 820	integrate
inputSpec	Vector and matrix processing toolbox, 47
noisePowProposedScale::noisePow←	intensity
Proposed, 820	mha_signal.cpp, 976
inputchannels	interface_t
MHAFilter::fftfilterbank_t, 496	delay::interface_t, 260
insert	multibandcompressor::interface_t, 810
acPooling_wave_config, 156	noisePowProposedScale::interface_t, 818
acSteer_config, 168	route::interface_t, 858
coherence::cohflt_t, 226	interleaved
fftfilterbank::fftfb_plug_t, 317	combc_if_t, 230
lpc_config, 376	interleaved_
MHA_AC::ac2matrix_t, 384	combc_t, 231
MHA_AC::acspace2matrix_t, 387	intern_level
MHA_AC::spectrum_t, 392	MHASignal::loop_wavefragment_t, 743
MHA_AC::stat_t, 394	internal_fir
MHA_AC::waveform_t, 396	MHAFilter::smoothspec_t, 534
MHAOvlFilter::fftfb_ac_info_t, 580	internal_start
multibandcompressor::fftfb_plug_t, 808	MHAJack::client_t, 564
noisePowProposedScale::noisePow←	internal_stop
Proposed, 819	MHAJack::client_t, 564
prediction_error_config, 852	interp
rmslevel_t, 856	MHATableLookup::linear_table_t, 788
rt_nlms_t, 861	MHATableLookup::table_t, 791
timo_AC, 893	MHATableLookup::xy_table_t, 793
insert_item	interp1
MHAParser::parser_t, 653	DynComp, 83
insert_items	interp2
windowselector_t, 914	DynComp, 84
insert_member	inv_scale
mha_parser.hh, 969	MHAOvlFilter::FreqScaleFun, 102
insert_var	invalidate_window_data
algo_comm_t, 194	windowselector_t, 915
MHAKernel::algo_comm_class_t, 570	invert
insert_var_float	coherence::vars_t, 228
algo_comm_t, 195	inwave
MHAKernel::algo_comm_class_t, 570	lpc_config, 377
insert_var_int	io
algo_comm_t, 195	MHAJack, 96
MHAKernel::algo_comm_class_t, 570	MHAJack::client_avg_t, 555
inspect MILA Filteruse maley, bandrage, t. 400	MHAJack::client_noncont_t, 558
MHAFilter::complex_bandpass_t, 488	io_err
MHAFilter::gamma_flt_t, 503	io_tcp_fwcb_t, 349
MHASignal::delay_t, 730	io_error
inst_name	fw_t, 325
fw_t, 324	io_file_t, 335
int_mon_t	~io_file_t, 337
MHAParser::int_mon_t, 628	b_prepared, 339
int_t	filename_input, 338
MHA_AC::int_t, 390	filename_output, 338

fragsize, 338	prepare, 341
io_file_t, 337	release, 342
length, 338	start, 341
nchannels_file_in, 338	stop, 341
nchannels_in, 338	test_error, 342
nchannels out, 338	io_name
output_sample_format, 338	fw_t, 324
prepare, 337	io parser t, 343
proc event, 338	~io_parser_t, 344
proc_handle, 338	b_fw_started, 345
release, 337	b_prepared, 345
s_file_in, 339	b_starting, 345
s_in, 338	b_stopped, 345
s_out, 339	fragsize, 345
samplerate, 338	input, 345
setlock, 337	io_parser_t, 344
sf in, 339	nchannels_in, 345
sf_out, 339	nchannels_out, 345
sfinf in, 339	output, 345
sfinf_out, 339	patchbay, 345
start, 337	prepare, 344
start_event, 338	proc_event, 345
start_handle, 338	proc_handle, 345
startsample, 338	process_frame, 345
stop, 337	release, 345
stop_event, 338	s_in, 345
stop_handle, 338	s_out, 345
stopped, 337	start, 344
strict_channel_match, 338	start_event, 345
strict_srate_match, 338	start_handle, 345
total_read, 339	started, 345
io jack t	stop, 345
MHAIOJack::io_jack_t, 541	stop_event, 345
MHAIOJackdb::io_jack_t, 546	stop_handle, 345
io_lib	stopped, 345
fw_t, 325	io_portaudio_t
io_lib_t, 339	MHAIOPortAudio::io_portaudio_t, 552
~io_lib_t, 341	io_tcp_fwcb_t, 346
IODestroy_cb, 342	$\sim$ io tcp fwcb t, 347
IOInit_cb, 342	io_err, 349
IOPrepare_cb, 342	io_tcp_fwcb_t, 347
IORelease_cb, 342	proc_err, 349
IOSetVar_cb, 342	proc_event, 348
IOStart_cb, 342	proc_handle, 348
IOStop_cb, 342	process, 347
IOStrError_cb, 342	set_errnos, 347
io_lib_t, 341	start, 347
lib_data, 342	start_event, 348
lib_err, 342	start_handle, 349
lib_handle, 342	stop, 348
lib_str_error, 342	stop_event, 348

stop_handle, 349	prepare, 361
io_tcp_parser_t, 349	release, 361
~io_tcp_parser_t, 351	server, 362
connected, 354	sound, 362
debug, 354	start, 361
debug_file, 355	stop, 361
debug_filename, 355	thread, 362
get_connected, 352	iob
get_local_address, 351	MHAJack::port_t, 568
get_local_port, 351	irslen
get_server_port_open, 352	frequency_translator_t, 319
io_tcp_parser_t, 351	irslen inner2outer
	MHAPlugin_Resampling::resampling_if←
local_address, 354	_t, 696
local_port, 354	irslen_outer2inner
peer_address, 354	MHAPlugin_Resampling::resampling_if←
peer_port, 355	_t, 696
server_port_open, 354	irswnd
set_connected, 353	MHAOvlFilter::overlap_save_filterbank_ <
set_local_port, 351	t::vars_t, 596
set_new_peer, 353	<del>-</del> ·
set_server_port_open, 352	smoothgains_bridge::overlapadd_if_←
io_tcp_sound_t, 355	t, 877
$\sim$ io_tcp_sound_t, 356	is_complex
check_sound_data_type, 357	MHA_AC::ac2matrix_helper_t, 382
chunkbytes_in, 357	mha_audio_descriptor_t, 397
fragsize, 358	is_playback_active
header, 357	MHASignal::loop_wavefragment_t, 743
hton, 358	is_prepared
io_tcp_sound_t, 356	adm_if_t, 190
ntoh, 357	MHAPlugin::plugin_t, 693
num_inchannels, 358	PluginLoader::mhapluginloader_t, 846
num_outchannels, 359	is_prepared_
prepare, 357	MHAPlugin::plugin_t, 694
release, 357	is_same_size
s in, 359	MHASignal::matrix_t, 748
samplerate, 358	is_var
io_tcp_sound_t::float_union, 359	algo_comm_t, 196
c, 359	MHAKernel::algo_comm_class_t, 570
	iscomplex
f, 359	MHASignal::matrix_t, 748
i, 359	isempty
io_tcp_t, 360	AuditoryProfile::fmap_t, 207
~io_tcp_t, 361	gaintable.cpp, 934
accept_loop, 361	MHAFilter::transfer_function_t, 538
connection_loop, 361	isval
fwcb, 362	MHAParser::kw_t, 636
io_tcp_t, 361	iter
notify_release, 362	prediction_error_config, 853
notify_start, 362	iterator
notify_stop, 362	MHA TCP::Event Watcher, 445
parse, 362	
parser, 362	jack_error_handler

mhajack.cpp, 1009	dc::wideband_inhib_vars_t, 248
jack_proc_cb	I_new
MHAJack::client_t, 564	addsndfile::level_adapt_t, 177
jack_xrun_cb	fader_wave::level_adapt_t, 309
MHAJack::client_t, 564	l_old
jc	addsndfile::level_adapt_t, 177
MHAJack::client_t, 565	fader_wave::level_adapt_t, 309
MHAJack::port_t, 568	LEVEL
jstate_prev	dc_simple, 82
MHAJack::client_t, 565	LPSCALE
k inner	timoconfig.cpp, 1026
MHASignal::doublebuffer_t, 734	LTASS_combined
k_nyquist	speechnoise_t, 888
dc::dc_t, 243	LTASS_female
k_outer	speechnoise_t, 888
MHASignal::doublebuffer_t, 734	LTASS_male
kappa	speechnoise_t, 888
lpc_burglattice_config, 375	lambda
kappa_block	lpc_burglattice, 373
lpc_burglattice_config, 375	lpc_burglattice_config, 375
kappa_const	lambda_ceps
timo_params, 896	timoConfig, 899
timoSmooth, 902	lambda_ceps_AC
keyword_list_t	timo_AC, 894
MHAParser::keyword_list_t, 632	lambda_ceps_prev
kick condition	timoConfig, 899
MHAPlugin_Split::posix_threads_t, 707	lambda_ml_AC
kick thread	timo_AC, 893
MHAPlugin_Split::dummy_threads_t, 704	lambda_ml_ceps
MHAPlugin_Split::posix_threads_t, 707	timoConfig, 899
MHAPlugin_Split::thread_platform_t, 720	lambda_ml_ceps_AC
kicked	timo_AC, 893
MHAPlugin Split::posix threads t, 708	lambda_ml_full
km	timoConfig, 899
lpc_bl_predictor_config, 371	lambda_ml_smooth
kmax	timoConfig, 899
hilbert_shifter_t, 332	lambda_ml_smooth_AC
kmin	timo_AC, 893
hilbert shifter t, 332	lambda_smoothing_power
kth_smallest	nlms_t, 814
MHASignal, 117	lambda_spec
kw_index2type	timoConfig, 899
transducers.cpp, 1027	lambda_spec_AC
kw_t	timo_AC, 894
MHAParser::kw_t, 635, 636	lambda_thresh
	timo_params, 896
L	timoSmooth, 902
AuditoryProfile::parser_t, 209	last_complex_bin
AuditoryProfile::profile_t, 213	MHASignal::subsample_delay_t, 770
I_min	last_config
dc::wb_inhib_cfg_t, 247	MHAPlugin::config_t, 688

last_errormsg	addsndfile::level_adapt_t, 176
MHAParser::parser_t, 656	fader_wave::level_adapt_t, 308
last_jack_err	level_adaptor
mhajack.cpp, 1009	addsndfile, 78
last_jack_err_msg	fader_wave, 85
mhajack.cpp, 1009	level_db
mhajack.h, 1011	rmslevel t, 856
last name	level in db
MHAParser::mhapluginloader_t, 649	 dc::dc_t, 243
latex_doc_t, 362	level_in_db_adjusted
ac, 364	dc::dc t, 243
get_ac, 363	level mode t
get_categories, 363	MHASignal::loop_wavefragment_t, 741
get_latex_doc, 363	level mon
get_main_category, 363	droptect_t, 275
get_parser_tab, 363	level smoother t
get_parser_var, 363	dc_simple::level_smoother_t, 258
latex_doc_t, 363	level_spec
latex_plugname, 364	dc_simple::level_smoother_t, 258
loader, 364	level wave
parsername, 363	dc_simple::level_smoother_t, 258
plugin_macro, 364	levelmode
plugname, 364	addsndfile::addsndfile_if_t, 175
strdom, 363	Levinson2
latex_plugname	lpc.cpp, 938
latex_doc_t, 364	lib_data
len	_ io_lib_t, 342
MHA_AC::acspace2matrix_t, 387	PluginLoader::mhapluginloader_t, 846
MHAFilter::filter_t, 501	lib_err
MHATableLookup::linear_table_t, 790	io_lib_t, 342
plingploing::plingploing_t, 831	PluginLoader::mhapluginloader_t, 846
len_A	lib_handle
MHAFilter::filter_t, 501	io_lib_t, 342
len_a	PluginLoader::mhapluginloader_t, 846
hanning_ramps_t, 330	lib_str_error
len_B	io_lib_t, 342
MHAFilter::filter_t, 501	libdata
len_b	analysepath_t, 204
hanning_ramps_t, 330	MHAParser::c_ifc_parser_t, 615
length	liberr
io_file_t, 338	MHAParser::c_ifc_parser_t, 615
MHASignal::uint_vector_t, 773	libname
lev	analysispath_if_t, 206
noise_t, 816	PluginLoader::config_file_splitter_t, 839
sine_t, 875	library_paths
level	pluginbrowser_t, 836
addsndfile::addsndfile_if_t, 175	like_ratio
plingploing::if_t, 829	acPooling_wave_config, 157
plingploing::plingploing_t, 832	like_ratio_name
rmslevel_t, 856	acPooling_wave, 155
level_adapt_t	limit

coherence::cohflt_t, 226	local_remove_var
coherence::vars_t, 228	MHAKernel::algo_comm_class_t, 571
MHASignal, 117	locate
MHASignal::quantizer_t, 755	MHAIOJackdb::io_jack_t, 548
MHASignal::waveform_t, 782	locate_end
limiter	MHASignal::loop_wavefragment_t, 743
dc_simple::dc_t, 253	lock_channels
limiter threshold	fw vars t, 326
dc_simple::dc_t, 253	lock_srate_fragsize
dc_simple::dc_vars_t, 256	fw_vars_t, 326
lin2db	locked
Vector and matrix processing toolbox, 42	MHAParser::variable_t, 664
line_t	log_down
dc_simple::dc_t::line_t, 254	MHASignal::schroeder_t, 762
linear	log_lambda_spec
MHAOvlFilter::ShapeFun, 103	timoConfig, 899
softclipper t, 881	log_lambda_spec_AC
softclipper_variables_t, 883	timo_AC, 894
linear table t	log_up
MHATableLookup::linear_table_t, 788	MHASignal::schroeder_t, 762
Linearphase_FIR	logGLRFact
ADM::Linearphase_FIR, 186	noisePowProposedScale::noisePow←
list_dir	Proposed, 820
mha_os.cpp, 961	timoConfig, 899
mha_os.h, 963	logfile
lo addr	mhaserver_t, 725
ac2osc_t, 139	
load_io_lib	logstring
<del>_</del> _	mhaserver_t, 724
fw_t, 323	longmsg
load_plug	MHA_Error, 415
MHAParser::mhapluginloader_t, 649	lookup
load_proc_lib	MHATableLookup::linear_table_t, 788
fw_t, 323	MHATableLookup::table_t, 791
loader	MHATableLookup::xy_table_t, 793
latex_doc_t, 364	loop
loadlib	addsndfile::addsndfile_if_t, 175
analysispath_if_t, 206	loop_wavefragment_t
local_address	MHASignal::loop_wavefragment_t, 741
io_tcp_parser_t, 354	low_incl
local_get_entries	MHAParser::range_var_t, 658
MHAKernel::algo_comm_class_t, 571	low_limit
local_get_var	MHAParser::range_var_t, 658
MHAKernel::algo_comm_class_t, 571	low_side_flat
local_insert_var	MHAOvlFilter::band_descriptor_t, 578
MHAKernel::algo_comm_class_t, 571	low_thresh
local_is_var	acPooling_wave_config, 157
MHAKernel::algo_comm_class_t, 571	lower_threshold
local_port	acPooling_wave, 155
io_tcp_parser_t, 354	lp
local_remove_ref	DynComp::dc_afterburn_rt_t, 280
MHAKernel::algo_comm_class_t, 571	lp1i

acharanaeuschflt + 206	backward 270
coherence::cohflt_t, 226	backward, 370
lp1ltg	f_est, 370
coherence::cohflt_t, 227	forward, 370
lp1r	km, 371
coherence::cohflt_t, 226	lpc_bl_predictor_config, 370
lp_coeffs	lpc_order, 370
adm_rtconfig_t, 193	name_b, 371
lp_order	name_f, 370
adm_if_t, 190	name_km, 370
lpc, 364	process, 370
~lpc, 365	s_b, 371
algo_name, 366	s_f, 371
comp_each_iter, 366	lpc_buffer_size
lpc, 365	lpc, 366
lpc_buffer_size, 366	lpc_config, 377
lpc_order, 366	lpc_burg-lattice.cpp, 939
norm, 366	INSERT_PATCH, 939
patchbay, 366	PATCH_VAR, 939
prepare, 365	lpc_burg-lattice.h, 939
process, 365	EPSILON, 939
release, 366	lpc_burglattice, 371
shift, 366	$\sim$ lpc_burglattice, $372$
update_cfg, 366	lambda, 373
lpc.cpp, 937	lpc_burglattice, 372
INSERT_PATCH, 938	lpc_order, 373
Levinson2, 938	name_b, <mark>373</mark>
PATCH_VAR, 938	name_f, <mark>373</mark>
lpc.h, 938	name_kappa, <mark>373</mark>
lpc_bl_predictor, 367	patchbay, 373
~lpc_bl_predictor, 368	prepare, 373
lpc_bl_predictor, 368	process, 373
lpc_order, 369	release, 373
name_b, 369	update_cfg, 373
name_f, 369	lpc_burglattice_config, 374
name_kappa, 369	$\sim$ lpc_burglattice_config, 374
name_lpc_b, 369	ac, 374
name_lpc_f, 369	backward, 375
patchbay, 369	dm, 375
prepare, 368	forward, 374
process, 368	kappa, 375
release, 368	kappa_block, 375
update_cfg, 369	lambda, 375
lpc_bl_predictor.cpp, 938	lpc_burglattice_config, 374
INSERT_PATCH, 938	lpc_order, 375
PATCH_VAR, 938	name_b, 375
lpc_bl_predictor.h, 938	name_f, 375
EPSILON, 939	nm, 375
lpc_bl_predictor_config, 369	process, 374
$\sim$ lpc_bl_predictor_config, 370	s_b, 375
ac, 370	s_f, 375
b_est, 370	lpc_config, 375
	-

$\sim$ lpc_config, $376$	ADM::Delay, 185
A, 377	m_lp_bf
comp_each_iter, 376	ADM::ADM, 183
comp_iter, 377	m_lp_result
corr_out, 377	ADM::ADM, 183
insert, 376	m_mu_beta
inwave, 377	ADM::ADM, 183
lpc_buffer_size, 377	m_norm
lpc_config, 376	ADM::Delay, 185
lpc_out, 377	•
N, 377	m_now
norm, 376	ADM::Linearphase_FIR, 187
order, 376	m_now_in
	ADM::Delay, 185
process, 376	m_order
R, 377	ADM::Linearphase_FIR, 187
sample, 377	m_output
shift, 376	ADM::Linearphase_FIR, 187
lpc_order	m_powerfilter_coeff
lpc, 366	ADM::ADM, 183
lpc_bl_predictor, 369	m_powerfilter_norm
lpc_bl_predictor_config, 370	ADM::ADM, 183
lpc_burglattice, 373	m_powerfilter_state
lpc_burglattice_config, 375	ADM::ADM, 183
prediction_error, 851	m_state
lpc_out	ADM::Delay, 185
lpc_config, 377	MAX LINE LENGTH
Itgcomp	mhamain.cpp, 1012
coherence::vars_t, 228	MAX_TCP_PORT_STR
ltgtau	
coherence::vars_t, 228	MHAIOTCP.cpp, 1007
Ival	MAX_TCP_PORT
MHAParser::expression_t, 622	MHAIOTCP.cpp, 1007
1 /	MAX_USER_ERR
m	MHAIOFile.cpp, 993
dc_simple::dc_t::line_t, 254	MHAIOJack.cpp, 995
matrixmixer::cfg_t, 378	MHAIOJackdb.cpp, 998
M_PI	MHAIOParser.cpp, 1001
mha_defs.h, 948	MHAIOPortAudio.cpp, 1004
mha_signal.hh, 985	MHAIOTCP.cpp, 1007
m_alphas	mhajack.h, 1011
ADM::Linearphase_FIR, 187	MAX
m beta	mha_defs.h, 949
ADM::ADM, 183	MHA_AC::ac2matrix_helper_t, 381
m_coeff	ac, 382
ADM::Delay, 185	ac2matrix_helper_t, 381
m_decomb	acvar, 382
ADM::ADM, 183	getvar, 381
•	is_complex, 382
m_delay_back	<u> </u>
ADM::ADM, 183	name, 382
m_delay_front	size, 382
ADM::ADM, 183	username, 382
m_fullsamples	MHA_AC::ac2matrix_t, 382

ac2matrix_t, 383	mha.h, 944
getname, 383	MHA_AC_DOUBLE
getusername, 384	mha.h, 944
insert, 384	MHA_AC_FLOAT
update, 383	mha.h, 944
MHA_AC::acspace2matrix_t, 384	MHA_AC_INT
~acspace2matrix_t, 386	mha.h, 944
acspace2matrix_t, 385	MHA AC MHACOMPLEX
data, 387	mha.h, 944
frame, 387	MHA AC MHAREAL
frameno, 387	mha.h, 944
insert, 387	MHA_AC_UNKNOWN
len, 387	mha.h, 944
	MHA_AC_USER
operator=, 386	
operator[], 386	mha.h, 944
size, 387	MHA_AC_VEC_FLOAT
update, 387	mha.h, 944
MHA_AC::double_t, 387	MHA_AC, 86
$\sim$ double_t, 388	MHA_CALLBACK_TEST_PREFIX
ac, 388	mha.h, 942
data, 388	MHA_CALLBACK_TEST
double_t, 388	mha.h, 942
MHA_AC::float_t, 389	MHA_DOMAIN_MAX
$\sim$ float_t, 389	mha.h, 944
ac, 389	MHA_DOMAIN_UNKNOWN
data, 389	mha.h, 944
float_t, 389	MHA EAR LEFT
MHA_AC::int_t, 390	mha_defs.h, 949
~int_t, 390	MHA_EAR_MAX
ac, 390	mha defs.h, 949
data, 390	MHA EAR RIGHT
	mha defs.h, 949
int_t, 390	_ ,
MHA_AC::spectrum_t, 391	MHA_ERR_INVALID_HANDLE
~spectrum_t, 392	mha_errno.h, 951
ac, 393	MHA_ERR_NULL
insert, 392	mha_errno.h, 951
name, <mark>393</mark>	MHA_ERR_SUCCESS
spectrum_t, 392	mha_errno.h, 951
MHA_AC::stat_t, 393	MHA_ERR_UNKNOWN
insert, 394	mha_errno.h, 951
mean, 394	MHA_ERR_USER
stat_t, 394	mha_errno.h, 951
std, 394	MHA ERR VARFMT
update, 394	mha errno.h, 951
MHA_AC::waveform_t, 394	MHA_ERR_VARRANGE
~waveform_t, 395	mha_errno.h, 951
ac, 396	MHA Error, 413
insert, 396	~MHA Error, 414
name, 396	get_longmsg, 414
waveform_t, 395	get_nongmsg, 414 get_msg, 414
MHA_AC_CHAR	longmsg, 415
WILIA_AO_OLIAIT	iongmag, 410

MHA_Error, 414	inbuf, 443
msg, 415	init_peer_data, 439
operator=, 414	needs write, 442
what, 414	outbuf, 443
MHA ErrorMsg	peer_addr, 443
Error handling in the openMHA, 31	read_bytes, 442
MHA_ErrorMsg2	read event, 443
MHAIOTCP.cpp, 1007	read_line, 441
MHA_ErrorMsg3	sysread, 439
MHAIOTCP.cpp, 1007	syswrite, 440
MHA_ID_MATRIX	try write, 442
mha_signal.cpp, 976	write, 442
MHA ID UINT VECTOR	write event, 443
mha_signal.cpp, 976	MHA_TCP::Event_Watcher, 444
MHA_RELEASE_VERSION_STRING	~Event Watcher, 445
mha.h, 943	Events, 445
MHA RESOLVE CHECKED	events, 445
mha os.h, 963	ignore, 445
MHA_RESOLVE	iterator, 445
<del>_</del>	observe, 445
mha_os.h, 963 MHA SPECTRUM	•
<del>_</del>	wait, 445
mha.h, 944	MHA_TCP::OS_EVENT_TYPE, 446
MHA_STRUCT_SIZEMATCH	fd, 446
mha.h, 943	mode, 446
MHA_STRF	R, 446
mha.h, 942	T, 446
MHA_TCP::Async_Notify, 434	timeout, 446
~Async_Notify, 435	W, 446
Async_Notify, 435	X, 446
pipe, 435	MHA_TCP::Server, 447
reset, 435	∼Server, 448
set, 435	accept, 448
MHA_TCP::Client, 435	accept_event, 449
Client, 436	get_accept_event, 448
MHA_TCP::Connection, 437	get_interface, 448
~Connection, 439	get_port, 448
buffered_incoming_bytes, 443	iface, 449
buffered_outgoing_bytes, 443	initialize, 448
can_read_bytes, 441	port, 449
can_read_line, 441	Server, 447, 448
can_sysread, 439	serversocket, 449
can_syswrite, 439	sock_addr, 449
closed, 443	try_accept, 449
Connection, 439	MHA_TCP::Sockaccept_Event, 450
eof, 440	Sockaccept_Event, 450
fd, 443	MHA_TCP::Sockread_Event, 451
get_fd, 440	Sockread_Event, 451
get_peer_address, 440	MHA_TCP::Sockwrite_Event, 452
get_peer_port, 440	Sockwrite_Event, 452
get_read_event, 440	MHA_TCP::Thread, 452
get_write_event, 440	$\sim$ Thread, 455

4	1 1 0 10
arg, 455	mha.h, 942
error, 456	MHA_VERSION_RELEASE
FINISHED, 454	mha.h, 943
PREPARED, 454	MHA_VERSION_STRING
RUNNING, 454	mha.h, 943
return_value, 455	MHA_VERSION
run, 455	mha.h, 943
state, 455	MHA_WAVEFORM
thr_f, 454	mha.h, 943
Thread, 454	MHA_XSTRF
thread_arg, 456	mha.h, 942
thread_attr, 455	MHA_assert
thread_finish_event, 455	Error handling in the openMHA, 32
thread_func, 456	MHA_assert_equal
thread_handle, 455	Error handling in the openMHA, 32
MHA_TCP::Timeout_Event, 456	MHADestroy_cb
end_time, 457	PluginLoader::mhapluginloader_t, 846
get_os_event, 457	MHADestroy_t
Timeout_Event, 457	mha.h, 944
MHA_TCP::Timeout_Watcher, 457	MHAEvents, 90
$\sim$ Timeout_Watcher, 458	MHAEvents::connector_base_t, 472
timeout, 458	$\sim$ connector_base_t, 472
Timeout_Watcher, 458	connector_base_t, 472
MHA_TCP::Wakeup_Event, 459	emit_event, 473
$\sim$ Wakeup_Event, 460	emitter_die, 473
get_os_event, 460	emitter_is_alive, 473
ignored_by, 460	MHAEvents::connector_t
observed_by, 460	~connector_t, 475
observers, 461	connector_t, 475
os_event, 461	emit_event, 475
os_event_valid, 461	emitter, 476
reset, 460	eventhandler, 476
status, 461	eventhandler_s, 476
Wakeup_Event, 460	eventhandler_suu, 476
MHA_TCP::sock_init_t, 449	receiver, 476
sock_init_t, 450	MHAEvents::connector_t< receiver_t >, 474
MHA_TCP, 87	MHAEvents::emitter_t, 476
dtime, 89	∼emitter t, 477
G ERRNO, 89	connect, 477
H ERRNO, 89	connections, 477
HSTRERROR, 89	disconnect, 477
N ERRNO, 89	operator(), 477
SOCKET, 89	MHAEvents::patchbay_t
STRERROR, 89	~patchbay_t, 478
sock_initializer, 90	connect, 478, 479
stime, 89	cons, 479
MHA_VERSION_BUILD	MHAEvents::patchbay_t< receiver_t >, 478
mha.h, 943	MHAFilter, 90
MHA_VERSION_MAJOR	butter_stop_ord1, 93
mha.h, 942	gcd, 94
MHA_VERSION_MINOR	make_friendly_number, 92

o1_lp_coeffs, 92	set_weights, 487
resampling_factors, 94	Yn, 488
sinc, 94	MHAFilter::diff_t, 488
spec2fir, 93	diff_t, 489
MHAFilter::adapt_filter_param_t, 479	MHAFilter::fftfilter_t, 489
adapt_filter_param_t, 480	∼fftfilter_t, 491
err_in, 480	channels, 492
mu, 480	fft, 493
MHAFilter::adapt_filter_state_t, 480	fftfilter_t, 490
adapt_filter_state_t, 481	fftlen, 492
filter, 481	filter, 491, 492
nchannels, 481	fragsize, 492
ntaps, 481	sInput, 493
od, 481	sWeights, 493
oy, 481	update_coeffs, 491
W, 481	wIRS_fft, 493
X, 481	wInput, 493
MHAFilter::adapt_filter_t, 481	wInput_fft, 492
adapt_filter_t, 482	wOutput, 493
connector, 483	wOutput_fft, 493
err_in, 483	MHAFilter::fftfilterbank_t, 493
filter, 482	~fftfilterbank_t, 495
mu, 483	fft, 497
nchannels, 483	fftfilterbank_t, 494
ntaps, 483	fftlen, 496
set_channelcnt, 482	filter, 495, 496
update_mu, 482	firchannels, 496
update_ntaps, 482	fragsize, 496
MHAFilter::blockprocessing_polyphase_←	get irs, 496
resampling_t, 483	Hs, 496
~blockprocessing_polyphase_resampling↔	•
~blockprocessing_polyphase_resampling← t, 484	inputchannels, 496
_t, +0+ blockprocessing_polyphase_resampling←	outputchannels, 496
t, 484	tail, 497
can_read, 485	update_coeffs, 495
fragsize_in, 485	Xs, 496
fragsize out, 485	xw, 496
num_channels, 485	Ys, 497
read, 485	yw, 496
resampling, 485	yw_temp, 497
write, 484	MHAFilter::filter t, 497
•	<del>-</del> ·
MHAFilter::complex_bandpass_t, 486	∼filter_t, 499
A_, 488	A, 500
B_, 488	B, 500
complex_bandpass_t, 487	channels, 501
creator_A, 487	filter, 499, 500
creator_B, 487	filter_t, 498, 499
filter, 487, 488	get_len_A, 500
get_weights, 487	get_len_B, 500
inspect, 488	len, 501
set_state, 487	len_A, 501

len_B, 501	get_last_output, 516
state, 501	o1flt_lowpass_t, 516
MHAFilter::gamma_flt_t, 501	set_tau, 516
$\sim$ gamma_flt_t, 502	MHAFilter::o1flt_maxtrack_t, 517
A, 503	o1flt_maxtrack_t, 518
bw_, 504	set_tau, 518
cf_, 504	MHAFilter::o1flt_mintrack_t, 518
delay, 503	o1flt_mintrack_t, 520
envelope_delay, 504	set_tau, 520
gamma_flt_t, 502	MHAFilter::partitioned_convolution_t, 520
get A, 503	~partitioned_convolution_t, 522
get_resynthesis_gain, 503	bookkeeping, 523
get_weights, 503	current_input_signal_buffer_half_index,
GF, 503	523
inspect, 503	current_output_partition_index, 523
operator(), 502, 503	fft, 524
phase_correction, 503	filter_partitions, 522
reset_state, 503	fragsize, 522
resynthesis gain, 504	frequency_response, 523
set_weights, 503	input_signal_spec, 523
srate , 504	input_signal_wave, 522
MHAFilter::iir_filter_state_t, 504	nchannels_in, 522
iir_filter_state_t, 505	nchannels_out, 522
MHAFilter::iir_filter_t, 505	output_partitions, 522
A, 508	output_signal_spec, 523
B, 508	output_signal_wave, 523
connector, 508	partitioned_convolution_t, 521
filter, 507	process, 522
iir_filter_t, 506	MHAFilter::partitioned convolution t::index
nchannels, 508	_t, 524
resize, 508	_t, 324 delay, 525
update_filter, 508	index_t, 524, 525
MHAFilter::iir_ord1_real_t, 508	source_channel_index, 525
	target_channel_index, 525
A_, 511	·
B_, 511	MHAFilter::polyphase_resampling_t, 525
iir_ord1_real_t, 509	downsampling_factor, 529
operator(), 510	impulse_response, 529
set_state, 510	now_index, 529
Yn, 511	polyphase_resampling_t, 527
MHAFilter::o1_ar_filter_t, 511	read, 528
c1_a, 514	readable_frames, 528
c1_r, 514	ringbuffer, 529
c2_a, 514	underflow, 529
c2_r, 514	upsampling_factor, 529
fs, 514	write, 528
o1_ar_filter_t, 512	MHAFilter::resampling_filter_t, 530
operator(), 513, 514	fragsize, 531
set_tau_attack, 513	fragsize_validator, 531
set_tau_release, 513	resampling_filter_t, 530
MHAFilter::o1flt_lowpass_t, 514	MHAFilter::smoothspec_t, 531
get_c1, 516	_linphase_asym, 534

$\sim$ smoothspec_t, 533	IOSetVar, 993, 994
fft, 534	IOStart, 993, 994
fftlen, 534	IOStop, 993, 994
internal_fir, 534	IOStrError, 993, 994
minphase, 534	MAX_USER_ERR, 993
nchannels, 534	user_err_msg, 994
smoothspec, 533	MHAIOJack, 95
smoothspec t, 532	MHAIOJack.cpp, 994
spec2fir, 533	dummy_interface_test, 996, 997
tmp_spec, 534	ERR IHANDLE, 995
tmp_wave, 534	ERR_SUCCESS, 995
window, 534	ERR USER, 995
MHAFilter::thirdoctave_analyzer_t, 534	IODestroy, 996, 997
bw_generator, 535	IOInit, 995, 996
cf, 535	IOPrepare, 996
cf_generator, 535	IORelease, 996
cfg_, 535	IOSetVar, 996
dup, 535	IOStart, 996
fb, 536	IOStop, 996
get cf hz, 535	IOStrError, 996, 997
nbands, 535	MAX_USER_ERR, 995
nchannels, 535	user_err_msg, 997
out_chunk, 536	MHAIOJack::io_jack_t, 540
out_chunk_im, 536	clientname, 542
process, 535	connections_in, 542
thirdoctave_analyzer_t, 535	connections_out, 542
MHAFilter::transfer_function_t, 536	delays_in, 542
impulse_response, 538	delays_out, 543
isempty, 538	fw_fragsize, 542
non_empty_partitions, 537	fw_samplerate, 542
partitions, 537	get_all_input_ports, 542
source_channel_index, 538	get_all_output_ports, 542
target_channel_index, 538	get_delays_in, 542
transfer_function_t, 537	get delays out, 542
MHAFilter::transfer matrix t, 539	get_physical_input_ports, 542
non_empty_partitions, 539	get_physical_output_ports, 542
partitions, 539	io_jack_t, 541
MHAGetVersion cb	patchbay, 543
PluginLoader::mhapluginloader_t, 846	portnames_in, 543
MHAGetVersion t	portnames_out, 543
mha.h, 944	ports_in_all, 543
MHAIOFile.cpp, 992	ports_in_physical, 543
DEBUG, 993	ports_out_all, 543
dummy_interface_test, 993, 994	ports_out_physical, 543
ERR_IHANDLE, 993	ports_parser, 543
ERR SUCCESS, 993	prepare, 541
ERR_USER, 993	read_get_cpu_load, 542
IODestroy, 993, 994	read_get_scheduler, 542
IOInit, 993	read_get_xruns, 542
IOPrepare, 993	reconnect_inports, 542
IORelease, 993, 994	reconnect_outports, 542
	·

release, 541	read_get_cpu_load, 547
servername, 542	read_get_scheduler, 547
state_cpuload, 543	read_get_xruns, 547
state_parser, 543	reconnect_inports, 546
state_priority, 543	reconnect_outports, 546
state_scheduler, 543	release, 546
state_xruns, 543	server_fragsize, 548
MHAIOJackdb, 95	server_srate, 548
MHAIOJackdb.cpp, 997	servername, 547
dummy_interface_test, 998, 999	set_locate, 547
ERR_IHANDLE, 998	set_use_jack_transport, 547
ERR_SUCCESS, 998	state_cpuload, 548
ERR_USER, 998	state_parser, 548
IODestroy, 998, 999	state_priority, 548
IOInit, 998, 999	state_scheduler, 548
IOPrepare, 998, 999	state_xruns, 548
IORelease, 998, 999	use_jack_transport, 547
IOSetVar, 998, 999	MHAIOParser.cpp, 1000
IOStart, 998, 999	dummy_interface_test, 1001, 1002
IOStop, 998, 999	ERR_IHANDLE, 1001
IOStrError, 998, 999	ERR_SUCCESS, 1001
MAX_USER_ERR, 998	ERR_USER, 1001
user_err_msg, 999	IODestroy, 1001, 1002
MHAIOJackdb::io_jack_t, 544	IOInit, 1001
clientname, 547	IOPrepare, 1001
connections_in, 547	IORelease, 1001, 1002
connections_out, 547	IOSetVar, 1001, 1002
fail_on_async_jackerr, 547	IOStart, 1001
fail_on_async_jackerror, 546	IOStop, 1001, 1002
fragsize_ratio, 547	IOStrError, 1001, 1002
get_all_input_ports, 547	MAX_USER_ERR, 1001
get_all_output_ports, 547	user_err_msg, 1002
get_physical_input_ports, 546	MHAIOPortAudio, 95
get_physical_output_ports, 547	parserFriendlyName, 95
IOProcessEvent_inner, 546	MHAIOPortAudio.cpp, 1002
io_jack_t, 546	dummy_interface_test, 1004, 1005
locate, 548	ERR_IHANDLE, 1004
mha_fragsize, 547	ERR SUCCESS, 1004
mha_samplerate, 547	ERR USER, 1004
patchbay, 548	IODestroy, 1004, 1005
portnames_in, 547	IOInit, 1004
portnames_out, 547	IOPrepare, 1004
ports_in_all, 548	IORelease, 1004, 1005
ports_in_physical, 548	IOSetVar, 1004, 1005
ports_out_all, 548	IOStart, 1004, 1005
ports_out_physical, 548	IOStop, 1004, 1005
ports_parser, 548	IOStrError, 1004, 1005
prepare, 546	MAX_USER_ERR, 1004
proc_event, 547	portaudio_callback, 1004, 1005
proc_handle, 547	user_err_msg, 1005
pwinner_out, 548	MHAIOPortAudio::device_info_t, 549
• – ′	<u> </u>

C	defaultHighInputLatency, 550	IOStart, 1007, 1008
C	defaultHighOutputLatency, 550	IOStop, 1007, 1008
C	defaultLowInputLatency, 550	IOStrError, 1007, 1008
C	defaultLowOutputLatency, 550	MAX_TCP_PORT_STR, 1007
C	defaultSampleRate, 550	MAX_TCP_PORT, 1007
C	device_info_t, 550	MAX_USER_ERR, 1007
f	ill_info, 550	MHA ErrorMsg2, 1007
ŀ	nostApi, 550	MHA_ErrorMsg3, 1007
	maxInputChannels, 550	MIN_TCP_PORT_STR, 1007
	maxOutputChannels, 550	MIN_TCP_PORT, 1007
	name, 550	thread_startup_function, 1008
	numDevices, 550	user err msg, 1009
	structVersion, 550	MHAInit cb
МНА	NOPortAudio::io_portaudio_t, 551	PluginLoader::mhapluginloader_t, 846
^	√io_portaudio_t, 552	MHAInit_t
C	cmd_prepare, 552	mha.h, 944
C	cmd_release, 553	MHAJACK_FW_STARTED
C	cmd_start, 552	mhajack.h, 1011
	cmd_stop, 552	MHAJACK_STARTING
	device index, 553	mhajack.h, 1011
	device index updated, 552	MHAJACK STOPPED
	device info, 553	mhajack.h, 1011
	device_name, 553	MHAJack, 95
	device_name_updated, 552	get_port_capture_latency, 96
	ragsize, <u>553</u>	get_port_capture_latency_int, 97
	o_portaudio_t, 552	get_port_playback_latency, 97
	nchannels_in, 553	get_port_playback_latency_int, 97
	nchannels_out, 553	io, 96
	patchbay, 553	MHAJack::client_avg_t, 554
•	portaudio_callback, 553	b ready, 556
	portaudio_stream, 553	b_stopped, 556
	proc_event, 553	client_avg_t, 555
ŗ	proc_handle, 553	frag_out, 556
	s_in, 553	IOStoppedEvent, 556
	s_out, 553	io, 555
	samplerate, 553	n, 556
	start event, 553	name, <u>556</u>
	start_handle, 553	nrep, 556
	stop_event, 553	pos, 556
	stop_handle, 553	proc, 556
	NOTCP.cpp, 1005	sn_in, 556
	copy_error, 1008	sn_out, 556
	dummy_interface_test, 1007, 1008	MHAJack::client_noncont_t, 557
	ERR_IHANDLE, 1007	b_stopped, 558
	ERR_SUCCESS, 1007	client_noncont_t, 558
	ERR_USER, 1007	frag_out, 559
	ODestroy, 1007, 1008	IOStoppedEvent, 558
	Olnit, 1007, 1008	io, 558
	OPrepare, 1007, 1008	name, 559
	ORelease, 1007, 1008	pos, 558
	OSetVar, 1007, 1008	proc, 558

sn_in, 558	MHAJack::port_t, 565
sn_out, <del>559</del>	~port_t, 567
MHAJack::client_t, 559	connect_to, 568
b_prepared, 565	dir_t, 566
client_t, 561	dir_type, 568
connect_input, 562	get_short_name, 568
connect_output, 562	input, 566
fail_on_async_jackerror, 565	iob, 568
flags, <u>565</u>	jc, 568
fragsize, 564	mute, 567
get_cpu_load, 563	output, 566
get_fragsize, 562	port, 568
get_my_input_ports, 563	port_t, 566, 567
get_my_output_ports, 563	read, 567
get_ports, 563	write, <u>567</u>
get_srate, 563	MHAKernel, 97
get_xruns, 563	algo_comm_safe_cast, 98
get_xruns_reset, 563	MHAKernel::algo_comm_class_t, 568
inch, 565	$\sim$ algo_comm_class_t, 570
input_portnames, 565	ac, 571
internal_start, 564	algo_comm_class_t, 570
internal_stop, 564	algo_comm_id_string, 571
jack_proc_cb, 564	algo_comm_id_string_len, 571
jack_xrun_cb, 564	get c handle, 570
jc, 565	get_entries, 571
jstate_prev, 565	get_error, 571
nchannels_in, 564	get_var, 570
nchannels_out, 564	get_var_float, 570
num_xruns, 564	get_var_int, 570
outch, 565	insert var, 570
output portnames, 565	insert_var_float, 570
prepare, 561, 562	insert_var_int, 570
prepare_impl, 563	is var, 570
proc_event, 564	local_get_entries, 571
proc_handle, 564	local_get_var, 571
release, 562	local_insert_var, 571
s in, 565	local_is_var, 571
s_out, 565	local_remove_ref, 571
samplerate, 564	local_remove_var, 571
set_input_portnames, 563	remove ref, 570
set_output_portnames, 563	remove_var, 570
set_use_jack_transport, 563	size, 571
start, 562	vars, 571
start_event, 565	MHAKernel::comm_var_map_t, 572
start_handle, 565	has_key, 572
stop, 562	MHAMultiSrc, 98
stop_event, 565	MHAMultiSrc::base_t, 572
stop_event, 505 stop_handle, 565	ac, 573
stopped, 564	base_t, 573
str_error, 563	select_source, 573
use_jack_transport, 565	MHAMultiSrc::channel_t, 574
use_jaun_transport, sus	wii iAiviuitioioCiiaiiiiei_t, 5/4

channel, 574	fftfb_ac_info_t, 580
name, 574	insert, 580
MHAMultiSrc::channels t, 574	MHAOvlFilter::fftfb t, 581
channels t, 574	$\sim$ fftfb t, 582
MHAMultiSrc::spectrum_t, 575	apply_gains, 582
spectrum_t, 575	bin1, 583
update, 576	bin2, 583
MHAMultiSrc::waveform_t, 576	fftfb_t, 582
update, <u>577</u>	fftlen, 583
waveform t, 577	get_fbpower, 582
MHAOvlFilter, 98	get_fbpower_db, 582
scale fun t, 99	get_fftlen, 583
MHAOvlFilter::FreqScaleFun, 100	get_ltass_gain_db, 583
hz2bark, 101	samplingrate, 583
hz2bark_analytic, 101	shape, 583
hz2erb, 101	vbin1, 583
hz2erb_glasberg1990, 101	vbin2, 583
hz2hz, 100	w, 583
hz2khz, 101	MHAOvIFilter::fftfb_vars_t, 584
hz2log, 101	cLTASS, 586
hz2octave, 101	cf, 586
hz2third_octave, 101	ef, 586
inv_scale, 102	f, 586
MHAOvlFilter::ShapeFun, 102	fail_on_nonmonotonic, 586
expflt, 103	fail_on_unique_bins, 586
gauss, 103	fftfb_vars_t, 585
hann, 103	fscale, 585
linear, 103	ftype, 586
rect, 102	normalize, 586
MHAOvlFilter::band_descriptor_t, 577	ovltype, 585
cf, 578	plateau, 585
cf_h, 578	shapes, 586
cf_l, 578	MHAOvlFilter::fscale_bw_t, 587
ef_h, 578	bw, 588
ef_l, 578	bw_hz, 588
high_side_flat, 578	fscale_bw_t, 588
low_side_flat, 578	get_bw_hz, 588
MHAOvlFilter::barkscale, 99	update_hz, 588
vbark, 100	updater, 588
vfreq, 100	MHAOvIFilter::fscale_t, 588
MHAOvlFilter::barkscale::bark2hz_t, 578	f, 589
$\sim$ bark2hz_t, 579	f_hz, 589
bark2hz_t, 579	fscale_t, 589
MHAOvlFilter::barkscale::hz2bark_t, 579	get_f_hz, 589
$\sim$ hz2bark_t, 580	unit, 589
hz2bark_t, 580	update_hz, 589
MHAOvIFilter::fftfb_ac_info_t, 580	updater, 589
bwv, 581	MHAOvlFilter::fspacing_t, 590
cLTASS, 581	bands, 591
cfv, 580	cf2bands, 591
efv, 580	ef2bands, 591

	and a subsector to the 1074
equidist2bands, 591	mha_plugin.hh, 971
fail_on_nonmonotonic_cf, 591	MHAPLUGIN_OVERLOAD_OUTDOMAIN
fail_on_unique_fftbins, 591	altplugs.cpp, 923
fs_, 591	mha_generic_chain.h, 959
fspacing_t, 591	split.cpp, 1024
get_cf_fftbin, 591	wave2spec.cpp, 1028
get_cf_hz, 591	MHAPLUGIN_PROC_CALLBACK_PREFIX
get_ef_hz, 591	mha_plugin.hh, 971
nbands, 591	MHAPLUGIN_PROC_CALLBACK
nfft_, 591	mha_plugin.hh, 971
symmetry_scale, 591	MHAParser, 104
MHAOvlFilter::overlap_save_filterbank_←	all_dump, 107
analytic_t, 592	all_ids, 107
filter_analytic, 593	c_parse_cmd_t, 107
imagfb, 593	c_parse_err_t, 107
overlap_save_filterbank_analytic_t, 593	cfg_dump, 107
MHAOvlFilter::overlap_save_filterbank_t, 593	cfg_dump_short, 107
channelconfig_out_, 595	commentate, 107
get_channelconfig, 595	entry_map_t, 107
overlap_save_filterbank_t, 595	envreplace, 108
MHAOvlFilter::overlap_save_filterbank_t←	get_precision, 107
::vars_t, 595	mon_dump, 107
fftlen, 596	opact_map_t, 107
irswnd, 596	opact_t, 107
phasemodel, 596	query_map_t, 107
vars_t, 596	query_t, 107
MHAOvlFilter::scale_var_t, 597	strreplace, 107
add_fun, 598	trim, 107
funs, 598	MHAParser::StrCnv, 108
get_fun, 598	bracket_balance, 109
get_name, 598	num_brackets, 109
hz2unit, 598	str2val, 110, 111
names, 598	str2val< mha_real_t >, 110
scale_var_t, 598	val2str, 111, 112
unit2hz, 598	MHAParser::base_t, 599
MHAPLATFORM	~base t, 602
mha parser.cpp, 965	activate_query, 606
MHAPLUGIN CALLBACKS PREFIX	add_parent_on_insert, 606
The openMHA Plugins (programming in-	add_replace_pair, 606
terface), 8	base_t, 602
MHAPLUGIN_CALLBACKS	data is initialized, 607
The openMHA Plugins (programming in-	fullname, 606
terface), 8	help, 607
MHAPLUGIN_DOCUMENTATION_PREFIX	id_str, 607
mha_plugin.hh, 971	nested_lock, 607
MHAPLUGIN_DOCUMENTATION	notify, 606
The openMHA Plugins (programming in-	op_query, 603
terface), 9	op_setval, 603
MHAPLUGIN_INIT_CALLBACKS_PREFIX	op_subparse, 603
mha plugin.hh, 971	operators, 607
MHAPLUGIN_INIT_CALLBACKS	oplist, 606
==	-  - · · ,

parent, 607	c_parse_cmd, 615
parse, 602, 603	c_parse_err, 615
prereadaccess, 607	libdata, 615
queries, 607	liberr, 615
query_addsubst, 605	modulename, 615
query_cmds, 605	op_query, 614
query_dump, 603	op_setval, 614
query entries, 603	op_subparse, 614
query_help, 605	ret_size, 615
query_id, 605	retv, 615
query_listids, 605	set_parse_cb, 614
query_perm, 604	test_error, 614
query_range, 604	MHAParser::commit_t
query_readfile, 604	commit_t, 617
query_savefile, 604	extern_connector, 617
query_savefile_compact, 605	MHAParser::commit_t< receiver_t >, 615
query_savemons, 605	MHAParser::complex_mon_t, 617
query_subst, 605	complex_mon_t, 618
query_type, 604	data, 619
query_val, 604	query_type, 618
guery version, 605	query_val, 618
readaccess, 607	MHAParser::complex_t, 619
repl_list, 607	complex_t, 620
repl_list_t, 602	data, 621
rm_parent_on_remove, 606	op_setval, 620
set_help, 606	query_type, 620
set_node_id, 605	query_val, 620
thefullname, 607	MHAParser::entry_t, 621
valuechanged, 606	entry, 621
writeaccess, 606	entry_t, 621
MHAParser::base_t::replace_t, 608	name, 621
a, 608	MHAParser::expression_t, 622
b, 608	expression_t, 622
get_a, 608	Ival, 622
get_b, 608	op, 622
replace, 608	rval, 622
replace_t, 608	MHAParser::float_mon_t, 623
MHAParser::bool_mon_t, 609	data, 624
bool_mon_t, 609	float_mon_t, 623
data, 610	query_type, 624
query_type, 610	query_val, 624
query_val, 610	MHAParser::float_t, 624
MHAParser::bool_t, 610	data, 627
bool_t, 612	float_t, 626
data, 612	op_setval, 626
op_setval, 612	query_type, 626
query_type, 612	query_val, 626
query_val, 612	MHAParser::int_mon_t, 627
MHAParser::c_ifc_parser_t, 613	data, 629
~c_ifc_parser_t, 614	int_mon_t, 628
c_ifc_parser_t, 614	query_type, 628

query_val, 628	query_type, 644
MHAParser::int_t, 629	query_val, 644
data, 631	MHAParser::mhaconfig_mon_t, 645
int_t, 630	channels, 646
op_setval, 631	domain, 646
query_type, 631	fftlen, 646
query_val, 631	fragsize, 646
MHAParser::keyword_list_t, 631	mhaconfig_mon_t, 646
add_entry, 633	srate, 647
empty_string, 634	update, 646
entries, 634	wndlen, 646
get_entries, 633	MHAParser::mhapluginloader_t, 647
get_index, 633	~mhapluginloader_t, 648
get_value, 633	ac_, 649
index, 634	bookkeeping, 649
keyword list t, 632	cf_in_, 649
set entries, 633	cf_out_, 649
set_index, 633	connector, 649
set_value, 633	get_cfin, 649
size_t, 632	get cfout, 649
validate, 633	get_last_name, 649
MHAParser::kw t, 634	last_name, 649
data, 637	load_plug, 649
isval, 636	mhapluginloader_t, 648
kw_t, 635, 636	parent_, 649
op_setval, 636	plug, 649
query_range, 636	plugname, 649
query_type, 636	plugname_name_, 649
query_val, 636	prefix_, 649
set_range, 636	prepare, 648
validate, 636	process, 648, 649
MHAParser::mcomplex_mon_t, 637	release, 648
data, 638	MHAParser::monitor_t, 650
mcomplex_mon_t, 638	monitor_t, 650
query_type, 638	op_query, 650
query val, 638	query_dump, 650
MHAParser::mcomplex_t, 639	query_perm, 651
data, 640	MHAParser::parser t, 651
mcomplex_t, 640	~parser_t, 653
op_setval, 640	entries, 655
query_type, 640	force remove item, 653
query_val, 640	id_string, 655
MHAParser::mfloat_mon_t, 641	insert_item, 653
data, 642 mfloat_mon_t, 641	last_errormsg, 656 op_query, 654
— — · — ·	. —
query_type, 642	op_setval, 654
query_val, 642 MHAParser::mfloat t, 642	op_subparse, 654
<u> </u>	parser_t, 653
data, 645 mfloat_t, 644	query_dump, 654 query_entries, 654
op setval, 644	query_listids, 655
υρ_3 <del>c</del> ιναι, υ <del>44</del>	quei y_iistius, 000

query_readfile, 655	data, 670
query_savefile, 655	query_type, 670
query savefile compact, 655	query_val, 670
query_savemons, 655	vfloat_mon_t, 670
query_type, 654	MHAParser::vfloat_t, 671
query_val, 655	data, <mark>673</mark>
remove_item, 653, 654	op_setval, 672
set_id_string, 655	query_type, 672
srcfile, 655	query_val, 672
srcline, 656	vfloat t, 672
MHAParser::range_var_t, 656	MHAParser::vint_mon_t, 673
check_low, 658	data, 674
check_range, 659	query_type, 674
check_up, 659	query_val, 674
low incl, 658	vint_mon_t, 674
low_limit, 658	MHAParser::vint_t, 675
query_range, 657	data, 677
range_var_t, 657	op setval, 676
set_range, 657	query_type, 676
up incl, 658	query_type, 676
up_limit, 658	vint_t, 676
validate, 658	MHAParser::vstring_mon_t, 677
MHAParser::string_mon_t, 659	data, 678
data, 661	•
•	query_type, 678
query_type, 660	query_val, 678
query_val, 660	vstring_mon_t, 678
string_mon_t, 660	MHAParser::vstring_t, 679
MHAParser::string_t, 661	data, 680
data, 663	op_setval, 680
op_setval, 662	query_type, 680
query_type, 662	query_val, 680
query_val, 662	vstring_t, 680
string_t, 662	MHAParser::window_t, 681
MHAParser::variable_t, 663	get_type, 683
locked, 664	get_window, 682, 683
op_setval, 664	user, 683
query_perm, 664	window_t, 682
setlock, 664	wnd_bartlett, 682
variable_t, 664	wnd_blackman, 682
MHAParser::vcomplex_mon_t, 665	wnd_hamming, 682
data, 666	wnd_hann, 682
query_type, 666	wnd_rect, 682
query_val, 666	wnd_user, 682
vcomplex_mon_t, 666	wtype, 683
MHAParser::vcomplex_t, 667	wtype_t, 682
data, 668	MHAPlugin, 112
op_setval, 668	MHAPlugin::cfg_chain_t
query_type, 668	$\sim$ cfg_chain_t, 685
query_val, 668	cfg_chain_t, 685
vcomplex_t, 668	data, 685
MHAParser::vfloat_mon_t, 669	next, 685

not_in_use, 685	inner_signal, 698
MHAPlugin::cfg_chain_t< runtime_cfg_t >,	, inner_srate, 698
684	nchannels_in, 698
MHAPlugin::config_t	nchannels_out, 698
$\sim$ config_t, 688	outer2inner_resampling, 698
cfg, 690	outer_fragsize, 697
cfg_chain, 690	outer_srate, 698
cfg_chain_current, 690	output_signal, 698
cleanup_unused_cfg, 690	plugloader, 698
config_t, 688	process, 697
last_config, 688	resampling_t, 697
poll_config, 688	MHAPlugin_Split, 113
push_config, 688	INVALID_THREAD_PRIORITY, 113
remove_all_cfg, 690	MHAPlugin_Split::domain_handler_t, 698
MHAPlugin::config_t< runtime_cfg_t >, 685	~domain_handler_t, 700
MHAPlugin::plugin_t	deallocate_domains, 701
~plugin_t, 692	domain_handler_t, 700
ac, 694	get_signal, 702
input_cfg, 693	operator=, 700
input_cfg_, 694	process, 702
is_prepared, 693	processor, 703
is_prepared_, 694	put_signal, 701
mhaconfig_in, 694	set_input_domain, 700
mhaconfig_out, 694	set_output_domain, 700
output_cfg, 694	spec_in, 703
output_cfg_, 694	spec_out, 703
plugin_t, 692	wave_in, 703
prepare, 692	wave_out, 703
prepare_, 693	MHAPlugin_Split::dummy_threads_t, 703
release, 693	catch thread, 704
release, 693	dummy_threads_t, 704
tftype, 694	kick thread, 704
MHAPlugin::plugin_t< runtime_cfg_t >, 690	MHAPlugin_Split::posix_threads_t, 705
MHAPlugin_Resampling, 113	~posix_threads_t, 707
MHAPlugin Resampling::resampling if ←	attr, 708
t, 695	catch_condition, 708
algo, 696	catch_thread, 707
chain, 696	current_thread_priority, 707
fragsize, 696	current_thread_scheduler, 707
irslen_inner2outer, 696	kick condition, 707
irslen_outer2inner, 696	kick_thread, 707
nyquist_ratio, 696	kicked, 708
plugloader, 696	main, 707
prepare, 696	mutex, 707
process, 696	posix_threads_t, 706
release, 696	priority, 708
resampling_if_t, 696	processing_done, 708
srate, 696	scheduler, 708
MHAPlugin_Resampling::resampling_t, 697	3011044101, 700
	termination_request, 708
inner2outer_resampling, 698	•

MHAPlugin_Split::split_t, 709	MHAPrepare_cb
∼split_t, 711	PluginLoader::mhapluginloader_t, 846
algos, 712	MHAPrepare_t
chains, 713	mha.h, 944
channels, 712	MHAProc_spec2spec_cb
clear_chains, 711	PluginLoader::mhapluginloader_t, 846
collect_result, 711	MHAProc_spec2spec_t
copy_output_spec, 711	mha.h, 945
copy_output_wave, 711	MHAProc_spec2wave_cb
delay, 713	PluginLoader::mhapluginloader_t, 847
framework_thread_priority, 713	MHAProc_spec2wave_t
framework_thread_scheduler, 712	mha.h, 945
patchbay, 712	MHAProc_wave2spec_cb
prepare_, 711	PluginLoader::mhapluginloader_t, 846
process, 711	MHAProc_wave2spec_t
release_, 711	mha.h, 945
signal_out, 712	MHAProc_wave2wave_cb
spec_out, 713	PluginLoader::mhapluginloader_t, 846
split_t, 711	MHAProc_wave2wave_t
thread_platform, 712	mha.h, 945
trigger_processing, 711	MHARelease_cb
update, 711	PluginLoader::mhapluginloader_t, 846
wave_out, 713	MHARelease_t
worker_thread_priority, 712	mha.h, 944
worker_thread_scheduler, 712	MHASet_cb
MHAPlugin_Split::splitted_part_t, 713	PluginLoader::mhapluginloader_t, 847
$\sim$ splitted_part_t, 715	MHASet_t
collect_result, 717	mha.h, 944
domain, 717	MHASignal, 114
operator=, 716	copy_permuted, 120
parse, 716	kth_smallest, 117
plug, 717	limit, 117
prepare, 716	mean, 118
release, 716	median, 118
splitted_part_t, 715	quantile, 119
thread, 718	saveas_mat4, 119, 120
trigger_processing, 717	scale, 117
MHAPlugin_Split::thread_platform_t, 718	signal_counter, 120
~thread_platform_t, 719	MHASignal::async_rmslevel_t, 725
catch_thread, 720	async_rmslevel_t, 726
kick_thread, 720	filled, 727
operator=, 720	peaklevel, 727
processor, 720	pos, 727
thread_platform_t, 719	process, 727
MHAPlugin_Split::uni_processor_t, 721	rmslevel, 726
~uni_processor_t, 721	MHASignal::delay_spec_t, 727
process, 722	~delay_spec_t, 728
MHAPluginCategory_t	buffer, 728
mha.h, 945	delay, 728
MHAPluginDocumentation_t	delay_spec_t, 728
mha.h, 945	pos, 728

process, 728	wave2spec, 735
MHASignal::delay_t, 728	wave2spec_scale, 736
$\sim$ delay_t, 729	MHASignal::hilbert_fftw_t, 737
buffer, 730	buf_c_in, 738
channels, 730	buf_c_out, 738
delay_t, 729	buf_r_in, 738
delays, 730	buf_r_out, 738
inspect, 730	hilbert, 738
pos, 730	hilbert_fftw_t, 738
process, 729	n, 738
MHASignal::delay_wave_t, 730	p1, 738
~delay_wave_t, 731	p2, 738
buffer, 731	sc, 738
delay, 731	MHASignal::hilbert_t, 738
delay_wave_t, 731	~hilbert_t, 739
pos, 731	h, 739
process, 731	hilbert_t, 739
•	operator(), 739
MHASignal::doublebuffer_t, 731	
~doublebuffer_t, 733	MHASignal::loop_wavefragment_t, 740
ch, 734	add, 741
doublebuffer_t, 732	b_loop, 743
inner_in, 734	get_mapping, 742
inner_out, 734	input, 741
inner_process, 733	intern_level, 743
k_inner, 734	is_playback_active, 743
k_outer, 734	level_mode_t, 741
min, 733	locate_end, 743
outer_out, 734	loop_wavefragment_t, 741
outer_process, 733	mute, 741
this_outer_out, 734	peak, <b>741</b>
MHASignal::fft_t, 734	playback, 742, 743
∼fft_t, <b>735</b>	playback_channels, 743
backward, 736	playback_mode_t, 741
backward_scale, 736	pos, 743
buf_in, 737	relative, 741
buf_out, 737	replace, 741
fft_t, 735	rewind, 743
fftw plan fft, 737	rms, 741
fftw plan ifft, 737	rms limit40, 741
fftw_plan_spec2wave, 737	set level db, 743
fftw_plan_wave2spec, 737	set_level_lin, 743
forward, 735	MHASignal::matrix_t, 744
forward_scale, 736	$\sim$ matrix_t, 747
n_im, 737	cdata, 752
n_re, 737	complex_ofs, 752
nfft, 737	dimension, 748
scale, 737	get_cdata, 752
sort_fftw2spec, 736	get_comm_var, 747
sort_spec2fftw, 736	get_index, 751
spec2wave, 735	get_nelements, 748
spec2wave, 733 spec2wave_scale, 736	get_nreals, 751
Speciality and special	get_iiieais, 751

get_rdata, 752	value, 765
imag, 749-751	MHASignal::stat_t, 767
is_same_size, 748	mean, 768
iscomplex, 748	mean_std, 768
matrix_t, 746, 747	n, 768
nelements, 752	push, 768
numbytes, 751	stat_t, 768
operator(), 749-751	sum, 768
operator=, 747	sum2, 768
rdata, 752	MHASignal::subsample_delay_t, 768
real, 748–750	last_complex_bin, 770
size, 748	phase_gains, 770
write, 751	process, 770
MHASignal::minphase_t, 752	subsample_delay_t, 769
minphase_t, 753	MHASignal::uint_vector_t, 771
operator(), 753	~uint_vector_t, 772
phase, 754	data, 773
MHASignal::quantizer_t, 754	get_length, 773
downscale, 755	getdata, 773
limit, 755	length, 773
operator(), 755	numbytes, 773
quantizer_t, 754	operator=, 772
up_limit, 755	operator==, 772
upscale, 755	operator[], 773
MHASignal::ringbuffer_t, 755	uint_vector_t, 772
contained_frames, 757	write, 773
discard, 758	MHASignal::waveform_t, 774
next_read_frame_index, 758	~waveform_t, 776
next write frame index, 759	assign, 780
ringbuffer t, 757	assign_channel, 780
value, 757	assign_frame, 780
write, 758	copy, 781
MHASignal::schroeder_t, 759	copy_channel, 781
down, 761	copy_from_at, 781
groupdelay t, 760	export_to, 782
identity, 762	get_size, 784
log_down, 762	limit, 782
log_up, 762	operator(), 777, 778
schroeder_t, 761	operator=, 777
sign_t, 761	operator[], 777
up, 761	power, 782
MHASignal::spectrum_t, 762	powspec, 783
~spectrum_t, 764	scale, 783
copy, 765	scale_channel, 783
copy_channel, 766	scale_frame, 784
export_to, 766	sum, 778, 779
operator(), 765	sum_channel, 779
operator[], 765	sumsqr, 779
scale, 766	value, 777, 778
scale_channel, 767	waveform t, 776
spectrum_t, 764	MHASndFile, 121
ορσοιιαιτ <u>ι, 704</u>	

MHASndFile::sf_t, 784	hanning, 122
∼sf_t, 785	rect, 122
sf, 785	MHAWindow::bartlett_t, 796
sf_t, 785	bartlett_t, 796
MHASndFile::sf_wave_t, 785	MHAWindow::base_t, 797
sf_wave_t, 786	base_t, 797, 798
MHAStrError cb	operator(), 798
PluginLoader::mhapluginloader_t, 847	ramp begin, 798
MHAStrError t	ramp_end, 798
mha.h, 945	MHAWindow::blackman_t, 799
MHATableLookup, 121	blackman_t, 799
MHATableLookup::linear_table_t, 786	MHAWindow::fun_t, 800
~linear_table_t, 788	fun_t, 800
add_entry, 789	MHAWindow::hamming_t, 801
clear, 789	hamming_t, 802
interp, 788	MHAWindow::hanning_t, 802
len, 790	hanning_t, 803
linear_table_t, 788	MHAWindow::rect t, 803
lookup, 788	rect t, 804
prepare, 789	MHAWindow::user_t, 804
scalefac, 790	user_t, 805
set_xmax, 789	MIN TCP PORT STR
set_xmin, 788	MHAIOTCP.cpp, 1007
vec_y, 790	MIN TCP PORT
vy, 790	MHAIOTCP.cpp, 1007
xmax, 790	MIN
xmin, 790	mha_defs.h, 948
MHATableLookup::table_t, 790	mXY
~table t, 791	MHATableLookup::xy_table_t, 795
clear, 791	main
interp, 791	analysemhaplugin.cpp, 923
lookup, 791	browsemhaplugins.cpp, 925
table_t, 791	generatemhaplugindoc.cpp, 935
MHATableLookup::xy_table_t, 792	MHAPlugin_Split::posix_threads_t, 707
add_entry, 794	mha.cpp, 940
clear, 794	testalsadevice.c, 1025
get_xlimits, 795	make_friendly_number
interp, 793	MHAFilter, 92
lookup, 793	mhajack.cpp, 1009
mXY, 795	make_friendly_number_by_limiting
set_xfun, 794	nlms_wave.cpp, 1015
set_xyfun, 795	prediction_error.cpp, 1017
set_yfun, 795	mapping
xfun, 795	addsndfile::addsndfile_if_t, 175
xy_table_t, 793	coherence::vars_t, 228
xyfun, 795	matmix_t
yfun, 795	matrixmixer::matmix_t, 380
MHAWindow, 121	matrix_t
bartlett, 122	MHASignal::matrix_t, 746, 747
blackman, 122	matrixmixer, 85
hamming, 122	matrixmixer.cpp, 939

matrixmixer::cfg_t, 377	dc_simple::dc_t, 253
cfg_t, 378	dc_simple::dc_vars_t, 255
m, 378	DynComp::dc_afterburn_rt_t, 280
process, 378	DynComp::dc_afterburn_vars_t, 284
sout, 378	maximum_reader_xruns_in_succession_
wout, 378	before_stop
matrixmixer::matmix_t, 379	mha_drifter_fifo_t, 412
ci, 380	maximum_writer_xruns_in_succession_ ←
co, 380	before stop
matmix t, 380	mha_drifter_fifo_t, 412
mixer, 380	maxlen
patchbay, 380	plingploing::if_t, 829
prepare, 380	maxlen
• •	_
process, 380	plingploing::plingploing_t, 831
update_m, 380	mcomplex_mon_t
max	MHAParser::mcomplex_mon_t, 638
spec2wave.cpp, 1020	mcomplex_t
Vector and matrix processing toolbox, 58	MHAParser::mcomplex_t, 640
max_clipped	mean
softclipper_variables_t, 883	MHA_AC::stat_t, 394
max_fill_count	MHASignal, 118
mha_fifo_t, 424	MHASignal::stat_t, 768
max_frames	mean_std
acsave::cfg_t, 162	MHASignal::stat_t, 768
max_lag	median
doasvm_feature_extraction, 271	MHASignal, 118
max_level_difference	mfloat_mon_t
dc::dc_t, 243	MHAParser::mfloat_mon_t, 641
dc::dc_vars_t, 245	mfloat_t
max_p_ind_name	MHAParser::mfloat_t, 644
doasvm_classification, 267	mha
max_pool_ind_name	speechnoise_t, 888
acPooling_wave, 155	mha.cpp, 940
max q	main, 940
timoConfig, 899	mhamain, 940
max_q_AC	mha.h, 940
timo_AC, 894	algo_comm_t, 944
max_val	MHA AC CHAR, 944
timoConfig, 899	MHA_AC_DOUBLE, 944
max_val_AC	MHA AC FLOAT, 944
timo AC, 894	MHA AC INT, 944
maxInputChannels	MHA AC MHACOMPLEX, 944
MHAIOPortAudio::device_info_t, 550	MHA AC MHAREAL, 944
maxOutputChannels	MHA AC UNKNOWN, 944
MHAIOPortAudio::device_info_t, 550	MHA AC USER, 944
maxabs	MHA_AC_VEC_FLOAT, 944
Vector and matrix processing toolbox, 56,	MHA_CALLBACK_TEST_PREFIX, 942
57	MHA CALLBACK TEST, 942
maxframe	
	MHA_DOMAIN_MAX, 944
acsave::save_var_t, 164	MHA_DOMAIN_UNKNOWN, 944
maxgain	MHA_RELEASE_VERSION_STRING,

943	descriptor, 398
MHA SPECTRUM, 944	rdata, 398
MHA_STRUCT_SIZEMATCH, 943	mha_channel_info_t, 398
MHA STRF, 942	dir, 399
MHA_VERSION_BUILD, 943	id, 399
MHA VERSION MAJOR, 942	idstr, 399
MHA VERSION MINOR, 942	peaklevel, 399
MHA VERSION RELEASE, 943	side, 399
MHA VERSION STRING, 943	mha_complex
MHA VERSION, 943	Complex arithmetics in the openMHA, 62
MHA WAVEFORM, 943	mha_complex_t, 400
MHA XSTRF, 942	im, 400
MHADestroy t, 944	re, 400
MHAGetVersion_t, 944	mha_dblbuf_t
MHAInit_t, 944	~mha_dblbuf_t, 403
MHAPluginCategory_t, 945	delay, 405
MHAPluginDocumentation_t, 945	fifo_size, 405
MHAPrepare_t, 944	get_delay, 403
MHAProc_spec2spec_t, 945	get_fifo_size, 403
MHAProc_spec2wave_t, 945	get_inner_error, 403
MHAProc_wave2spec_t, 945	get_inner_size, 403
MHAProc_wave2wave_t, 945	get_input_channels, 403
MHARelease_t, 944	get_input_fifo_fill_count, 403
MHASet t, 944	get_input_fifo_space, 403
MHAStrError_t, 945	get_outer_size, 403
mha_domain_t, 944	get_output_channels, 403
mha_algo_comm.cpp, 945	get_output_fifo_fill_count, 403
AC_DIM_MISMATCH, 945	get_output_fifo_space, 403
AC INVALID HANDLE, 945	inner error, 406
AC INVALID NAME, 945	inner_size, 405
AC INVALID OUTPTR, 945	input, 404
AC STRING TRUNCATED, 945	input_channels, 405
AC_SUCCESS, 945	input_fifo, 405
AC TYPE MISMATCH, 945	mha_dblbuf_t, 402
algo_comm_default, 945	outer error, 406
mha algo comm.h, 945	outer_size, 405
mha_algo_comm.hh, 947	output, 404
ALGO_COMM_ID_STR, 947	output channels, 405
algo_comm_default, 947	output_fifo, 405
mha_alloc	process, 404
mha ruby.cpp, 973	provoke_inner_error, 404
mha_audio_descriptor_t, 396	provoke_outer_error, 404
cf, 397	value_type, 402
chdir, 397	mha_dblbuf_t< FIFO >, 400
dt, 397	mha_debug
is_complex, 397	Error handling in the openMHA, 32
n_channels, 397	mha_defs.h, 947
n_freqs, 397	MHA_FUN, 948
n_samples, 397	
mha_audio_t, 397	CHECK_EXPR, 948
cdata, 398	CHECK_VAR, 948

M_PI, 948	MHA_ERR_VARFMT, 951
MAX, 949	MHA_ERR_VARRANGE, 951
MHA EAR LEFT, 949	mha_set_user_error, 951
MHA EAR MAX, 949	mha_strerror, 951
MHA_EAR_RIGHT, 949	mha_error.cpp, 951
MIN, 948	mha_error.hh, 952
mha_direction_t, 406	Getmsg, 953
azimuth, 406	mha_error_helpers, 87
distance, 407	digits, 87
elevation, 406	snprintf_required_length, 87
mha domain t	mha_event_emitter.h, 953
 mha.h, 944	mha_events.cpp, 953
mha_drifter_fifo_t	mha_events.h, 953
desired_fill_count, 411	mha_exit_request
get_available_space, 410	mha_ruby.cpp, 973
get_des_fill_count, 410	mha_fft
get fill count, 410	timoConfig, 898
get_min_fill_count, 411	mha_fft_backward
maximum_reader_xruns_in_succession	Fast Fourier Transform functions, 74
_before_stop, 412	mha_fft_backward_scale
maximum_writer_xruns_in_succession↔	Fast Fourier Transform functions, 75
_before_stop, 412	mha_fft_forward
mha_drifter_fifo_t, 409	Fast Fourier Transform functions, 74
minimum_fill_count, 411	mha_fft_forward_scale
null_data, 412	Fast Fourier Transform functions, 75
read, 410	mha fft free
reader_started, 411	Fast Fourier Transform functions, 71
reader_xruns_in_succession, 412	mha_fft_new
reader_xruns_since_start, 412	Fast Fourier Transform functions, 71
reader_xruns_total, 412	mha_fft_spec2wave
starting, 411	Fast Fourier Transform functions, 73
startup_zeros, 413	mha_fft_spec2wave_scale
stop, 411	Fast Fourier Transform functions, 76
write, 409	mha_fft_t
writer_started, 411	Fast Fourier Transform functions, 71
writer_xruns_in_succession, 412	mha_fft_wave2spec
writer_xruns_since_start, 412	Fast Fourier Transform functions, 72
writer_xruns_total, 412	mha_fft_wave2spec_scale
mha_drifter_fifo_t< T >, 407	Fast Fourier Transform functions, 75
mha_errno.c, 949	mha_fftfb.cpp, 953
cstr_strerror, 950	BARKSCALE_ENTRIES, 955
mha_set_user_error, 950	filtershapefun, 955
mha_strerror, 950	mha_fftfb.hh, 955
next_except_str, 950	mha_fifo.cpp, 956
STRLEN, 950	mha_fifo.h, 956
mha_errno.h, 950	mha_fifo_thread_platform_implementation
MHA_ERR_INVALID_HANDLE, 951	
MHA_ERR_NULL, 951	mha_fifo_lw_t
MHA_ERR_SUCCESS, 951	$\sim$ mha_fifo_lw_t, 416
MHA_ERR_UNKNOWN, 951	error, 418
MHA_ERR_USER, 951	mha_fifo_lw_t, 416

read, 417	diff_coeffs, 957
set_error, 417	mha_filter.hh, 957
sync, 417	mha_fragsize
write, 416	MHAIOJackdb::io_jack_t, 547
mha_fifo_lw_t $<$ T $>$ , 415	mha_free
mha_fifo_posix_threads_t, 418	mha_ruby.cpp, 973
~mha_fifo_posix_threads_t, 419	mha_freelib
aquire_mutex, 419	 mha_os.h, 962
decrease_condition, 420	mha freelib success
decrement, 419	mha os.h, 962
increase condition, 420	mha_generic_chain.cpp, 958
increment, 419	mhaconfig_compare, 959
mha_fifo_posix_threads_t, 419	mha_generic_chain.h, 959
mutex, 420	MHAPLUGIN_OVERLOAD_OUTDOM↔
release_mutex, 419	AIN, 959
wait_for_decrease, 419	mha_getenv
wait_for_increase, 419	mha os.cpp, 961
mha_fifo_t	mha_os.h, 963
$\sim$ mha fifo t, 422	mha_getlibfun
buf, 424	mha_os.h, 962
buf_uses_placement_new, 424	mha_getlibfun_checked
clear, 424	mha_os.h, 963
get_available_space, 423	mha_hton
get_fill_count, 423	mha_os.h, 963, 964
get_max_fill_count, 423	mha_io_ifc.h, 959
max_fill_count, 424	IODestroy_t, 960
mha_fifo_t, 422	IOInit_t, 960
operator=, 423	IOPrepare_t, 960
read, 423	IOProcessEvent_t, 960
read_ptr, 424	IORelease_t, 960
value_type, 422	IOSetVar_t, 960
write, 422	IOStart_t, 960
write_ptr, 424	IOStartedEvent_t, 960
mha fifo $t < T >$ , 420	IOStop t, 960
mha_fifo_thread_guard_t, 424	IOStoppedEvent_t, 960
~mha_fifo_thread_guard_t, 425	IOStrError t, 960
mha_fifo_thread_guard_t, 425	mha lib extension
sync, 425	mha os.h, 963
mha_fifo_thread_platform_implementation_t	mha libhandle t
mha fifo.h, 956	 mha_os.h, 963
mha fifo thread platform t, 425	mha_library_paths
~mha_fifo_thread_platform_t, 426	mha_os.cpp, 961
aquire_mutex, 427	mha_os.h, 963
decrement, 427	mha_loadlib
increment, 427	mha_os.h, 962
mha_fifo_thread_platform_t, 426	mha_loadlib_error
operator=, 428	mha_os.h, 963
release_mutex, 427	mha min 1
wait_for_decrease, 427	mha_signal.hh, 985
wait_for_increase, 427	mha_msleep
mha_filter.cpp, 956	mha_os.h, 963

mha_multisrc.cpp, 960	MHAPLUGIN_INIT_CALLBACKS_PRE
mha_multisrc.h, 961	FIX, 971
mha_ntoh	MHAPLUGIN_INIT_CALLBACKS, 971
mha_os.h, 964	MHAPLUGIN_PROC_CALLBACK_PR↔
mha_os.cpp, 961	EFIX, 971
list_dir, 961	MHAPLUGIN_PROC_CALLBACK, 971
mha_getenv, 961	WINAPI, 971
mha_library_paths, 961	mha_profiling.c, 972
mha_os.h, 961	mha_platform_tic, 972
FMTsz, 963	mha_platform_toc, 972
list_dir, 963	mha_tic, 972
MHA_RESOLVE_CHECKED, 963	mha_toc, 972
MHA_RESOLVE, 963	mha_profiling.h, 972
mha_freelib, 962	mha_platform_tic, 973
mha_freelib_success, 962	mha_platform_tictoc_t, 973
mha_getenv, 963	mha_platform_toc, 973
mha_getlibfun, 962	mha_real_t
mha_getlibfun_checked, 963	Vector and matrix processing toolbox, 41
mha_hton, 963, 964	mha_round
mha_lib_extension, 963	mha_signal.hh, 985
mha_libhandle_t, 963	mha_rt_fifo_element_t
mha_library_paths, 963	~mha_rt_fifo_element_t, 429
mha loadlib, 962	abandonned, 429
mha_loadlib_error, 963	data, 429
mha_msleep, 963	mha_rt_fifo_element_t, 428
mha_ntoh, 964	next, 429
mha_parse	mha_rt_fifo_element_t< T >, 428
mha_ruby.cpp, 973	mha_rt_fifo_t
mha_parser.cpp, 964	~mha_rt_fifo_t, 430
MHAPLATFORM, 965	current, 432
parse_1_complex, 965	mha_rt_fifo_t, 430
parse_1_float, 965	poll, 431
write_float, 965	poll_1, 431
mha_parser.hh, 965	push, 431
DEFAULT_RETSIZE, 969	remove_abandonned, 431
insert_member, 969	remove_all, 431
mha platform tic	root, 432
mha_profiling.c, 972	mha_rt_fifo_t< T >, 429
mha profiling.h, 973	mha_ruby.cpp, 973
mha platform tictoc t	Init mha ruby, 973
mha_profiling.h, 973	mha_alloc, 973
mha platform toc	mha_exit_request, 973
<b>—</b>	<u> </u>
mha_profiling.c, 972	mha_free, 973
mha_profiling.h, 973	mha_parse, 973
mha_plugin.hh, 969	rb_f_t, 973
attribute, 971	mha_samplerate
declspec, 971	MHAIOJackdb::io_jack_t, 547
GITCOMMITHASH, 971	mha_set_user_error
HINSTANCE, 971	mha_errno.c, 950
MHAPLUGIN_DOCUMENTATION_PR↔	mha_errno.h, 951
EFIX, 971	mha_signal.cpp, 973

ASSERT EQUAL DIM PTR, 976	mha_wave_t, 462
ASSERT EQUAL DIM, 976	buf, 463
intensity, 976	channel_info, 463
MHA ID MATRIX, 976	num_channels, 463
MHA_ID_UINT_VECTOR, 976	num_frames, 463
safe_div, 976	mha_windowparser.cpp, 990
set_minabs, 976	wnd_funs, 990
mha_signal.hh, 976	mha_windowparser.h, 990
M_PI, 985	mhachain, 90
mha_min_1, 985	mhachain.cpp, 991
— — ·	mhachain::chain base t, 463
mha_round, 985	;
operator<<, 985	algos, 465
operator>>, 985	b_prepared, 465
safe_div, 985	bprofiling, 465
set_minabs, 985	cfin, 465
value, 985	cfout, 465
mha_signal_fft.h, 986	chain, 465
mha_spec_t, 432	chain_base_t, 464
buf, 433	old_algos, 465
channel_info, 433	patchbay, 465
num_channels, 433	prepare, 465
num_frames, 433	process, 464, 465
mha_strerror	release, 465
mha_errno.c, 950	update, 465
mha_errno.h, 951	mhachain::mhachain_t, 466
mha_tablelookup.cpp, 986	mhachain_t, 466
mha_tablelookup.hh, 986	mhachain::plugs_t, 467
mha_tcp.cpp, 987	$\sim$ plugs_t, 468
ASYNC_CONNECT_STARTED, 988	ac, 468
closesocket, 988	algos, 468
host_port_to_sock_addr, 988	alloc_plugs, 468
INVALID_SOCKET, 988	b_prepared, 468
SOCKET_ERROR, 988	b_use_profiling, 469
SOCKET, 988	chain, 469
tcp_connect_to, 988	cleanup_plugs, 468
tcp_connect_to_with_timeout, 988	parser, 468
thread_start_func, 988	plugs_t, 468
mha_tcp.hh, 988	prepare, 468
Sleep, 990	prepared, 468
mha_test_struct_size	proc_cnt, 469
PluginLoader::mhapluginloader_t, 846	process, 468
mha tic	prof_algos, 469
mha_profiling.c, 972	prof_cfg, 469
mha tictoc t, 461	prof init, 469
t, 461	prof_load_con, 469
tv1, 461	prof_prepare, 469
tv2, 461	prof_process, 469
tz, 461	prof_process_load, 469
mha_toc	prof_process_tt, 469
mha_profiling.c, 972	prof_release, 469
mha_toolbox.h, 990	• —
IIIIa_iooibox.ii, <del>330</del>	prof_tt_con, 469

profiling, 469	remove_lock, 1012
release, 468	mhaplug_cfg_t, 684
tictoc, 469	~mhaplug_cfg_t, 684
update_proc_load, 468	mhaplug_cfg_t, 684
mhachain_t	mhapluginloader.cpp, 1012
mhachain::mhachain_t, 466	mhapluginloader.h, 1012
mhachannels	mhapluginloader_t
addsndfile::addsndfile_if_t, 175	MHAParser::mhapluginloader_t, 648
mhaconfig_compare	PluginLoader::mhapluginloader_t, 844
mha_generic_chain.cpp, 959	mhaserver_t, 722
PluginLoader, 124	~mhaserver_t, 724
mhaconfig_in	acceptor started, 724
MHAPlugin::plugin_t, 694	ack_fail, 725
mhaconfig_mon_t	ack_ok, 725
MHAParser::mhaconfig_mon_t, 646	announce_port, 725
mhaconfig_out	logfile, 725
MHAPlugin::plugin_t, 694	logstring, 724
mhaconfig_t, 470	mhaserver_t, 723
channels, 471	pid_mon, 725
domain, 471	port, 725
fftlen, 471	received_group, 724
fragsize, 471	run, <b>724</b>
srate, 471	set_announce_port, 724
wndlen, 471	tcpserver, 725
mhafft	mhasndfile.cpp, 1013
hilbert_shifter_t, 332	validator_channels, 1013
mhafw_lib.cpp, 991	validator_length, 1013
mhafw_lib.h, 991	write_wave, 1013
mhajack.cpp, 1009	mhasndfile.h, 1013
dummy_jack_proc_cb, 1009	write_wave, 1014
jack_error_handler, 1009	mhastrdomain
last_jack_err, 1009	PluginLoader, 124
last_jack_err_msg, 1009	min
make_friendly_number, 1009	MHASignal::doublebuffer_t, 733
mhajack.h, 1009	spec2wave.cpp, 1020
IO_ERROR_JACK, 1011	Vector and matrix processing toolbox, 58
IO_ERROR_MHAJACKLIB, 1011	minimum_fill_count
last_jack_err_msg, 1011	mha_drifter_fifo_t, 411
MAX USER ERR, 1011	minlen
MHAJACK_FW_STARTED, 1011	plingploing::if_t, 829
MHAJACK_STARTING, 1011	minlen_
MHAJACK STOPPED, 1011	plingploing::plingploing_t, 831
mhamain	minphase
mha.cpp, 940	MHAFilter::smoothspec_t, 534
mhamain.cpp, 1012	minphase_t
mhamain.cpp, 1011	MHASignal::minphase_t, 753
create_lock, 1012	minw_
GREETING_TEXT, 1012	wavwriter_t, 912
HELP_TEXT, 1012	minwrite
MAX_LINE_LENGTH, 1012	wavrec_t, 911
mhamain, 1012	mix

sine_cfg_t, 873	MHAFilter::adapt_filter_t, 483
mixer	mu_beta
matrixmixer::matmix_t, 380	adm_if_t, 190
mixw_ref	multibandcompressor, 123
hilbert_shifter_t, 332	multibandcompressor.cpp, 1014
mixw shift	multibandcompressor::fftfb_plug_t, 807
hilbert_shifter_t, 332	bwv, 808
mode	cfv, 808
ac2osc_t, 139	efv, 808
addsndfile::addsndfile_if_t, 175	fftfb_plug_t, 808
MHA TCP::OS EVENT TYPE, 446	insert, 808
noise_t, 816	multibandcompressor::interface_t, 809
sine_t, 875	algo, 810
smoothgains_bridge::overlapadd_if_←	burn, 810
t, 877	interface_t, 810
modified	num channels, 810
dc::dc_vars_t, 245	patchbay, 810
dc_simple::dc_if_t, 251	plug, 811
modulename	plug_sigs, 811
dynamiclib_t, 278	prepare, 810
MHAParser::c_ifc_parser_t, 615	process, 810
	release, 810
mon	update_cfg, 810
acmon::ac_monitor_t, 149	multibandcompressor::plugin_signals_t, 811
mon_complex	apply_gains, 811
acmon::ac_monitor_t, 149	gain, 812
mon_dump	plug_level, 812
MHAParser, 107	plug_output, 812
mon_g	plugin_signals_t, 811
dc_simple::dc_if_t, 251	update_levels, 811
dc_simple::dc_t, 253	mute
mon_l	MHAJack::port_t, 567
dc_simple::dc_if_t, 251	MHASignal::loop_wavefragment_t, 741
dc_simple::dc_t, 253	mutex
mon_mat	MHAPlugin_Split::posix_threads_t, 707
acmon::ac_monitor_t, 149	mha_fifo_posix_threads_t, 420
mon_mat_complex	mylogf
acmon::ac_monitor_t, 149	dc_afterburn.cpp, 927
mon_t, 806	ao_ano.sa.mopp, o=/
mon_t, 806	N
store, 806	lpc_config, 377
monitor variable, 4	n
monitor_t	MHAJack::client_avg_t, 556
MHAParser::monitor_t, 650	MHASignal::hilbert_fftw_t, 738
mpo	MHASignal::stat_t, 768
DynComp::dc_afterburn_vars_t, 284	N_ERRNO
mpo_inv	MHA_TCP, 89
DynComp::dc_afterburn_rt_t, 280	n_channels
msg	mha_audio_descriptor_t, 397
MHA_Error, 415	n_freqs
mu	mha_audio_descriptor_t, 397
MHAFilter::adapt_filter_param_t, 480	n_im
	_

MHASignal::fft_t, 737	name_b
n_no_update	lpc_bl_predictor, 369
nlms_t, 814	lpc_bl_predictor_config, 371
prediction_error, 851	lpc burglattice, 373
n_no_update_	lpc_burglattice_config, 375
prediction_error_config, 853	name_conAC
rt_nlms_t, 862	acConcat_wave, 146
n_pad1	name_d
overlapadd::overlapadd_t, 825	nlms_t, 814
n_pad2	name_d_
overlapadd::overlapadd_t, 825	prediction_error_config, 853
n_re	rt_nlms_t, 862
MHASignal::fft_t, 737	name_e
n_samples	nlms_t, 814
mha_audio_descriptor_t, 397	prediction_error, 850
n_zero	name_e_
overlapadd::overlapadd_t, 825	rt_nlms_t, 862
NORM DEFAULT	name f
nlms_wave.cpp, 1015	lpc_bl_predictor, 369
NORM NONE	lpc_bl_predictor_config, 370
nlms_wave.cpp, 1015	lpc_burglattice, 373
NORM SUM	lpc_burglattice_config, 375
nlms_wave.cpp, 1015	nlms_t, 814
NORMALIZATION TYPES	prediction_error, 850
nlms_wave.cpp, 1015	name_kappa
NUM ENTR LTASS	lpc_bl_predictor, 369
speechnoise.cpp, 1021	lpc_birglattice, 373
NUM_ENTR_MHAORIG	name_km
speechnoise.cpp, 1021	lpc_bl_predictor_config, 370
NUM_ENTR_OLNOISE	name_lpc
speechnoise.cpp, 1021	prediction_error, 850
	name_lpc_
name ac2wave_if_t, 141	prediction_error_config, 853
ac2wave_t, 143	name_lpc_b
acmon::ac_monitor_t, 149	lpc_bl_predictor, 369
acsave::save_var_t, 164	name_lpc_f
fftfbpow::fftfbpow_interface_t, 311	lpc_bl_predictor, 369
MHA_AC::ac2matrix_helper_t, 382	. — —
MHA_AC::spectrum_t, 393	name_u
MHA_AC.:spectrum_t, 393	nlms_t, 814
<u> </u>	name_u_ rt nlms t, 862
MHAIOPortAudio::device_info_t, 550	namelen
MHAJack::client_avg_t, 556	
MHAJack::client_noncont_t, 559	acsave::mat4head_t, 162
MHAMultiSrc::channel_t, 574	names
MHAParser::entry_t, 621	MHAOvlFilter::scale_var_t, 598
noisePowProposedScale::interface_t, 818	nangle
plugindescription_t, 837	acSteer_config, 168
rmslevel_if_t, 855	steerbf_config, 892
shadowfilter_end::cfg_t, 870	naudiochannels
name_	dc::dc_t, 243
AuditoryProfile::parser_t::fmap_t, 211	nbands

coherence::cohflt_t, 226	needs_write
combc_t, 231	MHA_TCP::Connection, 442
dc::dc_t, 243	neigh
dc_simple::dc_t, 253	acPooling_wave_config, 157
dc_simple::level_smoother_t, 258	neighbourhood
DynComp::gaintable_t, 288	acPooling_wave, 155
fftfilterbank::fftfb_interface_t, 316	nelements
MHAFilter::thirdoctave_analyzer_t, 535	MHASignal::matrix_t, 752
MHAOvIFilter::fspacing_t, 591	nested_lock
nbits	MHAParser::base_t, 607
calibrator_variables_t, 220	newgains
nch	fader_if_t, 305
shadowfilter_begin::cfg_t, 867	next
shadowfilter_begin::shadowfilter_begin↔	MHAPlugin::cfg_chain_t, 685
_t, 869	mha_rt_fifo_element_t, 429
spec_fader_t, 887	next_except_str
nch_out	mha_errno.c, 950
shadowfilter_end::cfg_t, 870	next_read_frame_index
nchan	MHASignal::ringbuffer_t, 758
acSteer_config, 168	next_write_frame_index
steerbf_config, 892	MHASignal::ringbuffer_t, 759
timoConfig, 898	nfft
nchannels	MHASignal::fft_t, 737
DynComp::gaintable_t, 288	overlapadd::overlapadd_if_t, 822
fftfilterbank::fftfb_interface_t, 316	shadowfilter_end::cfg_t, 870
MHAFilter::adapt_filter_state_t, 481	spec2wave_t, 886
MHAFilter::adapt_filter_t, 483	wave2spec_if_t, 906
MHAFilter::iir_filter_t, 508	nfft_
MHAFilter::smoothspec_t, 534	MHAOvlFilter::fspacing_t, 591
MHAFilter::thirdoctave_analyzer_t, 535	nframes
nchannels_file_in	acsave::save_var_t, 164
io_file_t, 338	nfreq
nchannels_in	acSteer_config, 168
io_file_t, 338	steerbf_config, 892
io parser t, 345	timoConfig, 898
MHAFilter::partitioned_convolution_t, 522	nlms_t, 812
MHAIOPortAudio::io_portaudio_t, 553	algo, 814
MHAJack::client t, 564	c, 814
MHAPlugin_Resampling::resampling_t,	estimtype, 814
698	lambda_smoothing_power, 814
nchannels_out	n_no_update, 814
fw_t, 324	name d, 814
io_file_t, 338	name_e, 814
io_parser_t, 345	name f, 814
MHAFilter::partitioned_convolution_t, 522	name_u, <mark>814</mark>
MHAIOPortAudio::io_portaudio_t, 553	nlms_t, 813
MHAJack::client_t, 564	normtype, 814
MHAPlugin_Resampling::resampling_t,	ntaps, 814
698	patchbay, 814
ndim	prepare, 813
acsave::save_var_t, 164	process, 814

release, 813	update_cfg, 818
rho, 814	xiOptDb, 818
update, 814	noisePowProposedScale::noisePowProposed
nlms_wave.cpp, 1014	819
ESTIM_CUR, 1015	alphaPH1mean_, 820
ESTIM_PREV, 1015	alphaPSD_, 820
ESTIMATION_TYPES, 1015	estimateDebug, 820
make_friendly_number_by_limiting, 1015	frameno, 820
NORM_DEFAULT, 1015	GLRDebug, 820
NORM_NONE, 1015	GLRexp, 820
NORM_SUM, 1015	inputPow, 820
NORMALIZATION_TYPES, 1015	inputSpec, 820
nm	insert, 819
lpc_burglattice_config, 375	logGLRFact, 820
no_iter	noisePow, 820
prediction_error_config, 853	noisePowProposed, 819
rt_nlms_t, 862	noisyPer, 820
noise.cpp, 1015	PH1Debug, 820
noise_t, 815	PH1mean, 820
frozennoise_length, 816	priorFact, 820
lev, 816	process, 819
mode, 816	snrPost1Debug, 820
noise_t, 816	xiOpt, 820
patchbay, 816	noisyPer
prepare, 816	noisePowProposedScale::noisePow←
process, 816	Proposed, 820
update_cfg, 816	non_empty_partitions
noise_type_t	MHAFilter::transfer_function_t, 537
speechnoise_t, 888	MHAFilter::transfer_matrix_t, 539
noisePow	nondefault labels
noisePowProposedScale::noisePow⇔	altplugs_t, 202
Proposed, 820	norm
timoConfig, 899	lpc, 366
noisePow_name	lpc_config, 376
timo_params, 896	normalize
timoSmooth, 903	Complex arithmetics in the openMHA, 68
noisePowProposed	MHAOvlFilter::fftfb_vars_t, 586
noisePowProposedScale::noisePow⇔	normtype
Proposed, 819	nlms_t, 814
noisePowProposedScale, 123	not in use
noisePowProposedScale.cpp, 1015	MHAPlugin::cfg_chain_t, 685
POWSPEC_FACTOR, 1016	not_zero
noisePowProposedScale::interface_t, 817	dc_simple, 82
alphaPH1mean, 818	notify
alphaPSD, 818	MHAParser::base_t, 606
interface_t, 818	notify_release
name, 818	io_tcp_t, 362
patchbay, 818	notify_start
prepare, 818	io_tcp_t, 362
process, 818	notify_stop
q, 818	io_tcp_t, 362
12	<u> </u>

now_index	DynComp::gaintable_t, 288
MHAFilter::polyphase_resampling_t, 529	num_frames
npad1	mha_spec_t, 433
spec2wave_t, 885	mha_wave_t, 463
wave2spec_t, 908	num_inchannels
npad2	io_tcp_sound_t, 358
spec2wave_t, 886	num_L
wave2spec_t, 908	DynComp::gaintable_t, 288
nrefmic	num outchannels
acSteer, 167	io_tcp_sound_t, 359
acSteer_config, 168	num_xruns
nrep	MHAJack::client_t, 564
MHAJack::client_avg_t, 556	numDevices
nsteerchan	MHAIOPortAudio::device_info_t, 550
acSteer, 167	numSamples_AC
acSteer_config, 168	acConcat_wave_config, 147
	numbytes
ntaps MHAFilter::adapt_filter_state_t, 481	MHASignal::matrix t, 751
	MHASignal::uint_vector_t, 773
MHAFilter::adapt_filter_t, 483	numchannels
nlms_t, 814	addsndfile::addsndfile_if_t, 175
prediction_error, 850	numsamples
prediction_error_config, 852	acPooling_wave, 155
rt_nlms_t, 861	acTransform_wave, 171
ntoh	nupsample
io_tcp_sound_t, 357	doasym_feature_extraction, 271
ntracks	nvars
shadowfilter_begin::cfg_t, 867	acsave::cfg_t, 162
shadowfilter_begin::shadowfilter_begin ←	nwnd
_t, 869	overlapadd::overlapadd_if_t, 822
shadowfilter_end::cfg_t, 870	wave2spec_if_t, 906
null_data	wave2spec_t, 908
mha_drifter_fifo_t, 412	nwndshift
num_AC	spec2wave_t, 886
acConcat_wave, 146	wave2spec_t, 908
num_adms	nyquist_ratio
adm_rtconfig_t, 192	MHAPlugin_Resampling::resampling_if↔
num_brackets	_t, 696
MHAParser::StrCnv, 109	, 000
num_channels	o1_ar_filter_t
calibrator_variables_t, 220	MHAFilter::o1 ar filter t, 512
DynComp::gaintable_t, 288	o1_lp_coeffs
MHAFilter::blockprocessing_polyphase←	MHAFilter, 92
_resampling_t, 485	o1flt_lowpass_t
mha_spec_t, 433	MHAFilter::o1flt_lowpass_t, 516
mha_wave_t, 463	o1flt maxtrack t
multibandcompressor::interface_t, 810	MHAFilter::01flt_maxtrack_t, 518
num_entries	o1flt_mintrack_t
ac2lsl::save_var_t< mha_complex_t >,	MHAFilter::o1flt_mintrack_t, 520
135	OVERLAP_FACTOR
comm_var_t, 232	timoconfig.cpp, 1026
num F	observe
<del>-</del>	

MHA_TCP::Event_Watcher, 445	MHAParser::string_t, 662
observed_by	MHAParser::variable_t, 664
MHA_TCP::Wakeup_Event, 460	MHAParser::vcomplex_t, 668
observers	MHAParser::vfloat_t, 672
MHA_TCP::Wakeup_Event, 461	MHAParser::vint_t, 676
od	MHAParser::vstring_t, 680
MHAFilter::adapt_filter_state_t, 481	op_subparse
offset	MHAParser::base_t, 603
acTransform_wave_config, 172	MHAParser::c_ifc_parser_t, 614
ola1	MHAParser::parser_t, 654
overlapadd::overlapadd_t, 824	opact_map_t
ola2	MHAParser, 107
overlapadd::overlapadd_t, 824	opact_t
ola_powspec_scale	MHAParser, 107
timoConfig, 898	operator!=
old_algos	Complex arithmetics in the openMHA, 67
mhachain::chain_base_t, 465	operator<
olnoise	Complex arithmetics in the openMHA, 68
speechnoise_t, 888	operator<<
on_model_param_valuechanged	mha_signal.hh, 985
timoSmooth, 902	operator>>
on_prereadaccess	mha_signal.hh, 985
example3_t, 296	
example3_t, 290 example4_t, 300	operator*
• —	Complex arithmetics in the openMHA, 65, 66
on_scale_ch_readaccess	
example3_t, 296	operator*=
example4_t, 300	Complex arithmetics in the openMHA, 65
on_scale_ch_valuechanged	Vector and matrix processing toolbox, 53,
example3_t, 296	54
example4_t, 300	operator^=
on_scale_ch_writeaccess	Vector and matrix processing toolbox, 55
example3_t, 296	operator()
example4_t, 300	dc_simple::dc_t::line_t, 254
op	hanning_ramps_t, 330
MHAParser::expression_t, 622	MHAEvents::emitter_t, 477
op_query	MHAFilter::gamma_flt_t, 502, 503
MHAParser::base_t, 603	MHAFilter::iir_ord1_real_t, 510
MHAParser::c_ifc_parser_t, 614	MHAFilter::o1_ar_filter_t, 513, 514
MHAParser::monitor_t, 650	MHASignal::hilbert_t, 739
MHAParser::parser_t, 654	MHASignal::matrix_t, 749-751
op_setval	MHASignal::minphase_t, 753
MHAParser::base_t, 603	MHASignal::quantizer_t, 755
MHAParser::bool_t, 612	MHASignal::spectrum_t, 765
MHAParser::c_ifc_parser_t, 614	MHASignal::waveform_t, 777, 778
MHAParser::complex_t, 620	MHAWindow::base_t, 798
MHAParser::float_t, 626	operator+
MHAParser::int_t, 631	Complex arithmetics in the openMHA, 64
MHAParser::kw_t, 636	operator+=
MHAParser::mcomplex_t, 640	Complex arithmetics in the openMHA, 64
MHAParser::mfloat_t, 644	Vector and matrix processing toolbox, 53,
MHAParser::parser_t, 654	54

operator-	out_chunk_im
Complex arithmetics in the openMHA, 64,	MHAFilter::thirdoctave_analyzer_t, 536
65, 67	out spec
operator-=	shadowfilter_begin::cfg_t, 867
Complex arithmetics in the openMHA, 64	shadowfilter_end::cfg_t, 870
Vector and matrix processing toolbox, 53	outSpec
operator/	steerbf_config, 892
Complex arithmetics in the openMHA, 66,	outbuf
67	MHA_TCP::Connection, 443
operator/=	outch
Complex arithmetics in the openMHA, 66	MHAJack::client_t, 565
Vector and matrix processing toolbox, 54	outchannels
•	
operator=	combc_if_t, 230
MHA_AC::acspace2matrix_t, 386	outer2inner_resampling
MHA_Error, 414	MHAPlugin_Resampling::resampling_t,
MHAPlugin_Split::domain_handler_t, 700	698
MHAPlugin_Split::splitted_part_t, 716	outer_ac
MHAPlugin_Split::thread_platform_t, 720	analysepath_t, 204
MHASignal::matrix_t, 747	outer_ac_copy
MHASignal::uint_vector_t, 772	analysepath_t, 204
MHASignal::waveform_t, 777	outer_error
mha_fifo_t, 423	mha_dblbuf_t, 406
mha_fifo_thread_platform_t, 428	outer_fragsize
operator==	MHAPlugin_Resampling::resampling_t,
Complex arithmetics in the openMHA, 67	697
MHASignal::uint_vector_t, 772	outer_out
operator[]	MHASignal::doublebuffer_t, 734
MHA_AC::acspace2matrix_t, 386	outer_process
MHASignal::spectrum_t, 765	MHASignal::doublebuffer_t, 733
MHASignal::uint_vector_t, 773	outer_size
MHASignal::waveform_t, 777	mha_dblbuf_t, 405
operators	outer_srate
MHAParser::base_t, 607	MHAPlugin_Resampling::resampling_t,
oplist	698
MHAParser::base_t, 606	output
order	io_parser_t, 345
lpc_config, 376	MHAJack::port_t, 566
origname	mha dblbuf t, 404
PluginLoader::config_file_splitter_t, 839	output_cfg
os_event	MHAPlugin::plugin_t, 694
MHA_TCP::Wakeup_Event, 461	output_cfg_
os_event_valid	MHAPlugin::plugin_t, 694
MHA_TCP::Wakeup_Event, 461	output_channels
out	mha_dblbuf_t, 405
adm_if_t, 190	output_domain
delaysum::delaysum_t, 264	PluginLoader::mhapluginloader_t, 845
out_buf	output_fifo
overlapadd::overlapadd_t, 825	mha_dblbuf_t, 405
spec2wave_t, 886	output_partitions
out_chunk	MHAFilter::partitioned_convolution_t, 522
MHAFilter::thirdoctave_analyzer_t, 536	output_portnames

MHAJack::client_t, 565	postwnd, 824
output_sample_format	prewnd, 824
io_file_t, 338	spec_in, 825
output_signal	wave_in1, 824
MHAPlugin_Resampling::resampling_t,	wave_out1, 825
698	write_buf, 825
output_signal_spec	overlapadd_if_t
MHAFilter::partitioned_convolution_t, 523	overlapadd::overlapadd_if_t, 822
output_signal_wave	smoothgains_bridge::overlapadd_if_←
. – • –	t, 876
MHAFilter::partitioned_convolution_t, 523	overlapadd_t
outputchannels	overlapadd::overlapadd_t, 824
MHAFilter::fftfilterbank_t, 496	ovltype
overlap_save_filterbank_analytic_t	MHAOvIFilter::fftfb_vars_t, 585
MHAOvlFilter::overlap_save_filterbank_	— — ·
analytic_t, 593	MUAFilter: edept filter etate t 491
overlap_save_filterbank_t	MHAFilter::adapt_filter_state_t, 481
MHAOvlFilter::overlap_save_filterbank_t,	р
595	acPooling wave config, 157
overlapadd, 123	doasym_classification_config, 268
overlapadd.cpp, 1016	pluginbrowser_t, 836
overlapadd::overlapadd_if_t, 821	p1
$\sim$ overlapadd_if_t, 822	MHASignal::hilbert_fftw_t, 738
algo, <mark>823</mark>	p2
cf_in, 823	MHASignal::hilbert_fftw_t, 738
cf_out, 823	P Sum
nfft, 822	rt_nlms_t, 862
nwnd, 822	— — ·
overlapadd_if_t, 822	p_max acPooling_wave_config, 157
patchbay, 822	doasym_classification_config, 268
plugloader, 823	<u> </u>
postscale, 823	p_name
prepare, 822	acPooling_wave, 155
prescale, 823	doasym_classification, 267
process, 822	p_parser
release, 822	acmon::ac_monitor_t, 150
update, 822	PATCH_VAR
window, 823	acConcat_wave.cpp, 917
wndexp, 823	acPooling_wave.cpp, 918
wndpos, 823	acSteer.cpp, 919
zerowindow, 823	acTransform_wave.cpp, 920
	doasvm_classification.cpp, 929
overlapadd::overlapadd_t, 823	doasvm_feature_extraction.cpp, 930
~overlapadd_t, 824	lpc.cpp, 938
calc_out, 825	lpc_bl_predictor.cpp, 938
fft, 824	lpc_burg-lattice.cpp, 939
n_pad1, 825	prediction_error.cpp, 1017
n_pad2, 825	steerbf.cpp, 1025
n_zero, 825	timoSmooth.cpp, 1026
ola1, 824	PH1Debug
ola2, <mark>824</mark>	noisePowProposedScale::noisePow←
out_buf, 825	Proposed, 820
overlapadd_t, 824	PH1mean

noisePowProposedScale::noisePow↔	ac2lsl::ac2lsl_t, 128
Proposed, 820	ac2osc_t, 139
POWSPEC_FACTOR	ac2wave_if_t, 141
noisePowProposedScale.cpp, 1016	acConcat_wave, 146
timoconfig.cpp, 1026	acPooling_wave, 155
PREPARED	acSteer, 167
MHA_TCP::Thread, 454	acTransform_wave, 171
pa22dbspl	acmon::acmon_t, 152
Vector and matrix processing toolbox, 43	acsave::acsave_t, 160
pa2dbspl	addsndfile::addsndfile_if_t, 175
Vector and matrix processing toolbox, 42	adm_if_t, 190
params	altplugs_t, 202
timoConfig, 898	analysispath_if_t, 206
parent	AuditoryProfile::parser_t::fmap_t, 211
MHAParser::base_t, 607	calibrator_t, 219
parent_	coherence::cohflt_if_t, 224
MHAParser::mhapluginloader_t, 649	db_if_t, 237
parse	dc::dc_if_t, 240
altplugs_t, 201	dc::wideband_inhib_vars_t, 249
io_tcp_t, 362	dc_simple::dc_if_t, 251
MHAParser::base_t, 602, 603	delay::interface_t, 260
MHAPlugin_Split::splitted_part_t, 716	delaysum::delaysum_if_t, 263
PluginLoader::fourway_processor_t, 842	doasvm_classification, 267
PluginLoader::mhapluginloader_t, 844	doasvm_feature_extraction, 271
parse_1_complex	DynComp::dc_afterburn_t, 282
mha_parser.cpp, 965	example3_t, 297
parse_1_float	example4_t, 301
mha_parser.cpp, 965	example6_t, 303
parser	fader_if_t, 305
io_tcp_t, 362	fader_wave::fader_wave_if_t, 307
mhachain::plugs_t, 468	fftfbpow::fftfbpow_interface_t, 311
parser_int_dyn, 826	fftfilterbank::fftfb_interface_t, 316
parser_int_dyn, 826	frequency_translator_t, 319
set_max_angle_ind, 827	fw_t, 325
parser_plugs	gain::gain_if_t, 328
altplugs_t, 202	io_parser_t, 345
parser_t	lpc, 366
AuditoryProfile::parser_t, 209	lpc_bl_predictor, 369
MHAParser::parser_t, 653	lpc_burglattice, 373
parserFriendlyName	MHAIOJack::io_jack_t, 543
MHAIOPortAudio, 95	MHAIOJackdb::io_jack_t, 548
parsername	MHAIOPortAudio::io_portaudio_t, 553
latex_doc_t, 363	MHAPlugin_Split::split_t, 712
parserstate	matrixmixer::matmix_t, 380
fw_t, 324	mhachain::chain_base_t, 465
partitioned_convolution_t	multibandcompressor::interface_t, 810
MHAFilter::partitioned_convolution_t, 521	nlms_t, 814
partitions	noise_t, 816
MHAFilter::transfer_function_t, 537	noisePowProposedScale::interface_t, 818
MHAFilter::transfer_matrix_t, 539	overlapadd::overlapadd_if_t, 822
patchbay	plingploing::if_t, 829

plugin_interface_t, 835	hilbert_shifter_t, 332
prediction_error, 851	PI
route::interface_t, 858	ADM, 80
sine_t, 875	hann.cpp, 936
smoothgains_bridge::overlapadd_if_ \in _	pid_mon
t, 877	mhaserver_t, 725
softclip_t, 880	pinchannels
spec2wave_if_t, 884	fw_vars_t, 326
steerbf, 891	pink
timoSmooth, 903	speechnoise_t, 888
wave2spec_if_t, 906	pipe
wavrec_t, 911	MHA_TCP::Async_Notify, 435
windowselector_t, 915	pitch
path	plingploing::if_t, 829
addsndfile::addsndfile_if_t, 175	pitch
peak	plingploing::plingploing_t, 831
MHASignal::loop_wavefragment_t, 741	pitch_set_first
rmslevel t, 856	timoConfig, 899
peak_db	pitch_set_first_AC
rmslevel_t, 856	timo_AC, 894
peaklevel	pitch_set_last
calibrator_variables_t, 220	timoConfig, 899
MHASignal::async_rmslevel_t, 727	pitch_set_last_AC
mha_channel_info_t, 399	timo_AC, 894
peer_addr	plan_spec2analytic
MHA_TCP::Connection, 443	hilbert_shifter_t, 332
peer_address	plateau
io_tcp_parser_t, 354	MHAOvlFilter::fftfb_vars_t, 585
peer_port	playback
io_tcp_parser_t, 355	MHASignal::loop_wavefragment_t, 742
period	743
droptect_t, 275	playback_channels
pfragmentsize	MHASignal::loop_wavefragment_t, 743
fw vars t, 326	playback_mode_t
phase	MHASignal::loop_wavefragment_t, 741
cpuload t, 235	plingploing, 123
MHASignal::minphase_t, 754	drand, 124
phase correction	plingploing.cpp, 1016
MHAFilter::gamma_flt_t, 503	plingploing::if_t, 827
phase div 2pi	bassmod, 829
sine_t, 875	bassperiod, 830
phase_gains	bpm, 829
MHASignal::subsample_delay_t, 770	fun1_key, 829
phase_increment_div_2pi	fun1_range, 829
sine_cfg_t, 873	fun2_key, 829
phasemode	fun2_range, 829
frequency_translator_t, 319	if_t, 828
phasemodel	level, 829
MHAOvlFilter::overlap_save_filterbank_	maxlen, 829
t::vars_t, 596	minlen, 829
phi	patchbay, 829
1	L

pitch, 829	get_process_spec, 833
prepare, 828	get_process_wave, 833
process, 828	plug_t, 833
update, 828	plugin_categories
plingploing::plingploing_t, 830	PluginLoader::mhapluginloader_t, 847
alph, 832	plugin_documentation
bass, 831	PluginLoader::mhapluginloader_t, 847
bassmod , 832	plugin_extension
bassperiod_, 832	pluginbrowser_t, 836
bt, 831	plugin_interface_t, 834
cf, 831	factor, 835
dist, 832	patchbay, 835
dist1, 832	plugin_interface_t, 835
dur_, 831	prepare, 835
freq, 831	process, 835
fun1, 832	scale ch, 835
fun1_key, 832	update_cfg, 835
fun1_range, 832	plugin_macro
fun2, 832	latex doc t, 364
fun2_key, 832	plugin_paths
fun2_range, 832	fw t, 324
hann1, 832	plugin_signals_t
hann2, 832	multibandcompressor::plugin_signals_t,
len, 831	811
level, 832	plugin_t
maxlen_, 831	MHAPlugin::plugin_t, 692
minlen_, 831	PluginLoader, 124
pitch_, 831	mhaconfig_compare, 124
•	mhastrdomain, 124
plingploing_t, 831	PluginLoader::config_file_splitter_t, 838
process, 831	<u> </u>
rms, 832	config_file_splitter_t, 838
t, 831	configfile, 839
plingploing_t	configname, 839
plingploing::plingploing_t, 831	get_configfile, 839
plug	get_configname, 838
analysispath_if_t, 206	get_libname, 839
MHAParser::mhapluginloader_t, 649	get_origname, 839
MHAPlugin_Split::splitted_part_t, 717	libname, 839
multibandcompressor::interface_t, 811	origname, 839
plug_level	PluginLoader::fourway_processor_t, 839
multibandcompressor::plugin_signals_t,	~fourway_processor_t, 840
812	parse, 842
plug_output	prepare, 842
multibandcompressor::plugin_signals_t,	process, 840, 841
812	release, 842
plug_sigs	PluginLoader::mhapluginloader_t, 842
multibandcompressor::interface_t, 811	$\sim$ mhapluginloader_t, 844
plug_t, 832	ac, 846
∼plug_t, 833	b_check_version, 847
get_ac, 833	b_is_prepared, 847
get_handle, 833	cf_input, 847

cf_output, 847	documentation, 837
get_categories, 846	fullname, 837
get_documentation, 846	name, 837
getfullname, 845	queries, 837
has_parser, 845	query cmds, 837
has_process, 845	spec2spec, 837
input_domain, 845	spec2wave, 837
is_prepared, 846	wave2spec, 837
lib_data, 846	wave2wave, 837
lib_err, 846	pluginloader_t, 847
lib_handle, 846	~pluginloader_t, 848
MHADestroy_cb, 846	pluginloader_t, 848
MHAGetVersion_cb, 846	plugins
MHAInit_cb, 846	fw_t, 324
MHAPrepare_cb, 846	pluginbrowser_t, 836
MHAProc spec2spec cb, 846	plugloader
MHAProc_spec2wave_cb, 847	bbcalib_interface_t, 215
MHAProc_wave2spec_cb, 846	db_if_t, 237
MHAProc_wave2wave_cb, 846	db_ii_t, 237 db_t, 238
MHARelease_cb, 846	<u> </u>
MHASet_cb, 847	MHAPlugin_Resampling::resampling_if← _t, 696
MHAStrError_cb, 847	_t, 090 MHAPlugin_Resampling::resampling_t,
mha_test_struct_size, 846	698
mhapluginloader_t, 844	overlapadd::overlapadd_if_t, 823
output_domain, 845	smoothgains_bridge::overlapadd_if_←
parse, 844	t, 877
plugin_categories, 847	plugname
plugin_documentation, 847	latex_doc_t, 364
prepare, 845	MHAParser::mhapluginloader_t, 649
process, 845	plugname_name_
release, 845	MHAParser::mhapluginloader_t, 649
resolve_and_init, 846	plugs
test_error, 846	altplugs_t, 202
test_version, 846	plugs_t
pluginbrowser.cpp, 1017	mhachain::plugs_t, 468
pluginbrowser.h, 1017	pmode
pluginbrowser_t, 835	calibrator_runtime_layer_t, 217
add_plugin, 836	poll
add_plugins, 836	mha_rt_fifo_t, 431
clear_plugins, 836	poll_1
get_paths, 836	mha_rt_fifo_t, 431
get_plugins, 836	poll_config
library_paths, 836	MHAPlugin::config_t, 688
p, 836	polyphase_resampling_t
plugin_extension, 836	MHAFilter::polyphase_resampling_t, 527
pluginbrowser_t, 836	pool
plugins, 836	acPooling_wave_config, 157
scan_plugin, 836	pool_name
scan_plugins, 836	acPooling_wave, 155
plugindescription_t, 837	pooling_ind
categories, 837	acPooling_wave_config, 157
-	<u> </u>

pooling_option	MHASignal::loop_wavefragment_t, 743
acPooling_wave_config, 157	posix_threads_t
pooling_size	MHAPlugin_Split::posix_threads_t, 706
acPooling_wave_config, 157	posixthreads
pooling_type	split.cpp, 1024
acPooling_wave, 155	postscale
pooling_wndlen	overlapadd::overlapadd_if_t, 823
acPooling wave, 155	postwindow
port	spec2wave_t, 886
ac2osc_t, 138	postwnd
MHA_TCP::Server, 449	overlapadd::overlapadd_t, 824
MHAJack::port_t, 568	powSpec
mhaserver_t, 725	timoConfig, 899
port_t	power
MHAJack::port_t, 566, 567	MHASignal::waveform_t, 782
portaudio_callback	powersum
MHAIOPortAudio.cpp, 1004, 1005	dc::dc_t, 242
MHAIOPortAudio::io_portaudio_t, 553	dc::dc vars t, 244
portaudio_stream	powspec
MHAIOPortAudio::io_portaudio_t, 553	MHASignal::waveform_t, 783
portnames_in	pred_err_delay
MHAIOJack::io_jack_t, 543	prediction_error, 851
MHAIOJackdb::io_jack_t, 547	prediction_error, 848
portnames_out	~prediction_error, 849
MHAIOJack::io_jack_t, 543	c, 850
MHAIOJackdb::io_jack_t, 547	delay_d, 851
ports_in_all	delay_w, 851
MHAIOJack::io_jack_t, 543	gains, 850
MHAIOJackdb::io_jack_t, 548	lpc_order, 851
_•	• —
ports_in_physical	n_no_update, 851
MHAIOJack::io_jack_t, 543	name_e, 850 name_f, 850
MHAIOJackdb::io_jack_t, 548	
ports_out_all	name_lpc, 850
MHAIOJack::io_jack_t, 543	ntaps, 850
MHAIOJackdb::io_jack_t, 548	patchbay, 851
ports_out_physical	pred_err_delay, 851
MHAIOJack::io_jack_t, 543	prediction_error, 849
MHAIOJackdb::io_jack_t, 548	prepare, 850
ports_parser	process, 850
MHAIOJack::io_jack_t, 543	release, 850
MHAIOJackdb::io_jack_t, 548	rho, 850
pos	update_cfg, 850
addsndfile::level_adapt_t, 177	prediction_error.cpp, 1017
cfg_t, 222	INSERT_PATCH, 1017
fader_wave::level_adapt_t, 309	make_friendly_number_by_limiting, 1017
MHAJack::client_avg_t, 556	PATCH_VAR, 1017
MHAJack::client_noncont_t, 558	prediction_error.h, 1017
MHASignal::async_rmslevel_t, 727	prediction_error_config, 851
MHASignal::delay_spec_t, 728	~prediction_error_config, 852
MHASignal::delay_t, 730	ac, 852
MHASignal::delay_wave_t, 731	channels, 853

EPrew, 854	bbcalib_interface_t, 215
F, 853	calibrator_t, 218
F_Uflt, 853	coherence::cohflt_if_t, 224
frames, 852	combc_if_t, 230
insert, 852	cpuload_t, 234
iter, 853	db_if_t, 236
n_no_update_, 853	dc::dc_if_t, 240
name_d_, 853	dc_simple::dc_if_t, 250
name_lpc_, 853	delay::interface t, 260
no_iter, 853	delaysum::delaysum_if_t, 262
ntaps, 852	doasym classification, 266
prediction_error_config, 852	doasym_feature_extraction, 270
process, 852	droptect_t, 274
Pu, 853	ds_t, 277
s E pred err delay, 853	example1_t, 290
s_LPC, 853	example2_t, 293
s_U_delay, 853	example3 t, 296
— — ··	• = -
s_U_delayflt, 853	example4_t, 300
s_Usmpl, 854	example6_t, 303
s_Wflt, 853	fader_if_t, 305
s_Y_delay, 853	fader_wave::fader_wave_if_t, 307
s_Y_delayflt, 853	fftfbpow::fftfbpow_interface_t, 311
s_E, 853	fftfilterbank::fftfb_interface_t, 315
s_U, 853	frequency_translator_t, 319
s_W, 853	fw_t, 322
smpl, 854	gain::gain_if_t, 328
UPrew, 854	identity_t, 334
UPrewW, 854	io_file_t, 337
UbufferPrew, 853	io_lib_t, 341
v_G, 853	io_parser_t, 344
YPrew, 854	io_tcp_sound_t, 357
prefix	io_tcp_t, 361
wavrec_t, 911	lpc, 365
prefix_	lpc_bl_predictor, 368
MHAParser::mhapluginloader_t, 649	lpc_burglattice, 373
prefix_names_AC	MHAIOJack::io_jack_t, 541
acConcat_wave, 146	MHAIOJackdb::io_jack_t, 546
prepare	MHAJack::client_t, 561, 562
ac2lsl::ac2lsl_t, 127	MHAParser::mhapluginloader_t, 648
ac2osc_t, 137	MHAPlugin::plugin_t, 692
ac2wave_if_t, 141	MHAPlugin_Resampling::resampling_if←
acConcat_wave, 144	_t, 696
acPooling_wave, 154	MHAPlugin_Split::splitted_part_t, 716
acSteer, 166	MHATableLookup::linear_table_t, 789
acTransform_wave, 170	matrixmixer::matmix_t, 380
acmon::acmon_t, 151	mhachain::chain_base_t, 465
acsave::acsave_t, 159	mhachain::plugs_t, 468
addsndfile::addsndfile_if_t, 174	multibandcompressor::interface_t, 810
adm_if_t, 189	nlms_t, 813
altplugs_t, 200	noise_t, 816
analysispath_if_t, 206	noisePowProposedScale::interface_t, 818

overlapadd::overlapadd_if_t, 822	prewnd
plingploing::if_t, 828	overlapadd::overlapadd_t, 824
plugin_interface_t, 835	print_ac
PluginLoader::fourway_processor_t, 842	analysemhaplugin.cpp, 923
PluginLoader::mhapluginloader_t, 845	prior_q
prediction_error, 850	timo_params, 896
rmslevel_if_t, 855	timoSmooth, 903
route::interface_t, 858	priorFact
save_spec_t, 864	noisePowProposedScale::noisePow↔
save_wave_t, 866	Proposed, 820
shadowfilter_begin::shadowfilter_begin↔	timoConfig, 899
t, 869	priority
_t, 009 shadowfilter_end::shadowfilter_end_←	analysepath_t, 204
t, 872	analysispath_if_t, 206
	• •
sine_t, 874	MHAPlugin_Split::posix_threads_t, 708
smoothgains_bridge::overlapadd_if_←	proc
t, 876	MHAJack::client_avg_t, 556
softclip_t, 880	MHAJack::client_noncont_t, 558
spec2wave_if_t, 884	proc_1
steerbf, 890	smoothgains_bridge::smoothspec_←
timoSmooth, 902	wrap_t, 878
us_t, 904	proc_2
wave2spec_if_t, 906	smoothgains_bridge::smoothspec $_{\leftarrow}$
wavrec_t, 910	wrap_t, 878
prepare_	proc_cnt
iirfilter_t, 335	mhachain::plugs_t, 469
MHAPlugin::plugin_t, 693	proc_err
MHAPlugin_Split::split_t, 711	io_tcp_fwcb_t, 349
prepare_impl	proc_error
MHAJack::client_t, 563	fw_t, 325
prepare_vars	proc_error_string
fw_t, 324	fw_t, 325
prepared	proc_event
ac2wave_if_t, 141	io_file_t, 338
altplugs_t, 202	io_parser_t, 345
calibrator_t, 219	io_tcp_fwcb_t, 348
dc_simple::dc_if_t, 251	MHAIOJackdb::io_jack_t, 547
example3_t, 297	MHAIOPortAudio::io_portaudio_t, 553
example4_t, 301	MHAJack::client_t, 564
fader_wave::fader_wave_if_t, 307	proc_handle
fftfilterbank::fftfb interface t, 316	io_file_t, 338
mhachain::plugs t, 468	
. 0 = 1	io_parser_t, 345
route::interface_t, 858	io_tcp_fwcb_t, 348
timoSmooth, 903	MHAIOJackdb::io_jack_t, 547
prereadaccess	MHAIOPortAudio::io_portaudio_t, 553
MHAParser::base_t, 607	MHAJack::client_t, 564
prescale	proc_lib
overlapadd::overlapadd_if_t, 823	fw_t, 325
preset	proc_name
dc::dc_vars_t, 245	fw_t, 324
dc_simple::dc_if_t, 251	proc_ramp

altplugs_t, 201	example3_t, 297
proc_wave	example4_t, 300
doasym feature extraction config, 272	example5_t, 302
process	example6_t, 303
ADM::ADM, 182	fader if t, 305
ADM::Delay, 185	fader_wave::fader_wave_if_t, 307
ADM::Linearphase_FIR, 187	fftfbpow::fftfbpow_interface_t, 311
ac2lsl::ac2lsl_t, 127	fftfilterbank::fftfb_interface_t, 315
ac2lsl::cfg_t, 129	fftfilterbank::fftfb plug t, 317
ac2osc_t, 137, 138	frequency_translator_t, 319
ac2wave_if_t, 141	fw_t, 323
ac2wave_t, 142	gain::gain_if_t, 328
acConcat_wave, 144	hilbert_shifter_t, 332
acConcat_wave_config, 147	identity_t, 333, 334
acPooling_wave, 154	iirfilter t, 335
acPooling_wave_config, 156	io tcp fwcb t, 347
acSteer, 166	lpc, 365
acTransform_wave, 170	lpc_bl_predictor, 368
acTransform_wave_config, 172	lpc_bl_predictor_config, 370
acmon::acmon_t, 152	lpc_burglattice, 373
acsave::acsave_t, 159, 160	lpc_burglattice_config, 374
addsndfile::addsndfile_if_t, 174	lpc_config, 376
adm_if_t, 189	MHAFilter::partitioned_convolution_t, 522
altplugs_t, 201	MHAFilter::thirdoctave_analyzer_t, 535
analysispath_if_t, 206	MHAParser::mhapluginloader_t, 648, 649
bbcalib_interface_t, 215	MHAPlugin_Resampling::resampling_if
calibrator_runtime_layer_t, 216	_t, 696
calibrator_t, 218	MHAPlugin_Resampling::resampling_t,
cfg_t, 222	697
coherence::cohflt_if_t, 224	MHAPlugin_Split::domain_handler_t, 702
coherence::cohflt_t, 226	MHAPlugin_Split::split_t, 711
combc_if_t, 230	MHAPlugin_Split::uni_processor_t, 722
combc t, 231	MHASignal::async rmslevel t, 727
cpuload_t, 234	MHASignal::delay_spec_t, 728
db_if_t, 236	MHASignal::delay_t, 729
dc::dc_if_t, 240	MHASignal::delay_wave_t, 731
dc::dc_t, 242	MHASignal::subsample_delay_t, 770
dc_simple::dc_if_t, 250, 251	matrixmixer::cfg t, 378
dc_simple::dc_t, 253	matrixmixer::matmix_t, 380
dc_simple::level_smoother_t, 258	mha dblbuf t, 404
delay::interface_t, 260	mhachain::chain_base_t, 464, 465
delaysum::delaysum_if_t, 262	mhachain::plugs_t, 468
delaysum::delaysum_t, 264	multibandcompressor::interface_t, 810
doasym_classification, 266	nlms_t, 814
doasvm_classification_config, 268	noise_t, 816
doasym_feature_extraction, 270	noisePowProposedScale::interface_t, 818
doasym_feature_extraction_config, 272	noisePowProposedScale::noisePow↔
droptect_t, 274	Proposed, 819
ds_t, 277	overlapadd::overlapadd_if_t, 822
example1_t, 291	plingploing::if_t, 828
example2_t, 293	plingploing::plingploing_t, 831

plugin_interface_t, 835	mhachain::plugs_t, 469
PluginLoader::fourway_processor_t, 840,	prof_load_con
841	mhachain::plugs_t, 469
PluginLoader::mhapluginloader_t, 845	prof_prepare
prediction_error, 850	mhachain::plugs_t, 469
prediction_error_config, 852	prof_process
rmslevel_if_t, 855	mhachain::plugs_t, 469
rmslevel_t, 856	prof_process_load
	mhachain::plugs_t, 469
route::interface_t, 858	prof_process_tt
route::process_t, 859	mhachain::plugs_t, 469
rt_nlms_t, 861	• • —
save_spec_t, 864	prof_release
save_wave_t, 866	mhachain::plugs_t, 469
shadowfilter_begin::cfg_t, 867	prof_tt_con
shadowfilter_begin::shadowfilter_begin←	mhachain::plugs_t, 469
_t, 869	profiling
shadowfilter_end::cfg_t, 870	mhachain::plugs_t, 469
shadowfilter_end::shadowfilter_end_←	provoke_inner_error
t, 872	mha_dblbuf_t, 404
sine_t, 874	provoke_outer_error
smoothgains_bridge::overlapadd_if_ ~	mha_dblbuf_t, 404
t, 876	psrate
softclip_t, 880	fw_vars_t, 326
softclipper_t, 881	Pu
spec2wave_if_t, 884	prediction_error_config, 853
spec2wave_t, 885	rt_nlms_t, 861
steerbf, 890	push
steerbf_config, 892	MHASignal::stat_t, 768
timoConfig, 898	mha_rt_fifo_t, 431
timoSmooth, 901	push_config
•	MHAPlugin::config_t, 688
us_t, 904	put_signal
wave2spec_if_t, 906	MHAPlugin_Split::domain_handler_t, 701
wave2spec_t, 908	pwinner_out
wavrec_t, 910	MHAIOJackdb::io_jack_t, 548
wavwriter_t, 912	
process_frame	q
io_parser_t, 345	noisePowProposedScale::interface_t, 818
process_t	q_high
route::process_t, 859	timoConfig, 898
ProcessMutex	q_low
analysepath_t, 204	timoConfig, 898
processing_done	quant
MHAPlugin_Split::posix_threads_t, 708	calibrator_runtime_layer_t, 216
processor	quantile
MHAPlugin_Split::domain_handler_t, 703	MHASignal, 119
MHAPlugin_Split::thread_platform_t, 720	quantizer_t
prof_algos	MHASignal::quantizer_t, 754
mhachain::plugs_t, 469	queries
prof_cfg	MHAParser::base_t, 607
	<del>-</del> ·
mhachain::plugs_t, 469	plugindescription_t, 837
prof_init	query_addsubst

MHAParser::base_t, 605	MHAParser::float_t, 626
query_cmds	MHAParser::int_mon_t, 628
MHAParser::base_t, 605	MHAParser::int_t, 631
plugindescription_t, 837	MHAParser::kw_t, 636
query_dump	MHAParser::mcomplex_mon_t, 638
MHAParser::base_t, 603	MHAParser::mcomplex_t, 640
MHAParser::monitor_t, 650	MHAParser::mfloat_mon_t, 642
MHAParser::parser_t, 654	MHAParser::mfloat_t, 644
query_entries	MHAParser::parser_t, 654
MHAParser::base_t, 603	MHAParser::string_mon_t, 660
MHAParser::parser t, 654	MHAParser::string_t, 662
query_help	MHAParser::vcomplex_mon_t, 666
MHAParser::base_t, 605	MHAParser::vcomplex_t, 668
query_id	MHAParser::vfloat_mon_t, 670
MHAParser::base t, 605	MHAParser::vfloat_t, 672
query_listids	MHAParser::vint_mon_t, 674
MHAParser::base_t, 605	MHAParser::vint_t, 676
MHAParser::parser_t, 655	MHAParser::vstring_mon_t, 678
query_map_t	MHAParser::vstring t, 680
MHAParser, 107	query val
·	MHAParser::base_t, 604
query_perm MHAParser::base_t, 604	MHAParser::bool_mon_t, 610
MHAParser::monitor_t, 651	MHAParser::bool_t, 612
MHAParser::variable t, 664	MHAParser::complex_mon_t, 618
— ·	MHAParser::complex_t, 620
query_range	MHAParser::float_mon_t, 624
MHAParser::base_t, 604	MHAParser::float_t, 626
MHAParser::kw_t, 636	MHAParser::int_mon_t, 628
MHAParser::range_var_t, 657	MHAParser::int_t, 631
query_readfile	MHAParser::kw t, 636
MHAParser::base_t, 604	MHAParser::mcomplex mon t, 638
MHAParser::parser_t, 655	MHAParser::mcomplex_t, 640
query_savefile	MHAParser::mfloat_mon_t, 642
MHAParser::base_t, 604	MHAParser::mfloat_t, 644
MHAParser::parser_t, 655	MHAParser::parser t, 655
query_savefile_compact	MHAParser::string_mon_t, 660
MHAParser::base_t, 605	MHAParser::string_t, 662
MHAParser::parser_t, 655	MHAParser::vcomplex_mon_t, 666
query_savemons	MHAParser::vcomplex_t, 668
MHAParser::base_t, 605	MHAParser::vfloat mon t, 670
MHAParser::parser_t, 655	MHAParser::vfloat t, 672
query_subst	MHAParser::vint mon t, 674
MHAParser::base_t, 605	MHAParser::vint_t, 676
query_t	MHAParser::vstring_mon_t, 678
MHAParser, 107	MHAParser::vstring_t, 680
query_type	query_version
MHAParser::base_t, 604	MHAParser::base_t, 605
MHAParser::bool_mon_t, 610	quit
MHAParser::bool_t, 612	fw_t, 323
MHAParser::complex_mon_t, 618	<del>-</del> '
MHAParser::complex_t, 620	R
MHAParser::float_mon_t, 624	AuditoryProfile::parser_t, 209

AuditoryProfile::profile_t, 213	MHAJack::port_t, 567
lpc_config, 377	mha_drifter_fifo_t, 410
MHA TCP::OS EVENT TYPE, 446	mha fifo lw t, 417
RUNNING	mha fifo t, 423
MHA TCP::Thread, 454	read_bytes
rad2smp	MHA_TCP::Connection, 442
Vector and matrix processing toolbox, 45	read_event
•	<del>-</del>
ramp_a	MHA_TCP::Connection, 443
hanning_ramps_t, 330	read_get_cpu_load
ramp_b	MHAIOJack::io_jack_t, 542
hanning_ramps_t, 330	MHAIOJackdb::io_jack_t, 547
ramp_begin	read_get_scheduler
MHAWindow::base_t, 798	MHAIOJack::io_jack_t, 542
ramp_counter	MHAIOJackdb::io_jack_t, 547
altplugs_t, 202	read_get_xruns
ramp_end	MHAIOJack::io_jack_t, 542
MHAWindow::base_t, 798	MHAIOJackdb::io jack t, 547
ramp_len	read_levels
altplugs_t, 202	calibrator_t, 219
ramplen	read_line
addsndfile::addsndfile_if_t, 175	MHA_TCP::Connection, 441
altplugs_t, 202	read_modified
fader_wave::fader_wave_if_t, 307	dc_simple::dc_if_t, 251
spec2wave_if_t, 884	read_ptr
ramps	mha_fifo_t, 424
spec2wave_t, 886	readable_frames
range	MHAFilter::polyphase_resampling_t, 528
Vector and matrix processing toolbox, 41	readaccess
range_var_t	MHAParser::base_t, 607
MHAParser::range_var_t, 657	reader_started
ratio	mha_drifter_fifo_t, 411
ds_t, 277	reader_xruns_in_succession
us_t, 904	mha_drifter_fifo_t, 412
raw_p_max_name	reader xruns since start
acTransform_wave, 171	mha drifter fifo t, 412
acTransform_wave_config, 172	reader_xruns_total
	— — — —
raw_p_name	mha_drifter_fifo_t, 412
acPooling_wave_config, 157	real
acTransform_wave, 171	MHASignal::matrix_t, 748–750
acTransform_wave_config, 172	rear_channel
rb_f_t	adm_rtconfig_t, 193
mha_ruby.cpp, 973	rear_channels
rdata	adm_if_t, 190
MHASignal::matrix_t, 752	adm_rtconfig_t, 193
mha audio t, 398	rec frames
re	acsave::cfg_t, 162
mha_complex_t, 400	received_group
read	mhaserver_t, 724
MHAFilter::blockprocessing_polyphase↔	receiver
_resampling_t, 485	MHAEvents::connector_t, 476
_ ,	<del></del>
MHAFilter::polyphase_resampling_t, 528	reciprocal

Complex arithmetics in the openMHA, 67	fw_t, 323
reclen	gain::gain_if_t, 328
acsave::acsave_t, 160	identity_t, 334
recmode	io_file_t, 337
acmon::acmon_t, 152	io_lib_t, 342
reconnect_inports	io_parser_t, 345
MHAIOJack::io_jack_t, 542	io_tcp_sound_t, 357
MHAIOJackdb::io_jack_t, 546	io_tcp_t, 361
reconnect_outports	lpc, 366
MHAIOJack::io_jack_t, 542	lpc_bl_predictor, 368
MHAIOJackdb::io_jack_t, 546	lpc_burglattice, 373
record	MHAIOJack::io_jack_t, 541
wavrec_t, 911	MHAIOJackdb::io_jack_t, 546
rect	MHAJack::client_t, 562
MHAOvlFilter::ShapeFun, 102	MHAParser::mhapluginloader_t, 648
MHAWindow, 122	MHAPlugin::plugin_t, 693
rect_t	MHAPlugin_Resampling::resampling_if-
MHAWindow::rect_t, 804	_t, 696
relative	MHAPlugin_Split::splitted_part_t, 716
MHASignal::loop_wavefragment_t, 741	mhachain::chain_base_t, 465
release	mhachain::plugs_t, 468
ac2lsl::ac2lsl_t, 128	multibandcompressor::interface_t, 810
ac2osc_t, 138	nlms_t, 813
ac2wave_if_t, 141	overlapadd::overlapadd_if_t, 822
acConcat_wave, 146	PluginLoader::fourway_processor_t, 842
acPooling_wave, 155	PluginLoader::mhapluginloader_t, 845
acSteer, 166	prediction_error, 850
acTransform_wave, 170	route::interface_t, 858
acmon::acmon_t, 151	smoothgains_bridge::overlapadd_if_ \inf
acsave::acsave_t, 159	t, 876
addsndfile::addsndfile_if_t, 174	steerbf, 891
adm_if_t, 189	timoSmooth, 902
altplugs_t, 200	us_t, 904
analysispath_if_t, 206	wavrec_t, 910
bbcalib_interface_t, 215	release_
calibrator_t, 218	iirfilter_t, 335
coherence::cohflt_if_t, 224	MHAPlugin::plugin_t, 693
db_if_t, 236	MHAPlugin_Split::split_t, 711
dc_simple::dc_if_t, 250	release_mutex
delaysum::delaysum_if_t, 262	mha_fifo_posix_threads_t, 419
doasvm_classification, 266	mha_fifo_thread_platform_t, 427
doasvm_feature_extraction, 270	remove_abandonned
droptect_t, 274	mha_rt_fifo_t, 431
ds_t, 277	remove_all
example1_t, 290	mha_rt_fifo_t, 431
example2_t, 293	remove_all_cfg
example3_t, 297	MHAPlugin::config_t, 690
example4_t, 300	remove_item
fader_wave::fader_wave_if_t, 307	MHAParser::parser_t, 653, 654
fftfilterbank::fftfb_interface_t, 315	remove_lock
frequency_translator_t, 319	mhamain.cpp, 1012

remove_ref	resolve_checked
algo_comm_t, 196	dynamiclib_t, 278
MHAKernel::algo_comm_class_t, 570	result
remove_var	cpuload_t, 235
algo_comm_t, 195	resynthesis_gain
MHAKernel::algo_comm_class_t, 570	MHAFilter::gamma_flt_t, 504
repl_list	ret_size
MHAParser::base_t, 607	MHAParser::c_ifc_parser_t, 615
repl_list_t	return_imag
MHAParser::base_t, 602	fftfilterbank::fftfb_interface_t, 316
replace	return_imag_
MHAParser::base_t::replace_t, 608	fftfilterbank::fftfb_plug_t, 317
MHASignal::loop_wavefragment_t, 741	return_value
replace_	MHA_TCP::Thread, 455
cfg_t, 222	return_wave
replace_t	wave2spec_if_t, 906
MHAParser::base_t::replace_t, 608	retv
resampled_num_frames	MHAParser::c_ifc_parser_t, 615
addsndfile, 79	rewind
resampled_soundfile_t	MHASignal::loop_wavefragment_t, 743
addsndfile::resampled_soundfile_t, 178	rho
resampling	nlms_t, 814
MHAFilter::blockprocessing_polyphase↔	prediction_error, 850
_resampling_t, 485	ringbuffer
resampling.cpp, 1018	MHAFilter::polyphase_resampling_t, 529
resampling_factors	ringbuffer_t
MHAFilter, 94	MHASignal::ringbuffer_t, 757
resampling_filter_t	rm_parent_on_remove
MHAFilter::resampling_filter_t, 530	MHAParser::base_t, 606
resampling_if_t	rms
MHAPlugin_Resampling::resampling_if↔	MHASignal::loop_wavefragment_t, 741
_t, 696	plingploing::plingploing_t, 832
resampling_t	rms limit40
MHAPlugin Resampling::resampling t,	MHASignal::loop wavefragment t, 741
697	rmsdb
resamplingmode	example6_t, 303
addsndfile::addsndfile if t, 175	rmslevel
reset	calibrator_variables_t, 220
droptect_t, 275	dc::dc_t, 242
MHA_TCP::Async_Notify, 435	MHASignal::async_rmslevel_t, 726
MHA TCP::Wakeup Event, 460	Vector and matrix processing toolbox, 56,
reset_state	57
MHAFilter::gamma_flt_t, 503	rmslevel.cpp, 1018
resize	rmslevel_if_t, 854
MHAFilter::iir_filter_t, 508	name, <mark>855</mark>
resolution	prepare, 855
acTransform_wave_config, 172	process, 855
resolve	rmslevel_if_t, 855
dynamiclib_t, 278	rmslevel_t, 856
resolve_and_init	fftlen, 856
PluginLoader::mhapluginloader_t, 846	insert, 856
1 3 =-,	,

level, 856	channels, 861
level_db, 856	F, 861
peak, 856	frames, 861
peak_db, 856	fu, 862
process, 856	fu_previous, 862
rmslevel_t, 856	fuflt, 862
rmslevelmeter	insert, 861
transducers.cpp, 1027	n_no_update_, 862
root	name_d_, <mark>862</mark>
mha rt fifo t, 432	name_e_, 862
rotated i	name_u_, 862
acTransform_wave_config, 172	no_iter, 862
rotated_p	ntaps, 861
acTransform_wave_config, 172	P_Sum, 862
rotated_p_max_name	process, 861
acTransform_wave, 171	Pu, 861
rotated_p_name	rt_nlms_t, 861
acTransform_wave, 171	s_E, 862
route, 124	U, 861
route.cpp, 1018	Uflt, 861
route::interface t, 857	y_previous, 862
algo, 858	rt_process
cfac, 858	analysepath_t, 204
cfin, 858	rt_strict
cfout, 858	ac2lsl::ac2lsl_t, 128
interface_t, 858	ac2osc_t, 139
patchbay, 858	rtcalibrator
prepare, 858	transducers.cpp, 1027
prepared, 858	rtmem
process, 858	ac2osc_t, 139
release, 858	run
route_ac, 858	MHA_TCP::Thread, 455
route_ac, 656	mhaserver_t, 724
stopped, 858	RunOnce, 862
• • • • • • • • • • • • • • • • • • • •	RunOnce, 863
update, 858	runtime configuration, 4
route::process_t, 859	rval
process, 859	MHAParser::expression_t, 622
process_t, 859	
sout, 859	s_E_pred_err_delay
sout_ac, 859	prediction_error_config, 853
wout, 859	s_LPC
wout_ac, 859	prediction_error_config, 853
route_ac	s_U_delay
route::interface_t, 858	prediction_error_config, 853
route_out	s_U_delayflt
route::interface_t, 858	prediction_error_config, 853
rows	s_Usmpl
acsave::mat4head_t, 162	prediction_error_config, 854
rt_nlms_t, 860	s_Wflt
∼rt_nlms_t, 861	prediction_error_config, 853
ac, 861	s_Y_delay

prediction_error_config, 853 s_Y_delayflt	mha_signal.cpp, 976 mha_signal.hh, 985
prediction_error_config, 853	sample
s_b	lpc_config, 377
lpc_bl_predictor_config, 371	samplerate
lpc_bi_predictor_corning, 371	io_file_t, 338
• - • - •	
S_E	io_tcp_sound_t, 358
prediction_error_config, 853	MHAIOPortAudio::io_portaudio_t, 553
rt_nlms_t, 862	MHAJack::client_t, 564
s_f	samples_AC
lpc_bl_predictor_config, 371	acConcat_wave, 146
lpc_burglattice_config, 375	samplingrate
s_file_in	MHAOvIFilter::fftfb_t, 583
io_file_t, 339	save_m
s_in	acsave::save_var_t, 164
io_file_t, 338	save_mat4
io_parser_t, 345	acsave::save_var_t, 163
io_tcp_sound_t, 359	save_spec.cpp, 1018
MHAIOPortAudio::io_portaudio_t, 553	save_spec_t, 863
MHAJack::client_t, 565	basename, 864
s_out	prepare, 864
coherence::cohflt_t, 227	process, 864
combc_t, 231	save_spec_t, 864
fftfilterbank::fftfb_plug_t, 317	save_txt
io_file_t, 339	acsave::save_var_t, 163
io_parser_t, 345	save_var_t
MHAIOPortAudio::io_portaudio_t, 553	ac2lsl::save_var_t, 132
MHAJack::client_t, 565	ac2lsl::save_var_t< mha_complex_t >,
s_U	134
prediction_error_config, 853	acsave::save_var_t, 163
s_W	save_vars
prediction_error_config, 853	acmon::acmon_t, 152
sInput	save_wave.cpp, 1018
MHAFilter::fftfilter_t, 493	save_wave_t, 865
SOCKET_ERROR	basename, 866
mha_tcp.cpp, 988	prepare, 866
SOCKET	process, 866
MHA_TCP, 89	save_wave_t, 865
mha_tcp.cpp, 988	saveas_mat4
SPP	MHASignal, 119, 120
timo_AC, 894	SC
START BETA	MHASignal::hilbert fftw t, 738
ADM, 80	spec2wave_t, 886
STRERROR	scale
MHA_TCP, 89	example5_t, 302
STRLEN	MHASignal, 117
mha_errno.c, 950	MHASignal::fft_t, 737
sWeights	MHASignal::spectrum_t, 766
MHAFilter::fftfilter_t, 493	MHASignal::waveform_t, 783
safe_div	scale_ch
Complex arithmetics in the openMHA, 66	example2_t, 294
z zp.s a	

example3_t, 297	MHAIOJackdb::io_jack_t, 548
example4_t, 301	server_port_open
plugin_interface_t, 835	io_tcp_parser_t, 354
scale_channel	server_srate
MHASignal::spectrum_t, 767	MHAIOJackdb::io_jack_t, 548
MHASignal::waveform_t, 783	servername
scale_frame	MHAIOJack::io_jack_t, 542
MHASignal::waveform_t, 784	MHAIOJackdb::io_jack_t, 547
scale_fun_t	serversocket
MHAOvlFilter, 99	MHA_TCP::Server, 449
scale_var_t	set
MHAOvlFilter::scale_var_t, 598	Complex arithmetics in the openMHA, 62,
scalefac	63
MHATableLookup::linear_table_t, 790	MHA_TCP::Async_Notify, 435
scaler_t	set_announce_port
gain::scaler_t, 329	mhaserver t, 724
scan_dir	set channelcnt
addsndfile::addsndfile_if_t, 175	MHAFilter::adapt_filter_t, 482
scan_plugin	set connected
pluginbrowser_t, 836	io_tcp_parser_t, 353
scan_plugins	set_entries
pluginbrowser_t, 836	MHAParser::keyword_list_t, 633
scheduler	set errnos
analysepath_t, 204	io_tcp_fwcb_t, 347
MHAPlugin_Split::posix_threads_t, 708	set_error
schroeder_t	mha_fifo_lw_t, 417
MHASignal::schroeder_t, 761	set_fb_pars
search_pattern	DynComp::dc_afterburn_t, 281
<del>_</del> ,	set_help
addsndfile::addsndfile_if_t, 175	<del>-</del> ·
search_result	MHAParser::base_t, 606
addsndfile::addsndfile_if_t, 175	set_id_string
sec2smp Vector and matrix processing toolbox, 43	MHAParser::parser_t, 655
•	set_index
select_plug	MHAParser::keyword_list_t, 633
altplugs_t, 202	set_input_domain
select_source	MHAPlugin_Split::domain_handler_t, 700
MHAMultiSrc::base_t, 573	set_input_portnames
selected_plug	MHAJack::client_t, 563
altplugs_t, 202	set_level
send_frame	addsndfile::addsndfile_if_t, 175
ac2lsl::save_var_base_t, 131	fader_wave::fader_wave_if_t, 307
ac2lsl::save_var_t, 133	set_level_db
ac2lsl::save_var_t< mha_complex_t >,	MHASignal::loop_wavefragment_t, 743
135	set_level_lin
send_osc_float	MHASignal::loop_wavefragment_t, 743
ac2osc_t, 138	set_local_port
Server	io_tcp_parser_t, 351
MHA_TCP::Server, 447, 448	set_locate
server	MHAIOJackdb::io_jack_t, 547
io_tcp_t, 362	set_max_angle_ind
server_fragsize	parser_int_dyn, 827

set_minabs	MHAParser::variable_t, 664
mha_signal.cpp, 976	sf
mha_signal.hh, 985	MHASndFile::sf_t, 785
set_new_peer	wavwriter_t, 912
io_tcp_parser_t, 353	sf_in
set node id	io_file_t, 339
MHAParser::base_t, 605	sf_out
set_output_domain	io_file_t, 339
MHAPlugin Split::domain handler t, 700	sf_t
set_output_portnames	MHASndFile::sf_t, 785
MHAJack::client_t, 563	sf_wave_t
set_parse_cb	MHASndFile::sf_wave_t, 786
MHAParser::c_ifc_parser_t, 614	sfinf in
set_range	_ io_file_t, 339
MHAParser::kw_t, 636	sfinf_out
MHAParser::range_var_t, 657	io file t, 339
set_server_port_open	shadowfilter begin, 125
io_tcp_parser_t, 352	shadowfilter_begin.cpp, 1019
set_state	shadowfilter_begin::cfg_t, 866
MHAFilter::complex bandpass t, 487	cfg_t, 867
MHAFilter::iir_ord1_real_t, 510	in_spec_copy, 867
set_tau	nch, 867
MHAFilter::o1flt_lowpass_t, 516	ntracks, 867
MHAFilter::o1flt_maxtrack_t, 518	out_spec, 867
MHAFilter::01flt_mintrack_t, 520	process, 867
set_tau_attack	shadowfilter_begin::shadowfilter_begin_t, 868
MHAFilter::o1_ar_filter_t, 513	basename, 869
set_tau_release	nch, 869
MHAFilter:::01_ar_filter_t, 513	ntracks, 869
set_use_jack_transport	prepare, 869
MHAIOJackdb::io_jack_t, 547	process, 869
MHAJack::client_t, 563	shadowfilter_begin_t, 868
set_value	shadowfilter_begin_t
MHAParser::keyword_list_t, 633	shadowfilter_begin::shadowfilter_begin
set_weights	_t, 868
MHAFilter::complex_bandpass_t, 487	shadowfilter_end, 125
MHAFilter::gamma_flt_t, 503	shadowfilter_end.cpp, 1019
set xfun	shadowfilter end::cfg t, 869
MHATableLookup::xy_table_t, 794	ac, 870
set xmax	cfg_t, 870
MHATableLookup::linear_table_t, 789	gains, 870
set xmin	in_spec, 870
MHATableLookup::linear_table_t, 788	name, 870
set_xyfun	nch_out, 870
MHATableLookup::xy_table_t, 795	nfft, 870
• •	ntracks, 870
set_yfun	
MHATableLookup::xy_table_t, 795 setchannels	out_spec, 870
	process, 870
dc::wideband_inhib_vars_t, 248	shadowfilter_end_t, 871
setlock	basename, 872
io_file_t, 337	prepare, 872

process, 872 shadowfilter_end_t, 871 shadowfilter_end_t shadowfilter_end::shadowfilter_end_ t, 871	patchbay, 875 phase_div_2pi, 875 prepare, 874 process, 874 sine_t, 874
shape	update_cfg, 874
MHAOvlFilter::fftfb_t, 583	size
shapes	MHA_AC::ac2matrix_helper_t, 382
MHAOvlFilter::fftfb_vars_t, 586	MHA_AC::acspace2matrix_t, 387
shift	MHAKernel::algo_comm_class_t, 571
lpc, 366	MHASignal::matrix_t, 748
lpc_config, 376	Vector and matrix processing toolbox, 47
shifted	48
hilbert_shifter_t, 332	size_t
side	MHAParser::keyword_list_t, 632
mha_channel_info_t, 399	skip
sign_t	ac2lsl::ac2lsl_t, 128
MHASignal::schroeder_t, 761	ac2lsl::cfg_t, 130
signal_counter	ac2osc_t, 139
MHASignal, 120	skipcnt
signal_out	ac2lsl::cfg_t, 130
MHAPlugin_Split::split_t, 712	ac2osc_t, 139
sin125	Sleep
speechnoise_t, 888	mha_tcp.hh, 990
sin1k	slope
speechnoise_t, 888	softclipper_t, 881
sin250	softclipper_variables_t, 883
speechnoise_t, 888	slope_db
sin2k	softclip_t, 880
speechnoise_t, 888	smoothgains_bridge, 125
sin4k	smoothgains_bridge.cpp, 1019
speechnoise_t, 888	smoothgains_bridge::overlapadd_if_t, 875
sin500	~overlapadd_if_t, 876
speechnoise_t, 888	algo, 877
sin8k	cf_in, 877
speechnoise_t, 888	cf_out, 877
sinc	epsilon, 877
MHAFilter, 94	irswnd, 877
sine.cpp, 1019	mode, 877
sine_cfg_t, 872	overlapadd_if_t, 876
amplitude, 873	patchbay, 877
channels, 873	plugloader, 877
mix, 873	prepare, 876
phase_increment_div_2pi, 873	process, 876
sine_cfg_t, 873	release, 876
sine_t, 873	update, 877
~sine_t, 874	smoothgains_bridge::smoothspec_wrap_←
channels, 875	t, 877
frequency, 875	proc_1, 878
lev, 875	proc_2, 878
mode, 875	smoothspec, 878
111000, 010	311100th 10p00, 010

smoothspec_epsilon, 878	softclip_t, 879
smoothspec_wrap_t, 878	attack, 880
spec_in_copy, 878	decay, 880
use_smoothspec, 878	patchbay, 880
smoothspec	prepare, 880
MHAFilter::smoothspec_t, 533	process, 880
smoothgains_bridge::smoothspec_←	slope_db, 880
wrap_t, 878	softclip_t, 880
smoothspec_epsilon	start_limit, 880
smoothgains_bridge::smoothspec_←	tftype, 880
wrap_t, 878	update, 880
smoothspec_t	softclipper_t, 880
MHAFilter::smoothspec_t, 532	attack, 881
smoothspec_wrap_t	clipmeter, 881
smoothgains_bridge::smoothspec_←	decay, 881
wrap_t, 878	hardlimit, 881
smp2rad	linear, 881
Vector and matrix processing toolbox, 44	process, 881
smp2sec	slope, 881
Vector and matrix processing toolbox, 43	softclipper_t, 881
smpl	threshold, 881
prediction_error_config, 854	softclipper_variables_t, 882
sn_in	clipped, 883
MHAJack::client_avg_t, 556	hardlimit, 883
MHAJack::client_noncont_t, 558	linear, 883
sn_out	max_clipped, 883
MHAJack::client_avg_t, 556	slope, 883
MHAJack::client_noncont_t, 559	softclipper_variables_t, 882
sndfile_t	tau_attack, 882
addsndfile::sndfile_t, 179	tau_clip, 883
snprintf_required_length	tau_decay, 883
mha_error_helpers, 87	threshold, 883
snrPost1Debug	sort_fftw2spec
noisePowProposedScale::noisePow	MHASignal::fft_t, 736
Proposed, 820	sort_spec2fftw
sock_addr	MHASignal::fft_t, 736
MHA_TCP::Server, 449	sound
sock_init_t	io_tcp_t, 362
MHA_TCP::sock_init_t, 450	source_channel_index
sock_initializer	MHAFilter::partitioned_convolution_t
MHA_TCP, 90	::index_t, 525
Sockaccept_Event	MHAFilter::transfer_function_t, 538
MHA_TCP::Sockaccept_Event, 450	sout
Sockread_Event	matrixmixer::cfg_t, 378
MHA_TCP::Sockread_Event, 451	route::process_t, 859
Sockwrite_Event	sout_ac
MHA_TCP::Sockwrite_Event, 452	route::process_t, 859
softclip	spec2fir
calibrator_runtime_layer_t, 216	MHAFilter: proof to 523
calibrator_variables_t, 220	MHAFilter::smoothspec_t, 533
softclip.cpp, 1020	spec2spec

plugindescription_t, 837	specSteer2
spec2wave	acSteer_config, 168
MHASignal::fft_t, 735	spectrum_t
plugindescription_t, 837	MHA_AC::spectrum_t, 392
spec2wave.cpp, 1020	MHAMultiSrc::spectrum_t, 575
max, 1020	MHASignal::spectrum_t, 764
min, 1020	speechnoise
spec2wave if t, 883	calibrator_runtime_layer_t, 217
patchbay, 884	speechnoise.cpp, 1020
prepare, 884	bandw_correction, 1022
process, 884	erb_hz_f_hz, 1022
ramplen, 884	fhz2bandno, 1022
spec2wave_if_t, 884	hz2hz, 1022
update, 884	NUM_ENTR_LTASS, 1021
window_config, 884	NUM_ENTR_MHAORIG, 1021
spec2wave scale	NUM_ENTR_OLNOISE, 1021
MHASignal::fft_t, 736	vLTASS_combined_lev, 1023
spec2wave_t, 885	vLTASS female lev, 1023
~spec2wave t, 885	vLTASS freq, 1022
calc out, 886	vLTASS_male_lev, 1023
ft, 885	vMHAOrigFreq, 1022
nfft, 886	vMHAOrigSpec, 1022
npad1, 885	vOlnoiseFreq, 1023
npad2, 886	vOlnoiseLev, 1023
nwndshift, 886	speechnoise.h, 1023
out_buf, 886	speechnoise_t, 887
postwindow, 886	brown, 888
process, 885	creator, 889
ramps, 886	LTASS_combined, 888
sc, 886	LTASS_combined, 888
spec2wave_t, 885	LTASS_male, 888
write_buf, 886	mha, 888
spec_fader_t, 886	noise_type_t, 888
~spec_fader_t, 887	olnoise, 888
fr, 887	pink, 888
gains, 887	sin125, 888
nch, 887	sin1k, 888
spec_fader_t, 887	sin250, 888
• — —	sin250, 666 sin2k, 888
spec_in  MHAPlugin Splittidomain handler t 703	sin4k, 888
MHAPlugin_Split::domain_handler_t, 703 overlapadd::overlapadd t, 825	sin500, 888
wave2spec t, 909	sin8k, 888
• = -	
spec_in_copy	speechnoise_t, 889
smoothgains_bridge::smoothspec_	TEN_SPL_250_8k, 888
wrap_t, 878	TEN_SPL_50_16k, 888
spec_out	TEN_SPL, 888
MHAPlugin_Split::domain_handler_t, 703	white, 888
MHAPlugin_Split::split_t, 713	split.cpp, 1023
timoConfig, 899	default_thread_platform_string, 1024
specSteer1	default_thread_platform_type, 1024
acSteer_config, 168	MHAPLUGIN_OVERLOAD_OUTDOM

AIN, 1024	start_lin
posixthreads, 1024	cfg_t, 222
split_t	start_new_session
MHAPlugin_Split::split_t, 711	wavrec_t, 910
splitted_part_t	started
MHAPlugin_Split::splitted_part_t, 715	fw_t, 323
spnoise_channels	io_parser_t, 345
calibrator_variables_t, 220	starting
spnoise_level	mha_drifter_fifo_t, 411
calibrator_variables_t, 220	startpos
spnoise_mode	addsndfile::addsndfile_if_t, 175
calibrator_variables_t, 220	startsample
spnoise_parser	io_file_t, 338
calibrator_variables_t, 220	startup_zeros
spp	mha_drifter_fifo_t, 413
timoSmooth, 903	stat_t
srate	MHA_AC::stat_t, 394
adm_if_t, 190	MHASignal::stat_t, 768
calibrator_variables_t, 220	state
MHAParser::mhaconfig_mon_t, 647	fw_t, 325
MHAPlugin_Resampling::resampling_if←	MHA_TCP::Thread, 455
_t, 696	MHAFilter::filter_t, 501
mhaconfig_t, 471	state_cpuload
srate_	MHAIOJack::io_jack_t, 543
MHAFilter::gamma_flt_t, 504	MHAIOJackdb::io_jack_t, 548
srcfile	state_parser
MHAParser::parser_t, 655	MHAIOJack::io_jack_t, 543
srcline	MHAIOJackdb::io_jack_t, 548
MHAParser::parser_t, 656	state_priority
start	MHAIOJack::io_jack_t, 543
fw_t, 322	MHAIOJackdb::io_jack_t, 548
io_file_t, 337	state_scheduler
io_lib_t, 341	MHAIOJack::io_jack_t, 543
io_parser_t, 344	MHAIOJackdb::io_jack_t, 548
io_tcp_fwcb_t, 347	state_t
io_tcp_t, 361	fw_t, 322
MHAJack::client_t, 562	state_xruns
start_event	MHAIOJack::io_jack_t, 543
io_file_t, 338	MHAIOJackdb::io_jack_t, 548
io_parser_t, 345	staticgain
io_tcp_fwcb_t, 348	coherence::cohflt_t, 227
MHAIOPortAudio::io_portaudio_t, 553	coherence::vars_t, 228
MHAJack::client_t, 565	status
start_handle	MHA_TCP::Wakeup_Event, 461
io_file_t, 338	std
io_parser_t, 345	MHA_AC::stat_t, 394
io_tcp_fwcb_t, 349	std_vector_float
MHAIOPortAudio::io_portaudio_t, 553	Vector and matrix processing toolbox, 52
MHAJack::client_t, 565	std_vector_vector_complex
start_limit	Vector and matrix processing toolbox, 53
softclip_t, 880	std_vector_vector_float

Vector and matrix processing toolbox, 52	io_parser_t, 345
stdcomplex	io_tcp_fwcb_t, 349
Complex arithmetics in the openMHA, 63	MHAIOPortAudio::io_portaudio_t, 553
steerFile	MHAJack::client_t, 565
acSteer, 167	stopped
steerbf, 889	fw_t, 323
∼steerbf, 890	io_file_t, 337
angle_ind, 891	io_parser_t, 345
angle_src, 891	MHAJack::client_t, 564
bf_src, 891	route::interface_t, 858
patchbay, 891	store
prepare, 890	mon_t, 806
process, 890	store_frame
release, 891	acsave::cfg_t, 161
steerbf, 890	acsave::save_var_t, 163
update_cfg, 891	str2val
steerbf.cpp, 1024	MHAParser::StrCnv, 110, 111
INSERT_PATCH, 1025	str2val< mha_real_t >
PATCH_VAR, 1025	MHAParser::StrCnv, 110
steerbf.h, 1025	str_error
steerbf_config, 891	MHAJack::client_t, 563
_steerbf, 892	strNames_AC
$\sim$ steerbf_config, 892	acConcat_wave_config, 147
ac, 892	strdom
bf_src_copy, 892	analysemhaplugin.cpp, 923
bf_vec, 892	latex_doc_t, 363
nangle, 892	stream
nchan, 892	ac2lsl::save_var_t, 133
nfreq, 892	ac2lsl::save_var_t< mha_complex_t >,
outSpec, 892	135
process, 892	strict_channel_match
steerbf_config, 892	io_file_t, 338
stime	strict_srate_match
MHA_TCP, 89	io_file_t, 338
stop	stride
fw_t, 322	comm_var_t, 233
io_file_t, 337	string_mon_t
io_lib_t, 341	MHAParser::string_mon_t, 660
io_parser_t, 345	string_t
io_tcp_fwcb_t, 348	MHAParser::string_t, 662
io_tcp_t, 361	strreplace
MHAJack::client_t, 562	MHAParser, 107
mha_drifter_fifo_t, 411	structVersion
stop_event	MHAIOPortAudio::device_info_t, 550
io_file_t, 338	subsample_delay_t
io_parser_t, 345	MHASignal::subsample_delay_t, 769
io_tcp_fwcb_t, 348	subsampledelay_coeff
MHAIOPortAudio::io_portaudio_t, 553	ADM, 79
MHAJack::client_t, 565	sum
stop_handle	MHASignal::stat_t, 768
io_file_t, 338	MHASignal::waveform_t, 778, 779

sum2	tau_beta
MHASignal::stat_t, 768	adm_if_t, 190
sum_channel	tau_clip
MHASignal::waveform_t, 779	softclipper_variables_t, 883
sumsqr	tau_decay
MHASignal::waveform_t, 779	softclipper_variables_t, 883
sumsqr_channel	tau_level
Vector and matrix processing toolbox, 58	calibrator_variables_t, 220
sumsqr_frame	tau_unit
Vector and matrix processing toolbox, 59	coherence::vars_t, 228
SVC	tauattack
analysepath_t, 204	dc::dc_vars_t, 244
symmetry_scale	dc_simple::dc_vars_t, 256
MHAOvIFilter::fspacing_t, 591	taudecay
sync	dc::dc_vars_t, 245
mha_fifo_lw_t, 417	dc_simple::dc_vars_t, 256
mha fifo thread guard t, 425	taugain
sysread	DynComp::dc_afterburn_vars_t, 284
MHA_TCP::Connection, 439	taurmslevel
syswrite	dc::dc_vars_t, 244
MHA_TCP::Connection, 440	tcp_connect_to
	mha_tcp.cpp, 988
Т	tcp_connect_to_with_timeout
MHA_TCP::OS_EVENT_TYPE, 446	mha_tcp.cpp, 988
t	<u> </u>
acsave::mat4head_t, 162	tcpserver mhaserver_t, 725
mha_tictoc_t, 461	termination_request
plingploing::plingploing_t, 831	
tAC	MHAPlugin_Split::posix_threads_t, 708
timoConfig, 898	test_error
TEN_SPL_250_8k	io_lib_t, 342
speechnoise_t, 888	MHAParser::c_ifc_parser_t, 614
TEN_SPL_50_16k	PluginLoader::mhapluginloader_t, 846
speechnoise_t, 888	test_fail
TEN_SPL	dc_simple, 82
speechnoise_t, 888	test_version
table	PluginLoader::mhapluginloader_t, 846
cpuload_t, 235	testalsadevice.c, 1025
table_t	main, 1025
MHATableLookup::table_t, 791	tftype
tail	MHAPlugin::plugin_t, 694
MHAFilter::fftfilterbank_t, 497	softclip_t, 880
target_channel_index	The MHA Framework interface, 26
MHAFilter::partitioned_convolution_t ←	The openMHA configuration language, 33
::index_t, 525	The openMHA Plugins (programming inter-
MHAFilter::transfer_function_t, 538	face), 6
tau	MHAPLUGIN_CALLBACKS_PREFIX, 8
coherence::vars_t, 228	MHAPLUGIN_CALLBACKS, 8
droptect_t, 275	MHAPLUGIN_DOCUMENTATION, 9
fader_if_t, 305	The openMHA Toolbox library, 34
tau_attack	thefullname
softclipper_variables_t, 882	MHAParser::base_t, 607

thirdoctave_analyzer_t	alpha_hat_AC, 894
MHAFilter::thirdoctave_analyzer_t, 535	copy, 893
this_outer_out	gain_wiener_AC, 894
MHASignal::doublebuffer_t, 734	gamma_post_AC, 893
thr_f	insert, 893
MHA TCP::Thread, 454	lambda_ceps_AC, 894
Thread	lambda_ml_AC, 893
MHA_TCP::Thread, 454	lambda_ml_ceps_AC, 893
thread	lambda_ml_smooth_AC, 893
analysepath_t, 204	lambda_spec_AC, 894
io_tcp_t, 362	log_lambda_spec_AC, 894
MHAPlugin_Split::posix_threads_t, 708	max_q_AC, 894
MHAPlugin_Split::splitted_part_t, 718	max_val_AC, 894
thread_arg	pitch_set_first_AC, 894
MHA_TCP::Thread, 456	pitch_set_last_AC, 894
thread_attr	SPP, 894
MHA_TCP::Thread, 455	timo_AC, 893
thread_finish_event	winF0_AC, 894
MHA_TCP::Thread, 455	xi_est_AC, 894
thread func	xi_est_AO, 894 xi_ml_AC, 893
MHA_TCP::Thread, 456	timo params, 894
——————————————————————————————————————	
thread_handle	alpha_const_limits_hz, 896
MHA_TCP::Thread, 455	alpha_const_vals, 896
thread_platform	alpha_pitch, 896
MHAPlugin_Split::split_t, 712	beta_const, 896
thread_platform_t	delta_pitch, 896
MHAPlugin_Split::thread_platform_t, 719	f0_high, 895
thread_start	f0_low, 895
analysispath.cpp, 924	gain_min_db, 896
MHAPlugin_Split::posix_threads_t, 707	in_cfg, 895
thread_start_func	kappa_const, 896
mha_tcp.cpp, 988	lambda_thresh, 896
thread_startup_function	noisePow_name, 896
MHAIOTCP.cpp, 1008	prior_q, 896
threshold	timo_params, 895
droptect_t, 275	winF0, 896
softclipper_t, 881	xi_min_db, 895
softclipper_variables_t, 883	xi_opt_db, 896
tictoc	timoConfig, 896
mhachain::plugs_t, 469	$\sim$ timoConfig, 898
timeout	ac, 898
MHA_TCP::OS_EVENT_TYPE, 446	alpha_const, 898
MHA_TCP::Timeout_Watcher, 458	alpha_frame, 899
Timeout_Event	alpha_hat, 899
MHA_TCP::Timeout_Event, 457	alpha_prev, 899
Timeout_Watcher	copy_AC, 898
MHA_TCP::Timeout_Watcher, 458	fftlen, 898
timeshift	GLRexp, 899
Vector and matrix processing toolbox, 49	GLR, 899
timo_AC, 892	gain_min, 898
alpha_frame_AC, 894	gain_wiener, 899

gamma_post, 899	release, 902
lambda_ceps, 899	spp, 903
lambda_ceps_prev, 899	timoSmooth, 901
lambda_ml_ceps, 899	update_cfg, 902
lambda_ml_full, 899	win_f0, 903
lambda ml smooth, 899	xi_min_db, 902
lambda_spec, 899	xi_opt_db, 903
log_lambda_spec, 899	timoSmooth.cpp, 1026
logGLRFact, 899	INSERT PATCH, 1026
max_q, 899	INSERT VAR, 1026
max_val, 899	PATCH VAR, 1026
mha_fft, 898	timoconfig.cpp, 1025
nchan, 898	CHANLOOP, 1026
nfreq, 898	EPSILON, 1026
noisePow, 899	LPSCALE, 1026
•	•
ola_powspec_scale, 898	OVERLAP_FACTOR, 1026
params, 898	POWSPEC_FACTOR, 1026
pitch_set_first, 899	timoconfig.h, 1026
pitch_set_last, 899	timosmooth.h, 1026
powSpec, 899	tmp_spec
priorFact, 899	MHAFilter::smoothspec_t, 534
process, 898	tmp_wave
q_high, 898	MHAFilter::smoothspec_t, 534
q_low, 898	to_from
spec_out, 899	acTransform_wave, 171
tAC, 898	acTransform_wave_config, 172
timoConfig, 898	total_read
winF0, 898	 io_file_t, 339
xi_est, 899	transducers.cpp, 1027
xi_min, 898	kw_index2type, 1027
xi_ml, 899	rmslevelmeter, 1027
xiOpt, 899	rtcalibrator, 1027
timoSmooth, 900	vint_0123n1, 1027
~timoSmooth, 901	transfer_function_t
	——————————————————————————————————————
alpha_const_limits_hz, 903	MHAFilter::transfer_function_t, 537
alpha_const_vals, 903	trigger_processing
alpha_pitch, 902	MHAPlugin_Split::split_t, 711
beta_const, 902	MHAPlugin_Split::splitted_part_t, 717
delta_pitch, 902	trim
f0_high, 902	MHAParser, 107
f0_low, 902	try_accept
gain_min_db, 903	MHA_TCP::Server, 449
kappa_const, 902	try_write
lambda_thresh, 902	MHA_TCP::Connection, 442
noisePow_name, 903	ttl
on_model_param_valuechanged, 902	ac2osc_t, 138
patchbay, 903	tv1
prepare, 902	mha_tictoc_t, 461
prepared, 903	tv2
prior_q, 903	mha_tictoc_t, 461
process, 901	tz

mha_tictoc_t, 461	frequency_translator_t, 319
U	MHA_AC::ac2matrix_t, 383
rt_nlms_t, 861	MHA_AC::acspace2matrix_t, 387
UCL	MHA_AC::stat_t, 394
AuditoryProfile::parser_t::ear_t, 210	MHAMultiSrc::spectrum_t, 576
AuditoryProfile::profile_t::ear_t, 213	MHAMultiSrc::waveform_t, 577
UPrew	MHAParser::mhaconfig_mon_t, 646
prediction_error_config, 854	MHAPlugin_Split::split_t, 711
UPrewW	mhachain::chain_base_t, 465
prediction_error_config, 854	nlms_t, 814
UbufferPrew	overlapadd::overlapadd_if_t, 822
prediction_error_config, 853	plingploing::if_t, 828
Uflt	route::interface_t, 858
	smoothgains_bridge::overlapadd_if_←
rt_nlms_t, 861	t, 877
uint_mode	softclip_t, 880
addsndfile::addsndfile_if_t, 175	spec2wave_if_t, 884
uint_vector_t	wave2spec_if_t, 906
MHASignal::uint_vector_t, 772	update_bbgain
underflow	gain::gain_if_t, 328
MHAFilter::polyphase_resampling_t, 529	update_burner
unit	DynComp::dc_afterburn_t, 281
MHAOvlFilter::fscale_t, 589	update_cfg
unit2hz	acConcat_wave, 146
MHAOvlFilter::scale_var_t, 598	acPooling_wave, 155
unlock_channels	acSteer, 167
fw_vars_t, 326	acTransform_wave, 171
unlock_srate_fragsize	delaysum::delaysum_if_t, 262
fw_vars_t, 326	doasym classification, 267
unset_fb_pars	doasym_feature_extraction, 271
DynComp::dc_afterburn_t, 281	example6_t, 303
up	fader_if_t, 305
MHASignal::schroeder_t, 761	fftfbpow::fftfbpow_interface_t, 311
up_incl	•
MHAParser::range_var_t, 658	fftfilterbank::fftfb_interface_t, 315
up_limit	lpc, 366
MHAParser::range_var_t, 658	lpc_bl_predictor, 369
MHASignal::quantizer_t, 755	lpc_burglattice, 373
up_thresh	multibandcompressor::interface_t, 810
acPooling_wave_config, 157	noise_t, 816
update	noisePowProposedScale::interface_t, 818
ac2lsl::ac2lsl_t, 128	plugin_interface_t, 835
ac2wave_if_t, 141	prediction_error, 850
addsndfile::addsndfile_if_t, 174	sine_t, 874
adm_if_t, 189	steerbf, 891
calibrator_t, 219	timoSmooth, 902
coherence::cohflt_if_t, 224	update_coeffs
dc::dc_if_t, 240	MHAFilter::fftfilter_t, 491
dc::wideband_inhib_vars_t, 248	MHAFilter::fftfilterbank_t, 495
delay::interface_t, 260	update_dc
DynComp::dc_afterburn_t, 282	dc_simple::dc_if_t, 251
DynComp::gaintable_t, 287	update_filter

MHAFilter::iir_filter_t, 508	MHAFilter::polyphase_resampling_t, 529
update_frame	upscale
addsndfile::level_adapt_t, 177	MHASignal::quantizer_t, 755
fader_wave::level_adapt_t, 309	us_t, 903
update_gain	antialias, 904
gain::gain_if_t, 328	prepare, 904
update_gain_mon	process, 904
dc_simple::dc_if_t, 251	ratio, 904
update_hz	release, 904
MHAOvlFilter::fscale_bw_t, 588	us_t, 904
MHAOvlFilter::fscale_t, 589	use_date
update_level	wavrec_t, 911
dc_simple::dc_if_t, 251	use_frozen_
update_level_mon	 cfg_t, <mark>222</mark>
dc_simple::dc_if_t, 251	use_jack_transport
update_levels	MHAIOJackdb::io_jack_t, 547
multibandcompressor::plugin_signals_t,	MHAJack::client_t, 565
811	use_mat
	acmon::ac_monitor_t, 150
update_m	use_own_ac
matrixmixer::matmix_t, 380	altplugs_t, 202
update_minmax	use_sine
gain::gain_if_t, 328	cpuload_t, 235
update_mode	use_smoothspec
ac2osc_t, 138	smoothgains_bridge::smoothspec_
update_monitors	wrap_t, 878
dc::dc_if_t, 240	use wbinhib
update_mu	dc::dc_vars_t, 245
MHAFilter::adapt_filter_t, 482	user
update_ntaps	MHAParser::window_t, 683
MHAFilter::adapt_filter_t, 482	user_err_msg
update_parser	MHAIOFile.cpp, 994
windowselector_t, 915	MHAIOJack.cpp, 997
update_proc_load	MHAIOJackdb.cpp, 999
mhachain::plugs_t, 468	MHAIOParser.cpp, 1002
update_ramplen	MHAIOPortAudio.cpp, 1005
altplugs_t, 201	MHAIOTCP.cpp, 1009
update_recmode	user t
acmon::acmon_t, 152	MHAWindow::user_t, 805
update_selector_list	username
altplugs_t, 201	MHA_AC::ac2matrix_helper_t, 382
update_tau_level	userwnd
calibrator t, 219	windowselector_t, 915
updated	willdowselector_t, 915
windowselector_t, 915	v_G
updater	prediction_error_config, 853
MHAOvlFilter::fscale_bw_t, 588	vFlog
MHAOvlFilter::fscale_t, 589	DynComp::gaintable_t, 289
upper_threshold	vGCC_ac
acPooling_wave, 155	doasym_feature_extraction_config, 272
upsample.cpp, 1027	vGCC_con
upsampling_factor	acConcat_wave_config, 147
apoamping_iaotoi	acconduc_wave_coming, 177

vGCC name	varlist
doasvm_classification, 267	ac2lsl::ac2lsl_t, 128
doasvm_feature_extraction, 271	ac2lsl::cfg t, 130
vGCC	acmon::acmon_t, 152
acConcat_wave_config, 147	acsave::acsave_t, 160
doasym_feature_extraction_config, 272	acsave::cfg_t, 162
vLTASS_combined_lev	varlist_t
speechnoise.cpp, 1023	acsave::acsave_t, 159
vLTASS_female_lev	vars
speechnoise.cpp, 1023	ac2lsl::ac2lsl_t, 128
vLTASS_freq	ac2osc_t, 139
speechnoise.cpp, 1022	acmon::acmon_t, 152
vLTASS male lev	analysispath_if_t, 206
speechnoise.cpp, 1023	calibrator_t, 219
vMHAOrigFreq	coherence::cohflt_if_t, 224
speechnoise.cpp, 1022	MHAKernel::algo_comm_class_t, 571
vMHAOrigSpec	vars_t
speechnoise.cpp, 1022	coherence::vars_t, 228
vOlnoiseFreq	MHAOvlFilter::overlap_save_filterbank_←
speechnoise.cpp, 1023	t::vars_t, 596
vOlnoiseLev	vbark
speechnoise.cpp, 1023	MHAOvlFilter::barkscale, 100
val2str	vbin1
MHAParser::StrCnv, 111, 112	
validate	MHAOvlFilter::fftfb_t, 583 vbin2
AuditoryProfile::parser_t::fmap_t, 211	MHAOvlFilter::fftfb_t, 583
MHAParser::keyword_list_t, 633	vcomplex_mon_t
MHAParser::kw_t, 636	MHAParser::vcomplex_mon_t, 666
MHAParser::range_var_t, 658	vcomplex_t
validator_channels	MHAParser::vcomplex_t, 668
mhasndfile.cpp, 1013	vec
validator_length	ac2lsl::save_var_t< mha_complex_t >,
mhasndfile.cpp, 1013	135
value	vec_y
AuditoryProfile::parser_t::fmap_t, 211	MHATableLookup::linear_table_t, 790
MHASignal::ringbuffer_t, 757	Vector and matrix processing toolbox, 36
MHASignal::spectrum_t, 765	assign, 48, 49
MHASignal::waveform_t, 777, 778	bin2freq, 44
mha_signal.hh, 985	channels, 41
Vector and matrix processing toolbox, 49-	clear, 48
52	colored_intensity, 56
value_type	conjugate, 59
mha_dblbuf_t, 402	copy_channel, 55
mha_fifo_t, 422	db2lin, 42
valuechanged	dbspl2pa, 43
MHAParser::base_t, 606	dupvec, 45
variable, 4	dupvec_chk, 46
variable_t	equal_dim, 46, 47
MHAParser::variable_t, 664	for_each, 42
variables, 4	freq2bin, 44
acsave::acsave_t, 160	integrate, 47

lin2db, 42	MHATableLookup::linear_table_t, 790
max, 58	W
maxabs, 56, 57	
mha_real_t, 41	MHA_TCP::OS_EVENT_TYPE, 446
min, 58	MHAFilter::adapt_filter_state_t, 481
operator*=, 53, 54	W
operator <sup>∧</sup> =, <mark>55</mark>	ac2wave_t, 142
operator+=, 53, 54	doasym_classification, 267
operator-=, 53	MHAOvIFilter::fftfb_t, 583
operator/=, 54	w_out
pa22dbspl, 43	combc_t, 231
pa2dbspl, 42	WINAPI
rad2smp, 45	mha_plugin.hh, 971
range, 41	wIRS_fft
rmslevel, 56, 57	MHAFilter::fftfilter_t, 493
sec2smp, 43	wInput
size, 47, 48	MHAFilter::fftfilter_t, 493
smp2rad, 44	wInput_fft
•	MHAFilter::fftfilter_t, 492
smp2sec, 43	wOutput
std_vector_float, 52	MHAFilter::fftfilter_t, 493
std_vector_vector_complex, 53	wOutput_fft
std_vector_vector_float, 52	MHAFilter::fftfilter_t, 493
sumsqr_channel, 58	wait
sumsqr_frame, 59	MHA_TCP::Event_Watcher, 445
timeshift, 49	wait_for_decrease
value, 49–52	mha_fifo_posix_threads_t, 419
vF	mha_fifo_thread_platform_t, 427
DynComp::gaintable_t, 289	wait_for_increase
vfloat_mon_t	mha_fifo_posix_threads_t, 419
MHAParser::vfloat_mon_t, 670	mha_fifo_thread_platform_t, 427
vfloat_t	Wakeup_Event
MHAParser::vfloat_t, 672	MHA_TCP::Wakeup_Event, 460
vfreq	wave2spec
MHAOvlFilter::barkscale, 100	MHASignal::fft_t, 735
vint_0123n1	plugindescription_t, 837
transducers.cpp, 1027	wave2spec.cpp, 1028
vint_mon_t	MHAPLUGIN_OVERLOAD_OUTDOM←
MHAParser::vint_mon_t, 674	AIN, 1028
vint_t	wave2spec_if_t, 905
MHAParser::vint_t, 676	algo, 906
vL	nfft, 906
DynComp::gaintable_t, 288	nwnd, 906
vmax	patchbay, 906
gain::gain_if_t, 328	prepare, 906
vmin	process, 906
gain::gain_if_t, 328	return_wave, 906
vstring_mon_t	update, 906
MHAParser::vstring_mon_t, 678	wave2spec_if_t, 906
vstring_t	window_config, 906
MHAParser::vstring_t, 680	wndow_comg, 500 wndpos, 906
vy	wave2spec_scale
•,	

MHASignal::fft_t, 736	~wavwriter_t, 912
wave2spec_t, 907	act_, 912
~wave2spec t, 908	cf_, 912
calc_in, 909	close_session, 912
calc_pre_wnd, 908	data, 912
ft, 908	fifo, 912
in_buf, 909	minw_, 912
npad1, 908	process, 912
npad2, 908	sf, 912
nwnd, 908	wavwriter t, 912
nwndshift, 908	write_thread, 912
process, 908	writethread, 912
spec_in, 909	wb_inhib_cfg_t
wave2spec_t, 908	dc::wb_inhib_cfg_t, 247
window, 909	wbinhib
wave2wave	dc::dc_if_t, 240
plugindescription_t, 837	weights
wave_fifo	dc::wb_inhib_cfg_t, 247
analysepath_t, 204	dc::wideband_inhib_vars_t, 248
wave in	delaysum::delaysum_if_t, 262
MHAPlugin Split::domain handler t, 703	delaysum::delaysum t, 264
wave in1	what
overlapadd::overlapadd_t, 824	MHA_Error, 414
wave_out	white
MHAPlugin_Split::domain_handler_t, 703	speechnoise_t, 888
MHAPlugin_Split::split_t, 713	wideband inhib vars t
wave_out1	dc::wideband_inhib_vars_t, 248
overlapadd::overlapadd_t, 825	win_f0
wave reader	timoSmooth, 903
addsndfile, 78	winF0
waveform_proxy_t	timo_params, 896
addsndfile::waveform_proxy_t, 181	timoConfig, 898
waveform t	winF0 AC
MHA_AC::waveform_t, 395	timo_AC, 894
MHAMultiSrc::waveform t, 577	window
MHASignal::waveform t, 776	MHAFilter::smoothspec_t, 534
wavrec.cpp, 1028	overlapadd::overlapadd if t, 823
DEBUG, 1028	wave2spec_t, 909
wavrec_t, 909	window_config
fifolen, 911	spec2wave_if_t, 884
minwrite, 911	wave2spec_if_t, 906
patchbay, 911	window t
prefix, 911	MHAParser::window t, 682
prepare, 910	windowselector.cpp, 1028
process, 910	windowselector.h, 1028
record, 911	windowselector_t, 913
release, 910	~windowselector_t, 914
start_new_session, 910	get_window_data, 914
use_date, 911	insert_items, 914
wavrec_t, 910	invalidate_window_data, 915
wavwriter_t, 911	patchbay, 915

update_parser, 915	MHAJack::port_t, 567
updated, 915	MHASignal::matrix_t, 751
userwnd, 915	MHASignal::ringbuffer t, 758
windowselector_t, 914	MHASignal::uint_vector_t, 773
wnd, 915	mha_drifter_fifo_t, 409
wndexp, 915	mha_fifo_lw_t, 416
wndtype, 915	mha_fifo_t, 422
wnd	write_buf
addsndfile::level_adapt_t, 177	overlapadd::overlapadd_t, 825
fader_wave::level_adapt_t, 309	spec2wave_t, 886
windowselector t, 915	write_event
wnd_bartlett	MHA_TCP::Connection, 443
MHAParser::window_t, 682	write_float
wnd_blackman	mha_parser.cpp, 965
MHAParser::window_t, 682	write_ptr
wnd_funs	mha_fifo_t, 424
mha_windowparser.cpp, 990	write_thread
wnd_hamming	wavwriter_t, 912
MHAParser::window_t, 682	write_wave
wnd_hann	mhasndfile.cpp, 1013
MHAParser::window_t, 682	mhasndfile.h, 1014
wnd_rect	writeaccess
MHAParser::window_t, 682	MHAParser::base_t, 606
wnd_user	writer_started
MHAParser::window_t, 682	mha_drifter_fifo_t, 411
wndexp	writer_xruns_in_succession
overlapadd::overlapadd_if_t, 823	mha_drifter_fifo_t, 412
windowselector_t, 915	writer_xruns_since_start
wndlen	mha_drifter_fifo_t, 412
doasvm_feature_extraction_config, 272	writer_xruns_total
MHAParser::mhaconfig_mon_t, 646	mha_drifter_fifo_t, 412
mhaconfig_t, 471	writethread
wndpos	wavwriter_t, 912
overlapadd::overlapadd_if_t, 823	Writing openMHA Plugins. A step-by-step tu-
wave2spec if t, 906	torial, 10
wndtype	wtype
windowselector_t, 915	MHAParser::window_t, 683
worker_thread_priority	wtype_t MHAParser::window t, 682
MHAPlugin_Split::split_t, 712	winaraiseiwiildow_i, 002
worker_thread_scheduler	X
MHAPlugin_Split::split_t, 712	MHA_TCP::OS_EVENT_TYPE, 446
wout	MHAFilter::adapt filter state t, 481
matrixmixer::cfg_t, 378	X
route::process_t, 859	doasvm_classification, 267
wout_ac	xfun
route::process_t, 859	MHATableLookup::xy_table_t, 795
write	xi_est
MHA_TCP::Connection, 442	timoConfig, 899
MHAFilter::blockprocessing_polyphase ←	xi_est_AC
_resampling_t, 484	timo_AC, 894
MHAFilter::polyphase_resampling_t, 528	xi_min

```
timoConfig, 898
                                              zerowindow
xi min db
                                                  overlapadd::overlapadd_if_t, 823
    timo params, 895
    timoSmooth, 902
xi_ml
    timoConfig, 899
xi ml AC
    timo_AC, 893
xi opt db
    timo_params, 896
    timoSmooth, 903
xiOpt
    noisePowProposedScale::noisePow←
        Proposed, 820
    timoConfig, 899
xiOptDb
    noisePowProposedScale::interface_t, 818
xmax
    MHATableLookup::linear_table_t, 790
xmin
    MHATableLookup::linear_table_t, 790
Xs
    MHAFilter::fftfilterbank t, 496
XW
    MHAFilter::fftfilterbank_t, 496
xy_table_t
    MHATableLookup::xy_table_t, 793
    MHATableLookup::xy_table_t, 795
У
    doasvm_classification, 267
y0
    dc_simple::dc_t::line_t, 254
y_previous
    rt_nlms_t, 862
YPrew
    prediction_error_config, 854
yfun
    MHATableLookup::xy_table_t, 795
Yn
    MHAFilter::complex_bandpass_t, 488
    MHAFilter::iir_ord1_real_t, 511
Ys
    MHAFilter::fftfilterbank_t, 497
yw
    MHAFilter::fftfilterbank_t, 496
yw_temp
    MHAFilter::fftfilterbank t, 497
zeros
    ac2wave_if_t, 141
```