



Baby Bullet Assembly			
<u></u>	()	Created by: Joshua Vasquez	last edited: 2/16/2022
		SCALE: 1:1	SHEET 1 OF 14

Fully press-fit all four square nuts into their respective cavities.



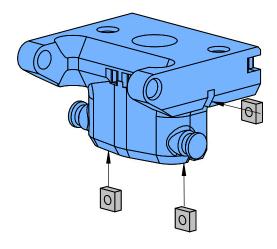


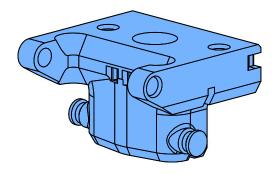



ITEM NO.	DESCRIPTION	QTY.
1	M3 Square Nut	4
2	Front Base Piece	1


Square Nut Installation			
(33)	•	Created by: Joshua Vasquez	last edited: 2/16/2022
	BY	-	
		SCALE: 1:1	SHEET 2 OF 14


ITEM NO.	DESCRIPTION	QTY.
1	Back Base Piece with Square Nuts	1
2	5x9x2 O-Ring	2

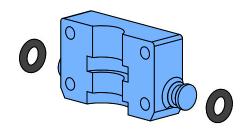

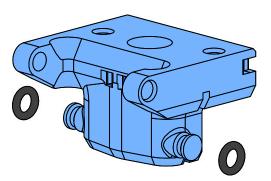


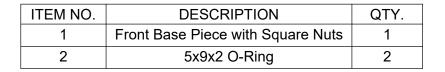


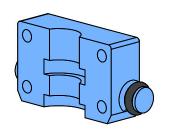


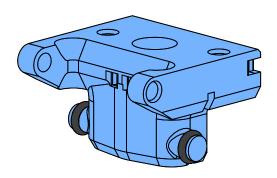


O-Ring Installation			
© BY	Created by: Joshua Vasquez	last edited: 2/16/2022	
	SCALE: 1:1	SHEET 3 OF 14	

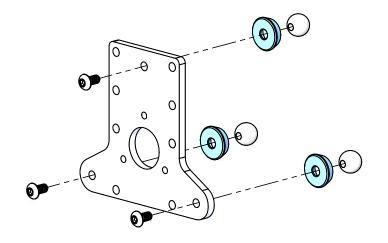

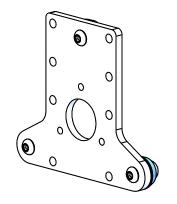

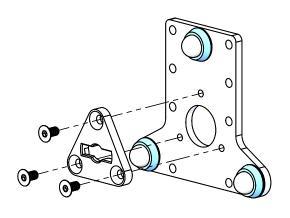


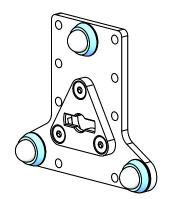

ITEM NO. DESCRIPTION		QTY.
1 M3 Buttonhead Screw, 6mm long		3
2	M3 Flathead Screw, 6mm long	3
3	M3 Threaded 8mm Tool Ball	3
4	Tool Ball Cup	3
5	Wedge Plate	1
6	Tool Plate	1


Tool Plate Assembly			
(CC)	(i) BY	Created by: Joshua Vasquez	last edited: 2/16/2022
		SCALE: 3:4	SHEET 4 OF 14

Install the following 4 inserts with the Plate Press Technique.

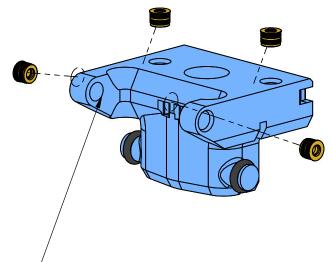

Be gentle installing these front heat set inserts as they can warp this corner of the plastic.

If you see this plastic warping, you can still push it back to it's original form while the plastic is still warm.

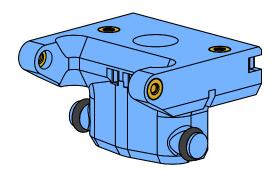


More inserts to install on the next page!


ITEM NO.	DESCRIPTION	QTY.
1	M3 Tapered Heat Set Insert	4
2	Front Base Piece Assembly	1


Heat Set Insert Installation			
8	()	Created by: Joshua Vasquez	last edited: 2/16/2022
		SCALE: 1:1	SHEET 5 OF 14


Install the following inserts in the left and right fan shrouds.


Be gentle as the heat from the installation tool can warp the flatness of the back surface of the part. If that happens, cool the part on a flat metal plate while applying gentle pressure to flatten it.

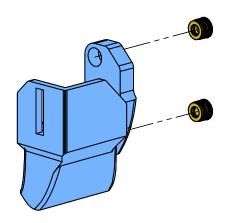

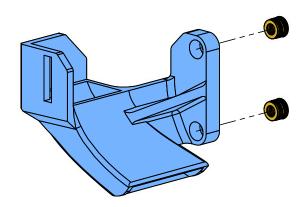

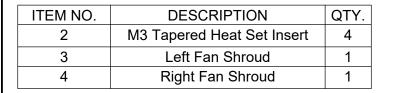

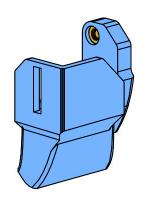

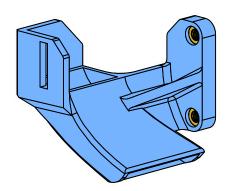

Heat Set Insert Installation 2			
(6)	(1)	Created by:	last edited:
	BY	Joshua Vasquez	2/16/2022
		SCALE: 1:1	SHEET 6 OF 14

Use a PTFE Tube Cutter to cleanly cut the PTFE tube to the length appropriate for your hotend.




60.5 mm for E3DV6 hotends. 45 mm for E3D Revo6 hotends.





Ensure that the resulting cut is clean on both ends.

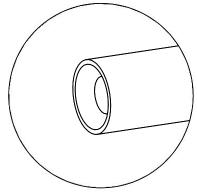


OK! Not OK!

With a box cutter blade or chamfering tool, shape one end of the PTFE Tube.


Ensure that the PTFE Tube is clean on both ends and there is no debris anywhere in the tube or at the tips.


Warning: it is **absolutely critical** that the PTFE tube is cut cleanly and has **no debris**. Any small flakes of PTFE tube will result in horrific tool jams that are hard to debug

E3D PTFE Assembly			
(C)	i BY	Created by: Joshua Vasquez	last edited: 2/16/2022
		SCALE: 1:1	SHEET 7 OF 14

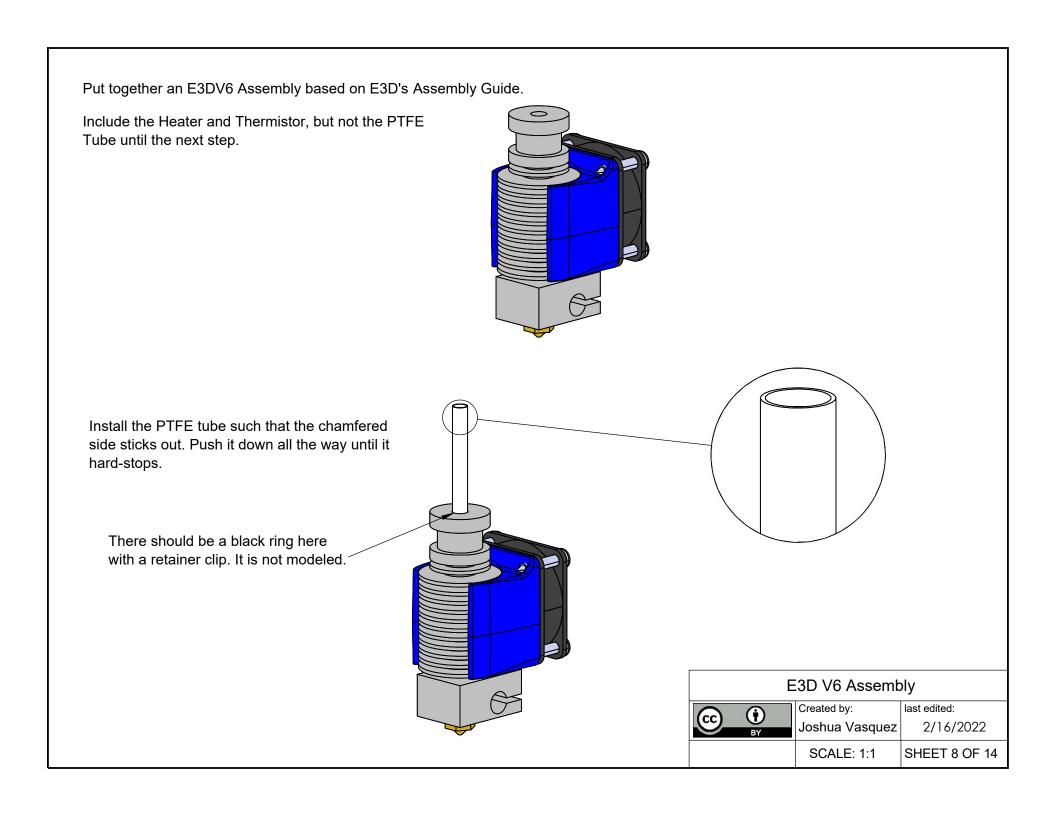


Clasp these three assemblies together. They will fit loosely until installed into the plate.

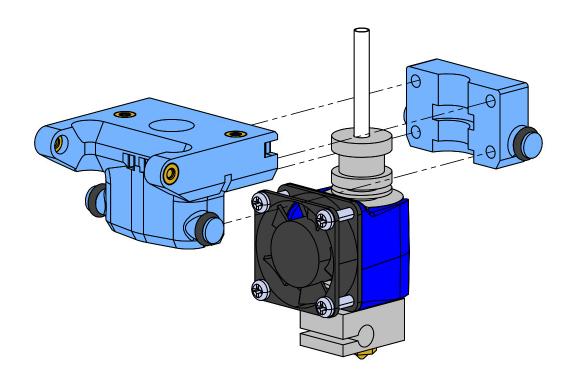


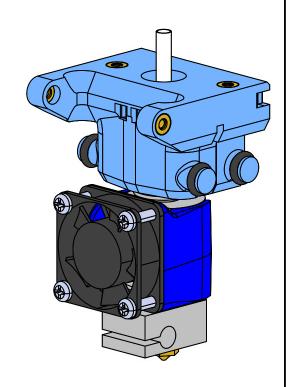

ITEM NO.	DESCRIPTION	QTY.
1	Back Base Piece Assembly	1
2	Front Base Piece Assembly	1
3	Hotend with PTFE Tube Installed	1


Hotend Base Assembly			
(0)	BY	Created by:	last edited:
		Joshua Vasquez	2/16/2022
		SCALE: 1:1	SHEET 9 OF 14

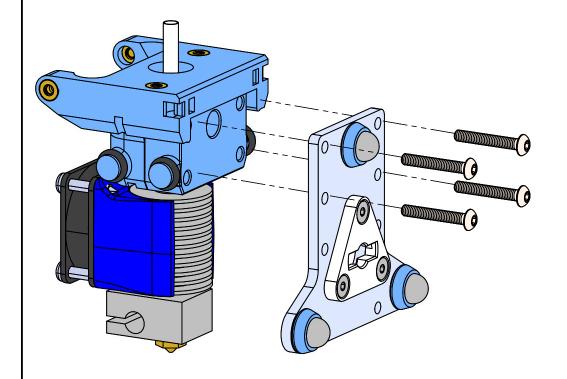


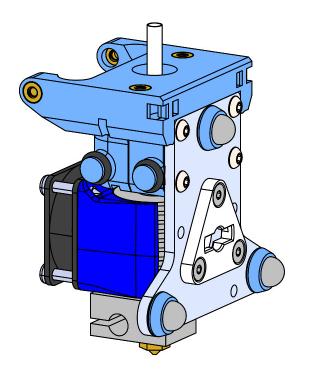


ITEM NO.	DESCRIPTION	
1	M3 Buttonhead Screw, 20mm long	4
2	Base Tool Plate Assembly	1


Hotend Assembly Installation			
© BY		Created by: Joshua Vasquez	last edited: 2/16/2022
		SCALE: 1:1	SHEET 10 OF 14

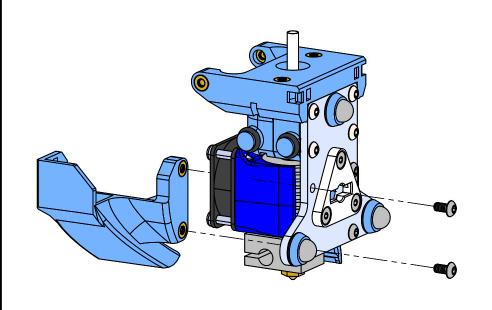

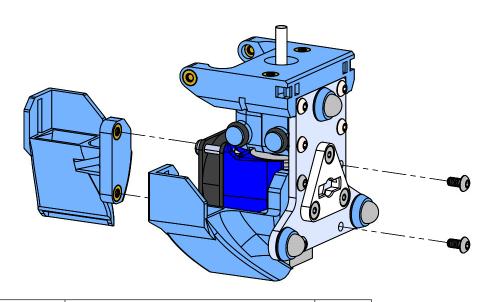



ITEM NO.	DESCRIPTION	
1	M3 Buttonhead Screw, 6mm long	4
2	Right Fan Shroud with Inserts	1
3	Left Fan Shroud With Inserts	1

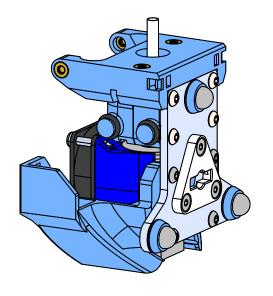

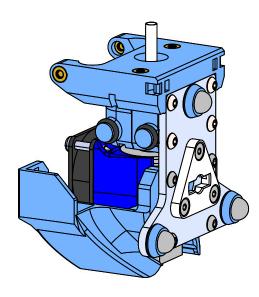



Fan Shroud Installation			
6	lacksquare	Created by:	last edited:
	BY	Joshua Vasquez	2/16/2022
		SCALE: 3:4	SHEET 11 OF 14

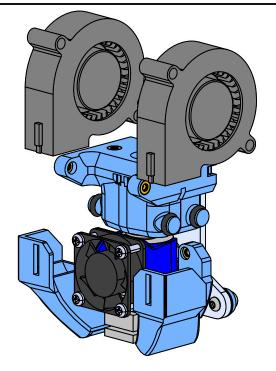

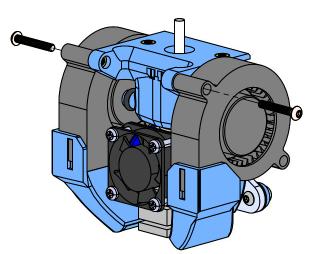


ITEM NO.	DESCRIPTION	
1	M3 Buttonhead Screw, 20mm long	2
2	5015 Blower Fan	2
7	Hotend Assembly	1

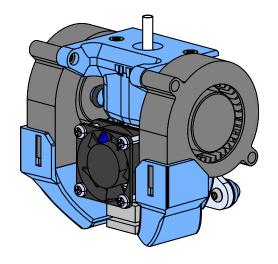

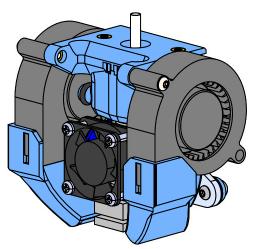


Fan Installation			
CC BY	Created by: Joshua Vasquez	last edited: 2/16/2022	
	SCALE: 2:3	SHEET 12 OF 14	


Note that the clearances for fitting these parts together are quite tight.

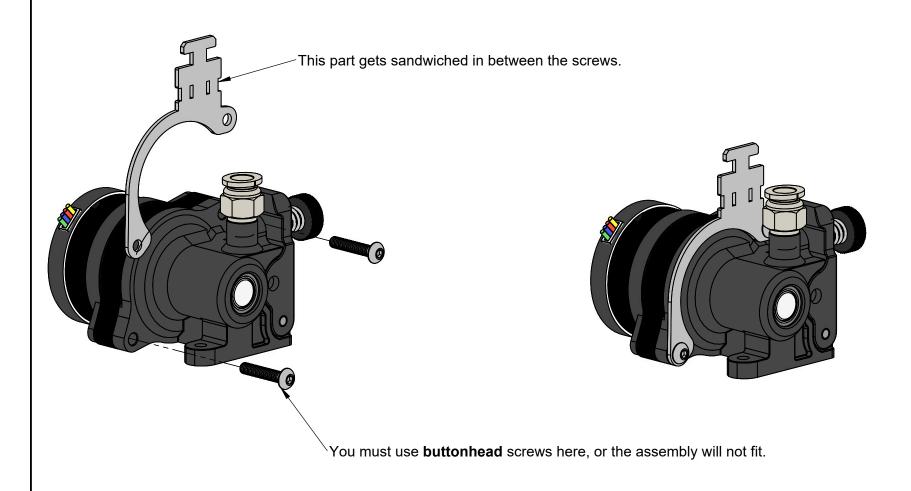


ITEM NO.	DESCRIPTION	QTY.
2	Orbiter 1.5 Assembly	1
3	Wire Harness Strain Relief	1
4	M3 Buttonhead Screw, 16mm long	2

Orbiter Prep			
© BY		Created by: Joshua Vasquez	last edited: 2/16/2022
		SCALE: 1:1	SHEET 13 OF 14

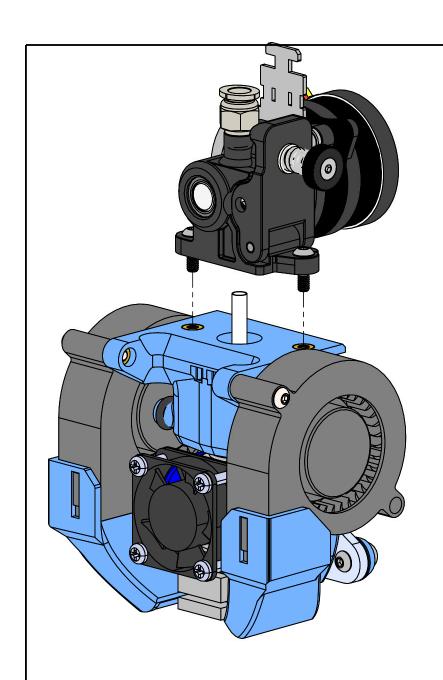

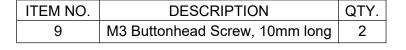

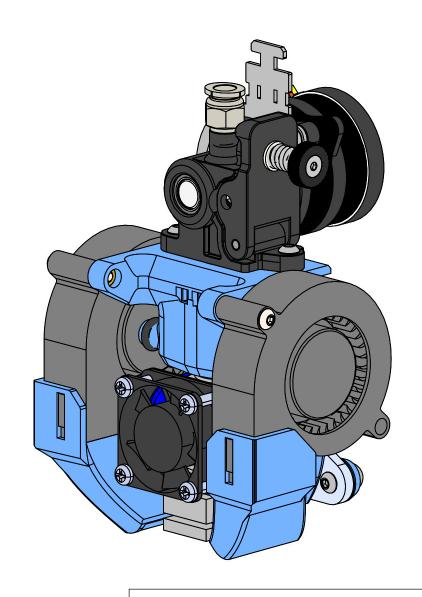

Orbiter Extruder Assembly

0	(1)	Created by:	last edited:
CC BY		Joshua Vasquez	
		SCALE: 1:1	SHEET 14 OF 14