

# **Sensor Software Users Guide**

# **Contents**

1	Introduction			
	1.1	Acrony	rms and Terms	3
	1.2 Conventions			3
	1.3	Refere	nces	4
	1.4	Additio	nal Information	4
2	Proc	duct Ove	5	
3	Installation Components			6
	3.1 CCES Installation			6
		3.1.1	Web Installation	7
		3.1.2	Local Installation	8
4	Example Projects			9
	4.1 Sensor Examples			9
	4.2 Opening Example			9
	4.3 Example Layout			10
	4.4 Running the example			10
5	5 Data Packet Format			13
	5.1 Sensor Data Packet			13
	5.2	Explan	ation of Fields	13
		5.2.1	Packet Type	13
		5.2.2	ID of Sensor	13
		5.2.3	Sensor Type and Sensor Data	13
		5.2.4	Time Stamp	14

### 1 Introduction

This document describes how to install and work with the ADI-SensorSoftware pack file. It explains what is included with the pack file and how to configure the software to run the example applications that accompanies this package.

This document is intended for users who want to write software using Sensor Software Pack and ADuCM3029 processor targeting the ADICUP3029 evaluation board. It assumes some familiarity with the ADuCM3029 and the C/C++ programming language.

## 1.1 Acronyms and Terms

ADI	Analog Devices, Inc.
API	Application Programming Interface
BSP	Board Support Pack
CCES	CrossCore Embedded Studio®
CMSIS	Cortex® Microcontroller Software Interface Standard
DFP	Device Family Pack
HRM	Hardware Reference Manual
NoOS	No Operation System
RTE	Run-Time Environment
SoC	System on a Chip

#### 1.2 Conventions

Throughout this document, we refer to important installation locations. These locations are defined here.

- <cces\_root>
  - The default CCES installer for CCES 2.6.0 places the product at location C: /Analog Devices/CrossCore Embedded Studio 2.6.0, but the install location may vary depending on user preferences.
  - The default packs are placed at location <cces\_root>/ARM/packs /AnalogDevices.

#### 1.3 References


- 1. CrossCore Embedded Studio® (CCES) [http://www.analog.com]
- 2. ARM CMSIS PACK [www.keil.com/cmsis/pack]

#### 1.4 Additional Information

For more information on the latest ADI processors, silicon errata, code examples, development tools, system services and devices drivers, technical support and any other additional information, please visit our website at www.analog.com/processors.

### 2 Product Overview

Analog Devices Sensor Software Pack (ADI-SensorSoftware 1.0.0) is a collection of various sensor software components and associated examples. Sensor component software uses C++ classes to abstract the common features across different sensor types. Interface to the underlying peripheral and its configuration is done in the sensor class itself. So applications can simply instantiate the object and use its services. Below class hierarchy shows the available sensor classes in version 1.0.0.



# **3 Installation Components**

Before installing the ADI Sensor Pack 1.0.0, the following should be installed.


- CrossCore Embedded Studio ® 2.6.0 or later.
- ADuCM302x Device Family Pack 2.0.0 or later.
- ADICUP3029 BSP 1.0.0 or later.

This software is released in the form of a CMSIS Pack file. CCES will extract the contents of the Pack file into the CCES installation directory. This allows for a clean partitioning of software delivered by ADI and software created by the user. The ADICUP3029 BSP contents (device drivers, examples, documentation, etc.) are placed at the following location

 CrossCore Embedded Studio®: <ccs\_root>/ARM/packs/AnalogDevices/ADI-SensorSoftware/x.y.z

where  $\mathbf{x} \cdot \mathbf{y} \cdot \mathbf{z}$  is the installed pack version number. Figure 1 shows the contents that will be placed at this location after the installation has completed.

Figure 1. Installation Directory Structure

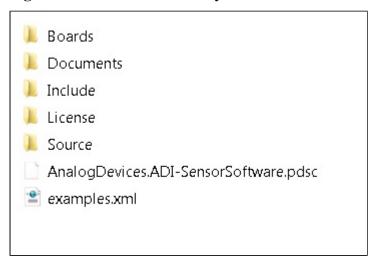

#### 3.1 CCES Installation

To install a new Sensor Pack Software or update an existing Sensor Software go to CMSIS Pack Manager perspective, shown in Figure 2. If the Pack Manager perspective was not opened previously, the CMSIS Pack Manager icon may not be present on the toolbar as shown below. In that case, the Pack Manager perspective can be opened by clicking *Window Perspective Open Perspective Other Pack Manager*. There are two methods that can used to install the Sensor Pack described below.

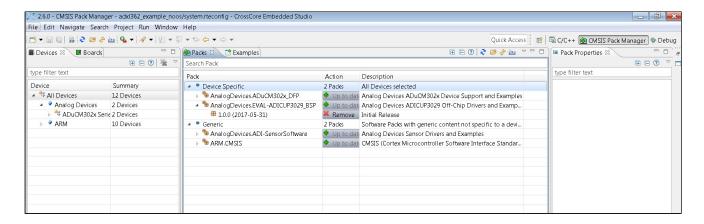


Figure 2. CMSIS Pack Manager Perspective

#### 3.1.1 Web Installation

The Sensor Software Pack can be installed directly from the web using CCES, the user does not need to download the file and open it with CCES. This can be done by first refreshing the CMSIS Pack Manager (the blue arrows in the top left of the *Pack* tab). This will display a list of available Pack files as shown in Figure 3. Clicking on the "ADuCM302x Series" will show the Sensor Pack in the *Pack* tab under *Generic* section as "AnalogDevices.ADI-SensorSoftware". Click "Install" and accept the license agreement in order to install the Sensor Software Pack.

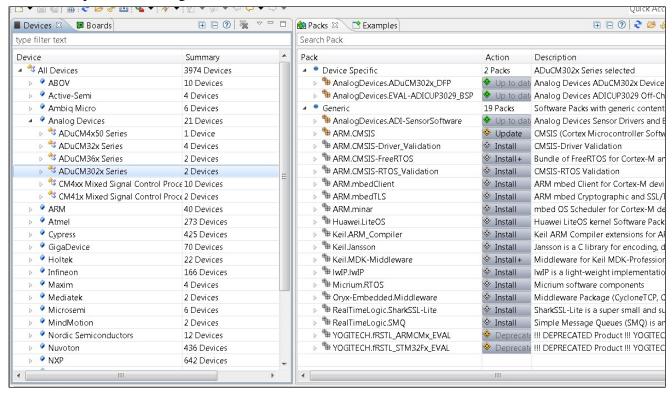


Figure 3. Available Pack Files

#### 3.1.2 Local Installation

If the user has already obtained the Pack file, it can be installed without using the method described above. Click "Import Existing Packs" (the folder icon in the *Pack* tab) and then browse to the Pack file.

# **4 Example Projects**

### 4.1 Sensor Examples


Sensor Software pack contains various sensor examples given below.

- ADIXL362 Accelerometer example
- ADT7420 Temperature Sensor example
- CO Toxic Gas measurement example
- Visible Light Detection/Measurement example

All sensor examples work with or without Bluetooth as described in the associated example's readme file. When Bluetooth is enabled all examples send sensor data to *IoTNode* android application. Please refer to *IoT\_Node\_Users\_Guide.pdf* present in the <ccs\_root>/ARM /packs/AnalogDevices/EVAL-ADICUP3029\_BSP/1.0.0/Documents folder.


### 4.2 Opening Example

Examples can be opened by using CCES Browse Examples window as shown below. Double click on the example to open the project.

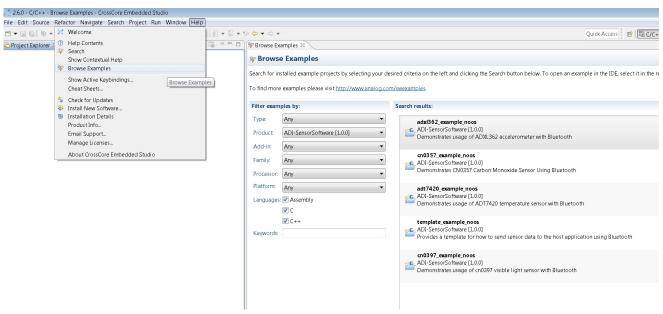

### 4.3 Example Layout

The layout of the ADXL362 example is given below. All sensor examples follow similar layout.

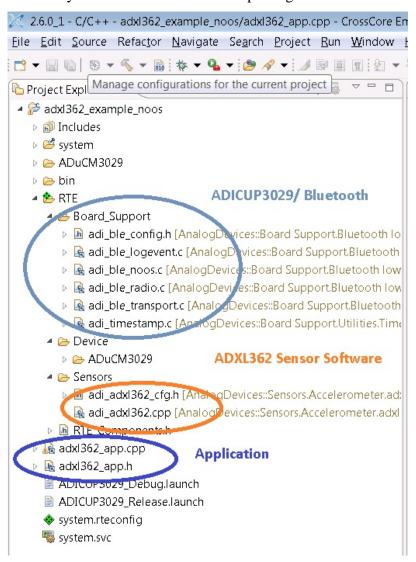


# 4.4 Running the example

Follow below steps in order to run the project


- 1. Open the project and build
- 2. Set up hardware as described in the associated project Readme file
- 3. Press Run Debug CCES menu option
- 4. Run the application


5. Open the Android application and connect to the target

The screen shots below show the adxl362\_example\_noos example application working in conjunction with the Android application

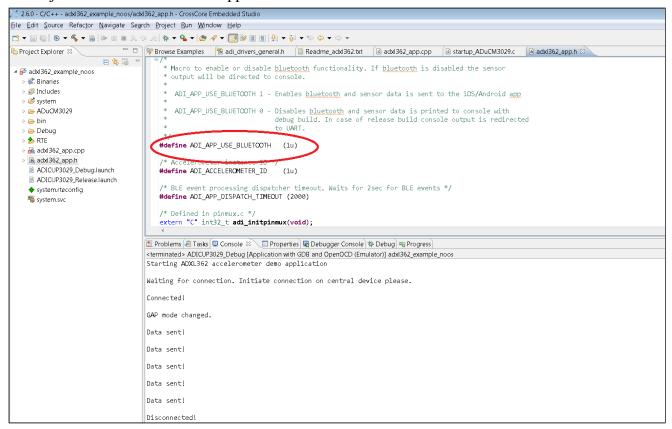

#### Android application screen shots

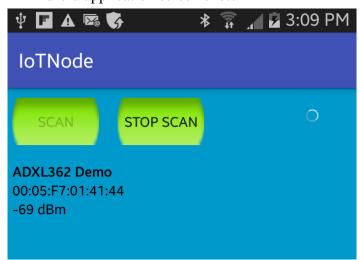

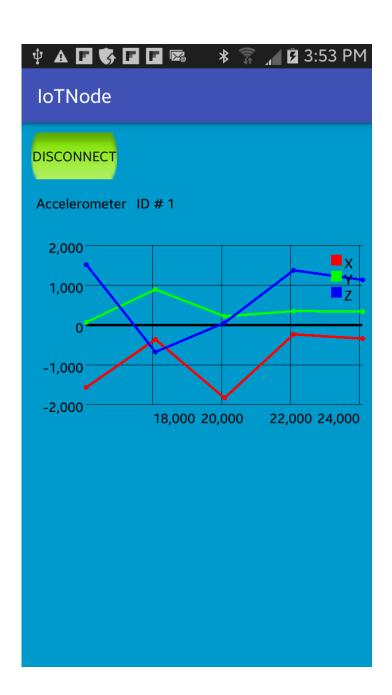

#### 5 Data Packet Format

This section will cover data packet format that is to be used in conjunction with the IoTNode application.

#### 5.1 Sensor Data Packet

Packet Type (MSB)	ID of Sensor (LSB)	SensorType	RTC Time Stamp	Sensor Data
1 bit	7 bits			
1 byte		1 byte	4 bytes	15 bytes

## 5.2 Explanation of Fields

#### 5.2.1 Packet Type

1 (Always)

#### 5.2.2 ID of Sensor

A 7-bit unique identifier for an instance of a particular sensor.

#### 5.2.3 Sensor Type and Sensor Data

Each sensor type such as accelerometer, temperature, CO, etc. is assigned an ID value and an expected data format. Note: The Sensor data field is expected in the order listed in the chart below. For example the Accelerometer will expect 2-Byte X, then 2-Byte Y and then 2-Byte Z data in a single Sensor Data field.

Sensor Type Value (decimal)	Sensor	Sensor Data	
01	Accelerometer (2G Sensitivity)	X: 2-Byte, Y: 2-Byte, Z: 2-Byte	
02	CO Sensor	Ppm value is sent in float	
03	Temperature Sensor	Celcius value is sent in float	
04	String	1-Byte length of string, x-Byte string	

11	Accelerometer (4G Sensitivity)	X: 2-Byte, Y: 2-Byte, Z: 2-Byte
12	Accelerometer (8G Sensitivity)	X: 2-Byte, Y: 2-Byte, Z: 2-Byte

# 5.2.4 Time Stamp

4-byte timestamp associated with a data point. User specified units.