Controls and buses

Santiago Peñate Vera Carlos Alegre Aldeano Josep Fanals i Batllori

16th March 2024

Controls are becoming much more prevalent as years go by. Compared to decades ago when synchronous generators dominated power networks and there was zero to little controllability, nowadays devices based on power electronics are increasing in popularity. Thus, there is a need to list all the possible controls that derive from each element. This document contains an exhaustive list of all devices and their controllable magnitudes, which are then mapped to the corresponding types of buses. It is taken into account that a power grid, as we understand it, can be composed of multiple interconnected AC and DC grids.

1 Glossary

- General:
 - $-\delta$: voltage angle.
 - V: voltage magnitude.
 - $-\tau$: transformer tap angle.
 - m: transformer tap magnitude.
 - P: active power.
 - Q: reactive power.
 - I: current magnitude.
 - f: from side of a branch, representing the AC side.
 - -t: to side of a branch, representing the DC side.

• 1 magnitude:

- P: bus with controlled P.
- Q: bus with controlled Q.
- V: bus with controlled V.
- D: bus with controlled δ .
- I: bus with controlled I.

• 2 magnitudes:

- VD: bus with controlled V and δ .
- PQ: bus with controlled P and Q.
- PV: bus with controlled P and V.

- PD: bus with controlled P and δ .
- QV: bus with controlled Q and V.
- QD: bus with controlled Q and δ .
- PI: bus with controlled P and I.
- QI: bus with controlled Q and I.
- VI: bus with controlled V and I.
- DI: bus with controlled δ and I.

• 3 magnitudes:

- PVD: bus with controlled P, V and δ .
- QVD: bus with controlled Q, V and δ .
- VDI: bus with controlled V, δ and I.
- PQD: bus with controlled P, Q and δ .
- PID: bus with controlled P, I and δ .
- QID: bus with controlled Q, I and δ .
- PQV: bus with controlled P, Q and V.
- PIV: bus with controlled P, I and V.
- QIV: bus with controlled Q, I and V.
- PQI: bus with controlled P, Q and I.

• 4 magnitudes:

- PQVD: bus with controlled P, Q, V and δ .
- PVDI: bus with controlled P, V, D and I.
- QVDI: bus with controlled Q, V, D and I.
- PQDI: bus with controlled P, Q, δ and I.
- PQVI: bus with controlled P, Q, V and I.

2 Devices controls

This section unveils the controls associated with the most common devices found in power systems.

2.1 Load

Loads are best represented with their equivalent ZIP model as shown in Figure 1.

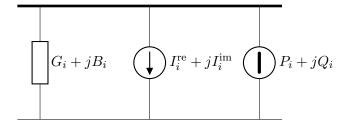


Figure 1: Representation of a load with its ZIP model.

2.2 Generator

Under GridCal, generators are classified into two categories: controlled generators and static generators. The first category corresponds to the ones that regulate the voltage and the active power, whereas the second class contains generators setting a given active and reactive power.

Figure 2 shows the scheme for a controlled generator.

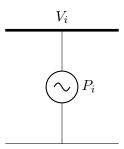


Figure 2: Representation of a controlled generator.

Figure 3 shows the scheme for a static generator.

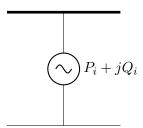


Figure 3: Representation of a static generator.

Note that generators have a capability curve that limits their range of operation. Hence, it is common practice to switch a controlled generator to a static one in case the reactive power limits are met.

2.3 Shunt converter

A shunt converter is understood as a device that links a resource (renewables, batteries, etc.) into the AC grid. Its model is captured in Figure 4.

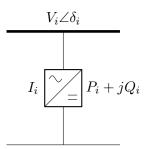


Figure 4: Representation of a shunt converter.

Seen from the AC side, a converter can control two magnitudes at a time, including the active and reactive powers, the voltage in magnitude and angle, and also operate at a set current magnitude. The operating mode determines the controlled variables.

2.4 Series converter

We define a series converter as a device of branch type, that is, a link between two buses where none of them is the ground. This kind of converter is found in HVDC links, for example. Figure 5 displays its model.

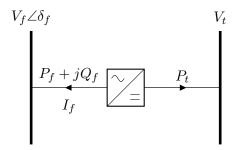


Figure 5: Representation of a series converter.

2.5 Transformer

A transformer is seen as a device where its tap is adjustable, both in terms of magnitude and phase. In a simplified way its model is shown in Figure 6.

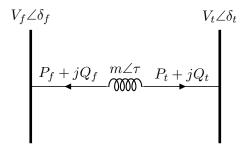


Figure 6: Representation of a transformer.

3 Fundamental rules

There are some basic rules to ensure controls are coherent:

- Each grid has to have only 1 slack bus ¹. This applies to both AC and DC grids. In AC grids the magnitude V and angle δ have to be specified, whereas in DC grids only the magnitude V.
- It is not possible to have two devices controlling the same nodal voltage. In case it happens, there has to be a dominant device that governs it and the non-dominant device must switch its state.
- Buses can have from 0 to 4 controlled magnitudes. In the most extreme case, a device connected to a given bus may be controlling two magnitudes of a nearby bus (hence one bus has zero controlled magnitudes and the other four). Controlling 5 magnitudes is deemed impossible.

4 Combinations

4.1 Load

Table 1: Load specified magnitudes and resulting bus types.

Controlled	Bus type	Description
P, Q	PQ	Regular load forcing a PQ bus at its node

¹The only exception being distributed slacks, which are simply slack buses with coordination rules.

4.2 Generator

It is worth mentioning that a generator can be controlled in two different ways: by setting the voltage and active power, or by specifying the active and reactive power. Generators operate in this last mode if reactive powers are met or if it is a static generator. The controlled magnitudes can be specified in remote buses, not necessarily the one where the generator is connected to.

Table 2: Generator specified magnitudes and resulting bus types.

Controlled	Bus type	Description
P, V	PV	Typical PV bus
P, Q	PQ	PQ bus for static generators or if reactive limits are met

4.3 Shunt converter

The absolute value of the current I is set to the device, that is, it cannot be associated to a remote bus. The rest of the magnitudes can be linked to a bus where the converter is not directly connected.

Table 3: Shunt converter specified magnitudes and resulting bus types.

Controlled	Bus type	Description
P, Q	PQ	Unsaturated PQ converter
P, V	PV	Unsaturated PV converter
Q, I	QI	Partially saturated PQ converter
P, I	PI	Fully saturated PQ converter
V,I	VI	Partially saturated PV converter
V,D	VD	Unsaturated grid-forming converter
D,I	DI	Saturated grid-forming converter

4.4 Series converter

The absolute value of the current I is set to the device, that is, it cannot be associated to a remote bus. The rest of the magnitudes can be linked to a bus where the converter is not directly connected.

Table 4: Series converter specified magnitudes and resulting bus types.

Controlled	Description
$\overline{P_f, P_t}$	Active power controlled on the AC and DC side
Q_f, P_t	Reactive power controlled on the AC and DC side
V_f, P_t	Voltage magnitude on the AC and active power on the DC side
δ_f, P_t	Voltage angle controlled on the AC and active power on the DC side
P_f, V_t	Active power controlled on the AC and voltage on the DC side
Q_f, V_t	Reactive power controlled on the AC and voltage on the DC side
V_f, V_t	Voltage magnitude controlled on the AC and DC side
δ_f, V_t	Voltage angle controlled on the AC and voltage DC side
I_f, P_t	Maximum current on the AC and active power on the DC side
I_f, V_t	Maximum current on the AC and voltage on the DC side

4.5 Transformer

The values of m and τ are set to the device, that is, they cannot be associated to a remote bus. The rest of the magnitudes can be linked to a bus where the transformer is not directly connected. In this sense, the transformer parameters are adjusted to control the voltage and power flow in the AC and DC sides.

Table 5: Transformer specified magnitudes and resulting bus types.

Controlled	Description
$\overline{P_f, P_t}$	Active power controlled on the from and to sides
$Q_f^{"},P_t$	Reactive power controlled on the from and to sides
V_f , P_t	Voltage magnitude on the from and active power on the to side
δ_f,P_t	Voltage angle controlled on the from and active power on the to side
P_f, Q_t	Active power controlled on the from and reactive power on the to side
Q_f,Q_t	Reactive power controlled on the from and to sides
V_f,Q_t	Voltage magnitude on the from and reactive power on the to side
δ_f,Q_t	Voltage angle controlled on the from and reactive power on the to side
P_f, V_t	Active power controlled on the from and voltage on the to side
Q_f, V_t	Reactive power controlled on the from and voltage on the to side
V_f, V_t	Voltage magnitude controlled on the from and to sides
δ_f,V_t	Voltage angle controlled on the from and voltage on the to side
P_f, δ_t	Active power controlled on the from and voltage angle on the to side
Q_f,δ_t	Reactive power controlled on the from and voltage angle on the to side
$V_f,\ \delta_t$	Voltage magnitude on the from and voltage angle on the to side
$\delta_f,~\delta_t$	Voltage angle controlled on the from and to sides
P_f	Active power controlled on the from side
Q_f	Reactive power controlled on the from side
V_f	Voltage magnitude controlled on the from side
δ_f	Voltage angle controlled on the from side
P_t	Active power controlled on the to side
Q_t	Reactive power controlled on the to side
V_t	Voltage magnitude controlled on the to side
$_{-}$	Voltage angle controlled on the to side

(Think about controlling nodal vs branch magnitudes, as here we are controlling branch magnitudes)

5 Generalized power flow

Adopting the common methodology of assuming each node on the system belongs to a given bus category, where traditionally we only have PQ, PV and slack buses, we can extend this concept to include all the possible combinations of controlled magnitudes. This is a generalization of the power flow problem as the bus type will not be predefined, but rather it will be determined by the controlled magnitudes. To start this generalization, four sets of indices are stored:

- i_p : set of buses with controlled P.
- i_q : set of buses with controlled Q.
- i_{δ} : set of buses with controlled δ .
- i_v : set of buses with controlled V.

Following this logic, the sets where the magnitudes are not controlled can also be defined:

- \bar{i}_p : set of buses with unknown P.
- \bar{i}_q : set of buses with unknown Q.
- \bar{i}_{δ} : set of buses with unknown δ .
- \bar{i}_v : set of buses with unknown V.

The power flow problem is then solved by iterating over the buses and applying the corresponding equations. Eventually, the bus type can be determined by the intersection of the sets. For example, if a bus has controlled P and Q, then it belongs to the set $i_p \cap i_q$. The same applies to the rest of the combinations. However, the bus type is not really needed in the formulation that follows.

Then, the indexing works as indicated below:

- P equations are to be applied to the set i_p .
- Q equations are to be applied to the set i_q .
- The algorithm solves for the set of $\delta \in i_{\delta}$ and $V \in i_{v}$.
- It has to be guaranteed that $\operatorname{len}(i_p) + \operatorname{len}(i_q) = \operatorname{len}(\bar{i}_{\delta}) + \operatorname{len}(\bar{i}_v)$, that is, the number of controlled P and Q equations matches with the total voltage unknowns.

It is also important to note that by adopting this methodology, remote controls are possible. For example, a generator can control the voltage of a bus where it is not directly connected to. This is a common practice in power systems, where the voltage of a bus is regulated by a generator located in a nearby bus. Figure 7 exemplifies this situation.

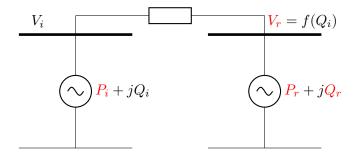


Figure 7: Representation of a remote control (in red, controlled magnitudes).

In this scenario, the generator located in bus i controls the voltage of bus r. This is a common practice in power systems, where the voltage of a bus is regulated by a generator located in a nearby bus. Hence, bus r becomes a PQV bus, whereas bus i is only a P bus. As Q_i is employed to regulate V_r , if at some point the reactive power limit is reached, then Q_i should stay at the reached limit and V_r should become unregulated. It is important to consider this mapping between variables as this information needs to be passed to the solver.

There are two classes of items to consider: passive and active ones. Passive elements are modelled through admittances, whereas active elements can be of the type branch devices or shunt devices. The particularities are captured below:

- Branch devices: such as controlled transformers or AC/DC links. They are connected to the rest of the system through their powers P_f, Q_f, P_t, Q_t .
- Shunt devices: they are modelled following the ZIP model, and they are connected to the rest of the system through their powers P and Q.

The sets of equations to consider are the nodal balances at each bus, as well as the expressions defining the behavior of controlled transformers and AC/DC links. The nodal balances are given by:

$$P_{\text{zip}} + jQ_{\text{zip}} = VY_{\text{bus}}^*V^* + C_f^{\text{acdc}}(P_f^{\text{acdc}} + jQ_f^{\text{acdc}}) + C_t^{\text{acdc}}(P_t^{\text{acdc}} + jQ_t^{\text{acdc}}) + C_f^{\text{tr}}(P_f^{\text{tr}} + jQ_f^{\text{tr}}) + C_t^{\text{tr}}(P_t^{\text{tr}} + jQ_t^{\text{tr}}),$$

$$\tag{1}$$

where P_{zip} and Q_{zip} are the active and reactive powers of the ZIP model, V is the voltage vector, Y_{bus} is the bus admittance matrix only composed with passive elements, C_f^{acdc} and C_t^{acdc} are the from and to connectivity matrices sides of AC/DC links, and C_f^{tr} and C_t^{tr} are the from and to connectivity matrices of controlled transformers. The nodal balances are to be applied to the set of buses with known P and Q, that is, i_p and i_q respectively.

The expressions defining the behavior of controlled transformers are:

$$P_f^{\text{tr}} + jQ_f^{\text{tr}} = V_f^2 \frac{Y_s^* + Y_{sh}^*}{m^2} - V_f V_t^* \frac{Y_s^*}{me^{j\tau}},$$

$$P_t^{\text{tr}} + jQ_t^{\text{tr}} = V_t^2 (Y_s^* + Y_{sh}^*) - V_t V_f^* \frac{Y_s^*}{me^{-j\tau}}.$$
(2)

The expression defining the behavior of AC/DC links is simply the active power loss equation:

$$P_f^{\text{acdc}} + P_t^{\text{acdc}} = a + b \frac{\sqrt{P_f^{2,acdc} + Q_f^{2,acdc}}}{V_f} + c \frac{P_f^{2,acdc} + Q_f^{2,acdc}}{V_f^2}.$$
 (3)

- 6 Switching rules
- 7 Bibliography