



BEKASI-EAST JAKARTA AIRPORT AIR SIDE

Report

Degree: Master's degree in Aerospace Engineering **Course:** 220304 - Airports design and construction

Delivery date: 10-12-2017

Students: Abiétar Moreno, Sergi; Delgado Chicote, Miguel; Fernández Porta, Sergi;

Fernández Sanz, Sergio; Fontanes Molina, Pol and Vidal Pedrola, Xavier



Contents

Lis	st of	Tables			V
Lis	st of	Figures	i		vi
1	Airp	ort loc	ation and	d characterization	1
	1.1	Location	on		1
	1.2	Meteo	rology .		1
		1.2.1	Tempera	uture	1
		1.2.2	Wind .		2
2	Run	way de	sign		4
	2.1	Introdu	uction .		4
	2.2	Runwa	y Length		4
		2.2.1	Runway	1	4
			2.2.1.1	Reference Field Length	5
			2.2.1.2	Reference code	7
			2.2.1.3	Runway width and shoulders	9
			2.2.1.4	Declared distances	10
			2.2.1.5	Runway strips	10
			2.2.1.6	Runway End Saefty Areas (RESA)	11
			2.2.1.7	Clearway (CWY)	11
			2.2.1.8	Stopway (SWY)	11
		2.2.2	Runway	2	11
			2.2.2.1	Reference Field Length	11
			2.2.2.2	Reference code	14
			2.2.2.3	Runway width and shoulders	16
			2.2.2.4	Declared distances	16
			2.2.2.5	Runway strips	17
			2.2.2.6	Stopway (SWY)	17
			2.2.2.7	Clearway (CWY)	17
3	Taxi	way de	sign		18
	3.1	Introdu	uction .		18

AIR SIDE

CONTENTS



	3.2	Taxiway width
	3.3	Taxiway turns
	3.4	Taxiway overwidths (sobreanchos)
	3.5	Taxiway shoulders
	3.6	Taxiway strips
	3.7	Rapid exit taxiways
		3.7.1 Introduction
		3.7.2 Number of rapid exit taxiways
		3.7.3 Design of rapid exit taxiways
4	Holo	ding positions 1
•	4.1	Introduction
	4.2	Minimum distance between holding position and runway
	4.3	Interference with critical and ILS sensible areas
	4.4	Interference with CWY and physical obstacles
	7.7	4.4.1 Separation between aircraft (guardas entre aeronaves)
	4.5	Final design of holding positions
	4.5	Tillal design of holding positions
5	Apro	on design 2
	5.1	Introduction
	5.2	Apron taxiways
	5.3	Aircraft stands
		5.3.1 General dimensions of aircraft stands
		5.3.2 Dimensions for reference aircraft
		5.3.2.1 B777
		5.3.2.2 B737
		5.3.3 Aircraft stands organization
	5.4	Apron trajectories
	5.5	Service ways in apron
	5.6	Terminal connections
6	Mar	kings 2
•	6.1	Runway markings
	0.1	6.1.1 Runway centerline markings
		6.1.2 Runway side strip markings
		6.1.3 Runway threshold markings
		6.1.4 Runway Idesignation marking
		6.1.5 Runway aiming point markings
		6.1.6 Runway touchdown zone markings
	6.2	Taxiway markings
	0.2	6.2.1 Taxiway centerline markings
		6.2.2 Taxiway strip markings
		U.Z.Z Taniway Sulp markings

CONTENTS



6.2.4 Intermediate holding position markings 22 6.2.5 Runway entry holding position markings 27 6.2.6 Mandatory instruction markings 27 6.3 Apron markings 22 6.3.1 Apron boundary markings 23 6.3.2 Apron boundary markings 25 6.3.3 End of aircraft movement area markings 27 6.3.4 Stand lead in line for multiple useable parking stands 27 6.3.5 Equipment parking line markings 22 6.3.6 Stand safety line markings 22 6.3.7 Aircraft stop line markings 23 6.3.8 Aircraft stand markings 25 6.3.9 Service way markings 26 7.1 Runway lights 29 7.1.1 Approach slope indication systems 29 7.1.2 Approach slope indication systems 29 7.1.3 Runway threshold identification lights 29 7.1.4 Runway threshold and wing bar lights 29 7.1.5 Runway threshold and wing bar lights 29 7.1.6 Runway threshold a			6.2.3	Taxiway holding position markings	27
6.2.6 Mandatory instruction marking 27 6.3 Apron markings 27 6.3.1 Apron lead in line markings 27 6.3.2 Apron boundary markings 27 6.3.3 End of aircraft movement area markings 27 6.3.4 Stand lead in line for multiple useable parking stands 27 6.3.5 Equipment parking line markings 27 6.3.6 Stand safety line markings 27 6.3.7 Aircraft stop line markings 27 6.3.8 Aircraft stand markings 27 6.3.9 Service way markings 27 7.1 Runway lights 28 7.1.1 Approach lights 29 7.1.2 Approach slope indication systems 29 7.1.3 Runway threshold identification lights 29 7.1.4 Runway edge lights 29 7.1.5 Runway threshold and wing bar lights 29 7.1.6 Runway repid exit lights 29 7.1.7 Touchdown zone lights 20 7.1.8 Runway rapid exit lights 29 7.2 Taxiway lights for a rapid exit taxiway 29 7.2.1 Taxiway light for a rapid exit taxiway 29 7.2.3 Taxiway lights for a rapid exit taxiway 29 7.2.4 Taxiway				- 1	
6.3 Apron markings 27 6.3.1 Apron lead in line markings 27 6.3.2 Apron boundary markings 27 6.3.3 End of aircraft movement area markings 27 6.3.4 Stand lead in line for multiple useable parking stands 27 6.3.5 Equipment parking line markings 27 6.3.6 Stand safety line markings 27 6.3.7 Aircraft stop line markings 27 6.3.8 Aircraft stand markings 27 6.3.9 Service way markings 27 7.1 Runway lights 29 7.1.1 Approach lights 29 7.1.2 Approach slope indication systems 29 7.1.3 Runway threshold identification lights 29 7.1.4 Runway edge lights 29 7.1.5 Runway threshold and wing bar lights 29 7.1.6 Runway end lights 29 7.1.7 Touchdown zone lights 29 7.1.8 Runway rapid exit lights 29 7.2.1 Taxiway lights 29 7.2.2 Taxiway lights for an exit taxiway 29 7.2.3 Taxiway light for a rapid exit taxiway 29 7.2.4 Taxiway edge lights 29 7.2.5 Stop bar lights 29					
6.3.1 Apron lead in line markings 27 6.3.2 Apron boundary markings 27 6.3.3 End of aircraft movement area markings 27 6.3.4 Stand lead in line for multiple useable parking stands 27 6.3.5 Equipment parking line markings 27 6.3.6 Stand safety line markings 27 6.3.7 Aircraft stop line markings 27 6.3.8 Aircraft stand markings 27 6.3.9 Service way markings 27 7.1 Runway lights 28 7.1.1 Approach lights 29 7.1.2 Approach slope indication systems 29 7.1.3 Runway threshold identification lights 29 7.1.4 Runway edge lights 29 7.1.5 Runway threshold and wing bar lights 29 7.1.6 Runway end lights 29 7.1.7 Touchdown zone lights 29 7.1.8 Runway rapid exit lights 29 7.2.1 Taxiway lights 29 7.2.2 Taxiway lights 29 7.2.2 Taxiway lights on a rapid exit taxiway 29 7.2.2 Taxiway lights on a rapid exit taxiway 29 7.2.5 Stop bar lights 29 7.3.1 Line and edge apron lights 29					
6.3.2 Apron boundary markings 27 6.3.3 End of aircraft movement area markings 27 6.3.4 Stand lead in line for multiple useable parking stands 27 6.3.5 Equipment parking line markings 27 6.3.6 Stand safety line markings 27 6.3.7 Aircraft stop line markings 27 6.3.8 Aircraft stand markings 27 6.3.9 Service way markings 27 7.1 Runway lights 29 7.1.1 Approach lights 29 7.1.2 Approach slope indication systems 29 7.1.3 Runway threshold identification lights 29 7.1.4 Runway edge lights 29 7.1.5 Runway threshold and wing bar lights 29 7.1.6 Runway edge lights 29 7.1.7 Touchdown zone lights 29 7.1.8 Runway rapid exit lights 29 7.2.1 Taxiway lights 29 7.2.2 Taxiway lights for an exit taxiway 29 7.2.3 Taxiway lights for an exit taxiway 29 <		6.3	Apron	markings	27
6.3.3 End of aircraft movement area markings 27 6.3.4 Stand lead in line for multiple useable parking stands 27 6.3.5 Equipment parking line markings 27 6.3.6 Stand safety line markings 27 6.3.7 Aircraft stop line markings 27 6.3.8 Aircraft stand markings 27 6.3.9 Service way markings 27 7.1 Runway lights 29 7.1.1 Approach lights 29 7.1.2 Approach slope indication systems 29 7.1.3 Runway threshold identification lights 29 7.1.4 Runway edge lights 29 7.1.5 Runway threshold and wing bar lights 29 7.1.6 Runway end lights 29 7.1.7 Touchdown zone lights 29 7.1.8 Runway rapid exit lights 29 7.2.1 Taxiway lights 29 7.2.2 Taxiway lights for an exit taxiway 29 7.2.2 Taxiway lights for an exit taxiway 29 7.2.4 Taxiway lights for an exit taxiway 29 <t< th=""><th></th><th></th><th>6.3.1</th><th>Apron lead in line markings</th><th>27</th></t<>			6.3.1	Apron lead in line markings	27
6.3.4 Stand lead in line for multiple useable parking stands 27 6.3.5 Equipment parking line markings 27 6.3.6 Stand safety line markings 27 6.3.7 Aircraft stop line markings 27 6.3.8 Aircraft stand markings 27 6.3.9 Service way markings 27 7 Lights 28 7.1 Runway lights 29 7.1.1 Approach lights 29 7.1.2 Approach slope indication systems 29 7.1.3 Runway threshold identification lights 29 7.1.4 Runway edge lights 29 7.1.5 Runway threshold and wing bar lights 29 7.1.6 Runway edge lights 29 7.1.7 Touchdown zone lights 29 7.1.8 Runway rapid exit lights 29 7.2.1 Taxiway lights 29 7.2.2 Taxiway lights for an exit taxiway 29 7.2.1 Taxiway lights for a rapid exit taxiway 29 7.2.4 Taxiway lights 29 7.2.5 Stop bar lights<			6.3.2	Apron boundary markings	27
6.3.5 Equipment parking line markings 27 6.3.6 Stand safety line markings 27 6.3.7 Aircraft stop line markings 27 6.3.8 Aircraft stand markings 27 6.3.9 Service way markings 27 7 Lights 28 7.1 Runway lights 29 7.1.1 Approach lights 29 7.1.2 Approach slope indication systems 29 7.1.3 Runway threshold identification lights 29 7.1.4 Runway edge lights 29 7.1.5 Runway threshold and wing bar lights 29 7.1.6 Runway end lights 29 7.1.7 Touchdown zone lights 29 7.1.8 Runway rapid exit lights 29 7.1.8 Runway rapid exit lights 29 7.2.1 Taxiway lights 29 7.2.2 Taxiway lights for an exit taxiway 29 7.2.2 Taxiway lights for a rapid exit taxiway 29 7.2.5 Stop bar lights 29 7.2.6 Intermediate holding point lights <			6.3.3	End of aircraft movement area markings	27
6.3.6 Stand safety line markings 27 6.3.7 Aircraft stop line markings 27 6.3.8 Aircraft stand markings 27 6.3.9 Service way markings 27 7 Lights 28 7.1 Runway lights 29 7.1.1 Approach lights 29 7.1.2 Approach slope indication systems 29 7.1.3 Runway threshold identification lights 29 7.1.4 Runway edge lights 29 7.1.5 Runway threshold and wing bar lights 29 7.1.6 Runway end lights 29 7.1.7 Touchdown zone lights 29 7.1.8 Runway rapid exit lights 29 7.2.1 Taxiway lights 29 7.2.2 Taxiway lights for an exit taxiway 29 7.2.1 Taxiway lights for a rapid exit taxiway 29 7.2.4 Taxiway lights 29 7.2.5 Stop bar lights 29 7.2.6 Intermediate holding point lights 29 7.3.1 Line and edge apron lighting 29			6.3.4	Stand lead in line for multiple useable parking stands	27
6.3.7 Aircraft stop line markings 27 6.3.8 Aircraft stand markings 27 6.3.9 Service way markings 27 7 Lights 28 7.1 Runway lights 29 7.1.1 Approach lights 29 7.1.2 Approach slope indication systems 29 7.1.3 Runway threshold identification lights 29 7.1.4 Runway edge lights 29 7.1.5 Runway threshold and wing bar lights 29 7.1.6 Runway end lights 29 7.1.7 Touchdown zone lights 29 7.1.8 Runway rapid exit lights 29 7.2.1 Taxiway lights 29 7.2.2 Taxiway lights for an exit taxiway 29 7.2.2 Taxiway lights for a rapid exit taxiway 29 7.2.3 Taxiway lights for a rapid exit taxiway 29 7.2.4 Taxiway edge lights 29 7.2.5 Stop bar lights 29 7.2.6 Intermediate holding point lights 29 7.3.1 Line and edge apron lighting 29 7.3.2 Projector based apron lighting 29 7.3.3 Visual guidancd system for parking 29 8 Signs 30 8.1 Mandatory instruction si			6.3.5	Equipment parking line markings	27
6.3.8 Aircraft stand markings 27 6.3.9 Service way markings 27 7 Lights 28 7.1 Runway lights 29 7.1.1 Approach slope indication systems 29 7.1.2 Approach slope indication systems 29 7.1.3 Runway threshold identification lights 29 7.1.4 Runway edge lights 29 7.1.5 Runway threshold and wing bar lights 29 7.1.6 Runway end lights 29 7.1.7 Touchdown zone lights 29 7.1.8 Runway rapid exit lights 29 7.2 Taxiway lights 29 7.2.1 Taxiway lights 29 7.2.2 Taxiway lights for an exit taxiway 29 7.2.2 Taxiway light for a rapid exit taxiway 29 7.2.4 Taxiway edge lights 29 7.2.5 Stop bar lights 29 7.2.6 Intermediate holding point lights 29 7.3 Apron lights 29 7.3.1 Line and edge apron lighting 29 7.3.2 Projector based apron lighting 29 7.3.3 Visual guidancd system for parking 29 8 Signs 8.1 Mandatory instruction signs 30 8.2 Info			6.3.6	Stand safety line markings	27
6.3.9 Service way markings 27 7 Lights 28 7.1 Runway lights 29 7.1.1 Approach slope indication systems 29 7.1.2 Approach slope indication systems 29 7.1.3 Runway threshold identification lights 29 7.1.4 Runway edge lights 29 7.1.5 Runway threshold and wing bar lights 29 7.1.6 Runway end lights 29 7.1.7 Touchdown zone lights 29 7.1.8 Runway rapid exit lights 29 7.2.1 Taxiway lights 29 7.2.1 Taxiway lights 29 7.2.2 Taxiway light for an exit taxiway 29 7.2.2 Taxiway light for a rapid exit taxiway 29 7.2.4 Taxiway edge lights 29 7.2.5 Stop bar lights 29 7.2.6 Intermediate holding point lights 29 7.3.1 Line and edge apron lights 29 7.3.2 Projector based apron lighting 29 7.3.3 Visual guidancd system for parking 29 8 Signs 31 8.1 Mandatory instruction signs 30 8.2 Information signs 30			6.3.7	Aircraft stop line markings	27
7 Lights 26 7.1 Runway lights 25 7.1.1 Approach lights 25 7.1.2 Approach slope indication systems 25 7.1.3 Runway threshold identification lights 26 7.1.4 Runway edge lights 26 7.1.5 Runway threshold and wing bar lights 26 7.1.6 Runway end lights 26 7.1.7 Touchdown zone lights 26 7.1.8 Runway rapid exit lights 29 7.2 Taxiway lights 29 7.2.1 Taxiway lights 29 7.2.2 Taxiway lights for an exit taxiway 29 7.2.3 Taxiway lights for a rapid exit taxiway 29 7.2.4 Taxiway edge lights 29 7.2.5 Stop bar lights 29 7.2.6 Intermediate holding point lights 29 7.3.1 Line and edge apron lights 29 7.3.2 Projector based apron lighting 29 7.3.3 Visual guidancd system for parking 29 8 Signs 30 8.1 Mandatory instruction signs 30 8.2 Information signs 30			6.3.8	Aircraft stand markings	27
7.1 Runway lights			6.3.9	Service way markings	27
7.1 Runway lights	7	Liah	ıtc		28
7.1.1 Approach lights 26 7.1.2 Approach slope indication systems 26 7.1.3 Runway threshold identification lights 26 7.1.4 Runway edge lights 26 7.1.5 Runway threshold and wing bar lights 26 7.1.6 Runway end lights 25 7.1.7 Touchdown zone lights 26 7.1.8 Runway rapid exit lights 29 7.2 Taxiway lights 29 7.2.1 Taxiway lights 29 7.2.2 Taxiway lights for an exit taxiway 29 7.2.3 Taxiway light for a rapid exit taxiway 29 7.2.4 Taxiway edge lights 26 7.2.5 Stop bar lights 26 7.2.6 Intermediate holding point lights 26 7.3.1 Line and edge apron lights 26 7.3.2 Projector based apron lighting 29 7.3.3 Visual guidancd system for parking 29 8 Signs 30 8.1 Mandatory instruction signs 30 8.2 Information signs 30	•	_		ov lights	
7.1.2 Approach slope indication systems 7.1.3 Runway threshold identification lights 2.5 7.1.4 Runway edge lights 7.1.5 Runway threshold and wing bar lights 7.1.6 Runway end lights 7.1.7 Touchdown zone lights 7.1.8 Runway rapid exit lights 7.2 Taxiway lights 7.2.1 Taxiway lights 7.2.2 Taxiway lights for an exit taxiway 7.2.3 Taxiway light for a rapid exit taxiway 7.2.4 Taxiway edge lights 7.2.5 Stop bar lights 7.3 Apron lights 7.3 Apron lights 7.3.1 Line and edge apron lighting 7.3.2 Projector based apron lighting 7.3.3 Visual guidancd system for parking 8 Signs 8.1 Mandatory instruction signs 8.2 Information signs 30 30 30 30 30 30 30 30 30 30 30 30 30		7.1			
7.1.3 Runway threshold identification lights 26 7.1.4 Runway edge lights 25 7.1.5 Runway threshold and wing bar lights 26 7.1.6 Runway end lights 29 7.1.7 Touchdown zone lights 29 7.1.8 Runway rapid exit lights 29 7.2 Taxiway lights 29 7.2.1 Taxiway lights 29 7.2.2 Taxiway lights for an exit taxiway 29 7.2.3 Taxiway light for a rapid exit taxiway 29 7.2.4 Taxiway edge lights 20 7.2.5 Stop bar lights 20 7.2.6 Intermediate holding point lights 29 7.3.1 Line and edge apron lights 29 7.3.2 Projector based apron lighting 20 7.3.3 Visual guidancd system for parking 20 8 Signs 30 8.1 Mandatory instruction signs 30 8.2 Information signs 30					
7.1.4 Runway edge lights 25 7.1.5 Runway threshold and wing bar lights 25 7.1.6 Runway end lights 25 7.1.7 Touchdown zone lights 26 7.1.8 Runway rapid exit lights 26 7.2 Taxiway lights 26 7.2.1 Taxiway lights 26 7.2.2 Taxiway lights for an exit taxiway 26 7.2.3 Taxiway light for a rapid exit taxiway 26 7.2.4 Taxiway edge lights 26 7.2.5 Stop bar lights 26 7.2.6 Intermediate holding point lights 26 7.3 Apron lights 26 7.3.1 Line and edge apron lights 26 7.3.2 Projector based apron lighting 26 7.3.3 Visual guidancd system for parking 26 8 Signs 30 8.1 Mandatory instruction signs 30 8.2 Information signs 30				•	
7.1.5 Runway threshold and wing bar lights 25 7.1.6 Runway end lights 25 7.1.7 Touchdown zone lights 26 7.1.8 Runway rapid exit lights 26 7.2 Taxiway lights 26 7.2.1 Taxiway lights for an exit taxiway 26 7.2.2 Taxiway light for a rapid exit taxiway 26 7.2.3 Taxiway edge lights 26 7.2.4 Taxiway edge lights 26 7.2.5 Stop bar lights 26 7.2.6 Intermediate holding point lights 26 7.3 Apron lights 26 7.3.1 Line and edge apron lighting 26 7.3.2 Projector based apron lighting 26 7.3.3 Visual guidancd system for parking 26 8 Signs 30 8.1 Mandatory instruction signs 30 8.2 Information signs 30					
7.1.6 Runway end lights 29 7.1.7 Touchdown zone lights 29 7.1.8 Runway rapid exit lights 29 7.2 Taxiway lights 29 7.2.1 Taxiway lights for an exit taxiway 29 7.2.2 Taxiway light for a rapid exit taxiway 29 7.2.3 Taxiway lights for an exit taxiway 29 7.2.4 Taxiway edge lights 29 7.2.5 Stop bar lights 29 7.2.6 Intermediate holding point lights 29 7.3 Apron lights 29 7.3.1 Line and edge apron lighting 29 7.3.2 Projector based apron lighting 29 7.3.3 Visual guidancd system for parking 29 8 Signs 30 8.1 Mandatory instruction signs 30 8.2 Information signs 30					
7.1.7 Touchdown zone lights 29 7.1.8 Runway rapid exit lights 29 7.2 Taxiway lights 29 7.2.1 Taxiway lights for an exit taxiway 29 7.2.2 Taxiway light for a rapid exit taxiway 29 7.2.3 Taxiway light for a rapid exit taxiway 29 7.2.4 Taxiway edge lights 29 7.2.5 Stop bar lights 29 7.2.6 Intermediate holding point lights 29 7.3 Apron lights 29 7.3.1 Line and edge apron lights 29 7.3.2 Projector based apron lighting 29 7.3.3 Visual guidancd system for parking 29 8 Signs 30 8.1 Mandatory instruction signs 30 8.2 Information signs 30					
7.1.8 Runway rapid exit lights 29 7.2 Taxiway lights 29 7.2.1 Taxiway lights 29 7.2.2 Taxiway lights for an exit taxiway 29 7.2.3 Taxiway light for a rapid exit taxiway 29 7.2.4 Taxiway edge lights 29 7.2.5 Stop bar lights 29 7.2.6 Intermediate holding point lights 29 7.3 Apron lights 29 7.3.1 Line and edge apron lights 29 7.3.2 Projector based apron lighting 29 7.3.3 Visual guidancd system for parking 29 8 Signs 30 8.1 Mandatory instruction signs 30 8.2 Information signs 30				, ,	
7.2 Taxiway lights 29 7.2.1 Taxiway lights 29 7.2.2 Taxiway lights for an exit taxiway 29 7.2.3 Taxiway light for a rapid exit taxiway 29 7.2.4 Taxiway edge lights 29 7.2.5 Stop bar lights 29 7.2.6 Intermediate holding point lights 29 7.3 Apron lights 29 7.3.1 Line and edge apron lights 29 7.3.2 Projector based apron lighting 29 7.3.3 Visual guidancd system for parking 29 8 Signs 30 8.1 Mandatory instruction signs 30 8.2 Information signs 30				_	
7.2.1 Taxiway lights 29 7.2.2 Taxiway lights for an exit taxiway 29 7.2.3 Taxiway light for a rapid exit taxiway 29 7.2.4 Taxiway edge lights 29 7.2.5 Stop bar lights 29 7.2.6 Intermediate holding point lights 29 7.3 Apron lights 29 7.3.1 Line and edge apron lights 29 7.3.2 Projector based apron lighting 29 7.3.3 Visual guidancd system for parking 29 8 Signs 30 8.1 Mandatory instruction signs 30 8.2 Information signs 30		7.2			
7.2.2 Taxiway lights for an exit taxiway 29 7.2.3 Taxiway light for a rapid exit taxiway 29 7.2.4 Taxiway edge lights 29 7.2.5 Stop bar lights 29 7.2.6 Intermediate holding point lights 29 7.3 Apron lights 29 7.3.1 Line and edge apron lights 29 7.3.2 Projector based apron lighting 29 7.3.3 Visual guidancd system for parking 29 8 Signs 30 8.1 Mandatory instruction signs 30 8.2 Information signs 30				• •	
7.2.3 Taxiway light for a rapid exit taxiway 29 7.2.4 Taxiway edge lights 29 7.2.5 Stop bar lights 29 7.2.6 Intermediate holding point lights 29 7.3 Apron lights 29 7.3.1 Line and edge apron lights 29 7.3.2 Projector based apron lighting 29 7.3.3 Visual guidancd system for parking 29 8 Signs 30 8.1 Mandatory instruction signs 30 8.2 Information signs 30			7.2.2	• •	
7.2.4 Taxiway edge lights 29 7.2.5 Stop bar lights 29 7.2.6 Intermediate holding point lights 29 7.3 Apron lights 29 7.3.1 Line and edge apron lighting 29 7.3.2 Projector based apron lighting 29 7.3.3 Visual guidancd system for parking 29 8 Signs 30 8.1 Mandatory instruction signs 30 8.2 Information signs 30			7.2.3		
7.2.5 Stop bar lights 29 7.2.6 Intermediate holding point lights 29 7.3 Apron lights 29 7.3.1 Line and edge apron lights 29 7.3.2 Projector based apron lighting 29 7.3.3 Visual guidancd system for parking 29 8 Signs 30 8.1 Mandatory instruction signs 30 8.2 Information signs 30			7.2.4		
7.2.6 Intermediate holding point lights 29 7.3 Apron lights 29 7.3.1 Line and edge apron lights 29 7.3.2 Projector based apron lighting 29 7.3.3 Visual guidancd system for parking 29 8 Signs 30 8.1 Mandatory instruction signs 30 8.2 Information signs 30			7.2.5		
7.3 Apron lights 29 7.3.1 Line and edge apron lights 29 7.3.2 Projector based apron lighting 29 7.3.3 Visual guidancd system for parking 29 8 Signs 30 8.1 Mandatory instruction signs 30 8.2 Information signs 30			7.2.6		
7.3.1 Line and edge apron lights		7.3	Apron		
7.3.2 Projector based apron lighting			-		
7.3.3 Visual guidancd system for parking			7.3.2		
8.1 Mandatory instruction signs			7.3.3		
8.1 Mandatory instruction signs	_	٥.			
8.2 Information signs	8	_			
		-		•	
9 High-voltage electrical system 31		8.2	Intorm	ation signs	30
	9	High	1-voltag	ge electrical system	31

CONTENTS



	9.1	Electrical system general design	31
	9.2	Connection sub-stations	31
	9.3	Electric powerplant	31
	9.4	Electrical transformation center	31
	9.5	Channeling and distribution of the electrical system	31
10	Med	ium voltage electrical system	32
	10.1	Beacon circuits	33
		10.1.1 Runway centerline lighting system	33
		10.1.2 Taxiway centerline lighting system	33
		10.1.3 Runway and taxiway centerlines lighting system	33
		10.1.4 Approach lighting system	33
		$10.1.5 \ \ \text{Touchdown zone lighting system} $	33
		10.1.6 Runway header lighting system	33
		10.1.7 RETIL electrical circuit	33
		10.1.8 PAPI electrical circuit	33
		10.1.9 Stop bar electrical circuit	33
		10.1.10 Signs electrical circuit	33
	10.2	Regulation chambers	33
	10.3	Wire channeling	33
11	Aero	nautical limitation surfaces	34
	11.1	Physical limitation surfaces	34
	11.2	ILS limitation surfaces	34
	11.3	Localizer limitation surfaces	34
	11.4	Gliding trajectory protection limitation surfaces	34
12	Ribli	ogranhy	35



List of Tables

2.2.1	Declared distances of Runway 1	10
2.2.2	Declared distances of Runway 2	16
5.3.1	Boeing 777 distances and dimensions	24
5.3.2	Boeing 737 distances and dimensions	24

AIR SIDE R - v



List of Figures

1.2.1	Wind Rose Graph	2
1.2.2	Coefficient of use depending on the orientation	3
2.2.1	Maximum weights of the B777 depending on its configuration	5
2.2.2	Relation between the MTOW and the takeoff distance	6
2.2.3	Maximum A330's weights	6
2.2.4	Boeing 777-300ER dimensions	8
2.2.5	Reference code given by the ICAO	9
2.2.6	Runway width according to ICAO	9
2.2.7	Declared distances on CAD	10
2.2.8	Maximum weights of the B737 depending on its configuration	12
2.2.9	Relation between the MTOW and the takeoff distance	13
2.2.10	Maximum weights of the A320 depending on its configuration	14
2.2.11	Boeing 737-800 dimensions.	15
2.2.12	Runway width according to OACI	16
5.1.1	Runway width according to OACI.	20
5.2.1	Design distances for taxiways according to ICAO	21
5.3.1	Clearance distances depending on the reference letter.	22
5.3.2	Clearance distances depending on the reference letter	23

AIR SIDE R - vi



1 | Airport location and characterization

1.1 Location

The main influence on the airport location is the presence of other airports in the area. Since Jakarta has already one airport, the 18th worldwide, the location has to be selected carefully. Other factors that influenced the airports final location were the ease to provide the airport with good connections to the city and a wide area available in order to increase the airports infrastructure if needed in the future. After considering all those factors, the location decided can be defined by the following coordinates:

- Latitude: 6°08'21"

- Longitude: 107°06'40"

- Altitude: 30meters approximately.

Since the area chosen is extremely marshy, the excavations to deeper levels are going to be avoided as much as possible due to its difficulties and cost. However, that type of terrain gives us some advantage due to its flatness.

1.2 Meteorology

1.2.1 Temperature

The reference temperature of airports is important to be calculated as soon as possible since it has an effect on the performance of the airplanes during the phases of landing and takeoff.

In order to calculate this temperature, the definition given by the OACI will be used. OACI



states that: "The aerodrome reference temperature shall be the monthly mean of the daily maximum temperatures for the hottest month of the year (the hottest month being that which has the highest monthly mean temperature). This temperature shall be averaged over a period of years".

Taking into account the hypothesis that the temperatures obtained on Soekarno-Hatta Airport can also be used in order to calculate our reference temperature due to the fact that both airports are only separated by a distance of 60km, a comparison study has been made.

The final reference temperature obtained is $T_{ref} = 32,38^{\circ}C$.

The temperature values and study is further detailed in the attachments.

1.2.2 Wind

In order to calculate the influence of the winds the first thing done is the graph of the winds intensity and their direction. This graph is commonly called wind rose graph. The graph obtained making use of Microsoft Excel software is:

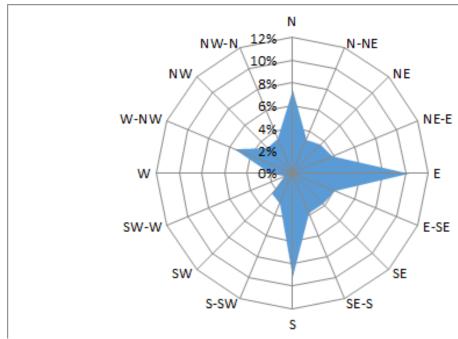


Figure 1.2.1: Wind Rose Graph

Once this step is done, the next thing to do is to calculate the coefficient of use by a diagram of frequencies. Following the recommendations given by the ICAO on the attachment 14, the maximum value that the transversal component can achieve is 37 km/h or 20 knots for a runway

R - 2

AIR SIDE



of > 1500m.

The diagram of frequencies basically creates a rectangular area that depends on the runway axis, the width of the runway and the maximum transversal component.

After calculating the coefficient of use by all the directions, the graph obtained is the following:



Figure 1.2.2: Coefficient of use depending on the orientation

As it can be see, the coefficient is higher than 95% in any direction. According to that, the final orientation chosen is SE-NW.



2 Runway design

2.1 Introduction

The runway is a key piece of the airport and the air side design due to the fact that defines the maximum dimensions of the operative air planes. Its function is to successfully guarantee the landing and takeoff operation.

In order to successfully define the runway, the instructions and requirements given in the Annex 14 given by the ICAO have been followed.

2.2 Runway Length

The reference field length is defined as the minimum distance needed in order to perform a takeoff operation with the maximum homologated takeoff weight using sea level conditions, without wind and considering 0° slope.

In order to calculate the runway length, the first step is to choose the most restrictive air plane that is going to operate on that runway. Afterwards, that length has to be corrected by the runway slope, the altitude of the airport and the mean temperature.

Due to the fact that the airport has two runways, from now on, the runway used for international flights will be referred as runway 1 and the one used for domestic flights will be named runway 2.

2.2.1 Runway 1

The biggest airplanes that will operate on this runway are the Boeing 777-300ER and the Airbus A330-300.



2.2.1.1 Reference Field Length

Starting with the B777-300ER, using the ACAP (Aircraft Characteristic for Airport Planning), the values of the MTOW (Maximum TakeOff Weight) and MLW (Maximum Landing Weight) can be obtained.

2.1.1 General Characteristics: Model 777-200LR. -300ER, 777F

CHARACTERISTICS	UNITS	777-200LR	777-300ER	777 -F
MAX DESIGN	POUNDS	768,000	777,000	768,800
TAXI WEIGHT	KILOGRAMS	348,358	352,442	348,722
MAX DESIGN	POUNDS	766,000	775,000	766,800
TAKEOFF WEIGHT	KILOGRAMS	347,452	351,535	347,815
MAX DESIGN	POUNDS	492,000	554,000	575,000
LANDING WEIGHT	KILOGRAMS	223,168	251,290	260,816
MAX DESIGN ZERO	POUNDS	461,000	524,000	547,000
FUEL WEIGHT	KILOGRAMS	209,106	237,683	248,115
OPERATING	POUNDS	320,000	370,000	318,300
EMPTY WEIGHT (1)	KILOGRAMS	145,150	167,829	144,379
MAX STRUCTURAL	POUNDS	141,000	154,000	228,700
PAYLOAD	KILOGRAMS	63,957	69,853	103,737
TYPICAL SEATING	TWO CLASS	279 (4)	339 (6)	N/A
CAPACITY	THREE CLASS	301 (5)	370 (7)	N/A
MAX CARGO	CUBIC FEET	5,656 (2)	7,552 (2)	22,371 (3)
LOWER DECK	CUBIC METERS	160.2 (2)	213.8 (2)	633.5 (3)
USABLE FUEL	U.S. GALLONS	47,890	47,890	47,890
	LITERS	181,283	181,283	181,283
	POUNDS	320,863	320,863	320,863
	KILOGRAMS	145,538	145,538	145,538

Figure 2.2.1: Maximum weights of the B777 depending on its configuration.

The next step is to calculate using the following graph the takeoff distance required with standard day + 15°C = 30°C and sea level conditions.



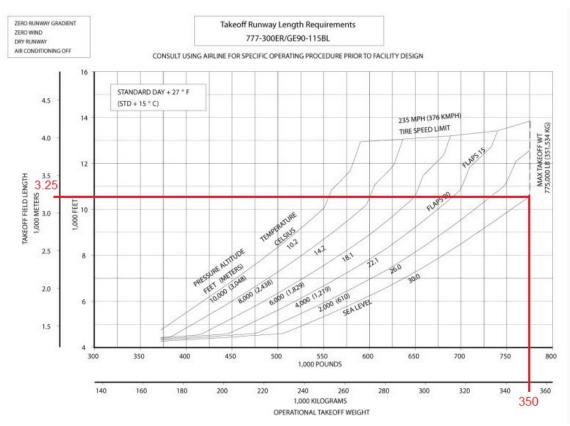


Figure 2.2.2: Relation between the MTOW and the takeoff distance.

As it is seen on the graph above, the length taken as reference (LCR) is 3.250m in a standard day $+15^{\circ}$ C and sea level conditions.

The same procedure has to be done with the Airbus A330-300 in order to compare which one is the most restrictive one. Using the ACAP (Aircraft Characteristic for Airport Planning), the MTOW and MLW obtained are the following:

	Aircraft Char	racteristics		100						
	WV000 WV001 WV002 WV003									
Maximum Taxi Weight (MTW)	212 900 kg	184 900 kg	212 900 kg	215 900 kg						
Maximum Ramp Weight (MRW)	(469 364 lb)	(407 635 lb)	(469 364 lb)	(475 978 lb)						
Maximum Take-Off Weight (MTOW)	212 000 kg	184 000 kg	212 000 kg	215 000 kg						
	(467 380 lb)	(405 650 lb)	(467 380 lb)	(473 994 lb)						
Maximum Landing Weight (MLW)	174 000 kg	174 000 kg	177 000 kg	177 000 kg						
	(383 604 lb)	(383 604 lb)	(390 218 lb)	(390 218 lb)						
Maximum Zero Fuel Weight	164 000 kg	164 000 kg	167 000 kg	167 000 kg						
(MZFW)	(361 558 lb)	(361 558 lb)	(368 172 lb)	(368 172 lb)						

Figure 2.2.3: Maximum A330's weights.

Since the difference on the MTOW and MLW between both planes is greater than a 50%,



the Boeing's Reference Field Length is chosen as the critical without calculating the Reference Field Length of the A330-300.

Once the most restrictive plane is chosen, the next step is to correct the length following ICAO's instructions. The equation used to correct the altitude difference is:

$$L_t = RFL * (1 + 0,07 * \frac{\Delta h}{300})$$

Solving the equation for a RFL of 3.250m and an increase on the altitude of 100m, the result obtained is 3326m. Since the temperature has already been corrected on the graph and the runway slope is going to be less than 0.5% and thus, it can be neglected, the final length will be 3.500m rounding up.

2.2.1.2 Reference code

Using the dimensions of the B777-300ER and the tables given by the ICAO, the number and letter that define the runway can be obtained.



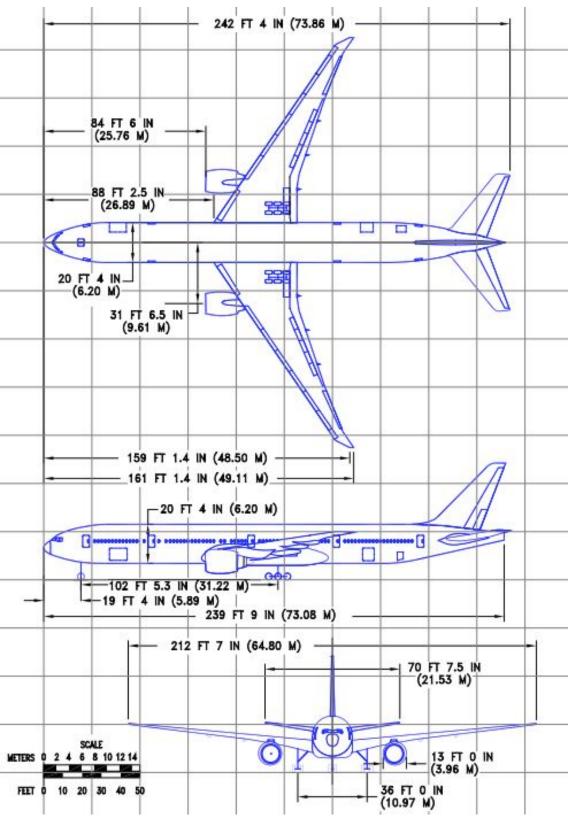


Figure 2.2.4: Boeing 777-300ER dimensions.



	Code element 1		Code element 2	2
Code number (1)	Aeroplane reference field length (2)	Code letter (3)	Wingspan (4)	Outer main gear wheel span ^a (5)
1	Less than 800 m	A	Up to but not including 15 m	Up to but not including 4.5 m
2	800 m up to but not including 1 200 m	В	15 m up to but not including 24 m	4.5 m up to but not including 6 m
3	1 200 m up to but not including 1 800 m	С	24 m up to but not including 36 m	6 m up to but not including 9 m
4	1 800 m and over	D	36 m up to but not including 52 m	9 m up to but not including 14 m
		E	52 m up to but not including 65 m	9 m up to but not including 14 m
		F	65 m up to but not including 80 m	14 m up to but not including 16 m

Figure 2.2.5: Reference code given by the ICAO.

Due to the RFL being higher than 1800m, the reference number of the runway is number 4 according to ICAO and due to the dimensions of the air plane B777-300ER, which has a span of 64.8m < 65m and a distance between the landing gear of 10.97m < 14m, the letter that defines the airport is E.

2.2.1.3 Runway width and shoulders

The runway width is obtained using the ICAO recommendations stated on the Annex 14 and the key reference of the runway.

			Code	letter		
Code number	Α	В	C	D	Е	F
I^a	18 m	18 m	23 m	_	_	_
2^a	23 m	23 m	30 m	123	_	_
3	30 m	30 m	30 m	45 m	_	_
4	-	_	45 m	45 m	45 m	60 m

Figure 2.2.6: Runway width according to ICAO.



As it can be seen, and remembering that our key reference is 4E, the minimum runway width needed is 45m. This value has to be further increased with the use of runway shoulders up to a minimum of 60m.

2.2.1.4 Declared distances

The calculations done in order to obtain the final value can be seen on the airside's attachments section 1.

To sum up, the final values obtained are:

Landing Distance Available	3.500m
TakeOff Distance Available (TODA)	4.460m
TakeOff Run Available (TORA)	3.760m
Accelerate-Stop Distance Available (ASDA)	4.360m

Table 2.2.1: Declared distances of Runway 1

An schematic figure will be attached in order to ease the understanding of the declared distances:



Figure 2.2.7: Declared distances on CAD.

2.2.1.5 Runway strips

The strip is a delimited area of terrain centred in the runway that has the function of reducing the air plane's risk of getting out of the runway.

According to ICAO's rule number 3.4.2 and 3.4.3, all the runways with a reference number of 4 must contain a strip in each side of the runway's axis. The minimum distance has to be 150m and has to be extended a minimum of 60m after the threshold. Following the rule 3.4.8, the first 150m from the threshold have to be separated at least 75m form the runway's axis. Past those 150m, the strip has to grow linearly until reaching the strip levelled zone.



2.2.1.6 Runway End Saefty Areas (RESA)

According to ICAO's rule number 3.5.1, the airport with a reference number of 4 has to have a runway end safety area that should extend over a distance of at least 90m. Furthermore, as it is said in the point 3.5.5, the width of a runway end safety area shall be at least twice that of the associated runway.

2.2.1.7 Clearway (CWY)

Following the recommendation number 3.6.2 and 3.6.3, the Clearway has its beginning at the end of the maximum takeoff distance available and its maximum length should be half that distance. Furthermore, the clearway should have a with of at least 75m on each side of the runway's axis.

2.2.1.8 **Stopway (SWY)**

When it comes to the stopway, following the ICAO's rules, the stopway shall have the same width as the runway with which it is associated.

2.2.2 Runway 2

In this case, the planes that are going to be evaluated are the Boeing 737-800 and the Airbus 320-200.

2.2.2.1 Reference Field Length

Searching the values of MTOW and MLW stated on the ACAP of the Boeing 737, the values obtained are 79.000kg for the MTOW and 66.300kg for the MLW.



CHARACTERISTICS	UNITS	MODEL 737-800, -800 WITH WINGLETS				
MAX DESIGN	POUNDS	156,000	173,000	174,900		
TAXI WEIGHT	KILOGRAMS	70,760	78,471	79,333		
MAX DESIGN	POUNDS	155,500	172,500	174,200		
TAKEOFF WEIGHT	KILOGRAMS	70,534	78,245	79,016		
MAX DESIGN	POUNDS	144,000	144,000	146,300		
LANDING WEIGHT	KILOGRAMS	65,317	65,317	66,361		
MAX DESIGN	POUNDS	136,000	136,000	138,300		
ZERO FUEL WEIGHT	KILOGRAMS	61,689	61,689	62,732		
OPERATING	POUNDS	91,300	91,300	91,300		
EMPTY WEIGHT (1)	KILOGRAMS	41,413	41,413	41,413		
MAX STRUCTURAL	POUNDS	44,700	44,700	47,000		
PAYLOAD	KILOGRAMS	20,276	20,276	21,319		
SEATING CAPACITY (1)	TWO-CLASS	160	160	160		
	ALL-ECONOMY	184	184	184		

Figure 2.2.8: Maximum weights of the B737 depending on its configuration.

As for the B777, the next step is to calculate using the following graph the takeoff distance required with standard day + $15^{\circ}C = 30^{\circ}C$ and sea level conditions using the MTOW.



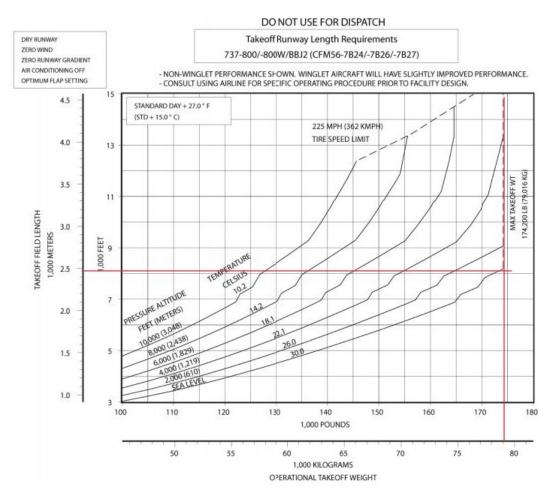


Figure 2.2.9: Relation between the MTOW and the takeoff distance.

The value of the RFL obtained is 2.450m approximately in standard day and sea level conditions.

The same procedure has to be done with the Airbus A320-200 in order to compare which one is the most restrictive one. Using the ACAP (Aircraft Characteristic for Airport Planning), the MTOW and MLW obtained are the following:



	Airc	raft Characterist	tics		
	WV000	WV001	WV002	WV003	WV004
Maximum Ramp Weight (MRW) Maximum Taxi Weight (MTW)	73 900 kg (162 922 lb)	68 400 kg (150 796 lb)	70 400 kg (155 205 lb)	75 900 kg (167 331 lb)	71 900 kg (158 512 lb)
Maximum Take-Off Weight (MTOW)	73 500 kg	68 000 kg	70 000 kg	75 500 kg	71 500 kg
	(162 040 lb)	(149 914 lb)	(154 324 lb)	(166 449 lb)	(157 630 lb)
Maximum Landing Weight	64 500 kg				
(MLW)	(142 198 lb)				
Maximum Zero Fuel Weight	60 500 kg				
(MZFW)	(133 380 lb)				

Figure 2.2.10: Maximum weights of the A320 depending on its configuration.

Due to the fact that the MTOW and the MLW of the B737 are higher than the A320 ones, the plane B737 is chosen as the critical for the design of the runway.

The next step is to correct the field length using the equation stated above, on the calculations for runway 1.

$$L_t = RFL * (1 + 0.07 * \frac{\Delta h}{300})$$

Solving the equation for a RFL of 2.450m and an increase on the altitude of 100m, the result obtained is 2500m. The same hypotheses used on the runway number 1 will be applied regarding the temperature and slope of the runway. Thus, the final length will be 2500m.

2.2.2.2 Reference code

Using the dimensions of the B737-800 and the tables given by the ICAO, the number and letter that define the runway can be obtained.



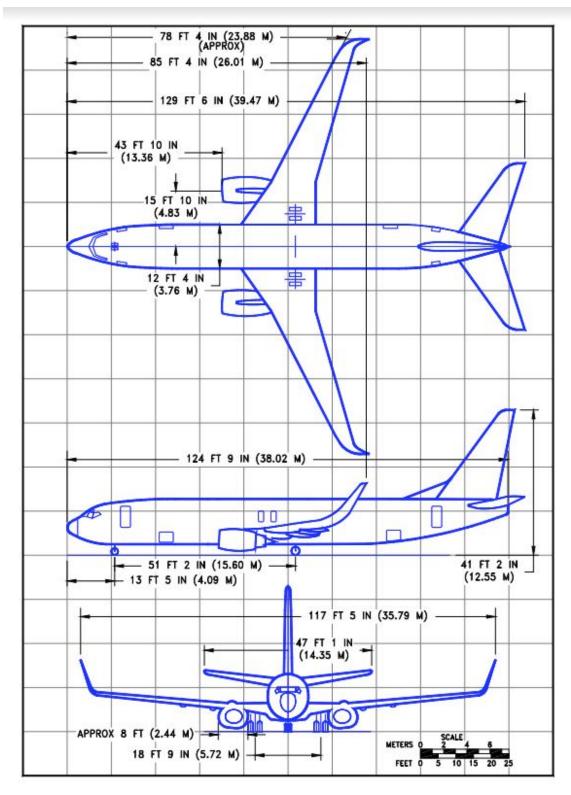


Figure 2.2.11: Boeing 737-800 dimensions.



Due to the RFL being higher than $1800 \, \text{m}$, the reference number of the runway is 4 according to ICAO and due to the dimensions of the air plane B737-800, which has a span of $35.8 \, \text{m} < 36 \, \text{m}$ and a distance between the landing gear of $6 \, \text{m} < 9 \, \text{m}$, the letter that defines the airport is C.

2.2.2.3 Runway width and shoulders

The runway width is obtained using the ICAO recommendations stated on the Annex 14 and the key reference of the runway.

	Code letter							
Code number	Α	В	C	D	E	F		
I^a	18 m	18 m	23 m	_	_	_		
2^a	23 m	23 m	30 m	123	_	_		
3	30 m	30 m	30 m	45 m	_	_		
4	_	_	45 m	45 m	45 m	60 m		

Figure 2.2.12: Runway width according to OACI.

As it can be seen, and remembering that our key reference is 4C, the minimum runway width needed is 45m. This value has to be further increased with the use of runway shoulders up to a minimum of 60m.

2.2.2.4 Declared distances

As for the runway 1, the calculations done in order to obtain the final value can be seen on the airside's attachments section 1.

To sum up, the final values obtained are:

Landing Distance Available	2.500m
TakeOff Distance Available (TODA)	3.760m
TakeOff Run Available (TORA)	4.460m
Accelerate-Stop Distance Available (ASDA)	4.360m

Table 2.2.2: Declared distances of Runway 2

R - 16

AIR SIDE



- 2.2.2.5 Runway strips
- 2.2.2.6 Stopway (SWY)
- 2.2.2.7 Clearway (CWY)



3 | Taxiway design

- 3.1 Introduction
- 3.2 Taxiway width
- 3.3 Taxiway turns
- 3.4 Taxiway overwidths (sobreanchos)
- 3.5 Taxiway shoulders
- 3.6 Taxiway strips
- 3.7 Rapid exit taxiways
- 3.7.1 Introduction
- 3.7.2 Number of rapid exit taxiways
- 3.7.3 Design of rapid exit taxiways



4 | Holding positions

- 4.1 Introduction
- 4.2 Minimum distance between holding position and runway
- 4.3 Interference with critical and ILS sensible areas
- 4.4 Interference with CWY and physical obstacles
- 4.4.1 Separation between aircraft (guardas entre aeronaves)
- 4.5 Final design of holding positions



5 Apron design

5.1 Introduction

The apron is the area of an airport where the aircraft are parked, unloaded or loaded, refuelled and boarded. It also has to cover the taxiways and the trajectories that air planes have to take in order to get to the principal taxiways or the station zones.

Another function that the apron has to full-fill is the creation of a service way that will allow all the different services needed by the plane to get to it and the creation of some waiting positions for them that will not obstacle the manoeuvres of the plane. Last but not least, the connection between air-side and land-side is under the responsibility of the apron.

Before moving into a more detailed explanation of each part that makes the apron, a general view is going to be attached in order to obtain a general idea of what is the apron.

	Code letter								
Code number	Α	В	C	D	Е	F			
I^a	18 m	18 m	23 m	_	_	21			
2^a	23 m	23 m	30 m	<u>126</u>	_	_			
3	30 m	30 m	30 m	45 m	_	_			
4	-	_	45 m	45 m	45 m	60 m			

Figure 5.1.1: Runway width according to OACI.

The sections of the apron that will be further explained are the apron taxiways, the aircraft stands, the apron trajectories, service ways and terminal connections.

AIR SIDE R - 20



5.2 Apron taxiways

Apron taxiways are designed in order to allow the aircraft to move from the principal taxiway to its specific apron. Due to the fact that our airport has two runways, the number of auxiliary taxiways is higher than a simpler airport. However, ICAO does not have a different criteria for these taxiways. Thus, the parameters and restrictions that apply on the auxiliary taxiways is the same than the principal ones.

Even though the airport is divided in two differenced parts, the domestic flights which have the B737 as most restrictive aircraft and the internationals flights with the B777 as critical air plane, the auxiliary taxiways are designed in order to allow the B777 to operate in the whole airport.

The line that limits the space where aircraft are allowed to taxi is an orange line surrounded by two white lines as it is stated on the ICAO's manual. Since the most restrictive reference letter is E, as it can be seen in the table attached below, the minimum distance between the taxiway's axis is 80m.

Code		Distance between taxiway centre line and runway centre line (metres)						Taxiway	Taxiway, other than aircraft stand	Aircraft stand taxilane centre line	Aircraft stand	
	In	strumen Code r			Non-instrument runways Code number			centre line to taxiway centre line (metres)	taxilane, centre line to object (metres)	to aircraft stand taxilane centre line (metres)	taxilane centre line to object (metres)	
letter	1	2	3	4	1	2	3	4				
(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)	(10)	(11)	(12)	(13)
A	82.5	82.5	-	:: -	37.5	47.5	-	-:	23	15.5	19.5	12
В	87	87	_	_	42	52	-	- 0	32	20	28.5	16.5
C	_	_	168	-	_	-	93	_	44	26	40.5	22.5
D	= 5	=	176	176	_	_	101	101	63	37	59.5	33.5
E	_		_	182.5	_	_	-	107.5	76	43.5	72.5	40
F	20		- 22	190	_	_	_	115	91	51	87.5	47.5

Note 1.— The separation distances shown in columns (2) to (9) represent ordinary combinations of runways and taxiways. The basis for development of these distances is given in the Acrodrome Design Manual (Doc 9157), Part 2.

Note 2.— The distances in columns (2) to (9) do not guarantee sufficient clearance behind a holding aeroplane to permit the passing of another aeroplane on a parallel taxiway. See the Aerodrome Design Manual (Doc 9157), Part 2.

Figure 5.2.1: Design distances for taxiways according to ICAO.

AIR SIDE



5.3 Aircraft stands

5.3.1 General dimensions of aircraft stands

In order to dimension the aircraft stands, the dimensions of the aircraft stated on their ACAP and the ICAO's recommendations have been followed. Starting with the recommendation, the following table shows the distance depending on the reference letter of the air plane.

Code letter	Clearance
A	3 m
B	3 m
C	4.5 m
D	7.5 m
E	7.5 m
F	7.5 m

Figure 5.3.1: Clearance distances depending on the reference letter.

In order to understand how the aircraft stands are shaped, the following image is attached:



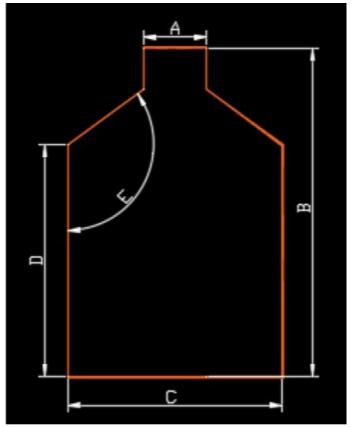


Figure 5.3.2: Clearance distances depending on the reference letter.

The next step is to explain how can each distance be obtained:

- A: this distance can be calculated by adding the maximum width of the air plane and the security margin stated on the table attached above.
- B: It can be dimensioned by adding two times the security margin stated by ICAO's recommendation and the aircraft length. The security margin is considered two times since the distance has to be respected in the front part and the rear part of the air plane.
- C: Once more, this distance can be obtained by adding the security margin on each side and the air plane's span.
- D: This distance can be calculated picking up the distance form C until the last airfoil and adding the contribution of the security margin.
- E: This distance required is geometrically more complex and can be obtained by creating a parallel line distanced the security margin from the line created from the tip of the last airfoil until the edge of the engine.



5.3.2 Dimensions for reference aircraft

Before stating all the distances, a reference point must be set. The centre of coordinates is placed in the nose of the plane, the x-axis is considered positive following the aircraft's direction, the y-axis is considered positive in the direction of the left half-wing and the z-axis is oriented to the ground.

5.3.2.1 B777

The dimensions of the air plane B777 are the following:

Span	64,8m
Length	73,86m
Length last airfoil	0,6m
Engine position x	25,76m
Wing tip coordinate	49,11m

Table 5.3.1: Boeing 777 distances and dimensions.

The security margin used on the B777 according to ICAO's table is 7,5m.

5.3.2.2 B737

Doing the same for the B737, the table obtained is the following:

Span	35,79m
Length	39,47m
Length last airfoil	2,13m
Engine position x	13,36m
Wing tip coordinate	23,88m

Table 5.3.2: Boeing 737 distances and dimensions.

R - 24

The security margin used on the B737 according to ICAO's table is 4,5m.



- 5.4 Apron trajectories
- 5.5 Service ways in apron
- **5.6** Terminal connections





6 Markings

0.1	Runway markings
6.1.1	Runway centerline markings

- 6.1.2 Runway side strip markings
- 6.1.3 Runway threshold markings
- 6.1.4 Runway Idesignation marking
- 6.1.5 Runway aiming point markings
- 6.1.6 Runway touchdown zone markings

6.2 Taxiway markings

- 6.2.1 Taxiway centerline markings
- 6.2.2 Taxiway strip markings
- 6.2.3 Taxiway holding position markings
- 6.2.4 Intermediate holding position markings
- 6.2.5 Runway entry holding position markings
- 6.2.6 Mandatory instruction marking

AIR SIDE





7 | Lights

7.1 Runway ligh	ts
-----------------	----

- 7.1.1 Approach lights
- 7.1.2 Approach slope indication systems
- 7.1.3 Runway threshold identification lights
- 7.1.4 Runway edge lights
- 7.1.5 Runway threshold and wing bar lights
- 7.1.6 Runway end lights
- 7.1.7 Touchdown zone lights
- 7.1.8 Runway rapid exit lights

7.2 Taxiway lights

- 7.2.1 Taxiway lights
- 7.2.2 Taxiway lights for an exit taxiway
- 7.2.3 Taxiway light for a rapid exit taxiway
- 7.2.4 Taxiway edge lights



8 | Signs

- 8.1 Mandatory instruction signs
- 8.2 Information signs



9 High-voltage electrical system

- 9.1 Electrical system general design
- 9.2 Connection sub-stations
- 9.3 Electric powerplant
- 9.4 Electrical transformation center
- 9.5 Channeling and distribution of the electrical system



AIR SIDE R - 32



10 | Medium voltage electrical system

1	Λ	1	D	_ •	
	O.		Beacon	CITCL	IITS

- 10.1.1 Runway centerline lighting system
- 10.1.2 Taxiway centerline lighting system
- 10.1.3 Runway and taxiway centerlines lighting system
- 10.1.4 Approach lighting system
- 10.1.5 Touchdown zone lighting system
- 10.1.6 Runway header lighting system
- 10.1.7 RETIL electrical circuit
- 10.1.8 PAPI electrical circuit
- 10.1.9 Stop bar electrical circuit
- 10.1.10 Signs electrical circuit

10.2 Regulation chambers

10.3 Wire channeling



11 | Aeronautical surfaces

limitation

- 11.1 Physical limitation surfaces
- 11.2 ILS limitation surfaces
- 11.3 Localizer limitation surfaces
- 11.4 Gliding trajectory protection limitation surfaces



12 | Bibliography

R - 35