An Introductory Guide to FreeRTOS on LPC2148

e-Y<mark>antra T</mark>eam

July 22, 2016





Contents

0.1	Introdi	action to RTOS
0.1		What is RTOS?
	0.1.2	Types of tasks in RTOS
0.2		s FreeRTOS
J	0.2.1	Advantage of FreeRTOS
	0.2.2	Drawbacks/Disadvantages (write some fancy word)
0.3	Require	7
0.4	-	up the environment
	0.4.1	Installing the softwares
	0.4.2	Creating a new project
0.5		g Started!
	0.5.1	DataTypes
	0.5.2	Variable Names
	0.5.3	Macros
	0.5.4	Creating Tasks
	0.5.5	Frequently used API's
0.6	MultiT	asking
	0.6.1	Code:
	0.6.2	Explanation
0.7	Introdu	action to semaphore
	0.7.1	Binary Semaphores
	0.7.2	Mutex
	0.7.3	Counting Semaphore
	0.7.4	Mutex vs Binary Semaphore
0.8	Binary	Semaphore
	0.8.1	Code:
	0.8.2	Explanation
0.9	Mutex	
	0.9.1	Code:
	0.9.2	Explanation
0.10	Counti	ng Semaphore
	0.10.1	
	0.10.2	Explanation
0.11		otification





	0.11.1 Code:	34
	0.11.2 Explanation	37
0.12		39
		39
	0.12.2 Code	39
	0.12.3 Explanation	41
0.13	Context Switching	44
	0.13.1 Intro	44
	0.13.2 Code	44
	0.13.3 Explanation	49
0.14	Application Based Experiments	49
	0.14.1 State collection	49
0.15	Collision Avoidance	53
	0.15.1 Theory and Description	53
	0.15.2 Experiment	55
0.16	References	75



0.1 Introduction to RTOS

0.1.1 What is RTOS?

"RTOS" stands for Real-Time Operating System. It is a type of operating system used for real time applications in embedded systems. RTOS is known for its characteristics that helps is in many applications.

• Reliability:

RTOS provides more reliability as compared to GPOS. It has more control over events in real time and they are always available to provide service. Some systems are required to run for a longer period of time without human intervention, for these purposes RTOS can be very useful.

• Determinism:

RTOS entirely functions over deadlines which makes it more efficient. It means that for each process a specific deadline or a time-period is specified within which it has to finish that particular process.

• Scheduling:

In this operating system, user has more control over scheduling a particular task or a process depending on its priority. So we can define the priority for that particular task and also the frequency with which it should occur (more like a delay). In GPOS all the scheduling functions are process based and user has less control on them. Task defined in RTOS are preemptive. Generally, in an operating systems there are two types of tasks viz. High priority tasks and Low priority tasks. High priority task can meet their deadlines consistently because of the preemptive property.

• Scalability:

RTOS is used in wide variety of applications in the field of embedded systems. So it is scalable depending on the application requirements (i.e we can add or remove modular components depending on our use).

0.1.2 Types of tasks in RTOS

1. Hard real-time tasks:

These types of tasks strictly run based on deadlines. If a particular task is not finished within the predetermined deadlines then the system is considered to be a failed system. Applications: Anti-missile systems, Air bag mechanisms etc.

2. Firm real-time tasks:


Similar to hard real-time tasks they should also meet the deadlines.



But if they don't meet then that doesn't make this a failed system, but the results that are produced after the deadlines are discarded and the utility of the system becomes zero. Applications: Multimedia

3. Soft real-time systems:

Here the deadlines are not expressed as some absolute value but they are expressed as a average response time required by the task. If the task is finished then the utility of the task is 100

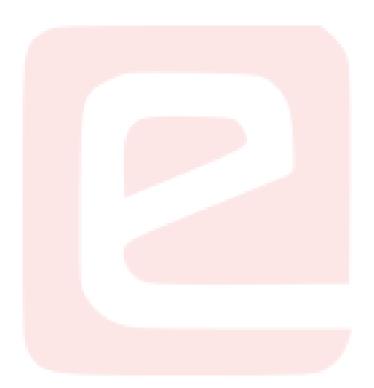



0.2 What is FreeRTOS

For statrters FreeRTOS is just a bunch of C files which enables us to implement RTOS in around 32 microcontrollers. FreeRTOS provides files which can be used in multiple microcontrollers with some microcontroller specific support files.

The main advantage of Implementing FreeRTOS in any microcontroller is the ability to multi-task.

MultiTasking enables the device to execute multiple "Tasks" at the same time. MultiTasking in single core systems is implemented by allocating each task a time slice of the processor, In this way Multiple Tasks can be executed at the "same time".

0.2.1 Advantage of FreeRTOS

- 1. Proper Utilization of Resources.
- 2. Low foot-print.
- 3. Priority based scheduling of Tasks.
- 4. API's for Semaphores.
- 5. API's for Making and managing queues.

0.2.2 Drawbacks/Disadvantages (write some fancy word)

- 1. Use of TaskNotification to implement MailBox.
- 2. Not readily Portable to all devices.
- 3. Limited source material.



0.3 Requirement

- 1. Knowledge of C++
- 2. FreeRTOS source files/API
- 3. Keil compiler
- 4. Flash magic
- 5. FireBird V (LPC2148)

0.4 Setting up the environment

0.4.1 Installing the softwares

There are two softwares that we need to install before proceeding.

- Keil uVision4 IDE.
- Flash Magic.

After the installation we need to download the FreeRTOS library files from the website of www.freertos.org. During this period we will be using the FreeRTOSv9.0.0 version for the library files.

0.4.2 Creating a new project

After installing all these softwares and downloading the FreeRTOS file, follow the following steps to create a new project.

- 1. Open Keil uvision4 and select 'project' and then select new project.
- 2. Select the NXP option in the window and select lpc2148 processor.
- 3. Then go to file and select new and in the window that opens start coding.
- 4. But before compiling we need to include certain files and libraries. Follow the following steps to include those files.
 - Right click on the target folder that is created on the left hand side of the page.
 - Select the 'options for target' option and set the settings as per the following images.



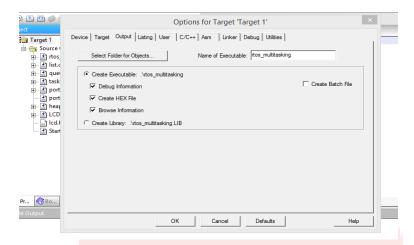


Figure 1: Create HEX

• Go to the c++ option on the same window. On that same page we will see a include paths option. Open that to include the files as shown in the image.

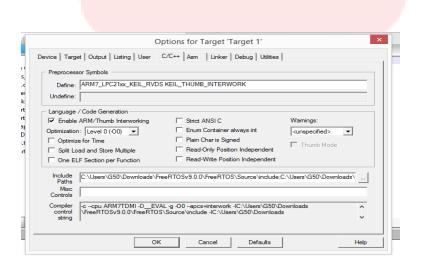


Figure 2: C++ configurations



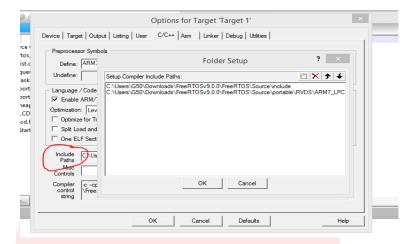


Figure 3: C++ Folder Setup

• After this go to the ASM page which is right next to the C++ page and again open the include paths page and include the following.

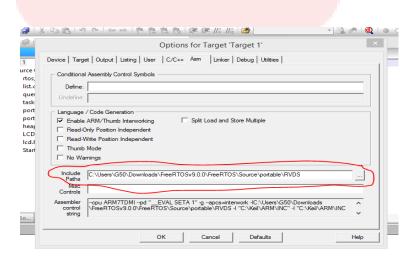


Figure 4: Include paths



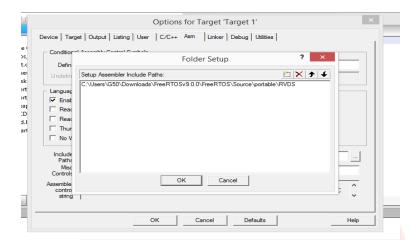


Figure 5: ASM Configurations

• Go to the linker option and check the following settings.

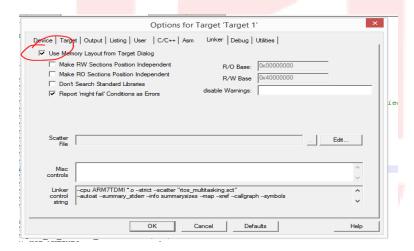


Figure 6: Include Files

Now lets begin including files to our project.

- Firstly double click on the cource folder that is generated below the target folder. If it contains the 'startup.s' file then delete it. Include the new startup.s. This file is located in "FreeRTOSv9.0.0/FreeRTOS/Demo/ARM7LPC2129KeilRVDS" this folder.
- Add the main.c file which contains our program.
- Add the "tasks.c", "list.c" and "queue.c" from the source folder which is inside the FreeRTOSv9.0.0 folder which we downloaded.



- Add the "FreeRTOS.h" and "freertosconfig.h" from include folder which is located inside the source folder.
- Now go inside the portable folder inside the source folder and go to RVDS folder and open the ARMLPC21xx folder and add the "port.c" and "portASM.s".
- And lastly inside the portable folder go to the "MemMang" folder and include the "heap2.c".
- You can include the "LCD.c" from the experiments folder of Fire-Bird V LPC2148 folder.

Your libraries should now consist of all these files.

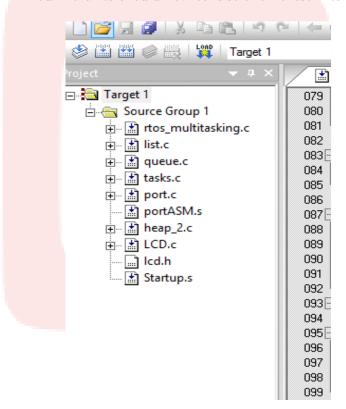


Figure 7: LIBRARIES

0.5 Getting Started!

0.5.1 DataTypes

FreeRTOS defines counterparts of few basic data types



Data Type	General Data Type
portCHAR	char
portSHORT	short
portLONG	long
portTickType	This is used to store the tick count
portBASE_TYPE	Generally used for Bool type data, is 32 bit for 32 bit type uC

0.5.2 Variable Names

The Data type is prefixed to the name of a variable for e.g.

In vTaskDelay "v" denotes the return type "void".

In xTaskCreate "x" denotes portBASE_TYPE.

0.5.3 Macros

Refer to page 168-169 of the RTOS document by Richard Barry.

0.5.4 Creating Tasks

```
BaseType_t xTaskCreate( TaskFunction_t pvTaskCode, const char * const pcName, unsigned short usStackDepth, void *pvParameters, UBaseType_t uxPriority, TaskHandle_t *pxCreatedTask);
```

- BaseType_t:Can be used to check if the task has been created or not.If the returned value is pdTRUE the task has been created if pdFALSE is returned the task was not created.
- pvTaskCode:This parameter is a pointer to the task which has been created.
- pcName:Name given to a Task created so that user can easily identify a task, this parameter enables the programmer to easily identify a task.
- usStackDepth :The amount of memory/space which a given task is to be allocated is passed as a parameter through this value.
- uxPriority: Each task is assigned a priority on the basis of which it is allocated the processor time priority assigned are natural numbers, as the value of number increases priority increases.

0.5. GETTING STARTED!



• pxCreatedTask :Tasks are assigned handles using which they can be referred by other tasks.

Same Task can have multiple instances by varying the priority, parameters passed ,pcName.

0.5.5 Frequently used API's

- vTaskDelay: Takes the Clock Ticks as parameter and suspends the Task for those many cycles. e.g vTaskDelay(1000);
- vTaskSuspend: Takes Taskhandle as a parameter and Suspends the "passed" task indefinitely. e.g. vTaskSuspend(t1): suspends task t1 vTaskSuspend(NULL): suspends running task
- vTaskResume :Also Takes Taskhandle as a parameter resumes the Task from suspended state e.g. vTaskResumed(t1) : resumes task t1
- tskIDLE_PRIORITY: Priority of the idle task, used to fix priority of Tasks created.



0.6 MultiTasking

Multitasking is running multiple processes at the same time. In a multiprocessor system it implies that each core of processor is executing different tasks i.e. multiple tasks at the same time. Whereas in a single processor system the operating system schedules tasks in such a way that all the tasks are performed simultaneously i.e. each task gets a limited amount of Processor time, after the time expires the running task is suspended and another task is executed. The original task gets the resources again when all the tasks are given equal amount of processor time.

```
0.6.1
                      Code:
#include <stdlib.h>
#include "FreeRTOS.h"
#include "task.h"
#include "lcd.h"
#define DATA_PORT() IO1SET=(1<<19)
#define READ_DATA() IO1SET=(1<<18)
#define EN_HI() IO1SET=(1<<17)
#define COMMANDPORT() IO1CLR=(1<<19)
#define WRITEDATA() IO1CLR=(1<<18)
#define ENLOW() IO1CLR=(1<<17)
 TaskHandle_t xTask1Handle, xTask2Handle, xTask3Handle;
 void Init_Motion_Pin(void)
    PINSEL0&=0xFF0F3FFF;
                                                                                                                //Set Port pins P0.7, P0.10, P0.11 as GPIO
    PINSEL1&=0xFFFFF0FF;
                                                                                                                //Set Port pins P0.21 and 0.22 as GPIO
    IO0DIR\&=0xFF9FF37F;
    IO0DIR = (1 << 10) | (1 << 11) | (1 << 21) | (1 << 22) | (1 << 7) | (1 << 25);
                                                                                                                                                                                                                                                           //Se
    IO1DIR&=0xFFDFFFFF;
                                                                                                                // Set P1.21 as output pin
    IO1DIR = (1 < < 21);
    IOOSET = 0x00200080;
       IO1DIR = (1 < < 25) | (1 < < 24) | (1 < < 23) | (1 < < 22) | (1 < < 19) | (1 < < 18) | (1 < < 17) | (1 < < 18) | (1 < < 17) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < <
```



```
//Stop left motor
void L_Stop(void)
                                //Set P1.21 to logic '0'
IO1CLR = 0x00200000;
IOOCLR = 0 \times 00400000;
                                 //Set P0.22 to logic '0'
//Stop Right motor
void R_Stop(void)
{
IOOCLR = 0 \times 00000400;
                                 //Set P0.10 to logic '0'
IOOCLR = 0x00000800;
                                 //Set P0.11 to logic '0'
void Stop (void)
L_Stop();
 R_Stop();
//Move Left motor forward
void L_Forward (void)
IO1SET = 0x00200000;
                                 //Set P1.21 to logic '1'
//Function to move Left motor backward
void L_Back(void)
IOOSET = 0x00400000;
                                //Set P0.22 to logic '1'
//Move Right motor forward
void R_Forward(void)
                                 //Set P0.10 to logic '1'
IOOSET = 0x00000400;
//Move Right motor backward
void R_Back(void)
                                //Set P0.11 to logic '1'
IOOSET = 0 \times 000000800;
//Function to move robot in forward direction
void Forward(void)
```



```
Stop();
L_Forward();
R_Forward();
void BUZZER_ON(void)
IO0SET |= (1 < < 25);
void BUZZER_OFF(void)
IO0CLR |= (1 < < 25);
//Pin Initialisations
void Init_Ports(void)
 Init_LCD_Pin();
 Init_Motion_Pin();
void Init_Peripherals(void)
 Init_Ports();
// Task Functions
void vbuzzer(void *);
void vmotion(void *);
void lcdprint(void *);
// Buzzer Task
void vbuzzer(void *p)
\mathbf{while}(1)
          BUZZER_ON();
          vTaskDelay(200);
          BUZZER_OFF();
          vTaskDelay(200);
```



```
}
//Motion Task
void vmotion(void *p)
\mathbf{while}(1)
 Forward();
 vTaskDelay(250);
 //LCD Display Task
void lcdprint(void *p)
unsigned char count = 0; // Initialised a variable
while (1)
{
  if (count = 100)
          count = 0;
 LCD_Print(1,2,count++,3);
 vTaskDelay(200);
}
int main ()
Init_Peripherals();
 \mathbf{while}(1)
   LCD_Init();//LCD is initialised
/*If the priorities are same then make the \#define configUSE_TIME_SLIP is the priorities are same then make the \#define configure.
\theta*/
```



```
/*3 Tasks are created in the following function*/
xTaskCreate(vbuzzer, "noise", configMINIMAL_STACK_SIZE, NULL, tskIDLE_PRIORIT
xTaskCreate(vmotion, "forward", configMINIMAL_STACK_SIZE, NULL, tskIDLE_PRIOR
xTaskCreate(lcdprint, "display", configMINIMAL_STACK_SIZE, NULL, tskIDLE_PRIO
/*stack_depth, priority=1, Null handle
```

```
vTaskStartScheduler();
}
}
```

0.6.2 Explanation

The given code is used to create 3 tasks

1st task switches on the buzeer then the task is suspend and after a while the task is resumed and buzzer is switched off.

2nd task is a motion task which aims to give the bot a forward motion.

3rd task prints the value of a counter on the LCD, the value of counter resets when it reaches 100.

The statements for the task which are to be executed are placed inside an infinite loop so that they can be continiously executed.

the xTaskCreate statement "creates tasks" this can be thought of as function call statements which call the respective functions.

The vTaskStartScheduler starts scheduling the tasks i.e. allocating processor to the tasks.

If the tasks are not placed in the infinite loop the statements are executed ones and the task is completed.

The ouput can be observed by uploading the code to LPC2148 based FBV.



0.7 Introduction to semaphore

There are a limited number of resources available to any system, Similarly any microcontroller has a limited number resources available.

As the complexity of the application Increases the number of Tasks running also Increases,more and more Tasks compete for the available Processor time or The I/O devices available.

To ensure equal availability of resources to all the Tasks Operating Systems provide a facilities through semaphores.

The Greek word sema means sign or signal, and -phore means carrier. So Semaphore = signalling.

Semaphores can be classified into

- Binary Semaphores
- Mutex
- Counting Semaphores

0.7.1 Binary Semaphores

Binary semaphores are used for Task synchronisation. If a process ocuppies a resource the value of Binary semaphore is 1 else 0 i.e it gives information only if the resource is available or not.

0.7.2 Mutex

Mutex stands for Mutual Exclusion. Any Task which requires a resource can "Block" the resource when the Task uses the resource it can "Give" the resource.

0.7.3 Counting Semaphore

Counting semaphores are used to count resources and keep track of Multiple resources.

0.7.4 Mutex vs Binary Semaphore

• Mutexes are used for Resource Protection from other tasks//processes whereas Binary semaphores are used for task synchronistaion



0.7. INTRODUCTION TO SEMAPHORE

- It is the responsibility of the occupying function to release the mutex,but a binary semaphore can be released even from ISR or any other functions.
- On the implementation level it is the Responibility of the Coder to ensure that the Mutex is only given by the task which takes it.





0.8 Binary Semaphore

0.8.1 Code:

```
#include<stdlib.h>
#include"FreeRTOS.h"
#include" task.h"
#include"LCD.h"
#include" semphr . h"
SemaphoreHandle_t xSemaphore;
//Look in the sample programs for Included functions variables etc
void forward(void *pvparam)
          vTaskDelay(5); //Added so that Back Task can occupy the reso
         \mathbf{while}(1)
          if (xSemaphoreTake(xSemaphore,portMAX_DELAY)==pdTRUE)
                          Stop();
                          Forward();
                   UART0_SendStr("Forward\n");
                 vTaskDelay(5);//To avoid same Tasking Taking resource
         }
}
void back(void *pvparam)
         \mathbf{while}(1)
          if(xSemaphoreTake(xSemaphore,portMAX.DELAY) == pdTRUE)
                 {
                          Stop();
                          Back();
                  UART0\_SendStr("Back\n");
                 vTaskDelay(5);
         }
}
```



```
void control_switcher(void *pvparam)
  \mathbf{while}(1)
  {xSemaphoreGive(xSemaphore);
  UART0\_SendStr("Semaphore\_given \n");
  vTaskDelay(1200);
  }
}
  int main()
// Reset all pins as GPIO
DelaymSec(40);
       Init_Peripherals();
       UART0\_SendStr("\t\tBinary\_Semaphore\n");
   xSemaphore=xSemaphoreCreateBinary();
       xTaskCreate (forward, "forward", 300, NULL, tskIDLE_PRIORITY + 1, NULL
       xTaskCreate(back, "back", 300 , NULL, tskIDLE_PRIORITY + 1, NULL); //T
       xTaskCreate(control_switcher, "control_switcher", 300 ,NULL, tskIDLE_P
       vTaskStartScheduler(); //Task Scheduling
       while (1);
}
```



0.8.2 Explanation

• Variable declaration

SemaphoreHandle_t xSemaphore;

This statement declares a variable of type "SemaphoreHandle_t"

• Creation of the semaphore

xSemaphore=xSemaphoreCreateBinary();

• Working of code

The forward function Waits for portMAX_DELAY i.e for maximum amount of time so that the control of Resources is available.

Similarly the back function waits for maximum time to get access to the resources.

As soon as execution of Tasks starts the resources are occupied by the back function (vTaskDelay restricts forward function), The control_switcher function is suspended for 1200 clock counts and Gives away the semaphore.

As soon as the semaphore is released the forward function waiting for allocation of resources occupies them, the cycle continues with control_switcher releasing the semaphore.

• Serial monitor Output

Binary Semaphore

Semaphore given

Back

Semaphore given

Forward

Semaphore given

Back

Semaphore given

Forward

Semaphore given

Back



0.9 Mutex

```
0.9.1 Code:
```

```
\#include < stdlib.h >
#include "FreeRTOS.h"
#include "task.h"
#include "LCD.h"
#include" semphr.h"
//Refer to actual code for necessary functions and codes
SemaphoreHandle_t xSemaphore=0;//Creation of Variable for semaphore
  void forward(void *pvparam)
{
         \mathbf{while}(1)
                 if (xSemaphoreTake(xSemaphore,1000) == pdTRUE)
// if available then
                     UART0_SendStr("Forward\n");
                          Forward();
                                                            // task suspended for
                     vTaskDelay(1200);
                          Stop();
                          xSemaphoreGive(xSemaphore);
// after resource task completed, return the semaphore
                 else
                 {
                          UART0\_SendStr("Forward\_function\_access\_denied \n");
                  vTaskDelay(200);
         }
}
void back(void *pvparam)
          \mathbf{while}(1)
         {
                          if (xSemaphoreTake(xSemaphore,1000) == pdTRUE)
                          UART0_SendStr("Back\n");
                          Back();
                          vTaskDelay(1200);
                                                                     // perform of
```



```
data tasks ();
                       Stop();
                       xSemaphoreGive(xSemaphore);
/\!/ after shared data task completed, return the semaphore
       else
                  // if available then
               { UART0_SendStr("Back_Function_access_denied\n");
       vTaskDelay(200);
}
}
 int main()
                               // Reset all pins as GPIO
PINSEL2 = 0x000000000;
DelaymSec (40);
       Init_Peripherals();
       UART0\_SendStr("\t\tMutex\n");
       xSemaphore = xSemaphore Create Mutex(); //Use the Handle as a
       xTaskCreate(forward, "forward", 300, NULL, tskIDLE_PRIORITY +
       xTaskCreate(back,"back", 300 ,NULL, tskIDLE_PRIORITY + 1, NUL
       vTaskStartScheduler(); // Task Scheduling
       while (1);
}
```



0.9.2 Explanation

• Variable declaration

SemaphoreHandle_t xSemaphore;

This statement declares a variable of type "SemaphoreHandle_t"

• Creation of Mutex

xSemaphore = xSemaphoreCreateMutex();

• Working of code

There are Two Tasks forward and back, when executed

The forward function Waits for 1000 clock cycles for the resources, In case the resources are not available the Task sends a message about The lack of availability of resources. Similarly the back function waits for same amount of time for resources.

As soon as execution of Tasks starts the resources are occupied by one of the task and that task blocks the acess of those resources through a mutex.

The task executes and when the execution is completed it "Gives" the Mutex and therefore the releases the resources, another waiting task then occupies those resources and blocks for a period of time it requires.

• Serial monitor Output

Mutex

Back

Forward function access denied

Forward

Back Function access denied

Back

Forward function access denied

Forward

Back Function access denied

Back



0.10 Counting Semaphore

:Implemented by dining Philosophers Problem

0.10.1 Code:

```
/*
Note: To use mutex semaphore you need to initialize configUSE_MUTEXE
*/
#include<stdlib.h>
#include "FreeRTOS.h"
#include "task.h"
#include "LCD.h"
#include" semphr.h"
SemaphoreHandle_t xSemaphore=0;//Creation of Variable for semaphore
int s=0;
int forks_avail [5] = \{0,0,0,0,0,0\}; //The value of Variable is 0 if a form
void vfork( void * pvParameters )
{
         int i;
         const unsigned char* str;
         str = ( const unsigned char * ) pvParameters;
         //Assignment of forks available on the basis of name of Philo.
         if(str[1] == '1')
         \{i=0;\}
         if(str[1] == '2')
         \{i = 1;\}
         if(str[1] == '3')
         \{i = 2;\}
         if(str[1] == '4')
         \{i = 3;\}
         if(str[1] == '5')
         \{i = 4;\}
         \mathbf{while}(1)
         //Waits for 1000 ticks for forks to be avaliable
```



```
//If available checks if the fork is adjacent(Right) or not
        if (( xSemaphoreTake( xSemaphore, 1000 ) == pdTRUE )&&(forks_avail[i]=
{
                 forks_avail[i]=1;
                 UART0_SendStr(\&str[0]);
                 UART0\_SendStr(":Right\_fork\_obtained \n");
        if (( xSemaphoreTake( xSemaphore, 2000 ) == pdTRUE )&&(forks_avail [(i-
        { //Waits for 2000 ticcks for Left fork to be available
                         forks_avail [(i+1)\%5]=1;
                         UART0_SendStr(\&str[0]);
                         UARTO_SendStr(": Left_fork_obtained_Eating_:)\n");
                         vTaskDelay (2000);
                         UART0_SendStr(&str[0]);
                         UART0\_SendStr(":Ate\_\n");
                         xSemaphoreGive(xSemaphore);
                         xSemaphoreGive(xSemaphore);
                         forks_avail[i]=0;
                         forks_avail [(i+1)\%5]=0;
                     UART0_SendStr(\&str[0]);
                         UART0_SendStr(":Thinking \_\n");
                         vTaskDelay(3000);
}
                 else
            UART0\_SendStr(\&str[0]);
                 UART0\_SendStr(":Returned\_Right\_fork:(\_\n");
                 xSemaphoreGive(xSemaphore);
                 forks_a vail[i]=0;
        }
   else
           UART0_SendStr(\&str[0]);
           UART0_SendStr(":Hungry\n");
```



```
vTaskDelay(3000);
 }
  int main()
                                  // Reset all pins as GPIO
 PINSEL2 = 0x000000000;
 Init_Peripherals();
        UART0_SendStr("\t\tCounting\_Semaphore\n");
        xSemaphore = xSemaphoreCreateCounting(5, 5);
         if (xSemaphore != NULL)
        UART0\_SendStr("\tSemaphore\_Created\n");
xTaskCreate(vfork, "Philospher_1", 300, "P1", tskIDLE_PRIORITY + 1, NU
xTaskCreate(vfork,"Philospher_2", 300 ,"P2", tskIDLE_PRIORITY + 1, NU xTaskCreate(vfork,"Philospher_3", 300 ,"P3", tskIDLE_PRIORITY + 1, NU
xTaskCreate(vfork, "Philospher_4", 300, "P4", tskIDLE_PRIORITY + 1, NU
xTaskCreate(vfork, "Philospher_5", 300, "P5", tskIDLE_PRIORITY + 1, NU
                 vTaskStartScheduler(); // Task Scheduling
     }
        \mathbf{while}(1) / Never reaches this Part of the main
        \{UART0\_SendStr("\t\tSemaphore\_not\_Created\n");
}
```



0.10.2 Explanation

• Variable declaration

SemaphoreHandle_t xSemaphore;

This statement declares a variable of type "SemaphoreHandle_t"

• Creation of Counting semaphore

```
xSemaphore = xSemaphoreCreateCounting(5, 5);
```

Here 1st parameter gives the maximum count and 2nd parameter is the initial count. If the semaphore is used for counting events 2nd parameter would be 0 and if used for resources management it would be equal to maximum or initial count.

• Task Creation

```
xTaskCreate(vfork," Philospher 1", 300,"P1", tskIDLE_PRIORITY + 1, NULL);
.
```

Here vfork is a single Task which on variation of Parameter P1,P2...etc behaves as a different task,ecah task has its own stack and act as if they are independent. All the tasks have same priority and get equal time at the processor.

Working of code

The Tasks created are by changing the parameters of a single task.

When each time a "Philosopher" is allocated the processor time it checks for the number of available "Forks". If the forks are available and then check for the Right fork and the philosopher "picks up the left fork" then when the "Philosopher" again gains the processor time it waits for Left fork to be available and proceeds to eat.

when 5 "Philosophers" are allocated simulate nously the semaphore keeps track of the available forks .



```
• Serial monitor output
 P3:Hungry
 P5:Ate
 P5:Thinking
 P4:Left fork obtained Eating:)
 P2:Right fork obtained
 P4:Ate
 P4:Thinking
 P2:Left fork obtained Eating :)
 P1:Right fork obtained
 P3:Hungry
 P5:Hungry
 P2:Ate
 P2:Thinking
 P1:Left fork obtained Eating :)
 P4:Right fork obtained
 P1:Ate
 P1:Thinking
 P4:Left fork obtained Eating :)
 P3:Right fork obtained
 P5:Hungry
 P2:Hungry
 P4:Ate
 P4:Thinking
 P3:Left fork obtained Eating :)
 P1:Right fork obtained
 P3:Ate
 P3:Thinking
 P1:Left fork obtained Eating :)
 P5:Right fork obtained
 P2:Hungry
 P4:Hungry
 P1:Ate
 P1:Thinking
```



0.11 Task Notification

There occurs instances when tasks needs to communicate with each other. Semaphores are one of the methods by which tasks communicate with each other. Two other methods by which tasks communicate with each other are

- 1. MailBox
- 2. Queues

Tasks in mailbox communicate by sending "Mails" to each other.In FreeRTOS mailbox is implemented by Task Notification.

Each Task has an associated notification value using which they can be "notified". When a task is notified, Task notifications can update the receiving task's notification value in the following ways:

- Set the receiving task's notification value without overwriting a previous value
- Overwrite the receiving task's notification value
- Set one or more bits in the receiving task's notification value
- Increment the receiving task's notification value



0.11.1 Code:

```
#include < stdlib . h>
#include "FreeRTOS.h"
#include "task.h"
#include" semphr.h"
TaskHandle_t xHandle = NULL;
void vnoticer( void * pvParameters )
  uint32_t ulNotifiedValue=0x01;
    \mathbf{while}(1)
      if (xTaskNotifyWait (0x00,0xffff,&ulNotifiedValue,1000)==pdTRU
                 if((ulNotifiedValue | 0x01) = 0x01)
//checking if the received message is same as the sent
     UARTO_SendStr("Received___MSG_from_N1_\n");
                                                           }
       else if ( ulNotifiedValue | 0x02 ) = 0x02 )
     UART0\_SendStr("Received\_\_\_MSG\_from\_N2\n");
                                                           }
                 else if ( ulNotifiedValue | 0x03 ) = 0x03 )
     UART0\_SendStr("Received\_\_\_MSG\_from\_N3\n");
       else if ( (ulNotifiedValue | 0x04 ) = 0x04 )
      UART0\_SendStr("Received\_\_\_MSG\_from\_N4\n");
          else
  {
      UART0_SendStr("Learn_Programming_!\n");}
}
else
{ UART0_SendStr("No_Notice\n"); }
}
```



```
void vn1( void * pvParameters )
   xHandle = xTaskGetHandle("Noticer");
   \mathbf{while}(1)
        vTaskDelay(4000);
        UARTO_SendStr("N1_sent_a_Message\n");
        xTaskNotify(xHandle, 0x01, eSetBits);
        }
void vn2( void * pvParameters )
   xHandle = xTaskGetHandle("Noticer");
   \mathbf{while}(1)
        vTaskDelay(5000);
        UARTO_SendStr("N2_sent_a_Message\n");
        xTaskNotify(xHandle, 0x02, eSetBits);
void vn3( void * pvParameters )
{
   xHandle = xTaskGetHandle("Noticer");
   \mathbf{while}(1)
   {
        vTaskDelay(6000);
        UART0\_SendStr("N3\_sent\_a\_MSG\n");
        xTaskNotify(xHandle, 0x03, eSetBits);
        }
void vn4( void * pvParameters )
```



```
{
   xHandle = xTaskGetHandle( "Noticer" );
   \mathbf{while}(1)
        vTaskDelay(7000);
        UART0\_SendStr("N4\_sent\_a\_MSG\n");
        xTaskNotify(xHandle, 0x04, eSetBits);
        }
}
  int main()
PINSEL0 = 0x000000000;
                                  // Reset all pins as GPIO
PINSEL1 = 0 \times 0000000000;
Init_Peripherals();
        UART0\_SendStr("\t\tMailBox\_using\_Task\_Notification\n");
                 xTaskCreate(vn1,"Notifier", 300, NULL, tskIDLE_PRIORIT
                 xTaskCreate(vn2,"Notifier", 300 ,NULL, tskIDLE_PRIORIT
                 xTaskCreate(vn3,"Notifier", 300 ,NULL, tskIDLE_PRIORIT
                 xTaskCreate(vn4,"Notifier", 300, NULL, tskIDLE_PRIORIT
        xTaskCreate(vnoticer, "Noticer", 300, NULL, tskIDLE_PRIORITY +
                 vTaskStartScheduler(); //Task Scheduling
        while (1) // Never reaches this Part of the main
        UART0\_SendStr(" \setminus t \setminus tMailBox\_Bypassed \setminus n");
        }
}
```



0.11.2 Explanation

Above is a simple code which has four tasks(vn1,vn2,vn3,vn4) which notify a 5th task 'noticier', The 5th task prints which task notified it.

• xTaskNotify() This function is used to notify other tasks general format is as specified below

```
xTaskNotify(xHandle, 0x03, eSetBits); \\((Task Handle, Notification value, eAction)\)
```

Parameters

- Task handle: The handle of the task which needs to be notified.
- Notification value: Value used for notification
- eAction: The type of action which is to be carried out upon the specified task. The types are as specified below:
 - * eNoAction :The Task receives the value but no action takes place,can used to Resume a suspened task.
 - * eSetBits: The existing Notification value will be Bitwise ORed with the Notified value to obtain a new value.
 - * eIncrement :Increments the existing value.
 - * eSetValueWithOverwrite :Overwrites the existing Notification value.

Return value : Returns pdTRUE if Task has been Notified else pdFALSE.

• xTaskNotifyWait() The Function waits to receive a Notification and has parameters which govern the actions upon the received data.

```
xTaskNotifyWait(0x00,0xffff,&ulNotifiedValue,1000)
\\(clear bits on entry,clear bits on exit,notified value,time out
```

Parameters

- ulBitsToClearOnEntry:Specifies the Bit position which needs to be cleared as soon as the Notification is received.
- ulBitsToClearOnExit :Specifies the Bit position which needs to be cleared before xTaskNotifyWait() function exits if a notification was received
- pulNotificationValue: The Notification value before exit is taken and stored in this.



 xTicksToWait :This specifies the timeout period for which the function call waits for a notification.

• Working

Tasks vn1,vn2,vn3,vn4 With different frequencies send a "message" to a noticer task through a hex value, these hex values are compared to find out which task sent the message.

For the first few ticks no task is sending a notification so the noticier prints a "No Notice" message, as It starts receiving messages it starts acknowledging the received messages.

MailBox using Task Notification

No Notice

No Notice

No Notice

N1 sent a Message

Received MSG from N1

N2 sent a Message

Received MSG from N2

N3 sent a MSG

Received MSG from N3

N4 sent a MSG

Received MSG from N4

N1 sent a Message

Received MSG from N1

No Notice

N2 sent a Message

Received MSG from N2

No Notice

N3 sent a MSG

ReceivN1 sent a Message

ed MSG from N3

Received MSG from N1

No Notice



0.12 Queue

0.12.1 Intro

In RTOS, inter-process communication is possible. It means that you can communicate between two task and control them on the basis of this communication.

But first we need to understand what is queue?

Consider a dynamic buffer. Dynamic in the sense of memory allocation. We can allocate the size of the buffer as per our requirements. There are two things that we can change, one is the size of each data the buffer can carry and other is the number of data the buffer can send with each data of the size defined by us. this buffer is known as queue.

0.12.2 Code

```
#include <stdlib.h>
#include "FreeRTOS.h"
#include "task.h"
#include "semphr.h"
#include "queue.h"
//assuming necessary functions and header files have been included
unsigned char Temp=0;
int count = 0;
QueueHandle_t xQueue= 0;
void Txtask(char *);
void Rxtask(void *);
char *tx1={"Task_1"};
\mathbf{char} * \mathbf{tx2} = {\text{"Task}}_2 {\text{"}};
char *tx3={"Task_3"};
\mathbf{char} * \mathbf{tx4} = \{ \text{"Task} \, 4 \};
void Txtask(char *p)
                                                 // task which writes data on to the
          \mathbf{while}(1)
```



```
if(xQueueSend(xQueue, p, 1000) = pdTRUE)
// wait for 1000ms to tx queue message
                         UART0\_SendStr("\nData\_sent\_to\_Queue\_:\_\t");
                         UART0_SendStr(p);
                 vTaskResume("RxTask");
                 //Data added to Q
                 else
                 vTaskDelay(2000);
}
void Rxtask(void *p)
                                           // task which reads data from
unsigned char rx_success_count [11] = \{0\};
unsigned char *rxptr;
rxptr = rx_success_count;
        \mathbf{while}(1)
                 if(xQueueReceive(xQueue, rxptr, 1000) = pdTRUE)
                         UART0_SendStr("\n");
                          UART0_SendStr("Data_read_from_Queue_: _\t");
                          UART0_SendStr(rxptr);
                          vTaskDelay (40);
// if RX success then display rx_success_count
                 else
                 vTaskSuspend (NULL);
        }
}
int main()
 Init_UART0();
```



0.12.3 Explanation

• QueueHandle_t : A predefined data type used to reference a queue.

```
QueueHandle_t xQueue= 0;
```

• xQueueCreate(a,b):Creates a queue of 'a' continuous memory locations, where each memory location is of 'b' bytes each. It returns a 'pointer' to the queue which is stored in the queuehandle.

$$xQueue = xQueueCreate(7,40);$$

- xQueueSend(QueueHandle,data,timeout period):This function is used to send data to queue,It has three parameters
 - 1. **QueueHandle**:It gives the address of the queue in which data has to be stored.
 - 2. Data: The data which needs to be stored in the queue.
 - 3. **Timeout period**: This specifies the amount of time for which the function waits if the queue is unavailable (i.e data is being sent to queue or queue is full)

Return value :Returns pdTRUE if Data has been sent to Queue else pdFALSE e.g..



- xQueueReceive(QueueHandle,data,timeout period): This function is used to receive data from a queue,It has three parameters
 - 1. **QueueHandle**:It gives the address of the queue from which data has to be obtained.
 - 2. **Data**:A variable in which the poped data has to be stored.
 - 3. **Timeout period**:This specifies the maximum amount of time for which the function waits if the queue is unavailable(i.e data is being received by another task or queue is empty)

Return value: Returns pdTRUE if Data has been Received from the Queue, pdFALSE id queue is empty e.g..

```
if(xQueueReceive(xQueue, rx, 1000)) = pdTRUE) ...
```

• Working of code: Initially a queue is created which can accommodate 7 elements in which each of them can occupy 40 Bytes.

There are 4 tasks which send data to the queue and one task which receives data from the queue.

As the tasks are created data is pushed into the queue and the receiving task is resumed which in turn pops the data and prints them through the serial comm port.

From the Output screenshots it can be observed how data pushed 1st is popped out 1st (Queue mechanism).



Queue

Data sent to Queue :	Task 1
Data sent to Queue :	Task 1
Data sent to Queue :	Task 1
Data sent to Queue :	Task 1
Data sent to Queue :	Task 1
Data sent to Queue :	Task 1
Data sent to Queue :	Task 1
Data read from Queue:	Task 1
Data sent to Queue :	Task 1
Data read from Queue :	Task 1
Data sent to Queue :	Task 2
Data read from Queue :	Task 1
Data sent to Queue :	Task 3
Data read from Queue :	Task 1
Data sent to Queue :	Task 4
Data read from Queue :	Task 1
Data sent to Queue :	Task 1
Data read from Queue :	Task 1
Data sent to Queue :	Task 2
Data read from Queue :	Task 1
Data sent to Queue :	Task 3
Data read from Queue :	
Data sent to Queue :	Task 4
Data read from Queue :	Task 2
Data sent to Queue :	Task 1
Data read from Queue :	Task 3
Data sent to Queue :	Task 2
Data read from Queue :	Task 4
Data sent to Queue:	Task 3
D	Task 3
Data read from Queue: Data sent to Queue:	
Data sent to Queue .	lask 4



0.13 Context Switching

0.13.1 Intro

Consider two process A and B. A is a process that is currently scheduled to run in the CPU as soon as it is allotted with CPU time. Once it is allotted with CPU time it will start executing. Suppose that B is process or thread that is at a higher priority than process A. Then the CPU time will be allotted to process B and process A will be pre-empted/suspended from the time span and CPU time will be given to process B. When process A is pre-empted/suspended then the flags and the register values are stored somewhere in the memory of that particular process. Once process B has finished execution then process will resume from the moment where it was pre-empted/suspended. This can be done because process A was able to store its values. This is called as context switching.

0.13.2 Code

#include <stdlib.h>

```
#include "FreeRTOS.h"
#include "task.h"
#include "lcd.h"
#define DATA_PORT() IO1SET=(1<<19)
#define READ_DATA() IO1SET=(1<<18)
\#define EN_HI() IO1SET=(1<<17)
#define COMMANDPORT() IO1CLR=(1<<19)
#define WRITEDATA() IO1CLR=(1<<18)
#define ENLOW() IO1CLR=(1<<17)
TaskHandle_t
            xTask1Handle, xTask2Handle, xTask3Handle;
void Init_Motion_Pin(void)
 PINSEL0&=0xFF0F3FFF;
 //Set Port pins P0.7, P0.10, P0.11 as
 PINSEL1&=0xFFFFF0FF;
 //Set Port pins P0.21 and 0.22 as GPI
 IO0DIR\&=0xFF9FF37F;
 IOODIR = (1 << 10) | (1 << 11) | (1 << 21) | (1 << 22) | (1 << 7) | (1 << 25);
 IO1DIR&=0xFFDFFFFF;
```



```
IO1DIR = (1 < < 21);
                                                                                                                    // Set P1.21 as output pin
  IOOSET = 0 \times 00200080;
      IO1DIR = (1 < < 25) | (1 < < 24) | (1 < < 23) | (1 < < 22) | (1 < < 19) | (1 < < 18) | (1 < < 17) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 18) | (1 < < 
//Stop left motor
void L_Stop(void)
  IO1CLR = 0x00200000;
                                                                                                                   //Set P1.21 to logic '0'
                                                                                                                    //Set P0.22 to logic '0'
  IOOCLR = 0 \times 00400000;
//Stop Right motor
void R_Stop(void)
  IOOCLR = 0 \times 00000400;
                                                                                                                    //Set P0.10 to logic '0'
  IOOCLR = 0 \times 000000800;
                                                                                                                     //Set P0.11 to logic '0'
void Stop (void)
   L_{\text{-}}Stop();
   R_{-}Stop();
//Move Left motor forward
void L_Forward(void)
  IO1SET = 0x00200000;
                                                                                                                    //Set P1.21 to logic '1'
//Function to move Left motor backward
void L_Back(void)
  IO0SET = 0 \times 00400000;  //Set P0.22 to logic '1'
//Move Right motor forward
void R_Forward(void)
  IOOSET = 0 \times 00000400;
                                                                                                                   //Set P0.10 to logic '1'
//Move Right motor backward
void R_Back(void)
{
```



```
//Set P0.11 to logic '1'
IOOSET = 0x00000800;
//Function to move robot in forward direction
void Forward(void)
 Stop();
 L_Forward();
 R_Forward();
void BUZZER_ON(void)
IO0SET |= (1 < < 25);
void BUZZER_OFF(void)
IOOCLR \mid = (1 < < 25);
}
//Pin Initialisations
void Init_Ports(void)
 Init_LCD_Pin();
 Init_Motion_Pin();
void Init_Peripherals(void)
 Init_Ports();
//Task Functions
void vbuzzer(void *);
void vmotion(void *);
void lcdprint(void *);
// Buzzer Task
void vCounting(void *p)
unsigned char tp = 0;
```



```
\mathbf{while}(1)
  if (tp = 100)
         tp = 0;
 LCD_{-}Print(2,10,tp++,3);
 vTaskDelay(200);
}
//Motion Task
void vmotion(void *p)
\mathbf{while}(1)
 Forward();
 vTaskDelay(1000);
 LCD_Print (1,9,5,1);
 vTaskDelay(500);
 vTaskResume (xTask3Handle);
 //LCD Display Task
void lcdprint(void *p)
int x = 0;
unsigned char count = 0; // Initialised a variable
\mathbf{while}(\mathbf{x} \leq 5)
{
  if (count = 100)
         count = 0;
 LCD_Print(1,2,count++,3);
 vTaskDelay(200);
 x++;
```



```
vTaskDelay(500);
 //v TaskSuspend(NULL);
 vTaskPrioritySet(xTask3Handle,tskIDLE_PRIORITY+1);
vTaskDelay(2000);
 vTaskPrioritySet(xTask3Handle,tskIDLE_PRIORITY+4);
\mathbf{while}(1)
    LCD_Print(2,1,count++,3);
     vTaskDelay (500);
 }
int main ()
 Init_Peripherals();
     \mathbf{while}(1)
             LCD_Init();
 /* If the priorities are same then make the #define configUSE_TIME_SLI
xTaskCreate (vCounting, "counter", configMINIMAL\_STACK\_SIZE, NULL, tskIII. TaskCreate (vCounting, "counter"), configMINIMAL\_STACK\_SIZE, NULL, tskIII. TaskCreate (vCounter), configMINIMAL\_STACK\_SIZE, null, configMINIMAL\_STACK\_SIZE, nul
xTaskCreate(lcdprint, "display", configMINIMAL_STACK_SIZE, NULL, tskID
                                                                                                                                                                         /*stack_depth, priority=1, Nul
 vTaskStartScheduler();
 }
```



0.13.3 Explanation

xTaskCreate: Three tasks are created viz. Counter, motion and lcd printing. All these tasks have different priorities as seen in the program. Highest priority is given to the LCD task. It will be scheduled first and it will not give the CPU time until its finished.

Now, in the three tasks the vCounting task is just a counter, vmotion is a task that will always keep the robot moving in the forward motion and lastly the vlcdprint will print for a period of time and then it will be interrupted. While its execution its priority is reduced than other tasks. The priority changing is done by the function called as vTaskPrioritySet. In this function we give two parameters viz. the task handle and the priority. From the code we can see that the priority for task 3 is changed from 4 to 1. Hence, task 3 now has the lower priority so this task is now is pre-empted and motion task has the higher priority so it is executed first. After that this pre-empted task will resume from the point where the task was pre-empted. This will be clearly seen on the lcd.

0.14 Application Based Experiments

0.14.1 State collection

State collection involves storing data of sensors at each instance. The advantage of having the state of robot(i.e sensor values) is that it would help in debugging or simulating an already conducted experiment.

The experiment given below would collect sensor data, store it in a string and send it via serial port every 100ms and there is a corresponding python script which would store the collected data with the time stamp in a script file

Each sensor data is seperated by a ',' and each set of data is seperated by delemiters ',00,255,'

State collection Code



```
BYTE MEGA8_ADCRead(BYTE channel)
{
         BYTE
                   adcVal = 0;
         DWORD i = 0;
         IOCLR0 |= SPI1_SLAVE_SELECT;
                                                          // slave select enabl
          SPI1_SendByte(channel);
          //Delay for settling down (80 uS)
          for (i=0; i<1000; i++);
          adcVal = SPI1_ReceiveByte();
         IOSET0 |= SPI1_SLAVE_SELECT;
                                                          // slave select disab
                                           (80 uS)
          //Delay for settling down
          for (i=0; i<1000; i++);
          return adcVal;
//This function is UARTO Receive ISR. This functions is called whenev
void vsend(void *pvparam)
 \mathbf{while}(1)
  UART1_SendStr(sen_dat);
  UART1\_SendByte(0x00);
  UART1\_SendByte(0xFF);
  vTaskDelay(1000);
 }
}
void vcalc(void *pvparam)
 \mathbf{while}(1)
                                                 // IR 1
    sen_dat[0] = MEGA8\_ADCRead(6);
                                                 // IR 2
    \operatorname{sen}_{-}\operatorname{dat}[1] = \operatorname{MEGA8\_ADCRead}(13);
                                                 // IR 3
    \operatorname{sen}_{-}\operatorname{dat}[2] = \operatorname{MEGA8\_ADCRead}(9);
    sen_dat[3] = MEGA8\_ADCRead(8);
                                                // IR 4
```



```
// IR 5
                 \operatorname{sen}_{-}\operatorname{dat}[4] = \operatorname{MEGA8\_ADCRead}(15);
                 sen_dat[5] = MEGA8\_ADCRead(4); // IR 6
                 \operatorname{sen}_{-}\operatorname{dat}[6] = \operatorname{MEGA8\_ADCRead}(0); // IR 7
                 sen_dat[7] = MEGA8\_ADCRead(7); //sharp 1
                 sen_dat[8] = AD0_Conversion(6);
                                                                                                                                                                                                                                                //sharp 2
                 \operatorname{sen}_{-}\operatorname{dat}[9] = \operatorname{AD1}_{-}\operatorname{Conversion}(0);
                                                                                                                                                                                                                                                //sharp 3
                 \operatorname{sen}_{-}\operatorname{dat}[10] = \operatorname{AD0}_{-}\operatorname{Conversion}(7);
                                                                                                                                                                                                                                                //sharp 4
                 sen_dat[11] = MEGA8\_ADCRead(14);
                                                                                                                                                                                                                                                //sharp 5
                                                                                                                                                                                                                                                //WL left
                 \operatorname{sen}_{-}\operatorname{dat}[12] = \operatorname{AD1}_{-}\operatorname{Conversion}(3);
                 \operatorname{sen}_{-}\operatorname{dat}[13] = \operatorname{AD0}_{-}\operatorname{Conversion}(1);
                                                                                                                                                                                                                                                //WL center
                 sen_dat[14] = AD0_Conversion(2);
                                                                                                                                                                                                                                                //WL right
                 vTaskDelay (1000);
}
void vline(void *pvparam)
\mathbf{while}(1)
UpdateVelocity (400,400);
Forward();
//Initialise Ports and pheripherals
int main()
     PINSEL1 = 0 \times 0000000000;
     //PINSEL2 = 0x000000000;
      Init_Peripherals();
     \verb|xTaskCreate| (vline, "line", 300 , NULL, tskIDLE\_PRIORITY + 1, NULL); // Task Create| (vline, "line", 300 , NULL, tskIDLE\_PRIORITY + 1, NULL); // Task Create| (vline, "line", 300 , NULL, tskIDLE\_PRIORITY + 1, NULL); // Task Create| (vline, "line", 300 , NULL, tskIDLE\_PRIORITY + 1, NULL); // Task Create| (vline, "line", 300 , NULL, tskIDLE\_PRIORITY + 1, NULL); // Task Create| (vline, "line", 300 , NULL, tskIDLE\_PRIORITY + 1, NULL); // Task Create| (vline, "line", "line",
     \verb|xTaskCreate| (vcalc ", "calc" , "300 ", NULL", "tskIDLE\_PRIORITY + 1", "NULL"); // Task "Create" (vcalc ", "calc" , "skIDLE ", "skIDLE"); // Task ", "skIDLE" (vcalc ", "calc" ); // Task ", "skIDLE" (vca
     xTaskCreate(vsend, "send", 300 ,NULL, tskIDLE_PRIORITY + 1, NULL); //Task Cr
      vTaskStartScheduler();
            while (1);
}
```



Python script

```
import serial
import time
import datetime
ser = serial. Serial (port='COM6', timeout=5, baudrate= 9600)
flag = ser.isOpen()
saveFile = open('t2.txt', 'w')
count=0
time_stamp = time.time()
date_stamp = datetime.datetime.fromtimestamp(time_stamp).strftime('%Y-
saveFile.write(str(date_stamp) + "\n")
while (count < 100):
 data = ser.read(17);
 co=0;
 time_stamp = time.time()
 date_stamp = datetime.datetime.fromtimestamp(time_stamp).strftime('%
 saveFile.write(str(time_stamp) + ":" + "\t")
 while (co < 17):
  \#print(data/co/)
  saveFile.write(str(data[co]))
  saveFile.write(",")
  co=co+1;
 count = count + 1;
 saveFile.write("\n")
saveFile.close()
```

Sample output

```
2016-07-18 14:33:27
1468832608.3204093:
                        237,245,242,228,217,243,216,199,91,145,78,227,23,64,80,0,255,
1468832608.992425:
                        237,244,238,228,216,243,233,198,91,144,76,228,16,31,56,0,255,
                        237,245,238,228,215,241,231,200,91,144,77,233,20,35,61,0,255,
1468832609.6329627:
1468832610.2893035:
                        237,244,238,228,215,236,229,200,91,145,73,232,16,20,35,0,255,
1468832610.945569:
                        236,244,236,227,212,225,226,198,92,145,78,231,16,28,55,0,255,
                        237,244,237,228,215,229,229,199,90,145,77,230,15,17,31,0,255,
1468832611.601699:
1468832612.2424567:
                        236,244,237,226,211,225,225,198,91,144,77,226,17,26,50,0,255,
1468832612.9143238:
                        236,245,238,227,213,225,227,198,91,146,75,225,16,27,54,0,255,
                        236,245,237,226,213,226,226,198,90,146,75,233,15,18,27,0,255,
1468832613.5549724:
1468832614.211135:
                        236,244,236,225,211,224,225,198,92,148,81,230,17,29,57,0,255,
1468832614.8674085:
                        237,244,237,226,218,225,227,198,91,145,78,227,15,18,38,0,255,
1468832615.5392811:
                        237,245,239,224,216,233,228,198,141,27,51,227,16,20,33,0,255,
```



0.15 Collision Avoidance

0.15.1 Theory and Description

In this section we will study about using all the IR that are connected to master and the slaves of Firebird V LPC2148. There are two methods to setup communication between a master and a slave viz. I2C(pronounced as I squared C) and SPI(Serial Peripheral Interface). In LPC2148 the master and slave are connected through SPI communication. There are two SPI's available in LPC2148 viz. SPI0 and SPI1. Here the master and slave1 are connected through SPI1 and the two slaves are communicating with each other through UART.





SPI COMMUNICATION:

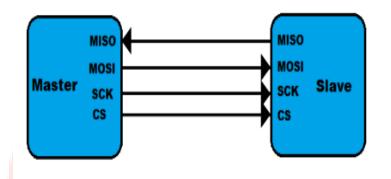


Figure 8: ONE MASTER AND SLAVE

In SPI communication master always initiates the communication. It generates the clock signal to initialize the communication. There is a slave select/chip select line which goes low in order to select a particular slave. Because in SPI communication there can be multiple slaves but there is only one master to control them.

SPI uses separate lines for data and a clock that keeps both sides in perfect synchronization. The clock is an oscillating signal that tells the receiver exactly when to sample the bits on the data line. This could be the rising or falling edge of the clock signal.

Master puts data on MOSI(Master Out / Slave In) line with clock(SCLK), When the receiver detects the rising edge, it will immediately look at the data line to read the next bit.

When data is sent from the master to a slave, its sent on a data line called MOSI(Master Out / Slave In). If the slave needs to send a response back to the master, slave will put the data onto a third data line called MISO(Master In / Slave Out) and master continue to generate clock.



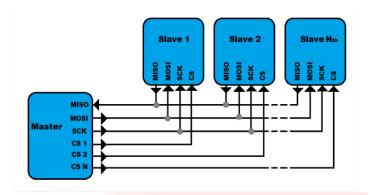


Figure 9: ONE MASTER MULTIPLE SLAVES

0.15.2 Experiment

#include<stdlib.h>

void Init_ADC0(void);
void Init_ADC1(void);

Following is the code for collision avoidance:

```
#include "FreeRTOS.h"
#include "LCD.h"
#include "task.h"
#include "type.h"
#include "spi.h"
#include <math.h>
/**************/
// SPI communication
#define SPI1_SLAVE_SELECT
                     0 \times 00100000
#define SENSOR_OFF() IO1SET=(1<<16)
                                //Macro to turn OFF Sensors
                                //Macro to turn ON Sensors
#define SENSOR_ON() IO1CLR=(1<<16)
/***********/
/**************
Task handles
***************
/**************/
```



```
unsigned int ADO_Conversion(unsigned char channel);
unsigned int AD1_Conversion(unsigned char channel);
void Init_Sensor_Switch_Pin(void);
 void Init_PWM(void);
void UpdateLeftPWM(unsigned int vel);
void UpdateRightPWM(unsigned int vel);
BYTE MEGA8_ADCRead(BYTE channel);
 void setServoAngle(BYTE servoNumber, BYTE angle);
/*************/
 /*************
RTOS Functions
 ************
 void IR1 (void *);
 void IR2 (void *);
 void IR3 (void *);
 void IR4 (void *);
 void IR5 (void *);
 void IR6 (void *);
 void IR7 (void *);
 void IR8 (void *);
 void IR1_IR2 (void *);
 void IR2_IR3 (void *);
 void IR3_IR4 (void *);
 void IR4_IR5 (void *);
 void IR2_IR3_IR4 (void *);
 void lcdprint(void *);
 void forward(void *);
unsigned char sen_dat[8];
unsigned int ADC_Data[8];
/************/
void IR1(void *p)
\mathbf{while}(1)
                     // Velocity Setting
 UpdateLeftPWM(400);
                     // Velocity Setting
UpdateRightPWM(400);
if (\text{sen\_dat}[0] < 190) //IR 1
    Stop();
        vTaskSuspend(xforward);
```



```
if (ADC_Data[2]<180)
     //DelaymSec(150);
     Soft_Right();
     DelaymSec(50);
          else if(sen_dat[2]>170)
           Right();
           DelaymSec (50);
          else
           Back();
           DelaymSec (50);
          if(sen_dat[1] > 190)
             vTaskResume(xforward);
  }
void IR2(void *p)
\mathbf{while}(1)
                          // Velocity Setting
 UpdateLeftPWM(400);
 UpdateRightPWM(400); // Velocity Setting
if (ADC_Data[0] > 160) //IR 2
  {
     Stop();
          vTaskSuspend(xforward);
          if ( sen_dat [5] > 180)
     //DelaymSec(150);
     Soft_Left2();
     DelaymSec(50);
          else if (ADC\_Data[2] < 180)
```

57



```
Soft_Right();
           DelaymSec(50);
          else
           Back();
           DelaymSec(50);
          if(ADC_Data[0] < 180)
              vTaskResume(xforward);
  }
void IR3(void *p)
while (1)
 UpdateLeftPWM(400); // Velocity Setting
 UpdateRightPWM(400);
                           // Velocity Setting
 if(sen_dat[1] < 210) //IR 3
   {
          vTaskSuspend(xforward);
          if ( sen_dat [2] > 170)
      //DelaymSec(200);
      Right();
         DelaymSec(50);
         Stop();
         DelaymSec(50);
          else if (\operatorname{sen}_{-}\operatorname{dat}[0] > 190)
           Left();
           DelaymSec(50);
          else if ( sen_dat [2] > 170 )
```



```
Right();
            DelaymSec(50);
          else
           Back();
           DelaymSec(50);
          if (sen_dat [1] > 200)
            vTaskResume(xforward);
}
void IR4(void *p)
\mathbf{while}(1)
UpdateLeftPWM(400);
                          // Velocity Setting
 UpdateRightPWM(400);
                          // Velocity Setting
 if (ADC_Data[2] > 150) //IR 4
     Stop();
          vTaskSuspend(xforward);
          if (sen_dat [4] > 215)
     //DelaymSec(200);
     Soft_Right2();
     DelaymSec(50);
          else if (ADC\_Data[0] < 170)
           Soft_Left();
           DelaymSec(50);
          else
          Back();
          DelaymSec(50);
```



```
if (ADC_Data[2] < 180)
             vTaskResume(xforward);
   }
   }
}
void IR5(void *p)
\mathbf{while}(1)
                            // Velocity Setting
UpdateLeftPWM(400);
 UpdateRightPWM(400);
                            // Velocity Setting
 if ( sen_dat[2] < 170) //IR 5
      Stop();
          vTaskSuspend(xforward);
          if ( ADC_Data[2] < 180)
      //DelaymSec(200);
      Soft_Left();
      DelaymSec (50);
          else if (\operatorname{sen}_{-}\operatorname{dat}[0] < 190)
          Right();
          DelaymSec(50);
          else
          Back();
          DelaymSec(50);
           if (sen_dat [2] > 170)
             vTaskResume(xforward);
   }
   }
void IR6 (void *p)
```



```
\mathbf{while}(1)
if (sen_dat [4] < 210) //IR 6
      Stop();
          vTaskSuspend(xforward);
           if ( ADC_Data[2] < 180)
      //DelaymSec(200);
      Soft_Right();
      DelaymSec(50);
           else if (ADC_Data[0] < 150)
           Soft_Left();
           DelaymSec(50);
           else
           Stop();
           DelaymSec (100);
           if(sen_dat[4] > 200)
             vTaskResume(xforward);
   }
}
void IR7(void *p)
\mathbf{while}(1)
 \label{eq:continuous_potential} \mbox{UpdateLeftPWM} \mbox{(400)}; \qquad // \mbox{\it Velocity} \ \ \mbox{\it Setting}
  UpdateRightPWM(400); // Velocity Setting  
 if(sen_dat[3] < 210) //IR 7
   {
      Stop();
           vTaskSuspend(xforward);
           if ( sen_dat [1] > 215)
```



```
//DelaymSec(200);
     Forward();
         DelaymSec(50);
         else if (sen_dat[0] > 190)
           Left();
          DelaymSec(50);
          else if (\operatorname{sen}_{-}\operatorname{dat}[2] > 170)
          Right();
          DelaymSec (50);
          else
          Back();
          DelaymSec (50);
          if (sen_dat [3] > 200)
            vTaskResume(xforward);
}
void IR8(void *p)
\mathbf{while}(1)
 UpdateRightPWM(400); // Velocity Setting
 if (sen_dat [5] < 210) //IR 7
   {
     Stop();
         vTaskSuspend(xforward);
         if ( ADC_Data[2] < 190)
     //DelaymSec(50);
     Soft_Right();
```



```
DelaymSec(50);
          else if (ADC_Data[0] < 150)
          Soft_Left();
          DelaymSec(50);
          else
          Stop();
          DelaymSec(50);
          if(sen_dat[5] > 190)
            vTaskResume(xforward);
void IR2_IR3(void *p)
 \mathbf{while}(1)
UpdateLeftPWM(400);
                          // Velocity Setting
                          // Velocity Setting
UpdateRightPWM(400);
if((ADC_Data[0] > 60) &&(sen_dat[1] < 230)) //IR 2 and IR 3
   {
     Stop();
         vTaskSuspend(xforward);
         // Back();
     //DelaymSec(50);
     Soft_Right2();
     DelaymSec(50);
          if((ADC\_Data[0]<180)\&\&(sen\_dat[1]>180))
            vTaskResume(xforward);
void IR2_IR3_IR4 (void *p)
{
```



```
\mathbf{while}(1)
UpdateLeftPWM(400);
                         //Velocity Setting
UpdateRightPWM (400); // Velocity Setting
if((ADC_Data[2]>150) \&\& (sen_dat[1]<200) \&\& (ADC_Data[0]>120)) //IR
     Stop();
         vTaskSuspend(xforward);
          Back();
     DelaymSec(50);
     //Soft_Right2();
     //DelaymSec(50);
         if (( ADC_Data[2]<150)&&(sen_dat[1]>190) && (ADC_Data[0]<120)
           vTaskResume(xforward);
   }
void IR3_IR4 (void *p)
 \mathbf{while}(1)
UpdateLeftPWM(400); // Velocity Setting
                         // Velocity Setting
UpdateRightPWM(400);
if((ADC_Data[2]>60) \&\& (sen_dat[1]<230)) //IR 3 and IR 4
   {
         vTaskSuspend(xforward);
         Back();
     DelaymSec(50);
     Soft_Left2();
     DelaymSec(50);
         if((ADC_Data[2]<180)\&\&(sen_dat[1]>180))
           vTaskResume (xforward);
```



```
void lcdprint(void *p)
\mathbf{while}(1)
   \operatorname{sen}_{-}\operatorname{dat}[1] = \operatorname{MEGA8\_ADCRead}(9);
                                                   //IR 3
   sen_dat[0] = MEGA8\_ADCRead(6);
                                                   //IR 1
   sen_dat[2] = MEGA8\_ADCRead(15);
                                                   //IR 5
                                                   //IR 6
   \operatorname{sen}_{-}\operatorname{dat}[4] = \operatorname{MEGA8\_ADCRead}(5);
   sen_dat[3] = MEGA8\_ADCRead(4);
                                                   //IR 7
   \operatorname{sen}_{-}\operatorname{dat}[5] = \operatorname{MEGA8\_ADCRead}(0);
                                              //IR
                                                   //IR 2
   ADC_Data[0] = AD0_Conversion(6);
   ADC_Data[2] = AD0_Conversion(7);
                                              //IR 4
                                           //IR 4
   LCD_Print (1,5,ADC_Data [2],3);
                                           //IR 3
   LCD_Print(1,9,sen_dat[1],3);
   LCD_Print(1,13,ADC_Data[0],3);
                                           //IR 2
                                           //IR 5
   LCD_Print(2,1,sen_dat[2],3);
                                               //IR 6
   LCD_Print(2,5,sen_dat[4],3);
   LCD_Print (2,9, sen_dat [3],3);
                                          //IR 7
                                               //IR 8
   LCD_Print (2,13, sen_dat [5],3);
   LCD_Print (1,1, sen_dat [0],3);
                                               //IR 1
}
void forward(void *p)
\mathbf{while}(1)
UpdateLeftPWM(300);
 UpdateRightPWM(300);
 Forward();
 Stop();
 DelaymSec (30);
void Init_Ports(void)
 Init_ADC_Pin();
 Init_Motion_Pin();
 Init_LCD_Pin();
```



```
}
void Init_Peripherals(void)
 Init_Ports();
 Init_ADC_Pin();
 Init_ADC0();
 Init_ADC1();
Init_Sensor_Switch_Pin();
 SPI1_Init();
 Init_PWM();
/****<del>******</del>**********************
SPI Data transmission and reception
******************************
BYTE MEGA8_ADCRead(BYTE channel)
{
        BYTE
                adcVal = 0;
        DWORD i = 0;
        IOCLR0 |= SPI1_SLAVE_SELECT;
                                                 // slave select enabl
        SPI1_SendByte(channel);
        //Delay for settling down
                                    (80 uS)
        for (i=0; i<1000; i++);
        adcVal = SPI1_ReceiveByte();
        IOSET0 |= SPI1_SLAVE_SELECT;
                                                 // slave select disab
        //Delay for settling down
                                   (80 \ uS)
        for (i=0; i<1000; i++);
        return adcVal;
}
int main()
 PINSEL0 = 0x000000000;
 PINSEL1 = 0x000000000;
```

//PINSEL2 = 0x00000000; Init_Peripherals();



```
adc_data();
 DelaymSec (40);
 Init_Peripherals();
LCD_4Bit_Mode();
LCD_Init();
LCD_Command(0x01);
DelaymSec(15);
      \mathbf{while}(1)
      xTaskCreate(IR1,"IR1",configMINIMAL_STACK_SIZE,NULL,tskIDLE_PRIORITY+1,&xIF
     xTaskCreate (IR2,"IR2",configMINIMAL\_STACK\_SIZE,"NULL,tskIDLE\_PRIORITY+1,\&xIFxTaskCreate (IR3,"IR3",configMINIMAL\_STACK\_SIZE,"NULL,tskIDLE\_PRIORITY+1,\&xIFxTaskCreate (IR3,"IR3",configMINIMAL\_STACK\_SIZE,"NULL,tskIDLE\_PRIORITY+1,\&xIFxTaskCreate (IR3,"IR3",configMINIMAL\_STACK\_SIZE,"NULL,tskIDLE\_PRIORITY+1,\&xIFxTaskCreate (IR3,"IR3",configMINIMAL\_STACK\_SIZE,"NULL,tskIDLE\_PRIORITY+1,&xIFxTaskCreate (IR3,"IR3",configMINIMAL_STACK\_SIZE,"NULL,tskIDLE\_PRIORITY+1,&xIFxTaskCreate (IR3,"IR3",configMINIMAL_STACK_SIZE,"NULL,tskIDLE\_PRIORITY+1,&xIFxTaskCreate (IR3,"IR3",configMINIMAL_STACK_SIZE,"NULL,tskIDLE\_PRIORITY+1,&xIFxTaskCreate (IR3,"IR3",configMINIMAL_STACK_SIZE,"NULL,tskIDLE_PRIORITY+1,&xIFxTaskCreate (IR3,"IR3",configMINIMAL_STACK_SIZE,"NULL,tskIDLE_PRIORITY+1,&xIFxTaskCreate (IR3,"IR3",configMINIMAL_STACK_SIZE,"NULL,tskIDLE_PRIORITY+1,&xIFxTaskCreate (IR3,"IR3",configMINIMAL_STACK_SIZE,"NULL,tskIDLE_PRIORITY+1,&xIFxTaskCreate (IR3,"IR3",configMINIMAL_STACK_SIZE,"NULL,tskIDLE_PRIORITY+1,&xIFxTaskCreate (IR3,"IR3",configMINIMAL_STACK_SIZE,"NULL,tskIDLE_PRIORITY+1,&xIFxTaskCreate (IR3,"IR3",configMINIMAL_STACK_SIZE,"NULL,tskIDLE_PRIORITY+1,&xIFxTaskCreate (IR3,"IR3",configMINIMAL_STACK_SIZE,"NULL,tskIDLE_PRIORITY+1,&xIFxTaskCreate (IR3,"IR3",configMINIMAL_STACK_SIZE,"NULL,tskIDLE_PRIORITY+1,&xIFxTaskCreate (IR3,"IR3",configMINIMAL_STACK
      xTaskCreate(IR4,"IR4",configMINIMAL_STACK_SIZE,NULL,tskIDLE_PRIORITY+1,&xIF
     xTaskCreate(IR5,"IR5",configMINIMAL_STACK_SIZE,NULL,tskIDLE_PRIORITY+1,&xIF
      xTaskCreate(IR6,"IR6",configMINIMAL_STACK_SIZE,NULL,tskIDLE_PRIORITY+1,&xIF
     x Task Create (IR7," IR7", configMINIMAL\_STACK\_SIZE, NULL, tskIDLE\_PRIORITY+1, \&xIFACK\_SIZE, NULL, tskIDLE\_PRIORITY+1, &xIFACK\_SIZE, NULL, &xIFACK\_SIZE, &xIFACK\_SIZ
      xTaskCreate(IR8, "IR8", configMINIMAL_STACK_SIZE, NULL, tskIDLE_PRIORITY+1,&xIF
      xTaskCreate(IR2_IR3,"IR2_IR3",configMINIMAL_STACK_SIZE,NULL,tskIDLE_PRIORIT
     xTaskCreate(IR3_IR4,"IR3_IR4",configMINIMAL_STACK_SIZE,NULL,tskIDLE_PRIORIT
      xTaskCreate (forward, "forward", configMINIMAL_STACK_SIZE, NULL, tskIDLE_PRIORIT
      xTaskCreate(IR2_IR3_IR4,"IR2_IR3_IR4",configMINIMAL_STACK_SIZE,NULL,tskIDLE
      xTaskCreate(lcdprint,"Display",configMINIMAL_STACK_SIZE,NULL,tskIDLE_PRIORI
                                    vTaskStartScheduler();
```

67



In this code there are total 13 tasks. Out of those one is especially for forward motion and the other is for receiving the data from the slave and assigning it to a particular variable. There are 8 tasks in the code each of them is for a particular IR. In that task it determines the movement of the robot once it encounters any obstacles. For eg: consider IR 3 which is the front sharp sensor. There can be 3 possibilities when it faces an obstacle. It can go left or right or go back. In the task of "IR3" first that task will check for sensor 5 if there is no obstacle the it will turn right. Suppose if there are some obstacles there too then it will turn left. And if that is also blocked then it will just go back. Similarly, for each and every sensor there are such cases. There is a task called as "lcdprint" that will store the values of the sensors. In order to remove some of the blind spots (like the space between the two sensors) some more tasks are created like 'IR2-IR3' and 'IR3-IR4' which evaluates the obstacles for that spaces. There is a task that will evaluate obstacles in certain depth like the corner of a square. It is represented by 'IR2-IR3-I4' which considers the obstacles detected by all the three sensors and evaluates accordingly and adjusts the motion of the robot.

This is the working of the robot.



0.16 References

- http://tinymicros.com/
- \bullet ucos:http://www.soe.uoguelph.ca/webfiles/engg4420/uCOS-II%20The%20Real-Time%20Kernel.pdf
- Datasheet:http://www.keil.com/dd/docs/datashts/philips/lpc2141_42_44_46_48.pdf
- Which to choose: http://www.edaboard.com/thread72908.html
- Rtos basic:http://www.cs.sfu.ca/CourseCentral/300/oneill/Resources/Segment7.pdf
- Git already done:https://github.com/selste/openDrive
- Keil kernel: http://www.keil.com/rl-arm/kernel.asp
- ARM porting: http://www.nxp.com/documents/selection_guide/75016983.pdf
- BOOK: http://www.profdong.com/elc4438_spring2016/USINGTHEFREERTOSREALTIMEKER
- http://www.ocfreaks.com/lpc2148-uart-programming-tutorial/
- http://www.ocfreaks.com/cat/embedded/lpc2148-tutorials/
- https://www.pantechsolutions.net/microcontroller-boards/uart-interfacing-with-lpc2148-arm7-primer
- http://www.rtos.be/2013/05/mutexes-and-semaphores-two-concepts-for-two-different-use-cases/
- https://sites.google.com/site/rtosmifmim/home
- http://www.keil.com/dd/docs/datashts/philips/user_manual_lpc214x.pdf
- https://learn.sparkfun.com/tutorials/exploring-xbees-and-xctu
- http://alumni.cs.ucr.edu/amitra/sdcard/Additional/sdcard_appnote_foust.pdf
- https://www.youtube.com/watch?v=FsHVBxXo45Y
- http://www.nxp.com/documents/application_note/AN10736.pdf (VI)
- $\bullet \ https://www.element14.com/community/docs/DOC-61511/l/arm-lpc2148-usb-hid-human-interface-device-example \\$
- https://www.youtube.com/playlist?list=PL0E131A78ABFBFDD0
- Camera

0.16. REFERENCES



- -http://embeddedprogrammer.blogspot.in/2012/07/hacking-ov7670-camera-module-sccb-cheat.html
- http://forum.arduino.cc/index.php?topic=125767.0
- http://forum.arduino.cc/index.php/topic,159557.0.html

• USB

- http://www.keil.com/forum/18912/usb-interface-with-lpc2148/
- http://www.keil.com/forum/15398/usb-hid-mouse-driver-using-lpc2148/
- $-\ http://www.nxp.com/documents/application_note/AN10736.pdf$
- https://www.sparkfun.com/tutorials/94
- https://community.arm.com/thread/6323

• SPI

- http://www.datasheetarchive.com/dlmain/Datasheets-NXP/DSANXP010006749.pd
- Sharp sensor Equation: http://ediy.com.my/blog/item/92-sharp-gp2y0a21-ir-distance-sensors
- Wifi module https://www.pantechsolutions.net/media/k2/attachments/Wi_Fi_Interfacing
- Pyserial https://github.com/gskielian/Arduino-DataLogging/blob/master/PySerial/RE
- RPI https://www.raspberrypi.org/forums/viewtopic.php?f=26&t=21610