

Laboratory of Electronics Antennas and Telecommunications



Antenna Radiation Measurement tutorial with Spectrum Analyser Fabien Ferrero





Antenna performance indicator

Some definitions :


- P_s: Power from the source
- P_{ref}: Power reflected by the antenna
- P_{rad} power radiated by the antenna



- Reflection coefficient
 - S₁₁ is usually plotted in dB scale
 - S₁₁ criteria from -10 dB to -6dB (90% to 75% transmitted power)



- Include matching and radiation loss
- Can be plotted in linear or dB scale
- 30-70% classically observed
- Gain
 - Include matching, radiation loss, polarization and directivity
 - Plotted in dBi
 - $U(\theta, \varphi)$ is the radiation intensity in a given direction

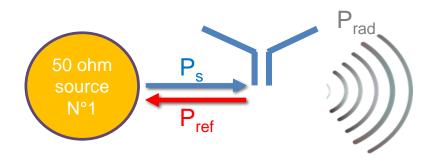

$$|S_{11}|^2 = P_{ref}/P_s$$

$$\eta_t = P_{rad}/P_s$$

$$G(\theta, \varphi) = \frac{U(\theta, \varphi)}{P_S/4\pi}$$


Antenna key parameters


Antenna is a resonnant structure :

- Input impedance is changing with frequency
- Limited frequency bandwidth
- Miniature antenna can have a low efficiency due to metallic or dielectric losses

Antenna is an open structure


- Compare to electronic components, antenna is strongly influenced by its surrounding environment
- For integrated antenna, the electromagnetic wave is generated by the antenna <u>and</u> by the terminal ground plane
- Small antenna has to be carefully tuned

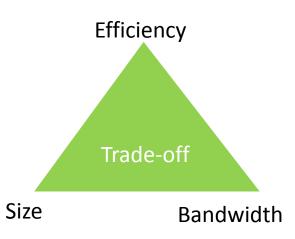


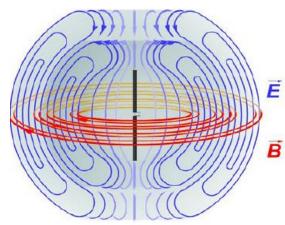

How to perform antenna radiation measurement?

- Accurate antenna measurement is difficult
- Cables have a large influence on the measurement
- Only consider Total Radiated Power (TRP) measurement (your device will be in Continuous Wave mode)

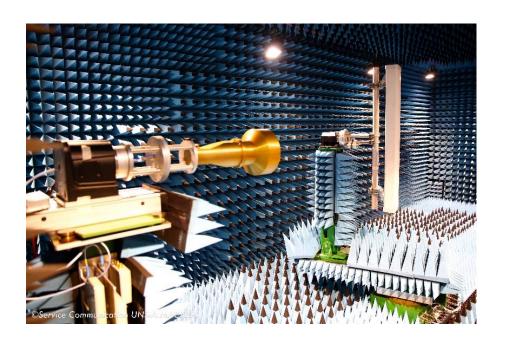

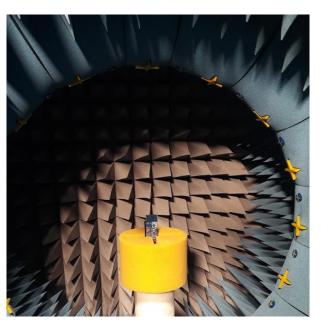


ETSITS 103 052 V1.1.1 (2011-03)

Anechoic chamber or open site


Reference antenna: 1 & 6

Power source : 5



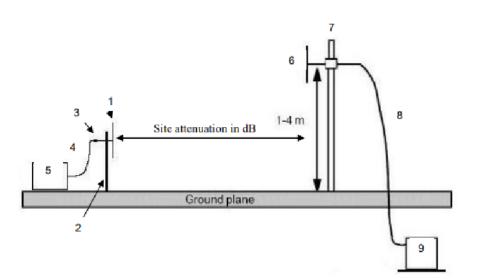




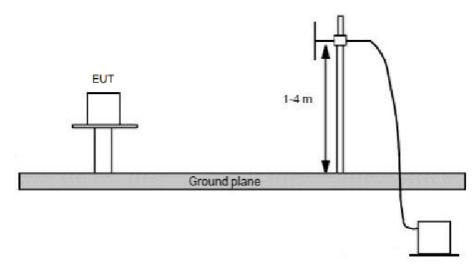

- Substitution or Pre-substitution method
 - First measurement Rx_{Cal} for calibration using a reference antenna
 - Second measurement Rx_{AUT} of the Antenna under Test (AUT)

$$(Gain_{AUT})_{dBi} = (Rx_{AUT})_{dBm} - (Rx_{Cal})_{dBm} + (Gain_{Ref\ Ant})_{dBi}$$

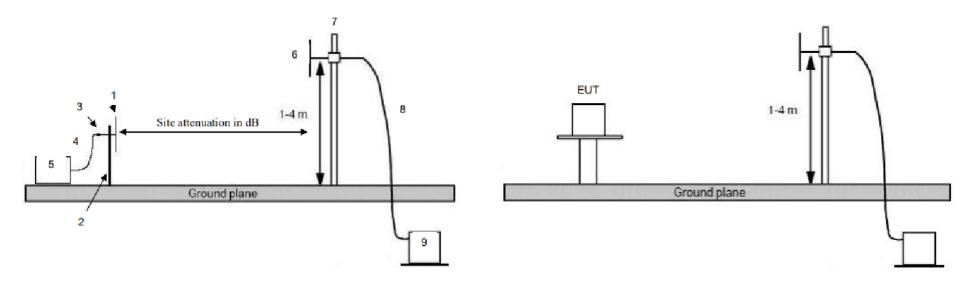


- Power source
- Reference antenna
- Anechoic chamber
- Spectrum analyser


Adding a RF connector

- Try to place a connector pad between module and antenna
- UFL are very small and easy to find
- Very important for debug!
- A UFL connector can be soldered on the bottom part of the board
- If you just solder the connector, the UFL will be in shunt with the existing « UCA » antenna
 - If you leave the UFL unconnected, your board will work as usual (the UFL effect is negligeable)
 - If you connect a load (antenna or spectrum) on the UFL, rougly half of the power will be captured by the UFL, and half part of the power will be radiated (and a part of the power will be reflected to the source)



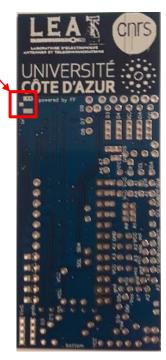


Adding a RF connector

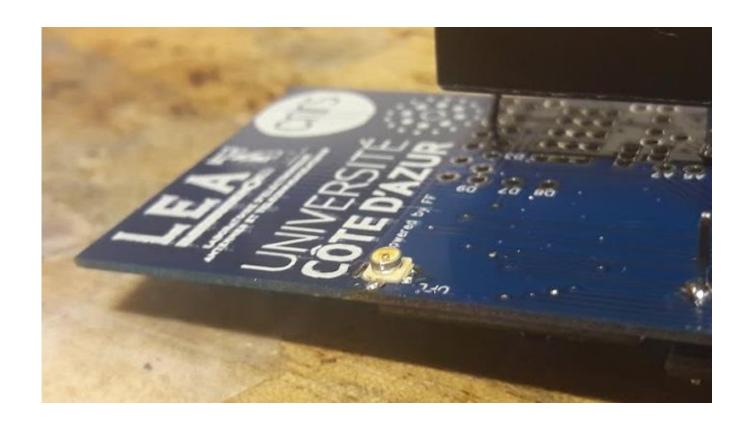

Adding a RF connector

- To have 100% of the power on the UFL connector
 - You need to cut the antenna feeding
 - You will be able to solder it again

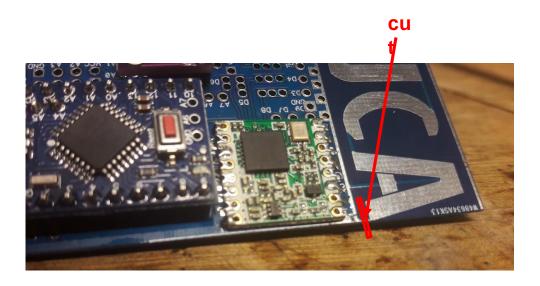


- Power source
- Reference antenna
- Anechoic chamber
- Spectrum analyser

Can we reduce the price?

Printed Sleeve dipole with coaxial cable


- Low cost 0.4mm FR4 Epoxy 140x15mm
- Low cost Small coaxial cable
- Integrated Balun for environment robustness
- Omnidirectional pattern
- Gain 2.5dBi
- Measured Efficiency 83%




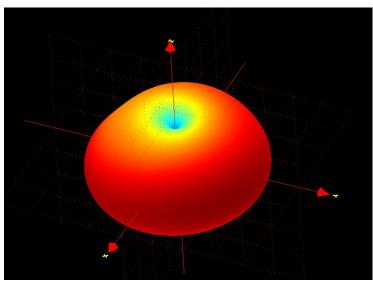


Half-wave dipole Antenna

Planar Sleeve dipole on 0.4mm FR4 substrate

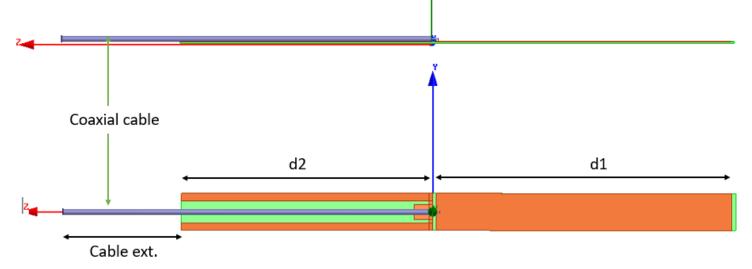

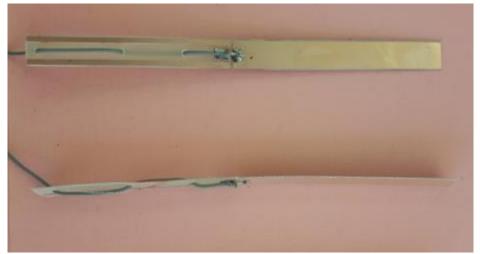


Comparison with on-the-shelf antenna

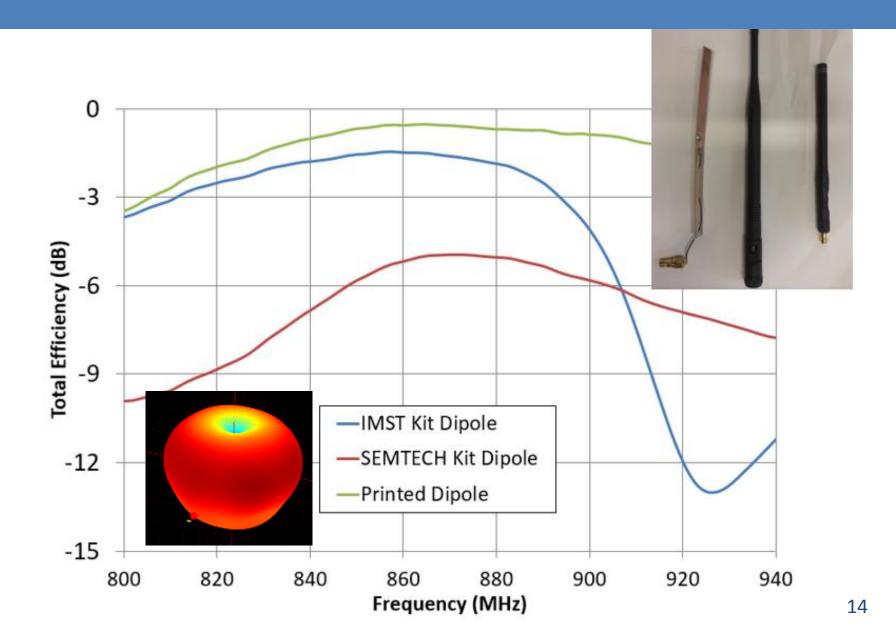

Printed Sleeve dipole with coaxial cable

Low cost 0.4mm FR4 Epoxy 140x15mm

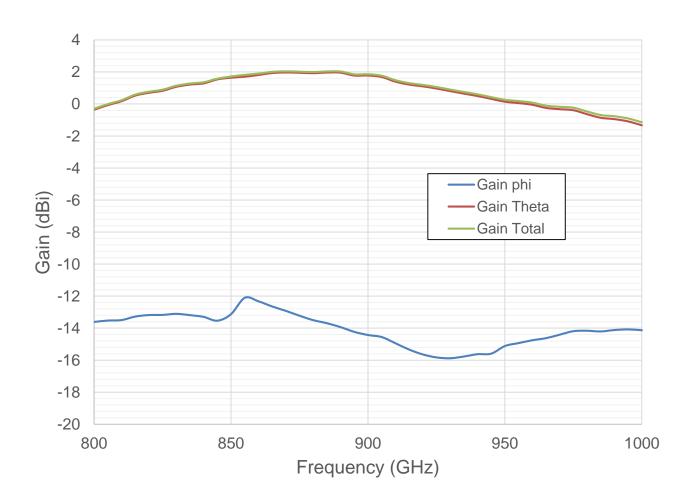

Printed Sleeve dipole with coaxial cable


Don't want to fabricate it? can just buy it!


https://furiousfpv.com/advanced search result.php?keywords=lora



Top » Catalog » Advanced Search » Search Results

Products meeting the search criteria

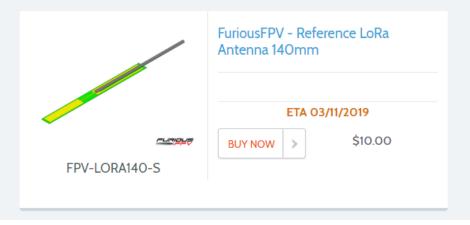

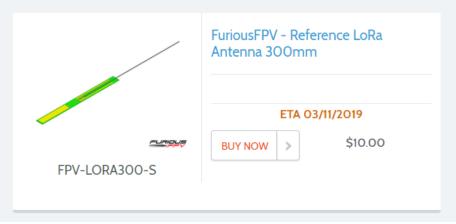

- Power source
- Reference antenna
- Anechoic chamber
- Spectrum analyser

Can we reduce the price?

ETSI TS 103 052 V1.1.1 (2011-03)

- Distance between antenna
- It shall be ensured that radiated measurements are tested in the far field.
- There is no clearly defined transition from near field to far field. The distance should be equal to or exceed:


$$\frac{2(d_1+d_2)^2}{\lambda}$$

where:

- d1 is the largest dimension of the EUT/dipole after substitution (m);
- d2 is the largest dimension of the test antenna (m);
- λ is the test frequency wavelength (m).

No anechoic chamber?

- We want Free Space : No reflection (because of interferences)
- Try to analyze the possible origin for reflection and to limits as much as you can
- You can also buy some absorber to improve your test-bed (EM sheet, Pyramidal absorber)

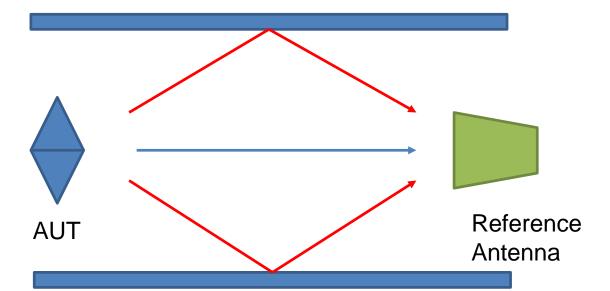

- Power source
- Reference antenna
- Anechoic chamber
- Spectrum analyser

A LoRa transmiter send a packet with the next frequency in the payload





TTGO or Heltec board with OLED Screen

A LoRa receiver get the packet, decode the payload and move to the next frequency

Receiver is based on ESP32 + LoRa system TTGO or Heltec with Oled Screen board are ok Cost less than 10€

When the button is pushed, the calibration start with the reference antenna

Once it's done, the system is calibrated a can measure AUT On the screen, you can find the frequency with maximum and minimum gain

You can visualize the data using <u>MegunoLink</u>. This software can plot X-Y data


Exemple of measurement

- Calibration procedure
- Measurement

Setting-up Calibration device and Antenna Under Test

Connect your device with UFL cable to a reference antenna

Upload the code *DUT_Channel_Sounder_sender_workshop2.ino* to the reference device and Antenna under test

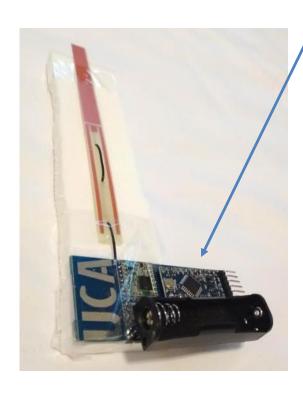



Setting-up Calibration device and Antenna Under Test

In DUT_Channel_Sounder_sender_workshop2.ino:

```
19

20 int counter = 0;

21 int avg = 1;

22 long freq_start = 800e6;


23 long freq_stop = 950e6;

24 long freq_step = 1e6;
```

You can choose the start and stop frequency, and the frequency step

Connect the receiver device (TTGO board) with UFL cable to a reference antenna

Upload the code LoRaOLED_Spectrumv3.ino to the receiver device

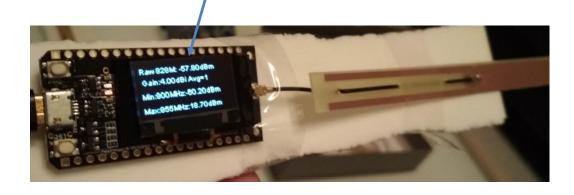

In LoRaOLED_Spectrumv3.ino code,

```
61 int ref_freq[] = {799e6, 850e6, 900e6, 950e6};
62 float ref_val[]={-3,17,18,3}; // Warning, all power values are in tenth of dB
```

The gain versus frequency of the reference antenna is describe by linear approximation.

If you use a different reference antenna, you should update these tables

The measurement is plotted in MegunoLink format


Set-up the reference device and receiver device at a distance between 30 and 50 cm.

Push the button, the calibration start with the reference antenna. Wait for the complete scan between 800 and 950MHz






Once it's done, the system is calibrated. The system will continue to scan but you should find the gain of the reference antenna

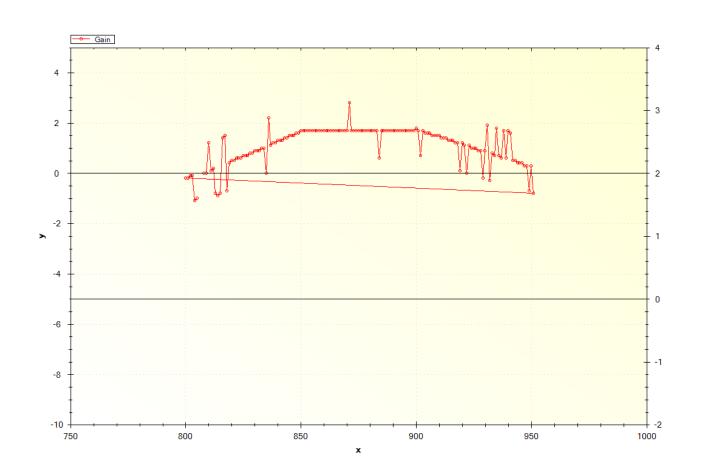

- Now you can replace the reference antenna by the Antenna Under Test.
- Try to place it exactly at the same position

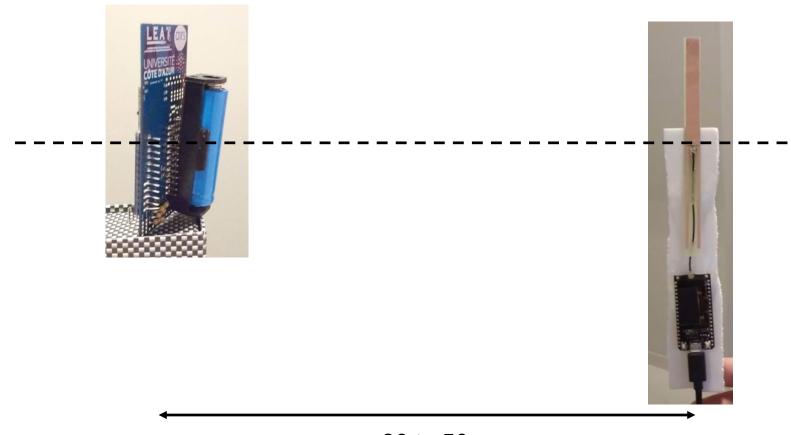


Exemple of DIY measurement at home, use box as antenna holder






Measurement of 868MHz antenna Sweep from 800 to 950 MHz

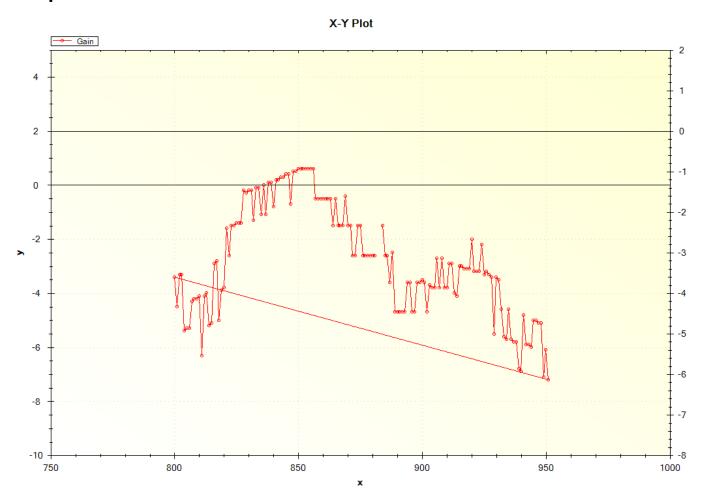

Measurement of 920 MHz antenna Sweep from 800 to 950 MHz

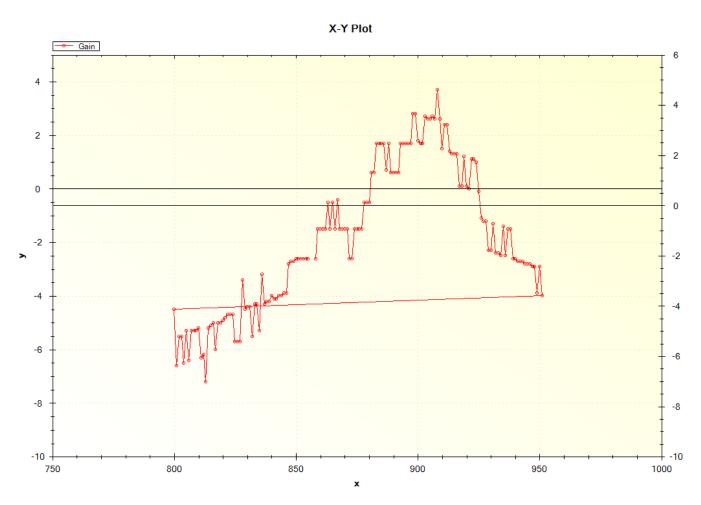

Conclusion

- Can we do low-cost antenna radiation measurement
 - Yes and No, it depends on the accuracy you expect
 - Practice and know-how are essential
- Preliminary measurement can be realized to gain time
 - Some filtering can help
 - Repeat the same measurement for different distance
- Always consider uncertainty sources
- The more you invest, the more confident you will be in your measurement