The Conquest of Space: Space: Space Exploration and Rocket Science

TECHNICAL PART FORMULARY AND NOTES

Version 2017.1

Preface

The present notes correspond to the course "The Conquest of Space: space exploration and rocket science," imparted on UC3Mx by Manuel Sanjurjo, Mario Merino, Manuel Soler, Gonzalo Sánchez, David Morante, Filippo Cichocki, Daniel Pérez, Xin Chen, and Eduardo Ahedo from the UC3M Aerospace Engineering department.

The notes are provided as a companion material to the course, and are not intended as a substitute of a real book or the lessons in the course. They are conceived as a quick summary without extensive explanations, for which the learner must search elsewhere. The learner should have a working knowledge of fundamental mathematics (calculus and linear algebra) and physics (mechanics) to fully understand everything; if you don't, or if you feel a bit uncomfortable with these topics at the start the course, please search online or in your library for an introduction to them or ask in the forums.

The document typeset in LATEX and is released under the CC-BY-SA license v.4.0. The latest version can be found on GitHub and on Mario Merino's personal webpage. If you detect any errata, or have any comments for its improvement, please contact Mario Merino at mario.merino@uc3m.es.

1 Astrodynamics: the two body problem

Position, velocity and acceleration of point particle In Cartesian coordinates, and calling i, j, k the unit vectors of the basis of our inertial reference frame, the position r, velocity v and acceleration a vectors of a point particle P are defined as:

$$\mathbf{r} = x\mathbf{i} + y\mathbf{j} + z\mathbf{k} \tag{1.1}$$

$$\boldsymbol{v} = v_x \boldsymbol{i} + v_y \boldsymbol{j} + v_z \boldsymbol{k} \tag{1.2}$$

$$\mathbf{a} = a_x \mathbf{i} + a_y \mathbf{j} + a_z \mathbf{k} \tag{1.3}$$

The velocity is the derivative of the position, and the acceleration is the derivative of the velocity. Conversely, the position is the integral of the velocity, and the velocity is the integral of the acceleration:

$$\frac{\mathrm{d}\boldsymbol{r}}{\mathrm{d}t} = \boldsymbol{v}; \qquad \qquad \frac{\mathrm{d}\boldsymbol{v}}{\mathrm{d}t} = \boldsymbol{a}; \tag{1.4}$$

$$r = \int_0^t v dt + r_0; \qquad v = \int_0^t a dt + v_0.$$
 (1.5)

Newton's second law of mechanics states that the acceleration of a point particle is proportional to the sum of all forces acting upon it. The constant of proportionality is its mass:

$$m\mathbf{a} = \sum \mathbf{F} \tag{1.6}$$

Thus, knowing the mass and the forces acting on a particle we may compute its acceleration. By integrating the acceleration twice we can find how the position of the particle changes in time, i.e., its *trajectory*. This is known as solving the direct problem of mechanics.

Newton's law of gravitation The force exerted upon a point particle of mass m by another of mass M located at the origin of coordinates is

$$\mathbf{F} = -G\frac{mM}{r^2}\mathbf{u}_r \tag{1.7}$$

where $u_r = r/r$ is the unit vector in the direction of r, and $G = 6.67408 \cdot 10^{-11} \text{ m}^3 \text{kg}^{-1} \text{s}^{-2}$ is the universal gravitational constant.

The equation of motion of a point particle in the gravity field of a planet is then:

$$\boldsymbol{a} = \frac{\mathrm{d}\boldsymbol{v}}{\mathrm{d}t} = \frac{\mathrm{d}^2 \boldsymbol{r}}{\mathrm{d}t^2} = -G\frac{M}{r^2} \boldsymbol{u}_r \tag{1.8}$$

Conservation of mechanical energy The mechanical energy of a point particle in the gravity field of a planet like the Earth is $E = E_{kin} + E_{pot}$, where

$$E_{kin} = \frac{1}{2}mv^2; \quad E_{pot} = -\frac{GmM}{r}.$$
 (1.9)

The mechanical energy E is a conserved quantity of motion.

Demonstration: by denoting with \cdot the scalar product, we dot-multiply Eq. (1.8) by mv:

$$m\frac{\mathrm{d}\boldsymbol{v}}{\mathrm{d}t}\cdot\boldsymbol{v} = -G\frac{mM}{r^2}\left(\frac{\boldsymbol{r}}{r}\right)\cdot\boldsymbol{v} \Rightarrow \frac{1}{2}m\frac{\mathrm{d}v^2}{\mathrm{d}t} = -G\frac{mM}{r^3}\boldsymbol{r}\cdot\frac{\mathrm{d}\boldsymbol{r}}{\mathrm{d}t} = -G\frac{mM}{2r^3}\frac{\mathrm{d}r^2}{\mathrm{d}t} = GmM\frac{\mathrm{d}}{\mathrm{d}t}\left(\frac{1}{r}\right) \quad (1.10)$$

$$\frac{\mathrm{d}}{\mathrm{d}t} \left(\frac{1}{2} m v^2 - \frac{GmM}{r} \right) = 0 \Rightarrow \frac{1}{2} m v^2 - \frac{GmM}{r} = E = \text{const.}$$
 (1.11)

Conservation of angular momentum The angular momentum of a point particle about the origin is defined as

$$\boldsymbol{H} = m\boldsymbol{r} \times \boldsymbol{v},\tag{1.12}$$

where \times is the vector product. \mathbf{H} is a vector that is conserved in the motion. Its magnitude can be written as $H = mr^2 d\theta/dt$, where θ is the polar angle of the motion of the particle.

Demonstration: we cross-multiply Eq. (1.8) by mr. The right-hand-side is identically zero thanks to the properties of the vector product:

$$m\mathbf{r} \times \mathbf{a} = -G\frac{mM}{r^2}\mathbf{r} \times \left(\frac{\mathbf{r}}{r}\right) = 0.$$
 (1.13)

We now apply the following identity


$$\frac{\mathrm{d}}{\mathrm{d}t}(m\mathbf{r}\times\mathbf{v}) = m\mathbf{v}\times\mathbf{v} + m\mathbf{r}\times\mathbf{a} = m\mathbf{r}\times\mathbf{a},$$
(1.14)

and conclude that

$$\frac{\mathrm{d}\boldsymbol{H}}{\mathrm{d}t} = 0 \Rightarrow \boldsymbol{H} = \text{const.} \tag{1.15}$$

Conic sections The trajectory of a point particle in the two body problem of astrodynamics is a conic section. Conic sections are characterized by their semi-major axis a and their eccentricity e. The conic section can be any of the following:

- 1. Ellipse (a > 0 and e < 1). The only closed orbit. When e = 0, the ellipse is a circle.
- 2. Parabola $(a \to \infty \text{ and } e = 1)$. A particle in a parabolic trajectory will reach infinity with zero velocity. The semi-latus rectum $p = a(1 e^2)$ is used instead of a in this case to avoid the indetermination.
- 3. Hyperbola (a < 0 and e > 1). A particle in a parabolic trajectory will reach infinity with non-zero velocity. Of the two branches of the hyperbola, the trajectory is only one of them.

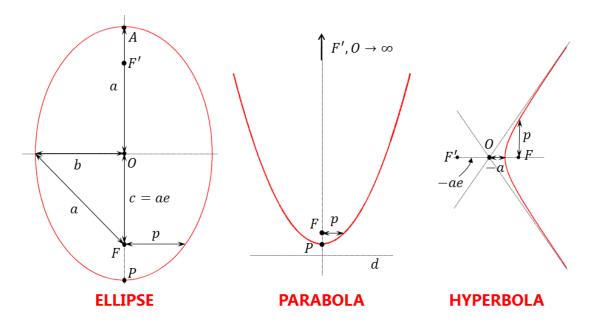

The pericenter and the apocenter are the points of the trajectory nearest and farthest away from the planet:

$$r_p = a(1-e); \quad r_a = a(1+e).$$
 (1.16)

Observe that the definition of the apocenter only makes sense for elliptic orbits. Also, in the case of parabolic orbits, the pericenter can be computed simply as $r_p = p/2$.

At the pericenter and apocenter the position and velocity vectors are perpendicular to each other, i.e., $\mathbf{r} \cdot \mathbf{v} = 0$.

Vis-viva equation The constant E in the energy equation is related to the semi-major axis of the orbit:

$$\frac{1}{2}mv^2 - \frac{GmM}{r} = -\frac{GmM}{2a} \tag{1.17}$$

Demonstration: We particularize the mechanical energy equation at the pericenter and the apocenter and subtract the two expressions:

$$\frac{1}{2}mv_p^2 - \frac{GmM}{r_p} = E; \quad \frac{1}{2}mv_a^2 - \frac{GmM}{r_a} = E. \tag{1.18}$$

$$\frac{1}{2}m\left(v_{p}^{2}-v_{a}^{2}\right)-GmM\left(\frac{1}{r_{p}}-\frac{1}{r_{a}}\right)=0;$$
(1.19)

From the conservation of angular momentum, using $2a = r_a + r_p$, and since the position and velocity vectors are perpendicular at the pericenter and apocenter,

$$v_a = \frac{r_p}{2a - r_p} v_p \tag{1.20}$$

Substituting v_a in Eq. (1.19), and using again $2a = r_a + r_p$,

$$\frac{1}{2}mv_p^2 \left(1 - \frac{r_p^2}{(2a - r_p)^2} \right) = GmM \left(\frac{1}{r_p} - \frac{1}{2a - r_p} \right) \Rightarrow v_p^2 = \frac{GM}{a} \left(\frac{2a}{r_p} - 1 \right)$$
(1.21)

Finally, substituting in the first of Eqs. (1.18) we find E = -GmM/(2a). Clearly,

- 1. Particles in elliptic orbits have negative mechanical energy. The orbit is bounded (under no condition could the particle have r > 2a, as the velocity would become imaginary; in reality, the maximum r occurs at apocenter, $r_a = a(1 e)$).
- 2. Particles in parabolic orbits have zero mechanical energy, as they reach zero velocity as $r \to \infty$.
- 3. Particles in hyperbolic orbits have positive mechanical energy, as they have a non-zero excess velocity at infinity.

Important velocities There are several important velocity quantities in the two body problem. Importantly, these velocities do not depend on the mass of the point particle, only on the mass of the planet M and the universal gravitational constant G:

- Circular velocity: $v_c = \sqrt{GM/r}$. This is the magnitude of the velocity that a particle must have at a radius r to be in circular orbit. Obtained from vis-viva equation, by imposing that the trajectory is a circle, r = a.
- Escape velocity: $v_e = \sqrt{2GM/r}$. Any particle with this velocity at a distance r from the origin is in parabolic orbit, and will reach infinity with zero velocity. Obtained from vis-viva equation by setting $a = \infty$.
- Velocity at pericenter, $v_p = \sqrt{GM \frac{1+e}{1-e}}$. Obtained from vis-viva equation, particularizing at $r_p = a(1-e)$.
- Velocity at apocenter, $v_a = \sqrt{GM\frac{1-e}{1+e}}$. Obtained from vis-viva equation, particularizing at $r_a = a(1+e)$. Observe that $v_p > v_a$ always.

Kepler laws Johannes Kepler stated his famous three laws of planetary motion before Newton established his mathematical theory of gravitation and motion:

1. The orbit of a planet is an ellipse with the Sun at one focus. We now know that, in general, according to the laws of motion and gravitation of Newton, the trajectory of a point particle (a planet) about the Sun can be an ellipse, a parabola, or a hyperbola (i.e. any conic section).

- 2. The vector from the Sun to the planet sweeps out equal areas during equal intervals of time. The area sweep rate is $dA/dt = (1/2)r^2d\theta/dt = H/(2m)$, so this law is a direct consequence of the conservation of angular momentum.
- 3. The square of the orbital period of the planet is proportional to the cube of the semi-major axis of its ellipse, i.e. $T^2 \propto a^3$. This can easily be proven with the explanation above, taking into account that the area of an ellipse is $A = \pi ab$, where $b = a\sqrt{1 e^2}$ is the semi-minor axis.

2 Rocket motion

Action-reaction principle: thrust force As the third law of Newton states, for every action there is an equal but opposite action elsewhere. By ejecting propellant, a rocket exploits this law to create a thrust force on the vehicle equal to the momentum expelled from the rocket per unit time:

$$F = \dot{m}c, \tag{2.1}$$

where $\dot{m} = -\mathrm{d}m/\mathrm{d}t$ is the mass flow rate at which propellant is being ejected, and c the exhaust velocity of the propellant leaving the rocket. The velocity c is also known as **specific impulse**, I_{sp} . Due to historical reasons, the I_{sp} is sometimes expressed in seconds instead of in velocity units, dividing c by $g_0 = 9.81 \text{ m/s}^2$, the gravity acceleration on the ground:

$$I_{sp}^{v} = c \text{ (in velocity units); } I_{sp}[s] = \frac{c[m/s]}{g_0[m/s^2]} \text{ (in seconds).}$$
 (2.2)

Tsiolkovsky's rocket equation The equation of motion of a rocket system of mass m and velocity v with thrust $F = \dot{m}c$ is:

$$m\frac{\mathrm{d}v}{\mathrm{d}t} = \dot{m}c = -\frac{\mathrm{d}m}{\mathrm{d}t}c\tag{2.3}$$

integrating this equation between two instants of time t_1 and t_2 , between which the rocket velocity changes from v_1 to v_2 , and the rocket mass changes from m_1 to m_2 , requires some knowledge of differential equations. The result is:

$$\frac{\mathrm{d}v}{c} = \frac{\mathrm{d}m}{m} \Rightarrow \frac{v_2 - v_1}{c} = \ln\left(\frac{m_1}{m_2}\right). \tag{2.4}$$

In this equation, "ln" is the natural logarithm. We define the quantity $\Delta v = v_2 - v_1$, pronounced delta-vee, as the velocity increase obtained thanks to the rocket, which has used a mass of propellant equal to $m_2 - m_1$. Each space mission has a well-defined "cost" in terms of the necessary Δv to accomplish it.

This equation can be inverted using the exponential function "exp" into

$$\frac{m_2}{m_1} = \exp\left(-\frac{\Delta v}{c}\right) \equiv \exp\left(-\frac{\Delta v}{I_{sp}g_0}\right). \tag{2.5}$$

This equation shows that unless the Δv of the mission that we want to carry out is smaller or comparable to the $I_{sp}g_0$ of our rocket technology, the final mass m_2 will be tiny compared to the initial mass m_1 of the rocket. Typically, sending a small satellite into space requires a large rocket launcher for this reason.

Rocket staging Tsiolkovsky's rocket equation includes in m_2 not only the payload m_{pay} of the rocket (e.g. the satellite we want to put into orbit), but also any inert mass in the system such as structural mass of the rocket itself, m_{strut} . Given the adverse scaling of the rocket size, anything that can reduce inert mass is desirable.

Staging consists in releasing structural mass as soon as it is no longer needed (e.g. depleted propellant tanks, used-up rockets, etc). This way, the remaining of the trip is done with a lower inert mass, improving the overall mass performance of the rocket system. In effect, this is the same as stacking several rockets on top of each other, and igniting them in series.

To solve staging problems, it is useful to write down the initial mass of the i-th rocket stage as

$$m_{0,i} = m_{fuel,i} + m_{struct,i} + m_{pay,i}, \tag{2.6}$$

and note that the payload of the i-th stage is actually the next stage, (i + 1). The advantages of staging are great for systems with up to 3–4 stages, but beyond that, the reduction of the initial system mass is very limited.

Impulsive maneuvers Rocket maneuvers allow to change the trajectory (and thus the orbit) of a spacecraft. Chemical rockets provide large thrust levels for short periods of time; hence, we can simplify the analysis of chemical rocket maneuvers by imagining that the spacecraft changes instantaneously its velocity vector \boldsymbol{v} when the maneuver takes place. This approximation is known as the *impulsive maneuver model*. Using vector operations, velocity changes from \boldsymbol{v}_1 to $\boldsymbol{v}_2 = \boldsymbol{v}_1 + \Delta \boldsymbol{v}$, while the position vector \boldsymbol{r} remains unchanged during the instantaneous rocket firing.

The Hohmann transfer explained in the course is an example of application of the impulsive maneuver model.

3 Space Environment

Isothermal atmosphere model Earth's atmosphere is composed of many different layers. Temperature varies in a non-trivial way, inverting its gradient several times. Pressure, however, decreases monotonically as we ascend in the atmosphere. Modeling the atmospheric pressure and density in the upper layers of the atmosphere is important to determine air drag on low-Earth-orbit satellites.

We can pose a very simple model for pressure if we assume that temperature is constant in the atmosphere $T={\rm const.}$ This is only an approximation of course, and more advanced models exist that take temperature variation with altitude into account. We call this model the "isothermal atmosphere" model.

Consider a small cylindrical column of air of height dh, and call A the area of its bottom and upper surfaces. If air density is ρ at this height, the weight of this column of air is simply $\rho g A dh$, where g is the gravity acceleration.

Since this column is in equilibrium (i.e., it is not falling or rising), this weight must be compensated by the pressure difference dp between its bottom and upper surfaces. Then, we can write the following force balance equation:

$$Ap - A(p + dp) = \rho q A dh \Rightarrow dp = -\rho q dh$$
 (3.1)

Using the ideal gas law $p = \rho RT/M$, where R = 8.314 J/(K·mol) is the universal gas constant and M is the gas molecular mass (0.029 kg/mol for air), we can substitute ρ and integrate this equation to obtain an exponential evolution of pressure with height:

$$\frac{\mathrm{d}p}{p} = -\frac{gM}{RT}\mathrm{d}h \Rightarrow p = p_0 \exp\left(\frac{-h}{h_0}\right) \tag{3.2}$$

where p_0 is the pressure at h = 0 and $h_0 = RT/(gM)$.

Solar radiation The Sun emits a tremendous amount of electromagnetic radiation at all frequencies and in all directions. At the Earth, we receive about

$$S_{\oplus} = 1366 \text{ W/m}^2$$
 (3.3)

of radiation. Naturally, the power per unit area (i.e. the *irradiance*) increases as we get closer to the Sun, and decreases as we get away from it.

Due to conservation of energy, the integrated irradiance S(r) over a the surface of a sphere of radius r from the Sun is constant, independently of the chosen value of r:

$$4\pi r^2 S(r) = 4\pi r_{\oplus} S_{\oplus} \Rightarrow S(r) = S_{\oplus} \frac{r_{\oplus}^2}{r^2}$$
(3.4)

where $r_{\oplus} = 150$ million km (1 astronomical unit) is roughly the distance between the Earth and the Sun. This formula is useful to compute the solar irradiance anywhere in the solar system, if we know the distance to the Sun, r.

Solar irradiance affects how much electric power we can generate with solar arrays, and it defines how hot our spacecraft will get when illuminated. It also affects how much solar radiation pressure our spacecraft will feel.

4 Space Systems I

Breakdown of a space system A space system consists of several segments working together, where at least one of them is spaceborne. The common segments of a space system are:

- 1. The space segment: this is the spacecraft (or the various spacecraft) that are in orbit
- 2. The ground segment: the control centers and ground stations used to track, monitor, and command the space segment
- 3. The launcher segment: the launch vehicles used to set the space segment in orbit.

Within the space segment, each spacecraft can be decomposed into the **payload** (i.e., the instruments, transponders, etc that the client wants to have in orbit) and the **spacecraft platform or bus** (consisting of all the subsystems needed to support the operation of the payload and keep the satellite alive).

There are several spacecraft platform subsystems:

- 1. Power subsystem: in charge of producing, accumulating, distributing electric power to the different loads.
- 2. Telecommunications: uplink (telecommand) and downlink (telemetry and mission data) require of a communication subsystem to work.
- 3. Attitude determination and control subsystem: this subsystem determines the current orientation (attitude) of the spacecraft using sensors, and then changes it to the desired orientation using actuators like momentum wheels.
- 4. Propulsion subsystem: needed if the satellite must perform propulsive maneuvers. Every now and then, small corrective maneuvers are required to maintain the same operational orbit, or to desaturate the ADCS.
- 5. Data handling: the on board computer must process the incoming commands from the ground segment, monitor and control all the other subsystems, produce the telemetry that will be sent to the ground, and store and sometimes process the mission data until it can be delivered to a ground station.
- 6. Structural subsystems: the structure is in charge of maintaining the geometrical distribution of the spacecraft, and enduring the stresses that occur during launch.
- 7. Thermal control subsystem: this subsystem must deal with the changing environmental conditions (sunlight/eclipse, different spacecraft orientations with respect to the Sun), and maintain the temperature of each component within the allowable ranges at all times.
- 8. Environmental control and life support: In case of manned missions, it is necessary to provide air, water, and food to the crew, keep temperature and humidity at reasonable levels, and to dispose or recycle the generated waste.

Telecommunications: link budget equation When trying to reach the ground from a space-craft, the signal in our communication must be sufficiently focused and have enough power for the ground antenna to be able to receive it and tell the signal apart from the background electromagnetic noise.

If we have determined that the minimum energy per bit of information for a successful communication link is E_b , we can write down the link budget equation as follows:

$$E_b \leqslant \frac{PL_tL_rL_aL_sG_tG_r}{R} \tag{4.1}$$

where:

• P is the power, i.e. energy per unit time, spent by the spacecraft in sending the signal

- L_t are any efficiency losses in the transmitter. E.g., if only 80% of the input power eventually becomes the signal power, then $L_t = 0.8$.
- L_r contemplates any similar losses at the receiving end of the link.
- L_a are any losses that may exist due to the propagation of the signal through the atmosphere. The atmosphere may damp or absorb part of the signal power, meaning that only a fraction of the power makes it to the ground. The absorption depends on the wavelength of the signal, λ .
- L_s are the free space losses, which scale with the transmission distance d. Since the emitted power at the satellite expands outwards roughly spherically, the power per unit area decreases as $1/d^2$. L_s is formally defined as $L_s = \lambda^2/(4\pi d)^2$.
- G_t is the gain of the transmitting antenna, i.e., how well the antenna concentrates the radiated power in the desired direction, rather than emitting in all directions. It is defined as $G_t = 4\pi A_t/\lambda^2$, where A_t is the effective area of the antenna.
- G_r is the gain of the receiving antenna, i.e., how well the antenna selectively listens only to the desired direction, rather than all directions. It is defined as $G_r = 4\pi A_r/\lambda^2$, where A_r is the effective area of the antenna.
- R is the data rate of the transmission, i.e., how many bits per unit time are being sent.

The product PL_tG_t is known as the effective isotropic radiated power (EIRP).

Rotational dynamics: attitude determination and control The rotational dynamics of the spacecraft in orbit are governed by the angular momentum equation—the rotational analogous of the (linear) Newton's second law.

$$\frac{\mathrm{d}\boldsymbol{H}_G}{\mathrm{d}t} = \boldsymbol{M}_G \tag{4.2}$$

where H_G is the total angular momentum of the spacecraft about its center of mass G, and $M_G = \sum (r - r_G) \times F$ the moment of all forces about the center of mass.

While this equation may seem complicated, the important aspect to be understood in this course is that in the absence of external moments of forces (i.e., if $M_G = 0$), the total angular momentum of the spacecraft is conserved. This means that we cannot change its state of rotation, unless the spacecraft is composed of two or more bodies and we transmit angular momentum from one body to another, or unless we use propulsion to change the total angular momentum.

For instance, imagine a cubic spacecraft floating in empty space, with a wheel in its interior. If the cube is not rotating initially, we can make it rotate about the axis of the wheel if we spin up or down the wheel. Observe that during the whole maneuver, the total angular momentum (sum of the angular momentum of the cube and the wheel) remain constant.

This mechanism is used in the ADCS to control the orientation and rotation state of the spacecraft in the presence of perturbations that create a moment of forces. However, when the angular momentum stored in the wheels is too large, the rotational speed of the wheels may reach its maximum, and we need to use the propulsion system to *desaturate* the wheels and start over.

5 Space Systems II

Solar array and batteries sizing The most common electric power subsystem in a spacecraft is a combination of solar arrays that serve as a primary power source to produce power, plus a set of batteries as a secondary power source to store and manage power when the primary source is not available.


Solar arrays only convert a fraction of the incoming solar power into electric power: inefficiencies depend on the solar cell technology, the solar array geometry and temperature, the orientation of the solar arrays with respect to the Sun, and the age of the system (as solar cells degrade with time). All in all, we can write the produced electric power by the solar arrays (SA) as:

$$P_{SA} = \eta_{SA} A_{SA} S \tag{5.1}$$

where:

- η_{SA} is the overall solar array efficiency.
- A_{SA} is the area of the solar array.
- S is the solar irradiance at the spacecraft location, i.e. the power per unit area of the solar radiation. The SI units are W/m². For spacecraft orbiting the Earth, $S = S_{\oplus} \simeq 1366 \text{ W/m}^2$. If the spacecraft travels closer to the Sun (e.g. to Venus or Mercury), this number increases; if it travel away from the Sun (e.g. to Mars or Jupiter), this number decreases.

The solar arrays must produce electricity to power the spacecraft systems during the sunlight period, and also to charge the batteries to sustain power consumption during the eclipse. An Earth satellite spends some time in the sunlight and some time in eclipse in each orbit. We can estimate the eclipse time in the case of a circular orbit assuming that the shadow of the Earth is cylindrical away from the Sun, and that the satellite track crosses fully this shade cylinder. The angle θ in the figure is $\theta = \arcsin[R_{\oplus}/(R_{\oplus} + H)]$, where R_{\oplus} is the radius of the Earth and H the orbital altitude of the spacecraft. The fraction of the orbit that the spacecraft is in eclipse is then equal to $2\theta/(2\pi)$. For LEO satellites, this can be about 1/3 of the orbit.

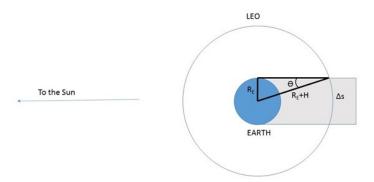

If a satellite requires an electric power P continuously to operate, then the solar arrays must provide a power

$$P_{SA} = P \frac{T_{orb}}{T_{light}} \tag{5.2}$$

where $T_{orb} = 2\pi \sqrt{GM_{\oplus}/(R_{\oplus} + H)}$ is the orbital period around the Earth (G is the gravitational constant, and M_{\oplus} is Earth's mass), i.e., the time it takes the satellite to complete one orbit, and T_{light} is the time spent in sunlight in one orbit.

In turn, the batteries must be sized so store and deliver every orbit the following energy:

$$E = PT_{eclinse} \tag{5.3}$$

where $T_{eclipse}$ is the time spent in eclipse each orbit. Batteries must not undergo full charge/discharge cycles often, as this will severely limit their durability. To extend the useful life of the batteries for the duration of the spacecraft mission, we must limit the depth of discharge (DOD) of the batteries to a given fraction that depends on the battery technology and the number of charge/discharge cycles

expected in the mission (i.e., the total number of eclipses expected during the mission). Once the design DOD is known, the actual energy of the batteries can be sized as

$$E_{batt} = \frac{E}{DOD}. (5.4)$$

Thermal control in space In space, the only heat transfer mechanism that exists is radiation. Also, within the spacecraft, conduction between the different, physically connected parts, can transmit heat.

The balance between all the heat that is generated in one component A by dissipation of electric power, plus any heat coming from the surrounding space environment and neighboring components into A, minus the heat that is conducted or radiated away from A, is related to the rate at which the temperature of component A changes in time:

$$C_A \frac{\mathrm{d}T_A}{\mathrm{d}t} = Q_{in,int} + Q_{in,env} - Q_{out}. \tag{5.5}$$

In this thermal energy balance equation, C_A is the thermal capacity of the component A, i.e. how much heat must be provided to this component to make its temperature increase by a given amount. The SI units of C_A are W/K.

Each component in the spacecraft has one such equation. The combination of all these coupled equations can be solved simultaneously in a computer, to find the evolution of the temperature of each component under different operating conditions and environmental heat loads (eclipse, sunlight, etc).

If we consider an isolated component with no neighboring elements to conduct or radiate heat to and from, the term $Q_{in,env}$ represents the incoming radiation heat from space, and the term Q_{out} represents the outgoing radiation heat emitted from the object into space. Then, the external heat sources from the environment are the solar radiation, the planetary albedo (i.e. the reflection of solar radiation off the planet surface), and the planetary IR radiation (i.e. the heat emitted by the planet itself since it has a non-zero temperature). The background empty space can be considered to be at 4 K, and can be ignored in most situations. Of these loads, the Sun is the dominant one:

$$Q_{in,env} = Q_{in,Sun} + Q_{in,albedo} + Q_{in,planet}$$
(5.6)

$$Q_{in,Sun} = \alpha_{Sun} A_{\alpha} S \tag{5.7}$$

where:

- α_{Sun} is the solar absorptivity, i.e., what fraction of the incoming solar irradiance is absorbed by the component (the rest is reflected). It is a non-dimensional number that ranges from 0 (no absorption) to 1 (maximum absorption).
- A_{α} is the effective area of absorption of the component that is exposed to sunlight.
- ullet S is the solar irradiance at the spacecraft location as explained before, i.e. the power per unit area of the solar radiation.

The heat emitted from tan isolated component is its radiation into space. Since the component is typically at a few hundreds of degrees Kelvin, its radiation is essentially in the infrared part of the spectrum, and the emitted radiation heat can be expressed as:

$$Q_{out} = \varepsilon_{IR} A_{\varepsilon} \sigma T_A^4 \tag{5.8}$$

where:

- ε_{IR} is the emissivity of the component in the infrared. It is a non-dimensional number that ranges from 0 (no emission) to 1 (maximum emission). The maximum emission is that of a so-called *black body* at the same temperature as the object.
- A_{ε} is the effective area for radiation of the component.
- σT_A^4 is the power radiated as heat of a perfect black body at a temperature T_A . The Stefan-Boltzmann constant is $\sigma = 5.67 \cdot 10^{-8} \text{ W/(m}^2 \text{K}^4)$.

Different materials have different optical properties α_{Sun} and ε_{IR} . By correctly selecting the materials of the surfaces of a spacecraft, we can exert some control over its temperature when exposed to the Sun and/or during eclipses (i.e. no Sun).

6 Global Navigation Satellite Systems

Operation principles of a GNSS position fix The basic ideas behind the operation of a GNSS can be summarized as follows:

- 1. The satellites of a GNSS constellation each have a very precise on board clock that is synchronized with all other clocks in the constellation.
- 2. The position vector of each satellite in the constellation is known (or can be made known) to any user of the system at all times.
- 3. Each satellite broadcasts a time-stamped, identifiable signal in all directions. Each signal encodes, among other pieces of information, the exact time at which the signal was broadcast.
- 4. Any number of users can receive these signals simultaneously: they are all passive (i.e. receiving) users.
- 5. A user receiving a satellite signal can compare the broadcast time with his/her own clock: the travel time for the signal $\Delta t = t_{RX} t_{TX}$ is a direct measure of the distance (or range) d between the user and the emitting satellite, since the speed of light c is a physical constant: $d = c\Delta t$.
- 6. Assuming the instantaneous position of the satellites is known to the user, using 3 such distance measurements to 3 different satellites allows, in principle, to determine the 3 unknowns x, y, z of the position of the user.
- 7. However, for this to work, the user would need to have his/her clock perfectly synchronized with the constellation clocks. As this would be impractical, a 4th distance measurement with a 4th satellite is needed to determine the 4 unknowns of the problem: x, y, z and t, the time of the user.

Obtaining a position (and time) fix for a user requires therefore solving a system of 4 non-linear equations, one for each pseudo-range measurement:

$$c^{2}(t_{RX} - t_{TX,1})^{2} = (x_{RX} - x_{TX,1})^{2} + (y_{RX} - y_{TX,1})^{2} + (z_{RX} - z_{TX,1})^{2},$$

$$(6.1)$$

$$c^{2}(t_{RX} - t_{TX,2})^{2} = (x_{RX} - x_{TX,2})^{2} + (y_{RX} - y_{TX,2})^{2} + (z_{RX} - z_{TX,2})^{2},$$
(6.2)

$$c^{2}(t_{RX} - t_{TX,3})^{2} = (x_{RX} - x_{TX,3})^{2} + (y_{RX} - y_{TX,3})^{2} + (z_{RX} - z_{TX,3})^{2},$$
(6.3)

$$c^{2}(t_{RX} - t_{TX,4})^{2} = (x_{RX} - x_{TX,4})^{2} + (y_{RX} - y_{TX,4})^{2} + (z_{RX} - z_{TX,4})^{2},$$
(6.4)

where $x_{TX,i}, y_{TX,i}, z_{TX,i}$ is the position of the *i*-th transmitting satellite, $t_{TX,i}$ the time at which the signal from the *i*-th satellite was sent, and $x_{RX}, y_{RX}, z_{RX}, t_{RX}$ are the unknowns (position and time of the receiving user).

Operation principles of a GNSS velocity fix Once the procedure to determine the position is clear, it would be possible to compute the velocity of a user by observing how his/her position changes in time. In other words, by taking the derivative of the position vector:

$$\boldsymbol{v} = \frac{\mathrm{d}\boldsymbol{r}}{\mathrm{d}t} \simeq \frac{\boldsymbol{r}(t_2) - \boldsymbol{r}(t_1)}{t_2 - t_1}.$$
 (6.5)

There is, however, another, more accurate way to determine the user's velocity: using the Doppler shift of the signal frequency. This is done according to the following basic ideas:

- 1. The exact frequency at which the satellite signals are emitted is known to the users of the system.
- 2. The velocity vector of each satellite in the constellation is known (or can be made known) to any user of the system at all times.

- 3. Whenever the distance between a satellite and a user changes in time (either because the satellite is moving or the user is moving), the perceived signal frequency by the user changes slightly: the frequency will increase if the two of them are coming closer together, and it will decrease if they are moving apart. This physical phenomenon is known as *Doppler shift*.
- 4. Any user listening to the satellite signals can determine the Doppler shift of any of them, $\Delta f = f_{RX} - f_{TX}$.
- 5. As the user knows the velocity of each satellite, combining 3 such measurements with 3 different satellites it is possible to determine the user's velocity (3 unknowns: v_x, v_y, v_z).
- 6. However, the cheap user's clock may have a drift with time. This may lead the user to wrong measurements of the Doppler shifts. Thus, a 4th measurement with a 4th satellite is needed to determine the drift rate of the user clock as an extra unknown.

Obtaining a velocity (and clock rate) fix for a user requires therefore solving the following system of 4 non-linear equations:

$$\dot{t}_{RX}f_{RX,1} - f_{TX,1} = \frac{f_{TX,1}}{c} (\mathbf{v}_{RX} - \mathbf{v}_{TX,1}) \cdot \frac{\mathbf{r}_{RX} - \mathbf{r}_{TX,1}}{|\mathbf{r}_{RX} - \mathbf{r}_{TX,1}|}$$
(6.6)

$$\dot{t}_{RX}f_{RX,2} - f_{TX,2} = \frac{f_{TX,2}}{c} (\mathbf{v}_{RX} - \mathbf{v}_{TX,2}) \cdot \frac{\mathbf{r}_{RX} - \mathbf{r}_{TX,2}}{|\mathbf{r}_{RX} - \mathbf{r}_{TX,2}|}$$

$$\dot{t}_{RX}f_{RX,3} - f_{TX,3} = \frac{f_{TX,3}}{c} (\mathbf{v}_{RX} - \mathbf{v}_{TX,3}) \cdot \frac{\mathbf{r}_{RX} - \mathbf{r}_{TX,3}}{|\mathbf{r}_{RX} - \mathbf{r}_{TX,3}|}$$
(6.8)

$$\dot{t}_{RX}f_{RX,3} - f_{TX,3} = \frac{f_{TX,3}}{c} (\mathbf{v}_{RX} - \mathbf{v}_{TX,3}) \cdot \frac{\mathbf{r}_{RX} - \mathbf{r}_{TX,3}}{|\mathbf{r}_{RX} - \mathbf{r}_{TX,3}|}$$
(6.8)

$$\dot{t}_{RX}f_{RX,4} - f_{TX,4} = \frac{f_{TX,4}}{c} (\mathbf{v}_{RX} - \mathbf{v}_{TX,4}) \cdot \frac{\mathbf{r}_{RX} - \mathbf{r}_{TX,4}}{|\mathbf{r}_{RX} - \mathbf{r}_{TX,4}|}$$
(6.9)

where $v_{TX,i}$ is the velocity of the *i*-th transmitting satellite, $f_{TX,i}$, $f_{RX,i}$ the frequencies at which the signal from the i-th satellite was respectively broadcast and received, and v_{RX} , \dot{t}_{RX} are the unknowns (position and clock drift rate of the receiving user). Note that the vector $(r_{RX} - r_{TX,i})/|r_{RX} - r_{TX,i}|$ is a unit vector that points in the direction from the *i*-th satellite to the user.

7 Fundamentals of Electric Propulsion

Key parameters of electric propulsion While chemical propulsion is *energy limited*, as its performance depends on the amount of energy per unit mass stored in the chemical bonds of the propellant, electric propulsion is *power limited*: the performance depends on how much electric power is available on board.

As with chemical propulsion, there are two basic parameters that characterize an electric thruster:

- 1. Specific impulse I_{sp} : this is a measure of the velocity at which the propellant is ejected from the thruster. A higher specific impulse allows fulfilling a propulsive mission (i.e. providing a given ΔV to the spacecraft) at a much lower expense of propellant. Electric propulsion devices have I_{sp}^{v} in the order of 10–100 km/s (about 1000–10000 s if I_{sp} is expressed in seconds), whereas the best chemical rockets can only provide about 5 km/s (about 500 s).
- 2. Thrust F: the force the propulsion system can generate to accelerate the spacecraft. Contrary to chemical propulsion, where F can be very large, electric propulsion thrust levels are comparatively small: current thrusters provide < 1 N of force (typically, about 50–200 mN). Thrust is equal to the propellant mass flow rate \dot{m} used in the thruster times the exhaust velocity, i.e., its specific impulse in velocity units:

$$F = \dot{m}I_{sp}^{v}. (7.1)$$

Electric propulsion provides tiny thrust levels, but it does so very efficiently, using very little propulant. This enables space missions that would be too ambitious to be carried out only with chemical propulsion, and to lower the cost of existing missions. Note, however, that electric propulsion cannot fully replace chemical propulsion: large thrust levels are required to take off from the surface of a planet, and for some quick propulsive maneuvers.

Apart from I_{sp} and F, there is another important figure of merit of an electric thruster:

3. Thrust efficiency η_T : it is a measure of how the input power P is used for propulsion. The power contained in a jet of mass flow rate \dot{m} and exhaust velocity I_{sp}^v is $\dot{m}(I_{sp}^v)^2/2$. The thrust efficiency is defined as the ratio of the jet power over the input power:

$$\eta_T = \frac{\dot{m}(I_{sp}^v)^2}{2P} = \frac{FI_{sp}^v}{2P} = \frac{F^2}{2\dot{m}P}$$
 (7.2)