Documentation

This package contains several python codes to run simulations of rigid bodies made out of *blob particles* rigidly connected near a single wall (floor). These codes can compute the mobility of complex shape objects, solve mobility or resistance problems for suspensions of many bodies or run deterministic or stochastic dynamic simulations.

We explain in the next sections how to use the package. For the theory consult the references:

- Brownian Dynamics of Confined Rigid Bodies, S. Delong, F. Balboa Usabiaga and A. Donev. The Journal of Chemical Physics, 143, 144107 (2015). DOI arXiv
- 2. Hydrodynamics of suspensions of passive and active rigid particles: a rigid multiblob approach, F. Balboa Usabiaga, B. Kallemov, B. Delmotte, A. Pal Singh Bhalla, B. E. Griffith and A. Donev. arXiv
- 3. Brownian Dynamics of Active Sphere Suspensions Confined Near a No-Slip Boundary, F. Balboa Usabiaga, B. Delmotte and A. Donev, submitted to The Journal of Chemical Physics. arXiv

Note: The key blob-blob translational mobility in the presence of a wall is computed here using the Rotne-Prager-Blake tensor in the appendices B and C of: **Simulation of hydrodynamically interacting particles near a no-slip boundary**, James Swan and John Brady, Phys. Fluids **19**, 113306 (2007)DOI. We modify the mobility to allow overlaps between blobs and between blobs and the wall, see Ref. [3].

1. Prepare the package

The codes are implemented in python (version 2.x) and it is not necessary to compile the package to use it. However, we provide alternative implementations in C++ (through the Boost Python library) and pycuda for some of the most computationally expensive functions. You can skip to section 2 but come back if you want to take fully advantage of this package.

1.1 Prepare the mobility functions

The codes use functions to compute the blob mobility matrix \mathbf{M} and the matrix vector product \mathbf{Mf} . For some functions we provide a C++ implementation which can be around five times faster than the python version. We also provide pycuda implementations which, for large systems, can be orders of magnitude faster. To use the C++ implementation move to the directory mobility/ and compile

mobility_ext.cc to a .so file using the Makefile provided (which you will need to modify slightly to reflect your Python version, etc.).

To use the *pycuda* implementation all you need is *pycuda* and a GPU compatible with CUDA; you don't need to compile any additional file in this package.

1.2 Blob-blob forces

In dynamical simulations it is possible to include blob-blob interactions to, for example, simulate a colloid suspension with a given steric repulsion. Again, we provide versions in python, C++ and pycuda. To use the C++ version move to the directory multi_bodies/ and compile forces_ext.cc to a .so file using the Makefile provided (which you will need to modify slightly to reflect your Python version, etc.).

To use the *pycuda* implementation all you need is *pycuda* and a GPU compatible with CUDA; you don't need to compile any additional file in this package.

2. Rigid bodies configuration

We use a vector (3 numbers) and a quaternion (4 numbers) to represent the location and orientation of each body, see Ref. 1 for details. This information is saved by the code in the *.clones files, with format:

```
number_of_rigid_bodies
vector_location_body_0 quaternion_body_0
vector_location_body_1 quaternion_body_1
.
```

For example, the file multi_bodies/Structures/boomerang_N_15.clones represents the configuration of a single body with location (0, 0, 10) and orientation given by the quaternion (0.5, 0.5, 0.5, 0.5).

The coordinates of the blobs forming a rigid body in the default configuration (location (0, 0, 0) and quaternion (1, 0, 0, 0)) are given to the codes through *.vertex files. The format of these files is:

```
number_of_blobs_in_rigid_body
vector_location_blob_0
vector_location_blob_1
.
```

For example, the file multi_bodies/Structures/boomerang_N_15.vertex gives the structure of a boomerang-like particle formed by 15 blobs.

3. Active slip

The blobs can have an active slip as described in the Ref. 2, therefore, we can simulate the dynamics of active bodies like bacteria or self-propelled colloids. The code assigns a slip function to each body depending on its structure ID; the structure ID is the name of the *.clones file without the path or the ending .clones (i.e., boomerangN_15_ for the file multi_bodies/Structures/boomerang_N_15.clones). Therefore all the bodies passed to the code in the same .clones file will have the same slip. This way it is easy to combine active and passive bodies in the same simulation by just using different .clones files for active and passive bodies.

Right now, the code only has two active slip functions implemented; for bodies with structure ID *active*body_ all blobs have a slip along the x-axis in the reference configuration. For bodies with any other structure ID the slip is set to zero, i.e., they are passive bodies. It is easy to generalize the code to include other kind of slips, see Section 5.3 for details.

4. Run static simulations

We start explaining how to compute the mobility of a rigid body close to a wall. First, move to the directory multi_bodies/ and inspect the input file inputfile_body_mobility.dat:

```
# Select problem to solve
scheme
                                         body_mobility
# Select implementation to compute the blobs mobility
mobility_blobs_implementation
# Set fluid viscosity (eta) and blob radius
                                          1.0
eta
blob_radius
                                          0.25
# Set output name
output_name
                                         data/run.body_mobility
# Load rigid bodies configuration, provide
# *.vertex and *.clones files
            Structures/boomerang_N_15.vertex Structures/boomerang_N_15.clones
structure
```

Now, to run the code, use

python multi_bodies_utilities.py --input-file inputfile_body_mobility.dat

The code writes the results in files with the prefix data/run.body_mobility. You can inspect the file *.body_mobility.dat to see the 6x6 rigid body mobility.

List of input file options:

- scheme: (string) Options: mobility, resistance and body_mobility. Select the problem to solve. mobility computes the velocities of a suspension of rigid bodies subject to external forces and torques (see below). resistance computes the forces and torques on rigid bodies moving with given velocities (see below). body_mobility computes the mobility of one rigid body as in the above example.
- mobility_blobs_implementation: Options: python and C++. It selects which implementation is used to compute the blob mobility matrix M. See section 1 to use the C++ version.
- mobility_vector_prod_implementation: Options: python, C++ and pycuda. It selects the implementation to compute the matrix vector product Mf. See section 1 to use the C++ or pycuda implementations.
- eta: (float) the fluid viscosity.
- blob_radius: (float) the hydrodynamic radius of the blobs.
- solver tolerance: (float) the tolerance for the iterative mobility solver.
- output_name: (string) the prefix used to save the output files.
- velocity_file: (string) name of a file with the velocities of the rigid bodies used in the resistance problem. The format of the file is one line per body and six floats per line corresponding to linear (first three) and angular velocities (last three).
- force_file: (string) name of a file with the forces and torques used in the mobility problem. The format of the file is one line per body and six floats per line corresponding to force (first three) and torque (last three). If no file is given the code compute the forces on the bodies as explained in the section 5.2.
- structure: (two strings) name of the vertex and clones files with the rigid bodies configuration, see section 2. To simulate bodies with different shapes add to the input file one structure option per each kind of body and give their vertex and clones files, see multibodies/inputfile.dat for an example.

- plot_velocity_field: (x_0 x_1 N_x y_0 y_1 N_y z_0 z_1 N_z) if the code is run with this options and the schemes mobility or resistance the code plots the velocity field of the fluid to a vtk file. The velocity field is plotted in a rectangular box with the lower corner located at (x_0, y_0, z_0), the upper corner located at (x_1, y_1, z_1) and using a grid of dimensions (N_x, N_y, N_z). The vtk file can be postprocessed with external software like VisIt from the Lawrence Livermore National Laboratory or ParaView from Sandia National Laboratories to generate an image of the velocity field. See figure 1 as an example.
- tracer_radius: (float (default 0)) effective radius of the nodes where the fluid velocity field is computed with the option plot_velocity_field. The default value, zero, computes the pointwise fluid velocity, a larger value average the fluid velocity over a region of radius tracer_radius.

The output files are:

- .inputfile: It is a copy of the input file to better keep track of input options.
- .body_mobility.dat: the 6x6 rigid body mobility computed with the option scheme body_mobility. When this mobility is apply to the vector (force, torque) generates the vector (velocity, angular_velocity).
- .force.dat: forces and torques on the bodies computed with the option scheme resistance. The format of the file is one line per body and six floats per line corresponding to force (first three) and torque (last three).
- .velocities.dat: velocities of the rigid bodies computed with the option scheme mobility. The format of the file is one line per body and six floats per line corresponding to linear (first three) and angular velocities (last three).

5. Run dynamic simulations

5.1 Rigid multiblob simulations

We have two python codes to run dynamic simulations. The first, in the directory boomerang/, allows to run stochastic Brownian simulations for a single body. See the instruction in doc/boomerang.txt. Here, we explain how to use the other code which allows to run deterministic and stochastic simulations for many bodies.

First, move to the directory multi_bodies/ and inspect the input file inputfile_dynamic.dat:

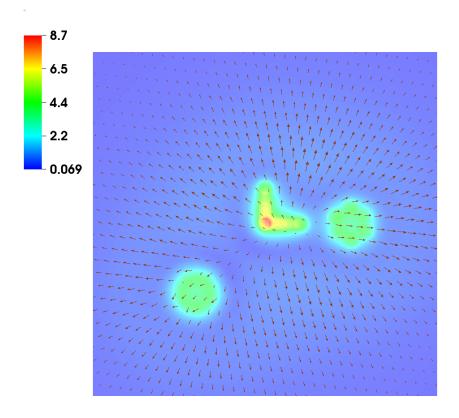


Figure 1: Velocity field around two spheres and a boomerang shaped colloid falling towards a bottom wall. Velocity field computed with the option plot_velocity_field and image generated with the software VisIt.

```
# Select integrator
scheme
                                         deterministic_adams_bashforth
\# Select implementation to compute M and M*f
mobility_blobs_implementation
                                         python
mobility_vector_prod_implementation
                                         python
# Select implementation to compute the blob-blob interactions
blob_blob_force_implementation
                                         python
# Set time step, number of steps and save frequency
                                         0.1
n_steps
                                         10
n_save
                                          1
# Set fluid viscosity (eta), gravity (g) and blob radius
eta
                                          1.0
                                          1.0
blob_radius
                                         0.25
# Set parameters for the blob-blob interation
repulsion_strength
                                          1.0
debye length
                                         1.0
# Set interaction with the wall
repulsion_strength_wall
                                          1.0
debye_length_wall
                                         1.0
# Set output name
output_name
                                         data/run
# Load rigid bodies configuration, provide
# *.vertex and *.clones files
structure Structures/boomerang_N_15.vertex Structures/boomerang_N_15.clones
structure Structures/shell_N_12_Rg_1.vertex Structures/shell_N_12_Rg_1.clones
```

With this input we can run a simulation with three rigid bodies, one with a boomerang shape and two with a spherical shape; see structures given to the options structure. To run the simulation use

python multi_bodies.py --input-file inputfile_dynamic.dat

Now, you can inspect the output, ls data/run.*. The output files are:

- .bodies_info: it contains the number of bodies and blobs in the simulation. Also how many types of bodies (i.e. different shapes) and how many bodies of each type.
- .clones: For each time step saved and each structure type the code saves a file with the location and orientation of the rigid bodies. The name format is (output_name + structure_name + time_step + .clones) The format of the files is the same that in the input .clones files.
- .inputfile: a copy of the input file.
- .random_state: it saves the state of the random generator at the start of the simulation. It can be used to run a simulation with the same random numbers.
- .time: the wall-clock time elapsed during the simulation (in seconds).

List of options for the input file:

- scheme: (string) Options: deterministic_forward_euler_dense_algebra, deterministic_forward_euler, deterministic_adams_bashforth, stochastic_first_order_RFD, stochastic_first_order_RFD_dense_algebra and stochastic_adams_bashforth. It selects the scheme to solve the mobility problem and integrate the equation of motion. The *forward_euler* schemes are first order accurate while *adams_bashforth* are second order accurate in the deterministic case. The scheme *dense_algebra uses dense algebra methods to solve the mobility problem and therefore the computational cost scales like (number_of_blobs)**3. The other schemes use preconditioned GMRES to solve the mobility problem and are more efficient for large number of bodies.
- mobility_blobs_implementation: Options: python and C++. This option indicates which implementation is used to compute the blob mobility matrix M. See section 1 to use the C++ version.
- mobility_vector_prod_implementation: Options: python, C++, pycuda and pycuda_single. This option select the implementation to compute the matrix vector product Mf. See section 1 to use the C++ or pycuda implementation. The option pycuda_single uses single precision (it is faster in GPUs) the others use double precision.
- blob_blob_force_implementation: Options: None, python, C++ and pycuda. Select the implementation to compute the blob-blob interactions between all pairs of blobs. If None is selected the code does not compute blob-blob interactions. The cost of this function scales like (number_of_blobs)2, just like the product Mf**.

- body_body_force_torque_implementation: Options: None and python. Select the implementation to compute the body-body interactions between all pairs of bodies. This function provides and alternative way to compute force between bodies without iterating over all the blobs in the system. Note that this force will be added to the forces coming from other terms like blob-blob interactions. If None is selected the code does not compute body-body interactions directly but it can compute blob-blob interactions which lead to effective body-body interactions. The cost of this function scales like (number_of_bodies)**2. See Section 5.3 for more details.
- eta: (float) the fluid viscosity.
- blob_radius: (float) the hydrodynamic radius of the blobs.
- solver_tolerance: (float) the relative tolerance for the iterative mobility solver.
- output_name: (string) the prefix used to save the output files.
- dt: (float) time step length to advance the simulation.
- n_steps: (int) number of time steps.
- initial_step: (int (default 0)) Use this option to restart a simulation. If initial_step > 0 the code will run from time step initial_step to n_steps. Also, the code will try to load .clones files with the name (output name + structure name + initial step + .clones).
- n save: (int) save the bodies configuration every n_save steps.
- repulsion_strength: (float) the blobs interact through a soft potential of the form (U = eps + eps * (d-r)/b if r < d and U = eps * exp(-(r-d)/b) if r >=d) where r is the distance between blobs, b is the characteristic length, eps is the strength and d=2*a is twice the blob radius. This is the strength of the potential, eps in the above expression (see section 5.3 to modify blobs interactions).
- debye_length: (float) the blobs interact through a potential (U = eps + eps * (d-r)/b if r < d and U = eps * exp(-(r-d)/b) if r >=d), this is the characteristic length of the potential, b in the above expression (see section 5.3 to modify blobs interactions).
- repulsion_strength_wall: (float) the blobs interact with the wall with a soft potential. The potential is (U = eps + eps * (d-r)/b if r < d and U = eps * exp(-(r-d)/b) if r >=d) where h is the distance between the wall and the particle, d=a is the blob radius, b is the characteristic potential length and eps is the strength. This is the strength of the Yukawa potential, eps in the above formula (see section 5.3 to modify blobs interactions).

- debye_length_wall: (float) the blobs interact with the wall with a Yukawa-like potential (U = eps + eps * (d-r)/b if r < d and U = eps * exp(-(r-d)/b) if r >=d). This is the characteristic length of the Yukawa potential, b in the above expression (see section 5.3 to modify blobs interactions).
- random_state: (string) name of a file with the state of the random generator from a previous simulation. It can be used to generate the same random numbers in different simulations.
- seed: (unsigned int) seed for the random number generator. It is not used if a random_state is defined in the input file. If neither seed nor random_state are defined the code will automatically initialized to a pseudorandom state (see documentation for numpy.random.RandomState).
- structure: (two strings) name of the vertex and clones files with the rigid bodies configuration, see section 2. To simulate bodies with different shapes add to the input file one structure option per each kind of body.
- save_clones: (string (default one_file_per_step)) options _one_file_per_step_ and onefile_. With the option _one_file_per_step_ the clones configuration are saved in one file per kind of structure and per time step as explained above. With the option _one_file_ the code saves one file per kind of structure with the configurations of all the time steps; configurations of different time steps are separated by a line with the number of rigid bodies.
- periodic_length: (three floats (default 0 0 0)) length of the unit cell along the x, y and z directions. If the length of the unit cell along the x or y directions is larger than zero the code uses Pseudo Periodic Boundary Conditions (PPBC) along that axis, otherwise the system is considered infinite in that direction. With PPBC, particles forces are computed using the minimum image convention as with standard periodic boundary conditions. Hydrodynamic interactions are computed between particles in the unit cell and the first neighbor cells along the pseudo-periodic axis. PPBC along the z axis are not supported.

5.2 Rollers simulations

We can also use the code multi_bodies.py to run simulations of bodies discretized with a single blob interacting hydrodynamically with a grand-mobility matrix that includes couplings between the linear and angular velocities, see Ref. [3] for a detailed description. To run a simulation use:

python multi_bodies_utilities.py --input-file inputfile_body_mobility.dat
The input file options are the same than for a rigid multiblob simulation (see section 5.1 and the file inputfile_body_mobility.dat) except for the following differences:

- scheme: (string) Options: deterministic_forward_euler_rollers, stochastic_first_order_rollers, deterministic_adams_bashforth_rollers, stochastic_adams_bashforth_rollers, stochastic_mid_point_rollers, stochastic_trapezoidal_rollers. We provide several schemes for deterministic and stochastic simulations.
- structure: (two strings) name of the vertex and clones files with the rigid bodies configuration, see section 2. However, this code only accepts bodies discretized with a single blob so the vertex file is trivial, see file multi_bodies/Structures/blob.vertex.
- free_kinematics: (string (default True)) if free_kinematics is True the angular velocity of the blobs is not fixed and each blob is subject to a torque T=8*pi*eta*a^3*omega_one_roller (see below). If free_kinematics is False all the blobs rotate with a prescribed angular velocity given with the option omega_one_roller but they are free to translate. The torque acting on the blobs is a Lagrangian multiplier that enforces the prescribed angular velocity.
- omega_one_roller: (three floats (default 0 0 0)) prescribed angular velocity of the blobs if the option free_kinematics is set to False. If free_kinematics is set to True the blobs are subject to a constant torque T=8*pi*eta*a^3*omega_one_roller.
- domain: (string) Options: single_wall and no_wall. With the option single_wall (default) the mobilities include wall corrections, i.e. the code uses the Rotne-Prager-Blake tensor as explained in the introduction. With the option no_wall the mobilities do not include wall corrections, the code uses the Rotne-Prager mobilities.

5.3 Modify the codes

Right now, the slip on the rigid bodies and the interactions between blobs and between

bodies are hard-coded in the codes. We explain here how the user can change these functions. First, we provide two alternatives to compute the interactions between bodies. A direct method that uses the locations and orientations of the bodies and a indirect form that compute the forces between all the blobs forming the rigid bodies and then it uses those forces to compute the forces and torques on the bodies as explaned in the Refs 1 and 2. The second approach can be more expensive, since in general number_of_blobs >> number_of_bodies but it can be used with bodies with arbitrary shapes, while the first method it is hard to generalize to non-spherical bodies. Note that the code can used both methods at the same time. You can modify the following functions:

• blob-blob interactions: to modify the *python* implementation edit the function blob_blob_force in the file multi_bodies/multi_bodies_functions.py.

To modify the C++ implementation edit the function blobBlobForce in the file multi_bodies/forces_ext.cc and recompile the C++ code. To modify the pycuda version edit the function blob_blob_force in the file multi_bodies/forces_pycuda.py

- blob-wall interaction: to modify the *python* implementation edit the function blob_external_force in the file multi_bodies/multi_bodies_functions.py. There are not C++ or *pycuda* versions of this function since it is not an expensive operation.
- body-body interactions: to modify the *python* implementation edit the function body_body_force_torque in the file multi_bodies/multi_bodies_functions.py.
- body external forces: to modify the one-body forces, for example gravity or interactions with the wall, edit the function bodies_external_force_torque in the file multi_bodies/multi_bodies_functions.py.
- active slip: The code assigns a slip function to each body depending on its structure ID; the structure ID is the name of the *.clones file without the path or the ending .clones (i.e., boomerangN_15_ for the file multi_bodies/Structures/boomerang_N_15.clones). Therefore all the bodies passed to the code in the same .clones file will have the same slip. The user can generalize the slip functions by editing the function set_slip_by_ID in the file multi_bodies/multi_bodies_functions.py. We provide an example of how to add a constant slip to all the blobs of an active body in the function active_body_slip in the same file.

6. Run Monte Carlo simulations

We have a Markov Chain Monte Carlo code to generate equilibrium configurations. To use this code move to the directory many_bodyMCMC and inspect the input file inputMCMC.dat. The options are similar to the ones to run dynamic simulations, however, some options like the time step size are not necessary. We have only implemented the subroutines to compute the body-body interactions in pycuda, therefore, it is necessary to have a GPU with CUDA capabilities to use this code. To run a simulation use

python many_body_MCMC.py inputMCMC.dat

The output files are similar to the ones generated with dynamic simulations.

7. Software organization

- body/: it contains a class to handle a single rigid body.
- boomerang/: stochastic example, see documentation doc/boomerang.txt.
- doc/: documentation.

- many_bodyMCMC/: Monte Carlo code for rigid bodies.
- mobility/: it has functions to compute the blob mobility matrix **M** and the product **Mf**.
- multi_bodies/: codes to run simulations of rigid bodies.
- quaternion_integrator/: it has a small class to handle quaternions and the schemes to integrate the equations of motion.
- sphere/: the folder contains an example to simulate a sphere whose center of mass is displaced from the geometric center (i.e., gravity generates a torque), sedimented near a no-slip wall in the presence of gravity, as described in Section IV.C in 1. Unlike the boomerang example this code does not use a rigid multiblob model of the sphere but rather uses the best known (semi)analytical approximations to the sphere mobility. See documentation doc/boomerang.txt.
- stochastic_forcing/: it contains functions to compute the product $\mathbf{M}^{1/2}\mathbf{z}$ necessary to perform Brownian simulations.
- utils.py: this file has some general functions that would be useful for general rigid bodies (mostly for analyzing and reading trajectory data and for logging).