

NMSIS Release 1.0.2-RC2

Nuclei

CONTENTS:

1	Nucl		Software Interface Standard(NMSIS)
	1.1		NMSIS 1
	1.2	NMSIS	Components
	1.3	NMSIS	Design
	1.4	How to	Access
	1.5	Coding	Rules
	1.6	Validati	on
	1.7	License	3
2	NMS	IS Core	5
	2.1	Overvie	ew
		2.1.1	Introduction
		2.1.2	Processor Support
		2.1.3	Toolchain Support
	2.2	Using N	NMSIS in Embedded Applications
		2.2.1	Introduction
		2.2.2	Basic NMSIS Example
		2.2.3	Using Interrupt and Exception/NMI
		2.2.4	Using NMSIS with generic Nuclei Processors
		2.2.5	Create generic Libraries with NMSIS
	2.3	NMSIS	-Core Device Templates
		2.3.1	Introduction
		2.3.2	NMSIS-Core Processor Files
		2.3.3	Device Examples
		2.3.4	Template Files
		2.3.5	Adapt Template Files to a Device
		2.3.6	Device Templates Explaination
	2.4	Registe	r Mapping
	2.5		Core API
		2.5.1	Version Control
		2.5.2	Compiler Control
		2.5.3	Core CSR Register Access
		2.5.4	Core CSR Encoding
		2.5.5	Register Define and Type Definitions
		2.5.6	CPU Intrinsic Functions
		2.5.7	Intrinsic Functions for SIMD Instructions
		2.5.8	Peripheral Access
		2.5.9	Systick Timer(SysTimer)
		2.5.10	Interrupts and Exceptions
		2.5.11	FPU Functions

		2.5.12	PMP Functions	379
		2.5.13	Cache Functions	
		2.5.14	System Device Configuration	398
		2.5.15	ARM Compatiable Functions	102
3	NIMC	SIS DSP		105
3	3.1		ew	
	3.1	3.1.1	Introduction	
		3.1.2	Using the Library	
		3.1.3	Examples	
		3.1.3	Toolchain Support	
		3.1.4	Building the Library	
		3.1.6	Preprocessor Macros	
	3.2		VMSIS-DSP	
	5.2	3.2.1		
		3.2.1	Preparation	
		3.2.2	Build NMSIS DSP Library	
		3.2.3		
	2.2		How to run	
	3.3			
		3.3.1	Examples	
		3.3.2	Basic Math Functions	
		3.3.3	Bayesian estimators	
		3.3.4	Complex Math Functions	
		3.3.5	Controller Functions	
		3.3.6	Distance functions	
		3.3.7		172
		3.3.8		177
		3.3.9	ı	549
		3.3.10	Matrix Functions	
		3.3.11	Quaternion Math Functions	
		3.3.12	Statistics Functions	
		3.3.13	Support Functions	
		3.3.14	SVM Functions	
		3.3.15	Transform Functions	
	3.4		log	
		3.4.1	V1.0.2	
		3.4.2	V1.0.1	
		3.4.3	V1.0.0	666
4	NMS	IS NN	•	667
	4.1			667
	11.1	4.1.1		667
		4.1.2		567
		4.1.3		667
		4.1.4	1	568
	4.2		1	568
	7.2	4.2.1		568
		4.2.1	1	568
		4.2.3	1	568
		4.2.3		569
	4.3			570
	4.3	4.3.1		570 570
		4.3.1		716
		4.3.3		/10 /18
		4	Dasic Ivialli punctions for incural inclwork Combulation	ΙŎ

		4.3.4	Convolutio	nal Neui	al Ne	tworl	c Exa	ample	 		 	 	 	 		 725
		4.3.5	Gated Recu					_								
	4.4	Change	log						 		 	 	 	 		 727
		4.4.1	V1.0.2						 		 	 	 	 		 727
		4.4.2	V1.0.1						 		 	 	 	 		 727
		4.4.3	V1.0.0						 		 	 	 	 		 727
5	Chan	ngelog														729
	5.1	V1.0.2-	RC2						 		 	 	 	 		 729
	5.2	V1.0.2-	RC1						 		 	 	 	 		 729
	5.3	V1.0.1							 		 	 	 	 		 729
	5.4	V1.0.1-	RC1						 		 	 	 	 		 730
	5.5	V1.0.0-	beta1						 		 	 	 	 		 730
	5.6	V1.0.0-	beta						 		 	 	 	 		 731
	5.7	V1.0.0-	alpha.1						 		 	 	 	 		 731
	5.8	V1.0.0-	alpha						 		 	 	 	 		 731
6	Gloss	sary														733
7	Appe	endix														735
3	Indic	es and ta	ables													737
ĺ'n	dex															739

CHAPTER

ONE

NUCLEI MCU SOFTWARE INTERFACE STANDARD(NMSIS)

1.1 About NMSIS

The **NMSIS** is a vendor-independent hardware abstraction layer for micro-controllers that are based on Nuclei Processors¹.

The **NMSIS** defines generic tool interfaces and enables consistent device support. It provides simple software interfaces to the processor and the peripherals, simplifying software re-use, reducing the learning curve for micro-controller developers, and reducing the time to market for new devices.

1.2 NMSIS Components

NMSIS CORE All Nuclei N/NX Class Processors Standardized API for the Nuclei processor core and peripherals.

NMSIS DSP All Nuclei N/NX Class Processors DSP library collection with a lot of functions for various data types: fixed-point (fractional q7, q15, q31) and single precision floating-point (32-bit). Implementations optimized for the Nuclei Processors which has RISC-V SIMD instruction set.

NMSIS NN All Nuclei N/NX Class Processors Collection of efficient neural network kernels developed to maximize the performance and minimize the memory footprint Nuclei processor cores.

1.3 NMSIS Design

NMSIS is designed to help the Nuclei N/NX Class Processors processors in standardization. It enables consistent software layers and device support across a wide range of development tools and micro-controllers.

NMSIS is a lightweight software interface layer that tried to standardize common Nuclei processor-based SOC, and it didn't define any standard peripherals. The silicon industry can therefore support the wide variations of Nuclei processor-based devices with this common standard.

We can achieve the following benefits of NMSIS:

- NMSIS reduces the learning curve, development costs, and time-to-market. Developers can write software quicker through a variety of easy-to-use, standardized software interfaces.
- Consistent software interfaces improve the software portability and re-usability. Generic software libraries and interfaces provide consistent software framework.
- It provides interfaces for debug connectivity, debug peripheral views, software delivery, and device support to reduce time-to-market for new micro-controller deployment.

https://doc.nucleisys.com/nuclei_spec

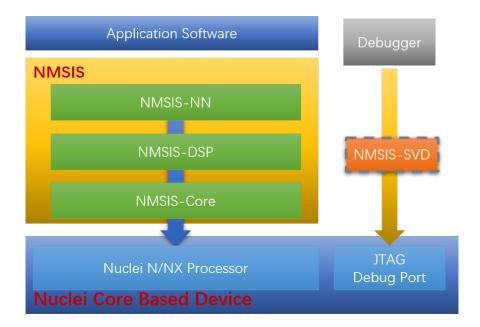


Fig. 1: NMSIS Design Diagram

- Being a compiler independent layer, it allows to use the compiler of your choice. Thus, it is supported by mainstream compilers.
- It enhances program debugging with peripheral information for debuggers.

1.4 How to Access

If you want to access the code of NMSIS, you can visit our opensource NMSIS Github Repository².

1.5 Coding Rules

The NMSIS uses the following essential coding rules and conventions:

- Compliant with ANSI C (C99) and C++ (C++03).
- Uses ANSI C standard data types defined in **stdint.h**.
- Variables and parameters have a complete data type.
- Expressions for #define constants are enclosed in parenthesis.

In addition, the **NMSIS** recommends the following conventions for identifiers:

- CAPITAL names to identify Core Registers, Peripheral Registers, and CPU Instructions.
- CamelCase names to identify function names and interrupt functions.
- Namespace_ prefixes avoid clashes with user identifiers and provide functional groups (i.e. for peripherals, RTOS, or DSP Library).

The **NMSIS** is documented within the source files with:

² https://github.com/Nuclei-Software/NMSIS

- Comments that use the C or C++ style.
- Doxygen compliant comments, which provide:
 - brief function, variable, macro overview.
 - detailed description of the function, variable, macro.
 - detailed parameter explanation.
 - detailed information about return values.

1.6 Validation

Nuclei uses RISC-V GCC Compiler in the various tests of **NMSIS**, and if more compiler is added, it could be easily supported by following the **NMSIS** compiler independent layer. For each component, the section **Validation** describes the scope of the various verifications.

NMSIS components are compatible with a range of C and C++ language standards.

As **NMSIS** defines API interfaces and functions that scale to a wide range of processors and devices, the scope of the run-time test coverage is limited. However, several components are validated using dedicated test suites.

1.7 License

This NMSIS is modified based on open-source project CMSIS to match Nuclei requirements.

This **NMSIS** is provided free of charge by Nuclei under the Apache 2.0 License³.

1.6. Validation 3

³ http://www.apache.org/licenses/LICENSE-2.0

CHAPTER

TWO

NMSIS CORE

2.1 Overview

2.1.1 Introduction

NMSIS-Core implements the basic run-time system for a Nuclei N/NX Class Processors based device and gives the user access to the processor core and the device peripherals. In detail it defines:

- Hardware Abstraction Layer (HAL) for Nuclei processor registers with standardized definitions for the CSR Registers, TIMER, ECLIC, PMP Registers, DSP Registers, FPU registers, and Core Access Functions.
- Standard core exception/interrupt names to interface to system exceptions or interrupts without having compatibility issues.
- **Methods to organize header files** that makes it easy to learn new Nuclei micro-controller products and improve software portability. This includes naming conventions for device-specific interrupts.
- **Methods for system initialization** to be used by each Device vendor. For example, the standardized SystemInit() (page 399) function is essential for configuring the clock system of the device.
- Intrinsic functions used to generate CPU instructions that are not supported by standard C functions.
- A variable SystemCoreClock (page 399) to determine the system clock frequency which simplifies the setup the timer.

The following sections provide details about the **NMSIS-Core**:

- Using NMSIS in Embedded Applications (page 6) describes the project setup and shows a simple program example
- NMSIS-Core Device Templates (page 12) describes the files of the NMSIS Core (page 5) in detail and explains how to adapt template files provided by Nuclei to silicon vendor devices.
- NMSIS Core API (page 57) describe the features and functions of the Device Header File <device.h> (page 47) in detail.
- Register Define and Type Definitions (page 77) describe the data structures of the Device Header File <device.h> (page 47) in detail.

2.1.2 Processor Support

NMSIS have provided support for all the Nuclei N/NX Class Processors.

Nuclei ISA Spec:

Nuclei Process Core Instruction Set Architecture Spec⁴

Nuclei N Class Processor Reference Manuals:

- N200 series⁵
- N300 series⁶
- N600 series⁷

Nuclei NX Class Processor Reference Manuals:

NX600 series⁸

2.1.3 Toolchain Support

The NMSIS-Core Device Templates (page 12) provided by Nuclei have been tested and verified using these toolchains:

· GNU Toolchain for RISC-V modified by Nuclei

2.2 Using NMSIS in Embedded Applications

2.2.1 Introduction

To use the **NMSIS-Core**, the following files are added to the embedded application:

- Startup File startup_<device>.S (page 14), which provided asm startup code and vector table.
- Interrupt and Exception Handling File: intexc_<device>.S (page 21), which provided general exception handling code for non-vector interrupts and exceptions.
- Device Linker Script: gcc_<device>.ld (page 31), which provided linker script for the device.
- System Configuration Files system_<device>.c and system_<device>.h (page 36), which provided general device configuration (i.e. for clock and BUS setup).
- Device Header File <device.h> (page 47) gives access to processor core and all peripherals.

Note: The files Startup File startup_<device>.S (page 14), Interrupt and Exception Handling File: intexc_<device>.S (page 21), Device Linker Script: gcc_<device>.ld (page 31) and System Configuration Files system_<device>.c and system_<device>.h (page 36) may require application specific adaptations and therefore should be copied into the application project folder prior configuration.

The *Device Header File <device.h>* (page 47) is included in all source files that need device access and can be stored on a central include folder that is generic for all projects.

The Startup File startup_<device>.S (page 14) is executed right after device reset, it will do necessary stack pointer initialization, exception and interrupt entry configuration, then call <code>SystemInit()</code> (page 399), after system initialization, will return to assemble startup code and do c/c++ runtime initialization which includes data, bss section initialization, c++ runtime initialization, then it will call main() function in the application code.

⁴ https://doc.nucleisys.com/nuclei_spec

⁵ https://www.nucleisys.com/product.php?site=n200

⁶ https://www.nucleisys.com/product.php?site=n300

⁷ https://www.nucleisys.com/product.php?site=n600

⁸ https://www.nucleisys.com/product.php?site=nx600

In the *Interrupt and Exception Handling File: intexc_<device>.S* (page 21), it will contain all exception and interrupt vectors and implements a default function for every interrupt. It may also contain stack and heap configurations for the user application.

The System Configuration Files system_<device>.c and system_<device>.h (page 36) performs the setup for the processor clock. The variable SystemCoreClock (page 399) indicates the CPU clock speed. Systick Timer(SysTimer) (page 351) describes the minimum feature set. In addition the file may contain functions for the memory BUS setup and clock re-configuration.

The *Device Header File <device.h>* (page 47) is the central include file that the application programmer is using in the C source code. It provides the following features:

- *Peripheral Access* (page 349) provides a standardized register layout for all peripherals. Optionally functions for device-specific peripherals may be available.
- *Interrupts and Exceptions* (page 357) can be accessed with standardized symbols and functions for the **ECLIC** are provided.
- *CPU Intrinsic Functions* (page 86) allow to access special instructions, for example for activating sleep mode or the NOP instruction.
- Intrinsic Functions for SIMD Instructions (page 93) provide access to the DSP-oriented instructions.
- Systick Timer(SysTimer) (page 351) function to configure and start a periodic timer interrupt.
- Core CSR Register Access (page 60) function to access the core csr registers.
- Cache Functions (page 381) to access the I-CACHE and D-CACHE unit
- FPU Functions (page 375) to access the Floating point unit.
- PMP Functions (page 379) to access the Physical Memory Protection unit
- Version Control (page 57) which defines NMSIS release specific macros.
- Compiler Control (page 59) is compiler agnostic #define symbols for generic C/C++ source code

The NMSIS-Core system files are device specific.

In addition, the *Startup File startup_*<*device*>.*S* (page 14) is also compiler vendor specific, currently only GCC version is provided. The versions provided by NMSIS are only generic templates. The adopted versions for a concrete device are typically provided by the device vendor through the according device family package.

For example, the following files are provided by the GD32VF103 device family pack:

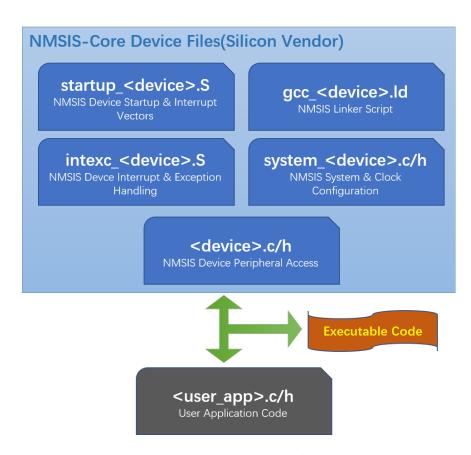


Fig. 1: NMSIS-Core User Files

Table 1: Files provided by GD32VF103 device family pack

File	Description
./Device/Source/GCC/startup_gd32vf103.S	
	Startup File startup_ <device>.S</device>
	for the GD32VF103 device variants.
./Device/Source/GCC/intexc_gd32vf103.S	
	Exception and Interrupt Handling File
	intexc_ <device>.S for the GD32VF103 device variants.</device>
./Device/Source/GCC/gcc_gd32vf103.ld	
	Linker script File gcc_ <device>.ld</device>
	for the GD32VF103 device variants.
./Device/Source/system_gd32vf103.c	
	System Configuration File system_ <device>.c</device>
	for the GD32VF103 device families
TD 1 T 1 1 / 1 122 C102 1	
./Device/Include/system_gd32vf103.h	
	System Configuration File system_ <device>.h</device>
	for the GD32VF103 device families
/Davis - // / - / - / - / - / - / - / - / - /	
./Device/Include/gd32vf103.h	
	Device Header File <device.h></device.h>
	for the GD32VF103 device families.

Note: The silicon vendors create these device-specific NMSIS-Core files based on *NMSIS-Core Device Templates* (page 12) provided by Nuclei.

Thereafter, the functions described under NMSIS Core API (page 57) can be used in the application.

2.2.2 Basic NMSIS Example

A typical example for using the NMSIS layer is provided below. The example is based on a GD32VF103 Device.

Listing 1: gd32vf103_example.c

```
msTicks++;
                                                         // Increment Counter
10
11
   void WaitForTick (void) {
12
     uint32_t curTicks;
13
14
     curTicks = msTicks;
                                                         // Save Current SysTick Value
15
     while (msTicks == curTicks) {
                                                         // Wait for next SysTick Interrupt
16
       ___WFI ();
                                                         // Power-Down until next Event/
17
    \hookrightarrow Interrupt
     }
                                                        // Timer Interrupt Handler
   void TIMERO_UP_IRQHandler (void) {
21
                                                         // Add user code here
22
   }
23
24
     Dold timerU_init(int frequency) { // Set up Timer (device specific)

ECLIC_SetPriorityIRQ (TIMERO_UP_IRQn, 1); // Set Timer priority
   void timer0_init(int frequency) {
25
26
     ECLIC_EnableIRQ (TIMERO_UP_IRQn);
                                                         // Enable Timer Interrupt
27
28
29
30
   void Device_Initialization (void) {
                                                       // Configure & Initialize MCU
31
     if (SysTick_Config (CONFIG_TICKS)) {
          ; // Handle Error
34
     timer0_init ();
                                                         // setup device-specific timer
35
36
37
   // The processor clock is initialized by NMSIS startup + system file
38
                                                         // user application starts here
39
   void main (void) {
     Device_Initialization ();
                                                         // Configure & Initialize MCU
40
     while (1) {
                                                         // Endless Loop (the Super-Loop)
41
                                                         // Disable all interrupts
        __disable_irq ();
42.
                                                         // Read Values
       Get_InputValues ();
43
                                                         // Enable all interrupts
        __enable_irq ();
44
       Calculation_Response ();
                                                         // Calculate Results
45
       Output_Response ();
                                                        // Output Results
47
       WaitForTick ();
                                                         // Synchronize to SysTick Timer
     }
48
```

2.2.3 Using Interrupt and Exception/NMI

Nuclei processors provide NMI(Non-Maskable Interrupt), Exception, Vector Interrupt and Non-Vector Interrupt features.

2.2.4 Using NMSIS with generic Nuclei Processors

Nuclei provides NMSIS-Core files for the supported Nuclei Processors and for various compiler vendors. These files can be used when standard Nuclei processors should be used in a project. The table below lists the folder and device names of the Nuclei processors.

Folder Processor RISC-Description V ./Device/Nuclei/NUCLEI_N RV32 • N200 • N300 Contains Include and Source template files N600 configured for the Nuclei N200/N300/N600 processor. The device name is NUCLEI N and the name of the Device Header File <device.h> is <NUCLEI_N.h>. RV64 ./Device/Nuclei/NUCLEI NX NX600 Contains Include and Source template files configured for the Nuclei NX600 processor. The device name is NUCLEI NX and the name of the Device Header File <device.h> is <NUCLEI_NX.h>.

Table 2: Folder and device names of the Nuclei processors

2.2.5 Create generic Libraries with NMSIS

The NMSIS Processor and Core Peripheral files allow also to create generic libraries. The NMSIS-DSP Libraries are an example for such a generic library.

To build a generic library set the define __NMSIS_GENERIC and include the *nmsis_core.h* NMSIS CPU & Core Access header file for the processor.

The define __NMSIS_GENERIC disables device-dependent features such as the SysTick timer and the Interrupt System.

Example

The following code section shows the usage of the *nmsis_core.h* header files to build a generic library for N200, N300, N600, NX600.

One of these defines needs to be provided on the compiler command line.

By using this header file, the source code can access the functions for *Core CSR Register Access* (page 60), *CPU Intrinsic Functions* (page 86) and *Intrinsic Functions for SIMD Instructions* (page 93).

Listing 2: core_generic.h

```
#define __NMSIS_GENERIC // Disable Eclic and Systick functions
#include <nmsis_core.h>
```

2.3 NMSIS-Core Device Templates

2.3.1 Introduction

Nuclei supplies NMSIS-Core device template files for the all supported Nuclei N/NX Class Processors and various compiler vendors. Refer to the list of *supported toolchain* (page 6) for compliance.

These NMSIS-Core device template files include the following:

- Register names of the Core Peripherals and names of the Core Exception/Interrupt Vectors.
- Functions to access core peripherals, special CPU instructions and SIMD instructions
- Generic startup code and system configuration code.

The detailed file structure of the NMSIS-Core device templates is shown in the following picture.

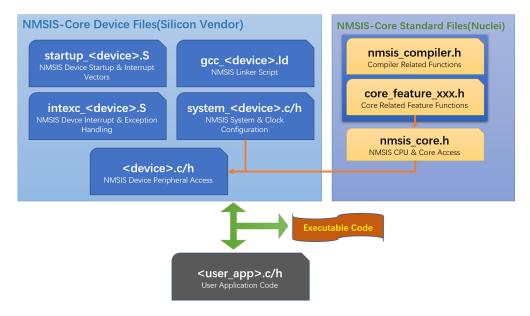


Fig. 2: NMSIS-Core Device Templates

2.3.2 NMSIS-Core Processor Files

The NMSIS-Core processor files provided by Nuclei are in the directory NMSIS/Core/Include.

These header files define all processor specific attributes do not need any modifications.

The *nmsis_core.h* defines the core peripherals and provides helper functions that access the core registers.

2.3.3 Device Examples

The NMSIS Software Pack defines several devices that are based on the Nuclei N/NX processors.

The device related NMSIS-Core files are in the directory *Device/Nuclei* and include NMSIS-Core processor file explained before.

The following sample devices are defined as below:

Table 3: Device Examples of Nuclei Processor

Family	Device	Description
Nuclei N	NUCLEI N Class	Nuclei N Class based device
Nuclei NX	NUCLEI NX Class	Nuclei NX Class based device

2.3.4 Template Files

To simplify the creation of NMSIS-Core device files, the following template files are provided that should be extended by the silicon vendor to reflect the actual device and device peripherals.

Silicon vendors add to these template files the following information:

- Device Peripheral Access Layer that provides definitions for device-specific peripherals.
- Access Functions for Peripherals (optional) that provides additional helper functions to access devicespecific peripherals.
- **Interrupt vectors** in the startup file that are device specific.

Table 4: NMSIS-Core Device Template Files

Template File	Description			
(Under ./De-				
vice/_Template_Vendor/Vendor/)				
Device/Source/GCC/startup_Device.S	Startup file template for GNU GCC RISC-V Embedded Compiler.			
Device/Source/GCC/gcc_Device.ld	Link Script file template for GNU GCC RISC-V Embedded Compiler.			
Device/Source/GCC/intexc_Device.S	Exception and Interrupt handling file template			
	for GNU GCC RISC-V Embedded Compiler.			
Device/Source/system_Device.c	Generic system_Device.c file for system configuration			
	(i.e. processor clock and memory bus system).			
Device/Include/Device.h	Generic device header file.			
	Needs to be extended with the device-specific peripheral registers.			
	Optionally functions that access the peripherals can be part of that file.			
Device/Include/system_Device.h	Generic system device configuration include file.			

Note: The template files for silicon vendors are placed under ./Device/ Template Vendor/Vendor/.

Please goto that folder to find the file list in the above table.

2.3.5 Adapt Template Files to a Device

The following steps describe how to adopt the template files to a specific device or device family.

Copy the complete all files in the template directory and replace:

- directory name Vendor with the abbreviation for the device vendor e.g.: **GD**.
- directory name Device with the specific device name e.g.: GD32VF103.
- in the file names Device with the specific device name e.g.: GD32VF103.

Each template file contains comments that start with **TODO**: that describe a required modification.

The template files contain place holders:

Table 5: Placeholders of Template files

Placeholder	Replaced with
<device></device>	the specific device name or device family name; i.e. GD32VF103.
<deviceinterrupt></deviceinterrupt>	a specific interrupt name of the device; i.e. TIM1 for Timer 1.
<deviceabbreviation></deviceabbreviation>	short name or abbreviation of the device family; i.e. GD32VF.
Nuclei-N#	the specific Nuclei Class name; i.e. Nuclei N or Nuclei NX.

2.3.6 Device Templates Explaination

The device configuration of the template files is described in detail on the following pages:

Startup File startup_<device>.S

The Startup_<device>.S contains:

- The reset handler which is executed after CPU reset and typically calls the SystemInit() (page 399) function.
- The setup values for the stack pointer SP.
- Exception vectors of the Nuclei Processor with weak functions that implement default routines.
- Interrupt vectors that are device specific with weak functions that implement default routines.

The processer level start flow is implemented in the *startup_<device>*.S. Detail description as below picture:

Stage1: Interrupt and Exception initialization

- · Disable Interrupt
- Initialize GP, stack
- · Initialize NMI entry and set default NMI handler
- · Initialize Exception entry and set default exception handler
- Initialize vector table entry and set default interrupt handler
- Initialize Interrupt mode as ECLIC mode. (ECLIC mode is proposed. Default mode is CLINT mode)

Stage2: Hardware initialization

- Enable FPU if necessary
- Call user defined SystemInit() (page 399) for system clock initialization.

Stage3: Section initialization

- Copy section, e.g. data section, text section if necessary.
- Clear Block Started by Symbol (BSS) section
- Call __libc_fini_array and __libc_init_array functions to do C library initialization

- Call _premain_init function to do initialization steps before main function
- Jump Main

The file exists for each supported toolchain and is the only toolchain specific NMSIS file.

To adapt the file to a new device only the interrupt vector table needs to be extended with the device-specific interrupt handlers.

The naming convention for the interrupt handler names are eclic_<interrupt_name>_handler.

This table needs to be consistent with IRQn_Type that defines all the IRQ numbers for each interrupt.

The following example shows the extension of the interrupt vector table for the GD32VF103 device family.

```
.section .vtable
2
       .weak eclic_msip_handler
3
       .weak eclic_mtip_handler
4
       .weak eclic_pmaf_handler
       /* Adjusted for GD32VF103 interrupt handlers */
6
       .weak eclic_wwdgt_handler
       .weak eclic_lvd_handler
8
       .weak eclic_tamper_handler
9
          :
10
               •
11
          :
       .weak eclic_can1_ewmc_handler
12
       .weak eclic_usbfs_handler
14
       .globl vector_base
15
       .type vector_base, @object
16
   vector_base:
17
       /* Run in FlashXIP download mode */
18
                                                               /* 0: Reserved, Jump to _
19
   ⇒start when reset for vector table not remapped cases.*/
       .align LOG_REGBYTES
                                                                     Need to align 4.
20
   ⇒byte for RV32, 8 Byte for RV64 */
                                                               /* 1: Reserved */
       DECLARE_INT_HANDLER default_intexc_handler
21
                                                               /* 2: Reserved */
22
       DECLARE_INT_HANDLER
                             default_intexc_handler
       DECLARE_INT_HANDLER eclic_msip_handler
23
                                                               /* 3: Machine software_
   →interrupt */
                                  :
24
25
                       •
       /* Adjusted for Vendor Defined External Interrupts */
26
                                                               /* 19: Window watchDog_
       DECLARE_INT_HANDLER eclic_wwdgt_handler
27
   →timer interrupt */
28
29
       DECLARE_INT_HANDLER
                               eclic_lvd_handler
                                                               /* 20: LVD through EXTI
   →line detect interrupt */
       DECLARE_INT_HANDLER
                               eclic_tamper_handler
                                                               /* 21: tamper through...
30
   →EXTI line detect */
31
                      :
                                  :
32
       DECLARE_INT_HANDLER
                              eclic_can1_ewmc_handler
                                                               /* 85: CAN1 EWMC.
   →interrupt */
     DECLARE_INT_HANDLER
                             eclic_usbfs_handler
                                                               /* 86: USBFS global.
   →interrupt */
```

startup_Device.S Template File

Here provided a riscv-gcc template startup assemble code template file as below. The files for other compilers can slightly differ from this version.

```
* Copyright (c) 2019 Nuclei Limited. All rights reserved.
2
    * SPDX-License-Identifier: Apache-2.0
4
    * Licensed under the Apache License, Version 2.0 (the License); you may
6
    * not use this file except in compliance with the License.
    * You may obtain a copy of the License at
8
    * www.apache.org/licenses/LICENSE-2.0
10
11
    * Unless required by applicable law or agreed to in writing, software
12
    * distributed under the License is distributed on an AS IS BASIS, WITHOUT
13
    * WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.
    \star See the License for the specific language governing permissions and
15
    * limitations under the License.
16
17
   /****************************
18
    * \file
               startup_<Device>.S
19
             NMSIS Nuclei N/NX Class Core based Core Device Startup File for
    * \brief
20
               Device <Device>
21
    * \version V1.10
22
               30. July 2021
    * \date
23
24
    **************************
25
26
   #include "riscv_encoding.h"
27
28
   .macro DECLARE_INT_HANDLER INT_HDL_NAME
29
   #if defined(__riscv_xlen) && (__riscv_xlen == 32)
30
       .word \INT_HDL_NAME
31
   #else
32
       .dword \INT_HDL_NAME
33
34
   #endif
   .endm
35
36
37
        * Put the interrupt vectors in this section according to vector remapped or not:
38
        * .vtable: vector table's LMA and VMA are the same, it is not remapped
39
        * .vtable_ilm: vector table's LMA and VMA are different, it is remapped, and
40
                      VECTOR_TABLE_REMAPPED need to be defined
41
42
   #if defined(VECTOR_TABLE_REMAPPED)
43
       .section .vtable_ilm
44
   #else
45
       .section .vtable
46
47
   #endif
48
       .weak eclic_msip_handler
49
       .weak eclic_mtip_handler
50
       /* TODO: Adjust vendor interrupt handlers */
51
       .weak eclic_irq19_handler
```

```
.weak eclic_irg20_handler
53
              eclic_irq21_handler
        .weak
54
        .weak eclic_irq22_handler
55
              eclic_irq23_handler
56
        .weak
        .weak
              eclic_irq24_handler
57
              eclic_irq25_handler
        .weak
58
              eclic_irq26_handler
        .weak
59
        .weak
              eclic_irq27_handler
60
        .weak eclic_irq28_handler
61
        .weak eclic_irq29_handler
62
        .weak eclic_irq30_handler
63
       .weak eclic_irq31_handler
       .weak eclic_irq32_handler
       .weak eclic_irg33_handler
66
       .weak eclic irg34 handler
67
       .weak eclic_irg35_handler
68
              eclic_irq36_handler
69
        .weak
              eclic_irq37_handler
        .weak
70
        .weak
              eclic_irq38_handler
71
        .weak
              eclic_irq39_handler
72
        .weak
              eclic_irq40_handler
73
        .weak eclic_irq41_handler
74
       .weak eclic_irq42_handler
75
       .weak eclic_irq43_handler
76
       .weak eclic_irq44_handler
       .weak eclic_irq45_handler
       .weak eclic_irq46_handler
79
       .weak eclic_irq47_handler
80
       .weak eclic_irg48_handler
81
        .weak eclic_irq49_handler
82
        .weak eclic_irq50_handler
83
84
        .globl vector_base
85
        .type vector_base, @object
86
   vector_base:
87
       j _start
                                                                   /* 0: Reserved, Jump to _
88
    →start when reset for vector table not remapped cases.*/
       .align LOG_REGBYTES
                                                                         Need to align 4.
    →byte for RV32, 8 Byte for RV64 */
90
       DECLARE INT HANDLER
                                 default intexc handler
                                                                   /* 1: Reserved */
91
       DECLARE INT HANDLER
                                 default_intexc_handler
                                                                   /* 2: Reserved */
92
       DECLARE_INT_HANDLER
                                 eclic_msip_handler
                                                                   /* 3: Machine software...
93
    →interrupt */
       DECLARE_INT_HANDLER
                                 default_intexc_handler
                                                                   /* 4: Reserved */
95
                                 default_intexc_handler
                                                                   /* 5: Reserved */
       DECLARE_INT_HANDLER
       DECLARE INT HANDLER
                                 default intexc handler
                                                                   /* 6: Reserved */
97
                                                                   /* 7: Machine timer.
                                 eclic_mtip_handler
       DECLARE_INT_HANDLER
98
    →interrupt */
       DECLARE_INT_HANDLER
                                 default_intexc_handler
                                                                   /* 8: Reserved */
100
       DECLARE_INT_HANDLER
                                 default_intexc_handler
                                                                   /* 9: Reserved */
101
       DECLARE INT HANDLER
                                 default intexc handler
                                                                   /* 10: Reserved */
102
       DECLARE_INT_HANDLER
                                 default_intexc_handler
                                                                   /* 11: Reserved */
103
104
                                                                   /* 12: Reserved */
       DECLARE_INT_HANDLER
                                 default_intexc_handler
```

```
DECLARE_INT_HANDLER
                                 default_intexc_handler
                                                                    /* 13: Reserved */
106
                                 default_intexc_handler
                                                                    /* 14: Reserved */
        DECLARE_INT_HANDLER
107
        DECLARE_INT_HANDLER
                                 default_intexc_handler
                                                                    /* 15: Reserved */
108
        DECLARE_INT_HANDLER
                                 default_intexc_handler
                                                                    /* 16: Reserved */
110
        DECLARE_INT_HANDLER
                                 default_intexc_handler
                                                                    /* 17: Reserved */
111
                                                                    /* 18: Reserved */
        DECLARE_INT_HANDLER
                                 default_intexc_handler
112
        /* TODO: Adjust Vendor Defined External Interrupts */
113
        DECLARE_INT_HANDLER
                                 eclic_irq19_handler
                                                                    /* 19: Interrupt 19 */
114
115
                                 eclic_irq20_handler
                                                                    /* 20: Interrupt 20 */
        DECLARE_INT_HANDLER
116
        DECLARE_INT_HANDLER
                                 eclic_irq21_handler
                                                                    /* 21: Interrupt 21 */
117
118
        DECLARE_INT_HANDLER
                                 eclic_irq22_handler
                                                                   /* 22: Interrupt 22 */
        DECLARE_INT_HANDLER
                                 eclic_irg23_handler
                                                                   /* 23: Interrupt 23 */
119
120
        DECLARE_INT_HANDLER
                                 eclic_irq24_handler
                                                                   /* 24: Interrupt 24 */
121
        DECLARE_INT_HANDLER
                                 eclic_irq25_handler
                                                                   /* 25: Interrupt 25 */
122
        DECLARE_INT_HANDLER
                                 eclic_irq26_handler
                                                                    /* 26: Interrupt 26 */
123
        DECLARE_INT_HANDLER
                                 eclic_irq27_handler
                                                                   /* 27: Interrupt 27 */
124
125
        DECLARE_INT_HANDLER
                                 eclic_irq28_handler
                                                                   /* 28: Interrupt 28 */
126
        DECLARE_INT_HANDLER
                                 eclic_irq29_handler
                                                                   /* 29: Interrupt 29 */
127
        DECLARE_INT_HANDLER
                                 eclic_irq30_handler
                                                                   /* 30: Interrupt 30 */
128
                                                                   /* 31: Interrupt 31 */
        DECLARE_INT_HANDLER
                                 eclic_irq31_handler
129
130
131
        DECLARE_INT_HANDLER
                                 eclic_irq32_handler
                                                                   /* 32: Interrupt 32 */
        DECLARE_INT_HANDLER
                                 eclic_irq33_handler
                                                                   /* 33: Interrupt 33 */
132
        DECLARE INT HANDLER
                                 eclic_irq34_handler
                                                                   /* 34: Interrupt 34 */
133
        DECLARE_INT_HANDLER
                                 eclic_irq35_handler
                                                                   /* 35: Interrupt 35 */
134
135
        DECLARE_INT_HANDLER
                                 eclic_irq36_handler
                                                                   /* 36: Interrupt 36 */
136
137
        DECLARE_INT_HANDLER
                                 eclic_irq37_handler
                                                                   /* 37: Interrupt 37 */
        DECLARE_INT_HANDLER
                                 eclic_irq38_handler
                                                                   /* 38: Interrupt 38 */
138
        DECLARE_INT_HANDLER
                                 eclic_irq39_handler
                                                                   /* 39: Interrupt 39 */
139
140
                                 eclic_irq40_handler
141
        DECLARE_INT_HANDLER
                                                                   /* 40: Interrupt 40 */
        DECLARE_INT_HANDLER
                                 eclic_irq41_handler
                                                                   /* 41: Interrupt 41 */
142
                                                                   /* 42: Interrupt 42 */
143
        DECLARE_INT_HANDLER
                                 eclic_irq42_handler
        DECLARE_INT_HANDLER
                                 eclic_irq43_handler
                                                                   /* 43: Interrupt 43 */
145
        DECLARE INT HANDLER
                                 eclic irg44 handler
                                                                   /* 44: Interrupt 44 */
146
        DECLARE INT HANDLER
                                 eclic_irg45_handler
                                                                   /* 45: Interrupt 45 */
147
                                 eclic_irq46_handler
        DECLARE_INT_HANDLER
                                                                   /* 46: Interrupt 46 */
148
                                                                   /* 47: Interrupt 47 */
        DECLARE_INT_HANDLER
                                 eclic_irq47_handler
149
150
        DECLARE_INT_HANDLER
                                 eclic_irq48_handler
                                                                    /* 48: Interrupt 48 */
151
        DECLARE_INT_HANDLER
                                 eclic_irq49_handler
                                                                    /* 49: Interrupt 49 */
152
        DECLARE INT HANDLER
                                 eclic_irq50_handler
                                                                    /* 50: Interrupt 50 */
153
        /* Please adjust the above part of interrupt definition code
154
         * according to your device interrupt number and its configuration */
155
156
157
    /*** Startup Code Section ***/
158
        .section .init
159
160
        .globl _start
161
        .type _start,@function
```

```
163
    /**
164
     * Reset Handler called on controller reset
165
166
    _start:
167
        /* ===== Startup Stage 1 ===== */
168
        /* Disable Global Interrupt */
169
        csrc CSR_MSTATUS, MSTATUS_MIE
170
171
        /* Initialize GP and Stack Pointer SP */
172
        .option push
173
         .option norelax
174
175
        la gp, __global_pointer$
176
        .option pop
177
178
        la sp, _sp
179
        /*
180
         \star Set the the NMI base mnvec to share
181
         * with mtvec by setting CSR_MMISC_CTL
182
         * bit 9 NMI_CAUSE_FFF to 1
183
         */
184
        li t0, MMISC_CTL_NMI_CAUSE_FFF
185
        csrs CSR_MMISC_CTL, t0
186
187
188
        /*
         * Intialize ECLIC vector interrupt
189
         * base address mtvt to vector_base
190
         */
191
        la t0, vector_base
192
193
        csrw CSR_MTVT, t0
194
195
         * Set ECLIC non-vector entry to be controlled
196
         * by mtvt2 CSR register.
197
         * Intialize ECLIC non-vector interrupt
198
         * base address mtvt2 to irq_entry.
199
         */
201
        la t0, irq_entry
        csrw CSR_MTVT2, t0
202
        csrs CSR_MTVT2, 0x1
203
204
        /*
205
         * Set Exception Entry MTVEC to exc_entry
206
207
         * Due to settings above, Exception and NMI
         * will share common entry.
208
         */
209
        la t0, exc entry
210
        csrw CSR_MTVEC, t0
211
212
        /\star Set the interrupt processing mode to ECLIC mode \star/
213
        li t0, 0x3f
214
        csrc CSR_MTVEC, t0
215
        csrs CSR_MTVEC, 0x3
216
217
        /* ===== Startup Stage 2 ===== */
218
219
```

```
#if defined(__riscv_flen) && __riscv_flen > 0
220
        /* Enable FPU */
221
        li t0, MSTATUS_FS
222
        csrs mstatus, t0
223
        csrw fcsr, x0
224
    #endif
225
226
        /* Enable mcycle and minstret counter */
227
        csrci CSR_MCOUNTINHIBIT, 0x5
228
229
230
        /*
         * Call vendor defined SystemInit to
231
232
         \star initialize the micro-controller system.
         * TODO: You need to comment this code when run in Flash download mode.
233
         * then you need to put this line of code
234
         * after data/bss section initialization and before main
235
         */
236
        call SystemInit
237
238
        /* ===== Startup Stage 3 ===== */
239
240
         * Load code section from FLASH to ILM
241
         * when code LMA is different with VMA
242
         */
243
        la a0, _ilm_lma
244
245
        la a1, _ilm
        /* If the ILM phy-address same as the logic-address, then quit */
246
        beq a0, a1, 2f
247
        la a2, _eilm
248
        bgeu a1, a2, 2f
249
250
251
    1:
        /* Load code section if necessary */
252
        lw t0, (a0)
253
        sw t0, (a1)
254
        addi a0, a0, 4
255
256
        addi a1, a1, 4
        bltu a1, a2, 1b
257
258
    2:
        /* Load data section */
259
        la a0, _data_lma
260
        la al, _data
261
        la a2, _edata
262
        bgeu a1, a2, 2f
263
264
    1:
        lw t0, (a0)
265
        sw t0, (a1)
266
        addi a0, a0, 4
267
        addi a1, a1, 4
268
        bltu a1, a2, 1b
269
270
    2:
        /* Clear bss section */
271
272
        la a0, __bss_start
        la al, end
273
        bgeu a0, a1, 2f
274
    1:
275
        sw zero, (a0)
```

```
addi a0, a0, 4
277
        bltu a0, a1, 1b
278
    2:
279
         /\star TODO: Uncomment this code, if you run in Flash download mode \star/
280
         // call SystemInit
28
282
         /* Call global constructors */
283
         la a0, __libc_fini_array
284
         call atexit
285
         /\star Call C/C++ constructor start up code \star/
286
        call __libc_init_array
287
288
289
         /* do pre-init steps before main */
        call _premain_init
290
         /\star ===== Call Main Function ===== \star/
291
         /* argc = argv = 0 */
292
        li a0, 0
293
         li a1, 0
294
         call main
295
         /* do post-main steps after main */
296
        call _postmain_fini
297
298
    1:
299
         j 1b
```

Interrupt and Exception Handling File: intexc <device>.S

The intexc File intexc_<device>.S contains:

- Macro to save caller register.
- Macro to restore caller register.
- Default Exception/NMI routine implementation.
- Default Non-Vector Interrupt routine implementation.

Nuclei processors provide NMI(Non-Maskable Interrupt), Exception, Vector Interrupt and Non-Vector Interrupt features.

NMI(Non-Maskable Interrupt)

Click NMI⁹ to learn about Nuclei Processor Core NMI in Nuclei ISA Spec.

NMI is used for urgent external HW error. It can't be masked and disabled.

When NMI happened, bit 9 of CSR MMSIC_CTL will be checked. If this bit value is 1, then NMI entry address will be the same as exception(CSR_MTVEC), and exception code for NMI will be 0xFFF, otherwise NMI entry will be same as reset_vector.

In NMSIS-Core, the bit 9 of CSR MMISC_CTL is set to 1 during core startup, so NMI will be treated as Exception and handled.

⁹ https://doc.nucleisys.com/nuclei_spec/isa/nmi.html

Exception

Click Exception¹⁰ to learn about Nuclei Processor Core Exception in Nuclei ISA Spec.

For CPU exception, the entry for exception will be exc_entry, in this entry code, it will call default exception handler core_exception_handler() (page 401).

In the common exception routine(exc_entry) to get more information like exception code. Exception handle flow show as below picture:

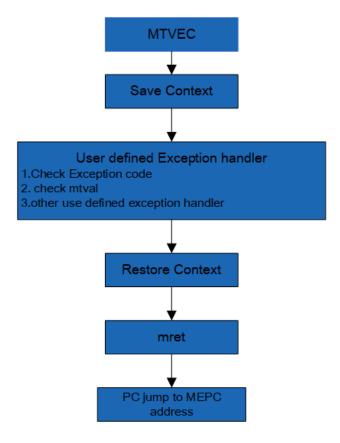


Fig. 3: Exception Handling Flow

NMI and exception could support nesting. Two levels of NMI/Exception state save stacks are supported.

We support three nesting mode as below:

- NMI nesting exception
- Exception nesting exception
- Exception nesting NMI

For software, we have provided the common entry for NMI and exception. Silicon vendor only need adapt the interface defined in *Interrupt Exception NMI Handling* (page 400).

Context save and restore have been handled by exc_entry interface.

When exception exception return it will run the intruction which trigger the exception again. It will cause software dead loop. So in the exception handler for each exception code, we propose to set CSR MEPC to be MEPC+4, then it will start from next instruction of MEPC.

¹⁰ https://doc.nucleisys.com/nuclei_spec/isa/exception.html

Interrupt

Click Interrupt¹¹ to learn about Nuclei Processor Core Interrupt in Nuclei Spec.

Interrupt could be configured as **CLINT** mode or **ECILC** mode.

In NMSIS-Core, Interrupt has been configured as **ECLIC** mode during startup in *startup_<Devices>.S*, which is also recommended setting using Nuclei Processors.

ECLIC managed interrupt could configured as vector and non-vector mode.

Detail interrupt handling process as below picture:

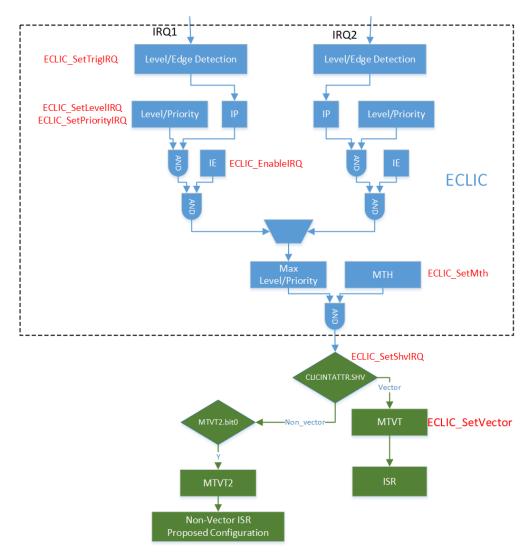


Fig. 4: Interrupt Handling Flow

To get highest priority interrupt we need compare the interrupt level first. If level is the same then compare the priority. High level interrupt could interrupt low level ISR and trigger interrupt nesting. If different priority with same level interrupt pending higher priority will be served first. Interrupt could be configured as vector mode and non-vector mode by vendor. For non-vector mode interrupt handler entry get from MTVT2 and exception/NMI handler entry get

¹¹ https://doc.nucleisys.com/nuclei_spec/isa/interrupt.html

from MTVEC. If Vendor need set non vector mode interrupt handler entry from MTVVEC you need set MTVT2.BIT0 as 0.

Non-Vector Interrupt SW handler

For **non-vector** mode interrupt it will make the necessary CSR registers and context save and restore. Non-vector mode software handle flow show as below pciture:

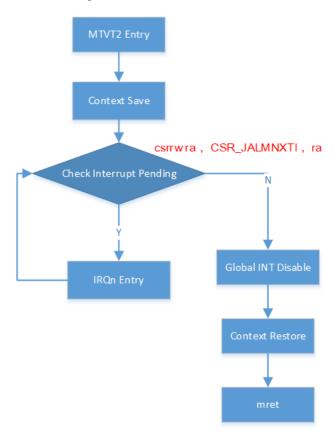


Fig. 5: Non-vector mode interrupt software handle flow

Detail description for non-vector mode interrupt handler as below steps:

- 1. Get non-vector mode handler entry from MTVT2 if MTVT2.BIT0 is 1(proposed configuration).
- 2. Context save to stack for cpu registers.
- 3. Save CSR registers MEPC/MCAUSE/MSUBM to stack.
- 4. Run instruction csrrw ra, CSR_JALMNXTI, ra. It will enable interrupt, check interrupt pending. If interrupt is pending then get highest priority interrupt and jump to interrupt handler entry in the vector table, otherwise it will go to step 6.
- 5. Execute the interrupt handler routine, when return from isr routine it will jump to step 4.
- 6. Global interrupt disable.
- 7. Restore CSR registers MEPC/MCAUSE/MSUBM.
- 8. Context restore from stack for cpu registers.
- 9. Execute mret to return from handler.

For **non-vector** mode iterrupt it could support **interrupt nesting**.

Interrupt nesting handle flow show as below picture:

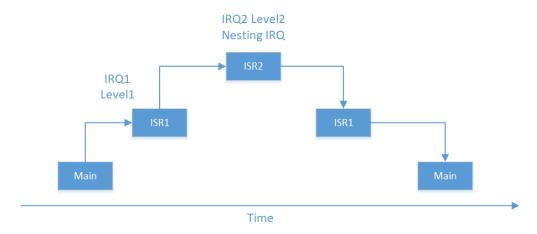


Fig. 6: Nesting interrupt handling flow

Vector Interrupt SW handler

If vector interrupt handler need support nesting or making function call Vector mode software handling flow show as below picture:

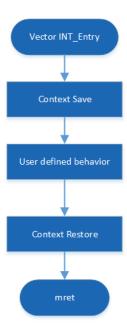


Fig. 7: Vector mode nesting interrupt handling flow

Detail description for nested vector mode interrupt handler as below steps:

- 1. Get vector mode handler from address of vector table entry MTVT added offset.
- 2. Context save to stack for cpu registers, done in each vector interrupt handler via ___INTERRUPT (page 60)

- 3. Save CSR registers MEPC/MCAUSE/MSUBM to stack, done in each vector interrupt handler by read and save these CSRs into variables.
- 4. Execute the interrupt handling.
- 5. Restore CSR registers MEPC/MCAUSE/MSUBM from stack.
- 6. CSR registers restore from saved variables used in step 3.
- 7. Execute mret to return from handler

Here is sample code for above nested vector interrupt handling process:

```
// Vector interrupt handler for on-board button
     _INTERRUPT void SOC_BUTTON_1_HANDLER(void)
2
3
   {
       // save mepc, mcause, msubm enable interrupts
       SAVE_IRQ_CSR_CONTEXT();
6
       printf("%s", "---Begin button1 handler---Vector mode\r\n");
       // Green LED toggle
       gpio_toggle(GPIO, SOC_LED_GREEN_GPIO_MASK);
10
11
       // Clear the GPIO Pending interrupt by writing 1.
12
       qpio_clear_interrupt(GPIO, SOC_BUTTON_1_GPIO_OFS, GPIO_INT_RISE);
13
14
       wait_seconds(1); // Wait for a while
15
16
       printf("%s", "----End button1 handler\r\n");
17
       // disable interrupts, restore mepc, mcause, msubm
19
       RESTORE IRQ CSR CONTEXT();
20
21
```

Detail description for non-nested vector mode interrupt handler as below

To improve the software response latency for vector mode vendor could remove context save/restore and MEPC/MCAUSE/MSUBM save/restore.

If so vector mode interrupt will not support nesting and interrupt handler can only be a leaf function which doesn't make any function calls.

Then the vector mode interrupt software flow will be described as below:

- 1. Get vector mode handler from address of vector table entry MTVT added offset.
- 2. Execute the interrupt handler(leaf function).
- 3. Execute mret to return from handler

Here is sample code for above non-nested vector interrupt handler which is a leaf function handling process:

```
static uint32_t btn_pressed = 0;
// Vector interrupt handler for on-board button
// This function is an leaf function, no function call is allowed
INTERRUPT void SOC_BUTTON_1_HANDLER(void)
{
    btn_pressed ++;
}
```

intexc_Device.S Template File

The file exists for each supported toolchain and is the only toolchain specific NMSIS file.

Normally this file needn't adapt for different device. If CPU CSR registers have done some changes you may need some adaption.

Here we provided intexc_Device. S template file as below:

```
* Copyright (c) 2019 Nuclei Limited. All rights reserved.
2
    * SPDX-License-Identifier: Apache-2.0
    * Licensed under the Apache License, Version 2.0 (the License); you may
    * not use this file except in compliance with the License.
    * You may obtain a copy of the License at
    * www.apache.org/licenses/LICENSE-2.0
10
11
    * Unless required by applicable law or agreed to in writing, software
12
    * distributed under the License is distributed on an AS IS BASIS, WITHOUT
13
    * WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.
14
    * See the License for the specific language governing permissions and
15
    * limitations under the License.
16
   /*****************************
18
              intexc_<Device>.S
19
             NMSIS Interrupt and Exception Handling Template File
20
              for Nuclei N/NX Class Device
21
    * \version V1.10
22
    * \date 30. July 2021
23
24
    *******************************
25
26
   #include "riscv_encoding.h"
27
28
29
   * \brief Global interrupt disabled
31
     This function disable global interrupt.
32
   * \remarks
33
      - All the interrupt requests will be ignored by CPU.
34
35
   .macro DISABLE_MIE
      csrc CSR_MSTATUS, MSTATUS_MIE
37
   .endm
38
39
40
   * \brief Macro for context save
41
42
   * \details
   * This macro save ABI defined caller saved registers in the stack.
43
   * - This Macro could use to save context when you enter to interrupt
45
   * or exception
46
47
   /* Save caller registers */
48
   .macro SAVE_CONTEXT
```

```
/* Allocate stack space for context saving */
50
    #ifndef riscv 32e
51
        addi sp, sp, -20*REGBYTES
52
    #else
53
        addi sp, sp, -14*REGBYTES
    #endif /* __riscv_32e */
55
56
        STORE x1, 0 * REGBYTES (sp)
57
        STORE x4, 1*REGBYTES(sp)
58
        STORE x5, 2*REGBYTES(sp)
59
        STORE x6, 3*REGBYTES(sp)
60
        STORE x7, 4*REGBYTES(sp)
61
62
        STORE x10, 5 * REGBYTES (sp)
        STORE x11, 6*REGBYTES(sp)
63
        STORE x12, 7*REGBYTES(sp)
64
        STORE x13, 8 * REGBYTES (sp)
65
        STORE x14, 9 * REGBYTES (sp)
66
        STORE x15, 10 * REGBYTES (sp)
67
    #ifndef __riscv_32e
68
        STORE x16, 14 * REGBYTES (sp)
69
        STORE x17, 15 * REGBYTES (sp)
70
        STORE x28, 16 * REGBYTES (sp)
71
        STORE x29, 17*REGBYTES(sp)
72
        STORE x30, 18*REGBYTES(sp)
73
        STORE x31, 19*REGBYTES(sp)
   #endif /* __riscv_32e */
    .endm
76
77
78
    * \brief Macro for restore caller registers
79
     * \details
81
     * This macro restore ABI defined caller saved registers from stack.
82
     * - You could use this macro to restore context before you want return
83
     * from interrupt or exeception
84
85
86
    /* Restore caller registers */
    .macro RESTORE_CONTEXT
88
       LOAD x1, 0 * REGBYTES (sp)
       LOAD x4, 1*REGBYTES(sp)
89
       LOAD x5, 2*REGBYTES(sp)
90
       LOAD x6, 3*REGBYTES(sp)
91
       LOAD x7, 4*REGBYTES(sp)
92
       LOAD x10, 5 * REGBYTES (sp)
93
        LOAD x11, 6*REGBYTES(sp)
94
        LOAD x12, 7 * REGBYTES (sp)
95
        LOAD x13, 8 * REGBYTES (sp)
96
        LOAD x14, 9*REGBYTES(sp)
97
        LOAD x15, 10 * REGBYTES (sp)
98
    #ifndef __riscv_32e
99
        LOAD x16, 14*REGBYTES(sp)
100
        LOAD x17, 15*REGBYTES(sp)
101
        LOAD x28, 16 * REGBYTES (sp)
102
        LOAD x29, 17*REGBYTES(sp)
103
        LOAD x30, 18 * REGBYTES (sp)
104
        LOAD x31, 19*REGBYTES(sp)
105
```

```
/* De-allocate the stack space */
107
        addi sp, sp, 20*REGBYTES
108
    #else
109
        /* De-allocate the stack space */
110
        addi sp, sp, 14*REGBYTES
111
    #endif /* __riscv_32e */
112
113
    .endm
114
115
116
    * \brief Macro for save necessary CSRs to stack
117
    * \details
119
    * This macro store MCAUSE, MEPC, MSUBM to stack.
    */
120
    .macro SAVE CSR CONTEXT
121
       /* Store CSR mcause to stack using pushmcause */
122
        csrrwi x0, CSR_PUSHMCAUSE, 11
123
        /* Store CSR mepc to stack using pushmepc */
124
        csrrwi x0, CSR_PUSHMEPC, 12
125
        /* Store CSR msub to stack using pushmsub */
126
        csrrwi x0, CSR_PUSHMSUBM, 13
127
    .endm
128
129
130
    * \brief Macro for restore necessary CSRs from stack
131
132
    * \details
133
    * This macro restore MSUBM, MEPC, MCAUSE from stack.
134
   .macro RESTORE_CSR_CONTEXT
135
      LOAD x5, 13*REGBYTES(sp)
136
       csrw CSR_MSUBM, x5
137
       LOAD x5, 12 * REGBYTES (sp)
138
        csrw CSR_MEPC, x5
139
        LOAD x5, 11*REGBYTES(sp)
140
        csrw CSR MCAUSE, x5
141
   .endm
142
143
144
    * \brief Exception/NMI Entry
    * \details
146
    * This function provide common entry functions for exception/nmi.
147
    * \remarks
148
    * This function provide a default exception/nmi entry.
149
    * ABI defined caller save register and some CSR registers
150
    * to be saved before enter interrupt handler and be restored before return.
151
152
    .section .text.trap
153
   /* In CLIC mode, the exeception entry must be 64bytes aligned */
154
   .align 6
155
   .global exc_entry
156
   .weak exc_entry
157
   exc entry:
158
159
        /* Save the caller saving registers (context) */
        SAVE CONTEXT
160
        /* Save the necessary CSR registers */
161
        SAVE CSR CONTEXT
162
163
```

```
/*
164
         * Set the exception handler function arguments
165
         * argument 1: mcause value
166
         * argument 2: current stack point(SP) value
167
168
        csrr a0, mcause
169
        mv al, sp
170
171
         * TODO: Call the exception handler function
172
         * By default, the function template is provided in
173
         * system_Device.c, you can adjust it as you want
174
175
176
        call core_exception_handler
177
        /* Restore the necessary CSR registers */
178
        RESTORE_CSR_CONTEXT
179
        /* Restore the caller saving registers (context) */
180
        RESTORE_CONTEXT
181
182
        /* Return to regular code */
183
184
185
186
    * \brief Non-Vector Interrupt Entry
187
188
189
    * This function provide common entry functions for handling
    * non-vector interrupts
190
    * \remarks
191
    * This function provide a default non-vector interrupt entry.
192
    * ABI defined caller save register and some CSR registers need
193
    * to be saved before enter interrupt handler and be restored before return.
194
195
    .section
                  .text.irq
196
    /* In CLIC mode, the interrupt entry must be 4bytes aligned */
197
    .align 2
198
    .global irq_entry
199
    .weak irq_entry
200
    /* This label will be set to MTVT2 register */
    irq entry:
        /* Save the caller saving registers (context) */
203
        SAVE CONTEXT
204
        /* Save the necessary CSR registers */
205
        SAVE CSR CONTEXT
206
207
        /* This special CSR read/write operation, which is actually
208
         * claim the CLIC to find its pending highest ID, if the ID
209
         * is not 0, then automatically enable the mstatus.MIE, and
210
         * jump to its vector-entry-label, and update the link register
211
         */
212
        csrrw ra, CSR_JALMNXTI, ra
213
214
        /* Critical section with interrupts disabled */
215
        DISABLE MIE
216
217
        /* Restore the necessary CSR registers */
218
        RESTORE CSR CONTEXT
219
        /* Restore the caller saving registers (context) */
```

```
RESTORE_CONTEXT
221
222
        /* Return to regular code */
223
224
        mret.
225
    /* Default Handler for Exceptions / Interrupts */
226
    .global default_intexc_handler
227
    .weak default_intexc_handler
228
    Undef_Handler:
229
    default_intexc_handler:
230
231
         j 1b
```

Device Linker Script: gcc <device>.ld

The Linker Script File gcc_<device>.ld contains:

- Memory base address and size.
- Code, data section, vector table etc. location.
- Stack & heap location and size.

The file exists for each supported toolchain and is the only toolchain specific NMSIS file.

To adapt the file to a new device only when you need change the memory base address, size, data and code location etc.

gcc Device.ld Template File

Here we provided gcc_Device.ld template file as below:

```
* Copyright (c) 2019 Nuclei Limited. All rights reserved.
2
    * SPDX-License-Identifier: Apache-2.0
    * Licensed under the Apache License, Version 2.0 (the License); you may
6
    * not use this file except in compliance with the License.
    * You may obtain a copy of the License at
    * www.apache.org/licenses/LICENSE-2.0
11
    * Unless required by applicable law or agreed to in writing, software
12
    \star distributed under the License is distributed on an AS IS BASIS, WITHOUT
13
    * WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.
14
    \star See the License for the specific language governing permissions and
15
    * limitations under the License.
17
18
    * @file
              gcc_<Device>.ld
19
    * @brief
               GNU Linker Script for Nuclei N/NX based device
20
    * @version V1.1.0
21
               30. July 2021
    * @date
22
    *************************************
```

```
24
   /****** Use Configuration Wizard in Context Menu *******************************
25
26
   OUTPUT_ARCH( "riscv" )
27
   28
    * <h> Flash Configuration
29
    * <o0> Flash Base Address <0x0-0xFFFFFFFF:8>
30
    * <o1> Flash Size (in Bytes) <0x0-0xFFFFFFFF:8>
31
    * </h>
32
33
   _{\rm ROM\_BASE} = 0x20000000;
34
   _{\rm ROM\_SIZE} = 0 \times 00400000;
   /*----- ILM RAM Configuration -----
37
   * <h> ILM RAM Configuration
38
   * <o0> ILM RAM Base Address
                                 <0\times0-0\times\text{FFFFFFFF}:8>
39
    * <o1> ILM RAM Size (in Bytes) <0x0-0xFFFFFFFF:8>
40
    * </h>
41
42
    _{\rm ILM\_RAM\_BASE} = 0x80000000;
43
   ILM_RAM_SIZE = 0x00010000;
44
45
   /*---- Embedded RAM Configuration -----
46
   * <h> RAM Configuration
47
   * <o0> RAM Base Address
                             <0x0-0xFFFFFFFF:8>
   * <o1> RAM Size (in Bytes) <0x0-0xFFFFFFFF:8>
   * </h>
50
   */
51
    RAM BASE = 0 \times 900000000;
52
   _{RAM\_SIZE} = 0 \times 00010000;
53
54
   /***************** Stack / Heap Configuration *********************
55
   * <h> Stack / Heap Configuration
56
    * <o0> Stack Size (in Bytes) <0x0-0xFFFFFFFF:8>
57
    * <o1> Heap Size (in Bytes) <0x0-0xFFFFFFFF:8>
58
    * </h>
59
   * /
60
   \__STACK\_SIZE = 0x00000800;
   _{\text{HEAP\_SIZE}} = 0 \times 000000800;
63
   64
65
   /\star Define base address and length of flash and ram \star/
66
   MEMORY
67
68
     flash (rxai!w) : ORIGIN = __ROM_BASE, LENGTH = __ROM_SIZE
69
     ram (wxa!ri) : ORIGIN = __RAM_BASE, LENGTH = __RAM_SIZE
70
71
   /* Linker script to place sections and symbol values. Should be used together
72
   * with other linker script that defines memory regions FLASH, ILM and RAM.
73
    \star It references following symbols, which must be defined in code:
74
       _start : Entry of reset handler
75
76
    * It defines following symbols, which code can use without definition:
77
        _ilm_lma
78
        \_ilm
79
         _etext
```

```
_etext
81
         etext
82
         _eilm
83
         __preinit_array_start
84
         __preinit_array_end
85
         __init_array_start
86
         ___init_array_end
87
         __fini_array_start
88
         __fini_array_end
89
         _data_lma
90
         _edata
91
         edata
         __data_end__
93
         __bss_start
94
          __fbss
95
         _end
96
         end
97
         __heap_end
98
         ___StackLimit
99
         ___StackTop
100
         ___STACK_SIZE
101
102
    /* Define entry label of program */
103
    ENTRY(_start)
    SECTIONS
106
       __STACK_SIZE = DEFINED(__STACK_SIZE) ? __STACK_SIZE : 2K;
107
108
      .init
109
110
        /* vector table locate at flash */
111
112
        *(.vtable)
        KEEP (*(SORT_NONE(.init)))
113
      } >flash AT>flash
114
115
      .ilalign
116
117
        \cdot = ALIGN(4);
119
        /\star Create a section label as _ilm_lma which located at flash \star/
        PROVIDE( _ilm_lma = . );
120
      } >flash AT>flash
121
122
      .ialign
123
124
        /* Create a section label as _ilm which located at flash */
125
        PROVIDE ( _ilm = . );
126
      } >flash AT>flash
127
128
      /* Code section located at flash */
129
      .text
130
131
      {
132
        *(.text.unlikely .text.unlikely.*)
133
        *(.text.startup .text.startup.*)
        *(.text .text.*)
134
         *(.gnu.linkonce.t.*)
135
      } >flash AT>flash
136
137
```

```
.rodata : ALIGN(4)
138
139
        . = ALIGN(4);
140
        *(.rdata)
141
        *(.rodata .rodata.*)
142
        *(.gnu.linkonce.r.*)
143
        . = ALIGN(8);
144
        *(.srodata.cst16)
145
        *(.srodata.cst8)
146
        *(.srodata.cst4)
147
        *(.srodata.cst2)
148
        *(.srodata .srodata.*)
150
      } >flash AT>flash
151
      .fini
152
153
        KEEP (*(SORT_NONE(.fini)))
154
      } >flash AT>flash
155
156
      . = ALIGN(4);
157
158
      PROVIDE (__etext = .);
159
      PROVIDE (_etext = .);
160
161
      PROVIDE (etext = .);
      PROVIDE( _eilm = . );
162
163
164
      .preinit_array :
165
166
        PROVIDE_HIDDEN (__preinit_array_start = .);
167
        KEEP (*(.preinit_array))
168
        PROVIDE_HIDDEN (__preinit_array_end = .);
169
      } >flash AT>flash
170
171
      .init_array
172
173
174
        PROVIDE_HIDDEN (__init_array_start = .);
        KEEP (*(SORT_BY_INIT_PRIORITY(.init_array.*) SORT_BY_INIT_PRIORITY(.ctors.*)))
        KEEP (*(.init_array EXCLUDE_FILE (*crtbegin.o *crtbegin?.o *crtend.o *crtend?.o),
        PROVIDE_HIDDEN (__init_array_end = .);
177
      } >flash AT>flash
178
179
180
      .fini_array
181
        PROVIDE_HIDDEN (__fini_array_start = .);
182
        KEEP (*(SORT_BY_INIT_PRIORITY(.fini_array.*) SORT_BY_INIT_PRIORITY(.dtors.*)))
183
        KEEP (*(.fini_array EXCLUDE_FILE (*crtbegin.o *crtbegin?.o *crtend.o *crtend?.o),
184
    →.dtors))
        PROVIDE_HIDDEN (__fini_array_end = .);
185
186
      } >flash AT>flash
      .ctors
188
189
        /\star gcc uses crtbegin.o to find the start of
190
         * the constructors, so we make sure it is
191
         * first. Because this is a wildcard, it
```

```
* doesn't matter if the user does not
193
          * actually link against crtbegin.o; the
194
         * linker won't look for a file to match a
195
         \star wildcard. The wildcard also means that it
196
          * doesn't matter which directory crtbegin.o
197
         * is in.
198
         */
199
        KEEP (*crtbegin.o(.ctors))
200
        KEEP (*crtbegin?.o(.ctors))
201
        /\star We don't want to include the .ctor section from
202
         \star the crtend.o file until after the sorted ctors.
203
         * The .ctor section from the crtend file contains the
205
          * end of ctors marker and it must be last
         */
206
        KEEP (*(EXCLUDE_FILE (*crtend.o *crtend?.o) .ctors))
207
        KEEP (*(SORT(.ctors.*)))
208
        KEEP (*(.ctors))
209
      } >flash AT>flash
210
211
      .dtors
212
      {
213
        KEEP (*crtbegin.o(.dtors))
214
        KEEP (*crtbegin?.o(.dtors))
215
        KEEP (*(EXCLUDE_FILE (*crtend.o *crtend?.o) .dtors))
216
        KEEP (*(SORT(.dtors.*)))
217
218
        KEEP (*(.dtors))
      } >flash AT>flash
219
220
      .laliqn
221
      {
222
223
         . = ALIGN(4);
224
        PROVIDE( _data_lma = . );
      } >flash AT>flash
225
226
      .dalign
227
228
229
         . = ALIGN(4);
        PROVIDE( _data = . );
231
      } >ram AT>flash
232
      /\star Define data section virtual address is ram and physical address is flash \star/
233
234
      .data
235
      {
        *(.data .data.*)
236
237
        *(.qnu.linkonce.d.*)
        . = ALIGN(8);
238
        PROVIDE( \_global\_pointer$ = . + 0x800 );
239
        *(.sdata .sdata.* .sdata*)
240
        *(.gnu.linkonce.s.*)
241
      } >ram AT>flash
242
243
      . = ALIGN(4);
      PROVIDE ( _edata = . );
245
      PROVIDE ( edata = . );
246
247
      PROVIDE ( \_fbss = . );
248
      PROVIDE( __bss_start = . );
```

```
.bss
250
251
         *(.sbss*)
252
         *(.gnu.linkonce.sb.*)
253
         *(.bss .bss.*)
254
         *(.gnu.linkonce.b.*)
255
         * (COMMON)
256
         . = ALIGN(4);
257
       } >ram AT>ram
258
259
       . = ALIGN(8);
260
      PROVIDE ( \_end = . );
261
262
      PROVIDE ( end = . );
       /* Define stack and head location at ram */
263
       .stack ORIGIN(ram) + LENGTH(ram) - __STACK_SIZE :
264
265
         PROVIDE ( _heap_end = . );
266
         ___StackLimit = .;
267
         . = \__STACK\_SIZE;
268
          _StackTop = .;
269
         PROVIDE ( \_sp = . );
270
       } >ram AT>ram
271
272
```

System Configuration Files system_<device>.c and system_<device>.h

The **System Configuration Files system_<device>.c** and **system_<device>.h** provides as a minimum the functions described under *System Device Configuration* (page 398).

These functions are device specific and need adaptations. In addition, the file might have configuration settings for the device such as XTAL frequency or PLL prescaler settings, necessary system initilization, vendor customized interrupt, exception and nmi handling code, refer to *System Device Configuration* (page 398) for more details.

For devices with external memory BUS the system_<device>.c also configures the BUS system.

The silicon vendor might expose other functions (i.e. for power configuration) in the system_<device>.c file. In case of additional features the function prototypes need to be added to the system_<device>.h header file.

system Device.c Template File

Here we provided system_Device.c template file as below:

```
/*
2 * Copyright (c) 2009-2018 Arm Limited. All rights reserved.
3 * Copyright (c) 2019 Nuclei Limited. All rights reserved.
4 *
5 * SPDX-License-Identifier: Apache-2.0
6 *
7 * Licensed under the Apache License, Version 2.0 (the License); you may
8 * not use this file except in compliance with the License.
9 * You may obtain a copy of the License at
10 *
11 * www.apache.org/licenses/LICENSE-2.0
12 *
```

```
* Unless required by applicable law or agreed to in writing, software
13
    * distributed under the License is distributed on an AS IS BASIS, WITHOUT
14
    * WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.
15
    * See the License for the specific language governing permissions and
16
    * limitations under the License.
17
18
   /*****************************
19
    * @file
              system_<Device>.c
20
    * @brief NMSIS Nuclei N/NX Device Peripheral Access Layer Source File for
21
               Device <Device>
22
   * @version V1.10
23
    * @date
              30. July 2021
    ******************************
26
   #include <stdint.h>
27
   #include "<Device>.h"
28
29
30
    Define clocks
31
32
   /* TODO: add here your necessary defines for device initialization
33
           following is an example for different system frequencies */
34
                         (12000000U)
                                      /* Oscillator frequency
   #define XTAL
35
36
   #define SYSTEM_CLOCK (5 * XTAL)
37
39
   * \defgroup NMSIS_Core_SystemConfig
                                             System Device Configuration
40
   * \brief Functions for system init, clock setup and interrupt/exception/nmi_
41
   →functions available in system_<device>.c.
    * \details
42
    * Nuclei provides a template file **system_Device.c** that must be adapted by
    * the silicon vendor to match their actual device. As a <b>minimum requirement</b>,
44
    * this file must provide:
45
      - A device-specific system configuration function, \ref SystemInit.
46
    * - A global variable that contains the system frequency, \ref SystemCoreClock.
47
   * - A global eclic configuration initialization, \ref ECLIC_Init.
48
   * - Global c library \ref _init and \ref _fini functions called right before.
   → calling main function.
   * - Vendor customized interrupt, exception and nmi handling code, see \ref NMSIS_
50
   → Core IntExcNMI Handling
51
   * The file configures the device and, typically, initializes the oscillator (PLL)
52
   →that is part
   * of the microcontroller device. This file might export other functions or variables.
   →that provide
   * a more flexible configuration of the microcontroller system.
54
55
   * And this file also provided common interrupt, exception and NMI exception handling.
56
   → framework template,
   * Silicon vendor can customize these template code as they want.
57
   * \note Please pay special attention to the static variable \c SystemCoreClock. This...
   → variable might be
   * used throughout the whole system initialization and runtime to calculate frequency/
60
   →time related values.
   * Thus one must assure that the variable always reflects the actual system clock
                                                                          (continues on next page)
   ⇔speed.
```

```
62
     * \attention
63
     * Be aware that a value stored to \c SystemCoreClock during low level initialization,
    → (i.e. \c SystemInit()) might get
     * overwritten by C libray startup code and/or .bss section initialization.
65
     * Thus its highly recommended to call \ref SystemCoreClockUpdate at the beginning of ...
    →the user \c main() routine.
67
    * @{
68
69
    */
70
     System Core Clock Variable
73
    /* TODO: initialize SystemCoreClock with the system core clock frequency value
74
             achieved after system initialization.
75
             This means system core clock frequency after call to SystemInit() */
76
77
    * \brief
                  Variable to hold the system core clock value
78
     * \details
79
    * Holds the system core clock, which is the system clock frequency supplied to the
80
    \hookrightarrow SvsTick
    * timer and the processor core clock. This variable can be used by debuggers to.
81
    \rightarrow query the
    * frequency of the debug timer or to configure the trace clock speed.
82
83
    * \attention
84
    * Compilers must be configured to avoid removing this variable in case the,
85
    →application
    * program is not using it. Debugging systems require the variable to be physically
86
     * present in memory so that it can be examined to configure the debugger.
87
88
   uint32_t SystemCoreClock = SYSTEM_CLOCK; /* System Clock Frequency (Core Clock) */
89
90
91
92
     Clock functions
93
94
96
    * \brief
                   Function to update the variable \ref SystemCoreClock
97
     * \details
98
    * Updates the variable \ref SystemCoreClock and must be called whenever the core...
    ⇔clock is changed
100
    * during program execution. The function evaluates the clock register settings and
    → calculates
    * the current core clock.
101
102
   void SystemCoreClockUpdate (void) /* Get Core Clock Frequency */
103
104
        /* TODO: add code to calculate the system frequency based upon the current
105
         * register settings.
106
         * Note: This function can be used to retrieve the system core clock frequeny
107
             after user changed register settings.
108
109
        SystemCoreClock = SYSTEM_CLOCK;
110
111
```

```
112
113
    * \brief
                   Function to Initialize the system.
114
    * \details
115
     * Initializes the microcontroller system. Typically, this function configures the
116
     * oscillator (PLL) that is part of the microcontroller device. For systems
    * with a variable clock speed, it updates the variable \ref SystemCoreClock.
118
    * SystemInit is called from the file <b>startup<i>_device</i></b>.
119
120
   void SystemInit (void)
121
122
        /* TODO: add code to initialize the system
123
124
         * Warn: do not use global variables because this function is called before
         * reaching pre-main. RW section maybe overwritten afterwards.
125
126
        SystemCoreClock = SYSTEM_CLOCK;
127
128
129
130
    * \defgroup NMSIS_Core_IntExcNMI_Handling Interrupt and Exception and NMI Handling
131
    * \brief Functions for interrupt, exception and nmi handle available in system
132
    → <device>.c.
    * \details
133
    * Nuclei provide a template for interrupt, exception and NMI handling. Silicon
134
    → Vendor could adapat according
    * to their requirement. Silicon vendor could implement interface for different.
    →exception code and
    * replace current implementation.
136
137
    * @ {
138
139
   /** \brief Max exception handler number, don't include the NMI(0xFFF) one */
   #define MAX_SYSTEM_EXCEPTION_NUM
141
142
    * \brief
                   Store the exception handlers for each exception ID
143
144
    * \note
    * - This SystemExceptionHandlers are used to store all the handlers for all
145
    * the exception codes Nuclei N/NX core provided.
    * - Exception code 0 - 11, totally 12 exceptions are mapped to ...
    →SystemExceptionHandlers[0:11]
    * - Exception for NMI is also re-routed to exception handling(exception code 0xFFF)...
148
    →in startup code configuration, the handler itself is mapped to...
    → SystemExceptionHandlers[MAX_SYSTEM_EXCEPTION_NUM]
149
   static unsigned long SystemExceptionHandlers[MAX_SYSTEM_EXCEPTION_NUM+1];
151
152
    * \brief
                   Exception Handler Function Typedef
153
    * \note
154
    * This typedef is only used internal in this system <Device>.c file.
155
    * It is used to do type conversion for registered exception handler before calling.
    ⇔it.
    */
157
   typedef void (*EXC_HANDLER) (unsigned long mcause, unsigned long sp);
158
159
160
    * \brief
                   System Default Exception Handler
```

```
* \details
162
     * This function provided a default exception and NMI handling code for all exception.
163
    -ids.
    * By default, It will just print some information for debug, Vendor can customize it.
164
    →according to its requirements.
165
   static void system_default_exception_handler(unsigned long mcause, unsigned long sp)
166
167
        /* TODO: Uncomment this if you have implement printf function.
168
         * Or you can implement your own version as you like */
169
        //printf("MCAUSE: 0x%lx\r\n", mcause);
170
        //printf("MEPC : 0x%lx\r\n", __RV_CSR_READ(CSR_MEPC));
171
172
        //printf("MTVAL : 0x%lx\r\n", __RV_CSR_READ(CSR_MBADADDR));
        Exception_DumpFrame(sp);
173
        while(1);
174
175
    }
176
    /**
177
     * \brief
                    Initialize all the default core exception handlers
178
     * \details
179
    * The core exception handler for each exception id will be initialized to \ref.
180
    ⇒system_default_exception_handler.
181
    * Called in \ref _init function, used to initialize default exception handlers for_
182
    →all exception IDs
183
   static void Exception_Init(void)
184
185
        for (int i = 0; i < MAX_SYSTEM_EXCEPTION_NUM+1; i++) {</pre>
186
            SystemExceptionHandlers[i] = (unsigned long) system_default_exception_handler;
187
188
189
    }
190
191
    * \brief
                    Dump Exception Frame
192
    * \details
193
    * This function provided feature to dump exception frame stored in stack.
194
196
   void Exception_DumpFrame(unsigned long sp)
197
        EXC_Frame_Type *exc_frame = (EXC_Frame_Type *)sp;
198
199
    #ifndef ___riscv_32e
200
        printf("ra: 0x%x, tp: 0x%x, t0: 0x%x, t1: 0x%x, t2: 0x%x, t3: 0x%x, t4: 0x%x, t5:...
201
    \rightarrow 0x%x, t6: 0x%x\n"
                "a0: 0x%x, a1: 0x%x, a2: 0x%x, a3: 0x%x, a4: 0x%x, a5: 0x%x, a6: 0x%x, a7:...
202
    \hookrightarrow 0 \times \% \times \backslash n'' \setminus
                "mcause: 0x%x, mepc: 0x%x, msubm: 0x%x\n", exc_frame->ra, exc_frame->tp,...
203
    →exc_frame->t0, \
               exc_frame->t1, exc_frame->t2, exc_frame->t3, exc_frame->t4, exc_frame->t5,_
204
    →exc_frame->t6, \
               exc_frame->a0, exc_frame->a1, exc_frame->a2, exc_frame->a3, exc_frame->a4,_
    →exc_frame->a5, \
               exc_frame->a6, exc_frame->a7, exc_frame->mcause, exc_frame->mepc, exc_
206
    →frame->msubm);
207
        printf("ra: 0x%x, tp: 0x%x, t0: 0x%x, t1: 0x%x, t2: 0x%x\n" \
```

```
"a0: 0x%x, a1: 0x%x, a2: 0x%x, a3: 0x%x, a4: 0x%x, a5: 0x%x\n" \
209
               "mcause: 0x%x, mepc: 0x%x, msubm: 0x%x\n", exc_frame->ra, exc_frame->tp,...
210
    \rightarrowexc_frame->t0, \
               exc_frame->t1, exc_frame->t2, exc_frame->a0, exc_frame->a1, exc_frame->a2,_
211
    →exc_frame->a3, \
               exc_frame->a4, exc_frame->a5, exc_frame->mcause, exc_frame->mepc, exc_
212
    →frame->msubm);
    #endif
213
214
215
216
    * \brief
                     Register an exception handler for exception code EXCn
217
     * \details
218
    * * For EXCn < \ref MAX_SYSTEM EXCEPTION_NUM, it will be registered into...
219
    → SystemExceptionHandlers[EXCn-1].
    * * For EXCn == NMI_EXCn, it will be registered into SystemExceptionHandlers[MAX_
220
    → SYSTEM_EXCEPTION_NUM].
     * \param EXCn See \ref EXCn_Type
221
                exc_handler The exception handler for this exception code EXCn
222
     * \param
223
    void Exception_Register_EXC(uint32_t EXCn, unsigned long exc_handler)
224
225
        if ((EXCn < MAX_SYSTEM_EXCEPTION_NUM) && (EXCn >= 0)) {
226
            SystemExceptionHandlers[EXCn] = exc_handler;
227
        } else if (EXCn == NMI_EXCn) {
228
229
            SystemExceptionHandlers[MAX_SYSTEM_EXCEPTION_NUM] = exc_handler;
230
    }
231
232
    /**
233
     * \brief
                     Get current exception handler for exception code EXCn
234
235
     * \details
     * * For EXCn < \ref MAX_SYSTEM_EXCEPTION_NUM, it will return.
236
    \rightarrow SystemExceptionHandlers[EXCn-1].
     * * For EXCn == NMI_EXCn, it will return SystemExceptionHandlers[MAX_SYSTEM_
237
    → EXCEPTION NUM1.
     * \param EXCn See \ref EXCn_Type
238
    * \return Current exception handler for exception code EXCn, if not found, return 0.
    unsigned long Exception_Get_EXC(uint32 t EXCn)
241
242
        if ((EXCn < MAX_SYSTEM_EXCEPTION_NUM) && (EXCn >= 0)) {
243
244
            return SystemExceptionHandlers[EXCn];
        } else if (EXCn == NMI_EXCn) {
245
246
            return SystemExceptionHandlers[MAX_SYSTEM_EXCEPTION_NUM];
        } else {
247
            return 0;
248
249
250
    }
251
252
    * \brief
                   Common NMI and Exception handler entry
253
    * \details
254
     * This function provided a command entry for NMI and exception. Silicon Vendor could,
255
    → modify
    * this template implementation according to requirement.
256
    * \remarks
257
```

```
* - RISCV provided common entry for all types of exception. This is proposed code.
258
    →template
    * for exception entry function, Silicon Vendor could modify the implementation.
259
     * - For the core_exception_handler template, we provided exception register function_
    → \ref Exception_Register_EXCn
    * which can help developer to register your exception handler for specific.
261
    →exception number.
262
   uint32_t core_exception_handler(unsigned long mcause, unsigned long sp)
263
264
        uint32_t EXCn = (uint32_t) (mcause & 0X00000fff);
265
       EXC_HANDLER exc_handler;
        if ((EXCn < MAX_SYSTEM_EXCEPTION_NUM) && (EXCn >= 0)) {
268
            exc_handler = (EXC_HANDLER) SystemExceptionHandlers[EXCn];
269
        } else if (EXCn == NMI_EXCn) {
270
            exc_handler = (EXC_HANDLER)SystemExceptionHandlers[MAX_SYSTEM_EXCEPTION_NUM];
271
        } else {
272
            exc_handler = (EXC_HANDLER) system_default_exception_handler;
273
274
        if (exc_handler != NULL) {
275
            exc_handler(mcause, sp);
276
277
        return 0;
278
279
   }
281
    * \brief Initialize Global ECLIC Config
282
283
    * \details
    * ECLIC needs be initialized after boot up,
284
     * Vendor could also change the initialization
285
     * configuration.
287
   void ECLIC_Init(void)
288
289
        /* Global Configuration about MTH and NLBits.
290
         * TODO: Please adapt it according to your system requirement.
291
         * This function is called in _init function */
        /* Set CSR MTH to zero */
       ECLIC_SetMth(0);
294
        /* Set Nlbits to the CLICINTCTLBITS, all the bits are level bits */
295
       ECLIC_SetCfqNlbits(__ECLIC_INTCTLBITS);
296
297
   }
298
299
    * \brief Initialize a specific IRQ and register the handler
300
    * \details
301
    * This function set vector mode, trigger mode and polarity, interrupt level and
302
    ⇔priority,
    * assign handler for specific IRQn.
303
    * \param [in] IRQn NMI interrupt handler address
    * \param [in] shv
                                \ref ECLIC_NON_VECTOR_INTERRUPT means non-vector mode,...
    →and \ref ECLIC_VECTOR_INTERRUPT is vector mode
    * \param [in] trig_mode see \ref ECLIC_TRIGGER_Type
306
    * \param [in] lvl
                                interupt level
307
    * \param [in] priority
308
                                interrupt priority
    * \param [in] handler
                               interrupt handler, if NULL, handler will not be installed
```

```
310
     * \return
                      -1 means invalid input parameter. 0 means successful.
311
     * \remarks
312
     st - This function use to configure specific eclic interrupt and register its \Box
313
    →interrupt handler and enable its interrupt.
     * - If the vector table is placed in read-only section(FLASHXIP mode), handler could_
314
    \rightarrownot be installed
315
   int32_t ECLIC_Register_IRQ(IRQn_Type IRQn, uint8_t shv, ECLIC_TRIGGER_Type trig_mode,_
316
    →uint8_t lvl, uint8_t priority, void *handler)
317
        if ((IRQn > SOC_INT_MAX) || (shv > ECLIC_VECTOR_INTERRUPT) \
318
            || (trig_mode > ECLIC_NEGTIVE_EDGE_TRIGGER )) {
319
            return -1;
320
321
322
        /* set interrupt vector mode */
323
        ECLIC_SetShvIRQ(IRQn, shv);
324
        /* set interrupt trigger mode and polarity */
325
        ECLIC_SetTrigIRQ(IRQn, trig_mode);
326
        /* set interrupt level */
327
        ECLIC_SetLevelIRQ(IRQn, lvl);
328
        /* set interrupt priority */
329
        ECLIC_SetPriorityIRQ(IRQn, priority);
330
        if (handler != NULL) {
331
332
            /* set interrupt handler entry to vector table */
            ECLIC_SetVector(IRQn, (rv_csr_t) handler);
333
        }
334
        /* enable interrupt */
335
        ECLIC_EnableIRQ(IRQn);
336
        return 0;
337
338
    /** @} */ /* End of Doxygen Group NMSIS_Core_ExceptionAndNMI */
339
340
341
    * \brief early init function before main
342
    * \details
343
    * This function is executed right before main function.
    * For RISC-V gnu toolchain, _init function might not be called
    * by __libc_init_array function, so we defined a new function
346
    * to do initialization
347
    */
348
   void _premain_init(void)
349
350
351
        /* TODO: Add your own initialization code here, called before main */
        /* __ICACHE_PRESENT and __DCACHE_PRESENT are defined in <Device>.h */
352
    #if defined(__ICACHE_PRESENT) && __ICACHE_PRESENT == 1
353
        EnableICache();
354
    #endif
355
    #if defined(__DCACHE_PRESENT) && __DCACHE_PRESENT == 1
356
        EnableDCache();
    #endif
        // TODO: Add code to set the system clock frequency value SystemCoreClock
359
360
        // TODO: Add code to initialize necessary gpio and basic uart for debug print
361
362
        /* Initialize exception default handlers */
```

```
Exception_Init();
364
        /* ECLIC initialization, mainly MTH and NLBIT settings */
365
       ECLIC_Init();
366
367
    * \brief finish function after main
370
    * \param [in] status status code return from main
371
     * \details
372
     * This function is executed right after main function.
373
     * For RISC-V gnu toolchain, _fini function might not be called
374
     * by __libc_fini_array function, so we defined a new function
     * to do initialization
377
   void _postmain_fini(int status)
378
379
        /* TODO: Add your own finishing code here, called after main */
380
381
382
383
    * \brief _init function called in __libc_init_array()
384
    * \details
385
    * This `__libc_init_array()` function is called during startup code,
386
    * user need to implement this function, otherwise when link it will
387
    * error init.c:(.text.__libc_init_array+0x26): undefined reference to `_init'
    * Please use \ref _premain_init function now
390
391
   void _init (void)
392
393
        /* Don't put any code here, please use _premain_init now */
394
395
396
397
    * \brief _fini function called in __libc_fini_array()
398
    * \details
399
    * This `__libc_fini_array()` function is called when exit main.
400
    * user need to implement this function, otherwise when link it will
    * error fini.c:(.text.__libc_fini_array+0x28): undefined reference to `_fini'
403
     * Please use \ref _postmain_fini function now
404
405
   void _fini(void)
406
407
        /* Don't put any code here, please use _postmain_fini now */
409
410
    /** @} */ /* End of Doxygen Group NMSIS_Core_SystemAndClock */
411
```

system_Device.h Template File

Here we provided system_Device.h template file as below:

```
/*

* Copyright (c) 2009-2018 Arm Limited. All rights reserved.
```

```
* Copyright (c) 2019 Nuclei Limited. All rights reserved.
4
    * SPDX-License-Identifier: Apache-2.0
5
6
    * Licensed under the Apache License, Version 2.0 (the License); you may
    * not use this file except in compliance with the License.
8
    * You may obtain a copy of the License at
10
    * www.apache.org/licenses/LICENSE-2.0
11
12
    * Unless required by applicable law or agreed to in writing, software
13
    * distributed under the License is distributed on an AS IS BASIS, WITHOUT
    * WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.
    * See the License for the specific language governing permissions and
16
    * limitations under the License.
17
18
   19
             system_<Device>.h
NMSIS Nuclei N/NX Device Peripheral Access Layer Header File for
    * @file
20
    * @brief
21
               Device <Device>
22
    * @version V1.10
23
    * @date 30. July 2021
24
25
26
   #ifndef __SYSTEM_<Device>_H__ /* TODO: replace '<Device>' with your device name */
   #define ___SYSTEM_<Device>_H__
29
   #ifdef ___cplusplus
30
   extern "C" {
31
   #endif
32
33
   #include <stdint.h>
35
   extern uint32_t SystemCoreClock;
                                      /*! < System Clock Frequency (Core Clock) */
36
37
   /** \brief Exception frame structure store in stack */
38
   typedef struct EXC_Frame {
39
       unsigned long ra;
                                       /* ra: x1, return address for jump */
40
41
       unsigned long tp;
                                       /* tp: x4, thread pointer */
42
       unsigned long t0;
                                       /* t0: x5, temporary register 0 */
                                       /* t1: x6, temporary register 1 */
43
       unsigned long t1;
      unsigned long t2;
                                       /* t2: x7, temporary register 2 */
44
      unsigned long a0;
                                       /* a0: x10, return value or function argument 0
45
                                       /* al: x11, return value or function argument 1.
       unsigned long al;
                                       /* a2: x12, function argument 2 */
       unsigned long a2;
47
                                       /* a3: x13, function argument 3 */
       unsigned long a3;
48
       unsigned long a4;
                                       /* a4: x14, function argument 4 */
49
                                       /* a5: x15, function argument 5 */
       unsigned long a5;
50
                                       /* mcause: machine cause csr register */
51
       unsigned long mcause;
       unsigned long mepc;
                                       /* mepc: machine exception program counter csr.
52
   →register */
      unsigned long msubm;
                                      /* msubm: machine sub-mode csr register, nuclei
53
   →customized */
   #ifndef riscv 32e
54
      unsigned long a6;
                                       /* a6: x16, function argument 6 */
```

```
/* a7: x17, function argument 7 */
       unsigned long a7;
56
       unsigned long t3;
                                          /* t3: x28, temporary register 3 */
57
       unsigned long t4;
                                          /* t4: x29, temporary register 4 */
58
       unsigned long t5;
                                          /* t5: x30, temporary register 5 */
59
       unsigned long t6;
                                          /* t6: x31, temporary register 6 */
60
   #endif
61
   } EXC_Frame_Type;
62
63
64
    * \brief Setup the microcontroller system.
65
    * \details
66
    * Initialize the System and update the SystemCoreClock variable.
   extern void SystemInit(void);
69
70
71
    * \brief Update SystemCoreClock variable.
72
    * \details
73
       Updates the SystemCoreClock with current core Clock retrieved from cpu registers.
74
75
   extern void SystemCoreClockUpdate(void);
76
77
78
   * \brief Dump Exception Frame
79
81
   void Exception_DumpFrame(unsigned long sp);
82
83
    * \brief Register an exception handler for exception code EXCn
84
85
   extern void Exception_Register_EXC(uint32_t EXCn, unsigned long exc_handler);
86
87
88
    * \brief Get current exception handler for exception code EXCn
89
90
   extern unsigned long Exception_Get_EXC(uint32_t EXCn);
91
92
93
   * \brief Initialize eclic config
95
   extern void ECLIC Init(void);
96
97
98
    * \brief initialize a specific IRQ and register the handler
99
100
    * \details
    * This function set vector mode, trigger mode and polarity, interrupt level and
101
    ⇔priority,
    * assign handler for specific IRQn.
102
    * \param [in] IRQn NMI interrupt handler address
103
                                \ref ECLIC_NON_VECTOR_INTERRUPT means non-vector mode,_
    * \param [in] shv
104
    →and \ref ECLIC_VECTOR_INTERRUPT is vector mode
    * \param [in] trig_mode see \ref ECLIC_TRIGGER_Type
   * \param [in] lvl
                               interupt level
106
    * \param [in] priority interrupt priority
107
    * \param [in] handler
                               interrupt handler
108
                    -1 means invalid input parameter. 0 means successful.
109
   * return
    * \remarks
```

Device Header File <device.h>

The Device Header File <device.h> (page 47) contains the following sections that are device specific:

- *Interrupt Number Definition* (page 47) provides interrupt numbers (IRQn) for all exceptions and interrupts of the device.
- Configuration of the Processor and Core Peripherals (page 48) reflect the features of the device.
- Device Peripheral Access Layer (page 50) provides definitions for the Peripheral Access (page 349) to all device peripherals. It contains all data structures and the address mapping for device-specific peripherals.
- Access Functions for Peripherals (optional) provide additional helper functions for peripherals that are useful for programming of these peripherals. Access Functions may be provided as inline functions or can be extern references to a device-specific library provided by the silicon vendor.

NMSIS Core API (page 57) describes the standard features and functions of the Device Header File <device.h> (page 47) in detail.

Interrupt Number Definition

Device Header File <device.h> (page 47) contains the enumeration IRQn_Type that defines all exceptions and interrupts of the

- Negative IRQn values represent processor core exceptions (internal interrupts).
- Positive IRQn values represent device-specific exceptions (external interrupts). The first device-specific interrupt has the IRQn value 0. The IRQn values needs extension to reflect the device-specific interrupt vector table in the *Startup File startup_<device>*. S (page 14).

The following example shows the extension of the interrupt vector table for the GD32VF103 device family.

```
typedef enum IROn {
       /***** N200 Processor Exceptions Numbers
2
      Reserved0_IRQn
                                        0,
                                              /*!< Internal reserved
         */
      Reserved1_IRQn
                                        1,
                                               /*!< Internal reserved
         */
                                        2,
                                                /*!< Internal reserved
      Reserved2_IRQn
         */
      SysTimerSW_IRQn
                                        3,
                                                /*!< System Timer SW interrupt
6
      Reserved3_IRQn
                                                /*!< Internal reserved
                                                                             (continues on next page)
```

(continued from previous page) 5, /*!< Reserved4_IRQn Internal reserved /*!< Internal reserved Reserved5_IRQn 7, SysTimer_IRQn /*!< System Timer Interrupt 10 Reserved6_IRQn /*!< Internal reserved 11 */ \hookrightarrow 9, /*!< Internal reserved Reserved7_IRQn 12 */ 10, /*!< Internal reserved Reserved8_IRQn 13 */ Reserved9_IRQn 11, /*!< Internal reserved */ Reserved10_IRQn 12, /*!< Internal reserved 15 */ Reserved11_IRQn 13, /*!< Internal reserved 16 */ Reserved12_IRQn 14, /*!< Internal reserved 17 Reserved13_IRQn 15, /*!< Internal reserved 18 */ Reserved14_IRQn = 16, /*!< Internal reserved 19 */ HardFault_IRQn = 17, /*!< Hard Fault, storage access error Reserved15_IRQn = 18, /*!< Internal reserved 21 22 /***** GD32VF103 Specific Interrupt Numbers 23 /*!< window watchDog timer interrupt</pre> WWDGT_IRQn = 19, */ LVD_IRQn 20, /*! < LVD through EXTI line detect. 25 */ → interrupt. /*!< tamper through EXTI line detect TAMPER_IRQn = 21,26 CAN1_EWMC_IRQn 85, /*!< CAN1 EWMC interrupt 29 */ USBFS_IRQn = 86, /*! < USBFS global interrupt 30 SOC_INT_MAX, /*!< Number of total Interrupts</pre> 31 */ } IRQn_Type; 32

Configuration of the Processor and Core Peripherals

The *Device Header File <device.h>* (page 47) configures the Nuclei N/NX Class Processors and the core peripherals with #define that are set prior to including the file *nmsis_core.h*.

The following tables list the #define along with the possible values for N200, N300, N600, NX600. If these #define are missing default values are used.

nmsis_core.h

Table 6: Macros used in nmsis_core.h

#define	Value Range	Default	Description
NUCLEI_N_REV OR NUCLEI_NX_REV	0x0100 0x0104	0x0100	 For Nuclei N class device, defineNU-CLEI_N_REV, for NX class device, defineNUCLEI_NX_REV. Core revision number ([15:8] revision number, [7:0] patch number), 0x0100 -> 1.0, 0x0104 -> 1.4
SYSTIMER_PRESENT	0 1	1	Define whether Priviate System Timer is present or not. This SysTimer is a Memory Mapped Unit.
SYSTIMER_BASEADDR	•	0x02000000	Base address of the System Timer Unit.
ECLIC_PRESENT	0 1	1	Define whether Enhanced Core Local Interrupt Controller (ECLIC) Unit is present or not
ECLIC_BASEADDR	•	0x0C000000	Base address of the ECLIC unit.
ECLIC_INTCTLBITS	18	1	Define the number of hardware bits are actually implemented in the clicintctl registers.
ECLIC_INTNUM	1 1024	1	Define the total interrupt number(including the internal core interrupts) of ECLIC Unit
PMP_PRESENT	01	0	Define whether Physical Memory Protection (PMP) Unit is present or not.
PMP_ENTRY_NUM	8 or 16	8	Define the numbers of PMP entries.
FPU_PRESENT	02	0	Define whether Floating Point Unit (FPU) is present or not. • 0: Not present • 1: Single precision FPU present • 2: Double precision FPU present
DSP_PRESENT	01	0	Define whether Digital Signal Processing Unit (DSP) is present or not.
ICACHE_PRESENT	01	0	Define whether I-Cache Unit is present or not.
DCACHE_PRESENT	01	0	Define whether D-Cache Unit is present or not.
Vendor_SysTickConfig	01	0	IfSYSTIMER_PRESENT is 1, then theVendor_SysTickConfig can be set to 0, otherwise it can only set to 1. If this define is set to 1, then the default SysTick_Config and SysTick_Reload function is excluded. In this case, the file Device.h must contain a vendor specific implementation of this function.

NMSIS Version and Processor Information

The following shows the defines in the *nmsis_core.h* file that may be used in the *NMSIS-Core Device Templates* (page 12) to verify a minimum version or ensure that the right Nuclei N/NX class is used.

Device Peripheral Access Layer

The Device Header File <device.h> (page 47) contains for each peripheral:

- · Register Layout Typedef
- · Base Address
- · Access Definitions

The section *Peripheral Access* (page 349) shows examples for peripheral definitions.

Device.h Template File

Here we provided Device.h template file as below:

```
* Copyright (c) 2009-2019 Arm Limited. All rights reserved.
2
    * Copyright (c) 2019 Nuclei Limited. All rights reserved.
3
    * SPDX-License-Identifier: Apache-2.0
    * Licensed under the Apache License, Version 2.0 (the License); you may
    * not use this file except in compliance with the License.
    * You may obtain a copy of the License at
10
    * www.apache.org/licenses/LICENSE-2.0
11
12
    * Unless required by applicable law or agreed to in writing, software
13
    * distributed under the License is distributed on an AS IS BASIS, WITHOUT
14
    * WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.
15
    * See the License for the specific language governing permissions and
16
    * limitations under the License.
17
   /********************************
   * @file
              <Device>.h
20
   * @brief NMSIS Nuclei N/NX Core Peripheral Access Layer Header File for
21
              Device <Device>
22
   * @version V1.10
23
   * @date 30. July 2021
24
    *******************************
25
26
   #ifndef ___<Device>_H__
                           /* TODO: replace '<Device>' with your device name */
27
   #define ___<Device>_H__
28
29
   #ifdef __cplusplus
30
   extern "C" {
31
   #endif
32
   /* TODO: replace '<Vendor>' with vendor name; add your doxygen comment
34
   /** @addtogroup <Vendor>
35
     * @ {
36
     */
37
38
39
   /* TODO: replace '<Device>' with device name; add your doxygen comment
40
   /** @addtogroup <Device>
```

(continued from previous page) * @{ 42 */ 43 44 45 /** @addtogroup Configuration_of_NMSIS 46 * @ { 47 */ 48 49 /** \brief SoC Download mode definition */ 50 /* TODO: device vendor can extend more download modes */ 51 typedef enum { 52 /*!< Flashxip download mode */
/*!< Flash download mode */</pre> DOWNLOAD_MODE_FLASHXIP = 0, DOWNLOAD_MODE_FLASH = 1, $DOWNLOAD_MODE_ILM = 2,$ /*!< ilm download mode */ 55 DOWNLOAD MODE DDR = 3, /*!< ddr download mode */ 56 DOWNLOAD MODE MAX, 57 } DownloadMode_Type; 58 60 Interrupt Number Definition 61 ======= */ 62 63 typedef enum IROn { 64 /* ======= Nuclei N/NX Specific Interrupt Numbers ... 65 66 67 /* TODO: use this N/NX interrupt numbers if your device is a Nuclei N/NX device */ 0, Reserved0_IRQn = /*!< Internal reserved */ 68 /*!< Internal reserved */ Reserved1_IRQn 1, 69 Reserved2 IROn 2, /*!< Internal reserved */ 70 = 3, /*!< System Timer SW interrupt */ SysTimerSW_IRQn 71 = 4, /*!< Internal reserved */ 72 Reserved3_IRQn Reserved4_IRQn = 5, /*!< Internal reserved */ 73 74 Reserved5_IRQn = 6, /*!< Internal reserved */ 75 SysTimer_IRQn = 7, /*! < System Timer Interrupt */ /*!< Internal reserved */ Reserved6 IROn = 8, 76 = 9, Reserved7 IROn /*!< Internal reserved */ 77 = 10, /*!< Internal reserved */ Reserved8 IROn 78 = 11, /*!< Internal reserved */ Reserved9_IRQn 79 = 12, /*!< Internal reserved */ 80 Reserved10_IRQn /*!< Internal reserved */ Reserved11_IRQn = 13, 81 /*!< Internal reserved */ Reserved12_IRQn = 14, 82 Reserved13 IROn 15, /*!< Internal reserved */ 83 /*!< Internal reserved */ Reserved14_IRQn = 16, 84 Reserved15_IRQn = 17, /*!< Internal reserved */ 85 Reserved16_IRQn = 18, /*!< Internal reserved */ 86 87 88 /* TODO: add here your device specific external interrupt numbers. 19~1023 is. 89 →reserved number for user. Maxmum interrupt supported could get from clicinfo.NUM_INTERRUPT. According the interrupt handlers (continues on next page) → defined in startup_Device.s

```
(continued from previous page)
         eq.: Interrupt for Timer#1 eclic_tim0_handler -> TIM0_IRQn */
91
     <DeviceInterrupt>_IRQn = 19,
                                         /*!< Device Interrupt */
92
93
     SOC_INT_MAX,
                                          /* Max SoC interrupt Number */
94
  } IRQn_Type;
   4-----
                                           Exception Code Definition
                      _____ +/
   4------
100
  typedef enum EXCn {
101
  /* ================================ Nuclei N/NX Specific Exception Code ...
102
     = 0,
     InsUnalign_EXCn
                                        /*! < Instruction address misaligned.
103
     InsAccFault_EXCn
                            1,
                                        /*!< Instruction access fault */
104
     IlleIns EXCn
                        = 2,
                                        /*!< Illegal instruction */
105
                                        /*!< Beakpoint */
     Break_EXCn
                           3,
106
                                        /*!< Load address misaligned */</pre>
     LdAddrUnalign_EXCn
                       = 4,
107
    LdFault_EXCn
                        = 5,
                                        /*!< Load access fault */
    StAddrUnalign_EXCn
                        = 6,
                                        /*!< Store or AMO address
  →misaligned */
    StAccessFault EXCn
                        = 7,
                                        /*! < Store or AMO access fault */
110
                                        /*! < Environment call from User_
                        = 8,
111
    UmodeEcall_EXCn
   →mode */
                        = 11,
                                        /*!< Environment call from Machine
    MmodeEcall_EXCn
112
   →mode */
    NMI EXCn
                        = 0xfff,
                                        /*!< NMI interrupt*/
113
  } EXCn_Type;
114
115
116
   /* =========
                                      Processor and Core Peripheral Section
                      118
   → * /
119
  /* ====== Configuration of the Nuclei N/NX Processor and Core,
   → Peripherals ======== */
  /* TODO: set the defines according your Device */
121
  /* TODO: define the correct core revision
122
        __NUCLEI_N_REV if your device is a Nuclei-N Class device
123
         __NUCLEI_NX_REV if your device is a Nuclei-NX Class device
124
125
  #define ___NUCLEI_N#_REV
                           0x0100
                                              /*! < Core Revision rXpY,
  →version X.Y, change N# to N for Nuclei N class cores, change N# to NX for Nuclei NX.
  /* TODO: define the correct core features for the <Device> */
127
                                             /*!< Set to 1 if ECLIC is_
  #define ___ECLIC_PRESENT 1
128
   ⇔present */
```

```
#define __ECLIC_BASEADDR
                                   0x0C000000UL
                                                         /*! < Set to ECLIC baseaddr of...
129
   →vour device */
   #define ___ECLIC_INTCTLBITS
                                                         /*! < Set to 1 - 8, the number
130

ightharpoonup of hardware bits are actually implemented in the clicintctl registers. */
   #define ___ECLIC_INTNUM
                                                         /*!< Set to 1 - 1024, total
                                   51
131
    →interrupt number of ECLIC Unit */
   #define ___SYSTIMER_PRESENT
                                                         /*! < Set to 1 if System Timer.
132
   ⇒is present */
   #define ___SYSTIMER_BASEADDR
                                  0x02000000UL
                                                         /*! < Set to SysTimer baseaddr...
133
   →of your device */
   #define ___FPU_PRESENT
                                                         /*!< Set to 0, 1, or 2, 0 not_
   →present, 1 single floating point unit present, 2 double floating point unit present
   #define __DSP_PRESENT
                                                         /*!< Set to 1 if DSP is...
135
   ⇔present */
   #define ___PMP_PRESENT
                                                         /*!< Set to 1 if PMP is...
136
   ⇔present */
   #define ___PMP_ENTRY_NUM
                                   16
                                                         /*! < Set to 8 or 16, the
   →number of PMP entries */
   #define ___ICACHE_PRESENT
                                                         /*!< Set to 1 if I-Cache is
138
   ⇔present */
   #define __DCACHE_PRESENT
                                                         /*! < Set to 1 if D-Cache is.
139
   ⇔present */
   #define __Vendor_SysTickConfig 0
                                                         /*! < Set to 1 if different.
140
   →SysTick Config is used */
141
   /** @} */ /* End of group Configuration_of_NMSIS */
142
143
144
   #include <nmsis_core.h>
145
   /* TODO: include your system_<Device>.h file
146
            replace '<Device>' with your device name */
147
   #include "system_<Device>.h"
                                                /*!< <Device> System */
148
149
150
   151
   #if defined (__GNUC__)
   /* anonymous unions are enabled by default */
154
    #warning Not supported compiler type
155
   #endif
156
157
158
                                                 Device Specific Peripheral Section
160
161
   /* Macros for memory access operations */
162
                                              ((volatile uint8_t *) ((uintptr_t)((p) +...
   #define _REG8P(p, i)
163
   (i))))
   #define _REG16P(p, i)
                                             ((volatile uint16_t *) ((uintptr_t)((p) +...
164
   (i))))
                                                                          (continues on next page)
```

```
#define _REG32P(p, i)
                                                   ((volatile uint32_t *) ((uintptr_t)((p) +_
165
    → (i))))
    #define _REG64P(p, i)
                                                   ((volatile uint64_t *) ((uintptr_t)((p) +_
166
    → (i))))
    #define _REG8(p, i)
                                                   (*(_REG8P(p, i)))
167
    #define _REG16(p, i)
                                                   (*(_REG16P(p, i)))
168
    #define _REG32(p, i)
                                                   (*(_REG32P(p, i)))
169
    #define _REG64(p, i)
                                                  (*(_REG64P(p, i)))
170
   #define REG8(addr)
                                                  _REG8((addr), 0)
171
   #define REG16(addr)
                                                  _REG16((addr), 0)
172
   #define REG32(addr)
                                                  _REG32((addr), 0)
173
   #define REG64 (addr)
                                                  _REG64((addr), 0)
   /* Macros for address type convert and access operations */
176
    #define ADDR16(addr)
                                                  ((uint16_t) (uintptr_t) (addr))
177
    #define ADDR32(addr)
                                                   ((uint32_t) (uintptr_t) (addr))
178
    #define ADDR64(addr)
                                                   ((uint64_t) (uintptr_t) (addr))
179
    #define ADDR8P(addr)
                                                   ((uint8_t *) (uintptr_t) (addr))
    #define ADDR16P(addr)
                                                  ((uint16_t *)(uintptr_t)(addr))
181
    #define ADDR32P (addr)
                                                  ((uint32_t *)(uintptr_t)(addr))
182
    #define ADDR64P(addr)
                                                   ((uint64_t *) (uintptr_t) (addr))
183
184
   /* Macros for Bit Operations */
185
   #if __riscv_xlen == 32
186
   #define BITMASK_MAX
                                                  0xFFFFFFFFUL
   #define BITOFS_MAX
                                                  31
189
   #define BITMASK MAX
                                                  0xFFFFFFFFFFFFFFULL
190
   #define BITOFS MAX
191
   #endif
192
193
    // BIT/BITS only support bit mask for __riscv_xlen
    // For RISC-V 32 bit, it support mask 32 bit wide
195
    // For RISC-V 64 bit, it support mask 64 bit wide
196
    #define BIT(ofs)
                                                  (0x1UL << (ofs))
197
    #define BITS(start, end)
                                                  ((BITMASK_MAX) << (start) & (BITMASK_MAX)
198
    \rightarrow >> (BITOFS\_MAX - (end)))
    #define GET_BIT(regval, bitofs)
                                                  (((regval) >> (bitofs)) & 0x1)
   #define SET_BIT(regval, bitofs)
                                                  ((regval) |= BIT(bitofs))
   #define CLR_BIT(regval, bitofs)
                                                  ((regval) &= (~BIT(bitofs)))
201
   #define FLIP BIT(regval, bitofs)
                                                  ((regval) ^= BIT(bitofs))
202
   #define WRITE_BIT(regval, bitofs, val)
                                                  CLR_BIT(regval, bitofs); ((regval) |=
203
    → ((val) << bitofs) & BIT(bitofs))
                                                  (!!((regval) & (0x1UL<<(bitofs))))
    #define CHECK_BIT(regval, bitofs)
204
    #define GET_BITS(regval, start, end)
                                                  (((regval) & BITS((start), (end))) >>...

    (start))
    #define SET_BITS(regval, start, end)
                                                  ((regval) |= BITS((start), (end)))
206
    #define CLR_BITS(regval, start, end)
                                                  ((regval) &= (~BITS((start), (end))))
207
    #define FLIP_BITS(regval, start, end)
                                                  ((regval) ^= BITS((start), (end)))
208
   #define WRITE_BITS(regval, start, end, val) CLR_BITS(regval, start, end); ((regval)_
    \Rightarrow |= ((val) << start) & BITS((start), (end)))
   #define CHECK_BITS_ALL(regval, start, end) (!((~(regval)) & BITS((start), (end))))
   #define CHECK_BITS_ANY(reqval, start, end) ((reqval) & BITS((start), (end)))
211
212
   #define BITMASK_SET(regval, mask)
                                                  ((regval) |= (mask))
213
                                                  ((regval) &= (~(mask)))
   #define BITMASK_CLR(regval, mask)
214
   #define BITMASK_FLIP(reqval, mask)
                                                  ((regval) ^= (mask))
```

```
#define BITMASK_CHECK_ALL(regval, mask) (!((~(regval)) & (mask)))
#define BITMASK_CHECK_ANY(regval, mask) ((regval) & (mask))
216
217
218
   /** @addtogroup Device_Peripheral_peripherals
219
     * @ {
220
     */
221
222
   /* TODO: add here your device specific peripheral access structure typedefs
223
            following is an example for UART */
224
225
   /* ========
                                                        UART
227
228
229
230
     * @brief UART (UART)
231
232
   typedef struct {
                                               /*!< (@ 0x40000000) UART Structure
233
     ___IOM uint32_t
                     TXFIFO;
                                               /*!< (@ 0x00000000) UART TX FIFO
     ___IM uint32_t
                    RXFIFO;
                                               /*!< (@ 0x00000004) UART RX FIFO
235
     __IOM uint32_t TXCTRL;
                                              /*!< (@ 0x00000008) UART TX FIFO control _
236
                                               /*!< (@ 0x0000000C) UART RX FIFO control ...
     __OM uint32_t RXCTRL;
237
                                               /*!< (@ 0x00000010) UART Interrupt Enable.
      __IM uint32_t
                     IE;
238
    →flag
      __IM uint32_t
                     IP;
                                              /*!< (@ 0x00000018) TART Interrupt
239
    → Pending flag
                      */
    /*!< (@ 0x00000018) UART Baudrate Divider.
240
                     DTV:
           */
   } <DeviceAbbreviation>_UART_TypeDef;
242
   /*@}*/ /* end of group <Device> Peripherals */
243
244
245
   246
    ______ */
   #if defined (__GNUC__)
247
    /* anonymous unions are enabled by default */
248
249
     #warning Not supported compiler type
250
   #endif
251
252
                                               Device Specific Peripheral Address Map
255
                                                                           (continues on next page)
```

```
/*_
256
   → */
257
258
   /* TODO: add here your device peripherals base addresses
259
           following is an example for timer */
260
   /** @addtogroup Device_Peripheral_peripheralAddr
261
     * @{
262
     */
263
264
   /* Peripheral and SRAM base address */
   #define <DeviceAbbreviation>_FLASH_BASE
                                                 (0x00000000UL)
   → /*!< (FLASH ) Base Address */
   #define <DeviceAbbreviation> SRAM BASE
                                                 (0x20000000UL)
267
         /*!< (SRAM ) Base Address */
   #define <DeviceAbbreviation>_PERIPH_BASE
                                                 (0x40000000UL)
268
   → /*!< (Peripheral) Base Address */
   /* Peripheral memory map */
270
   #define <DeviceAbbreviation>UARTO_BASE
                                                (<DeviceAbbreviation>_PERIPH_BASE)
271
   → /*!< (UART 0 ) Base Address */
   #define <DeviceAbbreviation>I2C_BASE
                                                (<DeviceAbbreviation>_PERIPH_BASE +_
272
   \rightarrow 0x0800) /*!< (I2C ) Base Address */
   #define <DeviceAbbreviation>GPIO_BASE
                                                 (<DeviceAbbreviation>_PERIPH_BASE +
   \hookrightarrow 0x1000) /*!< (GPIO ) Base Address */
274
   /** @} */ /* End of group Device_Peripheral_peripheralAddr */
275
276
277
278
   /* ========
                                                     Peripheral declaration
279
   \hookrightarrow
280
   g------
282
   /* TODO: add here your device peripherals pointer definitions
283
           following is an example for uart0 */
284
   /** @addtogroup Device_Peripheral_declaration
285
     * @{
286
   #define <DeviceAbbreviation>_UARTO
                                                 ((<DeviceAbbreviation>_TMR_TypeDef *)
288
   → < DeviceAbbreviation > UARTO_BASE)
289
290
   /** @} */ /* End of group <Device> */
291
292
   /** @} */ /* End of group <Vendor> */
294
   #ifdef ___cplusplus
295
296
   #endif
297
```

#endif /* ___<Device>_H__ */

2.4 Register Mapping

The table below associates some common register names used in NMSIS to the register names used in Nuclei ISA Spec¹².

Table 7: Register names used in NMSIS related with the register names in ISA

NMSIS Register Name	N200, N300, N600, NX600	Register Description				
Enhanced Core Local Interrupt Controller(ECLIC)						
ECLIC->CFG	cliccfg	ECLIC Global Configuration Register				
ECLIC->INFO	clicinfo	ECLIC Global Information Register				
ECLIC->MTH	mth	ECLIC Global Machine Mode Threshold Reg-				
		ister				
ECLIC->CTRL[i].INTIP	clicintip[i]	ECLIC Interrupt Pending Register				
ECLIC->CTRL[i].INTIE	clicintie[i]	ECLIC Interrupt Enable Register				
ECLIC-	clicintattr[i]	ECLIC Interrupt Attribute Register				
>CTRL[i].INTATTR						
ECLIC-	clicintctl[i]	ECLIC Interrupt Input Control Register				
>CTRL[i].INTCTRL						
System Timer Unit(SysTimer)						
SysTimer->MTIMER	mtime_hi<<32 + mtime_lo	System Timer current value 64bits Register				
SysTimer->MTIMERCMP	mtimecmp_hi<<32 +	System Timer compare value 64bits Register				
	mtimecmp_lo					
SysTimer->MSTOP	mstop	System Timer Stop Register				
SysTimer->MSIP	msip	System Timer SW interrupt Register				

2.5 NMSIS Core API

If you want to access doxygen generated NMSIS Core API, please click NMSIS Core Doxygen API Documentation.

2.5.1 Version Control

group NMSIS Core VersionControl

Version #define symbols for NMSIS release specific C/C++ source code.

We followed the semantic versioning 2.0.0¹³ to control NMSIS version. The version format is **MA-JOR.MINOR.PATCH**, increment the:

- 1. MAJOR version when you make incompatible API changes,
- 2. MINOR version when you add functionality in a backwards compatible manner, and
- 3. PATCH version when you make backwards compatible bug fixes.

¹² https://doc.nucleisys.com/nuclei_spec/

¹³ https://semver.org/

The header file nmsis_version.h is included by each core header so that these definitions are available.

Example Usage for NMSIS Version Check:

```
#if defined(__NMSIS_VERSION) && (__NMSIS_VERSION >= 0x00010105)
    #warning "Yes, we have NMSIS 1.1.5 or later"
#else
    #error "We need NMSIS 1.1.5 or later!"
#endif
```

Unnamed Group

```
__NUCLEI_N_REV (0x0104)
```

Nuclei N class core revision number.

Reversion number format: [15:8] revision number, [7:0] patch number

Attention This define is exclusive with __NUCLEI_NX_REV (page 58)

```
__NUCLEI_NX_REV (0x0100)
```

Nuclei NX class core revision number.

Reversion number format: [15:8] revision number, [7:0] patch number

Attention This define is exclusive with __NUCLEI_N_REV (page 58)

Defines

NMSIS VERSION MAJOR (1U)

Represent the NMSIS major version.

The NMSIS major version can be used to differentiate between NMSIS major releases.

__NMSIS_VERSION_MINOR (0U)

Represent the NMSIS minor version.

The NMSIS minor version can be used to query a NMSIS release update including new features.

NMSIS VERSION PATCH (1U)

Represent the NMSIS patch version.

The NMSIS patch version can be used to show bug fixes in this package.

__NMSIS_VERSION ((__NMSIS_VERSION_MAJOR (page 58) << 16U) | (__NMSIS_VERSION_MINOR << 8) | __NMSIS_VERSION_MINOR << 8) | __NMS

NMSIS Version format: MAJOR.MINOR.PATCH

- MAJOR: __NMSIS_VERSION_MAJOR (page 58), stored in bits [31:16] of __NM-SIS_VERSION (page 58)
- MINOR: __NMSIS_VERSION_MINOR (page 58), stored in bits [15:8] of __NMSIS_VERSION (page 58)
- PATCH: __NMSIS_VERSION_PATCH (page 58), stored in bits [7:0] of __NMSIS_VERSION (page 58)

2.5.2 Compiler Control

group NMSIS Core CompilerControl

Compiler agnostic #define symbols for generic c/c++ source code.

The NMSIS-Core provides the header file **nmsis_compiler.h** with consistent #define symbols for generate C or C++ source files that should be compiler agnostic. Each NMSIS compliant compiler should support the functionality described in this section.

The header file **nmsis_compiler.h** is also included by each Device Header File <device.h> so that these definitions are available.

Defines

```
\underline{\hspace{0.2cm}} has \underline{\hspace{0.2cm}} builtin (x) (0)
 ASM asm
     Pass information from the compiler to the assembler.
 INLINE inline
     Recommend that function should be inlined by the compiler.
 STATIC INLINE static inline
     Define a static function that may be inlined by the compiler.
  STATIC FORCEINLINE attribute ((always inline)) static inline
     Define a static function that should be always inlined by the compiler.
NO_RETURN __attribute__((__noreturn__))
     Inform the compiler that a function does not return.
 __USED __attribute__((used))
     Inform that a variable shall be retained in executable image.
  _WEAK __attribute__((weak))
     restrict pointer qualifier to enable additional optimizations.
 __VECTOR_SIZE (x) __attribute__((vector_size(x)))
     specified the vector size of the variable, measured in bytes
___PACKED __attribute__((packed, aligned(1)))
     Request smallest possible alignment.
PACKED STRUCT struct attribute ((packed, aligned(1)))
     Request smallest possible alignment for a structure.
 _PACKED_UNION union <u>__attribute__((packed, aligned(1)))</u>
     Request smallest possible alignment for a union.
__UNALIGNED_UINT16_WRITE (addr, val) (void)((((struct T_UINT16_WRITE (page 60) *)(void)
                                    *)(addr))->v) = (val))
     Pointer for unaligned write of a uint16_t variable.
UNALIGNED UINT16 READ (addr) (((const struct T UINT16 READ (page 60) *)(const void
                                   *)(addr))->v)
     Pointer for unaligned read of a uint16_t variable.
  _UNALIGNED_UINT32_WRITE(addr, val) (void)((((struct T_UINT32_WRITE (page 60) *)(void
                                    *)(addr))->v) = (val))
     Pointer for unaligned write of a uint32_t variable.
```

2.5. NMSIS Core API 59

```
UNALIGNED UINT32 READ (addr) (((const struct T UINT32 READ (page 60) *)(const void
                                 *)(addr))->v)
     Pointer for unaligned read of a uint32 t variable.
 ALIGNED (x) attribute ((aligned(x)))
     Minimum x bytes alignment for a variable.
RESTRICT __restrict
     restrict pointer qualifier to enable additional optimizations.
 __COMPILER_BARRIER() __ASM (page 59) volatile("":::"memory")
     Barrier to prevent compiler from reordering instructions.
___USUALLY (exp) __builtin_expect((exp), 1)
     provide the compiler with branch prediction information, the branch is usually true
RARELY (exp) builtin expect((exp), 0)
     provide the compiler with branch prediction information, the branch is rarely true
___INTERRUPT __attribute__((interrupt))
     Use this attribute to indicate that the specified function is an interrupt handler.
Variables
__PACKED_STRUCT T_UINT16_WRITE
     Packed struct for unaligned uint16 t write access.
PACKED STRUCT T UINT16 READ
     Packed struct for unaligned uint16_t read access.
__PACKED_STRUCT T_UINT32_WRITE
     Packed struct for unaligned uint32_t write access.
PACKED STRUCT T UINT32 READ
     Packed struct for unaligned uint32_t read access.
```

2.5.3 Core CSR Register Access

Click Nuclei Core CSR¹⁴ to learn about Core CSR in Nuclei ISA Spec.

group NMSIS_Core_CSR_Register_Access

Functions to access the Core CSR Registers.

The following functions or macros provide access to Core CSR registers.

- Core CSR Encodings (page 70)
- Core CSR Registers (page 63)

Defines

```
___RV_CSR_SWAP (csr, val)
```

CSR operation Macro for csrrw instruction.

Read the content of csr register to __v, then write content of val into csr register, then return __v

Return the CSR register value before written

¹⁴ https://doc.nucleisys.com/nuclei_spec/isa/core_csr.html

Parameters

- csr: CSR macro definition defined in *Core CSR Registers* (page 63), eg. *CSR_MSTATUS* (page 64)
- val: value to store into the CSR register

RV CSR READ (csr)

CSR operation Macro for csrr instruction.

Read the content of csr register to _v and return it

Return the CSR register value

Parameters

• csr: CSR macro definition defined in *Core CSR Registers* (page 63), eg. *CSR_MSTATUS* (page 64)

___RV_CSR_WRITE (csr, val)

CSR operation Macro for csrw instruction.

Write the content of val to csr register

Parameters

- csr: CSR macro definition defined in *Core CSR Registers* (page 63), eg. *CSR_MSTATUS* (page 64)
- val: value to store into the CSR register

RV CSR READ SET (csr, val)

CSR operation Macro for csrrs instruction.

Read the content of csr register to __v, then set csr register to be __v | val, then return __v

Return the CSR register value before written

Parameters

- csr: CSR macro definition defined in *Core CSR Registers* (page 63), eg. *CSR_MSTATUS* (page 64)
- val: Mask value to be used wih csrrs instruction

___RV_CSR_SET (csr, val)

CSR operation Macro for csrs instruction.

Set csr register to be csr_content | val

Parameters

- csr: CSR macro definition defined in *Core CSR Registers* (page 63), eg. *CSR_MSTATUS* (page 64)
- val: Mask value to be used wih csrs instruction

RV_CSR_READ_CLEAR (csr, val)

CSR operation Macro for csrrc instruction.

Read the content of csr register to __v, then set csr register to be __v & ~val, then return __v

Return the CSR register value before written

Parameters

• csr: CSR macro definition defined in *Core CSR Registers* (page 63), eg. *CSR_MSTATUS* (page 64)

2.5. NMSIS Core API 61

• val: Mask value to be used wih csrrc instruction

RV CSR CLEAR (csr, val)

CSR operation Macro for csrc instruction.

Set csr register to be csr_content & ~val

Parameters

- csr: CSR macro definition defined in *Core CSR Registers* (page 63), eg. *CSR_MSTATUS* (page 64)
- val: Mask value to be used wih csrc instruction

Functions

__STATIC_FORCEINLINE void __enable_irq(void)

Enable IRQ Interrupts.

Enables IRQ interrupts by setting the MIE-bit in the MSTATUS Register.

Remark Can only be executed in Privileged modes.

__STATIC_FORCEINLINE void __disable_irq(void)

Disable IRQ Interrupts.

Disables IRQ interrupts by clearing the MIE-bit in the MSTATUS Register.

Remark Can only be executed in Privileged modes.

__STATIC_FORCEINLINE uint64_t __get_rv_cycle(void)

Read whole 64 bits value of mcycle counter.

This function will read the whole 64 bits of MCYCLE register

Return The whole 64 bits value of MCYCLE

Remark It will work for both RV32 and RV64 to get full 64bits value of MCYCLE

__STATIC_FORCEINLINE uint64_t __get_rv_instret(void)

Read whole 64 bits value of machine instruction-retired counter.

This function will read the whole 64 bits of MINSTRET register

Return The whole 64 bits value of MINSTRET

Remark It will work for both RV32 and RV64 to get full 64bits value of MINSTRET

__STATIC_FORCEINLINE uint64_t __get_rv_time(void)

Read whole 64 bits value of real-time clock.

This function will read the whole 64 bits of TIME register

Return The whole 64 bits value of TIME CSR

Remark It will work for both RV32 and RV64 to get full 64bits value of TIME

Attention only available when user mode available

2.5.4 Core CSR Encoding

Click Nuclei Core CSR¹⁵ to learn about Core CSR in Nuclei ISA Spec.

¹⁵ https://doc.nucleisys.com/nuclei_spec/isa/core_csr.html

Core CSR Register Definitions

group NMSIS_Core_CSR_Registers

NMSIS Core CSR Register Definitions.

The following macros are used for CSR Register Defintions.

Defines

 $\mathtt{CSR_USTATUS}\ 0x0$

 ${\tt CSR_FFLAGS}~0x1$

 $\textbf{CSR_FRM}~0x2$

 ${\tt CSR_FCSR}~0x3$

 $\mathtt{CSR_CYCLE}\ 0xc00$

 ${\tt CSR_TIME}~0xc01$

 ${\tt CSR_INSTRET}~0xc02$

CSR HPMCOUNTER3 0xc03

CSR_HPMCOUNTER4 0xc04

CSR_HPMCOUNTER5 0xc05

CSR_HPMCOUNTER6 0xc06

 $\textbf{CSR_HPMCOUNTER7} \ 0xc07$

 ${\tt CSR_HPMCOUNTER8}~0xc08$

 $\textbf{CSR_HPMCOUNTER9}~0xc09$

CSR_HPMCOUNTER10 0xc0a

CSR_HPMCOUNTER11 0xc0b

CSR_HPMCOUNTER12 0xc0c

 $\textbf{CSR_HPMCOUNTER13}~0xc0d$

 $\textbf{CSR_HPMCOUNTER14}~0xc0e$

 $\textbf{CSR_HPMCOUNTER15}~0xc0f$

 $\textbf{CSR_HPMCOUNTER16}~0xc10$

CSR_HPMCOUNTER17 0xc11

 $\textbf{CSR_HPMCOUNTER18}~0xc12$

CSR_HPMCOUNTER19 0xc13

CSR_HPMCOUNTER20 0xc14

CSR_HPMCOUNTER21 0xc15
CSR_HPMCOUNTER22 0xc16

CSR_HPMCOUNTER23 0xc17

CSR_HPMCOUNTER24 0xc18

CSR_HPMCOUNTER25 0xc19

2.5. NMSIS Core API 63

CSR_HPMCOUNTER26 0xc1a

CSR_HPMCOUNTER27 0xc1b

CSR_HPMCOUNTER28 0xc1c

CSR_HPMCOUNTER29 0xc1d

CSR_HPMCOUNTER30 0xc1e

CSR_HPMCOUNTER31 0xc1f

 $CSR_SSTATUS 0x100$

 $\mathtt{CSR_SIE}\ 0x104$

CSR_STVEC 0x105

 $CSR_SSCRATCH 0x140$

 CSR_SEPC 0x141

CSR_SCAUSE 0x142

 $CSR_SBADADDR$ 0x143

 $\mathtt{CSR_SIP}\ 0x144$

 $\mathtt{CSR_SPTBR}\ 0x180$

CSR MSTATUS 0x300

 $\mathtt{CSR_MISA}\ 0x301$

CSR_MEDELEG 0x302

CSR_MIDELEG 0x303

 $\mathtt{CSR_MIE}\ 0x304$

CSR_MTVEC 0x305

CSR_MCOUNTEREN 0x306

CSR_MSCRATCH 0x340

 $\mathtt{CSR_MEPC}\ 0x341$

CSR_MCAUSE 0x342

CSR_MBADADDR 0x343

CSR_MTVAL 0x343

 $\mathtt{CSR_MIP}\ 0x344$

CSR_PMPCFG0 0x3a0

 ${\tt CSR_PMPCFG1}\ 0x3a1$

CSR_PMPCFG2 0x3a2

 $CSR_PMPCFG3$ 0x3a3

CSR_PMPADDRO 0x3b0

CSR_PMPADDR1 0x3b1

CSR_PMPADDR2 0x3b2

CSR_PMPADDR3 0x3b3

CSR PMPADDR4 0x3b4

CSR_PMPADDR5 0x3b5

CSR_PMPADDR6 0x3b6

CSR_PMPADDR7 0x3b7

CSR PMPADDR8 0x3b8

CSR PMPADDR9 0x3b9

CSR_PMPADDR10 0x3ba

CSR_PMPADDR11 0x3bb

CSR_PMPADDR12 0x3bc

CSR_PMPADDR13 0x3bd

CSR_PMPADDR14 0x3be

CSR_PMPADDR15 0x3bf

CSR_TSELECT 0x7a0

CSR_TDATA1 0x7a1

 CSR_TDATA2 0x7a2

CSR TDATA3 0x7a3

CSR_DCSR 0x7b0

CSR_DPC 0x7b1

 $\mathtt{CSR_DSCRATCH}\ 0x7b2$

 ${\tt CSR_MCYCLE}~0xb00$

CSR_MINSTRET 0xb02

CSR_MHPMCOUNTER3 0xb03

CSR_MHPMCOUNTER4 0xb04

CSR_MHPMCOUNTER5 0xb05

CSR_MHPMCOUNTER6 0xb06

CSR_MHPMCOUNTER7 0xb07

CSR_MHPMCOUNTER8 0xb08

CSR_MHPMCOUNTER9 0xb09

CSR_MHPMCOUNTER10 0xb0a

CSR_MHPMCOUNTER11 0xb0b

 $\textbf{CSR_MHPMCOUNTER12} \ 0xb0c$

 $\textbf{CSR_MHPMCOUNTER13} \ 0xb0d$

 $\textbf{CSR_MHPMCOUNTER14} \ 0xb0e$

CSR_MHPMCOUNTER15 0xb0f

CSR MHPMCOUNTER16 0xb10

CSR_MHPMCOUNTER17 0xb11

2.5. NMSIS Core API 65

- CSR MHPMCOUNTER18 0xb12
- CSR_MHPMCOUNTER19 0xb13
- CSR_MHPMCOUNTER20 0xb14
- CSR_MHPMCOUNTER21 0xb15
- CSR MHPMCOUNTER22 0xb16
- CSR MHPMCOUNTER23 0xb17
- CSR_MHPMCOUNTER24 0xb18
- CSR_MHPMCOUNTER25 0xb19
- CSR_MHPMCOUNTER26 0xb1a
- CSR_MHPMCOUNTER27 0xb1b
- CSR_MHPMCOUNTER28 0xb1c
- CSR_MHPMCOUNTER29 0xb1d
- CSR_MHPMCOUNTER30 0xb1e
- $\textbf{CSR_MHPMCOUNTER31}~0xb1f$
- CSR_MUCOUNTEREN 0x320
- CSR MSCOUNTEREN 0x321
- CSR_MHPMEVENT3 0x323
- CSR_MHPMEVENT4 0x324
- $CSR_MHPMEVENT5$ 0x325
- CSR_MHPMEVENT6 0x326
- CSR_MHPMEVENT7 0x327
- CSR_MHPMEVENT8 0x328
- CSR_MHPMEVENT9 0x329
- CSR MHPMEVENT10 0x32a
- CSR MHPMEVENT11 0x32b
- ${\tt CSR_MHPMEVENT12}~0x32c$
- CSR_MHPMEVENT13 0x32d
- CSR_MHPMEVENT14 0x32e
- CSR_MHPMEVENT15 0x32f
- CSR_MHPMEVENT16 0x330
- $CSR_MHPMEVENT17$ 0x331
- CSR_MHPMEVENT18 0x332
- CSR_MHPMEVENT19 0x333
- CSR_MHPMEVENT20 0x334
- $CSR_MHPMEVENT21$ 0x335
- CSR_MHPMEVENT22 0x336

CSR MHPMEVENT23 0x337

CSR_MHPMEVENT24 0x338

 $CSR_MHPMEVENT25$ 0x339

CSR MHPMEVENT26 0x33a

CSR MHPMEVENT27 0x33b

CSR MHPMEVENT28 0x33c

CSR_MHPMEVENT29 0x33d

CSR_MHPMEVENT30 0x33e

CSR_MHPMEVENT31 0x33f

CSR_MVENDORID 0xf11

CSR_MARCHID 0xf12

CSR_MIMPID 0xf13

CSR_MHARTID 0xf14

 $\mathtt{CSR_CYCLEH}\ 0xc80$

CSR TIMEH 0xc81

CSR INSTRETH 0xc82

CSR HPMCOUNTER3H 0xc83

CSR_HPMCOUNTER4H 0xc84

CSR_HPMCOUNTER5H 0xc85

CSR_HPMCOUNTER6H 0xc86

CSR_HPMCOUNTER7H 0xc87

 ${\tt CSR_HPMCOUNTER8H}~0xc88$

 $\mathbf{CSR_HPMCOUNTER9}\mathbf{H}\ 0\mathbf{xc}89$

 $\textbf{CSR_HPMCOUNTER10H}~0xc8a$

CSR_HPMCOUNTER11H 0xc8b

 $\textbf{CSR_HPMCOUNTER12}\textbf{H} \ 0xc8c$

 $\textbf{CSR_HPMCOUNTER13H}~0xc8d$

 $\textbf{CSR_HPMCOUNTER14} H \ 0xc8e$

 $\textbf{CSR_HPMCOUNTER15H}~0xc8f$

 $\mathtt{CSR_HPMCOUNTER16H}\ 0xc90$

 $\textbf{CSR_HPMCOUNTER17}\textbf{H} \ 0\textbf{x}\textbf{c}91$

CSR_HPMCOUNTER18H 0xc92

CSR_HPMCOUNTER19H 0xc93

CSR_HPMCOUNTER20H 0xc94

CSR_HPMCOUNTER21H 0xc95

CSR_HPMCOUNTER22H 0xc96

- CSR HPMCOUNTER23H 0xc97
- CSR_HPMCOUNTER24H 0xc98
- CSR_HPMCOUNTER25H 0xc99
- CSR_HPMCOUNTER26H 0xc9a
- CSR HPMCOUNTER27H 0xc9b
- CSR HPMCOUNTER28H 0xc9c
- CSR_HPMCOUNTER29H 0xc9d
- CSR_HPMCOUNTER30H 0xc9e
- CSR HPMCOUNTER31H 0xc9f
- CSR_MCYCLEH 0xb80
- CSR_MINSTRETH 0xb82
- CSR_MHPMCOUNTER3H 0xb83
- CSR_MHPMCOUNTER4H 0xb84
- ${\tt CSR_MHPMCOUNTER5H}~0xb85$
- CSR_MHPMCOUNTER6H 0xb86
- CSR MHPMCOUNTER7H 0xb87
- CSR_MHPMCOUNTER8H 0xb88
- CSR_MHPMCOUNTER9H 0xb89
- CSR_MHPMCOUNTER10H 0xb8a
- CSR_MHPMCOUNTER11H 0xb8b
- CSR_MHPMCOUNTER12H 0xb8c
- CSR_MHPMCOUNTER13H 0xb8d
- $\textbf{CSR_MHPMCOUNTER14H}~0xb8e$
- CSR MHPMCOUNTER15H 0xb8f
- CSR MHPMCOUNTER16H 0xb90
- CSR_MHPMCOUNTER17H 0xb91
- CSR_MHPMCOUNTER18H 0xb92
- CSR_MHPMCOUNTER19H 0xb93
- CSR MHPMCOUNTER20H 0xb94
- CSR_MHPMCOUNTER21H 0xb95
- CSR_MHPMCOUNTER22H 0xb96
- CSR_MHPMCOUNTER23H 0xb97
- CSR_MHPMCOUNTER24H 0xb98
- CSR_MHPMCOUNTER25H 0xb99
- CSR MHPMCOUNTER26H 0xb9a
- CSR_MHPMCOUNTER27H 0xb9b

CSR MHPMCOUNTER28H 0xb9c

CSR_MHPMCOUNTER29H 0xb9d

CSR_MHPMCOUNTER30H 0xb9e

 ${\tt CSR_MHPMCOUNTER31H}~0xb9f$

CSR MTVT 0x307

CSR MNXTI 0x345

CSR_MINTSTATUS 0x346

CSR_MSCRATCHCSW 0x348

CSR_MSCRATCHCSWL 0x349

CSR_MCLICBASE 0x350

CSR_UCODE 0x801

CSR_MCOUNTINHIBIT 0x320

CSR_MILM_CTL 0x7C0

CSR_MDLM_CTL 0x7C1

CSR_MECC_CODE 0x7C2

CSR MNVEC 0x7C3

 $\mathtt{CSR_MSUBM}\ 0x7C4$

CSR_MDCAUSE 0x7C9

CSR_MCACHE_CTL 0x7CA

CSR_MMISC_CTL 0x7D0

CSR_MSAVESTATUS 0x7D6

CSR_MSAVEEPC1 0x7D7

CSR_MSAVECAUSE1 0x7D8

 $CSR_MSAVEEPC2 0x7D9$

CSR MSAVECAUSE2 0x7DA

CSR_MSAVEDCAUSE1 0x7DB

CSR_MSAVEDCAUSE2 0x7DC

CSR_MTLB_CTL 0x7DD

CSR_MECC_LOCK 0x7DE

 $\mathtt{CSR_PUSHMSUBM}\ 0x7EB$

CSR_MTVT2 0x7EC

CSR_JALMNXTI 0x7ED

CSR_PUSHMCAUSE 0x7EE

 $\mathtt{CSR_PUSHMEPC}\ 0x7\mathrm{EF}$

CSR_MPPICFG_INFO 0x7F0

CSR_MFIOCFG_INFO 0x7F1

CSR_SLEEPVALUE 0x811

CSR_TXEVT 0x812

 $\mathtt{CSR_WFE}\ 0x810$

 ${\tt CSR_MICFG_INFO}\ 0xFC0$

CSR_MDCFG_INFO 0xFC1

CSR_MCFG_INFO 0xFC2

CSR_MTLBCFG_INFO 0xFC3

CSR_CCM_MBEGINADDR 0x7CB

CSR_CCM_MCOMMAND 0x7CC

CSR_CCM_MDATA 0x7CD

CSR_CCM_SUEN 0x7CE

CSR_CCM_SBEGINADDR 0x5CB

CSR_CCM_SCOMMAND 0x5CC

 $\mathtt{CSR_CCM_SDATA}\ 0x5\mathrm{CD}$

 ${\tt CSR_CCM_UBEGINADDR}~0x4CB$

CSR CCM UCOMMAND 0x4CC

CSR_CCM_UDATA 0x4CD

CSR_CCM_FPIPE 0x4CF

Other Core Related Macros

group NMSIS_Core_CSR_Encoding

NMSIS Core CSR Encodings.

The following macros are used for CSR encodings

Defines

 ${\tt MSTATUS_UIE}~0x00000001$

 ${\tt MSTATUS_SIE} \ 0x000000002$

 $MSTATUS_HIE 0x000000004$

 $\texttt{MSTATUS_MIE}\ 0x00000008$

 ${\tt MSTATUS_UPIE}\ 0x00000010$

 ${\tt MSTATUS_SPIE}\ 0x00000020$

MSTATUS HPIE 0x00000040

 ${\tt MSTATUS_MPIE}\ 0x00000080$

 ${\tt MSTATUS_SPP}\ 0x00000100$

 ${\tt MSTATUS_MPP}\ 0x00001800$

 $MSTATUS_FS 0x00006000$

MSTATUS XS 0x00018000

MSTATUS_MPRV 0x00020000

 ${\tt MSTATUS_PUM}~0x00040000$

 $\textbf{MSTATUS_MXR} \ 0x00080000$

 ${\tt MSTATUS_VM}~0x1F000000$

MSTATUS32 SD 0x80000000

 ${\tt MSTATUS64_SD} \ 0x800000000000000000$

 $\texttt{MSTATUS_FS_INITIAL}\ 0x00002000$

 $\texttt{MSTATUS_FS_CLEAN}\ 0x00004000$

MSTATUS_FS_DIRTY 0x00006000

 $sstatus_uie 0x00000001$

SSTATUS_SIE 0x00000002

 ${\tt SSTATUS_UPIE}\ 0x00000010$

 $\texttt{SSTATUS_SPIE}\ 0x00000020$

 $\texttt{SSTATUS_SPP}\ 0x00000100$

SSTATUS FS 0x00006000

SSTATUS_XS 0x00018000

 $\texttt{SSTATUS_PUM}\ 0x00040000$

 $\mathbf{SSTATUS32_SD}\ 0x80000000$

SSTATUS64_SD 0x80000000000000000

 $\mathtt{CSR_MCACHE_CTL_IE}\ 0x00000001$

 ${\tt CSR_MCACHE_CTL_DE}\ 0x00010000$

DCSR_XDEBUGVER (3U<<30)

 $\texttt{DCSR_NDRESET}$ (1<<29)

DCSR_FULLRESET (1<<28)

 $DCSR_EBREAKM (1 << 15)$

 $DCSR_EBREAKH$ (1<<14)

DCSR_EBREAKS (1<<13)

 $DCSR_EBREAKU$ (1<<12)

DCSR_STOPCYCLE (1<<10)

 ${\tt DCSR_STOPTIME}\ (1{<\!<}9)$

 $DCSR_CAUSE$ (7<<6)

DCSR_DEBUGINT (1<<5)

DCSR_HALT (1<<3)

DCSR STEP (1<<2)

DCSR_PRV (3<<0)

```
DCSR CAUSE NONE 0
DCSR_CAUSE_SWBP 1
DCSR_CAUSE_HWBP 2
DCSR_CAUSE_DEBUGINT 3
DCSR_CAUSE_STEP 4
DCSR CAUSE HALT 5
MCONTROL_TYPE (xlen) (0xfULL<<((xlen)-4))
MCONTROL_DMODE (xlen) (1ULL<<((xlen)-5))
MCONTROL_MASKMAX (xlen) (0x3fULL<<((xlen)-11))
MCONTROL_SELECT (1<<19)
MCONTROL_TIMING (1<<18)
MCONTROL_ACTION (0x3f<<12)
MCONTROL_CHAIN (1<<11)
MCONTROL_MATCH (0xf<<7)
MCONTROL_M (1 << 6)
MCONTROL H (1 << 5)
MCONTROL_S (1<<4)
MCONTROL_U (1<<3)
MCONTROL_EXECUTE (1<<2)
MCONTROL_STORE (1<<1)
MCONTROL_LOAD (1<<0)
{\tt MCONTROL\_TYPE\_NONE}\ 0
MCONTROL_TYPE_MATCH 2
MCONTROL_ACTION_DEBUG_MODE 1
MCONTROL_ACTION_TRACE_START 2
MCONTROL_ACTION_TRACE_STOP 3
MCONTROL_ACTION_TRACE_EMIT 4
{\tt MCONTROL\_MATCH\_EQUAL}\ 0
MCONTROL_MATCH_NAPOT 1
MCONTROL_MATCH_GE 2
MCONTROL_MATCH_LT 3
MCONTROL_MATCH_MASK_LOW 4
MCONTROL_MATCH_MASK_HIGH 5
MIP\_SSIP (1 << IRQ\_S\_SOFT (page 75))
MIP_HSIP (1 << IRQ_H_SOFT (page 75))
```

```
MIP_MSIP (1 \ll IRQ_M\_SOFT (page 75))
MIP\_STIP (1 \ll IRQ\_S\_TIMER (page 75))
MIP\_HTIP (1 << IRQ\_H\_TIMER (page 75))
MIP\_MTIP (1 << IRQ\_M\_TIMER (page 75))
MIP SEIP (1 \ll IRO S EXT \text{ (page 75)})
MIP HEIP (1 \ll IRQ H EXT \text{ (page 75)})
MIP\_MEIP (1 << IRQ\_M\_EXT (page 75))
MIE_SSIE MIP_SSIP (page 72)
MIE_HSIE MIP_HSIP (page 72)
MIE_MSIE MIP_MSIP (page 73)
MIE_STIE MIP_STIP (page 73)
MIE_HTIE MIP_HTIP (page 73)
MIE_MTIE MIP_MTIP (page 73)
MIE_SEIE MIP_SEIP (page 73)
MIE_HEIE MIP_HEIP (page 73)
MIE MEIE MIP MEIP (page 73)
UCODE OV (0x1)
WFE_WFE (0x1)
\texttt{TXEVT}\_\texttt{TXEVT} (0x1)
SLEEPVALUE SLEEPVALUE (0x1)
MCOUNTINHIBIT_IR (1<<2)
MCOUNTINHIBIT_CY (1<<0)
MILM_CTL_ILM_BPA (((1ULL<<((__riscv_xlen)-10))-1)<<10)
MILM CTL ILM RWECC (1<<3)
MILM_CTL_ILM_ECC_EXCP_EN (1<<2)
{\tt MILM\_CTL\_ILM\_ECC\_EN} (1<<1)
{\tt MILM\_CTL\_ILM\_EN} (1<<0)
MDLM_CTL_DLM_BPA (((1ULL<<((__riscv_xlen)-10))-1)<<10)
MDLM_CTL_DLM_RWECC (1<<3)
MDLM_CTL_DLM_ECC_EXCP_EN (1<<2)
MDLM_CTL_DLM_ECC_EN (1<<1)
\mathtt{MDLM\_CTL\_DLM\_EN} (1<<0)
MSUBM_{PTYP} (0x3 << 8)
MSUBM_TYP (0x3 << 6)
MDCAUSE_MDCAUSE (0x3)
MMISC_CTL_NMI_CAUSE_FFF (1<<9)
```

```
MMISC_CTL_MISALIGN (1<<6)
MMISC_CTL_BPU (1<<3)
MCACHE\_CTL\_IC\_EN (1<<0)
MCACHE\_CTL\_IC\_SCPD\_MOD (1<<1)
MCACHE_CTL_IC_ECC_EN (1<<2)
MCACHE_CTL_IC_ECC_EXCP_EN (1<<3)
MCACHE_CTL_IC_RWTECC (1<<4)
MCACHE_CTL_IC_RWDECC (1<<5)
MCACHE_CTL_DC_EN (1<<16)
MCACHE_CTL_DC_ECC_EN (1<<17)
MCACHE_CTL_DC_ECC_EXCP_EN (1<<18)
MCACHE_CTL_DC_RWTECC (1<<19)
MCACHE_CTL_DC_RWDECC (1<<20)
MTVT2_MTVT2EN (1<<0)
MTVT2_COMMON_CODE_ENTRY (((1ULL<<((__riscv_xlen)-2))-1)<<2)
MCFG INFO TEE (1 << 0)
MCFG_INFO_ECC (1<<1)
{\tt MCFG\_INFO\_CLIC}\ (1<\!<\!2)
MCFG_INFO_PLIC (1<<3)
MCFG_INFO_FIO (1<<4)
MCFG_INFO_PPI (1<<5)
MCFG_INFO_NICE (1<<6)
MCFG_INFO_ILM (1 << 7)
MCFG_INFO_DLM (1 << 8)
MCFG_INFO_ICACHE (1<<9)
MCFG_INFO_DCACHE (1<<10)
\texttt{MICFG\_IC\_SET} (0xF << 0)
\texttt{MICFG\_IC\_WAY} (0x7 << 4)
MICFG_IC_LSIZE (0x7<<7)
MICFG_IC_ECC(0x1 << 10)
MICFG_ILM_SIZE (0x1F << 16)
MICFG_ILM_XONLY (0x1<<21)
\texttt{MICFG\_ILM\_ECC} (0x1 << 22)
\mathtt{MDCFG\_DC\_SET} (0xF << 0)
MDCFG DC WAY (0x7 << 4)
```

MDCFG_DC_LSIZE (0x7 << 7)

```
\mathtt{MDCFG\_DC\_ECC} (0x1 << 10)
MDCFG_DLM_SIZE (0x1F << 16)
\mathtt{MDCFG\_DLM\_ECC} (0x1 << 21)
MPPICFG_INFO_PPI_SIZE (0x1F<<1)
MPPICFG_INFO_PPI_BPA (((1ULL<<((__riscv_xlen)-10))-1)<<10)
MFIOCFG_INFO_FIO_SIZE (0x1F<<1)
MFIOCFG_INFO_FIO_BPA (((1ULL<<((__riscv_xlen)-10))-1)<<10)
MECC\_LOCK\_ECC\_LOCK(0x1)
MECC_CODE_CODE (0x1FF)
MECC\_CODE\_RAMID (0x1F << 16)
\texttt{MECC\_CODE\_SRAMID} (0x1F << 24)
CCM_SUEN_SUEN (0x1 << 0)
CCM_DATA_DATA (0x7 << 0)
CCM_COMMAND_COMMAND (0x1F << 0)
SIP_SSIP MIP_SSIP (page 72)
SIP_STIP MIP_STIP (page 73)
\mathbf{PRV}\_\mathbf{U}\ 0
PRV_S 1
PRV_H 2
PRV M3
VM_MBARE 0
VM_MBB 1
\mathbf{VM\_MBBID}\ 2
VM SV328
VM SV399
VM_SV48 10
IRQ_S_SOFT 1
IRQ_H_SOFT 2
IRQ_M_SOFT 3
IRQ_S_TIMER 5
IRQ_H_TIMER 6
IRQ_M_TIMER 7
{\tt IRQ\_S\_EXT}\ 9
IRQ_H_EXT 10
IRQ_M_EXT 11
IRQ_COP 12
```

IRQ_HOST 13

$\mathbf{FRM}_\mathbf{RNDMODE}_\mathbf{RNE}\ 0\mathbf{x}0$

FPU Round to Nearest, ties to Even.

FRM RNDMODE RTZ 0x1

FPU Round Towards Zero.

$\textbf{FRM_RNDMODE_RDN}~0x2$

FPU Round Down (towards -inf)

FRM_RNDMODE_RUP 0x3

FPU Round Up (towards +inf)

FRM RNDMODE RMM 0x4

FPU Round to nearest, ties to Max Magnitude.

$\textbf{FRM_RNDMODE_DYN}~0x7$

In instruction's rm, selects dynamic rounding mode.

In Rounding Mode register, Invalid

${\tt FFLAGS_AE_NX}\;(1<\!<\!0)$

FPU Inexact.

$\textbf{FFLAGS_AE_UF} \; (1 << 1)$

FPU Underflow.

$FFLAGS_AE_OF$ (1<<2)

FPU Overflow.

$\textbf{fflags_ae_dz} \; (1 {<\!\!<} 3)$

FPU Divide by Zero.

$FFLAGS_AE_NV (1 << 4)$

FPU Invalid Operation.

FREG (idx) f##idx

Floating Point Register f0-f31, eg.

f0 -> FREG(0) (page 76)

PMP_R 0x01

PMP_W 0x02

PMP_X 0x04

PMP_A 0x18

PMP_A_TOR 0x08

 $PMP_A_NA4 0x10$

 $PMP_A_NAPOT 0x18$

PMP_L 0x80

PMP_SHIFT 2

PMP_COUNT 16

PTE_V 0x001

PTE R 0x002

PTE_W 0x004

```
PTE X 0x008
PTE_U 0x010
PTE_G 0x020
PTE_A 0x040
\mathbf{PTE} \mathbf{\_D} \ 0x080
PTE SOFT 0x300
{\tt PTE\_PPN\_SHIFT}\ 10
PTE_TABLE (PTE) (((PTE) & (PTE_V \text{ (page 76)} \mid PTE_R \text{ (page 76)} \mid PTE_W \text{ (page 76)} \mid PTE_X
            (page 77)) = PTE_V (page 76)
CAUSE MISALIGNED FETCH 0x0
    End of Doxygen Group NMSIS_Core_CSR_Registers.
CAUSE_FAULT_FETCH 0x1
CAUSE_ILLEGAL_INSTRUCTION 0x2
CAUSE_BREAKPOINT 0x3
CAUSE_MISALIGNED_LOAD 0x4
CAUSE_FAULT_LOAD 0x5
CAUSE_MISALIGNED_STORE 0x6
CAUSE FAULT STORE 0x7
CAUSE USER ECALL 0x8
CAUSE_SUPERVISOR_ECALL 0x9
{f CAUSE\_HYPERVISOR\_ECALL}~0xa
CAUSE_MACHINE_ECALL 0xb
DCAUSE_FAULT_FETCH_PMP 0x1
DCAUSE_FAULT_FETCH_INST 0x2
DCAUSE_FAULT_LOAD_PMP 0x1
DCAUSE_FAULT_LOAD_INST 0x2
DCAUSE_FAULT_LOAD_NICE 0x3
DCAUSE_FAULT_STORE_PMP 0x1
DCAUSE_FAULT_STORE_INST 0x2
```

2.5.5 Register Define and Type Definitions

group NMSIS_Core_Registers

Type definitions and defines for core registers.

Defines

__RISCV_XLEN 32

Refer to the width of an integer register in bits(either 32 or 64)

Typedefs

```
typedef uint32_t rv_csr_t
```

Type of Control and Status Register(CSR), depends on the XLEN defined in RISC-V.

Core

group NMSIS_Core_Base_Registers

Type definitions and defines for base core registers.

union CSR_MISA_Type

#include <core_feature_base.h> Union type to access MISA register.

Public Members

```
rv_csr_t (page 78) a
    bit: 0 Atomic extension
rv csr t (page 78) b
    bit: 1 Tentatively reserved for Bit-Manipulation extension
rv_csr_t (page 78) c
    bit: 2 Compressed extension
rv_csr_t (page 78) d
    bit: 3 Double-precision floating-point extension
    Type used for csr data access.
rv\_csr\_t (page 78) e
    bit: 4 RV32E base ISA
rv_csr_t (page 78) f
    bit: 5 Single-precision floating-point extension
rv_csr_t (page 78) g
    bit: 6 Additional standard extensions present
rv_csr_t (page 78) h
    bit: 7 Hypervisor extension
rv_csr_t (page 78) i
    bit: 8 RV32I/64I/128I base ISA
rv_csr_t (page 78) j
    bit: 9 Tentatively reserved for Dynamically Translated Languages extension
rv_csr_t (page 78) _reserved1
    bit: 10 Reserved
rv_csr_t (page 78) 1
    bit: 11 Tentatively reserved for Decimal Floating-Point extension
rv_csr_t (page 78) m
    bit: 12 Integer Multiply/Divide extension
rv_csr_t (page 78) n
    bit: 13 User-level interrupts supported
rv csr t (page 78) reserved2
    bit: 14 Reserved
```

```
rv_csr_t (page 78) p
         bit: 15 Tentatively reserved for Packed-SIMD extension
     rv_csr_t (page 78) q
         bit: 16 Quad-precision floating-point extension
     rv_csr_t (page 78) _resreved3
         bit: 17 Reserved
     rv csr t (page 78) s
         bit: 18 Supervisor mode implemented
     rv_csr_t (page 78) t
         bit: 19 Tentatively reserved for Transactional Memory extension
     rv_csr_t (page 78) u
         bit: 20 User mode implemented
     rv_csr_t (page 78) v
         bit: 21 Tentatively reserved for Vector extension
     rv_csr_t (page 78) _reserved4
         bit: 22 Reserved
     rv_csr_t (page 78) x
         bit: 23 Non-standard extensions present
     rv csr t (page 78) reserved5
         bit: 24..29 Reserved
     rv_csr_t (page 78) mx1
         bit: 30..31 Machine XLEN
     struct CSR_MISA_Type (page 78)::[anonymous] b
         Structure used for bit access.
union CSR_MSTATUS_Type
     #include <core_feature_base.h> Union type to access MSTATUS configure register.
     Public Members
     rv_csr_t (page 78) _reserved0
         bit: 0 Reserved
     rv_csr_t (page 78) sie
         bit: 1 supervisor interrupt enable flag
     rv_csr_t (page 78) _reserved1
         bit: 2 Reserved
     rv_csr_t (page 78) mie
         bit: 3 Machine mode interrupt enable flag
     rv_csr_t (page 78) _reserved2
         bit: 4 Reserved
     rv_csr_t (page 78) spie
         bit: 3 Supervisor Privilede mode interrupt enable flag
     rv_csr_t (page 78) _reserved3
```

2.5. NMSIS Core API 79

bit: Reserved

```
rv_csr_t (page 78) mpie
         bit: mirror of MIE flag
     rv_csr_t (page 78) _reserved4
         bit: Reserved
     rv_csr_t (page 78) mpp
         bit: mirror of Privilege Mode
     rv_csr_t (page 78) fs
         bit: FS status flag
     rv_csr_t (page 78) xs
         bit: XS status flag
     rv_csr_t (page 78) mprv
         bit: Machine mode PMP
     rv_csr_t (page 78) sum
         bit: Supervisor Mode load and store protection
     rv_csr_t (page 78) _reserved6
         bit: 19..30 Reserved
     rv_csr_t (page 78) sd
         bit: Dirty status for XS or FS
     struct CSR_MSTATUS_Type (page 79)::[anonymous] b
         Structure used for bit access.
     rv_csr_t (page 78) d
         Type used for csr data access.
union CSR_MTVEC_Type
     #include <core_feature_base.h> Union type to access MTVEC configure register.
     Public Members
     rv_csr_t (page 78) mode
         bit: 0..5 interrupt mode control
     rv_csr_t (page 78) addr
         bit: 6..31 mtvec address
     struct CSR_MTVEC_Type (page 80)::[anonymous] b
         Structure used for bit access.
     rv_csr_t (page 78) d
         Type used for csr data access.
union CSR_MCAUSE_Type
     #include <core_feature_base.h> Union type to access MCAUSE configure register.
     Public Members
     rv_csr_t (page 78) exccode
         bit: 11..0 exception or interrupt code
     rv_csr_t (page 78) _reserved0
         bit: 15..12 Reserved
```

```
rv_csr_t (page 78) mpil
         bit: 23..16 Previous interrupt level
     rv_csr_t (page 78) _reserved1
         bit: 26..24 Reserved
     rv_csr_t (page 78) mpie
         bit: 27 Interrupt enable flag before enter interrupt
     rv_csr_t (page 78) mpp
         bit: 29..28 Privilede mode flag before enter interrupt
     rv_csr_t (page 78) minhv
         bit: 30 Machine interrupt vector table
     rv_csr_t (page 78) interrupt
         bit: 31 trap type.
         0 means exception and 1 means interrupt
     struct CSR_MCAUSE_Type (page 80)::[anonymous] b
         Structure used for bit access.
     rv csr t (page 78) d
         Type used for csr data access.
union CSR_MCOUNTINHIBIT_Type
     #include <core_feature_base.h> Union type to access MCOUNTINHIBIT configure register.
     Public Members
     rv_csr_t (page 78) cy
         bit: 0 1 means disable mcycle counter
     rv_csr_t (page 78) _reserved0
         bit: 1 Reserved
     rv_csr_t (page 78) ir
         bit: 2 1 means disable minstret counter
     rv_csr_t (page 78) _reserved1
         bit: 3..31 Reserved
     struct CSR_MCOUNTINHIBIT_Type (page 81)::[anonymous] b
         Structure used for bit access.
     rv_csr_t (page 78) d
         Type used for csr data access.
union CSR MSUBM Type
     #include <core_feature_base.h> Union type to access msubm configure register.
     Public Members
     rv_csr_t (page 78) _reserved0
         bit: 0..5 Reserved
     rv_csr_t (page 78) typ
```

2.5. NMSIS Core API 81

bit: 6..7 current trap type

```
rv_csr_t (page 78) ptyp
         bit: 8..9 previous trap type
     rv_csr_t (page 78) _reserved1
         bit: 10..31 Reserved
     struct CSR_MSUBM_Type (page 81)::[anonymous] b
         Structure used for bit access.
     rv csr t (page 78) d
         Type used for csr data access.
union CSR_MMISCCTRL_Type
     #include <core_feature_base.h> Union type to access MMISC_CTRL configure register.
     Public Members
     rv_csr_t (page 78) _reserved0
         bit: 0..2 Reserved
     rv_csr_t (page 78) bpu
         bit: 3 dynamic prediction enable flag
     rv_csr_t (page 78) _reserved1
         bit: 4..5 Reserved
     rv csr t (page 78) misalign
         bit: 6 misaligned access support flag
     rv_csr_t (page 78) _reserved2
         bit: 7..8 Reserved
     rv_csr_t (page 78) nmi_cause
         bit: 9 mnvec control and nmi mcase exccode
     rv_csr_t (page 78) _reserved3
         bit: 10..31 Reserved
     struct CSR_MMISCCTRL_Type (page 82)::[anonymous] b
         Structure used for bit access.
     rv_csr_t (page 78) d
         Type used for csr data access.
union CSR MSAVESTATUS Type
     #include <core_feature_base.h> Union type to access MSAVESTATUS configure register.
     Public Members
     rv_csr_t (page 78) mpie1
         bit: 0 interrupt enable flag of fisrt level NMI/exception nestting
     rv_csr_t (page 78) mpp1
         bit: 1..2 privilede mode of fisrt level NMI/exception nestting
     rv_csr_t (page 78) _reserved0
         bit: 3..5 Reserved
     rv_csr_t (page 78) ptyp1
         bit: 6..7 NMI/exception type of before first nestting
```

```
rv_csr_t (page 78) mpie2
             bit: 8 interrupt enable flag of second level NMI/exception nestting
          rv_csr_t (page 78) mpp2
             bit: 9..10 privilede mode of second level NMI/exception nestting
          rv csr t (page 78) reserved1
             bit: 11..13 Reserved
          rv csr t (page 78) ptyp2
             bit: 14..15 NMI/exception type of before second nestting
          rv_csr_t (page 78) _reserved2
             bit: 16..31 Reserved
          struct CSR_MSAVESTATUS_Type (page 82)::[anonymous] b
             Structure used for bit access.
          rv_csr_t (page 78) w
             Type used for csr data access.
group NMSIS_Core_ECLIC_Registers
     Type definitions and defines for eclic registers.
     Defines
     CLIC_CLICCFG_NLBIT_Pos 1U
          CLIC CLICCFG: NLBIT Position.
     CLIC CLICCFG NLBIT Msk (0xFUL << CLIC CLICCFG NLBIT Pos)
          CLIC CLICCFG: NLBIT Mask.
     CLIC CLICINFO CTLBIT Pos 21U
         CLIC INTINFO: __ECLIC_GetInfoCtlbits() Position.
     CLIC_CLICINFO_CTLBIT_Msk (0xFUL << CLIC_CLICINFO_CTLBIT_Pos)
          CLIC INTINFO: __ECLIC_GetInfoCtlbits() Mask.
     CLIC_CLICINFO_VER_Pos 13U
          CLIC CLICINFO: VERSION Position.
     CLIC_CLICINFO_VER_Msk (0xFFUL << CLIC_CLICCFG_NLBIT_Pos)
          CLIC CLICINFO: VERSION Mask.
     CLIC_CLICINFO_NUM_Pos 0U
          CLIC CLICINFO: NUM Position.
     CLIC_CLICINFO_NUM_Msk (0xFFFUL << CLIC_CLICINFO_NUM_Pos)</pre>
         CLIC CLICINFO: NUM Mask.
     CLIC INTIP IP Pos 0U
         CLIC INTIP: IP Position.
     CLIC_INTIP_IP_Msk (0x1UL << CLIC_INTIP_IP_Pos)
          CLIC INTIP: IP Mask.
     CLIC_INTIE_IE_Pos 0U
          CLIC INTIE: IE Position.
```

ECLIC

CLIC_INTIE_IE_Msk (0x1UL << CLIC_INTIE_IE_Pos)

CLIC INTIE: IE Mask.

CLIC INTATTR TRIG Pos 1U

CLIC INTATTR: TRIG Position.

CLIC_INTATTR_TRIG_Msk (0x3UL << CLIC_INTATTR_TRIG_Pos)

CLIC INTATTR: TRIG Mask.

CLIC INTATTR SHV Pos 0U

CLIC INTATTR: SHV Position.

CLIC_INTATTR_SHV_Msk (0x1UL << CLIC_INTATTR_SHV_Pos)

CLIC INTATTR: SHV Mask.

ECLIC MAX NLBITS 8U

Max nlbit of the CLICINTCTLBITS.

ECLIC_MODE_MTVEC_Msk 3U

ECLIC Mode mask for MTVT CSR Register.

ECLIC NON VECTOR INTERRUPT 0x0

Non-Vector Interrupt Mode of ECLIC.

ECLIC_VECTOR_INTERRUPT 0x1

Vector Interrupt Mode of ECLIC.

ECLIC_BASE __ECLIC_BASEADDR

ECLIC Base Address.

ECLIC ((CLIC_Type *) *ECLIC_BASE* (page 84))

CLIC configuration struct.

Enums

enum ECLIC_TRIGGER_Type

ECLIC Trigger Enum for different Trigger Type.

Values:

ECLIC LEVEL TRIGGER = 0x0

Level Triggerred, trig[0] = 0.

$ECLIC_POSTIVE_EDGE_TRIGGER = 0x1$

Postive/Rising Edge Triggered, trig[0] = 1, trig[1] = 0.

ECLIC_NEGTIVE_EDGE_TRIGGER = 0x3

Negtive/Falling Edge Triggered, trig[0] = 1, trig[1] = 1.

ECLIC MAX TRIGGER = 0x3

MAX Supported Trigger Mode.

union CLICCFG_Type

#include <core_feature_eclic.h> Union type to access CLICFG configure register.

Public Members

uint8_t _reserved0

bit: 0 Overflow condition code flag

```
uint8 t nlbits
              bit: 29 Carry condition code flag
          uint8_t _reserved1
              bit: 30 Zero condition code flag
          uint8 t reserved2
              bit: 31 Negative condition code flag
          struct CLICCFG_Type (page 84)::[anonymous] b
              Structure used for bit access.
          uint8 tw
              Type used for byte access.
     union CLICINFO_Type
          #include <core_feature_eclic.h> Union type to access CLICINFO information register.
          Public Members
          uint32_t numint
              bit: 0..12 number of maximum interrupt inputs supported
          uint32_t version
              bit: 13..20 20:17 for architecture version,16:13 for implementation version
          uint32 tintctlbits
              bit: 21..24 specifies how many hardware bits are actually implemented in the clicintctl registers
          uint32 t reserved0
              bit: 25..31 Reserved
          struct CLICINFO_Type (page 85)::[anonymous] b
              Structure used for bit access.
          uint32 tw
              Type used for word access.
     struct CLIC_CTRL_Type
          #include <core_feature_eclic.h> Access to the structure of a vector interrupt controller.
SysTimer
group NMSIS_Core_SysTimer_Registers
     Type definitions and defines for system timer registers.
     Defines
     SysTimer MTIMECTL TIMESTOP Pos 0U
          SysTick Timer MTIMECTL: TIMESTOP bit Position.
     SysTimer_MTIMECTL_TIMESTOP_Msk (1UL << SysTimer_MTIMECTL_TIMESTOP_Pos)
          SysTick Timer MTIMECTL: TIMESTOP Mask.
     SysTimer_MTIMECTL_CMPCLREN_Pos 1U
          SysTick Timer MTIMECTL: CMPCLREN bit Position.
     SysTimer_MTIMECTL_CMPCLREN_Msk (1UL << SysTimer_MTIMECTL_CMPCLREN_Pos)
```

2.5. NMSIS Core API 85

SysTick Timer MTIMECTL: CMPCLREN Mask.

```
SysTimer MTIMECTL CLKSRC Pos 2U
    SysTick Timer MTIMECTL: CLKSRC bit Position.
SysTimer_MTIMECTL_CLKSRC_Msk (1UL << SysTimer_MTIMECTL_CLKSRC_Pos)
    SysTick Timer MTIMECTL: CLKSRC Mask.
SysTimer MSIP MSIP Pos 0U
    SysTick Timer MSIP: MSIP bit Position.
SysTimer_MSIP_MSIP_Msk (1UL << SysTimer_MSIP_MSIP_Pos)
    SysTick Timer MSIP: MSIP Mask.
SysTimer_MTIMER_Msk (0xFFFFFFFFFFFFFFFULL)
    SysTick Timer MTIMER value Mask.
SysTimer_MTIMERCMP_Msk (0xFFFFFFFFFFFFFFFFULL)
    SysTick Timer MTIMERCMP value Mask.
SysTimer_MTIMECTL_Msk (0xFFFFFFFUL)
    SysTick Timer MTIMECTL/MSTOP value Mask.
SysTimer MSIP Msk (0xFFFFFFFUL)
    SysTick Timer MSIP value Mask.
SysTimer_MSFTRST_Msk (0xFFFFFFFUL)
    SysTick Timer MSFTRST value Mask.
SysTimer MSFRST KEY (0x80000A5FUL)
    SysTick Timer Software Reset Request Key.
SysTimer_BASE __SYSTIMER_BASEADDR
    SysTick Base Address.
SysTimer ((SysTimer_Type (page 86) *) SysTimer_BASE (page 86))
    SysTick configuration struct.
struct SysTimer_Type
    #include <core_feature_timer.h> Structure type to access the System Timer (SysTimer).
    Structure definition to access the system timer(SysTimer).
```

Remark

- MSFTRST register is introduced in Nuclei N Core version 1.3(__NUCLEI_N_REV (page 58) >= 0x0103)
- MSTOP register is renamed to MTIMECTL register in Nuclei N Core version 1.4(__NU-CLEI_N_REV (page 58) >= 0x0104)
- CMPCLREN and CLKSRC bit in MTIMECTL register is introduced in Nuclei N Core version 1.4(__NUCLEI_N_REV (page 58) >= 0x0104)

2.5.6 CPU Intrinsic Functions

```
__STATIC_FORCEINLINE void __WFE(void)
__STATIC_FORCEINLINE void __EBREAK(void)
__STATIC_FORCEINLINE void __ECALL(void)
__STATIC_FORCEINLINE void __set_wfi_sleepmode(WFI_SleepMode_Type mode)
STATIC FORCEINLINE void TXEVT (void)
__STATIC_FORCEINLINE void __enable_mcycle_counter(void)
__STATIC_FORCEINLINE void __disable_mcycle_counter(void)
__STATIC_FORCEINLINE void __enable_minstret_counter(void)
__STATIC_FORCEINLINE void __disable_minstret_counter(void)
__STATIC_FORCEINLINE void __enable_all_counter(void)
__STATIC_FORCEINLINE void __disable_all_counter(void)
__STATIC_FORCEINLINE void __FENCE_I (void)
__STATIC_FORCEINLINE uint8_t __LB(volatile void * addr)
__STATIC_FORCEINLINE uint16_t __LH(volatile void * addr)
STATIC FORCEINLINE uint32 t LW(volatile void * addr)
STATIC FORCEINLINE void SB(volatile void * addr, uint8 t val)
__STATIC_FORCEINLINE void __SH(volatile void * addr, uint16_t val)
__STATIC_FORCEINLINE void __SW(volatile void * addr, uint32_t val)
__STATIC_FORCEINLINE uint32_t __CAS_W(volatile uint32_t * addr, uint32_t oldval, uint32_t :
STATIC FORCEINLINE uint32 t AMOSWAP W(volatile uint32 t * addr, uint32 t newval)
__STATIC_FORCEINLINE int32_t __AMOADD_W(volatile int32_t * addr, int32_t value)
__STATIC_FORCEINLINE int32_t __AMOAND_W(volatile int32_t * addr, int32_t value)
__STATIC_FORCEINLINE int32_t __AMOOR_W(volatile int32_t * addr, int32_t value)
__STATIC_FORCEINLINE int32_t __AMOXOR_W(volatile int32_t * addr, int32_t value)
STATIC FORCEINLINE uint32 t AMOMAXU W(volatile uint32 t * addr, uint32 t value)
__STATIC_FORCEINLINE int32_t __AMOMAX_W(volatile int32_t * addr, int32_t value)
__STATIC_FORCEINLINE uint32_t __AMOMINU_W(volatile uint32_t * addr, uint32_t value)
__STATIC_FORCEINLINE int32_t __AMOMIN_W(volatile int32_t * addr, int32_t value)
___FENCE (p, s) __ASM (page 59) volatile ("fence" #p "," #s : : : "memory")
___RWMB() ___FENCE(iorw,iorw)
___RMB() __FENCE(ir,ir)
___WMB() __FENCE(ow,ow)
___SMP_RWMB() __FENCE(rw,rw)
\_\_SMP\_RMB() \_\_FENCE(r,r)
\_SMP\_WMB () \_FENCE(w,w)
CPU RELAX () ASM (page 59) volatile ("": :: "memory")
```

group NMSIS_Core_CPU_Intrinsic

Functions that generate RISC-V CPU instructions.

The following functions generate specified RISC-V instructions that cannot be directly accessed by compiler.

Defines

```
__FENCE (p, s) __ASM (page 59) volatile ("fence" #p "," #s : : : "memory") Execute fence instruction, p -> pred, s -> succ.
```

the FENCE instruction ensures that all memory accesses from instructions preceding the fence in program order (the predecessor set) appear earlier in the global memory order than memory accesses from instructions appearing after the fence in program order (the successor set). For details, please refer to The RISC-V Instruction Set Manual

Parameters

```
• p: predecessor set, such as iorw, rw, r, w
```

```
• s: successor set, such as iorw, rw, r, w
```

```
__RWMB() __FENCE(iorw,iorw)
Read & Write Memory barrier.

__RMB() __FENCE(ir,ir)
Read Memory barrier.

__WMB() __FENCE(ow,ow)
Write Memory barrier.
```

```
___SMP_RWMB() __FENCE(rw,rw)
SMP Read & Write Memory barrier.
```

```
___SMP_RMB() __FENCE(r,r)
SMP Read Memory barrier.
```

```
___SMP_WMB () __FENCE(w,w) SMP Write Memory barrier.
```

```
__CPU_RELAX () __ASM (page 59) volatile (""::: "memory") CPU relax for busy loop.
```

Enums

enum WFI_SleepMode_Type

WFI Sleep Mode enumeration.

Values:

```
WFI\_SHALLOW\_SLEEP = 0
```

Shallow sleep mode, the core_clk will poweroff.

```
WFI_DEEP_SLEEP = 1
```

Deep sleep mode, the core_clk and core_ano_clk will poweroff.

Functions

```
__STATIC_FORCEINLINE void __NOP (void)
NOP Instruction.
```

No Operation does nothing. This instruction can be used for code alignment purposes. _STATIC_FORCEINLINE void ___WFI(void) Wait For Interrupt. Wait For Interrupt is is executed using CSR WFE.WFE=0 and WFI instruction. It will suspends execution until interrupt, NMI or Debug happened. When Core is waked up by interrupt, if 1. mstatus.MIE == 1(interrupt enabled), Core will enter ISR code 2. mstatus.MIE == 0(interrupt disabled), Core will resume previous execution STATIC_FORCEINLINE void __WFE(void) Wait For Event. Wait For Event is executed using CSR_WFE.WFE=1 and WFI instruction. It will suspends execution until event, NMI or Debug happened. When Core is waked up, Core will resume previous execution _STATIC_FORCEINLINE void __EBREAK(void) Breakpoint Instruction. Causes the processor to enter Debug state. Debug tools can use this to investigate system state when the instruction at a particular address is reached. _STATIC_FORCEINLINE void __ECALL(void) Environment Call Instruction. The ECALL instruction is used to make a service request to the execution environment. __STATIC_FORCEINLINE void __set_wfi_sleepmode(WFI_SleepMode_Type mode) Set Sleep mode of WFI. Set the SLEEPVALUE CSR register to control the WFI Sleep mode. **Parameters** • [in] mode: The sleep mode to be set _STATIC_FORCEINLINE void __TXEVT(void) Send TX Event. Set the CSR TXEVT to control send a TX Event. The Core will output signal tx_evt as output event signal. _STATIC_FORCEINLINE void __enable_mcycle_counter(void) Enable MCYCLE counter. Clear the CY bit of MCOUNTINHIBIT to 0 to enable MCYCLE Counter __STATIC_FORCEINLINE void __disable_mcycle_counter(void) Disable MCYCLE counter. Set the CY bit of MCOUNTINHIBIT to 1 to disable MCYCLE Counter __STATIC_FORCEINLINE void __enable_minstret_counter(void) Enable MINSTRET counter. Clear the IR bit of MCOUNTINHIBIT to 0 to enable MINSTRET Counter __STATIC_FORCEINLINE void __disable_minstret_counter(void) Disable MINSTRET counter. Set the IR bit of MCOUNTINHIBIT to 1 to disable MINSTRET Counter __STATIC_FORCEINLINE void __enable_all_counter(void) Enable MCYCLE & MINSTRET counter. Clear the IR and CY bit of MCOUNTINHIBIT to 1 to enable MINSTRET & MCYCLE Counter

```
_STATIC_FORCEINLINE void __disable_all_counter(void)
    Disable MCYCLE & MINSTRET counter.
    Set the IR and CY bit of MCOUNTINHIBIT to 1 to disable MINSTRET & MCYCLE Counter
__STATIC_FORCEINLINE void __FENCE_I (void)
    Fence.i Instruction.
    The FENCE.I instruction is used to synchronize the instruction and data streams.
__STATIC_FORCEINLINE uint8_t __LB(volatile void * addr)
    Load 8bit value from address (8 bit)
    Load 8 bit value.
    Return value of type uint8_t at (*addr)
    Parameters
          • [in] addr: Address pointer to data
  _STATIC_FORCEINLINE uint16_t __LH(volatile void * addr)
    Load 16bit value from address (16 bit)
    Load 16 bit value.
    Return value of type uint16_t at (*addr)
    Parameters
          • [in] addr: Address pointer to data
 _STATIC_FORCEINLINE uint32_t __LW(volatile void * addr)
    Load 32bit value from address (32 bit)
    Load 32 bit value.
    Return value of type uint32_t at (*addr)
    Parameters
          • [in] addr: Address pointer to data
  _STATIC_FORCEINLINE void ___SB(volatile void * addr, uint8_t val)
    Write 8bit value to address (8 bit)
    Write 8 bit value.
    Parameters
          • [in] addr: Address pointer to data
          • [in] val: Value to set
 _STATIC_FORCEINLINE void __SH(volatile void * addr, uint16_t val)
    Write 16bit value to address (16 bit)
    Write 16 bit value.
    Parameters
          • [in] addr: Address pointer to data
          • [in] val: Value to set
  _STATIC_FORCEINLINE void __SW(volatile void * addr, uint32_t val)
    Write 32bit value to address (32 bit)
    Write 32 bit value.
```

Parameters

- [in] addr: Address pointer to data
- [in] val: Value to set

__STATIC_FORCEINLINE uint32_t __CAS_W(volatile uint32_t * addr, uint32_t oldval, uint3 Compare and Swap 32bit value using LR and SC.

Compare old value with memory, if identical, store new value in memory. Return the initial value in memory. Success is indicated by comparing return value with OLD. memory address, return 0 if successful, otherwise return !0

Return return the initial value in memory

Parameters

- [in] addr: Address pointer to data, address need to be 4byte aligned
- [in] oldval: Old value of the data in address
- [in] newval: New value to be stored into the address

__STATIC_FORCEINLINE uint32_t __AMOSWAP_W(volatile uint32_t * addr, uint32_t newval)

Atomic Swap 32bit value into memory.

Atomically swap new 32bit value into memory using amoswap.d.

Return return the original value in memory

Parameters

- [in] addr: Address pointer to data, address need to be 4byte aligned
- [in] newval: New value to be stored into the address

__STATIC_FORCEINLINE int32_t __AMOADD_W(volatile int32_t * addr, int32_t value)
Atomic Add with 32bit value.

Atomically ADD 32bit value with value in memory using amoadd.d.

Return return memory value + add value

Parameters

- [in] addr: Address pointer to data, address need to be 4byte aligned
- [in] value: value to be ADDed

__STATIC_FORCEINLINE int32_t __AMOAND_W(volatile int32_t * addr, int32_t value)
Atomic And with 32bit value.

Atomically AND 32bit value with value in memory using amound.d.

Return return memory value & and value

Parameters

- [in] addr: Address pointer to data, address need to be 4byte aligned
- [in] value: value to be ANDed

__STATIC_FORCEINLINE int32_t __AMOOR_W(volatile int32_t * addr, int32_t value)
Atomic OR with 32bit value.

Atomically OR 32bit value with value in memory using amoor.d.

Return return memory value | and value

Parameters

- [in] addr: Address pointer to data, address need to be 4byte aligned
- [in] value: value to be ORed

__STATIC_FORCEINLINE int32_t __AMOXOR_W(volatile int32_t * addr, int32_t value) Atomic XOR with 32bit value.

Atomically XOR 32bit value with value in memory using amoxor.d.

Return return memory value ^ and value

Parameters

- [in] addr: Address pointer to data, address need to be 4byte aligned
- [in] value: value to be XORed

__STATIC_FORCEINLINE uint32_t __AMOMAXU_W(volatile uint32_t * addr, uint32_t value) Atomic unsigned MAX with 32bit value.

Atomically unsigned max compare 32bit value with value in memory using amomaxu.d.

Return return the bigger value

Parameters

- [in] addr: Address pointer to data, address need to be 4byte aligned
- [in] value: value to be compared

__STATIC_FORCEINLINE int32_t __AMOMAX_W(volatile int32_t * addr, int32_t value) Atomic signed MAX with 32bit value.

Atomically signed max compare 32bit value with value in memory using amomax.d.

Return the bigger value

Parameters

- [in] addr: Address pointer to data, address need to be 4byte aligned
- [in] value: value to be compared

__STATIC_FORCEINLINE uint32_t __AMOMINU_W(volatile uint32_t * addr, uint32_t value) Atomic unsigned MIN with 32bit value.

Atomically unsigned min compare 32bit value with value in memory using amominu.d.

Return the smaller value

Parameters

- [in] addr: Address pointer to data, address need to be 4byte aligned
- [in] value: value to be compared

__STATIC_FORCEINLINE int32_t __AMOMIN_W(volatile int32_t * addr, int32_t value) Atomic signed MIN with 32bit value.

Atomically signed min compare 32bit value with value in memory using amomin.d.

Return the smaller value

Parameters

- [in] addr: Address pointer to data, address need to be 4byte aligned
- [in] value: value to be compared

2.5.7 Intrinsic Functions for SIMD Instructions

Click Nuclei DSP Feature 16 to learn about Core DSP in Nuclei ISA Spec.

SIMD Data Processing Instructions

SIMD 16-bit Add/Subtract Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_ADD16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_CRAS16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_CRSA16(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE unsigned long __RV_KADD16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_KCRAS16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_KCRSA16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_KSTAS16(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE unsigned long __RV_KSTSA16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_KSUB16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_RADD16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_RCRAS16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_RCRSA16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_RSTAS16(unsigned long a, unsigned long b)
STATIC FORCEINLINE unsigned long RV RSTSA16 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_RSUB16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_STAS16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_STSA16(unsigned long a, unsigned long b)
  STATIC_FORCEINLINE unsigned long __RV_SUB16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_UKADD16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_UKCRAS16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_UKCRSA16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_UKSTAS16(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE unsigned long __RV_UKSTSA16(unsigned long a, unsigned long b)
 STATIC FORCEINLINE unsigned long RV UKSUB16 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_URADD16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_URCRAS16(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE unsigned long __RV_URCRSA16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_URSTAS16(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE unsigned long __RV_URSTSA16(unsigned long a, unsigned long b)
```

https://doc.nucleisys.com/nuclei_spec/isa/dsp.html

```
__STATIC_FORCEINLINE unsigned long __RV_URSUB16(unsigned long a, unsigned long b) group NMSIS_Core_DSP_Intrinsic_SIMD_16B_ADDSUB
```

SIMD 16-bit Add/Subtract Instructions.

Based on the combination of the types of the two 16-bit arithmetic operations, the SIMD 16-bit add/subtract instructions can be classified into 6 main categories: Addition (two 16-bit addition), Subtraction (two 16-bit subtraction), Crossed Add & Sub (one addition and one subtraction), and Crossed Sub & Add (one subtraction and one addition), Straight Add & Sub (one addition and one subtraction), and Straight Sub & Add (one subtraction and one addition). Based on the way of how an overflow condition is handled, the SIMD 16-bit add/subtract instructions can be classified into 5 groups: Wrap-around (dropping overflow), Signed Halving (keeping overflow by dropping 1 LSB bit), Unsigned Halving, Signed Saturation (clipping overflow), and Unsigned Saturation. Together, there are 30 SIMD 16-bit add/subtract instructions.

Functions

```
__STATIC_FORCEINLINE unsigned long __RV_ADD16(unsigned long a, unsigned long b)
ADD16(SIMD 16-bit Addition)
```

Type: SIMD Syntax:

```
ADD16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit integer element additions simultaneously.

Description: This instruction adds the 16-bit integer elements in Rs1 with the 16-bit integer elements in Rs2, and then writes the 16-bit element results to Rd.

Note: This instruction can be used for either signed or unsigned addition.

Operations:

```
Rd.H[x] = Rs1.H[x] + Rs2.H[x];

for RV32: x=1...0,

for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_CRAS16(unsigned long a, unsigned long b) CRAS16(SIMD 16-bit Cross Addition & Subtraction)

Type: SIMD

Syntax:

```
CRAS16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit integer element addition and 16-bit integer element subtraction in a 32-bit chunk simultaneously. Operands are from crossed positions in 32-bit chunks.

Description: This instruction adds the 16-bit integer element in [31:16] of 32-bit chunks in Rs1 with the 16-bit integer element in [15:0] of 32-bit chunks in Rs2, and writes the result to [31:16] of 32-bit chunks

in Rd; at the same time, it subtracts the 16-bit integer element in [31:16] of 32-bit chunks in Rs2 from the 16-bit integer element in [15:0] of 32-bit chunks, and writes the result to [15:0] of 32-bit chunks in Rd.

Note: This instruction can be used for either signed or unsigned operations.

Operations:

```
Rd.W[x][31:16] = Rs1.W[x][31:16] + Rs2.W[x][15:0];
Rd.W[x][15:0] = Rs1.W[x][15:0] - Rs2.W[x][31:16];
for RV32, x=0
for RV64, x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
__STATIC_FORCEINLINE unsigned long __RV_CRSA16(unsigned long a, unsigned long b) CRSA16(SIMD 16-bit Cross Subtraction & Addition)
```

Type: SIMD

Syntax:

```
CRSA16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit integer element subtraction and 16-bit integer element addition in a 32-bit chunk simultaneously. Operands are from crossed positions in 32-bit chunks.

Description: This instruction subtracts the 16-bit integer element in [15:0] of 32-bit chunks in Rs2 from the 16-bit integer element in [31:16] of 32-bit chunks in Rs1, and writes the result to [31:16] of 32-bit chunks in Rd; at the same time, it adds the 16-bit integer element in [31:16] of 32-bit chunks in Rs2 with the 16-bit integer element in [15:0] of 32-bit chunks in Rs1, and writes the result to [15:0] of 32-bit chunks in Rd.

Note: This instruction can be used for either signed or unsigned operations.

Operations:

```
Rd.W[x][31:16] = Rs1.W[x][31:16] - Rs2.W[x][15:0];
Rd.W[x][15:0] = Rs1.W[x][15:0] + Rs2.W[x][31:16];
for RV32, x=0
for RV64, x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KADD16(unsigned long a, unsigned long b)

KADD16(SIMD 16-bit Signed Saturating Addition)

Type: SIMD Syntax:

```
KADD16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit signed integer element saturating additions simultaneously.

Description: This instruction adds the 16-bit signed integer elements in Rs1 with the 16-bit signed integer elements in Rs2. If any of the results are beyond the Q15 number range ($-2^15 \le 2^15-1$), they are saturated to the range and the OV bit is set to 1. The saturated results are written to Rd.

Operations:

```
res[x] = Rs1.H[x] + Rs2.H[x];
if (res[x] > 32767) {
   res[x] = 32767;
   OV = 1;
} else if (res[x] < -32768) {
   res[x] = -32768;
   OV = 1;
}
Rd.H[x] = res[x];
for RV32: x=1...0,
for RV64: x=3...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE unsigned long __RV_KCRAS16 (unsigned long a, unsigned long b) KCRAS16 (SIMD 16-bit Signed Saturating Cross Addition & Subtraction)

Type: SIMD

Syntax:

```
KCRAS16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit signed integer element saturating addition and 16-bit signed integer element saturating subtraction in a 32-bit chunk simultaneously. Operands are from crossed positions in 32- bit chunks.

Description: This instruction adds the 16-bit signed integer element in [31:16] of 32-bit chunks in Rs1 with the 16-bit signed integer element in [15:0] of 32-bit chunks in Rs2; at the same time, it subtracts the 16-bit signed integer element in [31:16] of 32-bit chunks in Rs2 from the 16-bit signed integer element in [15:0] of 32-bit chunks in Rs1. If any of the results are beyond the Q15 number range (- $2^15 <= 2^15 -1$), they are saturated to the range and the OV bit is set to 1. The saturated results are written to [31:16] of 32-bit chunks in Rd for addition and [15:0] of 32-bit chunks in Rd for subtraction.

Operations:

```
res1 = Rs1.W[x][31:16] + Rs2.W[x][15:0];
res2 = Rs1.W[x][15:0] - Rs2.W[x][31:16];
for (res in [res1, res2]) {
   if (res > (2^15)-1) {
     res = (2^15)-1;
     OV = 1;
   } else if (res < -2^15) {
     res = -2^15;</pre>
```

(continues on next page)

(continued from previous page)

```
OV = 1;
}
Rd.W[x][31:16] = res1;
Rd.W[x][15:0] = res2;
for RV32, x=0
for RV64, x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KCRSA16 (unsigned long a, unsigned long b)

KCRSA16 (SIMD 16-bit Signed Saturating Cross Subtraction & Addition)

Type: SIMD

Syntax:

```
KCRSA16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit signed integer element saturating subtraction and 16-bit signed integer element saturating addition in a 32-bit chunk simultaneously. Operands are from crossed positions in 32-bit chunks.

Description: This instruction subtracts the 16-bit signed integer element in [15:0] of 32-bit chunks in Rs2 from the 16-bit signed integer element in [31:16] of 32-bit chunks in Rs1; at the same time, it adds the 16-bit signed integer element in [31:16] of 32-bit chunks in Rs2 with the 16-bit signed integer element in [15:0] of 32-bit chunks in Rs1. If any of the results are beyond the Q15 number range (- $2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^15 < 2^1$

Operations:

```
res1 = Rs1.W[x][31:16] - Rs2.W[x][15:0];
res2 = Rs1.W[x][15:0] + Rs2.W[x][31:16];
for (res in [res1, res2]) {
   if (res > (2^15)-1) {
      res = (2^15)-1;
      OV = 1;
    } else if (res < -2^15) {
      res = -2^15;
      OV = 1;
   }
}
Rd.W[x][31:16] = res1;
Rd.W[x][15:0] = res2;
for RV32, x=0
for RV64, x=1...0</pre>
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

• [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KSTAS16 (unsigned long a, unsigned long b)

KSTAS16 (SIMD 16-bit Signed Saturating Straight Addition & Subtraction)

Type: SIMD

Syntax:

```
KSTAS16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit signed integer element saturating addition and 16-bit signed integer element saturating subtraction in a 32-bit chunk simultaneously. Operands are from corresponding positions in 32-bit chunks.

Description: This instruction adds the 16-bit signed integer element in [31:16] of 32-bit chunks in Rs1 with the 16-bit signed integer element in [31:16] of 32-bit chunks in Rs2; at the same time, it subtracts the 16-bit signed integer element in [15:0] of 32-bit chunks in Rs2 from the 16-bit signed integer element in [15:0] of 32-bit chunks in Rs1. If any of the results are beyond the Q15 number range (-2^15 <= Q15 <= 2^15-1), they are saturated to the range and the OV bit is set to 1. The saturated results are written to [31:16] of 32-bit chunks in Rd for addition and [15:0] of 32-bit chunks in Rd for subtraction.

Operations:

```
res1 = Rs1.W[x][31:16] + Rs2.W[x][31:16];
res2 = Rs1.W[x][15:0] - Rs2.W[x][15:0];
for (res in [res1, res2]) {
   if (res > (2^15)-1) {
      res = (2^15)-1;
      OV = 1;
   } else if (res < -2^15) {
      res = -2^15;
      OV = 1;
   }
}
Rd.W[x][31:16] = res1;
Rd.W[x][15:0] = res2;
for RV32, x=0
for RV64, x=1...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE unsigned long __RV_KSTSA16 (unsigned long a, unsigned long b)

KSTSA16 (SIMD 16-bit Signed Saturating Straight Subtraction & Addition)

Type: SIMD

Syntax:

```
KSTSA16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit signed integer element saturating subtraction and 16-bit signed integer element saturating addition in a 32-bit chunk simultaneously. Operands are from corresponding positions in 32-bit chunks.

Description: This instruction subtracts the 16-bit signed integer element in [31:16] of 32-bit chunks in Rs2 from the 16-bit signed integer element in [31:16] of 32-bit chunks in Rs1; at the same time, it adds

the 16-bit signed integer element in [15:0] of 32-bit chunks in Rs2 with the 16-bit signed integer element in [15:0] of 32-bit chunks in Rs1. If any of the results are beyond the Q15 number range (- $2^15 <= 2^15$), they are saturated to the range and the OV bit is set to 1. The saturated results are written to [31:16] of 32-bit chunks in Rd for subtraction and [15:0] of 32-bit chunks in Rd for addition.

Operations:

```
res1 = Rs1.W[x][31:16] - Rs2.W[x][31:16];
res2 = Rs1.W[x][15:0] + Rs2.W[x][15:0];
for (res in [res1, res2]) {
   if (res > (2^15)-1) {
      res = (2^15)-1;
      OV = 1;
    } else if (res < -2^15) {
      res = -2^15;
      OV = 1;
   }
}
Rd.W[x][31:16] = res1;
Rd.W[x][15:0] = res2;
for RV32, x=0
for RV64, x=1...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KSUB16(unsigned long a, unsigned long b)
KSUB16(SIMD 16-bit Signed Saturating Subtraction)

Type: SIMD

Syntax:

```
KSUB16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit signed integer elements saturating subtractions simultaneously.

Description: This instruction subtracts the 16-bit signed integer elements in Rs2 from the 16-bit signed integer elements in Rs1. If any of the results are beyond the Q15 number range ($-2^15 \le 2^15-1$), they are saturated to the range and the OV bit is set to 1. The saturated results are written to Rd.

Operations:

```
res[x] = Rs1.H[x] - Rs2.H[x];
if (res[x] > (2^15)-1) {
  res[x] = (2^15)-1;
  OV = 1;
} else if (res[x] < -2^15) {
  res[x] = -2^15;
  OV = 1;
}
Rd.H[x] = res[x];
for RV32: x=1...0,
for RV64: x=3...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_RADD16(unsigned long a, unsigned long b)
RADD16(SIMD 16-bit Signed Halving Addition)

Type: SIMD

Syntax:

```
RADD16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit signed integer element additions simultaneously. The results are halved to avoid overflow or saturation.

Description: This instruction adds the 16-bit signed integer elements in Rs1 with the 16-bit signed integer elements in Rs2. The results are first arithmetically right-shifted by 1 bit and then written to Rd.

Examples:

```
* Rs1 = 0x7FFF, Rs2 = 0x7FFF, Rd = 0x7FFF

* Rs1 = 0x8000, Rs2 = 0x8000, Rd = 0x8000

* Rs1 = 0x4000, Rs2 = 0x8000, Rd = 0xE000
```

Operations:

```
Rd.H[x] = (Rs1.H[x] + Rs2.H[x]) s>> 1; for RV32: x=1...0, for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_RCRAS16 (unsigned long a, unsigned long b)

RCRAS16 (SIMD 16-bit Signed Halving Cross Addition & Subtraction)

Type: SIMD

Syntax:

```
RCRAS16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit signed integer element addition and 16-bit signed integer element subtraction in a 32-bit chunk simultaneously. Operands are from crossed positions in 32-bit chunks. The results are halved to avoid overflow or saturation.

Description: This instruction adds the 16-bit signed integer element in [31:16] of 32-bit chunks in Rs1 with the 16-bit signed integer element in [15:0] of 32-bit chunks in Rs2, and subtracts the 16-bit signed integer element in [31:16] of 32-bit chunks in Rs2 from the 16-bit signed integer element in [15:0] of 32-bit chunks in Rs1. The element results are first arithmetically right-shifted by 1 bit and then written to [31:16] of 32-bit chunks in Rd and [15:0] of 32-bit chunks in Rd.

Examples:

```
Please see `RADD16` and `RSUB16` instructions.
```

Operations:

```
Rd.W[x][31:16] = (Rs1.W[x][31:16] + Rs2.W[x][15:0]) s>> 1;
Rd.W[x][15:0] = (Rs1.W[x][15:0] - Rs2.W[x][31:16]) s>> 1;
for RV32, x=0
for RV64, x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_RCRSA16 (unsigned long a, unsigned long b)

RCRSA16 (SIMD 16-bit Signed Halving Cross Subtraction & Addition)

Type: SIMD

Syntax:

```
RCRSA16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit signed integer element subtraction and 16-bit signed integer element addition in a 32-bit chunk simultaneously. Operands are from crossed positions in 32-bit chunks. The results are halved to avoid overflow or saturation.

Description: This instruction subtracts the 16-bit signed integer element in [15:0] of 32-bit chunks in Rs2 from the 16-bit signed integer element in [31:16] of 32-bit chunks in Rs1, and adds the 16-bit signed element integer in [15:0] of 32-bit chunks in Rs1 with the 16-bit signed integer element in [31:16] of 32-bit chunks in Rs2. The two results are first arithmetically right-shifted by 1 bit and then written to [31:16] of 32-bit chunks in Rd and [15:0] of 32-bit chunks in Rd.

Examples:

```
Please see `RADD16` and `RSUB16` instructions.
```

Operations:

```
Rd.W[x][31:16] = (Rs1.W[x][31:16] - Rs2.W[x][15:0]) s>> 1;
Rd.W[x][15:0] = (Rs1.W[x][15:0] + Rs2.W[x][31:16]) s>> 1;
for RV32, x=0
for RV64, x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_RSTAS16(unsigned long a, unsigned long b)
RSTAS16(SIMD 16-bit Signed Halving Straight Addition & Subtraction)

Type: SIMD

Syntax:

```
RSTAS16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit signed integer element addition and 16-bit signed integer element subtraction in a 32-bit chunk simultaneously. Operands are from corresponding positions in 32-bit chunks. The results are halved to avoid overflow or saturation.

Description: This instruction adds the 16-bit signed integer element in [31:16] of 32-bit chunks in Rs1 with the 16-bit signed integer element in [31:16] of 32-bit chunks in Rs2, and subtracts the 16-bit signed integer element in [15:0] of 32-bit chunks in Rs2 from the 16-bit signed integer element in [15:0] of 32-bit chunks in Rs1. The element results are first arithmetically right-shifted by 1 bit and then written to [31:16] of 32-bit chunks in Rd and [15:0] of 32-bit chunks in Rd.

Examples:

```
Please see `RADD16` and `RSUB16` instructions.
```

Operations:

```
Rd.W[x][31:16] = (Rs1.W[x][31:16] + Rs2.W[x][31:16]) s>> 1;
Rd.W[x][15:0] = (Rs1.W[x][15:0] - Rs2.W[x][15:0]) s>> 1;
for RV32, x=0
for RV64, x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_RSTSA16 (unsigned long a, unsigned long b)
RSTSA16 (SIMD 16-bit Signed Halving Straight Subtraction & Addition)

Type: SIMD

Syntax:

```
RSTSA16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit signed integer element subtraction and 16-bit signed integer element addition in a 32-bit chunk simultaneously. Operands are from corresponding positions in 32-bit chunks. The results are halved to avoid overflow or saturation.

Description: This instruction subtracts the 16-bit signed integer element in [31:16] of 32-bit chunks in Rs2 from the 16-bit signed integer element in [31:16] of 32-bit chunks in Rs1, and adds the 16-bit signed element integer in [15:0] of 32-bit chunks in Rs1 with the 16-bit signed integer element in [15:0] of 32-bit chunks in Rs2. The two results are first arithmetically right-shifted by 1 bit and then written to [31:16] of 32-bit chunks in Rd and [15:0] of 32-bit chunks in Rd.

Examples:

```
Please see `RADD16` and `RSUB16` instructions.
```

Operations:

```
Rd.W[x][31:16] = (Rs1.W[x][31:16] - Rs2.W[x][31:16]) s>> 1;
Rd.W[x][15:0] = (Rs1.W[x][15:0] + Rs2.W[x][15:0]) s>> 1;
for RV32, x=0
for RV64, x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_RSUB16(unsigned long a, unsigned long b)
RSUB16 (SIMD 16-bit Signed Halving Subtraction)

Type: SIMD Syntax:

```
RSUB16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit signed integer element subtractions simultaneously. The results are halved to avoid overflow or saturation.

Description: This instruction subtracts the 16-bit signed integer elements in Rs2 from the 16-bit signed integer elements in Rs1. The results are first arithmetically right-shifted by 1 bit and then written to Rd.

Examples:

```
* Ra = 0x7FFF, Rb = 0x8000, Rt = 0x7FFF

* Ra = 0x8000, Rb = 0x7FFF, Rt = 0x8000

* Ra = 0x8000, Rb = 0x4000, Rt = 0xA000
```

Operations:

```
Rd.H[x] = (Rs1.H[x] - Rs2.H[x]) s>> 1;

for RV32: x=1...0,

for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_STAS16(unsigned long a, unsigned long b) STAS16(SIMD 16-bit Straight Addition & Subtraction)

Type: SIMD

Syntax:

```
STAS16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit integer element addition and 16-bit integer element subtraction in a 32-bit chunk simultaneously. Operands are from corresponding positions in 32-bit chunks.

Description: This instruction adds the 16-bit integer element in [31:16] of 32-bit chunks in Rs1 with the 16-bit integer element in [31:16] of 32-bit chunks in Rs2, and writes the result to [31:16] of 32-bit chunks in Rd; at the same time, it subtracts the 16-bit integer element in [15:0] of 32-bit chunks in Rs2 from the 16-bit integer element in [15:0] of 32-bit chunks, and writes the result to [15:0] of 32- bit chunks in Rd.

Note: This instruction can be used for either signed or unsigned operations.

Operations:

```
Rd.W[x][31:16] = Rs1.W[x][31:16] + Rs2.W[x][31:16];
Rd.W[x][15:0] = Rs1.W[x][15:0] - Rs2.W[x][15:0];
for RV32, x=0
for RV64, x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_STSA16(unsigned long a, unsigned long b) STSA16(SIMD 16-bit Straight Subtraction & Addition)

Type: SIMD

Syntax:

```
STSA16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit integer element subtraction and 16-bit integer element addition in a 32-bit chunk simultaneously. Operands are from corresponding positions in 32-bit chunks.

Description: This instruction subtracts the 16-bit integer element in [31:16] of 32-bit chunks in Rs2 from the 16-bit integer element in [31:16] of 32-bit chunks in Rs1, and writes the result to [31:16] of 32-bit chunks in Rd; at the same time, it adds the 16-bit integer element in [15:0] of 32-bit chunks in Rs2 with the 16-bit integer element in [15:0] of 32-bit chunks in Rs1, and writes the result to [15:0] of 32-bit chunks in Rd.

Note: This instruction can be used for either signed or unsigned operations.

Operations:

```
Rd.W[x][31:16] = Rs1.W[x][31:16] - Rs2.W[x][31:16];
Rd.W[x][15:0] = Rs1.W[x][15:0] + Rs2.W[x][15:0];
for RV32, x=0
for RV64, x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SUB16(unsigned long a, unsigned long b) SUB16(SIMD 16-bit Subtraction)

Type: SIMD

Syntax:

```
SUB16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit integer element subtractions simultaneously.

Description: This instruction subtracts the 16-bit integer elements in Rs2 from the 16-bit integer elements in Rs1, and then writes the result to Rd.

Note: This instruction can be used for either signed or unsigned subtraction.

Operations:

```
Rd.H[x] = Rs1.H[x] - Rs2.H[x];

for RV32: x=1...0,

for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UKADD16 (unsigned long a, unsigned long b)
UKADD16 (SIMD 16-bit Unsigned Saturating Addition)

Type: SIMD

Syntax:

```
UKADD16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit unsigned integer element saturating additions simultaneously.

Description: This instruction adds the 16-bit unsigned integer elements in Rs1 with the 16-bit unsigned integer elements in Rs2. If any of the results are beyond the 16-bit unsigned number range ($0 \le RES \le 2^{16-1}$), they are saturated to the range and the OV bit is set to 1. The saturated results are written to Rd.

Operations:

```
res[x] = Rs1.H[x] + Rs2.H[x];
if (res[x] > (2^16)-1) {
  res[x] = (2^16)-1;
  OV = 1;
}
Rd.H[x] = res[x];
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UKCRAS16 (unsigned long a, unsigned long b)
UKCRAS16 (SIMD 16-bit Unsigned Saturating Cross Addition & Subtraction)

Type: SIMD

Syntax:

```
UKCRAS16 Rd, Rs1, Rs2
```

Purpose: Do one 16-bit unsigned integer element saturating addition and one 16-bit unsigned integer element saturating subtraction in a 32-bit chunk simultaneously. Operands are from crossed positions in 32-bit chunks.

Description: This instruction adds the 16-bit unsigned integer element in [31:16] of 32-bit chunks in Rs1 with the 16-bit unsigned integer element in [15:0] of 32-bit chunks in Rs2; at the same time, it subtracts the 16-bit unsigned integer element in [31:16] of 32-bit chunks in Rs2 from the 16-bit unsigned integer element in [15:0] of 32-bit chunks in Rs1. If any of the results are beyond the 16-bit unsigned number range ($0 \le RES \le 2^{16-1}$), they are saturated to the range and the OV bit is set to 1. The saturated results are written to [31:16] of 32-bit chunks in Rd for addition and [15:0] of 32-bit chunks in Rd for subtraction.

Operations:

```
res1 = Rs1.W[x][31:16] + Rs2.W[x][15:0];
res2 = Rs1.W[x][15:0] - Rs2.W[x][31:16];
if (res1 > (2^16)-1) {
    res1 = (2^16)-1;
    OV = 1;
}
if (res2 < 0) {
    res2 = 0;
    OV = 1;
}
Rd.W[x][31:16] = res1;
Rd.W[x][15:0] = res2;
for RV32, x=0
for RV64, x=1...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UKCRSA16(unsigned long a, unsigned long b)
UKCRSA16(SIMD 16-bit Unsigned Saturating Cross Subtraction & Addition)

Type: SIMD

Syntax:

```
UKCRSA16 Rd, Rs1, Rs2
```

Purpose: Do one 16-bit unsigned integer element saturating subtraction and one 16-bit unsigned integer element saturating addition in a 32-bit chunk simultaneously. Operands are from crossed positions in 32-bit chunks.

Description: This instruction subtracts the 16-bit unsigned integer element in [15:0] of 32-bit chunks in Rs2 from the 16-bit unsigned integer element in [31:16] of 32-bit chunks in Rs1; at the same time, it adds the 16-bit unsigned integer element in [31:16] of 32-bit chunks in Rs2 with the 16-bit unsigned integer element in [15:0] of 32-bit chunks in Rs1. If any of the results are beyond the 16-bit unsigned number range (0 <= RES <= 2^{16-1}), they are saturated to the range and the OV bit is set to 1. The saturated results are written to [31:16] of 32-bit chunks in Rd for subtraction and [15:0] of 32-bit chunks in Rd for addition.

Operations:

```
res1 = Rs1.W[x][31:16] - Rs2.W[x][15:0];
res2 = Rs1.W[x][15:0] + Rs2.W[x][31:16];
if (res1 < 0) {
  res1 = 0;</pre>
```

(continues on next page)

```
OV = 1;
} else if (res2 > (2^16)-1) {
  res2 = (2^16)-1;
  OV = 1;
}
Rd.W[x][31:16] = res1;
Rd.W[x][15:0] = res2;
for RV32, x=0
for RV64, x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UKSTAS16(unsigned long a, unsigned long b)
UKSTAS16(SIMD 16-bit Unsigned Saturating Straight Addition & Subtraction)

Type: SIMD

Syntax:

```
UKSTAS16 Rd, Rs1, Rs2
```

Purpose: Do one 16-bit unsigned integer element saturating addition and one 16-bit unsigned integer element saturating subtraction in a 32-bit chunk simultaneously. Operands are from corresponding positions in 32-bit chunks.

Description: This instruction adds the 16-bit unsigned integer element in [31:16] of 32-bit chunks in Rs1 with the 16-bit unsigned integer element in [31:16] of 32-bit chunks in Rs2; at the same time, it subtracts the 16-bit unsigned integer element in [15:0] of 32-bit chunks in Rs2 from the 16-bit unsigned integer element in [15:0] of 32-bit chunks in Rs1. If any of the results are beyond the 16-bit unsigned number range ($0 \le RES \le 2^{16-1}$), they are saturated to the range and the OV bit is set to 1. The saturated results are written to [31:16] of 32-bit chunks in Rd for addition and [15:0] of 32-bit chunks in Rd for subtraction.

Operations:

```
res1 = Rs1.W[x][31:16] + Rs2.W[x][31:16];
res2 = Rs1.W[x][15:0] - Rs2.W[x][15:0];
if (res1 > (2^16)-1) {
    res1 = (2^16)-1;
    OV = 1;
}
if (res2 < 0) {
    res2 = 0;
    OV = 1;
}
Rd.W[x][31:16] = res1;
Rd.W[x][15:0] = res2;
for RV32, x=0
for RV64, x=1...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UKSTSA16(unsigned long a, unsigned long b)
UKSTSA16(SIMD 16-bit Unsigned Saturating Straight Subtraction & Addition)

Type: SIMD

Syntax:

```
UKSTSA16 Rd, Rs1, Rs2
```

Purpose: Do one 16-bit unsigned integer element saturating subtraction and one 16-bit unsigned integer element saturating addition in a 32-bit chunk simultaneously. Operands are from corresponding positions in 32-bit chunks.

Description: This instruction subtracts the 16-bit unsigned integer element in [31:16] of 32-bit chunks in Rs2 from the 16-bit unsigned integer element in [31:16] of 32-bit chunks in Rs1; at the same time, it adds the 16-bit unsigned integer element in [15:0] of 32-bit chunks in Rs2 with the 16-bit unsigned integer element in [15:0] of 32-bit chunks in Rs1. If any of the results are beyond the 16-bit unsigned number range (0 <= RES <= 2^16-1), they are saturated to the range and the OV bit is set to 1. The saturated results are written to [31:16] of 32-bit chunks in Rd for subtraction and [15:0] of 32-bit chunks in Rd for addition.

Operations:

```
res1 = Rs1.W[x][31:16] - Rs2.W[x][31:16];
res2 = Rs1.W[x][15:0] + Rs2.W[x][15:0];
if (res1 < 0) {
    res1 = 0;
    OV = 1;
} else if (res2 > (2^16)-1) {
    res2 = (2^16)-1;
    OV = 1;
}
Rd.W[x][31:16] = res1;
Rd.W[x][15:0] = res2;
for RV32, x=0
for RV64, x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UKSUB16(unsigned long a, unsigned long b)
UKSUB16(SIMD 16-bit Unsigned Saturating Subtraction)

Type: SIMD

Syntax:

```
UKSUB16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit unsigned integer elements saturating subtractions simultaneously.

Description: This instruction subtracts the 16-bit unsigned integer elements in Rs2 from the 16-bit unsigned integer elements in Rs1. If any of the results are beyond the 16-bit unsigned number range (0 <=

RES \leq 2^16-1), they are saturated to the range and the OV bit is set to 1. The saturated results are written to Rd.

Operations:

```
res[x] = Rs1.H[x] - Rs2.H[x];
if (res[x] < 0) {
   res[x] = 0;
   OV = 1;
}
Rd.H[x] = res[x];
for RV32: x=1...0,
for RV64: x=3...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_URADD16(unsigned long a, unsigned long b)
URADD16(SIMD 16-bit Unsigned Halving Addition)

Type: SIMD

Syntax:

```
URADD16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit unsigned integer element additions simultaneously. The results are halved to avoid overflow or saturation.

Description: This instruction adds the 16-bit unsigned integer elements in Rs1 with the 16-bit unsigned integer elements in Rs2. The results are first logically right-shifted by 1 bit and then written to Rd.

Examples:

```
* Ra = 0x7FFF, Rb = 0x7FFF Rt = 0x7FFF

* Ra = 0x8000, Rb = 0x8000 Rt = 0x8000

* Ra = 0x4000, Rb = 0x8000 Rt = 0x6000
```

Operations:

```
Rd.H[x] = (Rs1.H[x] + Rs2.H[x]) u>> 1;

for RV32: x=1...0,

for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_URCRAS16(unsigned long a, unsigned long b)
URCRAS16(SIMD 16-bit Unsigned Halving Cross Addition & Subtraction)

Type: SIMD

Syntax:

```
URCRAS16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit unsigned integer element addition and 16-bit unsigned integer element subtraction in a 32-bit chunk simultaneously. Operands are from crossed positions in 32-bit chunks. The results are halved to avoid overflow or saturation.

Description: This instruction adds the 16-bit unsigned integer in [31:16] of 32-bit chunks in Rs1 with the 16-bit unsigned integer in [15:0] of 32-bit chunks in Rs2, and subtracts the 16-bit unsigned integer in [31:16] of 32-bit chunks in Rs2 from the 16-bit unsigned integer in [15:0] of 32-bit chunks in Rs1. The element results are first logically right-shifted by 1 bit and then written to [31:16] of 32-bit chunks in Rd and [15:0] of 32-bit chunks in Rd.

Examples:

```
Please see `URADD16` and `URSUB16` instructions.
```

Operations:

```
Rd.W[x][31:16] = (Rs1.W[x][31:16] + Rs2.W[x][15:0]) u>> 1;
Rd.W[x][15:0] = (Rs1.W[x][15:0] - Rs2.W[x][31:16]) u>> 1;
for RV32, x=0
for RV64, x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_URCRSA16 (unsigned long a, unsigned long b)

URCRSA16 (SIMD 16-bit Unsigned Halving Cross Subtraction & Addition)

Type: SIMD

Syntax:

```
URCRSA16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit unsigned integer element subtraction and 16-bit unsigned integer element addition in a 32-bit chunk simultaneously. Operands are from crossed positions in 32-bit chunks. The results are halved to avoid overflow or saturation.

Description: This instruction subtracts the 16-bit unsigned integer in [15:0] of 32-bit chunks in Rs2 from the 16-bit unsigned integer in [31:16] of 32-bit chunks in Rs1, and adds the 16-bit unsigned integer in [15:0] of 32-bit chunks in Rs1 with the 16-bit unsigned integer in [31:16] of 32-bit chunks in Rs2. The two results are first logically right-shifted by 1 bit and then written to [31:16] of 32-bit chunks in Rd and [15:0] of 32-bit chunks in Rd.

Examples:

```
Please see `URADD16` and `URSUB16` instructions.
```

Operations:

```
Rd.W[x][31:16] = (Rs1.W[x][31:16] - Rs2.W[x][15:0]) u>> 1;
Rd.W[x][15:0] = (Rs1.W[x][15:0] + Rs2.W[x][31:16]) u>> 1;
for RV32, x=0
for RV64, x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE unsigned long __RV_URSTAS16(unsigned long a, unsigned long b)
URSTAS16(SIMD 16-bit Unsigned Halving Straight Addition & Subtraction)

Type: SIMD Syntax:

```
URSTAS16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit unsigned integer element addition and 16-bit unsigned integer element subtraction in a 32-bit chunk simultaneously. Operands are from corresponding positions in 32-bit chunks. The results are halved to avoid overflow or saturation.

Description: This instruction adds the 16-bit unsigned integer in [31:16] of 32-bit chunks in Rs1 with the 16-bit unsigned integer in [31:16] of 32-bit chunks in Rs2, and subtracts the 16-bit unsigned integer in [15:0] of 32-bit chunks in Rs2 from the 16-bit unsigned integer in [15:0] of 32-bit chunks in Rs1. The element results are first logically right-shifted by 1 bit and then written to [31:16] of 32- bit chunks in Rd and [15:0] of 32-bit chunks in Rd.

Examples:

```
Please see `URADD16` and `URSUB16` instructions.
```

Operations:

```
Rd.W[x][31:16] = (Rs1.W[x][31:16] + Rs2.W[x][31:16]) u>> 1;
Rd.W[x][15:0] = (Rs1.W[x][15:0] - Rs2.W[x][15:0]) u>> 1;
for RV32, x=0
for RV64, x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_URSTSA16 (unsigned long a, unsigned long b)
URSTSA16 (SIMD 16-bit Unsigned Halving Straight Subtraction & Addition)

Type: SIMD

Syntax:

```
URCRSA16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit unsigned integer element subtraction and 16-bit unsigned integer element addition in a 32-bit chunk simultaneously. Operands are from corresponding positions in 32-bit chunks. The results are halved to avoid overflow or saturation.

Description: This instruction subtracts the 16-bit unsigned integer in [31:16] of 32-bit chunks in Rs2 from the 16-bit unsigned integer in [31:16] of 32-bit chunks in Rs1, and adds the 16-bit unsigned integer in [15:0] of 32-bit chunks in Rs1 with the 16-bit unsigned integer in [15:0] of 32-bit chunks in Rs2. The two

results are first logically right-shifted by 1 bit and then written to [31:16] of 32-bit chunks in Rd and [15:0] of 32-bit chunks in Rd.

Examples:

```
Please see `URADD16` and `URSUB16` instructions.
```

Operations:

```
Rd.W[x][31:16] = (Rs1.W[x][31:16] - Rs2.W[x][31:16]) u>> 1;
Rd.W[x][15:0] = (Rs1.W[x][15:0] + Rs2.W[x][15:0]) u>> 1;
for RV32, x=0
for RV64, x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_URSUB16(unsigned long a, unsigned long b)
URSUB16(SIMD 16-bit Unsigned Halving Subtraction)

Type: SIMD

Syntax:

```
URSUB16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit unsigned integer element subtractions simultaneously. The results are halved to avoid overflow or saturation.

Description: This instruction subtracts the 16-bit unsigned integer elements in Rs2 from the 16-bit unsigned integer elements in Rs1. The results are first logically right-shifted by 1 bit and then written to Rd.

Examples:

```
* Ra = 0x7FFF, Rb = 0x8000 Rt = 0xFFFF

* Ra = 0x8000, Rb = 0x7FFF Rt = 0x0000

* Ra = 0x8000, Rb = 0x4000 Rt = 0x2000
```

Operations:

```
Rd.H[x] = (Rs1.H[x] - Rs2.H[x]) u>> 1;

for RV32: x=1...0,

for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

SIMD 8-bit Addition & Subtraction Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_ADD8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_KADD8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_KSUB8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_RADD8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_RSUB8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_SUB8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_UKADD8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_UKSUB8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_URADD8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_URADD8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_URADD8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_URSUB8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_URSUB8 (unsigned long a, unsigned long b)
```

SIMD 8-bit Addition & Subtraction Instructions.

Based on the types of the four 8-bit arithmetic operations, the SIMD 8-bit add/subtract instructions can be classified into 2 main categories: Addition (four 8-bit addition), and Subtraction (four 8-bit subtraction). Based on the way of how an overflow condition is handled for singed or unsigned operation, the SIMD 8-bit add/subtract instructions can be classified into 5 groups: Wrap-around (dropping overflow), Signed Halving (keeping overflow by dropping 1 LSB bit), Unsigned Halving, Signed Saturation (clipping overflow), and Unsigned Saturation. Together, there are 10 SIMD 8-bit add/subtract instructions.

Functions

```
__STATIC_FORCEINLINE unsigned long __RV_ADD8 (unsigned long a, unsigned long b)
    ADD8 (SIMD 8-bit Addition)

Type: SIMD

Syntax:

ADD8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit integer element additions simultaneously.

Description: This instruction adds the 8-bit integer elements in Rs1 with the 8-bit integer elements in Rs2, and then writes the 8-bit element results to Rd.

Note: This instruction can be used for either signed or unsigned addition.

Operations:

```
Rd.B[x] = Rs1.B[x] + Rs2.B[x];

for RV32: x=3...0,

for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KADD8 (unsigned long a, unsigned long b)

KADD8 (SIMD 8-bit Signed Saturating Addition)

Type: SIMD

Syntax:

```
KADD8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit signed integer element saturating additions simultaneously.

Description: This instruction adds the 8-bit signed integer elements in Rs1 with the 8-bit signed integer elements in Rs2. If any of the results are beyond the Q7 number range $(-2^7 \le Q7 \le 2^7-1)$, they are saturated to the range and the OV bit is set to 1. The saturated results are written to Rd.

Operations:

```
res[x] = Rs1.B[x] + Rs2.B[x];
if (res[x] > 127) {
   res[x] = 127;
   OV = 1;
} else if (res[x] < -128) {
   res[x] = -128;
   OV = 1;
}
Rd.B[x] = res[x];
for RV32: x=3...0,
for RV64: x=7...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KSUB8 (unsigned long a, unsigned long b)
KSUB8 (SIMD 8-bit Signed Saturating Subtraction)

Type: SIMD

Syntax:

```
KSUB8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit signed elements saturating subtractions simultaneously.

Operations:

```
res[x] = Rs1.B[x] - Rs2.B[x];
if (res[x] > (2^7)-1) {
  res[x] = (2^7)-1;
   OV = 1;
} else if (res[x] < -2^7) {
  res[x] = -2^7;
   OV = 1;</pre>
```

(continues on next page)

```
Rd.B[x] = res[x];
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_RADD8 (unsigned long a, unsigned long b)
RADD8 (SIMD 8-bit Signed Halving Addition)

Type: SIMD

Syntax:

```
RADD8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit signed integer element additions simultaneously. The element results are halved to avoid overflow or saturation.

Description: This instruction adds the 8-bit signed integer elements in Rs1 with the 8-bit signed integer elements in Rs2. The results are first arithmetically right-shifted by 1 bit and then written to Rd.

Examples:

```
* Rs1 = 0x7F, Rs2 = 0x7F, Rd = 0x7F

* Rs1 = 0x80, Rs2 = 0x80, Rd = 0x80

* Rs1 = 0x40, Rs2 = 0x80, Rd = 0xE0
```

Operations:

```
Rd.B[x] = (Rs1.B[x] + Rs2.B[x]) s>> 1; for RV32: x=3...0, for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE unsigned long __RV_RSUB8(unsigned long a, unsigned long b)
RSUB8(SIMD 8-bit Signed Halving Subtraction)

Type: SIMD

Syntax:

```
RSUB8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit signed integer element subtractions simultaneously. The results are halved to avoid overflow or saturation.

Description: This instruction subtracts the 8-bit signed integer elements in Rs2 from the 8-bit signed integer elements in Rs1. The results are first arithmetically right-shifted by 1 bit and then written to Rd.

Examples:

```
* Rs1 = 0x7F, Rs2 = 0x80, Rd = 0x7F

* Rs1 = 0x80, Rs2 = 0x7F, Rd = 0x80

* Rs1= 0x80, Rs2 = 0x40, Rd = 0xA0
```

Operations:

```
Rd.B[x] = (Rs1.B[x] - Rs2.B[x]) s>> 1;

for RV32: x=3...0,

for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SUB8 (unsigned long a, unsigned long b) SUB8 (SIMD 8-bit Subtraction)

Type: SIMD

Syntax:

```
SUB8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit integer element subtractions simultaneously.

Description: This instruction subtracts the 8-bit integer elements in Rs2 from the 8-bit integer elements in Rs1, and then writes the result to Rd.

Note: This instruction can be used for either signed or unsigned subtraction.

Operations:

```
Rd.B[x] = Rs1.B[x] - Rs2.B[x];

for RV32: x=3...0,

for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UKADD8(unsigned long a, unsigned long b)
UKADD8 (SIMD 8-bit Unsigned Saturating Addition)

Type: SIMD

Syntax:

```
UKADD8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit unsigned integer element saturating additions simultaneously.

Description: This instruction adds the 8-bit unsigned integer elements in Rs1 with the 8-bit unsigned integer elements in Rs2. If any of the results are beyond the 8-bit unsigned number range (0 <= RES <= 28-1), they are saturated to the range and the OV bit is set to 1. The saturated results are written to Rd.

Operations:

```
res[x] = Rs1.B[x] + Rs2.B[x];
if (res[x] > (2^8)-1) {
  res[x] = (2^8)-1;
  OV = 1;
}
Rd.B[x] = res[x];
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UKSUB8(unsigned long a, unsigned long b)
UKSUB8(SIMD 8-bit Unsigned Saturating Subtraction)

Type: SIMD

Syntax:

```
UKSUB8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit unsigned integer elements saturating subtractions simultaneously.

Description: This instruction subtracts the 8-bit unsigned integer elements in Rs2 from the 8-bit unsigned integer elements in Rs1. If any of the results are beyond the 8-bit unsigned number range $(0 \le RES \le 28-1)$, they are saturated to the range and the OV bit is set to 1. The saturated results are written to Rd.

Operations:

```
res[x] = Rs1.B[x] - Rs2.B[x];
if (res[x] < 0) {
  res[x] = 0;
  OV = 1;
}
Rd.B[x] = res[x];
for RV32: x=3...0,
for RV64: x=7...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_URADD8(unsigned long a, unsigned long b)
URADD8 (SIMD 8-bit Unsigned Halving Addition)

Type: SIMD

Syntax:

```
URADD8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit unsigned integer element additions simultaneously. The results are halved to avoid overflow or saturation.

Description: This instruction adds the 8-bit unsigned integer elements in Rs1 with the 8-bit unsigned integer elements in Rs2. The results are first logically right-shifted by 1 bit and then written to Rd.

Examples:

```
* Ra = 0x7F, Rb = 0x7F, Rt = 0x7F

* Ra = 0x80, Rb = 0x80, Rt = 0x80

* Ra = 0x40, Rb = 0x80, Rt = 0x60
```

Operations:

```
Rd.B[x] = (Rs1.B[x] + Rs2.B[x]) u>> 1;

for RV32: x=3...0,

for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_URSUB8(unsigned long a, unsigned long b)
URSUB8(SIMD 8-bit Unsigned Halving Subtraction)

Type: SIMD

Syntax:

```
URSUB8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit unsigned integer element subtractions simultaneously. The results are halved to avoid overflow or saturation.

Description: This instruction subtracts the 8-bit unsigned integer elements in Rs2 from the 8-bit unsigned integer elements in Rs1. The results are first logically right-shifted by 1 bit and then written to Rd.

Examples:

```
* Ra = 0x7F, Rb = 0x80 Rt = 0xFF

* Ra = 0x80, Rb = 0x7F Rt = 0x00

* Ra = 0x80, Rb = 0x40 Rt = 0x20
```

Operations:

```
Rd.B[x] = (Rs1.B[x] - Rs2.B[x]) u>> 1;

for RV32: x=3...0,

for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

• [in] b: unsigned long type of value stored in b

SIMD 16-bit Shift Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_KSLL16(unsigned long a, unsigned int b)
 _STATIC_FORCEINLINE unsigned long __RV_KSLRA16(unsigned long a, int b)
 _STATIC_FORCEINLINE unsigned long __RV_KSLRA16_U(unsigned long a, int b)
__STATIC_FORCEINLINE unsigned long __RV_SLL16(unsigned long a, unsigned int b)
 _STATIC_FORCEINLINE unsigned long \_\_	ext{RV\_SRA16} (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_SRA16_U(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_SRL16(unsigned long a, unsigned int b)
__STATIC_FORCEINLINE unsigned long ___RV_SRL16_U(unsigned long a, unsigned int b)
___RV_KSLLI16 (a, b)
___RV_SLLI16 (a, b)
___RV_SRAI16 (a, b)
 _RV_SRAI16_U (a, b)
___RV_SRLI16 (a, b)
___RV_SRLI16_U (a, b)
group NMSIS_Core_DSP_Intrinsic_SIMD_16B_SHIFT
    SIMD 16-bit Shift Instructions.
    there are 14 SIMD 16-bit shift instructions.
    Defines
```

```
__RV_KSLLI16 (a, b)
KSLLI16 (SIMD 16-bit Saturating Shift Left Logical Immediate)
Type: SIMD
Syntax:

KSLLI16 Rd, Rs1, imm4u
```

Purpose: Do 16-bit elements logical left shift operations with saturation simultaneously. The shift amount is an immediate value.

Description: The 16-bit data elements in Rs1 are left-shifted logically. The shifted out bits are filled with zero and the shift amount is specified by the imm4u constant. Any shifted value greater than 2^15-1 is saturated to 2^15-1. Any shifted value smaller than -2^15 is saturated to -2^15. And the saturated results are written to Rd. If any saturation is performed, set OV bit to 1.

Operations:

(continues on next page)

```
res = 0x7ffff; OV = 1;
} else if (res < -2^15) {
   res = 0x8000; OV = 1;
}
Rd.H[x] = res[15:0];
} else {
   Rd = Rs1;
}
for RV32: x=1...0,
for RV64: x=3...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

```
__RV_SLLI16 (a, b)
```

SLLI16 (SIMD 16-bit Shift Left Logical Immediate)

Type: SIMD

Syntax:

```
SLLI16 Rd, Rs1, imm4[3:0]
```

Purpose: Do 16-bit element logical left shift operations simultaneously. The shift amount is an immediate value.

Description: The 16-bit elements in Rs1 are left-shifted logically. The shifted out bits are filled with zero and the shift amount is specified by the imm4[3:0] constant. And the results are written to Rd.

Operations:

```
sa = imm4[3:0];
Rd.H[x] = Rs1.H[x] << sa;
for RV32: x=1...0,
for RV64: x=3...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__**RV_SRAI16** (a, b)

SRAI16 (SIMD 16-bit Shift Right Arithmetic Immediate)

Type: SIMD

Syntax:

```
SRAI16 Rd, Rs1, imm4u
SRAI16.u Rd, Rs1, imm4u
```

Purpose: Do 16-bit elements arithmetic right shift operations simultaneously. The shift amount is an immediate value. The .u form performs additional rounding up operations on the shifted results.

Description: The 16-bit data elements in Rs1 are right-shifted arithmetically, that is, the shifted out bits are filled with the sign-bit of the 16-bit data elements. The shift amount is specified by the imm4u constant. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 16-bit data to calculate the final results. And the results are written to Rd.

Operations:

```
sa = imm4u[3:0];
if (sa > 0) {
  if (`.u` form) { // SRAI16.u
    res[15:-1] = SE17(Rs1.H[x][15:sa-1]) + 1;
    Rd.H[x] = res[15:0];
  } else { // SRAI16
    Rd.H[x] = SE16(Rs1.H[x][15:sa]);
  }
} else {
  Rd = Rs1;
}
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

___**RV_SRAI16_U** (a, b)

SRAI16.u (SIMD 16-bit Rounding Shift Right Arithmetic Immediate)

Type: SIMD

Syntax:

```
SRAI16 Rd, Rs1, imm4u
SRAI16.u Rd, Rs1, imm4u
```

Purpose: Do 16-bit elements arithmetic right shift operations simultaneously. The shift amount is an immediate value. The .u form performs additional rounding up operations on the shifted results.

Description: The 16-bit data elements in Rs1 are right-shifted arithmetically, that is, the shifted out bits are filled with the sign-bit of the 16-bit data elements. The shift amount is specified by the imm4u constant. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 16-bit data to calculate the final results. And the results are written to Rd.

Operations:

```
sa = imm4u[3:0];
if (sa > 0) {
  if (`.u` form) { // SRAI16.u
    res[15:-1] = SE17(Rs1.H[x][15:sa-1]) + 1;
    Rd.H[x] = res[15:0];
} else { // SRAI16
    Rd.H[x] = SE16(Rs1.H[x][15:sa]);
}
```

(continues on next page)

```
} else {
  Rd = Rs1;
}
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
___RV_SRLI16 (a, b)
```

SRLI16 (SIMD 16-bit Shift Right Logical Immediate)

Type: SIMD

Syntax:

```
SRLI16 Rt, Ra, imm4u
SRLI16.u Rt, Ra, imm4u
```

Purpose: Do 16-bit elements logical right shift operations simultaneously. The shift amount is an immediate value. The .u form performs additional rounding up operations on the shifted results.

Description: The 16-bit data elements in Rs1 are right-shifted logically, that is, the shifted out bits are filled with zero. The shift amount is specified by the imm4u constant. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 16-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = imm4u;
if (sa > 0) {
  if (`.u` form) { // SRLI16.u
    res[16:0] = ZE17(Rs1.H[x][15:sa-1]) + 1;
    Rd.H[x] = res[16:1];
  } else { // SRLI16
    Rd.H[x] = ZE16(Rs1.H[x][15:sa]);
  }
} else {
  Rd = Rs1;
}
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

```
\_RV_SRLI16_U (a, b)
```

SRLI16.u (SIMD 16-bit Rounding Shift Right Logical Immediate)

Type: SIMD

Syntax:

```
SRLI16 Rt, Ra, imm4u
SRLI16.u Rt, Ra, imm4u
```

Purpose: Do 16-bit elements logical right shift operations simultaneously. The shift amount is an immediate value. The .u form performs additional rounding up operations on the shifted results.

Description: The 16-bit data elements in Rs1 are right-shifted logically, that is, the shifted out bits are filled with zero. The shift amount is specified by the imm4u constant. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 16-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = imm4u;
if (sa > 0) {
  if (`.u` form) { // SRLI16.u
    res[16:0] = ZE17(Rs1.H[x][15:sa-1]) + 1;
    Rd.H[x] = res[16:1];
  } else { // SRLI16
    Rd.H[x] = ZE16(Rs1.H[x][15:sa]);
  }
} else {
  Rd = Rs1;
}
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

Functions

__STATIC_FORCEINLINE unsigned long __RV_KSLL16(unsigned long a, unsigned int b) KSLL16(SIMD 16-bit Saturating Shift Left Logical)

Type: SIMD

Syntax:

```
KSLL16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit elements logical left shift operations with saturation simultaneously. The shift amount is a variable from a GPR.

Description: The 16-bit data elements in Rs1 are left-shifted logically. The shifted out bits are filled with zero and the shift amount is specified by the low-order 4-bits of the value in the Rs2 register. Any shifted value greater than 2^15-1 is saturated to 2^15-1. Any shifted value smaller than -2^15 is saturated to -2^15. And the saturated results are written to Rd. If any saturation is performed, set OV bit to 1.

Operations:

```
sa = Rs2[3:0];
if (sa != 0) {
  res[(15+sa):0] = Rs1.H[x] << sa;
  if (res > (2^15)-1) {
    res = 0x7fff; OV = 1;
  } else if (res < -2^15) {
    res = 0x8000; OV = 1;
  }
  Rd.H[x] = res[15:0];
} else {
  Rd = Rs1;
}
for RV32: x=1...0,
for RV64: x=3...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KSLRA16 (unsigned long a, int b)

KSLRA16 (SIMD 16-bit Shift Left Logical with Saturation or Shift Right Arithmetic)

Type: SIMD

Syntax:

```
KSLRA16 Rd, Rs1, Rs2
KSLRA16.u Rd, Rs1, Rs2
```

Purpose: Do 16-bit elements logical left (positive) or arithmetic right (negative) shift operation with Q15 saturation for the left shift. The . u form performs additional rounding up operations for the right shift.

Description: The 16-bit data elements of Rs1 are left-shifted logically or right-shifted arithmetically based on the value of Rs2[4:0]. Rs2[4:0] is in the signed range of [-2^4, 2^4-1]. A positive Rs2[4:0] means logical left shift and a negative Rs2[4:0] means arithmetic right shift. The shift amount is the absolute value of Rs2[4:0]. However, the behavior of Rs2[4:0] == -2^4 (0×10) is defined to be equivalent to the behavior of Rs2[4:0] == $-(2^4-1)$ (0×11). The left-shifted results are saturated to the 16-bit signed integer range of [-2^15, 2^15-1]. For the .u form of the instruction, the right-shifted results are added a 1 to the most significant discarded bit position for rounding effect. After the shift, saturation, or rounding, the final results are written to Rd. If any saturation happens, this instruction sets the OV flag. The value of Rs2[31:5] will not affect this instruction.

Operations:

```
if (Rs2[4:0] < 0) {
    sa = -Rs2[4:0];
    sa = (sa == 16)? 15 : sa;
    if (`.u` form) {
        res[15:-1] = SE17(Rs1.H[x][15:sa-1]) + 1;
        Rd.H[x] = res[15:0];
    } else {
        Rd.H[x] = SE16(Rs1.H[x][15:sa]);
    }
} else {
    sa = Rs2[3:0];</pre>
```

(continues on next page)

```
res[(15+sa):0] = Rs1.H[x] <<(logic) sa;
if (res > (2^15)-1) {
    res[15:0] = 0x7fff; OV = 1;
} else if (res < -2^15) {
    res[15:0] = 0x8000; OV = 1;
}
d.H[x] = res[15:0];
}
for RV32: x=1...0,
for RV64: x=3...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: int type of value stored in b

_STATIC_FORCEINLINE unsigned long __RV_KSLRA16_U(unsigned long a, int b)

KSLRA16.u (SIMD 16-bit Shift Left Logical with Saturation or Rounding Shift Right Arithmetic)

Type: SIMD

Syntax:

```
KSLRA16 Rd, Rs1, Rs2
KSLRA16.u Rd, Rs1, Rs2
```

Purpose: Do 16-bit elements logical left (positive) or arithmetic right (negative) shift operation with Q15 saturation for the left shift. The . u form performs additional rounding up operations for the right shift.

Description: The 16-bit data elements of Rs1 are left-shifted logically or right-shifted arithmetically based on the value of Rs2[4:0]. Rs2[4:0] is in the signed range of [-2^4, 2^4-1]. A positive Rs2[4:0] means logical left shift and a negative Rs2[4:0] means arithmetic right shift. The shift amount is the absolute value of Rs2[4:0]. However, the behavior of Rs2[4:0] == -2^4 (0×10) is defined to be equivalent to the behavior of Rs2[4:0] == $-(2^4-1)$ (0×11). The left-shifted results are saturated to the 16-bit signed integer range of [-2^15, 2^15-1]. For the .u form of the instruction, the right-shifted results are added a 1 to the most significant discarded bit position for rounding effect. After the shift, saturation, or rounding, the final results are written to Rd. If any saturation happens, this instruction sets the OV flag. The value of Rs2[31:5] will not affect this instruction.

Operations:

```
if (Rs2[4:0] < 0) {
    sa = -Rs2[4:0];
    sa = (sa == 16)? 15 : sa;
    if (`.u` form) {
        res[15:-1] = SE17(Rs1.H[x][15:sa-1]) + 1;
        Rd.H[x] = res[15:0];
    } else {
        Rd.H[x] = SE16(Rs1.H[x][15:sa]);
    }
} else {
    sa = Rs2[3:0];
    res[(15+sa):0] = Rs1.H[x] <<(logic) sa;
    if (res > (2^15)-1) {
        res[15:0] = 0x7fff; OV = 1;
    }
}
```

(continues on next page)

```
} else if (res < -2^15) {
    res[15:0] = 0x8000; OV = 1;
}
d.H[x] = res[15:0];
}
for RV32: x=1...0,
for RV64: x=3...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SLL16(unsigned long a, unsigned int b) SLL16(SIMD 16-bit Shift Left Logical)

Type: SIMD

Syntax:

```
SLL16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit elements logical left shift operations simultaneously. The shift amount is a variable from a GPR.

Description: The 16-bit elements in Rs1 are left-shifted logically. And the results are written to Rd. The shifted out bits are filled with zero and the shift amount is specified by the low-order 4-bits of the value in the Rs2 register.

Operations:

```
sa = Rs2[3:0];
Rd.H[x] = Rs1.H[x] << sa;
for RV32: x=1...0,
for RV64: x=3...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SRA16(unsigned long a, unsigned long b)
SRA16(SIMD 16-bit Shift Right Arithmetic)

Type: SIMD

Syntax:

```
SRA16 Rd, Rs1, Rs2
SRA16.u Rd, Rs1, Rs2
```

Purpose: Do 16-bit element arithmetic right shift operations simultaneously. The shift amount is a variable from a GPR. The . u form performs additional rounding up operations on the shifted results.

Description: The 16-bit data elements in Rs1 are right-shifted arithmetically, that is, the shifted out bits are filled with the sign-bit of the data elements. The shift amount is specified by the low-order 4-bits of the value in the Rs2 register. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 16-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = Rs2[3:0];
if (sa != 0) {
   if (`.u` form) { // SRA16.u
      res[15:-1] = SE17(Rs1.H[x][15:sa-1]) + 1;
      Rd.H[x] = res[15:0];
   } else { // SRA16
      Rd.H[x] = SE16(Rs1.H[x][15:sa])
   }
} else {
   Rd = Rs1;
}
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SRA16_U(unsigned long a, unsigned long b)
SRA16.u (SIMD 16-bit Rounding Shift Right Arithmetic)

Type: SIMD

Syntax:

```
SRA16 Rd, Rs1, Rs2
SRA16.u Rd, Rs1, Rs2
```

Purpose: Do 16-bit element arithmetic right shift operations simultaneously. The shift amount is a variable from a GPR. The .u form performs additional rounding up operations on the shifted results.

Description: The 16-bit data elements in Rs1 are right-shifted arithmetically, that is, the shifted out bits are filled with the sign-bit of the data elements. The shift amount is specified by the low-order 4-bits of the value in the Rs2 register. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 16-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = Rs2[3:0];
if (sa != 0) {
  if (`.u` form) { // SRA16.u
    res[15:-1] = SE17(Rs1.H[x][15:sa-1]) + 1;
    Rd.H[x] = res[15:0];
  } else { // SRA16
    Rd.H[x] = SE16(Rs1.H[x][15:sa])
  }
} else {
```

(continues on next page)

```
Rd = Rs1;
}
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SRL16(unsigned long a, unsigned int b) SRL16(SIMD 16-bit Shift Right Logical)

Type: SIMD

Syntax:

```
SRL16 Rt, Ra, Rb
SRL16.u Rt, Ra, Rb
```

Purpose: Do 16-bit elements logical right shift operations simultaneously. The shift amount is a variable from a GPR. The .u form performs additional rounding upoperations on the shifted results.

Description: The 16-bit data elements in Rs1 are right-shifted logically, that is, the shifted out bits are filled with zero. The shift amount is specified by the low-order 4-bits of the value in the Rs2 register. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 16-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = Rs2[3:0];
if (sa > 0) {
  if (`.u` form) { // SRL16.u
    res[16:0] = ZE17(Rs1.H[x][15:sa-1]) + 1;
    Rd.H[x] = res[16:1];
  } else { // SRL16
    Rd.H[x] = ZE16(Rs1.H[x][15:sa]);
  }
} else {
  Rd = Rs1;
}
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SRL16_U(unsigned long a, unsigned int b)
SRL16.u (SIMD 16-bit Rounding Shift Right Logical)

Type: SIMD

Syntax:

```
SRL16 Rt, Ra, Rb
SRL16.u Rt, Ra, Rb
```

Purpose: Do 16-bit elements logical right shift operations simultaneously. The shift amount is a variable from a GPR. The .u form performs additional rounding upoperations on the shifted results.

Description: The 16-bit data elements in Rs1 are right-shifted logically, that is, the shifted out bits are filled with zero. The shift amount is specified by the low-order 4-bits of the value in the Rs2 register. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 16-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = Rs2[3:0];
if (sa > 0) {
  if (`.u` form) { // SRL16.u
    res[16:0] = ZE17(Rs1.H[x][15:sa-1]) + 1;
    Rd.H[x] = res[16:1];
  } else { // SRL16
    Rd.H[x] = ZE16(Rs1.H[x][15:sa]);
  }
} else {
  Rd = Rs1;
}
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

SIMD 8-bit Shift Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_KSLL8(unsigned long a, unsigned int b)
__STATIC_FORCEINLINE unsigned long __RV_KSLRA8_U(unsigned long a, int b)
__STATIC_FORCEINLINE unsigned long __RV_KSLRA8_U(unsigned long a, int b)
__STATIC_FORCEINLINE unsigned long __RV_SLL8(unsigned long a, unsigned int b)
__STATIC_FORCEINLINE unsigned long __RV_SRA8_(unsigned long a, unsigned int b)
__STATIC_FORCEINLINE unsigned long __RV_SRA8_U(unsigned long a, unsigned int b)
__STATIC_FORCEINLINE unsigned long __RV_SRL8(unsigned long a, unsigned int b)
__STATIC_FORCEINLINE unsigned long __RV_SRL8_U(unsigned long a, unsigned int b)
__RV_KSLL18 (a, b)
__RV_SLL18 (a, b)
__RV_SRA18_U(a, b)
__RV_SRA18_U(a, b)
__RV_SRA18_U(a, b)
__RV_SRA18_U(a, b)
__RV_SRL18 (a, b)
```

Defines

```
__RV_KSLLI8 (a, b)

KSLLI8 (SIMD 8-bit Saturating Shift Left Logical Immediate)

Type: SIMD
```

```
KSLLI8 Rd, Rs1, imm3u
```

Purpose: Do 8-bit elements logical left shift operations with saturation simultaneously. The shift amount is an immediate value.

Description: The 8-bit data elements in Rs1 are left-shifted logically. The shifted out bits are filled with zero and the shift amount is specified by the imm3u constant. Any shifted value greater than 2^7-1 is saturated to 2^7-1. Any shifted value smaller than -2^7 is saturated to -2^7. And the saturated results are written to Rd. If any saturation is performed, set OV bit to 1.

Operations:

Syntax:

```
sa = imm3u[2:0];
if (sa != 0) {
  res[(7+sa):0] = Rs1.B[x] << sa;
  if (res > (2^7)-1) {
    res = 0x7f; OV = 1;
  } else if (res < -2^7) {
    res = 0x80; OV = 1;
  }
  Rd.B[x] = res[7:0];
} else {
  Rd = Rs1;
}
for RV32: x=3...0,
for RV64: x=7...0</pre>
```

Return value stored in unsigned long type

Parameters

- ullet [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

```
___RV_SLLI8 (a, b)
```

SLLI8 (SIMD 8-bit Shift Left Logical Immediate)

Type: SIMD Syntax:

```
SLLI8 Rd, Rs1, imm3u
```

Purpose: Do 8-bit elements logical left shift operations simultaneously. The shift amount is an immediate value.

Description: The 8-bit elements in Rs1 are left-shifted logically. And the results are written to Rd. The shifted out bits are filled with zero and the shift amount is specified by the imm3u constant.

Operations:

```
sa = imm3u[2:0];
Rd.B[x] = Rs1.B[x] << sa;
for RV32: x=3...0,
for RV64: x=7...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

```
__RV_SRAI8 (a, b)
```

SRAI8 (SIMD 8-bit Shift Right Arithmetic Immediate)

Type: SIMD

Syntax:

```
SRAI8 Rd, Rs1, imm3u
SRAI8.u Rd, Rs1, imm3u
```

Purpose: Do 8-bit element arithmetic right shift operations simultaneously. The shift amount is an immediate value. The .u form performs additional rounding up operations on the shifted results.

Description: The 8-bit data elements in Rs1 are right-shifted arithmetically, that is, the shifted out bits are filled with the sign-bit of the data elements. The shift amount is specified by the imm3u constant. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 8-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = imm3u[2:0];
if (sa > 0) {
  if (`.u` form) { // SRA8.u
    res[7:-1] = SE9(Rs1.B[x][7:sa-1]) + 1;
    Rd.B[x] = res[7:0];
  } else { // SRA8
    Rd.B[x] = SE8(Rd.B[x][7:sa])
  }
} else {
  Rd = Rs1;
}
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

• [in] b: unsigned int type of value stored in b

```
___RV_SRAI8_U (a, b)
```

SRAI8.u (SIMD 8-bit Rounding Shift Right Arithmetic Immediate)

Type: SIMD

Syntax:

```
SRAI8 Rd, Rs1, imm3u
SRAI8.u Rd, Rs1, imm3u
```

Purpose: Do 8-bit element arithmetic right shift operations simultaneously. The shift amount is an immediate value. The .u form performs additional rounding up operations on the shifted results.

Description: The 8-bit data elements in Rs1 are right-shifted arithmetically, that is, the shifted out bits are filled with the sign-bit of the data elements. The shift amount is specified by the imm3u constant. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 8-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = imm3u[2:0];
if (sa > 0) {
  if (`.u` form) { // SRA8.u
    res[7:-1] = SE9(Rs1.B[x][7:sa-1]) + 1;
    Rd.B[x] = res[7:0];
  } else { // SRA8
    Rd.B[x] = SE8(Rd.B[x][7:sa])
  }
} else {
  Rd = Rs1;
}
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

___**RV_SRLI8** (a, b)

SRLI8 (SIMD 8-bit Shift Right Logical Immediate)

Type: SIMD

Syntax:

```
SRLI8 Rt, Ra, imm3u
SRLI8.u Rt, Ra, imm3u
```

Purpose: Do 8-bit elements logical right shift operations simultaneously. The shift amount is an immediate value. The . u form performs additional rounding up operations on the shifted results.

Description: The 8-bit data elements in Rs1 are right-shifted logically, that is, the shifted out bits are filled with zero. The shift amount is specified by the imm3u constant. For the rounding operation of the .u

form, a value of 1 is added to the most significant discarded bit of each 8-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = imm3u[2:0];
if (sa > 0) {
   if (`.u` form) { // SRLI8.u
      res[8:0] = ZE9(Rs1.B[x][7:sa-1]) + 1;
      Rd.B[x] = res[8:1];
   } else { // SRLI8
      Rd.B[x] = ZE8(Rs1.B[x][7:sa]);
   }
} else {
   Rd = Rs1;
}
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

```
___RV_SRLI8_U (a, b)
```

SRLI8.u (SIMD 8-bit Rounding Shift Right Logical Immediate)

Type: SIMD

Syntax:

```
SRLI8 Rt, Ra, imm3u
SRLI8.u Rt, Ra, imm3u
```

Purpose: Do 8-bit elements logical right shift operations simultaneously. The shift amount is an immediate value. The .u form performs additional rounding up operations on the shifted results.

Description: The 8-bit data elements in Rs1 are right-shifted logically, that is, the shifted out bits are filled with zero. The shift amount is specified by the imm3u constant. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 8-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = imm3u[2:0];
if (sa > 0) {
  if (`.u` form) { // SRLI8.u
    res[8:0] = ZE9(Rs1.B[x][7:sa-1]) + 1;
    Rd.B[x] = res[8:1];
  } else { // SRLI8
    Rd.B[x] = ZE8(Rs1.B[x][7:sa]);
  }
} else {
  Rd = Rs1;
}
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

Functions

__STATIC_FORCEINLINE unsigned long __RV_KSLL8 (unsigned long a, unsigned int b) KSLL8 (SIMD 8-bit Saturating Shift Left Logical)

Type: SIMD

Syntax:

```
KSLL8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit elements logical left shift operations with saturation simultaneously. The shift amount is a variable from a GPR.

Description: The 8-bit data elements in Rs1 are left-shifted logically. The shifted out bits are filled with zero and the shift amount is specified by the low-order 3-bits of the value in the Rs2 register. Any shifted value greater than 2^7-1 is saturated to 2^7-1. Any shifted value smaller than -2^7 is saturated to -2^7. And the saturated results are written to Rd. If any saturation is performed, set OV bit to 1.

Operations:

```
sa = Rs2[2:0];
if (sa != 0) {
    res[(7+sa):0] = Rs1.B[x] << sa;
    if (res > (2^7)-1) {
        res = 0x7f; OV = 1;
    } else if (res < -2^7) {
        res = 0x80; OV = 1;
    }
    Rd.B[x] = res[7:0];
} else {
    Rd = Rs1;
}
for RV32: x=3...0,
for RV64: x=7...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KSLRA8 (unsigned long a, int b)

KSLRA8 (SIMD 8-bit Shift Left Logical with Saturation or Shift Right Arithmetic)

Type: SIMD

Syntax:

```
KSLRA8 Rd, Rs1, Rs2
KSLRA8.u Rd, Rs1, Rs2
```

Purpose: Do 8-bit elements logical left (positive) or arithmetic right (negative) shift operation with Q7 saturation for the left shift. The . u form performs additional rounding up operations for the right shift.

Description: The 8-bit data elements of Rs1 are left-shifted logically or right-shifted arithmetically based on the value of Rs2[3:0]. Rs2[3:0] is in the signed range of [-2^3, 2^3-1]. A positive Rs2[3:0] means logical left shift and a negative Rs2[3:0] means arithmetic right shift. The shift amount is the absolute value of Rs2[3:0]. However, the behavior of Rs2[3:0]==-2^3 (0x8) is defined to be equivalent to the behavior of Rs2[3:0]==-(2^3-1) (0x9). The left-shifted results are saturated to the 8-bit signed integer range of [-2^7, 2^7-1]. For the .u form of the instruction, the right-shifted results are added a 1 to the most significant discarded bit position for rounding effect. After the shift, saturation, or rounding, the final results are written to Rd. If any saturation happens, this instruction sets the OV flag. The value of Rs2[31:4] will not affect this instruction.

Operations:

```
if (Rs2[3:0] < 0)
 sa = -Rs2[3:0];
  sa = (sa == 8)? 7 : sa;
  if (`.u` form) {
   res[7:-1] = SE9(Rs1.B[x][7:sa-1]) + 1;
   Rd.B[x] = res[7:0];
  } else {
    Rd.B[x] = SE8(Rs1.B[x][7:sa]);
} else {
 sa = Rs2[2:0];
 res[(7+sa):0] = Rs1.B[x] <<(logic) sa;
  if (res > (2^7)-1) {
    res[7:0] = 0x7f; OV = 1;
  \} else if (res < -2^7) {
    res[7:0] = 0x80; OV = 1;
 Rd.B[x] = res[7:0];
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: int type of value stored in b

_STATIC_FORCEINLINE unsigned long __RV_KSLRA8_U (unsigned long a, int b)
KSLRA8.u (SIMD 8-bit Shift Left Logical with Saturation or Rounding Shift Right Arithmetic)

Type: SIMD

Syntax:

```
KSLRA8 Rd, Rs1, Rs2
KSLRA8.u Rd, Rs1, Rs2
```

Purpose: Do 8-bit elements logical left (positive) or arithmetic right (negative) shift operation with Q7 saturation for the left shift. The . u form performs additional rounding up operations for the right shift.

Description: The 8-bit data elements of Rs1 are left-shifted logically or right-shifted arithmetically based on the value of Rs2[3:0]. Rs2[3:0] is in the signed range of [-2^3, 2^3-1]. A positive Rs2[3:0] means

logical left shift and a negative Rs2[3:0] means arithmetic right shift. The shift amount is the absolute value of Rs2[3:0]. However, the behavior of Rs2[3:0]== -2^3 (0x8) is defined to be equivalent to the behavior of Rs2[3:0]== $-(2^3-1)$ (0x9). The left-shifted results are saturated to the 8-bit signed integer range of [-2^7 , -2^7 -1]. For the .u form of the instruction, the right-shifted results are added a 1 to the most significant discarded bit position for rounding effect. After the shift, saturation, or rounding, the final results are written to Rd. If any saturation happens, this instruction sets the OV flag. The value of Rs2[31:4] will not affect this instruction.

Operations:

```
if (Rs2[3:0] < 0) {
 sa = -Rs2[3:0];
  sa = (sa == 8)? 7 : sa;
  if (`.u` form) {
   res[7:-1] = SE9(Rs1.B[x][7:sa-1]) + 1;
   Rd.B[x] = res[7:0];
  } else {
   Rd.B[x] = SE8(Rs1.B[x][7:sa]);
  }
} else {
 sa = Rs2[2:0];
 res[(7+sa):0] = Rs1.B[x] << (logic) sa;
 if (res > (2^7)-1) {
   res[7:0] = 0x7f; OV = 1;
  \} else if (res < -2^7) {
    res[7:0] = 0x80; OV = 1;
 Rd.B[x] = res[7:0];
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SLL8(unsigned long a, unsigned int b) SLL8(SIMD 8-bit Shift Left Logical)

Type: SIMD

Syntax:

```
SLL8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit elements logical left shift operations simultaneously. The shift amount is a variable from a GPR.

Description: The 8-bit elements in Rs1 are left-shifted logically. And the results are written to Rd. The shifted out bits are filled with zero and the shift amount is specified by the low-order 3-bits of the value in the Rs2 register.

Operations:

```
sa = Rs2[2:0];
Rd.B[x] = Rs1.B[x] << sa;</pre>
```

(continues on next page)

```
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SRA8 (unsigned long a, unsigned int b) SRA8 (SIMD 8-bit Shift Right Arithmetic)

Type: SIMD

Syntax:

```
SRA8 Rd, Rs1, Rs2
SRA8.u Rd, Rs1, Rs2
```

Purpose: Do 8-bit element arithmetic right shift operations simultaneously. The shift amount is a variable from a GPR. The . u form performs additional rounding up operations on the shifted results.

Description: The 8-bit data elements in Rs1 are right-shifted arithmetically, that is, the shifted out bits are filled with the sign-bit of the data elements. The shift amount is specified by the low-order 3-bits of the value in the Rs2 register. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 8-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = Rs2[2:0];
if (sa > 0) {
   if (`.u` form) { // SRA8.u
      res[7:-1] = SE9(Rs1.B[x][7:sa-1]) + 1;
      Rd.B[x] = res[7:0];
   } else { // SRA8
      Rd.B[x] = SE8(Rd.B[x][7:sa])
   }
} else {
   Rd = Rs1;
}
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SRA8_U(unsigned long a, unsigned int b) SRA8.u (SIMD 8-bit Rounding Shift Right Arithmetic)

Type: SIMD

Syntax:

```
SRA8 Rd, Rs1, Rs2
SRA8.u Rd, Rs1, Rs2
```

Purpose: Do 8-bit element arithmetic right shift operations simultaneously. The shift amount is a variable from a GPR. The .u form performs additional rounding up operations on the shifted results.

Description: The 8-bit data elements in Rs1 are right-shifted arithmetically, that is, the shifted out bits are filled with the sign-bit of the data elements. The shift amount is specified by the low-order 3-bits of the value in the Rs2 register. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 8-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = Rs2[2:0];
if (sa > 0) {
  if (`.u` form) { // SRA8.u
    res[7:-1] = SE9(Rs1.B[x][7:sa-1]) + 1;
    Rd.B[x] = res[7:0];
  } else { // SRA8
    Rd.B[x] = SE8(Rd.B[x][7:sa])
  }
} else {
  Rd = Rs1;
}
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SRL8 (unsigned long a, unsigned int b) SRL8 (SIMD 8-bit Shift Right Logical)

Type: SIMD

Syntax:

```
SRL8 Rt, Ra, Rb
SRL8.u Rt, Ra, Rb
```

Purpose: Do 8-bit elements logical right shift operations simultaneously. The shift amount is a variable from a GPR. The .u form performs additional rounding up operations on the shifted results.

Description: The 8-bit data elements in Rs1 are right-shifted logically, that is, the shifted out bits are filled with zero. The shift amount is specified by the low-order 3-bits of the value in the Rs2 register. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 8-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = Rs2[2:0];
if (sa > 0) {
  if (`.u` form) { // SRL8.u
```

(continues on next page)

(continued from previous page)

```
res[8:0] = ZE9(Rs1.B[x][7:sa-1]) + 1;
Rd.B[x] = res[8:1];
} else { // SRL8
   Rd.B[x] = ZE8(Rs1.B[x][7:sa]);
}
} else {
Rd = Rs1;
}
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SRL8_U(unsigned long a, unsigned int b)
SRL8.u (SIMD 8-bit Rounding Shift Right Logical)

Type: SIMD

Syntax:

```
SRL8 Rt, Ra, Rb
SRL8.u Rt, Ra, Rb
```

Purpose: Do 8-bit elements logical right shift operations simultaneously. The shift amount is a variable from a GPR. The .u form performs additional rounding up operations on the shifted results.

Description: The 8-bit data elements in Rs1 are right-shifted logically, that is, the shifted out bits are filled with zero. The shift amount is specified by the low-order 3-bits of the value in the Rs2 register. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 8-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = Rs2[2:0];
if (sa > 0) {
   if (`.u` form) { // SRL8.u
      res[8:0] = ZE9(Rs1.B[x][7:sa-1]) + 1;
      Rd.B[x] = res[8:1];
   } else { // SRL8
      Rd.B[x] = ZE8(Rs1.B[x][7:sa]);
   }
} else {
   Rd = Rs1;
}
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

SIMD 16-bit Compare Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_CMPEQ16(unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_SCMPLE16(unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_SCMPLT16(unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_UCMPLE16(unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_UCMPLT16(unsigned long a, unsigned long b)

group NMSIS_Core_DSP_Intrinsic_SIMD_16B_CMP

SIMD 16-bit Compare Instructions.
```

there are 5 SIMD 16-bit Compare instructions.

Functions

```
__STATIC_FORCEINLINE unsigned long __RV_CMPEQ16(unsigned long a, unsigned long b) CMPEQ16(SIMD 16-bit Integer Compare Equal)
```

Type: SIMD

Syntax:

```
CMPEQ16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit integer elements equal comparisons simultaneously.

Description: This instruction compares the 16-bit integer elements in Rs1 with the 16-bit integer elements in Rs2 to see if they are equal. If they are equal, the result is 0xFFFF; otherwise, the result is 0x0. The 16-bit element comparison results are written to Rt.

Note: This instruction can be used for either signed or unsigned numbers.

Operations:

```
Rd.H[x] = (Rs1.H[x] == Rs2.H[x])? 0xfffff : 0x0;
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
__STATIC_FORCEINLINE unsigned long __RV_SCMPLE16 (unsigned long a, unsigned long b) SCMPLE16 (SIMD 16-bit Signed Compare Less Than & Equal)
```

Type: SIMD

Syntax:

```
SCMPLE16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit signed integer elements less than & equal comparisons simultaneously.

Description: This instruction compares the 16-bit signed integer elements in Rs1 with the 16-bit signed integer elements in Rs2 to see if the one in Rs1 is less than or equal to the one in Rs2. If it is true, the result is 0xFFFF; otherwise, the result is 0x0. The element comparison results are written to Rd.

Operations:

```
Rd.H[x] = (Rs1.H[x] {le} Rs2.H[x])? 0xffff : 0x0;
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SCMPLT16(unsigned long a, unsigned long b) SCMPLT16(SIMD 16-bit Signed Compare Less Than)

Type: SIMD

Syntax:

```
SCMPLT16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit signed integer elements less than comparisons simultaneously.

Description: This instruction compares the 16-bit signed integer elements in Rs1 with the two 16-bit signed integer elements in Rs2 to see if the one in Rs1 is less than the one in Rs2. If it is true, the result is 0xFFFF; otherwise, the result is 0x0. The element comparison results are written to Rd.

Operations:

```
Rd.H[x] = (Rs1.H[x] < Rs2.H[x])? 0xfffff : 0x0;
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UCMPLE16(unsigned long a, unsigned long b)
UCMPLE16(SIMD 16-bit Unsigned Compare Less Than & Equal)

Type: SIMD

Syntax:

```
UCMPLE16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit unsigned integer elements less than & equal comparisons simultaneously.

Description: This instruction compares the 16-bit unsigned integer elements in Rs1 with the 16-bit unsigned integer elements in Rs2 to see if the one in Rs1 is less than or equal to the one in Rs2. If it is true, the result is 0xFFFF; otherwise, the result is 0x0. The element comparison results are written to Rd.

Operations:

```
Rd.H[x] = (Rs1.H[x] <=u Rs2.H[x])? 0xfffff : 0x0;
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
__STATIC_FORCEINLINE unsigned long __RV_UCMPLT16(unsigned long a, unsigned long b)

UCMPLT16(SIMD 16-bit Unsigned Compare Less Than)
```

Type: SIMD

Syntax:

```
UCMPLT16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit unsigned integer elements less than comparisons simultaneously.

Description: This instruction compares the 16-bit unsigned integer elements in Rs1 with the 16-bit unsigned integer elements in Rs2 to see if the one in Rs1 is less than the one in Rs2. If it is true, the result is 0xFFFF; otherwise, the result is 0x0. The element comparison results are written to Rd.

Operations:

```
Rd.H[x] = (Rs1.H[x] <u Rs2.H[x])? 0xfffff : 0x0;
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

there are 5 SIMD 8-bit Compare instructions.

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

SIMD 8-bit Compare Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_CMPEQ8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_SCMPLE8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_SCMPLT8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_UCMPLE8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_UCMPLT8 (unsigned long a, unsigned long b)
group NMSIS_Core_DSP_Intrinsic_SIMD_8B_CMP
__SIMD 8-bit Compare Instructions.
```

Functions

__STATIC_FORCEINLINE unsigned long __RV_CMPEQ8(unsigned long a, unsigned long b) CMPEQ8(SIMD 8-bit Integer Compare Equal)

Type: SIMD

Syntax:

```
CMPEQ8 Rs, Rs1, Rs2
```

Purpose: Do 8-bit integer elements equal comparisons simultaneously.

Description: This instruction compares the 8-bit integer elements in Rs1 with the 8-bit integer elements in Rs2 to see if they are equal. If they are equal, the result is 0xFF; otherwise, the result is 0x0. The 8-bit element comparison results are written to Rd.

Note: This instruction can be used for either signed or unsigned numbers.

Operations:

```
Rd.B[x] = (Rs1.B[x] == Rs2.B[x])? 0xff : 0x0;
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SCMPLE8(unsigned long a, unsigned long b) SCMPLE8(SIMD 8-bit Signed Compare Less Than & Equal)

Type: SIMD

Syntax:

```
SCMPLE8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit signed integer elements less than & equal comparisons simultaneously.

Description: This instruction compares the 8-bit signed integer elements in Rs1 with the 8-bit signed integer elements in Rs2 to see if the one in Rs1 is less than or equal to the one in Rs2. If it is true, the result is 0xFF; otherwise, the result is 0x0. The element comparison results are written to Rd

Operations:

```
Rd.B[x] = (Rs1.B[x] {le} Rs2.B[x])? 0xff : 0x0;
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SCMPLT8 (unsigned long a, unsigned long b) SCMPLT8 (SIMD 8-bit Signed Compare Less Than)

Type: SIMD

Syntax:

```
SCMPLT8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit signed integer elements less than comparisons simultaneously.

Description: This instruction compares the 8-bit signed integer elements in Rs1 with the 8-bit signed integer elements in Rs2 to see if the one in Rs1 is less than the one in Rs2. If it is true, the result is 0xFF; otherwise, the result is 0x0. The element comparison results are written to Rd.

Operations:

```
Rd.B[x] = (Rs1.B[x] < Rs2.B[x])? 0xff : 0x0;
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UCMPLE8 (unsigned long a, unsigned long b)

UCMPLE8 (SIMD 8-bit Unsigned Compare Less Than & Equal)

Type: SIMD

Syntax:

```
UCMPLE8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit unsigned integer elements less than & equal comparisons simultaneously.

Description: This instruction compares the 8-bit unsigned integer elements in Rs1 with the 8-bit unsigned integer elements in Rs2 to see if the one in Rs1 is less than or equal to the one in Rs2. If it is true, the result is 0xFF; otherwise, the result is 0x0. The four comparison results are written to Rd.

Operations:

```
Rd.B[x] = (Rs1.B[x] <=u Rs2.B[x])? 0xff : 0x0;
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UCMPLT8 (unsigned long a, unsigned long b) UCMPLT8 (SIMD 8-bit Unsigned Compare Less Than)

Type: SIMD

Syntax:

```
UCMPLT8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit unsigned integer elements less than comparisons simultaneously.

Description: This instruction compares the 8-bit unsigned integer elements in Rs1 with the 8-bit unsigned integer elements in Rs2 to see if the one in Rs1 is less than the one in Rs2. If it is true, the result is 0xFF; otherwise, the result is 0x0. The element comparison results are written to Rd.

Operations:

```
Rd.B[x] = (Rs1.B[x] <u Rs2.B[x])? 0xff : 0x0;
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

SIMD 16-bit Multiply Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_KHM16 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_KHMX16 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long long __RV_SMUL16 (unsigned int a, unsigned int b)
__STATIC_FORCEINLINE unsigned long long __RV_SMULX16 (unsigned int a, unsigned int b)
__STATIC_FORCEINLINE unsigned long long __RV_UMUL16 (unsigned int a, unsigned int b)
__STATIC_FORCEINLINE unsigned long long __RV_UMULX16 (unsigned int a, unsigned int b)
group NMSIS_Core_DSP_Intrinsic_SIMD_16B_MULTIPLY
SIMD 16-bit Multiply Instructions.
there are 6 SIMD 16-bit Multiply instructions.
```

Functions

```
__STATIC_FORCEINLINE unsigned long __RV_KHM16 (unsigned long a, unsigned long b) KHM16 (SIMD Signed Saturating Q15 Multiply)
```

Type: SIMD

Syntax:

```
KHM16 Rd, Rs1, Rs2
KHMX16 Rd, Rs1, Rs2
```

Purpose: Do Q15xQ15 element multiplications simultaneously. The Q30 results are then reduced to Q15 numbers again.

Description: For the KHM16 instruction, multiply the top 16-bit Q15 content of 32-bit chunks in Rs1 with the top 16-bit Q15 content of 32-bit chunks in Rs2. At the same time, multiply the bottom 16-bit Q15 content of 32-bit chunks in Rs1 with the bottom 16-bit Q15 content of 32-bit chunks in Rs2. For the KHMX16 instruction, multiply the top 16-bit Q15 content of 32-bit chunks in Rs1 with the bottom 16-bit

Q15 content of 32-bit chunks in Rs2. At the same time, multiply the bottom 16-bit Q15 content of 32-bit chunks in Rs1 with the top 16-bit Q15 content of 32-bit chunks in Rs2. The Q30 results are then right-shifted 15-bits and saturated into Q15 values. The Q15 results are then written into Rd. When both the two Q15 inputs of a multiplication are 0x8000, saturation will happen. The result will be saturated to 0x7FFF and the overflow flag OV will be set.

Operations:

```
if (is `KHM16`) {
  oplt = Rs1.H[x+1]; op2t = Rs2.H[x+1]; // top
  oplb = Rs1.H[x]; op2b = Rs2.H[x]; // bottom
} else if (is `KHMX16`) {
  oplt = Rs1.H[x+1]; op2t = Rs2.H[x]; // Rs1 top
  oplb = Rs1.H[x]; op2b = Rs2.H[x+1]; // Rs1 bottom
}
for ((aop,bop,res) in [(op1t,op2t,rest), (op1b,op2b,resb)]) {
  if (0x8000 != aop | 0x8000 != bop) {
    res = (aop s* bop) >> 15;
  } else {
    res= 0x7FFF;
    OV = 1;
  }
}
Rd.W[x/2] = concat(rest, resb);
for RV32: x=0
for RV64: x=0,2
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KHMX16(unsigned long a, unsigned long b)
KHMX16(SIMD Signed Saturating Crossed Q15 Multiply)

Type: SIMD

Syntax:

```
KHM16 Rd, Rs1, Rs2
KHMX16 Rd, Rs1, Rs2
```

Purpose: Do Q15xQ15 element multiplications simultaneously. The Q30 results are then reduced to Q15 numbers again.

Description: For the KHM16 instruction, multiply the top 16-bit Q15 content of 32-bit chunks in Rs1 with the top 16-bit Q15 content of 32-bit chunks in Rs2. At the same time, multiply the bottom 16-bit Q15 content of 32-bit chunks in Rs1 with the bottom 16-bit Q15 content of 32-bit chunks in Rs2. For the KHMX16 instruction, multiply the top 16-bit Q15 content of 32-bit chunks in Rs1 with the bottom 16-bit Q15 content of 32-bit chunks in Rs2. At the same time, multiply the bottom 16-bit Q15 content of 32-bit chunks in Rs1 with the top 16-bit Q15 content of 32-bit chunks in Rs2. The Q30 results are then right-shifted 15-bits and saturated into Q15 values. The Q15 results are then written into Rd. When both the two Q15 inputs of a multiplication are 0x8000, saturation will happen. The result will be saturated to 0x7FFF and the overflow flag OV will be set.

Operations:

```
if (is `KHM16`) {
  op1t = Rs1.H[x+1]; op2t = Rs2.H[x+1]; // top
  op1b = Rs1.H[x]; op2b = Rs2.H[x]; // bottom
} else if (is `KHMX16`) {
  op1t = Rs1.H[x+1]; op2t = Rs2.H[x]; // Rs1 top
  op1b = Rs1.H[x]; op2b = Rs2.H[x+1]; // Rs1 bottom
}
for ((aop,bop,res) in [(op1t,op2t,rest), (op1b,op2b,resb)]) {
  if (0x8000 != aop | 0x8000 != bop) {
    res = (aop s* bop) >> 15;
  } else {
    res= 0x7FFF;
    OV = 1;
  }
}
Rd.W[x/2] = concat(rest, resb);
for RV32: x=0
for RV64: x=0,2
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long long __RV_SMUL16(unsigned int a, unsigned int b) SMUL16(SIMD Signed 16-bit Multiply)

Type: SIMD

Syntax:

```
SMUL16 Rd, Rs1, Rs2
SMULX16 Rd, Rs1, Rs2
```

Purpose: Do signed 16-bit multiplications and generate two 32-bit results simultaneously.

RV32 Description: For the SMUL16 instruction, multiply the top 16-bit Q15 content of Rs1 with the top 16-bit Q15 content of Rs2. At the same time, multiply the bottom 16-bit Q15 content of Rs1 with the bottom 16-bit Q15 content of Rs2. For the SMULX16 instruction, multiply the top 16-bit Q15 content of Rs1 with the bottom 16-bit Q15 content of Rs2. At the same time, multiply the bottom 16-bit Q15 content of Rs1 with the top 16- bit Q15 content of Rs2. The two Q30 results are then written into an even/odd pair of registers specified by Rd(4,1). Rd(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the 32-bit result calculated from the top part of Rs1 and the even 2d register of the pair contains the 32-bit result calculated from the bottom part of Rs1.

RV64 Description: For the SMUL16 instruction, multiply the top 16-bit Q15 content of the lower 32-bit word in Rs1 with the top 16-bit Q15 content of the lower 32-bit word in Rs2. At the same time, multiply the bottom 16-bit Q15 content of the lower 32-bit word in Rs1 with the bottom 16-bit Q15 content of the lower 32-bit word in Rs1 with the bottom 16-bit Q15 content of the lower 32-bit word in Rs1 with the bottom 16-bit Q15 content of the lower 32-bit word in Rs2. At the same time, multiply the bottom 16-bit Q15 content of the lower 32-bit word in Rs1 with the top 16-bit Q15 content of the lower 32-bit word in Rs1 with the top 16-bit Q15 content of the lower 32-bit word in Rs1. The result calculated from the top 16-bit of the lower 32-bit word in Rs1 is written to Rd.W[1]. And the result calculated from the bottom 16-bit of the lower 32-bit word in Rs1 is written to Rd.W[0]

Operations:

```
* RV32:
if (is `SMUL16`) {
 op1t = Rs1.H[1]; op2t = Rs2.H[1]; // top
 op1b = Rs1.H[0]; op2b = Rs2.H[0]; // bottom
} else if (is `SMULX16`) {
 op1t = Rs1.H[1]; op2t = Rs2.H[0]; // Rs1 top
 op1b = Rs1.H[0]; op2b = Rs2.H[1]; // Rs1 bottom
for ((aop,bop,res) in [(op1t,op2t,rest), (op1b,op2b,resb)]) {
 res = aop s* bop;
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
R[t_H] = rest;
R[t_L] = resb;
* RV64:
if (is `SMUL16`) {
 op1t = Rs1.H[1]; op2t = Rs2.H[1]; // top
 op1b = Rs1.H[0]; op2b = Rs2.H[0]; // bottom
} else if (is `SMULX16`) {
 op1t = Rs1.H[1]; op2t = Rs2.H[0]; // Rs1 top
 op1b = Rs1.H[0]; op2b = Rs2.H[1]; // Rs1 bottom
for ((aop,bop,res) in [(op1t,op2t,rest), (op1b,op2b,resb)]) {
 res = aop s* bop;
Rd.W[1] = rest;
Rd.W[0] = resb;
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long long __RV_SMULX16(unsigned int a, unsigned int b) SMULX16(SIMD Signed Crossed 16-bit Multiply)

Type: SIMD

Syntax:

```
SMUL16 Rd, Rs1, Rs2
SMULX16 Rd, Rs1, Rs2
```

Purpose: Do signed 16-bit multiplications and generate two 32-bit results simultaneously.

RV32 Description: For the SMUL16 instruction, multiply the top 16-bit Q15 content of Rs1 with the top 16-bit Q15 content of Rs2. At the same time, multiply the bottom 16-bit Q15 content of Rs1 with the bottom 16-bit Q15 content of Rs2. For the SMULX16 instruction, multiply the top 16-bit Q15 content of Rs1 with the bottom 16-bit Q15 content of Rs2. At the same time, multiply the bottom 16-bit Q15 content of Rs1 with the top 16- bit Q15 content of Rs2. The two Q30 results are then written into an even/odd pair of registers specified by Rd(4,1). Rd(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the 32-bit result calculated from the top part of Rs1 and the even 2d register of the pair contains the 32-bit result calculated from the bottom part of Rs1.

RV64 Description: For the SMUL16 instruction, multiply the top 16-bit Q15 content of the lower 32-bit word in Rs1 with the top 16-bit Q15 content of the lower 32-bit word in Rs2. At the same time, multiply the bottom 16-bit Q15 content of the lower 32-bit word in Rs1 with the bottom 16-bit Q15 content of the lower 32-bit word in Rs2. For the SMULX16 instruction, multiply the top 16-bit Q15 content of the lower 32-bit word in Rs1 with the bottom 16-bit Q15 content of the lower 32-bit word in Rs2. At the same time, multiply the bottom 16-bit Q15 content of the lower 32-bit word in Rs1 with the top 16-bit Q15 content of the lower 32-bit word in Rs1 with the top 16-bit Q15 content of the lower 32-bit word in Rs1 is written to Rd.W[1]. And the result calculated from the bottom 16-bit of the lower 32-bit word in Rs1 is written to Rd.W[0]

Operations:

```
* RV32:
if (is `SMUL16`) {
 op1t = Rs1.H[1]; op2t = Rs2.H[1]; // top
 op1b = Rs1.H[0]; op2b = Rs2.H[0]; // bottom
} else if (is `SMULX16`) {
 op1t = Rs1.H[1]; op2t = Rs2.H[0]; // Rs1 top
 op1b = Rs1.H[0]; op2b = Rs2.H[1]; // Rs1 bottom
for ((aop,bop,res) in [(op1t,op2t,rest), (op1b,op2b,resb)]) {
 res = aop s* bop;
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
R[t_H] = rest;
R[t_L] = resb;
* RV64:
if (is `SMUL16`) {
 op1t = Rs1.H[1]; op2t = Rs2.H[1]; // top
 op1b = Rs1.H[0]; op2b = Rs2.H[0]; // bottom
} else if (is `SMULX16`) {
 op1t = Rs1.H[1]; op2t = Rs2.H[0]; // Rs1 top
 op1b = Rs1.H[0]; op2b = Rs2.H[1]; // Rs1 bottom
for ((aop,bop,res) in [(op1t,op2t,rest), (op1b,op2b,resb)]) {
 res = aop s* bop;
Rd.W[1] = rest;
Rd.W[0] = resb;
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long long __RV_UMUL16(unsigned int a, unsigned int b)
UMUL16(SIMD Unsigned 16-bit Multiply)

Type: SIMD

Syntax:

```
UMUL16 Rd, Rs1, Rs2
UMULX16 Rd, Rs1, Rs2
```

Purpose: Do unsigned 16-bit multiplications and generate two 32-bit results simultaneously.

RV32 Description: For the UMUL16 instruction, multiply the top 16-bit U16 content of Rs1 with the top 16-bit U16 content of Rs2. At the same time, multiply the bottom 16-bit U16 content of Rs1 with the bottom 16-bit U16 content of Rs2. For the UMULX16 instruction, multiply the top 16-bit U16 content of Rs1 with the bottom 16-bit U16 content of Rs2. At the same time, multiply the bottom 16-bit U16 content of Rs1 with the top 16- bit U16 content of Rs2. The two U32 results are then written into an even/odd pair of registers specified by Rd(4,1). Rd(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the 32-bit result calculated from the top part of Rs1 and the even 2d register of the pair contains the 32-bit result calculated from the bottom part of Rs1.

RV64 Description: For the UMUL16 instruction, multiply the top 16-bit U16 content of the lower 32-bit word in Rs1 with the top 16-bit U16 content of the lower 32-bit word in Rs2. At the same time, multiply the bottom 16-bit U16 content of the lower 32-bit word in Rs1 with the bottom 16-bit U16 content of the lower 32-bit word in Rs2. For the UMULX16 instruction, multiply the top 16-bit U16 content of the lower 32-bit word in Rs1 with the bottom 16-bit U16 content of the lower 32-bit word in Rs2. At the same time, multiply the bottom 16-bit U16 content of the lower 32-bit word in Rs1 with the top 16-bit U16 content of the lower 32-bit word in Rs1 with the top 16-bit U16 content of the lower 32-bit word in Rs1 is written to Rd.W[1]. And the result calculated from the bottom 16-bit of the lower 32-bit word in Rs1 is written to Rd.W[0]

Operations:

```
* RV32:
if (is `UMUL16`) {
 op1t = Rs1.H[1]; op2t = Rs2.H[1]; // top
 op1b = Rs1.H[0]; op2b = Rs2.H[0]; // bottom
} else if (is `UMULX16`) {
 op1t = Rs1.H[1]; op2t = Rs2.H[0]; // Rs1 top
 op1b = Rs1.H[0]; op2b = Rs2.H[1]; // Rs1 bottom
for ((aop,bop,res) in [(op1t,op2t,rest), (op1b,op2b,resb)]) {
 res = aop u* bop;
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
R[t_H] = rest;
R[t_L] = resb;
* RV64:
if (is `UMUL16`) {
 op1t = Rs1.H[1]; op2t = Rs2.H[1]; // top
 op1b = Rs1.H[0]; op2b = Rs2.H[0]; // bottom
} else if (is `UMULX16`) {
 op1t = Rs1.H[1]; op2t = Rs2.H[0]; // Rs1 top
 op1b = Rs1.H[0]; op2b = Rs2.H[1]; // Rs1 bottom
for ((aop,bop,res) in [(op1t,op2t,rest), (op1b,op2b,resb)]) {
 res = aop u* bop;
Rd.W[1] = rest;
Rd.W[0] = resb;
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long long __RV_UMULX16(unsigned int a, unsigned int b)
 UMULX16 (SIMD Unsigned Crossed 16-bit Multiply)

Type: SIMD

Syntax:

```
UMUL16 Rd, Rs1, Rs2
UMULX16 Rd, Rs1, Rs2
```

Purpose: Do unsigned 16-bit multiplications and generate two 32-bit results simultaneously.

RV32 Description: For the UMUL16 instruction, multiply the top 16-bit U16 content of Rs1 with the top 16-bit U16 content of Rs2. At the same time, multiply the bottom 16-bit U16 content of Rs1 with the bottom 16-bit U16 content of Rs2. For the UMULX16 instruction, multiply the top 16-bit U16 content of Rs1 with the bottom 16-bit U16 content of Rs2. At the same time, multiply the bottom 16-bit U16 content of Rs1 with the top 16- bit U16 content of Rs2. The two U32 results are then written into an even/odd pair of registers specified by Rd(4,1). Rd(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the 32-bit result calculated from the top part of Rs1 and the even 2d register of the pair contains the 32-bit result calculated from the bottom part of Rs1.

RV64 Description: For the UMUL16 instruction, multiply the top 16-bit U16 content of the lower 32-bit word in Rs1 with the top 16-bit U16 content of the lower 32-bit word in Rs2. At the same time, multiply the bottom 16-bit U16 content of the lower 32-bit word in Rs1 with the bottom 16-bit U16 content of the lower 32-bit word in Rs1 with the bottom 16-bit U16 content of the lower 32-bit word in Rs1 with the bottom 16-bit U16 content of the lower 32-bit word in Rs2. At the same time, multiply the bottom 16-bit U16 content of the lower 32-bit word in Rs1 with the top 16-bit U16 content of the lower 32-bit word in Rs2. The two 32-bit U32 results are then written into Rd. The result calculated from the top 16-bit of the lower 32-bit word in Rs1 is written to Rd.W[1]. And the result calculated from the bottom 16-bit of the lower 32-bit word in Rs1 is written to Rd.W[0]

Operations:

```
* RV32:
if (is `UMUL16`) {
 op1t = Rs1.H[1]; op2t = Rs2.H[1]; // top
 op1b = Rs1.H[0]; op2b = Rs2.H[0]; // bottom
} else if (is `UMULX16`) {
 op1t = Rs1.H[1]; op2t = Rs2.H[0]; // Rs1 top
 op1b = Rs1.H[0]; op2b = Rs2.H[1]; // Rs1 bottom
for ((aop,bop,res) in [(op1t,op2t,rest), (op1b,op2b,resb)]) {
 res = aop u* bop;
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
R[t_H] = rest;
R[t_L] = resb;
* RV64:
if (is `UMUL16`) {
 op1t = Rs1.H[1]; op2t = Rs2.H[1]; // top
 op1b = Rs1.H[0]; op2b = Rs2.H[0]; // bottom
} else if (is `UMULX16`) {
 op1t = Rs1.H[1]; op2t = Rs2.H[0]; // Rs1 top
 op1b = Rs1.H[0]; op2b = Rs2.H[1]; // Rs1 bottom
for ((aop,bop,res) in [(op1t,op2t,rest), (op1b,op2b,resb)]) {
 res = aop u* bop;
```

(continues on next page)

(continued from previous page)

```
Rd.W[1] = rest;
Rd.W[0] = resb;
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

SIMD 8-bit Multiply Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_KHM8 (unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_KHMX8 (unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long long __RV_SMUL8 (unsigned int a, unsigned int b)

__STATIC_FORCEINLINE unsigned long long __RV_SMULX8 (unsigned int a, unsigned int b)

__STATIC_FORCEINLINE unsigned long long __RV_UMUL8 (unsigned int a, unsigned int b)

__STATIC_FORCEINLINE unsigned long long __RV_UMULX8 (unsigned int a, unsigned int b)

group NMSIS_Core_DSP_Intrinsic_SIMD_8B_MULTIPLY

SIMD 8-bit Multiply Instructions.
```

there are 6 SIMD 8-bit Multiply instructions.

Functions

```
__STATIC_FORCEINLINE unsigned long __RV_KHM8 (unsigned long a, unsigned long b) KHM8 (SIMD Signed Saturating Q7 Multiply)
```

Type: SIMD

Syntax:

```
KHM8 Rd, Rs1, Rs2
KHMX8 Rd, Rs1, Rs2
```

Purpose: Do Q7xQ7 element multiplications simultaneously. The Q14 results are then reduced to Q7 numbers again.

Description: For the KHM8 instruction, multiply the top 8-bit Q7 content of 16-bit chunks in Rs1 with the top 8-bit Q7 content of 16-bit chunks in Rs2. At the same time, multiply the bottom 8-bit Q7 content of 16-bit chunks in Rs1 with the bottom 8-bit Q7 content of 16-bit chunks in Rs2. For the KHMX16 instruction, multiply the top 8-bit Q7 content of 16-bit chunks in Rs1 with the bottom 8-bit Q7 content of 16-bit chunks in Rs2. At the same time, multiply the bottom 8-bit Q7 content of 16-bit chunks in Rs1 with the top 8-bit Q7 content of 16-bit chunks in Rs2. The Q14 results are then right-shifted 7-bits and saturated into Q7 values. The Q7 results are then written into Rd. When both the two Q7 inputs of a multiplication are 0x80, saturation will happen. The result will be saturated to 0x7F and the overflow flag OV will be set.

Operations:

```
if (is `KHM8`) {
    oplt = Rs1.B[x+1]; op2t = Rs2.B[x+1]; // top
    oplb = Rs1.B[x]; op2b = Rs2.B[x]; // bottom
} else if (is `KHMX8`) {
    oplt = Rs1.H[x+1]; op2t = Rs2.H[x]; // Rs1 top
    oplb = Rs1.H[x]; op2b = Rs2.H[x+1]; // Rs1 bottom
}
for ((aop,bop,res) in [(op1t,op2t,rest), (op1b,op2b,resb)]) {
    if (0x80 != aop | 0x80 != bop) {
        res = (aop s* bop) >> 7;
    } else {
        res= 0x7F;
        OV = 1;
    }
}
Rd.H[x/2] = concat(rest, resb);
for RV32, x=0,2
for RV64, x=0,2,4,6
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KHMX8 (unsigned long a, unsigned long b)
KHMX8 (SIMD Signed Saturating Crossed Q7 Multiply)

Type: SIMD

Syntax:

```
KHM8 Rd, Rs1, Rs2
KHMX8 Rd, Rs1, Rs2
```

Purpose: Do Q7xQ7 element multiplications simultaneously. The Q14 results are then reduced to Q7 numbers again.

Description: For the KHM8 instruction, multiply the top 8-bit Q7 content of 16-bit chunks in Rs1 with the top 8-bit Q7 content of 16-bit chunks in Rs2. At the same time, multiply the bottom 8-bit Q7 content of 16-bit chunks in Rs1 with the bottom 8-bit Q7 content of 16-bit chunks in Rs2. For the KHMX16 instruction, multiply the top 8-bit Q7 content of 16-bit chunks in Rs1 with the bottom 8-bit Q7 content of 16-bit chunks in Rs2. At the same time, multiply the bottom 8-bit Q7 content of 16-bit chunks in Rs1 with the top 8-bit Q7 content of 16-bit chunks in Rs2. The Q14 results are then right-shifted 7-bits and saturated into Q7 values. The Q7 results are then written into Rd. When both the two Q7 inputs of a multiplication are 0x80, saturation will happen. The result will be saturated to 0x7F and the overflow flag OV will be set.

Operations:

```
if (is `KHM8`) {
   op1t = Rs1.B[x+1]; op2t = Rs2.B[x+1]; // top
   op1b = Rs1.B[x]; op2b = Rs2.B[x]; // bottom
} else if (is `KHMX8`) {
   op1t = Rs1.H[x+1]; op2t = Rs2.H[x]; // Rs1 top
   op1b = Rs1.H[x]; op2b = Rs2.H[x+1]; // Rs1 bottom
}
for ((aop,bop,res) in [(op1t,op2t,rest), (op1b,op2b,resb)]) {
```

(continues on next page)

(continued from previous page)

```
if (0x80 != aop | 0x80 != bop) {
   res = (aop s* bop) >> 7;
} else {
   res= 0x7F;
   OV = 1;
}
Rd.H[x/2] = concat(rest, resb);
for RV32, x=0,2
for RV64, x=0,2,4,6
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long long __RV_SMUL8(unsigned int a, unsigned int b) SMUL8(SIMD Signed 8-bit Multiply)

Type: SIMD

Syntax:

```
SMUL8 Rd, Rs1, Rs2
SMULX8 Rd, Rs1, Rs2
```

Purpose: Do signed 8-bit multiplications and generate four 16-bit results simultaneously.

RV32 Description: For the SMUL8 instruction, multiply the 8-bit data elements of Rs1 with the corresponding 8-bit data elements of Rs2. For the SMULX8 instruction, multiply the first and second 8-bit data elements of Rs1 with the second and first 8-bit data elements of Rs2. At the same time, multiply the third and fourth 8-bit data elements of Rs1 with the fourth and third 8-bit data elements of Rs2. The four 16-bit results are then written into an even/odd pair of registers specified by Rd(4,1). Rd(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the two 16-bit results calculated from the top part of Rs1 and the even 2d register of the pair contains the two 16-bit results calculated from the bottom part of Rs1.

RV64 Description: For the SMUL8 instruction, multiply the 8-bit data elements of Rs1 with the corresponding 8-bit data elements of Rs2. For the SMULX8 instruction, multiply the first and second 8-bit data elements of Rs1 with the second and first 8-bit data elements of Rs2. At the same time, multiply the third and fourth 8-bit data elements of Rs1 with the fourth and third 8-bit data elements of Rs2. The four 16-bit results are then written into Rd. The Rd.W[1] contains the two 16-bit results calculated from the top part of Rs1 and the Rd.W[0] contains the two 16-bit results calculated from the bottom part of Rs1.

Operations:

```
* RV32:
if (is `SMUL8`) {
  op1t[x/2] = Rs1.B[x+1]; op2t[x/2] = Rs2.B[x+1]; // top
  op1b[x/2] = Rs1.B[x]; op2b[x/2] = Rs2.B[x]; // bottom
} else if (is `SMULX8`) {
  op1t[x/2] = Rs1.B[x+1]; op2t[x/2] = Rs2.B[x]; // Rs1 top
  op1b[x/2] = Rs1.B[x]; op2b[x/2] = Rs2.B[x+1]; // Rs1 bottom
}
rest[x/2] = op1t[x/2] s* op2t[x/2];
```

(continues on next page)

(continued from previous page)

```
resb[x/2] = op1b[x/2] s* op2b[x/2];
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
R[t_H].H[1] = rest[1]; R[t_H].H[0] = resb[1];
R[t_L].H[1] = rest[0]; R[t_L].H[0] = resb[0];
x = 0 and 2
* RV64:
if (is `SMUL8`) {
 op1t[x/2] = Rs1.B[x+1]; op2t[x/2] = Rs2.B[x+1]; // top
 op1b[x/2] = Rs1.B[x]; op2b[x/2] = Rs2.B[x]; // bottom
} else if (is `SMULX8`) {
 op1t[x/2] = Rs1.B[x+1]; op2t[x/2] = Rs2.B[x]; // Rs1 top
 op1b[x/2] = Rs1.B[x]; op2b[x/2] = Rs2.B[x+1]; // Rs1 bottom
rest[x/2] = oplt[x/2] s* op2t[x/2];
resb[x/2] = op1b[x/2] s* op2b[x/2];
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
Rd.W[1].H[1] = rest[1]; Rd.W[1].H[0] = resb[1];
Rd.W[0].H[1] = rest[0]; Rd.W[0].H[0] = resb[0];
x = 0 and 2
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long long __RV_SMULX8(unsigned int a, unsigned int b) SMULX8(SIMD Signed Crossed 8-bit Multiply)

Type: SIMD

Syntax:

```
SMUL8 Rd, Rs1, Rs2
SMULX8 Rd, Rs1, Rs2
```

Purpose: Do signed 8-bit multiplications and generate four 16-bit results simultaneously.

RV32 Description: For the SMUL8 instruction, multiply the 8-bit data elements of Rs1 with the corresponding 8-bit data elements of Rs2. For the SMULX8 instruction, multiply the first and second 8-bit data elements of Rs1 with the second and first 8-bit data elements of Rs2. At the same time, multiply the third and fourth 8-bit data elements of Rs1 with the fourth and third 8-bit data elements of Rs2. The four 16-bit results are then written into an even/odd pair of registers specified by Rd(4,1). Rd(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the two 16-bit results calculated from the top part of Rs1 and the even 2d register of the pair contains the two 16-bit results calculated from the bottom part of Rs1.

RV64 Description: For the SMUL8 instruction, multiply the 8-bit data elements of Rs1 with the corresponding 8-bit data elements of Rs2. For the SMULX8 instruction, multiply the first and second 8-bit data elements of Rs1 with the second and first 8-bit data elements of Rs2. At the same time, multiply the third and fourth 8-bit data elements of Rs1 with the fourth and third 8-bit data elements of Rs2. The four 16-bit results are then written into Rd. The Rd.W[1] contains the two 16-bit results calculated from the top part of Rs1 and the Rd.W[0] contains the two 16-bit results calculated from the bottom part of Rs1.

Operations:

```
* RV32:
if (is `SMUL8`) {
 op1t[x/2] = Rs1.B[x+1]; op2t[x/2] = Rs2.B[x+1]; // top
 op1b[x/2] = Rs1.B[x]; op2b[x/2] = Rs2.B[x]; // bottom
} else if (is `SMULX8`) {
 op1t[x/2] = Rs1.B[x+1]; op2t[x/2] = Rs2.B[x]; // Rs1 top
 op1b[x/2] = Rs1.B[x]; op2b[x/2] = Rs2.B[x+1]; // Rs1 bottom
rest[x/2] = oplt[x/2] s* op2t[x/2];
resb[x/2] = op1b[x/2] s* op2b[x/2];
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
R[t_H].H[1] = rest[1]; R[t_H].H[0] = resb[1];
R[t_L].H[1] = rest[0]; R[t_L].H[0] = resb[0];
x = 0 and 2
* RV64:
if (is `SMUL8`) {
 op1t[x/2] = Rs1.B[x+1]; op2t[x/2] = Rs2.B[x+1]; // top
 op1b[x/2] = Rs1.B[x]; op2b[x/2] = Rs2.B[x]; // bottom
} else if (is `SMULX8`) {
 op1t[x/2] = Rs1.B[x+1]; op2t[x/2] = Rs2.B[x]; // Rs1 top
 op1b[x/2] = Rs1.B[x]; op2b[x/2] = Rs2.B[x+1]; // Rs1 bottom
rest[x/2] = op1t[x/2] s* op2t[x/2];
resb[x/2] = op1b[x/2] s* op2b[x/2];
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
Rd.W[1].H[1] = rest[1]; Rd.W[1].H[0] = resb[1];
Rd.W[0].H[1] = rest[0]; Rd.W[0].H[0] = resb[0];
x = 0 and 2
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long long __RV_UMUL8 (unsigned int a, unsigned int b) UMUL8 (SIMD Unsigned 8-bit Multiply)

Type: SIMD

Syntax:

```
UMUL8 Rd, Rs1, Rs2
UMULX8 Rd, Rs1, Rs2
```

Purpose: Do unsigned 8-bit multiplications and generate four 16-bit results simultaneously.

RV32 Description: For the UMUL8 instruction, multiply the unsigned 8-bit data elements of Rs1 with the corresponding unsigned 8-bit data elements of Rs2. For the UMULX8 instruction, multiply the first and second unsigned 8-bit data elements of Rs1 with the second and first unsigned 8-bit data elements of Rs2. At the same time, multiply the third and fourth unsigned 8-bit data elements of Rs1 with the fourth and third unsigned 8-bit data elements of Rs2. The four 16-bit results are then written into an even/odd pair of registers specified by Rd(4,1). Rd(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the two 16-bit results calculated from the top part of Rs1 and the even 2d register of the pair contains the two 16-bit results calculated from the bottom part of Rs1.

RV64 Description: For the UMUL8 instruction, multiply the unsigned 8-bit data elements of Rs1 with the corresponding unsigned 8-bit data elements of Rs2. For the UMULX8 instruction, multiply the first and second unsigned 8-bit data elements of Rs1 with the second and first unsigned 8-bit data elements of Rs2. At the same time, multiply the third and fourth unsigned 8-bit data elements of Rs1 with the fourth and third unsigned 8-bit data elements of Rs2. The four 16-bit results are then written into Rd. The Rd.W[1] contains the two 16-bit results calculated from the top part of Rs1 and the Rd.W[0] contains the two 16-bit results calculated from the bottom part of Rs1.

Operations:

```
* RV32:
if (is `UMUL8`) {
 op1t[x/2] = Rs1.B[x+1]; op2t[x/2] = Rs2.B[x+1]; // top
 op1b[x/2] = Rs1.B[x]; op2b[x/2] = Rs2.B[x]; // bottom
} else if (is `UMULX8`) {
 op1t[x/2] = Rs1.B[x+1]; op2t[x/2] = Rs2.B[x]; // Rs1 top
 op1b[x/2] = Rs1.B[x]; op2b[x/2] = Rs2.B[x+1]; // Rs1 bottom
rest[x/2] = op1t[x/2] u* op2t[x/2];
resb[x/2] = op1b[x/2] u* op2b[x/2];
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
R[t_H].H[1] = rest[1]; R[t_H].H[0] = resb[1];
R[t_L].H[1] = rest[0]; R[t_L].H[0] = resb[0];
x = 0 and 2
* RV64:
if (is `UMUL8`) {
   op1t[x/2] = Rs1.B[x+1]; op2t[x/2] = Rs2.B[x+1]; // top
   op1b[x/2] = Rs1.B[x]; op2b[x/2] = Rs2.B[x]; // bottom
} else if (is `UMULX8`) {
   op1t[x/2] = Rs1.B[x+1]; op2t[x/2] = Rs2.B[x]; // Rs1 top
   op1b[x/2] = Rs1.B[x]; op2b[x/2] = Rs2.B[x+1]; // Rs1 bottom
rest[x/2] = op1t[x/2] u* op2t[x/2];
resb[x/2] = op1b[x/2] u* op2b[x/2];
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
Rd.W[1].H[1] = rest[1]; Rd.W[1].H[0] = resb[1];
Rd.W[0].H[1] = rest[0]; Rd.W[0].H[0] = resb[0]; x = 0 and 2
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

_STATIC_FORCEINLINE unsigned long long __RV_UMULX8 (unsigned int a, unsigned int b)
 UMULX8 (SIMD Unsigned Crossed 8-bit Multiply)

Type: SIMD

Syntax:

```
UMUL8 Rd, Rs1, Rs2
UMULX8 Rd, Rs1, Rs2
```

Purpose: Do unsigned 8-bit multiplications and generate four 16-bit results simultaneously.

RV32 Description: For the UMUL8 instruction, multiply the unsigned 8-bit data elements of Rs1 with the corresponding unsigned 8-bit data elements of Rs2. For the UMULX8 instruction, multiply the first and

second unsigned 8-bit data elements of Rs1 with the second and first unsigned 8-bit data elements of Rs2. At the same time, multiply the third and fourth unsigned 8-bit data elements of Rs1 with the fourth and third unsigned 8-bit data elements of Rs2. The four 16-bit results are then written into an even/odd pair of registers specified by Rd(4,1). Rd(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the two 16-bit results calculated from the top part of Rs1 and the even 2d register of the pair contains the two 16-bit results calculated from the bottom part of Rs1.

RV64 Description: For the UMUL8 instruction, multiply the unsigned 8-bit data elements of Rs1 with the corresponding unsigned 8-bit data elements of Rs2. For the UMULX8 instruction, multiply the first and second unsigned 8-bit data elements of Rs1 with the second and first unsigned 8-bit data elements of Rs2. At the same time, multiply the third and fourth unsigned 8-bit data elements of Rs1 with the fourth and third unsigned 8-bit data elements of Rs2. The four 16-bit results are then written into Rd. The Rd.W[1] contains the two 16-bit results calculated from the top part of Rs1 and the Rd.W[0] contains the two 16-bit results calculated from the bottom part of Rs1.

Operations:

```
* RV32:
if (is `UMUL8`) {
 op1t[x/2] = Rs1.B[x+1]; op2t[x/2] = Rs2.B[x+1]; // top
 op1b[x/2] = Rs1.B[x]; op2b[x/2] = Rs2.B[x]; // bottom
} else if (is `UMULX8`) {
 op1t[x/2] = Rs1.B[x+1]; op2t[x/2] = Rs2.B[x]; // Rs1 top
 op1b[x/2] = Rs1.B[x]; op2b[x/2] = Rs2.B[x+1]; // Rs1 bottom
rest[x/2] = op1t[x/2] u* op2t[x/2];
resb[x/2] = op1b[x/2] u* op2b[x/2];
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
R[t_H].H[1] = rest[1]; R[t_H].H[0] = resb[1];
R[t_L].H[1] = rest[0]; R[t_L].H[0] = resb[0];
x = 0 and 2
* RV64:
if (is `UMUL8`) {
   op1t[x/2] = Rs1.B[x+1]; op2t[x/2] = Rs2.B[x+1]; // top
   op1b[x/2] = Rs1.B[x]; op2b[x/2] = Rs2.B[x]; // bottom
} else if (is `UMULX8`) {
   op1t[x/2] = Rs1.B[x+1]; op2t[x/2] = Rs2.B[x]; // Rs1 top
   op1b[x/2] = Rs1.B[x]; op2b[x/2] = Rs2.B[x+1]; // Rs1 bottom
rest[x/2] = op1t[x/2] u* op2t[x/2];
resb[x/2] = op1b[x/2] u* op2b[x/2];
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
Rd.W[1].H[1] = rest[1]; Rd.W[1].H[0] = resb[1];
Rd.W[0].H[1] = rest[0]; Rd.W[0].H[0] = resb[0]; x = 0 and 2
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

SIMD 16-bit Miscellaneous Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_CLRS16(unsigned long a)
```

```
_STATIC_FORCEINLINE unsigned long __RV_CLZ16(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_KABS16(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_SMAX16(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE unsigned long __RV_SMIN16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long ___RV_UMAX16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_UMIN16(unsigned long a, unsigned long b)
___RV_SCLIP16 (a, b)
RV UCLIP16 (a, b)
group NMSIS_Core_DSP_Intrinsic_SIMD_16B_MISC
    SIMD 16-bit Miscellaneous Instructions.
    there are 10 SIMD 16-bit Misc instructions.
    Defines
     RV SCLIP16 (a, b)
       SCLIP16 (SIMD 16-bit Signed Clip Value)
       Type: SIMD
```

Purpose: Limit the 16-bit signed integer elements of a register into a signed range simultaneously.

Description: This instruction limits the 16-bit signed integer elements stored in Rs1 into a signed integer range between 2imm4u-1 and -2imm4u, and writes the limited results to Rd. For example, if imm4u is 3, the 16-bit input values should be saturated between 7 and -8. If saturation is performed, set OV bit to 1.

Operations:

Syntax:

SCLIP16 Rd, Rs1, imm4u[3:0]

```
src = Rs1.H[x];
if (src > (2^imm4u)-1) {
    src = (2^imm4u)-1;
    OV = 1;
} else if (src < -2^imm4u) {
    src = -2^imm4u;
    OV = 1;
}
Rd.H[x] = src
for RV32: x=1...0,
for RV64: x=3...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

```
__RV_UCLIP16 (a, b)
UCLIP16 (SIMD 16-bit Unsigned Clip Value)
```

Type: SIMD Syntax:

```
UCLIP16 Rt, Ra, imm4u
```

Purpose: Limit the 16-bit signed elements of a register into an unsigned range simultaneously.

Description: This instruction limits the 16-bit signed elements stored in Rs1 into an unsigned integer range between 2imm4u-1 and 0, and writes the limited results to Rd. For example, if imm4u is 3, the 16-bit input values should be saturated between 7 and 0. If saturation is performed, set OV bit to 1.

Operations:

```
src = Rs1.H[x];
if (src > (2^imm4u)-1) {
    src = (2^imm4u)-1;
    OV = 1;
} else if (src < 0) {
    src = 0;
    OV = 1;
}
Rd.H[x] = src;
for RV32: x=1...0,
for RV64: x=3...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

Functions

__STATIC_FORCEINLINE unsigned long __RV_CLRS16 (unsigned long a) CLRS16 (SIMD 16-bit Count Leading Redundant Sign)

- ----

Type: SIMD

Syntax:

```
CLRS16 Rd, Rs1
```

Purpose: Count the number of redundant sign bits of the 16-bit elements of a general register.

Description: Starting from the bits next to the sign bits of the 16-bit elements of Rs1, this instruction counts the number of redundant sign bits and writes the result to the corresponding 16- bit elements of Rd.

Operations:

```
snum[x] = Rs1.H[x];
cnt[x] = 0;
for (i = 14 to 0) {
  if (snum[x](i) == snum[x](15)) {
    cnt[x] = cnt[x] + 1;
```

(continues on next page)

(continued from previous page)

```
} else {
    break;
}

Rd.H[x] = cnt[x];
for RV32: x=1...0
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_CLO16 (unsigned long a) CLO16 (SIMD 16-bit Count Leading One)
```

Type: SIMD

Syntax:

```
CL016 Rd, Rs1
```

Purpose: Count the number of leading one bits of the 16-bit elements of a general register.

Description: Starting from the most significant bits of the 16-bit elements of Rs1, this instruction counts the number of leading one bits and writes the results to the corresponding 16-bit elements of Rd.

Operations:

```
snum[x] = Rs1.H[x];
cnt[x] = 0;
for (i = 15 to 0) {
   if (snum[x](i) == 1) {
      cnt[x] = cnt[x] + 1;
   } else {
      break;
   }
}
Rd.H[x] = cnt[x];
for RV32: x=1...0
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_CLZ16 (unsigned long a) CLZ16 (SIMD 16-bit Count Leading Zero)
```

Type: SIMD

Syntax:

```
CLZ16 Rd, Rs1
```

Purpose: Count the number of leading zero bits of the 16-bit elements of a general register.

Description: Starting from the most significant bits of the 16-bit elements of Rs1, this instruction counts the number of leading zero bits and writes the results to the corresponding 16-bit elements of Rd.

Operations:

```
snum[x] = Rs1.H[x];
cnt[x] = 0;
for (i = 15 to 0) {
   if (snum[x](i) == 0) {
     cnt[x] = cnt[x] + 1;
   } else {
     break;
   }
}
Rd.H[x] = cnt[x];
for RV32: x=1...0
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_KABS16(unsigned long a)

KABS16(SIMD 16-bit Saturating Absolute)
```

Type: SIMD

Syntax:

```
KABS16 Rd, Rs1
```

Purpose: Get the absolute value of 16-bit signed integer elements simultaneously.

Description: This instruction calculates the absolute value of 16-bit signed integer elements stored in Rs1 and writes the element results to Rd. If the input number is 0x8000, this instruction generates 0x7fff as the output and sets the OV bit to 1.

Operations:

```
src = Rs1.H[x];
if (src == 0x8000) {
    src = 0x7ffff;
    OV = 1;
} else if (src[15] == 1)
    src = -src;
}
Rd.H[x] = src;
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_SMAX16(unsigned long a, unsigned long b) SMAX16(SIMD 16-bit Signed Maximum)
```

Type: SIMD

Syntax:

```
SMAX16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit signed integer elements finding maximum operations simultaneously.

Description: This instruction compares the 16-bit signed integer elements in Rs1 with the 16-bit signed integer elements in Rs2 and selects the numbers that is greater than the other one. The selected results are written to Rd.

Operations:

```
Rd.H[x] = (Rs1.H[x] > Rs2.H[x])? Rs1.H[x] : Rs2.H[x];
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SMIN16(unsigned long a, unsigned long b) SMIN16(SIMD 16-bit Signed Minimum)

Type: SIMD

Syntax:

```
SMIN16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit signed integer elements finding minimum operations simultaneously.

Description: This instruction compares the 16-bit signed integer elements in Rs1 with the 16-bit signed integer elements in Rs2 and selects the numbers that is less than the other one. The selected results are written to Rd.

Operations:

```
Rd.H[x] = (Rs1.H[x] < Rs2.H[x])? Rs1.H[x] : Rs2.H[x];
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UMAX16(unsigned long a, unsigned long b)
 UMAX16(SIMD 16-bit Unsigned Maximum)

Type: SIMD

Syntax:

```
UMAX16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit unsigned integer elements finding maximum operations simultaneously.

Description: This instruction compares the 16-bit unsigned integer elements in Rs1 with the 16-bit unsigned integer elements in Rs2 and selects the numbers that is greater than the other one. The selected results are written to Rd.

Operations:

```
Rd.H[x] = (Rs1.H[x] >u Rs2.H[x])? Rs1.H[x] : Rs2.H[x];
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
__STATIC_FORCEINLINE unsigned long __RV_UMIN16(unsigned long a, unsigned long b)
    UMIN16(SIMD 16-bit Unsigned Minimum)
```

Type: SIMD

Syntax:

```
UMIN16 Rd, Rs1, Rs2
```

Purpose: Do 16-bit unsigned integer elements finding minimum operations simultaneously.

Description: This instruction compares the 16-bit unsigned integer elements in Rs1 with the 16-bit unsigned integer elements in Rs2 and selects the numbers that is less than the other one. The selected results are written to Rd.

Operations:

```
Rd.H[x] = (Rs1.H[x] <u Rs2.H[x])? Rs1.H[x] : Rs2.H[x];
for RV32: x=1...0,
for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

SIMD 8-bit Miscellaneous Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_CLRS8(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_CLO8(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_CLZ8(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_KABS8(unsigned long a)
```

```
__STATIC_FORCEINLINE unsigned long __RV_SMAX8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_SMIN8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_UMAX8 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_UMIN8 (unsigned long a, unsigned long b)
__RV_SCLIP8 (a, b)
__RV_UCLIP8 (a, b)
__RV_UCLIP8 (a, b)
__RV_UCLIP8 (a, b)
__SIMD 8-bit Miscellaneous Instructions.

__RV_SCLIP8 (a, b)
__SCLIP8 (a, b)
__SCLIP8 (SIMD 8-bit Signed Clip Value)
__Type: SIMD
__Syntax:
__SCLIP8 Rd, Rs1, imm3u[2:0]
```

Purpose: Limit the 8-bit signed integer elements of a register into a signed range simultaneously.

Description: This instruction limits the 8-bit signed integer elements stored in Rs1 into a signed integer range between 2^imm3u-1 and -2^imm3u, and writes the limited results to Rd. For example, if imm3u is 3, the 8-bit input values should be saturated between 7 and -8. If saturation is performed, set OV bit to 1.

Operations:

```
src = Rs1.B[x];
if (src > (2^imm3u)-1) {
    src = (2^imm3u)-1;
    OV = 1;
} else if (src < -2^imm3u) {
    src = -2^imm3u;
    OV = 1;
}
Rd.B[x] = src
for RV32: x=3...0,
for RV64: x=7...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

Syntax:

```
UCLIP8 Rt, Ra, imm3u
```

Purpose: Limit the 8-bit signed elements of a register into an unsigned range simultaneously.

Description: This instruction limits the 8-bit signed elements stored in Rs1 into an unsigned integer range between 2^himm3u-1 and 0, and writes the limited results to Rd. For example, if imm3u is 3, the 8-bit input values should be saturated between 7 and 0. If saturation is performed, set OV bit to 1.

Operations:

```
src = Rs1.H[x];
if (src > (2^imm3u)-1) {
    src = (2^imm3u)-1;
    OV = 1;
} else if (src < 0) {
    src = 0;
    OV = 1;
}
Rd.H[x] = src;
for RV32: x=3...0,
for RV64: x=7...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

Functions

```
__STATIC_FORCEINLINE unsigned long __RV_CLRS8 (unsigned long a) CLRS8 (SIMD 8-bit Count Leading Redundant Sign)
```

Type: SIMD

Syntax:

```
CLRS8 Rd, Rs1
```

Purpose: Count the number of redundant sign bits of the 8-bit elements of a general register.

Description: Starting from the bits next to the sign bits of the 8-bit elements of Rs1, this instruction counts the number of redundant sign bits and writes the result to the corresponding 8-bit elements of Rd.

Operations:

```
snum[x] = Rs1.B[x];
cnt[x] = 0;
for (i = 6 to 0) {
   if (snum[x](i) == snum[x](7)) {
     cnt[x] = cnt[x] + 1;
   } else {
     break;
   }
}
Rd.B[x] = cnt[x];
```

(continues on next page)

(continued from previous page)

```
for RV32: x=3...0
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_CLO8 (unsigned long a) CLO8 (SIMD 8-bit Count Leading One)
```

Type: SIMD

Syntax:

```
CLO8 Rd, Rs1
```

Purpose: Count the number of leading one bits of the 8-bit elements of a general register.

Description: Starting from the most significant bits of the 8-bit elements of Rs1, this instruction counts the number of leading one bits and writes the results to the corresponding 8-bit elements of Rd.

Operations:

```
snum[x] = Rs1.B[x];
cnt[x] = 0;
for (i = 7 to 0) {
   if (snum[x](i) == 1) {
      cnt[x] = cnt[x] + 1;
   } else {
      break;
   }
}
Rd.B[x] = cnt[x];
for RV32: x=3...0
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_CLZ8 (unsigned long a) CLZ8 (SIMD 8-bit Count Leading Zero)
```

Type: SIMD

Syntax:

```
CLZ8 Rd, Rs1
```

Purpose: Count the number of leading zero bits of the 8-bit elements of a general register.

Description: Starting from the most significant bits of the 8-bit elements of Rs1, this instruction counts the number of leading zero bits and writes the results to the corresponding 8-bit elements of Rd.

Operations:

```
snum[x] = Rs1.B[x];
cnt[x] = 0;
for (i = 7 to 0) {
   if (snum[x](i) == 0) {
     cnt[x] = cnt[x] + 1;
   } else {
     break;
   }
}
Rd.B[x] = cnt[x];
for RV32: x=3...0
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_KABS8 (unsigned long a)
KABS8 (SIMD 8-bit Saturating Absolute)
```

Type: SIMD

Syntax:

```
KABS8 Rd, Rs1
```

Purpose: Get the absolute value of 8-bit signed integer elements simultaneously.

Description: This instruction calculates the absolute value of 8-bit signed integer elements stored in Rs1 and writes the element results to Rd. If the input number is 0x80, this instruction generates 0x7f as the output and sets the OV bit to 1.

Operations:

```
src = Rs1.B[x];
if (src == 0x80) {
    src = 0x7f;
    OV = 1;
} else if (src[7] == 1)
    src = -src;
}
Rd.B[x] = src;
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_SMAX8 (unsigned long a, unsigned long b) SMAX8 (SIMD 8-bit Signed Maximum)
```

Type: SIMD

Syntax:

```
SMAX8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit signed integer elements finding maximum operations simultaneously.

Description: This instruction compares the 8-bit signed integer elements in Rs1 with the 8-bit signed integer elements in Rs2 and selects the numbers that is greater than the other one. The selected results are written to Rd.

Operations:

```
Rd.B[x] = (Rs1.B[x] > Rs2.B[x])? Rs1.B[x] : Rs2.B[x];
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SMIN8 (unsigned long a, unsigned long b) SMIN8 (SIMD 8-bit Signed Minimum)

Type: SIMD

Syntax:

```
SMIN8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit signed integer elements finding minimum operations simultaneously.

Description: This instruction compares the 8-bit signed integer elements in Rs1 with the 8-bit signed integer elements in Rs2 and selects the numbers that is less than the other one. The selected results are written to Rd.

Operations:

```
Rd.B[x] = (Rs1.B[x] < Rs2.B[x])? Rs1.B[x] : Rs2.B[x];
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UMAX8 (unsigned long a, unsigned long b) UMAX8 (SIMD 8-bit Unsigned Maximum)

Type: SIMD

Syntax:

```
UMAX8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit unsigned integer elements finding maximum operations simultaneously.

Description: This instruction compares the 8-bit unsigned integer elements in Rs1 with the four 8- bit unsigned integer elements in Rs2 and selects the numbers that is greater than the other one. The two selected results are written to Rd.

Operations:

```
Rd.B[x] = (Rs1.B[x] >u Rs2.B[x])? Rs1.B[x] : Rs2.B[x];
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
__STATIC_FORCEINLINE unsigned long __RV_UMIN8 (unsigned long a, unsigned long b) UMIN8 (SIMD 8-bit Unsigned Minimum)
```

Type: SIMD

Syntax:

```
UMIN8 Rd, Rs1, Rs2
```

Purpose: Do 8-bit unsigned integer elements finding minimum operations simultaneously.

Description: This instruction compares the 8-bit unsigned integer elements in Rs1 with the 8-bit unsigned integer elements in Rs2 and selects the numbers that is less than the other one. The selected results are written to Rd.

Operations:

```
Rd.B[x] = (Rs1.B[x] <u Rs2.B[x])? Rs1.B[x] : Rs2.B[x];
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

SIMD 8-bit Unpacking Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_SUNPKD810(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_SUNPKD820(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_SUNPKD830(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_SUNPKD831(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_SUNPKD832(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_ZUNPKD810(unsigned long a)
```

```
__STATIC_FORCEINLINE unsigned long __RV_ZUNPKD820(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_ZUNPKD830(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_ZUNPKD831(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_ZUNPKD832(unsigned long a)
group NMSIS_Core_DSP_Intrinsic_SIMD_8B_UNPACK
SIMD 8-bit Unpacking Instructions.
```

there are 8 SIMD 8-bit Unpacking instructions.

Functions

```
__STATIC_FORCEINLINE unsigned long __RV_SUNPKD810 (unsigned long a) SUNPKD810 (Signed Unpacking Bytes 1 & 0)
```

Type: DSP

Syntax:

```
SUNPKD8xy Rd, Rs1
xy = {10, 20, 30, 31, 32}
```

Purpose: Unpack byte *x and byte y* of 32-bit chunks in a register into two 16-bit signed halfwords of 32-bit chunks in a register.

Description: For the SUNPKD8 (x) ($\star y \star$) instruction, it unpacks byte x and byte y of 32-bit chunks in Rs1 into two 16-bit signed halfwords and writes the results to the top part and the bottom part of 32-bit chunks in Rd.

Operations:

```
Rd.W[m].H[1] = SE16(Rs1.W[m].B[x])
Rd.W[m].H[0] = SE16(Rs1.W[m].B[y])
// SUNPKD810, x=1,y=0
// SUNPKD820, x=2,y=0
// SUNPKD830, x=3,y=0
// SUNPKD831, x=3,y=1
// SUNPKD832, x=3,y=2
for RV32: m=0,
for RV64: m=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_SUNPKD820(unsigned long a) SUNPKD820 (Signed Unpacking Bytes 2 & 0)
```

Type: DSP

Syntax:

```
SUNPKD8xy Rd, Rs1
xy = {10, 20, 30, 31, 32}
```

Purpose: Unpack byte *x and byte y* of 32-bit chunks in a register into two 16-bit signed halfwords of 32-bit chunks in a register.

Description: For the SUNPKD8 (x) (*y*) instruction, it unpacks byte x and byte y of 32-bit chunks in Rs1 into two 16-bit signed halfwords and writes the results to the top part and the bottom part of 32-bit chunks in Rd.

Operations:

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_SUNPKD830 (unsigned long a) SUNPKD830 (Signed Unpacking Bytes 3 & 0)
```

Type: DSP

Syntax:

```
SUNPKD8xy Rd, Rs1
xy = {10, 20, 30, 31, 32}
```

Purpose: Unpack byte *x and byte y* of 32-bit chunks in a register into two 16-bit signed halfwords of 32-bit chunks in a register.

Description: For the SUNPKD8 (x) (*y*) instruction, it unpacks byte x and byte y of 32-bit chunks in Rs1 into two 16-bit signed halfwords and writes the results to the top part and the bottom part of 32-bit chunks in Rd.

Operations:

```
Rd.W[m].H[1] = SE16(Rs1.W[m].B[x])
Rd.W[m].H[0] = SE16(Rs1.W[m].B[y])
// SUNPKD810, x=1,y=0
// SUNPKD820, x=2,y=0
// SUNPKD830, x=3,y=0
// SUNPKD831, x=3,y=1
// SUNPKD832, x=3,y=2
for RV32: m=0,
for RV64: m=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_SUNPKD831(unsigned long a) SUNPKD831 (Signed Unpacking Bytes 3 & 1)
```

Type: DSP Syntax:

```
SUNPKD8xy Rd, Rs1
xy = {10, 20, 30, 31, 32}
```

Purpose: Unpack byte *x and byte y* of 32-bit chunks in a register into two 16-bit signed halfwords of 32-bit chunks in a register.

Description: For the SUNPKD8 (x) ($\star y \star$) instruction, it unpacks byte *x and byte y* of 32-bit chunks in Rs1 into two 16-bit signed halfwords and writes the results to the top part and the bottom part of 32-bit chunks in Rd.

Operations:

```
Rd.W[m].H[1] = SE16(Rs1.W[m].B[x])
Rd.W[m].H[0] = SE16(Rs1.W[m].B[y])
// SUNPKD810, x=1,y=0
// SUNPKD820, x=2,y=0
// SUNPKD830, x=3,y=0
// SUNPKD831, x=3,y=1
// SUNPKD832, x=3,y=2
for RV32: m=0,
for RV64: m=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_SUNPKD832 (unsigned long a) SUNPKD832 (Signed Unpacking Bytes 3 & 2)
```

Type: DSP

Syntax:

```
SUNPKD8xy Rd, Rs1
xy = {10, 20, 30, 31, 32}
```

Purpose: Unpack byte *x and byte y* of 32-bit chunks in a register into two 16-bit signed halfwords of 32-bit chunks in a register.

Description: For the SUNPKD8 (x) (\star y \star) instruction, it unpacks byte *x and byte y* of 32-bit chunks in Rs1 into two 16-bit signed halfwords and writes the results to the top part and the bottom part of 32-bit chunks in Rd.

Operations:

```
Rd.W[m].H[1] = SE16(Rs1.W[m].B[x])
Rd.W[m].H[0] = SE16(Rs1.W[m].B[y])

// SUNPKD810, x=1,y=0

// SUNPKD820, x=2,y=0

// SUNPKD830, x=3,y=0

// SUNPKD831, x=3,y=1

// SUNPKD832, x=3,y=2
```

(continues on next page)

(continued from previous page)

```
for RV32: m=0,
for RV64: m=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_ZUNPKD810(unsigned long a) ZUNPKD810 (Unsigned Unpacking Bytes 1 & 0)
```

Type: DSP

Syntax:

```
ZUNPKD8xy Rd, Rs1
xy = {10, 20, 30, 31, 32}
```

Purpose: Unpack byte x and byte y of 32-bit chunks in a register into two 16-bit unsigned halfwords of 32-bit chunks in a register.

Description: For the ZUNPKD8 (x) (*y*) instruction, it unpacks byte *x* and byte *y* of 32-bit chunks in Rs1 into two 16-bit unsigned halfwords and writes the results to the top part and the bottom part of 32-bit chunks in Rd.

Operations:

```
Rd.W[m].H[1] = ZE16(Rs1.W[m].B[x])
Rd.W[m].H[0] = ZE16(Rs1.W[m].B[y])
// ZUNPKD810, x=1,y=0
// ZUNPKD820, x=2,y=0
// ZUNPKD830, x=3,y=0
// ZUNPKD831, x=3,y=1
// ZUNPKD832, x=3,y=2
for RV32: m=0,
for RV64: m=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_ZUNPKD820 (unsigned long a) ZUNPKD820 (Unsigned Unpacking Bytes 2 & 0)
```

Type: DSP

Syntax:

```
ZUNPKD8xy Rd, Rs1
xy = {10, 20, 30, 31, 32}
```

Purpose: Unpack byte x and byte y of 32-bit chunks in a register into two 16-bit unsigned halfwords of 32-bit chunks in a register.

Description: For the ZUNPKD8 (x) (*y*) instruction, it unpacks byte x and byte y of 32-bit chunks in Rs1 into two 16-bit unsigned halfwords and writes the results to the top part and the bottom part of 32-bit chunks in Rd.

Operations:

```
Rd.W[m].H[1] = ZE16(Rs1.W[m].B[x])
Rd.W[m].H[0] = ZE16(Rs1.W[m].B[y])
// ZUNPKD810, x=1,y=0
// ZUNPKD820, x=2,y=0
// ZUNPKD830, x=3,y=0
// ZUNPKD831, x=3,y=1
// ZUNPKD832, x=3,y=2
for RV32: m=0,
for RV64: m=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_ZUNPKD830(unsigned long a) ZUNPKD830 (Unsigned Unpacking Bytes 3 & 0)
```

Type: DSP

Syntax:

```
ZUNPKD8xy Rd, Rs1
xy = {10, 20, 30, 31, 32}
```

Purpose: Unpack byte x and byte y of 32-bit chunks in a register into two 16-bit unsigned halfwords of 32-bit chunks in a register.

Description: For the ZUNPKD8 (x) ($\star y \star$) instruction, it unpacks byte *x and byte y* of 32-bit chunks in Rs1 into two 16-bit unsigned halfwords and writes the results to the top part and the bottom part of 32-bit chunks in Rd.

Operations:

```
Rd.W[m].H[1] = ZE16(Rs1.W[m].B[x])
Rd.W[m].H[0] = ZE16(Rs1.W[m].B[y])

// ZUNPKD810, x=1,y=0

// ZUNPKD820, x=2,y=0

// ZUNPKD830, x=3,y=0

// ZUNPKD831, x=3,y=1

// ZUNPKD832, x=3,y=2

for RV32: m=0,
for RV64: m=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_ZUNPKD831 (unsigned long a)
ZUNPKD831 (Unsigned Unpacking Bytes 3 & 1)
Type: DSP
Syntax:
```

```
ZUNPKD8xy Rd, Rs1
xy = {10, 20, 30, 31, 32}
```

Purpose: Unpack byte x and byte y of 32-bit chunks in a register into two 16-bit unsigned halfwords of 32-bit chunks in a register.

Description: For the ZUNPKD8 (x) (*y*) instruction, it unpacks byte x and byte y of 32-bit chunks in Rs1 into two 16-bit unsigned halfwords and writes the results to the top part and the bottom part of 32-bit chunks in Rd.

Operations:

```
Rd.W[m].H[1] = ZE16(Rs1.W[m].B[x])
Rd.W[m].H[0] = ZE16(Rs1.W[m].B[y])

// ZUNPKD810, x=1,y=0

// ZUNPKD820, x=2,y=0

// ZUNPKD830, x=3,y=0

// ZUNPKD831, x=3,y=1

// ZUNPKD832, x=3,y=2

for RV32: m=0,
for RV64: m=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_ZUNPKD832(unsigned long a) ZUNPKD832 (Unsigned Unpacking Bytes 3 & 2)
```

Type: DSP

Syntax:

```
ZUNPKD8xy Rd, Rs1
xy = {10, 20, 30, 31, 32}
```

Purpose: Unpack byte x and byte y of 32-bit chunks in a register into two 16-bit unsigned halfwords of 32-bit chunks in a register.

Description: For the ZUNPKD8 (x) (*y*) instruction, it unpacks byte x and byte y of 32-bit chunks in Rs1 into two 16-bit unsigned halfwords and writes the results to the top part and the bottom part of 32-bit chunks in Rd.

Operations:

```
Rd.W[m].H[1] = ZE16(Rs1.W[m].B[x])
Rd.W[m].H[0] = ZE16(Rs1.W[m].B[y])
// ZUNPKD810, x=1,y=0
// ZUNPKD820, x=2,y=0
// ZUNPKD830, x=3,y=0
// ZUNPKD831, x=3,y=1
// ZUNPKD832, x=3,y=2
for RV32: m=0,
for RV64: m=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

group NMSIS_Core_DSP_Intrinsic_SIMD_DATA_PROCESS SIMD Data Processing Instructions.

Non-SIMD Instructions

Non-SIMD Q15 saturation ALU Instructions

```
__STATIC_FORCEINLINE long __RV_KADDH(int a, int b)

__STATIC_FORCEINLINE long __RV_KHMBB(unsigned int a, unsigned int b)

__STATIC_FORCEINLINE long __RV_KHMBT(unsigned int a, unsigned int b)

__STATIC_FORCEINLINE long __RV_KHMTT(unsigned int a, unsigned int b)

__STATIC_FORCEINLINE long __RV_KSUBH(int a, int b)

__STATIC_FORCEINLINE unsigned long __RV_UKADDH(unsigned int a, unsigned int b)

__STATIC_FORCEINLINE unsigned long __RV_UKSUBH(unsigned int a, unsigned int b)

group NMSIS_Core_DSP_Intrinsic_NON_SIMD_Q15_SAT_ALU

Non-SIMD Q15 saturation ALU Instructions.

there are 7 Non-SIMD Q15 saturation ALU Instructions
```

Functions

```
__STATIC_FORCEINLINE long __RV_KADDH(int a, int b)
KADDH (Signed Addition with Q15 Saturation)
Type: DSP
```

Syntax:

```
KADDH Rd, Rs1, Rs2
```

Purpose: Add the signed lower 32-bit content of two registers with Q15 saturation.

Description: The signed lower 32-bit content of Rs1 is added with the signed lower 32-bit content of Rs2. And the result is saturated to the 16-bit signed integer range of [-2^15, 2^15-1] and then sign- extended and written to Rd. If saturation happens, this instruction sets the OV flag.

Operations:

```
tmp = Rs1.W[0] + Rs2.W[0];
if (tmp > 32767) {
  res = 32767;
  OV = 1;
} else if (tmp < -32768) {
  res = -32768;
  OV = 1
} else {
  res = tmp;
}
Rd = SE(tmp[15:0]);</pre>
```

Return value stored in long type

Parameters

- [in] a: int type of value stored in a
- [in] b: int type of value stored in b

```
_STATIC_FORCEINLINE long __RV_KHMBB(unsigned int a, unsigned int b)
```

KHMBB (Signed Saturating Half Multiply B16 x B16)

Type: DSP Syntax:

```
KHMxy Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 number contents of two 16-bit data in the corresponding portion of the lower 32-bit chunk in registers and then right-shift 15 bits to turn the Q30 result into a Q15 number again and saturate the Q15 result into the destination register. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs1 with the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs2. The Q30 result is then right-shifted 15-bits and saturated into a Q15 value. The Q15 value is then sing-extended and written into Rd. When both the two Q15 inputs are 0x8000, saturation will happen. The result will be saturated to 0x7FFF and the overflow flag OV will be set.

Operations:

```
aop = Rs1.H[0]; bop = Rs2.H[0]; // KHMBB
aop = Rs1.H[0]; bop = Rs2.H[1]; // KHMBT
aop = Rs1.H[1]; bop = Rs2.H[1]; // KHMTT
If (0x8000 != aop | 0x8000 != bop) {
    Mresult[31:0] = aop * bop;
    res[15:0] = Mresult[30:15];
} else {
    res[15:0] = 0x7FFF;
    OV = 1;
}
Rd = SE32(res[15:0]); // Rv32
Rd = SE64(res[15:0]); // RV64
```

Return value stored in long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

```
_STATIC_FORCEINLINE long __RV_KHMBT(unsigned int a, unsigned int b)
```

KHMBT (Signed Saturating Half Multiply B16 x T16)

Type: DSP Syntax:

```
KHMxy Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 number contents of two 16-bit data in the corresponding portion of the lower 32-bit chunk in registers and then right-shift 15 bits to turn the Q30 result into a Q15 number again and saturate the Q15 result into the destination register. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs1 with the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs2. The Q30 result is then right-shifted 15-bits and saturated into a Q15 value. The Q15 value is then sing-extended and written into Rd. When both the two Q15 inputs are 0x8000, saturation will happen. The result will be saturated to 0x7FFF and the overflow flag OV will be set.

Operations:

```
aop = Rs1.H[0]; bop = Rs2.H[0]; // KHMBB
aop = Rs1.H[0]; bop = Rs2.H[1]; // KHMBT
aop = Rs1.H[1]; bop = Rs2.H[1]; // KHMTT
If (0x8000 != aop | 0x8000 != bop) {
    Mresult[31:0] = aop * bop;
    res[15:0] = Mresult[30:15];
} else {
    res[15:0] = 0x7FFF;
    OV = 1;
}
Rd = SE32(res[15:0]); // Rv32
Rd = SE64(res[15:0]); // RV64
```

Return value stored in long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

_STATIC_FORCEINLINE long __RV_KHMTT(unsigned int a, unsigned int b)
KHMTT(Signed Saturating Half Multiply T16 x T16)

Type: DSP

Syntax:

```
KHMxy Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 number contents of two 16-bit data in the corresponding portion of the lower 32-bit chunk in registers and then right-shift 15 bits to turn the Q30 result into a Q15 number again and saturate the Q15 result into the destination register. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs1 with the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs2. The Q30 result is then right-shifted 15-bits and saturated into a Q15 value. The Q15 value is then sing-extended and written into Rd. When both the two Q15 inputs are 0x8000, saturation will happen. The result will be saturated to 0x7FFF and the overflow flag OV will be set.

Operations:

```
aop = Rs1.H[0]; bop = Rs2.H[0]; // KHMBB
aop = Rs1.H[0]; bop = Rs2.H[1]; // KHMBT
aop = Rs1.H[1]; bop = Rs2.H[1]; // KHMTT
If (0x8000 != aop | 0x8000 != bop) {
   Mresult[31:0] = aop * bop;
   res[15:0] = Mresult[30:15];
} else {
   res[15:0] = 0x7FFF;
   OV = 1;
```

(continues on next page)

```
Rd = SE32(res[15:0]); // Rv32
Rd = SE64(res[15:0]); // RV64
```

Return value stored in long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

```
__STATIC_FORCEINLINE long __RV_KSUBH(int a, int b)
```

KSUBH (Signed Subtraction with Q15 Saturation)

Type: DSP Syntax:

```
KSUBH Rd, Rs1, Rs2
```

Purpose: Subtract the signed lower 32-bit content of two registers with Q15 saturation.

Description: The signed lower 32-bit content of Rs2 is subtracted from the signed lower 32-bit content of Rs1. And the result is saturated to the 16-bit signed integer range of [-2^15, 2^15-1] and then sign-extended and written to Rd. If saturation happens, this instruction sets the OV flag.

Operations:

```
tmp = Rs1.W[0] - Rs2.W[0];
if (tmp > (2^15)-1) {
  res = (2^15)-1;
  OV = 1;
} else if (tmp < -2^15) {
  res = -2^15;
  OV = 1
} else {
  res = tmp;
}
Rd = SE(res[15:0]);</pre>
```

Return value stored in long type

Parameters

- [in] a: int type of value stored in a
- [in] b: int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UKADDH(unsigned int a, unsigned int b) UKADDH (Unsigned Addition with U16 Saturation)

Type: DSP

Syntax:

```
UKADDH Rd, Rs1, Rs2
```

Purpose: Add the unsigned lower 32-bit content of two registers with U16 saturation.

Description: The unsigned lower 32-bit content of Rs1 is added with the unsigned lower 32-bit content of Rs2. And the result is saturated to the 16-bit unsigned integer range of [0, 2^16-1] and then sign-extended and written to Rd. If saturation happens, this instruction sets the OV flag.

Operations:

```
tmp = Rs1.W[0] + Rs2.W[0];
if (tmp > (2^16)-1) {
  tmp = (2^16)-1;
  OV = 1;
}
Rd = SE(tmp[15:0]);
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

Type: DSP

Syntax:

```
UKSUBH Rd, Rs1, Rs2
```

Purpose: Subtract the unsigned lower 32-bit content of two registers with U16 saturation.

Description: The unsigned lower 32-bit content of Rs2 is subtracted from the unsigned lower 32-bit content of Rs1. And the result is saturated to the 16-bit unsigned integer range of [0, 2^16-1] and then sign-extended and written to Rd. If saturation happens, this instruction sets the OV flag.

Operations:

```
tmp = Rs1.W[0] - Rs2.W[0];
if (tmp > (2^16)-1) {
   tmp = (2^16)-1;
   OV = 1;
}
else if (tmp < 0) {
   tmp = 0;
   OV = 1;
}
Rd = SE(tmp[15:0]);</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

Non-SIMD Q31 saturation ALU Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_KABSW(signed long a)
```

```
__STATIC_FORCEINLINE long __RV_KADDW(int a, int b)
 _STATIC_FORCEINLINE long __RV_KDMBB(unsigned int a, unsigned int b)
__STATIC_FORCEINLINE long __RV_KDMBT(unsigned int a, unsigned int b)
__STATIC_FORCEINLINE long __RV_KDMTT(unsigned int a, unsigned int b)
__STATIC_FORCEINLINE long __RV_KDMABB(long t, unsigned int a, unsigned int b)
STATIC FORCEINLINE long RV KDMABT(long t, unsigned int a, unsigned int b)
__STATIC_FORCEINLINE long __RV_KDMATT(long t, unsigned int a, unsigned int b)
__STATIC_FORCEINLINE long __RV_KSLLW(long a, unsigned int b)
__STATIC_FORCEINLINE long __RV_KSLRAW(int a, int b)
 _STATIC_FORCEINLINE long __RV_KSLRAW_U(int a, int b)
__STATIC_FORCEINLINE long __RV_KSUBW(int a, int b)
__STATIC_FORCEINLINE unsigned long __RV_UKADDW(unsigned int a, unsigned int b)
__STATIC_FORCEINLINE unsigned long __RV_UKSUBW(unsigned int a, unsigned int b)
\mathbf{RV}_{\mathbf{KSLLIW}}(a, b)
group NMSIS_Core_DSP_Intrinsic_NON_SIMD_Q31_SAT_ALU
    Non-SIMD Q31 saturation ALU Instructions.
    there are Non-SIMD Q31 saturation ALU Instructions
    Defines
    RV KSLLIW (a, b)
        KSLLIW (Saturating Shift Left Logical Immediate for Word)
        Type: DSP
        Syntax:
```

Purpose: Do logical left shift operation with saturation on a 32-bit word. The shift amount is an immediate value.

Description: The first word data in Rs1 is left-shifted logically. The shifted out bits are filled with zero and the shift amount is specified by the imm5u constant. Any shifted value greater than 2^31-1 is saturated to 2^31-1. Any shifted value smaller than -2^31 is saturated to -2^31. And the saturated result is sign-extended and written to Rd. If any saturation is performed, set OV bit to 1.

Operations:

KSLLIW Rd, Rs1, imm5u

```
sa = imm5u;
res[(31+sa):0] = Rs1.W[0] << sa;
if (res > (2^31)-1) {
  res = 0x7ffffffff; OV = 1;
} else if (res < -2^31) {
  res = 0x80000000; OV = 1;
}
Rd[31:0] = res[31:0]; // RV32
Rd[63:0] = SE(res[31:0]); // RV64</pre>
```

Return value stored in long type

Parameters

- [in] a: long type of value stored in a
- [in] b: unsigned int type of value stored in b

Functions

```
__STATIC_FORCEINLINE unsigned long __RV_KABSW(signed long a)
```

KABSW (Scalar 32-bit Absolute Value with Saturation)

Type: DSP

Syntax:

```
KABSW Rd, Rs1
```

Purpose: Get the absolute value of a signed 32-bit integer in a general register.

Description: This instruction calculates the absolute value of a signed 32-bit integer stored in Rs1. The result is sign-extended (for RV64) and written to Rd. This instruction with the minimum negative integer input of 0x80000000 will produce a saturated output of maximum positive integer of 0x7ffffffff and the OV flag will be set to 1.

Operations:

```
if (Rs1.W[0] >= 0) {
   res = Rs1.W[0];
} else {
   If (Rs1.W[0] == 0x80000000) {
     res = 0x7fffffff;
     OV = 1;
   } else {
     res = -Rs1.W[0];
   }
}
Rd = SE32(res);
```

Return value stored in unsigned long type

Parameters

• [in] a: signed long type of value stored in a

```
__STATIC_FORCEINLINE long __RV_KADDW(int a, int b)
```

KADDW (Signed Addition with Q31 Saturation)

Type: DSP

Syntax:

```
KADDW Rd, Rs1, Rs2
```

Purpose: Add the lower 32-bit signed content of two registers with Q31 saturation.

Description: The lower 32-bit signed content of Rs1 is added with the lower 32-bit signed content of Rs2. And the result is saturated to the 32-bit signed integer range of [-2^31, 2^31-1] and then sign- extended and written to Rd. If saturation happens, this instruction sets the OV flag.

Operations:

```
tmp = Rs1.W[0] + Rs2.W[0];
if (tmp > (2^31)-1) {
   res = (2^31)-1;
   OV = 1;
} else if (tmp < -2^31) {
   res = -2^31;
   OV = 1
} else {
   res = tmp;
}
Rd = res[31:0]; // RV32
Rd = SE(res[31:0]) // RV64</pre>
```

Return value stored in long type

Parameters

- [in] a: int type of value stored in a
- [in] b: int type of value stored in b

```
_STATIC_FORCEINLINE long __RV_KDMBB(unsigned int a, unsigned int b)
KDMBB (Signed Saturating Double Multiply B16 x B16)
```

Type: DSP Syntax:

```
KDMxy Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 integer contents of two 16-bit data in the corresponding portion of the lower 32-bit chunk in registers and then double and saturate the Q31 result. The result is written into the destination register for RV32 or sign-extended to 64-bits and written into the destination register for RV64. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs1 with the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs2. The Q30 result is then doubled and saturated into a Q31 value. The Q31 value is then written into Rd (sign-extended in RV64). When both the two Q15 inputs are 0x8000, saturation will happen. The result will be saturated to 0x7FFFFFFF and the overflow flag OV will be set.

Operations:

```
aop = Rs1.H[0]; bop = Rs2.H[0]; // KDMBB
aop = Rs1.H[0]; bop = Rs2.H[1]; // KDMBT
aop = Rs1.H[1]; bop = Rs2.H[1]; // KDMTT
If (0x8000 != aop | 0x8000 != bop) {
    Mresult = aop * bop;
    resQ31 = Mresult << 1;
    Rd = resQ31; // RV32
    Rd = SE(resQ31); // RV64
} else {
    resQ31 = 0x7FFFFFFF;
    Rd = resQ31; // RV32
    Rd = SE(resQ31); // RV64
    OV = 1;
}</pre>
```

Return value stored in long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

```
__STATIC_FORCEINLINE long __RV_KDMBT (unsigned int a, unsigned int b) KDMBT (Signed Saturating Double Multiply B16 x T16)
```

Type: DSP Syntax:

```
KDMxy Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 integer contents of two 16-bit data in the corresponding portion of the lower 32-bit chunk in registers and then double and saturate the Q31 result. The result is written into the destination register for RV32 or sign-extended to 64-bits and written into the destination register for RV64. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs1 with the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs2. The Q30 result is then doubled and saturated into a Q31 value. The Q31 value is then written into Rd (sign-extended in RV64). When both the two Q15 inputs are 0x8000, saturation will happen. The result will be saturated to 0x7FFFFFF and the overflow flag OV will be set.

Operations:

```
aop = Rs1.H[0]; bop = Rs2.H[0]; // KDMBB
aop = Rs1.H[0]; bop = Rs2.H[1]; // KDMBT
aop = Rs1.H[1]; bop = Rs2.H[1]; // KDMTT
If (0x8000 != aop | 0x8000 != bop) {
    Mresult = aop * bop;
    resQ31 = Mresult << 1;
    Rd = resQ31; // RV32
    Rd = SE(resQ31); // RV64
} else {
    resQ31 = 0x7FFFFFFFF;
    Rd = resQ31; // RV32
    Rd = SE(resQ31); // RV64
    OV = 1;
}</pre>
```

Return value stored in long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE long __RV_KDMTT(unsigned int a, unsigned int b)
KDMTT(Signed Saturating Double Multiply T16 x T16)

Type: DSP Syntax:

```
KDMxy Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 integer contents of two 16-bit data in the corresponding portion of the lower 32-bit chunk in registers and then double and saturate the Q31 result. The result is written into the

destination register for RV32 or sign-extended to 64-bits and written into the destination register for RV64. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs1 with the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs2. The Q30 result is then doubled and saturated into a Q31 value. The Q31 value is then written into Rd (sign-extended in RV64). When both the two Q15 inputs are 0x8000, saturation will happen. The result will be saturated to 0x7FFFFFF and the overflow flag OV will be set.

Operations:

```
aop = Rs1.H[0]; bop = Rs2.H[0]; // KDMBB
aop = Rs1.H[0]; bop = Rs2.H[1]; // KDMBT
aop = Rs1.H[1]; bop = Rs2.H[1]; // KDMTT
If (0x8000 != aop | 0x8000 != bop) {
    Mresult = aop * bop;
    resQ31 = Mresult << 1;
    Rd = resQ31; // RV32
    Rd = SE(resQ31); // RV64
} else {
    resQ31 = 0x7FFFFFFFF;
    Rd = resQ31; // RV32
    Rd = SE(resQ31); // RV64
    OV = 1;
}</pre>
```

Return value stored in long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE long __RV_KDMABB(long t, unsigned int a, unsigned int b)
KDMABB (Signed Saturating Double Multiply Addition B16 x B16)

Type: DSP

Syntax:

```
KDMAxy Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 integer contents of two 16-bit data in the corresponding portion of the lower 32-bit chunk in registers and then double and saturate the Q31 result, add the result with the sign-extended lower 32-bit chunk destination register and write the saturated addition result into the destination register. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs1 with the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs2. The Q30 result is then doubled and saturated into a Q31 value. The Q31 value is then added with the content of Rd. If the addition result is beyond the Q31 number range ($-2^31 \le 2^31-1$), it is saturated to the range and the OV flag is set to 1. The result after saturation is written to Rd. When both the two Q15 inputs are 0x8000, saturation will happen and the overflow flag OV will be set.

Operations:

```
aop = Rs1.H[0]; bop = Rs2.H[0]; // KDMABB
aop = Rs1.H[0]; bop = Rs2.H[1]; // KDMABT
aop = Rs1.H[1]; bop = Rs2.H[1]; // KDMATT
```

(continues on next page)

```
If (0x8000 != aop | 0x8000 != bop) {
 Mresult = aop * bop;
 resQ31 = Mresult << 1;
} else {
 resQ31 = 0x7FFFFFFF;
 OV = 1;
resadd = Rd + resQ31; // RV32
resadd = Rd.W[0] + resQ31; // RV64
if (resadd > (2^31) - 1) {
 resadd = (2^31)-1;
 OV = 1;
} else if (resadd < -2^31) {
 resadd = -2^31;
 OV = 1;
Rd = resadd; // RV32
Rd = SE(resadd); // RV64
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE long __RV_KDMABT(long t, unsigned int a, unsigned int b)

KDMABT(Signed Saturating Double Multiply Addition B16 x T16)

Type: DSP

Syntax:

```
KDMAxy Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 integer contents of two 16-bit data in the corresponding portion of the lower 32-bit chunk in registers and then double and saturate the Q31 result, add the result with the sign-extended lower 32-bit chunk destination register and write the saturated addition result into the destination register. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs1 with the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs2. The Q30 result is then doubled and saturated into a Q31 value. The Q31 value is then added with the content of Rd. If the addition result is beyond the Q31 number range ($-2^31 \le 2^31 \le 2^31 \le 1$), it is saturated to the range and the OV flag is set to 1. The result after saturation is written to Rd. When both the two Q15 inputs are 0x8000, saturation will happen and the overflow flag OV will be set.

Operations:

```
aop = Rs1.H[0]; bop = Rs2.H[0]; // KDMABB
aop = Rs1.H[0]; bop = Rs2.H[1]; // KDMABT
aop = Rs1.H[1]; bop = Rs2.H[1]; // KDMATT
If (0x8000 != aop | 0x8000 != bop) {
   Mresult = aop * bop;
   resQ31 = Mresult << 1;</pre>
```

(continues on next page)

```
else {
 resQ31 = 0x7FFFFFFF;
 OV = 1;
resadd = Rd + resQ31; // RV32
resadd = Rd.W[0] + resQ31; // RV64
if (resadd > (2^31) - 1)  {
 resadd = (2^31)-1;
 OV = 1:
} else if (resadd < -2^31) {
 resadd = -2^31;
 OV = 1;
Rd = resadd; // RV32
Rd = SE(resadd); // RV64
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

STATIC_FORCEINLINE long __RV_KDMATT(long t, unsigned int a, unsigned int b) KDMATT (Signed Saturating Double Multiply Addition T16 x T16)

Type: DSP

Syntax:

```
KDMAxy Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 integer contents of two 16-bit data in the corresponding portion of the lower 32-bit chunk in registers and then double and saturate the Q31 result, add the result with the signextended lower 32-bit chunk destination register and write the saturated addition result into the destination register. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs1 with the top or bottom 16-bit Q15 content of the lower 32-bit portion in Rs2. The Q30 result is then doubled and saturated into a O31 value. The O31 value is then added with the content of Rd. If the addition result is beyond the Q31 number range ($-2^31 \le 2^31 \le 2^31 \le 1$), it is saturated to the range and the OV flag is set to 1. The result after saturation is written to Rd. When both the two Q15 inputs are 0x8000, saturation will happen and the overflow flag OV will be set.

Operations:

```
aop = Rs1.H[0]; bop = Rs2.H[0]; // KDMABB
aop = Rs1.H[0]; bop = Rs2.H[1]; // KDMABT
aop = Rs1.H[1]; bop = Rs2.H[1]; // KDMATT
If (0x8000 != aop | 0x8000 != bop) {
 Mresult = aop * bop;
 resQ31 = Mresult << 1;
} else {
 resQ31 = 0x7FFFFFFF;
 OV = 1;
```

(continues on next page)

```
resadd = Rd + resQ31; // RV32
resadd = Rd.W[0] + resQ31; // RV64
if (resadd > (2^31)-1) {
  resadd = (2^31)-1;
  OV = 1;
} else if (resadd < -2^31) {
  resadd = -2^31;
  OV = 1;
}
Rd = resadd; // RV32
Rd = SE(resadd); // RV64</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

```
__STATIC_FORCEINLINE long __RV_KSLLW(long a, unsigned int b)
```

KSLLW (Saturating Shift Left Logical for Word)

Type: DSP

Syntax:

```
KSLLW Rd, Rs1, Rs2
```

Purpose: Do logical left shift operation with saturation on a 32-bit word. The shift amount is a variable from a GPR.

Description: The first word data in Rs1 is left-shifted logically. The shifted out bits are filled with zero and the shift amount is specified by the low-order 5-bits of the value in the Rs2 register. Any shifted value greater than 2^31-1 is saturated to 2^31-1. Any shifted value smaller than -2^31 is saturated to -2^31. And the saturated result is sign-extended and written to Rd. If any saturation is performed, set OV bit to 1.

Operations:

```
sa = Rs2[4:0];
res[(31+sa):0] = Rs1.W[0] << sa;
if (res > (2^31)-1) {
    res = 0x7ffffffff; OV = 1;
} else if (res < -2^31) {
    res = 0x80000000; OV = 1;
}
Rd[31:0] = res[31:0]; // RV32
Rd[63:0] = SE(res[31:0]); // RV64</pre>
```

Return value stored in long type

Parameters

- [in] a: long type of value stored in a
- [in] b: unsigned int type of value stored in b

STATIC_FORCEINLINE long __RV_KSLRAW(int a, int b)

KSLRAW (Shift Left Logical with Q31 Saturation or Shift Right Arithmetic)

Type: DSP Syntax:

```
KSLRAW Rd, Rs1, Rs2
```

Purpose: Perform a logical left (positive) or arithmetic right (negative) shift operation with Q31 saturation for the left shift on a 32-bit data.

Description: The lower 32-bit content of Rs1 is left-shifted logically or right-shifted arithmetically based on the value of Rs2[5:0]. Rs2[5:0] is in the signed range of [-25, 25-1]. A positive Rs2[5:0] means logical left shift and a negative Rs2[5:0] means arithmetic right shift. The shift amount is the absolute value of Rs2[5:0] clamped to the actual shift range of [0, 31]. The left-shifted result is saturated to the 32-bit signed integer range of [-2^31, 2^31-1]. After the shift operation, the final result is bit-31 sign-extended and written to Rd. If any saturation happens, this instruction sets the OV flag. The value of Rs2[31:6] will not affected the operation of this instruction.

Operations:

```
if (Rs2[5:0] < 0) {
 sa = -Rs2[5:0];
 sa = (sa == 32)? 31 : sa;
 res[31:0] = Rs1.W[0] >> (arith) sa;
} else {
 sa = Rs2[5:0];
 tmp = Rs1.W[0] << (logic) sa;
  if (tmp > (2^31) - 1) {
   res[31:0] = (2^31)-1;
   OV = 1;
  } else if (tmp < -2^31) {
    res[31:0] = -2^31;
   OV = 1
  } else {
    res[31:0] = tmp[31:0];
Rd = res[31:0]; // RV32
Rd = SE64(res[31:0]); // RV64
```

Return value stored in long type

Parameters

- [in] a: int type of value stored in a
- [in] b: int type of value stored in b

```
STATIC_FORCEINLINE long __RV_KSLRAW_U(int a, int b)
```

KSLRAW.u (Shift Left Logical with Q31 Saturation or Rounding Shift Right Arithmetic)

Type: DSP Syntax:

KSLRAW.u Rd, Rs1, Rs2

Purpose: Perform a logical left (positive) or arithmetic right (negative) shift operation with Q31 saturation for the left shift and a rounding up operation for the right shift on a 32-bit data.

Description: The lower 32-bit content of Rs1 is left-shifted logically or right-shifted arithmetically based on the value of Rs2[5:0]. Rs2[5:0] is in the signed range of [-25, 25-1]. A positive Rs2[5:0] means logical left shift and a negative Rs2[5:0] means arithmetic right shift. The shift amount is the absolute value of Rs2[5:0] clamped to the actual shift range of [0, 31]. The left-shifted result is saturated to the 32-bit signed integer range of [-2^31, 2^31-1]. The right-shifted result is added a 1 to the most significant discarded bit position for rounding effect. After the shift, saturation, or rounding, the final result is bit-31 sign-extended and written to Rd. If any saturation happens, this instruction sets the OV flag. The value of Rs2[31:6] will not affect the operation of this instruction.

Operations:

```
if (Rs2[5:0] < 0)
 sa = -Rs2[5:0];
 sa = (sa == 32)? 31 : sa;
 res[31:-1] = SE33(Rs1[31:(sa-1)]) + 1;
 rst[31:0] = res[31:0];
} else {
 sa = Rs2[5:0];
 tmp = Rs1.W[0] << (logic) sa;
 if (tmp > (2^31) - 1) {
   rst[31:0] = (2^31)-1;
   OV = 1;
  else if (tmp < -2^31) {
   rst[31:0] = -2^31;
   OV = 1
  } else {
    rst[31:0] = tmp[31:0];
Rd = rst[31:0]; // RV32
Rd = SE64(rst[31:0]); // RV64
```

Return value stored in long type

Parameters

- [in] a: int type of value stored in a
- [in] b: int type of value stored in b

_STATIC_FORCEINLINE long __RV_KSUBW(int a, int b)

KSUBW (Signed Subtraction with Q31 Saturation)

Type: DSP

Syntax:

```
KSUBW Rd, Rs1, Rs2
```

Purpose: Subtract the signed lower 32-bit content of two registers with Q31 saturation.

Description: The signed lower 32-bit content of Rs2 is subtracted from the signed lower 32-bit content of Rs1. And the result is saturated to the 32-bit signed integer range of [-2^31, 2^31-1] and then sign-extened and written to Rd. If saturation happens, this instruction sets the OV flag.

Operations:

```
tmp = Rs1.W[0] - Rs2.W[0];
if (tmp > (2^31)-1) {
  res = (2^31)-1;
    (continues on next page)
```

```
OV = 1;
} else if (tmp < -2^31) {
res = -2^31;
  OV = 1
} else {
  res = tmp;
}
Rd = res[31:0]; // RV32
Rd = SE(res[31:0]); // RV64</pre>
```

Return value stored in long type

Parameters

- [in] a: int type of value stored in a
- [in] b: int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UKADDW(unsigned int a, unsigned int b)
 UKADDW (Unsigned Addition with U32 Saturation)

Type: DSP

Syntax:

```
UKADDW Rd, Rs1, Rs2
```

Purpose: Add the unsigned lower 32-bit content of two registers with U32 saturation.

Description: The unsigned lower 32-bit content of Rs1 is added with the unsigned lower 32-bit content of Rs2. And the result is saturated to the 32-bit unsigned integer range of [0, 2^32-1] and then sign-extended and written to Rd. If saturation happens, this instruction sets the OV flag.

Operations:

```
tmp = Rs1.W[0] + Rs2.W[0];
if (tmp > (2^32)-1) {
  tmp[31:0] = (2^32)-1;
  OV = 1;
}
Rd = tmp[31:0]; // RV32
Rd = SE(tmp[31:0]); // RV64
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UKSUBW(unsigned int a, unsigned int b) UKSUBW (Unsigned Subtraction with U32 Saturation)

Type: DSP

```
Syntax:
```

```
UKSUBW Rd, Rs1, Rs2
```

Purpose: Subtract the unsigned lower 32-bit content of two registers with unsigned 32-bit saturation.

Description: The unsigned lower 32-bit content of Rs2 is subtracted from the unsigned lower 32-bit content of Rs1. And the result is saturated to the 32-bit unsigned integer range of [0, 2^32-1] and then sign-extended and written to Rd. If saturation happens, this instruction sets the OV flag.

Operations:

```
tmp = Rs1.W[0] - Rs2.W[0];
if (tmp < 0) {
  tmp[31:0] = 0;
  OV = 1;
}
Rd = tmp[31:0]; // RV32
Rd = SE(tmp[31:0]); // RV64</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

32-bit Computation Instructions

```
__STATIC_FORCEINLINE long __RV_MAXW(int a, int b)
__STATIC_FORCEINLINE long __RV_MINW(int a, int b)
 _STATIC_FORCEINLINE unsigned long long __RV_MULR64(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE long long __RV_MULSR64(long a, long b)
__STATIC_FORCEINLINE long __RV_RADDW(int a, int b)
__STATIC_FORCEINLINE long __RV_RSUBW(int a, int b)
__STATIC_FORCEINLINE unsigned long __RV_URADDW(unsigned int a, unsigned int b)
__STATIC_FORCEINLINE unsigned long __RV_URSUBW(unsigned int a, unsigned int b)
group NMSIS_Core_DSP_Intrinsic_32B_COMPUTATION
    32-bit Computation Instructions
    there are 8 32-bit Computation Instructions
    Functions
     _STATIC_FORCEINLINE long __RV_MAXW(int a, int b)
        MAXW (32-bit Signed Word Maximum)
        Type: DSP
        Syntax:
        MAXW Rd, Rs1, Rs2
```

Purpose: Get the larger value from the 32-bit contents of two general registers.

Description: This instruction compares two signed 32-bit integers stored in Rs1 and Rs2, picks the larger value as the result, and writes the result to Rd.

Operations:

```
if (Rs1.W[0] >= Rs2.W[0]) {
  Rd = SE(Rs1.W[0]);
} else {
  Rd = SE(Rs2.W[0]);
}
```

Return value stored in long type

Parameters

- [in] a: int type of value stored in a
- [in] b: int type of value stored in b

```
__STATIC_FORCEINLINE long __RV_MINW(int a, int b)
```

MINW (32-bit Signed Word Minimum)

Type: DSP

Syntax:

```
MINW Rd, Rs1, Rs2
```

Purpose: Get the smaller value from the 32-bit contents of two general registers.

Description: This instruction compares two signed 32-bit integers stored in Rs1 and Rs2, picks the smaller value as the result, and writes the result to Rd.

Operations:

```
if (Rs1.W[0] >= Rs2.W[0]) { Rd = SE(Rs2.W[0]); } else { Rd = SE(Rs1.W[0]); }
```

Return value stored in long type

Parameters

- [in] a: int type of value stored in a
- [in] b: int type of value stored in b

__STATIC_FORCEINLINE unsigned long long __RV_MULR64 (unsigned long a, unsigned long b)

MULR64 (Multiply Word Unsigned to 64-bit Data)

Type: DSP

Syntax:

```
MULR64 Rd, Rs1, Rs2
```

Purpose: Multiply the 32-bit unsigned integer contents of two registers and write the 64-bit result.

RV32 Description: This instruction multiplies the 32-bit content of Rs1 with that of Rs2 and writes the 64-bit multiplication result to an even/odd pair of registers containing Rd. Rd(4,1) index d determines the even/odd pair group of the two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the result and the even 2d register of the pair

contains the low 32-bit of the result. The lower 32-bit contents of Rs1 and Rs2 are treated as unsigned integers.

RV64 Description: This instruction multiplies the lower 32-bit content of Rs1 with that of Rs2 and writes the 64-bit multiplication result to Rd. The lower 32-bit contents of Rs1 and Rs2 are treated as unsigned integers.

Operations:

```
RV32:
Mresult = CONCAT(1`b0,Rs1) u* CONCAT(1`b0,Rs2);
R[Rd(4,1).1(0)][31:0] = Mresult[63:32];
R[Rd(4,1).0(0)][31:0] = Mresult[31:0];
RV64:
Rd = Mresult[63:0];
Mresult = CONCAT(1`b0,Rs1.W[0]) u* CONCAT(1`b0,Rs2.W[0]);
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
__STATIC_FORCEINLINE long long __RV_MULSR64(long a, long b)
```

MULSR64 (Multiply Word Signed to 64-bit Data)

Type: DSP Syntax:

```
MULSR64 Rd, Rs1, Rs2
```

Purpose: Multiply the 32-bit signed integer contents of two registers and write the 64-bit result.

RV32 Description: This instruction multiplies the lower 32-bit content of Rs1 with the lower 32-bit content of Rs2 and writes the 64-bit multiplication result to an even/odd pair of registers containing Rd. Rd(4,1) index d determines the even/odd pair group of the two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the result and the even 2d register of the pair contains the low 32-bit of the result. The lower 32-bit contents of Rs1 and Rs2 are treated as signed integers.

RV64 Description: This instruction multiplies the lower 32-bit content of Rs1 with the lower 32-bit content of Rs2 and writes the 64-bit multiplication result to Rd. The lower 32-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
RV32:
Mresult = Ra s* Rb;
R[Rd(4,1).1(0)][31:0] = Mresult[63:32];
R[Rd(4,1).0(0)][31:0] = Mresult[31:0];
RV64:
Mresult = Ra.W[0] s* Rb.W[0];
Rd = Mresult[63:0];
```

Return value stored in long long type

Parameters

- [in] a: long type of value stored in a
- [in] b: long type of value stored in b

```
__STATIC_FORCEINLINE long __RV_RADDW(int a, int b)
```

RADDW (32-bit Signed Halving Addition)

Type: DSP Syntax:

```
RADDW Rd, Rs1, Rs2
```

Purpose: Add 32-bit signed integers and the results are halved to avoid overflow or saturation.

Description: This instruction adds the first 32-bit signed integer in Rs1 with the first 32-bit signed integer in Rs2. The result is first arithmetically right-shifted by 1 bit and then sign-extended and written to Rd.

Examples:

```
* Rs1 = 0x7FFFFFFF, Rs2 = 0x7FFFFFFF, Rd = 0x7FFFFFFF

* Rs1 = 0x80000000, Rs2 = 0x80000000, Rd = 0x80000000

* Rs1 = 0x40000000, Rs2 = 0x80000000, Rd = 0xE00000000
```

Operations:

```
RV32:
Rd[31:0] = (Rs1[31:0] + Rs2[31:0]) s>> 1;
RV64:
resw[31:0] = (Rs1[31:0] + Rs2[31:0]) s>> 1;
Rd[63:0] = SE(resw[31:0]);
```

Return value stored in long type

Parameters

- [in] a: int type of value stored in a
- [in] b: int type of value stored in b

```
__STATIC_FORCEINLINE long __RV_RSUBW(int a, int b)
```

RSUBW (32-bit Signed Halving Subtraction)

Type: DSP Syntax:

```
RSUBW Rd, Rs1, Rs2
```

Purpose: Subtract 32-bit signed integers and the result is halved to avoid overflow or saturation.

Description: This instruction subtracts the first 32-bit signed integer in Rs2 from the first 32-bit signed integer in Rs1. The result is first arithmetically right-shifted by 1 bit and then sign-extended and written to Rd.

Examples:

```
* Rs1 = 0x7FFFFFFF, Rs2 = 0x80000000, Rd = 0x7FFFFFFFF

* Rs1 = 0x80000000, Rs2 = 0x7FFFFFFF, Rd = 0x80000000

* Rs1 = 0x80000000, Rs2 = 0x40000000, Rd = 0xA0000000
```

Operations:

```
RV32:
Rd[31:0] = (Rs1[31:0] - Rs2[31:0]) s>> 1;
RV64:
resw[31:0] = (Rs1[31:0] - Rs2[31:0]) s>> 1;
Rd[63:0] = SE(resw[31:0]);
```

Return value stored in long type

Parameters

- [in] a: int type of value stored in a
- [in] b: int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_URADDW(unsigned int a, unsigned int b) URADDW (32-bit Unsigned Halving Addition)

Type: DSP Syntax:

```
URADDW Rd, Rs1, Rs2
```

Purpose: Add 32-bit unsigned integers and the results are halved to avoid overflow or saturation.

Description: This instruction adds the first 32-bit unsigned integer in Rs1 with the first 32-bit unsigned integer in Rs2. The result is first logically right-shifted by 1 bit and then sign-extended and written to Rd.

Examples:

```
* Ra = 0x7FFFFFFF, Rb = 0x7FFFFFFF Rt = 0x7FFFFFFF

* Ra = 0x80000000, Rb = 0x80000000 Rt = 0x80000000

* Ra = 0x40000000, Rb = 0x80000000 Rt = 0x60000000
```

Operations:

```
* RV32:

Rd[31:0] = (Rs1[31:0] + Rs2[31:0]) u>> 1;

* RV64:

resw[31:0] = (Rs1[31:0] + Rs2[31:0]) u>> 1;

Rd[63:0] = SE(resw[31:0]);
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_URSUBW(unsigned int a, unsigned int b) URSUBW (32-bit Unsigned Halving Subtraction)

Type: DSP

Syntax:

```
URSUBW Rd, Rs1, Rs2
```

Purpose: Subtract 32-bit unsigned integers and the result is halved to avoid overflow or saturation.

Description: This instruction subtracts the first 32-bit signed integer in Rs2 from the first 32-bit signed integer in Rs1. The result is first logically right-shifted by 1 bit and then sign-extended and written to Rd.

Examples:

```
* Ra = 0x7FFFFFFF, Rb = 0x80000000 Rt = 0xFFFFFFFF

* Ra = 0x80000000, Rb = 0x7FFFFFFF Rt = 0x00000000

* Ra = 0x80000000, Rb = 0x40000000 Rt = 0x20000000
```

Operations:

```
* RV32:

Rd[31:0] = (Rs1[31:0] - Rs2[31:0]) u>> 1;

* RV64:

resw[31:0] = (Rs1[31:0] - Rs2[31:0]) u>> 1;

Rd[63:0] = SE(resw[31:0]);
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned int type of value stored in a
- [in] b: unsigned int type of value stored in b

OV (Overflow) flag Set/Clear Instructions

```
__STATIC_FORCEINLINE void __RV_CLROV(void)

__STATIC_FORCEINLINE unsigned long __RV_RDOV(void)

group NMSIS_Core_DSP_Intrinsic_OV_FLAG_SC
OV (Overflow) flag Set/Clear Instructions.
```

The following table lists the user instructions related to Overflow (OV) flag manipulation. there are 2 OV (Overflow) flag Set/Clear Instructions

Functions

```
__STATIC_FORCEINLINE void __RV_CLROV (void)
CLROV (Clear OV flag)
Type: DSP
Syntax:

CLROV # pseudo mnemonic
```

Purpose: This pseudo instruction is an alias to CSRRCI x0, ucode, 1 instruction.

```
__STATIC_FORCEINLINE unsigned long __RV_RDOV(void)
RDOV (Read OV flag)
Type: DSP
```

Syntax:

```
RDOV Rd # pseudo mnemonic
```

Purpose: This pseudo instruction is an alias to CSRR Rd, ucode instruction which maps to the real instruction of CSRRS Rd, ucode, x0.

Return value stored in unsigned long type

Non-SIMD Miscellaneous Instructions

```
__STATIC_FORCEINLINE long __RV_AVE(long a, long b)
 _STATIC_FORCEINLINE unsigned long __RV_BITREV(unsigned long a, unsigned long b)
 STATIC_FORCEINLINE unsigned long __RV_BPICK(unsigned long a, unsigned long b, unsigned lo
__STATIC_FORCEINLINE unsigned long __RV_MADDR32(unsigned long t, unsigned long a, unsigned
__STATIC_FORCEINLINE unsigned long __RV_MSUBR32(unsigned long t, unsigned long a, unsigned
 _STATIC_FORCEINLINE long __RV_SRA_U(long a, unsigned int b)
__STATIC_FORCEINLINE unsigned long __RV_SWAP8(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_SWAP16(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_WEXT(long long a, unsigned int b)
__RV_BITREVI (a, b)
RV INSB (t, a, b)
___RV__SRAI__U (a, b)
 _RV_WEXTI (a, b)
group NMSIS_Core_DSP_Intrinsic_NON_SIMD_MISC
    Non-SIMD Miscellaneous Instructions.
    There are 13 Miscellaneous Instructions here.
    Defines
      RV BITREVI (a, b)
        BITREVI (Bit Reverse Immediate)
        Type: DSP
        Syntax:
        (RV32) BITREVI Rd, Rs1, imm[4:0]
```

Purpose: Reverse the bit positions of the source operand within a specified width starting from bit 0. The reversed width is an immediate value.

Description: This instruction reverses the bit positions of the content of Rs1. The reversed bit width is calculated as imm[4:0]+1 (RV32) or imm[5:0]+1 (RV64). The upper bits beyond the reversed width are filled with zeros. After the bit reverse operation, the result is written to Rd.

Operations:

(RV64) BITREVI Rd, Rs1, imm[5:0]

```
msb = imm[4:0]; (RV32)
msb = imm[5:0]; (RV64)
rev[0:msb] = Rs1[msb:0];
Rd = ZE(rev[msb:0]);
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
__RV_INSB (t, a, b)
INSB (Insert Byte)
```

Type: DSP

Syntax:

```
(RV32) INSB Rd, Rs1, imm[1:0]
(RV64) INSB Rd, Rs1, imm[2:0]
```

Purpose: Insert byte 0 of a 32-bit or 64-bit register into one of the byte elements of another register.

Description: This instruction inserts byte 0 of Rs1 into byte imm[1:0] (RV32) or imm[2:0] (RV64) of Rd.

Operations:

```
bpos = imm[1:0]; (RV32)
bpos = imm[2:0]; (RV64)
Rd.B[bpos] = Rs1.B[0]
```

Return value stored in unsigned long type

Parameters

- [in] t: unsigned long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
\mathbf{RV}_{\mathbf{SRAI}}\mathbf{U}(a, b)
```

SRAI.u (Rounding Shift Right Arithmetic Immediate)

Type: DSP

Syntax:

```
SRAI.u Rd, Rs1, imm6u[4:0] (RV32)
SRAI.u Rd, Rs1, imm6u[5:0] (RV64)
```

Purpose: Perform an arithmetic right shift operation with rounding. The shift amount is an immediate value.

Description: This instruction right-shifts the content of Rs1 arithmetically. The shifted out bits are filled with the sign-bit and the shift amount is specified by the imm6u[4:0] (RV32) or imm6u[5:0] (RV64) constant. For the rounding operation, a value of 1 is added to the most significant discarded bit of the data to calculate the final result. And the result is written to Rd.

Operations:

```
| RV32:
| sa = imm6u[4:0];
| if (sa > 0) {
| res[31:-1] = SE33(Rs1[31:(sa-1)]) + 1;
| Rd = res[31:0];
| else {
| Rd = Rs1;
| }
| * RV64:
| sa = imm6u[5:0];
| if (sa > 0) {
| res[63:-1] = SE65(Rs1[63:(sa-1)]) + 1;
| Rd = res[63:0];
| else {
| Rd = Rs1;
| }
| rd = Rs1;
| }
| res[63:0];
| else {
| Rd = Rs1;
| }
| Rd = Rs1;
| }
| Res[63:0] | Res[63:0];
| else {
| Rd = Rs1;
| }
| Res[63:0] | Res[63:0];
| Res[63:0] | Res[63:0] | Res[63:0];
| Res[63:0] |
```

Return value stored in long type

Parameters

- [in] a: long type of value stored in a
- [in] b: unsigned int type of value stored in b

```
__RV__WEXTI (a, b)
```

WEXTI (Extract Word from 64-bit Immediate)

Type: DSP

Syntax:

```
WEXTI Rd, Rs1, #LSBloc
```

Purpose: Extract a 32-bit word from a 64-bit value stored in an even/odd pair of registers (RV32) or a register (RV64) starting from a specified immediate LSB bit position.

RV32 Description: This instruction extracts a 32-bit word from a 64-bit value of an even/odd pair of registers specified by Rs1(4,1) starting from a specified immediate LSB bit position, #LSBloc. The extracted word is written to Rd. Rs1(4,1), i.e., d, determines the even/odd pair group of the two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the 64-bit value and the even 2d register of the pair contains the low 32-bit of the 64-bit value.

RV64 Description: This instruction extracts a 32-bit word from a 64-bit value in Rs1 starting from a specified immediate LSB bit position, #LSBloc. The extracted word is sign-extended and written to lower 32- bit of Rd.

Operations:

```
* RV32:
Idx0 = CONCAT(Rs1(4,1),1'b0); Idx1 = CONCAT(Rs2(4,1),1'b1);
src[63:0] = Concat(R[Idx1], R[Idx0]);
Rd = src[31+LSBloc:LSBloc];
* RV64:
ExtractW = Rs1[31+LSBloc:LSBloc];
Rd = SE(ExtractW)
```

Return value stored in unsigned long type

Parameters

- [in] a: long long type of value stored in a
- [in] b: unsigned int type of value stored in b

Functions

```
__STATIC_FORCEINLINE long __RV_AVE (long a, long b)
AVE (Average with Rounding)
Type: DSP
Syntax:
```

Purpose: Calculate the average of the contents of two general registers.

Description: This instruction calculates the average value of two signed integers stored in Rs1 and Rs2, rounds up a half-integer result to the nearest integer, and writes the result to Rd.

Operations:

AVE Rd, Rs1, Rs2

```
Sum = CONCAT(Rs1[MSB],Rs1[MSB:0]) + CONCAT(Rs2[MSB],Rs2[MSB:0]) + 1;
Rd = Sum[(MSB+1):1];
for RV32: MSB=31,
for RV64: MSB=63
```

Return value stored in long type

Parameters

- [in] a: long type of value stored in a
- [in] b: long type of value stored in b

```
__STATIC_FORCEINLINE unsigned long __RV_BITREV(unsigned long a, unsigned long b)
BITREV(Bit Reverse)
```

Type: DSP Syntax:

```
BITREV Rd, Rs1, Rs2
```

Purpose: Reverse the bit positions of the source operand within a specified width starting from bit 0. The reversed width is a variable from a GPR.

Description: This instruction reverses the bit positions of the content of Rs1. The reversed bit width is calculated as Rs2[4:0]+1 (RV32) or Rs2[5:0]+1 (RV64). The upper bits beyond the reversed width are filled with zeros. After the bit reverse operation, the result is written to Rd.

Operations:

```
msb = Rs2[4:0]; (for RV32)
msb = Rs2[5:0]; (for RV64)
rev[0:msb] = Rs1[msb:0];
Rd = ZE(rev[msb:0]);
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_BPICK(unsigned long a, unsigned long b, unsign BPICK (Bit-wise Pick)

Type: DSP Syntax:

```
BPICK Rd, Rs1, Rs2, Rc
```

Purpose: Select from two source operands based on a bit mask in the third operand.

Description: This instruction selects individual bits from Rs1 or Rs2, based on the bit mask value in Rc. If a bit in Rc is 1, the corresponding bit is from Rs1; otherwise, the corresponding bit is from Rs2. The selection results are written to Rd.

Operations:

```
Rd[x] = Rc[x]? Rs1[x] : Rs2[x];
for RV32, x=31...0
for RV64, x=63...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b
- [in] c: unsigned long type of value stored in c

__STATIC_FORCEINLINE unsigned long __RV_MADDR32 (unsigned long t, unsigned long a, unsi MADDR32 (Multiply and Add to 32-Bit Word)

Type: DSP

Syntax:

```
MADDR32 Rd, Rs1, Rs2
```

Purpose: Multiply the 32-bit contents of two registers and add the lower 32-bit multiplication result to the 32-bit content of a destination register. Write the final result back to the destination register.

Description: This instruction multiplies the lower 32-bit content of Rs1 with that of Rs2. It adds the lower 32-bit multiplication result to the lower 32-bit content of Rd and writes the final result (RV32) or sign-extended result (RV64) back to Rd. The contents of Rs1 and Rs2 can be either signed or unsigned integers.

Operations:

```
RV32:
Mresult = Rs1 * Rs2;
Rd = Rd + Mresult.W[0];
RV64:
Mresult = Rs1.W[0] * Rs2.W[0];
tres[31:0] = Rd.W[0] + Mresult.W[0];
Rd = SE64(tres[31:0]);
```

Return value stored in unsigned long type

Parameters

- [in] t: unsigned long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_MSUBR32 (unsigned long t, unsigned long a, unsi MSUBR32 (Multiply and Subtract from 32-Bit Word)

Type: DSP Syntax:

```
MSUBR32 Rd, Rs1, Rs2
```

Purpose: Multiply the 32-bit contents of two registers and subtract the lower 32-bit multiplication result from the 32-bit content of a destination register. Write the final result back to the destination register.

Description: This instruction multiplies the lower 32-bit content of Rs1 with that of Rs2, subtracts the lower 32-bit multiplication result from the lower 32-bit content of Rd, then writes the final result (RV32) or sign-extended result (RV64) back to Rd. The contents of Rs1 and Rs2 can be either signed or unsigned integers.

Operations:

```
RV32:
Mresult = Rs1 * Rs2;
Rd = Rd - Mresult.W[0];
RV64:
Mresult = Rs1.W[0] * Rs2.W[0];
tres[31:0] = Rd.W[0] - Mresult.W[0];
Rd = SE64(tres[31:0]);
```

Return value stored in unsigned long type

Parameters

- [in] t: unsigned long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
__STATIC_FORCEINLINE long __RV_SRA_U(long a, unsigned int b)
```

SRA.u (Rounding Shift Right Arithmetic)

Type: DSP Syntax:

```
SRA.u Rd, Rs1, Rs2
```

Purpose: Perform an arithmetic right shift operation with rounding. The shift amount is a variable from a GPR.

Description: This instruction right-shifts the content of Rs1 arithmetically. The shifted out bits are filled with the sign-bit and the shift amount is specified by the low-order 5-bits (RV32) or 6-bits (RV64) of the Rs2 register. For the rounding operation, a value of 1 is added to the most significant discarded bit of the data to calculate the final result. And the result is written to Rd.

Operations:

```
* RV32:
sa = Rs2[4:0];
if (sa > 0) {
  res[31:-1] = SE33(Rs1[31:(sa-1)]) + 1;
  Rd = res[31:0];
} else {
  Rd = Rs1;
}
* RV64:
sa = Rs2[5:0];
if (sa > 0) {
  res[63:-1] = SE65(Rs1[63:(sa-1)]) + 1;
  Rd = res[63:0];
} else {
  Rd = Rs1;
}
```

Return value stored in long type

Parameters

- [in] a: long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SWAP8(unsigned long a)

SWAP8 (Swap Byte within Halfword)

Type: DSP

Syntax:

```
SWAP8 Rd, Rs1
```

Purpose: Swap the bytes within each halfword of a register.

Description: This instruction swaps the bytes within each halfword of Rs1 and writes the result to Rd.

Operations:

```
Rd.H[x] = CONCAT(Rs1.H[x][7:0],Rs1.H[x][15:8]);

for RV32: x=1...0,

for RV64: x=3...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

__STATIC_FORCEINLINE unsigned long __RV_SWAP16(unsigned long a) SWAP16(Swap Halfword within Word)

Type: DSP

Syntax:

```
SWAP16 Rd, Rs1
```

Purpose: Swap the 16-bit halfwords within each word of a register.

Description: This instruction swaps the 16-bit halfwords within each word of Rs1 and writes the result to Rd.

Operations:

```
Rd.W[x] = CONCAT(Rs1.W[x][15:0],Rs1.H[x][31:16]);

for RV32: x=0,

for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_WEXT(long long a, unsigned int b) WEXT(Extract Word from 64-bit)
```

```
Type: DSP
Syntax:
```

```
WEXT Rd, Rs1, Rs2
```

Purpose: Extract a 32-bit word from a 64-bit value stored in an even/odd pair of registers (RV32) or a register (RV64) starting from a specified LSB bit position in a register.

RV32 Description: This instruction extracts a 32-bit word from a 64-bit value of an even/odd pair of registers specified by Rs1(4,1) starting from a specified LSB bit position, specified in Rs2[4:0]. The extracted word is written to Rd. Rs1(4,1), i.e., d, determines the even/odd pair group of the two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the 64-bit value and the even 2d register of the pair contains the low 32-bit of the 64-bit value.

Operations:

```
* RV32:
Idx0 = CONCAT(Rs1(4,1),1'b0); Idx1 = CONCAT(Rs1(4,1),1'b1);
src[63:0] = Concat(R[Idx1], R[Idx0]);
LSBloc = Rs2[4:0];
Rd = src[31+LSBloc:LSBloc];
* RV64:
LSBloc = Rs2[4:0];
ExtractW = Rs1[31+LSBloc:LSBloc];
Rd = SE(ExtractW)
```

Return value stored in unsigned long type

Parameters

- [in] a: long long type of value stored in a
- [in] b: unsigned int type of value stored in b

group NMSIS Core DSP Intrinsic NON SIMD

Non-SIMD Instructions.

Partial-SIMD Data Processing Instructions

SIMD 16-bit Packing Instructions

Functions

```
__STATIC_FORCEINLINE unsigned long __RV_PKBB16 (unsigned long a, unsigned long b) PKBB16 (Pack Two 16-bit Data from Both Bottom Half)
```

Type: DSP Syntax:

```
PKBB16 Rd, Rs1, Rs2
PKBT16 Rd, Rs1, Rs2
PKTT16 Rd, Rs1, Rs2
PKTB16 Rd, Rs1, Rs2
```

Purpose: Pack 16-bit data from 32-bit chunks in two registers.

- PKBB16: bottom.bottom
- PKBT16 bottom.top
- PKTT16 top.top
- PKTB16 top.bottom

Description: (PKBB16) moves Rs1.W[x][15:0] to Rd.W[x][31:16] and moves Rs2.W[x] [15:0] to Rd.W[x] [15:0]. (PKBT16) moves Rs1.W[x] [15:0] to Rd.W[x] [31:16] and moves Rs2.W[x] [31:16] to Rd.W[x] [15:0]. (PKTT16) moves Rs1.W[x] [31:16] to Rd.W[x] [31:16] and moves Rs2.W[x] [31:16] to Rd.W[x] [15:0]. (PKTB16) moves Rs1.W[x] [31:16] to Rd.W[x] [31:16] and moves Rs2.W[x] [15:0] to Rd.W[x] [15:0].

Operations:

```
Rd.W[x][31:0] = CONCAT(Rs1.W[x][15:0], Rs2.W[x][15:0]); // PKBB16
Rd.W[x][31:0] = CONCAT(Rs1.W[x][15:0], Rs2.W[x][31:16]); // PKBT16
Rd.W[x][31:0] = CONCAT(Rs1.W[x][31:16], Rs2.W[x][15:0]); // PKTB16
Rd.W[x][31:0] = CONCAT(Rs1.W[x][31:16], Rs2.W[x][31:16]); // PKTT16
for RV32: x=0,
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

• [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_PKBT16(unsigned long a, unsigned long b)
PKBT16 (Pack Two 16-bit Data from Bottom and Top Half)

Type: DSP

Syntax:

```
PKBB16 Rd, Rs1, Rs2
PKBT16 Rd, Rs1, Rs2
PKTT16 Rd, Rs1, Rs2
PKTB16 Rd, Rs1, Rs2
```

Purpose: Pack 16-bit data from 32-bit chunks in two registers.

- PKBB16: bottom.bottom
- PKBT16 bottom.top
- PKTT16 top.top
- PKTB16 top.bottom

Description: (PKBB16) moves Rs1.W[x][15:0] to Rd.W[x][31:16] and moves Rs2.W[x] [15:0] to Rd.W[x] [15:0]. (PKBT16) moves Rs1.W[x] [15:0] to Rd.W[x] [31:16] and moves Rs2.W[x] [31:16] to Rd.W[x] [15:0]. (PKTT16) moves Rs1.W[x] [31:16] to Rd.W[x] [31:16] and moves Rs2.W[x] [31:16] to Rd.W[x] [15:0]. (PKTB16) moves Rs1.W[x] [31:16] to Rd.W[x] [31:16] and moves Rs2.W[x] [15:0] to Rd.W[x] [15:0].

Operations:

```
Rd.W[x][31:0] = CONCAT(Rs1.W[x][15:0], Rs2.W[x][15:0]); // PKBB16
Rd.W[x][31:0] = CONCAT(Rs1.W[x][15:0], Rs2.W[x][31:16]); // PKBT16
Rd.W[x][31:0] = CONCAT(Rs1.W[x][31:16], Rs2.W[x][15:0]); // PKTB16
Rd.W[x][31:0] = CONCAT(Rs1.W[x][31:16], Rs2.W[x][31:16]); // PKTT16
for RV32: x=0,
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_PKTT16(unsigned long a, unsigned long b)
PKTT16 (Pack Two 16-bit Data from Both Top Half)

Type: DSP

Syntax:

```
PKBB16 Rd, Rs1, Rs2
PKBT16 Rd, Rs1, Rs2
PKTT16 Rd, Rs1, Rs2
PKTB16 Rd, Rs1, Rs2
```

Purpose: Pack 16-bit data from 32-bit chunks in two registers.

- PKBB16: bottom.bottom
- PKBT16 bottom.top

- PKTT16 top.top
- PKTB16 top.bottom

Description: (PKBB16) moves Rs1.W[x][15:0] to Rd.W[x][31:16] and moves Rs2.W[x] [15:0] to Rd.W[x] [15:0]. (PKBT16) moves Rs1.W[x] [15:0] to Rd.W[x] [31:16] and moves Rs2.W[x] [31:16] to Rd.W[x] [15:0]. (PKTT16) moves Rs1.W[x] [31:16] to Rd.W[x] [31:16] and moves Rs2.W[x] [31:16] to Rd.W[x] [15:0]. (PKTB16) moves Rs1.W[x] [31:16] to Rd.W[x] [31:16] and moves Rs2.W[x] [15:0] to Rd.W[x] [15:0].

Operations:

```
Rd.W[x][31:0] = CONCAT(Rs1.W[x][15:0], Rs2.W[x][15:0]); // PKBB16
Rd.W[x][31:0] = CONCAT(Rs1.W[x][15:0], Rs2.W[x][31:16]); // PKBT16
Rd.W[x][31:0] = CONCAT(Rs1.W[x][31:16], Rs2.W[x][15:0]); // PKTB16
Rd.W[x][31:0] = CONCAT(Rs1.W[x][31:16], Rs2.W[x][31:16]); // PKTT16
for RV32: x=0,
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_PKTB16(unsigned long a, unsigned long b)
PKTB16 (Pack Two 16-bit Data from Top and Bottom Half)

Type: DSP

```
Syntax:
```

```
PKBB16 Rd, Rs1, Rs2
PKBT16 Rd, Rs1, Rs2
PKTT16 Rd, Rs1, Rs2
PKTB16 Rd, Rs1, Rs2
```

Purpose: Pack 16-bit data from 32-bit chunks in two registers.

- PKBB16: bottom.bottom
- PKBT16 bottom.top
- PKTT16 top.top
- PKTB16 top.bottom

Description: (PKBB16) moves Rs1.W[x][15:0] to Rd.W[x][31:16] and moves Rs2.W[x] [15:0] to Rd.W[x] [15:0]. (PKBT16) moves Rs1.W[x] [15:0] to Rd.W[x] [31:16] and moves Rs2.W[x] [31:16] to Rd.W[x] [15:0]. (PKTT16) moves Rs1.W[x] [31:16] to Rd.W[x] [31:16] and moves Rs2.W[x] [31:16] to Rd.W[x] [15:0]. (PKTB16) moves Rs1.W[x] [31:16] to Rd.W[x] [31:16] and moves Rs2.W[x] [15:0] to Rd.W[x] [15:0].

Operations:

```
Rd.W[x][31:0] = CONCAT(Rs1.W[x][15:0], Rs2.W[x][15:0]); // PKBB16
Rd.W[x][31:0] = CONCAT(Rs1.W[x][15:0], Rs2.W[x][31:16]); // PKBT16
Rd.W[x][31:0] = CONCAT(Rs1.W[x][31:16], Rs2.W[x][15:0]); // PKTB16
Rd.W[x][31:0] = CONCAT(Rs1.W[x][31:16], Rs2.W[x][31:16]); // PKTT16
```

(continues on next page)

```
for RV32: x=0,
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

Signed MSW 32x32 Multiply and Add Instructions

```
__STATIC_FORCEINLINE long __RV_KMMAC(long t, long a, long b)
__STATIC_FORCEINLINE long __RV_KMMAC_U(long t, long a, long b)
__STATIC_FORCEINLINE long __RV_KMMSB(long t, long a, long b)
__STATIC_FORCEINLINE long __RV_KMMSB_U(long t, long a, long b)
__STATIC_FORCEINLINE long __RV_KWMMUL(long a, long b)
__STATIC_FORCEINLINE long __RV_KWMMUL_U(long a, long b)
__STATIC_FORCEINLINE long __RV_SMMUL(long a, long b)
__STATIC_FORCEINLINE long __RV_SMMUL_U(long a, long b)
__STATIC_FORCEINLINE long __RV_SMMUL_U(long a, long b)
group NMSIS_Core_DSP_Intrinsic_SIGNED_MSW_32X32_MAC
Signed MSW 32x32 Multiply and Add Instructions.
```

there are 8 Signed MSW 32x32 Multiply and Add Instructions

Functions

```
__STATIC_FORCEINLINE long __RV_KMMAC(long t, long a, long b)

KMMAC (SIMD Saturating MSW Signed Multiply Word and Add)

Type: SIMD

Syntax:
```

```
KMMAC Rd, Rs1, Rs2
KMMAC.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of two registers and add the most significant 32-bit results with the signed 32-bit integer elements of a third register. The addition results are saturated first and then written back to the third register. The .u form performs an additional rounding up operation on the multiplication results before adding the most significant 32-bit part of the results.

Description: This instruction multiplies the signed 32-bit elements of Rs1 with the signed 32-bit elements of Rs2 and adds the most significant 32-bit multiplication results with the signed 32-bit elements of Rd. If the addition result is beyond the Q31 number range ($-2^31 \le 2^31-1$), it is saturated to the range and the OV bit is set to 1. The results after saturation are written to Rd. The .u form of the instruction additionally rounds up the most significant 32-bit of the 64-bit multiplication results by adding a 1 to bit 31 of the results.

Operations:

```
Mres[x][63:0] = Rs1.W[x] * Rs2.W[x];
if (`.u` form) {
   Round[x][32:0] = Mres[x][63:31] + 1;
   res[x] = Rd.W[x] + Round[x][32:1];
} else {
   res[x] = Rd.W[x] + Mres[x][63:32];
}
if (res[x] > (2^31)-1) {
   res[x] = (2^31)-1;
   OV = 1;
} else if (res[x] < -2^31) {
   res[x] = -2^31;
   OV = 1;
}
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: long type of value stored in a
- [in] b: long type of value stored in b

```
_STATIC_FORCEINLINE long __RV_KMMAC_U(long t, long a, long b)
```

KMMAC.u (SIMD Saturating MSW Signed Multiply Word and Add with Rounding)

Type: SIMD

Syntax:

```
KMMAC Rd, Rs1, Rs2
KMMAC.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of two registers and add the most significant 32-bit results with the signed 32-bit integer elements of a third register. The addition results are saturated first and then written back to the third register. The .u form performs an additional rounding up operation on the multiplication results before adding the most significant 32-bit part of the results.

Description: This instruction multiplies the signed 32-bit elements of Rs1 with the signed 32-bit elements of Rs2 and adds the most significant 32-bit multiplication results with the signed 32-bit elements of Rd. If the addition result is beyond the Q31 number range ($-2^31 \le 2^31-1$), it is saturated to the range and the OV bit is set to 1. The results after saturation are written to Rd. The .u form of the instruction additionally rounds up the most significant 32-bit of the 64-bit multiplication results by adding a 1 to bit 31 of the results.

Operations:

```
Mres[x][63:0] = Rs1.W[x] * Rs2.W[x];
if (`.u` form) {
   Round[x][32:0] = Mres[x][63:31] + 1;
   res[x] = Rd.W[x] + Round[x][32:1];
} else {
   res[x] = Rd.W[x] + Mres[x][63:32];
}
```

(continues on next page)

```
if (res[x] > (2^31)-1) {
  res[x] = (2^31)-1;
  OV = 1;
} else if (res[x] < -2^31) {
  res[x] = -2^31;
  OV = 1;
}
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: long type of value stored in a
- [in] b: long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMMSB(long t, long a, long b)

KMMSB (SIMD Saturating MSW Signed Multiply Word and Subtract)

Type: SIMD

Syntax:

```
KMMSB Rd, Rs1, Rs2
KMMSB.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of two registers and subtract the most significant 32-bit results from the signed 32-bit elements of a third register. The subtraction results are written to the third register. The .u form performs an additional rounding up operation on the multiplication results before subtracting the most significant 32-bit part of the results.

Description: This instruction multiplies the signed 32-bit elements of Rs1 with the signed 32-bit elements of Rs2 and subtracts the most significant 32-bit multiplication results from the signed 32-bit elements of Rd. If the subtraction result is beyond the Q31 number range ($-2^31 \le 2^31-1$), it is saturated to the range and the OV bit is set to 1. The results after saturation are written to Rd. The .u form of the instruction additionally rounds up the most significant 32-bit of the 64-bit multiplication results by adding a 1 to bit 31 of the results.

Operations:

```
Mres[x][63:0] = Rs1.W[x] * Rs2.W[x];
if (`.u` form) {
   Round[x][32:0] = Mres[x][63:31] + 1;
   res[x] = Rd.W[x] - Round[x][32:1];
} else {
   res[x] = Rd.W[x] - Mres[x][63:32];
}
if (res[x] > (2^31)-1) {
   res[x] = (2^31)-1;
   OV = 1;
} else if (res[x] < -2^31) {
   res[x] = -2^31;
   OV = 1;</pre>
```

```
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: long type of value stored in a
- [in] b: long type of value stored in b

```
__STATIC_FORCEINLINE long __RV_KMMSB_U(long t, long a, long b)
```

KMMSB.u (SIMD Saturating MSW Signed Multiply Word and Subtraction with Rounding)

Type: SIMD

Syntax:

```
KMMSB Rd, Rs1, Rs2
KMMSB.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of two registers and subtract the most significant 32-bit results from the signed 32-bit elements of a third register. The subtraction results are written to the third register. The .u form performs an additional rounding up operation on the multiplication results before subtracting the most significant 32-bit part of the results.

Description: This instruction multiplies the signed 32-bit elements of Rs1 with the signed 32-bit elements of Rs2 and subtracts the most significant 32-bit multiplication results from the signed 32-bit elements of Rd. If the subtraction result is beyond the Q31 number range ($-2^31 \le 2^31-1$), it is saturated to the range and the OV bit is set to 1. The results after saturation are written to Rd. The .u form of the instruction additionally rounds up the most significant 32-bit of the 64-bit multiplication results by adding a 1 to bit 31 of the results.

Operations:

```
Mres[x][63:0] = Rs1.W[x] * Rs2.W[x];
if (`.u` form) {
   Round[x][32:0] = Mres[x][63:31] + 1;
   res[x] = Rd.W[x] - Round[x][32:1];
} else {
   res[x] = Rd.W[x] - Mres[x][63:32];
}
if (res[x] > (2^31) - 1) {
   res[x] = (2^31) - 1;
   OV = 1;
} else if (res[x] < -2^31) {
   res[x] = -2^31;
   OV = 1;
}
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: long type of value stored in a
- [in] b: long type of value stored in b

__STATIC_FORCEINLINE long __RV_KWMMUL(long a, long b)

KWMMUL (SIMD Saturating MSW Signed Multiply Word & Double)

Type: SIMD Syntax:

```
KWMMUL Rd, Rs1, Rs2
KWMMUL.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of two registers, shift the results left 1-bit, saturate, and write the most significant 32-bit results to a register. The .u form additionally rounds up the multiplication results from the most signification discarded bit.

Description: This instruction multiplies the 32-bit elements of Rs1 with the 32-bit elements of Rs2. It then shifts the multiplication results one bit to the left and takes the most significant 32-bit results. If the shifted result is greater than 2^31-1, it is saturated to 2^31-1 and the OV flag is set to 1. The final element result is written to Rd. The 32-bit elements of Rs1 and Rs2 are treated as signed integers. The .u form of the instruction additionally rounds up the 64-bit multiplication results by adding a 1 to bit 30 before the shift and saturation operations.

Operations:

```
if ((0x80000000 != Rs1.W[x]) | (0x800000000 != Rs2.W[x])) {
   Mres[x][63:0] = Rs1.W[x] * Rs2.W[x];
   if (`.u` form) {
      Round[x][33:0] = Mres[x][63:30] + 1;
      Rd.W[x] = Round[x][32:1];
   } else {
      Rd.W[x] = Mres[x][62:31];
   }
} else {
   Rd.W[x] = 0x7ffffffff;
   OV = 1;
}
for RV32: x=0
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] a: long type of value stored in a
- [in] b: long type of value stored in b

__STATIC_FORCEINLINE long __RV_KWMMUL_U(long a, long b)

KWMMUL.u (SIMD Saturating MSW Signed Multiply Word & Double with Rounding)

Type: SIMD

Syntax:

```
KWMMUL Rd, Rs1, Rs2
KWMMUL.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of two registers, shift the results left 1-bit, saturate, and write the most significant 32-bit results to a register. The .u form additionally rounds up the multiplication results from the most signification discarded bit.

Description: This instruction multiplies the 32-bit elements of Rs1 with the 32-bit elements of Rs2. It then shifts the multiplication results one bit to the left and takes the most significant 32-bit results. If the shifted result is greater than 2^31-1, it is saturated to 2^31-1 and the OV flag is set to 1. The final element result is written to Rd. The 32-bit elements of Rs1 and Rs2 are treated as signed integers. The .u form of the instruction additionally rounds up the 64-bit multiplication results by adding a 1 to bit 30 before the shift and saturation operations.

Operations:

```
if ((0x80000000 != Rs1.W[x]) | (0x80000000 != Rs2.W[x])) {
   Mres[x][63:0] = Rs1.W[x] * Rs2.W[x];
   if (`.u` form) {
     Round[x][33:0] = Mres[x][63:30] + 1;
     Rd.W[x] = Round[x][32:1];
   } else {
     Rd.W[x] = Mres[x][62:31];
   }
} else {
   Rd.W[x] = 0x7fffffff;
   OV = 1;
}
for RV32: x=0
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] a: long type of value stored in a
- [in] b: long type of value stored in b

```
__STATIC_FORCEINLINE long __RV_SMMUL(long a, long b)
```

SMMUL (SIMD MSW Signed Multiply Word)

Type: SIMD

Syntax:

```
SMMUL Rd, Rs1, Rs2
SMMUL.u Rd, Rs1, Rs2
```

Purpose: Multiply the 32-bit signed integer elements of two registers and write the most significant 32-bit results to the corresponding 32-bit elements of a register. The .u form performs an additional rounding up operation on the multiplication results before taking the most significant 32-bit part of the results.

Description: This instruction multiplies the 32-bit elements of Rs1 with the 32-bit elements of Rs2 and writes the most significant 32-bit multiplication results to the corresponding 32-bit elements of Rd. The 32-bit elements of Rs1 and Rs2 are treated as signed integers. The .u form of the instruction rounds up the most significant 32-bit of the 64-bit multiplication results by adding a 1 to bit 31 of the results.

• For smmul/RV32 instruction, it is an alias to mulh/RV32 instruction.

Operations:

```
Mres[x][63:0] = Rs1.W[x] * Rs2.W[x];
if (`.u` form) {
  Round[x][32:0] = Mres[x][63:31] + 1;
  Rd.W[x] = Round[x][32:1];
} else {
  Rd.W[x] = Mres[x][63:32];
}
for RV32: x=0
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] a: long type of value stored in a
- [in] b: long type of value stored in b

```
__STATIC_FORCEINLINE long __RV_SMMUL_U(long a, long b)
SMMUL.u (SIMD MSW Signed Multiply Word with Rounding)
```

Type: SIMD

Syntax:

```
SMMUL Rd, Rs1, Rs2
SMMUL.u Rd, Rs1, Rs2
```

Purpose: Multiply the 32-bit signed integer elements of two registers and write the most significant 32-bit results to the corresponding 32-bit elements of a register. The .u form performs an additional rounding up operation on the multiplication results before taking the most significant 32-bit part of the results.

Description: This instruction multiplies the 32-bit elements of Rs1 with the 32-bit elements of Rs2 and writes the most significant 32-bit multiplication results to the corresponding 32-bit elements of Rd. The 32-bit elements of Rs1 and Rs2 are treated as signed integers. The .u form of the instruction rounds up the most significant 32-bit of the 64-bit multiplication results by adding a 1 to bit 31 of the results.

• For smmul/RV32 instruction, it is an alias to mulh/RV32 instruction.

Operations:

```
Mres[x][63:0] = Rs1.W[x] * Rs2.W[x];
if (`.u` form) {
   Round[x][32:0] = Mres[x][63:31] + 1;
   Rd.W[x] = Round[x][32:1];
} else {
   Rd.W[x] = Mres[x][63:32];
}
for RV32: x=0
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] a: long type of value stored in a
- [in] b: long type of value stored in b

Signed MSW 32x16 Multiply and Add Instructions

```
__STATIC_FORCEINLINE long __RV_KMMAWB(long t, unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE long __RV_KMMAWB_U(long t, unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE long ___RV_KMMAWB2(long t, unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE long __RV_KMMAWB2_U(long t, unsigned long a, unsigned long b)
 STATIC FORCEINLINE long RV KMMAWT (long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_KMMAWT_U(long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_KMMAWT2(long t, unsigned long a, unsigned long b)
 STATIC FORCEINLINE long RV KMMAWT2 U(long t, unsigned long a, unsigned long b)
STATIC FORCEINLINE long RV KMMWB2(long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_KMMWB2_U(long a, unsigned long b)
_STATIC_FORCEINLINE long __RV_KMMWT2(long a, unsigned long b)
 _STATIC_FORCEINLINE long __RV_KMMWT2_U(long a, unsigned long b)
 _STATIC_FORCEINLINE long __RV_SMMWB(long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_SMMWB_U(long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_SMMWT(long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_SMMWT_U(long a, unsigned long b)
group NMSIS Core DSP Intrinsic SIGNED MSW 32X16 MAC
    Signed MSW 32x16 Multiply and Add Instructions.
```

there are 15 Signed MSW 32x16 Multiply and Add Instructions

Functions

```
__STATIC_FORCEINLINE long __RV_KMMAWB(long t, unsigned long a, unsigned long b)
KMMAWB(SIMD Saturating MSW Signed Multiply Word and Bottom Half and Add)
```

Type: SIMD

Syntax:

```
KMMAWB Rd, Rs1, Rs2
KMMAWB.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of one register and the bottom 16-bit of the corresponding 32-bit elements of another register and add the most significant 32-bit results with the corresponding signed 32-bit elements of a third register. The addition result is written to the corresponding 32-bit elements of the third register. The .u form rounds up the multiplication results from the most significant discarded bit before the addition operations.

Description: This instruction multiplies the signed 32-bit elements of Rs1 with the signed bottom 16-bit content of the corresponding 32-bit elements of Rs2 and adds the most significant 32-bit multiplication results with the corresponding signed 32-bit elements of Rd. If the addition result is beyond the Q31 number range ($-2^31 \le 2^31 \le 2^31 \le 1$), it is saturated to the range and the OV bit is set to 1. The results after saturation are written to the corresponding 32-bit elements of Rd. The . u form of the instruction

rounds up the most significant 32-bit of the 48-bit multiplication results by adding a 1 to bit 15 of the result before the addition operations.

Operations:

```
Mres[x][47:0] = Rs1.W[x] * Rs2.W[x].H[0];
if (`.u` form) {
   Round[x][32:0] = Mres[x][47:15] + 1;
   res[x] = Rd.W[x] + Round[x][32:1];
} else {
   res[x] = Rd.W[x] + Mres[x][47:16];
}
if (res[x] > (2^31)-1) {
   res[x] = (2^31)-1;
   OV = 1;
} else if (res[x] < -2^31) {
   res[x] = -2^31;
   OV = 1;
}
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE long __RV_KMMAWB_U(long t, unsigned long a, unsigned long b)
KMMAWB.u (SIMD Saturating MSW Signed Multiply Word and Bottom Half and Add with Rounding)

Type: SIMD

Syntax:

```
KMMAWB Rd, Rs1, Rs2
KMMAWB.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of one register and the bottom 16-bit of the corresponding 32-bit elements of another register and add the most significant 32-bit results with the corresponding signed 32-bit elements of a third register. The addition result is written to the corresponding 32-bit elements of the third register. The .u form rounds up the multiplication results from the most significant discarded bit before the addition operations.

Description: This instruction multiplies the signed 32-bit elements of Rs1 with the signed bottom 16-bit content of the corresponding 32-bit elements of Rs2 and adds the most significant 32-bit multiplication results with the corresponding signed 32-bit elements of Rd. If the addition result is beyond the Q31 number range ($-2^31 \le 2^31-1$), it is saturated to the range and the OV bit is set to 1. The results after saturation are written to the corresponding 32-bit elements of Rd. The .u form of the instruction rounds up the most significant 32-bit of the 48-bit multiplication results by adding a 1 to bit 15 of the result before the addition operations.

Operations:

```
Mres[x][47:0] = Rs1.W[x] * Rs2.W[x].H[0];
if (`.u` form) {
   Round[x][32:0] = Mres[x][47:15] + 1;
   res[x] = Rd.W[x] + Round[x][32:1];
} else {
   res[x] = Rd.W[x] + Mres[x][47:16];
}
if (res[x] > (2^31)-1) {
   res[x] = (2^31)-1;
   OV = 1;
} else if (res[x] < -2^31) {
   res[x] = -2^31;
   OV = 1;
}
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMMAWB2(long t, unsigned long a, unsigned long b)
KMMAWB2(SIMD Saturating MSW Signed Multiply Word and Bottom Half & 2 and Add)

Type: SIMD

Syntax:

```
KMMAWB2 Rd, Rs1, Rs2
KMMAWB2.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit elements of one register and the bottom 16-bit of the corresponding 32-bit elements of another register, double the multiplication results and add the saturated most significant 32-bit results with the corresponding signed 32-bit elements of a third register. The saturated addition result is written to the corresponding 32-bit elements of the third register. The .u form rounds up the multiplication results from the most significant discarded bit before the addition operations.

Description: This instruction multiplies the signed 32-bit Q31 elements of Rs1 with the signed bottom 16-bit Q15 content of the corresponding 32-bit elements of Rs2, doubles the Q46 results to Q47 numbers and adds the saturated most significant 32-bit Q31 multiplication results with the corresponding signed 32-bit elements of Rd. If the addition result is beyond the Q31 number range (-2^31 <= Q31 <= 2^31-1), it is saturated to the range and the OV bit is set to 1. The results after saturation are written to the corresponding 32-bit elements of Rd. The .u form of the instruction rounds up the most significant 32-bit of the 48-bit Q47 multiplication results by adding a 1 to bit 15 (i.e., bit 14 before doubling) of the result before the addition operations.

Operations:

```
if ((Rs1.W[x] == 0x80000000) & (Rs2.W[x].H[0] == 0x8000)) {
  addop.W[x] = 0x7ffffffff;
  OV = 1;
} else {
```

(continues on next page)

```
Mres[x][47:0] = Rs1.W[x] s* Rs2.W[x].H[0];
if (`.u` form) {
    Mres[x][47:14] = Mres[x][47:14] + 1;
    }
    addop.W[x] = Mres[x][46:15]; // doubling
}
res[x] = Rd.W[x] + addop.W[x];
if (res[x] > (2^31)-1) {
    res[x] = (2^31)-1;
    OV = 1;
} else if (res[x] < -2^31) {
    res[x] = -2^31;
    OV = 1;
}
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMMAWB2_U(long t, unsigned long a, unsigned long b)

KMMAWB2.u(SIMD Saturating MSW Signed Multiply Word and Bottom Half & 2 and Add with Rounding)

Type: SIMD

Syntax:

```
KMMAWB2 Rd, Rs1, Rs2
KMMAWB2.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit elements of one register and the bottom 16-bit of the corresponding 32-bit elements of another register, double the multiplication results and add the saturated most significant 32-bit results with the corresponding signed 32-bit elements of a third register. The saturated addition result is written to the corresponding 32-bit elements of the third register. The .u form rounds up the multiplication results from the most significant discarded bit before the addition operations.

Description: This instruction multiplies the signed 32-bit Q31 elements of Rs1 with the signed bottom 16-bit Q15 content of the corresponding 32-bit elements of Rs2, doubles the Q46 results to Q47 numbers and adds the saturated most significant 32-bit Q31 multiplication results with the corresponding signed 32-bit elements of Rd. If the addition result is beyond the Q31 number range (-2^31 \leq Q31 \leq 2^31-1), it is saturated to the range and the OV bit is set to 1. The results after saturation are written to the corresponding 32-bit elements of Rd. The .u form of the instruction rounds up the most significant 32-bit of the 48-bit Q47 multiplication results by adding a 1 to bit 15 (i.e., bit 14 before doubling) of the result before the addition operations.

Operations:

```
if ((Rs1.W[x] == 0x80000000) & (Rs2.W[x].H[0] == 0x8000)) {
  addop.W[x] = 0x7ffffffff;
```

```
OV = 1;
} else {
  Mres[x][47:0] = Rs1.W[x] s* Rs2.W[x].H[0];
  if (`.u` form) {
   Mres[x][47:14] = Mres[x][47:14] + 1;
  addop.W[x] = Mres[x][46:15]; // doubling
res[x] = Rd.W[x] + addop.W[x];
if (res[x] > (2^31)-1) {
  res[x] = (2^31)-1;
  OV = 1;
else if (res[x] < -2^31) {
  res[x] = -2^31;
  OV = 1;
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

STATIC FORCEINLINE long RV KMMAWT (long t, unsigned long a, unsigned long b) KMMAWT (SIMD Saturating MSW Signed Multiply Word and Top Half and Add)

Type: SIMD

Syntax:

```
KMMAWT Rd, Rs1, Rs2
KMMAWT.u Rd Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of one register and the signed top 16-bit of the corresponding 32-bit elements of another register and add the most significant 32-bit results with the corresponding signed 32-bit elements of a third register. The addition results are written to the corresponding 32-bit elements of the third register. The .u form rounds up the multiplication results from the most significant discarded bit before the addition operations.

Description: This instruction multiplies the signed 32-bit elements of Rs1 with the signed top 16-bit of the corresponding 32-bit elements of Rs2 and adds the most significant 32-bit multiplication results with the corresponding signed 32-bit elements of Rd. If the addition result is beyond the Q31 number range $(-2^31 \le Q31 \le 2^31-1)$, it is saturated to the range and the OV bit is set to 1. The results after saturation are written to the corresponding 32-bit elements of Rd. The .u form of the instruction rounds up the most significant 32-bit of the 48-bit multiplication results by adding a 1 to bit 15 of the result before the addition operations.

Operations:

```
Mres[x][47:0] = Rs1.W[x] * Rs2.W[x].H[1];
if (`.u` form) {
```

2.5. NMSIS Core API 221

```
Round[x][32:0] = Mres[x][47:15] + 1;
  res[x] = Rd.W[x] + Round[x][32:1];
} else {
  res[x] = Rd.W[x] + Mres[x][47:16];
}
if (res[x] > (2^31)-1) {
  res[x] = (2^31)-1;
  OV = 1;
} else if (res[x] < -2^31) {
  res[x] = -2^31;
  OV = 1;
}
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMMAWT_U(long t, unsigned long a, unsigned long b)
KMMAWT.u (SIMD Saturating MSW Signed Multiply Word and Top Half and Add with Rounding)

Type: SIMD

Syntax:

```
KMMAWT Rd, Rs1, Rs2
KMMAWT.u Rd Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of one register and the signed top 16-bit of the corresponding 32-bit elements of another register and add the most significant 32-bit results with the corresponding signed 32-bit elements of a third register. The addition results are written to the corresponding 32-bit elements of the third register. The .u form rounds up the multiplication results from the most significant discarded bit before the addition operations.

Description: This instruction multiplies the signed 32-bit elements of Rs1 with the signed top 16-bit of the corresponding 32-bit elements of Rs2 and adds the most significant 32-bit multiplication results with the corresponding signed 32-bit elements of Rd. If the addition result is beyond the Q31 number range $(-2^31 \le Q31 \le 2^31-1)$, it is saturated to the range and the OV bit is set to 1. The results after saturation are written to the corresponding 32-bit elements of Rd. The .u form of the instruction rounds up the most significant 32-bit of the 48-bit multiplication results by adding a 1 to bit 15 of the result before the addition operations.

Operations:

```
Mres[x][47:0] = Rs1.W[x] * Rs2.W[x].H[1];
if (`.u` form) {
   Round[x][32:0] = Mres[x][47:15] + 1;
   res[x] = Rd.W[x] + Round[x][32:1];
} else {
   res[x] = Rd.W[x] + Mres[x][47:16];
```

```
| if (res[x] > (2^31)-1) {
| res[x] = (2^31)-1;
| OV = 1;
| else if (res[x] < -2^31) {
| res[x] = -2^31;
| OV = 1;
| }
| Rd.W[x] = res[x];
| for RV32: x=0
| for RV64: x=1...0</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE long __RV_KMMAWT2 (long t, unsigned long a, unsigned long b)
KMMAWT2 (SIMD Saturating MSW Signed Multiply Word and Top Half & 2 and Add)

Type: SIMD

Syntax:

```
KMMAWT2 Rd, Rs1, Rs2
KMMAWT2.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit elements of one register and the top 16-bit of the corresponding 32-bit elements of another register, double the multiplication results and add the saturated most significant 32-bit results with the corresponding signed 32-bit elements of a third register. The saturated addition result is written to the corresponding 32-bit elements of the third register. The .u form rounds up the multiplication results from the most significant discarded bit before the addition operations.

Description: This instruction multiplies the signed 32-bit Q31 elements of Rs1 with the signed top 16-bit Q15 content of the corresponding 32-bit elements of Rs2, doubles the Q46 results to Q47 numbers and adds the saturated most significant 32-bit Q31 multiplication results with the corresponding signed 32-bit elements of Rd. If the addition result is beyond the Q31 number range (-2 3 1 <= Q31 <= 2 3 1-1), it is saturated to the range and the OV bit is set to 1. The results after saturation are written to the corresponding 32-bit elements of Rd. The .u form of the instruction rounds up the most significant 32-bit of the 48-bit Q47 multiplication results by adding a 1 to bit 15 (i.e., bit 14 before doubling) of the result before the addition operations.

Operations:

```
if ((Rs1.W[x] == 0x80000000) & (Rs2.W[x].H[1] == 0x8000)) {
   addop.W[x] = 0x7fffffff;
   OV = 1;
} else {
   Mres[x][47:0] = Rs1.W[x] s* Rs2.W[x].H[1];
   if (`.u` form) {
        Mres[x][47:14] = Mres[x][47:14] + 1;
    }
   addop.W[x] = Mres[x][46:15]; // doubling
```

(continues on next page)

```
| res[x] = Rd.W[x] + addop.W[x];
| if (res[x] > (2^31)-1) {
| res[x] = (2^31)-1;
| OV = 1;
| } else if (res[x] < -2^31) {
| res[x] = -2^31;
| OV = 1;
| }
| Rd.W[x] = res[x];
| for RV32: x=0
| for RV64: x=1...0</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE long __RV_KMMAWT2_U (long t, unsigned long a, unsigned long b)
KMMAWT2.u (SIMD Saturating MSW Signed Multiply Word and Top Half & 2 and Add with Rounding)

Type: SIMD

Syntax:

```
KMMAWT2 Rd, Rs1, Rs2
KMMAWT2.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit elements of one register and the top 16-bit of the corresponding 32-bit elements of another register, double the multiplication results and add the saturated most significant 32-bit results with the corresponding signed 32-bit elements of a third register. The saturated addition result is written to the corresponding 32-bit elements of the third register. The .u form rounds up the multiplication results from the most significant discarded bit before the addition operations.

Description: This instruction multiplies the signed 32-bit Q31 elements of Rs1 with the signed top 16-bit Q15 content of the corresponding 32-bit elements of Rs2, doubles the Q46 results to Q47 numbers and adds the saturated most significant 32-bit Q31 multiplication results with the corresponding signed 32-bit elements of Rd. If the addition result is beyond the Q31 number range (-2 3 1 <= Q31 <= 2 3 1-1), it is saturated to the range and the OV bit is set to 1. The results after saturation are written to the corresponding 32-bit elements of Rd. The .u form of the instruction rounds up the most significant 32-bit of the 48-bit Q47 multiplication results by adding a 1 to bit 15 (i.e., bit 14 before doubling) of the result before the addition operations.

Operations:

```
if ((Rs1.W[x] == 0x80000000) & (Rs2.W[x].H[1] == 0x8000)) {
   addop.W[x] = 0x7fffffff;
   OV = 1;
} else {
   Mres[x][47:0] = Rs1.W[x] s* Rs2.W[x].H[1];
   if (`.u` form) {
        Mres[x][47:14] = Mres[x][47:14] + 1;
    }
```

```
addop.W[x] = Mres[x][46:15]; // doubling
}
res[x] = Rd.W[x] + addop.W[x];
if (res[x] > (2^31)-1) {
  res[x] = (2^31)-1;
  OV = 1;
} else if (res[x] < -2^31) {
  res[x] = -2^31;
  OV = 1;
}
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE long __RV_KMMWB2(long a, unsigned long b)

KMMWB2 (SIMD Saturating MSW Signed Multiply Word and Bottom Half & 2)

Type: SIMD

Syntax:

```
KMMWB2 Rd, Rs1, Rs2
KMMWB2.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of one register and the bottom 16-bit of the corresponding 32-bit elements of another register, double the multiplication results and write the saturated most significant 32-bit results to the corresponding 32-bit elements of a register. The .u form rounds up the results from the most significant discarded bit.

Description: This instruction multiplies the signed 32-bit Q31 elements of Rs1 with the signed bottom 16-bit Q15 content of the corresponding 32-bit elements of Rs2, doubles the Q46 results to Q47 numbers and writes the saturated most significant 32-bit Q31 multiplication results to the corresponding 32-bit elements of Rd. The . u form of the instruction rounds up the most significant 32-bit of the 48-bit Q47 multiplication results by adding a 1 to bit 15 (i.e., bit 14 before doubling) of the results.

Operations:

```
if ((Rs1.W[x] == 0x80000000) & (Rs2.W[x].H[0] == 0x8000)) {
   Rd.W[x] = 0x7fffffff;
   OV = 1;
} else {
   Mres[x][47:0] = Rs1.W[x] s* Rs2.W[x].H[0];
   if (`.u` form) {
      Round[x][32:0] = Mres[x][46:14] + 1;
      Rd.W[x] = Round[x][32:1];
   } else {
      Rd.W[x] = Mres[x][46:15];
   }
```

(continues on next page)

```
for RV32: x=0
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] a: long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
__STATIC_FORCEINLINE long __RV_KMMWB2_U (long a, unsigned long b)

KMMWB2.u (SIMD Saturating MSW Signed Multiply Word and Bottom Half & 2 with Rounding)
```

Type: SIMD

Syntax:

```
KMMWB2 Rd, Rs1, Rs2
KMMWB2.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of one register and the bottom 16-bit of the corresponding 32-bit elements of another register, double the multiplication results and write the saturated most significant 32-bit results to the corresponding 32-bit elements of a register. The .u form rounds up the results from the most significant discarded bit.

Description: This instruction multiplies the signed 32-bit Q31 elements of Rs1 with the signed bottom 16-bit Q15 content of the corresponding 32-bit elements of Rs2, doubles the Q46 results to Q47 numbers and writes the saturated most significant 32-bit Q31 multiplication results to the corresponding 32-bit elements of Rd. The .u form of the instruction rounds up the most significant 32-bit of the 48-bit Q47 multiplication results by adding a 1 to bit 15 (i.e., bit 14 before doubling) of the results.

Operations:

```
if ((Rs1.W[x] == 0x80000000) & (Rs2.W[x].H[0] == 0x8000)) {
   Rd.W[x] = 0x7fffffff;
   OV = 1;
} else {
   Mres[x][47:0] = Rs1.W[x] s* Rs2.W[x].H[0];
   if (`.u` form) {
      Round[x][32:0] = Mres[x][46:14] + 1;
      Rd.W[x] = Round[x][32:1];
   } else {
      Rd.W[x] = Mres[x][46:15];
   }
for RV32: x=0
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] a: long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
__STATIC_FORCEINLINE long __RV_KMMWT2 (long a, unsigned long b)
KMMWT2 (SIMD Saturating MSW Signed Multiply Word and Top Half & 2)
```

Type: SIMD

Syntax:

```
KMMWT2 Rd, Rs1, Rs2
KMMWT2.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of one register and the top 16-bit of the corresponding 32-bit elements of another register, double the multiplication results and write the saturated most significant 32-bit results to the corresponding 32-bit elements of a register. The .u form rounds up the results from the most significant discarded bit.

Description: This instruction multiplies the signed 32-bit Q31 elements of Rs1 with the signed top 16-bit Q15 content of the corresponding 32-bit elements of Rs2, doubles the Q46 results to Q47 numbers and writes the saturated most significant 32-bit Q31 multiplication results to the corresponding 32-bit elements of Rd. The . u form of the instruction rounds up the most significant 32-bit of the 48-bit Q47 multiplication results by adding a 1 to bit 15 (i.e., bit 14 before doubling) of the results.

Operations:

```
if ((Rs1.W[x] == 0x80000000) & (Rs2.W[x].H[1] == 0x8000)) {
   Rd.W[x] = 0x7fffffff;
   OV = 1;
} else {
   Mres[x][47:0] = Rs1.W[x] s* Rs2.W[x].H[1];
   if (`.u` form) {
      Round[x][32:0] = Mres[x][46:14] + 1;
      Rd.W[x] = Round[x][32:1];
   } else {
      Rd.W[x] = Mres[x][46:15];
   }
} for RV32: x=0
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] a: long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
__STATIC_FORCEINLINE long __RV_KMMWT2_U(long a, unsigned long b)

KMMWT2.u (SIMD Saturating MSW Signed Multiply Word and Top Half & 2 with Rounding)
```

Type: SIMD

Syntax:

```
KMMWT2 Rd, Rs1, Rs2
KMMWT2.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of one register and the top 16-bit of the corresponding 32-bit elements of another register, double the multiplication results and write the saturated most significant 32-bit results to the corresponding 32-bit elements of a register. The .u form rounds up the results from the most significant discarded bit.

Description: This instruction multiplies the signed 32-bit Q31 elements of Rs1 with the signed top 16-bit Q15 content of the corresponding 32-bit elements of Rs2, doubles the Q46 results to Q47 numbers and writes the saturated most significant 32-bit Q31 multiplication results to the corresponding 32-bit elements

of Rd. The . u form of the instruction rounds up the most significant 32-bit of the 48-bit Q47 multiplication results by adding a 1 to bit 15 (i.e., bit 14 before doubling) of the results.

Operations:

```
if ((Rs1.W[x] == 0x80000000) & (Rs2.W[x].H[1] == 0x8000)) {
   Rd.W[x] = 0x7fffffff;
   OV = 1;
} else {
   Mres[x][47:0] = Rs1.W[x] s* Rs2.W[x].H[1];
   if (`.u` form) {
      Round[x][32:0] = Mres[x][46:14] + 1;
      Rd.W[x] = Round[x][32:1];
   } else {
      Rd.W[x] = Mres[x][46:15];
   }
} for RV32: x=0
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] a: long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE long __RV_SMMWB(long a, unsigned long b)

SMMWB (SIMD MSW Signed Multiply Word and Bottom Half)

Type: SIMD

Syntax:

```
SMMWB Rd, Rs1, Rs2
SMMWB.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of one register and the bottom 16-bit of the corresponding 32-bit elements of another register, and write the most significant 32-bit results to the corresponding 32-bit elements of a register. The .u form rounds up the results from the most significant discarded bit.

Description: This instruction multiplies the signed 32-bit elements of Rs1 with the signed bottom 16-bit content of the corresponding 32-bit elements of Rs2 and writes the most significant 32-bit multiplication results to the corresponding 32-bit elements of Rd. The .u form of the instruction rounds up the most significant 32-bit of the 48-bit multiplication results by adding a 1 to bit 15 of the results.

Operations:

```
Mres[x][47:0] = Rs1.W[x] * Rs2.W[x].H[0];
if (`.u` form) {
   Round[x][32:0] = Mres[x][47:15] + 1;
   Rd.W[x] = Round[x][32:1];
} else {
   Rd.W[x] = Mres[x][47:16];
}
for RV32: x=0
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] a: long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
_STATIC_FORCEINLINE long __RV_SMMWB_U(long a, unsigned long b)
SMMWB.u (SIMD MSW Signed Multiply Word and Bottom Half with Rounding)
```

Type: SIMD

```
Syntax:
```

```
SMMWB Rd, Rs1, Rs2
SMMWB.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of one register and the bottom 16-bit of the corresponding 32-bit elements of another register, and write the most significant 32-bit results to the corresponding 32-bit elements of a register. The .u form rounds up the results from the most significant discarded bit.

Description: This instruction multiplies the signed 32-bit elements of Rs1 with the signed bottom 16-bit content of the corresponding 32-bit elements of Rs2 and writes the most significant 32-bit multiplication results to the corresponding 32-bit elements of Rd. The .u form of the instruction rounds up the most significant 32-bit of the 48-bit multiplication results by adding a 1 to bit 15 of the results.

Operations:

```
Mres[x][47:0] = Rs1.W[x] * Rs2.W[x].H[0];
if (`.u` form) {
   Round[x][32:0] = Mres[x][47:15] + 1;
   Rd.W[x] = Round[x][32:1];
} else {
   Rd.W[x] = Mres[x][47:16];
}
for RV32: x=0
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] a: long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
_STATIC_FORCEINLINE long __RV_SMMWT(long a, unsigned long b)
SMMWT(SIMD MSW Signed Multiply Word and Top Half)
```

Type: SIMD

Syntax:

```
SMMWT Rd, Rs1, Rs2
SMMWT.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of one register and the top 16-bit of the corresponding 32-bit elements of another register, and write the most significant 32-bit results to the corresponding 32-bit elements of a register. The .u form rounds up the results from the most significant discarded bit.

Description: This instruction multiplies the signed 32-bit elements of Rs1 with the top signed 16-bit content of the corresponding 32-bit elements of Rs2 and writes the most significant 32-bit multiplication results to the corresponding 32-bit elements of Rd. The .u form of the instruction rounds up the most significant 32-bit of the 48-bit multiplication results by adding a 1 to bit 15 of the results.

Operations:

```
Mres[x][47:0] = Rs1.W[x] * Rs2.W[x].H[1];
if (`.u` form) {
   Round[x][32:0] = Mres[x][47:15] + 1;
   Rd.W[x] = Round[x][32:1];
} else {
   Rd.W[x] = Mres[x][47:16];
}
for RV32: x=0
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] a: long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
_STATIC_FORCEINLINE long __RV_SMMWT_U(long a, unsigned long b)
SMMWT.u (SIMD MSW Signed Multiply Word and Top Half with Rounding)
```

Type: SIMD

Syntax:

```
SMMWT Rd, Rs1, Rs2
SMMWT.u Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit integer elements of one register and the top 16-bit of the corresponding 32-bit elements of another register, and write the most significant 32-bit results to the corresponding 32-bit elements of a register. The .u form rounds up the results from the most significant discarded bit.

Description: This instruction multiplies the signed 32-bit elements of Rs1 with the top signed 16-bit content of the corresponding 32-bit elements of Rs2 and writes the most significant 32-bit multiplication results to the corresponding 32-bit elements of Rd. The .u form of the instruction rounds up the most significant 32-bit of the 48-bit multiplication results by adding a 1 to bit 15 of the results.

Operations:

```
Mres[x][47:0] = Rs1.W[x] * Rs2.W[x].H[1];
if (`.u` form) {
   Round[x][32:0] = Mres[x][47:15] + 1;
   Rd.W[x] = Round[x][32:1];
} else {
   Rd.W[x] = Mres[x][47:16];
}
for RV32: x=0
for RV64: x=1...0
```

Return value stored in long type

Parameters

• [in] a: long type of value stored in a

• [in] b: unsigned long type of value stored in b

Signed 16-bit Multiply 32-bit Add/Subtract Instructions

```
STATIC FORCEINLINE long RV KMABB(long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_KMABT(long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_KMATT(long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_KMADA(long t, unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE long __RV_KMAXDA(long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_KMADS(long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_KMADRS(long t, unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE long __RV_KMAXDS(long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_KMDA(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_KMXDA(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_KMSDA(long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_KMSXDA(long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_SMBB16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_SMBT16(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE long __RV_SMTT16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_SMDS(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE long __RV_SMDRS(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE long __RV_SMXDS(unsigned long a, unsigned long b)
group NMSIS_Core_DSP_Intrinsic_SIGNED_16B_MULT_32B_ADDSUB
    Signed 16-bit Multiply 32-bit Add/Subtract Instructions.
    there are 18 Signed 16-bit Multiply 32-bit Add/Subtract Instructions
    Functions
    __STATIC_FORCEINLINE long __RV_KMABB(long t, unsigned long a, unsigned long b)
        KMABB (SIMD Saturating Signed Multiply Bottom Halfs & Add)
        Type: SIMD
        Syntax:
        KMABB Rd, Rs1, Rs2
        KMABT Rd, Rs1, Rs2
```

Purpose: Multiply the signed 16-bit content of 32-bit elements in a register with the 16-bit content of 32-bit elements in another register and add the result to the content of 32-bit elements in the third register. The addition result may be saturated and is written to the third register.

• KMABB: rd.W[x] + bottom*bottom (per 32-bit element)

KMATT Rd, Rs1, Rs2

- KMABT rd.W[x] + bottom*top (per 32-bit element)
- KMATT rd.W[x] + top*top (per 32-bit element)

Description: For the KMABB instruction, it multiplies the bottom 16-bit content of 32-bit elements in Rs1 with the bottom 16-bit content of 32-bit elements in Rs2. For the KMABT instruction, it multiplies the bottom 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs2. For the KMATT instruction, it multiplies the top 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs2. The multiplication result is added to the content of 32-bit elements in Rd. If the addition result is beyond the Q31 number range (-2^31 <= Q31 <= 2^31-1), it is saturated to the range and the OV bit is set to

1. The results after saturation are written to Rd. The 16-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
res[x] = Rd.W[x] + (Rs1.W[x].H[0] * Rs2.W[x].H[0]); // KMABB
res[x] = Rd.W[x] + (Rs1.W[x].H[0] * Rs2.W[x].H[1]); // KMABT
res[x] = Rd.W[x] + (Rs1.W[x].H[1] * Rs2.W[x].H[1]); // KMATT
if (res[x] > (2^31)-1) {
   res[x] = (2^31)-1;
   OV = 1;
} else if (res[x] < -2^31) {
   res[x] = -2^31;
   OV = 1;
}
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMABT(long t, unsigned long a, unsigned long b)

KMABT (SIMD Saturating Signed Multiply Bottom & Top Halfs & Add)

Type: SIMD

Syntax:

```
KMABB Rd, Rs1, Rs2
KMABT Rd, Rs1, Rs2
KMATT Rd, Rs1, Rs2
```

Purpose: Multiply the signed 16-bit content of 32-bit elements in a register with the 16-bit content of 32-bit elements in another register and add the result to the content of 32-bit elements in the third register. The addition result may be saturated and is written to the third register.

- KMABB: rd.W[x] + bottom*bottom (per 32-bit element)
- KMABT rd.W[x] + bottom*top (per 32-bit element)
- KMATT rd.W[x] + top*top (per 32-bit element)

Description: For the KMABB instruction, it multiplies the bottom 16-bit content of 32-bit elements in Rs1 with the bottom 16-bit content of 32-bit elements in Rs2. For the KMABT instruction, it multiplies the bottom 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs2. For the KMATT instruction, it multiplies the top 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs2. The multiplication result is added to the content of 32-bit elements in Rd. If the addition result is beyond the Q31 number range (-2^31 <= Q31 <= 2^31-1), it is saturated to the range and the OV bit is set to

1. The results after saturation are written to Rd. The 16-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
res[x] = Rd.W[x] + (Rs1.W[x].H[0] * Rs2.W[x].H[0]); // KMABB
res[x] = Rd.W[x] + (Rs1.W[x].H[0] * Rs2.W[x].H[1]); // KMABT
res[x] = Rd.W[x] + (Rs1.W[x].H[1] * Rs2.W[x].H[1]); // KMATT
if (res[x] > (2^31)-1) {
   res[x] = (2^31)-1;
   OV = 1;
} else if (res[x] < -2^31) {
   res[x] = -2^31;
   OV = 1;
}
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMATT(long t, unsigned long a, unsigned long b)
KMATT(SIMD Saturating Signed Multiply Top Halfs & Add)

Type: SIMD

Syntax:

```
KMABB Rd, Rs1, Rs2
KMABT Rd, Rs1, Rs2
KMATT Rd, Rs1, Rs2
```

Purpose: Multiply the signed 16-bit content of 32-bit elements in a register with the 16-bit content of 32-bit elements in another register and add the result to the content of 32-bit elements in the third register. The addition result may be saturated and is written to the third register.

- KMABB: rd.W[x] + bottom*bottom (per 32-bit element)
- KMABT rd.W[x] + bottom*top (per 32-bit element)
- KMATT rd.W[x] + top*top (per 32-bit element)

Description: For the KMABB instruction, it multiplies the bottom 16-bit content of 32-bit elements in Rs1 with the bottom 16-bit content of 32-bit elements in Rs2. For the KMABT instruction, it multiplies the bottom 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs2. For the KMATT instruction, it multiplies the top 16-bit content of 32-bit elements in Rs1 with the top 16-bit

content of 32-bit elements in Rs2. The multiplication result is added to the content of 32-bit elements in Rd. If the addition result is beyond the Q31 number range ($-2^31 \le 2^31-1$), it is saturated to the range and the OV bit is set to

1. The results after saturation are written to Rd. The 16-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
res[x] = Rd.W[x] + (Rs1.W[x].H[0] * Rs2.W[x].H[0]); // KMABB
res[x] = Rd.W[x] + (Rs1.W[x].H[0] * Rs2.W[x].H[1]); // KMABT
res[x] = Rd.W[x] + (Rs1.W[x].H[1] * Rs2.W[x].H[1]); // KMATT
if (res[x] > (2^31)-1) {
   res[x] = (2^31)-1;
   OV = 1;
} else if (res[x] < -2^31) {
   res[x] = -2^31;
   OV = 1;
}
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMADA(long t, unsigned long a, unsigned long b) KMADA(SIMD Saturating Signed Multiply Two Halfs and Two Adds)

Type: SIMD

Syntax:

```
KMADA Rd, Rs1, Rs2
KMAXDA Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from 32-bit elements in two registers; and then adds the two 32-bit results and 32-bit elements in a third register together. The addition result may be saturated.

- KMADA: rd.W[x] + top*top + bottom*bottom (per 32-bit element)
- KMAXDA: rd.W[x] + top*bottom + bottom*top (per 32-bit element)

Description: For the 'KMADA instruction, it multiplies the bottom 16-bit content of 32-bit elements in Rs1 with the bottom 16-bit content of 32-bit elements in Rs2 and then adds the result to the result of multiplying the top 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs2. For the KMAXDA instruction, it multiplies the top 16-bit content of 32-bit elements in Rs1 with the bottom 16-bit content of 32-bit elements in Rs2 and then adds the result to the result of multiplying the bottom 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs2. The result is added to the content of 32-bit elements in Rd. If the addition result is beyond the Q31 number range (-2^31 <= Q31 <= 2^31-1), it is saturated to the range and the OV bit is set to 1. The 32-bit results after saturation are written to Rd. The 16-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
// KMADA
res[x] = Rd.W[x] + (Rs1.W[x].H[1] * Rs2.W[x].H[1]) + (Rs1.W[x].H[0] * Rs2.

→W[x].H[0]);
// KMAXDA
res[x] = Rd.W[x] + (Rs1.W[x].H[1] * Rs2.W[x].H[0]) + (Rs1.W[x].H[0] * Rs2.

→W[x].H[1]);
if (res[x] > (2^31)-1) {
   res[x] = (2^31)-1;
   OV = 1;
} else if (res[x] < -2^31) {
    res[x] = -2^31;
OV = 1;
}
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMAXDA(long t, unsigned long a, unsigned long b)
KMAXDA(SIMD Saturating Signed Crossed Multiply Two Halfs and Two Adds)

Type: SIMD

Syntax:

```
KMADA Rd, Rs1, Rs2
KMAXDA Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from 32-bit elements in two registers; and then adds the two 32-bit results and 32-bit elements in a third register together. The addition result may be saturated.

- KMADA: rd.W[x] + top*top + bottom*bottom (per 32-bit element)
- KMAXDA: rd.W[x] + top*bottom + bottom*top (per 32-bit element)

Description: For the 'KMADA instruction, it multiplies the bottom 16-bit content of 32-bit elements in Rs1 with the bottom 16-bit content of 32-bit elements in Rs2 and then adds the result to the result of multiplying the top 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs2. For the KMAXDA instruction, it multiplies the top 16-bit content of 32-bit elements in Rs1 with the bottom 16-bit content of 32-bit elements in Rs2 and then adds the result to the result of multiplying the bottom 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs2. The result is added to the content of 32-bit elements in Rd. If the addition result is beyond the Q31 number range (-2^31 <= Q31 <= 2^31-1), it is saturated to the range and the OV bit is set to 1. The 32-bit results after saturation are written to Rd. The 16-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
// KMADA
res[x] = Rd.W[x] + (Rs1.W[x].H[1] * Rs2.W[x].H[1]) + (Rs1.W[x].H[0] * Rs2.

W[x].H[0]);
// KMAXDA
```

(continues on next page)

```
res[x] = Rd.W[x] + (Rs1.W[x].H[1] * Rs2.W[x].H[0]) + (Rs1.W[x].H[0]) * Rs2.

→W[x].H[1]);

if (res[x] > (2^31)-1) {
	res[x] = (2^31)-1;
	OV = 1;
} else if (res[x] < -2^31) {
	res[x] = -2^31;
	OV = 1;
}
Rd.W[x] = res[x];
for RV32: x=0
	for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMADS(long t, unsigned long a, unsigned long b)
KMADS(SIMD Saturating Signed Multiply Two Halfs & Subtract & Add)

Type: SIMD

Syntax:

```
KMADS Rd, Rs1, Rs2
KMADRS Rd, Rs1, Rs2
KMAXDS Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from 32-bit elements in two registers; and then perform a subtraction operation between the two 32-bit results. Then add the subtraction result to the corresponding 32-bit elements in a third register. The addition result may be saturated.

- KMADS: rd.W[x] + (top*top bottom*bottom) (per 32-bit element)
- KMADRS: rd.W[x] + (bottom*bottom top*top) (per 32-bit element)
- KMAXDS: rd.W[x] + (top*bottom bottom*top) (per 32-bit element)

Description: For the KMADS instruction, it multiplies the bottom 16-bit content of 32-bit elements in Rs1 with the bottom 16-bit content of 32-bit elements in Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs2. For the KMADRS instruction, it multiplies the top 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs2 and then subtracts the result from the result of multiplying the bottom 16-bit content of 32-bit elements in Rs1 with the bottom 16-bit content of 32-bit elements in Rs2. For the KMAXDS instruction, it multiplies the bottom 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of 32-bit elements in Rs1 with the bottom 16-bit content of 32-bit elements in Rs2. The subtraction result is then added to the content of the corresponding 32-bit elements in Rd. If the addition result is beyond the Q31 number range (-2^31 <= Q31 <= 2^31-1), it is saturated to the range and the OV bit is set to 1. The 32-bit results after saturation are written to Rd. The 16-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
// KMADS
\hookrightarrow W[x].H[0]);
// KMADRS
\hookrightarrow W[x].H[1]);
// KMAXDS
res[x] = Rd.W[x] + (Rs1.W[x].H[1] * Rs2.W[x].H[0]) - (Rs1.W[x].H[0] * Rs2.W[x].H[0] + (Rs1.W[x].H[0]) + (Rs1.W[x].H[0]
 \hookrightarrow W[x].H[1]);
if (res[x] > (2^31)-1) {
         res[x] = (2^31)-1;
         OV = 1;
} else if (res[x] < -2^31) {
         res[x] = -2^31;
         OV = 1;
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMADRS(long t, unsigned long a, unsigned long b)
KMADRS (SIMD Saturating Signed Multiply Two Halfs & Reverse Subtract & Add)

Type: SIMD

Syntax:

```
KMADS Rd, Rs1, Rs2
KMADRS Rd, Rs1, Rs2
KMAXDS Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from 32-bit elements in two registers; and then perform a subtraction operation between the two 32-bit results. Then add the subtraction result to the corresponding 32-bit elements in a third register. The addition result may be saturated.

- KMADS: rd.W[x] + (top*top bottom*bottom) (per 32-bit element)
- KMADRS: rd.W[x] + (bottom*bottom top*top) (per 32-bit element)
- KMAXDS: rd.W[x] + (top*bottom bottom*top) (per 32-bit element)

Description: For the KMADS instruction, it multiplies the bottom 16-bit content of 32-bit elements in Rs1 with the bottom 16-bit content of 32-bit elements in Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs2 and then subtracts the result from the result of multiplying the bottom 16-bit content of 32-bit elements in Rs2. For the KMAXDS instruction, it multiplies the bottom 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of 32-bit elements in Rs1 with the bottom 16-bit content of 32-bit elements in Rs2. The

subtraction result is then added to the content of the corresponding 32-bit elements in Rd. If the addition result is beyond the Q31 number range ($-2^31 \le 2^31-1$), it is saturated to the range and the OV bit is set to 1. The 32-bit results after saturation are written to Rd. The 16-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
// KMADS
res[x] = Rd.W[x] + (Rs1.W[x].H[1] * Rs2.W[x].H[1]) - (Rs1.W[x].H[0] * Rs2.W[x].H[1]) - (Rs1.W[x].H[0] * Rs2.W[x].H[1]) - (Rs1.W[x].H[1]) + (Rs1.W[x].H[1])
  \hookrightarrow W[x].H[0]);
// KMADRS
\rightarrow W[x].H[1]);
// KMAXDS
res[x] = Rd.W[x] + (Rs1.W[x].H[1] * Rs2.W[x].H[0]) - (Rs1.W[x].H[0] * Rs2.W[x].H[0]) - (Rs1.W[x].H[0]) + (Rs1.W[x].H[0
  \rightarrowW[x].H[1]);
if (res[x] > (2^31)-1) {
                  res[x] = (2^31)-1;
                  OV = 1;
} else if (res[x] < -2^31) {
                  res[x] = -2^31;
                  OV = 1;
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMAXDS(long t, unsigned long a, unsigned long b)
KMAXDS(SIMD Saturating Signed Crossed Multiply Two Halfs & Subtract & Add)

Type: SIMD

Syntax:

```
KMADS Rd, Rs1, Rs2
KMADRS Rd, Rs1, Rs2
KMAXDS Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from 32-bit elements in two registers; and then perform a subtraction operation between the two 32-bit results. Then add the subtraction result to the corresponding 32-bit elements in a third register. The addition result may be saturated.

- KMADS: rd.W[x] + (top*top bottom*bottom) (per 32-bit element)
- KMADRS: rd.W[x] + (bottom*bottom top*top) (per 32-bit element)
- KMAXDS: rd.W[x] + (top*bottom bottom*top) (per 32-bit element)

Description: For the KMADS instruction, it multiplies the bottom 16-bit content of 32-bit elements in Rs1 with the bottom 16-bit content of 32-bit elements in Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs2. For the KMADRS instruction, it multiplies the top 16-bit content of 32-bit elements in Rs1 with the

top 16-bit content of 32-bit elements in Rs2 and then subtracts the result from the result of multiplying the bottom 16-bit content of 32-bit elements in Rs1 with the bottom 16-bit content of 32-bit elements in Rs2. For the KMAXDS instruction, it multiplies the bottom 16-bit content of 32-bit elements in Rs1 with the top 16-bit content of 32-bit elements in Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of 32-bit elements in Rs2 with the bottom 16-bit content of 32-bit elements in Rs2. The subtraction result is then added to the content of the corresponding 32-bit elements in Rd. If the addition result is beyond the Q31 number range (-2^31 <= Q31 <= 2^31-1), it is saturated to the range and the OV bit is set to 1. The 32-bit results after saturation are written to Rd. The 16-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
// KMADS
res[x] = Rd.W[x] + (Rs1.W[x].H[1] * Rs2.W[x].H[1]) - (Rs1.W[x].H[0] * Rs2.W[x].H[1]) - (Rs1.W[x].H[0] * Rs2.W[x].H[1]) - (Rs1.W[x].H[1]) + (Rs1.W[x].H[1])
  \hookrightarrow W[x].H[0]);
// KMADRS
\hookrightarrow W[x].H[1]);
// KMAXDS
res[x] = Rd.W[x] + (Rs1.W[x].H[1] * Rs2.W[x].H[0]) - (Rs1.W[x].H[0] * Rs2.W[x].H[0] + (Rs1.W[x].H[0]) + (Rs1.W[x].H[0]
    \hookrightarrow W[x].H[1]);
if (res[x] > (2^31)-1) {
                  res[x] = (2^31)-1;
                OV = 1;
} else if (res[x] < -2^31) {
                  res[x] = -2^31;
                  OV = 1;
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMDA(unsigned long a, unsigned long b)
KMDA(SIMD Signed Multiply Two Halfs and Add)

Type: SIMD

Syntax:

```
KMDA Rd, Rs1, Rs2
KMXDA Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from the 32-bit elements of two registers; and then adds the two 32-bit results together. The addition result may be saturated.

- KMDA: top*top + bottom*bottom (per 32-bit element)
- KMXDA: top*bottom + bottom*top (per 32-bit element)

Description: For the KMDA instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and then adds the result to the result of

multiplying the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. For the KMXDA instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2 and then adds the result to the result of multiplying the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2. The addition result is checked for saturation. If saturation happens, the result is saturated to 2^31-1. The final results are written to Rd. The 16-bit contents are treated as signed integers.

Operations:

```
0x80008000
   Rs1.W[x]
              ! =
                  0x80008000)
                                     (Rs2.W[x]
                                                                         KMDA
                                                                               Rd.
                                or
\rightarrow W[x] = Rs1.W[x].H[1]
Rs2.W[x].H[1]) + (Rs1.W[x].H[0] * Rs2.W[x].H[0]; // KMXDA Rd.W[x] = Rs1.W[x].
\hookrightarrow H[1] * Rs2.W[x].H[0])
                                                              = 0x7fffffff; OV_
  (Rs1.W[x].H[0] * Rs2.W[x].H[1];
                                           else { Rd.W[x]
             for RV32: x=0 for
     1;
x=1...0
```

Return value stored in long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE long __RV_KMXDA(unsigned long a, unsigned long b)
KMXDA(SIMD Signed Crossed Multiply Two Halfs and Add)

Type: SIMD

Syntax:

```
KMDA Rd, Rs1, Rs2
KMXDA Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from the 32-bit elements of two registers; and then adds the two 32-bit results together. The addition result may be saturated.

- KMDA: top*top + bottom*bottom (per 32-bit element)
- KMXDA: top*bottom + bottom*top (per 32-bit element)

Description: For the KMDA instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and then adds the result to the result of multiplying the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. For the KMXDA instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2 and then adds the result to the result of multiplying the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2. The addition result is checked for saturation. If saturation happens, the result is saturated to 2^31-1. The final results are written to Rd. The 16-bit contents are treated as signed integers.

Operations:

Return value stored in long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMSDA(long t, unsigned long a, unsigned long b)

KMSDA(SIMD Saturating Signed Multiply Two Halfs & Add & Subtract)

Type: SIMD

Syntax:

```
KMSDA Rd, Rs1, Rs2
KMSXDA Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from the 32-bit elements of two registers; and then subtracts the two 32-bit results from the corresponding 32-bit elements of a third register. The subtraction result may be saturated.

- KMSDA: rd.W[x] top*top bottom*bottom (per 32-bit element)
- KMSXDA: rd.W[x] top*bottom bottom*top (per 32-bit element)

Description: For the KMSDA instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and multiplies the top 16-bit content of the 32-bit elements of Rs2. For the KMSXDA instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of Rs2 and multiplies the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2. The two 32-bit multiplication results are then subtracted from the content of the corresponding 32- bit elements of Rd. If the subtraction result is beyond the Q31 number range (- 2^3 1 <= Q31 <= 2^3 1-1), it is saturated to the range and the OV bit is set to 1. The results after saturation are written to Rd. The 16-bit contents are treated as signed integers.

Operations:

```
// KMSDA
res[x] = Rd.W[x] - (Rs1.W[x].H[1] * Rs2.W[x].H[1]) - (Rs1.W[x].H[0] * Rs2.
    →W[x].H[0]);
// KMSXDA
res[x] = Rd.W[x] - (Rs1.W[x].H[1] * Rs2.W[x].H[0]) - (Rs1.W[x].H[0] * Rs2.
    →W[x].H[1]);
if (res[x] > (2^31)-1) {
    res[x] = (2^31)-1;
    OV = 1;
} else if (res[x] < -2^31) {
    res[x] = -2^31;
    OV = 1;
}
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a

• [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMSXDA(long t, unsigned long a, unsigned long b)

KMSXDA (SIMD Saturating Signed Crossed Multiply Two Halfs & Add & Subtract)

Type: SIMD

Syntax:

```
KMSDA Rd, Rs1, Rs2
KMSXDA Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from the 32-bit elements of two registers; and then subtracts the two 32-bit results from the corresponding 32-bit elements of a third register. The subtraction result may be saturated.

- KMSDA: rd.W[x] top*top bottom*bottom (per 32-bit element)
- KMSXDA: rd.W[x] top*bottom bottom*top (per 32-bit element)

Description: For the KMSDA instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and multiplies the top 16-bit content of the 32-bit elements of Rs2. For the KMSXDA instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and multiplies the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2. The two 32-bit multiplication results are then subtracted from the content of the corresponding 32- bit elements of Rd. If the subtraction result is beyond the Q31 number range (-2^31 <= Q31 <= 2^31-1), it is saturated to the range and the OV bit is set to 1. The results after saturation are written to Rd. The 16-bit contents are treated as signed integers.

Operations:

```
// KMSDA
res[x] = Rd.W[x] - (Rs1.W[x].H[1] * Rs2.W[x].H[1]) - (Rs1.W[x].H[0] * Rs2.

→W[x].H[0]);
// KMSXDA
res[x] = Rd.W[x] - (Rs1.W[x].H[1] * Rs2.W[x].H[0]) - (Rs1.W[x].H[0] * Rs2.

→W[x].H[1]);
if (res[x] > (2^31)-1) {
   res[x] = (2^31)-1;
   OV = 1;
} else if (res[x] < -2^31) {
   res[x] = -2^31;
   OV = 1;
}
Rd.W[x] = res[x];
for RV32: x=0
for RV64: x=1...0</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_SMBB16(unsigned long a, unsigned long b)
SMBB16(SIMD Signed Multiply Bottom Half & Bottom Half)

Type: SIMD

Syntax:

```
SMBB16 Rd, Rs1, Rs2
SMBT16 Rd, Rs1, Rs2
SMTT16 Rd, Rs1, Rs2
```

Purpose: Multiply the signed 16-bit content of the 32-bit elements of a register with the signed 16-bit content of the 32-bit elements of another register and write the result to a third register.

- SMBB16: W[x].bottom*W[x].bottom
- SMBT16: W[x].bottom *W[x].top
- SMTT16: W[x].top * W[x].top

Description: For the SMBB16 instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2. For the SMBT16 instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. For the SMTT16 instruction, it multiplies the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. The multiplication results are written to Rd. The 16-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
Rd.W[x] = Rs1.W[x].H[0] * Rs2.W[x].H[0]; // SMBB16
Rd.W[x] = Rs1.W[x].H[0] * Rs2.W[x].H[1]; // SMBT16
Rd.W[x] = Rs1.W[x].H[1] * Rs2.W[x].H[1]; // SMTT16

for RV32: x=0,
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_SMBT16(unsigned long a, unsigned long b)
SMBT16(SIMD Signed Multiply Bottom Half & Top Half)

Type: SIMD

Syntax:

```
SMBB16 Rd, Rs1, Rs2
SMBT16 Rd, Rs1, Rs2
SMTT16 Rd, Rs1, Rs2
```

Purpose: Multiply the signed 16-bit content of the 32-bit elements of a register with the signed 16-bit content of the 32-bit elements of another register and write the result to a third register.

- SMBB16: W[x].bottom*W[x].bottom
- SMBT16: W[x].bottom *W[x].top
- SMTT16: W[x].top * W[x].top

Description: For the SMBB16 instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2. For the SMBT16 instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements

of Rs2. For the SMTT16 instruction, it multiplies the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. The multiplication results are written to Rd. The 16-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
Rd.W[x] = Rs1.W[x].H[0] * Rs2.W[x].H[0]; // SMBB16
Rd.W[x] = Rs1.W[x].H[0] * Rs2.W[x].H[1]; // SMBT16
Rd.W[x] = Rs1.W[x].H[1] * Rs2.W[x].H[1]; // SMTT16

for RV32: x=0,
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
__STATIC_FORCEINLINE long __RV_SMTT16(unsigned long a, unsigned long b)
SMTT16(SIMD Signed Multiply Top Half & Top Half)
```

Type: SIMD

Syntax:

```
SMBB16 Rd, Rs1, Rs2
SMBT16 Rd, Rs1, Rs2
SMTT16 Rd, Rs1, Rs2
```

Purpose: Multiply the signed 16-bit content of the 32-bit elements of a register with the signed 16-bit content of the 32-bit elements of another register and write the result to a third register.

- SMBB16: W[x].bottom*W[x].bottom
- SMBT16: W[x].bottom *W[x].top
- SMTT16: W[x].top * W[x].top

Description: For the SMBB16 instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2. For the SMBT16 instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. For the SMTT16 instruction, it multiplies the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. The multiplication results are written to Rd. The 16-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
Rd.W[x] = Rs1.W[x].H[0] * Rs2.W[x].H[0]; // SMBB16
Rd.W[x] = Rs1.W[x].H[0] * Rs2.W[x].H[1]; // SMBT16
Rd.W[x] = Rs1.W[x].H[1] * Rs2.W[x].H[1]; // SMTT16

for RV32: x=0,
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
__STATIC_FORCEINLINE long __RV_SMDS (unsigned long a, unsigned long b)
SMDS (SIMD Signed Multiply Two Halfs and Subtract)
```

Syntax:

Type: SIMD

```
SMDS Rd, Rs1, Rs2
SMDRS Rd, Rs1, Rs2
SMXDS Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from the 32-bit elements of two registers; and then perform a subtraction operation between the two 32-bit results.

- SMDS: top*top bottom*bottom (per 32-bit element)
- SMDRS: bottom*bottom top*top (per 32-bit element)
- SMXDS: top*bottom bottom*top (per 32-bit element)

Description: For the SMDS instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. For the SMDRS instruction, it multiplies the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 with the bottom 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of Rs1 wit

Operations:

```
* SMDS:
Rd.W[x] = (Rs1.W[x].H[1] * Rs2.W[x].H[1]) - (Rs1.W[x].H[0] * Rs2.W[x].H[0]);

* SMDRS:
Rd.W[x] = (Rs1.W[x].H[0] * Rs2.W[x].H[0]) - (Rs1.W[x].H[1] * Rs2.W[x].H[1]);

* SMXDS:
Rd.W[x] = (Rs1.W[x].H[1] * Rs2.W[x].H[0]) - (Rs1.W[x].H[0] * Rs2.W[x].H[1]);
```

Return value stored in long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_SMDRS (unsigned long a, unsigned long b)
SMDRS (SIMD Signed Multiply Two Halfs and Reverse Subtract)

Type: SIMD

Syntax:

```
SMDS Rd, Rs1, Rs2
SMDRS Rd, Rs1, Rs2
SMXDS Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from the 32-bit elements of two registers; and then perform a subtraction operation between the two 32-bit results.

- SMDS: top*top bottom*bottom (per 32-bit element)
- SMDRS: bottom*bottom top*top (per 32-bit element)
- SMXDS: top*bottom bottom*top (per 32-bit element)

Description: For the SMDS instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the result of multiplying the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content o

Operations:

```
* SMDS:
Rd.W[x] = (Rs1.W[x].H[1] * Rs2.W[x].H[1]) - (Rs1.W[x].H[0] * Rs2.W[x].H[0]);

* SMDRS:
Rd.W[x] = (Rs1.W[x].H[0] * Rs2.W[x].H[0]) - (Rs1.W[x].H[1] * Rs2.W[x].H[1]);

* SMXDS:
Rd.W[x] = (Rs1.W[x].H[1] * Rs2.W[x].H[0]) - (Rs1.W[x].H[0] * Rs2.W[x].H[1]);
```

Return value stored in long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
_STATIC_FORCEINLINE long __RV_SMXDS (unsigned long a, unsigned long b)
SMXDS (SIMD Signed Crossed Multiply Two Halfs and Subtract)
```

Type: SIMD

Syntax:

```
SMDS Rd, Rs1, Rs2
SMDRS Rd, Rs1, Rs2
SMXDS Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from the 32-bit elements of two registers; and then perform a subtraction operation between the two 32-bit results.

- SMDS: top*top bottom*bottom (per 32-bit element)
- SMDRS: bottom*bottom top*top (per 32-bit element)
- SMXDS: top*bottom bottom*top (per 32-bit element)

Description: For the SMDS instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. For the SMDRS instruction, it multiplies the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2. For the SMXDS instruction, it multiplies the bottom 16-bit content of

the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2. The subtraction result is written to the corresponding 32-bit element of Rd. The 16-bit contents of multiplication are treated as signed integers.

Operations:

```
* SMDS:
Rd.W[x] = (Rs1.W[x].H[1] * Rs2.W[x].H[1]) - (Rs1.W[x].H[0] * Rs2.W[x].H[0]);

* SMDRS:
Rd.W[x] = (Rs1.W[x].H[0] * Rs2.W[x].H[0]) - (Rs1.W[x].H[1] * Rs2.W[x].H[1]);

* SMXDS:
Rd.W[x] = (Rs1.W[x].H[1] * Rs2.W[x].H[0]) - (Rs1.W[x].H[0] * Rs2.W[x].H[1]);
```

Return value stored in long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE unsigned long __RV_CLRS32(unsigned long a)

Partial-SIMD Miscellaneous Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_CL032(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_CL232(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_PBSAD(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_PBSADA(unsigned long t, unsigned long a, unsigned :
__RV_SCLIP32(a,b)
__RV_UCLIP32(a,b)
__RV_UCLIP32(a,b)
__group NMSIS_Core_DSP_Intrinsic_PART_SIMD_MISC
Partial-SIMD Miscellaneous Instructions.

there are 7 Partial-SIMD Miscellaneous Instructions

Defines
__RV_SCLIP32(a,b)
__SCLIP32(SIMD 32-bit Signed Clip Value)
__Type: DSP
__Syntax:
__SCLIP32_Rd, Rs1, imm5u[4:0]
```

Purpose: Limit the 32-bit signed integer elements of a register into a signed range simultaneously.

Description: This instruction limits the 32-bit signed integer elements stored in Rs1 into a signed integer range between 2imm5u-1 and -2imm5u, and writes the limited results to Rd. For example, if imm5u is 3, the 32-bit input values should be saturated between 7 and -8. If saturation is performed, set OV bit to 1.

Operations:

```
src = Rs1.W[x];
if (src > (2^imm5u)-1) {
    src = (2^imm5u)-1;
    OV = 1;
} else if (src < -2^imm5u) {
    src = -2^imm5u;
    OV = 1;
}
Rd.W[x] = src
for RV32: x=0,
for RV64: x=1...0</pre>
```

Return value stored in long type

Parameters

- [in] a: long type of value stored in a
- [in] b: unsigned int type of value stored in b

__**RV_UCLIP32** (a, b)

UCLIP32 (SIMD 32-bit Unsigned Clip Value)

Type: SIMD

Syntax:

```
UCLIP32 Rd, Rs1, imm5u[4:0]
```

Purpose: Limit the 32-bit signed integer elements of a register into an unsigned range simultaneously.

Description: This instruction limits the 32-bit signed integer elements stored in Rs1 into an unsigned integer range between 2imm5u-1 and 0, and writes the limited results to Rd. For example, if imm5u is 3, the 32-bit input values should be saturated between 7 and 0. If saturation is performed, set OV bit to 1.

Operations:

```
src = Rs1.W[x];
if (src > (2^imm5u)-1) {
    src = (2^imm5u)-1;
    OV = 1;
} else if (src < 0) {
    src = 0;
    OV = 1;
}
Rd.W[x] = src
for RV32: x=0,
for RV64: x=1...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

Functions

```
__STATIC_FORCEINLINE unsigned long __RV_CLRS32 (unsigned long a) CLRS32 (SIMD 32-bit Count Leading Redundant Sign)
```

Type: SIMD

Syntax:

```
CLRS32 Rd, Rs1
```

Purpose: Count the number of redundant sign bits of the 32-bit elements of a general register.

Description: Starting from the bits next to the sign bits of the 32-bit elements of Rs1, this instruction counts the number of redundant sign bits and writes the result to the corresponding 32-bit elements of Rd.

Operations:

```
snum[x] = Rs1.W[x];
cnt[x] = 0;
for (i = 30 to 0) {
   if (snum[x](i) == snum[x](31)) {
      cnt[x] = cnt[x] + 1;
   } else {
      break;
   }
}
Rd.W[x] = cnt[x];
for RV32: x=0
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_CLO32 (unsigned long a) CLO32 (SIMD 32-bit Count Leading One)
```

CEOSE (SIME SE ON COUNTED

Syntax:

Type: SIMD

```
CLO32 Rd, Rs1
```

Purpose: Count the number of leading one bits of the 32-bit elements of a general register.

Description: Starting from the most significant bits of the 32-bit elements of Rs1, this instruction counts the number of leading one bits and writes the results to the corresponding 32-bit elements of Rd.

Operations:

```
snum[x] = Rs1.W[x];
cnt[x] = 0;
for (i = 31 to 0) {
  if (snum[x](i) == 1) {
    cnt[x] = cnt[x] + 1;
  } else {
    break;
  }
```

(continues on next page)

(continued from previous page)

```
Rd.W[x] = cnt[x];
for RV32: x=0
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_CLZ32 (unsigned long a) CLZ32 (SIMD 32-bit Count Leading Zero)
```

Type: SIMD

Syntax:

```
CLZ32 Rd, Rs1
```

Purpose: Count the number of leading zero bits of the 32-bit elements of a general register.

Description: Starting from the most significant bits of the 32-bit elements of Rs1, this instruction counts the number of leading zero bits and writes the results to the corresponding 32-bit elements of Rd.

Operations:

```
snum[x] = Rs1.W[x];
cnt[x] = 0;
for (i = 31 to 0) {
   if (snum[x](i) == 0) {
      cnt[x] = cnt[x] + 1;
   } else {
      break;
   }
}
Rd.W[x] = cnt[x];
for RV32: x=0
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

__STATIC_FORCEINLINE unsigned long __RV_PBSAD (unsigned long a, unsigned long b)
PBSAD (Parallel Byte Sum of Absolute Difference)

Type: DSP

Syntax:

```
PBSAD Rd, Rs1, Rs2
```

Purpose: Calculate the sum of absolute difference of unsigned 8-bit data elements.

Description: This instruction subtracts the un-signed 8-bit elements of Rs2 from those of Rs1. Then it adds the absolute value of each difference together and writes the result to Rd.

Operations:

```
absdiff[x] = ABS(Rs1.B[x] - Rs2.B[x]);
Rd = SUM(absdiff[x]);
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_PBSADA(unsigned long t, unsigned long a, unsigned long a unsigned long to the long a lon

Type: DSP

Syntax:

```
PBSADA Rd, Rs1, Rs2
```

Purpose: Calculate the sum of absolute difference of four unsigned 8-bit data elements and accumulate it into a register.

Description: This instruction subtracts the un-signed 8-bit elements of Rs2 from those of Rs1. It then adds the absolute value of each difference together along with the content of Rd and writes the accumulated result back to Rd.

Operations:

```
absdiff[x] = ABS(Rs1.B[x] - Rs2.B[x]);
Rd = Rd + SUM(absdiff[x]);
for RV32: x=3...0,
for RV64: x=7...0
```

Return value stored in unsigned long type

Parameters

- [in] t: unsigned long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

8-bit Multiply with 32-bit Add Instructions

```
__STATIC_FORCEINLINE long __RV_SMAQA(long t, unsigned long a, unsigned long b)

__STATIC_FORCEINLINE long __RV_SMAQA_SU(long t, unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_UMAQA(unsigned long t, unsigned long a, unsigned long proup NMSIS_Core_DSP_Intrinsic_8B_MULT_32B_ADD

8-bit Multiply with 32-bit Add Instructions

there are 3 8-bit Multiply with 32-bit Add Instructions
```

Functions

__STATIC_FORCEINLINE long __RV_SMAQA(long t, unsigned long a, unsigned long b) SMAQA (Signed Multiply Four Bytes with 32-bit Adds)

Type: Partial-SIMD (Reduction)

Syntax:

```
SMAQA Rd, Rs1, Rs2
```

Purpose: Do four signed 8-bit multiplications from 32-bit chunks of two registers; and then adds the four 16-bit results and the content of corresponding 32-bit chunks of a third register together.

Description: This instruction multiplies the four signed 8-bit elements of 32-bit chunks of Rs1 with the four signed 8-bit elements of 32-bit chunks of Rs2 and then adds the four results together with the signed content of the corresponding 32-bit chunks of Rd. The final results are written back to the corresponding 32-bit chunks in Rd.

Operations:

```
res[x] = Rd.W[x] +
   (Rs1.W[x].B[3] s* Rs2.W[x].B[3]) + (Rs1.W[x].B[2] s* Rs2.W[x].B[2]) +
   (Rs1.W[x].B[1] s* Rs2.W[x].B[1]) + (Rs1.W[x].B[0] s* Rs2.W[x].B[0]);
Rd.W[x] = res[x];
for RV32: x=0,
for RV64: x=1,0
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_SMAQA_SU(long t, unsigned long a, unsigned long b) SMAQA.SU(Signed and Unsigned Multiply Four Bytes with 32-bit Adds)

Type: Partial-SIMD (Reduction)

Syntax:

```
SMAQA.SU Rd, Rs1, Rs2
```

Purpose: Do four signed x unsigned 8-bit multiplications from 32-bit chunks of two registers; and then adds the four 16-bit results and the content of corresponding 32-bit chunks of a third register together.

Description: This instruction multiplies the four signed 8-bit elements of 32-bit chunks of Rs1 with the four unsigned 8-bit elements of 32-bit chunks of Rs2 and then adds the four results together with the signed content of the corresponding 32-bit chunks of Rd. The final results are written back to the corresponding 32-bit chunks in Rd.

Operations:

```
res[x] = Rd.W[x] +
  (Rs1.W[x].B[3] su* Rs2.W[x].B[3]) + (Rs1.W[x].B[2] su* Rs2.W[x].B[2]) +
  (Rs1.W[x].B[1] su* Rs2.W[x].B[1]) + (Rs1.W[x].B[0] su* Rs2.W[x].B[0]);
Rd.W[x] = res[x];
```

(continues on next page)

(continued from previous page)

```
for RV32: x=0,
for RV64: x=1...0
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UMAQA (unsigned long t, unsigned long a, unsign UMAQA (Unsigned Multiply Four Bytes with 32- bit Adds)

Type: DSP Syntax:

```
UMAQA Rd, Rs1, Rs2
```

Purpose: Do four unsigned 8-bit multiplications from 32-bit chunks of two registers; and then adds the four 16-bit results and the content of corresponding 32-bit chunks of a third register together.

Description: This instruction multiplies the four unsigned 8-bit elements of 32-bit chunks of Rs1 with the four unsigned 8-bit elements of 32-bit chunks of Rs2 and then adds the four results together with the unsigned content of the corresponding 32-bit chunks of Rd. The final results are written back to the corresponding 32-bit chunks in Rd.

Operations:

Return value stored in unsigned long type

Parameters

- [in] t: unsigned long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

 $group \ {\tt NMSIS_Core_DSP_Intrinsic_PART_SIMD_DATA_PROCESS}$

Partial-SIMD Data Processing Instructions.

64-bit Profile Instructions

64-bit Addition & Subtraction Instructions

```
__STATIC_FORCEINLINE unsigned long long __RV_ADD64(unsigned long long a, unsigned long long __RV_KADD64(long long a, long long b)
```

```
__STATIC_FORCEINLINE long long __RV_KSUB64 (long long a, long long b)

__STATIC_FORCEINLINE long long __RV_RADD64 (long long a, long long b)

__STATIC_FORCEINLINE long long __RV_RSUB64 (long long a, long long b)

__STATIC_FORCEINLINE unsigned long long __RV_SUB64 (unsigned long long a, unsigned long long a)

__STATIC_FORCEINLINE unsigned long long __RV_UKADD64 (unsigned long long a, unsigned long long a)

__STATIC_FORCEINLINE unsigned long long __RV_UKSUB64 (unsigned long long a, unsigned long long a)

__STATIC_FORCEINLINE unsigned long long __RV_URADD64 (unsigned long long a, unsigned long long __RV_URADD64 (unsigned long long a, unsigned long long __RV_URSUB64 (unsigned long long a, unsigned long __RV_URSUB64 (unsigned long __RV_URSUB64 (unsigned long __RV_URSUB64 (unsigned long __RV_URSU
```

there are 10 64-bit Addition & Subtraction Instructions.

Functions

```
__STATIC_FORCEINLINE unsigned long long __RV_ADD64 (unsigned long long a, unsigned long ADD64 (64-bit Addition)

Type: 64-bit Profile

Syntax:
```

```
ADD64 Rd, Rs1, Rs2
```

Purpose: Add two 64-bit signed or unsigned integers.

RV32 Description: This instruction adds the 64-bit integer of an even/odd pair of registers specified by Rs1(4,1) with the 64-bit integer of an even/odd pair of registers specified by Rs2(4,1), and then writes the 64-bit result to an even/odd pair of registers specified by Rd(4,1). Rx(4,1), i.e., value d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the result and the even 2d register of the pair contains the low 32-bit of the result.

RV64 Description: This instruction has the same behavior as the ADD instruction in RV64I.

Note: This instruction can be used for either signed or unsigned addition.

Operations:

```
RV32:

t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);

a_L = CONCAT(Rs1(4,1),1'b0); a_H = CONCAT(Rs1(4,1),1'b1);

b_L = CONCAT(Rs2(4,1),1'b0); b_H = CONCAT(Rs2(4,1),1'b1);

R[t_H].R[t_L] = R[a_H].R[a_L] + R[b_H].R[b_L];

RV64:

Rd = Rs1 + Rs2;
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned long long type of value stored in a
- [in] b: unsigned long long type of value stored in b

```
__STATIC_FORCEINLINE long long __RV_KADD64 (long long a, long long b) KADD64 (64-bit Signed Saturating Addition)
```

Type: DSP (64-bit Profile)

Syntax:

```
KADD64 Rd, Rs1, Rs2
```

Purpose: Add two 64-bit signed integers. The result is saturated to the Q63 range.

RV32 Description: This instruction adds the 64-bit signed integer of an even/odd pair of registers specified by Rs1(4,1) with the 64-bit signed integer of an even/odd pair of registers specified by Rs2(4,1). If the 64-bit result is beyond the Q63 number range (- $2^63 \le 2^63 \le 2^$

RV64 Description: This instruction adds the 64-bit signed integer in Rs1 with the 64-bit signed integer in Rs2. If the result is beyond the Q63 number range ($-2^63 \le Q63 \le 2^63-1$), it is saturated to the range and the OV bit is set to 1. The saturated result is written to Rd.

Operations:

```
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
a_L = CONCAT(Rs1(4,1),1'b0); a_H = CONCAT(Rs1(4,1),1'b1);
b_L = CONCAT(Rs2(4,1),1'b0); b_H = CONCAT(Rs2(4,1),1'b1);
result = R[a_H].R[a_L] + R[b_H].R[b_L];
if (result > (2^63)-1) {
  result = (2^63)-1; OV = 1;
 } else if (result < -2^63) {
   result = -2^63; OV = 1;
R[t_H].R[t_L] = result;
RV64:
result = Rs1 + Rs2;
if (result > (2^63)-1) {
  result = (2^63)-1; OV = 1;
 } else if (result < -2^63) {
   result = -2^63; OV = 1;
Rd = result;
```

Return value stored in long long type

Parameters

- [in] a: long long type of value stored in a
- [in] b: long long type of value stored in b

__STATIC_FORCEINLINE long long __RV_KSUB64 (long long a, long long b)

KSUB64 (64-bit Signed Saturating Subtraction)

Type: DSP (64-bit Profile)

Syntax:

```
KSUB64 Rd, Rs1, Rs2
```

Purpose: Perform a 64-bit signed integer subtraction. The result is saturated to the Q63 range.

RV32 Description: This instruction subtracts the 64-bit signed integer of an even/odd pair of registers specified by Rs2(4,1) from the 64-bit signed integer of an even/odd pair of registers specified by Rs1(4,1). If the 64-bit result is beyond the Q63 number range (- $2^63 \le Q63 \le 2^63$ -1), it is saturated to the range and the OV bit is set to 1. The saturated result is then written to an even/odd pair of registers specified by Rd(4,1). Rx(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the operand and the even 2d register of the pair contains the low 32-bit of the operand.

RV64 Description: This instruction subtracts the 64-bit signed integer of Rs2 from the 64-bit signed integer of Rs1. If the 64-bit result is beyond the Q63 number range ($-2^63 \le Q63 \le Q63$

Operations:

```
RV32:
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
a_L = CONCAT(Rs1(4,1),1'b0); a_H = CONCAT(Rs1(4,1),1'b1);
b_L = CONCAT(Rs2(4,1),1'b0); b_H = CONCAT(Rs2(4,1),1'b1);
result = R[a_H].R[a_L] - R[b_H].R[b_L];
if (result > (2^63)-1) {
 result = (2^63)-1; OV = 1;
} else if (result < -2^63) {
 result = -2^63; OV = 1;
R[t_H].R[t_L] = result;
RV64:
result = Rs1 - Rs2;
if (result > (2^63)-1) {
 result = (2^63)-1; OV = 1;
} else if (result < -2^63) {
 result = -2^63; OV = 1;
Rd = result;
```

Return value stored in long long type

Parameters

- [in] a: long long type of value stored in a
- [in] b: long long type of value stored in b

```
__STATIC_FORCEINLINE long long __RV_RADD64 (long long a, long long b)
RADD64 (64-bit Signed Halving Addition)
```

Type: DSP (64-bit Profile)

Syntax:

```
RADD64 Rd, Rs1, Rs2
```

Purpose: Add two 64-bit signed integers. The result is halved to avoid overflow or saturation.

RV32 Description: This instruction adds the 64-bit signed integer of an even/odd pair of registers specified by Rs1(4,1) with the 64-bit signed integer of an even/odd pair of registers specified by Rs2(4,1). The 64-bit addition result is first arithmetically right-shifted by 1 bit and then written to an even/odd pair of

registers specified by Rd(4,1). Rx(4,1), i.e., value d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the result and the even 2d register of the pair contains the low 32-bit of the result.

RV64 Description: This instruction adds the 64-bit signed integer in Rs1 with the 64-bit signed integer in Rs2. The 64-bit addition result is first arithmetically right-shifted by 1 bit and then written to Rd.

Operations:

```
RV32:

t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);

a_L = CONCAT(Rs1(4,1),1'b0); a_H = CONCAT(Rs1(4,1),1'b1);

b_L = CONCAT(Rs2(4,1),1'b0); b_H = CONCAT(Rs2(4,1),1'b1);

R[t_H].R[t_L] = (R[a_H].R[a_L] + R[b_H].R[b_L]) s>> 1;

RV64:

Rd = (Rs1 + Rs2) s>> 1;
```

Return value stored in long long type

Parameters

- [in] a: long long type of value stored in a
- [in] b: long long type of value stored in b

```
_STATIC_FORCEINLINE long long __RV_RSUB64 (long long a, long long b)
RSUB64 (64-bit Signed Halving Subtraction)
```

Type: DSP (64-bit Profile)

Syntax:

```
RSUB64 Rd, Rs1, Rs2
```

Purpose: Perform a 64-bit signed integer subtraction. The result is halved to avoid overflow or saturation.

RV32 Description: This instruction subtracts the 64-bit signed integer of an even/odd pair of registers specified by Rb(4,1) from the 64-bit signed integer of an even/odd pair of registers specified by Ra(4,1). The subtraction result is first arithmetically right-shifted by 1 bit and then written to an even/odd pair of registers specified by Rt(4,1). Rx(4,1), i.e., value d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the result and the even 2d register of the pair contains the low 32-bit of the result.

RV64 Description: This instruction subtracts the 64-bit signed integer in Rs2 from the 64-bit signed integer in Rs1. The 64-bit subtraction result is first arithmetically right-shifted by 1 bit and then written to Rd.

Operations:

```
RV32:
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
a_L = CONCAT(Rs1(4,1),1'b0); a_H = CONCAT(Rs1(4,1),1'b1);
b_L = CONCAT(Rs2(4,1),1'b0); b_H = CONCAT(Rs2(4,1),1'b1);
R[t_H].R[t_L] = (R[a_H].R[a_L] - R[b_H].R[b_L]) s>> 1;
RV64:
Rd = (Rs1 - Rs2) s>> 1;
```

Return value stored in long long type

Parameters

- [in] a: long long type of value stored in a
- [in] b: long long type of value stored in b

__STATIC_FORCEINLINE unsigned long long __RV_SUB64(unsigned long long a, unsigned long SUB64(64-bit Subtraction)

Type: DSP (64-bit Profile)

Syntax:

```
SUB64 Rd, Rs1, Rs2
```

Purpose: Perform a 64-bit signed or unsigned integer subtraction.

RV32 Description: This instruction subtracts the 64-bit integer of an even/odd pair of registers specified by Rs2(4,1) from the 64-bit integer of an even/odd pair of registers specified by Rs1(4,1), and then writes the 64-bit result to an even/odd pair of registers specified by Rd(4,1). Rx(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the operand and the even 2d register of the pair contains the low 32-bit of the operand.

RV64 Description: This instruction subtracts the 64-bit integer of Rs2 from the 64-bit integer of Rs1, and then writes the 64-bit result to Rd.

Note: This instruction can be used for either signed or unsigned subtraction.

Operations:

```
* RV32:

t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);

a_L = CONCAT(Rs1(4,1),1'b0); a_H = CONCAT(Rs1(4,1),1'b1);

b_L = CONCAT(Rs2(4,1),1'b0); b_H = CONCAT(Rs2(4,1),1'b1);

R[t_H].R[t_L] = R[a_H].R[a_L] - R[b_H].R[b_L];

* RV64:

Rd = Rs1 - Rs2;
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned long long type of value stored in a
- [in] b: unsigned long long type of value stored in b

__STATIC_FORCEINLINE unsigned long long __RV_UKADD64 (unsigned long long a, unsigned lo UKADD64 (64-bit Unsigned Saturating Addition)

Type: DSP (64-bit Profile)

Syntax:

```
UKADD64 Rd, Rs1, Rs2
```

Purpose: Add two 64-bit unsigned integers. The result is saturated to the U64 range.

RV32 Description: This instruction adds the 64-bit unsigned integer of an even/odd pair of registers specified by Rs1(4,1) with the 64-bit unsigned integer of an even/odd pair of registers specified by Rs2(4,1). If the 64-bit result is beyond the U64 number range (0 <= U64 <= 2^64 -1), it is saturated to the range and the OV bit is set to 1. The saturated result is written to an even/odd pair of registers specified by Rd(4,1). Rx(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes

register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the result and the even 2d register of the pair contains the low 32-bit of the result.

RV64 Description: This instruction adds the 64-bit unsigned integer in Rs1 with the 64-bit unsigned integer in Rs2. If the 64-bit result is beyond the U64 number range (0 <= U64 <= 2^64-1), it is saturated to the range and the OV bit is set to 1. The saturated result is written to Rd.

Operations:

```
* RV32:
t_L = CONCAT(Rt(4,1),1'b0); t_H = CONCAT(Rt(4,1),1'b1);
a_L = CONCAT(Ra(4,1),1'b0); a_H = CONCAT(Ra(4,1),1'b1);
b_L = CONCAT(Rb(4,1),1'b0); b_H = CONCAT(Rb(4,1),1'b1);
result = R[a_H].R[a_L] + R[b_H].R[b_L];
if (result > (2^64)-1) {
  result = (2^64)-1; OV = 1;
R[t_H].R[t_L] = result;
* RV64:
result = Rs1 + Rs2;
if (result > (2^64)-1) {
 result = (2^64)-1; OV = 1;
Rd = result;
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned long long type of value stored in a
- [in] b: unsigned long long type of value stored in b

STATIC_FORCEINLINE unsigned long long __RV_UKSUB64(unsigned long long a, unsigned lo UKSUB64 (64-bit Unsigned Saturating Subtraction)

Type: DSP (64-bit Profile)

Syntax:

```
UKSUB64 Rd, Rs1, Rs2
```

Purpose: Perform a 64-bit signed integer subtraction. The result is saturated to the U64 range.

RV32 Description: This instruction subtracts the 64-bit unsigned integer of an even/odd pair of registers specified by Rs2(4,1) from the 64-bit unsigned integer of an even/odd pair of registers specified by Rs1(4,1). If the 64-bit result is beyond the U64 number range ($0 \le U64 \le 2^64-1$), it is saturated to the range and the OV bit is set to 1. The saturated result is then written to an even/odd pair of registers specified by Rd(4,1), Rx(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the operand and the even 2d register of the pair contains the low 32-bit of the operand.

RV64 Description: This instruction subtracts the 64-bit unsigned integer of Rs2 from the 64-bit unsigned integer of an even/odd pair of Rs1. If the 64-bit result is beyond the U64 number range (0 <= U64 <= 2^64-1), it is saturated to the range and the OV bit is set to 1. The saturated result is then written to Rd.

Operations:

```
* RV32:
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
```

2.5. NMSIS Core API 259

(continues on next page)

(continued from previous page)

```
a_L = CONCAT(Rs1(4,1),1'b0); a_H = CONCAT(Rs1(4,1),1'b1);
b_L = CONCAT(Rs2(4,1),1'b0); b_H = CONCAT(Rs2(4,1),1'b1);
result = R[a_H].R[a_L] - R[b_H].R[b_L];
if (result < 0) {
  result = 0; OV = 1;
}
R[t_H].R[t_L] = result;
* RV64
result = Rs1 - Rs2;
if (result < 0) {
  result = 0; OV = 1;
}
Rd = result;</pre>
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned long long type of value stored in a
- [in] b: unsigned long long type of value stored in b

_STATIC_FORCEINLINE unsigned long long __RV_URADD64(unsigned long long a, unsigned lo URADD64(64-bit Unsigned Halving Addition)

Type: DSP (64-bit Profile)

Syntax:

```
URADD64 Rd, Rs1, Rs2
```

Purpose: Add two 64-bit unsigned integers. The result is halved to avoid overflow or saturation.

RV32 Description: This instruction adds the 64-bit unsigned integer of an even/odd pair of registers specified by Rs1(4,1) with the 64-bit unsigned integer of an even/odd pair of registers specified by Rs2(4,1). The 64-bit addition result is first logically right-shifted by 1 bit and then written to an even/odd pair of registers specified by Rd(4,1). Rx(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the result and the even 2d register of the pair contains the low 32-bit of the result.

RV64 Description: This instruction adds the 64-bit unsigned integer in Rs1 with the 64-bit unsigned integer Rs2. The 64-bit addition result is first logically right-shifted by 1 bit and then written to Rd.

Operations:

```
* RV32:

t_L = CONCAT(Rt(4,1),1'b0); t_H = CONCAT(Rt(4,1),1'b1);

a_L = CONCAT(Ra(4,1),1'b0); a_H = CONCAT(Ra(4,1),1'b1);

b_L = CONCAT(Rb(4,1),1'b0); b_H = CONCAT(Rb(4,1),1'b1);

R[t_H].R[t_L] = (R[a_H].R[a_L] + R[b_H].R[b_L]) u>> 1;

* RV64:

Rd = (Rs1 + Rs2) u>> 1;
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned long long type of value stored in a
- [in] b: unsigned long long type of value stored in b

```
___STATIC_FORCEINLINE unsigned long long ___RV_URSUB64(unsigned long long a, unsigned lo
URSUB64(64-bit Unsigned Halving Subtraction)
```

Type: DSP (64-bit Profile)

Syntax:

```
URSUB64 Rd, Rs1, Rs2
```

Purpose: Perform a 64-bit unsigned integer subtraction. The result is halved to avoid overflow or saturation.

RV32 Description: This instruction subtracts the 64-bit unsigned integer of an even/odd pair of registers specified by Rs2(4,1) from the 64-bit unsigned integer of an even/odd pair of registers specified by Rs1(4,1). The subtraction result is first logically right-shifted by 1 bit and then written to an even/odd pair of registers specified by Rd(4,1). Rx(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the result and the even 2d register of the pair contains the low 32-bit of the result.

RV64 Description: This instruction subtracts the 64-bit unsigned integer in Rs2 from the 64-bit unsigned integer in Rs1. The subtraction result is first logically right-shifted by 1 bit and then written to Rd.

Operations:

```
* RV32:

t_L = CONCAT(Rt(4,1),1'b0); t_H = CONCAT(Rt(4,1),1'b1);

a_L = CONCAT(Ra(4,1),1'b0); a_H = CONCAT(Ra(4,1),1'b1);

b_L = CONCAT(Rb(4,1),1'b0); b_H = CONCAT(Rb(4,1),1'b1);

R[t_H].R[t_L] = (R[a_H].R[a_L] - R[b_H].R[b_L]) u>> 1;

* RV64:

Rd = (Rs1 - Rs2) u>> 1;
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned long long type of value stored in a
- [in] b: unsigned long long type of value stored in b

32-bit Multiply with 64-bit Add/Subtract Instructions

```
__STATIC_FORCEINLINE long long __RV_KMAR64 (long long t, long a, long b)

__STATIC_FORCEINLINE long long __RV_KMSR64 (long long t, long a, long b)

__STATIC_FORCEINLINE long long __RV_SMAR64 (long long t, long a, long b)

__STATIC_FORCEINLINE long long __RV_SMSR64 (long long t, long a, long b)

__STATIC_FORCEINLINE unsigned long long __RV_UKMAR64 (unsigned long long t, unsigned long a

__STATIC_FORCEINLINE unsigned long long __RV_UKMSR64 (unsigned long long t, unsigned long a

__STATIC_FORCEINLINE unsigned long long __RV_UMAR64 (unsigned long long t, unsigned long a,

__STATIC_FORCEINLINE unsigned long long __RV_UMSR64 (unsigned long long t, unsigned long a,

__STATIC_FORCEINLINE unsigned long long __RV_UMSR64 (unsigned long long t, unsigned long a,

__STATIC_FORCEINLINE unsigned long long __RV_UMSR64 (unsigned long long t, unsigned long a,

__STATIC_FORCEINLINE unsigned long long __RV_UMSR64 (unsigned long long t, unsigned long a,

__STATIC_FORCEINLINE unsigned long long __RV_UMSR64 (unsigned long long t, unsigned long a,

__STATIC_FORCEINLINE unsigned long long __RV_UMSR64 (unsigned long long t, unsigned long a,

__STATIC_FORCEINLINE unsigned long long __RV_UMSR64 (unsigned long long t, unsigned long a,

__STATIC_FORCEINLINE unsigned long long __RV_UMSR64 (unsigned long long t, unsigned long a,

__STATIC_FORCEINLINE unsigned long long __RV_UMSR64 (unsigned long long t, unsigned long a,

__STATIC_FORCEINLINE unsigned long long __RV_UMSR64 (unsigned long long t, unsigned long a,

__STATIC_FORCEINLINE unsigned long long __RV_UMSR64 (unsigned long long t, unsigned long a,

__STATIC_FORCEINLINE unsigned long long __RV_UMSR64 (unsigned long long t, unsigned long a,

__STATIC_FORCEINLINE unsigned long long __RV_UMSR64 (unsigned long long t, unsigned long a,

__STATIC_FORCEINLINE unsigned long long __RV_UMSR64 (unsigned long long t, unsigned long a,

__STATIC_FORCEINLINE unsigned long long __RV_UMSR64 (unsigned long long t, unsigned long a,

__STATIC_FORCEINLINE unsigned long long __RV_UMSR64 (unsigned long long t, u
```

Functions

```
__STATIC_FORCEINLINE long long __RV_KMAR64 (long long t, long a, long b) KMAR64 (Signed Multiply and Saturating Add to 64-Bit Data)
```

Type: DSP (64-bit Profile)

Syntax:

```
KMAR64 Rd, Rs1, Rs2
```

Purpose: Multiply the 32-bit signed elements in two registers and add the 64-bit multiplication results to the 64-bit signed data of a pair of registers (RV32) or a register (RV64). The result is saturated to the Q63 range and written back to the pair of registers (RV32) or the register (RV64).

RV32 Description: This instruction multiplies the 32-bit signed data of Rs1 with that of Rs2. It adds the 64-bit multiplication result to the 64-bit signed data of an even/odd pair of registers specified by Rd(4,1) with unlimited precision. If the 64-bit addition result is beyond the Q63 number range (-2^63 <= Q63 <= 2^63 -1), it is saturated to the range and the OV bit is set to 1. The saturated result is written back to the even/odd pair of registers specified by Rd(4,1). Rx(4,1), i.e., value d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the result and the even 2d register of the pair contains the low 32-bit of the result.

RV64 Description: This instruction multiplies the 32-bit signed elements of Rs1 with that of Rs2. It adds the 64-bit multiplication results to the 64-bit signed data of Rd with unlimited precision. If the 64-bit addition result is beyond the Q63 number range ($-2^63 \le Q63 \le 2^63-1$), it is saturated to the range and the OV bit is set to 1. The saturated result is written back to Rd.

Operations:

```
RV32:
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
result = R[t_H].R[t_L] + (Rs1 * Rs2);
if (result > (2^63)-1) {
    result = (2^63)-1; OV = 1;
} else if (result < -2^63) {
    result = -2^63; OV = 1;
}
R[t_H].R[t_L] = result;
RV64:
// `result` has unlimited precision
result = Rd + (Rs1.W[0] * Rs2.W[0]) + (Rs1.W[1] * Rs2.W[1]);
if (result > (2^63)-1) {
    result = (2^63)-1; OV = 1;
} else if (result < -2^63) {
    result = -2^63; OV = 1;
}
Rd = result;</pre>
```

Return value stored in long long type

Parameters

- [in] t: long long type of value stored in t
- [in] a: long type of value stored in a
- [in] b: long type of value stored in b

```
__STATIC_FORCEINLINE long long __RV_KMSR64 (long long t, long a, long b)

KMSR64 (Signed Multiply and Saturating Subtract from 64-Bit Data)
```

Type: DSP (64-bit Profile)

Syntax:

```
KMSR64 Rd, Rs1, Rs2
```

Purpose: Multiply the 32-bit signed elements in two registers and subtract the 64-bit multiplication results from the 64-bit signed data of a pair of registers (RV32) or a register (RV64). The result is saturated to the Q63 range and written back to the pair of registers (RV32) or the register (RV64).

RV32 Description: This instruction multiplies the 32-bit signed data of Rs1 with that of Rs2. It subtracts the 64-bit multiplication result from the 64-bit signed data of an even/odd pair of registers specified by Rd(4,1) with unlimited precision. If the 64-bit subtraction result is beyond the Q63 number range (-2^63 $\leq 2^63 \leq 2^63 \leq$

RV64 Description: This instruction multiplies the 32-bit signed elements of Rs1 with that of Rs2. It subtracts the 64-bit multiplication results from the 64-bit signed data in Rd with unlimited precision. If the 64-bit subtraction result is beyond the Q63 number range ($-2^63 \le 2^63 \le 1$), it is saturated to the range and the OV bit is set to 1. The saturated result is written back to Rd.

Operations:

```
RV32:
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
result = R[t_H].R[t_L] - (Rs1 * Rs2);
if (result > (2^63)-1) {
 result = (2^63)-1; OV = 1;
} else if (result < -2^63) {
 result = -2^63; OV = 1;
R[t_H].R[t_L] = result;
RV64:
// `result` has unlimited precision
result = Rd - (Rs1.W[0] * Rs2.W[0]) - (Rs1.W[1] * Rs2.W[1]);
if (result > (2^63) - 1) {
 result = (2^63)-1; OV = 1;
} else if (result < -2^63) {
  result = -2^63; OV = 1;
Rd = result;
```

Return value stored in long long type

Parameters

- [in] t: long long type of value stored in t
- [in] a: long type of value stored in a
- [in] b: long type of value stored in b

__STATIC_FORCEINLINE long long __RV_SMAR64(long long t, long a, long b) SMAR64 (Signed Multiply and Add to 64-Bit Data)

Type: DSP (64-bit Profile)

Syntax:

```
SMAR64 Rd, Rs1, Rs2
```

Purpose: Multiply the 32-bit signed elements in two registers and add the 64-bit multiplication result to the 64-bit signed data of a pair of registers (RV32) or a register (RV64). The result is written back to the pair of registers (RV32) or a register (RV64).

RV32 Description: This instruction multiplies the 32-bit signed data of Rs1 with that of Rs2. It adds the 64-bit multiplication result to the 64-bit signed data of an even/odd pair of registers specified by Rd(4,1). The addition result is written back to the even/odd pair of registers specified by Rd(4,1). Rx(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the result and the even 2d register of the pair contains the low 32-bit of the result.

RV64 Description: This instruction multiplies the 32-bit signed elements of Rs1 with that of Rs2. It adds the 64-bit multiplication results to the 64-bit signed data of Rd. The addition result is written back to Rd.

Operations:

```
* RV32:

t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);

R[t_H].R[t_L] = R[t_H].R[t_L] + (Rs1 * Rs2);

* RV64:

Rd = Rd + (Rs1.W[0] * Rs2.W[0]) + (Rs1.W[1] * Rs2.W[1]);
```

Return value stored in long long type

Parameters

- [in] t: long long type of value stored in t
- [in] a: long type of value stored in a
- [in] b: long type of value stored in b

__STATIC_FORCEINLINE long long __RV_SMSR64(long long t, long a, long b)
SMSR64 (Signed Multiply and Subtract from 64- Bit Data)

Type: DSP (64-bit Profile)

Syntax:

```
SMSR64 Rd, Rs1, Rs2
```

Purpose: Multiply the 32-bit signed elements in two registers and subtract the 64-bit multiplication results from the 64-bit signed data of a pair of registers (RV32) or a register (RV64). The result is written back to the pair of registers (RV32) or a register (RV64).

RV32 Description: This instruction multiplies the 32-bit signed data of Rs1 with that of Rs2. It subtracts the 64-bit multiplication result from the 64-bit signed data of an even/odd pair of registers specified by Rd(4,1). The subtraction result is written back to the even/odd pair of registers specified by Rd(4,1). Rx(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the result and the even 2d register of the pair contains the low 32-bit of the result.

RV64 Description: This instruction multiplies the 32-bit signed elements of Rs1 with that of Rs2. It subtracts the 64-bit multiplication results from the 64-bit signed data of Rd. The subtraction result is written back to Rd.

Operations:

```
* RV32:

t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);

R[t_H].R[t_L] = R[t_H].R[t_L] - (Rs1 * Rs2);

* RV64:

Rd = Rd - (Rs1.W[0] * Rs2.W[0]) - (Rs1.W[1] * Rs2.W[1]);
```

Return value stored in long long type

Parameters

- [in] t: long long type of value stored in t
- [in] a: long type of value stored in a
- [in] b: long type of value stored in b

_STATIC_FORCEINLINE unsigned long long __RV_UKMAR64(unsigned long long t, unsigned lo UKMAR64(Unsigned Multiply and Saturating Add to 64-Bit Data)

Type: DSP (64-bit Profile)

Syntax:

```
UKMAR64 Rd, Rs1, Rs2
```

Purpose: Multiply the 32-bit unsigned elements in two registers and add the 64-bit multiplication results to the 64-bit unsigned data of a pair of registers (RV32) or a register (RV64). The result is saturated to the U64 range and written back to the pair of registers (RV32) or the register (RV64).

RV32 Description: This instruction multiplies the 32-bit unsigned data of Rs1 with that of Rs2. It adds the 64-bit multiplication result to the 64-bit unsigned data of an even/odd pair of registers specified by Rd(4,1) with unlimited precision. If the 64-bit addition result is beyond the U64 number range ($0 \le 0.4$ 0.4

RV64 Description: This instruction multiplies the 32-bit unsigned elements of Rs1 with that of Rs2. It adds the 64-bit multiplication results to the 64-bit unsigned data in Rd with unlimited precision. If the 64-bit addition result is beyond the U64 number range ($0 \le U64 \le 2^64-1$), it is saturated to the range and the OV bit is set to 1. The saturated result is written back to Rd.

Operations:

```
* RV32:
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
result = R[t_H].R[t_L] + (Rs1 * Rs2);
if (result > (2^64)-1) {
   result = (2^64)-1; OV = 1;
}
R[t_H].R[t_L] = result;
* RV64:
// `result` has unlimited precision
result = Rd + (Rs1.W[0] u* Rs2.W[0]) + (Rs1.W[1] u* Rs2.W[1]);
if (result > (2^64)-1) {
   result = (2^64)-1; OV = 1;
```

(continues on next page)

(continued from previous page)

```
Rd = result;
```

Return value stored in unsigned long long type

Parameters

- [in] t: unsigned long long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long long __RV_UKMSR64(unsigned long long t, unsigned lo UKMSR64(Unsigned Multiply and Saturating Subtract from 64-Bit Data)

Type: DSP (64-bit Profile)

Syntax:

```
UKMSR64 Rd, Rs1, Rs2
```

Purpose: Multiply the 32-bit unsigned elements in two registers and subtract the 64-bit multiplication results from the 64-bit unsigned data of a pair of registers (RV32) or a register (RV64). The result is saturated to the U64 range and written back to the pair of registers (RV32) or a register (RV64).

RV32 Description: This instruction multiplies the 32-bit unsigned data of Rs1 with that of Rs2. It subtracts the 64-bit multiplication result from the 64-bit unsigned data of an even/odd pair of registers specified by Rd(4,1) with unlimited precision. If the 64-bit subtraction result is beyond the U64 number range (0 <= U64 <= 2^64-1), it is saturated to the range and the OV bit is set to 1. The saturated result is written back to the even/odd pair of registers specified by Rd(4,1). Rx(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the result and the even 2d register of the pair contains the low 32-bit of the result.

RV64 Description: This instruction multiplies the 32-bit unsigned elements of Rs1 with that of Rs2. It subtracts the 64-bit multiplication results from the 64-bit unsigned data of Rd with unlimited precision. If the 64-bit subtraction result is beyond the U64 number range ($0 \le U64 \le 2^64-1$), it is saturated to the range and the OV bit is set to 1. The saturated result is written back to Rd.

Operations:

```
* RV32:
t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);
result = R[t_H].R[t_L] - (Rs1 u* Rs2);
if (result < 0) {
    result = 0; OV = 1;
}
R[t_H].R[t_L] = result;
* RV64:
// `result` has unlimited precision
result = Rd - (Rs1.W[0] u* Rs2.W[0]) - (Rs1.W[1] u* Rs2.W[1]);
if (result < 0) {
    result = 0; OV = 1;
}
Rd = result;</pre>
```

Return value stored in unsigned long long type

Parameters

- [in] t: unsigned long long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE unsigned long long __RV_UMAR64(unsigned long long t, unsigned lon UMAR64(Unsigned Multiply and Add to 64-Bit Data)

Type: DSP (64-bit Profile)

Syntax:

```
UMAR64 Rd, Rs1, Rs2
```

Purpose: Multiply the 32-bit unsigned elements in two registers and add the 64-bit multiplication results to the 64-bit unsigned data of a pair of registers (RV32) or a register (RV64). The result is written back to the pair of registers (RV32) or a register (RV64).

RV32 Description: This instruction multiplies the 32-bit unsigned data of Rs1 with that of Rs2. It adds the 64-bit multiplication result to the 64-bit unsigned data of an even/odd pair of registers specified by Rd(4,1). The addition result is written back to the even/odd pair of registers specified by Rd(4,1). Rx(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the result and the even 2d register of the pair contains the low 32-bit of the result.

RV64 Description: This instruction multiplies the 32-bit unsigned elements of Rs1 with that of Rs2. It adds the 64-bit multiplication results to the 64-bit unsigned data of Rd. The addition result is written back to Rd.

Operations:

```
* RV32:

t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);

R[t_H].R[t_L] = R[t_H].R[t_L] + (Rs1 * Rs2);

* RV64:

Rd = Rd + (Rs1.W[0] u* Rs2.W[0]) + (Rs1.W[1] u* Rs2.W[1]);
```

Return value stored in unsigned long long type

Parameters

- [in] t: unsigned long long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long long __RV_UMSR64(unsigned long long t, unsigned lon UMSR64(Unsigned Multiply and Subtract from 64-Bit Data)

Type: DSP (64-bit Profile)

Syntax:

```
UMSR64 Rd, Rs1, Rs2
```

Purpose: Multiply the 32-bit unsigned elements in two registers and subtract the 64-bit multiplication results from the 64-bit unsigned data of a pair of registers (RV32) or a register (RV64). The result is written back to the pair of registers (RV32) or a register (RV64).

RV32 Description: This instruction multiplies the 32-bit unsigned data of Rs1 with that of Rs2. It subtracts the 64-bit multiplication result from the 64-bit unsigned data of an even/odd pair of registers specified by Rd(4,1). The subtraction result is written back to the even/odd pair of registers specified by Rd(4,1). Rx(4,1), i.e., d, determines the even/odd pair group of two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the result and the even 2d register of the pair contains the low 32-bit of the result.

RV64 Description: This instruction multiplies the 32-bit unsigned elements of Rs1 with that of Rs2. It subtracts the 64-bit multiplication results from the 64-bit unsigned data of Rd. The subtraction result is written back to Rd.

Operations:

```
* RV32:

t_L = CONCAT(Rd(4,1),1'b0); t_H = CONCAT(Rd(4,1),1'b1);

R[t_H].R[t_L] = R[t_H].R[t_L] - (Rs1 * Rs2);

* RV64:

Rd = Rd - (Rs1.W[0] u* Rs2.W[0]) - (Rs1.W[1] u* Rs2.W[1]);
```

Return value stored in unsigned long long type

Parameters

- [in] t: unsigned long long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

Signed 16-bit Multiply 64-bit Add/Subtract Instructions

there is Signed 16-bit Multiply 64-bit Add/Subtract Instructions

there are 10 Signed 16-bit Multiply with 64-bit Add/Subtract Instructions

```
__STATIC_FORCEINLINE long long __RV_SMAL(long long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMALBB(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMALBT(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMALTT(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMALDA(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMALXDA(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMALDS(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMALDRS(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMALXDS(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMSLDA(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMSLDA(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMSLXDA(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMSLXDA(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMSLXDA(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMSLXDA(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMSLXDA(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMSLXDA(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMSLXDA(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMSLXDA(long long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long long __RV_SMSLXDA(long long t, unsigned long a, unsigned long b)
```

Functions

```
__STATIC_FORCEINLINE long long __RV_SMAL(long long a, unsigned long b) SMAL(Signed Multiply Halfs & Add 64-bit)
```

Type: Partial-SIMD

Syntax:

```
SMAL Rd, Rs1, Rs2
```

Purpose: Multiply the signed bottom 16-bit content of the 32-bit elements of a register with the top 16-bit content of the same 32-bit elements of the same register, and add the results with a 64-bit value of an even/odd pair of registers (RV32) or a register (RV64). The addition result is written back to another even/odd pair of registers (RV32) or a register (RV64).

RV32 Description: This instruction multiplies the bottom 16-bit content of the lower 32-bit of Rs2 with the top 16-bit content of the lower 32-bit of Rs2 and adds the result with the 64-bit value of an even/odd pair of registers specified by Rs1(4,1). The 64-bit addition result is written back to an even/odd pair of registers specified by Rd(4,1). The 16-bit values of Rs2, and the 64-bit value of the Rs1(4,1) register- pair are treated as signed integers. Rx(4,1), i.e., d, determines the even/odd pair group of the two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the operand and the even 2d register of the pair contains the low 32-bit of the operand.

RV64 Description: This instruction multiplies the bottom 16-bit content of the 32-bit elements of Rs2 with the top 16-bit content of the same 32-bit elements of Rs2 and adds the results with the 64-bit value of Rs1. The 64- bit addition result is written back to Rd. The 16-bit values of Rs2, and the 64-bit value of Rs1 are treated as signed integers.

Operations:

```
RV32:
Mres[31:0] = Rs2.H[1] * Rs2.H[0];
Idx0 = CONCAT(Rs1(4,1),1'b0); Idx1 = CONCAT(Rs1(4,1),1'b1); +
Idx2 = CONCAT(Rd(4,1),1'b0); Idx3 = CONCAT(Rd(4,1),1'b1);
R[Idx3].R[Idx2] = R[Idx1].R[Idx0] + SE64(Mres[31:0]);
RV64:
Mres[0][31:0] = Rs2.W[0].H[1] * Rs2.W[0].H[0];
Mres[1][31:0] = Rs2.W[1].H[1] * Rs2.W[1].H[0];
Rd = Rs1 + SE64(Mres[1][31:0]) + SE64(Mres[0][31:0]);
```

Return value stored in long long type

Parameters

- [in] a: long long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long long __RV_SMALBB(long long t, unsigned long a, unsigned long SMALBB (Signed Multiply Bottom Halfs & Add 64-bit)

Type: DSP (64-bit Profile)

Syntax:

```
SMALBB Rd, Rs1, Rs2
SMALBT Rd, Rs1, Rs2
SMALTT Rd, Rs1, Rs2
```

Purpose: Multiply the signed 16-bit content of the 32-bit elements of a register with the 16-bit content of the corresponding 32-bit elements of another register and add the results with a 64-bit value of an even/odd pair of registers (RV32) or a register (RV64). The addition result is written back to the register-pair (RV32) or the register (RV64).

- SMALBB: rt pair + bottom*bottom (all 32-bit elements)
- SMALBT rt pair + bottom*top (all 32-bit elements)
- SMALTT rt pair + top*top (all 32-bit elements)

RV32 Description: For the SMALBB instruction, it multiplies the bottom 16-bit content of Rs1 with the bottom 16-bit content of Rs2. For the SMALBT instruction, it multiplies the bottom 16-bit content of Rs1 with the top 16-bit content of Rs2. For the SMALTT instruction, it multiplies the top 16-bit content of Rs1 with the top 16-bit content of Rs2. The multiplication result is added with the 64-bit value of an even/odd pair of registers specified by Rd(4,1). The 64-bit addition result is written back to the register-pair. The 16-bit values of Rs1 and Rs2, and the 64-bit value of the register-pair are treated as signed integers. Rd(4,1), i.e., d, determines the even/odd pair group of the two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the operand and the even 2d register of the pair contains the low 32-bit of the operand.

RV64 Description: For the SMALBB instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2. For the SMALBT instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. For the SMALTT instruction, it multiplies the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. The multiplication results are added with the 64-bit value of Rd. The 64-bit addition result is written back to Rd. The 16-bit values of Rs1 and Rs2, and the 64-bit value of Rd are treated as signed integers.

Operations:

```
RV32:
Mres[31:0] = Rs1.H[0] * Rs2.H[0]; // SMALBB
Mres[31:0] = Rs1.H[0] * Rs2.H[1]; // SMALBT
Mres[31:0] = Rs1.H[1] * Rs2.H[1]; // SMALTT
Idx0 = CONCAT(Rd(4,1),1'b0); Idx1 = CONCAT(Rd(4,1),1'b1);
R[Idx1].R[Idx0] = R[Idx1].R[Idx0] + SE64(Mres[31:0]);
RV64:
// SMALBB
Mres[0][31:0] = Rs1.W[0].H[0] * Rs2.W[0].H[0];
Mres[1][31:0] = Rs1.W[1].H[0] * Rs2.W[1].H[0];
// SMALBT
Mres[0][31:0] = Rs1.W[0].H[0] * Rs2.W[0].H[1];
Mres[1][31:0] = Rs1.W[1].H[0] * Rs2.W[1].H[1];
// SMALTT
Mres[0][31:0] = Rs1.W[0].H[1] * Rs2.W[0].H[1];
Mres[1][31:0] = Rs1.W[1].H[1] * Rs2.W[1].H[1];
Rd = Rd + SE64 (Mres[0][31:0]) + SE64 (Mres[1][31:0]);
```

Return value stored in long long type

Parameters

- [in] t: long long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long long __RV_SMALBT(long long t, unsigned long a, unsigned long SMALBT(Signed Multiply Bottom Half & Top Half & Add 64-bit)

Type: DSP (64-bit Profile)

Syntax:

```
SMALBB Rd, Rs1, Rs2
SMALBT Rd, Rs1, Rs2
SMALTT Rd, Rs1, Rs2
```

Purpose: Multiply the signed 16-bit content of the 32-bit elements of a register with the 16-bit content of the corresponding 32-bit elements of another register and add the results with a 64-bit value of an even/odd pair of registers (RV32) or a register (RV64). The addition result is written back to the register-pair (RV32) or the register (RV64).

- SMALBB: rt pair + bottom*bottom (all 32-bit elements)
- SMALBT rt pair + bottom*top (all 32-bit elements)
- SMALTT rt pair + top*top (all 32-bit elements)

RV32 Description: For the SMALBB instruction, it multiplies the bottom 16-bit content of Rs1 with the bottom 16-bit content of Rs2. For the SMALBT instruction, it multiplies the bottom 16-bit content of Rs1 with the top 16-bit content of Rs2. For the SMALTT instruction, it multiplies the top 16-bit content of Rs1 with the top 16-bit content of Rs2. The multiplication result is added with the 64-bit value of an even/odd pair of registers specified by Rd(4,1). The 64-bit addition result is written back to the register-pair. The 16-bit values of Rs1 and Rs2, and the 64-bit value of the register-pair are treated as signed integers. Rd(4,1), i.e., d, determines the even/odd pair group of the two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the operand and the even 2d register of the pair contains the low 32-bit of the operand.

RV64 Description: For the SMALBB instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2. For the SMALBT instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. For the SMALTT instruction, it multiplies the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. The multiplication results are added with the 64-bit value of Rd. The 64-bit addition result is written back to Rd. The 16-bit values of Rs1 and Rs2, and the 64-bit value of Rd are treated as signed integers.

Operations:

```
RV32:
Mres[31:0] = Rs1.H[0] * Rs2.H[0]; // SMALBB
Mres[31:0] = Rs1.H[0] * Rs2.H[1]; // SMALBT
Mres[31:0] = Rs1.H[1] * Rs2.H[1]; // SMALTT
Idx0 = CONCAT(Rd(4,1),1'b0); Idx1 = CONCAT(Rd(4,1),1'b1);
R[Idx1].R[Idx0] = R[Idx1].R[Idx0] + SE64(Mres[31:0]);
RV64:
// SMALBB
Mres[0][31:0] = Rs1.W[0].H[0] * Rs2.W[0].H[0];
Mres[1][31:0] = Rs1.W[1].H[0] * Rs2.W[1].H[0];
// SMALBT
Mres[0][31:0] = Rs1.W[0].H[0] * Rs2.W[0].H[1];
Mres[1][31:0] = Rs1.W[1].H[0] * Rs2.W[1].H[1];
// SMALTT
Mres[0][31:0] = Rs1.W[0].H[1] * Rs2.W[0].H[1];
Mres[1][31:0] = Rs1.W[1].H[1] * Rs2.W[1].H[1];
Rd = Rd + SE64 (Mres[0][31:0]) + SE64 (Mres[1][31:0]);
```

Return value stored in long long type

Parameters

- [in] t: long long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE long long __RV_SMALTT(long long t, unsigned long a, unsigned long SMALTT(Signed Multiply Top Halfs & Add 64-bit)

Type: DSP (64-bit Profile)

Syntax:

```
SMALBB Rd, Rs1, Rs2
SMALBT Rd, Rs1, Rs2
SMALTT Rd, Rs1, Rs2
```

Purpose: Multiply the signed 16-bit content of the 32-bit elements of a register with the 16-bit content of the corresponding 32-bit elements of another register and add the results with a 64-bit value of an even/odd pair of registers (RV32) or a register (RV64). The addition result is written back to the register-pair (RV32) or the register (RV64).

- SMALBB: rt pair + bottom*bottom (all 32-bit elements)
- SMALBT rt pair + bottom*top (all 32-bit elements)
- SMALTT rt pair + top*top (all 32-bit elements)

RV32 Description: For the SMALBB instruction, it multiplies the bottom 16-bit content of Rs1 with the bottom 16-bit content of Rs2. For the SMALBT instruction, it multiplies the bottom 16-bit content of Rs1 with the top 16-bit content of Rs2. For the SMALTT instruction, it multiplies the top 16-bit content of Rs1 with the top 16-bit content of Rs2. The multiplication result is added with the 64-bit value of an even/odd pair of registers specified by Rd(4,1). The 64-bit addition result is written back to the register-pair. The 16-bit values of Rs1 and Rs2, and the 64-bit value of the register-pair are treated as signed integers. Rd(4,1), i.e., d, determines the even/odd pair group of the two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the operand and the even 2d register of the pair contains the low 32-bit of the operand.

RV64 Description: For the SMALBB instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2. For the SMALBT instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. For the SMALTT instruction, it multiplies the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. The multiplication results are added with the 64-bit value of Rd. The 64-bit addition result is written back to Rd. The 16-bit values of Rs1 and Rs2, and the 64-bit value of Rd are treated as signed integers.

Operations:

```
RV32:
Mres[31:0] = Rs1.H[0] * Rs2.H[0]; // SMALBB
Mres[31:0] = Rs1.H[0] * Rs2.H[1]; // SMALBT
Mres[31:0] = Rs1.H[1] * Rs2.H[1]; // SMALTT
Idx0 = CONCAT(Rd(4,1),1'b0); Idx1 = CONCAT(Rd(4,1),1'b1);
R[Idx1].R[Idx0] = R[Idx1].R[Idx0] + SE64(Mres[31:0]);
RV64:
// SMALBB
Mres[0][31:0] = Rs1.W[0].H[0] * Rs2.W[0].H[0];
Mres[1][31:0] = Rs1.W[1].H[0] * Rs2.W[1].H[0];
// SMALBT
Mres[0][31:0] = Rs1.W[0].H[0] * Rs2.W[0].H[1];
```

(continues on next page)

(continued from previous page)

```
Mres[1][31:0] = Rs1.W[1].H[0] * Rs2.W[1].H[1];
// SMALTT
Mres[0][31:0] = Rs1.W[0].H[1] * Rs2.W[0].H[1];
Mres[1][31:0] = Rs1.W[1].H[1] * Rs2.W[1].H[1];
Rd = Rd + SE64(Mres[0][31:0]) + SE64(Mres[1][31:0]);
```

Return value stored in long long type

Parameters

- [in] t: long long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long long __RV_SMALDA(long long t, unsigned long a, unsigned long SMALDA (Signed Multiply Two Halfs and Two Adds 64-bit)

Type: DSP (64-bit Profile)

Syntax:

```
SMALDA Rd, Rs1, Rs2
SMALXDA Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from the 32-bit elements of two registers; and then adds the two 32-bit results and the 64-bit value of an even/odd pair of registers together.

- SMALDA: rt pair+ top*top + bottom*bottom (all 32-bit elements)
- SMALXDA: rt pair+ top*bottom + bottom*top (all 32-bit elements)

RV32 Description: For the SMALDA instruction, it multiplies the bottom 16-bit content of Rs1 with the bottom 16-bit content of Rs2 and then adds the result to the result of multiplying the top 16-bit content of Rs1 with the top 16-bit content of Rs2 with unlimited precision. For the SMALXDA instruction, it multiplies the top 16-bit content of Rs1 with the bottom 16-bit content of Rs2 and then adds the result to the result of multiplying the bottom 16-bit content of Rs1 with the top 16-bit content of Rs2 with unlimited precision. The result is added to the 64-bit value of an even/odd pair of registers specified by Rd(4,1). The 64- bit addition result is written back to the register-pair. The 16-bit values of Rs1 and Rs2, and the 64- bit value of the register-pair are treated as signed integers. Rd(4,1), i.e., d, determines the even/odd pair group of the two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the operand and the even 2d register of the pair contains the low 32-bit of the operand.

RV64 Description: For the SMALDA instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and then adds the result to the result of multiplying the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2 with unlimited precision. For the SMALXDA instruction, it multiplies the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and then adds the result to the result of multiplying the bottom 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2 with unlimited precision. The results are added to the 64-bit value of Rd. The 64-bit addition result is written back to Rd. The 16-bit values of Rs1 and Rs2, and the 64-bit value of Rd are treated as signed integers.

Operations:

```
RV32:
// SMALDA
Mres0[31:0] = (Rs1.H[0] * Rs2.H[0]);
Mres1[31:0] = (Rs1.H[1] * Rs2.H[1]);
// SMALXDA
Mres0[31:0] = (Rs1.H[0] * Rs2.H[1]);
Mres1[31:0] = (Rs1.H[1] * Rs2.H[0]);
Idx0 = CONCAT(Rd(4,1),1'b0); Idx1 = CONCAT(Rd(4,1),1'b1);
R[Idx1].R[Idx0] = R[Idx1].R[Idx0] + SE64(Mres0[31:0]) + SE64(Mres1[31:0]);
RV64:
// SMALDA
Mres0[0][31:0] = (Rs1.W[0].H[0] * Rs2.W[0].H[0]);
Mres1[0][31:0] = (Rs1.W[0].H[1] * Rs2.W[0].H[1]);
Mres0[1][31:0] = (Rs1.W[1].H[0] * Rs2.W[1].H[0]);
Mres1[1][31:0] = (Rs1.W[1].H[1] * Rs2.W[1].H[1]);
// SMALXDA
Mres0[0][31:0] = (Rs1.W[0].H[0] * Rs2.W[0].H[1]);
Mres1[0][31:0] = (Rs1.W[0].H[1] * Rs2.W[0].H[0]);
Mres0[1][31:0] = (Rs1.W[1].H[0] * Rs2.W[1].H[1]);
Mres1[1][31:0] = (Rs1.W[1].H[1] * Rs2.W[1].H[0]);
Rd = Rd + SE64(Mres0[0][31:0]) + SE64(Mres1[0][31:0]) + SE64(Mres0[1][31:0]) +
SE64 (Mres1[1][31:0]);
```

Return value stored in long long type

Parameters

- [in] t: long long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long long __RV_SMALXDA(long long t, unsigned long a, unsigned lon SMALXDA (Signed Crossed Multiply Two Halfs and Two Adds 64-bit)

Type: DSP (64-bit Profile)

Syntax:

```
SMALDA Rd, Rs1, Rs2
SMALXDA Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from the 32-bit elements of two registers; and then adds the two 32-bit results and the 64-bit value of an even/odd pair of registers together.

- SMALDA: rt pair+ top*top + bottom*bottom (all 32-bit elements)
- SMALXDA: rt pair+ top*bottom + bottom*top (all 32-bit elements)

RV32 Description: For the SMALDA instruction, it multiplies the bottom 16-bit content of Rs1 with the bottom 16-bit content of Rs2 and then adds the result to the result of multiplying the top 16-bit content of Rs1 with the top 16-bit content of Rs2 with unlimited precision. For the SMALXDA instruction, it multiplies the top 16-bit content of Rs1 with the bottom 16-bit content of Rs2 and then adds the result to the result of multiplying the bottom 16-bit content of Rs1 with the top 16-bit content of Rs2 with unlimited precision. The result is added to the 64-bit value of an even/odd pair of registers specified by Rd(4,1). The 64- bit addition result is written back to the register-pair. The 16-bit values of Rs1 and Rs2, and the 64- bit value of the register-pair are treated as signed integers. Rd(4,1), i.e., d, determines the even/odd pair group of the two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of

the pair contains the high 32-bit of the operand and the even 2d register of the pair contains the low 32-bit of the operand.

RV64 Description: For the SMALDA instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and then adds the result to the result of multiplying the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2 with unlimited precision. For the SMALXDA instruction, it multiplies the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and then adds the result to the result of multiplying the bottom 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2 with unlimited precision. The results are added to the 64-bit value of Rd. The 64-bit addition result is written back to Rd. The 16-bit values of Rs1 and Rs2, and the 64-bit value of Rd are treated as signed integers.

Operations:

```
RV32:
// SMALDA
Mres0[31:0] = (Rs1.H[0] * Rs2.H[0]);
Mres1[31:0] = (Rs1.H[1] * Rs2.H[1]);
// SMALXDA
Mres0[31:0] = (Rs1.H[0] * Rs2.H[1]);
Mres1[31:0] = (Rs1.H[1] * Rs2.H[0]);
Idx0 = CONCAT(Rd(4,1),1'b0); Idx1 = CONCAT(Rd(4,1),1'b1);
R[Idx1].R[Idx0] = R[Idx1].R[Idx0] + SE64(Mres0[31:0]) + SE64(Mres1[31:0]);
RV64:
// SMALDA
Mres0[0][31:0] = (Rs1.W[0].H[0] * Rs2.W[0].H[0]);
Mres1[0][31:0] = (Rs1.W[0].H[1] * Rs2.W[0].H[1]);
Mres0[1][31:0] = (Rs1.W[1].H[0] * Rs2.W[1].H[0]);
Mres1[1][31:0] = (Rs1.W[1].H[1] * Rs2.W[1].H[1]);
// SMALXDA
Mres0[0][31:0] = (Rs1.W[0].H[0] * Rs2.W[0].H[1]);
Mres1[0][31:0] = (Rs1.W[0].H[1] * Rs2.W[0].H[0]);
Mres0[1][31:0] = (Rs1.W[1].H[0] * Rs2.W[1].H[1]);
Mres1[1][31:0] = (Rs1.W[1].H[1] * Rs2.W[1].H[0]);
Rd = Rd + SE64(Mres0[0][31:0]) + SE64(Mres1[0][31:0]) + SE64(Mres0[1][31:0]) +
SE64 (Mres1[1][31:0]);
```

Return value stored in long long type

Parameters

- [in] t: long long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long long __RV_SMALDS(long long t, unsigned long a, unsigned long SMALDS (Signed Multiply Two Halfs & Subtract & Add 64-bit)

Type: DSP (64-bit Profile)

Syntax:

```
SMALDS Rd, Rs1, Rs2
SMALDRS Rd, Rs1, Rs2
SMALXDS Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from the 32-bit elements of two registers; and then perform a subtraction operation between the two 32-bit results. Then add the subtraction result to the 64-bit value of an even/odd pair of registers (RV32) or a register (RV64). The addition result is written back to the register-pair.

- SMALDS: rt pair + (top*top bottom*bottom) (all 32-bit elements)
- SMALDRS: rt pair + (bottom*bottom top*top) (all 32-bit elements)
- SMALXDS: rt pair + (top*bottom bottom*top) (all 32-bit elements)

RV32 Description: For the SMALDS instruction, it multiplies the bottom 16-bit content of Rs1 with the bottom 16-bit content of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of Rs1 with the top 16-bit content of Rs2. For the SMALDRS instruction, it multiplies the top 16-bit content of Rs1 with the top 16-bit content of Rs2 and then subtracts the result from the result of multiplying the bottom 16-bit content of Rs1 with the bottom 16-bit content of Rs2. For the SMALXDS instruction, it multiplies the bottom 16-bit content of Rs1 with the top 16-bit content of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of Rs1 with the bottom 16-bit content of Rs2. The subtraction result is then added to the 64-bit value of an even/odd pair of registers specified by Rd(4,1). The 64-bit addition result is written back to the register-pair. The 16-bit values of Rs1 and Rs2, and the 64-bit value of the register-pair are treated as signed integers. Rd(4,1), i.e., d, determines the even/odd pair group of the two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the operand and the even 2d register of the pair contains the low 32-bit of the operand.

RV64 Description: For the SMALDS instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. For the SMALDRS instruction, it multiplies the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the result of multiplying the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2. For the SMALXDS instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of Rs1 with the bottom

Operations:

```
* RV32:
Mres[31:0] = (Rs1.H[1] * Rs2.H[1]) - (Rs1.H[0] * Rs2.H[0]); // SMALDS
Mres[31:0] = (Rs1.H[0] * Rs2.H[0]) - (Rs1.H[1] * Rs2.H[1]); // SMALDRS
Mres[31:0] = (Rs1.H[1] * Rs2.H[0]) - (Rs1.H[0] * Rs2.H[1]); // SMALXDS
Idx0 = CONCAT(Rd(4,1),1'b0); Idx1 = CONCAT(Rd(4,1),1'b1);
R[Idx1].R[Idx0] = R[Idx1].R[Idx0] + SE64(Mres[31:0]);
* RV64:
// SMALDS
Mres[0][31:0] = (Rs1.W[0].H[1] * Rs2.W[0].H[1]) - (Rs1.W[0].H[0] * Rs2.W[0].
\rightarrowH[0]);
// SMALDRS
Mres[0][31:0] = (Rs1.W[0].H[0] * Rs2.W[0].H[0]) - (Rs1.W[0].H[1] * Rs2.W[0].
\hookrightarrowH[1]);
Mres[1][31:0] = (Rs1.W[1].H[0] * Rs2.W[0].H[0]) - (Rs1.W[1].H[1] * Rs2.W[1].
\hookrightarrowH[1]);
// SMALXDS
```

(continues on next page)

(continued from previous page)

```
Mres[0][31:0] = (Rs1.W[0].H[1] * Rs2.W[0].H[0]) - (Rs1.W[0].H[0] * Rs2.W[0].

→H[1]);

Mres[1][31:0] = (Rs1.W[1].H[1] * Rs2.W[0].H[0]) - (Rs1.W[1].H[0] * Rs2.W[1].

→H[1]);

Rd = Rd + SE64(Mres[0][31:0]) + SE64(Mres[1][31:0]);
```

Return value stored in long long type

Parameters

- [in] t: long long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE long long __RV_SMALDRS (long long t, unsigned long a, unsigned lon SMALDRS (Signed Multiply Two Halfs & Reverse Subtract & Add 64-bit)

Type: DSP (64-bit Profile)

Syntax:

```
SMALDS Rd, Rs1, Rs2
SMALDRS Rd, Rs1, Rs2
SMALXDS Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from the 32-bit elements of two registers; and then perform a subtraction operation between the two 32-bit results. Then add the subtraction result to the 64-bit value of an even/odd pair of registers (RV32) or a register (RV64). The addition result is written back to the register-pair.

- SMALDS: rt pair + (top*top bottom*bottom) (all 32-bit elements)
- SMALDRS: rt pair + (bottom*bottom top*top) (all 32-bit elements)
- SMALXDS: rt pair + (top*bottom bottom*top) (all 32-bit elements)

RV32 Description: For the SMALDS instruction, it multiplies the bottom 16-bit content of Rs1 with the bottom 16-bit content of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of Rs1 with the top 16-bit content of Rs2. For the SMALDRS instruction, it multiplies the top 16-bit content of Rs1 with the top 16-bit content of Rs2 and then subtracts the result from the result of multiplying the bottom 16-bit content of Rs1 with the bottom 16-bit content of Rs2. For the SMALXDS instruction, it multiplies the bottom 16-bit content of Rs1 with the top 16-bit content of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of Rs1 with the bottom 16-bit content of Rs2. The subtraction result is then added to the 64-bit value of an even/odd pair of registers specified by Rd(4,1). The 64-bit addition result is written back to the register-pair. The 16-bit values of Rs1 and Rs2, and the 64-bit value of the register-pair are treated as signed integers. Rd(4,1), i.e., d, determines the even/odd pair group of the two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the operand and the even 2d register of the pair contains the low 32-bit of the operand.

RV64 Description: For the SMALDS instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. For the SMALDRS instruction, it multiplies the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the result of multiplying the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2. For the SMALXDS instruction, it multiplies the bottom

16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2. The subtraction results are then added to the 64-bit value of Rd. The 64-bit addition result is written back to Rd. The 16-bit values of Rs1 and Rs2, and the 64-bit value of Rd are treated as signed integers.

Operations:

```
* RV32:
Mres[31:0] = (Rs1.H[1] * Rs2.H[1]) - (Rs1.H[0] * Rs2.H[0]); // SMALDS
Mres[31:0] = (Rs1.H[0] * Rs2.H[0]) - (Rs1.H[1] * Rs2.H[1]); // SMALDRS
Mres[31:0] = (Rs1.H[1] * Rs2.H[0]) - (Rs1.H[0] * Rs2.H[1]); // SMALXDS
Idx0 = CONCAT(Rd(4,1),1'b0); Idx1 = CONCAT(Rd(4,1),1'b1);
R[Idx1].R[Idx0] = R[Idx1].R[Idx0] + SE64(Mres[31:0]);
* RV64:
// SMALDS
\rightarrowH[0]);
\hookrightarrowH[0]);
// SMALDRS
Mres[1][31:0] = (Rs1.W[1].H[0] * Rs2.W[0].H[0]) - (Rs1.W[1].H[1] * Rs2.W[1].
\hookrightarrowH[1]);
// SMALXDS
  Mres[0][31:0] = (Rs1.W[0].H[1] * Rs2.W[0].H[0]) - (Rs1.W[0].H[0] * Rs2.W[0].  
\hookrightarrowH[1]);
Rd = Rd + SE64 (Mres[0][31:0]) + SE64 (Mres[1][31:0]);
```

Return value stored in long long type

Parameters

- [in] t: long long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long long __RV_SMALXDS(long long t, unsigned long a, unsigned lon SMALXDS(Signed Crossed Multiply Two Halfs & Subtract & Add 64- bit)

Type: DSP (64-bit Profile)

Syntax:

```
SMALDS Rd, Rs1, Rs2
SMALDRS Rd, Rs1, Rs2
SMALXDS Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from the 32-bit elements of two registers; and then perform a subtraction operation between the two 32-bit results. Then add the subtraction result to the 64-bit value of an even/odd pair of registers (RV32) or a register (RV64). The addition result is written back to the register-pair.

- SMALDS: rt pair + (top*top bottom*bottom) (all 32-bit elements)
- SMALDRS: rt pair + (bottom*bottom top*top) (all 32-bit elements)

• SMALXDS: rt pair + (top*bottom - bottom*top) (all 32-bit elements)

RV32 Description: For the SMALDS instruction, it multiplies the bottom 16-bit content of Rs1 with the bottom 16-bit content of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of Rs1 with the top 16-bit content of Rs2. For the SMALDRS instruction, it multiplies the top 16-bit content of Rs1 with the top 16-bit content of Rs2 and then subtracts the result from the result of multiplying the bottom 16-bit content of Rs1 with the bottom 16-bit content of Rs2. For the SMALXDS instruction, it multiplies the bottom 16-bit content of Rs1 with the top 16-bit content of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of Rs1 with the bottom 16-bit content of Rs2. The subtraction result is then added to the 64-bit value of an even/odd pair of registers specified by Rd(4,1). The 64-bit addition result is written back to the register-pair. The 16-bit values of Rs1 and Rs2, and the 64-bit value of the register-pair are treated as signed integers. Rd(4,1), i.e., d, determines the even/odd pair group of the two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the operand and the even 2d register of the pair contains the low 32-bit of the operand.

RV64 Description: For the SMALDS instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. For the SMALDRS instruction, it multiplies the top 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the result of multiplying the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2. For the SMALXDS instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2 and then subtracts the result from the result of multiplying the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of Rs1 with the bottom 16-bit content of Rs1 with the bottom 16-bit content of R

Operations:

```
* RV32:
Mres[31:0] = (Rs1.H[1] * Rs2.H[1]) - (Rs1.H[0] * Rs2.H[0]); // SMALDS
Mres[31:0] = (Rs1.H[0] * Rs2.H[0]) - (Rs1.H[1] * Rs2.H[1]); // SMALDRS
Mres[31:0] = (Rs1.H[1] * Rs2.H[0]) - (Rs1.H[0] * Rs2.H[1]); // SMALXDS
Idx0 = CONCAT(Rd(4,1),1'b0); Idx1 = CONCAT(Rd(4,1),1'b1);
R[Idx1].R[Idx0] = R[Idx1].R[Idx0] + SE64(Mres[31:0]);
* RV64:
// SMALDS
Mres[0][31:0] = (Rs1.W[0].H[1] * Rs2.W[0].H[1]) - (Rs1.W[0].H[0] * Rs2.W[0].
\hookrightarrow H[0]);
Mres[1][31:0] = (Rs1.W[1].H[1] * Rs2.W[0].H[1]) - (Rs1.W[1].H[0] * Rs2.W[1].
\hookrightarrow H[0]);
// SMALDRS
Mres[0][31:0] = (Rs1.W[0].H[0] * Rs2.W[0].H[0]) - (Rs1.W[0].H[1] * Rs2.W[0].
\hookrightarrowH[1]);
Mres[1][31:0] = (Rs1.W[1].H[0] * Rs2.W[0].H[0]) - (Rs1.W[1].H[1] * Rs2.W[1].
\hookrightarrowH[1]);
// SMALXDS
 Mres[0][31:0] = (Rs1.W[0].H[1] * Rs2.W[0].H[0]) - (Rs1.W[0].H[0] * Rs2.W[0]. 
Mres[1][31:0] = (Rs1.W[1].H[1] * Rs2.W[0].H[0]) - (Rs1.W[1].H[0] * Rs2.W[1].
\hookrightarrowH[1]);
Rd = Rd + SE64 (Mres[0][31:0]) + SE64 (Mres[1][31:0]);
```

Return value stored in long long type

Parameters

- [in] t: long long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE long long __RV_SMSLDA(long long t, unsigned long a, unsigned long SMSLDA (Signed Multiply Two Halfs & Add & Subtract 64-bit)

Type: DSP (64-bit Profile)

Syntax:

```
SMSLDA Rd, Rs1, Rs2
SMSLXDA Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from the 32-bit elements of two registers; and then subtracts the two 32-bit results from the 64-bit value of an even/odd pair of registers (RV32) or a register (RV64). The subtraction result is written back to the register-pair.

- SMSLDA: rd pair top*top bottom*bottom (all 32-bit elements)
- SMSLXDA: rd pair top*bottom bottom*top (all 32-bit elements)

RV32 Description: For the SMSLDA instruction, it multiplies the bottom 16-bit content of Rs1 with the bottom 16-bit content Rs2 and multiplies the top 16-bit content of Rs1 with the top 16-bit content of Rs2. For the SMSLXDA instruction, it multiplies the top 16-bit content of Rs1 with the bottom 16-bit content of Rs2 and multiplies the bottom 16-bit content of Rs1 with the top 16-bit content of Rs2. The two multiplication results are subtracted from the 64-bit value of an even/odd pair of registers specified by Rd(4,1). The 64-bit subtraction result is written back to the register-pair. The 16-bit values of Rs1 and Rs2, and the 64-bit value of the register-pair are treated as signed integers. Rd(4,1), i.e., d, determines the even/odd pair group of the two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the result and the even 2d register of the pair contains the low 32-bit of the result.

RV64 Description: For the SMSLDA instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and multiplies the top 16-bit content of the 32-bit elements of Rs2. For the SMSLXDA instruction, it multiplies the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. The four multiplication results are subtracted from the 64-bit value of Rd. The 64-bit subtraction result is written back to Rd. The 16-bit values of Rs1 and Rs2, and the 64-bit value of Rd are treated as signed integers.

Operations:

```
* RV32:

// SMSLDA

Mres0[31:0] = (Rs1.H[0] * Rs2.H[0]);

Mres1[31:0] = (Rs1.H[1] * Rs2.H[1]);

// SMSLXDA

Mres0[31:0] = (Rs1.H[0] * Rs2.H[0]);

Idx0 = CONCAT(Rd(4,1),1'b0); Idx1 = CONCAT(Rd(4,1),1'b1);

R[Idx1].R[Idx0] = R[Idx1].R[Idx0] - SE64(Mres0[31:0]) - SE64(Mres1[31:0]);

* RV64:

// SMSLDA

Mres0[0][31:0] = (Rs1.W[0].H[0] * Rs2.W[0].H[0]);

Mres1[0][31:0] = (Rs1.W[0].H[1] * Rs2.W[0].H[1]);

Mres0[1][31:0] = (Rs1.W[1].H[0] * Rs2.W[1].H[0]);
```

(continues on next page)

(continued from previous page)

```
Mres1[1][31:0] = (Rs1.W[1].H[1] * Rs2.W[1].H[1]);
// SMSLXDA
Mres0[0][31:0] = (Rs1.W[0].H[0] * Rs2.W[0].H[1]);
Mres1[0][31:0] = (Rs1.W[0].H[1] * Rs2.W[0].H[0]);
Mres0[1][31:0] = (Rs1.W[1].H[0] * Rs2.W[1].H[1]);
Mres1[1][31:0] = (Rs1.W[1].H[1] * Rs2.W[1].H[0]);
Rd = Rd - SE64(Mres0[0][31:0]) - SE64(Mres1[0][31:0]) - SE64(Mres0[1][31:0]) - SE64(Mres1[1][31:0]);
```

Return value stored in long long type

Parameters

- [in] t: long long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE long long __RV_SMSLXDA(long long t, unsigned long a, unsigned lon SMSLXDA (Signed Crossed Multiply Two Halfs & Add & Subtract 64- bit)

Type: DSP (64-bit Profile)

Syntax:

```
SMSLDA Rd, Rs1, Rs2
SMSLXDA Rd, Rs1, Rs2
```

Purpose: Do two signed 16-bit multiplications from the 32-bit elements of two registers; and then subtracts the two 32-bit results from the 64-bit value of an even/odd pair of registers (RV32) or a register (RV64). The subtraction result is written back to the register-pair.

- SMSLDA: rd pair top*top bottom*bottom (all 32-bit elements)
- SMSLXDA: rd pair top*bottom bottom*top (all 32-bit elements)

RV32 Description: For the SMSLDA instruction, it multiplies the bottom 16-bit content of Rs1 with the bottom 16-bit content Rs2 and multiplies the top 16-bit content of Rs1 with the top 16-bit content of Rs2. For the SMSLXDA instruction, it multiplies the top 16-bit content of Rs1 with the bottom 16-bit content of Rs2 and multiplies the bottom 16-bit content of Rs1 with the top 16-bit content of Rs2. The two multiplication results are subtracted from the 64-bit value of an even/odd pair of registers specified by Rd(4,1). The 64-bit subtraction result is written back to the register-pair. The 16-bit values of Rs1 and Rs2, and the 64-bit value of the register-pair are treated as signed integers. Rd(4,1), i.e., d, determines the even/odd pair group of the two registers. Specifically, the register pair includes register 2d and 2d+1. The odd 2d+1 register of the pair contains the high 32-bit of the result and the even 2d register of the pair contains the low 32-bit of the result.

RV64 Description: For the SMSLDA instruction, it multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and multiplies the top 16-bit content of the 32-bit elements of Rs2. For the SMSLXDA instruction, it multiplies the top 16-bit content of the 32-bit elements of Rs1 with the bottom 16-bit content of the 32-bit elements of Rs2 and multiplies the bottom 16-bit content of the 32-bit elements of Rs1 with the top 16-bit content of the 32-bit elements of Rs2. The four multiplication results are subtracted from the 64-bit value of Rd. The 64-bit subtraction result is written back to Rd. The 16-bit values of Rs1 and Rs2, and the 64-bit value of Rd are treated as signed integers.

Operations:

```
* RV32:
// SMSLDA
Mres0[31:0] = (Rs1.H[0] * Rs2.H[0]);
Mres1[31:0] = (Rs1.H[1] * Rs2.H[1]);
// SMSLXDA
Mres0[31:0] = (Rs1.H[0] * Rs2.H[1]);
Mres1[31:0] = (Rs1.H[1] * Rs2.H[0]);
Idx0 = CONCAT(Rd(4,1),1'b0); Idx1 = CONCAT(Rd(4,1),1'b1);
R[Idx1].R[Idx0] = R[Idx1].R[Idx0] - SE64(Mres0[31:0]) - SE64(Mres1[31:0]);
* RV64:
// SMSLDA
Mres0[0][31:0] = (Rs1.W[0].H[0] * Rs2.W[0].H[0]);
Mres1[0][31:0] = (Rs1.W[0].H[1] * Rs2.W[0].H[1]);
Mres0[1][31:0] = (Rs1.W[1].H[0] * Rs2.W[1].H[0]);
Mres1[1][31:0] = (Rs1.W[1].H[1] * Rs2.W[1].H[1]);
// SMSLXDA
Mres0[0][31:0] = (Rs1.W[0].H[0] * Rs2.W[0].H[1]);
Mres1[0][31:0] = (Rs1.W[0].H[1] * Rs2.W[0].H[0]);
Mres0[1][31:0] = (Rs1.W[1].H[0] * Rs2.W[1].H[1]);
Mres1[1][31:0] = (Rs1.W[1].H[1] * Rs2.W[1].H[0]);
Rd = Rd - SE64(Mres0[0][31:0]) - SE64(Mres1[0][31:0]) - SE64(Mres0[1][31:0]) -
SE64 (Mres1[1][31:0]);
```

Return value stored in long long type

Parameters

- [in] t: long long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

$group \ {\tt NMSIS_Core_DSP_Intrinsic_64B_PROFILE}$

64-bit Profile Instructions

RV64 Only Instructions

(RV64 Only) SIMD 32-bit Add/Subtract Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_ADD32(unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_CRAS32(unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_CRSA32(unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_KADD32(unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_KCRAS32(unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_KCRSA32(unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_KSTAS32(unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_KSTSA32(unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_KSUB32(unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_RADD32(unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_RCRAS32(unsigned long a, unsigned long b)
```

```
_STATIC_FORCEINLINE unsigned long __RV_RCRSA32(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE unsigned long ___RV_RSTAS32(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE unsigned long __RV_RSTSA32(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE unsigned long __RV_RSUB32(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE unsigned long __RV_STAS32(unsigned long a, unsigned long b)
STATIC FORCEINLINE unsigned long RV STSA32 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_SUB32(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE unsigned long __RV_UKADD32(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE unsigned long __RV_UKCRAS32(unsigned long a, unsigned long b)
 STATIC_FORCEINLINE unsigned long __RV_UKCRSA32(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_UKSTAS32(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_UKSTSA32(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE unsigned long __RV_UKSUB32(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_URADD32(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE unsigned long __RV_URCRAS32(unsigned long a, unsigned long b)
 STATIC FORCEINLINE unsigned long RV URCRSA32 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_URSTAS32(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_URSTSA32(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE unsigned long ___RV_URSUB32(unsigned long a, unsigned long b)
group NMSIS Core DSP Intrinsic RV64 SIMD 32B ADDSUB
    (RV64 Only) SIMD 32-bit Add/Subtract Instructions
```

The following tables list instructions that are only present in RV64. There are 30 SIMD 32-bit addition or subtraction instructions.there are 4 SIMD16-bit Packing Instructions.

Functions

Type: SIMD (RV64 Only)

Syntax:

```
ADD32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit integer element additions simultaneously.

Description: This instruction adds the 32-bit integer elements in Rs1 with the 32-bit integer elements in Rs2, and then writes the 32-bit element results to Rd.

Note: This instruction can be used for either signed or unsigned addition.

Operations:

```
Rd.W[x] = Rs1.W[x] + Rs2.W[x];
for RV64: x=1...0
```

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_CRAS32(unsigned long a, unsigned long b)
CRAS32(SIMD 32-bit Cross Addition & Subtraction)

Type: SIMD (RV64 Only)

Syntax:

```
CRAS32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit integer element addition and 32-bit integer element subtraction in a 64-bit chunk simultaneously. Operands are from crossed 32-bit elements.

Description: This instruction adds the 32-bit integer element in [63:32] of Rs1 with the 32-bit integer element in [31:0] of Rs2, and writes the result to [63:32] of Rd; at the same time, it subtracts the 32-bit integer element in [63:32] of Rs2 from the 32-bit integer element in [31:0] of Rs1, and writes the result to [31:0] of Rd.

Note: This instruction can be used for either signed or unsigned operations.

Operations:

```
Rd.W[1] = Rs1.W[1] + Rs2.W[0];
Rd.W[0] = Rs1.W[0] - Rs2.W[1];
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_CRSA32 (unsigned long a, unsigned long b) CRSA32 (SIMD 32-bit Cross Subtraction & Addition)

Type: SIMD (RV64 Only)

Syntax:

```
CRSA32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit integer element subtraction and 32-bit integer element addition in a 64-bit chunk simultaneously. Operands are from crossed 32-bit elements. *Description: * This instruction subtracts the 32-bit integer element in [31:0] of Rs2 from the 32-bit integer element in [63:32] of Rs1, and writes the result to [63:32] of Rd; at the same time, it adds the 32-bit integer element in [31:0] of Rs1 with the 32-bit integer element in [63:32] of Rs2, and writes the result to [31:0] of Rd

Note: This instruction can be used for either signed or unsigned operations.

Operations:

```
Rd.W[1] = Rs1.W[1] - Rs2.W[0];
Rd.W[0] = Rs1.W[0] + Rs2.W[1];
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KADD32(unsigned long a, unsigned long b)
KADD32(SIMD 32-bit Signed Saturating Addition)

Type: SIMD (RV64 Only)

Syntax:

```
KADD32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit signed integer element saturating additions simultaneously.

Description: This instruction adds the 32-bit signed integer elements in Rs1 with the 32-bit signed integer elements in Rs2. If any of the results are beyond the Q31 number range ($-2^31 \le 2^31-1$), they are saturated to the range and the OV bit is set to 1. The saturated results are written to Rd.

Operations:

```
res[x] = Rs1.W[x] + Rs2.W[x];
if (res[x] > (2^31)-1) {
  res[x] = (2^31)-1;
  OV = 1;
} else if (res[x] < -2^31) {
  res[x] = -2^31;
  OV = 1;
}
Rd.W[x] = res[x];
for RV64: x=1...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KCRAS32 (unsigned long a, unsigned long b) KCRAS32 (SIMD 32-bit Signed Saturating Cross Addition & Subtraction)

Type: SIM (RV64 Only)

Syntax:

```
KCRAS32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit signed integer element saturating addition and 32-bit signed integer element saturating subtraction in a 64-bit chunk simultaneously. Operands are from crossed 32-bit elements.

Description: This instruction adds the 32-bit integer element in [63:32] of Rs1 with the 32-bit integer element in [31:0] of Rs2; at the same time, it subtracts the 32-bit integer element in [63:32] of Rs2 from the 32-bit integer element in [31:0] of Rs1. If any of the results are beyond the Q31 number range (- 2^3 1 <= Q31 <= 2^3 1-1), they are saturated to the range and the OV bit is set to 1. The saturated results are written to [63:32] of Rd for addition and [31:0] of Rd for subtraction.

Operations:

```
res[1] = Rs1.W[1] + Rs2.W[0];
res[0] = Rs1.W[0] - Rs2.W[1];
if (res[x] > (2^31)-1) {
    res[x] = (2^31)-1;
    OV = 1;
} else if (res < -2^31) {
    res[x] = -2^31;
    OV = 1;
}
Rd.W[1] = res[1];
Rd.W[0] = res[0];
for RV64, x=1...0</pre>
```

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KCRSA32 (unsigned long a, unsigned long b) KCRSA32 (SIMD 32-bit Signed Saturating Cross Subtraction & Addition)

Type: SIMD (RV64 Only)

Syntax:

```
KCRSA32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit signed integer element saturating subtraction and 32-bit signed integer element saturating addition in a 64-bit chunk simultaneously. Operands are from crossed 32-bit elements. *Description: * This instruction subtracts the 32-bit integer element in [31:0] of Rs2 from the 32-bit integer element in [63:32] of Rs1; at the same time, it adds the 32-bit integer element in [31:0] of Rs1 with the 32-bit integer element in [63:32] of Rs2. If any of the results are beyond the Q31 number range (-2^31 <= Q31 <= 2^31-1), they are saturated to the range and the OV bit is set to 1. The saturated results are written to [63:32] of Rd for subtraction and [31:0] of Rd for addition.

Operations:

```
res[1] = Rs1.W[1] - Rs2.W[0];
res[0] = Rs1.W[0] + Rs2.W[1];
if (res[x] > (2^31)-1) {
   res[x] = (2^31)-1;
   OV = 1;
} else if (res < -2^31) {
   res[x] = -2^31;
   OV = 1;
}
Rd.W[1] = res[1];
Rd.W[0] = res[0];
for RV64, x=1...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KSTAS32 (unsigned long a, unsigned long b)
KSTAS32 (SIMD 32-bit Signed Saturating Straight Addition & Subtraction)

Type: SIMD (RV64 Only)

Syntax:

```
KSTAS32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit signed integer element saturating addition and 32-bit signed integer element saturating subtraction in a 64-bit chunk simultaneously. Operands are from corresponding 32-bit elements.

Description: This instruction adds the 32-bit integer element in [63:32] of Rs1 with the 32-bit integer element in [63:32] of Rs2; at the same time, it subtracts the 32-bit integer element in [31:0] of Rs2 from the 32-bit integer element in [31:0] of Rs1. If any of the results are beyond the Q31 number range (- 2^3 1 <= Q31 <= 2^3 1-1), they are saturated to the range and the OV bit is set to 1. The saturated results are written to [63:32] of Rd for addition and [31:0] of Rd for subtraction.

Operations:

```
res[1] = Rs1.W[1] + Rs2.W[1];
res[0] = Rs1.W[0] - Rs2.W[0];
if (res[x] > (2^31)-1) {
    res[x] = (2^31)-1;
    oV = 1;
} else if (res < -2^31) {
    res[x] = -2^31;
    oV = 1;
}
Rd.W[1] = res[1];
Rd.W[0] = res[0];
for RV64, x=1...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KSTSA32 (unsigned long a, unsigned long b)
KSTSA32 (SIMD 32-bit Signed Saturating Straight Subtraction & Addition)

Type: SIM (RV64 Only)

Syntax:

```
KSTSA32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit signed integer element saturating subtraction and 32-bit signed integer element saturating addition in a 64-bit chunk simultaneously. Operands are from corresponding 32-bit elements. *Description: * This instruction subtracts the 32-bit integer element in [63:32] of Rs2 from the 32-bit integer element in [63:32] of Rs1; at the same time, it adds the 32-bit integer element in [31:0] of Rs1 with the 32-bit integer element in [31:0] of Rs2. If any of the results are beyond the Q31 number range (- 231 <= Q31 <= 2^31-1), they are saturated to the range and the OV bit is set to 1. The saturated results are written to [63:32] of Rd for subtraction and [31:0] of Rd for addition.

Operations:

```
res[1] = Rs1.W[1] - Rs2.W[1];
res[0] = Rs1.W[0] + Rs2.W[0];
if (res[x] > (2^31)-1) {
   res[x] = (2^31)-1;
   OV = 1;
} else if (res < -2^31) {
   res[x] = -2^31;
   OV = 1;
}
Rd.W[1] = res[1];
Rd.W[0] = res[0];
for RV64, x=1...0</pre>
```

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KSUB32 (unsigned long a, unsigned long b)
KSUB32 (SIMD 32-bit Signed Saturating Subtraction)

Type: SIMD (RV64 Only)

Syntax:

```
KSUB32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit signed integer elements saturating subtractions simultaneously.

Description: This instruction subtracts the 32-bit signed integer elements in Rs2 from the 32-bit signed integer elements in Rs1. If any of the results are beyond the Q31 number range ($-2^31 \le 2^31-1$), they are saturated to the range and the OV bit is set to 1. The saturated results are written to Rd.

Operations:

```
res[x] = Rs1.W[x] - Rs2.W[x];
if (res[x] > (2^31)-1) {
   res[x] = (2^31)-1;
   OV = 1;
} else if (res[x] < -2^31) {
   res[x] = -2^31;
   OV = 1;
}
Rd.W[x] = res[x];
for RV64: x=1...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_RADD32 (unsigned long a, unsigned long b)
RADD32 (SIMD 32-bit Signed Halving Addition)

Type: SIMD (RV64 Only)

Syntax:

```
RADD32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit signed integer element additions simultaneously. The results are halved to avoid overflow or saturation.

Description: This instruction adds the 32-bit signed integer elements in Rs1 with the 32-bit signed integer elements in Rs2. The results are first arithmetically right-shifted by 1 bit and then written to Rd.

Examples:

```
* Rs1 = 0x7FFFFFFF, Rs2 = 0x7FFFFFFF Rd = 0x7FFFFFFF

* Rs1 = 0x80000000, Rs2 = 0x80000000 Rd = 0x80000000

* Rs1 = 0x40000000, Rs2 = 0x80000000 Rd = 0xE0000000
```

Operations:

```
Rd.W[x] = (Rs1.W[x] + Rs2.W[x]) s>> 1;
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_RCRAS32 (unsigned long a, unsigned long b)
RCRAS32 (SIMD 32-bit Signed Halving Cross Addition & Subtraction)

Type: SIMD (RV64 Only)

Syntax:

```
RCRAS32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit signed integer element addition and 32-bit signed integer element subtraction in a 64-bit chunk simultaneously. Operands are from crossed 32-bit elements. The results are halved to avoid overflow or saturation.

Description: This instruction adds the 32-bit signed integer element in [63:32] of Rs1 with the 32-bit signed integer element in [31:0] of Rs2, and subtracts the 32-bit signed integer element in [63:32] of Rs2 from the 32-bit signed integer element in [31:0] of Rs1. The element results are first arithmetically right-shifted by 1 bit and then written to [63:32] of Rd for addition and [31:0] of Rd for subtraction.

Examples:

```
Please see `RADD32` and `RSUB32` instructions.
```

Operations:

```
Rd.W[1] = (Rs1.W[1] + Rs2.W[0]) s>> 1;
Rd.W[0] = (Rs1.W[0] - Rs2.W[1]) s>> 1;
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

• [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_RCRSA32 (unsigned long a, unsigned long b)
RCRSA32 (SIMD 32-bit Signed Halving Cross Subtraction & Addition)

Type: SIMD (RV64 Only)

Syntax:

```
RCRSA32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit signed integer element subtraction and 32-bit signed integer element addition in a 64-bit chunk simultaneously. Operands are from crossed 32-bit elements. The results are halved to avoid overflow or saturation.

Description: This instruction subtracts the 32-bit signed integer element in [31:0] of Rs2 from the 32-bit signed integer element in [63:32] of Rs1, and adds the 32-bit signed element integer in [31:0] of Rs1 with the 32-bit signed integer element in [63:32] of Rs2. The two results are first arithmetically right-shifted by 1 bit and then written to [63:32] of Rd for subtraction and [31:0] of Rd for addition.

Examples:

```
Please see `RADD32` and `RSUB32` instructions.
```

Operations:

```
Rd.W[1] = (Rs1.W[1] - Rs2.W[0]) s>> 1;
Rd.W[0] = (Rs1.W[0] + Rs2.W[1]) s>> 1;
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_RSTAS32 (unsigned long a, unsigned long b)
RSTAS32 (SIMD 32-bit Signed Halving Straight Addition & Subtraction)

Type: SIMD (RV64 Only)

Syntax:

```
RSTAS32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit signed integer element addition and 32-bit signed integer element subtraction in a 64-bit chunk simultaneously. Operands are from corresponding 32-bit elements. The results are halved to avoid overflow or saturation.

Description: This instruction adds the 32-bit signed integer element in [63:32] of Rs1 with the 32-bit signed integer element in [63:32] of Rs2, and subtracts the 32-bit signed integer element in [31:0] of Rs2 from the 32-bit signed integer element in [31:0] of Rs1. The element results are first arithmetically right-shifted by 1 bit and then written to [63:32] of Rd for addition and [31:0] of Rd for subtraction.

Examples:

```
Please see `RADD32` and `RSUB32` instructions.
```

Operations:

```
Rd.W[1] = (Rs1.W[1] + Rs2.W[1]) s>> 1;
Rd.W[0] = (Rs1.W[0] - Rs2.W[0]) s>> 1;
```

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_RSTSA32 (unsigned long a, unsigned long b)
RSTSA32 (SIMD 32-bit Signed Halving Straight Subtraction & Addition)

Type: SIMD (RV64 Only)

Syntax:

```
RSTSA32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit signed integer element subtraction and 32-bit signed integer element addition in a 64-bit chunk simultaneously. Operands are from corresponding 32-bit elements. The results are halved to avoid overflow or saturation.

Description: This instruction subtracts the 32-bit signed integer element in [63:32] of Rs2 from the 32-bit signed integer element in [63:32] of Rs1, and adds the 32-bit signed element integer in [31:0] of Rs1 with the 32-bit signed integer element in [31:0] of Rs2. The two results are first arithmetically right-shifted by 1 bit and then written to [63:32] of Rd for subtraction and [31:0] of Rd for addition.

Examples:

```
Please see `RADD32` and `RSUB32` instructions.
```

Operations:

```
Rd.W[1] = (Rs1.W[1] - Rs2.W[1]) s>> 1;
Rd.W[0] = (Rs1.W[0] + Rs2.W[0]) s>> 1;
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE unsigned long __RV_RSUB32(unsigned long a, unsigned long b)
RSUB32(SIMD 32-bit Signed Halving Subtraction)

Type: SIMD (RV64 Only)

Syntax:

```
RSUB32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit signed integer element subtractions simultaneously. The results are halved to avoid overflow or saturation.

Description: This instruction subtracts the 32-bit signed integer elements in Rs2 from the 32-bit signed integer elements in Rs1. The results are first arithmetically right-shifted by 1 bit and then written to Rd.

Examples:

```
* Ra = 0x7FFFFFFF, Rb = 0x80000000 Rt = 0x7FFFFFFF

* Ra = 0x80000000, Rb = 0x7FFFFFFF Rt = 0x80000000

* Ra = 0x80000000, Rb = 0x400000000 Rt = 0xA00000000
```

Operations:

```
Rd.W[x] = (Rs1.W[x] - Rs2.W[x]) s>> 1;

for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_STAS32(unsigned long a, unsigned long b) STAS32(SIMD 32-bit Straight Addition & Subtraction)

Type: SIMD (RV64 Only)

Syntax:

```
STAS32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit integer element addition and 32-bit integer element subtraction in a 64-bit chunk simultaneously. Operands are from corresponding 32-bit elements.

Description: This instruction adds the 32-bit integer element in [63:32] of Rs1 with the 32-bit integer element in [63:32] of Rs2, and writes the result to [63:32] of Rd; at the same time, it subtracts the 32-bit integer element in [31:0] of Rs1, and writes the result to [31:0] of Rd.

Note: This instruction can be used for either signed or unsigned operations.

Operations:

```
Rd.W[1] = Rs1.W[1] + Rs2.W[1];
Rd.W[0] = Rs1.W[0] - Rs2.W[0];
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE unsigned long __RV_STSA32(unsigned long a, unsigned long b)
STSA32(SIMD 32-bit Straight Subtraction & Addition)

Type: SIMD (RV64 Only)

Syntax:

```
STSA32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit integer element subtraction and 32-bit integer element addition in a 64-bit chunk simultaneously. Operands are from corresponding 32-bit elements. *Description: * This instruction subtracts the 32-bit integer element in [63:32] of Rs1 and

writes the result to [63:32] of Rd; at the same time, it adds the 32-bit integer element in [31:0] of Rs1 with the 32-bit integer element in [31:0] of Rs2, and writes the result to [31:0] of Rd

Note: This instruction can be used for either signed or unsigned operations.

Operations:

```
Rd.W[1] = Rs1.W[1] - Rs2.W[1];
Rd.W[0] = Rs1.W[0] + Rs2.W[0];
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
__STATIC_FORCEINLINE unsigned long __RV_SUB32(unsigned long a, unsigned long b) SUB32(SIMD 32-bit Subtraction)
```

Type: DSP (RV64 Only)

Syntax:

```
SUB32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit integer element subtractions simultaneously.

Description: This instruction subtracts the 32-bit integer elements in Rs2 from the 32-bit integer elements in Rs1, and then writes the results to Rd.

Note: This instruction can be used for either signed or unsigned subtraction.

Operations:

```
Rd.W[x] = Rs1.W[x] - Rs2.W[x];
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UKADD32 (unsigned long a, unsigned long b) UKADD32 (SIMD 32-bit Unsigned Saturating Addition)

Type: SIMD (RV64 Only)

Syntax:

```
UKADD32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit unsigned integer element saturating additions simultaneously.

Description: This instruction adds the 32-bit unsigned integer elements in Rs1 with the 32-bit unsigned integer elements in Rs2. If any of the results are beyond the 32-bit unsigned number range (0 <= RES <= 2^32-1), they are saturated to the range and the OV bit is set to 1. The saturated results are written to Rd.

Operations:

```
res[x] = Rs1.W[x] + Rs2.W[x];
if (res[x] > (2^32)-1) {
  res[x] = (2^32)-1;
  OV = 1;
}
Rd.W[x] = res[x];
for RV64: x=1...0
```

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UKCRAS32 (unsigned long a, unsigned long b)
UKCRAS32 (SIMD 32-bit Unsigned Saturating Cross Addition & Subtraction)

Type: SIMD (RV64 Only)

Syntax:

```
UKCRAS32 Rd, Rs1, Rs2
```

Purpose: Do one 32-bit unsigned integer element saturating addition and one 32-bit unsigned integer element saturating subtraction in a 64-bit chunk simultaneously. Operands are from crossed 32-bit elements.

Description: This instruction adds the 32-bit unsigned integer element in [63:32] of Rs1 with the 32-bit unsigned integer element in [31:0] of Rs2; at the same time, it subtracts the 32-bit unsigned integer element in [63:32] of Rs2 from the 32-bit unsigned integer element in [31:0] Rs1. If any of the results are beyond the 32-bit unsigned number range ($0 \le RES \le 2^32-1$), they are saturated to the range and the OV bit is set to 1. The saturated results are written to [63:32] of Rd for addition and [31:0] of Rd for subtraction.

Operations:

```
res1 = Rs1.W[1] + Rs2.W[0];
res2 = Rs1.W[0] - Rs2.W[1];
if (res1 > (2^32)-1) {
  res1 = (2^32)-1;
  oV = 1;
}
if (res2 < 0) {
  res2 = 0;
  oV = 1;
}
Rd.W[1] = res1;
Rd.W[0] = res2;</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UKCRSA32 (unsigned long a, unsigned long b)
UKCRSA32 (SIMD 32-bit Unsigned Saturating Cross Subtraction & Addition)

Type: SIMD (RV64 Only)

Syntax:

```
UKCRSA32 Rd, Rs1, Rs2
```

Purpose: Do one 32-bit unsigned integer element saturating subtraction and one 32-bit unsigned integer element saturating addition in a 64-bit chunk simultaneously. Operands are from crossed 32-bit elements.

Description: This instruction subtracts the 32-bit unsigned integer element in [31:0] of Rs2 from the 32-bit unsigned integer element in [63:32] of Rs1; at the same time, it adds the 32-bit unsigned integer element in [63:32] of Rs2 with the 32-bit unsigned integer element in [31:0] Rs1. If any of the results are beyond the 32-bit unsigned number range ($0 \le RES \le 2^32-1$), they are saturated to the range and the OV bit is set to 1. The saturated results are written to [63:32] of Rd for subtraction and [31:0] of Rd for addition.

Operations:

```
res1 = Rs1.W[1] - Rs2.W[0];
res2 = Rs1.W[0] + Rs2.W[1];
if (res1 < 0) {
    res1 = 0;
    OV = 1;
} else if (res2 > (2^32)-1) {
    res2 = (2^32)-1;
    OV = 1;
}
Rd.W[1] = res1;
Rd.W[0] = res2;
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UKSTAS32 (unsigned long a, unsigned long b)
UKSTAS32 (SIMD 32-bit Unsigned Saturating Straight Addition & Subtraction)

Type: SIMD (RV64 Only)

Syntax:

```
UKSTAS32 Rd, Rs1, Rs2
```

Purpose: Do one 32-bit unsigned integer element saturating addition and one 32-bit unsigned integer element saturating subtraction in a 64-bit chunk simultaneously. Operands are from corresponding 32-bit elements.

Description: This instruction adds the 32-bit unsigned integer element in [63:32] of Rs1 with the 32-bit unsigned integer element in [63:32] of Rs2; at the same time, it subtracts the 32-bit unsigned integer element in [31:0] of Rs2 from the 32-bit unsigned integer element in [31:0] Rs1. If any of the results are beyond the 32-bit unsigned number range (0 <= RES <= 2^3 2-1), they are saturated to the range and the OV bit is set to 1. The saturated results are written to [63:32] of Rd for addition and [31:0] of Rd for subtraction.

Operations:

```
res1 = Rs1.W[1] + Rs2.W[1];
res2 = Rs1.W[0] - Rs2.W[0];
if (res1 > (2^32)-1) {
```

2.5. NMSIS Core API 295

(continues on next page)

(continued from previous page)

```
res1 = (2^32)-1;
OV = 1;
}
if (res2 < 0) {
  res2 = 0;
  OV = 1;
}
Rd.W[1] = res1;
Rd.W[0] = res2;</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UKSTSA32(unsigned long a, unsigned long b)
UKSTSA32 (SIMD 32-bit Unsigned Saturating Straight Subtraction & Addition)

Type: SIMD (RV64 Only)

Syntax:

```
UKSTSA32 Rd, Rs1, Rs2
```

Purpose: Do one 32-bit unsigned integer element saturating subtraction and one 32-bit unsigned integer element saturating addition in a 64-bit chunk simultaneously. Operands are from corresponding 32-bit elements.

Description: This instruction subtracts the 32-bit unsigned integer element in [63:32] of Rs2 from the 32-bit unsigned integer element in [63:32] of Rs1; at the same time, it adds the 32-bit unsigned integer element in [31:0] of Rs2 with the 32-bit unsigned integer element in [31:0] Rs1. If any of the results are beyond the 32-bit unsigned number range (0 <= RES <= 2^32-1), they are saturated to the range and the OV bit is set to 1. The saturated results are written to [63:32] of Rd for subtraction and [31:0] of Rd for addition.

Operations:

```
res1 = Rs1.W[1] - Rs2.W[1];
res2 = Rs1.W[0] + Rs2.W[0];
if (res1 < 0) {
  res1 = 0;
  OV = 1;
} else if (res2 > (2^32)-1) {
  res2 = (2^32)-1;
  OV = 1;
}
Rd.W[1] = res1;
Rd.W[0] = res2;
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UKSUB32(unsigned long a, unsigned long b)
UKSUB32(SIMD 32-bit Unsigned Saturating Subtraction)

Type: SIMD (RV64 Only)

Syntax:

```
UKSUB32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit unsigned integer elements saturating subtractions simultaneously.

Description: This instruction subtracts the 32-bit unsigned integer elements in Rs2 from the 32-bit unsigned integer elements in Rs1. If any of the results are beyond the 32-bit unsigned number range (0 \leq RES \leq 2^32-1), they are saturated to the range and the OV bit is set to 1. The saturated results are written to Rd.

Operations:

```
res[x] = Rs1.W[x] - Rs2.W[x];
if (res[x] < 0) {
  res[x] = 0;
  OV = 1;
}
Rd.W[x] = res[x];
for RV64: x=1...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_URADD32 (unsigned long a, unsigned long b)
URADD32 (SIMD 32-bit Unsigned Halving Addition)

Type: SIMD (RV64 Only)

Syntax:

```
URADD32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit unsigned integer element additions simultaneously. The results are halved to avoid overflow or saturation.

Description: This instruction adds the 32-bit unsigned integer elements in Rs1 with the 32-bit unsigned integer elements in Rs2. The results are first logically right-shifted by 1 bit and then written to Rd.

Examples:

```
* Ra = 0x7FFFFFFF, Rb = 0x7FFFFFFF Rt = 0x7FFFFFFF

* Ra = 0x80000000, Rb = 0x80000000 Rt = 0x80000000

* Ra = 0x40000000, Rb = 0x80000000 Rt = 0x600000000
```

Operations:

```
Rd.W[x] = (Rs1.W[x] + Rs2.W[x]) u>> 1;
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_URCRAS32 (unsigned long a, unsigned long b)
URCRAS32 (SIMD 32-bit Unsigned Halving Cross Addition & Subtraction)

Type: SIMD (RV64 Only)

Syntax:

```
URCRAS32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit unsigned integer element addition and 32-bit unsigned integer element subtraction in a 64-bit chunk simultaneously. Operands are from crossed 32-bit elements. The results are halved to avoid overflow or saturation.

Description: This instruction adds the 32-bit unsigned integer element in [63:32] of Rs1 with the 32-bit unsigned integer element in [31:0] of Rs2, and subtracts the 32-bit unsigned integer element in [63:32] of Rs2 from the 32-bit unsigned integer element in [31:0] of Rs1. The element results are first logically right-shifted by 1 bit and then written to [63:32] of Rd for addition and [31:0] of Rd for subtraction.

Examples:

```
Please see `URADD32` and `URSUB32` instructions.
```

Operations:

```
Rd.W[1] = (Rs1.W[1] + Rs2.W[0]) u>> 1;
Rd.W[0] = (Rs1.W[0] - Rs2.W[1]) u>> 1;
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_URCRSA32 (unsigned long a, unsigned long b)
URCRSA32 (SIMD 32-bit Unsigned Halving Cross Subtraction & Addition)

Type: SIMD (RV64 Only)

Syntax:

```
URCRSA32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit unsigned integer element subtraction and 32-bit unsigned integer element addition in a 64-bit chunk simultaneously. Operands are from crossed 32-bit elements. The results are halved to avoid overflow or saturation.

Description: This instruction subtracts the 32-bit unsigned integer element in [31:0] of Rs2 from the 32-bit unsigned integer element in [63:32] of Rs1, and adds the 32-bit unsigned element integer in [31:0] of Rs1 with the 32-bit unsigned integer element in [63:32] of Rs2. The two results are first logically right-shifted by 1 bit and then written to [63:32] of Rd for subtraction and [31:0] of Rd for addition.

Examples:

```
Please see `URADD32` and `URSUB32` instructions.
```

Operations:

```
Rd.W[1] = (Rs1.W[1] - Rs2.W[0]) u>> 1;
Rd.W[0] = (Rs1.W[0] + Rs2.W[1]) u>> 1;
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_URSTAS32 (unsigned long a, unsigned long b)
URSTAS32 (SIMD 32-bit Unsigned Halving Straight Addition & Subtraction)

Type: SIMD (RV64 Only)

Syntax:

```
URSTAS32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit unsigned integer element addition and 32-bit unsigned integer element subtraction in a 64-bit chunk simultaneously. Operands are from corresponding 32-bit elements. The results are halved to avoid overflow or saturation.

Description: This instruction adds the 32-bit unsigned integer element in [63:32] of Rs1 with the 32-bit unsigned integer element in [63:32] of Rs2, and subtracts the 32-bit unsigned integer element in [31:0] of Rs2 from the 32-bit unsigned integer element in [31:0] of Rs1. The element results are first logically right-shifted by 1 bit and then written to [63:32] of Rd for addition and [31:0] of Rd for subtraction.

Examples:

```
Please see `URADD32` and `URSUB32` instructions.
```

Operations:

```
Rd.W[1] = (Rs1.W[1] + Rs2.W[1]) u>> 1;
Rd.W[0] = (Rs1.W[0] - Rs2.W[0]) u>> 1;
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_URSTSA32 (unsigned long a, unsigned long b)
URSTSA32 (SIMD 32-bit Unsigned Halving Straight Subtraction & Addition)

Type: SIMD (RV64 Only)

Syntax:

```
URSTSA32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit unsigned integer element subtraction and 32-bit unsigned integer element addition in a 64-bit chunk simultaneously. Operands are from corresponding 32-bit elements. The results are halved to avoid overflow or saturation.

Description: This instruction subtracts the 32-bit unsigned integer element in [63:32] of Rs2 from the 32-bit unsigned integer element in [63:32] of Rs1, and adds the 32-bit unsigned element integer in [31:0] of Rs1 with the 32-bit unsigned integer element in [31:0] of Rs2. The two results are first logically right-shifted by 1 bit and then written to [63:32] of Rd for subtraction and [31:0] of Rd for addition.

Examples:

```
Please see `URADD32` and `URSUB32` instructions.
```

Operations:

```
Rd.W[1] = (Rs1.W[1] - Rs2.W[1]) u>> 1;
Rd.W[0] = (Rs1.W[0] + Rs2.W[0]) u>> 1;
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_URSUB32 (unsigned long a, unsigned long b)
URSUB32 (SIMD 32-bit Unsigned Halving Subtraction)

Type: SIMD (RV64 Only)

Syntax:

```
URSUB32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit unsigned integer element subtractions simultaneously. The results are halved to avoid overflow or saturation.

Description: This instruction subtracts the 32-bit unsigned integer elements in Rs2 from the 32-bit unsigned integer elements in Rs1. The results are first logically right-shifted by 1 bit and then written to Rd.

Examples:

```
* Ra = 0x7FFFFFFF, Rb = 0x80000000, Rt = 0xFFFFFFFF

* Ra = 0x80000000, Rb = 0x7FFFFFFF, Rt = 0x00000000

* Ra = 0x80000000, Rb = 0x40000000, Rt = 0x20000000
```

Operations:

```
Rd.W[x] = (Rs1.W[x] - Rs2.W[x]) u>> 1;

for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

(RV64 Only) SIMD 32-bit Shift Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_KSLL32(unsigned long a, unsigned int b)
__STATIC_FORCEINLINE unsigned long __RV_KSLLI32(unsigned long a, unsigned int b)
 _STATIC_FORCEINLINE unsigned long ___RV_KSLRA32(unsigned long a, int b)
 _STATIC_FORCEINLINE unsigned long __RV_KSLRA32_U(unsigned long a, int b)
 _STATIC_FORCEINLINE unsigned long __RV_SLL32(unsigned long a, unsigned int b)
__STATIC_FORCEINLINE unsigned long __RV_SLLI32(unsigned long a, unsigned int b)
__STATIC_FORCEINLINE unsigned long __RV_SRA32(unsigned long a, unsigned int b)
__STATIC_FORCEINLINE unsigned long ___RV_SRA32_U(unsigned long a, unsigned int b)
STATIC FORCEINLINE unsigned long RV SRAI32 (unsigned long a, unsigned int b)
__STATIC_FORCEINLINE unsigned long __RV_SRAI32_U(unsigned long a, unsigned int b)
__STATIC_FORCEINLINE unsigned long \_\_	ext{RV\_SRL32} (unsigned long a, unsigned int b)
 _STATIC_FORCEINLINE unsigned long __RV_SRL32_U(unsigned long a, unsigned int b)
 _STATIC_FORCEINLINE unsigned long \_\_	ext{RV\_SRLI32}(unsigned long a, unsigned int b)
__STATIC_FORCEINLINE unsigned long __RV_SRLI32_U(unsigned long a, unsigned int b)
group NMSIS_Core_DSP_Intrinsic_RV64_SIMD_32B_SHIFT
    (RV64 Only) SIMD 32-bit Shift Instructions
    there are 14 (RV64 Only) SIMD 32-bit Shift Instructions
```

Functions

```
__STATIC_FORCEINLINE unsigned long __RV_KSLL32 (unsigned long a, unsigned int b)

KSLL32 (SIMD 32-bit Saturating Shift Left Logical)

Type: SIMD (RV64 Only)
```

Type. Shill (River on

Syntax:

```
KSLL32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit elements logical left shift operations with saturation simultaneously. The shift amount is a variable from a GPR.

Description: The 32-bit data elements in Rs1 are left-shifted logically. The shifted out bits are filled with zero and the shift amount is specified by the low-order 5-bits of the value in the Rs2 register. Any shifted value greater than 2^31-1 is saturated to 2^31-1. Any shifted value smaller than -2^31 is saturated to -2^31. And the saturated results are written to Rd. If any saturation is performed, set OV bit to 1.

Operations:

```
sa = Rs2[4:0];
if (sa != 0) {
  res[(31+sa):0] = Rs1.W[x] << sa;
  if (res > (2^31)-1) {
    res = 0x7ffffffff; OV = 1;
  } else if (res < -2^31) {
    res = 0x80000000; OV = 1;
}</pre>
```

(continues on next page)

(continued from previous page)

```
}
Rd.W[x] = res[31:0];
} else {
  Rd = Rs1;
}
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KSLLI32 (unsigned long a, unsigned int b)

KSLLI32 (SIMD 32-bit Saturating Shift Left Logical Immediate)

Type: SIMD (RV64 Only)

Syntax:

```
KSLLI32 Rd, Rs1, imm5u
```

Purpose: Do 32-bit elements logical left shift operations with saturation simultaneously. The shift amount is an immediate value.

Description: The 32-bit data elements in Rs1 are left-shifted logically. The shifted out bits are filled with zero and the shift amount is specified by the imm5u constant. Any shifted value greater than 2^31-1 is saturated to 2^31-1. Any shifted value smaller than -2^31 is saturated to -2^31. And the saturated results are written to Rd. If any saturation is performed, set OV bit to 1.

Operations:

```
sa = imm5u[4:0];
if (sa != 0) {
  res[(31+sa):0] = Rs1.W[x] << sa;
  if (res > (2^31)-1) {
    res = 0x7ffffffff; OV = 1;
  } else if (res < -2^31) {
    res = 0x80000000; OV = 1;
  }
  Rd.W[x] = res[31:0];
} else {
  Rd = Rs1;
}
for RV64: x=1...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KSLRA32 (unsigned long a, int b)
KSLRA32 (SIMD 32-bit Shift Left Logical with Saturation or Shift Right Arithmetic)

Type: SIMD (RV64 Only)

Syntax:

```
KSLRA32 Rd, Rs1, Rs2
KSLRA32.u Rd, Rs1, Rs2
```

Purpose: Do 32-bit elements logical left (positive) or arithmetic right (negative) shift operation with Q31 saturation for the left shift. The . u form performs additional rounding up operations for the right shift.

Description: The 32-bit data elements of Rs1 are left-shifted logically or right-shifted arithmetically based on the value of Rs2[5:0]. Rs2[5:0] is in the signed range of [-25, 25-1]. A positive Rs2[5:0] means logical left shift and a negative Rs2[5:0] means arithmetic right shift. The shift amount is the absolute value of Rs2[5:0]. However, the behavior of Rs2[5:0]==-25 (0×20) is defined to be equivalent to the behavior of Rs2[5:0]==-(25-1) (0×21) . The left-shifted results are saturated to the 32-bit signed integer range of [-2^31, 2^31-1]. For the .u form of the instruction, the right-shifted results are added a 1 to the most significant discarded bit position for rounding effect. After the shift, saturation, or rounding, the final results are written to Rd. If any saturation happens, this instruction sets the OV flag. The value of Rs2[31:6] will not affect this instruction.

Operations:

```
if (Rs2[5:0] < 0) {
 sa = -Rs2[5:0];
 sa = (sa == 32)? 31 : sa;
 if (`.u` form) {
    res[31:-1] = SE33(Rs1.W[x][31:sa-1]) + 1;
   Rd.W[x] = res[31:0];
  } else {
   Rd.W[x] = SE32(Rs1.W[x][31:sa]);
} else {
 sa = Rs2[4:0];
 res[(31+sa):0] = Rs1.W[x] << (logic) sa;
 if (res > (2^31)-1) {
   res[31:0] = 0x7ffffffff; OV = 1;
  } else if (res < -2^31) {
   res[31:0] = 0x80000000; OV = 1;
 Rd.W[x] = res[31:0];
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: int type of value stored in b

_STATIC_FORCEINLINE unsigned long __RV_KSLRA32_U(unsigned long a, int b)
KSLRA32.u (SIMD 32-bit Shift Left Logical with Saturation or Rounding Shift Right Arithmetic)

Type: SIMD (RV64 Only)

Syntax:

```
KSLRA32 Rd, Rs1, Rs2
KSLRA32.u Rd, Rs1, Rs2
```

Purpose: Do 32-bit elements logical left (positive) or arithmetic right (negative) shift operation with Q31 saturation for the left shift. The . u form performs additional rounding up operations for the right shift.

Description: The 32-bit data elements of Rs1 are left-shifted logically or right-shifted arithmetically based on the value of Rs2[5:0]. Rs2[5:0] is in the signed range of [-25, 25-1]. A positive Rs2[5:0] means logical left shift and a negative Rs2[5:0] means arithmetic right shift. The shift amount is the absolute value of Rs2[5:0]. However, the behavior of Rs2[5:0]==-25 (0×20) is defined to be equivalent to the behavior of Rs2[5:0]==-(25-1) (0×21) . The left-shifted results are saturated to the 32-bit signed integer range of [-2^31, 2^31-1]. For the .u form of the instruction, the right-shifted results are added a 1 to the most significant discarded bit position for rounding effect. After the shift, saturation, or rounding, the final results are written to Rd. If any saturation happens, this instruction sets the OV flag. The value of Rs2[31:6] will not affect this instruction.

Operations:

```
if (Rs2[5:0] < 0)
 sa = -Rs2[5:0];
  sa = (sa == 32)? 31 : sa;
  if (`.u` form) {
   res[31:-1] = SE33(Rs1.W[x][31:sa-1]) + 1;
   Rd.W[x] = res[31:0];
  } else {
    Rd.W[x] = SE32(Rs1.W[x][31:sa]);
} else {
 sa = Rs2[4:0];
 res[(31+sa):0] = Rs1.W[x] << (logic) sa;
  if (res > (2^31)-1) {
    res[31:0] = 0x7ffffffff; OV = 1;
  \} else if (res < -2^31) {
    res[31:0] = 0x80000000; OV = 1;
 Rd.W[x] = res[31:0];
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SLL32 (unsigned long a, unsigned int b) SLL32 (SIMD 32-bit Shift Left Logical)

Type: SIMD (RV64 Only)

Syntax:

```
SLL32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit elements logical left shift operations simultaneously. The shift amount is a variable from a GPR.

Description: The 32-bit elements in Rs1 are left-shifted logically. And the results are written to Rd. The shifted out bits are filled with zero and the shift amount is specified by the low-order 5-bits of the value in the Rs2 register.

Operations:

```
sa = Rs2[4:0];
Rd.W[x] = Rs1.W[x] << sa;
for RV64: x=1...0</pre>
```

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SLLI32 (unsigned long a, unsigned int b) SLLI32 (SIMD 32-bit Shift Left Logical Immediate)

Type: SIMD (RV64 Only)

Syntax:

```
SLLI32 Rd, Rs1, imm5u[4:0]
```

Purpose: Do 32-bit element logical left shift operations simultaneously. The shift amount is an immediate value.

Description: The 32-bit elements in Rs1 are left-shifted logically. The shifted out bits are filled with zero and the shift amount is specified by the imm5u[4:0] constant. And the results are written to Rd.

Operations:

```
sa = imm5u[4:0];
Rd.W[x] = Rs1.W[x] << sa;
for RV64: x=1...0</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SRA32(unsigned long a, unsigned int b) SRA32(SIMD 32-bit Shift Right Arithmetic)

Type: SIMD (RV64 Only)

Syntax:

```
SRA32 Rd, Rs1, Rs2
SRA32.u Rd, Rs1, Rs2
```

Purpose: Do 32-bit element arithmetic right shift operations simultaneously. The shift amount is a variable from a GPR. The . u form performs additional rounding up operations on the shifted results.

Description: The 32-bit data elements in Rs1 are right-shifted arithmetically, that is, the shifted out bits are filled with the sign-bit of the data elements. The shift amount is specified by the low-order 5-bits of the value in the Rs2 register. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 32-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = Rs2[4:0];
if (sa > 0) {
  if (`.u` form) { // SRA32.u
    res[31:-1] = SE33(Rs1.W[x][31:sa-1]) + 1;
    Rd.W[x] = res[31:0];
  else { // SRA32
    Rd.W[x] = SE32(Rs1.W[x][31:sa])
  }
} else {
  Rd = Rs1;
}
for RV64: x=1...0
```

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SRA32_U(unsigned long a, unsigned int b) SRA32.u (SIMD 32-bit Rounding Shift Right Arithmetic)

Type: SIMD (RV64 Only)

Syntax:

```
SRA32 Rd, Rs1, Rs2
SRA32.u Rd, Rs1, Rs2
```

Purpose: Do 32-bit element arithmetic right shift operations simultaneously. The shift amount is a variable from a GPR. The . u form performs additional rounding up operations on the shifted results.

Description: The 32-bit data elements in Rs1 are right-shifted arithmetically, that is, the shifted out bits are filled with the sign-bit of the data elements. The shift amount is specified by the low-order 5-bits of the value in the Rs2 register. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 32-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = Rs2[4:0];
if (sa > 0) {
  if (`.u` form) { // SRA32.u
    res[31:-1] = SE33(Rs1.W[x][31:sa-1]) + 1;
    Rd.W[x] = res[31:0];
  else { // SRA32
    Rd.W[x] = SE32(Rs1.W[x][31:sa])
  }
} else {
  Rd = Rs1;
}
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

• [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SRAI32(unsigned long a, unsigned int b)
SRAI32(SIMD 32-bit Shift Right Arithmetic Immediate)

Type: DSP (RV64 Only)

Syntax:

```
SRAI32 Rd, Rs1, imm5u
SRAI32.u Rd, Rs1, imm5u
```

Purpose: Do 32-bit elements arithmetic right shift operations simultaneously. The shift amount is an immediate value. The .u form performs additional rounding up operations on the shifted results.

Description: The 32-bit data elements in Rs1 are right-shifted arithmetically, that is, the shifted out bits are filled with the sign-bit of the 32-bit data elements. The shift amount is specified by the imm5u constant. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 32-bit data to calculate the final results. And the results are written to Rd.

Operations:

```
sa = imm5u[4:0];
if (sa > 0) {
  if (`.u` form) { // SRAI32.u
    res[31:-1] = SE33(Rs1.W[x][31:sa-1]) + 1;
    Rd.W[x] = res[31:0];
  else { // SRAI32
    Rd.W[x] = SE32(Rs1.W[x][31:sa]);
  }
} else {
  Rd = Rs1;
}
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SRAI32_U(unsigned long a, unsigned int b) SRAI32.u (SIMD 32-bit Rounding Shift Right Arithmetic Immediate)

Type: DSP (RV64 Only)

Syntax:

```
SRAI32 Rd, Rs1, imm5u
SRAI32.u Rd, Rs1, imm5u
```

Purpose: Do 32-bit elements arithmetic right shift operations simultaneously. The shift amount is an immediate value. The .u form performs additional rounding up operations on the shifted results.

Description: The 32-bit data elements in Rs1 are right-shifted arithmetically, that is, the shifted out bits are filled with the sign-bit of the 32-bit data elements. The shift amount is specified by the imm5u constant. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 32-bit data to calculate the final results. And the results are written to Rd.

Operations:

```
sa = imm5u[4:0];
if (sa > 0) {
  if (`.u` form) { // SRAI32.u
    res[31:-1] = SE33(Rs1.W[x][31:sa-1]) + 1;
    Rd.W[x] = res[31:0];
  else { // SRAI32
    Rd.W[x] = SE32(Rs1.W[x][31:sa]);
  }
} else {
  Rd = Rs1;
}
for RV64: x=1...0
```

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SRL32(unsigned long a, unsigned int b) SRL32(SIMD 32-bit Shift Right Logical)

Type: SIMD (RV64 Only)

Syntax:

```
SRL32 Rd, Rs1, Rs2
SRL32.u Rd, Rs1, Rs2
```

Purpose: Do 32-bit element logical right shift operations simultaneously. The shift amount is a variable from a GPR. The .u form performs additional rounding up operations on the shifted results.

Description: The 32-bit data elements in Rs1 are right-shifted logically, that is, the shifted out bits are filled with zero. The shift amount is specified by the low-order 5-bits of the value in the Rs2 register. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 32-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = Rs2[4:0];
if (sa > 0) {
  if (`.u` form) { // SRA32.u
    res[31:-1] = ZE33(Rs1.W[x][31:sa-1]) + 1;
    Rd.W[x] = res[31:0];
  else { // SRA32
    Rd.W[x] = ZE32(Rs1.W[x][31:sa])
  }
} else {
  Rd = Rs1;
}
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

• [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SRL32_U(unsigned long a, unsigned int b)
SRL32.u (SIMD 32-bit Rounding Shift Right Logical)

Type: SIMD (RV64 Only)

Syntax:

```
SRL32 Rd, Rs1, Rs2
SRL32.u Rd, Rs1, Rs2
```

Purpose: Do 32-bit element logical right shift operations simultaneously. The shift amount is a variable from a GPR. The .u form performs additional rounding up operations on the shifted results.

Description: The 32-bit data elements in Rs1 are right-shifted logically, that is, the shifted out bits are filled with zero. The shift amount is specified by the low-order 5-bits of the value in the Rs2 register. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 32-bit data element to calculate the final results. And the results are written to Rd.

Operations:

```
sa = Rs2[4:0];
if (sa > 0) {
  if (`.u` form) { // SRA32.u
    res[31:-1] = ZE33(Rs1.W[x][31:sa-1]) + 1;
    Rd.W[x] = res[31:0];
  else { // SRA32
    Rd.W[x] = ZE32(Rs1.W[x][31:sa])
  }
} else {
  Rd = Rs1;
}
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SRLI32(unsigned long a, unsigned int b) SRLI32(SIMD 32-bit Shift Right Logical Immediate)

Type: SIMD (RV64 Only)

Syntax:

```
SRLI32 Rd, Rs1, imm5u
SRLI32.u Rd, Rs1, imm5u
```

Purpose: Do 32-bit elements logical right shift operations simultaneously. The shift amount is an immediate value. The .u form performs additional rounding up operations on the shifted results.

Description: The 32-bit data elements in Rs1 are right-shifted logically, that is, the shifted out bits are filled with zero. The shift amount is specified by the imm5u constant. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 32-bit data to calculate the final results. And the results are written to Rd.

Operations:

```
sa = imm5u[4:0];
if (sa > 0) {
  if (`.u` form) { // SRLI32.u
    res[31:-1] = ZE33(Rs1.W[x][31:sa-1]) + 1;
    Rd.W[x] = res[31:0];
  else { // SRLI32
    Rd.W[x] = ZE32(Rs1.W[x][31:sa]);
  }
} else {
  Rd = Rs1;
}
for RV64: x=1...0
```

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned int type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SRLI32_U(unsigned long a, unsigned int b) SRLI32.u (SIMD 32-bit Rounding Shift Right Logical Immediate)

Type: SIMD (RV64 Only)

Syntax:

```
SRLI32 Rd, Rs1, imm5u
SRLI32.u Rd, Rs1, imm5u
```

Purpose: Do 32-bit elements logical right shift operations simultaneously. The shift amount is an immediate value. The .u form performs additional rounding up operations on the shifted results.

Description: The 32-bit data elements in Rs1 are right-shifted logically, that is, the shifted out bits are filled with zero. The shift amount is specified by the imm5u constant. For the rounding operation of the .u form, a value of 1 is added to the most significant discarded bit of each 32-bit data to calculate the final results. And the results are written to Rd.

Operations:

```
sa = imm5u[4:0];
if (sa > 0) {
  if (`.u` form) { // SRLI32.u
    res[31:-1] = ZE33(Rs1.W[x][31:sa-1]) + 1;
    Rd.W[x] = res[31:0];
  else { // SRLI32
    Rd.W[x] = ZE32(Rs1.W[x][31:sa]);
  }
} else {
  Rd = Rs1;
}
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

• [in] b: unsigned int type of value stored in b

(RV64 Only) SIMD 32-bit Miscellaneous Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_KABS32 (unsigned long a)

__STATIC_FORCEINLINE unsigned long __RV_SMAX32 (unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_SMIN32 (unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_UMAX32 (unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_UMIN32 (unsigned long a, unsigned long b)

group NMSIS_Core_DSP_Intrinsic_RV64_SIMD_32B_MISC

(RV64 Only) SIMD 32-bit Miscellaneous Instructions

there are 5 (RV64 Only) SIMD 32-bit Miscellaneous Instructions
```

Functions

```
__STATIC_FORCEINLINE unsigned long __RV_KABS32 (unsigned long a) KABS32 (Scalar 32-bit Absolute Value with Saturation)
```

Type: DSP (RV64 Only) 24 20 19 15 14 12 11 7 KABS32 10010 Rs1 000 Rd 6 0 GE80B 1111111

Syntax:

```
KABS32 Rd, Rs1
```

Purpose: Get the absolute value of signed 32-bit integer elements in a general register.

Description: This instruction calculates the absolute value of signed 32-bit integer elements stored in Rs1. The results are written to Rd. This instruction with the minimum negative integer input of 0x80000000 will produce a saturated output of maximum positive integer of 0x7fffffff and the OV flag will be set to 1.

Operations:

```
if (Rs1.W[x] >= 0) {
    res[x] = Rs1.W[x];
} else {
    If (Rs1.W[x] == 0x80000000) {
        res[x] = 0x7fffffff;
        OV = 1;
    } else {
        res[x] = -Rs1.W[x];
    }
}
Rd.W[x] = res[x];
for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

__STATIC_FORCEINLINE unsigned long __RV_SMAX32(unsigned long a, unsigned long b) SMAX32(SIMD 32-bit Signed Maximum)

Type: SIMD (RV64 Only)

Syntax:

```
SMAX32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit signed integer elements finding maximum operations simultaneously.

Description: This instruction compares the 32-bit signed integer elements in Rs1 with the 32-bit signed integer elements in Rs2 and selects the numbers that is greater than the other one. The selected results are written to Rd.

Operations:

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_SMIN32(unsigned long a, unsigned long b) SMIN32(SIMD 32-bit Signed Minimum)

Type: SIMD (RV64 Only)

Syntax:

```
SMIN32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit signed integer elements finding minimum operations simultaneously.

Description: This instruction compares the 32-bit signed integer elements in Rs1 with the 32-bit signed integer elements in Rs2 and selects the numbers that is less than the other one. The selected results are written to Rd.

Operations:

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_UMAX32 (unsigned long a, unsigned long b)
 UMAX32 (SIMD 32-bit Unsigned Maximum)

Type: SIMD (RV64 Only)

Syntax:

```
UMAX32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit unsigned integer elements finding maximum operations simultaneously.

Description: This instruction compares the 32-bit unsigned integer elements in Rs1 with the 32-bit unsigned integer elements in Rs2 and selects the numbers that is greater than the other one. The selected results are written to Rd.

Operations:

```
Rd.W[x] = (Rs1.W[x] u> Rs2.W[x])? Rs1.W[x] : Rs2.W[x]; for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
__STATIC_FORCEINLINE unsigned long __RV_UMIN32(unsigned long a, unsigned long b)
    UMIN32 (SIMD 32-bit Unsigned Minimum)
```

Type: SIMD (RV64 Only)

Syntax:

```
UMIN32 Rd, Rs1, Rs2
```

Purpose: Do 32-bit unsigned integer elements finding minimum operations simultaneously.

Description: This instruction compares the 32-bit unsigned integer elements in Rs1 with the 32-bit unsigned integer elements in Rs2 and selects the numbers that is less than the other one. The selected results are written to Rd.

Operations:

```
Rd.W[x] = (Rs1.W[x] <u Rs2.W[x])? Rs1.W[x] : Rs2.W[x]; for RV64: x=1...0
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

(RV64 Only) SIMD Q15 Saturating Multiply Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_KDMBB16(unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_KDMBT16(unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_KDMTT16(unsigned long a, unsigned long b)

__STATIC_FORCEINLINE unsigned long __RV_KDMABB16(unsigned long t, unsigned long a, unsigned __STATIC_FORCEINLINE unsigned long __RV_KDMABT16(unsigned long t, unsigned long a, unsigned __STATIC_FORCEINLINE unsigned long __RV_KDMATT16(unsigned long t, unsigned long a, unsigned __STATIC_FORCEINLINE unsigned long __RV_KDMATT16(unsigned long t, unsigned long a, unsigned __STATIC_FORCEINLINE unsigned long __RV_KHMBB16(unsigned long a, unsigned long b)
```

```
__STATIC_FORCEINLINE unsigned long __RV_KHMBT16(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_KHMTT16(unsigned long a, unsigned long b)
group NMSIS_Core_DSP_Intrinsic_RV64_SIMD_Q15_SAT_MULT
(RV64 Only) SIMD Q15 Saturating Multiply Instructions
there are 9 (RV64 Only) SIMD Q15 saturating Multiply Instructions
```

Functions

__STATIC_FORCEINLINE unsigned long __RV_KDMBB16 (unsigned long a, unsigned long b) KDMBB16 (SIMD Signed Saturating Double Multiply B16 x B16)

Type: SIMD (RV64 only)

Syntax:

```
KDMxy16 Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 integer contents of two 16-bit data in the corresponding portion of the 32-bit chunks in registers and then double and saturate the Q31 results into the 32-bit chunks in the destination register. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the 32-bit portions in Rs1 with the top or bottom 16-bit Q15 content of the 32-bit portions in Rs2. The Q30 results are then doubled and saturated into Q31 values. The Q31 values are then written into the 32-bit chunks in Rd. When both the two Q15 inputs are 0x8000, saturation will happen. The result will be saturated to 0x7FFFFFFF and the overflow flag OV will be set.

Operations:

```
// KDMBB16: (x,y,z)=(0,0,0),(2,2,1)
// KDMBT16: (x,y,z)=(0,1,0),(2,3,1)
// KDMTT16: (x,y,z)=(1,1,0),(3,3,1)
aop[z] = Rs1.H[x]; bop[z] = Rs2.H[y];
If (0x8000 != aop[z] | 0x8000 != bop[z]) {
    Mresult[z] = aop[z] * bop[z];
    resQ31[z] = Mresult[z] << 1;
} else {
    resQ31[z] = 0x7FFFFFFF;
    OV = 1;
}
Rd.W[z] = resQ31[z];</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KDMBT16(unsigned long a, unsigned long b)
KDMBT16 (SIMD Signed Saturating Double Multiply B16 x T16)

Type: SIMD (RV64 only)

Syntax:

```
KDMxy16 Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 integer contents of two 16-bit data in the corresponding portion of the 32-bit chunks in registers and then double and saturate the Q31 results into the 32-bit chunks in the destination register. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the 32-bit portions in Rs1 with the top or bottom 16-bit Q15 content of the 32-bit portions in Rs2. The Q30 results are then doubled and saturated into Q31 values. The Q31 values are then written into the 32-bit chunks in Rd. When both the two Q15 inputs are 0x8000, saturation will happen. The result will be saturated to 0x7FFFFFFF and the overflow flag OV will be set.

Operations:

```
// KDMBB16: (x,y,z)=(0,0,0),(2,2,1)
// KDMBT16: (x,y,z)=(0,1,0),(2,3,1)
// KDMTT16: (x,y,z)=(1,1,0),(3,3,1)
aop[z] = Rs1.H[x]; bop[z] = Rs2.H[y];
If (0x8000 != aop[z] | 0x8000 != bop[z]) {
    Mresult[z] = aop[z] * bop[z];
    resQ31[z] = Mresult[z] << 1;
} else {
    resQ31[z] = 0x7FFFFFFF;
    OV = 1;
}
Rd.W[z] = resQ31[z];</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KDMTT16 (unsigned long a, unsigned long b)
KDMTT16 (SIMD Signed Saturating Double Multiply T16 x T16)

Type: SIMD (RV64 only)

Syntax:

```
KDMxy16 Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 integer contents of two 16-bit data in the corresponding portion of the 32-bit chunks in registers and then double and saturate the Q31 results into the 32-bit chunks in the destination register. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the 32-bit portions in Rs1 with the top or bottom 16-bit Q15 content of the 32-bit portions in Rs2. The Q30 results are then doubled and saturated into Q31 values. The Q31 values are then written into the 32-bit chunks in Rd. When both the two Q15 inputs are 0x8000, saturation will happen. The result will be saturated to 0x7FFFFFFF and the overflow flag OV will be set.

Operations:

```
// KDMBB16: (x,y,z)=(0,0,0),(2,2,1)
// KDMBT16: (x,y,z)=(0,1,0),(2,3,1)
// KDMTT16: (x,y,z)=(1,1,0),(3,3,1)
```

(continues on next page)

(continued from previous page)

```
aop[z] = Rs1.H[x]; bop[z] = Rs2.H[y];
If (0x8000 != aop[z] | 0x8000 != bop[z]) {
   Mresult[z] = aop[z] * bop[z];
   resQ31[z] = Mresult[z] << 1;
} else {
   resQ31[z] = 0x7FFFFFFF;
   OV = 1;
}
Rd.W[z] = resQ31[z];</pre>
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE unsigned long __RV_KDMABB16(unsigned long t, unsigned long a, uns KDMABB16(SIMD Signed Saturating Double Multiply Addition B16 x B16)

Type: SIMD (RV64 only)

Syntax:

```
KDMAxy16 Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 integer contents of two 16-bit data in the corresponding portion of the 32-bit chunks in registers and then double and saturate the Q31 results, add the results with the values of the corresponding 32-bit chunks from the destination register and write the saturated addition results back into the corresponding 32-bit chunks of the destination register. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the 32-bit portions in Rs1 with the top or bottom 16-bit Q15 content of the corresponding 32-bit portions in Rs2. The Q30 results are then doubled and saturated into Q31 values. The Q31 values are then added with the content of the corresponding 32-bit portions of Rd. If the addition results are beyond the Q31 number range (- 2^3 1 <= Q31 <= 2^3 1-1), they are saturated to the range and the OV flag is set to 1. The results after saturation are written back to Rd. When both the two Q15 inputs are 0x8000, saturation will happen and the overflow flag OV will be set.

Operations:

```
// KDMABB16: (x,y,z)=(0,0,0),(2,2,1)
// KDMABT16: (x,y,z)=(0,1,0),(2,3,1)
// KDMATT16: (x,y,z)=(1,1,0),(3,3,1)
aop[z] = Rs1.H[x]; bop[z] = Rs2.H[y];
If (0x8000 != aop[z] | 0x8000 != bop[z]) {
    Mresult[z] = aop[z] * bop[z];
    resQ31[z] = Mresult[z] << 1;
} else {
    resQ31[z] = 0x7FFFFFFF;
    OV = 1;
}
resadd[z] = Rd.W[z] + resQ31[z];
if (resadd[z] > (2^31)-1) {
    resadd[z] = (2^31)-1;
    oV = 1;
} else if (resadd[z] < -2^31) {</pre>
```

(continues on next page)

(continued from previous page)

```
resadd[z] = -2^31;
OV = 1;
}
Rd.W[z] = resadd[z];
```

Return value stored in unsigned long type

Parameters

- [in] t: unsigned long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KDMABT16(unsigned long t, unsigned long a, uns KDMABT16(SIMD Signed Saturating Double Multiply Addition B16 x T16)

Type: SIMD (RV64 only)

Syntax:

```
KDMAxy16 Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 integer contents of two 16-bit data in the corresponding portion of the 32-bit chunks in registers and then double and saturate the Q31 results, add the results with the values of the corresponding 32-bit chunks from the destination register and write the saturated addition results back into the corresponding 32-bit chunks of the destination register. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the 32-bit portions in Rs1 with the top or bottom 16-bit Q15 content of the corresponding 32-bit portions in Rs2. The Q30 results are then doubled and saturated into Q31 values. The Q31 values are then added with the content of the corresponding 32-bit portions of Rd. If the addition results are beyond the Q31 number range (- $2^31 \le 2^31 \le 2$

Operations:

```
// KDMABB16: (x,y,z)=(0,0,0),(2,2,1)
// KDMABT16: (x, y, z) = (0, 1, 0), (2, 3, 1)
// KDMATT16: (x,y,z)=(1,1,0),(3,3,1)
aop[z] = Rs1.H[x]; bop[z] = Rs2.H[y];
If (0x8000 != aop[z] | 0x8000 != bop[z]) {
 Mresult[z] = aop[z] * bop[z];
 resQ31[z] = Mresult[z] << 1;
} else {
 resQ31[z] = 0x7FFFFFFF;
 OV = 1;
resadd[z] = Rd.W[z] + resQ31[z];
if (resadd[z] > (2^31)-1) {
 resadd[z] = (2^31) -1;
 OV = 1;
} else if (resadd[z] < -2^31) {
 resadd[z] = -2^31;
 OV = 1:
Rd.W[z] = resadd[z];
```

Parameters

- [in] t: unsigned long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE unsigned long __RV_KDMATT16(unsigned long t, unsigned long a, uns KDMATT16(SIMD Signed Saturating Double Multiply Addition T16 x T16)

Type: SIMD (RV64 only)

Syntax:

```
KDMAxy16 Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 integer contents of two 16-bit data in the corresponding portion of the 32-bit chunks in registers and then double and saturate the Q31 results, add the results with the values of the corresponding 32-bit chunks from the destination register and write the saturated addition results back into the corresponding 32-bit chunks of the destination register. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the 32-bit portions in Rs1 with the top or bottom 16-bit Q15 content of the corresponding 32-bit portions in Rs2. The Q30 results are then doubled and saturated into Q31 values. The Q31 values are then added with the content of the corresponding 32-bit portions of Rd. If the addition results are beyond the Q31 number range (-2 3 1 <= Q31 <= 2 3 1-1), they are saturated to the range and the OV flag is set to 1. The results after saturation are written back to Rd. When both the two Q15 inputs are 0x8000, saturation will happen and the overflow flag OV will be set.

Operations:

```
// KDMABB16: (x,y,z)=(0,0,0),(2,2,1)
// KDMABT16: (x,y,z)=(0,1,0),(2,3,1)
// KDMATT16: (x,y,z)=(1,1,0),(3,3,1)
aop[z] = Rs1.H[x]; bop[z] = Rs2.H[y];
If (0x8000 != aop[z] | 0x8000 != bop[z]) {
 Mresult[z] = aop[z] * bop[z];
 resQ31[z] = Mresult[z] << 1;
} else {
 resQ31[z] = 0x7FFFFFFF;
 OV = 1:
resadd[z] = Rd.W[z] + resQ31[z];
if (resadd[z] > (2^31)-1) {
 resadd[z] = (2^31)-1;
 OV = 1;
} else if (resadd[z] < -2^31) {
 resadd[z] = -2^31;
 OV = 1;
Rd.W[z] = resadd[z];
```

Return value stored in unsigned long type

Parameters

- [in] t: unsigned long type of value stored in t
- [in] a: unsigned long type of value stored in a

• [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KHMBB16(unsigned long a, unsigned long b)
KHMBB16(SIMD Signed Saturating Half Multiply B16 x B16)

Type: SIMD (RV64 Only)

Syntax:

```
KHMxy16 Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 integer contents of two 16-bit data in the corresponding portion of the 32-bit chunks in registers and then right-shift 15 bits to turn the Q30 results into Q15 numbers again and saturate the Q15 results into the destination register. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the 32-bit portions in Rs1 with the top or bottom 16-bit Q15 content of the 32-bit portion in Rs2. The Q30 results are then right-shifted 15- bits and saturated into Q15 values. The 32-bit Q15 values are then written into the 32-bit chunks in Rd. When both the two Q15 inputs are 0x8000, saturation will happen. The result will be saturated to 0x7FFF and the overflow flag OV will be set.

Operations:

```
// KHMBB16: (x,y,z)=(0,0,0),(2,2,1)
// KHMBT16: (x,y,z)=(0,1,0),(2,3,1)
// KHMTT16: (x,y,z)=(1,1,0),(3,3,1)
aop = Rs1.H[x]; bop = Rs2.H[y];
If (0x8000 != aop | 0x8000 != bop) {
    Mresult[31:0] = aop * bop;
    res[15:0] = Mresult[30:15];
} else {
    res[15:0] = 0x7FFF;
    OV = 1;
}
Rd.W[z] = SE32(res[15:0]);
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KHMBT16(unsigned long a, unsigned long b) KHMBT16 (SIMD Signed Saturating Half Multiply B16 x T16)

Type: SIMD (RV64 Only)

Syntax:

```
KHMxy16 Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 integer contents of two 16-bit data in the corresponding portion of the 32-bit chunks in registers and then right-shift 15 bits to turn the Q30 results into Q15 numbers again and saturate the Q15 results into the destination register. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the 32-bit portions in Rs1 with the top or bottom 16-bit Q15 content of the 32-bit portion in Rs2. The Q30 results are then right-shifted 15- bits and saturated into Q15 values. The 32-bit Q15 values are then written into the 32-bit chunks in Rd. When both

the two Q15 inputs are 0x8000, saturation will happen. The result will be saturated to 0x7FFF and the overflow flag OV will be set.

Operations:

```
// KHMBB16: (x,y,z)=(0,0,0),(2,2,1)
// KHMBT16: (x,y,z)=(0,1,0),(2,3,1)
// KHMTT16: (x,y,z)=(1,1,0),(3,3,1)
aop = Rs1.H[x]; bop = Rs2.H[y];
If (0x8000 != aop | 0x8000 != bop) {
    Mresult[31:0] = aop * bop;
    res[15:0] = Mresult[30:15];
} else {
    res[15:0] = 0x7FFF;
    OV = 1;
}
Rd.W[z] = SE32(res[15:0]);
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_KHMTT16(unsigned long a, unsigned long b) KHMTT16(SIMD Signed Saturating Half Multiply T16 x T16)

Type: SIMD (RV64 Only)

Syntax:

```
KHMxy16 Rd, Rs1, Rs2 (xy = BB, BT, TT)
```

Purpose: Multiply the signed Q15 integer contents of two 16-bit data in the corresponding portion of the 32-bit chunks in registers and then right-shift 15 bits to turn the Q30 results into Q15 numbers again and saturate the Q15 results into the destination register. If saturation happens, an overflow flag OV will be set.

Description: Multiply the top or bottom 16-bit Q15 content of the 32-bit portions in Rs1 with the top or bottom 16-bit Q15 content of the 32-bit portion in Rs2. The Q30 results are then right-shifted 15- bits and saturated into Q15 values. The 32-bit Q15 values are then written into the 32-bit chunks in Rd. When both the two Q15 inputs are 0x8000, saturation will happen. The result will be saturated to 0x7FFF and the overflow flag OV will be set.

Operations:

```
// KHMBB16: (x,y,z)=(0,0,0),(2,2,1)
// KHMBT16: (x,y,z)=(0,1,0),(2,3,1)
// KHMTT16: (x,y,z)=(1,1,0),(3,3,1)
aop = Rs1.H[x]; bop = Rs2.H[y];
If (0x8000 != aop | 0x8000 != bop) {
    Mresult[31:0] = aop * bop;
    res[15:0] = Mresult[30:15];
} else {
    res[15:0] = 0x7FFF;
    OV = 1;
}
Rd.W[z] = SE32(res[15:0]);
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

(RV64 Only) 32-bit Multiply Instructions

Functions

```
__STATIC_FORCEINLINE long __RV_SMBB32 (unsigned long a, unsigned long b) SMBB32 (Signed Multiply Bottom Word & Bottom Word)
```

Type: DSP (RV64 Only)

Syntax:

```
SMBB32 Rd, Rs1, Rs2
SMBT32 Rd, Rs1, Rs2
SMTT32 Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit element of a register with the signed 32-bit element of another register and write the 64-bit result to a third register.

• SMBB32: bottom*bottom

• SMBT32: bottom*top

• SMTT32: top*top

Description: For the SMBB32 instruction, it multiplies the bottom 32-bit element of Rs1 with the bottom 32-bit element of Rs2. It is actually an alias of MULSR64 instruction. For the SMBT32 instruction, it multiplies the bottom 32-bit element of Rs1 with the top 32-bit element of Rs2. For the SMTT32 instruction, it multiplies the top 32-bit element of Rs1 with the top 32-bit element of Rs2. The 64-bit multiplication result is written to Rd. The 32-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
res = Rs1.W[0] * Rs2.W[0]; // SMBB32 res = Rs1.W[0] * Rs2.w[1]; // SMBT32 res_

= Rs1.W[1] * Rs2.W[1];

// SMTT32 Rd = res;
```

Return value stored in long type

Parameters

• [in] a: unsigned long type of value stored in a

• [in] b: unsigned long type of value stored in b

```
__STATIC_FORCEINLINE long __RV_SMBT32 (unsigned long a, unsigned long b)
SMBT32 (Signed Multiply Bottom Word & Top Word)
```

Type: DSP (RV64 Only)

Syntax:

```
SMBB32 Rd, Rs1, Rs2
SMBT32 Rd, Rs1, Rs2
SMTT32 Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit element of a register with the signed 32-bit element of another register and write the 64-bit result to a third register.

• SMBB32: bottom*bottom

SMBT32: bottom*top

SMTT32: top*top

Description: For the SMBB32 instruction, it multiplies the bottom 32-bit element of Rs1 with the bottom 32-bit element of Rs2. It is actually an alias of MULSR64 instruction. For the SMBT32 instruction, it multiplies the bottom 32-bit element of Rs1 with the top 32-bit element of Rs2. For the SMTT32 instruction, it multiplies the top 32-bit element of Rs1 with the top 32-bit element of Rs2. The 64-bit multiplication result is written to Rd. The 32-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
res = Rs1.W[0] * Rs2.W[0]; // SMBB32 res = Rs1.W[0] * Rs2.W[1]; // SMBT32 res_

→= Rs1.W[1] * Rs2.W[1];

// SMTT32 Rd = res;
```

Return value stored in long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_SMTT32 (unsigned long a, unsigned long b) SMTT32 (Signed Multiply Top Word & Top Word)

Type: DSP (RV64 Only)

Syntax:

```
SMBB32 Rd, Rs1, Rs2
SMBT32 Rd, Rs1, Rs2
SMTT32 Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit element of a register with the signed 32-bit element of another register and write the 64-bit result to a third register.

SMBB32: bottom*bottom

SMBT32: bottom*top

• SMTT32: top*top

Description: For the SMBB32 instruction, it multiplies the bottom 32-bit element of Rs1 with the bottom 32-bit element of Rs2. It is actually an alias of MULSR64 instruction. For the SMBT32 instruction, it multiplies the bottom 32-bit element of Rs1 with the top 32-bit element of Rs2. For the SMTT32 instruction, it multiplies the top 32-bit element of Rs1 with the top 32-bit element of Rs2. The 64-bit multiplication result is written to Rd. The 32-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
res = Rs1.W[0] * Rs2.W[0]; // SMBB32 res = Rs1.W[0] * Rs2.w[1]; // SMBT32 res_

→= Rs1.W[1] * Rs2.W[1];

// SMTT32 Rd = res;
```

Return value stored in long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

(RV64 Only) 32-bit Multiply & Add Instructions

Functions

```
__STATIC_FORCEINLINE long __RV_KMABB32(long t, unsigned long a, unsigned long b)

KMABB32 (Saturating Signed Multiply Bottom Words & Add)
```

Type: DSP (RV64 Only)

Syntax:

```
KMABB32 Rd, Rs1, Rs2
KMABT32 Rd, Rs1, Rs2
KMATT32 Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit element in a register with the 32-bit element in another register and add the result to the content of 64-bit data in the third register. The addition result may be saturated and is written to the third register.

- KMABB32: rd + bottom*bottom
- KMABT32: rd + bottom*top
- KMATT32: rd + top*top

Description: For the KMABB32 instruction, it multiplies the bottom 32-bit element in Rs1 with the bottom 32-bit element in Rs2. For the KMABT32 instruction, it multiplies the bottom 32-bit element in Rs1 with the top 32-bit element in Rs2. For the KMATT32 instruction, it multiplies the top 32-bit element in Rs1 with the top 32-bit element in Rs2. The multiplication result is added to the content of 64-bit data in Rd. If

the addition result is beyond the Q63 number range ($-2^63 \le Q63 \le 2^63$ -1), it is saturated to the range and the OV bit is set to 1. The result after saturation is written to Rd. The 32-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
res = Rd + (Rs1.W[0] * Rs2.W[0]); // KMABB32
res = Rd + (Rs1.W[0] * Rs2.W[1]); // KMABT32
res = Rd + (Rs1.W[1] * Rs2.W[1]); // KMATT32
if (res > (2^63)-1) {
   res = (2^63)-1;
   OV = 1;
} else if (res < -2^63) {
   res = -2^63;
   OV = 1;
}
Rd = res;
*Exceptions:* None</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMABT32(long t, unsigned long a, unsigned long b)
KMABT32(Saturating Signed Multiply Bottom & Top Words & Add)

Type: DSP (RV64 Only)

Syntax:

```
KMABB32 Rd, Rs1, Rs2
KMABT32 Rd, Rs1, Rs2
KMATT32 Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit element in a register with the 32-bit element in another register and add the result to the content of 64-bit data in the third register. The addition result may be saturated and is written to the third register.

- KMABB32: rd + bottom*bottom
- KMABT32: rd + bottom*top
- KMATT32: rd + top*top

Description: For the KMABB32 instruction, it multiplies the bottom 32-bit element in Rs1 with the bottom 32-bit element in Rs2. For the KMABT32 instruction, it multiplies the bottom 32-bit element in Rs1 with the top 32-bit element in Rs2. For the KMATT32 instruction, it multiplies the top 32-bit element in Rs1 with the top 32-bit element in Rs2. The multiplication result is added to the content of 64-bit data in Rd. If the addition result is beyond the Q63 number range (- $2^63 < Q63 < Q63$

Operations:

```
res = Rd + (Rs1.W[0] * Rs2.W[0]); // KMABB32
res = Rd + (Rs1.W[0] * Rs2.W[1]); // KMABT32
res = Rd + (Rs1.W[1] * Rs2.W[1]); // KMATT32
if (res > (2^63)-1) {
    res = (2^63)-1;
    OV = 1;
} else if (res < -2^63) {
    res = -2^63;
    OV = 1;
}
Rd = res;
*Exceptions:* None</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE long __RV_KMATT32 (long t, unsigned long a, unsigned long b)

KMATT32 (Saturating Signed Multiply Top Words & Add)

Type: DSP (RV64 Only)

Syntax:

```
KMABB32 Rd, Rs1, Rs2
KMABT32 Rd, Rs1, Rs2
KMATT32 Rd, Rs1, Rs2
```

Purpose: Multiply the signed 32-bit element in a register with the 32-bit element in another register and add the result to the content of 64-bit data in the third register. The addition result may be saturated and is written to the third register.

- KMABB32: rd + bottom*bottom
- KMABT32: rd + bottom*top
- KMATT32: rd + top*top

Description: For the KMABB32 instruction, it multiplies the bottom 32-bit element in Rs1 with the bottom 32-bit element in Rs2. For the KMABT32 instruction, it multiplies the bottom 32-bit element in Rs1 with the top 32-bit element in Rs2. For the KMATT32 instruction, it multiplies the top 32-bit element in Rs1 with the top 32-bit element in Rs2. The multiplication result is added to the content of 64-bit data in Rd. If the addition result is beyond the Q63 number range (- $2^63 \le 2^63 \le 2^63 \le 1$), it is saturated to the range and the OV bit is set to 1. The result after saturation is written to Rd. The 32-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
res = Rd + (Rs1.W[0] * Rs2.W[0]); // KMABB32
res = Rd + (Rs1.W[0] * Rs2.W[1]); // KMABT32
res = Rd + (Rs1.W[1] * Rs2.W[1]); // KMATT32
if (res > (2^63)-1) {
  res = (2^63)-1;
  OV = 1;
```

(continues on next page)

(continued from previous page)

```
} else if (res < -2^63) {
  res = -2^63;
  OV = 1;
Rd = res;
*Exceptions:* None
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

(RV64 Only) 32-bit Parallel Multiply & Add Instructions

```
_STATIC_FORCEINLINE long __RV_KMADA32(long t, unsigned long a, unsigned long b)
 STATIC FORCEINLINE long RV KMAXDA32(long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_KMDA32(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_KMXDA32(unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE long __RV_KMADS32(long t, unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE long __RV_KMADRS32(long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_KMAXDS32(long t, unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_KMSDA32(long t, unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE long __RV_KMSXDA32(long t, unsigned long a, unsigned long b)
 _STATIC_FORCEINLINE long __RV_SMDS32(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_SMDRS32(unsigned long a, unsigned long b)
__STATIC_FORCEINLINE long __RV_SMXDS32(unsigned long a, unsigned long b)
group NMSIS Core DSP Intrinsic RV64 32B PARALLEL MAC
    (RV64 Only) 32-bit Parallel Multiply & Add Instructions
    there are 12 (RV64 Only) 32-bit Parallel Multiply & Add Instructions
```

Functions

```
__STATIC_FORCEINLINE long __RV_KMADA32(long t, unsigned long a, unsigned long b)
    KMADA32 (Saturating Signed Multiply Two Words and Two Adds)
    Type: DSP (RV64 Only)
    Syntax:
```

```
KMADA32 Rd, Rs1, Rs2
KMAXDA32 Rd, Rs1, Rs2
```

Purpose: Do two signed 32-bit multiplications from 32-bit data in two registers; and then adds the two 64-bit results and 64-bit data in a third register together. The addition result may be saturated.

- KMADA32: rd + top*top + bottom*bottom
- KMAXDA32: rd + top*bottom + bottom*top

Description: For the KMADA32 instruction, it multiplies the bottom 32-bit element in Rs1 with the bottom 32-bit element in Rs2 and then adds the result to the result of multiplying the top 32-bit element in Rs1 with the top 32-bit element in Rs2. It is actually an alias of the KMAR64 instruction. For the KMAXDA32 instruction, it multiplies the top 32-bit element in Rs1 with the bottom 32-bit element in Rs2 and then adds the result to the result of multiplying the bottom 32-bit element in Rs1 with the top 32-bit element in Rs2. The result is added to the content of 64-bit data in Rd. If the addition result is beyond the Q63 number range (-2^63 <= Q63 <= 2^63-1), it is saturated to the range and the OV bit is set to 1. The 64-bit result is written to Rd. The 32-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
res = Rd + (Rs1.W[1] * Rs2.w[1]) + (Rs1.W[0] * Rs2.W[0]); // KMADA32
res = Rd + (Rs1.W[1] * Rs2.W[0]) + (Rs1.W[0] * Rs2.W[1]); // KMAXDA32
if (res > (2^63)-1) {
  res = (2^63)-1;
  OV = 1;
} else if (res < -2^63) {
  res = -2^63;
  OV = 1;
}
Rd = res;</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE long __RV_KMAXDA32(long t, unsigned long a, unsigned long b) KMAXDA32(Saturating Signed Crossed Multiply Two Words and Two Adds)

Type: DSP (RV64 Only)

Syntax:

```
KMADA32 Rd, Rs1, Rs2
KMAXDA32 Rd, Rs1, Rs2
```

Purpose: Do two signed 32-bit multiplications from 32-bit data in two registers; and then adds the two 64-bit results and 64-bit data in a third register together. The addition result may be saturated.

- KMADA32: rd + top*top + bottom*bottom
- KMAXDA32: rd + top*bottom + bottom*top

Description: For the KMADA32 instruction, it multiplies the bottom 32-bit element in Rs1 with the bottom 32-bit element in Rs2 and then adds the result to the result of multiplying the top 32-bit element in Rs1 with the top 32-bit element in Rs2. It is actually an alias of the KMAR64 instruction. For the KMAXDA32 instruction, it multiplies the top 32-bit element in Rs1 with the bottom 32-bit element in Rs2 and then adds the result to the result of multiplying the bottom 32-bit element in Rs1 with the top 32-bit element in Rs2. The result is added to the content of 64-bit data in Rd. If the addition result is beyond the Q63 number

range ($-2^63 \le 2^63 \le 2^63$ -1), it is saturated to the range and the OV bit is set to 1. The 64-bit result is written to Rd. The 32-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
res = Rd + (Rs1.W[1] * Rs2.W[1]) + (Rs1.W[0] * Rs2.W[0]); // KMADA32
res = Rd + (Rs1.W[1] * Rs2.W[0]) + (Rs1.W[0] * Rs2.W[1]); // KMAXDA32
if (res > (2^63)-1) {
  res = (2^63)-1;
  OV = 1;
} else if (res < -2^63) {
  res = -2^63;
  OV = 1;
}
Rd = res;</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMDA32(unsigned long a, unsigned long b) KMDA32(Signed Multiply Two Words and Add)

Type: DSP (RV64 Only)

Syntax:

```
KMDA32 Rd, Rs1, Rs2
KMXDA32 Rd, Rs1, Rs2
```

Purpose: Do two signed 32-bit multiplications from the 32-bit element of two registers; and then adds the two 64-bit results together. The addition result may be saturated.

- KMDA32: top*top + bottom*bottom
- KMXDA32: top*bottom + bottom*top

Description: For the KMDA32 instruction, it multiplies the bottom 32-bit element of Rs1 with the bottom 32-bit element of Rs2 and then adds the result to the result of multiplying the top 32-bit element of Rs1 with the top 32-bit element of Rs2. For the KMXDA32 instruction, it multiplies the bottom 32-bit element of Rs1 with the top 32-bit element of Rs2 and then adds the result to the result of multiplying the top 32-bit element of Rs1 with the bottom 32-bit element of Rs2. The addition result is checked for saturation. If saturation happens, the result is saturated to 2^63-1. The final result is written to Rd. The 32-bit contents are treated as signed integers.

Operations:

```
if ((Rs1 != 0x8000000080000000) or (Rs2 != 0x8000000080000000)) {
   Rd = (Rs1.W[1] * Rs2.W[1]) + (Rs1.W[0] * Rs2.W[0]); // KMDA32
   Rd = (Rs1.W[1] * Rs2.W[0]) + (Rs1.W[0] * Rs2.W[1]); // KMXDA32
} else {
   Rd = 0x7fffffffffffffff;
   OV = 1;
}
```

Return value stored in long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMXDA32 (unsigned long a, unsigned long b) KMXDA32 (Signed Crossed Multiply Two Words and Add)

Type: DSP (RV64 Only)

Syntax:

```
KMDA32 Rd, Rs1, Rs2
KMXDA32 Rd, Rs1, Rs2
```

Purpose: Do two signed 32-bit multiplications from the 32-bit element of two registers; and then adds the two 64-bit results together. The addition result may be saturated.

- KMDA32: top*top + bottom*bottom
- KMXDA32: top*bottom + bottom*top

Description: For the KMDA32 instruction, it multiplies the bottom 32-bit element of Rs1 with the bottom 32-bit element of Rs2 and then adds the result to the result of multiplying the top 32-bit element of Rs1 with the top 32-bit element of Rs2. For the KMXDA32 instruction, it multiplies the bottom 32-bit element of Rs1 with the top 32-bit element of Rs2 and then adds the result to the result of multiplying the top 32-bit element of Rs1 with the bottom 32-bit element of Rs2. The addition result is checked for saturation. If saturation happens, the result is saturated to 2^63-1. The final result is written to Rd. The 32-bit contents are treated as signed integers.

Operations:

```
if ((Rs1 != 0x8000000080000000) or (Rs2 != 0x8000000080000000)) {
   Rd = (Rs1.W[1] * Rs2.W[1]) + (Rs1.W[0] * Rs2.W[0]); // KMDA32
   Rd = (Rs1.W[1] * Rs2.W[0]) + (Rs1.W[0] * Rs2.W[1]); // KMXDA32
} else {
   Rd = 0x7ffffffffffffff;
   OV = 1;
}
```

Return value stored in long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMADS32(long t, unsigned long a, unsigned long b)
KMADS32(Saturating Signed Multiply Two Words & Subtract & Add)

Type: DSP (RV64 Only)

Syntax:

```
KMADS32 Rd, Rs1, Rs2
KMADRS32 Rd, Rs1, Rs2
KMAXDS32 Rd, Rs1, Rs2
```

Purpose: Do two signed 32-bit multiplications from 32-bit elements in two registers; and then perform a subtraction operation between the two 64-bit results. Then add the subtraction result to 64-bit data in a third register. The addition result may be saturated.

- KMADS32: rd + (top*top bottom*bottom)
- KMADRS32: rd + (bottom*bottom top*top)
- KMAXDS32: rd + (top*bottom bottom*top)

Description: For the KMADS32 instruction, it multiplies the bottom 32-bit element in Rs1 with the bottom 32-bit element in Rs2 and then subtracts the result from the result of multiplying the top 32-bit element in Rs1 with the top 32-bit element in Rs2. For the KMADRS32 instruction, it multiplies the top 32-bit element in Rs1 with the top 32-bit element in Rs2 and then subtracts the result from the result of multiplying the bottom 32-bit element in Rs1 with the bottom 32-bit element in Rs2. For the KMAXDS32 instruction, it multiplies the bottom 32-bit element in Rs1 with the top 32-bit element in Rs2 and then subtracts the result from the result of multiplying the top 32-bit element in Rs1 with the bottom 32-bit element in Rs2. The subtraction result is then added to the content of 64-bit data in Rd. If the addition result is beyond the Q63 number range $(-2^63 \le Q63 \le 2^63-1)$, it is saturated to the range and the OV bit is set to

1. The 64-bit result after saturation is written to Rd. The 32-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
res = Rd + (Rs1.W[1] * Rs2.W[1]) - (Rs1.W[0] * Rs2.W[0]); // KMADS32
res = Rd + (Rs1.W[0] * Rs2.W[0]) - (Rs1.W[1] * Rs2.W[1]); // KMADRS32
res = Rd + (Rs1.W[1] * Rs2.W[0]) - (Rs1.W[0] * Rs2.W[1]); // KMAXDS32
if (res > (2^63)-1) {
   res = (2^63)-1;
   ov = 1;
} else if (res < -2^63) {
   res = -2^63;
   ov = 1;
}
Rd = res;</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE long __RV_KMADRS32(long t, unsigned long a, unsigned long b)
KMADRS32(Saturating Signed Multiply Two Words & Reverse Subtract & Add)

Type: DSP (RV64 Only)

Syntax:

```
KMADS32 Rd, Rs1, Rs2
KMADRS32 Rd, Rs1, Rs2
KMAXDS32 Rd, Rs1, Rs2
```

Purpose: Do two signed 32-bit multiplications from 32-bit elements in two registers; and then perform a subtraction operation between the two 64-bit results. Then add the subtraction result to 64-bit data in a third register. The addition result may be saturated.

- KMADS32: rd + (top*top bottom*bottom)
- KMADRS32: rd + (bottom*bottom top*top)
- KMAXDS32: rd + (top*bottom bottom*top)

Description: For the KMADS32 instruction, it multiplies the bottom 32-bit element in Rs1 with the bottom 32-bit element in Rs2 and then subtracts the result from the result of multiplying the top 32-bit element in Rs1 with the top 32-bit element in Rs2. For the KMADRS32 instruction, it multiplies the top 32-bit element in Rs1 with the top 32-bit element in Rs2 and then subtracts the result from the result of multiplying the bottom 32-bit element in Rs1 with the bottom 32-bit element in Rs2. For the KMAXDS32 instruction, it multiplies the bottom 32-bit element in Rs1 with the top 32-bit element in Rs2 and then subtracts the result from the result of multiplying the top 32-bit element in Rs1 with the bottom 32-bit element in Rs2. The subtraction result is then added to the content of 64-bit data in Rd. If the addition result is beyond the Q63 number range $(-2^63 \le Q63 \le 2^63-1)$, it is saturated to the range and the OV bit is set to

1. The 64-bit result after saturation is written to Rd. The 32-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
res = Rd + (Rs1.W[1] * Rs2.W[1]) - (Rs1.W[0] * Rs2.W[0]); // KMADS32
res = Rd + (Rs1.W[0] * Rs2.W[0]) - (Rs1.W[1] * Rs2.W[1]); // KMADRS32
res = Rd + (Rs1.W[1] * Rs2.W[0]) - (Rs1.W[0] * Rs2.W[1]); // KMAXDS32
if (res > (2^63)-1) {
   res = (2^63)-1;
   ov = 1;
} else if (res < -2^63) {
   res = -2^63;
   ov = 1;
} Rd = res;</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMAXDS32(long t, unsigned long a, unsigned long b)
KMAXDS32(Saturating Signed Crossed Multiply Two Words & Subtract & Add)

Type: DSP (RV64 Only)

Syntax:

```
KMADS32 Rd, Rs1, Rs2
KMADRS32 Rd, Rs1, Rs2
KMAXDS32 Rd, Rs1, Rs2
```

Purpose: Do two signed 32-bit multiplications from 32-bit elements in two registers; and then perform a subtraction operation between the two 64-bit results. Then add the subtraction result to 64-bit data in a third register. The addition result may be saturated.

- KMADS32: rd + (top*top bottom*bottom)
- KMADRS32: rd + (bottom*bottom top*top)

• KMAXDS32: rd + (top*bottom - bottom*top)

Description: For the KMADS32 instruction, it multiplies the bottom 32-bit element in Rs1 with the bottom 32-bit element in Rs2 and then subtracts the result from the result of multiplying the top 32-bit element in Rs1 with the top 32-bit element in Rs2. For the KMADRS32 instruction, it multiplies the top 32-bit element in Rs1 with the top 32-bit element in Rs2 and then subtracts the result from the result of multiplying the bottom 32-bit element in Rs1 with the bottom 32-bit element in Rs2. For the KMAXDS32 instruction, it multiplies the bottom 32-bit element in Rs1 with the top 32-bit element in Rs2 and then subtracts the result from the result of multiplying the top 32-bit element in Rs1 with the bottom 32-bit element in Rs2. The subtraction result is then added to the content of 64-bit data in Rd. If the addition result is beyond the Q63 number range (- $2^63 \le 2^63 \le 2^63$

1. The 64-bit result after saturation is written to Rd. The 32-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
res = Rd + (Rs1.W[1] * Rs2.W[1]) - (Rs1.W[0] * Rs2.W[0]); // KMADS32
res = Rd + (Rs1.W[0] * Rs2.W[0]) - (Rs1.W[1] * Rs2.W[1]); // KMADRS32
res = Rd + (Rs1.W[1] * Rs2.W[0]) - (Rs1.W[0] * Rs2.W[1]); // KMAXDS32
if (res > (2^63)-1) {
   res = (2^63)-1;
   OV = 1;
} else if (res < -2^63) {
   res = -2^63;
   OV = 1;
} Rd = res;</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

_STATIC_FORCEINLINE long __RV_KMSDA32 (long t, unsigned long a, unsigned long b) KMSDA32 (Saturating Signed Multiply Two Words & Add & Subtract)

Type: DSP (RV64 Only)

Syntax:

```
KMSDA32 Rd, Rs1, Rs2
KMSXDA32 Rd, Rs1, Rs2
```

Purpose: Do two signed 32-bit multiplications from the 32-bit element of two registers; and then subtracts the two 64-bit results from a third register. The subtraction result may be saturated.

- KMSDA: rd top*top bottom*bottom
- KMSXDA: rd top*bottom bottom*top

Description: For the KMSDA32 instruction, it multiplies the bottom 32-bit element of Rs1 with the bottom 32-bit element of Rs2 and multiplies the top 32-bit element of Rs1 with the top 32-bit element of Rs2. For the KMSXDA32 instruction, it multiplies the bottom 32-bit element of Rs1 with the top 32-bit element of Rs2 and multiplies the top 32-bit element of Rs1 with the bottom 32-bit element of Rs2. The two 64-bit multiplication results are then subtracted from the content of Rd. If the subtraction result is beyond the

Q63 number range $(-2^63 \le Q63 \le 2^63-1)$, it is saturated to the range and the OV bit is set to 1. The result after saturation is written to Rd. The 32-bit contents are treated as signed integers.

Operations:

```
res = Rd - (Rs1.W[1] * Rs2.W[1]) - (Rs1.W[0] * Rs2.W[0]); // KMSDA32
res = Rd - (Rs1.W[1] * Rs2.W[0]) - (Rs1.W[0] * Rs2.W[1]); // KMSXDA32
if (res > (2^63)-1) {
  res = (2^63)-1;
  OV = 1;
} else if (res < -2^63) {
  res = -2^63;
  OV = 1;
} Rd = res;</pre>
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_KMSXDA32 (long t, unsigned long a, unsigned long b) KMSXDA32 (Saturating Signed Crossed Multiply Two Words & Add & Subtract)

Type: DSP (RV64 Only)

Syntax:

```
KMSDA32 Rd, Rs1, Rs2
KMSXDA32 Rd, Rs1, Rs2
```

Purpose: Do two signed 32-bit multiplications from the 32-bit element of two registers; and then subtracts the two 64-bit results from a third register. The subtraction result may be saturated.

- KMSDA: rd top*top bottom*bottom
- KMSXDA: rd top*bottom bottom*top

Description: For the KMSDA32 instruction, it multiplies the bottom 32-bit element of Rs1 with the bottom 32-bit element of Rs2 and multiplies the top 32-bit element of Rs1 with the top 32-bit element of Rs2. For the KMSXDA32 instruction, it multiplies the bottom 32-bit element of Rs1 with the top 32-bit element of Rs2 and multiplies the top 32-bit element of Rs1 with the bottom 32-bit element of Rs2. The two 64-bit multiplication results are then subtracted from the content of Rd. If the subtraction result is beyond the Q63 number range (- $2^63 \le 2^63$ -1), it is saturated to the range and the OV bit is set to 1. The result after saturation is written to Rd. The 32-bit contents are treated as signed integers.

Operations:

```
res = Rd - (Rs1.W[1] * Rs2.W[1]) - (Rs1.W[0] * Rs2.W[0]); // KMSDA32
res = Rd - (Rs1.W[1] * Rs2.W[0]) - (Rs1.W[0] * Rs2.W[1]); // KMSXDA32
if (res > (2^63)-1) {
  res = (2^63)-1;
  OV = 1;
} else if (res < -2^63) {
  res = -2^63;
  OV = 1;</pre>
```

(continues on next page)

(continued from previous page)

```
}
Rd = res;
```

Return value stored in long type

Parameters

- [in] t: long type of value stored in t
- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
__STATIC_FORCEINLINE long __RV_SMDS32(unsigned long a, unsigned long b) SMDS32 (Signed Multiply Two Words and Subtract)
```

Type: DSP (RV64 Only)

Syntax:

```
SMDS32 Rd, Rs1, Rs2
SMDRS32 Rd, Rs1, Rs2
SMXDS32 Rd, Rs1, Rs2
```

Purpose: Do two signed 32-bit multiplications from the 1 32-bit element of two registers; and then perform a subtraction operation between the two 64-bit results.

- SMDS32: top*top bottom*bottom
- SMDRS32: bottom*bottom top*top
- SMXDS32: top*bottom bottom*top

Description: For the SMDS32 instruction, it multiplies the bottom 32-bit element of Rs1 with the bottom 32-bit element of Rs2 and then subtracts the result from the result of multiplying the top 32-bit element of Rs1 with the top 32-bit element of Rs2. For the SMDRS32 instruction, it multiplies the top 32-bit element of Rs1 with the top 32-bit element of Rs2 and then subtracts the result from the result of multiplying the bottom 32-bit element of Rs1 with the bottom 32-bit element of Rs2. For the SMXDS32 instruction, it multiplies the bottom 32-bit element of Rs1 with the top 32-bit element of Rs2 and then subtracts the result from the result of multiplying the top 32-bit element of Rs1 with the bottom 32-bit element of Rs2. The subtraction result is written to Rd. The 32-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
Rt = (Rs1.W[1] * Rs2.W[1]) - (Rs1.W[0] * Rs2.W[0]); // SMDS32
Rt = (Rs1.W[0] * Rs2.W[0]) - (Rs1.W[1] * Rs2.W[1]); // SMDRS32
Rt = (Rs1.W[1] * Rs2.W[0]) - (Rs1.W[0] * Rs2.W[1]); // SMXDS32
```

Return value stored in long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

```
__STATIC_FORCEINLINE long __RV_SMDRS32 (unsigned long a, unsigned long b)
SMDRS32 (Signed Multiply Two Words and Reverse Subtract)
```

Type: DSP (RV64 Only)

Syntax:

```
SMDS32 Rd, Rs1, Rs2
SMDRS32 Rd, Rs1, Rs2
SMXDS32 Rd, Rs1, Rs2
```

Purpose: Do two signed 32-bit multiplications from the 1 32-bit element of two registers; and then perform a subtraction operation between the two 64-bit results.

- SMDS32: top*top bottom*bottom
- SMDRS32: bottom*bottom top*top
- SMXDS32: top*bottom bottom*top

Description: For the SMDS32 instruction, it multiplies the bottom 32-bit element of Rs1 with the bottom 32-bit element of Rs2 and then subtracts the result from the result of multiplying the top 32-bit element of Rs1 with the top 32-bit element of Rs2. For the SMDRS32 instruction, it multiplies the top 32-bit element of Rs1 with the top 32-bit element of Rs2 and then subtracts the result from the result of multiplying the bottom 32-bit element of Rs1 with the bottom 32-bit element of Rs2. For the SMXDS32 instruction, it multiplies the bottom 32-bit element of Rs1 with the top 32-bit element of Rs2 and then subtracts the result from the result of multiplying the top 32-bit element of Rs1 with the bottom 32-bit element of Rs2. The subtraction result is written to Rd. The 32-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
Rt = (Rs1.W[1] * Rs2.W[1]) - (Rs1.W[0] * Rs2.W[0]); // SMDS32

Rt = (Rs1.W[0] * Rs2.W[0]) - (Rs1.W[1] * Rs2.W[1]); // SMDRS32

Rt = (Rs1.W[1] * Rs2.W[0]) - (Rs1.W[0] * Rs2.W[1]); // SMXDS32
```

Return value stored in long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE long __RV_SMXDS32 (unsigned long a, unsigned long b) SMXDS32 (Signed Crossed Multiply Two Words and Subtract)

Type: DSP (RV64 Only)

Syntax:

```
SMDS32 Rd, Rs1, Rs2
SMDRS32 Rd, Rs1, Rs2
SMXDS32 Rd, Rs1, Rs2
```

Purpose: Do two signed 32-bit multiplications from the 1 32-bit element of two registers; and then perform a subtraction operation between the two 64-bit results.

- SMDS32: top*top bottom*bottom
- SMDRS32: bottom*bottom top*top
- SMXDS32: top*bottom bottom*top

Description: For the SMDS32 instruction, it multiplies the bottom 32-bit element of Rs1 with the bottom 32-bit element of Rs2 and then subtracts the result from the result of multiplying the top 32-bit element of Rs1 with the top 32-bit element of Rs2. For the SMDRS32 instruction, it multiplies the top 32-bit element of Rs1 with the top 32-bit element of Rs2 and then subtracts the result from the result of multiplying the bottom 32-bit element of Rs1 with the bottom 32-bit element of Rs2. For the SMXDS32 instruction, it

multiplies the bottom 32-bit element of Rs1 with the top 32-bit element of Rs2 and then subtracts the result from the result of multiplying the top 32-bit element of Rs1 with the bottom 32-bit element of Rs2. The subtraction result is written to Rd. The 32-bit contents of Rs1 and Rs2 are treated as signed integers.

Operations:

```
Rt = (Rs1.W[1] * Rs2.W[1]) - (Rs1.W[0] * Rs2.W[0]); // SMDS32
Rt = (Rs1.W[0] * Rs2.W[0]) - (Rs1.W[1] * Rs2.W[1]); // SMDRS32
Rt = (Rs1.W[1] * Rs2.W[0]) - (Rs1.W[0] * Rs2.W[1]); // SMXDS32
```

Return value stored in long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

(RV64 Only) Non-SIMD 32-bit Shift Instructions

```
__STATIC_FORCEINLINE long __RV_SRAIW_U(int a, unsigned int b)

group NMSIS_Core_DSP_Intrinsic_RV64_NON_SIMD_32B_SHIFT

(RV64 Only) Non-SIMD 32-bit Shift Instructions

there are 1 (RV64 Only) Non-SIMD 32-bit Shift Instructions
```

Functions

```
__STATIC_FORCEINLINE long __RV_SRAIW_U(int a, unsigned int b)
SRAIW.u (Rounding Shift Right Arithmetic Immediate Word)

Type: DSP (RV64 only)
Syntax:

SRAIW.u Rd, Rs1, imm5u
```

Purpose: Perform a 32-bit arithmetic right shift operation with rounding. The shift amount is an immediate value.

Description: This instruction right-shifts the lower 32-bit content of Rs1 arithmetically. The shifted out bits are filled with the sign-bit Rs1(31) and the shift amount is specified by the imm5u constant. For the rounding operation, a value of 1 is added to the most significant discarded bit of the data to calculate the final result. And the result is sign-extended and written to Rd.

Operations:

```
sa = imm5u;
if (sa != 0) {
  res[31:-1] = SE33(Rs1[31:(sa-1)]) + 1;
  Rd = SE32(res[31:0]);
} else {
  Rd = SE32(Rs1.W[0]);
}
```

Return value stored in long type

Parameters

- [in] a: int type of value stored in a
- [in] b: unsigned int type of value stored in b

32-bit Packing Instructions

```
__STATIC_FORCEINLINE unsigned long __RV_PKBB32 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_PKBT32 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_PKTT32 (unsigned long a, unsigned long b)
__STATIC_FORCEINLINE unsigned long __RV_PKTB32 (unsigned long a, unsigned long b)
group NMSIS_Core_DSP_Intrinsic_RV64_32B_PACK
32-bit Packing Instructions
```

There are four 32-bit packing instructions here

Functions

```
__STATIC_FORCEINLINE unsigned long __RV_PKBB32 (unsigned long a, unsigned long b)
PKBB32 (Pack Two 32-bit Data from Both Bottom Half)
```

Type: DSP (RV64 Only)

Syntax:

```
PKBB32 Rd, Rs1, Rs2
PKBT32 Rd, Rs1, Rs2
PKTT32 Rd, Rs1, Rs2
PKTB32 Rd, Rs1, Rs2
```

Purpose: Pack 32-bit data from 64-bit chunks in two registers.

- PKBB32: bottom.bottom
- PKBT32: bottom.top
- PKTT32: top.top
- PKTB32: top.bottom

Description: (PKBB32) moves Rs1.W[0] to Rd.W[1] and moves Rs2.W[0] to Rd.W[0]. (PKBT32) moves Rs1.W[0] to Rd.W[1] and moves Rs2.W[1] to Rd.W[0]. (PKTT32) moves Rs1.W[1] to Rd.W[1] and moves Rs2.W[1] to Rd.W[0]. (PKTB32) moves Rs1.W[1] to Rd.W[1] and moves Rs2.W[0] to Rd.W[0].

Operations:

```
Rd = CONCAT(Rs1.W[_*0*_], Rs2.W[_*0*_]); // PKBB32
Rd = CONCAT(Rs1.W[_*0*_], Rs2.W[_*1*_]); // PKBT32
Rd = CONCAT(Rs1.W[_*1*_], Rs2.W[_*1*_]); // PKTT32
Rd = CONCAT(Rs1.W[_*1*_], Rs2.W[_*0*_]); // PKTB32
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

• [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_PKBT32(unsigned long a, unsigned long b)
PKBT32 (Pack Two 32-bit Data from Bottom and Top Half)

Type: DSP (RV64 Only)

Syntax:

```
PKBB32 Rd, Rs1, Rs2
PKBT32 Rd, Rs1, Rs2
PKTT32 Rd, Rs1, Rs2
PKTB32 Rd, Rs1, Rs2
```

Purpose: Pack 32-bit data from 64-bit chunks in two registers.

- PKBB32: bottom.bottom
- PKBT32: bottom.top
- PKTT32: top.top
- PKTB32: top.bottom

Description: (PKBB32) moves Rs1.W[0] to Rd.W[1] and moves Rs2.W[0] to Rd.W[0]. (PKBT32) moves Rs1.W[0] to Rd.W[1] and moves Rs2.W[1] to Rd.W[0]. (PKTT32) moves Rs1.W[1] to Rd.W[1] and moves Rs2.W[1] to Rd.W[0]. (PKTB32) moves Rs1.W[1] to Rd.W[1] and moves Rs2.W[0] to Rd.W[0].

Operations:

```
Rd = CONCAT(Rs1.W[_*0*_], Rs2.W[_*0*_]); // PKBB32
Rd = CONCAT(Rs1.W[_*0*_], Rs2.W[_*1*_]); // PKBT32
Rd = CONCAT(Rs1.W[_*1*_], Rs2.W[_*1*_]); // PKTT32
Rd = CONCAT(Rs1.W[_*1*_], Rs2.W[_*0*_]); // PKTB32
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_PKTT32(unsigned long a, unsigned long b)
PKTT32(Pack Two 32-bit Data from Both Top Half)

Type: DSP (RV64 Only)

Syntax:

```
PKBB32 Rd, Rs1, Rs2
PKBT32 Rd, Rs1, Rs2
PKTT32 Rd, Rs1, Rs2
PKTB32 Rd, Rs1, Rs2
```

Purpose: Pack 32-bit data from 64-bit chunks in two registers.

- PKBB32: bottom.bottom
- PKBT32: bottom.top
- PKTT32: top.top
- PKTB32: top.bottom

Description: (PKBB32) moves Rs1.W[0] to Rd.W[1] and moves Rs2.W[0] to Rd.W[0]. (PKBT32) moves Rs1.W[0] to Rd.W[1] and moves Rs2.W[1] to Rd.W[0]. (PKTT32) moves Rs1.W[1] to Rd.W[1] and moves Rs2.W[1] to Rd.W[0]. (PKTB32) moves Rs1.W[1] to Rd.W[1] and moves Rs2.W[0] to Rd.W[0].

Operations:

```
Rd = CONCAT(Rs1.W[_*0*_], Rs2.W[_*0*_]); // PKBB32
Rd = CONCAT(Rs1.W[_*0*_], Rs2.W[_*1*_]); // PKBT32
Rd = CONCAT(Rs1.W[_*1*_], Rs2.W[_*1*_]); // PKTT32
Rd = CONCAT(Rs1.W[_*1*_], Rs2.W[_*0*_]); // PKTB32
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_PKTB32(unsigned long a, unsigned long b)
PKTB32(Pack Two 32-bit Data from Top and Bottom Half)

Type: DSP (RV64 Only)

Syntax:

```
PKBB32 Rd, Rs1, Rs2
PKBT32 Rd, Rs1, Rs2
PKTT32 Rd, Rs1, Rs2
PKTB32 Rd, Rs1, Rs2
```

Purpose: Pack 32-bit data from 64-bit chunks in two registers.

- PKBB32: bottom.bottom
- PKBT32: bottom.top
- PKTT32: top.top
- PKTB32: top.bottom

Description: (PKBB32) moves Rs1.W[0] to Rd.W[1] and moves Rs2.W[0] to Rd.W[0]. (PKBT32) moves Rs1.W[0] to Rd.W[1] and moves Rs2.W[1] to Rd.W[0]. (PKTT32) moves Rs1.W[1] to Rd.W[1] and moves Rs2.W[1] to Rd.W[0]. (PKTB32) moves Rs1.W[1] to Rd.W[1] and moves Rs2.W[0] to Rd.W[0].

Operations:

```
Rd = CONCAT (Rs1.W[_*0*_], Rs2.W[_*0*_]); // PKBB32
Rd = CONCAT (Rs1.W[_*0*_], Rs2.W[_*1*_]); // PKBT32
Rd = CONCAT (Rs1.W[_*1*_], Rs2.W[_*1*_]); // PKTT32
Rd = CONCAT (Rs1.W[_*1*_], Rs2.W[_*0*_]); // PKTB32
```

Return value stored in unsigned long type

Parameters

- [in] a: unsigned long type of value stored in a
- [in] b: unsigned long type of value stored in b

group NMSIS_Core_DSP_Intrinsic_RV64_ONLY

RV64 Only Instructions.

Nuclei Customized DSP Instructions

```
__STATIC_FORCEINLINE unsigned long long __RV_DKHM8(unsigned long long a, unsigned long long
_STATIC_FORCEINLINE unsigned long long __RV_DKABS8(unsigned long long a)
__STATIC_FORCEINLINE unsigned long long __RV_DKABS16(unsigned long long a)
_STATIC_FORCEINLINE unsigned long long __RV_DKSLRA8(unsigned long long a, int b)
 _STATIC_FORCEINLINE unsigned long long __RV_DKSLRA16(unsigned long long a, int b)
__STATIC_FORCEINLINE unsigned long long __RV_DKADD8(unsigned long long a, unsigned long long
__STATIC_FORCEINLINE unsigned long long __RV_DKADD16(unsigned long long a, unsigned long long long a
__STATIC_FORCEINLINE unsigned long long __RV_DKSUB16(unsigned long long a, unsigned long 1 \circ
 _STATIC_FORCEINLINE unsigned long __RV_EXPD80(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_EXPD81(unsigned long a)
__STATIC_FORCEINLINE unsigned long __RV_EXPD82(unsigned long a)
 _STATIC_FORCEINLINE unsigned long __RV_EXPD83(unsigned long a)
group NMSIS_Core_DSP_Intrinsic_NUCLEI_CUSTOM
   (RV32 only) Nuclei Customized DSP Instructions
```

Functions

__STATIC_FORCEINLINE unsigned long long __RV_DKHM8 (unsigned long long a, unsigned long DKHM8 (64-bit SIMD Signed Saturating Q7 Multiply)

Type: SIMD

This is Nuclei customized DSP instructions only for RV32

Syntax:

```
DKHM8 Rd, Rs1, Rs2
# Rd, Rs1, Rs2 are all even/odd pair of registers
```

Purpose: Do Q7xQ7 element multiplications simultaneously. The Q14 results are then reduced to Q7 numbers again.

Description: For the DKHM8 instruction, multiply the top 8-bit Q7 content of 16-bit chunks in Rs1 with the top 8-bit Q7 content of 16-bit chunks in Rs2. At the same time, multiply the bottom 8-bit Q7 content of 16-bit chunks in Rs1 with the bottom 8-bit Q7 content of 16-bit chunks in Rs2.

The Q14 results are then right-shifted 7-bits and saturated into Q7 values. The Q7 results are then written into Rd. When both the two Q7 inputs of a multiplication are 0x80, saturation will happen. The result will be saturated to 0x7F and the overflow flag OV will be set.

Operations:

```
oplt = Rs1.B[x+1]; op2t = Rs2.B[x+1]; // top
op1b = Rs1.B[x]; op2b = Rs2.B[x]; // bottom
for ((aop,bop,res) in [(op1t,op2t,rest), (op1b,op2b,resb)]) {
   if (0x80 != aop | 0x80 != bop) {
     res = (aop s* bop) >> 7;
   } else {
     res= 0x7F;
     OV = 1;
   }
}
Rd.H[x/2] = concat(rest, resb);
for RV32, x=0,2,4,6
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned long long type of value stored in a
- [in] b: unsigned long long type of value stored in b

__STATIC_FORCEINLINE unsigned long long __RV_DKHM16(unsigned long long a, unsigned lon DKHM16(64-bit SIMD Signed Saturating Q15 Multiply)

Type: SIMD

Syntax:

```
DKHM16 Rd, Rs1, Rs2
# Rd, Rs1, Rs2 are all even/odd pair of registers
```

Purpose: Do Q15xQ15 element multiplications simultaneously. The Q30 results are then reduced to Q15 numbers again.

Description: For the DKHM16 instruction, multiply the top 16-bit Q15 content of 32-bit chunks in Rs1 with the top 16-bit Q15 content of 32-bit chunks in Rs2. At the same time, multiply the bottom 16-bit Q15 content of 32-bit chunks in Rs1 with the bottom 16-bit Q15 content of 32-bit chunks in Rs2.

The Q30 results are then right-shifted 15-bits and saturated into Q15 values. The Q15 results are then written into Rd. When both the two Q15 inputs of a multiplication are 0x8000, saturation will happen. The result will be saturated to 0x7FFF and the overflow flag OV will be set.

Operations:

```
oplt = Rs1.H[x+1]; op2t = Rs2.H[x+1]; // top
oplb = Rs1.H[x]; op2b = Rs2.H[x]; // bottom
for ((aop,bop,res) in [(op1t,op2t,rest), (op1b,op2b,resb)]) {
   if (0x8000 != aop | 0x8000 != bop) {
     res = (aop s* bop) >> 15;
   } else {
     res= 0x7FFF;
     OV = 1;
   }
}
Rd.W[x/2] = concat(rest, resb);
for RV32: x=0, 2
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned long long type of value stored in a
- [in] b: unsigned long long type of value stored in b

__STATIC_FORCEINLINE unsigned long long __RV_DKABS8 (unsigned long long a) DKABS8 (64-bit SIMD 8-bit Saturating Absolute)

Type: SIMD

Syntax:

```
DKABS8 Rd, Rs1
# Rd, Rs1 are all even/odd pair of registers
```

Purpose: Get the absolute value of 8-bit signed integer elements simultaneously.

Description: This instruction calculates the absolute value of 8-bit signed integer elements stored in Rs1 and writes the element results to Rd. If the input number is 0x80, this instruction generates 0x7f as the output and sets the OV bit to 1.

Operations:

```
src = Rs1.B[x];
if (src == 0x80) {
    src = 0x7f;
    OV = 1;
} else if (src[7] == 1)
    src = -src;
}
Rd.B[x] = src;
for RV32: x=7...0,
```

Return value stored in unsigned long long type

Parameters

• [in] a: unsigned long long type of value stored in a

__STATIC_FORCEINLINE unsigned long long __RV_DKABS16 (unsigned long long a)

DKABS16 (64-bit SIMD 16-bit Saturating Absolute)

Type: SIMD

Syntax:

```
DKABS16 Rd, Rs1
# Rd, Rs1 are all even/odd pair of registers
```

Purpose: Get the absolute value of 16-bit signed integer elements simultaneously.

Description: This instruction calculates the absolute value of 16-bit signed integer elements stored in Rs1 and writes the element results to Rd. If the input number is 0x8000, this instruction generates 0x7fff as the output and sets the OV bit to 1.

Operations:

```
src = Rs1.H[x];
if (src == 0x8000) {
    src = 0x7fff;
    OV = 1;
} else if (src[15] == 1)
```

(continues on next page)

(continued from previous page)

```
src = -src;
}
Rd.H[x] = src;
for RV32: x=3...0,
```

Return value stored in unsigned long long type

Parameters

• [in] a: unsigned long long type of value stored in a

__STATIC_FORCEINLINE unsigned long long __RV_DKSLRA8 (unsigned long long a, int b)

DKSLRA8 (64-bit SIMD 8-bit Shift Left Logical with Saturation or Shift Right Arithmetic)

Type: SIMD

Syntax:

```
DKSLRA8 Rd, Rs1, Rs2
# Rd, Rs1 are all even/odd pair of registers
```

Purpose: Do 8-bit elements logical left (positive) or arithmetic right (negative) shift operation with Q7 saturation for the left shift.

Description: The 8-bit data elements of Rs1 are left-shifted logically or right-shifted arithmetically based on the value of Rs2[3:0]. Rs2[3:0] is in the signed range of [-2^3, 2^3-1]. A positive Rs2[3:0] means logical left shift and a negative Rs2[3:0] means arithmetic right shift. The shift amount is the absolute value of Rs2[3:0]. However, the behavior of Rs2[3:0]==-2^3 (0x8) is defined to be equivalent to the behavior of Rs2[3:0]==-(2^3-1) (0x9). The left-shifted results are saturated to the 8-bit signed integer range of [-2^7, 2^7-1]. If any saturation happens, this instruction sets the OV flag. The value of Rs2[31:4] will not affect this instruction.

Operations:

```
if (Rs2[3:0] < 0) {
    sa = -Rs2[3:0];
    sa = (sa == 8)? 7 : sa;
    Rd.B[x] = SE8(Rs1.B[x][7:sa]);
} else {
    sa = Rs2[2:0];
    res[(7+sa):0] = Rs1.B[x] <<(logic) sa;
    if (res > (2^7)-1) {
        res[7:0] = 0x7f; OV = 1;
    } else if (res < -2^7) {
        res[7:0] = 0x80; OV = 1;
    }
    Rd.B[x] = res[7:0];
}
for RV32: x=7...0,</pre>
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned long long type of value stored in a
- [in] b: int type of value stored in b

__STATIC_FORCEINLINE unsigned long long __RV_DKSLRA16 (unsigned long long a, int b)

DKSLRA16 (64-bit SIMD 16-bit Shift Left Logical with Saturation or Shift Right Arithmetic)

Type: SIMD

Syntax:

```
DKSLRA16 Rd, Rs1, Rs2
# Rd, Rs1 are all even/odd pair of registers
```

Purpose: Do 16-bit elements logical left (positive) or arithmetic right (negative) shift operation with Q15 saturation for the left shift.

Description: The 16-bit data elements of Rs1 are left-shifted logically or right-shifted arithmetically based on the value of Rs2[4:0]. Rs2[4:0] is in the signed range of [-2^4, 2^4-1]. A positive Rs2[4:0] means logical left shift and a negative Rs2[4:0] means arithmetic right shift. The shift amount is the absolute value of Rs2[4:0]. However, the behavior of Rs2[4:0]==-2^4 (0x10) is defined to be equivalent to the behavior of Rs2[4:0]==-(2^4-1) (0x11). The left-shifted results are saturated to the 16-bit signed integer range of [-2^15, 2^15-1]. After the shift, saturation, or rounding, the final results are written to Rd. If any saturation happens, this instruction sets the OV flag. The value of Rs2[31:5] will not affect this instruction.

Operations:

```
if (Rs2[4:0] < 0) {
    sa = -Rs2[4:0];
    sa = (sa == 16)? 15 : sa;
    Rd.H[x] = SE16(Rs1.H[x][15:sa]);
} else {
    sa = Rs2[3:0];
    res[(15+sa):0] = Rs1.H[x] <<(logic) sa;
    if (res > (2^15)-1) {
        res[15:0] = 0x7fff; OV = 1;
    } else if (res < -2^15) {
        res[15:0] = 0x8000; OV = 1;
    }
    d.H[x] = res[15:0];
}
for RV32: x=3...0,</pre>
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned long long type of value stored in a
- [in] b: int type of value stored in b

_STATIC_FORCEINLINE unsigned long long __RV_DKADD8 (unsigned long long a, unsigned lon DKADD8 (64-bit SIMD 8-bit Signed Saturating Addition)

Type: SIMD

Syntax:

```
DKADD8 Rd, Rs1, Rs2
# Rd, Rs1, Rs2 are all even/odd pair of registers
```

Purpose: Do 8-bit signed integer element saturating additions simultaneously.

Description: This instruction adds the 8-bit signed integer elements in Rs1 with the 8-bit signed integer elements in Rs2. If any of the results are beyond the Q7 number range $(-2^{7} \le Q7 \le 2^{7-1})$, they are saturated to the range and the OV bit is set to 1. The saturated results are written to Rd.

Operations:

```
res[x] = Rs1.B[x] + Rs2.B[x];
if (res[x] > 127) {
    res[x] = 127;
    OV = 1;
} else if (res[x] < -128) {
    res[x] = -128;
    OV = 1;
}
Rd.B[x] = res[x];
for RV32: x=7...0,</pre>
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned long long type of value stored in a
- [in] b: unsigned long long type of value stored in b

_STATIC_FORCEINLINE unsigned long long __RV_DKADD16(unsigned long long a, unsigned lo DKADD16(64-bit SIMD 16-bit Signed Saturating Addition)

Type: SIMD

Syntax:

```
DKADD16 Rd, Rs1, Rs2
# Rd, Rs1, Rs2 are all even/odd pair of registers
```

Purpose: Do 16-bit signed integer element saturating additions simultaneously.

Description: This instruction adds the 16-bit signed integer elements in Rs1 with the 16-bit signed integer elements in Rs2. If any of the results are beyond the Q15 number range ($-2^15 \le 2^15-1$), they are saturated to the range and the OV bit is set to 1. The saturated results are written to Rd.

Operations:

```
res[x] = Rs1.H[x] + Rs2.H[x];
if (res[x] > 32767) {
   res[x] = 32767;
   OV = 1;
} else if (res[x] < -32768) {
   res[x] = -32768;
   OV = 1;
}
Rd.H[x] = res[x];
for RV32: x=3...0,</pre>
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned long long type of value stored in a
- [in] b: unsigned long long type of value stored in b

__STATIC_FORCEINLINE unsigned long long __RV_DKSUB8 (unsigned long long a, unsigned lon DKSUB8 (64-bit SIMD 8-bit Signed Saturating Subtraction)

Type: SIMD

Syntax:

```
DKSUB8 Rd, Rs1, Rs2
# Rd, Rs1, Rs2 are all even/odd pair of registers
```

Purpose: Do 8-bit signed elements saturating subtractions simultaneously.

Description: This instruction subtracts the 8-bit signed integer elements in Rs2 from the 8-bit signed integer elements in Rs1. If any of the results are beyond the Q7 number range $(-2^7 \le Q7 \le 2^7 - 1)$, they are saturated to the range and the OV bit is set to 1. The saturated results are written to Rd.

Operations:

```
res[x] = Rs1.B[x] - Rs2.B[x];
if (res[x] > (2^7)-1) {
  res[x] = (2^7)-1;
  oV = 1;
} else if (res[x] < -2^7) {
  res[x] = -2^7;
  oV = 1;
}
Rd.B[x] = res[x];
for RV32: x=7...0,</pre>
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned long long type of value stored in a
- [in] b: unsigned long long type of value stored in b

_STATIC_FORCEINLINE unsigned long long __RV_DKSUB16(unsigned long long a, unsigned lo DKSUB16(64-bit SIMD 16-bit Signed Saturating Subtraction)

Type: SIMD

Syntax:

```
DKSUB16 Rd, Rs1, Rs2
# Rd, Rs1, Rs2 are all even/odd pair of registers
```

Purpose: Do 16-bit signed integer elements saturating subtractions simultaneously.

Description: This instruction subtracts the 16-bit signed integer elements in Rs2 from the 16-bit signed integer elements in Rs1. If any of the results are beyond the Q15 number range ($-2^15 \le 2^15-1$), they are saturated to the range and the OV bit is set to 1. The saturated results are written to Rd.

Operations:

```
res[x] = Rs1.H[x] - Rs2.H[x];
if (res[x] > (2^15)-1) {
  res[x] = (2^15)-1;
  OV = 1;
} else if (res[x] < -2^15) {
  res[x] = -2^15;</pre>
```

(continues on next page)

(continued from previous page)

```
OV = 1;
}
Rd.H[x] = res[x];
for RV32: x=3...0,
```

Return value stored in unsigned long long type

Parameters

- [in] a: unsigned long long type of value stored in a
- [in] b: unsigned long long type of value stored in b

__STATIC_FORCEINLINE unsigned long __RV_EXPD80(unsigned long a)

EXPD80 (Expand and Copy Byte 0 to 32bit)

Type: DSP

Syntax:

```
EXPD80 Rd, Rs1
```

Purpose: Copy 8-bit data from 32-bit chunks into 4 bytes in a register.

Description: Moves Rs1.B[0][7:0] to Rd.[0][7:0], Rd.[1][7:0], Rd.[2][7:0], Rd.[3][7:0]

Operations:

```
Rd.W[x][31:0] = CONCAT(Rs1.B[0][7:0], Rs1.B[0][7:0], Rs1.B[0][7:0], Rs1.

B[0][7:0]);

for RV32: x=0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_EXPD81(unsigned long a)
```

EXPD81 (Expand and Copy Byte 1 to 32bit)

Type: DSP

Syntax:

```
EXPD81 Rd, Rs1
```

Purpose: Copy 8-bit data from 32-bit chunks into 4 bytes in a register.

Description: Moves Rs1.B[1][7:0] to Rd.[0][7:0], Rd.[1][7:0], Rd.[2][7:0], Rd.[3][7:0]

Operations:

```
Rd.W[x][31:0] = CONCAT(Rs1.B[1][7:0], Rs1.B[1][7:0], Rs1.B[1][7:0], Rs1.B[1][7:0]);

GOVERNMENT OF The second content of the second
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_EXPD82(unsigned long a)
```

EXPD82 (Expand and Copy Byte 2 to 32bit)

Type: DSP Syntax:

```
EXPD82 Rd, Rs1
```

Purpose: Copy 8-bit data from 32-bit chunks into 4 bytes in a register.

Description: Moves Rs1.B[2][7:0] to Rd.[0][7:0], Rd.[1][7:0], Rd.[2][7:0], Rd.[3][7:0]

Operations:

```
Rd.W[x][31:0] = CONCAT(Rs1.B[2][7:0], Rs1.B[2][7:0], Rs1.B[2][7:0], Rs1.

B[2][7:0]);

for RV32: x=0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

```
__STATIC_FORCEINLINE unsigned long __RV_EXPD83(unsigned long a)
```

EXPD83 (Expand and Copy Byte 3 to 32bit)

Type: DSP Syntax:

```
EXPD83 Rd, Rs1
```

Purpose: Copy 8-bit data from 32-bit chunks into 4 bytes in a register.

Description: Moves Rs1.B[3][7:0] to Rd.[0][7:0], Rd.[1][7:0], Rd.[2][7:0], Rd.[3][7:0]

Operations:

```
Rd.W[x][31:0] = CONCAT(Rs1.B[3][7:0], Rs1.B[3][7:0], Rs1.B[3][7:0], Rs1.B[3][7:0], Rs1.B[3][7:0]);

for RV32: x=0
```

Return value stored in unsigned long type

Parameters

• [in] a: unsigned long type of value stored in a

group NMSIS_Core_DSP_Intrinsic

Functions that generate RISC-V DSP SIMD instructions.

The following functions generate specified RISC-V SIMD instructions that cannot be directly accessed by compiler.

- DSP ISA Extension Instruction Summary
 - Shorthand Definitions

```
* r.H == rH1: r[31:16], r.L == r.H0: r[15:0]
```

```
* r.B3: r[31:24], r.B2: r[23:16], r.B1: r[15:8], r.B0: r[7:0]
```

- * r.B[x]: r[(x*8+7):(x*8+0)]
- * r.H[x]: r[(x*16+7):(x*16+0)]
- * r.W[x]: r[(x*32+31):(x*32+0)]
- * r[xU]: the upper 32-bit of a 64-bit number; xU represents the GPR number that contains this upper part 32-bit value.
- * r[xL]: the lower 32-bit of a 64-bit number; xL represents the GPR number that contains this lower part 32-bit value.
- * r[xU].r[xL]: a 64-bit number that is formed from a pair of GPRs.
- * s>>: signed arithmetic right shift:
- * u>>: unsigned logical right shift
- * SAT.Qn(): Saturate to the range of [-2^n, 2^n-1], if saturation happens, set PSW.OV.
- * SAT.Um(): Saturate to the range of [0, 2^m-1], if saturation happens, set PSW.OV.
- * RUND(): Indicate rounding, i.e., add 1 to the most significant discarded bit for right shift or MSW-type multiplication instructions.
- * Sign or Zero Extending functions:
 - · SEm(data): Sign-Extend data to m-bit.:
 - · ZEm(data): Zero-Extend data to m-bit.
- * ABS(x): Calculate the absolute value of x.
- * CONCAT(x,y): Concatinate x and y to form a value.
- * u<: Unsinged less than comparison.
- * u<=: Unsinged less than & equal comparison.
- * u>: Unsinged greater than comparison.
- * s*: Signed multiplication.
- * u*: Unsigned multiplication.

2.5.8 Peripheral Access

I volatile const

o volatile
IO volatile
IM volatile const
OM volatile
IOM volatile
_VAL2FLD (field, value) (((uint32_t)(value) << field ## _Pos) & field ## _Msk)
FI.D2VAI. (field value) (((uint32 t)(value) & field ## Msk) >> field ## Pos

group NMSIS_Core_PeriphAccess

Naming conventions and optional features for accessing peripherals.

The section below describes the naming conventions, requirements, and optional features for accessing device specific peripherals. Most of the rules also apply to the core peripherals.

The **Device Header File <device.h>** contains typically these definition and also includes the core specific header files.

Defines

The macro _VAL2FLD uses the #define's _Pos and _Msk of the related bit field to shift bit-field values for assigning to a register.

Example:

```
ECLIC->CFG = _VAL2FLD(CLIC_CLICCFG_NLBIT, 3);
```

Return Masked and shifted value.

Parameters

• [in] field: Name of the register bit field.

Mask and shift a bit field value for use in a register bit range.

• [in] value: Value of the bit field. This parameter is interpreted as an uint32_t type.

```
_FLD2VAL (field, value) (((uint32_t)(value) & field ## _Msk) >> field ## _Pos)
```

Mask and shift a register value to extract a bit filed value.

The macro _FLD2VAL uses the #define's _Pos and _Msk of the related bit field to extract the value of a bit field from a register.

Example:

```
nlbits = _FLD2VAL(CLIC_CLICCFG_NLBIT, ECLIC->CFG);
```

Return Masked and shifted bit field value.

Parameters

- [in] field: Name of the register bit field.
- [in] value: Value of register. This parameter is interpreted as an uint32_t type.

2.5.9 Systick Timer(SysTimer)

Click Nuclei Timer Unit¹⁷ to learn about Core Timer Unit in Nuclei ISA Spec.

SysTimer API

```
__STATIC_FORCEINLINE void SysTimer_SetLoadValue(uint64_t value)
__STATIC_FORCEINLINE uint64_t SysTimer_GetLoadValue(void)
_STATIC_FORCEINLINE void SysTimer_SetCompareValue(uint64_t value)
_STATIC_FORCEINLINE uint64_t SysTimer_GetCompareValue(void)
__STATIC_FORCEINLINE void SysTimer_Start (void)
__STATIC_FORCEINLINE void SysTimer_Stop(void)
__STATIC_FORCEINLINE void SysTimer_SetControlValue(uint32_t mctl)
__STATIC_FORCEINLINE uint32_t SysTimer_GetControlValue(void)
__STATIC_FORCEINLINE void SysTimer_SetSWIRQ(void)
__STATIC_FORCEINLINE void SysTimer_ClearSWIRQ(void)
STATIC FORCEINLINE uint32 t SysTimer GetMsipValue(void)
__STATIC_FORCEINLINE void SysTimer_SetMsipValue(uint32_t msip)
__STATIC_FORCEINLINE void SysTimer_SoftwareReset (void)
__STATIC_INLINE uint32_t SysTick_Config(uint64_t ticks)
__STATIC_FORCEINLINE uint32_t SysTick_Reload(uint64_t ticks)
group NMSIS_Core_SysTimer
    Functions that configure the Core System Timer.
```

Functions

__STATIC_FORCEINLINE void SysTimer_SetLoadValue(uint64_t value)

Set system timer load value.

This function set the system timer load value in MTIMER register.

Remark

- Load value is 64bits wide.
- SysTimer_GetLoadValue

Parameters

• [in] value: value to set system timer MTIMER register.

¹⁷ https://doc.nucleisys.com/nuclei_spec/isa/timer.html

__STATIC_FORCEINLINE uint64_t SysTimer_GetLoadValue(void)

Get system timer load value.

This function get the system timer current value in MTIMER register.

Return current value(64bit) of system timer MTIMER register.

Remark

- Load value is 64bits wide.
- SysTimer_SetLoadValue

__STATIC_FORCEINLINE void SysTimer_SetCompareValue(uint64_t value)

Set system timer compare value.

This function set the system Timer compare value in MTIMERCMP register.

Remark

- Compare value is 64bits wide.
- If compare value is larger than current value timer interrupt generate.
- Modify the load value or compare value less to clear the interrupt.
- SysTimer_GetCompareValue

Parameters

• [in] value: compare value to set system timer MTIMERCMP register.

__STATIC_FORCEINLINE uint64_t SysTimer_GetCompareValue(void)

Get system timer compare value.

This function get the system timer compare value in MTIMERCMP register.

Return compare value of system timer MTIMERCMP register.

Remark

- Compare value is 64bits wide.
- SysTimer_SetCompareValue

__STATIC_FORCEINLINE void SysTimer_Start(void)

Enable system timer counter running.

Enable system timer counter running by clear TIMESTOP bit in MTIMECTL register.

__STATIC_FORCEINLINE void SysTimer_Stop(void)

Stop system timer counter running.

Stop system timer counter running by set TIMESTOP bit in MTIMECTL register.

__STATIC_FORCEINLINE void SysTimer_SetControlValue(uint32_t mctl)

Set system timer control value.

This function set the system timer MTIMECTL register value.

Remark

- Bit TIMESTOP is used to start and stop timer. Clear TIMESTOP bit to 0 to start timer, otherwise to stop timer.
- Bit CMPCLREN is used to enable auto MTIMER clear to zero when MTIMER >= MTIMER-CMP. Clear CMPCLREN bit to 0 to stop auto clear MTIMER feature, otherwise to enable it.

- Bit CLKSRC is used to select timer clock source. Clear CLKSRC bit to 0 to use mtime_toggle_a, otherwise use core_clk_aon
- SysTimer_GetControlValue

Parameters

• [in] mctl: value to set MTIMECTL register

__STATIC_FORCEINLINE uint32_t SysTimer_GetControlValue(void)

Get system timer control value.

This function get the system timer MTIMECTL register value.

Return MTIMECTL register value

Remark

• SysTimer_SetControlValue

__STATIC_FORCEINLINE void SysTimer_SetSWIRQ(void)

Trigger or set software interrupt via system timer.

This function set the system timer MSIP bit in MSIP register.

Remark

- Set system timer MSIP bit and generate a SW interrupt.
- SysTimer_ClearSWIRQ
- SysTimer_GetMsipValue

_STATIC_FORCEINLINE void SysTimer_ClearSWIRQ(void)

Clear system timer software interrupt pending request.

This function clear the system timer MSIP bit in MSIP register.

Remark

- Clear system timer MSIP bit in MSIP register to clear the software interrupt pending.
- SysTimer_SetSWIRQ
- SysTimer_GetMsipValue

__STATIC_FORCEINLINE uint32_t SysTimer_GetMsipValue(void)

Get system timer MSIP register value.

This function get the system timer MSIP register value.

Return Value of Timer MSIP register.

Remark

- Bit0 is SW interrupt flag. Bit0 is 1 then SW interrupt set. Bit0 is 0 then SW interrupt clear.
- SysTimer_SetSWIRQ
- SysTimer_ClearSWIRQ

__STATIC_FORCEINLINE void SysTimer_SetMsipValue(uint32_t msip)

Set system timer MSIP register value.

This function set the system timer MSIP register value.

Parameters

• [in] msip: value to set MSIP register

__STATIC_FORCEINLINE void SysTimer_SoftwareReset(void)

Do software reset request.

This function will do software reset request through MTIMER

- Software need to write SysTimer_MSFRST_KEY (page 86) to generate software reset request
- The software request flag can be cleared by reset operation to clear

Remark

- The software reset is sent to SoC, SoC need to generate reset signal and send back to Core
- This function will not return, it will do while(1) to wait the Core reset happened

_STATIC_INLINE uint32_t SysTick_Config(uint64_t ticks)

System Tick Configuration.

Initializes the System Timer and its non-vector interrupt, and starts the System Tick Timer.

In our default implementation, the timer counter will be set to zero, and it will start a timer compare non-vector interrupt when it matchs the ticks user set, during the timer interrupt user should reload the system tick using SysTick_Reload function or similar function written by user, so it can produce period timer interrupt.

Return 0 Function succeeded.

Return 1 Function failed.

Remark

- For __NUCLEI_N_REV (page 58) >= 0x0104, the CMPCLREN bit in MTIMECTL is introduced, but we assume that the CMPCLREN bit is set to 0, so MTIMER register will not be auto cleared to 0 when MTIMER >= MTIMERCMP.
- When the variable __Vendor_SysTickConfig is set to 1, then the function SysTick_Config is not included.
- In this case, the file **Device>.h** must contain a vendor-specific implementation of this function.
- If user need this function to start a period timer interrupt, then in timer interrupt handler routine code, user should call SysTick_Reload with ticks to reload the timer.
- This function only available when __SYSTIMER_PRESENT == 1 and __ECLIC_PRESENT == 1 and __Vendor_SysTickConfig == 0

See

• SysTimer_SetCompareValue; SysTimer_SetLoadValue

Parameters

• [in] ticks: Number of ticks between two interrupts.

__STATIC_FORCEINLINE uint32_t SysTick_Reload(uint64_t ticks)

System Tick Reload.

Reload the System Timer Tick when the MTIMECMP reached TIME value

Return 0 Function succeeded.

Return 1 Function failed.

Remark

- For __NUCLEI_N_REV (page 58) >= 0x0104, the CMPCLREN bit in MTIMECTL is introduced, but for this SysTick_Config function, we assume this CMPCLREN bit is set to 0, so in interrupt handler function, user still need to set the MTIMERCMP or MTIMER to reload the system tick, if vendor want to use this timer's auto clear feature, they can define __Vendor_SysTickConfig to 1, and implement SysTick_Config and SysTick_Reload functions.
- When the variable __Vendor_SysTickConfig is set to 1, then the function SysTick_Reload is not included.
- In this case, the file **Device>.h** must contain a vendor-specific implementation of this function.
- This function only available when __SYSTIMER_PRESENT == 1 and __ECLIC_PRESENT == 1 and __Vendor_SysTickConfig == 0
- Since the MTIMERCMP value might overflow, if overflowed, MTIMER will be set to 0, and MTIMERCMP set to ticks

See

- SysTimer_SetCompareValue
- SysTimer_SetLoadValue

Parameters

• [in] ticks: Number of ticks between two interrupts.

SysTick Code Example

The code below shows the usage of the function SysTick_Config() and SysTick_Reload() with an GD32VF103 SoC.

Listing 3: gd32vf103_systick_example.c

```
#include "gd32vf103.h"
2
   volatile uint32_t msTicks = 0;
                                                                  /* Variable to store
   →millisecond ticks */
   #define CONFIG_TICKS
                                (SOC_TIMER_FREQ / 1000)
   #define SysTick_Handler
                                eclic_mtip_handler
6
   void SysTick_Handler(void) {
                                                                 /* SysTick interrupt_
   → Handler. */
     SysTimer_Reload(CONFIG_TICKS);
                                                                 /* Call SysTick_Reload to
   →reload timer. */
    msTicks++;
                                                                 /* See startup file
10
   →startup_gd32vf103.S for SysTick vector */
11
   }
12
   int main (void) {
13
     uint32_t returnCode;
14
15
     returnCode = SysTick_Config(CONFIG_TICKS);
                                                                 /* Configure SysTick to_
16
   →generate an interrupt every millisecond */
17
     if (returnCode != 0) {
                                                                 /* Check return code for
18
   ⇔errors */
       // Error Handling
19
```

(continues on next page)

(continued from previous page)

SysTimer Interrupt Code Example

The code below shows the usage of various NMSIS Timer Interrupt functions with an GD32VF103 device.

Listing 4: gd32vf103_timer_example1.c

```
#include "gd32vf103.h"
   void eclic_mtip_handler(void)
4
       uint64_t now = SysTimer_GetLoadValue();
       SysTimer_SetCompareValue(now + SOC_TIMER_FREQ/100);
6
   static uint32_t int_cnt = 0;
   void eclic_msip_handler(void)
10
11
       SysTimer_ClearSWIRQ();
       int_cnt++;
14
15
   void eclic_global_initialize(void)
16
17
       ECLIC_SetMth(0);
18
       ECLIC_SetCfgNlbits(3);
19
20
21
   int eclic_register_interrupt(IRQn_Type IRQn, uint8_t shv, uint32_t trig_mode, uint32_
22
   →lvl, uint32_t priority, void * handler)
23
       ECLIC_SetShvIRQ(IRQn, shv);
24
       ECLIC_SetTrigIRQ(IRQn, trig_mode);
       ECLIC_SetLevelIRQ(IRQn, lvl);
26
       ECLIC_SetPriorityIRQ(IRQn, priority);
27
       ECLIC_SetVector(IRQn, (rv_csr_t) (handler));
28
       ECLIC_EnableIRQ(IRQn);
29
       return 0;
31
32
   void setup_timer(void)
33
34
       SysTimer_SetLoadValue(0);
35
       SysTimer_SetCompareValue(SOC_TIMER_FREQ/100);
   int main (void)
39
40
       uint32 t returnCode;
41
42
                                                                      /* initialize ECLIC */
       eclic_global_initialize();
```

(continues on next page)

(continued from previous page)

```
44
                                                                      /* initialize timer */
45
       setup_timer();
46
       returnCode = eclic_register_interrupt(SysTimer_IRQn,1,2,8,0,eclic_mtip_handler); _
47

→/* register system timer interrupt */
48
       returnCode = eclic_register_interrupt(SysTimerSW_IRQn,1,2,8,0,eclic_msip_handler);
49
       /* register system timer SW interrupt */
50
                                                                      /* enable global
       __enable_irq();
51
   ⇒interrupt */
52
       SysTimer_SetSWIRQ();
                                                                      /* trigger timer SW.
   →interrupt */
54
       if (returnCode != 0) {
                                                                      /* Check return code.
55
   →for errors */
         // Error Handling
57
58
       while (1);
59
```

2.5.10 Interrupts and Exceptions

Description

This section explains how to use interrupts and exceptions and access functions for the Enhanced Core Local Interrupt Controller(ECLIC)¹⁸.

Nuclei provides a template file startup_device for each supported compiler. The file must be adapted by the silicon vendor to include interrupt vectors for all device-specific interrupt handlers. Each interrupt handler is defined as a weak function to an dummy handler. These interrupt handlers can be used directly in application software without being adapted by the programmer.

Click Interrupt¹⁹ to learn more about interrupt handling in Nuclei processor core.

NMI Interrupt

NMI interrupt²⁰ entry is stored by **CSR_MNVEC**. If CSR_MMSIC[9] is 1 then NMI entry is the same as **Exception** which get from CSR_MTVEC. If CSR_MMSIC[9] is 1 NMI entry is reset vector.

Exception

Exception²¹ has only 1 entry address which stored by CSR_MTVEC. All the exceptions will jump to the same entry exc_entry defined in intexc_<Device>.S.

The table below lists the core exception code of the Nuclei N/NX processors.

¹⁸ https://doc.nucleisys.com/nuclei_spec/isa/eclic.html

¹⁹ https://doc.nucleisys.com/nuclei_spec/isa/interrupt.html

²⁰ https://doc.nucleisys.com/nuclei_spec/isa/nmi.html

²¹ https://doc.nucleisys.com/nuclei_spec/isa/exception.html

	1	1
Exception Code	Value	Description
InsUnalign_EXCn	0	Instruction address misaligned
InsAccFault_EXCn	1	Instruction access fault
IlleIns_EXCn	2	Illegal instruction
Break_EXCn	3	Beakpoint
LdAddrUnalign_EXCn	4	Load address misaligned
LdFault_EXCn	5	Load access fault
StAddrUnalign_EXCn	6	Store or AMO address misaligned
StAccessFault_EXCn	7	Store or AMO access fault
UmodeEcall_EXCn	8	Environment call from User mode
MmodeEcall_EXCn	11	Environment call from Machine mode
NMI_EXCn	0xfff	NMI interrupt

Table 8: Core exception code of the Nuclei N/NX processors

Vector Table

The Vector Table defines the entry addresses of the ECLIC managed interrupts.

It is typically located at the beginning of the program memory, and you can modify CSR MTVT to reallocate the base address of this vector table, but you need to take care of the base address alignment according to the number of interrupts.

Number of Interrupt	Alignment Requirements of CSR MTVT
0 to 16	64-byte
17 to 32	128-byte
33 to 64	256-byte
65 to 128	512-byte
129 to 256	1KB
257 to 512	2KB
513 to 1024	4KB

Table 9: base address alignment according to the number of interrupts

Interrupt number 0~18 is reserved by Nuclei Core. 19~1023 could be used by Silicon Vendor Device.

Below is an example interrupt allocated table:

```
typedef enum IRQn {
      /***** Nuclei N/NX Processor Core Internal Interrupt Numbers.
      Reserved0_IRQn
                                       0,
                                              /*!< Internal reserved
         */
                                       1,
                                               /*!< Internal reserved
      Reserved1_IRQn
         */
      Reserved2_IRQn
                                               /*!< Internal reserved
5
         */
                                               /*!< System Timer SW interrupt
      SysTimerSW_IRQn
6
         */
                                               /*!< Internal reserved
      Reserved3_IRQn
         */
                                               /*!< Internal reserved
      Reserved4_IRQn
      Reserved5_IRQn
                                               /*!< Internal reserved
```

(continues on next page)

```
(continued from previous page)
                                          7,
                                                  /*!< System Timer Interrupt
       SysTimer_IRQn
10
                                                  /*!< Internal reserved
       Reserved6_IRQn
                                          8,
11
                                          9,
                                                  /*!< Internal reserved
       Reserved7_IRQn
12
       Reserved8_IRQn
                                         10,
                                                  /*!< Internal reserved
13
          */
   \hookrightarrow
                                                  /*!< Internal reserved
       Reserved9_IRQn
                                         11,
14
          */
                                         12,
                                                  /*!< Internal reserved
       Reserved10_IRQn
15
          */
       Reserved11_IRQn
                                         13,
                                                  /*!< Internal reserved
16
          */
       Reserved12_IRQn
                                         14,
                                                  /*!< Internal reserved
17
          */
       Reserved13_IRQn
                                         15,
                                                  /*!< Internal reserved
18
       Reserved14_IRQn
                                         16,
                                                  /*!< Internal reserved
19
       HardFault_IRQn
                                         17,
                                                  /*!< Hard Fault, storage access error
20
          */
       Reserved15_IRQn
                                      = 18,
                                                  /*!< Internal reserved
21
        */
22
       /***** GD32VF103 Specific External Interrupt Numbers
       WWDGT_IRQn
                                      = 19,
                                                  /*!< window watchDog timer interrupt</pre>
24
         */
       LVD_IRQn
                                      = 20,
                                                 /*! < LVD through EXTI line detect_
25
   →interrupt
                                                  /*!< tamper through EXTI line detect
26
       TAMPER_IRQn
                                      = 21,
                     :
                             :
27
28
                                         85,
                                                 /*! < CAN1 EWMC interrupt
       CAN1_EWMC_IRQn
29
         */
                                      = 86,
                                                 /*!< USBFS global interrupt
       USBFS_IRQn
       SOC_INT_MAX,
                                                  /*! < Number of total Interrupts
31
          */
   } IRQn_Type;
32
```

ECLIC API Definitions

When macro NMSIS_ECLIC_VIRTUAL is defined, the ECLIC access functions in the table below must be implemented for virtualizing ECLIC access.

These functions should be implemented in a separate source module. The original NMSIS-Core __ECLIC_xxx functions are always available independent of NMSIS_ECLIC_VIRTUAL macro.

ECLIC ACCESS FUNCTIONS	NMSIS-CORE FUNCTIONS FOR ECLIC
ECLIC_SetCfgNlbits (page 363)	ECLIC_SetCfgNlbits()
ECLIC_GetCfgNlbits (page 363)	ECLIC_GetCfgNlbits()
ECLIC_GetInfoVer (page 363)	ECLIC_GetInfoVer()
ECLIC_GetInfoCtlbits (page 363)	ECLIC_GetInfoCtlbits()
ECLIC_GetInfoNum (page 363)	ECLIC_GetInfoNum()
ECLIC_SetMth (page 363)	ECLIC_SetMth()
ECLIC_GetMth (page 363)	ECLIC_GetMth()
ECLIC_EnableIRQ (page 363)	ECLIC_EnableIRQ()
ECLIC_GetEnableIRQ (page 363)	ECLIC_GetEnableIRQ()
ECLIC_DisableIRQ (page 363)	ECLIC_DisableIRQ()
ECLIC_SetPendingIRQ (page 363)	ECLIC_SetPendingIRQ()
ECLIC_GetPendingIRQ (page 363)	ECLIC_GetPendingIRQ()
ECLIC_ClearPendingIRQ (page 363)	ECLIC_ClearPendingIRQ()
ECLIC_SetTrigIRQ (page 363)	ECLIC_SetTrigIRQ()
ECLIC_GetTrigIRQ (page 364)	ECLIC_GetTrigIRQ()
ECLIC_SetShvIRQ (page 364)	ECLIC_SetShvIRQ()
ECLIC_GetShvIRQ (page 364)	ECLIC_GetShvIRQ()
ECLIC_SetCtrlIRQ (page 364)	ECLIC_SetCtrlIRQ()
ECLIC_GetCtrlIRQ (page 364)	ECLIC_GetCtrlIRQ()
ECLIC_SetLevelIRQ (page 364)	ECLIC_SetLevelIRQ()
ECLIC_GetLevelIRQ (page 364)	ECLIC_GetLevelIRQ()
ECLIC_SetPriorityIRQ (page 364)	ECLIC_SetPriorityIRQ()
ECLIC_GetPriorityIRQ (page 364)	ECLIC_GetPriorityIRQ()

Table 10: ECLIC Access Functions

When NMSIS_VECTAB_VIRTUAL macro is defined, the functions in the table below must be replaced to virtualize the API access functions to the interrupt vector table.

The ECLIC vector table API should be implemented in a separate source module.

This allows, for example, alternate implementations to relocate the vector table from flash to RAM on the first vector table update.

The original NMSIS-Core functions are always available, but prefixed with ___ECLIC.

Table 11: ECLIC Vector Access Functions

ECLIC Vector Table Access	NMSIS-CORE FUNCTIONS
ECLIC_SetVector (page 364)	ECLIC_SetVector()
ECLIC_GetVector (page 364)	ECLIC_GetVector()

ECLIC Function Usage

The code below shows the usage of various NMSIS ECLIC flow with an GD32VF103 device.

Listing 5: gd32vf103_interrupt_example1.c

```
#include "gd32vf103.h"

// Vector interrupt which could be nested
INTERRUPT void eclic_button1_handler(void)

{
```

(continues on next page)

(continued from previous page)

```
SAVE_IRQ_CSR_CONTEXT();
                                                                             /* save mepc,
   →mcause, msubm enable interrupts */
       GPIO_REG(GPIO_OUTPUT_VAL) |= (1 << GREEN_LED_GPIO_OFFSET);</pre>
                                                                            /* Green LED On
       GPIO_REG(GPIO_RISE_IP) = (0x1 << BUTTON_1_GPIO_OFFSET);</pre>
                                                                            /* Clear the..
   → GPIO Pending interrupt by writing 1. */
10
       RESTORE_IRQ_CSR_CONTEXT();
                                                                             /* disable.
11
   →interrupts, restore mepc, mcause, msubm */
12
   // Non-vector interrupt
   void eclic_button2_handler(void)
15
16
       GPIO_REG(GPIO_OUTPUT_VAL) |= (1 << GREEN_LED_GPIO_OFFSET);  /* Green LED On_</pre>
17
       GPIO_REG(GPIO_RISE_IP) = (0x1 << BUTTON_2_GPIO_OFFSET);</pre>
                                                                   /* Clear the
18
    →GPIO Pending interrupt by writing 1. */
   }
19
20
   void eclic_global_initialize(void)
21
22
       ECLIC_SetMth(0);
23
       ECLIC_SetCfqNlbits(3);
26
   int eclic_register_interrupt(IRQn_Type IRQn, uint8_t shv, uint32_t trig_mode, uint32_.
27
   →lvl, uint32_t priority, void * handler)
28
       ECLIC_SetShvIRQ(IRQn, shv);
29
30
       ECLIC_SetTrigIRQ(IRQn, trig_mode);
       ECLIC_SetLevelIRQ(IRQn, lvl);
31
       ECLIC_SetPriorityIRQ(IRQn, priority);
32
       ECLIC_SetVector(IRQn, (rv_csr_t) (handler));
33
       ECLIC_EnableIRQ(IRQn);
34
35
       return 0;
   int main (void)
38
39
       uint32 t returnCode;
40
41
       eclic_global_initialize();
                                                                    /* initialize ECLIC */
42
       GPIO_init();
                                                                     /* initialize GPIO */
44
45
       returnCode = eclic_register_interrupt(BTN1_IRQn,1,2,1,0,Button1_IRQHandler); /*...
46
   →register system button1 interrupt */
       returnCode = eclic_register_interrupt(BTN2_IRQn,0,2,2,0,Button2_IRQHandler); /*_
47
   →register system button2 interrupt */
       __enable_irq();
                                                                     /* enable global
   →interrupt */
50
                                                                    /* Check return code_
       if (returnCode != 0) {
51
   →for errors */
```

(continues on next page)

(continued from previous page)

Interrupt and Exception API

```
enum NMSIS_Core_IntExc::IRQn_Type
    Values:
    Reserved0_IRQn = 0
    Reserved1_IRQn = 1
    Reserved2_IRQn = 2
    SysTimerSW_IRQn = 3
    Reserved3_IRQn = 4
    Reserved4_IRQn = 5
    Reserved5_IRQn = 6
    SysTimer_IRQn = 7
    Reserved6_IRQn = 8
    Reserved7_IRQn = 9
    Reserved8_IRQn = 10
    Reserved9_IRQn = 11
    Reserved10_IRQn = 12
    Reserved11_IRQn = 13
    Reserved12 IRQn = 14
    Reserved13_IRQn = 15
    Reserved14_IRQn = 16
    Reserved15_IRQn = 17
    Reserved16_IRQn = 18
    FirstDeviceSpecificInterrupt_IRQn = 19
    SOC_INT_MAX
__STATIC_FORCEINLINE void ___ECLIC_SetCfgNlbits(uint32_t nlbits)
 _STATIC_FORCEINLINE uint32_t __ECLIC_GetCfgNlbits(void)
__STATIC_FORCEINLINE uint32_t __ECLIC_GetInfoVer(void)
__STATIC_FORCEINLINE uint32_t __ECLIC_GetInfoCtlbits(void)
__STATIC_FORCEINLINE uint32_t __ECLIC_GetInfoNum(void)
 _STATIC_FORCEINLINE void __ECLIC_SetMth(uint8_t mth)
_STATIC_FORCEINLINE uint8_t __ECLIC_GetMth(void)
```

```
__STATIC_FORCEINLINE void __ECLIC_EnableIRQ(IRQn_Type IRQn)
__STATIC_FORCEINLINE uint32_t __ECLIC_GetEnableIRQ(IRQn_Type IRQn)
__STATIC_FORCEINLINE void __ECLIC_DisableIRQ(IRQn_Type IRQn)
__STATIC_FORCEINLINE int32_t __ECLIC_GetPendingIRQ(IRQn_Type IRQn)
STATIC FORCEINLINE void ECLIC SetPendingIRQ(IRQn Type IRQn)
__STATIC_FORCEINLINE void __ECLIC_ClearPendingIRQ(IRQn_Type IRQn)
__STATIC_FORCEINLINE void __ECLIC_SetTrigIRQ(IRQn_Type IRQn, uint32_t trig)
__STATIC_FORCEINLINE uint32_t __ECLIC_GetTrigIRQ(IRQn_Type IRQn)
__STATIC_FORCEINLINE void __ECLIC_SetShvIRQ(IRQn_Type IRQn, uint32_t shv)
__STATIC_FORCEINLINE uint32_t __ECLIC_GetShvIRQ(IRQn_Type IRQn)
__STATIC_FORCEINLINE void __ECLIC_SetCtrlIRQ(IRQn_Type IRQn, uint8_t intctrl)
__STATIC_FORCEINLINE uint8_t __ECLIC_GetCtrlIRQ(IRQn_Type IRQn)
__STATIC_FORCEINLINE void __ECLIC_SetLevelIRQ(IRQn_Type IRQn, uint8_t lvl_abs)
__STATIC_FORCEINLINE uint8_t __ECLIC_GetLevelIRQ(IRQn_Type IRQn)
___STATIC_FORCEINLINE void __ECLIC_SetPriorityIRQ(IRQn_Type IRQn, uint8_t pri)
STATIC FORCEINLINE uint8 t ECLIC GetPriorityIRQ(IRQn Type IRQn)
__STATIC_FORCEINLINE void __ECLIC_SetVector(IRQn_Type IRQn, rv_csr_t vector)
__STATIC_FORCEINLINE rv_csr_t __ECLIC_GetVector(IRQn_Type IRQn)
__STATIC_FORCEINLINE void ___set_exc_entry(rv_csr_t addr)
__STATIC_FORCEINLINE rv_csr_t __get_exc_entry(void)
__STATIC_FORCEINLINE void __set_nonvec_entry(rv_csr_t addr)
__STATIC_FORCEINLINE rv_csr_t __get_nonvec_entry(void)
__STATIC_FORCEINLINE rv_csr_t __get_nmi_entry(void)
ECLIC SetCfqNlbits ECLIC SetCfgNlbits
ECLIC GetCfqNlbits ECLIC GetCfgNlbits
ECLIC_GetInfoVer __ECLIC_GetInfoVer
ECLIC_GetInfoCtlbits __ECLIC_GetInfoCtlbits
ECLIC GetInfoNum ECLIC GetInfoNum
ECLIC SetMth ECLIC SetMth
ECLIC_GetMth __ECLIC_GetMth
ECLIC_EnableIRQ __ECLIC_EnableIRQ
ECLIC_GetEnableIRQ __ECLIC_GetEnableIRQ
ECLIC_DisableIRQ __ECLIC_DisableIRQ
ECLIC_SetPendingIRQ __ECLIC_SetPendingIRQ
ECLIC_GetPendingIRQ __ECLIC_GetPendingIRQ
ECLIC_ClearPendingIRQ __ECLIC_ClearPendingIRQ
```

```
ECLIC_SetTrigIRQ __ECLIC_SetTrigIRQ
ECLIC_GetTrigIRQ __ECLIC_GetTrigIRQ
ECLIC_SetShvIRQ __ECLIC_SetShvIRQ
ECLIC_GetShvIRQ __ECLIC_GetShvIRQ
ECLIC_SetCtrlIRQ __ECLIC_SetCtrlIRQ
ECLIC GetCtrlIRQ ECLIC GetCtrlIRQ
ECLIC_SetLevelIRQ __ECLIC_SetLevelIRQ
ECLIC_GetLevelIRQ __ECLIC_GetLevelIRQ
ECLIC_SetPriorityIRQ __ECLIC_SetPriorityIRQ
ECLIC_GetPriorityIRQ __ECLIC_GetPriorityIRQ
ECLIC_SetVector __ECLIC_SetVector
ECLIC_GetVector __ECLIC_GetVector
SAVE_IRQ_CSR_CONTEXT()
RESTORE_IRQ_CSR_CONTEXT()
group NMSIS Core IntExc
    Functions that manage interrupts and exceptions via the ECLIC.
```

Defines

```
ECLIC SetCfgNlbits ECLIC SetCfgNlbits
ECLIC_GetCfgNlbits __ECLIC_GetCfgNlbits
ECLIC_GetInfoVer __ECLIC_GetInfoVer
ECLIC_GetInfoCtlbits __ECLIC_GetInfoCtlbits
ECLIC_GetInfoNum __ECLIC_GetInfoNum
ECLIC_SetMth __ECLIC_SetMth
ECLIC_GetMth __ECLIC_GetMth
ECLIC_EnableIRQ __ECLIC_EnableIRQ
ECLIC_GetEnableIRQ __ECLIC_GetEnableIRQ
ECLIC_DisableIRQ __ECLIC_DisableIRQ
ECLIC_SetPendingIRQ __ECLIC_SetPendingIRQ
ECLIC_GetPendingIRQ __ECLIC_GetPendingIRQ
ECLIC_ClearPendingIRQ __ECLIC_ClearPendingIRQ
ECLIC_SetTrigIRQ __ECLIC_SetTrigIRQ
ECLIC_GetTrigIRQ __ECLIC_GetTrigIRQ
ECLIC_SetShvIRQ __ECLIC_SetShvIRQ
ECLIC_GetShvIRQ __ECLIC_GetShvIRQ
ECLIC_SetCtrlIRQ __ECLIC_SetCtrlIRQ
```

```
ECLIC_GetCtr1IRQ __ECLIC_GetCtrlIRQ

ECLIC_SetLeve1IRQ __ECLIC_SetLevelIRQ

ECLIC_GetLeve1IRQ __ECLIC_GetLevelIRQ

ECLIC_SetPriorityIRQ __ECLIC_SetPriorityIRQ

ECLIC_GetPriorityIRQ __ECLIC_GetPriorityIRQ

ECLIC_SetVector __ECLIC_SetVector

ECLIC_GetVector __ECLIC_GetVector

SAVE_IRQ_CSR_CONTEXT()
```

Save necessary CSRs into variables for vector interrupt nesting.

This macro is used to declare variables which are used for saving CSRs(MCAUSE, MEPC, MSUB), and it will read these CSR content into these variables, it need to be used in a vector-interrupt if nesting is required.

Remark

- · Interrupt will be enabled after this macro is called
- It need to be used together with RESTORE_IRQ_CSR_CONTEXT
- Don't use variable names __mcause, __mpec, __msubm in your ISR code
- If you want to enable interrupt nesting feature for vector interrupt, you can do it like this:

RESTORE IRQ CSR CONTEXT()

Restore necessary CSRs from variables for vector interrupt nesting.

This macro is used restore CSRs(MCAUSE, MEPC, MSUB) from pre-defined variables in SAVE_IRQ_CSR_CONTEXT macro.

Remark

- Interrupt will be disabled after this macro is called
- It need to be used together with SAVE_IRQ_CSR_CONTEXT

Enums

enum IRQn_Type

Definition of IRQn numbers.

The core interrupt enumeration names for IRQn values are defined in the file **<Device>.h**.

- Interrupt ID(IRQn) from 0 to 18 are reserved for core internal interrupts.
- Interrupt ID(IRQn) start from 19 represent device-specific external interrupts.
- The first device-specific interrupt has the IRQn value 19.

The table below describes the core interrupt names and their availability in various Nuclei Cores.

Values:

$Reserved0_IRQn = 0$

Internal reserved.

$Reserved1_IRQn = 1$

Internal reserved.

$Reserved2_IRQn = 2$

Internal reserved.

$SysTimerSW_IRQn = 3$

System Timer SW interrupt.

$Reserved3_IRQn = 4$

Internal reserved.

$Reserved4_IRQn = 5$

Internal reserved.

$Reserved5_IRQn = 6$

Internal reserved.

$SysTimer_IRQn = 7$

System Timer Interrupt.

$Reserved6_IRQn = 8$

Internal reserved.

$Reserved7_IRQn = 9$

Internal reserved.

${\tt Reserved8_IRQn} = 10$

Internal reserved.

$Reserved9_IRQn = 11$

Internal reserved.

$Reserved10_IRQn = 12$

Internal reserved.

Reserved11_IRQn = 13

Internal reserved.

$Reserved12_IRQn = 14$

Internal reserved.

$Reserved13_IRQn = 15$

Internal reserved.

$Reserved14_IRQn = 16$

Internal reserved.

Reserved15 IRQn = 17

Internal reserved.

Reserved16 IRQn = 18Internal reserved. FirstDeviceSpecificInterrupt_IRQn = 19 First Device Specific Interrupt. SOC INT MAX Number of total interrupts.

Functions

_STATIC_FORCEINLINE void ___ECLIC_SetCfgNlbits(uint32_t nlbits) Set nlbits value.

This function set the nlbits value of CLICCFG register.

Remark

• nlbits is used to set the width of level in the CLICINTCTL[i].

See

• ECLIC_GetCfgNlbits

Parameters

• [in] nlbits: nlbits value

```
_STATIC_FORCEINLINE uint32_t __ECLIC_GetCfgNlbits(void)
```

Get nlbits value.

This function get the nlbits value of CLICCFG register.

Return nlbits value of CLICCFG register

Remark

• nlbits is used to set the width of level in the CLICINTCTL[i].

See

• ECLIC_SetCfgNlbits

```
_STATIC_FORCEINLINE uint32_t __ECLIC_GetInfoVer(void)
```

Get the ECLIC version number.

This function gets the hardware version information from CLICINFO register.

Return hardware version number in CLICINFO register.

Remark

- This function gets harware version information from CLICINFO register.
- Bit 20:17 for architecture version, bit 16:13 for implementation version.

See

• ECLIC_GetInfoNum

STATIC_FORCEINLINE uint32_t __ECLIC_GetInfoCtlbits(void) Get CLICINTCTLBITS.

This function gets CLICINTCTLBITS from CLICINFO register.

Return CLICINTCTLBITS from CLICINFO register.

Remark

- In the CLICINTCTL[i] registers, with 2 <= CLICINTCTLBITS <= 8.
- The implemented bits are kept left-justified in the most-significant bits of each 8-bit CLICINTCTL[I] register, with the lower unimplemented bits treated as hardwired to 1.

See

• ECLIC_GetInfoNum

__STATIC_FORCEINLINE uint32_t __ECLIC_GetInfoNum(void)

Get number of maximum interrupt inputs supported.

This function gets number of maximum interrupt inputs supported from CLICINFO register.

Return number of maximum interrupt inputs supported from CLICINFO register.

Remark

- This function gets number of maximum interrupt inputs supported from CLICINFO register.
- The num_interrupt field specifies the actual number of maximum interrupt inputs supported in this implementation.

See

• ECLIC GetInfoCtlbits

__STATIC_FORCEINLINE void __ECLIC_SetMth(uint8_t mth)

Set Machine Mode Interrupt Level Threshold.

This function sets machine mode interrupt level threshold.

See

• ECLIC_GetMth

Parameters

• [in] mth: Interrupt Level Threshold.

__STATIC_FORCEINLINE uint8_t __ECLIC_GetMth(void)

Get Machine Mode Interrupt Level Threshold.

This function gets machine mode interrupt level threshold.

Return Interrupt Level Threshold.

See

• ECLIC SetMth

___STATIC_FORCEINLINE void ___ECLIC_EnableIRQ(IRQn_Type IRQn)

Enable a specific interrupt.

This function enables the specific interrupt IRQn.

Remark

• IRQn must not be negative.

See

• ECLIC_DisableIRQ

Parameters

• [in] IRQn: Interrupt number

__STATIC_FORCEINLINE uint32_t __ECLIC_GetEnableIRQ(IRQn_Type IRQn) Get a specific interrupt enable status.

This function returns the interrupt enable status for the specific interrupt *IRQn*.

Return

- 0 Interrupt is not enabled
- 1 Interrupt is pending

Remark

• IRQn must not be negative.

See

- ECLIC_EnableIRQ
- ECLIC_DisableIRQ

Parameters

• [in] IRQn: Interrupt number

__STATIC_FORCEINLINE void __ECLIC_DisableIRQ(IRQn_Type IRQn)

Disable a specific interrupt.

This function disables the specific interrupt IRQn.

Remark

• IRQn must not be negative.

See

• ECLIC_EnableIRQ

Parameters

• [in] IRQn: Number of the external interrupt to disable

__STATIC_FORCEINLINE int32_t __ECLIC_GetPendingIRQ(IRQn_Type IRQn) Get the pending specific interrupt.

This function returns the pending status of the specific interrupt *IRQn*.

Return

- 0 Interrupt is not pending
- 1 Interrupt is pending

Remark

IRQn must not be negative.

See

- ECLIC_SetPendingIRQ
- ECLIC_ClearPendingIRQ

Parameters

• [in] IRQn: Interrupt number

__STATIC_FORCEINLINE void __ECLIC_SetPendingIRQ(IRQn_Type IRQn)

Set a specific interrupt to pending.

This function sets the pending bit for the specific interrupt *IRQn*.

Remark

IRQn must not be negative.

See

- ECLIC_GetPendingIRQ
- ECLIC_ClearPendingIRQ

Parameters

• [in] IRQn: Interrupt number

__STATIC_FORCEINLINE void __ECLIC_ClearPendingIRQ(IRQn_Type IRQn)

Clear a specific interrupt from pending.

This function removes the pending state of the specific interrupt *IRQn*. *IRQn* cannot be a negative number.

Remark

• IRQn must not be negative.

See

- ECLIC_SetPendingIRQ
- ECLIC GetPendingIRQ

Parameters

• [in] IRQn: Interrupt number

__STATIC_FORCEINLINE void __ECLIC_SetTrigIRQ(IRQn_Type IRQn, uint32_t trig) Set trigger mode and polarity for a specific interrupt.

This function set trigger mode and polarity of the specific interrupt IRQn.

Remark

• IRQn must not be negative.

See

• ECLIC_GetTrigIRQ

Parameters

- [in] IRQn: Interrupt number
- [in] trig:
 - 00 level trigger, ECLIC_LEVEL_TRIGGER (page 84)
 - 01 positive edge trigger, ECLIC_POSTIVE_EDGE_TRIGGER (page 84)
 - 02 level trigger, ECLIC_LEVEL_TRIGGER (page 84)
 - 03 negative edge trigger, *ECLIC_NEGTIVE_EDGE_TRIGGER* (page 84)

__STATIC_FORCEINLINE uint32_t __ECLIC_GetTrigIRQ(IRQn_Type IRQn)

Get trigger mode and polarity for a specific interrupt.

This function get trigger mode and polarity of the specific interrupt IRQn.

Return

- 00 level trigger, ECLIC_LEVEL_TRIGGER (page 84)
- 01 positive edge trigger, ECLIC_POSTIVE_EDGE_TRIGGER (page 84)
- 02 level trigger, ECLIC_LEVEL_TRIGGER (page 84)
- 03 negative edge trigger, ECLIC NEGTIVE EDGE TRIGGER (page 84)

Remark

• IRQn must not be negative.

See

• ECLIC_SetTrigIRQ

Parameters

• [in] IRQn: Interrupt number

__STATIC_FORCEINLINE void ___ECLIC_SetShvIRQ(IRQn_Type IRQn, uint32_t shv)
Set interrupt working mode for a specific interrupt.

This function set selective hardware vector or non-vector working mode of the specific interrupt IRQn.

Remark

• IRQn must not be negative.

See

• ECLIC_GetShvIRQ

Parameters

- [in] IRQn: Interrupt number
- [in] shv:
 - 0 non-vector mode, ECLIC_NON_VECTOR_INTERRUPT (page 84)
 - 1 vector mode, ECLIC_VECTOR_INTERRUPT (page 84)

__STATIC_FORCEINLINE uint32_t __ECLIC_GetShvIRQ(IRQn_Type IRQn)

Get interrupt working mode for a specific interrupt.

This function get selective hardware vector or non-vector working mode of the specific interrupt *IRQn*.

Return shv

- 0 non-vector mode, ECLIC NON VECTOR INTERRUPT (page 84)
- 1 vector mode, ECLIC_VECTOR_INTERRUPT (page 84)

Remark

• IRQn must not be negative.

See

• ECLIC_SetShvIRQ

Parameters

• [in] IRQn: Interrupt number

__STATIC_FORCEINLINE void __ECLIC_SetCtrlIRQ(IRQn_Type IRQn, uint8_t intctrl)

Modify ECLIC Interrupt Input Control Register for a specific interrupt.

This function modify ECLIC Interrupt Input Control(CLICINTCTL[i]) register of the specific interrupt *IRQn*.

Remark

• IRQn must not be negative.

See

• ECLIC_GetCtrlIRQ

Parameters

- [in] IRQn: Interrupt number
- [in] intctrl: Set value for CLICINTCTL[i] register

__STATIC_FORCEINLINE uint8_t __ECLIC_GetCtrlIRQ(IRQn_Type IRQn)

Get ECLIC Interrupt Input Control Register value for a specific interrupt.

This function modify ECLIC Interrupt Input Control register of the specific interrupt IRQn.

Return value of ECLIC Interrupt Input Control register

Remark

• IRQn must not be negative.

See

ECLIC_SetCtrlIRQ

Parameters

• [in] IRQn: Interrupt number

__STATIC_FORCEINLINE void __ECLIC_SetLevelIRQ(IRQn_Type IRQn, uint8_t lvl_abs)

Set ECLIC Interrupt level of a specific interrupt.

This function set interrupt level of the specific interrupt IRQn.

Remark

- IRQn must not be negative.
- If lvl_abs to be set is larger than the max level allowed, it will be force to be max level.
- When you set level value you need use clciinfo.nlbits to get the width of level. Then we could know the maximum of level. CLICINTCTLBITS is how many total bits are present in the CLICINTCTL register.

See

• ECLIC_GetLevelIRQ

Parameters

- [in] IRQn: Interrupt number
- [in] lvl_abs: Interrupt level

__STATIC_FORCEINLINE uint8_t __ECLIC_GetLevelIRQ(IRQn_Type IRQn)

Get ECLIC Interrupt level of a specific interrupt.

This function get interrupt level of the specific interrupt *IRQn*.

Return Interrupt level

Remark

• IRQn must not be negative.

See

• ECLIC SetLevelIRQ

Parameters

• [in] IRQn: Interrupt number

__STATIC_FORCEINLINE void __ECLIC_SetPriorityIRQ(IRQn_Type IRQn, uint8_t pri)

Get ECLIC Interrupt priority of a specific interrupt.

This function get interrupt priority of the specific interrupt IRQn.

Remark

- IRQn must not be negative.
- If pri to be set is larger than the max priority allowed, it will be force to be max priority.
- Priority width is CLICINTCTLBITS minus clciinfo.nlbits if clciinfo.nlbits is less than CLICINTCTLBITS. Otherwise priority width is 0.

See

ECLIC_GetPriorityIRQ

Parameters

- [in] IRQn: Interrupt number
- [in] pri: Interrupt priority

__STATIC_FORCEINLINE uint8_t __ECLIC_GetPriorityIRQ(IRQn_Type IRQn)

Get ECLIC Interrupt priority of a specific interrupt.

This function get interrupt priority of the specific interrupt IRQn.

Return Interrupt priority

Remark

• IRQn must not be negative.

See

• ECLIC_SetPriorityIRQ

Parameters

• [in] IRQn: Interrupt number

__STATIC_FORCEINLINE void __ECLIC_SetVector(IRQn_Type IRQn, rv_csr_t vector)

Set Interrupt Vector of a specific interrupt.

This function set interrupt handler address of the specific interrupt IRQn.

Remark

- IRQn must not be negative.
- You can set the CSR_CSR_MTVT to set interrupt vector table entry address.

- If your vector table is placed in readonly section, the vector for IRQn will not be modified. For this case, you need to use the correct irq handler name defined in your vector table as your irq handler function name.
- This function will only work correctly when the vector table is placed in an read-write enabled section.

See

• ECLIC GetVector

Parameters

- [in] IRQn: Interrupt number
- [in] vector: Interrupt handler address

__STATIC_FORCEINLINE rv_csr_t __ECLIC_GetVector(IRQn_Type IRQn)

Get Interrupt Vector of a specific interrupt.

This function get interrupt handler address of the specific interrupt IRQn.

Return Interrupt handler address

Remark

- IRQn must not be negative.
- You can read CSR_CSR_MTVT to get interrupt vector table entry address.

See

• ECLIC_SetVector

Parameters

• [in] IRQn: Interrupt number

```
__STATIC_FORCEINLINE void __set_exc_entry(rv_csr_t addr)
```

Set Exception entry address.

This function set exception handler address to 'CSR_MTVEC'.

Remark

• This function use to set exception handler address to 'CSR_MTVEC'. Address is 4 bytes align.

See

__get_exc_entry

Parameters

• [in] addr: Exception handler address

```
__STATIC_FORCEINLINE rv_csr_t __get_exc_entry(void)
```

Get Exception entry address.

This function get exception handler address from 'CSR_MTVEC'.

Return Exception handler address

Remark

This function use to get exception handler address from 'CSR_MTVEC'. Address is 4 bytes align

See

__set_exc_entry

__STATIC_FORCEINLINE void __set_nonvec_entry(rv_csr_t addr)

Set Non-vector interrupt entry address.

This function set Non-vector interrupt address.

Remark

- This function use to set non-vector interrupt entry address to 'CSR_MTVT2' if
- CSR_MTVT2 bit0 is 1. If 'CSR_MTVT2' bit0 is 0 then set address to 'CSR_MTVEC'

See

• __get_nonvec_entry

Parameters

• [in] addr: Non-vector interrupt entry address

__STATIC_FORCEINLINE rv_csr_t __get_nonvec_entry(void)

Get Non-vector interrupt entry address.

This function get Non-vector interrupt address.

Return Non-vector interrupt handler address

Remark

- This function use to get non-vector interrupt entry address from 'CSR_MTVT2' if
- CSR_MTVT2 bit0 is 1. If 'CSR_MTVT2' bit0 is 0 then get address from 'CSR_MTVEC'.

See

__set_nonvec_entry

__STATIC_FORCEINLINE rv_csr_t __get_nmi_entry(void)

Get NMI interrupt entry from 'CSR_MNVEC'.

This function get NMI interrupt address from 'CSR_MNVEC'.

Return NMI interrupt handler address

Remark

- This function use to get NMI interrupt handler address from 'CSR_MNVEC'. If CSR_MMISC_CTL[9] = 1 'CSR_MNVEC'
- will be equal as mtvec. If CSR_MMISC_CTL[9] = 0 'CSR_MNVEC' will be equal as reset vector.
- NMI entry is defined via *CSR_MMISC_CTL* (page 69), writing to *CSR_MNVEC* (page 69) will be ignored.

2.5.11 FPU Functions

group NMSIS_Core_FPU_Functions

Functions that related to the RISC-V FPU (F and D extension).

Nuclei provided floating point unit by RISC-V F and D extension.

• F extension adds single-precision floating-point computational instructions compliant with the IEEE 754-2008 arithmetic standard, __RISCV_FLEN = 32. The F extension adds 32 floating-point registers, f0-f31, each 32 bits wide, and a floating-point control and status register fcsr, which contains the operating mode and exception status of the floating-point unit.

• D extension adds double-precision floating-point computational instructions compliant with the IEEE 754-2008 arithmetic standard. The D extension widens the 32 floating-point registers, f0-f31, to 64 bits, RISCV FLEN = 64

Defines

```
RISCV FLEN 64
 get FCSR() RV CSR READ (page 61)(CSR FCSR (page 63))
    Get FCSR CSR Register.
__set_FCSR (val) __RV_CSR_WRITE (page 61)(CSR_FCSR (page 63), (val))
    Set FCSR CSR Register with val.
__get_FRM() __RV_CSR_READ (page 61)(CSR_FRM (page 63))
    Get FRM CSR Register.
__set_FRM (val) __RV_CSR_WRITE (page 61)(CSR_FRM (page 63), (val))
    Set FRM CSR Register with val.
__get_FFLAGS() __RV_CSR_READ(page 61)(CSR_FFLAGS(page 63))
    Get FFLAGS CSR Register.
__set_FFLAGS (val) __RV_CSR_WRITE (page 61)(CSR_FFLAGS (page 63), (val))
    Set FFLAGS CSR Register with val.
  enable FPU() RV CSR SET (page 61)(CSR MSTATUS (page 64), MSTATUS FS (page 70))
    Enable FPU Unit.
__disable_FPU() __RV_CSR_CLEAR (page 62)(CSR_MSTATUS (page 64), MSTATUS_FS
                 (page 70))
    Disable FPU Unit.
```

- We can save power by disable FPU Unit.
- When FPU Unit is disabled, any access to FPU related CSR registers and FPU instructions will cause illegal Instruction Exception.

```
RV FLW (freg, addr, ofs)
```

Load a single-precision value from memory into float point register freg using flw instruction.

The FLW instruction loads a single-precision floating point value from memory address (addr + ofs) into floating point register freg(f0-f31)

Remark

- FLW and FSW operations need to make sure the address is 4 bytes aligned, otherwise it will cause exception code 4(Load address misaligned) or 6 (Store/AMO address misaligned)
- FLW and FSW do not modify the bits being transferred; in particular, the payloads of noncanonical NaNs are preserved

Parameters

- [in] freq: The floating point register, eg. FREG(0) (page 76), f0
- [in] addr: The memory base address, 4 byte aligned required
- [in] ofs: a 12-bit immediate signed byte offset value, should be an const value

___RV_FSW (freg, addr, ofs)

Store a single-precision value from float point freg into memory using fsw instruction.

The FSW instruction stores a single-precision value from floating point register to memory

Remark

- FLW and FSW operations need to make sure the address is 4 bytes aligned, otherwise it will cause exception code 4(Load address misaligned) or 6 (Store/AMO address misaligned)
- FLW and FSW do not modify the bits being transferred; in particular, the payloads of non-canonical NaNs are preserved

Parameters

- [in] freg: The floating point register(f0-f31), eg. FREG(0) (page 76), f0
- [in] addr: The memory base address, 4 byte aligned required
- [in] ofs: a 12-bit immediate signed byte offset value, should be an const value

___RV_FLD (freg, addr, ofs)

Load a double-precision value from memory into float point register freg using fld instruction.

The FLD instruction loads a double-precision floating point value from memory address (addr + ofs) into floating point register freg(f0-f31)

Attention

• Function only available for double precision floating point unit, FLEN = 64

Remark

- FLD and FSD operations need to make sure the address is 8 bytes aligned, otherwise it will cause exception code 4(Load address misaligned) or 6 (Store/AMO address misaligned)
- FLD and FSD do not modify the bits being transferred; in particular, the payloads of noncanonical NaNs are preserved.

Parameters

- [in] freg: The floating point register, eg. FREG(0) (page 76), f0
- [in] addr: The memory base address, 8 byte aligned required
- [in] ofs: a 12-bit immediate signed byte offset value, should be an const value

___RV_FSD (freg, addr, ofs)

Store a double-precision value from float point freg into memory using fsd instruction.

The FSD instruction stores double-precision value from floating point register to memory

Attention

• Function only available for double precision floating point unit, FLEN = 64

Remark

- FLD and FSD operations need to make sure the address is 8 bytes aligned, otherwise it will cause exception code 4(Load address misaligned) or 6 (Store/AMO address misaligned)
- FLD and FSD do not modify the bits being transferred; in particular, the payloads of noncanonical NaNs are preserved.

Parameters

• [in] freg: The floating point register(f0-f31), eg. FREG(0) (page 76), f0

- [in] addr: The memory base address, 8 byte aligned required
- [in] ofs: a 12-bit immediate signed byte offset value, should be an const value

```
__RV_FLOAD __RV_FLD (page 377)
```

Load a float point value from memory into float point register freg using flw/fld instruction.

- For Single-Precision Floating-Point Mode(__FPU_PRESENT == 1, __RISCV_FLEN == 32): It will call __RV_FLW (page 376) to load a single-precision floating point value from memory to floating point register
- For Double-Precision Floating-Point Mode(__FPU_PRESENT == 2, __RISCV_FLEN == 64): It will call __RV_FLD (page 377) to load a double-precision floating point value from memory to floating point register

Attention Function behaviour is different for __FPU_PRESENT = 1 or 2, please see the real function this macro represent

```
___RV_FSTORE __RV_FSD (page 377)
```

Store a float value from float point freg into memory using fsw/fsd instruction.

- For Single-Precison Floating-Point Mode(__FPU_PRESENT == 1, __RISCV_FLEN == 32): It will call __RV_FSW (page 377) to store floating point register into memory
- For Double-Precison Floating-Point Mode(__FPU_PRESENT == 2, __RISCV_FLEN == 64): It will call __RV_FSD (page 377) to store floating point register into memory

Attention Function behaviour is different for __FPU_PRESENT = 1 or 2, please see the real function this macro represent

${\bf SAVE_FPU_CONTEXT}~(~)$

Save FPU context into variables for interrupt nesting.

This macro is used to declare variables which are used for saving FPU context, and it will store the nessary fpu registers into these variables, it need to be used in a interrupt when in this interrupt fpu registers are used.

Remark

- It need to be used together with RESTORE_FPU_CONTEXT (page 379)
- Don't use variable names __fpu_context in your ISR code
- If you is rcode will use fpu registers, and this interrupt is nested. Then you can do it like this:

```
void eclic_mtip_handler(void)
{
    // !!!Interrupt is enabled here!!!
    // !!!Higher priority interrupt could nest it!!!

    // Necessary only when you need to use fpu registers
    // in this isr handler functions
    SAVE_FPU_CONTEXT();

    // put you own interrupt handling code here

    // pair of SAVE_FPU_CONTEXT()
    RESTORE_FPU_CONTEXT();
}
```

RESTORE FPU CONTEXT()

Restore necessary fpu registers from variables for interrupt nesting.

This macro is used restore necessary fpu registers from pre-defined variables in *SAVE_FPU_CONTEXT* (page 378) macro.

Remark

• It need to be used together with SAVE_FPU_CONTEXT (page 378)

Typedefs

```
typedef uint64_t rv_fpu_t
```

Type of FPU register, depends on the FLEN defined in RISC-V.

2.5.12 PMP Functions

Click Nuclei PMP Unit²² to learn about Core PMP Unit in Nuclei ISA Spec.

```
__STATIC_INLINE uint8_t __get_PMPxCFG(uint32_t idx)

__STATIC_INLINE void __set_PMPxCFG(uint32_t idx, uint8_t pmpxcfg)

__STATIC_INLINE rv_csr_t __get_PMPCFGx(uint32_t idx)

__STATIC_INLINE void __set_PMPCFGx(uint32_t idx, rv_csr_t pmpcfg)

__STATIC_INLINE rv_csr_t __get_PMPADDRx(uint32_t idx)

__STATIC_INLINE void __set_PMPADDRx(uint32_t idx, rv_csr_t pmpaddr)

group NMSIS_Core_PMP_Functions
```

Functions that related to the RISCV Phyiscal Memory Protection.

Optional physical memory protection (PMP) unit provides per-hart machine-mode control registers to allow physical memory access privileges (read, write, execute) to be specified for each physical memory region.

The PMP can supports region access control settings as small as four bytes.

Functions

```
__STATIC_INLINE uint8_t __get_PMPxCFG(uint32_t idx)
```

Get 8bit PMPxCFG Register by PMP entry index.

Return the content of the PMPxCFG Register.

Return PMPxCFG Register value

Parameters

• [in] idx: PMP region index(0-15)

__STATIC_INLINE void __set_PMPxCFG(uint32_t idx, uint8_t pmpxcfg)

Set 8bit PMPxCFG by pmp entry index.

Set the given pmpxcfg value to the PMPxCFG Register.

Parameters

• [in] idx: PMPx region index(0-15)

²² https://doc.nucleisys.com/nuclei_spec/isa/pmp.html

• [in] pmpxcfg: PMPxCFG register value to set

__STATIC_INLINE rv_csr_t __get_PMPCFGx(uint32_t idx)

Get PMPCFGx Register by index.

Return the content of the PMPCFGx Register.

Return PMPCFGx Register value

Remark

- For RV64, only idx = 0 and idx = 2 is allowed. pmpcfg0 and pmpcfg2 hold the configurations for the 16 PMP entries, pmpcfg1 and pmpcfg3 are illegal
- For RV32, pmpcfg0-pmpcfg3, hold the configurations pmp0cfg-pmp15cfg for the 16 PMP entries

Parameters

• [in] idx: PMPCFG CSR index(0-3)

```
__STATIC_INLINE void __set_PMPCFGx(uint32_t idx, rv_csr_t pmpcfg)
Set PMPCFGx by index.
```

Write the given value to the PMPCFGx Register.

Remark

- For RV64, only idx = 0 and idx = 2 is allowed. pmpcfg0 and pmpcfg2 hold the configurations for the 16 PMP entries, pmpcfg1 and pmpcfg3 are illegal
- For RV32, pmpcfg0-pmpcfg3, hold the configurations pmp0cfg-pmp15cfg for the 16 PMP entries

Parameters

- [in] idx: PMPCFG CSR index(0-3)
- [in] pmpcfg: PMPCFGx Register value to set

```
__STATIC_INLINE rv_csr_t __get_PMPADDRx(uint32_t idx)
```

Get PMPADDRx Register by index.

Return the content of the PMPADDRx Register.

Return PMPADDRx Register value

Parameters

• [in] idx: PMP region index(0-15)

```
__STATIC_INLINE void __set_PMPADDRx(uint32_t idx, rv_csr_t pmpaddr)
Set PMPADDRx by index.
```

Write the given value to the PMPADDRx Register.

Parameters

- [in] idx: PMP region index(0-15)
- [in] pmpaddr: PMPADDRx Register value to set

2.5.13 Cache Functions

General

```
enum NMSIS_Core_Cache::CCM_OP_FINFO_Type
    Values:
    CCM_OP_SUCCESS = 0x0
    CCM OP EXCEED ERR = 0x1
    CCM OP PERM CHECK ERR = 0x2
    CCM_OP_REFILL_BUS_ERR = 0x3
    CCM_OP_ECC_ERR = 0x4
enum NMSIS_Core_Cache::CCM_CMD_Type
    Values:
    CCM_DC_INVAL = 0x0
    CCM_DC_WB = 0x1
    CCM_DC_WBINVAL = 0x2
    CCM DC LOCK = 0x3
    CCM_DC_UNLOCK = 0x4
    CCM_DC_WBINVAL_ALL = 0x6
    CCM DC WB ALL = 0x7
    CCM_DC_INVAL_ALL = 0x17
    CCM IC INVAL = 0x8
    CCM_IC_LOCK = 0xb
    CCM_IC_UNLOCK = 0xc
    CCM_IC_INVAL_ALL = 0xd
  STATIC_FORCEINLINE void EnableSUCCM(void)
 _STATIC_FORCEINLINE void DisableSUCCM(void)
 _STATIC_FORCEINLINE void FlushPipeCCM(void)
CCM_SUEN_SUEN_Pos 0U
CCM_SUEN_SUEN_Msk (1UL << CCM_SUEN_SUEN_Pos)
group NMSIS_Core_Cache
```

Functions that configure Instruction and Data Cache.

Nuclei provide Cache Control and Maintainence(CCM) for software to control and maintain the internal L1 I/D Cache of the RISC-V Core, software can manage the cache flexibly to meet the actual application scenarios.

The CCM operations have 3 types: by single address, by all and flush pipeline. The CCM operations are done via CSR registers, M/S/U mode has its own CSR registers to do CCM operations. By default, CCM operations are not allowed in S/U mode, you can execute EnableSUCCM in M-Mode to enable it.

- API names started with M<operations>, such as MInvallCacheLine must be called in M-Mode only.
- API names started with S<operations>, such as SInvalICacheLine should be called in S-Mode.

• API names started with U<operations>, such as UInvalICacheLine should be called in U-Mode.

Defines

CCM_SUEN_SUEN_Pos 0U

CSR CCM_SUEN: SUEN bit Position.

CCM_SUEN_SUEN_Msk (1UL << CCM_SUEN_SUEN_Pos)

CSR CCM SUEN: SUEN Mask.

Enums

enum CCM_OP_FINFO_Type

Cache CCM Operation Fail Info.

Values:

$CCM_OP_SUCCESS = 0x0$

Lock Succeed.

CCM OP EXCEED ERR = 0x1

Exceed the the number of lockable ways(N-Way I/D-Cache, lockable is N-1)

CCM OP PERM CHECK ERR = 0x2

PMP/sPMP/Page-Table X(I-Cache)/R(D-Cache) permission check failed, or belong to Device/Non-Cacheable address range.

CCM OP REFILL BUS ERR = 0x3

Refill has Bus Error.

CCM OP ECC ERR = 0x4

ECC Error.

enum CCM_CMD_Type

Cache CCM Command Types.

Values:

CCM DC INVAL = 0x0

Unlock and invalidate D-Cache line specified by CSR CCM_XBEGINADDR.

CCM DC WB = 0x1

Flush the specific D-Cache line specified by CSR CCM_XBEGINADDR.

$CCM_DC_WBINVAL = 0x2$

Unlock, flush and invalidate the specific D-Cache line specified by CSR CCM_XBEGINADDR.

CCM DC LOCK = 0x3

Lock the specific D-Cache line specified by CSR CCM_XBEGINADDR.

CCM DC UNLOCK = 0x4

Unlock the specific D-Cache line specified by CSR CCM_XBEGINADDR.

$CCM_DC_WBINVAL_ALL = 0x6$

Unlock and flush and invalidate all the valid and dirty D-Cache lines.

CCM DC WB ALL = 0x7

Flush all the valid and dirty D-Cache lines.

$CCM_DC_INVAL_ALL = 0x17$

Unlock and invalidate all the D-Cache lines.

CCM IC INVAL = 0x8

Unlock and invalidate I-Cache line specified by CSR CCM_XBEGINADDR.

CCM IC LOCK = 0xb

Lock the specific I-Cache line specified by CSR CCM_XBEGINADDR.

$CCM_IC_UNLOCK = 0xc$

Unlock the specific I-Cache line specified by CSR CCM XBEGINADDR.

CCM IC INVAL ALL = 0xd

Unlock and invalidate all the I-Cache lines.

Functions

__STATIC_FORCEINLINE void EnableSUCCM(void)

Enable CCM operation in Supervisor/User Mode.

This function enable CCM operation in Supervisor/User Mode. If enabled, CCM operations in supervisor/user mode will be allowed.

Remark

• This function can be called in M-Mode only.

See

DisableSUCCM

__STATIC_FORCEINLINE void DisableSUCCM(void)

Disable CCM operation in Supervisor/User Mode.

This function disable CCM operation in Supervisor/User Mode. If not enabled, CCM operations in supervisor/user mode will trigger a *illegal intruction* exception.

Remark

• This function can be called in M-Mode only.

See

• EnableSUCCM

__STATIC_FORCEINLINE void FlushPipeCCM(void)

Flush pipeline after CCM operation.

This function is used to flush pipeline after CCM operations on Cache, it will ensure latest instructions or data can be seen by pipeline.

Remark

• This function can be called in M/S/U-Mode only.

I-Cache Functions

```
__STATIC_FORCEINLINE void EnableICache(void)
__STATIC_FORCEINLINE void DisableICache(void)
__STATIC_FORCEINLINE void MInvalICacheLine(unsigned long addr)
__STATIC_FORCEINLINE void MInvalICacheLines(unsigned long addr, unsigned long cnt)
__STATIC_FORCEINLINE void SInvalICacheLine(unsigned long addr)
```

```
STATIC FORCEINLINE void SInvalICacheLines (unsigned long addr, unsigned long cnt)
 _STATIC_FORCEINLINE void UInvalICacheLine(unsigned long addr)
 _STATIC_FORCEINLINE void UInvalICacheLines(unsigned long addr, unsigned long cnt)
__STATIC_FORCEINLINE unsigned long MLockICacheLine(unsigned long addr)
 STATIC FORCEINLINE unsigned long MLockICacheLines(unsigned long addr, unsigned long cnt)
STATIC FORCEINLINE unsigned long SLockICacheLine (unsigned long addr)
__STATIC_FORCEINLINE unsigned long SLockICacheLines(unsigned long addr, unsigned long cnt)
__STATIC_FORCEINLINE unsigned long ULockICacheLine(unsigned long addr)
 STATIC FORCEINLINE unsigned long ULockICacheLines(unsigned long addr, unsigned long cnt)
 STATIC_FORCEINLINE void MUnlockICacheLine(unsigned long addr)
__STATIC_FORCEINLINE void MUnlockICacheLines(unsigned long addr, unsigned long cnt)
__STATIC_FORCEINLINE void SUnlockICacheLine(unsigned long addr)
 _STATIC_FORCEINLINE void SUnlockICacheLines(unsigned long addr, unsigned long cnt)
__STATIC_FORCEINLINE void UUnlockICacheLine(unsigned long addr)
STATIC FORCEINLINE void UUnlockICacheLines (unsigned long addr, unsigned long cnt)
STATIC FORCEINLINE void MInvallCache (void)
__STATIC_FORCEINLINE void SInvalICache (void)
__STATIC_FORCEINLINE void UInvalICache(void)
group NMSIS_Core_ICache
    Functions that configure Instruction Cache.
    Functions
      _STATIC_FORCEINLINE void EnableICache(void)
        Enable ICache.
        This function enable I-Cache
        Remark
             • This function can be called in M-Mode only.
             • This CSR_MCACHE_CTL (page 69) register control I Cache enable.
        See
             · DisableICache
      STATIC_FORCEINLINE void DisableICache(void)
        Disable ICache.
        This function Disable I-Cache
        Remark
             • This function can be called in M-Mode only.
             • This CSR_MCACHE_CTL (page 69) register control I Cache enable.
        See
```

• EnableICache

__STATIC_FORCEINLINE void MInvallCacheLine(unsigned long addr)

Invalidate one I-Cache line specified by address in M-Mode.

This function unlock and invalidate one I-Cache line specified by the address. Command CCM_IC_INVAL is written to CSR *CSR_CCM_MCOMMAND* (page 70).

Remark This function must be executed in M-Mode only.

Parameters

• [in] addr: start address to be invalidated

__STATIC_FORCEINLINE void MInvallCacheLines (unsigned long addr, unsigned long cnt)
Invalidate several I-Cache lines specified by address in M-Mode.

This function unlock and invalidate several I-Cache lines specified by the address and line count. Command CCM_IC_INVAL is written to CSR CSR_CCM_MCOMMAND (page 70).

Remark This function must be executed in M-Mode only.

Parameters

- [in] addr: start address to be invalidated
- [in] cnt: count of cache lines to be invalidated

__STATIC_FORCEINLINE void SInvalICacheLine(unsigned long addr)

Invalidate one I-Cache line specified by address in S-Mode.

This function unlock and invalidate one I-Cache line specified by the address. Command CCM_IC_INVAL is written to CSR *CSR_CCM_SCOMMAND* (page 70).

Remark This function must be executed in M/S-Mode only.

Parameters

• [in] addr: start address to be invalidated

__STATIC_FORCEINLINE void SInvalICacheLines (unsigned long addr, unsigned long cnt)
Invalidate several I-Cache lines specified by address in S-Mode.

This function unlock and invalidate several I-Cache lines specified by the address and line count. Command CCM_IC_INVAL is written to CSR *CSR_CCM_SCOMMAND* (page 70).

Remark This function must be executed in M/S-Mode only.

Parameters

- [in] addr: start address to be invalidated
- [in] cnt: count of cache lines to be invalidated

__STATIC_FORCEINLINE void UInvalICacheLine(unsigned long addr)

Invalidate one I-Cache line specified by address in U-Mode.

This function unlock and invalidate one I-Cache line specified by the address. Command CCM_IC_INVAL is written to CSR *CSR_CCM_UCOMMAND* (page 70).

Remark This function must be executed in M/S/U-Mode only.

Parameters

• [in] addr: start address to be invalidated

__STATIC_FORCEINLINE void UInvallCacheLines (unsigned long addr, unsigned long cnt)
Invalidate several I-Cache lines specified by address in U-Mode.

This function unlock and invalidate several I-Cache lines specified by the address and line count. Command CCM_IC_INVAL is written to CSR CSR_CCM_UCOMMAND (page 70).

Remark This function must be executed in M/S/U-Mode only.

Parameters

- [in] addr: start address to be invalidated
- [in] cnt: count of cache lines to be invalidated

__STATIC_FORCEINLINE unsigned long MLockICacheLine(unsigned long addr)

Lock one I-Cache line specified by address in M-Mode.

This function lock one I-Cache line specified by the address. Command CCM_IC_LOCK is written to CSR *CSR_CCM_MCOMMAND* (page 70).

Remark This function must be executed in M-Mode only.

Return result of CCM lock operation, see enum CCM_OP_FINFO

Parameters

• [in] addr: start address to be locked

__STATIC_FORCEINLINE unsigned long MLockICacheLines (unsigned long addr, unsigned long Lock several I-Cache lines specified by address in M-Mode.

This function lock several I-Cache lines specified by the address and line count. Command CCM_IC_LOCK is written to CSR *CSR_CCM_MCOMMAND* (page 70).

Remark This function must be executed in M-Mode only.

Return result of CCM lock operation, see enum CCM_OP_FINFO

Parameters

- [in] addr: start address to be locked
- [in] cnt: count of cache lines to be locked

__STATIC_FORCEINLINE unsigned long SLockICacheLine(unsigned long addr)

Lock one I-Cache line specified by address in S-Mode.

This function lock one I-Cache line specified by the address. Command CCM_IC_LOCK is written to CSR *CSR_CCM_SCOMMAND* (page 70).

Remark This function must be executed in M/S-Mode only.

Return result of CCM lock operation, see enum CCM_OP_FINFO

Parameters

• [in] addr: start address to be locked

__STATIC_FORCEINLINE unsigned long SLockICacheLines (unsigned long addr, unsigned long Lock several I-Cache lines specified by address in S-Mode.

This function lock several I-Cache lines specified by the address and line count. Command CCM_IC_LOCK is written to CSR *CSR_CCM_SCOMMAND* (page 70).

Remark This function must be executed in M/S-Mode only.

Return result of CCM lock operation, see enum CCM OP FINFO

Parameters

- [in] addr: start address to be locked
- [in] cnt: count of cache lines to be locked

__STATIC_FORCEINLINE unsigned long ULockICacheLine(unsigned long addr)

Lock one I-Cache line specified by address in U-Mode.

This function lock one I-Cache line specified by the address. Command CCM_IC_LOCK is written to CSR CSR CCM UCOMMAND (page 70).

Remark This function must be executed in M/S/U-Mode only.

Return result of CCM lock operation, see enum CCM_OP_FINFO

Parameters

• [in] addr: start address to be locked

__STATIC_FORCEINLINE unsigned long ULockICacheLines (unsigned long addr, unsigned long Lock several I-Cache lines specified by address in U-Mode.

This function lock several I-Cache lines specified by the address and line count. Command CCM_IC_LOCK is written to CSR *CSR_CCM_UCOMMAND* (page 70).

Remark This function must be executed in M/S/U-Mode only.

Return result of CCM lock operation, see enum CCM_OP_FINFO

Parameters

- [in] addr: start address to be locked
- [in] cnt: count of cache lines to be locked

__STATIC_FORCEINLINE void MUnlockICacheLine(unsigned long addr)

Unlock one I-Cache line specified by address in M-Mode.

This function unlock one I-Cache line specified by the address. Command CCM_IC_UNLOCK is written to CSR *CSR_CCM_MCOMMAND* (page 70).

Remark This function must be executed in M-Mode only.

Parameters

• [in] addr: start address to be unlocked

__STATIC_FORCEINLINE void MUnlockICacheLines (unsigned long addr, unsigned long cnt)
Unlock several I-Cache lines specified by address in M-Mode.

This function unlock several I-Cache lines specified by the address and line count. Command CCM_IC_UNLOCK is written to CSR CSR_CCM_MCOMMAND (page 70).

Remark This function must be executed in M-Mode only.

Parameters

- [in] addr: start address to be unlocked
- [in] cnt: count of cache lines to be unlocked

_STATIC_FORCEINLINE void SUnlockICacheLine(unsigned long addr)

Unlock one I-Cache line specified by address in S-Mode.

This function unlock one I-Cache line specified by the address. Command CCM_IC_UNLOCK is written to CSR CSR CCM SCOMMAND (page 70).

Remark This function must be executed in M/S-Mode only.

Parameters

• [in] addr: start address to be unlocked

__STATIC_FORCEINLINE void SUnlockICacheLines (unsigned long addr, unsigned long cnt)
Unlock several I-Cache lines specified by address in S-Mode.

This function unlock several I-Cache lines specified by the address and line count. Command CCM IC UNLOCK is written to CSR CSR CCM SCOMMAND (page 70).

Remark This function must be executed in M/S-Mode only.

Parameters

- [in] addr: start address to be unlocked
- [in] cnt: count of cache lines to be unlocked

__STATIC_FORCEINLINE void UUnlockICacheLine(unsigned long addr)

Unlock one I-Cache line specified by address in U-Mode.

This function unlock one I-Cache line specified by the address. Command CCM_IC_UNLOCK is written to CSR *CSR_CCM_UCOMMAND* (page 70).

Remark This function must be executed in M/S/U-Mode only.

Parameters

• [in] addr: start address to be unlocked

__STATIC_FORCEINLINE void UUnlockICacheLines (unsigned long addr, unsigned long cnt)
Unlock several I-Cache lines specified by address in U-Mode.

This function unlock several I-Cache lines specified by the address and line count. Command CCM_IC_UNLOCK is written to CSR CSR_CCM_UCOMMAND (page 70).

Remark This function must be executed in M/S/U-Mode only.

Parameters

- [in] addr: start address to be unlocked
- [in] cnt: count of cache lines to be unlocked

__STATIC_FORCEINLINE void MInvallCache(void)

Invalidate all I-Cache lines in M-Mode.

This function invalidate all I-Cache lines. Command CCM_IC_INVAL_ALL is written to CSR CSR CCM MCOMMAND (page 70).

Remark This function must be executed in M-Mode only.

Parameters

• [in] addr: start address to be invalidated

__STATIC_FORCEINLINE void SInvalICache(void)

Invalidate all I-Cache lines in S-Mode.

This function invalidate all I-Cache lines. Command CCM_IC_INVAL_ALL is written to CSR *CSR_CCM_SCOMMAND* (page 70).

Remark This function must be executed in M/S-Mode only.

Parameters

• [in] addr: start address to be invalidated

__STATIC_FORCEINLINE void UInvalICache(void)

Invalidate all I-Cache lines in U-Mode.

This function invalidate all I-Cache lines. Command CCM_IC_INVAL_ALL is written to CSR *CSR_CCM_UCOMMAND* (page 70).

Remark This function must be executed in M/S/U-Mode only.

Parameters

• [in] addr: start address to be invalidated

D-Cache Functions

```
_STATIC_FORCEINLINE void EnableDCache(void)
 _STATIC_FORCEINLINE void DisableDCache(void)
_STATIC_FORCEINLINE void MInvalDCacheLine(unsigned long addr)
_STATIC_FORCEINLINE void MInvalDCacheLines(unsigned long addr, unsigned long cnt)
 _STATIC_FORCEINLINE void SInvalDCacheLine(unsigned long addr)
 _STATIC_FORCEINLINE void SInvalDCacheLines(unsigned long addr, unsigned long cnt)
 STATIC_FORCEINLINE void UInvalDCacheLine(unsigned long addr)
__STATIC_FORCEINLINE void UInvalDCacheLines(unsigned long addr, unsigned long cnt)
 STATIC FORCEINLINE void MFlushDCacheLine (unsigned long addr)
 _STATIC_FORCEINLINE void MFlushDCacheLines(unsigned long addr, unsigned long cnt)
__STATIC_FORCEINLINE void SFlushDCacheLine(unsigned long addr)
__STATIC_FORCEINLINE void SFlushDCacheLines(unsigned long addr, unsigned long cnt)
__STATIC_FORCEINLINE void UFlushDCacheLine(unsigned long addr)
__STATIC_FORCEINLINE void UFlushDCacheLines(unsigned long addr, unsigned long cnt)
__STATIC_FORCEINLINE void MFlushInvalDCacheLine(unsigned long addr)
 _STATIC_FORCEINLINE void MFlushInvalDCacheLines(unsigned long addr, unsigned long cnt)
 STATIC_FORCEINLINE void SFlushInvalDCacheLine(unsigned long addr)
__STATIC_FORCEINLINE void SFlushInvalDCacheLines(unsigned long addr, unsigned long cnt)
__STATIC_FORCEINLINE void UFlushInvalDCacheLine(unsigned long addr)
 _STATIC_FORCEINLINE void UFlushInvalDCacheLines(unsigned long addr, unsigned long cnt)
STATIC FORCEINLINE unsigned long MLockDCacheLine (unsigned long addr)
STATIC FORCEINLINE unsigned long MLockDCacheLines(unsigned long addr, unsigned long cnt)
 _STATIC_FORCEINLINE unsigned long SLockDCacheLine(unsigned long addr)
__STATIC_FORCEINLINE unsigned long SLockDCacheLines(unsigned long addr, unsigned long cnt)
 _STATIC_FORCEINLINE unsigned long ULockDCacheLine(unsigned long addr)
 STATIC_FORCEINLINE unsigned long ULockDCacheLines(unsigned long addr, unsigned long cnt)
```

2.5. NMSIS Core API 389

_STATIC_FORCEINLINE void MUnlockDCacheLine(unsigned long addr)

```
_STATIC_FORCEINLINE void MUnlockDCacheLines(unsigned long addr, unsigned long cnt)
 _STATIC_FORCEINLINE void SUnlockDCacheLine(unsigned long addr)
 _STATIC_FORCEINLINE void SUnlockDCacheLines(unsigned long addr, unsigned long cnt)
__STATIC_FORCEINLINE void UUnlockDCacheLine(unsigned long addr)
 STATIC FORCEINLINE void UUnlockDCacheLines (unsigned long addr, unsigned long cnt)
STATIC FORCEINLINE void MInvalDCache (void)
__STATIC_FORCEINLINE void SInvalDCache (void)
__STATIC_FORCEINLINE void UInvalDCache(void)
 _STATIC_FORCEINLINE void MFlushDCache(void)
  STATIC_FORCEINLINE void SFlushDCache(void)
__STATIC_FORCEINLINE void UFlushDCache(void)
__STATIC_FORCEINLINE void MFlushInvalDCache(void)
__STATIC_FORCEINLINE void SFlushInvalDCache(void)
__STATIC_FORCEINLINE void UFlushInvalDCache(void)
group NMSIS Core DCache
    Functions that configure Data Cache.
    Functions
      STATIC FORCEINLINE void EnableDCache (void)
        Enable DCache.
        This function enable D-Cache
        Remark
             • This function can be called in M-Mode only.
             • This CSR_MCACHE_CTL (page 69) register control D Cache enable.
        See
             · DisableDCache
      STATIC FORCEINLINE void DisableDCache (void)
        Disable DCache.
        This function Disable D-Cache
        Remark
             • This function can be called in M-Mode only.
             • This CSR_MCACHE_CTL (page 69) register control D Cache enable.
        See
             · EnableDCache
      STATIC FORCEINLINE void MInvalDCacheLine (unsigned long addr)
        Invalidate one D-Cache line specified by address in M-Mode.
```

This function unlock and invalidate one D-Cache line specified by the address.

CCM_DC_INVAL is written to CSR CSR_CCM_MCOMMAND (page 70).

Command

Remark This function must be executed in M-Mode only.

Parameters

• [in] addr: start address to be invalidated

__STATIC_FORCEINLINE void MInvalDCacheLines (unsigned long addr, unsigned long cnt)
Invalidate several D-Cache lines specified by address in M-Mode.

This function unlock and invalidate several D-Cache lines specified by the address and line count. Command CCM_DC_INVAL is written to CSR *CSR_CCM_MCOMMAND* (page 70).

Remark This function must be executed in M-Mode only.

Parameters

- [in] addr: start address to be invalidated
- [in] cnt: count of cache lines to be invalidated

__STATIC_FORCEINLINE void SInvalDCacheLine(unsigned long addr)

Invalidate one D-Cache line specified by address in S-Mode.

This function unlock and invalidate one D-Cache line specified by the address. Command CCM_DC_INVAL is written to CSR CSR_CCM_MCOMMAND (page 70).

Remark This function must be executed in M/S-Mode only.

Parameters

• [in] addr: start address to be invalidated

__STATIC_FORCEINLINE void SInvalDCacheLines (unsigned long addr, unsigned long cnt)
Invalidate several D-Cache lines specified by address in S-Mode.

This function unlock and invalidate several D-Cache lines specified by the address and line count. Command CCM_DC_INVAL is written to CSR CSR_CCM_SCOMMAND (page 70).

Remark This function must be executed in M/S-Mode only.

Parameters

- [in] addr: start address to be invalidated
- [in] cnt: count of cache lines to be invalidated

__STATIC_FORCEINLINE void UInvalDCacheLine(unsigned long addr)

Invalidate one D-Cache line specified by address in U-Mode.

This function unlock and invalidate one D-Cache line specified by the address. Command CCM DC INVAL is written to CSR CSR CCM UCOMMAND (page 70).

Remark This function must be executed in M/S/U-Mode only.

Parameters

• [in] addr: start address to be invalidated

__STATIC_FORCEINLINE void UInvalDCacheLines (unsigned long addr, unsigned long cnt)
Invalidate several D-Cache lines specified by address in U-Mode.

This function unlock and invalidate several D-Cache lines specified by the address and line count. Command CCM_DC_INVAL is written to CSR *CSR_CCM_UCOMMAND* (page 70).

Remark This function must be executed in M/S/U-Mode only.

Parameters

2.5. NMSIS Core API 391

- [in] addr: start address to be invalidated
- [in] cnt: count of cache lines to be invalidated

_STATIC_FORCEINLINE void MFlushDCacheLine(unsigned long addr)

Flush one D-Cache line specified by address in M-Mode.

This function flush one D-Cache line specified by the address. Command CCM_DC_WB is written to CSR *CSR_CCM_MCOMMAND* (page 70).

Remark This function must be executed in M-Mode only.

Parameters

• [in] addr: start address to be flushed

__STATIC_FORCEINLINE void MFlushDCacheLines (unsigned long addr, unsigned long cnt)
Flush several D-Cache lines specified by address in M-Mode.

This function flush several D-Cache lines specified by the address and line count. Command CCM_DC_WB is written to CSR CSR_CCM_MCOMMAND (page 70).

Remark This function must be executed in M-Mode only.

Parameters

- [in] addr: start address to be flushed
- [in] cnt: count of cache lines to be flushed

___STATIC_FORCEINLINE void SFlushDCacheLine(unsigned long addr)

Flush one D-Cache line specified by address in S-Mode.

This function flush one D-Cache line specified by the address. Command CCM_DC_WB is written to CSR *CSR_CCM_SCOMMAND* (page 70).

Remark This function must be executed in M/S-Mode only.

Parameters

• [in] addr: start address to be flushed

__STATIC_FORCEINLINE void SFlushDCacheLines (unsigned long addr, unsigned long cnt) Flush several D-Cache lines specified by address in S-Mode.

This function flush several D-Cache lines specified by the address and line count. CCM_DC_WB is written to CSR CSR_CCM_SCOMMAND (page 70).

Remark This function must be executed in M/S-Mode only.

Parameters

- [in] addr: start address to be flushed
- [in] cnt: count of cache lines to be flushed

STATIC_FORCEINLINE void UFlushDCacheLine(unsigned long addr)

Flush one D-Cache line specified by address in U-Mode.

This function flush one D-Cache line specified by the address. Command CCM_DC_WB is written to CSR *CSR_CCM_UCOMMAND* (page 70).

Remark This function must be executed in M/S/U-Mode only.

Parameters

• [in] addr: start address to be flushed

__STATIC_FORCEINLINE void UFlushDCacheLines (unsigned long addr, unsigned long cnt)
Flush several D-Cache lines specified by address in U-Mode.

This function flush several D-Cache lines specified by the address and line count. CCM_DC_WB is written to CSR CSR_CCM_UCOMMAND (page 70).

Remark This function must be executed in M/S/U-Mode only.

Parameters

- [in] addr: start address to be flushed
- [in] cnt: count of cache lines to be flushed

__STATIC_FORCEINLINE void MFlushInvalDCacheLine(unsigned long addr)

Flush and invalidate one D-Cache line specified by address in M-Mode.

This function flush and invalidate one D-Cache line specified by the address. Command CCM_DC_WBINVAL is written to CSR CSR_CCM_MCOMMAND (page 70).

Remark This function must be executed in M-Mode only.

Parameters

• [in] addr: start address to be flushed and invalidated

__STATIC_FORCEINLINE void MFlushInvalDCacheLines (unsigned long addr, unsigned long cnt Flush and invalidate several D-Cache lines specified by address in M-Mode.

This function flush and invalidate several D-Cache lines specified by the address and line count. Command CCM DC WBINVAL is written to CSR CSR CCM MCOMMAND (page 70).

Remark This function must be executed in M-Mode only.

Parameters

- [in] addr: start address to be flushed and invalidated
- [in] cnt: count of cache lines to be flushed and invalidated

___STATIC_FORCEINLINE void SFlushInvalDCacheLine(unsigned long addr)

Flush and invalidate one D-Cache line specified by address in S-Mode.

This function flush and invalidate one D-Cache line specified by the address. Command CCM_DC_WBINVAL is written to CSR *CSR_CCM_SCOMMAND* (page 70).

Remark This function must be executed in M/S-Mode only.

Parameters

- [in] addr: start address to be flushed and invalidated
- __STATIC_FORCEINLINE void SFlushInvalDCacheLines (unsigned long addr, unsigned long cnt Flush and invalidate several D-Cache lines specified by address in S-Mode.

This function flush and invalidate several D-Cache lines specified by the address and line count. Command CCM_DC_WBINVAL is written to CSR *CSR_CCM_SCOMMAND* (page 70).

Remark This function must be executed in M/S-Mode only.

Parameters

- [in] addr: start address to be flushed and invalidated
- [in] cnt: count of cache lines to be flushed and invalidated

2.5. NMSIS Core API 393

__STATIC_FORCEINLINE void UFlushInvalDCacheLine(unsigned long addr)

Flush and invalidate one D-Cache line specified by address in U-Mode.

This function flush and invalidate one D-Cache line specified by the address. Command CCM_DC_WBINVAL is written to CSR *CSR_CCM_UCOMMAND* (page 70).

Remark This function must be executed in M/S/U-Mode only.

Parameters

• [in] addr: start address to be flushed and invalidated

__STATIC_FORCEINLINE void UFlushInvalDCacheLines (unsigned long addr, unsigned long cnt Flush and invalidate several D-Cache lines specified by address in U-Mode.

This function flush and invalidate several D-Cache lines specified by the address and line count. Command CCM_DC_WBINVAL is written to CSR *CSR_CCM_UCOMMAND* (page 70).

Remark This function must be executed in M/S/U-Mode only.

Parameters

- [in] addr: start address to be flushed and invalidated
- [in] cnt: count of cache lines to be flushed and invalidated

__STATIC_FORCEINLINE unsigned long MLockDCacheLine(unsigned long addr)

Lock one D-Cache line specified by address in M-Mode.

This function lock one D-Cache line specified by the address. Command CCM_DC_LOCK is written to CSR *CSR_CCM_MCOMMAND* (page 70).

Remark This function must be executed in M-Mode only.

Return result of CCM lock operation, see enum CCM_OP_FINFO

Parameters

• [in] addr: start address to be locked

__STATIC_FORCEINLINE unsigned long MLockDCacheLines (unsigned long addr, unsigned long Lock several D-Cache lines specified by address in M-Mode.

This function lock several D-Cache lines specified by the address and line count. Command CCM_DC_LOCK is written to CSR *CSR_CCM_MCOMMAND* (page 70).

Remark This function must be executed in M-Mode only.

Return result of CCM lock operation, see enum CCM_OP_FINFO

Parameters

- [in] addr: start address to be locked
- [in] cnt: count of cache lines to be locked

__STATIC_FORCEINLINE unsigned long SLockDCacheLine(unsigned long addr)

Lock one D-Cache line specified by address in S-Mode.

This function lock one D-Cache line specified by the address. Command CCM_DC_LOCK is written to CSR *CSR_CCM_SCOMMAND* (page 70).

Remark This function must be executed in M/S-Mode only.

Return result of CCM lock operation, see enum CCM_OP_FINFO

Parameters

• [in] addr: start address to be locked

__STATIC_FORCEINLINE unsigned long SLockDCacheLines (unsigned long addr, unsigned long Lock several D-Cache lines specified by address in S-Mode.

This function lock several D-Cache lines specified by the address and line count. Command CCM DC LOCK is written to CSR CSR CCM SCOMMAND (page 70).

Remark This function must be executed in M/S-Mode only.

Return result of CCM lock operation, see enum CCM_OP_FINFO

Parameters

- [in] addr: start address to be locked
- [in] cnt: count of cache lines to be locked

__STATIC_FORCEINLINE unsigned long ULockDCacheLine(unsigned long addr)

Lock one D-Cache line specified by address in U-Mode.

This function lock one D-Cache line specified by the address. Command CCM_DC_LOCK is written to CSR *CSR_CCM_UCOMMAND* (page 70).

Remark This function must be executed in M/S/U-Mode only.

Return result of CCM lock operation, see enum CCM_OP_FINFO

Parameters

• [in] addr: start address to be locked

__STATIC_FORCEINLINE unsigned long ULockDCacheLines (unsigned long addr, unsigned long Lock several D-Cache lines specified by address in U-Mode.

This function lock several D-Cache lines specified by the address and line count. Command CCM_DC_LOCK is written to CSR CSR_CCM_UCOMMAND (page 70).

Remark This function must be executed in M/S/U-Mode only.

Return result of CCM lock operation, see enum CCM_OP_FINFO

Parameters

- [in] addr: start address to be locked
- [in] cnt: count of cache lines to be locked

___STATIC_FORCEINLINE void MUnlockDCacheLine(unsigned long addr)

Unlock one D-Cache line specified by address in M-Mode.

This function unlock one D-Cache line specified by the address. Command CCM_DC_UNLOCK is written to CSR *CSR_CCM_MCOMMAND* (page 70).

Remark This function must be executed in M-Mode only.

Parameters

• [in] addr: start address to be unlocked

__STATIC_FORCEINLINE void MUnlockDCacheLines (unsigned long addr, unsigned long cnt)
Unlock several D-Cache lines specified by address in M-Mode.

This function unlock several D-Cache lines specified by the address and line count. Command CCM_DC_UNLOCK is written to CSR CSR_CCM_MCOMMAND (page 70).

Remark This function must be executed in M-Mode only.

2.5. NMSIS Core API 395

Parameters

- [in] addr: start address to be unlocked
- [in] cnt: count of cache lines to be unlocked

__STATIC_FORCEINLINE void SUnlockDCacheLine(unsigned long addr)

Unlock one D-Cache line specified by address in S-Mode.

This function unlock one D-Cache line specified by the address. Command CCM_DC_UNLOCK is written to CSR CSR CCM SCOMMAND (page 70).

Remark This function must be executed in M/S-Mode only.

Parameters

• [in] addr: start address to be unlocked

__STATIC_FORCEINLINE void SUnlockDCacheLines (unsigned long addr, unsigned long cnt)
Unlock several D-Cache lines specified by address in S-Mode.

This function unlock several D-Cache lines specified by the address and line count. Command CCM_DC_UNLOCK is written to CSR CSR_CCM_SCOMMAND (page 70).

Remark This function must be executed in M/S-Mode only.

Parameters

- [in] addr: start address to be unlocked
- [in] cnt: count of cache lines to be unlocked

__STATIC_FORCEINLINE void UUnlockDCacheLine(unsigned long addr)

Unlock one D-Cache line specified by address in U-Mode.

This function unlock one D-Cache line specified by the address. Command CCM_DC_UNLOCK is written to CSR *CSR_CCM_UCOMMAND* (page 70).

Remark This function must be executed in M/S/U-Mode only.

Parameters

• [in] addr: start address to be unlocked

__STATIC_FORCEINLINE void UUnlockDCacheLines (unsigned long addr, unsigned long cnt)
Unlock several D-Cache lines specified by address in U-Mode.

This function unlock several D-Cache lines specified by the address and line count. Command CCM DC UNLOCK is written to CSR CSR CCM UCOMMAND (page 70).

Remark This function must be executed in M/S/U-Mode only.

Parameters

- [in] addr: start address to be unlocked
- [in] cnt: count of cache lines to be unlocked

__STATIC_FORCEINLINE void MInvalDCache(void)

Invalidate all D-Cache lines in M-Mode.

This function invalidate all D-Cache lines. Command CCM_DC_INVAL_ALL is written to CSR *CSR_CCM_MCOMMAND* (page 70).

Remark This function must be executed in M-Mode only.

Parameters

• [in] addr: start address to be invalidated

__STATIC_FORCEINLINE void SInvalDCache(void)

Invalidate all D-Cache lines in S-Mode.

This function invalidate all D-Cache lines. Command CCM_DC_INVAL_ALL is written to CSR *CSR_CCM_SCOMMAND* (page 70).

Remark This function must be executed in M/S-Mode only.

Parameters

• [in] addr: start address to be invalidated

__STATIC_FORCEINLINE void UInvalDCache(void)

Invalidate all D-Cache lines in U-Mode.

This function invalidate all D-Cache lines. In U-Mode, this operation will be automatically translated to flush and invalidate operations by hardware. Command CCM_DC_INVAL_ALL is written to CSR *CSR_CCM_UCOMMAND* (page 70).

Remark This function must be executed in M/S/U-Mode only.

Parameters

• [in] addr: start address to be invalidated

__STATIC_FORCEINLINE void MFlushDCache(void)

Flush all D-Cache lines in M-Mode.

This function flush all D-Cache lines. Command CCM_DC_WB_ALL is written to CSR CSR CCM MCOMMAND (page 70).

Remark This function must be executed in M-Mode only.

Parameters

• [in] addr: start address to be flushed

__STATIC_FORCEINLINE void SFlushDCache(void)

Flush all D-Cache lines in S-Mode.

This function flush all D-Cache lines. Command CCM_DC_WB_ALL is written to CSR *CSR_CCM_SCOMMAND* (page 70).

Remark This function must be executed in M/S-Mode only.

Parameters

• [in] addr: start address to be flushed

STATIC FORCEINLINE void UFlushDCache (void)

Flush all D-Cache lines in U-Mode.

This function flush all D-Cache lines. Command CCM_DC_WB_ALL is written to CSR *CSR_CCM_UCOMMAND* (page 70).

Remark This function must be executed in M/S/U-Mode only.

Parameters

• [in] addr: start address to be flushed

__STATIC_FORCEINLINE void MFlushInvalDCache(void)

Flush and invalidate all D-Cache lines in M-Mode.

2.5. NMSIS Core API 397

This function flush and invalidate all D-Cache lines. Command CCM_DC_WBINVAL_ALL is written to CSR *CSR_CCM_MCOMMAND* (page 70).

Remark This function must be executed in M-Mode only.

Parameters

• [in] addr: start address to be flushed and locked

__STATIC_FORCEINLINE void SFlushInvalDCache(void)

Flush and invalidate all D-Cache lines in S-Mode.

This function flush and invalidate all D-Cache lines. Command CCM_DC_WBINVAL_ALL is written to CSR *CSR_CCM_SCOMMAND* (page 70).

Remark This function must be executed in M/S-Mode only.

Parameters

• [in] addr: start address to be flushed and locked

__STATIC_FORCEINLINE void UFlushInvalDCache(void)

Flush and invalidate all D-Cache lines in U-Mode.

This function flush and invalidate all D-Cache lines. Command CCM_DC_WBINVAL_ALL is written to CSR *CSR_CCM_UCOMMAND* (page 70).

Remark This function must be executed in M/S/U-Mode only.

Parameters

• [in] addr: start address to be flushed and locked

2.5.14 System Device Configuration

group NMSIS_Core_SystemConfig

Functions for system init, clock setup and interrupt/exception/nmi functions available in system_<device>.c.

Nuclei provides a template file **system_Device.c** that must be adapted by the silicon vendor to match their actual device. As a **minimum requirement**, this file must provide:

- A device-specific system configuration function, *SystemInit* (page 399).
- A global variable that contains the system frequency, SystemCoreClock (page 399).
- A global eclic configuration initialization, *ECLIC_Init* (page 401).
- Global c library _init (page 399) and _fini (page 399) functions called right before calling main function.
- Vendor customized interrupt, exception and nmi handling code, see Interrupt and Exception and NMI Handling (page 400)

The file configures the device and, typically, initializes the oscillator (PLL) that is part of the microcontroller device. This file might export other functions or variables that provide a more flexible configuration of the microcontroller system.

And this file also provided common interrupt, exception and NMI exception handling framework template, Silicon vendor can customize these template code as they want.

Note Please pay special attention to the static variable SystemCoreClock. This variable might be used throughout the whole system initialization and runtime to calculate frequency/time related values. Thus one must assure that the variable always reflects the actual system clock speed.

Attention Be aware that a value stored to SystemCoreClock during low level initialization (i.e. SystemInit() (page 399)) might get overwritten by C library startup code and/or .bss section initialization. Thus its highly recommended to call SystemCoreClockUpdate (page 399) at the beginning of the user main() routine.

Functions

void SystemCoreClockUpdate (void)

Function to update the variable *SystemCoreClock* (page 399).

Updates the variable *SystemCoreClock* (page 399) and must be called whenever the core clock is changed during program execution. The function evaluates the clock register settings and calculates the current core clock.

void SystemInit (void)

Function to Initialize the system.

Initializes the microcontroller system. Typically, this function configures the oscillator (PLL) that is part of the microcontroller device. For systems with a variable clock speed, it updates the variable *SystemCore-Clock* (page 399). SystemInit is called from the file **startup**.

void _premain_init (void)

early init function before main

This function is executed right before main function. For RISC-V gnu toolchain, _init function might not be called by _ libc init array function, so we defined a new function to do initialization

void _postmain_fini (int status)

finish function after main

This function is executed right after main function. For RISC-V gnu toolchain, _fini function might not be called by __libc_fini_array function, so we defined a new function to do initialization

Parameters

• [in] status: status code return from main

void _init (void)

```
_init function called in __libc_init_array()
```

This __libc_init_array() function is called during startup code, user need to implement this function, otherwise when link it will error init.c:(.text.__libc_init_array+0x26): undefined reference to '_init'

Note Please use *_premain_init* (page 399) function now

void _fini (void)

```
_fini function called in __libc_fini_array()
```

This __libc_fini_array() function is called when exit main. user need to implement this function, otherwise when link it will error fini.c:(.text.__libc_fini_array+0x28): undefined reference to '_fini'

Note Please use _postmain_fini (page 399) function now

Variables

uint32_t SystemCoreClock = SYSTEM_CLOCK

Variable to hold the system core clock value.

Holds the system core clock, which is the system clock frequency supplied to the SysTick timer and the processor core clock. This variable can be used by debuggers to query the frequency of the debug timer or to configure the trace clock speed.

2.5. NMSIS Core API 399

Attention Compilers must be configured to avoid removing this variable in case the application program is not using it. Debugging systems require the variable to be physically present in memory so that it can be examined to configure the debugger.

Interrupt Exception NMI Handling

group NMSIS_Core_IntExcNMI_Handling

Functions for interrupt, exception and nmi handle available in system_<device>.c.

Nuclei provide a template for interrupt, exception and NMI handling. Silicon Vendor could adapat according to their requirement. Silicon vendor could implement interface for different exception code and replace current implementation.

Defines

MAX_SYSTEM_EXCEPTION_NUM 12

Max exception handler number, don't include the NMI(0xFFF) one.

Typedefs

typedef void (*EXC_HANDLER) (unsigned long meause, unsigned long sp)

Exception Handler Function Typedef.

Note This typedef is only used internal in this system_<Device>.c file. It is used to do type conversion for registered exception handler before calling it.

Functions

static void **system_default_exception_handler** (unsigned long *mcause*, unsigned long *sp*)

System Default Exception Handler.

This function provided a default exception and NMI handling code for all exception ids. By default, It will just print some information for debug, Vendor can customize it according to its requirements.

static void Exception_Init (void)

Initialize all the default core exception handlers.

The core exception handler for each exception id will be initialized to *system_default_exception_handler* (page 400).

Note Called in _init (page 399) function, used to initialize default exception handlers for all exception IDs

void Exception_DumpFrame (unsigned long sp)

Dump Exception Frame.

This function provided feature to dump exception frame stored in stack.

void Exception_Register_EXC (uint32_t EXCn, unsigned long exc_handler)

Register an exception handler for exception code EXCn.

- For EXCn < MAX_SYSTEM_EXCEPTION_NUM (page 400), it will be registered into SystemExceptionHandlers[EXCn-1].
- For EXCn == NMI_EXCn, it will be registered into SystemExceptionHandlers[MAX_SYSTEM_EXCEPTION_NUM].

Parameters

- EXCn: See EXCn_Type
- exc_handler: The exception handler for this exception code EXCn

unsigned long Exception Get EXC (uint32 t EXCn)

Get current exception handler for exception code EXCn.

- For EXCn < MAX_SYSTEM_EXCEPTION_NUM (page 400), it will return SystemExceptionHandlers[EXCn-1].
- For EXCn == NMI_EXCn, it will return SystemExceptionHandlers[MAX SYSTEM EXCEPTION NUM].

Return Current exception handler for exception code EXCn, if not found, return 0.

Parameters

- EXCn: See EXCn_Type

uint32_t core_exception_handler (unsigned long mcause, unsigned long sp)

Common NMI and Exception handler entry.

This function provided a command entry for NMI and exception. Silicon Vendor could modify this template implementation according to requirement.

Remark

- RISCV provided common entry for all types of exception. This is proposed code template for exception entry function, Silicon Vendor could modify the implementation.
- For the core_exception_handler template, we provided exception register function Exception_Register_EXCn which can help developer to register your exception handler for specific exception number.

void ECLIC_Init (void)

Initialize Global ECLIC Config.

ECLIC needs be initialized after boot up, Vendor could also change the initialization configuration.

```
int32_t ECLIC_Register_IRQ (IRQn_Type IRQn, uint8_t shv, ECLIC_TRIGGER_Type trig_mode, uint8_t lvl, uint8_t priority, void *handler)
```

Initialize a specific IRQ and register the handler.

This function set vector mode, trigger mode and polarity, interrupt level and priority, assign handler for specific IRQn.

Return -1 means invalid input parameter. 0 means successful.

Remark

- This function use to configure specific eclic interrupt and register its interrupt handler and enable its interrupt.
- If the vector table is placed in read-only section(FLASHXIP mode), handler could not be installed

Parameters

- [in] IRQn: NMI interrupt handler address
- [in] shv: ECLIC_NON_VECTOR_INTERRUPT (page 84) means non-vector mode, and ECLIC_VECTOR_INTERRUPT (page 84) is vector mode
- [in] trig_mode: see ECLIC_TRIGGER_Type (page 84)

2.5. NMSIS Core API 401

- [in] lvl: interupt level
- [in] priority: interrupt priority
- [in] handler: interrupt handler, if NULL, handler will not be installed

Variables

unsigned long SystemExceptionHandlers[MAX_SYSTEM_EXCEPTION_NUM + 1]
Store the exception handlers for each exception ID.

Note

- This SystemExceptionHandlers are used to store all the handlers for all the exception codes Nuclei N/NX core provided.
- Exception code 0 11, totally 12 exceptions are mapped to SystemExceptionHandlers[0:11]
- Exception for NMI is also re-routed to exception handling(exception code 0xFFF) in startup code configuration, the handler itself is mapped to SystemExceptionHandlers[MAX_SYSTEM_EXCEPTION_NUM]

2.5.15 ARM Compatiable Functions

group NMSIS_Core_ARMCompatiable_Functions

A few functions that compatiable with ARM CMSIS-Core.

Here we provided a few functions that compatiable with ARM CMSIS-Core, mostly used in the DSP and NN library.

Defines

```
ISB() RWMB()
     Instruction Synchronization Barrier, compatiable with ARM.
__DSB() __RWMB()
     Data Synchronization Barrier, compatiable with ARM.
___DMB() __RWMB()
    Data Memory Barrier, compatiable with ARM.
__LDRBT (ptr) \_LB((ptr))
    LDRT Unprivileged (8 bit), ARM Compatiable.
__LDRHT (ptr) __LH((ptr))
    LDRT Unprivileged (16 bit), ARM Compatiable.
LDRT (ptr) LW((ptr))
    LDRT Unprivileged (32 bit), ARM Compatiable.
___STRBT (val, ptr) ___SB((ptr), (val))
     STRT Unprivileged (8 bit), ARM Compatiable.
 STRHT (val, ptr) SH((ptr), (val))
     STRT Unprivileged (16 bit), ARM Compatiable.
  \_STRT (val, ptr) \_\_SW((ptr), (val))
     STRT Unprivileged (32 bit), ARM Compatiable.
```

```
_SSAT (val, sat) __RV_SCLIP32((val), (sat-1))
     Signed Saturate.
     Saturates a signed value.
     Return Saturated value
     Parameters
           • [in] value: Value to be saturated
           • [in] sat: Bit position to saturate to (1..32)
  _USAT (val, sat) __RV_UCLIP32((val), (sat))
     Unsigned Saturate.
     Saturates an unsigned value.
     Return Saturated value
     Parameters
           • [in] value: Value to be saturated
           • [in] sat: Bit position to saturate to (0..31)
__RBIT (value) __RV_BITREVI((value), 31)
     Reverse bit order of value.
     Reverses the bit order of the given value.
     Return Reversed value
     Parameters
           • [in] value: Value to reverse
 CLZ (data) RV CLZ32(data)
     Count leading zeros.
     Counts the number of leading zeros of a data value.
     Return number of leading zeros in value
     Parameters
           • [in] data: Value to count the leading zeros
Functions
 __STATIC_FORCEINLINE uint32_t __REV(uint32_t value)
     Reverse byte order (32 bit)
     Reverses the byte order in unsigned integer value. For example, 0x12345678 becomes 0x78563412.
     Return Reversed value
     Parameters
           • [in] value: Value to reverse
  _STATIC_FORCEINLINE uint32_t __REV16(uint32_t value)
     Reverse byte order (16 bit)
     Reverses the byte order within each halfword of a word. For example, 0x12345678 becomes 0x34127856.
```

2.5. NMSIS Core API 403

Return Reversed value

Parameters

• [in] value: Value to reverse

__STATIC_FORCEINLINE int16_t __REVSH(int16_t value)

Reverse byte order (16 bit)

Reverses the byte order in a 16-bit value and returns the signed 16-bit result. For example, 0x0080 becomes 0x8000.

Return Reversed value

Parameters

• [in] value: Value to reverse

```
__STATIC_FORCEINLINE uint32_t __ROR(uint32_t op1, uint32_t op2)
```

Rotate Right in unsigned value (32 bit)

Rotate Right (immediate) provides the value of the contents of a register rotated by a variable number of bits.

Return Rotated value

Parameters

- [in] op1: Value to rotate
- [in] op2: Number of Bits to rotate(0-31)

CHAPTER

THREE

NMSIS DSP

3.1 Overview

3.1.1 Introduction

This user manual describes the NMSIS DSP software library, a suite of common signal processing functions for use on Nuclei N/NX Class Processors based devices.

The library is divided into a number of functions each covering a specific category:

- · Basic math functions
- · Fast math functions
- · Complex math functions
- Filters
- · Matrix functions
- · Transform functions
- Motor control functions
- · Statistical functions
- · Support functions
- · Interpolation functions

The library has separate functions for operating on 8-bit integers, 16-bit integers, 32-bit integer and 32-bit floating-point values.

3.1.2 Using the Library

The library functions are declared in the public file riscv_math.h which is placed in the NMSIS/DSP/Include folder.

Simply include this file and link the appropriate library in the application and begin calling the library functions.

The Library supports single public header file riscv_math.h for Nuclei N/NX Class Processors cores with little endian. Same header file will be used for floating point unit(FPU) variants.

3.1.3 Examples

The library ships with a number of examples (page 408) which demonstrate how to use the library functions.

3.1.4 Toolchain Support

The library has been developed and tested with RISCV GCC Toolchain.

The library is being tested in GCC toolchain and updates on this activity will be made available shortly.

3.1.5 Building the Library

The library installer contains a **Makefile** to rebuild libraries on Nuclei RISCV GCC toolchain in the **NMSIS**/ folder.

The libraries can be built by run make <code>gen_dsp_lib</code>, it will build and install DSP library into Library/DSP/GCC folder.

3.1.6 Preprocessor Macros

Each library project have different preprocessor macros.

RISCV_MATH_MATRIX_CHECK: Define macro RISCV_MATH_MATRIX_CHECK for checking on the input and output sizes of matrices

RISCV_MATH_ROUNDING: Define macro RISCV_MATH_ROUNDING for rounding on support functions

RISCV_MATH_LOOPUNROLL: Define macro RISCV_MATH_LOOPUNROLL to enable manual loop unrolling in DSP functions

3.2 Using NMSIS-DSP

Here we will describe how to run the nmsis dsp examples in Nuclei Spike.

3.2.1 Preparation

- Nuclei Modified Spike xl_spike
- Nuclei SDK modified for xl_spike branch dev_xlspike
- Nuclei RISCV GNU Toolchain, riscv gcc 10 with vector extension is required.
- CMake >= 3.5

3.2.2 Tool Setup

1. Export **PATH** correctly for xl_spike and riscv-nuclei-elf-gcc

export PATH=/path/to/xl_spike/bin:/path/to/riscv-nuclei-elf-gcc/bin/:\$PATH

3.2.3 Build NMSIS DSP Library

- 1. Download or clone NMSIS source code into NMSIS directory.
- 2. cd to NMSIS/NMSIS/ directory
- 3. Build NMSIS DSP library using make gen_dsp_lib

- 4. Strip debug informations using make strip_dsp_lib to make the generated library smaller
- 5. The dsp library will be generated into ./Library/DSP/GCC folder
- 6. The dsp libraries will be look like this:

```
$ ls -lh Library/DSP/GCC/
total 52M
-rw-rw-r-- 1 hqfang nucleisys 2.5M Aug 6 16:07 libnmsis_dsp_rv32imac.a
-rw-rw-r-- 1 hqfanq nucleisys 3.2M Auq 6 16:07 libnmsis_dsp_rv32imacp.a
-rw-rw-r-- 1 hqfang nucleisys 2.3M Aug 6 16:07 libnmsis_dsp_rv32imafc.a
-rw-rw-r-- 1 hqfang nucleisys 3.0M Aug 6 16:07 libnmsis_dsp_rv32imafcp.a
-rw-rw-r-- 1 hqfang nucleisys 2.3M Aug 6 16:07 libnmsis_dsp_rv32imafdc.a
-rw-rw-r-- 1 hqfang nucleisys 3.0M Aug 6 16:07 libnmsis_dsp_rv32imafdcp.a
-rw-rw-r-- 1 hqfang nucleisys 3.1M Aug 6 16:07 libnmsis_dsp_rv64imac.a
-rw-rw-r-- 1 hqfanq nucleisys 4.3M Aug 6 16:07 libnmsis_dsp_rv64imacp.a
-rw-rw-r-- 1 hqfanq nucleisys 3.0M Auq 6 16:07 libnmsis_dsp_rv64imafc.a
-rw-rw-r-- 1 hqfanq nucleisys 4.0M Aug 6 16:07 libnmsis_dsp_rv64imafcp.a
-rw-rw-r-- 1 hqfanq nucleisys 3.9M Aug 6 16:08 libnmsis_dsp_rv64imafcpv.a
-rw-rw-r-- 1 hqfanq nucleisys 3.6M Aug 6 16:08 libnmsis_dsp_rv64imafcv.a
-rw-rw-r-- 1 hqfang nucleisys 3.0M Aug 6 16:08 libnmsis_dsp_rv64imafdc.a
-rw-rw-r-- 1 hqfang nucleisys 4.0M Aug 6 16:08 libnmsis_dsp_rv64imafdcp.a
-rw-rw-r-- 1 hqfanq nucleisys 3.9M Aug 6 16:08 libnmsis_dsp_rv64imafdcpv.a
-rw-rw-r-- 1 hgfang nucleisys 3.6M Aug 6 16:08 libnmsis_dsp_rv64imafdcv.a
```

- 7. library name with extra p is build with RISCV DSP enabled.
 - libnmsis_dsp_rv32imac.a: Build for RISCV_ARCH=rv32imac without DSP.
 - libnmsis_dsp_rv32imacp.a: Build for RISCV_ARCH=rv32imac with DSP enabled.
- 8. library name with extra v is build with RISCV Vector enabled, only valid for RISC-V 64bit processor.
 - libnmsis_dsp_rv64imac.a: Build for RISCV_ARCH=rv64imac without Vector.
 - libnmsis_dsp_rv64imacv.a: Build for RISCV_ARCH=rv64imac with Vector enabled.

Note:

- You can also directly build both DSP and NN library using make gen
- You can strip the generated DSP and NN library using make strip
- DSP and Vector extension can be combined, such as p, v and pv
- Vector extension currently is only available with RISC-V 64 bit processor

3.2.4 How to run

1. Set environment variables NUCLEI_SDK_ROOT and NUCLEI_SDK_NMSIS, and set Nuclei SDK SoC to xl-spike

```
export NUCLEI_SDK_ROOT=/path/to/nuclei_sdk
export NUCLEI_SDK_NMSIS=/path/to/NMSIS/NMSIS
export SOC=xlspike
```

- 2. Let us take ./riscv_class_marks_example/ for example
- 3. cd ./riscv_class_marks_example/

4. Run with RISCV DSP enabled and Vector enabled NMSIS-DSP library for CORE ux600

```
# Clean project
make DSP_ENABLE=ON VECTOR_ENABLE=ON CORE=ux600 clean
# Build project
make DSP_ENABLE=ON VECTOR_ENABLE=ON CORE=ux600 all
# Run application using xl_spike
make DSP_ENABLE=ON VECTOR_ENABLE=ON CORE=ux600 run
```

5. Run with RISCV DSP disabled and Vector disabled NMSIS-DSP library for CORE ux600

```
make DSP_ENABLE=OFF VECTOR_ENABLE=OFF CORE=ux600 clean
make DSP_ENABLE=OFF VECTOR_ENABLE=OFF CORE=ux600 all
make DSP_ENABLE=OFF VECTOR_ENABLE=OFF CORE=ux600 run
```

Note:

• You can easily run this example in your hardware, if you have enough memory to run it, just modify the SOC to the one your are using in step 1.

3.3 NMSIS DSP API

If you want to access doxygen generated NMSIS DSP API, please click NMSIS DSP API Doxygen Documentation.

3.3.1 Examples

Bayes Example

group BayesExample Description:

Demonstrates the use of Bayesian classifier functions. It is complementing the tutorial about classical ML with NMSIS-DSP and python scikit-learn: https://developer.arm.com/solutions/machine-learning-on-arm/developer-material/how-to-guides/implement-classical-ml-with-arm-nmsis-dsp-libraries

Class Marks Example

```
group ClassMarks
```

Refer riscv_class_marks_example_f32.c

Description:

Demonstrates the use the Maximum, Minimum, Mean, Standard Deviation, Variance and Matrix functions to calculate statistical values of marks obtained in a class.

Note This example also demonstrates the usage of static initialization.

Variables Description:

- testMarks_f32 points to the marks scored by 20 students in 4 subjects
- max marks Maximum of all marks

- min marks Minimum of all marks
- · mean Mean of all marks
- var Variance of the marks
- std Standard deviation of the marks
- numStudents Total number of students in the class

NMSIS DSP Software Library Functions Used:

- riscv_mat_init_f32()
- riscv_mat_mult_f32()
- riscv_max_f32()
- riscv_min_f32()
- riscv_mean_f32()
- riscv_std_f32()
- riscv_var_f32()

Convolution Example

group ConvolutionExample

Refer riscv_convolution_example_f32.c

Description:

Demonstrates the convolution theorem with the use of the Complex FFT, Complex-by-Complex Multiplication, and Support Functions.


Algorithm:

The convolution theorem states that convolution in the time domain corresponds to multiplication in the frequency domain. Therefore, the Fourier transform of the convolution of two signals is equal to the product of their individual Fourier transforms. The Fourier transform of a signal can be evaluated efficiently using the Fast Fourier Transform (FFT).

Two input signals, a [n] and b [n], with lengths n1 and n2 respectively, are zero padded so that their lengths become N, which is greater than or equal to (n1+n2-1) and is a power of 4 as FFT implementation is radix-4. The convolution of a [n] and b [n] is obtained by taking the FFT of the input signals, multiplying the Fourier transforms of the two signals, and taking the inverse FFT of the multiplied result.

This is denoted by the following equations: where A[k] and B[k] are the N-point FFTs of the signals a[n] and b[n] respectively. The length of the convolved signal is (n1+n2-1).

Block Diagram:

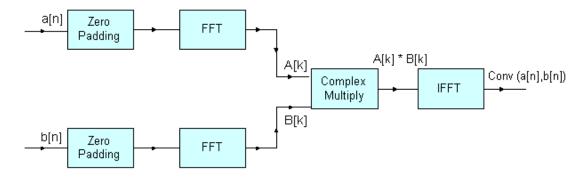

- testInputA_f32 points to the first input sequence
- srcALen length of the first input sequence
- testInputB_f32 points to the second input sequence
- srcBLen length of the second input sequence
- outLen length of convolution output sequence, (srcALen + srcBLen 1)
- AxB points to the output array where the product of individual FFTs of inputs is stored.

NMSIS DSP Software Library Functions Used:

- riscv_fill_f32()
- riscv_copy_f32()
- riscv_cfft_radix4_init_f32()
- riscv_cfft_radix4_f32()
- riscv_cmplx_mult_cmplx_f32()

Dot Product Example

group DotproductExample

Refer riscv_dotproduct_example_f32.c

Description:


Demonstrates the use of the Multiply and Add functions to perform the dot product. The dot product of two vectors is obtained by multiplying corresponding elements and summing the products.

Algorithm:

The two input vectors A and B with length n, are multiplied element-by-element and then added to obtain dot product.

This is denoted by the following equation:

Block Diagram:



- srcA_buf_f32 points to first input vector
- srcB_buf_f32 points to second input vector
- testOutput stores dot product of the two input vectors.

NMSIS DSP Software Library Functions Used:

- riscv_mult_f32()
- riscv_add_f32()

Frequency Bin Example

group FrequencyBin


Refer riscv_fft_bin_example_f32.c

Description

Demonstrates the calculation of the maximum energy bin in the frequency domain of the input signal with the use of Complex FFT, Complex Magnitude, and Maximum functions.


Algorithm:

The input test signal contains a 10 kHz signal with uniformly distributed white noise. Calculating the FFT of the input signal will give us the maximum energy of the bin corresponding to the input frequency of 10 kHz.

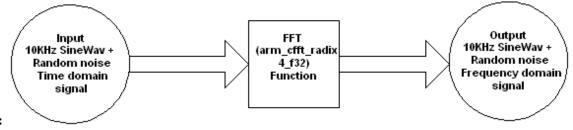

Block Diagram:

The figure below shows the time domain signal of 10 kHz signal with uniformly distributed white noise, and the next figure shows the input in the frequency domain. The bin with maximum energy corresponds to 10 kHz signal.

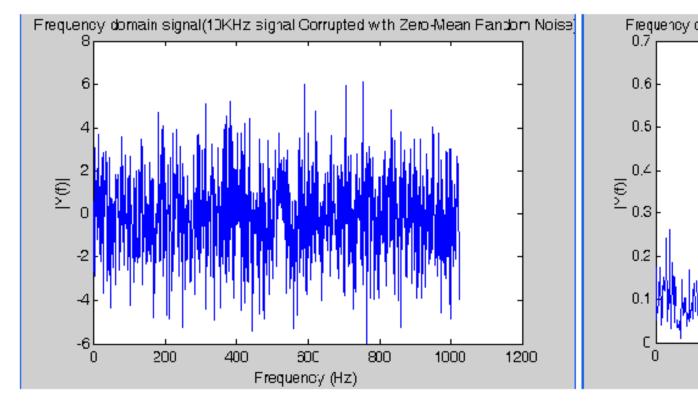

- testInput_f32_10khz points to the input data
- testOutput points to the output data
- fftSize length of FFT
- ifftFlag flag for the selection of CFFT/CIFFT
- doBitReverse Flag for selection of normal order or bit reversed order
- refIndex reference index value at which maximum energy of bin ocuurs
- testIndex calculated index value at which maximum energy of bin ocuurs

NMSIS DSP Software Library Functions Used:

- riscv_cfft_f32()
- riscv_cmplx_mag_f32()
- riscv_max_f32()

FIR Lowpass Filter Example

group FIRLPF

Refer riscv_fir_example_f32.c

Description:


Removes high frequency signal components from the input using an FIR lowpass filter. The example demonstrates how to configure an FIR filter and then pass data through it in a block-by-block fashion.




Algorithm:

The input signal is a sum of two sine waves: 1 kHz and 15 kHz. This is processed by an FIR lowpass filter with cutoff frequency 6 kHz. The lowpass filter eliminates the 15 kHz signal leaving only the 1 kHz sine wave at the output.


The lowpass filter was designed using MATLAB with a sample rate of 48 kHz and a length of 29 points. The MATLAB code to generate the filter coefficients is shown below: The first argument is the "order" of the filter and is always one less than the desired length. The second argument is the normalized cutoff frequency. This is in the range 0 (DC) to 1.0 (Nyquist). A 6 kHz cutoff with a Nyquist frequency of 24 kHz lies at a normalized frequency of 6/24 = 0.25. The NMSIS FIR filter function requires the coefficients to be in time reversed order. The resulting filter coefficients and are shown below. Note that the filter is symmetric (a property of linear phase FIR filters) and the point of symmetry is sample 14. Thus the filter will have a delay of 14 samples for all frequencies.

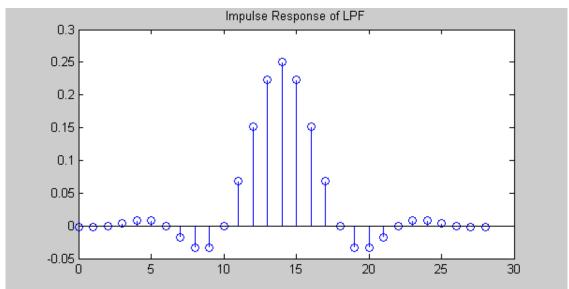


The frequency response of the filter is shown next. The passband gain of the filter is 1.0 and it reaches 0.5 at the cutoff frequency 6 kHz.

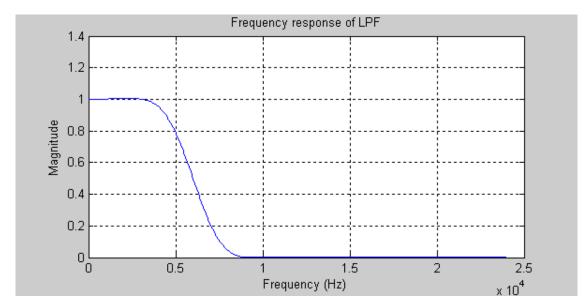

The input signal is shown below. The left hand side shows the signal in the time domain while the right hand side is a frequency domain representation. The two sine wave components can be clearly seen.

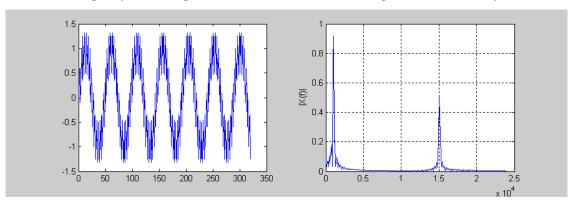

The output of the filter is shown below. The 15 kHz component has been eliminated.

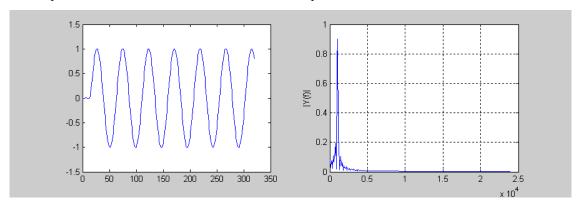

- testInput_f32_1kHz_15kHz points to the input data
- refOutput points to the reference output data
- testOutput points to the test output data

- firStateF32 points to state buffer
- firCoeffs32 points to coefficient buffer
- blockSize number of samples processed at a time
- numBlocks number of frames

NMSIS DSP Software Library Functions Used:

- riscv_fir_init_f32()
- riscv_fir_f32()

Graphic Audio Equalizer Example

group GEQ5Band


Refer riscv_graphic_equalizer_example_q31.c

Description:


This example demonstrates how a 5-band graphic equalizer can be constructed using the Biquad cascade functions. A graphic equalizer is used in audio applications to vary the tonal quality of the audio.

Block Diagram:


The design is based on a cascade of 5 filter sections. Each filter section is 4th order and consists of a cascade of two Biquads. Each filter has a nominal gain of 0 dB (1.0 in linear units) and boosts or cuts signals within a specific frequency range. The edge frequencies between the 5 bands are 100, 500, 2000, and 6000 Hz. Each band has an adjustable boost or cut in the range of +/-9 dB. For example, the band that extends from 500 to 2000 Hz has the response shown below:

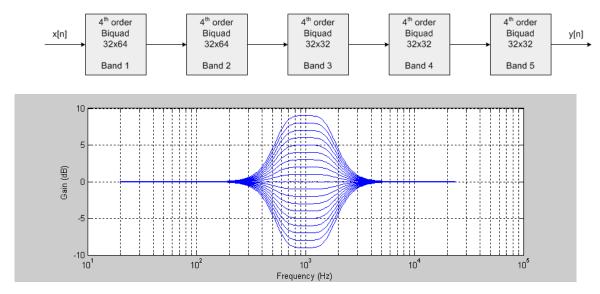


With 1 dB steps, each filter has a total of 19 different settings. The filter coefficients for all possible 19 settings were precomputed in MATLAB and stored in a table. With 5 different tables, there are a total of 5 x 19 = 95 different 4th order filters. All 95 responses are shown below:

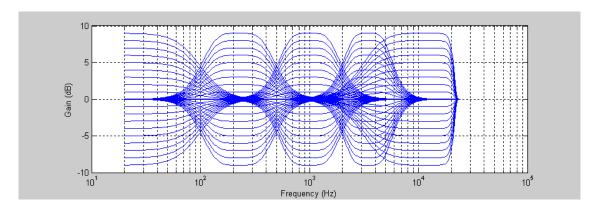

Each 4th order filter has 10 coefficients for a grand total of 950 different filter coefficients that must be tabulated. The input and output data is in Q31 format. For better noise performance, the two low frequency bands are implemented using the high precision 32x64-bit Biquad filters. The remaining 3 high frequency bands use standard 32x32-bit Biquad filters. The input signal used in the example is a logarithmic chirp.

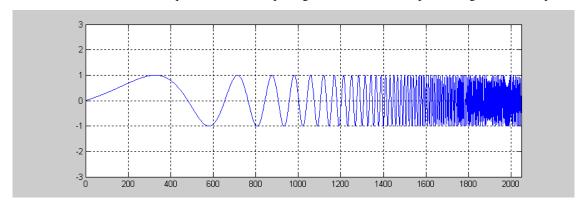

The array bandGains specifies the gain in dB to apply in each band. For example, if bandGains= $\{0, -3, 6, 4, -6\}$; then the output signal will be:

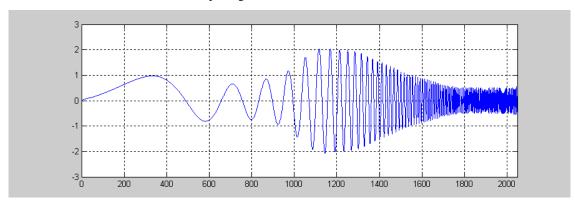

Note The output chirp signal follows the gain or boost of each band.

Variables Description:

• testInput_f32 points to the input data

- testRefOutput_f32 points to the reference output data
- testOutput points to the test output data
- inputQ31 temporary input buffer
- outputQ31 temporary output buffer
- biquadStateBand1Q31 points to state buffer for band1
- biquadStateBand2Q31 points to state buffer for band2
- biquadStateBand3Q31 points to state buffer for band3
- biquadStateBand4Q31 points to state buffer for band4
- biquadStateBand5Q31 points to state buffer for band5
- coeffTable points to coefficient buffer for all bands
- gainDB gain buffer which has gains applied for all the bands

NMSIS DSP Software Library Functions Used:

- riscv_biquad_cas_df1_32x64_init_q31()
- riscv_biquad_cas_df1_32x64_q31()
- riscv_biquad_cascade_df1_init_q31()
- riscv_biquad_cascade_df1_q31()
- riscv_scale_q31()
- riscv_scale_f32()
- riscv_float_to_q31()
- riscv_q31_to_float()

Linear Interpolate Example


group LinearInterpExample

NMSIS DSP Software Library Linear Interpolate Example

Description This example demonstrates usage of linear interpolate modules and fast math modules. Method 1 uses fast math sine function to calculate sine values using cubic interpolation and method 2 uses linear interpolation function and results are compared to reference output. Example shows linear interpolation function can be used to get higher precision compared to fast math sin calculation.

Refer riscv_linear_interp_example_f32.c

Block Diagram:

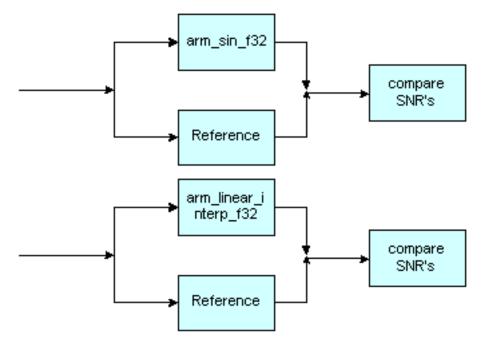

- testInputSin_f32 points to the input values for sine calculation
- \bullet testRefSinOutput32_f32 points to the reference values caculated from sin() matlab function
- testOutput points to output buffer calculation from cubic interpolation
- testLinIntOutput points to output buffer calculation from linear interpolation
- snr1 Signal to noise ratio for reference and cubic interpolation output
- snr2 Signal to noise ratio for reference and linear interpolation output

NMSIS DSP Software Library Functions Used:

- riscv_sin_f32()
- riscv linear interp f32()

Matrix Example

group MatrixExample

Refer riscv_matrix_example_f32.c

Description:

Demonstrates the use of Matrix Transpose, Matrix Muliplication, and Matrix Inverse functions to apply least squares fitting to input data. Least squares fitting is the procedure for finding the best-fitting curve that minimizes the sum of the squares of the offsets (least square error) from a given set of data.

Algorithm:


The linear combination of parameters considered is as follows:

 $A \star X = B$, where X is the unknown value and can be estimated from A & B.

The least squares estimate X is given by the following equation:

```
X = Inverse(A * A) * A * B
```

Block Diagram:



Variables Description:

- A_f32 input matrix in the linear combination equation
- B_f32 output matrix in the linear combination equation
- X_f32 unknown matrix estimated using A_f32 & B_f32 matrices

NMSIS DSP Software Library Functions Used:

- riscv_mat_init_f32()
- riscv_mat_trans_f32()
- riscv_mat_mult_f32()
- riscv_mat_inverse_f32()

Signal Convergence Example

group SignalConvergence

Refer riscv_signal_converge_example_f32.c

Description:


Demonstrates the ability of an adaptive filter to "learn" the transfer function of a FIR lowpass filter using the Normalized LMS Filter, Finite Impulse Response (FIR) Filter, and Basic Math Functions.

Algorithm:

The figure below illustrates the signal flow in this example. Uniformly distributed white noise is passed through an FIR lowpass filter. The output of the FIR filter serves as the reference input of the adaptive filter (normalized LMS filter). The white noise is input to the adaptive filter. The adaptive filter learns the transfer function of the FIR filter. The filter outputs two signals: (1) the output of the internal adaptive FIR filter, and (2) the error signal which is the difference between the adaptive filter and the reference output of the FIR filter. Over time as the adaptive filter learns the transfer function of the FIR filter, the first output approaches the reference output of the FIR filter, and the error signal approaches zero.

The adaptive filter converges properly even if the input signal has a large dynamic range (i.e., varies from small to large values). The coefficients of the adaptive filter are initially zero, and then converge over 1536 samples. The internal function test_signal_converge() implements the stopping condition. The function checks if all of the values of the error signal have a magnitude below a threshold DELTA.

Block Diagram:

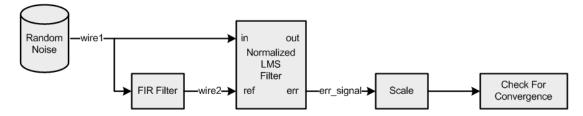

- testInput_f32 points to the input data
- firStateF32 points to FIR state buffer
- lmsStateF32 points to Normalised Least mean square FIR filter state buffer
- FIRCoeff_f32 points to coefficient buffer
- lmsNormCoeff_f32 points to Normalised Least mean square FIR filter coefficient buffer
- wire1, wir2, wire3 temporary buffers
- errOutput, err_signal temporary error buffers

NMSIS DSP Software Library Functions Used:

- riscv_lms_norm_init_f32()
- riscv_fir_init_f32()
- riscv_fir_f32()
- riscv_lms_norm_f32()
- riscv_scale_f32()
- riscv_abs_f32()
- riscv sub f32()
- riscv_min_f32()
- riscv_copy_f32()

SineCosine Example

group SinCosExample

Refer riscv_sin_cos_example_f32.c


Description:

Demonstrates the Pythagorean trignometric identity with the use of Cosine, Sine, Vector Multiplication, and Vector Addition functions.

Algorithm:

Mathematically, the Pythagorean trignometric identity is defined by the following equation: where x is the angle in radians.

Block Diagram:

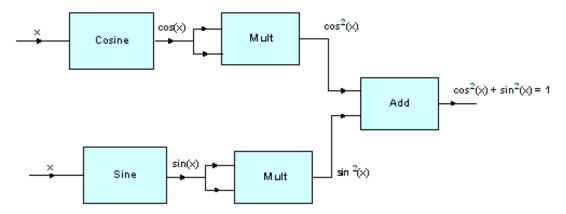

- testInput_f32 array of input angle in radians
- testOutput stores sum of the squares of sine and cosine values of input angle

NMSIS DSP Software Library Functions Used:

- riscv_cos_f32()
- riscv sin f32()
- riscv mult f32()
- riscv_add_f32()

SVM Example

group SVMExample Description:

Demonstrates the use of SVM functions. It is complementing the tutorial about classical ML with NMSIS-DSP and python scikit-learn: https://developer.arm.com/solutions/machine-learning-on-arm/developer-material/how-to-guides/implement-classical-ml-with-arm-nmsis-dsp-libraries

Variance Example

group VarianceExample

Refer riscv_variance_example_f32.c

Description:

Demonstrates the use of Basic Math and Support Functions to calculate the variance of an input sequence with N samples. Uniformly distributed white noise is taken as input.


Algorithm:

The variance of a sequence is the mean of the squared deviation of the sequence from its mean.

This is denoted by the following equation: where, x[n] is the input sequence, N is the number of input samples, and x' is the mean value of the input sequence, x[n].

The mean value x' is defined as:

Block Diagram:

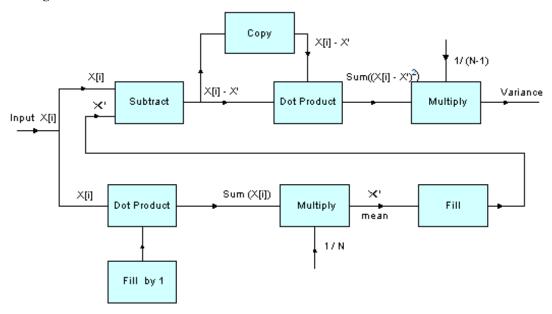

Variables Description:

- testInput_f32 points to the input data
- wire1, wir2, wire3 temporary buffers
- blockSize number of samples processed at a time
- refVarianceOut reference variance value

NMSIS DSP Software Library Functions Used:

- riscv_dot_prod_f32()
- riscv_mult_f32()
- riscv_sub_f32()
- riscv_fill_f32()
- riscv_copy_f32()

group groupExamples

3.3.2 Basic Math Functions

Vector Absolute Value

```
void riscv_abs_f16 (const float16_t *pSrc, float16_t *pDst, uint32_t blockSize) void riscv_abs_f32 (const float32_t *pSrc, float32_t *pDst, uint32_t blockSize) void riscv_abs_q15 (const q15_t *pSrc, q15_t *pDst, uint32_t blockSize) void riscv_abs_q31 (const q31_t *pSrc, q31_t *pDst, uint32_t blockSize) void riscv_abs_q7 (const q7_t *pSrc, q7_t *pDst, uint32_t blockSize)
```

group BasicAbs

Computes the absolute value of a vector on an element-by-element basis.

The functions support in-place computation allowing the source and destination pointers to reference the same memory buffer. There are separate functions for floating-point, Q7, Q15, and Q31 data types.

Functions

```
void riscv_abs_f16 (const float16_t *pSrc, float16_t *pDst, uint32_t blockSize) Floating-point vector absolute value.
```

Return none

Parameters

- [in] pSrc: points to the input vector
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

```
void riscv_abs_f32 (const float32_t *pSrc, float32_t *pDst, uint32_t blockSize) Floating-point vector absolute value.
```

Return none

Parameters

- [in] pSrc: points to the input vector
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

```
void riscv_abs_q15 (const q15_t *pSrc, q15_t *pDst, uint32_t blockSize) Q15 vector absolute value.
```

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. The Q15 value -1 (0x8000) will be saturated to the maximum allowable positive value 0x7FFF.

Parameters

- [in] pSrc: points to the input vector
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

```
void riscv_abs_q31 (const q31_t *pSrc, q31_t *pDst, uint32_t blockSize) Q31 vector absolute value.
```

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. The Q31 value -1 (0x80000000) will be saturated to the maximum allowable positive value 0x7FFFFFF.

Parameters

• [in] pSrc: points to the input vector

- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

```
void riscv_abs_q7 (const q7_t *pSrc, q7_t *pDst, uint32_t blockSize) Q7 vector absolute value.
```

Return none

Conditions for optimum performance Input and output buffers should be aligned by 32-bit

Scaling and Overflow Behavior The function uses saturating arithmetic. The Q7 value -1 (0x80) will be saturated to the maximum allowable positive value 0x7F.

Parameters

- [in] pSrc: points to the input vector
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

Vector Addition

```
void riscv_add_f16 (const float16_t *pSrcA, const float16_t *pSrcB, float16_t *pDst, uint32_t block-
Size)

void riscv_add_f32 (const float32_t *pSrcA, const float32_t *pSrcB, float32_t *pDst, uint32_t block-
Size)

void riscv_add_q15 (const q15_t *pSrcA, const q15_t *pSrcB, q15_t *pDst, uint32_t blockSize)

void riscv_add_q31 (const q31_t *pSrcA, const q31_t *pSrcB, q31_t *pDst, uint32_t blockSize)

void riscv_add_q7 (const q7_t *pSrcA, const q7_t *pSrcB, q7_t *pDst, uint32_t blockSize)

group BasicAdd
```

Element-by-element addition of two vectors.

There are separate functions for floating-point, Q7, Q15, and Q31 data types.

Functions

```
void riscv_add_f16 (const float16_t *pSrcA, const float16_t *pSrcB, float16_t *pDst, uint32_t blockSize)
Floating-point vector addition.
```

Return none

Parameters

- [in] pSrcA: points to first input vector
- [in] pSrcB: points to second input vector
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

```
void riscv_add_f32 (const float32_t *pSrcA, const float32_t *pSrcB, float32_t *pDst, uint32_t blockSize)
Floating-point vector addition.
```

Return none

Parameters

- [in] pSrcA: points to first input vector
- [in] pSrcB: points to second input vector
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

void riscv_add_q15 (const q15_t *pSrcA, const q15_t *pSrcB, q15_t *pDst, uint32_t blockSize) Q15 vector addition.

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q15 range [0x8000 0x7FFF] are saturated.

Parameters

- [in] pSrcA: points to the first input vector
- [in] pSrcB: points to the second input vector
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

void riscv_add_q31 (const q31_t *pSrcA, const q31_t *pSrcB, q31_t *pDst, uint32_t blockSize) Q31 vector addition.

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q31 range [0x80000000 0x7FFFFFFF] are saturated.

Parameters

- [in] pSrcA: points to the first input vector
- [in] pSrcB: points to the second input vector
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

void **riscv_add_q7** (**const** q7_t *pSrcA, **const** q7_t *pSrcB, q7_t *pDst, uint32_t blockSize) O7 vector addition.

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q7 range [0x80 0x7F] are saturated.

Parameters

- [in] pSrcA: points to the first input vector
- [in] pSrcB: points to the second input vector
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

Vector bitwise AND

void **riscv_and_u16** (**const** uint16_t *pSrcA, **const** uint16_t *pSrcB, uint16_t *pDst, uint32_t block-Size)

void riscv_and_u32 (const uint32_t *pSrcA, const uint32_t *pSrcB, uint32_t *pDst, uint32_t block-Size)

void riscv_and_u8 (const uint8_t *pSrcA, const uint8_t *pSrcB, uint8_t *pDst, uint32_t blockSize) group And

Compute the logical bitwise AND.

There are separate functions for uint32 t, uint16 t, and uint7 t data types.

Functions

void **riscv_and_u16** (**const** uint16_t *pSrcA, **const** uint16_t *pSrcB, uint16_t *pDst, uint32_t blockSize)

Compute the logical bitwise AND of two fixed-point vectors.

Return none

Parameters

- [in] pSrcA: points to input vector A
- [in] pSrcB: points to input vector B
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

void **riscv_and_u32** (**const** uint32_t *pSrcA, **const** uint32_t *pSrcB, uint32_t *pDst, uint32_t blockSize)

Compute the logical bitwise AND of two fixed-point vectors.

Return none

Parameters

- [in] pSrcA: points to input vector A
- [in] pSrcB: points to input vector B
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

void **riscv_and_u8** (**const** uint8_t **pSrcA*, **const** uint8_t **pSrcB*, uint8_t **pDst*, uint32_t *block-Size*)

Compute the logical bitwise AND of two fixed-point vectors.

Return none

Parameters

- [in] pSrcA: points to input vector A
- [in] pSrcB: points to input vector B
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

Elementwise clipping

Element-by-element clipping of a value.

The value is constrained between 2 bounds.

There are separate functions for floating-point, Q7, Q15, and Q31 data types.

Functions

```
void riscv_clip_f16 (const float16_t *pSrc, float16_t *pDst, float16_t low, float16_t high, uint32_t numSamples)

Elementwise floating-point clipping.
```

Return none

Parameters

- [in] pSrc: points to input values
- [out] pDst: points to output clipped values
- [in] low: lower bound
- [in] high: higher bound
- [in] numSamples: number of samples to clip

void $riscv_clip_f32$ (const float32_t *pSrc, float32_t *pDst, float32_t low, float32_t high, uint32_t numSamples) Elementwise floating-point clipping.

Return none

Parameters

- [in] pSrc: points to input values
- [out] pDst: points to output clipped values
- [in] low: lower bound
- [in] high: higher bound
- [in] numSamples: number of samples to clip

void **riscv_clip_q15** (**const** q15_t *pSrc, q15_t *pDst, q15_t low, q15_t high, uint32_t numSamples)

Elementwise fixed-point clipping.

Return none

Parameters

- [in] pSrc: points to input values
- [out] pDst: points to output clipped values
- [in] low: lower bound
- [in] high: higher bound
- [in] numSamples: number of samples to clip

void riscv_clip_q31 (const q31_t *pSrc, q31_t *pDst, q31_t low, q31_t high, uint32_t numSamples)

Elementwise fixed-point clipping.

Return none

Parameters

- [in] pSrc: points to input values
- [out] pDst: points to output clipped values
- [in] low: lower bound
- [in] high: higher bound
- [in] numSamples: number of samples to clip

void **riscv_clip_q7** (**const** q7_t **pSrc*, q7_t **pDst*, q7_t *low*, q7_t *high*, uint32_t *numSamples*) Elementwise fixed-point clipping.

Return none

Parameters

- [in] pSrc: points to input values
- [out] pDst: points to output clipped values
- [in] low: lower bound
- [in] high: higher bound
- [in] numSamples: number of samples to clip

Vector Dot Product

```
void riscv_dot_prod_f16 (const float16_t *pSrcA, const float16_t *pSrcB, uint32_t blockSize, float16_t *result)
```

```
void riscv_dot_prod_f32 (const float32_t *pSrcA, const float32_t *pSrcB, uint32_t blockSize, float32_t *result)
```

void riscv_dot_prod_q15 (const q15_t *pSrcA, const q15_t *pSrcB, uint32_t blockSize, q63_t *re-sult)

void riscv_dot_prod_q31 (const q31_t *pSrcA, const q31_t *pSrcB, uint32_t blockSize, q63_t *re-sult)

void riscv_dot_prod_q7 (const q7_t *pSrcA, const q7_t *pSrcB, uint32_t blockSize, q31_t *result)

group BasicDotProd

Computes the dot product of two vectors. The vectors are multiplied element-by-element and then summed.

There are separate functions for floating-point, Q7, Q15, and Q31 data types.

Functions

```
void riscv_dot_prod_f16 (const float16_t *pSrcA, const float16_t *pSrcB, uint32_t blockSize, float16_t *result)

Dot product of floating-point vectors.
```

Return none

Parameters

- [in] pSrcA: points to the first input vector.
- [in] pSrcB: points to the second input vector.
- [in] blockSize: number of samples in each vector.
- [out] result: output result returned here.

```
void riscv_dot_prod_f32 (const float32_t *pSrcA, const float32_t *pSrcB, uint32_t blockSize, float32_t *result)

Dot product of floating-point vectors.
```

Return none

Parameters

- [in] pSrcA: points to the first input vector.
- [in] pSrcB: points to the second input vector.
- [in] blockSize: number of samples in each vector.
- [out] result: output result returned here.

```
void riscv_dot_prod_q15 (const q15_t *pSrcA, const q15_t *pSrcB, uint32_t blockSize, q63_t *result)

Dot product of Q15 vectors.
```

Return none

Scaling and Overflow Behavior The intermediate multiplications are in $1.15 \times 1.15 = 2.30$ format and these results are added to a 64-bit accumulator in 34.30 format. Nonsaturating additions are used and given that there are 33 guard bits in the accumulator there is no risk of overflow. The return result is in 34.30 format.

Parameters

- [in] pSrcA: points to the first input vector
- [in] pSrcB: points to the second input vector
- [in] blockSize: number of samples in each vector
- [out] result: output result returned here

```
void riscv_dot_prod_q31 (const q31_t *pSrcA, const q31_t *pSrcB, uint32_t blockSize, q63_t *result)

Dot product of Q31 vectors.
```

Return none

Scaling and Overflow Behavior The intermediate multiplications are in 1.31 x 1.31 = 2.62 format and these are truncated to 2.48 format by discarding the lower 14 bits. The 2.48 result is then added without saturation to a 64-bit accumulator in 16.48 format. There are 15 guard bits in the accumulator and there is no risk of overflow as long as the length of the vectors is less than 2^16 elements. The return result is in 16.48 format.

Parameters

- [in] pSrcA: points to the first input vector.
- [in] pSrcB: points to the second input vector.
- [in] blockSize: number of samples in each vector.
- [out] result: output result returned here.

```
void riscv_dot_prod_q7 (const q7_t *pSrcA, const q7_t *pSrcB, uint32_t blockSize, q31_t *re-sult)

Dot product of Q7 vectors.
```

Return none

Scaling and Overflow Behavior The intermediate multiplications are in 1.7 x 1.7 = 2.14 format and these results are added to an accumulator in 18.14 format. Nonsaturating additions are used and there is no danger of wrap around as long as the vectors are less than 2^18 elements long. The return result is in 18.14 format.

Parameters

- [in] pSrcA: points to the first input vector
- [in] pSrcB: points to the second input vector
- [in] blockSize: number of samples in each vector
- [out] result: output result returned here

Vector Multiplication

```
void riscv_mult_f16 (const float16_t *pSrcA, const float16_t *pSrcB, float16_t *pDst, uint32_t block-
Size)

void riscv_mult_f32 (const float32_t *pSrcA, const float32_t *pSrcB, float32_t *pDst, uint32_t block-
Size)

void riscv_mult_q15 (const q15_t *pSrcA, const q15_t *pSrcB, q15_t *pDst, uint32_t blockSize)

void riscv_mult_q31 (const q31_t *pSrcA, const q31_t *pSrcB, q31_t *pDst, uint32_t blockSize)

void riscv_mult_q7 (const q7_t *pSrcA, const q7_t *pSrcB, q7_t *pDst, uint32_t blockSize)

group BasicMult
```

Element-by-element multiplication of two vectors.

There are separate functions for floating-point, Q7, Q15, and Q31 data types.

Functions

```
void riscv_mult_f16 (const float16_t *pSrcA, const float16_t *pSrcB, float16_t *pDst, uint32_t blockSize) Floating-point vector multiplication.
```

Return none

Parameters

- [in] pSrcA: points to the first input vector.
- [in] pSrcB: points to the second input vector.
- [out] pDst: points to the output vector.
- [in] blockSize: number of samples in each vector.

void riscv_mult_f32 (const float32_t *pSrcA, const float32_t *pSrcB, float32_t *pDst, uint32_t blockSize)

Floating-point vector multiplication.

Return none

Parameters

- [in] pSrcA: points to the first input vector.
- [in] pSrcB: points to the second input vector.
- [out] pDst: points to the output vector.
- [in] blockSize: number of samples in each vector.

void **riscv_mult_q15** (**const** q15_t *pSrcA, **const** q15_t *pSrcB, q15_t *pDst, uint32_t blockSize) Q15 vector multiplication.

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q15 range [0x8000 0x7FFF] are saturated.

Parameters

- [in] pSrcA: points to first input vector
- [in] pSrcB: points to second input vector
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

void riscv_mult_q31 (const q31_t *pSrcA, const q31_t *pSrcB, q31_t *pDst, uint32_t blockSize)
Q31 vector multiplication.

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q31 range[0x80000000 0x7FFFFFFF] are saturated.

Parameters

- [in] pSrcA: points to the first input vector.
- [in] pSrcB: points to the second input vector.
- [out] pDst: points to the output vector.
- [in] blockSize: number of samples in each vector.

void **riscv_mult_q7** (**const** q7_t *pSrcA, **const** q7_t *pSrcB, q7_t *pDst, uint32_t blockSize) O7 vector multiplication.

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q7 range [0x80 0x7F] are saturated.

Parameters

- [in] pSrcA: points to the first input vector
- [in] pSrcB: points to the second input vector
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

Vector Negate

```
void riscv_negate_f16 (const float16_t *pSrc, float16_t *pDst, uint32_t blockSize) void riscv_negate_f32 (const float32_t *pSrc, float32_t *pDst, uint32_t blockSize) void riscv_negate_q15 (const q15_t *pSrc, q15_t *pDst, uint32_t blockSize) void riscv_negate_q31 (const q31_t *pSrc, q31_t *pDst, uint32_t blockSize) void riscv_negate_q7 (const q7_t *pSrc, q7_t *pDst, uint32_t blockSize) void riscv_negate_q7 (const q7_t *pSrc, q7_t *pDst, uint32_t blockSize) group BasicNegate
```

Negates the elements of a vector.

The functions support in-place computation allowing the source and destination pointers to reference the same memory buffer. There are separate functions for floating-point, Q7, Q15, and Q31 data types.

Functions

```
void riscv_negate_f16 (const float16_t *pSrc, float16_t *pDst, uint32_t blockSize) Negates the elements of a floating-point vector.
```

Return none

Parameters

- [in] pSrc: points to input vector.
- [out] pDst: points to output vector.
- [in] blockSize: number of samples in each vector.

```
void riscv_negate_f32 (const float32_t *pSrc, float32_t *pDst, uint32_t blockSize) Negates the elements of a floating-point vector.
```

Return none

- [in] pSrc: points to input vector.
- [out] pDst: points to output vector.

• [in] blockSize: number of samples in each vector.

```
void riscv_negate_q15 (const q15_t *pSrc, q15_t *pDst, uint32_t blockSize) Negates the elements of a Q15 vector.
```

Return none

Conditions for optimum performance Input and output buffers should be aligned by 32-bit

Scaling and Overflow Behavior The function uses saturating arithmetic. The Q15 value -1 (0x8000) is saturated to the maximum allowable positive value 0x7FFF.

Parameters

- [in] pSrc: points to the input vector.
- [out] pDst: points to the output vector.
- [in] blockSize: number of samples in each vector.

```
void riscv_negate_q31 (const q31_t *pSrc, q31_t *pDst, uint32_t blockSize) Negates the elements of a Q31 vector.
```

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. The Q31 value -1 (0x80000000) is saturated to the maximum allowable positive value 0x7FFFFFF.

Parameters

- [in] pSrc: points to the input vector.
- [out] pDst: points to the output vector.
- [in] blockSize: number of samples in each vector.

```
void riscv_negate_q7 (const q7_t *pSrc, q7_t *pDst, uint32_t blockSize) Negates the elements of a Q7 vector.
```

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. The Q7 value -1 (0x80) is saturated to the maximum allowable positive value 0x7F.

Parameters

- [in] pSrc: points to the input vector.
- [out] pDst: points to the output vector.
- [in] blockSize: number of samples in each vector.

Vector bitwise NOT

```
void riscv_not_u16 (const uint16_t *pSrc, uint16_t *pDst, uint32_t blockSize) void riscv_not_u32 (const uint32_t *pSrc, uint32_t *pDst, uint32_t blockSize) void riscv_not_u8 (const uint8_t *pSrc, uint8_t *pDst, uint32_t blockSize)
```

group Not

Compute the logical bitwise NOT.

There are separate functions for uint32_t, uint16_t, and uint8_t data types.

Functions

void **riscv_not_u16** (**const** uint16_t **pSrc*, uint16_t **pDst*, uint32_t *blockSize*) Compute the logical bitwise NOT of a fixed-point vector.

Return none

Parameters

- [in] pSrc: points to input vector
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

void **riscv_not_u32** (**const** uint32_t **pSrc*, uint32_t **pDst*, uint32_t *blockSize*) Compute the logical bitwise NOT of a fixed-point vector.

Return none

Parameters

- [in] pSrc: points to input vector
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

void **riscv_not_u8** (**const** uint8_t **pSrc*, uint8_t **pDst*, uint32_t *blockSize*) Compute the logical bitwise NOT of a fixed-point vector.

Return none

Parameters

- [in] pSrc: points to input vector
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

Vector Offset

```
void riscv_offset_f16 (const float16_t *pSrc, float16_t offset, float16_t *pDst, uint32_t blockSize) void riscv_offset_f32 (const float32_t *pSrc, float32_t offset, float32_t *pDst, uint32_t blockSize) void riscv_offset_q15 (const q15_t *pSrc, q15_t offset, q15_t *pDst, uint32_t blockSize) void riscv_offset_q31 (const q31_t *pSrc, q31_t offset, q31_t *pDst, uint32_t blockSize) void riscv_offset_q7 (const q7_t *pSrc, q7_t offset, q7_t *pDst, uint32_t blockSize)
```

group BasicOffset

Adds a constant offset to each element of a vector.

The functions support in-place computation allowing the source and destination pointers to reference the same memory buffer. There are separate functions for floating-point, Q7, Q15, and Q31 data types.

Functions

```
void riscv_offset_f16 (const float16_t *pSrc, float16_t offset, float16_t *pDst, uint32_t block-
Size)
```

Adds a constant offset to a floating-point vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] offset: is the offset to be added
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

```
void riscv_offset_f32 (const float32_t *pSrc, float32_t offset, float32_t *pDst, uint32_t block-
Size)
```

Adds a constant offset to a floating-point vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] offset: is the offset to be added
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

```
void riscv_offset_q15 (const q15_t *pSrc, q15_t offset, q15_t *pDst, uint32_t blockSize) Adds a constant offset to a Q15 vector.
```

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q15 range [0x8000 0x7FFF] are saturated.

Parameters

- [in] pSrc: points to the input vector
- [in] offset: is the offset to be added
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

void **riscv_offset_q31** (**const** q31_t *pSrc, q31_t offset, q31_t *pDst, uint32_t blockSize) Adds a constant offset to a Q31 vector.

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q31 range [0x8000000 0x7FFFFFF] are saturated.

Parameters

- [in] pSrc: points to the input vector
- [in] offset: is the offset to be added
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

```
void riscv_offset_q7 (const q7_t *pSrc, q7_t offset, q7_t *pDst, uint32_t blockSize) Adds a constant offset to a Q7 vector.
```

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q7 range [0x80 0x7F] are saturated.

Parameters

- [in] pSrc: points to the input vector
- [in] offset: is the offset to be added
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

Vector bitwise inclusive OR

```
void riscv_or_u16 (const uint16_t *pSrcA, const uint16_t *pSrcB, uint16_t *pDst, uint32_t blockSize) void riscv_or_u32 (const uint32_t *pSrcA, const uint32_t *pSrcB, uint32_t *pDst, uint32_t blockSize) void riscv_or_u8 (const uint8_t *pSrcA, const uint8_t *pSrcB, uint8_t *pDst, uint32_t blockSize) group Or
```

Compute the logical bitwise OR.

There are separate functions for uint32_t, uint16_t, and uint8_t data types.

Functions

```
void riscv_or_u16 (const uint16_t *pSrcA, const uint16_t *pSrcB, uint16_t *pDst, uint32_t blockSize)

Compute the logical bitwise OR of two fixed-point vectors.
```

Return none

- [in] pSrcA: points to input vector A
- [in] pSrcB: points to input vector B
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

void riscv_or_u32 (const uint32_t *pSrcA, const uint32_t *pSrcB, uint32_t *pDst, uint32_t blockSize)

Compute the logical bitwise OR of two fixed-point vectors.

Return none

Parameters

- [in] pSrcA: points to input vector A
- [in] pSrcB: points to input vector B
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

void **riscv_or_u8** (**const** uint8_t **pSrcA*, **const** uint8_t **pSrcB*, uint8_t **pDst*, uint32_t *blockSize*)

Compute the logical bitwise OR of two fixed-point vectors.

Return none

Parameters

- [in] pSrcA: points to input vector A
- [in] pSrcB: points to input vector B
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

Vector Scale

```
void riscv_scale_f16 (const float16_t *pSrc, float16_t *scale, float16_t *pDst, uint32_t blockSize)

void riscv_scale_f32 (const float32_t *pSrc, float32_t *scale, float32_t *pDst, uint32_t blockSize)

void riscv_scale_q15 (const q15_t *pSrc, q15_t *scaleFract, int8_t *shift, q15_t *pDst, uint32_t block-
Size)

void riscv_scale_q31 (const q31_t *pSrc, q31_t *scaleFract, int8_t *shift, q31_t *pDst, uint32_t block-
Size)

void riscv_scale_q7 (const q7_t *pSrc, q7_t *scaleFract, int8_t *shift, q7_t *pDst, uint32_t blockSize)

group BasicScale
```

Multiply a vector by a scalar value. For floating-point data, the algorithm used is:

In the fixed-point Q7, Q15, and Q31 functions, scale is represented by a fractional multiplication scaleFract and an arithmetic shift shift. The shift allows the gain of the scaling operation to exceed 1.0. The algorithm used with fixed-point data is:

The overall scale factor applied to the fixed-point data is

The functions support in-place computation allowing the source and destination pointers to reference the same memory buffer.

Functions

void **riscv_scale_f16** (**const** float16_t *pSrc, float16_t scale, float16_t *pDst, uint32_t blockSize) Multiplies a floating-point vector by a scalar.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] scale: scale factor to be applied
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

void **riscv_scale_f32** (**const** float32_t *pSrc, float32_t *cale, float32_t *pDst, uint32_t blockSize) Multiplies a floating-point vector by a scalar.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] scale: scale factor to be applied
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

void riscv_scale_q15 (const q15_t *pSrc, q15_t scaleFract, int8_t shift, q15_t *pDst, uint32_t blockSize)

Multiplies a Q15 vector by a scalar.

Return none

Scaling and Overflow Behavior The input data *pSrc and scaleFract are in 1.15 format. These are multiplied to yield a 2.30 intermediate result and this is shifted with saturation to 1.15 format.

Parameters

- [in] pSrc: points to the input vector
- [in] scaleFract: fractional portion of the scale value
- [in] shift: number of bits to shift the result by
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

void riscv_scale_q31 (const q31_t *pSrc, q31_t scaleFract, int8_t shift, q31_t *pDst, uint32_t blockSize)

Multiplies a Q31 vector by a scalar.

Return none

Scaling and Overflow Behavior The input data *pSrc and scaleFract are in 1.31 format. These are multiplied to yield a 2.62 intermediate result and this is shifted with saturation to 1.31 format.

- [in] pSrc: points to the input vector
- [in] scaleFract: fractional portion of the scale value
- [in] shift: number of bits to shift the result by
- [out] pDst: points to the output vector

• [in] blockSize: number of samples in each vector

```
void riscv_scale_q7 (const q7_t *pSrc, q7_t scaleFract, int8_t shift, q7_t *pDst, uint32_t block-
Size)
Multiplies a Q7 vector by a scalar.
```

Return none

Scaling and Overflow Behavior The input data *pSrc and scaleFract are in 1.7 format. These are multiplied to yield a 2.14 intermediate result and this is shifted with saturation to 1.7 format.

Parameters

- [in] pSrc: points to the input vector
- [in] scaleFract: fractional portion of the scale value
- [in] shift: number of bits to shift the result by
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

Vector Shift

```
void riscv_shift_q15 (const q15_t *pSrc, int8_t shiftBits, q15_t *pDst, uint32_t blockSize) void riscv_shift_q31 (const q31_t *pSrc, int8_t shiftBits, q31_t *pDst, uint32_t blockSize) void riscv_shift_q7 (const q7_t *pSrc, int8_t shiftBits, q7_t *pDst, uint32_t blockSize) group BasicShift
```

Shifts the elements of a fixed-point vector by a specified number of bits. There are separate functions for Q7, Q15, and Q31 data types. The underlying algorithm used is:

If shift is positive then the elements of the vector are shifted to the left. If shift is negative then the elements of the vector are shifted to the right.

The functions support in-place computation allowing the source and destination pointers to reference the same memory buffer.

Functions

```
void riscv_shift_q15 (const q15_t *pSrc, int8_t shiftBits, q15_t *pDst, uint32_t blockSize) Shifts the elements of a Q15 vector a specified number of bits.
```

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q15 range [0x8000 0x7FFF] are saturated.

Parameters

- [in] pSrc: points to the input vector
- [in] shiftBits: number of bits to shift. A positive value shifts left; a negative value shifts right.
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

void **riscv_shift_q31** (**const** q31_t *pSrc, int8_t shiftBits, q31_t *pDst, uint32_t blockSize) Shifts the elements of a Q31 vector a specified number of bits.

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q31 range [0x8000000 0x7FFFFFF] are saturated.

Parameters

- [in] pSrc: points to the input vector
- [in] shiftBits: number of bits to shift. A positive value shifts left; a negative value shifts right.
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in the vector

void **riscv_shift_q7** (**const** q7_t *pSrc, int8_t shiftBits, q7_t *pDst, uint32_t blockSize) Shifts the elements of a Q7 vector a specified number of bits.

Return none

onditions for optimum performance Input and output buffers should be aligned by 32-bit

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q7 range [0x80 0x7F] are saturated.

Parameters

- [in] pSrc: points to the input vector
- [in] shiftBits: number of bits to shift. A positive value shifts left; a negative value shifts right.
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

Vector Subtraction

```
void riscv_sub_f16 (const float16_t *pSrcA, const float16_t *pSrcB, float16_t *pDst, uint32_t block-
Size)

void riscv_sub_f32 (const float32_t *pSrcA, const float32_t *pSrcB, float32_t *pDst, uint32_t block-
Size)

void riscv_sub_q15 (const q15_t *pSrcA, const q15_t *pSrcB, q15_t *pDst, uint32_t blockSize)

void riscv_sub_q31 (const q31_t *pSrcA, const q31_t *pSrcB, q31_t *pDst, uint32_t blockSize)

void riscv_sub_q7 (const q7_t *pSrcA, const q7_t *pSrcB, q7_t *pDst, uint32_t blockSize)

group BasicSub
```

There are separate functions for floating-point, Q7, Q15, and Q31 data types.

Element-by-element subtraction of two vectors.

Functions

void **riscv_sub_f16** (**const** float16_t *pSrcA, **const** float16_t *pSrcB, float16_t *pDst, uint32_t blockSize)
Floating-point vector subtraction.

Return none

Parameters

- [in] pSrcA: points to the first input vector
- [in] pSrcB: points to the second input vector
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

void **riscv_sub_f32** (**const** float32_t *pSrcA, **const** float32_t *pSrcB, float32_t *pDst, uint32_t blockSize)
Floating-point vector subtraction.

Return none

Parameters

- [in] pSrcA: points to the first input vector
- [in] pSrcB: points to the second input vector
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

void **riscv_sub_q15** (**const** q15_t *pSrcA, **const** q15_t *pSrcB, q15_t *pDst, uint32_t blockSize) Q15 vector subtraction.

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q15 range [0x8000 0x7FFF] are saturated.

Parameters

- [in] pSrcA: points to the first input vector
- [in] pSrcB: points to the second input vector
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

void riscv_sub_q31 (const q31_t *pSrcA, const q31_t *pSrcB, q31_t *pDst, uint32_t blockSize) Q31 vector subtraction.

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q31 range [0x8000000 0x7FFFFFFF] are saturated.

Parameters

• [in] pSrcA: points to the first input vector

- [in] pSrcB: points to the second input vector
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

void **riscv_sub_q7** (**const** q7_t *pSrcA, **const** q7_t *pSrcB, q7_t *pDst, uint32_t blockSize) Q7 vector subtraction.

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q7 range [0x80 0x7F] will be saturated.

Parameters

- [in] pSrcA: points to the first input vector
- [in] pSrcB: points to the second input vector
- [out] pDst: points to the output vector
- [in] blockSize: number of samples in each vector

Vector bitwise exclusive OR

```
void riscv_xor_u16 (const uint16_t *pSrcA, const uint16_t *pSrcB, uint16_t *pDst, uint32_t block-
Size)
void riscv_xor_u32 (const uint32_t *pSrcA, const uint32_t *pSrcB, uint32_t *pDst, uint32_t block-
Size)
void riscv_xor_u8 (const uint8_t *pSrcA, const uint8_t *pSrcB, uint8_t *pDst, uint32_t blockSize)
```

Compute the logical bitwise XOR.

There are separate functions for uint32_t, uint16_t, and uint8_t data types.

Functions

group Xor

```
void riscv_xor_u16 (const uint16_t *pSrcA, const uint16_t *pSrcB, uint16_t *pDst, uint32_t blockSize)

Compute the logical bitwise XOR of two fixed-point vectors.
```

Return none

Parameters

- [in] pSrcA: points to input vector A
- [in] pSrcB: points to input vector B
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

```
void riscv_xor_u32 (const uint32_t *pSrcA, const uint32_t *pSrcB, uint32_t *pDst, uint32_t *blockSize)

Compute the logical bitwise XOR of two fixed-point vectors.
```

Return none

Parameters

- [in] pSrcA: points to input vector A
- [in] pSrcB: points to input vector B
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

```
void riscv_xor_u8 (const uint8_t *pSrcA, const uint8_t *pSrcB, uint8_t *pDst, uint32_t block-
Size)
```

Compute the logical bitwise XOR of two fixed-point vectors.

Return none

Parameters

- [in] pSrcA: points to input vector A
- [in] pSrcB: points to input vector B
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

group groupMath

3.3.3 Bayesian estimators

```
uint32_t riscv_gaussian_naive_bayes_predict_f16 (const riscv_gaussian_naive_bayes_instance_f16

*S, const float16_t *in, float16_t *pOut-
putProbabilities, float16_t *pBufferB)

uint32_t riscv_gaussian_naive_bayes_predict_f32 (const riscv_gaussian_naive_bayes_instance_f32

*S, const float32_t *in, float32_t *pOut-
putProbabilities, float32_t *pBufferB)
```

group groupBayes

Implement the naive gaussian Bayes estimator. The training must be done from scikit-learn.

The parameters can be easily generated from the scikit-learn object. Some examples are given in DSP/Testing/PatternGeneration/Bayes.py

Functions

Naive Gaussian Bayesian Estimator.

Return The predicted class

Parameters

- [in] *S: points to a naive bayes instance structure
- [in] *in: points to the elements of the input vector.

- [out] *pOutputProbabilities: points to a buffer of length numberOfClasses containing estimated probabilities
- [out] *pBufferB: points to a temporary buffer of length numberOfClasses

uint32_t riscv_gaussian_naive_bayes_predict_f32 (const

```
riscv_gaussian_naive_bayes_instance_f32
*S, const float32_t *in, float32_t
*pOutputProbabilities, float32_t
*pBufferB)
```

Naive Gaussian Bayesian Estimator.

Return The predicted class

Parameters

- [in] *S: points to a naive bayes instance structure
- [in] *in: points to the elements of the input vector.
- [out] *pOutputProbabilities: points to a buffer of length numberOfClasses containing estimated probabilities
- [out] *pBufferB: points to a temporary buffer of length numberOfClasses

3.3.4 Complex Math Functions

Complex Conjugate

```
void riscv_cmplx_conj_f16 (const float16_t *pSrc, float16_t *pDst, uint32_t numSamples) void riscv_cmplx_conj_f32 (const float32_t *pSrc, float32_t *pDst, uint32_t numSamples) void riscv_cmplx_conj_q15 (const q15_t *pSrc, q15_t *pDst, uint32_t numSamples) void riscv_cmplx_conj_q31 (const q31_t *pSrc, q31_t *pDst, uint32_t numSamples) group cmplx_conj
```

Conjugates the elements of a complex data vector.

The pSrc points to the source data and pDst points to the destination data where the result should be written. numSamples specifies the number of complex samples and the data in each array is stored in an interleaved fashion (real, imag, real, imag, ...). Each array has a total of 2*numSamples values.

The underlying algorithm is used:

There are separate functions for floating-point, Q15, and Q31 data types.

Functions

```
void riscv_cmplx_conj_f16 (const float16_t *pSrc, float16_t *pDst, uint32_t numSamples) Floating-point complex conjugate.
```

Return none

- [in] pSrc: points to the input vector
- [out] pDst: points to the output vector

• [in] numSamples: number of samples in each vector

void **riscv_cmplx_conj_f32** (**const** float32_t *pSrc, float32_t *pDst, uint32_t numSamples) Floating-point complex conjugate.

Return none

Parameters

- [in] pSrc: points to the input vector
- [out] pDst: points to the output vector
- [in] numSamples: number of samples in each vector

void **riscv_cmplx_conj_q15** (**const** q15_t *pSrc, q15_t *pDst, uint32_t numSamples) Q15 complex conjugate.

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. The Q15 value -1 (0x8000) is saturated to the maximum allowable positive value 0x7FFF.

Parameters

- [in] pSrc: points to the input vector
- [out] pDst: points to the output vector
- [in] numSamples: number of samples in each vector

void riscv_cmplx_conj_q31 (const q31_t *pSrc, q31_t *pDst, uint32_t numSamples) Q31 complex conjugate.

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. The Q31 value -1 (0x80000000) is saturated to the maximum allowable positive value 0x7FFFFFF.

Parameters

- [in] pSrc: points to the input vector
- [out] pDst: points to the output vector
- [in] numSamples: number of samples in each vector

Complex Dot Product

```
void riscv_cmplx_dot_prod_f16 (const float16_t *pSrcA, const float16_t *pSrcB, uint32_t num-
Samples, float16_t *realResult, float16_t *imagResult)

void riscv_cmplx_dot_prod_f32 (const float32_t *pSrcA, const float32_t *pSrcB, uint32_t num-
Samples, float32_t *realResult, float32_t *imagResult)

void riscv_cmplx_dot_prod_q15 (const q15_t *pSrcA, const q15_t *pSrcB, uint32_t numSamples,
q31_t *realResult, q31_t *imagResult)

void riscv_cmplx_dot_prod_q31 (const q31_t *pSrcA, const q31_t *pSrcB, uint32_t numSamples,
q63_t *realResult, q63_t *imagResult)
```

group cmplx_dot_prod

Computes the dot product of two complex vectors. The vectors are multiplied element-by-element and then summed.

The pSrcA points to the first complex input vector and pSrcB points to the second complex input vector. numSamples specifies the number of complex samples and the data in each array is stored in an interleaved fashion (real, imag, real, imag, ...). Each array has a total of 2*numSamples values.

The underlying algorithm is used:

There are separate functions for floating-point, Q15, and Q31 data types.

Functions

void riscv_cmplx_dot_prod_f16 (const float16_t *pSrcA, const float16_t *pSrcB, uint32_t numSamples, float16_t *realResult, float16_t *imagResult)

Floating-point complex dot product.

Return none

Parameters

- [in] pSrcA: points to the first input vector
- [in] pSrcB: points to the second input vector
- [in] numSamples: number of samples in each vector
- [out] realResult: real part of the result returned here
- [out] imagResult: imaginary part of the result returned here

void riscv_cmplx_dot_prod_f32 (const float32_t *pSrcA, const float32_t *pSrcB, uint32_t numSamples, float32_t *realResult, float32_t *imagResult)

Floating-point complex dot product.

Return none

Parameters

- [in] pSrcA: points to the first input vector
- [in] pSrcB: points to the second input vector
- [in] numSamples: number of samples in each vector
- [out] realResult: real part of the result returned here
- [out] imagResult: imaginary part of the result returned here

```
\label{eq:const_q15_t*pSrcA} \mbox{ const q15_t *pSrcA, const q15_t *pSrcB, uint32_t num-Samples, q31_t *realResult, q31_t *imagResult)} \\ \mbox{ } \mbox{
```

Q15 complex dot product.

Return none

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The intermediate 1.15 by 1.15 multiplications are performed with full precision and yield a 2.30 result. These are accumulated in a 64-bit accumulator with 34.30 precision. As a final step, the accumulators are converted to 8.24 format. The return results realResult and imagResult are in 8.24 format.

- [in] pSrcA: points to the first input vector
- [in] pSrcB: points to the second input vector
- [in] numSamples: number of samples in each vector
- [out] realResult: real part of the result returned here
- [out] imagResult: imaginary part of the result returned her

```
void riscv_cmplx_dot_prod_q31 (const q31_t *pSrcA, const q31_t *pSrcB, uint32_t num-
Samples, q63_t *realResult, q63_t *imagResult)
Q31 complex dot product.
```

Return none

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The intermediate 1.31 by 1.31 multiplications are performed with 64-bit precision and then shifted to 16.48 format. The internal real and imaginary accumulators are in 16.48 format and provide 15 guard bits. Additions are nonsaturating and no overflow will occur as long as numSamples is less than 32768. The return results realResult and imagResult are in 16.48 format. Input down scaling is not required.

Parameters

- [in] pSrcA: points to the first input vector
- [in] pSrcB: points to the second input vector
- [in] numSamples: number of samples in each vector
- [out] realResult: real part of the result returned here
- [out] imagResult: imaginary part of the result returned here

Complex Magnitude

```
void riscv_cmplx_mag_f16 (const float16_t *pSrc, float16_t *pDst, uint32_t numSamples) void riscv_cmplx_mag_f32 (const float32_t *pSrc, float32_t *pDst, uint32_t numSamples) void riscv_cmplx_mag_q15 (const q15_t *pSrc, q15_t *pDst, uint32_t numSamples) void riscv_cmplx_mag_q31 (const q31_t *pSrc, q31_t *pDst, uint32_t numSamples) group cmplx_mag
```

Computes the magnitude of the elements of a complex data vector.

The pSrc points to the source data and pDst points to the where the result should be written. numSamples specifies the number of complex samples in the input array and the data is stored in an interleaved fashion (real, imag, real, imag, ...). The input array has a total of 2*numSamples values; the output array has a total of numSamples values.

The underlying algorithm is used:

There are separate functions for floating-point, Q15, and Q31 data types.

Functions

```
void riscv_cmplx_mag_f16 (const float16_t *pSrc, float16_t *pDst, uint32_t numSamples) Floating-point complex magnitude.
```

Return none

Parameters

- [in] pSrc: points to input vector
- [out] pDst: points to output vector
- [in] numSamples: number of samples in each vector

void **riscv_cmplx_mag_f32** (**const** float32_t *pSrc, float32_t *pDst, uint32_t numSamples) Floating-point complex magnitude.

Return none

Parameters

- [in] pSrc: points to input vector
- [out] pDst: points to output vector
- [in] numSamples: number of samples in each vector

```
void riscv_cmplx_mag_q15 (const q15_t *pSrc, q15_t *pDst, uint32_t numSamples) Q15 complex magnitude.
```

Return none

Scaling and Overflow Behavior The function implements 1.15 by 1.15 multiplications and finally output is converted into 2.14 format.

Parameters

- [in] pSrc: points to input vector
- [out] pDst: points to output vector
- [in] numSamples: number of samples in each vector

```
void riscv_cmplx_mag_q31 (const q31_t *pSrc, q31_t *pDst, uint32_t numSamples) Q31 complex magnitude.
```

Return none

Scaling and Overflow Behavior The function implements 1.31 by 1.31 multiplications and finally output is converted into 2.30 format. Input down scaling is not required.

Parameters

- [in] pSrc: points to input vector
- [out] pDst: points to output vector
- [in] numSamples: number of samples in each vector

Complex Magnitude Squared

```
void riscv_cmplx_mag_squared_f16 (const float16_t *pSrc, float16_t *pDst, uint32_t numSamples) void riscv_cmplx_mag_squared_f32 (const float32_t *pSrc, float32_t *pDst, uint32_t numSamples) void riscv_cmplx_mag_squared_q15 (const q15_t *pSrc, q15_t *pDst, uint32_t numSamples) void riscv_cmplx_mag_squared_q31 (const q31_t *pSrc, q31_t *pDst, uint32_t numSamples)
```

group cmplx_mag_squared

Computes the magnitude squared of the elements of a complex data vector.

The pSrc points to the source data and pDst points to the where the result should be written. numSamples specifies the number of complex samples in the input array and the data is stored in an interleaved fashion (real, imag, real, imag, ...). The input array has a total of 2*numSamples values; the output array has a total of numSamples values.

The underlying algorithm is used:

There are separate functions for floating-point, Q15, and Q31 data types.

Functions

```
void riscv_cmplx_mag_squared_f16(const float16_t *pSrc, float16_t *pDst, uint32_t num-
Samples)
```

Floating-point complex magnitude squared.

Return none

Parameters

- [in] pSrc: points to input vector
- [out] pDst: points to output vector
- [in] numSamples: number of samples in each vector

```
void riscv_cmplx_mag_squared_f32 (const float32_t *pSrc, float32_t *pDst, uint32_t num-
Samples)
```

Floating-point complex magnitude squared.

Return none

Parameters

- [in] pSrc: points to input vector
- [out] pDst: points to output vector
- [in] numSamples: number of samples in each vector

```
void riscv_cmplx_mag_squared_q15 (const q15_t *pSrc, q15_t *pDst, uint32_t numSamples) Q15 complex magnitude squared.
```

Return none

Scaling and Overflow Behavior The function implements 1.15 by 1.15 multiplications and finally output is converted into 3.13 format.

Parameters

- [in] pSrc: points to input vector
- [out] pDst: points to output vector
- [in] numSamples: number of samples in each vector

void riscv_cmplx_mag_squared_q31 (const q31_t *pSrc, q31_t *pDst, uint32_t numSamples) Q31 complex magnitude squared.

Return none

Scaling and Overflow Behavior The function implements 1.31 by 1.31 multiplications and finally output is converted into 3.29 format. Input down scaling is not required.

Parameters

- [in] pSrc: points to input vector
- [out] pDst: points to output vector
- [in] numSamples: number of samples in each vector

Complex-by-Complex Multiplication

group CmplxByCmplxMult

Multiplies a complex vector by another complex vector and generates a complex result. The data in the complex arrays is stored in an interleaved fashion (real, imag, real, imag, ...). The parameter numSamples represents the number of complex samples processed. The complex arrays have a total of 2*numSamples real values.

The underlying algorithm is used:

There are separate functions for floating-point, Q15, and Q31 data types.

Functions

```
void riscv_cmplx_mult_cmplx_f16 (const float16_t *pSrcA, const float16_t *pSrcB, float16_t *pDst, uint32_t numSamples)

Floating-point complex-by-complex multiplication.
```

Return none

Parameters

- [in] pSrcA: points to first input vector
- [in] pSrcB: points to second input vector
- [out] pDst: points to output vector
- [in] numSamples: number of samples in each vector

```
void riscv_cmplx_mult_cmplx_f32 (const float32_t *pSrcA, const float32_t *pSrcB, float32_t *pDst, uint32_t numSamples)
```

Floating-point complex-by-complex multiplication.

Return none

- [in] pSrcA: points to first input vector
- [in] pSrcB: points to second input vector

- [out] pDst: points to output vector
- [in] numSamples: number of samples in each vector

```
void riscv_cmplx_mult_cmplx_q15 (const q15_t *pSrcA, const q15_t *pSrcB, q15_t *pDst, uint32_t numSamples)

Q15 complex-by-complex multiplication.
```

Return none

Scaling and Overflow Behavior The function implements 1.15 by 1.15 multiplications and finally output is converted into 3.13 format.

Parameters

- [in] pSrcA: points to first input vector
- [in] pSrcB: points to second input vector
- [out] pDst: points to output vector
- [in] numSamples: number of samples in each vector

```
void riscv_cmplx_mult_cmplx_q31 (const q31_t *pSrcA, const q31_t *pSrcB, q31_t *pDst, uint32_t numSamples)

Q31 complex-by-complex multiplication.
```

Return none

Scaling and Overflow Behavior The function implements 1.31 by 1.31 multiplications and finally output is converted into 3.29 format. Input down scaling is not required.

Parameters

- [in] pSrcA: points to first input vector
- [in] pSrcB: points to second input vector
- [out] pDst: points to output vector
- [in] numSamples: number of samples in each vector

Complex-by-Real Multiplication

```
void riscv_cmplx_mult_real_f16 (const float16_t *pSrcCmplx, const float16_t *pSrcReal, float16_t *pCmplxDst, uint32_t numSamples)

void riscv_cmplx_mult_real_f32 (const float32_t *pSrcCmplx, const float32_t *pSrcReal, float32_t *pCmplxDst, uint32_t numSamples)

void riscv_cmplx_mult_real_q15 (const q15_t *pSrcCmplx, const q15_t *pSrcReal, q15_t *pCmplxDst, uint32_t numSamples)

void riscv_cmplx_mult_real_q31 (const q31_t *pSrcCmplx, const q31_t *pSrcReal, q31_t *pCmplxDst, uint32_t numSamples)
```

group CmplxByRealMult

Multiplies a complex vector by a real vector and generates a complex result. The data in the complex arrays is stored in an interleaved fashion (real, imag, real, imag, ...). The parameter numSamples represents the number of complex samples processed. The complex arrays have a total of 2*numSamples real values while the real array has a total of numSamples real values.

The underlying algorithm is used:

There are separate functions for floating-point, Q15, and Q31 data types.

Functions

Floating-point complex-by-real multiplication.

Return none

Parameters

- [in] pSrcCmplx: points to complex input vector
- [in] pSrcReal: points to real input vector
- [out] pCmplxDst: points to complex output vector
- [in] numSamples: number of samples in each vector

```
void riscv_cmplx_mult_real_f32 (const float32_t *pSrcCmplx, const float32_t *pSrcReal, float32_t *pCmplxDst, uint32_t numSamples)

Floating-point complex-by-real multiplication.
```

Return none

Parameters

- [in] pSrcCmplx: points to complex input vector
- [in] pSrcReal: points to real input vector
- [out] pCmplxDst: points to complex output vector
- [in] numSamples: number of samples in each vector

```
void riscv_cmplx_mult_real_q15 (const q15_t *pSrcCmplx, const q15_t *pSrcReal, q15_t *pCmplxDst, uint32_t numSamples)

Q15 complex-by-real multiplication.
```

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q15 range [0x8000 0x7FFF] are saturated.

Parameters

- [in] pSrcCmplx: points to complex input vector
- [in] pSrcReal: points to real input vector
- [out] pCmplxDst: points to complex output vector
- [in] numSamples: number of samples in each vector

```
void riscv_cmplx_mult_real_q31 (const q31_t *pSrcCmplx, const q31_t *pSrcReal, q31_t *pCmplxDst, uint32_t numSamples)

Q31 complex-by-real multiplication.
```

Return none

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q31 range[0x80000000 0x7FFFFFFF] are saturated.

Parameters

- [in] pSrcCmplx: points to complex input vector
- [in] pSrcReal: points to real input vector
- [out] pCmplxDst: points to complex output vector
- [in] numSamples: number of samples in each vector

group groupCmplxMath

This set of functions operates on complex data vectors. The data in the complex arrays is stored in an interleaved fashion (real, imag, real, imag, ...). In the API functions, the number of samples in a complex array refers to the number of complex values; the array contains twice this number of real values.

3.3.5 Controller Functions

PID Motor Control


```
__STATIC_FORCEINLINE float32_t riscv_pid_f32(riscv_pid_instance_f32 * S, float32_t in)
__STATIC_FORCEINLINE q31_t riscv_pid_q31(riscv_pid_instance_q31 * S, q31_t in)
__STATIC_FORCEINLINE q15_t riscv_pid_q15(riscv_pid_instance_q15 * S, q15_t in)
void riscv_pid_init_f32 (riscv_pid_instance_f32 * S, int32_t resetStateFlag)
void riscv_pid_init_q15 (riscv_pid_instance_q15 * S, int32_t resetStateFlag)
void riscv_pid_init_q31 (riscv_pid_instance_q31 * S, int32_t resetStateFlag)
void riscv_pid_reset_f32 (riscv_pid_instance_f32 * S)
void riscv_pid_reset_q15 (riscv_pid_instance_q15 * S)
void riscv_pid_reset_q31 (riscv_pid_instance_q31 * S)
group PID
end of SinCos group
```

A Proportional Integral Derivative (PID) controller is a generic feedback control loop mechanism widely used in industrial control systems. A PID controller is the most commonly used type of feedback controller.

This set of functions implements (PID) controllers for Q15, Q31, and floating-point data types. The functions operate on a single sample of data and each call to the function returns a single processed value. S points to an instance of the PID control data structure. in is the input sample value. The functions return the output value.

Algorithm:

where Kp is proportional constant, Ki is Integral constant and Kd is Derivative constant

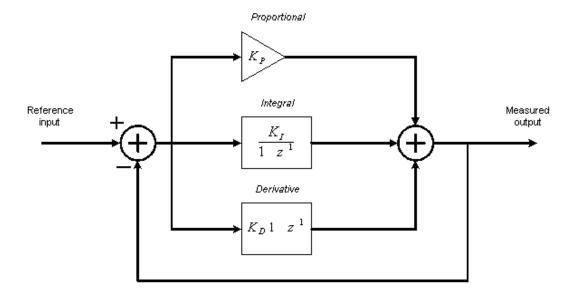

The PID controller calculates an "error" value as the difference between the measured output and the reference input. The controller attempts to minimize the error by adjusting the process control inputs. The proportional value determines the reaction to the current error, the integral value determines the reaction based on the sum of recent errors, and the derivative value determines the reaction based on the rate at which the error has been changing.

Instance Structure The Gains A0, A1, A2 and state variables for a PID controller are stored together in an instance data structure. A separate instance structure must be defined for each PID Controller. There are separate instance structure declarations for each of the 3 supported data types.

Reset Functions There is also an associated reset function for each data type which clears the state array.

Initialization Functions There is also an associated initialization function for each data type. The initialization function performs the following operations:

- Initializes the Gains A0, A1, A2 from Kp,Ki, Kd gains.
- Zeros out the values in the state buffer.

Instance structure cannot be placed into a const data section and it is recommended to use the initialization function.

Fixed-Point Behavior Care must be taken when using the fixed-point versions of the PID Controller functions. In particular, the overflow and saturation behavior of the accumulator used in each function must be considered. Refer to the function specific documentation below for usage guidelines.

Functions

__STATIC_FORCEINLINE float32_t riscv_pid_f32(riscv_pid_instance_f32 * S, float32_t in Process function for the floating-point PID Control.

Return processed output sample.

- [inout] S: is an instance of the floating-point PID Control structure
- [in] in: input sample to process

__STATIC_FORCEINLINE q31_t riscv_pid_q31(riscv_pid_instance_q31 * S, q31_t in)
Process function for the Q31 PID Control.

Return processed output sample.

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The accumulator has a 2.62 format and maintains full precision of the intermediate multiplication results but provides only a single guard bit. Thus, if the accumulator result overflows it wraps around rather than clip. In order to avoid overflows completely the input signal must be scaled down by 2 bits as there are four additions. After all multiply-accumulates are performed, the 2.62 accumulator is truncated to 1.32 format and then saturated to 1.31 format.

Parameters

- [inout] S: points to an instance of the Q31 PID Control structure
- [in] in: input sample to process

__STATIC_FORCEINLINE q15_t riscv_pid_q15(riscv_pid_instance_q15 * S, q15_t in)
Process function for the Q15 PID Control.

Return processed output sample.

Scaling and Overflow Behavior The function is implemented using a 64-bit internal accumulator. Both Gains and state variables are represented in 1.15 format and multiplications yield a 2.30 result. The 2.30 intermediate results are accumulated in a 64-bit accumulator in 34.30 format. There is no risk of internal overflow with this approach and the full precision of intermediate multiplications is preserved. After all additions have been performed, the accumulator is truncated to 34.15 format by discarding low 15 bits. Lastly, the accumulator is saturated to yield a result in 1.15 format.

Parameters

- [inout] S: points to an instance of the Q15 PID Control structure
- [in] in: input sample to process

void **riscv_pid_init_f32** (riscv_pid_instance_f32 *S, int32_t resetStateFlag) Initialization function for the floating-point PID Control.

Return none

Details The resetStateFlag specifies whether to set state to zero or not. The function computes the structure fields: A0, A1 A2 using the proportional gain(Kp), integral gain(Ki) and derivative gain(Kd) also sets the state variables to all zeros.

Parameters

- [inout] S: points to an instance of the PID structure
- [in] resetStateFlag:
 - value = 0: no change in state
 - value = 1: reset state

void **riscv_pid_init_q15** (riscv_pid_instance_q15 *S, int32_t resetStateFlag) Initialization function for the Q15 PID Control.

Return none

Details The resetStateFlag specifies whether to set state to zero or not. The function computes the structure fields: A0, A1 A2 using the proportional gain(Kp), integral gain(Ki) and derivative gain(Kd) also sets the state variables to all zeros.

Parameters

- [inout] S: points to an instance of the Q15 PID structure
- [in] resetStateFlag:
 - value = 0: no change in state
 - value = 1: reset state

void **riscv_pid_init_q31** (riscv_pid_instance_q31 *S, int32_t resetStateFlag)

Initialization function for the Q31 PID Control.

Return none

Details The resetStateFlag specifies whether to set state to zero or not. The function computes the structure fields: A0, A1 A2 using the proportional gain(Kp), integral gain(Ki) and derivative gain(Kd) also sets the state variables to all zeros.

Parameters

- [inout] S: points to an instance of the Q31 PID structure
- [in] resetStateFlag:
 - value = 0: no change in state
 - value = 1: reset state

void riscv_pid_reset_f32 (riscv_pid_instance_f32 *S)

Reset function for the floating-point PID Control.

Return none

Details The function resets the state buffer to zeros.

Parameters

• [inout] S: points to an instance of the floating-point PID structure

```
void riscv_pid_reset_q15 (riscv_pid_instance_q15 *S)
```

Reset function for the Q15 PID Control.

Return none

Details The function resets the state buffer to zeros.

Parameters

• [inout] S: points to an instance of the Q15 PID structure

```
void riscv_pid_reset_q31 (riscv_pid_instance_q31 *S)
```

Reset function for the Q31 PID Control.

Return none

Details The function resets the state buffer to zeros.


• [inout] S: points to an instance of the Q31 PID structure

Vector Park Transform

__STATIC_FORCEINLINE void riscv_park_f32(float32_t Ialpha, float32_t Ibeta, float32_t * pIc__STATIC_FORCEINLINE void riscv_park_q31(q31_t Ialpha, q31_t Ibeta, q31_t * pId, q31_t * pic__group park__state__s

end of PID group

Forward Park transform converts the input two-coordinate vector to flux and torque components. The Park transform can be used to realize the transformation of the <code>lalpha</code> and the <code>lbeta</code> currents from the stationary to the moving reference frame and control the spatial relationship between the stator vector current and rotor flux vector. If we consider the d axis aligned with the rotor flux, the diagram below shows the current vector and the relationship from the two reference frames: The function operates on a single sample of data and each call to the function returns the processed output. The library provides separate functions for Q31 and floating-point

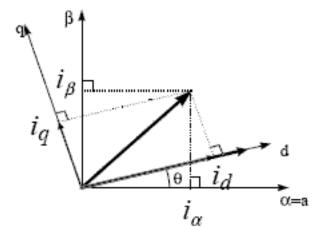

data types.

Algorithm

where Ialpha and Ibeta are the stator vector components, pId and pIq are rotor vector components and cosVal and sinVal are the cosine and sine values of theta (rotor flux position).

Fixed-Point Behavior Care must be taken when using the Q31 version of the Park transform. In particular, the overflow and saturation behavior of the accumulator used must be considered. Refer to the function specific documentation below for usage guidelines.

Functions

__STATIC_FORCEINLINE void riscv_park_f32(float32_t Ialpha, float32_t Ibeta, float32_t Floating-point Park transform.

The function implements the forward Park transform.

Return none

Parameters

- [in] Ialpha: input two-phase vector coordinate alpha
- [in] Ibeta: input two-phase vector coordinate beta
- [out] pId: points to output rotor reference frame d
- [out] pIq: points to output rotor reference frame q
- [in] sinVal: sine value of rotation angle theta
- [in] cosVal: cosine value of rotation angle theta

__STATIC_FORCEINLINE void riscv_park_q31(q31_t Ialpha, q31_t Ibeta, q31_t * pId, q31_t Park transform for Q31 version.

Return none

Scaling and Overflow Behavior The function is implemented using an internal 32-bit accumulator. The accumulator maintains 1.31 format by truncating lower 31 bits of the intermediate multiplication in 2.62 format. There is saturation on the addition and subtraction, hence there is no risk of overflow.

Parameters

- [in] Ialpha: input two-phase vector coordinate alpha
- [in] Ibeta: input two-phase vector coordinate beta
- [out] pId: points to output rotor reference frame d
- [out] pIq: points to output rotor reference frame q
- [in] sinVal: sine value of rotation angle theta
- [in] cosVal: cosine value of rotation angle theta

Vector Inverse Park transform

```
__STATIC_FORCEINLINE void riscv_inv_park_f32(float32_t Id, float32_t Iq, float32_t * pIalpha_static_forceinLine void riscv_inv_park_q31(q31_t Id, q31_t Iq, q31_t * pIalpha, q31_t * proup inv_park_static_forceinLine void riscv_inv_park_static_forceinLine void riscv_inv_park_static_forceinLin
```

end of park group

Inverse Park transform converts the input flux and torque components to two-coordinate vector.

The function operates on a single sample of data and each call to the function returns the processed output. The library provides separate functions for Q31 and floating-point data types.

Algorithm

where plalpha and plbeta are the stator vector components, Id and Iq are rotor vector components and cosVal and sinVal are the cosine and sine values of theta (rotor flux position).

Fixed-Point Behavior Care must be taken when using the Q31 version of the Park transform. In particular, the overflow and saturation behavior of the accumulator used must be considered. Refer to the function specific documentation below for usage guidelines.

Functions

__STATIC_FORCEINLINE void riscv_inv_park_f32(float32_t Id, float32_t Iq, float32_t * p Floating-point Inverse Park transform.

Return none

Parameters

- [in] Id: input coordinate of rotor reference frame d
- [in] Iq: input coordinate of rotor reference frame q
- [out] plalpha: points to output two-phase orthogonal vector axis alpha
- [out] plbeta: points to output two-phase orthogonal vector axis beta
- [in] sinVal: sine value of rotation angle theta
- [in] cosVal: cosine value of rotation angle theta

__STATIC_FORCEINLINE void riscv_inv_park_q31(q31_t Id, q31_t Iq, q31_t * pIalpha, q31_t Inverse Park transform for Q31 version.

Return none

Scaling and Overflow Behavior The function is implemented using an internal 32-bit accumulator. The accumulator maintains 1.31 format by truncating lower 31 bits of the intermediate multiplication in 2.62 format. There is saturation on the addition, hence there is no risk of overflow.

Parameters


- [in] Id: input coordinate of rotor reference frame d
- [in] Iq: input coordinate of rotor reference frame q
- [out] plalpha: points to output two-phase orthogonal vector axis alpha
- [out] plbeta: points to output two-phase orthogonal vector axis beta
- [in] sinVal: sine value of rotation angle theta
- [in] cosVal: cosine value of rotation angle theta

Vector Clarke Transform

```
__STATIC_FORCEINLINE void riscv_clarke_f32(float32_t Ia, float32_t Ib, float32_t * pIalpha
__STATIC_FORCEINLINE void riscv_clarke_q31(q31_t Ia, q31_t Ib, q31_t * pIalpha, q31_t * pI
group clarke
end of Inverse park group
```

Forward Clarke transform converts the instantaneous stator phases into a two-coordinate time invariant vector. Generally the Clarke transform uses three-phase currents Ia, Ib and Ic to calculate currents in the two-phase orthogonal stator axis Ialpha and Ibeta. When Ialpha is superposed with Ia as shown in the figure

below and Ia + Ib + Ic = 0, in this condition Ialpha and Ibeta can be calculated using only Ia and

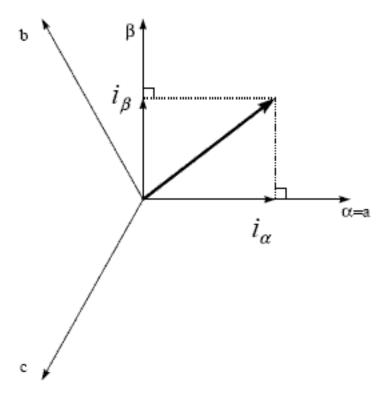

Ib.

The function operates on a single sample of data and each call to the function returns the processed output. The library provides separate functions for Q31 and floating-point data types.

Algorithm

where Ia and Ib are the instantaneous stator phases and plalpha and plbeta are the two coordinates

pIbeta =
$$(1/\sqrt{3})$$
 Ia + $(2/\sqrt{3})$ Ib

of time invariant vector.

Fixed-Point Behavior Care must be taken when using the Q31 version of the Clarke transform. In particular, the overflow and saturation behavior of the accumulator used must be considered. Refer to the function specific documentation below for usage guidelines.

Functions

__STATIC_FORCEINLINE void riscv_clarke_f32(float32_t Ia, float32_t Ib, float32_t * pIa Floating-point Clarke transform.

Return none

- [in] Ia: input three-phase coordinate a
- [in] Ib: input three-phase coordinate b

- [out] plalpha: points to output two-phase orthogonal vector axis alpha
- [out] plbeta: points to output two-phase orthogonal vector axis beta

__STATIC_FORCEINLINE void riscv_clarke_q31(q31_t Ia, q31_t Ib, q31_t * pIalpha, q31_t Clarke transform for Q31 version.

Return none

Scaling and Overflow Behavior The function is implemented using an internal 32-bit accumulator. The accumulator maintains 1.31 format by truncating lower 31 bits of the intermediate multiplication in 2.62 format. There is saturation on the addition, hence there is no risk of overflow.

Parameters

- [in] Ia: input three-phase coordinate a
- [in] Ib: input three-phase coordinate b
- [out] plalpha: points to output two-phase orthogonal vector axis alpha
- [out] pIbeta: points to output two-phase orthogonal vector axis beta

Vector Inverse Clarke Transform

__STATIC_FORCEINLINE void riscv_inv_clarke_f32(float32_t Ialpha, float32_t Ibeta, float32_t __STATIC_FORCEINLINE void riscv_inv_clarke_q31(q31_t Ialpha, q31_t Ibeta, q31_t * pIa, q31_group inv_clarke

end of clarke group

Inverse Clarke transform converts the two-coordinate time invariant vector into instantaneous stator phases.

The function operates on a single sample of data and each call to the function returns the processed output. The library provides separate functions for Q31 and floating-point data types.

Algorithm

where pla and plb are the instantaneous stator phases and lalpha and lbeta are the two coordinates

$$pIa = Ialpha$$

pIb =
$$(-1/2)$$
 Ialpha + $(\sqrt{3}/2)$ Ibeta

of time invariant vector.

Fixed-Point Behavior Care must be taken when using the Q31 version of the Clarke transform. In particular, the overflow and saturation behavior of the accumulator used must be considered. Refer to the function specific documentation below for usage guidelines.

Functions

__STATIC_FORCEINLINE void riscv_inv_clarke_f32(float32_t Ialpha, float32_t Ibeta, float Floating-point Inverse Clarke transform.

Return none

Parameters

• [in] Ialpha: input two-phase orthogonal vector axis alpha

- [in] Ibeta: input two-phase orthogonal vector axis beta
- [out] pla: points to output three-phase coordinate a
- [out] plb: points to output three-phase coordinate b

__STATIC_FORCEINLINE void riscv_inv_clarke_q31(q31_t Ialpha, q31_t Ibeta, q31_t * pIa, Inverse Clarke transform for Q31 version.

Return none

Scaling and Overflow Behavior The function is implemented using an internal 32-bit accumulator. The accumulator maintains 1.31 format by truncating lower 31 bits of the intermediate multiplication in 2.62 format. There is saturation on the subtraction, hence there is no risk of overflow.

Parameters

- [in] Ialpha: input two-phase orthogonal vector axis alpha
- [in] Ibeta: input two-phase orthogonal vector axis beta
- [out] pla: points to output three-phase coordinate a
- [out] plb: points to output three-phase coordinate b

Sine Cosine

```
void riscv_sin_cos_f32 (float32_t theta, float32_t *pSinVal, float32_t *pCosVal) void riscv_sin_cos_q31 (q31_t theta, q31_t *pSinVal, q31_t *pCosVal) group SinCos
```

Computes the trigonometric sine and cosine values using a combination of table lookup and linear interpolation. There are separate functions for Q31 and floating-point data types. The input to the floating-point version is in degrees while the fixed-point Q31 have a scaled input with the range [-1 0.9999] mapping to [-180 +180] degrees.

The floating point function also allows values that are out of the usual range. When this happens, the function will take extra time to adjust the input value to the range of [-180 180].

The result is accurate to 5 digits after the decimal point.

The implementation is based on table lookup using 360 values together with linear interpolation. The steps used are:

- 1. Calculation of the nearest integer table index.
- 2. Compute the fractional portion (fract) of the input.
- 3. Fetch the value corresponding to index from sine table to y0 and also value from index+1 to y1.
- 4. Sine value is computed as *psinVal = y0 + (fract * (y1 y0)).
- 5. Fetch the value corresponding to index from cosine table to y0 and also value from index+1 to y1.
- 6. Cosine value is computed as $\star pcosVal = y0 + (fract \star (y1 y0))$.

Functions

```
void riscv_sin_cos_f32 (float32_t theta, float32_t *pSinVal, float32_t *pCosVal) Floating-point sin_cos function.
```

Return none

Parameters

- [in] theta: input value in degrees
- [out] pSinVal: points to the processed sine output.
- [out] pCosVal: points to the processed cos output.
- [in] theta: input value in degrees
- [out] pSinVal: points to processed sine output
- [out] pCosVal: points to processed cosine output

```
void riscv_sin_cos_q31 (q31_t theta, q31_t *pSinVal, q31_t *pCosVal) Q31 sin_cos function.
```

The Q31 input value is in the range [-1 0.999999] and is mapped to a degree value in the range [-180 179].

Return none

Parameters

- [in] theta: scaled input value in degrees
- [out] pSinVal: points to the processed sine output.
- [out] pCosVal: points to the processed cosine output.
- [in] theta: scaled input value in degrees
- [out] pSinVal: points to processed sine output
- [out] pCosVal: points to processed cosine output

group groupController

3.3.6 Distance functions

Float Distances

Bray-Curtis distance

```
float16_t riscv_braycurtis_distance_f16 (const float16_t *pA, const float16_t *pB, uint32_t blockSize)

float32_t riscv_braycurtis_distance_f32 (const float32_t *pA, const float32_t *pB, uint32_t blockSize)

group braycurtis
```

Bray-Curtis distance between two vectors

Functions

```
float16_t riscv_braycurtis_distance_f16 (const float16_t *pA, const float16_t *pB, uint32_t blockSize)

Bray-Curtis distance between two vectors.
```

Return distance

Parameters

• [in] pA: First vector

- [in] pB: Second vector
- [in] blockSize: vector length

float32_t riscv_braycurtis_distance_f32 (const float32_t *pA, const float32_t *pB, uint32 t blockSize)

Bray-Curtis distance between two vectors.

Return distance

Parameters

- [in] pA: First vector
- [in] pB: Second vector
- [in] blockSize: vector length

Canberra distance

```
float16_t riscv_canberra_distance_f16(const float16_t *pA, const float16_t *pB, uint32_t blockSize)
```

float32_t riscv_canberra_distance_f32 (const float32_t *pA, const float32_t *pB, uint32_t blockSize)

group Canberra

Canberra distance

Functions

```
float16_t riscv_canberra_distance_f16 (const float16_t *pA, const float16_t *pB, uint32_t blockSize)
```

Canberra distance between two vectors.

This function may divide by zero when samples pA[i] and pB[i] are both zero. The result of the computation will be correct. So the division per zero may be ignored.

Return distance

Parameters

- [in] pA: First vector
- [in] pB: Second vector
- [in] blockSize: vector length

```
float32_t riscv_canberra_distance_f32 (const float32_t *pA, const float32_t *pB, uint32_t blockSize)
```

Canberra distance between two vectors.

This function may divide by zero when samples pA[i] and pB[i] are both zero. The result of the computation will be correct. So the division per zero may be ignored.

Return distance

Parameters

- [in] pA: First vector
- [in] pB: Second vector

• [in] blockSize: vector length

Chebyshev distance

```
float16_t riscv_chebyshev_distance_f16 (const float16_t *pA, const float16_t *pB, uint32_t
                                           blockSize)
float32_t riscv_chebyshev_distance_f32 (const float32_t *pA, const float32_t *pB, uint32_t
                                           blockSize)
group Chebyshev
```

Chebyshev distance

Functions

```
float16_t riscv_chebyshev_distance_f16 (const_float16_t_*pA, const_float16_t_*pB,
                                            uint32 t blockSize)
    Chebyshev distance between two vectors.
```

Return distance

Parameters

- [in] pA: First vector
- [in] pB: Second vector
- [in] blockSize: vector length

```
float32_t riscv_chebyshev_distance_f32 (const float32_t *pA, const float32_t *pB,
                                            uint32_t blockSize)
    Chebyshev distance between two vectors.
```

Return distance

Parameters

- [in] pA: First vector
- [in] pB: Second vector
- [in] blockSize: vector length

Cityblock (Manhattan) distance

```
float16_t riscv_cityblock_distance_f16 (const float16_t *pA, const float16_t *pB, uint32_t
                                            blockSize)
float32_t riscv_cityblock_distance_f32 (const float32_t *pA, const float32_t *pB, uint32_t
                                            blockSize)
group Manhattan
     Cityblock (Manhattan) distance
```

Functions

Return distance

Parameters

- [in] pA: First vector
- [in] pB: Second vector
- [in] blockSize: vector length

```
\label{eq:const_float_32_triscv_cityblock_distance_f32} \begin{array}{ll} \text{float32\_t *$p$A$, const float32\_t *$p$B$,} \\ & \text{uint32\_t } blockSize) \\ & \text{Cityblock (Manhattan) distance between two vectors.} \end{array}
```

Return distance

Parameters

- [in] pA: First vector
- [in] pB: Second vector
- [in] blockSize: vector length

Correlation distance

```
float16_t riscv_correlation_distance_f16 (float16_t *pA, float16_t *pB, uint32_t blockSize)
float32_t riscv_correlation_distance_f32 (float32_t *pA, float32_t *pB, uint32_t blockSize)
group Correlation
Correlation distance
```

Functions

```
float16_t riscv_correlation_distance_f16 (float16_t *pA, float16_t *pB, uint32_t blockSize) Correlation distance between two vectors.
```

The input vectors are modified in place!

Return distance

Parameters

- [in] pA: First vector
- [in] pB: Second vector
- [in] blockSize: vector length

```
float32_t riscv_correlation_distance_f32 (float32_t *pA, float32_t *pB, uint32_t blockSize) Correlation distance between two vectors.
```

The input vectors are modified in place!

Return distance

Parameters

- [in] pA: First vector
- [in] pB: Second vector
- [in] blockSize: vector length

Cosine distance

float32_t riscv_cosine_distance_f32 (const float32_t *pA, const float32_t *pB, uint32_t block-Size)

group CosineDist

Cosine distance

Functions

float16_t riscv_cosine_distance_f16 (const float16_t *pA, const float16_t *pB, uint32_t blockSize)

Cosine distance between two vectors.

Return distance

Parameters

- [in] pA: First vector
- [in] pB: Second vector
- [in] blockSize: vector length

float32_t riscv_cosine_distance_f32 (const float32_t *pA, const float32_t *pB, uint32_t blockSize)

Cosine distance between two vectors.

Return distance

Parameters

- [in] pA: First vector
- [in] pB: Second vector
- [in] blockSize: vector length

Euclidean distance

```
float16\_t \ \textbf{riscv}\_\textbf{euclidean}\_\textbf{distance}\_\textbf{f16} \ (\textbf{const} \ float16\_t \ *pA, \ \textbf{const} \ float16\_t \ *pB, \ \textbf{uint32}\_t \ blockSize) float32\_t \ \textbf{riscv}\_\textbf{euclidean}\_\textbf{distance}\_\textbf{f32} \ (\textbf{const} \ float32\_t \ *pA, \ \textbf{const} \ float32\_t \ *pB, \ \textbf{uint32}\_t \ blockSize)
```

group Euclidean

Euclidean distance

Functions

```
float16_t riscv_euclidean_distance_f16 (const float16_t *pA, const float16_t *pB, uint32_t blockSize)
```

Euclidean distance between two vectors.

Return distance

Parameters

- [in] pA: First vector
- [in] pB: Second vector
- [in] blockSize: vector length

```
float32_t riscv_euclidean_distance_f32 (const float32_t *pA, const float32_t *pB, uint32 t blockSize)
```

Euclidean distance between two vectors.

Return distance

Parameters

- [in] pA: First vector
- [in] pB: Second vector
- [in] blockSize: vector length

Jensen-Shannon distance

```
\label{eq:float16_triscv_jensenshannon_distance_f16} \begin{array}{lll} \text{float16_t *pA, const float16_t *pB,} \\ & \text{uint32\_t blockSize)} \end{array} \text{float32\_t riscv\_jensenshannon\_distance\_f32} \\ \text{(const float32\_t *pA, const float32\_t *pB,} \\ & \text{uint32\_t blockSize)} \end{array}
```

group JensenShannon

Jensen-Shannon distance

Functions

This function is assuming that elements of second vector are > 0 and 0 only when the corresponding element of first vector is 0. Otherwise the result of the computation does not make sense and for speed reasons, the cases returning NaN or Infinity are not managed.

When the function is computing $x \log (x / y)$ with x == 0 and y == 0, it will compute the right result (0) but a division by zero will occur and should be ignored in client code.

Return distance

Parameters

• [in] pA: First vector

- [in] pB: Second vector
- [in] blockSize: vector length

```
__STATIC_INLINE float32_t rel_entr(float32_t x, float32_t y)
```

float32_t riscv_jensenshannon_distance_f32 (const float32_t *pA, const float32_t *pB, uint32_t blockSize)

Jensen-Shannon distance between two vectors.

This function is assuming that elements of second vector are > 0 and 0 only when the corresponding element of first vector is 0. Otherwise the result of the computation does not make sense and for speed reasons, the cases returning NaN or Infinity are not managed.

When the function is computing $x \log (x / y)$ with x == 0 and y == 0, it will compute the right result (0) but a division by zero will occur and should be ignored in client code.

Return distance

Parameters

- [in] pA: First vector
- [in] pB: Second vector
- [in] blockSize: vector length

Minkowski distance

```
float16_t riscv_minkowski_distance_f16 (const float16_t *pA, const float16_t *pB, int32_t or-
der, uint32_t blockSize)
```

float32_t riscv_minkowski_distance_f32 (const float32_t *pA, const float32_t *pB, int32_t order, uint32_t blockSize)

group Minkowski

Minkowski distance

Functions

```
float16_t riscv_minkowski_distance_f16 (const float16_t *pA, const float16_t *pB, int32_t order, uint32_t blockSize)
```

Minkowski distance between two vectors.

Return distance

Parameters

- [in] pA: First vector
- [in] pB: Second vector
- [in] order: Distance order
- [in] blockSize: Number of samples

float32_t riscv_minkowski_distance_f32 (const float32_t *pA, const float32_t *pB, int32_t order, uint32_t blockSize)

Minkowski distance between two vectors.

Return distance

Parameters

- [in] pA: First vector
- [in] pB: Second vector
- [in] order: Distance order
- [in] blockSize: Number of samples

group FloatDist

Distances between two vectors of float values.

Boolean Distances

```
float32_t riscv_dice_distance (const uint32_t *pA, const uint32_t *pB, uint32_t numberOfBools)
```

float32_t riscv_hamming_distance(const uint32_t *pA, const uint32_t *pB, uint32_t numberOf-Bools)

float32_t riscv_jaccard_distance(const uint32_t *pA, const uint32_t *pB, uint32_t numberOf-Bools)

float32_t riscv_kulsinski_distance (const uint32_t *pA, const uint32_t *pB, uint32_t numberOf-Bools)

float32_t riscv_rogerstanimoto_distance(const uint32_t *pA, const uint32_t *pB, uint32_t numberOfBools)

float32_t riscv_russellrao_distance(const uint32_t *pA, const uint32_t *pB, uint32_t numberOfBools)

 $float32_t riscv_sokalmichener_distance (const uint32_t *pA, const uint32_t *pB, uint32_t numberOfBools)$

float32_t riscv_sokalsneath_distance(const uint32_t *pA, const uint32_t *pB, uint32_t numberOfBools)

float32_t riscv_yule_distance (const uint32_t *pA, const uint32_t *pB, uint32_t numberOfBools)
group BoolDist

Distances between two vectors of boolean values.

Booleans are packed in 32 bit words. numberOfBooleans argument is the number of booleans and not the number of words.

Bits are packed in big-endian mode (because of behavior of numpy packbits in in version < 1.17)

Unnamed Group

float32_t riscv_dice_distance (const uint32_t *pA, const uint32_t *pB, uint32_t numberOf-Bools)

Dice distance between two vectors.

Return distance

Parameters

- [in] pA: First vector of packed booleans
- [in] pB: Second vector of packed booleans
- [in] numberOfBools: Number of booleans

Functions

float32_t riscv_hamming_distance (const uint32_t *pA, const uint32_t *pB, uint32_t numberOfBools)

Hamming distance between two vectors.

Return distance

Parameters

- [in] pA: First vector of packed booleans
- [in] pB: Second vector of packed booleans
- [in] numberOfBools: Number of booleans

float32_t riscv_jaccard_distance (const uint32_t *pA, const uint32_t *pB, uint32_t numberOfBools)

Jaccard distance between two vectors.

Return distance

Parameters

- [in] pA: First vector of packed booleans
- [in] pB: Second vector of packed booleans
- [in] numberOfBools: Number of booleans

float32_t riscv_kulsinski_distance (const uint32_t *pA, const uint32_t *pB, uint32_t numberOfBools)

Kulsinski distance between two vectors.

Return distance

Parameters

- [in] pA: First vector of packed booleans
- [in] pB: Second vector of packed booleans
- [in] numberOfBools: Number of booleans

float32_t riscv_rogerstanimoto_distance(const_uint32_t *pA, const_uint32_t *pB, uint32_t numberOfBools)

Rogers Tanimoto distance between two vectors.

Roger Stanimoto distance between two vectors.

Return distance

Parameters

- [in] pA: First vector of packed booleans
- [in] pB: Second vector of packed booleans
- [in] numberOfBools: Number of booleans

float32_t riscv_russellrao_distance(const uint32_t *pA, const uint32_t *pB, uint32_t numberOfBools)

Russell-Rao distance between two vectors.

Return distance

Parameters

- [in] pA: First vector of packed booleans
- [in] pB: Second vector of packed booleans
- [in] numberOfBools: Number of booleans

float32_t riscv_sokalmichener_distance (const uint32_t *pA, const uint32_t *pB, uint32_t *numberOfBools)

Sokal-Michener distance between two vectors.

Return distance

Parameters

- [in] pA: First vector of packed booleans
- [in] pB: Second vector of packed booleans
- [in] numberOfBools: Number of booleans

float32_t riscv_sokalsneath_distance(const uint32_t *pA, const uint32_t *pB, uint32_t numberOfBools)

Sokal-Sneath distance between two vectors.

Return distance

Parameters

- [in] pA: First vector of packed booleans
- [in] pB: Second vector of packed booleans
- [in] numberOfBools: Number of booleans

float32_t riscv_yule_distance(const uint32_t *pA, const uint32_t *pB, uint32_t numberOf-Bools)

Yule distance between two vectors.

Return distance

Parameters

- [in] pA: First vector of packed booleans
- [in] pB: Second vector of packed booleans
- [in] numberOfBools: Number of booleans

group groupDistance

Distance functions for use with clustering algorithms. There are distance functions for float vectors and boolean vectors.

3.3.7 Fast Math Functions

Cosine

float32 triscv cos f32 (float32 tx)

```
q31_t riscv_cos_q31 (q31_t x)
q15_t riscv_cos_q15 (q15_t x)
group cos
```

Computes the trigonometric cosine function using a combination of table lookup and linear interpolation. There are separate functions for Q15, Q31, and floating-point data types. The input to the floating-point version is in radians while the fixed-point Q15 and Q31 have a scaled input with the range [0 +0.9999] mapping to [0 2*pi). The fixed-point range is chosen so that a value of 2*pi wraps around to 0.

The implementation is based on table lookup using 512 values together with linear interpolation. The steps used are:

- 1. Calculation of the nearest integer table index
- 2. Compute the fractional portion (fract) of the table index.
- 3. The final result equals (1.0f-fract) *a + fract*b;

where

end of sin group

Functions

```
float32_t riscv_cos_f32 (float32_t x)
```

Fast approximation to the trigonometric cosine function for floating-point data.

Return cos(x).

Return cos(x)

Parameters

• [in] x: input value in radians.

Parameters

• [in] x: input value in radians

$q31_t riscv_cos_q31 (q31_t x)$

Fast approximation to the trigonometric cosine function for Q31 data.

The Q31 input value is in the range [0 + 0.9999] and is mapped to a radian value in the range [0 2*PI).

Return cos(x).

Return cos(x)

Parameters

• [in] x: Scaled input value in radians.

Parameters

• [in] x: Scaled input value in radians

$q15_t riscv_cos_q15(q15_t x)$

Fast approximation to the trigonometric cosine function for Q15 data.

The Q15 input value is in the range [0 +0.9999] and is mapped to a radian value in the range [0 2*PI).

Return cos(x).

Return cos(x)

Parameters

• [in] x: Scaled input value in radians.

Parameters

• [in] x: Scaled input value in radians

Fixed point division

```
riscv_status riscv_divide_q15 (q15_t numerator, q15_t denominator, q15_t *quotient, int16_t *shift) group divide
```

Functions

```
riscv_status riscv_divide_q15 (q15_t numerator, q15_t denominator, q15_t *quotient, int16_t *shift)
```

Fixed point division.

When dividing by 0, an error RISCV_MATH_NANINF is returned. And the quotient is forced to the saturated negative or positive value.

Return error status

Parameters

- [in] numerator: Numerator
- [in] denominator: Denominator
- [out] quotient: Quotient value normalized between -1.0 and 1.0
- [out] shift: Shift left value to get the unnormalized quotient

Sine

```
float32_t riscv_sin_f32 (float32_t x)
q31_t riscv_sin_q31 (q31_t x)
q15_t riscv_sin_q15 (q15_t x)
group sin
```

Computes the trigonometric sine function using a combination of table lookup and linear interpolation. There are separate functions for Q15, Q31, and floating-point data types. The input to the floating-point version is in radians while the fixed-point Q15 and Q31 have a scaled input with the range [0 +0.9999] mapping to [0 2*pi). The fixed-point range is chosen so that a value of 2*pi wraps around to 0.

The implementation is based on table lookup using 512 values together with linear interpolation. The steps used are:

- 1. Calculation of the nearest integer table index
- 2. Compute the fractional portion (fract) of the table index.
- 3. The final result equals (1.0f-fract) *a + fract*b;

where

Functions

```
float32_t riscv_sin_f32 (float32_t x)
```

Fast approximation to the trigonometric sine function for floating-point data.

Return sin(x).

Return sin(x)

Parameters

• [in] x: input value in radians.

Parameters

• [in] x: input value in radians.

$q31_t riscv_sin_q31(q31_t x)$

Fast approximation to the trigonometric sine function for Q31 data.

The Q31 input value is in the range [0 + 0.9999] and is mapped to a radian value in the range [0 2*PI).

Return sin(x).

Return sin(x)

Parameters

• [in] x: Scaled input value in radians.

Parameters

• [in] x: Scaled input value in radians

$q15_t riscv_sin_q15(q15_t x)$

Fast approximation to the trigonometric sine function for Q15 data.

The Q15 input value is in the range [0 +0.9999] and is mapped to a radian value in the range [0 2*PI).

Return sin(x).

Return sin(x)

Parameters

• [in] x: Scaled input value in radians.

Parameters

• [in] x: Scaled input value in radians

Square Root

```
__STATIC_FORCEINLINE riscv_status riscv_sqrt_f32(float32_t in, float32_t * pOut)
riscv_status riscv_sqrt_q31 (q31_t in, q31_t *pOut)
riscv_status riscv_sqrt_q15 (q15_t in, q15_t *pOut)
void riscv_vsqrt_f32 (float32_t *pIn, float32_t *pOut, uint16_t len)
void riscv_vsqrt_q31 (q31_t *pIn, q31_t *pOut, uint16_t len)
void riscv_vsqrt_q15 (q15_t *pIn, q15_t *pOut, uint16_t len)
__STATIC_FORCEINLINE riscv_status riscv_sqrt_f16(float16_t in, float16_t * pOut)
```

group SQRT

Computes the square root of a number. There are separate functions for Q15, Q31, and floating-point data types. The square root function is computed using the Newton-Raphson algorithm. This is an iterative algorithm of the form: where x1 is the current estimate, x0 is the previous estimate, and f'(x0) is the derivative of f() evaluated at x0. For the square root function, the algorithm reduces to:

Functions

__STATIC_FORCEINLINE riscv_status riscv_sqrt_f32(float32_t in, float32_t * pOut)
Floating-point square root function.

Return execution status

- RISCV_MATH_SUCCESS : input value is positive
- RISCV_MATH_ARGUMENT_ERROR : input value is negative; *pOut is set to 0

Parameters

- [in] in: input value
- [out] pOut: square root of input value

```
riscv_status riscv_sqrt_q31 (q31_t in, q31_t *pOut)
```

Q31 square root function.

Return execution status

- RISCV MATH SUCCESS: input value is positive
- RISCV_MATH_ARGUMENT_ERROR : input value is negative; *pOut is set to 0

Parameters

- [in] in: input value. The range of the input value is [0+1) or 0x000000000 to 0x7FFFFFFF
- [out] pout: points to square root of input value

```
riscv_status riscv_sqrt_q15 (q15_t in, q15_t *pOut)
Q15 square root function.
```

Return execution status

- RISCV_MATH_SUCCESS: input value is positive
- RISCV_MATH_ARGUMENT_ERROR : input value is negative; *pOut is set to 0

Parameters

- [in] in: input value. The range of the input value is [0 +1) or 0x0000 to 0x7FFF
- [out] pout: points to square root of input value

```
void riscv_vsqrt_f32 (float32_t *pIn, float32_t *pOut, uint16_t len)
```

Vector Floating-point square root function.

Return The function returns RISCV_MATH_SUCCESS if input value is positive value or RISCV_MATH_ARGUMENT_ERROR if in is negative value and returns zero output for negative values.

Parameters

- [in] pIn: input vector.
- [out] pOut: vector of square roots of input elements.
- [in] len: length of input vector.

```
void riscv_vsqrt_q31 (q31_t *pIn, q31_t *pOut, uint16_t len)
void riscv_vsqrt_q15 (q15_t *pIn, q15_t *pOut, uint16_t len)
__STATIC_FORCEINLINE riscv_status riscv_sqrt_f16(float16_t in, float16_t * pOut)
Floating-point square root function.
```

Return execution status

- RISCV_MATH_SUCCESS: input value is positive
- RISCV_MATH_ARGUMENT_ERROR : input value is negative; *pOut is set to 0

Parameters

- [in] in: input value
- [out] pOut: square root of input value

group groupFastMath

This set of functions provides a fast approximation to sine, cosine, and square root. As compared to most of the other functions in the NMSIS math library, the fast math functions operate on individual values and not arrays. There are separate functions for Q15, Q31, and floating-point data.

3.3.8 Filtering Functions

High Precision Q31 Biquad Cascade Filter

```
void riscv_biquad_cas_df1_32x64_init_q31 (riscv_biquad_cas_df1_32x64_ins_q31 *S, uint8_t numStages, const q31_t *pCoeffs, q63_t *pState, uint8_t postShift)

void riscv_biquad_cas_df1_32x64_q31 (const riscv_biquad_cas_df1_32x64_ins_q31 *S, const q31_t *pSrc, q31_t *pDst, uint32_t blockSize)
```

group BiquadCascadeDF1_32x64

This function implements a high precision Biquad cascade filter which operates on Q31 data values. The filter coefficients are in 1.31 format and the state variables are in 1.63 format. The double precision state variables reduce quantization noise in the filter and provide a cleaner output. These filters are particularly useful when implementing filters in which the singularities are close to the unit circle. This is common for low pass or high pass filters with very low cutoff frequencies.


The function operates on blocks of input and output data and each call to the function processes blockSize samples through the filter. pSrc and pDst points to input and output arrays containing blockSize Q31 values.

Algorithm Each Biquad stage implements a second order filter using the difference equation: A Direct Form I algorithm is used with 5 coefficients and 4 state variables per stage. Coefficients b0, b1 and b2 multiply the input signal x[n] and are referred to as the feedforward coefficients. Coefficients a1 and a2 multiply the output signal y[n] and are referred to as the feedback coefficients. Pay careful attention to the sign of the feedback coefficients. Some design tools use the difference equation In this

x[n] y[n] x[n-1] y[n-1] y[n-1] y[n-1] y[n-2]

case the feedback coefficients a1 and a2 must be negated when used with the NMSIS DSP Library.

Higher order filters are realized as a cascade of second order sections. numStages refers to the number of second order stages used. For example, an 8th order filter would be realized with numStages=4 second order stages. A 9th order filter would be realized with numStages=5 second order stages with the coefficients for one of the stages configured as a first order filter (b2=0 and a2=0).



The pState points to state variables array. Each Biquad stage has 4 state variables x[n-1], x[n-2], y[n-1], and y[n-2] and each state variable in 1.63 format to improve precision. The state variables are arranged in the array as:

The 4 state variables for stage 1 are first, then the 4 state variables for stage 2, and so on. The state array has a total length of 4*numStages values of data in 1.63 format. The state variables are updated after each block of data is processed, the coefficients are untouched.

Instance Structure The coefficients and state variables for a filter are stored together in an instance data structure. A separate instance structure must be defined for each filter. Coefficient arrays may be shared among several instances while state variable arrays cannot be shared.

Init Function There is also an associated initialization function which performs the following operations:

- Sets the values of the internal structure fields.
- Zeros out the values in the state buffer. To do this manually without calling the init function, assign the follow subfields of the instance structure: numStages, pCoeffs, postShift, pState. Also set all of the values in pState to zero.


Use of the initialization function is optional. However, if the initialization function is used, then the instance structure cannot be placed into a const data section. To place an instance structure into a const data section,

the instance structure must be manually initialized. Set the values in the state buffer to zeros before static initialization. For example, to statically initialize the filter instance structure use where numStages is the number of Biquad stages in the filter; pState is the address of the state buffer; pCoeffs is the address of the coefficient buffer; postShift shift to be applied which is described in detail below.

Fixed-Point Behavior Care must be taken while using Biquad Cascade 32x64 filter function. Following issues must be considered:

- Scaling of coefficients
- Filter gain
- · Overflow and saturation

Filter coefficients are represented as fractional values and restricted to lie in the range [-1 +1). The processing function has an additional scaling parameter postShift which allows the filter coefficients to exceed the range [+1 -1). At the output of the filter's accumulator is a shift register which shifts the result by postShift bits. This essentially scales the filter coefficients by 2^postShift. For example, to realize the coefficients set the Coefficient array to: and set postShift=1

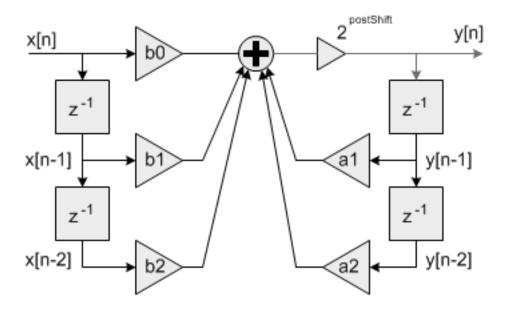

The second thing to keep in mind is the gain through the filter. The frequency response of a Biquad filter is a function of its coefficients. It is possible for the gain through the filter to exceed 1.0 meaning that the filter increases the amplitude of certain frequencies. This means that an input signal with amplitude < 1.0 may result in an output > 1.0 and these are saturated or overflowed based on the implementation of the filter. To avoid this behavior the filter needs to be scaled down such that its peak gain < 1.0 or the input signal must be scaled down so that the combination of input and filter are never overflowed.

The third item to consider is the overflow and saturation behavior of the fixed-point Q31 version. This is described in the function specific documentation below.

Functions

```
void riscv_biquad_cas_df1_32x64_init_q31 (riscv_biquad_cas_df1_32x64_ins_q31 *S, uint8_t numStages, const q31_t *pCoeffs, q63_t *pState, uint8_t postShift)

Initialization function for the Q31 Biquad cascade 32x64 filter.
```

Return none

Coefficient and State Ordering The coefficients are stored in the array pCoeffs in the following order: where b1x and a1x are the coefficients for the first stage, b2x and a2x are the coefficients for the second stage, and so on. The pCoeffs array contains a total of 5*numStages values.

The pState points to state variables array and size of each state variable is 1.63 format. Each Biquad stage has 4 state variables x[n-1], x[n-2], y[n-1], and y[n-2]. The state variables are arranged in the state array as: The 4 state variables for stage 1 are first, then the 4 state variables for stage 2, and so on. The state array has a total length of 4*numStages values. The state variables are updated after each block of data is processed; the coefficients are untouched.

Parameters

- [inout] S: points to an instance of the high precision Q31 Biquad cascade filter structure
- [in] numStages: number of 2nd order stages in the filter
- [in] pCoeffs: points to the filter coefficients
- [in] pState: points to the state buffer
- [in] postShift: Shift to be applied after the accumulator. Varies according to the coefficients format

```
void riscv_biquad_cas_df1_32x64_q31 (const riscv_biquad_cas_df1_32x64_ins_q31 *S, const q31_t *pSrc, q31_t *pDst, uint32_t blockSize)

Processing function for the Q31 Biquad cascade 32x64 filter.
```

Return none

Details The function is implemented using an internal 64-bit accumulator. The accumulator has a 2.62 format and maintains full precision of the intermediate multiplication results but provides only a single guard bit. Thus, if the accumulator result overflows it wraps around rather than clip. In order to avoid overflows completely the input signal must be scaled down by 2 bits and lie in the range [-0.25 +0.25). After all 5 multiply-accumulates are performed, the 2.62 accumulator is shifted by postShift bits and the result truncated to 1.31 format by discarding the low 32 bits.

Two related functions are provided in the NMSIS DSP library.

- riscv_biquad_cascade_df1_q31() implements a Biquad cascade with 32-bit coefficients and state variables with a Q63 accumulator.
- riscv_biquad_cascade_df1_fast_q31() implements a Biquad cascade with 32-bit coefficients and state variables with a Q31 accumulator.

Parameters

- [in] S: points to an instance of the high precision Q31 Biquad cascade filter
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

Biquad Cascade IIR Filters Using Direct Form I Structure


- void riscv_biquad_cascade_df1_fast_q15 (const riscv_biquad_casd_df1_inst_q15 *S, const q15_t *pSrc, q15_t *pDst, uint32_t blockSize)
- void riscv_biquad_cascade_df1_fast_q31 (const_riscv_biquad_casd_df1_inst_q31 *S, const q31_t *pSrc, q31_t *pDst, uint32_t blockSize)
- void riscv_biquad_cascade_df1_init_f16 (riscv_biquad_casd_df1_inst_f16 *S, uint8_t num-Stages, const float16_t *pCoeffs, float16_t *pState)
- void riscv_biquad_cascade_df1_init_f32 (riscv_biquad_casd_df1_inst_f32 *S, uint8_t num-Stages, const float32_t *pCoeffs, float32_t *pState)
- void riscv_biquad_cascade_df1_init_q15 (riscv_biquad_casd_df1_inst_q15 *S, uint8_t num-Stages, const q15_t *pCoeffs, q15_t *pState, int8_t postShift)
- void riscv_biquad_cascade_df1_init_q31 (riscv_biquad_casd_df1_inst_q31 *S, uint8_t num-Stages, const q31_t *pCoeffs, q31_t *pState, int8_t postShift)
- void riscv_biquad_cascade_df1_q15 (const riscv_biquad_casd_df1_inst_q15 *S, const q15_t *pSrc, q15_t *pDst, uint32_t blockSize)
- void riscv_biquad_cascade_df1_q31 (const riscv_biquad_casd_df1_inst_q31 *S, const q31_t *pSrc, q31_t *pDst, uint32_t blockSize)

group BiquadCascadeDF1

This set of functions implements arbitrary order recursive (IIR) filters. The filters are implemented as a cascade of second order Biquad sections. The functions support Q15, Q31 and floating-point data types. Fast version of Q15 and Q31 also available.


The functions operate on blocks of input and output data and each call to the function processes blockSize samples through the filter. pSrc points to the array of input data and pDst points to the array of output data. Both arrays contain blockSize values.

Algorithm Each Biquad stage implements a second order filter using the difference equation: A Direct Form I algorithm is used with 5 coefficients and 4 state variables per stage. Coefficients b0, b1 and b2 multiply the input signal x[n] and are referred to as the feedforward coefficients. Coefficients a1 and a2 multiply the output signal y[n] and are referred to as the feedback coefficients. Pay careful attention to the sign of the feedback coefficients. Some design tools use the difference equation In this case the feedback coefficients a1 and a2 must be negated when used with the NMSIS DSP

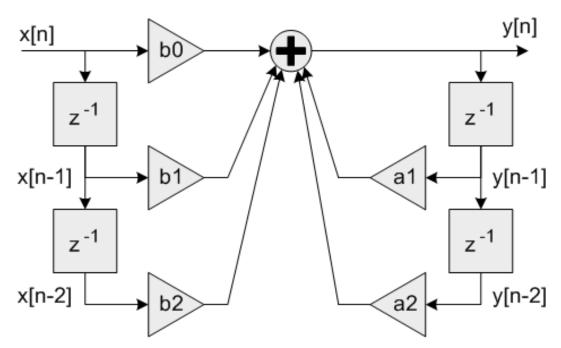

Library.

Higher order filters are realized as a cascade of second order sections. numStages refers to the number of second order stages used. For example, an 8th order filter would be realized with numStages=4 second order stages. A 9th order filter would be realized with numStages=5 second order stages with the coefficients for one of the stages configured as a first order filter (b2=0 and



The pState points to state variables array. Each Biquad stage has 4 state variables x[n-1], x[n-2], y[n-1], and y[n-2]. The state variables are arranged in the pState array as:

The 4 state variables for stage 1 are first, then the 4 state variables for stage 2, and so on. The state array has a total length of 4*numStages values. The state variables are updated after each block of data is processed, the coefficients are untouched.

Instance Structure The coefficients and state variables for a filter are stored together in an instance data structure. A separate instance structure must be defined for each filter. Coefficient arrays may be shared among several instances while state variable arrays cannot be shared. There are separate instance structure declarations for each of the 3 supported data types.

Init Function There is also an associated initialization function for each data type. The initialization function performs following operations:

- Sets the values of the internal structure fields.
- Zeros out the values in the state buffer. To do this manually without calling the init function, assign the follow subfields of the instance structure: numStages, pCoeffs, pState. Also set all of the values in pState to zero.


Use of the initialization function is optional. However, if the initialization function is used, then the instance structure cannot be placed into a const data section. To place an instance structure into a const data section,

the instance structure must be manually initialized. Set the values in the state buffer to zeros before static initialization. The code below statically initializes each of the 3 different data type filter instance structures where numStages is the number of Biquad stages in the filter; pState is the address of the state buffer; pCoeffs is the address of the coefficient buffer; postShift shift to be applied.

Fixed-Point Behavior Care must be taken when using the Q15 and Q31 versions of the Biquad Cascade filter functions. Following issues must be considered:

- Scaling of coefficients
- Filter gain
- · Overflow and saturation

Scaling of coefficients Filter coefficients are represented as fractional values and coefficients are restricted to lie in the range [-1 +1). The fixed-point functions have an additional scaling parameter postShift which allow the filter coefficients to exceed the range [+1 -1). At the output of the filter's accumulator is a shift register which shifts the result by postShift bits. This essentially scales the filter coefficients by 2^postShift. For example, to realize the coefficients set the pCoeffs array to: and set

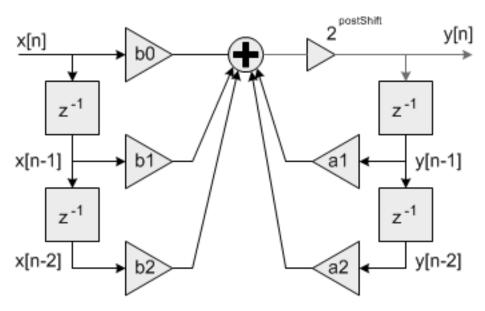

postShift=1

Filter gain The frequency response of a Biquad filter is a function of its coefficients. It is possible for the gain through the filter to exceed 1.0 meaning that the filter increases the amplitude of certain frequencies. This means that an input signal with amplitude < 1.0 may result in an output > 1.0 and these are saturated or overflowed based on the implementation of the filter. To avoid this behavior the filter needs to be scaled down such that its peak gain < 1.0 or the input signal must be scaled down so that the combination of input and filter are never overflowed.

Overflow and saturation For Q15 and Q31 versions, it is described separately as part of the function specific documentation below.

Functions

void riscv_biquad_cascade_df1_f16 (const riscv_biquad_casd_df1_inst_f16 *S, const float16_t *pSrc, float16_t *pDst, uint32_t blockSize)

Processing function for the floating-point Biquad cascade filter.

Return none

Parameters

- [in] S: points to an instance of the floating-point Biquad cascade structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

```
void riscv\_biquad\_cascade\_df1\_f32 (const_riscv_biquad_casd_df1_inst_f32_*S, const_float32_t *pSrc, float32_t *pDst, uint32_t blockSize) Processing function for the floating-point Biquad cascade filter.
```

Return none

Parameters

- [in] S: points to an instance of the floating-point Biquad cascade structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

```
void riscv_biquad_cascade_df1_fast_q15 (const riscv_biquad_casd_df1_inst_q15 *S, const q15_t *pSrc, q15_t *pDst, uint32_t blockSize)
```

Processing function for the Q15 Biquad cascade filter (fast variant).

Fast but less precise processing function for the Q15 Biquad cascade filter for RISC-V Core with DSP enabled.

Return none

Scaling and Overflow Behavior This fast version uses a 32-bit accumulator with 2.30 format. The accumulator maintains full precision of the intermediate multiplication results but provides only a single guard bit. Thus, if the accumulator result overflows it wraps around and distorts the result. In order to avoid overflows completely the input signal must be scaled down by two bits and lie in the range [-0.25 +0.25). The 2.30 accumulator is then shifted by postShift bits and the result truncated to 1.15 format by discarding the low 16 bits.

Remark Refer to riscv_biquad_cascade_df1_q15() for a slower implementation of this function which uses 64-bit accumulation to avoid wrap around distortion. Both the slow and the fast versions use the same instance structure. Use the function riscv_biquad_cascade_df1_init_q15() to initialize the filter structure.

Parameters

- [in] S: points to an instance of the Q15 Biquad cascade structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process per call

```
void riscv_biquad_cascade_df1_fast_q31 (const riscv_biquad_casd_df1_inst_q31 *S, const q31_t *pSrc, q31_t *pDst, uint32_t blockSize)
```

Processing function for the Q31 Biquad cascade filter (fast variant).

Fast but less precise processing function for the Q31 Biquad cascade filter for RISC-V Core with DSP enabled.

Return none

Scaling and Overflow Behavior This function is optimized for speed at the expense of fixed-point precision and overflow protection. The result of each 1.31 x 1.31 multiplication is truncated to 2.30 format. These intermediate results are added to a 2.30 accumulator. Finally, the accumulator is saturated and converted to a 1.31 result. The fast version has the same overflow behavior as the standard version and provides less precision since it discards the low 32 bits of each multiplication result. In order to avoid overflows completely the input signal must be scaled down by two bits and lie in the range [-0.25 +0.25). Use the intialization function riscv_biquad_cascade_df1_init_q31() to initialize filter structure.

Remark Refer to riscv_biquad_cascade_df1_q31() for a slower implementation of this function which uses 64-bit accumulation to provide higher precision. Both the slow and the fast versions use the same instance structure. Use the function riscv_biquad_cascade_df1_init_q31() to initialize the filter structure.

Parameters

- [in] S: points to an instance of the Q31 Biquad cascade structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process per call

```
void riscv_biquad_cascade_df1_init_f16 (riscv_biquad_casd_df1_inst_f16 *S, uint8_t num-
Stages, const float16_t *pCoeffs, float16_t
*pState)
```

Initialization function for the floating-point Biquad cascade filter.

The initialization function which must be used is riscv_biquad_cascade_df1_mve_init_f16.

Return none

Coefficient and State Ordering The coefficients are stored in the array pCoeffs in the following order:

where b1x and a1x are the coefficients for the first stage, b2x and a2x are the coefficients for the second stage, and so on. The pCoeffs array contains a total of 5*numStages values.

The pState is a pointer to state array. Each Biquad stage has 4 state variables x[n-1], x[n-2], y[n-1], and y[n-2]. The state variables are arranged in the pState array as: The 4 state variables for stage 1 are first, then the 4 state variables for stage 2, and so on. The state array has a total length of 4*numStages values. The state variables are updated after each block of data is processed; the coefficients are untouched.

For MVE code, an additional buffer of modified coefficients is required. Its size is numStages and each element of this buffer has type riscv_biquad_mod_coef_f16. So, its total size is 96*numStages float16_t elements.

Parameters

- [inout] S: points to an instance of the floating-point Biquad cascade structure.
- [in] numStages: number of 2nd order stages in the filter.
- [in] pCoeffs: points to the filter coefficients.
- [in] pState: points to the state buffer.

```
void riscv_biquad_cascade_df1_init_f32 (riscv_biquad_casd_df1_inst_f32 *S, uint8_t num-
Stages, const float32_t *pCoeffs, float32_t
*nState)
```

Initialization function for the floating-point Biquad cascade filter.

The initialization function which must be used is riscv_biquad_cascade_df1_mve_init_f32.

Return none

Coefficient and State Ordering The coefficients are stored in the array pCoeffs in the following order:

where b1x and a1x are the coefficients for the first stage, b2x and a2x are the coefficients for the second stage, and so on. The pCoeffs array contains a total of 5*numStages values.

The pState is a pointer to state array. Each Biquad stage has 4 state variables x[n-1], x[n-2], y[n-1], and y[n-2]. The state variables are arranged in the pState array as: The 4 state variables for stage 1 are first, then the 4 state variables for stage 2, and so on. The state array has a total length of 4*numStages values. The state variables are updated after each block of data is processed; the coefficients are untouched.

For MVE code, an additional buffer of modified coefficients is required. Its size is numStages and each element of this buffer has type riscv_biquad_mod_coef_f32. So, its total size is 32*numStages float32 t elements.

Parameters

- [inout] S: points to an instance of the floating-point Biquad cascade structure.
- [in] numStages: number of 2nd order stages in the filter.
- [in] pCoeffs: points to the filter coefficients.
- [in] pState: points to the state buffer.

```
void riscv_biquad_cascade_df1_init_q15 (riscv_biquad_casd_df1_inst_q15 *S, uint8_t numStages, const q15_t *pCoeffs, q15_t *pState, int8_t postShift)
```

Initialization function for the Q15 Biquad cascade filter.

Return none

Coefficient and State Ordering The coefficients are stored in the array pCoeffs in the following order:

where b1x and a1x are the coefficients for the first stage, b2x and a2x are the coefficients for the second stage, and so on. The pCoeffs array contains a total of 6*numStages values. The zero coefficient between b1 and b2 facilities use of 16-bit SIMD instructions on the RISC-V Core with DSP.

The state variables are stored in the array pState. Each Biquad stage has 4 state variables x[n-1], x[n-2], y[n-1], and y[n-2]. The state variables are arranged in the pState array as: The 4 state variables for stage 1 are first, then the 4 state variables for stage 2, and so on. The state array has a total length of 4*numStages values. The state variables are updated after each block of data is processed; the coefficients are untouched.

Parameters

- [inout] S: points to an instance of the Q15 Biquad cascade structure.
- [in] numStages: number of 2nd order stages in the filter.
- [in] pCoeffs: points to the filter coefficients.
- [in] pState: points to the state buffer.

[in] postShift: Shift to be applied to the accumulator result. Varies according to the coefficients format

```
void riscv_biquad_cascade_df1_init_q31 (riscv_biquad_casd_df1_inst_q31 *S, uint8_t numStages, const q31_t *pCoeffs, q31_t *pState, int8 t postShift)
```

Initialization function for the Q31 Biquad cascade filter.

Return none

Coefficient and State Ordering The coefficients are stored in the array pCoeffs in the following order:

where b1x and a1x are the coefficients for the first stage, b2x and a2x are the coefficients for the second stage, and so on. The pCoeffs array contains a total of 5*numStages values.

The pState points to state variables array. Each Biquad stage has 4 state variables x[n-1], x[n-2], y[n-1], and y[n-2]. The state variables are arranged in the pState array as: The 4 state variables for stage 1 are first, then the 4 state variables for stage 2, and so on. The state array has a total length of 4*numStages values. The state variables are updated after each block of data is processed; the coefficients are untouched.

Parameters

- [inout] S: points to an instance of the Q31 Biquad cascade structure.
- [in] numStages: number of 2nd order stages in the filter.
- [in] pCoeffs: points to the filter coefficients.
- [in] pState: points to the state buffer.
- [in] postShift: Shift to be applied after the accumulator. Varies according to the coefficients format

```
void riscv_biquad_cascade_df1_q15 (const riscv_biquad_casd_df1_inst_q15 *S, const q15_t *pSrc, q15_t *pDst, uint32_t blockSize)

Processing function for the Q15 Biquad cascade filter.
```

Return none

Scaling and Overflow Behavior The function is implemented using a 64-bit internal accumulator. Both coefficients and state variables are represented in 1.15 format and multiplications yield a 2.30 result. The 2.30 intermediate results are accumulated in a 64-bit accumulator in 34.30 format. There is no risk of internal overflow with this approach and the full precision of intermediate multiplications is preserved. The accumulator is then shifted by postShift bits to truncate the result to 1.15 format by discarding the low 16 bits. Finally, the result is saturated to 1.15 format.

Remark Refer to riscv_biquad_cascade_df1_fast_q15() for a faster but less precise implementation of this filter.

Parameters

- [in] S: points to an instance of the Q15 Biquad cascade structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the location where the output result is written
- [in] blockSize: number of samples to process

```
void riscv\_biquad\_cascade\_df1\_q31 (const_riscv_biquad_casd_df1_inst_q31 *S, const q31_t *pSrc, q31_t *pDst, uint32_t blockSize) Processing function for the Q31 Biquad cascade filter.
```

Return none

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The accumulator has a 2.62 format and maintains full precision of the intermediate multiplication results but provides only a single guard bit. Thus, if the accumulator result overflows it wraps around rather than clip. In order to avoid overflows completely the input signal must be scaled down by 2 bits and lie in the range [-0.25 +0.25). After all 5 multiply-accumulates are performed, the 2.62 accumulator is shifted by postShift bits and the result truncated to 1.31 format by discarding the low 32 bits.

Remark Refer to riscv_biquad_cascade_df1_fast_q31() for a faster but less precise implementation of this filter.

Parameters

- [in] S: points to an instance of the Q31 Biquad cascade structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

Biguad Cascade IIR Filters Using a Direct Form II Transposed Structure

```
LOW_OPTIMIZATION_ENTER void riscv_biquad_cascade_df2T_f16(const riscv_biquad_cascade_df2T_f16)
LOW_OPTIMIZATION_ENTER void riscv_biquad_cascade_df2T_f32(const riscv_biquad_cascade_df2T_
LOW OPTIMIZATION ENTER void riscv biquad cascade df2T f64(const riscv biquad cascade df2T
void riscv_biquad_cascade_df2T_init_f16 (riscv_biquad_cascade_df2T_instance_f16 *S, uint8_t
                                                                                                                    numStages, const float16_t *pCoeffs, float16_t
                                                                                                                    *pState)
void riscv_biquad_cascade_df2T_init_f32 (riscv_biquad_cascade_df2T_instance_f32 *S, uint8_t
                                                                                                                    numStages, const float32_t *pCoeffs, float32_t
                                                                                                                    *pState)
void riscv_biquad_cascade_df2T_init_f64 (riscv_biquad_cascade_df2T_instance_f64 *S, uint8_t
                                                                                                                    numStages, const float64_t *pCoeffs, float64_t
                                                                                                                    *pState)
LOW_OPTIMIZATION_ENTER void riscv_biquad_cascade_stereo_df2T_f16(const riscv_biquad_cascade_stereo_df2T_f16)
LOW_OPTIMIZATION_ENTER void riscv_biquad_cascade_stereo_df2T_f32(const riscv_biquad_cascade_stereo_df2T_f32(const riscv_biquad_cascade_stereo_df2T_f32(const riscv_biquad_cascade_stereo_df2T_f32(const riscv_biquad_cascade_stereo_df2T_f32(const riscv_biquad_cascade_stereo_df2T_f32(const riscv_biquad_cascade_stereo_df2T_f32(const riscv_biquad_cascade_stereo_df3T_f32(const riscv_biquad_cascade_stereo_f3T_f32(const riscv_biquad_cascade_
void riscv_biquad_cascade_stereo_df2T_init_f16 (riscv_biquad_cascade_stereo_df2T_instance_f16
                                                                                                                                         *S, uint8_t numStages, const float16_t
                                                                                                                                         *pCoeffs, float16_t *pState)
void riscv_biquad_cascade_stereo_df2T_init_f32 (riscv_biquad_cascade_stereo_df2T_instance_f32
                                                                                                                                         *S, uint8_t numStages, const float32_t
                                                                                                                                         *pCoeffs, float32_t *pState)
```


group BiquadCascadeDF2T

This set of functions implements arbitrary order recursive (IIR) filters using a transposed direct form II structure. The filters are implemented as a cascade of second order Biquad sections. These functions provide a slight memory savings as compared to the direct form I Biquad filter functions. Only floating-point data is supported.

This function operate on blocks of input and output data and each call to the function processes blockSize samples through the filter. pSrc points to the array of input data and pDst points to the array of output data. Both arrays contain blockSize values.

Algorithm Each Biquad stage implements a second order filter using the difference equation: where d1 and d2 represent the two state values.

A Biquad filter using a transposed Direct Form II structure is shown below. Coefficients b0, b1, and b2 multiply the input signal x[n] and are referred to as the feedforward coefficients. Coefficients a1 and a2 multiply the output signal y[n] and are referred to as the feedback coefficients. Pay careful attention to the sign of the feedback coefficients. Some design tools flip the sign of the feedback coefficients: In this case the feedback coefficients a1 and a2 must be negated when used with the NMSIS DSP Library.

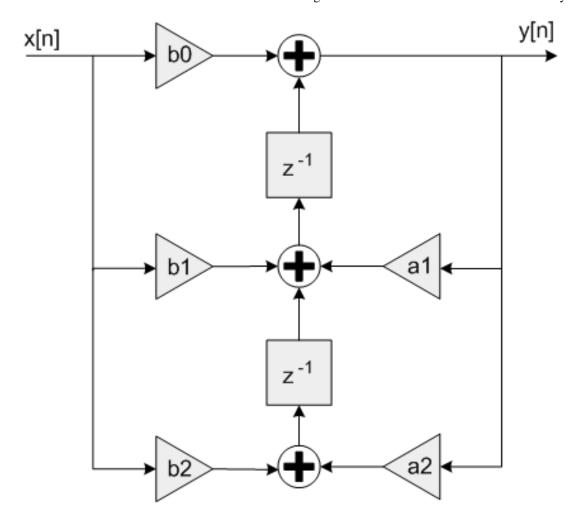

Higher order filters are realized as a cascade of second order sections. numStages refers to the number of second order stages used. For example, an 8th order filter would be realized with numStages=4 second order stages. A 9th order filter would be realized with numStages=5 second order stages with the coefficients for one of the stages configured as a first order filter (b2=0 and a2=0).

pState points to the state variable array. Each Biquad stage has 2 state variables d1 and d2. The state variables are arranged in the pState array as: where d1x refers to the state variables for the first Biquad and d2x refers to the state variables for the second Biquad. The state array has a total length of 2*numStages values. The state variables are updated after each block of data is processed; the coefficients are untouched.

- The NMSIS library contains Biquad filters in both Direct Form I and transposed Direct Form II. The advantage of the Direct Form I structure is that it is numerically more robust for fixed-point data types. That is why the Direct Form I structure supports Q15 and Q31 data types. The transposed Direct Form II structure, on the other hand, requires a wide dynamic range for the state variables d1 and d2. Because of this, the NMSIS library only has a floating-point version of the Direct Form II Biquad. The advantage of the Direct Form II Biquad is that it requires half the number of state variables, 2 rather than 4, per Biquad stage.
- **Instance Structure** The coefficients and state variables for a filter are stored together in an instance data structure. A separate instance structure must be defined for each filter. Coefficient arrays may be shared among several instances while state variable arrays cannot be shared.
- **Init Functions** There is also an associated initialization function. The initialization function performs following operations:
 - Sets the values of the internal structure fields.
 - Zeros out the values in the state buffer. To do this manually without calling the init function, assign the follow subfields of the instance structure: numStages, pCoeffs, pState. Also set all of the values in pState to zero.

Use of the initialization function is optional. However, if the initialization function is used, then the instance structure cannot be placed into a const data section. To place an instance structure into a const data section, the instance structure must be manually initialized. Set the values in the state buffer to zeros before static initialization. For example, to statically initialize the instance structure use where numStages is the number of Biquad stages in the filter; pState is the address of the state buffer. pCoeffs is the address of the coefficient buffer;

Functions

LOW_OPTIMIZATION_ENTER void riscv_biquad_cascade_df2T_f16 (const riscv_biquad_cascade_ Processing function for the floating-point transposed direct form II Biquad cascade filter.

Return none

Parameters

- [in] S: points to an instance of the filter data structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

LOW_OPTIMIZATION_ENTER void riscv_biquad_cascade_df2T_f32 (const riscv_biquad_cascade_ Processing function for the floating-point transposed direct form II Biquad cascade filter.

Return none

Parameters

- [in] S: points to an instance of the filter data structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

LOW_OPTIMIZATION_ENTER void riscv_biquad_cascade_df2T_f64 (const riscv_biquad_cascade_ Processing function for the floating-point transposed direct form II Biquad cascade filter.

Return none

Parameters

- [in] S: points to an instance of the filter data structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

```
void riscv_biquad_cascade_df2T_init_f16 (riscv_biquad_cascade_df2T_instance_f16 *S, uint8_t numStages, const float16_t *pCoeffs, float16 t *pState)
```

Initialization function for the floating-point transposed direct form II Biquad cascade filter.

For Neon version, this array is bigger. If numstages = 4x + y, then the array has size: 32*x + 5*y and it must be initialized using the function riscv_biquad_cascade_df2T_compute_coefs_f16 which is taking the standard array coefficient as parameters.

Return none

Coefficient and State Ordering The coefficients are stored in the array pCoeffs in the following order in the not Neon version.

where b1x and a1x are the coefficients for the first stage, b2x and a2x are the coefficients for the second stage, and so on. The pCoeffs array contains a total of 5*numStages values.

Parameters

- [inout] S: points to an instance of the filter data structure.
- [in] numStages: number of 2nd order stages in the filter.
- [in] pCoeffs: points to the filter coefficients.
- [in] pState: points to the state buffer.

But, an array of 8*numstages is a good approximation.

Then, the initialization can be done with:

In this example, neonCoefs is a bigger array of size 8 * numStages. coefs is the standard array:

The pState is a pointer to state array. Each Biquad stage has 2 state variables d1, and d2. The 2 state variables for stage 1 are first, then the 2 state variables for stage 2, and so on. The state array has a total length of 2*numStages values. The state variables are updated after each block of data is processed; the coefficients are untouched.

```
void riscv_biquad_cascade_df2T_init_f32 (riscv_biquad_cascade_df2T_instance_f32 *S,
uint8_t numStages, const float32_t *pCoeffs,
float32_t *pState)
```

Initialization function for the floating-point transposed direct form II Biquad cascade filter.

For Neon version, this array is bigger. If numstages = 4x + y, then the array has size: 32*x + 5*y and it must be initialized using the function riscv_biquad_cascade_df2T_compute_coefs_f32 which is taking the standard array coefficient as parameters.

Return none

Coefficient and State Ordering The coefficients are stored in the array pCoeffs in the following order in the not Neon version.

where b1x and a1x are the coefficients for the first stage, b2x and a2x are the coefficients for the second stage, and so on. The pCoeffs array contains a total of 5*numStages values.

Parameters

- [inout] S: points to an instance of the filter data structure.
- [in] numStages: number of 2nd order stages in the filter.
- [in] pCoeffs: points to the filter coefficients.
- [in] pState: points to the state buffer.

But, an array of 8*numstages is a good approximation.

Then, the initialization can be done with:

In this example, neonCoefs is a bigger array of size 8 * numStages. coefs is the standard array:

The pState is a pointer to state array. Each Biquad stage has 2 state variables d1, and d2. The 2 state variables for stage 1 are first, then the 2 state variables for stage 2, and so on. The state array has a total length of 2*numStages values. The state variables are updated after each block of data is processed; the coefficients are untouched.

```
void riscv_biquad_cascade_df2T_init_f64 (riscv_biquad_cascade_df2T_instance_f64 *S, uint8_t numStages, const float64_t *pCoeffs, float64_t *pState)
```

Initialization function for the floating-point transposed direct form II Biquad cascade filter.

Return none

Coefficient and State Ordering The coefficients are stored in the array pCoeffs in the following order:

where b1x and a1x are the coefficients for the first stage, b2x and a2x are the coefficients for the second stage, and so on. The pCoeffs array contains a total of 5*numStages values.

The pState is a pointer to state array. Each Biquad stage has 2 state variables d1, and d2. The 2 state variables for stage 1 are first, then the 2 state variables for stage 2, and so on. The state array has a total length of 2*numStages values. The state variables are updated after each block of data is processed; the coefficients are untouched.

Parameters

- [inout] S: points to an instance of the filter data structure
- [in] numStages: number of 2nd order stages in the filter
- [in] pCoeffs: points to the filter coefficients
- [in] pState: points to the state buffer

LOW_OPTIMIZATION_ENTER void riscv_biquad_cascade_stereo_df2T_f16 (const riscv_biquad_c Processing function for the floating-point transposed direct form II Biquad cascade filter.

Processing function for the floating-point transposed direct form II Biquad cascade filter. 2 channels.

Return none

Parameters

- [in] S: points to an instance of the filter data structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data

• [in] blockSize: number of samples to process

LOW_OPTIMIZATION_ENTER void riscv_biquad_cascade_stereo_df2T_f32 (const riscv_biquad_c Processing function for the floating-point transposed direct form II Biquad cascade filter.

Processing function for the floating-point transposed direct form II Biquad cascade filter. 2 channels.

Return none

Parameters

- [in] S: points to an instance of the filter data structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

Initialization function for the floating-point transposed direct form II Biquad cascade filter.

Return none

Coefficient and State Ordering The coefficients are stored in the array pCoeffs in the following order:

where b1x and a1x are the coefficients for the first stage, b2x and a2x are the coefficients for the second stage, and so on. The pCoeffs array contains a total of 5*numStages values.

The pState is a pointer to state array. Each Biquad stage has 2 state variables d1, and d2 for each channel. The 2 state variables for stage 1 are first, then the 2 state variables for stage 2, and so on. The state array has a total length of 2*numStages values. The state variables are updated after each block of data is processed; the coefficients are untouched.

Parameters

- [inout] S: points to an instance of the filter data structure.
- [in] numStages: number of 2nd order stages in the filter.
- [in] pCoeffs: points to the filter coefficients.
- [in] pState: points to the state buffer.

Initialization function for the floating-point transposed direct form II Biquad cascade filter.

Return none

Coefficient and State Ordering The coefficients are stored in the array pCoeffs in the following order:

where b1x and a1x are the coefficients for the first stage, b2x and a2x are the coefficients for the second stage, and so on. The pCoeffs array contains a total of 5*numStages values.

The pState is a pointer to state array. Each Biquad stage has 2 state variables d1, and d2 for each channel. The 2 state variables for stage 1 are first, then the 2 state variables for stage 2, and so on.

The state array has a total length of 2*numStages values. The state variables are updated after each block of data is processed; the coefficients are untouched.

Parameters

- [inout] S: points to an instance of the filter data structure.
- [in] numStages: number of 2nd order stages in the filter.
- [in] pCoeffs: points to the filter coefficients.
- [in] pState: points to the state buffer.

Convolution

void **riscv_conv_f32** (**const** float32_t *pSrcA, uint32_t srcALen, **const** float32_t *pSrcB, uint32_t srcBLen, float32_t *pDst)

void riscv_conv_fast_opt_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst, q15_t *pScratch1, q15_t *pScratch2)

void riscv_conv_fast_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst)

void riscv_conv_fast_q31 (const q31_t *pSrcA, uint32_t srcALen, const q31_t *pSrcB, uint32_t srcBLen, q31_t *pDst)

void **riscv_conv_opt_q15** (**const** q15_t **pSrcA*, uint32_t *srcALen*, **const** q15_t **pSrcB*, uint32_t *srcBLen*, q15_t **pDst*, q15_t **pScratch1*, q15_t **pScratch2*)

void **riscv_conv_opt_q7** (**const** q7_t *pSrcA, uint32_t srcALen, **const** q7_t *pSrcB, uint32_t srcBLen, q7_t *pDst, q15_t *pScratch1, q15_t *pScratch2)

void riscv_conv_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst)

void riscv_conv_q31 (const q31_t *pSrcA, uint32_t srcALen, const q31_t *pSrcB, uint32_t srcBLen, q31_t *pDst)

void riscv_conv_q7 (const q7_t *pSrcA, uint32_t srcALen, const q7_t *pSrcB, uint32_t srcBLen, q7_t *pDst)

group Conv

Convolution is a mathematical operation that operates on two finite length vectors to generate a finite length output vector. Convolution is similar to correlation and is frequently used in filtering and data analysis. The NMSIS DSP library contains functions for convolving Q7, Q15, Q31, and floating-point data types. The library also provides fast versions of the Q15 and Q31 functions.

Algorithm Let a[n] and b[n] be sequences of length srcALen and srcBLen samples respectively. Then the convolution

$$c[n] = \sum_{k=0}^{\text{srcALe n}} a[k]b[n-k]$$

is defined as

Note that c[n] is of length srcALen + srcBLen - 1 and is defined over the interval n=0, 1, 2, ..., srcALen + srcBLen - 2. pSrcA points to the first input vector of length srcALen and pSrcB points to the second input vector of length srcBLen. The output result is written to pDst and the calling function must allocate srcALen+srcBLen-1 words for the result.

Conceptually, when two signals a[n] and b[n] are convolved, the signal b[n] slides over a[n]. For each offset n, the overlapping portions of a[n] and b[n] are multiplied and summed together.

Note that convolution is a commutative operation:

This means that switching the A and B arguments to the convolution functions has no effect.

- **Fixed-Point Behavior** Convolution requires summing up a large number of intermediate products. As such, the Q7, Q15, and Q31 functions run a risk of overflow and saturation. Refer to the function specific documentation below for further details of the particular algorithm used.
- **Fast Versions** Fast versions are supported for Q31 and Q15. Cycles for Fast versions are less compared to Q31 and Q15 of conv and the design requires the input signals should be scaled down to avoid intermediate overflows.
- **Opt Versions** Opt versions are supported for Q15 and Q7. Design uses internal scratch buffer for getting good optimisation. These versions are optimised in cycles and consumes more memory (Scratch memory) compared to Q15 and Q7 versions

Functions

```
void riscv_conv_f32 (const float32_t *pSrcA, uint32_t srcALen, const float32_t *pSrcB, uint32_t srcBLen, float32_t *pDst)

Convolution of floating-point sequences.
```

Return none

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written. Length srcALen+srcBLen-1.

```
void riscv_conv_fast_opt_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst, q15_t *pScratch1, q15_t *pScratch2)
```

Convolution of Q15 sequences (fast version).

Convolution of Q15 sequences (fast version) for RISC-V Core with DSP enabled.

Return none

Scaling and Overflow Behavior This fast version uses a 32-bit accumulator with 2.30 format. The accumulator maintains full precision of the intermediate multiplication results but provides only a single guard bit. There is no saturation on intermediate additions. Thus, if the accumulator overflows it wraps around and distorts the result. The input signals should be scaled down to avoid intermediate overflows. Scale down the inputs by log2(min(srcALen, srcBLen)) (log2 is read as log to the base 2) times to avoid overflows, as maximum of min(srcALen, srcBLen) number of additions are carried internally. The 2.30 accumulator is right shifted by 15 bits and then saturated to 1.15 format to yield the final result.

Remark Refer to riscv_conv_q15() for a slower implementation of this function which uses 64-bit accumulation to avoid wrap around distortion.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written. Length srcALen+srcBLen-1
- [in] pScratch1: points to scratch buffer of size max(srcALen, srcBLen) + 2*min(srcALen, srcBLen) 2
- [in] pScratch2: points to scratch buffer of size min(srcALen, srcBLen

```
void riscv_conv_fast_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst)
```

Convolution of Q15 sequences (fast version).

Convolution of Q15 sequences (fast version) for RISC-V Core with DSP enabled.

Return none

Scaling and Overflow Behavior This fast version uses a 32-bit accumulator with 2.30 format. The accumulator maintains full precision of the intermediate multiplication results but provides only a single guard bit. There is no saturation on intermediate additions. Thus, if the accumulator overflows it wraps around and distorts the result. The input signals should be scaled down to avoid intermediate overflows. Scale down the inputs by log2(min(srcALen, srcBLen)) (log2 is read as log to the base 2) times to avoid overflows, as maximum of min(srcALen, srcBLen) number of additions are carried internally. The 2.30 accumulator is right shifted by 15 bits and then saturated to 1.15 format to yield the final result.

Remark Refer to riscv_conv_q15() for a slower implementation of this function which uses 64-bit accumulation to avoid wrap around distortion.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written. Length srcALen+srcBLen-1

```
void riscv_conv_fast_q31 (const q31_t *pSrcA, uint32_t srcALen, const q31_t *pSrcB, uint32_t srcBLen, q31_t *pDst)
```

Convolution of Q31 sequences (fast version).

Convolution of Q31 sequences (fast version) for RISC-V Core with DSP enabled.

Return none

Scaling and Overflow Behavior This function is optimized for speed at the expense of fixed-point precision and overflow protection. The result of each 1.31 x 1.31 multiplication is truncated to 2.30 format. These intermediate results are accumulated in a 32-bit register in 2.30 format. Finally, the accumulator is saturated and converted to a 1.31 result.

The fast version has the same overflow behavior as the standard version but provides less precision since it discards the low 32 bits of each multiplication result. In order to avoid overflows completely the input signals must be scaled down. Scale down the inputs by log2(min(srcALen, srcBLen)) (log2 is read as log to the base 2) times to avoid overflows, as maximum of min(srcALen, srcBLen) number of additions are carried internally.

Remark Refer to riscv_conv_q31() for a slower implementation of this function which uses 64-bit accumulation to provide higher precision.

Parameters

- [in] pSrcA: points to the first input sequence.
- [in] srcALen: length of the first input sequence.
- [in] pSrcB: points to the second input sequence.
- [in] srcBLen: length of the second input sequence.
- [out] pDst: points to the location where the output result is written. Length srcALen+srcBLen-1.

```
void riscv_conv_opt_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst, q15_t *pScratch1, q15_t *pScratch2) Convolution of Q15 sequences.
```

Return none

Scaling and Overflow Behavior The function is implemented using a 64-bit internal accumulator. Both inputs are in 1.15 format and multiplications yield a 2.30 result. The 2.30 intermediate results are accumulated in a 64-bit accumulator in 34.30 format. This approach provides 33 guard bits and there is no risk of overflow. The 34.30 result is then truncated to 34.15 format by discarding the low 15 bits and then saturated to 1.15 format.

Remark Refer to riscv_conv_fast_q15() for a faster but less precise version of this function.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written. Length srcALen+srcBLen-1.
- [in] pScratch1: points to scratch buffer of size max(srcALen, srcBLen) + 2*min(srcALen, srcBLen) 2.
- [in] pScratch2: points to scratch buffer of size min(srcALen, srcBLen).

```
void riscv_conv_opt_q7 (const q7_t *pSrcA, uint32_t srcALen, const q7_t *pSrcB, uint32_t srcBLen, q7_t *pDst, q15_t *pScratch1, q15_t *pScratch2)

Convolution of Q7 sequences.
```

Return none

Scaling and Overflow Behavior The function is implemented using a 32-bit internal accumulator. Both the inputs are represented in 1.7 format and multiplications yield a 2.14 result. The 2.14 intermediate results are accumulated in a 32-bit accumulator in 18.14 format. This approach provides 17 guard

bits and there is no risk of overflow as long as max(srcALen, srcBLen) <131072. The 18.14 result is then truncated to 18.7 format by discarding the low 7 bits and then saturated to 1.7 format.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written. Length srcALen+srcBLen-1.
- [in] pScratch1: points to scratch buffer(of type q15_t) of size max(srcALen, srcBLen) + 2*min(srcALen, srcBLen) 2.
- [in] pScratch2: points to scratch buffer (of type q15_t) of size min(srcALen, srcBLen).

```
void riscv_conv_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst)

Convolution of Q15 sequences.
```

Return none

Scaling and Overflow Behavior The function is implemented using a 64-bit internal accumulator. Both inputs are in 1.15 format and multiplications yield a 2.30 result. The 2.30 intermediate results are accumulated in a 64-bit accumulator in 34.30 format. This approach provides 33 guard bits and there is no risk of overflow. The 34.30 result is then truncated to 34.15 format by discarding the low 15 bits and then saturated to 1.15 format.

Remark Refer to riscy conv fast q15() for a faster but less precise version of this function.

Remark Refer to riscv_conv_opt_q15() for a faster implementation of this function using scratch buffers.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written. Length srcALen+srcBLen-1.

```
void riscv_conv_q31 (const q31_t *pSrcA, uint32_t srcALen, const q31_t *pSrcB, uint32_t srcBLen, q31_t *pDst)

Convolution of Q31 sequences.
```

Return none

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The accumulator has a 2.62 format and maintains full precision of the intermediate multiplication results but provides only a single guard bit. There is no saturation on intermediate additions. Thus, if the accumulator overflows it wraps around and distorts the result. The input signals should be scaled down to avoid intermediate overflows. Scale down the inputs by log2(min(srcALen, srcBLen)) (log2 is read as log to the base 2) times to avoid overflows, as maximum of min(srcALen, srcBLen) number

of additions are carried internally. The 2.62 accumulator is right shifted by 31 bits and saturated to 1.31 format to yield the final result.

Remark Refer to riscv_conv_fast_q31() for a faster but less precise implementation of this function.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written. Length srcALen+srcBLen-1.

```
void riscv_conv_q7 (const q7_t *pSrcA, uint32_t srcALen, const q7_t *pSrcB, uint32_t srcBLen, q7_t *pDst)

Convolution of Q7 sequences.
```

Return none

Scaling and Overflow Behavior The function is implemented using a 32-bit internal accumulator. Both the inputs are represented in 1.7 format and multiplications yield a 2.14 result. The 2.14 intermediate results are accumulated in a 32-bit accumulator in 18.14 format. This approach provides 17 guard bits and there is no risk of overflow as long as max(srcALen, srcBLen) <131072. The 18.14 result is then truncated to 18.7 format by discarding the low 7 bits and then saturated to 1.7 format.

Remark Refer to riscv_conv_opt_q7() for a faster implementation of this function.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written. Length srcALen+srcBLen-1.

Partial Convolution

```
riscv_status riscv_conv_partial_f32 (const float32_t *pSrcA, uint32_t srcALen, const float32_t *pSrcB, uint32_t srcBLen, float32_t *pDst, uint32_t firstIndex, uint32_t numPoints)

riscv_status riscv_conv_partial_fast_opt_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst, uint32_t firstIndex, uint32_t numPoints, q15_t *pScratch1, q15_t *pScratch2)

riscv_status riscv_conv_partial_fast_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst, uint32_t firstIndex, uint32_t numPoints)

riscv_status riscv_conv_partial_fast_q31 (const q31_t *pSrcA, uint32_t srcALen, const q31_t *pSrcB, uint32_t srcBLen, q31_t *pDst, uint32_t firstIndex, uint32_t numPoints)
```

```
riscv_status riscv_conv_partial_opt_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst, uint32_t firstIn-dex, uint32_t numPoints, q15_t *pScratch1, q15_t *pScratch2)
```

riscv_status riscv_conv_partial_opt_q7 (const q7_t *pSrcA, uint32_t srcALen, const q7_t *pSrcB, uint32_t srcBLen, q7_t *pDst, uint32_t firstIndex, uint32_t numPoints, q15_t *pScratch1, q15_t *pScratch2)

riscv_status riscv_conv_partial_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst, uint32_t firstIndex, uint32_t numPoints)

riscv_status riscv_conv_partial_q31 (const q31_t *pSrcA, uint32_t srcALen, const q31_t *pSrcB, uint32_t srcBLen, q31_t *pDst, uint32_t firstIndex, uint32_t numPoints)

riscv_status riscv_conv_partial_q7 (const q7_t *pSrcA, uint32_t srcALen, const q7_t *pSrcB, uint32_t srcBLen, q7_t *pDst, uint32_t firstIndex, uint32_t num-Points)

group PartialConv

Partial Convolution is equivalent to Convolution except that a subset of the output samples is generated. Each function has two additional arguments. firstIndex specifies the starting index of the subset of output samples. numPoints is the number of output samples to compute. The function computes the output in the range [firstIndex, ..., firstIndex+numPoints-1]. The output array pDst contains numPoints values.

The allowable range of output indices is [0 srcALen+srcBLen-2]. If the requested subset does not fall in this range then the functions return RISCV_MATH_ARGUMENT_ERROR. Otherwise the functions return RISCV MATH SUCCESS.

Note Refer to riscv_conv_f32() for details on fixed point behavior.

- **Fast Versions** Fast versions are supported for Q31 and Q15 of partial convolution. Cycles for Fast versions are less compared to Q31 and Q15 of partial conv and the design requires the input signals should be scaled down to avoid intermediate overflows.
- **Opt Versions** Opt versions are supported for Q15 and Q7. Design uses internal scratch buffer for getting good optimisation. These versions are optimised in cycles and consumes more memory (Scratch memory) compared to Q15 and Q7 versions of partial convolution

Functions

```
riscv_status riscv_conv_partial_f32 (const float32_t *pSrcA, uint32_t srcALen, const float32_t *pSrcB, uint32_t srcBLen, float32_t *pDst, uint32_t firstIndex, uint32_t numPoints)
```

Partial convolution of floating-point sequences.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR : requested subset is not in the range [0 srcALen+srcBLen-2]

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence

- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written
- [in] firstIndex: is the first output sample to start with
- [in] numPoints: is the number of output points to be computed

```
riscv_status riscv_conv_partial_fast_opt_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst, uint32_t firstIndex, uint32_t numPoints, q15_t *pScratch1, q15_t *pScratch2)
```

Partial convolution of Q15 sequences (fast version).

Partial convolution of Q15 sequences (fast version) for RISC-V Core with DSP enabled.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: requested subset is not in the range [0 srcALen+srcBLen-2]

Remark Refer to riscv_conv_partial_q15() for a slower implementation of this function which uses a 64-bit accumulator to avoid wrap around distortion.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written
- [in] firstIndex: is the first output sample to start with
- [in] numPoints: is the number of output points to be computed
- [in] pScratch1: points to scratch buffer of size max(srcALen, srcBLen) + 2*min(srcALen, srcBLen) 2
- [in] pScratch2: points to scratch buffer of size min(srcALen, srcBLen)

```
riscv_status riscv_conv_partial_fast_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst, uint32_t firstIndex, uint32_t numPoints)
```

Partial convolution of Q15 sequences (fast version).

Partial convolution of Q15 sequences (fast version) for RISC-V Core with DSP enabled.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: requested subset is not in the range [0 srcALen+srcBLen-2]

Remark Refer to riscv_conv_partial_q15() for a slower implementation of this function which uses a 64-bit accumulator to avoid wrap around distortion.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written
- [in] firstIndex: is the first output sample to start with
- [in] numPoints: is the number of output points to be computed

```
riscv_status riscv_conv_partial_fast_q31 (const q31_t *pSrcA, uint32_t srcALen, const q31_t *pSrcB, uint32_t srcBLen, q31_t *pDst, uint32_t firstIndex, uint32_t numPoints)
```

Partial convolution of Q31 sequences (fast version).

Partial convolution of Q31 sequences (fast version) for RISC-V Core with DSP enabled.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: requested subset is not in the range [0 srcALen+srcBLen-2]

Remark Refer to riscv_conv_partial_q31() for a slower implementation of this function which uses a 64-bit accumulator to provide higher precision.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written
- [in] firstIndex: is the first output sample to start with
- [in] numPoints: is the number of output points to be computed

```
riscv_status riscv_conv_partial_opt_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst, uint32_t firstIndex, uint32_t numPoints, q15_t *pScratch1, q15_t *pScratch2)
```

Partial convolution of Q15 sequences.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_ARGUMENT_ERROR: requested subset is not in the range [0 srcALen+srcBLen-2]

Remark Refer to riscv_conv_partial_fast_q15() for a faster but less precise version of this function.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written
- [in] firstIndex: is the first output sample to start with
- [in] numPoints: is the number of output points to be computed
- [in] pScratch1: points to scratch buffer of size max(srcALen, srcBLen) + 2*min(srcALen, srcBLen) 2.
- [in] pScratch2: points to scratch buffer of size min(srcALen, srcBLen).

```
riscv_status riscv_conv_partial_opt_q7 (const q7_t *pSrcA, uint32_t srcALen, const q7_t *pSrcB, uint32_t srcBLen, q7_t *pDst, uint32_t firstIn-dex, uint32_t numPoints, q15_t *pScratch1, q15_t *pScratch2)
```

Partial convolution of Q7 sequences.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR : requested subset is not in the range [0 srcALen+srcBLen-2]

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written
- [in] firstIndex: is the first output sample to start with
- [in] numPoints: is the number of output points to be computed
- [in] pScratch1: points to scratch buffer(of type q15_t) of size max(srcALen, srcBLen) + 2*min(srcALen, srcBLen) 2.
- [in] pScratch2: points to scratch buffer (of type q15 t) of size min(srcALen, srcBLen).

```
riscv_status riscv_conv_partial_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst, uint32_t firstIndex, uint32_t numPoints)
```

Partial convolution of Q15 sequences.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR : requested subset is not in the range [0 srcALen+srcBLen-2]

Remark Refer to riscv_conv_partial_fast_q15() for a faster but less precise version of this function.

Remark Refer to riscv_conv_partial_opt_q15() for a faster implementation of this function using scratch buffers.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written
- [in] firstIndex: is the first output sample to start with
- [in] numPoints: is the number of output points to be computed

```
riscv_status riscv_conv_partial_q31 (const q31_t *pSrcA, uint32_t srcALen, const q31_t *pSrcB, uint32_t srcBLen, q31_t *pDst, uint32_t firstIndex, uint32_t numPoints)
```

Partial convolution of Q31 sequences.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_ARGUMENT_ERROR: requested subset is not in the range [0 srcALen+srcBLen-2]

Remark Refer to riscv_conv_partial_fast_q31() for a faster but less precise implementation of this function.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written
- [in] firstIndex: is the first output sample to start with
- [in] numPoints: is the number of output points to be computed

```
riscv_status riscv_conv_partial_q7 (const q7_t *pSrcA, uint32_t srcALen, const q7_t *pSrcB, uint32_t srcBLen, q7_t *pDst, uint32_t firstIndex, uint32_t numPoints)
```

Partial convolution of Q7 sequences.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_ARGUMENT_ERROR : requested subset is not in the range [0 srcALen+srcBLen-2]

Remark Refer to riscv_conv_partial_opt_q7() for a faster implementation of this function.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written
- [in] firstIndex: is the first output sample to start with
- [in] numPoints: is the number of output points to be computed

Correlation

```
void riscv_correlate_f16 (const float16_t *pSrcA, uint32_t srcALen, const float16_t *pSrcB, uint32_t srcBLen, float16_t *pDst)
```

```
void riscv_correlate_f32 (const float32_t *pSrcA, uint32_t srcALen, const float32_t *pSrcB, uint32_t srcBLen, float32_t *pDst)
```

```
void riscv_correlate_fast_opt_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst, q15_t *pScratch)
```

```
void riscv_correlate_fast_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst)
```

```
void riscv_correlate_fast_q31 (const q31_t *pSrcA, uint32_t srcALen, const q31_t *pSrcB, uint32_t srcBLen, q31_t *pDst)
```

void riscv_correlate_opt_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst, q15_t *pScratch)

```
void riscv_correlate_opt_q7 (const q7_t *pSrcA, uint32_t srcALen, const q7_t *pSrcB, uint32_t srcBLen, q7_t *pDst, q15_t *pScratch1, q15_t *pScratch2)
```

void **riscv_correlate_q15** (**const** q15_t **pSrcA*, uint32_t *srcALen*, **const** q15_t **pSrcB*, uint32_t *srcBLen*, q15_t **pDst*)

void riscv_correlate_q31 (const q31_t *pSrcA, uint32_t srcALen, const q31_t *pSrcB, uint32_t srcBLen, q31_t *pDst)

void riscv_correlate_q7 (const q7_t *pSrcA, uint32_t srcALen, const q7_t *pSrcB, uint32_t srcBLen, q7_t *pDst)

group Corr

Correlation is a mathematical operation that is similar to convolution. As with convolution, correlation uses two signals to produce a third signal. The underlying algorithms in correlation and convolution are identical except that one of the inputs is flipped in convolution. Correlation is commonly used to measure the similarity between two signals. It has applications in pattern recognition, cryptanalysis, and searching. The NMSIS library provides correlation functions for Q7, Q15, Q31 and floating-point data types. Fast versions of the Q15 and Q31 functions are also provided.

Algorithm Let a [n] and b [n] be sequences of length srcALen and srcBLen samples respectively. The convolution of the two signals is denoted by In correlation, one of the signals is flipped in time

$$c[n] = \sum_{k=0}^{srcALen} a[k] b[k-n]$$

and this is mathematically defined as

The pSrcA points to the first input vector of length srcALen and pSrcB points to the second input vector of length srcBLen. The result c[n] is of length 2 * max(srcALen, srcBLen) - 1 and is defined over the interval n=0, 1, 2, ..., (2 * max(srcALen, srcBLen) - 2). The output result is written to pDst and the calling function must allocate 2 * max(srcALen, srcBLen) - 1 words for the result.

Note The pDst should be initialized to all zeros before being used.

- **Fixed-Point Behavior** Correlation requires summing up a large number of intermediate products. As such, the Q7, Q15, and Q31 functions run a risk of overflow and saturation. Refer to the function specific documentation below for further details of the particular algorithm used.
- **Fast Versions** Fast versions are supported for Q31 and Q15. Cycles for Fast versions are less compared to Q31 and Q15 of correlate and the design requires the input signals should be scaled down to avoid intermediate overflows.
- **Opt Versions** Opt versions are supported for Q15 and Q7. Design uses internal scratch buffer for getting good optimisation. These versions are optimised in cycles and consumes more memory (Scratch memory) compared to Q15 and Q7 versions of correlate

Functions

void riscv_correlate_f16 (const float16_t *pSrcA, uint32_t srcALen, const float16_t *pSrcB, uint32_t srcBLen, float16_t *pDst)

Correlation of floating-point sequences.

Return none

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written. Length 2 * max(srcALen, srcBLen) 1.

void riscv_correlate_f32 (const float32_t *pSrcA, uint32_t *rcALen, const float32_t *pSrcB, uint32_t *rcBLen, float32_t *pDst)

Correlation of floating-point sequences.

Return none

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence

- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written. Length 2 * max(srcALen, srcBLen) 1.

```
void riscv_correlate_fast_opt_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst, q15_t *pScratch)
```

Correlation of Q15 sequences (fast version).

Return none

Scaling and Overflow Behavior This fast version uses a 32-bit accumulator with 2.30 format. The accumulator maintains full precision of the intermediate multiplication results but provides only a single guard bit. There is no saturation on intermediate additions. Thus, if the accumulator overflows it wraps around and distorts the result. The input signals should be scaled down to avoid intermediate overflows. Scale down one of the inputs by 1/min(srcALen, srcBLen) to avoid overflow since a maximum of min(srcALen, srcBLen) number of additions is carried internally. The 2.30 accumulator is right shifted by 15 bits and then saturated to 1.15 format to yield the final result.

Remark Refer to riscv_correlate_q15() for a slower implementation of this function which uses a 64-bit accumulator to avoid wrap around distortion.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence.
- [out] pDst: points to the location where the output result is written. Length 2 * max(srcALen, srcBLen) 1.
- [in] pScratch: points to scratch buffer of size max(srcALen, srcBLen) + 2*min(srcALen, srcBLen) 2.

```
void riscv_correlate_fast_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst)

Correlation of Q15 sequences (fast version).
```

Return none

Scaling and Overflow Behavior This fast version uses a 32-bit accumulator with 2.30 format. The accumulator maintains full precision of the intermediate multiplication results but provides only a single guard bit. There is no saturation on intermediate additions. Thus, if the accumulator overflows it wraps around and distorts the result. The input signals should be scaled down to avoid intermediate overflows. Scale down one of the inputs by 1/min(srcALen, srcBLen) to avoid overflow since a maximum of min(srcALen, srcBLen) number of additions is carried internally. The 2.30 accumulator is right shifted by 15 bits and then saturated to 1.15 format to yield the final result.

Remark Refer to riscv_correlate_q15() for a slower implementation of this function which uses a 64-bit accumulator to avoid wrap around distortion.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence

- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written. Length 2 * max(srcALen, srcBLen) 1.

```
void riscv_correlate_fast_q31 (const q31_t *pSrcA, uint32_t srcALen, const q31_t *pSrcB, uint32_t srcBLen, q31_t *pDst)

Correlation of Q31 sequences (fast version).
```

Return none

Scaling and Overflow Behavior This function is optimized for speed at the expense of fixed-point precision and overflow protection. The result of each 1.31 x 1.31 multiplication is truncated to 2.30

format. These intermediate results are accumulated in a 32-bit register in 2.30 format. Finally, the accumulator is saturated and converted to a 1.31 result.

The fast version has the same overflow behavior as the standard version but provides less precision since it discards the low 32 bits of each multiplication result. In order to avoid overflows completely the input signals must be scaled down. The input signals should be scaled down to avoid intermediate overflows. Scale down one of the inputs by 1/min(srcALen, srcBLen)to avoid overflows since a maximum of min(srcALen, srcBLen) number of additions is carried internally.

Remark Refer to riscv_correlate_q31() for a slower implementation of this function which uses 64-bit accumulation to provide higher precision.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written. Length 2 * max(srcALen, srcBLen) 1.

```
void riscv_correlate_opt_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst, q15_t *pScratch)

Correlation of Q15 sequences.
```

Return none

Scaling and Overflow Behavior The function is implemented using a 64-bit internal accumulator. Both inputs are in 1.15 format and multiplications yield a 2.30 result. The 2.30 intermediate results are accumulated in a 64-bit accumulator in 34.30 format. This approach provides 33 guard bits and there is no risk of overflow. The 34.30 result is then truncated to 34.15 format by discarding the low 15 bits and then saturated to 1.15 format.

Remark Refer to riscv_correlate_fast_q15() for a faster but less precise version of this function.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence

- [out] pDst: points to the location where the output result is written. Length 2 * max(srcALen, srcBLen) 1.
- [in] pScratch: points to scratch buffer of size max(srcALen, srcBLen) + 2*min(srcALen, srcBLen) 2.

```
void riscv_correlate_opt_q7 (const q7_t *pSrcA, uint32_t srcALen, const q7_t *pSrcB, uint32_t srcBLen, q7_t *pDst, q15_t *pScratch1, q15_t *pScratch2)
```

Correlation of Q7 sequences.

Return none

Scaling and Overflow Behavior The function is implemented using a 32-bit internal accumulator. Both the inputs are represented in 1.7 format and multiplications yield a 2.14 result. The 2.14 intermediate results are accumulated in a 32-bit accumulator in 18.14 format. This approach provides 17 guard bits and there is no risk of overflow as long as max(srcAlen, srcBlen) <131072. The 18.14 result is then truncated to 18.7 format by discarding the low 7 bits and then saturated to 1.7 format.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written. Length 2 * max(srcALen, srcBLen) 1.
- [in] pScratch1: points to scratch buffer(of type q15_t) of size max(srcALen, srcBLen) + 2*min(srcALen, srcBLen) 2.
- [in] pScratch2: points to scratch buffer (of type q15_t) of size min(srcALen, srcBLen).

```
void riscv_correlate_q15 (const q15_t *pSrcA, uint32_t srcALen, const q15_t *pSrcB, uint32_t srcBLen, q15_t *pDst)

Correlation of Q15 sequences.
```

Return none

Scaling and Overflow Behavior The function is implemented using a 64-bit internal accumulator. Both inputs are in 1.15 format and multiplications yield a 2.30 result. The 2.30 intermediate results are accumulated in a 64-bit accumulator in 34.30 format. This approach provides 33 guard bits and there is no risk of overflow. The 34.30 result is then truncated to 34.15 format by discarding the low 15 bits and then saturated to 1.15 format.

Remark Refer to riscv_correlate_fast_q15() for a faster but less precise version of this function.

Remark Refer to riscv_correlate_opt_q15() for a faster implementation of this function using scratch buffers.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence

• [out] pDst: points to the location where the output result is written. Length 2 * max(srcALen, srcBLen) - 1.

```
void riscv_correlate_q31 (const q31_t *pSrcA, uint32_t srcALen, const q31_t *pSrcB, uint32_t srcBLen, q31_t *pDst)

Correlation of Q31 sequences.
```

Return none

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The accumulator has a 2.62 format and maintains full precision of the intermediate multiplication results but provides only a single guard bit. There is no saturation on intermediate additions. Thus, if the accumulator overflows it wraps around and distorts the result. The input signals should be scaled down to avoid intermediate overflows. Scale down one of the inputs by 1/min(srcALen, srcBLen)to avoid overflows since a maximum of min(srcALen, srcBLen) number of additions is carried internally. The 2.62 accumulator is right shifted by 31 bits and saturated to 1.31 format to yield the final result.

Remark Refer to riscv_correlate_fast_q31() for a faster but less precise implementation of this function.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written. Length 2 * max(srcALen, srcBLen) 1.

```
void riscv_correlate_q7 (const q7_t *pSrcA, uint32_t srcALen, const q7_t *pSrcB, uint32_t srcBLen, q7_t *pDst)

Correlation of Q7 sequences.
```

Return none

Scaling and Overflow Behavior The function is implemented using a 32-bit internal accumulator. Both the inputs are represented in 1.7 format and multiplications yield a 2.14 result. The 2.14 intermediate results are accumulated in a 32-bit accumulator in 18.14 format. This approach provides 17 guard bits and there is no risk of overflow as long as max(srcAlen, srcBlen) <131072. The 18.14 result is then truncated to 18.7 format by discarding the low 7 bits and saturated to 1.7 format.

Remark Refer to riscv_correlate_opt_q7() for a faster implementation of this function.

Parameters

- [in] pSrcA: points to the first input sequence
- [in] srcALen: length of the first input sequence
- [in] pSrcB: points to the second input sequence
- [in] srcBLen: length of the second input sequence
- [out] pDst: points to the location where the output result is written. Length 2 * max(srcALen, srcBLen) 1.

Finite Impulse Response (FIR) Decimator

void riscv_fir_decimate_f32 (const riscv_fir_decimate_instance_f32 *S, const float32_t *pSrc, float32_t *pDst, uint32_t blockSize)

void riscv_fir_decimate_fast_q15 (const riscv_fir_decimate_instance_q15 *S, const q15_t *pSrc, q15_t *pDst, uint32_t blockSize)

void riscv_fir_decimate_fast_q31 (const riscv_fir_decimate_instance_q31 *S, const q31_t *pSrc, q31_t *pDst, uint32_t blockSize)

riscv_status riscv_fir_decimate_init_f32 (riscv_fir_decimate_instance_f32 *S, uint16_t numTaps, uint8_t M, const float32_t *pCoeffs, float32_t *pState, uint32 t blockSize)

riscv_status riscv_fir_decimate_init_q15 (riscv_fir_decimate_instance_q15 *S, uint16_t numTaps, uint8_t M, const q15_t *pCoeffs, q15_t *pState, uint32 t blockSize)


riscv_status riscv_fir_decimate_init_q31 (riscv_fir_decimate_instance_q31 *S, uint16_t numTaps, uint8_t M, const q31_t *pCoeffs, q31_t *pState, uint32 t blockSize)

void riscv_fir_decimate_q15 (const riscv_fir_decimate_instance_q15 *S, const q15_t *pSrc, q15 t *pDst, uint32 t blockSize)

void **riscv_fir_decimate_q31** (**const** riscv_fir_decimate_instance_q31 *S, **const** q31_t *pSrc, q31_t *pDst, uint32_t blockSize)

group FIR_decimate

These functions combine an FIR filter together with a decimator. They are used in multirate systems for reducing the sample rate of a signal without introducing aliasing distortion. Conceptually, the functions are equivalent to the block diagram below: When decimating by a factor of \mathbb{M} , the signal should be prefiltered by a lowpass filter with a normalized cutoff frequency of $1/\mathbb{M}$ in order to prevent aliasing distortion. The user of the function is responsible for providing the filter

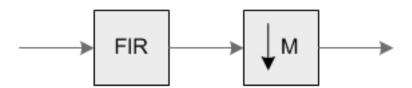

coefficients.

The FIR decimator functions provided in the NMSIS DSP Library combine the FIR filter and the decimator in an efficient manner. Instead of calculating all of the FIR filter outputs and discarding M-1 out of every M, only the samples output by the decimator are computed. The functions operate on blocks of input and output data. pSrc points to an array of blockSize input values and pDst points to an array of blockSize/M output values. In order to have an integer number of output samples blockSize must always be a multiple of the decimation factor M.

The library provides separate functions for Q15, Q31 and floating-point data types.

Algorithm: The FIR portion of the algorithm uses the standard form filter: where, b[n] are the filter coefficients.

The pCoeffs points to a coefficient array of size numTaps. Coefficients are stored in time reversed order.

pState points to a state array of size numTaps + blockSize - 1. Samples in the state buffer are stored in the order:

The state variables are updated after each block of data is processed, the coefficients are untouched.

Instance Structure The coefficients and state variables for a filter are stored together in an instance data structure. A separate instance structure must be defined for each filter. Coefficient arrays may be shared among several instances while state variable array should be allocated separately. There are separate instance structure declarations for each of the 3 supported data types.

Initialization Functions There is also an associated initialization function for each data type. The initialization function performs the following operations:

- Sets the values of the internal structure fields.
- Zeros out the values in the state buffer.
- Checks to make sure that the size of the input is a multiple of the decimation factor. To do this manually without calling the init function, assign the follow subfields of the instance structure: numTaps, pCoeffs, M (decimation factor), pState. Also set all of the values in pState to zero.

Use of the initialization function is optional. However, if the initialization function is used, then the instance structure cannot be placed into a const data section. To place an instance structure into a const data section, the instance structure must be manually initialized. The code below statically initializes each of the 3 different data type filter instance structures where M is the decimation factor; numTaps is the number of filter coefficients in the filter; pCoeffs is the address of the coefficient buffer; pState is the address of the state buffer. Be sure to set the values in the state buffer to zeros when doing static initialization.

Fixed-Point Behavior Care must be taken when using the fixed-point versions of the FIR decimate filter functions. In particular, the overflow and saturation behavior of the accumulator used in each function must be considered. Refer to the function specific documentation below for usage guidelines.

Functions

```
void riscv_fir_decimate_f32 (const riscv_fir_decimate_instance_f32 *S, const float32_t *pSrc, float32_t *pDst, uint32_t blockSize)

Processing function for floating-point FIR decimator.
```

Return none

Parameters

- [in] S: points to an instance of the floating-point FIR decimator structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

```
void riscv_fir_decimate_fast_q15 (const riscv_fir_decimate_instance_q15 *S, const q15_t *pSrc, q15_t *pDst, uint32_t blockSize)

Processing function for the Q15 FIR decimator (fast variant).
```

Processing function for the Q15 FIR decimator (fast variant) for RISC-V Core with DSP enabled.

Return none

Scaling and Overflow Behavior This fast version uses a 32-bit accumulator with 2.30 format. The accumulator maintains full precision of the intermediate multiplication results but provides only a single guard bit. Thus, if the accumulator result overflows it wraps around and distorts the result. In order to

avoid overflows completely the input signal must be scaled down by log2(numTaps) bits (log2 is read as log to the base 2). The 2.30 accumulator is then truncated to 2.15 format and saturated to yield the 1.15 result.

Remark Refer to riscv_fir_decimate_q15() for a slower implementation of this function which uses 64-bit accumulation to avoid wrap around distortion. Both the slow and the fast versions use the same instance structure. Use function riscv_fir_decimate_init_q15() to initialize the filter structure.

Parameters

- [in] S: points to an instance of the Q15 FIR decimator structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of input samples to process per call

```
void riscv_fir_decimate_fast_q31 (const riscv_fir_decimate_instance_q31 *S, const q31_t *pSrc, q31_t *pDst, uint32_t blockSize)

Processing function for the Q31 FIR decimator (fast variant).
```

Processing function for the Q31 FIR decimator (fast variant) for RISC-V Core with DSP enabled.

Return none

Scaling and Overflow Behavior This function is optimized for speed at the expense of fixed-point precision and overflow protection. The result of each 1.31 x 1.31 multiplication is truncated to 2.30 format. These intermediate results are added to a 2.30 accumulator. Finally, the accumulator is saturated and converted to a 1.31 result. The fast version has the same overflow behavior as the standard version and provides less precision since it discards the low 32 bits of each multiplication result. In order to avoid overflows completely the input signal must be scaled down by log2(numTaps) bits (where log2 is read as log to the base 2).

Remark Refer to riscv_fir_decimate_q31() for a slower implementation of this function which uses a 64-bit accumulator to provide higher precision. Both the slow and the fast versions use the same instance structure. Use function riscv_fir_decimate_init_q31() to initialize the filter structure.

Parameters

- [in] S: points to an instance of the Q31 FIR decimator structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

```
riscv_status riscv_fir_decimate_init_f32 (riscv_fir_decimate_instance_f32 *S, uint16_t num-
Taps, uint8_t M, const float32_t *pCoeffs, float32_t *pState, uint32_t blockSize)
```

Initialization function for the floating-point FIR decimator.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_LENGTH_ERROR : blockSize is not a multiple of M

Details pCoeffs points to the array of filter coefficients stored in time reversed order:

pState points to the array of state variables. pState is of length numTaps+blockSize-1 words where blockSize is the number of input samples passed to riscv_fir_decimate_f32(). M is the decimation factor.

Parameters

- [inout] S: points to an instance of the floating-point FIR decimator structure
- [in] numTaps: number of coefficients in the filter
- [in] M: decimation factor
- [in] pCoeffs: points to the filter coefficients
- [in] pState: points to the state buffer
- [in] blockSize: number of input samples to process per call

```
riscv_status riscv_fir_decimate_init_q15 (riscv_fir_decimate_instance_q15 *S, uint16_t num-
Taps, uint8_t M, const q15_t *pCoeffs, q15_t *pState, uint32_t blockSize)

Initialization function for the Q15 FIR decimator.
```

Return execution status

- RISCV MATH SUCCESS: Operation successful
- RISCV_MATH_LENGTH_ERROR: blockSize is not a multiple of M

Details pCoeffs points to the array of filter coefficients stored in time reversed order:

pState points to the array of state variables. pState is of length numTaps+blockSize-1 words where blockSize is the number of input samples to the call riscv_fir_decimate_q15(). M is the decimation factor.

Parameters

- [inout] S: points to an instance of the Q15 FIR decimator structure
- [in] numTaps: number of coefficients in the filter
- [in] M: decimation factor
- [in] pCoeffs: points to the filter coefficients
- [in] pState: points to the state buffer
- [in] blockSize: number of input samples to process

```
riscv_status riscv_fir_decimate_init_q31 (riscv_fir_decimate_instance_q31 *S, uint16_t num-
Taps, uint8_t M, const q31_t *pCoeffs, q31_t *pState, uint32 t blockSize)
```

Initialization function for the Q31 FIR decimator.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_LENGTH_ERROR: blockSize is not a multiple of M

Details pCoeffs points to the array of filter coefficients stored in time reversed order:

pState points to the array of state variables. pState is of length numTaps+blockSize-1 words where blockSize is the number of input samples passed to riscv_fir_decimate_q31(). M is the decimation factor.

Parameters

- [inout] S: points to an instance of the Q31 FIR decimator structure
- [in] numTaps: number of coefficients in the filter
- [in] M: decimation factor
- [in] pCoeffs: points to the filter coefficients
- [in] pState: points to the state buffer
- [in] blockSize: number of input samples to process

```
\label{eq:const_riscv_fir_decimate_q15} \ (\mbox{const riscv_fir_decimate_instance}\_ \ q15 \ *S, \mbox{const } \ q15 \ t \ *pSrc, \ q15 \ t \ *pDst, \ uint32 \ t \ blockSize)
```

Processing function for the Q15 FIR decimator.

Return none

Scaling and Overflow Behavior The function is implemented using a 64-bit internal accumulator. Both coefficients and state variables are represented in 1.15 format and multiplications yield a 2.30 result. The 2.30 intermediate results are accumulated in a 64-bit accumulator in 34.30 format. There is no risk of internal overflow with this approach and the full precision of intermediate multiplications is preserved. After all additions have been performed, the accumulator is truncated to 34.15 format by discarding low 15 bits. Lastly, the accumulator is saturated to yield a result in 1.15 format.

Remark Refer to riscv_fir_decimate_fast_q15() for a faster but less precise implementation of this function.

Parameters

- [in] S: points to an instance of the Q15 FIR decimator structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of input samples to process per call

```
void riscv_fir_decimate_q31 (const riscv_fir_decimate_instance_q31 *S, const q31_t *pSrc, q31_t *pDst, uint32_t blockSize)

Processing function for the Q31 FIR decimator.
```

Return none

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The accumulator has a 2.62 format and maintains full precision of the intermediate multiplication results but provides only a single guard bit. Thus, if the accumulator result overflows it wraps around rather than clip. In order to avoid overflows completely the input signal must be scaled down by log2(numTaps) bits (where log2 is read as log to the base 2). After all multiply-accumulates are performed, the 2.62 accumulator is truncated to 1.32 format and then saturated to 1.31 format.

Remark Refer to riscv_fir_decimate_fast_q31() for a faster but less precise implementation of this function.

Parameters

- [in] S: points to an instance of the Q31 FIR decimator structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data

• [in] blockSize: number of samples to process

Finite Impulse Response (FIR) Filters

```
void riscv_fir_f16 (const riscv_fir_instance_f16 *S, const float16_t *pSrc, float16_t *pDst, uint32_t blockSize)
```

void **riscv_fir_f32** (**const** riscv_fir_instance_f32 *S, **const** float32_t *pSrc, float32_t *pDst, uint32_t blockSize)

void **riscv_fir_fast_q15** (**const** riscv_fir_instance_q15 *S, **const** q15_t *pSrc, q15_t *pDst, uint32_t blockSize)

IAR_ONLY_LOW_OPTIMIZATION_ENTER void riscv_fir_fast_q31(const riscv_fir_instance_q31 *

void riscv_fir_init_f16 (riscv_fir_instance_f16 *S, uint16_t numTaps, const float16_t *pCoeffs, float16 t *pState, uint32 t blockSize)

void **riscv_fir_init_f32** (riscv_fir_instance_f32 *S, uint16_t numTaps, **const** float32_t *pCoeffs, float32_t *pState, uint32_t blockSize)

riscv_status riscv_fir_init_q15 (riscv_fir_instance_q15 *S, uint16_t numTaps, const q15_t *pCoeffs, q15_t *pState, uint32_t blockSize)

void **riscv_fir_init_q31** (riscv_fir_instance_q31 *S, uint16_t numTaps, **const** q31_t *pCoeffs, q31_t *pState, uint32 t blockSize)

void **riscv_fir_init_q7** (riscv_fir_instance_q7 *S, uint16_t numTaps, **const** q7_t *pCoeffs, q7_t *pState, uint32 t blockSize)

void **riscv_fir_q15** (**const** riscv_fir_instance_q15 *S, **const** q15_t *pSrc, q15_t *pDst, uint32_t block-Size)

void riscv_fir_q31 (const riscv_fir_instance_q31 *S, const q31_t *pSrc, q31_t *pDst, uint32_t block-


void riscv_fir_q7 (const riscv_fir_instance_q7 *S, const q7_t *pSrc, q7_t *pDst, uint32_t blockSize) group FIR

This set of functions implements Finite Impulse Response (FIR) filters for Q7, Q15, Q31, and floating-point data types. Fast versions of Q15 and Q31 are also provided. The functions operate on blocks of input and output data and each call to the function processes blockSize samples through the filter. pSrc and pDst points to input and output arrays containing blockSize values.

The array length L must be a multiple of x. L = x * a:

- x is 4 for f32
- x is 4 for q31
- x is 4 for f16 (so managed like the f32 version and not like the q15 one)
- x is 8 for q15
- x is 16 for q7

Algorithm The FIR filter algorithm is based upon a sequence of multiply-accumulate (MAC) operations. Each filter coefficient b[n] is multiplied by a state variable which equals a previous input sample x[n].

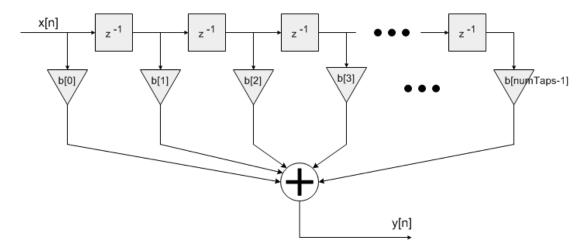

pCoeffs points to a coefficient array of size numTaps. Coefficients are stored in time reversed order.

pState points to a state array of size numTaps + blockSize - 1. Samples in the state buffer are stored in the following order.

Note that the length of the state buffer exceeds the length of the coefficient array by blockSize-1. The increased state buffer length allows circular addressing, which is traditionally used in the FIR filters, to be avoided and yields a significant speed improvement. The state variables are updated after each block of data is processed; the coefficients are untouched.

Instance Structure The coefficients and state variables for a filter are stored together in an instance data structure. A separate instance structure must be defined for each filter. Coefficient arrays may be shared among several instances while state variable arrays cannot be shared. There are separate instance structure declarations for each of the 4 supported data types.

Initialization Functions There is also an associated initialization function for each data type. The initialization function performs the following operations:

- Sets the values of the internal structure fields.
- Zeros out the values in the state buffer. To do this manually without calling the init function, assign the follow subfields of the instance structure: numTaps, pCoeffs, pState. Also set all of the values in pState to zero.

Use of the initialization function is optional. However, if the initialization function is used, then the instance structure cannot be placed into a const data section. To place an instance structure into a const data section, the instance structure must be manually initialized. Set the values in the state buffer to zeros before static initialization. The code below statically initializes each of the 4 different data type filter instance structures where numTaps is the number of filter coefficients in the filter; pState is the address of the state buffer; pCoeffs is the address of the coefficient buffer.

Initialization of Helium version For Helium version the array of coefficients must be padded with zero to contain a full number of lanes.

The additional coefficients (x * a - numTaps) must be set to 0. numTaps is still set to its right value in the init function. It means that the implementation may require to read more coefficients due to the vectorization and to avoid having to manage too many different cases in the code.

Helium state buffer The state buffer must contain some additional temporary data used during the computation but which is not the state of the FIR. The first A samples are temporary data. The remaining samples are the state of the FIR filter.

So the state buffer has size numTaps + A + blockSize - 1 :

- A is blockSize for f32
- A is 8*ceil(blockSize/8) for f16
- A is 8*ceil(blockSize/4) for q31
- A is 0 for other datatypes (q15 and q7)

Fixed-Point Behavior Care must be taken when using the fixed-point versions of the FIR filter functions. In particular, the overflow and saturation behavior of the accumulator used in each function must be considered. Refer to the function specific documentation below for usage guidelines.

Functions

```
void riscv_fir_f16 (const riscv_fir_instance_f16 *S, const float16_t *pSrc, float16_t *pDst, uint32_t blockSize)
```

Processing function for floating-point FIR filter.

Processing function for the floating-point FIR filter.

Return none

Parameters

- [in] S: points to an instance of the floating-point FIR filter structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

```
void riscv_fir_f32 (const riscv_fir_instance_f32 *S, const float32_t *pSrc, float32_t *pDst, uint32 t blockSize)
```

Processing function for floating-point FIR filter.

Processing function for the floating-point FIR filter.

Return none

Parameters

- [in] S: points to an instance of the floating-point FIR filter structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

```
void riscv_fir_fast_q15 (const riscv_fir_instance_q15 *S, const q15_t *pSrc, q15_t *pDst, uint32 t blockSize)
```

Processing function for the Q15 FIR filter (fast version).

Processing function for the fast Q15 FIR filter (fast version).

Return none

Scaling and Overflow Behavior This fast version uses a 32-bit accumulator with 2.30 format. The accumulator maintains full precision of the intermediate multiplication results but provides only a single guard bit. Thus, if the accumulator result overflows it wraps around and distorts the result. In order to avoid overflows completely the input signal must be scaled down by log2(numTaps) bits. The 2.30 accumulator is then truncated to 2.15 format and saturated to yield the 1.15 result.

Remark Refer to riscv_fir_q15() for a slower implementation of this function which uses 64-bit accumulation to avoid wrap around distortion. Both the slow and the fast versions use the same instance structure. Use function riscv fir init q15() to initialize the filter structure.

Parameters

- [in] S: points to an instance of the Q15 FIR filter structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

IAR_ONLY_LOW_OPTIMIZATION_ENTER void riscv_fir_fast_q31(const riscv_fir_instance_q31 Processing function for the Q31 FIR filter (fast version).

Processing function for the fast Q31 FIR filter (fast version).

Return none

Scaling and Overflow Behavior This function is optimized for speed at the expense of fixed-point precision and overflow protection. The result of each 1.31 x 1.31 multiplication is truncated to 2.30 format. These intermediate results are added to a 2.30 accumulator. Finally, the accumulator is saturated and converted to a 1.31 result. The fast version has the same overflow behavior as the standard version and provides less precision since it discards the low 32 bits of each multiplication result. In order to avoid overflows completely the input signal must be scaled down by log2(numTaps) bits.

Remark Refer to riscv_fir_q31() for a slower implementation of this function which uses a 64-bit accumulator to provide higher precision. Both the slow and the fast versions use the same instance structure. Use function riscv_fir_init_q31() to initialize the filter structure.

Parameters

- [in] S: points to an instance of the Q31 structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

 $\label{eq:const_fir_instance} \begin{tabular}{ll} void $\tt riscv_fir_init_f16$ (riscv_fir_instance_f16*S, uint16_t $\it numTaps$, $\tt const$ float16_t *\it pCoeffs$, \\ & float16_t *\it pState$, uint32_t $\it blockSize$) \\ \end{tabular}$

Initialization function for the floating-point FIR filter.

Return none

Details pCoeffs points to the array of filter coefficients stored in time reversed order:

pState points to the array of state variables. pState is of length numTaps+blockSize-1 samples (except for Helium - see below), where blockSize is the number of input samples processed by each call to riscv_fir_f16().

Initialization of Helium version For Helium version the array of coefficients must be a multiple of 4 (4a) even if less then 4a coefficients are defined in the FIR. The additional coefficients (4a - numTaps) must be set to 0. numTaps is still set to its right value in the init function. It means that the implementation

may require to read more coefficients due to the vectorization and to avoid having to manage too many different cases in the code.

Helium state buffer The state buffer must contain some additional temporary data used during the computation but which is not the state of the FIR. The first 8*ceil(blockSize/8) samples are temporary data. The remaining samples are the state of the FIR filter. So the state buffer has size numTaps + 8*ceil(blockSize/8) + blockSize - 1

Parameters

- [inout] S: points to an instance of the floating-point FIR filter structure
- [in] numTaps: number of filter coefficients in the filter
- [in] pCoeffs: points to the filter coefficients buffer
- [in] pState: points to the state buffer
- [in] blockSize: number of samples processed per call

```
void riscv_fir_init_f32 (riscv_fir_instance_f32 *S, uint16_t numTaps, const float32_t *pCoeffs, float32_t *pState, uint32_t blockSize)

Initialization function for the floating-point FIR filter.
```

Return none

Details pCoeffs points to the array of filter coefficients stored in time reversed order:

pState points to the array of state variables and some working memory for the Helium version. pState is of length numTaps+blockSize-1 samples (except for Helium - see below), where blockSize is the number of input samples processed by each call to riscv_fir_f32().

Initialization of Helium version For Helium version the array of coefficients must be a multiple of 4 (4a) even if less then 4a coefficients are defined in the FIR. The additional coefficients (4a - numTaps) must be set to 0. numTaps is still set to its right value in the init function. It means that the implementation may require to read more coefficients due to the vectorization and to avoid having to manage too many different cases in the code.

Helium state buffer The state buffer must contain some additional temporary data used during the computation but which is not the state of the FIR. The first blockSize samples are temporary data. The remaining samples are the state of the FIR filter. So the state buffer has size numTaps + 2 * blockSize - 1

Parameters

- [inout] S: points to an instance of the floating-point FIR filter structure
- [in] numTaps: number of filter coefficients in the filter
- [in] pCoeffs: points to the filter coefficients buffer
- [in] pState: points to the state buffer
- [in] blockSize: number of samples processed per call

```
riscv_status riscv_fir_init_q15 (riscv_fir_instance_q15 *S, uint16_t numTaps, const q15_t *pCoeffs, q15_t *pState, uint32_t blockSize)

Initialization function for the Q15 FIR filter.
```

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: numTaps is not greater than or equal to 4 and even

Details pCoeffs points to the array of filter coefficients stored in time reversed order: Note that numTaps must be even and greater than or equal to 4. To implement an odd length filter simply increase numTaps by 1 and set the last coefficient to zero. For example, to implement a filter with numTaps=3 and coefficients set numTaps=4 and use the coefficients: Similarly, to implement a two point filter set numTaps=4 and use the coefficients: pState points to the array of state variables. pState is of length numTaps+blockSize, when running on RISC-V Core with DSP enabled and is of length numTaps+blockSize-1, when running on RISC-V Core without DSP where blockSize is the number of input samples processed by each call to riscv_fir_q15().

Initialization of Helium version For Helium version the array of coefficients must be a multiple of 8 (8a) even if less then 8a coefficients are defined in the FIR. The additional coefficients (8a - numTaps) must be set to 0. numTaps is still set to its right value in the init function. It means that the implementation may require to read more coefficients due to the vectorization and to avoid having to manage too many different cases in the code.

Parameters

- [inout] S: points to an instance of the Q15 FIR filter structure.
- [in] numTaps: number of filter coefficients in the filter. Must be even and greater than or equal to 4.
- [in] pCoeffs: points to the filter coefficients buffer.
- [in] pState: points to the state buffer.
- [in] blockSize: number of samples processed per call.

void **riscv_fir_init_q31** (riscv_fir_instance_q31 *S, uint16_t numTaps, **const** q31_t *pCoeffs, q31_t *pState, uint32_t blockSize)

Initialization function for the Q31 FIR filter.

Return none

Details pCoeffs points to the array of filter coefficients stored in time reversed order: pState points to the array of state variables. pState is of length numTaps+blockSize-1 samples (except for Helium - see below), where blockSize is the number of input samples processed by each call to riscv_fir_q31().

Initialization of Helium version For Helium version the array of coefficients must be a multiple of 4 (4a) even if less then 4a coefficients are defined in the FIR. The additional coefficients (4a - numTaps) must be set to 0. numTaps is still set to its right value in the init function. It means that the implementation may require to read more coefficients due to the vectorization and to avoid having to manage too many different cases in the code.

Helium state buffer The state buffer must contain some additional temporary data used during the computation but which is not the state of the FIR. The first 2*4*ceil(blockSize/4) samples are temporary data. The remaining samples are the state of the FIR filter. So the state buffer has size numTaps + 8*ceil(blockSize/4) + blockSize - 1

Parameters

- [inout] S: points to an instance of the Q31 FIR filter structure
- [in] numTaps: number of filter coefficients in the filter
- [in] pCoeffs: points to the filter coefficients buffer
- [in] pState: points to the state buffer
- [in] blockSize: number of samples processed

void **riscv_fir_init_q7** (riscv_fir_instance_q7 *S, uint16_t numTaps, **const** q7_t *pCoeffs, q7_t *pState, uint32_t blockSize)
Initialization function for the O7 FIR filter.

Return none

Details pCoeffs points to the array of filter coefficients stored in time reversed order:

pState points to the array of state variables. pState is of length numTaps+blockSize-1 samples, where blockSize is the number of input samples processed by each call to riscv_fir_q7().

Initialization of Helium version For Helium version the array of coefficients must be a multiple of 16 (16a) even if less then 16a coefficients are defined in the FIR. The additional coefficients (16a - numTaps) must be set to 0. numTaps is still set to its right value in the init function. It means that the implementation may require to read more coefficients due to the vectorization and to avoid having to manage too many different cases in the code.

Parameters

- [inout] S: points to an instance of the Q7 FIR filter structure
- [in] numTaps: number of filter coefficients in the filter
- [in] pCoeffs: points to the filter coefficients buffer
- [in] pState: points to the state buffer
- [in] blockSize: number of samples processed

void **riscv_fir_q15** (**const** riscv_fir_instance_q15 *S, **const** q15_t *pSrc, q15_t *pDst, uint32_t blockSize)

Processing function for the Q15 FIR filter.

Return none

Scaling and Overflow Behavior The function is implemented using a 64-bit internal accumulator. Both coefficients and state variables are represented in 1.15 format and multiplications yield a 2.30 result. The 2.30 intermediate results are accumulated in a 64-bit accumulator in 34.30 format. There is no risk of internal overflow with this approach and the full precision of intermediate multiplications is preserved. After all additions have been performed, the accumulator is truncated to 34.15 format by discarding low 15 bits. Lastly, the accumulator is saturated to yield a result in 1.15 format.

Remark Refer to riscv_fir_fast_q15() for a faster but less precise implementation of this function.

Parameters

- [in] S: points to an instance of the Q15 FIR filter structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

```
void riscv_fir_q31 (const riscv_fir_instance_q31 *S, const q31_t *pSrc, q31_t *pDst, uint32_t blockSize)

Processing function for Q31 FIR filter.
```

Processing function for the Q31 FIR filter.

Return none

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The accumulator has a 2.62 format and maintains full precision of the intermediate multiplication results but provides only a single guard bit. Thus, if the accumulator result overflows it wraps around rather than clip. In order to avoid overflows completely the input signal must be scaled down by log2(numTaps) bits. After all multiply-accumulates are performed, the 2.62 accumulator is right shifted by 31 bits and saturated to 1.31 format to yield the final result.

Remark Refer to riscv_fir_fast_q31() for a faster but less precise implementation of this filter.

Parameters

- [in] S: points to an instance of the Q31 FIR filter structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

```
void riscv_fir_q7 (const riscv_fir_instance_q7 *S, const q7_t *pSrc, q7_t *pDst, uint32_t block-Size)

Processing function for Q7 FIR filter.
```

Processing function for the Q7 FIR filter.

Return none

Scaling and Overflow Behavior The function is implemented using a 32-bit internal accumulator. Both coefficients and state variables are represented in 1.7 format and multiplications yield a 2.14 result. The 2.14 intermediate results are accumulated in a 32-bit accumulator in 18.14 format. There is no risk of internal overflow with this approach and the full precision of intermediate multiplications is preserved. The accumulator is converted to 18.7 format by discarding the low 7 bits. Finally, the result is truncated to 1.7 format.

Parameters

- [in] S: points to an instance of the Q7 FIR filter structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

Finite Impulse Response (FIR) Lattice Filters

```
void riscv_fir_lattice_f32 (const riscv_fir_lattice_instance_f32 *S, const float32_t *pSrc, float32_t *pDst, uint32_t blockSize)

void riscv_fir_lattice_init_f32 (riscv_fir_lattice_instance_f32 *S, uint16_t numStages, const float32_t *pCoeffs, float32_t *pState)

void riscv_fir_lattice_init_q15 (riscv_fir_lattice_instance_q15 *S, uint16_t numStages, const q15_t *pCoeffs, q15_t *pState)

void riscv_fir_lattice_init_q31 (riscv_fir_lattice_instance_q31 *S, uint16_t numStages, const q31_t *pCoeffs, q31_t *pState)


void riscv_fir_lattice_q15 (const riscv_fir_lattice_instance_q15 *S, const q15_t *pSrc, q15_t *pDst, uint32_t blockSize)

void riscv_fir_lattice_q31 (const riscv_fir_lattice_instance_q31 *S, const q31_t *pSrc, q31_t *pDst, uint32_t blockSize)
```

group FIR Lattice

This set of functions implements Finite Impulse Response (FIR) lattice filters for Q15, Q31 and floating-point data types. Lattice filters are used in a variety of adaptive filter applications. The filter structure is feedforward and the net impulse response is finite length. The functions operate on blocks of input and output data and each call to the function processes blockSize samples through the filter. pSrc and pDst point to input and output arrays containing blockSize values.

Algorithm

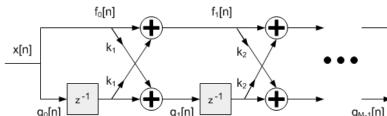

The following difference equation is implemented:

pCoeffs points to tha array of reflection coefficients of size numStages. Reflection Coefficients are stored in the following order.

where M is number of stages

pState points to a state array of size numStages. The state variables (g values) hold previous inputs and are stored in the following order. The state variables are updated after each block of data is processed; the coefficients are untouched.

Instance Structure The coefficients and state variables for a filter are stored together in an instance data structure. A separate instance structure must be defined for each filter. Coefficient arrays may be shared among several instances while state variable arrays cannot be shared. There are separate instance structure declarations for each of the 3 supported data types.

Initialization Functions There is also an associated initialization function for each data type. The initialization function performs the following operations:

- Sets the values of the internal structure fields.
- Zeros out the values in the state buffer. To do this manually without calling the init function, assign the follow subfields of the instance structure: numStages, pCoeffs, pState. Also set all of the values in pState to zero.

Use of the initialization function is optional. However, if the initialization function is used, then the instance structure cannot be placed into a const data section. To place an instance structure into a const data section, the instance structure must be manually initialized. Set the values in the state buffer to zeros and then manually initialize the instance structure as follows:

where numStages is the number of stages in the filter; pState is the address of the state buffer; pCoeffs is the address of the coefficient buffer.

Fixed-Point Behavior Care must be taken when using the fixed-point versions of the FIR Lattice filter functions. In particular, the overflow and saturation behavior of the accumulator used in each function must be considered. Refer to the function specific documentation below for usage guidelines.

Functions

void **riscv_fir_lattice_f32** (**const** riscv_fir_lattice_instance_f32 *S, **const** float32_t *pSrc, float32_t *pDst, uint32_t blockSize)

Processing function for the floating-point FIR lattice filter.

Return none

Parameters

- [in] S: points to an instance of the floating-point FIR lattice structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

```
void riscv_fir_lattice_init_f32 (riscv_fir_lattice_instance_f32 *S, uint16_t numStages, const float32_t *pCoeffs, float32_t *pState)

Initialization function for the floating-point FIR lattice filter.
```

Return none

Parameters

- [in] S: points to an instance of the floating-point FIR lattice structure
- [in] numStages: number of filter stages
- [in] pCoeffs: points to the coefficient buffer. The array is of length numStages
- [in] pState: points to the state buffer. The array is of length numStages

```
void riscv_fir_lattice_init_q15 (riscv_fir_lattice_instance_q15 *S, uint16_t numStages, const q15_t *pCoeffs, q15_t *pState)
Initialization function for the Q15 FIR lattice filter.
```

Return none

Parameters

- [in] S: points to an instance of the Q15 FIR lattice structure
- [in] numStages: number of filter stages
- [in] pCoeffs: points to the coefficient buffer. The array is of length numStages
- [in] pState: points to the state buffer. The array is of length numStages

```
void riscv_fir_lattice_init_q31 (riscv_fir_lattice_instance_q31 *S, uint16_t numStages, const q31_t *pCoeffs, q31_t *pState)
Initialization function for the Q31 FIR lattice filter.
```

Return none

Parameters

- [in] S: points to an instance of the Q31 FIR lattice structure
- [in] numStages: number of filter stages
- [in] pCoeffs: points to the coefficient buffer. The array is of length numStages
- [in] pState: points to the state buffer. The array is of length numStages

void riscv_fir_lattice_q15 (const riscv_fir_lattice_instance_q15 *S, const q15_t *pSrc, q15_t *pDst, uint32_t blockSize)

Processing function for Q15 FIR lattice filter.

Processing function for the Q15 FIR lattice filter.

Return none

Parameters

- [in] S: points to an instance of the Q15 FIR lattice structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

```
void riscv_fir_lattice_q31 (const riscv_fir_lattice_instance_q31 *S, const q31_t *pSrc, q31_t *pDst, uint32_t blockSize)
```

Processing function for the Q31 FIR lattice filter.

Return none

Scaling and Overflow Behavior In order to avoid overflows the input signal must be scaled down by 2*log2(numStages) bits.

Parameters

- [in] S: points to an instance of the Q31 FIR lattice structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

Finite Impulse Response (FIR) Sparse Filters

```
void riscv_fir_sparse_f32 (riscv_fir_sparse_instance_f32 *S, const float32_t *pSrc, float32_t *pDst, float32_t *pScratchIn, uint32_t blockSize)
```

```
void riscv_fir_sparse_init_f32 (riscv_fir_sparse_instance_f32 *S, uint16_t numTaps, const float32_t *pCoeffs, float32_t *pState, int32_t *pTapDelay, uint16_t maxDelay, uint32_t blockSize)
```

```
void riscv_fir_sparse_init_q15 (riscv_fir_sparse_instance_q15 *S, uint16_t numTaps, const q15_t *pCoeffs, q15_t *pState, int32_t *pTapDelay, uint16_t maxDelay, uint32_t blockSize)
```

```
void riscv_fir_sparse_init_q31 (riscv_fir_sparse_instance_q31 *S, uint16_t numTaps, const q31_t *pCoeffs, q31_t *pState, int32_t *pTapDelay, uint16_t maxDelay, uint32_t blockSize)
```

```
void riscv_fir_sparse_init_q7 (riscv_fir_sparse_instance_q7 *S, uint16_t numTaps, const q7_t *pCoeffs, q7_t *pState, int32_t *pTapDelay, uint16_t maxDelay, uint32 t blockSize)
```

```
void riscv_fir_sparse_q15 (riscv_fir_sparse_instance_q15 *S, const q15_t *pSrc, q15_t *pDst, q15_t *pScratchIn, q31_t *pScratchOut, uint32_t blockSize)
```

void **riscv_fir_sparse_q31** (riscv_fir_sparse_instance_q31 *S, **const** q31_t *pSrc, q31_t *pDst, q31_t *pScratchIn, uint32_t blockSize)


void riscv_fir_sparse_q7 (riscv_fir_sparse_instance_q7 *S, const q7_t *pSrc, q7_t *pDst, q7_t *pScratchIn, q31_t *pScratchOut, uint32_t blockSize)

group FIR_Sparse

This group of functions implements sparse FIR filters. Sparse FIR filters are equivalent to standard FIR filters except that most of the coefficients are equal to zero. Sparse filters are used for simulating reflections in communications and audio applications.

There are separate functions for Q7, Q15, Q31, and floating-point data types. The functions operate on blocks of input and output data and each call to the function processes blockSize samples through the filter. pSrc and pDst points to input and output arrays respectively containing blockSize values.

Algorithm The sparse filter instant structure contains an array of tap indices pTapDelay which specifies the locations of the non-zero coefficients. This is in addition to the coefficient array b. The implementation essentially skips the multiplications by zero and leads to an efficient realization.

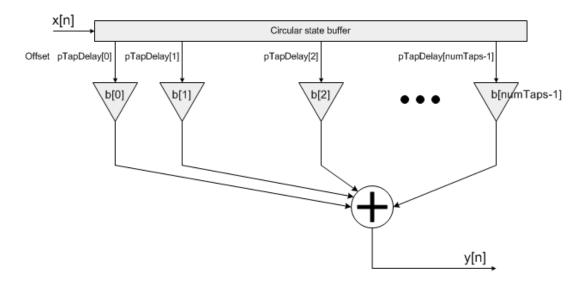

pCoeffs points to a coefficient array of size numTaps; pTapDelay points to an array of nonzero indices and is also of size numTaps; pState points to a state array of size maxDelay + blockSize, where maxDelay is the largest offset value that is ever used in the pTapDelay array. Some of the processing functions also require temporary working buffers.

Instance Structure The coefficients and state variables for a filter are stored together in an instance data structure. A separate instance structure must be defined for each filter. Coefficient and offset arrays may be shared among several instances while state variable arrays cannot be shared. There are separate instance structure declarations for each of the 4 supported data types.

Initialization Functions There is also an associated initialization function for each data type. The initialization function performs the following operations:

- Sets the values of the internal structure fields.
- Zeros out the values in the state buffer. To do this manually without calling the init function, assign the follow subfields of the instance structure: numTaps, pCoeffs, pTapDelay, maxDelay, stateIndex, pState. Also set all of the values in pState to zero.

Use of the initialization function is optional. However, if the initialization function is used, then the instance structure cannot be placed into a const data section. To place an instance structure into a const data section, the instance structure must be manually initialized. Set the values in the state buffer to zeros before static initialization. The code below statically initializes each of the 4 different data type filter instance structures

Fixed-Point Behavior Care must be taken when using the fixed-point versions of the sparse FIR filter functions. In particular, the overflow and saturation behavior of the accumulator used in each function must be considered. Refer to the function specific documentation below for usage guidelines.

Functions

```
void riscv_fir_sparse_f32 (riscv_fir_sparse_instance_f32 *S, const float32_t *pSrc, float32_t *pDst, float32_t *pScratchIn, uint32_t blockSize)

Processing function for the floating-point sparse FIR filter.
```

Return none

Parameters

- [in] S: points to an instance of the floating-point sparse FIR structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] pScratchIn: points to a temporary buffer of size blockSize
- [in] blockSize: number of input samples to process

```
void riscv_fir_sparse_init_f32 (riscv_fir_sparse_instance_f32 *S, uint16_t numTaps, const float32_t *pCoeffs, float32_t *pState, int32_t *pTapDelay, uint16_t maxDelay, uint32_t blockSize)
```

Initialization function for the floating-point sparse FIR filter.

Return none

Details pCoeffs holds the filter coefficients and has length numTaps. pState holds the filter's state variables and must be of length maxDelay + blockSize, where maxDelay is the maximum number of delay line values. blockSize is the number of samples processed by the riscv_fir_sparse_f32() function.

Parameters

- [inout] S: points to an instance of the floating-point sparse FIR structure
- [in] numTaps: number of nonzero coefficients in the filter
- [in] pCoeffs: points to the array of filter coefficients
- [in] pState: points to the state buffer
- [in] pTapDelay: points to the array of offset times
- [in] maxDelay: maximum offset time supported
- [in] blockSize: number of samples that will be processed per block

```
void riscv_fir_sparse_init_q15 (riscv_fir_sparse_instance_q15 *S, uint16_t numTaps, const q15_t *pCoeffs, q15_t *pState, int32_t *pTapDelay, uint16_t maxDelay, uint32_t blockSize)
```

Initialization function for the Q15 sparse FIR filter.

Return none

Details pCoeffs holds the filter coefficients and has length numTaps. pState holds the filter's state variables and must be of length maxDelay + blockSize, where maxDelay is the maximum number of delay line values. blockSize is the number of words processed by riscv_fir_sparse_q15() function.

Parameters

- [inout] S: points to an instance of the Q15 sparse FIR structure
- [in] numTaps: number of nonzero coefficients in the filter
- [in] pCoeffs: points to the array of filter coefficients
- [in] pState: points to the state buffer
- [in] pTapDelay: points to the array of offset times
- [in] maxDelay: maximum offset time supported
- [in] blockSize: number of samples that will be processed per block

```
void riscv_fir_sparse_init_q31 (riscv_fir_sparse_instance_q31 *S, uint16_t numTaps, const q31_t *pCoeffs, q31_t *pState, int32_t *pTapDelay, uint16_t maxDelay, uint32_t blockSize)
```

Initialization function for the Q31 sparse FIR filter.

Return none

Details pCoeffs holds the filter coefficients and has length numTaps. pState holds the filter's state variables and must be of length maxDelay + blockSize, where maxDelay is the maximum number of delay line values. blockSize is the number of words processed by riscv_fir_sparse_q31() function.

Parameters

- [inout] S: points to an instance of the Q31 sparse FIR structure
- [in] numTaps: number of nonzero coefficients in the filter
- [in] pCoeffs: points to the array of filter coefficients
- [in] pState: points to the state buffer
- [in] pTapDelay: points to the array of offset times
- [in] maxDelay: maximum offset time supported
- [in] blockSize: number of samples that will be processed per block

```
void riscv_fir_sparse_init_q7 (riscv_fir_sparse_instance_q7 *S, uint16_t numTaps, const q7_t *pCoeffs, q7_t *pState, int32_t *pTapDelay, uint16_t maxDelay, uint32_t blockSize)
```

Initialization function for the Q7 sparse FIR filter.

Return none

Details pCoeffs holds the filter coefficients and has length numTaps. pState holds the filter's state variables and must be of length maxDelay + blockSize, where maxDelay is the maximum number of delay line values. blockSize is the number of samples processed by the riscv_fir_sparse_q7() function.

Parameters

• [inout] S: points to an instance of the Q7 sparse FIR structure

- [in] numTaps: number of nonzero coefficients in the filter
- [in] pCoeffs: points to the array of filter coefficients
- [in] pState: points to the state buffer
- [in] pTapDelay: points to the array of offset times
- [in] maxDelay: maximum offset time supported
- [in] blockSize: number of samples that will be processed per block

```
void riscv_fir_sparse_q15 (riscv_fir_sparse_instance_q15 *S, const q15_t *pSrc, q15_t *pDst, q15_t *pScratchIn, q31_t *pScratchOut, uint32_t blockSize)

Processing function for the Q15 sparse FIR filter.
```

Return none

Scaling and Overflow Behavior The function is implemented using an internal 32-bit accumulator. The 1.15 x 1.15 multiplications yield a 2.30 result and these are added to a 2.30 accumulator. Thus the full precision of the multiplications is maintained but there is only a single guard bit in the accumulator. If the accumulator result overflows it will wrap around rather than saturate. After all multiply-accumulates are performed, the 2.30 accumulator is truncated to 2.15 format and then saturated to 1.15 format. In order to avoid overflows the input signal or coefficients must be scaled down by log2(numTaps) bits.

Parameters

- [in] S: points to an instance of the Q15 sparse FIR structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] pScratchIn: points to a temporary buffer of size blockSize
- [in] pScratchOut: points to a temporary buffer of size blockSize
- [in] blockSize: number of input samples to process per call

```
void riscv_fir_sparse_q31 (riscv_fir_sparse_instance_q31 *S, const q31_t *pSrc, q31_t *pDst, q31_t *pScratchIn, uint32_t blockSize)

Processing function for the Q31 sparse FIR filter.
```

Return none

Scaling and Overflow Behavior The function is implemented using an internal 32-bit accumulator. The 1.31 x 1.31 multiplications are truncated to 2.30 format. This leads to loss of precision on the intermediate multiplications and provides only a single guard bit. If the accumulator result overflows, it wraps around rather than saturate. In order to avoid overflows the input signal or coefficients must be scaled down by log2(numTaps) bits.

Parameters

- [in] S: points to an instance of the Q31 sparse FIR structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] pScratchIn: points to a temporary buffer of size blockSize
- [in] blockSize: number of input samples to process

void **riscv_fir_sparse_q7** (riscv_fir_sparse_instance_q7 *S, **const** q7_t *pSrc, q7_t *pDst, q7_t *pScratchIn, q31_t *pScratchOut, uint32_t blockSize)

Processing function for the Q7 sparse FIR filter.

Return none

Scaling and Overflow Behavior The function is implemented using a 32-bit internal accumulator. Both coefficients and state variables are represented in 1.7 format and multiplications yield a 2.14 result. The 2.14 intermediate results are accumulated in a 32-bit accumulator in 18.14 format. There is no risk of internal overflow with this approach and the full precision of intermediate multiplications is preserved. The accumulator is then converted to 18.7 format by discarding the low 7 bits. Finally, the result is truncated to 1.7 format.

Parameters

- [in] S: points to an instance of the Q7 sparse FIR structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] pScratchIn: points to a temporary buffer of size blockSize
- [in] pScratchOut: points to a temporary buffer of size blockSize
- [in] blockSize: number of input samples to process

Infinite Impulse Response (IIR) Lattice Filters

```
void riscv_iir_lattice_f32 (const riscv_iir_lattice_instance_f32 *S, const float32_t *pSrc, float32_t *pDst, uint32_t blockSize)

void riscv_iir_lattice_init_f32 (riscv_iir_lattice_instance_f32 *S, uint16_t numStages, float32_t *pkCoeffs, float32_t *pvCoeffs, float32_t *pState, uint32_t block-Size)

void riscv_iir_lattice_init_q15 (riscv_iir_lattice_instance_q15 *S, uint16_t numStages, q15_t *pkCoeffs, q15_t *pvCoeffs, q15_t *pstate, uint32_t blockSize)

void riscv_iir_lattice_init_q31 (riscv_iir_lattice_instance_q31 *S, uint16_t numStages, q31_t *pkCoeffs, q31_t *pvCoeffs, q31_t *pstate, uint32_t blockSize)


void riscv_iir_lattice_q15 (const riscv_iir_lattice_instance_q15 *S, const q15_t *pSrc, q15_t *pDst, uint32_t blockSize)

void riscv_iir_lattice_q31 (const riscv_iir_lattice_instance_q31 *S, const q31_t *pSrc, q31_t *pDst, uint32_t blockSize)
```

*pDst, uint32 t blockSize)

group IIR_Lattice

This set of functions implements lattice filters for Q15, Q31 and floating-point data types. Lattice filters are used in a variety of adaptive filter applications. The filter structure has feedforward and feedback components and the net impulse response is infinite length. The functions operate on blocks of input and output data and each call to the function processes blockSize samples through the filter. pSrc and pDst point to input and output arrays containing blockSize values.

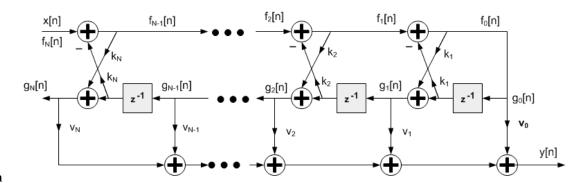

Algorithm

pkCoeffs points to array of reflection coefficients of size numStages. Reflection Coefficients are stored in time-reversed order.

pvCoeffs points to the array of ladder coefficients of size (numStages+1). Ladder coefficients are stored in time-reversed order.

pState points to a state array of size numStages + blockSize. The state variables shown in the figure above (the g values) are stored in the pState array. The state variables are updated after each block of data is processed; the coefficients are untouched.

Instance Structure The coefficients and state variables for a filter are stored together in an instance data structure. A separate instance structure must be defined for each filter. Coefficient arrays may be shared among several instances while state variable arrays cannot be shared. There are separate instance structure declarations for each of the 3 supported data types.

Initialization Functions There is also an associated initialization function for each data type. The initialization function performs the following operations:

- Sets the values of the internal structure fields.
- Zeros out the values in the state buffer. To do this manually without calling the init function, assign the follow subfields of the instance structure: numStages, pkCoeffs, pvCoeffs, pState. Also set all of the values in pState to zero.

Use of the initialization function is optional. However, if the initialization function is used, then the instance structure cannot be placed into a const data section. To place an instance structure into a const data section, the instance structure must be manually initialized. Set the values in the state buffer to zeros and then manually initialize the instance structure as follows:

where numStages is the number of stages in the filter; pState points to the state buffer array; pkCoeffs points to array of the reflection coefficients; pvCoeffs points to the array of ladder coefficients.

Fixed-Point Behavior Care must be taken when using the fixed-point versions of the IIR lattice filter functions. In particular, the overflow and saturation behavior of the accumulator used in each function must be considered. Refer to the function specific documentation below for usage guidelines.

Functions

void riscv_iir_lattice_f32 (const riscv_iir_lattice_instance_f32 *S, const float32_t *pSrc, float32_t *pDst, uint32_t blockSize)

Processing function for the floating-point IIR lattice filter.

Return none

Parameters

- [in] S: points to an instance of the floating-point IIR lattice structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

```
void riscv_iir_lattice_init_f32 (riscv_iir_lattice_instance_f32 *S, uint16_t numStages, float32_t *pkCoeffs, float32_t *pvCoeffs, float32_t *pvCoeffs, float32_t *pVCoeffs, float32_t *pState, uint32 t blockSize)
```

Initialization function for the floating-point IIR lattice filter.

Return none

Parameters

- [in] S: points to an instance of the floating-point IIR lattice structure
- [in] numStages: number of stages in the filter
- [in] pkCoeffs: points to reflection coefficient buffer. The array is of length numStages
- [in] pvCoeffs: points to ladder coefficient buffer. The array is of length numStages+1
- [in] pState: points to state buffer. The array is of length numStages+blockSize
- [in] blockSize: number of samples to process

```
void riscv_iir_lattice_init_q15 (riscv_iir_lattice_instance_q15 *S, uint16_t numStages, q15_t *pkCoeffs, q15_t *pvCoeffs, q15_t *pState, uint32_t blockSize)
```

Initialization function for the Q15 IIR lattice filter.

Return none

Parameters

- [in] S: points to an instance of the Q15 IIR lattice structure
- [in] numStages: number of stages in the filter
- [in] pkCoeffs: points to reflection coefficient buffer. The array is of length numStages
- [in] pvCoeffs: points to ladder coefficient buffer. The array is of length numStages+1
- [in] pState: points to state buffer. The array is of length numStages+blockSize
- [in] blockSize: number of samples to process

```
void riscv_iir_lattice_init_q31 (riscv_iir_lattice_instance_q31 *S, uint16_t numStages, q31_t *pkCoeffs, q31_t *pvCoeffs, q31_t *pState, uint32_t blockSize)
```

Initialization function for the Q31 IIR lattice filter.

Return none

Parameters

- [in] S: points to an instance of the Q31 IIR lattice structure
- [in] numStages: number of stages in the filter
- [in] pkCoeffs: points to reflection coefficient buffer. The array is of length numStages

- [in] pvCoeffs: points to ladder coefficient buffer. The array is of length numStages+1
- [in] pState: points to state buffer. The array is of length numStages+blockSize
- [in] blockSize: number of samples to process

```
void riscv_iir_lattice_q15 (const riscv_iir_lattice_instance_q15 *S, const q15_t *pSrc, q15_t *pDst, uint32_t blockSize)

Processing function for the Q15 IIR lattice filter.
```

Return none

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. Both coefficients and state variables are represented in 1.15 format and multiplications yield a 2.30 result. The 2.30 intermediate results are accumulated in a 64-bit accumulator in 34.30 format. There is no risk of internal overflow with this approach and the full precision of intermediate multiplications is preserved. After all additions have been performed, the accumulator is truncated to 34.15 format by discarding low 15 bits. Lastly, the accumulator is saturated to yield a result in 1.15 format.

Parameters

- [in] S: points to an instance of the Q15 IIR lattice structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

```
void riscv_iir_lattice_q31 (const_riscv_iir_lattice_instance_q31 *S, const_q31_t *pSrc, q31_t *pDst, uint32_t blockSize)

Processing function for the Q31 IIR lattice filter.
```

Return none

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The accumulator has a 2.62 format and maintains full precision of the intermediate multiplication results but provides only a single guard bit. Thus, if the accumulator result overflows it wraps around rather than clip. In order to avoid overflows completely the input signal must be scaled down by 2*log2(numStages) bits. After all multiply-accumulates are performed, the 2.62 accumulator is saturated to 1.32 format and then truncated to 1.31 format.

Parameters

- [in] S: points to an instance of the Q31 IIR lattice structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

Levinson Durbin Algorithm

```
void riscv_levinson_durbin_f16 (const float16_t *phi, float16_t *a, float16_t *err, int nbCoefs) void riscv_levinson_durbin_f32 (const float32_t *phi, float32_t *a, float32_t *err, int nbCoefs) void riscv_levinson_durbin_q31 (const q31_t *phi, q31_t *a, q31_t *err, int nbCoefs) group LD
```

Functions

```
void riscv_levinson_durbin_f16 (const float16_t *phi, float16_t *a, float16_t *err, int nbCoefs)

Levinson Durbin.
```

Return none

Parameters

- [in] phi: autocovariance vector starting with lag 0 (length is nbCoefs + 1)
- [out] a: autoregressive coefficients
- [out] err: prediction error (variance)
- [in] nbCoefs: number of autoregressive coefficients

```
void riscv_levinson_durbin_f32 (const float32_t *phi, float32_t *a, float32_t *err, int nbCoefs)
```

Levinson Durbin.

Return none

Parameters

- [in] phi: autocovariance vector starting with lag 0 (length is nbCoefs + 1)
- [out] a: autoregressive coefficients
- [out] err: prediction error (variance)
- [in] nbCoefs: number of autoregressive coefficients

void riscv_levinson_durbin_q31 (const q31_t *phi, q31_t *a, q31_t *err, int nbCoefs)
Levinson Durbin.

Return none

Parameters

- [in] phi: autocovariance vector starting with lag 0 (length is nbCoefs + 1)
- [out] a: autoregressive coefficients
- [out] err: prediction error (variance)
- [in] nbCoefs: number of autoregressive coefficients

Least Mean Square (LMS) Filters

```
void riscv_lms_f32 (const riscv_lms_instance_f32 *S, const float32_t *pSrc, float32_t *pRef, float32_t *pOut, float32_t *pErr, uint32_t blockSize)

void riscv_lms_init_f32 (riscv_lms_instance_f32 *S, uint16_t numTaps, float32_t *pCoeffs, float32_t *pState, float32_t mu, uint32_t blockSize)

void riscv_lms_init_q15 (riscv_lms_instance_q15 *S, uint16_t numTaps, q15_t *pCoeffs, q15_t *pState, q15_t mu, uint32_t blockSize, uint32_t postShift)

void riscv_lms_init_q31 (riscv_lms_instance_q31 *S, uint16_t numTaps, q31_t *pCoeffs, q31_t *pState,
```

3.3. NMSIS DSP API 535

q31_t mu, uint32_t blockSize, uint32_t postShift)


void riscv_lms_q15 (const riscv_lms_instance_q15 *S, const q15_t *pSrc, q15_t *pRef, q15_t *pOut, q15_t *pErr, uint32_t blockSize)

void riscv_lms_q31 (const riscv_lms_instance_q31 *S, const q31_t *pSrc, q31_t *pRef, q31_t *pOut, q31_t *pErr, uint32_t blockSize)

group LMS

LMS filters are a class of adaptive filters that are able to "learn" an unknown transfer functions. LMS filters use a gradient descent method in which the filter coefficients are updated based on the instantaneous error signal. Adaptive filters are often used in communication systems, equalizers, and noise removal. The NMSIS DSP Library contains LMS filter functions that operate on Q15, Q31, and floating-point data types. The library also contains normalized LMS filters in which the filter coefficient adaptation is indepedent of the level of the input signal.

An LMS filter consists of two components as shown below. The first component is a standard transversal or FIR filter. The second component is a coefficient update mechanism. The LMS filter has two input signals. The "input" feeds the FIR filter while the "reference input" corresponds to the desired output of the FIR filter. That is, the FIR filter coefficients are updated so that the output of the FIR filter matches the reference input. The filter coefficient update mechanism is based on the difference between the FIR filter output and the reference input. This "error signal" tends towards zero as the filter adapts. The LMS processing functions accept the input and reference input signals and generate the filter output and error signal. The functions operate on blocks of data and each call to the function processes blockSize samples through the filter. pSrc points to input signal, pRef points to reference signal, pOut points to output signal and pErr points to error signal. All arrays contain blockSize

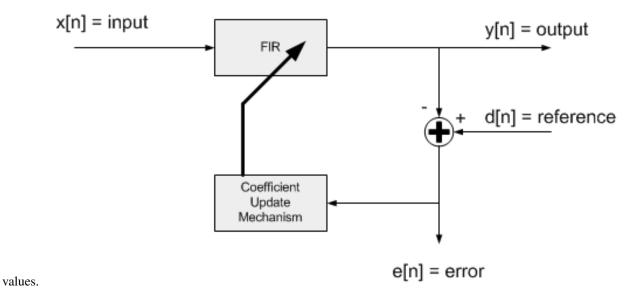

The functions operate on a block-by-block basis. Internally, the filter coefficients b[n] are updated on a sample-by-sample basis. The convergence of the LMS filter is slower compared to the normalized LMS algorithm.

Algorithm The output signal y[n] is computed by a standard FIR filter:

The error signal equals the difference between the reference signal d[n] and the filter output:

After each sample of the error signal is computed, the filter coefficients b[k] are updated on a sample-by-sample basis: where mu is the step size and controls the rate of coefficient convergence.

In the APIs, pCoeffs points to a coefficient array of size numTaps. Coefficients are stored in time reversed order.

pState points to a state array of size numTaps + blockSize - 1. Samples in the state buffer are stored in the order:

Note that the length of the state buffer exceeds the length of the coefficient array by blockSize-1 samples. The increased state buffer length allows circular addressing, which is traditionally used in FIR filters, to be avoided and yields a significant speed improvement. The state variables are updated after each block of data is processed.

Instance Structure The coefficients and state variables for a filter are stored together in an instance data structure. A separate instance structure must be defined for each filter and coefficient and state arrays cannot be shared among instances. There are separate instance structure declarations for each of the 3 supported data types.

Initialization Functions There is also an associated initialization function for each data type. The initialization function performs the following operations:

- Sets the values of the internal structure fields.
- Zeros out the values in the state buffer. To do this manually without calling the init function, assign the follow subfields of the instance structure: numTaps, pCoeffs, mu, postShift (not for f32), pState. Also set all of the values in pState to zero.

Use of the initialization function is optional. However, if the initialization function is used, then the instance structure cannot be placed into a const data section. To place an instance structure into a const data section, the instance structure must be manually initialized. Set the values in the state buffer to zeros before static initialization. The code below statically initializes each of the 3 different data type filter instance structures where numTaps is the number of filter coefficients in the filter; pState is the address of the state buffer; pCoeffs is the address of the coefficient buffer; mu is the step size parameter; and postShift is the shift applied to coefficients.

Fixed-Point Behavior Care must be taken when using the Q15 and Q31 versions of the LMS filter. The following issues must be considered:

- · Scaling of coefficients
- · Overflow and saturation

Scaling of Coefficients Filter coefficients are represented as fractional values and coefficients are restricted to lie in the range [-1 +1). The fixed-point functions have an additional scaling parameter postShift. At the output of the filter's accumulator is a shift register which shifts the result by postShift bits. This essentially scales the filter coefficients by 2^postShift and allows the filter coefficients to exceed the range [+1 -1). The value of postShift is set by the user based on the expected gain through the system being modeled.

Overflow and Saturation Overflow and saturation behavior of the fixed-point Q15 and Q31 versions are described separately as part of the function specific documentation below.

Functions

```
void riscv_lms_f32 (const riscv_lms_instance_f32 *S, const float32_t *pSrc, float32_t *pRef, float32_t *pOut, float32_t *pErr, uint32_t blockSize)

Processing function for floating-point LMS filter.
```

Return none

Parameters

• [in] S: points to an instance of the floating-point LMS filter structure

- [in] pSrc: points to the block of input data
- [in] pRef: points to the block of reference data
- [out] pout: points to the block of output data
- [out] pErr: points to the block of error data
- [in] blockSize: number of samples to process

```
void riscv_lms_init_f32 (riscv_lms_instance_f32 *S, uint16_t numTaps, float32_t *pCoeffs, float32_t *pState, float32_t mu, uint32_t blockSize)

Initialization function for floating-point LMS filter.
```

Return none

Details pCoeffs points to the array of filter coefficients stored in time reversed order: The initial filter coefficients serve as a starting point for the adaptive filter. pState points to an array of length numTaps+blockSize-1 samples, where blockSize is the number of input samples processed by each call to riscv_lms_f32().

Parameters

- [in] S: points to an instance of the floating-point LMS filter structure
- [in] numTaps: number of filter coefficients
- [in] pCoeffs: points to coefficient buffer
- [in] pState: points to state buffer
- [in] mu: step size that controls filter coefficient updates
- [in] blockSize: number of samples to process

```
void riscv_lms_init_q15 (riscv_lms_instance_q15 *S, uint16_t numTaps, q15_t *pCoeffs, q15_t *pState, q15_t mu, uint32_t blockSize, uint32_t postShift)

Initialization function for the Q15 LMS filter.
```

Return none

Details pCoeffs points to the array of filter coefficients stored in time reversed order: The initial filter coefficients serve as a starting point for the adaptive filter. pState points to the array of state variables and size of array is numTaps+blockSize-1 samples, where blockSize is the number of input samples processed by each call to riscv_lms_q15().

- [in] S: points to an instance of the Q15 LMS filter structure.
- [in] numTaps: number of filter coefficients.
- [in] pCoeffs: points to coefficient buffer.
- [in] pState: points to state buffer.
- [in] mu: step size that controls filter coefficient updates.
- [in] blockSize: number of samples to process.
- [in] postShift: bit shift applied to coefficients.

```
void riscv_lms_init_q31 (riscv_lms_instance_q31 *S, uint16_t numTaps, q31_t *pCoeffs, q31_t *pState, q31_t mu, uint32_t blockSize, uint32_t postShift)
Initialization function for Q31 LMS filter.
```

Return none

Details pCoeffs points to the array of filter coefficients stored in time reversed order: The initial filter coefficients serve as a starting point for the adaptive filter. pState points to an array of length numTaps+blockSize-1 samples, where blockSize is the number of input samples processed by each call to riscv_lms_q31().

Parameters

- [in] S: points to an instance of the Q31 LMS filter structure
- [in] numTaps: number of filter coefficients
- [in] pCoeffs: points to coefficient buffer
- [in] pState: points to state buffer
- [in] mu: step size that controls filter coefficient updates
- [in] blockSize: number of samples to process
- [in] postShift: bit shift applied to coefficients

```
void riscv_lms_q15 (const riscv_lms_instance_q15 *S, const q15_t *pSrc, q15_t *pRef, q15_t *pOut, q15_t *pErr, uint32_t blockSize)

Processing function for Q15 LMS filter.
```

Return none

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. Both coefficients and state variables are represented in 1.15 format and multiplications yield a 2.30 result. The 2.30 intermediate results are accumulated in a 64-bit accumulator in 34.30 format. There is no risk of internal overflow with this approach and the full precision of intermediate multiplications is preserved. After all additions have been performed, the accumulator is truncated to 34.15 format by discarding low 15 bits. Lastly, the accumulator is saturated to yield a result in 1.15 format.

In this filter, filter coefficients are updated for each sample and the updation of filter cofficients are saturted.

Parameters

- [in] S: points to an instance of the Q15 LMS filter structure
- [in] pSrc: points to the block of input data
- [in] pRef: points to the block of reference data
- [out] pout: points to the block of output data
- [out] pErr: points to the block of error data
- [in] blockSize: number of samples to process

```
void riscv_lms_q31 (const riscv_lms_instance_q31 *S, const q31_t *pSrc, q31_t *pRef, q31_t *pOut, q31_t *pErr, uint32_t blockSize)

Processing function for Q31 LMS filter.
```

Return none

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The accumulator has a 2.62 format and maintains full precision of the intermediate multiplication results but provides only a single guard bit. Thus, if the accumulator result overflows it wraps around rather than clips. In order to avoid overflows completely the input signal must be scaled down by log2(numTaps) bits. The reference signal should not be scaled down. After all multiply-accumulates

are performed, the 2.62 accumulator is shifted and saturated to 1.31 format to yield the final result. The output signal and error signal are in 1.31 format.

In this filter, filter coefficients are updated for each sample and the updation of filter coefficients are saturted.

Parameters

- [in] S: points to an instance of the Q31 LMS filter structure.
- [in] pSrc: points to the block of input data.
- [in] pRef: points to the block of reference data.
- [out] pout: points to the block of output data.
- [out] pErr: points to the block of error data.
- [in] blockSize: number of samples to process.

Normalized LMS Filters

```
void riscv_lms_norm_f32 (riscv_lms_norm_instance_f32 *S, const float32_t *pSrc, float32_t *pRef, float32_t *pOut, float32_t *pErr, uint32_t blockSize)
```

void **riscv_lms_norm_init_f32** (riscv_lms_norm_instance_f32 *S, uint16_t numTaps, float32_t *pCo-effs, float32_t *pState, float32_t mu, uint32_t blockSize)

void **riscv_lms_norm_init_q15** (riscv_lms_norm_instance_q15 *S, uint16_t numTaps, q15_t *pCoeffs, q15_t *pState, q15_t mu, uint32_t blockSize, uint8_t postShift)

void **riscv_lms_norm_init_q31** (riscv_lms_norm_instance_q31 *S, uint16_t numTaps, q31_t *pCoeffs, q31_t *pState, q31_t mu, uint32_t blockSize, uint8_t postShift)


void **riscv_lms_norm_q15** (riscv_lms_norm_instance_q15 *S, **const** q15_t *pSrc, q15_t *pRef, q15_t *pOut, q15_t *pErr, uint32_t blockSize)

void riscv_lms_norm_q31 (riscv_lms_norm_instance_q31 *S, const q31_t *pSrc, q31_t *pRef, q31_t *pOut, q31_t *pErr, uint32_t blockSize)

group LMS_NORM

This set of functions implements a commonly used adaptive filter. It is related to the Least Mean Square (LMS) adaptive filter and includes an additional normalization factor which increases the adaptation rate of the filter. The NMSIS DSP Library contains normalized LMS filter functions that operate on Q15, Q31, and floating-point data types.

A normalized least mean square (NLMS) filter consists of two components as shown below. The first component is a standard transversal or FIR filter. The second component is a coefficient update mechanism. The NLMS filter has two input signals. The "input" feeds the FIR filter while the "reference input" corresponds to the desired output of the FIR filter. That is, the FIR filter coefficients are updated so that the output of the FIR filter matches the reference input. The filter coefficient update mechanism is based on the difference between the FIR filter output and the reference input. This "error signal" tends towards zero as the filter adapts. The NLMS processing functions accept the input and reference input signals and generate the filter output and error signal. The functions operate on blocks of data and each call to the function processes blockSize samples through the filter. pSrc points to input signal, pRef points to reference signal, pOut points to output signal and pErr points to error signal. All arrays contain blockSize

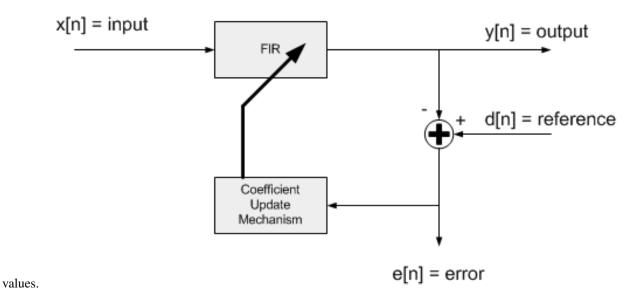

The functions operate on a block-by-block basis. Internally, the filter coefficients b [n] are updated on a sample-by-sample basis. The convergence of the LMS filter is slower compared to the normalized LMS algorithm.

Algorithm The output signal y [n] is computed by a standard FIR filter:

The error signal equals the difference between the reference signal d[n] and the filter output:

After each sample of the error signal is computed the instanteous energy of the filter state variables is calculated: The filter coefficients b[k] are then updated on a sample-by-sample basis: where mu is the step size and controls the rate of coefficient convergence.

In the APIs, pCoeffs points to a coefficient array of size numTaps. Coefficients are stored in time reversed order.

pState points to a state array of size numTaps + blockSize - 1. Samples in the state buffer are stored in the order:

Note that the length of the state buffer exceeds the length of the coefficient array by blockSize-1 samples. The increased state buffer length allows circular addressing, which is traditionally used in FIR filters, to be avoided and yields a significant speed improvement. The state variables are updated after each block of data is processed.

Instance Structure The coefficients and state variables for a filter are stored together in an instance data structure. A separate instance structure must be defined for each filter and coefficient and state arrays cannot be shared among instances. There are separate instance structure declarations for each of the 3 supported data types.

Initialization Functions There is also an associated initialization function for each data type. The initialization function performs the following operations:

- Sets the values of the internal structure fields.
- Zeros out the values in the state buffer. To do this manually without calling the init function, assign the follow subfields of the instance structure: numTaps, pCoeffs, mu, energy, x0, pState. Also set all of the values in pState to zero. For Q7, Q15, and Q31 the following fields must also be initialized; recipTable, postShift

Instance structure cannot be placed into a const data section and it is recommended to use the initialization function.

Fixed-Point Behavior Care must be taken when using the Q15 and Q31 versions of the normalised LMS filter. The following issues must be considered:

- · Scaling of coefficients
- · Overflow and saturation

Scaling of Coefficients (fixed point versions) Filter coefficients are represented as fractional values and coefficients are restricted to lie in the range [-1 +1). The fixed-point functions have an additional scaling parameter postShift. At the output of the filter's accumulator is a shift register which shifts the result by postShift bits. This essentially scales the filter coefficients by 2^postShift and allows the filter coefficients to exceed the range [+1 -1). The value of postShift is set by the user based on the expected gain through the system being modeled.

Overflow and Saturation (fixed point versions) Overflow and saturation behavior of the fixed-point Q15 and Q31 versions are described separately as part of the function specific documentation below.

Functions

void **riscv_lms_norm_f32** (riscv_lms_norm_instance_f32 *S, **const** float32_t *pSrc, float32_t *pRef, float32_t *pOut, float32_t *pErr, uint32_t blockSize)

Processing function for floating-point normalized LMS filter.

Return none

Parameters

- [in] S: points to an instance of the floating-point normalized LMS filter structure
- [in] pSrc: points to the block of input data
- [in] pRef: points to the block of reference data
- [out] pout: points to the block of output data
- [out] pErr: points to the block of error data
- [in] blockSize: number of samples to process

void **riscv_lms_norm_init_f32** (riscv_lms_norm_instance_f32 *S, uint16_t numTaps, float32_t *pCoeffs, float32_t *pState, float32_t mu, uint32_t blockSize) Initialization function for floating-point normalized LMS filter.

Return none

Details pCoeffs points to the array of filter coefficients stored in time reversed order: The initial filter coefficients serve as a starting point for the adaptive filter. pState points to an array of length numTaps+blockSize-1 samples, where blockSize is the number of input samples processed by each call to riscv_lms_norm_f32().

- [in] S: points to an instance of the floating-point LMS filter structure
- [in] numTaps: number of filter coefficients
- [in] pCoeffs: points to coefficient buffer
- [in] pState: points to state buffer

- [in] mu: step size that controls filter coefficient updates
- [in] blockSize: number of samples to process

```
void riscv_lms_norm_init_q15 (riscv_lms_norm_instance_q15 *S, uint16_t numTaps, q15_t *pCoeffs, q15_t *pState, q15_t mu, uint32_t blockSize, uint8_t postShift)
```

Initialization function for Q15 normalized LMS filter.

Return none

Details pCoeffs points to the array of filter coefficients stored in time reversed order: The initial filter coefficients serve as a starting point for the adaptive filter. pState points to the array of state variables and size of array is numTaps+blockSize-1 samples, where blockSize is the number of input samples processed by each call to riscv_lms_norm_q15().

Parameters

- [in] S: points to an instance of the Q15 normalized LMS filter structure.
- [in] numTaps: number of filter coefficients.
- [in] pCoeffs: points to coefficient buffer.
- [in] pState: points to state buffer.
- [in] mu: step size that controls filter coefficient updates.
- [in] blockSize: number of samples to process.
- [in] postShift: bit shift applied to coefficients.

```
void riscv_lms_norm_init_q31 (riscv_lms_norm_instance_q31 *S, uint16_t numTaps, q31_t *pCoeffs, q31_t *pState, q31_t mu, uint32_t blockSize, uint8_t postShift)
```

Initialization function for Q31 normalized LMS filter.

Return none

Details pCoeffs points to the array of filter coefficients stored in time reversed order: The initial filter coefficients serve as a starting point for the adaptive filter. pState points to an array of length numTaps+blockSize-1 samples, where blockSize is the number of input samples processed by each call to riscv_lms_norm_q31().

Parameters

- [in] S: points to an instance of the Q31 normalized LMS filter structure.
- [in] numTaps: number of filter coefficients.
- [in] pCoeffs: points to coefficient buffer.
- [in] pState: points to state buffer.
- [in] mu: step size that controls filter coefficient updates.
- [in] blockSize: number of samples to process.
- [in] postShift: bit shift applied to coefficients.

```
void riscv_lms_norm_q15 (riscv_lms_norm_instance_q15 *S, const q15_t *pSrc, q15_t *pRef, q15_t *pOut, q15_t *pErr, uint32_t blockSize)

Processing function for Q15 normalized LMS filter.
```

Return none

Scaling and Overflow Behavior The function is implemented using a 64-bit internal accumulator. Both coefficients and state variables are represented in 1.15 format and multiplications yield a 2.30 result. The 2.30 intermediate results are accumulated in a 64-bit accumulator in 34.30 format. There is no risk of internal overflow with this approach and the full precision of intermediate multiplications is preserved. After all additions have been performed, the accumulator is truncated to 34.15 format by discarding low 15 bits. Lastly, the accumulator is saturated to yield a result in 1.15 format.

In this filter, filter coefficients are updated for each sample and the updation of filter coefficients are saturted.

Parameters

- [in] S: points to an instance of the Q15 normalized LMS filter structure
- [in] pSrc: points to the block of input data
- [in] pRef: points to the block of reference data
- [out] pout: points to the block of output data
- [out] pErr: points to the block of error data
- [in] blockSize: number of samples to process

```
void riscv_lms_norm_q31 (riscv_lms_norm_instance_q31 *S, const q31_t *pSrc, q31_t *pRef, q31_t *pOut, q31_t *pErr, uint32_t blockSize)

Processing function for Q31 normalized LMS filter.
```

Return none

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The accumulator has a 2.62 format and maintains full precision of the intermediate multiplication results but provides only a single guard bit. Thus, if the accumulator result overflows it wraps around rather than clip. In order to avoid overflows completely the input signal must be scaled down by log2(numTaps) bits. The reference signal should not be scaled down. After all multiply-accumulates are performed, the 2.62 accumulator is shifted and saturated to 1.31 format to yield the final result. The output signal and error signal are in 1.31 format.

In this filter, filter coefficients are updated for each sample and the updation of filter coefficients are saturted.

Parameters

- [in] S: points to an instance of the Q31 normalized LMS filter structure
- [in] pSrc: points to the block of input data
- [in] pRef: points to the block of reference data
- [out] pout: points to the block of output data
- [out] pErr: points to the block of error data
- [in] blockSize: number of samples to process

Finite Impulse Response (FIR) Interpolator

```
void riscv_fir_interpolate_f32 (const riscv_fir_interpolate_instance_f32 *S, const float32_t *pSrc, float32_t *pDst, uint32_t blockSize)
```

riscv_status riscv_fir_interpolate_init_f32 (riscv_fir_interpolate_instance_f32 *S, uint8_t L, uint16_t numTaps, const float32_t *pCoeffs, float32_t *pState, uint32_t blockSize)

riscv_status riscv_fir_interpolate_init_q15 (riscv_fir_interpolate_instance_q15 *S, uint8_t L, uint16_t numTaps, const q15_t *pCoeffs, q15_t *pState, uint32 t blockSize)


riscv_status riscv_fir_interpolate_init_q31 (riscv_fir_interpolate_instance_q31 *S, uint8_t L, uint16_t numTaps, const q31_t *pCoeffs, q31_t *pState, uint32_t blockSize)

void riscv_fir_interpolate_q15 (const riscv_fir_interpolate_instance_q15 *S, const q15_t *pSrc, q15_t *pDst, uint32_t blockSize)

void riscv_fir_interpolate_q31 (const riscv_fir_interpolate_instance_q31 *S, const q31_t *pSrc, q31_t *pDst, uint32_t blockSize)

group FIR_Interpolate

These functions combine an upsampler (zero stuffer) and an FIR filter. They are used in multirate systems for increasing the sample rate of a signal without introducing high frequency images. Conceptually, the functions are equivalent to the block diagram below: After upsampling by a factor of \mathbb{L} , the signal should be filtered by a lowpass filter with a normalized cutoff frequency of $1/\mathbb{L}$ in order to eliminate high frequency copies of the spectrum. The user of the function is responsible for providing the filter



coefficients.

The FIR interpolator functions provided in the NMSIS DSP Library combine the upsampler and FIR filter in an efficient manner. The upsampler inserts L-1 zeros between each sample. Instead of multiplying by these zero values, the FIR filter is designed to skip them. This leads to an efficient implementation without any wasted effort. The functions operate on blocks of input and output data. pSrc points to an array of blockSize input values and pDst points to an array of blockSize $\pm L$ output values.

The library provides separate functions for Q15, Q31, and floating-point data types.

Algorithm The functions use a polyphase filter structure: This approach is more efficient than straightforward upsample-then-filter algorithms. With this method the computation is reduced by a factor of 1/L when compared to using a standard FIR filter.

pCoeffs points to a coefficient array of size numTaps. numTaps must be a multiple of the interpolation factor L and this is checked by the initialization functions. Internally, the function divides the FIR filter's impulse response into shorter filters of length phaseLength=numTaps/L. Coefficients are stored in time reversed order.

pState points to a state array of size blockSize + phaseLength - 1. Samples in the state buffer are stored in the order:

The state variables are updated after each block of data is processed, the coefficients are untouched.

Instance Structure The coefficients and state variables for a filter are stored together in an instance data structure. A separate instance structure must be defined for each filter. Coefficient arrays may be shared among several instances while state variable array should be allocated separately. There are separate instance structure declarations for each of the 3 supported data types.

Initialization Functions There is also an associated initialization function for each data type. The initialization function performs the following operations:

- Sets the values of the internal structure fields.
- Zeros out the values in the state buffer.
- Checks to make sure that the length of the filter is a multiple of the interpolation factor. To do this manually without calling the init function, assign the follow subfields of the instance structure: L (interpolation factor), pCoeffs, phaseLength (numTaps / L), pState. Also set all of the values in pState to zero.

Use of the initialization function is optional. However, if the initialization function is used, then the instance structure cannot be placed into a const data section. To place an instance structure into a const data section, the instance structure must be manually initialized. The code below statically initializes each of the 3 different data type filter instance structures

where L is the interpolation factor; phaseLength=numTaps/L is the length of each of the shorter FIR filters used internally, pCoeffs is the address of the coefficient buffer; pState is the address of the state buffer. Be sure to set the values in the state buffer to zeros when doing static initialization.

Fixed-Point Behavior Care must be taken when using the fixed-point versions of the FIR interpolate filter functions. In particular, the overflow and saturation behavior of the accumulator used in each function must be considered. Refer to the function specific documentation below for usage guidelines.

Functions

```
void riscv_fir_interpolate_f32 (const riscv_fir_interpolate_instance_f32 *S, const float32_t *pSrc, float32_t *pDst, uint32_t blockSize)
```

Processing function for floating-point FIR interpolator.

Processing function for the floating-point FIR interpolator.

Return none

Parameters

- [in] S: points to an instance of the floating-point FIR interpolator structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

```
riscv_status riscv_fir_interpolate_init_f32 (riscv_fir_interpolate_instance_f32 *S, uint8_t L, uint16_t numTaps, const float32_t *pCo-effs, float32_t *pState, uint32_t blockSize)

Initialization function for the floating-point FIR interpolator.
```

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: filter length numTaps is not a multiple of the interpolation factor L

Details pCoeffs points to the array of filter coefficients stored in time reversed order:

The length of the filter numTaps must be a multiple of the interpolation factor L.

pState points to the array of state variables. pState is of length (numTaps/L)+blockSize-1 words where blockSize is the number of input samples processed by each call to riscv_fir_interpolate_f32().

Parameters

- [inout] S: points to an instance of the floating-point FIR interpolator structure
- [in] L: upsample factor
- [in] numTaps: number of filter coefficients in the filter
- [in] pCoeffs: points to the filter coefficient buffer
- [in] pState: points to the state buffer
- [in] blockSize: number of input samples to process per call

```
riscv_status riscv_fir_interpolate_init_q15 (riscv_fir_interpolate_instance_q15 *S, uint8_t
L, uint16_t numTaps, const q15_t *pCoeffs,
q15_t *pState, uint32_t blockSize)
```

Initialization function for the Q15 FIR interpolator.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: filter length numTaps is not a multiple of the interpolation factor L

Details pCoeffs points to the array of filter coefficients stored in time reversed order: The length of the filter numTaps must be a multiple of the interpolation factor L.

pState points to the array of state variables. pState is of length (numTaps/L)+blockSize-1 words where blockSize is the number of input samples processed by each call to riscv_fir_interpolate_q15().

Parameters

- [inout] S: points to an instance of the Q15 FIR interpolator structure
- [in] L: upsample factor
- [in] numTaps: number of filter coefficients in the filter
- [in] pCoeffs: points to the filter coefficient buffer
- [in] pState: points to the state buffer
- [in] blockSize: number of input samples to process per call

```
riscv_status riscv_fir_interpolate_init_q31 (riscv_fir_interpolate_instance_q31 *S, uint8_t
L, uint16_t numTaps, const q31_t *pCoeffs,
q31_t *pState, uint32_t blockSize)
```

Initialization function for the Q31 FIR interpolator.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_ARGUMENT_ERROR: filter length numTaps is not a multiple of the interpolation factor L

Details pCoeffs points to the array of filter coefficients stored in time reversed order: The length of the filter numTaps must be a multiple of the interpolation factor L.

pState points to the array of state variables. pState is of length (numTaps/L) +blockSize-1 words where blockSize is the number of input samples processed by each call to riscv_fir_interpolate_q31().

Parameters

- [inout] S: points to an instance of the Q31 FIR interpolator structure
- [in] L: upsample factor
- [in] numTaps: number of filter coefficients in the filter
- [in] pCoeffs: points to the filter coefficient buffer
- [in] pState: points to the state buffer
- [in] blockSize: number of input samples to process per call

```
void riscv_fir_interpolate_q15 (const riscv_fir_interpolate_instance_q15 *S, const q15_t *pSrc, q15_t *pDst, uint32_t blockSize)

Processing function for the Q15 FIR interpolator.
```

Return none

Scaling and Overflow Behavior The function is implemented using a 64-bit internal accumulator. Both coefficients and state variables are represented in 1.15 format and multiplications yield a 2.30 result. The 2.30 intermediate results are accumulated in a 64-bit accumulator in 34.30 format. There is no risk of internal overflow with this approach and the full precision of intermediate multiplications is preserved. After all additions have been performed, the accumulator is truncated to 34.15 format by discarding low 15 bits. Lastly, the accumulator is saturated to yield a result in 1.15 format.

Parameters

- [in] S: points to an instance of the Q15 FIR interpolator structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

```
void riscv_fir_interpolate_q31 (const riscv_fir_interpolate_instance_q31 *S, const q31_t *pSrc, q31_t *pDst, uint32_t blockSize)

Processing function for the Q31 FIR interpolator.
```

Return none

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The accumulator has a 2.62 format and maintains full precision of the intermediate multiplication results but provides only a single guard bit. Thus, if the accumulator result overflows it wraps around rather than clip. In order to avoid overflows completely the input signal must be scaled down by 1/(numTaps/L). since numTaps/L additions occur per output sample. After all multiply-accumulates are performed, the 2.62 accumulator is truncated to 1.32 format and then saturated to 1.31 format.

- [in] S: points to an instance of the Q31 FIR interpolator structure
- [in] pSrc: points to the block of input data
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process

group groupFilters

3.3.9 Interpolation Functions

Bilinear Interpolation

```
float32_t riscv_bilinear_interp_f32 (const riscv_bilinear_interp_instance_f32 *S, float32_t X, float32_t Y)

q31_t riscv_bilinear_interp_q31 (riscv_bilinear_interp_instance_q31 *S, q31_t X, q31_t Y)

q15_t riscv_bilinear_interp_q15 (riscv_bilinear_interp_instance_q15 *S, q31_t X, q31_t Y)

q7_t riscv_bilinear_interp_q7 (riscv_bilinear_interp_instance_q7 *S, q31_t X, q31_t Y)

float16_t riscv_bilinear_interp_f16 (const riscv_bilinear_interp_instance_f16 *S, float16_t X, float16_t Y)
```

group BilinearInterpolate

Bilinear interpolation is an extension of linear interpolation applied to a two dimensional grid. The underlying function f(x, y) is sampled on a regular grid and the interpolation process determines values between the grid points. Bilinear interpolation is equivalent to two step linear interpolation, first in the x-dimension and then in the y-dimension. Bilinear interpolation is often used in image processing to rescale images. The NMSIS DSP library provides bilinear interpolation functions for Q7, Q15, Q31, and floating-point data types.

Algorithm Bilinear interpolation is an extension of linear interpolation applied to a two dimensional grid. The underlying function f(x, y) is sampled on a regular grid and the interpolation process determines values between the grid points. Bilinear interpolation is equivalent to two step linear interpolation, first in the x-dimension and then in the y-dimension. Bilinear interpolation is often used in image processing to rescale images. The NMSIS DSP library provides bilinear interpolation functions for Q7, Q15, Q31, and floating-point data types.

The instance structure used by the bilinear interpolation functions describes a two dimensional data table. For floating-point, the instance structure is defined as:

where numRows specifies the number of rows in the table; numCols specifies the number of columns in the table; and pData points to an array of size numRows*numCols values. The data table pTable is organized in row order and the supplied data values fall on integer indexes. That is, table element (x,y) is located at pTable[x + y*numCols] where x and y are integers.

Let (x, y) specify the desired interpolation point. Then define:

The interpolated output point is computed as: Note that the coordinates (x, y) contain integer and fractional components. The integer components specify which portion of the table to use while the fractional components control the interpolation processor.

if (x,y) are outside of the table boundary, Bilinear interpolation returns zero output.

Algorithm end of LinearInterpolate group

The instance structure used by the bilinear interpolation functions describes a two dimensional data table. For floating-point, the instance structure is defined as:

where numRows specifies the number of rows in the table; numCols specifies the number of columns in the table; and pData points to an array of size numRows*numCols values. The data table pTable is organized in row order and the supplied data values fall on integer indexes. That is, table element (x,y) is located at pTable[x + y*numCols] where x and y are integers.

Let (x, y) specify the desired interpolation point. Then define:

The interpolated output point is computed as: Note that the coordinates (x, y) contain integer and fractional components. The integer components specify which portion of the table to use while the fractional components control the interpolation processor.

if (x,y) are outside of the table boundary, Bilinear interpolation returns zero output.

Functions

float32_t riscv_bilinear_interp_f32 (const riscv_bilinear_interp_instance_f32 *S, float32_t X, float32_t Y)

Floating-point bilinear interpolation.

Return out interpolated value.

Parameters

- [inout] S: points to an instance of the interpolation structure.
- [in] X: interpolation coordinate.
- [in] Y: interpolation coordinate.

q31_t riscv_bilinear_interp_q31 (riscv_bilinear_interp_instance_q31 *S, q31_t X, q31_t Y) Q31 bilinear interpolation.

Return out interpolated value.

Parameters

- [inout] S: points to an instance of the interpolation structure.
- [in] X: interpolation coordinate in 12.20 format.
- [in] Y: interpolation coordinate in 12.20 format.
- q15_t riscv_bilinear_interp_q15 (riscv_bilinear_interp_instance_q15 *S, q31_t X, q31_t Y) Q15 bilinear interpolation.

Return out interpolated value.

Parameters

- [inout] S: points to an instance of the interpolation structure.
- [in] X: interpolation coordinate in 12.20 format.
- [in] Y: interpolation coordinate in 12.20 format.
- q7_t riscv_bilinear_interp_q7 (riscv_bilinear_interp_instance_q7 *S, q31_t X, q31_t Y) Q7 bilinear interpolation.

Return out interpolated value.

- [inout] S: points to an instance of the interpolation structure.
- [in] X: interpolation coordinate in 12.20 format.
- [in] Y: interpolation coordinate in 12.20 format.

```
float16_t riscv_bilinear_interp_f16 (const riscv_bilinear_interp_instance_f16 *S, float16_t X, float16_t Y)
```

Floating-point bilinear interpolation.

Return out interpolated value.

Parameters


- [inout] S: points to an instance of the interpolation structure.
- [in] X: interpolation coordinate.
- [in] Y: interpolation coordinate.

Linear Interpolation

```
float32_t riscv_linear_interp_f32 (riscv_linear_interp_instance_f32 *S, float32_t x)
q31_t riscv_linear_interp_q31 (q31_t *pYData, q31_t x, uint32_t nValues)
q15_t riscv_linear_interp_q15 (q15_t *pYData, q31_t x, uint32_t nValues)
q7_t riscv_linear_interp_q7 (q7_t *pYData, q31_t x, uint32_t nValues)
float16_t riscv_linear_interp_f16 (riscv_linear_interp_instance_f16 *S, float16_t x)
group LinearInterpolate
```

Linear interpolation is a method of curve fitting using linear polynomials. Linear interpolation works by effectively drawing a straight line between two neighboring samples and returning the appropriate point along that line

end of SplineInterpolate group

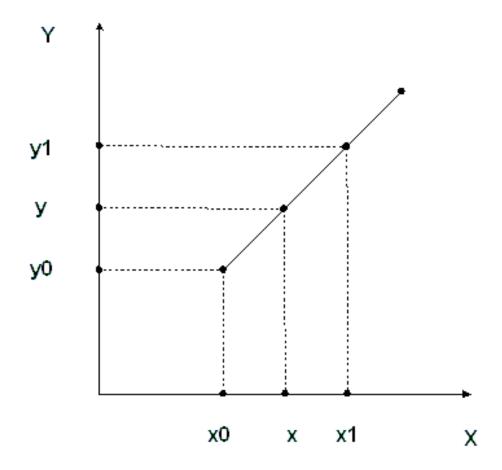

A Linear Interpolate function calculates an output value(y), for the input(x) using linear interpolation of the input values x0, x1 (nearest input values) and the output values y0 and y1(nearest output values)

Algorithm:

This set of functions implements Linear interpolation process for Q7, Q15, Q31, and floating-point data types. The functions operate on a single sample of data and each call to the function returns a single processed value. S points to an instance of the Linear Interpolate function data structure. \times is the input sample value. The functions returns the output value.

if x is outside of the table boundary, Linear interpolation returns first value of the table if x is below input range and returns last value of table if x is above range.

Functions

float32_t riscv_linear_interp_f32 (riscv_linear_interp_instance_f32 *S, float32_t x) Process function for the floating-point Linear Interpolation Function.

Return y processed output sample.

- [inout] S: is an instance of the floating-point Linear Interpolation structure
- [in] x: input sample to process

q31_t riscv_linear_interp_q31 (q31_t *pYData, q31_t x, uint32_t nValues)

Process function for the Q31 Linear Interpolation Function.

Return y processed output sample.

Input sample x is in 12.20 format which contains 12 bits for table index and 20 bits for fractional part. This function can support maximum of table size 2^12.

Parameters

- [in] pYData: pointer to Q31 Linear Interpolation table
- [in] x: input sample to process
- [in] nValues: number of table values

q15_t riscv_linear_interp_q15 (q15_t *pYData, q31_t x, uint32_t nValues)

Process function for the Q15 Linear Interpolation Function.

Return y processed output sample.

Input sample \times is in 12.20 format which contains 12 bits for table index and 20 bits for fractional part. This function can support maximum of table size 2^{12} .

Parameters

- [in] pYData: pointer to Q15 Linear Interpolation table
- [in] x: input sample to process
- [in] nValues: number of table values

q7_t riscv_linear_interp_q7 (q7_t *pYData, q31_t x, uint32_t nValues)

Process function for the Q7 Linear Interpolation Function.

Return y processed output sample.

Input sample \times is in 12.20 format which contains 12 bits for table index and 20 bits for fractional part. This function can support maximum of table size 2^{12} .

Parameters

- [in] pYData: pointer to Q7 Linear Interpolation table
- [in] x: input sample to process
- [in] nValues: number of table values

float16_t riscv_linear_interp_f16 (riscv_linear_interp_instance_f16 *S, float16_t x)

Process function for the floating-point Linear Interpolation Function.

Return y processed output sample.

Parameters

- [inout] S: is an instance of the floating-point Linear Interpolation structure
- [in] x: input sample to process

Cubic Spline Interpolation

```
void riscv_spline_f32 (riscv_spline_instance_f32 *S, const float32_t *xq, float32_t *pDst, uint32_t blockSize)
```

```
void riscv_spline_init_f32 (riscv_spline_instance_f32 *S, riscv_spline_type type, const float32_t *x, const float32_t *y, uint32_t n, float32_t *coeffs, float32_t *temp-Buffer)
```

group SplineInterpolate

Spline interpolation is a method of interpolation where the interpolant is a piecewise-defined polynomial called "spline".

Given a function f defined on the interval [a,b], a set of n nodes x(i) where a=x(1)< x(2)< ... < x(n)=b and a set of n values y(i) = f(x(i)), a cubic spline interpolant S(x) is defined as:

Introduction

where

Having defined h(i) = x(i+1) - x(i)

Algorithm

It is possible to write the previous conditions in matrix form (Ax=B). In order to solve the system two boundary conditions are needed.

- Natural spline: S1''(x1)=2*c(1)=0; Sn''(xn)=2*c(n)=0 In matrix form:
- Parabolic runout spline: S1"(x1)=2*c(1)=S2"(x2)=2*c(2); Sn-1"(xn-1)=2*c(n-1)=Sn"(xn)=2*c(n) In matrix form:

A is a tridiagonal matrix (a band matrix of bandwidth 3) of size N=n+1. The factorization algorithms (A=LU) can be simplified considerably because a large number of zeros appear in regular patterns. The Crout method has been used: 1) Solve LZ=B

- 2) Solve UX=Z
- c(i) for i=1, ..., n-1 are needed to compute the n-1 polynomials. b(i) and d(i) are computed as:
 - b(i) = [v(i+1)-v(i)]/h(i)-h(i)*[c(i+1)+2*c(i)]/3
 - $d(i) = \frac{c(i+1)-c(i)}{3*h(i)}$ Moreover, a(i)=y(i).

It is possible to compute the interpolated vector for x values outside the input range (xq< x(1); xq> x(n)). The coefficients used to compute the y values for xq< x(1) are going to be the ones used for the first interval, while for xq>x(n) the coefficients used for the last interval.

Behaviour outside the given intervals

The initialization function takes as input two arrays that the user has to allocate: coeffs will contain the b, c, and d coefficients for the (n-1) intervals (n is the number of known points), hence its size must be 3*(n-1); tempBuffer is temporally used for internal computations and its size is n+n-1.

Initialization function

The x input array must be strictly sorted in ascending order and it must not contain twice the same value (x(i) < x(i+1)).

Functions

```
void riscv_spline_f32 (riscv_spline_instance_f32 *S, const float32_t *xq, float32_t *pDst, uint32_t blockSize)

Processing function for the floating-point cubic spline interpolation.
```

Parameters

- [in] S: points to an instance of the floating-point spline structure.
- [in] xq: points to the x values of the interpolated data points.
- [out] pDst: points to the block of output data.
- [in] blockSize: number of samples of output data.
- [in] S: points to an instance of the floating-point spline structure.
- [in] xq: points to the x values of the interpolated data points.
- [out] pDst: points to the block of output data.
- [in] blockSize: number of samples of output data.

```
void riscv_spline_init_f32 (riscv_spline_instance_f32 *S, riscv_spline_type type, const float32_t *x, const float32_t *y, uint32_t n, float32_t *coeffs, float32_t *tempBuffer)
```

Initialization function for the floating-point cubic spline interpolation.

Parameters

- [inout] S: points to an instance of the floating-point spline structure.
- [in] type: type of cubic spline interpolation (boundary conditions)
- [in] x: points to the x values of the known data points.
- [in] y: points to the y values of the known data points.
- [in] n: number of known data points.
- [in] coeffs: coefficients array for b, c, and d
- [in] tempBuffer: buffer array for internal computations

group groupInterpolation


These functions perform 1- and 2-dimensional interpolation of data. Linear interpolation is used for 1-dimensional data and bilinear interpolation is used for 2-dimensional data.

3.3.10 Matrix Functions

Matrix Addition

```
riscv_status riscv_mat_add_f16 (const
                                                riscv matrix instance f16
                                                                               *pSrcA,
                                                                                             const
                                   riscv_matrix_instance_f16 *pSrcB, riscv_matrix_instance_f16 *pDst)
riscv_status riscv_mat_add_f32 (const
                                                riscv matrix instance f32
                                                                               *pSrcA,
                                                                                             const
                                   riscv_matrix_instance_f32 *pSrcB, riscv_matrix_instance_f32 *pDst)
riscv_status riscv_mat_add_q15 (const
                                                                               *pSrcA.
                                                riscv_matrix_instance_q15
                                                                                             const
                                   riscv_matrix_instance_q15 *pSrcB, riscv_matrix_instance_q15 *pDst)
riscv_status riscv_mat_add_q31 (const
                                                riscv matrix instance q31
                                                                               *pSrcA,
                                                                                             const
                                   riscv_matrix_instance_q31 *pSrcB, riscv_matrix_instance_q31 *pDst)
```

group MatrixAdd

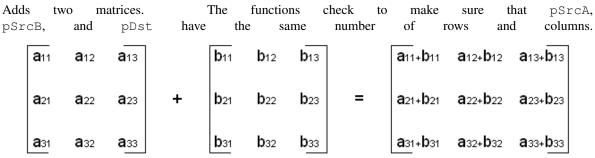

Functions

riscv_status riscv_mat_add_f16 (const riscv_matrix_instance_f16 *pSrcA, const riscv_matrix_instance_f16 *pSrcB, riscv_matrix_instance_f16 *pDst)

Floating-point matrix addition.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrcA: points to first input matrix structure
- [in] pSrcB: points to second input matrix structure
- [out] pDst: points to output matrix structure

riscv_status riscv_mat_add_f32 (const riscv_matrix_instance_f32 *pSrcA, const riscv_matrix_instance_f32 *pSrcB, riscv_matrix_instance_f32 *pDst)

Floating-point matrix addition.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrcA: points to first input matrix structure
- [in] pSrcB: points to second input matrix structure
- [out] pDst: points to output matrix structure

riscv_status riscv_mat_add_q15 (const riscv_matrix_instance_q15 *pSrcA, const riscv_matrix_instance_q15 *pSrcB, riscv_matrix_instance_q15 *pDst)

Q15 matrix addition.

Return execution status

• RISCV_MATH_SUCCESS: Operation successful

RISCV MATH SIZE MISMATCH: Matrix size check failed

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q15 range [0x8000 0x7FFF] are saturated.

Parameters

- [in] pSrcA: points to first input matrix structure
- [in] pSrcB: points to second input matrix structure
- [out] pDst: points to output matrix structure

```
riscv_status riscv_mat_add_q31 (const riscv_matrix_instance_q31 *pSrcA, const riscv_matrix_instance_q31 *pSrcB, riscv_matrix_instance_q31 *pDst)
```

Q31 matrix addition.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q31 range [0x8000000 0x7FFFFFFF] are saturated.

Parameters

- [in] pSrcA: points to first input matrix structure
- [in] pSrcB: points to second input matrix structure
- [out] pDst: points to output matrix structure

Cholesky and LDLT decompositions

```
riscv_status riscv_mat_cholesky_f16 (const
                                                           riscv_matrix_instance_f16
                                                                                             *pSrc,
                                          riscv_matrix_instance_f16 *pDst)
riscv_status riscv_mat_cholesky_f32 (const
                                                           riscv_matrix_instance_f32
                                                                                             *pSrc,
                                          riscv_matrix_instance_f32 *pDst)
riscv_status riscv_mat_cholesky_f64 (const
                                                           riscv_matrix_instance_f64
                                                                                             *pSrc,
                                          riscv_matrix_instance_f64 *pDst)
riscv_status riscv_mat_ldlt_f32 (const riscv_matrix_instance_f32 *pSrc, riscv_matrix_instance_f32
                                    *pl, riscv_matrix_instance_f32 *pd, uint16_t *pp)
riscv_status riscv_mat_ldlt_f64 (const riscv_matrix_instance_f64 *pSrc, riscv_matrix_instance_f64
                                    *pl, riscv_matrix_instance_f64 *pd, uint16_t *pp)
group MatrixChol
```

Computes the Cholesky or LDL^{*}t decomposition of a matrix.

If the input matrix does not have a decomposition, then the algorithm terminates and returns error status RISCV_MATH_DECOMPOSITION_FAILURE.

Functions

```
riscv_status riscv_mat_cholesky_f16 (const riscv_matrix_instance_f16 *pSrc, riscv_matrix_instance_f16 *pDst)

Floating-point Cholesky decomposition of positive-definite matrix.
```

Floating-point Cholesky decomposition of Symmetric Positive Definite Matrix.

Return The function returns RISCV_MATH_SIZE_MISMATCH, if the dimensions do not match.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed
- RISCV_MATH_DECOMPOSITION_FAILURE : Input matrix cannot be decomposed

If the matrix is ill conditioned or only semi-definite, then it is better using the LDL t t decomposition. The decomposition of A is returning a lower triangular matrix U such that $A = U U^t$

Parameters

- [in] pSrc: points to the instance of the input floating-point matrix structure.
- [out] pDst: points to the instance of the output floating-point matrix structure.

```
riscv_status riscv_mat_cholesky_f32 (const riscv_matrix_instance_f32 *pSrc, riscv_matrix_instance_f32 *pDst) *pSrc,
```

Floating-point Cholesky decomposition of positive-definite matrix.

Floating-point Cholesky decomposition of Symmetric Positive Definite Matrix.

Return The function returns RISCV MATH SIZE MISMATCH, if the dimensions do not match.

Return execution status

- RISCV MATH SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed
- RISCV_MATH_DECOMPOSITION_FAILURE : Input matrix cannot be decomposed

If the matrix is ill conditioned or only semi-definite, then it is better using the LDL t t decomposition. The decomposition of A is returning a lower triangular matrix U such that A = U U t t

Parameters

- [in] pSrc: points to the instance of the input floating-point matrix structure.
- [out] pDst: points to the instance of the output floating-point matrix structure.

```
riscv_status riscv_mat_cholesky_f64 (const riscv_matrix_instance_f64 *pSrc, riscv_matrix_instance_f64 *pDst) *pSrc,
```

Floating-point Cholesky decomposition of positive-definite matrix.

Floating-point Cholesky decomposition of Symmetric Positive Definite Matrix.

Return The function returns RISCV MATH SIZE MISMATCH, if the dimensions do not match.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed
- RISCV_MATH_DECOMPOSITION_FAILURE : Input matrix cannot be decomposed

If the matrix is ill conditioned or only semi-definite, then it is better using the LDL t t decomposition. The decomposition of A is returning a lower triangular matrix U such that $A = U U^t$

- [in] pSrc: points to the instance of the input floating-point matrix structure.
- [out] pDst: points to the instance of the output floating-point matrix structure.

```
riscv_status riscv_mat_ldlt_f32 (const riscv_matrix_instance_f32 *pSrc, riscv_matrix_instance_f32 *pl, riscv_matrix_instance_f32 *pd, uint16_t *pp)
```

Floating-point LDL^t decomposition of positive semi-definite matrix.

Floating-point LDL decomposition of Symmetric Positive Semi-Definite Matrix.

Return The function returns RISCV_MATH_SIZE_MISMATCH, if the dimensions do not match.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed
- RISCV_MATH_DECOMPOSITION_FAILURE: Input matrix cannot be decomposed

Computes the LDL $^{^{\prime}}$ t decomposition of a matrix A such that P A P $^{^{\prime}}$ t = L D L $^{^{\prime}}$ t.

Parameters

- [in] pSrc: points to the instance of the input floating-point matrix structure.
- [out] pl: points to the instance of the output floating-point triangular matrix structure.
- [out] pd: points to the instance of the output floating-point diagonal matrix structure.
- [out] pp: points to the instance of the output floating-point permutation vector.

```
riscv_status riscv_mat_ldlt_f64 (const riscv_matrix_instance_f64 *pSrc, riscv_matrix_instance_f64 *pl, riscv_matrix_instance_f64 *pd, uint16_t *pp)
```

Floating-point LDL decomposition of Symmetric Positive Semi-Definite Matrix.

Floating-point LDL[^]t decomposition of positive semi-definite matrix.

Return The function returns RISCV MATH SIZE MISMATCH, if the dimensions do not match.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed
- RISCV_MATH_DECOMPOSITION_FAILURE : Input matrix cannot be decomposed

Computes the LDL $^{^{\prime}}$ t decomposition of a matrix A such that P A P $^{^{\prime}}$ t = L D L $^{^{\prime}}$ t.

Parameters

- [in] pSrc: points to the instance of the input floating-point matrix structure.
- [out] pl: points to the instance of the output floating-point triangular matrix structure.
- [out] pd: points to the instance of the output floating-point diagonal matrix structure.
- [out] pp: points to the instance of the output floating-point permutation vector.

Complex Matrix Multiplication

```
riscv_status riscv_mat_cmplx_mult_f16 (const
                                                           riscv_matrix_instance_f16
                                                                                           *pSrcA,
                                            const
                                                           riscv_matrix_instance_f16
                                                                                            *pSrcB,
                                            riscv_matrix_instance_f16 *pDst)
                                                                                            *pSrcA,
riscv_status riscv_mat_cmplx_mult_f32 (const
                                                           riscv_matrix_instance_f32
                                                           riscv_matrix_instance_f32
                                            const
                                                                                            *pSrcB,
                                            riscv_matrix_instance_f32 *pDst)
                                                                                            *pSrcA,
riscv_status riscv_mat_cmplx_mult_q15 (const
                                                           riscv_matrix_instance_q15
                                            const
                                                           riscv_matrix_instance_q15
                                                                                            *pSrcB,
                                            riscv_matrix_instance_q15 *pDst, q15_t *pScratch)
riscv_status riscv_mat_cmplx_mult_q31 (const
                                                           riscv_matrix_instance_q31
                                                                                            *pSrcA,
                                            const
                                                                                            *pSrcB,
                                                           riscv_matrix_instance_q31
                                            riscv_matrix_instance_q31 *pDst)
```

group CmplxMatrixMult

Complex Matrix multiplication is only defined if the number of columns of the first matrix equals the number of rows of the second matrix. Multiplying an $M \times N$ matrix with an $N \times P$ matrix results in an $M \times P$ matrix.

When matrix size checking is enabled, the functions check:

- that the inner dimensions of pSrcA and pSrcB are equal;
- that the size of the output matrix equals the outer dimensions of pSrcA and pSrcB.

Functions

```
riscv_status riscv_mat_cmplx_mult_f16 (const riscv_matrix_instance_f16 riscv_matrix_instance_f16 riscv_matrix_instance_f16 riscv_matrix_instance_f16 *pDst) *pSrcA, *pSrcB,
```

Floating-point Complex matrix multiplication.

Floating-point, complex, matrix multiplication.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrcA: points to first input complex matrix structure
- [in] pSrcB: points to second input complex matrix structure
- [out] pDst: points to output complex matrix structure

```
riscv_status riscv_mat_cmplx_mult_f32 (const riscv_matrix_instance_f32 *pSrcA, const riscv_matrix_instance_f32 *pSrcB, riscv_matrix_instance_f32 *pDst) *pSrcB,
```

Floating-point Complex matrix multiplication.

Floating-point, complex, matrix multiplication.

Return execution status

- RISCV MATH SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrcA: points to first input complex matrix structure
- [in] pSrcB: points to second input complex matrix structure
- [out] pDst: points to output complex matrix structure

```
riscv_status riscv_mat_cmplx_mult_q15 (const riscv_matrix_instance_q15 *pSrcA, const riscv_matrix_instance_q15 *pSrcB, riscv_matrix_instance_q15 *pDst, q15_t *pScratch)
```

Q15 Complex matrix multiplication.

Q15, complex, matrix multiplication.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Conditions for optimum performance Input, output and state buffers should be aligned by 32-bit

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The inputs to the multiplications are in 1.15 format and multiplications yield a 2.30 result. The 2.30 intermediate results are accumulated in a 64-bit accumulator in 34.30 format. This approach provides 33 guard bits and there is no risk of overflow. The 34.30 result is then truncated to 34.15 format by discarding the low 15 bits and then saturated to 1.15 format.

Parameters

- [in] pSrcA: points to first input complex matrix structure
- [in] pSrcB: points to second input complex matrix structure
- [out] pDst: points to output complex matrix structure
- [in] pScratch: points to an array for storing intermediate results

```
riscv_status riscv_mat_cmplx_mult_q31 (const riscv_matrix_instance_q31 *pSrcA, const riscv_matrix_instance_q31 riscv_matrix_instance_q31 *pDst) *pSrcA, *pSrcB,
```

Q31 Complex matrix multiplication.

Q31, complex, matrix multiplication.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The accumulator has a 2.62 format and maintains full precision of the intermediate multiplication results but provides only a single guard bit. There is no saturation on intermediate additions. Thus, if the accumulator overflows it wraps around and distorts the result. The input signals should be scaled down to avoid intermediate overflows. The input is thus scaled down by log2(numColsA) bits to avoid overflows, as a total of numColsA additions are performed internally. The 2.62 accumulator is right shifted by 31 bits and saturated to 1.31 format to yield the final result.

Parameters

• [in] pSrcA: points to first input complex matrix structure

- [in] pSrcB: points to second input complex matrix structure
- [out] pDst: points to output complex matrix structure


Complex Matrix Transpose

riscv_status riscv_mat_cmplx_trans_f16 (const riscv matrix instance f16 *pSrc, riscv_matrix_instance_f16 *pDst) riscv_status riscv_mat_cmplx_trans_f32 (const riscv_matrix_instance_f32 *pSrc, riscv_matrix_instance_f32 *pDst) riscv_status riscv_mat_cmplx_trans_q15 (const riscv_matrix_instance_q15 *pSrc, riscv_matrix_instance_q15 *pDst) riscv_status riscv_mat_cmplx_trans_q31 (const riscv_matrix_instance_q31 *pSrc, riscv_matrix_instance_q31 *pDst)

group MatrixComplexTrans

Tranposes a complex matrix.

Transposing an M x N matrix flips it around the center diagonal and results in an N x M matrix.

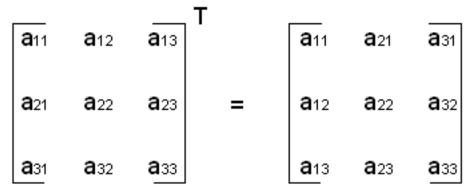

Functions

riscv_status riscv_mat_cmplx_trans_f16 (const riscv_matrix_instance_f16 *pSrc, riscv_matrix_instance_f16 *pDst)

Floating-point matrix transpose.

Floating-point complex matrix transpose.

Return execution status

- RISCV MATH SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH : Matrix size check failed

Parameters

- [in] pSrc: points to input matrix
- [out] pDst: points to output matrix

riscv_status riscv_mat_cmplx_trans_f32 (const riscv_matrix_instance_f32 *pSrc, riscv_matrix_instance_f32 *pDst)

Floating-point matrix transpose.

Floating-point complex matrix transpose.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrc: points to input matrix
- [out] pDst: points to output matrix

```
riscv_status riscv_mat_cmplx_trans_q15 (const riscv_matrix_instance_q15 *pSrc, riscv_matrix_instance_q15 *pDst)

Q15 complex matrix transpose.
```

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrc: points to input matrix
- [out] pDst: points to output matrix

```
riscv_status riscv_mat_cmplx_trans_q31 (const riscv_matrix_instance_q31 *pSrc, riscv_matrix_instance_q31 *pDst)

Q31 complex matrix transpose.
```

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrc: points to input matrix
- [out] pDst: points to output matrix

Matrix Initialization

*pData)

void riscv_mat_init_q31 (riscv_matrix_instance_q31 *S, uint16_t nRows, uint16_t nColumns, q31_t

group MatrixInit

Initializes the underlying matrix data structure. The functions set the numRows, numCols, and pData fields of the matrix data structure.

Functions

void **riscv_mat_init_f16** (riscv_matrix_instance_f16 *S, uint16_t nRows, uint16_t nColumns, float16_t *pData)

Floating-point matrix initialization.

Return none

Parameters

- [inout] S: points to an instance of the floating-point matrix structure
- [in] nRows: number of rows in the matrix
- [in] nColumns: number of columns in the matrix
- [in] pData: points to the matrix data array

void **riscv_mat_init_f32** (riscv_matrix_instance_f32 *S, uint16_t nRows, uint16_t nColumns, float32_t *pData)
Floating-point matrix initialization.

Return none

Parameters

- [inout] S: points to an instance of the floating-point matrix structure
- [in] nRows: number of rows in the matrix
- [in] nColumns: number of columns in the matrix
- [in] pData: points to the matrix data array

void **riscv_mat_init_f64** (riscv_matrix_instance_f64 *S, uint16_t nRows, uint16_t nColumns, float32_t *pData)

Floating-point matrix initialization.

Return none

Parameters

- [inout] S: points to an instance of the floating-point matrix structure
- [in] nRows: number of rows in the matrix
- \bullet [in] nColumns: number of columns in the matrix
- [in] pData: points to the matrix data array

void **riscv_mat_init_q15** (riscv_matrix_instance_q15 *S, uint16_t nRows, uint16_t nColumns, q15_t *pData)

Q15 matrix initialization.

Return none

- [inout] S: points to an instance of the floating-point matrix structure
- [in] nRows: number of rows in the matrix
- [in] nColumns: number of columns in the matrix
- [in] pData: points to the matrix data array

```
void riscv_mat_init_q31 (riscv_matrix_instance_q31 *S, uint16_t nRows, uint16_t nColumns, q31_t *pData)

Q31 matrix initialization.
```

Return none

Parameters

- [inout] S: points to an instance of the Q31 matrix structure
- [in] nRows: number of rows in the matrix
- [in] nColumns: number of columns in the matrix
- [in] pData: points to the matrix data array

Matrix Inverse

```
riscv status riscv mat inverse f16 (const
                                                        riscv matrix instance f16
                                                                                           *pSrc.
                                       riscv_matrix_instance_f16 *pDst)
riscv_status riscv_mat_inverse_f32 (const
                                                        riscv_matrix_instance_f32
                                                                                           *pSrc,
                                       riscv_matrix_instance_f32 *pDst)
riscv_status riscv_mat_inverse_f64 (const
                                                        riscv matrix instance f64
                                                                                           *pSrc.
                                       riscv_matrix_instance_f64 *pDst)
riscv_status riscv_mat_solve_lower_triangular_f16 (const
                                                                                             *lt.
                                                                  riscv_matrix_instance_f16
                                                           const
                                                                    riscv matrix instance f16
                                                           riscv_matrix_instance_f16 *dst)
                                                                   riscv matrix instance f32
riscv status riscv mat solve lower triangular f32 (const
                                                                                             *lt.
                                                           const
                                                                    riscv_matrix_instance_f32
                                                                                             *a,
                                                           riscv matrix instance f32 *dst)
riscv status riscv mat solve lower triangular f64 (const
                                                                   riscv matrix instance f64
                                                                                             *lt.
                                                                   riscv_matrix_instance_f64
                                                                                              *a,
                                                           const
                                                           riscv_matrix_instance_f64 *dst)
                                                                   riscv_matrix_instance_f16
riscv_status riscv_mat_solve_upper_triangular_f16 (const
                                                                                             *ut.
                                                                    riscv_matrix_instance_f16
                                                           const
                                                           riscv_matrix_instance_f16 *dst)
riscv_status riscv_mat_solve_upper_triangular_f32 (const
                                                                   riscv_matrix_instance_f32
                                                                                             *ut.
                                                           const
                                                                    riscv_matrix_instance_f32
                                                                                             *a,
                                                           riscv_matrix_instance_f32 *dst)
riscv status riscv mat solve upper triangular f64 (const riscv matrix instance f64
                                                                                             *ut,
                                                                   riscv_matrix_instance_f64
                                                                                              *a,
                                                           const
                                                           riscv_matrix_instance_f64 *dst)
```


group MatrixInv

Computes the inverse of a matrix.

The inverse is defined only if the input matrix is square and non-singular (the determinant is non-zero). The function checks that the input and output matrices are square and of the same size.

Matrix inversion is numerically sensitive and the NMSIS DSP library only supports matrix inversion of floating-point matrices.

Algorithm The Gauss-Jordan method is used to find the inverse. The algorithm performs a sequence of elementary row-operations until it reduces the input matrix to an identity matrix. Applying the same sequence of elementary row-operations to an identity matrix yields the inverse matrix. If the input matrix is singular, then the algorithm terminates and returns error status RISCV_MATH_SINGULAR.

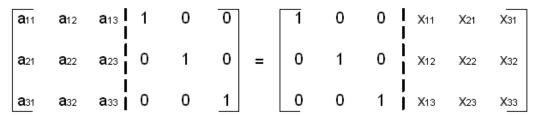

A is a 3 x 3 matrix and its inverse is X

Functions

riscv_status riscv_mat_inverse_f16 (const riscv_matrix_instance_f16 *pSrc, riscv_matrix_instance_f16 *pDst) *pSrc,

Floating-point matrix inverse.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed
- RISCV_MATH_SINGULAR : Input matrix is found to be singular (non-invertible)

Parameters

- [in] pSrc: points to input matrix structure. The source matrix is modified by the function.
- [out] pDst: points to output matrix structure

riscv_status riscv_mat_inverse_f32 (const riscv_matrix_instance_f32 *pSrc, riscv_matrix_instance_f32 *pDst) *pSrc,

Floating-point matrix inverse.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed
- RISCV_MATH_SINGULAR : Input matrix is found to be singular (non-invertible)

Parameters

- [in] pSrc: points to input matrix structure. The source matrix is modified by the function.
- [out] pDst: points to output matrix structure

riscv_status riscv_mat_inverse_f64 (const riscv_matrix_instance_f64 *pSrc, riscv_matrix_instance_f64 *pDst) *pSrc,

Floating-point (64 bit) matrix inverse.

Floating-point matrix inverse.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed
- RISCV_MATH_SINGULAR : Input matrix is found to be singular (non-invertible)

Parameters

- [in] pSrc: points to input matrix structure. The source matrix is modified by the function.
- [out] pDst: points to output matrix structure

```
riscv_status riscv_mat_solve_lower_triangular_f16 (const riscv_matrix_instance_f16 *lt, const riscv_matrix_instance_f16 *a, riscv_matrix_instance_f16 *dst)
```

Solve LT . X = A where LT is a lower triangular matrix.

Return The function returns RISCV_MATH_SINGULAR, if the system can't be solved.

Parameters

- [in] lt: The lower triangular matrix
- [in] a: The matrix a
- [out] dst: The solution X of $LT \cdot X = A$

```
riscv_status riscv_mat_solve_lower_triangular_f32 (const riscv_matrix_instance_f32 *lt, const riscv_matrix_instance_f32 *a, riscv_matrix_instance_f32 *dst)
```

Solve LT \cdot X = A where LT is a lower triangular matrix.

Return The function returns RISCV_MATH_SINGULAR, if the system can't be solved.

Parameters

- [in] lt: The lower triangular matrix
- [in] a: The matrix a
- [out] dst: The solution X of LT. X = A

```
riscv_status riscv_mat_solve_lower_triangular_f64 (const riscv_matrix_instance_f64 *lt, const riscv_matrix_instance_f64 *a, riscv_matrix_instance_f64 *dst)
```

Solve LT . X = A where LT is a lower triangular matrix.

Return The function returns RISCV_MATH_SINGULAR, if the system can't be solved.

Parameters

- [in] lt: The lower triangular matrix
- [in] a: The matrix a
- [out] dst: The solution X of LT . X = A

```
riscv_status riscv_mat_solve_upper_triangular_f16 (const riscv_matrix_instance_f16 *ut, const riscv_matrix_instance_f16 *a, riscv_matrix_instance_f16 *dst)
```

Solve UT . X = A where UT is an upper triangular matrix.

Return The function returns RISCV MATH SINGULAR, if the system can't be solved.

Parameters

- [in] ut: The upper triangular matrix
- [in] a: The matrix a
- [out] dst: The solution X of $UT \cdot X = A$

riscv_status riscv_mat_solve_upper_triangular_f32 (const riscv_matrix_instance_f32 *ut, const riscv_matrix_instance_f32 *a, riscv_matrix_instance_f32 *dst)

Solve UT \cdot X = A where UT is an upper triangular matrix.

Return The function returns RISCV_MATH_SINGULAR, if the system can't be solved.

Parameters

- [in] ut: The upper triangular matrix
- [in] a: The matrix a
- [out] dst: The solution X of $UT \cdot X = A$

riscv_status riscv_mat_solve_upper_triangular_f64 (const riscv_matrix_instance_f64 *ut, const riscv_matrix_instance_f64 *a, riscv_matrix_instance_f64 *dst)

Solve UT \cdot X = A where UT is an upper triangular matrix.

Return The function returns RISCV_MATH_SINGULAR, if the system can't be solved.

Parameters

- [in] ut: The upper triangular matrix
- [in] a: The matrix a
- [out] dst: The solution X of $UT \cdot X = A$

Matrix Multiplication

riscv status riscv mat mult f16 (const riscv matrix instance f16 *pSrcA, const riscv_matrix_instance_f16 riscv_matrix_instance_f16 *pSrcB, *pDst) riscv_status riscv_mat_mult_f32 (const riscv_matrix_instance_f32 *pSrcA, const riscv_matrix_instance_f32 *pSrcB, riscv_matrix_instance_f32 *pDst) riscv status riscv mat mult f64 (const riscv matrix instance f64 *pSrcA, const riscv_matrix_instance_f64 *pSrcB, riscv_matrix_instance_f64 *pDst)

```
riscy status riscy mat mult fast g15 (const
                                                           riscv matrix instance q15
                                                                                            *pSrcA,
                                           const
                                                           riscv_matrix_instance_q15
                                                                                            *pSrcB,
                                           riscv_matrix_instance_q15 *pDst, q15_t *pState)
riscv_status riscv_mat_mult_fast_q31 (const
                                                           riscv_matrix_instance_q31
                                                                                            *pSrcA,
                                                           riscv_matrix_instance_q31
                                                                                            *pSrcB,
                                           const
                                           riscv_matrix_instance_q31 *pDst)
riscv_status riscv_mat_mult_q15 (const
                                                 riscv_matrix_instance_q15
                                                                               *pSrcA,
                                                                                            const
                                    riscv_matrix_instance_q15
                                                                *pSrcB,
                                                                           riscv_matrix_instance_q15
                                    *pDst, q15_t *pState)
riscv_status riscv_mat_mult_q31 (const
                                                 riscv_matrix_instance_q31
                                                                               *pSrcA,
                                                                                            const
                                    riscv_matrix_instance_q31
                                                                *pSrcB,
                                                                           riscv_matrix_instance_q31
                                    *pDst)
riscv_status riscv_mat_mult_q7 (const
                                                riscv_matrix_instance_q7
                                                                               *pSrcA,
                                                                                            const
                                   riscv_matrix_instance_q7 *pSrcB, riscv_matrix_instance_q7 *pDst,
                                   q7_t *pState)
```

group MatrixMult

Multiplies two matrices.

Matrix multiplication is only defined if the number of columns of the first matrix equals the number of rows of the second matrix. Multiplying an $M \times N$ matrix with an $N \times P$ matrix results in an $M \times P$ matrix. When matrix size checking is enabled, the functions check: (1) that the inner dimensions of pSrcA and pSrcB are equal; and (2) that the size of the output matrix equals the outer dimensions of pSrcA and pSrcB.

Functions

```
riscv_status riscv_mat_mult_f16 (const riscv_matrix_instance_f16 *pSrcA, const riscv_matrix_instance_f16 *pSrcB, riscv_matrix_instance_f16 *pDst)
```

Floating-point matrix multiplication.

Return The function returns either RISCV_MATH_SIZE_MISMATCH or RISCV_MATH_SUCCESS based on the outcome of size checking.

Parameters

- [in] *pSrcA: points to the first input matrix structure
- [in] *pSrcB: points to the second input matrix structure
- [out] *pDst: points to output matrix structure

```
riscv_status riscv_mat_mult_f32 (const riscv_matrix_instance_f32 *pSrcA, const riscv_matrix_instance_f32 *pSrcB, riscv_matrix_instance_f32 *pDst)
```

Floating-point matrix multiplication.

Return The function returns either RISCV_MATH_SIZE_MISMATCH or RISCV_MATH_SUCCESS based on the outcome of size checking.

Parameters

- [in] *pSrcA: points to the first input matrix structure
- [in] *pSrcB: points to the second input matrix structure
- [out] *pDst: points to output matrix structure

```
riscv_status riscv_mat_mult_f64 (const riscv_matrix_instance_f64 *pSrcA, const riscv_matrix_instance_f64 *pSrcB, riscv_matrix_instance_f64 *pDst)
```

Floating-point matrix multiplication.

Return The function returns either RISCV_MATH_SIZE_MISMATCH or RISCV_MATH_SUCCESS based on the outcome of size checking.

Parameters

- [in] *pSrcA: points to the first input matrix structure
- [in] *pSrcB: points to the second input matrix structure
- [out] *pDst: points to output matrix structure

```
riscv_status riscv_mat_mult_fast_q15 (const riscv_matrix_instance_q15 *pSrcA, const riscv_matrix_instance_q15 *pSrcB, riscv_matrix_instance_q15 t*pState)
```

Q15 matrix multiplication (fast variant).

Q15 matrix multiplication (fast variant) for RISC-V Core with DSP enabled.

Return execution status

- RISCV MATH SUCCESS: Operation successful
- RISCV MATH SIZE MISMATCH: Matrix size check failed

Scaling and Overflow Behavior The difference between the function riscv_mat_mult_q15() and this fast variant is that the fast variant use a 32-bit rather than a 64-bit accumulator. The result of each 1.15 x 1.15 multiplication is truncated to 2.30 format. These intermediate results are accumulated in a 32-bit register in 2.30 format. Finally, the accumulator is saturated and converted to a 1.15 result.

The fast version has the same overflow behavior as the standard version but provides less precision since it discards the low 16 bits of each multiplication result. In order to avoid overflows completely the input signals must be scaled down. Scale down one of the input matrices by log2(numColsA) bits to avoid overflows, as a total of numColsA additions are computed internally for each output element.

Remark Refer to riscv_mat_mult_q15() for a slower implementation of this function which uses 64-bit accumulation to provide higher precision.

- [in] pSrcA: points to the first input matrix structure
- [in] pSrcB: points to the second input matrix structure
- [out] pDst: points to output matrix structure
- [in] pState: points to the array for storing intermediate results

```
riscv_status riscv_mat_mult_fast_q31 (const riscv_matrix_instance_q31 *pSrcA, const riscv_matrix_instance_q31 *pSrcB, riscv_matrix_instance_q31 *pDst)
```

- Q31 matrix multiplication (fast variant).
- Q31 matrix multiplication (fast variant) for RISC-V Core with DSP enabled.

Return execution status

- RISCV MATH SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Scaling and Overflow Behavior The difference between the function riscv_mat_mult_q31() and this fast variant is that the fast variant use a 32-bit rather than a 64-bit accumulator. The result of each 1.31 x 1.31 multiplication is truncated to 2.30 format. These intermediate results are accumulated in a 32-bit register in 2.30 format. Finally, the accumulator is saturated and converted to a 1.31 result.

The fast version has the same overflow behavior as the standard version but provides less precision since it discards the low 32 bits of each multiplication result. In order to avoid overflows completely the input signals must be scaled down. Scale down one of the input matrices by log2(numColsA) bits to avoid overflows, as a total of numColsA additions are computed internally for each output element.

Remark Refer to riscv_mat_mult_q31() for a slower implementation of this function which uses 64-bit accumulation to provide higher precision.

Parameters

- [in] pSrcA: points to the first input matrix structure
- [in] pSrcB: points to the second input matrix structure
- [out] pDst: points to output matrix structure

```
riscv_status riscv_mat_mult_q15 (const riscv_matrix_instance_q15 *pSrcA, const riscv_matrix_instance_q15 *pSrcB, riscv_matrix_instance_q15 *pDst, q15_t *pState)
```

Q15 matrix multiplication.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The inputs to the multiplications are in 1.15 format and multiplications yield a 2.30 result. The 2.30 intermediate results are accumulated in a 64-bit accumulator in 34.30 format. This approach provides 33 guard bits and there is no risk of overflow. The 34.30 result is then truncated to 34.15 format by discarding the low 15 bits and then saturated to 1.15 format.

Refer to riscy mat mult fast q15() for a faster but less precise version of this function.

Parameters

- [in] pSrcA: points to the first input matrix structure
- [in] pSrcB: points to the second input matrix structure
- [out] pDst: points to output matrix structure
- [in] pState: points to the array for storing intermediate results (Unused)

```
riscv_status riscv_mat_mult_q31 (const riscv_matrix_instance_q31 *pSrcA, const riscv_matrix_instance_q31 *pSrcB, riscv_matrix_instance_q31 *pDst)
```

Q31 matrix multiplication.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV MATH SIZE MISMATCH: Matrix size check failed

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The accumulator has a 2.62 format and maintains full precision of the intermediate multiplication results but provides only a single guard bit. There is no saturation on intermediate additions. Thus, if the accumulator overflows it wraps around and distorts the result. The input signals should be scaled down to avoid intermediate overflows. The input is thus scaled down by log2(numColsA) bits to avoid overflows, as a total of numColsA additions are performed internally. The 2.62 accumulator is right shifted by 31 bits and saturated to 1.31 format to yield the final result.

Remark Refer to riscv_mat_mult_fast_q31() for a faster but less precise implementation of this function.

Parameters

- [in] pSrcA: points to the first input matrix structure
- [in] pSrcB: points to the second input matrix structure
- [out] pDst: points to output matrix structure

```
riscv_status riscv_mat_mult_q7 (const riscv_matrix_instance_q7 *pSrcA, const riscv_matrix_instance_q7 *pSrcB, riscv_matrix_instance_q7 *pDst, q7_t *pState)
```

Q7 matrix multiplication.

Scaling and Overflow Behavior:

Return The function returns either RISCV_MATH_SIZE_MISMATCH or RISCV_MATH_SUCCESS based on the outcome of size checking.

Parameters

- [in] *pSrcA: points to the first input matrix structure
- [in] *pSrcB: points to the second input matrix structure
- [out] *pDst: points to output matrix structure
- [in] *pState: points to the array for storing intermediate results (Unused in some versions)

The function is implemented using a 32-bit internal accumulator saturated to 1.7 format.

Matrix Scale

```
riscv_status riscv_mat_scale_f16 (const riscv_matrix_instance_f16 *pSrc, float16_t scale, riscv_matrix_instance_f16 *pDst)

riscv_status riscv_mat_scale_f32 (const riscv_matrix_instance_f32 *pSrc, float32_t scale, riscv_matrix_instance_f32 *pDst)

riscv_status riscv_mat_scale_q15 (const riscv_matrix_instance_q15 *pSrc, q15_t scaleFract, int32_t shift, riscv_matrix_instance_q15 *pDst)
```

riscv_status riscv_mat_scale_q31 (const riscv_matrix_instance_q31 *pSrc, q31_t scaleFract, int32_t shift, riscv matrix instance q31 *pDst)

group MatrixScale

Multiplies a matrix by a scalar. This is accomplished by multiplying each element in the matrix by the scalar. For example: The function checks to make sure that the input and output matrices are of the same size.

In the fixed-point Q15 and Q31 functions, scale is represented by a fractional multiplication scaleFract and an arithmetic shift shift. The shift allows the gain of the scaling operation to exceed 1.0. The overall scale factor applied to the fixed-point data is

Functions

riscv_status riscv_mat_scale_f16 (const riscv_matrix_instance_f16 *pSrc, float16_t scale, riscv_matrix_instance_f16 *pDst)

Floating-point matrix scaling.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrc: points to input matrix
- [in] scale: scale factor to be applied
- [out] pDst: points to output matrix structure

riscv_status riscv_mat_scale_f32 (const riscv_matrix_instance_f32 *pSrc, float32_t scale, riscv_matrix_instance_f32 *pDst)

Floating-point matrix scaling.

Return execution status

- RISCV MATH SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrc: points to input matrix
- [in] scale: scale factor to be applied
- [out] pDst: points to output matrix structure

riscv_status riscv_mat_scale_q15 (const riscv_matrix_instance_q15 *pSrc, q15_t scaleFract, int32_t shift, riscv_matrix_instance_q15 *pDst)

Q15 matrix scaling.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Scaling and Overflow Behavior The input data *pSrc and scaleFract are in 1.15 format. These are multiplied to yield a 2.30 intermediate result and this is shifted with saturation to 1.15 format.

Parameters

- [in] pSrc: points to input matrix
- [in] scaleFract: fractional portion of the scale factor
- [in] shift: number of bits to shift the result by
- [out] pDst: points to output matrix structure

```
riscv_status riscv_mat_scale_q31 (const riscv_matrix_instance_q31 *pSrc, q31_t scaleFract, int32_t shift, riscv_matrix_instance_q31 *pDst)

Q31 matrix scaling.
```

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Scaling and Overflow Behavior The input data *pSrc and scaleFract are in 1.31 format. These are multiplied to yield a 2.62 intermediate result which is shifted with saturation to 1.31 format.

Parameters

- [in] pSrc: points to input matrix
- [in] scaleFract: fractional portion of the scale factor
- [in] shift: number of bits to shift the result by
- [out] pDst: points to output matrix structure

Matrix Subtraction

```
riscv_status riscv_mat_sub_f16 (const
                                                riscv_matrix_instance_f16
                                                                               *pSrcA,
                                                                                             const
                                   riscv_matrix_instance_f16 *pSrcB, riscv_matrix_instance_f16 *pDst)
riscv_status riscv_mat_sub_f32 (const
                                                 riscv_matrix_instance_f32
                                                                               *pSrcA,
                                                                                             const
                                   riscv_matrix_instance_f32 *pSrcB, riscv_matrix_instance_f32 *pDst)
                                                                               *pSrcA,
riscv_status riscv_mat_sub_f64 (const
                                                riscv_matrix_instance_f64
                                                                                             const
                                   riscv_matrix_instance_f64 *pSrcB, riscv_matrix_instance_f64 *pDst)
riscv_status riscv_mat_sub_q15 (const
                                                riscv_matrix_instance_q15
                                                                               *pSrcA,
                                                                                             const
                                               _instance_q15 *pSrcB, riscv_matrix_instance_q15 *pDst)
                                   riscv_matrix_
riscv_status riscv_mat_sub_q31 (const
                                                riscv_matrix_instance_q31
                                                                                *pSrcA,
                                                                                             const
                                   riscv_matrix_instance_q31 *pSrcB, riscv_matrix_instance_q31 *pDst)
group MatrixSub
     Subtract
                       matrices.
                                          The
                                                 functions
                two
                                                             check
                                                                           make
                                                                                           that
                                                                                                  pSrcA,
                                                                                    sure
```

Functions

riscv_status riscv_mat_sub_f16 (const riscv_matrix_instance_f16 *pSrcA, const riscv_matrix_instance_f16 *pSrcB, riscv_matrix_instance_f16 *pDst)

Floating-point matrix subtraction.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrcA: points to the first input matrix structure
- [in] pSrcB: points to the second input matrix structure
- [out] pDst: points to output matrix structure

riscv_status riscv_mat_sub_f32 (const riscv_matrix_instance_f32 *pSrcA, const riscv_matrix_instance_f32 *pSrcB, riscv_matrix_instance_f32 *pDst)

Floating-point matrix subtraction.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrcA: points to the first input matrix structure
- [in] pSrcB: points to the second input matrix structure
- [out] pDst: points to output matrix structure

riscv_status riscv_mat_sub_f64 (const riscv_matrix_instance_f64 *pSrcA, const riscv_matrix_instance_f64 *pSrcB, riscv_matrix_instance_f64 *pDst)

Floating-point matrix subtraction.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrcA: points to the first input matrix structure
- [in] pSrcB: points to the second input matrix structure
- [out] pDst: points to output matrix structure

```
riscv_status riscv_mat_sub_q15 (const riscv_matrix_instance_q15 *pSrcA, const riscv_matrix_instance_q15 *pSrcB, riscv_matrix_instance_q15 *pDst)
```

Q15 matrix subtraction.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q15 range [0x8000 0x7FFF] are saturated.

Parameters

- [in] pSrcA: points to the first input matrix structure
- [in] pSrcB: points to the second input matrix structure
- [out] pDst: points to output matrix structure

```
riscv_status riscv_mat_sub_q31 (const riscv_matrix_instance_q31 *pSrcA, const riscv_matrix_instance_q31 *pSrcB, riscv_matrix_instance_q31 *pDst)
```

Q31 matrix subtraction.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q31 range [0x8000000 0x7FFFFFFF] are saturated.

Parameters

- [in] pSrcA: points to the first input matrix structure
- [in] pSrcB: points to the second input matrix structure
- [out] pDst: points to output matrix structure

Matrix Transpose

```
riscv_status riscv_mat_trans_f16 (const riscv_matrix_instance_f16 *pSrc, riscv_matrix_instance_f16 *pDst)

riscv_status riscv_mat_trans_f32 (const riscv_matrix_instance_f32 *pSrc, riscv_matrix_instance_f32 *pDst)

riscv_status riscv_mat_trans_f64 (const riscv_matrix_instance_f64 *pSrc, riscv_matrix_instance_f64 *pDst)

riscv_status riscv_mat_trans_f64 (const riscv_matrix_instance_f64 *pSrc, riscv_matrix_instance_f64 *pDst)

riscv_matrix_instance_q15 *pDst)
```


riscv_status
$$riscv_mat_trans_q31$$
 (const riscv_matrix_instance_q31 *pSrc, riscv_matrix_instance_q31 *pDst)

riscv_status riscv_mat_trans_q7 (const riscv_matrix_instance_q7 *pSrc, riscv_matrix_instance_q7 *pDst)

group MatrixTrans

Tranposes a matrix.

Transposing an M x N matrix flips it around the center diagonal and results in an N x M matrix.

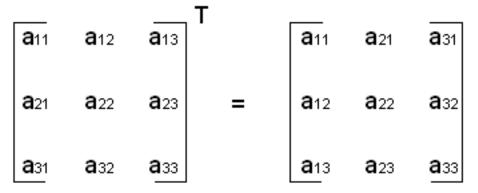

Functions

riscv_status riscv_mat_trans_f16 (const riscv_matrix_instance_f16 *pSrc, riscv_matrix_instance_f16 *pDst) *pSrc,

Floating-point matrix transpose.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrc: points to input matrix
- [out] pDst: points to output matrix

riscv_status riscv_mat_trans_f32 (const riscv_matrix_instance_f32 *pSrc, riscv_matrix_instance_f32 *pDst) *pSrc,

Floating-point matrix transpose.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrc: points to input matrix
- [out] pDst: points to output matrix

riscv_status riscv_mat_trans_f64 (const riscv_matrix_instance_f64 *pSrc, riscv_matrix_instance_f64 *pDst)
Floating-point matrix transpose.

riouting point matrix transpose.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrc: points to input matrix
- [out] pDst: points to output matrix

riscv_status riscv_mat_trans_q15 (const riscv_matrix_instance_q15 *pSrc, riscv_matrix_instance_q15 *pDst)

Q15 matrix transpose.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrc: points to input matrix
- [out] pDst: points to output matrix

riscv_status riscv_mat_trans_q31 (const riscv_matrix_instance_q31 *pSrc, riscv_matrix_instance_q31 *pDst)

Q31 matrix transpose.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrc: points to input matrix
- [out] pDst: points to output matrix

riscv_status riscv_mat_trans_q7 (const riscv_matrix_instance_q7 *pSrc, riscv_matrix_instance_q7 *pDst)

Q7 matrix transpose.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_SIZE_MISMATCH: Matrix size check failed

Parameters

- [in] pSrc: points to input matrix
- [out] pDst: points to output matrix

Matrix Vector Multiplication

```
void riscv_mat_vec_mult_f16 (const riscv_matrix_instance_f16 *pSrcMat, const float16_t *pVec, float16_t *pDst)
```

void riscv_mat_vec_mult_f32 (const riscv_matrix_instance_f32 *pSrcMat, const float32_t *pVec, float32_t *pDst)

void riscv_mat_vec_mult_q15 (const riscv_matrix_instance_q15 *pSrcMat, const q15_t *pVec, q15_t *pDst)

void riscv_mat_vec_mult_q31 (const riscv_matrix_instance_q31 *pSrcMat, const q31_t *pVec, q31_t *pDst)

void riscv_mat_vec_mult_q7 (const riscv_matrix_instance_q7 *pSrcMat, const q7_t *pVec, q7_t *pDst)

group MatrixVectMult

Multiplies a matrix and a vector.

Functions

void riscv_mat_vec_mult_f16 (const riscv_matrix_instance_f16 *pSrcMat, const float16_t *pVec, float16_t *pDst)

Floating-point matrix and vector multiplication.

Parameters

- [in] *pSrcMat: points to the input matrix structure
- [in] *pVec: points to input vector
- [out] *pDst: points to output vector

void riscv_mat_vec_mult_f32 (const riscv_matrix_instance_f32 *pSrcMat, const float32_t *pVec, float32_t *pDst)

Floating-point matrix and vector multiplication.

Parameters

- [in] *pSrcMat: points to the input matrix structure
- [in] *pVec: points to input vector
- [out] *pDst: points to output vector

void riscv_mat_vec_mult_q15 (const riscv_matrix_instance_q15 *pSrcMat, const q15_t *pVec, q15_t *pDst)

Q15 matrix and vector multiplication.

Parameters

- [in] *pSrcMat: points to the input matrix structure
- [in] *pVec: points to input vector
- [out] *pDst: points to output vector

void riscv_mat_vec_mult_q31 (const riscv_matrix_instance_q31 *pSrcMat, const q31_t *pVec, q31_t *pDst)

Q31 matrix and vector multiplication.

Parameters

- [in] *pSrcMat: points to the input matrix structure
- [in] *pVec: points to the input vector
- [out] *pDst: points to the output vector

```
void riscv_mat_vec_mult_q7 (const riscv_matrix_instance_q7 *pSrcMat, const q7_t *pVec, q7_t *pDst)

Q7 matrix and vector multiplication.
```

Parameters

- [in] *pSrcMat: points to the input matrix structure
- [in] *pVec: points to the input vector
- [out] *pDst: points to the output vector

group groupMatrix

This set of functions provides basic matrix math operations. The functions operate on matrix data structures. For example, the type definition for the floating-point matrix structure is shown below: There are similar definitions for Q15 and Q31 data types.

The structure specifies the size of the matrix and then points to an array of data. The array is of size numRows X numCols and the values are arranged in row order. That is, the matrix element (i, j) is stored at:

Init Functions There is an associated initialization function for each type of matrix data structure. The initialization function sets the values of the internal structure fields. Refer to riscv_mat_init_f32(), riscv_mat_init_q31() and riscv_mat_init_q15() for floating-point, Q31 and Q15 types, respectively.

Use of the initialization function is optional. However, if initialization function is used then the instance structure cannot be placed into a const data section. To place the instance structure in a const data section, manually initialize the data structure. For example: where nRows specifies the number of rows, nColumns specifies the number of columns, and pData points to the data array.

Size Checking By default all of the matrix functions perform size checking on the input and output matrices. For example, the matrix addition function verifies that the two input matrices and the output matrix all have the same number of rows and columns. If the size check fails the functions return: Otherwise the functions return There is some overhead associated with this matrix size checking. The matrix size checking is enabled via the #define within the library project settings. By default this macro is defined and size checking is enabled. By changing the project settings and undefining this macro size checking is eliminated and the functions run a bit faster. With size checking disabled the functions always return RISCV_MATH_SUCCESS.

3.3.11 Quaternion Math Functions

Quaternion conversions

Quaternion to Rotation

```
void riscv_quaternion2rotation_f32 (const float32_t *pInputQuaternions, float32_t *pOutputRo-
tations, uint32_t nbQuaternions)
```

group QuatRot

Conversions from quaternion to rotation.

Functions

void riscv_quaternion2rotation_f32 (const float32_t *pInputQuaternions, float32_t *pOut-putRotations, uint32_t nbQuaternions)

Conversion of quaternion to equivalent rotation matrix.

The quaternion a + ib + jc + kd is converted into rotation matrix: Rotation matrix is saved in row order: R00 R01 R02 R10 R11 R12 R20 R21 R22

Return none.

Format of rotation matrix

Parameters

- [in] pInputQuaternions: points to an array of normalized quaternions
- [out] pOutputRotations: points to an array of 3x3 rotations (in row order)
- [in] nbQuaternions: number of quaternions in the array

Rotation to Quaternion

```
void riscv_rotation2quaternion_f32 (const float32_t *pInputRotations, float32_t *pOut-putQuaternions, uint32_t nbQuaternions)
```

group RotQuat

Conversions from rotation to quaternion.

Functions

```
void riscv_rotation2quaternion_f32 (const float32_t *pInputRotations, float32_t *pOut-putQuaternions, uint32_t nbQuaternions)
```

Conversion of a rotation matrix to an equivalent quaternion.

Conversion of a rotation matrix to equivalent quaternion.

 ${\bf q}$ and - ${\bf q}$ are representing the same rotation. This ambiguity must be taken into account when using the output of this function.

Return none.

Parameters

- [in] pInputRotations: points to an array 3x3 rotation matrix (in row order)
- [out] pOutputQuaternions: points to an array quaternions
- [in] nbQuaternions: number of quaternions in the array

group QuatConv

Conversions between quaternion and rotation representations.

Quaternion Conjugate

```
void riscv_quaternion_conjugate_f32 (const float32_t *pInputQuaternions, float32_t *pConjugateQuaternions, uint32_t nbQuaternions)
```

group QuatConjugate

Compute the conjugate of a quaternion.

Functions

void riscv_quaternion_conjugate_f32 (const float32_t *pInputQuaternions, float32_t *pConjugateQuaternions, uint32_t nbQuaternions)
Floating-point quaternion conjugates.

Return none

Parameters

- [in] pInputQuaternions: points to the input vector of quaternions
- [out] pConjugateQuaternions: points to the output vector of conjugate quaternions
- [in] nbQuaternions: number of quaternions in each vector

Quaternion Inverse

```
void riscv_quaternion_inverse_f32 (const float32_t *pInputQuaternions, float32_t *pInverse-
Quaternions, uint32_t nbQuaternions)
group QuatInverse
```

Compute the inverse of a quaternion.

Functions

```
void riscv_quaternion_inverse_f32 (const float32_t *pInputQuaternions, float32_t *pInverseQuaternions, uint32_t nbQuaternions)

Floating-point quaternion inverse.
```

Return none

Parameters

- [in] pInputQuaternions: points to the input vector of quaternions
- [out] pInverseQuaternions: points to the output vector of inverse quaternions
- [in] nbQuaternions: number of quaternions in each vector

Quaternion Norm

group QuatNorm

Compute the norm of a quaternion.

Functions

Floating-point quaternion Norm.

Return none

Parameters

- [in] pInputQuaternions: points to the input vector of quaternions
- [out] pNorms: points to the output vector of norms
- [in] nbQuaternions: number of quaternions in the input vector

Quaternion normalization

```
void riscv_quaternion_normalize_f32 (const float32_t *pInputQuaternions, float32_t *pNormalizedQuaternions, uint32_t nbQuaternions)
```

group QuatNormalized

Compute a normalized quaternion.

Functions

```
void riscv_quaternion_normalize_f32 (const float32_t *pInputQuaternions, float32_t *pNormalizedQuaternions, uint32_t nbQuaternions)
Floating-point normalization of quaternions.
```

Return none

Parameters

- [in] pInputQuaternions: points to the input vector of quaternions
- [out] pNormalizedQuaternions: points to the output vector of normalized quaternions
- [in] nbQuaternions: number of quaternions in each vector

Quaternion Product

Elementwise Quaternion Product

```
void riscv_quaternion_product_f32 (const float32_t *qa, const float32_t *qb, float32_t *qr, uint32_t nbQuaternions)
```

group QuatProdVect

Compute the elementwise product of quaternions.

Functions

```
void riscv_quaternion_product_f32 (const float32_t *qa, const float32_t *qb, float32_t *qr, uint32_t nbQuaternions)
Floating-point elementwise product two quaternions.
```

Return none

Parameters

- [in] ga: first array of quaternions
- [in] qb: second array of quaternions
- [out] qr: elementwise product of quaternions
- [in] nbQuaternions: number of quaternions in the array

Quaternion Product

```
\label{eq:const_float_32_t *qa, const_float_32_t *qa, const_float_32_t *qb, float_32_t *qr)} \\ \text{void } \textbf{riscv\_quaternion\_product\_single\_f32} \ (\textbf{const} \ \ float_32_t *qr)
```

group QuatProdSingle

Compute the product of two quaternions.

Functions

```
void riscv_quaternion_product_single_f32 (const float32_t *qa, const float32_t *qb, float32_t *qr)
```

Floating-point product of two quaternions.

Return none

Parameters

- [in] qa: first quaternion
- [in] qb: second quaternion
- [out] qr: product of two quaternions

group QuatProd

Compute the product of quaternions.

group groupQuaternionMath

Functions to operates on quaternions and convert between a rotation and quaternion representation.

3.3.12 Statistics Functions

Absolute Maximum

```
void riscv_absmax_f16 (const float16_t *pSrc, uint32_t blockSize, float16_t *pResult, uint32_t *pIndex)

void riscv_absmax_f32 (const float32_t *pSrc, uint32_t blockSize, float32_t *pResult, uint32_t *pIndex)

void riscv_absmax_q15 (const q15_t *pSrc, uint32_t blockSize, q15_t *pResult, uint32_t *pIndex)

void riscv_absmax_q31 (const q31_t *pSrc, uint32_t blockSize, q31_t *pResult, uint32_t *pIndex)

void riscv_absmax_q7 (const q7_t *pSrc, uint32_t blockSize, q7_t *pResult, uint32_t *pIndex)

void riscv_absmax_q7 (const q7_t *pSrc, uint32_t blockSize, q7_t *pResult, uint32_t *pIndex)

group AbsMax
```

Computes the maximum value of absolute values of an array of data. The function returns both the maximum value and its position within the array. There are separate functions for floating-point, Q31, Q15, and Q7 data types.

Functions

```
void riscv_absmax_f16 (const float16_t *pSrc, uint32_t blockSize, float16_t *pResult, uint32_t *pIndex)

Maximum value of absolute values of a floating-point vector.
```

C 1

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: maximum value returned here
- [out] pIndex: index of maximum value returned here

void **riscv_absmax_f32** (**const** float32_t *pSrc, uint32_t blockSize, float32_t *pResult, uint32_t *pIndex)

Maximum value of absolute values of a floating-point vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: maximum value returned here
- [out] pIndex: index of maximum value returned here

void **riscv_absmax_q15** (**const** q15_t *pSrc, uint32_t blockSize, q15_t *pResult, uint32_t *pIndex) Maximum value of absolute values of a Q15 vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: maximum value returned here
- [out] pIndex: index of maximum value returned here

void **riscv_absmax_q31** (**const** q31_t *pSrc, uint32_t blockSize, q31_t *pResult, uint32_t *pIndex) Maximum value of absolute values of a Q31 vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: maximum value returned here
- [out] pIndex: index of maximum value returned here

void **riscv_absmax_q7** (**const** q7_t *pSrc, uint32_t blockSize, q7_t *pResult, uint32_t *pIndex) Maximum value of absolute values of a Q7 vector.

Return none

Parameters

• [in] pSrc: points to the input vector

- [in] blockSize: number of samples in input vector
- [out] pResult: maximum value returned here
- [out] pIndex: index of maximum value returned here

Absolute Minimum

```
void riscv_absmin_f16 (const float16_t *pSrc, uint32_t blockSize, float16_t *pResult, uint32_t *pIndex)

void riscv_absmin_f32 (const float32_t *pSrc, uint32_t blockSize, float32_t *pResult, uint32_t *pIndex)

void riscv_absmin_q15 (const q15_t *pSrc, uint32_t blockSize, q15_t *pResult, uint32_t *pIndex)

void riscv_absmin_q31 (const q31_t *pSrc, uint32_t blockSize, q31_t *pResult, uint32_t *pIndex)

void riscv_absmin_q3 (const q31_t *pSrc, uint32_t blockSize, q31_t *pResult, uint32_t *pIndex)

void riscv_absmin_q7 (const q7_t *pSrc, uint32_t blockSize, q7_t *pResult, uint32_t *pIndex)

group AbsMin
```

Computes the minimum value of absolute values of an array of data. The function returns both the minimum value and its position within the array. There are separate functions for floating-point, Q31, Q15, and Q7 data types.

Functions

```
void riscv_absmin_f16 (const float16_t *pSrc, uint32_t blockSize, float16_t *pResult, uint32_t *pIndex)

Minimum value of absolute values of a floating-point vector.
```

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: minimum value returned here
- [out] pIndex: index of minimum value returned here

```
void riscv_absmin_f32 (const float32_t *pSrc, uint32_t blockSize, float32_t *pResult, uint32_t *pIndex)
```

Minimum value of absolute values of a floating-point vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: minimum value returned here
- [out] pIndex: index of minimum value returned here

void **riscv_absmin_q15** (**const** q15_t *pSrc, uint32_t blockSize, q15_t *pResult, uint32_t *pIndex) Minimum value of absolute values of a Q15 vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: minimum value returned here
- [out] pIndex: index of minimum value returned here

void **riscv_absmin_q31** (**const** q31_t *pSrc, uint32_t blockSize, q31_t *pResult, uint32_t *pIndex) Minimum value of absolute values of a Q31 vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: minimum value returned here
- [out] pIndex: index of minimum value returned here

void riscv_absmin_q7 (const q7_t *pSrc, uint32_t blockSize, q7_t *pResult, uint32_t *pIndex)
Minimum value of absolute values of a Q7 vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: minimum value returned here
- [out] pIndex: index of minimum value returned here

Entropy

```
float16_t riscv_entropy_f16 (const float16_t *pSrcA, uint32_t blockSize)
float32_t riscv_entropy_f32 (const float32_t *pSrcA, uint32_t blockSize)
float64_t riscv_entropy_f64 (const float64_t *pSrcA, uint32_t blockSize)
group Entropy
Computes the entropy of a distribution
```

Functions

```
float16_t riscv_entropy_f16 (const float16_t *pSrcA, uint32_t blockSize)
Entropy.

Return Entropy -Sum(p ln p)

Parameters
```

- [in] pSrcA: Array of input values.
- [in] blockSize: Number of samples in the input array.

float32_t riscv_entropy_f32 (const float32_t *pSrcA, uint32_t blockSize) Entropy.

Return Entropy -Sum(p ln p)

Parameters

- [in] pSrcA: Array of input values.
- [in] blockSize: Number of samples in the input array.

float64_t riscv_entropy_f64 (const float64_t *pSrcA, uint32_t blockSize) Entropy.

Return Entropy -Sum(p ln p)

Parameters

- [in] pSrcA: Array of input values.
- [in] blockSize: Number of samples in the input array.

Kullback-Leibler divergence

```
float16_t riscv_kullback_leibler_f16 (const float16_t *pSrcA, const float16_t *pSrcB, uint32_t blockSize)

float32_t riscv_kullback_leibler_f32 (const float32_t *pSrcA, const float32_t *pSrcB, uint32_t blockSize)

float64_t riscv_kullback_leibler_f64 (const float64_t *pSrcA, const float64_t *pSrcB, uint32_t blockSize)
```

group Kullback-Leibler

Computes the Kullback-Leibler divergence between two distributions

Functions

```
float16_t riscv_kullback_leibler_f16 (const float16_t *pSrcA, const float16_t *pSrcB, uint32_t blockSize)
```

Kullback-Leibler.

Distribution A may contain 0 with Neon version. Result will be right but some exception flags will be set. Distribution B must not contain 0 probability.

Return Kullback-Leibler divergence D(A || B)

Parameters

- [in] *pSrcA: points to an array of input values for probaility distribution A.
- [in] *pSrcB: points to an array of input values for probaility distribution B.
- [in] blockSize: number of samples in the input array.

```
float32_t riscv_kullback_leibler_f32 (const float32_t *pSrcA, const float32_t *pSrcB, uint32 t blockSize)
```

Kullback-Leibler.

Distribution A may contain 0 with Neon version. Result will be right but some exception flags will be set. Distribution B must not contain 0 probability.

Return Kullback-Leibler divergence D(A || B)

Parameters

- [in] *pSrcA: points to an array of input values for probaility distribution A.
- [in] *pSrcB: points to an array of input values for probaility distribution B.
- [in] blockSize: number of samples in the input array.

```
float64_t riscv_kullback_leibler_f64 (const float64_t *pSrcA, const float64_t *pSrcB, uint32_t blockSize)

Kullback-Leibler.
```

Return Kullback-Leibler divergence D(A || B)

Parameters

- [in] *pSrcA: points to an array of input values for probaility distribution A.
- [in] *pSrcB: points to an array of input values for probability distribution B.
- [in] blockSize: number of samples in the input array.

LogSumExp

```
float16_t riscv_logsumexp_dot_prod_f16 (const float16_t *pSrcA, const float16_t *pSrcB, uint32_t blockSize, float16_t *pTmpBuffer)

float32_t riscv_logsumexp_dot_prod_f32 (const float32_t *pSrcA, const float32_t *pSrcB, uint32_t blockSize, float32_t *pTmpBuffer)

float16_t riscv_logsumexp_f16 (const float16_t *in, uint32_t blockSize)

float32_t riscv_logsumexp_f32 (const float32_t *in, uint32_t blockSize)

group LogSumExp
```

LogSumExp optimizations to compute sum of probabilities with Gaussian distributions

Functions

Dot product with log arithmetic.

Vectors are containing the log of the samples

Return The log of the dot product.

Parameters

- [in] *pSrcA: points to the first input vector
- [in] *pSrcB: points to the second input vector

- [in] blockSize: number of samples in each vector
- [in] *pTmpBuffer: temporary buffer of length blockSize

float32_t riscv_logsumexp_dot_prod_f32 (const float32_t *pSrcA, const float32_t *pSrcB, uint32_t blockSize, float32_t *pTmpBuffer)

Dot product with log arithmetic.

Vectors are containing the log of the samples

Return The log of the dot product.

Parameters

- [in] *pSrcA: points to the first input vector
- [in] *pSrcB: points to the second input vector
- [in] blockSize: number of samples in each vector
- [in] *pTmpBuffer: temporary buffer of length blockSize

float16_t riscv_logsumexp_f16 (const float16_t *in, uint32_t blockSize)

Computation of the LogSumExp.

In probabilistic computations, the dynamic of the probability values can be very wide because they come from gaussian functions. To avoid underflow and overflow issues, the values are represented by their log. In this representation, multiplying the original exp values is easy: their logs are added. But adding the original exp values is requiring some special handling and it is the goal of the LogSumExp function.

If the values are x1...xn, the function is computing:

 $\ln(\exp(x1) + \dots + \exp(xn))$ and the computation is done in such a way that rounding issues are minimised.

The max xm of the values is extracted and the function is computing: $xm + \ln(\exp(x1 - xm) + ... + \exp(xn - xm))$

Return LogSumExp

Parameters

- [in] *in: Pointer to an array of input values.
- [in] blockSize: Number of samples in the input array.

float32 triscv logsumexp f32 (const float32 t*in, uint32 t blockSize)

Computation of the LogSumExp.

In probabilistic computations, the dynamic of the probability values can be very wide because they come from gaussian functions. To avoid underflow and overflow issues, the values are represented by their log. In this representation, multiplying the original exp values is easy: their logs are added. But adding the original exp values is requiring some special handling and it is the goal of the LogSumExp function.

If the values are x1...xn, the function is computing:

ln(exp(x1) + ... + exp(xn)) and the computation is done in such a way that rounding issues are minimised.

The max xm of the values is extracted and the function is computing: $xm + \ln(\exp(x1 - xm) + \dots + \exp(xn - xm))$

Return LogSumExp

Parameters

- [in] *in: Pointer to an array of input values.
- [in] blockSize: Number of samples in the input array.

Maximum

```
void riscv_max_f16 (const float16_t *pSrc, uint32_t blockSize, float16_t *pResult, uint32_t *pIndex) void riscv_max_f32 (const float32_t *pSrc, uint32_t blockSize, float32_t *pResult, uint32_t *pIndex) void riscv_max_no_idx_f16 (const float16_t *pSrc, uint32_t blockSize, float32_t *pResult) void riscv_max_no_idx_f32 (const float32_t *pSrc, uint32_t blockSize, float32_t *pResult) void riscv_max_q15 (const q15_t *pSrc, uint32_t blockSize, q15_t *pResult, uint32_t *pIndex) void riscv_max_q31 (const q31_t *pSrc, uint32_t blockSize, q31_t *pResult, uint32_t *pIndex) void riscv_max_q7 (const q7_t *pSrc, uint32_t blockSize, q7_t *pResult, uint32_t *pIndex) group Max
```

Computes the maximum value of an array of data. The function returns both the maximum value and its position within the array. There are separate functions for floating-point, Q31, Q15, and Q7 data types.

Functions

```
void riscv_max_f16 (const float16_t *pSrc, uint32_t blockSize, float16_t *pResult, uint32_t *pIn-dex)

Maximum value of a floating-point vector.
```

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: maximum value returned here
- [out] pIndex: index of maximum value returned here

```
void riscv_max_f32 (const float32_t *pSrc, uint32_t blockSize, float32_t *pResult, uint32_t *pIn-
dex)

Maximum value of a floating-point vector.
```

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: maximum value returned here
- [out] pIndex: index of maximum value returned here

void **riscv_max_no_idx_f16** (**const** float16_t *pSrc, uint32_t blockSize, float16_t *pResult) Maximum value of a floating-point vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: maximum value returned here
- void **riscv_max_no_idx_f32** (**const** float32_t *pSrc, uint32_t blockSize, float32_t *pResult) Maximum value of a floating-point vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: maximum value returned here
- void **riscv_max_q15** (**const** q15_t *pSrc, uint32_t blockSize, q15_t *pResult, uint32_t *pIndex) Maximum value of a Q15 vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: maximum value returned here
- [out] pIndex: index of maximum value returned here
- void **riscv_max_q31** (**const** q31_t *pSrc, uint32_t blockSize, q31_t *pResult, uint32_t *pIndex) Maximum value of a Q31 vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: maximum value returned here
- [out] pIndex: index of maximum value returned here
- void **riscv_max_q7** (**const** q7_t *pSrc, uint32_t blockSize, q7_t *pResult, uint32_t *pIndex) Maximum value of a Q7 vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: maximum value returned here
- [out] pIndex: index of maximum value returned here

Mean

```
void riscv_mean_f16 (const float16_t *pSrc, uint32_t blockSize, float16_t *pResult) void riscv_mean_f32 (const float32_t *pSrc, uint32_t blockSize, float32_t *pResult) void riscv_mean_q15 (const q15_t *pSrc, uint32_t blockSize, q15_t *pResult) void riscv_mean_q31 (const q31_t *pSrc, uint32_t blockSize, q31_t *pResult) void riscv_mean_q7 (const q7_t *pSrc, uint32_t blockSize, q7_t *pResult) void riscv_mean_q7 (const q7_t *pSrc, uint32_t blockSize, q7_t *pResult) group mean
```

Calculates the mean of the input vector. Mean is defined as the average of the elements in the vector. The underlying algorithm is used:

There are separate functions for floating-point, Q31, Q15, and Q7 data types.

Functions

```
void riscv_mean_f16 (const float16_t *pSrc, uint32_t blockSize, float16_t *pResult) Mean value of a floating-point vector.
```

Return none

Parameters

- [in] pSrc: points to the input vector.
- [in] blockSize: number of samples in input vector.
- [out] pResult: mean value returned here.

```
void riscv_mean_f32 (const float32_t *pSrc, uint32_t blockSize, float32_t *pResult) Mean value of a floating-point vector.
```

Return none

Parameters

- [in] pSrc: points to the input vector.
- [in] blockSize: number of samples in input vector.
- [out] pResult: mean value returned here.

```
void riscv_mean_q15 (const q15_t *pSrc, uint32_t blockSize, q15_t *pResult) Mean value of a Q15 vector.
```

Return none

Scaling and Overflow Behavior The function is implemented using a 32-bit internal accumulator. The input is represented in 1.15 format and is accumulated in a 32-bit accumulator in 17.15 format. There is no risk of internal overflow with this approach, and the full precision of intermediate result is preserved. Finally, the accumulator is truncated to yield a result of 1.15 format.

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: mean value returned here

```
void riscv_mean_q31 (const q31_t *pSrc, uint32_t blockSize, q31_t *pResult) Mean value of a Q31 vector.
```

Return none

Scaling and Overflow Behavior The function is implemented using a 64-bit internal accumulator. The input is represented in 1.31 format and is accumulated in a 64-bit accumulator in 33.31 format. There is no risk of internal overflow with this approach, and the full precision of intermediate result is preserved. Finally, the accumulator is truncated to yield a result of 1.31 format.

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: mean value returned here

```
void riscv_mean_q7 (const q7_t *pSrc, uint32_t blockSize, q7_t *pResult) Mean value of a Q7 vector.
```

Return none

Scaling and Overflow Behavior The function is implemented using a 32-bit internal accumulator. The input is represented in 1.7 format and is accumulated in a 32-bit accumulator in 25.7 format. There is no risk of internal overflow with this approach, and the full precision of intermediate result is preserved. Finally, the accumulator is truncated to yield a result of 1.7 format.

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: mean value returned here

Minimum

```
void riscv_min_f16 (const float16_t *pSrc, uint32_t blockSize, float16_t *pResult, uint32_t *pIndex) void riscv_min_f32 (const float32_t *pSrc, uint32_t blockSize, float32_t *pResult, uint32_t *pIndex) void riscv_min_q15 (const q15_t *pSrc, uint32_t blockSize, q15_t *pResult, uint32_t *pIndex) void riscv_min_q31 (const q31_t *pSrc, uint32_t blockSize, q31_t *pResult, uint32_t *pIndex) void riscv_min_q7 (const q7_t *pSrc, uint32_t blockSize, q7_t *pResult, uint32_t *pIndex) void riscv_min_q7 (const q7_t *pSrc, uint32_t blockSize, q7_t *pResult, uint32_t *pIndex) group Min
```

Computes the minimum value of an array of data. The function returns both the minimum value and its position within the array. There are separate functions for floating-point, Q31, Q15, and Q7 data types.

Functions

```
void riscv_min_f16 (const float16_t *pSrc, uint32_t blockSize, float16_t *pResult, uint32_t *pIn-dex)

Minimum value of a floating-point vector.
```

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: minimum value returned here
- [out] pIndex: index of minimum value returned here

void **riscv_min_f32** (**const** float32_t *pSrc, uint32_t blockSize, float32_t *pResult, uint32_t *pIn-dex)

Minimum value of a floating-point vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: minimum value returned here
- [out] pIndex: index of minimum value returned here

void riscv_min_q15 (const q15_t *pSrc, uint32_t blockSize, q15_t *pResult, uint32_t *pIndex)
Minimum value of a Q15 vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: minimum value returned here
- [out] pIndex: index of minimum value returned here

void **riscv_min_q31** (**const** q31_t *pSrc, uint32_t blockSize, q31_t *pResult, uint32_t *pIndex) Minimum value of a Q31 vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: minimum value returned here
- [out] pIndex: index of minimum value returned here

void **riscv_min_q7** (**const** q7_t *pSrc, uint32_t blockSize, q7_t *pResult, uint32_t *pIndex) Minimum value of a Q7 vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector

- [out] pResult: minimum value returned here
- [out] pIndex: index of minimum value returned here

Power

```
void riscv_power_f16 (const float16_t *pSrc, uint32_t blockSize, float16_t *pResult) void riscv_power_f32 (const float32_t *pSrc, uint32_t blockSize, float32_t *pResult) void riscv_power_q15 (const q15_t *pSrc, uint32_t blockSize, q63_t *pResult) void riscv_power_q31 (const q31_t *pSrc, uint32_t blockSize, q63_t *pResult) void riscv_power_q7 (const q7_t *pSrc, uint32_t blockSize, q31_t *pResult) void riscv_power_q7 (const q7_t *pSrc, uint32_t blockSize, q31_t *pResult) group power
```

Calculates the sum of the squares of the elements in the input vector. The underlying algorithm is used:

There are separate functions for floating point, Q31, Q15, and Q7 data types.

Since the result is not divided by the length, those functions are in fact computing something which is more an energy than a power.

Functions

```
void riscv_power_f16 (const float16_t *pSrc, uint32_t blockSize, float16_t *pResult) Sum of the squares of the elements of a floating-point vector.
```

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: sum of the squares value returned here

void **riscv_power_f32** (**const** float32_t *pSrc, uint32_t blockSize, float32_t *pResult) Sum of the squares of the elements of a floating-point vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: sum of the squares value returned here

```
void riscv_power_q15 (const q15_t *pSrc, uint32_t blockSize, q63_t *pResult) Sum of the squares of the elements of a Q15 vector.
```

Return none

Scaling and Overflow Behavior The function is implemented using a 64-bit internal accumulator. The input is represented in 1.15 format. Intermediate multiplication yields a 2.30 format, and this result is

added without saturation to a 64-bit accumulator in 34.30 format. With 33 guard bits in the accumulator, there is no risk of overflow, and the full precision of the intermediate multiplication is preserved. Finally, the return result is in 34.30 format.

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: sum of the squares value returned here

```
void riscv_power_q31 (const q31_t *pSrc, uint32_t blockSize, q63_t *pResult) Sum of the squares of the elements of a Q31 vector.
```

Return none

Scaling and Overflow Behavior The function is implemented using a 64-bit internal accumulator. The input is represented in 1.31 format. Intermediate multiplication yields a 2.62 format, and this result is truncated to 2.48 format by discarding the lower 14 bits. The 2.48 result is then added without saturation to a 64-bit accumulator in 16.48 format. With 15 guard bits in the accumulator, there is no risk of overflow, and the full precision of the intermediate multiplication is preserved. Finally, the return result is in 16.48 format.

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: sum of the squares value returned here

```
void riscv_power_q7 (const q7_t *pSrc, uint32_t blockSize, q31_t *pResult) Sum of the squares of the elements of a Q7 vector.
```

Return none

Scaling and Overflow Behavior The function is implemented using a 32-bit internal accumulator. The input is represented in 1.7 format. Intermediate multiplication yields a 2.14 format, and this result is added without saturation to an accumulator in 18.14 format. With 17 guard bits in the accumulator, there is no risk of overflow, and the full precision of the intermediate multiplication is preserved. Finally, the return result is in 18.14 format.

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: sum of the squares value returned here

Root mean square (RMS)

```
void riscv_rms_f16 (const float16_t *pSrc, uint32_t blockSize, float16_t *pResult) void riscv_rms_f32 (const float32_t *pSrc, uint32_t blockSize, float32_t *pResult) void riscv_rms_q15 (const q15_t *pSrc, uint32_t blockSize, q15_t *pResult) void riscv_rms_q31 (const q31_t *pSrc, uint32_t blockSize, q31_t *pResult)
```

group RMS

Calculates the Root Mean Square of the elements in the input vector. The underlying algorithm is used:

There are separate functions for floating point, Q31, and Q15 data types.

Functions

void **riscv_rms_f16** (**const** float16_t **pSrc*, uint32_t *blockSize*, float16_t **pResult*) Root Mean Square of the elements of a floating-point vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: root mean square value returned here

void **riscv_rms_f32** (**const** float32_t *pSrc, uint32_t blockSize, float32_t *pResult) Root Mean Square of the elements of a floating-point vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: root mean square value returned here

void **riscv_rms_q15** (**const** q15_t *pSrc, uint32_t blockSize, q15_t *pResult) Root Mean Square of the elements of a Q15 vector.

Return none

Scaling and Overflow Behavior The function is implemented using a 64-bit internal accumulator. The input is represented in 1.15 format. Intermediate multiplication yields a 2.30 format, and this result is added without saturation to a 64-bit accumulator in 34.30 format. With 33 guard bits in the accumulator, there is no risk of overflow, and the full precision of the intermediate multiplication is preserved. Finally, the 34.30 result is truncated to 34.15 format by discarding the lower 15 bits, and then saturated to yield a result in 1.15 format.

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: root mean square value returned here

void **riscv_rms_q31** (**const** q31_t *pSrc, uint32_t blockSize, q31_t *pResult) Root Mean Square of the elements of a Q31 vector.

Return none

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The input is represented in 1.31 format, and intermediate multiplication yields a 2.62 format. The accumulator maintains full precision of the intermediate multiplication results, but provides only a single guard bit. There is no saturation on intermediate additions. If the accumulator overflows, it wraps around and distorts the result. In order to avoid overflows completely, the input signal must be scaled down by log2(blockSize) bits, as a total of blockSize additions are performed internally. Finally, the 2.62 accumulator is right shifted by 31 bits to yield a 1.31 format value.

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: root mean square value returned here

Standard deviation

```
void riscv_std_f16 (const float16_t *pSrc, uint32_t blockSize, float16_t *pResult) void riscv_std_f32 (const float32_t *pSrc, uint32_t blockSize, float32_t *pResult) void riscv_std_q15 (const q15_t *pSrc, uint32_t blockSize, q15_t *pResult) void riscv_std_q31 (const q31_t *pSrc, uint32_t blockSize, q31_t *pResult) void riscv_std_q31 (const q31_t *pSrc, uint32_t blockSize, q31_t *pResult) group STD
```

Calculates the standard deviation of the elements in the input vector.

The float implementation is relying on riscv_var_f32 which is using a two-pass algorithm to avoid problem of numerical instabilities and cancellation errors.

Fixed point versions are using the standard textbook algorithm since the fixed point numerical behavior is different from the float one.

Algorithm for fixed point versions is summarized below:

There are separate functions for floating point, Q31, and Q15 data types.

Functions

```
void riscv_std_f16 (const float16_t *pSrc, uint32_t blockSize, float16_t *pResult) Standard deviation of the elements of a floating-point vector.
```

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: standard deviation value returned here

```
void riscv_std_f32 (const float32_t *pSrc, uint32_t blockSize, float32_t *pResult) Standard deviation of the elements of a floating-point vector.
```

Return none

Parameters

• [in] pSrc: points to the input vector

- [in] blockSize: number of samples in input vector
- [out] pResult: standard deviation value returned here

void **riscv_std_q15** (**const** q15_t **pSrc*, uint32_t *blockSize*, q15_t **pResult*) Standard deviation of the elements of a Q15 vector.

Return none

Scaling and Overflow Behavior The function is implemented using a 64-bit internal accumulator. The input is represented in 1.15 format. Intermediate multiplication yields a 2.30 format, and this result is added without saturation to a 64-bit accumulator in 34.30 format. With 33 guard bits in the accumulator, there is no risk of overflow, and the full precision of the intermediate multiplication is preserved. Finally, the 34.30 result is truncated to 34.15 format by discarding the lower 15 bits, and then saturated to yield a result in 1.15 format.

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: standard deviation value returned here

void **riscv_std_q31** (**const** q31_t **pSrc*, uint32_t *blockSize*, q31_t **pResult*) Standard deviation of the elements of a Q31 vector.

Return none

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The input is represented in 1.31 format, which is then downshifted by 8 bits which yields 1.23, and intermediate multiplication yields a 2.46 format. The accumulator maintains full precision of the intermediate multiplication results, but provides only a 16 guard bits. There is no saturation on intermediate additions. If the accumulator overflows it wraps around and distorts the result. In order to avoid overflows completely the input signal must be scaled down by log2(blockSize)-8 bits, as a total of blockSize additions are performed internally. After division, internal variables should be Q18.46 Finally, the 18.46 accumulator is right shifted by 15 bits to yield a 1.31 format value.

Parameters

- [in] pSrc: points to the input vector.
- [in] blockSize: number of samples in input vector.
- [out] pResult: standard deviation value returned here.

Variance

```
void riscv_var_f16 (const float16_t *pSrc, uint32_t blockSize, float16_t *pResult) void riscv_var_f32 (const float32_t *pSrc, uint32_t blockSize, float32_t *pResult) void riscv_var_q15 (const q15_t *pSrc, uint32_t blockSize, q15_t *pResult) void riscv_var_q31 (const q31_t *pSrc, uint32_t blockSize, q31_t *pResult) void riscv_var_q31 (const q31_t *pSrc, uint32_t blockSize, q31_t *pResult) group variance
```

Calculates the variance of the elements in the input vector. The underlying algorithm used is the direct method sometimes referred to as the two-pass method:

There are separate functions for floating point, Q31, and Q15 data types.

Functions

void **riscv_var_f16** (**const** float16_t **pSrc*, uint32_t *blockSize*, float16_t **pResult*) Variance of the elements of a floating-point vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: variance value returned here

void **riscv_var_f32** (**const** float32_t *pSrc, uint32_t blockSize, float32_t *pResult) Variance of the elements of a floating-point vector.

Return none

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: variance value returned here

void **riscv_var_q15** (**const** q15_t **pSrc*, uint32_t *blockSize*, q15_t **pResult*) Variance of the elements of a Q15 vector.

Return none

Scaling and Overflow Behavior The function is implemented using a 64-bit internal accumulator. The input is represented in 1.15 format. Intermediate multiplication yields a 2.30 format, and this result is added without saturation to a 64-bit accumulator in 34.30 format. With 33 guard bits in the accumulator, there is no risk of overflow, and the full precision of the intermediate multiplication is preserved. Finally, the 34.30 result is truncated to 34.15 format by discarding the lower 15 bits, and then saturated to yield a result in 1.15 format.

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: variance value returned here

void **riscv_var_q31** (**const** q31_t **pSrc*, uint32_t *blockSize*, q31_t **pResult*) Variance of the elements of a Q31 vector.

Return none

Scaling and Overflow Behavior The function is implemented using an internal 64-bit accumulator. The input is represented in 1.31 format, which is then downshifted by 8 bits which yields 1.23, and intermediate multiplication yields a 2.46 format. The accumulator maintains full precision of the intermediate multiplication results, and as a consequence has only 16 guard bits. There is no saturation on intermediate additions. If the accumulator overflows it wraps around and distorts the result. In order to avoid overflows completely the input signal must be scaled down by log2(blockSize)-8 bits, as a total of blockSize additions are performed internally. After division, internal variables should be Q18.46 Finally, the 18.46 accumulator is right shifted by 15 bits to yield a 1.31 format value.

Parameters

- [in] pSrc: points to the input vector
- [in] blockSize: number of samples in input vector
- [out] pResult: variance value returned here

group groupStats

3.3.13 Support Functions

Barycenter

```
void riscv_barycenter_f16 (const float16_t *in, const float16_t *weights, float16_t *out, uint32_t nbVectors, uint32_t vecDim)
```

void riscv_barycenter_f32 (const float32_t *in, const float32_t *weights, float32_t *out, uint32_t nbVectors, uint32_t vecDim)

group barycenter

Barycenter of weighted vectors

Functions

```
void riscv_barycenter_f16 (const float16_t *in, const float16_t *weights, float16_t *out, uint32_t nbVectors, uint32_t vecDim)

Barycenter.
```

Return None

Parameters

- [in] *in: List of vectors
- [in] *weights: Weights of the vectors
- [out] *out: Barycenter
- [in] nbVectors: Number of vectors
- [in] vecDim: Dimension of space (vector dimension)

void riscv_barycenter_f32 (const float32_t *in, const float32_t *weights, float32_t *out, uint32_t nbVectors, uint32_t vecDim)

Barycenter.

Return None

Parameters

- [in] *in: List of vectors
- [in] *weights: Weights of the vectors
- [out] *out: Barycenter
- [in] nbVectors: Number of vectors
- [in] vecDim: Dimension of space (vector dimension)

Vector sorting algorithms

```
\label{eq:const_f32} \begin{tabular}{ll} void {\tt riscv\_merge\_sort\_f32} & *S, & float 32_t *pSrc, & float 32_t *pSrc, & float 32_t *pDst, & int 32_t & block Size \end{tabular}
```

void riscv_merge_sort_init_f32 (riscv_merge_sort_instance_f32 *S, riscv_sort_dir dir, float32_t *buffer)

void **riscv_sort_f32** (**const** riscv_sort_instance_f32 *S, float32_t *pSrc, float32_t *pDst, uint32_t block-Size)

void riscv_sort_init_f32 (riscv_sort_instance_f32 *S, riscv_sort_alg alg, riscv_sort_dir dir)

group Sorting

Sort the elements of a vector

There are separate functions for floating-point, Q31, Q15, and Q7 data types.

Functions

void riscv_bitonic_sort_f32 (const riscv_sort_instance_f32 *S, float32_t *pSrc, float32_t *pDst, uint32 t blockSize)

Parameters

- [in] S: points to an instance of the sorting structure.
- [in] pSrc: points to the block of input data.
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process.

```
void riscv_bubble_sort_f32 (const riscv_sort_instance_f32 *S, float32_t *pSrc, float32_t *pDst, uint32_t blockSize)
```

Algorithm The bubble sort algorithm is a simple comparison algorithm that reads the elements of a vector from the beginning to the end, compares the adjacent ones and swaps them if they are in the wrong order. The procedure is repeated until there is nothing left to swap. Bubble sort is fast for input vectors that are nearly sorted.

It's an in-place algorithm. In order to obtain an out-of-place function, a memcpy of the source vector is performed

Parameters

- [in] S: points to an instance of the sorting structure.
- [in] pSrc: points to the block of input data.
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process.

```
void riscv_heap_sort_f32 (const riscv_sort_instance_f32 *S, float32_t *pSrc, float32_t *pDst, uint32_t blockSize)
```

Algorithm The heap sort algorithm is a comparison algorithm that divides the input array into a sorted and an unsorted region, and shrinks the unsorted region by extracting the largest element and moving it to the sorted region. A heap data structure is used to find the maximum.

It's an in-place algorithm. In order to obtain an out-of-place function, a memcpy of the source vector is performed.

Parameters

- [in] S: points to an instance of the sorting structure.
- [in] pSrc: points to the block of input data.
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process.

```
void riscv_insertion_sort_f32 (const riscv_sort_instance_f32 *S, float32_t *pSrc, float32_t *pDst, uint32 t blockSize)
```

Algorithm The insertion sort is a simple sorting algorithm that reads all the element of the input array and removes one element at a time, finds the location it belongs in the final sorted list, and inserts it there.

It's an in-place algorithm. In order to obtain an out-of-place function, a memcpy of the source vector is performed.

Parameters

- [in] S: points to an instance of the sorting structure.
- [in] pSrc: points to the block of input data.
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process.

```
void riscv_merge_sort_f32 (const riscv_merge_sort_instance_f32 *S, float32_t *pSrc, float32_t *pDst, uint32_t blockSize)
```

Algorithm The merge sort algorithm is a comparison algorithm that divide the input array in sublists and merge them to produce longer sorted sublists until there is only one list remaining.

A work array is always needed. It must be allocated by the user linked to the instance at initialization time.

It's an in-place algorithm. In order to obtain an out-of-place function, a memcpy of the source vector is performed

Parameters

- [in] S: points to an instance of the sorting structure.
- [in] pSrc: points to the block of input data.
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process.

```
void riscv_merge_sort_init_f32 (riscv_merge_sort_instance_f32 *S, riscv_sort_dir dir, float32_t *buffer)
```

Parameters

- [inout] S: points to an instance of the sorting structure.
- [in] dir: Sorting order.
- [in] buffer: Working buffer.

```
void riscv_quick_sort_f32 (const riscv_sort_instance_f32 *S, float32_t *pSrc, float32_t *pDst, uint32_t blockSize)
```

Algorithm The quick sort algorithm is a comparison algorithm that divides the input array into two smaller sub-arrays and recursively sort them. An element of the array (the pivot) is chosen, all the elements with values smaller than the pivot are moved before the pivot, while all elements with values greater than the pivot are moved after it (partition).

In this implementation the Hoare partition scheme has been used [Hoare, C. A. R. (1 January 1962). "Quicksort". The Computer Journal. 5 (1): 10...16.] The first element has always been chosen as the pivot. The partition algorithm guarantees that the returned pivot is never placed outside the vector, since it is returned only when the pointers crossed each other. In this way it isn't possible to obtain empty partitions and infinite recursion is avoided.

It's an in-place algorithm. In order to obtain an out-of-place function, a memcpy of the source vector is performed.

Parameters

- [in] S: points to an instance of the sorting structure.
- [inout] pSrc: points to the block of input data.
- [out] pDst: points to the block of output data.
- [in] blockSize: number of samples to process.

```
void riscv_selection_sort_f32 (const riscv_sort_instance_f32 *S, float32_t *pSrc, float32_t *pDst, uint32_t blockSize)
```

Algorithm The Selection sort algorithm is a comparison algorithm that divides the input array into a sorted and an unsorted sublist (initially the sorted sublist is empty and the unsorted sublist is the input array), looks for the smallest (or biggest) element in the unsorted sublist, swapping it with the leftmost one, and moving the sublists boundary one element to the right.

It's an in-place algorithm. In order to obtain an out-of-place function, a memcpy of the source vector is performed.

Parameters

- [in] S: points to an instance of the sorting structure.
- [in] pSrc: points to the block of input data.
- [out] pDst: points to the block of output data
- [in] blockSize: number of samples to process.

```
void riscv_sort_f32 (const riscv_sort_instance_f32 *S, float32_t *pSrc, float32_t *pDst, uint32_t blockSize)

Generic sorting function.
```

Parameters

- [in] S: points to an instance of the sorting structure.
- [in] pSrc: points to the block of input data.
- [out] pDst: points to the block of output data.
- [in] blockSize: number of samples to process.

void riscv_sort_init_f32 (riscv_sort_instance_f32 *S, riscv_sort_alg alg, riscv_sort_dir dir)

Parameters

- [inout] S: points to an instance of the sorting structure.
- [in] alg: Selected algorithm.
- [in] dir: Sorting order.

Vector Copy

```
void riscv_copy_f16 (const float16_t *pSrc, float16_t *pDst, uint32_t blockSize) void riscv_copy_f32 (const float32_t *pSrc, float32_t *pDst, uint32_t blockSize) void riscv_copy_q15 (const q15_t *pSrc, q15_t *pDst, uint32_t blockSize) void riscv_copy_q31 (const q31_t *pSrc, q31_t *pDst, uint32_t blockSize) void riscv_copy_q7 (const q7_t *pSrc, q7_t *pDst, uint32_t blockSize) void riscv_copy_q7 (const q7_t *pSrc, q7_t *pDst, uint32_t blockSize) group copy
```

Copies sample by sample from source vector to destination vector.

There are separate functions for floating point, Q31, Q15, and Q7 data types.

Functions

```
void riscv_copy_f16 (const float16_t *pSrc, float16_t *pDst, uint32_t blockSize) Copies the elements of a f16 vector.
```

Copies the elements of a floating-point vector.

Return none

Parameters

- [in] pSrc: points to input vector
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

void **riscv_copy_f32** (**const** float32_t *pSrc, float32_t *pDst, uint32_t blockSize) Copies the elements of a floating-point vector.

Return none

Parameters

- [in] pSrc: points to input vector
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

void **riscv_copy_q15** (**const** q15_t *pSrc, q15_t *pDst, uint32_t blockSize) Copies the elements of a Q15 vector.

Return none

Parameters

- [in] pSrc: points to input vector
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

void **riscv_copy_q31** (**const** q31_t *pSrc, q31_t *pDst, uint32_t blockSize) Copies the elements of a Q31 vector.

Return none

Parameters

- [in] pSrc: points to input vector
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

```
void riscv_copy_q7 (const q7_t *pSrc, q7_t *pDst, uint32_t blockSize) Copies the elements of a Q7 vector.
```

Return none

Parameters

- [in] pSrc: points to input vector
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

Convert 16-bit floating point value

```
void riscv_f16_to_float (const float16_t *pSrc, float32_t *pDst, uint32_t blockSize)
void riscv_f16_to_q15 (const float16_t *pSrc, q15_t *pDst, uint32_t blockSize)
group f16_to_x
```

Functions

```
void riscv_f16_to_float (const float16_t *pSrc, float32_t *pDst, uint32_t blockSize) Converts the elements of the f16 vector to f32 vector.
```

Converts the elements of the floating-point vector to Q31 vector.

Return none

Parameters

- [in] pSrc: points to the f16 input vector
- [out] pDst: points to the f32 output vector
- [in] blockSize: number of samples in each vector

```
void riscv_f16_to_q15 (const float16_t *pSrc, q15_t *pDst, uint32_t blockSize)

Converts the elements of the f16 vector to Q15 vector.
```

Converts the elements of the floating-point vector to Q31 vector.

Return none

Details The equation used for the conversion process is:

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q15 range [0x8000 0x7FFF] are saturated.

Note In order to apply rounding in scalar version, the library should be rebuilt with the ROUNDING macro defined in the preprocessor section of project options.

Parameters

- [in] pSrc: points to the f16 input vector
- [out] pDst: points to the Q15 output vector
- [in] blockSize: number of samples in each vector

Vector Fill

```
void riscv_fill_f16 (float16_t value, float16_t *pDst, uint32_t blockSize) void riscv_fill_f32 (float32_t value, float32_t *pDst, uint32_t blockSize) void riscv_fill_q15 (q15_t value, q15_t *pDst, uint32_t blockSize) void riscv_fill_q31 (q31_t value, q31_t *pDst, uint32_t blockSize) void riscv_fill_q7 (q7_t value, q7_t *pDst, uint32_t blockSize) void riscv_fill_q7 (q7_t value, q7_t *pDst, uint32_t blockSize) group Fill
```

Fills the destination vector with a constant value.

There are separate functions for floating point, Q31, Q15, and Q7 data types.

Functions

void **riscv_fill_f16** (float16_t *value*, float16_t **pDst*, uint32_t *blockSize*)
Fills a constant value into a f16 vector.

Fills a constant value into a floating-point vector.

Return none

Parameters

- [in] value: input value to be filled
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

void **riscv_fill_f32** (float32_t *value*, float32_t **pDst*, uint32_t *blockSize*) Fills a constant value into a floating-point vector.

Return none

Parameters

- [in] value: input value to be filled
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

void **riscv_fill_q15** (q15_t *value*, q15_t **pDst*, uint32_t *blockSize*) Fills a constant value into a Q15 vector.

Return none

Parameters

- [in] value: input value to be filled
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

void **riscv_fill_q31** (q31_t *value*, q31_t **pDst*, uint32_t *blockSize*) Fills a constant value into a Q31 vector.

Return none

Parameters

- [in] value: input value to be filled
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

void **riscv_fill_q7** (q7_t *value*, q7_t **pDst*, uint32_t *blockSize*) Fills a constant value into a Q7 vector.

Return none

Parameters

- [in] value: input value to be filled
- [out] pDst: points to output vector
- [in] blockSize: number of samples in each vector

Convert 32-bit floating point value

```
void riscv_float_to_f16 (const float32_t *pSrc, float16_t *pDst, uint32_t blockSize) void riscv_float_to_q15 (const float32_t *pSrc, q15_t *pDst, uint32_t blockSize) void riscv_float_to_q31 (const float32_t *pSrc, q31_t *pDst, uint32_t blockSize) void riscv_float_to_q7 (const float32_t *pSrc, q7_t *pDst, uint32_t blockSize) void riscv_float_to_q7 (const float32_t *pSrc, q7_t *pDst, uint32_t blockSize) group float_to_x
```

Functions

void **riscv_float_to_f16** (**const** float32_t *pSrc, float16_t *pDst, uint32_t blockSize) Converts the elements of the floating-point vector to f16 vector.

Converts the elements of the floating-point vector to Q31 vector.

Return none

Parameters

- [in] pSrc: points to the f32 input vector
- [out] pDst: points to the f16 output vector
- [in] blockSize: number of samples in each vector

void riscv_float_to_q15 (const float32_t *pSrc, q15_t *pDst, uint32_t blockSize)

Converts the elements of the floating-point vector to Q15 vector.

Return none

Details The equation used for the conversion process is:

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q15 range [0x8000 0x7FFF] are saturated.

Note In order to apply rounding, the library should be rebuilt with the ROUNDING macro defined in the preprocessor section of project options.

Parameters

- [in] pSrc: points to the floating-point input vector
- [out] pDst: points to the Q15 output vector
- [in] blockSize: number of samples in each vector

```
void riscv_float_to_q31 (const float32_t *pSrc, q31_t *pDst, uint32_t blockSize)
```

Converts the elements of the floating-point vector to Q31 vector.

Return none

Details The equation used for the conversion process is:

Scaling and Overflow Behavior The function uses saturating arithmetic. Results outside of the allowable Q31 range[0x80000000 0x7FFFFFFF] are saturated.

Note In order to apply rounding, the library should be rebuilt with the ROUNDING macro defined in the preprocessor section of project options.

Parameters

- [in] pSrc: points to the floating-point input vector
- [out] pDst: points to the Q31 output vector
- [in] blockSize: number of samples in each vector

```
void riscv_float_to_q7 (const float32_t *pSrc, q7_t *pDst, uint32_t blockSize)
```

Converts the elements of the floating-point vector to Q7 vector.

Return none.

Description:

The equation used for the conversion process is:

Scaling and Overflow Behavior:

The function uses saturating arithmetic. Results outside of the allowable Q7 range [0x80 0x7F] will be saturated.

Note In order to apply rounding, the library should be rebuilt with the ROUNDING macro defined in the preprocessor section of project options.

Parameters

- [in] *pSrc: points to the floating-point input vector
- [out] *pDst: points to the Q7 output vector

• [in] blockSize: length of the input vector

Convert 16-bit Integer value

```
void riscv_q15_to_f16 (const q15_t *pSrc, float16_t *pDst, uint32_t blockSize) void riscv_q15_to_float (const q15_t *pSrc, float32_t *pDst, uint32_t blockSize) void riscv_q15_to_q31 (const q15_t *pSrc, q31_t *pDst, uint32_t blockSize) void riscv_q15_to_q7 (const q15_t *pSrc, q7_t *pDst, uint32_t blockSize) group q15_to_x
```

Functions

```
void riscv_q15_to_f16 (const q15_t *pSrc, float16_t *pDst, uint32_t blockSize)

Converts the elements of the Q15 vector to f16 vector.
```

Converts the elements of the floating-point vector to Q31 vector.

Return none

Details The equation used for the conversion process is:

Parameters

- [in] pSrc: points to the Q15 input vector
- [out] pDst: points to the f16 output vector
- [in] blockSize: number of samples in each vector

```
void riscv_q15_to_float (const q15_t *pSrc, float32_t *pDst, uint32_t blockSize)

Converts the elements of the Q15 vector to floating-point vector.
```

Return none

Details The equation used for the conversion process is:

Parameters

- [in] pSrc: points to the Q15 input vector
- [out] pDst: points to the floating-point output vector
- [in] blockSize: number of samples in each vector

```
void riscv_q15_to_q31 (const q15_t *pSrc, q31_t *pDst, uint32_t blockSize) Converts the elements of the Q15 vector to Q31 vector.
```

Return none

Details The equation used for the conversion process is:

Parameters

- [in] pSrc: points to the Q15 input vector
- [out] pDst: points to the Q31 output vector
- [in] blockSize: number of samples in each vector

```
void riscv_q15_to_q7 (const q15_t *pSrc, q7_t *pDst, uint32_t blockSize) Converts the elements of the Q15 vector to Q7 vector.
```

Return none

Details The equation used for the conversion process is:

Parameters

- [in] pSrc: points to the Q15 input vector
- [out] pDst: points to the Q7 output vector
- [in] blockSize: number of samples in each vector

Convert 32-bit Integer value

```
void riscv_q31_to_float (const q31_t *pSrc, float32_t *pDst, uint32_t blockSize) void riscv_q31_to_q15 (const q31_t *pSrc, q15_t *pDst, uint32_t blockSize) void riscv_q31_to_q7 (const q31_t *pSrc, q7_t *pDst, uint32_t blockSize) group q31_to_x
```

Functions

```
void riscv_q31_to_float (const q31_t *pSrc, float32_t *pDst, uint32_t blockSize) Converts the elements of the Q31 vector to floating-point vector.
```

Return none

Details The equation used for the conversion process is:

Parameters

- [in] pSrc: points to the Q31 input vector
- [out] pDst: points to the floating-point output vector
- [in] blockSize: number of samples in each vector

```
void riscv_q31_to_q15 (const q31_t *pSrc, q15_t *pDst, uint32_t blockSize)
Converts the elements of the Q31 vector to Q15 vector.
```

Return none

Details The equation used for the conversion process is:

Parameters

- [in] pSrc: points to the Q31 input vector
- [out] pDst: points to the Q15 output vector
- [in] blockSize: number of samples in each vector

```
void riscv_q31_to_q7 (const q31_t *pSrc, q7_t *pDst, uint32_t blockSize) Converts the elements of the Q31 vector to Q7 vector.
```

Return none

Details The equation used for the conversion process is:

Parameters

- [in] pSrc: points to the Q31 input vector
- [out] pDst: points to the Q7 output vector
- [in] blockSize: number of samples in each vector

Convert 8-bit Integer value

```
void riscv_q7_to_float (const q7_t *pSrc, float32_t *pDst, uint32_t blockSize) void riscv_q7_to_q15 (const q7_t *pSrc, q15_t *pDst, uint32_t blockSize) void riscv_q7_to_q31 (const q7_t *pSrc, q31_t *pDst, uint32_t blockSize) group q7_to_x
```

Functions

```
void riscv_q7_to_float (const q7_t *pSrc, float32_t *pDst, uint32_t blockSize) Converts the elements of the Q7 vector to floating-point vector.
```

Return none

Details The equation used for the conversion process is:

Parameters

- [in] pSrc: points to the Q7 input vector
- [out] pDst: points to the floating-point output vector
- [in] blockSize: number of samples in each vector

```
void riscv_q7_to_q15 (const q7_t *pSrc, q15_t *pDst, uint32_t blockSize) Converts the elements of the Q7 vector to Q15 vector.
```

Return none

Details The equation used for the conversion process is:

Parameters

- [in] pSrc: points to the Q7 input vector
- [out] pDst: points to the Q15 output vector
- [in] blockSize: number of samples in each vector

```
void riscv_q7_to_q31 (const q7_t *pSrc, q31_t *pDst, uint32_t blockSize) Converts the elements of the Q7 vector to Q31 vector.
```

Return none

Details The equation used for the conversion process is:

Parameters

• [in] pSrc: points to the Q7 input vector

- [out] pDst: points to the Q31 output vector
- [in] blockSize: number of samples in each vector

Weighted Sum

float32_t riscv_weighted_sum_f32 (const float32_t *in, const float32_t *weigths, uint32_t block-Size)

group weightedsum

Weighted sum of values

Functions

float16_t riscv_weighted_sum_f16 (const float16_t *in, const float16_t *weigths, uint32_t blockSize)

Weighted sum.

Return Weighted sum

Parameters

- [in] *in: Array of input values.
- [in] *weigths: Weights
- [in] blockSize: Number of samples in the input array.

float32_t riscv_weighted_sum_f32 (const float32_t *in, const float32_t *weigths, uint32_t blockSize)

Weighted sum.

Return Weighted sum

Parameters

- [in] *in: Array of input values.
- [in] *weigths: Weights
- [in] blockSize: Number of samples in the input array.

group groupSupport

3.3.14 SVM Functions

Linear SVM

```
void riscv_svm_linear_init_f32 (riscv_svm_linear_instance_f32 *S, uint32_t nbOfSupportVectors, uint32_t vectorDimension, float32_t intercept, const float32_t *dualCoefficients, const float32_t *supportVectors, const int32_t *classes)
```

```
void riscv_svm_linear_predict_f16 (const riscv_svm_linear_instance_f16 *S, const float16_t *in, int32_t *pResult)
```

void riscv_svm_linear_predict_f32 (const riscv_svm_linear_instance_f32 *S, const float32_t *in, int32_t *pResult)

group linearsvm

Linear SVM classifier

Functions

void riscv_svm_linear_init_f16 (riscv_svm_linear_instance_f16 *S, uint32_t nbOfSupportVectors, uint32_t vectorDimension, float16_t intercept, const float16_t *dualCoefficients, const float16_t *supportVectors, const int32_t *classes)

SVM linear instance init function.

Classes are integer used as output of the function (instead of having -1,1 as class values).

Return none.

Parameters

- [in] S: Parameters for the SVM function
- [in] nbOfSupportVectors: Number of support vectors
- [in] vectorDimension: Dimension of vector space
- [in] intercept: Intercept
- [in] dualCoefficients: Array of dual coefficients
- [in] supportVectors: Array of support vectors
- [in] classes: Array of 2 classes ID

void riscv_svm_linear_init_f32 (riscv_svm_linear_instance_f32 *S, uint32_t nbOfSupportVectors, uint32_t vectorDimension, float32_t intercept, const float32_t *dualCoefficients, const float32_t *supportVectors, const int32_t *classes)

SVM linear instance init function.

Classes are integer used as output of the function (instead of having -1,1 as class values).

Return none.

Parameters

- [in] S: Parameters for the SVM function
- [in] nbOfSupportVectors: Number of support vectors
- [in] vectorDimension: Dimension of vector space
- [in] intercept: Intercept
- [in] dualCoefficients: Array of dual coefficients
- [in] supportVectors: Array of support vectors
- [in] classes: Array of 2 classes ID

void riscv_svm_linear_predict_f16 (const riscv_svm_linear_instance_f16 *S, const float16_t *in, int32_t *pResult)

SVM linear prediction.

Return none.

Parameters

- [in] S: Pointer to an instance of the linear SVM structure.
- [in] in: Pointer to input vector
- [out] pResult: Decision value

void riscv_svm_linear_predict_f32 (const riscv_svm_linear_instance_f32 *S, const float32_t *in, int32_t *pResult)

SVM linear prediction.

Return none.

Parameters

- [in] S: Pointer to an instance of the linear SVM structure.
- [in] in: Pointer to input vector
- [out] pResult: Decision value

Polynomial SVM

```
void riscv_svm_polynomial_init_f16 (riscv_svm_polynomial_instance_f16 *S, uint32_t nbOfSup-portVectors, uint32_t vectorDimension, float16_t intercept, const float16_t *dualCoefficients, const float16_t *supportVectors, const int32_t *classes, int32_t degree, float16_t coef0, float16_t gamma)
```

void riscv_svm_polynomial_init_f32 (riscv_svm_polynomial_instance_f32 *S, uint32_t nbOfSup-portVectors, uint32_t vectorDimension, float32_t intercept, const float32_t *dualCoefficients, const float32_t *supportVectors, const int32_t *classes, int32_t degree, float32_t coef0, float32_t gamma)

void riscv_svm_polynomial_predict_f16 (const riscv_svm_polynomial_instance_f16 *S, const float16_t *in, int32_t *pResult)

void riscv_svm_polynomial_predict_f32 (const riscv_svm_polynomial_instance_f32 *S, const float32_t *in, int32_t *pResult)

group polysvm

Polynomial SVM classifier

Functions

void riscv_svm_polynomial_init_f16 (riscv_svm_polynomial_instance_f16 *S, uint32_t nbOf-SupportVectors, uint32_t vectorDimension, float16_t intercept, const float16_t *dualCoefficients, const float16_t *supportVectors, const int32_t *classes, int32_t degree, float16_t coef0, float16_t gamma)

SVM polynomial instance init function.

Classes are integer used as output of the function (instead of having -1,1 as class values).

Return none.

Parameters

- [in] S: points to an instance of the polynomial SVM structure.
- [in] nbOfSupportVectors: Number of support vectors
- [in] vectorDimension: Dimension of vector space
- [in] intercept: Intercept
- [in] dualCoefficients: Array of dual coefficients
- [in] supportVectors: Array of support vectors
- [in] classes: Array of 2 classes ID
- [in] degree: Polynomial degree
- [in] coef0: coeff0 (scikit-learn terminology)
- [in] gamma: gamma (scikit-learn terminology)

```
void riscv_svm_polynomial_init_f32 (riscv_svm_polynomial_instance_f32 *S, uint32_t nbOf-
SupportVectors, uint32_t vectorDimension, float32_t in-
tercept, const float32_t *dualCoefficients, const
float32_t *supportVectors, const int32_t *classes,
int32_t degree, float32_t coef0, float32_t gamma)
```

SVM polynomial instance init function.

Classes are integer used as output of the function (instead of having -1,1 as class values).

Return none.

Parameters

- [in] S: points to an instance of the polynomial SVM structure.
- [in] nbOfSupportVectors: Number of support vectors
- [in] vectorDimension: Dimension of vector space
- [in] intercept: Intercept
- [in] dualCoefficients: Array of dual coefficients
- [in] supportVectors: Array of support vectors
- [in] classes: Array of 2 classes ID
- [in] degree: Polynomial degree
- [in] coef0: coeff0 (scikit-learn terminology)
- [in] gamma: gamma (scikit-learn terminology)

void riscv_svm_polynomial_predict_f16 (const riscv_svm_polynomial_instance_f16 *S, const float16_t *in, int32_t *pResult)

SVM polynomial prediction.

Return none.

Parameters

- [in] S: Pointer to an instance of the polynomial SVM structure.
- [in] in: Pointer to input vector
- [out] pResult: Decision value

void riscv_svm_polynomial_predict_f32 (const riscv_svm_polynomial_instance_f32 *S, const float32_t *in, int32_t *pResult)

SVM polynomial prediction.

Return none.

Parameters

- [in] S: Pointer to an instance of the polynomial SVM structure.
- [in] in: Pointer to input vector
- [out] pResult: Decision value

RBF SVM

```
void riscv_svm_rbf_init_f16 (riscv_svm_rbf_instance_f16 *S, uint32_t nbOfSupportVectors, uint32_t vectorDimension, float16_t intercept, const float16_t *dualCoefficients, const float16_t *supportVectors, const int32_t *classes, float16_t gamma)
```

void riscv_svm_rbf_init_f32 (riscv_svm_rbf_instance_f32 *S, uint32_t nbOfSupportVectors, uint32_t vectorDimension, float32_t intercept, const float32_t *dualCoefficients, const float32_t *supportVectors, const int32_t *classes, float32_t gamma)

void riscv_svm_rbf_predict_f16 (const riscv_svm_rbf_instance_f16 *S, const float16_t *in, int32_t *pResult)

void riscv_svm_rbf_predict_f32 (const riscv_svm_rbf_instance_f32 *S, const float32_t *in, int32_t *pResult)

group rbfsvm

RBF SVM classifier

Functions

void riscv_svm_rbf_init_f16 (riscv_svm_rbf_instance_f16 *S, uint32_t nbOfSupportVectors, uint32_t vectorDimension, float16_t intercept, const float16_t *dualCoefficients, const float16_t *supportVectors, const int32_t *classes, float16_t gamma)

SVM radial basis function instance init function.

Classes are integer used as output of the function (instead of having -1,1 as class values).

Return none.

Parameters

- [in] S: points to an instance of the polynomial SVM structure.
- [in] nbOfSupportVectors: Number of support vectors
- [in] vectorDimension: Dimension of vector space
- [in] intercept: Intercept

- [in] dualCoefficients: Array of dual coefficients
- [in] supportVectors: Array of support vectors
- [in] classes: Array of 2 classes ID
- [in] gamma: gamma (scikit-learn terminology)

```
void riscv_svm_rbf_init_f32 (riscv_svm_rbf_instance_f32 *S, uint32_t nbOfSupportVectors, uint32_t vectorDimension, float32_t intercept, const float32_t *dualCoefficients, const float32_t *supportVectors, const int32_t *classes, float32_t gamma)
```

SVM radial basis function instance init function.

Classes are integer used as output of the function (instead of having -1,1 as class values).

Return none.

Parameters

- [in] S: points to an instance of the polynomial SVM structure.
- [in] nbOfSupportVectors: Number of support vectors
- [in] vectorDimension: Dimension of vector space
- [in] intercept: Intercept
- [in] dualCoefficients: Array of dual coefficients
- [in] supportVectors: Array of support vectors
- [in] classes: Array of 2 classes ID
- [in] gamma: gamma (scikit-learn terminology)

```
void riscv_svm_rbf_predict_f16 (const riscv_svm_rbf_instance_f16 *S, const float16_t *in, int32_t *pResult) SVM rbf prediction.
```

Return none.

Parameters

- [in] S: Pointer to an instance of the rbf SVM structure.
- [in] in: Pointer to input vector
- [out] pResult: decision value

```
void riscv_svm_rbf_predict_f32 (const riscv_svm_rbf_instance_f32 *S, const float32_t *in, int32_t *pResult)

SVM rbf prediction.
```

Return none.

Parameters

- [in] S: Pointer to an instance of the rbf SVM structure.
- [in] in: Pointer to input vector
- [out] pResult: decision value

Sigmoid SVM

```
void riscv_svm_sigmoid_init_f16 (riscv_svm_sigmoid_instance_f16 *S, uint32_t nbOfSupportVec-
                                       tors, uint32_t vectorDimension, float16_t intercept, const
                                       float16_t *dualCoefficients, const float16_t *supportVectors,
                                       const int32_t *classes, float16_t coef0, float16_t gamma)
void riscv_svm_sigmoid_init_f32 (riscv_svm_sigmoid_instance_f32 *S, uint32_t nbOfSupportVec-
                                       tors, uint32_t vectorDimension, float32_t intercept, const
                                       float32_t *dualCoefficients, const float32_t *supportVectors,
                                       const int32_t *classes, float32_t coef0, float32_t gamma)
void riscv_svm_sigmoid_predict_f16 (const riscv_svm_sigmoid_instance_f16
                                                                                          const
                                           float16_t *in, int32_t *pResult)
void riscv_svm_sigmoid_predict_f32 (const
                                                    riscv_svm_sigmoid_instance_f32
                                                                                    *S.
                                                                                          const
                                           float32_t *in, int32_t *pResult)
group sigmoidsvm
     Sigmoid SVM classifier
```

Functions

void riscv_svm_sigmoid_init_f16 (riscv_svm_sigmoid_instance_f16 *S, uint32_t nbOfSup-portVectors, uint32_t vectorDimension, float16_t intercept, const float16_t *dualCoefficients, const float16_t *supportVectors, const int32_t *classes, float16_t coef0, float16_t gamma)

SVM sigmoid instance init function.

Classes are integer used as output of the function (instead of having -1,1 as class values).

Return none.

Parameters

- [in] S: points to an instance of the rbf SVM structure.
- [in] nbOfSupportVectors: Number of support vectors
- [in] vectorDimension: Dimension of vector space
- [in] intercept: Intercept
- [in] dualCoefficients: Array of dual coefficients
- [in] supportVectors: Array of support vectors
- [in] classes: Array of 2 classes ID
- [in] coef0: coeff0 (scikit-learn terminology)
- [in] gamma: gamma (scikit-learn terminology)

```
void riscv_svm_sigmoid_init_f32 (riscv_svm_sigmoid_instance_f32 *S, uint32_t nbOfSup-portVectors, uint32_t vectorDimension, float32_t intercept, const float32_t *dualCoefficients, const float32_t *supportVectors, const int32_t *classes, float32_t coef0, float32_t gamma)
```

SVM sigmoid instance init function.

Classes are integer used as output of the function (instead of having -1,1 as class values).

Return none.

Parameters

- [in] S: points to an instance of the rbf SVM structure.
- [in] nbOfSupportVectors: Number of support vectors
- [in] vectorDimension: Dimension of vector space
- [in] intercept: Intercept
- [in] dualCoefficients: Array of dual coefficients
- [in] supportVectors: Array of support vectors
- [in] classes: Array of 2 classes ID
- [in] coef0: coeff0 (scikit-learn terminology)
- [in] gamma: gamma (scikit-learn terminology)

void riscv_svm_sigmoid_predict_f16 (const riscv_svm_sigmoid_instance_f16 *S, const float16_t *in, int32_t *pResult)

SVM sigmoid prediction.

Return none.

Parameters

- [in] S: Pointer to an instance of the rbf SVM structure.
- [in] in: Pointer to input vector
- [out] pResult: Decision value

void riscv_svm_sigmoid_predict_f32 (const riscv_svm_sigmoid_instance_f32 *S, const float32_t *in, int32_t *pResult)

SVM sigmoid prediction.

Return none.

Parameters

- [in] S: Pointer to an instance of the rbf SVM structure.
- [in] in: Pointer to input vector
- [out] pResult: Decision value

group groupSVM

This set of functions is implementing SVM classification on 2 classes. The training must be done from scikit-learn. The parameters can be easily generated from the scikit-learn object. Some examples are given in DSP/Testing/PatternGeneration/SVM.py

If more than 2 classes are needed, the functions in this folder will have to be used, as building blocks, to do multi-class classification.

No multi-class classification is provided in this SVM folder.

3.3.15 Transform Functions

Complex FFT Functions

Complex FFT Tables

```
const uint16_t riscvBitRevTable[1024]
const uint64_t twiddleCoefF64_16[32]
const uint64_t twiddleCoefF64_32[64]
const uint64_t twiddleCoefF64_64[128]
const uint64_t twiddleCoefF64_128[256]
const uint64_t twiddleCoefF64_256[512]
const uint64_t twiddleCoefF64_512[1024]
const uint64_t twiddleCoefF64_1024[2048]
const uint64_t twiddleCoefF64_2048[4096]
const uint64_t twiddleCoefF64_4096[8192]
const float32_t twiddleCoef_16[32]
const float32_t twiddleCoef_32[64]
const float32_t twiddleCoef_64[128]
const float32_t twiddleCoef_128[256]
const float32_t twiddleCoef_256[512]
const float32_t twiddleCoef_512[1024]
const float32_t twiddleCoef_1024[2048]
const float32_t twiddleCoef_2048[4096]
const float32 ttwiddleCoef 4096[8192]
const q31_t twiddleCoef_16_q31[24]
const q31_t twiddleCoef_32_q31[48]
const q31_t twiddleCoef_64_q31[96]
const q31_t twiddleCoef_128_q31[192]
const q31_t twiddleCoef_256_q31[384]
const q31_t twiddleCoef_512_q31[768]
const q31_t twiddleCoef_1024_q31[1536]
const q31_t twiddleCoef_2048_q31[3072]
const q31_t twiddleCoef_4096_q31[6144]
const q15_t twiddleCoef_16_q15[24]
const q15_t twiddleCoef_32_q15[48]
const q15_t twiddleCoef_64_q15[96]
const q15_t twiddleCoef_128_q15[192]
```

622

```
const q15_t twiddleCoef_256_q15[384]
const q15_t twiddleCoef_512_q15[768]
const q15_t twiddleCoef_1024_q15[1536]
const q15_t twiddleCoef_2048_q15[3072]
const q15_t twiddleCoef_4096_q15[6144]
const float16_t twiddleCoefF16_16[32]
const float16_t twiddleCoefF16_32[64]
const float16_t twiddleCoefF16_64[128]
const float16_t twiddleCoefF16_128[256]
const float16_t twiddleCoefF16_256[512]
const float16_t twiddleCoefF16_512[1024]
const float16_t twiddleCoefF16_1024[2048]
const float16_t twiddleCoefF16_2048[4096]
const float16_t twiddleCoefF16_4096[8192]
const float16_t twiddleCoefF16_rfft_32[32]
const float16 t twiddleCoefF16 rfft 64[64]
const float16_t twiddleCoefF16_rfft_128[128]
const float16_t twiddleCoefF16_rfft_256[256]
const float16_t twiddleCoefF16_rfft_512[512]
const float16_t twiddleCoefF16_rfft_1024[1024]
const float16_t twiddleCoefF16_rfft_2048[2048]
const float16_t twiddleCoefF16_rfft_4096[4096]
group CFFT_CIFFT
```

Variables

const uint16_t riscvBitRevTable[1024]

Table for bit reversal process.

Pseudo code for Generation of Bit reversal Table is

where N = 4096, log N2 = 12

N is the maximum FFT Size supported

const uint64_t twiddleCoefF64_16[32]

Double Precision Floating-point Twiddle factors Table Generation.

Example code for Double Precision Floating-point Twiddle factors Generation:

where N = 16, PI = 3.14159265358979

Cos and Sin values are in interleaved fashion

const uint64_t twiddleCoefF64_32[64]

Example code for Double Precision Floating-point Twiddle factors Generation:

where N = 32, PI = 3.14159265358979

Cos and Sin values are in interleaved fashion

const uint64_t twiddleCoefF64_64[128]

Example code for Double Precision Floating-point Twiddle factors Generation:

where N = 64, PI = 3.14159265358979

Cos and Sin values are in interleaved fashion

const uint64_t twiddleCoefF64_128[256]

Example code for Double Precision Floating-point Twiddle factors Generation:

where N = 128, PI = 3.14159265358979

Cos and Sin values are in interleaved fashion

const uint64 t twiddleCoefF64 256[512]

Example code for Double Precision Floating-point Twiddle factors Generation:

where N = 256, PI = 3.14159265358979

Cos and Sin values are in interleaved fashion

const uint64_t twiddleCoefF64_512[1024]

Example code for Double Precision Floating-point Twiddle factors Generation:

where N = 512, PI = 3.14159265358979

Cos and Sin values are in interleaved fashion

const uint64 t twiddleCoefF64 1024[2048]

Example code for Double Precision Floating-point Twiddle factors Generation:

where N = 1024, PI = 3.14159265358979

Cos and Sin values are in interleaved fashion

const uint64_t twiddleCoefF64_2048[4096]

Example code for Double Precision Floating-point Twiddle factors Generation:

where N = 2048, PI = 3.14159265358979

Cos and Sin values are in interleaved fashion

```
const uint64_t twiddleCoefF64_4096[8192]
```

Example code for Double Precision Floating-point Twiddle factors Generation:

```
where N = 4096, PI = 3.14159265358979
```

Cos and Sin values are in interleaved fashion

const float32_t twiddleCoef_16[32]

Example code for Floating-point Twiddle factors Generation:

```
where N = 16, PI = 3.14159265358979
```

Cos and Sin values are in interleaved fashion

const float32_t twiddleCoef_32[64]

Example code for Floating-point Twiddle factors Generation:

where
$$N = 32$$
, $PI = 3.14159265358979$

Cos and Sin values are in interleaved fashion

const float32_t twiddleCoef_64[128]

Example code for Floating-point Twiddle factors Generation:

```
where N = 64, PI = 3.14159265358979
```

Cos and Sin values are in interleaved fashion

const float32_t twiddleCoef_128[256]

Example code for Floating-point Twiddle factors Generation:

```
where N = 128, PI = 3.14159265358979
```

Cos and Sin values are in interleaved fashion

const float32_t twiddleCoef_256[512]

Example code for Floating-point Twiddle factors Generation:

```
where N = 256, PI = 3.14159265358979
```

Cos and Sin values are in interleaved fashion

const float32_t twiddleCoef_512[1024]

Example code for Floating-point Twiddle factors Generation:

where N = 512, PI = 3.14159265358979

Cos and Sin values are in interleaved fashion

const float32_t twiddleCoef_1024[2048]

Example code for Floating-point Twiddle factors Generation:

```
where N = 1024, PI = 3.14159265358979
```

Cos and Sin values are in interleaved fashion

const float32 t twiddleCoef 2048[4096]

Example code for Floating-point Twiddle factors Generation:

```
where N = 2048, PI = 3.14159265358979
```

Cos and Sin values are in interleaved fashion

const float32_t twiddleCoef_4096[8192]

Example code for Floating-point Twiddle factors Generation:

```
where N = 4096, PI = 3.14159265358979
```

Cos and Sin values are in interleaved fashion

const q31_t twiddleCoef_16_q31[24]

Q31 Twiddle factors Table.

Example code for Q31 Twiddle factors Generation::

```
where N = 16, PI = 3.14159265358979
```

Cos and Sin values are interleaved fashion

Convert Floating point to Q31(Fixed point 1.31): round(twiddleCoefQ31(i) * pow(2, 31))

```
const q31_t twiddleCoef_32_q31[48]
```

Example code for Q31 Twiddle factors Generation::

```
where N = 32, PI = 3.14159265358979
```

Cos and Sin values are interleaved fashion

Convert Floating point to Q31(Fixed point 1.31): round(twiddleCoefQ31(i) * pow(2, 31))

```
const q31_t twiddleCoef_64_q31[96]
```

Example code for Q31 Twiddle factors Generation::

```
where N = 64, PI = 3.14159265358979
```

Cos and Sin values are interleaved fashion

Convert Floating point to Q31(Fixed point 1.31): round(twiddleCoefQ31(i) * pow(2, 31))

```
const q31_t twiddleCoef_128_q31[192]
```

Example code for Q31 Twiddle factors Generation::

```
where N = 128, PI = 3.14159265358979
      Cos and Sin values are interleaved fashion
      Convert Floating point to Q31(Fixed point 1.31): round(twiddleCoefQ31(i) * pow(2, 31))
const q31_t twiddleCoef_256_q31[384]
      Example code for Q31 Twiddle factors Generation::
      where N = 256, PI = 3.14159265358979
      Cos and Sin values are interleaved fashion
      Convert Floating point to Q31(Fixed point 1.31): round(twiddleCoefQ31(i) * pow(2, 31))
const q31_t twiddleCoef_512_q31[768]
      Example code for Q31 Twiddle factors Generation::
      where N = 512, PI = 3.14159265358979
      Cos and Sin values are interleaved fashion
      Convert Floating point to Q31(Fixed point 1.31): round(twiddleCoefQ31(i) * pow(2, 31))
const q31 ttwiddleCoef 1024 q31[1536]
      Example code for Q31 Twiddle factors Generation::
      where N = 1024, PI = 3.14159265358979
      Cos and Sin values are interleaved fashion
      Convert Floating point to Q31(Fixed point 1.31): round(twiddleCoefQ31(i) * pow(2, 31))
const q31_t twiddleCoef_2048_q31[3072]
      Example code for Q31 Twiddle factors Generation::
      where N = 2048, PI = 3.14159265358979
      Cos and Sin values are interleaved fashion
      Convert Floating point to Q31(Fixed point 1.31): round(twiddleCoefQ31(i) * pow(2, 31))
const q31_t twiddleCoef_4096_q31[6144]
      Example code for Q31 Twiddle factors Generation::
      where N = 4096, PI = 3.14159265358979
      Cos and Sin values are interleaved fashion
      Convert Floating point to Q31(Fixed point 1.31): round(twiddleCoefQ31(i) * pow(2, 31))
const q15_t twiddleCoef_16_q15[24]
     q15 Twiddle factors Table
      Example code for q15 Twiddle factors Generation::
```

```
where N = 16, PI = 3.14159265358979
      Cos and Sin values are interleaved fashion
      Convert Floating point to q15(Fixed point 1.15): round(twiddleCoefq15(i) * pow(2, 15))
const q15_t twiddleCoef_32_q15[48]
      Example code for q15 Twiddle factors Generation::
      where N = 32, PI = 3.14159265358979
      Cos and Sin values are interleaved fashion
      Convert Floating point to q15(Fixed point 1.15): round(twiddleCoefq15(i) * pow(2, 15))
const q15_t twiddleCoef_64_q15[96]
      Example code for q15 Twiddle factors Generation::
      where N = 64, PI = 3.14159265358979
      Cos and Sin values are interleaved fashion
      Convert Floating point to q15(Fixed point 1.15): round(twiddleCoefq15(i) * pow(2, 15))
const q15_t twiddleCoef_128_q15[192]
      Example code for q15 Twiddle factors Generation::
      where N = 128, PI = 3.14159265358979
      Cos and Sin values are interleaved fashion
      Convert Floating point to q15(Fixed point 1.15): round(twiddleCoefq15(i) * pow(2, 15))
const q15_t twiddleCoef_256_q15[384]
      Example code for q15 Twiddle factors Generation::
      where N = 256, PI = 3.14159265358979
      Cos and Sin values are interleaved fashion
      Convert Floating point to q15(Fixed point 1.15): round(twiddleCoefq15(i) * pow(2, 15))
const q15_t twiddleCoef_512_q15[768]
      Example code for q15 Twiddle factors Generation::
      where N = 512, PI = 3.14159265358979
      Cos and Sin values are interleaved fashion
      Convert Floating point to q15(Fixed point 1.15): round(twiddleCoefq15(i) * pow(2, 15))
const q15_t twiddleCoef_1024_q15[1536]
```

Example code for q15 Twiddle factors Generation::

```
where N = 1024, PI = 3.14159265358979
      Cos and Sin values are interleaved fashion
      Convert Floating point to q15(Fixed point 1.15): round(twiddleCoefq15(i) * pow(2, 15))
const q15 ttwiddleCoef 2048 q15[3072]
      Example code for q15 Twiddle factors Generation::
      where N = 2048, PI = 3.14159265358979
      Cos and Sin values are interleaved fashion
      Convert Floating point to q15(Fixed point 1.15): round(twiddleCoefq15(i) * pow(2, 15))
const q15_t twiddleCoef_4096_q15[6144]
      Example code for q15 Twiddle factors Generation::
      where N = 4096, PI = 3.14159265358979
      Cos and Sin values are interleaved fashion
      Convert Floating point to q15(Fixed point 1.15): round(twiddleCoefq15(i) * pow(2, 15))
const float16_t twiddleCoefF16_16[32]
     Floating-point Twiddle factors Table Generation.
      Example code for Floating-point Twiddle factors Generation:
      where N = 16 and PI = 3.14159265358979
      Cos and Sin values are in interleaved fashion
const float16_t twiddleCoefF16_32[64]
      Example code for Floating-point Twiddle factors Generation:
      where N = 32 and PI = 3.14159265358979
      Cos and Sin values are in interleaved fashion
const float16_t twiddleCoefF16_64[128]
      Example code for Floating-point Twiddle factors Generation:
      where N = 64 and PI = 3.14159265358979
      Cos and Sin values are in interleaved fashion
const float16_t twiddleCoefF16_128[256]
```

3.3. NMSIS DSP API 629

Example code for Floating-point Twiddle factors Generation:

where N = 128 and PI = 3.14159265358979

```
Cos and Sin values are in interleaved fashion
```

```
const float16_t twiddleCoefF16_256[512]
```

Example code for Floating-point Twiddle factors Generation:

```
where N = 256 and PI = 3.14159265358979
```

Cos and Sin values are in interleaved fashion

```
const float16_t twiddleCoefF16_512[1024]
```

Example code for Floating-point Twiddle factors Generation:

```
where N = 512 and PI = 3.14159265358979
```

Cos and Sin values are in interleaved fashion

```
const float16_t twiddleCoefF16_1024[2048]
```

Example code for Floating-point Twiddle factors Generation:

```
where N = 1024 and PI = 3.14159265358979
```

Cos and Sin values are in interleaved fashion

```
const float16_t twiddleCoefF16_2048[4096]
```

Example code for Floating-point Twiddle factors Generation:

```
where N = 2048 and PI = 3.14159265358979
```

Cos and Sin values are in interleaved fashion

```
const float16_t twiddleCoefF16_4096[8192]
```

Example code for Floating-point Twiddle factors Generation:

```
where N = 4096 and PI = 3.14159265358979
```

Cos and Sin values are in interleaved fashion

```
const float16_t twiddleCoefF16_rfft_32[32]
```

Example code for Floating-point RFFT Twiddle factors Generation:

Real and Imag values are in interleaved fashion

```
const float16_t twiddleCoefF16_rfft_64[64]
```

const float16_t twiddleCoefF16_rfft_128[128]

const float16_t twiddleCoefF16_rfft_256[256]

const float16_t twiddleCoefF16_rfft_512[512]

 ${\tt const}~{\tt float} 16_{\tt t}~{\tt twiddleCoefF16_rfft_1024} [1024]$

const float16_t twiddleCoefF16_rfft_2048[2048]

```
const float16 t twiddleCoefF16 rfft 4096[4096]
void riscv_cfft_f16 (const riscv_cfft_instance_f16 *S, float16_t *p1, uint8_t ifftFlag, uint8_t bitRe-
                        verseFlag)
void riscv_cfft_f32 (const riscv_cfft_instance_f32 *S, float32_t *p1, uint8_t ifftFlag, uint8_t bitRe-
                        verseFlag)
void riscv_cfft_f64 (const riscv_cfft_instance_f64 *S, float64_t *p1, uint8_t ifftFlag, uint8_t bitRe-
                        verseFlag)
riscv_status riscv_cfft_init_f16 (riscv_cfft_instance_f16 *S, uint16_t fftLen)
riscv_status riscv_cfft_init_f32 (riscv_cfft_instance_f32 *S, uint16_t fftLen)
riscv status riscv cfft init f64 (riscv cfft instance f64 *S, uint16 t fftLen)
riscv_status riscv_cfft_init_q15 (riscv_cfft_instance_q15 *S, uint16_t fftLen)
riscv_status riscv_cfft_init_q31 (riscv_cfft_instance_q31 *S, uint16_t fftLen)
void riscv_cfft_q15 (const riscv_cfft_instance_q15 *S, q15_t *p1, uint8_t ifftFlag, uint8_t bitReverse-
void riscv_cfft_q31 (const riscv_cfft_instance_q31 *S, q31_t *p1, uint8_t ifftFlag, uint8_t bitReverse-
                        Flag)
void riscv_cfft_radix2_f16 (const riscv_cfft_radix2_instance_f16 *S, float16_t *pSrc)
void riscv cfft radix2 f32 (const riscv cfft radix2 instance f32 *S, float32 t *pSrc)
riscv_status riscv_cfft_radix2_init_f16 (riscv_cfft_radix2_instance_f16 *S, uint16_t fftLen, uint8_t
                                               ifftFlag, uint8_t bitReverseFlag)
riscv_status riscv_cfft_radix2_init_f32 (riscv_cfft_radix2_instance_f32 *S, uint16_tfftLen, uint8_t
                                               ifftFlag, uint8_t bitReverseFlag)
riscv_status riscv_cfft_radix2_init_q15 (riscv_cfft_radix2_instance_q15 *S, uint16_t fftLen,
                                               uint8_t ifftFlag, uint8_t bitReverseFlag)
riscv_status riscv_cfft_radix2_init_q31 (riscv_cfft_radix2_instance_q31 *S, uint16_t fftLen,
                                               uint8_t ifftFlag, uint8_t bitReverseFlag)
void riscv_cfft_radix2_q15 (const riscv_cfft_radix2_instance_q15 *S, q15_t *pSrc)
void riscv_cfft_radix2_q31 (const riscv_cfft_radix2_instance_q31 *S, q31_t *pSrc)
void riscv_cfft_radix4by2_f16 (float16_t *pSrc, uint32_t fftLen, const float16_t *pCoef)
void riscv cfft radix4 f16 (const riscv cfft radix4 instance f16 *S, float16 t *pSrc)
void riscv cfft radix4 f32 (const riscv cfft radix4 instance f32 *S, float32 t *pSrc)
riscv_status riscv_cfft_radix4_init_f16 (riscv_cfft_radix4_instance_f16 *S, uint16_t fftLen, uint8_t
                                               ifftFlag, uint8_t bitReverseFlag)
riscv_status riscv_cfft_radix4_init_f32 (riscv_cfft_radix4_instance_f32 *S, uint16_t fftLen, uint8_t
                                               ifftFlag, uint8_t bitReverseFlag)
riscv_status riscv_cfft_radix4_init_q15 (riscv_cfft_radix4_instance_q15 *S, uint16_t fftLen,
                                               uint8_t ifftFlag, uint8_t bitReverseFlag)
riscv_status riscv_cfft_radix4_init_q31 (riscv_cfft_radix4_instance_q31 *S, uint16_t fftLen,
                                               uint8_t ifftFlag, uint8_t bitReverseFlag)
void riscv_cfft_radix4_q15 (const riscv_cfft_radix4_instance_q15 *S, q15_t *pSrc)
void riscv_cfft_radix4_q31 (const riscv_cfft_radix4_instance_q31 *S, q31_t *pSrc)
```

group ComplexFFT

The Fast Fourier Transform (FFT) is an efficient algorithm for computing the Discrete Fourier Transform (DFT). The FFT can be orders of magnitude faster than the DFT, especially for long lengths. The algorithms described in this section operate on complex data. A separate set of functions is devoted to handling of real sequences.

There are separate algorithms for handling floating-point, Q15, and Q31 data types. The algorithms available for each data type are described next.

The FFT functions operate in-place. That is, the array holding the input data will also be used to hold the corresponding result. The input data is complex and contains 2*fftLen interleaved values as shown below. The FFT result will be contained in the same array and the frequency domain values will have the same interleaving.

Floating-point The floating-point complex FFT uses a mixed-radix algorithm. Multiple radix-8 stages are performed along with a single radix-2 or radix-4 stage, as needed. The algorithm supports lengths of [16, 32, 64, ..., 4096] and each length uses a different twiddle factor table.

The function uses the standard FFT definition and output values may grow by a factor of fftlen when computing the forward transform. The inverse transform includes a scale of 1/fftlen as part of the calculation and this matches the textbook definition of the inverse FFT.

For the MVE version, the new riscv_cfft_init_f32 initialization function is mandatory. Compilation flags are available to include only the required tables for the needed FFTs. Other FFT versions can continue to be initialized as explained below.

For not MVE versions, pre-initialized data structures containing twiddle factors and bit reversal tables are provided and defined in riscv_const_structs.h. Include this header in your function and then pass one of the constant structures as an argument to riscv cfft f32. For example:

```
riscv_cfft_f32(riscv_cfft_sR_f32_len64, pSrc, 1, 1)
```

computes a 64-point inverse complex FFT including bit reversal. The data structures are treated as constant data and not modified during the calculation. The same data structure can be reused for multiple transforms including mixing forward and inverse transforms.

Earlier releases of the library provided separate radix-2 and radix-4 algorithms that operated on floating-point data. These functions are still provided but are deprecated. The older functions are slower and less general than the new functions.

An example of initialization of the constants for the riscv_cfft_f32 function follows:

```
const static riscv_cfft_instance_f32 *S;
 switch (length) {
   case 16:
      S = &riscv_cfft_sR_f32_len16;
     break;
    case 32:
      S = &riscv_cfft_sR_f32_len32;
     break;
    case 64:
      S = &riscv_cfft_sR_f32_len64;
     break;
    case 128:
      S = &riscv_cfft_sR_f32_len128;
      break:
    case 256:
      S = &riscv_cfft_sR_f32_len256;
      break:
```

(continues on next page)

(continued from previous page)

```
case 512:
    S = &riscv_cfft_sR_f32_len512;
    break;
case 1024:
    S = &riscv_cfft_sR_f32_len1024;
    break;
case 2048:
    S = &riscv_cfft_sR_f32_len2048;
    break;
case 4096:
    S = &riscv_cfft_sR_f32_len4096;
    break;
}
```

The new riscv cfft init f32 can also be used.

Q15 and Q31 The floating-point complex FFT uses a mixed-radix algorithm. Multiple radix-4 stages are performed along with a single radix-2 stage, as needed. The algorithm supports lengths of [16, 32, 64, ..., 4096] and each length uses a different twiddle factor table.

The function uses the standard FFT definition and output values may grow by a factor of fftLen when computing the forward transform. The inverse transform includes a scale of 1/fftLen as part of the calculation and this matches the textbook definition of the inverse FFT.

Pre-initialized data structures containing twiddle factors and bit reversal tables are provided and defined in riscv_const_structs.h. Include this header in your function and then pass one of the constant structures as an argument to riscv_cfft_q31. For example:

```
riscv_cfft_q31(riscv_cfft_sR_q31_len64, pSrc, 1, 1)
```

computes a 64-point inverse complex FFT including bit reversal. The data structures are treated as constant data and not modified during the calculation. The same data structure can be reused for multiple transforms including mixing forward and inverse transforms.

Earlier releases of the library provided separate radix-2 and radix-4 algorithms that operated on floating-point data. These functions are still provided but are deprecated. The older functions are slower and less general than the new functions.

An example of initialization of the constants for the riscv_cfft_q31 function follows:

```
const static riscv_cfft_instance_q31 *S;
...
switch (length) {
   case 16:
        S = &riscv_cfft_sR_q31_len16;
        break;
   case 32:
        S = &riscv_cfft_sR_q31_len32;
        break;
   case 64:
        S = &riscv_cfft_sR_q31_len64;
        break;
   case 128:
        S = &riscv_cfft_sR_q31_len128;
        break;
   case 256:
        S = &riscv_cfft_sR_q31_len256;
        break;
```

(continues on next page)

(continued from previous page)

```
case 512:
    S = &riscv_cfft_sR_q31_len512;
    break;
case 1024:
    S = &riscv_cfft_sR_q31_len1024;
    break;
case 2048:
    S = &riscv_cfft_sR_q31_len2048;
    break;
case 4096:
    S = &riscv_cfft_sR_q31_len4096;
    break;
}
```

Functions

```
void riscv_cfft_f16 (const riscv_cfft_instance_f16 *S, float16_t *p1, uint8_t ifftFlag, uint8_t bi-
tReverseFlag)
```

Processing function for the floating-point complex FFT.

Return none

Parameters

- [in] S: points to an instance of the floating-point CFFT structure
- [inout] p1: points to the complex data buffer of size 2*fftLen. Processing occurs in-place
- [in] ifftFlag: flag that selects transform direction
 - value = 0: forward transform
 - value = 1: inverse transform
- [in] bitReverseFlag: flag that enables / disables bit reversal of output
 - value = 0: disables bit reversal of output
 - value = 1: enables bit reversal of output

```
void riscv_cfft_f32 (const riscv_cfft_instance_f32 *S, float32_t *p1, uint8_t ifftFlag, uint8_t bi-
tReverseFlag)
```

Processing function for the floating-point complex FFT.

Return none

Parameters

- [in] S: points to an instance of the floating-point CFFT structure
- [inout] p1: points to the complex data buffer of size 2 * fftLen. Processing occurs in-place
- [in] ifftFlag: flag that selects transform direction
 - value = 0: forward transform
 - value = 1: inverse transform
- [in] bitReverseFlag: flag that enables / disables bit reversal of output
 - value = 0: disables bit reversal of output

- value = 1: enables bit reversal of output

void **riscv_cfft_f64** (**const** riscv_cfft_instance_f64 **S*, float64_t **p1*, uint8_t *ifftFlag*, uint8_t *bi-tReverseFlag*)

Processing function for the Double Precision floating-point complex FFT.

Return none

Parameters

- [in] S: points to an instance of the Double Precision floating-point CFFT structure
- [inout] p1: points to the complex data buffer of size 2*fftLen. Processing occurs in-place
- [in] ifftFlag: flag that selects transform direction
 - value = 0: forward transform
 - value = 1: inverse transform
- [in] bitReverseFlag: flag that enables / disables bit reversal of output
 - value = 0: disables bit reversal of output
 - value = 1: enables bit reversal of output

riscv_status riscv_cfft_init_f16 (riscv_cfft_instance_f16 *S, uint16_t fftLen)
Initialization function for the cfft f16 function.

Return execution status

- RISCV MATH SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: an error is detected

Use of this function is mandatory only for the MVE version of the FFT. Other versions can still initialize directly the data structure using variables declared in riscv_const_structs.h

Parameters

- [inout] S: points to an instance of the floating-point CFFT structure
- [in] fftLen: fft length (number of complex samples)

riscv_status riscv_cfft_init_f32 (riscv_cfft_instance_f32 *S, uint16_t fftLen)
Initialization function for the cfft f32 function.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV MATH ARGUMENT ERROR: an error is detected

Use of this function is mandatory only for the MVE version of the FFT. Other versions can still initialize directly the data structure using variables declared in riscv_const_structs.h

Parameters

- [inout] S: points to an instance of the floating-point CFFT structure
- [in] fftLen: fft length (number of complex samples)

riscv_status **riscv_cfft_init_f64** (riscv_cfft_instance_f64 **S*, uint16_t *fftLen*) Initialization function for the cfft f64 function.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: an error is detected

Use of this function is mandatory only for the MVE version of the FFT. Other versions can still initialize directly the data structure using variables declared in riscv_const_structs.h

Parameters

- [inout] S: points to an instance of the floating-point CFFT structure
- [in] fftLen: fft length (number of complex samples)

riscv_status **riscv_cfft_init_q15** (riscv_cfft_instance_q15 *S, uint16_t fftLen) Initialization function for the cfft q15 function.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_ARGUMENT_ERROR : an error is detected

Use of this function is mandatory only for the MVE version of the FFT. Other versions can still initialize directly the data structure using variables declared in riscv_const_structs.h

Parameters

- [inout] S: points to an instance of the floating-point CFFT structure
- [in] fftLen: fft length (number of complex samples)

riscv_status **riscv_cfft_init_q31** (riscv_cfft_instance_q31 *S, uint16_t fftLen) Initialization function for the cfft q31 function.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: an error is detected

Use of this function is mandatory only for the MVE version of the FFT. Other versions can still initialize directly the data structure using variables declared in riscv_const_structs.h

Parameters

- [inout] S: points to an instance of the floating-point CFFT structure
- [in] fftLen: fft length (number of complex samples)

void **riscv_cfft_q15** (**const** riscv_cfft_instance_q15 *S, q15_t *p1, uint8_t ifftFlag, uint8_t bitRe-verseFlag)

Processing function for Q15 complex FFT.

Return none

Parameters

- [in] S: points to an instance of Q15 CFFT structure
- [inout] p1: points to the complex data buffer of size 2*fftLen. Processing occurs in-place
- [in] ifftFlag: flag that selects transform direction
 - value = 0: forward transform

- value = 1: inverse transform
- [in] bitReverseFlag: flag that enables / disables bit reversal of output
 - value = 0: disables bit reversal of output
 - value = 1: enables bit reversal of output

void **riscv_cfft_q31** (**const** riscv_cfft_instance_q31 *S, q31_t *p1, uint8_t ifftFlag, uint8_t bitReverseFlag)

Processing function for the Q31 complex FFT.

Return none

Parameters

- [in] S: points to an instance of the fixed-point CFFT structure
- [inout] p1: points to the complex data buffer of size 2*fftLen. Processing occurs in-place
- [in] ifftFlag: flag that selects transform direction
 - value = 0: forward transform
 - value = 1: inverse transform
- [in] bitReverseFlag: flag that enables / disables bit reversal of output
 - value = 0: disables bit reversal of output
 - value = 1: enables bit reversal of output

void riscv_cfft_radix2_f16 (const riscv_cfft_radix2_instance_f16 *S, float16_t *pSrc)
Radix-2 CFFT/CIFFT.

Return none

Parameters

- [in] S: points to an instance of the floating-point Radix-2 CFFT/CIFFT structure
- [inout] pSrc: points to the complex data buffer of size 2*fftLen. Processing occurs inplace

void riscv_cfft_radix2_f32 (const riscv_cfft_radix2_instance_f32 *S, float32_t *pSrc)
Radix-2 CFFT/CIFFT.

Return none

Parameters

- [in] S: points to an instance of the floating-point Radix-2 CFFT/CIFFT structure
- [inout] pSrc: points to the complex data buffer of size 2*fftLen. Processing occurs inplace

riscv_status riscv_cfft_radix2_init_f16 (riscv_cfft_radix2_instance_f16 *S, uint16_t fftLen, uint8_t ifftFlag, uint8_t bitReverseFlag)

Initialization function for the floating-point CFFT/CIFFT.

Return execution status

RISCV_MATH_SUCCESS: Operation successful

RISCV_MATH_ARGUMENT_ERROR: fftLen is not a supported length

Details The parameter ifftFlag controls whether a forward or inverse transform is computed. Set(=1) ifftFlag for calculation of CIFFT otherwise CFFT is calculated

The parameter bitReverseFlag controls whether output is in normal order or bit reversed order. Set(=1) bitReverseFlag for output to be in normal order otherwise output is in bit reversed order.

The parameter fftLen Specifies length of CFFT/CIFFT process. Supported FFT Lengths are 16, 64, 256, 1024.

This Function also initializes Twiddle factor table pointer and Bit reversal table pointer.

Parameters

- [inout] S: points to an instance of the floating-point CFFT/CIFFT structure
- [in] fftLen: length of the FFT
- [in] ifftFlag: flag that selects transform direction
 - value = 0: forward transform
 - value = 1: inverse transform
- [in] bitReverseFlag: flag that enables / disables bit reversal of output
 - value = 0: disables bit reversal of output
 - value = 1: enables bit reversal of output

```
riscv_status riscv_cfft_radix2_init_f32 (riscv_cfft_radix2_instance_f32 *S, uint16_t fftLen, uint8_t ifftFlag, uint8_t bitReverseFlag)

Initialization function for the floating-point CFFT/CIFFT.
```

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: fftLen is not a supported length

Details The parameter ifftFlag controls whether a forward or inverse transform is computed. Set(=1) ifftFlag for calculation of CIFFT otherwise CFFT is calculated

The parameter bitReverseFlag controls whether output is in normal order or bit reversed order. Set(=1) bitReverseFlag for output to be in normal order otherwise output is in bit reversed order.

The parameter fftLen Specifies length of CFFT/CIFFT process. Supported FFT Lengths are 16, 64, 256, 1024.

This Function also initializes Twiddle factor table pointer and Bit reversal table pointer.

Parameters

- [inout] S: points to an instance of the floating-point CFFT/CIFFT structure
- [in] fftLen: length of the FFT
- [in] ifftFlag: flag that selects transform direction
 - value = 0: forward transform
 - value = 1: inverse transform
- [in] bitReverseFlag: flag that enables / disables bit reversal of output
 - value = 0: disables bit reversal of output

- value = 1: enables bit reversal of output

riscv_status riscv_cfft_radix2_init_q15 (riscv_cfft_radix2_instance_q15 *S, uint16_t fftLen, uint8_t ifftFlag, uint8_t bitReverseFlag)

Initialization function for the Q15 CFFT/CIFFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: fftLen is not a supported length

Details The parameter ifftFlag controls whether a forward or inverse transform is computed. Set(=1) ifftFlag for calculation of CIFFT otherwise CFFT is calculated

The parameter bitReverseFlag controls whether output is in normal order or bit reversed order. Set(=1) bitReverseFlag for output to be in normal order otherwise output is in bit reversed order.

The parameter fftLen Specifies length of CFFT/CIFFT process. Supported FFT Lengths are 16, 64, 256, 1024.

This Function also initializes Twiddle factor table pointer and Bit reversal table pointer.

Parameters

- [inout] S: points to an instance of the Q15 CFFT/CIFFT structure.
- [in] fftLen: length of the FFT.
- [in] ifftFlag: flag that selects transform direction
 - value = 0: forward transform
 - value = 1: inverse transform
- [in] bitReverseFlag: flag that enables / disables bit reversal of output
 - value = 0: disables bit reversal of output
 - value = 1: enables bit reversal of output

riscv_status riscv_cfft_radix2_init_q31 (riscv_cfft_radix2_instance_q31 *S, uint16_t fftLen, uint8_t ifftFlag, uint8_t bitReverseFlag)

Initialization function for the O31 CFFT/CIFFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: fftLen is not a supported length

Details The parameter ifftFlag controls whether a forward or inverse transform is computed. Set(=1) ifftFlag for calculation of CIFFT otherwise CFFT is calculated

The parameter bitReverseFlag controls whether output is in normal order or bit reversed order. Set(=1) bitReverseFlag for output to be in normal order otherwise output is in bit reversed order.

The parameter fftLen Specifies length of CFFT/CIFFT process. Supported FFT Lengths are 16, 64, 256, 1024.

This Function also initializes Twiddle factor table pointer and Bit reversal table pointer.

Parameters

• [inout] S: points to an instance of the Q31 CFFT/CIFFT structure

- [in] fftLen: length of the FFT
- [in] ifftFlag: flag that selects transform direction
 - value = 0: forward transform
 - value = 1: inverse transform
- [in] bitReverseFlag: flag that enables / disables bit reversal of output
 - value = 0: disables bit reversal of output
 - value = 1: enables bit reversal of output

void **riscv_cfft_radix2_q15** (**const** riscv_cfft_radix2_instance_q15 *S, q15_t *pSrc) Processing function for the fixed-point CFFT/CIFFT.

Return none

Parameters

- [in] S: points to an instance of the fixed-point CFFT/CIFFT structure
- [inout] pSrc: points to the complex data buffer of size 2*fftLen. Processing occurs inplace

void **riscv_cfft_radix2_q31** (**const** riscv_cfft_radix2_instance_q31 *S, q31_t *pSrc) Processing function for the fixed-point CFFT/CIFFT.

Return none

Parameters

- [in] S: points to an instance of the fixed-point CFFT/CIFFT structure
- [inout] pSrc: points to the complex data buffer of size 2*fftLen. Processing occurs inplace

void riscv_cfft_radix4by2_f16 (float16_t *pSrc, uint32_t fftLen, const float16_t *pCoef)

void **riscv_cfft_radix4_f16** (**const** riscv_cfft_radix4_instance_f16 *S, float16_t *pSrc) Processing function for the floating-point Radix-4 CFFT/CIFFT.

Return none

Parameters

- [in] S: points to an instance of the floating-point Radix-4 CFFT/CIFFT structure
- [inout] pSrc: points to the complex data buffer of size 2*fftLen. Processing occurs inplace

void **riscv_cfft_radix4_f32** (**const** riscv_cfft_radix4_instance_f32 *S, float32_t *pSrc) Processing function for the floating-point Radix-4 CFFT/CIFFT.

Return none

Parameters

- [in] S: points to an instance of the floating-point Radix-4 CFFT/CIFFT structure
- [inout] pSrc: points to the complex data buffer of size 2*fftLen. Processing occurs inplace

riscv_status riscv_cfft_radix4_init_f16 (riscv_cfft_radix4_instance_f16 *S, uint16_t fftLen, uint8_t ifftFlag, uint8_t bitReverseFlag)

Initialization function for the floating-point CFFT/CIFFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: fftLen is not a supported length

Details The parameter ifftFlag controls whether a forward or inverse transform is computed. Set(=1) ifftFlag for calculation of CIFFT otherwise CFFT is calculated

The parameter bitReverseFlag controls whether output is in normal order or bit reversed order. Set(=1) bitReverseFlag for output to be in normal order otherwise output is in bit reversed order.

The parameter fftLen Specifies length of CFFT/CIFFT process. Supported FFT Lengths are 16, 64, 256, 1024.

This Function also initializes Twiddle factor table pointer and Bit reversal table pointer.

Parameters

- [inout] S: points to an instance of the floating-point CFFT/CIFFT structure
- [in] fftLen: length of the FFT
- [in] ifftFlag: flag that selects transform direction
 - value = 0: forward transform
 - value = 1: inverse transform
- [in] bitReverseFlag: flag that enables / disables bit reversal of output
 - value = 0: disables bit reversal of output
 - value = 1: enables bit reversal of output

```
riscv_status riscv_cfft_radix4_init_f32 (riscv_cfft_radix4_instance_f32 *S, uint16_t fftLen, uint8_t ifftFlag, uint8_t bitReverseFlag)

Initialization function for the floating-point CFFT/CIFFT.
```

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: fftLen is not a supported length

Details The parameter ifftFlag controls whether a forward or inverse transform is computed. Set(=1) ifftFlag for calculation of CIFFT otherwise CFFT is calculated

The parameter bitReverseFlag controls whether output is in normal order or bit reversed order. Set(=1) bitReverseFlag for output to be in normal order otherwise output is in bit reversed order.

The parameter fftLen Specifies length of CFFT/CIFFT process. Supported FFT Lengths are 16, 64, 256, 1024.

This Function also initializes Twiddle factor table pointer and Bit reversal table pointer.

Parameters

- [inout] S: points to an instance of the floating-point CFFT/CIFFT structure
- [in] fftLen: length of the FFT
- [in] ifftFlag: flag that selects transform direction

- value = 0: forward transform
- value = 1: inverse transform
- [in] bitReverseFlag: flag that enables / disables bit reversal of output
 - value = 0: disables bit reversal of output
 - value = 1: enables bit reversal of output

riscv_status riscv_cfft_radix4_init_q15 (riscv_cfft_radix4_instance_q15 *S, uint16_t fftLen, uint8_t ifftFlag, uint8_t bitReverseFlag)

Initialization function for the Q15 CFFT/CIFFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: fftLen is not a supported length

Details The parameter ifftFlag controls whether a forward or inverse transform is computed. Set(=1) ifftFlag for calculation of CIFFT otherwise CFFT is calculated

The parameter bitReverseFlag controls whether output is in normal order or bit reversed order. Set(=1) bitReverseFlag for output to be in normal order otherwise output is in bit reversed order.

The parameter fftLen Specifies length of CFFT/CIFFT process. Supported FFT Lengths are 16, 64, 256, 1024.

This Function also initializes Twiddle factor table pointer and Bit reversal table pointer.

Parameters

- [inout] S: points to an instance of the Q15 CFFT/CIFFT structure
- [in] fftLen: length of the FFT
- [in] ifftFlag: flag that selects transform direction
 - value = 0: forward transform
 - value = 1: inverse transform
- [in] bitReverseFlag: flag that enables / disables bit reversal of output
 - value = 0: disables bit reversal of output
 - value = 1: enables bit reversal of output

riscv_status riscv_cfft_radix4_init_q31 (riscv_cfft_radix4_instance_q31 *S, uint16_t fftLen, uint8_t ifftFlag, uint8_t bitReverseFlag)

Initialization function for the Q31 CFFT/CIFFT.

Return execution status

- RISCV MATH SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: fftLen is not a supported length

Details The parameter ifftFlag controls whether a forward or inverse transform is computed. Set(=1) ifftFlag for calculation of CIFFT otherwise CFFT is calculated

The parameter bitReverseFlag controls whether output is in normal order or bit reversed order. Set(=1) bitReverseFlag for output to be in normal order otherwise output is in bit reversed order.

The parameter fftLen Specifies length of CFFT/CIFFT process. Supported FFT Lengths are 16, 64, 256, 1024.

This Function also initializes Twiddle factor table pointer and Bit reversal table pointer.

Parameters

- [inout] S: points to an instance of the Q31 CFFT/CIFFT structure.
- [in] fftLen: length of the FFT.
- [in] ifftFlag: flag that selects transform direction
 - value = 0: forward transform
 - value = 1: inverse transform
- [in] bitReverseFlag: flag that enables / disables bit reversal of output
 - value = 0: disables bit reversal of output
 - value = 1: enables bit reversal of output

void **riscv_cfft_radix4_q15** (**const** riscv_cfft_radix4_instance_q15 *S, q15_t *pSrc) Processing function for the Q15 CFFT/CIFFT.

Return none

Input and output formats: Internally input is downscaled by 2 for every stage to avoid saturations inside CFFT/CIFFT process. Hence the output format is different for different FFT sizes. The input and output formats for different FFT sizes and number of bits to upscale are mentioned in the tables below for CFFT and CIFFT:

CFFT Size	Input format	Output Format	Number of bits to
			upscale
16	1.15	5.11	4
64	1.15	7.9	6
256	1.15	9.7	8
1024	1.15	11.5	10

	CIFFT Size
1	16
1	64
1	256
1	1024

Parameters

- [in] S: points to an instance of the Q15 CFFT/CIFFT structure.
- [inout] pSrc: points to the complex data buffer. Processing occurs in-place.

void **riscv_cfft_radix4_q31** (**const** riscv_cfft_radix4_instance_q31 *S, q31_t *pSrc) Processing function for the Q31 CFFT/CIFFT.

Return none

Input and output formats: Internally input is downscaled by 2 for every stage to avoid saturations inside CFFT/CIFFT process. Hence the output format is different for different FFT sizes. The input and output formats for different FFT sizes and number of bits to upscale are mentioned in the tables below for CFFT and CIFFT:

CFFT Size	Input format	Output Format	Number of bits to upscale
16	1.31	5.27	4
64	1.31	7.25	6
256	1.31	9.23	8
1024	1.31	11.21	10

16 64 256 1024

Parameters

- [in] S: points to an instance of the Q31 CFFT/CIFFT structure
- [inout] pSrc: points to the complex data buffer of size 2*fftLen. Processing occurs inplace

DCT Type IV Functions

DCT Type IV Tables

```
const float32_t Weights_128[256]
const float32_t cos_factors_128[128]
const float32_t Weights_512[1024]
const float32_t cos_factors_512[512]
const float32_t Weights_2048[4096]
const float32_t cos_factors_2048[2048]
const float32_t Weights_8192[16384]
const float32_t cos_factors_8192[8192]
const q31_t WeightsQ31_128[256]
const q31_t cos_factorsQ31_128[128]
const q31_t WeightsQ31_512[1024]
 \texttt{const} \ q31\_t \ \texttt{cos\_factorsQ31\_512} [512] 
const q31_t WeightsQ31_2048[4096]
const q31_t cos_factorsQ31_2048[2048]
const q31_t WeightsQ31_8192[16384]
const q31_t cos_factorsQ31_8192[8192]
group DCT4_IDCT4_Table
     end of RealFFT_Table group
```

Variables

```
const float32_t Weights_128[256]
    Weights Table.
```

Weights tables are generated using the formula:

C command to generate the table

```
where N is the Number of weights to be calculated and c is pi/(2*N)
           In the tables below the real and imaginary values are placed alternatively, hence the array length is 2 * N.
           cosFactor tables are generated using the formula:
           C command to generate the table
           where N is the number of factors to generate and c is pi/(2*N)
     const float32_t cos_factors_128[128]
     const float32_t Weights_512[1024]
     const float32_t cos_factors_512[512]
     const float32_t Weights_2048[4096]
     const float32_t cos_factors_2048[2048]
     const float32 t Weights 8192[16384]
     const float32_t cos_factors_8192[8192]
     const q31_t WeightsQ31_128[256]
           Weights tables are generated using the formula:
           C command to generate the table
           where N is the Number of weights to be calculated and c is pi/(2*N)
           Convert the output to q31 format by multiplying with 2^31 and saturated if required.
           In the tables below the real and imaginary values are placed alternatively, hence the array length is 2 * N.
           cosFactor tables are generated using the formula:
           C command to generate the table
           where N is the number of factors to generate and c is pi/(2*N)
           Then converted to q31 format by multiplying with 2<sup>31</sup> and saturated if required.
     const q31_t cos_factorsQ31_128[128]
     const q31_t WeightsQ31_512[1024]
     const q31_t cos_factorsQ31_512[512]
     const q31 t WeightsQ31 2048[4096]
     \verb"const" q31_t" \verb"cos_factorsQ31_2048" [2048]
     const q31_t WeightsQ31_8192[16384]
     const q31_t cos_factorsQ31_8192[8192]
void riscv_dct4_f32 (const riscv_dct4_instance_f32 *S, float32_t *pState, float32_t *pInlineBuffer)
riscv_status riscv_dct4_init_f32 (riscv_dct4_instance_f32 *S, riscv_rfft_instance_f32 *S_RFFT,
                                      riscv_cfft_radix4_instance_f32 *S_CFFT, uint16_t N, uint16_t
```

3.3. NMSIS DSP API 645

riscv_cfft_radix4_instance_q15 *S_CFFT, uint16_t N, uint16_t

Nby2, float32_t normalize)
riscv_status riscv_dct4_init_q15 (riscv_dct4_instance_q15 *S, riscv_rfft_instance_q15 *S_RFFT,

Nby2, q15_t normalize)

riscv_status **riscv_dct4_init_q31** (riscv_dct4_instance_q31 **S, riscv_rfft_instance_q31 **S_RFFT, riscv_cfft_radix4_instance_q31 **S_CFFT, uint16_t Nby2, q31_t normalize)

void riscv_dct4_q15 (const riscv_dct4_instance_q15 *S, q15_t *pState, q15_t *pInlineBuffer)

void riscv_dct4_q31 (const riscv_dct4_instance_q31 *S, q31_t *pState, q31_t *pInlineBuffer)


group DCT4_IDCT4

Representation of signals by minimum number of values is important for storage and transmission. The possibility of large discontinuity between the beginning and end of a period of a signal in DFT can be avoided by extending the signal so that it is even-symmetric. Discrete Cosine Transform (DCT) is constructed such that its energy is heavily concentrated in the lower part of the spectrum and is very widely used in signal and image coding applications. The family of DCTs (DCT type- 1,2,3,4) is the outcome of different combinations of homogeneous boundary conditions. DCT has an excellent energy-packing capability, hence has many applications and in data compression in particular.

DCT is essentially the Discrete Fourier Transform(DFT) of an even-extended real signal. Reordering of the input data makes the computation of DCT just a problem of computing the DFT of a real signal with a few additional operations. This approach provides regular, simple, and very efficient DCT algorithms for practical hardware and software implementations.

DCT type-II can be implemented using Fast fourier transform (FFT) internally, as the transform is applied on real values, Real FFT can be used. DCT4 is implemented using DCT2 as their implementations are similar except with some added pre-processing and post-processing. DCT2 implementation can be described in the following steps:

- · Re-ordering input
- Calculating Real FFT
- Multiplication of weights and Real FFT output and getting real part from the product.



This process is explained by the block diagram below:

DCT **Algorithm** The N-point type-IV defined as real. linear transformation by the formula: where 0, 1, N-1

$$X_c(k) = \sqrt{\frac{2}{N}} \sum_{n=0}^{N-1} x(n) \cos \left[\left(n + \frac{1}{2} \right) \left(k + \frac{1}{2} \right) \frac{\pi}{N} \right]$$

Its inverse is defined as follows: where n = 0, 1, 2, ..., N-1

$$x(n) = \sqrt{\frac{2}{N}} \sum_{k=0}^{N-1} X_c(k) \cos \left[\left(n + \frac{1}{2} \right) \left(k + \frac{1}{2} \right) \frac{\pi}{N} \right]$$

The DCT4 matrices become involutory (i.e. they are self-inverse) by multiplying with an overall scale factor of sqrt(2/N). The symmetry of the transform matrix indicates that the fast algorithms for the forward and inverse transform computation are identical. Note that the implementation of Inverse DCT4 and DCT4 is same, hence same process function can be used for both.

Lengths supported by the transform: As DCT4 internally uses Real FFT, it supports all the lengths 128, 512, 2048 and 8192. The library provides separate functions for Q15, Q31, and floating-point data types.

Instance Structure The instances for Real FFT and FFT, cosine values table and twiddle factor table are stored in an instance data structure. A separate instance structure must be defined for each transform. There are separate instance structure declarations for each of the 3 supported data types.

Initialization Functions There is also an associated initialization function for each data type. The initialization function performs the following operations:

- Sets the values of the internal structure fields.
- Initializes Real FFT as its process function is used internally in DCT4, by calling riscv_rfft_init_f32().

Use of the initialization function is optional. However, if the initialization function is used, then the instance structure cannot be placed into a const data section. To place an instance structure into a const data section, the instance structure must be manually initialized. Manually initialize the instance structure as follows: where N is the length of the DCT4; Nby2 is half of the length of the DCT4; normalize is normalizing factor used and is equal to sqrt(2/N); pTwiddle points to the twiddle factor table; pCosFactor points to the cosFactor table; pRfft points to the real FFT instance; pCfft points to the complex FFT instance; The CFFT and RFFT structures also needs to be initialized, refer to riscv_cfft_radix4_f32() and riscv_rfft_f32() respectively for details regarding static initialization.

Fixed-Point Behavior Care must be taken when using the fixed-point versions of the DCT4 transform functions. In particular, the overflow and saturation behavior of the accumulator used in each function must be considered. Refer to the function specific documentation below for usage guidelines.

Functions

void **riscv_dct4_f32** (**const** riscv_dct4_instance_f32 *S, float32_t *pState, float32_t *pInlineB-uffer)

Processing function for the floating-point DCT4/IDCT4.

Return none

Parameters

- [in] S: points to an instance of the floating-point DCT4/IDCT4 structure
- [in] pState: points to state buffer
- [inout] pInlineBuffer: points to the in-place input and output buffer

riscv_status **riscv_dct4_init_f32** (riscv_dct4_instance_f32 *S, riscv_rfft_instance_f32 *S_RFFT, riscv_cfft_radix4_instance_f32 *S_CFFT, uint16_t Nby2, float32_t normalize)

Initialization function for the floating-point DCT4/IDCT4.

DCT Size	Normalizing factor value	
2048	0.03125	
512	0.0625	
128	0.125	

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: N is not a supported transform length

Normalizing factor The normalizing factor is sqrt(2/N), which depends on the size of transform N. Floating-point normalizing factors are mentioned in the table below for different DCT sizes:

Parameters

- [inout] S: points to an instance of floating-point DCT4/IDCT4 structure
- [in] S_RFFT: points to an instance of floating-point RFFT/RIFFT structure
- [in] S_CFFT: points to an instance of floating-point CFFT/CIFFT structure
- [in] N: length of the DCT4
- [in] Nby2: half of the length of the DCT4
- [in] normalize: normalizing factor.

riscv_status $riscv_dct4_init_q15$ (riscv_dct4_instance_q15 *S, riscv_rfft_instance_q15 *S_RFFT, riscv_cfft_radix4_instance_q15 *S_CFFT, uint16_t N, uint16_t Nby2, q15_t normalize)

Initialization function for the Q15 DCT4/IDCT4.

DCT Size	Normalizing factor value (hexadecimal)		
2048	0x400		
512	0x800		
128	0x1000		

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: N is not a supported transform length

Normalizing factor The normalizing factor is sqrt (2/N), which depends on the size of transform N. Normalizing factors in 1.15 format are mentioned in the table below for different DCT sizes:

Parameters

- [inout] S: points to an instance of Q15 DCT4/IDCT4 structure
- [in] S_RFFT: points to an instance of Q15 RFFT/RIFFT structure
- [in] S_CFFT: points to an instance of Q15 CFFT/CIFFT structure
- [in] N: length of the DCT4
- [in] Nby2: half of the length of the DCT4
- [in] normalize: normalizing factor

riscv_status $\texttt{riscv_dct4_init_q31}$ (riscv_dct4_instance_q31 *S, riscv_rfft_instance_q31 *S_RFFT, riscv_cfft_radix4_instance_q31 *S_CFFT, uint16_t N, uint16_t Nby2, q31_t normalize) Initialization function for the Q31 DCT4/IDCT4.

DCT Size	Normalizing factor value (hexadecimal)	
2048	0x4000000	
512	0x8000000	
128	0x10000000	

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_ARGUMENT_ERROR: N is not a supported transform length

Normalizing factor: The normalizing factor is sqrt(2/N), which depends on the size of transform N. Normalizing factors in 1.31 format are mentioned in the table below for different DCT sizes:

Parameters

- [inout] S: points to an instance of Q31 DCT4/IDCT4 structure.
- [in] S_RFFT: points to an instance of Q31 RFFT/RIFFT structure
- [in] S_CFFT: points to an instance of Q31 CFFT/CIFFT structure
- [in] N: length of the DCT4.
- [in] Nby2: half of the length of the DCT4.
- [in] normalize: normalizing factor.

void **riscv_dct4_q15** (**const** riscv_dct4_instance_q15 *S, q15_t *pState, q15_t *pInlineBuffer) Processing function for the Q15 DCT4/IDCT4.

DCT Size	Input format	Output format	Number of bits to upscale
2048	1.15	11.5	10
512	1.15	9.7	8
128	1.15	7.9	6

Return none

Input an output formats Internally inputs are downscaled in the RFFT process function to avoid overflows. Number of bits downscaled, depends on the size of the transform. The input and output formats for different DCT sizes and number of bits to upscale are mentioned in the table below:

Parameters

- [in] S: points to an instance of the Q15 DCT4 structure.
- [in] pState: points to state buffer.

• [inout] pInlineBuffer: points to the in-place input and output buffer.

void **riscv_dct4_q31** (**const** riscv_dct4_instance_q31 *S, q31_t *pState, q31_t *pInlineBuffer) Processing function for the Q31 DCT4/IDCT4.

DCT Size	Input format	Output format	Number of bits to upscale
2048	2.30	12.20	11
512	2.30	10.22	9
128	2.30	8.24	7

Return none

Input an output formats Input samples need to be downscaled by 1 bit to avoid saturations in the Q31 DCT process, as the conversion from DCT2 to DCT4 involves one subtraction. Internally inputs are downscaled in the RFFT process function to avoid overflows. Number of bits downscaled, depends on the size of the transform. The input and output formats for different DCT sizes and number of bits to upscale are mentioned in the table below:

Parameters

- [in] S: points to an instance of the Q31 DCT4 structure.
- [in] pState: points to state buffer.
- [inout] pInlineBuffer: points to the in-place input and output buffer.

Real FFT Functions

Real FFT Tables

```
const float32_t realCoefA[8192]
const float32_t realCoefB[8192]
const q31_t realCoefAQ31[8192]
const q31_t realCoefBQ31[8192]
const q15_t __ALIGNED(4)
group RealFFT_Table
```

Functions

```
const q15_t __ALIGNED(4)
  Weights Table.
  Q15 table for reciprocal.
end of DCT4_IDCT4_Table group
  Generation fixed-point realCoefAQ15 array in Q15 format:
  n = 4096
  Convert to fixed point Q15 format round(pATable[i] * pow(2, 15))
  Generation of real_CoefB array:
```

```
n = 4096
            Convert to fixed point Q15 format round(pBTable[i] * pow(2, 15))
            Weights tables are generated using the formula:
            C command to generate the table
            where N is the Number of weights to be calculated and c is pi/(2*N)
            Converted the output to q15 format by multiplying with 2^31 and saturated if required.
            In the tables below the real and imaginary values are placed alternatively, hence the array length is 2 *N.
            cosFactor tables are generated using the formula:
            C command to generate the table
            where N is the number of factors to generate and c is pi/(2*N)
            Then converted to q15 format by multiplying with 2<sup>31</sup> and saturated if required.
     Variables
     const float32_t realCoefA[8192]
            Generation of realCoefA array:
            n = 4096
     const float32_t realCoefB[8192]
            Generation of realCoefB array:
            n = 4096
     const q31_t realCoefAQ31[8192]
            Generation fixed-point realCoefAQ31 array in Q31 format:
            n = 4096
            Convert to fixed point Q31 format round(pATable[i] * pow(2, 31))
     const q31_t realCoefBQ31[8192]
            Generation of realCoefBQ31 array:
            n = 4096
            Convert to fixed point Q31 format round(pBTable[i] * pow(2, 31))
void riscv_rfft_f32 (const riscv_rfft_instance_f32 *S, float32_t *pSrc, float32_t *pDst)
void riscv_rfft_fast_f16 (const riscv_rfft_fast_instance_f16 *S, float16_t *p, float16_t *pOut,
                                uint8_t ifftFlag)
void riscv_rfft_fast_f32 (const riscv_rfft_fast_instance_f32 *S, float32_t *p, float32_t *pOut,
                                uint8 t ifftFlag)
void riscv_rfft_fast_f64 (riscv_rfft_fast_instance_f64 *S, float64_t *p, float64_t *pOut, uint8_t ifft-
                                Flag)
riscv_status riscv_rfft_fast_init_f16 (riscv_rfft_fast_instance_f16 *S, uint16_t fftLen)
riscv_status riscv_rfft_fast_init_f32 (riscv_rfft_fast_instance_f32 *S, uint16_t fftLen)
```

3.3. NMSIS DSP API 651


static riscv_status riscv_rfft_32_fast_init_f64 (riscv_rfft_fast_instance_f64 *S)

```
static riscv status riscv rfft 64 fast init f64 (riscv rfft fast instance f64 *S)
static riscv_status riscv_rfft_128_fast_init_f64 (riscv_rfft_fast_instance_f64 *S)
static riscv_status riscv_rfft_256_fast_init_f64 (riscv_rfft_fast_instance_f64 *S)
static riscv_status riscv_rfft_512_fast_init_f64 (riscv_rfft_fast_instance_f64 *S)
static riscv_status riscv_rfft_1024_fast_init_f64 (riscv_rfft_fast_instance_f64 *S)
static riscv status riscv rfft 2048 fast init f64 (riscv rfft fast instance f64 *S)
static riscv_status riscv_rfft_4096_fast_init_f64 (riscv_rfft_fast_instance_f64 *S)
riscv_status riscv_rfft_fast_init_f64 (riscv_rfft_fast_instance_f64 *S, uint16_t fftLen)
riscv_status riscv_rfft_init_f32 (riscv_rfft_instance_f32
                                                              *S.
                                                                      riscv cfft radix4 instance f32
                                     *S_CFFT, uint32_t fftLenReal, uint32_t ifftFlagR, uint32_t bi-
                                     tReverseFlag)
riscv_status riscv_rfft_init_q15 (riscv_rfft_instance_q15 *S, uint32_t fftLenReal, uint32_t ifftFlagR,
                                     uint32_t bitReverseFlag)
riscv_status riscv_rfft_init_q31 (riscv_rfft_instance_q31 *S, uint32_t fftLenReal, uint32_t ifftFlagR,
                                     uint32_t bitReverseFlag)
void riscv_rfft_q15 (const riscv_rfft_instance_q15 *S, q15_t *pSrc, q15_t *pDst)
void riscv_rfft_q31 (const riscv_rfft_instance_q31 *S, q31_t *pSrc, q31_t *pDst)
group RealFFT
```

The NMSIS DSP library includes specialized algorithms for computing the FFT of real data sequences. The FFT is defined over complex data but in many applications the input is real. Real FFT algorithms take advantage of the symmetry properties of the FFT and have a speed advantage over complex algorithms of the same length.


The Fast RFFT algorithm relays on the mixed radix CFFT that save processor usage.

The real length N forward FFT of a sequence is computed using the steps shown below.

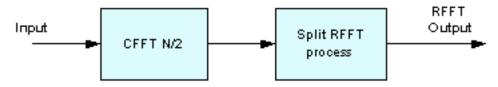

The real sequence is initially treated as if it were complex to perform a CFFT. Later, a processing stage reshapes the data to obtain half of the frequency spectrum in complex format. Except the first complex number that contains the two real numbers X[0] and X[N/2] all the data is complex. In other words, the first complex sample contains two real values packed.

The input for the inverse RFFT should keep the same format as the output of the forward RFFT. A first processing stage pre-process the data to later perform an inverse CFFT.



The algorithms for floating-point, Q15, and Q31 data are slightly different and we describe each algorithm in turn.

Floating-point The main functions are riscv_rfft_fast_f16() and riscv_rfft_fast_init_f16().

- The FFT of a real N-point sequence has even symmetry in the frequency domain. The second half of the data equals the conjugate of the first half flipped in frequency. Looking at the data, we see that we can uniquely represent the FFT using only N/2 complex numbers. These are packed into the output array in alternating real and imaginary components:
- $X = \{ real[0], imag[0], real[1], imag[1], real[2], imag[2] \dots real[(N/2)-1], imag[(N/2)-1] \}$
- It happens that the first complex number (real[0], imag[0]) is actually all real. real[0] represents the DC offset, and imag[0] should be 0. (real[1], imag[1]) is the fundamental frequency, (real[2], imag[2]) is the first harmonic and so on.
- The real FFT functions pack the frequency domain data in this fashion. The forward transform outputs the data in this form and the inverse transform expects input data in this form. The function always performs the needed bitreversal so that the input and output data is always in normal order. The functions support lengths of [32, 64, 128, ..., 4096] samples.
- Q15 and Q31 The real algorithms are defined in a similar manner and utilize N/2 complex transforms behind the scenes.
- The complex transforms used internally include scaling to prevent fixed-point overflows. The overall scaling equals 1/(fftLen/2). Due to the use of complex transform internally, the source buffer is modified by the rfft.
- A separate instance structure must be defined for each transform used but twiddle factor and bit reversal tables can be reused.

There is also an associated initialization function for each data type. The initialization function performs the following operations:

- Sets the values of the internal structure fields.
- Initializes twiddle factor table and bit reversal table pointers.
- Initializes the internal complex FFT data structure.


Use of the initialization function is optional except for MVE versions where it is mandatory. If you don't use the initialization functions, then the structures should be initialized with code similar to the one below: where fftLenReal is the length of the real transform; fftLenBy2 length of the internal complex transform (fftLenReal/2). ifftFlagR Selects forward (=0) or inverse (=1) transform. bitReverseFlagR Selects bit reversed output (=0) or normal order output (=1). twidCoefRModifier stride modifier for the twiddle factor table. The value is based on the FFT length; pTwiddleARealpoints to the A array of twiddle coefficients; pTwiddleBRealpoints to the B array of twiddle coefficients; pCfft points to the CFFT Instance structure. The CFFT structure must also be initialized.

Note that with MVE versions you can't initialize instance structures directly and **must use the initialization function**.

The NMSIS DSP library includes specialized algorithms for computing the FFT of real data sequences. The FFT is defined over complex data but in many applications the input is real. Real FFT algorithms take advantage of the symmetry properties of the FFT and have a speed advantage over complex algorithms of the same length.


The Fast RFFT algorithm relays on the mixed radix CFFT that save processor usage.

The real length N forward FFT of a sequence is computed using the steps shown below.

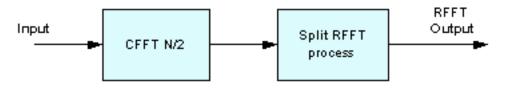

The real sequence is initially treated as if it were complex to perform a CFFT. Later, a processing stage reshapes the data to obtain half of the frequency spectrum in complex format. Except the first complex number that contains the two real numbers X[0] and X[N/2] all the data is complex. In other words, the first complex sample contains two real values packed.

The input for the inverse RFFT should keep the same format as the output of the forward RFFT. A first processing stage pre-process the data to later perform an inverse CFFT.

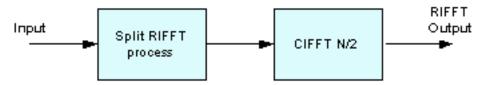

The algorithms for floating-point, Q15, and Q31 data are slightly different and we describe each algorithm in turn.

Floating-point The main functions are riscv_rfft_fast_f32() and riscv_rfft_fast_init_f32(). The older functions riscv_rfft_f32() and riscv_rfft_init_f32() have been deprecated but are still documented.

The FFT of a real N-point sequence has even symmetry in the frequency domain. The second half of the data equals the conjugate of the first half flipped in frequency. Looking at the data, we see that we can uniquely represent the FFT using only N/2 complex numbers. These are packed into the output array in alternating real and imaginary components:

 $X = \{ real[0], imag[0], real[1], imag[1], real[2], imag[2] \dots real[(N/2)-1], imag[(N/2)-1] \}$

It happens that the first complex number (real[0], imag[0]) is actually all real. real[0] represents the DC offset, and imag[0] should be 0. (real[1], imag[1]) is the fundamental frequency, (real[2], imag[2]) is the first harmonic and so on.

The real FFT functions pack the frequency domain data in this fashion. The forward transform outputs the data in this form and the inverse transform expects input data in this form. The function always performs the needed bitreversal so that the input and output data is always in normal order. The functions support lengths of [32, 64, 128, ..., 4096] samples.

Q15 and Q31 The real algorithms are defined in a similar manner and utilize N/2 complex transforms behind the scenes.

The complex transforms used internally include scaling to prevent fixed-point overflows. The overall scaling equals 1/(fftLen/2). Due to the use of complex transform internally, the source buffer is modified by the rfft

A separate instance structure must be defined for each transform used but twiddle factor and bit reversal tables can be reused.

There is also an associated initialization function for each data type. The initialization function performs the following operations:

- Sets the values of the internal structure fields.
- Initializes twiddle factor table and bit reversal table pointers.
- Initializes the internal complex FFT data structure.

Use of the initialization function is optional **except for MVE versions where it is mandatory**. If you don't use the initialization functions, then the structures should be initialized with code similar to the one below: where fftLenReal is the length of the real transform; fftLenBy2 length of the internal complex transform (fftLenReal/2). ifftFlagR Selects forward (=0) or inverse (=1) transform. bitReverseFlagR Selects bit reversed output (=0) or normal order output (=1). twidCoefRModifier stride modifier for the twiddle factor table. The value is based on the FFT length; pTwiddleARealpoints to the A array of

twiddle coefficients; pTwiddleBRealpoints to the B array of twiddle coefficients; pCfft points to the CFFT Instance structure. The CFFT structure must also be initialized.

Note that with MVE versions you can't initialize instance structures directly and **must use the initialization function**.

Functions

```
void riscv_rfft_f32 (const riscv_rfft_instance_f32 *S, float32_t *pSrc, float32_t *pDst)

Processing function for the floating-point RFFT/RIFFT. Source buffer is modified by this function.
```

Return none

For the RIFFT, the source buffer must at least have length fftLenReal + 2. The last two elements must be equal to what would be generated by the RFFT: (pSrc[0] - pSrc[1]) and 0.0f

Parameters

- [in] S: points to an instance of the floating-point RFFT/RIFFT structure
- [in] pSrc: points to the input buffer
- [out] pDst: points to the output buffer

```
void riscv_rfft_fast_f16 (const riscv_rfft_fast_instance_f16 *S, float16_t *p, float16_t *pOut, uint8 t ifftFlag)
```

Processing function for the floating-point real FFT.

Return none

Parameters

- [in] S: points to an riscv_rfft_fast_instance_f16 structure
- [in] p: points to input buffer (Source buffer is modified by this function.)
- [in] pOut: points to output buffer
- [in] ifftFlag:
 - value = 0: RFFT
 - value = 1: RIFFT

```
void riscv_rfft_fast_f32 (const riscv_rfft_fast_instance_f32 *S, float32_t *p, float32_t *pOut, uint8_t ifftFlag)
```

Processing function for the floating-point real FFT.

Return none

Parameters

- [in] S: points to an riscv_rfft_fast_instance_f32 structure
- [in] p: points to input buffer (Source buffer is modified by this function.)
- [in] pOut: points to output buffer
- [in] ifftFlag:
 - value = 0: RFFT
 - value = 1: RIFFT

void **riscv_rfft_fast_f64** (riscv_rfft_fast_instance_f64 *S, float64_t *p, float64_t *pOut, uint8_t ifftFlag)

Processing function for the Double Precision floating-point real FFT.

Return none

Parameters

- [in] S: points to an riscv_rfft_fast_instance_f64 structure
- [in] p: points to input buffer (Source buffer is modified by this function.)
- [in] pOut: points to output buffer
- [in] ifftFlag:
 - value = 0: RFFT
 - value = 1: RIFFT

static riscv_status **riscv_rfft_32_fast_init_f16** (riscv_rfft_fast_instance_f16 **S*) Initialization function for the 32pt floating-point real FFT.

Return execution status

- RISCV MATH SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR : an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f16 structure

static riscv_status **riscv_rfft_64_fast_init_f16** (riscv_rfft_fast_instance_f16 *S) Initialization function for the 64pt floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f16 structure

static riscv_status **riscv_rfft_128_fast_init_f16** (riscv_rfft_fast_instance_f16 **S*) Initialization function for the 128pt floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_ARGUMENT_ERROR : an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f16 structure

static riscv_status **riscv_rfft_256_fast_init_f16** (riscv_rfft_fast_instance_f16 *S) Initialization function for the 256pt floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f16 structure

static riscv_status **riscv_rfft_512_fast_init_f16** (riscv_rfft_fast_instance_f16 **S*) Initialization function for the 512pt floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f16 structure

static riscv_status **riscv_rfft_1024_fast_init_f16** (riscv_rfft_fast_instance_f16 *S) Initialization function for the 1024pt floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV MATH ARGUMENT ERROR: an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f16 structure

static riscv_status **riscv_rfft_2048_fast_init_f16** (riscv_rfft_fast_instance_f16 *S) Initialization function for the 2048pt floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR : an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f16 structure

static riscv_status **riscv_rfft_4096_fast_init_f16** (riscv_rfft_fast_instance_f16 *S) Initialization function for the 4096pt floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f16 structure

riscv_status **riscv_rfft_fast_init_f16** (riscv_rfft_fast_instance_f16 *S, uint16_t fftLen) Initialization function for the floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: fftLen is not a supported length

Description The parameter fftLen specifies the length of RFFT/CIFFT process. Supported FFT Lengths are 32, 64, 128, 256, 512, 1024, 2048, 4096.

This Function also initializes Twiddle factor table pointer and Bit reversal table pointer.

Parameters

- [inout] S: points to an riscv_rfft_fast_instance_f16 structure
- [in] fftLen: length of the Real Sequence

static riscv_status **riscv_rfft_32_fast_init_f32** (riscv_rfft_fast_instance_f32 *S) Initialization function for the 32pt floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR : an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f32 structure

static riscv_status **riscv_rfft_64_fast_init_f32** (riscv_rfft_fast_instance_f32 *S) Initialization function for the 64pt floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_ARGUMENT_ERROR: an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f32 structure

static riscv_status **riscv_rfft_128_fast_init_f32** (riscv_rfft_fast_instance_f32 *S) Initialization function for the 128pt floating-point real FFT.

Return execution status

- RISCV MATH SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f32 structure

static riscv_status **riscv_rfft_256_fast_init_f32** (riscv_rfft_fast_instance_f32 *S) Initialization function for the 256pt floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_ARGUMENT_ERROR: an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f32 structure

static riscv_status **riscv_rfft_512_fast_init_f32** (riscv_rfft_fast_instance_f32 *S) Initialization function for the 512pt floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f32 structure

static riscv_status **riscv_rfft_1024_fast_init_f32** (riscv_rfft_fast_instance_f32 *S) Initialization function for the 1024pt floating-point real FFT.

Return execution status

- RISCV MATH SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR : an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f32 structure

static riscv_status **riscv_rfft_2048_fast_init_f32** (riscv_rfft_fast_instance_f32 *S) Initialization function for the 2048pt floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f32 structure

static riscv_status **riscv_rfft_4096_fast_init_f32** (riscv_rfft_fast_instance_f32 *S) Initialization function for the 4096pt floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_ARGUMENT_ERROR: an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f32 structure

riscv_status riscv_rfft_fast_init_f32 (riscv_rfft_fast_instance_f32 *S, uint16_t fftLen)
Initialization function for the floating-point real FFT.

Return execution status

• RISCV MATH SUCCESS: Operation successful

• RISCV_MATH_ARGUMENT_ERROR: fftLen is not a supported length

Description The parameter fftLen specifies the length of RFFT/CIFFT process. Supported FFT Lengths are 32, 64, 128, 256, 512, 1024, 2048, 4096.

This Function also initializes Twiddle factor table pointer and Bit reversal table pointer.

Parameters

- [inout] S: points to an riscv_rfft_fast_instance_f32 structure
- [in] fftLen: length of the Real Sequence

static riscv_status **riscv_rfft_32_fast_init_f64** (riscv_rfft_fast_instance_f64 **S*) Initialization function for the 32pt double precision floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f64 structure

static riscv_status **riscv_rfft_64_fast_init_f64** (riscv_rfft_fast_instance_f64 **S*) Initialization function for the 64pt Double Precision floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR : an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f64 structure

static riscv_status **riscv_rfft_128_fast_init_f64** (riscv_rfft_fast_instance_f64 **S*) Initialization function for the 128pt Double Precision floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR : an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f64 structure

static riscv_status **riscv_rfft_256_fast_init_f64** (riscv_rfft_fast_instance_f64 **S*) Initialization function for the 256pt Double Precision floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f64 structure

static riscv_status **riscv_rfft_512_fast_init_f64** (riscv_rfft_fast_instance_f64 **S*) Initialization function for the 512pt Double Precision floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV MATH ARGUMENT ERROR: an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f64 structure

static riscv_status **riscv_rfft_1024_fast_init_f64** (riscv_rfft_fast_instance_f64 *S) Initialization function for the 1024pt Double Precision floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR : an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f64 structure

static riscv_status **riscv_rfft_2048_fast_init_f64** (riscv_rfft_fast_instance_f64 **S*) Initialization function for the 2048pt Double Precision floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR : an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f64 structure

static riscv_status **riscv_rfft_4096_fast_init_f64** (riscv_rfft_fast_instance_f64 *S) Initialization function for the 4096pt Double Precision floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR : an error is detected

Parameters

• [inout] S: points to an riscv_rfft_fast_instance_f64 structure

riscv_status **riscv_rfft_fast_init_f64** (riscv_rfft_fast_instance_f64 **S*, uint16_t *fftLen*) Initialization function for the Double Precision floating-point real FFT.

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: fftLen is not a supported length

Description The parameter fftLen specifies the length of RFFT/CIFFT process. Supported FFT Lengths are 32, 64, 128, 256, 512, 1024, 2048, 4096.

This Function also initializes Twiddle factor table pointer and Bit reversal table pointer.

Parameters

- [inout] S: points to an riscv_rfft_fast_instance_f64 structure
- [in] fftLen: length of the Real Sequence

```
riscv_status riscv_rfft_init_f32 (riscv_rfft_instance_f32 *S, riscv_cfft_radix4_instance_f32 *S_CFFT, uint32_t fftLenReal, uint32_t ifftFlagR, uint32_t bitReverseFlag)
```

Initialization function for the floating-point RFFT/RIFFT.

Return execution status

- RISCV_MATH_SUCCESS : Operation successful
- RISCV_MATH_ARGUMENT_ERROR: fftLenReal is not a supported length

Description The parameter fftLenRealspecifies length of RFFT/RIFFT Process. Supported FFT Lengths are 128, 512, 2048.

The parameter ifftFlagR controls whether a forward or inverse transform is computed. Set(=1) ifft-FlagR to calculate RIFFT, otherwise RFFT is calculated.

The parameter bitReverseFlag controls whether output is in normal order or bit reversed order. Set(=1) bitReverseFlag for output to be in normal order otherwise output is in bit reversed order.

This function also initializes Twiddle factor table.

Parameters

- [inout] S: points to an instance of the floating-point RFFT/RIFFT structure
- [inout] S_CFFT: points to an instance of the floating-point CFFT/CIFFT structure
- [in] fftLenReal: length of the FFT.
- [in] ifftFlagR: flag that selects transform direction
 - value = 0: forward transform
 - value = 1: inverse transform
- [in] bitReverseFlag: flag that enables / disables bit reversal of output
 - value = 0: disables bit reversal of output
 - value = 1: enables bit reversal of output

```
riscv_status riscv_rfft_init_q15 (riscv_rfft_instance_q15 *S, uint32_t fftLenReal, uint32_t ifft-flagR, uint32_t bitReverseFlag)

Initialization function for the Q15 RFFT/RIFFT.
```

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: fftLenReal is not a supported length

Details The parameter fftLenReal specifies length of RFFT/RIFFT Process. Supported FFT Lengths are 32, 64, 128, 256, 512, 1024, 2048, 4096, 8192.

The parameter ifftFlagR controls whether a forward or inverse transform is computed. Set(=1) ifft-FlagR to calculate RIFFT, otherwise RFFT is calculated. The parameter bitReverseFlag controls whether output is in normal order or bit reversed order. Set(=1) bitReverseFlag for output to be in normal order otherwise output is in bit reversed order.

This function also initializes Twiddle factor table.

Parameters

- [inout] S: points to an instance of the Q15 RFFT/RIFFT structure
- [in] fftLenReal: length of the FFT
- [in] ifftFlagR: flag that selects transform direction
 - value = 0: forward transform
 - value = 1: inverse transform
- [in] bitReverseFlag: flag that enables / disables bit reversal of output
 - value = 0: disables bit reversal of output
 - value = 1: enables bit reversal of output

```
riscv_status riscv_rfft_init_q31 (riscv_rfft_instance_q31 *S, uint32_t fftLenReal, uint32_t ifft-
FlagR, uint32_t bitReverseFlag)
Initialization function for the Q31 RFFT/RIFFT.
```

Return execution status

- RISCV_MATH_SUCCESS: Operation successful
- RISCV_MATH_ARGUMENT_ERROR: fftLenReal is not a supported length

Details The parameter fftLenReal specifies length of RFFT/RIFFT Process. Supported FFT Lengths are 32, 64, 128, 256, 512, 1024, 2048, 4096, 8192.

The parameter ifftFlagR controls whether a forward or inverse transform is computed. Set(=1) ifft-FlagR to calculate RIFFT, otherwise RFFT is calculated.

The parameter bitReverseFlag controls whether output is in normal order or bit reversed order. Set(=1) bitReverseFlag for output to be in normal order otherwise output is in bit reversed order.

This function also initializes Twiddle factor table.

Parameters

- [inout] S: points to an instance of the Q31 RFFT/RIFFT structure
- [in] fftLenReal: length of the FFT
- [in] ifftFlagR: flag that selects transform direction
 - value = 0: forward transform
 - value = 1: inverse transform
- [in] bitReverseFlag: flag that enables / disables bit reversal of output
 - value = 0: disables bit reversal of output
 - value = 1: enables bit reversal of output

void **riscv_rfft_q15** (**const** riscv_rfft_instance_q15 **S*, q15_t **pSrc*, q15_t **pDst*)

Processing function for the Q15 RFFT/RIFFT.

Return none

Input an output formats Internally input is downscaled by 2 for every stage to avoid saturations inside CFFT/CIFFT process. Hence the output format is different for different RFFT sizes. The input and output formats for different RFFT sizes and number of bits to upscale are mentioned in the tables below for RFFT and RIFFT:

RFFT Size	Input Format	Output Format	Number of bits to
			upscale
32	1.15	5.11	4
64	1.15	6.10	5
128	1.15	7.9	6
256	1.15	8.8	7
512	1.15	9.7	8
1024	1.15	10.6	9
2048	1.15	11.5	10
4096	1.15	12.4	11
8192	1.15	13.3	12

RFFT Size	Input Format	Output Format	Number of bits to
			upscale
32	1.15	5.11	0
64	1.15	6.10	0
128	1.15	7.9	0
256	1.15	8.8	0
512	1.15	9.7	0
1024	1.15	10.6	0
2048	1.15	11.5	0
4096	1.15	12.4	0
8192	1.15	13.3	0

If the input buffer is of length N, the output buffer must have length 2*N. The input buffer is modified by this function.

For the RIFFT, the source buffer must at least have length fftLenReal + 2. The last two elements must be equal to what would be generated by the RFFT: (pSrc[0] - pSrc[1]) >> 1 and 0

Parameters

- [in] S: points to an instance of the Q15 RFFT/RIFFT structure
- [in] pSrc: points to input buffer (Source buffer is modified by this function.)
- [out] pDst: points to output buffer

void **riscv_rfft_q31** (**const** riscv_rfft_instance_q31 *S, q31_t *pSrc, q31_t *pDst) Processing function for the Q31 RFFT/RIFFT.

Return none

Input an output formats Internally input is downscaled by 2 for every stage to avoid saturations inside CFFT/CIFFT process. Hence the output format is different for different RFFT sizes. The input and

output formats for different R	FT sizes and number	of bits to upscale are	mentioned in the tables
below for RFFT and RIFFT:			

RFFT Size	Input Format	Output Format	Number of bits to
			upscale
32	1.31	5.27	4
64	1.31	6.26	5
128	1.31	7.25	6
256	1.31	8.24	7
512	1.31	9.23	8
1024	1.31	10.22	9
2048	1.31	11.21	10
4096	1.31	21.20	11
8192	1.31	13.19	12

RFFT Size	Input Format	Output Format	Number of bits to
			upscale
32	1.31	5.27	0
64	1.31	6.26	0
128	1.31	7.25	0
256	1.31	8.24	0
512	1.31	9.23	0
1024	1.31	10.22	0
2048	1.31	11.21	0
4096	1.31	12.20	0
8192	1.31	13.19	0

If the input buffer is of length N, the output buffer must have length 2*N. The input buffer is modified by this function.

For the RIFFT, the source buffer must at least have length fftLenReal + 2. The last two elements must be equal to what would be generated by the RFFT: (pSrc[0] - pSrc[1]) >> 1 and 0

Parameters

- [in] S: points to an instance of the Q31 RFFT/RIFFT structure
- [in] pSrc: points to input buffer (Source buffer is modified by this function)
- [out] pDst: points to output buffer

group groupTransforms

3.4 Changelog

3.4.1 V1.0.2

This is release 1.0.2 version of NMSIS-DSP library.

3.4. Changelog 665

- Sync up to CMSIS DSP library 1.9.0
- Adding initial support for RISC-V vector extension support
- Caution: riscv_math.h is separated into several header files. Extra PrivateInclude folder is included as header folder.

3.4.2 V1.0.1

This is release V1.0.1 version of NMSIS-DSP library.

- Both Nuclei RISC-V 32 and 64 bit cores are supported now.
- Libraries are optimized for RISC-V 32 and 64 bit DSP instructions.
- The NN examples are now using Nuclei SDK as running environment.

3.4.3 V1.0.0

This is the first version of NMSIS-DSP library.

We adapt the CMSIS-DSP v1.6.0 library to use RISCV DSP instructions, all the API names now are renamed from arm_xxx to $riscv_xxx$.

CHAPTER

FOUR

NMSIS NN

4.1 Overview

4.1.1 Introduction

This user manual describes the NMSIS NN software library, a collection of efficient neural network kernels developed to maximize the performance and minimize the memory footprint of neural networks on Nuclei N/NX Class Processors cores.

The library is divided into a number of functions each covering a specific category:

- Neural Network Convolution Functions
- Neural Network Activation Functions
- Fully-connected Layer Functions
- Neural Network Pooling Functions
- Softmax Functions
- Neural Network Support Functions

The library has separate functions for operating on different weight and activation data types including 8-bit integers (q7_t) and 16-bit integers (q15_t). The descrition of the kernels are included in the function description.

The implementation details are also described in this paper CMSIS-NN: Efficient Neural Network Kernels for Arm Cortex-M CPUs²³.

4.1.2 Block Diagram

4.1.3 Examples

The library ships with a number of examples which demonstrate how to use the library functions.

- Convolutional Neural Network Example (page 725)
- Gated Recurrent Unit Example (page 726)

²³ https://arxiv.org/abs/1801.06601

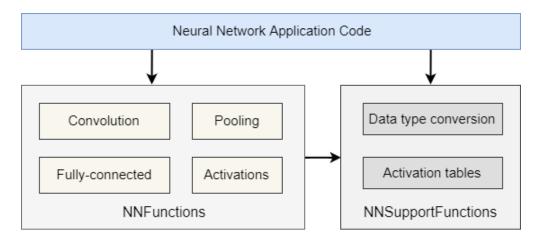


Fig. 1: NMSIS NN Block Diagram

4.1.4 Pre-processor Macros

Each library project have different pre-processor macros.

This library is only built for little endian targets.

RISCV_MATH_DSP: Define macro RISCV_MATH_DSP, If the silicon supports DSP instructions.

RISCV_NN_TRUNCATE: Define macro RISCV_NN_TRUNCATE to use floor instead of round-to-the-nearest-int for the computation.

4.2 Using NMSIS-NN

Here we will describe how to run the nmsis nn examples in Nuclei Spike.

4.2.1 Preparation

- Nuclei Modified Spike xl_spike
- Nuclei SDK modified for xl_spike branch dev_xlspike
- Nuclei RISCV GNU Toolchain, riscv gcc 10 with vector extension is required.
- CMake >= 3.5

4.2.2 Tool Setup

1. Export **PATH** correctly for xl_spike and riscv-nuclei-elf-gcc

export PATH=/path/to/xl_spike/bin:/path/to/riscv-nuclei-elf-gcc/bin/:\$PATH

4.2.3 Build NMSIS NN Library

- 1. Download or clone NMSIS source code into NMSIS directory.
- 2. cd to NMSIS/NMSIS/ directory

- 3. Build NMSIS NN library using make gen_nn_lib
- 4. Strip debug informations using make strip_nn_lib to make the generated library smaller
- 5. The nn library will be generated into ./Library/NN/GCC folder
- 6. The nn libraries will be look like this:

```
$ ls -lh Library/NN/GCC/
total 13M
-rw-rw-r-- 1 hqfang nucleisys 425K Aug 6 16:10 libnmsis_nn_rv32imac.a
-rw-rw-r-- 1 hqfang nucleisys 743K Aug 6 16:10 libnmsis_nn_rv32imacp.a
-rw-rw-r-- 1 hqfang nucleisys 425K Aug 6 16:10 libnmsis_nn_rv32imafc.a
-rw-rw-r-- 1 hqfang nucleisys 743K Aug 6 16:10 libnmsis_nn_rv32imafcp.a
-rw-rw-r-- 1 hqfanq nucleisys 425K Aug 6 16:10 libnmsis_nn_rv32imafdc.a
-rw-rw-r-- 1 hqfanq nucleisys 743K Aug 6 16:10 libnmsis_nn_rv32imafdcp.a
-rw-rw-r-- 1 hqfanq nucleisys 605K Aug 6 16:10 libnmsis_nn_rv64imac.a
-rw-rw-r-- 1 hqfang nucleisys 1.1M Aug 6 16:10 libnmsis_nn_rv64imacp.a
-rw-rw-r-- 1 hqfang nucleisys 606K Aug 6 16:10 libnmsis_nn_rv64imafc.a
-rw-rw-r-- 1 hqfanq nucleisys 1.1M Aug 6 16:10 libnmsis_nn_rv64imafcp.a
-rw-rw-r-- 1 hqfang nucleisys 1.1M Aug 6 16:10 libnmsis_nn_rv64imafcpv.a
-rw-rw-r-- 1 hqfang nucleisys 931K Aug 6 16:10 libnmsis_nn_rv64imafcv.a
-rw-rw-r-- 1 hqfang nucleisys 606K Aug 6 16:10 libnmsis_nn_rv64imafdc.a
-rw-rw-r-- 1 hqfang nucleisys 1.1M Aug 6 16:10 libnmsis_nn_rv64imafdcp.a
-rw-rw-r-- 1 hqfang nucleisys 1.1M Aug 6 16:10 libnmsis_nn_rv64imafdcpv.a
-rw-rw-r-- 1 hqfang nucleisys 932K Aug 6 16:10 libnmsis_nn_rv64imafdcv.a
```

- 7. library name with extra p is build with RISCV DSP enabled.
 - libnmsis_nn_rv32imac.a: Build for RISCV_ARCH=rv32imac without DSP enabled.
 - libnmsis_nn_rv32imacp.a: Build for RISCV_ARCH=rv32imac with DSP enabled.
- 8. library name with extra v is build with RISCV Vector enabled, only valid for RISC-V 64bit processor.
 - libnmsis_nn_rv64imac.a: Build for RISCV_ARCH=rv64imac without Vector.
 - libnmsis_nn_rv64imacv.a: Build for RISCV_ARCH=rv64imac with Vector enabled.

Note:

- You can also directly build both DSP and NN library using make gen
- You can strip the generated DSP and NN library using make strip
- DSP and Vector extension can be combined, such as p, v and pv
- Vector extension currently is only available with RISC-V 64 bit processor

4.2.4 How to run

1. Set environment variables NUCLEI_SDK_ROOT and NUCLEI_SDK_NMSIS, and set Nuclei SDK SoC to xl-spike

```
export NUCLEI_SDK_ROOT=/path/to/nuclei_sdk
export NUCLEI_SDK_NMSIS=/path/to/NMSIS/NMSIS
export SOC=xlspike
```

2. Let us take ./cifar10/ for example

- 2. cd ./cifar10/
- 3. Run with RISCV DSP enabled and Vector enabled NMSIS-NN library for CORE ux600

```
# Clean project
make DSP_ENABLE=ON VECTOR_ENABLE=ON CORE=ux600 clean
# Build project
make DSP_ENABLE=ON VECTOR_ENABLE=ON CORE=ux600 all
# Run application using xl_spike
make DSP_ENABLE=ON VECTOR_ENABLE=ON CORE=ux600 run
```

4. Run with RISCV DSP disabled and Vector disabled NMSIS-NN library for CORE ux600

```
make DSP_ENABLE=OFF VECTOR_ENABLE=OFF CORE=ux600 clean
make DSP_ENABLE=OFF VECTOR_ENABLE=OFF CORE=ux600 all
make DSP_ENABLE=OFF VECTOR_ENABLE=OFF CORE=ux600 run
```

Note:

• You can easily run this example in your hardware, if you have enough memory to run it, just modify the SOC to the one your are using in step 1.

4.3 NMSIS NN API

If you want to access doxygen generated NMSIS NN API, please click NMSIS NN API Doxygen Documentation.

4.3.1 Neural Network Functions

Activation Functions

```
void riscv_nn_activations_direct_q15 (q15_t *data, uint16_t size, uint16_t int_width, riscv_nn_activation_type type)

void riscv_nn_activations_direct_q7 (q7_t *data, uint16_t size, uint16_t int_width, riscv_nn_activation_type type)

void riscv_relu6_s8 (q7_t *data, uint16_t size)

void riscv_relu_q15 (q15_t *data, uint16_t size)

void riscv_relu_q7 (q7_t *data, uint16_t size)

group Acti

Perform activation layers, including ReLU (Rectified Linear Unit), sigmoid and tanh
```

Functions

```
void riscv_nn_activations_direct_q15 (q15_t *data, uint16_t size, uint16_t int_width, riscv_nn_activation_type type) neural network activation function using direct table look-up

Q15 neural network activation function using direct table look-up.
```

Note Refer header file for details.

```
void riscv_nn_activations_direct_q7 (q7_t *data, uint16_t size, uint16_t int_width, riscv nn activation type type)
```

Q7 neural network activation function using direct table look-up.

This is the direct table look-up approach.

Parameters

- [inout] data: pointer to input
- [in] size: number of elements
- [in] int_width: bit-width of the integer part, assume to be smaller than 3
- [in] type: type of activation functions

Assume here the integer part of the fixed-point is <= 3. More than 3 just not making much sense, makes no difference with saturation followed by any of these activation functions.

```
void riscv_relu6_s8 (q7_t *data, uint16_t size)
s8 ReLU6 function
```

Parameters

- [inout] data: pointer to input
- [in] size: number of elements

```
void riscv_relu_q15 (q15_t *data, uint16_t size) Q15 RELU function.
```

Optimized relu with QSUB instructions.

Parameters

- [inout] data: pointer to input
- [in] size: number of elements

```
void riscv_relu_q7 (q7_t *data, uint16_t size)
Q7 RELU function.
```

Optimized relu with QSUB instructions.

Parameters

- [inout] data: pointer to input
- [in] size: number of elements

Basic math functions

```
riscv_status riscv_elementwise_add_s8 (const int8_t *input_1_vect, const int8_t *input_2_vect, const int32_t input_1_offset, const int32_t input_1_mult, const int32_t input_1_shift, const int32_t input_2_offset, const int32_t input_2_mult, const int32_t input_2_shift, const int32_t input_2_shift, int8_t *output, const int32_t out_offset, const int32_t out_mult, const int32_t out_shift, const int32_t out_activation_min, const int32_t out_activation_max, const uint32_t block_size)
```

4.3. NMSIS NN API 671

riscv_status riscv_elementwise_mul_s8 (const int8_t *input_1_vect, const int8_t *input_2_vect, const int32_t input_1_offset, const int32_t input_2_offset, int8_t *output, const int32_t out_offset, const int32_t out_shift, const int32_t out_activation_min, const int32_t out_activation max, const unt32_t block size)

group BasicMath

Element wise add and multiplication functions.

Functions

riscv_status riscv_elementwise_add_s8 (const int8_t *input_1_vect, const int8_t *input_2_vect, const int32_t input_1_offset, const int32_t input_1_mult, const int32_t input_1_shift, const int32_t input_2_offset, const int32_t input_2_mult, const int32_t input_2_shift, const int32_t left_shift, int8_t *output, const int32_t out_offset, const int32_t out_offset, const int32_t out_activation_min, const int32_t out_activation_max, const uint32_t block_size)

s8 element wise add of two vectors

Return The function returns RISCV_MATH_SUCCESS

Parameters

- [in] input_1_vect: pointer to input vector 1
- [in] input_2_vect: pointer to input vector 2
- [in] input_1_offset: offset for input 1. Range: Range: -127 to 128
- [in] input 1 mult: multiplier for input 1
- [in] input_1_shift: shift for input 1
- [in] input_2_offset: offset for input 2. Range: Range: -127 to 128
- [in] input_2_mult: multiplier for input 2
- [in] input_2_shift: shift for input 2
- [in] left_shift: input left shift
- [inout] output: pointer to output vector
- [in] out_offset: output offset
- [in] out_mult: output multiplier
- [in] out_shift: output shift
- [in] out_activation_min: minimum value to clamp output to
- [in] out_activation_max: maximum value to clamp output to
- [in] block_size: number of samples

```
riscv_status riscv_elementwise_mul_s8 (const int8_t *input_1_vect, const int8_t *input_2_vect, const int32_t input_1_offset, const int32_t input_2_offset, int8_t *output, const int32_t out_offset, const int32_t out_mult, const int32_t out_shift, const int32_t out_activation_min, const int32_t out_activation_max, const uint32_t block size)
```

s8 element wise multiplication of two vectors

s8 element wise multiplication

Note Refer header file for details.

Concatenation Functions

group Concatenation

Functions

```
void riscv_concatenation_s8_w(const int8_t *input, const uint16_t input_x, const uint16_t input_y, const uint16_t input_z, const uint16_t input_z, const uint16_t input_w, int8 t *output, const uint32 t offset w)
```

int8/uint8 concatenation function to be used for concatenating N-tensors along the W axis (Batch size) This function should be called for each input tensor to concatenate. The argument offset_w will be used to store the input tensor in the correct position in the output tensor

```
i.e. offset_w = 0 for(i = 0 i < num_input_tensors; ++i) { riscv_concatenation_s8_w(&input[i], ..., &output, ..., ..., offset_w) offset_w += input_w[i] }
```

This function assumes that the output tensor has:

- 1. The same width of the input tensor
- 2. The same height of the input tensor
- 3. The same number o channels of the input tensor

Unless specified otherwise, arguments are mandatory.

Note This function, data layout independent, can be used to concatenate either int8 or uint8 tensors because it does not involve any arithmetic operation

Parameters

4.3. NMSIS NN API 673

- [in] input: Pointer to input tensor
- [in] input_x: Width of input tensor
- [in] input_y: Height of input tensor
- [in] input_z: Channels in input tensor
- [in] input w: Batch size in input tensor
- [out] output: Pointer to output tensor
- [in] offset_w: The offset on the W axis to start concatenating the input tensor It is user responsibility to provide the correct value

int8/uint8 concatenation function to be used for concatenating N-tensors along the X axis This function should be called for each input tensor to concatenate. The argument offset_x will be used to store the input tensor in the correct position in the output tensor

```
i.e. offset_x = 0 for(i = 0 i < num_input_tensors; ++i) { riscv_concatenation_s8_x(&input[i], ..., &output, ..., ..., offset_x) offset_x += input_x[i] }
```

This function assumes that the output tensor has:

- 1. The same height of the input tensor
- 2. The same number of channels of the input tensor
- 3. The same batch size of the input tensor

Unless specified otherwise, arguments are mandatory.

Input constraints offset_x is less than output_x

Note This function, data layout independent, can be used to concatenate either int8 or uint8 tensors because it does not involve any arithmetic operation

Parameters

- [in] input: Pointer to input tensor
- [in] input_x: Width of input tensor
- [in] input_y: Height of input tensor
- [in] input_z: Channels in input tensor
- [in] input_w: Batch size in input tensor
- [out] output: Pointer to output tensor
- [in] output_x: Width of output tensor
- [in] offset_x: The offset (in number of elements) on the X axis to start concatenating the input tensor It is user responsibility to provide the correct value

int8/uint8 concatenation function to be used for concatenating N-tensors along the Y axis This function

should be called for each input tensor to concatenate. The argument offset_y will be used to store the input tensor in the correct position in the output tensor

```
i.e. offset_y = 0 for(i = 0 i < num_input_tensors; ++i) { riscv_concatenation_s8_y(&input[i], ..., &output, ..., ..., offset_y) offset_y += input_y[i] }
```

This function assumes that the output tensor has:

- 1. The same width of the input tensor
- 2. The same number of channels of the input tensor
- 3. The same batch size of the input tensor

Unless specified otherwise, arguments are mandatory.

Input constraints offset_y is less than output_y

Note This function, data layout independent, can be used to concatenate either int8 or uint8 tensors because it does not involve any arithmetic operation

Parameters

- [in] input: Pointer to input tensor
- [in] input_x: Width of input tensor
- [in] input_y: Height of input tensor
- [in] input_z: Channels in input tensor
- [in] input_w: Batch size in input tensor
- [out] output: Pointer to output tensor
- [in] output_y: Height of output tensor
- [in] offset_y: The offset on the Y axis to start concatenating the input tensor It is user responsibility to provide the correct value

int8/uint8 concatenation function to be used for concatenating N-tensors along the Z axis This function should be called for each input tensor to concatenate. The argument offset_z will be used to store the input tensor in the correct position in the output tensor

```
i.e. offset_z = 0 for(i = 0 i < num_input_tensors; ++i) { riscv_concatenation_s8_z(&input[i], ..., &output, ..., ..., offset_z) offset_z += input_z[i] }
```

This function assumes that the output tensor has:

- 1. The same width of the input tensor
- 2. The same height of the input tensor
- 3. The same batch size of the input tensor

Unless specified otherwise, arguments are mandatory.

Input constraints offset_z is less than output_z

Note This function, data layout independent, can be used to concatenate either int8 or uint8 tensors because it does not involve any arithmetic operation

Parameters

4.3. NMSIS NN API 675

- [in] input: Pointer to input tensor
- [in] input x: Width of input tensor
- [in] input_y: Height of input tensor
- [in] input_z: Channels in input tensor
- [in] input w: Batch size in input tensor
- [out] output: Pointer to output tensor
- [in] output_z: Channels in output tensor
- [in] offset_z: The offset on the Z axis to start concatenating the input tensor It is user responsibility to provide the correct value

Convolution Functions

```
riscv_status riscv_convolve_1_x_n_s8 (const nmsis_nn_context *ctx, const nmsis_nn_conv_params *conv_params, const nmsis_nn_per_channel_quant_params *quant_params, const nmsis_nn_dims *input_dims, const q7_t *input_data, const nmsis_nn_dims *filter_dims, const q7_t *filter_data, const nmsis_nn_dims *bias_dims, const int32_t *bias_data, const nmsis_nn_dims *output_dims, q7_t *output_data)
```

int32_t riscv_convolve_1_x_n_s8_get_buffer_size(const nmsis_nn_dims *input_dims, const nmsis_nn_dims *filter_dims)

riscv_status riscv_convolve_1x1_HWC_q7_fast_nonsquare (const q7_t *Im_in, const uint16_t dim_im_in_x, const

uint16 t dim_im_in_y, const uint16 t ch im in, const q7 t *wt, const uint16 t ch im out, const uint16_t dim_kernel_x, const uint16 t dim kernel y, const uint16_t padding_x, const uint16_t padding_y, const uint16_t stride_x, const uint16_t stride_y, const q7_t *bias, const uint16_t bias_shift, const uint16_t out_shift, q7_t *Im_out, const uint16_t dim_im_out_x, const uint16_t dim_im_out_y, q15_t *bufferA, q7_t *bufferB)

riscv_status riscv_convolve_1x1_s8_fast (const nmsis_nn_context *ctx, const nmsis_nn_conv_params *conv_params, const nmsis_nn_per_channel_quant_params *quant_params, const nmsis_nn_dims *input_dims, const q7_t *input_data, const nmsis_nn_dims *filter_dims, const q7_t *filter_data, const nmsis_nn_dims *bias_dims, const int32_t *bias_data, const nmsis_nn_dims *output dims, q7_t *output data)

int32_t riscv_convolve_1x1_s8_fast_get_buffer_size (const nmsis_nn_dims *input_dims)

```
riscv_status riscv_convolve_HWC_q15_basic (const q15_t *Im_in, const uint16_t dim im in,
                                               const uint16_t ch_im_in, const q15_t *wt, const
                                               uint16 t ch im out, const uint16 t dim kernel,
                                               const uint16_t padding, const uint16_t stride,
                                               const q15_t *bias, const uint16_t bias_shift,
                                               const uint16 t out shift, q15 t *Im out, const
                                               uint16 t dim im out, q15 t *bufferA, q7 t *bufferB)
riscv_status riscv_convolve_HWC_q15_fast (const q15_t *Im_in, const uint16_t dim_im_in,
                                             const uint16 t ch im in, const q15 t *wt, const
                                             uint16_t ch_im_out, const uint16_t dim_kernel,
                                             const uint16_t padding, const uint16_t stride,
                                             const q15 t*bias, const uint16 t bias shift, const
                                             uint16_t out_shift, q15_t *Im_out, const uint16_t
                                             dim_im_out, q15_t *bufferA, q7_t *bufferB)
riscv_status riscv_convolve_HWC_q15_fast_nonsquare (const
                                                                   q15 t
                                                                            *Im in,
                                                                                      const
                                                                     dim im in x,
                                                                                      const
                                                                     dim_im_in_y,
                                                          uint16 t
                                                                                      const
                                                          uint16_t ch_im_in, const q15_t
                                                                 const uint16_t ch_im_out,
                                                          const uint16_t dim_kernel_x, const
                                                          uint16_t dim_kernel_y, const uint16_t
                                                          padding x, const uint16 t padding y,
                                                          const uint16_t stride_x,
                                                                                      const
                                                          uint16_t stride_y, const q15_t *bias,
                                                          const uint16_t bias_shift, const
                                                          uint16_t out_shift, q15_t *Im_out,
                                                          const uint16 t dim im out x, const
                                                          uint16_t dim_im_out_y, q15_t *bufferA,
                                                          q7 t*bufferB)
riscv_status riscv_convolve_HWC_q7_basic(const q7_t *Im_in, const uint16_t dim_im_in,
                                             const uint16_t ch_im_in, const q7_t *wt, const
                                             uint16_t ch_im_out, const uint16_t dim_kernel,
                                             const uint16_t padding, const uint16_t stride,
                                             const q7 t *bias, const uint16 t bias shift, const
                                             uint16_t out_shift, q7_t *Im_out, const uint16_t
                                             dim im out, q15 t*bufferA, q7 t*bufferB)
riscv status riscv convolve HWC q7 basic nonsquare (const q7 t *Im in, const uint16 t
                                                          dim_im_in_x,
                                                                           const
                                                                                      uint16 t
                                                          dim im in y,
                                                                           const
                                                                                      uint16 t
                                                          ch_im_in, const q7_t *wt, const
                                                          uint16_t ch_im_out, const uint16_t
                                                          dim\ kernel\ x,
                                                                           const
                                                                                      uint16 t
                                                          dim kernel v.
                                                                           const
                                                                                      uint16 t
                                                          padding_x, const uint16_t padding_y,
                                                          const uint16_t stride_x, const
                                                          uint16_t stride_y, const q7_t *bias,
                                                          const uint16_t bias_shift, const
                                                          uint16_t out_shift, q7_t *Im_out, const
                                                          uint16_t dim_im_out_x, const uint16_t
                                                          dim_im_out_y, q15_t *bufferA, q7_t
```

4.3. NMSIS NN API 677

*bufferB)

```
riscv_status riscv_convolve_HWC_q7_fast (const q7_t *Im_in, const uint16_t dim_im_in, const
                                                                                  uint16_t ch_im_in, const q7_t *wt, const uint16_t
                                                                                  ch im out, const uint16 t dim kernel, const uint16 t
                                                                                  padding, const uint16_t stride, const q7_t *bias,
                                                                                  const uint16_t bias_shift, const uint16_t out_shift,
                                                                                  q7 t *Im out, const uint16 t dim im out, q15 t
                                                                                  *bufferA, q7 t *bufferB)
riscv_status riscv_convolve_HWC_q7_fast_nonsquare(const q7_t *Im_in, const uint16_t
                                                                                                          dim im in x,
                                                                                                                                         const
                                                                                                                                                               uint16 t
                                                                                                         dim_im_in_y, const uint16_t ch_im_in,
                                                                                                          const q7_t *wt, const uint16_t
                                                                                                         ch_im_out, const uint16_t dim_kernel_x,
                                                                                                          const uint16_t dim_kernel_y, const
                                                                                                         uint16_t padding_x, const uint16_t
                                                                                                         padding_y, const uint16_t stride_x,
                                                                                                         const uint16_t stride_y, const q7_t
                                                                                                          *bias, const uint16_t bias_shift, const
                                                                                                         uint16_t out_shift, q7_t *Im_out, const
                                                                                                         uint16_t dim_im_out_x, const uint16_t
                                                                                                         dim_im_out_y, q15_t *bufferA, q7_t
                                                                                                          *bufferB)
riscv_status riscv_convolve_HWC_q7_RGB (const q7_t *Im_in, const uint16_t dim_im_in, const
                                                                                uint16_t ch_im_in, const q7_t *wt, const uint16_t
                                                                                ch im out, const uint16 t dim kernel, const uint16 t
                                                                                padding, const uint16_t stride, const q7_t *bias,
                                                                                const uint16 t bias shift, const uint16 t out shift, q7 t
                                                                                *Im out, const uint16 t dim im out, q15 t *bufferA, q7 t
                                                                                *bufferB)
riscv status riscv convolve s8 (const nmsis nn context *ctx, const nmsis nn conv params
                                                             *conv params,
                                                                                              const
                                                                                                                 nmsis_nn_per_channel_quant_params
                                                             *quant params, const nmsis nn dims *input dims, const q7 t
                                                             *input_data, const nmsis_nn_dims *filter_dims, const q7_t
                                                             *filter data, const nmsis nn dims *bias dims, const int32 t
                                                             *bias_data, const nmsis_nn_dims *output_dims, q7_t *output_data)
int32_t riscv_convolve_s8_get_buffer_size (const nmsis_nn_dims *input_dims, const nm-
                                                                                           sis nn dims *filter dims)
riscv_status riscv_convolve_wrapper_s8 (const
                                                                                                  nmsis_nn_context
                                                                                                                                     *ctx.
                                                                                                                                                    const
                                                                                                                                                                      nm-
                                                                                sis nn conv params
                                                                                                                      *conv params,
                                                                                                                                                     const
                                                                                                                                                                      nm-
                                                                                sis_nn_per_channel_quant_params
                                                                                                                                                    *quant_params,
                                                                                const nmsis_nn_dims *input_dims, const q7_t *in-
                                                                                put_data, const nmsis_nn_dims *filter_dims, const q7_t
                                                                                *filter_data, const nmsis_nn_dims *bias_dims, const
                                                                                int32_t *bias_data, const nmsis_nn_dims *output_dims,
                                                                                q7_t *output_data)
int 32\_t \verb| riscv_convolve_wrapper_s8_get_buffer_size | (constitution of the constitution of the constit
                                                                                                                                       nmsis_nn_conv_params
                                                                                                              *conv_params, const nmsis_nn_dims
                                                                                                              *input dims, const nmsis nn dims
                                                                                                              *filter_dims, const nmsis_nn_dims
                                                                                                              *output_dims)
```

- riscv_status riscv_depthwise_conv_3x3_s8 (const nmsis_nn_context *ctx, const nmsis_nn_dw_conv_params *dw_conv_params, const nmsis_nn_per_channel_quant_params *quant_params, const nmsis_nn_dims *input_dims, const q7_t *input_data, const nmsis_nn_dims *filter_dims, const q7_t *filter_data, const nmsis_nn_dims *bias_dims, const int32_t *bias_data, const nmsis_nn_dims *output dims, q7 t *output data)
- static void depthwise_conv_s8_mult_4 (const int8_t *input, const int32_t input_x, const int32_t input_ch, const int8_t *kernel, const int32_t output_ch, const int32_t ch_mult, const int32_t kernel_x, const int32_t kernel_y, const int32_t pad_x, const int32_t pad_y, const int32_t stride_x, const int32_t stride_y, const int32_t *bias, int8_t *output, const int32_t *output_shift, const int32_t *output_mult, const int32_t output_x, const int32_t output_y, const int32_t output_activation_min, const int32_t output_activation_min, const int32_t output_activation_min, const int32_t output_activation_max)
- static void depthwise_conv_s8_generic (const q7_t *input, const uint16_t input_batches, const uint16_t input_x, const uint16_t input_y, const uint16_t input_ch, const q7_t *kernel, const uint16_t output_ch, const uint16_t ch_mult, const uint16_t kernel_x, const uint16_t kernel_y, const uint16_t pad_x, const uint16_t pad_y, const uint16_t stride_y, const uint16_t stride_y, const uint32_t *bias, q7_t *output, const int32_t *output_shift, const int32_t *output_mult, const uint16_t output_y, const int32_t output_offset, const int32_t input_offset, const int32_t output_activation_min, const int32_t output_activation_min, const int32_t output_activation_min, const int32_t output_activation_max)
- riscv_status riscv_depthwise_conv_s8 (const nmsis_nn_context *ctx, const nmsis_nn_dw_conv_params *dw_conv_params, const nmsis_nn_per_channel_quant_params *quant_params, const nmsis_nn_dims *input_dims, const q7_t *input_data, const nmsis_nn_dims *filter_dims, const q7_t *filter_data, const nmsis_nn_dims *bias_dims, const int32_t *bias_data, const nmsis_nn_dims *output_dims, q7_t *output_data)
- riscv_status riscv_depthwise_conv_s8_opt (const nmsis_nn_context *ctx, const nmsis_nn_dw_conv_params *dw_conv_params, const nmsis_nn_per_channel_quant_params *quant_params, const nmsis_nn_dims *input_dims, const q7_t *input_data, const nmsis_nn_dims *filter_dims, const q7_t *filter_data, const nmsis_nn_dims *bias_dims, const int32_t *bias_data, const nmsis_nn_dims *output dims, q7 t *output data)

static void depthwise_conv_u8_mult_4 (const uint8_t *input, const int32_t input_x, const int32_t input_ch, const uint8_t *kernel, const int32_t output_ch, const int32_t ch_mult, const int32_t kernel_x, const int32_t kernel_y, const int32_t pad_x, const int32_t pad_y, const int32_t stride_x, const int32_t stride_y, const int32_t *bias, uint8_t *output, const int32_t output_shift, const int32_t output_mult, const int32_t output_x, const int32_t output_offset, const int32_t input_offset, const int32_t input_offset, const int32_t output_activation_min, const int32_t output_put_activation_min, const int32_t output_put_activation_max)

static void depthwise_conv_u8_generic (const uint8_t *input, const int32_t input_x, const int32_t input_ch, const int32_t input_ch, const uint8_t *kernel, const int32_t output_ch, const int32_t ch_mult, const int32_t kernel_x, const int32_t kernel_y, const int32_t pad_x, const int32_t pad_y, const int32_t stride_x, const int32_t stride_y, const int32_t *bias, uint8_t *output, const int32_t output_shift, const int32_t output_mult, const int32_t output_x, const int32_t output_put_offset, const int32_t input_offset, const int32_t filter_offset, const int32_t output_activation_min, const int32_t output_activation_max)

riscv_status riscv_depthwise_conv_u8_basic_ver1 (const_uint8_t *input, const_uint16_t input x, const uint16 t input y, const uint16 t input ch, const uint8 t *kernel, const uint16 t kernel x, const uint16 t kernel y, const int16 t ch mult, const int16_t pad_x, const int16_t pad_y, const int16_t *stride_x*, **const** int16_t *stride_y*, const int16_t dilation_x, const int16_t dilation_y, const int32_t *bias, const int32_t input_offset, const int32_t filter_offset, const int32_t output_offset, uint8_t *output, const uint16_t output_x, const uint16_t output_y, const int32_t output_activation_min, const int32 t output activation max, const int32 t output_shift, const int32_t output_mult)

riscv_status riscv_depthwise_conv_wrapper_s8 (const nmsis_nn_context *ctx, const nmsis_nn_dw_conv_params *dw_conv_params, const nmsis_nn_per_channel_quant_params *quant_params, const nmsis_nn_dims *in-put_dims, const q7_t *input_data, const nmsis_nn_dims *filter_dims, const q7_t *filter_data, const nmsis_nn_dims *bias_dims, const int32_t *bias_data, const nmsis_nn_dims *output_dims, q7_t *output_data)

```
int32_t riscv_depthwise_conv_wrapper_s8_get_buffer_size (const
                                                                                         nm-
                                                                   sis_nn_dw_conv_params
                                                                   *dw conv params,
                                                                                      const
                                                                   nmsis_nn_dims *input_dims,
                                                                   const
                                                                                nmsis nn dims
                                                                   *filter dims,
                                                                                const nm-
                                                                   sis nn dims *output dims)
riscv status riscv depthwise separable conv HWC q7 (const q7 t *Im in, const uint16 t
                                                          dim_im_in, const uint16_t ch_im_in,
                                                          const q7_t *wt, const uint16_t
                                                          ch_im_out, const uint16_t dim_kernel,
                                                          const uint16_t padding, const
                                                          uint16_t stride, const q7_t *bias,
                                                          const uint16_t bias_shift, const
                                                          uint16_t out_shift, q7_t *Im_out, const
                                                          uint16_t dim_im_out, q15_t *bufferA,
                                                          q7_t *bufferB)
riscv_status riscv_depthwise_separable_conv_HWC_q7_nonsquare (const
                                                                                q7_t
                                                                                      *Im_in,
                                                                      const
                                                                                      uint16 t
                                                                      dim_im_in_x,
                                                                                      const
                                                                                 dim_im_in_y,
                                                                      uint16_t
                                                                      const uint16 t ch im in,
                                                                      const q7_t *wt, const
                                                                      uint16 t
                                                                                   ch im out,
                                                                      const
                                                                                      uint16 t
                                                                      dim kernel x,
                                                                                       const
                                                                      uint16 t
                                                                                 dim kernel y,
                                                                      const
                                                                                      uint16 t
                                                                      padding_x,
                                                                                       const
                                                                      uint16 t
                                                                                   padding_y,
                                                                      const uint16_t stride_x,
                                                                      const uint16_t stride_y,
                                                                                q7_t
                                                                      const
                                                                                        *bias,
                                                                      const
                                                                                      uint16 t
                                                                      bias_shift,
                                                                                      const
                                                                      uint16_t out_shift, q7_t
                                                                      *Im_out, const uint16_t
                                                                      dim_im_out_x,
                                                                                      const
                                                                      uint16 t
                                                                               dim im out v.
                                                                             *bufferA, q7_t
                                                                      q15_t
                                                                      *bufferB)
```

group NNConv

Collection of convolution, depthwise convolution functions and their variants.

The convolution is implemented in 2 steps: im2col and GEMM

im2col is a process of converting each patch of image data into a column. After im2col, the convolution is computed as matrix-matrix multiplication.

To reduce the memory footprint, the im2col is performed partially. Each iteration, only a few column (i.e., patches) are generated and computed with GEMM kernels similar to NMSIS-DSP riscv_mat_mult functions.

Functions

riscv_status riscv_convolve_1_x_n_s8 (const nmsis_nn_context *ctx, const nmsis_nn_conv_params *conv_params, const nmsis_nn_per_channel_quant_params *quant_params, const nmsis_nn_dims *input_dims, const q7_t *input_data, const nmsis_nn_dims *filter_dims, const q7_t *filter_data, const nmsis_nn_dims *bias_dims, const int32_t *bias_data, const nmsis_nn_dims *output_dims, q7_t *output_data)

1xn convolution

- Supported framework: TensorFlow Lite Micro
- The following constrains on the arguments apply
 - 1. input_dims->n equals 1
 - 2. ouput_dims->w is a multiple of 4
 - 3. Explicit constraints(since it is for 1xN convolution) -## input_dims->h equals 1 -## output_dims->h equals 1 -## filter_dims->h equals 1

Return The function returns either RISCV_MATH_SIZE_MISMATCH if argument constraints fail. or, RISCV_MATH_SUCCESS on successful completion.

Parameters

- [inout] ctx: Function context that contains the additional buffer if required by the function. riscv_convolve_1_x_n_s8_get_buffer_size will return the buffer_size if required
- [in] conv_params: Convolution parameters (e.g. strides, dilations, pads,...). Range of conv_params->input_offset: [-127, 128] Range of conv_params->output_offset: [-128, 127]
- [in] quant_params: Per-channel quantization info. It contains the multiplier and shift values to be applied to each output channel
- [in] input_dims: Input (activation) tensor dimensions. Format: [N, H, W, C_IN]
- [in] input_data: Input (activation) data pointer. Data type: int8
- [in] filter_dims: Filter tensor dimensions. Format: [C_OUT, 1, WK, C_IN] where WK is the horizontal spatial filter dimension
- [in] filter_data: Filter data pointer. Data type: int8
- [in] bias_dims: Bias tensor dimensions. Format: [C_OUT]
- [in] bias_data: Optional bias data pointer. Data type: int32
- [in] output_dims: Output tensor dimensions. Format: [N, H, W, C_OUT]
- [out] output_data: Output data pointer. Data type: int8

int32_t riscv_convolve_1_x_n_s8_get_buffer_size (const nmsis_nn_dims *input_dims, const nmsis_nn_dims *filter_dims)

Get the required additional buffer size for 1xn convolution.

Return The function returns required buffer size(bytes)

Parameters

• [in] input_dims: Input (activation) tensor dimensions. Format: [N, H, W, C_IN]

• [in] filter_dims: Filter tensor dimensions. Format: [C_OUT, 1, WK, C_IN] where WK is the horizontal spatial filter dimension

riscv_status riscv_convolve_1x1_HWC_q7_fast_nonsquare (const q7_t *Im_in, const uint16_t dim_im_in_x, const uint16 t dim im in y, const uint16 t ch im in, const q7 t *wt, const uint16 t ch_im_out, const uint16_t dim_kernel_x, const uint16_t dim_kernel_y, const uint16_t padding_x, const uint16_t padding_y, const uint16_t stride x, const uint16 t stride_y, const q7_t *bias, const uint16_t bias_shift, const uint16_t out_shift, q7 t *Im out, const uint16 t dim_im_out_x, const uint16_t dim_im_out_y, q15_t *bufferA, q7_t *bufferB)

Fast Q7 version of 1x1 convolution (non-squure shape)

This function is optimized for convolution with 1x1 kernel size (i.e., dim_kernel_x=1 and dim_kernel_y=1). It can be used for the second half of MobileNets [1] after depthwise separable convolution.

Return The function returns either RISCV_MATH_SIZE_MISMATCH or RISCV_MATH_SUCCESS based on the outcome of size checking.

Parameters

- [in] Im_in: pointer to input tensor
- [in] $\dim_{im}_{in}x$: input tensor dimention x
- [in] dim_im_in_y: input tensor dimention y
- [in] ch_im_in: number of input tensor channels
- [in] wt: pointer to kernel weights
- [in] ch_im_out: number of filters, i.e., output tensor channels
- [in] dim_kernel_x: filter kernel size x
- [in] dim_kernel_y: filter kernel size y
- [in] padding_x: padding size x
- [in] padding_y: padding size y
- [in] stride_x: convolution stride x
- [in] stride_y: convolution stride y
- [in] bias: pointer to bias
- [in] bias_shift: amount of left-shift for bias
- [in] out_shift: amount of right-shift for output
- [inout] Im_out: pointer to output tensor

- [in] dim_im_out_x: output tensor dimension x
- [in] dim_im_out_y: output tensor dimension y
- [inout] bufferA: pointer to buffer space for input
- [inout] bufferB: pointer to buffer space for output

This function is the version with full list of optimization tricks, but with some constraints: ch_im_in is multiple of 4 ch_im_out is multiple of 2

[1] MobileNets: Efficient Convolutional Neural Networks for Mobile Vision Applications https://arxiv.org/abs/1704.04861

```
riscv_status riscv_convolve_1x1_s8_fast (const nmsis_nn_context *ctx, const nmsis_nn_conv_params *conv_params, const nmsis_nn_per_channel_quant_params *quant_params, const nmsis_nn_dims *input_dims, const q7_t *input_data, const nmsis_nn_dims *filter_dims, const q7_t *filter_data, const nmsis_nn_dims *bias_dims, const int32_t *bias_data, const nmsis_nn_dims *output_dims, q7_t *output_data)
```

Fast s8 version for 1x1 convolution (non-square shape)

- Supported framework: TensorFlow Lite Micro
- The following constrains on the arguments apply
 - 1. input_dims->c is a multiple of 4
 - 2. conv_params->padding.w = conv_params->padding.h = 0
 - 3. conv_params->stride.w = conv_params->stride.h = 1

Return The function returns either RISCV_MATH_SIZE_MISMATCH if argument constraints fail. or, RISCV_MATH_SUCCESS on successful completion.

Parameters

- [inout] ctx: Function context that contains the additional buffer if required by the function. riscv_convolve_1x1_s8_fast_get_buffer_size will return the buffer_size if required
- [in] conv_params: Convolution parameters (e.g. strides, dilations, pads,...). Range of conv_params->input_offset: [-127, 128] Range of conv_params->output_offset: [-128, 127]
- [in] quant_params: Per-channel quantization info. It contains the multiplier and shift values to be applied to each output channel
- [in] input_dims: Input (activation) tensor dimensions. Format: [N, H, W, C_IN]
- [in] input data: Input (activation) data pointer. Data type: int8
- [in] filter_dims: Filter tensor dimensions. Format: [C_OUT, 1, 1, C_IN]
- [in] filter_data: Filter data pointer. Data type: int8
- [in] bias_dims: Bias tensor dimensions. Format: [C_OUT]
- [in] bias_data: Optional bias data pointer. Data type: int32
- [in] output_dims: Output tensor dimensions. Format: [N, H, W, C_OUT]
- [out] output_data: Output data pointer. Data type: int8

int32_t riscv_convolve_1x1_s8_fast_get_buffer_size(const nmsis_nn_dims *in-put_dims)

Get the required buffer size for riscv_convolve_1x1_s8_fast.

Return The function returns the required buffer size in bytes

Parameters

• [in] input_dims: Input (activation) dimensions

riscv_status riscv_convolve_HWC_q15_basic (const q15_t *Im_in, const uint16_t dim_im_in, const uint16_t ch_im_in, const q15_t *wt, const uint16_t ch_im_out, const uint16_t dim_kernel, const uint16_t padding, const uint16_t stride, const q15_t *bias, const uint16_t bias_shift, const uint16_t out_shift, q15_t *Im_out, const uint16_t dim_im_out, q15_t *bufferA, q7_t *bufferB)

Basic Q15 convolution function.

Buffer size:

Return The function returns RISCV_MATH_SUCCESS

Parameters

- [in] Im_in: pointer to input tensor
- [in] dim_im_in: input tensor dimention
- [in] ch_im_in: number of input tensor channels
- [in] wt: pointer to kernel weights
- [in] ch_im_out: number of filters, i.e., output tensor channels
- [in] dim_kernel: filter kernel size
- [in] padding: padding sizes
- [in] stride: convolution stride
- [in] bias: pointer to bias
- [in] bias_shift: amount of left-shift for bias
- [in] out_shift: amount of right-shift for output
- [inout] Im_out: pointer to output tensor
- [in] dim_im_out: output tensor dimension
- [inout] bufferA: pointer to buffer space for input
- [inout] bufferB: pointer to buffer space for output

bufferA size: ch_im_in*dim_kernel*dim_kernel

bufferB size: 0

This basic version is designed to work for any input tensor and weight dimension.

riscv_status riscv_convolve_HWC_q15_fast (const q15_t *Im_in, const uint16_t dim_im_in, const uint16_t ch_im_in, const q15_t *wt, const uint16_t ch_im_out, const uint16_t dim_kernel, const uint16_t padding, const uint16_t stride, const q15_t *bias, const uint16_t bias_shift, const uint16_t out_shift, q15_t *Im_out, const uint16_t dim_im_out, q15_t *bufferA, q7_t *bufferB)

Fast Q15 convolution function.

Buffer size:

Return The function returns either RISCV_MATH_SIZE_MISMATCH or RISCV_MATH_SUCCESS based on the outcome of size checking.

Parameters

- [in] Im_in: pointer to input tensor
- [in] dim_im_in: input tensor dimention
- [in] ch_im_in: number of input tensor channels
- [in] wt: pointer to kernel weights
- [in] ch_im_out: number of filters, i.e., output tensor channels
- [in] dim kernel: filter kernel size
- [in] padding: padding sizes
- [in] stride: convolution stride
- [in] bias: pointer to bias
- [in] bias_shift: amount of left-shift for bias
- [in] out_shift: amount of right-shift for output
- [inout] Im_out: pointer to output tensor
- [in] dim_im_out: output tensor dimension
- [inout] bufferA: pointer to buffer space for input
- [inout] bufferB: pointer to buffer space for output

bufferA size: 2*ch_im_in*dim_kernel*dim_kernel

bufferB size: 0

Input dimension constraints:

ch im in is multiple of 2

ch_im_out is multiple of 2

const uint16_t dim_im_out_y,
q15_t *bufferA, q7_t *bufferB)

riscy status riscy convolve HWC q15 fast nonsquare (const q15 t *Im in. const uint16_t *dim_im_in_x*, const uint16 t dim im in y, uint16_t ch_im_in, const q15_t *wt, const uint16 t ch im out, const uint16 t dim kernel x, const uint16 t dim kernel y, const uint16_t padding_x, const uint16 t padding_y, const uint16_t stride_x, const uint16_t stride_y, const q15_t *bias, const uint16_t bias_shift, const uint16_t out_shift, q15_t *Im_out, const uint16_t dim_im_out_x,

Fast Q15 convolution function (non-square shape)

Buffer size:

Return The function returns either RISCV_MATH_SIZE_MISMATCH or RISCV_MATH_SUCCESS based on the outcome of size checking.

Parameters

- [in] Im_in: pointer to input tensor
- [in] dim_im_in_x: input tensor dimention x
- [in] dim_im_in_y: input tensor dimention y
- [in] ch_im_in: number of input tensor channels
- [in] wt: pointer to kernel weights
- [in] ch_im_out: number of filters, i.e., output tensor channels
- [in] dim_kernel_x: filter kernel size x
- [in] dim_kernel_y: filter kernel size y
- [in] padding_x: padding size x
- [in] padding_y: padding size y
- [in] stride_x: convolution stride x
- [in] stride_y: convolution stride y
- [in] bias: pointer to bias
- [in] bias shift: amount of left-shift for bias
- [in] out_shift: amount of right-shift for output
- [inout] Im_out: pointer to output tensor
- [in] $\dim_{\underline{\text{im}}}$ out_x: output tensor dimension x
- [in] dim_im_out_y: output tensor dimension y
- [inout] bufferA: pointer to buffer space for input
- [inout] bufferB: pointer to buffer space for output

```
bufferA size: 2*ch_im_in*dim_kernel*dim_kernel
```

bufferB size: 0

Input dimension constraints:

```
ch_im_in is multiple of 2
```

ch im out is multiple of 2

```
riscv_status riscv_convolve_HWC_q7_basic (const q7_t *Im_in, const uint16_t dim_im_in, const uint16_t ch_im_in, const q7_t *wt, const uint16_t ch_im_out, const uint16_t dim_kernel, const uint16_t padding, const uint16_t stride, const q7_t *bias, const uint16_t bias_shift, const uint16_t out_shift, q7_t *Im_out, const uint16_t dim_im_out, q15_t *bufferA, q7_t *bufferB)
```

Basic Q7 convolution function.

Buffer size:

Return The function returns RISCV_MATH_SUCCESS

Parameters

- [in] Im_in: pointer to input tensor
- [in] dim_im_in: input tensor dimention
- [in] ch_im_in: number of input tensor channels
- [in] wt: pointer to kernel weights
- [in] ch_im_out: number of filters, i.e., output tensor channels
- [in] dim_kernel: filter kernel size
- [in] padding: padding sizes
- [in] stride: convolution stride
- [in] bias: pointer to bias
- [in] bias_shift: amount of left-shift for bias
- [in] out_shift: amount of right-shift for output
- [inout] Im_out: pointer to output tensor
- [in] dim_im_out: output tensor dimension
- [inout] bufferA: pointer to buffer space for input
- [inout] bufferB: pointer to buffer space for output

bufferA size: 2*ch_im_in*dim_kernel*dim_kernel

bufferB size: 0

This basic version is designed to work for any input tensor and weight dimension.

riscv_status riscv_convolve_HWC_q7_basic_nonsquare(const q7_t *Im_in, const

uint16_t *dim_im_in_x*, const uint16 t dim im in y, uint16_t ch_im_in, const q7_t *wt, const uint16 t ch im out, const uint16 t dim kernel x, const uint16 t dim kernel y, const uint16_t padding_x, const uint16 t padding_y, const uint16_t stride_x, const uint16_t stride_y, const q7_t *bias, const uint16_t bias_shift, const uint16_t out_shift, q7_t *Im_out, const uint16_t dim_im_out_x, const uint16_t dim_im_out_y, q15_t *bufferA, q7_t *bufferB)

Basic Q7 convolution function (non-sqaure shape)

Basic Q7 convolution function (non-square shape)

Return The function returns RISCV_MATH_SUCCESS

Parameters

- [in] Im in: pointer to input tensor
- [in] dim_im_in_x: input tensor dimention x
- [in] dim_im_in_y: input tensor dimention y
- [in] ch_im_in: number of input tensor channels
- [in] wt: pointer to kernel weights
- [in] ch_im_out: number of filters, i.e., output tensor channels
- [in] dim_kernel_x: filter kernel size x
- [in] dim_kernel_y: filter kernel size y
- [in] padding_x: padding size x
- [in] padding_y: padding size y
- [in] stride_x: convolution stride x
- [in] stride_y: convolution stride y
- [in] bias: pointer to bias
- [in] bias shift: amount of left-shift for bias
- [in] out_shift: amount of right-shift for output
- [inout] Im_out: pointer to output tensor
- [in] dim_im_out_x: output tensor dimension x
- [in] dim_im_out_y: output tensor dimension y
- [inout] bufferA: pointer to buffer space for input
- [inout] bufferB: pointer to buffer space for output

riscv_status riscv_convolve_HWC_q7_fast (const q7_t *Im_in, const uint16_t dim_im_in, const uint16_t ch_im_in, const q7_t *wt, const uint16_t ch_im_out, const uint16_t dim_kernel, const uint16_t padding, const uint16_t stride, const q7_t *bias, const uint16_t bias_shift, const uint16_t out_shift, q7_t *Im_out, const uint16_t dim_im_out, q15_t *bufferA, q7_t *bufferB)

Fast Q7 convolution function.

Buffer size:

Return The function returns either RISCV_MATH_SIZE_MISMATCH or RISCV_MATH_SUCCESS based on the outcome of size checking.

Parameters

- [in] Im_in: pointer to input tensor
- [in] dim_im_in: input tensor dimention
- [in] ch_im_in: number of input tensor channels
- [in] wt: pointer to kernel weights
- [in] ch_im_out: number of filters, i.e., output tensor channels
- [in] dim kernel: filter kernel size
- [in] padding: padding sizes
- [in] stride: convolution stride
- [in] bias: pointer to bias
- [in] bias_shift: amount of left-shift for bias
- [in] out_shift: amount of right-shift for output
- [inout] Im_out: pointer to output tensor
- [in] dim_im_out: output tensor dimension
- [inout] bufferA: pointer to buffer space for input
- [inout] bufferB: pointer to buffer space for output

bufferA size: 2*ch_im_in*dim_kernel*dim_kernel

bufferB size: 0

Input dimension constraints:

ch im in is multiple of 4 (because of the SIMD32 read and swap)

ch_im_out is multiple of 2 (bacause 2x2 mat_mult kernel)

The im2col converts the Q7 tensor input into Q15 column, which is stored in bufferA. There is reordering happenning during this im2col process with riscv_q7_to_q15_reordered_no_shift. For every four elements, the second and third elements are swapped.

The computation kernel riscv_nn_mat_mult_kernel_q7_q15_reordered does the GEMM computation with the reordered columns.

To speed-up the determination of the padding condition, we split the computation into 3x3 parts, i.e., {top, mid, bottom} X {left, mid, right}. This reduces the total number of boundary condition checks and improves the data copying performance.

dim_im_out_y, q15_t *bufferA, q7_t

*bufferB)

riscv status riscv convolve HWC q7 fast nonsquare (const $q7_t *Im_in$ const uint16 t $dim_im_in_x$, const dim im in y, uint16 t uint16_t ch_im_in, const q7_t *wt, const uint16 t ch im out, uint 16 t dim kernel x, const uint16 t dim kernel y, const const uint16_t padding_x, const uint16_t padding_y, const uint16_t stride_x, const uint16_t stride_y, const q7_t *bias, const uint16_t bias_shift, const uint16_t out_shift, q7_t *Im_out, const uint16_t dim_im_out_x, const uint16 t

Fast Q7 convolution function (non-squure shape)

This function is the version with full list of optimization tricks, but with some constraints: ch_im_in is multiple of 4 ch_im_out is multiple of 2

Return The function returns either RISCV_MATH_SIZE_MISMATCH or RISCV_MATH_SUCCESS based on the outcome of size checking.

Parameters

- [in] Im_in: pointer to input tensor
- [in] dim_im_in_x: input tensor dimention x
- [in] dim_im_in_y: input tensor dimention y
- [in] ch_im_in: number of input tensor channels
- [in] wt: pointer to kernel weights
- [in] ch_im_out: number of filters, i.e., output tensor channels
- [in] dim_kernel_x: filter kernel size x
- [in] dim_kernel_y: filter kernel size y
- [in] padding_x: padding size x
- [in] padding_y: padding size y
- [in] stride_x: convolution stride x
- [in] stride_y: convolution stride y
- [in] bias: pointer to bias
- [in] bias_shift: amount of left-shift for bias
- [in] out_shift: amount of right-shift for output
- [inout] Im_out: pointer to output tensor
- [in] dim_im_out_x: output tensor dimension x
- [in] dim_im_out_y: output tensor dimension y
- [inout] bufferA: pointer to buffer space for input
- [inout] bufferB: pointer to buffer space for output

riscv_status riscv_convolve_HWC_q7_RGB (const q7_t *Im_in, const uint16_t dim_im_in, const uint16_t ch_im_in, const q7_t *wt, const uint16_t ch_im_out, const uint16_t dim_kernel, const uint16_t padding, const uint16_t stride, const q7_t *bias, const uint16_t bias_shift, const uint16_t out_shift, q7_t *Im_out, const uint16_t dim im out, q15_t *bufferA, q7_t *bufferB)

Q7 convolution function for RGB image.

Q7 version of convolution for RGB image.

Buffer size:

Return The function returns either RISCV_MATH_SIZE_MISMATCH or RISCV_MATH_SUCCESS based on the outcome of size checking.

Parameters

- [in] Im_in: pointer to input tensor
- [in] dim_im_in: input tensor dimention
- [in] ch_im_in: number of input tensor channels
- [in] wt: pointer to kernel weights
- [in] ch_im_out: number of filters, i.e., output tensor channels
- [in] dim_kernel: filter kernel size
- [in] padding: padding sizes
- [in] stride: convolution stride
- [in] bias: pointer to bias
- [in] bias_shift: amount of left-shift for bias
- [in] out_shift: amount of right-shift for output
- [inout] Im_out: pointer to output tensor
- [in] dim_im_out: output tensor dimension
- [inout] bufferA: pointer to buffer space for input
- [inout] bufferB: pointer to buffer space for output

bufferA size: 2*ch_im_in*dim_kernel*dim_kernel

bufferB size: 0

Input dimension constraints:

ch im in equals 3

This kernel is written exclusively for convolution with ch_im_in equals 3. This applies on the first layer of CNNs which has input image with RGB format.

```
riscv_status riscv_convolve_s8 (const nmsis_nn_context *ctx, const nmsis_nn_conv_params *conv_params, const nmsis_nn_per_channel_quant_params *quant_params, const nmsis_nn_dims *input_dims, const q7_t *input_data, const nmsis_nn_dims *filter_dims, const q7_t *filter_data, const nmsis_nn_dims *bias_dims, const int32_t *bias_data, const nmsis_nn_dims *output_dims, q7_t *output_data)
```

Basic s8 convolution function.

- 1. Supported framework: TensorFlow Lite micro
- 2. q7 is used as data type eventhough it is s8 data. It is done so to be consistent with existing APIs.
- 3. Additional memory is required for optimization. Refer to argument 'ctx' for details.

Return The function returns RISCV_MATH_SUCCESS

Parameters

- [inout] ctx: Function context that contains the additional buffer if required by the function. riscv_convolve_s8_get_buffer_size will return the buffer_size if required
- [in] conv_params: Convolution parameters (e.g. strides, dilations, pads,...). Range of conv_params->input_offset: [-127, 128] Range of conv_params->output_offset: [-128, 127]
- [in] quant_params: Per-channel quantization info. It contains the multiplier and shift values to be applied to each output channel
- [in] input_dims: Input (activation) tensor dimensions. Format: [N, H, W, C_IN]
- [in] input_data: Input (activation) data pointer. Data type: int8
- [in] filter_dims: Filter tensor dimensions. Format: [C_OUT, HK, WK, C_IN] where HK and WK are the spatial filter dimensions
- [in] filter_data: Filter data pointer. Data type: int8
- [in] bias_dims: Bias tensor dimensions. Format: [C_OUT]
- [in] bias_data: Optional bias data pointer. Data type: int32
- [in] output_dims: Output tensor dimensions. Format: [N, H, W, C_OUT]
- [out] output_data: Output data pointer. Data type: int8

int32_t riscv_convolve_s8_get_buffer_size(const nmsis_nn_dims *input_dims, const nmsis_nn_dims *filter_dims)

Get the required buffer size for s8 convolution function.

Return The function returns required buffer size(bytes)

Parameters

- [in] input_dims: Input (activation) tensor dimensions. Format: [N, H, W, C_IN]
- [in] filter_dims: Filter tensor dimensions. Format: [C_OUT, HK, WK, C_IN] where HK and WK are the spatial filter dimensions

```
riscv_status riscv_convolve_wrapper_s8 (const nmsis_nn_context *ctx, const nmsis_nn_conv_params *conv_params, const nmsis_nn_per_channel_quant_params *quant_params, const nmsis_nn_dims *input_dims, const q7_t *input_data, const nmsis_nn_dims *filter_dims, const q7_t *filter_data, const nmsis_nn_dims *bias_dims, const int32_t *bias_data, const nmsis_nn_dims *putput_dims, q7_t *output_data)
```

s8 convolution layer wrapper function with the main purpose to call the optimal kernel available in nmsisnn to perform the convolution.

Return The function returns either RISCV_MATH_SIZE_MISMATCH if argument constraints fail. or, RISCV_MATH_SUCCESS on successful completion.

Parameters

- [inout] ctx: Function context that contains the additional buffer if required by the function. riscv_convolve_wrapper_s8_get_buffer_size will return the buffer_size if required
- [in] conv_params: Convolution parameters (e.g. strides, dilations, pads,...). Range of conv_params->input_offset: [-127, 128] Range of conv_params->output_offset: [-128, 127]
- [in] quant_params: Per-channel quantization info. It contains the multiplier and shift values to be applied to each output channel
- [in] input_dims: Input (activation) tensor dimensions. Format: [N, H, W, C_IN]
- [in] input_data: Input (activation) data pointer. Data type: int8
- [in] filter_dims: Filter tensor dimensions. Format: [C_OUT, HK, WK, C_IN] where HK and WK are the spatial filter dimensions
- [in] filter_data: Filter data pointer. Data type: int8
- [in] bias_dims: Bias tensor dimensions. Format: [C_OUT]
- [in] bias_data: Bias data pointer. Data type: int32
- [in] output_dims: Output tensor dimensions. Format: [N, H, W, C_OUT]
- [out] output_data: Output data pointer. Data type: int8

Get the required buffer size for riscv_convolve_wrapper_s8.

Return The function returns required buffer size(bytes)

Parameters

- [in] conv_params: Convolution parameters (e.g. strides, dilations, pads,...). Range of conv_params->input_offset: [-127, 128] Range of conv_params->output_offset: [-128, 127]
- [in] input_dims: Input (activation) dimensions. Format: [N, H, W, C_IN]
- [in] filter_dims: Filter dimensions. Format: [C_OUT, HK, WK, C_IN] where HK and WK are the spatial filter dimensions
- [in] output dims: Output tensor dimensions. Format: [N, H, W, C OUT]

```
riscv_status riscv_depthwise_conv_3x3_s8 (const nmsis_nn_context *ctx, const nmsis_nn_dw_conv_params *dw_conv_params, const nmsis_nn_per_channel_quant_params *quant_params, const nmsis_nn_dims *in-put_dims, const q7_t *input_data, const nmsis_nn_dims *filter_dims, const q7_t *filter_data, const nmsis_nn_dims *bias_dims, const int32_t *bias_data, const nmsis_nn_dims *output_dims, q7_t *output_data)
```

Optimized s8 depthwise convolution function for 3x3 kernel size with some constraints on the input arguments (documented below). Refer riscv_depthwise_conv_s8() for function argument details.

- Supported framework: TensorFlow Lite Micro
- The following constrains on the arguments apply
 - 1. Number of input channel equals number of output channels
 - 2. Filter height and width equals 3
 - 3. Padding along x is either 0 or 1.

Return The function returns one of the following RISCV_MATH_SIZE_MISMATCH - Unsupported dimension of tensors RISCV_MATH_ARGUMENT_ERROR - Unsupported pad size along the x axis RISCV_MATH_SUCCESS - Successful operation

```
static void depthwise_conv_s8_mult_4 (const int8_t *input, const int32_t input_x, const int32_t input_y, const int32_t input_ch, const int32_t const int32_t output_ch, const int32_t ch_mult, const int32_t kernel_x, const int32_t kernel_y, const int32_t pad_x, const int32_t pad_y, const int32_t stride_x, const int32_t stride_y, const int32_t *bias, int8_t *output, const int32_t *output_shift, const int32_t *output_mult, const int32_t output_y, const int32_t output_put_offset, const int32_t output_activation_min, const int32_t output_activation_min, const int32_t output_activation_max)
```

static void depthwise_conv_s8_generic (const q7_t *input, const uint16_t input_batches, const uint16_t input_x, const uint16_t input_y, const uint16_t input_ch, const q7_t *kernel, const uint16_t output_ch, const uint16_t ch_mult, const uint16_t kernel_x, const uint16_t kernel_y, const uint16_t pad_x, const uint16_t pad_y, const uint16_t stride_x, const uint16_t stride_y, const int32_t *bias, q7_t *output, const int32_t *output_shift, const int32_t *output_mult, const uint16_t output_x, const uint16_t output_y, const int32_t output_offset, const int32_t input_offset, const int32_t output_activation_min, const int32_t output activation_min, const int32_t output activation_min, const int32_t output activation_max)

riscv_status riscv_depthwise_conv_s8 (const nmsis_nn_context *ctx, const nmsis_nn_dw_conv_params *dw_conv_params, const nmsis_nn_per_channel_quant_params *quant_params, const nmsis_nn_dims *input_dims, const q7_t *input_data, const nmsis_nn_dims *filter_dims, const q7_t *filter_data, const nmsis_nn_dims *bias_dims, const int32_t *bias_data, const nmsis_nn_dims *output dims, q7 t *output data)

Basic s8 depthwise convolution function that doesn't have any constraints on the input dimensions.

- Supported framework: TensorFlow Lite
- q7 is used as data type eventhough it is s8 data. It is done so to be consistent with existing APIs.

Return The function returns RISCV_MATH_SUCCESS

Parameters

- [inout] ctx: Function context (e.g. temporary buffer). Check the function definition file to see if an additional buffer is required. Optional function {API}_get_buffer_size() provides the buffer size if an additional buffer is required. exists if additional memory is.
- [in] dw_conv_params: Depthwise convolution parameters (e.g. strides, dilations, pads,...) dw_conv_params->dilation is not used. Range of dw_conv_params->input_offset: [-127, 128] Range of dw_conv_params->input_offset: [-128, 127]
- [in] quant_params: Per-channel quantization info. It contains the multiplier and shift values to be applied to each output channel
- [in] input_dims: Input (activation) tensor dimensions. Format: [1, H, W, C_IN] Batch argument N is not used.
- [in] input_data: Input (activation) data pointer. Data type: int8
- [in] filter_dims: Filter tensor dimensions. Format: [1, H, W, C_OUT]
- [in] filter_data: Filter data pointer. Data type: int8
- [in] bias_dims: Bias tensor dimensions. Format: [C_OUT]
- [in] bias_data: Bias data pointer. Data type: int32
- [in] output_dims: Output tensor dimensions. Format: [1, H, W, C_OUT]
- [inout] output_data: Output data pointer. Data type: int8

```
riscv_status riscv_depthwise_conv_s8_opt (const nmsis_nn_context *ctx, const nmsis_nn_dw_conv_params *dw_conv_params, const nmsis_nn_per_channel_quant_params *quant_params, const nmsis_nn_dims *in-put_dims, const q7_t *input_data, const nmsis_nn_dims *filter_dims, const q7_t *filter_data, const nmsis_nn_dims *bias_dims, const int32_t *bias_data, const nmsis_nn_dims *output dims, q7 t *output data)
```

Optimized s8 depthwise convolution function with constraint that in_channel equals out_channel. Refer riscv_depthwise_conv_s8() for function argument details.

- Supported framework: TensorFlow Lite
- The following constrains on the arguments apply
 - 1. Number of input channel equals number of output channels or ch mult equals 1
- q7 is used as data type eventhough it is s8 data. It is done so to be consistent with existing APIs.
- Reccomended when number of channels is 4 or greater.

Return The function returns one of the following RISCV_MATH_SIZE_MISMATCH - input channel != output channel or ch_mult != 1 RISCV_MATH_SUCCESS - Successful operation

Note If number of channels is not a multiple of 4, upto 3 elements outside the boundary will be read out for the following if MVE optimizations(Arm Helium Technology) are used.

- Output shift
- · Output multiplier
- · Output bias

• kernel

int32_t riscv_depthwise_conv_s8_opt_get_buffer_size(const nmsis_nn_dims *input_dims, const nmsis_nn_dims sis_nn_dims *filter_dims)

Get the required buffer size for optimized s8 depthwise convolution function with constraint that in_channel equals out_channel.

Return The function returns required buffer size in bytes

Parameters

- [in] input_dims: Input (activation) tensor dimensions. Format: [1, H, W, C_IN] Batch argument N is not used.
- [in] filter_dims: Filter tensor dimensions. Format: [1, H, W, C_OUT]

static void depthwise_conv_u8_mult_4 (const uint8_t *input, const int32_t input_x, const int32_t input_y, const int32_t input_ch, const uint8_t *kernel, const int32_t out_put_ch, const int32_t ch_mult, const int32_t kernel_x, const int32_t kernel_y, const int32_t pad_x, const int32_t pad_y, const int32_t stride_x, const int32_t stride_y, const int32_t *bias, uint8_t *output, const int32_t out_put_shift, const int32_t output_mult, const int32_t output_x, const int32_t output_y, const int32_t output_offset, const int32_t input_offset, const int32_t filter_offset, const int32_t output_activation_min, const int32_t output_activation_min, const int32_t output_activation_max)

static void depthwise_conv_u8_generic (const uint8_t *input, const int32_t input_x, const int32_t input_y, const int32_t input_ch, const uint8_t *kernel, const int32_t output_ch, const int32_t ch_mult, const int32_t kernel_x, const int32_t kernel_y, const int32_t pad_x, const int32_t pad_y, const int32_t stride_x, const int32_t stride_y, const int32_t stride_x, const int32_t stride_y, const int32_t output_shift, const int32_t output_mult, const int32_t output_x, const int32_t output_y, const int32_t output_offset, const int32_t input_offset, const int32_t input_offset, const int32_t output_activation_min, const int32_t output activation_min, const int32_t output activation max)

 $riscv_status \ \textbf{riscv_depthwise_conv_u8_basic_ver1} \ (\textbf{const} \ uint8_t \ *input, \ \textbf{const} \ uint16_t \ *input, \ \textbf{const} \ uint16_t \ *input, \ \textbf{const} \ uint18_t \ *input, \ \textbf{con$

input x, const uint16 t input y, const uint16 t input ch, const uint8 t *kernel, const uint16 t kernel x, const uint16 t kernel y, const int16 t ch mult, const int16 t pad x, const int16 t pad y, const int16 t stride x, const int16 t *stride_y*, **const** int16_t *dilation_x*, const int16_t dilation_y, const int32_t *bias, const int32_t input_offset, const int32_t filter_offset, const int32_t output_offset, uint8_t *output, const uint16_t output_x, const uint16_t output_y, const int32_t output_activation_min, const int32_t output_activation_max, const int32_t output_shift, const int32_t output mult)

uint8 depthwise convolution function with asymmetric quantization

uint8 depthwise convolution function with asymmetric quantization Unless specified otherwise, arguments are mandatory.

Return The function returns one of the following RISCV_MATH_SIZE_MISMATCH - Not supported dimension of tensors RISCV_MATH_SUCCESS - Successful operation RISCV_MATH_ARGUMENT_ERROR - Implementation not available

Parameters

- [in] input: Pointer to input tensor
- [in] input_x: Width of input tensor
- [in] input_y: Height of input tensor
- [in] input_ch: Channels in input tensor
- [in] kernel: Pointer to kernel weights
- [in] kernel_x: Width of kernel
- [in] kernel_y: Height of kernel
- [in] ch_mult: Number of channel multiplier
- [in] pad_x: Padding sizes x
- [in] pad_y: Padding sizes y
- [in] stride_x: Convolution stride along the width
- [in] stride_y: Convolution stride along the height
- [in] dilation_x: Dilation along width. Not used and intended for future enhancement.
- [in] dilation_y: Dilation along height. Not used and intended for future enhancement.
- [in] bias: Pointer to optional bias values. If no bias is available, NULL is expected
- [in] input_offset: Input tensor zero offset
- [in] filter_offset: Kernel tensor zero offset

- [in] output_offset: Output tensor zero offset
- [inout] output: Pointer to output tensor
- [in] output_x: Width of output tensor
- [in] output_y: Height of output tensor
- [in] output_activation_min: Minimum value to clamp the output to. Range: {0, 255}
- [in] output activation max: Minimum value to clamp the output to. Range: {0, 255}
- [in] output_shift: Amount of right-shift for output
- [in] output_mult: Output multiplier for requantization

```
*ctx,
riscv_status riscv_depthwise_conv_wrapper_s8 (const
                                                              nmsis_nn_context
                                                                nmsis_nn_dw_conv_params
                                                  const
                                                  *dw_conv_params,
                                                                         const
                                                                                     nm-
                                                  sis_nn_per_channel_quant_params
                                                  *quant_params, const nmsis_nn_dims
                                                  *input dims, const q7 t *input data,
                                                  const nmsis nn dims *filter dims, const
                                                  q7_t *filter_data, const nmsis_nn_dims
                                                  *bias_dims, const int32_t *bias_data,
                                                  const nmsis nn dims *output dims, q7 t
                                                  *output data)
```

Wrapper function to pick the right optimized s8 depthwise convolution function.

- Supported framework: TensorFlow Lite
- Picks one of the the following functions
 - 1. riscv_depthwise_conv_s8()
 - 2. riscv_depthwise_conv_3x3_s8() RISC-V CPUs with DSP extension only
 - 3. riscv_depthwise_conv_s8_opt()
- q7 is used as data type eventhough it is s8 data. It is done so to be consistent with existing APIs.
- Check details of riscv_depthwise_conv_s8_opt() for potential data that can be accessed outside of the boundary.

Return The function returns RISCV_MATH_SUCCESS - Successful completion.

Parameters

- [inout] ctx: Function context (e.g. temporary buffer). Check the function definition file to see if an additional buffer is required. Optional function {API}_get_buffer_size() provides the buffer size if required.
- [in] dw_conv_params: Depthwise convolution parameters (e.g. strides, dilations, pads,...) dw_conv_params->dilation is not used. Range of dw_conv_params->input_offset: [-127, 128] Range of dw_conv_params->output_offset: [-128, 127]
- [in] quant_params: Per-channel quantization info. It contains the multiplier and shift values to be applied to each output channel
- [in] input_dims: Input (activation) tensor dimensions. Format: [H, W, C_IN] Batch argument N is not used and assumed to be 1.
- [in] input_data: Input (activation) data pointer. Data type: int8

- [in] filter_dims: Filter tensor dimensions. Format: [1, H, W, C_OUT]
- [in] filter_data: Filter data pointer. Data type: int8
- [in] bias_dims: Bias tensor dimensions. Format: [C_OUT]
- [in] bias_data: Bias data pointer. Data type: int32
- [in] output_dims: Output tensor dimensions. Format: [1, H, W, C_OUT]
- [inout] output data: Output data pointer. Data type: int8

```
int32_t riscv_depthwise_conv_wrapper_s8_get_buffer_size(const nm-sis_nn_dw_conv_params *dw_conv_params, const nmsis_nn_dims *input_dims, const nm-sis_nn_dims *filter_dims, const nmsis_nn_dims const nmsis_nn_dims
```

Get size of additional buffer required by riscv_depthwise_conv_wrapper_s8()

Return Size of additional memory required for optimizations in bytes.

Parameters

• [in] dw_conv_params: Depthwise convolution parameters (e.g. strides, dilations, pads,...) dw_conv_params->dilation is not used. Range of dw_conv_params->input_offset: [-127, 128] Range of dw_conv_params->input_offset: [-128, 127]

*output_dims)

- [in] input_dims: Input (activation) tensor dimensions. Format: [H, W, C_IN] Batch argument N is not used and assumed to be 1.
- [in] filter_dims: Filter tensor dimensions. Format: [1, H, W, C_OUT]
- [in] output_dims: Output tensor dimensions. Format: [1, H, W, C_OUT]

```
riscv_status riscv_depthwise_separable_conv_HWC_q7 (const q7_t *Im_in,
                                                                                    const
                                                           uint16_t
                                                                     dim_im_in,
                                                                                    const
                                                           uint16_t ch_im_in, const q7_t
                                                           *wt, const uint16_t ch_im_out,
                                                                     uint16 t
                                                           const
                                                                               dim kernel,
                                                           const uint16 t padding, const
                                                           uint16 t stride, const q7 t *bias,
                                                           const uint16 t bias shift, const
                                                           uint16_t out_shift, q7_t *Im_out,
                                                           const uint16_t dim_im_out, q15_t
                                                           *bufferA, q7_t *bufferB)
```

Q7 depthwise separable convolution function.

Buffer size:

Return The function returns either RISCV_MATH_SIZE_MISMATCH or RISCV_MATH_SUCCESS based on the outcome of size checking.

Parameters

- [in] Im_in: pointer to input tensor
- [in] dim_im_in: input tensor dimension
- [in] ch_im_in: number of input tensor channels

- [in] wt: pointer to kernel weights
- [in] ch_im_out: number of filters, i.e., output tensor channels
- [in] dim_kernel: filter kernel size
- [in] padding: padding sizes
- [in] stride: convolution stride
- [in] bias: pointer to bias
- [in] bias_shift: amount of left-shift for bias
- [in] out_shift: amount of right-shift for output
- [inout] Im_out: pointer to output tensor
- [in] dim_im_out: output tensor dimension
- [inout] bufferA: pointer to buffer space for input
- [inout] bufferB: pointer to buffer space for output

bufferA size: 2*ch_im_in*dim_kernel*dim_kernel

bufferB size: 0

Input dimension constraints:

ch_im_in equals ch_im_out

Implementation: There are 3 nested loop here: Inner loop: calculate each output value with MAC instruction over an accumulator Mid loop: loop over different output channel Outer loop: loop over different output (x, y)

riscv_status riscv_depthwise_separable_conv_HWC_q7_nonsquare (const q7_t *Im_in, const uint16_t

 $dim_im_in_x$, const uint16_t $dim_im_in_y$, const uint16 t ch im in, const q7_t *wt, const uint16_t ch_im_out, const uint16_t dim_kernel_x , const uint16_t dim_kernel_y, const uint16 t padding_x, const uint16_t padding_y, const uint16_t stride x, const uint16_t stride_y, const q7_t *bias, const uint16 t bias_shift, const uint16_t out_shift, q7_t *Im out, const uint16 t $dim_im_out_x$, uint16_t const dim_im_out_y, q15_t *bufferA, q7_t *bufferB)

Q7 depthwise separable convolution function (non-square shape)

This function is the version with full list of optimization tricks, but with some constraints: ch_im_in is equal to ch_im_out

Return The function returns either RISCV_MATH_SIZE_MISMATCH or RISCV_MATH_SUCCESS based on the outcome of size checking.

Parameters

- [in] Im_in: pointer to input tensor
- [in] dim_im_in_x: input tensor dimension x
- [in] dim_im_in_y: input tensor dimension y
- [in] ch_im_in: number of input tensor channels
- [in] wt: pointer to kernel weights
- [in] ch_im_out: number of filters, i.e., output tensor channels
- [in] dim_kernel_x: filter kernel size x
- [in] dim_kernel_y: filter kernel size y
- [in] padding_x: padding sizes x
- [in] padding_y: padding sizes y
- [in] stride_x: convolution stride x

- [in] stride_y: convolution stride y
- [in] bias: pointer to bias
- [in] bias_shift: amount of left-shift for bias
- [in] out_shift: amount of right-shift for output
- [inout] Im out: pointer to output tensor
- [in] dim im out x: output tensor dimension x
- [in] dim_im_out_y: output tensor dimension y
- [inout] bufferA: pointer to buffer space for input
- [inout] bufferB: pointer to buffer space for output

Fully-connected Layer Functions

```
riscv_status riscv_fully_connected_mat_q7_vec_q15 (const q15_t *pV, const q7_t *pM, const uint16_t dim_vec, const uint16_t num_of_rows, const uint16_t bias_shift, const uint16_t out_shift, const q7_t *bias, q15_t *pOut, q15_t *vec_buffer)
```

riscv_status riscv_fully_connected_mat_q7_vec_q15_opt (const q15_t *pV, const q7_t *pM, const uint16_t dim_vec , const uint16_t num_of_rows , const uint16_t num_of_rows , const uint16_t $bias_shift$, const uint16_t out_shift , const q7_t * $bias_s$, q15_t * $pOut_s$, q15_t * vec_buffer_s)

riscv_status riscv_fully_connected_q15 (const q15_t *pV, const q15_t *pM, const uint16_t dim_vec, const uint16_t num_of_rows, const uint16_t bias_shift, const uint16_t out_shift, const q15_t *bias, q15_t *pOut, q15_t *vec_buffer)

riscv_status riscv_fully_connected_q15_opt (const q15_t *pV, const q15_t *pM, const uint16_t dim_vec, const uint16_t num_of_rows, const uint16_t bias_shift, const uint16_t out_shift, const q15_t *bias, q15_t *pOut, q15_t *vec_buffer)

riscv_status riscv_fully_connected_q7 (const q7_t *pV, const q7_t *pM, const uint16_t dim_vec, const uint16_t num_of_rows, const uint16_t bias_shift, const uint16_t out_shift, const q7_t *bias, q7_t *pOut, q15_t *vec_buffer)

riscv_status riscv_fully_connected_q7_opt (const q7_t *pV, const q7_t *pM, const uint16_t dim_vec, const uint16_t num_of_rows, const uint16_t bias_shift, const uint16_t out_shift, const q7_t *bias, q7_t *pOut, q15_t *vec_buffer)

riscv_status riscv_fully_connected_s8 (const nmsis_nn_context *ctx, const nmsis_nn_fc_params *fc_params, const nmsis_nn_per_tensor_quant_params *quant_params, const nmsis_nn_dims *input_dims, const q7_t *input_data, const nmsis_nn_dims *filter_dims, const q7_t *filter_data, const nmsis_nn_dims *bias_dims, const int32_t *bias_data, const nmsis_nn_dims *sis_nn_dims *output_dims, q7_t *output_data)

int32_t riscv_fully_connected_s8_get_buffer_size (const nmsis_nn_dims *filter_dims)

USE INTRINSIC

group FC

Collection of fully-connected and matrix multiplication functions.

Fully-connected layer is basically a matrix-vector multiplication with bias. The matrix is the weights and the input/output vectors are the activation values. Supported {weight, activation} precisions include {8-bit, 8-bit}, {16-bit}, and {8-bit, 16-bit}.

Here we have two types of kernel functions. The basic function implements the function using regular GEMV approach. The opt functions operates with weights in interleaved formats.

Defines

USE INTRINSIC

Mixed Q15-Q7 opt fully-connected layer function.

Buffer size:

Return The function returns RISCV_MATH_SUCCESS

Parameters

- [in] pV: pointer to input vector
- [in] pM: pointer to matrix weights
- [in] dim_vec: length of the vector
- [in] num of rows: number of rows in weight matrix
- [in] bias_shift: amount of left-shift for bias
- [in] out_shift: amount of right-shift for output
- [in] bias: pointer to bias
- [inout] pOut: pointer to output vector
- [inout] vec_buffer: pointer to buffer space for input

vec_buffer size: 0

Q7_Q15 version of the fully connected layer

Weights are in q7_t and Activations are in q15_t

Limitation: x4 version requires weight reordering to work

Here we use only one pointer to read 4 rows in the weight matrix. So if the original q7_t matrix looks like this:

```
| a11 | a12 | a13 | a14 | a15 | a16 | a17 |
```

| a21 | a22 | a23 | a24 | a25 | a26 | a27 |

| a31 | a32 | a33 | a34 | a35 | a36 | a37 |

| a41 | a42 | a43 | a44 | a45 | a46 | a47 |

| a51 | a52 | a53 | a54 | a55 | a56 | a57 |

| a61 | a62 | a63 | a64 | a65 | a66 | a67 |

We operates on multiple-of-4 rows, so the first four rows becomes

```
| a11 | a21 | a12 | a22 | a31 | a41 | a32 | a42 |
| a13 | a23 | a14 | a24 | a33 | a43 | a34 | a44 |
| a15 | a25 | a16 | a26 | a35 | a45 | a36 | a46 |
```

The column left over will be in-order. which is: | a17 | a27 | a37 | a47 |

For the left-over rows, we do 1x1 computation, so the data remains as its original order.

So the stored weight matrix looks like this:

```
| a11 | a21 | a12 | a22 | a31 | a41 |
| a32 | a42 | a13 | a23 | a14 | a24 |
| a33 | a43 | a34 | a44 | a15 | a25 |
| a16 | a26 | a35 | a45 | a36 | a46 |
| a17 | a27 | a37 | a47 | a51 | a52 |
| a53 | a54 | a55 | a56 | a57 | a61 |
| a62 | a63 | a64 | a65 | a66 | a67 |
```

Functions

```
riscv_status riscv_fully_connected_mat_q7_vec_q15 (const q15_t*pV, const q7_t*pM, const uint16_t dim_vec, const uint16_t num_of_rows, const uint16_t bias_shift, const uint16_t out_shift, const q7_t *bias, q15_t *pOut, q15_t *vec_buffer)
```

Mixed Q15-Q7 fully-connected layer function.

Buffer size:

Return The function returns RISCV_MATH_SUCCESS

Parameters

- [in] pV: pointer to input vector
- [in] pM: pointer to matrix weights
- [in] dim_vec: length of the vector
- [in] num_of_rows: number of rows in weight matrix
- [in] bias_shift: amount of left-shift for bias
- [in] out_shift: amount of right-shift for output
- [in] bias: pointer to bias
- [inout] pOut: pointer to output vector
- [inout] vec_buffer: pointer to buffer space for input

vec_buffer size: 0

Q7_Q15 version of the fully connected layer

Weights are in q7_t and Activations are in q15_t

```
riscv_status riscv_fully_connected_mat_q7_vec_q15_opt (const q15_t *pV, const q7_t *pM, const uint16_t dim_vec, const uint16_t num_of_rows, const uint16_t bias_shift, const uint16_t out_shift, const q7_t *bias, q15_t *pOut, q15_t *vec_buffer)
```

Mixed Q15-Q7 opt fully-connected layer function.

Return The function returns RISCV_MATH_SUCCESS

Parameters

- [in] pV: pointer to input vector
- [in] pM: pointer to matrix weights
- [in] dim_vec: length of the vector
- [in] num_of_rows: number of rows in weight matrix
- [in] bias_shift: amount of left-shift for bias
- [in] out_shift: amount of right-shift for output
- [in] bias: pointer to bias
- [inout] pOut: pointer to output vector
- [inout] vec_buffer: pointer to buffer space for input

```
riscv_status riscv_fully_connected_q15 (const q15_t *pV, const q15_t *pM, const uint16_t dim_vec, const uint16_t num_of_rows, const uint16_t bias_shift, const uint16_t out_shift, const q15_t *bias, q15_t *pOut, q15_t *vec_buffer)
```

- Q15 opt fully-connected layer function.
- Q15 basic fully-connected layer function.

Buffer size:

Return The function returns RISCV_MATH_SUCCESS

Parameters

- [in] pV: pointer to input vector
- [in] pM: pointer to matrix weights
- [in] dim_vec: length of the vector
- [in] num_of_rows: number of rows in weight matrix
- [in] bias_shift: amount of left-shift for bias
- [in] out shift: amount of right-shift for output
- [in] bias: pointer to bias
- [inout] pOut: pointer to output vector
- [inout] vec_buffer: pointer to buffer space for input

vec buffer size: 0

```
riscv_status riscv_fully_connected_q15_opt (const q15_t *pV, const q15_t *pM,
                                                     const uint16_t dim_vec, const uint16_t
                                                     num of rows, const uint16 t bias shift,
                                                     const uint16_t out_shift, const q15_t *bias,
                                                     q15_t *pOut, q15_t *vec_buffer)
     Q15 opt fully-connected layer function.
     Buffer size:
     Return The function returns RISCV MATH SUCCESS
     Parameters
           • [in] pV: pointer to input vector
           • [in] pM: pointer to matrix weights
           • [in] dim_vec: length of the vector
           • [in] num_of_rows: number of rows in weight matrix
           • [in] bias_shift: amount of left-shift for bias
           • [in] out_shift: amount of right-shift for output
           • [in] bias: pointer to bias
           • [inout] pOut: pointer to output vector
           • [inout] vec_buffer: pointer to buffer space for input
     vec buffer size: 0
     Here we use only one pointer to read 4 rows in the weight matrix. So if the original matrix looks like this:
    | a11 | a12 | a13 |
    | a21 | a22 | a23 |
    | a31 | a32 | a33 |
    | a41 | a42 | a43 |
    | a51 | a52 | a53 |
    | a61 | a62 | a63 |
     We operates on multiple-of-4 rows, so the first four rows becomes
     | a11 | a12 | a21 | a22 | a31 | a32 | a41 | a42 |
     | a13 | a23 | a33 | a43 |
     Remaining rows are kept the same original order.
     So the stored weight matrix looks like this:
    | a11 | a12 | a21 | a22 | a31 | a32 | a41 | a42 |
    | a13 | a23 | a33 | a43 | a51 | a52 | a53 | a61 |
    | a62 | a63 |
riscv_status riscv_fully_connected_q7 (const q7_t *pV, const q7_t *pM, const uint16_t
                                              dim_vec, const uint16_t num_of_rows, const
                                              uint16_t bias_shift, const uint16_t out_shift, const
                                              q7_t *bias, q7_t *pOut, q15_t *vec_buffer)
```

4.3. NMSIS NN API 707

Q7 basic fully-connected layer function.

Buffer size:

Return The function returns RISCV MATH SUCCESS

Parameters

- [in] pV: pointer to input vector
- [in] pM: pointer to matrix weights
- [in] dim vec: length of the vector
- [in] num_of_rows: number of rows in weight matrix
- [in] bias_shift: amount of left-shift for bias
- [in] out_shift: amount of right-shift for output
- [in] bias: pointer to bias
- [inout] pOut: pointer to output vector
- [inout] vec_buffer: pointer to buffer space for input

vec_buffer size: dim_vec

This basic function is designed to work with regular weight matrix without interleaving.

```
riscv_status riscv_fully_connected_q7_opt (const q7_t *pV, const q7_t *pM, const uint16_t dim_vec, const uint16_t num_of_rows, const uint16_t bias_shift, const uint16_t out_shift, const q7_t *bias, q7_t *pOut, q15_t *vec buffer)
```

Q7 opt fully-connected layer function.

Buffer size:

Return The function returns RISCV_MATH_SUCCESS

Parameters

- [in] pV: pointer to input vector
- [in] pM: pointer to matrix weights
- [in] dim_vec: length of the vector
- [in] num_of_rows: number of rows in weight matrix
- [in] bias_shift: amount of left-shift for bias
- [in] out shift: amount of right-shift for output
- [in] bias: pointer to bias
- [inout] pOut: pointer to output vector
- [inout] vec_buffer: pointer to buffer space for input

vec_buffer size: dim_vec

This opt function is designed to work with interleaved weight matrix. The vector input is assumed in q7_t format, we call riscv_q7_to_q15_no_shift_shuffle function to expand into q15_t format with certain weight re-ordering, refer to the function comments for more details. Here we use only one pointer to read 4 rows in the weight matrix. So if the original q7_t matrix looks like this:

```
| a11 | a12 | a13 | a14 | a15 | a16 | a17 |
| a21 | a22 | a23 | a24 | a25 | a26 | a27 |
```

```
| a31 | a32 | a33 | a34 | a35 | a36 | a37 |
     | a41 | a42 | a43 | a44 | a45 | a46 | a47 |
     | a51 | a52 | a53 | a54 | a55 | a56 | a57 |
     | a61 | a62 | a63 | a64 | a65 | a66 | a67 |
     We operates on multiple-of-4 rows, so the first four rows becomes
     | a11 | a21 | a13 | a23 | a31 | a41 | a33 | a43 |
     | a12 | a22 | a14 | a24 | a32 | a42 | a34 | a44 |
     | a15 | a25 | a35 | a45 | a16 | a26 | a36 | a46 |
     So within the kernel, we first read the re-ordered vector in as:
     | b1 | b3 | and | b2 | b4 |
     the four q31_t weights will look like
     | a11 | a13 |, | a21 | a23 |, | a31 | a33 |, | a41 | a43 |
     | a12 | a14 |, | a22 | a24 |, | a32 | a34 |, | a42 | a44 |
     The column left over will be in-order, which is:
     | a17 | a27 | a37 | a47 |
     For the left-over rows, we do 1x1 computation, so the data remains as its original order.
     So the stored weight matrix looks like this:
     | a11 | a21 | a13 | a23 | a31 | a41 |
     | a33 | a43 | a12 | a22 | a14 | a24 |
     | a32 | a42 | a34 | a44 | a15 | a25 |
     | a35 | a45 | a16 | a26 | a36 | a46 |
     | a17 | a27 | a37 | a47 | a51 | a52 |
     | a53 | a54 | a55 | a56 | a57 | a61 |
     | a62 | a63 | a64 | a65 | a66 | a67 |
riscv_status riscv_fully_connected_s8 (const
                                                              nmsis nn context
                                                                                             const
                                                                                                        nm-
                                                   sis_nn_fc_params
                                                                          *fc_params,
                                                                                            const
                                                                                                        nm-
                                                   sis_nn_per_tensor_quant_params
                                                                                            *quant_params,
                                                   const nmsis_nn_dims *input_dims, const q7_t *in-
                                                   put data, const nmsis nn dims *filter dims, const
                                                   q7_t *filter_data, const nmsis_nn_dims *bias_dims,
                                                   const int32_t *bias_data, const nmsis_nn_dims
                                                   *output_dims, q7_t *output_data)
```

Basic s8 Fully Connected function.

- Supported framework: TensorFlow Lite
- q7 is used as data type eventhough it is s8 data. It is done so to be consistent with existing APIs.

Return The function returns RISCV_MATH_SUCCESS

Parameters

- [inout] ctx: Function context (e.g. temporary buffer). Check the function definition file to see if an additional buffer is required. Optional function {API}_get_buffer_size() provides the buffer size if an additional buffer is required.
- [in] fc_params: Fully Connected layer parameters (e.g. strides, dilations, pads,...) Range of fc_params->input_offset: [-127, 128] fc_params->filter_offset: 0 Range of fc_params->output_offset: [-128, 127]
- [in] quant_params: Per-tensor quantization info. It contains the multiplier and shift values to be applied to the output tensor.
- [in] input_dims: Input (activation) tensor dimensions. Format: [N, H, W, C_IN] Input dimension is taken as Nx(H * W * C_IN)
- [in] input_data: Input (activation) data pointer. Data type: int8
- [in] filter_dims: Two dimensional filter dimensions. Format: [N, C] N: accumulation depth and equals $(H * W * C_IN)$ from input_dims C: output depth and equals C_I in output_dims E W: Not used
- [in] filter_data: Filter data pointer. Data type: int8
- [in] bias_dims: Bias tensor dimensions. Format: [C_OUT] N, H, W: Not used
- [in] bias_data: Bias data pointer. Data type: int32
- [in] output_dims: Output tensor dimensions. Format: [N, C_OUT] N: Batches C_OUT: Output depth H & W: Not used.
- [inout] output_data: Output data pointer. Data type: int8

int32_t riscv_fully_connected_s8_get_buffer_size(const nmsis_nn_dims *filter_dims)

Get the required buffer size for S8 basic fully-connected and matrix multiplication layer function for TF Lite.

Return The function returns required buffer size in bytes

Parameters

• [in] filter_dims: dimension of filter

Pooling Functions

riscv_status riscv_avgpool_s8 (const nmsis_nn_context *ctx, const nmsis_nn_pool_params *pool_params, const nmsis_nn_dims *input_dims, const q7_t *in-put_data, const nmsis_nn_dims *filter_dims, const nmsis_nn_dims *output_dims, q7_t *output_data)

int32_t riscv_avgpool_s8_get_buffer_size (const int dim_dst_width, const int ch_src)

riscv_status riscv_max_pool_s8 (const nmsis_nn_context *ctx, const nmsis_nn_pool_params *pool_params, const nmsis_nn_dims *input_dims, const q7_t *in-put_data, const nmsis_nn_dims *filter_dims, const nmsis_nn_dims *output_dims, q7_t *output_data)

void riscv_maxpool_q7_HWC (q7_t *Im_in, const uint16_t dim_im_in, const uint16_t ch_im_in, const uint16_t dim_kernel, const uint16_t padding, const uint16_t stride, const uint16_t dim_im_out, q7_t *bufferA, q7_t *Im_out)

void riscv_avepool_q7_HWC (q7_t *Im_in, const uint16_t dim_im_in, const uint16_t ch_im_in, const uint16_t dim_kernel, const uint16_t padding, const uint16_t stride, const uint16_t dim_im_out, q7_t *bufferA, q7_t *Im_out)

group Pooling

Perform pooling functions, including max pooling and average pooling

Functions

```
riscv_status riscv_avgpool_s8 (const nmsis_nn_context *ctx, const nmsis_nn_pool_params *pool_params, const nmsis_nn_dims *input_dims, const q7_t *input_data, const nmsis_nn_dims *filter_dims, const nmsis_nn_dims *output dims, q7 t *output data)
```

s8 average pooling function.

• Supported Framework: TensorFlow Lite

Return The function returns RISCV_MATH_SUCCESS - Successful operation

Parameters

- [inout] ctx: Function context (e.g. temporary buffer). Check the function definition file to see if an additional buffer is required. Optional function {API}_get_buffer_size() provides the buffer size if an additional buffer is required.
- [in] pool_params: Pooling parameters
- [in] input_dims: Input (activation) tensor dimensions. Format: [H, W, C_IN] Argument 'N' is not used.
- [in] input_data: Input (activation) data pointer. Data type: int8
- [in] filter_dims: Filter tensor dimensions. Format: [H, W] Argument N and C are not used.
- [in] output_dims: Output tensor dimensions. Format: [H, W, C_OUT] Argument N is not used. C_OUT equals C_IN.
- [inout] output_data: Output data pointer. Data type: int8

int32_t riscv_avgpool_s8_get_buffer_size (const int dim_dst_width, const int ch_src)
Get the required buffer size for S8 average pooling function.

Return The function returns required buffer size in bytes

Parameters

- [in] dim_dst_width: output tensor dimension
- [in] ch_src: number of input tensor channels

```
riscv_status riscv_max_pool_s8 (const nmsis_nn_context *ctx, const nmsis_nn_pool_params *pool_params, const nmsis_nn_dims *input_dims, const q7_t *input_data, const nmsis_nn_dims *filter_dims, const nmsis_nn_dims *output_dims, q7_t *output_data)
```

s8 max pooling function.

• Supported Framework: TensorFlow Lite

Return The function returns RISCV_MATH_SUCCESS - Successful operation

Parameters

- [inout] ctx: Function context (e.g. temporary buffer). Check the function definition file to see if an additional buffer is required. Optional function {API}_get_buffer_size() provides the buffer size if an additional buffer is required.
- [in] pool_params: Pooling parameters
- [in] input_dims: Input (activation) tensor dimensions. Format: [H, W, C_IN] Argument 'N' is not used.
- [in] input_data: Input (activation) data pointer. Data type: int8
- [in] filter_dims: Filter tensor dimensions. Format: [H, W] Argument N and C are not used.
- [in] output_dims: Output tensor dimensions. Format: [H, W, C_OUT] Argument N is not used. C_OUT equals C_IN.
- [inout] output_data: Output data pointer. Data type: int8

```
void riscv_maxpool_q7_HWC (q7_t *Im_in, const uint16_t dim_im_in, const uint16_t ch_im_in, const uint16_t dim_kernel, const uint16_t padding, const uint16_t stride, const uint16_t dim_im_out, q7_t *bufferA, q7_t *Im out)
```

Q7 max pooling function.

The pooling function is implemented as split x-pooling then y-pooling.

Parameters

- [inout] Im_in: pointer to input tensor
- [in] dim_im_in: input tensor dimention
- [in] ch_im_in: number of input tensor channels
- [in] dim_kernel: filter kernel size
- [in] padding: padding sizes
- [in] stride: convolution stride
- [in] dim_im_out: output tensor dimension
- [inout] bufferA: Not used
- [inout] Im out: pointer to output tensor

This pooling function is input-destructive. Input data is undefined after calling this function.

Q7 average pooling function.

Buffer size:

Parameters

- [inout] Im_in: pointer to input tensor
- [in] dim_im_in: input tensor dimention
- [in] ch_im_in: number of input tensor channels

```
• [in] dim_kernel: filter kernel size
```

- [in] padding: padding sizes
- [in] stride: convolution stride
- [in] dim_im_out: output tensor dimension
- [inout] bufferA: pointer to buffer space for input
- [inout] Im out: pointer to output tensor

bufferA size: 2*dim_im_out*ch_im_in

The pooling function is implemented as split x-pooling then y-pooling.

This pooling function is input-destructive. Input data is undefined after calling this function.

Reshape Functions

```
void riscv_reshape_s8 (const int8_t *input, int8_t *output, const uint32_t total_size)
group Reshape
```

Functions

```
void riscv_reshape_s8 (const int8_t *input, int8_t *output, const uint32_t total_size)
Reshape a s8 vector into another with different shape.
```

Basic s8 reshape function.

Refer header file for details.

Softmax Functions

```
void riscv_softmax_q15 (const q15_t *vec_in, const uint16_t dim_vec, q15_t *p_out)

void riscv_softmax_q7 (const q7_t *vec_in, const uint16_t dim_vec, q7_t *p_out)

void riscv_softmax_s8 (const int8_t *input, const int32_t num_rows, const int32_t row_size, const int32_t mult, const int32_t shift, const int32_t diff_min, int8_t *out-put)

void riscv_softmax_u8 (const uint8_t *input, const int32_t num_rows, const int32_t row_size, const int32_t mult, const int32_t shift, const int32_t diff_min, uint8_t *out-put)

void riscv_softmax_with_batch_q7 (const q7_t *vec_in, const uint16_t nb_batches, const uint16_t dim_vec, q7_t *p_out)

group Softmax

EXP(2) based softmax functions.
```

Functions

```
void riscv_softmax_q15 (const q15_t *vec_in, const uint16_t dim_vec, q15_t *p_out) Q15 softmax function.
```

Here, instead of typical e based softmax, we use 2-based softmax, i.e.,:

Parameters

- [in] vec_in: pointer to input vector
- [in] dim_vec: input vector dimention
- [out] p_out: pointer to output vector

```
y_i = 2^(x_i) / sum(2^x_j)
```

The relative output will be different here. But mathematically, the gradient will be the same with a log(2) scaling factor.

```
void riscv_softmax_q7 (const q7_t *vec_in, const uint16_t dim_vec, q7_t *p_out) Q7 softmax function.
```

Here, instead of typical natural logarithm e based softmax, we use 2-based softmax here, i.e.,:

Parameters

- [in] vec_in: pointer to input vector
- [in] dim_vec: input vector dimention
- [out] p_out: pointer to output vector

```
y_i = 2^(x_i) / sum(2^x_j)
```

The relative output will be different here. But mathematically, the gradient will be the same with a log(2) scaling factor.

```
void riscv_softmax_s8 (const int8_t *input, const int32_t num_rows, const int32_t row_size, const int32_t mult, const int32_t shift, const int32_t diff_min, int8_t *output)
```

S8 softmax function.

Note Supported framework: TensorFlow Lite micro (bit-accurate)

Parameters

- [in] input: Pointer to the input tensor
- [in] num_rows: Number of rows in the input tensor
- [in] row_size: Number of elements in each input row
- [in] mult: Input quantization multiplier
- [in] shift: Input quantization shift within the range [0, 31]
- [in] diff_min: Minimum difference with max in row. Used to check if the quantized exponential operation can be performed
- [out] output: Pointer to the output tensor

```
void riscv_softmax_u8 (const uint8_t *input, const int32_t num_rows, const int32_t row_size, const int32_t mult, const int32_t shift, const int32_t diff_min, uint8_t *output)
```

U8 softmax function.

Note Supported framework: TensorFlow Lite micro (bit-accurate)

Parameters

- [in] input: Pointer to the input tensor
- [in] num_rows: Number of rows in the input tensor
- [in] row_size: Number of elements in each input row

- [in] mult: Input quantization multiplier
- [in] shift: Input quantization shift within the range [0, 31]
- [in] diff_min: Minimum difference with max in row. Used to check if the quantized exponential operation can be performed
- [out] output: Pointer to the output tensor

```
void riscv_softmax_with_batch_q7 (const q7_t *vec_in, const uint16_t nb_batches, const uint16_t dim_vec, q7_t *p_out)
```

Q7 softmax function with batch parameter.

Here, instead of typical natural logarithm e based softmax, we use 2-based softmax here, i.e.,:

Parameters

- [in] vec_in: pointer to input vector
- [in] nb_batches: number of batches
- [in] dim_vec: input vector dimention
- [out] p_out: pointer to output vector

```
y_i = 2^(x_i) / sum(2^x_j)
```

The relative output will be different here. But mathematically, the gradient will be the same with a log(2) scaling factor.

SVDF Layer Functions

```
riscv_status riscv_svdf_s8 (const nmsis_nn_context *input_ctx, const nmsis_nn_context *out-
put_ctx, const nmsis_nn_svdf_params *svdf_params, const nm-
sis_nn_per_tensor_quant_params *input_quant_params, const nm-
sis_nn_dims *input_dims, const q7_t *input_data, const nm-
sis_nn_dims *state_dims, q15_t *state_data, const nmsis_nn_dims
*weights_feature_dims, const q7_t *weights_feature_data, const nm-
sis_nn_dims *weights_time_dims, const q15_t *weights_time_data,
const nmsis_nn_dims *bias_dims, const q31_t *bias_data, const
nmsis_nn_dims *output_dims, q7_t *output_data)
```

group SVDF

Functions

```
riscv_status riscv_svdf_s8 (const nmsis_nn_context *input_ctx, const nmsis_nn_context
                            *output_ctx, const nmsis_nn_svdf_params *svdf_params, const
                            nmsis_nn_per_tensor_quant_params *input_quant_params, const
                            nmsis_nn_per_tensor_quant_params *output_quant_params, const
                            nmsis_nn_dims *input_dims, const q7_t *input_data, const nm-
                            sis_nn_dims *state_dims, q15_t *state_data, const nmsis_nn_dims
                            *weights_feature_dims,
                                                   const
                                                             q7_t
                                                                    *weights_feature_data,
                            const nmsis_nn_dims
                                                   *weights_time_dims,
                                                                          const q15 t
                            *weights_time_data, const nmsis_nn_dims *bias_dims, const
                            q31 t *bias data, const nmsis nn dims *output dims, q7 t *out-
                           put data)
    s8 SVDF function
```

4.3. NMSIS NN API 715

- 1. Supported framework: TensorFlow Lite micro
- 2. q7 is used as data type eventhough it is s8 data. It is done so to be consistent with existing APIs.

Return The function returns RISCV_MATH_SUCCESS

Parameters

- [in] input_ctx: Temporary scratch buffer
- [in] output_ctx: Temporary output scratch buffer
- [in] svdf_params: SVDF Parameters Range of svdf_params->input_offset : [-128, 127] Range of svdf_params->output_offset : [-128, 127]
- [in] input_quant_params: Input quantization parameters
- [in] output_quant_params: Output quantization parameters
- [in] input_dims: Input tensor dimensions
- [in] input_data: Pointer to input tensor
- [in] state_dims: State tensor dimensions
- [in] state_data: Pointer to state tensor
- [in] weights_feature_dims: Weights (feature) tensor dimensions
- [in] weights_feature_data: Pointer to the weights (feature) tensor
- [in] weights_time_dims: Weights (time) tensor dimensions
- [in] weights_time_data: Pointer to the weights (time) tensor
- [in] bias_dims: Bias tensor dimensions
- [in] bias_data: Pointer to bias tensor
- [in] output_dims: Output tensor dimensions
- [out] output_data: Pointer to the output tensor

group groupNN

A collection of functions to perform basic operations for neural network layers. Functions with a _s8 suffix support TensorFlow Lite framework.

4.3.2 Neural Network Data Conversion Functions

```
void riscv_q7_to_q15_no_shift (const q7_t *pSrc, q15_t *pDst, uint32_t blockSize)
void riscv_q7_to_q15_reordered_no_shift (const q7_t *pSrc, q15_t *pDst, uint32_t blockSize)
void riscv_q7_to_q15_reordered_with_offset (const q7_t *src, q15_t *dst, uint32_t block_size, q15_t offset)
void riscv_q7_to_q15_with_offset (const q7_t *src, q15_t *dst, uint32_t block_size, q15_t offset)
void riscv_q7_to_q15_with_offset (const q7_t *pSrc, q15_t *dst, uint32_t block_size, q15_t offset)
void riscv_q7_to_q7_no_shift (const q7_t *pSrc, q7_t *pDst, uint32_t blockSize)
void riscv_q7_to_q7_reordered_no_shift (const q7_t *pSrc, q7_t *pDst, uint32_t blockSize)
group nndata_convert
```

Perform data type conversion in-between neural network operations

Functions

```
void riscv_q7_to_q15_no_shift (const q7_t *pSrc, q15_t *pDst, uint32_t blockSize) Converts the elements of the Q7 vector to Q15 vector without left-shift.
```

Converts the elements of the q7 vector to q15 vector without left-shift.

The equation used for the conversion process is:

Description:

Parameters

- [in] *pSrc: points to the Q7 input vector
- [out] *pDst: points to the Q15 output vector
- [in] blockSize: length of the input vector

```
void\ \mathbf{riscv\_q7\_to\_q15\_reordered\_no\_shift}\ (\mathbf{const}\ q7\_t\ *pSrc,\ q15\_t\ *pDst,\ uint 32\_t\ block-to-defined block-to-d
```

Size)
Converts the elements of the Q7 vector to reordered Q15 vector without left-shift.

Converts the elements of the q7 vector to reordered q15 vector without left-shift.

This function does the q7 to q15 expansion with re-ordering

Parameters

- [in] *pSrc: points to the Q7 input vector
- [out] *pDst: points to the Q15 output vector
- [in] blockSize: length of the input vector

is converted into:

This looks strange but is natural considering how sign-extension is done at assembly level.

The expansion of other other oprand will follow the same rule so that the end results are the same.

The tail (i.e., last (N % 4) elements) will still be in original order.

```
void riscv_q7_to_q15_reordered_with_offset (const q7_t *src, q15_t *dst, uint32_t block_size, q15_t offset)
```

Converts the elements of the Q7 vector to a reordered Q15 vector with an added offset.

Converts the elements of the q7 vector to reordered q15 vector with an added offset.

Note Refer header file for details.

```
void riscv_q7_to_q15_with_offset (const q7_t *src, q15_t *dst, uint32_t block_size, q15_t offset)
```

Converts the elements from a q7 vector to a q15 vector with an added offset.

The equation used for the conversion process is:

Description:

Parameters

- [in] src: pointer to the q7 input vector
- [out] dst: pointer to the q15 output vector
- [in] block_size: length of the input vector
- [in] offset: q7 offset to be added to each input vector element.

4.3. NMSIS NN API 717

```
void riscv_q7_to_q7_no_shift (const q7_t *pSrc, q7_t *pDst, uint32_t blockSize) Converts the elements of the Q7 vector to Q7 vector without left-shift.
```

The equation used for the conversion process is:

Return none.

Description:

Parameters

- [in] *pSrc: points to the Q7 input vector
- [out] *pDst: points to the Q7 output vector
- [in] blockSize: length of the input vector

```
void riscv_q7_to_q7_reordered_no_shift (const q7_t *pSrc, q7_t *pDst, uint32_t block-
```

Converts the elements of the Q7 vector to reordered Q7 vector without left-shift.

This function does the q7 to q7 expansion with re-ordering

Return none.

Parameters

- [in] *pSrc: points to the Q7 input vector
- [out] *pDst: points to the Q7 output vector
- [in] blockSize: length of the input vector

is converted into:

This looks strange but is natural considering how sign-extension is done at assembly level.

The expansion of other other oprand will follow the same rule so that the end results are the same.

The tail (i.e., last (N % 4) elements) will still be in original order.

4.3.3 Basic Math Functions for Neural Network Computation

```
void riscv_nn_accumulate_q7_to_q15 (q15_t *dst, const q7_t *src, uint32_t block_size)
void riscv_nn_accumulate_q7_to_q7 (q7_t *dst, const q7_t *src, uint32_t block_size)
void riscv_nn_add_q7 (const q7_t *input, q31_t *output, uint32_t block_size)
q7_t *riscv_nn_depthwise_conv_nt_t_padded_s8 (const q7_t *lhs, const q7_t *rhs, const
                                                       int32_t lhs_offset, const uint16_t num_ch,
                                                       const int32_t *out_shift, const int32_t
                                                       *out_mult, const int32_t out_offset, const
                                                       int32_t activation_min, const int32_t activa-
                                                       tion_max, const uint16_t row_x_col, const
                                                       int32_t *const output_bias, q7_t *out)
q7_t *riscv_nn_depthwise_conv_nt_t_s8 (const q7_t *lhs, const q7_t *rhs, const int32_t
                                              lhs_offset, const uint16_t num_ch, const int32_t
                                              *out_shift, const int32_t *out_mult, const int32_t
                                              out_offset, const int32_t activation_min, const
                                              int32_t activation_max, const uint16_t row_x_col,
                                              const int32_t *const output_bias, q7_t *out)
```

```
riscv_status riscv_nn_mat_mul_core_1x_s8 (int32_t row_elements, const int8_t *row_base, const int8_t *col_base, int32_t *const sum_col, int32_t *const output)

riscv_status riscv_nn_mat_mul_core_1x_s8 (int32_t row_elements, const int32_t offset,
```

riscv_status riscv_nn_mat_mul_core_4x_s8 (const int32_t row_elements, const int32_t offset, const int8_t *row_base, const int8_t *col_base, int32_t *const sum_col, int32_t *const output)

riscv_status riscv_nn_mat_mult_nt_t_s8 (const q7_t *lhs, const q7_t *rhs, const q31_t *bias, q7_t *dst, const int32_t *dst_multipliers, const int32_t *dst_shifts, const int32_t lhs_rows, const int32_t rhs_rows, const int32_t rhs_cols, const int32_t lhs_offset, const int32_t dst_offset, const int32_t activation_min, const int32_t activation_max)

void riscv_nn_mult_q15 (q15_t *pSrcA, q15_t *pSrcB, q15_t *pDst, const uint16_t out_shift, uint32_t blockSize)

void riscv_nn_mult_q7 (q7_t *pSrcA, q7_t *pSrcB, q7_t *pDst, const uint16_t out_shift, uint32_t block-Size)

riscv_status riscv_nn_vec_mat_mult_t_s8 (const q7_t *lhs, const q7_t *rhs, const q31_t *bias, q7_t *dst, const int32_t lhs_offset, const int32_t rhs_offset, const int32_t dst_offset, const int32_t dst_multiplier, const int32_t dst_shift, const int32_t rhs_cols, const int32_t rhs_rows, const int32_t activation_min, const int32_t activation_max)

riscv_status riscv_nn_vec_mat_mult_t_svdf_s8 (const q7_t *lhs, const q7_t *rhs, q15_t *dst, const int32_t lhs_offset, const int32_t rhs_offset, const int32_t scatter_offset, const int32_t dst_multiplier, const int32_t dst_shift, const int32_t rhs_cols, const int32_t rhs_rows, const int32_t activation_min, const int32_t activation max)

group NNBasicMath

Basic Math Functions for Neural Network Computation

Functions

void **riscv_nn_accumulate_q7_to_q15** (q15_t *dst, **const** q7_t *src, uint32_t block_size) Converts the elements from a q7 vector and accumulate to a q15 vector.

The equation used for the conversion process is:

Description:

Parameters

- [in] *src: points to the q7 input vector
- [out] *dst: points to the q15 output vector
- [in] block size: length of the input vector

void **riscv_nn_accumulate_q7_to_q7** (q7_t *dst, **const** q7_t *src, uint32_t block_size) Converts the elements from a q7 vector and accumulate to a q7 vector.

The equation used for the conversion process is:

Description:

4.3. NMSIS NN API 719

Parameters

- [in] *src: points to the q7 input vector
- [out] *dst: points to the q7 output vector
- [in] block_size: length of the input vector

```
void \ \textbf{riscv\_nn\_add\_q7} \ (\textbf{const} \ q7\_t \ *input, \ q31\_t \ *output, \ uint32\_t \ block\_size)
```

Non-saturating addition of elements of a q7 vector.

2^24 samples can be added without saturating the result.

Description:

Parameters

- [in] *input: Pointer to the q7 input vector
- [out] *output: Pointer to the q31 output variable.
- [in] block_size: length of the input vector

The equation used for the conversion process is:

```
q7_t *riscv_nn_depthwise_conv_nt_t_padded_s8 (const q7_t *lhs, const q7_t *rhs, const int32_t lhs_offset, const uint16_t num_ch, const int32_t *out_shift, const int32_t *out_mult, const int32_t out_offset, const int32_t activation_min, const int32_t activation_max, const uint16_t row_x_col, const int32_t *const output bias, q7_t *out)
```

Depthwise convolution of transposed rhs matrix with 4 lhs matrices. To be used in padded cases where the padding is -lhs_offset(Range: int8). Dimensions are the same for lhs and rhs.

Return The function returns one of the two

- Updated output pointer if an implementation is available
- NULL if no implementation is available.

Note If number of channels is not a multiple of 4, upto 3 elements outside the boundary will be read out for the following.

- · Output shift
- Output multiplier
- Output bias
- · rhs

Parameters

- [in] lhs: Input left-hand side matrix
- [in] rhs: Input right-hand side matrix (transposed)
- [in] lhs_offset: LHS matrix offset(input offset). Range: -127 to 128
- [in] num_ch: Number of channels in LHS/RHS
- [in] out_shift: Per channel output shift. Length of vector is equal to number of channels

- [in] out_mult: Per channel output multiplier. Length of vector is equal to number of channels
- [in] out_offset: Offset to be added to the output values. Range: -127 to 128
- [in] activation_min: Minimum value to clamp the output to. Range: int8
- [in] activation_max: Maximum value to clamp the output to. Range: int8
- [in] row_x_col: (row_dimension * col_dimension) of LHS/RHS matrix
- [in] output_bias: Per channel output bias. Length of vector is equal to number of channels
- [in] out: Output pointer

```
q7_t *riscv_nn_depthwise_conv_nt_t_s8 (const q7_t *lhs, const q7_t *rhs, const int32_t lhs_offset, const uint16_t num_ch, const int32_t *out_shift, const int32_t *out_mult, const int32_t out_offset, const int32_t activation_min, const int32_t activation_max, const uint16_t row_x_col, const int32_t *const output bias, q7 t *out)
```

Depthwise convolution of transposed rhs matrix with 4 lhs matrices. To be used in non-padded cases. Dimensions are the same for lhs and rhs.

Return The function returns one of the two

- Updated output pointer if an implementation is available
- NULL if no implementation is available.

Note If number of channels is not a multiple of 4, upto 3 elements outside the boundary will be read out for the following.

- Output shift
- · Output multiplier
- Output bias
- rhs

Parameters

- [in] lhs: Input left-hand side matrix
- [in] rhs: Input right-hand side matrix (transposed)
- [in] lhs offset: LHS matrix offset(input offset). Range: -127 to 128
- [in] num_ch: Number of channels in LHS/RHS
- [in] out shift: Per channel output shift. Length of vector is equal to number of channels.
- [in] out_mult: Per channel output multiplier. Length of vector is equal to number of channels.
- [in] out_offset: Offset to be added to the output values. Range: -127 to 128
- [in] activation_min: Minimum value to clamp the output to. Range: int8
- [in] activation_max: Maximum value to clamp the output to. Range: int8
- [in] row_x_col: (row_dimension * col_dimension) of LHS/RHS matrix
- [in] output_bias: Per channel output bias. Length of vector is equal to number of channels.

4.3. NMSIS NN API 721

• [in] out: Output pointer

```
riscv_status riscv_nn_mat_mul_core_1x_s8 (int32_t row_elements, const int8_t *row_base, const int8_t *col_base, int32_t *const sum col, int32_t *const output)
```

General Matrix-multiplication without requantization for one row & one column.

Pseudo-code *output = 0 sum_col = 0 for (i = 0; $i < row_elements$; i++) *output += $row_base[i]$ * $col_base[i]$ sum_col += $col_base[i]$

Return The function returns the multiply-accumulated result of the row by column.

Parameters

- [in] row_elements: number of row elements
- [in] row_base: pointer to row operand
- [in] col_base: pointer to col operand
- [out] sum_col: pointer to store sum of column elements
- [out] output: pointer to store result of multiply-accumulate

```
riscv_status riscv_nn_mat_mul_core_4x_s8 (const int32_t row_elements, const int32_t off-

set, const int8_t *row_base, const int8_t

*col_base, int32_t *const sum_col, int32_t

*const output)
```

General Matrix-multiplication without requantization for four rows and one column.

Pseudo-code output[0] = 0 .. output[3] = 0 sum_col = 0 for (i = 0; i < row_elements; i++) output[0] += row_base[i] * col_base[i] .. output[3] += row_base[i + (row_elements * 3)] * col_base[i] sum_col += col_base[i]

Return The function returns the multiply-accumulated result of the row by column

Parameters

- [in] row_elements: number of row elements
- [in] offset: offset between rows. Can be the same as row_elements. For e.g, in a 1x1 conv scenario with stride as 1.
- [in] row_base: pointer to row operand
- [in] col_base: pointer to col operand
- [out] sum_col: pointer to store sum of column elements
- [out] output: pointer to store result(4 int32's) of multiply-accumulate

```
riscv_status riscv_nn_mat_mult_nt_t_s8 (const q7_t *lhs, const q7_t *rhs, const q31_t *bias, q7_t *dst, const int32_t *dst_multipliers, const int32_t *dst_shifts, const int32_t lhs_rows, const int32_t rhs_rows, const int32_t rhs_cols, const int32_t lhs_offset, const int32_t dst_offset, const int32_t activation_min, const int32_t activation_max)
```

General Matrix-multiplication function with per-channel requantization. This function assumes:

- LHS input matrix NOT transposed (nt)
- RHS input matrix transposed (t)

Note This operation also performs the broadcast bias addition before the requantization

Return The function returns RISCV_MATH_SUCCESS

Parameters

- [in] lhs: Pointer to the LHS input matrix
- [in] rhs: Pointer to the RHS input matrix
- [in] bias: Pointer to the bias vector. The length of this vector is equal to the number of output columns (or RHS input rows)
- [out] dst: Pointer to the output matrix with "m" rows and "n" columns
- [in] dst_multipliers: Pointer to the multipliers vector needed for the per-channel requantization. The length of this vector is equal to the number of output columns (or RHS input rows)
- [in] dst_shifts: Pointer to the shifts vector needed for the per-channel requantization. The length of this vector is equal to the number of output columns (or RHS input rows)
- [in] lhs_rows: Number of LHS input rows
- [in] rhs rows: Number of RHS input rows
- [in] rhs_cols: Number of LHS/RHS input columns
- [in] lhs_offset: Offset to be applied to the LHS input value
- [in] dst_offset: Offset to be applied the output result
- [in] activation_min: Minimum value to clamp down the output. Range: int8
- [in] activation_max: Maximum value to clamp up the output. Range: int8

```
void riscv_nn_mult_q15 (q15_t *pSrcA, q15_t *pSrcB, q15_t *pDst, const uint16_t out_shift, uint32 t blockSize)
```

Q7 vector multiplication with variable output shifts.

q7 vector multiplication with variable output shifts

Scaling and Overflow Behavior:

The function uses saturating arithmetic. Results outside of the allowable Q15 range [0x8000 0x7FFF] will be saturated.

Parameters

- [in] *pSrcA: pointer to the first input vector
- [in] *pSrcB: pointer to the second input vector
- [out] *pDst: pointer to the output vector
- [in] out_shift: amount of right-shift for output
- [in] blockSize: number of samples in each vector

void **riscv_nn_mult_q7** (q7_t *pSrcA, q7_t *pSrcB, q7_t *pDst, **const** uint16_t out_shift, uint32_t blockSize)

Q7 vector multiplication with variable output shifts.

q7 vector multiplication with variable output shifts

Scaling and Overflow Behavior:

4.3. NMSIS NN API 723

The function uses saturating arithmetic. Results outside of the allowable Q7 range [0x80 0x7F] will be saturated.

Parameters

- [in] *pSrcA: pointer to the first input vector
- [in] *pSrcB: pointer to the second input vector
- [out] *pDst: pointer to the output vector
- [in] out_shift: amount of right-shift for output
- [in] blockSize: number of samples in each vector

```
riscv_status riscv_nn_vec_mat_mult_t_s8 (const q7_t *lhs, const q7_t *rhs, const q31_t *bias, q7_t *dst, const int32_t lhs_offset, const int32_t rhs_offset, const int32_t dst_offset, const int32_t dst_multiplier, const int32_t dst_shift, const int32_t rhs_cols, const int32_t rhs_rows, const int32_t activation_min, const int32_t activation max)
```

s8 Vector by Matrix (transposed) multiplication

Return The function returns RISCV_MATH_SUCCESS

Parameters

- [in] lhs: Input left-hand side vector
- [in] rhs: Input right-hand side matrix (transposed)
- [in] bias: Input bias
- [out] dst: Output vector
- [in] lhs_offset: Offset to be added to the input values of the left-hand side vector. Range: -127 to 128
- [in] rhs offset: Not used
- [in] dst_offset: Offset to be added to the output values. Range: -127 to 128
- [in] dst_multiplier: Output multiplier
- [in] dst_shift: Output shift
- [in] rhs cols: Number of columns in the right-hand side input matrix
- [in] rhs_rows: Number of rows in the right-hand side input matrix
- [in] activation_min: Minimum value to clamp the output to. Range: int8
- [in] activation_max: Maximum value to clamp the output to. Range: int8

```
riscv_status riscv_nn_vec_mat_mult_t_svdf_s8 (const q7_t *lhs, const q7_t *rhs, q15_t *dst, const int32_t lhs_offset, const int32_t rhs_offset, const int32_t scatter_offset, const int32_t dst_multiplier, const int32_t dst_shift, const int32_t rhs_cols, const int32_t rhs_rows, const int32_t activation_min, const int32_t activation max)
```

s8 Vector by Matrix (transposed) multiplication with s16 output


Return The function returns RISCV MATH SUCCESS

Parameters

- [in] lhs: Input left-hand side vector
- [in] rhs: Input right-hand side matrix (transposed)
- [out] dst: Output vector
- [in] lhs_offset: Offset to be added to the input values of the left-hand side vector. Range: -127 to 128
- [in] rhs_offset: Not used
- [in] scatter_offset: Address offset for dst. First output is stored at 'dst', the second at 'dst + scatter_offset' and so on.
- [in] dst_multiplier: Output multiplier
- [in] dst_shift: Output shift
- [in] rhs_cols: Number of columns in the right-hand side input matrix
- [in] rhs_rows: Number of rows in the right-hand side input matrix
- [in] activation_min: Minimum value to clamp the output to. Range: int16
- [in] activation_max: Maximum value to clamp the output to. Range: int16

4.3.4 Convolutional Neural Network Example

group CNNExample

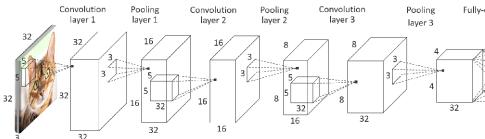

Refer riscv_nnexamples_cifar10.cpp

Description:

Demonstrates a convolutional neural network (CNN) example with the use of convolution, ReLU activation, pooling and fully-connected functions.

Model definition:

The CNN used in this example is based on CIFAR-10 example from Caffe [1]. The neural network consists of 3 convolution layers interspersed by ReLU activation and max pooling layers, followed by a fully-connected layer at the end. The input to the network is a 32x32 pixel color image, which will be classified into one of the 10 output classes. This example model implementation needs 32.3 KB to store weights, 40 KB for activations and 3.1 KB for storing the im2col data.

Variables Description:

- conv1_wt, conv2_wt, conv3_wt are convolution layer weight matrices
- conv1_bias, conv2_bias, conv3_bias are convolution layer bias arrays

4.3. NMSIS NN API 725

- ip1_wt, ip1_bias point to fully-connected layer weights and biases
- input_data points to the input image data
- output_data points to the classification output
- col_buffer is a buffer to store the im2col output
- scratch_buffer is used to store the activation data (intermediate layer outputs)

NMSIS DSP Software Library Functions Used:

- riscv_convolve_HWC_q7_RGB()
- riscv_convolve_HWC_q7_fast()
- riscv_relu_q7()
- riscv_maxpool_q7_HWC()
- riscv_avepool_q7_HWC()
- riscv_fully_connected_q7_opt()
- riscv_fully_connected_q7()

[1] https://github.com/BVLC/caffe

4.3.5 Gated Recurrent Unit Example

group GRUExample


Refer riscv_nnexamples_gru.cpp

Description:

Demonstrates a gated recurrent unit (GRU) example with the use of fully-connected, Tanh/Sigmoid activation functions.

Model definition:

GRU is a type of recurrent neural network (RNN). It contains two sigmoid gates and one hidden state.

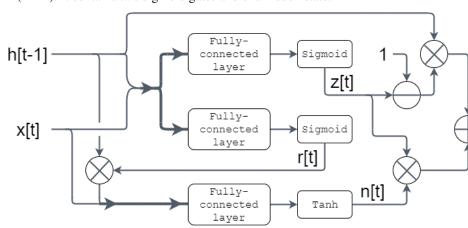

The computation can be summarized as:

Variables Description:

- update_gate_weights, reset_gate_weights, hidden_state_weights are weights corresponding to update gate (W_z), reset gate (W_r), and hidden state (W_n).
- update_gate_bias, reset_gate_bias, hidden_state_bias are layer bias arrays
- test_input1, test_input2, test_history are the inputs and initial history

The buffer is allocated as:

| reset | input | history | update | hidden_state |

In this way, the concatination is automatically done since (reset, input) and (input, history) are physically concatinated in memory.

The ordering of the weight matrix should be adjusted accordingly.

NMSIS DSP Software Library Functions Used:

- riscv_fully_connected_mat_q7_vec_q15_opt()
- riscv_nn_activations_direct_q15()
- riscv_mult_q15()
- riscv_offset_q15()
- riscv_sub_q15()
- riscv_copy_q15()

4.4 Changelog

4.4.1 V1.0.2

This is release 1.0.2 version of NMSIS-NN library.

- Sync up to CMSIS NN library 3.0.0
- Initial support for RISC-V vector extension support

4.4.2 V1.0.1

This is release V1.0.1 version of NMSIS-DSP library.

- Both Nuclei RISC-V 32 and 64 bit cores are supported now.
- Libraries are optimized for RISC-V 32 and 64 bit DSP instructions.
- The DSP examples are now using Nuclei SDK as running environment.

4.4.3 V1.0.0

This is the first version of NMSIS-NN library.

We adapt the CMSIS-NN v1.0.0 library to use RISCV DSP instructions, all the API names now are renamed from arm_xxx to riscv_xxx.

4.4. Changelog 727

CHANGELOG

5.1 V1.0.2-RC2

This is the release candidate version V1.0.2-RC2 release of Nuclei MCU Software Interface Standard(NMSIS). The following changes has been made since V1.0.2-RC1.

- Documentation
 - Update NMSIS Core/DSP/NN related documentation

5.2 V1.0.2-RC1

This is the release candidate version V1.0.2-RC1 release of Nuclei MCU Software Interface Standard(NMSIS). The following changes has been made since V1.0.1.

• Device Templates

- DOWNLOAD_MODE_xxx macros are removed from riscv_encoding.h, it is now defined as enum in <Device.h>, and can be customized by soc vendor.
- startup code now don't rely on DOWNLOAD_MODE macro, instead it now rely on a new macro called VECTOR_TABLE_REMAPPED, when VECTOR_TABLE_REMAPPED is defined, it means the vector table's lma! = vma, such as vector table need to be copied from flash to ilm when boot up
- Add BIT, BITS, REG, ADDR related macros in <Device.h>

• NMSIS-Core

- Nuclei Cache CCM operation APIs are now introduced in core feature cache.h

• NMSIS-DSP/NN

- Merged the official CMSIS 5.8.0 release, CMSIS-DSP 1.9.0, CMSIS-NN 3.0.0
- RISC-V Vector extension and P-extension support for DSP/NN libraries are added

5.3 V1.0.1

This is the offical V1.0.1 release of Nuclei MCU Software Interface Standard(NMSIS).

The following changes has been maded since V1.0.1-RC1.

• Device Templates

- I/D Cache enable assemble code in startup_<Device>.S are removed now
- Cache control updates in System_<Device>.c
 - * I-Cache will be enabled if __ICACHE_PRESENT = 1 defined in <Device.h>
 - * D-Cache will be enabled if __DCACHE_PRESENT = 1 defined in <Device.h>

5.4 V1.0.1-RC1

This is release candidate version V1.0.1-RC1 of NMSIS.

• NMSIS-Core

- Add RISC-V DSP 64bit intrinsic functions in core_feature_dsp.h
- Add more CSR definitions in riscv_encoding.h
- Update arm compatiable functions for RISC-V dsp instruction cases in core_compatiable.h

NMSIS-DSP

- Optimize RISC-V 32bit DSP library implementation
- Add support for Nuclei RISC-V 64bit DSP SIMD instruction for DSP library
- Add test cases used for DSP library testing, mainly for internal usage
- Change the examples and tests to use Nuclei SDK as running environment

• NMSIS-NN

- Add support for Nuclei RISC-V 64bit DSP SIMD instruction for NN library
- Change the examples and tests to use Nuclei SDK as running environment

• Device Templates

- Add DDR DOWNLOAD_MODE in device templates
- Modifications to startup_<Device>.S files
 - * _premain_init is added to replace _init
 - * _postmain_fini is added to replace _fini
- If you have implemented your init or de-init functions through __init or __fini, please use __premain_init and __postmain_fini functions defined system_<Device>.c now

5.5 V1.0.0-beta1

Main changes in release V1.0.0-beta1.

• NMSIS-Core

- Fix SysTick_Reload implementation
- Update ECLIC_Register_IRQ implementation to allow handler == NULL
- Fix MTH offset from 0x8 to 0xB, this will affect function of ECLIC_GetMth and ECLIC_SetMth
- Fix wrong macro check in cache function
- Add missing SOC_INT_MAX enum definition in Device template

- In System_<Device>.c, ECLIC NLBits set to __ECLIC_INTCTLBITS, which means all the bits are for level, no bits for priority

5.6 V1.0.0-beta

Main changes in release V1.0.0-beta.

· NMSIS-Core

- Fix error typedef of CSR_MCAUSE_Type
- Change CSR_MCACHE_CTL_DE to future value 0x00010000
- Fix names in CSR naming, CSR_SCRATCHCSW -> CSR_MSCRATCHCSW, and CSR_SCRATCHCSWL -> CSR_MSCRATCHCSWL
- Add macros in riscv_encoding.h: MSTATUS_FS_INITIAL, MSTATUS_FS_CLEAN,
 MSTATUS_FS_DIRTY

Documentation

- Fix an typo in core_template_intexc.rst
- Add cross references of Nuclei ISA Spec
- Update appendix
- Refines tables and figures

5.7 V1.0.0-alpha.1

API changes has been maded to system timer.

- Start from Nuclei N core version 1.4, MSTOP register is renamed to MTIMECTL to provide more features
- Changes made to NMSIS/Core/core_feature_timer.h
 - MSTOP register name changed to MTIMECTL due to core spec changes
 - SysTimer SetMstopValue renamed to SysTimer SetControlValue
 - SysTimer_GetMstopValue renamed to SysTimer_GetControlValue
 - Add SysTimer_Start and SysTimer_Stop to start or stop system timer counter
 - SysTick_Reload function is introduced to reload system timer
 - Macro names started with SysTimer_xxx are changed, please check in the code.
- Removed unused lines of code in DSP and NN library source code which has unused macros which will not
 work for RISCV cores.
- Fix some documentation issues, mainly typos and invalid cross references.

5.8 V1.0.0-alpha

This is the V1.0.0-alpha release of Nuclei MCU Software Interface Standard(NMSIS).

In this release, we have release three main components:

5.6. V1.0.0-beta 731

- NMSIS-Core: Standardized API for the Nuclei processor core and peripherals.
- NMSIS-DSP: DSP library collection optimized for the Nuclei Processors which has RISC-V SIMD instruction set.
- NMSIS-NN: Efficient neural network library developed to maximize the performance and minimize the memory footprint Nuclei Processors which has RISC-V SIMD instruction set.

We also released totally new Nuclei- SDK^{24} which is an SDK implementation based on the **NMSIS-Core** for Nuclei N/NX evaluation cores running on HummingBird Evaluation Kit.

²⁴ https://github.com/Nuclei-Software/nuclei-sdk

CHAPTER

SIX

GLOSSARY

- API (Application Program Interface) A defined set of routines and protocols for building application software.
- **DSP** (Digital Signal Processing) is the use of digital processing, such as by computers or more specialized digital signal processors, to perform a wide variety of signal processing operations.
- **ISR** (Interrupt Service Routine) Also known as an interrupt handler, an ISR is a callback function whose execution is triggered by a hardware interrupt (or software interrupt instructions) and is used to handle high-priority conditions that require interrupting the current code executing on the processor.
- **NN** (Neural Network) is a network or circuit of neurons, or in a modern sense, an artificial neural network, composed of artificial neurons or nodes.
- **XIP** (eXecute In Place) a method of executing programs directly from long term storage rather than copying it into RAM, saving writable memory for dynamic data and not the static program code.

CHAPTER

SEVEN

APPENDIX

- Nuclei Tools and Documents: https://nucleisys.com/download.php
- Nuclei riscv-openocd Repo: https://github.com/riscv-mcu/riscv-openocd
- Nuclei riscv-binutils-gdb: https://github.com/riscv-mcu/riscv-binutils-gdb
- Nuclei riscv-gnu-toolchain: https://github.com/riscv-mcu/riscv-gnu-toolchain
- Nuclei riscv-newlib: https://github.com/riscv-mcu/riscv-newlib
- Nuclei riscv-gcc: https://github.com/riscv-mcu/riscv-gcc
- Nuclei SDK: https://github.com/Nuclei-Software/nuclei-sdk
- NMSIS: https://doc.nucleisys.com/nmsis/
- Nuclei Bumblebee Core Document: https://github.com/nucleisys/Bumblebee_Core_Doc
- Nuclei RISC-V IP Products: https://www.nucleisys.com/product.php
- RISC-V MCU Community Website: https://www.riscv-mcu.com/
- Nuclei Spec: https://doc.nucleisys.com/nuclei_spec
- RISC-V Packed SIMD(P) Extension Spec: https://github.com/riscv/riscv-p-spec
- RISC-V Vector(V) Extension Spec: https://github.com/riscv/riscv-v-spec

CHAPTER

EIGHT

INDICES AND TABLES

- genindex
- search

INDEX

Symbols	RV_CSR_READ_CLEAR (C macro), 61
_FLD2VAL (<i>C macro</i>), 349, 350	RV_CSR_READ_SET (C macro), 61
	RV_CSR_SET (<i>C macro</i>), 61
ALIGNED (C macro), 60	$_$ RV_CSR_SWAP (C macro), 60
ASM (<i>C macro</i>), 59	RV_CSR_WRITE (<i>C macro</i>), 61
CLZ (<i>C macro</i>), 403	RV_FLD (<i>C macro</i>), 377
COMPILER_BARRIER (<i>C macro</i>), 60	$_$ RV_FLOAD (C macro), 378
CPU_RELAX (<i>C macro</i>), 87, 88	RV_FLW (<i>C macro</i>), 376
DMB (<i>C macro</i>), 402	RV_FSD (<i>C macro</i>), 377
DSB (<i>C macro</i>), 402	RV_FSTORE (<i>C macro</i>), 378
FENCE (<i>C macro</i>), 87, 88	RV_FSW (<i>C macro</i>), 376
I (<i>C macro</i>), 349, 350	RV_INSB (<i>C macro</i>), 199, 200
IM (<i>C macro</i>), 349, 350	RV_KSLLI16 (<i>C macro</i>), 119
INLINE (<i>C macro</i>), 59	RV_KSLLI8 (<i>C macro</i>), 129, 130
INTERRUPT (C macro), 60	RV_KSLLIW (<i>C macro</i>), 182
IO (C macro), 349, 350	RV_SCLIP16 (<i>C macro</i>), 159
IOM (<i>C macro</i>), 349, 350	RV_SCLIP32 (<i>C macro</i>), 247
ISB (<i>C macro</i>), 402	RV_SCLIP8 (<i>C macro</i>), 165
LDRBT (<i>C macro</i>), 402	RV_SLLI16 (<i>C macro</i>), 119, 120
LDRHT (<i>C macro</i>), 402	RV_SLLI8 (<i>C macro</i>), 129, 130
LDRT (<i>C macro</i>), 402	RV_SRAI16 (<i>C macro</i>), 119, 120
NMSIS_VERSION (C macro), 58	RV_SRAI16_U(<i>C macro</i>), 119, 121
NMSIS_VERSION_MAJOR (C macro), 58	RV_SRAI8 (<i>C macro</i>), 129, 131
NMSIS_VERSION_MINOR (C macro), 58	RV_SRAI8_U (<i>C macro</i>), 129, 132
NMSIS_VERSION_PATCH (C macro), 58	RV_SRAI_U (<i>C macro</i>), 199, 200
NO_RETURN (<i>C macro</i>), 59	RV_SRLI16 (<i>C macro</i>), 119, 122
NUCLEI_NX_REV (C macro), 58	RV_SRLI16_U (<i>C macro</i>), 119, 122
NUCLEI_N_REV (C macro), 58	RV_SRLI8 (<i>C macro</i>), 129, 132
\bigcirc (<i>C macro</i>), 349, 350	RV_SRLI8_U (<i>C macro</i>), 129, 133
OM (<i>C macro</i>), 349, 350	RV_UCLIP16 (<i>C macro</i>), 159
PACKED (<i>C macro</i>), 59	RV_UCLIP32 (<i>C macro</i>), 247, 248
PACKED_STRUCT (C macro), 59	RV_UCLIP8 (<i>C macro</i>), 165
PACKED_UNION (C macro), 59	RV_WEXTI (<i>C macro</i>), 199, 201
RARELY (<i>C macro</i>), 60	RWMB (<i>C macro</i>), 87, 88
RBIT (<i>C macro</i>), 403	SMP_RMB (<i>C macro</i>), 87, 88
RESTRICT (C macro), 60	SMP_RWMB (<i>C macro</i>), 87, 88
RISCV_FLEN (C macro), 376	SMP_WMB (<i>C macro</i>), 87, 88
RISCV_XLEN (C macro), 77	SSAT (<i>C macro</i>), 402
RMB (<i>C macro</i>), 87, 88	STATIC_FORCEINLINE (C macro), 59
RV_BITREVI (<i>C macro</i>), 199	STATIC_INLINE (C macro), 59
RV_CSR_CLEAR (C macro), 62	STRBT (<i>C macro</i>), 402
RV_CSR_READ (C macro), 61	STRHT (<i>C macro</i>), 402

STRT (<i>C macro</i>), 402	CLIC_CTRL_Type ($C++$ class), 85
UNALIGNED_UINT16_READ (C macro), 59	CLIC_INTATTR_SHV_Msk (C macro), 84
UNALIGNED_UINT16_WRITE (C macro), 59	CLIC_INTATTR_SHV_Pos (C macro), 84
UNALIGNED_UINT32_READ (C macro), 59	CLIC_INTATTR_TRIG_Msk (C macro), 84
UNALIGNED_UINT32_WRITE (C macro), 59	CLIC_INTATTR_TRIG_Pos (C macro), 84
USAT (<i>C macro</i>), 403	CLIC_INTIE_IE_Msk (<i>C macro</i>), 83
USED (<i>C macro</i>), 59	CLIC_INTIE_IE_Pos (<i>C macro</i>), 83
USUALLY (<i>C macro</i>), 60	CLIC_INTIP_IP_Msk (<i>C macro</i>), 83
VECTOR_SIZE (C macro), 59	CLIC_INTIP_IP_Pos (C macro), 83
WEAK (<i>C macro</i>), 59	CLICCFG_Type ($C++$ union), 84
WMB (<i>C macro</i>), 87, 88	CLICCFG_Type::_reserved0 (C++ member), 84
disable_FPU(<i>C macro</i>), 376	CLICCFG_Type::_reserved1 (C++ member), 85
enable_FPU (<i>C macro</i>), 376	CLICCFG_Type::_reserved2 (C++ member), 85
get_FCSR (<i>C macro</i>), 376	CLICCFG_Type::b ($C++$ member), 85
get_FFLAGS (<i>C macro</i>), 376	CLICCFG_Type::nlbits($C++$ member), 84
get_FRM (<i>C macro</i>), 376	CLICCFG_Type::w ($C++$ member), 85
has_builtin(<i>C macro</i>), 59	CLICINFO_Type ($C++$ union), 85
set_FCSR (<i>C macro</i>), 376	CLICINFO_Type::_reserved0 (C++ member), 85
set_FFLAGS (C macro), 376	CLICINFO_Type::b(C++ member), 85
set_FRM (<i>C macro</i>), 376	CLICINFO_Type::intctlbits (C++ member), 85
	CLICINFO_Type::numint(C++ member), 85
_init (C++ function), 399	CLICINFO_Type::version(C++ member), 85
_postmain_fini (C++ function), 399	CLICINFO_Type::w(C++ member), 85
$_$ premain_init (C ++ function), 399	core_exception_handler(C++ function), 401
<u>_r</u> (0, <i>j</i>	cos_factors_128 (<i>C</i> ++ <i>member</i>), 644, 645
A	cos_factors_2048 (C++ member), 644, 645
	cos_factors_512 (<i>C</i> ++ <i>member</i>), 644, 645
API, 733	
	cos_factors_8192(<i>C</i> ++ <i>member</i>), 644, 645
С	cos_factors_8192(<i>C++ member</i>), 644, 645 cos_factorsQ31_128(<i>C++ member</i>), 644, 645
Cause_breakpoint (<i>C macro</i>), 77	cos_factors_8192 (<i>C</i> ++ <i>member</i>), 644, 645 cos_factorsQ31_128 (<i>C</i> ++ <i>member</i>), 644, 645 cos_factorsQ31_2048 (<i>C</i> ++ <i>member</i>), 644, 645
CAUSE_BREAKPOINT (<i>C macro</i>), 77 CAUSE_FAULT_FETCH (<i>C macro</i>), 77	cos_factors_8192 (<i>C</i> ++ <i>member</i>), 644, 645 cos_factorsQ31_128 (<i>C</i> ++ <i>member</i>), 644, 645 cos_factorsQ31_2048 (<i>C</i> ++ <i>member</i>), 644, 645 cos_factorsQ31_512 (<i>C</i> ++ <i>member</i>), 644, 645
CAUSE_BREAKPOINT (<i>C macro</i>), 77 CAUSE_FAULT_FETCH (<i>C macro</i>), 77 CAUSE_FAULT_LOAD (<i>C macro</i>), 77	cos_factors_8192 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_128 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_2048 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_512 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_8192 (<i>C</i> ++ member), 644, 645
CAUSE_BREAKPOINT (<i>C macro</i>), 77 CAUSE_FAULT_FETCH (<i>C macro</i>), 77 CAUSE_FAULT_LOAD (<i>C macro</i>), 77 CAUSE_FAULT_STORE (<i>C macro</i>), 77	cos_factors_8192 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_128 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_2048 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_512 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_8192 (<i>C</i> ++ member), 644, 645 CSR_CCM_FPIPE (<i>C macro</i>), 70
CAUSE_BREAKPOINT (<i>C macro</i>), 77 CAUSE_FAULT_FETCH (<i>C macro</i>), 77 CAUSE_FAULT_LOAD (<i>C macro</i>), 77 CAUSE_FAULT_STORE (<i>C macro</i>), 77 CAUSE_HYPERVISOR_ECALL (<i>C macro</i>), 77	cos_factors_8192 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_128 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_2048 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_512 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_8192 (<i>C</i> ++ member), 644, 645 CSR_CCM_FPIPE (<i>C macro</i>), 70 CSR_CCM_MBEGINADDR (<i>C macro</i>), 70
CAUSE_BREAKPOINT (<i>C macro</i>), 77 CAUSE_FAULT_FETCH (<i>C macro</i>), 77 CAUSE_FAULT_LOAD (<i>C macro</i>), 77 CAUSE_FAULT_STORE (<i>C macro</i>), 77 CAUSE_HYPERVISOR_ECALL (<i>C macro</i>), 77 CAUSE_ILLEGAL_INSTRUCTION (<i>C macro</i>), 77	cos_factors_8192 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_128 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_2048 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_512 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_8192 (<i>C</i> ++ member), 644, 645 CSR_CCM_FPIPE (<i>C macro</i>), 70 CSR_CCM_MBEGINADDR (<i>C macro</i>), 70 CSR_CCM_MCOMMAND (<i>C macro</i>), 70
CAUSE_BREAKPOINT (<i>C macro</i>), 77 CAUSE_FAULT_FETCH (<i>C macro</i>), 77 CAUSE_FAULT_LOAD (<i>C macro</i>), 77 CAUSE_FAULT_STORE (<i>C macro</i>), 77 CAUSE_HYPERVISOR_ECALL (<i>C macro</i>), 77 CAUSE_ILLEGAL_INSTRUCTION (<i>C macro</i>), 77 CAUSE_MACHINE_ECALL (<i>C macro</i>), 77	cos_factors_8192 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_128 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_2048 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_512 (<i>C</i> ++ member), 644, 645 cos_factorsQ31_8192 (<i>C</i> ++ member), 644, 645 CSR_CCM_FPIPE (<i>C macro</i>), 70 CSR_CCM_MBEGINADDR (<i>C macro</i>), 70 CSR_CCM_MCOMMAND (<i>C macro</i>), 70 CSR_CCM_MDATA (<i>C macro</i>), 70
CAUSE_BREAKPOINT (<i>C macro</i>), 77 CAUSE_FAULT_FETCH (<i>C macro</i>), 77 CAUSE_FAULT_LOAD (<i>C macro</i>), 77 CAUSE_FAULT_STORE (<i>C macro</i>), 77 CAUSE_HYPERVISOR_ECALL (<i>C macro</i>), 77 CAUSE_ILLEGAL_INSTRUCTION (<i>C macro</i>), 77	cos_factors_8192 (C++ member), 644, 645 cos_factorsQ31_128 (C++ member), 644, 645 cos_factorsQ31_2048 (C++ member), 644, 645 cos_factorsQ31_512 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 CSR_CCM_FPIPE (C macro), 70 CSR_CCM_MBEGINADDR (C macro), 70 CSR_CCM_MCOMMAND (C macro), 70 CSR_CCM_MDATA (C macro), 70 CSR_CCM_SBEGINADDR (C macro), 70
CAUSE_BREAKPOINT (<i>C macro</i>), 77 CAUSE_FAULT_FETCH (<i>C macro</i>), 77 CAUSE_FAULT_LOAD (<i>C macro</i>), 77 CAUSE_FAULT_STORE (<i>C macro</i>), 77 CAUSE_HYPERVISOR_ECALL (<i>C macro</i>), 77 CAUSE_ILLEGAL_INSTRUCTION (<i>C macro</i>), 77 CAUSE_MACHINE_ECALL (<i>C macro</i>), 77	cos_factors_8192 (C++ member), 644, 645 cos_factorsQ31_128 (C++ member), 644, 645 cos_factorsQ31_2048 (C++ member), 644, 645 cos_factorsQ31_512 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 CSR_CCM_FPIPE (C macro), 70 CSR_CCM_MBEGINADDR (C macro), 70 CSR_CCM_MCOMMAND (C macro), 70 CSR_CCM_MDATA (C macro), 70 CSR_CCM_SBEGINADDR (C macro), 70 CSR_CCM_SCOMMAND (C macro), 70
CAUSE_BREAKPOINT (C macro), 77 CAUSE_FAULT_FETCH (C macro), 77 CAUSE_FAULT_LOAD (C macro), 77 CAUSE_FAULT_STORE (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_ILLEGAL_INSTRUCTION (C macro), 77 CAUSE_MACHINE_ECALL (C macro), 77 CAUSE_MISALIGNED_FETCH (C macro), 77	cos_factors_8192 (C++ member), 644, 645 cos_factorsQ31_128 (C++ member), 644, 645 cos_factorsQ31_2048 (C++ member), 644, 645 cos_factorsQ31_512 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 CSR_CCM_FPIPE (C macro), 70 CSR_CCM_MBEGINADDR (C macro), 70 CSR_CCM_MCOMMAND (C macro), 70 CSR_CCM_MDATA (C macro), 70 CSR_CCM_SBEGINADDR (C macro), 70 CSR_CCM_SCOMMAND (C macro), 70 CSR_CCM_SCOMMAND (C macro), 70 CSR_CCM_SDATA (C macro), 70
CAUSE_BREAKPOINT (<i>C macro</i>), 77 CAUSE_FAULT_FETCH (<i>C macro</i>), 77 CAUSE_FAULT_LOAD (<i>C macro</i>), 77 CAUSE_FAULT_STORE (<i>C macro</i>), 77 CAUSE_HYPERVISOR_ECALL (<i>C macro</i>), 77 CAUSE_ILLEGAL_INSTRUCTION (<i>C macro</i>), 77 CAUSE_MACHINE_ECALL (<i>C macro</i>), 77 CAUSE_MISALIGNED_FETCH (<i>C macro</i>), 77 CAUSE_MISALIGNED_LOAD (<i>C macro</i>), 77 CAUSE_MISALIGNED_STORE (<i>C macro</i>), 77 CAUSE_MISALIGNED_STORE (<i>C macro</i>), 77 CAUSE_SUPERVISOR_ECALL (<i>C macro</i>), 77	cos_factors_8192 (C++ member), 644, 645 cos_factorsQ31_128 (C++ member), 644, 645 cos_factorsQ31_2048 (C++ member), 644, 645 cos_factorsQ31_512 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 CSR_CCM_FPIPE (C macro), 70 CSR_CCM_MBEGINADDR (C macro), 70 CSR_CCM_MCOMMAND (C macro), 70 CSR_CCM_MDATA (C macro), 70 CSR_CCM_SBEGINADDR (C macro), 70 CSR_CCM_SCOMMAND (C macro), 70 CSR_CCM_SCOMMAND (C macro), 70 CSR_CCM_SDATA (C macro), 70 CSR_CCM_SUEN (C macro), 70
CAUSE_BREAKPOINT (<i>C macro</i>), 77 CAUSE_FAULT_FETCH (<i>C macro</i>), 77 CAUSE_FAULT_LOAD (<i>C macro</i>), 77 CAUSE_FAULT_STORE (<i>C macro</i>), 77 CAUSE_HYPERVISOR_ECALL (<i>C macro</i>), 77 CAUSE_ILLEGAL_INSTRUCTION (<i>C macro</i>), 77 CAUSE_MACHINE_ECALL (<i>C macro</i>), 77 CAUSE_MISALIGNED_FETCH (<i>C macro</i>), 77 CAUSE_MISALIGNED_LOAD (<i>C macro</i>), 77 CAUSE_MISALIGNED_STORE (<i>C macro</i>), 77	cos_factors_8192 (C++ member), 644, 645 cos_factorsQ31_128 (C++ member), 644, 645 cos_factorsQ31_2048 (C++ member), 644, 645 cos_factorsQ31_512 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 csr_ccm_fpipe (C macro), 70 csr_ccm_mbeginaddr (C macro), 70 csr_ccm_mcommand (C macro), 70 csr_ccm_sbeginaddr (C macro), 70 csr_ccm_scommand (C macro), 70 csr_ccm_scommand (C macro), 70 csr_ccm_sdata (C macro), 70
CAUSE_BREAKPOINT (<i>C macro</i>), 77 CAUSE_FAULT_FETCH (<i>C macro</i>), 77 CAUSE_FAULT_LOAD (<i>C macro</i>), 77 CAUSE_FAULT_STORE (<i>C macro</i>), 77 CAUSE_HYPERVISOR_ECALL (<i>C macro</i>), 77 CAUSE_ILLEGAL_INSTRUCTION (<i>C macro</i>), 77 CAUSE_MACHINE_ECALL (<i>C macro</i>), 77 CAUSE_MISALIGNED_FETCH (<i>C macro</i>), 77 CAUSE_MISALIGNED_LOAD (<i>C macro</i>), 77 CAUSE_MISALIGNED_STORE (<i>C macro</i>), 77 CAUSE_MISALIGNED_STORE (<i>C macro</i>), 77 CAUSE_SUPERVISOR_ECALL (<i>C macro</i>), 77	cos_factors_8192 (C++ member), 644, 645 cos_factorsQ31_128 (C++ member), 644, 645 cos_factorsQ31_2048 (C++ member), 644, 645 cos_factorsQ31_512 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 csr_ccm_fpipe (C macro), 70 csr_ccm_mbeginaddr (C macro), 70 csr_ccm_mcommand (C macro), 70 csr_ccm_mdata (C macro), 70 csr_ccm_sbeginaddr (C macro), 70 csr_ccm_scommand (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_ubeginaddr (C macro), 70 csr_ccm_ubeginaddr (C macro), 70 csr_ccm_ucommand (C macro), 70 csr_ccm_ucommand (C macro), 70
CAUSE_BREAKPOINT (C macro), 77 CAUSE_FAULT_FETCH (C macro), 77 CAUSE_FAULT_LOAD (C macro), 77 CAUSE_FAULT_STORE (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_ILLEGAL_INSTRUCTION (C macro), 77 CAUSE_MACHINE_ECALL (C macro), 77 CAUSE_MISALIGNED_FETCH (C macro), 77 CAUSE_MISALIGNED_LOAD (C macro), 77 CAUSE_MISALIGNED_STORE (C macro), 77 CAUSE_SUPERVISOR_ECALL (C macro), 77 CAUSE_SUPERVISOR_ECALL (C macro), 77 CAUSE_USER_ECALL (C macro), 77	cos_factors_8192 (C++ member), 644, 645 cos_factorsQ31_128 (C++ member), 644, 645 cos_factorsQ31_2048 (C++ member), 644, 645 cos_factorsQ31_512 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 csr_ccm_fpipe (C macro), 70 csr_ccm_mbeginaddr (C macro), 70 csr_ccm_mcommand (C macro), 70 csr_ccm_mdata (C macro), 70 csr_ccm_sbeginaddr (C macro), 70 csr_ccm_scommand (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_suen (C macro), 70 csr_ccm_suen (C macro), 70 csr_ccm_ubeginaddr (C macro), 70 csr_ccm_ucommand (C macro), 70 csr_ccm_ucommand (C macro), 70 csr_ccm_udata (C macro), 70 csr_ccm_udata (C macro), 70 csr_ccm_udata (C macro), 70
CAUSE_BREAKPOINT (C macro), 77 CAUSE_FAULT_FETCH (C macro), 77 CAUSE_FAULT_LOAD (C macro), 77 CAUSE_FAULT_STORE (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_ILLEGAL_INSTRUCTION (C macro), 77 CAUSE_MACHINE_ECALL (C macro), 77 CAUSE_MISALIGNED_FETCH (C macro), 77 CAUSE_MISALIGNED_LOAD (C macro), 77 CAUSE_MISALIGNED_STORE (C macro), 77 CAUSE_SUPERVISOR_ECALL (C macro), 77 CAUSE_SUPERVISOR_ECALL (C macro), 77 CAUSE_USER_ECALL (C macro), 77 CCM_COMMAND_COMMAND (C macro), 75	cos_factors_8192 (C++ member), 644, 645 cos_factorsQ31_128 (C++ member), 644, 645 cos_factorsQ31_2048 (C++ member), 644, 645 cos_factorsQ31_512 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 csr_ccm_fpipe (C macro), 70 csr_ccm_mbeginaddr (C macro), 70 csr_ccm_mcommand (C macro), 70 csr_ccm_mdata (C macro), 70 csr_ccm_sbeginaddr (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_suen (C macro), 70 csr_ccm_ubeginaddr (C macro), 70 csr_ccm_ubeginaddr (C macro), 70 csr_ccm_ucommand (C macro), 70 csr_ccm_ucommand (C macro), 70 csr_ccm_udata (C macro), 70
CAUSE_BREAKPOINT (C macro), 77 CAUSE_FAULT_FETCH (C macro), 77 CAUSE_FAULT_LOAD (C macro), 77 CAUSE_FAULT_STORE (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_MACHINE_ECALL (C macro), 77 CAUSE_MISALIGNED_FETCH (C macro), 77 CAUSE_MISALIGNED_LOAD (C macro), 77 CAUSE_MISALIGNED_STORE (C macro), 77 CAUSE_MISALIGNED_STORE (C macro), 77 CAUSE_SUPERVISOR_ECALL (C macro), 77 CAUSE_USER_ECALL (C macro), 77 CCM_COMMAND_COMMAND (C macro), 75 CCM_DATA_DATA (C macro), 75	cos_factors_8192 (C++ member), 644, 645 cos_factorsQ31_128 (C++ member), 644, 645 cos_factorsQ31_2048 (C++ member), 644, 645 cos_factorsQ31_512 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 csr_ccm_fpipe (C macro), 70 csr_ccm_mbeginaddr (C macro), 70 csr_ccm_mcommand (C macro), 70 csr_ccm_mdata (C macro), 70 csr_ccm_sbeginaddr (C macro), 70 csr_ccm_scommand (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_suen (C macro), 70 csr_ccm_ubeginaddr (C macro), 70 csr_ccm_ubeginaddr (C macro), 70 csr_ccm_ucommand (C macro), 70 csr_ccm_udata (C macro), 63 csr_cycle (C macro), 63
CAUSE_BREAKPOINT (C macro), 77 CAUSE_FAULT_FETCH (C macro), 77 CAUSE_FAULT_LOAD (C macro), 77 CAUSE_FAULT_STORE (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_MACHINE_ECALL (C macro), 77 CAUSE_MISALIGNED_FETCH (C macro), 77 CAUSE_MISALIGNED_LOAD (C macro), 77 CAUSE_MISALIGNED_STORE (C macro), 77 CAUSE_SUPERVISOR_ECALL (C macro), 77 CAUSE_SUPERVISOR_ECALL (C macro), 77 CAUSE_USER_ECALL (C macro), 77 CCM_COMMAND_COMMAND (C macro), 75 CCM_DATA_DATA (C macro), 75 CCM_SUEN_SUEN (C macro), 75	cos_factors_8192 (C++ member), 644, 645 cos_factorsQ31_128 (C++ member), 644, 645 cos_factorsQ31_2048 (C++ member), 644, 645 cos_factorsQ31_512 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 CSR_CCM_FPIPE (C macro), 70 CSR_CCM_MBEGINADDR (C macro), 70 CSR_CCM_MCOMMAND (C macro), 70 CSR_CCM_SBEGINADDR (C macro), 70 CSR_CCM_SBEGINADDR (C macro), 70 CSR_CCM_SCOMMAND (C macro), 70 CSR_CCM_SDATA (C macro), 70 CSR_CCM_SUEN (C macro), 70 CSR_CCM_UBEGINADDR (C macro), 70 CSR_CCM_UCOMMAND (C macro), 70 CSR_CYCLE (C macro), 63 CSR_CYCLEH (C macro), 65
CAUSE_BREAKPOINT (C macro), 77 CAUSE_FAULT_FETCH (C macro), 77 CAUSE_FAULT_LOAD (C macro), 77 CAUSE_FAULT_STORE (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_MACHINE_ECALL (C macro), 77 CAUSE_MISALIGNED_FETCH (C macro), 77 CAUSE_MISALIGNED_LOAD (C macro), 77 CAUSE_MISALIGNED_STORE (C macro), 77 CAUSE_SUPERVISOR_ECALL (C macro), 77 CAUSE_USER_ECALL (C macro), 77 CAUSE_USER_ECALL (C macro), 77 CCM_COMMAND_COMMAND (C macro), 75 CCM_DATA_DATA (C macro), 75 CCM_SUEN_SUEN_MSK (C macro), 381, 382	cos_factors_8192 (C++ member), 644, 645 cos_factorsQ31_128 (C++ member), 644, 645 cos_factorsQ31_2048 (C++ member), 644, 645 cos_factorsQ31_512 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 csr_ccm_fpipe (C macro), 70 csr_ccm_mbeginaddr (C macro), 70 csr_ccm_mcommand (C macro), 70 csr_ccm_mdata (C macro), 70 csr_ccm_sbeginaddr (C macro), 70 csr_ccm_scommand (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_ubeginaddr (C macro), 70 csr_ccm_ucommand (C macro), 63 csr_cycle (C macro), 65 csr_dcc (C macro), 65 csr_dcc (C macro), 65
CAUSE_BREAKPOINT (C macro), 77 CAUSE_FAULT_FETCH (C macro), 77 CAUSE_FAULT_LOAD (C macro), 77 CAUSE_FAULT_STORE (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_ILLEGAL_INSTRUCTION (C macro), 77 CAUSE_MACHINE_ECALL (C macro), 77 CAUSE_MISALIGNED_FETCH (C macro), 77 CAUSE_MISALIGNED_LOAD (C macro), 77 CAUSE_MISALIGNED_STORE (C macro), 77 CAUSE_SUPERVISOR_ECALL (C macro), 77 CAUSE_USER_ECALL (C macro), 77 CAUSE_USER_ECALL (C macro), 77 CCM_COMMAND_COMMAND (C macro), 75 CCM_DATA_DATA (C macro), 75 CCM_SUEN_SUEN (C macro), 381, 382 CCM_SUEN_SUEN_POS (C macro), 381, 382	cos_factors_8192 (C++ member), 644, 645 cos_factorsQ31_128 (C++ member), 644, 645 cos_factorsQ31_2048 (C++ member), 644, 645 cos_factorsQ31_512 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 csr_ccm_fpipe (C macro), 70 csr_ccm_mbeginaddr (C macro), 70 csr_ccm_mcommand (C macro), 70 csr_ccm_mdata (C macro), 70 csr_ccm_sbeginaddr (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_ubeginaddr (C macro), 70 csr_ccm_ucommand (C macro), 70 csr_ccm_ucommand (C macro), 70 csr_ccm_udata (C macro), 70 csr_ccm_ccm_ofata (C macro), 63 csr_cycle (C macro), 65 csr_dpc (C macro), 65 csr_dscratch (C macro), 65
CAUSE_BREAKPOINT (C macro), 77 CAUSE_FAULT_FETCH (C macro), 77 CAUSE_FAULT_LOAD (C macro), 77 CAUSE_FAULT_STORE (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_MACHINE_ECALL (C macro), 77 CAUSE_MISALIGNED_FETCH (C macro), 77 CAUSE_MISALIGNED_LOAD (C macro), 77 CAUSE_MISALIGNED_STORE (C macro), 77 CAUSE_SUPERVISOR_ECALL (C macro), 77 CAUSE_USER_ECALL (C macro), 77 CAUSE_USER_ECALL (C macro), 77 CCM_COMMAND_COMMAND (C macro), 75 CCM_DATA_DATA (C macro), 75 CCM_SUEN_SUEN_MSk (C macro), 381, 382 CCM_SUEN_SUEN_POS (C macro), 381, 382 CLIC_CLICCFG_NLBIT_MSk (C macro), 83	cos_factors_8192 (C++ member), 644, 645 cos_factorsQ31_128 (C++ member), 644, 645 cos_factorsQ31_2048 (C++ member), 644, 645 cos_factorsQ31_512 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 csr_ccm_fpipe (C macro), 70 csr_ccm_mbeginaddr (C macro), 70 csr_ccm_mcommand (C macro), 70 csr_ccm_mddata (C macro), 70 csr_ccm_sbeginaddr (C macro), 70 csr_ccm_scommand (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_suen (C macro), 70 csr_ccm_ubeginaddr (C macro), 70 csr_ccm_ucommand (C macro), 65 csr_dcsr (C macro), 65 csr_dcsr (C macro), 65 csr_dscr (C macro), 63
CAUSE_BREAKPOINT (C macro), 77 CAUSE_FAULT_FETCH (C macro), 77 CAUSE_FAULT_LOAD (C macro), 77 CAUSE_FAULT_STORE (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_MACHINE_ECALL (C macro), 77 CAUSE_MISALIGNED_FETCH (C macro), 77 CAUSE_MISALIGNED_LOAD (C macro), 77 CAUSE_MISALIGNED_STORE (C macro), 77 CAUSE_SUPERVISOR_ECALL (C macro), 77 CAUSE_USER_ECALL (C macro), 77 CAUSE_USER_ECALL (C macro), 77 CCM_COMMAND_COMMAND (C macro), 75 CCM_DATA_DATA (C macro), 75 CCM_SUEN_SUEN_MSk (C macro), 381, 382 CCM_SUEN_SUEN_POS (C macro), 381, 382 CLIC_CLICCFG_NLBIT_MSk (C macro), 83 CLIC_CLICCFG_NLBIT_POS (C macro), 83	cos_factors_8192 (C++ member), 644, 645 cos_factorsQ31_128 (C++ member), 644, 645 cos_factorsQ31_2048 (C++ member), 644, 645 cos_factorsQ31_512 (C++ member), 644, 645 cos_factorsQ31_8192 (C macro), 70 csr_ccm_MBEGINADDR (C macro), 70 csr_ccm_MBEGINADDR (C macro), 70 csr_ccm_sbegInaddr (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_ubegInaddr (C macro), 70 csr_ccm_udata (C macro), 70 csr_ccm_udata (C macro), 70 csr_ccm_udata (C macro), 63 csr_cycle (C macro), 65 csr_dcr (C macro), 65 csr_dcr (C macro), 65 csr_dcr (C macro), 63 csr_fcr (C macro), 63
CAUSE_BREAKPOINT (C macro), 77 CAUSE_FAULT_FETCH (C macro), 77 CAUSE_FAULT_LOAD (C macro), 77 CAUSE_FAULT_STORE (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_MACHINE_ECALL (C macro), 77 CAUSE_MISALIGNED_FETCH (C macro), 77 CAUSE_MISALIGNED_LOAD (C macro), 77 CAUSE_MISALIGNED_STORE (C macro), 77 CAUSE_MISALIGNED_STORE (C macro), 77 CAUSE_SUPERVISOR_ECALL (C macro), 77 CAUSE_USER_ECALL (C macro), 77 CCM_COMMAND_COMMAND (C macro), 75 CCM_DATA_DATA (C macro), 75 CCM_SUEN_SUEN (C macro), 381, 382 CCM_SUEN_SUEN_POS (C macro), 381, 382 CLIC_CLICCFG_NLBIT_MSK (C macro), 83 CLIC_CLICCFG_NLBIT_MSK (C macro), 83 CLIC_CLICINFO_CTLBIT_MSK (C macro), 83	cos_factors_8192 (C++ member), 644, 645 cos_factorsQ31_128 (C++ member), 644, 645 cos_factorsQ31_2048 (C++ member), 644, 645 cos_factorsQ31_512 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 csr_ccm_fpipe (C macro), 70 csr_ccm_mbeginaddr (C macro), 70 csr_ccm_mcommand (C macro), 70 csr_ccm_seginaddr (C macro), 70 csr_ccm_seginaddr (C macro), 70 csr_ccm_scommand (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_suen (C macro), 70 csr_ccm_ubeginaddr (C macro), 70 csr_ccm_ucommand (C macro), 70 csr_ccm_udata (C macro), 70 csr_ccm_udata (C macro), 63 csr_cycle (C macro), 65 csr_dcr (C macro), 65 csr_dcr (C macro), 65 csr_fcsr (C macro), 63 csr_fcsr (C macro), 63 csr_fflags (C macro), 63 csr_fflags (C macro), 63 csr_fflags (C macro), 63 csr_frm (C macro), 63 csr_frm (C macro), 63
CAUSE_BREAKPOINT (C macro), 77 CAUSE_FAULT_FETCH (C macro), 77 CAUSE_FAULT_LOAD (C macro), 77 CAUSE_FAULT_STORE (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_MACHINE_ECALL (C macro), 77 CAUSE_MISALIGNED_FETCH (C macro), 77 CAUSE_MISALIGNED_STORE (C macro), 77 CAUSE_MISALIGNED_STORE (C macro), 77 CAUSE_SUPERVISOR_ECALL (C macro), 77 CAUSE_USER_ECALL (C macro), 77 CCM_COMMAND_COMMAND (C macro), 75 CCM_SUEN_SUEN (C macro), 75 CCM_SUEN_SUEN (C macro), 381, 382 CCM_SUEN_SUEN_POS (C macro), 381, 382 CLIC_CLICCFG_NLBIT_MSK (C macro), 83 CLIC_CLICINFO_CTLBIT_MSK (C macro), 83 CLIC_CLICINFO_CTLBIT_POS (C macro), 83 CLIC_CLICINFO_CTLBIT_POS (C macro), 83 CLIC_CLICINFO_CTLBIT_POS (C macro), 83	cos_factors_8192 (C++ member), 644, 645 cos_factorsQ31_128 (C++ member), 644, 645 cos_factorsQ31_2048 (C++ member), 644, 645 cos_factorsQ31_512 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 csr_ccm_fpipe (C macro), 70 csr_ccm_mbeginaddr (C macro), 70 csr_ccm_mcommand (C macro), 70 csr_ccm_sbeginaddr (C macro), 70 csr_ccm_sbeginaddr (C macro), 70 csr_ccm_scommand (C macro), 70 csr_ccm_suen (C macro), 70 csr_ccm_ubeginaddr (C macro), 70 csr_ccm_ucommand (C macro), 70 csr_ccm_ucommand (C macro), 70 csr_ccm_udata (C macro), 70 csr_ccm_udata (C macro), 63 csr_cycle (C macro), 65 csr_dcr (C macro), 65 csr_dcr (C macro), 65 csr_fcsr (C macro), 63 csr_fflags (C macro), 63 csr_fflags (C macro), 63 csr_frm (C macro), 63
CAUSE_BREAKPOINT (C macro), 77 CAUSE_FAULT_FETCH (C macro), 77 CAUSE_FAULT_LOAD (C macro), 77 CAUSE_FAULT_STORE (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_HYPERVISOR_ECALL (C macro), 77 CAUSE_MACHINE_ECALL (C macro), 77 CAUSE_MISALIGNED_FETCH (C macro), 77 CAUSE_MISALIGNED_LOAD (C macro), 77 CAUSE_MISALIGNED_STORE (C macro), 77 CAUSE_SUPERVISOR_ECALL (C macro), 77 CAUSE_SUPERVISOR_ECALL (C macro), 77 CAUSE_USER_ECALL (C macro), 75 CCM_COMMAND_COMMAND (C macro), 75 CCM_SUEN_SUEN (C macro), 381, 382 CCM_SUEN_SUEN_MSk (C macro), 381, 382 CLIC_CLICCFG_NLBIT_MSk (C macro), 83 CLIC_CLICCFG_NLBIT_POS (C macro), 83 CLIC_CLICINFO_CTLBIT_POS (C macro), 83 CLIC_CLICINFO_CTLBIT_POS (C macro), 83 CLIC_CLICINFO_NUM_MSk (C macro), 83 CLIC_CLICINFO_NUM_MSk (C macro), 83	cos_factors_8192 (C++ member), 644, 645 cos_factorsQ31_128 (C++ member), 644, 645 cos_factorsQ31_2048 (C++ member), 644, 645 cos_factorsQ31_512 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 cos_factorsQ31_8192 (C++ member), 644, 645 csr_ccm_fpipe (C macro), 70 csr_ccm_mbeginaddr (C macro), 70 csr_ccm_mcommand (C macro), 70 csr_ccm_seginaddr (C macro), 70 csr_ccm_seginaddr (C macro), 70 csr_ccm_scommand (C macro), 70 csr_ccm_sdata (C macro), 70 csr_ccm_suen (C macro), 70 csr_ccm_ubeginaddr (C macro), 70 csr_ccm_ucommand (C macro), 70 csr_ccm_udata (C macro), 70 csr_ccm_udata (C macro), 63 csr_cycle (C macro), 65 csr_dcr (C macro), 65 csr_dcr (C macro), 65 csr_fcsr (C macro), 63 csr_fcsr (C macro), 63 csr_fflags (C macro), 63 csr_fflags (C macro), 63 csr_fflags (C macro), 63 csr_frm (C macro), 63 csr_frm (C macro), 63

CSR_HPMCOUNTERITH (C macro), 6/	CSR_HPMCOUNTER9H (C macro), 6/
CSR_HPMCOUNTER12 (C macro), 63	CSR_INSTRET (C macro), 63
CSR_HPMCOUNTER12H (C macro), 67	CSR_INSTRETH (C macro), 67
CSR_HPMCOUNTER13 (C macro), 63	CSR_JALMNXTI (C macro), 69
CSR_HPMCOUNTER13H (C macro), 67	CSR_MARCHID (C macro), 67
CSR_HPMCOUNTER14 (C macro), 63	CSR_MBADADDR (C macro), 64
CSR_HPMCOUNTER14H (C macro), 67	CSR_MCACHE_CTL (C macro), 69
CSR_HPMCOUNTER15 (C macro), 63	CSR_MCACHE_CTL_DE (C macro), 71
CSR_HPMCOUNTER15H (C macro), 67	CSR_MCACHE_CTL_IE (C macro), 71
CSR_HPMCOUNTER16 (C macro), 63	CSR_MCAUSE (C macro), 64
CSR_HPMCOUNTER16H (C macro), 67	CSR_MCAUSE_Type ($C++union$), 80
CSR_HPMCOUNTER17 (C macro), 63	CSR_MCAUSE_Type::_reserved0 (C++ member),
CSR_HPMCOUNTER17H (C macro), 67	80
CSR_HPMCOUNTER18 (C macro), 63	CSR_MCAUSE_Type::_reserved1 (C++ member),
CSR_HPMCOUNTER18H (C macro), 67	81
CSR_HPMCOUNTER19 (C macro), 63	CSR_MCAUSE_Type::b ($C++$ member), 81
CSR_HPMCOUNTER19H (C macro), 67	CSR_MCAUSE_Type::d ($C++$ member), 81
CSR_HPMCOUNTER20 (C macro), 63	CSR_MCAUSE_Type::exccode $(C++ member)$, 80
CSR_HPMCOUNTER20H (C macro), 67	CSR_MCAUSE_Type::interrupt (C++ member), 80
	81
CSR_HPMCOUNTER21 (C macro), 63	
CSR_HPMCOUNTER21H (<i>C macro</i>), 67	CSR_MCAUSE_Type::minhv(C++ member), 81
CSR_HPMCOUNTER22 (C macro), 63	CSR_MCAUSE_Type::mpie ($C++$ member), 81
CSR_HPMCOUNTER22H (C macro), 67	CSR_MCAUSE_Type::mpil(C++ member), 80
CSR_HPMCOUNTER23 (C macro), 63	CSR_MCAUSE_Type::mpp($C++$ member), 81
CSR_HPMCOUNTER23H (C macro), 67	CSR_MCFG_INFO (C macro), 70
CSR_HPMCOUNTER24 (C macro), 63	CSR_MCLICBASE (C macro), 69
CSR_HPMCOUNTER24H (C macro), 68	CSR_MCOUNTEREN (C macro), 64
CSR_HPMCOUNTER25 (C macro), 63	CSR_MCOUNTINHIBIT (C macro), 69
CSR_HPMCOUNTER25H (C macro), 68	CSR_MCOUNTINHIBIT_Type ($C++$ union), 81
CSR_HPMCOUNTER26 (C macro), 63	CSR_MCOUNTINHIBIT_Type::_reserved0 ($C++$
CSR_HPMCOUNTER26H (C macro), 68	member), 81
CSR_HPMCOUNTER27 (C macro), 64	CSR_MCOUNTINHIBIT_Type::_reserved1($C++$
CSR_HPMCOUNTER27H (C macro), 68	member), 81
CSR_HPMCOUNTER28 (C macro), 64	CSR_MCOUNTINHIBIT_Type::b($C++$ member), 81
CSR_HPMCOUNTER28H (C macro), 68	CSR_MCOUNTINHIBIT_Type::cy ($C++$ member),
CSR_HPMCOUNTER29 (C macro), 64	81
CSR_HPMCOUNTER29H (C macro), 68	CSR_MCOUNTINHIBIT_Type::d($C++$ member), 81
CSR_HPMCOUNTER3 (C macro), 63	CSR_MCOUNTINHIBIT_Type::ir ($C++$ member),
CSR_HPMCOUNTER30 (C macro), 64	81
CSR_HPMCOUNTER30H (C macro), 68	CSR_MCYCLE (C macro), 65
CSR_HPMCOUNTER31 (C macro), 64	CSR_MCYCLEH (C macro), 68
CSR_HPMCOUNTER31H (C macro), 68	CSR_MDCAUSE (C macro), 69
CSR_HPMCOUNTER3H (C macro), 67	CSR_MDCFG_INFO (C macro), 70
CSR_HPMCOUNTER4 (C macro), 63	CSR_MDLM_CTL (C macro), 69
CSR_HPMCOUNTER4H (C macro), 67	CSR_MECC_CODE (C macro), 69
CSR_HPMCOUNTER5 (C macro), 63	CSR_MECC_LOCK (C macro), 69
CSR_HPMCOUNTER5H (C macro), 67	CSR_MEDELEG (C macro), 64
CSR_HPMCOUNTER6 (C macro), 63	CSR_MEPC (<i>C macro</i>), 64
CSR_HPMCOUNTER6H (C macro), 67	CSR_MFIOCFG_INFO (C macro), 69
CSR_HPMCOUNTER7 (C macro), 63	CSR_MHARTID (<i>C macro</i>), 67
CSR_HPMCOUNTER7H (C macro), 67	CSR_MHPMCOUNTER10 (C macro), 65
CSR_HPMCOUNTER8 (C macro), 63	CSR_MHPMCOUNTER10H (C macro), 68
CSR_HPMCOUNTER8H (C macro), 67	CSR_MHPMCOUNTER11 (C macro), 65
CSR_HPMCOUNTER9 (C macro), 63	CSR_MHPMCOUNTER11H (C macro), 68
Con_mir riccontinuts (c macro), 03	Con_mmr moodwinten (C macro), 00

COD MUDICOUNTED 10 (C.) (E	COD MUDICIPALITACIO (C
CSR_MHPMCOUNTER12 (C macro), 65	CSR_MHPMEVENT10 (C macro), 66
CSR_MHPMCOUNTER12H (C macro), 68	CSR_MHPMEVENT11 (C macro), 66
CSR_MHPMCOUNTER13 (C macro), 65	CSR_MHPMEVENT12 (C macro), 66
CSR_MHPMCOUNTER13H (C macro), 68	CSR_MHPMEVENT13 (C macro), 66
CSR_MHPMCOUNTER14 (C macro), 65	CSR_MHPMEVENT14 (C macro), 66
CSR_MHPMCOUNTER14H (C macro), 68	CSR_MHPMEVENT15 (C macro), 66
CSR_MHPMCOUNTER15 (C macro), 65	CSR_MHPMEVENT16 (C macro), 66
CSR_MHPMCOUNTER15H (C macro), 68	CSR_MHPMEVENT17 (C macro), 66
CSR_MHPMCOUNTER16 (C macro), 65	CSR_MHPMEVENT18 (C macro), 66
CSR_MHPMCOUNTER16H (C macro), 68	CSR_MHPMEVENT19 (C macro), 66
CSR_MHPMCOUNTER17 (C macro), 65	CSR_MHPMEVENT20 (C macro), 66
CSR_MHPMCOUNTER17H (C macro), 68	CSR_MHPMEVENT21 (C macro), 66
CSR_MHPMCOUNTER18 (C macro), 65	CSR_MHPMEVENT22 (C macro), 66
CSR_MHPMCOUNTER18H (C macro), 68	CSR_MHPMEVENT23 (C macro), 66
CSR_MHPMCOUNTER19 (C macro), 66	CSR_MHPMEVENT24 (C macro), 67
CSR_MHPMCOUNTER19H (C macro), 68	CSR_MHPMEVENT25 (C macro), 67
CSR_MHPMCOUNTER20 (C macro), 66	CSR_MHPMEVENT26 (C macro), 67
CSR_MHPMCOUNTER20H (C macro), 68	CSR_MHPMEVENT27 (C macro), 67
CSR_MHPMCOUNTER21 (C macro), 66	CSR_MHPMEVENT28 (C macro), 67
CSR_MHPMCOUNTER21H (C macro), 68	CSR_MHPMEVENT29 (C macro), 67
CSR_MHPMCOUNTER22 (C macro), 66	CSR_MHPMEVENT3 (C macro), 66
CSR_MHPMCOUNTER22H (C macro), 68	CSR_MHPMEVENT30 (C macro), 67
CSR_MHPMCOUNTER23 (C macro), 66	CSR_MHPMEVENT31 (C macro), 67
CSR_MHPMCOUNTER23H (C macro), 68	CSR_MHPMEVENT4 (C macro), 66
CSR_MHPMCOUNTER24 (C macro), 66	CSR_MHPMEVENT5 (C macro), 66
CSR_MHPMCOUNTER24H (<i>C macro</i>), 68	CSR_MHPMEVENT6 (C macro), 66
CSR_MHPMCOUNTER25 (C macro), 66	CSR_MHPMEVENT7 (C macro), 66
CSR_MHPMCOUNTER25H (C macro), 68	CSR_MHPMEVENT8 (C macro), 66
CSR_MHPMCOUNTER26 (C macro), 66	CSR_MHPMEVENT9 (C macro), 66
CSR_MHPMCOUNTER26H (C macro), 68	CSR_MICFG_INFO (C macro), 70
CSR_MHPMCOUNTER27 (C macro), 66	CSR_MIDELEG (<i>C macro</i>), 64
CSR_MHPMCOUNTER27H (C macro), 68	CSR_MIE (<i>C macro</i>), 64
CSR_MHPMCOUNTER28 (C macro), 66	CSR_MILM_CTL (C macro), 69
CSR_MHPMCOUNTER28H (C macro), 68	CSR_MIMPID (C macro), 67
CSR_MHPMCOUNTER29 (C macro), 66	CSR_MINSTRET (C macro), 65
CSR_MHPMCOUNTER29H (C macro), 69	CSR_MINSTRETH (C macro), 68
CSR_MHPMCOUNTER3 (C macro), 65	CSR_MINTSTATUS (C macro), 69
CSR_MHPMCOUNTER30 (C macro), 66	CSR_MIP (C macro), 64
CSR_MHPMCOUNTER30 (C macro), 69	CSR_MISA (C macro), 64
CSR_MHPMCOUNTER31 (C macro), 66	CSR_MISA_Type ($C++$ union), 78
CSR_MHPMCOUNTER31 (C macro), 69	
CSR_MHPMCOUNTERSTH (C macro), 68	CSR_MISA_Type::_reserved1 (C++ member), 78
	CSR_MISA_Type::_reserved2 (C++ member), 78
CSR_MHPMCOUNTER4 (C macro), 65	CSR_MISA_Type::_reserved4 (C++ member), 79
CSR_MHPMCOUNTER4H (<i>C macro</i>), 68 CSR_MHPMCOUNTER5 (<i>C macro</i>), 65	CSR_MISA_Type::_reserved5 (C++ member), 79 CSR_MISA_Type::_resreved3 (C++ member), 79
CSR_MHPMCOUNTER5H (C macro), 68	CSR_MISA_Type::a $(C++ member)$, 78
CSR_MHPMCOUNTER6 (C macro), 65	CSR_MISA_Type::b($C++$ member), 78, 79
CSR_MHPMCOUNTER6H (C macro), 68	CSR_MISA_Type::c($C++$ member), 78
CSR_MHPMCOUNTER7 (C macro), 65	CSR_MISA_Type::d($C++$ member), 78
CSR_MHPMCOUNTER7H (C macro), 68	$CSR_MISA_Type::e(C++ member), 78$
CSR_MHPMCOUNTER8 (C macro), 65	CSR_MISA_Type::f($C++$ member), 78
CSR_MHPMCOUNTER8H (C macro), 68	CSR_MISA_Type::g($C++$ member), 78
CSR_MHPMCOUNTER9 (C macro), 65	CSR_MISA_Type::h($C++$ member), 78
CSR_MHPMCOUNTER9H (C macro), 68	$CSR_MISA_Type::i(C++ member), 78$

```
CSR MISA Type::i(C++ member), 78
                                             CSR_MSAVESTATUS_Type::mpp2 (C++ member),
CSR_MISA_Type::1 (C++ member), 78
                                                     83
CSR MISA Type::m (C++ member), 78
                                             CSR MSAVESTATUS Type::ptyp1 (C++ member),
CSR_MISA_Type::mxl(C++ member), 79
CSR_MISA_Type::n(C++ member), 78
                                             CSR_MSAVESTATUS_Type::ptyp2 (C++ member),
CSR MISA Type::p(C++ member), 78
CSR MISA Type::q(C++ member), 79
                                             CSR MSAVESTATUS Type::w (C++ member), 83
CSR_MISA_Type::s (C++ member), 79
                                             CSR MSCOUNTEREN (C macro), 66
CSR_MISA_Type::t(C++ member), 79
                                             CSR MSCRATCH (C macro), 64
CSR_MISA_Type::u(C++ member), 79
                                             CSR_MSCRATCHCSW (C macro), 69
CSR_MISA_Type::v(C++ member), 79
                                             CSR_MSCRATCHCSWL (C macro), 69
CSR_MISA_Type::x (C++ member), 79
                                             CSR_MSTATUS (C macro), 64
CSR_MMISC_CTL (C macro), 69
                                             CSR_MSTATUS_Type (C++union), 79
CSR_MMISCCTRL_Type (C++ union), 82
                                             CSR_MSTATUS_Type::_reserved0 (C++ mem-
\texttt{CSR\_MMISCCTRL\_Type::\_reserved0} \ (\textit{C++ mem---}
                                                     ber), 79
                                             CSR_MSTATUS_Type::_reserved1 (C++ mem-
CSR_MMISCCTRL_Type::_reserved1(C++ mem-
                                                     ber), 79
                                             CSR_MSTATUS_Type::_reserved2 (C++ mem-
CSR_MMISCCTRL_Type::_reserved2(C++ mem-
                                                     ber), 79
       ber), 82
                                             CSR MSTATUS Type:: reserved3 (C++ mem-
{\tt CSR\_MMISCCTRL\_Type::\_reserved3} \ (\textit{C++ mem--}
                                                     ber), 79
                                             CSR_MSTATUS_Type::_reserved4 (C++
CSR_MMISCCTRL_Type::b(C++ member), 82
                                                     ber), 80
CSR MMISCCTRL Type::bpu (C++ member), 82
                                             CSR_MSTATUS_Type::_reserved6 (C++ mem-
CSR_MMISCCTRL_Type::d(C++ member), 82
                                                     ber), 80
CSR MMISCCTRL Type::misalign (C++ mem-
                                             CSR_MSTATUS_Type::b (C++ member), 80
       ber), 82
                                             CSR_MSTATUS_Type::d(C++ member), 80
CSR_MMISCCTRL_Type::nmi_cause (C++ mem-
                                             CSR_MSTATUS_Type::fs(C++ member), 80
       ber), 82
                                             CSR_MSTATUS_Type::mie (C++ member), 79
CSR_MNVEC (C macro), 69
                                             CSR_MSTATUS_Type::mpie (C++ member), 79
CSR_MNXTI (C macro), 69
                                             CSR_MSTATUS_Type::mpp (C++ member), 80
CSR_MPPICFG_INFO (C macro), 69
                                             CSR_MSTATUS_Type::mprv(C++ member), 80
CSR_MSAVECAUSE1 (C macro), 69
                                             CSR_MSTATUS_Type::sd (C++ member), 80
CSR_MSAVECAUSE2 (C macro), 69
                                             CSR_MSTATUS_Type::sie(C++ member), 79
CSR MSAVEDCAUSE1 (C macro), 69
                                             CSR_MSTATUS_Type::spie (C++ member), 79
CSR MSAVEDCAUSE2 (C macro), 69
                                             CSR_MSTATUS_Type::sum (C++ member), 80
CSR MSAVEEPC1 (C macro), 69
                                             CSR MSTATUS Type::xs (C++ member), 80
CSR_MSAVEEPC2 (C macro), 69
                                             CSR_MSUBM (C macro), 69
CSR MSAVESTATUS (C macro), 69
                                             CSR_MSUBM_Type (C++ union), 81
CSR_MSAVESTATUS_Type (C++ union), 82
                                             CSR_MSUBM_Type::_reserved0 (C++ member),
CSR MSAVESTATUS Type:: reserved0
                                       (C++
       member), 82
                                             CSR_MSUBM_Type::_reserved1 (C++ member),
CSR_MSAVESTATUS_Type::_reserved1
                                       (C++
       member), 83
                                             CSR_MSUBM_Type::b(C++ member), 82
                                             CSR_MSUBM_Type::d(C++ member), 82
CSR_MSAVESTATUS_Type::_reserved2
                                       (C++
       member), 83
                                             CSR_MSUBM_Type::ptyp (C++ member), 81
CSR_MSAVESTATUS_Type::b (C++ member), 83
                                             CSR_MSUBM_Type::typ (C++ member), 81
CSR_MSAVESTATUS_Type::mpie1 (C++ member),
                                             CSR_MTLB_CTL (C macro), 69
                                             CSR_MTLBCFG_INFO (C macro), 70
CSR_MSAVESTATUS_Type::mpie2 (C++ member),
                                             CSR_MTVAL (C macro), 64
                                             CSR_MTVEC (C macro), 64
                                             CSR_MTVEC_Type (C++ union), 80
CSR_MSAVESTATUS_Type::mpp1 (C++ member),
       82
                                             CSR_MTVEC_Type::addr (C++ member), 80
                                             CSR MTVEC Type::b (C++ member), 80
```

CSR_MTVEC_Type::d($C++$ member), 80	DCAUSE_FAULT_LOAD_NICE (C macro), 77
CSR_MTVEC_Type::mode ($C++$ member), 80	DCAUSE_FAULT_LOAD_PMP (C macro), 77
CSR_MTVT (C macro), 69	DCAUSE_FAULT_STORE_INST (C macro), 77
CSR_MTVT2 (<i>C macro</i>), 69	DCAUSE_FAULT_STORE_PMP (C macro), 77
CSR_MUCOUNTEREN (C macro), 66	DCSR_CAUSE (C macro), 71
CSR_MVENDORID (C macro), 67	DCSR_CAUSE_DEBUGINT (C macro), 72
CSR_PMPADDR0 (C macro), 64	DCSR_CAUSE_HALT (C macro), 72
CSR_PMPADDR1 (C macro), 64	DCSR_CAUSE_HWBP (C macro), 72
CSR_PMPADDR10 (C macro), 65	DCSR_CAUSE_NONE (C macro), 71
CSR_PMPADDR11 (C macro), 65	DCSR_CAUSE_STEP (C macro), 72
CSR_PMPADDR12 (C macro), 65	DCSR_CAUSE_SWBP (C macro), 72
CSR_PMPADDR13 (C macro), 65	DCSR_DEBUGINT (C macro), 71
CSR_PMPADDR14 (C macro), 65	DCSR_EBREAKH (C macro), 71
CSR_PMPADDR15 (C macro), 65	DCSR_EBREAKM (C macro), 71
CSR_PMPADDR2 (C macro), 64	DCSR_EBREAKS (C macro), 71
CSR_PMPADDR3 (<i>C macro</i>), 64	DCSR_EBREAKU (C macro), 71
CSR_PMPADDR4 (<i>C macro</i>), 64	DCSR_FULLRESET (C macro), 71
CSR_PMPADDR5 (C macro), 65	DCSR_HALT (C macro), 71
CSR_PMPADDR6 (C macro), 65	DCSR_NDRESET (C macro), 71
CSR_PMPADDR7 (C macro), 65	DCSR_PRV (C macro), 71
CSR_PMPADDR8 (C macro), 65	DCSR_STEP (C macro), 71
CSR_PMPADDR9 (C macro), 65	DCSR_STOPCYCLE (C macro), 71
CSR_PMPCFG0 (C macro), 64	DCSR_STOPTIME (C macro), 71
CSR_PMPCFG1 (C macro), 64	DCSR_XDEBUGVER (<i>C macro</i>), 71
CSR_PMPCFG2 (C macro), 64	depthwise_conv_s8_generic (C++ function),
CSR_PMPCFG3 (C macro), 64	679, 695
CSR_PUSHMCAUSE (C macro), 69	depthwise_conv_s8_mult_4 (C ++ function), 679,
CSR_PUSHMEPC (C macro), 69	695
CSR_PUSHMSUBM (C macro), 69	
CSR_SBADADDR (C macro), 64	depthwise_conv_u8_generic (C++ function), 680,697
CSR_SCAUSE (C macro), 64	•
	depthwise_conv_u8_mult_4 (C++function), 679, 697
CSR_SEPC (C macro), 64	DSP, 733
CSR_SIE (C macro), 64	DSP, 733
CSR_SIP (C macro), 64	E
CSR_SLEEPVALUE (<i>C macro</i>), 69 CSR_SPTBR (<i>C macro</i>), 64	
	ECLIC (C macro), 84
CSR_SSCRATCH (C macro), 64	ECLIC_BASE (C macro), 84
CSR_SSTATUS (C macro), 64	ECLIC_ClearPendingIRQ (C macro), 363, 364
CSR_STVEC (C macro), 64	ECLIC_DisableIRQ (C macro), 363, 364
CSR_TDATA1 (C macro), 65	ECLIC_EnableIRQ (C macro), 363, 364
CSR_TDATA2 (C macro), 65	ECLIC_GetCfgNlbits (C macro), 363, 364
CSR_TDATA3 (C macro), 65	ECLIC_GetCtrlIRQ(C macro), 364
CSR_TIME (C macro), 63	ECLIC_GetEnableIRQ(C macro), 363, 364
CSR_TIMEH (C macro), 67	ECLIC_GetInfoCtlbits (C macro), 363, 364
CSR_TSELECT (C macro), 65	ECLIC_GetInfoNum(C macro), 363, 364
CSR_TXEVT (C macro), 70	ECLIC_GetInfoVer(C macro), 363, 364
CSR_UCODE (C macro), 69	ECLIC_GetLevelIRQ (C macro), 364, 365
CSR_USTATUS (C macro), 63	ECLIC_GetMth (<i>C macro</i>), 363, 364
CSR_WFE (C macro), 70	ECLIC_GetPendingIRQ (C macro), 363, 364
D	ECLIC_GetPriorityIRQ (C macro), 364, 365
	ECLIC_GetShvIRQ(C macro), 364
DCAUSE_FAULT_FETCH_INST (C macro), 77	ECLIC_GetTrigIRQ(C macro), 364
DCAUSE_FAULT_FETCH_PMP (C macro), 77	ECLIC_GetVector (C macro), 364, 365
DCAUSE_FAULT_LOAD_INST (C macro), 77	ECLIC_Init ($C++$ function), 401

ECLIC_MAX_NLBITS (C macro), 84	$MCACHE_CTL_DC_RWTECC$ (C macro), 74
ECLIC_MODE_MTVEC_Msk (C macro), 84	MCACHE_CTL_IC_ECC_EN (C macro), 74
ECLIC_NON_VECTOR_INTERRUPT (C macro), 84	MCACHE_CTL_IC_ECC_EXCP_EN (C macro), 74
ECLIC_Register_IRQ ($C++$ function), 401	MCACHE_CTL_IC_EN (C macro), 74
ECLIC_SetCfgNlbits (C macro), 363, 364	MCACHE_CTL_IC_RWDECC (C macro), 74
ECLIC_SetCtrlIRQ (C macro), 364	MCACHE_CTL_IC_RWTECC (C macro), 74
ECLIC_SetLevelIRQ (C macro), 364, 365	MCACHE_CTL_IC_SCPD_MOD (C macro), 74
ECLIC_SetMth (<i>C macro</i>), 363, 364	MCFG_INFO_CLIC (C macro), 74
ECLIC_SetPendingIRQ(C macro), 363, 364	MCFG_INFO_DCACHE (C macro), 74
ECLIC_SetPriorityIRQ (<i>C macro</i>), 364, 365	MCFG_INFO_DLM (C macro), 74
ECLIC_SetShvIRQ(C macro), 364	MCFG_INFO_ECC (C macro), 74
ECLIC_SetTrigIRQ(C macro), 363, 364	$MCFG_INFO_FIO(C macro), 74$
ECLIC_SetVector (C macro), 364, 365	MCFG_INFO_ICACHE (C macro), 74
ECLIC_VECTOR_INTERRUPT (C macro), 84	$MCFG_INFO_ILM(C macro), 74$
EXC_HANDLER ($C++ type$), 400	MCFG_INFO_NICE (C macro), 74
Exception_DumpFrame ($C++function$), 400	MCFG_INFO_PLIC (C macro), 74
Exception_Get_EXC ($C++$ function), 401	MCFG_INFO_PPI(<i>C macro</i>), 74
Exception_Init $(C++function)$, 400	MCFG_INFO_TEE (C macro), 74
Exception_Register_EXC ($C++$ function), 400	MCONTROL_ACTION (C macro), 72
Г	MCONTROL_ACTION_DEBUG_EXCEPTION (C
F	macro), 72
FFLAGS_AE_DZ (C macro), 76	MCONTROL_ACTION_DEBUG_MODE (C macro), 72
FFLAGS_AE_NV (C macro), 76	MCONTROL_ACTION_TRACE_EMIT(C macro), 72
FFLAGS_AE_NX (C macro), 76	MCONTROL_ACTION_TRACE_START (C macro), 72
FFLAGS_AE_OF (C macro), 76	MCONTROL_ACTION_TRACE_STOP (C macro), 72
FFLAGS_AE_UF (C macro), 76	MCONTROL_CHAIN (C macro), 72
FREG (C macro), 76	MCONTROL_DMODE (C macro), 72
FRM_RNDMODE_DYN (C macro), 76	MCONTROL_EXECUTE (C macro), 72
FRM_RNDMODE_RDN (C macro), 76	$MCONTROL_H(C macro), 72$
FRM_RNDMODE_RMM (C macro), 76	MCONTROL_LOAD (C macro), 72
FRM_RNDMODE_RNE (C macro), 76	$MCONTROL_M(C macro), 72$
FRM_RNDMODE_RTZ (C macro), 76	MCONTROL_MASKMAX (C macro), 72
FRM_RNDMODE_RUP (C macro), 76	MCONTROL_MATCH (C macro), 72
1	MCONTROL_MATCH_EQUAL (C macro), 72
I	MCONTROL_MATCH_GE (C macro), 72
IRQ_COP (<i>C macro</i>), 75	MCONTROL_MATCH_LT (C macro), 72
IRQ_H_EXT (<i>C macro</i>), 75	MCONTROL_MATCH_MASK_HIGH (C macro), 72
IRQ_H_SOFT (C macro), 75	MCONTROL_MATCH_MASK_LOW (C macro), 72
IRQ_H_TIMER (C macro), 75	MCONTROL_MATCH_NAPOT (C macro), 72
IRQ_HOST (C macro), 75	MCONTROL_S (C macro), 72
IRQ_M_EXT (<i>C macro</i>), 75	MCONTROL_SELECT (C macro), 72
IRQ_M_SOFT (C macro), 75	MCONTROL_STORE (<i>C macro</i>), 72
IRQ_M_TIMER (C macro), 75	MCONTROL_TIMING (C macro), 72
IRQ_S_EXT (C macro), 75	MCONTROL_TYPE (<i>C macro</i>), 72 MCONTROL_TYPE_MATCH (<i>C macro</i>), 72
IRQ_S_SOFT (C macro), 75	MCONTROL_TYPE_MATCH (C macro), 72 MCONTROL_TYPE_NONE (C macro), 72
IRQ_S_TIMER (C macro), 75	, , , , , ,
ISR, 733	MCOUNTROL_U (<i>C macro</i>), 72
N A	MCOUNTINHIBIT_CY (C macro), 73
M	MCOUNTINHIBIT_IR (C macro), 73
MAX_SYSTEM_EXCEPTION_NUM(C macro), 400	MDCAUSE_MDCAUSE (C macro), 73
MCACHE_CTL_DC_ECC_EN (C macro), 74	MDCFG_DC_ECC (C macro), 74
MCACHE_CTL_DC_ECC_EXCP_EN (C macro), 74	MDCFG_DC_LSIZE (C macro), 74
MCACHE_CTL_DC_EN (C macro), 74	MDCFG_DC_SET (C macro), 74
MCACUE CTI DC DWDECC (C macro) 7/	$\mathtt{MDCFG_DC_WAY}$ (C macro), 74

MDCFG_DLM_ECC (C macro), 75	$\texttt{MSTATUS_HIE}$ (C macro), 70
MDCFG_DLM_SIZE (C macro), 75	MSTATUS_HPIE (C macro), 70
$MDLM_CTL_DLM_BPA$ (C macro), 73	MSTATUS_MIE (C macro), 70
MDLM_CTL_DLM_ECC_EN (C macro), 73	$\texttt{MSTATUS_MPIE}$ (C macro), 70
MDLM_CTL_DLM_ECC_EXCP_EN (C macro), 73	$MSTATUS_MPP(C macro), 70$
MDLM_CTL_DLM_EN (C macro), 73	$MSTATUS_MPRV$ (C macro), 71
MDLM_CTL_DLM_RWECC (C macro), 73	$MSTATUS_MXR$ (C macro), 71
MECC_CODE_CODE (C macro), 75	$MSTATUS_PUM(C macro), 71$
$MECC_CODE_RAMID$ (C macro), 75	MSTATUS_SIE (C macro), 70
$MECC_CODE_SRAMID$ (C macro), 75	$MSTATUS_SPIE$ (C macro), 70
MECC_LOCK_ECC_LOCK (C macro), 75	$MSTATUS_SPP(C macro), 70$
MFIOCFG_INFO_FIO_BPA(C macro), 75	$MSTATUS_UIE$ (C macro), 70
MFIOCFG_INFO_FIO_SIZE (C macro), 75	$MSTATUS_UPIE$ (C macro), 70
MICFG_IC_ECC (C macro), 74	MSTATUS_VM (<i>C macro</i>), 71
MICFG_IC_LSIZE (C macro), 74	MSTATUS_XS (C macro), 70
MICFG_IC_SET (C macro), 74	$MSUBM_PTYP$ (C macro), 73
MICFG_IC_WAY (C macro), 74	MSUBM_TYP (C macro), 73
MICFG_ILM_ECC (C macro), 74	MTVT2_COMMON_CODE_ENTRY (C macro), 74
MICFG_ILM_SIZE (C macro), 74	MTVT2_MTVT2EN (C macro), 74
MICFG_ILM_XONLY (C macro), 74	N.I.
MIE_HEIE (C macro), 73	N
MIE_HSIE (<i>C macro</i>), 73	${\tt NMSIS_Core_Cache::CCM_CMD_Type} \qquad (C++$
MIE_HTIE (C macro), 73	enum), 381, 382
MIE_MEIE (C macro), 73	NMSIS_Core_Cache::CCM_DC_INVAL ($C++\ enu-$
MIE_MSIE (<i>C macro</i>), 73	merator), 381, 382
$\texttt{MIE_MTIE}$ (C macro), 73	${\tt NMSIS_Core_Cache::CCM_DC_INVAL_ALL}(C{\tt ++}$
MIE_SEIE (C macro), 73	enumerator), 381, 382
MIE_SSIE (C macro), 73	NMSIS_Core_Cache::CCM_DC_LOCK (\emph{C} ++ enu-
MIE_STIE (C macro), 73	merator), 381, 382
MILM_CTL_ILM_BPA (C macro), 73	${\tt NMSIS_Core_Cache::CCM_DC_UNLOCK} \qquad (C++$
MILM_CTL_ILM_ECC_EN (C macro), 73	enumerator), 381, 382
MILM_CTL_ILM_ECC_EXCP_EN (C macro), 73	${\tt NMSIS_Core_Cache::CCM_DC_WB}~(\textit{C++ enumera}$
MILM_CTL_ILM_EN (C macro), 73	tor), 381, 382
MILM_CTL_ILM_RWECC (C macro), 73	${\tt NMSIS_Core_Cache::CCM_DC_WB_ALL} \qquad (C++$
MIP_HEIP (C macro), 73	enumerator), 381, 382
MIP_HSIP (C macro), 72	${\tt NMSIS_Core_Cache::CCM_DC_WBINVAL} \qquad (C++$
MIP_HTIP (C macro), 73	enumerator), 381, 382
MIP_MEIP (C macro), 73	NMSIS_Core_Cache::CCM_DC_WBINVAL_ALL
MIP_MSIP (C macro), 72	(C++ enumerator), 381, 382
MIP_MTIP (C macro), 73	${\tt NMSIS_Core_Cache::CCM_IC_INVAL}\ (\textit{C++ enu-}$
MIP_SEIP (C macro), 73	merator), 381, 382
MIP_SSIP (C macro), 72	${\tt NMSIS_Core_Cache::CCM_IC_INVAL_ALL}(C++$
MIP_STIP (C macro), 73	enumerator), 381, 383
MMISC_CTL_BPU (C macro), 74	NMSIS_Core_Cache::CCM_IC_LOCK ($C++$ enu-
MMISC_CTL_MISALIGN (C macro), 73	merator), 381, 383
MMISC_CTL_NMI_CAUSE_FFF (C macro), 73	NMSIS_Core_Cache::CCM_IC_UNLOCK $(C++$
MPPICFG_INFO_PPI_BPA (C macro), 75	enumerator), 381, 383
MPPICFG_INFO_PPI_SIZE (C macro), 75	NMSIS_Core_Cache::CCM_OP_ECC_ERR $(C++$
MSTATUS32_SD (C macro), 71	enumerator), 381, 382
MSTATUS64_SD (C macro), 71	NMSIS_Core_Cache::CCM_OP_EXCEED_ERR
MSTATUS_FS (C macro), 70	(C++ enumerator), 381, 382
MSTATUS_FS_CLEAN (C macro), 71	NMSIS_Core_Cache::CCM_OP_FINFO_Type
MSTATUS_FS_DIRTY (C macro), 71	(C++enum), 381, 382
MSTATUS ES INITIAL (C macro) 71	

```
NMSIS_Core_Cache::CCM_OP_PERM_CHECK_ERR NMSIS_Core_IntExc::Reserved7_IRQn (C++
                                                                                                                                                                enumerator), 362, 366
                       (C++ enumerator), 381, 382
NMSIS Core Cache::CCM OP REFILL BUS ERR NMSIS Core IntExc::Reserved8 IRQn (C++
                       (C++enumerator), 381, 382
                                                                                                                                                                enumerator), 362, 366
NMSIS Core Cache::CCM OP SUCCESS
                                                                                                                     (C++ \text{ NMSIS Core IntExc::} Reserved 9 IRQn (C++
                      enumerator), 381, 382
                                                                                                                                                                enumerator), 362, 366
NMSIS Core CPU Intrinsic::WFI DEEP SLEEPNMSIS Core Intexc::SOC INT MAX (C++ enu-
                       (C++enumerator), 86, 88
                                                                                                                                                                merator), 362, 367
 \verb| NMSIS_Core_CPU_Intrinsic::WFI_SHALLOW_SLNMBIS_Core_IntExc::SysTimer_IRQn | (C++) | (C+
                       (C++enumerator), 86, 88
                                                                                                                                                                enumerator), 362, 366
\verb| MMSIS_Core_CPU_Intrinsic::WFI_SleepMode_\textbf{M}\partial \textbf{E} \text{S}_Core_IntExc::SysTimerSW_IRQn} (C++) | C-1 
                                                                                                                                                                 enumerator), 362, 366
                       (C++enum), 86, 88
NMSIS_Core_ECLIC_Registers::ECLIC_LEVEL_NNIGGER
                       (C++enumerator), 84
NMSIS_Core_ECLIC_Registers::ECLIC_MAX_TR
                       (C++enumerator), 84
                                                                                                                                         PMP_A (C macro), 76
NMSIS_Core_ECLIC_Registers::ECLIC_NEGTIVEMED&ENARIGGEROO), 76
                       (C++enumerator), 84
                                                                                                                                         PMP A NAPOT (C macro), 76
NMSIS_Core_ECLIC_Registers::ECLIC_POSTIVEMEDAETORIGGETOR, 76
                       (C++enumerator), 84
                                                                                                                                         PMP_COUNT (C macro), 76
NMSIS_Core_ECLIC_Registers::ECLIC_TRIGGERMFyD (€ C macro), 76
                       (C++enum), 84
                                                                                                                                         PMP_R (C macro), 76
NMSIS_Core_IntExc::FirstDeviceSpecificIntertransfer in the content of the content
                       (C++ enumerator), 362, 367
                                                                                                                                         PMP W(C macro), 76
NMSIS_Core_IntExc::IRQn_Type (C++ enum), PMP_X(C macro), 76
                       362, 365
                                                                                                                                         PRV_H (C macro), 75
NMSIS_Core_IntExc::Reserved0_IRQn (C++
                                                                                                                                         PRV M (C macro), 75
                       enumerator), 362, 366
                                                                                                                                         PRV S (C macro), 75
NMSIS_Core_IntExc::Reserved10_IRQn(C++
                                                                                                                                         PRV U (C macro), 75
                      enumerator), 362, 366
                                                                                                                                         PTE_A (C macro), 77
NMSIS_Core_IntExc::Reserved11_IRQn(C++
                                                                                                                                         PTE_D (C macro), 77
                       enumerator), 362, 366
                                                                                                                                         PTE_G (C macro), 77
NMSIS_Core_IntExc::Reserved12_IRQn(C++
                                                                                                                                         PTE_PPN_SHIFT (C macro), 77
                      enumerator), 362, 366
                                                                                                                                         PTE_R (C macro), 76
NMSIS_Core_IntExc::Reserved13_IRQn(C++
                                                                                                                                         PTE_SOFT (C macro), 77
                      enumerator), 362, 366
                                                                                                                                         PTE_TABLE (C macro), 77
NMSIS Core IntExc::Reserved14 IRQn (C++
                                                                                                                                         PTE_U (C macro), 77
                       enumerator), 362, 366
                                                                                                                                          PTE_V (C macro), 76
NMSIS_Core_IntExc::Reserved15_IRQn(C++
                                                                                                                                         PTE_W (C macro), 76
                       enumerator), 362, 366
                                                                                                                                         PTE X (C macro), 76
NMSIS Core IntExc::Reserved16 IRQn(C++
                                                                                                                                          R
                       enumerator), 362, 366
NMSIS_Core_IntExc::Reserved1_IRQn (C++
                                                                                                                                          realCoefA (C++ member), 650, 651
                       enumerator), 362, 366
                                                                                                                                          realCoefAQ31 (C++ member), 650, 651
NMSIS_Core_IntExc::Reserved2_IRQn (C++
                                                                                                                                          realCoefB (C++ member), 650, 651
                       enumerator), 362, 366
                                                                                                                                          realCoefBQ31 (C++ member), 650, 651
NMSIS_Core_IntExc::Reserved3_IRQn (C++
                                                                                                                                         RESTORE_FPU_CONTEXT (C macro), 378
                      enumerator), 362, 366
                                                                                                                                          RESTORE_IRQ_CSR_CONTEXT (C macro), 364, 365
NMSIS_Core_IntExc::Reserved4_IRQn (C++
                                                                                                                                         riscv_abs_f16 (C++ function), 422, 423
                      enumerator), 362, 366
                                                                                                                                          riscv abs f32 (C++ function), 422, 423
NMSIS_Core_IntExc::Reserved5_IRQn (C++
                                                                                                                                         riscv_abs_q15 (C++ function), 422, 423
                      enumerator), 362, 366
                                                                                                                                          riscv abs q31 (C++ function), 422, 423
NMSIS_Core_IntExc::Reserved6_IRQn (C++
                                                                                                                                         riscv_abs_q7 (C++ function), 422, 424
                       enumerator), 362, 366
                                                                                                                                          riscv_absmax_f16 (C++ function), 584
```

	_absmax_f32 (C++ function), 584, 585	riscv_biquad_cascade_df1_q15 (C++ func-
	_absmax_q15 (C++ function), 584, 585	tion), 481, 487
	_absmax_q31 (<i>C</i> ++ function), 584, 585 _absmax_q7 (<i>C</i> ++ function), 584, 585	riscv_biquad_cascade_df1_q31 (C++ func- tion), 481, 487
	_absmin_f16 (C++ function), 586	riscv_biquad_cascade_df2T_init_f16(C++
	_absmin_f32 (C++ function), 586	function), 488, 491
	_absmin_q15 (C++ function), 586	riscv_biquad_cascade_df2T_init_f32(C++
	_absmin_q31 ($C++$ function), 586, 587	function), 488, 491
	_absmin_q7 (C ++ function), 586, 587	riscv_biquad_cascade_df2T_init_f64(C++
	_add_f16 (<i>C</i> ++ <i>function</i>), 424	function), 488, 492
	_add_f32 (C++ function), 424	riscv_biquad_cascade_stereo_df2T_init_f16
	_add_q15 (C++ function), 424, 425	(C++ function), 488, 493
	_add_q31 (C++ function), 424, 425	riscv_biquad_cascade_stereo_df2T_init_f32
	_add_q7 (C ++ function), 424, 425	(C++ function), 488, 493
	_and_u16 (<i>C</i> ++ function), 426	riscv_bitonic_sort_f32 (C++ function), 603
	and_u32 (C ++ function), 426	riscv_braycurtis_distance_f16 (C++ func-
	_and_u8 (<i>C</i> ++ <i>function</i>), 426	tion), 463
	$_{\text{avepool}}$ _q7_HWC (C ++ function), 710, 712	riscv_braycurtis_distance_f32 (C++ func-
riscv_	$avgpool_s8(C++function), 710, 711$	tion), 463, 464
riscv_	_avgpool_s8_get_buffer_size $(C++$	riscv_bubble_sort_f32(C++function),603
	function), 710, 711	riscv_canberra_distance_f16(C++function),
riscv_	_barycenter_f16 (C++ function), 602	464
	_barycenter_f32 (C ++ function), 602	$riscv_canberra_distance_f32(C++function),$
riscv_	_bilinear_interp_f16 (C++ function), 549,550	464
~ i ~ ~ · ·	_bilinear_interp_f32 (C++ function),	riscv_cfft_f16 (<i>C</i> ++ function), 631, 634 riscv_cfft_f32 (<i>C</i> ++ function), 631, 634
IISCV_	549,550	riscv_cfft_f64 (C++ function), 631, 635
riecu	_bilinear_interp_q15 (C++ function),	riscv_cfft_init_f16 (C++ function), 631, 635
TISCV_	549, 550	riscv_cfft_init_f32 (<i>C</i> ++ function), 631, 635
riecu	_bilinear_interp_q31 (C++ function),	riscv_cfft_initf64 (<i>C</i> ++ function), 631, 635
TISCV_	549,550	riscv_cfft_init_q15 (C++ function), 631, 636
riscu	_bilinear_interp_q7($C++$ function), 549,	riscv_cfft_init_q31 (C++ function), 631, 636
113CV_	550	riscv_cfft_q15 (C++ function), 631, 636
riscv	_biquad_cas_df1_32x64_init_q31	riscv_cfft_q31 (C++ function), 631, 637
113CV_	(C++ function), 477, 479	riscv_cfft_radix2_f16 (C++ function), 631, 637
riscv	_biquad_cas_df1_32x64_q31 (<i>C++ func-</i>	riscv_cfft_radix2_f32 (<i>C</i> ++ function), 631, 637
	tion), 477, 480	riscv_cfft_radix2_init_f16 (C++ function),
riscv	_biquad_cascade_df1_f16 (C++ func-	631, 637
	tion), 480, 483	riscv_cfft_radix2_init_f32 (C++ function),
riscv	_biquad_cascade_df1_f32 (C++ func-	631, 638
	tion), 480, 484	riscv_cfft_radix2_init_q15 (C++ function),
riscv	_biquad_cascade_df1_fast_q15 (C++	631, 639
	function), 481, 484	riscv_cfft_radix2_init_q31 (C++ function),
riscv_	_biquad_cascade_df1_fast_q31 (C++	631, 639
	function), 481, 484	riscv_cfft_radix2_q15(C++function), 631, 640
riscv_	_biquad_cascade_df1_init_f16 (C++	riscv_cfft_radix2_q31 (C++ function), 631, 640
	function), 481, 485	riscv_cfft_radix4_f16(C++function), 631, 640
riscv_	_biquad_cascade_df1_init_f32 (C++	riscv_cfft_radix4_f32(C++function), 631, 640
	function), 481, 485	<pre>riscv_cfft_radix4_init_f16 (C++ function),</pre>
riscv_	_biquad_cascade_df1_init_q15 ($C++$	631, 640
	function), 481, 486	<pre>riscv_cfft_radix4_init_f32 (C++ function),</pre>
riscv_	_biquad_cascade_df1_init_q31 ($C++$	631, 641
	function), 481, 487	<pre>riscv_cfft_radix4_init_q15 (C++ function),</pre>
		631, 642

```
riscv_cfft_radix4_init_q31 (C++ function),
                                                      451, 452
       631, 642
                                              riscv_cmplx_mult_real_q15 (C++ function),
riscv cfft radix4 q15 (C++ function), 631, 643
                                                      451, 452
riscv_cfft_radix4_q31 (C++ function), 631, 643
                                              riscv_cmplx_mult_real_q31 (C++ function),
riscv_cfft_radix4by2_f16(C++function),631,
                                                      451, 452
                                              riscv_concatenation_s8_w (C++ function), 673
                                              riscv_concatenation_s8_x(C++ function), 673,
riscv chebyshev distance f16 (C++ func-
       tion), 465
                                                      674
riscv_chebyshev_distance_f32 (C++ func-
                                              riscv_concatenation_s8_y(C++function),673,
                                                      674
       tion), 465
riscv\_cityblock\_distance\_f16 (C++ func-
                                              riscv_concatenation_s8_z(C++function), 673,
                                                      675
       tion), 465, 466
riscv_cityblock_distance_f32 (C++ func-
                                              riscv_conv_f32 (C++ function), 494, 495
                                              riscv_conv_fast_opt_q15 (C++ function), 494,
       tion), 465, 466
riscv_clip_f16 (C++ function), 427
riscv_clip_f32 (C++ function), 427
                                              riscv_conv_fast_q15 (C++ function), 494, 496
                                              riscv_conv_fast_q31 (C++ function), 494, 496
riscv_clip_q15 (C++ function), 427
riscv clip q31 (C++ function), 427, 428
                                              riscv conv opt q15 (C++ function), 494, 497
riscv_clip_q7 (C++ function), 427, 428
                                              riscv_conv_opt_q7 (C++ function), 494, 497
riscv_cmplx_conj_f16 (C++ function), 444
                                              riscv conv partial f32 (C++ function), 499,
riscv_cmplx_conj_f32 (C++ function), 444, 445
                                                      500
riscv_cmplx_conj_q15 (C++ function), 444, 445
                                              riscv_conv_partial_fast_opt_q15
                                                                                      (C++
riscv_cmplx_conj_q31 (C++ function), 444, 445
                                                      function), 499, 501
riscv cmplx dot prod f16 (C++ function), 445,
                                              riscv_conv_partial_fast_q15 (C++ function),
                                                      499, 501
       446
riscv_cmplx_dot_prod_f32(C++function),445,
                                              riscv_conv_partial_fast_q31 (C++ function),
                                                      499, 502
riscv_cmplx_dot_prod_q15(C++function),445,
                                              riscv_conv_partial_opt_q15 (C++ function),
                                                      499, 502
       446
riscv_cmplx_dot_prod_q31(C++function),445,
                                              riscv_conv_partial_opt_q7 (C++ function),
       447
                                                      500, 503
riscv_cmplx_mag_f16 (C++ function), 447
                                              riscv_conv_partial_q15 (C++ function), 500,
riscv_cmplx_mag_f32 (C++ function), 447, 448
                                                      503
riscv_mag_q15 (C++ function), 447, 448
                                              riscv_conv_partial_q31 (C++ function), 500,
riscv cmplx mag q31 (C++ function), 447, 448
riscv_cmplx_mag_squared_f16 (C++ function),
                                              riscv_conv_partial_q7 (C++ function), 500, 504
       448, 449
                                              riscv conv g15 (C++ function), 494, 498
riscv_cmplx_mag_squared_f32 (C++ function),
                                              riscv_conv_q31 (C++ function), 494, 498
       448, 449
                                              riscv_conv_q7 (C++ function), 494, 499
                                              riscv_convolve_1_x_n_s8 (C++ function), 676,
riscv_cmplx_mag_squared_q15 (C++ function),
riscv_cmplx_mag_squared_q31 (C++ function),
                                              riscv_convolve_1_x_n_s8_get_buffer_size
       448, 449
                                                      (C++ function), 676, 682
riscv_cmplx_mult_cmplx_f16 (C++ function),
                                              riscv_convolve_1x1_HWC_q7_fast_nonsquare
                                                      (C++ function), 676, 683
                                              riscv_convolve_1x1_s8_fast (C++ function),
riscv_cmplx_mult_cmplx_f32 (C++ function),
       450
                                                      676, 684
riscv_cmplx_mult_cmplx_q15 (C++ function),
                                              riscv_convolve_1x1_s8_fast_get_buffer_size
       450, 451
                                                      (C++ function), 676, 684
riscv_cmplx_mult_cmplx_q31 (C++ function),
                                              riscv_convolve_HWC_q15_basic (C++ func-
       450, 451
                                                      tion), 676, 685
riscv_cmplx_mult_real_f16 (C++ function),
                                              riscv_convolve_HWC_q15_fast (C++ function),
       451, 452
                                                      677, 685
riscv cmplx mult real f32 (C++ function), riscv convolve HWC q15 fast nonsquare
```

```
(C++ function), 677, 686
                                               riscv dct4 q31 (C++ function), 646, 650
riscv_convolve_HWC_q7_basic (C++ function),
                                               riscv_depthwise_conv_3x3_s8 (C++ function),
                                                       678, 694
riscv_convolve_HWC_q7_basic_nonsquare
                                               riscv_depthwise_conv_s8 (C++ function), 679,
        (C++ function), 677, 688
riscv convolve HWC q7 fast (C++ function),
                                               riscv depthwise conv s8 opt (C++function),
                                                       679,696
riscv_convolve_HWC_q7_fast_nonsquare
                                               riscv_depthwise_conv_s8_opt_get_buffer_size
        (C++ function), 678, 690
                                                       (C++ function), 679, 697
riscv_convolve_HWC_q7_RGB (C++ function),
                                               riscv_depthwise_conv_u8_basic_ver1(C++
       678, 691
                                                       function), 680, 697
riscv_convolve_s8 (C++ function), 678, 692
                                               riscv_depthwise_conv_wrapper_s8
                                                                                        (C++
                                                       function), 680, 699
riscv_convolve_s8_get_buffer_size (C++
       function), 678, 693
                                               riscv_depthwise_conv_wrapper_s8_get_buffer_size
riscv_convolve_wrapper_s8 (C++ function),
                                                       (C++ function), 680, 700
        678, 693
                                               riscv_depthwise_separable_conv_HWC_q7
                                                       (C++ function), 681, 700
riscv_convolve_wrapper_s8_get_buffer_size
       (C++ function), 678, 694
                                               riscv_depthwise_separable_conv_HWC_q7_nonsquare
riscv_copy_f16 (C++ function), 606
                                                       (C++ function), 681, 701
riscv_copy_f32 (C++ function), 606
                                               riscv dice distance (C++ function), 470
riscv_copy_q15 (C++ function), 606
                                               riscv_divide_q15 (C++ function), 474
riscv_copy_q31 (C++ function), 606
                                               riscv dot prod f16 (C++ function), 428, 429
                                               riscv_dot_prod_f32 (C++ function), 428, 429
riscv_copy_q7 (C++ function), 606, 607
                                               riscv_dot_prod_q15 (C++ function), 428, 429
riscv correlate f16 (C++ function), 505, 506
riscv_correlate_f32 (C++ function), 505, 506
                                               riscv_dot_prod_q31 (C++ function), 428, 429
                                               riscv_dot_prod_q7 (C++ function), 428, 430
riscv_correlate_fast_opt_q15 (C++ func-
       tion), 505, 507
                                               riscv_elementwise_add_s8(C++function),671,
riscv\_correlate\_fast\_q15 (C++function), 505,
                                               riscv_elementwise_mul_s8(C++ function), 671,
riscv_correlate_fast_q31 (C++ function), 505,
                                                       672
        508
                                               riscv_entropy_f16 (C++ function), 587
riscv_correlate_opt_q15 (C++ function), 505,
                                               riscv_entropy_f32 (C++ function), 587, 588
                                               riscv_entropy_f64 (C++ function), 587, 588
                                               riscv_euclidean_distance_f16 (C++ func-
riscv_correlate_opt_q7 (C++ function), 505,
        509
                                                       tion), 467, 468
riscv_correlate_q15 (C++ function), 505, 509
                                               riscv_euclidean_distance_f32 (C++ func-
riscv correlate q31 (C++ function), 505, 510
                                                       tion), 467, 468
riscv_correlate_q7 (C++ function), 505, 510
                                               riscv_f16_to_float (C++ function), 607
riscv correlation distance f16 (C++ func-
                                               riscv_f16_to_q15 (C++ function), 607
       tion), 466
                                               riscv_fill_f16 (C++ function), 608
riscv_correlation_distance_f32(C++ func-
                                               riscv fill f32 (C++ function), 608
       tion), 466
                                               riscv fill q15 (C++ function), 608
riscv_cos_f32 (C++ function), 472, 473
                                               riscv fill q31 (C++ function), 608, 609
                                               riscv_fill_q7 (C++ function), 608, 609
riscv_cos_q15 (C++ function), 473
                                               riscv_fir_decimate_f32 (C++ function), 511,
riscv_cos_q31 (C++ function), 472, 473
riscv_cosine_distance_f16 (C++ function),
                                                       512
       467
                                               riscv_fir_decimate_fast_q15 (C++ function),
riscv_cosine_distance_f32 (C++ function),
                                                       511, 512
       467
                                               riscv_fir_decimate_fast_q31 (C++ function),
riscv_dct4_f32 (C++ function), 645, 647
                                                       511, 513
riscv_dct4_init_f32 (C++ function), 645, 647
                                               riscv_fir_decimate_init_f32 (C++ function),
riscv_dct4_init_q15 (C++ function), 645, 648
                                                       511, 513
riscv_dct4_init_q31 (C++ function), 645, 648
                                               riscv_fir_decimate_init_q15 (C++ function),
riscv_dct4_q15 (C++ function), 646, 649
                                                       511, 514
```

```
riscv_fir_decimate_init_q31 (C++ function), riscv_fully_connected_mat_q7_vec_q15
                                                      (C++function), 703, 705
       511, 514
riscv_fir_decimate_q15 (C++ function), 511, riscv_fully_connected_mat_q7_vec_q15_opt
                                                      (C++ function), 703, 705
riscv_fir_decimate_q31 (C++ function), 511, riscv_fully_connected_q15 (C++ function),
       515
                                                      703, 706
riscv fir f16 (C++ function), 516, 518
                                              riscv_fully_connected_q15_opt (C++ func-
riscv_fir_f32 (C++ function), 516, 518
                                                      tion), 703, 706
riscv_fir_fast_q15 (C++ function), 516, 518
                                              riscv_fully_connected_q7(C++function),703,
riscv_fir_init_f16 (C++ function), 516, 519
                                                      707
riscv_fir_init_f32 (C++ function), 516, 520
                                              riscv_fully_connected_q7_opt (C++ func-
riscv_fir_init_q15 (C++ function), 516, 520
                                                      tion), 703, 708
riscv_fir_init_q31 (C++ function), 516, 521
                                              riscv_fully_connected_s8(C++function),703,
riscv_fir_init_q7 (C++ function), 516, 521
                                                      709
riscv_fir_interpolate_f32 (C++ function),
                                              riscv_fully_connected_s8_get_buffer_size
       544, 546
                                                      (C++ function), 704, 710
riscv_fir_interpolate_init_f32 (C++ func-
                                              riscv_gaussian_naive_bayes_predict_f16
       tion), 544, 546
                                                      (C++ function), 443
                                              riscv_gaussian_naive_bayes_predict_f32
riscv_fir_interpolate_init_q15 (C++ func-
       tion), 545, 547
                                                      (C++ function), 443, 444
riscv_fir_interpolate_init_q31 (C++ func-
                                              riscv_hamming_distance (C++ function), 470,
       tion), 545, 547
                                              riscv_heap_sort_f32 (C++ function), 603
riscv_fir_interpolate_q15 (C++ function),
                                              riscv iir lattice f32 (C++ function), 531, 532
       545, 548
riscv_fir_interpolate_q31 (C++ function),
                                              riscv_iir_lattice_init_f32 (C++ function),
       545, 548
                                                      531, 533
riscv_fir_lattice_f32 (C++ function), 523, 525
                                              riscv_iir_lattice_init_q15 (C++ function),
riscv_fir_lattice_init_f32 (C++ function),
                                                      531, 533
       523, 525
                                              riscv_iir_lattice_init_q31 (C++ function),
riscv_fir_lattice_init_q15 (C++ function),
                                                      531, 533
       523, 525
                                              riscv_iir_lattice_q15 (C++ function), 531, 534
riscv_fir_lattice_init_q31 (C++ function),
                                              riscv_iir_lattice_q31 (C++ function), 531, 534
       523, 525
                                              riscv_insertion_sort_f32 (C++ function), 604
                                              riscv_jaccard_distance (C++ function), 470,
riscv_fir_lattice_q15 (C++ function), 523, 526
riscv_fir_lattice_q31 (C++ function), 523, 526
                                                      471
riscv_fir_q15 (C++ function), 516, 522
                                              riscv_jensenshannon_distance_f16
                                                                                      (C++
riscv fir q31 (C++ function), 516, 522
                                                      function), 468
riscv_fir_q7 (C++ function), 516, 523
                                              riscv_jensenshannon_distance_f32
                                                                                      (C++
riscv_fir_sparse_f32 (C++ function), 526, 528
                                                      function), 468, 469
                                              riscv_kullback_leibler_f16 (C++ function),
riscv_fir_sparse_init_f32 (C++ function),
       526, 528
riscv_fir_sparse_init_q15 (C++ function),
                                              riscv_kullback_leibler_f32 (C++ function),
       526, 528
riscv_fir_sparse_init_q31 (C++ function),
                                              riscv_kullback_leibler_f64 (C++ function),
       526, 529
                                                      588, 589
riscv_fir_sparse_init_q7(C++function), 526,
                                              riscv_kulsinski_distance (C++ function), 470,
       529
                                                      471
riscv_fir_sparse_q15 (C++ function), 526, 530
                                              riscv_levinson_durbin_f16 (C++ function),
riscv_fir_sparse_q31 (C++ function), 526, 530
                                                      534, 535
riscv_fir_sparse_q7 (C++ function), 526, 530
                                              riscv_levinson_durbin_f32 (C++ function),
riscv_float_to_f16 (C++ function), 609
                                                      534, 535
riscv_float_to_q15 (C++ function), 609
                                              riscv_levinson_durbin_q31 (C++ function),
                                                      534, 535
riscv_float_to_q31 (C++ function), 609, 610
riscv_float_to_q7 (C++ function), 609, 610
                                              riscv linear interp f16 (C++ function), 551,
```

553	riscv_mat_init_f32 (<i>C++ function</i>), 563, 564
riscv_linear_interp_f32 (C++ function), 551,	$riscv_mat_init_f64 (C++ function), 563, 564$
552	$riscv_mat_init_q15 (C++function), 563, 564$
riscv_linear_interp_q15 (C++ function), 551,	riscv_mat_init_q31 (C++ function), 563, 565
553	riscv_mat_inverse_f16(C++function), 565, 566
riscv_linear_interp_q31 (C++ function), 551,	riscv_mat_inverse_f32 (C++ function), 565, 566
553	riscv_mat_inverse_f64 (C++ function), 565, 566
riscv_linear_interp_q7 (C++ function), 551,	riscv_mat_ldlt_f32 (<i>C</i> ++ function), 557, 559
553	riscv_mat_ldlt_f64 (<i>C</i> ++ function), 557, 559
riscv_lms_f32 (C++ function), 535, 537	riscv_mat_mult_f16 (<i>C</i> ++ function), 568, 569
riscv_lms_init_f32 (<i>C</i> ++ function), 535, 538 riscv_lms_init_q15 (<i>C</i> ++ function), 535, 538	riscv_mat_mult_f32 (<i>C</i> ++ <i>function</i>), 568, 569 riscv_mat_mult_f64 (<i>C</i> ++ <i>function</i>), 568, 570
riscv_lms_init_q15 (C++ function), 535, 538 riscv_lms_init_q31 (C++ function), 535, 538	risev_mat_mult_fast_q15 (C++ function), 568, 570
riscv_lms_norm_f32 (C++ function), 535, 536	570
riscv_lms_norm_init_f32 (C++ function), 540,	riscv_mat_mult_fast_q31 (C++ function), 569,
542	570
riscv_lms_norm_init_q15 (C++ function), 540,	riscv_mat_mult_q15 (C++ function), 569, 571
543	riscv_mat_mult_q31 (C++ function), 569, 571
riscv_lms_norm_init_q31 (C++ function), 540,	riscv_mat_mult_q7 (C++ function), 569, 572
543	riscv_mat_scale_f16 (C++ function), 572, 573
riscv_lms_norm_q15 (C++ function), 540, 543	riscv_mat_scale_f32 (<i>C</i> ++ function), 572, 573
riscv_lms_norm_q31 (C++ function), 540, 544 riscv_lms_q15 (C++ function), 535, 539	riscv_mat_scale_q15 (<i>C</i> ++ function), 572, 573 riscv_mat_scale_q31 (<i>C</i> ++ function), 572, 574
riscv_lms_q13 (C++ function), 535, 539	riscv_mat_solve_lower_triangular_f16
riscv_logsumexp_dot_prod_f16 (C++ func-	(<i>C</i> ++ function), 565, 567
tion), 589	riscv_mat_solve_lower_triangular_f32
riscv_logsumexp_dot_prod_f32 (C++ func-	(C++ function), 565, 567
tion), 589, 590	riscv_mat_solve_lower_triangular_f64
riscv_logsumexp_f16(C++function),589,590	(C++ function), 565, 567
riscv_logsumexp_f32(C++function), 589, 590	riscv_mat_solve_upper_triangular_f16
riscv_mat_add_f16(C++ function), 555, 556	(C++ function), 565, 567
riscv_mat_add_f32(<i>C</i> ++ <i>function</i>), 555, 556	riscv_mat_solve_upper_triangular_f32
riscv_mat_add_q15 (<i>C</i> ++ <i>function</i>), 555, 556	(C++ function), 565, 568
riscv_mat_add_q31 (<i>C++ function</i>), 555, 557	riscv_mat_solve_upper_triangular_f64
riscv_mat_cholesky_f16($C++$ function), 557	(C++function), 565, 568
riscv_mat_cholesky_f32 (C++ function), 557,	$riscv_mat_sub_f16(C++function), 574, 575$
558	riscv_mat_sub_f32 (<i>C</i> ++ <i>function</i>), 574, 575
riscv_mat_cholesky_f64 (C++ function), 557,	riscv_mat_sub_f64 (<i>C</i> ++ <i>function</i>), 574, 575
558	riscv_mat_sub_q15 (<i>C</i> ++ function), 574, 576
riscv_mat_cmplx_mult_f16(C++function),560	riscv_mat_sub_q31 (C++ function), 574, 576
riscv_mat_cmplx_mult_f32(C++ function),560	riscv_mat_trans_f16 (<i>C</i> ++ <i>function</i>), 576, 577
riscv_mat_cmplx_mult_q15(C++function),560,	riscv_mat_trans_f32 (<i>C</i> ++ <i>function</i>), 576, 577
561	riscv_mat_trans_f64 (C++ function), 576, 577
riscv_mat_cmplx_mult_q31(<i>C</i> ++ <i>function</i>), 560, 561	riscv_mat_trans_q15 (C++ function), 576, 578
	riscv_mat_trans_q31 (<i>C</i> ++ function), 576, 578 riscv_mat_trans_q7 (<i>C</i> ++ function), 577, 578
riscv_mat_cmplx_trans_f16 (C++ function), 562	riscv_mat_vec_mult_f16 (C ++ function), 579
riscv_mat_cmplx_trans_f32 (C++ function),	riscv_mat_vec_mult_f32 (C++ function), 579
562	riscv_mat_vec_mult_q15 (C++ function), 579
riscv_mat_cmplx_trans_q15 (C++ function),	riscv_mat_vec_mult_q31 (C++ function), 579
562, 563	riscv_mat_vec_mult_q7(C++function), 579, 580
riscv_mat_cmplx_trans_q31 (C++ function),	riscv_max_f16 (C ++ function), 591
562, 563	riscv_max_f32 (<i>C</i> ++ <i>function</i>), 591
riscv_mat_init_f16 (<i>C</i> ++ <i>function</i>), 563, 564	riscv_max_no_idx_f16(C++ function), 591

riscv_max_no_idx_f32 (C++ function), 591, 592	riscv_nn_vec_mat_mult_t_s8 (C++ function),
riscv_max_pool_s8 (C++ function), 710, 711	719, 724
riscv_max_q15 (C ++ function), 591, 592	$riscv_nn_vec_mat_mult_t_svdf_s8$ (C++
riscv_max_q31 (C++ function), 591, 592	function), 719, 724
riscv_max_q7 (C++ function), 591, 592	riscv_not_u16 (C++ function), 433, 434
riscv_maxpool_q7_HWC($C++$ function), 710, 712	riscv_not_u32 (C++ function), 433, 434
riscv_mean_f16(C++function),593	riscv_not_u8 (C++ function), 433, 434
riscv_mean_f32 (C++ function), 593	$riscv_offset_f16$ (C++ function), 434, 435
riscv_mean_q15 (C++ function), 593	riscv_offset_f32 (C ++ function), 434, 435
riscv_mean_q31 (C ++ function), 593, 594	riscv_offset_q15(C++function), 434, 435
riscv_mean_q7 (C ++ function), 593, 594	riscv_offset_q31 (C ++ function), 434, 435
riscv_merge_sort_f32(C++function),603,604	riscv_offset_q7 (C ++ function), 434, 436
riscv_merge_sort_init_f32 (C++ function), 603,604	riscv_or_u16 (<i>C</i> ++ function), 436 riscv_or_u32 (<i>C</i> ++ function), 436
riscv_min_f16 (C++ function), 594	riscv_or_u8 (C++ function), 436, 437
riscv_min_f32 (C++ function), 594, 595	riscv_pid_init_f32 (C++ function), 453, 455
riscv_min_q15 (C++ function), 594, 595	riscv_pid_init_q15 (C++ function), 453, 455
riscv_min_q31 (C++ function), 594, 595	riscv_pid_init_q31 (C++ function), 453, 456
riscv_min_q7 (C++ function), 594, 595	riscv_pid_reset_f32 (<i>C</i> ++ <i>function</i>), 453, 456
riscv_minkowski_distance_f16 (C++ func-	riscv_pid_reset_q15 (C++ function), 453, 456
tion), 469	riscv_pid_reset_q31 (<i>C</i> ++ <i>function</i>), 453, 456
riscv_minkowski_distance_f32 (C++ func-	riscv_power_f16 (C++ function), 596
tion), 469	riscv_power_f32 (C++ function), 596
$riscv_mult_f16(C++function), 430$	$riscv_power_q15$ (C++ function), 596
riscv_mult_f32 (<i>C</i> ++ <i>function</i>), 430, 431	$riscv_power_q31$ (C++ function), 596, 597
$riscv_mult_q15$ ($C++$ function), 430, 431	$riscv_power_q7$ (C++ function), 596, 597
$riscv_mult_q31$ ($C++$ function), 430, 431	riscv_q15_to_f16(<i>C</i> ++ <i>function</i>), 611
riscv_mult_q7 (C++ function), 430, 431	riscv_q15_to_float (C++function), 611
riscv_negate_f16(C++function),432	riscv_q15_to_q31 (<i>C</i> ++ <i>function</i>), 611
riscv_negate_f32 (C++ function), 432	riscv_q15_to_q7 (<i>C++ function</i>), 611
riscv_negate_q15 (<i>C</i> ++ <i>function</i>), 432, 433	riscv_q31_to_float (C++function), 612
riscv_negate_q31 (<i>C</i> ++ <i>function</i>), 432, 433	riscv_q31_to_q15 (<i>C</i> ++ <i>function</i>), 612
riscv_negate_q7 ($C++$ function), 432, 433	riscv_q31_to_q7 (<i>C++ function</i>), 612
$riscv_nn_accumulate_q7_to_q15$ (C++ func-	riscv_q7_to_float(C++function),613
tion), 718, 719	$riscv_q7_{to_q15}$ (C++ function), 613
riscv_nn_accumulate_q7_to_q7 (C++ func- tion),718,719	riscv_q7_to_q15_no_shift (<i>C</i> ++ <i>function</i>), 716, 717
riscv_nn_activations_direct_q15 (C++ function),670	<pre>riscv_q7_to_q15_reordered_no_shift (C++ function), 716, 717</pre>
riscv_nn_activations_direct_q7 (C++ func-	riscv_q7_to_q15_reordered_with_offset
tion), 670	(C++ function), 716, 717
riscv_nn_add_q7 (C++ function), 718, 720	riscv_q7_to_q15_with_offset (C++ function),
riscv_nn_depthwise_conv_nt_t_padded_s8	716, 717
(C++ function), 718, 720	riscv_q7_to_q31 ($C++$ function), 613
riscv_nn_depthwise_conv_nt_t_s8 (C++ function), 718, 721	riscv_q7_to_q7_no_shift (C++ function), 716, 717
riscv_nn_mat_mul_core_1x_s8 (C++ function), 718,722	riscv_q7_to_q7_reordered_no_shift (C++ function),716,718
riscv_nn_mat_mul_core_4x_s8 (C++ function), 719,722	riscv_quaternion2rotation_f32 (C++ func- tion), 580, 581
riscv_nn_mat_mult_nt_t_s8 (C++ function), 719,722	riscv_quaternion_conjugate_f32 (C++ func- tion), 581, 582
riscv_nn_mult_q15 (C++ function), 719, 723	riscv_quaternion_inverse_f32 (C++ func-
riscv_nn_mult_q7 (C++ function), 719, 723	tion), 582

```
riscv_quaternion_norm_f32 (C++ function),
                                                       tion), 652, 660
        582
                                               riscv_rfft_64_fast_init_f16 (C++ function),
riscv_quaternion_normalize_f32(C++ func-
       tion), 583
                                               riscv_rfft_64_fast_init_f32 (C++ function),
riscv_quaternion_product_f32 (C++ func-
       tion), 583
                                               riscv rfft 64 fast init f64 (C++ function),
riscv_quaternion_product_single_f32
                                                       651,660
                                               riscv rfft f32 (C++ function), 651, 655
        (C++ function), 584
riscv_quick_sort_f32 (C++ function), 604
                                               riscv_rfft_fast_f16 (C++ function), 651, 655
riscv_relu6_s8 (C++ function), 670, 671
                                               riscv_rfft_fast_f32 (C++ function), 651, 655
                                               riscv_rfft_fast_f64 (C++ function), 651, 655
riscv_relu_q15 (C++ function), 670, 671
riscv_relu_q7 (C++ function), 670, 671
                                               riscv_rfft_fast_init_f16(C++ function), 651,
riscv_reshape_s8 (C++ function), 713
                                                       657
riscv_rfft_1024_fast_init_f16 (C++ func-
                                               riscv_rfft_fast_init_f32(C++function),651,
                                                       659
        tion), 657
riscv_rfft_1024_fast_init_f32 (C++ func-
                                               riscv_rfft_fast_init_f64(C++function),652,
       tion), 659
                                                       661
riscv_rfft_1024_fast_init_f64 (C++ func-
                                               riscv rfft init f32 (C++ function), 652, 662
                                               riscv_rfft_init_q15 (C++ function), 652, 662
       tion), 652, 661
riscv_rfft_128_fast_init_f16 (C++ func-
                                               riscv_rfft_init_q31 (C++ function), 652, 663
       tion), 656
                                               riscv_rfft_q15 (C++ function), 652, 663
riscv_rfft_128_fast_init_f32 (C++ func-
                                               riscv_rfft_q31 (C++ function), 652, 664
                                               riscv_rms_f16 (C++ function), 597, 598
       tion), 658
riscv_rfft_128_fast_init_f64 (C++ func-
                                               riscv rms f32 (C++ function), 597, 598
                                               riscv_rms_q15 (C++ function), 597, 598
       tion), 652, 660
riscv_rfft_2048_fast_init_f16 (C++ func-
                                               riscv_rms_q31 (C++ function), 597, 598
                                               riscv_rogerstanimoto_distance (C++ func-
       tion), 657
riscv_rfft_2048_fast_init_f32 (C++ func-
                                                       tion), 470, 471
                                               riscv_rotation2quaternion_f32 (C++ func-
       tion), 659
riscv_rfft_2048_fast_init_f64 (C++ func-
                                                       tion), 581
       tion), 652, 661
                                               riscv_russellrao_distance (C++ function),
riscv_rfft_256_fast_init_f16 (C++ func-
                                                       470, 471
       tion), 656
                                               riscv_scale_f16 (C++ function), 437
                                               riscv_scale_f32 (C++ function), 437, 438
riscv_rfft_256_fast_init_f32 (C++ func-
       tion), 658
                                               riscv scale q15 (C++ function), 437, 438
riscv_rfft_256_fast_init_f64 (C++ func-
                                               riscv_scale_q31 (C++ function), 437, 438
       tion), 652, 660
                                               riscv scale q7 (C++ function), 437, 439
riscv_rfft_32_fast_init_f16 (C++ function),
                                               riscv_selection_sort_f32 (C++ function), 605
                                               riscv_shift_q15 (C++ function), 439
                                               riscv_shift_q31 (C++ function), 439
riscv_rfft_32_fast_init_f32 (C++ function),
                                               riscv shift q7 (C++ function), 439, 440
riscv_rfft_32_fast_init_f64 (C++ function),
                                               riscv_sin_cos_f32 (C++ function), 462
       651,660
                                               riscv_sin_cos_q31 (C++ function), 462, 463
riscv_rfft_4096_fast_init_f16 (C++ func-
                                               riscv_sin_f32 (C++ function), 474, 475
       tion), 657
                                               riscv_sin_q15 (C++ function), 474, 475
riscv_rfft_4096_fast_init_f32 (C++ func-
                                               riscv_sin_q31 (C++ function), 474, 475
       tion), 659
                                               riscv_softmax_q15 (C++ function), 713
riscv_rfft_4096_fast_init_f64 (C++ func-
                                               riscv_softmax_q7 (C++ function), 713, 714
       tion), 652, 661
                                               riscv_softmax_s8 (C++ function), 713, 714
riscv_rfft_512_fast_init_f16 (C++ func-
                                               riscv_softmax_u8 (C++ function), 713, 714
                                               riscv_softmax_with_batch_q7 (C++ function),
       tion), 657
riscv_rfft_512_fast_init_f32 (C++ func-
                                                       713, 715
       tion), 659
                                               riscv_sokalmichener_distance (C++ func-
riscv_rfft_512_fast_init_f64 (C++ func-
                                                       tion), 470, 472
```

riscv_sokalsneath_distance ($C++$ function),	riscv_vsqrt_q15 (C ++ function), 475, 477
470, 472	$riscv_vsqrt_q31$ (C++ function), 475, 477
riscv_sort_f32 (<i>C</i> ++ <i>function</i>), 603, 605	riscv_weighted_sum_f16(C++function),614
$riscv_sort_init_f32$ (C++ function), 603, 605	riscv_weighted_sum_f32(C++function),614
$riscv_spline_f32 (C++ function), 554, 555$	$riscv_xor_u16$ (C++ function), 442
riscv_spline_init_f32(C++function),554,555	$riscv_xor_u32$ (C++ function), 442
riscv_sqrt_q15 (C++ function), 475, 476	riscv_xor_u8 (C++ function), 442, 443
riscv_sqrt_q31 (<i>C</i> ++ <i>function</i>), 475, 476	riscv_yule_distance(C++function),470,472
riscv_std_f16 (<i>C</i> ++ <i>function</i>), 599	riscvBitRevTable(C++ member), 622, 623
riscv_std_f32 (C++ function), 599	rv_csr_t (<i>C</i> ++ <i>type</i>), 78
riscv_std_q15 (C++ function), 599, 600	rv_fpu_t (<i>C</i> ++ <i>type</i>), 379
riscv_std_q31 (C++ function), 599, 600	
riscv_sub_f16 (C++ function), 440, 441	S
riscv_sub_f32 (C++ function), 440, 441	SAVE_FPU_CONTEXT (C macro), 378
riscv_sub_q15 (C++ function), 440, 441	SAVE_IRQ_CSR_CONTEXT (C macro), 364, 365
riscv_sub_q31 (C++ function), 440, 441	SIP_SSIP (<i>C macro</i>), 75
riscv_sub_q7 (C++ function), 440, 442	SIP_STIP (C macro), 75
riscv_svdf_s8 (C ++ function), 715	SLEEPVALUE_SLEEPVALUE (C macro), 73
riscv_svm_linear_init_f16 (C++ function),	SSTATUS32_SD (C macro), 71
614, 615	SSTATUS 64_SD (<i>C macro</i>), 71
riscv_svm_linear_init_f32 (C++ function),	SSTATUS_FS (C macro), 71
614, 615	SSTATUS_PUM (C macro), 71
riscv_svm_linear_predict_f16 (C++ func-	SSTATUS_SIE (C macro), 71
tion), 615	SSTATUS_SPIE (C macro), 71
riscv_svm_linear_predict_f32 (C++ func-	SSTATUS_SPP (C macro), 71
tion), 615, 616	SSTATUS_UIE (C macro), 71
riscv_svm_polynomial_init_f16 (C++ func-	SSTATUS_UPIE (C macro), 71
tion), 616	
riscv_svm_polynomial_init_f32 (C++ func-	SSTATUS_XS (C macro), 71
tion), 616, 617	system_default_exception_handler (C++
riscv_svm_polynomial_predict_f16 (C++	function), 400
function), 616, 617	SystemCoreClock (C++ member), 399
riscv_svm_polynomial_predict_f32 (C++	SystemCoreClockUpdate (C++ function), 399
function), 616, 618	SystemExceptionHandlers (C++ member), 402
riscv_svm_rbf_init_f16 (C++ function), 618	SystemInit (C++ function), 399
riscv_svm_rbf_init_f32 (C++ function), 618,	SysTimer (<i>C macro</i>), 86
619	SysTimer_BASE (<i>C macro</i>), 86
riscv_svm_rbf_predict_f16 (C++ function),	SysTimer_MSFRST_KEY (C macro), 86
618, 619	SysTimer_MSFTRST_Msk (C macro), 86
riscv_svm_rbf_predict_f32 (C++ function),	SysTimer_MSIP_MSIP_Msk (<i>C macro</i>), 86
618, 619	SysTimer_MSIP_MSIP_Pos(C macro), 86
riscv_svm_sigmoid_init_f16 (C++ function),	SysTimer_MSIP_Msk (<i>C macro</i>), 86
620	SysTimer_MTIMECTL_CLKSRC_Msk (C macro), 86
riscv_svm_sigmoid_init_f32 (C++ function),	SysTimer_MTIMECTL_CLKSRC_Pos(C macro), 85
620	SysTimer_MTIMECTL_CMPCLREN_Msk (C macro),
	85
riscv_svm_sigmoid_predict_f16 (C++ func-	SysTimer_MTIMECTL_CMPCLREN_Pos (C macro),
tion), 620, 621	85
riscv_svm_sigmoid_predict_f32 (C++ func-	SysTimer_MTIMECTL_Msk (<i>C macro</i>), 86
tion), 620, 621	SysTimer_MTIMECTL_TIMESTOP_Msk (C macro),
riscv_var_f16 (C++ function), 600, 601	85
riscv_var_f32 (C++ function), 600, 601	SysTimer_MTIMECTL_TIMESTOP_Pos (C macro),
riscv_var_q15 (C++ function), 600, 601	85
riscv_var_q31 (C++ function), 600, 601	SysTimer_MTIMER_Msk(<i>C macro</i>), 86
riscv_vsqrt_f32 (<i>C</i> ++ <i>function</i>), 475, 476	SysTimer_MTIMERCMP_Msk(<i>C macro</i>), 86

```
SysTimer_Type (C++ class), 86
                                              twiddleCoefF16_rfft_4096(C++ member), 623,
                                                      630
                                              twiddleCoefF16 rfft 512 (C++ member), 623,
T_UINT16_READ(C++ member), 60
                                              twiddleCoefF16_rfft_64 (C++ member), 623,
T_UINT16_WRITE(C++ member), 60
                                                      630
T_UINT32_READ(C++ member), 60
                                              twiddleCoefF64 1024 (C++ member), 622, 624
T_UINT32_WRITE(C++ member), 60
                                              twiddleCoefF64_128 (C++ member), 622, 624
twiddleCoef_1024 (C++ member), 622, 625
                                              twiddleCoefF64_16 (C++ member), 622, 623
twiddleCoef_1024_q15 (C++ member), 623, 628
                                              twiddleCoefF64_2048 (C++ member), 622, 624
twiddleCoef_1024_q31 (C++ member), 622, 627
                                              twiddleCoefF64_256 (C++ member), 622, 624
twiddleCoef 128 (C++ member), 622, 625
                                              twiddleCoefF64_32 (C++ member), 622, 624
twiddleCoef_128_q15 (C++ member), 622, 628
                                              twiddleCoefF64_4096 (C++ member), 622, 624
twiddleCoef_128_q31 (C++ member), 622, 626
                                              twiddleCoefF64_512 (C++ member), 622, 624
twiddleCoef_16 (C++ member), 622, 625
                                              twiddleCoefF64_64 (C++ member), 622, 624
twiddleCoef_16_q15 (C++ member), 622, 627
                                              TXEVT_TXEVT (C macro), 73
twiddleCoef 16 q31 (C++ member), 622, 626
twiddleCoef 2048 (C++ member), 622, 626
                                              U
twiddleCoef_2048_q15 (C++ member), 623, 629
twiddleCoef_2048_q31 (C++ member), 622, 627
                                              UCODE_OV (C macro), 73
twiddleCoef_256 (C++ member), 622, 625
                                              USE_INTRINSIC (C macro), 704
twiddleCoef_256_q15 (C++ member), 622, 628
                                              V
twiddleCoef_256_q31 (C++ member), 622, 627
twiddleCoef_32 (C++ member), 622, 625
                                              VM MBARE (C macro), 75
twiddleCoef_32_q15 (C++ member), 622, 628
                                              VM_MBB (C macro), 75
twiddleCoef_32_q31 (C++ member), 622, 626
                                              VM MBBID (C macro), 75
twiddleCoef_4096 (C++ member), 622, 626
                                              VM SV32 (C macro), 75
twiddleCoef_4096_q15 (C++ member), 623, 629
                                              VM SV39 (C macro), 75
twiddleCoef 4096 q31 (C++ member), 622, 627
                                              VM_SV48 (C macro), 75
twiddleCoef_512 (C++ member), 622, 625
                                              W
twiddleCoef_512_q15 (C++ member), 623, 628
twiddleCoef_512_q31 (C++ member), 622, 627
                                              Weights 128 (C++ member), 644
twiddleCoef 64 (C++ member), 622, 625
                                              Weights_2048 (C++ member), 644, 645
twiddleCoef 64 g15 (C++ member), 622, 628
                                              Weights 512 (C++ member), 644, 645
twiddleCoef 64 q31 (C++ member), 622, 626
                                              Weights_8192 (C++ member), 644, 645
twiddleCoefF16 1024 (C++ member), 623, 630
                                              WeightsQ31 128 (C++ member), 644, 645
twiddleCoefF16_128 (C++ member), 623, 629
                                              WeightsQ31\_2048 (C++ member), 644, 645
twiddleCoefF16_16(C++ member), 623, 629
                                              WeightsQ31_512 (C++ member), 644, 645
twiddleCoefF16_2048 (C++ member), 623, 630
                                              WeightsQ31_8192 (C++ member), 644, 645
twiddleCoefF16_256 (C++ member), 623, 630
                                              WFE_WFE (C macro), 73
twiddleCoefF16_32 (C++ member), 623, 629
                                              X
twiddleCoefF16_4096 (C++ member), 623, 630
twiddleCoefF16_512 (C++ member), 623, 630
                                              XIP, 733
twiddleCoefF16_64 (C++ member), 623, 629
twiddleCoefF16_rfft_1024(C++ member), 623,
twiddleCoefF16_rfft_128 (C++ member), 623,
twiddleCoefF16_rfft_2048 (C++ member), 623,
twiddleCoefF16 rfft 256 (C++ member), 623,
twiddleCoefF16_rfft_32 (C++ member), 623,
       630
```