# SDSx00

# Remote Command Specification

Version 0.01 2018/04/13

Date	Version	Contents
2018/04/13	0.01	Created new basd BCD536HP/BCD436HP Remote Command Specification Version 1.05.

No.	Command	Function	Program Mode Only
1	MDL	Get Model Info	1
2		Get Firmware Version	
	KEY	Push KEY	
	QSH	Go to quick search hold mode	
	STS	Get Current Status	
	JNT	Jump Number tag	
7	NXT	Next	
8	PRV	Previous	
9	FQK	Get/Set Favorites List Quick Keys Status	
10	SQK	Get/Set System Quick Keys Status	
11	DQK	Get/Set Department Quick Keys Status	
12	PSI	Push Scanner Information	
13	GSI	Get Scanner Information	
14	GLT	Get xxx list	
15	HLD	Hold	
16	AVD	Set Avoid Option	
17	SVC	Get/Set Service Type Settings	
18	JPM	Jump Mode	
19	DTM	Get/Set Date and Time.	
20	LCR	Get/Set Location and range.	
21	AST	Analize Start	
22	APR	Analize Pauze/Resume	
23	URC	User Record Control	
24	MNU	Menu Mode command	
25	MSI	Menu Status Info	
26	MSV	Menu Set Value	
27	MSB	Menu Structure Back	

Command List 3/32

MDL Get Model Info Controller → Radio MDL[\r] (1) Radio → Controller (1) MDL,[MODEL\_NAME][\r] [MODEL\_NAME] SDS100 SDS200 VER Get Firmware Version Controller → Radio (1) VER[\r] Radio → Controller VER,[VERSION][\r] (1) [VERSION] Version x.xx.xx KEY Push KEY Controller → Radio KEY,[KEY\_CODE],[KEY\_MODE][\r] (1) Radio → Controller (1) KEY,OK[\r] See "key code for KEY Command" sheet for KEY\_CODE. QSH Go to quick search hold mode Controller → Radio QSH,[FRQ][\r] (1) Radio → Controller QSH,OK[\r] (1) This command is invalid when the scanner is in Menu Mode, during Direct Entry operation, during Quick Save operation. STS **Get Current Status** 

Remote Command 4/40

------

# Controller → Radio

(1) STS[\r]

### Radio → Controller

(1) STS,[DSP\_FORM],[L1\_CHAR],[L1\_MODE],[L2\_CHAR],[L2\_MODE], [L3\_CHAR],[L3\_MODE], ..., [L20\_CHAR],[L20\_MODE], [RSV],[RSV]

### Note:

STS Command is compatible with old scanner.

PSI is better than STS.

See "Font Data Specification" for not ascii character code.

# JNT Jump Number tag

Controller → Radio

(1) JNT,[FL\_TAG],[SYS\_TAG],[CHAN\_TAG][\r]

[FL\_TAG] Favorites List Number Tag (0-99) [SYS\_TAG] System Number Tag (0-99) [CHAN\_TAG] Channel Number Tag (0-999)

Radio → Controller

(1)  $JNT,OK[\r]$ 

#### NXT Next

Controller → Radio

(1)  $NXT,[tkw],[xxx1],[xxx2],[COUNT][\r]$ 

Radio → Controller

(2) NXT,OK\r

[tkw]see sheet "tkd and 1st,2nd opt"[xxx1]see sheet "tkd and 1st,2nd opt"[xxx2]see sheet "tkd and 1st,2nd opt"[COUNT]slide counts

# PRV Previous

Controller → Radio

Remote Command 5/40

(1) PRV,[tkw],[xxx1],[xxx2],[COUNT][\r]

# Radio → Controller

(2) PRV,OK\r

[tkw] see sheet "tkd and 1st,2nd opt"
[xxx1] see sheet "tkd and 1st,2nd opt"
[xxx2] see sheet "tkd and 1st,2nd opt"
[COUNT] slide counts (1-8)

# FQK Get/Set Favorites List Quick Keys Status

\_\_\_\_\_

# Controller → Radio

- (1) FQK[\r]
- (2) FQK,[S0],[S1],.....[S99][\r]

# Radio → Controller

- (1) FQK,[S0],[S1],.....[S99][\r]
- (2)  $FQK,OK\r$

# [Quick Key Status (S0-S99)]

0 : FLQK does not exist

1 : FLQK exists and is disabled 2 : FLQK exists and is enabled

If controller sends 0 (QK does not exist), radiowill ignore 0.

# SQK Get/Set System Quick Keys Status

5QN Gel/5et System Quick Neys Status

### Controller → Radio

- (1)  $SQK,[FAV_QK][\r]$
- (2) SQK,[FAV\_QK],[S0],[S1],.....[S99][\r]

# Radio → Controller

- (1) SQK,[FAV\_QK],[SYS\_QK],[S0],[S1],.....[S99][\r]
- (2)  $SQK,OK[\r]$

# [Quick Key Status (S0-S99)]

0 : SQK does not exist

1 : SQK exists and is disabled 2 : SQK exists and is enabled

If controller sends 0 (QK does not exist), radiowill ignore 0.

3

# DQK Get/Set Department Quick Keys Status

Remote Command 6/40

$$\label{eq:controller} \begin{split} &\text{Controller} \rightarrow \text{Radio} \\ &(1) \qquad \text{DQK,[FAV\_QK],[SYS\_QK][\r]} \\ &(2) \qquad \text{DQK,[FAV\_QK],[SYS\_QK],[S0],[S1],......[S99][\r]} \\ &\text{Radio} \rightarrow \text{Controller} \\ &(1) \qquad \text{DQK,[FAV\_QK],[SYS\_QK],[S0],[S1],......[S99][\r]} \\ &(2) \qquad \text{DQK,OK[\r]} \\ &[\text{Quick Key Status (S0-S99)]} \\ &0: \text{DQK does not exist} \\ &1: \text{DQK exists and is disabled} \end{split}$$

If controller sends 0 (QK does not exist), radiowill ignore 0.

2: DQK exists and is enabled

# PSI Push Scanner Information

format will be XML. See PSI,GSI tab

# GSI Get Scanner Information

format will be XML. See PSI,GSI tab

#### GLT Get xxx list

GLT is command which PC get xx list form scanner.

See "GLT command" sheet to detail.

# HLD Hold

HLD is command to hold system, department, channel. It can't hold favorites list and site frequency.

Controller → Radio

HLD,[tkw],[xxx1],[xxx2][\r]

tkw: see sheet "tkd and 1st,2nd opt" xxx1 see sheet "tkd and 1st,2nd opt" xxx2 see sheet "tkd and 1st,2nd opt"

Remote Command 7/40

# Radio → Controller HLD,OK[\r]

# AVD Set Avoid Option

AVD is command to avoid or unavoid. It can't avoid favorites list and site frequency.

Controller → Radio

AVD,[tkw],[xxx1],[xxx2][STATUS][\r]

tkw: see sheet "tkd and 1st,2nd opt" xxx1 see sheet "tkd and 1st,2nd opt" xxx2 see sheet "tkd and 1st,2nd opt"

[STATUS 1:Permanent Avoid 2:Temporary Avoid 3:Stop Avoiding

Radio → Controller AVD,OK[\r]

Note:Please use the GSI or GLT command if you need to get avoid status

# SVC Get/Set Service Type Settings

Controller → Radio

- (1) SVC[\r]
- (2) SVC,[PST1],[PST2],...,[PST37],[CST1],...,[CST10][\r]

Radio → Controller

- (1) SVC,[PST1],[PST2],...,[PST37],[CST1],...,[CST10][\r]
- (2)  $SVC,OK[\r]$

[PSTx] 0: Off (Not Scan) 1: On (Scan)

# JPM Jump Mode

Controller → Radio

(1) JPM,[JUMP\_MODE],[INDEX][\r]

Remote Command 8/40

[JUMP\_MODE] SCN\_MODE
CTM\_MODE
QSH\_MODE
CC\_MODE
WX\_MODE
FTO\_MODE
IREC\_MODE
UREC\_MODE
TDIS\_MODE
CDIS\_MODE

[INDEX] SCN\_MODE: Chanel Index

CTM\_MODE : Reserve
QSH\_MODE : Reserve
CC\_MODE : Reserve
WX\_MODE : NORMAL

A\_ONLY SAME\_1 SAME\_2 SAME\_3 SAME\_4 SAME\_5 ALL\_FIPS

FTO\_MODE: Reserve

IREC\_MODE: Reserve

UREC\_MODE: Folder Name

TDIS\_MODE: Session Name

CDIS\_MODE: Session Name

\*When you send the channel index of 0xFFFFFFF, scanner start to scan from top channel

★If temporary clock was set and go to discovery mode, scanner sends NG response.

 $\divideontimes$ If temporary clock was set and go to wx alert mode, scanner sends NG response.

Radio → Controller

(1)  $JPM,OK[\r]$ 

-----

DTM Get/Set Date and Time.

-----

Controller → Radio

(1)  $DTM[\r]$ 

(2) DTM,[DayLightSaving],[YYYY],[MM],[DD],[hh],[mm],[ss][\r]

Radio → Controller

(1) DTM,[DayLightSaving],[YYYY],[MM],[DD],[hh],[mm],[ss],[RTC Status][\r]

(2)  $DTM,OK[\r]$ 

[RTC Status]: 0:RTC NG

1:RTC OK

\_\_\_\_\_\_

Remote Command 9/40

Remote Command 10/40

Controller → Radio

(1) MNU,[MENU\_ID],[INDEX][\r]

# Radio → Controller

(1)  $MNU,OK[\r]$ 

MENU_ID	INDEX	Menu Position
TOP	-	Top (Main) Menu
MONITOR_LIST	-	Select Lists to Monitor menu
SCAN_SYSTEM	Syetm Index	System Menu
SCAN_DEPARTMENT	Department Index	Department Menu
SCAN_SITE	Site Index	Site Menu
SCAN_CHANNEL	Channel Index	Channel Menu
SRCH_RANGE	Custom Bank Index	Custom Search Bank Menu
SRCH_OPT	-	Search/Close Call Opt menu
CC	-	Close Call Menu
CC_BAND	-	Clsoe Call Band Menu
WX	-	WX Operation Menu
FTO_CHANNEL	FTO Channel Index	Tone out Channel Menu
SETTINGS	-	Settings Menu
BRDCST_SCREEN	-	Broadcast screen Menu

# MSI Menu Status Info

\_\_\_\_\_\_

Controller → Radio

(1) MSI[\r]

Radio → Controller

(1) MSI,<XML>,[\r]
<?xml version="1.0" encoding="utf-8"?>[\r]
<MSI Name=" *Title* " Index="xxxxxx" >[\r]
:
:
</MSI>[\r]

format is XML. See sheet MSI tab

MSV Menu Set Value

\_\_\_\_\_

 $\text{Controller} \to \text{Radio}$ 

(1) MSV,[RSV],[VALUE][\r]

Radio → Controller

(1)  $MSV,OK[\r]$ 

VALUE select type menu : selected item index input type menu : inputted string

Remote Command 11/40

NI	-1-
1/1	$\alpha$

Replace comma(,) to tab(\t), if value contain ,(comma).

MSB Menu Structure Back

.....

 $\text{Controller} \to \text{Radio}$ 

(1) MSB,[RSV],[RET\_LEVEL][\r]

 $\mathsf{Radio} \to \mathsf{Controller}$ 

(1) MSB,OK[\r]

RET\_LEVEL "RETURN\_PREVOUS\_MODE" exit menu mode 1 level back

Remote Command 12/40

Favorites List System 1 **Dep**artment Conventional frequency TGID in ID Scan TGID in ID Search

Site frequency Avoiding TGID in ID Search Search Avoiding frequency

Close Call WX

Site

Tone-Out mode Search with scan frequency CC Hits Channel Custom Search Bank Custom Search frequency Quick Search frequency Repeater Find frequency

#### comand

					Comand					
		GL	T	NXT	/PRV	Н	LD	AVD		
		1st	2nd	1st	2nd	1st	2nd	1st	2nd	
	FL	[none]		_		_				
	SYS	[Parent FL Index]		Sys Index	[none]	Sys Index	[none]	Sys Index	[none]	
	DEPT	[Parent Sys Index]		Dept Index	[Parent Sys Index]	Dept Index	[Parent Sys Index]	Dept Index	[none]	
	SITE	[Parent Sys Index]	/	Site Index	[none]	Site Index	[none]	Site Index	[none]	
	CFREQ	[Parent Dept Index]		Chan Index	[none]	Chan Index	[none]	Chan Index	[none]	
	TGID	[Parent Dept Index]		Chan Index	[none]	Chan Index	[none]	Chan Index	[none]	
	STGID			TGID	[Site Index]	TGID	[Site Index]	(Use	ATGID)	
	SFREQ	[Parent Sit Index]		ı		_		1	-	
	ATGID	[Parent Sys Index]		ı		_		TGID	Parent sys index	
_	AFREQ	[none]				ı		[Frequency]	[none]	
Word	CC			[none]	[none]	[none]	[none]	(Use	AFREQ)	
	WX [none]		/	WX Chan Index	[none]	WX Chan Index	[none]		-	
è	FT0	none]		FTO Chan Index [none]		FTO Chan Index	[none]		-	
ᅩ	SWS_FREQ			Frequency	[Parent Dept Index]	Frequency	[Parent Dept Index]	(Use	AFREQ)	
ge	CCHIT	[Parent Dept Index]		CC Chan Index	[none]	CC Chan Index	[none]	CC Chan Index	[none]	
Target	CS_BANK	[none]		ı		_				
	CS_FREQ			Frequency	Parent Bank index	Frequency	Parent Bank index	(Use	AFREQ)	
	QS_FREQ			Frequency	[none]	Frequency	[none]	(Use	AFREQ)	
	RPTR_FREQ			Frequency	[none]	Frequency	[none]	(You can't avoid	Repeater Frequency)	
	IREC_FILE	[none]			[none]	File Index	[none]	(You c	an't avoid)	
	UREC_FOLDER	R [none]		(You can'	t select folder)	(You can'	t select folder)	(You can't avoid		
	UREC_FILE	Folder Index		File Index	[none]	File Index	[none]	(You c	an't avoid)	
	TRN_DISCOV	[none]		ı		_		TGID	[none]	

[none]

[none] means Parameter is none. means invarild command

If you want ot avoid 406.0MHz in Quick Search mode, Note 1 "AVD.AFREQ.4060000..1¥r" is right. "AVD, QS\_FREQ, 4060000,, 1¥r" is bad command.

[none]

CNV DISCOV

**BAND SCOPE** 

If App sends "HLD", "NXT" or "PRV" in Repeater Find mod, the scanner cancels Repeater Find mod Note 2 and returns to previous mode(Custom Search/Quick Search/ Close Call)

Frequency

Note 3 "Unkown" department in ID Search is virtual department. You can hold, next and previous "Unkown" department but can't avoid it.

"Unkown" department needs parent system index. Another department doesn't need parent system index. Both is OK that you set blank or system index for 2nd parame

Frequency

[none]

Frequency

[none]

tkd and 1st,2nd opt 13/32

#### GLT is command which PC get xx list form scanner.

#### $\mathsf{Controller} \to \mathsf{Radio}$

(1) GLT,FL	Favorites List
(2) GLT,SYS,[fl_index]	System
(3) GLT,DEPT,[system_index]	<b>Dep</b> artment
(4) GLT,SITE,[system_index]	Site
(5) GLT,CFREQ,[dept_index]	Conventional Frequency
(6) GLT,TGID,[dept_index]	TGID
(7) GLT,SFREQ,[site_index]	Site Frequency
(8) GLT,AFREQ	Search Avoding Frequencies
(9) GLT,ATGID,[system_index]	Search Avoiding TGID
(10) GLT,FTO	Fire Tone Out
(11) GLT,CS_BANK	Custom Search Bank
(12) GLT,UREC	User Record
(13) GLT, IREC_FILE	Inner Record File
(14) GLT,UREC_FILE,[folder_index]	User Record File
(15) GLT,TRN_DISCOV	Trunk Discovery
(16) GLT,CNV_DISCOV	Conventional Discovery

# Radio → Controller

(	1) GLT	FL	Index	Name	Monitor	Q_Key	N_Tag						
(2	2) GLT	SYS	Index	Myld	Name	Avoid	Туре	Q_Key	N_Tag				
(;	3) GLT	DEPT	Index	Myld	Name	Avoid	Q_Key						
(4	4) GLT	SITE	Index	Myld	Name	Avoid	Q_Key						
(	5) GLT	CFREQ	Index	Myld	Name	Avoid	Freq	Mod	SAS	SAL	SvcType	N_Tag	
(6	3) GLT	TGID	Index	Myld	Name	Avoid	TGID	Audio Type	SvcType	N_Tag			
(	7) GLT	SFREQ	Index	Freq									
(8	3) GLT	AFREQ	Freq	Avoid									
(9	9) GLT	ATGID	TGID	Avoid	index	Name	DeptName	DeptIndex					
(1	) GLT	FTO	Index	Freq	Mod	Name	ToneA	ToneB					
(1	1) GLT	CS_BANK	Index	Name	Lower	Upper	Mod	Step					
(1:	2) GLT	UREC	Index	Name					Name = I	Folder Name	e		
(1:	3) GLT	IREC_FILE	Index	Name	Time				Name = I	File Name			
(14	4) GLT	UREC_FILE	Index	Name	Time				Name = I	File Name			
(1	5) GLT	TRN_DISCOV	Name	Delay	Logging	Duration	CompareDB	SystemName	SystemType	SiteName	TimeOutTimer	AutoStore	
(10	3) GLT	CNV_DISCOV	Name	Lower	Upper	Mod	Step	Delay	Logginig	CompareDB	Duration	TimeOutTimer	AutoSto
•	,												

Short word means:
Q\_Key: Quick Key
N\_Tag: Number Tag
Freq: Frequency
Mod: Modulation
SAS: Sub Audio Setting (CTCSS/DCS/E

SAS : Sub Audio Setting (CTCSS/DCS/P25NAC/Color

Code/RAN, Area)

Avoid Off T-Avoid

%Name = Session Name
%Name = Session Name

The Index is kind of handle. PC uses index to Hold  $\,$  and Avoid  $\,$  Myld is like RRDB ID.  $\,$ 

GLT command 14/32

#### format will be XML.

```
ex


GLT,FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}{2}\)FL\(\frac{1}\)FL\(\frac{1}{2}\)FL\(\frac{1}\)FL\(\frac{1}{2}\)FL\(
```

GLT command 15/32

PC/Tablet App need scanner internal information to show.

If the scanner recvies GSI command, it will send scanner internal information. Scaner internal information is like XML.

If the scanner receive PSI command, it outputs information periodically. User can change interval by parameter.

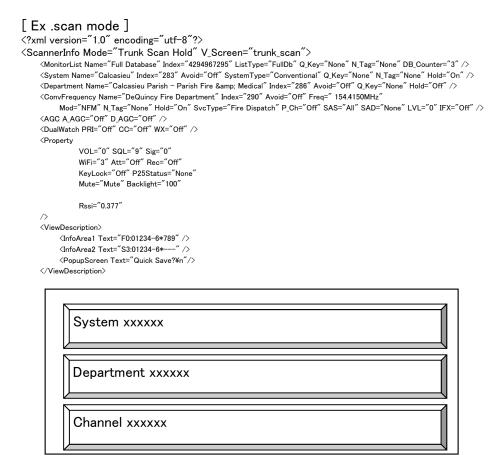

see PSI, GSI Elemen PSI, GSI Attribute Attribute (ViewDescription)

# All mode Elements

ScannerInfo Property

AGC

DispFormat

ViewDescription (when the radio is wiewing override area )
ReplayDescription (when the radio is in REPLAY mode)

ScannerInfo is the root node.

PSI, GSI Elemen

# Depend on mode elements

		Scan	mode			Sea	arch		Sig	gnal	Temp	orary	disco	overy		Ana	lyze	
	conventional_scan	trunk_scan	custom_with_scan	cchits_with_scan	custom_search	quick_search	lles_call	cc_searching	tone_out	wx_alert	reverse_frequency	repeater_find	discovery_conventiona	discovery_trunking	analyze_system_status	rf_power_plot	analyze	band_scope
MonitorList	0	0	0	0	_	ı	ı	ı	ı	ı	ı	ı	I	-	ı	ı	1	_
System	0	0	0	0	_	ı	ı	ı	ı	ı	ı	ı	I	-	ı	ı	1	_
Department	0	0	0	0	_	-	-	-	-	-	ı	-	ı	-	-	-	-	_
Site	_	0	_	-	_	-	-	-	-	-	_	-	-	_	_	-	_	_
ConvFrequency	0	ı	ı	ı	_	ı	ı	ı	ı	ı	ı	ı	I	-	ı	ı	1	_
TGID	-	0	ı	1	_	1	1	1	1	1	1	1	ı	-	ı	ı	-	_
SiteFrequency	-	0			_	ı	ı	ı	ı	ı	ı	ı	ı	-	ı	ı	ı	-
SrchFrequency	_	ı	0	ı	0	0	0	ı	ı	0	0	0	I	-	ı	ı	1	_
CcHitsChannel	-	ı	1	0	_	1	1	1	1	1	1	1	ı	-	ı	ı	-	_
DualWatch	0	0	0	0	0	0	0	0	ı	ı	0	0	I	-	ı	ı	1	_
SearchRange	_	ı	0	ı	0	0	ı	ı	ı	ı	ı	ı	ı	-	ı	ı	ı	_
SearchBanks	_	-	_	-	0	-	-	-	_	_	_	-	ı	_	-	-	_	_
CC_Bands	_	ı	ı	ı	_	ı	ı	0	ı	ı	ı	ı	I	-	ı	ı	1	_
CC_Counters	-	ı	ı	1	_	1	1	0	1	1	1	1	ı	-	ı	ı	-	_
ToneOutChannel	_	ı	ı	ı	_	ı	ı	ı	0	ı	ı	ı	I	-	ı	ı	1	_
WxChannel	-	ı	ı	ı	_	ı	ı	ı	ı	0	ı	ı	ı	-	ı	ı	ı	-
WxMode	-	1	ı	ı	_	ı	ı	ı	ı	0	ı	ı	ı	_	-	ı	1	_
ConventionalDiscovery	_	_	_	-	_	_	_	_	_	_	_	-	0	_	_	-	_	_
TrunkingDiscovery	_	_	_	_	_	_	_	_	_	_	_	_	ı	0	_	_	_	_
SystemStatus	_	_	_	_	_	_	_	_	_	_	_	_	ı	_	0	_	_	_
RfPowerPlot	=	=	=	=	=	=	=	=	=	=	=	=	-	=	=	Φ	=	=
Analyze	_	_	_	_	_	-	-	-	_	_	_	_	_	_	_	_	0	-
BandScope	=	=	=	=	=	=	=	=	=	=	=	=	ı	=	=	=	=	$\Theta$
BandScopeRange	_	_	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	$\Theta$

PSI, GSI Elemen

# Elements in ViewDescription

InfoArea1 InfoArea2 OverWrite PopupScreen PlainText

# Elements in ReplayDescription

File ReplayMode

#### Scan Mode Scan Hold ScannerInfo Tone-Out Attribute Name Value Custom Search Mode Custom Search Hold V\_Screen Quick Search Quick Search Hold Service Scan Service Scan Hold **Property** Trunk Scan Attribute Name Value Trunk Scan Hold Off/On Close Call Only VOL 0-29 or 0-15 Close Call SQL 0-19 or 0-15 Menu tree Sig 0-4 WiFi Off / 0-3 / AP Battery 0.0 - 3.3Att Off/On/G-Att Off/On Rec plain\_text KeyLock Off/On conventional\_scan P25Status None/Data/P25/DMR/CAP/CON/DT3/XPT trunk\_scan /NX9/NX4/ND9/ND4/IDS/NXD Unmute/Mute custom\_with\_scan Mute cchits\_with\_scan $A_Led$ Off/Blue/Red/Magenta/Green/Cyan/Yellow/White custom\_search Dir Up/Down quick\_search Rssi 0close\_call cc\_searching tone\_out AGC wx alert Attribute Name ${\sf discovery\_conventional}$ A\_AGC Off/On discovery\_trunking D\_AGC Off/On reverse\_frequency repeater\_find direct entry menu\_selection menu\_input DualWatch analyze\_system\_status Attribute Name Value analyze PRI Off/DND/Priority CC Off/DND/Priority WX Off/Priority MonitorList Attribute Name Value

	Name	ASCII code , Max length 64	
	Index	0-	
	ListType	FullDb/FL/SWS	
	Q_Key	0-99/None	
	N_Tag	0-99/None	
	DB_Counter	0-65535, if counter overs $65535$ , counter will be $0$ .	
System			
•	Name	ASCII code , Max length 64	
	Index	0-	
	Avoid	Off/T-Avoid/Avoid	
	SystemType	•	Conventional
	Q_Key	0-99/None	Motorola
	N_Tag	0-99/None	EDACS
	Hold	Off/On	LTR
			P25 Trunk
Departn	nent		P25 One Frequency
_ 0 p a a	Name	ASCII code , Max length 64	MotoTRBO Trunk

PSI, GSI Attribute 20/32

Index 0-

Avoid Off/T-Avoid/Avoid

Q\_Key 0-99/None Hold Off/On

DMR One Frequency NXDN Trunk NXDN One Frequency

Site

Name ASCII code, Max length 64

Index 0-

Avoid Off/T-Avoid/Avoid

Q\_Key 0-99/None Hold Off/On

Mod Auto/NFM/FM

ConvFrequency

Name ASCII code, Max length 64

Index 0-

Avoid Off/T-Avoid/Avoid Freq xxxx.xxxxMHz

Mod Auto/AM/NFM/FM/WFM/FMB

 $N_{-}$ Tag 0-999/None Hold Off/On

SvcType See Sheet: "Service type"

P\_Ch Off/On

SAS See Sheet: "Sub Audio"

SAL Off/On

SAD See Sheet: "Sub Audio"

RecSlot Slot 1/2/None LVL -3/-2-/-1/0/1/2/3

IFX Off/On

TGID TGID xxxx/None U\_Id UID xxxx/None

**TGID** 

Name ASCII code, Max length 64

Index 0-

Avoid Off/T-Avoid/Avoid

TGID TGID:xxxx
SetSlot Slot 1/2/Any
RecSlot Slot 1/2/None
N\_Tag 0-999/None
Hold Off/On

SvcType See Sheet: "Service type"

P\_Ch Off/On

LVL -3/-2-/-1/0/1/2/3

SiteFrequency

Freq xxxx.xxxxMHz

SAS See Sheet: "Sub Audio" SAD See Sheet: "Sub Audio"

IFX Off/On

SearchBanks

Attribute Name Value

Index 0-9

BankStatus xxxxxxxxxx : 0=Off/ 1=On order=0123456789

Name ASCII code, Max length 64

BankNo 0-9

CC\_Bands

Attribute Name Value

PSI, GSI Attribute 21/32

BandStatus xxxxxxx : 0=Off/ 1=On order=0123456

# SrchFrequency

<u>Attribute Name</u>	<u>Value</u>
Avoid	Off/T-Avoid/Avoid
Freq	xxxx.xxxxMHz
Mod	Auto/AM/NFM/FM/WFM/FMB
Hold	Off/On
SAD	See Sheet: "Sub Audio"
RecSlot	Slot 1/2/None
TGID	TGID xxxx/None
U_Id	UID xxxx/None
IFX	Off/On

# CcHitsChannel

<u>Attribute Name</u>	Value
Name	ASCII code , Max length 64
Index	0-
Avoid	Off/T-Avoid/Avoid
CH_No	0-9
Freq	xxxx.xxxxMHz
Mod	Auto/AM/NFM/FM/WFM/FMB
Hold	Off/On
SAD	See Sheet : "Sub Audio"
LVL	-3/-2-/-1/0/1/2/3
IFX	Off/On

# SearchRange

Lower	xxxx.xxxxMHz
Upper	xxxx.xxxxMHz
Mod	Auto/AM/NFM/FM/WFM/FMB
Step	

# ToneOutChannel

rieoutoriaririei	
Name	ASCII code , Max length 64
Index	1–
CH_No	0-31
Freq	xxxx.xxxxMHz
Mod	Auto/AM/NFM/FM/WFM/FMB
Hold	Off/On
LVL	-3/-2-/-1/0/1/2/3
IFX	Off/On
ToneA	xxxxHz
ToneB	xxxxHz
Mada	

# ${\sf WxMode}$

Mode	"Monitor Weather" or "Weather Alert"
SAME	"Alert Only" or SAME group name

# WxChannel

ıneı	
Name	ASCII code , Max length 64
Index	0-
CH_No	1–7
Freq	xxxx.xxxxMHz
Mod	FM
Hold	Off/On
LVL	-3/-2-/-1/0/1/2/3

IFX Off/On

# ConventionalDiscovery

PSI, GSI Attribute 22/32

Lower xxxx.xxxxMHz Upper xxxx.xxxxMHz

Mod Auto/AM/NFM/FM/WFM/FMB

Step

Freq xxxx.xxxxMHz

SAD See Sheet: "Sub Audio"

RecSlot Slot 1/2/None

PastTime HitCount

TGID TGID xxxx/None U\_Id UID xxxx/None

IFX Off/On

#### TrunkingDiscovery

SystemName ASCII code , Max length 64
SiteName ASCII code , Max length 64

TGID

TgidName

SAD See Sheet: "Sub Audio"

RecSlot Slot 1/2/None

PastTime

HitCount

U\_Id UID xxxx/None

# SystemStatus

SystemName ASCII code , Max length 64
SiteName ASCII code , Max length 64

Signal 0-100 Quality 0-100 Activity 0-100 SystemID 0-0x1FFFF SystemSubID 0 - 99SiteID 0 - 4095WacnID 0-0xFFFFF NAC 0-0xFFF Color 0-15 RAN 0-63 Area 0-1 Att Off/G-Att 0-16 Freqs

P25Status None/Data/P25/DMR/CAP/CON/DT3/XPT

/NX9/NX4/ND9/ND4/IDS/NXD

### RfPowerPlot

Frequency xxxx.xxxMHz

Modulation Auto/AM/NFM/FM/WFM/FMB SampleRate 100ms/200ms/400ms/800ms

Off/G-Att Att B01 0 - 100B02 0 - 100B03 0 - 100B04 0 - 100B05 0 - 100B06 0 - 100B07 0 - 100B08 0 - 100B09 0 - 100B10 0 - 100B11 0 - 1000 - 100B12 0 - 100B13 0 - 100 B14

PSI, GSI Attribute 23/32

B15	0 - 100
B16	0 - 100
B17	0 - 100
B18	0 - 100
B19	0 - 100
B20	0 - 100
B21	0 - 100
B22	0 - 100
B23	0 - 100
B24	0 - 100
B25	0 - 100
B26	0 - 100
B27	0 - 100
B28	0 - 100
B29	0 - 100
B30	0 - 100
B31	0 - 100
B32	0 - 100
B33	0 - 100
B34	0 - 100

### Analyze

Msg1 ASCII code , Max length 64
Msg2 ASCII code , Max length 64
SystemName ASCII code , Max length 64
ASCII code , Max length 64

Att Off/G-Att

XUsed by following mode

LCN Finder Current Activity LCN Monitor Activity Log

# BandScope

Msg1 ASCII code , Max length 64 Msg2 ASCII code , Max length 64

Span 0.2MHz/0.4MHz/0.6MHz/0.8MHz/1MHz/2MHz/ 4MHz/6MHz/8MHz/10MHz/20MHz/40MHz/

60MHz/80MHz/100MHz/200MHz

Hold On/Off Att Off/G-Att

### BandScopeRange

Lower xxxx.xxxxMHz Upper xxxx.xxxxMHz

Mod Auto/AM/NFM/FM/WFM/FMB

 $Step \hspace{3.5cm} 5kHz/6.25kHz/7.5kHz/833kHz/10kHz/12.5kHz/$ 

15kHz/20kHz/25kHz/50kHz/100kHz


PSI, GSI Attribute 24/32

# <<Info Area and Override>>

Scanner has special view area on main screen.

Info Area 1 and Info Area 2 are diplayed Quick keys status in scan mode or Banks status in custum search mode.

Over Write Area is displayed error message or scanning message on channel name area.

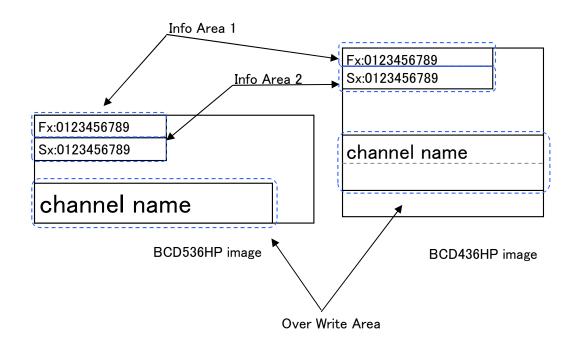

# <<Popup Screen>>

Scanner has popup screen. It shows temporary view for 1-2 seconds. The popup screen is shown on main screen.

It is like toaster in Android OS.


On

Popup screen has a few buttons.

This popup screen is not cleared automatically.

Scanner waits pressed button by user.

It is like Dialog box.

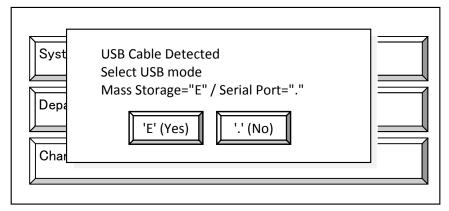

In this case Popup screen has 2 buttons.

If 'E' (Yes) button is pressed, App shoud send "KEY,E,P". E is KeyCode.

# <<PlainText view>>

Plain Text view is kind of view mode in main screen.

# << ReplayDescription >>

# Basic Rule for Response scanner information

# MyId

The system, department, site and channel on Full Database have MyId. The system, department, site and channel copied form full database have MyId. But system, department, site and channel which user created don't have MyId.

MyId relates RadioReference ID.

ID is shown xxId=xx.

e.x.

CountyId=5 AgencyId=15

### ID list

HPDB ID	description	RRDB ID
CountyId	Conventional System ( County )	ctid
AgencyId	Conventional System ( Agency )	aid
TrunkId	Trunked System	sid
CGroupId	Conventional Department	scid
CFreqId	Conventional Frequncy	fid
SiteId	Trunked Site	siteId
TGroupId	Trunked Department	tgCid
Tid	Trunked Channel	tgId

# Note:

Search with Scan doesn't have MyId.

# Index

The index will be used, when you hold or avoid system, department and channel. It is decided when data is downloaded to RAM. It is invalid if DB\_Counter differs.

# Name

ASCII code (20h-7eh) Max Length 64 characters

PSI, GSI Basic rule 28/32

#### AST Analize Start

\_\_\_\_\_

#### ■ Current Activity

#### Controller → Radio

AST,CURRENT\_ACTIVITY,[Site Index]¥r

#### Radio → Controller

format will be XML.

Data is sent in 200ms interval

 C-Ch
 No
 LCN
 Frequency
 SystemID
 SiteID
 TGID Type

 V-Ch
 No
 LCN
 Frequency
 TGID
 Unit ID
 MOD
 TGID Type

#### Parameter

LCN : LCN(decimal)
Freq : Frequency

TGID : Talk Group ID(decimal)
Unit ID : Unit ID(decimal)

MOD : Mode

Analog Digital Encrypted

TgidType : Talk Group ID type

Control Channel Encrypted Patch Unknown TGID I-CALL

SystemID : System ID(hex)
SiteID : Site ID(decimal)

### XML example

AST,<XML>,\fr <?xml version="1.0" encoding="utf-8"?>\fr

<AST>¥r
CurrentActivity LCN="1" Freq="851.0125" SystemID="0001h" SiteID="0" TgidType="Control Channel" />¥r
CurrentActivity LCN="2" Freq="851.0375" TGID="16" UnitID="32" MOD="Analog" TgidType="TGID" />¥r
CurrentActivity LCN="3" Freq="851.0625" TGID="64" UnitID="128" MOD="Analog" TgidType="TGID" />¥r
:
:
CurrentActivity LCN="32" Freq="851.6125" TGID="256" UnitID="512" MOD="Analog" Tgidype="TGID" />¥r
:
CurrentActivity LCN="32" Freq="851.6125" TGID="256" UnitID="512" MOD="Analog" Tgidype="TGID" />¥r

</AST>¥r

\*Before sending AST command, please go to Scan Mode to load the hpdb data

#### ■ LCN Monitor

# ${\sf Controller} \to {\sf Radio}$

AST,LCN\_MONITOR,[Site Index]¥r

#### Radio → Controller

format will be XML.

Data is sent in 1s interval

Parameter

LCN : LCN(decimal)
Freq : Frequency
ReceiveStaus : 1 or 0

XML example

AST,<XML>,\forall r = "851.0125" ReceiveStaus="1" />\forall r < \LonMonitor LCN="1" Freq = "851.0125" ReceiveStaus="1" />\forall r < \LonMonitor LCN="2" Freq = "851.0250" ReceiveStaus="0" />\forall r < \LonMonitor LCN="3" Freq = "851.0375" ReceiveStaus="0" />\forall r < \LonMonitor LCN="4" Freq = "851.0500" ReceiveStaus="0" />\forall r < \LonMonitor LCN="4" Freq = "851.0500" ReceiveStaus="0" />\forall r < \LonMonitor LCN="5" Freq = "851.0625" ReceiveStaus="0" />\forall r < \LonMonitor LCN="32" Freq = "851.4000" ReceiveStaus="0" />\forall r < \LonMonitor LCN="32" Freq = "851.4000" ReceiveStaus="0" />\forall r < \longright req = \longright r

LCN Frequency Status

 $\ensuremath{\mathsf{X}\mathsf{Before}}$  sending AST command, please go to Scan Mode to load the hpdb data

Analyze Command 29/34

Analyze Command 30/34

### ■ Activity Log

XIf temporary clock was set and go to activity log mode, scanner sends NG response.

#### Controller → Radio

AST,ACTIVITY\_LOG,[Site Index]¥r

### Parameter

MM/DD/YYYY hh:mm:ss Time

Data Received raw data (depends on system type) Message Message type (Depends on system type)

Description1-5 Message description (depends on system type). Number of description is depends on message type.

### [Motorola]

cmd command field 0-1023(decimal) private bit 0 or 1 prv id field 0-65535(decimal)

Message	Description1	Description2	Description3	Description4	Description5
System ID	Sid:				
Site ID	Site:				
Talkgroup Voice Channel Grant	Tid:	Uid:	Lcn:	Sts:	Mod:
Talkgroup Voice Channel Grant Update	Tid:		Lcn:	Sts:	
I-Call Voice Channel Grant Update	Uid:		Lcn:		
Individual Call	Uid:	Uid:	Lcn:		
Patch/MultiSelect Voice Channel Grant	Pid:	Uid:	Lcn:	Sts:	Mod:
Patch/Multiselect Voice Channel Grant Update	Pid:		Lcn:	Sts:	
Patch List	Pid:	Mid			
Patch Cancel	Pid:				
Control					
First OSW					
Receive Error					

#### Description

Sid : System ID(hex) Site: Site ID(decimal) Talk Group ID(decimal) Uid: Unit ID(decimal) Pid: Patch ID(decimal) Mid: Patch Member ID (decimal)

LCN(decimal) Lcn:

Status bit Sts:

Normal Talkgroup All Talkgroup Emergency Talkgroup Patch Emergency Patch Emergency Multi-Group

Multi-Select

DES Encryption Talkgroup DES All Talkgroup DES Emergency DES Talkgroup Patch DES Emergency Patch DES Emergency Multi-Group

Multi-Select DES TG

Mod: Modulation

Analog Digital

#### [P25 Standard]

<opecode>/<data> 1byte:00-FF(hex) opecode opecode TSBK data

Message	Description1	Description2	Description3	Description4	Description5
Group Voice Channel Grant	Lcn:	Gad:	Sad:		
Group Voice Channel Grant Explicit	LcnT:	Gad:	Sad:	LcnR:	
Group Voice Channel Grant Update	Lcn:	Gad:	Lcn:	Gad:	
Group Voice Channel Grant Update Explicit	LcnT:	LcnR:	Gad:		
Unit To Unit Voice Channel Grant	Lcn:	Tad:	Sad:		
Unit To Unit Voice Channel Grant Extended	LcnT:	Tad:	Sad:	LcnR:	
Unit To Unit Answer Request	Tad:	Src:			
Unit To Unit Answer Request Extended	Tad:	Src:			
Unit To Unit Voice Channel Grant Update	Lcn:	Tad:	Sad:		
Unit To Unit Voice Channel Grant Update Extended	LcnT:	Tad:	Sad:	LcnR:	
Telephone Voice Channel Grant					

Analyze Command 31/34

	1	Ī	ı	II	1 1
Telephone Interconnect Answer Request					
Identifier Update for X2TDMA					
Individual Data Channel Grant					
Group Data Channel Grant					
Group Data Channel Announcement					
Group Data Channel Announcement Explicit					
SNDCP Data Channel Grant					
SNDCP Data Page Request					
SNDCP Data Channel Announcement Explicit					
Status Update					
Status Query					
Message Update					
Radio Unit Monitor Command					
Call Alert					
Acknowledge Response FNE					
Queued Response					
Extended Function Command					
Deny Response					
Group Affiliation Response					
Secondary Control Channel Broadcast Explicit					
Group Affiliation Query					
Location Registration Response					
Unit Registration Response					
Unit Registration Command					
Authentication Command					
De-Registration Acknowledge					
Identifier Update for TDMA	Iden:	Type:	Tofs:	Csp:	Bfrq:
Identifier Update for VHF/UHF Bands					
Time and Date Announcement	Iden:	Bw:	Tofs:	Csp:	Bfrq:
Roaming Address Command					
Roaming Address Update					
System Service Broadcast					
Secondary Control Channel Broadcast					
RFSS Status Broadcast	Sid:	Sub:	Site:	Lcn:	
RFSS Status Broadcast Extended	Sid:	Sub:	Site:	LcnT:	LcnR:
Network Status Broadcast	Wacn:	Sid:	Lcn:		
Network Status Broadcast Extended	Wacn:	Sid:	LcnT:	LcnR:	
Adjacent Status Broadcast					
Identifier Update for non-VHF/UHF Bands	Iden:	Bw:	Tofs:	Csp:	Bfrq:
Protection Parameter Broadcast					
Protection Parameter Update					
Receive Error					
	1		1	l .	ı

# Description

Lcn LCN(decimal)

Transmit channel LCN(decimal)
Receive channel LCN(decimal) LcnT LcnR Receive channel LCN(decimal Group Address(decimal) Source Address(decimal) Target Address(decimal) Identifier(decimal) Identifier(decimal) Band Width(decimal) Transmit Offset(decimal) Channel Spacing(decimal) Base Frequency(decimal) System ID(hex) RF Sub-system ID(decimal) Site ID(decimal) WACN ID(hex) Channel Type(decimal) Gad Sad Tad Src Iden Bw Tofs Csp Bfrq

Sid

Sub

Site Wacn Channel Type (decimal) Туре

### [EDACS]

		Data
" <data></data>	,	
data	message data	28bits:0000000-FFFFFF(hex)

Message	Description1	Description2	Description3	Description4	Description5
Site ID	Site:		Lcn:		
Talkgroup Voice Channel Grant	Tid:	Uid:	Lcn:	Sts:	
Talkgroup Voice Channel Grant Update	Tid:		Lcn:	Sts:	
I-Call Voice Channel Grant Update	Uid:		Lcn:	Sts:	
Patch Voice Channel Grant	Pid:	Uid:	Lcn:	Sts:	
Patch Voice Channel Grant Update	Pid:		Lon:	Sts:	
Patch List	Pid:	Mid:			
First OSW					
Receive Error					

### Description

Site: Site ID(decimal)

Talk Group ID(decimal 1-2047: AFS, decimal 2048-65535: Decimal) Tid

Uid Unit ID(decimal) Patch ID(decimal) Pid Patch Member ID (decimal) Mid

Analyze Command 32/34 Lcn: LCN(decimal) Sts : Status bit

Normal Talkgroup
Talkgroup Patch
Emergency
Emergency Patch
Digital Talkgroup
Digital Patch
Digital Emergency
Digital Emergency
Digital Emergency
Digital Emergency
Digital Emergency

Digital I-Call

# [LTR]

	Data					
″ <data>″</data>						
data	<area_code>/<goto< td=""><td>o&gt;/<home>/<id>/<free></free></id></home></td></goto<></area_code>	o>/ <home>/<id>/<free></free></id></home>				
area code	Area Code	0 or 1				
goto	Goto Repeater	0-31(decimal)				
home	Home Repeater	0-31(decimal)				
id	Id Field	0-255(decimal)				
free	Free Repeater	0-31(decimal)				

Message	Description1	Description2	Description3	Description4	Description5
Repeater Idle	Tid:	Rpt:	Goto:	Free:	
Talkgroup Voice Channel Grant Update	Tid:	Rpt:	Goto:	Free:	
Turn-off Code	Tid:	Rpt:	Goto:	Free:	

Tid

Talk Group ID (Area-Home-Id) Transmitting Repeater Goto Repeater Rpt Goto Free Free Repeater

# [DMR/MotoTRBO]

		Data			
" <pre>"<opcode>/<fid>/<id>/<ch>/<slot>/<pre>/<emergency>"</emergency></pre></slot></ch></id></fid></opcode></pre>					
opcode	Full/Short Link Control Opcode	00-3F (Hex)			
	Control Signal Block Opcode	00-3F (Hex)			
fid	Feature ID	00(DMR), 06(Connect Plus), 10(Capacity Plus) (Hex)			
id	TGID	0-16777215 (Decimal)			
ch	LCN	0-4095 (Decimal)			
slot	TDMA Slot	1 or 2 or 15(None) (Decimal)			
prv	Privacy	0 or 1			
emergency	Emergency	0 or 1			

Message	Description1	Description2	Description3	Description4	Description5
Talkgroup Voice Channel Grant	Tid:	Uid:	Color Code:	Lcn:	Slot:
Talkgroup Voice Channel Link Control	Tid:	Uid:	Color Code:	Lcn:	Slot:
Unit to Unit Voice Channel Grant	Uid Src:	Uid Dst:	Color Code:	Lcn:	Slot:
Unit to Unit Voice Channel Link Control	Uid Src:	Uid Dst:	Color Code:	Lcn:	Slot:
Broadcast Talkgroup Voice Channel Grant	Tid:	Uid:	Color Code:	Lcn:	Slot:
Capacity Plus Voice Channel Grant	Tid:	Uid:	Color Code:	Lcn:	Slot:
Capacity Plus Update	Sid:	Site:	Color Code:	Lcn:	Slot:
Capacity Plus Site ID	Sid:	Site:	Color Code:	Lcn:	Slot:
Linked Capacity Plus Site ID	Sid:	Site:	Color Code:	Lcn:	Slot:
Connect Plus Voice Channel Grant	Tid:	Uid:	Color Code:	Lcn:	Slot:
Connect Plus Update					
Connect Plus Network ID	Sid:	Site:	Color Code:	Lcn:	Slot:
DMR Network ID	Sid:	Site:	Color Code:	Lcn:	Slot:
Idle					

# Description

Network ID (Hex) Site ID (Decimal) Sid Site Talk Group ID (Decimal)
Unit ID (Decimal) Tid Uid Uid Src Source Unit ID (Decimal) Uid Dst Destination Unit ID (Decimal) Color Code (Decimal) Color Code LCN (Decimal) Lcn Slot TDMA Slot (Decimal)

 $\ensuremath{\mbox{\%}}\mbox{Before sending AST}$  command, please go to Scan Mode to load the hpdb data

# [NXDN]

Data					
" <call th="" type<=""><th colspan="5">"<call type="">/<home ch="">/<id>/<ch>/<prv>/<emergency>"</emergency></prv></ch></id></home></call></th></call>	" <call type="">/<home ch="">/<id>/<ch>/<prv>/<emergency>"</emergency></prv></ch></id></home></call>				
call type	Call Type	0-7 (Decimal)			
home ch	Home Channel	0-31 (IDAS only, Decimal)			
id	TGID	NEXEDGE: 0-65535, IDAS: 0-2047 (Decimal)			
ch	LCN	0-1023 (Decimal)			

Analyze Command 33/34

Ì	prv	Privacy	0 or 1	
ı	emergency	Emergency	0 or 1	

Message	Description1	Description2	Description3	Description4	Description5
Replying to requesting communication	Tid:	Uid:	Area Code:	Home Ch:	
	Uid Src:	Uid Dst:	Area Code:	Home Ch:	
Performing voice communication	Tid:	Uid:	RAN: or Area Code:		
	Uid Src:	Uid Dst:	RAN: or Area Code:		
Sending Encryption init vector					
Assignment of traffic channel to VC	Tid:	Uid:	RAN: or Area Code:	LCN: or Home Ch:	
	Uid Src:	Uid Dst:	RAN: or Area Code:	LCN: or Home Ch:	
Existence of assigned traffic channel to VC	Tid:	Uid:	RAN: or Area Code:	LCN: or Home Ch:	
	Uid Src:	Uid Dst:	RAN: or Area Code:	LCN: or Home Ch:	
Transmission released					
Idle					
Disconnecting					
Site configuration information	Sys:	Site:	RAN:	Cch LCN: or DFA	
Service information which site provides	Sys:	Site:	RAN:		
Information of site's control channel	Sys:	Site:	RAN:	Cch LCN: or DFA	
IDAS go to Repeater	Tid:	Uid:	Area Code:	Go to Repeater:	
	Uid Src:	Uid Dst:	Area Code:	Go to Repeater:	

#### Description

 Sys
 :
 System ID (Decimal)

 Site
 :
 Site ID (Decimal)

 Tid
 :
 Talk Group ID (Decimal)

 Uid
 :
 Unit ID (Decimal)

Uid Src : Individual Call Source Unit ID (Decimal)
Uid Dst : Individual Call Destination Unit ID (Decimal)

RAN : NEXEDGE RAN (Decimal)
Area Code : IDAS Area Code (Decimal)
LCN : NEXEDGE LCN (Decimal)
Go to Repeater : IDAS Repeater Channel (Decimal)
Home Ch : IDAS Home Channel (Decimal)
Cch LCN : NEXEDGE Control Channel (Decimal)
DFA : NEXEDGE Direct Frequency Assignment

\*Before sending AST command, please go to Scan Mode to load the hpdb data

#### ■ LCN Finder

#### Controller → Radio

 ${\sf AST,LCN\_FINDER,[Site\ Index]} \\ {\sf Yr}$ 

# Radio → Controller

format will be XML.

Data is sent in 500ms interval

#### Parameter

Freq : Frequency

AccuracyStatus : Accuracy Level (Total 30 status)

0: Unknown
1: Level 1
2: Level 2
3: Level 3
4: Level 4
5: Found
6: Disable

Condition : Searching All Lcn Found

### XML example

```
AST,<XML>,\footnote{sml} version="1.0" encoding="utf-8"?>\footnote{sml} version="utf-8"?>\footnote{sml} version="utf-8"?</ri>\footnote{sml} version="utf-8"?</ri>\footnote{sml} version="utf-8"?</ri>\footnote{sml} version="utf-8"?</ri>\footnote{sml} version="utf-8"?</ri>\footnote{sml} version="utf-8"?</ri>\footnote{sml} version="utf-8"?</ri>\footnote{sml} version="utf-8"?</ri>\footnote{sml} version="utf-8"?</ri>\footnote{sml
```

 $\fint \fint \fin$ 

### ■ Band Scope

```
Data is sent in 10ms interval

Controlle Radio

AST,B. 2 SCOPE,[Center frequer 1,[Span],[Step],[Modulation]¥r
```

Analyze Command 34/34