FSI, ALE formulation

Sebastian Gjertsen

 $12.\ desember\ 2016$

Fluid Structure Interaction Problem formulation in ALE coordinates

Introduction


Here we will look at the ALE formulation of solving the FSI problem. The ALE approach stands for Arbitrary Lagrangian Eulerian, meaning that we define the fluid problem in an Eulerian framework and the solid problem in an Lagrangian framework. The ALE method can be solved by moving the mesh for each time step, following the structure body movements [Houston paperet]. This approach gives advantages as we can explicitly represent the fluid-structure interface. But problems arise when there are large deformations in solid structure, giving major mesh deformations in the fluid mesh. Another way of approaching the ALE-FSI problem is to used reference or fixed meshes. Instead of updating the mesh for each time step, we instead use a series of mappings to map the solution from a reference mesh and onto our current mesh. First we look at the mapping and identities needed to solve the reference approach to ALE.

Notation

- u Velocity in fluid and structure.
- w Velocity in the domain. It is the velocity of the mesh in the calculations. This will also be the velocity in structure when defined in the lagrangian formulation.
- d Displacement of the solid. The time derivative of the displacement will be the domain velocity.
- p Pressure in the fluid.

Reference domain

Mapping and identites

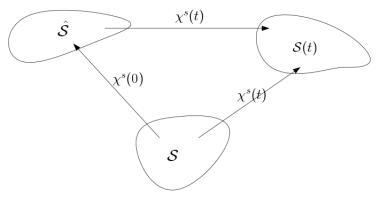

To get an ALE formulation from a reference frame, we need to define a mapping in the solid domain:

$$\chi^s(t): \hat{\mathcal{S}} \to \mathcal{S}(t)$$

We define the \hat{S} as the initial stress free configuration, the S as the reference and the S(t) as the current configuration. The same is for the fluid domain.

$$\chi^f(t): \hat{\mathcal{F}} \to \mathcal{F}(t)$$

The solid mapping is set as $\chi^s(\mathbf{X},t) = \mathbf{X} + d^s(\mathbf{X},t)$ hence giving:

$$d^s(\mathbf{X}, t) = \chi^s(\mathbf{X}, t) - \mathbf{X}$$

$$w(\mathbf{X},t) = \frac{\partial \chi^s(\mathbf{X},t)}{\partial t}$$

where **X** denote a material point in the reference domain and χ^s denotes the mapping from the reference configuration. We denote Γ^1 as the "ceiling" and floor "and the circle and $\Gamma^{2,3}$ as the inlet and outlet. The velocity in the fluid is denoted $u(\mathbf{X},t)$ We define the deformation gradient $F = I + \nabla d$ and J = det(F)

Balance laws

We will formulate the equations in the Eulerian, Lagrangian and the ALE description. The Eulerian description suits a fluid problem nicely as the points in the grid are fixed and the fluid particles move through the domain. Whilst the Lagrangian description fits a solid problem as the material particles are fixed with the gridpoints. The fluid velocity vector and the displacement vector are the quantities describing motion of the fluid and solid respectively. Since we here have fluid structure interaction problem we need to formulate the fluid in the fixed mesh description. The fluid velocity will still be the quantity describing motion but it will also have the displacement of the fluid, describing the change in fluid domain. The solid will be described in Lagrangian. We will only look at incompressible fluids where the volume of the fluid domain stays constant.

Solid

We express the solid balance laws in the Lagrangian formulation from the initial configuration

$$\rho_s \frac{\partial^2 d}{\partial t^2} = \nabla \cdot (J\sigma_s F^{-T}) \quad in \quad \hat{\mathcal{S}}$$

Piola-Kirchhoff tensor following from the St. Venant-Kirchhoff material ($E=\frac{1}{2}(F^TF-I))$:

$$\sigma_s = \frac{1}{J} F(\lambda_s(trE)I + 2\mu_s E) F^{-T}$$

$$S_s = \lambda_s(trE)I + 2\mu_s E$$

$$\lambda_s = \frac{2\mu_s n u_s}{1 - 2\nu_s}$$

Fluid

The fluid equations are denoted from the initial configuration:

$$\rho_f J \left(\frac{\partial u}{\partial t} + ((\nabla u) F^{-1} (u - w)) \right) = \nabla \cdot (J \sigma_f F^{-T}) \quad in \hat{\mathcal{F}}$$

$$\nabla \cdot (J u F^{-T}) = 0 \quad in \quad \hat{\mathcal{F}}$$

As we see the only difference from the usual way of seeing the N-S equations, is that in the convection term we have u-w which is needed since the not only are the fluid particles moving but the domain, here denoted with w as the domain velocity, is also moving. So u-w will be the actual fluid velocity.

To bind together the computation of fluid and structure domain, we need a harmonic extension to the boundary values. For this purpose define the following equation with the fluid domain deformation:

$$\nabla^2 d^f = 0 \quad in \ \hat{\mathcal{F}}$$

This equation is chosen for its good regularity and smoothing properties.

Boundary conditions

$$u(x, y, t = 0) = u_0$$

In the place where the fluid and structure domains meet, i.e the interface. We set a dynamic condition saying that the normal stresses of the solid and fluid are equal:

$$\sigma_f n_f = \sigma_s n_s$$
 on $\Gamma^0(interface)$

These will be written in the Lagrangian formulation:

$$J\sigma_f F^{-T} n_f = \sigma_s n_s$$
 on $\Gamma^0(interface)$

We can introduce a global domain $\Omega \in \mathcal{S} \cup \mathcal{F}$ that is made up of the fluid and the structure and the interface. We define a global velocity function u that is the fluid velocity in the fluid domain and the structure velocity in the structure domain. This can be done due to the interface condition making the velocity field continuous over the entire domain.

Domain move

Here we will look at the approach involving moving the mesh each time step. The fluid equation is simply Navier-Stokes with a domain mapping in the transport term giving:

$$\rho_f \left(\frac{\partial u}{\partial t} + (\nabla u)(u - w) \right) = \nabla \cdot \sigma_f \quad in \mathcal{F}$$

$$\nabla \cdot u = 0 \quad in \quad \mathcal{F}$$

After each timestep we update the mesh and compute this equation over the current mesh. The real velocity of the fluid particles is there for the fluid velocity itself minus the velocity of the mesh.

The solid equations will be formulated similar to before but we can write them with the displacement velocity: $\frac{\partial d}{\partial t} = u_f$:

$$\rho_s \frac{\partial u_f}{\partial t} = \nabla \cdot \sigma_s \quad in \quad \hat{\mathcal{S}}$$

Laplace operator:

$$\nabla^2 d_f = 0 \quad in \ \hat{\mathcal{F}}$$

Boundary conditions stay the same but without mappings:

The two approaches to the ALE method is equivalent [Godboka]. From a technical point of view, both formulations are equivalent. Wether we use a fixed and reference formulation or a moving mesh and Eulerian formulation.

Variational formulation

Reference domain

We use 3 test functions, ϕ, ψ, γ . As mentioned before we use a global velocity function u for both the solid and fluid.

$$\rho_f J \left(\frac{\partial u}{\partial t} + (\nabla u) F^{-1} \left(u - \frac{\partial d}{\partial t} \right), \phi \right)_{\hat{\mathcal{F}}} + (J \sigma_f F^{-T}, \nabla \phi)_{\hat{\mathcal{F}}} = 0 \tag{1}$$

$$(\nabla \cdot (JuF^{-T}), \gamma)_{\hat{\mathcal{F}}} = 0 \tag{2}$$

$$\left(\rho_s \frac{\partial u}{\partial t}, \phi\right)_{\hat{S}} + \left(FS_s, \nabla \phi\right)_{\hat{S}} = 0 \tag{3}$$

$$(\nabla d, \nabla \psi)_{\hat{\tau}} = 0 \tag{4}$$

$$\left(u - \frac{\partial d}{\partial t}, \psi\right)_{\hat{\mathcal{S}}} = 0$$
(5)

Equation (5) has not been addressed and is added since we use a global function for velocity we need to force that the structure velocity is the time derivative of the deformation in the structure domain.

Domain move

We then look at the variational formulation for moving the mesh, here we employ a global function for u in the fluid and solid. Which is the fluid velocity in the fluid domain and displacement velocity solid domain. And in the last equation we force \boldsymbol{w} to be the solid displacement in the solid domain.

$$\rho_f \left(\frac{\partial u}{\partial t} + (\nabla u)(u - w), \phi \right)_{\mathcal{F}} + (\sigma_f, \nabla \phi)_{\mathcal{F}} = 0$$

$$\left(\nabla \cdot (u), \gamma \right)_{\mathcal{F}} = 0$$

$$\left(\rho_s \frac{\partial u}{\partial t}, \phi \right)_{\mathcal{S}} + \left(\sigma_s(d), \nabla \phi \right)_{\mathcal{S}} = 0$$

$$\left(\nabla d, \nabla \epsilon \right)_{\mathcal{F}} = 0$$

$$\left(w - u, \epsilon \right)_{\mathcal{S}} = 0$$