


Draussenfuchs Antenna

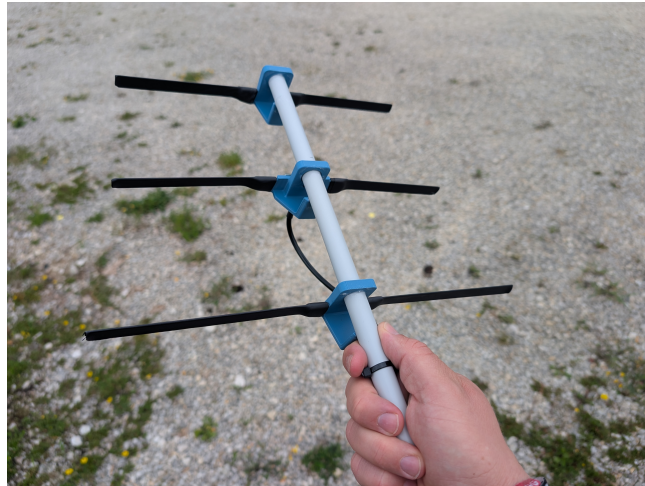

Amount	Description
1	Measurement Tape
2	3D printed parts
1	3D printed parts for PCB
100 mm	Heat shrink tubing 12 mm with glue
1 m	Heat shrink tubing 12 mm without glue
300 mm	Installation pipe (16 mm diameter)
1	Yagi-PCB
1	SMA-Connector
2	Ziptie 150 mm (optional)

Difficulty: ●●○○○ Build-Time: 30 – 50 Minutes

Manual v2.0  CC BY-SA 4.0 Binary Kitchen e.V.
Building Kit v2.0 MIT License [Harm, DK4HAA, draussenfuchs.de]

Safety Information

- ATTENTION: Not suitable for children under 3 years, choking hazard due to small parts that may be swallowed.
- We recommend: Supervision of the assembly and soldering process by an adult.
- Keep these operating instructions in a safe place for later use! It contains important information.
- If the battery is empty, replace it only with a new battery with the same values.
- When soldering, the soldering iron, the solder and also the components being soldered become very hot.
- Always wear safety glasses when soldering and assembling the kit.
- Always use a fire proof soldering pad when soldering! This prevents the components from slipping away.
- To keep the soldering iron safe during assembly, always use a suitable soldering stand.
- The kit is designed for battery operation only.
- CAUTION: Never connect the kit to 230 V mains voltage! There is an absolute danger to life!
- Please take the device to appropriately certified disposal companies at the end of its service life. This is good for the environment and ensures correct disposal.
- Subject to changes and errors.

Disposal

This appliance is labelled in accordance with the European Directive 2012/19/EU on waste electrical and electronic equipment (WEEE). The directive provides the legal framework for the take-back and recycling of waste equipment throughout the EU.

- **packaging:** The packaging is made of environmentally friendly materials and is therefore recyclable. Dispose of packaging materials that are no longer needed accordingly.
- **waste equipment:** Old appliances often still contain valuable materials. Therefore, hand in your old appliance to your retailer or a recycling centre for reuse. Please ask your retailer or your local authority for the current disposal routes.

blinkyparts GmbH
Egerstr. 9
93057 Regensburg
GERMANY
blinkyparts.com



Step 1

- a) Check, to make sure all parts are present.



Step 2

- a) Pull the measuring tape all the way out of the dispenser and unhook it at the end.
b) Let the spring snap back into the dispenser.
c) Cut off the metal plate at the end of the measuring tape.
d) Cut 4 pieces to the following lengths: 1 x 346 mm, 2 x 145 mm, 1 x 280 mm.
e) Slightly round off the corners of the pieces.




Step 3

- a) Sand off the paint on one end of each of the two short tape measure pieces over a length of about 1.5 cm.



Step 4

- a) Take the circuit board and the SMA jack.
- b) Solder the SMA jack onto the circuit board.
- c) Make sure, that all solder joints are clean and secure.

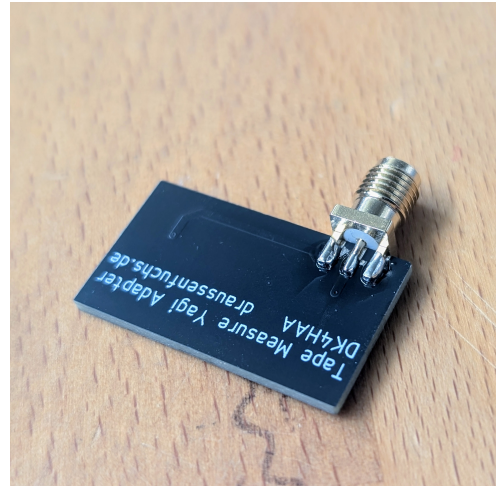


Step 5

- a) Apply a generous amount of solder to the large solder pads on the circuit board.
- b) Also apply sufficient solder to the outwardly curved side of the measuring tapes so that the heat is distributed more evenly.
- c) Then solder the measuring tapes to the circuit board.
- d) Make sure the measuring tapes are aligned parallel to each other and that the edge of the measuring tape is flush with the edge of the solder pad. It should not extend beyond it.




Step 6

- a) Take the two 3D-printed parts of the same color and slide the 280 mm segment and the 346 mm segment into the slot on the side, respectively.
- b) Slide them in until the tape measure is centered and the same amount of tape sticks out at both ends.

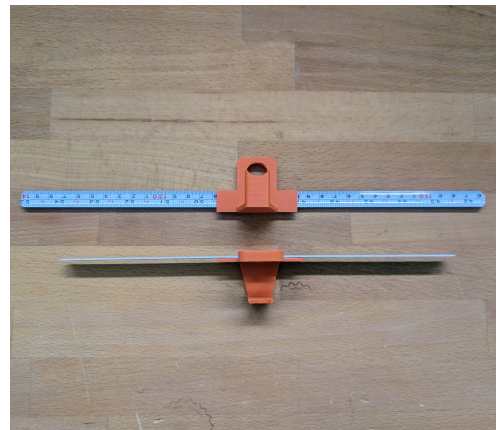

Step 7

- Cut the short piece of heat-shrink tubing with adhesive into pieces about 20 mm long.
- Place the soldered tape measure into the cutout of the remaining (different-colored) 3D-printed part.
- Now slide the heat-shrink tubing over the tape measure so that it covers the outer sides of the 3D-printed part.
- Caution: The 3D-printed part cannot withstand too much heat. Be careful when using a heat gun or lighter here.
- Heat the heat-shrink tubing so that it shrinks and bonds the 3D-printed part to the antenna.

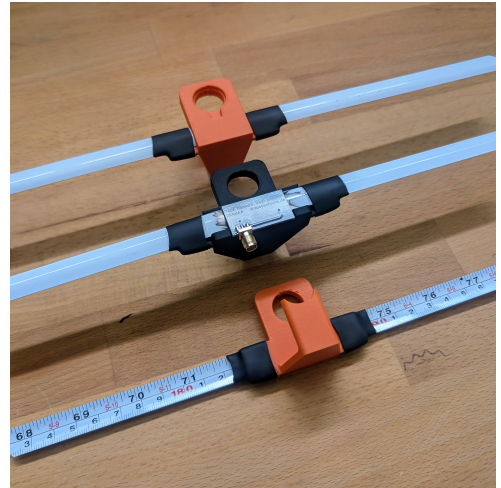


Step 8

- Cut the long heat-shrink tubing into 6 pieces.
- These should be long enough to extend from the center of the antenna to just past the ends of the measuring tapes.
- Now shrink the long pieces of heat-shrink tubing onto the measuring tapes.
- Make sure the ends of the measuring tapes don't stick out, as they can be very sharp.



Step 9

- Now take the insulation tube and slide the 3D-printed parts onto it: The shortest one goes flush with the tip (position 0 mm). Next comes the antenna part, which was soldered, at position 110 mm. Finally, place the longest part at position 230 mm.

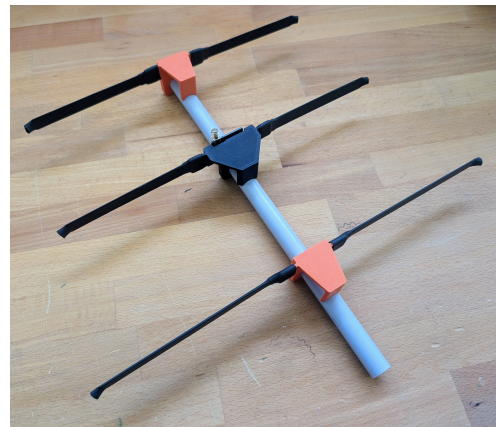


Step 10

- Now align the individual antennas with each other so that they are in the same plane. Check the distances again, and then glue the plastic tube to the 3D-printed parts.



Step 11

- a) Take two cable ties and secure the circuit board to the 3D-printed part. This isn't absolutely necessary, but it helps keep everything in place better.
- b) Tip: In the picture, you can also see how to fold in the antenna arms.

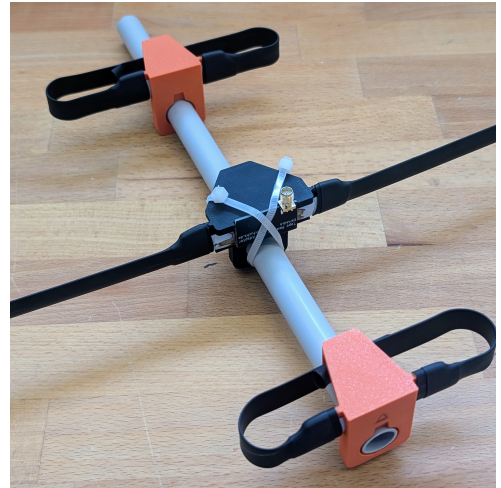

Step 12

- a) You're done! Now try to find your first fox!

