
IoT Lab. Record


LAB 1: Blinking the inBuilt LED

```
void setup() {
pinMode(LED_BUILTIN,
OUTPUT);
}
void loop() {
digitalWrite(LED_BUILTIN,
HIGH);
delay(1000);
digitalWrite(LED_BUILTIN,LOW);
delay(1000);
}
# Wokwi 1
```

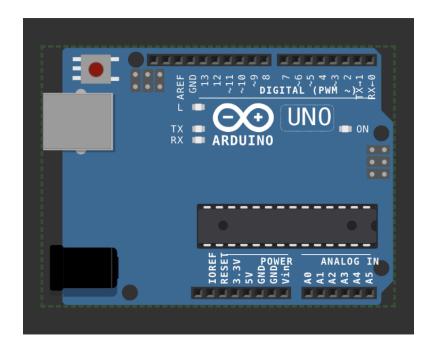

LAB 2 : Blinking an external LED

```
#define led_pin 11
void setup() {
pinMode(led_pin, OUTPUT);
}
void loop() {
digitalWrite(led_pin, HIGH);
delay(1000);
digitalWrite(led_pin,LOW);delay(1000);
}
# wokwi 2
```

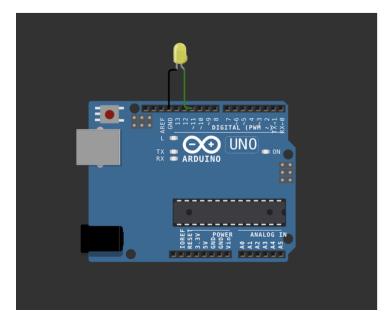

Lab 3: Using DHT sensor

```
#include <DHT.h>
#define pin 7
#define DHTTYPE
DHT22
DHT dht(pin, DHTTYPE);
float humid, temp;
void setup() {
Serial.begin(9600);
dht.begin();
void loop() {
delay(200);
humid =
dht.readHumidity();
temp =
dht.readTemperature();
Serial.print("Humidity:");
Serial.print(humid);Serial.print("% Temperature: ");
Serial.print(temp);
Serial.println("°C");
                                          Humidity: 40.00%
                                                             Temperature: 24.00°C
                                          Humidity: 40.00%
                                                             Temperature: 24.00°C
delay(1000);
                                          Humidity: 40.00%
                                                             Temperature: 24.00°C
                                                             Temperature: 24.00°C
                                          Humidity: 40.00%
```

#Wokwi 3

Lab 4: Using Mosquitto MQTT (Pub-Sub):

Starting Mosquitto MQTT:

Setting up Publisher & Sending Message:

```
[kritimanileishangthem@lei ~ % mosquitto_pub -h localhost -t lab_example -m "I am] a publisher to this topic "
kritimanileishangthem@lei ~ % ■
```

Setting up Subscriber & Receiving Message:

The mosquitto server is downloaded and implemented in the UNIX terminal of my laptop.

There are 3 photos of which 1 of each represent the part of an mqtt (a broker and client(subscriber and publisher)):

- 1. Start the mosquitto server by the typing the code [brew services start mosquitto].
- 2. in another terminal we made a subcriber to the [lab_example] topic using the code [mosquitto_sub -h

localhost -t lab_example]

3. in another terminal i made a publisher to the topic [lab_example] using [mosquitto_pub -h localhost -t


lab_example -m "\\l am a publisher to this topic\\"]

4. stop the server with the code [brew services stop mosquitto] ## We can also allow subscribers to subscribe to our topic using our network.

Lab 5: Building a web app using Node-Red to fetch DHT sensor data and display it on the web app dashboard

Installing & Initialising node red:

- Open node.js > npm install node-red-dashboard
- [postinstallation] > elevated cmd: node-red
- In client application, browsed localhost:1880 [accessing node red]:
- Inside the nodered window, a flow was created w/ the nodes as:
- serial-in (arduino uno r3 board)
- debugger
- dht function
- 2 gauges (humidity & temperature)

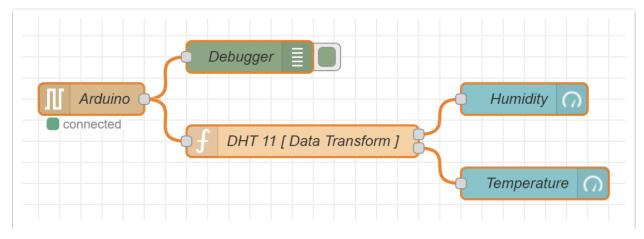

- Serial in node: configured it to read from the correct serial port where my arduino is connected (e.g., com7) > set the baud rate to 9600.
- Configure the dht function as:

```
var m = msg.payload.split(',');
if (m.length === 2) {var h = { payload: parsefloat(m[0]) };
var t = { payload: parsefloat(m[1]) };
return [h, t];
} else {
return null; }
```

ADJUSTING GAUGE NODES:

HUMIDITY:

- TITLE AS "HUMIDITY".
- VALUE FORMAT AS ' {{VALUE}}% '.
- RANGE VALUE: 0 ~ 100 %.

TEMPERATUE:

- TITLE AS 'TEMPERATURE '.
- VALUE FORMAT AS ' {{VALUE}}°C '.
- **ENSURE THAT HUMIDITY & TEMPERATURE ARE IN THE SAME GROUP

DEPLOYMENT:

UPLOADED DHT11 /22 SKETCH TO THE ARDUINO BOARD

```
THROUGH ITS IDE:
#include <dht.h>
#define dhtpin 3
#define dhttype dht11
dht dht(dhtpin, dhttype);
void setup() {
serial.begin(9600);
dht.begin();
void loop() {
float h = dht.readhumidity();
float t = dht.readtemperature();
if (isnan(h) || isnan(t)) {
serial.println("failed to read from dht sensor!");
}
else {
serial.println(string(h) + "," + string(t));
delay(2000);
```


- AFTER UPLOADING THIS SKETCH, CLOSE THE IDE.
- DEPLOY THE FLOW IN NODERED.
- CHECK THE DASHBOARD IN THE UPPER-RIGHT CORNER, FOR THE HUMIDITY AND

TEMPERATURE GAUGE.

OUTPUT ON THE DASHBOARD:

Humidity/Temperature

Humidity

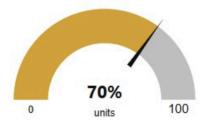

Temperature




LAB 6: Working with ultrasonic sensors.

Measuring distance of a thing using ultrasonic sensors

CODE:

#include <DHT.h>
#define PIN_TRIG 9
#define PIN_ECHO 8

```
void setup() {
Serial.begin(9600);
pinMode(PIN TRIG, OUTPUT);
pinMode(PIN_ECHO, INPUT);
void loop() {
digitalWrite(PIN_TRIG, HIGH);
delayMicroseconds(10);
digitalWrite(PIN_TRIG, LOW);
int duration =
pulseIn(PIN_ECHO,
HIGH);
float distanceCm = duration /
58.0;
Serial.print("Distance in CM: ");
Serial.println(distanceCm);
delay(1500);
```

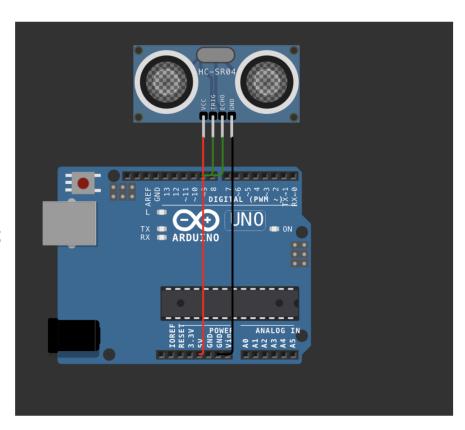

Lab#7 Use of Breadboard

Breadboard Usage Note

A breadboard is a device for creating temporary electronic circuits without soldering. It is an

essential tool for prototyping and testing electronic circuits quickly and easily.

Key Features

1. Rows and Columns: Breadboards have rows (numbered) and columns (lettered). The rows

in the middle are typically connected horizontally, while the side rows (power rails) run

vertically and are useful for connecting power supplies.

- 2. Power Rails: These are long rows along the edges, usually marked with a red (+) and blue
- (-) line, used for distributing power across the board.

HOW to use a Breadboard

1. 2. 3. 4. Insert Components: Push the leads of components into the holes. Make Connections: Use jumper wires to connect components.

Power Connections: Connect your power source to the power rails first to distribute power


across the board easily.

Avoiding Overload: Breadboards can handle only low current and low power. High

currents can damage the contacts, so avoid overloading.

Tips

- Plan the Layout: Organize the layout of components and wires to minimize clutter.
- Check Connections: Ensure each component and wire is fully inserted.

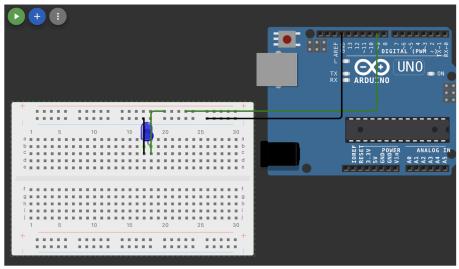

Lab#8 Use of ESP32, upload code on ESP 32 to blink onboard LED

```
Step 1: install esp32 board from the board manager
Step 2: choose the esp32 board from the port
Step 3: compile and upload the code.
Code 1: blinking inbuilt led
#define LED PIN 2
void setup() {
pinMode(LED_PIN, OUTPUT);
void loop() {
digitalWrite(LED PIN, HIGH);
delay(1000);
digitalWrite(LED_PIN, LOW);
delay(1000);
}
Code 2: Finding nearby using esp32
#include "WiFi.h"
void setup() {
Serial.begin(9600);
WiFi.mode(WIFI STA);
WiFi.disconnect();
delay(100);
Serial.println("Setup done");
}
void loop() {
Serial.println("Scan start");
int n = WiFi.scanNetworks();
Serial.println("Scan done");
if (n == 0) {
Serial.println("no networks found");
} else {
Serial.print(n);
```

```
Serial.println(" networks found");
Serial.println("Nr | SSID for (int i = 0; i < n; ++i) {
Serial.printf("%2d", i + 1);
| RSSI | CH | Encryption");Serial.print(" | ");
Serial.printf("%-32.32s", WiFi.SSID(i).c str());
Serial.print(" | ");
Serial.printf("%4Id", WiFi.RSSI(i));
Serial.print(" | ");
Serial.printf("%2Id", WiFi.channel(i));
Serial.print(" | ");
switch (WiFi.encryptionType(i)) {
case WIFI AUTH OPEN: Serial.print("open"); break;
case WIFI AUTH WEP: Serial.print("WEP"); break;
case WIFI AUTH WPA PSK: Serial.print("WPA"); break;
case WIFI AUTH WPA2 PSK: Serial.print("WPA2"); break;
case WIFI AUTH WPA WPA2 PSK: Serial.print("WPA+WPA2"); break;
case WIFI AUTH WPA2 ENTERPRISE: Serial.print("WPA2-EAP"); break;
case WIFI AUTH WPA3 PSK: Serial.print("WPA3"); break;
case WIFI AUTH WPA2 WPA3 PSK: Serial.print("WPA2+WPA3"); break;
case WIFI AUTH WAPI PSK: Serial.print("WAPI"); break;
default: Serial.print("unknown");
Serial.println();
delay(10);
                                    Scan done
                                    5 networks found
}
                                    Nr | SSID
                                                                   | RSSI | CH | Encryption
                                     1 | DIRECT-XNLAPTOP-04GPE3T1msUJ | -40 | 10 | WPA2
                                     2 | Taambdi_Chaamdi
                                                                  | -65 | 10 | WPA2
Serial.println("");
                                     3 | TP-Link 56E8
                                                                   | -89 | 2 | WPA2
                                     4 | TP-Link_68D8
                                                                   | -89 | 10 | WPA2
WiFi.scanDelete();
                                     5 | No Internet
                                                                   | -92 | 4 | WPA2
delay(5000);
                                    Scan start
                                    Scan done
                                    4 networks found
                                                                   | RSSI | CH | Encryption
                                     1 | DIRECT-XNLAPTOP-04GPE3T1msUJ | -49 | 10 | WPA2
                                                                   | -59 | 10 | WPA2
                                     2 | Taambdi Chaamdi
                                                                   | -87 | 2 | WPA2
                                     3 | TP-Link 56E8
```