# ARMv7M Rigel RTOS User Manual

Manual Version: 0.0.1

Software Version: 0.0.1

**DISCLAIMER:** This user manual refers to software that has not yet been verified as fit for use for any purpose. It is made available as an early preview for evaluation purposes only.

CONFIDENTIAL. DO NOT DISTRIBUTE: This document is commercial in confidence. It is provided for use by participants in the Secure, Mathematically-Assured Composition of Control Models (SMACCM) project who have executed a project agreement with National ICT Australia Limited (NICTA). This document and information in it are proprietary to NICTA and are not to be given to any other persons without NICTA's written permission.

# **Revision History**

Version	Date	Description.
0.0.1	25 April 2013	Initial document release for partner evaluation.

Concepts	4
Tasks	4
Scheduler.	7
Signals.	9
Interrupt (Exception) Handlers.	10
Interrupt Events.	10
Startup.	11
Core API Reference.	12
Illegal API Usage.	12
APIs.	12
Types.	13
Taskld	13
Signalld	13
SignalldOption	13
SignalSet	13
Constant defines.	14
SIGNAL_ID_NONE	14
Function APIs.	15
start	15
yield	15
signal_wait_set	15
signal_poll_set	15

signal_peek_set	16
signal_send_set	16
ira event raise	16

# **Concepts**

This chapter introduces the concepts that form part of the RTOS. The RTOS provides a core, as well as a set of services that build upon the core. Services are optional, and their functionality could be duplicated by application code if necessary. This document currently describes the core API.

The concepts defined in this chapter should be familiar to readers who have experience in other real-time operating system. Although most real-time operating systems provides a similar set of concepts and primitives the details for each often differ in significant aspects so the chapter is recommended for all readers.

# Core

This section describes the core concepts of the RTOS. The RTOS core provides a set of data structures, algorithms and APIs that have been carefully selected to work together. Except as specifically noted it is not generally possible to change the core concepts.

#### **Tasks**

The microcontroller is at its heart a device which executes an infinite stream¹ of instructions that modifies internal state and controls external devices. The challenge for an embedded programmer is work out which instructions should be executed to obtain the desired behaviour. For systems with simple requirements this can be easily achieved with a single infinite loop, however as the inherent complexity of requirements increase a single infinite loop becomes too complicated to effectively develop, reason about or debug.

```
void main(void)
{
   for (;;) {
    /*... do stuff ...*/
   }
}
```

<sup>&</sup>lt;sup>1</sup> Strictly speaking the stream of instruction is finite due to physical limitations.

One approach for dealing with this complexity is to provide an abstraction multiple infinite streams of instructions which multiplex on to the single underlying stream. This allows the system designer to describe the system as multiple infinite loops, each of which is simple enough to effectively develop, reason about and debug. The *task* is the RTOS concept for this abstraction.

```
void task_a(void)
{
  for (;;) {
    /*... do stuff ...*/
  }
}
void task_b(void)
{
  for (;;) {
    /*... do stuff ...*/
  }
}

Provid task_c(void)
{
  for (;;) {
    /*... do stuff ...*/
  }
}

Provid task_c(void)
{
  for (;;) {
    /*... do stuff ...*/
  }
}
```

Each task in the system is defined to have an *entry point*. The entry point is the location in program RAM where the task's execution starts from. In general this will be a function with a type signature void fn (void).

Each task in the system has a defined **stack**. The stack is primarily used by the code executing in the task for holding variables and return addresses during function calls. It is additionally used by the RTOS to save registers during a task switch. The size of each stack is chosen by the application programmer, and should be tailored to each task. Each task may have a different stack size.

The task that is currently executing on the microcontroller is known as the *active task*. To implement multiplexing the RTOS must provide a mechanism for changing the currently active task. This mechanism is called a *task context switch*. The tasks's *context* refers to all the state associated with the task but for which the underlying hardware can only support one copy at a time. Specifically, the processor only supports a single program counter, stack<sup>2</sup> and register state. During a context switch the RTOS will save the active tasks state (primarily on the stack) and restore the state from the new task so that it may become active.<sup>3</sup>

<sup>&</sup>lt;sup>2</sup> Switching the stack only requires changing the stack pointer register as stacks are defined in software and not fixed by the hardware.

<sup>&</sup>lt;sup>3</sup> The context switch operation only switches core registers, customisations can be made to support switching other state such as stack protection registers.

A task switch only occurs when the currently active task explicitly releases the processor through a *yield* operation (see also yield API). As a task must explicitly yield it can never be preempted by another task in the system (although it can be preempted by exception handlers). When a task performs a yield operation the RTOS is responsible for choosing which task becomes active. The chosen task must be runnable. In the case where the active task is the only runnable task then a yield operation does not change the currently active task. When more than one other task is runnable then the scheduler will choose the next task to become active.

There are often times when a task has no useful work to do. For example, it may be waiting for input from a device. Rather than forcing the the task to constantly yield it can instead *wait*. A task can therefore be described as either *waiting* or *runnable*. A waiting task will never become the active task (i.e. the active task is always runnable). A waiting task is sometimes described as being *blocked* or *blocking*. The signal concept further describes the mechanism by which a task can become waiting or runnable. When a task becomes blocked the RTOS will choose a new task to be active in a similar process as described for the yield operation. There is however one key difference, in this case it is possible to have the case where there are zero runnable tasks. In this case no task can become active, so the RTOS enters an *idle* mode. When in idle mode the RTOS waits until a task becomes runnable<sup>5</sup>. Depending on the configuration of the RTOS idle mode may place the system in a low-power mode.


Tasks are reference by a TaskId. TaskIds are integers in the range **0** thru **n-1** where **n** is the total number of tasks in the system. Each task has a unique TaskId. Depending on the number of tasks in the system the TaskId will either be an 8-, 16- or 32-bit integer.

<sup>&</sup>lt;sup>4</sup> While this may appear obvious there is an alternate design where the yield task can directly choose the next task itself.

<sup>&</sup>lt;sup>5</sup> This can only happen due to an exception handler executing. The exact mechanism is described in the section on interrupt events.

#### Scheduler.


The scheduler is an important sub-component of the RTOS. The scheduler provides an algorithm for choosing which is all the runnable tasks should be chosen to become active. The algorithm in this RTOS is a *round-robin* algorithm.<sup>6</sup>

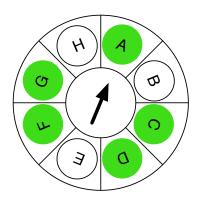

The tasks in the system can be imagined as forming points on a clock-face, which the clock hand pointing to the currently active task<sup>7</sup>. To decide the next task the algorithm moves the hand forward by one until a runnable task is found. In the example on the left, **A** is the currently active task. The algorithm will firstly consider **B** which is not runnable, and the consider **C** which is runnable, so C will be chosen. The scheduling algorithm can optimise certain case such as when there are zero or one runnable tasks.


The following diagram shows the state of the scheduler after choosing **C**.

Now that **C** is chosen as the currently active task consider the where **B** becomes runnable. As the hand has already moved past **B** the scheduler moves on to selecting **D**.

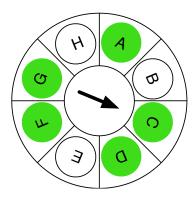

<sup>&</sup>lt;sup>6</sup> Other algorithms (e.g. priority, FIFO) may be more appropriate for given applications.

<sup>&</sup>lt;sup>7</sup> In the case of switching due to a task blocking, then consider currently active task as the most recently active task.

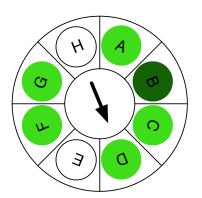


As **D** was runnable before **B** became runnable this behaviour is what would be expected in most cases (and is the same as would happen in a FIFO algorithm).

The exact behaviour of the scheduler becomes slightly more interesting, and possibly somewhat unexpected if task  ${\bf E}$  should now become runnable.

In this case **E** can be selected by the

scheduler, even though it only just became runnable. Not only does **E** become runnable before **B**, it also makes it in front of both **F** and **G**. This is of course different to how a scheduler using a FIFO algorithm would operate.

For every revolution of the clock hand each task has an opportunity to become active. This algorithm has the property that execution tasks always occurs in a predictable order. For example, if **A**, **B**, and **C** are all runnable then the order of execution will always be **[A,B,C]**, and never, **[B,A,C]** or some other permutation.

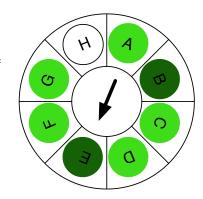

The order of tasks in the scheduler is determined by their Taskld.

#### Signals.

**Signals** provide a low-level mechanism for controlling when tasks are runnable and when the are blocked. A task can wait to receive a signal, and it will become runnable when another task (or interrupt) sends it the signal it is waiting for.

Each task has a set of signals. The size of the set is a system wide configuration option and can be 8, 16, or 32. The recommended size is 8. A specific signal is identified by its SignalId. A SignalId is only unique within the context of a specific tasks. A specific signal must be referred to by a tuple <TaskId, SignalId>. A group of signals is called a signal set and specified by the SignalSet type.

A task can **wait** on one or more signals <sup>8</sup> (see signal\_wait\_set API). If one or more of the requested signals has been sent to the task, one of the sent signals will be **delivered** to the task. If none of the requested signals have been sent to the task, then the task will block until one of the signals is delivered. The wait operation always acts as a yield point, even in the case where a requested signal is immediately available. Two optional operations are also available. A task can **peek** (see signal\_peek\_set API) to determine if a signal is available without delivering the signal. Additionally a task can **poll** (see signal\_poll\_set API) which will delivery a signal if available, but other return immediately with an error code. Neither the peek or poll operation cause a yield to occur.

Signal delivery occurs when a users waits or polls for a signal. Although a user can request multiple signals, only one signal is delivered each time. In the case where multiple signals are available the signal with the lowest Signalld is delivered.

A task can **send** one or more signals to a specific task<sup>9</sup> (see signal\_send\_set API). Sending a signal does not cause a yield to occur, a task must explicitly yield after sending a signal if that is the desired behaviour. If a task has already has a specific signal pending then it is lost; there is no queuing of signals.

<sup>&</sup>lt;sup>8</sup> Strictly a task can also wait on zero signals, however this will block a task permanently.

<sup>9</sup> A task is permitted to send signals to itself, although this is likely of limited utility.

# Interrupt (Exception) Handlers.

Tasks in the system run in the standard mode. Applications can additionally register **exception handlers** that execute when a particular exception occurs. This is generally done automatically through RTOS configuration. Exception handlers will preempt any application tasks and the RTOS itself. Effectively exception handlers run at a higher priority than tasks, and do not need to wait until a task explicitly yields. In return for these advantages there are certain important constraints that are placed upon exception handlers.

The exception handler must be finite, that is the function must return. As the exception handler executes at a higher priority than the rest of the system, the system is effectively blocked until the exception handler finishes processing.

Exception handlers execute on the stack of the currently active task. For this reason the exception handler should limit stack usage. As the exception handler may interrupt any task, each task must have enough stack for both its own usage and that of the largest exception handler.

As the system may be interrupted at any time it is important that the exception handler is careful with what data structures it uses, as the interrupted code may be in the process of updating the data structure. For this reason exception handlers are not generally able to call any RTOS APIs. There is of course the need for exception handler to notify tasks when certain events occur. The RTOS provides a very specialised interrupt events mechanism (see next section) to allow an exception handler to send a signal to a task.

#### Interrupt Events.

Interrupt events provide the bridge between the other distinct task and exception handler world. The system can be configured with a number of *interrupt events*. Each interrupt event is associated with a TaskId and SignalSet.

An exception handler is able to *raise* an interrupt event (See irq\_event\_raise API). This is able to be done in an atomic manner so does not cause any data race problems. When an interrupt event is raised it indirectly causes the associated SignalSet to be sent to the associated task. To ensure the integrity of data structures the SignalSet is not sent to the task until the next yield point. When a yield occurs any interrupt events are processed before consulting the scheduler, in this manner if any interrupt event causes a task to become runnable that task will be eligible for selection at the next yield point.

0	+~	u-li			
J	ιa	π	u	IJ	

The RTOS start API should be called form the system's main function. This API ensures that all data structures are correctly initialised. After this occurs all tasks are automatically started by the RTOS.

# Core API Reference.

#### Illegal API Usage.

Some APIs describe way in which the API can be used which is illegal. Users of the API are responsible for ensuring that the API is used correctly. The specific behaviour that occurs when an API is used incorrectly is undefined. Illegal usage may cause a task crash, a software reset, or it may *appear* to work. Some illegal usages may be detected by static analysis tools.

#### APIs.

The APIs described include both function and function-like macros. To ensure performance some APIs are implemented as macros. Unfortunately the primary compiler does not support static inline functions, so macros must be used. This means that the compiler will not necessarily be performing the optimum level of type-checking to ensure program correctness. The types described in the API must be adhered to even in the case where the API is implemented as a macro.

## Types.

#### TaskId

A TaskId is used to refer to a specific task. The underlying type is an unsigned integer of a size large enough to represent all tasks. The TaskId should generally be treated an an opaque value. Arithmetic operations should not be used on a TaskId. For specialised purposes the programmer can assume that TaskId are in the range 0 thru n - 1, where n is the number of tasks in the system. For example if a per task data structure is required it is valid to use a fixed size array and index the array by using the TaskId. For iterating over such an array it is valid use to increment a TaskId, however care must be taken to ensure the resulting value is in range. TaskId can be tested for equality, however other logical operations (e.g. comparison) should not be used.

## SignalId

A SignalId refers to a signal within the context of a specific task. The underlying type is an 8-bit unsigned integer. The SignalId should be treated as an opaque value and should not be used in arithmetic or logical operations other than direct equality comparisons.

#### SignalIdOption

A SignalIdOption type contains all values as described for SignalId, but has an additional value called SIGNAL\_ID\_NONE. In all other respects this type is identical to the SignalId type. This type is used only as a return value for the signal\_poll\_set API. A SignalIdOption value can be compared for equality against a SignalId value, otherwise it can not be used in place of a SignalId. If a SignalIdOption has a value other than the SIGNAL\_ID\_NONE value, then it can be legally cast to a SignalId.

#### SignalSet

A SignalSet is used to refer to multiple SignalId-s at the same time. The underlying type of a SignalSet is an 8-, 16- or 32-bit unsigned integer large enough to represent all possible signals.

#### Constant defines.

The following pre-processor macro definitions are made available as constants. Ideally these would be made available as typed *static const* variables, however the compiler does not provide optimal code generation in that case, so pre-processor #define is used instead.

## SIGNAL\_ID\_NONE

The constant has the type SignalIdOption. This value can be compared against the return value of the signal\_poll\_set API.

#### **Function APIs.**

#### start

```
void start(void);
```

The start initialises the RTOS, and jumps to the first task in the scheduler. This function should be called from the system's main function. This function does not return.

#### yield

```
void yield(void);
```

This function will yield to another runnable task. Each task must yield frequently to ensure all tasks have a share of execution. When yielding any raised interrupt events will be processed. In the case where the current task is the only runnable task, the caller can rely on the operation being fast.

#### signal wait set

```
SignalId signal wait set(SignalSet sigset);
```

The signal\_wait\_set API allows a task to simultaneously wait for one or more signals. The task will block until one of the requested signals is available. Only one signal will be delivered for each call. The actual signal delivered is returned. If a signal is available immediately (without needing to block) this API implies a yield operation.

# signal\_poll\_set

```
SignalIdOption signal_poll_set(SignalSet sigset);
```

The signal\_poll\_set API work in a similar manner to the signal\_wait\_set API, however instead of blocking if a signal is unavailable the API will return immediately. SIGNAL\_ID\_NONE will be returned if no signal is delivered. The signal\_poll APIs do not imply a yield operation, even in the case where a signal is delivered.

# signal peek set

```
bool signal_peek_set(SignalSet sigset);
```

The signal\_peek\_set API can be used to determine if a signal is available for delivery. In all cases true is returned if the requested signal could be delivered, false otherwise. If signal\_peek\_set is called before a call to signal\_wait\_set with the same arguments and returns true, then signal\_wait\_set is guaranteed not to block. If signal\_peek\_set is called before a call to signal\_poll\_set with the same argument and returns true, then signal\_poll\_set is guaranteed to return a valid SignalId. This function does not imply a yield operation.

## signal send set

```
void signal_send_set(TaskId task, SignalSet sigset);
```

The signal\_send\_set API makes the specified signal set available on the specific task. If the signal was already available on the specified task, then this operation does not change the state of the system. The API does not imply a yield. The caller must explicitly yield if that is the intended behaviour.

## irq event raise

```
void irq_event_raise(IrqEventId);
```

The irq\_event\_raise API provides the interface that enables an exception handler to raise an interrupt event. While it is possible for a task to call this API, it is expected to only be called from an exception handler. Tasks can directly call signal\_send\_set API so do not need to indirect through the interrupt event.