Introduction



Getting started...

Thank you!

Thank you for choosing **PDM Convert Task Extended** ☑!

About

PDM Convert Task Extended is a SOLIDWORKS PDM Professional task Add-in that can export SOLIDWORKS documents to a large number of extensions and merge PDFs.

Support

For additional support, please contact us through the **contact** ✓ page.



Before reaching out, we highly suggest you read the content of this page. We have compiled these help topics to respond to the frequently asked questions by our customers.

Installing the PDM Add-in manually

This section contains information about installing the PDM Add-in using the binaries or the CEX file you find in your Blue Byte Systems Inc. account downloads section.

PDM Professional Version

The minimum version PDM Convert Task Extended supports is SOLIDWORKS PDM Professional 2018 SP0.



We highly recommend you use the latest version of PDM Professional.

Where to find and download the CEX file?

PDM Convert Task Extended comes packaged as a CEX file. The download can be found by the following:

- 1. The order confirmation email when purchasing PDM Convert Task Extended.
 - This email contains both the download link to the CEX file and a valid license key.
- 2. By logging into your bluebyte.biz account <a href="https://personal-newspapers

Downloading



(i) NOTE

If you have a valid license and are unable to download the CEX file, please reach out to us via the **contact** 27 page.

The CEX will download within a .zip file.

After downloading the file from the **Downloads** section of your account, you may need to check if your Windows security policies have blocked the download.

Downloading a blocked .zip file

In the downloads section of your web browser, do the following:

- 1. Right click on the blocked .zip file.
- 2. Go to **Properties**.
- 3. Uncheck the **block** checkbox.
- 4. Click Apply and then OK.

Extracting the .zip file


To unzip the .zip file:

1. Right click the .zip file.

Loading the PDM Add-in into your vault

To load the PDM Add-in, follow these steps:

- 1. Open the PDM Administration tool
- 2. Login to a user account that **has** permission to administer Add-ins.
- 3. Go to File.
- 4. Click Open...
- 5. Browse to the CEX file.
- 6. Select the CEX file and click Open.
- 7. *Drag* the Add-in icon from the opened CEX window onto the Add-in node.

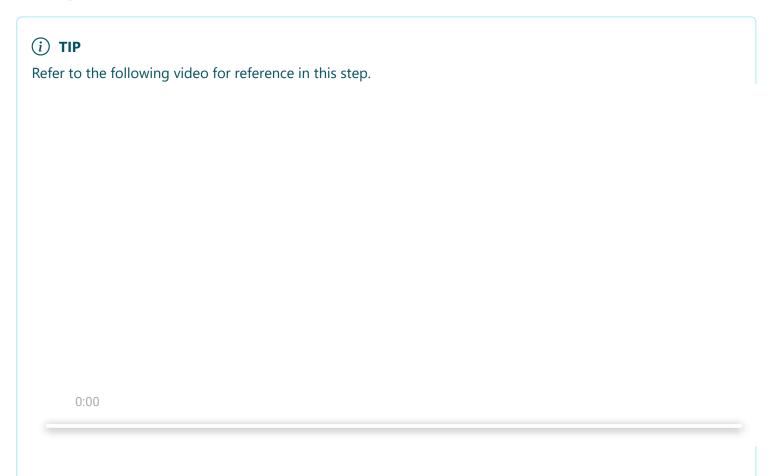

Updating the PDM Add-in

To update the PDM Add-in, follow from the **start** of this page.

Client machines

For the change to be reflected on client computers, one of the following must be done:

- 1. Restart the client computer.
- 2. End the PDM Process, edmserver.exe and restart the File Explorer Process.

(i) NOTE

To avoid this issue, please consider using our continuous delivery process ♂.

Installing PDM Convert Task Extended using the Blue Byte Systems Inc. auto-updater

To install PDM Convert Task Extended using the auto-updater, please follow the instructions in this **blog post** ...

License Information

This section denotes how to manage a license.

Managing a License


Your license is made of a **secret key** that was provided to you in the *order confirmation email*.

Your license entitles you to use PDM Convert Task Extended:

- for a specified duration.
- A number of domains (number of vaults where you can install the Add-in).

To manage your license:


- Log into your vault from the PDM Administration tool.
- Right click the Add-in from the Add-ins node and select Manage license...

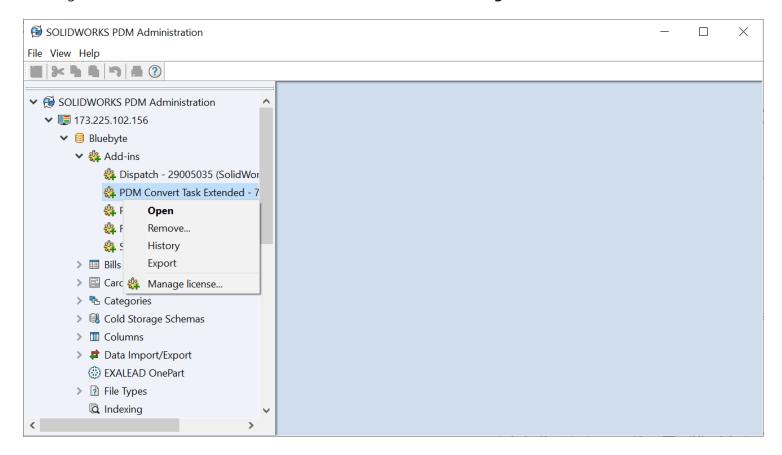

Activating a license

To activate a license:

• Enter your license key and click Activate to consume the license from the previous step.

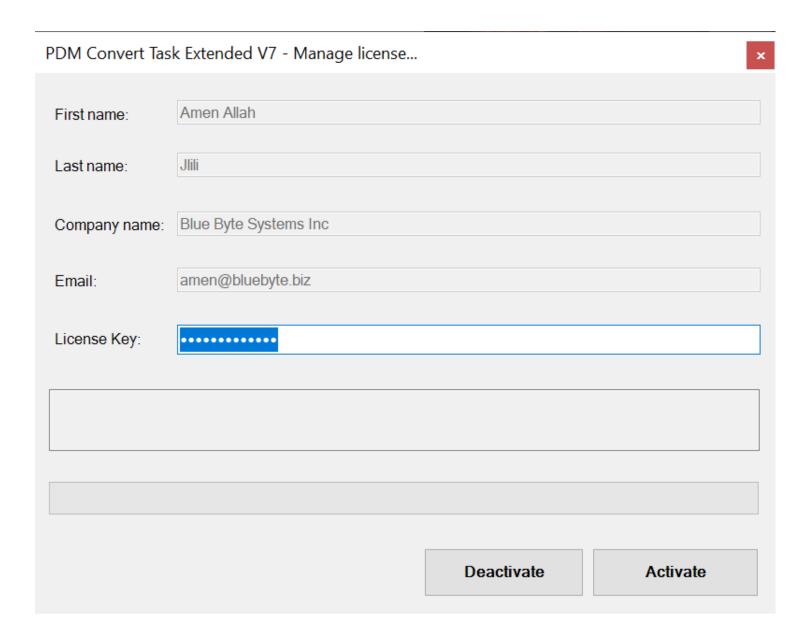

Deactivating a license

To deactivate a license:

• Click **Deactivate** on the **previous step** to stop using the license on the logged in vault.

Common Issues

If you attempt to deactivate and reactivate your license, you may get the following error: **Failed to get license information from the server. Error 60**

First name:	Amen Allah	
Last name:	Jlili	
Company name:	Blue Byte Systems Inc	
Email:	amen@bluebyte.biz	
License Key:	•••••	
Failed to get license information from server. Error 60		

To solve this issue:

- 1. Close the **Manage license...** window.
- 2. Right click on the Add-in and click **Manage license...**
- 3. Add your license key to the **License Key** field.
- 4. Click Activate to consume your license again.

Renewing a License

To renew the license, please follow these instructions:



(X) IMPORTANT


Do not commence the process below until you have your license key.

- 1. Open the PDM Administration tool,
- 2. Expand the Add-in nodes and right click on PDM Convert Task Extended
- 3. Click Manage license...
- 4. Click **Deactivate** (You must be connected to the Internet)
- 5. Close the window.
- 6. Repeat the process of clicking on Manage license...
- 7. Enter your license key and click Activate

8. Your new expiry date should appear when the license is renewed.

Options Setup Page

When you choose PDM Task Convert Extended from the dropdown in the new task dialog, you will be prompted a window that is similar to the one below:

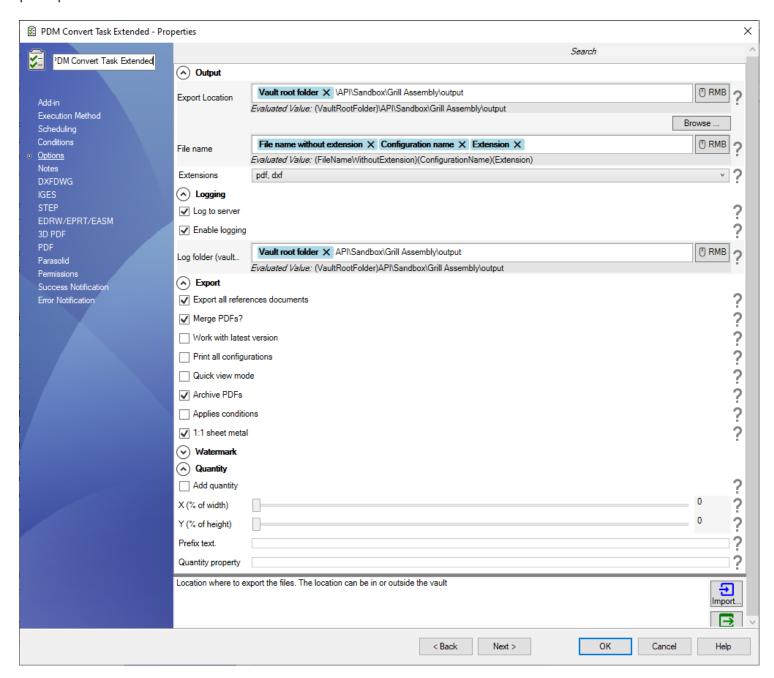

Option	Description
Output	This is where you specify the location where you want the exported documents to be saved. This location can be inside or outside the vault.
Extensions	These are the extensions the task should export. Supported extensions are: • PDF • DXF

Option	Description
	 DWG IGES X_T STEP eDrawings eprt easm edrw U3D (3D PDF) HTML (You need eDrawings Professional 2019-2023 installed on the machine that runs the task.)
Logging	 Specify if you want the logs to be stored in the cloud. Specify where you want the logs to be saved. The location must be in PDM.
Export	 Export referenced documents of assemblies: This means that if the processed file is an assembly, the task will attempt to export all the available references from the assembly. Merge referenced documents This will merge all exported PDFs. Export all configurations This will attempt to export all configurations of parts and assemblies. Please make sure you include the configuration name alias in the output filename. Work with latest version Task will attempt to get the latest version of the file to be printed. QuickView Opens documents in quick view or large design mode. This option will increase performance with large documents. Archive Creates a zip file of the processed files Applies conditions Does not apply conditions when processing assemblies. Export sheet metal parts When enabled, task attempt to open referenced sheet metal parts from their drawing document and export their flat pattern as the specified dxf or dwg extension. This option will not work if drawings are opened in quick view mode.

Option	Description
	 The notation flatPattern will be appended to the filename of the flat pattern.
Watermark	Add a watermark to the printed PDF. You can use the special value (\$CustomProperty) if the value of the desired watermark is found in a custom property.
Quantity	 Add the document quantity from the calculated BOM of the top-level assembly. Two options: Using custom property in your sheet format. Task writes quantity to custom property and rebuilds drawing. Define the location and pretext of a note the task adds to drawing before printing to DPF. Use this option if you do not have a predefined custom property in your sheet format

Important Notes About Creating Tasks

Please consider the following recommendations when creating a new task using PDM Convert Task Extended:

1. Execution method

- 1. In the execution method tab that appears on the blue left sidebar, please:
- 2. Choose the radio box option "Let the system decide which computer to execute the task".
- 3. Choose **one computer**. We recommend that our customers opt for the server. The server needs to have a SOLIDWORKS PDM Client installed with a local view as well as SOLIDWORKS 3D.
- 2. On the first page of the task, execute the task with a user that has the right workflow and file/folder permissions.



We also recommend disabling the auto-add extensions by removing all the extensions the task uses including txt.

This prevents race conditions between SOLIDWORKS PDM and the task during files add process.

To change the auto-add extensions list,

- 1. Go to the PDM Administration tool
- 2. Right click on the username (or all users)
- 3. Select **settings**
- 4. Click on the "Adding Files" selection and edit the file extensions

Settings

Adding Files

Adding Folders Check In Copy Tree Explorer

File Compare

Language

Menus

Messages

Toolbar Viewers

Reference Dialog

When a file is saved to SOLIDWORKS Enterprise PDM from a program's Save As dialog box it will be added to the file vault automatically. When files are added to the file vault folder structure without involving the Save As dialog box, they will not be added to the file vault database unless they are listed below.

Enter file extensions of the file types which SOLIDWORKS Enterprise PDM always should try to add, even when files are not saved via the Save As dialog box (separate the file extensions with semicolons):

ot;eprt;easm;edrw;dst;xml;apj;sldasm;sldprt;iam;par;asm;dft;slddrw;cwr;cfg;mdb;marku<mark>p;dod</mark>

Enter file patterns of files which SOLIDWORKS Enterprise PDM should never try to add, even if they are saved via the Save As dialog box (separate file patterns with semicolons):

~\$*;*.newVer.*

The excluded file patterns may contain wildcard characters such as * (zero or more arbitrary characters) or ? (exactly one arbitrary character).

Getting Started