Well System Monitor

Build Manual

© 2018, Jim Schrempp and Bob Glicksman, Team Practical Projects Version 1.0; date: 9/12/2018

NOTICE: Use of this document is subject to the terms of use described in the document "Terms_of_Use_License_and_Disclaimer" that is included in this release package. This document can also be found at:

https://github.com/TeamPracticalProjects/WellSystemMonitor/blob/master/Terms_of_Use _License_and_Disclaimer.pdf

Concept

We highly recommend that you first read the Project Concept document included in this package. The project concept document explains the use cases we address with the well system monitor (WSM) and discuss some of the limitations and future expansions.

The system consists of a microprocessor controlled system that monitors several sensors and reports their status to a cloud based storage facility. The project is based on the popular Water Leak Sensor by Team Practical Projects as found on GitHub. The reader will need to build the Water Leak Detector hardware before continuing on this project.

This project uses the Particle.io Photon microprocessor and Google Docs Spreadsheet cloud storage. MIT App Inventor 2 is used to create a test app for an Android smartphone.

Build The Hardware

Base Hardware

Download the Water Leak Sensor repository from the TeamPracticalProjects account on GitHub.

https://github.com/TeamPracticalProjects/WaterLeakSensor

Follow the detailed instructions there to build the electronics and case for the Water Leak Sensor.

Modify WLD to become WSM


Overview

The modifications to create a Well System Monitor are fairly small.

Sensor Wiring

This is an optional step. If the relays you intend to monitor are in one cabinet, then you may prefer to run one telephone cable to the relay box instead of two. The WSM sensors only require ground and the sense line. In the two photos below you can see how we have used a four conductor cable to run between the two sensor headers on the PCB and the pin header on the RJ11 PCB. We have also removed the second RJ11 connector.

<<Add specific pin cabling notes here>>

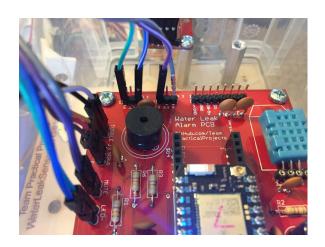





RJ11 Box

An RJ11 box makes for a neat and tidy, professional looking installation.

The well pump sensor uses the yellow and green wires; the pressure pump the red and black. Locate the RJ11 box near the relays in your system. Run wires to unused contacts on the relays. It is best to use normally closed contacts, but normally open will also work.

In the two photos below you can see the wires connected inside the box and the box closed. Note that we labeled the case of the RJ11 box so it is easy to remember which wires go where.

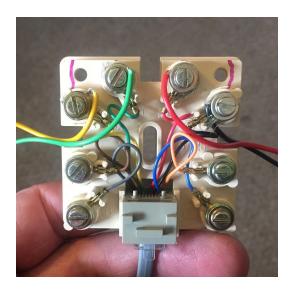

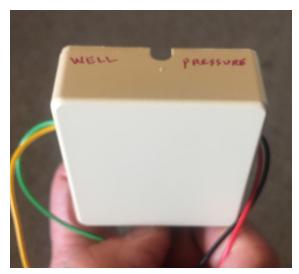

Firmware

The well system monitor uses different firmware than the WLD. Use the instructions on the Particle.io site to flash the firmware to your Photon. We recommend using the desktop Particle Dev IDE. You can also copy/paste the firmware files to the Particle.io Web IDE.