Project: Kinematics Pick & Place

Brett Gleason

July 18, 2017

The rubric for this project can be found at the following URL: $\begin{array}{l} \text{https://review.udacity.com/\#!/rubrics/972/view} \\ \text{I will consider the rubric points individually and describe how I addressed each point in my implementation.} \end{array}$

Writeup / README

1. Provide a Writeup / README that includes all the rubric points and how you addressed each one. You can submit your writeup as markdown or pdf.

You're reading it!

Kinematic Analysis

1. Run the forward_kinematics demo and evaluate the kr210.urdf.xacro file to perform kinematic analysis of Kuka KR210 robot and derive its DH parameters.

Using the model of the Kuka KR210 robotic arm in the forward kinematics demo as well as the description of the joints within the URDF file, a schematic diagram of the robot can be drawn.

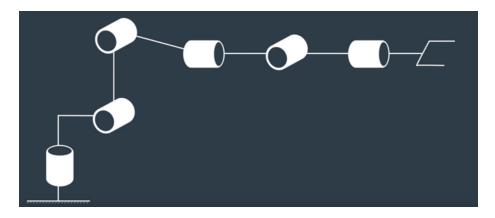


Figure 1: Basic schematic as shown in project less on $10\,$

Next the joints are labeled from 1 to n and the links are labeled from 0 to n.

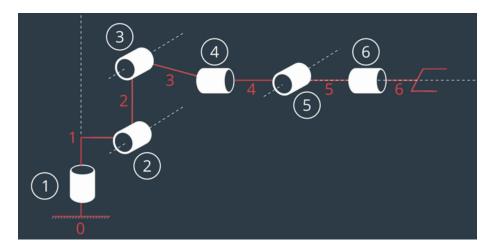


Figure 2: Schematic showing joint and link numbers as shown in project less on 10

After the joints and links are labeled, reference frames can be defined for each joint.

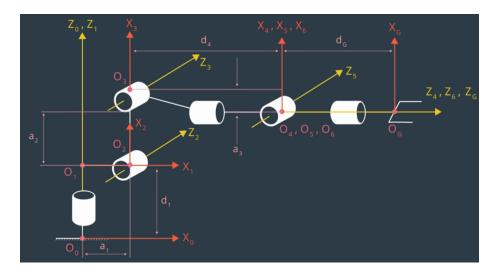


Figure 3: Schematic showing reference frames for each joint as shown in project lesson 10

Using the reference frames the Denavit-Hartenberg parameters can be defined. For this project the DH parameters are defined using the convention described by John J. Craig in his book Introduction to Robotics: Mechanics and Control. The definitions are as follows (from lesson 2 section 12):

- Twist angle (α_{i-1}) : angle between \hat{Z}_{i-1} and \hat{Z}_i measured about \hat{X}_{i-1} in a right hand sense.
- Link length (a_{i-1}) : distance from \hat{Z}_{i-1} to \hat{Z}_i measured along \hat{X}_{i-1} .
- Link offset (d_i) : signed distance from \hat{X}_{i-1} to \hat{X}_i measured along \hat{Z}_i .
- Joint angle: angle between \hat{X}_{i-1} and \hat{X}_i measured about \hat{Z}_i in a right hand sense.

i	Transform	α_{i-1}	a_{i-1}	d_i	θ_i
1	T_1^0	0	0	0.75	θ_1
2	T_2^1	$-\frac{\pi}{2}$	0.35	0	$\theta_2 - \frac{\pi}{2}$
3	T_3^2	0	1.25	0	θ_3
4	T_4^3	$-\frac{\pi}{2}$	-0.054	1.5	θ_4
5	T_5^4	$\frac{\pi}{2}$	0	0	θ_5
6	T_6^5	$-\frac{\pi}{2}$	0	0	θ_6
7	T_G^6	0	0	0.303	0

Table 1: Denavit-Hartenberg parameter table with values derived from the URDF file $\,$

2. Using the DH parameter table you derived earlier, create individual transformation matrices about each joint. In addition, also generate a generalized homogeneous transform between base_link and gripper_link using only end-effector(gripper) pose.

The general form of a homogeneous transform between two reference frames described using our convention can be written as follows:

$$T_{i-1}^{i} = \begin{bmatrix} \cos(\theta_{i}) & -\sin(\theta_{i}) & 0 & a_{i-1} \\ \sin(\theta_{i})\cos(\alpha_{i-1}) & \cos(\theta_{i})\cos(\alpha_{i-1}) & -\sin(\alpha_{i-1}) & -\sin(\alpha_{i-1})d_{i} \\ \sin(\theta_{i})\sin(\alpha_{i-1}) & \cos(\theta_{i})\sin(\alpha_{i-1}) & \cos(\alpha_{i-1}) & \cos(\alpha_{i-1})d_{i} \\ 0 & 0 & 0 & 1 \end{bmatrix}$$

From this equation the individual transform matrices can be derived.

$$T_1^0 = \begin{bmatrix} \cos(\theta_1) & -\sin(\theta_1) & 0 & a_0 \\ \sin(\theta_1)\cos(\alpha_0) & \cos(\theta_1)\cos(\alpha_0) & -\sin(\alpha_0) & -\sin(\alpha_0)d_1 \\ \sin(\theta_1)\sin(\alpha_0) & \cos(\theta_1)\sin(\alpha_0) & \cos(\alpha_0) & \cos(\alpha_0)d_1 \\ 0 & 0 & 0 & 1 \end{bmatrix}$$

$$T_2^1 = \begin{bmatrix} \cos(\theta_2) & -\sin(\theta_2) & 0 & a_1 \\ \sin(\theta_2)\cos(\alpha_1) & \cos(\theta_2)\cos(\alpha_1) & -\sin(\alpha_1) & -\sin(\alpha_1)d_2 \\ \sin(\theta_2)\sin(\alpha_1) & \cos(\theta_2)\sin(\alpha_1) & \cos(\alpha_1) & \cos(\alpha_1)d_2 \\ 0 & 0 & 0 & 1 \end{bmatrix}$$

$$T_3^2 = \begin{bmatrix} \cos(\theta_3) & -\sin(\theta_3) & 0 & a_2 \\ \sin(\theta_3)\cos(\alpha_2) & \cos(\theta_3)\cos(\alpha_2) & -\sin(\alpha_2) & -\sin(\alpha_2)d_3 \\ \sin(\theta_3)\sin(\alpha_2) & \cos(\theta_3)\sin(\alpha_2) & \cos(\alpha_2) & \cos(\alpha_2)d_3 \\ 0 & 0 & 0 & 1 \end{bmatrix}$$

$$T_4^3 = \begin{bmatrix} \cos(\theta_4) & -\sin(\theta_4) & 0 & a_3 \\ \sin(\theta_4)\cos(\alpha_3) & \cos(\theta_4)\cos(\alpha_3) & -\sin(\alpha_3) & -\sin(\alpha_3)d_4 \\ \sin(\theta_4)\sin(\alpha_3) & \cos(\theta_4)\sin(\alpha_3) & \cos(\alpha_3) & \cos(\alpha_3)d_4 \\ 0 & 0 & 0 & 1 \end{bmatrix}$$

$$T_5^4 = \begin{bmatrix} \cos(\theta_5) & -\sin(\theta_5) & 0 & a_4 \\ \sin(\theta_5)\cos(\alpha_4) & \cos(\theta_5)\cos(\alpha_4) & -\sin(\alpha_4) & -\sin(\alpha_4)d_5 \\ \sin(\theta_5)\sin(\alpha_4) & \cos(\theta_5)\sin(\alpha_4) & \cos(\alpha_4) & \cos(\alpha_4)d_5 \\ 0 & 0 & 0 & 1 \end{bmatrix}$$

$$T_6^5 = \begin{bmatrix} \cos(\theta_6) & -\sin(\theta_6) & 0 & a_5 \\ \sin(\theta_6)\cos(\alpha_5) & \cos(\theta_6)\cos(\alpha_5) & -\sin(\alpha_5) & -\sin(\alpha_5)d_6 \\ \sin(\theta_6)\sin(\alpha_5) & \cos(\theta_6)\sin(\alpha_5) & \cos(\alpha_5) & \cos(\alpha_5)d_6 \\ 0 & 0 & 0 & 1 \end{bmatrix}$$

$$T_6^6 = T_7^6 = \begin{bmatrix} \cos(\theta_7) & -\sin(\theta_7) & 0 & a_6 \\ \sin(\theta_7)\cos(\alpha_6) & \cos(\theta_7)\cos(\alpha_6) & -\sin(\alpha_6) & -\sin(\alpha_6)d_7 \\ \sin(\theta_7)\sin(\alpha_6) & \cos(\theta_7)\sin(\alpha_6) & \cos(\alpha_6) & \cos(\alpha_6)d_7 \\ \sin(\theta_7)\sin(\alpha_6) & \cos(\theta_7)\sin(\alpha_6) & \cos(\alpha_6) & \cos(\alpha_6)d_7 \\ 0 & 0 & 0 & 1 \end{bmatrix}$$

The total homogeneous transform between the base link and the end link can be found by multiplying the individual transforms together

$$T_G^0 = T_1^0 * T_2^1 * T_3^2 * T_4^3 * T_5^4 * T_6^5 * T_G^6$$

Because of the difference in the way the orientation of the DH frames are defined versus the way the URDF file is written, two additional rotations must be applied to the gripper frame: a 180 degree rotation about the z-axis, followed by a -90 degree rotation about the y-axis.

$$R_z = \begin{bmatrix} \cos(\pi) & -\sin(\pi) & 0 & 0\\ \sin(\pi) & \cos(\pi) & 0 & 0\\ 0 & 0 & 1 & 0\\ 0 & 0 & 0 & 1 \end{bmatrix}$$

$$R_y = \begin{bmatrix} \cos(-\frac{\pi}{2}) & 0 & \sin(-\frac{\pi}{2}) & 0\\ 0 & 1 & 0 & 0\\ -\sin(-\frac{\pi}{2}) & 0 & \cos(-\frac{\pi}{2}) & 0\\ 0 & 0 & 0 & 1 \end{bmatrix}$$

The total transform can then be described as:

$$T_{total} = T_G^0 * R_z * R_y$$

3. Decouple Inverse Kinematics problem into Inverse Position Kinematics and inverse Orientation Kinematics; doing so derive the equations to calculate all individual joint angles.

Because the axes of joints 4, 5, and 6 intersect at a single point, the position and orientation of the end effector are kinematically decoupled. Joints 4, 5, and 6 form a spherical wrist that determine the orientation of the end effector, while joints 1, 2 and 3 determine the location of the end effector.

Inverse Position

Wrist Center Position The first step for finding the first three joint angles is to use the end effector position that is passed to the inverse kinematics server to find the location of the wrist center. Because the wrist center is located at joint five, it can be found by starting at the end effector location and subtracting the link length from joint five to joint 6 and from joint 6 to the end effector along the Z_G axis as shown in figure 3. This can be written mathematically as follows:

$$\begin{bmatrix} w_x \\ w_y \\ w_z \end{bmatrix} = \begin{bmatrix} p_x \\ p_y \\ p_z \end{bmatrix} - \begin{bmatrix} d_6 + d_7 \\ d_6 + d_7 \\ d_6 + d_7 \end{bmatrix} * \begin{bmatrix} n_x \\ n_y \\ n_z \end{bmatrix}$$

Where:

- w = wrist center location
- p = end effector location
- n = the vector on the Z_G axis

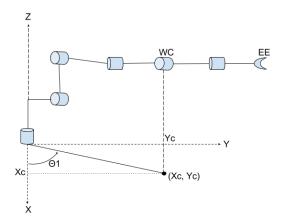


Figure 4: Diagram for calculating theta 1.

Joint 1 - θ_1

- EE = end effector
- \bullet WC = wrist center
- $X_c = X$ component of wrist center position
- $Y_c = Y$ component of wrist center position

Once the wrist center location is known, θ_1 can be found by using the projection of the wrist center onto the XY plane. θ_1 is the arctangent of the X and Y components of the wrist center position.

$$\theta_1 = atan2(Y_c, X_c)$$

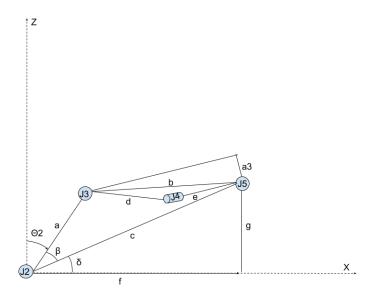


Figure 5: Diagram for calculating theta 2.

Joint 2 - θ_2

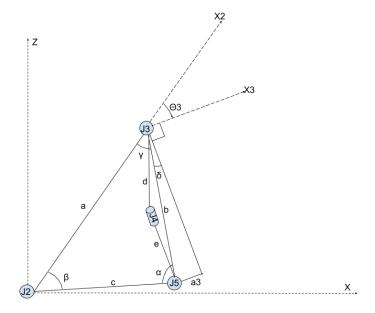


Figure 6: Diagram for calculating theta 3.

Joint 3 - θ_3

Inverse Orientation

Joint 4 - θ_4

Joint 5 - θ_5

Joint 6 - θ_6

Project Implementation

1. Fill in the 'IK_server.py' file with properly commented python code for calculating Inverse Kinematics based on previously performed Kinematic Analysis. Your code must guide the robot to successfully complete 8/10 pick and place cycles. Briefly discuss the code you implemented and your results.

Here I'll talk about the code, what techniques I used, what worked and why, where the implementation might fail and how I might improve it if I were going to pursue this project further.

And just for fun, another example image: