# Midterm Project 1

#### Goal:


- Interface with the TSI2561 Lux sensor with the Tivac microcontroller
- Send data from Lux sensor to an ESP8266 that will upload the data to a ThingSpeak server

# Deliverables:

• I was able to gather data from the TSL2561 and then send it to ThingSpeak every ~15 seconds.

# Components:

- TivaC TM4C123G: The main microcontroller that will connect both the TSL2561 lux sensor and the ESP8266 together. It will run at 40MHz and interface with the TSL2561 using I2C and send the data to the ESP through UART.
- TSL2561: An I2C sensor that calculates the luminosity that is hitting it.
- NodeMCU: The NodeMCU is a version of the ESP8266 that is capable of running entirely
  on its own due to having its own processor. However, in this project it is flashed with AT
  firmware and can only be used through UART using AT commands.

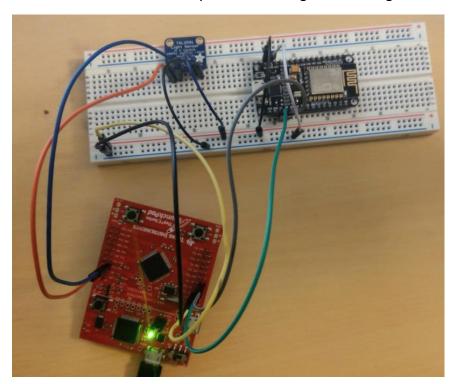

#### Implementation:

- The first step is to simply configure the clock of the microcontroller. I chose to run it at 40MHz.
- After that UART is configured to be able to communicate with the ESP. Pins PBO and PB1 were used for RX and TX respectively and a baud rate of 115200 was used.
- I2C is then initialized with PB2 and PB3 being used as SCLK and SDA. Once it is initialized, the TSL2561 sensor is initialized. It will first obtain the address of the sensor and check to see if it is the correct address, since the program won't work if the correct address cannot be obtained. The sensor is then configured with median gain and an integration time of 100ms, along with setting the power as well.
- The final component that will need to be configured is the timer. The timer is set up to trigger an interrupt every 15 seconds. A prescaler of 16 is used with a period of 37500000 (3750000 \* 16 = 6000000 and 60000000 / 40M = 15 seconds).
- After that, nothing is down in main and the program will go into an infinite loop. Everything else will be done on the Timer interrupt handler, where it will get 10 lux values and get the average. After that it will prepare the AT commands to connect to the ThingSpeak, prepare to send the appropriate amount of characters, and then send the 'Get' command that will chart the value found. While the interrupt is done every 15 seconds, the delays while issuing the AT commands will make it send the data to the servers around every 23 seconds.

#### Video:

## https://www.youtube.com/watch?v=aSPZz3yu3BM

Note: The code in the program is a slightly modified version of the one below. The one
in the video displays the value from the lux sensor every second onto the console
(UARTO) and will send the data to ThingSpeak every 15 seconds. This is to easily show
the lux sensor reacting to light.


# ThingSpeak Images:

• Here is one image where the sensor is next to a window sill. The second spike was when I opened the blinds of the window, letting more light inside. I am not sure what caused the first spike however.



CPE 403 Fall 2018 Brian Lopez

• This next screenshot shows a normal decrease in lux values in the span of around 20 minutes. This was around sunset:

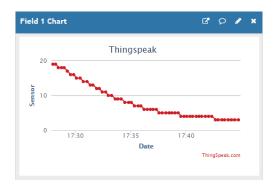

## Code:

```
#include <stdarg.h>
#include <stdbool.h>
#include <stdint.h>
#include <stdlib.h>
#include <stdio.h>
#include "inc/tm4c123gh6pm.h"
#include "inc/hw i2c.h"
#include "inc/hw_memmap.h"
#include "inc/hw_types.h"
#include "inc/hw gpio.h"
#include "driverlib/i2c.h"
#include "driverlib/sysctl.h"
#include "driverlib/gpio.h"
#include "driverlib/pin_map.h"
#include "driverlib/uart.h"
#include "uartstdio.h"
#include "driverlib/interrupt.h"
#include "Adafruit TSL2591.h"
#include "driverlib/timer.h"
void timerInit(void)
    SysCtlPeripheralEnable(SYSCTL PERIPH TIMER1);
    // turn on timer 1 for 0.5 second intervals
    TimerConfigure(TIMER1_BASE, TIMER_CFG_PERIODIC);
    TimerLoadSet(TIMER1 BASE, TIMER A, 37500000-1); // (40000000*15) / 16
    TimerPrescaleSet(TIMER1 BASE, TIMER A, 16);
                                                    // prescalor of 16
    IntEnable(INT TIMER1A);
    TimerIntEnable(TIMER1 BASE, TIMER TIMA TIMEOUT);
    TimerEnable(TIMER1_BASE, TIMER_A); // turn on Timer
}
void ConfigureUART1(void)
{
    SysCtlPeripheralEnable(SYSCTL_PERIPH_UART1);
                                                    //enables UART module 1
    SysCtlPeripheralEnable(SYSCTL_PERIPH_GPIOB);
                                                    //enables GPIO port b
    GPIOPinConfigure(GPIO_PB1_U1TX); //configures PB1 as TX pin
```

```
Brian Lopez
```

```
GPIOPinConfigure(GPIO PB0 U1RX); //configures PB0 as RX pin
    GPIOPinTypeUART(GPIO_PORTB_BASE, GPIO_PIN_0 | GPIO_PIN_1); //sets the UART pin
type
    UARTClockSourceSet(UART1 BASE, UART CLOCK PIOSC); //sets the clock source
   UARTStdioConfig(1, 115200, 16000000); //enables UARTstdio baud rate, clock, and
which UART to use
}
void I2C0 Init ()
//Configure/initialize the I2C0
{
    SysCtlPeripheralEnable (SYSCTL PERIPH I2C0); //enables I2C0
    SysCtlPeripheralEnable (SYSCTL_PERIPH_GPIOB); //enable PORTB as peripheral
    GPIOPinTypeI2C (GPIO_PORTB_BASE, GPIO_PIN_3); //set I2C PB3 as SDA
   GPIOPinConfigure (GPIO PB3 I2C0SDA);
    GPIOPinTypeI2CSCL (GPIO PORTB BASE, GPIO PIN 2); //set I2C PB2 as SCLK
   GPIOPinConfigure (GPIO PB2 I2C0SCL);
    I2CMasterInitExpClk (I2C0 BASE, SysCtlClockGet(), false); //Set the clock of
the I2C to ensure proper connection
   while (I2CMasterBusy (I2CO BASE)); //wait while the master SDA is busy
}
void I2C0 Write (uint8 t addr, uint8 t N, ...)
//Writes data from master to slave
//Takes the address of the device, the number of arguments, and a variable amount of
register addresses to write to
    I2CMasterSlaveAddrSet (I2C0_BASE, addr, false); //Find the device based on the
address given
   while (I2CMasterBusy (I2C0 BASE));
   va list vargs; //variable list to hold the register addresses passed
   va_start (vargs, N); //initialize the variable list with the number of
arguments
    I2CMasterDataPut (I2C0 BASE, va arg(vargs, uint8 t)); //put the first argument
in the list in to the I2C bus
   while (I2CMasterBusy (I2C0 BASE));
    if (N == 1) //if only 1 argument is passed, send that register command then stop
        12CMasterControl (I2C0 BASE, I2C MASTER CMD SINGLE SEND);
       while (I2CMasterBusy (I2C0_BASE));
       va end (vargs);
    }
   else
       //if more than 1, loop through all the commands until they are all sent
    {
       I2CMasterControl (I2C0 BASE, I2C MASTER CMD BURST SEND START);
       while (I2CMasterBusy (I2C0_BASE));
        uint8 t i;
        for (i = 1; i < N - 1; i++)
```

```
Brian Lopez
            I2CMasterDataPut (I2CO_BASE, va_arg(vargs, uint8_t)); //send the next
register address to the bus
           while (I2CMasterBusy (I2C0_BASE));
            I2CMasterControl (I2C0 BASE, I2C MASTER CMD BURST SEND CONT); //burst
send, keeps receiving until the stop signal is received
           while (I2CMasterBusy (I2C0_BASE));
        }
        I2CMasterDataPut (I2CO BASE, va arg(vargs, uint8 t)); //puts the last
argument on the SDA bus
       while (I2CMasterBusy (I2C0 BASE));
        I2CMasterControl (I2C0_BASE, I2C_MASTER_CMD_BURST_SEND_FINISH); //send the
finish signal to stop transmission
       while (I2CMasterBusy (I2C0 BASE));
       va end (vargs);
   }
}
uint32 t I2CO_Read (uint8 t addr, uint8 t reg)
//Read data from slave to master
//Takes in the address of the device and the register to read from
    I2CMasterSlaveAddrSet (I2CO_BASE, addr, false); //find the device based on the
address given
   while (I2CMasterBusy (I2C0_BASE));
    I2CMasterDataPut (I2CO BASE, reg); //send the register to be read on to the I2C
bus
   while (I2CMasterBusy (I2C0 BASE));
    I2CMasterControl (I2CO BASE, I2C MASTER CMD SINGLE SEND); //send the send
signal to send the register value
   while (I2CMasterBusy (I2C0_BASE));
    I2CMasterSlaveAddrSet (I2CO BASE, addr, true); //set the master to read from the
   while (I2CMasterBusy (I2C0 BASE));
    I2CMasterControl (I2C0_BASE, I2C_MASTER_CMD_SINGLE_RECEIVE); //send the
receive signal to the device
   while (I2CMasterBusy (I2C0_BASE));
   return I2CMasterDataGet (I2C0_BASE); //return the data read from the bus
}
void TSL2591_init ()
//Initializes the TSL2591 to have a medium gain,
    uint32_t x;
```

```
Brian Lopez
```

```
x = I2C0 Read (TSL2591 ADDR, (TSL2591 COMMAND BIT | TSL2591 REGISTER DEVICE ID));
//read the device ID
   if (x == 0x50)
   {
       //UARTprintf ("GOT IT! %i\n", x); //used during debuging to make sure
correct ID is received
   }
   else
    {
       while (1){};
                       //loop here if the dev ID is not correct
    // Configure with median gain and integration time of 100ms
    I2C0 Write(TSL2591 ADDR, 2, (TSL2591 COMMAND BIT | TSL2591 REGISTER CONTROL),
0x10);
    // enable power and interrupts for sensor
    I2C0 Write(TSL2591 ADDR, 2, (TSL2591 COMMAND BIT | TSL2591 REGISTER ENABLE),
               (TSL2591 ENABLE POWERON | TSL2591 ENABLE AEN | TSL2591 ENABLE AIEN |
TSL2591 ENABLE NPIEN));
uint32 t GetLuminosity ()
//This function will read the channels of the TSL and returns the calculated value to
the caller
    float atime = 100.0f, again = 25.0f;
                                          //the variables to be used to calculate
proper lux value
    uint16 t ch0, ch1; //variable to hold the channels of the TSL2591
    uint32_t cp1, lux1, lux2, lux;
   uint32 t x = 1;
   x = I2C0_Read (TSL2591_ADDR, (TSL2591_COMMAND_BIT | TSL2591_CODATAH));
   x |= I2CO Read (TSL2591 ADDR, (TSL2591 COMMAND BIT | TSL2591 CODATAL));
   ch1 = x >> 16;
   ch0 = x \& 0xFFFF;
    cp1 = (uint32_t) (atime * again) / TSL2591_LUX_DF;
    lux1 = (uint32_t) ((float) ch0 - (TSL2591_LUX_COEFB * (float) ch1)) / cp1;
    lux2 = (uint32 t) ((TSL2591 LUX COEFC * (float) ch0) - (TSL2591 LUX COEFD *
(float) ch1)) / cp1;
    lux = (lux1 > lux2) ? lux1: lux2;
   return lux;
}
void Timer1IntHandler(void)
   uint32_t i, lux;
    lux = 0;
   for(i = 0; i < 10; i++)</pre>
        lux += GetLuminosity(); // gather 10 lux values
   lux = lux / 10; // average the values received
```

Brian Lopez

```
char getCmd[200] = "GET
/update?key=DN72F6LKT2GVW8RD&field1=150&headers=falseHTTP/1.1\nHostapi.thingspeak.com
\nConnection:close\Accept*\*\r\n\r\n";
    UARTprintf ("AT+CIPMUX=1\r\n"); //enable multiple send ability
    SysCtlDelay (13333333);
    UARTprintf ("AT+CIPSTART=4,\"TCP\",\"184.106.153.149\",80\r\n");
                                                                       //Establish a
connection with the <a href="thingspeak">thingspeak</a> servers
    SysCtlDelay (13333333);
    UARTprintf ("AT+CIPSEND=4,%d\r\n", strlen(getCmd)); //command the ESP8266 to
allow sending of information
    SysCtlDelay(13333333);
    UARTprintf("GET
/update?key=DN72F6LKT2GVW8RD&field1=%d&headers=falseHTTP/1.1\nHostapi.thingspeak.com\
nConnection:close\Accept*\*\r\n\r\n", lux);
    SysCtlDelay(10000);
    UARTprintf("AT+CIPCLOSE\r\n");
    TimerIntClear(TIMER1 BASE, TIMER TIMA TIMEOUT);
}
int main(void)
    // set clock to 40MHz
    SysCtlClockSet(SYSCTL SYSDIV 5|SYSCTL USE PLL|SYSCTL OSC MAIN|SYSCTL XTAL 16MHZ);
    ConfigureUART1();
    I2C0 Init(); // initialize I2C, TSL sensor, and the timer
    TSL2591_init();
    timerInit();
   while(1)
    {
    }
    // return 0;
```