RISC-V Bitmanip Extension

Document Version 0.37-draft

Editor: Clifford Wolf Symbiotic GmbH clifford@symbioticeda.com April 16, 2019 Contributors to all versions of the spec in alphabetical order (please contact editors to suggest corrections): Jacob Bachmeyer, Allen Baum, Steven Braeger, Rogier Brussee, Michael Clark, Ken Dockser, Fabian Giesen, Robert Henry, Bruce Hoult, Po-wei Huang, Rex McCrary, Jiří Moravec, Samuel Neves, Markus Oberhumer, Nils Pipenbrinck, and Clifford Wolf.

This document is released under a Creative Commons Attribution 4.0 International License.

Contents

1	Intr	oduction	1
	1.1	ISA Extension Proposal Design Criteria	1
	1.2	B Extension Adoption Strategy	2
	1.3	Next steps	2
2	RIS	C-V Bitmanip Extension	3
	2.1	Basic bit manipulation instructions	4
		2.1.1 Count Leading/Trailing Zeros (clz, ctz)	4
		2.1.2 Count Bits Set (pcnt)	5
		2.1.3 And-with-complement (andc)	5
		2.1.4 Min/max instructions (min, max, minu, maxu)	6
		2.1.5 Shift Ones (Left/Right) (slo, sloi, sro, sroi)	7
	2.2	Bit permutation instructions	8
		2.2.1 Rotate (Left/Right) (rol, ror, rori)	8
		2.2.2 Generalized Reverse (grev, grevi)	9
		2.2.3 Generalized Shuffle (shfl, unshfl, shfli, unshfli)	11
	2.3	Bit Extract/Deposit (bext, bdep)	19
	2.4	Carry-less multiply (clmul, clmulh)	20
	2.5	CRC instructions (crc32.[bhwd], crc32c.[bhwd])	22
	2.6	Bit-matrix operations (bmatxor, bmator, bmatflip)	23
	2.7	Ternary bit-manipulation instructions	26

		2.7.1 Conditional mix (cmix)	26
		2.7.2 Conditional move (cmov)	26
		2.7.3 Funnel shift (fsl, fsr)	26
	2.8	Compressed NOT instructions (c.not)	28
	2.9	Micro architectural considerations and macro-op fusion for bit-manipulation	29
		2.9.1 Fast MUL, MULH, MULHSU, MULHU	29
		2.9.2 Fused NOT instructions	29
		2.9.3 Fused *-srli and *-srai sequences	29
	2.10	Opcode Encodings	30
	2.11	Fast C reference implementations	32
3	Disc	cussion	35
Ū		Frequently Asked Questions	
	3.1		
	3.2	Analysis of used encoding space	
	3.3	Area usage of reference implementations	41
4	Eval	luation	43
	4.1	Bitfield extract	43
	4.2	MIX/MUX pattern	44
	4.3	Bit scanning and counting	44
	4.4	Test, set, and clear individual bits	45
	4.5	Funnel shifts	46
	4.6	Arbitrary bit permutations	47
		4.6.1 Using butterfly operations	47
		4.6.2 Using omega-flip networks	48
		4.6.3 Using baseline networks	49
		4.6.4 Using sheep-and-goats	49
	4.7	Comparison with x86 Bit Manipulation ISAs	50
	4.8	Comparison with RI5CY Bit Manipulation ISA	51

RISC-V Bitmanip Extension V0.37-draft	iii								
4.9 Comparison with Cray XMT bit operations	56								
4.10 Mirroring and rotating bitboards	58								
4.10.1 Mirroring bitboards	58								
4.10.2 Rotating bitboards	59								
4.10.3 Explanation	59								
4.10.4 Rotating Bitcubes	60								
4.11 Rank and select	60								
4.12 Decoding RISC-V Immediates	61								
Change History	64								
Bibliography									

Chapter 1

Introduction

This is the RISC-V Bitmanip Extension draft spec.

1.1 ISA Extension Proposal Design Criteria

Any proposed changes to the ISA should be evaluated according to the following criteria.

- Architecture Consistency: Decisions must be consistent with RISC-V philosophy. ISA changes should deviate as little as possible from existing RISC-V standards (such as instruction encodings), and should not re-implement features that are already found in the base specification or other extensions.
- Threshold Metric: The proposal should provide a *significant* savings in terms of clocks or instructions. As a heuristic, any proposal should replace at least three instructions. An instruction that only replaces two may be considered, but only if the frequency of use is very high and/or the implementation very cheap.
- Data-Driven Value: Usage in real world applications, and corresponding benchmarks showing a performance increase, will contribute to the score of a proposal. A proposal will not be accepted on the merits of its *theoretical* value alone, unless it is used in the real world.
- Hardware Simplicity: Though instructions saved is the primary benefit, proposals that dramatically increase the hardware complexity and area, or are difficult to implement, should be penalized and given extra scrutiny. The final proposals should only be made if a test implementation can be produced.
- Compiler Support: ISA changes that can be natively detected by the compiler, or are already used as intrinsics, will score higher than instructions which do not fit that criteria.

1.2 B Extension Adoption Strategy

The overall goal of this extension is pervasive adoption by minimizing potential barriers and ensuring the instructions can be mapped to the largest number of ops, either direct or pseudo, that are supported by the most popular processors and compilers. By adding generic instructions and taking advantage of the RISC-V base instructions that already operate on bits, the minimal set of instructions need to be added while at the same time enabling a rich of operations.

The instructions cover the four major categories of bit manipulation: Count, Extract, Insert, Swap. The spec supports RV32, RV64, and RV128. "Clever" obscure and/or overly specific instructions are avoided in favor of more straightforward, fast, generic ones. Coordination with other emerging RISC-V ISA extensions groups is required to ensure our instruction sets are architecturally consistent.

1.3 Next steps

- Assign concrete instruction encodings so that we can start implementing the extension in processor cores and compilers.
- Add support for this extension to processor cores and compilers so we can run quantitative evaluations on the instructions.
- Create assembler snippets for common operations that do not map 1:1 to any instruction in this spec, but can be implemented easily using clever combinations of the instructions. Add support for those snippets to compilers.


Chapter 2

RISC-V Bitmanip Extension

In the proposals provided in this chapter, the C code examples are for illustration purposes only. They are not optimal implementations, but are intended to specify the desired functionality. See Section 2.11 for fast C code for use in emulators.

The section on opcode encodings are mere placeholders.

The final standard will likely define a range of Z-extensions for different bit manipulation instructions, with the "B" extension itself being a mix of instructions from those Z-extensions. It is completely unclear as of yet what this will look like, but a guess could look like this:

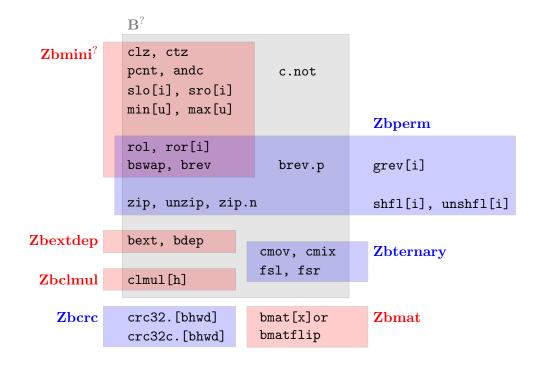

The main open questions of course relate to what should and shouldn't be included in "B", and what should or shouldn't be included in "Zbmini". This decisions will be informed in big part by evaluations of the cost and added value for the individual instructions.

With regard to "B", the open questions are:

- Should clmul[h] be included, or crc32. [bhwd]/crc32c. [bhwd], or neither, or both?
- Should Zbternary be included? It adds a large architectural cost by adding instructions with three source operands.
- Should Zbextdep be included? Should Zbmat be included?
- Which Zbperm pseudo-ops should be included in "B"?

2.1 Basic bit manipulation instructions

2.1.1 Count Leading/Trailing Zeros (clz, ctz)

```
RV32, RV64:
clz rd, rs
ctz rd, rs
RV64 only:
clzw rd, rs
ctzw rd, rs
```

The clz operation counts the number of 0 bits at the MSB end of the argument. That is, the number of 0 bits before the first 1 bit counting from the most significant bit. If the input is 0, the output is XLEN. If the input is -1, the output is 0.

The ctz operation counts the number of 0 bits at the LSB end of the argument. If the input is 0, the output is XLEN. If the input is -1, the output is 0.

```
uint_xlen_t clz(uint_xlen_t rs1)
{
    for (int count = 0; count < XLEN; count++)
        if ((rs1 << count) >> (XLEN - 1))
        return count;
    return XLEN;
}
uint_xlen_t ctz(uint_xlen_t rs1)
{
    for (int count = 0; count < XLEN; count++)
        if ((rs1 >> count) & 1)
        return count;
    return XLEN;
}
```

2.1.2 Count Bits Set (pcnt)

```
RV32, RV64:
pcnt rd, rs

RV64 only:
pcntw rd, rs
```

This instruction counts the number of 1 bits in a register. This operations is known as population count, popcount, sideways sum, bit summation, or Hamming weight. [15, 13]

```
uint_xlen_t pcnt(uint_xlen_t rs1)
{
   int count = 0;
   for (int index = 0; index < XLEN; index++)
        count += (rs1 >> index) & 1;
   return count;
}
```

2.1.3 And-with-complement (andc)

```
RV32, RV64:
andc rd, rs1, rs2
```

This instruction implements the and-with-complement operation.

```
uint_xlen_t andc(uint_xlen_t rs1, uint_xlen_t rs2)
{
    return rs1 & ~rs2;
}
```

Other with-complement operations (orc, nand, nor, etc) can be implemented by combining not (c.not) with the base ALU operation. (Which can fit in 32 bit when using two compressed instructions.) Only and-with-complement occurs frequently enough to warrant a dedicated instruction.

2.1.4 Min/max instructions (min, max, minu, maxu)

```
RISC-V Bitmanip ISA

RV32, RV64:

min rd, rs1, rs2

max rd, rs1, rs2

minu rd, rs1, rs2

maxu rd, rs1, rs2

RV64 only:

minw rd, rs1, rs2

maxw rd, rs1, rs2

minuw rd, rs1, rs2

minuw rd, rs1, rs2

maxuw rd, rs1, rs2

maxuw rd, rs1, rs2
```

We define 4 R-type instructions min, max, minu, maxu with the following semantics:

```
int_xlen_t min(int_xlen_t rs1, int_xlen_t rs2)
{
    return rs1 < rs2 ? rs1 : rs2;
}
int_xlen_t max(int_xlen_t rs1, int_xlen_t rs2)
{
    return rs1 > rs2 ? rs1 : rs2;
}
uint_xlen_t minu(uint_xlen_t rs1, uint_xlen_t rs2)
{
    return rs1 < rs2 ? rs1 : rs2;
}
uint_xlen_t maxu(uint_xlen_t rs1, uint_xlen_t rs2)
{
    return rs1 > rs2 ? rs1 : rs2;
}
```

Code that performs saturated arithmetic on a word size < XLEN needs to perform min/max operations frequently. A simple way of performing those operations without branching can benefit those programs.

SAT solvers spend a lot of time calculating the absolute value of a signed integer due to the way CNF literals are commonly encoded [6]. With max (or minu) this is a two-instruction operation:

```
neg a1, a0
max a0, a0, a1
```

2.1.5 Shift Ones (Left/Right) (slo, sloi, sro, sroi)

```
RISC-V Bitmanip ISA

RV32, RV64:
slo rd, rs1, rs2
sro rd, rs1, imm
sroi rd, rs1, imm

RV64 only:
slow rd, rs1, rs2
srow rd, rs1, rs2
sloiw rd, rs1, imm
sroiw rd, rs1, imm
sroiw rd, rs1, imm
```

These instructions are similar to shift-logical operations from the base spec, except instead of shifting in zeros, they shift in ones.

```
uint_xlen_t slo(uint_xlen_t rs1, uint_xlen_t rs2)
{
    int shamt = rs2 & (XLEN - 1);
    return ~(~rs1 << shamt);
}
uint_xlen_t sro(uint_xlen_t rs1, uint_xlen_t rs2)
{
    int shamt = rs2 & (XLEN - 1);
    return ~(~rs1 >> shamt);
}
```

ISAs with flag registers often have a "Shift in Carry" or "Rotate through Carry" instruction. Arguably a "Shift Ones" is an equivalent on an ISA like RISC-V that avoids such flag registers.

The main application for the Shift Ones instruction is mask generation.

When implementing this circuit, the only change in the ALU over a standard logical shift is that the value shifted in is not zero, but is a 1-bit register value that has been forwarded from the high bit of the instruction decode. This creates the desired behavior on both logical zero-shifts and logical ones-shifts.

2.2 Bit permutation instructions

2.2.1 Rotate (Left/Right) (rol, ror, rori)

```
RV32, RV64:
ror rd, rs1, rs2
rol rd, rs1, imm

RV64 only:
rorw rd, rs1, rs2
rolw rd, rs1, rs2
rolw rd, rs1, rs2
roriw rd, rs1, imm
```

These instructions are similar to shift-logical operations from the base spec, except they shift in the values from the opposite side of the register, in order. This is also called 'circular shift'.

```
uint_xlen_t rol(uint_xlen_t rs1, uint_xlen_t rs2)
{
    int shamt = rs2 & (XLEN - 1);
    return (rs1 << shamt) | (rs1 >> ((XLEN - shamt) & (XLEN - 1)));
}
uint_xlen_t ror(uint_xlen_t rs1, uint_xlen_t rs2)
{
    int shamt = rs2 & (XLEN - 1);
    return (rs1 >> shamt) | (rs1 << ((XLEN - shamt) & (XLEN - 1)));
}</pre>
```

Rotate shift is implemented very similarly to the other shift instructions. One possible way to encode it is to re-use the way that bit 30 in the instruction encoding selects 'arithmetic shift' when bit 31 is zero (signalling a logical-zero shift). We can re-use this so that when bit 31 is set (signalling a logical-ones shift), if bit 30 is also set, then we are doing a rotate. The following table summarizes the behavior. The generalized reverse instructions can be encoded using the bit pattern that would otherwise encode an "Arithmetic Left Shift" (which is an operation that does not exist). Likewise, the generalized zip instruction can be encoded using the bit pattern that would otherwise encode an "Rotate left immediate".

Bit 31	Bit 30	Meaning
0	0	Logical Shift-Zeros
0	1	Arithmetic Shift
1	0	Logical Shift-Ones
1	1	Rotate

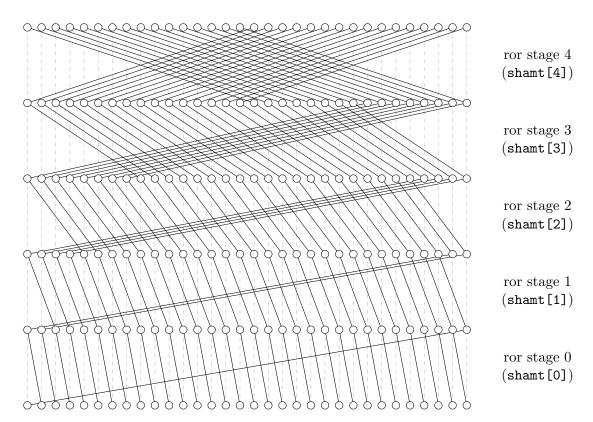


Figure 2.1: ror permutation network

2.2.2 Generalized Reverse (grev, grevi)

```
RISC-V Bitmanip ISA

RV32, RV64:
grev rd, rs1, rs2
grevi rd, rs1, imm

RV64 only:
grevw rd, rs1, rs2
greviw rd, rs1, imm
```

This instruction provides a single hardware instruction that can implement all of byte-order swap, bitwise reversal, short-order-swap, word-order-swap (RV64), nibble-order swap, bitwise reversal in a byte, etc, all from a single hardware instruction. It takes in a single register value and an immediate that controls which function occurs, through controlling the levels in the recursive tree at which reversals occur.

This operation iteratively checks each bit i in rs2 from i = 0 to XLEN -1, and if the corresponding bit is set, swaps each adjacent pair of 2^i bits.



Figure 2.2: grev permutation network

```
uint32_t grev32(uint32_t rs1, uint32_t rs2)
{
    uint32_t x = rs1;
    int shamt = rs2 & 31;
    if (shamt & 1) x = ((x & 0x555555555) << 1) | ((x & 0xAAAAAAAA) >> 1);
    if (shamt & 2) x = ((x & 0x333333333) << 2) | ((x & 0xCCCCCCCC) >> 2);
    if (shamt & 4) x = ((x & 0x0F0F0F0F) << 4) | ((x & 0xF0F0F0F0) >> 4);
    if (shamt & 8) x = ((x & 0x00FF00FF) << 8) | ((x & 0xFF00FF00) >> 8);
    if (shamt & 16) x = ((x & 0x0000FFFF) << 16) | ((x & 0xFFFF0000) >> 16);
    return x;
}
```

```
uint64_t grev64(uint64_t rs1, uint64_t rs2)
{
   uint64_t x = rs1;
   int shamt = rs2 \& 63;
   ((x & Oxaaaaaaaaaaaaaaall) >>
   if (shamt & 2) x = ((x \& 0x3333333333333333333) << 2)
                     ((x & 0xCCCCCCCCCCCCLL) >> 2);
   if (shamt & 4) x = ((x & 0x0F0F0F0F0F0F0F0FLL) << 4)
                     ((x \& 0xF0F0F0F0F0F0F0F0LL) >> 4);
   if (shamt & 8) x = ((x & 0x00FF00FF00FF00FFLL) << 8) |
                     ((x & 0xFF00FF00FF00LL) >> 8);
   if (shamt & 16) x = ((x \& 0x0000FFFF0000FFFFLL) << 16) |
                     ((x & 0xFFFF0000FFFF0000LL) >> 16);
   if (shamt & 32) x = ((x & 0x00000000FFFFFFFFLL) << 32) |
                     ((x & 0xFFFFFFF00000000LL) >> 32);
   return x;
}
```

The above pattern should be intuitive to understand in order to extend this definition in an obvious manner for RV128.

The grev operation can easily be implemented using a permutation network with $log_2(XLEN)$ stages. Figure 2.1 shows the permutation network for ror for reference. Figure 2.2 shows the permutation network for grev.

grev is encoded as standard R-type opcode and grevi is encoded as standard I-type opcode. grev and grevi can use the instruction encoding for "arithmetic shift left".

2.2.3 Generalized Shuffle (shfl, unshfl, shfli, unshfli)

```
RISC-V Bitmanip ISA

RV32, RV64:
shfl rd, rs1, rs2
unshfl rd, rs1, imm
unshfli rd, rs1, imm

RV64 only:
shflw rd, rs1, rs2
unshflw rd, rs1, rs2
shfliw rd, rs1, imm
unshfliw rd, rs1, imm
unshfliw rd, rs1, imm
unshfliw rd, rs1, imm
```

Shuffle is the third bit permutation instruction in the RISC-V Bitmanip extension, after rotary shift and generalized reverse. It implements a generalization of the operation commonly known as perfect outer shuffle and its inverse (shuffle/unshuffle), also known as zip/unzip or interlace/uninterlace.

DMCA

DV290

R	V32		RV64		
shamt	Instruction	shamt	Instruction	shamt	Instruction
0: 00000		0: 000000		32: 100000	wswap
1: 00001	brev.p	1: 000001	brev.p	33: 100001	
2: 00010	pswap.n	2: 000010	pswap.n	34: 100010	
3: 00011	brev.n	3: 000011	brev.n	35: 100011	_
4: 00100	nswap.b	4: 000100	nswap.b	36: 100100	
5: 00101	_	5: 000101	_	37: 100101	_
6: 00110	pswap.b	6: 000110	pswap.b	38: 100110	_
7: 00111	brev.b	7: 000111	brev.b	39: 100111	_
8: 01000	bswap.h	8: 001000	bswap.h	40: 101000	_
9: 01001	_	9: 001001	_	41: 101001	_
10: 01010	_	10: 001010	_	42: 101010	_
11: 01011	_	11: 001011	_	43: 101011	_
12: 01100	nswap.h	12: 001100	nswap.h	44: 101100	_
13: 01101	_	13: 001101	_	45: 101101	
14: 01110	pswap.h	14: 001110	pswap.h	46: 101110	
15: 01111	brev.h	15: 001111	brev.h	47: 101111	_
16: 10000	hswap	16: 010000	hswap.w	48: 110000	hswap
17: 10001	_	17: 010001	_	49: 110001	_
18: 10010	_	18: 010010	_	50: 110010	_
19: 10011	_	19: 010011	_	51: 110011	_
20: 10100	_	20: 010100	_	52: 110100	_
21: 10101	_	21: 010101	_	53: 110101	
22: 10110	_	22: 010110	_	54: 110110	
23: 10111	_	23: 010111	_	55: 110111	
24: 11000	bswap	24: 011000	bswap.w	56: 111000	bswap
25: 11001	_	25: 011001	_	57: 111001	
26: 11010	_	26: 011010	_	58: 111010	
27: 11011	_	27: 011011	_	59: 111011	_
28: 11100	nswap	28: 011100	nswap.w	60: 111100	nswap
29: 11101	_	29: 011101	_	61: 111101	_
30: 11110	pswap	30: 011110	pswap.w	62: 111110	pswap
31: 11111	brev	31: 011111	brev.w	63: 111111	brev

Table 2.1: Pseudo-instructions for grevi instruction

Bit permutations can be understood as reversible functions on bit indices (i.e. 5 bit functions on RV32 and 6 bit functions on RV64).

Operation	Corresponding function on bit indices
Rotate shift	Addition modulo XLEN
Generalized reverse	XOR with bitmask
Generalized shuffle	Bitpermutation

A generalized (un)shuffle operation has $log_2(XLEN) - 1$ control bits, one for each pair of neighbouring bits in a bit index. When the bit is set, generalized shuffle will swap the two index bits. The shfl operation performs this swaps in MSB-to-LSB order (performing a rotate left shift on continuous regions of set control bits), and the unshfl operation performs the swaps in LSB-to-MSB order (performing a rotate right shift on continuous regions of set control bits). Combining

up to $log_2(XLEN)$ of those shfl/unshfl operations can implement any bitpermutation on the bit indices.

The most common type of shuffle/unshuffle operation is one on an immediate control value that only contains one continuous region of set bits. We call those operations zip/unzip and provide pseudo-instructions for them.

Shuffle/unshuffle operations that only have individual bits set (not a continuous region of two or more bits) are their own inverse. This means that a few of the unshfli opcodes are redundant with shfli opcodes and therefore can be reserved for encoding unary functions such as ctz, clz, and pcnt.

shamt	inv	Bit index rotations	Pseudo-Instruction
0: 0000	0	no-op	_
0000	1	no-op	reserved
1: 0001	0	i[1] -> i[0]	zip.n, unzip.n
0001	1	equivalent to 0001 0	reserved
2: 0010	0	i[2] -> i[1]	zip2.b, unzip2.b
0010	1	$equivalent\ to\ 0010\ 0$	reserved
3: 0011	0	i[2] -> i[0]	zip.b
0011	1	i[2] <- i[0]	unzip.b
4: 0100	0	i[3] -> i[2]	zip4.h, unzip4.h
0100	1	$equivalent\ to\ 0100\ 0$	reserved
5: 0101	0	i[3] -> i[2], i[1] -> i[0]	_
0101	1	equivalent to 0101 0	reserved
6: 0110	0	i[3] -> i[1]	zip2.h
0110	1	i[3] <- i[1]	unzip2.h
7: 0111	0	i[3] -> i[0]	zip.h
0111	1	i[3] <- i[0]	unzip.h
8: 1000	0	i[4] -> i[3]	zip8, unzip8
1000	1	$equivalent\ to\ 1000\ 0$	reserved
9: 1001	0	i[4] -> i[3], i[1] -> i[0]	_
1001	1	equivalent to 1001 0	reserved
10: 1010	0	i[4] -> i[3], i[2] -> i[1]	_
1010	1	$equivalent\ to\ 1010\ 0$	reserved
11: 1011	0	i[4] -> i[3], i[2] -> i[0]	_
1011	1	i[4] <- i[3], i[2] <- i[0]	_
12: 1100	0	i[4] -> i[2]	zip4
1100	1	i[4] <- i[2]	unzip4
13: 1101	0	i[4] -> i[2], i[1] -> i[0]	_
1101	1	i[4] <- i[2], i[1] <- i[0]	_
14: 1110	0	i[4] -> i[1]	zip2
1110	1	i[4] <- i[1]	unzip2
15: 1111	0	i[4] -> i[0]	zip
1111	1	i[4] <- i[0]	unzip

Table 2.2: RV32 modes and pseudo-instructions for shfli/unshfli instruction

Like GREV and rotate shift, the (un)shuffle instruction can be implemented using a short sequence of elementary permutations, that are enabled or disabled by the shamt bits. But (un)shuffle has one stage fewer than GREV. Thus shfli+unshfli together require the same amount of encoding space as grevi.

shamt	inv	Pseudo-Instruction	shamt	inv	Pseudo-Instruction
0: 00000	0		16: 10000	0	zip16, unzip16
00000	1	reserved	10000	1	reserved
1: 00001	0	zip.n, unzip.n	17: 10001	0	_
00001	1	reserved	10001	1	reserved
2: 00010	0	zip2.b, unzip2.b	18: 10010	0	
00010	1	reserved	10010	1	reserved
3: 00011	0	zip.b	19: 10011	0	_
00011	1	unzip.b	10011	1	_
4: 00100	0	zip4.h, unzip4.h	20: 10100	0	_
00100	1	reserved	10100	1	reserved
5: 00101	0	_	21: 10101	0	_
00101	1	reserved	10101	1	reserved
6: 00110	0	zip2.h	22: 10110	0	_
00110	1	unzip2.h	10110	1	_
7: 00111	0	zip.h	23: 10111	0	_
00111	1	unzip.h	10111	1	_
8: 01000	0	zip8.w, unzip8.w	24: 11000	0	zip8
01000	1	reserved	11000	1	unzip8
9: 01001	0	_	25: 11001	0	
01001	1	reserved	11001	1	
10: 01010	0	_	26: 11010	0	_
01010	1	reserved	11010	1	
11: 01011	0	_	27: 11011	0	
01011	1	_	11011	1	
12: 01100	0	zip4.w	28: 11100	0	zip4
01100	1	unzip4.w	11100	1	unzip4
13: 01101	0	_	29: 11101	0	
01101	1	_	11101	1	_
14: 01110	0	zip2.w	30: 11110	0	zip2
01110	1	unzip2.w	11110	1	unzip2
15: 01111	0	zip.w	31: 11111	0	zip
01111	1	unzip.w	11111	1	unzip
					-

Table 2.3: RV64 modes and pseudo-instructions for shfli/unshfli instruction

```
uint32_t shuffle32_stage(uint32_t src, uint32_t maskL, uint32_t maskR, int N)
{
    uint32_t x = src & ~(maskL | maskR);
    x |= ((src << N) & maskL) | ((src >> N) & maskR);
    return x;
}
```

Or for RV64:

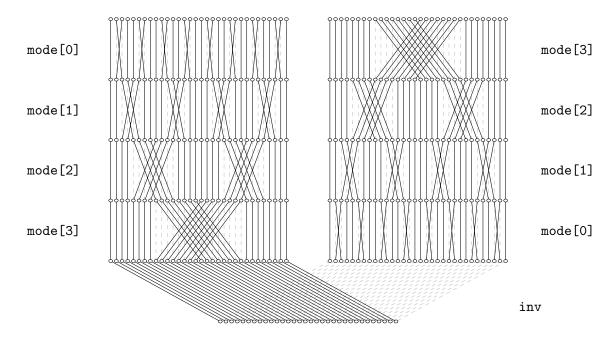


Figure 2.3: (un)shuffle permutation network without "flip" stages

```
uint32_t shf132(uint32_t rs1, uint32_t rs2)
{
    uint32_t x = rs1;
    int shamt = rs2 & 15;
    if (shamt & 8) x = shuffle32\_stage(x, 0x00ff0000, 0x0000ff00, 8);
    if (shamt & 4) x = shuffle32\_stage(x, 0x0f000f00, 0x00f000f0, 4);
    if (shamt & 2) x = shuffle32\_stage(x, 0x30303030, 0x0c0c0c0c, 2);
    if (shamt & 1) x = shuffle32\_stage(x, 0x44444444, 0x222222222, 1);
    return x;
}
uint32_t unshf132(uint32_t rs1, uint32_t rs2)
{
    uint32_t x = rs1;
    int shamt = rs2 \& 15;
    if (shamt & 1) x = shuffle32\_stage(x, 0x44444444, 0x222222222, 1);
    if (shamt & 2) x = shuffle32_stage(x, 0x30303030, 0x0c0c0c0c, 2);
    if (shamt & 4) x = shuffle32_stage(x, 0x0f000f00, 0x00f000f0, 4);
    if (shamt & 8) x = shuffle32\_stage(x, 0x00ff0000, 0x0000ff00, 8);
    return x;
}
```

```
uint64_t shuffle64_stage(uint64_t src, uint64_t maskL, uint64_t maskR, int N)
{
   uint64_t x = src & ~(maskL | maskR);
   x \mid = ((src \ll N) \& maskL) \mid ((src >> N) \& maskR);
   return x;
}
uint64_t shf164(uint64_t rs1, uint64_t rs2)
{
   uint64_t x = rs1;
   int shamt = rs2 \& 31;
   if (shamt & 16) x = shuffle64_stage(x, 0x0000ffff00000000LL,
                                       0x0000000ffff0000LL, 16);
   if (shamt & 8) x = shuffle64_stage(x, 0x00ff000000ff0000LL,
                                       0x0000ff000000ff00LL, 8);
   if (shamt & 4) x = shuffle64_stage(x, 0x0f000f000f000f00LL,
                                       0x00f000f000f000f0LL, 4);
   if (shamt & 2) x = shuffle64\_stage(x, 0x303030303030303030LL,
                                       0x0c0c0c0c0c0c0c0cLL, 2);
   0x222222222222LL, 1);
   return x;
}
uint64_t unshf164(uint64_t rs1, uint64_t rs2)
{
   uint64_t x = rs1;
   int shamt = rs2 \& 31;
   0x222222222222LL, 1);
   if (shamt & 2) x = shuffle64\_stage(x, 0x303030303030303030LL,
                                       0x0c0c0c0c0c0c0c0cLL, 2);
   if (shamt & 4) x = shuffle64\_stage(x, 0x0f000f000f000f000LL,
                                       0x00f000f000f0ULL, 4);
   if (shamt & 8) x = shuffle64\_stage(x, 0x00ff000000ff0000LL,
                                       0x0000ff000000ff00LL, 8);
   if (shamt & 16) x = shuffle64\_stage(x, 0x0000ffff00000000LL,
                                       0x0000000ffff0000LL, 16);
   return x;
}
```

The above pattern should be intuitive to understand in order to extend this definition in an obvious manner for RV128.

Alternatively (un)shuffle) can be implemented in a single network with one more stage than GREV,

with the additional first and last stage executing a permutation that effectively reverses the order of the inner stages. However, since the inner stages only mux half of the bits in the word each, a hardware implementation using this additional "flip" stages might actually be more expensive than simply creating two networks.

```
uint32_t shuffle32_flip(uint32_t src)
{
    uint32_t x = src & 0x88224411;
    x = ((src << 6) \& 0x22001100) | ((src >> 6) \& 0x00880044);
    x = ((src \ll 9) \& 0x00440000) | ((src >> 9) \& 0x00002200);
    x = ((src \ll 15) \& 0x44110000) | ((src >> 15) \& 0x00008822);
    x = ((src \ll 21) \& 0x11000000) | ((src >> 21) \& 0x00000088);
    return x;
}
uint32_t unshf132alt(uint32_t rs1, uint32_t rs2)
{
    uint32_t shfl_mode = 0;
    if (rs2 & 1) shfl_mode |= 8;
    if (rs2 & 2) shfl_mode |= 4;
    if (rs2 & 4) shfl_mode |= 2;
    if (rs2 & 8) shfl_mode |= 1;
    uint32_t x = rs1;
    x = shuffle32_flip(x);
    x = shf132(x, shfl_mode);
    x = shuffle32_flip(x);
    return x;
}
```

Figure 2.4 shows the (un)shuffle permutation network with "flip" stages and Figure 2.3 shows the (un)shuffle permutation network without "flip" stages.

The **zip** instruction with the upper half of its input cleared performs the commonly needed "fanout" operation. (Equivalent to **bdep** with a 0x55555555 mask.) The **zip** instruction applied twice fans out the bits in the lower quarter of the input word by a spacing of 4 bits.

For example, the following code calculates the bitwise prefix sum of the bits in the lower byte of a 32 bit word on RV32:

```
andi a0, a0, 0xff
zip a0, a0
zip a0, a0
slli a1, a0, 4
c.add a0, a1
slli a1, a0, 8
c.add a0, a1
slli a1, a0, 16
c.add a0, a1
```

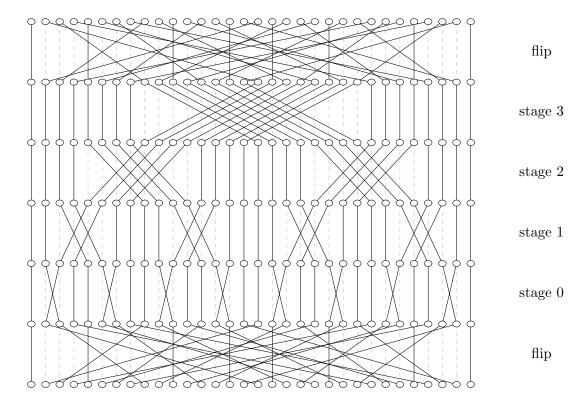


Figure 2.4: (un)shuffle permutation network with "flip" stages

The final prefix sum is stored in the 8 nibbles of the a0 output word.

Similarly, the following code stores the indices of the set bits in the LSB nibbles of the output word (with the LSB bit having index 1), with the unused MSB nibbles in the output set to zero:

```
andi a0, a0, 0xff
zip a0, a0
zip a0, a0
slli a1, a0, 1
or a0, a0, a1
slli a1, a0, 2
or a0, a0, a1
li a1, 0x87654321
and a1, a0, a1
bext a0, a1, a0
```

Other zip modes can be used to "fan-out" in blocks of 2, 4, 8, or 16 bit. zip can be combined with grevi to perform inner shuffles. For example on RV64:

```
li a0, 0x0000000012345678

zip4 t0, a0 ; <- 0x0102030405060708

nswap.b t1, t0 ; <- 0x1020304050607080

zip8 t2, a0 ; <- 0x00120034005600780

bswap.h t3, t2 ; <- 0x1200340056007800

zip16 t4, a0 ; <- 0x0000123400005678

hswap.w t5, t4 ; <- 0x1234000056780000
```

Another application for the zip instruction is generating Morton code [?, MortonCode]

2.3 Bit Extract/Deposit (bext, bdep)

```
RV32, RV64:
bext rd, rs1, rs2
bdep rd, rs1, rs2

RV64 only:
bextw rd, rs1, rs2
bdepw rd, rs1, rs2
```

This instructions implement the generic bit extract and bit deposit functions. This operation is also referred to as bit gather/scatter, bit pack/unpack, parallel extract/deposit, compress/expand, or right_compress/right_expand.

bext collects LSB justified bits to rd from rs1 using extract mask in rs2.

bdep writes LSB justified bits from rs1 to rd using deposit mask in rs2.

Implementations may choose to use smaller multi-cycle implementations of bext and bdep, or even emulate the instructions in software.

Even though multi-cycle bext and bdep often are not fast enough to outperform algorithms that use sequences of shifts and bit masks, dedicated instructions for those operations can still be of great advantage in cases where the mask argument is not constant.

For example, the following code efficiently calculates the index of the tenth set bit in a0 using bdep:

```
li a1, 0x00000200
bdep a0, a1, a0
ctz a0, a0
```

For cases with a constant mask an optimizing compiler would decide when to use bext or bdep based on the optimization profile for the concrete processor it is optimizing for. This is similar to the decision whether to use MUL or DIV with a constant, or to perform the same operation using a longer sequence of much simpler operations.

2.4 Carry-less multiply (clmul, clmulh)

```
RV32, RV64:
clmul rd, rs1, rs2
clmulh rd, rs1, rs2

RV64 only:
clmulw rd, rs1, rs2
```

Calculate the carry-less product [14] of the two arguments. clmul produces the lower half of the carry-less product and clmulh produces the upper half of the carry-less product.

We need to coordinate with the crypto extension work group if carry-less multiply should be part of the B-extension or crypto-extension. (One possible option is to have a vectorized clmul instruction in the crypto-extension and a scalar version in the B-extension.)

The classic applications for clmul are the GCM and CRC [7, 18], but more applications exist, including the following examples.

There are obvious applications in hashing and pseudo random number generations. For example, it has been reported that hashes based on carry-less multiplications can outperform Google's CityHash [11].

clmul of a number with itself inserts zeroes between each input bit. This can be useful for generating Morton code [16].

clmul of a number with -1 calculates the prefix XOR operation. This can be useful for decoding gray codes.

Carry-less multiply can be used to implement Erasure code efficiently [9].

SPARC introduced similar instructions (XMULX, XMULXHI) in SPARC T3 in 2010.

2.5 CRC instructions (crc32.[bhwd], crc32c.[bhwd])

```
RV32, RV64:

crc32.b rd, rs

crc32.w rd, rs

crc32c.b rd, rs

crc32c.b rd, rs

crc32c.b rd, rs

crc32c.w rd, rs

crc32c.w rd, rs

crc32c.w rd, rs
```

Unary CRC instructions that interpret the bits of rs1 as a CRC32/CRC32C state and perform a polynomial reduction of that state shifted left by 8, 16, 32, or 64 bits.

The instructions return the new CRC32/CRC32C state.

The crc32w/crc32cw instructions are equivalent to executing crc32h/crc32ch twice, and crc32h/crc32ch instructions are equivalent to executing crc32b/crc32cb twice.

All 8 CRC instructions operate on bit-reflected data.

```
uint_xlen_t crc32(uint_xlen_t x, int nbits)
{
    for (int i = 0; i < nbits; i++)
        x = (x >> 1) ^ (0xEDB88320 & ^((x&1)-1));
    return x;
}
uint_xlen_t crc32c(uint_xlen_t x, int nbits)
{
    for (int i = 0; i < nbits; i++)
        x = (x >> 1) ^ (0x82F63B78 & ^ ((x&1)-1));
    return x;
}
uint_xlen_t crc32_b(uint_xlen_t rs1) { return crc32(rs1, 8); }
uint_xlen_t crc32_h(uint_xlen_t rs1) { return crc32(rs1, 16); }
uint_xlen_t crc32_w(uint_xlen_t rs1) { return crc32(rs1, 32); }
uint_xlen_t crc32c_b(uint_xlen_t rs1) { return crc32c(rs1, 8); }
uint_xlen_t crc32c_h(uint_xlen_t rs1) { return crc32c(rs1, 16); }
uint_xlen_t crc32c_w(uint_xlen_t rs1) { return crc32c(rs1, 32); }
#if XLEN > 32
uint_xlen_t crc32_d (uint_xlen_t rs1) { return crc32 (rs1, 64); }
uint_xlen_t crc32c_d(uint_xlen_t rs1) { return crc32c(rs1, 64); }
#endif
```

Payload data must be XOR'ed into the LSB end of the state before executing the CRC instruction. The following code demonstrates the use of crc32.b:

```
uint32_t crc32_demo(const uint8_t *p, int len)
{
   uint32_t x = 0xfffffffff;
   for (int i = 0; i < len; i++) {
      x = x ^ p[i];
      x = crc32_b(x);
   }
   return ~x;
}</pre>
```

In terms of binary polynomial arithmetic those instructions perform the operation

$$rd'(x) = (rs1'(x) \cdot x^N) \mod \{1, P'\}(x),$$

with $N \in \{8, 16, 32, 64\}$, P = 0xEDB8_8320 for CRC32 and P = 0x82F6_3B78 for CRC32C, a' denoting the XLEN bit reversal of a, and $\{a, b\}$ denoting bit concatenation. Note that for example for CRC32 $\{1, P'\} = 0$ x1_04C1_1DB7 on RV32 and $\{1, P'\} = 0$ x1_04C1_1DB7_0000_0000 on RV64.

These dedicated CRC instructions are meant for RISC-V implementations without fast multiplier and therefore without fast clmul[h]. For implementations with fast clmul[h] it is recommended to use the methods described in [7] and demonstrated in [18] that can process XLEN input bits using just one carry-less multiply for arbitrary CRC polynomials.

In applications where those methods are not applicable it is possible to emulate the dedicated CRC instructions using two carry-less multiplies that implement a Barrett reduction. The following example implements a replacement for crc32.w (RV32).

```
crc32_w:
    li t0, 0x04C11DB7
    li t1, 0x04D101DF
    brev a0, a0
    clmulh a1, a0, t1
    xor a1, a1, a0
    clmul a0, a1, t0
    brev a0, a0
    ret
```

2.6 Bit-matrix operations (bmatxor, bmator, bmatflip)

```
RV64 only:
bmator rd, rs1, rs2
bmatxor rd, rs1, rs2
bmatflip rd, rs
```

These are 64-bit-only instruction that are not available on RV32. On RV128 they ignore the upper half of operands and set the upper half of the results to zero.

This instructions interpret a 64-bit value as 8x8 binary matrix.

bmatxor performs a matrix-matrix multiply with boolean AND as multiply operator and boolean XOR as addition operator.

bmator performs a matrix-matrix multiply with boolean AND as multiply operator and boolean OR as addition operator.

bmatflip is a unary operator that transposes the source matrix. It is equivalent to zip; zip; zip on RV64.

Among other things, bmatxor/bmator can be used to perform arbitrary permutations of bits within each byte (permutation matrix as 2nd operand) or perform arbitrary permutations of bytes within a 64-bit word (permutation matrix as 1st operand).

There are similar instructions in Cray XMT [3]. The Cray X1 architecture even has a full 64x64 bit matrix multiply unit [2].

The MMIX architecture has MOR and MXOR instructions with the same semantic. [10, p. 182f]

```
uint64_t bmatflip(uint64_t rs1)
{
    uint64_t x = rs1;
    x = shfl64(x, 31);
    x = shfl64(x, 31);
    x = shfl64(x, 31);
    return x;
}
```

```
uint64_t bmatxor(uint64_t rs1, uint64_t rs2)
{
    // transpose of rs2
    uint64_t rs2t = bmatflip(rs2);
    uint8_t u[8]; // rows of rs1
    uint8_t v[8]; // cols of rs2
    for (int i = 0; i < 8; i++) {
        u[i] = rs1 >> (i*8);
        v[i] = rs2t >> (i*8);
    }
    uint64_t x = 0;
    for (int i = 0; i < 64; i++) {
        if (pcnt(u[i / 8] & v[i % 8]) & 1)
            x |= 1LL << i;
    }
    return x;
}
uint64_t bmator(uint64_t rs1, uint64_t rs2)
{
    // transpose of rs2
    uint64_t rs2t = bmatflip(rs2);
    uint8_t u[8]; // rows of rs1
    uint8_t v[8]; // cols of rs2
    for (int i = 0; i < 8; i++) {
        u[i] = rs1 >> (i*8);
        v[i] = rs2t >> (i*8);
    }
    uint64_t x = 0;
    for (int i = 0; i < 64; i++) {
        if ((u[i / 8] & v[i % 8]) != 0)
            x |= 1LL << i;
    }
    return x;
}
```

2.7 Ternary bit-manipulation instructions

2.7.1 Conditional mix (cmix)

```
RV32, RV64:
cmix rd, rs1, rs2, rs2
```

The cmix rd, rs1, rs2, rs3 instruction selects bits from rs1 and rs3 based on the bits in the control word rs2. It is equivalent to the following sequence.

```
and rd, rs1, rs2
andc t0, rs3, rs2
or rd, rd, t0
```

Using cmix a single butterfly or stage can be implemented in only two instructions. Thus, arbitrary bit-permutations can be implemented using only 18 instruction (32 bit) or 22 instructions (64 bits).

```
uint_xlen_t cmix(uint_xlen_t rs1, uint_xlen_t rs2, uint_xlen_t rs3)
{
    return (rs1 & rs2) | (rs3 & ~rs2);
}
```

2.7.2 Conditional move (cmov)

The cmov rd, rs1, rs2, rs3 instruction selects rs1 if the control word rs2 is non-zero, and rs3 if the control word is zero.

```
uint_xlen_t cmov(uint_xlen_t rs1, uint_xlen_t rs2, uint_xlen_t rs3)
{
    return rs2 ? rs1 : rs3;
}
```

2.7.3 Funnel shift (fsl, fsr)

```
RV32, RV64:
fsl rd, rs1, rs2, rs2
fsr rd, rs1, rs2, rs2
```

The fsl rd, rs1, rs2, rs3 instruction creates a 2 · XLEN word by concatenating rs1 and rs3

(with rs1 in the MSB half), rotate-left-shifts that word by the amount indicated in the $log_2(XLEN)$ + 1 LSB bits in rs2, and then writes the MSB half of the result to rd.

The fsr rd, rs1, rs2, rs3 instruction creates a $2 \cdot \text{XLEN}$ word by concatenating rs1 and rs3 (with rs1 in the LSB half), rotate-right-shifts that word by the amount indicated in the $log_2(\text{XLEN}) + 1$ LSB bits in rs2, and then writes the LSB half of the result to rd.

```
uint_xlen_t fsl(uint_xlen_t rs1, uint_xlen_t rs2, uint_xlen_t rs3)
{
    int shamt = rs2 & (2*XLEN - 1);
    uint_xlen_t A = rs1, B = rs3;
    if (shamt >= XLEN) {
        shamt -= XLEN;
        A = rs3;
        B = rs1;
    return shamt ? (A << shamt) | (B >> (XLEN-shamt)) : A;
}
uint_xlen_t fsr(uint_xlen_t rs1, uint_xlen_t rs2, uint_xlen_t rs3)
    int shamt = rs2 & (2*XLEN - 1);
    uint_xlen_t A = rs1, B = rs3;
    if (shamt >= XLEN) {
        shamt -= XLEN;
        A = rs3;
        B = rs1;
    }
    return shamt ? (A >> shamt) | (B << (XLEN-shamt)) : A;
}
```

A shift unit capable of either fsl or fsr is capable of performing all the other shift functions, including the other funnel shift, with only minimal additional logic.

For any values of A, C, and C:

```
fsl(A, B, C) = fsr(A, -B, C)
```

And for any values x and $0 \le \text{shamt} < \text{XLEN}$:

```
sll(x, shamt) == fsl(x, shamt, 0)
srl(x, shamt) == fsr(x, shamt, 0)
sra(x, shamt) == fsr(x, shamt, sext_x)
slo(x, shamt) == fsl(x, shamt, ~0)
sro(x, shamt) == fsr(x, shamt, ~0)
ror(x, shamt) == fsr(x, shamt, x)
rol(x, shamt) == fsl(x, shamt, x)
```

2.8 Compressed NOT instructions (c.not)

The RISC-V ISA has no dedicated instructions for bitwise inverse (not) and arithmetic inverse (neg). Instead not is implemented as xori rd, rs, -1 and neg is implemented as sub rd, x0, rs.

In bitmanipulation code not is a very common operations. But there are no compressed encodings for those operations because there is no c.xori instruction.

Many bit manipulation operations that have dedicated opcodes in other ISAs must be constructed from smaller atoms in RISC-V Bitmanip code. But implementations might choose to implement them in a single micro-op using macro-op-fusion. For this it can be helpful when the fused sequences are short. **not** is a good candidate for macro-op-fusion, so it can be helpful to have compressed opcodes for them.

The compressed instructions c.not must be supported by all implementations that support the C extension and Bitmanip.

An encoding with the constraint rd = rs would fit nicely in the reserved space in c.addi16sp/c.lui.

15 14 13	12	11 10 9 8 7	6 5 4 3 2	1 0	
011	nzimm[9]	2	nzimm[4 6 8:7 5]	01	
011	nzimm[17]	$rd \neq \{0, 2\}$	nzimm[16:12]	01	
011	0	$rs1/rd \neq \{0, 2\}$	0	01	-

C.ADDI16SP (RES, nzimm=0) C.LUI (RES, nzimm=0; HINT, rd=0) C.NOT

Without this constraint it would fit nicely in one of the two reserved ALU slots in RVC Quadrant 1

15 14 13	12	11 10	9 8 7	6 5	4 3 2	1 0
100	1	11	rs1'/rd'	01	rs2′	01
100	1	11	rd'	10	rs1′	01
100	1	11		11		01

C.ADDW (RV64/128; RV32 RES) C.NOT Reserved Reserved

A c.not instruction would be most useful as a prefix for macro-op fusion if it supported $rd \neq rs$. For postfix-fusion the constraint rd = rs is acceptable. Experiments will show which version has the best trade-off between utility and used compressed encoding space.

The entire RVC encoding space is 15.585 bits wide, the remaining reserved encoding space in RVC is 11.155 bits wide, not including space that is only reserved on RV32/RV64. This means that above encodings would use 0.0065% or 0.13% of the RVC encoding space respectively, or 1.4% or 2.8% of the reserved RVC encoding space respectively. Preliminary experiments have shown that NOT instructions make up approximately 1% of bitmanipulation code. [19]

2.9 Micro architectural considerations and macro-op fusion for bit-manipulation

2.9.1 Fast MUL, MULH, MULHSU, MULHU

A lot of bit manipulation code depends on "multiply with magic number"-tricks. Often those tricks need the upper half of the 2·XLEN product. Therefore decent performance for the MUL and especially MULH[[S]U] instructions is important for fast bit manipulation code.

2.9.2 Fused NOT instructions

Preliminary experiments have shown that NOT instructions make up approximately 1% of bitmanipulation code size, more when looking at dynamic instruction count. [19]

Therefore it makes sense to fuse NOT instructions with other ALU instructions, if possible.

The most important form of NOT fusion is postfix fusion:

```
alu_op rd, rs1, rs2
not rd. rd
```

But there is also additional value in prefix fusion:

```
not rd, rs1
alu_op rd, rd, rs2
not rd, rs2
alu_op rd, rs1, rd
```

The compressed NOT instructions c.not helps keeping those fused sequences short.

2.9.3 Fused *-srli and *-srai sequences

Pairs of left end right shifts are common operations for extracting a bit field.

To extract the continuous bit field starting at pos with length len from rs (with pos > 0, len > 0, and pos + len \le XLEN):

```
slli rd, rs, (XLEN-len-pos)
srli rd, rd, (XLEN-len)
```

Using srai instead of srli will sign-extend the extracted bit-field.

Similarly, placing a bit field with length len at the position pos:

```
slli rd, rs, (XLEN-len)
srli rd, rd, (XLEN-len-pos)
```

If possible, an implementation should fuse the following macro ops:

```
alu_op rd, rs1, rs2
srli rd, rd, imm
alu_op rd, rs1, rs2
srai rd, rd, imm
```

Note that the postfix right shift instruction can use a compressed encoding, yielding a 48-bit fused instruction if alu_op is a 32-bit instruction.

For generating masks, i.e. constants with one continuous run of 1 bits, a sequence like the following can be used that would utilize postfix fusion of right shifts:

```
sroi rd, len
c.srli rd, (XLEN-len-pos)
```

This can be a useful sequence on RV64, where loading an arbitrary 64-bit constant would usually require at least 96 bits (using c.ld).

2.10 Opcode Encodings

This chapter contains proposed encodings for most of the instructions described in this document. **DO NOT IMPLEMENT THESE OPCODES YET.** We are trying to get official opcodes assigned and will update this chapter soon with the official opcodes.

	3			2				1	_				
	1 0 9 8 7	6 5	4 3 2 1	0 9	8 7 6	5 4	1 3 2	1 0	98	7 6	5 4 3 2 1	0	
	funct7	7	rs2		rs1		f3		rd		opcode		R-type
	rs3	f2	rs2		rs1	- 1	f3		rd	-	opcode	-	R4-type
		imm			rs1		f3	l 	rd		opcode	 1	I-type
	0110000		00000		rs1		001		rd		0010011		CLZ
	0110000		00001		rs1	- 1	001		rd	- 1	0010011	- 1	CTZ
	0110000		00010		rs1	- 1	001		rd		0010011		PCNT
	0100000	- 1	rs2		rs1	- 1	111		rd		0110011		ANDC
	0010000	- 1	rs2		rs1	- 1	001		rd		0110011		SLO
	0010000	- 1	rs2		rs1	- 1	101		rd		0110011		SRO
	00100		imm		rs1		001		rd		0010011	- 1	SLOI
	00100		imm		rs1	1	101		rd	-	0010011	- 1	SROI
	0110000	- 1	rs2		rs1	- 1	001		rd		0110011		ROL
	0110000	- 1	rs2		rs1	1	101		rd	-	0110011	- 1	ROR
	01100		imm		rs1	1	101		rd	-	0010011	- 1	RORI
	0100000	- 1	rs2		rs1	1	001		rd	-	0110011	- 1	GREV
١	01000		imm		rs1		001		rd	1	0010011	- 1	GREVI
	0000100	- 1	rs2		rs1	- 1	001		rd	-	0110011	-	SHFL
	0000100	1	rs2		rs1		101		rd	1	0110011	I	UNSHFL
	000010	- 1	imm		rs1		001		rd	- 1	0010011	- 1	SHFLI
١	000010	1	imm		rs1		101		rd	1	0010011	- 1	UNSHFLI

1	0000100	- 1	rs2	rs1	000	rd	0110011	BEXT
1	0000100		rs2	rs1	100	rd	0110011	BDEP
1	rs3	10	rs2	rs1	010	l rd	0110011	CMIX
1	rs3	10	rs2	rs1	011	l rd	0110011	CMOV
ı	rs3	10	rs2	rs1	001	rd	0110011	FSL
Ι	rs3	10	rs2	rs1	101	l rd	0110011	FSR
Ĺ	0000100	ĺ	rs2	rs1	010		0110011	MIN
i	0000100	İ	rs2	rs1	011	l rd	0110011	MINU
i	0000100	i	rs2	rs1	110	l rd	0110011	MAX
Ĺ	0000100	i	rs2	rs1	111	l rd	0110011	MAXU
i	0000101	i	rs2	rs1	000	l rd	0110011	CLMUL
Ĺ	0000101	İ	rs2	rs1	001		0110011	CLMULH
Ĺ	0110000		10000	rs1	001	l rd	0010011	CRC32.B
Ĺ	0110000		10001	rs1	001	l rd	0010011	CRC32.H
i	0110000		10010	rs1	001	l rd	0010011	CRC32.W
i	0110000		10011	rs1	001	l rd	0010011	CRC32.D
i	0110000		11000	rs1	001	l rd	0010011	CRC32C.B
i	0110000		11001	rs1	001	l rd	0010011	CRC32C.H
Ĺ	0110000		11010	rs1	001	l rd	0010011	CRC32C.W
Ĺ	0110000		11011	rs1	001	l rd	0010011	CRC32C.D
Ι	0000100	I	rs2	rs1	110	l rd	0110011	BMATXOR
Ì	0000100	ĺ	rs2	rs1	111	l rd	0110011	BMATOR
1	0110000		00011	rs1	001	l rd	0010011	BMATFLIP
-								
1	0110000		00000	rs1	001	rd	0011011	CLZW
	0110000		00001	rs1	001	rd	0011011	CTZW
	0110000		00010	rs1	001	rd	0011011	PCNTW
-	0010000		rs2	rs1	001	rd	0111011	SLOW
-	0010000		rs2	rs1	101	rd	0111011	SROW
-	0010000		imm	rs1	001	rd	0011011	SLOIW
-	0010000		imm	rs1	101	rd	0011011	SROIW
-	0110000		rs2	rs1	001	rd	0111011	ROLW
-	0110000		rs2	rs1	101	rd	0111011	RORW
	0110000		imm	rs1	101	rd	0011011	RORIW
	0100000		rs2	rs1	001	rd	0111011	GREVW
	0100000		imm	rs1	001	rd	0011011	GREVIW
	0000100		rs2	rs1	001	rd	0111011	SHFLW
	0000100		rs2	rs1	101	rd	0111011	UNSHFLW
	00001000)	imm	rs1	001	rd	0011011	SHFLIW
	00001000)	imm	rs1	101	rd	0011011	UNSHFLIW
	0000100		rs2	rs1	000	rd	0111011	BEXTW
	0000100		rs2	rs1	100	rd	0111011	BDEPW
	0000100		rs2	rs1	010	rd	0111011	MINW
1	0000100		rs2	rs1	011	rd	0111011	MINUW
1	0000100		rs2	rs1	110	rd	0111011	MAXW
1	0000100		rs2	rs1	111	rd	0111011	MAXUW
	0000101	I	rs2	rs1	000	rd	0110011	CLMULW
-								

2.11 Fast C reference implementations

GCC has intrinsics for the bit counting instructions clz, ctz, and pcnt. So a performance-sensitive application (such as an emulator) should probably just use those:

```
uint32_t fast_clz32(uint32_t rs1)
{
    if (rs1 == 0)
        return XLEN;
    assert(sizeof(int) == 4);
    return __builtin_clz(rs1);
}
uint64_t fast_clz64(uint64_t rs1)
{
    if (rs1 == 0)
        return XLEN;
    assert(sizeof(long long) == 8);
    return __builtin_clzll(rs1);
}
uint32_t fast_ctz32(uint32_t rs1)
    if (rs1 == 0)
        return XLEN;
    assert(sizeof(int) == 4);
    return __builtin_ctz(rs1);
}
uint64_t fast_ctz64(uint64_t rs1)
{
    if (rs1 == 0)
        return XLEN;
    assert(sizeof(long long) == 8);
    return __builtin_ctzll(rs1);
}
uint32_t fast_pcnt32(uint32_t rs1)
{
    assert(sizeof(int) == 4);
    return __builtin_popcount(rs1);
}
uint64_t fast_pcnt64(uint64_t rs1)
    assert(sizeof(long long) == 8);
    return __builtin_popcountll(rs1);
}
```

For processors with BMI2 support GCC has intrinsics for bit extract and bit deposit instructions

```
(compile with -mbmi2 and include <x86intrin.h>):
    uint32_t fast_bext32(uint32_t rs1, uint32_t rs2)
{
        return _pext_u32(rs1, rs2);
}
    uint64_t fast_bext64(uint64_t rs1, uint64_t rs2)
{
        return _pext_u64(rs1, rs2);
}
    uint32_t fast_bdep32(uint32_t rs1, uint32_t rs2)
{
        return _pdep_u32(rs1, rs2);
}
    uint64_t fast_bdep64(uint64_t rs1, uint64_t rs2)
{
        return _pdep_u64(rs1, rs2);
}
```

For other processors we need to provide our own implementations. The following implementation is a good compromise between code complexity and runtime:

```
uint_xlen_t fast_bext(uint_xlen_t rs1, uint_xlen_t rs2)
    uint_xlen_t c = 0, i = 0, mask = rs2;
    while (mask) {
        uint_xlen_t b = mask & ~((mask | (mask-1)) + 1);
        c |= (rs1 & b) >> (fast_ctz(b) - i);
        i += fast_pcnt(b);
        mask -= b;
    }
    return c;
}
uint_xlen_t fast_bdep(uint_xlen_t rs1, uint_xlen_t rs2)
{
    uint_xlen_t c = 0, i = 0, mask = rs2;
    while (mask) {
        uint_xlen_t b = mask & ~((mask | (mask-1)) + 1);
        c |= (rs1 << (fast_ctz(b) - i)) & b;</pre>
        i += fast_pcnt(b);
        mask -= b;
    }
    return c;
}
```

For the other Bitmanip instructions the C reference functions given in Chapter 2 are already reasonably efficient.

Chapter 3

Discussion

IMPORTANT NOTE: Some of the discussions below refer to an older draft of the RISC-V Bitmanip extension and are now out-of-date.

3.1 Frequently Asked Questions

Which instructions were considered but not included in the RISC-V Bitmanip extension?

- A bit-field extract instruction. Unfortunately the encoding space required by such an instruction would be enormous (for forward-looking support up to RV128 this would require a 2 = 14 bits immediate. This was deemed too expensive considering that the same functionality can already be implemented using only two shift instructions. However, see Chapter ?? for an alternative. (The same encoding space argument applies to instructions for inserting bits in a bit field, or setting or clearing ranges of bits.)
- A "butterfly" instruction with an XLEN/2 immediate that would run one butterfly stage (see Section 4.6.1). The smartbextdep implementation of bext/bdep (see Section 3.3) already includes the hardware for that, all that would be required is exposing a few internal control signals. However, the encoding cost of such an instruction would be enormous, the instruction itself would only be useful in niche applications, and it would require implementers to implement bext/bdep in a certain way. So it's is not worth the effort considering that a butterfly stage can also be implemented in four instructions using grevi and the MIX pattern (see Section 4.6.1).
- A reverse-subtract-immediate operation that performs the calculation $\mathtt{imm-rs}$. This comes up often in calculating bit indices (for example XLEN -i is a very common operation, and compressed instructions are only of some help here because compressed immediates are in the range -32...31). However, a reverse-subtract-immediate operation is not very bit-manipulation specific, would require a much larger encoding space than the rest of the RISC-V Bitmanip extension (it would have a 12 bit immediate), and does not add any functionality that can not be emulated easily with neg and addi: $\mathtt{rsbi}(x,k) = \mathtt{neg}(\mathtt{addi}(x,-k)) = \mathtt{addi}(\mathtt{neg}(x),k)$

- Conditional move and mix instructions. Those would be very helpful! However, they would require three source operands, and we did not want to add a register file with three read ports as requirement for the RISC-V Bitmanip extension. See Section 4.2 for short sequences implementing conditional move (aka mux) and mix operations.
- Funnel shift instructions. Those are also super helpful! For example when processing input that is a bit-packed stream of words of arbitrary (variable) bit width. However, a funnel shift instruction would also require three source operands, therefore it was not considered for inclusion in the RISC-V Bitmanip extension.
- Instructions for testing, setting and clearing bits. This operations can be performed in few easily macro-op fusible instructions. So implementations might provide hardware support for them, but we do not reserve dedicated opcodes for those operations.
- Instructions for the usual patterns of ALU operations to fiddle with trailing bits, such as x & -x (extract lowest set bit), or x ^ (x 1) (mask up to and including lowest set bit). But those operations all fit into short easily macro-op fusible instruction sequences (see Section 4.7).
- Instructions for carry-less multiplication (similar to the x86 CLMUL instructions). They are useful for cryptographic applications, CRC calculations, and compression. But for cryptographic applications they need to be implemented in a way that executes them in constant time to avoid leaking secret information via a timing side-channel. Because of those considerations, and the area requirements for a core implementing the operations, I think it is better to leave these instructions for a RISC-V ISA extension for security instructions.

grev seems to be overly complicated? Do we really need it?

The grev instruction can be used to build a wide range of common bit permutation instructions, such as endianness conversion or bit reversal.

If grev were removed from this spec we would need to add a few new instructions in its place for those operations.

Do we really need all the *W opcodes for 32 bit ops on RV64?

I don't know. I think nobody does know at the moment. But they add very little complexity to the core. So the only question is if it is worth the encoding space. We need to run proper experiments with compilers that support those instructions. So they are in for now and if future evaluations show that they are not worth the encoding space then we can still throw them out.

Why only andc and not any other complement operators?

Early versions of this spec also included other *c operators. But experiments have shown that andc is much more common in bit manipulation code than any other operators. [19] Especially because it is commonly used in mix and mux operations.

Why andc? It can easily be emulated using and and not.

Yes, and we did not include any other ALU+complement operators. But andc is so common (mostly because of the mix and mux patterns), and its implementation is so cheap, that we decided to dedicate an R-type instruction to the operation.

The shift-ones instructions can be emulated using not and logical shift? Do we really need it?

Yes, a shift-ones instruction can easily be implemented using the logical shift instructions, with a bitwise invert before and after it. (This is literally the code we are using in the reference C implementation of shift-ones.)

We have decided to include it for now so that we can collect benchmark data before making a final decision on the inclusion or exclusion of those instructions. The main objection here is instruction encoding space. The hardware overhead of adding this functionality to a shifter is relatively low.

BEXT/BDEP look like really expensive operations. Do we really need them?

Yes, they are expensive, but not as expensive as one might expect. A single-cycle 32 bit BEXT+BDEP+GREV core can be implemented in less space than a single-cycle 16x16 bit multiplier with 32 bit output. [17]

It is also important to keep in mind that implementing those operations in software is very expensive. Hacker's Delight contains a highly optimized software implementation of 32-bit BEXT that requires > 120 instructions. Their BDEP software implementation requires > 160 instructions. (Please disregard the "hardware-oriented algorithm" described in Hacker's Delight. It is extremely expensive compared to other implementations. [17])

But do we really need 64-bit BEXT/BDEP?

Good question. A 64-bit BEXT/BDEP unit certainly is more than 2x the size of a 32-bit unit and in most cases 32-bit would be sufficient. It is also not very difficult to emulate 64-bit BEXT/BDEP using 32-bit BEXT/BDEP. On RV64 (with data in a0 and mask in a1):

bext64:

```
pcntw a2, a1
bextw a3, a0, a1
c.srli a0, 32
c.srli a1, 32
bextw a0, a0, a1
sloi a1, zero, 32
c.and a3, a1
c.and a0, a1
sll a0, a2
c.or a0, a3
ret
```

```
bdep64:
   pcntw a2, a1
   bdepw a3, a0, a1
   srl a0, a0, a2
   c.srli a1, 32
   bdepw a0, a0, a1
   c.slli a0, 32
   c.srli a3, 32
   c.srli a3, 32
   c.or a0, a3
   ret
```

However, one solution here would be to still reserve the opcode for 64-bit BEXT/BDEP and leave it to the implementation to decide whether to implement the function in hardware or emulating it using a software trap.

Compressed encoding space is expensive. Do we need c.neg, c.not, c.brev?

Because they are unary operations and encoded with rd' = rs', they only take up $\approx 0.05\%$ of the total "C" encoding space, and only $\approx 1.1\%$ of the remaining reserved "C" encoding space.

They are common building blocks of sequences that are candidates for macro-op fusion, and keeping these sequences short can help with decoding them efficiently, especially c.not.

c.neg can be emulated using c.not if the next (or previous) operation is an addi. But commonly c.neg is simply used to turn the value 1 into all-bits-set and leave the value 0 at 0. Or it is used stand-alone to effectively perform the operation XLEN-i to calculate the shift amount for the 2nd shift in a funnel shift (see Section 4.5, XLEN does not actually need to be added because the shift operations only uses the lower $log_2(XLEN)$ bits of their 2nd argument anyways). In those cases there is no addition before or after the c.neg instruction.

Further evaluation will show which of those instructions are worth their cost in compressed encoding space and decoder logic.

The compressed instructions use weird encodings. Is this really necessary?

This criticism is justified.

- 1. c.neg contains rd'/rs2' instead of rd'/rs1'.
- 2. All three instructions use an encoding that can not be determined by looking only at the bits 15:13, and 1:0. This complicates decoder logic and decoder logic depth.

One possible solution would be to have only one compressed instruction (c.not is the obvious candidate). This instruction would occupy the entire reserved encoding space in c.lui/c.addi16sp

RV32		RV64		Instruction									
3x	0	6x	0	clz, clzw, ctz, ctzw, pcnt, pcntw									
3x	15	3x	15	grev, shfl, unshfl									
2x	15	2x	16	grevi, shfli/unshfli									
2x	15	6x	15	slo, sro, slow, srow, sloiw, sroiw									
2x	15	2x	16	sloi, sroi									
2x	15	5x	15	ror, rol, rorw, rolw, roriw									
1x	15	1x	16	rori									
3x	15	3x	15	andc, bext, bdep									
		2x	15	bextw, bdepw									
3x	4	3x	4	c.neg, c.not, c.brev									

Table 3.1: Bitmanip encoding space (log2, i.e. in equivalent number of bits)

and would operate on rd/rs instead of rd'/rs'. This way the instruction format of c.not would match that of c.addi16sp and c.lui.

Another solution would be to use the reserved $c.addi4spn\ nzuimm = 0$ encoding with rd'=0 still being an illegal instruction.

3.2 Analysis of used encoding space

Table 3.1 lists all Bitmanip instructions and the encoding space needed to implement them. We do not count any encoding space for the unary instructions clz, clzw, ctz, ctzw, pcnt, and pcntw because they can be implemented in the reserved modes in gzip.

The compressed encoding space is ≈ 15.6 bits wide.

$$log_2(3 \cdot 2^{14}) \approx 15.585$$

The compressed Bitmanip instructions need the equivalent of a 4.6 bit encoding space, or $\approx 0.05\%$ of the total ≈ 15.6 bits available.

$$log_2(3 \cdot 2^3) \approx 4.585$$

 $100/(2^{15.585-4.585}) \approx 0.049$

The reserved "C" encoding space as of Version 2.2 of the RISC-V User-Level ISA is summarized in Table 3.2. (This is not including RV32-only or RV64-only reserved encoding space.) According to this information the reserved space is ≈ 11.2 bits wide. Therefore the compressed Bitmanip instructions would use $\approx 1.1\%$ of the remaining reserved "C" encoding space.

$$log_2(2^3 - 1 + 2^{11} + 2^5 + 2^7 + 2^6 + 1) \approx 11.155$$

$$100/(2^{11.155-4.585}) \approx 1.053$$

15	14 13	3 12	11	10	9	8	7	6	5	4	3	2	1	0	
00	00				0						nz		0	0	$2^3 - 1$
10	00						_						0	0	2^{11}
0:	11	0	_				0					0	1	2^5	
10	00	1	111			_		1		_	_		0	1	2^{7}
0:	10	_			0					_			1	0	2^{6}
10	00	0			0					0			1	0	1

Table 3.2: Reserved "C" encoding space as of Version 2.2 of the RISC-V User-Level ISA

On RV32, Bitmanip requires the equivalent of a \approx 18.9 bit encoding space in the uncompressed encoding space. For comparison: A single standard I-type instruction (such as ADDI or SLTIU) requires a 22 bit encoding space. I.e. the entire RV32 Bitmanip extension needs less than one-eighth of the encoding space of the SLTIU instruction.

$$log_2(15 \cdot 2^{15}) \approx 18.907$$

On RV64, Bitmanip requires the equivalent of a \approx 19.9 bit encoding space in the uncompressed encoding space. I.e. the entire RV64 Bitmanip extension needs about one-quarter of the encoding space of the SLTIU instruction.

$$log_2(19 \cdot 2^{15} + 5 \cdot 2^{16}) \approx 19.858$$

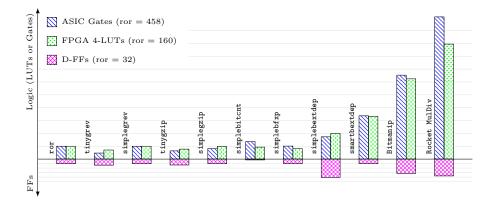


Figure 3.1: Relative area of Bitmanip reference cores compared to simple 32-bit rotate shift and Rocket MulDiv. The height of 1 LUT $\hat{=}$ 2.86 Gates, 1 FF $\hat{=}$ 5.00 Gates.

3.3 Area usage of reference implementations

We created RV32 implementations for the different compute cores necessary to implement Bitmanip (and XBitfield): https://github.com/riscv/riscv-bitmanip/tree/master/verilog

We are comparing the area of those cores with the following two references:

1. A very basic right-rotate shift core (ror):

```
module reference_ror (
    input clock,
    input [31:0] din,
    input [4:0] shamt,
    output reg [31:0] dout
);
    always @(posedge clock)
        dout <= {din, din} >> shamt;
endmodule
```

2. A version of the Rocket RV32 MulDiv core that performs multiplication in 5 cycles and division/modulo in 32+ cycles. This is the MulDiv default configuration used in Rocket for small cores.

The implementations of cores performing Bitmanip (and XBitfield) operations are:

- tinygrev A small multi-cycle implementation of grev/grevi. It takes 6 cycles for one operation.
- tinygzip A small multi-cycle implementation of shfl/unshfli/shfli/unshfli. It takes 5 cycles for one operation.
- simplegrev A simple single-cycle implementation of grev/grevi.
- simplegzip A simple single-cycle implementation of shfl/unshfli/shfli/unshfli.
- simplebitcht A simple single-cycle implementation of clz, ctz, and pcnt.
- simplebfxp A simple single-cycle implementation of the XBitfield bfxp instruction (see Chapter ??). It requires an external rotate-shift implementation.
- simplebextdep A straight-forward multi-cycle implementation of bext/bdep. It takes up to 32 cycles for one operation (number of set mask bits).
- smartbextdep A single-cycle implementation of bext/bdep using the method described in [8].

We implemented those cores with an ASIC cell library containing NOT, NAND, NOR, AOI3, OAI3, AOI4, and OAI4 gates. For the gate counts below we count NAND and NOR as 1 gate, NOT as 0.5 gates, AOI3 and OAI3 as 1.5 gates, and AOI4 and OAI4 as 2 gates.

We also implemented the cores using a simple FPGA architecture with 4-LUTs (and no dedicated CARRY or MUX resources).

Module	Gates	Depth	4-LUTs	Depth	FFs
ror	458	7	160	5	32
tinygrev	215	5	113	3	43
simplegrev	458	7	160	5	32
tinygzip	292	6	124	4	42
simplegzip	373	6	158	4	32
simplebitcnt	619	42	149	13	6
simplebfxp	463	14	130	6	32
simplebextdep	794	35	318	13	131
${\tt smartbextdep}$	1542	28	532	10	32
Bitmanip	2992	42	999	13	102
Rocket MulDiv	5068	49	1432	24	120

Table 3.3: Area and logic depth of Bitmanip reference cores compared to simple 32-bit rotate shift and Rocket MulDiv. The entry Bitmanip is just the total of simplegrev + simplegrip + simplebitcnt + smartbextdep. Not included in Bitmanip is the cost for adding shift-ones and rotate-shift support to the existing ALU shifter and the cost for additional decode and control logic.

Table 3.3 and Figure 3.1 show the area and logic depth of our reference cores (and the simple 32-bit rotate shift and Rocket MulDiv for comparison).

smartbextdep could share resources with simplegrev (it contains two butterfly circuits) and simplebitcht (it contains a prefix adder network). We have not explored those resource sharing options in our reference cores.

Chapter 4

Evaluation

This chapter contains a collection of short code snippets and algorithms using the Bitmanip extension for evaluation purposes. For the sake of simplicity we assume RV32 for most examples in this chapter.

Most assembler routines in this chapter are written as if they were ABI functions, i.e. arguments are passed in a0, a1, ... and results are returned in a0. Registers a0, a1, ... are also used for spilling Registers t0, t1, ... are used for pre-computed masks to be used with bext/bdep.

Some of the assembler routines below can not or should not overwrite their first argument. In those cases the arguments are passed in a1, a2, ... and results are returned in a0.

The main motivation behind this chapter is to show that all the common bit manipulation tasks can be performed in few instructions using Bitmanip. (In many cases RV32I/RV64I instructions are already sufficient.) In most cases the sequences are short enough to allow large cores to macro-op-fuse them into a single instruction. For this reason we also focus on code snippets that do not spill any registers, as this further simplifies macro-op fusion.

There likely will be a separate RISC-V standard for recommended sequences for macro-op fusion. The macros listed here are merely for demonstrating that suitable sequences exist. We do not advocate for any of those sequences to become "standard sequences" for macro-op fusion.

4.1 Bitfield extract

Extracting a bit field of length len at position pos can be done using two shift operations (or equivalently using the bfext pseudo instruction, see Section ??).

```
c.slli a0, (XLEN-pos-len)
c.srli a0, (XLEN-len)
```

The XBitfield bfxp instruction (see Chapter ??) performs this operation plus one more left shift and an OR operation in a single instruction.

4.2 MIX/MUX pattern

A MIX pattern selects bits from a0 and a1 based on the bits in the control word a2.

```
c.and a0, a2
andc a1, a1, a2
c.or a0, a1
```

A MUX operation selects word a0 or a1 based on if the control word a2 is zero or nonzero, without branching.

```
snez a2, a2
c.neg a2
c.and a0, a2
andc a1, a1, a2
c.or a0, a1
```

Or when a2 is already either 0 or 1:

```
c.neg a2
c.and a0, a2
andc a1, a1, a2
c.or a0, a1
```

Alternatively, a core might fuse a conditional branch that just skips one instruction with that instruction to form a fused conditional macro-op.

4.3 Bit scanning and counting

Counting leading ones:

```
c.not a0
clz a0, a0
```

Counting trailing ones:

```
c.not a0
ctz a0, a0
```

Counting bits cleared:

```
c.not a0
pcnt a0, a0
```

(This is better than XLEN-pcnt because RISC-V has no "reverse-subtract-immediate" operation.)

Odd parity:

```
pcnt a0, a0
c.andi a0, 1
```

Even parity:

```
pcnt a0, a0
c.addi a0, 1
c.andi a0, 1
```

(Using addi here is better than using xori, because there is a compressed opcode for addi but none for xori.)

4.4 Test, set, and clear individual bits

Extracting bit N:

```
c.srli a0, N
c.andi a0, 1
```

Branching on bit N set:

```
c.slli a0, (XLEN-N-1)
bltz a0, <bit_n_set>
```

Branching on bit N clear:

```
c.slli a0, (XLEN-N-1)
bgez a0, <bit_n_clear>
```

Setting bit N (note that this li is only one instruction on RV32, except when N=11 which requires two instructions):

```
li a1, (1 << N) c.or a0, a1
```

Setting bit N without spilling:

```
rori a0, a0, N
ori a0, 1
rori a0, a0, 32-N
```

```
(Or simply "ori a0, 1 << N" if N is sufficiently small.)
```

Clearing bit N (note that this li is only one instruction on RV32, except when N=11 which requires two instructions):

```
li a1, (1 << N) andc a0, a1
```

Clearing bit N without spilling:

```
rori a0, a0, N
c.andi a0, -2
rori a0, a0, XLEN-N
```

(Or simply "andi a0, \sim (1 << N)" if N is sufficiently small.)

Setting bit N to the value in a1 (assuming a1 already is either 0 or 1):

```
rori a0, a0, N
c.andi a0, -2
c.or a0, a1
rori a0, a0, 32-N
```

4.5 Funnel shifts

A funnel shift takes two XLEN registers, concatenates them to a $2 \times XLEN$ word, shifts that by a certain amount, then returns the lower half of the result for a right shift and the upper half of the result for a left shift.

This can be very useful for processing a stream of bit data that is not composed of units aligned to byte boundaries. (Especially when implemented in a single instruction, it can also be useful for misaligned memcopy when source and destination are not misaligned by the same offset.)

Performing a funnel right shift of a0 (LSB) and a1 (MSB) by the shift amount specified in a2 (with 0 < a2 < XLEN):

```
c.srl a0, a2
c.neg a2
c.sll a1, a2
c.or a0, a1
```

When the shift amount is a compile-time constant, then a 32-bit funnel shift can be performed using two XBitfield bfxp instructions (see Chapter ??):

```
bfxp a0, a0, zero, N, 32-N, 0
bfxp a0, a1, a0, 0, N, 32-N
```

4.6 Arbitrary bit permutations

This section lists code snippets for computing arbitrary bit permutations that are defined by data (as opposed to bit permutations that are known at compile time and can likely be compiled into shift-and-mask operations and/or a few instances of bext/bdep).

4.6.1 Using butterfly operations

The following macro performs a stage-N butterfly operation on the word in a0 using the mask in a1.

```
grevi a2, a0, (1 << N)
c.and a2, a1
andc a0, a0, a1
c.or a0, a2</pre>
```

The bitmask in a1 must be preformatted correctly for the selected butterfly stage. A butterfly operation only has a XLEN/2 wide control word. The following macros format the mask assuming those XLEN/2 bits in the lower half of a1 on entry (preformatted mask in a1 on exit):

```
bfly_msk_0:
    zip a1, a1
    slli a2, a1, 1
    c.or a1, a2

bfly_msk_1:
    zip2 a1, a1
    slli a2, a1, 2
    c.or a1, a2

bfly_msk_2:
```

```
zip4 a1, a1
slli a2, a1, 4
c.or a1, a2
```

A sequence of $2 \cdot log_2(XLEN) - 1$ butterfly operations can perform any arbitrary bit permutation (Beneš network):

```
butterfly(LOG2_XLEN-1)
butterfly(LOG2_XLEN-2)
...
butterfly(0)
...
butterfly(LOG2_XLEN-2)
butterfly(LOG2_XLEN-1)
```

Many permutations arising from real-world applications can be implemented using shorter sequences. For example, any sheep-and-goats operation with either the sheep or the goats bit reversed can be implemented in $log_2(XLEN)$ butterfly operations.

Reversing a permutation implemented using butterfly operations is as simple as reversing the order of butterfly operations.

4.6.2 Using omega-flip networks

The omega operation is a stage-0 butterfly preceded by a zip operation:

```
zip a0, a0
grevi a2, a0, 1
c.and a2, a1
andc a0, a0, a1
c.or a0, a2
```

The flip operation is a stage-0 butterfly followed by an unzip operation:

```
grevi a2, a0, 1
c.and a2, a1
andc a0, a0, a1
c.or a0, a2
unzip a0, a0
```

A sequence of $log_2(XLEN)$ omega operations followed by $log_2(XLEN)$ flip operations can implement any arbitrary 32 bit permutation.

As for butterfly networks, permutations arising from real-world applications can often be implemented using a shorter sequence.

4.6.3 Using baseline networks

Another way of implementing arbitrary 32 bit permutations is using a baseline network followed by an inverse baseline network.

A baseline network is a sequence of $log_2(XLEN)$ butterfly(0) operations interleaved with unzip operations. For example, a 32-bit baseline network:

```
butterfly(0)
unzip
butterfly(0)
unzip.h
butterfly(0)
unzip.b
butterfly(0)
unzip.n
butterfly(0)
```

An inverse baseline network is a sequence of $log_2(XLEN)$ butterfly(0) operations interleaved with zip operations. The order is opposite to the order in a baseline network. For example, a 32-bit inverse baseline network:

```
butterfly(0)
zip.n
butterfly(0)
zip.b
butterfly(0)
zip.h
butterfly(0)
zip
butterfly(0)
```

A baseline network followed by an inverse baseline network can implement any arbitrary bit permutation.

4.6.4 Using sheep-and-goats

The Sheep-and-goats (SAG) operation is a common operation for bit permutations. It moves all the bits selected by a mask (goats) to the LSB end of the word and all the remaining bits (sheep) to the MSB end of the word, without changing the order of sheep or goats.

The SAG operation can easily be performed using bext (data in a0 and mask in a1):

```
bext a2, a0, a1
c.not a1
bext a0, a0, a1
pcnt a1, a1
ror a0, a0, a1
c.or a0, a2
```

Any arbitrary bit permutation can be implemented in $log_2(XLEN)$ SAG operations.

The Hacker's Delight describes an optimized standard C implementation of the SAG operation. Their algorithm takes 254 instructions (for 32 bit) or 340 instructions (for 64 bit) on their reference RISC instruction set. [4, p. 152f, 162f]

4.7 Comparison with x86 Bit Manipulation ISAs

The following code snippets implement all instructions from the x86 bit manipulation ISA extensions ABM, BMI1, BMI2, and TBM using RISC-V code that does not spill any registers and thus could easily be implemented in a single instruction using macro-op fusion. (Some of them simply map directly to instructions in this spec and so no macro-op fusion is needed.) Note that shorter RISC-V code sequences are sometimes possible if we allow spilling to temporary registers.

ABM added x86 encodings for POPCNT, LZCNT, and TZCNT.¹ The difference between LZCNT and the 80386 instruction BSR, and between TZCNT and the 80386 instruction BSF, is that the new instructions return the operand size when the input operand is zero, while BSR and BSF were undefined in that case. The ABM instructions map 1:1 to Bitmanip instructions. Table 4.1 lists ABM instructions and regular x86 bit manipulation instructions.

BMI1 adds some instructions for trailing bit manipulations, an add-complement instruction, and a bit field extract instruction that expects the length and start position packed in one register operand. Our version expects the length in a0, start position in a1, and source value in a2. See Table 4.2.

BMI2 adds a few *X instructions that just perform the indicated operation without changing any flags. RISC-V does not use flags, so this instructions trivially just map to their regular RISC-V counterparts. In addition to those instructions, BMI2 adds bit extract and deposit instructions and an instruction to clear high bits above a given bit index. See Table 4.3.

Finally, TBM was a short-lived x86 ISA extension introduced by AMD in Piledriver processors, complementing the trailing bit manipulation instructions from BMI1. See Table 4.4.

¹Depending on if you ask Intel or AMD you will get different opinion regarding whether LZCNT and/or TZCNT are part of ABM or BMI1.

x86 Instruction	$_{\mathrm{By}}$	tes	RISC-V Code		
XOO THISTI UCTION	x86	RV	nisc-v Code		
POPCNT	5	4	pcnt a0, a0		
LZCNT / BSR	5	4	clz a0, a0		
TZCNT / BSF	5	4	ctz a0, a0		
BSWAP	3	4	bswap		
ROL	4	4	roli		
ROR	4	4	rori		
BT	5	4	c.srl a0, N		
			c.andi a0, 1		
BTC	5	16	rori aO, N		
			andi a1, a0, 1		
			xori a0, a0, 1		
			rori aO, XLEN-N		
BTR	5	16	rori aO, N		
			andi a1, a0, 1		
			andi a0, a0, -2		
			rori aO, XLEN-N		
BTS	5	16	rori aO, N		
			andi a1, a0, 1		
			ori a0, a0, 1		
			rori aO, XLEN-N		

Table 4.1: Comparison of x86+ABM with Bitmanip

4.8 Comparison with RI5CY Bit Manipulation ISA

The following section compares Bitmanip with the RI5CY bit manipulation instructions as documented in [5]. All RI5CY bit manipulation instructions (or something very close to their behavior) can be emulated with Bitmanip using 3 instructions or less.

RI5CY Instructions p.extract, p.extractu, p.extractr, and p.extractur

These four RI5CY instructions extract bit-fields. The non-u-versions sign-extend the extracted bit-field. This operations can be performed with two shift-immediate operations. It even fits in a 32-bit word when using compressed instructions (requires rd = rs).

```
p.extract rd, rs, len, pos:
    slli rd, rs, (XLEN-pos-len)
    srai rd, rd, (XLEN-len)

p.extractu rd, rs, len, pos:
    slli rd, rs, (XLEN-pos-len)
    srli rd, rd, (XLEN-len)
```

0 <i>C</i> T	Ву	tes	DICC V Codo		
x86 Instruction	x86 RV		RISC-V Code		
ANDN	5	4	andc a0, a2, a1		
BEXTR (regs)	5	12	c.add a0, a1		
			slo a0, zero, a0		
			c.and a0, a2		
			srl a0, a0, a1		
BLSI	5	6	neg a0, a1		
			c.and a0, a1		
BLSMSK	5	6	addi a0, a1, -1		
			c.xor a0, a1		
BLSR	5	6	addi a0, a1, -1		
			c.and a0, a1		

Table 4.2: Comparison of x86 BMI1 with Bitmanip

001 4	By	tes	DIGG V G 1
x86 Instruction	x86	RV	RISC-V Code
BZHI	5	6	slo a0, zero, a2
			c.and a0, a1
PDEP	5	4	bdep
PEXT	5	4	bext
MULX	5	4	mul
RORX	6	4	rori
SARX	5	4	sra
SHRX	5	4	srl
SHLX	5	4	sll

Table 4.3: Comparison of x86 BMI2 with Bitmanip

The r-versions expect the bit-field size in bits 9:5 of the second source register and the bit-field start in bits 4:0. Instead we use two registers, rx = XLEN - pos - len and ry = XLEN - len.

```
p.extractr:
    sll rd, rs, rx
    sra rd, rd, ry

p.extractur:
    sll rd, rs, rx
    srl rd, rd, ry
```

Alternatively, instead of packing length and position into a register, we can create a mask in a register and then use this mask with bext. This has the advantage over the sll+srl sequence that the mask only needs to be generated once and can then be re-used many times, effectively implementing p.extractur in a single instruction.

p.extractur:

x86 Instruction	By		RISC-V Code				
	x86						
BEXTR (imm)	7	4	c.slli a0, (32-START-LEN)				
			c.srli a0, (32-LEN)				
BLCFILL	5	6	addi a0, a1, 1				
			c.and a0, a1				
BLCI	5	8	addi a0, a1, 1				
			c.not a0				
			c.or a0, a1				
BLCIC	5	10	addi a0, a1, 1				
			andc a0, a1, a0				
			c.not a0				
BLCMSK	5	6	addi a0, a1, 1				
			c.xor a0, a1				
BLCS	5	6	addi a0, a1, 1				
			c.or a0, a1				
BLSFILL	5	6	addi a0, a1, -1				
			c.or a0, a1				
BLSIC	5	10	addi a0, a1, -1				
			andc a0, a1, a0				
			c.not a0				
T1MSKC	5	10	addi a0, a1, +1				
			andc a0, a1, a0				
			c.not a0				
T1MSK	5	8	addi a0, a1, -1				
			andc a0, a0, a1				

Table 4.4: Comparison of x86 TBM with Bitmanip

```
slo rMask, zero, rLen
sll rMask, rMask, rPos
bext rd, rs, rMask
```

p.extractu can be efficiently emulated with a single XBitfield bfxp instruction (see Chapter ??):

```
p.extract rd, rs, len, pos:
  bfxp rd, rs, zero, pos, len, 0
```

RI5CY Instructions p.insert and p.insertr

These instructions OR the destination register with the len LSB bits from the source register, shifted up by pos bits. This can easily be achieved using three instructions and a temporary register rt:

```
p.insert rd, rs, len, pos, rt:
```

```
slli rt, rs, (XLEN-len)
srli rt, rt, (XLEN-len-pos)
or rd, rd, rt
```

The r-version of the instruction expects len in bits 9:5 of the second source register and pos in bits 4:0. Instead we use two registers, rx = XLEN - pos - len and ry = XLEN - len.

```
p.insertr:
    slli rt, rs, ry
    srli rt, rt, rx
    or rd, rd, rt
```

Alternatively, instead of packing length and position into a register, we can create a mask in a register and then use this mask with bdep. This has the advantage over the sll+srl sequence that the mask only needs to be generated once and can then be re-used many times.

```
p.extractur:
   slo rMask, zero, rLen
   sll rMask, rMask, rPos
   bdep rt, rs, rMask
   or rd, rd, rt
```

p.insert can be efficiently emulated with a single XBitfield bfxp instruction (see Chapter ??), if target region in rd contains only zeros (bfxp clears the target region before performing the OR):

```
p.insert rd, rs, len, pos:
  bfxp rd, rs, rd, 0, len, pos
```

RI5CY Instructions p.bclr and p.bclrr

These instructions clear len bits starting with bit pos. Using a temporary register rt:

```
p.bclr rd, rs, len, pos, rt:
    sloi rt, zero, len
    slli rt, rt, pos
    andc rd, rs, rt
```

Or using two registers rLen and rPos:

```
p.bclrr rd, rs, rLen, rPos, rt:
    slo rt, zero, rLen
    sll rt, rt, rPos
    andc rd, rs, rt
```

If the mask in rt can be pre-computed then a single andc instruction can emulate p.bclrr, or a single and/c.and instruction if the mask is already inverted.

Or using bfxp with rd = rs (see Chapter ??):

```
p.bclr rd, len, pos:
  bfxp rd, zero, rd, 0, len, pos
```

RI5CY Instructions p.bset and p.bsetr

These instructions set len bits starting with bit pos. They can be implemented similar to p.bclr and p.bclrr by replacing andc with or:

```
p.bset rd, rs, len, pos, rt:
    sloi rt, zero, len
    slli rt, rt, pos
    or rd, rs, rt

p.bsetr rd, rs, rLen, rPos, rt:
    slo rt, zero, rLen
    sll rt, rt, rPos
    or rd, rs, rt
```

If the mask in rt can be pre-computed then a single or/c.or instruction can emulate p.bsetr.

Or using bfxpc with rd = rs (see Chapter ??):

```
p.bset rd, len, pos:
  bfxpc rd, zero, rd, 0, len, pos
```

RI5CY Instructions p.ff1, p.cnt, and p.ror

These instructions map directly to the Bitmanip instructions ctz, pcnt, and ror.

RI5CY Instructions p.fl1

This instruction returns the index of the last set bit in rs. If rs is 0, rd will be 0.

Using the arguably more useful definition that the operation should return -1 when rs is 0:

```
p.fl1 rd, rs:
  clz rd, rs
  neg rd, rd
  addi rd, rd, 31
```

Converting a -1 result to 0 to match the exact p.fl1 behavior:

```
slt rt, rd, zero
add rd, rd, rt
```

RI5CY Instructions p.clb

This instruction counts the number of consecutive 1s or 0s from MSB. If rs is 0, rd will be 0.

Using the arguably more useful definition that the operation should return XLEN when **rs** is 0 or -1, and assuming $rd \neq rs1$:

```
p.clb:
    srai rd, rs, XLEN-1
    xor rd, rd, rs
    clz rd, rd
```

Simply add andi rd, rd, XLEN-1 if rd should be 0 when rs is 0 or -1.

4.9 Comparison with Cray XMT bit operations

Cray XMT is the 3rd generation of the Cray MTA architecture, a supercomputer using a barrel processor architecture. The Cray XMT instruction set contains a few bit manipulation instructions [3]. In this section we compare the Cray XMT bit manipulation instructions with Bitmanip.

Bitwise boolean operations

Cray XMT provides the following instructions for bitwise boolean operations: BIT_AND, BIT_IMP, BIT_NAND, BIT_NIMP, BIT_NOR, BIT_OR, BIT_XNOR, and BIT_XOR.

These can trivially emulated using basic RISC-V instructions. (Some of those XMT instructions have a direct RISC-V equivalent. The others can be emulated by combining the not pseudoinstruction with and, or, or xor.)

Count Leading/Trailing Zeros/Ones

The Cray XMT instructions BIT_LEFT_ZEORS and BIT_RIGHT_ZEORS are equivalent to the Bitmanip clz and ctz instructions.

The BIT_LEFT_ONES and BIT_RIGHT_ONES instructions can be emulated by combining the not pseudoinstruction with clz and ctz.

Mask generation

The Cray XMT instruction BIT_MASK dest top bot generates a bitmask that has the bits in the range [bot...top] set and the rest cleared iff bot \leq top, and those bits cleared and the rest set otherwise.

Similar masks can be generated using two instructions in Bitmanip, using the regular shift instructions and the "shift ones" instructions.

Cmix equivalent

The Cray XMT BIT_MERGE instruction is equivalent to the XTernarybits cmix instruction, or the and-andc-or MIX pattern.

Population count

The Cray XMT BIT_TALLY instruction and the Bitmanip pcnt instruction are equivalent.

Parity instructions

The Cray XMT BIT_ODD_AND, BIT_ODD_NIMP, BIT_ODD_OR, and BIT_ODD_XOR instruction perform the indicated bitwise boolean operation and then compute the parity of the result.

With Bitmanip the parity can be calculated with pcnt dst, src followed by andi dst, dst, 1.

Bit pack/unpack instruction

The Cray XMT BIT_PACK instruction and the Bitmanip bext instruction are equivalent.

The Cray XMT BIT_UNPACK_1, BIT_UNPACK_2, BIT_UNPACK_3, instruction sequence, when used as intended, is equivalent to the Bitmanip bdep instruction.

Bit matrix instructions

The Cray XMT BIT_MAT_ instructions treat a 64-bit value as a 8x8 bit matrix.

BIT_MAT_TRANSPOSE is used to transpose such a bit matrix. With Bitmanip instructions on RV64 this bit permutation can be performed by applying the zip operation three times to the register holding the matrix (see also 4.10.2).

The Cray XMT instructions BIT_MAT_OR and BIT_MAT_XOR perform a matrix-matrix multiply between such bit matrices, where AND replaces scalar multiply and OR/XOR replaces scalar addition.

Bitmanip does not provide a similar operation. However, the two example applications given in the Cray XMT documentation [3, p. 81] are reversing the byte order in a word and reversing the bit order in each byte. In Bitmanip those operations are performed by the bswap and the brev.b grevi-pseudoinstructions.

4.10 Mirroring and rotating bitboards

Bitboards are 64-bit bitmasks that are used to represent part of the game state in chess engines (and other board game AIs). The bits in the bitmask correspond to squares on a 8×8 chess board:

```
56 57 58 59 60 61 62 63
48 49 50 51 52 53 54 55
40 41 42 43 44 45 46 47
32 33 34 35 36 37 38 39
24 25 26 27 28 29 30 31
16 17 18 19 20 21 22 23
8 9 10 11 12 13 14 15
0 1 2 3 4 5 6 7
```

Many bitboard operations are simple straight-forward operations such as bitwise-AND, but mirroring and rotating bitboards can take up to 20 instructions on x86.

4.10.1 Mirroring bitboards

Flipping horizontally or vertically can easily done with grevi:

```
Flip horizontal:
63 62 61 60 59 58 57 56
                            RISC-V Bitmanip:
55 54 53 52 51 50 49 48
                               brev.b
47 46 45 44 43 42 41 40
 39 38 37 36 35 34 33 32
 31 30 29 28 27 26 25 24
                            x86:
 23 22 21 20 19 18 17 16
                               13 operations
 15 14 13 12 11 10
 7 6 5 4 3 2
Flip vertical:
       2 3
             4 5
                   6
                            RISC-V Bitmanip:
 8 9 10 11 12 13 14 15
                               bswap
 16 17 18 19 20 21 22 23
 24 25 26 27 28 29 30 31
 32 33 34 35 36 37 38 39
                            x86:
 40 41 42 43 44 45 46 47
                               bswap
```

```
48 49 50 51 52 53 54 55
56 57 58 59 60 61 62 63
```

Rotating by 180 (flip horizontal and vertical):

Rotate 180: 7 6 5 4 3 2 1 0 RISC-V Bitmanip: 15 14 13 12 11 10 9 brev 23 22 21 20 19 18 17 16 31 30 29 28 27 26 25 24 39 38 37 36 35 34 33 32 x86: 47 46 45 44 43 42 41 40 14 operations 55 54 53 52 51 50 49 48 63 62 61 60 59 58 57 56

4.10.2 Rotating bitboards

Using zip a bitboard can be transposed easily:

Transpose:

```
7 15 23 31 39 47 55 63 RISC-V Bitmanip:
6 14 22 30 38 46 54 62 zip, zip, zip
5 13 21 29 37 45 53 61
4 12 20 28 36 44 52 60
3 11 19 27 35 43 51 59 x86:
2 10 18 26 34 42 50 58 18 operations
1 9 17 25 33 41 49 57
0 8 16 24 32 40 48 56
```

A rotation is simply the composition of a flip operation and a transpose operation. This takes 19 operations on x86 [1]. With Bitmanip the rotate operation only takes 4 operations:

rotate_bitboard:

```
bswap a0, a0
zip a0, a0
zip a0, a0
zip a0, a0
```

4.10.3 Explanation

The bit indices for a 64-bit word are 6 bits wide. Let i[5:0] be the index of a bit in the input, and let i'[5:0] be the index of the same bit after the permutation.

As an example, a rotate left shift by N can be expressed using this notation as $i'[5:0] = i[5:0] + N \pmod{64}$.

The GREV operation with shamt N is i'[5:0] = i[5:0] XOR N.

And a GZIP operation corresponds to a rotate left shift by one position of any continuous region of i[5:0]. For example, zip is a left rotate shift of the entire bit index:

$$i'[5:0] = \{i[4:0], i[5]\}$$

And zip4 performs a left rotate shift on bits 5:2:

$$i'[5:0] = \{i[4:2], i[5], i[1:0]\}$$

In a bitboard, i[2:0] corresponds to the X coordinate of a board position, and i[5:3] corresponds to the Y coordinate.

Therefore flipping the board horizontally is the same as negating bits i [2:0], which is the operation performed by grevi rd, rs, 7 (brev.b).

Likewise flipping the board vertically is done by grevi rd, rs, 56 (bswap).

Finally, transposing corresponds by swapping the lower and upper half of i[5:0], or rotate shifting i[5:0] by 3 positions. This can easily done by rotate shifting the entire i[5:0] by one bit position (zip) three times.

4.10.4 Rotating Bitcubes

Let's define a bitcube as a $4 \times 4 \times 4$ cube with x = i[1:0], y = i[3:2], and z = i[5:4]. Using the same methods as described above we can easily rotate a bitcube by 90° around the X-, Y-, and Z-axis:

rotate_y:	rotate_z:
brev.n a0, a0	${\tt nswap.h}$
zip a0, a0	zip.h a0, a0
zip a0, a0	zip.h a0, a0
zip4 a0, a0	
zip4 a0, a0	
	brev.n a0, a0 zip a0, a0 zip a0, a0 zip4 a0, a0

4.11 Rank and select

Rank and select are fundamental operations in succinct data structures [12].

select(a0, a1) returns the position of the a1th set bit in a0. It can be implemented efficiently using bdep and ctz:

```
select:
    li a2, 1
    sll a1, a2, a1
    bdep a0, a1, a0
    ctz a0, a0
    ret
```

rank(a0, a1) returns the number of set bits in a0 up to and including position a1.

```
rank:
  not a1, a1
  sll a0, a1
  pcnt a0, a0
  ret
```

4.12 Decoding RISC-V Immediates

The following code snippets decode and sign-extend the immediate from RISC-V S-type, B-type, J-type, and CJ-type instructions. They are nice "nothing up my sleeve"-examples for real-world bit permutations.

31	27	26	25	24	20	19	15	14	12	11	7	6	0	
	imm[11:5	5]								imn	n[4:0]			S-type
j	imm[12 10]):5]								imm[4:1 11]			B-type
			imn	n[20 1]	0:1 11 1	9:12]								J-type

```
      decode_s:
      decode_b:

      li t0, 0xfe000f80
      li t0, 0xeaa800aa

      bext a0, a0, t0
      rori a0, a0, 8

      c.slli a0, 20
      grevi a0, a0, 8

      c.srai a0, 20
      shfli a0, a0, 7

      bext a0, a0, t0
      c.slli a0, 20

      c.srai a0, 19
      ret
```

```
decode_j:
                                             // variant 2 (without RISC-V Bitmanip)
    li t0, 0x800003ff
                                             decode_cj:
    li t1, 0x800ff000
                                               srli a5, a0, 2
    bext a1, a0, t1
                                               srli a4, a0, 7
    c.slli a1, 23
                                               c.andi a4, 16
    rori a0, a0, 21
                                               slli a3, a0, 3
    bext a0, a0, t0
                                               c.andi a5, 14
    c.slli a0, 12
                                               c.add a5, a4
    c.or a0, a1
                                               andi a3, a3, 32
    c.srai a0, 11
                                               srli a4, a0, 1
    ret
                                               c.add a5, a3
                                               andi a4, a4, 64
  // variant 1 (with RISC-V Bitmanip)
                                               slli a2, a0, 1
  decode_cj:
                                               c.add a5, a4
    li t0, 0x28800001
                                               andi a2, a2, 128
    li t1, 0x000016b8
                                               srli a3, a0, 1
    li t2, 0xb4e00000
                                               slli a4, a0, 19
    li t3, 0x4b000000
                                               c.add a5, a2
    bext a1, a0, t1
                                               andi a3, a3, 768
    bdep a1, a1, t2
                                               c.slli a0, 2
    rori a0, a0, 11
                                               c.add a5, a3
    bext a0, a0, t0
                                               andi a0, a0, 1024
    bdep a0, a0, t3
                                               c.srai a4, 31
    c.or a0, a1
                                               c.add a5, a0
    c.srai a0, 20
                                               slli a0, a4, 11
    ret
                                               c.add a0, a5
                                               ret
Or using XBitfield:
  decode_s:
                                               bfxp a0, a1, a0, 12, 8, 23
    bfxp a0, a1, zero, 7, 5, 20
                                               bfxp a0, a1, a0, 31, 1, 31
    bfxp a0, a1, a0, 25, 7, 25
                                               c.srai a0, 11
    c.srai a0, 20
                                               ret
    ret
                                             decode_cj:
  decode_b:
                                               bfxp a0, a1, zero, 11, 1, 24
    bfxp a0, a1, zero, 7, 1, 30
                                               bfxp a0, a1, a0, 9, 2, 28
   bfxp a0, a1, a0, 25, 6, 24
                                               bfxp a0, a1, a0, 8, 1, 30
   bfxp a0, a1, a0, 8, 4, 20
                                               bfxp a0, a1, a0, 7, 1, 26
   bfxp a0, a1, a0, 31, 1, 31
                                               bfxp a0, a1, a0, 6, 1, 27
    c.srai a0, 19
                                               bfxp a0, a1, a0, 3, 3, 21
                                               bfxp a0, a1, a0, 2, 1, 25
    ret
                                               bfxp a0, a1, a0, 12, 1, 31
  decode_j:
                                               c.srai a0, 20
    bfxp a0, a1, zero, 21, 10, 12
                                               ret
```

bfxp a0, a1, a0, 20, 1, 22

Change History

_		
Date	Rev	Changes
2017-07-17		Initial Draft
2017-11-02	0.11	Removed roli, assembler can convert it to use a rori
		Removed bitwise subset and replaced with andc
		Doc source text same base for study and spec.
		Fixed typos
2017-11-30	0.32	Jump rev number to be on par with associated Study
		Moved pdep/pext into spec draft and called it scatter-gather
2018-04-07	0.33	Move to github, throw out study, convert from .md to .tex
		Fixed typos and fixed some reference C implementations
		Rename bgat/bsca to bext/bdep
		Remove post-add immediate from clz
		Clean up encoding tables and code sections
2018-04-20	0.34	Add GREV, CTZ, and compressed instructions
		Restructure document: Move discussions to extra sections
		Add FAQ, add analysis of used encoding space
		Add Pseudo-Ops, Macros, Algorithms
		Add Generalized Bit Permutations (shuffle)
2018-05-12	0.35	Replace shuffle with generalized zip (gzip)
		Add additional XBitfield ISA Extension
		Add figures and tables, Clean up document
		Extend discussion and evaluation chapters
		Add Verilog reference implementations
		Add fast C reference implementations
2018-10-05	0.36	XBitfield is now a proper extension proposal
		Add bswaps. [hwd] instructions
		Add cmix, cmov, fsl, fsr
		Rename gzip to shfl/unshfl
		Add min, max, minu, maxu
		Add clri, maki, join
		Add cseln, cselz, mvnez, mveqz
		Add clmul, clmulh, bmatxor, bmator, bmatflip
		Remove bswaps.[hwd], clri, maki, join
		Remove cseln, cselz, mvnez, mveqz
????-??-??	0.37	Add dedicated CRC instructions
		Add proposed opcode encodings
		Renamed from XBitmanip to RISC-V Bitmanip
		Removed chapter on bfxp[c] instruction
		Refactored proposal into one big chapter
		Removed c.brev and c.neg instructions

Bibliography

- [1] Chess programming wiki, flipping mirroring and rotating. https://chessprogramming.wikispaces.com/Flipping%20Mirroring%20and%20Rotating. Accessed: 2017-05-05.
- [2] Cray Assembly Language (CAL) for Cray X1 Systems Reference Manual. Cray Inc., 2003. Version 1.1, S-2314-50.
- [3] Cray XMT Principles of Operation. Cray Inc., 2009. Version 1.3, S-2473-13.
- [4] Sean Eron Anderson. Bit twiddling hacks. http://graphics.stanford.edu/~seander/bithacks.html. Accessed: 2017-04-24.
- [5] Pasquale Davide Schiavone Andreas Traber, Michael Gautschi. Ri5cy: User manual. https://pulp-platform.org//wp-content/uploads/2017/11/ri5cy_user_manual.pdf. Accessed: 2017-04-26.
- [6] Armin Biere. private communication, October 2018.
- [7] Vinodh Gopal, Erdinc Ozturk, Jim Guilford, Gil Wolrich, Wajdi Feghali, Martin Dixon, and Deniz Karakoyunlu. Fast crc computation for generic polynomials using pclmulqdq instruction. https://www.intel.com/content/dam/www/public/us/en/documents/white-papers/fast-crc-computation-generic-polynomials-pclmulqdq-paper.pdf, 2009. Intel White Paper, Accessed: 2018-10-23.
- [8] Yedidya Hilewitz and Ruby B. Lee. Fast bit compression and expansion with parallel extract and parallel deposit instructions. In *Proceedings of the IEEE 17th International Conference on Application-specific Systems, Architectures and Processors*, ASAP '06, pages 65–72, Washington, DC, USA, 2006. IEEE Computer Society.
- [9] James Hughes. Using carry-less multiplication (clmul) to implement erasure code. Patent US13866453, 2013.
- [10] Donald E. Knuth. The Art of Computer Programming, Volume 4A. Addison-Wesley, 2011.
- [11] Daniel Lemire and Owen Kaser. Faster 64-bit universal hashing using carry-less multiplications. CoRR, abs/1503.03465, 2015.
- [12] Prashant Pandey, Michael A. Bender, and Rob Johnson. A fast x86 implementation of select. CoRR, abs/1706.00990, 2017.
- [13] Henry S. Warren. Hacker's Delight. Addison-Wesley Professional, 2nd edition, 2012.

- [14] Wikipedia. Carry-less product. https://en.wikipedia.org/wiki/Carry-less_product. Accessed: 2018-10-05.
- [15] Wikipedia. Hamming weight. https://en.wikipedia.org/wiki/Hamming_weight. Accessed: 2017-04-24.
- [16] Wikipedia. Morton code (z-order curve, lebesgue curve). https://en.wikipedia.org/wiki/Z-order_curve. Accessed: 2018-10-12.
- [17] Clifford Wolf. Reference hardware implementations of bit extract/deposit instructions. https://github.com/cliffordwolf/bextdep. Accessed: 2017-04-30.
- [18] Clifford Wolf. Reference implementations of various crcs using carry-less multiply. http://svn.clifford.at/handicraft/2018/clmulcrc/. Accessed: 2018-11-06.
- [19] Clifford Wolf. A simple synthetic compiler benchmark for bit manipulation operations. http://svn.clifford.at/handicraft/2017/bitcode/. Accessed: 2017-04-30.