



# VECTO-Air Drag V2.0.5-beta6

**Release Notes** 

2015-11-25





#### **VECTO Air Drag Release updates**

- 1. Renaming of VECTO CSE into VECTO Air Drag
  - Version numbering not changed, no further consequences
- 2. Bug fix

Former versions did not calculate correctly the quantities "distance", "a\_veh\_avg" and "omega\_p\_wh\_acc" if input data frequency was not exactly 100Hz.

- 3. Update of the ending message
  - Message "VALID MEASUREMENT" only given if all criteria as specified in the criteria tab are fulfilled. Remark: "Declaration mode" where only results are provided if measurement is valid and where criteria can not be changed by user to be provided later.
- 4. Important information how to handle day changes (measurements over midnight) in the data evaluation:

Time in [s since daystart] shall be continously up-counted (from 86400.00 to 86400.01 at 00:00:00 a.m.) both in \*.csdat and \*.amb files

So the time unit shall be considered: [s since daystart (day1)]

Handling of input data where time changes from 86400.00 to 0.01 is not possible with reasonable efforts (only if additionally a date column would be added to both \*.csdat and \*.amb files, to be decided for later releases)





## VECTO-CSE V2.0.4-beta6


**Release Notes** 

2015-10-05





- 1. Free definition for list and decimal separator's in the used CSV-Files
  - The definition for all CSV-Files can be made under Tools/preferences. Exception are the Demo Files, these will be identified by the system and the old settings will be used only for this calculation.

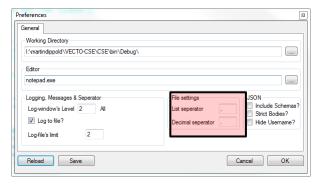





- 2. User selection of the coordinate unit (Measurement section file \*.csms)
  - The used coordinate unit will be detected by the name addition. These additions are the following:

Coordinate	unit	Additional specification	Example
Decimal minutes	[mm.mm]	Standard choice. No addition needed	lat start
Decimal grad	[dd.dd]	Additional "(D)" needed in the header name	lat start (D)
Decimal seconds	[ss.ss]	Additional "(S)" needed in the header name	lat start (S)

Because of the needed header names in the \*.csms files the header line must be
 UNcommented while the units must commented (Error will be displayed if wrong).
 Example:

# trigger used (1=yes; 0=no)

0									
								optional: path	
meas.								and/or filename	
section ID	direction ID	lenght	heading	lat start	long start	lat end	long end	altitude file	
# [id]	[id]	[m]	[°]	[mm.mm]	[mm.mm]	[mm.mm]	[mm.mm]	[-]	
1	1	250	236	P1	P1	P2	P2	TrackDemo_1_1.csalt	
2	1	250	236	P2	P2	P3	P3	TrackDemo_2_1.csalt	
3	1	250	56	P4	P4	P5	P5	TrackDemo_3_1.csalt	
4	1	250	56	P5	P5	P6	P6	TrackDemo_4_1.csalt	
open nr. of re	ows								





- 3. User selection of the coordinate unit (Data file \*.csdat)
  - The used coordinate unit will be detected by the column identifier. These are:

Signal	Unit	Column identifier		
	[mm.mm]	<lat></lat>		
(D)GPS latitude	[dd.dd]	<lat_d></lat_d>		
	[ss.ss]	<lat_s></lat_s>		
	[mm.mm]	<long></long>		
(D)GPS longitude	[dd.dd]	< long_D>		
	[ss.ss]	< long_S>		

- 4. Update of the Excel-Tool
  - Adaption of the individual separator use
  - Adaption of the new coordinate unit use
  - Control of the specified heading in the \*.csms files





## VECTO-CSE V2.0.3-beta6

**Release Notes** 

2015-07-23





- 1. Deletion of unused variables
  - <FC> from standard input data (can be added as additional signal)
  - T\_amb\_tamac from criteria file and GUI (not needed)
- 2. Added new variables
  - <t ground> to standard input data as optional parameter
  - T\_ground\_max = 40°C as criteria parameter
  - At the moment the ground temperature is an optional parameter. If a signal is given CSE checks if the maximum ground temperature is exceeded.
- Change of the standard criteria variable t\_amb\_max to 25°C (old 35°C)
- 4. Bugfix in the calculation of data without additional signals





## VECTO-CSE V2.0.2-beta6

**Release Notes** 

2015-07-20





- 1. Bug report is suggested to be performed via CITnet. Instructions for this process are given in the "Help" menu point (details see next slide)
- 2. Rho\_air\_ref deleted from GUI and source code (no longer needed)
- 3. According to the outcome of the IPW study the input signal on tire temperature ("<t\_tire>" in the \*.csdat file) is not required anymore, but can be processed in CSE as an optional signal (like p\_tire).
  - If the t\_tire signal is detected the following values are calculated for each MS/DS and reported in the \*\_CSE.csv file


```
t_tire_ave_LS_max
t_tire_ave_LS_min
t_tire_ave_HS_max
t_tire_ave_HS_min
```

- The validity criteria valid\_t\_tire value is deleted
- 4. For the pilot phase the measurement of the "ground temperature" is recommended. This quantity shall be added to the \*.csdat file as an additional signal "t\_ground". At the moment \*.csdat applies no specific checks to this quantity.





#### Report Bug via CITnet

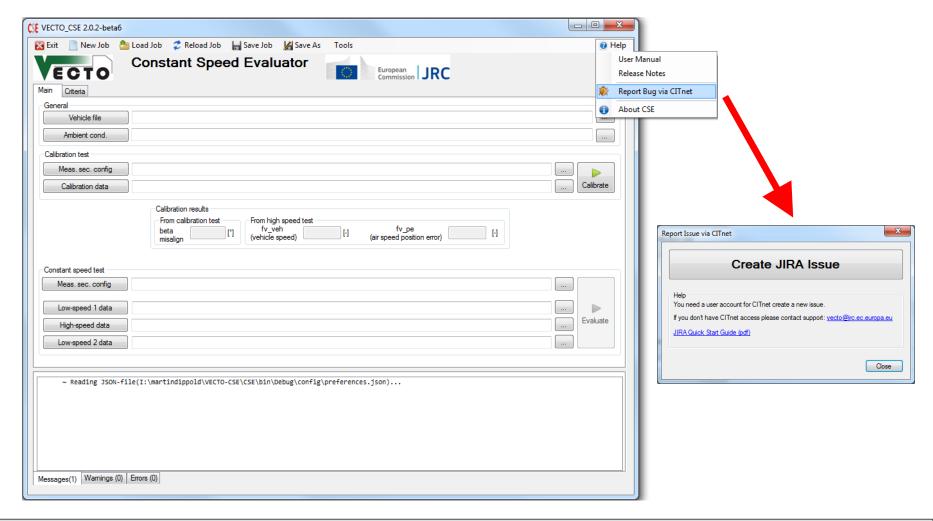





### VECTO-CSE V2.0.2-beta5

**Release Notes** 

2015-06-24





### Overview updates compared to versions 2.0.1 (1/2)

ISSUE	Status	Comment
Update of calibration of vehicle speed and anemometer speed (high speed test instead of "calibration test")	Done	
Update of calculation of the CdxA value from measured drag forces	Done	some 1-2% different CdxA values calculated for test cases
Allow also non-continuous input data in *.csdat files	Done	
Update of generic data for cross wind dependency according to ACEA White book April 2015 (for tractor and semitrailer, new gen.shp file)	Done	
Update of criteria for stability of torque and vehicle speed according to ACEA White book April 2015	Done	
Update of definition of beta-signal in input data: old: 0° = air flow from front; new: 180° = air flow from front Output data: unchanged (0° = air flow from front)	Done	
Option in VECTO-CSE to read in cardan speed instead of engine speed and gear ratios for HS and LS  Vehicle parameter "gear box type": MT_AMT> n_eng is used; AT> if n_eng is not specified n_card is used	Done	
Anemometer instrument calibration removed from CSE calculation quantities from csdat file read in to "_ic" values ("_ar" quantities deleted) f_aie etc. removed from GUI and from job-file	Done	
Default: Acceleration correction = on; averaging period = 1s	Done	Worse correlation of CdxA with beta in test cases
Introduction of stability / validity criteria for recorded engine speed (as a plausibility check for engine speed)	Done	Method to be discussed *

<sup>\*</sup> See separate slides





### Overview updates compared to versions 2.0.1 (2/2)

ISSUE	Status	Comment
Update of gradient correction: Handling of time steps where coordinates are constant over a certain time period (GPS accuracy issue)> gradient set to 0 to avoid division by zero	Done	Not relevant for declaration
User-friendliness: set criteria to "standard" when CSE opens	Done	
User-friendliness: store information when switching between tabs	Done	
User-friendliness: non sensitivity to system regional settings (list separator etc.) (implemented via MS Excel tool)	Done	
User-friendliness: Add output for pass/fail criteria also for calibration run in the output file (MS_CAL) and in GUI	Done	
Direct start option implemented (VECTO-CSE now can be started from external scripts avoiding GUI operation)	Done	
Update of gradient correction:  2) Definition of altitude profile: suggestion Daimler: via Latitude and Longitude	open	Not relevant for declaration
Check / update of averaging of the beta angle within a dataset	waiting for ACEA decision	
Update of units for input of GPS data	waiting for ACEA decision	
Update of pass fail criteria based on tire temperature and tire pressure	waiting for IPW results	





#### Validity check for recorded engine speed

Criteria derived from stability criteria for vehicle speed

#### High speed test

Speed variation threshold [km/h]:

$$(v_{hms,avrg} - 0.3) \le v_{hm,avrg} \le (v_{hms,avrg} + 0.3)$$

where:

 $v_{hms,avrq}$  = average of vehicle speed per measurement section [km/h]

 $v_{hm,avrq}$  = 1 s moving average of vehicle speed [km/h]

1) Calculation of r<sub>dyn,ref,HS</sub> for all high speed measurement sections:

$$r_{dyn,ref,HS} = \frac{30 \cdot i_{gear} \cdot i_{axle} \cdot \frac{v_{hms,avrg}}{3.6}}{n_{eng,avrg} \cdot \pi}$$

- 2) Calculation of average r<sub>dvn,ref,HS</sub> from all valid high speed measurement sections
- 3) Check if 1s moving average of engine speed is within limits derived from vehicle speed criteria + tolerance (e.g. 1%)

$$\frac{30 \cdot i_{gear} \cdot i_{axle} \cdot \frac{(v_{hms,avrg} - 0.3)}{3.6}}{r_{dyn,ref,HS} \cdot \pi} \cdot (1 - \frac{2\%}{}) \leq n_{eng,1s} \leq \frac{30 \cdot i_{gear} \cdot i_{axle} \cdot \frac{(v_{hms,avrg} + 0.3)}{3.6}}{r_{dyn,ref,HS} \cdot \pi} \cdot (1 + \frac{2\%}{})$$

$$New criteria: "delta_n_ec_HS"$$





#### Validity check for recorded engine speed

Criteria derived from stability criteria for vehicle speed

#### Low speed test

Speed variation threshold [km/h]:

$$(v_{lms,avrg} - 0.5) \le v_{lm,avrg} \le (v_{lms,avrg} + 0.5)$$

where:

 $v_{lms,avrq}$  = average of vehicle speed per measurement section [km/h]

 $v_{lm,avrg}$  = moving average of vehicle speed over a time needed to drive 25m [km/h]

1) Calculation of r<sub>dyn,ref,LS</sub> for all low speed measurement sections:

$$r_{dyn,ref,LS} = \frac{30 \cdot i_{gear} \cdot i_{axle} \cdot \frac{v_{lms,avrg}}{3.6}}{n_{eng,avrg} \cdot \pi}$$

- 2) Calculation of average r<sub>dyn,ref,LS</sub> from all valid low speed measurement sections
- 3) Check if "floating" moving average of engine speed is within limits derived from vehicle speed criteria + tolerance (e.g. 1%)

$$\frac{30 \cdot i_{gear} \cdot i_{axle} \cdot \frac{(v_{lms,avrg} - 0.5)}{3.6}}{r_{dyn,ref,LS} \cdot \pi} \cdot (1 - \frac{2\%}{}) \leq n_{eng,float} \leq \frac{30 \cdot i_{gear} \cdot i_{axle} \cdot \frac{(v_{lms,avrg} + 0.5)}{3.6}}{r_{dyn,ref,LS} \cdot \pi} \cdot (1 + \frac{2\%}{})$$

$$New criteria: "delta_n_ec_LS"$$





#### How to re-evaluate a data set from VECTO-CSE V2.0.1

- 1. Convert beta angle (column <beta> in \*.csdat-files) to 180° = air flow from front
- 2. Amend vehicle file by gearbox\_type "MT\_AMT" (see snapshop below)
- 3. Load all files into new VECTO-CSE Version and generate new job-file (Remark: Old criteria files no longer provided due to additional parameters)

```
"Header": {
  "Title": "vecto-cse VEHICLE",
  "FileVersion": "1.0.0",
  "AppVersion": "2.0.1-pre1"
 "ModifiedDate": "2014/05/28 00:33:50 +02:00",
  "Strict": true,
  "BodySchema": null,
"Body": {
      "classCode":
      "configuration":
                          "rigid",
      "vehWidth":
                          2.45,
      "vehHeight":
                          3.5,
      "anemometerHeight": 4.55
                          25000.0,
      "testMass":
      "wheelsInertia":
                          90.0,
      "gearRatio_low":
                          2.5,
      "gearRatio high":
                          1,
      "axleRatio":
                          3.6,
```





#### **Updated output in VECTO-CSE main result file (\*CSE.csv)**

## Update of output results provided per combination of measurement section and driving directions

quantity	unit	description
SecID	[-]	measurement section ID as specified in the *.csms-file
DirlD	[-]	driving direction ID as specified in the *.csms-file
F0_singleMS	[N]	result for F0 from linear regression
F0_singleMS_LS1	[N]	result for F0 from linear regression (low speed data only from first test)
F0_singleMS_LS2	[N]	result for F0 from linear regression (low speed data only from second test)
CdxA(ß)	[m2]	CdxA ( $\beta$ ) (= 2* ( $F_{res,ref}$ - $F_0$ )/ ( $V_{air}^2$ * rho_air)
CdxA0	[m2]	CdxA converted to zero cross-wind
delta_CdxA	[m2]	cross-wind correction
beta_abs_HS	[°]	average absolute beta from high speed dataset  (0° refers to air flow from front!)
RRC_singleMS	[kg/t]	rolling resistance coefficient
RRC_singleMS_LS1	[kg/t]	rolling resistance coefficient (low speed data only from first test)
RRC_singleMS_LS2	[kg/t]	rolling resistance coefficient (low speed data only from second test)
Valid_RRC	[-]	Validity criteria for maximum difference of RRC from the two low speed runs passed (=1) or failed (=0)
t_tire_ave_LS_min	[°]	minimum tire temperature during low speed tests
t_tire_ave_LS_max	[°]	maximum tire temperature during low speed tests
t_tire_ave_HS_min	[°]	minimum tire temperature during high speed tests
t_tire_ave_HS_max	[°]	maximum tire temperature during high speed tests
F2_singleMS	[N/(m2/s2)]	result for F2 from linear regression
F2_singleMS_LS1	[N/(m2/s2)]	result for F2 from linear regression (low speed data only from first test)
F2_singleMS_LS2	[N/(m2/s2)]	result for F2 from linear regression (low speed data only from second test)

Overall output results (at the top of the \*CSE.csv file) unchanged





### Main issues to be analysed in beta testing

- 1. Change of CdxA result due to
  - Calibration of vehicle speed and air speed using the high speed test
  - Update of CdxA calculation
- 2. Influence of the acceleration correction
- 3. Is the validity check for engine speed passed





### Preview MS Excel preprocessing tool





#### **MS** Excel pre-processing tool

- Handling of input data from different sources
  - Vehicle specifications
  - Definition of measurement sections
  - Recorded data during calibration test and LS/HS tests
- Performs consistency checks between files (completeness of data, coordinates vs. lenghts of measurement sections etc.)
- Produces VECTO-CSE input files (independent from regional settings)
- Generates standard plots for basic checks
- User manual will be distributed beginning of July
- Use in later declaration not mandatory





#### **MS** Excel pre-processing tool

Standard signal	Column	Unit	Required	Calibration	Low speed	High speed	Low speed
Standard Signal	identifier			run	run 1	run	run 2
time	<t></t>	[s] since day start	yes	available	available	available	available
(D)GPS latitude	<lat></lat>	[mm.mm]	yes	available	available	available	available
(D)GPS longitude	<long></long>	[mm.mm]	yes	available	available	available	available
(D)GPS heading	<hdg></hdg>	[°]	yes	available	available	available	available
(D)GPS velocity	<v_veh_gps></v_veh_gps>	[km/h]	yes	available	available	available	available
vehicle velocity	<v_veh_can></v_veh_can>	[km/h]	yes	available	available	available	available
air speed	<v_air></v_air>	[m/s]	yes	available	available	available	available
inflow angle (beta)	<beta></beta>	[°]	yes	available	available	available	available
engine speed	<n_eng></n_eng>	[rpm]	yes	available	available	available	available
cardan speed	<n_card></n_card>	[rpm]	no				
torque meter (left wheel)	<tq_l></tq_l>	[Nm]	yes	available	available	available	available
torque meter (right wheel)	<tq_r></tq_r>	[Nm]	yes	available	available	available	available
ambient temperature on vehicl	<t_amb_veh></t_amb_veh>	[°C]	yes	available	available	available	available
trigger signal	<trigger></trigger>	[-]	no				
tyre temperature	<t_tire></t_tire>	[°C]	yes	available	available	available	available
tyre pressure	<p_tire></p_tire>	[bar]	no				
fuel mass flow	<fc></fc>	[kg/h]	no				
validity	<valid></valid>	[-]	no		available	available	available
	Column			Calibration	Low speed	High speed	Low speed
Additional signals	identifier	Unit	Needed	run	run 1	run	run 2
1	Satelites	[#]	no	available	available	available	available
2	<n_card1></n_card1>	[rnm]	no	available	available	available	available

Check Data

Save Data





### **MS** Excel pre-processing tool

