# ECM-909A



US Model Canadian Model AEP Model E Model

#### **SPECIFICATIONS**

General

Type One-point stereo (employing the Mid-side system),

electret condenser microphone (with back-electret

condenser capsules) Stereo miniplug

Output plug Microphone cord

2.9 mm dia. two core-shielded, OFC (Oxygen-free

copper) Length: Approx. 1.5 m (59 1/8 inches)

Dimensions

30 x 115.5 mm (Outside diameter x length) (1 3/16 x 4 5/8 inches)

Mass

Approx. 90 g (3 oz) including battery Wind screen (1) Supplied accessories

Microphone holder (1)

Carrying case (1)

Stand screw adaptor SAD-35 (1)

Performance

100 - 15,000 Hz Frequency response

Directive angle: 90° or 120° (switchable) Directivity

Output impedance 1 kilohrn ± 20 % unbalanced

Sensitivity (directive angle 120°)

Open circuit output voltage\*1 : -50 ±3 dB

Difference between L and

Effective output level\*2 : -56 ±3 dBm

R channel sensitivity Power requirements

: Less than 3dB : 1.5 V, R6 (size AA)

Normal operating voltage

battery

Minimum operating voltage

: Approx. 1.1 V

Battery life

Approx. 200 hours with

a Sony R6P (size AA) battery

More than 62 dB (1,000 Hz, 1 Pa) Signal-to-noise ratio

Maximum sound pressure level\*3

More than 120 dBspL

Operating temperature range

0°C to 45 °C (32 °F to 113 °F)

0 dB = 1 v/Pa, 1,000 Hz (1 Pa = 10 μbar = 94 dBsPL)

0 dBm = 1 mW/Pa, 1,000 Hz

1 % wave distortion is present at 1,000 Hz. (0 dBspl = 2 x 10-5Pa)

Design and specifications are subject to change without notice.

#### **Optional Accessory**

To connect this microphone to the equipment with a microphone jack other than stereo minijack, use the following connecting cord.

PC-137S


(Stereo minijack ↔ miniplug/phone plug adaptor x 2)

#### **Features**

This microphone is suitable for use in a variety of situations such as at a concert or a conference with the portable stereo recorder (Sony DAT, WALKMAN Professional, etc.).

- The directive angle (between left and right channels) can be set to 90° or 120° according to the sound source.
- The microphone gives excellent sound image and faithful stereo sound reproduction with less "hole in the middle".



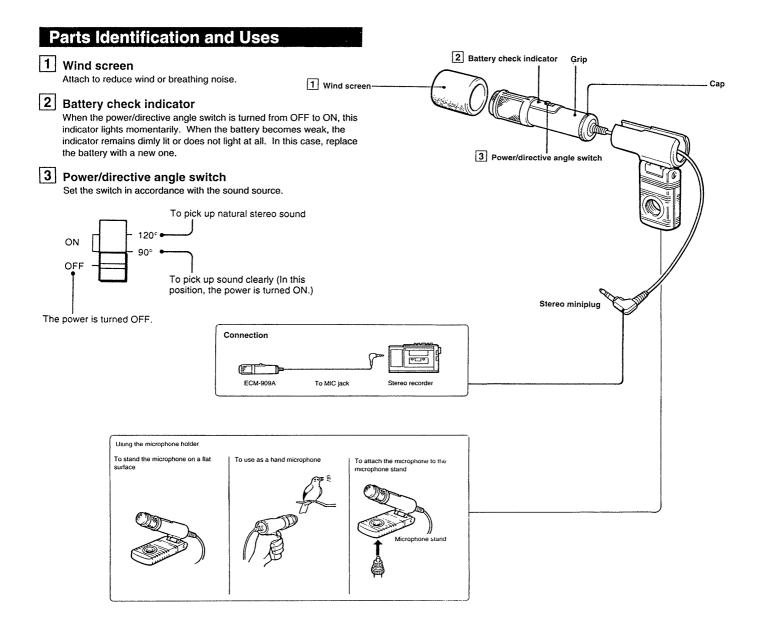

# **Battery Installation**

## When to replace the battery

When the power is turned on, the battery check indicator lights momentarily. When the battery becomes weak, the indicator remains dimly lit or does not light at all. In this case, replace the battery with a new one.

Sony R6P (size AA) battery gives continuous operation of the microphone for about 200 hours.

#### Notes on battery

To avoid damage to the unit caused by battery leakage and corrosion:

- Install the battery with correct polarity.
- · Do not try to recharge batteries.
- Remove the battery if the microphone is not to be used for a long period of time.


In case of battery leakage, wipe off any deposit in the battery compartment before installing a new battery.




Turn the cap counterclockwise.

### **DISASSEMBLY**

Note: Follow the disassembly procedure in the numerical order given.

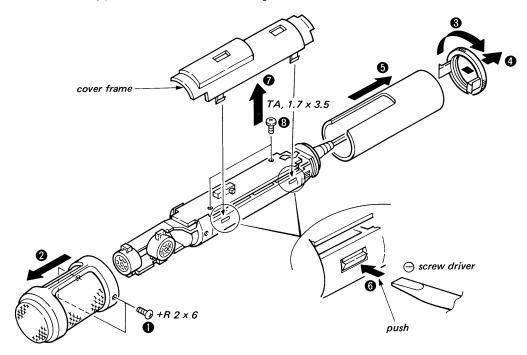


#### **SCHEMATIC DIAGRAM**

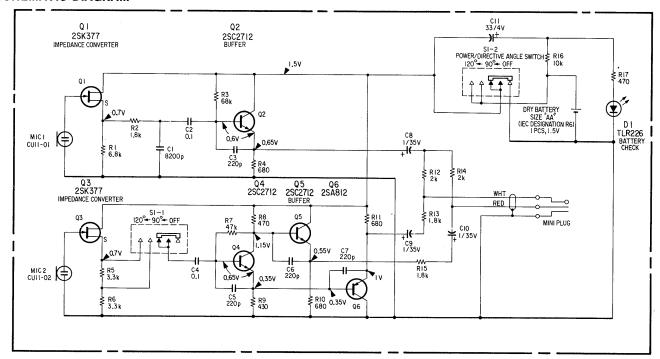

#### Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and ¼ W or less unless otherwise specified.
- Voltages are taken with a VOM (Input Impedance 10MΩ).
   Voltage variations may be noted due to normal production tolerances.

# PRINTED WIRING BOARDS

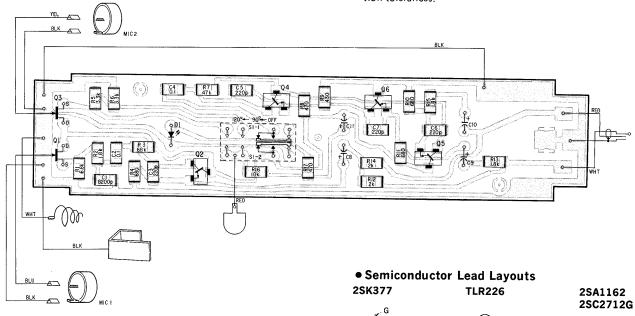

#### Note on Printed Wiring Board:

- o---: parts extracted from the component side.
- Pattern on the side which is seen.
- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.







**-10** 

# **EXPLODED VIEW AND PARTS LIST**

#### NOTE:

The mechanical parts with no reference number in the exploded views are not supplied.

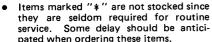

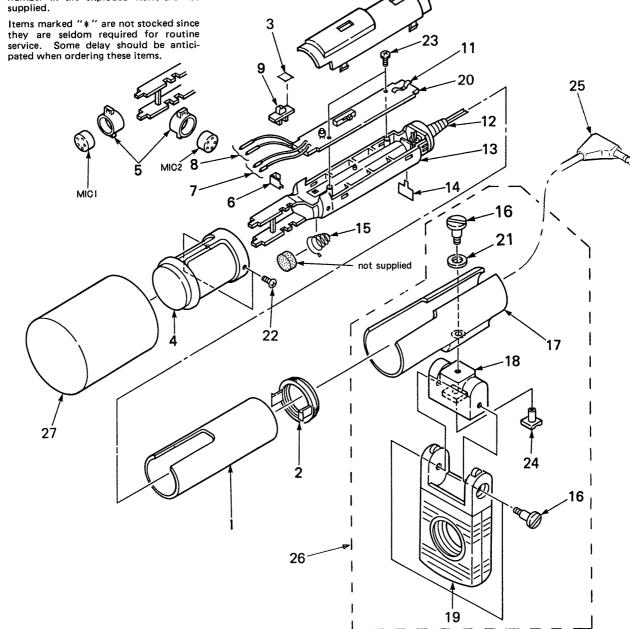

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	2-532-242-01	GRIP		17	2-532-260-11	HOLDER	
2	2-532-243-01	CAP		18	2-532-251-01	JOINT	
* 3	2-543-095-01	SEAL, POWER INDICATION		19	X-2532-205-1	GRIP ASSY, HOLDER	
4	A-4514-062-A	CASE ASSY, MICROPHONE		* 20	1-622-145-21	AMPLIFIRE BOARD	
5	2-532-244-01	HOLDER, CAPSULE		21	3-701-442-21	WASHER, 4.5	
* 6	2-532-218-00	LAG, GROUND		22	7-621-555-40	SCREW +RK 2X6	
7	2-529-927-00	TERMINAL (B), GROUND		23	3-892-535-01	SCREW +P 1.7	
8	2-523-713-00	TERMINAL		24	2-532-261-01	NUT, JOINT	
9	2-532-241-01	KNOB, SWITCH		25	1-696-446-11	CORD, MICROPHONE (2 CORE)	
10	2-532-255-11	COVER, FRAME		26	X-2542-064-1	HOLDER ASSY	
				27	2-532-250-01	SCREEN, WINDOW	
11	2-532-245-01	SPRING					
* 12	2-532-204-11	BUSHING		MIC1	8-814-173-00	MICROPHONE, BUILT-IN (CU11-01)	)
13	2-532-254-01	FRAME		MIC2	8-814-174-01	MICROPHONE, BUILT-IN (CU11-02)	)
14	3-578-109-00	CONTACT		Q1	8-729-824-18	TRANSISTOR 2SK377-J3	
15	3-325-414-01	SPRING		Q3	8-729-824-18	TRANSISTOR 2SK377-J3	
16	2-532-252-01	SCREW, HOLDER					

#### **ELECTRICAL PARTS LIST**

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
   All resistors are in ohms.
   METAL:Metal-film resistor.

METAL OXIDE: Metal oxide-film resistor. F:nonflammable

• Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

SEMICONDUCTORS

In each case,  $u:\mu$ , for example:  $uA..:\mu A..:\mu PA..$ 

uPB..: μPB.. uPC..: μPC.. uPD..: μPD..

• CAPACITORS uF: µF

• COILS uH: μH When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
*	1-622-145-21	AMPLIFIER BO	ARD			R15	1-216-055-00	METAL CHIP	1. 8K	5%	1/10W
		******	******	****		R16	1-216-073-00	METAL CHIP	10K	5%	1/10W
						R17	1-216-041-00	METAL CHIP	470	5%	1/10W
		< CAPACITOR	>					( OWYMAY)			
C1	1_163_020_00	CERAMIC CHIP	0.0000	F 10%	EOW			< SWITCH >			
C2		CERAMIC CHIP		r 10%	50V	01	1 554 049 11	OWITCH OLING			
C3		CERAMIC CHIP		10%	25V 50V	S1	1-334-043-11	SWITCH, SLIDE			
C4		CERAMIC CHIP		10/0	25V	*****	• <b>• • • • • • • • • • • • • •</b> • • • •	******	t. at. at. at. at. at. at. at.		
C5		CERAMIC CHIP		10%	50V	*******	*****	******	*******	*****	*********
00	1 103 001 11	OLIMINO OIII	ZZUFF	10%	JUY			MISCELLANEOUS			
C6	1-163-001-11	CERAMIC CHIP	220PF	10%	50V			*********			
C7		CERAMIC CHIP		10%	50V			*******			
C8	1-131-347-00		1uF	10%	35V	25	1-606-446-11	CUDD MICDUDA	ONE (2 C	UDE)	
C9	1-131-347-00		1uF	10%	35V	MIC1		CORD, MICROPHO MICROPHONE, BU			01)
C10	1-131-347-00		1uF	10%	35V	MIC2		MICROPHONE, BU		,	•
C11	1-124-431-00		33uF	20%	4V	Q1		TRANSISTOR 2SE		(0011	····02)
011	1 121 101 00	DDD01	oour	2070	11	Q3		TRANSISTOR 2SI			
		< DIODE >				40	0 723 024 10	TRANSISION ZSI	1011 00		
						******	*****	******	******	****	******
D1	8-719-812-26	LED	TLR22	6							
		< TRANSISTOR	>					S & PACKING MAT *******			
Q2	8-729-230-49	TRANSISTOR	2SC2712-0	3			2-100-052-00	ADAPTER, SCREW	UTAND	/GAD	3E)
Q4	8-729-230-49		2SC2712-0					CASE, CARRYING		(SAD	-JJ)
Q5	8-729-230-49		2SC2712-0					MANUAL, INSTRU		FNCI I	SH/FRENCH/
Q6	8-729-216-22		2SA1162	-				SPANISH/GERMAN			
		< RESISTOR >					2-532-250-01	SCREEN, WINDOW	i		
							X-2542-064-1	HOLDER ASSY			
R1	1-216-069-00		6. 8K		1/10W						
R2	1-216-055-00		1. 8K		1/10W						
R3	1-216-093-00		68K		1/10W						
R4	1-216-045-00		680		1/10W						
R5	1-216-061-00	MCIAL CHIP	3. 3K	5%	1/10W						
R6	1-216-061-00	METAL CHIP	3. 3K	5%	1/10W						
R7	1-216-089-00	METAL CHIP	47K	5%	1/10W						
R8	1-216-041-00	METAL CHIP	470	5%	1/10W						
R9	1-216-040-00			5%	1/10₩						
R10	1-216-045-00	METAL CHIP	680	5%	1/10W						
R11	1-216-045-00	METAL CHIP	680	5%	1/10W						
R12	1-216-056-00				1/10W						
R13	1-216-055-00		1. 8K		1/10W						
R14	1-216-056-00	METAL GLAZE			1/10W						E

**Sony Corporation General Audio Group** 

English 92J0479-1 Printed in Japan © 1992.10