REFERENCE DATA

for

RADIO ENGINEERS

second edition

Federal Telephone and Radio Corporation

an associate of

International Telephone and Telegraph Corporation 67 Broad Street • New York 4, N. Y. www.radiosantiguas.com

Copyright 1946 by
Federal Telephone and Radio Corporation
Second Edition
Printed in the U.S.A. by
J. J. Little & Ives Co., N. Y.

Foreword

Widespread acceptance of the four printings of the first edition of Reference Data for Radio Engineers prompted this larger and improved second edition. Like its predecessor, it is presented by the Federal Telephone and Radio Corporation as an aid in the fields of research, development, production, operation, and education. In it will be found all the material that proved so useful in the first edition along with much additional data—some the result of helpful suggestions from readers, others stemming from rapid advances in the art, and still others now made possible by declassification of many war developments.

While the general arrangement remains unchanged, the present edition has been greatly enlarged and a subject index included. Chapters on transformers and room acoustics have been added. The material on radio propagation and radio noise has been revised. Because of their importance in television, in radar, and in laboratory technique, the data on cathode-ray tubes have been considerably expanded.

The section on electrical circuit formulas has been greatly enlarged; additions include formulas on T-II and Y- Δ transformations, amplitude modulation, transients, and curves and numerous formulas on selective circuits. The attenuator section contains comprehensive design formulas and tables for various types of attenuators. The number of mathematical formulas also has been considerably increased.

As revised, the wave-guide chapter includes equations for both rectangular and cylindrical guides plus illustrations of field distribution patterns. Several methods of coupling to the TEo.1 mode are illustrated. A table of standard rectangular wave guides and connectors, giving useful frequency range and attenuation, has been added. Design curves for the gain and beam width of rectangular electromagnetic horn radiators are included, and a simple formula for the gain of a paraboloid reflector is given.

4

Many very helpful suggestions were received from the Armed Services.

Acknowledgment is made to Edward J. Content, consulting engineer, for his contribution of the chapter on room acoustics; its inclusion was made possible largely through the courtesy of the Western Electric Company in permitting the use of their engineering data. Acknowledgment also is due to I. E. Lempert, Allen B. Dumont Laboratories, Inc., for the descriptive material on cathode-ray tubes; and to Professor L. Brillouin of Harvard University for advice and suggestions on the wave-guide chapter.

In the compilation of this reference book, the cooperation of the following I.T. & T. associate companies was invaluable:

International Telecommunication Laboratories, Inc., New York, N. Y. E. M. Deloraine, president, and E. Labin, technical director

American Cable and Radio Corporation, New York, N. Y. Haraden Pratt, vice president and chief engineer

Standard Telephones and Cables, Ltd., London, England.

C. E. Strong, chief engineer of radio division

International Telephone and Telegraph Corporation, New York, N. Y. George Lewis, assistant vice president, and H. P. Westman, associate editor of *Electrical Communication*.

Recognition for contribution of specific material:

Federal Telecommunication Laboratories, Inc., New York, N. Y.

H. Busignies, director, G. S. Burroughs, W. A. Cobb, S. Frankel, J. J. Glauber, D. D. Grieg, A. G. Kandoian, N. Marchand,* C. R. Muller, E. M. Ostlund, W. Sichak, L. D. Smullin, N. S. Tierney, A. R. Vallarrino, M. W. Wallace, A. J. Warner, and J. K. Whitteker

Federal Telephone and Radio Corporation, Newark, N. J.

E. G. Ports, technical director of radio division, H. Baker, W. F. Bonner, C. L. Howk, W. W. Macalpine, G. T. Royden, and A. K. Wing

Mackay Radio and Telegraph Company, New York, N. Y. R. McSweeny, C. E. Scholz, and L. Spangenberg

International Standard Electric Corporation, New York, N. Y.

J. C. Frick, G. H. Gray, and E. S. McLarn

H. H. Buttner, chairman Radio Reference Book Committee

H. T. Kohlhaas, editor

Editor of Electrical Communication

F. J. Mann, assistant editor

Managing Editor of Electrical Communication

^{*}Formerly of Federal Telecommunication Laboratories, Inc.

REFERENCE DATA FOR RADIO ENGINEERS $\bar{\mathfrak{z}}$

Contents

Chapter 1 — General information

Conversion factors
Fractions of an inch with metric equivalents
Miscellaneous data
Greek alphabet
Unit conversion table
Electromotive farce—series of the elements
Position of metals in the galvanic series
Atamic weights
Centigrade table of relative humidity or percent of saturation
Atmospheric pressure chart
Weather data
Temperature extremes
Precipitation extremes
World temperatures
World precipitation
Principal power supplies in foreign countries
World time chart
Electromagnetic frequency spectrum
Radio frequency classifications
Wavelength vs frequency chart
Wavelength vs frequency formulas
Frequency tolerances
Frequency band widths occupied by the emissions
Tolerances for the intensity of harmonics of fixed, land, and broadcasting stations
Classification of emissions.
Relation between decibels and power, voltage, and current ratios

$oldsymbol{6}$ reference data for radio engineers

Chapter 2 — Engineering and material data

Copper wire table—standard annealed copper	3:
Copper wire table—English and metric units	•
Solid copperweld wire—mechanical and electrical properties	
Standard stranded copper conductors—American wire gauge	
Machine screw head styles, method of length measurement	
, .	
Standard machine screw data including hole sizes	
Insulating materials	4
Plastics: trade names	
Wind velocities and pressures	
Temperature chart of heated metals	
Physical constants of various metals and alloys	
Thermocouples and their characteristics	
Melting points of solder	
Spark gap voltages	4
Head of water in feet and approximate discharge rate.	
Materials and finishes for tropical and marine use	
Torque and horsepower	
Chapter 3 — Audio and radio design	
Resistors and capacitors—color code	
Resistors, fixed composition	5
Standard color coding for resistors	5
Capacitors, fixed mica dielectric	
Capacitors, fixed ceramic	5
Inductance of single-layer solenoids	5
Magnet wire data	6
Reactance charts	6
Impedance formulas	6
Skin effect	7
Network theorems	7
Electrical circuit formulas	7
Attenuators	10
Filter networks	11
Chapter 4 — Rectifiers and filters	
Typical rectifier circuit connections and circuit data	11

Chapter 5 — Iron-core transformers and reactors

Major transformer types	122
Major reactor types	
Temperature, humidity, and pressure effects	
General limitations	123
Design of power-supply transformers	124
Round enameled copper wire data	126
••	
Chamber & Vaccours tubes	
Chapter 6 — Vacuum tubes	
Nomenclature	
Coefficients	127
Terminology	
Formulas	129
Performance limitations	
Electrode dissipation data	
Filament characteristics	132
Ultra-high-frequency tubes	134
Cathode-ray tubes	136
Army-Navy preferred list of electron tubes	142
Classification	14:
General design	14:
Graphical design methods	14
Classification of amplifier circuits	15.
Cathode follower data	
Resistance-coupled audio amplifier design	
Negative feedback	
Reduction in gain caused by feedback	16
Distortion	16
Chapter 8 — Room acoustics	
General considerations for good room acoustics	
Good acoustics—governing factors	
Room sizes and proportions for good acoustics	
Optimum reverberation time	
Computation of reverberation time	
Electrical power levels required for public address requirements	
General	17

0 REFERENCE DATA FOR RADIO ENGINEERS

Chapter 9 — Wire transmission

Telephone transmission line data	179
Frequency allocation chart for type J and K carrier systems	
Frequency allocation chart for carrier systems	
Frequency allocation and modulation steps in the L carrier system (coaxial cable)	
	189
Telegraph facilities	192
Telegraph printer systems	192
Frequency of printing telegraph systems in cycles per second	192
Comparison of telegraph codes	
Chapter 10—Radio frequency transmission lines	
Formulas for uniform transmission lines	
Surge impedance of uniform lines	195
Transmission line data	196
Transmission line attenuation due to load mismatch	198
Impedance matching with shorted stub	199
Impedance matching with open stub	199
Impedance matching with coupled section	200
Army-Navy standard list of radio-frequency cables	201
Attenuation af standard r-f cables vs frequency	204
Length of transmission line	
Chapter 11 — Wave guides and resonators	
Propagation of electromagnetic waves in hollow wave guides	207
Rectangular wave guides	208
Circular wave guides	
Electromagnetic horns	217
Resonant cavities	
Some characteristics of various types of resonators	
Additional cavity formulas	
Recommended rectangular wave guides	223
Chapter 12—Radio propagation and noise	
Propagation of medium and long waves	224
Propagation of short waves	226
Propagation forecasts for short waves	
Propagation of very short waves	
U-H-F path length and optical line-of-sight distance range of radio waves	
Great circle calculations	
Time interval between transmission and reception of reflected signal	244
Radio noise and noise measurement	244
	-

Chapter 13 — Antennas

Field intensity from an elementary dipole	
Field of an elementary dipole at great distance	
Field of an elementary dipole at short distance	
Field of an elementary dipole at intermediate distance	
Field intensity from a vertically polarized antenna with base close to ground	
Vertical radiators	
Field intensity and radiated power from a half-wave dipole in free space	
Radiation from end-fed conductor of any length in space	
Maxima and minima of radiation from a single-wire radiator	_
Rhombic antennas	
Antenna arrays	

Chapter 14—Non-sinusoidal and modulated wave forms

Relaxation oscillators	272
Electronic integration methods	27
Electronic differentiation methods	27
Fourier analysis of recurrent wave forms	27
Analysis of commonly encountered wave forms	28
Modulated wave forms	28

Chapter 15 — Mathematical formulas

Mensuration formulas	
Formulas for complex quantities	
Algebraic and trigonometric formulas	
Approximations for small angles	
Quadratic equation	
Arithmetical progression	
Geometrical progression	
Combinations and permutations	
Binomial theorem	
Maclaurin's theorem	
Taylor's theorem	
Trigonometric solution of triongles	
Complex hyperbolic and other functions	
Table of integrals	

www.radiosantiguas.com

10 REFERENCE DATA FOR RADIO ENGINEERS

Chapter 16 — Mathematical tables

Exponentials	
Common logarithms of numbers and proportional parts	
Natural trigonometric functions for decimal fractions of a degree	
Logarithms of trigonometric functions for decimal fractions of a degree	
Natural logarithms	
Hyperbolic sines	_
Hyperbolic cosines	
Hyperbolic tangents	
Multiples of 0.4343	
Multiples of 2.3026	
Bessel functions	

General information

Conversion factors

to convert	into	multiply by	conversely multiply by
Acres	Square feet	4.356×10^{4}	2.296×10^{-6}
Acres	Square meters	4,047	2.471 × 10 ⁻⁴
Ampere-hours	Coulomb	3,600	2.778 × 10~4
Amperes per sq cm	Amperes per sq inch	6.452	0.1550
Ampere turns	Gilberts	1.257	0.7958
Ampere turns per cm	Ampere turns per inch	2.540	0.3937
Atmospheres	Mm of mercury @ 0° C	760	1.316×10^{-3}
Atmospheres	Feet of water @ 4° C	33.90	2.950×10^{-2}
Atmospheres	Inches mercury @ 0° C	29.92	3.342×10^{-2}
Atmospheres	Kg per sg meter	1.033×10^4	9.678×10^{-5}
Atmospheres	Pounds per sq inch	14.70	6.804×10^{-2}
Btu	Foot-pounds	778.3	1.285×10^{-3}
Btu	Joules	1,054.8	9.480×10^{-4}
Btu	Kilogram-calories	0.2520	3.969
Btu	Horsepower-hours	3.929×10^{-4}	2,545
Bushels	Cubic feet	1.2445	0.8036
Centigrade	Fahrenheit	$(C^{\circ} \times 9/5) + 32$	$(F^{\circ} - 32) \times 5/9$
Circular mils	Square centimeters	5.067 × 10 ⁻⁶	1.973×10^{5}
Circular mils	Square mils	0.7854	1.273
Cubic feet	Cords	7.8125×10^{-8}	128
Cubic feet	Gallons (lig US)	7.481	0.1337
Cubic feet	Liters	28.32	3.531×10^{-2}
Cubic inches	Cubic centimeters	16.39	6.102×10^{-2}
Cubic inches	Cubic feet	5.787 × 10 ⁻⁴	1,728
Cubic inches	Cubic meters	1.639 × 10⁻⁵	6.102 × 104
Cubic Inches	Gallons (lig US)	4.329×10^{-3}	231
Cubic meters	Cubic feet	35.31	2.832×10^{-2}
Cubic meters	Cubic yards	1.308	0.7646
Degrees (angle)	Radians	1.745×10^{-2}	<i>5</i> 7.30
Dynes	Pounds	2.248×10^{-6}	4.448×10^{8}
Ergs	Foot-pounds	7.367×10^{-8}	1.356×10^{7}
Fathoms	Feet	6	0.16666
Feet	Centimeters	30.48	3.281×10^{-2}
Feet of water @ 4°C	Inches of mercury @ 0°C		1.133
Feet of water @ 4° C	Kg per sq meter	304.8	3.281 × 10 ⁻⁸

Conversion factors continued

to convert	into multiply by	multiply by	conversely multiply by
Feet of water @ 4° C	Pounds per sq foot	62.43	1.602×10^{-2}
Foot-pounds	Horsepower-hours	5.050×10^{-7}	1.98×10^{6}
Foot-pounds	Kilogram-meters	0.1383	7.233
Foot-pounds	Kilowatt-hours	3.766×10^{-7}	2.655×10^{6}
Gallons	Cubic meters	3.785×10^{-3}	264.2
Gallons (lig US)	Gallons (lig Br Imp)	0.8327	1.201
Gauss	Lines per sq inch	6.452	0.1550
Grams	Dynes	980.7	1.020×10^{-3}
Grams	Grains	15.43	6.481×10^{-2}
Grams	Ounces (avoirdupois)	3.527×10^{-2}	28.35
Grams	Poundals	7.093×10^{-2}	14.10
Grams per cm	Pounds per inch	5.600×10^{-3}	178.6
Grams per cu cm	Pounds per cu inch	3.613×10^{-2}	27.68
Grams per sq cm	Pounds per sq foot	2.0481	0.4883
Hectares	Acres	2.471	0.4047
Horsepower (boiler)	Btu per hour	3.347×10^4	2.986 × 10-6
Horsepower (metric)	Btu per minute	41.83	2.390×10^{-2}
(542,5 ft-lb per sec)			
Horsepower (metric) (542.5 ft-lb per sec)	Foot-lb per minute	3.255×10^4	3.072 × 10 ⁻⁶
Horsepower (metric) (542.5 ft-lb per sec)	Kg-calories per minute	10.54	9.485×10^{-2}
Horsepower (550 ft-lb per sec)	Btu per minute	42.4 [2.357×10^{-2}
Horsepower (550 ft-lb per sec)	Foot-lb per minute	3.3×10^4	3.030 × 10 ⁻⁶
Horsepower (metric) (542.5 ft-lb per sec)	Horsepower (550 ft-lb per sec)	0.9863	1.014
Horsepower (550 ft-lb per sec)	Kg-calories per minute	10.69	9.355×10^{-2}
Inches	Centimeters	2.540	0.3937
Inches	Feet	8.333×10^{-2}	12
Inches	Miles	1.578 × 10-6	6.336×10^{4}
Inches	Mils	1,000	0.001
Inches	Yards	2.778×10^{-2}	36
Inches of mercury @ 0° C	Lbs per sq Inch	0.4912	2.036
Inches of water @ 4° C	Kg per sq meter	25.40	3.937×10^{-2}
Inches of water	Ounces per sq inch	0.5781	1.729
Inches of water	Pounds per sq foot	5.204	0.1922
Joules	Foot-pounds	0.7376	1.356
Joules	Ergs	10 ⁷	10-7
Kilogram-calorles	Kilogram-meters	426.9	2.343×10^{-3}
Kilogram-calories	Kilojoules	4.186	0.2389
Kilograms	Tons, long (avdp 2240 lb)	9.842 × 10 ⁻⁴	1,016
Kilograms	Tons, short (avdp 2000 lb)	1.102×10^{-3}	907.2
Kilograms	Pounds (avoirdupois)	2.205	0.4 536
Kg per sq meter	Pounds per sq foot	0.2048	4.882
Kilometers	Feet	3,281	3.048 × 10 ⁻⁴
Kilowatt-hours	Btu	3,413	2.930 × 10 ⁻⁴
Kilowatt-hours	Foot-pounds	2.655×10^{6}	3.766×10^{-7}
Kilowatt-hours	Joules	3.6×10^{8}	2.778×10^{-7}
Kilowatt-hours	Kilogram-calories	860	1.163×10^{-3}
Kilowatt-hours	Kilogram-meters	3.671×10^{6}	2.724 × 10 ⁶
Kilowatt-hours	Pounds carbon oxydized	0.235	4.26
Kilowatt-hours	Pounds water evaporated from and at 212° F	3.53	0.283

Conversion factors continued

to convert	into	multiply by	conversely multiply by
Kilowatt-hours	Pounds water raised from 62° to 212° F	22.75	4.395×10^{-2}
Liters	Bushels Idry US)	2.838×10^{-2}	35.24
Liters	Cubic centimeters	1,000	0.001
Liters	Cubic meters	0.001	1,000
Liters	Cubic inches	61.02	1.639×10^{-2}
Liters	Gallons (lig US)	0.2642	3.7 85
Liters	Pints (liq US)	2.113	0.4732
Log _e N or 1 _n N	Log ₁₀ N	0.4343	2.303
Lumens per sq foot	Foot-candles	1	1
Lux	Foot-candles	0.0929	10.764
Meters	Yards	1.094	0.9144
Meters per min	Knots (nautical mi per hour)	3.238×10^{-2}	30.88
Meters per min	Feet per minute	3.281	0.3048
Meters per min	Kilometers per hou r	0.06	16.67
Microhms per cm cube	Microhms per inch cube	0.3937	2.540
Microhms per cm cube	Ohms per mil foot	6.015	0.1662
Miles (nautical)	Feet	6,080.27	1.645×10^{-4}
Miles (nautical)	Kilometers	1.853	0.5396
Miles (statute)	Kilometers	1.609	0.6214
Miles (statute)	Miles (nautical)	0.8684	1,1516
Miles (statute)	Feet	5,280	1.894×10^{-4}
Miles per hour	Kilometers per minute	2.682×10^{-2}	37.28
Miles per hour	Feet per minute	88	1.136×10^{-2}
Miles per hour	Knots (nautical mi per hour)	0.8684	1.1516
Miles per hour	Kilometers per hour	1.609	0.6214
Pounds of water (dist)	Cubic feet	1.603 × 10~2	62.38
Pounds of water (dist)	Gallons	0.1198	8.347
Pounds per cu foot	Kg per cu meter	16.02	6.243×10^{-2}
Pounds per cu inch	Pounds per cu foot	1,728	5.787 × 10 ⁻⁴
Pounds per sq foot	Pounds per sq inch	6.944×10^{-8}	144
Pounds per sq inch	Kg persq meter	703.1	1.422×10^{-3}
Poundals	Dynes	1.383×10^{4}	7.233×10^{-6}
Poundals	Pounds (avoirdupois)	3.108×10^{-2}	32.17
Sq inches	Circular mils	1.273×10^6	7.854×10^{-7}
Sq inches	Sq centimeters	6.452	0.1 <i>55</i> 0
Sq feet	Sg meters	9.290×10^{-2}	10.76
Sq miles	Sq yards	3.098×10^{8}	3.228×10^{-7}
Sq miles	Acres	640	1.562×10^{-3}
Sq miles	Sq kilometers	2.590	0.3861
Sq millimeters	Circular mils	1,973	5.067 × 10 ⁻⁴
Tons, short (avoir 2000 lb)	Tonnes (1000 kg)	0.9072	1.102
Tons, long (avoir 2240 lb)	Tonnes (1000 kg)	1.016	0.9842
Tans, long (avoir 2240 lb)	Tons, short (avoir 2000 lb)	1.120	0.8929
Tons (US shipping)	Cubic feet	40	0.025
Watts	Btu per minute	5.689 × 10 ⁻²	17.58
Watts	Ergs per second	10 ⁷	10 ^{—7}
Watts	Foot-lb per minute	44.26	2.260×10^{-2}
Watts	Horsepower (550 ft-lb per sec)		745.7
Watts	Horsepower (metric) (542.5 ft-lb per sec)	1.360 × 10 ⁻⁸	735.5
Watts	Kg-calories per minute	1.433×10^{-2}	69.77

Fractions of an inch with metric equivalents

	ons of	decimals of an inch	millimeters		ons of	decimals of	millimeters
	١.,	_			l	1	1
	364	.0156	0.397		33/64	.5156	13.097
1/82	١	.0313	0.794	17/82		.5313	13.494
	364	.0469	1.191		35/64	.5469	13.891
Y_{16}		.0625	1.588	%		.5625	14.288
	564	.0781	1.984		37/64	.5781	14.684
3/82		.0938	2.381	19/82		.5938	15.081
	764	.1094	2.778		3964	.6094	15.478
1/8		.1250	3.175	5/8		.6250	15.875
	% 4	.1406	3.572	ľ	41/64	.6406	16.272
5/32		.1563	3.969	21/82		.6563	16.669
	11/64	.1719	4.366	1	4364	.6719	17.066
3/16		.1875	4.763	11/16		.6875	17.463
	13/64	.2031	5.159	ı	45/64	.7031	17.859
7/32		.2188	5.556	23/32		.7188	18.256
i	15/84	.2344	5.953		47/64	,7344	18.653
1/4		.2500	6 .350	3/4		.7 <i>5</i> 00	19.050
	17/64	.2656	6.747		49/64	.7656	19.447
%2 ∣		.2813	7.144	25/32		.7813	19.844
	1964	.2969	7.541		5164	.7969	20.241
5/16		.3125	7.938	13/16		.8125	20.638
	21/64	.3281	8.334		5364	.8281	21.034
11/32		.3438	8.731	27/32		.8438	21.431
	2364	.3594	9.128		55/64	.8594	21.828
3/8		,3750	9.525	7 ⁄8		.8750	22.225
1	25/64	.3906	9.922		57/64	.8906	22.622
13/52		.4063	10.319	29/32		.9063	23.019
	2764	.4219	10.716		5964	,9219	23,416
7/16		.4375	11.113	15/16	•	.9375	23.813
	29/64	.4531	11.509		61/64	.9531	24.209
15/32		.4688	11.906	31/82		.9688	24.606
	81/64	.4844	12.303		6364	.9844	25.00 3
1/2		.5000	12.700			1,0000	25.400

Miscellaneous data

1 cubic foot of water at 4° C (weight) 1 foot of water at 4° C (pressure) Velocity of light in vacuum Velocity of sound in dry air at 20° C Degree of longitude at equator	0.43352 lb per sq in 186,284 mi per sec 1129 ft per sec
Acceleration due to gravity, g, at sea-level 40' Latitude (NY)	32.1 <i>5</i> 78 ft per sq sec
$\sqrt{2g}$	8.02
inch of mercury	1.133 ft water
1 inch of mercury	
1 radian	$_{-}$ 180° ÷ π = 57.3°
360 degrees	
π	3.1416
Sine 1'	0.0002929
Side of square	_0.707 diagonal of square

Greek alphabet

capital	\$mall_	commonly used to designate
A	a	Angles, coefficients, attenuation constant, absorption factor, area
В	β	Angles, coefficients, phase constant
r	γ	Complex propagation constant (cap), specific gravity, angles, electrical conductivity, propagation constant
Δ	δ	Increment or decrement (cap or small), determinant (cap), permittivity (cap), density, angles
E	€	Dielectric constant, permittivity, base of natural logarithms, electric intensity
\mathbf{z}	5	Coordinates, coefficients
Ħ	η	Intrinsic impedance, efficiency, surface charge density, hysteresis, coordinates
Θ	ϑ θ	Angular phase displacement, time constant, reluctance, angles
I	ć	Unit vector
K	κ	Susceptibility, coupling coefficient
Λ	λ	Permeance (cap), wavelength, attenuation constant
M	μ	Permeability, amplification factor, prefix micro
N	p	Reluctivity, frequency
Z	ŧ	Coordinates
O	0	
п	T	3.1416
P	ρ	Resistivity, volume charge density, coordinates
Σ	σς	Summation (cap), surface charge density, complex propagation constant, electrical conductivity, leakage coefficient
${f T}$	au	Time constant, volume resistivity, time-phase displacement, transmission factor, density
r	υ	Tulishission fuctor, density
Φ	φφ	Scalar potential (cap), magnetic flux, angles
x	x	Electric susceptibility, angles
Ψ	ψ	Dielectric flux, phase difference, coordinates, angles
Ω	ω	Resistance in ohms (cap), solid angle (cap), angular velocity
	A B F A E Z H O I K A M N Z O I P E T T T T T T T T T T T T T T T T T T	A α B β Γ γ Δ δ E 6 Z \$ H η Θ 3 θ I 6 K κ A λ M μ N ν Ξ ξ Ο ο Π π P ρ Σ σ s T τ τ υ Φ φ φ Χ χ Ψ ψ

Small letter is used except where capital is indicated.

Unit Conversion	sym-	ble	cgs electrostatic unit	Z lesu = Nemu	cgs electromognetic unit	symmetric or Gaussian	l emu ≃ -Z N practical unit	L Useu
length	BOI	1 !	centimeter		centimeter	unit centimeter	1	1 1
nass	178		gram	1	gram	gram	1	-
lme	- t	[second	1	second	second	1	1
relocity		v = l/t	cm/see	1	em/sec	cm/sec	$\frac{1}{1}$	1
acceleration	a l	$\frac{v - 1/t}{a = v/t}$	cm/sec ²	1	cm/sec ²	cm/sec ²	1	1
force	F	F = ma	dyne	1	dyne	dyne	, <u> </u>	<u> </u>
work, energy	-W	$\overline{W} = FI$	erg	1	erg	erg	10-7	10-
oower		$\frac{W - VI}{P = W/I}$	erg/sec	1	erg/sec	erg/sec	10-7	10
permittivity of space	€0		1 statfarad/em	1	1/c² abfarad/cm	1 statfarad/cm		1
charge		$F = q_1 q_2 / \mathbf{E} r^2$	stateoulomb	1/c	abcoulomb	statcoulomb	10/c	10
surface charge density	- q -	$\frac{F = q_1 q_2 / E r^2}{\sigma = \sigma / A}$	stateoulomb/em2	1/c	abcoulomb/cm2	abcoulomb/cm2	10/6 10/c	10
volume charge density	<u>σ</u>	$\frac{\sigma = q/A}{\rho = q/v}$	stateoulomb/em2	1/c	abcoulomb/em3	statcoulomb/cm3		10
electric field strength	- <u>P</u> -	$E = \frac{q}{r}$ $E = -\operatorname{grad} V$	stateonomb/em-	0	abvolt/cm	stateoutomb/ems	6/10 ⁸	10
	I —	I	1/4 stateoulomb		½π abcoulomb	1/4π stateoulomb		1-
alectric flux density displacement density		D = eE	cm ²	1/c	cm ²	cm ²	10/c	.
electric flux displacement	Ψ	$\Psi = DA$	line =	1/c	¼π abcoulomb	$\lim_{1 \le \pi} = \frac{1}{4\pi} \operatorname{statcoulomb}$	10/c	_
capacitance	\overline{c}	C = n/V	statfarad = cm	1/c2	abfarad	statfarad or cm	10°/c²	10
elastance	8	S=1/C	statdaraf	C2	abdaraf	statdaraf	c2/109	10
polarization	P	[!	statcoulomb/cm ²	1/c	abcoulomb/cm2	statcoulomb/cm2	10/c	.
potential potential difference		$V = F_8 = \frac{W}{q}$	statvolt	0	abvolt	statvolt	c/108	10
emf	e	$e = -d\Phi/dt$	statvolt	c	abvolt	statvolt	c/108	10
current		$I = d\eta/dt$	statampere	1/c	abampere	statampere	10/c	10
current density	<u>.</u>	$\iota = I/A$	statampere/cm ²	1/0	abampere/cm ²	statampere/cm2	13/e	10
resistance	R	R = e/I = V/I			abohm	statohm	c2/109	10
resistivity	ρ	.	statohm × cm	1/-9	abohm × om	statohm × cm	c ² /10 ⁹	10
conductance	G	G = 1/R	statmho	1/c2	abmho	statmho	10°/c²	10
conductivity	<u> </u>	$\gamma = 1/\rho$	statmho/em	1/c2	abmho/cm	statmho/cm	$10^{9}/c^{2}$	10
permeability of space	μο		$\frac{1}{e^2} = \frac{\text{stathenry}}{\text{cm}}$	l	abhenry/cm	abhenry/em		
reluctivity	υ	$v = 1/\mu$						
pole strength	771	$F=m_1m_2/\mu r^2$		С	unit pole	unit pole		
magnetic moment		= mI	statpole × cm	С	pole × cm	pole × cm		
intensity of magnetization	J				pole/cm²	pole/cm ²		
magnetic potential	U		<u> </u>	1/c		.	.[_
magnetic potential diff magnetomotive force	М			1/c	gilbert	gilbert	10/c	10
magnetizing force	H	H = M/I		1/0	oersted	oersted	10/c	10
magnetic flux density magnetic induction	В	$B = \mu H$	statweber/cm ²	c	gausg	gauss	c/108	10
magnetic flux	Φ	$\Phi = BA$	statweber	c	maxwell or line or abvolt-sec	maxwell or line or abvolt-sec	c/108	10
reluctance	R	$R = M/\Phi$		1/c²	gilbert/maxwell	gilbert/maxwell	109/e ²	10
permeance	P	P = 1/R		C2	maxwell/gilbert	maxwell/gilbert		

From "Radio," May, 1944 (compiled by John M. Borst)
The table gives the name and defining equation for each unit in six systems and shows factors for the conversion of all units from or system into any other.
Column 3, "equation," of the table lists the relationships of the physical quantities involved. Consider, as an example, column 1 esu = N emu. The conversion factor in this column can be applied in any of the following ways:

	esu = N MKS	gmu = N MKS	1 practical unit = N MKS		1 esu = N MKS (R)	1 emu = N MKS (R)		1 MK\$ unit unrationalized = N MKS (R)	I practical unit = N MKS (R)
actical unit	N↓ Unrati	N↓ onalized	N ↓	unrafionalized MKS or Glorgi unit	N L MKS sub	N ↓ rational-	subrationalized MKS or Giorgi unit	N↓ MKS su	N ↓ bretion-
ntimeter	10-2	10-2	10-2	meter	10-2	10-2	meter	1	10-2
ii iii ii	10-3	10-3	·	kilogram	10-3	10-8	kilogram	1	
cond	1	1	1	second	1	1	second	1	1
1/sec	10-2	10-2	10-2	meter/second	10-2	10-2	meter/second	<u> </u>	10-2
0/8ec²	10-2	10-2	10-2	meter/sec2	10-2	10-2	meter/sec2	1	10-2
,	10-6	10-5		joule = newton	10-5	10-5	joule newton	1	
ule	10-7	10-7	1	joule	10-7	10-7	joule	i	1
att	10-7	10-7	1	watt	10-7	10-7	watt	1	1
$\frac{1}{\times 10^{11}}$ farad/cm				1/(9×10*) farad meter			$\frac{1}{(36\pi\times10^9)}$ farad/m		
ulomb	10/e	10	1	coulomb	10/c	10	conlorab	1	1
ulomb/em²	105/c	105	104	coulomb/m ²	105/c	105	coulomb/m2	1	10+
ulomb/cm³	10 ⁷ /c	10*	108	conlomb/m³	10 ⁷ /c	107	coulomb/m³	1	106
lt/cm	c/106	10-4	102	volt/m	c/108	10-6	volt/m	1	102
	105/c	105		½π coulomb meter ²	105/4πс	105/4π	coutomb/m²	1/4≖	<u> </u>
	10/e	10		¼π coulomb	10/4 # C	10/4π	coulomb	1/4π	
rad	10º/c²	109	1	farad	109/c2	109	farad	1	1
raf	c ² /10 ⁹	10-9	1	daraf	e ² /10 ⁹	10-9	daraf	1	1
		105		coulomb/m2	105/c	105	coulomb/m²	1	ļ
olt	c/10 ⁸	10-8	1	volt	c/10 ⁶	10-8	volt	1	1
lt	c/10 ⁸	10-8	1	volt	c/10 ⁸	10-8	volt	1	1
opere	10/c	10	1	ampere	10/c	10	ampere	1	1
opere/cm²	108/e	105	104	ampere/m³	105/0	105	ampere/m²		104
m V om	$\frac{c^2/10^9}{c^2/10^{11}}$	10-11	102	ohm	$\frac{c^2/10^9}{c^2/10^{11}}$	10-11	ohm	1	102
m × cm	109/c ²	10 11	102	ohm × meter mho	10°/c²	109	ohm × meter mho	1	102
ho/em	101/c2	-10 ¹¹	10-3	mbo/meter	10 ¹ /c ²	1011	mbo × meter		10-2
henry/cm	10-70-			10 ⁻⁷ henry/m	10-70-	10	$\frac{4\pi \times 10^{-7} \text{ henry}}{\text{meter}}$		10 -
	c/108	10-8			4πc/108	$\frac{-}{4\pi/10^8}$	weber	4π	_
	c/1010	10-10			4mc/1010	4π/10 ¹⁰	weber × meter	4π	
	c/104	10-4			4πc/104	$4\pi/10^{4}$	weber/m²	4.*	
	10/c	10	t		10/4mc	10/4π		¾ π	
π amp turn	10/c	10	1	¼π amp turn pra-gilbert	10/4mc	10/4π	ampere turn	1/4π	1/4 π
π amp turn	10³/c	10°	102	1/1 amp turn pra-oersted	103/4πe	103/4π	ampere turn/m	¾ π	102/4×
eber/cm²	104/c	104	104	weber/m³	c/104	10-4	weber/m²	1	104
eber or volt-sec	108/c	108	1	weber = volt-eec	c/108	10-8	weber = volt-sec	1	1
π amp turn weber	10°/c²	109	1	½π amp turn weber	109/4 mc2	10°/4π	amp turn/weber	1/4π	1/4π
weber ** amp turn	c²/10°	10-a	1	weber ¼π amp turn	4πc²/10°	4π/10 ^p	weber/amp turn	41	
nry	c2/109	10-9	1	benry	c2/10g	10-9	henry	1	1

^{1.} Multiply number of esu by N to obtain emu 2. Number of emu/number of esu = N 3. Magnitude of 1 esu/magnitude of 1 emu = N To convert from emu to esu multiply by $1/N_{\rm L}$

c = 2.998 \times 1010 c² = 8.988 \times 1020 1/c = 3.335 \times 10-4 1/c² = 1.112 \times 10-4 π = 12.57 34π = 0.7958 note: MKS (R) = subrationalized MKS unit

Electromotive force series of the elements

element	volts	ion	element	volts	ion
Lithium	2.9595		Tin	0.136	
Rubidium	2.9259		Lead	0.122	Pb++
Potassium	2.9241		Iron	0.045	Fe ⁺⁺⁺
Strontium	2.92		Hydrogen	0.000	
Barium	2.90		Antimony	-0.10	
Calcium	2.87		Bismuth	-0.226	
Sodium	2.7146		Arsenic	-0.30	
Magnesium	2.40		Copper	-0.344	Cu++
Aluminum	1.70		Oxygen	-0.397	
Beryllium	1.69		Polonium	-0.40	
Uranium	1.40		Copper	0.470	Cu+
Manganese	1.10		lodine	-0.5345	
Tellurium	0.827		Tellurium	-0.558	Te ⁺⁺⁺⁺
Zinc	0.7618		Silver	0.7978	
Chromium	0.557		Mercury	-0.7986	
Sulphur	0.51		Lead	-0.80	Pb++++
Gallium	0.50		Palladium	-0.820	
Iron	0.441	Fe ⁺⁺	Platinum	-0.863	
Cadmium	0.401		Bromine	— 1.0648	
Indium	0.336		Chlorine	— 1.3583	
Thallium	0.330		Gold	 1.360	Αυ ++++
Cobalt	0.278		Gold	 1.50	Au ⁺
Nickel	0.231		Fluorin e	— 1.90	

Position of metals in the galvanic series

Corroded end (anodic, or least noble)	Nickel (active) Inconel (active)
Magnesium Magnesium alloys Zinc Aluminum 2S Cadmium Aluminum 17ST Steel or Iron Cast Iron	Brasses Copper Bronzes Copper-nickel alloys Monel Silver solder Nickel (passive) Inconel (passive) Chromium-iron (passive)
Chromium-iron (active) Ni-Resist	18–8 Stainless (passive) 18–8–3 Stainless (passive)
18-8 Stainless (active) 18-8-3 Stainless (active) Lead-tin solders	Silver Graphite Gold
Lead Tin	Platinum Protected end (cathodic,
1 111	or most noble)

Note: Groups of metals indicate they are closely similar in properties.

Atomic weights

element	\$ymbol	atomic number	atomic weight	element	symbol	atomic number	atomic weight
Aluminum	Al	13	26.97	Molybdenum	Мо	42	95.95
Antimony	Sb	51	121.76	Neodymium	Nd	60	144.27
Argon '	Α	18	39.944	Neon	Ne	10	20.183
Arsenic	As	33	74.91	Nickel	Ni	28	58.69
Barium	Ba	56	137.36	Nitrogen	N	7	14.008
Beryllium	Вө	4	9.02	Osmium	Os	76	190.2
Bismuth	Bi	83	209.00	Oxygen	0	8	16.0000
Boron	В	5	10.82	Palladium	Pd	46	106.7
Bromine	Br	35	79.916	Phosphorus	P	15	30.98
Cadmium	Cd	48	112.41	Platinum	Pŧ	78	195,23
Calcium	Ca	20	40.08	Potassium	κ	19	39.096
Carbon	С	6	12.010	Praseodymium	Pr	59	140.92
Cerium	Ce	58	140.13	Protactinium	Pa	91	231
Cesium	Cs	55	132.91	Radium	Ra	88	226.05
Chlorine	CI	17	35.457	Radon	Rn	86	222
Chromium	Cr	24	52.01	Rhenium	Re	75	186.31
Cobalt	Co	27	58.94	Rhodium	Rh	45	102.91
Columbium	Сь	41	92.91	Rubidium	Rb	37	85.48
Copper	Cu	29	63.57	Ruthenium	Rυ	44	101.7
Dysprosium	Dy	66	162.46	Samarium	Sm	62	150.43
Erbium	Er	68	167.2	Scandium	Sc	21	45.10
Europium	Ευ	63	152.0	Selenium	Se	34	78.96
Fluorine	F	9	19.00	Silicon	Si	14	28.06
Gadolinium	Gd	64	156.9	Silver	Ag	47	107.880
Gallium	Ga	31	69.72	Sodium	Na	11	22.997
Germanium	Ge	32	72.60	Strontlum	Sr	38	87.63
Gold	Αu	79	197.2	Sulfur	S	16	32.06
Hafnium	Hf	72	178.6	Tantalum	Ta	73	180.88
Helium	He	2	4.003	Tellurium	Te	52	127.61
Holmium	Но	67	164.94	Terbium	Ть	65	159.2
Hydrogen	н	1	1.0080	Thallium	ΤI	81	204.39
Indium	In	49	114.76	Thorium	Th	90	232.12
lodin e	1	53	126.92	Thulium	Tm	69	169.4
Iridium	Îr	77	193.1	Tin	Sn	50	118.70
Iron	Fe	26	55.85	Titanium	ΤI	22	47.90
Krypton	Kr	36	83.7	Tungsten	W	74	183.92
Lanthanum	lα	57	138.92	Uranium	Ü	92	238.07
Lead	Pb	82	207.21	Vanadium	V	23	50.95
Lithium	Li	3	6.940	Xenon	Хe	54	131.3
Lutecium	Lu	71	174.99	Ytterblum	Yb	70	173.04
Magnesium	Mg	12	24.32	Yttrium	Y	39	88.92
Manganese	Mn	25	54.93	Zinc	Zn	30	65.38
Mercury	Hg	80	200.61	Zirconium	Zr	40	91.22

From the Jaurnal of the American Chemical Society, 1943.

Centigrade table of relative humidity or percent of saturation

dry bulb degrees															dry bulb degrees																			
	0.5	1.0	1.5	2.0	2.5	3.0	3.5	4.0	4.5	5	6	7	8	9	10	11	12	13	14	15	16	18	20	22	24	26	28	30	32	34	36	38	40	centigrade
2 4 6 8 10	92 93 94 94 94	83 85 87 87 88	75 77 80 81 82	67 70 73 74 76	59 63 66 68 71	52 56 60 62 65	48 55 58 55 58	36 41 47 50 54	27 34 41 45 49	20 28 35 39 44	15 23 28 34	11 17 23	14																	}				2 4 6 8
12 14 16 18 20	94 95 95 95 96	90 90	84 84 85 86 87	78 79 81 82 82	73 74 76 78 78	68 69 71 73 74	63 65 67 69 70	58 60 62 65 66	53 55 58 61 62	48 51 54 57 58	38 4) 45 49 51	33 37 42 44	21 24 29 35 36	12 16 21 27 30	10 14 20 23	7 13 17	6						66											12 14 16 18 20
22 24 26 28 30	96 96 96 96 96	92 92 92 92 93	87 88 89 89 89	83 85 85 85 86	79 81 81 82 82	75 77 77 78 79	72 74 74 75 76	68 70 71 72 73	64 66 67 68 70	64	53 55 57 58 61	46 49 51 53 55	40 43 45 47 50	34 37 39 42 44	27 31 34 37 39	21 26 28 31 35	16 21 23 26 30	11 14 18 21 24	10 13 17 20	13 16	12									ĺ			} 	22 24 26 28 30
32 34 36 38 40	96 97 97 97 97	93 93 93 94 94	90 90 90 90 91	86 87 87 87 88	83 84 84 85	80 81 81 81 82	77 77 78 79 79	74 74 75 76 76	71 71 72 73 74	68 69 70 70 71	83458	56 59 60 61	53333	46 48 50 51 52	41 43 45 46 48	36 38 41 42 44	32 34 36 38 40	27 30 32 34 36	23 26 28 30 32	19 22 24 26 29	15 18 21 23 25	10 13 16 19	10											32 34 36 38 40
42 44 46 48 50	97 97 97 97 97	94 94	91 91 91 92 92	88 88 89 89 89	85 86 86 86 87	82 83 83 84 84	80 80 81 81 82	77 77 78 78 79	74 75 76 76 77	72 73 73 74 75	67 68 68 69 70	62 63 64 65 65	58 59 60 61 62	53 54 55 56 57	49 50 52 53 54	45 47 48 49 50	41 43 44 45 47	38 39 41 42 43	34 36 37 39 40	31 32 34 35 37	27 29 31 33 34	21 23 25 27 28	15 17 19 21 23	12 14 16 18	12				ļ					42 44 46 48 50


Reprinted by permission of the Faxboro Company, Faxboro, Mass.

Example: Assume dry bulb reading (thermometer exposed directly to atmosphere) is 20° C and wet bulb reading is 17° C, or a difference of 3° C. The relative humidity at 20° C is then 74 %

nationed Centigrade table of relative humidity or percent of saturation

dry bulb degrees	1								diffe	renc	e bel	wee	n re	odin	gs o	f we	and	d dn	, bul	lbs in	ı de	grae	s cer	rtigr	ebe								- 1	dry bulb degrees
	0.5	1.0	1.5	2.0	2.5	13.0	3.5	4.0	4.5	5	16	7	8	9	10	11	12	13	14	15	16	18	20	22	24	26	28	30	32	34	36	36	40	centigrade
52 54 56 58 60	97 97 97 97 98	94 93 95 95 95	83 83 83 83 83 83	89 90 90 90 90	87 87 87 86 86 88	84 85 85 85 86	82 83 83 83	79 80 80 80 81	77 78 78 79 79	75 76 76 77 77	70 71 72 72 73	66 67 68 68 69	83 4 4 5	58 59 60 61 62	55 56 57 57 57 58	51 52 53 54 55	48 49 50 51 52	44 45 46 47 48	41 42 43 44 45	38 39 40 42 43	35 36 38 39 40	30 31 32 33 35	25 26 27 29 30	20 21 23 24 26	16 17 19 20 21	11 13 15 16 18	11 12 14	11						52 54 56 58 60
62 64 66 68 70	98 98 98 98 98	95 95 95 95 96	93 93 93 93 93	91 91 91 91 91	88 89 89 89	86 86 87 87	84 84 84 85 85	81 82 82 82 83	79 80 80 81 81	78 78 78 79 79	73 74 74 75 75	69 70 70 71 71	66 67 67 68	83344	59 59 60 61 61	56 56 57 58 58	53 54 55 55	49 50 51 52 52	46 47 48 49 50	43 44 45 46 47	41 42 43 44 44	36 37 38 39 40	31 32 33 34 35	27 28 29 30 31	23 24 25 26 27	19 20 21 22 23	15 17 18 19 20	12 13 15 16 17	12 13 14	ıı				62 64 66 68 70
72 74 76 78 80	98 98 98 98 98	96 96 96 96 96	94 94 94 94 94	92 92 92 93	89 90 90 90 90	87 87 88 88 88	85 86 86 86	83 84 84 84	81 82 82 82 83	80 80 80 81 81	76 76 76 77 77	72 72 73 73 74	69 70 70 71	65 66 66 67 67	62 63 64 64	59 60 60 61 61	56 57 57 58 58	53 54 54 55 55	50 51 52 52 53	48 48 49 50 50	45 46 47 47 48	40 41 42 43 43	36 37 38 28 39	32 33 34 34 35	28 29 30 30 31	24 25 26 27 28	21 22 23 24 24	18 19 20 21 22	15 16 17 18 19	12 13 14 15 16	11 12 13 14	10°		72 74 76 78 80
82 84 86 88 90	98 98 98 98 98	96 96 96 96 97	94 94 94 95 95	92 92 93 93	90 90 91 91 91	88 89 89 89	86 87 87 87	84 85 85 85 85	88888	81 82 82 82 82	77 78 78 78 78 79	74 74 75 75 76	71 71 72 72 73	68 69 69 69	65 65 66 67	62 62 63 63 64	59 59 60 60 61	56 57 57 58 58	54 54 55 55 56	51 52 52 53 53	49 49 50 51 51	44 45 45 46 47	40 40 41 42 42	36 37 37 38 38 39	32 33 34 34 35	29 29 30 31 32	25 26 27 28 28	22 23 24 25 26	20 20 21 22 23	17 18 19 19 20	15 16 16 17 18	12 13 14 15 16	10 11 12 13 14	82 84 86 83 90
92 94 96 98 100	98 99 99 99 99	97 97 97 97 97	95 95 95 95 95	222222	91	89 89 90 90 90	87 88 88 88 88	86 86 86 86 86	84 84 84 85 85	82 63 83 83 83	79 79 80 80 80	76 76 76 77 77	73 73 74 74 74	70 70 70 71 71	67 67 68 68	64 65 65 65 65	61 62 63 63	59 59 60 60	56 57 57 58 58	54 54 55 55 56	52 52 53 53 54	47 48 48 49 49	43 44 45 45	39 40 41 41 42	36 36 37 38 38	32 33 34 34 35	29 30 31 31 32	26 27 28 28 29	24 24 25 26 26	21 22 22 23 24	19 19 20 21 22	16 17 18 19	14 15 16 16 17	92 94 96 98 100

Atmospheric pressure chart

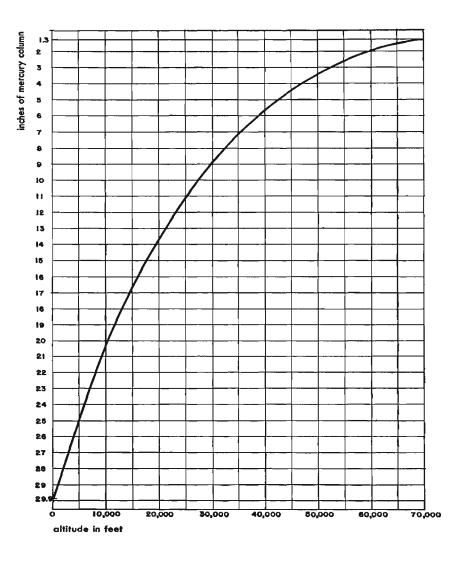

1 inch of mercury = 0.4912 pounds per square inch

Weather data

Compiled from Climate and Man, Yearbook of Agriculture, U. S. Dept. of Agriculture, U. S. Govt. Printing Office, Washington, D. C., 1941.

Temperature extremes

United	

—66° F Riverside Range Station, Wyoming (Feb. 9, 1933) Greenland Ranch, Death Valley, California (July 10, 1933) Lowest temperature 134° F Highest temperature

Alaska

-78° F Lowest temperature Fort Yukon Uan. 14, 1934)

Highest temperature Fort Yukon

World

-90° F Verkhoyansk, Siberia (Feb. 5 and 7, 1892) Lowest temperature 136° F -14° F Highest temperature Azizia, Libya, North Africa (Sept. 13, 1922)

Lowest mean temperature (annual) Framheim, Antarctica 86° F Highest mean temperature (annual) Massawa, Eritrea, Africa

Precipitation extremes

United States

Wettest state Dryest state

Louislana—average annual rainfall 55.11 Inches
Nevada—average annual rainfall 8.81 Inches
New Smyrna, Fla., Oct. 10, 1924—23.22 Inches in 24 hours
Bagdad, Calif., 1909–1913—3.93 Inches in 5 years Máximum recorded Minimum recorded

Greenland Ranch, Calif.—1.35 inches annual average World

Maximum recorded

Cherrapunji, India, Aug. 1841—241 inches in 1 month (Average annual rainfall of Cherrapunji is 426 inches) Bagul, Luzon, Philippines, July 14–15, 1911—46 inches in 24 hours Wadi Halfa, Anglo-Egyptian Sudan and Awan, Egypt are in the "rainless"

Minimum recorded

area; average annual rainfall is too small to be measured

World temperatures

territory	maximum ° F	minimum ° F	territory	maximum F	minimum ° F
NORTH AMERICA			ASIA continued		<u> </u>
Alaska	100	78	India	120	-19
Canada	103	- 70 −	Iraa	123	19
Canal Zone	97	63	Japan	101	<u>-</u> 'ź
Greenland	86	-46	Malay States	97	66
Mexico	118	11	Philippine Islands	103	58
U. S. A.	134	-66	Siam	106	52
West Indies	102	45	Tibet	85	-20
	''-		Turkey	1 111	-22
SOUTH AMERICA	1		U. S. S. R.	109	-90 -90
Argenting	115	-27	0. 0. 0. Na	107	_,
Bolivia	82	25	AFRICA		
Brazil	108	21	Algeria	133	
Chile	99	Ĩ9	Anglo-Egyptian Sudan	126	28
Venezuela	102	45	Angela	91	20
			Belgian Congo	97	28 33 34 31 32
EUROPE			Egypt	124	31
British Isles	100	4	Ethlopla	111	31
France	107	-14	French Equatorial Africa	118	46
Germany	1 100	—iš	French West Africa	122	41
Iceland	'71	-6	Italian Somaliland	93	
Italy	1 114 1	μĭ	libva	136	25
Norway	95	-26	Morocco	119	61 35 5 25 28
Spain	124	10	Rhodesia	103	3
Sweden	92	-49	Tunisia	122	23
Turkey	100	iź	Union of South Africa	111	21
U. S. S. R.	liĭŏ	-6î	Official of South Africa	'''	21
	'"	٠. ا	AUSTRALASIA		ì
ASIA			Australia	127	
Arabia	114	53	Hawaii	91	19 51
China	l iii l	-10	New Zealand		
East Indies				94	23
French Indo-China	101 113	60 33	Samoan Islands	96	61
Trench mgo-Ching	1 113 1	રૂડ [Solomon Islands	l 97	70

World precipitation

	1	hìghest	average		1	lowest	aveta Se	1	yearly
territory	Jan inches	April inches	July inches	Oct inches	Jan inches	April inches	July inches	Oct inches	average inches
NORTH AMERICA Alaska Conada Canal Zone Greenland Mexico	13.71 8.40 3.74 3.46 1.53	10.79 4.97 4.30 2.44 1.53	8.51 4.07 16.00 3.27 13.44	22.94 6.18 15.13 6.28 5.80	.15 .48 .91 .35	.13 .31 2.72 .47	.93 1.04 7.28 .91	.37 .73 10.31 .94 .35	43.40 26.85 97.54 24.70 29.82
U. S. A. West Indies	4.45	6.65	5.80	6.89	.92	1.18	1.53	5.44	29.00 4 9.77
SOUTH AMERICA Argentina Bolivia Brazil Chile Venezuela	6.50 6.34 13.26 11.78 2.75	4.72 1.77 12.13 11.16 6.90	2.16 .16 10.47 16.63 6.33	3.35 1.42 6.54 8.68 10.44	.16 3.86 2.05 .00	.28 1.46 2.63 .00 .61	.04 .16 .01 .03 1.87	.20 1.30 .05 .00 3.46	16.05 24.18 55.42 46.13 40.01
EUROPE British Isles France Germany Iceland Italy Norway Spain Sweden Turkey U. S. S. R.	5.49 3.27 1.88 5.47 4.02 8.54 2.83 1.52 3.43 1.46	3.67 2.64 2.79 3.70 4.41 4.13 3.70 1.07 1.65 1.61	3.78 2.95 5.02 3.07 2.40 5.79 2.05 2.67 1.06 3.50	5.57 4.02 2.97 5.95 5.32 8.94 3.58 2.20 2.52 2.07	1.86 1.46 1.16 5.47 1.44 1.06 1.34 .98 3.43	1.54 1.65 1.34 3.70 1.63 1.34 1.54 .78 1.65	2.38 .55 2.92 3.07 .08 1.73 .04 1.80 1.06 .20	2.63 2.32 1.82 5.59 2.10 2.48 1.77 1.60 2.52	36.16 27.48 26.64 52.91 29.74 40.51 22.74 18.12 28.86 18.25
ASIA Arabia China East Indies French Indo-China India Iroq Japan Malay States Philippine Islands Slam Turkey U. S. S. R.	1.16 1.97 18.46 .79 3.29 1.37 10.79 9.88 2.23 .33 4.13 1.79	.40 5.80 10.67 4.06 33.07 .93 8.87 7.64 1.44 1.65 2.75 2.05	.03 13.83 6.54 12.08 99.52 .00 9.94 6.77 17.28 6.24 1.73 3.61	.09 6.92 10.00 10.61 13.83 .08 7.48 8.07 10.72 8.32 3.34 4.91	.32 .15 7.48 .52 .09 1.17 2.06 9.88 .82 .33 2.05	.18 .61 2.60 2.07 .06 .48 2.83 7.64 1.28 1.65 1.73	.02 5.78 .20 9.24 .47 .00 5.02 6.77 14.98 6.24 .21	.09 .67 .79 3.67 .00 .05 4.59 8.07 6.71 8.32 .93	3.05 50.63 78.02 65.64 75.18 6.75 70.18 95.06 83.31 52.36 25.08 11.85
AFRICA Algeria Anglo-Egyptian Sudan Anglo-Egypt Belgian Congo Egypt Ethiopia French Equatorial Africa French West Africa Italian Somaliland Libya Morocco Rhodesia Tunista Union of South Africa	4.02 .08 8.71 9.01 2.09 5.59 9.84 .10 .00 3.24 3.48 8.40 2.36 6.19	2.06 4.17 5.85 6.51 .16 3.42 13.42 1.61 3.66 .48 2.78 .95 1.30 3.79	.35 7.87 .00 .13 .00 10.98 6.33 8.02 1.67 .02 .07 .04 .08 3.83	3.41 4.29 3.80 2.77 .28 3.39 13.58 1.87 2.42 1.53 2.47 1.20 1.54 5.79	.52 .00 .09 3.69 .00 .00 .00 .00 .74 1.31 5.81 2.36	3.11 .00 .63 1.81 .00 3.11 .34 .00 3.60 .18 .36 .65 1.30	.00 .00 .00 .00 .00 .00 8.23 .04 .18 1.67 .00 .00 .00	.05 .00 .09 1.88 .00 .79 '.86 .00 2.42 .67 .23 .88 1.54	9.73 18.27 23.46 39.38 3.10 49.17 57.55 19.51 17.28 13.17 15.87 29.65 15.80 26.07
AUSTRALASIA Australia Hawaii New Zealand Samoan Islands Solamon Islands	15.64 11.77 3.34 18.90 13.44	5.33 13.06 3.80 11.26 8.24	6.57 9.89 5.55 2.60 6.26	2.84 10.97 4.19 7.05 7. 91	3.54 2.67 18.90 13.44	.85 2.06 2.78 11.26 8.24	.0 7 1.04 2.99 2.60 6.26	.00 1.97 3.13 7.05 7.91	28.31 82.43 43.20 118.47 115.37

Principal power supplies in foreign countries

territory	dc volts	ac volts	frequency
NORTH AMERICA Alaska		110, 220	60
British Honduras Canada Costa Rica Cuba Dominican Republic Guatemala Haiti Honduras Mexico Newfoundland Nicaragua Panama (Republic) Panama (Carai) Zone) Puerto Rico Salvador Virgin Islands	110, 220 110 110, 220 110, 220 110, 220 110, 220 110, 220 110, 220 110, 220 110, 220	*110, 150, 115, 230 *110 *110, 220 *110, 220 *110, 220 *110, 220 *110, 125, 115, 220, 230 *110, 115 *110 *110 *110 *110 *110 *110 *110 *	60, 25 60 60 60, 50 60, 50 60, 50 60, 50 50, 60 60, 50 25 60
WEST INDIES Bahamas Is. Barbados Bermuda Curacao Jamoica Mortirique Trinidad	110	115 110 110 127 110 *110 110, 220	60 50 60 50 40, 60 50 60
SOUTH AMERICA Argentina Belivia Brozil Chile Colombia Ecuador Paraguay Peru Uruguay Venezuela	*220 110, 110, 120, 220 220, 110 *220 220, 110 220 110, 220	*220, 225 *110, 220 110, 115, 120, 125, 220, 230 *220 *110, 220, 150 110, 220 220 *220, 110 *220 *110	50, 60, 43 50, 60 50, 60 50, 60 60, 50 60, 50 50, 60
EUROPE Albania Austria Azores Belgium Bulgaria Cyprus (Br.) Czechoslovakia Denmark Estonia Finland Franca Germany Gibraltar Greece Hungary Iceland Irish Free State	220 220, 110, 150 220 220, 110, 120 220, 120 **220 220, 120 **220 220, 120, 150, 110 220, 110 **120, 220, 110 **120, 220, 120, 125 220, 110, 120, 250 440, 220 **220, 110, 150 220, 110, 150 220, 110, 150 220, 110, 120 **220 110, 125, 150, 220, 250, 160	*220, 125, 150 *220, 120, 127, 110 220 *220, 127, 110, 115, 135 *220, 120, 150 110 *220, 110, 115, 127 *220, 120, 127 220, 127 220, 120, 115, 110 *110, 115, 120, 125, 220, 230 *220, 127, 120, 110 *110, 2120 *100, 105, 110, 220, 120 220, 220 *220, 200 *150, 125, 120, 110, 115, 260, 220, 230	50 50 50 50, 40 50, 42 50 50, 42 50 50, 25 50, 25 50, 25 50, 25 50, 25 50, 42, 50 50
Latvia Lithuanla Malta Monta Monaco Netherlands Norway Poland Portugal Rumania Russia Spain Sweden Switzerland Turkey	220, 110 220, 110 220 220 220, 110 220, 150, 125 **220, 110, 105, 120 **20, 110, 120, 115, 250 **110, 120, 115, 105 220, 110, 120, 115, 250 220, 120, 110, 150, 150 110, 220	135 *220, 120 *220 105 110 220, 120, 127 *220, 230, 130, 127, 110, 120, 150 *220, 110, 115 120, 220, 110, 115, 105 *120, 120, 120, 110, 115, 220, 130 *220, 110, 125 *120, 125, 150, 110, 115, 220, 130 *220, 120, 125, 150, 110, 125 *120, 220, 145, 150, 110, 120 *220, 110	50 50 100 42 50 50 50 50, 42 50, 42 50, 42 50 50, 20, 25 50, 40

Principal power supplies in foreign countries continued

territory	dc volts	ac voits	frequency
EUROPE continued United Kingdom Jugoslovia	230, 220, 240 110, 120	*230, 240, others *120, 220, 150	50, 25, 40 50, 42
ASIA Arabia British Moloya Fed. Malay States Non-Fed. Malay States Stralts Settlements North Borneo Ceylon China Hawail India French Indo-China Iran (Persia) Iraq Japan Manchurla Polestine Philippine Islands Syria Stam Turkey	230 *230 220 220, 110 220, 110, 225, 230, 250 110, 120, 220, 240 220, 110 *220, 200	230 230 230 110 230 *110, 200, 220 110, 220 230, 220, 110, others *120, 220, 110, 115, 240 220 220, 230 *100, 110 110 120 220 220 110, 115, 220 100 *220, 110	50 50, 60, 40 50, 60 50, 60 50, 60, 25 60, 25 50, 25 50 50 50 50, 50 50, 50 50, 50 50, 50 50, 50
AFRICA Angola (Port.) Algeria Belgian Congo Brilish West Africa Brilish East Africa Canary Islands Egypt Ethiopia (Abyssinla)	220 *220 *220 110 220	110 *115, 110, 127 220 230 *240, 230, 110, 100 *127, 110 200, 110, 220 220, 250	50 50 60 50 50, 60, 100 50, 40 50, 40
Iralian Africa Cyrenaica Eritrea Libya (Tripoli) Somalliand Morocco (Fr.) Morocco (Spanish) Madagoscor (Fr.) Senegai (Fr.) Tunisla Uaion of South Africa	150 120 110 200 230 110 220, 230, 240, 110	*110, 150 127 125, 110, 270 *230 115, 110 *127, 110, 115 120 120 *110, 115, 220 *220, 230, 240	50 50, 42, 45 50 50 50 50 50 50 50
OCEANIA Australia New South Wales Victoria Queensland South Australia West Australia Tasmania New Zeolond Fiji Islands Society Islands Somoa	*240 230 220, 240 200, 230, 220 *220, 110, 230 230 240, 110, 250	*240 *230 *240 *200, 230, 240 250 *240 *230 120	50 59 59 59 40 59 50 60 50

Note: Where both ac and dc are available, an asterisk (*) Indicates the type of supply and voltage predominating. Where approximately equal quantities of ac and dc are available, an asterisk pracedes each of the principal voltages. Voltages and frequencies are listed in order of preference.


The electrical authorities of Great Britain have adopted a plan of unifying electrical distribution systems. The standard potential for both ac and dc supplies will be 230 volts. Systems using other voltages will be changed over. The standard ac frequency will be 50 cycles.

Caution: The listings in these tables represent types of electrical supplies most generally used in particular countries. For power supply characteristics of particular cities of foreign countries, refer to the country section of Warld Electrical Markets, a publication of the U. S. Department of Commerce, Bureau of Foreign and Domestic Commerce, Washington, D. C. In cases where definite information relative to specific locations is necessary, the Electrical Division of the above-named Bureau should be consulted.

	,														. ,					
Aleutian Islanda Tutulla, Samoa	Hawellan Islands	Aloska Tahhi	Son Francisco & Pacific Coast	Chicago, Central America (except Panama) Mexica, Winnipeg	Bogoto, Havana Lima, Montheal New York, Panama	Buenos Atres, Bermuda Sanilago, Puerto Rico Lapax, Asuncien	Rio, Santos Sao Pasia	Iceland Dakar	Algiers, Lisbon London, Paris Madrid	G. C. T.	Bengasi, Berlin, Oslo Rome, Tunis, Tripoli Warsaw, Stockholm	Coiro, Copetown Istanbul	Leningrad	Bomboy, Ceylon New Delhi	Chungking Chengtu, Kunming	Celeber, Hang Kong Manila, Shanghai	Chosen, Japon Monchukuo	Brisbane, Guam Melbourne, New Guinea Sydney, Khabarovsk	Salomon Islands New Caledonia	Wellington Auckland
1:00pm	1:30pm	2:00pm	4:00pm	6:00pm	7:00pm	8:00pm	9,00pm	11.00pm	Midnite	0000	1:00am	2-00am	3:00am	5:3Cam	7:00am	8:00am	9:00am	10:00am	11:00am	11:30am
2:00pm	2:30pm	3:00pm	5:00pm	7:00pm	8:00pm	9:00pm	10:00pm	Midnite	1:00am	0100	2-00om	3:00am	4:00am	6:30am	8:00am	9:00am	10:00om	11:00am	Noon	12:30pm
3:00pm	3:30pm	4:00pm	6:00рл	8:00pm	9:00pm	10:00pm	anq00 ₁ 11	1:00am	2:00gm	0200	3:00om	4:00am	5:00am	7:30am	9:00am	10:00am	11:00am	Noon	1:00pm	1:30pm
4;00pm	4:30pm	5:00pm	7:00pm	9:00pm	10:00pm	mq00:11	Midnite	2:00am	3:00am	0300	4:00am	5:00am	6:00am	8:30om	10:00am	11:00am	Noon	1:00ря	2:00pm	2:30pm
5:00pm	5:30pm	6:00pm	8:00pm	10:00pm	11:00pm	Midnite	1:00cm	3:00am	4:00am	0400	5:00am	6:00am	7:00am	9:30cm	11:00am	Noon	1:00pm	2:00pm	3:00pm	3,30pm
6:00pm	6:30pm	7:00pm	9:00pm	11:00pm	Midnite	1:00am	2:00am	4:00am	5:00am	0500	6-00am	7:00am	8:00am	10:30am	Noon	1:00pm	2:00pm	3:00pm	4:00pm	4:30pm
7:00pm	7:30pm	8:00pm	10:00pm	Midnite	1:00am	2:00om	3,00am	5:00am	6:00am	0600	7:00am	8:00am	9.00am	11:30am	1:00pm	2:00pm	3:00pm	4:00pm	5:00pm	5:30pm
8:00pm	8:30pm	9:00pm	11:00pm	1:00am	2-00am	3:00от	4:00om	6:00am	7:00am	0700	8:00am	9:00am	10:00om	12:30pm	2:00pm	3:00pm	4:00pm	5:00pm	6:00pm	6-30pm
9:00pm	9:30pm	10:00pm	Midnite	2:00am	3:00am	4:00om	5:00am	7:00am	8:00am	0600	9:00am	10:00am	11:00am	1:30pm	3:00pm	4:00рл	5:00pm	6:00pm	7:00pm	7,30pm
10:00pm	10:30pm	11:00pm	1:00om	3:00cm	4:00om	5:00a7i	6:00am	8:00am	9:00am	0900	10:00am	11:00am	Noon	2:30pm	4:00pm	5:00pm	6:00pm	7:00pm	8:00pm	8:30pm
11:00pm	11:30pm	Midnite	2-00om	4:00am	5:00am	6:00am	7:00am	9:00am	10:00am	1000	11:00am	Naon	1:00pm	3:30pm	5:00pm	6:00рт	7:00pm	8-00pm	9:00pm	9:30pm
Midnite	12:30am	1:00am	3:00am	5:00am	6:00om	7:00am	8:00am	10:00am	11:00om	1100	Noon	1:00pm	2:00pm	4:30pm	6:00pm	7:00pm	8:00pm	9:00pm	10:00pm	10.30pm
1:00am	1:30am	2:00am	4:00am	6:00am	7:00am	8:00am	9:00cm	11:00am	Noon	1200	1:00pm	2-00рт	3:00pm	5:30pm	7:00pm	8:00pm	9:00pm	10:00pm	11:00pm	11:30pm
2:00am	2:30am	3:00om	5:00am	7:00om	8:00pm	9,00am	10:0Cam	Noon	1:00pm	1300	2-00pm	3:00pm	4:00pm	6:30pm	8:00pm	9:00pm	10:00pm	11:00pm	Midnite	12:30am
3:00om	3:30am	4r00cm	6:00am	8:00am	9:00am	10:00am	ma00:11	1:00pm	2.00pm	1400	3:00pm	4:00pm	5:00pm	7:30pm	9:00pm	10:00pm	11:00pm	Midnite	1:00am	1:30om
4:00om	4:30am	5:00am	7:00om	9:00am	10:00am	11:00cm	Noon	2-00pm	3:00pm	1500	4:00pm	5:00pm	6:00pm	8:30pm	10:00pm	11:00pm	Midnite	1:00am	2:00am	2:30om
5:00am	5:30cm	6:00am	8:00a.m	10:00am	11:00am	Noon	1:00pm	3:00pm	4:00pm	1600	5:00pm	6:00рл	7:00pm	9:30pm	11:00pm	Midnite	1:00am	2-00am	3:00am	3:30am
6:00am	6:30am	7:00am	9:00am	f1:00om	Noon	1:00pm	2:00pm	4:00pm	5:00pm	1700	6:00pm	7:00pm	8:00pm	10;30pm	Midnite	1:00am	2:00am	3:00am	4:00an	4:30am
7:00om	7:30cm	8:00um	10:00am	Noon	1:00pm	2:00pm	3:00pm	5:00pm	6:00pm	1800	7:00pm	8:00pm	9:00pm	11:30pm	1:00am	2:00am	3:00am	4:00ат	5:00am	5:30om
8+00am	8:30am	9:00am	11:00om	1:00pm	2:00pm	3:0Cpm	4:00pm	6:00pm	7:00pm	1900	8:00pm	9:00pm	10:00pm	12:30om	2-00om	3:00cm	4:00am	5:00cm	6:00am	6:30om
9:00am	9:30am	10:00am	Noon	2:00pm	3.00pm	4:00pm	5:00pm	7:00pm	8:00pm	2000	9:00pm	10:00pm	11:00pm	1:30am	3-00am	4:00am	5:00am	6:00am	7:00am	7:30am
10:00om	10:30cm	11:00om	1:00pm	3:00pm	4:00pm	5,00pm	6:00pm	8:00pm	9:00pm	2100	10:00pm	11:00pm	Midnite	2:30om	4:00am	5:00cm	6:00am	7:00om	8:00am	8:30am
11:00am	11.30am	Noon	2:00pm	4:00pm	5:00pm	6:00pm	7:00pm	9:00pm	10.00pm	2200	11:00pm	Midnite	1:00am	3:30am	5:00am	6:00am	7:00om	8:00gm	9:00am	9:30ал
Noon	12:30pm	1:00pm	3:00pm	5:00pm	6:00рт	7:00pm	8:00pm	10:00pm	11:00pm	2300	Midnite	1:00am	2:00am	4:30am	6:00am	7:00om	8:00am	9:00am	10:00am	10:30am
1:00pm	1-30-pm	2:00pm	4:00pm	6:00pm	7:00pm	8:00pm	9:00pm	11:00pm	Mildnite	2400	1:00am	2:00am	3:00am	5:30am	7:00am	8:00am	9:00am	10:00am	11:00am	11:30am
		ļ.		1	I	ı	l	I	l	l	ı	l	l	ı	i	ı	1	I	1	1

This chart is based on STANDARD TIME.
Passing heavy line denotes change of date.

When possing the fine going to the right ADD one day. When possing the line going to left SUBTRACT one day. Courtesy, American Coble & Radio Corporation

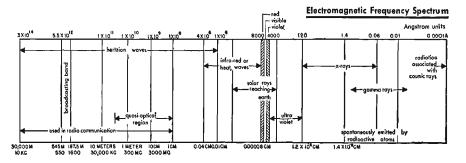


Radio frequency classifications

frequency in kilocycles	designations* "	abbreviations	wavelength in meters†	wavelength in feet			
10- 30	Very low	VLF	30,000 -10,000	98,424 - 32,808			
30- 300	Low	LF	10,000 - 1,000	32,808 - 3,281			
300- 3,000	Medlum	MF	1,000 - 100	3,281 - 328			
3,000- 30,000	High	HF	100 - 10	328 - 32,8			
30,000- 30,000	Very High	VHF	10 - 10	32.8 - 3.28			
30,000- 3,000,000	Ultra High	UHF	1 - 0.1	3.28 - 0.33			
3,000,000-30,000,000	Super High	SHF	0.1- 0.01	0.33 - 0.03			

^{*} Official FCC designation, March 2, 1943.

[†] Based on the established practice of considering the velocity of propagation in air as 300,000 kilometers per second instead of the true velocity of propagation of 299,796 kilometers per second.

Wavelength vs frequency chart

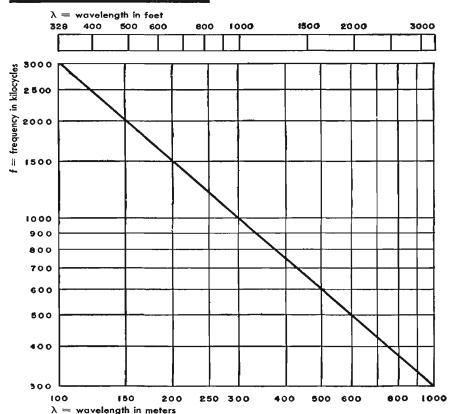

Conversion factors for wavelength vs frequency chart

for frequencies from	multiply f by	multiply λ by	
30- 300 kilocycles	0.1	0.01	
300- 3,000 kilocycles	1.0	1.0	
3,000- 30,000 kilocycles	10.0	0.1	
30,000- 300,000 kilocycles	100.0	0.01	
300,000- 3,000,000 kilocycles	1,000.0	0.001	
3,000,000-30,000,000 kilocycles	10,000.0	0.0001	

Wavelength vs frequency formulas

Wavelength in meters,
$$\lambda_m = \frac{300,000}{\text{frequency in kilocycles}}$$

$$\text{Wavelength in feet, } \lambda_{ft} = \frac{300,000 \times 3.28}{\text{frequency in kilocycles}}$$

Frequency tolerances

Cairo revision 1938

fre	equency bands (wavelengths)	column 1	column 2
Δ	From 10 to 550 kc (30,000 to 545 meters):		
	Fixed stations	0.1%	0.1%
	Land stations	0.1 <i>%</i> 0.1 <i>%</i>	0.1%
	Mobile stations using frequencies other than those of	0.170	0.170
٠.	bands indicated under (d)	0.5%	0.1%
d.	Mobile stations using frequencies of the bands 110-160 kc	0.070	31.70
	(2,727 to 1,875 meters), 365-515 kc (822 to 583 meters) †	0.5%*	0.3%*
е.	Aircraft stations	0.5%	0.3%
f.	Broadcasting stations	50 cýcles	20 cycles
В.	From 550 to 1,500 kc (545 to 200 meters):		
	Broadcasting stations	50 cycles	20 cycles
	Land stations	0.1%	0.05%
c.	Mobile stations using the frequency of 1,364 kc (220)	70	70
	meters)	0.5%	0.1%
— С.	From 1,500 to 6,000 kc (200 to 50 meters):		
	fixed stations	0.03%	0.01%
b.	Land stations	0.04%	0.02%
c.	Mobile stations using frequencies other than those of	, ,	, ,
	bands indicated in (d):		
	1,560 to 4,000 kc (192.3 to 75 meters)	0.1% * 0.04%	0.05%* 0.02%
	4,000 to 6,000 kc (75 to 50 meters)	0.04 $\%$	0.02%
d.	Mobile stations using frequencies within the bands:		
	4,115 to 4,165 kc (72.90 to 72.03 meters) \	0.1%*	0.05%*
	5,500 to 5,550 kc (54.55 to 54.05 meters) \(\)		1
	Aircraft stations	0.05%	0.025%
f.	Broadcasting:		
	between 1,500 and 1,600 kc (200 and 187.5 meters)	50 cycles	20 cycles
	between 1,600 and 6,000 kc (187.5 and 50 meters)	0.01%	0.005%
	From 6,000 to 30,000 kc (50 to 10 meters):		
7 .	Fixed stations	0.02 <i>%</i> 0.04 <i>%</i>	0.01%
	Land stations	0.04%	0.02%
c.	Mobile stations using frequencies other than those of	0.04%	0.02%
	bands indicated under (d)	0.04%	0.02%
a.	Mobile stations using frequencies within the bands: 6,200 to 6,250 kc (48.39 to 48 meters) 8,230 to 8,330 kc (36.45 to 36.01 meters)		
	11,000 to 11,100 kc (27.27 to 27.03 meters)		
	12,340 to 12,500 kc (24.31 to 24 meters)	0.1 <i>%</i> *	0.05%*
	16,460 to 16,660 kc (18.23 to 18.01 meters)		
	22,000 to 22,200 kc (13.64 to 13.51 meters)		
	Aircraft stations	0.05%	0.025%
e.			

Column 1: Transmitters in service now and until January 1, 1944, after which date they will conform to the tolerances indicated in column 2.

Column 2: New transmitters installed beginning January 1, 1940.

^{*} See preamble, under 3.

† It is recognized that a great number of spark transmitters and simple self-oscillator transmitters exist in this service which are not able to meet these requirements.

Frequency tolerances continued

The frequency tolerance is the maximum permissible separation beween the actual frequency of an emission and the frequency which this emission should have (frequency notified or frequency chosen by the operator).

This separation results from the following errors:

- **a.** Error made when the station was calibrated; this error presents a semi-permanent character.
- b. Error made during use of the station (error variable from one transmission to another and resulting from actual operating conditions: ambient temperature, voltage of supply, antenna, skill of the operator, et cetera). This error, which is usually small in other services, is particularly important in the case of mobile stations.
- c. Error due to slow variations of the frequency of the transmitter during a transmission.

Note: In the case of transmissions without a carrier wave, the preceding definition applies to the frequency of the carrier wave before its suppression.

In the case of ship stations, the reference frequency is the frequency on which the transmission begins, and the figures appearing in the present table, marked by an asterisk, refer only to frequency separations observed during a ten-minute period of transmission.

In the frequency tolerance, modulation is not considered.

Note 1: The administrations shall endeavor to profit by the progress of the art in order to reduce frequency tolerances progressively.

Note 2: It shall be understood that ship stations working in shared bands must observe the tolerances applicable to land stations and must conform to article 7, paragraph 21 (2) (a). [No. 186.]

Note 3: Radiotelephone stations with less than 25 watts power, employed by maritime beacons for communications with beacons isolated at sea, shall be comparable, with reference to frequency stability, to mobile stations indicated in C above.

Note 4: Ships equipped with a transmitter, the power of which is under 100 watts, working in the band of 1560–4000 kc (192.3–75 meters), shall not be subject to the stipulations of column 1.

Reproduced from "Treaty Series No. 948, Telecommunication—General Radio Regulations (Cairo Revision, 1938) and Final Radio Protocol (Cairo Revision, 1938) annexed to the Telecommunication Convention (Madrid, 1932) Between the United States of America and Other Powers," Appendix 1, pp. 234, 235 and 236, United States Government Printing Office, Washington, D. C. References refer to this publication.

Frequency-band widths occupied by the emissions

Cairo revision, 1938*

The frequency bands necessary for the various types of transmission, at the present state of technical development, are indicated below. This table is based solely upon amplitude modulation. For frequency or phase modulation, the band widths necessary for the various transmissions are many times greater.

	type of transmission	total width of the band in cycles for transmission with two sidebands
A0	Continuous waves, no signaling	
Āī	Telegraphy, pure, continuous wave Morse code Baudot code	Numerically equal to the telegraph speed in bauds for the fundamental frequency, 3 times this width for the 3d harmonic, etc.
	Stop-start printer	[For a code of 8 time elements (dots or blanks) per letter and 48 time elements per ward, the speed in bauds shall be equal to 0.8 times the speed in words per minute.]
	Scanning-type printer	300-1,000, for speeds of 50 words per minute, according to the conditions of operation and the number of lines scanned (for example, 7 or 12). (Harmonics are not considered in the above values.)
A2	Telegraphy modulated to musical frequency	Figures appearing under A1, plus twice the highest modulation frequency.
A3	Commercial radiotelephony	Twice the number indicated by the C.C.f.F. Opinions (about 6,000 to 8,000).1
	Broadcasting	15,000 to 20,000.
A4	Facsimile	Approximately the ratio between the number of picture components ² to be transmitted and the number of seconds necessary for the transmission.
Ā5	Television	Approximately the product of the number of picture components ² multiplied by the number of pictures transmitted per second.

¹ It is recognized that the band width may be wider for multiple-channel radiotelephony and secret radiotelephony.

Tolerances for the intensity of harmonics

of fixed, land, and broadcasting stations¹

Cairo revision, 1938*

frequency bands	tolerances				
Frequency under 3,000 kc (wavelength above 100 meters)	The field intensity produced by any harmonic must be under 300 pe/m at 5 kilometers from the transmitting antenna.				
Frequency above 3,000 kc (wavelength under 100 meters)	The power of a harmonic in the antenna must be 40 db under the power of the fundamental, but in no case may it be above 200 milliwatts. ²				

¹ With regard to tolerances for mobile stations, an attempt shall be made to achieve, so far as

² Two picture components, one black and one white, constitute a cycle: thus, the modulation

frequency equals one half the number of components transmitted per second.

* See Footnote under Frequency Tolerances, Treaty Series No. 948, Telecommunication.

possible, the figures specified for fixed stations.

A transmitter, the harmonic intensity of which is not above the figures specified but which nevertheless causes interference, must be subjected to special measures intended to eliminate

such interference.

* See Footnote under Frequency Tolerances, Treaty Series No. 948, Telecommunication

Classification of emissions Cairo revision, 1938*

1. Emissions shall be classified below according to the purpose for which they are used, assuming their modulation or their possible keying to be only in amplitude.

a. Continuous waves:

Type A0. Waves the successive oscillations of which are identical under fixed conditions.¹

Type A1. Telegraphy on pure continuous waves. A continuous wave which is keyed according to a telegraph code.

Type A2. Modulated telegraphy. A carrier wave modulated at one or more audible frequencies, the audible frequency or frequencies or their combination with the carrier wave being keyed according to a telegraph code. Type A3. Telephony. Waves resulting from the modulation of a carrier wave by frequencies corresponding to the voice, to music, or to other sounds. Type A4. Facsimile. Waves resulting from the modulation of a carrier wave by frequencies produced at the time of the scanning of a fixed image with a view to its reproduction in a permanent form.

Type A5. Television. Waves resulting from the modulation of a carrier wave by frequencies produced at the time of the scanning of fixed or moving objects.²

Note: The band widths to which these emissions correspond are indicated under Frequency-Band Widths Occupied by the Emissions.

b. Damped waves:

Type B. Waves composed of successive series of oscillations the amplitude of which, after attaining a maximum, decreases gradually, the wave trains being keyed according to a telegraph code.

- 2. In the above classification, the presence of a carrier wave is assumed in all cases. However, such carrier wave may or may not be transmitted. This classification does not contemplate exclusion of the use, by the administrations concerned, under specified conditions, of types of waves not included in the foregoing definitions.
- **3.** Waves shall be indicated first by their frequency in kilocycles per second (kc) or in megacycles per second (Mc). Following this indication, there shall be given, in parentheses, the approximate length in meters. In the present Regulations, the approximate value of the wavelength in meters is the quotient of the number 300,000 divided by the frequency expressed in kilocycles per second.

¹ These waves are used only in special cases, such as standard frequency

² Objects is used here in the optical sense of the word.

^{*}See Footnote under Frequency Tolerances, Treaty Series No. 948, Tele-communication.

Relation between decibels and power, voltage, and current ratios

The decibel, abbreviated db, is a unit used to express the ratio between two amounts of power, P_1 and P_2 , existing at two points.

By definition the number of db =
$$10 \log_{10} \frac{P_1}{P_2}$$

It is also used to express voltage and current ratios.

The number of db = 20
$$\log_{10} \frac{V_1}{V_2}$$
 = 20 $\log_{10} \frac{I_1}{I_2}$

Strictly, it can be used to express voltage and current ratios only when the two points at which the voltages or currents in question have identical impedances.

power ratio	voltage and current ratio	decibels	power ratio	voltage and current ratio	decibels
1.0233	1.0116	0.1	19.953	4.4668	13.0
1.0471	1.0233	0.2	25.119	5.0119	14.0
1.0715	1.0351	0.3	31.623	5.6234	15.0
1.0965	1.0471	0.4	39.811	6.3096	16.0
1.1220	1.0593	0.5	50.119	7.0795	17.0
1.1482	1.0715	0.6	63.096	7.9433	18.0
1.1749	1.0839	0.7	79.433	8.9125	19.0
1.2023	1.0965	0.8	100.00	10.0000	20.0
1.2303	1.1092	0.9	158.49	12.589	22.0
1.2589	1.1220	1.0	251.19	15.849	24.0
1.3183	1.1482	1.2	398.11	19.953	26.0
1.3804	1.1749	1.4	630.96	25.119	28.0
1.4454	1.2023	1.6	1000.0	31.623	30.0
1.5136	1.2303	1.8	1584.9	39.811	32.0
1.5849	1.2589	2.0	2511.9	50.119	34.0
1.6595	1.2882	2.2	3981.1	63.096	36.0
1.7378	1.3183	2.4	6309.6	79.433	38.0
1.8197	1.3490	2.6	104	100.000	40.0
1.9055	1.3804	2.8	104 × 1.5849	125.89	42.0
1.9953	1.4125	3.0	104 × 2.5119	158.49	44.0
2.2387	1.4962	3.5	$10^4 \times 3.9811$	199.53	46.0
2.5119	1.5849	4.0	$10^5 \times 6.3096$	251.19	48.0
2.8184	1.6788	4.5	10^6	316.23	50.0
3.1623	1.7783	5.0	$10^6 \times 1.5849$	398.11	52.0
3.5481	1.8836	5.5	10 ⁶ × 2.5119	501.19	54.0
3.9811	1.9953	6.0	10 ⁶ × 3.9811	630.96	56.0
5.0119	2.2387	7.0	10 ⁶ × 6.3096	794.33	58.0
6.3096	2.5119	8.0	10 ⁶	1,000.00	60.0
7.9433	2.8184	9.0	10 ⁷	3,162.3	70.0
10.0000	3.1623	10.0	10 ⁸	10,000.0	80.0
12.589	3.5481	11.0	10 ⁹	31,623	90.0
15.849	3.9811	12.0	10 ¹⁰	100,000	100.0

To convert

Decides to nepers multiply by 0.1151
Nepers to decides multiply by 8.686
Where the power ratio is less than unity, it is usual to invert the fraction

and express the answer as a decibel loss.

Engineering and material data

Copper-wire table—standard annealed copper

American wire gauge (B & S)*

American wire gauge (b & 5)"										
no gauge	diam- eter, mlis	cross circular mils	section square inches	ohms per 1,000 ft at 20° C (68° F)	lb per 1,000 fr	ft per lb	fi per ohm at 20° C (68° F)	ohms per lib at 20° C (68° F)		
0000	460.0	211,600	0.1662	0.04901	640.5	1.561	20,400	0.00007652		
000	409.6	167,800	0.1318	0.06180	507.9	1.968	16,180	0.0001217		
00	364.8	133,100	0.1045	0.07793	402.8	2.482	12,830	0.0001935		
0	324.9	105,500	0.08289	0.09827	319.5	3.130	10,180	0.0003076		
1	289.3	83,690	0.06573	0.1239	253.3	3.947	8,070	0.0004891		
2	257.6	66,370	0.05213	0.1563	200.9	4.977	6,400	0.0007778		
3	229.4	52,640	0.04134	0.1970	159. 3	6.276	5,075	0.001237		
4	204.3	41,740	0.03278	0.2485	126.4	7.914	4,025	0.001966		
5	181.9	33,100	0.02600	0.3133	100.2	9.980	3,192	0.003127		
6	162.0	26,250	0.02062	0.3951	79.46	12.58	2,531	0.004972		
7	144.3	20,820	0.01635	0.4982	63.02	15.87	2,007	0.00790 5		
8	128.5	16,510	0.01297	0.6282	49.98	20.01	1,592	0.01257		
9	114,4	13,090	0.01028	0.7921	39.63	25.23	1,262	0.01999		
10	101.9	10,380	0.008155	0.9989	31.43	31.82	1,001	0.03178		
11	90.74	8,234	0.006467	1.260	24.92	40.12	794	0.05053		
12	80.81	6,530	0.005129	1.588	19.77	50.59	629.6	0.08035		
13	71.96	5,178	0.004067	2.003	15.68	63.80	499.3	0.1278		
14	64.08	4,107	0.003225	2.525	12.43	80.44	396.0	0.2032		
15	57.07	3,257	0.002558	3.184	9.858	101.4	314.0	0.3230		
16	50.82	2,583	0.002028	4.016	7.818	127.9	249.0	0.5136		
17	45.26	2,048	0.001609	5.064	6.200	161.3	197.5	0.8167		
18	40.30	1,624	0.001276	6.385	4.917	203.4	156.6	1.299		
19	35.89	1,288	0.001012	8.051	3.899	256.5	124.2	2.065		
20	31.96	1,022	0.0008023	10.15	3.092	323.4	98.50	3.283		
21	28.46	810.1	0.0006363	12.80	2.452	407.8	78.11	5,221		
22	25.35	642.4	0.0005046	16.14	1.945	514.2	61.95	8,301		
23	22.57	509.5	0.0004002	20.36	1.542	648.4	49.13	13,20		
24	20.10	404.0	0.0003173	25.67	1.223	81 <i>7.7</i>	38.96	20.99		
25	17.90	320.4	0.0002517	32.37	0.9699	1,031.0	30.90	33.37		
26	15.94	254.1	0.0001996	40.81	0.7692	1,300	24.50	53.06		
27	14.20	201.5	0.0001583	51.47	0.6100	1,639	19.43	84.3 7		
28	12.64	159.8	0.0001255	64.90	0.4837	2,067	15.41	134.2		
29	11.26	126. 7	0.00009953	81.83	0.3836	2,607	12.22	213.3		
30	10.03	100.5	0.00007894	103.2	0.3042	3,287	9.691	339.2		
31	8.928	79.70	0.00006260	130.1	0.2413	4,145	7.685	539.3		
32	7.950	63.21	0.00004964	164.1	0.1913	5,227	6.095	857.6		
33	7.080	50.13	0.00003937	206.9	0.1517	6,591	4.833	1,364		
34	6.305	39.75	0.00003122	260.9	0.1203	8,310	3.833	2,168		
35	5.615	31.52	0.00002476	329.0	0.09542	10,480	3.040	3,448		
36	5.000	25.00	0.00001964	414.8	0.07568	13,210	2.411	5,482		
37	4.453	19.83	0.00001557	523.1	0.06001	16,660	1.912	8,717		
38	3.965	15.72	0.00001235	659.6	0.04759	21,010	1.516	13,860		
39	3.531	12.47	0.000009793	831.8	0.03774	26,500	1.202	22,040		
40	3.145	9.888	0.000007766	1,049.0	0.02993	33,410	0.9534	35,040		

Temperature coefficient of resistance:

The resistance of a conductor at temperature t °C is given by

 $R_t = R_{20} [1 + c_{20} (t - 20)]$

where Rs is the resistance at 20° C and as is the temperature coefficient of resistance at 20° C. For copper, as = 0.00393. That is, the resistance of a copper conductor increases approximately 4/10 of 1 percent per degree centigrador rise in temperature.

* For additional data on wire, see pages 36, 37, 38, 60, and 126.

Copper-wire table—English and metric units†

	l	t !		English uni	hs		metric onits	;
Amer wire gauge AW G (B&S)	Bîrm wire gauge BWG	imperial or British std SWG (NBS)	diam in inches	weight lbs per wire mile	resistance ohms per wire mile 20° C (68° F)	diam in mm	weight kg per wire km	resistance ohms per wire km 20° C (68° F)
		_	.1968	618	1,415	5.0	174.0	.879
_	i _	_	.1940	600	1.458	4.928	169.1	.905
		6	.1920	589.2	1,485	4.875	166.2	.922
	: _	1	.1855	550	1.590	4,713	155.2	.987
	i —		.1819	528.9	1.654	4,620	149.1	1.028
•	7	ł	.1800	517.8	1.690	4.575	146.1	1.049
		[.1771	500	1,749	4.5	141.2	1.086
_		7	.1762	495.1	1.769	4.447	140.0	1.098
			.1679	450	1.945	4.260	127.1	1.208
		,					102.0	
	8		.1650	435.1 419.5	2.011 2.086	4.190 4.115	123.0 118.3	1,249 1,296
6	[8	.1620 .1600	409.2	2.139	4.062	115.3	1.328
	}	} ° ¦		·	i l			
_	—	l — i	.1582	400	2.187	4.018	113.0	1.358
_	-	. –	.1575	395.3	2.213	4.0	111.7	1.373
	9	1	.1480	350.1	2.500	3.760	98.85	1,552
7	ļ		.1443	332.7	2.630	3.665	93.78	1,634
		9	.1440	331.4	2.641	3.658	93.40	1.641
_	l	l _	.1378	302.5	2.892	3.5	85.30	1,795
_	[.1370	300	2.916	3.480	84.55	1,812
	10	į į	.1341	287.0	3.050	3.405	80.95	1.893
	Í	i	.1285	263.8	3.317	3.264	74.37	2.061
8		10	.1280	261.9	3.342	3.252	73.75	2.077
_	l _	1 .0	.1251	250	3.500	3.180	70.50	2.173
	l	l 1		_	l 1		40.05	0.440
_	i —	i — I	,1181	222.8 209.2	3.930 4.182	3.0 2.906	62.85 58.98	2.440 2.599
9			.1144 .1120	200.2	4.162	2.845	56.45	2.718
_	_							}
	12		.1090	189.9	4.609	2.768	53.50	2.862
		12	.1040	172.9	5.063	2.640 2.588	48.70 46.77	3.144 3.277
*10		l :	.1019	165.9	5.274			
_		1 — i	.0984	154.5	5.670	2.5	43.55	3.520
_	l —]	.0970	150	5.832	2.460	42.30	3.620
	*14		.0830	110.1	7.949	2.108	31.03	4.930
*12			.0808	104.4	8.386	2.053	29.42	5.211
]	14	.0801	102.3	8.556	2.037	28.82	5.315
_	_	l	.0788	99.10	8.830	2.0	27.93	5.480
*13	t	1	.0720	82.74	10.58	1.828	23.33	6.571
*14	•		.0641	65.63	13.33	1.628	18.50	8,285
*16			.0508	41.28	21.20	1.291	11.63	13.17
*10 *17	1	ì	.0453	32.74	26.74	1.150	9.23	16.61
* 18		1	.0403	25.98	33.71	1.024	7.32	20.95
* 19	Į.	1	.0359	20.58	42.51	.912	5,802	26.42
*22	I		.0253	10.27	85.24	.644	2.894	52.96
*24]	!	.0201	6.46	135.5	.511	1.820	84.21
*26	1	1	.0159	4.06	215.5	.405	1.145	133.9
*27		1	.0142	3.22	271.7	.361	.908	168.9
* 28		1	.0126	2.56	342.7	.321	.720	212.9
* When use	ed in cable,	weight and re	esistance of v	vire should be	increased ab	out 3% to al	low	

^{*}When used in cable, weight and resistance of wire should be increased about 3% to allow for increase due to twist.

† For additional data on wire, see pages 35, 37, 38, 60, and 126.

Solid copperweld wire—mechanical and electrical properties

sixe	diam					resistance breaking load, ohms/1000 ft at 68° F pounds			attenuation—db per mile*					characteristic		
AWG	Inch	circular mils	square Inch	per 1000	per mile	per pound	40%	30%	40% conduct	30%		cond	30%	cond	,	
		/KUS	III III	feet	IIII	positu	70 /0	30,0	COMMOCI	Colloct	dry	wet .	dry	wel	40%	30%
4 5 6 6 7 8 8 9 10 11 12 12 13 14 15 16 16 17 18 18 19 20 21 12 22 24 25 27 28 28 28 28 28 33 34 33 55 34 40 15 16 16 16 16 16 16 16 16 16 16 16 16 16	2043 1819 1829 1829 1925 1936 1943 1943 1957 1968 1979 1968 1972	41,740 33,100 26,259 20,820 16,510 13,090 18,234 1,000 8,234 1,000 13,09	.03778 .02578 .02502 .02502 .01535 .001627 .0015129 .004647 .003129 .004687 .007258 .007258 .007258 .007259 .0	115.8 91.86 91.86 97.285 37.77 22.85 36.81 36.83 36.81 22.85 71.40 9.038 7.167 4.507 3.285 2.285 2.285 1.783 1.414 1.121 0.876 0.357 0.299 0.139	611.6 485.6 384.6 384.6 384.6 395.0 171.8 171.8 171.8 172.1 172.6 172.1 172.6 173.8	8.63 10.89 13.73 17.31 21.83 27.52 34.70 43.76 85.19 89.75 119.6 127.9 27.8 35.28 444.8 550.9 707.3 891.9 1,125 1,418 1,788 2,255 1,418 1,410 1,	0.6337 0.7990 1.0083 1.2091 2.501 2.541 2.541 3.05 5.11 6.44 8.12 10.24 11.29 11.30 12.41 11.51 12.51 13.33 25.89 22.65 11.65 25.51 10.13 10.53 25.89 25.85 10.13 10.53 25.92 25.93 26.93	0.8447 1.065 1.343 1.693 1.213 2.213 2.213 2.213 2.213 3.296 4.81 10.83 11.62 11.72 12.37 24.52 45.40 6.81 17.22 17.21 17.21 17.21 17.21 17.21 17.21 18.8 6.7 11.8 6.8 11.8 11	3,541 2,798 2,433 2,013 1,849 401 400 400 259 185 185 185 185 185 185 185 185 185 185	3,794 3,250 2,260 2,260 1,201 975 530 440 330 200 100 1135 1135 1135 1135 1135 1140 125,4 20,4 32,1 40,4 32,1 32,1 32,1 32,1 32,1 32,1 32,1 32,1						

Note: Copperweld wire in sizes from No. 25 to No. 40 may be difficult to obtain at present due to a thortage of facilities for moting these smaller sizes.

**PD insulators, 12-inch Wire Spocing, 1000 cycles
for additional information on wire, see pages 43, 34, 38, 40, and 124.

Standard stranded copper conductors

American wire gauge

circular mils	size AWG	number of wires	individual Wire diam inches	cable diam inches	area square inches	weight lbs per 1000 fr	weight lbs per mile	*maximum resistance ohms/1000 ft at 20° C
					l		l	
211,600	4/0	19	.1055	.528	0.1662	653.3	3,450	0.05093
167,800	3/0	19	.0940	.470	0.1318	518.1	2,736	0.06422
133,100	2/0	19	.0837	.419	0.1045	410.9	2,170	0.08097
105,500	1/0	19	.0745	.373	0.08286	325.7	1,720	0.1022
83,690	1	19	.0664	.332	0.06573	258.4	1,364	0.1288
66,370	2 3	7	.0974	.292	0.05213	204.9	1,082	0.1624
52,640	3	7	.0867	.260	0.04134	162.5	858.0	0.2048
41,740	4	7	.0772	.232	0.03278	128.9	680.5	0.2582
33,100	5	7	.0688	.206	0.02600	102.2	539.6	0.3256
26,250	6	7	.0612	.184	0.02062	81.05	427.9	0.4105
20.820	Ιż	7	.0545	.164	0.01635	64.28	339.4	0.5176
16,510	l 8	7	.0486	.146	0.01297	50.98	269.1	0.6528
13,090	8 9	7	.0432	.130	0.01028	40.42	213.4	0.8233
10,380	10	7	.0385	.116	0.008152	32.05	169.2	1.038
6,530	12	7	.0305	.0915	0.005129	20.16	106.5	1.650
4,107	14	7	.0242	.0726	0.003226	12.68	66.95	2.624
2,583	16	7	.0192	.0576	0.002029	7.975	42.11	4.172
1,624	18	7	.0152	.0456	0.001275	5.014	26.47	6.636
1,022	20	7	.0121	.0363	0.008027	3.155	16.66	10.54

^{*} The resistance values in this table are trade maxima for soft or annealed copper wire and are higher than the average values for commercial cable. The following values for the conductivity and resistivity of copper at 20° centigrade were used:


Conductivity in terms of International Annealed Copper Standard

98.16%

891.58

Machine screw head styles

Method of length measurement

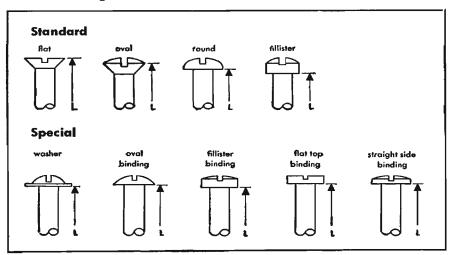

Resistivity in pounds per mile-ohm

The resistance of hard drawn copper is slightly greater than the values given, being about 2% to 3% greater for sizes from 4/0 to 20 AWG.

Standard machine screw data including hole sizes

	terew					head			f hex nut washer				clearar	ce drilP	top driitt			
size and	١.	depth		tor	ınd	flot	AUI	ster	across	dctoss	thick-	١.	l	Whick-				
no threads	ed	of thread	minor diam	min od	max height	max od	min od	max height	flai	corner	Dest	od	id	ness	ne	diom	no	diam
2-56	.086	.0116	.0628	.146	.070	.172	.124	.055	.187	.217	.062	<i>y</i> 4	.105	.020	42	.093	48	.076
3-48	.099	.0135	.0719	.169	.078	.199	,145	.063	.187	.217	.062	1/4	.105	.020	37	.104	44	.086
4-40	.112	.0162	.0795	.193	.086	.225	.166	.072	.250	.289	.078	%	.120	.025	31	.120	40	.098
5-40	.125	.0162	.0925	.217	.095	.252	.187	.081	.250	.289	.078	%	.140	.032	29	.136	36	.106
6 −32	.138	.0203	.0974	.240	,103	.279	.208	.089	.250 .312	.289 .361	.078 .079	% %	.150	.026 .032	27	.144	33	.113
8-32	.164	.0203	.1234	.287	.119	.332	.250	.106	.250 .375	.289 .433	.078 .125	% %	.170 .170	.032 .036	18	.169	28	.140
10-32	.190	.0203	.1494	.334	.136	.385	.292	.123	.312 .375	.361 ,433	.109 .125	1/4 1/2	.195 .195	.036 .040	9	.196	20	.161
12-24	.216	.0271	.1619	.382	.152	.438	.334	,141	,375 ,437	.433 .505	.125 .125	14 1/4	.228 .228	.060 .060	1	.228	15	.180
⅓ -20	.250	.0325	.185	.443	.174	.507	.389	.163	.437	.505	.125	%	.260	.040		17/4	6	.204
									.500	.577	.156 .125 .156	11/4	.260	.051				

All dimensions in inches.

Clearance drill sizes are practical values for use of the engineer or technician doing his own shop work.

Tap drill sizes are for use in hand tapping material such as brass or soft steel. For copper, aluminum, or Norway fron, the drill should be a size or two larger diameter than shown. For case it is no and bakelite, or for very thin material, the top drill should be a size or two smaller diameter than shown.

Insulating materials

	1			•	electrical p	ropertles	•		physical proj	perfles
material	diel	ectric cons	Sant	F	wer fact	D?	dielectric	resistivity	thormai	softening
	60∼	10⁴∼	10⁰~	60∼	10५~	10⁴~	strength kv/mm†	ohms—cm 25° C	expansion per ° C	point
Anlline Formaldehyde Resin	3.6	3.5	3.4	.003	.007	.004	16~25	>1012	5.4 × 10-6	260° F
Caseln		6.2			.052		16-28	Poor	5 X 10~5	200° F
Cellulose Acetote (plastic)	4.6	3.9	3.4	.007	.039	.039	10-14	1010	615 X 10-6	100190° F
Cellulose Acetobutyrate	3.6	3.2	3.0	.004	.017	.019	10-16	1010	11-17 X 10-6	110-180° F
Ebonite	3.0	2.8	2.8	.008	300,	.004	18	2 × 1015	7 X 10 ⁻¹	140° F
Ethyl Callulose	4.0	3.4	3.2	.005	.028	.024	16~28	1014	3.4 × 10⁻⁴	120° F
Glass, Carning 707	4.0	4.0	4.0	.0006	.0008	.0012	1	1.5 X 10 ¹¹ of 250° C	31 X 10-7	1400° F
Gloss, Corning 774	5.6	5.2	5.0	.0136	.0048	.008		1.4 × 10 ^a of 250° C	33 × 10-7	1500° F
Glass, Corning 790	3.9	3.9	3.9	.0006	.0006	.0006		5.2 X 10 ^a at 250° C	8 X 10-7	2600° F
Glass, Carning 7052	5.2	5.1	5.1	.008	.0024	.0036	i	1 X 10 ^a at 250° C	47 X 10-7	1300° F
Helowax	3.8	3.7	3,4	.002	.0014	-105		1017-1014		190° F
Isokuntite	1	6.0			.0018					
Melamine Formaldehyde Resin	7.5	4.5	4.5	.08	.08	.03	18		3.5 × 10⁻⁵	260° F
Methyl Methacrylate—a Lucite HMT19	3.3	2.6	2.6	.066	.015	.007	16	1018	11-14 X 10 ⁻³	160° F
b Plexialas	3.5	2.6	2.6	.064	,015	.007	1 16	1015	8 X 10-s	160° F
Mica	5.45	5.4	5.4	.005	.0003	.0003		5 × 10 ¹⁴		100
Mycalex 364	7.1	7.0	7.0	.0064	.0021	.0022	14	• /	8–9 X 10 ⁻⁴	660° F
Nylon FM-1	3.6	3.6	3.6	.018	.020	.018	12	1Cra	5.7 × 10-4	160° F
Poroffin Oil	2.2	2.2	2.2	.0001	.0001	.0004	i is I		7.1 × 10⁻⁴	liquid
Petroleum Wax (Paraffin Wax)	2.25	2.25	2.25	.0002	.0002	.0002	8-12	1010	7.1 // 10	M.P. 132° F
Phenol Formaldehyde Resins							•			M
a general purpose	5.5	4.5	4.0	.018	.014	.014	l 14 l	1011	3-4 × 10⁻⁵	275° F
b. mineral filled	4.6	4.4	4.3	.024	.006	.012	20	,,	377.10	212° F
c. cost	8.0	8.0	8.0	.05	.05	.08	iŏ		7.5-15 × 10 ⁻¹	140° F
Phonol Furfurol Resins	7.0	5.0	4.0	.20	.04	.05	l '*		1.0-10 X 10 -	1401
Polyethylene	2.25	2.25	2.25	.0003	.0003	.0003	40	>1014	Vories	220° F
Polytschulylene MW 100,000	2.20	2.22	2.22	.0003	.0003	.0004	™	1016	101163	50° F
Polystyrene MW 80,000	2.55	2.53	2.52	.0002	.0002	.0003	20-30	1017	7 × 10 ⁻⁴	175° F
Polyvinyi Carbazole	2.95	2.95	2.95	.0017	.0002	.0006	31-40	10.	4.5-5.5 × 10-6	300° F
Polyvinyl Chlor-Acetate	3.2	2.9	2.8	.009	.014	.000	31-40		4.5-5.5 × 10 *	180° F
Polyvinyl Chloride	3.2	2.9	2.9	.012	.D16	.008			l	180° F
Polyvinylidine Chloride-Saran	4.5	3.0	2.8	.03	.046	.014	15	1016	1.40 >4.10=4	175° F
Quartz (fused)	3.9	3.8	3.8	.0009	.0002	.0002	ا ۵۵ ا	1000	1.58 × 10 ⁻⁴	
Shellac	3.9	3.5	3,1	.006	.031	.030	~	1014	5.7 × 10-7	3000° F
Styralov 22	2.4	2.4	2.4	0100	.0012	.000	30	10%	10 3/ 100	150° F
	2.9	2.75	2.73	.003	.0002	.0002	🕉	(One	1.8 X 107	
Styramic	2.64	2.73	2.73		.0002				7 × 10 ⁻⁴	175° F
Styramic HT				.0002		.0002	ا بر ا	1015		250° F
Urea Formaldehyde Resins	6.6	5.6	5.0	.032	.028	.05	15	1078	2.6 X 10⁻⁵	260° F
Wood-African Mahagany (dry)	2.4	2.1	2.1	.01	Δ3	.04			l .	
Balsa (dry)	1.1.4	1,4	1.3	.048	.012	.013			ı	I

^{*} Values given are average for the materials listed. †To convert Kilovolts per millimeter to valts per mil, multiply by 25.4

Plastics: trade names

trade name	composition	trade name	composition
Acryloid	Methacrylate Resin	Indur	Phenol Formaldehyde
Alvar	Polyvinyl Acetal	Kodapak	Cellulose Acetate
Amerith	Cellulose Nitrate	Kodapak II	Cellulose Acetobutyrate
Ameripol	Butadiene Copolymer	Koroseal	Modified Polyvinyl Chloride
Ameroid	Casein	Lectrofilm	Polyvinyl Carbazole (con-
Bakelit e	Phenol Formaldehyde		denser material; mica sub-
Bakelit e	Urea Formaldehyde		stitute)
Bakelite	Cellulose Acetate	Loalin	Polystyrene
Bakelite	Polystyrene	Lucite	Methyl Methacrylate Resin
Beckamin e	Urea Formaldehyde Resins	Lumarith	Cellulose Acetate
Beetle	Urea Formaldehyde	Lumarith X	Cellulose Acetate
Butacite .	Polyvinyl Butyral	Lustron	Polystyrene
Butvar	Polyvinyl Butyral	Luvican	Polyvinyl Carbazole
Cardolite	Phenoi-aldehyde (cashew nut	Makalot	Phenol Formaldehyde
	derivative)	Marblette	Phenoi Formaldehyde (cast)
Cerex	Styrene Copolymer	Marbon B	Cyclized Rubber
Catalin	Phenol Formaldehyde (cast)	Marbon C	Rubber Hydrochloride
Cellophane	Regenerated Cellulose Film	Melmac	Melamine Formaldehyde
Celluloid	Cellulose Nitrate	Methocel	Methyl Cellulose
Cibanite	Aniline Formaldehyde	Micabond	Glycerol Phthalic Anhydride,
Crystalite	Acrylate and Methacrylate		Mica
Cumar	Resin	Micarta	Phenol Formaidehyde (lami-
	Cumarone-indene Resin	M	nation)
Dilectene 100	Aniline Formaldehyde Syn-	Monsanto	Cellulose Nitrate
Dilecto	thetic Resin	Monsanto Monsanto	Polyvinyl Acetals Cellulose Acetate
Dilecto	Urea Formaldehyde (phenol formaldehyde)	Monsanto	Phenol Formaldehyde
Dilecto UF	Urea Formaldehyde	Mycalex	Mica Bonded Glass
Distrene	Polystyrene	Neoprene	Chloroprene Synthetic Rub-
Durez	Phenol Formaldehyde		ber
Durite	Phenol Formaldehyde	Nevidene	Cumarone-indene
Durite	Phenot Furfural	Nitron	Cellulose Nitrate
Erinofort	Cellulose Acetate	Nixonite	Cellulose Acetate
Erinoid	Casein	Nixonoid	Cellulose Nitrate
Ethocel	Ethyl Cellulose	Nylon	Synthetic Polyamides and
Ethocel PG	Ethyl Cellulose	,	Super Polyamides
Ethofoil	Ethyl Cellulose	Nypene	Polyterpene Resins
Ethomeit	Ethyl Cellulose (hot pouring	Opalon	Phenol Formaldehyde
Ethomulsion	compound) Ethyl Cellulose (lacquer	Panelyte	Phenol Formaldehyde (lami- nate)
	emulsion)	Panelyte	Phenol Formaldehyde
Fibestos	Cellulose Acetate	Parlon	Chlorinated Rubber
Flamenol	Vinyl Chloride (plasticized)	Perspex	Methyl Methacrylic Ester
Formica	Phenol Formaldehyde (lami-	Plaskon	Urea Formaldehyde
	nation)	Plastacele	Cellulose Acetate
Formvar	Polyvinyl Formal	Plexiglas	Methyl Methacrylate
Galalith	Casein	Plexiglas	Acrylate and Methacrylate
Gelva	Polyvinyl Acetate		Resin
Gemstone	Phenol Formaldehyde	Plaskon	Urea Formaldehyde
Geon	Polyvinyl Chloride	Plastacel e	Cellulose Acetate
Glyptal	Glycerol-phthalic Anhydride	Pliofilm	Rubber Hydrochloride
Haveg	Phenol Formaldehyde Asbes-	Pfioform	Rubber Derivative
	tos	Pliolite	Rubber Derivative
Hercose AP	Cellulose Acetate Propionate	Polyfibre	Polystyrene
Heresite	Phenol Formaldehyde	Polythene	Polyethylene

Plastics: trade names continued


trade name	composition	trade name	composition
Protectoid	Cellulose Acetate	Styron	Polystyrene
Prystal	Phenol Formaldehyde	Super Styrex	Polystyrene
Pyralin	Cellulose Nitrate	Synthane	Phenol Formaldehyde
PVA	Polyvinyl Alcohol	Tenite	Cellulose Acetate
Pyralin	Cellulose Nitrate	Tenite II	Cellulose Acetobutyrate
Resinox	Phenol Formaldehyde	Textolite	Various
Resoglaz	Polystyrene	Textolite 1421	Cross-linked Polystyrene
Rhodolene M	Polystyrene	Tornesit	Rubber Derivative
Rhodoid	Cellulose Acetate	Trolitul	Polystyrene
Ronilla L	Polystyrene	Vec	Polyvinylidene Chloride
Ronilla M	Polystyrene	Victron	Polystyrene
Saflex	Polyvinyl Butyral	Vinylite A	Polyvinyl Acetate
Saran	Polyvinylidene Chloride	Vinylite Q	Polyvinyl Chloride
Styraflex	Polystyrene	Vinylite V	Vinyl Chloride-Acetate Co-
Styramic	Polystyrene-Chlorinated Di-		polymer
•	phenyl	Vinylite X	Polyvinyl Butyral
Styramic HT	Polydichlorstyrene	•	

Wind velocities and pressures

indicated velocities miles per hour* Vi	actual velocities miles per hour V_{lpha}	cylindrical surfaces pressure lbs per sq ft projected areas P = 0.0025Va ²	flat surfaces pressure lbs per square foot $P = 0.0042Va^2$
10	9.6	0.23	0.4
20	17.8	0.8	1.3
30	25.7	1.7	2.8
40	33.3	2.8	4.7
50	40,8	4.2	7.0
60	48.0	5.8	9.7
70	55,2	7.6	12.8
80	62.2	9.7	16.2
90	69.2	12.0	20.1
100	76.2	14.5	24.3
110	83.2	17.3	29.1
120	90,2	20.3	34.2
125	93.7	21.9	36.9
130	97.2	23.6	39.7
140	104.2	27.2	45.6
150	111.2	30.9	51.9
160	118.2	34.9	58.6
170	125.2	39.2	65.7
175	128.7	41.4	69.5
180	132.2	43.7	73.5
190	139.2	48.5	81.5
200	146.2	53.5	89.8

 $[\]mbox{\$}$ As measured with a cup anemometer, these being the average maximum for a period of five minutes.

Temperature chart of heated metals

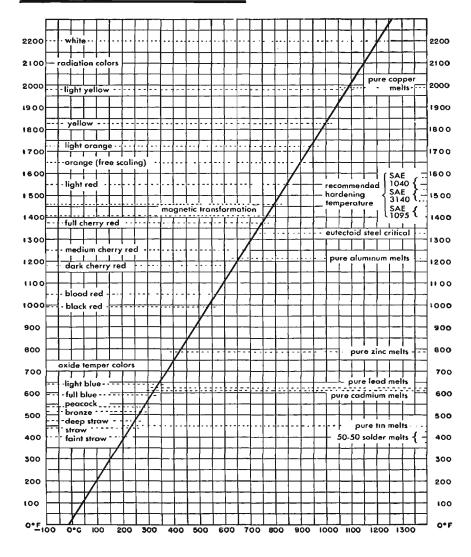

Physical constants of various metals and alloys*

Advance (55 Cu 45 Ni) Aluminum Antimony Arsenic Bismuth Brass (66 Cu 34 Zn) Cadmium Chromax (15 Cr 35 Ni) balance Fe) See Co 4.4 24.21 19.33 89.8 69.8 3.9 4.4 Chromax (15 Cr 35 Ni) balance Fe) 58.0	.004 .0036 .0042 .004 .002 .0038	2.7 6.6 5.73 9.8 8.47 8.64	2.03 0.187 0.0755 1.2 0.92	660 630 sublimes 270 920
Aluminum 1.64 Antimony 24.21 Arsenic 19.33 Bismuth 69.8 Brass (66 Cu 34 Zn) 3.9 Cadmium 4.4 Chromax (15 Cr 35 Ni	.004 .0036 .0042 .004 .002 .0038	6.6 5.73 9.8 8.47 8.64	0.187 0.0755 1.2	630 sublimes 270 920
Antimony 24.21 Arsenic 19.33 Bismuth 69.8 Brass (66 Cu 34 Zn) 3.9 Cadmium 4.4 Chromax (15 Cr 35 Ni	.0036 .0042 .004 .002 .0038	6.6 5.73 9.8 8.47 8.64	0.187 0.0755 1.2	630 sublimes 270 920
Arsenic 19.33 Bismuth 69.8 Brass (66 Cu 34 Zn) 3.9 Cadmium 4.4 Chromax (15 Cr 35 Ni	.0042 .004 .002 .0038	5.73 9.8 8.47 8.64	 0.0755 1.2	sublimes 270 920
Bismuth 69.8 Brass (66 Cu 34 Zn) 3.9 Cadmium 4.4 Chromax (15 Cr 35 Ni	.004 .002 .0038	9.8 8.47 8.64	1.2	270 920
Brass (66 Cu 34 Zn) 3.9 Cadmium 4.4 Chromax (15 Cr 35 Ni	.002 .0038 .00031	8.47 8.64	1.2	920
Cadmium 4.4 Chromax (15 Cr 35 Ni	.0038	8.64		
Chromax [15 Cr 35 Ni	.00031		0.92	
		7.95		321
		7.95		
	.0033	_	0.130	1380
Cobalt 5.6		8.71	_	1480
	±.0002	8.9	0.218	1210
Copper—annealed 1.00	.00393	8.89	3.88	1083
hard drawn 1.03	.00382	8.89	_	1083
Eureka (55 Cu 45 Ni) see Co	nstantan			
Gas carbon 2900	0005	_	_	3500
Gold 1.416	.0034	19.32	0.296	1063
Ideal (55 Cu 45 Ni) see Co	nstantan			
Iron, pure 5.6	0052006,2	7.8	0.67	1535
Kovar A (29 Ni 17 Co	,			
0.3 Mn balance Fe) 28.4		8.2	0.193	1450
lead 12.78	.0042	11.37	0.344	327
Magnesium 2.67	.004	1.74	1.58	651
Manganin (84 Cu 12 Mn				
	±.00002	8.5	0.63	910
Mercury 55.6	.00089	13.55	0.063	38.87
Molybdenum, drawn 3.3	.0045	10.2	1.46	2630
Monel metal (67 Ni 30 Cu	.0010	10.2		2000
1.4 Fe 1 Mn) 27.8	.002	8.8	0.25	1300-1350
Nichrome I (65 Ni 12 Cr	.002	0.0	0.20	1500 1500
23 Fe) 65.0	.00017	8.25	0.132	1350
Nickel 5.05	.0047	8.85	0.132	1452
Nickel silver (64 Cu	.0047	0.00	0.0	1432
	.00026	8.72	0.33	1110
	.00026		0.33	
Palladium 6.2	.0036	12.16	0.7	1557
Phosphor-bronze (4 Sn 0.5 P balance Cu) 5.45		8.9	0.82	1050
				1050
Platinum 6.16	.0038	21.4	0.695	1771
Silver 9.5	.004	10.5	4.19	960.5
Steel, manganese (13 Mn		7.01		
1 C 86 Fe) 41.1	-	7. 81	0.113	1 510
Steel, SAE 1045 (0.4-0.5				
C balance Fe) 7.6-12.7	_	7.8	0.59	1480
Steel, 18-8 stainless (0.1 C 18 Cr 8 Ni				
balance Fe) 52.8	_	7.9	0.163	1410
Tantalum 9.0	.0033	16.6	0.545	2850
Tin 6.7	.0042	7.3	0.64	231.9
Tophet A (80 Ni 20 Cr) 62.5	.0207	8.4	0.136	1400
Tungsten 3.25	.0045	19.2	1.6	3370
Zinc 3.4	.0037	7.14	1.12	419
Zirconium 2.38	.0044	6.4		1860

^{*} See following page.

Physical constants of various metals and alloys continued

Definitions of physical constants in preceding table

The preceding table of relative resistances gives the ratio of the resistance of any material to the resistance of a piece of annealed copper of identical physical dimensions and temperature.

1. The resistance of any substance of uniform cross-section is proportional to the length and inversely proportional to the cross-sectioned area.

$$R = \frac{\rho L}{A}$$
, where $\rho =$ resistivity, the proportionality constant,

L = length, A = cross-sectional area, R = resistance in ohms.

If L and A are measured in centimeters, ho is in ohm-centimeters.

If L is measured in feet, and A in circular mils, ρ is in ohm-circular mils per foot. Relative resistance = ρ divided by the resistivity of copper (1.7241 \times 10⁻⁶ ohm-cm).

2. The temperature coefficient of resistivity gives the ratio of the change in resistivity due to a change in temperature of 1° C relative to the resistivity at 20° C. The dimensions of this quantity are ohms per $^{\circ}$ C per ohm or $1/^{\circ}$ C.

The resistance at any temperature is:

 $R = R_0$ (1 + αT), R_0 = resistance at 0° in ohms, T = temperature in degrees centigrade, α = temperature coefficient of resistivity 1/° C.

3. The specific gravity of a substance is defined as the ratio of the weight of a given volume of the substance to the weight of an equal volume of water.

In the cgs system, the specific gravity of a substance is exactly equal to the weight in grams of one cubic centimeter of the substance.

4. Coefficient of thermal conductivity is defined as the time rate of heat transfer through unit thickness, across unit area, for a unit difference in temperature. Expressing rate of heat transfer in watts, the coefficient of thermal conductivity

$$K = \frac{WL}{A\Delta T}$$

W = watts, L = thickness in cm, A = area in sq cm, $\Delta T = \text{temperature}$ in °C.

5. Specific heat is defined as the number of calories required to heat one gram of a substance one degree Centigrade.

 $H = \text{ms } \Delta T$ or change in heat m = mass in grams $\Delta T = \text{temperature change °C}$ s = specific heat in cal/gm/°C


Thermocouples and their characteristics

		3	-
- 7	÷	Ť	5
•	-	•	-

lype	copper/	'constantan	iron/co	nstantan	chromel/	constantan	ch	romel/alumel		ım/platinum lium (10)	platinum/j rhodivm		carbon car	/sliicon oide
Composition, percent	100Cu 99.9Cu	54Cu 46Ni 55Cu 45Ni 60Cu 40Ni		55Cu 44Ni .5Mn+Fe, Si		55Cu 45Ni		9Cr 97Ni 3A!+Si r 94Ni 2A! ISi 2.5Mn 0.5Fe	Pt	90Pt 10Rh	Pt	87Pt 13Rh	С	SIC
Range of application, ° C	-250 to	+600	-200 to	+1050	0 to 1100		0 to 1100		0 to 15	50			to 2000	
Resistivity, micro-ohm-C.M.	1.75	49	10	49	70	49	70	29,4	10	21				
Temperature coefficient of resistivity, °C	.0039	.00001	.005	.00001	.00035	.0002	.00035	,000125	.0030	.0018				
Melting temperature, °C	1065	1190	1535	1190	1400	1190	1400	1430	1755	1700			3000	2700
EMF in av reference junc- tion at 0° C	100° C 200 300	4.24mv 9.06 14.42	100° C 200 400 600 800 1000	5.28mv 10.78 21.82 33.16 45.48 58.16	100° C 200 400 600	6.3mv 13.3 28.5 44.3	100° C 200 400 600 800 1000 1200	4.1 my 8.13 16.39 24.90 33.31 41.31 48.85 55.81	100° C 200 400 600 800 1000 1200 1400 1600	0.643my 1.436 3.251 5.222 7.330 9.569 11.924 14.312 16.674	100° C 200 400 600 830 1000 1200 1400	0.646mv 1.464 3.398 5.561 7.927 10.470 13.181 15.940 18.680	1210° C 1300 1360 1450	353.6m 385.2 403.2 424.9
Influence of temperature and gas atmosphere	and alten 400° C du 600° due wire. Ni Cu tube g tion, in a ing gas. tion of colibratio Resistance atm. good to redi good. Re	atlon above e Cu, above constantan	ducing of have little accuracy in dry a Resistance tion good Resistance ing a good, Proxygen,	atmosphere e effect on Best used itmosphere e to oxida- to 400° C. a to reduc- atmosphere otect from	sulphurous Resistance tlon good to reduct	atmosphere, to oxido Resistance ing atmos-	phere ver reducing Affected	e to exidizing atmost y good. Resistance to atmosphere poor. by sulphur, reducing urous gas, SO2 and	ing atm good. reducing poor. S chemico As, Si, I ducing ! H ₂ S, Si rodes 1000°.	osphere very Resistance to a atmosphere			Used as ment, sheath inert.	tube ele Carbor chemically
Particular applications	dustrial, in bustion e		dustrial. nealing, b tube still	Steel an- coiler flues, s. Used in or neutral			Industrial.	oxidizing atmosphere. Ceramic kilns, tube ctric furnoces.	Internati ard 630	ional Stand- to 1065° C.	Similar to Pt but has high	eremf.	Steel fur ladle tem Laborato urements.	eratures.

Thermocouples and their characteristics continued

Characteristics of typical thermocouples

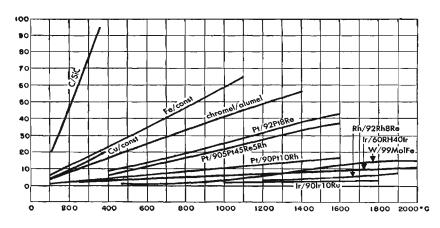




Compiled from "Temperature Measurement and Control" by R. L. Weber, pages 68-71.

Melting points of solder

pure	alloys	melting	g points
percent tin	percent lead	degrees centigrade	degrees fahrenheit
100		232	450
90	10	213	415
80	20	196	385
70	30	186	367
65	35	181	358
60	40	188	370
50	50	212	414
40	60	238	460
30	70	257	496
20	80	290	554
10	90	302	576
	100	327	620

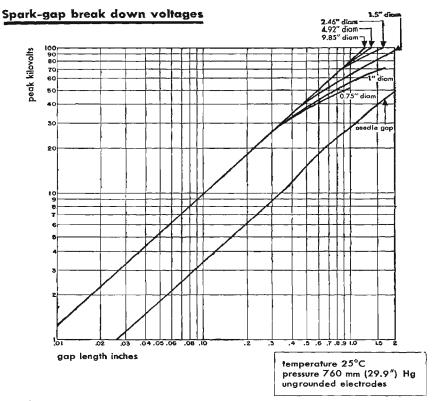

Data for a voltage which is continuous or at a frequency low enough to permit complete deionization between cycles, between needle points or clean, smooth spherical surfaces in dustfree dry air. The following multiplying factors apply for atmospheric conditions other than those stated above:

	essure			tempera	iture ° C		
" " Hg	mm Hg	<u> </u>	-20	0	20	40	60
			}	1			
5	127	0.26	0.24	0.23	0.21	0.20	0.19
10	254	0.47	0.44	0.42	0.39	0.37	0.34
15	381	0.68	0.64	0.60	0.56	0.53	0.50
20	508	0.87	0.82	0.77	0.72	0.68	0.64
25	635	1.07	0.99	0.93	0.87	0.82	0.77
30	762	1.25	1.17	1.10	1.03	0.97	0.91
)	ļ	1		1
35	889	1.43	1.34	1.26	1.19	1.12	1.05
40	1016	1.61	1.51	1.42	1.33	1.25	1.17
45	1143	1.79	1.68	1.58	1.49	1.40	1.31
50	1270	1.96	1.84	1.73	1.63	1.53	1.44
55	1397	2.13	2.01	1.89	1.78	1.67	1.57
60	1524	2.30	2.17	2.04	1.92	1.80	1.69

head of fall	I	discharge in US gallons per minute										
in feet	1/2"	%"	1′	1%"	11/4"	2'	21/2"	3'	31/2"	[4 ^t]	5*	6.
1	.19	.54	1,11	1.96	3.09	6.34	11.07	17.41	25.58	35,79	62.57	98.72
2	.28	.77	1.59	2.76	4.36	8.96	15.61	24.62	36.15	50.56	88.39	139.31
4	.40	1.09	2.25	3.92	6,17	12.73	22.10	34.95	51.28	71.58	124.90	196.54
6	.48	1,33	2.75	4.78	7.55	15.49	27.02	42.63	62.69	87.47	182.52	241.39
9	.59	1.63	3.36	5.86	9.26	19.09	33.27	52.36	76.98	107.48	187.35	295.43
12	.68	1,89	3.90	6.77	10.69	21.98	39.43	60.53	86.87	123.70	216.17	342.27
14	.79	2.17	4.48	7.82	12.37	25.34	44.31	69.77	102.56	142.91	249.80	395.11
20 24 30 40	.89	2.44	5.02	8.74	13.81	28.34	49.48	77.94	114.57	159.73	279.82	440.74
25	.98	2.73	5.61.	9.78	15.60	31.70	55.36	87,19	127.30	178.94	312.24	493.59
30	1.08	2.98	6.14	10.71	16.93	34.59	60.65	95.47	139.31	195,75	342.27	540.42
46	1.25	3.46	7.10	12.37	19.58	40.23	70.01	110.49	162.13	225.78	395.11	624.49
50	1.39	3.86	7.94	13.81	21.86	44.92	73.30	122.50	180.14	252.20	441.95	697. 75
75	1.81	4.72	9.73	16.93	26.78	54,88	95.96	150.12	220.97	209.84	541.62	855.07
100	1.98	5.46	11.23	19.58	30.81	63.41	110.72	174.14	255.80	357.88	625.69	987,17
150	2.44	6.71	13.81	23.90	37.83	77.94	139.19	213.77	314.65	439.54	766.00	1,214.15
200	2.80 3.13	7.71 8.65	15.85 17.77	27.62 30.81	43.59 48.88	89.59	156.12 175.34	246.19 276.22	361.48 404.72	505.60	883.89	1,394.29
250 50 9	4.43	12.25	25.10			100.52				865.64	989.57	1,564.82
500	1 4,43	14.25	23,10	43.71	69.05	141.71	247.39	390.31	571.65	501.03	1,397.89	2,209.73

Discharge in gallons per minute through 1000 ft. pipe line of V_2 " to δ " bore with average number of bends and fittings. For other pipe langths see Table II.

Table II

Length in feet	50	100	150	200	300	400	500	750	1,000	1,250	1,500
Feetor	4.47	3.10	2.58	2.237	1.827	1.580	1.414	1.154	1.0	0.895	0.617
Length in feet	1,750	2,000	2,500	3,000	4,000	5,000	7,500	10,000	5 ml.	10 mi.	50 mi,
Factor	0.756	0.707	0.633	0.577	0.500	0,447	0.365	0.316	0.195	0.138	0.0616

Meltiplication factor to be applied to Table I for pipe lengths other than 1000 ft. Exemple: Required—approximate discharge of a line of piping 4" bore, 5000 feet long, under 30 foat head.

Approximate discharge for the 1000 foot line from Table I = 195.75 gollons per minute. Factor from Table II = 0.447 ... Approximate discharge = 195.75 × 0.447 = 87.5

Materials and finishes for tropical and marine use

Ordinary finishing of equipment fails in meeting satisfactorily conditions encountered in tropical and marine use. Under these conditions corrosive influences are greatly aggravated by prevailing higher relative humidities, and temperature cycling causes alternate condensation on, and evaporation of moisture from, finished surfaces. Useful equipment life under adverse atmospheric influences depends largely on proper choice of base materials and finishes applied. Especially important in tropical and marine applications is avoidance of electrical contact between dissimilar metals.

Dissimilar metals, widely separated in the galvanic series, should not be bolted, riveted, etc., without separation by insulating material at the faying surfaces. The only exception occurs when both surfaces have been coated with the same protective metal, e.g., electroplating, hot dipping, galvanizing, etc.

In addition to choice of deterioration-resistant materials, consideration must be given to weight, need for a conductive surface, availability of ovens, appearance, etc.

A-order of preference:

Base materials

- 1 Brass
- 2. Nickel silver
- 3. Phosphor-bronze
- 4. Monel
- 5. Stainless steel

- 6. Aluminum, anodized
- 7. Steel, zinc phosphated
- 8. Steel, cadmium phosphated
- 9. Steel, phosphated

Finishes

- 1. Baked paint
- 2. Force dried paint
- 3. Air dried paint (pigmentless paint, e.g., varnish)

B—order of preference: (if A is impracticable)

Base materials

- 1. Copper
- 2. Steel

Finishes

- 1. Copper—nickel—chromium
- 2. Copper—nickel—oxide
- 3. Copper-nickel
- 4. Zinc, lacquered

- 5. Cadmium, lacquered
- 6. Zinc, phosphated
- 7. Cadmium, phosphated

Materials and finishes for tropical and marine use continued

Aluminum should always be anodized. Aluminum, steel, zinc, and cadmium should never be used bare.

Electrical contact surfaces should be given above finish B-1 or 3, and, in addition, they should be silver plated.

Variable capacitor plates should be silver plated.

All electrical circuit elements and uncoated metallic surfaces (except electrical contact surfaces) inside of cabinets should receive a coat of fungicidal moisture repellant varnish or lacquer.

Wood parts should receive:

- 1. Dip coat of fungicidal water repellant sealer.
- 2. One coat of refinishing primer.
- 3. Suitable topcoat.

Torque and horsepower

Torque varies directly with power and inversely with rotating speed of the shaft, or

$$T = \frac{KP}{N}$$

where T = torque in inch-pounds, P = hp, N = rpm, K (constant) = 63,000. **Example 1:** For a two-horsepower motor rotating at 1800 rpm,

$$T = \frac{63,000 \times 2}{1800} = 70$$
 inch-pounds.

If the shaft is 1 inch in diameter, the force at its periphery

$$F = \frac{T}{\text{Radius}} = \frac{70 \text{ inch-pounds}}{0.5} = 140 \text{ pounds}$$

Example 2: If 150 inch-pounds torque are required at 1200 rpm

$$150 = \frac{63,000 \text{ hp}}{1200}$$
 hp = $\frac{150 \times 1200}{63,000} = 2.86 \text{ pounds}$

Audio and radio design

Resistors and capacitors


Color code	1		toler	ance %	voitage rating	characteristic AWS and
color	significant figure	decimal multiplier	RMA 1938 std	and AWS	RMA 1938 std†	JAN mica capacitors
Black	0	1		±20%M		Α
Brown	1	10	1		100	В
Red	2	100	2	±2%G	200	С
Orange	3	1,000	3	1	300	Ð
Yellow	4	10,000	4		400	E
Green	5	100,000	5		500	F
Blue	6	1,000,000	6		600	G
Violet	7	10,000,000	7	1	700	
Gray	8	100,000,000	8	Į.	800	
White	9	1,000,000,000	9		900	_
Gold	_	0.1	± 5	±5%J	1,000	_
Silver	_	0.01	± 10	±10%K	2,000	
No color	—	l —	<u>±</u> 20	'*	500	l —

^{*} Letter used to indicate tolerance in type designations.

Resistors, fixed composition

RMA Standard, American War Standard, and Joint Army-Navy Specifications for color coding of fixed composition resistors are identical in all respects.

The exterior body color of insulated axial-lead composition resistors is usually tan, but other colors, except black, are permitted. Non-insulated, axial-lead composition resistors have a black body color. Radial-lead composition resistors may have a body color representing the first significant figure of the resistance value.

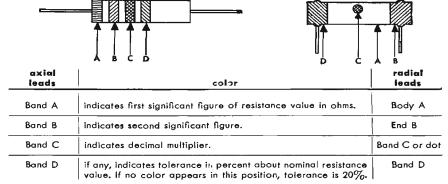

Note: Low-power insulated wire-wound resistors have axial leads and are color coded similar to the left-hand figure above except that band A is double width.

[†] Applies to capacitors only.

Standard color coding for resistors

preferre	preferred values of resistance (ohms)			rd resistance designation			preferred values of resistance lahmsi			old slandard resislance	resista	nce desig	Bation
±20% D = no col	±10% D = silver	±5% D ∞ gold	(ohms)	A	В	С	±20% D = no col	±10% D = silver	±5% D = gold	values (ohms)	A	В	С
			50	Green	Black	Black	1,000	1,000	1,000	1,000	Brown	Black	Red
		51		Green	Brown	Black	1 1		1,100	,,	Brown	Brown	Red
	56	56		Green	Biue	Black	1	1,200	1,200	1,200	Brown	Red	Red
		62	,	Blue	Red	Black			1,300		Brown	Orange	Red
68	68	68		Blue	Gray	Black	1,500	1,500	1500	1,500	Brown	Green	Red
		75	75	Violet	Green	Black			1,600	,	Brown	Blue	Red
	82	82		Gray	Red	Black		1,800	1,800		Brown	Gray	Red
		91		White	Brown .	Black		!	2,000	2,000	Red	Black	Red
100	100	100	100	Brown	Black	Brown	2,200	2,200	2,200	· ·	Red	Red	Red
		110		Brown	Brown	Brown			2,400		Red	Yellow	Red
	120	120		Brown	Red	Brown				2,500	Red	Green	Red
		130		Brown	Orange	Brown		2,700	2,700		Red	Violet	Red
150	150	150	150	Brown	Green	Brown	l		3,000	3,000	Orange	Block	Red
		160		Brown	Biue	Brown	3,300	3,300	3,300		Orange	Orange	Red
	081	130		Brown	Gray	Brown		ļ		3,500	Orange	Green	Red
		200 220	200	Red	Black	Brown			3,600		Orange	Blue	Red
220	226	220		Red	Red	Brown		3,900	3,900		Orange	White	Red
		240		Red	Yellow	Brown				4,000	Yellow	Black	Red
			250	Red	Green	Brown			4,300	l .	Yellow	Orange	Red
	270	270		Red	Violet	Brown	4,700	4,700	4,700	l	Yellow	Violet	Red
		300	300	Orange	Black	Brown				5,000	Green	Black	Red
330	330	330		Orange	Orange	Brown	1		5,100	[Green	Brown	Red
			350	Orange	Green	Brown		5,600	5,600		Green	Blue	Red
		360		Orange	Blue	Brown			6,200		Blue	Red	Red
	390	390		Orange	White	Brown	6,800	6,800	6,800		Blue	Gray	Red
			400	Yellow	Black	Brown			7,500	7,500	Violet	Green	Red
		430	i	Yellow	Oronge	Brown	1	8,200	B,200	ì	Gray	Red	Red
			450	Yellow	Green	Brown			9,100		White	Brown	Red
470	470	470		Yellow	Violet	Brown	10,000	10,000	10,000	10,000	Brown	Black	Oronge
			500	Green	Black	Brown	l l		11,000		Brown	Brown	Orange
		510		Graen	Brown	Brown		12,000	12,000	12,000	Brown	Red	Orange
	560	560		Green	Blue	Brown			13,000	l	Brown	Orange	Orange
		ا ا	600	Blue	Black	Brown	15,000	15,000	15,000	15,000	Brown	Green	Orange
		620		Blue	Red	Brown			16,000	l	Brown	Blue	Orange
680	680	680		Blue	Gray	Brown	1	18,000	18,000	l	Brown	Groy	Orange
		750 820	750	Violet	Green	Brown		****	20,000	20,000	Red	Black	Orange
	820	870		Gray	Red	Brown	22,000	22,000	22,000	l	Red	Red	Orange
		910		White	Brown	Brown			24,000	I	Red	Yellow	Orange

continued Standard color coding for resistors

preferred values of resistance (ohms)		sistance	old standard resistance	resistance designation			preferre	d values of re lohms)	elstonce	old standard resistance	resistance designation		
±20% D = no col	± 10% D = silver	±5% D≃gold	values (ahms)	_ A	В	С	±20% D = no cel	±10% D = sliver	±5% D ≈ gold	values (ohms)	A .	В	c
			25,000	Red	Green	Urange	1		510,000		Green	Brown	Yellow
	27,000	27,000	l	Red	Violet	Orange	ı	560,000	560,000	i	Green	Blue	Yellow
		30,000	30,000	Orange	Black	Orange				600,000	Blue	Błack	Yellow
33,000	33,000	33,000	l	Orange	Orange	Orange	l .	ŀ	620,000		Biye	Red	Yellow
		36,000	l	Orange	Blue	Orange	680,000	680,000	680,000	l	Blue	Gray	Yellow
	39,000	39,000	l	Orange	White	Oronge	ŀ		750,000	750,000	Violet	Green	Yellow
			40,000	Yellow	Błack	Orange		820,000	820,000		Gray	Red	Yellow
		43,000	l	Yellow	Orange	Oronge			910,000	l .	White	Brown	Yellow
47,000	47,000	47,000	l	Yellow	Violet	Orange	1.0 Meg	1.0 Meg	1.0 Meg	1.0 Meg	Brown	Black	Green
			50,000	Green	Black	Oronge			1.1 Meg		Brown	Brown	Green
		51,000	l	Green	Brown	Orange	l	1,2 Meg	1.2 Meg	ı	Brown	Red	Green
	56,000	56,000	l	Green	Blue	Orange			1.3 Meg		Brown	Orange	Green
			60,000	Blue	Black	Orange	1.5 Meg	1.5 Meg	1.5 Meg	1.5 Meg	Brown	Green	Green
15.000		62,000	l	Blue	Red	Oronge	L		1.6 Meg		Brown	Blue	Green
68,000	68,000	68,000		Blue	Gray	Orange	ſ	1.8 Meg	1.8 Meg		Brown	Gray	Green
		75,000	75,000	Violet	Green	Oronge			2.0 Meg	2.0 Meg	Red	Brack	Green
	82,000	82,000		Gray	Red	Orange	2.2 Meg	2.2 Meg	2.2 Meg		Red	Red	Green
100.000	100 000	91,000		White	Brown	Orange			2.4 Meg		Red	Yellow	Green
100,000	100,000	100 000	100,000	Brown	Black	Yellow	l	2.7 Meg	2.7 Meg		Red	Violet	Green
	120,000	110 000	****	Brown	Brown	Yellow	0014		3.0 Meg	3.0 Meg	Orange	Brack	Green
	120,000	130 000	120,000	Brown	Red	Yellow	3.3 Meg	3.2 Meg	3.3 Meg		Orange	Orange	Green
150,000	150,000	150 000	150,000	Brown	Orange Green	Yellow Yellow		3.9 Meg	3.6 Meg		Orange	B-ue	Green
130,000	130,000	160 000	150,000	Brown	Blue		l	3.7 Meg	3.9 Meg		Orange	Wnite	Стеел
	100.000	180 000				Yellow	l		40.11	4.0 Meg	Yellow	Brock	Green
	180,000	200 000	200,000	Brown Red	Gray Black	Yellow	4.7 Meg	47	4.3 Meg 4.7 Meg		Yellow	Orange	Green
220,000	220,000	220 000	200,000	Red	Red	Yellow	4./ Meg	4.7 Meg	4.7 Meg	5.0 Mea	Yellow	Violet	Green
220,000	220,000	240,000		Red	Yellow	Yellow	l		5,1 Meg	o.u meg	Green	Black Brown	Green
		240,000	250,000	Red	Green	Yellow	l	5.6 Meg	5.6 Meg	J	Green Green	Blue	Green
	270,000	270 000	230,000	Red	Violet	Yellow	l	3.0 Meg	3.6 Meg	6,0 Meg		Black	Green
	20,000	300 000	300,000	Oronge	Błack	Yellow			6.2 Meg	o,u meg	Blue	Red	Green Green
330,000	330,000	330 000	300,000	Orange	Orange	Yellow	6.8 Mea	6.8 Meg	6.8 Meg	ļ	Bive	Gray	
330,000	330,000	360 000		Orange	Blue	Yellow	ora wed	on wed.	orn wed	7.0 Meo	Violet	Black	Green Green
	390,000	390,000	1	Orange	White	Yellow	I	1	7.5 Meg	7.0 meg	Violet	Green	
	370,000	370,000	400,000	Yellow	Block	Yellow	l		7.5 Meg	8.0 Meo		Black	Green
		430,000	100,000	Yellow	Oronge	Yellow	I	8.2 Meg	8.2 Meo	av wed	Gray Gray	Red	Green
470,000	470,000	470,000	1	Yellow	Violet	Yellow	I	or med	ars wed	9.0 Meg	White	Black	Green
4,0,000	4,0,000	470,000	500,000	Green	Block	Yellow	I	1	9.1 Meg	7.U Meg	White	8rown	Green
			300,000	Graen	DIOCK	1 sellow	10 Meg	10 Meg	10 Meg	10 Meg	Brown	Black	Blue
			ı		•		I IO Meg	(in wed	i in wed	I in wed	i nowii	DIGCK	Diffe

Capacitors, fixed mica dielectric

Fixed mica-dielectric capacitors of the American War Standards and Joint Army-Navy Specification are designated differently from the 1938 RMA Standard. AWS and JAN mica capacitors have a characteristic defined in Table I.

Table I

charac- teristic	Q	temperature coefficient parts/million/°C	maximum capacitance drift	verification of characteristics by production test
A	•	Not specified	Not specified	Not required
В	ŧ	Not specified	Not specified	Not required
c l	÷	-200 to +200	0.5 percent	Not required
D	ŧ	-100 to +100	0.2 percent	Not required
E	ŧ	0 to +100	0.05 percent	Not required
F	Ť	0 to +50	0.025 percent	Required
G	†	0 to -50	0.025 percent	Required

* Q must be greater than 1/3 of minimum allowable Q for other characteristics (JAN).
† Minimum acceptable Q at 1 MC is defined by a curve; value varies with capacitance.

Type designations of AWS or JAN fixed mica-dielectric capacitors are a comprehensive numbering system used to identify the component. The capacitor type designation is given in the following form:



Component designation: Fixed mica-dielectric capacitors are identified by the symbol CM.

Case designation: The case designation is a 2-digit symbol which identifies a particular case size and shape.


Characteristic: The characteristic is indicated by a single letter in accordance with Table 1.

Capacitance value: The nominal capacitance value in micromicrofarads is indicated by a 3-digit number. The first two digits are the first two digits of the capacitance value in micromicrofarads. The final digit specifies the number of zeros which follow the first two digits. If more than two significant figures are required, additional digits may be used, the last digit always indicating the number of zeros.

Capacitance tolerance: The symmetrical capacitance tolerance in percent is designated by a letter as shown on page 52.


Capacitors, fixed mica dielectric continued


AWS and JAN fixed capacitors



RMA fixed capacitors

The 1938 RMA Standard covers a simple 3-dot color code showing directly only the capacitance, and a more comprehensive 6-dot color code showing 3 significant figures and tolerance of the capacitance value, and a voltage rating. Capacitance values are expressed in micromicrofarads up to 10,000 micromicrofarads.



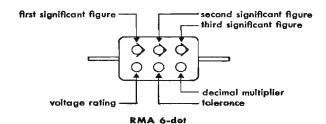


Examples

:	bottom row						1
	1	top row	,			rance liplier	
type	left	center	right	left	center	right	description
RMA (3 dot) RMA RMA CM30B681 J CM35E332G	red brown brown black black	green black red blue orange	brown black green gray orange	none blue gold brown yellow	none green red gold red	none brown brown brown red	250 $\mu\mu f = 20\%$, 500 volts 1000 $\mu\mu f = 5\%$, 600 volts 1250 $\mu\mu f = 2\%$, 1000 volts 680 $\mu\mu f = 5\%$, characteristic B 3300 $\mu\mu f = 2\%$, characteristic E

Capacitors, fixed ceramic

Tubular ceramic dielectric capacitors are used for temperature compensation of tuned circuits and have many other applications as well. If the capacitance, tolerance, and temperature coefficient are not printed on the capacitor body, the following color code will be used. The change in capacitance per unit capacitance per degree centigrade is the temperature coefficient, usually stated in parts per million per centigrade (ppm/°C).

	1	l	temperature		
color	significant figure	multiplier	in $\%$ c $>$ 10 $\mu\mu$ f	in μμf ε < 10 μμf	coefficient parts/million/° C
black	0	1	±20	2.0	0
brown	1	10	±1		-30
red	2	100	±2		80
orange	3	1,000		ļ	150
yellow	4			•	-220
green	5	<u> </u>	土5	0.5	-330
blue	6				—470
violet	7	_			—7 5 0
gray	8	0.01		0.25	十30
white	9	0.1	土10	1.0	-330 ± 500



Examples

wide		arrow bo	ands or dot	6	1
band	A	В	C	D	description
black blue violet	gray gray	red red red	black black brown	black green silver	2.0 $\mu\mu f \pm 2 \mu\mu f$, zero temp coeff 22 $\mu\mu f \pm 5\%$, $-470 \text{ ppm/}^{\circ}$ C temp coeff 820 $\mu\mu f \pm 10\%$, $-750 \text{ ppm/}^{\circ}$ C temp coeff

Inductance of single-layer solenoids

The approximate value of the *low-frequency* inductance of a single-layer solenoid is:

 $L = Fn^2d$ microhenries*

where F = form factor, a function of the ratio d/l. The value of F may be read from the accompanying chart, Fig. 1.

n = number of turns, d = diameter of coil (inches), between centers of conductors, I = length of coil (inches) = n times the distance between centers of adjacent turns.

The formula is based on the assumption of a uniform current sheet, but the correction due to the use of spaced round wires is usually negligible for practical purposes. For higher frequencies skin effect alters the inductance slightly. This effect is not readily calculated, but is often negligibly small. However, it must be borne in mind that the formula gives approximately the true value of inductance. In contrast, the apparent value is affected by the shunting effect of the distributed capacitance of the coil.

Example: Required a coil of 100 microhenries inductance, wound on a form 2 inches diameter by 2 inches winding length. Then d/l = 1.00, and F = 0.0173 on the chart.

$$n = \sqrt{\frac{L}{Fd}} = \sqrt{\frac{100}{0.0173 \times 2}} = 54 \text{ turns}$$


Reference to Magnet Wire Data, page 60, will assist in choosing a desirable size of wire, allowing for a suitable spacing between turns according to the application of the coil. A slight correction may then be made for the increased diameter (diameter of form plus two times radius of wire), if this small correction seems justified.

In the use of various charts, tables, and calculators for designing inductors, the following relationships are useful in extending the range of the devices. They apply to coils of any type or design.

- 1. If all dimensions are held constant, inductance is proportional to n^2 .
- 2. If the proportions of the coil remain unchanged, then for a given number of turns the inductance is proportional to the dimensions of the coil. A coil with all dimensions m times those of a given coil (having the same number of turns) has m times the inductance of the given coil. That is, inductance has the dimensions of length.

^{*} Formulas and chart (Fig. 1) derived from equations and tables in Bureau of Standards Circular No. 74.

Inductance of single-layer solenoids continued

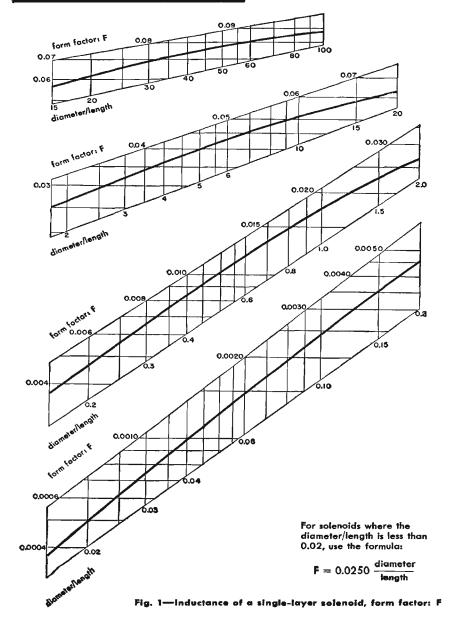


Magnet wire data

size	bare	enam nom	scc*	DCC*	SCE*	ssc*	DSC*	SSE*	ba	re	enan	reled
wire AWG	diam in inches	diam in inches	diam in inch as	diam in inches	diam in inches	diam in inches	diam in inches	diam in inches	min diam inches	max diam inches	min diam inches	dlam* in inches
10 11 12	.1019 .0907 .0808	.1039 .0927 .0827	.1079 .0957 .0858	.1129 .1002 .0903	.1104 .0982 .0882				.1009 .0898 .0800	.1029 .0917 .0816	.1024 .0913 .0814	.1044 .0932 .0832
13 14 15	.0720 .0641 .0571	.0738 .0659 .0588	.0770 .0691 .0621	.0815 .0736 .0666	.0793 .0714 .0643	.0591	.0611	.0613	.0712 .0634 .0565	.0727 .0647 .0576	.072 6 .0648 .0578	.0743 .0664 .0593
16	.0508	.0524	.0558	.0603	.0579	.0528	.0548	.0549	.0503	.0513	.0515	.0529
17	.0453	.0469	.0503	.0548	.0523	.0473	.0493	.0493	.0448	.0457	.0460	.0473
18	.0403	.0418	.0453	.0498	.0472	.0423	.0443	.0442	.0399	.0407	.0410	.0422
19	.0359	.0374	.0409	.0454	.0428	0379	.0399	.0398	.0355	.0363	.0366	.0378
20	.0320	.0334	.0370	.0415	.0388	.0340	.0360	.0358	.0316	.0323	.0326	.0338
21	.0285	.0299	.0335	.0380	.0353	.0305	.0325	.0323	.0282	.0287	.0292	.0303
22	.0253	.0266	.0303	.0343	.0320	.0273	.0293	.0290	.0251	.0256	.0261	.0270
23	.0226	.0238	.0276	.0316	.0292	.0246	.0266	.0262	.0223	.0228	.0232	.0242
24	.0201	.0213	.0251	.0291	.0266	.0221	.0241	.0236	.0199	.0203	.0208	.0216
25	.0179	.0190	.0224	.0264	.0238	.0199	.0219	.0213	.0177	.0181	.0186	.0193
26	.0159	.0169	.0204	.0244	.0217	.0179	.0199	.0192	.0158	.0161	.0166	.0172
27	.0142	.0152	.0187	.0227	.0200	.0162	.0182	.0175	.0141	.0144	.0149	.0155
28	.0126	.0135	.0171	.0211	.0183	.0146	.0166	.0158	.0125	.0128	.0132	.0138
29	.0113	.0122	.0158	.0198	.0170	.0133	.0153	.0145	.0112	.0114	.0119	.0125
30	.0100	.0108	.0145	.0185	.0156	.0120	.0140	.0131	.0099	.0101	.0105	.0111
31	.0089	.0097	.0134	.0174	.0144	.0109	.0129	.0119	.0088	.0090	.0094	.0099
32	.0080	.0088	.0125	.0165	.0135	.0100	.0120	.0110	.0079	.0081	.0085	.0090
33	.0071	.0078	.0116	.0156	.0125	.0091	.0111	.0100	.0070	.0072	.0075	.0080
34	.0063	.0069	.0108	.0148	.0116	.0083	.0103	.0091	.0062	.0064	.0067	.0071
35	.0056	.0061	.0101	.0141	.0108	.0076	.0096	.0083	.0055	.005 7	.0059	.0063
36	.0050	.0055	.0090	.0130	.0097	.0070	.0090	.0077	.0049	.0051	.0053	.0057
37	.0045	.0049	.0085	.0125	.0091	.0065	.0085	.0071	.0044	.0046	.0047	.0051
38	.0040	.0044	.0080	.0120	.0086	.0060	.0080	.0066	.0039	.0041	.0042	.0046
39	.0035	.0038	.0075	.0115	.0800	.0055	.0075	.0060	.0034	.0036	.0036	.0040
40 41 42	.0031 .0028 .0025	.0034 .0031 .0028	.0071	.0111	.0076	.0051	.0071	.0056	.0030 .0027 .0024	.0032 .0029 .0026	.0032 .0029 .0026	.0036 .0032 .0029
43 44	.0022 .0020	.0025 .0023							.0021 .0019	.0023 .0021	.0023 .0021	.0026 .0024


^{*} Nominal bare diameter plus maximum additions. For additional data on copper wire, see pages 35, 36, and 126.

Reactance charts

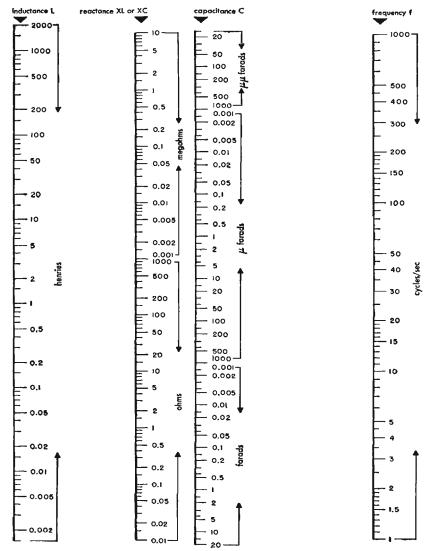

Figs 2, 3, and 4 give the relationships of capacitance, inductance, reactance, and frequency. Any one value ma be determined in terms of two others by use of a straight edge laid across the correct chart for the frequency unde Consideration,

Fig. 2-1 cycle to 1000 cycles.

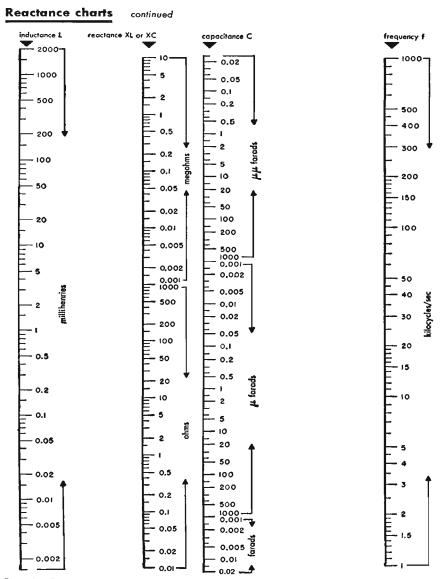

Example: Given a capacitance of 0.001 μ f, find the reactance at 50 kilocycles and inductance required to resonate. Place a straight edge through these values and read the intersections on the other scales, giving 3,180 ohms and 10.1 millihenries.

Fig. 3-1 kilocycle to 1000 kilocycles.

Reactance charts continued

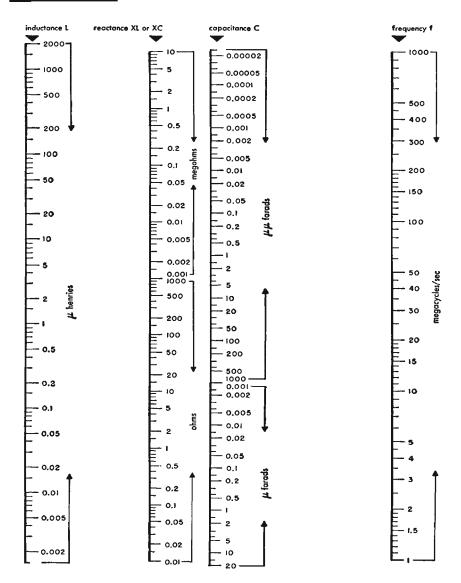


Fig. 4-1 megacycle to 1000 megacycles.

Impedance formulas phase angle of the admittance

Impedance $Z = R \cdot m$ $magnitude Z = [R \cdot m]$	_	phase angle $\phi = an^{-1} \frac{X}{R}$ admittance $Y = \frac{1}{7}$ mhos	Þ	phase angle of the admittance is $-\tan^{-1}\frac{X}{y}$		
dlagram	impedance	magnitude	phase angle	admittance		
<u>o. ₹</u>	R	R	0	1 R		
~ ,~	jωL	ωL	$+\frac{\pi}{2}$	$-j\frac{1}{\omega l}$		
<u> </u>	$-J\frac{1}{\omega C}$	<u>1</u> ωC	$-\frac{\pi}{2}$, tuC		
<i>؞ڔڡڡ؞ۣڡ</i> ڡڔ؞	$j\omega$ (L ₁ + L ₂ \pm 2M)	$\omega(l_1 + l_2 \pm 2M)$	$+\frac{\pi}{2}$	$- j \frac{1}{\omega (l_1 + l_2 \pm 2M)}$		
o C₁ C₁ ○	$-j\frac{1}{\omega}\left(\frac{1}{C_1}+\frac{1}{C_2}\right)$	$\frac{\frac{1}{\omega}\left(\frac{1}{C_1} + \frac{1}{C_2}\right)}{\omega}$	$-\frac{\pi}{2}$	$j\omega \frac{C_1 C_2}{C_1 + C_2}$		
∞ <u>-</u> \$\\-_00_7°	R + pot	[R ² + ω ² L ¹]§	ion ⁻¹ wl	$\frac{R - j\omega L}{R^2 + \omega^2 L^2}$		
₽₩	$R = j \frac{1}{\omega C}$	$\frac{1}{\omega C} [1 + \omega^2 C^2 R^2] $	$-\tan^{-1}\frac{1}{\omega CR}$	$\frac{R + j\frac{1}{\omega C}}{R^2 + \frac{1}{\omega^2 C^2}}$		
	$\int \left(\omega \mathbf{k} - \frac{1}{\omega \mathbf{c}}\right)$	$\left(\omega E - \frac{1}{\omega C}\right)$	± $\frac{\pi}{2}$	∫ ωC 1 — ω²LC		
•wramle	$R + J \left(\omega L - \frac{1}{\omega C} \right)$	$ \left] \left[R^3 + \left(\omega L - \frac{1}{\omega C} \right)^2 \right]^{\frac{1}{4}} $	$\tan^{-1}\frac{\left(\omega t - \frac{1}{\omega C}\right)}{R}$	$\frac{R - J\left(\omega L - \frac{1}{\omega C}\right)}{R^2 + \left(\omega L - \frac{1}{\omega C}\right)^2}$		

continued impedance formulas

impedance Z = R +	- jX ohms	phase angle $\phi = \tan^{-1} \frac{X}{R}$	phase angle of the admittance					
magnitude $ \mathcal{I} =[R$	$[2+X^2]^{rac{1}{4}}$ ohms	admittance $Y = \frac{1}{\chi}$ mhos	is — $ton^{-1}\frac{X}{R}$					
	Impedance		$n_3 + n_3 C_2 K_2$ $n_3 \Gamma(C) - C K_3$					
٠ ٢٠٠٠- ښ٠	magnitude	$\left[\frac{R^2 + \omega^2 L^2}{(1 - \omega^2 LC)^2 + \omega^2 C^2 R^2}\right]^{\frac{1}{2}}$ $ton^{-1} \omega \frac{[L11 - \omega^2 LC) - CR^2]}{R}$						
	phase angle							
	admittance	R - 10[L11 - R ² +	$\frac{\omega^2 LCI - CR^2}{-\omega^2 L^2}$					
	impedance	$X_{1} \frac{X_{1} R_{2} + j [R_{2}]}{R_{2}^{2} +}$	$\frac{x_1 + X_2(X_1 + X_2)}{(X_1 + X_2)^2}$					
٠ لـ ١٩٩٠	magnitude	$X_1 \left[\frac{R_2^2}{R_3^2 + \epsilon} \right]$	$+ X_1^2 + X_2^3$ $^{\frac{1}{6}}$					
LANT THE STATE OF	phase angle	tan-1 R ₂ * +	$\frac{-X_2(X_1+X_2)}{X_1R_2}$					
	admittance	$\frac{R_2 X_1 - j R_2^2 + j}{X_1 (R_2^2 + j)}$						

	impedance	$\frac{R_{1}R_{2}(R_{1}+R_{3})+\omega^{2}L^{2}R_{2}+\frac{R_{1}}{\omega^{2}C^{2}}}{(R_{1}+R_{3})^{2}+\left(\omega L-\frac{1}{\omega C}\right)^{2}}+J\frac{\omega LR^{2}-\frac{R_{1}^{3}}{\omega C}-\frac{L}{C}\left(\omega L-\frac{1}{\omega C}\right)}{(R_{1}+R_{3})^{2}+\left(\omega L-\frac{1}{\omega C}\right)^{2}}$
	magnitude	$\left[\frac{iR_1^2 + \omega^2L^2\left(R_2^2 + \frac{1}{\omega^2C^2}\right)}{iR_1 + Ry^2 + \left(\omega L - \frac{1}{\omega C}\right)^2}\right]^{\frac{1}{2}}$
	phase angle	$ton^{-1} \left[\frac{\omega L R_2^2 - \frac{R_1^2}{\omega C} - \frac{L}{C} \left(\omega L - \frac{1}{\omega C}\right)}{R_1 R_2 (R_1 + R_2) + \omega^2 L^2 R_2 + \frac{R_1}{\omega^2 C^2}} \right]$
	admittance	$\frac{R_1 + \omega^2 C^2 R_1 R_2 (R_1 + R_2) + \omega^4 L^2 C^2 R_2}{(R_1^2 + \omega^2 L^2) (1 + \omega^2 C^2 R_2^2)} + \rho_0 \left[\frac{C R_1^2 - L + \omega^2 L C (L - C R_2^2)}{(R_1^2 + \omega^2 L^2) (1 + \omega^2 C^2 R_2^2)} \right]$
*,	impedance	$\frac{R_1 R_2 (R_1 + R_2) + R_1 X_2^2 + R_2 X_1^2}{(R_1 + R_2)^2 + (X_1 + X_2)^2} + f \frac{R_1^2 X_2 + R_2^2 X_1 + X_1 X_2 (X_1 + X_2)}{(R_1 + R_2)^2 + (X_1 + X_2)^2}$
	magnitude	$\left[\frac{(R_1^2 + X_1^4)(R_2^2 + X_2^4)}{(R_1 + R_2)^2 + (X_1 + X_2)^2}\right]^{\frac{1}{4}}$
	phase angle	$\tan^{-1}\frac{R_1^2X_2+R_2^2X_1+X_1X_2!X_1+X_3)}{R_1R_2(R_1+R_2)+R_1X_2^2+R_2X_1^2}$
	admittance	$\frac{R_1 R_2^2+X_2^2 +R_2 R_1^2+X_1^2 }{(R_1^2+X_2^2)(R_2^2+X_2^2)} \to f\frac{X_1(R_2^2+X_2^2)+X_2(R_1^2+X_1^2)}{(R_1^2+X_1^2)(R_2^2+X_2^2)}$

Impedance formulas continued

Parallel and series circuits and their equivalent relationships

Conductance
$$G = \frac{1}{R_p}$$

$$\omega = 2\pi t$$

Susceptance
$$B = \frac{1}{\chi_p} = \frac{1}{\omega L_p} - \omega C_p$$


Reactance
$$X_p = \frac{\omega L_p}{1 - \omega^2 L_p C_p}$$


Admittance
$$Y = \frac{I}{E} = \frac{1}{Z} = G - jB$$

$$= \sqrt{C^2 + B^2} \ \angle - \phi = | \ Y \ | \ \angle - \phi$$

Impedance
$$Z = \frac{E}{I} = \frac{1}{Y} = \frac{R_p X_p}{R_p^2 + X_p^2} (X_p + jR_p)$$

$$= \frac{R_p X_p}{\sqrt{R_n^2 + X_n^2}} \angle \phi = |Z| \angle \phi$$

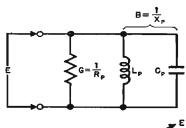



Phase angle
$$-\phi = \tan^{-1} \frac{-B}{C} = \cos^{-1} \frac{G}{|Y|} = -\tan^{-1} \frac{R_p}{X_p}$$

Resistance =
$$R_s$$


Reactance
$$X_s = \omega L_s - \frac{1}{\omega C_s}$$

Impedance
$$Z = \frac{E}{I} = R_s + jX_s$$

$$= \sqrt{R_{s^2} + X_{s^2}} \angle \phi = |Z| \angle \phi$$

Phase angle
$$\phi = \tan^{-1} \frac{X_s}{R_s} = \cos^{-1} \frac{R_s}{|Z|}$$

Vectors E and I, phase angle ϕ , and Z, Y are identical for the parallel circuit and its equivalent series circuit

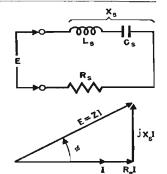

$$Q = |\tan \phi| = \frac{|X_s|}{R_s} = \frac{R_p}{|X_p|} = \frac{|B|}{G}$$

$$PF = \cos \phi = \frac{R_s}{|Z|} = \frac{|Z|}{R_p} = \frac{G}{|Y|} = \sqrt{\frac{R_s}{R_p}} = \frac{1}{\sqrt{Q^2 + 1}} = \frac{kw}{kva}$$

$$Z^2 = R_s^2 + X_s^2 = \frac{R_p^2 X_p^2}{R_n^2 + X_n^2} = R_s R_p = X_s X_p$$

Impedance formulas

$$Y^{2} = G^{2} + B^{2} = \frac{1}{R_{p}^{2}} + \frac{1}{X_{p}^{2}} = \frac{G}{R_{s}}$$

$$R_{s} = \frac{Z^{2}}{R_{p}} = \frac{G}{Y^{2}} = R_{p} \frac{X_{p}^{2}}{R_{p}^{2} + X_{p}^{2}} = R_{p} \frac{1}{Q^{2} + 1}$$

$$X_{s} = \frac{Z^{2}}{X_{p}} = \frac{B}{Y^{2}} = X_{p} \frac{R_{p}^{2}}{R_{p}^{2} + X_{p}^{2}} = X_{p} \frac{1}{1 + \frac{1}{Q^{2}}}$$

$$R_{p} = \frac{1}{G} = \frac{Z^{2}}{R_{s}} = \frac{R_{s}^{2} + X_{s}^{2}}{R_{s}} = R_{s} (Q^{2} + 1)$$

$$X_{p} = \frac{1}{B} = \frac{Z^{2}}{X_{s}} = \frac{R_{s}^{2} + X_{s}^{2}}{X_{s}} = X_{s} \left(1 + \frac{1}{Q^{2}}\right) = \frac{R_{s}R_{p}}{X_{s}} = \pm R_{p} \sqrt{\frac{R_{s}}{R_{p} - R_{s}}}$$

Approximate formulas

Reactor
$$R_s=\frac{X^2}{R_p}$$
 and $X=X_s=X_p$ (See Note 1)
Resistor $R=R_s=R_p$ and $X_s=\frac{R^2}{X_p}$ (See Note 2)

Simplified parallel and series circuits

Simplified parallel and series circuits
$$X_p = \omega L_p \qquad B = \frac{1}{\omega L_p} \qquad X_s = \omega L_s$$

$$\tan \phi = \frac{\omega L_s}{R_s} = \frac{R_p}{\omega L_p} \qquad Q = \frac{\omega L_s}{R_s} = \frac{R_p}{\omega L_p}$$

$$PF = \frac{R_s}{\sqrt{R_s^2 + \omega^2 L_s^2}} = \frac{\omega L_p}{\sqrt{R_p^2 + \omega^2 L_p^2}}$$

$$PF = \frac{1}{Q} \text{ approx} \quad \text{(See Note 3)}$$

$$R_s = R_p \frac{1}{Q^2 + 1} \qquad R_p = R_s \quad (Q^2 + 1)$$

$$L_s = L_p \frac{1}{1 + \frac{1}{Q^2}} \qquad L_p = L_s \left(1 + \frac{1}{Q^2}\right)$$

Impedance formulas cor

$$X_{p} = \frac{-1}{\omega C_{p}} \qquad B = -\omega C_{p} \qquad X_{s} = \frac{-1}{\omega C_{s}}$$

$$\tan \phi = \frac{-1}{\omega C_{s}R_{s}} = -\omega C_{p}R_{p}$$


$$Q = \frac{1}{\omega C_{s}R_{s}} = \omega C_{p}R_{p}$$

$$PF = \frac{\omega C_{s}R_{s}}{\sqrt{1 + \omega^{2}C_{s}^{2}R_{s}^{2}}} = \frac{1}{\sqrt{1 + \omega^{2}C_{p}^{2}R_{p}^{2}}}$$

$$PF = \frac{1}{Q} \text{ approx} \quad \text{(See Note 3)}$$

$$R_{s} = R_{p} \frac{1}{Q^{2} + 1} \qquad R_{p} = R_{s} \quad \text{(}Q^{2} + 1\text{)}$$

$$C_{s} = C_{p} \left(1 + \frac{1}{Q^{2}}\right) \qquad C_{p} = C_{s} \frac{1}{1 + \frac{1}{Q^{2}}}$$

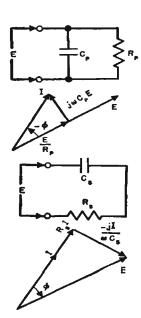

Approximate formulas

Inductor
$$R_s=\frac{\omega^2L^2}{R_p}$$
 and $L=L_p=L_s$ (See Note 1)

Resistor
$$R = R_s = R_p$$
 and $L_p = \frac{R^2}{\omega^2 L_s}$ (See Note 2)

Capacitor
$$R_s=rac{1}{\omega^2C^2R_p}$$
 and $C=C_p=C_s$ (See Note 1)

Resistor
$$R = R_s = R_p$$
 and $C_s = \frac{1}{\omega^2 C_p R^2}$ (See Note 2)

Note 1: (Small resistive component) Error in percent $=-\frac{100}{Q^2}$ (for Q=10, error =1 percent low)

Note 2: (Small reactive camponent) Error in percent $= -100 \, Q^2$ (for Q = 0.1, error = 1 percent low)

Note 3: Error in percent $=+\frac{50}{Q^2}$ approximately (for Q=7, error =1 percent high)

Skin effect

A = correction coefficient

D = diameter of conductor in inches

f = frequency in cycles per second

 $R_{\alpha\alpha}=$ resistance at frequency f

 $R_{da} = \text{direct-current resistance}$

T = thickness of tubular conductor in inches

 $T_1 = depth of penetration of current$

 $\mu=$ permeability of conductor material ($\mu=1$ for copper and other nonmagnetic materials)

 ρ = resistivity of conductor material at any temperature

 ρ_c = resistivity of copper at 20°C(1.724 microhm-centimeter)

Fig. 5 shows the relationship of R_{ac}/R_{dc} versus $D\sqrt{f}$ for copper, or versus $D\sqrt{f}\sqrt{\mu_{\rho}^{p_c}}$ for any conductor material, for an isolated straight solid conductor of circular cross section. Negligible error in the formulas for R_{ac} results when the conductor is spaced at least 10D from adjacent conductors. When the spacing between axes of parallel conductors carrying the same current is 4D, the resistance R_{ac} is increased about 3 percent. The formulas are accurate for concentric lines due to their circular symmetry.

For values of $D\sqrt{f}\sqrt{\mu\frac{\rho_o}{\rho}}$ greater than 40,

$$\frac{R_{\sigma c}}{R_{dc}} = 0.0960 \ D\sqrt{f} \sqrt{\mu \frac{\rho_c}{\rho}} + 0.26 \tag{1}$$

The high-frequency resistance of an isolated straight conductor: either solid; or tubular for $T < \frac{D}{8}$ or $T_1 < \frac{D}{8}$; is given in equation (2). If the current flow is along the inside surface of a tubular conductor, D is the inside diameter.

$$R_{ae} = A \frac{\sqrt{f}}{D} \sqrt{\mu \frac{\rho}{\rho_a}} \times 10^{-6} \text{ ohms per foot}$$
 (2)

The values of the correction coefficient A for solid conductors are shown in Table II and, for tubular conductors, in Table III.

The value of $T\sqrt{f}\sqrt{\mu\frac{\rho_c}{\rho}}$ that just makes A=1 indicates the penetration of

Skin effect continued

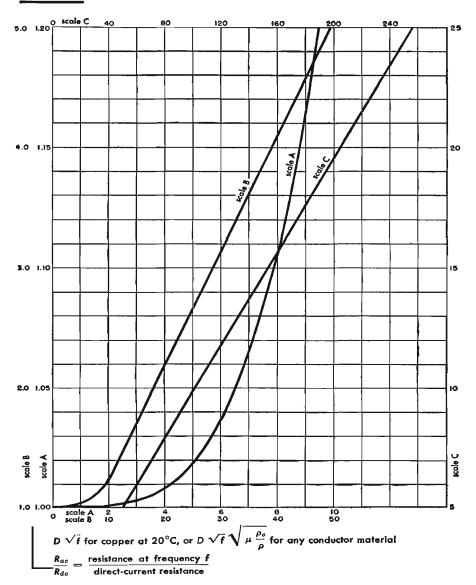


Fig. 5—Resistance ratio for isolated straight solid conductors of circular cross section.

Skin effect continued

the currents below the surface of the conductor. Thus, approximately,

$$T_1 = \frac{3.5}{\sqrt{t}} \sqrt{\frac{\rho}{\mu \rho_c}} \text{ inches.}$$
 (3)

When $T_1 < \frac{D}{8}$ the value of R_{ac} as given by equation (2) (but not the value

of
$$\frac{R_{ac}}{R_{do}}$$
 in Table III) is correct for any value $T \ge T_1$.

Under the limitation that the radius of curvature of all parts of the cross section is appreciably greater than T_1 , equations (2) and (3) hold for isolated straight conductors of any shape. In this case the term D= (perimeter of cross section) $\div \pi$.

Examples

- **1.** At 100 megacycles, a copper conductor has a depth of penetration $T_1 = 0.00035$ inch.
- **2.** A steel shield with 0.005-inch copper plate, which is practically equivalent in R_{ac} to an isolated copper conductor 0.005-inch thick, has a value of A=1.23 at 200 kilocycles. This 23-percent increase in resistance over that of a thick copper sheet is satisfactorily low as regards its effect on the losses of the components within the shield. By comparison, a thick aluminum sheet

has a resistance $\sqrt{\frac{\rho}{\rho_c}} = 1.28$ times that of copper.

Table II—Solid conductors

 $\begin{array}{c|cccc} \mathbf{D} \ \sqrt{f} \ \sqrt{\mu} \ \frac{\rho_o}{\rho} & \mathbf{A} \\ \hline > 370 & 1.000 \\ 220 & 1.005 \\ 160 & 1.010 \\ \hline 98 & 1.02 \\ 48 & 1.05 \\ 26 & 1.10 \\ \hline 13 & 1.20 \\ 9.6 & 1.30 \\ 5.3 & 2.00 \\ < 3.0 & R_{ac} \approx R_{dd} \\ \hline \end{array}$

$$R_{da} = \frac{10.37}{D^2} \frac{\rho}{\rho_a} \times 10^{-6}$$
 ohms per foot

Table III—Tubular conductors

$\mathbf{T}\sqrt{\hat{f}}\sqrt{\mu\frac{\rho_o}{\rho}}$	A	R_{ac}/R_{dc}
= B where B > 3.5 3.5 3.15 2.85	1.00 1.00 1.01 1.05	0.384 B 1.35 1.23 1.15
2.60 2.29 2.08	1.10 1.20 1.30	1.10 1.06 1.04
1.77 1.31	1.50 2.00	1.02 1.00
= B where $B < 1.3$	2.60 B	1.00

Network theorems

Reciprocity theorem

If an emf of any character whatsoever located at one point in a linear network produces a current at any other point in the network, the same emf acting at the second point will produce the same current at the first point.

Thévenin's theorem

If an impedance Z is connected between two points of a linear network, the resulting steady-state current I through this impedance is the ratio of the potential difference V between the two points prior to the connection of Z, and the sum of the values of (1) the connected impedance Z, and (2) the impedance Z_1 of the network measured between the two points, when all generators in the network are replaced by their internal impedances

$$I = \frac{V}{Z + Z_1}$$

Principle of superposition

The current which flows at any point in a network composed of constant resistances, inductances, and capacitances, or the potential difference which exists between any two points in such a network, due to the simultaneous action of a number of emf's distributed in any manner throughout the network, is the sum of the component currents at the first point, or the potential differences between the two points, which would be caused by the individual emf's acting alone. (Applicable to emf's of any character.)

In the application of this theorem, it is to be noted that: for any impedance element Z through which flows a current I, there may be substituted a virtual source of voltage of value -ZI.

Electrical circuit formulas

1. Self-inductance of circular ring of round wire at radio frequencies, for non-magnetic materials

$$L = \frac{\sigma}{100} \left[7.353 \log_{10} \frac{16\sigma}{d} - 6.370 \right]$$

L = inductance in microhenries

a = mean radius of ring in inches

d = diameter of wire in inches

$$\frac{a}{4} > 2.5$$

2. Capacitance of a parallel-plate capacitor

$$C = 0.0885 K \frac{(N-1) A}{t} \text{ micromicrofarads}$$

A = area of one side of one plate in square centimeters

N = number of plates

t =thickness of dielectric in centimeters

K = dielectric constant

This formula neglects "fringing" at the edges of the plates.

3. Reactance of an inductor

$$X = 2\pi f L$$
 ohms

f =frequency in cycles per second

L = inductance in henries

or f in kilocycles and L in millihenries; or f in megacycles and L in microhenries

4. Reactance of a capacitor

$$X = \frac{-1}{2\pi fC}$$
 ohms

f =frequency in cycles per second

C = capacitance in farads

This may be written
$$X = \frac{-159.2}{fC}$$
 ohms

f = frequency in kilocycles per second

C = capacitance in microfarads

or f in megacycles and C in milli-microfarads $(0.001\mu\mathrm{f})$.

5. Resonant frequency of a series-tuned circuit

$$f = \frac{1}{2\pi\sqrt{LC}}$$
 cycles per second

L = inductance in henries

C = capacitance in farads

This may be written
$$LC = \frac{25,330}{f^2}$$

f = frequency in kilocycles

L = inductance in millihenries

 $C = \text{capacitance in milli-microfarads } (0.001 \mu f)$

or f in megacycles, L in microhenries, and C in micromicrofarads.

6. Dynamic resistance of a parallel-tuned circuit at resonance

$$r = \frac{X^2}{R} = \frac{L}{CR} \text{ ohms}$$

$$X = \omega L = \frac{1}{\omega C}$$

$$R=r_1+r_2$$


L = inductance in henries

C = capacitance in farads

R = resistance in ohms

The formula is accurate for engineering

purposes provided $\frac{X}{R} > 10$.

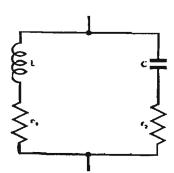

7. Parallel impedances

If Z_1 and Z_2 are the two impedances which are connected in parallel, then the resultant impedance is

$$Z = \frac{Z_1 Z_2}{Z_1 + Z_2} = \frac{(R_1 + jX_1) (R_2 + jX_2)}{(R_1 + R_2) + j(X_1 + X_2)} = \frac{(R_1 R_2 - X_1 X_2) + j(R_1 X_2 + R_2 X_1)}{(R_1 + R_2) + j(X_1 + X_2)}$$

$$Z = \frac{\mid Z \mid \mid Z_2 \mid}{\mid Z_1 + Z_2 \mid} \angle \phi$$

$$\phi = \angle Z_1 + \angle Z_2 - \angle (Z_1 + Z_2)$$

$$= \tan^{-1} \frac{X_1}{R_1} + \tan^{-1} \frac{X_2}{R_2} - \tan^{-1} \frac{X_1 + X_2}{R_1 + R_2}$$

Given one impedance Z_1 and the desired resultant impedance Z_r , the other impedance is

$$Z_2 = \frac{ZZ_1}{Z_1 - Z}$$

8. Impedance of a two-mesh network

$$Z_{11} = R_{11} + iX_{11}$$

is the impedance of the first circuit, measured at terminals 1-1 with terminals 2-2 open-circuited.

$$Z_{22} = R_{22} + jX_{22}$$

is the impedance of the second circuit, measured at terminals $\mathbf{2}-\mathbf{2}$ with terminals $\mathbf{1}-\mathbf{1}$ open-circuited.

$$Z_{12} = R_{12} + jX_{12}$$

is the mutual impedance between the two meshes, i.e., the open-circuit voltage appearing in either mesh when unit current flows in the other mesh. Z; Z₁₁ Z₁₂ Z₂

Then the impedance looking into terminals 1-1 with terminals 2-2 short-circuited is

$$Z_{1}' = R_{1}' + jX_{1}' = Z_{11} - \frac{Z_{12}^{2}}{Z_{22}} = R_{11} + jX_{11} - \frac{R_{12}^{2} - X_{12}^{2} + 2jR_{12}X_{12}}{R_{22} + jX_{22}}$$

When

$$R_{12} = 0$$


$$Z_{1}' = R_{1}' + jX_{1}' = Z_{11} + \frac{X_{12}^{2}}{Z_{22}} = R_{11} + jX_{11} + \frac{X_{12}^{2}}{R_{22}^{2} + X_{22}^{2}} (R_{22} - jX_{22})$$

Example 1: Two resistors in parallel.

$$Z_{11} = R_1$$
 $Z_{22} = R_1 + R_2$

$$Z_{12} = R_1$$

Hence
$$Z_1' = R_1' = R_1 - \frac{R_1^2}{R_1 + R_2} = \frac{R_1 R_2}{R_1 + R_2}$$




Example 2: A transformer with tuned secondary and negligible primary resistance.

$$Z_{11} = j\omega L_1$$

$$Z_{22} = R_2$$
 since $X_{22} = 0$

$$Z_{12} = j\omega M$$

Then
$$Z_1' = j\omega L_1 + \frac{\omega^2 M^2}{R_0}$$



9. Currents in a two-mesh network

$$i_{1} = \frac{e_{1}}{Z_{1}'}$$

$$= e_{1} \frac{Z_{22}}{Z_{11}Z_{22} - Z_{12}^{2}}$$

$$= e_{1} \frac{R_{22} + jX_{22}}{(R_{11}R_{22} - X_{11}X_{22} - R_{12}^{2} + X_{12}^{2}) + j(R_{11}X_{22} + R_{22}X_{11} - 2R_{12}X_{12})}$$

$$i_{2} = e_{1} \frac{Z_{12}}{Z_{11}Z_{22} - Z_{12}^{2}}$$

10. Power transfer between two impedances connected directly

Let $Z_1 = R_1 + jX_1$ be the impedance of the source, and $Z_2 = R_2 + jX_2$ be the impedance of the load.

The maximum power transfer occurs when

$$R_2 = R_1$$
 and $X_2 = -X_1$

The reflection loss due to connecting any two impedances directly is

$$\frac{I_2}{I} = \frac{|Z_1 + Z_2|}{2\sqrt{R_1 R_2}}$$

In decibels


db =
$$20 \log_{10} \frac{|Z_1 + Z_2|}{2\sqrt{R_1R_2}}$$

 I_2 = current which would flow in Z_2 were the two impedances connected through a perfect impedance matching network.

I = current which flows when the impedances are connected directly.

11. Power transfer between two meshes coupled reactively

In the general case, X_{11} and X_{22} are not equal to zero and X_{12} may be any reactive coupling. When only one of the quantities X_{11} , X_{22} , and X_{12} can be varied, the best power transfer under the circumstances is given by



For X22 variable

$$X_{22} = \frac{X_{12}^2 X_{11}}{R_{11}^2 + X_{11}^2}$$
 (zero reactance looking into load circuit)

For X₁₁ variable

$$X_{11} = \frac{X_{12}^2 X_{22}}{R_{22}^2 + X_{22}^2}$$
 (zero reactance looking into source circuit)

For X₁₂ variable

$$X_{12}^2 = \sqrt{(R_{11}^2 + X_{11}^2)(R_{22}^2 + X_{22}^2)}$$

When two of the three quantities can be varied, a perfect impedance match is attained and maximum power is transferred when

$$X_{12}^2 = \sqrt{(R_{11}^2 + X_{11}^2) (R_{22}^2 + X_{22}^2)}$$

and

$$\frac{X_{11}}{R_{11}} = \frac{X_{22}}{R_{22}}$$
 (both circuits of same Q or phase angle)

For perfect impedance match the current is

$$i_2 = \frac{e_1}{2\sqrt{R_{11}R_{22}}} \angle \tan^{-1} \frac{R_{11}}{X_{11}}$$

In the most common case, the circuits are tuned to resonance $X_{11}=0$ and $X_{22}=0$. Then $X_{12}^2=R_{11}R_{22}$ for perfect impedance match.

12. Optimum coupling between two circuits tuned to the same frequency

From the last result in the preceding section, maximum power transfer (or an impedance match) is obtained for $\omega^2 M^2 = R_1 R_2$ where M is the mutual inductance between the circuits, R_1 and R_2 are the resistances of the two circuits.

13. Coefficient of coupling

By definition, coefficient of coupling k is

$$k = \frac{M}{\sqrt{L_1 L_2}}$$
 where $M =$ mutual inductance

 L_1 and L_2 are the inductances of the two coupled circuits.

Coefficient of coupling is a geometrical property, being a function of the proportions of the configuration of coils, including their relationship to any nearby objects which affect the field of the system. As long as these proportions remain unchanged, the coefficient of coupling is independent of the physical size of the system, and of the number of turns of either coil.

14. Selective circuits

Formulas and curves are presented for the selectivity and phase shift

Of *n* single tuned circuits

Of *m* pairs of coupled tuned circuits

The conditions assumed are

- 1. All circuits are tuned to the same frequency f_0 .
- **2.** All circuits have the same Q_r , or each pair of circuits includes one circuit having Q_1 , and the other having Q_2 .
- 3. Otherwise the circuits need not be identical.
- **4.** Each successive circuit or pair of circuits is isolated from the preceding and following ones by tubes, with no regeneration around the system.

Certain approximations have been made in order to simplify the formulas. In most actual applications of the types of circuits treated, the error involved is negligible from a practical standpoint. Over the narrow frequency band in question, it is assumed that

- **1.** The reactance around each circuit is equal to $2X_0 \frac{\Delta f}{f_0}$.
- **2.** The resistance of each circuit is constant and equal to $\frac{X_0}{Q}$.
- **3.** The coupling between two circuits of a pair is reactive and constant. (When an untuned link is used to couple the two circuits, this condition frequently is far from satisfied, resulting in a lopsided selectivity curve.)
- **4.** The equivalent input voltage, taken as being in series with the tuned circuit (or the first of a pair), is assumed to bear a constant proportionality to the grid voltage of the input tube or other driving source, at all frequencies in the band.
- **5.** Likewise, the output voltage across the circuit (or the final circuit of a pair) is assumed to be proportional only to the current in the circuit.

The following symbols are used in the formulas

$$\frac{\Delta f}{f_0} = \frac{f - f_0}{f_0} = \frac{\text{deviation from resonance frequency}}{\text{resonance frequency}}$$

f = signal frequency

 $f_0 =$ frequency to which all circuits are independently tuned

 X_0 = reactance at f_0 of inductor in tuned circuit

Q = quality factor of tuned circuit. For a pair of coupled circuits, there is used Q = $\sqrt{Q_1Q_2}$

Q1 and Q2 are the values for the two circuits of a coupled pair

$$Q' = \frac{2Q_1Q_2}{Q_1 + Q_2}$$

E = amplitude of output voltage at frequency $f \setminus$ both for the same value

 $E_0 =$ amplitude of output voltage at frequency f_0 of input voltage

n = number of single tuned circuits

m = number of pairs of coupled circuits

 ϕ = phase shift of signal at f relative to shift at f_0 , as signal passes through cascade of circuits

k = coefficient of coupling between two coupled circuits

 $p = k^2Q^2$ or $p = k^2Q_1Q_2$, a parameter determining the form of the selectivity curve of coupled circuits


$$B = \rho - \frac{1}{2} \left(\frac{Q_1}{Q_2} + \frac{Q_2}{Q_1} \right)$$

Selectivity and phase shift of single tuned circuits

$$\frac{E}{E_0} = \left[\frac{1}{\sqrt{1 + \left(2Q \frac{\Delta f}{f_0} \right)^2}} \right]^n$$

$$\frac{\Delta f}{f_0} = \pm \frac{1}{2Q} \sqrt{\left(\frac{E_0}{E}\right)^{\frac{2}{n}} - 1}$$

Decibel response = $20 \log_{10} \left(\frac{E}{E_0} \right)$



(db response of n circuits) = n times (db response of single circuit)

$$\phi = n \tan^{-1} \left(-2Q \, \frac{\Delta f}{f_0} \right)$$

These equations are plotted in Fig. 6 and Fig. 7, following.


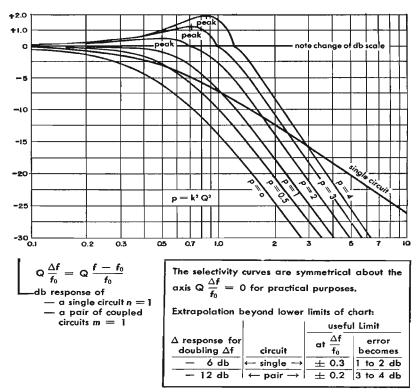


Fig. 6-Selectivity curves.

As an example of the use of the curves, suppose there are three single-tuned circuits (n=3). Each circuit has a Q=200 and is tuned to 1000 kilocycles. The results of this example are shown in the following table:

abscissa Q $\frac{\Delta f}{f_0}$	Δf kc	ordinate db response for n = 1	db response for n = 3	ϕ^* for $n=1$	ϕ^* for $n=3$
0.5	±2.5	-3.0	—9	∓45°	∓135°
1.5	±7.5	-10.0	—30	∓71½°	∓215°
5.0	± 25. 0	-20.2	—61	∓84°	∓252°

 $^{^*\}phi$ is negative for Δf positive, and vice versa.

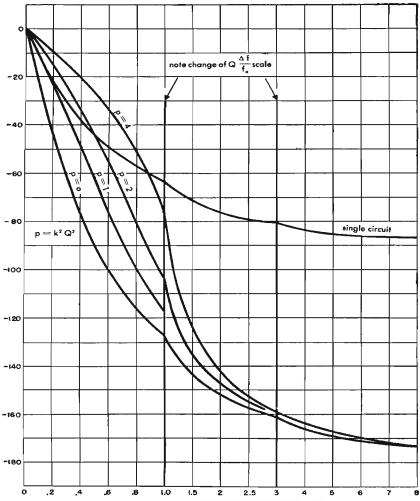

 $Q\frac{\Delta f}{f_0} = Q\frac{f - f_0}{f_0}$

–relativo phase angle ϕ in degrees

- a single circuit n = 1
- a pair of coupled circuits m=1

Fig. 7—Phase-shift curves.

The curves are symmetrical about the origin. For negative values of Q $\frac{\Delta f}{f_0}$, ϕ is positive and same numerical value as for corresponding negative value of Q $\frac{\Delta f}{f_0}$.

Selectivity and phase shift of pairs of coupled tuned circuits

Case 1: When $Q_1 = Q_2 = Q$

These formulas can be used with reasonable accuracy when Q_1 and Q_2 differ by ratios up to 1.5 or even 2 to 1. In such cases use the value $Q = \sqrt{Q_1Q_2}$.

$$\frac{E}{E_0} = \left[\frac{p+1}{\sqrt{\left[\left(2Q\frac{\Delta f}{f_0} \right)^2 - (p-1) \right]^2 + 4p}} \right]^m$$

$$\frac{\Delta f}{f_0} = \pm \frac{1}{2Q} \sqrt{(p-1)} \pm \sqrt{(p+1)^2 \left(\frac{E_0}{E} \right)^{\frac{2}{m}} - 4p}$$
ene of several types

For very small values of $\frac{E}{E_0}$ the formulas reduce to

$$\frac{E}{E_0} = \left[\frac{p+1}{\left(2Q\frac{\Delta f}{f_0}\right)^2} \right]^m$$

Decibel response = $20 \log_{10} \left(\frac{E}{F_a}\right)$

(db response of m pairs of circuits) = m times (db response of one pair)

$$\phi = m \tan^{-1} \left[\frac{-4Q\frac{\Delta f}{f_0}}{(p+1) - \left(2Q\frac{\Delta f}{f_0}\right)^2} \right]$$

As p approaches zero, the selectivity and phase shift approach the values for n single circuits, where n = 2m (gain also approaches zero).

The above equations are plotted in Figs. 6 and 7.

For overcoupled circuits (p > 1)

Location of peaks:
$$\left(\frac{\Delta f}{f_0}\right)_{peak} = \pm \frac{1}{2Q}\sqrt{p-1}$$

Amplitude of peaks:
$$\left(\frac{E}{E_0}\right)_{\text{peak}} = \left(\frac{p+1}{2\sqrt{p}}\right)^m$$

Phase shift at peaks: $\phi_{peak} = m \tan^{-1}(\mp \sqrt{D-1})$

Electrical circuit formulas

Approximate pass band (where $\frac{E}{F_0} = 1$):

$$\left(\frac{\Delta f}{f_0}\right)_{center} = 0 \quad \text{and} \ \left(\frac{\Delta f}{f_0}\right)_{unity} = \sqrt{2} \left(\frac{\Delta f}{f_0}\right)_{peak} = \\ \pm \frac{1}{Q} \ \sqrt{\frac{p-1}{2}}$$

Case 2: General formula for any Q₁ and Q₂

$$\begin{split} &\frac{E}{E_0} = \left[\frac{\rho + 1}{\sqrt{\left[\left(2Q \frac{\Delta f}{f_0} \right)^2 - B \right]^2 + (\rho + 1)^2 - B^2}} \right]^m \\ &\frac{\Delta f}{f_0} = \pm \frac{1}{2Q} \sqrt{B} \pm \left[(\rho + 1)^2 \left(\frac{E_0}{E} \right)^{\frac{2}{m}} - (\rho + 1)^2 + B^2 \right]^{\frac{1}{2}} \\ &\phi = m \tan^{-1} \left[-\frac{2Q \frac{\Delta f}{f_0} \left(\sqrt{\frac{Q_1}{Q_2}} + \sqrt{\frac{Q_2}{Q_1}} \right)}{(\rho + 1)^2 - \left(2Q \frac{\Delta f}{f_0} \right)^2} \right] \end{split}$$

For overcoupled circuits

Location of peaks:
$$\left(\frac{\Delta f}{f_0}\right)_{peak} = \pm \frac{\sqrt{B}}{2Q} = \pm \frac{1}{2}\sqrt{k^2 - \frac{1}{2}\left(\frac{1}{Q_1^2} + \frac{1}{Q_2^2}\right)}$$

Amplitude of peaks: $\left(\frac{E}{E_0}\right)_{peak} = \left[\frac{p+1}{\sqrt{(p+1)^2 - B^2}}\right]^m$

Case 3: Peaks just converged to a single peak


Here
$$B=0$$
 or $k^2=\frac{1}{2}\left(\frac{1}{Q_1^2}+\frac{1}{Q_2^2}\right)$
$$\frac{E}{E_o}=\left[\frac{2}{\sqrt{\left(2Q'\frac{\Delta f}{f_0}\right)^4+4}}\right]^m \; ; \quad \frac{\Delta f}{f_0}=\pm\frac{\sqrt{2}}{4}\left(\frac{1}{Q_1}+\frac{1}{Q_2}\right)^{\frac{4}{M}}\frac{\left(\frac{E_0}{E}\right)^{\frac{2}{m}}-1}{\left(\frac{E_0}{E}\right)^{\frac{2}{m}}-1}$$


$$\phi=m \; tan^{-1}\left[-\frac{4Q'\frac{\Delta f}{f_0}}{2-\left(2Q'\frac{\Delta f}{f_0}\right)^2}\right] \qquad \text{The curves of Figs. 6 and 7 may be applied to this case, using the value } p=1, \text{ and substituting } Q' \text{ for } Q.$$

$$\phi = m \tan^{-1} \left[-\frac{4Q' \frac{\Delta f}{f_0}}{2 - \left(2Q' \frac{\Delta f}{f_0}\right)^2} \right]$$

15. T $-\pi$ or Y $-\Delta$ transformation

The two networks are equivalent, as far as conditions at the terminals are concerned, provided the following equations are satisfied. Either the impedance equations or the admittance equations may be used.

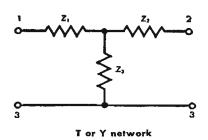

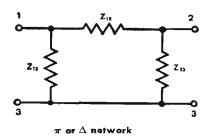

Impedance equations

$$Z_{12} = \frac{Z_1 Z_2 + Z_1 Z_3 + Z_2 Z_3}{Z_3}$$

$$Z_{13} = \frac{Z_1 Z_2 + Z_1 Z_3 + Z_2 Z_3}{Z_2}$$

$$Z_{23} = \frac{Z_1 Z_2 + Z_1 Z_3 + Z_2 Z_3}{Z_1}$$

$$Z_1 = \frac{Z_1 Z_2 + Z_1 Z_3 + Z_2 Z_3}{Z_1 Z_2 Z_3}$$

$$Z_2 = \frac{Z_1 Z_2 Z_2 Z_2 Z_3}{Z_1 Z_2 Z_2 Z_3}$$

$$Z_3 = \frac{Z_1 Z_2 Z_2 Z_3}{Z_1 Z_2 Z_2 Z_3}$$

$$Z_3 = \frac{Z_1 Z_2 Z_2 Z_3}{Z_1 Z_2 Z_2 Z_3}$$

Admittance equations

$$Y_{12} = \frac{Y_1 Y_2}{Y_1 + Y_2 + Y_3}$$

$$Y_{13} = \frac{Y_1 Y_3}{Y_1 + Y_2 + Y_3}$$

$$Y_{23} = \frac{Y_2 Y_3}{Y_1 + Y_2 + Y_3}$$

$$Y_1 = \frac{Y_{12} Y_{13} + Y_{12} Y_{23} + Y_{13} Y_{23}}{Y_{23}}$$

$$Y_2 = \frac{Y_{12} Y_{13} + Y_{12} Y_{23} + Y_{13} Y_{23}}{Y_{13}}$$


$$Y_3 = \frac{Y_{12} Y_{13} + Y_{12} Y_{23} + Y_{13} Y_{23}}{Y_{12}}$$

16. Amplitude modulation

In design work, usually the entire modulation is assumed to be in M_1 . Then M_2 , M_3 , etc, would be neglected in the formulas below.

When the expression $(1 + M_1 + M_2 + \ldots)$ is used, it is assumed that ω_1 , ω_2 , etc, are incommensurate.

$$i = I[1 + M_1 \cos (\omega_1 t + \phi_1) + M_2 \cos (\omega_2 t + \phi_2) + \ldots] \sin (\omega_0 t + \phi_0)$$

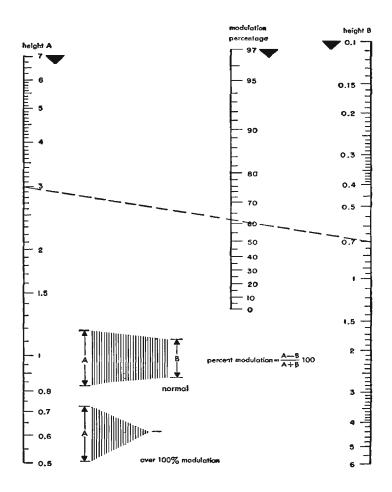


To determine the modulation percentage from an oscillogram of type illustrated apply measurements A and B to scales A and B and read percentage from center scale. Example: A = 3 inches, B = 0.7 inches—Modulation 62%. Any units of measurement may be used.

Fig. 8—Modulation percentage from oscillograms.

$$= I \left\{ \sin \left(\omega_0 t + \phi_0 \right) + \frac{M_1}{2} \left[\sin \left(\overline{\omega_0 + \omega_1} t + \phi_0 + \phi_1 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 - \omega_1} t + \phi_0 - \phi_1 \right) \right] + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\sin \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\cos \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\cos \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\cos \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\cos \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[\cos \left(\overline{\omega_0 + \omega_2} t + \phi_0 + \phi_2 \right) + \frac{M_2}{2} \left[$$

Percent modulation may be measured by means of an oscilloscope, the modulated carrier wave being applied to the vertical plates and the modulating voltage wave to the horizontal plates. The resulting trapezoidal pattern and a nomograph for computing percent modulation are shown in Fig. 8. The dimensions A



and B in that figure are proportional to the crest amplitude and trough amplitude, respectively.

Peak voltage at crest:
$$V_{crest} = V_{carrier, rms} (1 + M_1 + M_2 + ...)\sqrt{2}$$

Kilovolt-amperes at crest:
$$kva_{crest} = kva_{carrier} (1 + M_1 + M_2 + ...)^2$$

Average kilovolt-amperes over a number of cycles of lowest modulation frequency:

$$kva_{average} = kva_{carrier} \left(1 + \frac{M_1^2}{2} + \frac{M_2^2}{2} + \dots \right)$$

Effective current of the modulated wave:

$$I_{eff} = I_{carrier, rms} \sqrt{1 + \frac{M_1^2}{2} + \frac{M_2^2}{2} + \dots}$$

17. Elementary R-C, R-L, and L-C filters

Simple attentuating sections of broad frequency discriminating characteristics, as used in power supplies, grid-bias feed, etc. The output load impedance is assumed to be high compared to the impedance of the shunt element of the filter.

Electrical circuit formulas

continued

diagram	type	time constant or resonant freq	formula and approximation
E., C E.,	low-pass R — C	T = RC	$\frac{E_{out}}{E_{in}} = \frac{1}{\sqrt{1 + \omega^2 T^2}} \approx \frac{1}{\omega T}$
E _h R E _m	high-pass R — C	T = RC	$\frac{E_{out}}{E_{in}} = \frac{1}{\sqrt{1 + \frac{1}{\omega^2 T^2}}} \approx \omega T$
E _{in} R E _{oo}	low-pass R — L	$T = \frac{L}{R}$	$\frac{E_{out}}{E_{in}} = \frac{1}{\sqrt{1 + \omega^2 T^2}} \approx \frac{1}{\omega T}$
€ _{In} L B E _{In}	high-pass R — L	$T = \frac{L}{R}$	$\frac{E_{out}}{E_{in}} = \frac{1}{\sqrt{1 + \frac{1}{\omega^2 T^2}}} \approx \omega T$
E., C E.	low-pass L — C	$f_0 = \frac{0.1592}{\sqrt{LC}}$	$\frac{E_{out}}{E_{in}} = \frac{1}{\omega^2 LC - 1} = \frac{1}{\frac{f^2}{f_0^2 - 1}} \approx \frac{1}{\omega^2 LC} = \frac{f_0^2}{f^2}$
E _w 19 E _w	high-pass L — C	$f_0 = \frac{0.1592}{\sqrt{LC}}$	$\frac{E_{out}}{E_{in}} = \frac{1}{\frac{1}{\omega^2 LC} - 1} = \frac{1}{\frac{f_0^2}{f^2} - 1} \approx \omega^2 LC = \frac{f^2}{f_0^2}$

R in ohms

L in henries C in farads (1 μ f = 10⁻⁶ farad)

T= time constant (seconds) $f_0=$ resonant frequency (cps) $\omega=2\pi f$

$$2\pi = 6.28$$

$$\frac{1}{2}$$
 = 0.1592

$$4\pi^2 = 39.5$$

$$2\pi = 6.28$$
 $\frac{1}{2\pi} = 0.1592$ $4\pi^2 = 39.5$ $\frac{1}{4\pi^2} = 0.0253$

The relationships for low-pass filters are plotted in Figs. 9 and 10.

Examples

1. Low-pass R-C filters

a.
$$R = 100,000$$
 ohms, $C = 0.1 \times 10^{-6}$ (0.1 μ f)

Then
$$T = RC = 0.01$$
 second
At $f = 100$ cps, $\frac{E_{out}}{E_{fo}} = 0.16$ -

At
$$f = 30,000$$
 cps, $\frac{E_{out}}{E_{in}} = 0.00053$

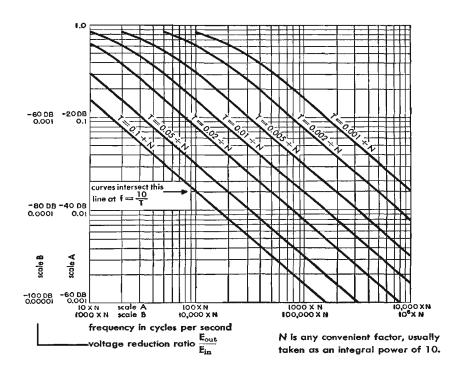


Fig. 9—Low-pass R-C and R-L filters.

b.
$$R = 1,000 \text{ ohms}, C = 0.001 \times 10^{-6}$$

 $T = 1 \times 10^{-6} \text{ second} = 0.1 \div N, \text{ where } N = 10^{5}$
At $f = 10 \text{ megacycles} = 100 \times N, \frac{E_{out}}{E_{in}} = 0.016 - 10^{5}$

2. Low-pass L - C filter

At
$$f = 120$$
 cps, required $\frac{E_{out}}{E_{in}} = 0.03$

Then from curves: $LC = 6 \times 10^{-5}$ approximately. Whence, for $C = 4 \mu f$, we require L = 15 henries.

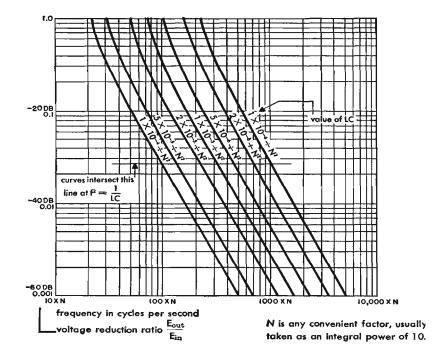


Fig. 10-Low-pass L-C filters.

18. Transients

The complete transient in a linear network is, by the principle of superposition, the sum of the individual transients due to the store of energy in each inductor and capacitor and to each external source of energy connected to the network. To this is added the steady state condition due to each external source of energy. The transient may be computed as starting from any arbitrary time t=0 when the initial conditions of the energy of the network are known.

Convention of signs: In the following formulas, one direction of current is assumed to be positive, and any emf on a capacitor or in an external source, tending to produce a current in the positive direction, is designated as positive. In the case of the charge of a capacitor, this results in the capacitor voltage being the negative of the value sometimes conventionally used, wherein the junction of the source and the capacitor is assumed to be grounded and potentials are computed with respect to ground.

Time constant (designated T): of the discharge of a capacitor through a resistor is the time t_2-t_1 required for the voltage or current to decay to $\frac{1}{\epsilon}$ of its value at time t_1 . For the charge of a capacitor the same definition applies, the voltage "decaying" toward its steady state value. The time constant of discharge or charge of the current in an inductor through a resistor follows an analogous definition.

Energy stored in a capacitor $=\frac{1}{2}$ CE² joules (watt-seconds). Energy stored in an inductor $=\frac{1}{2}$ LI² joules (watt-seconds).

$$\epsilon = 2.718$$
 $\frac{1}{\epsilon} = 0.3679$ $\log_{10}\epsilon = 0.4343$ T and t in seconds

R in ohms L in henries C in farads E in volts I in amperes


Capacitor charge and discharge

Closing of switch occurs at time t=0Initial conditions (at t=0): Battery $=E_b$; $e_c=E_{o}$. Steady state (at $t=\infty$): i=0; $e_c=-E_{b}$.

Transient:

$$i = \frac{E_b + E_0}{R} e^{-\frac{t}{RC}} = I_0 e^{-\frac{t}{RC}}$$

$$\log_{10}\left(\frac{i}{I_0}\right) = -\frac{0.4343}{RC}t$$



$$e_{c} = E_{0} - \frac{1}{C} \int_{0}^{t} i dt = E_{0} e^{-\frac{t}{RC}} - E_{b} \left(1 - e^{-\frac{t}{RC}} \right)$$

Time constant: T = RC

Fig. 11 shows current
$$\frac{i}{I_0} = \epsilon^{-\frac{t}{T}}$$

Fig. 11 shows discharge (for
$$E_b=0$$
) $\frac{\mathrm{e}_c}{E_0}=\epsilon^{-\frac{t}{T}}$

Fig. 12 shows charge (for
$$E_0 = 0$$
) $-\frac{e_c}{E_b} = \left(1 - e^{-\frac{t}{T}}\right)$

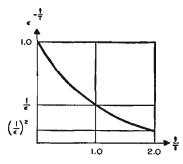


Fig. 11.

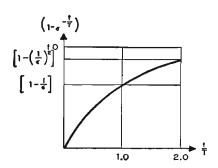


Fig. 12.

These curves are plotted on a larger scale in Fig. 13.

Two capacitors

Closing of switch occurs at time t = 0Initial conditions (at t = 0):

$$e_1 = E_1$$
; $e_2 = E_2$.


Steady state (at
$$t = \infty$$
):

$$e_1 = E_f$$
; $e_2 = -E_f$; $i = 0$.

$$E_f = \frac{E_1C_1 - E_2C_2}{C_1 + C_2}$$
 $C' = \frac{C_1C_2}{C_1 + C_2}$

Transient:

$$i = \frac{E_1 + E_2}{P} \, \epsilon^{-\frac{t}{RC'}}$$



$$e_{1} = E_{f} + (E_{1} - E_{f}) \ e^{-\frac{t}{RC'}} = E_{1} - (E_{1} + E_{2}) \frac{C'}{C_{1}} \left(1 - e^{-\frac{t}{RC'}}\right)$$


$$e_{2} = -E_{f} + (E_{2} + E_{f}) \ e^{-\frac{t}{RC'}} = E_{2} - (E_{1} + E_{2}) \frac{C'}{C_{2}} \left(1 - e^{-\frac{t}{RC'}}\right)$$

Original energy = $\frac{1}{2}$ (C₁E₁² + C₂E₂²) joules

Final energy = $\frac{1}{2}$ (C₁ + C₂) E_f^2 joules

Loss of energy =
$$\int_0^\infty i^2 R dt = \frac{1}{2} C' (E_1 + E_2)^2 \text{ joules}$$

(Loss is independent of the value of R.)

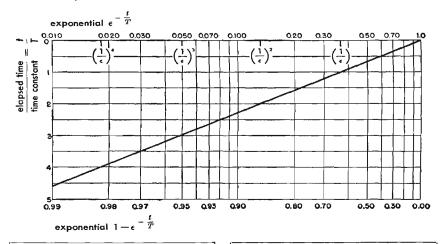

Use exponential $\epsilon^{-\frac{t}{T'}}$ for charge or discharge of capacitor or discharge of inductor:

initial current

discharge of capacitor:

voltage at time t

Use exponential $1 - \epsilon^{-\frac{t}{T}}$ for charge of capacitor:

voltage at time f
battery or final voltage
charge of inductor:

current at time f

Fig. 13—Exponential functions $\epsilon^{-\frac{t}{T}}$ and $1-\epsilon^{-\frac{t}{T}}$ applied to transients in R-C and L-R circuits.

Inductor charge and discharge

Initial conditions (at t = 0): Battery = E_{bi} , $i = I_0$

Steady state (at $t = \infty$): $i = I_f = \frac{E_b}{R}$

Transient:

$$i = I_f \left(1 - \epsilon^{-\frac{Rt}{L}} \right) + I_0 \epsilon^{-\frac{Rt}{L}}$$

$$e_L = -L \frac{di}{dt} = -(E_b - RI_0) \epsilon^{-\frac{Ri}{L}}$$

Time constant: $T = \frac{L}{R}$

Fig. 11 shows discharge (for
$$E_b = 0$$
) $\frac{i}{I_0} = e^{-\frac{t}{T}}$

Fig. 12 shows charge (for
$$I_0=0$$
) $\frac{i}{I_f}=\left(1-\epsilon^{-\frac{t}{T}}\right)$

These curves are plotted on a larger scale in Fig. 13.

Series circuit of R, L, and C charge and discharge

Initial conditions (at t = 0):

Battery = E_b ; $e_c = E_0$; $i = I_0$ Steady state (at $t = \infty$): i = 0; $e_c = -E_b$

Differential equation:


$$E_b + E_0 - \frac{1}{C} \int_0^t i dt - Ri - L \frac{di}{dt} = 0$$


whence
$$L \frac{d^2i}{dt^2} + R \frac{di}{dt} + \frac{i}{C} = 0$$

Solution of equation:

$$i = e^{-\frac{Rt}{2L}} \left[\frac{2(E_b + E_0) - RI_0}{R\sqrt{D}} \sinh \frac{Rt}{2L} \sqrt{D} + I_0 \cosh \frac{Rt}{2L} \sqrt{D} \right]$$

where
$$D = 1 - \frac{4L}{R^2C}$$



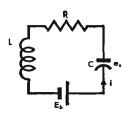

Case 1: When $\frac{L}{R^2C}$ is small

$$i = \frac{1}{(1 - 2A - 2A^2)} \left\{ \left[\frac{E_b + E_0}{R} - I_0 (A + A^2) \right] e^{-\frac{t}{RC}(1 + A + 2A^2)} + \left[I_0 (1 - A - A^2) - \frac{E_b + E_0}{R} \right] e^{-\frac{Rt}{L}(1 - A - A^2)} \right\}$$
where $A = \frac{L}{R^2C}$

For practical purposes, the terms A^2 can be neglected when A < 0.1. The terms A may be neglected when A < 0.01.

Case 2: When
$$\frac{4L}{R^2C} < 1$$
 for which \sqrt{D} is real
$$i = \frac{e^{-\frac{Rt}{2L}}}{\sqrt{D}} \left\{ \left[\frac{E_b + E_0}{R} - \frac{I_0}{2} \left(1 - \sqrt{D} \right) \right] e^{\frac{Rt}{2L}\sqrt{D}} + \left[\frac{I_0}{2} \left(1 + \sqrt{D} \right) - \frac{E_b + E_0}{R} \right] e^{-\frac{Rt}{2L}\sqrt{D}} \right\}$$

Case 3: When D is a small positive or negative quantity

$$i = \epsilon^{-\frac{Rt}{2L}} \left\{ \frac{2(E_b + E_0)}{R} \left[\frac{Rt}{2L} + \frac{1}{6} \left(\frac{Rt}{2L} \right)^3 D \right] + I_o \left[1 - \frac{Rt}{2L} + \frac{1}{2} \left(\frac{Rt}{2L} \right)^2 D - \frac{1}{6} \left(\frac{Rt}{2L} \right)^3 D \right] \right\}$$

This formula may be used for values of D up to ± 0.25 , at which values the error in the computed current i is approximately 1 percent of I_0 or of

$$\frac{E_b + E_0}{R}$$

Case 3a: When $\frac{4L}{R^2C} = 1$ for which D = 0, the formula reduces to

$$i = e^{-\frac{Rt}{2L}} \left[\frac{E_b + E_0}{R} \frac{Rt}{L} + I_0 \left(1 - \frac{Rt}{2L} \right) \right]$$

or $i=i_1+i_2$, plotted in Fig. 14. For practical purposes, this formula may be used when $\frac{4L}{R^2C}=1\pm0.05$ with errors of 1 percent or less.

Case 4: When $\frac{4L}{R^2C} > 1$ for which \sqrt{D} is imaginary

$$i = e^{-\frac{Rt}{2L}} \left\{ \left[\frac{E_b + E_0}{\omega_0 L} - \frac{RI_0}{2\omega_0 L} \right] \sin \omega_0 t + I_0 \cos \omega_0 t \right\}$$

$$=I_m\epsilon^{-\frac{Rt}{2L}}\sin(\omega_0t+\psi)$$

where
$$\omega_0 = \sqrt{\frac{1}{LC} - \frac{R^2}{4L^2}}$$

$$I_m = \frac{1}{\omega_0 L} \sqrt{\left(E_b + E_0 - \frac{RI_0}{2}\right)^2 + \omega_0^2 L^2 I_0^2} \quad \text{-0.5}$$

$$\psi = \tan^{-1} \frac{\omega_0 L I_0}{E_b + E_0 - \frac{RI_0}{2}}$$




Fig. 14—Transients for $\frac{4L}{R^2C} = 1$

The envelope of the voltage wave across the inductor is:

$$\pm \epsilon^{-\frac{Rt}{2L}} \frac{1}{\omega_0 \sqrt{LC}} \sqrt{\left(E_b + E_0 - \frac{RI_0}{2}\right)^2 + \omega_0^2 L^2 I_0^2}$$

Example: Relay with transient suppressing capacitor.


Switch closed till time t = 0, then opened.

Let L = 0.10 henries, $R_1 = 100$ ohms,

$$E = 10 \text{ volts}$$

Suppose we choose $C = 10^{-6}$ farads, $R_2 = 100$ ohms.

Then
$$R=200$$
 ohms, $I_0=0.10$ amperes, $E_0=10$ volts, $\omega_0=3\times 10^3$, $f_0=480$ cps

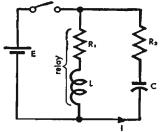

Maximum peak voltage across L (envelope at t=0) is approximately 30 volts. Time constant of decay of envelope is 0.001 second.

If it had been desired to make the circuit just non-oscillating, (Case 3a):


$$\frac{4L}{R^2C}$$
 = 1 or R = 630 ohms for C = 10^{-6} farads.

$$R_2 = 530$$
 ohms.

Initial voltage at t = 0, across L is $-E_0 + RI_0 = 53$ volts.

Series circuit of R, L, and C with sinusoidal applied voltage

By the principle of superposition, the transient and steady state conditions are the same for the actual circuit and the equivalent circuit shown in the accompanying illustrations, the closing of the switch occurring at time t=0. In the equivalent circuit, the steady state is due to the source e acting continuously from time $t=-\infty$, while the transient is due to short circuiting the source —e at time t=0.




actual circuit

Source:
$$e = E \sin (\omega t + \alpha)$$

Steady state:
$$i = \frac{e}{7} \angle -\phi = \frac{E}{7} \sin (\omega t + \alpha - \phi)$$

where

$$Z = \sqrt{R^2 + \left(\omega L - \frac{1}{\omega C}\right)^2} \quad ; \quad \tan \, \phi = \frac{\omega^2 L C - 1}{\omega C R}$$



equivalent circuit

The transient is found by determining current $i=I_0$ and capacitor voltage $e_a=E_0$ at time t=0, due to the source -e. These values of I_0 and E_0 are then substituted in the equations of Case 1, 2, 3, or 4, above, according to the values of R, L, and C.

At time t = 0, due to the source -e:

$$i = I_0 = -\frac{E}{7} \sin (\alpha - \phi)$$

$$e_c = E_0 = \frac{-E}{\omega CZ} \cos (\alpha - \phi)$$

This form of analysis may be used for any periodic applied voltage e. The steady-state current and the capacitor voltage for an applied voltage —e are determined, the periodic voltage being resolved into its harmonic components for this purpose, if necessary. Then the instantaneous values $i=I_0$ and $e_c=E_0$ at the time of closing the switch are easily found, from which the transient is determined. It is evident, from this method of analysis, that the wave form of the transient need bear no relationship to that of the applied voltage, depending only on the constants of the circuit and the hypothetical initial conditions I_0 and E_0 .

19. Effective and average values of alternating current

(Similar equations apply to a-c voltages)

$$i = I \sin \omega t$$

Average value
$$I_{av} = \frac{2}{\pi} I$$

which is the direct current which would be obtained were the original current fully rectified, or approximately proportional to the reading of a rectifiertype meter.

Effective or root-mean-square (rms) value
$$I_{\it eff}=rac{I}{\sqrt{2}}$$

which represents the heating or power effectiveness of the current, and is proportional to the reading of a dynamometer or thermal-type meter.

When

$$i = I_0 + I_1 \sin \omega_1 t + I_2 \sin \omega_2 t + \dots$$

$$I_{eff} = \sqrt{I_0^2 + \frac{1}{2} (I_1^2 + I_2^2 + \dots)}$$

Note: The average value of a complex current is *not* equal to the sum of the average values of the components.

20. Constants of long transmission lines

$$\alpha = \sqrt{\frac{1}{2} \left\{ \sqrt{(R^2 + \omega^2 L^2) (G^2 + \omega^2 C^2) + GR - \omega^2 LC} \right\}}$$

$$\beta = \sqrt{\frac{1}{2} \left\{ \sqrt{(R^2 + \omega^2 L^2) (G^2 + \omega^2 C^2) - GR + \omega^2 LC} \right\}}$$

where

$$\alpha$$
 = attenuation constant in nepers

$$\beta$$
 = phase constant in radians

$$R = resistance constant in ohms$$

$$G = conductance constant in mhos$$

$$C = capacitance constant in farads$$

$$\omega = 2\pi \times \text{frequency in cycles per second}$$

Using values per mile for R, G, L, and C, the db loss per mile will be 8.686 α and the wavelength in miles will be $\frac{2\pi}{R}$.

per unit length of line.

If vector formulas are preferred, α and β may be determined from the following:

$$\alpha + j\beta = \sqrt{ZY} = \sqrt{(R + j\omega L) (G + j\omega C)}$$

where all constants have the same meaning as above.

Characteristic impedance

$$Z_0 = \sqrt{\frac{Z}{Y}} = \sqrt{\frac{R + j\omega L}{G + j\omega C}}$$

Note: For radio frequency applications, see formulas under R-F Transmission Line Data.

Attenuators

An attenuator is a network designed to introduce a known loss when working between resistive impedances Z_1 and Z_2 to which the input and output impedances of the attenuator are matched. Either Z_1 or Z_2 may be the source and the other the load. The attenuation of such networks expressed as a power ratio is the same regardless of the direction of working.

Three forms of resistance network which may be conveniently used to realize these conditions are shown on page 106. These are the T section, the π section, and the Bridged-T section. Equivalent balanced sections also are shown. Methods are given for the computation of attenuator networks, the hyperbolic expressions giving rapid solutions with the aid of tables of hyperbolic functions on pages 313 to 315. Tables of the various types of attenuators are given on pages 108 to 114.

In the formulas

 Z_1 and Z_2 are the terminal impedances (resistive) to which the attenuator is matched.

 ${\it N}$ is the ratio of the power absorbed by the attenuator from the source to the power delivered to the load.

K is the ratio of the attenuator input current to the output current into the load. When $Z_1 = Z_2$, $K = \sqrt{N}$.

Attenuation in decibels = $10 \log_{10} N$

Attenuation in nepers = $\theta = \frac{1}{2} \log_e N$

For a table of decibels versus power and voltage or current ratio, see page 34. Factors for converting decibels to nepers, and nepers to decibels, are given at the foot of that table.

General remarks

The formulas and figures for errors, given in Tables IV to VIII, are based on the assumption that the attenuator is terminated approximately by its proper terminal impedances Z_1 and Z_2 . They hold for deviations of the attenuator arms and load impedances up to \pm 20 percent or somewhat more. The error due to each element is proportional to the deviation of the element, and the total error of the attenuator is the sum of the errors due to each of the several elements.

When any element or arm R has a reactive component ΔX in addition to a resistive error ΔR , the errors in input impedance and output current are

$$\Delta Z = A(\Delta R + j\Delta X)$$

$$\frac{\Delta i}{i} = B\left(\frac{\Delta R + j\Delta X}{R}\right)$$

where A and B are constants of proportionality for the elements in question. These constants can be determined in each case from the figures given for errors due to a resistive deviation ΔR .

The reactive component ΔX produces a quadrature component in the output current, resulting in a phase shift. However, for small values of ΔX , the error in insertion loss is negligibly small.

For the errors produced by mismatched terminal load impedance, refer to Case 1, page 105.

Ladder attenuator

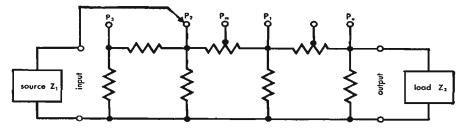


Fig. 15-Ladder attenuator.

Ladder attenuator, Fig. 15, input switch points P_0 , P_1 , P_2 , P_3 at shunt arms. Also intermediate point P_m tapped on series arm. May be either unbalanced, as shown, or balanced.

Ladder, for design purposes, Fig. 16, is resolved into a cascade of π sections by imagining each shunt arm split into two resistors. Last section matches Z_2 to $2Z_1$. All other sections are symmetrical, matching impedances $2Z_1$, with a

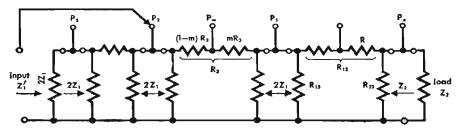


Fig. 16—Ladder attenuator resolved into a cascade of π sections.

terminating resistor $2Z_1$ on the first section. Each section is designed for the loss required between the switch points at the ends of that section.

Input to
$$P_0$$
: Loss, db = $10 \log_{10} \frac{(2Z_1 + Z_2)^2}{4Z_1Z_2}$

Input impedance
$$Z_1' = \frac{Z_2}{2}$$

Output impedance =
$$\frac{Z_1Z_2}{Z_1 + Z_2}$$

Input to P_1 , P_2 , or P_3 : Loss, db=3 db+sum of losses of π sections between input and output. Input impedance $Z_1'=Z_1$

Input to P_m (on a symmetrical π section):

$$\frac{e_0}{e_m} = \frac{1}{2} \frac{m(1-m)(K-1)^2 + 2K}{K-m(K-1)}$$

where

 $e_0 = \text{output voltage when } m = 0 \text{ (Switch on } P_1).$

 $e_m = \text{output voltage with switch on } P_m$.

and

 $K = \text{current ratio of the section (from } P_1 \text{ to } P_2).$ K > 1.

Input impedance
$$Z_1' = Z_1 \left[m(1-m) \frac{(K-1)^2}{K} + 1 \right]$$

Max
$$Z_1' = Z_1 \left[\frac{(K-1)^2}{4K} + 1 \right]$$
 for $m = 0.5$.

The unsymmetrical last section may be treated as a system of voltage dividing resistors. Solve for the resistance R from P_0 to the tap, for each value of

output voltage with input on P_0 output voltage with input on tap

A useful case: $Z_1 = Z_2 = 500$ ohms.

Then loss on P_0 is 3.52 db.

Let the last section be designed for loss of 12.51 db.

Then

 $R_{13} = 2444$ ohms (shunted by 1000 ohms)

 $R_{23} = 654$ ohms (shunted by 500 ohms)

 $R_{12} = 1409$ ohms.

The table shows the location of the tap and the input and output impedances for several values of loss, relative to the loss on P_0 .

rélative loss db	tap R ohms	input impedance ohms	output impedance ohms
o	0	250	250
2	1 <i>7</i> 0	368	304
4	375	478	353
6	615	562	394
8	882	600	428
10	11 <i>57</i>	577	4.54
12	1409	500	473

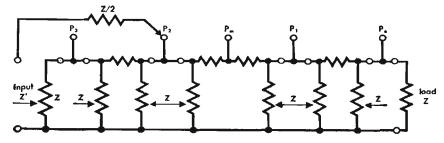


Fig. 17—A variation of the ladder attenuator, useful when $Z_1=Z_2=Z$. Simpler in design, with improved impedance characteristics, but having minimum insertion loss 2.5 db higher than attenuator of Fig. 16. All π sections are symmetrical.

Input to P_0 : Output impedance = 0.6 Z (See Fig. 17.)

Input to P_0 , P_1 , P_2 , or P_3 : Loss = 6 db + sum of losses of π sections between input and output. Input impedance = Z

Input to
$$P_m$$
: $\frac{e_0}{e_m} = \frac{1}{4} \frac{m(1-m)(K-1)^2 + 4K}{K-m(K-1)}$

Input impedance
$$Z' = Z \left[\frac{m(1-m)(K-1)^2}{2K} + 1 \right]$$

Max
$$Z' = Z \left[\frac{(K-1)^2}{8K} + 1 \right]$$
 for $m = 0.5$.

Effect of incorrect load impedance on operation of an attenuator

In the applications of attenuators the question frequently arises as to the effect upon the input impedance and the attenuation by the use of a load impedance which is different from that for which the network was designed. The following results apply to all resistive networks which, when operated between resistive impedances Z_1 and Z_2 , present matching terminal impedances Z_1 and Z_2 , respectively. The results may be derived in the general case by the application of the network theorems, and may be readily confirmed mathematically for simple specific cases such as the T section.

For the designed use of the network, let

 Z_1 = input impedance of properly terminated network

 Z_2 = load impedance which properly terminates the network

N =power ratio from input to output

K = current ratio from input to output

$$K = \frac{i_1}{i_2} = \sqrt{\frac{NZ_2}{Z_1}}$$
 (different in the two directions of operation except when

 $Z_2 = Z_1$

For the actual conditions of operation, let

$$(Z_2 + \Delta Z_2) = Z_2 \left(1 + \frac{\Delta Z_2}{Z_2}\right) = \text{actual load impedance}$$

$$(Z_1 + \Delta Z_1) = Z_1 \left(1 + \frac{\Delta Z_1}{Z_1}\right) = \text{resulting input impedance}$$

$$(K + \Delta K) = K\left(1 + \frac{\Delta K}{K}\right) = \text{resulting current ratio.}$$

While Z_1 , Z_2 , and K are restricted to real quantities by the assumed nature of the network, ΔZ_2 is not so restricted, e.g.,

$$\Delta Z_2 = \Delta R_2 + j \Delta X_2$$

As a consequence ΔZ_1 and ΔK can become imaginary or complex. Furthermore ΔZ_2 is not restricted to small values.

The results for the actual conditions are

$$\frac{\Delta Z_1}{Z_1} = \frac{2\frac{\Delta Z_2}{Z_2}}{2N + (N-1)\frac{\Delta Z_2}{Z_2}} \quad \text{and} \quad \frac{\Delta K}{K} = \left(\frac{N-1}{2N}\right)\frac{\Delta Z_2}{Z_2}$$

Certain special cases may be cited

Case 1: For small
$$\frac{\Delta Z_2}{Z_2}$$

$$\frac{\Delta Z_1}{Z_1} = \frac{1}{N} \frac{\Delta Z_2}{Z_2} \quad \text{or} \quad \Delta Z_1 = \frac{1}{K^2} \Delta Z_2 \qquad \frac{\Delta i_2}{i_2} = -\frac{1}{2} \frac{\Delta Z_2}{Z_2}$$

but the error in insertion power loss of the attenuator is neglibly small.

Case 2: Short-circuited output
$$\frac{\Delta Z_1}{Z_1} = \frac{-2}{N+1}$$

or input impedance
$$= \left(\frac{N-1}{N+1}\right) Z_1 = Z_1 \tanh \theta$$

where heta is the designed attenuation in nepers.

Case 3: Open-circuited output
$$\frac{\Delta Z_1}{Z_1} = \frac{2}{N-1}$$

or input impedance =
$$\left(\frac{N+1}{N-1}\right)Z_1 = Z_1 \cot \theta$$

Case 4: For N=1 (possible only when $Z_1=Z_2$ and directly connected)

$$\frac{\Delta Z_1}{Z_1} = \frac{\Delta Z_2}{Z_2}$$
 and $\frac{\Delta K}{K} = 0$

Case 5: For large N
$$\frac{\Delta K}{K} = \frac{1}{2} \frac{\Delta Z_2}{Z_2}$$

Attenuator

	configuration			
description	unbalanced balanced			
Unbalanced T and balanced H see Table VIII	$\begin{array}{c c} R_1 & R_2 \\ \hline Z_1 & Z_2 \\ \hline \end{array}$	$ \begin{array}{cccccccccccccccccccccccccccccccccccc$		
Symmetrical T and H $(Z_1 = Z_2 = Z)$ see Table IV	R_1 R_1 R_2 R_3 R_3 R_3	$ \begin{array}{c c} & & & & \\ \hline & &$		
Minimum loss pad matching Z_1 and Z_2 $(Z_1 > Z_2)$ see Table VII	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$ \begin{array}{c c} C & R_1 \\ \hline Z_1 & R_2 \\ \hline R_1 \\ \hline Z_2 \end{array} $		
Unbalanced π and balanced 0	$\begin{array}{c c} R_3 \\ \hline \\ Z_1 \\ \hline \\ R_1 \\ \hline \\ R_2 \\ \hline \end{array}$	$ \begin{array}{c c} Z_1 & R_2 \\ \hline R_1 & R_2 \\ \hline R_2 & R_2 \end{array} $		
Symmetrical π and 0 ($Z_1 = Z_2 = Z$) see Table V	$Z \longrightarrow R_1$ $Z \longrightarrow R_2$	$ \begin{array}{cccccccccccccccccccccccccccccccccccc$		
Bridged T and bridged H see Table VI	R_{1} R_{2} R_{3} R_{2} R_{3}	$ \begin{array}{c c} R_{\underline{A}} & & \\ \hline C & R_{\underline{1}} & R_{\underline{2}} & \\ \hline C & R_{$		

network design

see page 100 for symbols

design	formulas	
hyperbolic	arithmetical	checking formulas
$R_3 = \frac{\sqrt{Z_1 Z_2}}{\sinh \theta}$	$R_3 = \frac{2\sqrt{NZ_1Z_2}}{N-1}$	
$R_1 = \frac{Z_1}{\tanh \theta} - R_3$	$R_1 = Z_1 \left(\frac{N+1}{N-1} \right) - R_2$	
$R_2 = \frac{Z_2}{\tanh \theta} - R_3$	$R_2 = Z_2 \left(\frac{N+1}{N-1} \right) - R_3$	
$R_3 = \frac{Z}{\sinh \theta}$ $R_1 = Z \tanh \frac{\theta}{2}$	$R_{3} = \frac{2Z\sqrt{N}}{N-1} = \frac{2ZK}{K^{2}-1}$ $R_{1} = Z\frac{\sqrt{N-1}}{\sqrt{N+1}} = Z\frac{K-1}{K+1}$	$R_{1}R_{3} = \frac{Z^{2}}{1 + \cosh \theta} = Z^{2} \frac{2K}{(K+1)^{2}}$ $\frac{R_{1}}{R_{3}} = \cosh \theta - 1 = 2 \sinh^{2} \frac{\theta}{2}$ $= \frac{(K-1)^{2}}{2K}$ $Z = R_{1} \sqrt{1 + 2\frac{R_{3}}{R_{1}}}$
$\cosh \theta = \sqrt{\frac{Z_1}{Z_2}}$ $\cosh 2\theta = 2\frac{Z_1}{Z_2} - 1$	$R_{1} = Z_{1} \sqrt{1 - \frac{Z_{2}}{Z_{1}}}$ $R_{3} = \frac{Z_{2}}{\sqrt{1 - \frac{Z_{2}}{Z_{2}}}}$	$R_1 R_3 = Z_1 Z_2$ $\frac{R_1}{R_3} = \frac{Z_1}{Z_2} - 1$
$R_8 = \sqrt{Z_1 Z_2} \sinh \theta$ $\frac{1}{R_1} = \frac{1}{Z_1 \tanh \theta} - \frac{1}{R_8}$	$R_{3} = \frac{N-1}{2} \sqrt{\frac{Z_{1}Z_{2}}{N}}$ $\frac{1}{R_{1}} = \frac{1}{Z_{1}} \left(\frac{N+1}{N-1}\right) - \frac{1}{R_{3}}$	$N = \left(\sqrt{\frac{Z_1}{Z_2}} + \sqrt{\frac{Z_1}{Z_2} - 1}\right)^2$
$\frac{1}{R_2} = \frac{1}{Z_2 \tanh \theta} = \frac{1}{R_3}$ $R_3 = Z \sinh \theta$ $R_1 = \frac{Z}{\tanh \frac{\theta}{2}}$	$\frac{1}{R_2} = \frac{1}{Z_2} \left(\frac{N+1}{N-1} \right) - \frac{1}{R_8}$ $R_3 = Z \frac{N-1}{2\sqrt{N}} = Z \frac{K^2 - 1}{2K}$ $R_1 = Z \frac{\sqrt{N+1}}{\sqrt{N-1}} = Z \frac{K+1}{K-1}$	$R_1 R_3 = Z^2 (1 + \cosh \theta) = Z^2 \frac{(K+1)^2}{2K}$ $\frac{R_3}{R_1} = \cosh \theta - 1 = \frac{(K-1)^2}{2K}$ $Z = \frac{R_1}{\sqrt{1 + 2\frac{R_1}{R_3}}}$
	$R_1 \neq R_2 = Z$ $R_4 \neq Z(K-1)$ $R_3 = \frac{Z}{K-1}$	$R_3 R_4 = Z^2$ $\frac{R_4}{R_3} = (K - 1)^2$

Four-terminal networks: The hyperbolic formulas above are valid for passive linear four-terminal networks in general, working between input and output impedances matching the respective image impedances. In this case, z_1 and z_2 are the image impedances; z_1 , z_2 and z_3 become complex impedances; and z_3 the image transfer constant. z_3 z_4 where z_3 is the image attenuation constant and β is the image phase constant.

Table IV—Symmetrical T or H attenuator

Z = 500 ohms resistive (diagram page 106)

attenuation db	series arm R ₁ ohms	shunt arm R ₃	1000 R ₃	log ₁₀ R ₃
0.0	0.0	inf	0.0000	
0.2	5.8	21,700	0.0461	}
0.4	11.5	10,850	0.0921	
	1	. 0,200	0.0721	
0.6	17.3	7,230	0.1383	
0.8	23.0	5,420	0.1845	
1.0	28.8	4,330	0.2308	
		-		
2.0	57.3	2,152	0.465	
3.0	85.5	1,419	0.705	
4.0	113.1	1,048	0.954	
5.0	140.1	822	1.216	
6.0	166.1	669	1.494	2.826
7.0	191.2	558		2.747
8.0	215.3	473.1		2.675
9.0	238.1	405.9		2.608
10.0	259.7	351.4		2.546
12.0	299.2	268.1		2,428
14.0	333.7	207.8		2.318
	363.2	162.6		2.211
16.0	363.2	162.6		2.211
18.0	388.2	127.9		2.107
20.0	409.1	101.0		2.004
22.0	426.4	79.94		1.903
22.0	120.1	,,,,,		
24.0	440.7	63.35		1.802
26.0	452.3	50.24		1.701
28.0	461.8	39.87		1.601
30.0	469.3	31.65	į.	1.500
35.0	482.5	17.79		1.250
40.0	490.1	10.00]	1.000
				0.500
50.0	496.8	3.162	l	0.500
60.0	499.0	1.000	1	0.000
80.0	499.9	0.1000	!	1.000
100.0	500.0	0.01000	[-2.000
100.0	1 300.0 1	0.01000	I	1 2.000

Interpolation of symmetrical T or H attenuators

Column R_1 may be interpolated linearly. Do not interpolate R_3 column. For 0 to 6 db, interpolate the $\frac{1000}{R_3}$ column. Above 6 db, interpolate the column $\log_{10} R_3$ and determine R_3 from the result.


Errors in symmetrical T or H attenuators

Series arms R₁ and R₂ in error

Error in input impedances:

$$\Delta Z_1 = \Delta R_1 + \frac{1}{K^2} \Delta R_2$$
 and

$$\Delta Z_2 = \Delta R_2 + \frac{1}{K^2} \, \Delta R_1$$

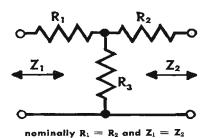

Error in insertion loss, db = $4\left(\frac{\Delta R_1}{Z_1} + \frac{\Delta R_2}{Z_2}\right)$, approximately.

Shunt arm R₃ in error (10 percent high)

designed loss, db	error in insertion loss, db	error in input impedance $\frac{\Delta Z}{Z}$ percent
0.2	-0.01	0.2
1	-0.05	1.0
6	-0.3	3.3
12	-0.5	3.0
20	-0.7	1.6
40	-0.8	0.2
100	-0.8	0.0

Error in input impedance: $\frac{\Delta Z}{Z} = 2 \frac{K - 1}{K(K + 1)} \frac{\Delta R_3}{R_3}$

Error in output current: $\frac{\Delta i}{i} = \frac{K - 1}{K + 1} \frac{\Delta R_3}{R_3}$

See General Remarks on page 101.

Attenuators

continued


Table V—Symmetrical π and 0 attenuators

The values of the series and shunt arms of these attenuators may be de-

termined from Table IV of symmetrical T attenuators by means of the following formulas.

Shunt arms:
$$R_{13} = R_{23} = R_1 + 2R_3 = \frac{Z^2}{R_1}$$

Series $R_{12} = R_1 \left(\frac{R_1}{R_2} + 2\right) = \frac{Z^2}{R_2}$



Error in loss, db = $-8 \frac{\Delta i_2}{i_2}$ (approximately)

$$=4\,\frac{K-1}{K+1}\left(-\,\frac{\Delta R_{13}}{R_{13}}-\frac{\Delta R_{23}}{R_{23}}+2\,\frac{\Delta R_{12}}{R_{12}}\right)$$

Error in input impedance:

$$\frac{\Delta Z'}{Z'} = \frac{K - 1}{K + 1} \left(\frac{\Delta R_{13}}{R_{13}} + \frac{1}{K^2} \frac{\Delta R_{23}}{R_{23}} + \frac{2}{K} \frac{\Delta R_{12}}{R_{12}} \right)$$

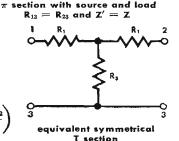


Table VI—Bridged T or H attenuator

Z=500 ohms resistive $R_1=R_2=500$ ohms (diagram page 106)

attenvation db	bridge arm R ₄ ohms	shunt arm R ₃ ohms	attenuation db	bridge arm R ₄ ohms	shunt arm R ₃ ohms
0.0	0.0		12.0	1,491	167.7
0.0	11.6	21,500	14.0	2,006	124.6
0.4	23.6	10,610	16.0	2,655	94.2
0.6	35.8	6,990	18.0	3,472	72.0
8.0	48.2	5,180	20.0	4,500	55.6
1.0	61.0	4,100	25.0	8,390	29.8
2.0	129.5	1,931	30.0	15,310	16.33
3.0	206.3	1,212	40.0	49,500	5.05
4.0	292.4	855	50.0	157,600	1.586
5.0	389.1	642	60.0	499,500	0.501
6,0	498	502	80.0	5.00 × 10 ⁶	0.0500
7.0	619	404	100.0	50.0 × 10 ⁶	0.0050
8.0	756	331			
9.0	909	275.0	1		1
10.0	1.081	231.2	1		1

Interpolation of bridged T or H attenuators

Bridge arm R_4 : Use the formula $log_{10} (R_4 + 500) = 2.699 + <math>\frac{db}{20}$ for Z = 500

ohms. However, if preferred, the tabular values of R_4 may be interpolated linearly, between 0 and 10 db only.

Shunt arm R_3 : Do not interpolate R_3 column. Compute R_3 by the formula

$$R_3 = \frac{10^6}{4R_4}$$
 for $Z = 500$ ohms.

Note: For attenuators of 60 db and over, the bridge arm R_4 may be omitted, provided a shunt arm is used having twice the resistance tabulated in the R_3 column. (This makes the input impedance 0.1 of 1 percent high at 60 db.)

Errors in bridged T or H attenuators

For resistance of any one arm 10 percent higher than the correct value

designed loss db	col 1* db	col 2* percent	col 3* percent
0.2	10.0	0.005	0.2
1	0.05	0.1	1.0
6	0.2	2.5	2.5
12	0.3	5.6	1.9
20	0.4	8.1	0.9
40	0.4	10	0.1
100	0.4	10	0.0

^{*} Refer to following tabulation.

element in error (10 percent high)	error in loss	error in terminal impedance	remarks
Series arm R_1 (analogous for arm R_2)	Zero	Col 2, for adjacent terminals	Error in impedance at op- posite terminals is zero
Shunt arm R ₈	-Col I	Col 3	Loss is lower than designed loss
Bridge arm R4	+Col 1	Col 3	Loss is higher than de-

Error in input impedance:
$$\frac{\Delta Z_1}{Z_1} = \left(\frac{K-1}{K}\right)^2 \frac{\Delta R_1}{R_1} + \frac{K-1}{K^2} \left(\frac{\Delta R_3}{R_3} + \frac{\Delta R_4}{R_4}\right)$$

For $\frac{\Delta Z_2}{Z_2}$ use subscript 2 in formula in place of subscript 1.

Error in output current:
$$\frac{\Delta i}{i} = \frac{K-1}{2K} \left(\frac{\Delta R_3}{R_3} - \frac{\Delta R_4}{R_4} \right)$$

See General Remarks on page 101.

Table VII—Minimum loss pads

Matching Z_1 and Z_2 — both resistive (diagram page 106)

Z ₁ ohms	Z ₂ ohms	$\frac{\mathbf{Z}_1}{\mathbf{Z}_2}$	ioss db	series arm R ₁ ohms	shunt arm Ra
10,000	500	20.00	18.92	9,747	513.0
8,000	500	16.00	17.92	7,746	516.4
6,000	500	12.00	16.63	5,745	522,2
5,000	500	10.00	15.79	4,743	527.0
4,000	500	8.00	14.77	3,742	534.5
3,000	500	6.00	13.42	2,739	547.7
2,500	500	5.00	12.54	2,236	559.0
2,000	500	4.00	11.44	1,732	577.4
1,500	500	3.00	9.96	1,224.7	612.4
1,200	500	2.40	8.73	916.5	654.7
1,000	500	2.00	7.66	707.1	707.1
800	500	1.60	6.19	489.9	816.5
600	500	1.20	3.77	244.9	1,224.7
500	400	1.25	4,18	223.6	894.4
500	300	1.667	6.48	316.2	474.3
500	250	2.00	7.66	353.6	353.6
500	200	2.50	8.96	387.3	258.2
500	160	3.125	10.17	412.3	194.0
500	125	4.00	11.44	433.0	144.3
500	100	5.00	12.54	447.2	111.80
500	80	6.25	13.61	458.3	87.29
500	65	7.692	14.58	466.4	69.69
500	50	10.00	15.79	474.3	52.70
500	40	12.50	16.81	479.6	41.70
500	30	16.67	18.11	484.8	30.94
500	25	20.00	18.92	487.3	25.65

Interpolation of minimum loss pads

This table may be interpolated linearly with respect to Z_1 , Z_2 , or $\frac{Z_1}{Z_2}$ except when $\frac{Z_1}{Z_2}$ is between 1.0 and 1.2. The accuracy of the interpolated value becomes poorer as $\frac{Z_1}{Z_2}$ passes below 2.0 toward 1.2, especially for R_3 .

For other terminations

If the terminating resistances are to be Z_A and Z_B instead of Z_1 and Z_2 , respectively, the procedure is as follows. Enter the table at $\frac{Z_1}{Z_2} = \frac{Z_A}{Z_B}$ and read the loss and the tabular values of R_1 and R_3 . Then the series and shunt arms are, respectively, MR_1 and MR_3 , where $M = \frac{Z_A}{Z_1} = \frac{Z_B}{Z_2}$.

Errors in minimum loss pads

Impedance ratio $\frac{Z_1}{Z_2}$	col 1* db	col 2* percent	cel 3* percent
1.2	0.2	+4.1	+1.7
2.0	0.3	7.1	1.2
4.0	0.35	8.6	0.6
10.0	0.4	9.5	0.25
20.0	0.4	9.7	0.12

* Notes

Series arm R_1 10 percent high: Loss is increased by col 1. Input impedance Z_1 is increased by col 2. Input impedance Z_2 is increased by col 3.

Shunt arm R_3 10 percent high: Loss is decreased by col 1. Input impedance Z_2 is increased by col 2. Input impedance Z_1 is increased by col 3.

Errors in input impedance

$$\frac{\Delta Z_1}{Z_1} = \sqrt{1 - \frac{Z_2}{Z_1}} \left(\frac{\Delta R_1}{R_1} + \frac{1}{N} \frac{\Delta R_3}{R_3} \right)$$

$$\frac{\Delta Z_2}{Z_2} = \sqrt{1 - \frac{Z_2}{Z_1}} \left(\frac{\Delta R_3}{R_3} + \frac{1}{N} \frac{\Delta R_1}{R_1} \right)$$

Error in output current, working either direction

$$\frac{\Delta i}{i} = \frac{1}{2} \sqrt{1 - \frac{Z_2}{Z_1}} \left(\frac{\Delta R_3}{R_3} - \frac{\Delta R_1}{R_1} \right)$$

See General Remarks on page 101.

Table VIII -- Miscellaneous T and H pads

(diagram page 106)

esistive te	rminations		attenuator arms		8
Z ₁ ohms	Z ₂ ohms	db	series R ₁ ohms	series R ₂ ohms	shunt Ra
5,000	2,000	10	3,889	222	2,222
5,000	2,000	15	4,165	969	1,161
5,000	2,000	20	4,462	1,402	639
5,000	500	20	4,782	190.7	319.4
2,000	500	15	1,763	165.4	367.3
2,000	500	20	1,838	308.1	202.0
2,000	200	20	1,913	76.3	127.8
500	200	10	388.9	22.2	222.2
500	200	15	416.5	96.9	116.1
500	200	20	446.2	140.2	63.9
500	50	20	478.2	19.07	31.94
200	50	15	176.3	16.54	36.73
200	50	20	183.8	30.81	20.20

Errors in T and H pads

Series arms R_1 and R_2 in error. Error in input impedances:

$$\Delta Z_1 = \Delta R_1 + \frac{1}{N} \frac{Z_1}{Z_2} \Delta R_2 \quad \text{and} \quad \Delta Z_2 = \Delta R_2 + \frac{1}{N} \frac{Z_2}{Z_1} \Delta R_1$$

Error in insertion loss, db = $4\left(\frac{\Delta R_1}{Z_1} + \frac{\Delta R_2}{Z_2}\right)$, approximately.

Shunt arm R₃ in error (10 percent high)

			error in inpu	ıt impedance
$\frac{\mathbf{Z}_1}{\mathbf{Z}_2}$	designed loss db	error in loss db	100 \(\frac{\Delta Z_i}{Z_1} \)	100 $\frac{\Delta Z_2}{Z_2}$
2.5 2.5 2.5	10 15 20	-0.4 -0.6 -0.7	1.1% 1.2 0.9	7.1% 4.6 2.8
4.0 4.0	15 20	0.5 0.65	0.8 0.6	6.0 3.6
10	20	-0.6	0.3	6.1

$$\frac{\Delta Z_1}{Z_1} = \frac{2}{N-1} \left(\sqrt{\frac{NZ_2}{Z_1}} + \sqrt{\frac{Z_1}{NZ_2}} - 2 \right) \frac{\Delta R_3}{R_3} \left\{ \text{for } \frac{\Delta Z_2}{Z_2} \text{ interchange subscripts } \right\} \text{ and } 2.$$

$$\frac{\Delta i}{i} = \frac{N+1-\sqrt{N}\left(\sqrt{\frac{Z_1}{Z_2}}+\sqrt{\frac{Z_2}{Z_1}}\right)}{N-1} \frac{\Delta R_3}{R_3} \left\{ \text{where } i \text{ is the output current.} \right.$$

Filter networks

Explanation: Table IX shows, in the first column, the fundamental series impedance, Z_1 , and the fundamental shunt impedance, Z_2 , from which the various types of filter sections shown in subsequent columns are composed. For example, a T section (third column) is composed of two half-series arms, $\frac{Z_1}{2}$ in series, with a full shunt arm Z_2 connected to their junction point. The subsequent tables (Tables X, XI, XII, and XIII) give formulas for computing the full series arm and the full shunt arm. These must then be modified according to the type of section used.

Example: Design a series M derived high-pass, T-section filter to terminate in 500 ohms, with cutoff frequency equal to 1000 cycles, and peak attenuation frequency equal to 800 cycles.

Using Table XIII:
$$f_c = 1000$$

$$f_{\infty} = 800$$

$$R = 500$$

$$M = \sqrt{1 - \left(\frac{800}{1000}\right)^2} = 0.6$$

$$C = \frac{1}{4\pi f_c R} = \frac{1}{4\pi \times 1000 \times 500} = 0.159(10^{-6}) \text{ farad} = 0.159 \text{ microfarad}$$

$$L = \frac{R}{4\pi f_c} = \frac{500}{4\pi \times 1000} = 0.0398 \text{ henry} = 39.8 \text{ millihenry}$$

$$C_1 = \frac{C}{m} = \frac{0.159}{0.6} = 0.265 \text{ microfarad}$$

$$L_2 = \frac{L}{m} = \frac{39.8}{0.6} = 66.3 \text{ millihenry}$$

$$C_2 = \frac{4m}{1 - m^2} C = \frac{4 \times 0.6 \times 0.159}{0.64} = 0.597 \text{ microfarad}$$

For a T-section, each series arm must be $\frac{Z_1}{2}$ while the full shunt arm is used.

Thus for the series arm use $2C_{\rm L}$, or 0.53 microfarad. The accompanying figure shows the final result.

Filter networks continued

Table IX—Combination of filter elements

configuration	half-section	full T-section	full π-section
°	222,	Z ₁ /2 Z ₁ /2 Z ₂	Z ₁ 2Z ₁ 2Z ₁

Table X—Band-pass filters

type	configuration	series arm	shunt arm	notations
Constant K	مريميا و	$L_{1} = \frac{R}{\pi (f_{2} - f_{1})}$ $C_{1} = \frac{f_{2} - f_{1}}{4\pi f_{2} f_{1} R}$	$L_{2} = \frac{f_{2} - f_{1}}{4\pi f_{1} f_{2}} R$ $C_{2} = \frac{1}{\pi (f_{2} - f_{1}) R}$	$f_2 = ext{upper cutoff}$ frequency
Three element series type	c, 1	$L_{1} = \frac{R}{\pi (f_{2} - f_{1})}$ $C_{1} = \frac{f_{2} - f_{1}}{4\pi f_{1}^{2}R}$	$C_2 = \frac{1}{\pi(f_1 + f_2)R}$	f ₁ = lower cutoff frequency R = nominal terminating resistance
Three element shunt type	ر بھیا۔	$C_1 = \frac{f_1 + f_2}{4\pi f_1 f_2 R}$	$L_{2} = \frac{f_{2} - f_{1}}{4\pi f_{1} f_{2}} R$ $C_{2} = \frac{f_{1}}{\pi f_{2} (f_{2} - f_{1}) R}$	

Table XI-Band-elimination filters

type	configuration	series arm	shunt arm	notations
Constant K		$L_{1} = \frac{f_{2} - f_{1}}{\pi f_{1} f_{2}} R$ $C_{1} = \frac{1}{4\pi (f_{2} - f_{1}) R}$	$L_{2} = \frac{R}{4\pi (f_{2} - f_{1})}$ $C_{2} = \frac{f_{2} - f_{1}}{\pi f_{1} f_{2} R}$	f ₂ = upper cutoff frequency f ₁ = lower cutoff frequency R = nominal terminating resistance

Filter networks continued

Table XII—Low-pass filters

type	configuration	series arm	shunt arm	notations
Constant K	م میسی م	$L = \frac{R}{\pi f_c}$	$C = \frac{1}{\pi f_c R}$	$f_c=$ cutoff frequency
Series M derived	- معال معالی	$L_1 = mL$	$L_2 = \frac{1 - m^2}{4m} L$ $C_2 = mC$	$f_{\infty} = \text{frequency of }$ peak attenuation $m = \sqrt{1 - \left(\frac{f_c}{f_{\infty}}\right)^2}$
Shunt M derived	حرثياً عن ا	$L_1 = mL$ $C_1 = \frac{1 - m^2}{4m} C$	$C_2 = mC$	R = nominal terminating resistance

Table XIII—High-pass filters

type	configuration	series arm	shunt arm	notations
Constant K	والم الم	$C = \frac{1}{4\pi f_c R}$	$L = \frac{R}{4\pi f_{\sigma}}$	$f_c = ext{cutoff}$ frequency
Series M derived	~——	$C_1 = \frac{C}{m}$	$L_2 = \frac{L}{m}$ $C_2 = \frac{4m}{1 - m^2} C$	$f_{\infty} = \text{frequency of }$ peak attenuation $m = \sqrt{1 - \left(\frac{f_{\infty}}{f_e}\right)^2}$
Shunt M derived		$C_1 = \frac{C}{m}$ $L_1 = \frac{4m}{1 - m^2} L$	$L_2 = \frac{L}{m}$	R = nominal terminating resistance

www.radiosantiguas.com

Rectifiers and filters

Typical rectifier circuit

rectifier type	single-phase full-wave	single-phase full-wave (bridge)	3-phase half-wave	3-phase haif-wave		
of circuit transformer	single-phase center-tap	single-phase	delta-wye	delta-zig zog		
secondaries circuits primaries	CONSTRUCTION OF THE PROPERTY O	00000000000000000000000000000000000000	Tomo and to the season of the	Hame Town Street		
Number of phases of supply Number of tubes*	1 2	1 4	3 3	3 3		
Ripple voltage Ripple frequency	0.48 2f	0.48 2f	0.18 3f	0.18 3f		
line voltage line current line power factor †	1.11 1 0.90	1 1		0.855 0.816 0.826		
Trans primary volts per leg Trans primary amperes per leg Trans primary kva	1.11 1 1.11	1.11	0.855 0.471 1.21	0.855 0.471 1.21		
Trans average kva	1.34	1,11	1.35	1.46		
Trans secondary volts per leg Trans secondary am- peres per leg Transformer second- ary kva	rans secondary volts per leg rans secondary amperes per leg ransformer secondary ary kva leak inverse voltage per tube eak current per liverage current per		1.11(A) 1.11 0.707 1		0.855 0.577 1.48	0.493{A1 0.577 1.71
Peak inverse voltage per tube Peak current per tube Average current per tube			2.09 1 0,333	2.09 1 0,333		


Unless otherwise stated, factors shown express the ratio of the RMS value of the circuit quantities designated to the average DC output values of the rectifier. factors are based on a sine wave voltage Input, Infinite impedance choke and no transformer or rectifier losses.

connections and circuit data

ő-phase half-wave	6-phase half-wave	6-phase (double 3-phase) half-wave	3-phase full-wave	3-phase foli-wave	
delta-star	deita-6-phase fork	delta-double wye with balance coil	delfa-wye	delta-delta	
There was to see the second se	The state of the s	The second of th		1 - Leave 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1	
3 6	3 6	3 6	3 6	3 6	
0.042 6f	0.042 6f	0.042 6f	0.042 6f	0.042 6f	
0.740 0.816 0.955	0.428 1.41 0.955	0.855 0.707 0.955	0.428 1.41 0.955	0.740 0.816 0.955	
0.740	0.428	0.855	0.428	0.740	
0.5 77 1.28	0.816 1.05	0.408 1.05	0.816 1.05	0.471 1.05	
1.55	1.42	1.26	1.05	1.05	
0.740(A)	0.428(A)	0.855(A)	0.428	0.740	
C.408	{ 0.577 (B) } { 0.408 (C) }	0.289	0.816	0.471	
1.81	1.79	1.48	1.05	1.05	
2.09			1.05	1.05	
0.167	0.167	0.167	0.333	0.333	

^{*} These circuit factors are equally applicable to tube or dry plate rectifying elements. \uparrow Line PF \simeq DC output watts/line volt-amperes

Rectifier filter design

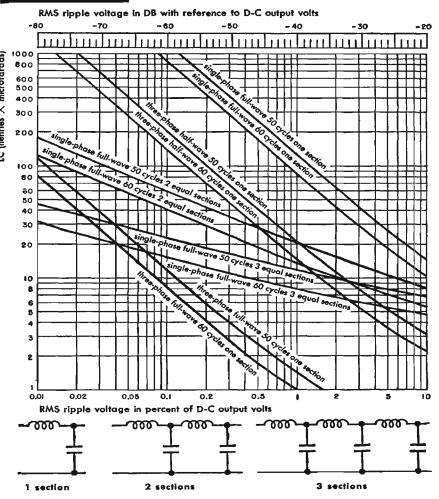

Ripple voltage vs LC for choke-input filters

Minimum inductance for a choke-input filter is determined from

$$L = \frac{KE}{II}$$

where

L = minimum inductance in henries

E = d-c output in volts

I = output current in amperes

f = supply frequency in cps

K = 0.0527 for full-wave, single-phase


= 0.0132 for half-wave, three-phase

= 0.0053 for full-wave, two-phase

= 0.0016 for full-wave, three-phase

Rectifier filter design con

continued

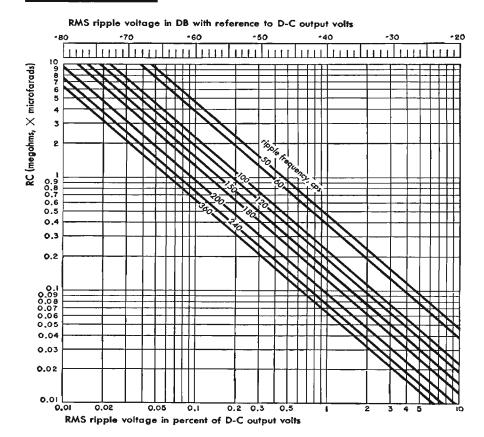

Ripple voltage vs RC for capacitor-input filters

The above chart applies to a capacitance filter with resistance load as shown at the right.

For each additional R'C' section, obtain R by adding a l resistances and add $db = 104 - 20 \log fR'C'$. For each additional LC' section, add $db = 882 - 40 \log f$

For each additional LC' section, add $db = 882 - 40 \log -20 \log LC'$.


The above assumes that the impedance of C' is small with respect to that of R, R', and L.

f = ripple frequency in cps

R' = series filter resistance in ohms

C' = shunt filter capacitance in microfarads

💄 😑 series filter inductance in henries.

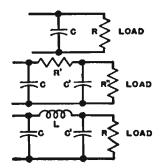

122 CHAPTER FIVE

Iron-core transformers and reactors

Major transformer types

- 1. Audio transformers: Carry audio communication frequencies or some single control frequency.
- a. Input transformers: Couple a signal source, e.g., microphone or line, to the grid(s) of an amplifier.
- b. Interstage transformers (usually step-up voltage): Couple the plate(s) of a vacuum tube (except a driver stage) to the grid(s) of a succeeding stage of amplification.
- c. Output transformers: Couple the plate(s) of an amplifier to an output load.
- **d.** Driver transformers (usuallystep-down voltage): Couple the plate (s) of a driver stage (pre-amplifier) to the grid(s) of an amplifier stage in which grid current is drawn.
- e. Modulation transformers: Couple the plate(s) of an audio output stage to the grid or plate of a modulated amplifier.
- **2.** Power supply transformers: Supply appropriate plate and/or filament voltage to vacuum tubes in a unit of equipment.
- a. Plate transformers: Supply potential to the plate(s) of high-vacuum or gasfilled tube(s) in a rectifier circuit.
- **b.** Filament transformers: Supply current to heat the filaments of vacuum or gas-filled tubes.
- c. Plate-filament transformers: Combinations of 2a and 2b.
- d. Isolation transformers: Insulate or isolate two circuits, such as a grounded circuit from an ungrounded circuit.
- e. Scott-transformers: Scott-connection utilizes two transformers to transmit power from two-phase to three-phase systems, or vice versa.
- f. Auto-transformers: Provide increased or decreased voltage by means of a single winding suitably tapped for the primary and secondary circuits, part of the winding being common to both circuits.

Major reactor types

- 1. Reactors: Single-winding units that smooth current flow, provide d-c feed, or act as frequency-selective units (in suitable arrangement with capacitors).
- a. Audio reactors: Single-winding units that supply plate current to a vacuum tube in parallel with the output circuit.

Major reactor types continued

- **b.** Wave-filter reactors: Function as filter unit components which aid in the acceptance or rejection of certain frequencies.
- c. Filter reactors: Smooth the d-c output current in rectifier circuits.
- **d.** Saturable reactors: Regulate voltage, current, or phase in conjunction with glow-discharge tubes of the thyratron type. They are also used as voltage-regulating devices with dry-type rectifiers.

Temperature, humidity, and pressure effects

A maximum ambient temperature of 40° C is usually assumed. Final operating temperatures with organic insulation (Class A), such as silk, cotton, or paper, are restricted to values less than 95° C. When weight and space requirements dictate undersized iron cores and wire, with resultant higher temperature rise, inorganic insulation and cooling expedients may be used. Cooling expedients include: open-frame; semi-enclosed (coil-covered, core-exposed) design; and fully-enclosed design having compound or liquid-filled insulant and cooling by convection, or forced cooling by air blast.

Relative humidities from zero to 97 percent should be assumed so that coils and leads should be impregnated with moisture-resistant insulating coatings or, alternatively, cases should be sealed vacuum tight. Pressure variation, in addition to moisture and temperature changes, due to altitude from sealevel up to 7,000 feet (greater for aircraft) may be encountered.

General limitations

Core material

- a. For audio transformers and reactors: Core material should be such that core distortion is not greater than 0.75 percent at the lowest frequency.
- **b.** For power supply transformers: Core loss should be less than 0.82 watts per pound at 60 cps, for a flux density of 10,000 gauss. Filter reactors may have a core loss of 1.2 watts per pound at 60 cps, for 10,000 gauss.

Terminal facilities

- a. All leads or winding ends: Must remain inside the case for hermetically sealed units.
- **b.** Leads may terminate: In studs in a Bakelite board or bushing when voltage is less than 1000 volts peak. For higher voltages, Isolantite or wet process porcelain may be used.

Protective gaps

Protective gaps are frequently used on filter reactors or plate transformers in rectifier circuits delivering more than 1000 volts dc.

Design of power-supply transformers

The following may be used as a guide in the design of power supply transformers for receivers and small transmitters.

Nomenclature

 $A_c = ab = cross$ section area of core in square inches

a = stack width in inches

b = stack height in inches

 $B_{max} = \text{maximum}$ core flux density in gauss. Usually assumed to be 10,000 gauss (64.5 kilolines per square inch) at 60 cps, or 12,000 gauss at 25 cps

 E_p = primary terminal voltage

 E_s = secondary terminal voltage

f = frequency in cycles per second

h = minimum height of a coil section above core in inches

h' = maximum height of a coil section above core in inches

K = stacking factor (usually K = 0.9)

MLT = mean length of turn of a coil section in feet

 $T_p = \text{number of primary turns}$

 $T_s = \text{number of secondary turns}$

 VD_p = voltage drop due to primary resistance

 VD_s = voltage drop due to secondary resistance

Design procedure

- 1. Determine secondary output volt-ampere requirements.
- **2.** Calculate primary current based on a wattage 10 percent greater than the volt-amperes determined in (1). Use the given primary voltage E_p .
- 3. The core area is determined roughly by the formula

Core area =
$$\frac{\sqrt{\text{wattage}}}{5.58} \sqrt{\frac{60}{\text{f}}}$$

Select a lamination (from a transformer manufacturer's lamination data book) that will fit the transformer space requirements and provide the proper core area when stacked to a sufficient height.

- **4.** Compute the number of primary turns $T_p = \frac{E_p \times 10^8}{4.44 \text{ f B}_{max} A_c \text{ K}}$
- **5.** Compute the number of secondary turns $T_s = \frac{E_s}{E_p} T_p$
- **6.** Determine the wire sizes needed for primary and secondary on the basis of an optimum current density of 1000 amperes per square inch, using Table I and the currents carried by the primary and secondary. Greater or smaller densities may be used as required. For very small transformers, densities up to 2500 amperes per square inch are sometimes used.

Design of power-supply transformers continued

7. Calculate the number of turns per layer that can be placed in the lamination window space, deducting margin space from the window length.

8. From this value, calculate the total number of primary and secondary layers needed.

9. Calculate the total wire height, using the wire diameter and the number of layers.

10. Determine the total insulation thickness required between wire layers (from Table I), and under and over coil sections.

11. Add the results of (9) and (10) and multiply the figure obtained by 10/9 to allow for bulge in winding wire and wrapping insulation. Revise the design, as necessary, to make this over-all thickness figure (coil build) slightly less than the lamination window width.

12. Calculate the mean length of turns for the primary and for each secondary coil section

$$MLT = \frac{2a + 2b + 2\pi \frac{(h' + h)}{2}}{12}$$

13. Calculate the total wire length in feet of each primary and secondary coil by multiplying the MLT value of the coil by the corresponding total number of turns in that coil.

14. The resistance of each coil is obtained by multiplying the total wire length obtained above by the resistance per foot.

15. Calculate the voltage drop in each primary and secondary from the calculated resistance and the current flow.

16. Compensate for the voltage drop in the primary and in each secondary by determining the corrected number of turns

(corrected
$$T_p$$
) = $\frac{E_p - VD_p}{E_p} \times$ (original T_p)

(corrected
$$T_s$$
) = $\frac{E_s + VD_s}{E_s} \times$ (original T_s)

17. Revise the number of layers of each winding according to the corrected number of turns.

18. Calculate the copper loss in both primary and secondary windings from the resistance of each coil times the square of the current flowing in it.

Design of power-supply transformers continued

- 19. Calculate the core loss from the weight (in pounds) of the core used and the core loss per pound obtained from the core loss curve given by the manufacturer for the iron used.
- 20. The efficiency of the transformer is

Percent efficiency =
$$\frac{\text{wattage output} \times 100}{\text{wattage output} + \text{core loss} + \text{copper loss}}$$

Table I-Round enameled copper wire

AWG (B&S)	diameter inches	turns per inch	curtent capacity amperes*	ohms per 1000 ft at 50° C	coil margin inches	interlayer insulation† inches
		Ī		1	1	
10	0.1039	9	8.2	1.12	0.25	0.010
11	0.0927	10	6.5	1.41	0.25	0.010
12	0.0827	11	5.1	1.78	0.25	0.010
13	0.0738	12	4.1	2.24	0,25	0.010
14	0.0659	13	3.2	2.82	0.25	0.010
15	0.0588	14	2.6	3.56	0.188	0.010
16	0.0524	16	2.0	4.49	0.188	0.010
1 <i>7</i>	0.0469	19	1.61	5.66	0.188	0.010
18	0.0418	21	1.28	7.14	0,125	0.005
19	0.0374	24	1.01	9.0	0.125	0.005
20	0.0334	26	0.80	11.4	0.125	0.005
21	0.0299	30	0.64	14.3	0,125	0.005
22	0.0266	34	0.50	18.1	0.125	0.003
23	0.0238	39	0.40	22.8	0.125	0.003
24	0.0213	43	0.32	28.7	0.125	0.003
25	0.0190	48	0.25	36.2	0.125	0.002
26	0.0169	54	0.20	45.6	0.125	0.002
27	0.0152	59	0.158	57.5	0.125	0.002
28	0.0135	68	0.126	72.6	0.125	0.002
29	0.0122	74	0.100	91	0.125	0.002
30	0.0108	84	0.079	115	0.125	0.0015
31	0.0097	94	0.063	146	0.125	0.0015
32	0.0088	104	0.050	183	0.094	0.0015
33	0.0078	117	0.039	231	0.094	0.0015
34	0.0069	131	0.031	292	0.094	0.001
35	0.0061	146	0.025	368	0.094	0.001
36	0.0055	162	0.0196	464	0.094	0.001
37	0.0049	183	0.0156	585	0.094	0.001
38	0.0044	204	0.0124	737	0.063	0.001
39	0.0038	227	0.0098	930	0.063	0.00075
40	0.0034	261	0.0078	1173	0.063	0.00075
•						

^{*} Current capacity at 1000 amperes per square inch. For other current densities, multiply by lcurrent density/1000.

See also page 60.

[†] Interlayer insulation is usually Kraft paper.

■ Vacuum tubes

Nomenclature *

 $e_c = instantaneous total grid voltage$

 e_b = instantaneous total plate voltage

 i_c = instantaneous total grid current

 i_b = instantaneous total plate current

 E_c = average value of grid voltage

 E_b = average or quiescent value of plate voltage

 I_c = average or quiescent value of grid current

 I_b = average or quiescent value of plate current

 e_g = instantaneous value of varying component of grid voltage

 e_p = instantaneous value of varying component of plate voltage

 i_g = instantaneous value of varying component of grid current i_p = instantaneous value of varying component of plate current

 E_a = effective or maximum value of varying component of grid voltage

 E_p = effective or maximum value of varying component of plate voltage

 I_g = effective or maximum value of varying component of grid current

 I_p = effective or maximum value of varying component of plate current

 $I_f = filament or heater current$

 J_s = total electron emission (from cathode)

 r_i = external plate load resistance

 C_{gp} = grid-plate direct capacitance

 $C_{gk} = \text{grid-cathode direct capacitance}$

 C_{pk} = plate-cathode direct capacitance

 $heta_p=$ plate current conduction angle

 r_p = variational (a-c) plate resistance

 R_{pb} = total (d-c) plate resistance

Note: In the following text, the superscript M indicates the use of the maximum or peak value of the varying component, i.e., ${}^{\mathbf{M}}E_p = \max$ maximum or peak value of the alternating component of the plate voltage.

Coefficients

Amplification factor μ : Ratio of incremental plate voltage to control-electrode voltage change at a fixed plate current with constant voltage on other electrodes.

$$\mu = \begin{bmatrix} \frac{\delta \mathbf{e}_b}{\delta \mathbf{e}_{c1}} \end{bmatrix}_{I_b}$$

$$E_{c2} - \dots E_{cn}$$
 constant
$$r_r = 0$$

^{*} From IRE standard symbols (Electronics Standards, 1938)

Coefficients continued

Transconductance s_m : Ratio of incremental plate current to control-electrode voltage change at constant voltage on other electrodes.

$$s_m = \left[\frac{\delta i_b}{\delta e_{c1}}\right]_{E_b, E_{c2}------E_{cn} \text{ constant}}$$

$$r_i = 0$$

When electrodes are plate and control grid, the ratio is the mutual conductance g_m of the tube.

$$g_m = \frac{\mu}{r_p}$$

Variational (a-c) plate resistance r_p : Ratio of incremental plate voltage to current change at constant voltage on other electrodes.

$$r_p = \left[\frac{\delta \mathbf{e}_b}{\delta i_b}\right]_{\substack{E_{c1} - \dots - E_{cn} \text{ constant} \\ r_1 = 0}}$$

Total (d-c) plate resistance R_p : Ratio of total plate voltage to current for constant voltage on other electrodes.

$$R_p = \left[\frac{e_b}{i_b}\right]_{E_{c1} - \dots - E_{cn} \text{ constant}}$$

$$r_s = 0$$

Terminology

Control grid: Electrode to which plate-current-controlling signal voltage is applied.

Space-charge grid: Electrode, usually biased to constant positive voltage, placed adjacent to cathode to reduce current-limiting effect of space charge.

Suppressor grid: Grid placed between two electrodes to suppress the effect of secondary electrons.

Screen grid: Grid placed between anode and control grid to reduce the capacitive coupling between them.

Primary emission: Thermionic emission of electrons from a surface.

Secondary emission: Usually of electrons, from a surface by direct impact not thermal action, of electronic or ionic bombardment.

Total emission I_s : Maximum (saturated, temperature-limited) value of electron current which may be drawn from a cathode. Available total emission is that peak value of current which may safely be drawn.

Terminology continued

Transfer characteristic: Relation, usually graphical, between voltage on one electrode and current to another, voltages on all other electrodes remaining constant.

Electrode characteristic: Relation, usually graphical, between the voltage on, and current to, a tube electrode, all other electrode voltages remaining constant.

Composite-diode lines: Relation, usually two curves, of the currents flowing to the control grid and the anode of a triode as a function of the equal voltage applied to them (grid-plate tied).

Critical grid voltage: Instantaneous value of grid voltage (with respect to cathode) at which anode current conduction is initiated through a gas tube.

Constant current characteristics: Relation, usually graphical, between the voltages on two electrodes, for constant specified current to one of them and constant voltages on all other electrodes.

Formulas

For unipotential cathode and negligible saturation of cathode emission

function	parallel plane cathode and plate	cylindrical cathode and plate
Diode plate current (amperes)	G _{1eb} ³ 2	G _{Ieb} ²
Triode plate current (amperes)	$G_2\left(\frac{e_b + \mu e_c}{1 + \mu}\right)^{\frac{3}{2}}$	$G_2\left(\frac{e_b + \mu e_o}{1 + \mu}\right)^{\frac{3}{2}}$
Diode perveance G ₁	$2.3\times10^{-6}\frac{A_b}{d_b{}^2}$	$2.3\times10^{-6}\frac{A_b}{\beta^2rb^2}$
Triode perveance G ₂	$2.3\times10^{-6}\frac{A_b}{d_bd_a}$	$2.3\times10^{-6}\frac{A_b}{\beta^2r_br_e}$
Amplification factor μ	$\frac{2.7 d_o \left(\frac{d_b}{d_c} - 1\right)}{\rho \log \frac{\rho}{2\pi r_g}}$	$\frac{2\pi d_o}{\rho} \frac{\log \frac{d_b}{d_o}}{\log \frac{\rho}{2\pi r_o}}$
Mutual conductance g _m	$1.5G_2 \frac{\mu}{\mu+1} \sqrt{e'_{\theta}}$	$1.5G_2 \frac{\mu}{\mu + 1} \sqrt{e'_{\theta}}$
	$e'_g = \frac{E_b + \mu E_c}{1 + \mu}$	$\theta'_g = \frac{E_b + \mu E_c}{1 + \mu}$

Formulas continued

where

 A_b = effective anode area in square centimeters

 d_b = anode-cathode distance in centimeters

 $d_c = grid$ -cathode distance in centimeters

 β = geometrical constant, a function of ratio of anode to cathode radius;

$$\beta^2 \cong 1$$
 for $\frac{r_b}{r_k} > 10$ (see curve Fig. 1)

 ρ = pitch of grid wires in centimeters

 $r_a = grid$ wire radius in centimeters

 $r_b = anode radius in centimeters$

 $r_k = \text{cathode radius in centimeters}$

 $r_c = grid radius in centimeters$

Note: These formulas are based on theoretical considerations and do not provide accurate results; for practical structures, however, they give a fair idea of the relationship between the tube geometry and the constants of the tube.

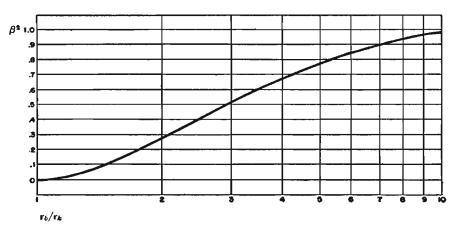


Fig. 1—Values of β^2 for values of $\frac{r_b}{r_b} < 10$.

Performance limitations

Tube performance limitation factors include electrode dissipation, filament emission, and the transit time of electrons in the active part of the tube. For a given tube, the ultimate limitation may be any one or a combination of these factors.

Electrode dissipation data

Tube performance is limited by electrode dissipation. In turn, tube dissipation is limited by the maximum safe operating temperatures of the glass-to-metal seals (approximately 200° C), glass envelope, and tube electrodes. Thus excessive dissipation may result in breakage, loss of vacuum, and destruction of the tube.

Typical operating data for common types of cooling are roughly

type	average cooling surface temperature °C	specific dissipation watts/cm² of cooling surface	cooling medium tupply
Radiation	400–1000	4–10	
Water	30–60	30-110	0.25-0.5 gpm per kw
Forced-air	150-200	0.5–1	50-150 cfm per kw

The operating temperature of radiation-cooled anodes for a given dissipation is determined by the relative total emissivity of the anode material. Thus, graphite electrodes which approach black-body radiation conditions operate at the lower temperature range indicated, while untreated tantalum and molybdenum work at relatively high temperatures. In computing cooling-medium flow, a minimum velocity sufficient to insure turbulent flow at the dissipating surface must be maintained. In the case of water and forced-air cooled tubes, the figures above apply to clean cooling surfaces, and may be reduced to a small fraction of these values by heat-insulating coatings such as mineral scale or dust. Cooling surfaces should, thus, be closely observed and cleaned periodically.

Dissipation and temperature rise of cooling water

$$KW = 0.264 \, Q(T_2 - T_1)$$

where KW = power in kilowatts, Q = flow in gallons per minute, T_2 and $T_1 = \text{outlet}$ and inlet temperatures in degrees centrigrade. An alternate formula is

$$KW = \frac{\text{liters per minute } (T_2 - T_1)}{14.3}$$

or KW= liters per minute when the temperature rise is a reasonable figure, namely 14.3° C.

Air flow and temperature rise

Q = 5.92 (
$$T_1 + 273$$
) $\frac{P}{T_2 - T_1}$

where Q = air flow in cubic feet per minute.

Filament characteristics

The sum of the instantaneous peak currents drawn by all of the electrodes must be within the available total emission of the filament. This emission is determined by the filament material, area, and temperature.

Typical data on the three types of filament most used are

type	efficiency ma/watt	specific emission I _s amp/cm ²	watt/cm²	operating temperature Keivin	ratio hot-to-coid resistance
Pure tungsten (W)	5–10	0.25-0.7	70–84	25002600	14:1
Thorioted tungsten (ThW)	40-100	0.5–3	26-28	1950-2000	10:1
Oxide coated (BaCaSr)	50-150	0.5-2.5	5-10	1100-1250	2.5 to 5.5:1

In the cases of thoriated-tungsten and oxide-coated filament tubes, the emission data vary widely between tubes around the approximate range indicated in the table. The figures for specific emission refer to the peak or saturated value which is usually two or more times the total available value for these filaments. Instantaneous peak current values drawn during operation should never exceed the published available emission figure for the given tube.

Thoriated-tungsten and oxide-coated type filaments should be operated close to the specified published voltage. Deviation from these values will result in rapid destruction of the cathode surface.

In the case of pure tungsten, the filament may be operated over a considerable temperature range. It should be borne in mind, however, that the total filament-emission current available varies closely as the seventh power of the filament voltage. Likewise, the expected filament life is critically dependent on the operating temperature. The relationship between filament voltage and life is shown by Fig. 2. It will be seen that an increase of 5 percent above rated filament voltage reduces the life expectancy by 50 percent. Where the full normal emission is not required, a corresponding increase in life may be secured by operating a pure tungsten filament below rated filament voltage.

From the above tabulated values of hot-to-cold resistance, it may be seen that a very high heating current may be drawn by a cold filament, particularly one of the tungsten type. In order to avoid destruction by mechanical stresses which are proportional to I^2 , it is imperative to limit the current to a safe value, say, 150 percent of normal hot value for large tubes and 250 percent for medium types. This may be accomplished by resistance and time-delay relays, high-reactance transformers, or regulators.

Filament characteristics continued

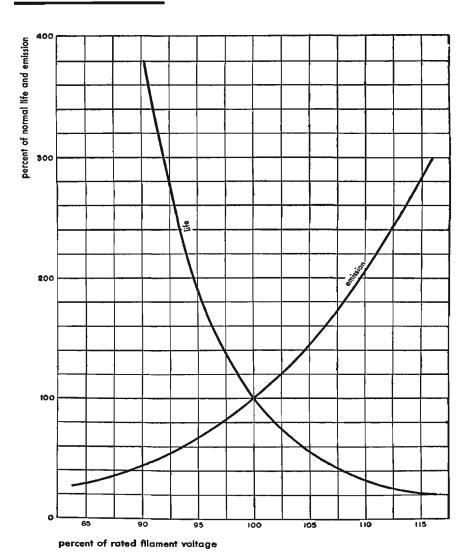


Fig. 2—Effect of change in filament voltage on the life and emission of bright tungsten filament (based on 2575° K normal temperature).

Filament characteristics continued

In the case where a severe overload has temporarily impaired the emission of a thoriated-tungsten filament, the activity can sometimes be restored by operating the tube with filament voltage only in accordance with one of the following schedules:

- 1. At normal filament voltage for several hours or overnight. Or, if the emission fails to respond.
- **2.** At 30 percent above normal for 10 minutes, then at normal for 20 to 30 minutes. Or, in extreme cases when 1 and 2 have failed to give results and at the risk of burning out the filament.
- 3. At 75 percent above normal for 30 seconds followed by schedule 2.

Ultra-high-frequency tubes

Tubes for u-h-f application differ widely in design among themselves and from those for lower frequency. The theory of their operation and the principles of their design have not been fully expounded, and great progress in this field still lies ahead.

Ultra-high-frequency tubes may be classified according to principle of operation as follows:

- 1. Negative-grid tubes
- 2. Positive-grid tubes
- 3. Velocity-modulated tubes
- 4. Magnetrons
- 1. Negative-grid tubes: Effectiveness of negative-grid tubes at ultra-high-frequencies is limited by two factors
- a. difficulty of designing the circuit associated with the tube
- b. effect of electron inertia.
- a. Design of u-h-f circuit associated with negative-grid tubes: The circuit must be tunable at the operating frequency. This leads to the use of transmission lines as associated circuits of the parallel or coaxial type. The tubes themselves are constructed so as to be part of the associated transmission line.

Lines in some cases are tuned on harmonic modes, thus making possible the use of larger circuit elements.

Circuit impedance must match the optimum loading impedance of the tube, a requirement difficult to satisfy inasmuch as the capacitive reactances are very small and u-h-f losses are important in both conductors and insulators. Difficulty in obtaining the proper Q of the circuit is increased with frequency.

Ultra-high-frequency tubes continued

b. Effect of electron inertia: The theory of electron inertia effect in receiving tubes has been formulated by Llewelyn, but no comparable, complete theory is now available for transmitting tubes. In both cases the time of flight of an electron from cathode to anode must be a small fraction of the oscillating period. When this period is so short as to be of the same order of magnitude as the transit time, receiving tubes cease to amplify and transmitting tubes cease to oscillate.

Small tubes with close spacing between electrodes have been built that can be operated up to about 3000 megacycles.

To compare results obtained with different tubes and circuits pertaining to a family ruled by the law of similitude, it is useful to know that dimensionless magnitudes, such as efficiency, or signal-noise ratio, are the same when the dimensionless parameter

$$\phi = \frac{f \times d}{\sqrt{V}} \text{ remains constant}$$

where

f = frequency in megacycles

d = cathode-to-anode distance in centimeters

V = anode voltage in volts.

Transit-time effect appears when ϕ becomes greater than 1. Spacing between electrodes of u-h-f tubes then must be small, and operation at high voltage is necessary. In addition cathodes must be designed for high current density operation.

- 2. Positive-grid tubes: Utilize an oscillating space charge produced by acceleration of electrons through the positive grid toward a negative reflecting anode. This principle has been used for generating waves down to lengths of one centimeter. Low power output and low efficiency have hitherto limited their wide application.
- 3. Velocity-modulated tubes: Utilize the acceleration and retarding action of an alternating electron voltage on an electron beam to vary the velocity in the beam. After passage of the beam through a field-free drift space, the beam arrives with variations of space-charge density. In passing through the opening of a resonant cavity at this point, the variation of the beam density induces a current in the external circuit. Several types of amplifiers and oscillators employ this principle of operation; some, such as the reflex Klystron, have a single cavity. While a theoretical efficiency of about 50 percent may thereby be achieved, the actual efficiency in the frequency range around 10 centimeters is only a few percent.
- 4. Magnetrons: May be considered as another form of velocity-modulated tube in which the electron stream instead of being accelerated linearly is

Ultra-high-frequency tubes continued

given a circular trajectory by means of a transverse magnetic field. Energy from this beam is not lost directly to an acceleration electrode at d-c potential as in the linear case and accordingly a higher operating efficiency may be obtained. Usually acceleration and retardation of the rotary beam is accomplished by one or more pairs of electrodes associated with one or more resonant circuits.

Wavelengths down to a centimeter are produced by the so-called first order $\ln = 1$) oscillations generated in a magnetron having a single pair of plates. Relatively low efficiency and power output are obtained in this mode of operation. Design formulas relating dimensions, d-c anode voltage, magnetic field strength, and output frequency for this case are obtained from the basic relation for electron angular velocity

$$\omega_m = H - \frac{e}{m}$$

$$\lambda = \frac{10,700}{H}$$

$$E_b = 0.022 r_b^2 \left[1 - \left(\frac{r_k}{r_b} \right)^2 \right]^2 H^2$$

where

H =field intensity in gauss

 $E_b = d-c$ accelerating voltage in volts

 λ = generated wavelength in centimeters

 $r_h =$ anode radius in centimeters

 $r_k =$ cathode radius in centimeters

Higher order oscillations of the magnetron may be obtained at high outputs and efficiencies exceeding that of the linear velocity-modulated tubes.

Cathode-ray tubes

Electrodes*

Control electrode (modulating electrode, grid, or grid No. 1): Is operated at a negative potential with respect to the cathode in conventional cathoderay tubes. The negative potential controls the beam current and, therefore, the trace brightness.

^{*} Sections on Electrodes, Characteristics, and Application Notes prepared by I. E. Lempert, Allen B. Dumont Laboratories, Inc.

Screen grid (grid No. 2): Is not utilized in all cathode-ray tube designs. Its introduction makes the control characteristic independent of the accelerating potential when operated at fixed positive potential. In electrostatic-focus, it makes the screen current (beam current to fluorescent screen) substantially independent of the focusing electrode voltage over the focus region. In some tube designs, it is used to change the control characteristic dynamically by application of varying potential.

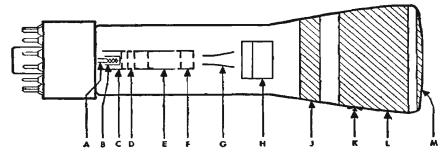


Fig. 3—Electrode arrangement of typical electrostatic focus and deflection cathode-ray tube. A heater. B cathode. C control electrode. D screen grid or pre-accelerator. E focusing electrode. F accelerating electrode. G deflection plate pair. H deflection plate pair. J conductive coating connected to accelerating electrode. K intensifier electrode terminal. L intensifier electrode (conductive coating on glass). M fluorescent screen.

Focusing electrode (anode No. 1): Is used in electrostatic-focus cathode-ray tubes and operates at a positive potential,* adjustable to focus the spot.

Accelerating electrode (anode No. 2 or anode): In usual usage, the second anode is the last electrode, prior to deflection, which produces acceleration. The second anode potential is the potential of the electron beam in the deflection region.

Intensifier electrode (post-accelerating electrode, anode No. 3): Provides acceleration after deflection.

Preaccelerating electrode: In common usage, is an electrode like a screen grid or second grid, but connected to the accelerating electrode internally. It makes the screen current (beam current to fluorescent screen) substantially independent of the focusing electrode voltage over the focus region.

Deflection plates (deflection electrodes): Conventional cathode-ray tubes have two pairs of deflection plates at right angles to each other. The electric field between the plates of a pair causes deflection of the beam and, therefore, displacement of spot, in a direction perpendicular to plates of a pair.

^{*} All potentials are with respect to the cathode except when otherwise indicated.

Characteristics

Cutoff voltage (E_{co}): Negative grid potential at which screen current becomes zero (as indicated by visual extinction of a focused undeflected spot), or some specified low value. It varies directly with the accelerating electrode potential except in tubes with independently connected screen grids where it varies approximately as the screen-grid potential, the accelerating electrode potential having a second order effect (E_{co} increases slightly with accelerating electrode potential). E_{co} is independent of intensifier electrode potential.

Control characteristic (modulation characteristic): Is a curve of beam current versus grid potential. It is often expressed in terms of grid drive (grid potential above cutoff) rather than actual grid potential. This method of expressing it has the advantage that the characteristic then varies less with accelerating potential and with individual tubes of a given design.

Focusing voltage: In electrostatic focus tubes, the focusing electrode voltage at which the spot comes to a focus varies directly with accelerating electrode voltage in most tube designs and is substantially independent of the intensifier electrode potential.

Focusing current or focusing ampere turns: Applies to magnetic-focus cathode-ray tubes and is usually expressed in terms of a definite focus coil in a definite location on the tube. While more than one value of current will focus, the best focus is obtained with the minimum value, i.e., the one ordinarily specified. The focusing current (or ampere turns) increases with accelerating potential.

Deflection factor (for electrostatic-deflection tubes): Is defined as the voltage required between a pair of deflection plates to produce unit deflection of the spot, and is usually expressed in d-c volts per inch of displacement. It varies directly with the accelerating potential in intensifier-type tubes so long as the ratio of the intensifier potential to accelerating-electrode potential (all potentials with respect to cathode) is constant. The application of twice the accelerating electrode potential to the intensifier electrode increases the deflection factor 15 percent to 30 percent above the value with the accelerating electrode and intensifier electrode at the same potential, depending on the tube design.

Deflection factor (for magnetic deflection tubes): Usually expressed in terms of a definite deflection yoke in a definite location on the tube, in amperes or milliamperes per inch of spot deflection, it varies as the square root of the accelerating electrode potential.

Deflection sensitivity: Is the reciprocal of the deflection factor. Usually, however, it is expressed in millimeters per volt for electrostatic deflection tubes.

Spot size: Must be expressed in terms of a defined method of measurement since spot edges are not usually sharp. When the accelerating potential is varied and the screen current maintained constant, the spot size usually decreases with increasing accelerating potential. If the brightness is held constant while varying the accelerating potential, the spot size decreases even more with increasing accelerating potential.

Brightness: Increases with beam current and with accelerating potential. At constant screen current, it usually increases with accelerating potential at a rate between the first and second power of the accelerating potential, approaching a maximum depending upon the screen material.

Application notes

Grid voltage: To permit variation of brightness over the entire range, the grid voltage, should be variable from the maximum specified cutoff bias of a cathode-ray tube to zero. Allowance should be made for a-c grid voltages if they are applied, and for potential drops which may occur in d-c grid-return circuits due to allowable grid leakage.

Focusing electrode voltage source (electrostatic-focus tubes): Bleeder design should be such as to cover the range of focus voltage over which tubes are permitted to vary by specifications, both at the value of focusing-electrode current that may be encountered in operation, and at cutoff (zero focusing-electrode current).

Deflection-plate potentials (electrostatic-deflection tubes): To avoid defocusing of the spot, the instantaneous average potential of the plates of each deflection-plate pair should always be the same as that of the accelerating electrode.

Magnetic shielding: Magnetic shielding is necessary if it is desired to eliminate magnetic effects on the beam. The earth's and other magnetic fields may shift the beam considerably.

Approximate formulas

Electrostatic deflection: Is proportional to deflection voltage, inversely proportional to accelerating voltage, and at right angles to the plane of the plates and toward the more positive plate. For deflection electrode structures using straight parallel deflection plates

$$D = \frac{E_d LI}{2E_d A}$$

D = deflection

 E_d = deflection voltage

 $E_a =$ accelerating voltage

A = separation of plates

I = length of plates

L =length from center of plates to screen

D, A, I, L are all in the same units

Electromagnetic deflection: Is proportional to flux or current in coil, inversely proportional to the square root of the accelerating voltage, and at right angles to the direction of the field

$$D = \frac{0.3LlH}{\sqrt{E_a}}$$


D = deflection in centimeters

L = length in centimeters between screen and point where beam enters deflecting field

I = length of deflection field in centimeters

H =flux density in gauss $E_{\alpha} =$ accelerating voltage

NI = deflecting coil ampere turns



Deflection sensitivity: Is linear up to frequency where phase of deflecting voltage begins to reverse before electron has reached end of deflecting field. Beyond this frequency, sensitivity drops off reaching zero and then passing through a series of maxima and minima as $n=1,2,3\ldots$ Each succeeding maximum is of smaller magnitude

$$D_{zero} = n\lambda \binom{v}{c}$$

$$D_{max} = (2n - 1) \left(\frac{\lambda}{2}\right) \left(\frac{v}{c}\right)$$

D = deflection

v = electron velocity

 $c = \text{speed of light } (3 \times 10^{10} \text{ cm/sec})$

Electron velocity: For accelerating voltages up to 10,000

 $v \text{ (km per sec)} = 593 \sqrt{E_a}$

Beyond 10,000 volts, apply Einstein's correction for the increase in mass of the electron.

Earth's magnetic field:

Maximum 0.4 gauss horizontal (Philippine Islands)

0.6 gauss vertical (Canada)

City of New York 0.17 gauss horizontal; 0.59 gauss vertical

Magnetic focusing: There is more than one value of current that will focus. Best focus is at minimum value.

For an everage coil

$$IN = 220\sqrt{\frac{V_0d}{f}}$$

IN = ampere turns

 $V_0 = kv$ accelerating voltage

d = mean diameter of coil


f = focal length

d and f are in the same units

A well-designed, shielded coil will require fewer ampere turns.

Example of good shield design

$$X = \frac{d_1}{20}$$

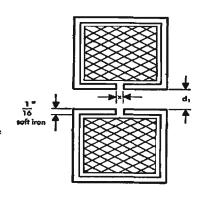

Army-Navy preferred list of electron tubes

Receiving

1 November 1945

			perfodes		l		mis	cellane ovs					
filament Voltage	diodes	diode triodes	triodes	lwin triodes	remote	shorp	converters	Klystrons	entbri	luning Indicators	rectifiers	cathode ray	crystals
1.4	1A3	155‡	11.E3	3A5	114	114 11N5 155\$	11C6 1R5		3A4 3G4 3S4			2APIA 3DPIA 3JPI	1N21B 1N28 1N23B 1N31 1N25 1N32
5.0								_			5U4G 5Y3GT/G	SCPIA	1N26
6.3	2822 6AL5 6H6*	6nQ6 60Q7* 6SR7*	2C22 2C40 6C4 6F4† 6J4 6J5* 9002	636 65UW 65N7W 7F8	6AB7 6SG7* 6SK7* 9003	6AC7W 6AG7 6AK5 6AN5 6AS6 6SH7* 6SJ7* 7W7 9001	6SA7*	2K22 2K25 2K26 2K27 2K28 2K29 2K41 2K45 726A 726B 726C	6AK6 6AR6 6AS7G 6B4G 6I6WGA 6N7GT/G 6V6GT/G 6Y6G	6AF6G 6E5	6X5GT/G 1005	5CP7A 5FP7A 5FP14 5JP1 7BP7A 12DP7A	Photo-tubes
126	12H6*	125Q7* 125R7*	12J5GT	12517GT 125N7GT	12SG7* 12SK7*	12SH7 12SJ7* 14W7	12SA7*	-	12A6*	1629			voltage regulators 0A2
25 or over									2516GT/G 3516GT/G		25Z6GT/G		082 0C2 OA3/VR75
Only type: anode sup	s for 28 volts ply operation	26C6				6AJ5 26A6	26D6		26A5 26A7GT 28D7				OC3/VR105 OD3/VR150 991

Transmitting

11.cou 2 Million	1 constituting												
hiode	н	tetrodes	Iwin tetrodes	pentodes	pulse modulation	magne	trons	Auchami	gas	rs grid cóntrol	clipper tubes	gas s	witching TR
2C26A 2C39 2C43 3C28 3C28 CV92(Br) † 100TH 2S0TH 304TH 450TH 527	811 826 862A 880 889R-A 1626 8025A	807 813 814 827R† 1625	815 8298 832A	2F22 2E25 4E27 903 837	3021A 3C45 3E39 4C35 5C22 6C21 715C†	2130-34 2141 2142 2148 2149 2150 2151 2153 2155-56 2153 2160 2161 A=62A	4.131-35 4.136-42 4.143-44 4.150 4.151 4.152 5.126 5.129 5.130 5.131 5.132	172 2X2A 3824W 584GY 371B 836 1616 8016 8020	3828 4826 4835 5821 6C 83 8578 866A 8698 872A 1006	2D21 C58 6D4 393A 394A 884 2050	3826 4831 719A	1835 1837 1844 1851 1852 1853 1856 1857 pre~TR	1823 1824 1827 1832 1850 1855 1858 medulators 1822 1841

^{*} Where direct interchangeability with prototype listed above is assured and its JAN-IA Specification has been issued a counterpart of the prototype indicated by suffix letterly GT, GT/G, Y, W, A, B, etc. may be used.

[†] Consultation with applicable service laboratory's electron tube group is recommended before application in equipment.

1 Diode Pentode.

■ Vacuum tube amplifiers

Classification

It is common practice to differentiate between types of vacuum tube circuits, particularly amplifiers, on the basis of the operating regime of the tube.

Class A: Grid bias and alternating grid voltages such that plate current flows continuously throughout electrical cycle ($\theta_p = 360$ degrees).

Class AB: Grid bias and alternating grid voltages such that plate current flows appreciably more than half but less than entire electrical cycle (360° $> \theta_p > 180^\circ$).

Class B: Grid bias close to cut-off such that plate current flows only during approximately half of electrical cycle $(\theta_p \cong 180^\circ)$.

Class C: Grid bias appreciably greater than cut-off so that plate current flows for appreciably less than half of electrical cycle ($\theta_p < 180^{\circ}$).

A further classification between circuits in which positive grid current is conducted during some portion of the cycle, and those in which it is not, is denoted by subscripts 2 and 1, respectively. Thus a class AB_2 amplifier operates with a positive swing of the alternating grid voltage such that positive electronic current is conducted, and accordingly in-phase power is required to drive the tube.

General design

For quickly estimating the performance of a tube from catalog data, or for predicting the characteristics needed for a given application, the ratios given in Table I may be used.

Table I—Typical amplifier operating data

Maximum signal conditions—per tube

function	class A	class B a-f (p-p)	class B r-f	class C r-f
Plate efficiency η % Peak instantaneous to d-c plate	20-30	35-65	60–70	65–85
current ratio M_{ib}/I_b RMS alternating to d-c plate	1.5-2	3.1	3.1	3.1-4.5
current ratio I_p/I_b RMS alternating to d-c plate	0.50.7	1.1	1.1	1.1-1.2
voltage ratio E_p/E_b D-C to peak instantaneous grid	0.3-0.5	0.50.6	0.50.6	0.50.6
current I_c/Mi_c		0.25-0.1	0.25-0.1	0.15-0.1

General design continued

Table I gives correlating data for typical operation of tubes in the various amplifier classifications. From this table, knowing the maximum ratings of a tube, the maximum power output, currents, voltages, and corresponding load impedance may be estimated. Thus, taking for example, a type F-124-A water-cooled transmitting tube as a class C radio-frequency power amplifier and oscillator—the constant-current characteristics of which are shown in Fig. 1—published maximum ratings are as follows:

D-C plate voltage $E_b = 20,000$ volts
D-C grid voltage $E_a = 3,000$ volts
D-C plate current $I_b = 7$ amperes
R-F grid current $I_a = 50$ amperes
Plate input $P_i = 135,000$ watts
Plate dissipation $P_n = 40,000$ watts

Maximum conditions may be estimated as follows:

For
$$\eta = 75\%$$
 $P_i = 135,000$ watts $E_b = 20,000$ volts

Power output $P_0 = \eta P_i = 100,000$ watts

Average d-c plate current $I_b = P_i/E_b = 6.7$ amperes

From tabulated typical ratio ${}^{\rm M}i_b/I_b=4$, instantaneous peak plate current ${}^{\rm M}i_b=4I_b=27$ amperes

The rms alternating plate current component, taking ratio $I_p/I_b=1.2$, $I_p=1.2$ $I_b=8$ amperes

The rms value of the alternating plate voltage component from the ratio $E_p/E_b = 0.6$ is $E_p = 0.6$ $E_b = 12,000$ volts.

The approximate operating load resistance r_l is now found from

$$r_l = \frac{E_p}{I_p} = 1500 \text{ ohms.}$$

An estimate of the grid drive power required may be obtained by reference to the constant current characteristics of the tube and determination of the peak instantaneous positive grid current $^{M}i_{c}$ and the corresponding instantaneous total grid voltage $^{M}e_{c}$. Taking the value of grid bias E_{o} for the given operating condition, the peak a-c grid drive voltage is

$$^{\mathrm{M}}E_{a}=(^{\mathrm{M}}\mathbf{e}_{a}-E_{a})$$

from which the peak instantaneous grid drive power

$$^{\mathbf{M}}P_{e} = {^{\mathbf{M}}E_{a}}^{\mathbf{M}}i_{c}.$$

General design continued

An approximation to the average grid drive power P_{ρ} , necessarily rough due to neglect of negative grid current, is obtained from the typical ratio

$$\frac{I_c}{\bar{\mathbf{M}}_{i_c}^-} = 0.2$$

of d-c to peak value of grid current, giving

$$P_{\sigma} = I_c E_{\sigma} = 0.2 \,^{\text{M}} i_c E_{\sigma}$$
 watts.

Plate dissipation P_p may be checked with published values since

$$P_p = P_i - P_0.$$

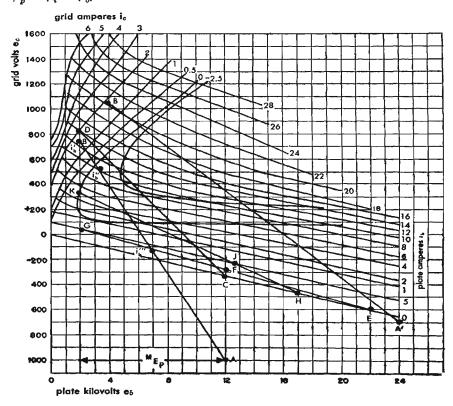


Fig. 1—Constant-current characteristics with typical load lines AB—class G, CD—class B, EFG—class A, and HJK—class AB.

General design continued

It should be borne in mind that combinations of published maximum ratings as well as each individual maximum rating must be observed. Thus, for example in this case, the maximum d-c plate operating voltage of 20,000 volts does not permit operation at the maximum d-c plate current of 7 amperes since this exceeds the maximum plate input rating of 135,000 watts.

Plate load resistance r_l may be connected directly in the tube plate circuit, as in the resistance-coupled amplifier, through impedance-matching elements as in audio-frequency transformer coupling, or effectively represented by a loaded parallel resonant circuit as in most radio-frequency amplifiers. In any case, calculated values apply only to effectively resistive loads, such as are normally closely approximated in radio-frequency amplifiers. With appreciably reactive loads, operating currents and voltages will in general be quite different and their precise calculation is quite difficult.

The physical load resistance present in any given set-up may be measured by audio-frequency or radio-frequency bridge methods. In many cases, the proper value of r_l is ascertained experimentally as in radio-frequency amplifiers which are tuned to the proper minimum d-c plate current. Conversely, if the circuit is to be matched to the tube, r_l is determined directly as in a resistance-coupled amplifier or as

$$r_l = N^2 r_e$$

in the case of a transformer-coupled stage, where N is the primary-to-secondary voltage transformation ratio. In a parallel-resonant circuit in which the output resistance r_s is connected directly in one of the resistance legs,

$$r_l = \frac{X^2}{r_e} = \frac{L}{Cr_e} = QX,$$

where X is the leg reactance at resonance (ohms).

L and C are leg inductance (henries) and capacitance (farads), respectively,

$$Q = \frac{X}{r_a}$$

Graphical design methods

When accurate operating data are required, more precise methods must be used. Because of the non-linear nature of tube characteristics, graphical methods usually are most convenient and rapid. Examples of such methods are given below.

A comparison of the operating regimes of class A, AB, B, and C amplifiers is given in the constant-current current characteristics graph of Fig. 1. The

lines corresponding to the different classes of operation are each the locus of instantaneous grid e_c and plate e_b voltages, corresponding to their respective load impedances.

For radio-frequency amplifiers and oscillators having tuned circuits giving an effective resistive load, plate and grid tube and load alternating voltages are sinusoidal and in phase (disregarding transit time), and the loci become straight lines.

For amplifiers having non-resonant resistive loads, the loci are in general non-linear except in the distortionless case of linear tube characteristics (constant r_p) for which they are again straight lines.

Thus, for determination of radio-frequency performance, the constant-current chart is convenient. For solution of audio-frequency problems, however, it is more convenient to use the $(i_b - e_c)$ transfer characteristics of Fig. 2 on which a dynamic load line may be constructed.

Methods for calculation of the most important cases are given below.

Class C r-f amplifier or oscillator

Draw straight line from A to B (Fig. 1) corresponding to chosen d-c operating plate and grid voltages, and to desired peak alternating plate and grid voltage excursions. The projection of AB on the horizontal axis thus corresponds to $^{\rm M}E_p$. Using Chaffee's 11-point method of harmonic analysis, lay out on AB points:

$$e'_{p} = {}^{M}E_{p}$$
 $e''_{p} = 0.866 {}^{M}E_{p}$ $e'''_{p} = 0.5 {}^{M}E_{p}$

to each of which correspond instantaneous plate currents i'_b , i''_b and i'''_b and instantaneous grid currents i'_c , i''_c and i'''_c . The operating currents are obtained from the following expressions:

$$I_{b} = \frac{1}{12} \left[i'_{b} + 2 i''_{b} + 2 i'''_{b} \right] \qquad I_{c} = \frac{1}{12} \left[i'_{c} + 2 i''_{c} + 2 i'''_{c} \right]$$

$${}^{M}I_{p} = \frac{1}{6} \left[i'_{b} + 1.73 i''_{b} + i'''_{b} \right] \qquad {}^{M}I_{g} = \frac{1}{6} \left[i'_{c} + 1.73 i''_{c} + i'''_{c} \right].$$

Substitution of the above in the following give the desired operating data.

Power output
$$P_0 = \frac{{}^{\mathbf{M}} E_{p} {}^{\mathbf{M}} I_{p}}{2}$$

Power input $P_i = E_b I_b$

Average grid excitation power =
$$\frac{{}^{M}E_{g}{}^{M}I_{g}}{2}$$

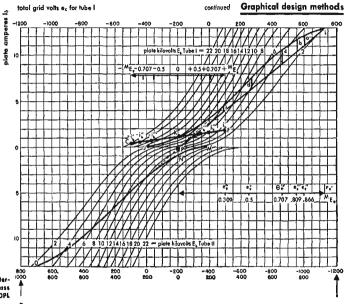


Fig. 2—Transfer characteristics is versus es with class A₇—CKF and class B—OPL tood lines.

Peak grid excitation power = ${}^{M}E_{g}i'_{g}$

Plate load resistance
$$\mathbf{r}_l = \frac{^{\mathrm{M}} \mathbf{F}_p}{^{\mathrm{M}} I_p}$$

Grid bias resistance
$$R_c = \frac{E_c}{I_c}$$

Plate efficiency
$$\eta = \frac{P_0}{P_i}$$

Plate dissipation $P_p = P_i - P_0$

The above procedure may also be applied to plate-modulated class C amplifiers. Taking the above data as applying to carrier conditions, the analysis is repeated for $^{\text{crest}}E_b=2E_b$ and $^{\text{crest}}P_0=4P_0$ keeping r_l constant. After a cut-and-try method has given a peak solution, it will often be found that combination fixed and self grid biasing as well as grid modulation is indicated to obtain linear operation.

To illustrate the preceding exposition, a typical amplifier calculation is given below:

Operating requirements (carrier condition)

$$E_b = 12,000 \text{ volts}$$
 $P_0 = 25,000 \text{ watts}$ $\eta = 75\%$

Preliminary calculation (refer to Table II)

Table II—Class C r-f amplifier data 100% plate modulation

	preliminary	dete	ailed
symbol	carrier	carrier	crest
Eb (volts)	12,000	12,000	24,000
MEp (volts)	10,000	10,000	20,000
E. (voits)		— 1,000	-700
ME, (volts)		1,740	1,740
Ib (amp)	2.9	2.8	6.4
M_{I_p} (amp)	4.9	5.1	10.2
I _a (amp)		0.125	0.083
M_{I_p} (amp)		0.255	0.183
P; (watts)	35,000	33,600	154,000
Po (watts)	25,000	25,50	102,000
P_{σ} (watts)		220	160
η (percent)	75	76	66
rz (ohms)	2,060	1,960	1,960
R _c (ohms)		7,100	7,100
E _{cc} (volts)		-110	-110

$$\begin{split} \frac{E_p}{E_b} &= 0.6 \\ E_p &= 0.6 \times 12,000 = 7200 \text{ volts} \\ ME_p &= 1.41 \times 7200 = 10,000 \text{ volts} \\ I_p &= \frac{P_o}{E_p} \\ I_p &= \frac{25,000}{7200} = 3.48 \text{ amperes} \\ MI_p &= 4.9 \text{ amperes} \\ \frac{I_p}{I_b} &= 1.2 \\ I_b &= \frac{3.48}{1.2} = 2.9 \text{ amperes} \\ P_i &= 12,000 \times 2.9 = 35,000 \text{ watts} \\ \frac{M_{i_b}}{I_b} &= 4.5 \\ M_{i_b} &= 4.5 \times 2.9 = 13.0 \text{ amperes} \\ r_l &= \frac{E_p}{I_p} = \frac{7200}{3.48} = 2060 \text{ ohms} \end{split}$$

Complete calculation

Layout carrier operating line, AB on constant current graph, Fig. I, using values of E_b , $^{\mathbf{M}}E_p$, and $^{\mathbf{M}}i_b$ from preliminary calculated data. Operating carrier bias voltage, E_c , is chosen somewhat greater than twice cutoff value, 1000 volts, to locate point A.

The following data are taken along AB:

$$i_b{'}' = 13 \text{ amp}$$
 $i_c{'} = 1.7 \text{ amp}$ $E_c = -1000 \text{ volts}$ $i_b{''}' = 10 \text{ amp}$ $i_c{''} = -0.1 \text{ amp}$ $e_c{'} = 740 \text{ volts}$ $i_b{'''} = 0.3 \text{ amp}$ $i_c{'''} = 0 \text{ amp}$ ${}^{\text{M}}E_p = 10,000 \text{ volts}$

From the formulas, complete carrier data as follows are calculated:

$$^{M}I_{p} = \frac{1}{6} [13 + 1.73 \times 10 + 0.3] = 5.1 \text{ amp}$$
 $P_{0} = \frac{10,000 \times 5.1}{2} = 25,500 \text{ watts}$
 $I_{b} = \frac{1}{12} [13 + 2 \times 10 + 2 \times 0.3] = 2.8 \text{ amp}$
 $P_{s} = 12,000 \times 2.8 = 33,600 \text{ watts}$

$$\eta = \frac{25,500}{33,600} \times 100 = 76 \text{ percent}$$
 $r_{I} = \frac{10,000}{5.1} = 1960 \text{ ohms}$
 $I_{c} = \frac{1}{12} [1.7 + 2 (-0.1)] = 0.125 \text{ amp}$
 $M_{I_g} = \frac{1}{6} [1.7 + 1.7 (-0.1)] + 0.255 \text{ amp}$
 $P_{g} = \frac{1740 \times 0.255}{2} = 220 \text{ watts}$

Operating data at 100 percent positive modulation crests are now calculated knowing that here

$$E_b = 24,000 \text{ volts}$$
 $r_s = 1960 \text{ ohms}$

and for undistorted operation

$$P_0 = 4 \times 25,500 = 102,000 \text{ watts}$$
 $^{M}E_p = 20,000 \text{ volts}$

The crest operating line A'B' is now located by trial so as to satisfy the above conditions, using the same formulas and method as for the carrier condition.

It is seen that in order to obtain full-crest power output, in addition to doubling the alternating plate voltage, the peak plate current must be increased. This is accomplished by reducing the crest bias voltage with resultant increase of current conduction period, but lower plate efficiency.

The effect of grid secondary emission to lower the crest grid current is taken advantage of to obtain the reduced grid-resistance voltage drop required. By use of combination fixed and grid resistance bias proper variation of the total bias is obtained. The value of grid resistance required is given by

$$R_c = \frac{-\left[E_c - \frac{crest}{E_c}\right]}{I_c - \frac{crest}{I_c}}$$

and the value of fixed bias by

$$E_{cc} = E_c - (I_c R_c)$$

Calculations at carrier and positive crest together with the condition of zero output at negative crest give sufficiently complete data for most purposes. If accurate calculation of audio-frequency harmonic distortion is necessary the above method may be applied to the additional points required.

Class B r-f amplifiers

A rapid approximate method is to determine by inspection from the tube $(i_b - e_b)$ characteristics the instantaneous current, i'_b and voltage e'_b corresponding to peak alternating voltage swing from operating voltage E_b .

A-C plate current
$${}^{\mathrm{M}}I_{p}=\frac{\mathrm{i}'_{b}}{2}$$

D-C plate current
$$I_b = \frac{i'_b}{\pi}$$

A-C plate voltage
$${}^{\mathrm{M}}E_{p}=E_{b}-\mathrm{e'}_{b}$$

Power output
$$P_0 = \frac{(E_b - e'_b) i'_b}{4}$$

Power input
$$P_i = \frac{E_b i'_b}{\pi}$$

Plate efficiency
$$\eta = \frac{\pi}{4} \left(1 - \frac{e'_b}{E_b} \right)$$

Thus $\eta \cong 0.6$ for the usual crest value of $^{\rm M}{\rm E}_p \cong 0.8$ ${\rm E}_b$.

The same method of analysis used for the class C amplifier may also be used in this case. The carrier and crest condition calculations, however, are now made from the same E_b , the carrier condition corresponding to an alternating-voltage amplitude of $\frac{^{M}E_p}{2}$ such as to give the desired carrier power output.

For greater accuracy than the simple check of carrier and crest conditions, the radio-frequency plate currents $^{M}I'_{p}$, $^{M}I''_{p}$, $^{M}I'''_{p}$, $^{M}I^{o}_{p}$, $^{-M}I'''_{p}$, $^{-M}I''_{p}$, and $^{-M}I'_{p}$ may be calculated for seven corresponding selected points of the audio-frequency modulation envelope + $^{M}E_{g}$, + 0.707 $^{M}E_{g}$, + 0.5 $^{M}E_{g}$, 0, $-0.5^{M}E_{g}$, 0, 0, 0.707 $^{M}E_{g}$, and 0, where the negative signs denote values in the negative half of the modulation cycle. Designating

$$S' = {}^{M}I'_{p} + (-{}^{M}I'_{p})$$

 $D' = {}^{M}I'_{p} - (-{}^{M}I'_{p}), \text{ etc.},$

the fundamental and harmonic components of the output audio-frequency current are obtained as

$${}^{\rm M}I_{p1} = \frac{{\rm S}'}{4} + \frac{{\rm S}''}{2\sqrt{2}}$$
 (fundamental) ${}^{\rm M}I_{p2} = \frac{5\,{\rm D}'}{24} + \frac{{\rm D}''}{4} - \frac{{\rm D}'''}{3}$

$${}^{\mathbf{M}}I_{p3} = \frac{S'}{6} - \frac{S'''}{3}$$

$${}^{\mathbf{M}}I_{p6} = \frac{S'}{12} - \frac{S''}{2\sqrt{2}} + \frac{S'''}{3}$$

$${}^{\mathbf{M}}I_{p4*} = \frac{D'}{8} - \frac{D''}{4}$$

$${}^{\mathbf{M}}I_{p6} = \frac{D'}{24} - \frac{D''}{4} + \frac{D'''}{3}$$

This detailed method of calculation of audio-frequency harmonic distortion may, of course, also be applied to calculation of the class C modulated amplifier, as well as to the class A modulated amplifier.

Class A and AB a-f amplifiers

Approximate formulas assuming linear tube characteristics:

Maximum undistorted power output
$${}^{M}P_{0} = \frac{{}^{M}E_{p}{}^{M}I_{p}}{2}$$

when plate load resistance
$$n = r_p \left[\frac{E_c}{\frac{ME_p}{\mu} - E_c} - 1 \right]$$

and

Negative grid bias
$$E_c = \frac{{}^{M}E_p}{\mu} \left(\frac{r_l + r_p}{r_l + 2r_p} \right)$$

giving

Maximum plate efficiency
$$\eta = \frac{{}^{\mathrm{M}}E_{p}{}^{\mathrm{M}}I_{p}}{8E_{b}I_{b}}$$

Maximum maximum undistorted power output $^{\mathbf{MM}}P_0 = \frac{^{\mathbf{M}}E^2_p}{16~r_p}$ when

$$r_l = 2 r_p \qquad E_c = \frac{3}{4} \frac{{}^{M}E_p}{\mu}$$

An exact analysis may be obtained by use of a dynamic load line laid out on the transfer characteristics of the tube. Such a line is CKF of Fig. 2 which is constructed about operating point K for a given load resistance n from the following relation:

$$i_b^{S} = \frac{e_b^{R} - e_b^{S}}{n} + i_b^{R}$$

where

R, S, etc., are successive conveniently spaced construction points.

Using the seven-point method of harmonic analysis, plot instantaneous plate currents i'_b , i''_b , i''_b , i_b , $-i''_b$, $-i''_b$, and $-i'_b$ corresponding to $+{}^{\rm M}E_g$, $+0.707{}^{\rm M}E_g$, $+0.5{}^{\rm M}E_g$, $0,-0.5{}^{\rm M}E_g$, $-0.707{}^{\rm M}E_g$, and $-{}^{\rm M}E_g$, where 0 corresponds to the operating point K. In addition to the formulas given under class B radio-frequency amplifiers:

$$I_b$$
 average = $I_b + \frac{D'}{8} + \frac{D''}{4}$

from which complete data may be calculated,

Class AB and B a-f ampliflers

Approximate formulas assuming linear tube characteristics give (referring to Fig. 1, line CD) for a class B audio-frequency amplifier:

$$MI_{p} = i'_{b}$$

$$P_{0} = \frac{ME_{p} MI_{p}}{2}$$

$$P_{i} = \frac{2}{\pi} E_{b} MI_{p}$$

$$\eta = \frac{\pi}{4} \frac{ME_{p}}{E_{b}}$$

$$R_{pp} = 4 \frac{ME_{p}}{i'_{b}} = 4r_{b}$$

Again an exact solution may be derived by use of the dynamic load line JKL on the $(i_b - e_c)$ characteristic of Fig. 2. This line is calculated about the operating point K for the given r_i (in the same way as for the class A case). However, since two tubes operate in phase opposition in this case, an identical dynamic load line MNO represents the other half cycle, laid out about the operating bias abscissa point but in the opposite direction (see Fig. 2).

Algebraic addition of instantaneous current values of the two tubes at each value of e_c gives the composite dynamic characteristic for the two tubes OPL. Inasmuch as this curve is symmetrical about point P it may be analyzed for harmonics along a single half curve PL by the Mouromtseff 5-point method. A straight line is drawn from P to L and ordinate plate current differences a, b, c, d, f between this line and curve, corresponding to $e^{\prime\prime}_{g}$, $e^{\prime\prime}_{g}$, $e^{\prime\prime}_{g}$, are measured. Ordinate distances measured upward from curve PL are taken positive.

Fundamental and harmonic current amplitudes and power are found from the following formulas:

$$\begin{split} ^{\mathbf{M}}I_{p1} &= i'_{b} - ^{\mathbf{M}}I_{p3} + ^{\mathbf{M}}I_{p5} - ^{\mathbf{M}}I_{p7} + ^{\mathbf{M}}I_{p9} - ^{\mathbf{M}}I_{p11} \\ ^{\mathbf{M}}I_{p3} &= 0.4475 \ (b + f) + \frac{d}{3} - 0.578 \ d - \frac{1}{2} ^{\mathbf{M}}I_{p5} \\ ^{\mathbf{M}}I_{p5} &= 0.4 \ (a - f) \\ ^{\mathbf{M}}I_{p7} &= 0.4475 \ (b + f) - ^{\mathbf{M}}I_{p3} + 0.5 ^{\mathbf{M}}I_{p5} \\ ^{\mathbf{M}}I_{p9} &= ^{\mathbf{M}}I_{p3} - \frac{2}{3} \ d \\ ^{\mathbf{M}}I_{p11} &= 0.707c - ^{\mathbf{M}}I_{p3} + ^{\mathbf{M}}I_{p5}. \end{split}$$

Even harmonics are not present due to dynamic characteristic symmetry. The direct current and power input values are found by the 7-point analysis from curve PL and doubled for two tubes.

Classification of amplifier circuits

The classification of amplifiers in classes A, B, and C is based on the operating conditions of the tube.

Another classification can be used, based on the type of circuits associated with the tube.

A tube can be considered as a four-terminal network with two input terminals and two output terminals. One of the input terminals and one of the output terminals are usually common; this common junction or point is usually called "ground".

When the common point is connected to the filament or cathode of the tube, we can speak of a grounded-cathode circuit. It is the most conventional type of vacuum tube circuit. When the common point is the grid, we can speak of a grounded-grid circuit, and when the common point is the plate or anode, we can speak of the grounded-anode circuit.

This last type of circuit is most commonly known by the name of cathode follower.

A fourth and most general class of circuit is obtained when the common point or ground is not directly connected to any of the three electrodes of the tube. This is the condition encountered at u-h-f where the series impedances of the internal tube leads make it impossible to ground any of them. It is also encountered in such special types of circuits as the phase-splitter, in which the impedance from plate to ground and the impedance from cathode to ground are made equal in order to obtain an output between plate and cathode balanced with respect to ground.

Table III—Classification of triode amplifier circuits

circuit classification	grounded- cathode	grounded- grid	grounded-plate or cathode follower			
Circuit schematic	Input output	input	input output			
Equivalent circuit, a-c component, class A operation			C ₃₁ F Γ Γ Γ Γ Γ Γ Γ Γ Γ Γ Γ Γ Γ Γ Γ Γ Γ Γ			
	neglecting Cgp	neglecting Cpk	neglecting Cgk			
Voltage gain, γ for output load impedance = Z_2	$\gamma = \frac{1}{r_p + Z_2}$	$\gamma = (1+\mu) \frac{Z_2}{r_p + Z_2}$	$\gamma = \frac{\mu Z_2}{r_p + (1 + \mu) Z_2}$			
$\gamma = \frac{E_2}{E_1}$	$=-g_m\frac{r_pZ_2}{r_p+Z_2}$					
	$(Z_2 \text{ includes } C_{pk})$	$(Z_2 \text{ includes } C_{gp})$	$(Z_2 \text{ includes } C_{p,k})$			
Input admittance $Y_1 = \frac{f_1}{\tilde{E}_1}$	$Y_1 = J\omega[C_{\sigma k} + (1 - \gamma)C_{\sigma p}]$	$Y_1 = j\omega [C_{gk} + \frac{1+\mu}{r_p + Z_2}]$	$Y_1 = j\omega[C_{gp} + (1-\gamma)C_{gk}]$			
Equivalent generator seen by load at output terminals	neglecting C _{op}	neglecting C_{plo}	neglecting C_{ak} $ \frac{r_{a}}{1+\mu} $ output $ \frac{\mu}{1+\mu}E_{1} $			

Classification of amplifier circuits continued

Design information for the first three classifications is given in Table III, where

 $Z_2 = load$ impedance to which output terminals of amplifier are connected

 $E_1 = \text{rms}$ driving voltage across input terminals of amplifier

 $E_2 = \text{rms}$ output voltage across load impedance Z_2

 $I_1 = \text{rms}$ current at input terminals of amplifier

 γ = voltage gain of amplifier = $\frac{E_2}{E_1}$

 Y_1 = input admittance to input terminals of amplifier = $\frac{I_1}{E_1}$

 $\omega = 2\pi \times \text{frequency of excitation voltage } E_1$ $i = \sqrt{-1}$

and the remaining notation is in accordance with the nomenclature of pages 127 and 128.

Cathode follower data

General characteristics

- 1. High impedance input, low impedance output.
- 2. Input and output have one side grounded.
- 3. Good wide-band frequency and phase response.
- 4. Output is in phase with input.
- 5. Voltage gain or transfer is always less than one.
- 6. A power gain can be obtained.
- 7. Input capacitance is reduced.

General case

Transfer =
$$\frac{g_m R_L}{g_m R_L + 1}$$
 or $g_m Z_r$


 $Z_r = \text{resultant cathode to ground impedance} = R_{out}$ in parallel with R_e

 R_{out} = output resistance = $\frac{R_p}{\mu + 1}$ or approximately $\frac{1}{g_m}$

 $R_L = \text{total load resistance}$

Input capacitance = $C_{gp} + \frac{C_{gk}}{1 + g_m R_L}$


 g_m = transconductance in mhos (1000 micromhos = 0.001 mhos)

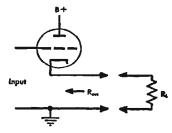


Cathode follower data continued

Specific cases

- 1. To match the characteristic impedance of the transmission line, R_{out} must equal Z_0 . The transfer is approximately 0.5.
- **2.** If R_{out} is less than Z_0 , add resistor R_c' in series so that $R_c' = Z_0 R_{out}$. The transfer is approximately 0.5.

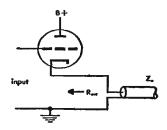

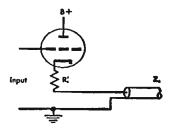


3. If R_{out} is greater than Z_0 add resistor R_c in parallel so that

$$R_c = \frac{Z_0 R_{out}}{R_{out} - Z_0}$$

Transfer =
$$\frac{g_m Z_0}{2}$$

Note: Normal operating bias must be provided.

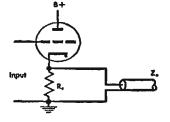

For coupling a high impedance into a low impedance transmission line, for maximum transfer choose a tube with a high g_m

Resistance-coupled audio amplifler design

Stage gain at

Medium frequencies =
$$A_m = \frac{\mu R}{R + R_p}$$

High frequencies
$$= A_h = \frac{A_m}{\sqrt{1 + \omega^2 C_1^2 r^2}}$$

Low frequencies*
$$= A_1 = \frac{A_m}{\sqrt{1 + \frac{1}{\omega^2 C_2^2 \rho^2}}}$$

*The low-frequency stage gain also is affected by the values of the cathode by-pass capacitor and the screen by-pass capacitor.

Resistance coupled audio amplifier design continued

where

$$R = \frac{r_l R_2}{r_l + R_2}$$

$$r = \frac{Rr_p}{R + r_p}$$

$$\rho = R_2 + \frac{r_l \, r_p}{r_l + r_p}$$

 $\mu =$ amplification factor of tube

 $\omega = 2\pi \times \text{frequency}$


 r_1 = plate load resistance in ohms

 R_2 = grid leak resistance in ohms

 $r_p = a$ -c plate resistance in ohms

 C_1 = total shunt capacitance in farads

C₂ = coupling capacitance in farads

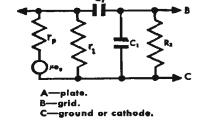

Given C_1 , C_2 , R_2 , and X = fractional response required

At highest frequency

$$r = \frac{\sqrt{1 - X^2}}{\omega C_1 X}$$
 $R = \frac{r r_p}{r_p - r}$ $r_l = \frac{R R_2}{R_2 - R}$

$$R = \frac{r r_p}{r_p - r}$$

$$r_l = \frac{R R_2}{R_2 - R_2}$$

At lowest frequency*

$$C_2 = \frac{\chi}{\omega \rho \sqrt{1 - \chi^2}}$$

*The low-frequency stage gain also is affected by the values of the cathode by-pass capacitor and the screen by-pass capacitor.

Negative feedback

The following quantities are functions of frequency with respect to magnitude and phase:

E, N, and D = signal, noise, and distortion output voltage with feedback e, n, and d = signal, noise, and distortion output voltage without feedback

A = voltage amplification of amplifier at a given frequency

 β = fraction of output voltage fed back; for usual negative feedback, β is negative

 ϕ = phase shift of amplifier and feedback circuit at a given frequency

Reduction in gain caused by feedback


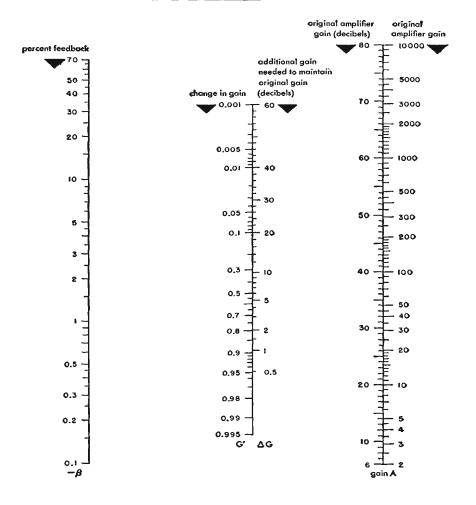


Fig. 3—In negative-feedback amplifier considerations β , expressed as a percentage, has a negative value. A line across the β and A scales intersects the center scale to indicate change in gain. It also indicates the amount, in decibels, the input must be increased to maintain original output.



The total output voltage with feedback is

$$E + N + D = e + \frac{n}{1 - AB} + \frac{d}{1 - AB} \tag{1}$$

It is assumed that the input signal to the amplifier is increased when negative feedback is applied, keeping $E=\mathrm{e}.$

 $(1-A\beta)$ is a measure of the amount of feedback. By definition, the amount of feedback expressed in decibels is

$$20 \log_{10} | 1 - A\beta |$$
 (2)

Voltage gain with feedback =
$$\frac{A}{1 - AB}$$
 (3)

and change of gain
$$=\frac{1}{1-A\beta}$$
 (4)

If the amount of feedback is large, i.e., $-A\beta>>1$, the voltage gain becomes $-\frac{1}{\beta}$ and so is independent of A (5)

In the general case when ϕ is not restricted to 0 or π

the voltage gain =
$$\frac{A}{\sqrt{1 + |A\beta|^2 - 2|A\beta|\cos\phi}}$$
 (6)

and change of gain =
$$\frac{1}{\sqrt{1 + |AB|^2 - 2|AB| \cos \phi}}$$
 (7)

Hence if $|A\beta| > 1$, the expression is substantially independent of ϕ .

On the polar diagram relating $(A \beta)$ and ϕ (Nyquist diagram), the system is unstable if the point (1, 0) is enclosed by the curve.

Feedback amplifier with single beam power tube

The use of the foregoing negative feedback formulas is illustrated by the amplifier circuit shown in Fig. 4.

The amplifier consists of an output stage using a 6V6-G beam power tetrode with feedback driven by a resistance-coupled stage using a 6J7-G in a pentode connection. Except for resistors R_1 and R_2 which supply the feedback voltage, the circuit constants and tube characteristics are taken from published data.

The fraction of the output voltage to be fed back is determined by specifying that the total harmonic distortion is not to exceed 4 percent. The plate supply voltage is taken as 250 volts. At this voltage, the 6V6-G has 8 percent

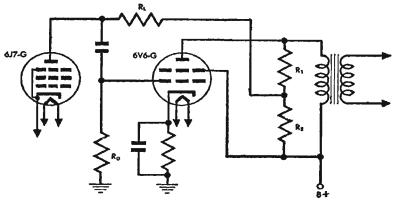


Fig. 4—Feedback amplifier with single beam power tube.

total harmonic distortion. From equation (1), it is seen that the distortion output voltage with feedback is

$$D = \frac{d}{1 - AB}$$

This may be written as

$$1 - A\beta = \frac{d}{D}$$

where

$$\frac{d}{D} = \frac{8}{4} = 2$$
 $1 - A\beta = 2$ $\beta = -\frac{1}{A}$

and where A = the voltage amplification of the amplifier without feedback.

The peak a-f voltage output of the 6V6-G under the assumed conditions is

$$E_0 = \sqrt{4.5 \times 5000 \times 2} = 212 \text{ volts}$$

This voltage is obtained with a peak a-f grid voltage of 12.5 volts so that the voltage gain of this stage without feedback is

$$A = \frac{212}{12.5} = 17$$

Hence

$$\beta = -\frac{1}{A} = -\frac{1}{17} = -0.0589$$
 or 5.9% approximately

The voltage gain of the output stage with feedback is computed from equation (3) as follows

$$A' = \frac{A}{1 - AB} = \frac{17}{2} = 8.5$$

and the change of gain due to feedback by equation (4) thus

$$\frac{1}{1-A\beta}=0.5$$

The required amount of feedback voltage is obtained by choosing suitable values for R_1 and R_2 . The feedback voltage on the grid of the 6V6-G is reduced by the effect of R_g , R_L and the plate resistance of the 6J7-G. The effective grid resistance is

$$R_{g'} = \frac{R_{g} r_{p}}{R_{g} + r_{p}}$$

where $R_g = 0.5 \text{ megohm}$.

This is the maximum allowable resistance in the grid circuit of the 6V6-G with cathode bias.

 $r_p = 4$ megohms, the plate resistance of the 6J7-G tube

$$R_{g'} = \frac{4 \times 0.5}{4 + 0.5} = 0.445 \text{ megohm}$$

The fraction of the feedback voltage across R_2 which appears at the grid of the 6V6-G is

$$\frac{R_{g'}}{R_{g'} + R_{L}} = \frac{0.445}{0.445 + 0.25} = 0.64$$

where $R_{\rm L} = 0.25$ megohm.

Thus the voltage across R_2 to give the required feedback must be

$$\frac{5.9}{0.64}$$
 = 9.2% of the output voltage.

This voltage will be obtained if $R_1 = 50,000$ ohms and $R_2 = 5000$ ohms.

This resistance combination gives a feedback voltage ratio of

$$\frac{5000 \times 100}{50,000 + 5000} = 9.1\%$$
 of the output voltage.

In a transformer-coupled output stage, the effect of phase shift on the gain with feedback does not become appreciable until a noticeable decrease in gain without feedback also occurs. In the high-frequency range, a phase shift of 25 degrees lagging is accompanied by a 10 percent decrease in gain. For this frequency, the gain with feedback is computed from equation (6).

$$A' = \frac{A}{\sqrt{1 + |A\beta|^2 - 2|A\beta|\cos\phi}}$$

where A = 15.3, $\phi = 180^{\circ}$, $\cos \phi = 0.906$, $\beta = 0.059$.

$$A' = \frac{15.3}{\sqrt{1 + |0.9|^2 + 2|0.9|0.906}} = \frac{15.3}{\sqrt{3.44}} = \frac{15.3}{1.85} = 8.27$$

The change of gain with feedback is computed from equation 17).

$$\frac{1}{\sqrt{1 + |AB|^2 - 2|AB|\cos\phi}} = \frac{1}{1.85} = 0.541$$

If this gain with feedback is compared with the value of 8.5 for the case of no phase shift, it is seen that the effect of frequency on the gain is only 2.7 percent with feedback compared to 10 percent without feedback.

The change of gain with feedback is 0.541 times the gain without feedback whereas in the frequency range, where there is no phase shift, the corresponding value is 0.5. This quantity is 0.511 when there is phase shift but no decrease of gain without feedback.

Distortion

A rapid indication of the harmonic content of an alternating source is given by the distortion factor which is expressed as a percentage.

Distortion factor =
$$\sqrt{\frac{\text{sum of squares of amplitudes of harmonics}}{\text{square of amplitude of fundamental}}} \times 100\%$$

If this factor is reasonably small, say less than 10 percent, the error involved in measuring it

$$\sqrt{\frac{\text{sum of squares of amplitudes of harmonics}}{\text{sum of squares of amplitudes of fundamental and harmonics}}} imes 100\%$$

is also small. This latter is measured by the distortion factor meter.

■ Room acoustics*

General considerations for good room acoustics

The following information is intended primarily to aid field engineers in appraising acoustical properties of existing structures and not as a camplete treatise on the subject.

Good acoustics—governing factors

a. Reverberation time or amount of reverberation: Varies with frequency and is measured by the time required for a sound, when suddenly interrupted, to die away or decay to a level 60 decibels (db) below the original sound.

The reverberation time and the shape of the reverberation-time/frequency curve can be controlled by selecting the proper amounts and varieties of sound-absorbent materials and by the methods of application. Room occupants must be considered inasmuch as each person present contributes a fairly definite amount of sound absorption.

b. Standing sound waves: Resonant conditions in sound studios cause standing waves by reflections from opposing parallel surfaces, such as ceiling-floor and parallel walls, resulting in serious peaks in the reverberation-time/frequency curve. Standing sound waves in a room can be considered comparable to standing electrical waves in an improperly terminated transmission line where the transmitted power is not fully absorbed by the load.

Room sizes and proportions for good acoustics

The frequency of standing waves is dependent on room sizes: frequency decreases with increase of distances between walls and between floor and ceiling. In rooms with two equal dimensions, the two sets of standing waves occur at the same frequency with resultant increase of reverberation time at resonant frequency. In a room with walls and ceilings of cubical contour this effect is tripled and elimination of standing waves is practically impossible.

The most advantageous ratio for height: width: length is in the proportion of $1:2^{\frac{1}{3}}:2^{\frac{3}{3}}$ or separated by $\frac{1}{3}$ or $\frac{2}{3}$ of an octave.

In properly proportioned rooms, resonant conditions can be effectively reduced and standing waves practically eliminated by introducing numerous surfaces disposed obliquely. Thus, large-order reflections can be avoided by breaking them up into numerous smaller reflections. The object is to pre-

^{*} Compiled by Edward J. Content, consulting engineer.

Room sizes and proportions for good acoustics continued

vent sound reflection back to the point of origin until after several rereflections.

Most desirable ratios of dimensions for broadcast studios are given in Fig. 1.

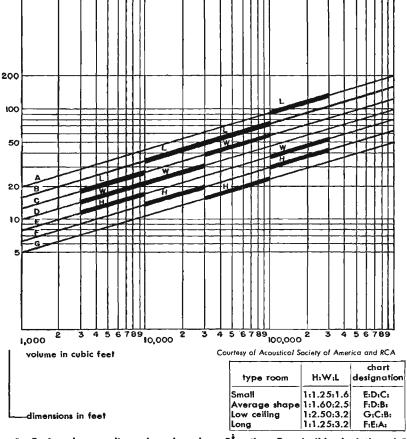


Fig. 1—Preferred room dimensions based on $\mathbf{2}^{\ddagger}$ ratio. Permissible deviation $\pm \mathbf{5}$ percent.

Optimum reverberation time

Optimum, or most desirable reverberation time, varies with (1) room size, and (2) use, such as music, speech, etc. (see Figs. 2 and 3).

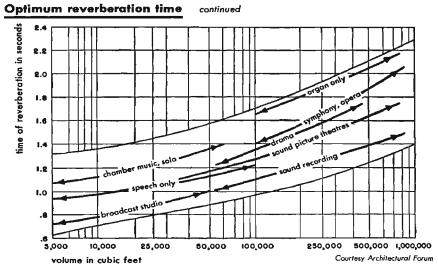


Fig. 2—Optimum reverberation time in seconds for various room volumes at 512 cycles per second.

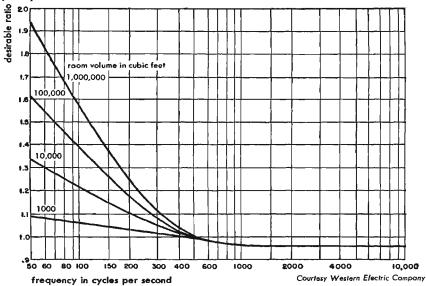


Fig. 3—Desirable relative reverberation time versus frequency for various structures and auditoriums.

Note. These curves show the desirable ratio of the reverberation time for various frequencies to the reverberation time for 512 cycles. The desirable reverberation time for any frequency between 60 and 8000 cycles may be found by multiplying the reverberation time at 512 cycles (from Fig. 2) by the number in the vertical scale which corresponds to the frequency chosen.

Optimum reverberation time continued

A small radio studio for speech broadcasts represents a special case. The acoustic studio design should be such that the studio neither adds nor detracts from the speaker's voice, which on reproduction in the home should sound as though he were actually present.

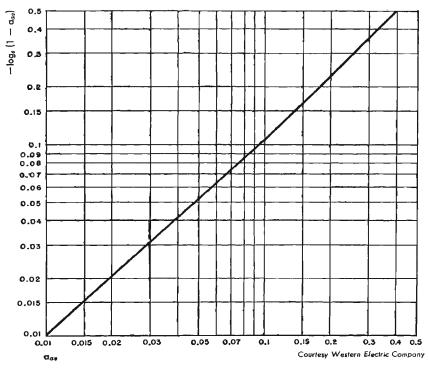


Fig. 4.

For optimum characteristics of a speech studio, the reverberation time should be about one-half a second throughout the middle and lower audio-frequency range. At high frequencies, the reverberation time may be 20 percent to 25 percent greater than at 512 cycles. This rise at the higher frequencies enhances intelligibility and allows for the presence in the studio of one or two extra persons without materially affecting the reverberation-time/frequency curve.

Optimum reverberation time continued

Speech sounds above about 1000 cycles promote intelligibility. Apparent intensity of speech sounds is provided by frequencies below this value.

Preponderance of low bass reverberation and standing waves tends to make the voice sound "boomy" and impairs speech intelligibility.

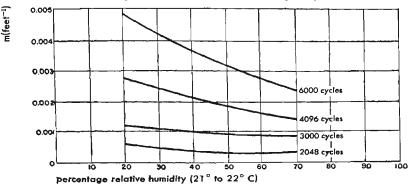


Fig. 5—Value of attenuation constant m at different frequencies and relative humidities.*

Computation of reverberation time

Reverberation time at different audio frequencies may be computed from room dimensions and average absorption. Each portion of the surface of a room has a certain absorption coefficient a dependent on the material of the surface, its method of application, etc. This absorption coefficient is equal to the ratio of the energy absorbed by the surface to the total energy impinging thereon at various audio frequencies. Total absorption for a given surface area in square feet S is expressed in terms of absorption units, the number of units being equal to $a_{av}S$.

$$a_{a*} = \frac{\text{total number of absorption units}}{\text{total surface in square feet}}$$

One absorption unit provides the same amount of sound absorption as one square foot of open window. Absorption units are sometimes referred to as "open window" or "OW" units.

$$T = \frac{0.05V}{-S \log_e (1 - \alpha_{av})}$$

where T = reverberation time in seconds, V = room volume in cubic feet, S = total surface of room in square feet, a_{av} = average absorption coefficient of room at frequency under consideration.

^{*} Reprinted by permission from Architectural Acoustics by V. O. Knudsen, published by John Wiley and Sons, inc.

Computation of reverberation time continued

For absorption coefficients a of some typical building materials, see Table I. As an aid in using the formula for reverberation time, Fig. 4 (page 168) may be used for obtaining $[-\log_e (1 - a_{av})]$ from known values of a_{av} .

Table II shows absorption coefficients for some of the more commonly used materials for acoustical correction.

Table I—Acoustical coefficients of materials and persons*

description	1		absorpt cycles pe	authority			
	128	256	512	1024	2048	1 4096	domonty
Brick wall unpainted Brick wall painted Plaster + finish coat	0.024 0.012	0.025 0.013	0.031 0.017	0.042 0.02	0.049 0.023	0.07 0.025	W. C. Sabine W. C. Sabine
Wood lath—wood studs Plaster + finish coat on metal lath Poured concrete unpainted Poured concrete painted and varnished Carpet, pile on concrete Carpet, pile on ½ felt	0.020 0.038 0.010 0.009 0.09 0.11	0.022 0.049 0.012 0.011 0.08 0.14	0.032 0.060 0.016 0.014 0.21 0.37	0.039 0.085 0.019 0.016 0.26 0.43	0.039 0.043 0.023 0.017 0.27 0.27	0.028 0.056 0.035 0.018 0.37 0.25	P. E. Sabine V. O. Knudsen V. O. Knudsen V. O. Knudsen Building Research Station Building Research Station
Draperles, velour, 18 oz per są yd in contact with wall Ozite 3/8" Rug, axminster Audience, seated per są ft of area Each person, seated	0.05 0.051 0.11 0.72 1.4	0.12 0.12 0.14 0.89 2.25	0.35 0.17 0.20 0.95 3.8	0.45 0.33 0.33 0.99 5.4	0.38 0.45 0.52 1.00 6.6	0.36 0.47 0.82 1.00	P. E. Sabine P. E. Sabine Wente and Bedell W. C. Sabine Bureau of Standards, averages of 4 tests
Each person, seated Glass surfaces	0.05	0.04	0.03	0.025	0.022	7.0 0.02	Estimated Estimated

^{*}Reprinted by permission from Architectural Acoustics by V. O. Knudsen, published by John Wiley and Sons, Inc.

Table II—Acoustical coefficients of materials used for acoustical correction

material		cy	cles p	97 SOCO	nd	noise-	manufactured by	
	128	256	512	1024	2048	4096	coef *	
C-1	0.08	0.12	0.51	0.75		0.44	0.45	
Corkoustic—B4	0.15	0.13	0.51	0.60	0.47 0.58	0.46 0.38	0.45	Armstrong Cork Co.
Corkoustic—B6							0.33	Armstrong Cork Co.
Cushiontone A-3	0,17	0.58	0.70	0,90	0.76	0.71		Armstrong Cork Co.
Koustex	0.10	0.24	0.64	0.92	0.77	0.75	0.65	David E. Kennedy, Inc.
Sanacoustic (metal) tiles	0.25	0.56	0.99	0.99	0.91	0.82	0.85	Jahns-Manville Sales Corp.
Permacoustic tiles 3/4"	0.19	0.34	0.74	0.76	0.75	0.74	0.65	Johns-Manville Sales Corp.
Low-frequency element	0.66	0.60	0.50	0.50	0.35	0.20	0.50	Johns-Manville Sales Corp.
Triple-tuned element	0.66	0.61	0.80	0.74	0.79	0.75	0.75	Johns-Manville Sales Corp.
High-frequency element	0.20	0.46	0.55	0.66	0.79	0.75	0.60	Johns-Manville Sales Corp.
Absorbatone A	0.15	0.28	0.82	0.99	0.87	0.98	0.75	Luse Stevenson Co.
Acoustex 60R	0.14	0.28	0.81	0.94	0.83	0.80	0.70	National Gypsum Co.
Econocoustic 1"	0,25	0.40	0.78	0.76	0.79	0.68	0.70	National Gypsum Co.
fiberglas acoustical tiletype TW-								1
PF 9D	0.22	0.46	0.97	0.90	0.68	0.52	0.75	Owens-Corning Fiberglas
11.75				\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	0.00	0.02		Corp.
Acoustone D 11/6"	0,13	0.26	0.79	0.88	0.76	0.74	0.65	U. S. Gypsum Company
Acoustone F 15/6	0,16	0.33	0.85	0.89	0.80	0.75	0.70	U. S. Gypsum Company
Acousti-celotex type C-6 114"	0.30	0.56	0.94	0.96	0.69	0.56	0.80	The Celotex Corp.
Absorbex type A 1"	0.41	0.71	0.96	0.88	0.85	0.96	0.85	The Celorex Corp.
Acousteel B metal facing 15/8"	0.29	0.57	0.98	0.99	0.85	0.57	0.85	The Celotex Corp.
Account a motor facility 178	0.27		0.70	0.77	0.00			coustics Materials Association

^{*} The noise-reduction coefficient is the average of the coefficients at frequencies from 256 to 2048 cycles inclusive, given to the nearest 5 percent. This average coefficient is recommended for use in comparing materials for noise-quieting purposes as in offices, hospitals, banks, corridors, etc.

Computation of reverberation time continued

Considerable variation of sound-absorption in air at frequencies above 1000 cycles occurs at high relative humidities (see Fig. 5). Calculation of reverberation time, therefore, should be checked at average relative humidities applicable to the particular location involved. For such check calculations the following formula may be used:

$$T = \frac{0.05V}{-S \log_e (1 - \alpha_{av}) + 4m V}$$

where m is the coefficient in feet⁻¹ as indicated in Fig. 5, page 169.

Electrical power levels for public address requirements

a. Indoor: See Fig. 7, page 172.

b. Outdoor: See Fig. 8, page 173.

Note: Curves are for an exponential trumpet-type horn. Speech levels above reference—average 70 db, peak 80 db. For a loudspeaker of 25 percent efficiency, 4 times the power output would be required or an equivalent of 6 decibels. For one of 10 percent efficiency, 10 times the power output would be required or 10 decibels.

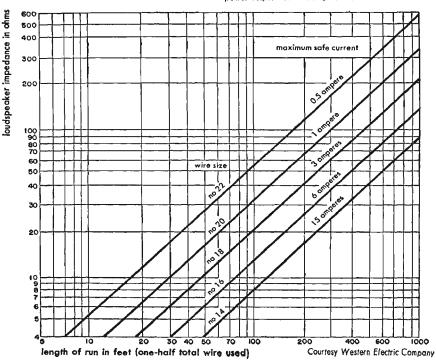


Fig. 6—Wire sixes for loudspeaker circuits assuming maximum loss of 0.5 decibel.

Electrical power levels for public address requirements




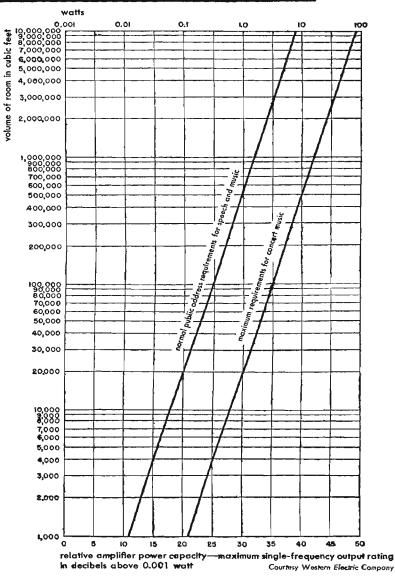


Fig. 7—Room volume and relative amplifier power capacity. To the indicated power level depending on loudspeaker efficiency, there must be added a correction factor which may vary from 4 decibels for the most efficient horn-type reproducers to 20 decibels for less efficient cone loudspeakers.

Electrical power levels for public address requirements

continued

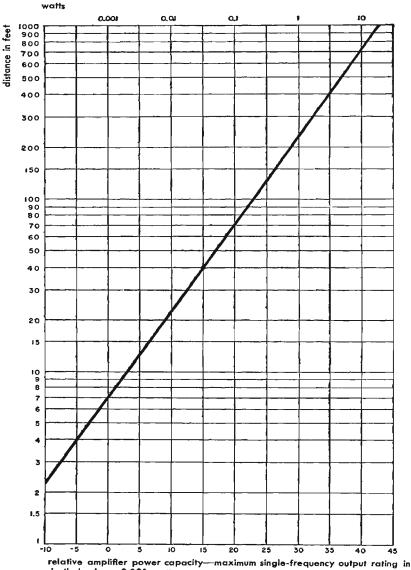

decibels above 0.001 watt

Courtesy Western Electric Company

Fig. 8—Distance from loudspeaker and relative amplifier power capacity required for

speech, average for 30° angle of coverage. For angles over 30°, more loudspeakers and proportional output power are required. Depending on loudspeaker efficiency, a correction factor must be added to the indicated power level, varying approximately from 4 to 7 decibels for the more-efficient type of horn loudspeakers.

Acoustical music ranges and levels

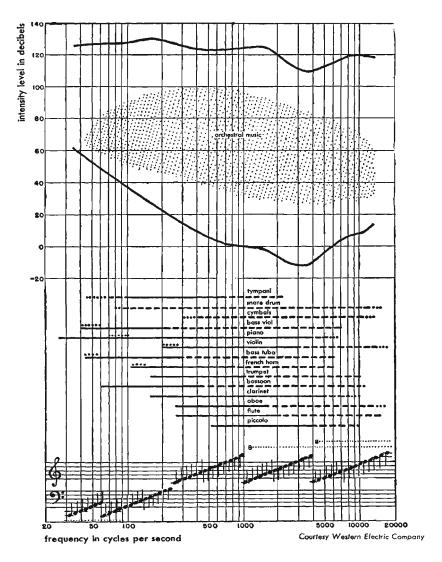


Fig. 9—Frequency ranges of musical instruments. Intensity levels of music. Zero level equals 10^{-10} watt per square centimeter.

Acoustical speech levels and ranges of other sounds

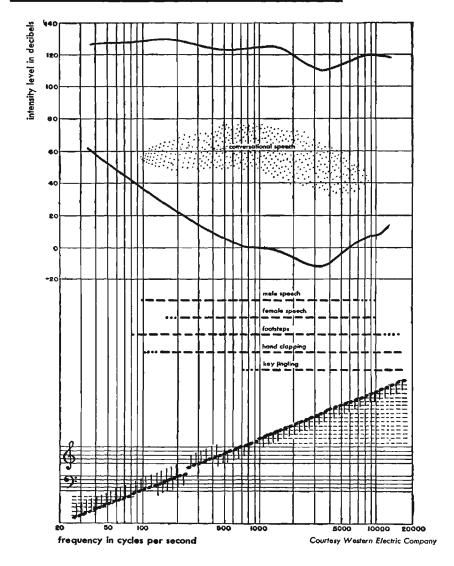


Fig. 10—Frequency ranges of male and female speech and other sounds. Intensity levels of conversational speech. Zero level equals 10^{-16} watt per square continueter.

Acoustical sound level and pressure


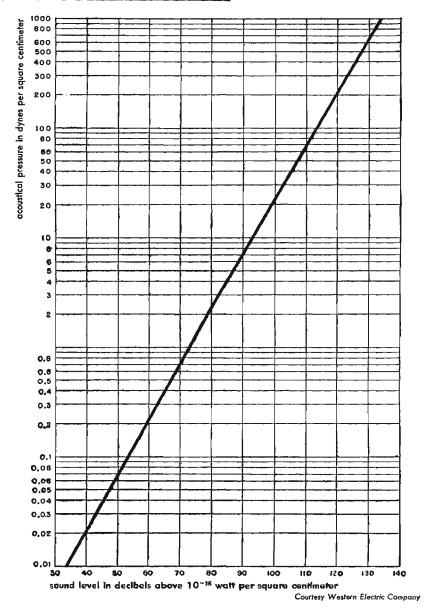


Fig. 11—One dyne per square centimeter is equivalent to an acoustical level of plus 74 decibets.

Table III—Noise levels

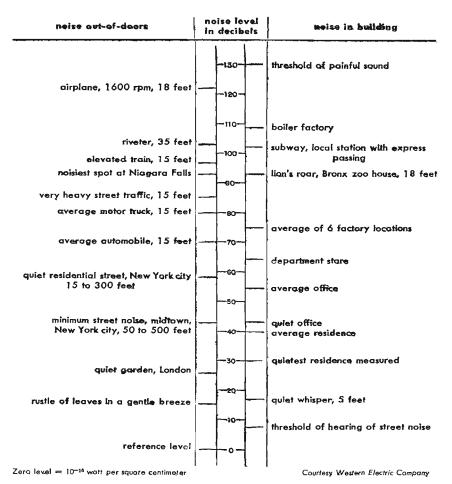

General

- a. Loudspeaker wire sizes: See Fig. 6, page 171.
- b. Acoustical musical ranges and levels: See. Fig. 9, page 174.
- c. Acoustical speech levels and ranges of other sounds: See Fig. 10, page 175.
- d. Acoustical sound levels: See Fig. 11, page 176.
- e. Noise levels: See Table III.

General continued

f. Equal loudness contours: Fig. 12 gives average hearing characteristics of the human ear at audible frequencies and at loudness levels of zero to 120 db versus intensity levels expressed in decibels above 10⁻¹⁶ watt per square centimeter. Ear sensitivity varies considerably over the audible range of sound frequencies at various levels. A loudness level of 120 db is heard fairly uniformly throughout the entire audio range but, as indicated in Fig. 12,

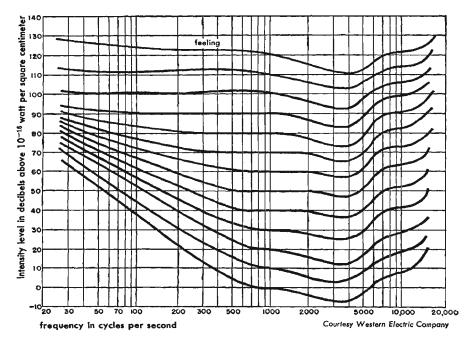


Fig. 12-Equal loudness contours.

a frequency of 1000 cycles at a 20 db level will be heard at very nearly the same intensity as a frequency of 60 cycles at a 60 db level. These curves explain why a loudspeaker operating at lower than normal level sounds as though the higher frequencies were accentuated and the lower tones seriously attenuated or entirely lacking; also, why music, speech, and other sounds, when reproduced, should have very nearly the same intensity as the original rendition. To avoid perceptible deficiency of lower tones, a symphony orchestra, for example, should be reproduced at an acoustical level during the loud passages of 90 to 100 db (see Fig. 9).

■ Wire transmission

Telephone transmission line data

Line constants of copper open-wire pairs

40 pairs DP (double petticoat) insulators per mile 12-inch spacing temperature 68° F

frequency cycles					Inductance nries per lo	leakance micromhos per loop mile: 165, 128, or 104 mil		
per second	165 mil	128 mil	TO4 mii	165 mil	128 mil	104 mil	dry	wet
o	4.02	6.68	10.12	3.37	3.53	3.66	0.01	2.5
500	4.04	6.70	10.13	3.37	3.53	3.66	0.15	3.0
1000	4.11	6.74	10.15	3.37	3.53	3.66	0.29	3.5
2000	4.35	6.89	10.26	3.36	3.53	3.66	0.57	4.5
3000	4.71	7.13	10.43	3.35	3.52	3.66	0.85	5.5
5000	5.56	7.83	10.94	3.34	3.52	3.66	1.4	7.5
10000	7.51	9.98	12.86	3.31	3.49	3.64	2.8	12.1
20000	10.16	13.54	17.08	3.28	3.46	3.61	5.6	20.5
30000	12.19	16,15	20.42	3.26	3.44	3.59	8.4	28.0
40000	13.90	18.34	23.14	3.26	3.43	3.58	11.2	35.0
50000	15.41	20.29	25.51	3.25	3.43	3.57	14.0	41.1
infin		1	1	3.21	3.37	3.50	1	1

Capacitance on 40-wire lines

microfarad per loop mile

	165 mil	128 mil	104 mil
In space	0.00898	0.00855	0.00822
On 40-wire line, dry	0.00915	0.00871	0.00837
On 40-wire line, wet (approx)	0.00928	0.00886	0.00850

Line constants of copper open-wire pairs

53 pairs CS (special glass with steel pin) insulators per mile 8-inch spacing

temperature 68° F

frequency kilocycles	оһп	resistance ns per loop :		nductance nries per lo	leakance micromhes per loop mile: 165, 128, or 104 mil			
per second	165 mil	128 mil	104 mil	165 mil	128 mil	104 mil	dry	wet
0.0	4.02	6.68	10.12	3.11	3.27	3.40	1	
1.0	4.11	6.74	10.15	3.10	3.26	3.40	0.052	1.75
2.0	4.35	6.89	10.26	3.10	3.26	3.40		
3.0	4.71	7.13	10.43	3.09	3.26	3.40		
5.0	5.56	7.83	10.94	3.08	3.25	3.40	0.220	3.40
10.0	7.51	9.98	12.86	3.04	3.23	3.38	0.408	5.14
20.0	10.16	13.54	17.08	3.02	3.20	3.35	0.748	8.06
50.0	15.41	20.29	25.51	2.99	3.16	3.31	1.69	15.9
100.0	21.30	27.90	34.90	2.98	3.15	3.29	3.12	27.6
200.0	29.77	38.77	48.25	2.97	3.14	3.28		
500.0	46.45	60.30	74.65	2.96	3.13	3.27	1	
1000.0	65,30	84,50	104.5	2.96	3.12	3.26	1	l
infin		I	1	2.95	3.11	3.24	l	1

Capacitance on 40-wire lines

microfarad per loop mile

	165 mil	128 mil	104 mil
In space (no insulators)	0.00978	0.00928	88800.0
On 40-wire line, dry	0.01003	0.00951	0.00912

continued Telephone transmission line data

Characteristics of standard types of aerial copper wire telephone circuits at 1000 cycles per second

		l		primary (_	ĺ	brobago	tion con	stant		line i	mpedane	:0	ì	١. ١	١
	gavge	spac-		per loc		•	pe	lor	rector	gular	po	łar	reclas	ngular	į	veloc-	atten-
type of circuit	of wires (mils)	of wires (inches)	R Ohms	L	С µf	G μmho	mag- ni- tude	deg +	α	β	mag- ni- tude	angle deg	Ř ohms	ohms —	wave- length miles	miles per second	– db per mile
Non-Pale Pair Phys	165	8	4.11	.00311	.00996	.14	.0353	83.99	.00370	.0351	565	5.88	562	58	179.0	179,000	.0321
Non-Pole Pair Side	165	12	4.11	.00337	.00915	.29	.0352	84,36	.00346	.03.50	612	5.35	610	57	179.5	179,500	.0300
Pole Pair Side	165	18	4.11	.00364	.00863	.29	.0355	84.75	.00325	.0353	653	5.00	651	57	178.0	178,600	.0282
Non-Pola Pair Phon	165	12	2.06	.00208	.01514	.58	.0355	85.34	.00288	.0354	373	4.30	372	28	177.5	177,500	.0250
Non-Pole Pair Phys	128	8	6.74	.00327	.00944	.14	.0358	80.85	.00569	.03.53	603	8.97	596	94	178.0	178,000	.0494
Non-Pole Pair Side	128	12	6.74	.00353	.00871	.29	.0356	81,39	.00533	.0352	650	6.32	643	94	178.5	178,500	.0462
Pole Pair Side	128	18	6.74	.00380	.00825	.29	.0358	81.95	.00502	.0355	693	7.72	686	93	177.0	177,000	.0436
Non-Pole Pair Phon	128	12	3.37	.00216	.01454	.58	.0357	82.84	.00445	.0355	401	6.73	398	47	177.0	177,000	.0386
Non-Pole Pair Phys	104	8	10.15	.00340	.00905	.14	.0367	77.22	.00811	.0358	644	12.63	629	141	175.5	175,500	.0704
Non-Pole Pair Side	104	12	10.15	.00366	.00637	.29	.0363	77.93	.00760	.0355	692	11.75	677	141	177.0	177,000	.0660
Pole Pair Side	104	18	10.15	.00393	.00797	.29	.0365	78.66	.00718	.0358	733	10.97	717	139	175.5	175,500	.0624
Non-Pole Pair Phan	104	12	5.08	.00223	.01409	_58	.0363	79.84	.00640	.0357	421	9.70	415	71	176.0	176,000	.0556

 DP IDouble Petticoati Insulators assumed for all 12-inch and 18-inch spaced wtres—CS ISpecial Glass with Steel Pint Insulators assumed for all 8-inch spaced wires.

Notes: 1. All values are for dry weather conditions.

2. All copacitance values assume a line carrying 40 wires.

3. Resistance values are for temperature of 20° C 168° N.

Telephone transmission line data continued

Attenuation of 12-inch spaced open-wire pairs

Toll and DP (double petticoat) insulators

1			attenuation is	n db per mile			
size wire	165	mil	128	mil	104 mil		
weather	dry	wet	dry	wet	dry	wet	
frequency			1				
cycles per sec	0107	0070	01.40	0041	0100	0444	
.20	.0127	.0279	.0163	.0361	.0198	.0444	
100	.0231 .0288	.0320 .0367	.0318	.0530	.0620	.0333	
500 1000	.0300	.0387	.0445	.0557	.0620	.0760	
2000	.0303	.0367	.0486	.0598	.0686	.0804	
3000	.0323	.0485	.0511	.0642	.0707	.0845	
5000	.0439	.0598	.0573	.0748	.0757	.0938	
7000	.051	.070	.064	.085	.082	.103	
10000	.061	.085	.076	.102	.093	.120	
15000	.076	.108	.094	.127	.111	.147	
20000	.088	.127	.108	.150	.129	.173	
30000	.110	.161	.135	.188	.159	.216	
40000	.130	.192	.158	.223	.185	.254	
50000 [.148	.220	.179	.253	.209	.287	
(special glass w	ith stee! pin) i	nsulators					
20	.0126	.0252	.0162	.0326	.0197	.0402	
100	.0230	.0303	.0317	.0406	.0401	.0509	
500	.0286	.0348	.0441	.0510	.0618	.0693	
1000	.0296	.0354	.0458	.0532	.0655	.0735	
2000	.0318	.0399	.0475	.0561	.0676	.0767	
3000	-0346	.0437	.0495	.0593	.0694	.0797	
5000 7000	.0412 .048	.0531 .051	.0547 .052	.0668 .075	.0731 .078	.0856 .093	
10000	.057	.072	.032	.087	.088	.104	
15000	.037	.087	.035	.105	.104	.123	
20000	.078	.099	.029	121	1119	.141	
30000	.026	.121	122	.146	145	177	
40000	.111	.138	.133	.166	.166	.195	
50000	.125	.153	.154	.184	.185	.215	

Attenuation of 8-inch spaced open-wire pairs

CS insulators

	attenuation in db per mile									
size wire	165	mil	128	mil	104 mif					
weather	đry	wet	dry	wet	dry	l wef				
frequency										
cycles per sec		}		ì						
10000	-053	.074	.079	.070	.095	-109				
20000	.034	.101	.104	.124	.127	.145				
30000	,101	,124	.125	.150	.151	.177				
50000	.129	.161	.159	.194	.190	.228				
70000	.150	.194	.105	.232	.222	.270				
100000	.178	.236	.220	.280	262	.325				
120000	.195	.261	.240	.310	.286	.359				
140000	-211	.285	259	.337	308	.390				
150000	.218	.296	.268	350	317	.403				

Telephone transmission line data

continued

Line and propagation constants of 16- and 19-AWG toll cable

loop mile basis non-loaded temperature 55° F

frequency kc per sec	resistance ohms per mile	inductance milli- henries per mile	conductance µmho per mile	capacitance µf per mile	ettenuotion db per mile	phase shift radians per mile	characteristic Impedance ahms
16-gauge							
1 2 3 5 10 20 30 50 100 150	40.1 40.3 40.4 40.7 42.5 47.5 53.5 66.5 91.6	1.097 1.095 1.094 1.092 1.085 1.066 1.046 1.013 0.963	1 2 4 8 19 49 83 164 410 690	0.0588 0.0588 0.0587 0.0588 0.0587 0.0585 0.0584 0.0582 0.0580 0.0578	0.69 0.94 1.05 1.15 1.30 1.54 1.77 2.25 3.30 4.17	0.09 0.14 0.19 0.28 0.54 1.01 1.49 2.43 4.71 6.94	251—/215 190—/141 170—/108 154—/71 142—/42 137—/23 135—/17 133—/13 129—/9
19-gauge							
1 2 3 5 10 20 30 50 100 150	83.6 83.7 83.8 84.0 85.0 88.5 93.5 105.4 136.0 164.4	1.108 1.108 1.107 1.106 1.103 1.094 1.083 1.062 1.016 0.985	1 3 4 9 22 56 98 193 484 830	0.0609 0.0609 0.0609 0.0609 0.0608 0.0607 0.0606 0.0604 0.0601 0.0599	1.05 1.44 1.73 2.02 2.43 2.77 3.02 3.53 4.79 6.01	0.132 0.190 0.249 0.347 0.584 1.07 1.56 2.55 4.94 7.27	345—/319 254—/215 215—/170 181—/121 153—/72 141—/41 137—/29 134—/20 131—/13 129—/10

Approximate characteristics of standard types of paper-insulated

wire	type	spacing of toad																
gauge AWG	of loading*	colls miles	R ohms	L henries	R ohms	L henries	C μf	G μmho	magni- tude	angle deg +								
side circ	:uit																	
19 19 19 19 19 19 16 16	N.l.S. H.31-S H.44-S H.88-S H-172-S B-88-S N.LS. H.31-S H-44-S	1.135 1.135 1.135 1.135 0.568 —	2.7 4.1 7.3 13.0 7.3 ———————————————————————————————————	.031 .043 .068 .170 .088 	85.8 88.2 89.4 92.2 97.3 98.7 42.1 44.5 45.7	.001 .028 .039 .078 .151 .156 .001 .028	.062 .062 .062 .062 .062 .062 .062 .062	1.5 1.5 1.5 1.5 1.5 1.5 1.5 1.5	.183 .277 .319 .441 .610 .620 .129 .266 .315	47.0 76.6 79.9 84.6 87.0 87.0 49.1 82.8 84.6								
16 16 16 13	H-88-S H-172-S B-88-S N.L.S.	1.135 1.135 0.568	7.3 13.0 7.3	.088 .170 .088	48.5 53.6 54.9 21.9	.078 .151 .156 .001	.062 .062 .062 .062	1.5 1.5 1.5 1.5	.438 .608 .618 .094	87.6 88.3 88.3 52.9								
19 19 19 19 19 19 19 16 16 16 16 16 16	N.L.P. H-18-P H-25-P H-50-P H-63-P B-50-P N.L.P. H-18-P H-25-P H-63-P B-50-P N.L.P.	1.135 1.135 1.135 1.135 0.568 1.135 1.135 1.135 1.135	1.4 2.1 3.7 6.1 3.7 1.4 2.1 3.7 6.1 3.7	.018 .025 .050 .063 .050 .018 .025 .050 .063 .050	42.9 44.1 44.7 46.2 48.3 49.4 21.0 22.2 22.8 24.3 26.4 27.5 10.9	.0007 .017 .023 .045 .056 .089 .0007 .017 .023 .045 .056 .089	.100 .100 .100 .100 .100 .100 .100 .100	2.4 2.4 2.4 2.4 2.4 2.4 2.4 2.4 2.4 2.4	.165 .270 .308 .424 .472 .594 .116 .262 .303 .422 .471 .593 .086	47.8 78.7 81.3 85.3 86.0 87.4 50.0 84.0 85.4 87.7 88.5 55.1								
physical 16	circuit B-22	0.568	1.25	1 .022	43.1	1 .040 !	.062	1 1.5	.315	85.0								

^{*} The letters H and B indicate loading coil spacings of 6000 and 3000 feet, respectively.

Telephone transmission line data continued

Line constants of shielded 16-gauge spiral-four toll-entrance cable

loop mile basis non-loaded temperature 70° F

frequency kc per sec	resistance ohms per mile	inductance mh per mile	conductance μmho per mile	capacitance µf per mile	attenuation db per mile
side circuit					
0.4	43.5	1.913	1 0.02	0.0247	0.92
0.6	43.5	1.907	0.04	0.0247	0.93
0.8	43.6	1.901	0.06	0.0247	0.93
1.0	43.9	1.891	0.08	0.0247	0.94
2	44.2	1.857	0.20	0.0247	0.95
2 3 5 10	45.2	1.821	0.32	0.0247	0.96
5	49.0	1,753	0.53	0.0247	0.97
10	55.1	1.626	1.11	0.0247	1.00
20	61.6	1.539	2.49	0.0247	1.06
30	66.1	1.507	3.77	0.0247	1.15
40	71.0	1.490	5.50	0.0247	1.26
60	81.5	1.467	8.80	0.0247	1.44
80	90.1	1.450	12.2	0.0247	1.60
100	97.8	1.438	15.81	0.0247	1.77
120	104.9	1.429	19.6	0.0247	1.90
140	111.0	1,421	23.3	0.0247	2.03
200	127.3	1,411	35.1	0.0246	2.35
250	137.0	1,408	46.0	0.0246	1.00
300	149.5	1.406	56.5	0.0246	i
350	159.9	1.405	67.8	0.0246	

Characteristic impedance of this cable at 140 kilocycles approximately 240 ohms. For a description and illustration of this type cable see Kendall and Affel, "A Twelve-Channel Carrier Telephone System for Open-Wire Lines," B.S.T.J.J., January 1939, pp. 129–131.

toll telephone cable circuits at 1000 cycles per second

constant		1	line i	m peda nce	•	1	1	1	-tto-wetto-
		Ро	lar	recta	ngvlar	wave-	velocity	cut-off	attenuation decibels
rectan	gviar	magni-	angle	R	ı x	length	miles per	frequency	per
_ α [β	tude	deg —	ohms	ohms	miles	second	f _o	mile
.1249	.134	1 470.	l 42.8	l 345.	1 319.4	1 46,9	1 46900	1	1 1.08
.0643	.269	710.	13.2	691.	162.2	23.3	23300	6700	1.56
.0561	.314	818.	9.9	806.	140.8	20.0	20000	5700	.49
.0418	.439	1131.	5.2	1126.	102.8	14,3	14300	4000	.36
.0323	.609	1565.	2.8	1563.	76.9	10.3	10300	2900	.28
.0322	.619	1590.	2.8	1588.	76.7	10.2	10200	5700	.28
.0842	.097	331.	40.7	251.	215.4	64.5	64500	3,00	.73
.0334	.264	683.	7.0	677.	83.0	23.8	23800	6700	.29
.0296	.313	808.	5.2	805.	72.8	20.1	20000	5700	.26
.0224	.437	1124.	2.7	1123.	53.1	14.4	14400	4000	.19
.0183	.608	1562.	1.5	1562.	41.1	10.3	10300	2900	.16
.0185	.618	1587.	1.5	1587.	41.4	10.2	10200	5700	.16
.0568	.075	242.	36.9	194.	145.2	83.6	83600	3,00	1 .19
					,	,	, 55555	•	
.1106	.122	262.	42.0	195.	175.2	1 51.5	1 51500	1 —	1 .96
.0529	.264	429.	11.1	421.	82.6	23.8	23800	7000	.46
.0466	.305	491.	8.5	485.	72.4	20.6	20600	5900	.40
.0351	.423	675.	4.5	673.	53.3	14.9	14900	4200	.30
.0331	.471	752.	3.8	750.	49.8	13.3	13300	3700	.29
.0273	.593	945.	2.4	944.	39.8	10.6	10600	5900	.24
.0746	.089	185.	39.0	144.	116.3	70.6	70600		.65
.0273	.260	417.	5.8	415.	41.8	24.1	24100	7000	.24
.0243	.302	483.	4.4	481.	36.8	20.8	20800	5900	21
.0189	.422	672.	2.4	672,	27.5	14.9	14900	4200	.16
.0185	.471	749.	2.0	749.	26.6	13.4	13400	3700	.16
.0157	. 593	944.	1.3	944.	21.4	10.6	10600	5900	.14
.0442	.071	137.	33.9	114.	76,3	89.1	89100	_	.43
•027 3 (. 314	1 809.	4.8	806.					
		1 50%	7.0	000	67.1	J 20.0	20000	11300	l .24

Approximate characteristics of standard types of paper-insulated exchange telephone cable circuits 1000 sycles per second


				mile stants	pro	pagatio	n consi	tant	mid-section characteristic impedance				velocity		atten	
wire		type		G	ро	polar rectangular po		ро	polar rectangular			Wave	miles	cut-	db	
gauge AWG	code no	of loading	CμF	in μmhe	meg	angie (deg)	α	β	mag	angle (deg)	Zot	Zm	length miles	per second	off freq	per mile
26	BST ST	NI NI	.083	1.6 1.6	.439	45.30	.307	.310	910 1007	44.5	— 719	706	20.4	20,400	_	2.9 2.67
24	DSM ASM	NL NL M88 H88 B88	.085 .075 .075 .075 .075	1.9 1.9 1.9 1.9	.355 .448 .512 .684	45.53 70.25 75.28 81.70	.247 .151 .130 .099	.251 .421 .495 .677	725 778 987 1160 1532	44.2 23.7 14.6 8.1	558 904 1122 1515	543 396 292 215	25.0 14.9 12.7 9.3	25,000 14,900 12,700 9,270	3100 3700 5300	2.3 2.15 1.31 1.13 0.86
22	CSA	NL M88 H88 H135 B88 B135	.083 .083 .083 .083 .083	2.1 2.1 2.1 2.1 2.1 2.1 2.1	.297 .447 .526 .644 .718 .890	45.92 76.27 80.11 83.50 84.50 86.50	.207 .106 .0904 .0729 .0689 .0549	.213 .434 .519 .640 .718 .890	576 905 1051 1306 1420 1765	43.8 13.7 9.7 6.3 5.3 3.3	416 880 1040 1300 1410 1770	399 214 177 144 130 102	29.4 14.5 12.1 9.8 8.75 7.05	29,400 14,500 12,100 9,800 8,750 7,050	2900 3500 2800 5000 4000	1.80 0.92 0.79 0.63 0.60 0.48
19	CNB DNB	NL NI M88 H88 H135 H175 B88	.085 .066 .066 .066 .066	1.6 1.6 1.6 1.6 1.6 1.6	.188 .383 .459 .569 .651	47.00 82.42 84.60 86.53 87.23 86.94	.128 .0505 .0432 .0345 .0315 .0342	.138 .380 .459 .570 .651	400 453 950 1137 1413 1643 1565	42.8 8.9 5.2 4.0 3.3 2.8	333 939 1130 1410 1640 1560	308 146 103 99 95 77	45.7 16.6 13.7 11.0 9.7 9.8	45,700 16,600 13,700 11,000 9,700 9,800	3200 3900 3200 2800 5500	1.23 1.12 0.44 0.38 0.30 0.27 0.30
16	NH	NL M88 H88	.064 .064 .064	1.5 1.5 1.5	.133 .377 .458	49.10 85.83 87.14	.0868 .0271 .0238	.1004 .377 .458	320 937 1130	40.6 4.6 2.8	243 934 1130	208 76 55	62.6 16.7 13.7	62,600 16,700 13,700	3200 3900	0.76 0.24 0.21

| H88 | .064 | 1.5 | .458 | 87.14 | .0238 | .458 | 1130 | 2.8 | 1130 | 5.5 | 13.7 | 13,700 | 3900 | 0.21 |
In the third column of the above table the letters M, H, and 8 indicate loading coll spacings of 9000 feet, 6000 feet, and 3000 feet, respectively, and the figures show the inductance of the loading coils used.

Open wire

Frequency allocation chart for type J and K carrier systems

Type J

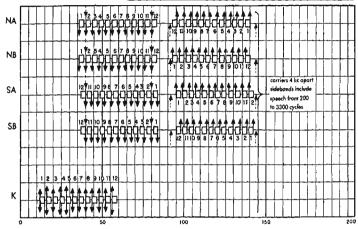

Cable

frequency in kilocycles per second

Pilot frequencies for the K system are 12, 28, and 56 kilocycles per second


Note: Frequency ollocations shown in this chart and in the charts on pages 186, 187, and 188 are as used by the Bell System and the I. T. & T. System.


solid arrows denote carriers dotted arrows denote pilot frequencies

†denotes east—west denotes west—east


= channel no 7

the line frequencies shown are obtained by two or more stages of modulation

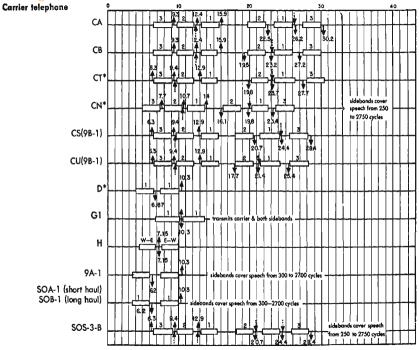

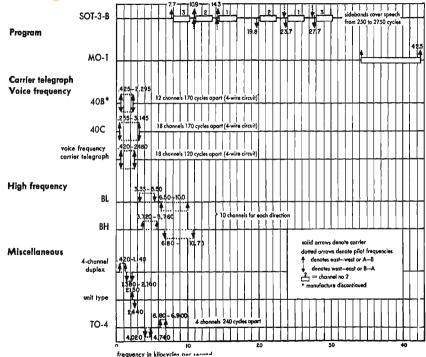

Frequency allocation and modulation steps in the L carrier system

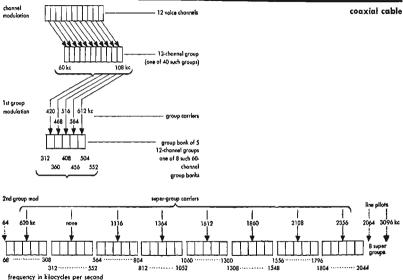

Noise and noise measurement wire telephony

Definitions

The following definitions are based upon those given in the Proceedings of the tenth Plenary Meeting (1934) of the Comité Consultatif International Téléphonique (C.C.I.F.).

Note: The unit in which noise is expressed in many of the European countries differs from the two American standards, the noise unit and the db above reference noise. The European unit is referred to as the psophometric electromotive force.

Noise: Is a sound which tends to interfere with a correct perception of vocal sounds, desired to be heard in the course of a telephone conversation.

It is customary to distinguish between:

- 1. Room noise: Present in that part of the room where the telephone apparatus is used.
- 2. Frying noise (transmitter noise): Produced by the microphone, manifest even when conversation is not taking place.
- 3. Line noise: All noise electrically transmitted by the circuit, other than room noise and frying noise.

Psophometric electromotive force

In the case of a complete telephone connection the interference with a telephone conversation produced by extraneous currents may be compared with the interference which would be caused by a parasitic sinusoidal current of 800 cycles per second. The strength of the latter current, when the interference is the same in both cases, can be determined.

If the receiver used has a resistance of 600 ohms and a negligible reactance (if necessary it should be connected through a suitable transformer), the psophometric electromotive force at the end of a circuit is defined as twice the voltage at 800 cycles per second, measured at the terminals of the receiver under the conditions described.

The psophometric electromotive force is therefore the electromotive force of a source having an internal resistance of 600 ohms and zero internal reactance which, when connected directly to a standard receiver of 600 ohms resistance and zero reactance, produces the same sinusoidal current at 800 cycles per second as in the case with the arrangements indicated above.

Noise and noise measurement

continued

An instrument known as the psophometer has been designed. When connected directly across the terminals of the 600-ohm receiver, it gives a reading of half of the psophometric electromotive force for the particular case considered.

In a general way, the term psophometric voltage between any two points refers to the reading on the instrument when connected to these two points.

If, instead of a complete connection, only a section thereof is under consideration, the psophometric electromotive force with respect to the end of that section is defined as twice the psophometric voltage measured at the terminals of a pure resistance of 600 ohms, connected at the end of the section, if necessary through a suitable transformer.

The C. C. I. F. has published a Specification for a psophometer which is included in Volume II of the Proceedings of the Tenth Plenary Meeting in 1934. An important part of this psophometer is a filter network associated with the measuring circuit whose function is to weight each frequency in accordance with its interference value relative to a frequency of 800 cycles.

Noise levels

The amount of noise found on different circuits, and even on the same circuit at different times, varies through quite wide limits. Further, there is no definite agreement as to what constitutes a quiet circuit, a noisy circuit, etc. The following values should therefore be regarded merely as a rough indication of the general levels which may be encountered under the different conditions:

Open-wire circuit	db above ref noise
Quiet	20
Average	35
Noisy	<i>5</i> 0
Cable circuit	
Quiet	15
Average	25
Noisy	40

Relationship of European and American noise units


The psophometric emf can be related to the American units: the noise unit and the decibel above reference noise.

The following chart shows this relationship together with correction factors for psophometric measurements on circuits of impedance other than 600 ohms.


Noise and noise measurement

continued

Relationship of European and American units

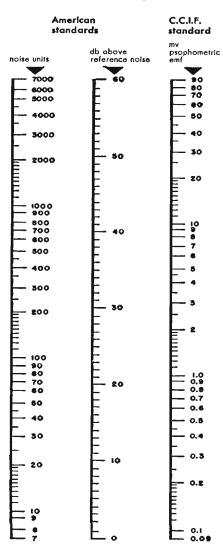

- 1. The relationship of noise units to db's above reference noise is obtained from technical report No. 1B-5 of the joint subcommittee on development and research of the Bell Telephone System and the Edison Electric Institute.
- 2. The relationship of db's above reference noise to psophometric emf is obtained from the Proceedings of C.C.I.F. 1934.
- **3.** The C.C.I.F. expresses noise limits in terms of the psophometric emf for a circuit of 600 ohms resistance and zero reactance, terminated in a resistance of 600 ohms. Measurements made in terms of the potential difference across the terminations, or on circuits of impedance other than 600 ohms, should be corrected as follows:

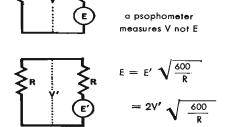

Psophometric emf == E

E = 2V

4. Reference noise—with respect to which the American noise measuring set is calibrated—is a 1000 cycles per second tone 90 db below 1 milliwatt.

Teregraph facilities

	speed of us	ual types
	frequency cycles	bayds
Grounded wire	75	150
Simplex (telephone)	50	100
Composite	15	30
Metallic telegraph	85	170
Carrier channel		
Narrow band	40	80
Wide band	75	150

Telegraph printer systems

Speed depends on two factors: 1. Code used, and 2. frequency handling capacity of transmission facilities. One (1) word = 5 letters and 1 space.

Frequency of printing telegraph systems in cycles per second

Let

S = number of units in code (plus allowance for synchronizing)

N = number of channels

W = revolutions per second

(1 word is assumed to consist of 5 letters and 1 space, or 6 characters.)

f =frequency in cycles per second $f = \frac{1}{2}$ SNW

Examples

1. Three-channel multiplex operating at 60 words per minute, 5-unit code.

$$f = \frac{1}{2} \times 5 \times 3 \times \frac{60 \times 6}{60} = 45$$
 cycles or 90 bauds


2. Single-printer circuit operating at 60 words per minute, 5-unit code $\pm 2\frac{1}{2}$ units for synchronizing.

$$f = \frac{1}{2} \times 7\frac{1}{2} \times 1 \times \frac{60 \times 6}{60} = 22\frac{1}{2}$$
 cycles or 45 bauds

3. Two-channel Baudot operating at 50 words per minute, 5-unit code + 2 units for synchronizing.

$$f = \frac{1}{2} (5 + 2) \times 2 \times \frac{50 \times 6}{60} = 35$$
 cycles or 70 bauds

Comparison of telegraph codes

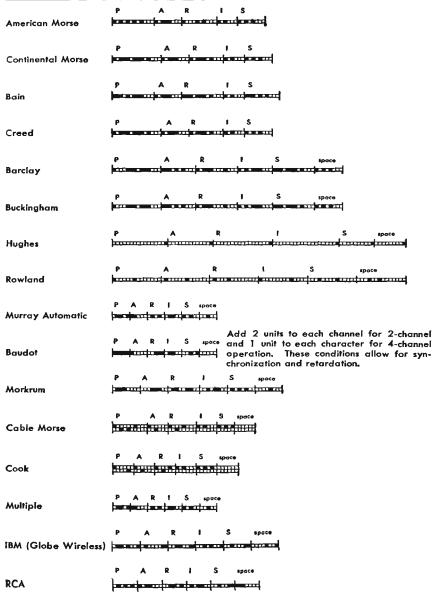

194 CHAPTER TEN

Radio frequency transmission lines

Formulas for uniform transmission lines losses neglected

$$Z_{o} = \sqrt{\frac{L}{C}}$$

$$L = 1016 \sqrt{\epsilon} Z_{o}$$

$$C = 1016 \frac{\sqrt{\epsilon}}{Z_{o}}$$

$$\frac{V}{c} = \frac{1}{\sqrt{\epsilon}}$$

$$Z_{s} = Z_{o} \frac{Z_{r} + j Z_{o} \tan l^{\circ}}{Z_{o} + j Z_{r} \tan l^{\circ}}$$

$$Z_{s} = \frac{Z_{o}^{2}}{Z_{r}} \qquad \text{for } l^{\circ} = 90^{\circ} \text{ (quarter wave)}$$

$$Z_{ss} = + j Z_{o} \tan l^{\circ}$$

$$Z_{so} = -\frac{j Z_{o}}{\tan l^{\circ}}$$

$$l^{\circ} = 360 \frac{l}{\lambda}$$

$$\lambda = \lambda_{o} \left(\frac{V}{c}\right)$$

where


L = inductance of transmission line in micromicrohenries per foot C = capacitance of transmission line in micromicrofarads per foot V = velocity of propagation in transmission line c = velocity of propagation in free space Z_s = sending end impedance of transmission line in ohms $Z_o =$ surge impedance of transmission line in ohms $Z_r =$ terminating impedance of transmission line in ohms I° = length of line in electrical degrees l = length of line $\lambda = \text{wavelength in transmission line}$ same units

 $\lambda_o =$ wavelength in free space ϵ = dielectric constant of transmission line medium


= 1 for air

 Z_{ss} = sending end impedance (ohms) of transmission line shorted at far end Z_{so} = sending end impedance (ohms) of transmission line open at far end

Surge impedance of uniform lines—0 to 210 ohms

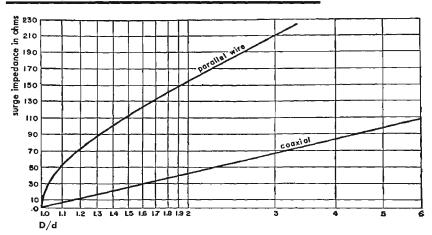

Surge impedance of uniform lines—0 to 700 ohms

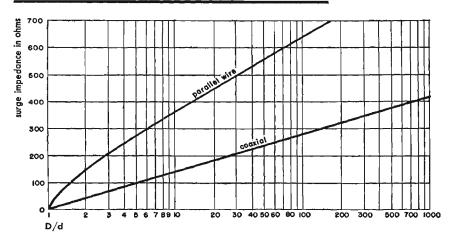



$$\begin{split} Z_o &= 120 \; cosh^{-1} \frac{D}{d} \\ &\cong 276 \; log_{10} \; \frac{2D}{d} \\ \text{for } D > > d \end{split}$$

 $Z_o = 138 \log_{10} \frac{D}{d}$

parallel wire


coaxial

Transmission line data

type of line

characteristic impedance


A single coaxial line



$$Z_o = \frac{138}{\sqrt{\varepsilon}} \log_{10} \frac{D}{d}$$

€ = dielectric constant= 1 in air

B balanced shielded line




for
$$D > d$$
. $h > d$

$$Z_o \cong \frac{276}{\sqrt{\epsilon}} \log_{10} \left[2v \, \frac{1 - \sigma^2}{1 + \sigma^2} \right]$$

$$\sigma = \frac{h}{D}$$

$$v = \frac{h}{d}$$

C beads—dielectric ϵ_1




for cases (A) and (B)

if ceramic beads are used at frequent intervals—call new surge impedance Z_o'

$$Z_{o}' = \frac{Z_{o}}{\sqrt{\epsilon + \frac{\epsilon_{1} - \epsilon}{S}W}}$$

D open two-wire line




$$Z_o = 120 \cosh^{-1} \frac{D}{d}$$

$$\cong$$
 276 $\log_{10}\frac{2D}{d}$


Transmission line data—miscellaneous types

type of line	characteristic impedance
	$Z_o = 69 \log_{10} \left[\frac{4h}{d} \sqrt{1 + \left(\frac{2h}{D}\right)^2} \right]$
	$Z_o = 276 \log_{10} \left[\frac{4h}{d\sqrt{1 + \left(\frac{2h}{D}\right)^2}} \right]$
	$Z_o = 138 \log_{10} \frac{4h}{d}$
	$Z_{o} = 138 \log_{10} \frac{D}{d} \left[1.078 - 0.078 \left(\frac{d}{D} \right)^{2} \right]$
	$Z_o = 138 \log_{10} \frac{2D_2}{d\sqrt{1 + \left(\frac{D_2}{D_1}\right)^2}}$
	$l>>w$ $z_o \cong 377 \frac{w}{l}$


Transmission line attenuation due to load mismatch

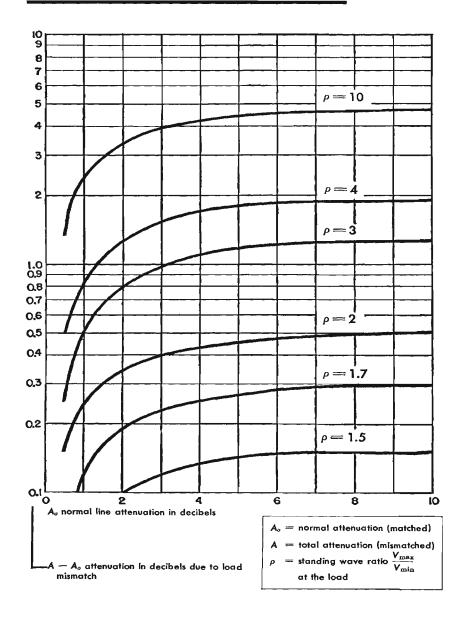


Impedance matching with shorted stub

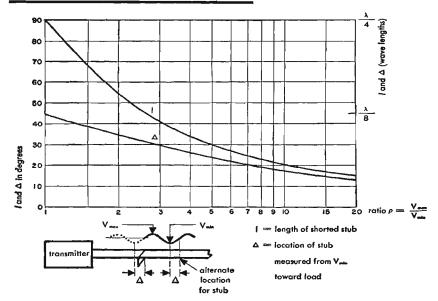


Impedance matching with open stub

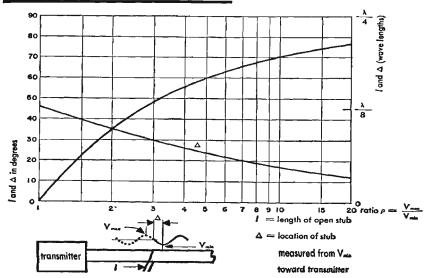


Impedance matching with coupled section

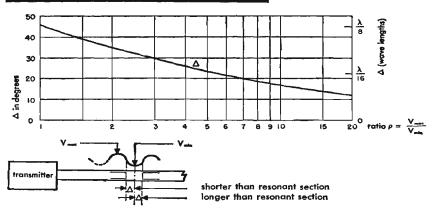

Detuning from resonance for a particular type of section

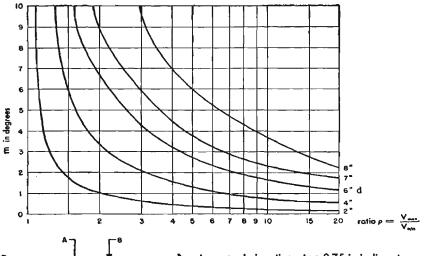



- A = coupled section—two 0.75-inch diameter copper tubes, coplanar with line
- B = transmission line—two 0.162-inch diameter wires
- C = alternative positions of shorting bar for impedance matching
- D = position of shorting bar for maximum current in section conductors

Army-Navy standard list of radio-frequency cables

clas		Anny- Navy type number	inner conductor	dielec mate- rial (1)	nominol diam of dielectric (in)	shleiding braid	protective covering	nominal overall diam (in)	weight lb/ft	nominal imped- ance ohms	nominal capaci- tance µµf/ft	maximum aperating voltage rms	remarks
50~55 ohma	Single braid	RG-58/U	20 AWG capper	٨	0.116	Tinned Copper	Vinyl	0.195	0.025	53.5	28.5	1,900	General purpose small size flexible cable
		RG-8/U	7/21 AWG copper	Ā	0.285	Copper	Viny!	0.405	0,106	52.0	29.5	4,200	General purpose medium size flexible cable
		RG-10/U	7/21 AWG copper	Ā	0.285	Copper	Vinyl inon- contaminating) armor	(mgxl 0.475	0.146	52.0	29.5	4,000	Same as RG-8/U ar- mored for naval equip- ment
		RG-17/U	0.188 copper	Ā	0.680	Copper	Vinyl Inon-contami- natingl	0.870	0.460	52.0	29.5	11,000	Large high power low at- tenuation transmission coble
		RG-18/U	0.188 copper	۸	0.680	Соррег	Vinyl Inon- contaminatingl armor	(max) 0.945	0.585	52.0	29.5	11,000	Same as RG-17/U ar- mored for navol equip- ment
		RG-19/U	0.250 copper	A	0.910	Copper	Vinyl (non-contem)- nating)	0.120	0.740	52.0	29.5	14,000	Very large high power low attenuation frons-mission cabe
		RG-20/U	0.250 copper	٨	0.910	Copper	Vinyl Inon- contaminatingl armor	(тах) 1.195	0.925	52.0	29,5	14,000	Same or RG-19/U ar- mored for naval equip- ment
	Double braid	RG-55/U	20AWG copper	A	0.116	Tinned copper	Polyethylene	(max) 0.206	0.034	53.5	28.5	1,900	Small size flexible cable
		RG-5/U	16 AWG copper	۸	0.185	Copper	Vinyl	0.332	0.087	53.5	28.5	2,000	Small microwave cable
Ì		RG-9/U	7/21 AWG silvered copper	٨	0.280	Inner—silver coated copper. Outer-copper	Vinyl (non-contam)- natingl	0.420	0.150	51.0	30.0	4,000	Medium size, fow lavel circuit cable

Notes
1. Dielectric naterials
A Stabilized polyethylene
C Synthatic nobler compaud
D layor of symmetric nobler dielectric between thin layers of conducting rubber

continued Army-Navy standard list of radio-frequency cables

	ts of bles	Army- Novy type number	Inner conductor	dielec mate- rial (1)	nominal diam of dielectric (in)	shielding braid	protective covering	nominal overall diam (in)	weight lb/ft	nominal imped- ance ohms	nominal capaci- ionce µµt/ft	maximum operating voltage rms	remarks
		RG-14/U	10 AWG copper	A	0.370	Соррег	Vinyl (non-contami- nosing)	0.545	0.216	52.0	29.5	5,500	General purpose semi- flexible power transmis- sion cable
		₹G-74/U	10 AWG copper	A	0.370	Copper	Vinyl (non- contaminating) armor	0,615	0.310	52.0	29.5	5,500	Same as RG-14/U ar- mored for naval equip- ment
70-80 ohms	Single braid	RG-59/U	22 AWG copperweld	A	0.146	Copper	Vinyl	0.242	0.032	73.0	21.0	2,300	General purpose small size video cable
		RG-11/U	7/26 AWG tianed copper	^	0.285	Copper	Vinyi	0.405	0.096	75.0	20.5	4,000	Medium size, flexible video and communication coble
		RG-12/U	7/26 AWG tinned copper	^	0.285	Copper	Vinys in on- contaminatingl ormor	0,475	0.141	75.0	20.5	4,000	Same as RG-11/U armored for noval equipment
	Double broid	RG-6/U	21 AWG copperweld	٨	0.185	Inner—silver coated copper. Outer—copper		0.332	0.082	76.0	20.0	2,700	Small size video and I-F cable
		RG-13/U	7/26 AWG finned copper	A	0.280	Copper	Vinyl	0.420	0.126	74.0	20.5	4,000	1-f cuble
Cables of spe- cial charac-	Twin con- ductor	RG-22/U	2 Cond. 7/18 AWG copper	^	0.285	Single—tinned copper	Vioyl	0.405	0.107	95.0	16.0	1,000	Small size twin conductor cable
teristics		RG-57/U	2 Cond. 7/21 AWG copper	^	0.472	Single—tinned copper	Vinyl	0.625	0.225	95.0	16.0	3,000	large size twin conductor coble
	High attenu- otion	RG-21/U	16 AWG resistance wire	^	0.185	Inner—silver coated copper. Outer—copper	Vinyl Inon-contami- natingl	0.332	0.087	53.0	29.0	2,700	Special attenuating cable with small temperature coefficient of attenuation
	High imped- ance	RG-65/U	No. 32 For- mex F helix diam 0.128 in.	^	0.285	Single—cop- per	Vinyl	0.405	0.096	950	44.0	1,000	High Impedance Video coble, High dalay

Army-Navy standard list of radio frequency cables continued

	ss of bles	Army- Navy type number	inner conductor	dielec mate- rial (1)	nominal diam of dielectric (in)	shielding braid	profective covering	nominal overali diam (in)	weight lb/ft	nominal imped- ance ohms	nominal capaci- tance µµf/ft	meximum operating voltage rms	remorks
Low capaci-		RG-62/U	22 AWG copperweld	٨	0.146	Copper	Vinyl	0.242	0.0382	93.0	13.5 mox 14,5	750	Small size low capaci- tance air-spaced cable
тапсв		RG-63/U	22 AWG copperweld	٨	0.285	Copper	Vinyl	0.405	0.0832	125	10.0 max 11.0	1,000	Medium size low capaci- tance air-spaced cable
	Double braid	RG-71/U	22 AWG copperweld	٨	0.146	Inner—plain copper. Outer —tinnedcopper	Polyethy ene	0.250	0.0457	93.0	13.5 max 14.5	750	Small size low capaci- tance alr-spaced cable for I-F purposes
Pulse appli- cotions	Single braid	RG-26/U	19/C.0117 tinned copper	D	0.308	Tinned copper	Synthetic rub- ber and armor	(mox) 0.525	0.189	48.0	50.0	8,000 (peak)	Medium size pulse cable ormored for navol equip- ment
		RG-27/U	19/0.0185 tinned copper	D	(2) 0.455	Single—Ilnned copper	Vinyl and armor	(max) 0.675	0.304	48.0	50.0	15,000 (peak)	large size pulse cable armored for naval equip- ment
	Double brold	RG-64/U	19/0.0117 tinned copper	D	0.308	Tinned copper	Neoprene	0.495	0.205	48.0	50.0	8,000 (peak)	Medium stze pulse cable
		RG-25/U	19/0.0117 tinned copper	D	721 0.308	Tinned copper	Nеоргепа	0.565	0.205	48.0	50.0	8,000 (peok)	Special twisting pulse cable for noval equip- ment
		RG-28/U	19/0.0185 finned copper	D	(2) 0.455	Inner—tinned copper, Outer —galvanized steel	Synthetic rub- ber	0.805	0.370	48.0	50.0	15,000 (peak)	large size pulse coble
Twisting applica-	Single braid	RG-41/U	16/30 AWG tinned copper	С	0.250	Tinned copper	Neoprene	0.425	0.150	67.5	27.0	3,000	Special twist cable


Notes

Notes:

1. Delectric moterials

A Subdifixed polyathylene
C Synthetic rubber compound
D Layer of synthetic rubber dielectric between thin kyens of conducting rubber

Attenuation of standard r-f cables vs frequency

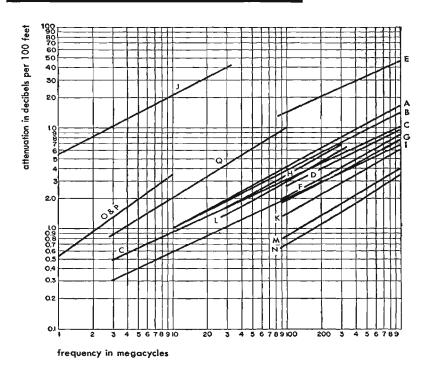


The above chart refers to cables listed in the Army-Navy standard list of radio-frequency cables on pages 201, 202, and 203. For an explanation of the letters accompanying the curves, see the table below. Each letter refers to one or more A-N standard cables. The number following the letter in the table is the numerical part of the RG- /U number as listed under "Army-Navy type number" in the third column of the preceding list.

RG-number

A 55/U	D 5/U	F 10/U	1 63/U	M 17/U	O 26/U
A 58/U	D 6/U	G 11/U	J 65/U	M 18/U	O 64/U
B 59/U	E 21/U	G 12/U	K 14/U	N 19/U	P 27/U
C 62/U	F 8/U	G 13/U	K 74/U	N 20/U	P 28/U
C 71/U	F 9/U	H 22/U	L 57/U	O 25/U	Q 4/U

Length of transmission line

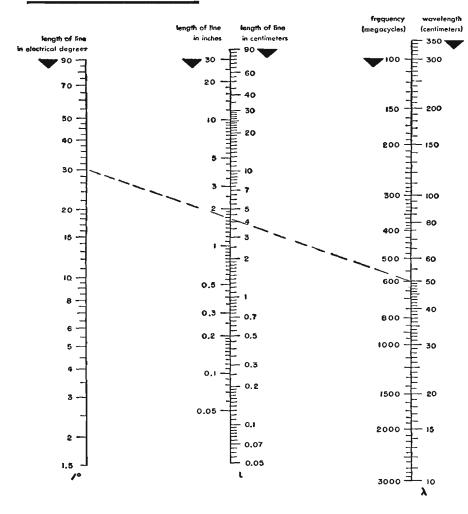

This chart gives the actual length of line in centimeters and inches when given the length in electrical degrees and the frequency provided the velocity of propagation on the transmission line is equal to that in free space. The length is given on the L scale intersection by a line between $\boldsymbol{\lambda}$ and I° where $I^{\circ} = \frac{360 \text{ L in centimeters}}{100 \text{ L in centimeters}}$ λ in centimeters

Example: f = 600 megacycles $f^0 = 30$ length L = 1.64 inches or 4.2 centimeters

Attenuation and resistance of transmission

lines at ultra-high frequencies

$$A = 4.35 \frac{R_t}{Z_o} + 2.78 \sqrt{\epsilon} p F$$

where

A = attenuation in decibels per 100 feet

 $R_t = \text{total line resistance in ohms per 100 feet}$

 ρ = power factor of dielectric medium

F = frequency in megacycles

$$R_t = 0.1 \left(\frac{1}{d} + \frac{1}{D}\right) \sqrt{F}$$
 for coaxial copper line
$$= \frac{0.2}{d} \sqrt{F}$$
 for open two-wire copper line

where

d = diameter of conductors (center conductor for the coaxial line) in inches

D = diameter of inner surface of outer coaxial conductor in inches

■ Wave guides and resonators

Propagation of electromagnetic waves in hollow wave guides

For propagation of energy at ultra-high frequencies through a hollow metal tube under fixed conditions, a number of different types of waves are available, namely:

1. **TE** waves: Transverse electric waves, sometimes called H waves, characterized by the fact that the electric vector (*E* vector) is always perpendicular to the direction of propagation. This means that

$$E_x = 0$$

where x is the direction of propagation.

2. TM waves: Transverse magnetic waves, also called E waves, characterized by the fact that the magnetic vector (*H* vector) is always perpendicular to the direction of propagation.

This means that

$$H_x = 0$$

where x is the direction of propagation.

Note: TEM waves: Transverse electromagnetic waves. These waves are characterized by the fact that both the electric vector (*E* vector) and the magnetic vector (*H* vector) are perpendicular to the direction of propagation. This means that

$$E_x = H_x = 0$$

where x is the direction of propagation. This is the mode commonly excited in coaxial and open-wire lines. It cannot be propagated in a wave guide.

The solutions for the field configurations in wave guides are characterized by the presence of the integers m and n which can take on separate values from 0 or 1 to infinity. Only a limited number of these different m,n modes can be propagated, depending on the dimensions of the guide and the frequency of excitation. For each mode there is a definite lower limit or cutoff frequency below which the wave is incapable of being propagated. Thus, a wave guide is seen to exhibit definite properties of a high-pass filter.

The propagation constant $\gamma_{n,m}$ determines the amplitude and phase of each component of the wave as it is propagated along the length of the guide. With x the direction of propagation and ω equal to 2π times the frequency, the factor for each component is

$$\beta \omega t - \gamma_{n,m} x$$

Propagation of electromagnetic waves in hollow wave guides continued

Thus, if $\gamma_{n,m}$ is real, the phase of each component is constant, but the amplitude decreases exponentially with x. When $\gamma_{n,m}$ is real, it is said that no propagation takes place. The frequency is considered below cutoff. Actually, propagation with high attenuation does take place for a small distance, and

a short length of guide below cutoff is often used as a calibrated attenuator.

When $\gamma_{n,m}$ is imaginary, the amplitude of each component remains constant, but the phase varies with x. Hence, propagation takes place. $\gamma_{n,m}$ is a pure imaginary only in a lossless guide. In the practical case, $\gamma_{n,m}$ usually comprises both a real part, which is the attenuation constant, and an imaginary part, which is the

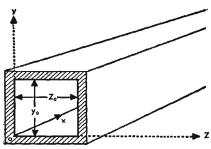


Fig. 1-Rectangular wave guide.

phase propagation constant.

Rectangular wave guides

Fig. 1 shows a rectangular wave guide and a rectangular system of coordinates, disposed so that the origin falls on one of the corners of the wave guide; x is the direction of propagation along the guide, and the cross-sectional dimensions are y_o and z_o .

For the case of perfect conductivity of the guide walls with a non-conducting interior dielectric (usually air), the equations for the $\mathsf{TM}_{n,m}$ or $\mathsf{E}_{n,m}$ waves in the dielectric are:

$$E_{x} = A \sin\left(\frac{n\pi}{y_{o}}y\right) \sin\left(\frac{m\pi}{z_{o}}z\right) e^{j\omega t - \gamma_{n,m}x}$$

$$E_{y} = -A \frac{\gamma_{n,m}}{\gamma^{2}_{n,m} + \omega^{2}\mu_{k}\epsilon_{k}} \left(\frac{n\pi}{y_{o}}\right) \cos\left(\frac{n\pi}{y_{o}}y\right) \sin\left(\frac{m\pi}{z_{o}}z\right) e^{j\omega t - \gamma_{n,m}x}$$

$$E_{z} = -A \frac{\gamma_{n,m}}{\gamma^{2}_{n,m} + \omega^{2}\mu_{k}\epsilon_{k}} \left(\frac{m\pi}{z_{o}}\right) \sin\left(\frac{n\pi}{y_{o}}y\right) \cos\left(\frac{m\pi}{z_{o}}z\right) e^{j\omega t - \gamma_{n,m}x}$$

$$H_{x} = 0$$

$$H_{y} = A \frac{j\omega\epsilon_{k}}{\gamma^{2}_{n,m} + \omega^{2}\mu_{k}\epsilon_{k}} \left(\frac{m\pi}{z_{o}}\right) \sin\left(\frac{n\pi}{y_{o}}y\right) \cos\left(\frac{m\pi}{z_{o}}z\right) e^{j\omega t - \gamma_{n,m}x}$$

$$H_{z} = -A \frac{j\omega\epsilon_{k}}{\gamma^{2}_{n,m} + \omega^{2}\mu_{k}\epsilon_{k}} \left(\frac{n\pi}{y_{o}}\right) \cos\left(\frac{n\pi}{y_{o}}y\right) \sin\left(\frac{m\pi}{z_{o}}z\right) e^{j\omega t - \gamma_{n,m}x}$$

where ϵ_k is the dielectric constant and μ_k the permeability of the dielectric material in MKS (rationalized) units.

wave guides and resonators 209

Rectangular wave guides continued

Constant A is determined solely by the exciting voltage. It has both amplitude and phase. Integers m and n may individually take on values from 1 to infinity. No TM waves of the 0,0 type or 0,1 type are possible in a rectangular guide so that neither m nor n may be 0.

Equations for the $TE_{n,m}$ waves or $H_{n,m}$ waves in a dielectric are:

$$H_{x} = B \cos\left(\frac{n\pi}{\gamma_{o}}y\right) \cos\left(\frac{m\pi}{z_{o}}z\right) e^{j\omega t - \gamma_{n,m}z}$$

$$H_{y} = B \frac{\gamma_{n,m}}{\gamma_{n,m}^{2} + \omega^{2}\mu_{k}\epsilon_{k}} \left(\frac{n\pi}{\gamma_{o}}\right) \sin\left(\frac{n\pi}{\gamma_{o}}y\right) \cos\left(\frac{m\pi}{z_{o}}z\right) e^{j\omega t - \gamma_{n,m}x}$$

$$H_{z} = B \frac{\gamma_{n,m}}{\gamma_{n,m}^{2} + \omega^{2}\mu_{k}\epsilon_{k}} \left(\frac{m\pi}{z_{o}}\right) \cos\left(\frac{n\pi}{\gamma_{o}}y\right) \sin\left(\frac{m\pi}{z_{o}}z\right) e^{j\omega t - \gamma_{n,m}x}$$

$$E_{x} = 0$$

$$E_{y} = B \frac{j\omega\mu_{k}}{\gamma_{n,m}^{2} + \omega^{2}\mu_{k}\epsilon_{k}} \left(\frac{m\pi}{z_{o}}\right) \cos\left(\frac{n\pi}{\gamma_{o}}y\right) \sin\left(\frac{m\pi}{z_{o}}z\right) e^{j\omega t - \gamma_{n,m}x}$$

$$E_{z} = -B \frac{j\omega\mu_{k}}{\gamma_{n,m}^{2} + \omega^{2}\mu_{k}\epsilon_{k}} \left(\frac{n\pi}{\gamma_{o}}\right) \sin\left(\frac{n\pi}{\gamma_{o}}y\right) \cos\left(\frac{m\pi}{z_{o}}z\right) e^{j\omega t - \gamma_{n,m}x}$$

where ϵ_k is the dielectric constant and μ_k the permeability of the dielectric material in MKS (rationalized) units.

Constant B again depends only on the original exciting voltage and has both magnitude and phase; m and n individually may assume any integer value from 0 to infinity. The 0,0 type of wave where both m and n are 0 is not possible, but all other combinations are.

As stated previously, propagation only takes place when $\gamma_{n,m}$ the propagation constant is imaginary;

$$\gamma_{n,m} = \sqrt{\left(\frac{n\pi}{y_o}\right)^2 + \left(\frac{m\pi}{z_o}\right)^2 - \omega^2 \mu_k \epsilon_k}$$

This means, for any n,m mode, propagation takes place when

$$\omega^2 \mu_k \epsilon_k > \left(\frac{n\pi}{y_o}\right)^2 + \left(\frac{m\pi}{z_o}\right)^2$$

or, in terms of frequency f and velocity of light c, when

$$f > \frac{c}{2\pi\sqrt{\mu_1\epsilon_1}}\sqrt{\left(\frac{n\pi}{y_o}\right)^2 + \left(\frac{m\pi}{z_o}\right)^2}$$

where μ_1 and ϵ_1 are the relative permeability and relative dielectric constant, respectively, of the dielectric material with respect to free space.

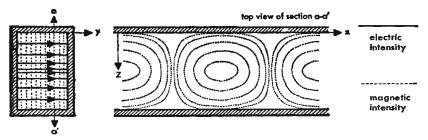


Fig. 2—Field configuration for TE_{0,1} wave.

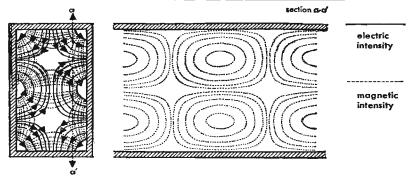


Fig. 3—Field configuration for a $TE_{1,2}$ wave.

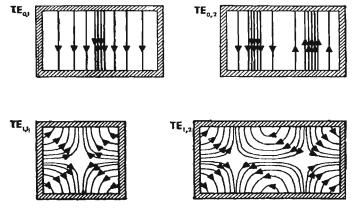


Fig. 4-Characteristic E lines for TE waves.

The wavelength in the wave guide is always greater than the wavelength in an unbounded medium. If λ is the wavelength in free space, the wavelength in the guide with air as a dielectric for the n,m mode is

$$\lambda_{g(\mathbf{x},m)} = \frac{\lambda}{\sqrt{1 - \left(\frac{n\lambda}{2y_o}\right)^2 - \left(\frac{m\lambda}{2z_o}\right)^2}}$$

The phase velocity within the guide is also always greater than in an unbounded medium. The phase velocity v and group velocity u are related by the following equation:

$$u = \frac{c^2}{v}$$

where the phase velocity is given by $v=c\,\frac{\lambda_{\theta}}{\lambda}$ and the group velocity is the velocity of propagation of the energy.

To couple energy into wave guides, it is necessary to understand the configuration of the characteristic electric and magnetic lines. Fig. 2 illustrates the field configuration for a $TE_{0,1}$ wave. Fig. 3 shows the instantaneous field configuration for a higher mode, a $TE_{1,2}$ wave.

In Fig. 4 are shown only the characteristic E lines for the TE_{0,1}, TE_{0,2}, TE_{1,1} and TE_{1,2} waves. The arrows on the lines indicate their instantaneous relative directions. In order to excite a TE wave, it is necessary to insert a probe to coincide with the direction of the E lines. Thus, for a TE_{0,1} wave, a single probe projecting from the side of the guide parallel to the E lines would be sufficient to couple into it. Several means of coupling from a coaxial line to a rectangular wave guide to excite the TE_{0,1} mode are shown in Fig. 5. With structures such as these, it is possible to make the standing wave rafio due to the junction less than 1.15 over a 10 to 15 percent frequency band.

Fig. 6 shows the instantaneous configuration of a $TM_{1,1}$ wave; Fig. 7, an instantaneous field configuration for a $TM_{1,2}$ wave. Coupling to this type of wave is accomplished by inserting a probe, which is again parallel to the E lines. Since the E lines in this case extend along the length of the tube, it is necessary to position a probe along its length at the center of the E configuration. Fig. 8 illustrates a method of coupling to an $E_{1,1}$ wave and an $E_{1,2}$ wave.

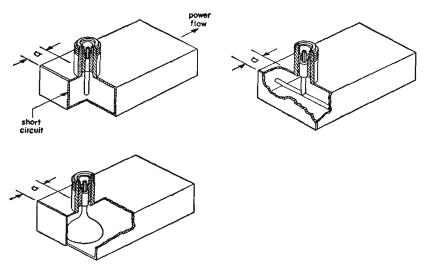


Fig. 5—Methods of coupling to $TE_{0,1}$ mode (a $\approx \lambda g/4$).



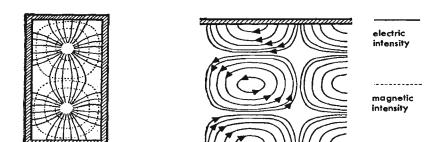


Fig. 7—instantaneous field configuration for a $TM_{1,\,2}$ wave.




Fig. 8—Methods of coupling to rectangular wave guides for TM(E) modes.

Circular wave guides

The usual co-ordinate system is ρ , θ , z, where ρ is in radial direction; θ is the angle; z is in the longitudinal direction.

TM waves (E waves) $H_z \equiv 0$

$$E_z = A J_n (k_{n,m} \rho) \cos n \theta e^{j\omega t - \gamma_{n,m} z}$$

By the boundary conditions, $E_z=0$ when $\rho=a$, the radius. Thus, the only permissible values of k are those for which J_n $(k_{n,m}a)=0$ because E_z must be zero at the boundary.

The numbers m, n take on all integral values from zero to infinity. The waves are seen to be characterized by two numbers, m and n, where n gives the order of the bessel functions, and m gives the order of the root of J_n ($k_{n,m}$ a). The bessel function has an infinite number of roots, so that there are an infinite number of k's which make J_n ($k_{n,m}$ a) = 0.

The other components of the electric vector E_{θ} and E_{ρ} are related to E_{z} as are H_{θ} and H_{ρ} .

TE waves (H waves) $E_z \equiv 0$

 $H_z = BJ_n (k_{n,m}\rho) \cos n\theta e^{j\omega t - \gamma_{n,m} s}$

 $H\rho$, H_{θ} , E_{ρ} , E_{θ} , are all related to H_{z} .

Circular wave guides continued

Again n takes on integral values from zero to infinity. The boundary condition $E_z=0$ when $\rho=a$ still applies. To satisfy this condition k must be such as to make J'_n $(k_{n,m} \ a)$ equal to zero where the superscript indicates the derivative of J_n $(k_{n,m} \ a)$. It is seen that m takes on values from 1 to infinity since there are an infinite number of roots of J'_n $(k_{n,m} \ a)$.

For circular wave guides, the cut-off frequency for the m,n mode is $f_{\sigma_{n,m}} = \frac{c \; k_{n,m}}{2 \; \pi}$ where c = velocity of light and $k_{n,m}$ is evaluated from the roots of the bessel functions

 $k_{n,m} = \frac{U_{n,m}}{a}$ or $\frac{U'_{n,m}}{a}$ where a = radius of guide or pipe and $U_{n,m}$ is the root of the particular bessel function of interest (or its derivative). The wavelength in the guide is

$$\lambda_{g} = \frac{2 \pi}{\sqrt{\left(\frac{2 \pi}{\lambda_{n}}\right)^{2} - k^{2}_{n,m}}}$$
 where λ_{o} is the wavelength in an unbounded medium.

The following tables are useful in determining the values of k. For H waves the roots $U'_{n,m}$ of J'_n (U) = 0 are given in the following table, and the corresponding $k_{n,m}$ values are $\frac{U'_{n,m}}{a}$

Values of $U'_{n,m}$

mn	0	1	2	
1	3.832	1.841	3.054	
2	7.016	5.332	6.705	
3	10.173	8.536	9.965	

For E waves the roots $U_{n,m}$ of $J_n(U)=0$ are given in the following table, and the corresponding $k_{n,m}$ values are $\frac{U_{n,m}}{C}$

Values of $U_{n,m}$

m n	0	1	2	
1	2.405	3.832	5.135	
2	5.520	7.016	8.417	
3	8.654	10.173	11.620	

where n is the order of the bessel function and m is the order of the root.

Circular wave guides continued TM_{0,2} TM_{o,1} Fig. 9 Patterns of magnetic force of TM waves in circular wave guides. TM_{1,2} TM,,2 Fig. 10 Method of coupling to circular wave guide for TM_{0,1} wave. TE_{0,2} TEgi Fig. 11 Patterns of electric force of TE waves in circular wave guides. TEL $TE_{i,i}$ Fig. 12 Method of coupling to circular wave guide for TE_{1, 1} wave.

section a-a'

Table I—Cut-off wavelengths and attenuation factors

	coaxial cable (a, b)	rectangular pipe a, b TE _{0, m} or H _{0, m}	TM _{0.1} or E ₀	circular pipe of radius a	TE _{0,1} or H ₀
Cut-off wavelength λ₀	0	2b m	2.613a	3.412a	1.640a
Attenuation constant = \alpha	$\alpha_{o} \sqrt{\frac{c}{\lambda}} \frac{\left(\frac{1}{a} + \frac{1}{b}\right)}{\log \frac{b}{a}}$	$\frac{4\alpha_o}{b} A \left(\frac{b}{2\sigma} + \frac{\lambda^2}{\lambda_o^2} \right)$	$\frac{2\alpha_o}{a}A$	$\frac{2\alpha_o}{\alpha}A\left(0.415+\frac{\lambda^2}{\lambda_c^2}\right)$	$\frac{2\alpha_o}{\sigma} A \left(\frac{\lambda}{\lambda_o}\right)^2$
where		$\sqrt{c/\lambda}$] \(\(\mu_2 \) \(\epsilon_1 \)	'	•

where
$$\lambda_{\sigma} = \, \text{cut-off wavelength}$$

$$\mathsf{A} = \frac{\sqrt{\mathsf{c}/\lambda}}{\sqrt{1 - \left(\frac{\lambda}{\lambda_\mathsf{c}}\right)^2}} \,, \quad \alpha_0 = \frac{1}{4} \, \sqrt{\frac{\mu_2 \, \epsilon_1}{\sigma_2 \, \mu_1}} \quad \text{(emu)}$$

Circular wave guides continued

The pattern of magnetic force of TM waves in a circular wave guide is shown in Fig. 9. Only the maximum lines are indicated. In order to excite this type of pattern, it is necessary to insert a probe along the length of the wave guide concentric with the H lines. For instance, in the $TM_{0.1}$ type of wave, a probe extending down the length of the wave guide at the very center of the guide would provide the proper excitation. This method of excitation is shown in Fig. 10. Similar methods of excitation may be used for the other types of TM waves shown in Fig. 9.

Fig. 11 shows the patterns of electric force for TE waves. Again only the maximum lines are indicated. This type of wave may be excited by an antenna which is parallel to the electric lines of force. For instance, the $TE_{0,1}$ wave would be excited by a small circular loop placed where the maximum E line is indicated in the diagram. The TE_{1.1} wave may be excited by means of an antenna extending across the wave guide. This is illustrated in Fig. 12.

Attenuation constants

All the attenuation constants contain a common coefficient

$$\alpha_0 = \frac{1}{4} \sqrt{\frac{\mu_2 \epsilon_1}{\sigma_2 \mu_1}}$$


 ϵ_1 , μ_1 dielectric constant and magnetic permeability for the insulator σ_2 , μ_2 electric conductivity and magnetic permeability for the metal For air and copper $\alpha_0 = 0.35 \times 10^{-9}$ nepers per centimeter or 0.3×10^{-3} db per kilometer


Table I summarizes some of the most important formulas. The dimensions a, b are measured in centimeters.

Electromagnetic horns

Radiation from the wave guide may be obtained by placing an electromagnetic horn of a particular size at the end of the wave guide. The characteristics for different types of circular horns are shown in Figs. 13 and 14.

Fig. 13 gives data for designing a horn to have a specified gain with the shortest length possible. The length L_1 is given by $L_1 = L\left(1 - \frac{a}{2A} - \frac{b}{2B}\right)$ where a = wide dimension of wave guide in the H plane, and b = narrowdimension of wave guide in E plane.

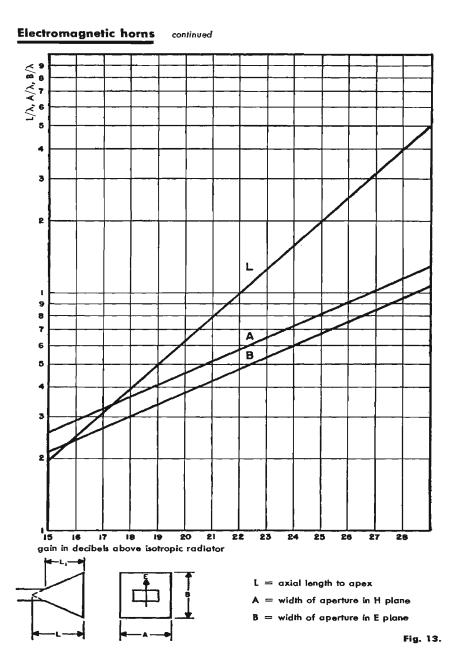



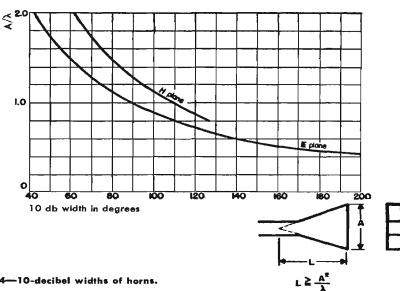


Fig. 14-10-decibel widths of horns.

If $L \ge \frac{\sigma^2}{\lambda}$ ($\sigma = \text{longer dimension of aperture}$) the gain is given by $G = \frac{\sigma^2}{\lambda}$ $\frac{10ab}{\lambda^2}$, the half power width in the E plane is given by 51° $\frac{\lambda}{b'}$ and the half

power width in the H plane is given by $70^{\circ} \frac{\lambda}{2}$, where E is the electric vector and H is the magnetic vector,

Fig. 14 shows how the angle between 10-decibel points varies with aperture.

Parabolas

If the intensity across the aperture of the parabola is of constant phase and tapers smoothly from the center to the edges so that the intensity at the edges is 10 decibels down from that at the center, the gain is given by $G = \frac{8A}{\lambda^2}$ (A = area of aperture). The half power width is given by $70^{\circ} \frac{\lambda}{D}$ (D = diameter of parabola).

Resonant cavities

A cavity enclosed by metal walls will have an infinite number of natural frequencies at which resonance will occur. The lowest frequency or mode of oscillation is determined by the geometry of the cavity. One of the

Resonant cavities continued

more common types of cavity resonators is a length of transmission line (coaxial, or waveguide) short circuited at both ends.

Resonance occurs when

$$2h = I \frac{\lambda g}{2}$$
 where I is an integer

2h = length of the resonator

 λ_a = guide wavelength in resonator

$$\lambda_g = \frac{\lambda}{\sqrt{1 - \left(\frac{\lambda}{\lambda_g}\right)^2}}$$

 $\lambda=$ free space wavelength $\lambda_c=$ guide cut-off wavelength

For $TE_{n,m}$ or $TM_{n,m}$ waves in a rectangular cavity with cross section a, b.

$$\lambda_c = \frac{2}{\sqrt{\left(\frac{m}{a}\right)^2 + \left(\frac{n}{b}\right)^2}}$$
 where m and n are integers

For $TE_{n,m}$ waves in a cylindrical cavity

$$\lambda_c = \frac{2\pi a}{U' \pi m}$$

where a is the guide radius and $U'_{n,m}$ is the mth root of the equation $J'_n(U) = 0$

For $TM_{n,m}$ waves in a cylindrical cavity

$$\lambda_c = \frac{2\pi\alpha}{U_{n,m}}$$

where a is the guide radius and $U_{n,m}$ is the mth root of the equation $J_n(U) = 0$.

For TM waves I = 0, 1, 2...

For TE waves I = 1, 2... but not 0

Rectangular cavity of dimensions a b 2h

$$\lambda = \frac{2}{\sqrt{\left(\frac{l}{2h}\right)^2 + \left(\frac{m}{a}\right)^2 + \left(\frac{n}{b}\right)^2}}$$
 where only one of *l*, *m*, *n* may be zero.

Resonant cavities continued

Cylindrical cavities of radius a and length 2h

$$\lambda = \frac{1}{\sqrt{\left(\frac{I}{4h}\right)^2 + \left(\frac{1}{\lambda_c}\right)^2}}$$

where λ_c is the guide cut-off wavelength.

Spherical resonators of radius a

$$\lambda = \frac{2\pi a}{U_{n,m}}$$
 for a TE wave

$$\lambda = \frac{2\pi a}{U'_{n,m}} \text{ for a TM wave.}$$

Values of $U_{n,m}$:

$$U_{1,1} = 4.5$$
, $U_{2,1} = 5.8$, $U_{1,2} = 7.64$

Values of $U'_{n,m}$:

$$U'_{1,1} = 2.75 = lowest order root$$

Additional cavity formulas

type of cavity	mode	λ_0 resonant wavelength	q
	TM _{0,1,1} (E ₀)	$\frac{4}{\sqrt{\left(\frac{1}{h}\right)^2 + \frac{2.35}{\sigma^2}}}$	$\frac{\lambda_0}{\delta} \frac{\sigma}{\lambda_0} \frac{1}{1 + \frac{\sigma}{2h}}$
Right circular cylinder	TE _{0,1,1} (H ₀)	$\frac{4}{\sqrt{\left(\frac{1}{h}\right)^2 + \frac{5.93}{\sigma^2}}}$	$\frac{\lambda_0}{\delta} \frac{\alpha}{\lambda_0} \left[\frac{1 + 0.168 \left(\frac{\alpha}{h}\right)^2}{1 + 0.168 \left(\frac{\alpha}{h}\right)^3} \right]$
	TE _{1,1,1} (H ₁)	$\frac{4}{\sqrt{\left(\frac{1}{h}\right)^2 + \frac{1.37}{\sigma^2}}}$	$\frac{\lambda_0}{\delta} \frac{h}{\lambda_0} \left[\frac{2.39h^2 + 1.73a^2}{3.39 \frac{h^3}{a} + 0.73ah + 1.73a^2} \right]$

w.m.josantiguas.com ZZZ

Some characteristics of various types of resonators

δ is the skin depth

	type resonator	wavelength, λ	1 Q
Square prism TE _{0,1,1}	2h 2h 2h	2√2a	$\frac{0.353\lambda}{\delta} \frac{1}{1 + \frac{0.177\lambda}{h}}$
Circular cylinder TM _{0,1,0}	2h	2.61a	$\frac{0.383\lambda}{\delta} \frac{1}{1 + \frac{0.192\lambda}{h}}$
Sphere	٩	2.28a	0.318 $\frac{\lambda}{\delta}$
Sphere with cones	E 2a	4 a	Optimum Q for $\theta = 34^{\circ}$ $0.1095 \frac{\lambda}{\delta}$
Caaxial TEM	4 b b b c c c c c c c c c c	4h	Optimum Q $for \frac{b}{a} = 3.6$ $(Z_0 = 77 \text{ ohms})$ $\frac{\lambda}{4\delta + 7.2 \frac{h\delta}{b}}$

 $\delta=\sqrt{\frac{\rho}{2\pi\omega\mu}}$ where $\rho=$ resistivity of wall in abohm-cm, $\mu=$ permeability of volume (unity for free space), $\delta=$ skin depth in centimeters.

Recommended rectangular wave guides

	lu -	cutoff	usable wavelength range for	conne	attenuation in brass	
dimension inches	A-N number	wavelength λc (centimeters)	TEo, 1 mode (centimaters)	choke	flange	wave guide db/ft
$1\frac{1}{2} \times 3 \times 0.081$ wall	RG-48/U	14,4	7.6–11.8	UG-54/U	UG-53/U	0.012 @ 10 cm
1 × 2 × 0.064 wall	RG-49/U	9.5	5.0-7.6	UG-148/U	UG-149/U	0.021 @ 6 cm
3/4 × 1½ × 0.064 wa∥	RG-50/U	6.97	3.7-5.7	UG-150/U	contact type	0.036 @ 5 cm
% × 1¼ × 0.064 wall	RG-51/U	5.7	3.0-4.7	UG-52/U	UG-51/U	0.050 @ 3.6 cm
½ ×1 × 0.050 wall	RG-52/U	4.57	2.4-3.7	UG-40/U	UG-39/U	0,076 @ 3.2 cm

adiosantiguas.com

774 CHAPTER TWELVE

■ Radio propagation and noise

Propagation of medium and long waves*

For a theoretical short vertical antenna over perfect ground:

 $E = 186 \sqrt{P_r}$ millivolts per meter at 1 mile

 $E = 300 \sqrt{P_r}$ millivolts per meter at 1 kilometer where $P_r =$ radiated power in kilowatts.

Actual inverse-distance fields at one mile for a given transmitter output power depend on the height and efficiency of the antenna and the efficiency of coupling devices.

Typical values found in practice for well-designed stations are:

Small L or T antennas as on ships; $25\sqrt{P_t}$ millivolts per meter at 1 mile Vertical radiators 0.15 to 0.25 λ high; $150\sqrt{P_t}$ millivolts per meter at 1 mile Vertical radiators 0.25 to 0.40 λ high; $175\sqrt{P_t}$ millivolts per meter at 1 mile Vertical radiators 0.40 to 0.60 λ high or top-loaded vertical radiators; $220\sqrt{P_t}$ millivolts per meter at 1 mile,

where $P_t =$ transmitter output power in kilowatts.

These values can be increased by directive arrangements.

The surface-wave field (commonly called *ground* wave) at greater distances can be found from Figs. 1, 2, and 3. These are based on a field strength of 186 millivolts per meter at one mile. The ordinates should be multiplied by the ratio of the actual field at 1 mile to 186 millivolts per meter.

Table I—Ground conductivities and dielectric constants

terrain	o conductivity emu	esu
Sea water	4 × 10 ⁻¹¹	80
Fresh water	5 × 10 ⁻¹⁴	80
Dry, sandy flat coastal land	2×10^{-14}	10
Marshy, forested flat land	8 × 10 ⁻¹⁴	12
Rich agricultural land, low hills	1×10^{-13}	15
Pastoral land, medium hills and forestation	5×10^{-14}	13
Rocky land, steep hills	2×10^{-14}	1 10
Mountainous (hills up to 3000 feet)	1×10^{-14}	5
Cities, residential areas	2×10^{-14}	5
Cities, industrial areas	1×10^{-15}	3

Note: This table for use for medium- and long-wave propagation with Norton's, van der Pol's, Eckerstey's, or other developments of Sommerfeld propagation formulas.

^{*} For more exact methods of computation see Terman, F. E., Radio Engineers' Handbook. Sec. 10; or Norton, K. A., The Calculation of Ground-wave Field Intensities Over a Finitely Conducting Spherical Earth. Proc. 1.R.E., vol. 29, p. 623 (December, 1941).

Propagation of medium and long waves continued


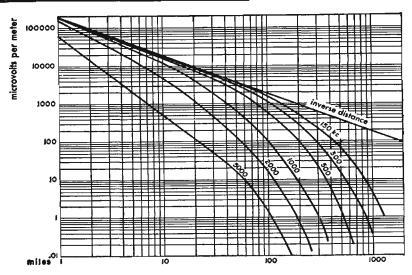


Fig. 1—Strength of surface waves as a function of distance with a vertical antenna for good earth ($\sigma=10^{-13}~{\rm em}\,{\rm u}$ and $\epsilon=15~{\rm es}\,{\rm u}$).

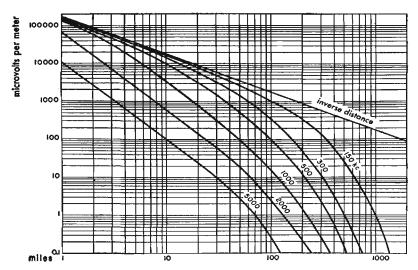

ig. 2—Strength of surface waves as a function of distance with a vertical antenna for poor earth ($\sigma=2 imes10^{-14}$ emu and $\epsilon=5$ esu).

Propagation of medium and long waves continued

Figs. 1, 2, and 3 do not include the effect of sky waves reflected from the ionosphere. Sky waves cause fading at medium distances and produce higher field intensities than the surface wave at longer distances, particularly at night and on the lower frequencies during the day. Sky-wave field intensity, in addition to the usual diurnal, seasonal, and irregular variations due to changing properties of the ionosphere, depends on frequency and the vertical radiation pattern of the antenna. Fig. 4 shows the average of night-time measurements on a number of broadcast stations for about 1-kilowatt output.

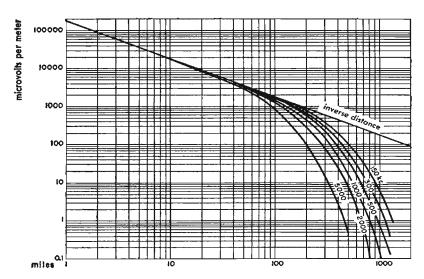


Fig. 3—Strength of surface waves as a function of distance with a vertical antenna for sea water ($\sigma=4\times10^{-11}$ emu and $\epsilon=80$ esu).

Propagation of short waves

At frequencies between about 3 and 25 megacycles and distances greater than about 100 miles, transmission depends entirely on sky waves reflected from the ionosphere. The ionosphere (a region high above the earth's surface where the rarefied air is sufficiently ionized to reflect or absorb radio waves) is usually considered as consisting of the following layers.

D layer: At heights from about 50 to 90 kilometers, it exists only during daylight hours and ionization density corresponds with the altitude of the sun.

Propagation of short waves continued

This layer reflects low- and medium-frequency waves and weakens highfrequency waves through partial absorption.

Elayer: At height of about 110 kilometers, this layer is of importance for shortwave daytime propagation at distances less than 1000 miles and for medium wave nighttime propagation at distances in excess of about 100 miles. Ionization density corresponds closely with the altitude of the sun. Irregular cloud-like areas of unusually high ionization, called sporadic E may occur up to more than 50 percent of the time on certain days or nights. Sporadic E occasionally prevents frequencies that normally penetrate the E layer reaching higher layers and also causes occasional longdistance transmission at very high frequencies.

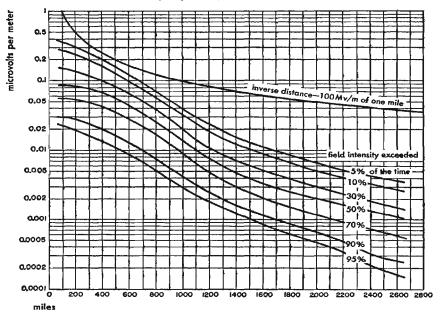


Fig. 4—Average sky-wave field intensity (corresponding to the second hour after sunset at the recording station).

F₁ layer: At heights of about 175 to 250 kilometers, it exists only during daylight. This layer occasionally is the reflecting region for shortwave transmission, but usually oblique incidence waves that penetrate the E layer also penetrate the F₁ layer to be reflected by the F₂ layer. The F₁ layer introduces additional absorption of such waves.

Propagation of short waves continued

 F_2 layer: At heights of about 250 to 400 kilometers, F_2 is the principal reflecting region for long-distance shortwave communication. Height and ionization density vary diurnally, seasonally, and over the sunspot cycle. Ionization does not correspond closely to the altitude of the sun. At night, the F_1 layer merges with the F_2 layer at a height of about 300 kilometers. The absence of the F_1 layer, and reduction in absorption of the E layer, causes nighttime field intensities and noise to be generally higher than during daylight hours.

As indicated to the right on Fig. 6, these layers are contained in a thick region throughout which ionization generally increases with height. The layers are said to exist where the ionization gradient is capable of refracting waves back to earth. Obliquely incident waves follow a curved path through the ionosphere due to gradual refraction or bending of the wave front.

Depending on the ionization density at each layer, there is a *critical* or highest frequency f_c at which the layer reflects a vertically incident wave. Frequencies higher than f_c pass through the layer at vertical incidence. At oblique incidence the layer reflects frequencies higher than f_c as given by the approximate relation:

 $muf = f_c \sec \phi$

where muf = maximum usable frequency for the particular layer and distance, $\phi = angle$ of incidence at reflecting layer.

 $f_{\rm e}$ and height, and hence ϕ for a given distance, for each layer vary with local time of day, season, latitude, and throughout the eleven-year sunspot cycle. The various layers change in different ways with these parameters. In addition, ionization is subject to frequent abnormal variations.

The loss at reflection for each layer is a minimum at the maximum usable frequency and increases rapidly for frequencies lower than maximum usable frequency.

Short waves travel from the transmitter to the receiver by reflections from the ionosphere and earth in one or more hops as indicated in Figs. 5 and 6. Additional reflections may occur along the path between the bottom edge of a higher layer and the top edge of a lower layer, the wave finally returning to earth near the receiver.

Fig. 5 illustrates single-hop transmission, Washington to Chicago, via the E layer. (ϕ_1) . At higher frequencies over the same distance, single-hop transmission would be obtained via the F_2 layer (ϕ_2) . Fig. 5 also shows two-hop transmission, Washington to San Francisco, via the F_2 layer (ϕ_3) . Fig. 6 indicates transmission on a common frequency, (1.) single-hop via E layer, Denver to Chicago, and, (2.) single-hop via F_2 , Denver to Washington, with, (3.) the wave failing to reflect at higher angles, thus producing a skip region of no signal between Denver and Chicago.

Propagation of short waves continued

Actual transmission over long distances is more complex than indicated by Figs. 5 and 6, because the layer heights and critical frequencies differ with time (and hence longitude) and with latitude. Further, scattered reflections occur at the various surfaces.




Fig. 5.




Fig. 6.

Maximum usable frequencies (muf) for single-hop transmission at various distances throughout the day are given in Fig. 7. These approximate values apply to latitude 39° N for the approximate minimum years (1944 and 1955) and approximate maximum years (1949 and 1960) of the sunspot cycle. Since the maximum usable frequency and layer heights change from month to month, the latest predictions should be obtained whenever available. This information is published by the National Bureau of Standards in the U. S. A. and by similar organizations in other countries.

Operating frequencies should be selected from 50 to 85 percent of the maximum usable frequency, preferably nearer the higher limit in order to reduce absorption loss. The 85 percent limit provides some margin for day-to-day deviation of the ionospheric characteristics from the predicted monthly average value, Maximum usable frequency changes continuously throughout the day, whereas it is ordinarily impractical to change operating frequencies correspondingly. Each operating frequency, therefore, should be selected to fall within the above limits for a substantial portion of the daily operating period.

For single-hop transmission, frequencies should be selected on the basis of local time and other conditions existing at the mid-point of the path. In view of the layer heights and the fact that practical antennas do not operate effectively below angles of about three degrees, single-hop trans-

Propagation of short waves continued

mission cannot be achieved for distances in excess of about 2200 miles (3500 kilometers) via F layers or in excess of about 1050 miles (1700 kilometers) via the E layer. Multiple-hop transmission must occur for longer distances and, even at distances of less than 2200 miles, the major part of the received signal frequently arrives over a two- or more-hop path. In analyzing two-hop paths, each hop is treated separately and the lowest frequency required on either hop becomes the maximum usable frequency for the circuit. It is usually impossible to predict accurately the course of radio waves on circuits involving more than two hops because of the large number of possible paths and the scattering that occurs at each reflection. For such long-distance circuits, it is customary to consider the conditions existing at points 1250 miles along the path from each end as the points at which the maximum usable frequencies should be calculated.

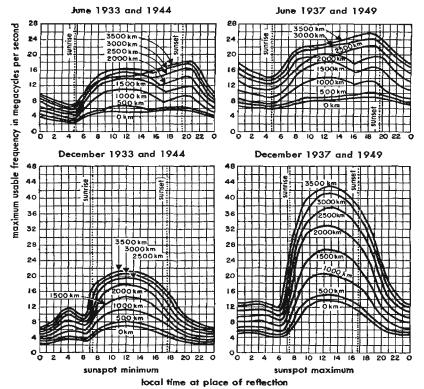


fig. 7.

Propagation forecasts for short waves

In addition to forecasts for ionospheric disturbances, the Central Radio Propagation Laboratories of the National Bureau of Standards issues monthly Basic Radio Propagation Predictions 3 months in advance used to determine the optimum working frequencies for shortwave communication. Indication of the general nature of the CRPL data and a much abbreviated example of their use follows:

Example

To determine working frequencies for use between San Francisco and Wellington, N. Z.

Method

- 1. Place a transparent sheet over Fig. 8 and mark thereon the equator, a line across the equator showing the meridian of time desired (viz., GCT or PST), and locations of San Francisco and Wellington.
- 2. Transfer sheet to Fig. 9, keeping equator lines of chart and transparency aligned. Slide from left to right until terminal points marked fall along a Great Circle line. Sketch in this Great Circle between terminals and mark "control points" 2000 kilometers along this line from each end.
- **3.** Transfer sheet to Fig. 10, showing muf for transmission via the F_2 layer. Align equator as before. Slide sheet from left to right placing meridian line on time desired and record frequency contours at control points. This illustration assumes that radio waves are propagated over this path via the F₂ layer. Eliminating all other considerations, 2 sets of frequencies, corresponding to the control points, are found as listed in Table II, the lower of which is the muf. The muf, decreased by 15 percent, gives the optimum working frequency.

Transmission may also take place via other layers. For the purpose of illustration only and without reference to the problem above, Figs. 11 and 12 have been reproduced to show characteristics of the E and sporadic E layers. The complete detailed step-by-step procedure, including special considerations in the use of this method, are contained in the complete CRPL forecasts.

Table II -- Maximum usuable frequency

GCT	at San Francisco control point (2000 km from San Francisco)	at Wellington, N. Z. control point (2000 km from Wellington)	optimum working frequency (lower of muf × 0.85)
0000	32.0	31.5	26.8
0400	34.2	25.0	21.0
0800	23.2	13.7	11. <i>7</i>
1200	18.0	14.8	12.6
1600	23.4	12.2	10.4
2000	24.6	2.88	20.9

continued Propagation forecasts for short waves

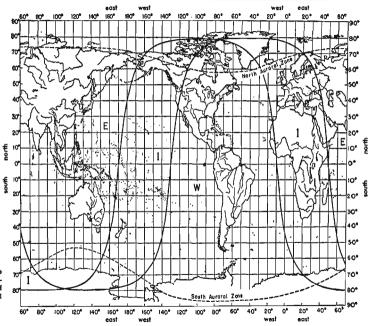


Fig. 8—World map showing zones covered by predicted charts and auroral zones.



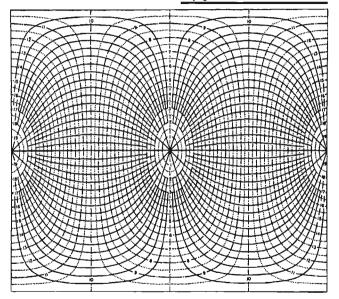


Fig. 9—Great circle chart centered on equator. Solid lines represent great circles, Dot-dash lines indicate dislances in thousands of kilometers.

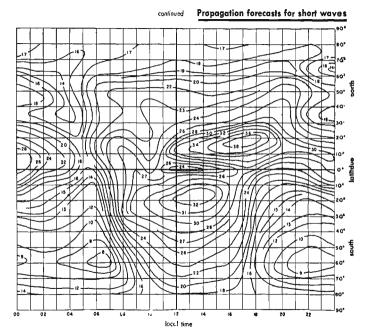


Fig. 10—F₂ 4000-kilometer maximum usable frequency in megacycles. I zone (see Fig. 8) predicted for July, 1946.

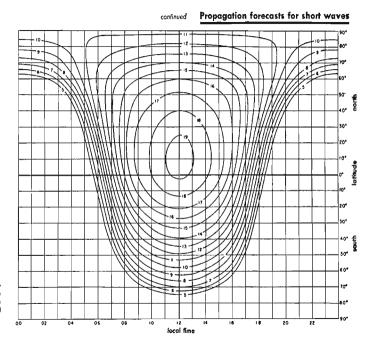


Fig. 11-E layer 2000maximum usable frequency in megacycles predicted for July, 1946.

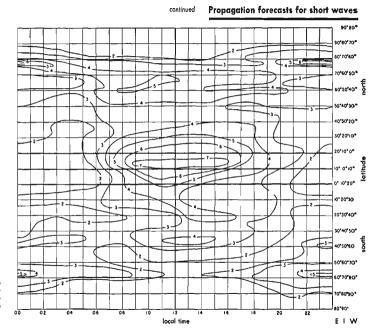


Fig. 12—Median fE, In megacycles (sporadic E layer) predicted for July, 1946

Propagation of very short waves

For propagation over distance within the radio path horizon, the field intensity is given approximately by

$$E = \frac{14.0\sqrt{W}}{d} \sin\left(\frac{2\pi h_t h_r}{\lambda d}\right) \text{ volts per meter}$$
 (1)

where

W= watts radiated, $h_t=$ height of transmitting antenna in meters, $h_r=$ height of receiving antenna in meters, $\lambda=$ wavelength in meters, d= distance in meters.

The following approximate formula is useful for transmission below 100 megacycles within the radio path horizon.

$$E = \frac{0.33 \sqrt{P} H_t H_r f_{mc}}{D^2} \text{ microvolts per meter}$$
 (2)

where

 $P = \text{kilowatts radiated}, H_t = \text{height of transmitting antenna in feet}, H_r = \text{height of receiving antenna in feet}, f_{mc} = \text{frequency in megacycles}, D = \text{distance in statute miles}.$

Equations (1) and (2) apply to both vertical and horizontal polarization. It is assumed that the antennas are small dipoles. The equations hold only when the transmission distance is large compared to antenna heights, i.e.,

for equation (1) $d > 10 h_r$ for equation (2) $D > 4 H_t H_r f_{mc} \times 10^{-6}$

Multiplying the true radius of the earth by correction factor 1.33 to provide for average atmospheric refraction gives the radio path horizon as

$$D_l = \sqrt{2H_t} + \sqrt{2H_r}$$
 statute miles

If the refractive effect of the atmosphere is ignored, line-of-sight horizon is reduced to the geometric range

$$D_g = 1.23 \left(\sqrt{H_t} + \sqrt{H_r} \right)$$


These distances may be obtained from the nomograph, Fig. 13.

When the transmission distance is not large compared with antenna height, the field strength oscillates with distance and height as indicated by the sine term of equation (1).

The number of oscillations for a given distance increases with frequency as illustrated in Fig. 14. This is due to interference between the space wave and the ground-reflected wave as these two components fall in or out of phase at various distances and heights.

U-H-F path length and optical line-of-sight

distance range of radio waves

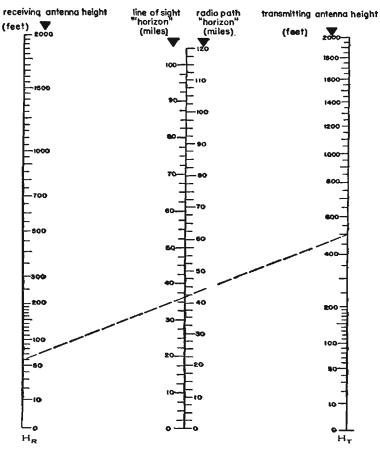

The theoretical maximum path of a radio wave, the sum of the "optical" horizon distances of each antenna, is found on "line-of-sight" scale by a line connecting points representing the two antenna heights. Atmospheric diffraction increases this path an amount generally considered as $2/\sqrt{3}$ times optical line of sight, given on the radio path scale.

Example shown: Height of receiving antenna 60 feet, height of transmitting antenna 500 feet, and maximum radio path length 41.5 miles.

Fig. 13.

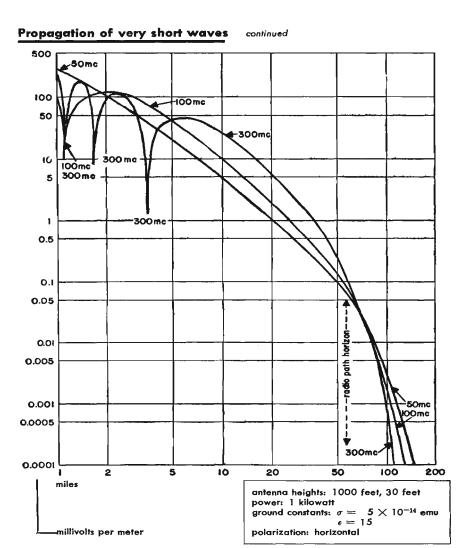


Fig. 14—Effect of frequency on ground-wave field intensity.

To compute the field accurately under these conditions, it is necessary to calculate the two components separately and to add them in correct phase relationship as determined by the geometry of the path and the change in magnitude and phase at ground reflection. For horizontally-polarized waves, the reflection coefficient can be taken as approximately one, and the phase

Propagation of very short waves continued

shift at reflection as 180 degrees, for nearly all types of ground and angles of incidence. For vertically-polarized waves, the reflection coefficient and phase shift vary with the ground constants and angle of incidence.*

For methods of computing field intensities when equations (1) and (2) do not hold beyond the radio path horizon, or when the antenna height is not negligible compared to distance, see reference below.†

At points beyond the radio path horizon, field intensity decreases more rapidly than the square of the distance; and, if the antennas are raised, the field intensity increases more rapidly than the product of antenna heights.

Measured field intensities usually show large deviations from point to point due to reflections from irregularities in the ground, buildings, trees, etc. In addition, fields at the longer distances are subject to fading and day-to-day variations due to changes in the refractive index of the atmosphere and tropospheric reflections.

* See Burrows, C. R., Radio Propagation over Plane Earth-Field Strength Curves. Bell System Tech. Jour., vol. 16 IJanuary 1937).

1 See Norton, K. A., The Effect of Frequency on the Signal Range of on Ultra-High Frequency Radio Station. FCC Mimeo Report 48466 (March 20, 1941).

Great circle calculations

Referring to Figs. 15, 16, and 17, A and B are two places on the earth's surface the latitudes and longitudes of which are known. The angles X and Y at A and B of the great circle passing through the two places and the distance Z between A and B along the great circle can be calculated as follows:

B is the place of greater latitude, i.e., nearer the pole

 L_A is the latitude of A

 L_B is the latitude of B

C is the difference of longitude between A and B

Then,
$$\tan \frac{Y - X}{2} = \cot \frac{C}{2} \frac{\sin \frac{L_B - L_A}{2}}{\cos \frac{L_B + L_A}{2}}$$

and,
$$\tan \frac{Y+X}{2} = \cot \frac{C}{2} \frac{\cos \frac{L_B-L_A}{2}}{\sin \frac{L_B+L_A}{2}}$$

give the values of
$$\frac{Y-X}{2}$$
 and $\frac{Y+X}{2}$

Great circle calculations continued

from which

$$\frac{Y+X}{2}+\frac{Y-X}{2}=Y$$

and

$$\frac{Y+X}{2}-\frac{Y-X}{2}=X$$

In the above formulas, north latitudes are taken as positive and south latitudes as negative. For example, if B is latitude 60° N and A is latitude 20° S

$$\frac{L_B + L_A}{2} = \frac{60 + (-20)}{2} = \frac{60 - 20}{2} = \frac{40}{2} = 20^{\circ}$$

and

$$\frac{L_B - L_A}{2} = \frac{60 - (-20)}{2} = \frac{60 + 20}{2} = \frac{80}{2} = 40^{\circ}$$

If both places are in the southern hemisphere and $L_B + L_A$ is negative, it is simpler to call the place of greater south latitude B and to use the above method for calculating bearings from true south and to convert the results afterwards to bearings east of north.

The distance Z (in degrees) along the great circle between A and B is given by the following:

$$\tan \frac{Z}{2} = \tan \frac{L_B - L_A}{2} \frac{\sin \frac{Y + X}{2}}{\sin \frac{Y - X}{2}}$$

The angular distance Z (in degrees) between A and B may be converted to linear distance as follows:

Z (in degrees) \times 111.195 = kilometers


Z (in degrees) \times 69.093 = statute miles

Z (in degrees) \times 60.000 = nautical miles

In multiplying, the minutes and seconds of arc must be expressed in decimals of a degree. For example, $Z = 37^{\circ} 45' 36''$ becomes 37.755° .

Example:—Find the great circle bearings at Brentwood, Long Island, Longitude 73° 15′ 10′′ W, Latitude 40° 48′ 40′′ N, and at Rio de Janeiro, Brazil, Longitude 43° 22′ 07′′ W, Latitude 22° 57′ 09′′ S, and the great circle distance in statute miles between the two points.

Great circle calculations continued

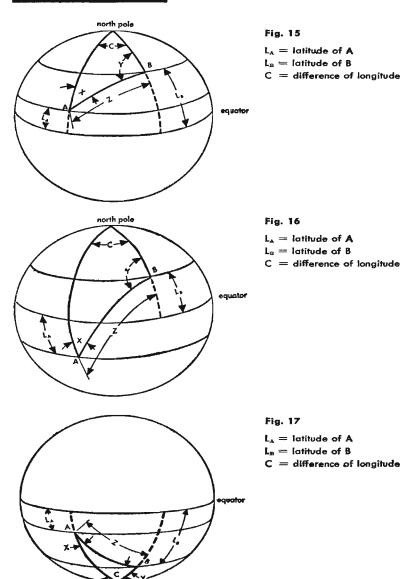

radio propagation and noise 243

Great circle calculations

continued

	longitude	latitude	_!
Brentwood Rio de Janeiro	73° 15′ 10′′ W 43° 22′ 07′′ W	40° 48′ 40″ N (—)22° 57′ 09″ S	L _B
С	29° 53′ 03′′	17° 51′ 31″ 63° 45′ 49″	L _B + L _A L _D - L _A
C _ 149 F(/ 21//	L _B + L _A _ 00 E	C' 45" LB — LA	210 50/ 54//

$$\frac{C}{2} = 14^{\circ} 56' 31'' \qquad \qquad \frac{L_{\text{B}} + L_{\text{A}}}{2} = 8^{\circ} 55' 45'' \qquad \qquad \frac{L_{\text{B}} - L_{\text{A}}}{2} = 31^{\circ} 52' 54''$$

minus log sin 8° 55′ 45″ =
$$\frac{9.19093}{1.31176}$$

log tan $\frac{Y + X}{2}$ = $\frac{1.31176}{1.31176}$

$$\frac{Y+X}{2} = 87^{\circ} 12' 26''$$

plus log sin 31° 52′ 54″ =
$$9.72277$$

minus log cos 8° 55′ 45″ =
$$\frac{9.99471}{0.30177}$$

log tan $\frac{Y - X}{2}$ = 0.30177

$$\frac{Y-X}{2} = 63^{\circ} 28' 26''$$

$$\frac{Y+X}{2} + \frac{Y-X}{2} = Y = 150^{\circ} 40' 52''$$
 East of North—bearing at Brentwood

$$\frac{Y+X}{2} - \frac{Y-X}{2} = X = 23^{\circ} 44' 00''$$
 West of North—bearing at Rio de Janeiro

$$\frac{L_{B} - L_{A}}{2} = 31^{\circ} 52' 54''$$

$$\frac{Y + X}{2} = 87^{\circ} 12' 26''$$

$$\frac{Y-X}{2} = 63^{\circ} 28' 26''$$

plus log sin 87° 12′ 26″
$$=$$
 9.99948 9.79327

minus
$$\log \sin 63^{\circ} 28' 26'' = 9.95170$$

$$\log \tan \frac{Z}{2} = 9.84157$$

$$\frac{Z}{2} = 34^{\circ} 46' 24''$$


$$Z = 69^{\circ} 32' 48''$$

$$69^{\circ} 32' 48'' = 69.547^{\circ}$$

linear distance = 69.547 × 69.093 = 4805.21 statute miles

Time interval between transmission and reception of reflected signal

Fig. 18 gives the time interval between transmission and reception of a reflected signal based on a velocity of propagation in free space of 985 feet per microsecond or 300 meters per microsecond. A statute mile of 5280 feet or 1760 yards or 1.609 kilometers is used.

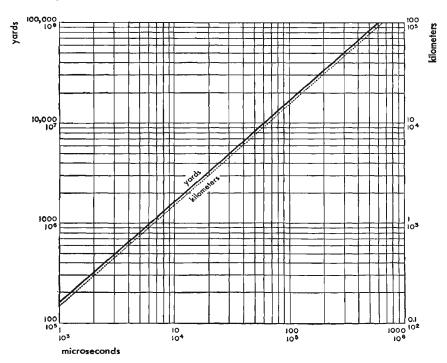

Note: Ordinates show distance to point of reflection

Fig. 18.

Radio noise and noise measurement*

Radio noise may be divided into four classifications, depending on origin:

- 1. Atmospheric noise (static)
- 2. Cosmic noise
- 3. Man-made noise
- 4. Receiver and antenna noise

^{*} See also section on Wire Telephony-Noise and Noise Measurement.

Radio noise and noise measurement continued

Radio noise, as in Fig. 19, is usually expressed in terms of peak values. Atmospheric noise is shown in the figure as the average peaks would be read on the indicating instrument of an ordinary field intensity meter. This is lower than the true peaks of atmospheric noise. Man-made noise is shown as the peak values that would be read on the EEI–NEMA–RMA standard noise meter. Receiver and antenna noise is shown with the peak values 13 decibels higher than the values obtained with an energy averaging device such as a thermoammeter.

1. Atmospheric noise: is produced mostly by lightning discharges in thunderstorms. The noise level is thus dependent on frequency, time of day, weather, season of the year, and geographical location.

Subject to variations due to local stormy areas, noise generally decreases with increasing latitude on the surface of the globe. Noise is particularly severe during the rainy seasons in certain areas such as Caribbean, East Indies, equatorial Africa, northern India, etc. Fig. 19 shows median values of atmosphetic noise for the U. S. A. and these values may be assumed to apply approximately to other regions lying between 30 and 50 degrees latitude north or south.

Rough approximations for atmospheric noise in other regions may be obtained by multiplying the values of Fig. 19 by the factors in Table III.

Table III—Multiplying	factors	for	atmospheric	noise
in regions not shown	on Fig.	19		

I mateur die	nigh	time	daytime		
latitude	100 kc	10 me	100 kc	10 mc	
90°-50° 50°-30° 30°-10° 10°- 0°	0.1 1 2 5	0.3 1 2 4	0.05 1 3 6	0.1 1 2 3	


Atmospheric noise is the principal limitation of radio service on the lower frequencies. At frequencies above about 30 megacycles, the noise falls to levels generally lower than receiver noise.

The peak amplitude of atmospheric noise usually may be assumed to be proportional to the square root of receiver bandwidth.

2. Cosmic noise: originates outside the earth's atmosphere and appears as a random noise like thermal agitation. Cosmic noise has been observed and measured at frequencies from 10 to 20 megacycles and at frequencies of about 160 megacycles. It is reasonable to assume that it exists at all frequencies between 10 and 1000 megacycles and higher.

Radio noise and noise measurement continued

The intensity of cosmic noise is generally lower than interference produced by other sources. In the absence of atmospheric and man-made noise, it may be the principal limiting factor in reception between 10 and 30 megacycles.

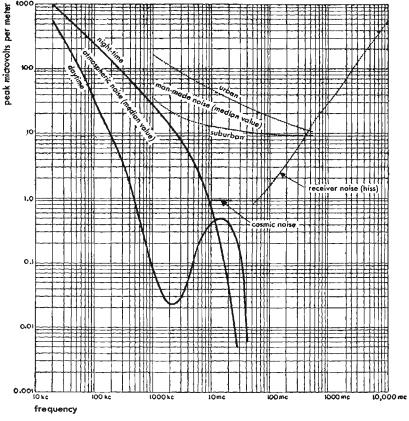

Notes:

- 1. All noise curves assume a bandwith of 10 kilocycles.
- Receiver noise is based on the use of a half-wave dipole antenna and is worse than an ideal receiver by 10 decibels at 50 megacycles and 15 decibels at 1000 megacycles.
 Refer to Fig. 20 for converting man-made noise curves to bandwiths greater than 10
- 4. For all other curves, noise varies as the square root of bandwith.

Fig. 19.

Radio noise and noise measurement continued

3. Man-made noise: includes interference produced by sources such as motorcar ignition, electric motors, electric switching gear, high-tension line leakage, diathermy, industrial heating generators. The field intensity from these sources is greatest in densely populated and industrial areas.

The nature of man-made noise is so variable that it is difficult to formulate a simple rule for converting 10 kilocycle bandwidth receiver measurements to other bandwidth values. For instance, the amplitude of the field strength radiated by a diathermy device will be the same in a 100- as in a 10-kilocycle bandwidth receiver. Conversely, peak noise field strength due to automobile ignition will be considerably greater with a 100- than with a 10-kilocycle bandwidth. According to the best available information, the peak field strengths of man-made noise (except diathermy and other narrow-band noise) increases as the receiver bandwidth is increased, substantially as shown in Fig. 20.

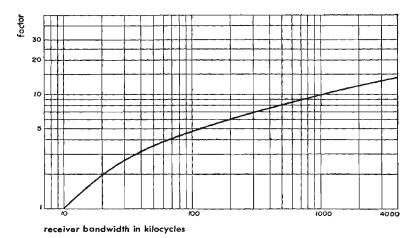


Fig. 20—Bandwidth factor. Multiply value of man-made noise from Fig. 19 by the factor above for receiver bandwidths higher than 10 kilocycles.

The man-made noise curves in Fig. 19 show typical median values for the U.S.A. In accordance with statistical practice, median values are interpreted to mean that 50 percent of all sites will have lower noise levels than the values of Fig. 19; 70 percent of all sites will have noise levels less than 1.9 times these values: and 90 percent of all sites, less than seven times these values.

Radio noise and noise measurement continued

4. Receiver and antenna noise: is caused by thermal agitation in resistance components of the antenna and receiver circuits and by electronic current flow in the tubes.

The basic equation for thermal agitation noise is

 $E^2 = 4 kTR \Delta f$

where

 $E = rms \ volts$

 $k = \text{Boltzmann's constant} = 1.374 \times 10^{-23}$

T = absolute temperature in degrees Kelvin

R = resistance in ohms

 $\Delta f = \text{bandwidth in cycles per second}$

For application of this formula to receiver input circuits see Herold, E. W., An Analysis of the Signal-to-Noise Ratio of Ultra-High-Frequency Receivers; and North, D. O., The Absolute Sensitivity of Radio Receivers. RCA Review, vol. 6 (January, 1942).

The ideal receiver is one in which the only noise is that generated by thermal agitation in the radiation resistance of the antenna and in the input coupling resistance. The calculated values shown in Fig. 19 are based on the assumption that an actual receiver has a noise level greater than the ideal receiver by a factor varying from 10 decibels at 50 megacycles to 15 decibels at 1000 megacycles.

The peak value of this type of noise is approximately 13 decibels greater than its rms value. The amplitude is proportional to the square root of receiver bandwidth. Fig. 19 shows the field intensities required to equal the peak receiver noise values calculated on the above basis. These equivalent field intensities assume the use of a half-wave dipole receiving antenna. Transmission-line loss is omitted in the calculations. For antennas delivering more power to the receiver than a half-wave dipole, equivalent noise field intensities are less than indicated in Fig. 19 in proportion to the net gain of the antenna plus transmission line.

5. Signal-to-noise ratio: for satisfactory reception varies over wide limits dependent on the type of communication, bandwidth, type of modulation, directivity of receiving antenna, character of noise, etc. A rough general relationship applicable to many services is that the average value of field intensity should be at least 10 decibels higher than the peak noise intensity, both measured on nondirective antennas with the noise peaks as observed on the usual type of measuring devices. Due to the relationship between peak and average values for noise, this means that the average field intensity should exceed the average noise intensity by at least 20 to 25 decibels.

Radio noise and noise measurement continued

Considerably higher ratios of signal-to-noise fields are required for many uses such as AM program transmission, television, loop direction finding, etc.

6. Measurement of radio noise: External noise fields, such as atmospheric, cosmic, and man-made, are measured in the same way as radio wave field strengths* with the exception that peak rather than average values of noise are usually of interest and that the overall bandpass action of the measuring apparatus must be accurately known in measuring noise. When measuring noise varying over wide limits with time, such as atmospheric noise, it is generally best to employ automatic recorders.

Internal receiver and antenna noise may be measured by a standard signal generator connected to the receiver through a resistance equal to the calculated antenna radiation resistance. The amplitude of a single-frequency signal at the center of the pass band, when receiver output is $\sqrt{2}$ times the noise output with no signal, may be taken as equal to the noise amplitude.

^{*} For methods of measuring field strengths and, hence, noise, see I.R.E. Standards on Radio Wave Propagation. Measuring Methods (1942). For information on suitable circuits to obtain peak values, particularly with respect to man-made noise, see Agger, C. V., Foster, D. E., and Young, C. S. Instruments and Methods of Measuring Radio Naise. Trons, A.I.E.E. (Elec. Eng., March, 1940), vol. 59.

Antennas


Field intensity from an elementary dipole*

The elementary dipole forms the basis for many antenna computations. Since dipole theory assumes an antenna with current of constant magnitude and phase throughout its length, approximations to the elementary dipole are realized in practice only for antennas shorter than one-tenth wavelength. The theory can be applied directly to a loop whose circumference is less than one-tenth wavelength, thus forming a magnetic dipole. For larger antennas, the theory is applied by assuming the antenna to consist of a large number of infinitesimal dipoles with differences between individual dipoles of space position, polarization, current magnitude, and phase corresponding to the distribution of these parameters in the actual antenna. Field intensity equations for large antennas are then developed by integrating or otherwise summing the field vectors of the many elementary dipoles.

The outline below concerns electric dipoles. It also can be applied to magnetic dipoles by installing the loop perpendicular to the PO line at the center of the sphere in Fig. 1. In this case, vector h becomes ϵ , the electric field; ϵ_t becomes the magnetic tangential field; and ϵ_r the radial magnetic field.

Fig. 1

Electric and magnetic components in spherical coordinates for electric dipoles.

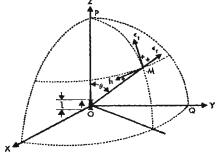

In the case of a magnetic dipole, Table I, showing variations of the field in the vicinity of the dipole, can also be used. A_r is then the coefficient for the radial magnetic field; A_t is the coefficient for the tangential magnetic field; A_h is the coefficient for the electric field; ϕ_r ; ϕ_t ; and ϕ_h being the phase angles corresponding to the coefficients.

^{*} Based on Mesny, R., Radio-Electricité Générale.

Field intensity from an elementary dipole continued

For electric dipoles, Fig. 1 indicates the electric and magnetic field components in spherical coordinates with positive values shown by the arrows.

$$r=$$
 distance OM $\omega=2\pi f$
 $\theta=$ angle POM measured from P toward M $\alpha=\frac{2\pi}{\lambda}$
 $\alpha=\frac{2\pi}{\lambda}$

The following equations expressed in electromagnetic units* (in vacuum) result:

result:

$$\epsilon_{r} = -\frac{cIN}{\pi} \frac{\cos \theta}{r^{3}} (\cos v - \alpha r \sin v)$$

$$\epsilon_{t} = +\frac{cI\lambda I}{2\pi} \frac{\sin \theta}{r^{3}} (\cos v - \alpha r \sin v - \alpha^{2} r^{2} \cos v)$$

$$h = -II \frac{\sin \theta}{r^{2}} (\sin v - \alpha r \cos v)$$
(1)

Table I-Variations of the field in the vicinity of a dipole

r/λ	1/αr	Ar	φ	I At	φŧ	l A _h	ϕ_h
	1						- 0
0.01	15.9	4,028	3°.6	4,012	3°.6	253	93°.6
0.02	7.96	508	7°.2	500	7°.3	64.2	97°.2
0.04	3.98	65	14°.1	61	15°.0	16.4	104°.1
0.06	2.65	19.9	20°.7	17.5	23°.8	7.67	110°.7
80.0	1.99	8.86	26°.7	7.12	33°.9	4.45	116°.7
0.10	1.59	4.76	32°.1	3.52	45°.1	2.99	122°.1
0.15	1.06	1.66	42°.3	1.14	83°.1	1.56	132°.3
0.20	0.80	18.0	51°.5	0.70	114°.0	1.02	141°.5
0.25	0.64	0.47	57°.5	0.55	133°.1	0.75]47°.5
0.30	0.56	0.32	62°.0	0.48	143°.0	0.60	152°.0
0.35	0.45	0.23	65°.3	0.42	150°.1	0.50	155°.3
0.40	0.40	0.17	68°.3	0.37	154°.7	0.43	1.58°.3
0.45	0.35	0.134	70°.5	0.34	158°.0	0.38	160°.5
0.50	0.33	0.106	72°.3	0.30	160°.4	0.334	162°.3
0.60	0.265	0.073	75°.1	0.26	164°.1	0.275	165°.1
0.70	0.228	0.053	77°.1	0.22	166°.5	0.234	167°.1
0.80	0.199	0.041	78°.7	0.196	168°.3	0.203	L°86,I
0.90	0.177	0.032	80°.0	0.175	169°.7	0.180	170°.0
1.00	0.159	0.026	80°.9	0.157	170°.7	0.161	170°.9
1.20	0.133	0.018	82°.4	0.132	172°.3	0.134	172°.4
1.40	0.114	0.01.3	83°.5	0.114	173°.5	0.114	173°.5
1.60	0,100	0.010	84°.3	0.100	174°.3	0.100	174°.3
1.80	0.088	0.008	84°.9	0.088	174°.9	0.088	174°.9
2.00	0.080	0.006	85°.4	0.080	175°.4	0.080	175°.4
2,50	0.064	0,004	86°.4	0.064	176°.4	0.064	176°.4
5.00	0.032	0.001	88°.2	0.032	178°.2	0.032	178°.2

^{*} See pages 16 and 17.

Field intensity from an elementary dipole cantinued

These formulas are valid for the elementary dipole at distances which are large compared with the dimensions of the dipole. Length of the dipole must be small with respect to the wavelength, say $\frac{l}{\lambda} <$ 0.1. The formulas are for a dipole in free space. If the dipole is placed vertically on a plane of infinite conductivity, its image should be taken into account, thus doubling the above values.

Field of an elementary dipole at great distance

When distance r exceeds five wavelengths, as is generally the case in radio applications, the product $\alpha r=2\pi\,\frac{r}{\lambda}$ is large and lower powers in αr can be neglected. The radial electric field ϵ_r then becomes negligible with respect to the tangential field and

$$\epsilon_{r} = 0$$

$$\epsilon_{t} = -\frac{2\pi cII}{\lambda r} \sin \theta \cos (\omega t - \alpha r)$$

$$h = -\frac{\epsilon_{t}}{c}$$
(2)

Field of an elementary dipole at short distance

In the vicinity of the dipole $\left(\frac{r}{\lambda} < 0.01\right)$, αr is very small and only the first terms between parantheses in equations (1) remain. The ratio of the radial and tangential field is then

$$\frac{\epsilon_r}{\epsilon_t} = -2 \cot \theta$$

Hence, the radial field at short distance has a magnitude of the same order as the tangential field. These two fields are in opposition. Further, the ratio of the magnetic and electric tangential field is

$$\frac{h}{\epsilon_t} = -\frac{\alpha r}{c} \frac{\sin v}{\cos v}$$

The magnitude of the magnetic field at short distances is, therefore, extremely small with respect to that of the tangential electric field, relative to their relationship at great distances. The two fields are in quadrature. Thus, at short distances, the effect of the dipole on an open circuit is much greater than on a closed circuit as compared with the effect at remote points.

Field of an elementary dipole at intermediate distance

At intermediate distance, say between 0.01 and 5.0 wavelengths, one should take into account all the terms of the equations (1). This case occurs, for instance, when studying reactions between adjacent antennas. To calculate the fields, it is convenient to transform the equations as follows:

$$\epsilon_r = -2\alpha^2 c I \cos \theta \, A_r \cos (v + \phi_r)
\epsilon_t = \alpha^2 c I \sin \theta \, A_t \cos (v + \phi_t)
h = \alpha^2 I I \sin \theta \, A_h \cos (v + \phi_h)$$
(3)

where

where
$$A_r = \frac{\sqrt{1 + (\alpha r)^2}}{(\alpha r)^3} \qquad \tan \phi_r = \alpha r$$

$$A_t = \frac{\sqrt{1 - (\alpha r)^2 + (\alpha r)^4}}{(\alpha r)^3} \cot \phi_r = \frac{1}{\alpha r} - \alpha r$$

$$A_h = \frac{\sqrt{1 + (\alpha r)^2}}{(\alpha r)^2} \qquad \cot \phi_h = -\alpha r$$

$$(4)$$

Vatues of A's and ϕ 's are given in Table I as a function of the ratio between the distance r and the wavelength λ . The second column contains values of $\frac{1}{\alpha r}$ which would apply if the fields ϵ_t and h behaved as at great distances.

Field intensity from a vertically polarized

antenna with base close to ground

The following formula is obtained from elementary dipole theory and is applicable to low frequency antennas. It assumes that the earth is a perfect reflector, the antenna dimensions are small compared with λ , and the actual

height does not exceed $\frac{\lambda}{4}$.

The vertical component of electric field radiated in the ground plane, at distances so short that ground attenuation may be neglected (usually when $D < 10 \, \text{AJ}$, is given by

$$E = \frac{377 I H_o}{\lambda D}$$

where

E =field intensity in millivolts per meter

I = current at base of antenna in amperes

 H_e = effective height of antenna

 λ = wavelength in same units as H

D = distance in kilometers

Field intensity from a vertically polarized

antenna with base close to ground continued

The effective height of a grounded vertical antenna is equivalent to the height of a vertical wire producing the same field along the horizontal as the actual antenna, provided the vertical wire carries a current that is constant along its entire length and of the same value as at the base of the actual antenna. Effective height depends upon the geometry of the antenna and varies slowly with λ . For types of antennas normally used at low and medium frequencies, it is roughly one-half to two-thirds the actual height of the antenna.

For certain antenna configurations effective height can be calculated by the following formulas

1. Straight vertical antenna
$$\left(h \approx \frac{\lambda}{4}\right)$$

$$H_{e} = \frac{\lambda}{\pi \sin \frac{2\pi h}{\lambda}} \sin^{2} \binom{\pi h}{\lambda}$$

where h = actual height

2. Loop antenna (A $< 0.001 \lambda^2$)

$$H_e = \frac{2\pi nA}{\lambda}$$

where A = mean area per turn of loop

n = number of turns

3. Adoock antenna

$$H_e = \frac{2\pi ab}{\lambda}$$

where

a = height of antenna

b = spacing between antennas

In the above formulas, if H_o is desired in meters or feet, all dimensions h, A, a, b, and λ must be in meters or feet respectively.

Vertical radiators

The field intensity from a single vertical tower insulated from ground and either of self-supporting or guyed construction, such as is commonly used for medium-frequency broadcasting, may be calculated by the following

formula. This is more accurate than the formula given on page 253. Near ground level the formula is valid within the range $2\lambda < D < 10\lambda$.

$$E = \frac{60 I}{D \sin 2\pi \frac{h}{\lambda}} \left[\frac{\cos (2\pi \frac{h}{\lambda} \cos \theta) - \cos 2\pi \frac{h}{\lambda}}{\sin \theta} \right]$$
 (5)

where

E = field intensity in millivolts per meter

I = current at base of antenna in amperes

h = height of antenna

 λ = wavelengths in same units as h

D = distance in kilometers

 θ = angle from the vertical

Radiation patterns in the vertical plane for antennas of various heights are shown in Fig. 2. Field intensity along the horizontal as a function of antenna height for one kilowatt radiated is shown in Fig. 3.

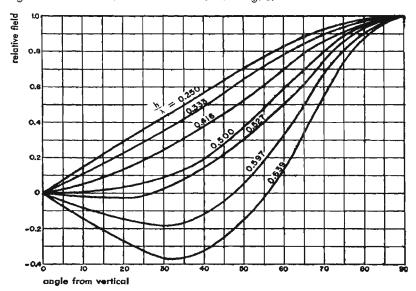


Fig. 2—Field strength as a function of angle of elevation for vertical radiators of different helahts.

Both Figs. 2 and 3 assume sinusoidal distribution of current along the antenna and perfect ground conductivity. Current magnitudes for one-kilowatt power used in calculating Fig. 3 are also based on the assumption that the only resistance is the theoretical radiation resistance of a vertical wire with sinusoidal current.

Since inductance and capacitance are not uniformly distributed along the tower and since current is attenuated in traversing the tower, it is impossible to obtain sinusoidal current distribution in practice. Consequently actual radiation patterns and field intensities differ from Figs. 2 and 3.* The closest approximation to sinusoidal current is found on constant cross-section towers.

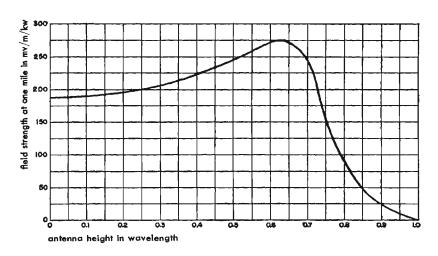


Fig. 3—Field strength along the horizontal as a function of antenna height for a vertical grounded radiator with one kilowatt radiated power.

In addition, antenna efficiencies vary from about 70 percent for 0.15 wavelength physical height to over 95 percent for 0.6 wavelength height. The input power must be multiplied by the efficiency to obtain the power radiated.

Average results of measurements of impedance at the base of several actual

^{*} For Information on the effect of some practical current distributions on field intensities see Gihring, H. E. and Brown G. H. General Considerations of Tower Antennas for Braadcast Use. Proc. 1.R.E., vol. 23, p. 311 (April, 1935).

vertical radiators, as given by Chamberlain and Lodge, are shown in Fig. 4. For design purposes when actual resistance and current of the projected radiator are unknown, resistance values may be selected from Fig. 4 and

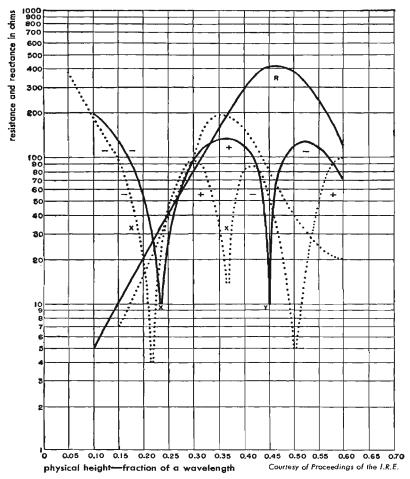


Fig. 4—Resistance and reactance components of impedance between tower base and ground of vertical radiators as given by Chamberlain and Lodge. Solid lines show average results for 5 guyed towers; dotted lines show average results for 3 self-supporting towers.

the resulting effective current obtained from the following equation

$$I_e = \sqrt{\frac{W\eta}{R}} \tag{6}$$

where

 I_e = current effective in producing radiation in amperes

W = watts input

 η = antenna efficiency, varying from 0.70 at $\frac{h}{\lambda}$ = 0.15

to 0.95 at
$$\frac{h}{\lambda} = 0.6$$

R = resistance at base of antenna in ohms

If I_e from (6) is substituted in (5), reasonable approximations to the field intensity at unit distances, such as one kilometer or one mile, will be obtained.

The practical equivalent of a higher tower may be secured by adding a capacitance "hat" with or without tuning inductance at the top of a lower tower.*

A good ground system is important with vertical-radiator antennas. It should consist of at least 120 radial wires, each one-half wavelength or longer, buried 6 to 12 inches below the surface of the soil. A ground screen of high-conductivity metal mesh, bonded to the ground system, should be used on or above the surface of the ground adjacent to the tower.

* For additional information see Brown, G. H., Proc. I.R.E., vol. 24, p. 48 (January, 1936) and Brown, G. H. and Leitch J. G., vol. 25, p. 533 (May, 1937).

Field intensity and radiated power from

a half-wave dipole in free space

Fig. 5 on page 259 shows the field intensity and radiated power from a half-wave dipole in free space. The following formulas apply:

Input power $W = I^2R = I^2(73.12)$ watts

Radiated power $P = \frac{30I^2}{\pi d^2} = \frac{0.1306W}{d^2}$ watts per square meter

Electric field intensity $E = \frac{60I}{d} = \frac{7.02\sqrt{W}}{d}$ volts per meter

I = maximum current on dipole in rms amperes

R = radiation resistance = 73.12 ohms

d = distance from antenna in meters

Field intensity and radiated power from a half-wave dipole

continued

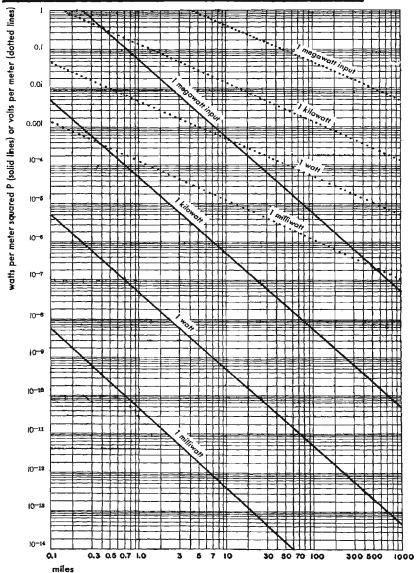


Fig. 5.


Table II—Radiation from an end-fed conductor of any length in space

configuration (length of radiator)	expression for intensity $F(\theta)$
Half wave resonant	$\frac{\cos\left(\frac{\pi}{2}\sin\theta\right)}{\cos\theta}$
Any odd number of half waves resonant	$\frac{\cos\left(\frac{l^{\circ}}{2}\sin\theta\right)}{\cos\theta}$
Any even number of half waves resonant	$\frac{\sin\left(\frac{J^{\circ}}{2}\sin\theta\right)}{\cos\theta}$
Any length resonant	$\frac{1}{\cos \theta} \left[1 + \cos^2 l^\circ + \sin^2 \theta \sin^2 l^\circ - 2 \cos (l^\circ \sin \theta) \cos l^\circ - 2 \sin \theta \sin (l^\circ \sin \theta) \sin l^\circ \right]^{\frac{1}{2}}$
Any length non-resonant	$\tan \frac{\theta}{2} \sin \frac{l^{\circ}}{2} (1 - \sin \theta)$

1° = Length of radiator in electrical degrees, energy to flow from left-hand end of radiator.

 θ = angle from the vertical

 $\lambda = \text{wavelength}$



Maxima and minima of radiation from a single-wire radiator

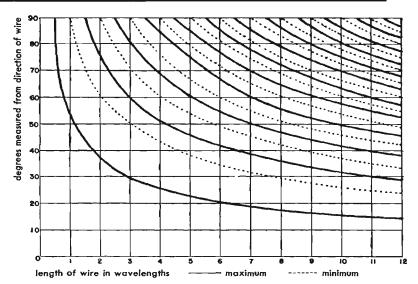


Fig. 6.

Rhombic antennas

Linear radiators may be combined in various ways to form antennas such as the horizontal vee, inverted vee, etc. The type most commonly used at high frequencies is the horizontal terminated rhombic shown in Fig. 7.




Fig. 7.

In designing rhombic antennas* for high-frequency radio circuits, the desired vertical angle Δ of radiation above the horizon must be known or assumed. When the antenna is to operate over a wide range of radiation angles or is to operate on several frequencies, compromise values of H, L, and ϕ must

^{*} For more complete information see Harper, A. E. Rhombic Antenna Design. D. Van Nostrand Co. {1941}.

Rhombic antennas continued

be selected. Gain of the antenna increases as the length of L of each side is increased; however, to avoid too-sharp directivity in the vertical plane, it is usual to limit L to less than six wavelengths.

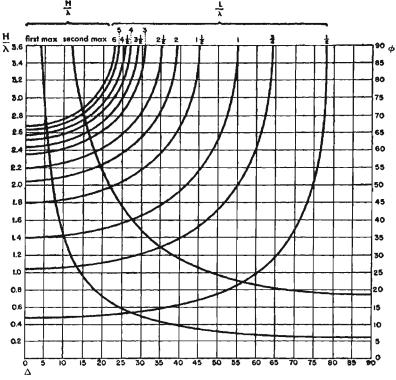


Fig. 8-Rhombic antenna design chart.

Knowing the side length and radiation angle desired, the height H above ground and the tilt angle ϕ can be obtained from Fig. 8 as in the following example:

Problem: Find H and ϕ if $\Delta = 20^{\circ}$ and $L = 4\lambda$.

Solution: On Fig. 8 draw a vertical line from $\Delta \approx 20^{\circ}$ to meet $\frac{L}{\lambda} = 4$

curve and $\frac{H}{\lambda}$ curves. From intersection at $\frac{L}{\lambda}=4$, read on the right-hand

Rhombic antennas continued

scale $\phi=71.5^{\circ}$. From intersection on $\frac{H}{\lambda}$ curves, there are two possible values on the left-hand scale

1.
$$\frac{H}{\lambda} = 0.74$$
 or $H = 0.74\lambda$

2.
$$\frac{H}{\lambda} = 2.19$$
 or $H = 2.19\lambda$

Similarly, with an antenna 4λ on the side and a tilt angle $\phi=71.5^{\circ}$, working backwards, it is found that the angle of maximum radiation Δ is 20°, if the antenna is 0.74λ or 2.19λ above ground.

Antenna arrays

The basis for all directivity control in antenna arrays is wave interference. By providing a large number of sources of radiation, it is possible with a fixed amount of power greatly to reinforce radiation in a desired direction by suppressing the radiation in undesired directions. The individual sources may be any type of antenna.

Expressions for the radiation pattern of several common types of individual elements are shown in Table III but the array expressions are not limited to them. The expressions hold for linear radiators, rhombics, vees, horn radiators, or other complex antennas when combined into arrays, provided a suitable expression is used for A, the radiation pattern of the individual antenna. The array expressions are multiplying factors. Starting with an individual antenna having a radiation pattern given by A, the result of combining it with similar antennas is obtained by multiplying A by a suitable array factor, thus obtaining an A' for the group. The group may then be treated as a single source of radiation. The result of combining the group with similar groups or, for instance, of placing the group above ground, is obtained by multiplying A' by another of the array factors given.

The expressions given here assume negligible mutual coupling between individual antennas. When coupling is not negligible, the expressions apply only if the feeding is adjusted to overcome the coupling and thus produce resultant currents which are equal or binomial in amplitude and of the relative phases indicated.

One of the most important arrays is the linear multi-element array where a large number of equally spaced antenna elements are fed equal currents in phase to obtain maximum directivity in the forward direction. Table IV gives expressions for the radiation pattern of several particular cases and the general case of any number of broadside elements.

In this type of array, a great deal of directivity may be obtained. A large number of minor lobes, however, are apt to be present and they may be undesirable under some conditions, in which case a type of array, called the Binomial array, may be used. Here again all the radiators are fed in phase

Table III—Radiation patterns of several common types of antennas

type of	current	directivity				
radiator	distribution	horizontal F(θ)	vertica i F(β)			
Half-wave dipole	**************************************	$F(\theta) = \frac{\cos\left(\frac{\pi}{2}\sin\theta\right)}{\cos\theta}$ $\cong K\cos\theta$	$F(\beta) = K(1)$			
Shortened dipole		$F(\theta) \cong K \cos \theta$	$F(\beta) = K(1)$			
Lengthened dipole	77	$F(\theta) = \left[K \left[\frac{\cos\left(\frac{\pi l}{\lambda}\sin\theta\right) - \cos\frac{\pi l}{\lambda}}{\cos\theta} \right] \right]$	$F(\beta) = K(1)$			
Horizontal loop		F(θ) ≅ K(1)	$F(\beta) = K \cos \beta$			
Horizontal turnstile	i ₁ and i ₂ phased 90°	$F(\theta) \cong K'(1)$	$F(\beta) \cong K'(1)$			

heta= horizontal angle measured from perpendicular bisecting plane

 β = vertical angle measured from horizon

K and K' are constants and $K' \cong 0.7K$

but the current is not distributed equally among the array elements, the center radiators in the array being fed more current than the outer ones. Table V shows the configuration and general expression for such an array. In this case the configuration is made for a vertical stack of loop attennas

Table IV-Linear multi-element array broadside directivity

configuration of array	expression for intensity $F(\theta)$
	A[1]
A A A	$2A\left[\cos\left(\frac{s^{\circ}}{2}\sin\theta\right)\right]$
\$\text{\text{\$\line \text{\$\line \text{	$A + 2A$ [cos (s° sin θ)]
	$4A \left[\cos (s^{\circ} \sin \theta) \cos \left(\frac{s^{\circ}}{2} \sin \theta\right)\right]$
m radiators (general case)	$A \frac{\sin\left(m\frac{s^{\circ}}{2}\sin\theta\right)}{\sin\left(\frac{s^{\circ}}{2}\sin\theta\right)}$

A = 1 for horizontal loop, vertical dipole

$$A = \frac{\cos\left(\frac{\pi}{2}\sin\theta\right)}{\cos\theta}$$
 for horizontal dipole

 $s^{\circ} = spacing of successive elements in degrees$

in order to obtain single-lobe directivity in the vertical plane. If such an array were desired in the horizontal plane, say n dipoles end to end, with the specified current distribution the expression would be

$$F(\theta) = 2^{n-1} \left[\frac{\cos\left(\frac{\pi}{2}\sin\theta\right)}{\cos\theta} \right] \cos^{n-1}\left(\frac{1}{2}S^{\circ}\sin\theta\right)$$

The term binomial results from the fact that the current intensity in the successive array elements is in accordance with the binomial expansion $(1+1)^{n-1}$, where n is the number of elements.

Examples of use of Tables III, IV, V, and VI

Problem 1: Find horizontal radiation pattern of four colinear horizontal dipoles, spaced successively $\frac{\lambda}{2}$ (180°).

Solution: From Table IV radiation from four radiators spaced 180° is given by $F(?) = 4A \cos (180^{\circ} \sin \theta) \cos (90^{\circ} \sin \theta)$.

From Table III the horizontal radiation of a half-wave dipole is given by

$$A = K \frac{\cos\left(\frac{\pi}{2}\sin\theta\right)}{\cos\theta};$$

therefore, the total radiation

$$F(\theta) = K \left[\frac{\cos\left(\frac{\pi}{2}\sin\theta\right)}{\cos\theta} \right] \cos(180^{\circ}\sin\theta) \cos(90^{\circ}\sin\theta)$$

Problem 2: Find vertical radiation pattern of four horizontal dipoles, stacked one above the other, spaced 180° successively.

Solution: From Table IV we obtain the general equation of four radiators, but since the spacing is vertical, the expression should be in terms of vertical angle β .

$$F(\beta) = 4A \cos (180^{\circ} \sin \beta) \cos (90^{\circ} \sin \beta)$$
.

From Table III we find that the vertical radiation from a horizontal dipole (in the perpendicular bisecting plane) is non-directional. Therefore the vertical pattern is

$$F(\beta) = K(1) \cos (180^{\circ} \sin \beta) \cos (90^{\circ} \sin \beta)$$

Antenna arrays

continued

Table V—Development of binomial array

configuration of array	expression for intensity $F(eta)$
10	cos β[1]
	$2\cos\beta\left[\cos\left(\frac{s^{\circ}}{2}\sin\beta\right)\right]$
$\frac{1 \diamondsuit}{\stackrel{5^{\circ}}{5} \stackrel{1}{\otimes} \stackrel{1}{\otimes} 1} = \stackrel{\diamondsuit_1}{\diamondsuit_2}$	$2^2 \cos \beta \left[\cos^2 \left(\frac{s^{\circ}}{2} \sin \beta \right) \right]$
$ \begin{array}{ccc} & & & & & & \downarrow 1 \\ & & & & & \downarrow 1 \\ & & & & \downarrow 2 \\ & & \downarrow 2 \\ & & & \downarrow 2 \\ & \downarrow 3 \\ & \downarrow 2 \\ & \downarrow 2 \\ & \downarrow 2 \\ & \downarrow 3 \\ & \downarrow 2 \\ & \downarrow 3 \\ & \downarrow 4 \\ & \downarrow 2 \\ & \downarrow 2 \\ & \downarrow 3 \\ & \downarrow 3 \\ & \downarrow 4 \\ & \downarrow 4 \\ & \downarrow 2 \\ & \downarrow 4 \\ & \downarrow 4$	$2^3 \cos \beta \left[\cos^3 \left(\frac{s^{\circ}}{2} \sin \beta \right) \right]$
$ \begin{array}{c c} 1 & & & \downarrow 1 \\ \hline 3 & & \downarrow \downarrow 1 \\ \hline 5 & 5 & & \downarrow \downarrow 5 \\ \hline 1 & & \downarrow \downarrow 5 \\ \hline 1 & & \downarrow \downarrow 5 \end{array} $ $ \begin{array}{c c} 5 & & \downarrow \downarrow \downarrow 5 \\ \hline 1 & & \downarrow \downarrow \downarrow 5 \\ \hline 1 & & \downarrow \downarrow \downarrow 1 \end{array} $	$2^{4} \cos \beta \left[\cos^{4} \left(\frac{s^{\circ}}{2} \sin \beta \right) \right]$ and in general: $2^{n-1} \cos \beta \left[\cos^{n-1} \left(\frac{s^{\circ}}{2} \sin \beta \right) \right]$ where n is the number of loops in the array

Problem 3: Find horizontal radiation pattern of group of dipoles in problem 2.

Solution: From Table III.

$$F(\theta) = K \frac{\cos\left(\frac{\pi}{2}\sin\theta\right)}{\cos\theta} \cong K\cos\theta$$

Problem 4: Find the vertical radiation pattern of stack of five loops spaced $2/3~\lambda$ (240°) one above the other, all currents equal in phase and amplitude.

Solution: From Table IV, using vertical angle because of vertical stacking,

$$F(\beta) = A \frac{\sin [5(120^\circ) \sin \beta]}{\sin (120^\circ \sin \beta)}$$

From Table III, we find A for a horizontal loop in the vertical plane

$$A = F(\beta) = K \cos \beta$$

Total radiation pattern

$$F(\beta) = K \cos \beta \frac{\sin [5(120^{\circ}) \sin \beta]}{\sin (120^{\circ} \sin \beta)}$$

Problem 5: Find radiation pattern (vertical directivity) of the five loops in problem 4, if they are used in binomial array. Find also current intensities in the various loops.

Solution: From Table V

$$F(\beta) = K \cos \beta \left[\cos^4(120^\circ \sin \beta)\right]$$
 (all terms not functions of vertical angle β combined in constant K)

Current distribution $(1+1)^4 = 1+4+6+4+1$, which represent the current intensities of successive loops in the array.

Problem 6: Find horizontal radiation pattern from two vertical dipoles spaced one-quarter wavelength apart when their currents differ in phase by 90°.

Solution: From Table VI

$$s^{\circ} = \frac{\lambda}{4} = 90^{\circ} = \text{spacing}$$

$$\phi = 90^{\circ} = \text{phase difference}$$


 $F(\theta) = 2A \cos (45 \sin \theta + 45^{\circ})$

Antenna arrays

continued


Table VI—Supplementary problems

configuration of array	expression for intensity
A—two radiators any phase φ	$F(\theta) = 2A \cos\left(\frac{s^{\circ}}{2} \sin \theta + \frac{\phi}{2}\right)$
B—radiator above ground (horizontal polarization)	
	$F(R) = 2A \sin (h \cdot \circ \sin R)$



 $F(\beta) = 2A \sin (h_1^{\circ} \sin \beta)$

C—radiator parallel to screen



 $F(\beta) = 2A \sin (d^{\circ} \cos \beta)$ or $F(\theta) = 2A \sin (d^{\circ} \cos \theta)$

s° = spacing in electrical degrees

 h_1° = height of radiator in electrical degrees

 d° = spacing of radiator from screen in electrical degrees

Problem 7: Find the vertical radiation pattern and the number of nulls in the vertical pattern $10 \le \beta \le 90$) from a horizontal loop placed three wavelengths above ground.

Solution:

$$h_1^{\circ} = 3(360) = 1080^{\circ}$$

From Table VI

$$F(\beta) = 2A \sin (1080 \sin \beta)$$

From Table III for loop antennas

$$A = K \cos \beta$$

Total vertical radiation pattern

 $F(\beta) = K\cos \beta \sin (1080 \sin \beta)$

A null occurs wherever $F(\beta) = 0$.

The first term, $\cos \beta$, becomes 0 when $\beta - 90^{\circ}$.

The second term, sin (1080 sin β), becomes 0 whenever the value inside the parenthesis becomes a multiple of 180°. Therefore, number of nulls equal

$$1 + \frac{h_1^{\circ}}{180} = 1 + \frac{1080}{180} = 7.$$

Problem 8: Find the vertical and horizontal patterns from a horizontal half-wave dipole spaced $\frac{\lambda}{8}$ in front of a vertical screen.

Solution:

$$d^{\circ} = \frac{\lambda}{8} = 45^{\circ}$$

From Table VI

 $F(\beta) = 2A \sin (45^{\circ} \cos \beta)$

 $F(\theta) = 2A \sin (45^{\circ} \cos \theta)$

From Table III for horizontal half-wave dipole

Vertical pattern A = K(1)

Horizontal pattern
$$A = K \frac{\cos\left(\frac{\pi}{2}\sin\theta\right)}{\cos\theta}$$

Total radiation patterns are

Vertical: $F(\beta) = K \sin (45^{\circ} \cos \beta)$

Horizontal:
$$F(\theta) = K \frac{\cos\left(\frac{\pi}{2}\sin\theta\right)}{\cos\theta} \sin(45^{\circ}\cos\theta)$$
.


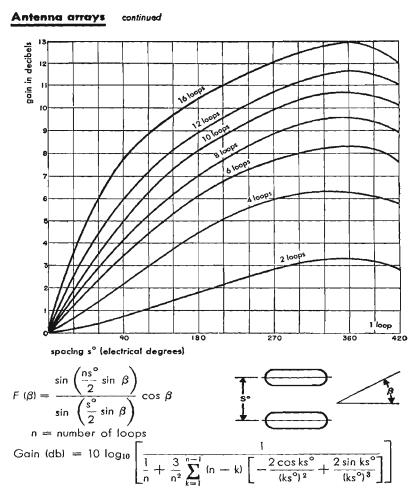


Fig. 9—Gain of linear array of loops vertically stacked.

Non-sinusoidal and modulated wave forms

Relaxation oscillators

Gas tube oscillator

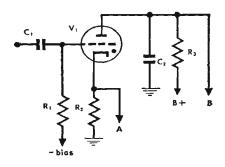

A = pulse outputB = sawtooth output

Typical circuit

 $V_1 = 884$

 $C_1 = 0.05 \, \mu f$

 $C_2 = 0.05 \, \mu f$

 $R_1 = 100,000 \text{ ohms}$


 $R_2 = 500 \text{ ohms}$

 $R_3 = 100,000 \text{ ohms}$

Frequency controlling elements

 C_2 , R_3

Feedback relaxation oscillator

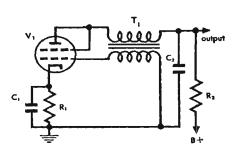

Typical circuit

 $V_1 = 6F6$

 $T_1 = 3.1$ audio transformer

0.3 henry primary

 $R_1 = 100,000 \text{ ohms}$

 $R_2 = 5000 \text{ ohms}$


 $C_1 = 1 \mu f$

 $C_2 = 0.1 \, \mu f$

frequency controlling elements

C2, R2

Blocking oscillator

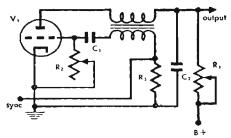

Typical circuit

 $V_1 = 6J5$

 $C_1 = 0.01 \, \mu f$

 $C_2 = 0.25 \, \mu f$

 $R_1 = 1 \text{ megohm}$

 $R_2 = 1 \text{ megohm}$

 $R_3 = 1000 \text{ ohms}$


Frequency controlling elements

 R_1 , C_2 , R_2

Relaxation oscillators

continued

Squegging oscillator

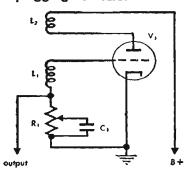


Typical circuit

$$V_1 = 6J5$$
 L_1
 L_2 tightly coupled $R_1 = 500,000$ ohms $C_1 = 0.01 \mu f$

Frequency controlling elements R_1 , C_1

Multivibrator

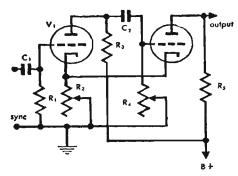


Typical circuit

 $V_1 = 6F8$ $R_1 = 100,000 \text{ ohms}$ $R_2 = 1000 \text{ ohms}$ $R_3 = 25,000 \text{ ohms}$ $R_4 = 250,000 \text{ ohms}$ $R_5 = 25,000 \text{ ohms}$ $C_1 = 0.01 \, \mu f$ $C_2 = 250 \, \mu \mu f$

Frequency controlling elements R_L, R₂, R₄, C₂

van der Pol oscillator

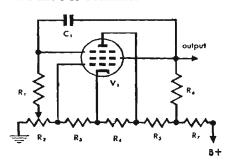


Typical circuit

 $V_1 = 6SJ7$ $R_1 = 100,000 \text{ ohms}$ $R_2 = 500 \text{ ohms}$ $R_3 = 100 \text{ ohms}$ $R_4 = 3,000 \text{ ohms}$ $R_5 = 10,000 \text{ ohms}$ $R_6 = 25,000 \text{ ohms}$ $R_7 = 25,000 \text{ ohms}$

Frequency controlling elements

 R_1 , R_6 , C_1 , (also B+1)

Electronic integration methods



type	basic method	design formula	typical circuit
f Seif- induct- ance	R E E constant voltage source	E ≃ ^R VT	
li Mutuai induct- ance	constant voltage source	$E = \frac{R}{M} VT$	
iii RC method	C T E Constant voltage source	E = VT RC	R R B+

NON-SINUSOIDAL AND MODULATED WAVE FORMS 275

Electronic integration methods continued

type	basic method	design formula	typical circuit
IV Capaci- tance	constant current source	E = C	discharge device E

Methods I and II

a. Voltage V must be obtained from a low-impedance source.

b.
$$\frac{L}{R} > > T$$
 or $\frac{M}{R} > > T$

- c. The output E should not react back on the input voltage V.
- **d.** The impedance into which the integrator circuit works should be large compared with R. If this impedance is resistive, it should be included as part of R (this also applies to the input source impedance).

Method III


- a. Voltage V must be obtained from a low-impedance source.
- b. RC > T
- c. The output E should not react back on the input voltage V.
- d. The impedance into which the integrator circuit works should be as large as possible. If this impedance is resistive r then

The source impedance should be included in R.

Method IV

- f a. Current I should be a replica of the input voltage wave-form V.
- **b.** The discharge device allows for integration between limits. If discharge device is not used, the circuit will integrate until E equals the B+ voltage.
- c. The impedance into which the integrator circuit works should be as large as possible. If this impedance is resistive r then rC >> T.

Electronic differentiation methods



1 or V is the change of current or voltage in time T

type	basic method	design formula	typical circuit
l Self- induct- ance	constant current source	E = <u>L</u>	
II Mutual induct- ance	constant current source	$E = \frac{MI}{T}$	
III RC method	R E	$E = \frac{VRC}{T} \left(1 - e^{-\frac{t}{RC}} \right)$	C R B+

continued

Electronic differentiation methods

Methods I and II


- a. Current I should be a replica of the input voltage wave-form V.
- b. The voltage V must be substantially independent of the back emf developed by the inductance L.
- c. The output shunt impedance placed across E should be high compared to the network impedance.
- d. The resonant period associated with the inductance caused by shunting circuit capacitances should be at least one-third the build-up time T.

Method III

- a. Voltage V must be obtained from a low-impedance source.
- b. The RC product should be one-fiftieth of the build-up time T or smaller.
- c. The output voltage E should not react back on the input voltage V.
- d. The impedance into which the differentiator circuit works should be large compared with R. If this impedance is resistive, it should be included as part of R. (This also applies to the input source impedance.)

Fourier analysis of recurrent wave forms

General formulas



$$F(\theta) = \frac{B_0}{2} + A_1 \sin \theta + A_2 \sin 2\theta + \dots + A_n \sin n \theta$$

$$+ B_1 \cos \theta + B_2 \cos 2\theta + \dots + B_n \cos n \theta$$
(1)

Formula (1) may be written

$$F(\theta) = \frac{B_0}{2} + C_1 \cos (\theta - \phi_1) + C_2 \cos (2\theta - \phi_2) + \dots$$

$$+ C_n \cos (n \theta - \phi_n)$$
(2)

where

$$C_n = \sqrt{A_n^2 + B_n^2} \tag{3}$$

$$\phi_n = \arctan \frac{A_n}{B_n} \tag{4}$$

Fourier analysis of recurrent wave forms continued

The coefficients A_n and B_n are determined by the following formulas:

$$A_n = \frac{1}{\pi} \int_{-\pi}^{\pi} F(\theta) \sin n \, \theta \, d\theta$$
 (5)

$$B_n = \frac{1}{\pi} \int_{-\pi}^{\pi} F(\theta) \cos n \, \theta \, d\theta \tag{6}$$

By a change of limits equations (5) and (6) may also be written

$$A_n = \frac{1}{\pi} \int_0^{2\pi} F(\theta) \sin n \, \theta \, d\theta \tag{7}$$

$$B_n = \frac{1}{\pi} \int_0^{2\pi} F(\theta) \cos n \, \theta \, d\theta \tag{8}$$

If the function $F(\theta)$ is an odd function, that is

$$F(\theta) = -F(-\theta) \tag{9}$$

the coefficients of all the cosine terms (B_n) of equation (6) become equal to zero.

Similarly if the function $F(\theta)$ is an even function, that is

$$F(\theta) = F(-\theta) \tag{10}$$

the coefficients of all the sine terms (A_n) of equation (5) become equal to zero.


If the function to be analyzed is thus a symmetrical function defined by either equation (9) or (10) the function should be disposed about the zero axis and an analysis obtained by means of equations (5) or (6) for the simplest solution.

Fourier analysis of recurrent wave forms continued

Graphical solution

If the function to be analyzed is not known analytically, a solution of the Fourier integral may be approximated by graphical means.

The period of the function is divided into a number of ordinates as indicated by the graph.

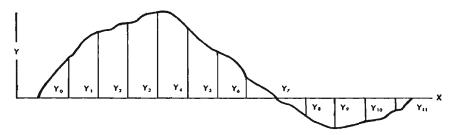

The values of these ordinates are recorded and the following computations made:

	Y ₀	Y ₁ Y ₁₁	Y_2 Y_{10}	-	-	-	Y ₆
Sum Difference	So	S ₁	S ₂	S ₃	S ₄	S ₆	S ₆

The sum terms are arranged as follows:

The difference terms are as follows:

Fourier analysis of recurrent wave forms continued

The coefficients of the Fourier series are now obtained as follows, where A_0 equals the average value, the $B_1 \ldots_n$ expressions represent the coefficients of the cosine terms, and the $A_1 \ldots_n$ expressions represent the coefficients of the sine terms:

$$B_0 = \frac{\overline{S_7} + \overline{S_8}}{12} \tag{16}$$

$$\beta_{L} = \frac{\overline{D_0} + 0.866 \, \overline{D_1} + 0.5 \, \overline{D_2}}{4} \tag{17}$$

$$\beta_2 = \frac{\overline{S_0} + 0.5 \, \overline{S_1} - 0.5 \, \overline{S_2} - \overline{S_3}}{6} \tag{18}$$

$$B_3 = \frac{\overline{D_6}}{6} \tag{19}$$

$$B_4 = \frac{\overline{S_0} - 0.5 \, \overline{S_1} - 0.5 \, \overline{S_2} + \overline{S_3}}{6} \tag{20}$$

$$B_5 = \frac{\overline{D_0} - 0.866 \,\overline{D_1} + 0.5 \,\overline{D_2}}{6} \tag{21}$$

$$B_8 = \frac{\overline{S_7} - \overline{S_8}}{12} \tag{22}$$

also

$$A_1 = \frac{0.5 \,\overline{S_4} + 0.866 \,\overline{S_5} + \overline{S_6}}{6} \tag{23}$$

$$A_2 = \frac{0.866 \ (\overline{D_3} + \overline{D_4})}{6} \tag{24}$$


$$A_3 = \frac{\overline{D_5}}{6} \tag{25}$$

$$A_4 = \frac{0.866 (D_3 - D_4)}{6} \tag{26}$$

$$A_6 = \frac{0.5 \, \overline{S_4} - 0.866 \, \overline{S_5} + \overline{S_6}}{6} \tag{27}$$

Analyses of commonly encountered wave forms

The following analyses include the coefficients of the Fourier series for all harmonics (nth order). By the use of the graph for the $\left(\frac{\sin x}{x}\right)$ function, where f(x) is even, the amplitude coefficients may be evaluated in a simple manner.

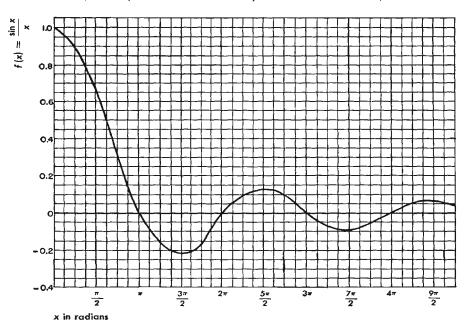

The symbols used are defined as follows:

A = pulse amplitude

T = periodicity

d = pulse width

f = pulse build-up time

r = pulse decay time

n = order of harmonic


 C_n = amplitude of n^{th} harmonic θ_n = phase angle of n^{th} harmonic

 A_{av} = average value of function = $\frac{1}{T}\int_{x}^{\infty} F(t) dt$

 $A_{rms} = \text{root-mean square value of function} = \sqrt{\frac{1}{T}} [F(t)]^2 dt$

Analyses of commonly encountered wave forms continued

1. Rectangular wave

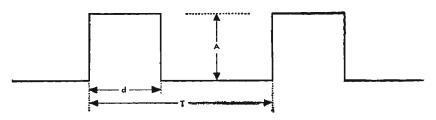


$$A_{av} = \frac{Ad}{T}$$

$$A_{rms} = A \sqrt{\frac{d}{T}}$$

$$C_n = 2 A_{av} \left[\frac{\sin \frac{n \pi d}{T}}{\frac{n \pi d}{T}} \right]$$

2. Symmetrical trapezoid wave

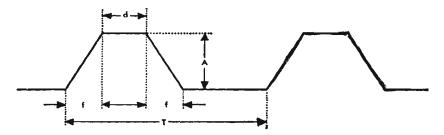

$$A_{a*} = A \frac{(f+d)}{T}$$


$$A_{rms} = A \sqrt{\frac{2f + 3d}{3T}}$$

$$C_n = 2 A_{av} \begin{bmatrix} \sin \frac{n \pi f}{T} \\ \frac{n \pi f}{T} \end{bmatrix} \begin{bmatrix} \sin \frac{n \pi (f + d)}{T} \\ \frac{n \pi (f + d)}{T} \end{bmatrix}$$

$$\frac{\sin \frac{n \pi (f+d)}{T}}{\frac{n \pi (f+d)}{T}}$$

Analyses of commonly encountered wave forms continued

3. Unsymmetrical trapezoid wave

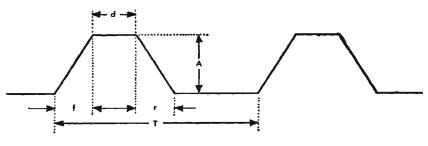

$$A_{av} = \frac{A}{T} \left[\frac{f}{2} + \frac{r}{2} + d \right]$$

$$A_{rms} = A \sqrt{\frac{f+r+3d}{3T}}$$


If $f \cong r$

$$C_{n} = 2 A_{\alpha v} \begin{bmatrix} \sin \frac{n \pi f}{T} \\ \frac{n \pi f}{T} \end{bmatrix} \begin{bmatrix} \sin \frac{n \pi (f + d)}{T} \\ \frac{n \pi (f + d)}{T} \end{bmatrix} \begin{bmatrix} \sin \frac{n \pi (r - f)}{T} \\ \frac{n \pi (r - f)}{T} \end{bmatrix}$$

$$\frac{\sin \frac{n \pi (f+d)}{T}}{\frac{n \pi (f+d)}{T}}$$

$$\frac{\sin \frac{n \pi (r-f)}{T}}{n \pi (r-f)}$$

4. Isosceles triangle wave




$$A_{av} = \frac{Af}{T}$$

$$A_{rms} = A \sqrt{\frac{2f}{3T}}$$

$$C_n = 2 A_{av} \left[\frac{\sin \frac{n \pi f}{T}}{\frac{n \pi f}{T}} \right]^2$$

Analyses of commonly encountered wave forms continued

5. Clipped sawtooth wave



$$A_{av} = \frac{Ad}{2T}$$


$$A_{rms} = A \sqrt{\frac{d}{3T}}$$

$$C_n = \frac{AT}{2 \pi^2 n^2 d} \left[2 \left(1 - \cos \frac{2 \pi n d}{T} \right) + \frac{4 \pi n d}{T} \left(\frac{\pi n d}{T} - \sin \frac{2 \pi n d}{T} \right) \right]^{\frac{1}{2}}$$

If d is small

$$C_n = \frac{2 A_{av}}{\frac{\pi \, nd}{T}} \left[\frac{\sin \frac{\pi \, nd}{T}}{\frac{\pi \, nd}{T}} - 1 \right]$$

6. Sawtooth wave

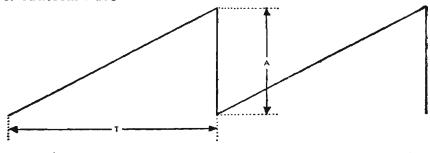

$$A_{av} = \frac{A}{2}$$


$$A_{rme} = \frac{A}{\sqrt{3}}$$

$$C_n = -\frac{2A_{av}}{n\pi}\cos(n\pi)$$

NON-SINUSOIDAL AND MODULATED WAVE FORMS 205

Analyses of commonly encountered wave forms continued

7. Sawtooth wave




$$A_{av} = \frac{A}{2}$$

$$A_{rms} = \frac{A}{\sqrt{3}}$$

$$C_n = \frac{2 A_{av} T}{\pi^2 n^2 f \left(1 - \frac{f}{T}\right)} \sin \frac{\pi f}{T}$$

8. Fractional sine-wave



$$A_{av} = \frac{A\left(\sin\frac{\pi d}{T} - \frac{\pi d}{T}\cos\frac{\pi d}{T}\right)}{\pi\left(1 - \cos\frac{\pi d}{T}\right)}$$


$$A_{rms} =$$

$$\frac{A}{\left(1-\cos\frac{\pi d}{T}\right)}\left[\frac{1}{2\pi}\left(\frac{\pi d}{T}+\frac{1}{2}\sin\frac{2\pi d}{T}-4\cos\frac{\pi d}{T}\sin\frac{\pi d}{T}+\frac{2\pi d}{T}\cos^2\frac{\pi d}{T}\right)\right]^{\frac{1}{2}}$$


$$C_n = \frac{A_{av} \frac{\pi d}{T}}{n \left(\sin \frac{\pi d}{T} - \frac{\pi d}{T} \cos \frac{\pi d}{T} \right)} \left[\frac{\sin (n-1) \frac{\pi d}{T}}{(n-1) \frac{\pi d}{T}} - \frac{\sin (n+1) \frac{\pi d}{T}}{(n+1) \frac{\pi d}{T}} \right]$$

Analyses of commonly encountered wave forms continued

9. Half sine-wave

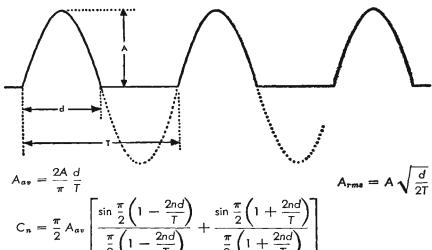


10. Full sine-wave

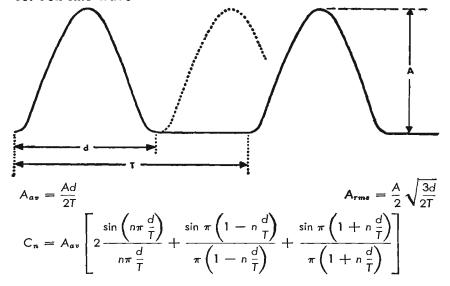


NON-SINUSOIDAL AND MODULATED WAVE FORMS 287

Analyses of commonly encountered wave forms continued

11. Critically damped exponential wave

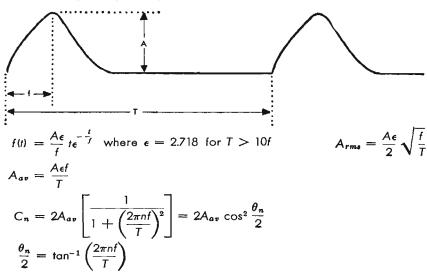

12. Full-wave rectifled sine-wave

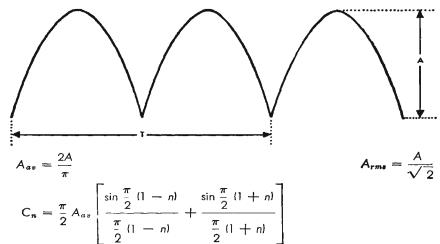

Modulated wave forms

Starting from a carrier $i = A \sin\theta$ modulated waveforms are obtained when either or both A and θ are functions of time.

1. Amplitude modulation

 $\theta = \omega t + \phi \omega$ where and ϕ are constants

$$A = A_0[1 + m_a f(t)]$$

$$i = A_0[1 + m_\alpha f(t)] \sin (\omega t + \phi)$$

where f(t) is a continuous function of time representing the signal and $|f(t)| \leq 1$. Then m_a is the degree of amplitude modulation; $0 \leq m_a \leq 1$ Generally the frequency spectrum of f(t) will be limited up to a value $\alpha << \omega$ and the total frequency spectrum will comprise:

the carrier ω

the lower side band from ω to $\omega - \alpha$ the upper side band from ω to $\omega + \alpha$

For correct transmission of intelligence it is sufficient to transmit one of the side bands only.

For a sinusoidal signal $f(t)=\cos pt$ where p= angular frequency of the signal; $i=A_0\bigg\{\sin \omega t+\frac{m_a}{2}\left[\sin (\omega+p)t+\sin (\omega-p)t\right]\bigg\}$

2. Frequency modulation

wherein A is constant

$$\omega_t = \frac{d\theta}{dt} = \omega[1 + mf(t)]$$

 $\omega=2\pi$ \times mean carrier frequency (a constant), $\omega_t=2\pi$ \times instantaneous frequency, m= degree of frequency modulation, $\Delta\omega=m\omega=2\pi$ \times frequency swing, f(t) is the signal to be transmitted; $|f(t)| \leq 1$.

Even when the frequency spectrum of f(t) extends only up to $\alpha < < \omega$ the resulting frequency spectrum of the modulated wave is complex, depending on the relative values of α and m. Generally $\Delta \omega \ge \alpha$ and the spectrum is composed of groups of upper and lower side bands even when f(t) is a sinusoidal function of time.

For a sinusoidal signal $f(t) = \cos pt$

$$\omega_t = \omega[1 + m \cos pt]$$

$$\theta = \omega t + \frac{\Delta \omega}{\rho} \sin \rho t$$


$$m_f = \frac{\Delta \omega}{p} = ext{frequency modulation index (radians)}$$

Modulated wave forms continued

In this case the carrier and side bands include a number of components at frequencies $(\omega \pm np)/2\pi$ where n=0 or a positive integer.

$$\frac{i}{A_0} = \sin (\omega t + m_f \sin pt)
= J_0(m_f) \sin \omega t
+ J_1(m_f)[\sin (\omega + p)t - \sin (\omega - p)t]
+ J_2(m_f)[\sin (\omega + 2p)t + \sin (\omega - 2p)t]
+ ...
+ J_n(m_f)[\sin (\omega + np)t + (-1)^n \sin (\omega - np)t]
= J_0(m_f) \sin \omega t + 2J_1 (m_f) \sin pt \cos \omega t
+ 2J_2(m_f) \cos 2pt \sin \omega t + ...
+ (-1)^n 2J_n(m_f) \cos \left(npt + n\frac{\pi}{2}\right) \sin \left(\omega t + n\frac{\pi}{2}\right)$$

Where J_n (m_f) is the Bessel function of the first kind and n^{th} order. An expansion of J_n (m_f) in a series is given on page 299 and tables of Bessel functions on pages 319 to 322.



Amplitude of carrier and side bands for $m_{\rm f}=10$. The carrier amplitude is 0.246 ${
m A}_{
m 0}$ and is represented by the heavy line in the center. The separation between each two adjacent components = signal frequency f.

a. For small values of m up to about 0.2

$$i = A_0 \left\{ \sin \omega t + \frac{m_f}{2} \left[\sin(\omega + \rho)t - \sin(\omega - \rho)t \right] \right\}$$

= A_0 (sin $\omega t + m_f \sin \rho t \cos \omega t$)

Compare with amplitude modulation above.

b. The carrier amplitude varies with m_{ℓ} as does also that of each pair of side bands.

5.52 Carrier vanishes for $m_f = 2.40$ 8.65 14.93 etc. First side band vanishes for $m_f = 3.83$ 7.02 10.17 13.32 etc.

This property of vanishing components is used frequently in the measurement of mr.

Modulated wave forms continued

c. The approximate number of important side bands and the corresponding band width necessary for transmission are as follows (where $f=p/2\pi$ and $\Delta F=\Delta\omega/2\pi$):

mf		10	20
signal frequency f	0.2∆ F	0.1ΔF	0.05△F
number of pairs of side bands	7	13	23
band width	14f 2.8∆F	26f 2.6ΔF	46f 2.3AF

This table is based on neglecting side bands in the outer regions where all amplitudes are less than $0.02\ A_0$. The amplitude below which the side bands are neglected, and the resultant band width, will depend on the particular application and the quality of transmission desired.

3. Pulse modulation

Pulse modulation is obtained when A or $\frac{d\theta}{dt}$ are keyed periodically. Then f(t) is generally a pulsing waveform of the type previously described. See 4, page 283 (with f < < T).


In pulse modulation generally f(t) has no simple relation to the signal to be transmitted. Various forms of pulse modulation have been described:

- f a. Pulse-time modulation: The timing of the pulse f(t) relative to a reference pulse is varied around a fixed mean value and conforms to the amplitude of the signal to be transmitted.
- **b.** Pulse-width modulation: The duration of the pulse *f(t)* is varied around a fixed mean value and conforms to the amplitude of the signal to be transmitted.
- **c.** Pulse-frequency modulation: The repetition rate of the pulse *f(t)* is varied around a fixed mean value and conforms to the amplitude of the signal to be transmitted.

■ Mathematical formulas

Mensuration formulas

Areas of plane figures	
figure	formula
Parallelogram h	Area = bh
Trapezoid	$Area = \frac{1}{2}h(a + b)$
Triangle	Area = ½bh
Regular polygons	$Area = nr^2 \tan \frac{180^{\circ}}{n}$



Area =
$$nr^2 \tan \frac{180^{\circ}}{n}$$

= $\frac{n}{4} S^2 \cot \frac{180^{\circ}}{n}$
= $\frac{n}{2} R^2 \sin \frac{360^{\circ}}{n}$
 $n = \text{number of sides}$
 $r = \text{short radius}$
 $S = \text{length of one side}$
 $R = \text{long radius}$


Mensuration formulas

continued

Areas of plane figures

figure	formula
Circle	Area = πr^2 r = radius π = 3.141593
Segment of circle	Area = $\frac{1}{2}[br - c(r - h)]$ b = length of arc c = length of chord = $\sqrt{4(2hr - h^2)}$
Sector of circle	Area = $\frac{br}{2} = \pi r^2 \frac{\theta}{360^{\circ}}$
Parabola	Area == $\frac{2}{3}bh$






Area =
$$\pi ab$$

Mensuration formulas

continued

Area of irregular plane surface

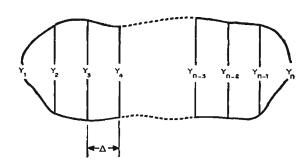

Trapezoidal rule:

Area =
$$\Delta \left(\frac{y_1}{2} + y_2 + y_3 + \ldots + y_{n-2} + y_{n-1} + \frac{y_n}{2} \right)$$

Simpson's rule:

n must be odd

Area =
$$\frac{\Delta}{3}$$
(y₁ + 4y₂ + 2y₃ + 4y₄ + 2y₅ + ... + 2y_{n-2} + 4y_{n-1} + y_n)
y₁, y₂, y₃ ... y_n are measured lengths of a series of equidistant parallel chords

Volumes and surface areas

Sphere: Surface
$$= 4\pi r^2$$

Volume =
$$\frac{4\pi r^3}{3}$$

r = radius of sphere

Cylinder: Cylindrical portion of surface = $2\pi rh$

Volume = $\pi r^2 h$

r = radius of cylinder

h = height of cylinder

Pyramid or cone: Volume = Area of base $\times \frac{1}{3}$ of height

Formulas for complex quantities

$$(A + jB) (C + jD) = (AC - BD) + j (BC + AD)$$

$$\frac{A + jB}{C + jD} = \frac{AC + BD}{C^2 + D^2} + j \frac{BC - AD}{C^2 + D^2}$$

$$\frac{1}{A + jB} = \frac{A}{A^2 + B^2} - j \frac{B}{A^2 + B^2}$$

$$A + jB = \rho(\cos \theta + j \sin \theta)$$

$$\sqrt{A + jB} = \pm \sqrt{\rho} \left(\cos \frac{\theta}{2} + j \sin \frac{\theta}{2}\right)$$
where $\rho = \sqrt{A^2 + B^2}$; $\cos \theta = \frac{A}{\rho}$

$$\sin \theta = \frac{B}{\rho}$$

$$e^{j\theta} = \cos \theta + j \sin \theta$$

$$e^{-j\theta} = \cos \theta - j \sin \theta$$

Algebraic and trigonometric formulas

$$1 = \sin^2 A + \cos^2 A = \sin A \operatorname{cosec} A = \tan A \operatorname{cot} A = \cos A \operatorname{sec} A$$

$$\sin A = \frac{\cos A}{\cot A} = \frac{1}{\operatorname{cosec} A} = \cos A \tan A = \sqrt{1 - \cos^2 A}$$

$$\cos A = \frac{\sin A}{\tan A} = \frac{1}{\sec A} = \sin A \cot A = \sqrt{1 - \sin^2 A}$$

$$\tan A = \frac{\sin A}{\cos A} = \frac{1}{\cot A} = \sin A \operatorname{sec} A$$

$$\cot A = \frac{1}{\tan A} \qquad \operatorname{sec} A = \frac{1}{\cos A}$$

$$\operatorname{cosec} A = \frac{1}{\sin A}$$

$$\sin (A \pm B) = \sin A \cos B \pm \cos A \sin B$$

$$\tan (A \pm B) = \frac{\tan A \pm \tan B}{1 + \tan A + \tan B}$$

continued

Algebraic and trigonometric formulas

$$cos (A \pm B) = cos A cos B = sin A sin B$$

$$\cot (A \pm B) = \frac{\cot A \cot B \mp 1}{\cot B \pm \cot A}$$

$$\sin A + \sin B = 2 \sin \frac{1}{2} (A + B) \cos \frac{1}{2} (A - B)$$

$$\sin^2 A - \sin^2 B = \sin (A + B) \sin (A - B)$$

$$\tan A = \tan B = \frac{\sin (A = B)}{\cos A \cos B}$$

$$\sin A - \sin B = 2 \cos \frac{1}{2} (A + B) \sin \frac{1}{2} (A - B)$$

$$\cos A + \cos B = 2 \cos \frac{1}{2} (A + B) \cos \frac{1}{2} (A - B)$$

$$\cot A = \cot B = \frac{\sin (B = A)}{\sin A \sin B}$$

$$\cos B - \cos A = 2 \sin \frac{1}{2} (A + B) \sin \frac{1}{2} (A - B)$$

$$\sin 2 A = 2 \sin A \cos A$$
 $\cos 2A = \cos^2 A - \sin^2 A$

$$\cos^2 A - \sin^2 B = \cos (A + B) \cos (A - B)$$

$$\tan 2A = \frac{2 \tan A}{1 - \tan^2 A}$$

$$\sin \frac{1}{2} A = \pm \sqrt{\frac{1 - \cos A}{2}}$$
 $\cos \frac{1}{2} A = \pm \sqrt{\frac{1 + \cos A}{2}}$

$$\tan \frac{1}{2} A = \frac{\sin A}{1 + \cos A}$$

$$\cos^2 A = \frac{1 + \cos 2A}{2}$$

$$\sin^2 A = \frac{1 - \cos 2A}{2}$$

$$\tan^2 A = \frac{1 - \cos 2A}{1 + \cos 2A}$$

$$\frac{\sin A \pm \sin B}{\cos A + \cos B} = \tan \frac{1}{2} (A \pm B)$$

$$\frac{\sin A + \sin B}{\cos B - \cos A} = \cot \frac{1}{2} (A + B)$$

$$\sin A \cos B = \frac{1}{2} \left[\sin (A + B) + \sin (A - B) \right]$$

$$\cos A \cos B = \frac{1}{2} [\cos (A + B) + \cos (A - B)]$$

$$\sin A \sin B = \frac{1}{2} \left[\cos (A - B) - \cos (A + B) \right]$$

Algebraic and trigonometric formulas continued

$$\sin x + \sin 2x + \sin 3x + \dots + \sin mx = \frac{\sin \frac{1}{2} mx \sin \frac{1}{2} (m + 1) x}{\sin \frac{1}{2} x}$$

$$\cos x + \cos 2x + \cos 3x + \dots + \cos mx = \frac{\sin \frac{1}{2} mx}{\sin \frac{1}{2} x} \frac{\cos \frac{1}{2} (m+1) x}{\sin \frac{1}{2} x}$$

$$\sin x + \sin 3x + \sin 5x + \dots + \sin (2m - 1) x = \frac{\sin^2 mx}{\sin x}$$

$$\cos x + \cos 3x + \cos 5x + \dots + \cos (2m - 1) x = \frac{\sin 2mx}{2 \sin x}$$

$$\frac{1}{2} + \cos x + \cos 2x + \dots + \cos mx = \frac{\sin (m + \frac{1}{2}) x}{2 \sin \frac{1}{2} x}$$

angle	Ī	0	30°	45°	60°	90°	180°	270°	360 [∟]
_				,_					
sin		0	1/2	$\frac{1}{2}\sqrt{2}$ $\frac{1}{2}\sqrt{2}$	½√3	ī	0	T — T	0
cos		1	1/ ₂ √3	1/2√2	1/2	0	<u> </u>	0	1
tan	l.	0	1/3√3	1	$\sqrt{3}$	±∞	l 0	l ±∞	lo

versine
$$\theta = 1 - \cos \theta$$

 $\sin 14\frac{1}{2}^{\circ} = \frac{1}{4}$ approximately
 $\sin 20^{\circ} = \frac{11}{32}$ approximately

Approximations for small angles

$$\sin \theta = (\theta - \theta^3/6...)$$
 θ in radians $\tan \theta = (\theta + \theta^3/3...)$ θ in radians

$$\cos \theta = (1 - \theta^2/2...)$$
 θ in radians

Quadratic equation

If
$$ax^2 + bx + c = 0$$
, then $x = \frac{-b \pm \sqrt{b^2 - 4 ac}}{2a}$

Arithmetical progression

$$S = n (a + 1) / 2 = n [2a + (n - 1) d] / 2$$

where S = sum, a = first term, I = last term, n = number of terms, d = common difference = the value of any term minus the value of the preceding term.

Geometrical progression

$$S = \frac{\alpha (r^n - 1)}{r - 1} = \frac{\alpha (1 - r^n)}{1 - r}$$

where S = sum, a = first term, n = number of terms, r = common ratio = the value of any term divided by the preceding term.

Combinations and permutations

The number of combinations of n things, all different, taken r at a time is

$$_{n}C_{r} = \frac{n!}{r! (n-r)!}$$

The number of permutations of n things r at a time = $_{n}P_{r}$

$$_{n}P_{r} = n (n - 1) (n - 2) \dots (n - r + 1) = \frac{n!}{(n - r)!}$$

 $_{n}P_{n} = n!$

Binomial theorem

$$a = b$$
)ⁿ = $a^n = na^{n-1}b + \frac{n(n-1)}{2!}a^{n-2}b^2 = \frac{n(n-1)(n-2)}{3!}a^{n-3}b^3 + \dots$

If n is a positive integer, the series is finite and contains n+1 terms; otherwise it is infinite, converging for $\left|\frac{b}{a}\right| < 1$ and diverging for $\left|\frac{b}{a}\right| > 1$.

Maclaurin's theorem

$$f(x) = f(0) + xf'(0) + \frac{x^2}{1 \cdot 2} f''(0) + \dots + \frac{x^h}{n!} f^n(0) + \dots$$

Taylor's theorem

$$f(x) = f(x_0) + f'(x_0) (x - x_0) + \frac{f''(x_0)}{2!} (x - x_0)^2 + \dots$$

$$f(x + h) = f(x) + f'(x) \cdot h + \frac{f''(x)}{2!} h^2 + \dots + \frac{f^n(x)}{n!} h^n + \dots$$

Trigonometric solution of triangles

Right-angled triangles (right angle at C)

$$\sin A = \cos B = \frac{\sigma}{c}$$

$$\tan A = \frac{a}{b}$$

$$B = 90^{\circ} - A$$

$$vers A = 1 - cos A = \frac{c - b}{c}$$

$$c = \sqrt{a^2 + b^2}$$

$$b = \sqrt{c^2 - a^2} = \sqrt{(c + a)(c - a)}$$


$$\text{Area} = \frac{ab}{2} = \frac{a}{2}\sqrt{c^2 - a^2} = \frac{a^2 \cot A}{2} = \frac{b^2 \tan A}{2} = \frac{c^2 \sin A \cos A}{2}$$

Oblique-angled triangles

$$\sin \frac{1}{2} A = \sqrt{\frac{(s-b)(s-c)}{bc}}$$

$$\cos \frac{1}{2} A = \sqrt{\frac{s (s - a)}{bc}}$$

where
$$s = \frac{a+b+c}{2}$$



$$\tan \frac{1}{2} A = \sqrt{\frac{(s-b)(s-c)}{s(s-a)}}$$
, similar values for angles B and C

Area =
$$\sqrt{s}$$
 (s - a) (s - b) (s - c) = $\frac{1}{2}$ ab sin C = $\frac{a^2 \sin B \sin C}{2 \sin A}$

$$c = \frac{a \sin C}{\sin A} = \frac{a \sin (A + B)}{\sin A} = \sqrt{a^2 + b^2 - 2 ab \cos C}$$

$$\tan A = \frac{a \sin C}{b - a \cos C}, \quad \tan \frac{1}{2} (A - B) = \frac{a - b}{a + b} \quad \cot \frac{1}{2} C$$

 $a^2 = b^2 + c^2 - 2bc \cos A$, similar expressions for other sides.

Complex hyperbolic and other functions

Properties of "e"

$$e = 1 + 1 + \frac{1}{2!} + \frac{1}{3!} + \dots = 2.71828$$

$$\frac{1}{e} = 0.3679$$

$$e^{x} = 1 + x + \frac{x^{2}}{2!} + \frac{x^{3}}{2!} + \dots$$

 $\log_{10} e = 0.43429$; $\log_{e} 10 = 2.30259$ $\log_e N = \log_e 10 \times \log_{10} N$; $\log_{10} N = \log_{10} e \times \log_e N$.

$$\sin x = x - \frac{x^3}{3!} + \frac{x^5}{5!} - \frac{x^7}{7!} + \dots$$

$$\cos x = 1 - \frac{x^2}{2!} + \frac{x^4}{4!} - \frac{x^6}{6!} + \dots$$

$$\sinh x = x + \frac{x^3}{3!} + \frac{x^5}{5!} + \frac{x^7}{7!} + \dots$$

$$\cosh x = 1 + \frac{x^2}{2!} + \frac{x^4}{4!} + \frac{x^6}{6!} + \dots$$

x is in radians. The series are con-

For n = 0 or a positive integer, the expansion of the Bessel function of the first kind, nin order, is given by the convergent series

$$J_{n}(x) = \frac{x^{n}}{2^{n}n!} \left[1 - \frac{x^{2}}{2(2n+2)} + \frac{x^{4}}{2 \cdot 4(2n+2)(2n+4)} - \frac{x^{6}}{2 \cdot 4 \cdot 6(2n+2)(2n+4)(2n+6)} + \dots \right]$$
and $J_{-n}(x) = (-1)^{n} J_{n}(x)$ Note: $0! = 1$

$$\sin x = \frac{e^{fx} - e^{-fx}}{2j} \qquad e^{fx} = \cos x + j \sin x$$

$$e^{-fx} = \cos x - j \sin x$$

$$f = \sqrt{-1}$$

$$\cos x = \frac{e^{fx} + e^{-fx}}{2} \qquad \sinh (-x) = -\sinh x; \cosh (-x) = \cosh x$$

$$\sinh x = \frac{e^{x} - e^{-x}}{2} \qquad \sinh x = i \sin x; \cosh x = \cos x$$

$$\cosh x = \frac{e^{x} + e^{-x}}{2} \qquad \sinh x \cos x + \sinh^{2}x$$

$$\cosh x = \frac{e^{x} + e^{-x}}{2} \qquad \sinh (x \pm j y) = \sinh x \cos y \pm j \cosh x \sin y$$

$$\cosh x = \frac{e^{x} + e^{-x}}{2} \qquad \sinh (x \pm j y) = \cosh x \cos y \pm j \sinh x \sin y$$

Table of integrals

Indefinite integrals

In the following formulas, a, b, and m are constants. The constant of integration is not shown, but is added to each result.

$$\int dx = x$$

$$\int af(x) dx = a \int f(x) dx$$

$$\int (u + v - s) dx = \int udx + \int vdx - \int sdx$$

$$\int x^m dx = \frac{x^{m+1}}{m+1} \qquad m \neq -1$$

$$\int \frac{dx}{x} = \log_e x$$

$$\int (ax + b)^m dx = \frac{(ax + b)^{m+1}}{a(m+1)} \qquad m \neq -1$$

$$\int \frac{dx}{ax + b} = \frac{1}{a} \log_e (ax + b)$$

$$\int \frac{xdx}{ax + b} = \frac{1}{a^2} [ax + b - b \log_e (ax + b)]$$

$$\int \frac{xdx}{(ax + b)^2} = \frac{1}{a^2} \left[\frac{b}{ax + b} + \log_e (ax + b) \right]$$

$$\int \frac{x^2 dx}{ax + b} = \frac{1}{a^3} \left[\frac{(ax + b)^2}{2} - 2b(ax + b) + b^2 \log_e (ax + b) \right]$$

$$\int \frac{dx}{x^2 + a^2} = \frac{1}{a} \tan^{-1} \frac{x}{a}$$

$$\int \frac{dx}{\sqrt{a^2 - x^2}} = \sin^{-1} \frac{x}{a}$$

$$\int \log_a x dx = x \log_a \frac{x}{e} \text{ where } e = 2.718$$

$$\int a^x dx = \frac{a^x}{\log_a a}$$

Table of integrals continued

$$\int x^{m} e^{x} dx = e^{x} (x - 1)$$

$$\int x^{m} e^{x} dx = x^{m} e^{x} - m \int x^{m-1} e^{x} dx$$

$$\int \sin x dx = -\cos x$$

$$\int \sin^{2} x dx = \frac{1}{2} (x - \sin x \cos x)$$

$$\int \cos x dx = \sin x$$

$$\int \cos^{2} x dx = \frac{1}{2} (x + \sin x \cos x)$$

$$\int \tan x dx = -\log_{e} \cos x$$

$$\int \cot x dx = \log_{e} \sin x$$

$$\int \sec x dx = \log_{e} (\sec x + \tan x)$$

$$\int \sec^{2} x dx = \tan x$$

$$\int \csc^{2} x dx = -\cot x$$

$$\int \csc^{2} x dx = \log_{e} (\csc x - \cot x)$$

$$\int \sin^{-1} x dx = x \sin^{-1} x + \sqrt{1 - x^{2}}$$

$$\int \cos^{-1} x dx = x \cos^{-1} x - \sqrt{1 - x^{2}}$$

$$\int \tan^{-1} x dx = x \tan^{-1} x - \log_{e} \sqrt{1 + x^{2}}$$

Table of integrals continued

Definite integrals

$$\int_{0}^{\infty} x^{n-1} e^{-x} dx = \Gamma(n)^{*}$$

$$\int_{0}^{1} x^{m-1} (1-x)^{n-1} dx = \frac{\Gamma(m) \Gamma(n)^{*}}{\Gamma(m+n)}^{*}$$

$$\int_{0}^{\frac{\pi}{2}} \sin^{n} x dx = \int_{0}^{\frac{\pi}{2}} \cos^{n} x dx = \frac{1}{2} \sqrt{\pi} \frac{\Gamma\left(\frac{n+1}{2}\right)^{*}}{\Gamma\left(\frac{n+1}{2}\right)^{*}}, n > -1$$

$$\int_{0}^{\infty} \frac{\sin mx dx}{x} = \frac{\pi}{2} \text{ if } m > 0; 0 \text{ if } m = 0; -\frac{\pi}{2} \text{ if } m < 0$$

$$\int_{0}^{\infty} \frac{\cos mx dx}{1+x^{2}} = \frac{\pi}{2} e^{-|m|}$$

$$\int_{0}^{\infty} \frac{\cos x dx}{\sqrt{x}} = \int_{0}^{\infty} \frac{\sin x dx}{\sqrt{x}} = \sqrt{\frac{\pi}{2}}$$

$$\int_{0}^{\infty} e^{-\sigma^{2} x^{2}} dx = \frac{1}{2\sigma} \sqrt{\pi}$$

$$\int_{0}^{\frac{\pi}{2}} \cos^{2} \left(\frac{\pi}{2} \sin x\right) dx = 1.22$$

^{*} Values of Γ Inj are tabulated in Jahnke & Emde, Tables of Functions,

Exponentials $[e^n$ and $e^{-n}]$

■ Mathematical tables

	e ⁿ diff	n	e ⁿ diff	n]e ⁿ	<u> </u>	e ⁻ⁿ diff	l n	e-#	l n] e ⁻ⁿ
0.00 .01 .02 .03 .04	1.000 1.010 10 1.020 10 1.030 11 1.041	0.50 .51 .52 .53 .54	1.649 1.665 17 1.682 17 1.699 17 1.716	1.0 .1 .2 .3 .4	2.718* 3.004 3.320 3.669 4.055	0.00 .01 .02 .03 .04	1.000 — 10 0.990 — 10 .980 — 10 .970 — 9 .961 — 9	0.50 .51 .52 .53 .54	.607 .600 .595 .589 .583	1.0 .1 .2 .3 .4	.368* .333 .301 .273 .247
0.05 .06 .07 .08 .09	1.051 1.062 1.073 1.083 1.083 1.094	0.55 .56 .57 .58 .59	1.733 18 1.751 17 1.768 18 1.786 18 1.804 18	1.5 .6 .7 .8 .9	4.482 4.953 5.474 6.050 6.686	0.05 .06 .07 .08 .09	.951 — 9 .942 — 10 .932 — 9 .923 — 9 .914 — 9	0.55 .56 .57 .58 .59	.577 .571 .566 .560 .554	1.5 .6 .7 .8	.223 .202 .183 .165 .150
0.10 .11 .12 .13 .14	1.105 1.116 1.127 1.139 1.150 12	0.60 .61 .62 .63 .64	1.822 1.840 1.859 1.878 1.876 1.896 20	2.0 .1 .2 .3 .4	7.389 8.166 9.025 9.974 11.02	0.10 .11 .12 .13 .14	.905 — 9 .896 — 9 .887 — 9 .878 — 9 .869 — 8	0.60 .61 .62 .63 .64	.549 .543 .538 .533 .527	2.0 .1 .2 .3 .4	.135 .122 .111 .100 .0907
0.15 .16 .17 .18 .19	1.162 1.174 1.185 1.197 1.209 12	0.65 .66 .67 .68 .69	1.916 1.935 19 1.954 1.974 20 1.994 20	2.5 .6 .7 .8 .9	12.18 13.46 14.88 16.44 18.17	0.15 .16 .17 .18 .19	.861 — 9 .852 — 8 .844 — 9 .835 — 8 .827 — 8	0.65 .66 .67 .68 .69	.522 .517 .512 .507 .502	2.5 .6 .7 .8 .9	.0821 .0743 .0672 .0608 .0550
0.20 .21 .22 .23 .24	1.221 1.234 1.246 1.259 1.271 1.271 13	0.70 .71 .72 .73 .74	2.014 2.034 20 2.054 20 2.054 21 2.075 21 2.096 21	3.0 .1 .2 .3 .4	20.09 22.20 24.53 27.11 29,96	0.20 .21 .22 .23 .24	.819 8 .811 8 .803 8 .795 8 .787 8	0.70 .71 .72 .73 .74	.497 .492 .487 .482 .477	3.0 .1 .2 .3 .4	.0498 .0450 .0408 .0369 .0334
0.25 .26 .27 .28 .29	1.284 1.297 1.310 1.310 1.323 1.323 1.336 14	0.75 .76 .77 .78 .79	2.117 2.138 21 2.160 22 2.181 21 2.203 23	3.5 .6 .7 .8 .9	33.12 36.60 40.45 44.70 49.40	0.25 ,26 ,27 ,28 ,29	.779 — 8 .771 — 8 .763 — 7 .756 — 8 .748 — 7	0.75 .76 .77 .78 .79	.472 .468 .463 .458 .454	3.5 .6 .7 .8 .9	.0302 .0273 .0247 .0224 .0202
0.30 .31 .32 .33 .34	1.350 1.363 1.377 14 1.391 14 1.405	0.80 .81 .82 .83 .84	2.226 2.248 22 2.270 23 2.293 23 2.316 24	4.0 .1 .2 .3 .4	54.60 60.34 66.69 73.70 81.45	0.30 .31 .32 .33 .34	.741 — 8 .733 — 7 .726 — 7 .719 — 7 .712 — 7	0.80 .81 .82 .83 .84	.449 .445 .440 .436 .432	4.0 .1 .2 .3 .4	.0183 .0166 .0150 .0136 .0123
0.35 .36 .37 .38 .39	1.419 1.433 15 1.448 14 1.462 15 1.477	0.85 .86 .87 .88 .89	2.340 2.363 2.363 2.387 2.411 2.435 2.435 2.5	4.5 5.0 6.0 7.0	90.02 148.4 403.4 1097.	0.35 .36 .37 .38 .39	.705 — 7 .698 — 7 .691 — 7 .684 — 7 .677 — 7	0.85 .86 .87 .88 .89	.427 .423 .419 .415	4.5 5.0 6.0 7.0	.0111 .00674 .00248 .000912
0.40 .41 .42 .43 .44	1.492 1.507 1.507 1.522 1.537 1.537 1.553 1.553	0.90 .91 .92 .93 .94	2.460 2.484 24 2.509 26 2.535 25 2.560 26	8.0 9.0 10.0 π/2	2981. 8103. 22026. 4.810	0.40 .41 .42 .43 .44	.670 — 6 .664 — 7 .657 — 6 .651 — 7	0.90 .91 .92 .93 .94	.407 .403 .399 .395 .391	8.0 9.0 10.0 π/2	.000335 .000123 .000045
0.45 .46 .47 .48 .49	1.568 1.584 1.600 16 1.616 1.616 1.632 17	0.95 .96 .97 .98 .99	2.586 26 2.612 26 2.638 26 2.634 27 2.691 27	$2\pi/2$ $3\pi/2$ $4\pi/2$ $5\pi/2$ $6\pi/2$ $7\pi/2$ $8\pi/2$	23.14 111.3 535.5 2576. 12392. 59610. 286751.	0.45 .46 .47 .48 .49	.638 — 7 .631 — 6 .625 — 6 .619 — 6 .613 — 6	0.95 .96 .97 .98 .99	.387 .383 .379 .375 .372	$2\pi/2$ $3\pi/2$ $4\pi/2$ $5\pi/2$ $6\pi/2$ $7\pi/2$ $8\pi/2$.0432 .00878 .00187 .000388 .000081 .000017
0.50 * Note:	1.649	1.00	2.718	5 , 2	23, 01.	0.50	0.607	1.00	.368	54/2	

^{*} Note: Do not interpolate in this column. e = 2.71828 1/e = 0.367879 1/e = 0.4343 1/(0.4343) = 2.3026 (e) = 0.4343 (e) = 0.4343

Common logarithms of numbers and proportional parts

	١ .] ₁]	ا م	۔ ا	ا م ا	_	ا م ا		ا ہا	ا ہا	pro	proportional parts			
	0	<u>'</u>	2	3	4	5	6	7	8	9	123	4 5 6	7 8 9		
10	0000	0043	0086	0128	0170	0212	0253	0294	0334	0374	4 8 12	17 21 25	29 33 37		
11	0414	0453	0492	0531	0569	0607	0645	0682	0719	0755	4 8 11	15 19 23	26 30 34		
12	0792	0828	0864	0899	0934	0969	1004	1038	1072	1106	3 7 10	14 17 21	24 28 31		
13	1139	1173	1206	1239	1271	1303	1335	1367	1399	1430	3 6 10	13 16 19	23 26 29		
14	1461	1492	1523	1553	1584	1614	1644	1673	1703	1732	3 6 9	12 15 18	21 24 27		
15	1761	1790	1818	1847	1875	1903	1931	1959	1987	2014	3 6 8	11 14 17	20 22 25		
16	2041	2068	2095	2122	2148	2175	2201	2227	2253	2279	3 5 8	11 13 16	18 21 24		
17	2304	2330	2355	2380	2405	2430	2455	2480	2504	2529	2 5 7	10 12 15	17 20 22		
18	2553	2577	2601	2625	2648	2672	2695	2718	2742	2765	2 5 7	9 12 14	16 19 21		
19	2788	2810	2833	2856	2878	2900	2923	2945	2967	2989	2 4 7	9 11 13	16 18 20		
20	3010	3032	3054	3075	3096	3118	3139	3160	3181	3201	2 4 6	8 11 13	15 17 19		
21	3222	3243	3263	3284	3304	3324	3345	3365	3385	3404	2 4 6	8 10 12	14 16 18		
22	3424	3444	3464	3483	3502	3522	3541	3560	3579	3598	2 4 6	8 10 12	14 15 17		
23	3617	3636	3655	3674	3692	3711	3729	3747	3766	3784	2 4 6	7 9 11	13 15 17		
24	3802	3820	3838	3856	3874	3892	3909	3927	3945	3962	2 4 5	7 9 11	12 14 16		
25	3979	3997	4014	4031	4048	4065	4082	4099	4116	4133	2 3 5	7 9 10	12 14 15		
26	4150	4166	4183	4200	4216	4232	4249	4265	4281	4298	2 3 5	7 8 10	11 13 15		
27	4314	4330	4346	4362	4378	4393	4409	4425	4440	4456	2 3 5	6 8 9	11 13 14		
28	4472	4487	4502	4518	4533	4548	4564	4579	4594	4609	2 3 5	6 8 9	11 12 14		
29	4624	4639	4654	4669	4683	4698	4713	4728	4742	4757	1 3 4	6 7 9	10 12 13		
30	4771	4786	4800	4814	4829	4843	4857	4871	4886	4900	13 4	6 7 9	10 11 13		
31	4914	4928	4942	4955	4969	4983	4997	5011	5024	5038	13 4	6 7 8	10 11 12		
32	5051	5065	5079	5092	5105	5119	5132	5145	5159	5172	13 4	5 7 8	9 11 12		
33	5185	5198	5211	5224	5237	5250	5263	5276	5289	5302	13 4	5 6 8	9 10 12		
34	5315	5328	5340	5353	5366	5378	5391	5403	5416	5428	13 4	5 6 8	9 10 11		
35	5441	5453	5465	5478	5490	5502	5514	5527	5539	5551	1 2 4	5 6 7	9 10 11		
36	5563	5575	5587	5599	5611	5623	5635	5647	5658	5670	1 2 4	5 6 7	8 10 11		
37	5682	5694	5705	5717	5729	5740	5752	5763	5775	5786	1 2 3	5 6 7	8 9 10		
38	5798	5809	5821	5832	5843	5855	5866	5877	5888	5899	1 2 3	5 6 7	8 9 10		
39	5911	5922	5933	5944	5955	5966	5977	5988	5999	6010	1 2 3	4 6 7	8 9 10		
40	6021	6031	6042	6053	6064	6075	6085	6096	6107	6117	1 2 3	4 5 6	8 9 10		
41	6128	6138	6149	6160	6170	6180	6191	6201	6212	6222	1 2 3	4 5 6	7 8 9		
42	6232	6243	6253	6263	6274	6284	6294	6304	6314	6325	1 2 3	4 5 6	7 8 9		
43	6335	6345	6355	6365	6375	6385	6395	6405	6415	6425	1 2 3	4 5 6	7 8 9		
44	6435	6444	6454	6464	6474	6484	6493	6503	6513	6522	1 2 3	4 5 6	7 8 9		
45	6532	6542	6551	6561	6571	6580	6590	6599	6609	6618	1 2 3	4 5 6	7 8 9		
46	6628	6637	6646	6656	6665	6675	6684	6693	6702	6712	1 2 3	4 5 6	7 7 8		
47	6721	6730	6739	6749	6758	6767	6776	6785	6794	6803	1 2 3	4 5 5	6 7 8		
48	6812	6821	6830	6839	6848	6857	6866	6875	6884	6893	1 2 3	4 4 5	6 7 8		
49	6902	6911	6920	6928	6937	6946	6955	6964	6972	6981	1 2 3	4 4 5	6 7 8		
50	6990	6998	7007	7016	7024	7033	7042	7050	7059	7067	1 2 3	3 4 5	6 7 8		
51	7076	7084	7093	7101	7110	7118	7126	7135	7143	7152	1 2 3	3 4 5	6 7 8		
52	7160	7168	7177	7185	7193	7202	7210	7218	7226	7295	1 2 2	3 4 5	6 7 7		
53	7243	7251	7259	7267	7275	7284	7292	7300	7308	7316	1 2 2	3 4 5	6 6 7		
54	7324	7332	7340	7348	7356	7364	7372	7380	7388	7396	1 2 2	3 4 5	6 6 7		

MATHEMATICAL TABLES 305

Common logarithms of numbers and proportional parts continued

		,	2	3	4	5	6	7		• 1	pre	portio	naí p	arts		
				3	_	3			•		123	4 :	5 6	7	8	_9
55 56 57 58 59	7404 7482 7559 7634 7709	7412 7490 7566 7642 7716	7419 7497 7574 7649 7723	7427 7505 7582 7657 7731	7435 7513 7589 7664 7738	7443 7520 7597 7672 7745	7451 7528 7604 7679 7752	7459 7536 7612 7686 7760	7466 7543 7619 7694 7767	7474 7551 7627 7701 7774	1 2 2 1 2 2 1 2 2 1 1 2 1 1 2	3 3	4 5 4 5 4 5 4 4 4 4	5 5 5 5 5	6 6 6	7 7 7 7
60 61 62 63 64	7782 7853 7924 7993 8062	7789 7860 7931 8000 8069	7796 7868 7938 8007 8075	7803 7875 7945 8014 8082	7810 7882 7952 8021 8089	7818 7889 7959 8028 8096	7825 7896 7966 8035 8102	7832 7903 7973 8041 8109	7839 7910 7980 8048 8116	7846 7917 7987 8055 8122	1 1 2 1 1 2 1 1 2 1 1 2 1 1 2	3 3	4 4 4 4 3 4 3 4 3 4	5 5 5 5 5	6 6 5 5	6 6 6 6
65 66 67 68 69	8129 8195 8261 8325 8388	8136 8202 8267 8331 8395	8142 8209 8274 8338 8401	8149 8215 8280 8344 8407	8156 8222 8287 8351 8414	8162 8228 8293 8357 8420	8169 8235 8299 8363 8426	8176 8241 8306 8370 8432	8182 8248 8312 8376 8439	8189 8254 8319 8382 8445	1 1 2 1 1 2 1 1 2 1 1 2 1 1 2	3	3 4 3 4 3 4 3 4 3 4	5 5 4 4	5 5 5 5 5	6 6 6
70 71 72 73 74	8451 8513 8573 8633 8692	8457 8519 8579 8639 8698	8463 8525 8585 8645 8704	8470 8531 8591 8651 8710	8476 8537 8597 8657 8716	8482 8543 8603 8663 8722	8488 8549 8609 8669 8727	8494 8555 8615 8675 8733	8500 8561 8621 8681 8739	8506 8567 8627 8686 8745	1 1 2 1 1 2 1 1 2 1 1 2 1 1 2	2 2	3 4 3 4 3 4 3 4 3 4	4 4 4 4 4	5 5 5 5 5	5 5 5 5
75 76 77 78 79	8751 8808 8865 8921 8976	8756 8814 8871 8927 8982	8762 8820 8976 8932 8987	8768 8825 8882 8938 8993	8774 8831 8887 8943 8998	8779 8837 8893 8949 9004	878.5 8842 8899 8954 9009	8791 8848 8904 8960 9015	8797 8854 8910 8965 9020	8802 8859 8915 8971 9025	1 1 2 1 1 2 1 1 2 1 1 2 1 1 2	2	3 3 3 3 3 3 3 3	4 4 4 4	5 4 4 4	5 5 5 5
80 81 82 83 84	9031 9085 9138 9191 9243	9036 9090 9143 9196 9248	9042 9096 9149 9201 9253	9047 9101 9154 9206 9258	9053 9106 9159 9212 9263	9058 9112 9165 9217 9269	9063 9117 9170 9222 9274	9069 9122 9175 9227 9279	9074 9128 9180 9232 8284	9079 9133 9186 9238 9289	1 1 2 1 1 2 1 1 2 1 1 2 1 1 2	2 2 2	3 3 3 3 3 3 3 3	4 4 4	4 4 4 4 4	5 5 5 5
85 86 87 88 89	9294 9345 9395 9445 9494	9299 9350 9400 9450 9499	9304 9355 9405 9455 9504	9309 9360 9410 9460 9509	9315 9365 9415 9465 9513	9320 9370 9420 9469 9518	9325 9375 9425 9474 9523	9330 9380 9430 9479 9528	9335 9385 9435 9484 9533	9340 9390 9440 9489 9538	1 1 2 1 1 2 0 1 1 0 1 1	2 2 2 2 2 2	3 3 3 3 2 3 2 3 2 3	4 3 3 3	4 4 4 4 4	5 4 4 4
90 91 92 93 94	9542 9590 9638 9685 9731	9547 9595 9643 9689 9736	9552 9600 9647 9694 9741	9557 9605 9652 9699 9745	9562 9609 9657 9703 9750	9566 9614 9661 9708 9754	9571 9619 9666 9713 9759	9576 9624 9671 9717 9763	9581 9628 9675 9722 9768	9586 9633 9680 9727 9773	0 1 1 0 1 1 0 1 1 0 1 1	2 2 2 2 2 2 2	2 3 2 3 2 3 2 3 2 3	3 3 3	4 4 4 4 4	4 4 4 4
95 96 97 98 99	9777 9823 9868 9912 9956	9782 9827 9872 9872 9917 9961	9786 9832 9877 9921 9965	9791 9836 9881 9926 9969	9795 9841 9886 9930 9974	9800 9845 9890 9934 9978	9805 9850 9894 9939 9983	9809 9854 9899 9943 9987	9814 9859 9903 9948 9991	9818 9863 9908 9952 9996	0 1 1 0 1 1 0 1 1 0 1 1	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	2 3 2 3 2 3 2 3 2 3	3 3 3 3	4 4 4 3	4 4 4 4

306

Natural trigonometric functions

for decimal fractions of a degree

deg	sin	cos	tan	cot	1	deg	sin	COS	tan	tot	<u> </u>
9.0	00000	1.0000	.00000	ω	90.0	6.0	.10453	0.9945	.10510	9.514	84.0
.1	.00175	1.0000	.00175	573.0	.9	.1	.10626	9943	.10687	9.357	.9
.2	.00349	1.0000	.00349	286.5	.8 .7	.2	.10800	.9942	.10863	9.205	.8 .7
بج	.00524	1.0000	.00524	191.0	.7	.3	.10973	.9940 .9938	.11040	9.058 8.915	-/,
Ą	.00698	1.0000	.00698 .00873	143.24 114.59	.6 .5	.4	.11147	9936	.11394	8.777	.0
.4 .5 .6 .7	.01047	1.0000	.01047	95.49	.5	.5 .6	.11494	.9934	.11570	8.643	.6 .5 .4 .3 .2
	.01047	.9979	.01222	81.85	.4 .3 .2	.7	.11667	.9932	.11747	8.513	3
'A	.01326	9979	.01396	71.62	.3		.11340	.9930	.11924	8.386	.2
.8 .9	.01571	.9999	.01671	63.66	.1	.9	.12014	.9928	.12101	8.264	.ī
1.0	.01745	0.9998	.01746	57.29	89.0	7.0	.12187	0.9925	.12278	8,144	83.0
	.01920	.9998	.01920	52.08	.9	.1	.12360	.9923	.12456	8.028	.9
.2	.02094	.9998	.02095	47.74	.8 .7	.2	.12533	.9921	.12633	7.916	.8
.3	.02269	.9997	.02269	44.07	.7	.2 .3	.12706	.9919	.12810	7.806	.8 .7 .6 .5 .4 .3
A	.02443	9997	.02444	40.92	.6	.4	.12380	.9917	.12988	7.700	.6
-5	.02518	.9997	.02619	38.19	.5	.5	.13353	.9914	.13165	7.596	.5
کے۔	.02792	.9996	.02793	35.80	.4	.6 .7	.13226	.9912 .9910	.13343	7.495 7.396	.4
2	.02967	.9996	.02968	33.69	.3	./ .8	.10399 .135 72	.9907	.13698	7.300	
2 3 4 5 6 7 8 9	.03141	,999 5	.03317	31.82 30.14	.1	.8	.13744	.9905	.13876	7.207	.1
.9	.03316	2775	.03317	30.14		· '	.13/44		.13070		
2.0	.03490	0.9994	.03492	28.64	0.88	8.0	.13917	0.9903	.14054	7.115 7.026	82.0 .9
.1	.03664	.9993	.03667	27.27	.9	١. ١	.14090 .14263	.9898	.14232	6.940	.,
-2	.03939	.9993	.03842	26.03 24.90	.8 .7	.2 .3	.14436	.9895	.14588	6.855	
-2	.04013	.9991	.04191	23.86	.6	.4	.14608	.9893	.14767	6.772	.6
3	.04362	.9990	.04366	22.90	.5		.14781	.9890	.14945	6.691	.5
2 3 4 5 6 7 8 9	.04536	.9993	.04541	22.02	.4	.6 .7	.14954	,9888	.15124	6.612	.8 .7 .6 .5 .4 .3 .2
Ī	.04711	.9989	.04716	21.20	.3	.7	.15126	.9885	,15302	6.535	.3
.8	.04885	.9933	.04391	20.45	.2	.8 .9	.15279	.9882	.15481	6.460	.2
.9	.05059	.9987	.05066	19.74	.1	.9	.15471	.9880	.15660	6.386	.1
3.0	.05234	0.9936	.05241	19.081	87.0	9.0	.15643	0.9877	.15838	6.314	81.0 .9 .8 .7 .6 .5 .4 .3 .2
.1	.05408	.9735	.05416	18.464	.9	1 .1	.15316	.9874	.16017	6.243	.9
-2	.05502	.9984	.05591	17.836	.8	.2 .3	.15988	.9871	.16196	6.174 6.107	.9
-3	.05756	.9983	.05766	17.343 16.832	.7	.3	.16160	.9869 .9866	.16376	6.041	-/_
.4	.05931	.9982 .9981	.06116	16.350	.6 .5	.5	.16535	.9863	.16734	5.976	
~	.06279	.9980	.06291	15.895	.4	۵. ا	,16377	.9860	.16914	5.912	.4
?? ?.4 .5 &7 &	.06453	.9979	.06467	15.464	.3	.6 .7	17,349	.9857	.17093	5.850	.3
.8	.06627	.9978	.06642	15.056	.2	.8	.17021	.9854	.17273	5.789	.2
.9	.06802	.9977	.06817	14.669	.1	.9	.17193	.9851	.17453	5.730	.1
4.0	.06976	0.9976	.06993	14.301	86.0	10.0	.1736	0.9848	.1763	5.671	80.0
.1	.07150	.9974	.07168	13.951	.9	.1	.1754	.9845	.1781	5.614	.9 .8 .7 .6 .5 .4 .3 .2
.2	.07324	.9973	.07344	13.617	.8	.2	.1771	.9842	.1799	5.558	.8
2345678	.07498	.9972	.07519	13.300	.7	.3	.1788	.9839	.1817	5.503	-/,
4	.07672	.9971	.07695 .07870	12.996 12.706	.6 .5 .4 .3	.4 .5	.1305	.9836 .9833	.1835 .1853	5.449 5.396	.0
٠,	.07846 .08020	.9969 .9968	.08046	12.708	.5	1 .5	.1340	.9829	.1871	5.343	.3
-0.7	.08194	.9966	.08221	12.163	3	.6 .7	.1857	.9826	.1890	5.292	.3
8	.08368	.9965	.08397	11.909	.2	.8	.1874	.9823	.1908	5.242	.2
Ĩ	.08542	.9963	.08573	11.664	ı.ī	.9	.1891	.9820	.1926	5.193	.1
5.0	.08716	0.9962	.08749	11.430	85.0	11.0	.1908	0.9816	.1944	5.145	79.0
-1	08889	.9960	.08925	11.205	.9	1 .1	.1925	.9813	.1962	5.097	.9
2	.09063	.9959	.09101	10.988	.8	.2	.1942	.9810	.1980	5.050	.8
2 3 4 5 6 7	.09237	,9957	.09277	10.780	.7	.3	.1959	.9806	.1998	5.005	.7
A	.09411	.9956	.09453	10.579	.6	.4 .5	.1977	.9803	.2016	4.959	.6
-5	.09585	.9954	.09629	10.385	.5	.5	.1994	.9799	.2035	4.915 4.872	.5
<u>ئ</u>	.09758	.9952	.09805	10.199	.4	.6 .7	.2011 .2028	.9796 .9792	.2053 .2071	4.829	·*
	.09932	.9951 .9949	.09981 .10158	10.019 9.845	.3 .2	./ .8	.2026	.9789	.2089	4.787	.3
.9	.10279	.9947	.10334	9,677	.1	.9	.2062	.9785	.2107	4.745	79.0 .9 .8 .7 .6 .5 .4 .3 .2 .1
6.0	.10453	0.9945	.10510	9,514	84.0	12.0	.2079	0.9781	.2126	4.705	78.0
	COS	sin	cot	l tan	deg	<u> </u> 	COS	sin	cot	tan	deg

Natural trigonometric functions

for decimal fractions of a degree continued

deg deg sin cof 1 #In Ţ CO5 tan cot COS tan 0.2079 0.2126 18.0 0.3090 0.9511 0.3249 3.078 12.0 0.9781 4 70.5 78.0 .3107 .3123 .3140 3269 .2096 .2144 .9505 3 060 .9778 4.665 .9 .2 9500 .3288 3.042 .8 .7 .9774 4.625 8. .2 .3 9494 3.024 2130 4.586 .7 .9770 .2160 .9489 .3327 .3346 3.006 .6 .5 .4 .2147 .9767 .2199 4.548 4.511 ه. .4 .5 .3156 9483 2,989 .3173 .5 .2164 .9763 .2217 .5 .9478 .9472 .3365 2.971 2.954 .4 .6 .7 .2181 .9759 .2235 .2254 4.474 .4 .3 .6 .7 .3206 .3223 .2198 .9755 4.437 .2 9466 3404 2.937 .8 .2215 .9751 2272 4.402 .2 .8 .9 9461 3424 2.921 .3239 2233 9748 2290 4.366 .1 19.0 0.9455 1.0 0.3256 0.3443 2.904 13.0 0.2250 0.9744 0.2309 4.331 77.0 .2327 .2345 .2364 .3272 .3463 2.888 .9 .2267 .9740 4.297 ٠,9 .9449 .8 .7 9444 3482 2.872 .2 2284 .9736 4.264 .8 .2 .7 .з 9438 .3502 2.856 .2300 .9732 4.230 .3335 3522 2.840 2.824 9432 .4 .5 .2317 .9728 .2382 4.198 .6 .4 .3322 ه. .2334 9426 .3541 .9724 .2401 4.165 .5 .5 .3338 .5 .4 .3 .2 .1 .9421 2.808 .6 .7 .9720 .2419 4.134 .4 .6 .7 .3355 .3 .3371 9415 .3581 2.793 .2368 .9715 .2438 4.102 .8 .2385 .9711 ,2456 4.071 .8 .3387 9409 3600 2.778 3404 3620 2.762 .9 .2402 .9707 .2475 4.041. .1 .9 .9403 0.9397 0.3640 2,747 70.0 14.0 0.2419 0.9703 0.2493 4.011 76.0 20.0 0.3420 .2436 9699 .2512 3.981 .3437 .9391 .3659 2.733 2.718 .8 .2 3679 .8 .7 .2453 .9694 2530 3.952 .3453 .9385 .2470 9690 .2549 3.923 .3469 9379 .3699 2.703 2568 .4 2487 .9686 3.895 ه. .4 .3486 .9373 3719 2.689 .6 9367 .5 .2504 .9681 .2586 3.867 .5 .5 3502 3739 2.675 .5 .2521 .4 .2 .1 .6 .7 .6 .7 .9677 .2605 3.839 .3518 .9361 .3759 2.660 .4 .3 .2 .9673 .2623 3.812 .3535 9354 3779 2.646 3551 2.633 .8 .2554 .9668 .2642 3.785 .8 .9348 .3799 .9 .2571 .9664 2661 3.758 3567 9342 3819 2.619 69.0 15.0 0.2588 0.9659 0.2679 3.732 75.0 21.0 0.3584 0.9336 0.3839 2.605 .2605 .9655 .2698 3.706 .3600 .9330 .3859 2.592 .9 .2 2622 .9650 .2717 3.681 .8 .3616 .9323 .3879 2.578 .8 .2 .7 2639 .9646 .2736 3.655 .3633 .9317 .3899 2.565 .4 2656 .9641 .2754 3.630 .6 .4 .3649 .9311 3919 2.552 -6 .5 .2672 .9636 .2773 3.606 .5 .3665 .9304 .3939 2.539 .5 .9298 .9291 .6 .7 .2689 .9632 .2792 3.582 .4 .6 .3681 .3959 2.526 .4 .3 .2706 .9627 .2811 3.558 .3697 .3979 2.513 2.500 .2723 .9622 2830 3.534 .8 3714 .9285 .4000 .2 .8 .9617 .9 2740 .2849 3.511 .1 .9 .3730 .9278 4020 2.488 16.0 0.2756 0.9613 0.2867 3.487 74.0 22.0 0.3746 0.9272 0.4040 2.475 68.0 .3762 .2773 .9608 .2886 .9 .9265 .4061 2.463 .9 3.465 .2 2790 .9603 2905 3.442 .8 .2 9259 .4081 2.450 .8 .2807 .3 .3 .9598 .2924 3.420 ,7 .3795 .9252 .4101 2.438 .7 .4 2823 .9593 2943 3.398 .4 .3811 .9245 .4122 2.426 .6 ه. .5 .2840 .9588 .2962 3.376 .5 .5 .3827 .9239 .4142 2.414 .5 .2857 .9583 2981 3.354 .4 .6 .3843 .9232 .4163 2.402 Э, .2874 .9578 .3000 3.333 .3 .3859 .9225 .4183 2.391 .8 2890 .9573 3019 3.312 .8 .3875 9219 .4204 2.379 2 .2907 .9568 .3038 .9 .3891 .9212 .4224 2.367 17.0 0.2924 0.9563 0.3057 3.271 73.0 23.0 0,3907 0.9205 0.4245 2.356 67.0 .9558 .9198 2.344 .2940 .3076 3.251 .3923 .4265 .2 .2957 .9553 .3096 3.230 .8 .2 .3939 .9191 .4286 2.333 .8 .2974 .9548 ,7 .3 .9184 .7 .3115 3.211 .3955 .4307 2.322 .4 .2990 9542 .3134 3.191 ٥. .3971 .9178 .4327 2.311 .6 .5 3007 .9537 .3153 .5 .5 .3987 .9171 2.300 .5 .4 3.172 .4348 .3 .6 .6 .7 .3024 .9532 .3172 3.152 .4003 .9164 .4369 2.289 .3040 .9527 .3191 .9157 .4390 .3 .2 3.133 .4019 2.278 .8 .9521 .3211 3.115 .8 .4035 .9150 .4411 2.267 .3074 .3230 ī .9 .4051 .9143 4431 .9516 3.096 2.257 24.0 0.9135 18.0 0.3090 0.9511 0.3249 3.078 72.0 0.4067 0.4452 2.246 66.0 deg deg COS sin cot tan COS sin cot tan

Natural trigonometric functions

for decimal fractions of a degree continued

deg	sin	cos	tan	cot		deg	sin	cos	tan	cof	
24.0	0.4067	0.9135	0.4452	2,246	66.0	30.0	0.5000	0.8660	0.5774	1.7321	60.0
.1	.4083	.9128	.4473	2.236	.9	1 1	.5015	.8652	.5797	1.7251	.9
.2 .3	.4099	.9121 .9114	.4494 .4515	2.225 2.215	.8 .7	.2 .3	.5030 .5045	.8643 .8634	.5820 .5844	1.7182 1.7113	.8 .7
.3	.4131	.9107	.4536	2.204	.6	.3	.5060	.8625	.5867	1.7045	-/
.5	.4147	.9100	.4557	2.194	.5	.5	.5075	.8616	.5890	1.6977	.5
.6	.4163	.9092	.4578	2.184	.4	.6	.5090	.8607	.5914	1.6909	.6 .5 .4 .3 .2
.7	.4179	.9085	.4599	2.174	.3 .2	.7 .8	.5105	.8599 .8590	.5938 .5961	1.6842	.3
.4 .5 .6 .7 .8	.4210	.9078 .9070	.4621 .4642	2.164 2.154	:1	.9	.5120 .5135	.8581	.5985	1.6775 1.6709	.1
25.0	0.4226	0.9063	0.4663	2,145	65.0	31.0	0.5150	0.8572	0.6009	1.6643	59.0
1.0	.4242	.9056	.4684	2.135	.9	J	.5165	.8563	.6032	1.6577	.9
.2	.4258	.9048	.4706	2,125	.8	.2	.5180	.8554	.6056	1.6512	.9 .8 .7 .6
,3	.4274	.9041	.4727	2.116	.7	.3	.5195	.8545	.6080	1.6447	.7
.3 .4 .5 .6 .7 .8	.4289	.9033	.4748	2.106	.6	.4	.5210	.8536	.6104	1.6383	.6
.2	.4305 .4321	.9026 .9018	.4770 .4791	2.097 2.087	.5 .4	.5 .6	.5225 .5240	.8526 .8517	.6128 .6152	1.6319 1.6255	.5 .4 .3 .2
.7	.4337	.9011	.4813	2.078	.3	.,,	.5255	.8508	.6176	1.6191	.4
.8	.4352	.9003	.4834	2.069	.2	IΩ	.5270	.8499	.6200	1.6128	.2
.9	.4368	.8996	.4856	2.059	.1	.9	.5284	.8490	.6224	1.6066	.ī
26.0	0.4384	0.8988	0.4877	2.050	64.0	32.0	0.5299	0.8480	0.6249	1.6003	58.0
١,	.4399	.8980	.4899	2.041	.9	j .j	.5314	.8471	.6273	1.5941	.9
.2 .3	.4415 .4431	.8973 .8965	.4921 .4942	2.032 2.023	.8 .7	.2 .3	.5329	.8462 .8453	.6297	1.5880 1.5818	.8
.4	.4446	.8957	.4964	2.014	.6	.4	.5358	.8443	.6322 .6346	1.5757	.,
.5	.4462	.8949	.4986	2,006		.5	.5373	.8434	.6371	1.5697	.5
.6	.4478	.8942	.5008	1.997	.4	.6 .7	-5388	.8425	.6395	1.5637	.4
.7	.4493	.8934	.5029	1.988	,	.7	.5402	.8415	.6420	1.5577	.3
.4 .5 .6 .7 .8	.4509 .4524	.8926 .8918	.5051 .5073	1.980 1.971	.2 .1	.8 .9	.5417	.8406	.6445 .6469	1.5517 1.5458	.9 .8 .7 .6 .5 .4 .3 .2
						l	.5432	.8396			
27.0	0.4540 .4555	0.8910 .8902	0.5095 .5117	1.963 1.954	63.0 .9	33.0 .1	0.5446	0.8387	0.6494	1.5399	57.0
.2	-4571	.8894	.5139	1.946	.8	.2	.5461 .5476	.8377 .8368	.6519 .6544	1.5340 1.5282	-7
.3	.4586	.8886	.5161	1.937	.ř	.ã	.5490	.8358	.6569	1.5224	ž
.4	.4602	.8878	.5184	1.929	.6	.4	.5505	.8348	.6594	1.5166	.6
.5	.4617	.8870	.5206	1.921	.5	.5	.5519	.8339	-6619	1.5108	.5
.3 .4 .5 .6	.4633 .4648	.8862 .8854	.5228 .5250	1.913 1.905	.4 .3	.6 .7	.5534 .5548	.8329 .8320	.6644 .6669	1.5051 1.4994	.4
.8	.4664	.8846	.5272	1.897	.2		.5563	.8310	.6694	1.4938	.9 .8 .7 .6 .5 .4 .3 .2
.9	.4679	.8838	.5295	1.889	.ī	.9	.5577	.8300	.6720	1.4882	.ī
28.0	0.4695	0.8829	0.5317	1.881	62.0	34.0	0.5592	0.8290	0.6745	1.4826	56.0
.1	.4710	.8821	.5340	1.873	.9	١.٠	.5606	.8281	-6771	1.4770	.9
.2	.4726 .4741	.8813 .8805	.5362 .5384	1.865 1.8 <i>5</i> 7	.8 .7	.2 .3	.5621 .5635	.8271 .8261	.6796 .6822	1.4715 1.4659	٠.8
.4	.4756	.8796	.5407	1.849	.6	.3	.5650	.8251	.6847	1.4605	.6
.5	.4772	.8788	.5430	1.842	1 .5	.5	.5664	.8241	.6873	1.4550	.5
.6	.4787	.8780	.5452	1.834	-4	.6	.5678	.8231	.6899	1.4496	.4
.7	.4802 .4818	.8771 .8763	.5475 .5498	1.827 1.819	.4 .3 .2	.7 .8	.5693 .5707	.8221 .8211	.6924 .6950	1.4442 1.4388	.3
.1 .2 .3 .4 .5 .6 .7 .8	.4833	.8755	.5520	1.811	.í	.°,	.5721	.8202	.6976	1.4335	.9 .8 .7 .6 .5 .4 .3 .2
29.0	0,4848	0.8746	0.5543	1,804	61.0	35.0	0.5736	0.8192	0.7002	1.4281	55.0
.1	.4863	.8738	.5566	1.797	.9	1.1	.5750	.8181	.7028	1.4229	.9
.2	.4879	.8729	.5589	1.789	.8 .7	.2	.5764	.8171	.7054	1.4176	.8
.3	.4894	.8721	.5612	1.782	.7	.3	.5779	.8161	.7080	1.4124	.7
.4	.4909 .4924	.8712 .8704	.5635 .5658	1.775 1.767	.6 .5	.4 .5	.5793	.8151 .8141	.7107	1,4071 1,4019	.6
.6	.4939	.8695	.5681	1.760	.3	ام. ا	.5807 .5821	.8141	.7133 .7159	1.3968	.5
.7	.4955	.8686	.5704	1.753	.3	.6 .7	.5835	.8121	.7186	1.3916	.3
.2 .3 .4 .5 .6 .7 .8	.4970	.8678	.5727	1.746	.2	8. I	.5850	.8111	.7212	1.3865	55.0 .9 .8 .7 .6 .5 .4 .3 .2 .1
	.4985	.8669	.5750	1.739	.1	.9	.5864	.8100	.7239	1.3814	.1
30.0	0.5000	0.8660	0.5774	1.732	60.0	36.0	0.5878	0.8090	0.7265	1.3764	54.0
	COS	sin	cot	tan	deg	<u> </u>	COS	sin	cot	fan	deg

Natural trigonometric functions

for decimal fractions of a degree continued

deg	sin	COS	fan	cot	[deg] sin	cos	fon	col	
36.0 .1 .2 .3 .4	0.5878 .5892 .5906 .5920 .5934	0.8090 .8080 .8070 .8059 .8049	0.7265 .7292 .7319 .7346 .7373	1.3764 1.3713 1.3663 1.3613 1.3564	54.0 .9 .8 .7 .6	40.5 .6 .7 .8 .9	0.6494 .6508 .6521 .6534 .6547	0.7604 .7593 .7581 .7570 .7559	0.8541 .8571 .8601 .8632 .8662	1.1708 1.1667 1.1626 1.1585 1.1544	49.5 .4 .3 .2 .1
.5 .6 .7 .8	.5948 .5962 .5976 .5990 .6004	.8039 .8028 .8018 .8007 .7997	.7400 .7427 .7454 .7481 .7508	1.3514 1.3465 1.3416 1.3367 1,3319	.5 .4 .3 .2 .1	41.0 .1 .2 .3 .4	0.6561 .6574 .6587 .6600 .6613	0.7547 .7536 .7524 .7513 .7501	0.8693 .8724 .8754 .8785 .8816	1.1504 1.1463 1.1423 1.1383 1.1343	49.0 .9 .8 .7 .6
37.0 .1 .2 .3 .4	0.6018 .6032 .6046 .6060 .6074	0.7986 .7976 .7965 .7955 .7944	0.7536 .7563 .7590 .7618 .7646	1.3270 1.3222 1.3175 1.3127 1.3079	53.0 .9 .8 .7 .6	.5 .6 .7 .8 .9	.6626 .6639 .6652 .6665 .6678	.7490 .7478 .7466 .7455 .7443	.8847 .8878 .8910 .8941 .8972	1.1303 1.1263 1.1224 1.1184 1.1145	.5 .4 .3 .2
.5 .6 .7 .8	.6088 .6101 .6115 .6129 .6143	.7934 .7923 .7912 .7902 .7891	.7673 .7701 .7729 .7757 .7785	1.3032 1.2985 1.2938 1.2892 1.2846	.5 .4 .3 .2	42.0 .1 .2 .3 .4	0.6691 .6704 .6717 .6730 .6743	0.7431 .7420 .7408 .7396 .7385	0.9004 .9036 .9067 .9099 .9131	1.1106 1.1067 1.1028 1.0990 1.0951	48.0 .9 .8 .7 .6
38.0 .1 .2 .3 .4	0.6157 .6170 .6184 .6198 .6211	0.7880 .7869 .7859 .7848 .7837	0.7813 .7841 .7869 .7898 .7926	1.2799 1.2753 1.2708 1.2662 1.2617	52.0 .9 .8 .7 .6	.5 .6 .7 .8 .9	.6756 .6769 .6782 .6794 .6807	,7373 ,7361 ,7349 ,7337 ,7325	.9163 .9195 .9228 .9260 .9293	1.0913 1.0875 1.0837 1.0799 1.0761	.5 .4 .3 .2 .1
.5 .6 .7 .8	.6225 .6239 .6252 .6266 .6280	.7826 .7815 .7804 .7793 .7782	.7954 .7983 .8012 .8040 .8069	1.2572 1.2527 1.2482 1.2437 1.2393	.5 .4 .3 .2	43.0 .1 .2 .3 .4	0.6820 .6833 .6845 .6858 .6871	0.7314 .7302 .7290 .7278 .7266	0.9325 .9358 .9391 .9424 .9457	1.0724 1.0686 1.0649 1.0612 1.0575	47.0 .9 .8 .7 .6
39.0 .1 .2 .3 .4	0,6293 .6307 .6320 .6334 .6347	0.7771 .7760 .7749 .7738 .7727	0.8098 .8127 .8156 .8185 .8214	1.2349 1.2305 1.2261 1.2218 1.2174	51.0 .9 .8 .7 .6	.5 .6 .7 .8 .9	.6884 .6896 .6909 .6921 .6934	.7254 .7242 .7230 .7218 .7206	.9490 .9523 .9556 .9590 .9623	1.0538 1.0501 1.0464 1.0428 1.0392	.5 .4 .3 .2 .1
.5 .6 .7 .8 .9	.6361 .6374 .6388 .6401 .6414	.7716 .7705 .7694 .7683 .7672	.8243 .8273 .8302 .8332 .8361	1.2131 1.2088 1.2045 1.2002 1.1960	.5 .4 .3 .2 .1	44.0 .1 .2 .3 .4	0.6947 .6959 .6972 .6984 .6997	0.7193 .7181 .7169 .7157 .7145	0.9657 .9691 .9725 .9759 .9793	1.0355 1.0319 1.0283 1.0247 1.0212	46.0 .9 .8 .7 .6
40.0 .1 .2 .3 .4	0.6428 .6441 .6455 .6468 .6481	0.7660 .7649 .7638 .7627 .7615	0.8391 .8421 .8451 .8481 .8511	1.1918 1.1875 1.1833 1.1792 1.1750	50.0 .9 .8 .7 .6	.5 .6 .7 .8 .9	.7009 .7022 .7034 .7046 .7059	.7133 .7120 .7108 .7096 .7083	.9827 .9861 .9896 .9930 .9965	1.0176 1.0141 1.0105 1.0070 1.0035	.5 .4 .3 .2 .1
40.5	0.6494	0.7604	0.8541	1.1708	49.5	45.0	0.7071	0.7071	1.0000	1.0000	45.0
	cos	sin	cot	ton	deg		cos	sin	cot	tan	deg

for decimal fractions of a degree

deg	Lsin	L cos	Ltan	L cot		l deg	Lain	L cos	Lton	L cot	
0.0		0.0000			90.0	6.0	9,0192	9.9976	9.0216	0.9784	84.0
	7.2419	0.0000	7.2419	2.7581	.9	1 .1	9.0264	9,9975	9.0289	0.9711	,9
.2	7.5429	0.0000	7.5429	2.4571	.8	l .2	9.0334	9.9975	9.0360	0.9640	8.
.1 .2 .3 .4 .5 .6 .7 .8 .9	7,7190	0.0000	7,7190	2.2810	.8 .7	.1 .2 .3	9.0403	9.9974	9.0430	0.9570	.8 .7 .6 .5 .4 .3 .2
.4	7.8439	0.0000	7.8439	2.1561	.6	.4 .5	9.0472	9.9973	9.0499	0.9501	.6
.5	7.9408	0.0000	7.9409	2.0591	.5	.5	9.0539	9.9972	9.0567	0.9433	.5
کہ	8.0200	0.0000	8.0200	1.9800	.4 .3	.6 .7	9.0605	9.9971	9.0633	0.9367	.4
J	8.0870	0.0000	8.0870	1,9130	.3	7	9.0670	9.9970	9.0699	0.9301	.3
.8	8.1450	0.0000	8.1450	1.8550	.2	.8 .9	9.0734	9.9969	9.0764	0.9236	?
.9	8,1961	9.9999	8.1962	1.8038	.1	٠,٩	9.0797	9.9968	9.0828	0.9172	
1.0	8.2419	9.9999	8.2419	1.7581	89.0	7.0	9.0859	9.9968	9.0891	0.9109	83.0
.1	8.2832	9,9999	8.2833	1.7167	.9	j .j	9.0920	9.9967	9.0954	0.9046	.9
-2	8.3210	9.9999	8.3211	1.6789	.8 .7	.2 .3	9.0981	9.9966 9.9965	9.101 <i>5</i> 9.1076	0.8985 0.8924	.8 .7
.1 2 3 .4 .5 .6	8.3558	9.9999 9.9999	8.3559	1.6441] .3	9.1040	9,9964	9.1135	0.8865	'/
-4	8.3880	9,9999	8.3881 8.4181	1.6119	.6	.4	9,1099	9.9963	9.1194	0.8806	.6 .5
->	8,4179	9.9998	8.4461	1.5819 1.5539	.5	.5	9.1137	9.9962	9.1252	0.8748	٠,٠
-9	8.4459 8.4723	9.9998	8.4725	1.5275	.4 .3	.6 .7	9.1271	9,9961	9.1310	0.8690	.4
.8	8,4971	9.9998	8.4973	1.5027	.2	.8	9.1326	9,9960	9.1367	0.8633	.2
.0 .9	8.5206	9.9998	8.5208	1.4792	,1	.9	9.1381	9.9959	9.1423	0.8577	.1
									1		
2.0	8.5428	9.9997 9.9997	8.5431 8.5643	1.4569 1.4357	88.0 .9	8.0	9.1436 9.1489	9.9958 9.9956	9.1478 9.1533	0.8522	82.0 .9
.1	8.5640	9,9997	8.5845		.8 .8	l .¦	9.1542	9.9955	9.1587	0.8413	.7
.2	8.5342	9,9996	8.6038	1.4155	.7	.2	9,1594	9.9954	9.1640	0.8360	
.3	8.6035 8.6220	9,9996	8.6223	1.3962 1.3777	,	.4	9.1646	9.9953	9.1693	0.8307	'.'
-4	8.6397	9.9996	8.6401	1.3599	.6 .5	.5	9.1697	9.9952	9.1745	0.8255	.6
.2 .3 .4 .5 .6 .7	8.6567	9.9996	8.6571	1.3429	<u>، آ</u>	۲. ا	9.1747	9.9951	9.1797	0.8203	.8 .7 .6 .5 .4 .3
.0	8.6731	9.9995	8.6736	1.3264	.4 .3 .2	.6 .7	9,1797	9.9950	9.1848	0.8152	.3
-/ ₈	8.6339	9.9995	8.6894	1.3106	.5	.8	9.1847	9,9949	9.1898	0.8102	.2
.9	8.7041	9.9994	8.7046	1.2954	:ī	.9	9.1895	9.9947	9.1948	0.8052	.ī
3.0	8.7188	9,9994	8,7194	1.2806	87.0	9.0	9.1943	9,9946	9,1997	0.8003	81.0
	8.7330	9,9994	8.7337	1,2663	,9	l ii	9,1991	9,9945	9,2046	0.7954	
.2	8,7468	9,9993	8,7475	1,2525	.8	.2	9.2038	9,9944	9,2094	0.7906	8.
.2 .3 .4 .5 .6 .7 .8	8.7602	9.9993	8.7609	1.2391	.7	.3	9.2035	9.9943	9.2142	0.7858	.9 .8 .7
.4	8.7731	9.9992	8,7739	1,2261	.6	.4	9.2131	9.9941	9.2189	0.7811	.6
. 5	8.7857	9.9992	8.7865	1.2135	.5	.5	9.2176	9.9940	9.2236	0.7764	.6 .5 .4 .3 .2
.6	8.7979	9.9991	8.7988	1.2012	.4	.6	9,2221	9.9939	9.2282	0.7718	.4
.7	8.8098	9,9991	8.8107	1.1893	.3	.7	9.2266	9.9937	9.2328	0.7672	.3
.8	8.8213	9.9990	8.8223	1.1777	.2	.8	9,2310	9.9936	9.2374	0.7626	.2
.9	8.8326	9,9990	8.8336	1.1664	.1	.9	9.2353	9.9935	9,2419	0.7581	.1
4.0	8.8436	9.9989	8.8446	1.1554	86.0	10.0	9.2397	9.9934	9.2463	0.7537	80.0 .9
.1	8.8543	9.9989	8.8554	1.1446	.9	.1	9.2439	9,9932	9.2507	0.7493	.9
.2	8.8647	9.9988	8.8659	1.1341	.8	.2 .3	9.2482	9.9931	9.2551	0.7449	.8 .7
.2 .3 .4 .5 .6 .7 .8	8.8749	9.9988	8.8762	1.1238	.7	الإن إ	9.2524	9,9929	9.2594	0.7406	
Ą	8.8849	9.9987	8.8862	1.1138	.6	.4	9.2565	9.9928	9.2637	0.7363	.6
٠,	8.8946 8.9042	9.9987 9.9986	8.8960 8.9056	1.1040 1.0944	.5	.5	9.2606 9.2647	9.9927 9.9925	9.2680 9.2722	0.7320	.6 .5 .4 .3
.0	8.9135	9.9985	8.9150	1.0850	.4	.6 .7	9.2647	9,9924	9.2764	0.7278 0.7236	.4
٠,	8.9226	9.9985	8.9241	1.0759	.3	.8	9.2727	9.9922	9.2805	0.7195	.,
.9	8,9315	9.9984	8.9331	1.0669	:î	.,,	9.2767	9.9921	9.2846	0.7154	.1
5.0	8,9403	9.9983	8,9420	1,0580	85.0	11.0	9,2806	9.9919	9,2887	0.7113	70.0
3.U .l	8.9489	9.9983	8.9506	1.0580	.9	11.0	9.2845	9.9919	9.2887	0.7113	79.0
.1	8.9573	9.9982	8,9591	1.0494	.8	'5	9.2883	9.9916	9.2927	0.7033	۰,۶
.2 .3	8.9655	9.9981	8.9674	1.0326	.7	.2 .3	9.2921	9,9915	9.3006	0.6994	.9 .8 .7
~	8.9736	9.9981	8.9756	1.0244	.6	,4	9.2959	9.9913	9.3046	0.6954	, , ,
- 7	8.9816	9.9980	8.9836	1.0164	.5	.5	9.2997	9.9912	9.3085	0.6915	.5
<u>~</u>	8.9894	9.9979	8.9915	1.0085	.4	.6	9.3034	9.9910	9.3123	0.6877	
.5 .6 .7	8,9970	9.9978	8.9992	1.0008	.3	.7	9.3070	9,9909	9.3162	0.6838	.6 .5 .4 .3 .2
.8	9.0046	9.9978	9.0068	0.9932	.2	8.	9.3107	9,9907	9.3200	0.6800	.2
.8 .9	9.0120	9.9977	9.0143	0.9857	.ī	.9	9.3143	9.9906	9.3237	0.6763	ī.
6.0	9.0192	9.9976	9.0216	0.9784	84.0	12.0	9.3179	9.9904	9.3275	0.6725	78.0
	Lcos	Lsin	Lcot	Ltan	deg	1	Lcos	Lsin	Lcot	L tan	deg

for decimal fractions of a degree continued

deg	Lsin	Lcos	Ltan	Lant		l deg	Lsin	L cos	L tan	l 1 enë	1
deg	LSIN	L COS	Lian	1 (0)	<u> </u>	l 4031		2 00	L ZGII	1 001	1
12.0	9.3179	9,9904	9,3275	0.6725	78.0	18.0	9.4900	9.9782	9.5118	0.4882	72.0
.i	9.3214	9,9902	9.3312	8866.0	.9	.1	9.4923	9.9780	9.5143	0.4857	.9
.2	9.3250	9.9901	9.3349	0.6651	.8 .7	.2 .3	9.4946	9.9777 9.9775	9.5169 9.5195	0.4831 0.4805	.8 . 7
.3	9.3284 9.3319	9.9899 9.9897	9.3385 9.3422	0.6615 0.6578	.6	.3	9.4999	9.9772	9.5173	0.4780	1
.4 .5	9.3353	9.9896	9.3458	0.6542	.5	.5	9.5015	9.9770	9.5245	0.4755	.6 .5
.6	9.3387	9.9894	9.3493	0.6507	.4	.6	9.5037	9.9767	9.5270	0.4730	.4
.6 .7	9.3421	9.9892	9.3529	0.6471	.3	.7	9.5060	9.9764	9,5295	0,4705	.4 .3 .2
.8	9.3455	9.9891	9.3564	0.6436	.2	.8	9.5082	9.9762	9.5320	0.4680	.2
.9	9.3488	9,9889	9.3599	0.6401	.1	.9	9.5104	9.9759	9,5345	0,4655	.3
13.0	9.3521	9.9887	9.3634	0.6366	77.0	19.0	9.5126	9.9757	9.5370	0.4630	71.0
.1	9,3554	9.9885	9.3668	0.6332	.9	1.	9.5148	9.9754	9.5394	0.4606	.9
.3	9.3586	9.9884	9.3702	0.6298	8.	.2	9.5170	9.9751	9.5419	0.4581	.8 .7
.3	9.3618	9.9882	9.3736	0.6264] .7	.3 .4	9.5192	9,9749	9.5443	0.4557	.7
.4	9.3650	9.9880	9.3770	0.6230	٥.	1 .4	9.5213	9.9746	9.5467	0.4533 0.4509	.6 .5 .4 .3 .2
.5	9.3682 9.3713	9.9878 9.9876	9.3804 9.3837	0.6196	.5 .4	.5 .6	9.5235 9.5256	9.9743 9.9741	9.5491 9.5516	0.4484	.5
.0	9.3745	9,9875	9.3870	0.6130	.3	.7	9,5278	9,9738	9,5539	0.4461	1 1
·/a	9.3775	9.9873	9.3903	0.6097	.2	.8	9,5299	9.9735	9.5563	0.4437	.,,
.4 .5 .6 .7 .8	9.3806	9.9871	9.3935	0.6065	,ī	.9	9.5320	9.9733	9.5587	0.4413	.ī
14.0	9.3837	9,9869	9.3968	0.6032	76.0	20.0	9.5341	9.9730	9,5611	0.4389	70.0
14.0	9.3867	9.9867	9.4000	0.6000	.9	20.0	9.5361	9.9727	9.5634	0.4366	70.0
.2	9.3897	9.9865	9.4C32	0.5968	.8	.2	9.5382	9.9724	9.5658	0.4342	.8
.2	9.3927	9.9863	9.4064	0.5936	.7	.3	9.5402	9.9722	9.5681	0.4319	.7
.4	9.3957	9.9861	9.4095	0.5905	.6		9.5423	9.9719	9.5704	0.4296	.6
.5	9.3986	9.9859	9.4127	0.5873	.5	.5	9.5443	9.9716	9.5727	0.4273	.5
-6	9.4015	9.9857	9.4158	0.5842	1.4	.6 .7	9.5463	9.9713	9.5750	0.4250	.4
.7	9.4044 9.4073	9.9855	9.4189	0.5811	.3 .2	.8	9.5484 9.5504	9.9710 9.9707	9.5773	0.4227	.3
.4 .5 .6 .7 .8	9.4102	9.9851	9.4250	0.5750	.1	.°	9.5523	9.9704	9.5819	0.4161	.8 .7 .6 .5 .4 .3
17.0	9,4130	9.9849		0.5719	75.0	21.0	9.5543	9,9702	9.5842	[69.0
15.0 .1	9,4158	9,9847	9.4281	0.5689	.9	21.0	9.5563	9,9699	9.5864	0.4158	G9.0
.2	9.4186	9.9845	9.4341	0.5659	.8	.2	9.5583	9.9696	9.5687	0.4113	.9 .8 .7 .6
.3	9,4214	9.9843	9,4371	0.5629	.7	.3	9.5602	9.9693	9.5909	0,4091	.7
.4	9.4242	9.9841	9.4400	0.5600	.6	.4	9.5621	9.9690	9.5932	0.4068	.6
.5	9.4269	9.9839	9.4430	0.5570	.5	.5	9.5641	9.9687	9,5954	0.4046	-5
.4 .5 .6 .7	9.4296	9.9837	9.4459	0.5541	.4	.6 .7	9.5660	9.9684	9.5976	0.4024	.4
.7	9.4323	9.9835	9.4488	0.5512	.3	./ .8	9.5679 9.5698	9,9681	9.5998 9.6020	0.4002	.3
.8 .9	9.4350 9.4377	9.9833 9.9831	9.4517 9.4546	0.5483 0.5454	.2 .1	.9	9.5717	9.9678 9.9675	9,6042	0.3758	.1
	9.4403	9.9828	0.4576]	74.0	22.0	9.5736	9.9672	9.6064	0.3936	68.0
16.0 .1	9.4430	9.9826	9.4575 9.4603	0.5425 0.5397	.9	77.0	9.5754	9.9669	9.6086	0.3736	00.0
.2	9,4456	9,9824	9.4632	0.5368	.8	.2	9.5773	9.9666	9.6108	0.3892	,,
.3	9.4482	9.9822	9.4660	0.5340	.7	.3	9.5792	9.9662	9.6129	0.3871	.9 .8 .7
.3 .4 .5 .6 .7	9.4508	9.9820	9,4688	0.5312	ة. ا	.4	9.5810	9,9659	9.6151	0.3849	.6
.5	9.4533	9.9817	9.4716	0.5284	.5	.5	9.5828	9.9656	9.6172	0.3828	.5
.6	9.4559	9.9815	9.4744	0.5256	.4	.6 .7	9.5847	9.9653	9.6194	0.3806	.4
.7	9.4584	9.9813	9.4771	0.5229	.3	1 .7	9.5865	9.9650	9.6215	0.3785	.3
.8 .9	9.4609 9.4634	9.9811 9.9808	9.4799 9.4826	0.5201 0.5174	.2 .1	.8 .9	9.5883	9.9647 9.9643	9.6236 9.6257	0.3764 0.3743	.2 .I
					ŀ					[.	
17.Q	9.4659 9.4684	9.9806 9.9804	9.4853 9.4880	0.5147	73.0	23.0	9.5919	9.9640 9.9637	9.6279 9.6300	0.3721	67.0
.i	9.4684	9.9804	9.4880	0.5120	.9	.1	9.5937	9.9637	9.6300	0.3679	.8
.3	9.4733	9.9799	9.4934	0.5066	.8 .7	.2 .3	9.5972	9.9631	9.6341	0.3659	.7
.4	9.4757	9.9797	9.4961	0.5039	.6		9.5990	9.9627	9.6362	0.3638	6
.5	9.4781	9.9794	9.4987	0.5013	.6 .5	.5	9.6007	9.9624	9.6383	0.3617	.5
.6	9.4805	9.9792	9.5014	0.4986	.4	.6 .7	9.6024	9.9621	9.6404	0.3596	.4
.7	9.4829	9.9789	9.5040	0.4960	.3	.7	9.6042	9.9617	9.6424	0.3576	.3
.2 .3 .4 .5 .6 .7 .8 .9	9.4853	9.9787	9.5066	0.4934	.2	.8	9.6059	9.9614	9.6445	0.3555	6 .5 .4 .3 .2
.7	9.4876	9.9785	9.5092	0.4908	.1	.9	9.6076	9.9611	9.6465	0.3535	."
18.0	9.4900	9.9782	9.5118	0.4882	72.0	24.0	9.6093	9.9607	9.6486	0.3514	66.0
9.4900 9	,	.9782	9.5118 L cot	l	72.0	24.0			1	0.3514 L tan	66.0 deg

for decimal fractions of a degree continued

deg	Lsin	L cos	L tan	L cot		deg	Lsin	L cos	Lian	L col	<u> </u>
24.0	9.6093	9.9607	9.6486	0.3514	66.0	30.0	9,6990	9.9375	9.7614	0.2386	60.0
.1	9.6110	9.9604	9.6506	0.3494	.9	.1	9.7003	9.9371	9.7632	0.2368	.9
.2	9.6127	9.9601	9.6527	0.3473	.8	.2	9.7016	9.9367	9.7649	0.2351	.8
.3 .4 .5 .6 .7 .8	9.6144	9.9597	9.6547	0.3453	.7	.3	9.7029	9.9362	9.7667	0.2333	.7
.4	9.6161	9.9594	9.6567	0.3433	.6	.4	9.7042	9.9358	9.7684	0.2316	.6
-5	9.6177	9.9590	9.6587	0.3413	.5	.5	9.7055	9.9353	9.7701	0.2299	.5 .4 .3 .2
.6	9.6194	9.9587	9.6607	0.3393	.4	.6	9.7068	9.9349	9.7719	0.2281	.4
./	9.6210	9.9583 9.9580	9.6627	0.3373	.3	.7	9.7080	9.9344	9.7736	0.2264	.3
.0	9.6227 9.6243	9.9576	9.6647 9.6667	0.3353 0.3333	.2 .1	.8 .9	9.7093	9.9340 9.9335	9.7753	0.2247	-2
.,	7.0240	7.7376	7.0007	0.3333	''	.,,	7.7100	7,7333	9.7771	0.2229	.1
25.0	9.6259	9.9573	9.6687	0.3313	65.0	31.0	9.7118	9.9331	9.7788	0.2212	59.0
.1	9.6276	9.9569	9.6706	0.3294	.9] .]	9.7131	9.9326	9.7805	0.2195	.9
.2 .3	9.6292 9.6308	9.9566 9.9562	9.6726 9.6746	0.3274	.8 .7	.2	9.7144	9.9322	9.7822	0.2178	.8 .7
-3	9.6324	9.9558	9.6765	0.3254 0.3235	.6	.3 ,4	9.7156	9.9317 9.9312	9.7839	0.2161	-/,
.7	9.6340	9.9555	9.6785	0.3235	.5	.5	9.7181	9.9308	9.7856 9.7873	0.2144	٠.٥
.4 .5 .6 .7	9.6356	9.9551	9.6804	0.3196	,4	.5	9.7193	9.9303	9.7890	0.2110	.6 .5 .4 .3
7	9.6371	9.9548	9.6824	0.3176	.3	.6 .7	9.7205	9.9298	9.7907	0.2093	
.8	9.6387	9.9544	9.6843	0.3157	.2	.8	9,7218	9.9294	9.7924	0,2076	
.9	9.6403	9.9540	9.6863	0.3137	.ī	.9	9.7230	9.9289	9.7941	0.2059	.1
26.0	9.6418	9.9537	9,6882	0.3118	64.0	32.0	9.7242	9.9284	9.7958	0.2042	58.0
.1	9.6434	9.9533	9.6901	0.3099	.9	32.0	9,7254	9,9279	9.7975	0.2025	.9
.2	9.6449	9 9 5 2 9	9.6920	0.3080	.8	.2	9.7266	9.9275	9.7992	0.2008	l á
.2	9.6465	9.9525	9.6939	0.3061	.7	i . <u>3</u>	9.7278	9.9270	9.8008	0.1992	.8 .7
.4	9.6480	9.9522	9.6958	0.3042	.6	.4	9.7290	9.9265	9.8025	0.1975	.6
.5	9.6495	9.9518	9.6977	0.3023	.5	.5	9.7302	9.9260	9.8042	0.1958	.5
.4 .5 .6 .7	9.6510	9.9514	9.6996	0.3004	.4	.6	9.7314	9.9255	9.8059	0.1941	.4
J	9.6526	9.9510	9.7015	0.2985	.3	.7	9.7326	9.9251	9.8075	0.1925	.4 .3 .2
.8 .9	9.6541	9.9506	9.7034	0.2966	.2	.8	9.7338	9.9246	9.8092	0.1908	.2
.9	9.6556	9.9503	9.7053	0.2947	.1	.9	9.7349	9.9241	9.8109	0.1891	.1
27.0	9.6570	9.9499	9.7072	0.2928	63.0	33.0	9.7361	9.9236	9.8125	0.1875	57.0
.1	9.6585	9.9495	9.7090	0.2910	.9	.1	9.7373	9.9231	9.8142	0.1858	.9
.2	9.6600	9,9491	9.7109	0.2891	.8	.2	9.7384	9.9226	9.8158	0.1842	.8 .7
.3	9.6615	9.9487	9.7128	0.2872	.7	.3	9.7396	9.9221	9.8175	0.1825	-7
.4	9.6629 9.6644	9.9483	9.7146 9.7165	0.2854 0.2835	.6 .5	.4	9.7407	9.9216	9.8191	0.1809	.6 .5
.5	9.6659	9.9475	9.7183	0.2833	.3	.5 .6	9.7430	9.9206	9.8224	0.1776	.3
	9.6673	9.9471	9.7202	0.2798	.3	.7	9.7442	9.9201	9.8241	0.17.59	-3
.2 .3 .4 .5 .6 .7	9.6687	9,9467	9.7220	0.2780	.2	.8	9.7453	9.9196	9.8257	0.1743	.4 .3 .2
.9	9.6702	9.9463	9.7238	0.2762	i.ī	.9	9.7464	9.9191	9.8274	0.1726	:ī
28.0	9.6716	9.9459	9.7257	0.2743	62.0	34.0	9.7476	9.9186	9.8290	0.1710	56.0
.1	9.6730	9.9455	9.7275	0.2725	.9	34.0	9.7487	9.9181	9.8306	0.1694	.9
.2	9.6744	9.9451	9.7293	0.2707	.8	.2	9.7498	9.9175	9.8323	0.1677	.é
.3	9.6759	9.9447	9.7311	0.2689	.7	.3	9,7509	9.9170	9.8339	0.1661	.,,
.2 .3 .4 .5 .6	9.6773	9,9443	9.7330	0.2670	.6	.4	9.7520	9.9165	9.8355	0.1645	.6
.5	9,6787	9.9439	9.7348	0.2652	.5	.5	9.7531	9.9160	9.8371	0.1629	.5
.6	9.6801	9.9435	9.7366	0.2634	.4	.6	9.7542	9.9155	9.8388	0.1612	.4
.7	9.6814	9.9431	9.7384	0.2616	.3	.7	9.7553	9.9149	9.8404	0.1596	.3
.8 .9	9.6828 9.6842	9.9427 9.9422	9.7402 9.7420	0.2598 0.2580	.2 .1	.8 .9	9.7564 9.7575	9.9144	9.8420 9.8436	0.1580 0.1564	.6 .5 .4 .3 .2
.7	7.0042	7.7422	7.7420	0.2560	.1	."	9./3/3	7.7139	7.0436	0.1364	.,
29.0	9.6856	9.9418	9.7438	0.2562	61.0	35.0	9.7586	9.9134	9.8452	0.1548	55.0
.1	9.6869	9.9414	9.7455	0.2545	.9	.1	9.7597	9.9128	9.8468	0.1532	.9
.2	9.6883	9.9410	9.7473	0.2527	.8	.2	9.7607	9.9123	9.8484	0.1516	.8 ,7
.2 .3 .4 .5 .6	9.6896	9.9406 9.9401	9.7491 9.7509	0.2509	.7	.3	9.7618	9.9118 9.9112	9.8501	0.1499	- 7
.4	9.6910	9.9401	9.7526	0.2491 0.2474	.6 .5	.4 .5	9.7629 9.7640	9.9112	9.8517 9.8533	0.1483 0.1467	.6
٠.	9.6937	9.9393	9,7544	0.24/4	.4	.5 .6	9.7650	9.9101	9.8549	0.1467	.5
.7	9.6950	9.9388	9.7562	0.2438	.3	.,,	9.7661	9.9096	9.8565	0.1435	3
.8	9.6963	9.9384	9.7579	0.2421	.2	.8	9.7671	9.9091	9.8581	0.1419	.5 .4 .3 ,2
.8 .9	9.6977	9.9380	9.7597	0.2403	.ī	.9	9.7682	9.9085	9.8597	0.1403	ļ .ī
30.0	9.6990	9.9375	9.7614	0.2386	60.0	36.0	9.7692	9.9080	9.8613	0.1387	54.0
	Lcos	Lsin	L cot	Ltan	deg		l cos	Lain	L cot	L fan	deg
			•			-					

for decimal fractions of a degree continued

deg	Lsin	Lcos	Lian	L cot	<u> </u>	deg	Lsin	L cos	L tan	L cot	<u> </u>
36.0 .1 .2 .3 .4	9.7692 9.7703 9.7713 9.7723 9.7734	9.9080 9.9074 9.9069 9.9063 9.9057	9.8613 9.8629 9.8644 9.8660 9.8676	0.1387 0.1371 0.1356 0.1340 0.1324	54.0 .9 .8 .7	40.5 .6 .7 .8 .9	9.8125 9.8134 9.8143 9.8152 9.8161	9.8810 9.8804 9.8797 9.8791 9.8784	9.9315 9.9330 9.9346 9.9361 9.9376	0.0685 0.0670 0.0654 0.0639 0.0624	49.5 .4 .3 .2 .1
.5 .6 .7 .8 .9	9.7744 9.7754 9.7764 9.7774 9.7785	9.9052 9.9046 9.9041 9.9035 9.9029	9.8692 9.8708 9.8724 9.8740 9.8755	0.1308 0.1292 0.1276 0.1260 0.1245	.5 ,4 .3 .2	41.0 .1 .2 .3 .4	9.8169 9.8178 9.8187 9.8195 9.8204	9.8778 9.8771 9.8765 9.8758 9.8751	9.9392 9.9407 9.9422 9.9438 9.9453	0.0608 0.0593 0.0578 0.0562 0.0547	49.0 .9 .8 .7 .6
37.0 .1 .2 .3 .4	9.7795 9.7805 9.7815 9.7825 9.7835	9.9023 9.9018 9.9012 9.9006 9.9000	9.8771 9.8767 9.8803 9.8818 9.8834	0.1229 0.1213 0.1197 0.1182 0.1166	53.0 .9 .8 .7 .6	.5 .6 .7 .8 .9	9.8213 9.8221 9.6230 9.8238 9.8247	9.8745 9.8738 9.6731 9.6724 9.8718	9.9468 9.9483 9.9499 9.9514 9.9529	0.0532 0.0517 0.0501 0.0486 0.0471	.5 .4 .3 .2 .1
.5 .6 .7 .8 .9	9.7844 9.7854 9.7864 9.7874 9.7884	9.8995 9.8989 9.8983 9.8977 9.8971	9.8850 9.8865 9.8881 9.8897 9.8912	0.1150 0.1135 0.1119 0.1103 0.1088	.5 .4 .3 .2 .1	42.0 .1 .2 .3 .4	9.8255 9.8264 9.6272 9.8280 9.8289	9.8711 9.8704 9.8697 9.8690 9.8683	9.9544 9.9560 9.9575 9.9590 9.9605	0.0456 0.0440 0.0425 0.0410 0.0395	48.0 .9 .8 .7 .6
38.0 .1 .2 .3 .4	9.7893 9.7903 9.7913 9.7922 9.7932	9.8965 9.8959 9.8953 9.8947 9.8941	9.8928 9.8944 9.8959 9.8975 9.8990	0.1072 0.1056 0.1041 0.1025 0.1010	52.0 .9 .8 .7 .6	.5 .6 .7 .8 .9	9.8297 9.8305 9.8313 9.8322 9.8330	9.8676 9.8669 9.8662 9.8655 9.8648	9,9621 9,9636 9,9651 9,9666 9,9681	0.0379 0.0364 0.0349 0.0334 0.0319	.5 .4 .3 .2 .1
.5 .6 .7 .8	9.7941 9.7951 9.7960 9.7970 9.7979	9.8935 9.8929 9.8923 9.8917 9.8911	9,9006 9,9022 9,9037 9,9053 9,9068	0.0994 0.0978 0.0963 0.0947 0.0932	.5 .4 .3 .2 .1	43.0 .1 .2 .3 .4	9.8338 9.8346 9.8354 9.8362 9.8370	9.8641 9.8634 9.8627 9.8620 9.8613	9.9697 9.9712 9.9727 9.9742 9.9757	0.0303 0.0288 0.0273 0.0258 0.0243	47.0 .9 .8 .7 .6
39.0 .1 .2 .3 .4	9.7989 9.7998 9.8007 9.8017 9.8026	9.8905 9.8899 9.8893 9.8887 9.8880	9.9084 9.9099 9.9115 9.9130 9.9146	0.0916 0.0901 0.0885 0.0870 0.0854	51.0 .9 .8 .7 .6	.5 .6 .7 .8 .9	9.8378 9.8386 9.8394 9.8402 9.8410	9.8606 9.8598 9.8591 9.8584 9.8577	9.9772 9.9788 9.9803 9.9818 9.9833	0.0228 0.0212 0.0197 0.0182 0.0167	.5 .4 .3 .2
.5 .6 .7 .8 .9	9.8035 9.8044 9.8053 9.8063 9.8072	9.8874 9.8868 9.8862 9.8855 9.8849	9.9161 9.9176 9.9192 9.9207 9.9223	0.0839 0.0824 0.0808 0.0793 0.0777	.5 .4 .3 .2 .1	44.0 .1 .2 .3 .4	9.8418 9.8426 9.8433 9.8441 9.8449	9.8569 9.8562 9.8555 9.8547 9.8540	9.9848 9.9864 9.9879 9.9894 9.9909	0.01 <i>5</i> 2 0.0136 0.0121 0.0106 0.0091	46.0 .9 .8 .7 .6
40.0 .1 .2 .3 .4	9.8081 9.8090 9.8099 9.8108 9.8117	9.8843 9.8836 9.8830 9.8823 9.8817	9.9238 9.9254 9.9269 9.9284 9.9300	0.0762 0.0746 0.0731 0.0716 0.0700	50.0 .9 .8 .7 .6	.5 .6 .7 .8 .9	9.8457 9.8464 9.8472 9.8480 9.8487	9.8532 9.8525 9.8517 9.8510 9.8502	9.9924 9.9939 9.9955 9.9970 9.9985	0.0076 0.0061 0.0045 0.0030 0.0015	.5 .4 .3 .2 .1
40.5	9.8125	9.8810	9.9315	0.0685	49.5	45.0	9.8495	9.8495	0.0000	0.0000	45.0
	Lcos	Lsin	L cot	Ltan	deg		L cos	L sin	L cot	L tan	deg

Natural logarithms

	r																		
	0	1	2	3	4	5	6	7	8	9	1	2		4		6		8	9
1.0 1.1 1.2 1.3 1.4	0.0000 0.0953 0.1823 0.2624 0.3365	0100 1044 1906 2700 3436	0198 1133 1989 2776 3507	0296 1222 2070 2852 3577	0392 1310 2151 2927 3646	0488 1398 2231 3001 3716	0583 1484 2311 3075 3784	0677 1570 2390 3148 3853	0770 1655 2469 3221 3920	0862 1740 2546 3293 3988	9 8 7	19 17 16 15	26 24 22	35 32 30	40 37	57 52 48 44 41	52	76 70 64 59 55	72 67
1.5 1.6 1.7 1.8 1.9	0.4055 0.4700 0.5306 0.5378 0.6419	4121 4762 5365 5933 6471	4187 4824 5423 5988 6523	4253 4836 5481 6043 6575	4318 4947 5539 6098 6627	4383 5008 5596 6152 6678	4447 5068 5653 6206 6729	4511 5128 5710 6259 6780	4574 5188 5766 6313 6831	4637 5247 5822 6366 6881	6 6 5	13 12 11 11	18 17 16	24 23 22	32 30 29 27 26	39 36 34 32 31	42 40	52 48 46 43 41	55 51 49
2.0 2.1 2.2 2.3 2.4	0.6931 0.7419 0.7885 0.8329 0.8755	6981 7467 7930 8372 8796	7031 7514 7975 8416 8838	7080 7561 8020 8459 8879	7129 7608 8065 8502 8920	7178 7655 8109 8544 8961	7227 7701 8154 8537 9002	7275 7747 8198 8629 9042	7324 7793 8242 8671 9083	7372 7839 8286 8713 9123	5 5 4 4 4	9	15 14 13 13 12	19	24 23 22 21 20		31 30	37 36	44 42 40 38 37
2.5 2.6 2.7 2.8 2.9	0.9163 0.9555 0.9933 1.0296 1.0647	9203 9594 9969 0332 0682	9243 9632 1.0006 0367 0716	9282 9670 0043 0403 0750	9322 9708 0080 0438 0784	9361 9746 0116 0473 0818	9400 9783 0152 0508 0852	9439 9821 0188 0543 0886	9478 9858 0225 0578 0919	9517 9895 0260 0613 0953	4 4 4 4 3	8 7 7 7	12 11 11 11	15 15 14	20 19 18 18 17	24 23 22 21 20	25	30 29	35 34 33 32 31
3.0 3.1 3.2 3.3 3.4	1.0986 1.1314 1.1632 1.1939 1.2238	1019 1346 1663 1969 2267	1053 1378 1694 2000 2296	1086 1410 1725 2030 2326	1119 1442 1756 2060 2355	1151 1474 1787 2090 2384	1184 1506 1817 2119 2413	1217 1537 1848 2149 2442	1249 1569 1878 2179 2470	1282 1600 1909 2208 2499	3 3 3 3	7 6 6 6	10 10 9 9	13 12 12		20 19 18 18 18	22 22 21	25 25 24	30 29 28 27 26
3.5 3.6 3.7 3.8 3.9	1.2528 1.2809 1.3033 1.3350 1.3610	2556 2837 3110 3376 3635	2585 2865 3137 3403 3661	2613 2892 3164 3429 3686	2641 2920 3191 3455 3712	2669 2947 3218 3431 3737	2698 2975 3244 3507 3762	2726 3002 3271 3533 3788	2754 3029 3297 3558 3813	2782 3056 3324 3584 3838	3 3 3 3	6 5 5 5 5	8 8 8 8	11 11 10		16	20 19 19 18 18	22 21	25 25 24 23 23
4.0 4.1 4.2 4.3 4.4	1.3863 1.4110 1.4351 1.4586 1.4816	3888 4134 4375 4609 4839	3913 4159 4398 4633 4861	3938 4183 4422 4656 4884	3962 4207 4446 4679 4907	3987 4231 4469 4702 4929	4012 4255 4493 4725 4951	4036 4279 4516 4748 4974	4061 4303 4540 4770 4996	4085 4327 4563 4793 5019	2 2 2 2 2	5 5 5 5	7 7 7 7	10	12 12 12 12	15 14 14 14 14	17 17 16 16 16	19 19 18	22 22 21 21 20
4.5 4.6 4.7 4.8 4.9	1.5041 1.5261 1.5476 1.5686 1.5892	5063 5282 5497 5707 5913	5085 5304 5518 5728 5933	5107 5326 5539 5748 5953	5129 5347 5560 5769 5974	5151 5369 5581 5790 5994	5173 5390 5602 5810 6014	5195 5412 5623 5831 6034	5217 5433 5644 5851 6054	5239 5454 5665 5872 6074	2 2 2 2 2	4 4 4 4	7 6 6 6	8	11 11 10 10	13 13 13 12 12		18 17 17 16 16	20 19 19 19 19
5.0 5.1 5.2 5.3 5.4	1.6094 1.6292 1.6487 1.6677 1.6864	6114 6312 6506 6696 6882	6134 6332 6525 6715 6901	6154 6351 6544 6734 6919	6174 6371 6563 6752 6938	6194 6390 6582 6771 6956	6214 6409 6601 6790 6974	6233 6429 6620 6808 6993	6253 6448 6639 6827 7011	6273 6467 6658 6845 7029	2 2 2 2 2	4 4 4 4	6 6 6 5	8 8 8 7 7	10 10 10 9	12 12 11 11	14 13 13	15	18 17 17

Natural logarithms of 10^{+n}

n	1 1	2	3	4	5	6	7	8	9
loge 10 ⁿ	2.3026	4.6052	6.9078	9.2103	11.5129	13.8155	16.1181	18.4207	20.7233

Natural logarithms continued

	0	1	2	3	4	5	6	7	8	9	_	_		an d				_	_
	<u> </u>	! 	<u> </u>	<u> </u> 			 		7100	7010	1	2	3	4	9		7	8	9
5.5 5.6	1.7047 1.7228	7066 7246	7084 7263	7102 7281	7120 7299	7138	7156 7334	7174	7192 7370	7210 7387	2	4	5	7	9	11		14	16
5.7 5.8	1.7405 1.7579	7422 7596	7440 7613	7457 7630	7475 7647	7492 7664	7509 7681	7527 7699	7544 7716	7561 7733	2 2 2	3	5 5 5	7 7 7	9	10 10	12	14	16 15
5.9	1.7750	7766	7783	7800	7817	7834	7851	7867	7884	7901 		3	3	′	8	10	12	13	15
6.0	1.7918	7934	7951	7967	7984	8001	8017 8181	8034 8197	8050 8213	8066 8229	2 2	3	5 5	7 6		10 10	12 11	13 13	
6.1 6.2	1.8083	8099 8262	8116	8132 8294	8148 8310	8165 8326	8342	8358	8374	8390	2 2	3	5	6		10	11	13	14
6.3 6.4	1.8405 1.8563	8421 8579	8437 8594	8453 8610	8469 8625	8485 8641	8500 8656	8516 8672	8532 8687	8547 8703	2	3	5	6	8	9	11	13 12	14
6.5	1.8718	8733	8749	8764	8779	8795	8810	8825	8840	8856	2	3	5	6	8	9	11	12	14
6.6	1.8871	8886 9036	8901 9051	8916 9066	8931 9081	8946 9095	8961 9110	8976 9125	8991 9140	9006 9155	2 1	3	5	6	8 7	9	11	12	14 13
6.8	1.9169	9184 9330	9199 9344	9213 9359	9228 9373	9242 9387	9257 9402	9272 9416	9286 9430	9301 9445	1	3	4	6	7	9	10	12	13
7.0 7.1	1.9459 1.9601	9473 9615	9488 9629	9502 9643	9516 9657	9530 9671	9544 9685	9559 9699	9573 9713	9587 9727	1	3	4	6	7 7	9	10 10	11	13 13
7.2 7.3	1.9741	9755 9892	9769 9906	9782 9920	9796 9933	9810 9947	9824 9961	9838 9974	9851 9988	9865 2.0001	1	3	4	6 5	7 7	8 8	10 10	11	12 12
7.4	2.0015	0028	0042	0055	0069	0082	0096	0109	0122	0136	1	3	4	5	7	8	9	11	12
7.5	2.0149	0162	0176	0189	0202	0215	0229	0242	0255	0268	į	3	4	5	7	8			12
7.6 7.7	2.0281	0295 0425	0308 0438	0321 0451	0334 0464	0347 0477	0360 0490	0373	0386	0399 0528	1	3	4	5	7	8	9	10	12 12
7.8 7.9	2.0541 2.0669	0554 0681	0567 0694	0580 0707	0592 0719	0605 0732	0618 0744	0631 0757	0643 0769	0656 0782	1	3	4	5 5	6	8		10 10	
8.0	2.0794	0807	0819	0832	0844	0857	0869	0882	0894	0906	١,	3	4	5	6	7	9	10	11
8.1 8.2	2.0919	0931	0943 1066	0956 1078	0968	0980	0992	1005	1017	1029	l i	2 2	4	5	6	, 7 7	9	10	11
8.3 8.4	2.1163	1175	1187	1199	1211	1223	1235	1247	1258	1270 1389	ļį	2 2	4	5	6	7	8		ii
0.4	2.1202	1277	,,,,,,	1310	1330	1342	1555	1300	1377	1307	١.	~	7	,	٥	′	Ü	,	''
8.5 8.6	2.1401 2.1518	1412 1529	1424 1541	1436 1552	1448 1564	1459 1576	1471 1587	1483 1599	1494 1610	1506 1622	1	2	4	5 5	6	7	8 8	9	11 10
8.7 8.8	2.1633	1645	1656 1770	1668 1782	1679 1793	1691 1804	1702 1815	1713 1827	1725 1838	1736 1849	i i	2 2	3	5	6	, 7 7	8	9	10
8.9	2.1861	1872	1883	1894	1905	1917	1928	1939	1950	1961	i	2	3	4	6	7	8	9	10
9.0	2.1972	1983	1994	2006	2017	2028	2039	2050	2061	2072	1	2	3	4	6	7	В	9	10
9.1 9.2	2.2083 2.2192	2094 2203	2105 2214	2116 2225	2127 2235	2138 2246	2148 2257	2159 2268	2170 2279	2181 2289	1	2	3	4	5	7	8 8	9	10 10
9.3 9.4	2.2300	2311 2418	2322 2428	2332 2439	2343 2450	2354 2460	2364 2471	2375 2481	2386 2492	2396 2502	1	2	3	4	5 5	6	7	9 8	10 10
9.5	2.2513	2523	2534	2544	2555	2565	2576	2586	2597	2607	١,	2	3	4	5	6	7	8	9
9.6 9.7	2.2618	2628 2732	2638 2742	2649 2752	2659 2762	2670 2773	2680 2783	2690 2793	2701 2803	2711 2814	i	2 2	3	4	5 5 5	6	7	8	ý
9.8 9.9	2.2824	2834 2935	2844 2946	2854 2956	2865 2966	287.5 2976	2885	2895 2996	2905 3006	2915 3016	i	2 2	3	4	5	6	7	8	9
10.0	2.3026	1 2/33	2/70	1,00	2,00	1 2773	*/**	2,,0	1 ~~~	1 ~	Ι '	_	٠	~	•	٠	Ι΄	٥	,

Natural logarithms of 10^{-n}

п	1	1	-1	2	3	4	5	l	6	7	1 8	9
log _e 10	~			5.3948	7.0922	10.789	7 12.4	871	14.1845	17.8819	19.57	93 21,2767

Hyperbolic sines [sinh $x = \frac{1}{2}(e^x - e^{-x})$]

x	0	1	2	3	4	5	6	7	8	9	avg diff
0.0	0.0000	0.0100	0.0200	0.0300	0.0400	0.0500	0.0600	0.0701	0.0801	0.0901	100
.1	0.1002	0.1102	0.1203	0.1304	0.1405	0.1506	0.1607	0.1708	0.1810	0.1911	101
.2	0.2013	0.2115	0.2218	0.2320	0.2423	0.2526	0.2629	0.2733	0.2837	0.2941	103
.3	0.3045	0.3150	0.3255	0.3360	0.3466	0.3572	0.3678	0.3785	0.3892	0.4000	106
.4	0.4108	0.4216	0.4325	0.4434	0.4543	0.4653	0.4764	0.4875	0.4986	0.5098	110
0.5 .6 .7 .8	0.5211 0.6367 0.7586 0.8881 1.027	0.5324 0.6485 0.7712 0.9015 1.041	0.5438 0.6605 0.7838 0.9150 1.055	0.5552 0.6725 0.7966 0.9286 1.070	0.5666 0.6846 0.8094 0.9423 1.085	0.5782 0.6967 0.8223 0.9561 1.099	0.5897 0.7090 0.8353 0.9700 1.114	0.6014 0.7213 0.8484 0.9840 1.129	0.6131 0.7336 0.8615 0.9981 1.145	0.6248 0.7461 0.8748 1.012 1.160	116 122 130 138 15
1.0	1.175	1.191	1.206	1.222	1.238	1.254	1.270	1.286	1.303	1.319	16
.1	1.336	1.352	1.369	1.386	1.403	1.421	1.438	1.456	1.474	1.491	17
.2	1.509	1.528	1.546	1.564	1.583	1.602	1.621	1.640	1.659	1.679	19
.3	1.698	1.718	1.738	1.758	1.779	1.799	1.820	1.841	1.862	1.883	21
.4	1.904	1.926	1.948	1.970	1.992	2.014	2.037	2.060	2.083	2.106	22
1.5	2.129	2.153	2.177	2.201	2.225	2.250	2.274	2.299	2.324	2.350	25
.6	2.376	2.401	2.428	2.454	2.481	2.507	2.535	2.562	2.590	2.617	27
.7	2.646	2.674	2.703	2.732	2.761	2.790	2.820	2.850	2.881	2.911	30
.8	2.942	2.973	3.005	3.037	3.069	3.101	3.134	3.167	3.200	3.234	33
.9	3.268	3.303	3.337	3.372	3.408	3.443	3.479	3.516	3.552	3.589	36
2.0	3.627	3.665	3.703	3.741	3.780	3.820	3.859	3.899	3.940	3.981	39
.1	4.022	4.064	4.106	4.148	4.191	4.234	4.278	4.322	4.367	4.412	44
.2	4.457	4.503	4.549	4.596	4.643	4.691	4.739	4.788	4.837	4.887	48
.3	4.937	4.988	5.039	5.090	5.142	5.195	5.248	5.302	5.356	5.411	53
.4	5.466	5.522	5.578	5.635	5.693	5.751	5.810	5.869	5.929	5.989	58
2.5 .6 .7 .8	6.050 6.695 7.406 8.192 9.060	6.112 6.763 7.481 8.275 9.151	6.174 6.831 7.557 8.359 9.244	6.237 6.901 7.634 8.443 9.337	6.300 6.971 7.711 8.529 9.431	6.365 7.042 7.789 8.615 9.527	6.429 7.113 7.868 8.702 9.623	6.495 7.185 7.948 8.790 9.720	6.561 7.258 8.028 8.879 9.819	6.627 7.332 8.110 8.969 9.918	64 71 79 87 96
3.0	10.02	10.12	10.22	10.32	10.43	10.53	10.64	10.75	10.86	10.97	11
.1	11.08	11.19	11.30	11.42	11.53	11.65	11.76	11.88	12.00	12.12	12
.2	12.25	12.37	12.49	12.62	12.75	12.88	13.01	13.14	13.27	13.40	13
.3	13.54	13.67	13.81	13.95	14.09	14.23	14.38	14.52	14.67	14.82	14
.4	14.97	15.12	15.27	15.42	15.58	15.73	15.89	16.05	16.21	16.38	16
3.5 .6 .7 .8	16.54 18.29 20.21 22.34 24.69	16.71 18.47 20.41 22.56 24.94	16.88 18.66 20.62 22.79 25.19	17.05 18.84 20.83 23.02 25.44	17.22 19.03 21.04 23.25 25.70	17.39 19.22 21.25 23.49 25.96	17.57 19.42 21.46 23.72 26.22	17.74 19.61 21.68 23.96 26.48	17.92 19.81 21.90 24.20 26.75	18.10 20.01 22.12 24.45 27.02	17 19 21 24 26
4.0	27.29	27.56	27.84	28.12	28.40	28.69	28.98	29.27	29.56	29.86	29
.1	30.16	30.47	30.77	31.08	31.39	31.71	32.03	32.35	32.68	33.00	32
.2	33.34	33.67	34.01	34.35	34.70	35.05	35.40	35.75	36.11	36.48	35
.3	36.84	37.21	37.59	37.97	38.35	38.73	39.12	39.52	39.91	40.31	39
.4	40.72	41.13	41.54	41.96	42.38	42.81	43.24	43.67	44.11	44.56	43
4.5	45.00	45.46	45.91	46.37	46.84	47.31	47.79	48.27	48.75	49.24	47
.6	49.74	50.24	50.74	51.25	51.77	52.29	52.81	53.34	53.88	54.42	52
.7	54.97	55.52	56.08	56.64	57.21	57.79	58.37	58.96	59.55	60.15	58
.8	60.75	61.36	61.98	62.60	63.23	63.87	64.51	65.16	65.81	66.47	64
.9	67.14	67.82	68.50	69.19	69.88	70.58	71.29	72.01	72.73	73.46	71
5.0	74.20							l		l	1

If x > 5, $\sinh x = \frac{1}{2} (e^x)$ and $\log_{10} \sinh x = 10.43431x + 0.6990 - 1$, correct to four significant figures.

Hyperbolic cosines [cosh $x = \frac{1}{2}(e^x + e^{-x})$]

x	0	<u> </u> ,_	2	3	4	5	6	7	8	9	avg diff
0.0	1.000	1.000	1.000	1.000	1.001	1.001	1.002	1.002	1.003	1.004	1
.1	1.005	1.006	1.007	1.008	1.010	1.011	1.013	1.014	1.016	1.018	2
.2	1.020	1.022	1.024	1.027	1.029	1.031	1.034	1.037	1.039	1.042	3
.3	1.045	1.048	1.052	1.055	1.058	1.062	1.066	1.069	1.073	1.077	4
.4	1.081	1.085	1.090	1.094	1.098	1.103	1.108	1.112	1.117	1.122	5
0.5	1.128	1.133	1.138	1.144	1.149	1.155	1.161	1.167	1.173	1.179	6
.6	1.185	1.192	1.198	1.205	1.212	1.219	1.226	1.233	1.240	1.248	7
.7	1.255	1.263	1.271	1.278	1.287	1.295	1.303	1.311	1.320	1.329	8
.8	1.337	1.346	1.355	1.365	1.374	1.384	1.393	1.403	1.413	1.423	10
.9	1.433	1.443	1.454	1.465	1.475	1.486	1.497	1.509	1.520	1.531	11
1.0	1.543	1.555	1.567	1.579	1.591	1.604	1.616	1.629	1.642	1.655	13
.1	1.669	1.682	1.696	1.709	1.723	1.737	1.752	1.766	1.781	1.796	14
.2	1.811	1.826	1.841	1.857	1.872	1.888	1.905	1.921	1.937	1.954	16
.3	1.971	1.988	2.005	2.023	2.040	2.058	2.076	2.095	2.113	2.132	18
.4	2.151	2.170	2.189	2.209	2.229	2.249	2.269	2.290	2.310	2.331	20
1.8	2.352	2.374	2.395	2.417	2.439	2.462	2.484	2.507	2.530	2.554	23
.6	2.577	2.601	2.625	2.650	2.675	2.700	2.725	2.750	2.776	2.802	25
.7	2.828	2.855	2.882	2.909	2.936	2.964	2.992	3.021	3.049	3.078	28
.8	3.107	3.137	3.167	3.197	3.228	3.259	3.290	3.321	3.353	3.385	31
.9	3.418	3.451	3.484	3.517	3.551	3.585	3.620	3.655	3.690	3.726	34
2.0	3.762	3.799	3.835	3.873	3.910	3.948	3.987	4.026	4.065	4.104	38
.1	4.144	4.185	4.226	4.267	4.309	4.351	4.393	4.436	4.480	4.524	42
.2	4.568	4.613	4.658	4.704	4.750	4.797	4.844	4.891	4.939	4.988	47
.3	5.037	5.087	5.137	5.188	5.239	5.290	5.343	5.395	5.449	5.503	52
.4	5.557	5.612	5.667	5.723	5.780	5.837	5.895	5.954	6.013	6.072	58
2.5	6.132	6.193	6.255	6.317	6.379	6.443	6.507	6.571	6.636	6.702	64
.6	6.769	6.836	6.904	6.973	7.042	7.112	7.183	7.255	7.327	7.400	70
.7	7.473	7.548	7.623	7.699	7.776	7.853	7.932	8.011	8.091	8.171	78
.8	8.253	8.335	8.418	8.502	8.587	8.673	8.759	8.847	8.935	9.024	86
.9	9.115	9.206	9.298	9.391	9.484	9.579	9.675	9.772	9.869	9.968	95
3.0	10.07	10.17	10.27	10.37	10.48	10.58	10.69	10.79	10.90	11.01	11
.1	11.12	11.23	11.35	11.46	11.57	11.69	11.81	11.92	12.04	12.16	12
.2	12.29	12.41	12.53	12.66	12.79	12.91	13.04	13.17	13.31	13.44	13
.3	13.57	13.71	13.85	13.99	14.13	14.27	14.41	14.56	14.70	14.85	14
.4	15.00	15.15	15.30	15.45	15.61	15.77	15.92	16.08	16.25	16.41	16
3.5	16.57	16.74	16.91	17.08	17.25	17.42	17.60	17.77	17.95	18.13	17
.6	18.31	18.50	18.68	18.87	19.06	19.25	19.44	19.64	19.84	20.03	19
.7	20.24	20.44	20.64	20.85	21.06	21.27	21.49	21.70	21.92	22.14	21
.8	22.36	22.59	22.81	23.04	23.27	23.51	23.74	23.98	24.22	24.47	23
.9	24.71	24.96	25.21	25,46	25.72	25.98	26.24	26.50	26.77	27.04	26
4.0	27.31	27.58	27.86	28.14	28.42	28.71	29.00	29.29	29.58	29.88	29
.1	30.18	30.48	30.79	31.10	31.41	31.72	32.04	32.37	32.69	33.02	32
.2	33.35	33.69	34.02	34.37	34.71	35.06	35.41	35.77	36.13	36.49	35
.3	36.86	37.23	37.60	37.98	38.36	38.75	39.13	39.53	39.93	40.33	39
.4	40.73	41.14	41.55	41.97	42.39	42.82	43.25	43.68	44.12	44.57	43
4.5	45.01	45.47	45.92	46.38	46.85	47.32	47.80	48.28	48.76	49.25	47
.6	49.75	50.25	50.75	51.26	51.78	52.30	52.82	53.35	53.89	54.43	52
.7	54.98	55.53	56.09	56.65	57.22	57.80	58.38	58.96	59.56	60.15	58
.8	60.76	61.37	61.99	62.61	63.24	63.87	64.52	65.16	65.82	66.48	64
.9	67.15	67.82	68.50	69.19	69.89	70.59	71.30	72.02	72.74	73.47	71
5.0	74.21	l	l				Į		ļ		[

If x > 5, $\cosh x = \frac{1}{2} e^{x}$, and $\log_{10} \cosh x = (0.4343)x + 0.6990 - 1$, correct to four significant figures.

Hyperbolic tangents [tanh $x = (e^x - e^{-x})/(e^x + e^{-x}) = \sinh x/\cosh x$]

×	0	1	2	3	4	5	6	7	8	9	diff
0.0	.0000	.0100	.0200	.0300	.0400	.0500	.0599	.0699	.0798	.0898	100
.1	.0997	.1096	.1194	.1293	.1391	.1489	.1587	.1684	.1781	.1878	98
.2	.1974	.2070	.2165	.2260	.2355	.2449	.2543	.2636	.2729	.2821	94
.3	.2913	.3004	.3095	.3185	.3275	.3364	.3452	.3540	.3627	.3714	89
.4	.3800	.3885	.3969	.4053	.4136	.4219	.4301	.4382	.4462	.4542	82
0.5	.4621	.4700	.4777	.4854	.4930	.5005	.5080	.5154	.5227	.5299	75
.6	.5370	.5441	.5511	.5581	.5649	.5717	.5784	.5850	.5915	.5980	67
.7	.6044	.6107	.6169	.6231	.6291	.6352	.6411	.6469	.6527	.6584	60
.8	.6640	.6696	.6751	.6805	.6858	.6911	.6963	.7014	.7064	.7114	52
.9	.7163	.7211	.7259	.7306	.7352	.7398	.7443	.7487	.7531	.7574	45
1.0 .1 .2 .3	.7616 .8005 .8337 .8617 .8854	.7658 .8041 .8367 .8643 .8875	.7699 .8076 .8397 .8668 .8896	.7739 .8110 .8426 .8693 .8917	.7779 .8144 .8455 .8717 .8937	.7818 .8178 .8483 .8741 .8957	.7857 .8210 .8511 .8764 .8977	.7895 .8243 .8538 .8787 .8996	.7932 .8275 .8565 .8810 .9015	.7969 .8306 .8591 .8832 .9033	39 33 28 24 20
1.5	.9052	.9069	.9087	.9104	.9121	.9138	.9154	.9170	.9186	.9202	17
.6	.9217	.9232	.9246	.9261	.9275	.9289	.9302	.9316	.9329	.9342	14
.7	.9354	.9367	.9379	.9391	.9402	.9414	.9425	.9436	.9447	.9458	11
.8	.9468	.9478	.9488	.9498	.9508	.9518	.9527	.9536	.9545	.9554	9
.9	.9562	.9571	.9579	.9587	.9595	.9603	.9611	.9619	.9626	.9633	8
2.0	.9640	.9647	.9654	.9661	.9668	.9674	.9680	.9687	.9693	.9699	6
.1	.9705	.9710	.9716	.9722	.9727	.9732	.9738	.9743	.9748	.9753	5
.2	.9757	.9762	.9767	.9771	.9776	.9780	.9785	.9789	.9793	.9797	4
.3	.9801	.9805	.9809	.9812	.9816	.9820	.9823	.9827	.9830	.9834	4
.4	.9837	.9840	.9843	.9846	.9849	.9852	.9855	.9858	.9861	.9863	3
2.5	.9866	.9869	.9871	.9874	.9876	.9879	,9881	.9884	.9886	.9888	2
.6	.9890	.9892	.9895	.9897	.9899	.9901	,9903	.9905	.9906	.9908	2
.7	.9910	.9912	.9914	.9915	.9917	.9919	,9920	.9922	.9923	.9925	2
.8	.9926	.9928	.9929	.9931	.9932	.9933	,9935	.9936	.9937	.9938	1
.9	.9940	.9941	.9942	.9943	.9944	.9945	,9946	.9947	.9949	.9950	1
3.0 4.0 5.0	.9951 .9993 .9999	.9959 .9995	.9967 .9996	.9973 .9996	.9978 .9997	.9982 .9998	.9985 .9998	.9988 .9998	.9990 .9999	.9992 .9999	4

If x > 5, tanh x = 1.0000 to four decimal places.

Multiples of 0.4343 $[0.43429448 = log_{10} e]$

x] 0	1	1 2	3	[4	1 5	6_	7	8	9
0.0	0.0000	0.0434	0.0869	0.1303	0.1737	0.2171	0.2606	0.3040	0.3474	0.3909
1.0	0.4343	0.4777	0.5212	0.5646	0.6080	0.6514	0.6949	0.7383	0.7817	0.8252
2.0	0.8686	0.9120	0.9554	0.9989	1.0423	1.0857	1.1292	1.1726	1.2160	1.2595
3.0	1.3029	1.3463	1.3897	1.4332	1.4766	1.5200	1.5635	1.6069	1.6503	1.6937
4.0	1.7372	1.7806	1.8240	1.8675	1.9109	1.9543	1.9978	2.0412	2.0846	2.1280
5.0	2.1715	2.2149	2.2583	2.3018	2.3452	2.3886	2.4320	2.4755	2.5189	2.5623
6.0	2.6058	2.6492	2.6926	2.7361	2.7795	2.8229	2.8663	2.9098	2.9532	2.9966
7.0	3.0401	3.0835	3.1269	3.1703	3.2138	3.2572	3.3006	3.3441	3.3875	3.4309
8.0	3.4744	3.5178	3.5612	3.6046	3.6481	3.6915	3.7349	3.7784	3.8218	3.8652
9.0	3.9087	3.9521	3.9955	4.0389	4.0824	4.1258	4.1692	4.2127	4.2561	4.2995

Multiples of 2.3026 [2.3025851 = $1/0.4343 = \log_e 10$]

X	1 0	1 1	2	3	4	5	6	7	8	9
0.0	0.0000	0.2303	0.4605	0.6908	0.9210	1.1513	1.3816	1.6118	1.8421	2.0723
1.0	2.3026	2.5328	2.7631	2.9934	3.2236	3.4539	3.6841	3.9144	4.1447	4.3749
2.0	4.6052	4.8354	5.0657	5.2959	5.5262	5.7565	5.9867	6.2170	6.4472	6.6775
3.0	6.9078	7.1380	7.3683	7.5985	7.8288	8.0590	8.2893	8.5196	8.7498	8.9801
4.0	9.2103	9.4406	9.6709	9,9011	10.131	10.362	10.592	10.822	11.052	11.283
5.0	11.513	11.743	11.973	12.204	12.434	12.664	12.894	13.125	13.355	13.585
6.0	13.816	14.046	14.276	14.506	14.737	14.967	15.197	15.427	15.658	15.888
7.0	16.118	16.348	16.579	16.809	17.039	17.269	17.500	17.730	17.960	18.190
8.0	18.421	18.651	18.881	19.111	19.342	19.572	19.802	20.032	20.263	20.493
9.0	20.723	20.954	21.184	21.414	21.644	21.875	22.105	22.335	22.565	22.796

Table I-J₀(z)

Bessel functions

									_	
E	0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9
0	1.0000	0.9975	0.9900	0.9776	0.9604	0.9385	0.9120	0.8812	0.8463	0.8075
1	0.7652	0.7196	0.6711	0.6201	0.5669	0.5118	0.4554	0.3980	0.3400	0.2818
2	0.2239	0.1666	0.1104	0.0555	0.0025	-0.0484	-0.0968	-0.1424	-0.1850	-0.2243
3	-0.2601	-0.2921	-0.3202	-0.3443	-0.3643	-0.3801	-0.3918	-0.3992	- 0.4026	-0.4018
4	-0.3971	-0.3887	-0.3766	-0.3610	-0.3423	-0.3205	-0.2961	-0.2693	-0.2404	-0.2097
5	-0.1776	-0.1443	-0.1103	0.0758	0.0412	-0.0068	+0.0270	0.0599	0.0917	0.1220
6	0.1506	0.1773	0.2017	0.2238	0.2433	0.2601	0.2740	0.2851	0.2931	0.2981
7	0.3001	0.2991	0.2951	0.2882	0.2786	0.2663	0.2516	0.2346	0.2154	0.1944
8	0.1717	0.1475	0.1222	0.0960	0.0692	0.0419	0.0146	0.0125	~-0.0392	-0.0653
9	-0.0903	-0.1142	0.1367	0.1577	-0.1768	-0.1939	-0.2090	-0.2218	-0.2323	-0.2403
10	-0.2459	-0.2490	0.2496	-0.2477	-0.2434	-0.2366	-0.2276	-0.2164	0.2032	-0.1881
11	-0.1712	-0.1528	-0.1330	0.1121	0.0902	-0.0677	-0.0446	-0.0213	+0.0020	0.0250
12	0.0477	0.0697	0.0908	0.1108	0.1296	0.1469	0.1626	0.1766	0.1887	0.1988
13	0.2069	0.2129	0,2167	0.2183	0.2177	0.2150	0.2101	0.2032	0.1943	0.1836
14	0.1711	0.1570	0.1414	0.1245	0.1065	0.0875	0.0679	0.0476	0.0271	0.0064
15	-0.0142	-0.0346	-0.0544	-0.0736	-0.0919	-0.1092	-0.1253	-0.1401	0.1533	-0.1650

Tab	le II—Jı(z))						continu	ed Besse	i functions
<u>z </u>	0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9
0	0.0000	0.0499	0.0995	0.1483	0.1960	0.2423	0.2867	0.3290	0.3688	0.4059
- 1	0.4401	0.4709	0.4983	0.5220	0.5419	0.5579	0.5699	0.5778	0.5815	0.5812
2	0.5767	0.5683	0.5560	0.5399	0.5202	0.4971	0.4708	0.4416	0.4097	0.3754
3	0.3391	0.3009	0.2613	0.2207	0.1792	0.1374	0.0955	0.0538	0.0128	-0.0272
4	-0.0660	-0.1033	-0.1386	-0.1719	-0.2028	-0.2311	-0.2566	-0.2791	-0.2985	-0.3147
5	-0.3276	-0.3371	-0.3432	-0.3460	-0.3453	-0.3414	-0.3343	-0.3241	-0.3110	-0.2951
6	-0.2767	-0.2559	-0.2329	-0.2081	-0.1816	-0,1\$38	-0.1250	-0.0953	-0.0652	-0.0349
7	-0.0047	+0.0252	0.0543	0.0826	0.1096	0.1352	0.1592	0.1813	0.2014	0.2192
8	0.2346	0.2476	0.2580	0.2657	0.2708	0.2731	0.2728	0.2697	0.2641	0.2559
9	0.2453	0.2324	0.2174	0.2004	0.1816	0.1613	0.1395	0.1166	0.0928	0.0684
10	0.0435	0.0184	-0.0066	-0.0313	-0.0555	-0.0789	-0,1012	-0.1224	-0.1422	-0.1603
11	-0.1768	-0.1913	-0.2039	-0.2143	-0.2225	-0.2284	0.2320	-0.2333	-0.2323	-0.2290
12	-0.2234	-0.2157	-0.2060	-0.1943	-0.1807	-0.1655	-0.1487	-0.1307	-0.1114	-0.0912
13	-0.0703	-0.0489	-0.0271	-0.0052	+0.0166	0.0380	0.0590	0.0791	0.0984	0,1165
14	0.1334	0.1488	0.1626	0.1747	0.1850	0.1934	0.1999	0.2043	0.2066	0.2069
15	0.2051	0.2013	0.1955	0.1879	0,1784	0.1672	0.1544	0.1402	0,1247	0.1080

ĭab	le IIIJ ₂ (z	:)						continu	red Besse	I functions
z	0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9
0	0.0000	0.0012	0.0050	0.0112	0.0197	0.0306	0.0437	0.0588	0.0758	0.0946
1	0.1149	0.1366	0.1593	0.1830	0.2074	0.2321	0.2570	0.2817	0.3061	0.3299
2	0.3528	0.3746	0.3951	0.4139	0.4310	0.4461	0.4590	0.4696	0.4777	0,4832
3	0.4861	0.4862	0.4835	0.4780	0.4697	0.4586	0.4448	0.4283	0.4093	0.3879
4	0.3641	0.3383	0.3105	0.2811	0.2501	0.2178	0.1846	0.1506	0.1161	0.0813
	le IV—J ₃ (2		1 00				1			
x		0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9
0	0.0000	0.0000	0.0002	0.0006	0.0013	0.0026	0.0044	0.0069	0.0102	0.0144
1	0.0196	0.0257	0.0329	0.0411	0.0505	0.0610	0.0725	0.0851	0.0988	0.1134
2	0.1289	0.1453	0.1623	0.1800	0.1981	0.2166	0.2353	0.2540	0.2727	0.2911

Table V-J₄(z)

0.3091

0.4302

0.3264

0.4333

0.3431

0.4344

0.3588

0.4333

3

×	0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9
0	0.0000	0.0000	0.0000	0.0000	0.0001	0.0002	0.0003	0.0006	0.0010	0.0016
1	0.0025	0.0036	0.0050	0.0068	0.0091	0.0118	0.0150	0.0188	0.0232	0.0283
2	0.0340	0.0405	0.0476	0.0556	0.0643	0.0738	0.0840	0.0950	0.1067	0.1190
3	0.1320	0.1456	0.1597	0.1743	0.1891	0.2044	0.2198	0.2353	0.2507	0.2661
4	0.2811	0.2958	0.3100	0.3236	0.3365	0.3484	0.3594	0.3693	0.3780	0.3853

0.3734

0.4301

0.3868

0.4247

0.3988

0.4171

0.4092

0.4072

0.4180

0.3952

0.4250

0.3811

Table VI continued Bessel functions

P	Jp(1)	Jp(2)	(Jp(3) _	Jp(4)	Jp(5)	Jp(6)	Jp(7)	Jp(8)	Jp(9)	Jp(10)	J _P (11)	Jp(12)	Jp(13)	Jp(14)
0	+.7652	+.2239	2601	3971	1776	+.1506	+.3001	+.1717	09033	2459	1712	+.04769	+.2069	+.1711
0.5	+.6714	+.5130	+.06501	3019	3422	09102	+.1981	+.2791	+.1096	1373	2406	1236	+.09298	+.2112
1.0	+.4401	+.5767	+.3391	06604	3276	2767	0\$4683	+ 2346	+.2453	+.04347	1768	2234	07032	+.1334
1.5	+.2403	+.4913	+.4777	+.1853	1697	3279	1991	+.07593	+.2545	+.1980	02293	2047	1937	01407
2.0	+.1149	+.3528	+.4361	+.3641	+.04657	2429	3014	1130	+.1448	+.2546	+,1390	08493	- 2177	1520
2.5	+.04950	+.2239	+.4127	+.4409	+.2404	07295	2834	2506	02477	+.1967	+,2343	+.07242	1377	2143
3.0	+.01956	+.1289	+.3091	+.4302	+.3648	+.1148	1676	2911	- 1809	+.05838	+.2273	+.1951	+.0*3320	1768
3.5	+.017186	+.06852	+.2101	+.3658	+.4100	+.2671	0 ² 3403	2326	- 2683	09965	+.1294	+.2348	+.1407	06245
4.0	+.0°2477	+.03400	+.1320	+.2811	+.3912	+.3576	+.1578	1054	2655	2196	01504	+.1825	+.2193	+.07624
4.5	+.0°807	+.01589	+.07760	+.1993	+.3337	+.3846	+.2800	+.04712	1839	2664	1519	+.06457	+.2134	+.1830
5.0	+.042498	+.0º7040	+.04303	+.1321	+.2611	+.3621	+.3479	+.1858	05504	-,2341	2383	07347	+.1316	+.2204
5.5	+.0474	+.0º2973	+.02266	+.08261	+.1906	+.3098	+.3634	+.2856	+.08439	1401	2538	1864	+.017055	+.1801
6.0	+.042094	+.0*1202	+.01139	+.04909	+.1310	+.2458	+.3392	+.3376	+.2043	01446	2016	2437	1180	+.08117
6.5	+.046	+.0*467	+.025493	+.02787	+.08558	+.1833	+.2911	+.3456	+.2870	+.1123	1018	2354	2075	04151
7.0 7.5	+.0*1502	+.031749	+.0°2547	+.01518	+.05338	+.12% +.08741	+.2336 +.1772	+.3206 +.2759	+.3275 +.3302	+.2167 +.2861	+.01838 +.1334	1703 06865	- 2406 - 2145	1508 2187
8.0 8.5	+.079422	+.042218	+.044934	+.04029	+.01841	+.05653 +.03520	+.1290 +.08854	+.2235 +.1718	+.3057 +.2633	+.3179 +.3169	+.2250 +.2838	+.04510 +.1496	1410 04006	2320 1928
9.0 9.5	+.095249	+.0*2492	+.048440	+.039386	+.0*5520	+.02117 +.01232	+.05892 +.03785	+.1263 +.08921	+.2149 +.1672	+.2919 +.2526	+.3089 +.3051	+.2304 +.2806	+.06698 +.1621	1143 01541
10.0	+.0%2631	+.092515	+.041293	+.0*1950	+.0*1468	+.026964	+.02354	+.06077	+.1247	+.2075	+.2804	+.3005	+.2338	+.08501

Note: .027186 = .007186

.04807 = .000807

Absorption coefficients—Amplification, Amplifiers

■ Index

A

Absorbios soufficients	170	Altanastina aumant	
Absorption coefficients Absorption units	169	Alternating current average	99
		effective	99
Accelerating electrode, cathode ray Acoustics	165-178	supplies	25
absorption coefficients	170	Altitude, atmospheric pressure	22
absorption units	169	American	22
		noise units	100 101
amplifier power capacity	172, 173		190, 191
attenuation constant coefficients	169 170	war standards, capacitors	55
		war standards, resistors	52
equal-loudness contours	178	wire gauge	35, 36
music levels	174	Ampere turns, cathode-ray focu	ising 138
music ranges	174	Amplification, Amplifiers	
music, requirements	172	audio	143
noise	177	beam power tube	161, 162, 163
noise reduction coefficients	170	cathode follower	156, 157, 158
open-window units	169	circuits	155
optimum reverberation	166-169	class A	143, 153, 154
pressure	176	class AB	143, 153, 154
public-address requirements	171-173	class B	143, 154, 155
reverberation	165	class B r-f	152, 153
computation	169-171	class C	143
room sizes	165, 166	classes	155, 156, 157
sound level	176	constant-current characteristi	
sound pressure	176	design	143
speech frequency	175	class A and AB	153
speech intensity	175	class AB and B	154
speech requirements	1 72, 173	class B	152
standing waves	165	class C	147
Admittance	6470	distortion	164
Admittance equations	86	efficiency	143
Advance wire	44	factor	127, 129
Aerialsee Antenna		feedback	159
Air cooling, tube	131	general design	143-146
Air-cored coils	58, 59	graphical design	146-155
Algebraic formulas	294-296	grid current	143
Alloys		grounded cathode	156
melting point	44	grounded grid	156
physical constants	44	grounded plate	156
resistance	44	harmonic distortion	153, 164
specific gravity	44	negative feedback	159, 164
temperature coefficient	44	operating data	143
	.,,		. 10

Amplification, Amplifiers—Cable, radio frequency

Ampilitedition, Ampilited continued plots modulation push-pull radio-frequency 143 resistance coupled sizes, public address 171 transfer characteristics 148 tube 143-164 Amplitude modulation 86, 87, 88, 288 tube 143-164 Amplitude modulation 86, 87, 88, 288 dangles, approximations for 296 Angle of radiation 264 and 264 carray, radiotion 265 carray, radiotion 265 carray, radiotion 265 carray, radiotion 265 dipole 258, 259, 265 field intensity 250-253, 288, 259 radioted power 258, 259, 265 field intensity 250-253, 288, 259 radioted power 258, 259, 261 field intensity 250-253, 288, 259 radioted power 258, 259, 261 field intensity 250-253, 288, 259 radioted power 258, 259, 261 field intensity 250-253, 288, 259 radioted power 258, 259, 261 field intensity 250-253, 288, 259 radioted power 258, 259, 261 field intensity 250-253, 288, 259 radioted power 258, 259, 261 field intensity 250-253, 288, 259 radioted power 258, 259, 261 field intensity 250-253, 288, 259 radioted power 258, 259, 261 field intensity 250-253, 288, 259 radioted power 258, 259, 261 field intensity 250-253, 288, 259 radioted power 258, 259, 261 field intensity 250-253, 288, 259 radioted power 258, 259, 261 field intensity 250-253, 288, 259 radioted power 258, 259, 261 field intensity 250-253, 288, 259 radioted power 258, 259, 261 field intensity 250-253, 288, 259 radioted power 258, 259, 261 field intensity 250-253, 288, 259 radioted power 258, 259, 259 reactance 257 reactance 257 reactance 257 reactance 257 reactance 257 resistance 257 reactance 257 resistance 257 reactance 257 resistance 257 resistance 259 field intensity 250-253, 259, 251 field intensity 250-253, 259, 250 field int	A 1:0 1:		I Arouto motolia	10
push-puli 143 resistance coupled 158, 159 sizes, public address 171 bridged H 106, 110 bridged H 114	Amplification, Amplifiers continued	140	Attomic weights	100 114
resistance coupled 158, 159 sizes, public address 171 transfer characteristics 148 millitude modulation 86, 87, 88, 288 Angles, approximations for 296 Angle of radiation 250 arrays agrows 250 array, radiation 255 array, radiation 255 array, radiation 255 array, radiation 256 field intensity 250 and fed conductor radiation 256 field intensity 250 and fed conductor radiation 256 field intensity 250 and fed conductor radiation 256 impedance 257 horn 256 field intensity 250 and fed conductor radiation 256 impedance 257 horn 256 field intensity 250 and fed conductor radiation 256 impedance 257 horn 256 field intensity 250 and fed not and fed conductor radiation 256 impedance 257 horn 256 field intensity 250 and fed not appear and fed conductor radiation 256 impedance 257 horn 257				
resistance coupled 158, 159 sizes, public address 171 transfer characteristics 148 tube 143-144 Amplitude modulation 86, 87, 88, 288 Angles, approximations for 296 Angle of radiation 261 Annoas—see also Radiators 250-271 angle, field intensity 255 arrays 263-271 binomical array 263-271 binomical array 265 field intensity 255 field intensity 255 field intensity 250-253, 258, 259 radiated power 258, 259 radiated power 257 resistance 257 resistance 257 resistance 257 resistance 244 246 borizontal angle didpole 261 didpole 261 didpole 264 borizontal angle 264 turnstile 264 borizontal angle 264 turnstile 264 broizontal angle 264 turnstile 264 broizontal angle 264 turnstile 26		_		
Sizes, public address 171 transfer characteristics 148 tube 143-144 Amplitude modulation 86, 87, 88, 288 Angles, approximations for 294 Angle of radiation 260 Angle of radiation 261 Annade current—see also Radiators 250-271 angle, field intensity 255 array, radiation 265 dipole 268, 259, 255 field intensity 250-253, 258, 259 radiated power 258, 259 radiated power 258, 259 electric, magnetic components 250 end-fed conductor radiation 260 field intensity 255 field intensity 256 field intensity 257 field intensity 256 fie				
trube 143—144 Amplitude modulation 86, 87, 88, 288 Angles, approximations for 264 Angle of radiation 261 Andea current—see Current, plate Aniennas—see also Radiators 250—271 angle, field intensity 255 array, radiation 265 Gipole 258, 259, 265 Gipole 258, 259, 265 Gipole 258, 259, 265 Gield intensity 250—253, 258, 259 radiated power 258, 259 electric, magnetic components end-field ener dipole field intensity 255 impedance 257 reactance 257 horn 217 L and T 224 loop 265, 270 vertically stacked, gain 270 maximum radiation 261 minimum radiation 261 minimum radiation 261 moise 244, 244, 244 portler 263, 264 turnstile 264 tho wires 269 resistance, reactance components 260 resistance, reactance components 261 roploaded 242 remy-Novy reaferred tubes 263 Army-Novy radio-frequency cables 274 Army-Novy radio-frequency 267 Army-Novy radio-frequency 267 Army-Novy radio-frequency 267 Army-Novy radio				
Amplitude modulation 86, 87, 88, 288 Angles, approximations for 294 10d dimpedance 104 101, 102 Angles, approximations for 264 294 10d dimpedance 104 10d, 112 Annalosa—see also Radiators 250-271 angle, field intensity 255 array, radiation 265 250-271 255 181 binomial array 267 267 275 275 275 275 dipole 258, 259, 265, 265 265 6 field intensity 200-253, 258, 259 285 259 285 259 285 259 285 259 285 259 285 259 285 259 285 259 285 259 285 259 285 259 285 259 285 259 285 259 285 259 286 269 286 286 290 286 290 286 290 286 290 286 290 290 290 286 290 290 290 290 290 290 290 290 290 290 290 290		148		
Angles, approximations for Angle of radiation 261 Angle of radiation 261 Anode current—see Current, plate Antennas—see also Radiators 250–271 angle, field intensity 255 array, radiation 263 provided directivity 255 field intensity 250–253, 258, 259 radiated power 258, 259 electric, magnetic components end-fed conductor radiation 260 end-fed conductor radiation 251 height 251 height 252 field intensity 250–253 presistance 257 resistance 257 horn 217 L and T 224 loop 251 horizontal 269 pattern 263 pattern 264 partern 263 pattern 264 partern 265 single-lobe directivity 265 field strength 255–258 field strength 255–258 field strength 255–258 field strength 255–258 popolarized 224, 254–258 field strength 255–258 field strength 255–258 popolarized 257 pressure 224 loop 37 pressure 224 loop 38 prometer, attenuator 106, 110 pattern 264 partern 265 popolarized 257 pressure 224 loop 38 prometer, attenuator 106, 110 pattern 265 pressure 224 loop 38 prometer, attenuator 106, 110 pattern 265 pressure 224 loop 38 prometer, attenuator 106, 110 pattern 265 pressure 224 loop 38 prometer, attenuator 106, 110 pattern 265 pressure 224 loop 38 prometer, attenuator 106, 110 pattern 265 pressure 225 loop-loaded 254, 254–258 field strength 255–258 polarized 253, 254 loop-loaded 254, 244, 245 pressure 225 loop-loaded 254, 244, 245 pressure 254 loop 255 pressure 255 loop-loaded 254, 244, 245 pressure 255 loop-loaded 254, 245 lo			Н	
Angle of radiation				
Ande current—see Current, plate Antennas—see alos Radiators 250–271 angle, field intensity 255 array, radiation 265 arrays 263–271 binomial array 267 broadside directivity 250–253, 258, 259 radiated power 258, 259 redictric, magnetic components end-fed conductor radiation 250 field near dipole 251 height 161 height 161 height 256 corporation 257 resistance 257 horn 217 L and T 257 L and T 257 loop 265, 270 maximum radiation 261 minimum radiation 261 minimum radiation 261 minimum radiation 261 dipole 264 horizontal 269 loop 264 hurnsile 269 loop 264 hurnsile 269 loop 264 hurnsile 269 loop 264 hurnsile 261 character 274 pattern 263, 264 hurnsile 267 resistance, reactance components rhombic directivity 266 tangental magnetic field 257, 251 top-loaded 224, 254–258 field strength 255–258 polarized 224, 254–258 Arrays, Antenna 263–271 Atmospheric noise 244, 245 pressure 224 Cable, radio frequency 201e Cable, radio frequency 201e mismatch 106, 108 symmetrical M 3 106, 108 symmetrical N 30 into s			· - ·	
Antennas—see also Radiators 250–271 angle, field intensity 250–255 array, radiation open-wire pairs 181 symmetrical H 106, 108 symmetrical T 110 angle, field intensity 255 arrays 263–271 binomial array 257 arrays 263–271 binomial array 257 arrays 263–271 binomial array 257 arrays 258 array, radiation 258 array, radiation 250 arrays 250 arrays <th< td=""><td></td><td>261</td><td></td><td></td></th<>		261		
angle, field intensity 255 array, radiation 265 arrays 263–271 binomial array 263–271 binomial array 263–271 binomial array 263–271 binomial array 263–275 arrays 263–271 binomial array 264 arrays 263–271 binomial array 265 arrays 264 arrays. Polarized 4 arrays 265 arrays 264 arrays. Polarized 244 portical array 265 arrays 264 arrays. Polarized 242 arrays. Navy radio-frequency cables 263–271 Atmospheric noise 244, 244 arrays. Presistance 264 arrays. Presistance 265 arrays 265 arrays antenna 264 arrays. Presistance 265 arrays antenna 265–271 arrays antenna 265–27		250-271		
array, radiation 265 arrays 263-271 binomical array 263-271 binomical array 263-271 binomical array 263-271 binomical array 265-271 binomical array 265-271 binomical array 265-275 cardiated power 258, 259 calcided p				
Symmetrical				
binomial array 267 broadside directivity 265 dipole 258, 259, 265 field intensity 250-253, 258, 259 radiated power 258, 259 electric, magnetic components 250 end-fed conductor radiation 260 field near dipole 251 height field intensity 256 impedance 257 reactance 257 reactance 257 reactance 257 horn 217 L and T 224 loop 265, 270 wertically stacked, gain 270 maximum radiation 261 minimum radiation 261 minimum radiation 261 minimum radiation 261 dipole 264 horizontal angle 261 dipole 264 horizontal 269 pattern 263 264 tunstile 266 tangental magnetic field 250, 251 top-loaded 224, 254-258 field strength 255, 258 polarized 253, 254 Areas of plane figures 271-273 Army-Navy, preferred tubes 142 Army-Navy, preferred tubes 263-271 Atmospheric noise 244, 245 pressure 220 tangental magnetic frequency cables 201-203 Arrays, antenna 263-271 Atmospheric noise 244, 245 pressure 220 tangental magnetic frequency 265 tangental magnetic field 263-271 Atmospheric noise 244, 245 tangental magnetic field 263-271 tangental magnetic field 264 tangental magnetic field 265 tangental magnetic field 267 tangental ma				
dipole	binomial array			106, 108
field intensity 250–253, 258, 259 radiated power 258, 259 electric, magnetic components 250 end-fed conductor radiation 260 field near dipole 251 height field intensity 255 impedance 257 reactance 257 reactance 257 resistance 257 horn 217 L and T 214 loop 265, 270 vertically stacked, gain 270 maximum radiation 261 minimum radiation 261 minimum radiation 261 minimum radiation 261 moise 244, 244, 244 horizontal 269 pattern 263, 264 turnstile 264 turnstile 264 turnstile 264 turnstile 264 turnstile 264 tangental magnetic field 250, 251 field strength 250-258 Army-Navy, preferred tubes Army-Navy, antenna 263-271 244, 245 pressure 225 tangental magnetic field 264 Army-Navy, preferred tubes 267 Army-Navy, preferred tubes 267 Armospheric noise 268 Pressure 269 Pressure 260 Pr	broadside directivity	265	Ť	114
radiated power 258, 259 electric, magnetic components 250 end-fed conductor radiation 260 field near dipole 251 height field intensity 256 impedance 257 reactance 257 resistance 257 horn 217 L and T 224 loop 265, 270 maximum radiation 261 minimum radiation 261 minimum radiation 261 moise 244, 246, 248 parallel to screen, radiation 261 dipole 264 horizontal 269 loop 264 horizontal 269 loop 264 huristile 264 two wires 269 tangental magnetic field 250, 251 top-loaded 224 vertical 224, 254-258 field strength 255-258 polarized 253, 254 Army-Navy, preferred tubes Arrays, antenna 261 pressure 220 called called 261 and the content of the				
electric, magnetic components end-fed conductor radiation 260 field near dipole 251 height 6 field intensity 256 impedance 257 reactance 257 horn 217 L and T 224 loop 255 vertically stacked, gain 270 maximum radiation 261 minimum radiation 261 minimum radiation 269 loop 264 horizontal 269 pattern 263, 264 turnstile 265 field strength 255 252 single-lobe directivity 256 field strength 255 253 polarized 254, 258 field strength 255 253 Array-Navy, preferred tubes 267 pressure 22 fisher and a consideration 268 Army-Navy, preferred tubes 269 pressure 228 Army-Navy radio-frequency cables 269 pressure 220 fisher and a consideration 269 Army-Navy radio-frequency 261 and a consideration 269 and a con				
Indicate Continue				
Name of the property of the light height Name of the light height Nam				
Audible spectrum 175, 176				
Addio reactors 122 Impedance 257 Freactance 257 Freactan		251		
Impedance 257 reactance 257 resistance 257 horn 217 L and T 224 loop 265, 270 vertically stacked, gain 270 maximum radiation 261 noise 244, 246, 248 parallel to screen, radiation 269 radiation angle 261 dipole 264 horizontal 269 loop 264, 246 two wires 269 resistance, reactance components 267 rhombic 261 top-loaded 224, 254-258 field strength 255-258 polarized 270 Army-Navy, preferred tubes 142 Atmospheric noise 244, 245 246 Atmospheric noise 2247 246 Bridged Atmospheric noise 2247 246 Bridged 247		256		
reactance resistance r				
Description Color		257		122
L and T 224 loop	resistance			
Long			ь	
vertically stacked, gain maximum radiation 270 maximum radiation 261 line, impedance 196 minimum radiation 196 line, impedance 196 minimum radiation 196 minimum radiation 261 line, impedance 196 minimum radiation 116 minimum radiation 116 minimum radiation 106 minimum radiation 106 minimum radiation 106 minimum radiation 106 minimum radiation 116 minimum radiation 224 minimum radiation 116 minimum radiation 224 minimum radiati			_	
maximum radiation 261 line, impedance 196 minimum radiation 261 shielded, impedance 196 noise 244, 246, 248 O attenuator 106 parallel to screen, radiation 269 Band-elimination filters 116 angle 261 Band-pass filters 116 dipole 264 Band-pass filters 116 horizontal 269 Bandwidth 32 loop 264 Band-pass filters 116 band-pass filters 116 32 band-pass filters 247 32 band-pass filters 247 32 band-pass filters 196 32 bauds line, impedance 196 32 <td></td> <td></td> <td></td> <td>101</td>				101
minimum radiation noise 244, 246, 248 parallel to screen, radiation radiation 269 radiation 269 angle 261 dipole 264 horizontal 269 loop 264 pattern 263, 264 turnstile 264 two wires 269 resistance, reactance components rhombic 261–263 single-lobe directivity 266 tangental magnetic field 250, 251 field strength 255–258 polarized 253, 254 Army-Navy, preferred tubes 142 Army-Navy radio-frequency cables 201–203 Arrays, antenna 263–271 Atmospheric noise 244, 245 pressure 261, 264 cable, radio frequency 201 Shielded, impedance 106 and-elimination filters 111 Band-pass filters 1116 Band-pass filters 116 Band-pass filters 112 Band-pas				
Dockstone				
Parallel to screen, radiation radiation radiation angle angle dipole 261 dipole 264 horizontal 269 pattern 263, 264 turnstile 264 turnstile 265 resistance, reactance components 7 rhombic 261-263 single-lobe directivity 265 tangental magnetic field 27 evertical 224, 254-258 field strength polarized 253, 254 Army-Navy, preferred tubes Army-Navy, preferred tubes Army-Navy, preferred tubes Army-Navy radio-frequency cables Army-Navy radio-frequency 226 dipole 267 dipole directivity 266 field strength 250-251 Atmospheric noise 263-271 Atmospheric noise 263-271 Atmospheric noise 261 dipole 264 page 265 dipole dipole dipole dipole 265 pressure 265 dipole dipole dipole 265 pressure 265 dipole dipole dipole 265 pressure 266 plane figures 267 pressure 267 plane figures 267 pressure 268 plane figures 268 pressure 269 pressure 260 plane figures 261 pressure 260 pressure 260 pressure 260 pressure 260 pressure 260 pressure 261 pandwidth 32				
Band-pass filters				
angle dipole 261 dipole 264 noise 32 dipole 32 dipole 247 noise 248 noise 247 noise 248 nometer, atmospheric pressure 248 noise 248 noise 248 noise 248 noise 248 noise 247 noise 268 noise 268 noise 268 noise 268 noise 268 noise 268 noise 267 noise 267 noise 267 noise 288 noise 267 noise 267 noise 267 noise 267 noise 267 noise <				116
Barometer, atmospheric pressure 22			Bandwidth	
Dop pattern 263, 264 Bauds Beaded line, impedance 196 Bell System carrier frequencies 185 Essel functions 267 Essel functions 268 Essel functions 268 Essel functions 268 Essel functions 267 Essel functions 268 Essel functions 268 Essel functions 267 Essel functions 267 Essel functions 267 Essel functions 267 Essel functions 268 Essel functions 267 Essel functions 26				
pattern 263, 264 Beaded line, impedance 196 turnstile 264 Bell System carrier frequencies 185 two wires 269 Bessel functions 318–321 resistance, reactance components 257 Bessel functions 318–321 rhombic 261–263 Binomial array 267 single-lobe directivity 266 Binomial array 267 tangental magnetic field 250, 251 Birmingham wire gauge 36 Blocking oscillator 272 Bridged 4 Vertical 224, 254–258 H attenuator 106, 110 field strength 255–258 T attenuator 100, 106, 110 polarized 253, 254 Brightness, cathode ray 139 Areas of plane figures 291–293 British wire gauge 36 Army-Navy, preferred tubes 142 Broadside directivity 265 Army-Navy radio-frequency cables 201–203 B & S wire gauge 35, 36 Armospheric noise 244, 245 C Cable, radio frequency <td< td=""><td></td><td></td><td></td><td></td></td<>				
turnstile 264 Bell System carrier frequencies 185 two wires 269 Bessel functions 318-321 resistance, reactance components 257 Binomial array 267 rhombic 261-263 Binomial array 267 single-lobe directivity 266 Binomial array 267 tangental magnetic field 250, 251 Birmingham wire gauge 36 top-loaded 224 254-258 Blocking oscillator 272 blocking oscillator 272 Bridged H attenuator 106, 110 Floaded 253, 254 H attenuator 100, 106, 110 Floaded 253, 254 Brightness, cathode ray 139 Arithmetical progression 296 Broadside directivity 265 Army-Navy, preferred tubes 142 S wire gauge 35, 36 Army-Navy radio-frequency cables 201-203 Armospheric noise 244, 245 C pressure 20 Cable, radio frequency 201				
two wires 269 Bessel functions 318–321 resistance, reactance components 257 Binomial array 267 rhombic 261–263 theorem 297 single-lobe directivity 266 Birmingham wire gauge 36 tangental magnetic field 250, 251 Birmingham wire gauge 36 top-loaded 224 254–258 Blocking oscillator 272 vertical 224, 254–258 Bridged H attenuator 106, 110 polarized 253, 254 H attenuator 100, 106, 110 pressure 296 Bridsh wire gauge 36 Brightness, cathode ray 139 British wire gauge 36 Broadside directivity 265 B & S wire gauge 35, 36 Cable, radio frequency 201				
resistance, reactance components rhombic 261–263 Binomial array theorem 267 theorem 297 theorem 297 theorem 297 theorem 297 theorem 297 theorem 297 theorem 36 theorem 297 theorem 297 theorem 297 theorem 297 theorem 36 theorem 297 theorem				
rhombic 261–263 theorem 297 single-lobe directivity 266 Birmingham wire gauge 36 tangental magnetic field 250, 251 Blocking oscillator 272 top-loaded 224 254–258 Blocking oscillator 272 vertical 224, 254–258 H attenuator 106, 110 field strength 255–258 T attenuator 100, 106, 110 polarized 253, 254 Brightness, cathode ray 139 Areas of plane figures 291–293 British wire gauge 36 Army-Navy, preferred tubes 142 Broadside directivity 265 Army-Navy, radio-frequency cables 201–203 B & S wire gauge 35, 36 Armospheric noise 244, 245 C C pressure 20 Cable, radio frequency 201				
single-lobe directivity tangental magnetic field 250, 251 top-loaded vertical 224, 254–258 field strength polarized 255–258 Array-Navy, preferred tubes Army-Navy, radio-frequency cables Armay-Navy radio-frequency cables Armospheric noise pressure 26 Birmingham wire gauge Blocking oscillator 272 Bridged H attenuator 106, 110 T attenuator Brightness, cathode ray Br				
tangental magnetic field top-loaded vertical 250, 251 top-loaded Blocking oscillator 272 top-loaded vertical vertical 224, 254-258 tield strength Bridged 106, 110 top-loaded field strength polarized 255-258 top-loaded T attenuator attenuator 100, 106, 110 top-loaded Areas of plane figures Arithmetical progression Army-Navy, preferred tubes Army-Navy, preferred tubes Army-Navy radio-frequency cables Army-Navy radio-frequency cables Army-Navy radio-frequency cables Army-Navy radio-frequency cables attenuation attenuator attenu				36
vertical 224, 254-258 field strength H attenuator 106, 110 field strength 255-258 T attenuator 100, 106, 110 polarized 253, 254 Brightness, cathode ray 139 Areas of plane figures 291-293 British wire gauge 36 Arithmetical progression 296 Broadside directivity 265 Army-Navy, preferred tubes 142 B & S wire gauge 35, 36 Arrays, antenna 263-271 C Atmospheric noise 244, 245 C pressure 22 Cable, radio frequency 201		250, 251		272
field strength polarized 255-258 T attenuator 100, 106, 110 Areas of plane figures 291-293 Brightness, cathode ray 139 Arithmetical progression 296 British wire gauge 36 Army-Navy, preferred tubes 142 B & S wire gauge 35, 36 Army-Navy radio-frequency cables 201-203 Arrays, antenna 263-271 C Atmospheric noise 244, 245 pressure 22 Cable, radio frequency 201				
polarized 253, 254 Brightness, cathode ray 139 Areas of plane figures 291–293 British wire gauge 36 Arithmetical progression 296 Broadside directivity 265 Army-Navy, preferred tubes 142 B & S wire gauge 35, 36 Army-Navy radio-frequency cables 201–203 S & S wire gauge 35, 36 Arrays, antenna 263–271 C C Atmospheric noise 244, 245 C Cable, radio frequency 201				
Areas of plane figures 291–293 Arithmetical progression 296 Army-Navy, preferred tubes 142 Army-Navy radio-frequency cables 201–203 Arrays, antenna 263–271 Atmospheric noise 244, 245 pressure 291–293 British wire gauge 36 Broadside directivity 265 B & S wire gauge 35, 36 C Cable, radio frequency 201				
Arithmetical progression Army-Navy, preferred tubes Army-Navy radio-frequency cables Army-Navy radio-frequency cables Arrays, antenna Atmospheric noise pressure 296 Broadside directivity B & S wire gauge 35, 36 C C Cable, radio frequency 201				
Army-Navy, preferred tubes 142 Army-Navy radio-frequency cables 201-203 Arrays, antenna 263-271 Atmospheric noise 244, 245 pressure 22 Cable, radio frequency 201				
Army-Navy radio-frequency cables 201–203 Arrays, antenna 263–271 Atmospheric noise 224, 245 pressure 22 Cable, radio frequency 201				
Arrays, antenna 263–271 Atmospheric noise 244, 245 pressure 22 Cable, radio frequency 201			D & O Will gaoge	50, 50
Atmospheric noise 244, 245 Cable, radio frequency 201			I _	
pressure 22 Cable, radio frequency 201			C	
Atomic number 19 attenuation 204		22		
	Atomic number	19	attenuation	204

Calculus, integrals—Cut-off voltage, cathode ray

Calculus, integrals	300-302	Condenser-see Capacitor	
Capacitance, Capacitor	5 2, 5557	Conductance, Conductor	68
ceramic	57	ground	224
charge	92	mutual	129
color code	52	solid, skin effect	73
discharge ,	92	telephone line	182, 183
frequency	61, 62, 63	tubular, skin effect	73 222
mica	55, 56 75	Cone-sphere resonator Cone, volume	292
parallel plate reactance	61, 75	Constantan, thermocuples	46, 47
	80, 182, 183	Continuous waves	33
transmission line	194	Control	-
Capacity—see Capacitance		characteristic, cathode ray	138
Carbon, thermocouples	46, 47	electrode, cathode ray	136
Carrier systems	185-187	grid	128
telegraph, frequency	187	Conversion factors	11
telephone, frequency	186	Cooling water	131
Cathodesee also Filament		temperature rise	131
	156, 157, 158	Copper	45
Cathode-ray tubes—see Tubes, co	amode	resistance stranded, AWG	38
Cavities, resonant	219, 220	stranded, AVVG stranded conductors	38
CCIF noise units	191	stranded, resistance	38
Ceramic beads	196	stranded, weight	38
capacitors	57	thermocouples	46, 47
Characteristic impedance—see I	mped-	wire	37, 60, 126
ance		American gauge (AWG)	36, 123
Chemical symbols	19	attenuation per mile	37
Chokes, Iron cored, design of	122-126	Birmingham gauge (BWG)	36
Chromel, thermocouples	46, 47	British standard	36
Circle, area Circuits	292	Brown and Sharpe characteristic impedance	36, 123 37
coupled tuned, phase shift	84	current capacity	126
overcoupled	84, 85	enameled	126
selective	80-86	English-metric units	36
single tuned, phase shift	81	Imperial standard (SWG)	36
uhf	134	resistance 3	5, 36, 37, 126
Circular wave guides	213-217	size AWG	37
Clearance hole, screws	39	strength	37
Climate	23		36, 38, 60, 126
Clipped sawtooth wave	284 tion 50	weight	35, 36, 37 123
Coating, tropical, marine protec	tion 50	Core, reactor Core, transformer	123
cable	188	Cosh, table of	317
characteristic impedance	196	Cosmic noise	244-246
copper	206	Cosmic rays	28
resonator	222	Coupled section, Impedance ma	tching 200
surge impedance	195	Coupling	·
Code, color	52	coefficient	79
Code, telegraph	193	optimum	79
Coefficient of coupling	79	phase shift	84
Coilsee Inductance, Inductor		two circuits	79
Color code	52 52	Crystal detectors	142
capacitor Color temperature, metals	43	Current average	99
Combinations, permutations	297	characteristic	129
Common logarithms	304, 305	effective	99
Communication spectrum	28	ratio, decibels	34
Complex hyperbolic functions	299	two-mesh network	78
Complex quantities, formulas	294	Cut-off frequency, telephone co	
Composition resistors, color cod		Cut-off voltage, cathode ray	138

Cylinder, area—Filters

Cylinder, area	293	Electromagnetic units	16, 1 7, 2 51
volume	293	Electromotive force, psopl	hometric 189
Cylindrical wave guides	213-217	Electromotive force, series	
_		Electron, Electronics—see	also Tubes
D		differentiation	2 76, 277
Damped waves	33, 287	inertia	135
Decibels	34	integration	274, 275
nepers	34	velocity, cathode ray	140
Decimals, inch	14	Elementary dipole	250
Deflection, cathode-ray	, ,	Elements	
electrode	137, 139	atomic number	19
factor	138	atomic weight	19
sensitivity	139, 140	emf series	18
Delta-wye transformation	86	symbols	19
Deviation, frequency	30	Ellipse, area	292
Diamond antennas	261-263	Emission	33
Dielectric constant	40	frequency bands	32
ground	224	tube	1 28, 133
Dielectric strength	40	EMU units	16, 17
Diffraction	238	End-fed conductor radiation	
Dimensions, conversion	11	Equations, admittance	86
Diode		Equations, impedance	86
lines	129	Equivalents	11
perveance	129	ESU units	16, 17
plate current	129	European noise units	190
power supply	118, 119	E waves	207
Dipole	110, 117	Exponentials	317
electric	250	Exponential wave	287
field intensity	250-252		
half wave, field intensity	258	F	
magnetic	250	· ·	
radiation pattern	264	Factors, conversion	11
Direct-current supplies	25	Feedback	159, 164
Directive antenna arrays	263	Feedback, relaxation oscil	
Dissipation, tube	129	Feeder—see Transmission	
Distance		Feeling, acoustic threshold	
ranges	240	Field Intensity—see also R	
uhf	238	antenna angle	255
reflected signal	244	antenna height	255
Distortion factor	164	dipole	250
Distributed constants, telephone cabl	e	end-fed conductor	260
	182, 184	meter	245
D layer	226, 227	surface-wave	224, 225
Driver transformer	122	vertical antenna	253
Dry-bulb thermometer	20	Field strength—see Fie	ld intensity,
Dynamic resistance, parallel tuned c	ircuit 76	Radiation	
		Filaments	100
E		oxide coated	132
Ear sensitivity	178	reactivation	134
Earth—see also Ground	170	thoriated tungsten	132
distances	240	transformer	122
		tungsten	132
magnetic field Echo, radio, time	141 244	Filters	***
EEI-NEMA-RMA noise meter	244	band elimination	116
	245	band pass	116
E layer sporadic	227	constant K	116, 117
Electric circuit formulas	74-100	high pass	88-91, 117
Electric dipole	250	low pass	88-91, 117
Electrode characteristic	129	networks	115, 116, 117
Electromagnetic frequency spectrum		power supply RC, RL, LC	88, 118121 8891
Erectioning tradesite's specifulit	20	[~~, ~L, L~	00-91

Filters—Impedance

Teactions 123 123 123 124 125				
rectifier series M shunt M 3-element series 3-element stries 3-element shunt 4-electrode 137, 139 voltage 6-ered cir cooling, tube 6-ered cir cooling, tube 6-ered cir cooling, tube 6-ered cir cooling, tube 6-ered countries, power supplies 6-ered cir cooling, tube 6-ered countries, power supplies 6-ered cir cooling, tube 6-ered countries, power supplies 6-ered countries, power supp	Filters continued		Geometrical progression	297
series M sunt M Selement series Selement shunt Selectric crostant reflection constant reflection treation reflection reactor reflect on transformer ralative remembers sines Selectric circuit reflection reactor reflect on transformer ralative remembers sines Selectron reactor reflect on transformer ralative remembers sines Selectron reactor reflect on transformer ralative remembers remembers remembers remembers reactors reflection reactor reflect on transformer ralative remembe	reactors			16
shunt M 3-element series 3-element shunt 3-element shunt 3-element shunt 4-3-element shunt 4-3-element shunt 4-3-element shunt 4-3-element shunt 4-4-16 (Ground 5-6 (Ground 6-7-6 (Groun	rectifier			240-243
3-element series 3-element shunt 116 Selement shunt 116 Inishes, tropical, marine Flow of water 176 Flow of water 177 Flow of water 187 Focusing, cathode ray ampere turns 188 current 189 Forecasts, propagation 189 Forecasts, propagation 189 Forefacts, propagation 189 Foreign countries, power supplies Form factor Formulas electric circuit 189 Interest of the supplies Form factor Formulas electric circuit 189 Interest of the supplies Formulas 180 Forecasts, propagation 181 Forecasts, propagation 181 Forecasts, propagation 182 Formulas electric circuit 184 Foreign countries, power supplies Formulas 185 Formulas 186 Formulas 187 Fourier analysis 187 Gradional sine wave 187 Fractions, inch-metric equivalents 187 Carrier telegraph 288 I type 285 Formulas 187 Carrier telegraph 288 I type 188 I type	series M			15
3-element shunt finishes, tropical, marine 50 Flow of water 9 Focusing, cathode ray ampere turns 138 current 138 current 138 electrode 137, 139 voltage 133 fored-air cooling, tube 50 foreign countries, power supplies 6 Foreign countries, power supplies 6 Formulas electric circuit 150 foreign countries, power supplies 6 form factor 50 formulas 131 forecasts, propagation 74–100 impedance 150 formulas 150 foreign countries, power supplies 6 formulas 150 foreign countries, power supplies 75 foreign countries, power supplies 75 formulas 150 foreign countries, power supplies 75 foreign countries, power supplies 75 formulas 150 foreign countries, power supplies 15	shunt M			129
Finishes, tropical, marine Flousing, cathode ray ampere turns current electrode incording, tube forecasis, propagation forecasis, propagation forecasis, propagation selectric circuit impedance mathematical marketical marketical graphical solution fractional sine wave fractional sine wave fractional sine wave fractional sine hemetric equivalents frequency abbreviations allocation carrier telegraph carrier telegraph program telephony, high frequency bands capacitance, inductance cut-off, telephone cable designations modulation power supplies power supplies privang and the telephone private telegraph telephony, high frequency private telegraph telephony and the telephone power supplies privang and the telephone private telegraph telephone cable designations modulation power supplies privang and the telephone power supplies privang and the telephone power supplies privang and the telephone private telephone private telephone private telephone private telephone private telephone private telephone and the telephone prover supplies private telephone prover supplies prover supplies prover supplies prover supplies prover supplies prover supplies prover suppli	3-element series			
Flow of water 49 Focusing, cathode ray ampere turns 138 current 138 electrode 137, 139 voltage 136 forced-air cooling, tube 131 forecasts, propagation 231-234 form factor 58, 59 formulas electric circuit mpedance 291-302 mensuration 277-287 graphical solution 277-287 graphical solution 277-287 graphical solution 278 carrier telegraph 187 carrier telegraph 187 carrier telephone 184 designations 28 cut-off, telephone cable designations 28 cut-off, telephone cable designations 28 modulation 28 printer telegraph 127 range, speech 174 range,				224
Focusing, cathode ray ampere turns 138				224
Second S		49		240
Section 138 138 139				224
electrode voltage 137, 139 voltage 231-234 Forecasts, propagation 231-235 Formulas 24 Forecasts, propagation 24 Formulas 25 Formulas 25 Formulas 25 Formulas 25 Formulas 26 Formulas 27 28	ampere turns			224
voltage Fored-dir cooling, tube Forecasts, propagation Foreign countries, power supplies form factor Formulas electric circuit impedance mathematical menuration menu				239
H	electrode		Guides, wave	207
Forecasts, propagation Foreign countries, power supplies Form factor Formulas electric circuit impedance mathematical mensuration Fractional sine wave dibreviations allocation carrier telegraph carrier telegraph carrier telegraph sprogram telephony, high frequency bands caucu-off, telephone cable designations modulation power supplies prows				
Foreign countries, power supplies Form factor Form factor Formals electric circuit impedance			H	
Foreign countries, power supplies form factor 58, 59 Formulas electric circuit impedance 64-70 mathematical 291-302 mensuration 291, 292 Fourier analysis 277-287 graphical solution 279, 280 Fractional sine wave Fractions, inch-metric equivalents Frequency abbreviations allocation carrier telegraph carrier telegraph telephony, high frequency bands bands classifications, radio cut-off, telephone cable designations modulation 288 power supplies 25 printer telegraph 192 range, music 174 range, speech 174 reactance 61 spectrum, electromagnetic 28 tolerances 30 wavelength 297 Frying noise 189 Frying noise 189 Frying noise 189 Frying noise 189 Galvanic series, metals 63 Gama rays 28 Gaps, protective 272 Gas tube oscillator 272 intensity Hearing, equal loudness 13. High frequency—see also Radio frequency maximum usable 2 High, brass filters 14 Hyon, save guide Horsepower vs torque Hyorsepower vs torque High-pass filters Hyorsepower vs torque Hyorsepower vs torque Hyorsepower vs torque High-pass filters			Harmonics—see also Distortion	
Form factor Formulas electric circuit impedance detric analysis electric analysis graphical solution experiments frequency graphical solution freational sine wave Fractions, inch-metric equivalents Frequency abbreviations allocation carrier telegraph carrier telegraph carrier telephone J carrier 185 L type 188 program telephony, high frequency bands cut-off, telephone cable designations edesignations power supplies printer telegraph telephone cable deline parallel prozectors High-poss filters Horns, wave guide Horsepower vs torque Horsepower High-poss filters Horns, wave guide Lorseistance High-poss filters Horns, wave guide Horsepower vs torque Horsepower Hoarsepower High-poss filters Horns, wave guide Horsepower vs torque Horsepower High-poss filters Horns, wave guide Horsepower vs torque Horsepower High-poss filters Horsepower	Foreign countries, power supplies			32
electric circuit impedance 64-70 mathematical 291-302 mensuration 291, 292 Fourier analysis 277-287 graphical solution 279, 280 Fractional sine wave Fractions, inch-metric equivalents Prequency abbreviations allocation carrier telegraph 21 carrier 185 K carrier 185 K carrier 185 L type 188 program 187 telephone, high frequency 187 telephony, high frequency 187 telephony 192 capacitance, inductance 61, 62, 63 classifications, radio 28 cut-off, telephone cable 183, 184 designations 28 modulation 288 modulation 288 modulation 288 modulation 288 modulation 288 power supplies 25 printer telegraph 192 range, music 174 racatance 51 tolerances 30 wavelength 29 Frying noise 187 tolerances 30 wavelength 29 Frying noise 187 tolerances 30 wavelength 297 Fz layer 227, 228 Galvanic series, metals 188 Gamma rays 280 Gaps, protective 272 generalised wire and ground 180 wire and shield 2 wires and ground 191 wire and shield 2 wires and ground 191 wires and ground		58, 59		178
Selectric circuit				requency
Impedance				229
mathematical 291-302 mensuration 291, 292 Fourier analysis 277-287 graphical solution 279, 280 fractional sine wave 285 fractions, inch-metric equivalents 14 Frequency 28 abbreviations 28 allocation 187 carrier telegraph 187 carrier telephone 186 J carrier 185 L type 188 program 187 telephony, high frequency 187 bands 30, 32 capacitance, inductance 61, 62, 63 classifications, radio 28 modulation 28 modulation 28 power supplies 25 primter telegraph 192 range, music 174 range, speech 174 reactance 61 wavelength 29 Frying noise 189 Frying noise 189		64-70		226
Mensuration 291, 297 297 Fourier analysis 277-287 graphical solution 279, 280 Fractional, sine wave 285 Fractions, inch-metric equivalents 145 Frequency abbreviations 286 allocation carrier telegraph carrier telegraph carrier telephone 186 J. carrier 185 K. carrier 185 K. carrier 185 L. type 188 program 187 telephony, high frequency 5 and S 20 acquaitance, inductance 61, 62, 63 cassifications, radio 28 cut-off, telephone cable 183, 184 designations 28 modulation 28 modulation 28 modulation 28 modulation 29 printer telegraph 192 carrier, ange, speech 174 raactance 30 matching, shorted, open stub 16 approximately 189 program 199 printer telegraph 192 carrier 199 printer telegraph 192 print				71
Fractional sine wave Fredictions, inch-metric equivalents I by Fractional sine wave Fractions, inch-metric equivalents I by Fredictions relative feter on reactor effect on reactor Fractional sine wave Fractional sine wave Fractions, inch-metric equivalents I by Fredictions I by Frediction satisfaction I by Frediction reactor Fractional sine wave Fredictions I by Frediction reactor Fractional matching to a sine stransformer Fractional sine wave Fredictions I by Fractional sine wave Fredictions I by Frediction reactor Frediction reactor Frediction reactor Frediction reactor Freditive feffect on reactor Fre				117
graphical solution fractional sine wave Fractions, inch-metric equivalents Frequency abbreviations carrier telegraph carrier telephone J carrier 185 K carrier 185 L type program 187 telephony, high frequency bands cut-off, telephone cable designations modulation power supplies promer telegraph reactions, inductance cut-off, telephone cable designations power supplies promer telegraph reactions power supplies promer telegraph 192 range, music range, speech reactance swavelength Frying noise Fi layer Galvanic series, metals Gamma rays Gaps, protective Gaps, protective Gaps, protective Gaps, protective Gaps, protective Gars, protective Gars, protective Gars, protective Carrier telegraph 187 188 Horsepower vs torque H pad Humidity effect on reactor effect on reactor 112 effect on reactor 115 effect on reactor 115 effect on reactor 116 Effect on reactor 117 effect on reactor 118 Hwaves Hwaves Hwaves 128 Humidity effect on reactor 120 ceffect on reactor 120 cosines 14 hwaves 14 Hwaves 1 hweves 14 Hwaves 14 Humidity 120 cosines 14 hweves 14 hweves 14 Humidity 120 cosines 14 hweves 14 hweves 14 hweves 14 hoeleton r				217
Fractional sine wave Tractional sine wave Fractional sine wave Tractional sine wave Indication Carrier telegraph Carrier telegraph Indicational Indicative Indication Indicative Indication Indicative Indication Indicative Indication Indicative Indication Indicative Indication Indicative Indicative Indication I				51
Frequency abbreviations allocation carrier telegraph carrier telephone J carrier 185 K carrier 185 L type program telephony, high frequency bands cut-off, telephone cable designations power supplies power supplies program, speech redictions andulation power supplies power supplies program, speech range, music range, speech redictions redictions redictions speech rediction rediction rediction rediction rediction rediction redictor rediction rediction redictor rediction rediction rediction rediction rediction rediction rediction rediction rediction redictor rediction redict				114
abbreviations allocation carrier telegraph carrier telephone J carrier 185 K carrier 185 L type program 187 telephony, high frequency bands carpacitance, inductance carloff, telephone cable designations modulation power supplies printer telegraph reactance spectrum, electromagnetic tolerances wavelength Fz layer Galvanic series, metals Gamma roys Gaps, protective Gaps, protective Gaps, protective Gars, manual 187 telephone 188 Hyperbolic cosines Hyperbolic cosines 187 Huperbolic cosines 189 functions 30 32 tangents 187 telephone 187 telephone cable 183, 184 designations 288 modulation 288 modulation 288 modulation 288 modulation 280 tolerance deline 192 coaxial line 192 coaxial line 193 telephone delection 294 matching, soupled section 295 power transfer shielded balanced line 195 telephone cable 183, 184 telephone cable 183, 184 telephone cable 183, 184 cosines 184 Hyperbolic cosines 184 Hyperbolic cosines 184 Hyperbolic cosines 185 functions 30 1 Impedance antenna height 20 coaxial line 195		14		
allocation carrier telegraph carrier telegraph carrier telephone J carrier 185 K carrier 185 L type 188 program telephony, high frequency bands capacitance, inductance classifications, radio classifications power supplies power supplies printer telegraph reactance spectrum, electromagnetic spectrum, ele		-00	effect on reactor	123
carrier telegraph carrier telephone 187 carrier telephone 186 J carrier 185 K carrier 185 I type 188 program 187 telephony, high frequency 187 bands 30, 32 capacitance, inductance 61, 62, 63 classifications, radio 28 cut-off, telephone cable 183, 184 designations 28 modulation 288 power supplies 25 printer telegraph 192 range, music 174 reactance 61 spectrum, electromagnetic 28 tolerances 30 printer 187 feature 227 fe layer 227, 228 Galvanic series, metals 18 Gamma rays 28 Gaps, protective 123 Garvanic series, metals 63 Carrier telephone 216 Cosines 187 functions 22 functions 3 functions 3 Impedance cosines 18 functions 3 functions 3 functions 3 functions 42 cosines 4 fyerical treapers 2 functions 3 functions 3 functions 42 functions 4 functions 5 functions 42 functions 4 functions 5 functions 4 functions 4 functions 5 functions 4 functions 5 functions 4 functions 4 functions 5 functions 5 functions 4 functions 5 functions 6 functions 5 functions 6 functions 5 functions 5 functions 6 functions 5 functions 5 functions 5 functions 6 functions 5 functions 6 fu		28	effect on transformer	123
Carrier telephone		*	relative	20
J carrier 185 K carrier 185 K carrier 185 L type 188 program 187 telephony, high frequency 187 bands 30, 32 capacitance, inductance 61, 62, 63 classifications, radio 28 cut-off, telephone cable 183, 184 designations 288 modulation 288 modulation 288 printer telegraph 192 range, music 174 range, speech 174 range, speech 174 rage, speech 174 rage speech 183, 184 designations 288 balanced line 19 formula 64-70, 18 matching, coupled section 19 matching, coupled section 19 matching, shorted, open stub 19 open 2-wire line 19 open 2-wire lin			temperature	20
Hyperbolic Cosines C			H waves	207
Cosines 188				
187 187			cosines	317
Telephony, high frequency bands	• •		functions	299
bands 30, 32 capacitance, inductance 61, 62, 63 classifications, radio 28 cut-off, telephone cable 483, 184 designations 288 modulation 288 power supplies 25 printer telegraph 192 range, music 174 range, speech 174 range, speech 174 reactance 61 spectrum, electromagnetic 28 tolerances 30 wavelength 29 Frying noise 189 Frying noise 189 F1 layer 227 F2 layer 227, 228 Galvanic series, metals 18 Gamma rays 28 Gaps, protective 123 Calvanic stricts and ground 19 Gas tube oscillator 272 Impedance			sines	316
capacitance, inductance classifications, radio 28 cut-off, telephone cable designations 28 modulation 288 power supplies 25 printer telegraph 192 coaxial line 119 range, music 174 range, speech 174 reactance 310 spectrum, electromagnetic 28 spectrum, electromagnetic 28 tolerances 30 wavelength 29 rying noise 61 layer 227 fz layer 227, 228 Gaps, protective 61 lass and ground 63 lass and ground 64 lass and ground 193 lass and ground 194 lass and ground 194 lass and ground 195 lass an			tangents	318
Classifications, radio 28 cut-off, telephone cable 183, 184 designations 28 modulation 288 modulation 288 balanced line 19 beaded line 19 coaxial line 19			-	
cut-off, telephone cable designations 28 modulation 288 balanced line 15 beaded line 15 beaded line 17 printer telegraph 192 range, music 174 reactance 61 matching, shorted, open stub 174 reactance 61 matching, shorted, open stub 175 open 2-wire line 176 parallel 277 shielded balanced line 177 power transfer 178 power transfer 179 power transmission line 179 power tr			l I	
designations 28 antenna height 2.5 modulation 288 balanced line 15 power supplies 25 beaded line 15 printer telegraph 192 coaxial line 15 range, music 174 formula 64-70, and thing, coupled section 2 reactance 61 matching, shorted, open stub 1 spectrum, electromagnetic 28 open 2-wire line 1 tolerances 30 wires 1 wavelength 29 wires 1 Frying noise 189 power transfer 1 f1 layer 227 shielded balanced line 1 f2 layer 227 shielded balanced line 1 f2 layer 227 shielded balanced line 1 f3, 18 telephone line 180, 18 transmission line 1 wire and ground 1 wire and ground 1 wire and shield 1 Gars, protective 123			Imacdanas	
modulation 288 balanced line 19 beaded line 19 beaded line 19 coaxial line 19				257
power supplies printer telegraph range, music reactance spectrum, electromagnetic tolerances wavelength Frying noise Fi layer Fi				196
printer telegraph 192 range, music 174 formula 64-70, if formula 64-70,				196
range, music range, speech range, speech reactance spectrum, electromagnetic tolerances wavelength 29 Frying noise 189 Ft ₁ layer 227 F ₂ layer 227 Galvanic series, metals Gamma rays Gaps, protective Gas tube oscillator 174 formula formula formula formula matching, coupled section 20 matching, coupled section 21 matching, shorted, open stub 11 matching, shorted, open stub 11 matching, shorted, open stub 11 matching, coupled section 21 range, matching, coupled section 22 parallel wires 11 telephone line 183, 18 telephone cable transmission line 18 wire and ground 19 Wire and shield 19 2 paralled wire and ground 19 2 wires and ground 19 3 parallel wire and ground 19 4 wires and ground 19 5 parallel wire and ground 19 6 wires and ground 19 7 parallel wire and ground 19 7 parallel wire and ground 19 7 parallel wires and ground 19 8 parallel wires and ground 20 8 parallel wires and ground				196
range, speech reactance spectrum, electromagnetic spectrum, electromagnetic system of the first spectrum, electromagnetic				
reactance 61 matching, shorted, open stub open 2-wire line parallel wires 11 power transfer shielded balanced line 180, 187 telephone cable 180, 181 transmission line wire and ground 190 Gars tube oscillator 272 wires and ground 190 Gas tube oscillator 272 grantled wire and ground 190 Gas tube oscillator 272 grantled wire and ground 190 Gas tube oscillator 272 grantled wire and ground 190 Gas tube oscillator 272 grantled wire and ground 190 Gas tube oscillator 272 grantled wire and ground 190 Gas tube oscillator 272 grantled wire and ground 190 Gas tube oscillator 272 grantled wire and ground 273 grantled wire and ground 274 grantled wire and ground 275 grantled wire				200
Spectrum, electromagnetic 28 open 2-wire line 1				199
tolerances 30 parallel 29 wires 15 frying noise 189 power transfer 51 layer 227 shielded balanced line 183, 18 felephone cable 183, 18 felephone line 180, 18 felephone line 180, 18 framsmission line 180, 18 wire and ground 19 wire and ground 19 wire and ground 19 wire and shield 19 Gaps, protective 123 2 paralled wire and ground 19 Gas tube oscillator 272 2 wires and ground 19				196
wavelength 29				76
Frying noise 189 power transfer shielded balanced line 1 F1 layer 227 228 telephone cable 183, 18 telephone line 180, 18 telephone				197
F1 layer 227 shielded balanced line 15 F2 layer 227, 228 telephone cable telephone cable telephone line 183, 18 G transmission line wire and ground 15 Galvanic series, metals 18 wire and shield 15 Gamma rays 28 2-mesh network 76, 76 Gaps, protective 123 2 paralled wire and ground 15 Gas tube oscillator 272 2 wires and ground 15				78
F2 layer 227, 228 telephone cable telephone line transmission line wire and ground 180, 18 telephone line transmission line wire and ground Galvanic series, metals 18 wire and shield 19 wire and shield Gamma rays 28 2-mesh network 76, 3 Gaps, protective 123 2 paralled wire and ground 19 2 paralled wire and ground Gas tube oscillator 272 2 wires and ground 19 2 paralled wire and ground				196
telephone line 180, 18 transmission line 31 wire and ground 19 19 19 19 19 19 19 1				183, 184
transmission line 15	12 layer	221, 220		180, 182
Galvanic series, metals Gamma rays Gaps, protective Gas tube oscillator Wire and ground Wire and shield 19 22-mesh network 76, 7 23 2 paralled wire and ground 19 22 wires and ground 19 33 34 35 36 37 38 38 39 30 30 30 31 31 31 32 32 33 34 34 35 36 36 37 38 38 38 38 38 38 38 38 38 38 38 38 38				194
Galvanic series, metals Gamma rays 28 Gaps, protective Gas tube oscillator 18 Wire and shield 19 2-mesh network 76, 7 2 paralled wire and ground 19 2 wires and ground 19	G			197
Gamma rays 28 2-mesh network 76, 3 Gaps, protective 123 2 paralled wire and ground 1 Gas tube oscillator 272 2 wires and ground 1	Galvania series matela	10		197
Gaps, protective 123 2 paralled wire and ground 1 Gas tube oscillator 272 2 wires and ground 1				76, 77
Gas tube oscillator 272 2 wires and ground 1	_			197
■				197
				197
Gaussian unit 16 4-wire line	Gaussian unit	16	4-wire line	197

Imperial wire gauge—Metal

Imperial wire gauge	36	Latitude, distances	240 188
Inductance, Inductor	05.00	L carrier system	88-91
charge	95–98	LC filters	47
discharge	95 58. 74	Lead, solder melting point	179, 180
formulas	61, 62, 63	Leakance, telephone line Letter symbols, elements	177, 100
	61, 75	Letter symbols, Greek	15
reactance	74	Life, tube	133
ring single-layer solenoids	58, 59	Light spectrum	28
	, 182, 183	Light, velocity	28
transmission line	194	Line-of-sight distance	237-240
Inertia, electron	135	Lines, transmission—see Transmis	sion
Input transformer	122	lines	
Insulation, Insulating materials	40	Loading, telephone cable	182, 184
air	48	Loading constants, telephone cable	182
dielectric constant	40	Logarithms, common	304-305
dielectric strength	40	Logarithms, natural	314, 315
electrical properties	40	Longitude and time	27
physical properties	40	Longitude, distances	240
plastics, trade names	41	Long waves, propagation	224-226
power factor	40	Loop antennas, stacked	270
resistivity	40	Loop mile constants	184
softening point	40	Loop, radiation pattern	264
thermal expansion	40	Loudness contours	178
Integrals	300-302	Loudspeaker impedance	171
Integration, electronic	274	Loudspeaker, wire sizes	171
Intensifier electrode, cathode ray	137	Low frequencies, propagation	224-226
Interference—see Noise		Low-pass filters	117
International regulations	30	L type, carrier modulation	188
Interstage transformer	122		
Inverse-distance fields	224	M	
Inverse feedback	159, 164	• • • • • • • • • • • • • • • • • • • •	
lon, emf series	18	Machine screws	
Ionization, Ionosphere—see also Pro	opa-	head styles	38 39
gation density	228, 229	hole sizes	39
D layer	226	length	38
E layer	227	special standard	38
sporadic	227	Maclaurin's theorem	297
F ₁ layer	227	Magnet wire data—see also Cop	
F ₂ layer	228	wire	60
Iron, thermocouples	46, 47	Magnetic dipole	250
Isolation transformer	122	Magnetic focusing, cathode ray	141
isosceles-triangle wave	283	Magnetic shielding, cathode ray	139
I.T. & T. System carrier frequencies	185	Magnetrons	134, 142
Iterative impedance—see Transmissi		Mains, voltage and frequency	25
line impedance		Man-made noise	244-246
·		Marine, finishes and materials	50
J			, 291-302
_	185	Mathematical tables	304-322
J type carrier systems	165	Maximum usable frequency	229, 230
		Medium frequencies, propagation	224
K		Medium waves, propagation	224-226
Kelvin, operating temperature	132	Melting point, metals	43, 44, 47
Kennely-Heaviside Layer—see lonos		Mensuration formulas	291-293
Klystrons	135, 142	Mercury, inches	22
K type carrier systems	185	Metal	
,,		color heated	43
1		emf series	18
			43, 44, 47
Ladder attenuator	101-104	physical constants	44
L antennas	224	position in galvanic series	18

Metal continued	Nuts, screws 39
	4 Nyquist diagram 161
	4
12	3 l o
	4
	Oblique-angled triangle, solution 298
Mica capacitors, identification 5	
Minimum-loss pads 106, 112, 11 Mismatch, attenuation 19	
MKS system 1	
Modulation, Modulator	Optical line-of-sight distance 238
amplitude 86, 87, 88, 28	a printer time of organ and and
characteristic, cathode ray 13	
classes 3	blocking 272
frequency 28	
L type carrier 18	
percentage 8	
pulse 29	· ·
transformer 12 waveforms 28	1 00 0
Moisture, humidity 2 Multi-element array 263-27	-0 - 7
Multiple-hop transmission 228–23	
Multiples of 2.3026	
Multiples of 0.4343 31	
Multivibrator 27	. P
Music, frequency ranges 17	;
Music, Intensity levels 17	
Mutual conductance—see Tubes	Pads, T and H
	Paint, tropical, marine 50
A1	Parabola, area 292
N	Parallel circuit, impedance 68, 69, 70
	Parallel circuit, impedance 68, 69, 70 Parallel impedance 76
Navy-Army preferred tubes 14	Parallel circuit, impedance 68, 69, 70 Parallel impedance 76 Parallelogram, area 291
	Parallel circuit, impedance 68, 69, 70 Parallel impedance 76 Parallelogram, area 291 Parallel wires, impedance 195, 197
Navy-Army preferred tubes 14 Navy-Army radio-frequency cables 201-20 Negative feedback 159-16 Nepers—decibels 3	Parallel circuit, impedance 68, 69, 70 Parallel impedance 76 Parallelogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87
Navy-Army preferred tubes 14 Navy-Army radio-frequency cables 201-20 Negative feedback 159-16 Nepers—decibels 3 Networks 100-11	Parallel circuit, impedance 68, 69, 70 Parallel impedance 76 Parallel orient 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Permutations, combinations 297
Navy-Army preferred tubes Navy-Army radio-frequency cables Negative feedback Nepers—decibefs Networks filter 14 201-20 201-20 30-20 159-16 100-11	Parallel circuit, impedance Parallel impedance 76 Parallel impedance 76 Parallelogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Permutations, combinations 297 Perveance, diode, triode 129
Navy-Army preferred tubes 14 Navy-Army radio-frequency cables 201–20 Negative feedback 159–16 Nepers—decibefs 3 Networks 100–11 filter 11 theorems 7	Parallel circuit, impedance 68, 69, 70 Parallel impedance 76 Parallel impedance 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Permutations, combinations 297 Perveance, diode, triode 129 Phase angle 64–70
Navy-Army preferred tubes 14' Navy-Army radio-frequency cables 201–20' Negative feedback 159–16' Nepers—decibels 3' Networks 100–11' filter 11' theorems 7' 2-mesh, current 7'	Parallel circuit, impedance 68, 69, 70 Parallel impedance 76 Parallel impedance 76 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Permutations, combinations 297 Perveance, diode, triode 129 Phase angle 64–70 Phase shift, coupled tuned circuits 84
Navy-Army preferred tubes 14 Navy-Army radio-frequency cables 201-20 Negative feedback 159-16 Nepers—decibels 3 Networks 100-11 filter 11 theorems 7 2-mesh, current 7 2-mesh, impedance 76, 7	Parallel circuit, impedance 68, 69, 70 Parallel impedance 76 Parallel ogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Permutations, combinations 297 Perveance, diode, triode 129 Phase angle 64–70 Phase shift, coupled tuned circuits 84 Phase shift, single-tuned circuits 81
Navy-Army preferred tubes Navy-Army preferred tubes Navy-Army radio-frequency cables Negative feedback Nepers—decibels Networks 100-11 filter theorems 2-mesh, current 2-mesh, impedance New York, magnetic field ct 14	Parallel circuit, impedance 68, 69, 70 Parallel impedance 76 Parallel impedance 76 Parallelogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Permutations, combinations 297 Perveance, diode, triode 129 Phase angle 64–70 Phase shift, coupled tuned circuits 84 Phase shift, single-tuned circuits 81 Phase shift, telephone lines 182
Navy-Army preferred tubes Navy-Army preferred tubes Navy-Army radio-frequency cables Negative feedback Nepers—decibels Networks filter filter theorems 2-mesh, current 2-mesh, impedance New York, magnetic field ct Noise	Parallel circuit, impedance 68, 69, 70 Parallel impedance 76 Parallel impedance 76 Parallelogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Permutations, combinations 297 Perweance, diode, triode 129 Phase angle 64–70 Phase shift, coupled tuned circuits 84 Phase shift, single-tuned circuits 84 Phase shift, telephone lines 182 Phototubes 142
Navy-Army preferred tubes Navy-Army preferred tubes Navy-Army radio-frequency cables Negative feedback Nepers—decibels Networks 100-11 filter theorems 2-mesh, current 2-mesh, impedance New York, magnetic field ct 14	Parallel circuit, impedance 68, 69, 70 Parallel impedance 76 Parallel impedance 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Permutations, combinations 297 Perveance, diode, triode 129 Phase angle 64–70 Phase shift, coupled tuned circuits 84 Phase shift, single-tuned circuits 84 Phase shift, telephone lines 182 Phototubes 142 Pi section attenuators 100
Navy-Army preferred tubes 14' Navy-Army radio-frequency cables 201-20' Negative feedback 159-16' Nepers—decibels 3' Networks 100-11' filter 11' theorems 7' 2-mesh, current 7' 2-mesh, impedance 76, 7' New York, magnetic field ct 14' Noise acoustic 17'	Parallel circuit, impedance parallel impedance 76 Parallel impedance 76 Parallel ogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Permutations, combinations 297 Perveance, diode, triode 129 Phase angle 64–70 Phase shift, coupled tuned circuits 84 Phase shift, single-tuned circuits 81 Phase shift, telephone lines 182 Phototubes 142 Pi section attenuators 100 Pi-tee transformation 86
Navy-Army preferred tubes Navy-Army preferred tubes Navy-Army radio-frequency cables Negative feedback Nepers—decibels Networks filter filter 11. theorems 2-mesh, current 2-mesh, impedance New York, magnetic field ct Noise acoustic atmospheric cosmic frying 18	Parallel circuit, impedance 76 Parallel impedance 76 Parallel impedance 76 Parallelogram, area 291 Parallelogram 76 Penetration of current 71 Percentage modulation 87 Permutations, combinations 297 Perweance, diode, triode 129 Phase angle 64–70 Phase shift, coupled tuned circuits 7 Phase shift, single-tuned circuits 81 Phase shift, telephone lines 182 Phototubes 142 Pi section attenuators 100 Plane figures, areas 291–293 Plastics, composition 41
Navy-Army preferred tubes 14 Navy-Army radio-frequency cables 201-20 Negative feedback 159-16 Nepers—decibels 3 Networks 100-11 filter 11 theorems 7 2-mesh, current 76, 7 New York, magnetic field at 14 Noise acoustic atmospheria 244, 24 cosmic 244-24 frying 18 levels 177, 19	Parallel circuit, impedance Parallel impedance 76 Parallel impedance 76 Parallel ogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Permutations, combinations 297 Parveance, diode, triode 129 Phase angle 64–70 Phase shift, coupled tuned circuits 81 Phase shift, single-tuned circuits 81 Phase shift, telephone lines 182 Phototubes 142 Pi section attenuators 100 Pi-tee transformation 86 Plane figures, areas 291–293 Plastics, composition 41 Plastics, trade names 41
Navy-Army preferred tubes Navy-Army preferred tubes Navy-Army radio-frequency cables Negative feedback Nepers—decibels Networks 100-11 filter theorems 2-mesh, current 2-mesh, impedance New York, magnetic field at Noise acoustic atmospheria cosmic frying levels line 14 18 177, 19 18	Parallel circuit, impedance Parallel impedance 76 Parallel impedance 76 Parallel ogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Perwance, diode, triode 129 Phase angle 64–70 Phase shift, coupled tuned circuits 81 Phase shift, telephone lines 182 Phototubes 142 Pi section attenuators 100 Pi-tee transformation 86 Plane figures, areas 291–293 Plastics, composition 41 Plastics, trade names 41 Plate current, diode, triode 129
Navy-Army preferred tubes 14 Navy-Army radio-frequency cables 201-20 Negative feedback 159-16 Nepers—decibels 3 Networks 100-11 filter 1 theorems 7 2-mesh, current 7 2-mesh, impedance 76, 7 New York, magnetic field at 14 Noise 17 acoustic 17 atmospheric 244, 24 frying 18 levels 177, 19 line 18 man-made 244-24	Parallel circuit, impedance 76 Parallel impedance 76 Parallel impedance 76 Parallel ogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Perwance, diode, triode 129 Phase angle 64–70 Phase shift, coupled tuned circuits 84 Phase shift, single-tuned circuits 81 Phase shift, telephone lines 182 Phototubes 142 Pi section attenuators 100 Pi-tee transformation 86 Plane figures, areas 291–293 Plastics, composition 41 Plastics, trade names 41 Plate current, diode, triode 128
Navy-Army preferred tubes 14 Navy-Army radio-frequency cables 201-20 Negative feedback 159-16 Nepers—decibels 3 Networks 100-11 filter 1 theorems 7 2-mesh, current 76, 7 New York, magnetic field at 14 Noise 17 acoustic 17 atmospheric 244, 24 cosmic 244-24 frying 18 line 18 man-made 244-24 measurement 189-191, 24	Parallel circuit, impedance 76 Parallel impedance 76 Parallel impedance 76 Parallel ogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Perwatations, combinations 297 Perwance, diode, triode 129 Phase angle 64–70 Phase shift, coupled tuned circuits 84 Phase shift, single-tuned circuits 81 Phase shift, telephone lines 182 Phototubes 142 Pi section attenuators 100 Pi-tee transformation 86 Plane figures, areas 291–293 Plastics, composition 41 Plastics, trade names 41 Plate current, diode, triode 129 Plate resistance 128 Plate transformer 122
Navy-Army preferred tubes 14 Navy-Army radio-frequency cables 201-20 Negative feedback 159-16 Nepers—decibels 3 Networks 100-11 filter 11 theorems 7 2-mesh, current 7 2-mesh, impedance 76, 7 New York, magnetic field at 14 Noise acoustic atmospheric 244, 24 cosmlc 244-24 frying 18 levels 177, 19 line 18 man-made 244-24 measurement 189-191, 24 meter 24	Parallel circuit, impedance parallel impedance 76 Parallel impedance 76 Parallel ogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Permutations, combinations 297 Perveance, diode, triode 129 Phase angle 64–70 Phase shift, coupled tuned circuits 81 Phase shift, single-tuned circuits 81 Phase shift, telephone lines 182 Phototubes 142 Pi section attenuators 100 Pi-tee transformation 86 Plane figures, areas 291–293 Plastics, composition 41 Plastics, trade names 41 Plate current, diode, triode 129 Plate resistance 128 Plate transformer 122 Protective gaps 123
Navy-Army preferred tubes 14 Navy-Army radio-frequency cables 201–20 Negative feedback 159–16 Nepers—decibels 3 Networks 100–11 filter 11 theorems 7 2-mesh, current 7 2-mesh, impedance 76, 73 New York, magnetic field at 14 Noise 17 acoustic 17 atmospheria 244, 24 cosmic 244-24 frying 18 levels 177, 19 line 18 man-made 244-24 measurement 189-191, 24 meter 24 psophometric 18	Parallel circuit, impedance 70 Parallel impedance 76 Parallel impedance 76 Parallel impedance 76 Parallelogram, area 291 Parallelogram, area 291 Parallelogram 71 Penetration of current 71 Penetration of current 71 Percentage modulation 87 Permutations, combinations 297 Perveance, diode, triade 129 Phase angle 64–70 Phase shift, coupled tuned circuits 81 Phase shift, telephone lines 182 Phototubes 142 Pi section attenuators 100 Pi-tee transformation 86 Plane figures, areas 291–293 Plastics, trade names 41 Plate current, diode, triade 129 Plate resistance 128 Plate transformer 129 protective gaps 123 Platinum, thermocouples 46, 47
Navy-Army preferred tubes 14 Navy-Army radio-frequency cables 201–20 Negative feedback 159–16 Nepers—decibels 3 Networks 100–11 filter 1 theorems 7 2-mesh, current 7 2-mesh, impedance 76, 7 Noise 14 acoustic 17 atmospheric 244, 24 frying 18 levels 177, 19 line 189–191, 24 measurement 189–191, 24 meter 24 psophometric 18 radio 244–24	Parallel circuit, impedance 70 Parallel impedance 76 Parallel impedance 76 Parallel ogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Perwance, diode, triode 129 Phase angle 64–70 Phase shift, coupled tuned circuits 84 Phase shift, single-tuned circuits 81 Phase shift, telephone lines 182 Phototubes 142 Pi section attenuators 100 Pi-tee transformation 86 Plane figures, areas 291–293 Plastics, composition 41 Plastics, trade names 41 Plate current, diode, triode 129 Plate resistance 128 Plate transformer 122 protective gaps 123 Platinum, thermocouples 46, 47 Polygon, area 291
Navy-Army preferred tubes 14 Navy-Army radio-frequency cables 201–20 Negative feedback 159–16 Nepers—decibels 3 Networks 100–11 filter 11 theorems 7 2-mesh, current 7 2-mesh, impedance 76, 73 New York, magnetic field at 14 Noise 2 acoustic 17 atmospheria 244, 24 cosmic 244–24 frying 18 levels 177, 19 line 18 man-made 244–24 measurement 189–191, 24 meter 24 psophometric 18	Parallel circuit, impedance parallel impedance 76 Parallel impedance 76 Parallel ogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Permutations, combinations 297 Parveance, diode, triode 129 Phase shift, coupled tuned circuits 81 Phase shift, single-tuned circuits 81 Phase shift, telephone lines 182 Phototubes 142 Pi section attenuators 100 Pi-tee transformation 86 Plane figures, areas 291–293 Plastics, composition 41 Plastics, trade names 41 Plate current, diode, triode 129 Plate transformer 122 Protective gaps 123 Platinum, thermocouples 46, 47 Polygon, area 291 Positive-grid tubes 135
Navy-Army preferred tubes 14 Navy-Army radio-frequency cables 201–20 Negative feedback 159–16 Nepers—decibels 3 Networks 100–11 filter 11 theorems 7 2-mesh, current 7 2-mesh, impedance 76, 73 New York, magnetic field at 14 Noise 2 acoustic 17 atmospheria 244, 24 cosmla 244–24 frying 18 levels 177, 19 line 18 man-made 244–24 meter 24 psophometric 18 radio 244–24 receiver, antenna 244, 246, 24 reduction coefficients 17 room 18	Parallel circuit, impedance 76 Parallel impedance 76 Parallel impedance 76 Parallel ogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Perwance, diode, triode 129 Phase shift, coupled tuned circuits 84 Phase shift, single-tuned circuits 81 Phase shift, telephone lines 182 Phototubes 142 Pi section attenuators 100 Pi-tee transformation 86 Plane figures, areas 291–293 Plastics, composition 41 Plate current, diode, triode 129 Plate resistance 128 Plate transformer 122 protective gaps 123 Platinum, thermocouples 46, 47 Polygon, area 291 Post-accelerating electrode, cathode ray 137
Navy-Army preferred tubes 14 Navy-Army radio-frequency cables 201–20 Negative feedback 159–16 Nepers—decibels 3 Networks 100–11 filter 1 theorems 7 2-mesh, current 7 2-mesh, impedance 76, 7 New York, magnetic field at 14 Noise 17 acoustic 17 atmospheric 244, 24 cosmic 244-24 frying 18 levels 177, 19 line 189–191, 24 measurement 189–191, 24 meter 24 psophometric 18 radio 244-24 receiver, antenna 244, 246, 24 reduction coefficients 17 room 18 thermal agitation 244, 246, 24	Parallel circuit, impedance 76 Parallel impedance 76 Parallel impedance 76 Parallel ogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Perwance, diode, triode 129 Phase angle 64–70 Phase shift, coupled tuned circuits 81 Phase shift, single-tuned circuits 81 Phase shift, telephone lines 182 Phototubes 142 Pi section attenuators 100 Pi-tee transformation 86 Plane figures, areas 291–293 Plastics, composition 41 Plate current, diode, triode 129 Plate resistance 128 Plate resistance 128 Plate transformer 122 protective gaps 123 Positive-grid tubes 291 Post-accelerating electrode, cathode ray 137 Potential, element series 18
Navy-Army preferred tubes 14 Navy-Army radio-frequency cables 201–20 Negative feedback 159–16 Nepers—decibels 3 Networks 100–11 filter 1 theorems 7 2-mesh, current 76, 7 New York, magnetic field ct 14 Noise acoustic 17 atmospheric 244, 24 cosmic 244–24 frying 18 levels 177, 19 line 189–191, 24 measurement 189–191, 24 meter 24 psophometric 18 radio 244, 246, 24 receiver, antenna 244, 246, 24 reduction coefficients 17 room 18 thermal agitation 244, 246, 24 to-signal ratio 248, 248	Parallel circuit, impedance 70 Parallel impedance 76 Parallel impedance 76 Parallel ogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Permutations, combinations 297 Parveance, diode, triode 129 Phase angle 64–70 Phase shift, coupled tuned circuits 81 Phase shift, telephone lines 182 Phototubes 142 Pi section attenuators 100 Pi-tee transformation 86 Plane figures, areas 291–293 Plastics, composition 41 Plastics, trade names 41 Plate current, diode, triode 129 Plate transformer 122 Plate transformer 122 Protective gaps 123 Platinum, thermocouples 46, 47 Polygon, area 291 Positive-grid tubes 135 Post-accelerating electrode, cathode ray 137 Potential, element series 181 Power
Navy-Army preferred tubes 14 Navy-Army radio-frequency cables 201–20 Negative feedback 159–16 Nepers—decibels 3 Networks 100–11 filter 11 theorems 7 2-mesh, current 7 2-mesh, impedance 76, 7 New York, magnetic field at 14 Noise 17 acoustic 17 atmospheric 244, 24 cosmlc 244–24 frying 18 levels 177, 19 line 18 man-made 244–24 meeter 24 psophometric 18 receiver, antenna 244, 246, 24 receiver, antenna 244, 246, 24 reduction coefficients 17 room 18 thermal agitation 244, 246, 24 to-signal ratio 248, 24 to-signal ratio 248, 24	Parallel circuit, impedance 70 Parallel impedance 76 Parallel impedance 76 Parallel ogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Permutations, combinations 297 Perveance, diode, triode 129 Phase angle 64–70 Phase shift, coupled tuned circuits 81 Phase shift, single-tuned circuits 81 Phase shift, telephone lines 182 Phototubes 142 Pi section attenuators 100 Pi-tee transformation 86 Plane figures, areas 291–293 Plastics, composition 41 Plastics, trade names 41 Plate current, diode, triode 129 Plate resistance 128 Plate transformer 122 Protective gaps 123 Postitive-grid tubes 35 Post-accelerating electrode, cathode ray 137 Potential, element series 18 Power dipole radiation 258
Navy-Army preferred tubes 14 Navy-Army radio-frequency cables 201–20 Negative feedback 159–16 Nepers—decibels 3 Networks 100–11 filter 1 theorems 7 2-mesh, current 76, 7 New York, magnetic field ct 14 Noise acoustic 17 atmospheric 244, 24 cosmic 244–24 frying 18 levels 177, 19 line 189–191, 24 measurement 189–191, 24 meter 24 psophometric 18 radio 244, 246, 24 receiver, antenna 244, 246, 24 reduction coefficients 17 room 18 thermal agitation 244, 246, 24 to-signal ratio 248, 248	Parallel circuit, impedance 70 Parallel impedance 76 Parallel impedance 76 Parallel impedance 76 Parallelogram, area 291 Parallel wires, impedance 195, 197 Penetration of current 71 Percentage modulation 87 Perwance, diode, triode 129 Phase angle 64–70 Phase shift, coupled tuned circuits 84 Phase shift, telephone lines 182 Phototubes 142 Pi section attenuators 100 Pi-tee transformation 86 Plane figures, areas 291–293 Plastics, composition 41 Plastics, trade names 41 Plate current, diode, triode 129 Plate resistance 128 Plate transformer 122 Protective gaps 123 Postive-grid tubes 29 Post-accelerating electrode, cathode ray 29 Power dipole radiation 258

Power-Reactance, Reactor

Power continued		Propagation continued	
ratio to decibels	34	sky wave	227
supplies		sporadic E	227
foreign countries	25	surface waves	225
	8, 118-121	telephone cable	182, 184
transformer	122	telephone lines	180
design	124	waves in guides	207
transfer between impedances	78		123
transfer between two meshes	78, 79	Protective gaps	123
		reactors	
Preaccelerating electrode, cathode		transformers	123
Precipitation extremes	23	Psophometric electromotive force	189-191
Precipitation, world	24	Public-address requirements	171
Pressure		Pulse-frequency modulation	290
acoustic	176	Pulse modulation	290
atmospheric	22	Pulse modulators	142
reactor	123	Pyramide, volume	293
transformer	123		
wind	42	l a	
Primary constants	180	Q	
Primary emission	128	Q, resonators	222
Principle of superposition	74	Quadratic equation	296
Printer telegraph frequency	192	, i	
Printer telegraph, speed	192	l <u> </u>	
Prism resonator	222	R	
Program carrier, frequency	187	Radiation, Radiator—see also Ante	nna
Progression, arithmetical	296	angle	261
Progression, geometrical	297	array antenna	265
Propagation—see also Attenuation		binomial array	267
antenna height	238	cooling, tube	131
constant	180	dipole	264
toll cable	182	end-fed conductor	260
diffraction	238	horizontal wire	269
distances	238, 240	loop	264
calculation	230, 240	•	263-264
	244	pattern	
echo		power, dipole	258
D layer	226	spectrum	28
echo time	244	turnstile antenna	264
E layer	227	vertical	224, 254
sporadic	227	wire parallel to screen	269
forecasts	231-236	2 wires	269
frequency vs ground wave	239	Radio frequency	
F _L layer	227	cable	201
F ₂ layer	228	attenuation	204
good earth	225	classifications	28
height of antenna	238	resistance	71
high frequencies	226	Radio horizon	238
line of sight	238	Radio noise	244-249
long waves	224	Radio path horizon	237
low frequencies	224	Radio path length	238
maximum usable frequencies	229	Radiotelephone, fields required	235
medium frequencies	224	Rainfall	23, 24
medium waves	224-226	RC filters	88-91
optical horizon	238	Reactance, Reactor	
over ground	225	antenna height	257
poor earth	225	audio	122
radio	224~249	capacitor	75
radio horizon	238	charts	61, 62, 63
radiotelephone fields required	235	cores	123
range	238	filter	123
sea water	226	frequency	61, 62, 63
short waves	226-230	humidity	123
signal strength required	235	inductor	75
signal attength required	255	Maderot	75

Reactance, Reactor—Spacing, telephone lines

Reactance, Reactor continued	ı	RL filters	8891
iron-core	122-126	RMA standards, capacitors	55
major types	122, 123	RMA standards, resistors	52
pressure	123	Room acoustics	16 <i>5</i> –178
protective gaps	123	Room noise	189
saturable	123		
temperature	123	s	
wave-filter	123	=	
Receiver noise 244	, 246, 248	Saturable reactors	123
Reciprocity theorem	74	Saturation, percent	20
Rectangular wave	282	Sawtooth wave	284, 285
Rectangular wave guides	208	Scott transformer	122
Rectification, Rectifier		Screen grid	128
circuits	118, 119	cathode ray	137
full-wave	118, 119	Screws, machine	38
half-wave	118, 119	head styles	39
power supply	118-121	hole sizes	38
wave analysis	. 287	length	38
Recurrent wave forms, Fourier analys		special	38
	277-280	standard	226
Reflected signal, time interval	244	Sea water, propagation	128
Reflection coefficient	240 269	Secondary emission Sector circle area	292
Reflector, antenna	240	Segment circle area	292
Refractive index	240	Selective circuits	80-86
Relative humidity	272, 273	Self inductance—see Inductance	00 00
Relaxation oscillators Resistance, Resistor	52	Series circuit	
antenna height	257	charge	95
copper wire	35, 36	discharge	95
coupled amplifier	158	impedance formulas	68, 69, 70
high frequency	71	sinusoidal voltage	98
insulating materials	40	Series M filter	117
parallel circuit	76	Series 3-element filter	116
radio frequency	71	Shielded balanced line Impedance	196
skin effect	71	Shorted stub, impedance matching	199
standard color code	53	Short waves, maximum usable	fre-
	, 182, 183	quencies	229
Resonance, Resonator	. ,	Short waves, propagation	226
cavities	219	Shunt M filter	11 <i>7</i>
circular	222	Shunt 3-element filter	116
coaxial	222	Signal strength—see Attenuation,	Field
cylinder	222	intensity, Propagation	
frequency, filters	89	Signal-to-noise ratio	248, 249
frequency, series circuit	75	Silicon carbide, thermocouples	46, 47
prism	222	Simpson's rule	293
rectangular	221, 222	Sines, hyperbolic	316 23 5
selectivity	80	Sine wave, fractional	286
sphere-cone	222	Sine wave, full	286
spherical	221, 222 222	Sine wave, half Single-hop transmission	228, 229
square prism waves in	207	Sinh, table of	316
Reverberation time	165	Sinusoidal voltage	98
R-F cables, Army-Navy	201-203	Skin effect	71, 72, 73
attenuation	204	Sky reflection	228, 229
R-F transmission lines—see also	204	Sky-wave—see Attenuation, Fleic	
Transmission lines	194–206	tensity, Propagation	
RG-/U cable	201-204	Solder, melting point	47
Rhodium, thermocouples	46, 47	Solenoids, inductance	58, 59
Rhombic antennas	261-263	Sound level, acoustic	176
Right-angle triangle, solution	298	Sound, noise levels	177
Ripple frequency	118-121	Space-charge grid	128
Ripple voltage	118-121	Spacing, telephone lines	180
PP = FENEQE			

Spark-gap breakdown voltages—Torque vs horsepower

Spark-gap breokdown voltages	48		102 104
Speech, frequency ranges	175	impedance	183, 184
Speech, intensity levels	175	loading	182, 184 182
Speed, printer telegraph	192 192	constants noise	190
Speed, telegroph	293	propagation	182, 184
Sphere, area	222	velocity	183, 184
cone resonator volume	293	wavelength	183, 184
Spherical trigonometry	240	Telephone carrier systems	185-187
Spiral-4 cable	183	Telephone line—see also Transi	mission
Sporadic E layer	227	line	
Square-prism resonator	222		181, 182, 186
Squegging oscillator	273	·	179, 182, 183
Stacked loops	270	conductance	182, 183
Standard noise meter	245	impedance	180, 182 179, 182, 183
Standard time	27 165	inductance leakance	179, 162, 163
Standing waves, acoustic	163	noise	177, 180
Static—see Atmospheric noise Stub, open, shorted, impedance mate	-h-	phase shift	182
ing	199	propagation	180
Studio acoustics	165		180, 182, 183
	229, 230	spacing	180
Superposition, principle	74	velocity	180
Suppressor grid	128	wavelength	180
Surface waves—see Attenuation, Fig	əld	Telephone toll cable	182-184
intensity, Propagation	_	Telephone transmission-line data	179-184
Surge impedance—see Transmission-li	ine	Temperature	23
impedance	68	extremes highest	23
Susceptance Symbols	00	humidity	20
chemical	19	lowest	23
			44 47
elements	19	measurement, thermocouple	40, 4/
elements Greek	19 15	measurement, thermocouple metals	46, 47 43
			43 123
Greek tubes Symmetrical	15 127	metals reactor rise, tube	43 123 131
Greek tubes Symmetrical attenuator	15 127 106	metals reactor rise, tube transformer	43 123 131 123
Greek tubes Symmetrical attenuator H attenuator	15 127 106 108	metals reactor rise, tube transformer world	43 123 131 123 23
Greek tubes Symmetrical attenuator H attenuator O attenuator	15 127 106 108 106, 110	metals reactor rise, tube transformer world TEM waves	43 123 131 123 23 207
Greek tubes Symmetrical attenuator H attenuator O attenuator Pi attenuator	15 127 106 108 106, 110 106, 110	metals reactor rise, tube transformer world TEM waves Terminals, winding	43 123 131 123 23 207 123
Greek tubes Symmetrical attenuator H attenuator O attenuator Pi attenuator T attenuator	15 127 106 108 106, 110 106, 110 108	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube	43 123 131 123 23 207 123 128, 129
Greek tubes Symmetrical attenuator H attenuator O attenuator Pi attenuator	15 127 106 108 106, 110 106, 110	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves	43 123 131 123 23 207 123
Greek tubes Symmetrical attenuator H attenuator O attenuator Pi attenuator T attenuator trapezoid wave	15 127 106 108 106, 110 106, 110 108	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube	43 123 131 123 23 207 123 128, 129 207
Greek tubes Symmetrical attenuator H attenuator O attenuator Pi attenuator T attenuator	15 127 106 108 106, 110 106, 110 108 282	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves Theorems	43 123 131 123 23 207 128, 129 207 297 74
Greek tubes Symmetrical attenuator H attenuator O attenuator Pi attenuator T attenuator trapezoid wave	15 127 106 108 106, 110 106, 110 108 282	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves Theorems Maclaurin's network reciprocity	43 123 131 123 23 207 128, 129 207 297 74 74
Greek tubes Symmetrical attenuator H attenuator O attenuator Pi attenuator T attenuator trapezoid wave	15 127 106 108 106, 110 106, 110 108 282 304–323 318	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves Theorems Maclaurin's network reciprocity superposition	43 123 131 123 207 123 128, 129 207 297 74 74 74
Greek tubes Symmetrical attenuator H attenuator O attenuator Pi attenuator T attenuator trapezoid wave T Tables, mathematical Tangents, hyperbolic- T antennas	15 127 106 108 106, 110 106, 110 108 282 304–323 318 224	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves Theorems Maclaurin's network reciprocity superposition Taylor's	43 123 131 123 23 207 123 128, 129 207 297 74 74 74 297
Greek tubes Symmetrical attenuator H attenuator O attenuator Pi attenuator T attenuator trapezoid wave T Tables, mathematical Tangents, hyperbolic T antennas Tapping hole, screws	15 127 106 108 106, 110 106, 110 282 304–323 318 224 39	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves Theorems Maclaurin's network reciprocity superposition Taylor's Theoremis's	43 123 131 123 23 207 123 128, 129 207 74 74 74 297 74
Greek tubes Symmetrical attenuator H attenuator O attenuator Pi attenuator T attenuator trapezoid wave T Tables, mathematical Tangents, hyperbolic T antennas Tapping hole, screws Taylor's theorem	15 127 106 108 106, 110 106, 110 108 282 304–323 318 224	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves Theorems Maclaurin's network reciprocity superposition Taylor's Thevenin's Thermal agitation	43 123 131 123 23 207 128, 129 207 297 74 74 74 297 74 244, 246, 248
Greek tubes Symmetrical attenuator H attenuator O attenuator T attenuator T attenuator trapezoid wave T Tables, mathematical Tangents, hyperbolic T antennas Tapping hole, screws Taylor's theorem Telegraph	15 127 106 108 106, 110 106, 110 108 282 304–323 318 224 39 297	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves Theorems Maclaurin's network reciprocity superposition Taylor's Thewanin's Thermal agitation Thermal properties, insulating ma	43 123 131 123 207 207 128, 129 207 297 74 74 297 74 297 74 244, 246, 248
Greek tubes Symmetrical attenuator H attenuator O attenuator Pi attenuator T attenuator trapezoid wave T Tables, mathematical Tangents, hyperbolic- T antennas Tapping hole, screws Taykor's theorem Telegraph carrier systems	15 127 106 108 106, 110 106, 110 108 282 304–323 318 224 39 297	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves Theorems Maclaurin's network reciprocity superposition Taylor's Thermal agitation Thermal properties, insulating ma	43 123 131 123 23 207 128, 129 207 297 74 74 74 297 74 244, 246, 248
Greek tubes Symmetrical attenuator H attenuator O attenuator Pi attenuator T attenuator trapezoid wave T Tables, mathematical Tangents, hyperbolic T antennas Tapping hole, screws Taylor's theorem Telegraph carrier systems codes, comparison	15 127 106 108 106, 110 106, 110 108 282 304–323 318 224 39 297	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves Theorems Maclaurin's network reciprocity superposition Taylor's Thevenin's Thermal agitation Thermal properties, insulating machines Thermocouples Thevenin's theorem	43 123 131 123 23 207 123 128, 129 207 297 74 74 297 74 244, 246, 248 246, 446, 44
Greek tubes Symmetrical attenuator H attenuator O attenuator Pi attenuator T attenuator trapezoid wave T Tables, mathematical Tangents, hyperbolic- T antennas Tapping hole, screws Taykor's theorem Telegraph carrier systems	15 127 106 108 106, 110 106, 110 108 282 304–323 318 224 39 297 187 193 192 192	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves Theorems Maclaurin's network reciprocity superposition Taylor's Thermal agitation Thermal properties, insulating ma	43 123 131 123 23 207 123 128, 129 207 74 74 297 74 297 74 244, 246, 248 aterials 46, 47 74 132, 134
Greek tubes Symmetrical attenuator H attenuator O attenuator Pi attenuator T attenuator trapezoid wave T Tables, mathematical Tangents, hyperbolic T antennas Tapping hole, screws Taykor's theorem Telegraph carrier systems codes, comparison facilities	15 127 106 108 106, 110 106, 110 108 282 304—323 318 224 39 297 187 193 192 192	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves Theorems Maclaurin's network reciprocity superposition Taylor's Thermal agitation Thermal properties, insulating mathemates Thevenin's theorem Thoriated-tungsten filament Time belts, worldwide Time constant	43 123 123 23 207 123 128, 129 207 297 74 74 244, 246, 248 atterials 40 46, 47 74 132, 134 92–98
Greek tubes Symmetrical attenuator H attenuator O attenuator Pi attenuator T attenuator trapezoid wave T Tables, mathematical Tangents, hyperbolic T antennas Tapping hole, screws Taylor's theorem Telegraph carrier systems codes, comparison facilities printer frequency speed	15 127 106 108 106, 110 106, 110 108 282 304–323 318 224 39 297 187 193 192 192	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves Theorems Maclaurin's network reciprocity superposition Taylor's Thevenin's Thermal agitation Thermal properties, insulating mathemated in the properties Thevenin's theorem Thoriated-tungsten filament Time belts, worldwide Time constant filters	43 123 131 123 207 123 128, 129 207 297 74 74 297 74 244, 246, 248 aterials 40 46, 47 74 132, 134 27 92–98 89
Greek tubes Symmetrical attenuator H attenuator O attenuator Pl attenuator T attenuator trapezoid wave T Tables, mathematical Tangents, hyperbolic T antennas Tapping hole, screws Taylor's theorem Telegraph carrier systems codes, comparison facilities printer frequency speed systems	15 127 106 108 106, 110 106, 110 108 282 304–323 318 224 39 297 187 193 192 192 192 192	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves Theorems Maclaurin's network reciprocity superposition Taylor's Thewanin's Thermal agitation Thermal properties, insulating mathematics Thereocouples Thevenin's theorem Thoriated-tungsten filament Time belts, worldwide Time constant filters Tlme, Greenwich central	43 123 123 23 207 128, 129 207 297 74 74 244, 246, 248 1167 132, 134 27 92–98 89 89
Greek tubes Symmetrical attenuator H attenuator O attenuator Pi attenuator T attenuator trapezoid wave T Tables, mathematical Tangents, hyperbolic T antennas Tapping hole, screws Taykor's theorem Telegraph carrier systems codes, comparison facilities printer frequency speed systems speeds	15 127 106 108 106, 110 106, 110 108 282 304–323 318 224 39 297 187 193 192 192	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves Theorems Maclaurin's network reciprocity superposition Taylor's Thevenin's Thermal agitation Thermal properties, insulating material materials Therefore the properties Theorems Thoriated-tungsten filament Time belts, worldwide Time constant filters TIme, Greenwich central Time interval, reflected signal	43 123 123 23 207 123 128, 129 207 74 74 74 297 74 244, 246, 248 aterials 40 46, 47 74 132, 134 27 92–98 89 27 244
Greek tubes Symmetrical attenuator H attenuator O attenuator Pl attenuator T attenuator trapezoid wave T Tables, mathematical Tangents, hyperbolic T antennas Tapping hole, screws Taylor's theorem Telegraph carrier systems codes, comparison facilities printer frequency speed systems speeds Telephone cable	15 127 106 108 106, 110 106, 110 108 282 304—323 318 224 39 297 187 193 192 192 192 192 192	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves Theorems Maclaurin's network reciprocity superposition Taylor's Thevenin's Thermal agitation Thermal properties, insulating mathemate Thermocouples Thevenin's theorem Thoriated-tungsten filament Time belts, worldwide Time constant filters Time, Greenwich central Time interval, reflected signal Tin, solder metting point	43 123 123 23 207 123 128, 129 207 74 74 74 297 74 244, 246, 248 atterials 40 46, 47 74 132, 134 297 92–98 89 27 244 47
Greek tubes Symmetrical attenuator H attenuator O attenuator Pi attenuator T attenuator trapezoid wave T Tables, mathematical Tangents, hyperbolic T antennas Tapping hole, screws Taylor's theorem Telegraph carrier systems codes, comparison facilities printer frequency speed systems speeds Telephone cable attenuation	15 127 106 108 106, 110 106, 110 108 282 304–323 318 224 39 297 187 193 192 192 192 192 192 192	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves Theorems Maclaurin's network reciprocity superposition Taylor's Thevenin's Thermal agitation Thermocouples Thevenin's theorem Thoriated-tungsten filament Time belts, worldwide Time, Greenwich central Time, Greenwich central Time, interval, reflected signal Tin, solder melting point TM waves	43 123 131 123 23 207 128, 129 207 297 74 74 244, 246, 248 aterials 46, 47 74 132, 134 27 92–98 89 27 244 47 207
Greek tubes Symmetrical attenuator H attenuator O attenuator Pl attenuator T attenuator trapezoid wave T Tables, mathematical Tangents, hyperbolic T antennas Tapping hole, screws Taylor's theorem Telegraph carrier systems codes, comparison facilities printer frequency speed systems speeds Telephone cable	15 127 106 108 106, 110 106, 110 108 282 304—323 318 224 39 297 187 193 192 192 192 192 192	metals reactor rise, tube transformer world TEM waves Terminals, winding Terminology, tube TE waves Theorems Maclaurin's network reciprocity superposition Taylor's Thewenin's Thermal agitation Thermal properties, insulating materials Thereacouples Thevenin's theorem Thoriated-tungsten filament Time belts, worldwide Time constant filters Tlme, Greenwich central Time interval, reflected signal Tin, solder melting point TM waves Toll cable	43 123 123 23 207 123 128, 129 207 74 74 74 297 74 244, 246, 248 atterials 40 46, 47 74 132, 134 297 92–98 89 27 244 47

T pad—Tubes, gaseous and vacuum

I pad	114	ransmission continued		
Transconductance	128	4-wire line		197
Transfer characteristic	129	length		205
Transformation, conversion factors	31	miscellaneous		197
tee-pi	86	mismatch		198
wye-delta	86	noise		189
Transformers		parallel, impedance		197
audio	122	resistance		206
auto	122	shielded balanced, impedance		196
cores	123	shielded, impedance		197
design	124	stub		199
driver	122	surge impedance		195
filament	122	u-h-f attenuation		204
humidity	123	2 open wire, impedance		196
input	122	modulation types		32
interstag e	122	speed, telegraph		192
iron-core	122-126	tolerances, frequency		30
major types	122	wave guides		207
modulation	122	Transverse electromagnetic waves		207
output	122	Trapezoidal rule		293
plate	122	Trapezoid, area		291
power supply	122	Trapezoia wave	282,	283
pressure	123	Triangle, area		291
protective gaps	123	Triangles, trigonometric solution		298
Scott	122	Trigonometry		
temperature	123	formulas	294-	-296
Transients	92-98		, 310-	
Transmission, Transmitters—see also		functions, natural	306-	
tenuation, Field Intensity, Propo		solution, triangles		298
tion	-3-	spherical		240
codes	193	Triode perveance		129
frequency bands	32	Triode plate current		129
frequency, printer	192	Tropical, finishes and materials		50
frequency tolerances	30	T-section attenuators		100
line—see also Telephone line		Tubes, gaseous and vacuum	127-	
Army-Navy standard	201	amplification factor	127,	
attenuation	204	amplifiers	143~	
attenuation, mismatch	198	cathode ray	136-	
balanced, impedance	196	accelerating electrode		137
beaded, impedance	196	anode		137
coaxial, împedance	196	application		139
constants	99, 179	brightness		139
Open-wire pairs	179	characteristics	138,	
toll cable	182	control		138
toll entrance cable	182	electrode		136
coupled sections	200	cut-off voltage		138
formulas	194	deflection factor		138
ground, impedance	197	deflection plates		137
impedance	180, 194	deflection potential		139
balanced line	196	deflection sensitivity		139
beaded line	196	electrodes	136,	
coaxial	196	arrangement	,	137
matching stub	199	electron velocity	140,	
open stub	199		139,	
open 2-wire	196	focusing	138,	
parallel wires	197	electrode	100,	137
shorted stub	199		140,	
telephone cable	183, 184	grid voltage	1.70,	139
telephone line	180, 182	intensifier electrode		137
			1.40	
wire to ground	197		140,	
wire to shield	197	modulating electrode		136
2 wires to ground	197	modulation		138

Tubes, gaseous and vacuum—Volume

T			II ▼ K		
Tubes continued		137	Tubes continued triodes		142
post-accelerating electrode		137	plate current		129
preaccelerating electrode screen grid		137	tungsten filament		132
shielding		139	twin tetrodes		142
spot size		139	twin triodes		142
types		142	uhf		134
clipper		142	variational plate resistance		128
coefficients	127,		velocity-modulated	134,	
composite diode lines		129	voltage regulators		142
constant current characteristics		129	water cooling		131
control grid		128	Tuned circuits		
converters		142	optimum coupling		79
cooling		131	parallel, dynamic resistance		76
critical grid voltage		129	selectivity		80
diodes		142	series, resonant frequency		75
plate current		129	Tungsten filament		132
electron inertia		135	Turnstile antenna, radiation pattern		264
electrode characteristic		129	Two-hop transmission	228,	229
electrode dissipation		131	Two-wire, open, copper line		206
emission	128,	133	impedance		196
filament	•		·		
characteristics	132-	134	l u		
life		133	U		
reactivation		134	Ultra high frequency		
voltage	133,	142	electron inertia		135
forced-air cooling		131	lines, attenuation		204
formulas		129	transmission lin es see Transmissi	on	
gas		142	lines		
switching		142	tubes	134-	
grid control		142	Unbalanced Pi attenuator		106
indicators		142	Unbalanced T attenuator		106
Klystrons		135		1, 16,	
	135,		Unsymmetrical trapezoid		283
mutual conductance		129			
n eg ative-grid	134,		v		
nomenclature		127	V tub Tub		
oxide-coated cathode		132	Vacuum tubes—see Tubes		273
pentodes		142	van der Pol oscillator		128
performance limitations		130	Variational plate resistance		120
perveance		129 142	Velocity light		28
phototubes		128	modulated tubes		135
plate resistance	134,		telephone cable	183,	
positive-grid		142	telephone lines	.00,	180
power preferred list		142	transmission line		194
primary emission		128	variation—see Velocity modulation	n	
pulse modulators		142	wind		42
radiation cooling		131	Vertically polarized waves		240
receiving		142	Vertical radiators	254~	-258
rectifiers		142	Very-short-waves, propagation	231-	
screen grid		128	V-H-F propagation	231-	-234
secondary emission		128	path length		232
space-charge grid		128	Voice-frequency carrier		187
suppressor grid		128	Voltoge, gap breakdown		48
terminology		128	Voltage, ratio to decibels		34
tetrodes		142	Voltage regulators		142
thoriated tungsten filament	132,		Volume		
total emission		128	cone		293
transconductance		128	cylinder		293
transfer characteristic		129	music		174
transmitting		142	pyramid		293

Volume—Y-delta transformation

Volume continued		Wave, integrated	274
speech	174	Wavelength-frequency	
sphere	293	chart	29
		classifications	28
		conversion	29
W		formulas	29
Washers, screws	39	spectrum	28
Water		telephone cable	183, 184
cooling, tube	131	telephone lines	180
discharge rate	49	transmission line	194
head in feet	49	Wave propagation—see Pro	pagation
resistance through pipes	49	Wave shaping	274
Wave analysis	281	Weather data	23, 42
clipped sawtooth	284	Weights, atomic	19
critically damped exponential	287	Wet-bulb thermometer	20
Fourier	277	Winding terminals	123
full-wave rectified	287	Wind velocities and pressures	42
Isosceles triangle	283	Wire	
rectangular	282	American gauge	35
sawtooth	284, 285		5, 36, 37, 38, 60
sine	285, 286	sizes, loudspeaker	171
symmetrical trapezoid	282	spacing, telephone lines	180
unsymmetrical trapezoid	283	transmission	179-193
Wave-filter reactors	123	World, distances	240
Wave forms		World time chart	27
analysis	281	Wye-delta transformation	86
Fourier analysis	277-287		
nonsinusoidal	272-287		
shaping	274	X	
Wave guides and resonators	207-223	X-rays	28
attenuation	216	A-rays	20
circular	213-217		
cut-off wavelength	216	lγ	
horns	217	_ ·	
rectangular	208	Y-delta transformation	86