

Rapport

Laboratory Report



4 september 2017

Author: Caroline Nilsson Daniel Alm Grundström

Termin: HT 2017

Course: 1DT301 - Computer

Technology I

Innehåll

1	Introduktion	1
2	Assignment 1 - Light LED2 2.1 Assembly Program	3
3	Assignment 2 - Switch light corresponding LED 3.1 Assembly Program	4 5
4	Assignment 3 - $Swift5 \rightarrow LED0$ 4.1 Assembly Program	6 7
5	Assignment 4 5.1 Assembly Program	8
6	Assignment 5 - Waterfall 6.1 Assembly Program	9 10
7	Assignment 6 - Johnson counter 7.1 Assembly Program	11

1 Introduktion

In the process of working with the laboratory assignments we started by doing research about the assembly language and the STK600 in order to better understand how to solve the different assignments. In each assignment we first created a pseudocode solution which we converted to flowchart diagrams, then it was rather simple to convert this into assembly language. Common for all assignments is also that we have been using the simulations to confirm that the program is working and completing the correct tasks.

2 Assignment 1 - Light LED2

In the first assignment we were to light up LED2 (which is the third light counting from the right).

```
Algorithm 1 Light LED2


procedure PSEUDOCODE

PortB = output

repeat

Led2\ bitstring \rightarrow PortB

until \infty
```

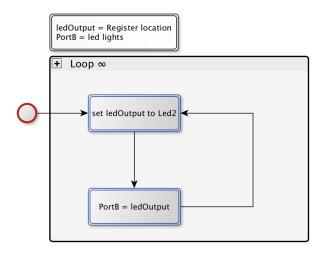

Figur 2.1: Flowchart

The pseudocode (see algorithm 1) and the flowchart (see figure 2.1) shows that we first set Port B as an output port, the value 0000 0100 is saved at a register location (in our case that is R16) and then sent to Port B which makes LED2 (or the third led from the right) light up. Minimum lines of code?


```
Date: 2017-09-02
Author:
                            Caroline Nilsson
Daniel Alm Grundstrom
                                                           (cn222nd)
(dg222dw)
    Lab number:
                           How to use the PORTs. Digital input /output. Subroutine call.
     Title:\\
                            STK600, CPU ATmega2560
     Function:
                            Lights LED2 on PORTB
     Input ports:
     Output ports:
                            PIN2 on PORTB
    Subroutines:
Included files:
                           N/A
m2560def.inc
     Other information:
    Changes in program:
                            2017-09-01:
Implemented flowchart design.
                           2017-09-02:
Added comments and .def for r16
!<<<<<<<<>.include "m2560def.inc"
.def ledOutput = r16
; Set PORTB to output
ldi ledOutput, PINB2
out DDRB, ledOutput
; TODO: Test on hardware if it is neccessary to have this in a loop
| IODO. . . | loop:
| out PORTB, ledOutput
| rjmp loop
                                    ; Turn on LED2 on PORTB
```

3 Assignment 2 - Switch light corresponding LED

Algorithm 2 Switches pressed lights corresponding LED

```
procedure PSEUDOCODE

PortB = output
PortD = input
repeat
PortD value \rightarrow switchState
Invert value \ at \ switchState
switchState \rightarrow PortB
until \infty
```

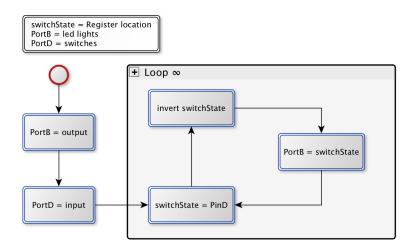

Figur 3.2: Basic flow in order to read switches and light corresponding LED


```
Date: 2017-09-02

Author:
                                                                                                                                        Caroline Nilsson
Daniel Alm Grundstrom
                                                                                                                                                                                                                                                                                                   (cn222nd)
                                                                                                                                                                                                                                                                                                   (dg222dw)
                        Lab number:
                                                                                                                                       How to use the PORTs. Digital input /output. Subroutine call.
                        Title:
                                                                                                                                        STK600, CPU ATmega2560
                                                                                                                                       Reads input from the switches SW0..SW7 and lights the corresponding LED when a switch is pressed. (SW0 lights LED0, SW1 lights LED1 and so on)  \frac{1}{2} \frac{1}
                        Function:
                        Input ports:
                                                                                                                                        PORTD
                        Output ports:
                                                                                                                                       PORTB
                                                                                                                                       N/A
m2560def.inc
                        Subroutines:\\
                       Included files:
                                                                                                                                      Since a pressed switch is registered as a 0 and a released switch is registered as a 1. The bit string read from PORTD must be inverted before the output is redirected to the LEDs.
                        Other information:
                        Changes in program:
                                                                                                                                       2017-09-01:
Implemented flowchart design.
                                                                                                                                        2017-09-02:
Adds header and comments.
; Set PORTB (LEDs) as output ldi switchInput, 0xFF out DDRB, switchInput
 ; Set PORTD (switches) as input
ldi ledOutput, 0x00
out DDRD, ledOutput
 loop:
in switchInput, PIND
                                                                                                                                                                                ; Read input from switches
; Invert input bit string
; Output inverted bit string to LEDs
                       com switchInput
out PORTB, switchInput
                        rjmp loop
```

4 Assignment 3 - Swift5 lights LED0

Algorithm 3 Light LED0 when switch5 is pressed

```
 \begin{array}{l} \textbf{procedure} \ \mathsf{PSEUDOCODE} \\ PortB = output \\ PortD = input \\ \textbf{repeat} \\ clear \ ledState \\ if \ Switch5 \ is \ pressed \ \textbf{then} \\ ledState = LED0 \ bit \ string \\ ledState \rightarrow PortB \\ \textbf{until} \ \infty \end{array} \Rightarrow \begin{array}{l} ledState \ \  \  \\  \end{array}
```

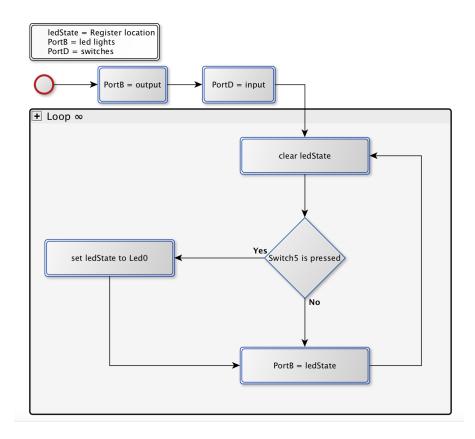

Figur 4.3: Flowchart

```
Caroline Nilsson
Daniel Alm Grundstrom
                                                              (cn222nd)
                                                              (dg222dw)
     Lab number:
                            . How to use the PORTs. Digital input /output. Subroutine call.
     Title:
                            STK600, CPU ATmega2560
     Function:
                             Turns on LEDO when SW5 is held down.
     Input ports:
                            PORTD
     Output ports:
                            PORTB
    Subroutines:
Included files:
                            N/A
m2560def.inc
    Other information: As with assignment 2, we have to keep in mind that a pressed switch is registered as a 0.
     Changes in program:
                             2017-09-01:
                             Implemented flowchart design.
                             2017-09-04:
                             Minor refactoring. Adds header and comments.
,
;<<<<<<<<<<<<<<<<<<<><
.include "m2560def.inc"
.def dataDir = r16
.def ledState = r17
; Set PortB as output
ldi dataDir, 0xFF
out DDRB, dataDir
; Set PortD as input
ldi dataDir, 0x00
out DDRD, dataDir
loop:
clr ledState
                                          ; Clear LED state so LED is turned off when ; button is released
                                           ; If SW5 is pressed down (PIND5 bit is zero) ; then set LED0 state to turned on
     sbis PIND, PIND5
         ldi ledState, 0x01
    out PORTB, ledState
                                          ; write state to LEDs
     rjmp loop
```


5 Assignment 4

Algorithm 4
procedure PSEUDOCODE

Figur 5.4: Flowchart

6 Assignment 5 - Waterfall

Algorithm 5 Waterfall simulation using LEDs

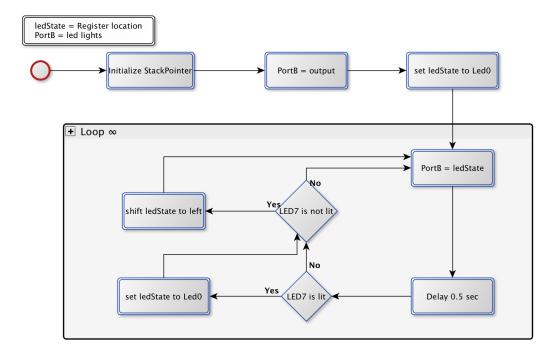

Figur 6.5: Flowchart

```
1DT301, Computer Technology I
      Date: 2017-09-04
      Author:
                                  Caroline Nilsson
                                                                          (cn222nd)
                                  Daniel Alm Grundstrom
                                                                          (dg222dw)
      Lab number:
                                  How to use the PORTs. Digital input /output. Subroutine call.
      Title:
                                  STK600, CPU ATmega2560
      Function:
                                  Repeatedly lights LEDs sequentially right to left.
                                  1.0:


0000 0001 -> 0000 0010 -> 0000 0100 -> ... ->

1000 0000 -> 0000 0001 -> 0000 0010 -> ...
      Input ports:
      Output ports:
                                  PORTB
                                  \begin{array}{lll} delay\_500ms & - & delays & execution & for & 500 & ms \\ m2560def.inc & & & \end{array}
      Included files:
                                  Since a subroutine is used, the stack pointer must be initialized so the processor knows where in the code to jump when the subroutine returns.
      Other information:
     Changes in program:
                                  2017-09-01:
Implements flowchart design
                                  2017 - 09 - 04:
                                  Adds header, comments and some minor refactoring
.include "m2560def.inc"
.def dataDir = r16
.def ledState = r17
.def INITIAL\_LED\_STATE = 0x01
; Initialize SP, Stack Pointer ldi r20, HIGH(RAMEND) out SPH, R20
                                                         ; R20 = high part of RAMEND address
; SPH = high part of RAMEND address
; R20 = low part of RAMEND address
; SPL = low part of RAMEND address
ldi R20, low(RAMEND)
out SPL,R20
; Set PORTB to output
ldi dataDir, 0xFF
out DDRB, dataDir
ldi ledState, INITIAL_LED_STATE
                                                        ; Set initial LED state
loop:
                                                         ; Write state to LEDs
; Delay to make changes visible
     out PORTB, ledOutput
      rcall delay_500ms
      sbic PORTB, PORTB7
                                                         ; If LED7 is lit
           ldi ledState, INITIAL_LED_STATE; then reset LED state to initial
      sbis PORTB, PORTB7
                                                         ; else
; shift LED state to the left
          lsl ledState
; Generated by delay loop calculator ; at http://www.bretmulvey.com/avrdelay.html
   Delay 4 000 000 cycles
; 500ms at 8.0 MHz
delay_500ms:
ldi r18, 21
ldi r19, 75
ldi r21, 191
L1: dec r21
brne L1
dec r19
brne L1
      dec r18
brne L1
      nop
      ret
```

7 Assignment 6 - Johnson counter

Algorithm 6 Johnson counter simulation using LEDs

```
procedure PSEUDOCODE
    PortB = output
    currentValue = 0
                                                     \triangleright currentValue = register\ location
   multiplier = 2
                                                         \triangleright multiplier = register\ location
   repeat
                                                                       \triangleright Loop\_1 (count up)
        if LED7 is lit then
            Continue at Loop_2
        else
            currentValue \times multiplier \rightarrow currentValue
            Increase currentValue by 1
        currentValue \rightarrow PortB
        Delay 0.5 sec
    until \infty
                                                                    \triangleright Loop_2 (count \ down)
    repeat
        if LED0 is lit then
            Continue at Loop_1
        else
            Move\ right
        currentValue \rightarrow PortB
    until \infty
```

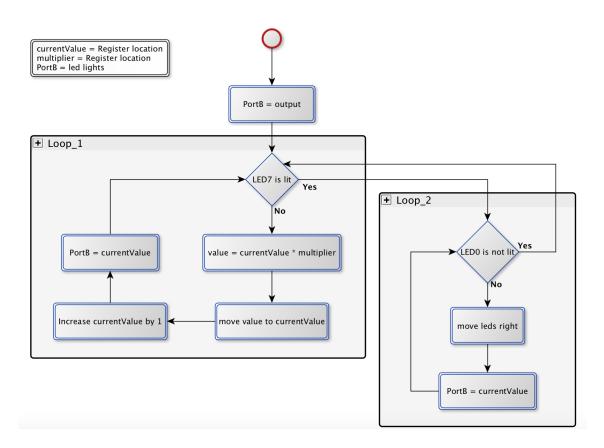

Figur 7.6: Flowchart

```
1DT301, Computer Technology I
     Date: 2017-09-04
     Author:
                                Caroline Nilsson
                                                                    (cn222nd)
                                Daniel Alm Grundstrom
     Lab number:
                               How to use the PORTs. Digital input /output. Subroutine call.
     Title:
                                STK600, CPU ATmega2560
     Function:
                                Lights LEDs as a Johnson counter in an infinite loop.
                                11.6:

0000 0001 -> 0000 0011 -> 0000 0111 -> ...

1111 1111 -> 0111 1111 -> 0011 1111 -> ...
     Input ports:
     Output ports:
                               PORTB
                                Subroutines:
     Included files:
                                m2560def.inc
     Other information: N/A
     Changes in program:
                                2017-09-02:
                                Implements flowchart design
                               2017-09-04:
                               Adds header and comments
,
;<<<<<<<<<<<<<<<<<<<><
.include "m2560def.inc"
.def dataDir = r16
.def currentValue = r17
.def multiplier = r18
                                                    ; Current value of Johnson counter
; Initialize SP, Stack Pointer
ldi r20, HIGH(RAMEND)
out SPH,R20
ldi R20, low(RAMEND)
out SPL,R20
                                                    ; R20 = high part of RAMEND address
; SPH = high part of RAMEND address
; R20 = low part of RAMEND address
; SPL = low part of RAMEND address
ldi currentValue, 0x00
ldi multiplier, 0x02
  Set PORTB as output
ldi dataDir, 0xFF
out DDRB, dataDir
count_up:
    sbic PORTB, PORTB7
                                                    ; If LED7 is lit (i.e. all LEDs lit) ; then start counting down
         rjmp count_down
     ; Get next johnson value by multiplying by 2 and adding 1 mul currentValue , multiplier mov currentValue , \tau 0
     inc currentValue
                                                    ; Ouput johnson value to LEDs
; Delay to make changes visible
; Continue counting up
     out PORTB, currentValue rcall delay_500ms
     rjmp count_up
count down:
     sbis PORTB, PORTB0
                                                    ; If LEDO is unlit (i.e. all LEDs unlit)
         rjmp count_up
                                                     ; then start counting up
                                                    ; Shift to right to get previous ; johnson value
     lsr currentValue
     out PORTB, currentValue
                                                    ; Output johnson value to LEDs
                                                    ; Delay to make changes visible ; Continue counting down
     rcall delay 500ms
     rjmp count_down
; Generated by delay loop calculator
; at http://www.bretmulvey.com/avrdelay.html
   Delay 4 000 000 cycles
   500ms at 8.0 MHz
delay_500ms:
brne L1
dec r30
brne L1
     dec r31
brne L1
     nop
```