System Architecture

Todd Davies

May 3, 2015

Introduction

The basic architecture of computer systems has been covered in first year course units which detailed both the instruction set architecture and the micro- architecture (hardware structure) of simple processors. Although these principle underlie the vast majority of modern computers, there are a wide range of both hardware and software techniques which are employed to increase the performance, reliability and flexibility of systems.

Aims

The aims of this course are to introduce the most important system architecture approaches. To give a wider understanding of how real systems operate and, from that understanding, the ability to optimise their use.

The syllabus includes:

- The motivation behind advanced architectural techniques.
- Caching
- The need to overcome latency. Caching as a principle, examples of caching in practice. Processor cache structure and operation.
- Pipelining
- Principles of pipelining. Implementation of a processor pipeline and its properties. Pipelining requirements and limitations. Additional support for pipelining.
- Multi-Threading
- Basic multi-threading principles. Processor support for multi-threading. Simultaneous multi-threading.
- Multi-Core
- Motivation for multi-core. Possible multi-core structures. Cache coherence.
- File System Support
- Implementation of file systems. RAID
- Virtual Machines
- Motivation for Virtual Machines. Language Virtual Machines. System Virtual Machines. Virtual Machines implementation. Binary Translation

Contents			4	Pipelines	7
				4.1 Control Transfer Problem	7
1	Introduction	3		4.1.1 Branch Prediction	8
				4.2 Data Hazards	9
2	Caches	3		4.3 Instruction Level Parallelism	10
	2.1 Why are caches expensive?	3		4.3.1 Out of Order Execution	11
	2.2 L1 Cache	3		4.3.2 Programmer assisted ILP	12
	2.3 Types of cache	4			
	2.3.1 Fully associative	4	5	Multi-Threading	13
	2.3.2 Directly mapped	5		5.1 Context switch	13
	2.3.3 Set associative	5		5.2 Hardware multithreading	13
				5.2.1 Coarse grain multithreading	14
3	Practical caches	5		5.2.2 Fine grain multithreading	15
	3.1 Cache control bits	5		5.2.3 Simultaneous multithreading (SMT)	15
	3.2 Exploiting spatial locality	5		5.2.4 Disadvantages of hardware multi-	
	3.3 Separate instruction and data caches	5		threading \dots	15
	3.4 Multi level caches	5	6	Multi-Core	1 -
	3.5 Cache misses	6	O	Mutti-Core	15
	3.6 More cache performance	6	7	Vitalisation	15
	3.7 Cache consistency	6	•		
	3.8 Virtual Addresses	6	8	Permanent Storage	15

1 Introduction

Performance is always an attribute in high demand in computer systems. Even though processors have become so much more powerful over the last half century, there's still loads of stuff that we cannot do with current technology, such as synthesising HD video in realtime, or computing realistic game physics.

Since 2004/5, companies haven't been able to increase the speed of microprocessors at such a rapid rate due to physical limits, such as power dissipation and device variability. Our devices are still getting faster, but now architecture and the design of systems play a larger role in making stuff run faster. An example of this include making computation more parallel.

2 Caches

Not all technology has improved at the same relative speed. CPU's have become over three orders of magnitude faster over the past thirty years, but memory has increased by only one order of magnitude. This is problematic, since it means that we need to reconcile this gap in order to achieve efficient computation.

Processor caching is used to let the processor do useful computation while it's also waiting on the memory. Modern processors couldn't perform anywhere near how fast they do now without equally modern caching techniques, since the imbalance between the CPU and main memory is so high.

Caches (in general) provide a limited, but very fast local space for the CPU to use. They are used in lots of places all over computer science, including web browsers, mobile phone UI's etc. Likewise, a processor cache is a temporary store for frequently used memory locations.

The principle of locality is what makes caches work for processors, which is that the CPU will only use a small subset of memory over a short period of time. If this subset of memory can be loaded into the cache, then the computation can be sped up significantly.

Every 'cache miss' takes at least sixty times longer to execute than a 'cache hit' will (that's assuming there are no page faults etc). Circuit capacitance is the thing that makes electronic devices slow, and larger components have a larger capacitance, henceforth large memories are slow. Dynamic memories (DRAM) store data using capacitance, and are therefore slower than static memories (SRAM) that work using bistable circuits.

Even the wires between the processor and the memory have a significant capacitance. Driving signals between chips needs specialised high power interface circuits. An ideal situation would be to have everything on a single chip, however current manufacturing limitations prevent this; maybe one day we will be able to do this.

2.1 Why are caches expensive?

L1, L2 and (usually) L3 caches are SRAM instead of DRAM (which is what main memory is made from).

SRAM needs six transistors per bit, DRAM needs one.

SRAM is henceforth physically larger, taking up more space on the chip, which is expensive, since real estate costs money.

2.2 L1 Cache

The L1 cache is the first level of caching between the processor and the main memory. The L1 cache is around 32kb, which is very small in comparison to the size of the main memory, but this is driven out of necessity, since the cache needs to be small to be fast. The cache must be

able to hold any arbitrary location in the main memory (since we don't know in advance what the CPU will want), and henceforth requires specialised structures to implement this.

2.3 Types of cache

The cpu will give the cache a full address of a word in memory that it wants to read. The cache will contain a small selection of values from memory that it has locally, but will ask the main memory for values that it does not have. This is called a cache miss and is expensive in comparison to a cache hit.

2.3.1 Fully associative

A Fully Associative cache is one where the cache is small (around 32,000 values), but stores both addresses and their corresponding data. The hardware compares the input address with all of the stored addresses (it does this in parallel). If the address is found, then the value is returned with no need to ask the RAM (cache hit), if the value isn't found, then a cache miss occurs, and the request must go to the main memory.

Caches rely on locality in order to function effectively. There are two types of locality; temporal locality, which is the principle that if you use an address once, you may use it again soon (e.g. loops), and spatial locality, where if you use an address once, you are also likely to use addresses nearby (e.g. arrays).

The cache hit rate is the ratio of cache hits to misses. We need a hit rate of 98% to hide the speed of memory from the CPU. Instruction hit rates are usually better than data hit rates (although they are in the same cache remember). The reason for this is that instructions are accessed in a more regular pattern, incrementing by one word every time, or looping around etc (have higher locality).

When we do a cache miss (read), we should add the missed value to the cache. In order to do this, we need a cache replacement policy to find room in the cache to put the new value:

- LRU slow, good for hit rates
- Round Robin not as good, easier to implement
- Random Easy to implement, works better than expected.

Memory writes are more complicated than reads. If we've already got the value in the cache, then we change the value in the cache. We can use three write strategies for cache writes (on hits):

- Write through (slow)
- Write through + buffer (faster, slow when heavily used)
- Copy back on cache replacement.

On misses:

- We can find a location in the cache, and write to that, then rely on copy back later, or write back straight away.
- we can skip the cache, and write directly to RAM. Subsequent read will add to the cache if necessary (good if you're initialising datastructures with zeroes).

Fastest one is write allocate or copy back. Main memory and the cache aren't coherent, which can be a problem for stuff like multiprocessors, autonomous IO devices etc. This may need cleaning up later.

Each cache line is at least half address and half data, but often, we store more data per address, so will have 64 bytes of data per 32 bit address.

A fully associative cache is ideal, but this is expensive (in terms of silicon and power).

Spatial locality is exploited better by having a bigger data area in the cache (returning say 512 bits for every address instead of just one word)

2.3.2 Directly mapped

We can use standard RAM to create a directly mapped cache, which mimics the functionality of an ideal cache. Usually, this uses static RAM, which is more expensive than dynamic RAM, but is faster. The address is divided into two parts,

2.3.3 Set associative

Set associative caches are a compromise. They comprise of a number of directly mapped caches operating in parallel. If one matches, we have a hit and select the appropriate data. This is good because we can have more flexible cache replacement strategies. In a 4 way, we could choose any one of the four caches for example. The hit rate of set associative caches improves with the number of caches, but increasing the number increase the cost.

3 Practical caches

3.1 Cache control bits

When the system is started, the cache is empty. We need a bit for each cache entry to indicate that the data is meaningful (i.e. it isn't just an uninitialised zero or something). We also need a dirty bit if we're using the 'write back' caching strategy (see above), rather than the 'write through' strategy.

3.2 Exploiting spatial locality

In order to exploit spatial locality, we need to have a wider 'cache line', where each entry will give you more data than just one word. Each entry tag could correspond to two, four, eight etc words. Spatial locality says that if we get one byte, we'll probably want one from close by too.

The lowest bits are used to select the word in the cache line. Most cache lines are 16 or 32 bytes, which is 4 or 8 32bit words. The data is transferred from RAM in bursts equal to the width of the line size, using specialised memory access modes.

The line size is important, since we want to have a line size of multiple words to exploit spatial locality, but if the line is too big, then parts of it will never be used. The number of cache misses decreases as you increase the cache line size, until one point, where the line size will be too long to use all the words, and then the number of misses will increase.

3.3 Separate instruction and data caches

Since instructions and data have different access patterns in memory (but they are stored in the same memory), we could use different caches for each type of word, so that the different caches can use different strategies to minimise misses according to their different access patterns.

3.4 Multi level caches

As chips get bigger, in theory, we should build bigger caches to perform better. However, big caches are slow, and the L1 cache needs to run at processor speed. We can instead put another cache between the RAM and the L1 cache, and keep the L1 cache the same size.

The L2 cache is typically sixteen times bigger than the L1 cache, but also four times slower. It's still ten times faster than RAM though. The L1D and L1I caches both share the L2 cache.

If a chip has an L3 cache, then it is usually quite large (maybe around 8Mb), but its performance is only about twice as good as that of RAM.

3.5 Cache misses

There are three types of cache misses, called the three C's

Compulsory misses

When we first start the computer, the cache is empty, so until the cache is populated, we're going to have a lot of misses.

Capacity misses

Since the cache is limited in size, we can't contain all of the pages for a program, so some misses will occur.

Conflict misses

In a direct mapped or set associative cache, there is competition between memory locations for places in the cache. If the cache was fully associative, then misses due to this wouldn't occur.

3.6 More cache performance

In order to fill a cache from empty, it takes $\frac{\text{Cache size}}{\text{Line size}}$ memory accesses. If we multiply this by the time it takes for a single memory access (say $10\mu s$), then we can work out how long it will take to fill the cache (assuming each access is to a unique memory address). We can derive how many CPU cycles this takes from this.

3.7 Cache consistency

We need to make sure that the values stored in the CPU cache are consistent with those in main memory. There are situations when they can disagree, for example if IO reads or writes directly to memory (perhaps using DMA), then that value could be different from whatever is in the cache.

Solutions:

Non-cacheable

One solution is to make areas of memory that IO can access non-cachable, or clear the cache before and after the IO takes place.

IO use data cache

Another is to have the IO go directly through the CPU's L1d (data) cache before accessing memory, but this is slow.

Snoop on IO activity

We could have hardware logic that will look at the reads and writes to memory from IO and make sure the cache is consistent with memory for those addresses.

3.8 Virtual Addresses

Since the CPU deals with virtual addresses when accessing memory, and uses a Translation Lookaside Buffer to derive the correct physical address. However, which address does the cache store? Does it sit before the TLB, or after it between the CPU and memory?

If we make addresses go through the TLB before they reach the cache, then this is slow, since they must pass through extra logic etc before hitting the cache. However, if we make the cache store virtual addresses, and have the TLB sit inbetween the cache and memory, this makes snooping hard to implement along with more functional difficulties. The answer is to have the TLB operate in parallel to the cache. Since address translation only affects the high order bits of the cache (the low order bits are the offset which remains the same). The cache index is selected from the low order offset bits, and only the tag is changed by address translation.

4 Pipelines

The fetch execution cycle is very repetitive, if we can optimise it, then we can potentially improve the performance of the system a lot! In very simple systems, each fetch and execute would take one clock cycle; in detail, it'd look like this:

Fetch

IF - Fetch instruction from memory

ID - Decode instruction; select registers

Execute


EX - Perform an operation or calculate an address

MEM - Access an operand in memory

WB - Write to registers

If all that takes one clock cycle, each stage will only be active for about $\frac{1}{5}$ of a clock cycle, or in other words, each CPU component spends 80% of its time doing nothing!

If we can get all of those components of the CPU working at the same time, then we can speed up the clock speed by five times! In order to do this, we can use a pipeline, with buffers that are flushed every clock cycle inbetween each stage of the pipeline:

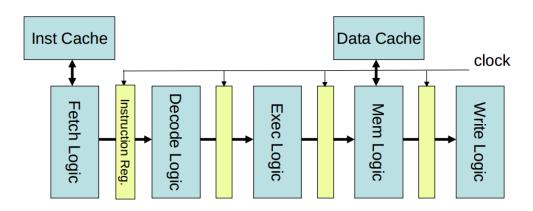

Although we have divided our processor into five stages, you can split it up into more or less than that (the most simple of which is just to divide into fetch and execute as we did in COMP12111 in the first year. Modern processors use a lot of stages, maybe around thirty.)

Figure 1: Using buffers between the different stages of the pipeline

Now, we can still only execute one instruction per cycle, but we can also increase our clock speed by five times, since each stage of the pipeline is isolated by a buffer from the next!

4.1 Control Transfer Problem

Using a pipeline is fab if your instructions occur solely in a serial manner, however, what if your program branches? The processor will only know that a branch is happening at the ID stage of the pipeline, by which time we've already fetched the next instruction!

If we come across a branch at the ID stage, then the fetched instruction at the IF stage will have to be ignored all the way down the pipeline, so we would waste one clock cycle (or more

specifically, we would waste $\frac{1}{5}$ of the work of five clock cycles!). The ignored instruction is said to be a *bubble* in the pipeline.

So far, we've assumed that our branch instruction has relies on no conditional flags. If it did however, we would need to wait until the EX stage of the pipeline before we knew what the outcome of the conditional evaluation would be. This has the potential to create two bubbles, since if the branch was to occur, the instructions at both the IF and ID stages of the pipeline would have to be ignored.

These bubbles are called **control hazards**, and they occur when it takes one or more pipeline stages to detect a branch. Longer pipelines are more likely to suffer from control hazards more, since more of their pipeline will have been processed by the time an instruction is detected to be a branch.

4.1.1 Branch Prediction

The main technique used to mitigate control hazards is **branch prediction**. If we can remember what address a branch directed us to fetch next from what it did when we executed that branch previously, then we could pre- emptively load that instruction in the IF stage instead of fetching the instruction at the PC.

In order to do this, we use a **branch target buffer**. This maps the virtual address of one branch instruction onto the virtual address of the instruction that is branched to, for example:

Branch instruction address	Next instruction address
0xd4f30d2C	0xd4f30d60
0xd4f30d0f	0xd4f30ddd
:	:
0xd4f30c4f	0xd4f30d6c

Table 1: An abstraction of what the datastructure inside a Branch Target Buffer could be like

Now, we will always get unconditional branches right (after we've done it for the first time), and we will get branches that are part of loops (such as a for or while loop) right most of the time. If we predict a branch incorrectly, we just get a bubble like we would if we had no branch prediction, so it's a win-win situation.

Branch prediction is easy to understand, but implementing it is expensive. In practice branch predictors use history of each branch (maybe taking the mode of the last five branches), and the context of the branch (i.e. how did we get to this point) in order to make a more accurate prediction.

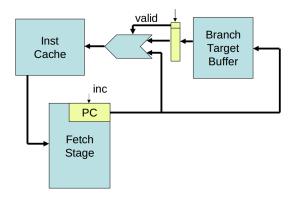


Figure 2: A BTB (Branch Target Buffer) in action

4.2 Data Hazards

If we're using a pipeline to process instructions, then we have multiple instructions at various stages of execution at the same time. This can cause problems, if multiple instructions that are being executed in parallel operate on the same resources. For example, if we execute the ARM Assembly code:

ADD R1, R2, R3 MUL R0, R1, R1

Here, the value in RO depends on that of R1. This is a problem, because we only know the value of R1 once the ADD instruction has finished the EX stage, and the MUL instruction will get the values from the registers while this is happening in it's ID stage, henceforth we won't read the correct value of R1.

Two easy solutions to this problem are to:

- Detect inter-instruction dependencies in hardware and withhold instructions in the decode stage until the data is ready. This creates the bubbles that we've worked so hard to avoid with branch prediction though!
- Have a compiler detect the dependencies, and have it re-order instructions to eliminate them. This is hard to do though, and often results in compilers inserting NOP (no operation) instructions that do nothing. These act like bubbles anyway, so we don't gain anything here either.

Since these are unsatisfactory, we could add extra paths to the pipeline between the ALU output and the ALU input. They could be activated if there is an interdependency so that the incorrect result of the ID stage could be modified before being processed by the ALU.

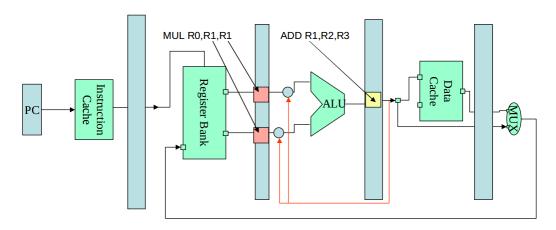


Figure 3: Here, we insert extra paths into the processor so that it can mitigate the ADD/MUL dependency.

What if there is an interdependency with an instruction that might take a while to execute, such as a memory read (LDR)? If we have a program that does:

LDR R1, [R2, R3] MUL R0, R1, R1

Our path would have to look like this:

We want longer pipelines, since we want each stage of the pipeline to do as little work as possible, taking as little time as possible, so that we can increase the clock speed. However, as we do that, we will come across more hazards, and we'll need to put more control paths in to mitigate them. Eventually, there will come a point where increasing the length of the pipeline will result in negative returns.

This problem is called a 'data not ready' issue.

It might take two cycles for a value to be written into a register, one for EX to complete and push the value into the register bank, and another for the value to be written into the register.

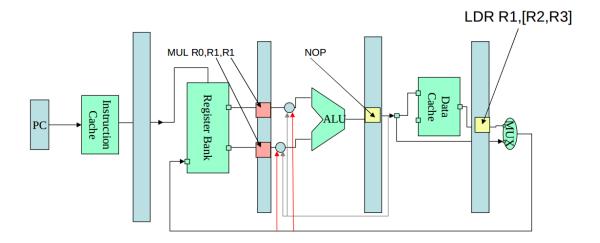


Figure 4: In order to cater for the worst case, where we're waiting on a memory read, we need even more extra paths.

4.3 Instruction Level Parallelism

If there are instructions that do not depend on each other at all, for example:

ADD RO, R2, R3 SUB R1, R4, R5

Then we could run these instructions at the same time, and not experience any side effects. We may run into problems, if there are instructions that depend on these two instructions having completed before they themselves execute, for example:

ADD RO, R2, R3 SUB R1, R4, R5 MUL RO, RO, R1 STR RO, x

We can draw a data flow graph to visualise these dependencies, and easily see which instructions can be run in parallel:

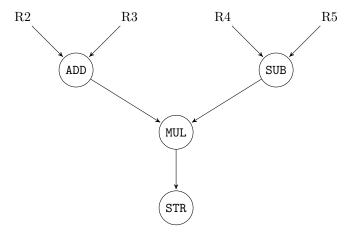


Figure 5: A sample data flow graph.

Though this is a simple example, analysis has shown that it is not uncommon for real programs to have up to four instructions that can be parallelised at some point in the program's running time. Obviously, the amount of times when two or three instructions could be parallelised will be greater than that of four.

In order to exploit this parallelism, we can:

- Fetch multiple (in our case two for simplicity) instructions per cycle.
- Have multiple ALU's to execute instructions in parallel.
- Have common registers and caches, since the instructions are operating on the same data.

Now we could have an architecture looking like that in Figure 6.

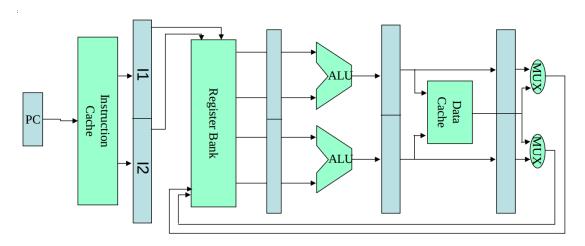


Figure 6: A simple superscalar (implementing ILP) architecture.

If we are able to run multiple instructions at the same time, then our registers and caches are going to have (in this case, which is a low level of parallelism) roughly twice the load that they had previously. In order to allow them to handle this extra load, we can make them **dual ported**, which means that the access circuitry is duplicated so multiple reads and writes can happen simultaneously.

Note, these multiple reads and writes will be occurring in different parts of the register bank and cache, since the parallel instructions are (by nature) independent of each other

In order to implement ILP, we also need a 'dispatch unit' in hardware which is part of the fetch stage (IF). This will fetch multiple instructions if they are independent and be executed in parallel.

4.3.1 Out of Order Execution

In order to get the maximum number of ILP compatible instruction sequences in a program, the compiler may be able to re-order instructions so that they have a reduced number of interdependencies. One technique that is based on this is the Very Long Instruction Word, where each word will be longer than a normal word (maybe 48, 64 or more bits), and will contain more than one instruction.

Having the compiler re-order instructions means that it will sometimes add NOP's into the code, which can increase the binary size, and bloat the code. The alternative it to rely on expensive hardware to detect out of order opportunities at runtime.

To implement an out of order processor, you need to have a buffer that instructions are fetched into, a scheduler to choose which (non-conflicting) instructions to execute at what times, and a cache to store memory and register accesses until all the instructions have finished so that the application can execute normally as though all instructions executed in serial. Figure ?? shows how this could all be implemented.

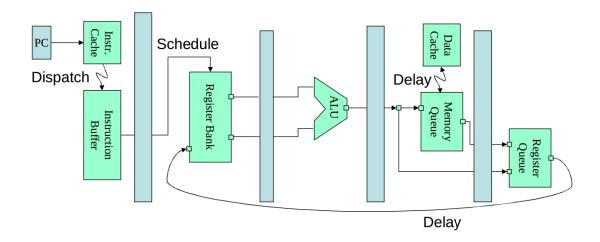


Figure 7: An example of how an out-of-order processor could be implemented.

4.3.2 Programmer assisted ILP

Some processors now support SIMD (Single Instruction Multiple Data) instructions, that allow one instruction to be executed on multiple registers/memory locations etc. This is very useful when doing mathematical computation with stuff like vectors and matrices, since it requires a lot of repetitive operations that lend themselves easily to parallelism.

One example of this is the UADD8 ARM instruction. It adds two registers together into a third register like a normal add, but it does this four times; once for each eight bit chunk in the registers. For example, UADD8 R0, R1, R2 will do:

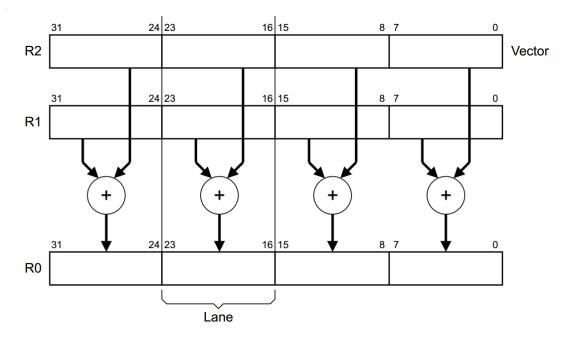


Figure 8: A 4 way 8-bit integer add operation.

5 Multi-Threading

We have already seen, there are many different ways of increasing CPU performance:

- Increasing the clock frequency
- Increasing the *ips* (instructions per clock)
- Minimising the impact of accessing memory with a cache
- Minimising bubbles (branch prediction)
- Minimising bubbles (out of order execution)
- Parallelising instructions (with an superscalar architecture)

And, up to a point

• Lengthening the pipeline

We have said that increasing the parallelism will speed up our pipeline, but in order to do this, we need to find enough instructions to safely parallelise at once. There are multiple ways to do this too:

- When we get a branch instruction, do we pause until we evaluate the outcome of the branch, or keep issuing instructions? If we're using branch prediction, then we can keep issuing instructions.
- After a cache miss, we need to wait for a certain amount of time for the data we want to come from the memory, over the bus and into the CPU. While we're waiting, can we carry on issuing other instructions?
- Process instructions in parallel (e.g. with a superscalar architecture).
- Write to registers while the previous write is pending?

These ways of increasing parallelism are good, but assume we have only one source of instructions. However in reality, a CPU will be executing code from multiple processes at once. What about if we run out of instructions to execute in one program, we could just context switch to another!

5.1 Context switch

In a context switch, the Operating System must load/store a lot of data about the switching processes:

- Process ID
- Process state
- Program Counter
- Stack Pointer
- General registers

- Memory management information
- Open file list (and positions)
- Network connections
- CPU time used
- Parent process ID

5.2 Hardware multithreading

We could have two PC's, two sets of registers (GPR's on the diagram), two virtual address mappings etc, and have the CPU support multi threading naively. This would require the OS to be able to handle multiple processors, since the easiest way of making it work is to make the one processor core look like two processor cores (since the inputs and outputs are effectively doubled). See Figure 10 for a comparison of the three types.

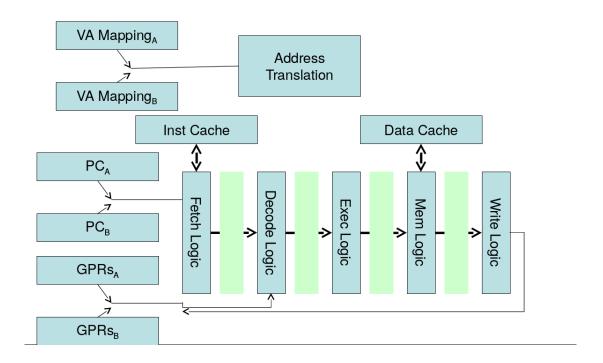


Figure 9: The architecture of a multithreaded CPU

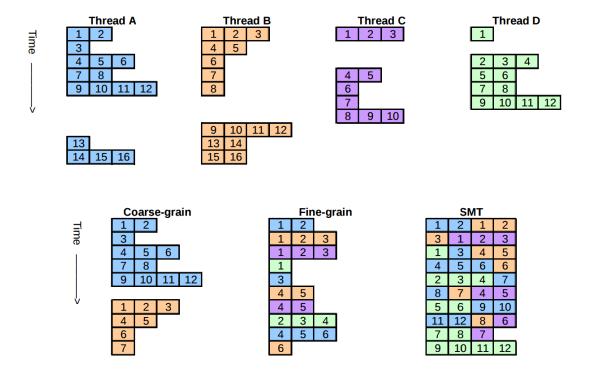


Figure 10: How the three main types of hardware multithreading might execute simultaneous threads.

5.2.1 Coarse grain multithreading

Coarse grain multithreading is when you switch threads whenever the current thread executes an expensive operation. This could be when there is a cache miss for example, or whenever the

CPU has to wait to execute more instructions.

This type of multithreading has benefits. If the CPU can execute one instruction per nanosecond (1GHz), a cache miss takes 20 nano seconds, and one cache miss occurs on average, every hundred instructions, then the time number of instructions per clock cycle is:

Without multithreading

$$\frac{100ns}{100ns + 20ns \text{(one hundred instructions and one cache miss)}} = 0.8333$$

With multithreading

$$\frac{100ns}{100ns + 1ns \text{(one hundred instructions and context switch)}} = 0.99$$

Coarse grain multithreading is good, because it requires a minimal change in the pipeline; only to abort instructions in the 'shadow' of a cache miss and the ability to resume the instruction stream at the correct point afterwards.

5.2.2 Fine grain multithreading

The aim of fine grain multithreading is to be able to switch between CPU threads with as little overhead as possible. This involves interleaving the instructions of several threads. This results in better overall performance, since the impact of short stalls such as accessing memory or the cache is alleviated by executing instructions from other threads. Each individual thread perceives it is being executed slower, but the overall performance is better.

5.2.3 Simultaneous multithreading (SMT)

The idea behind SMT is to exploit both instruction level parallelism and thread level parallelism at the same time. In a superscalar processor (i.e. one that can execute more than one instruction per clock cycle), we can issue instructions from different threads in the same cycle.

SMT requires a significant overhead, and is only really feasible to processors with an out of order execution capability.

5.2.4 Disadvantages of hardware multithreading

Threads can 'trash' the cache for other threads, since they will probably have completely different access patterns, so the overall cache performance may decrease. This will not occur if different threads are accessing the same areas of memory, but this is a relatively rare case (since processes can only access disjoint areas of memory) unless a process has multiple threads processing.

Furthermore, there is a significant increase in the complexity of the hardware required. The thread state, priorities, OS-level information etc must all be maintained by the processor in hardware.

5.2.5 Other techniques

Slipstreaming:

This is when an application is split into two parts; the critical path, and all the rest. The critical path will run ahead, and pass the result of the operations back to the 'main thread'

Memory prefetching:

We could compile the application into two parts here too, except one will get all the memory accesses, and the other will do everything else. This means that the data will always be in the cache when it is needed in the second thread.

Speculative execution:

When we get to a conditional branch in the program, we could spawn two threads; one for each path. When we know which is the correct path, we can kill the thread that wasn't executing that path. In this way, we could avoid control hazards.

- 6 Multi-Core
- 7 Vitalisation
- 8 Permanent Storage