

Industrial PC

CS86-BOX-J1900



PN: CS86-BOX-J1900

Content can change at anytime, check our website for latest information of this product.

# **Contents**

CS86-BOX-J1900	3
1. Product Overview	7
2. Ordering Options	8
2.1. Operating System	8
2.2. Optional Features	9
3. Hardware Features	10
4. Power Input	12
5. Connectivity	13
5.1. RS232 Connectors	13
5.2. USB HOST Connectors	14
5.3. LAN Connectors	15
5.4. HDMI and VGA Connectors	16
5.5. Audio In/Out Connectors	17
5.6. WiFi/BT Module	18
6. Mounting Procedure	19
7. Mechanical Specifications	19
8. Disclaimer	20
9. Technical Support	20

# CS86-BOX-J1900

## **Front View**



# Rear View



# Side View 1



# Side View 2



CS86-BOX-J1900 Product Overview

### **Product Overview**

The CS86-BOX-J1900 is a fanless embedded industrial PC with Intel<sup>®</sup> Celeron<sup>®</sup> J1900 quadcore (4 threads) to meet a variety of requirements in harsh environments. Thanks to the fanless design, this single board computer is stable and reliable in client terminal, multimedia and other industry applications. In addition, its support for 2 x LAN, 2 x COM, 3 x USB2.0, 1 x USB3.0 ports can interconnect devices easily.

#### **Key Applications**

- Industrial Automation
- Process Control
- Smart Grid Management
- CNC Manufacturing
- Environmental Monitoring
- Predictive Maintenance

The offered CPU consumes very little power: its TDP is only 10W at the base clock frequency. From the ground-up, the CPU is built for low power consumption. As such, it is best suited for mobile and power-constrained industrial or field applications.

A specially designed aluminum alloy housing with fins for increased heat dissipation serves as a passive cooler, eliminating the need for built-in fans. The fanless design reduces noise, as well as the maintenance costs and efforts, leading to increased reliability at the same time.



#### Caution

Be careful when handling the product while it is operating: it might become hot under heavy CPU load.

CS86-BOX-J1900 Ordering Options

## **Ordering Options**

Most of the Chipsee products can be customized during the ordering process. The product will be shipped with the pre-installed factory defaults if no extra requirements are specified. The table in the Hardware Features section provides information about the default options bundled with the product.



You can order CS86-BOX-J1900 from the official Chipsee Store or from your nearest distributor.

### **Operating System**

By default, CS86-BOX-J1900 comes with the Ubuntu Linux operating system (OS) pre-installed. A different OS can be selected during the ordering process. In addition to Linux, CS86-BOX-J1900 also supports CentOS, Windows 7, Windows 8 and Windows 10 OS.

CS86-BOX-J1900 **Optional Features** 

### **Optional Features**

The CS86-BOX-J1900 Industrial PC does not include WiFi/BT and/or 3G/4G modules by default. These modules are optional and can be selected at the Chipsee store during the ordering process.



#### Warning

Installation, repair, and maintenance tasks should be performed by trained personnel only. Chipsee does not bear any responsibility for damage caused by inadequate handling of the product. CS86-BOX-J1900 Hardware Features

### **Hardware Features**

The CS86-BOX-J1900 Industrial PC offers a broad range of performance and connectivity options for scalable integration, providing expandability according to future needs. Some of the key features are listed in the table below.

CS86-BOX-J1900		
СРИ	Intel® Celeron® J1900, Quad-Core, 2GHz(Turbo Boost 2.41GHz), 2MB L2 Cache, 10W TDP, AMI BIOS	
GPU	Intel® HD Graphics (Bay Trail) integrated GPU, shared memory	
RAM	Default 4GB 1600MHz DDR3L, up to 8GB (1 x Single channel SO-DIMM 204-pin slot, supports DDR3L, 1066/1333/1600MHz)	
Storage	Default 1 x full size mSATA 64GB SSD, up to 2TB; 1 x 2.5" SATA 2.0	
USB	1 x USB 3.0 (Type A), 3 x USB 2.0 (Type A)	
LAN	2 x RJ45, 10/100/1000 Mbps (Realtek 8111F), supports Wake on LAN (WoL)	
UART	2 x RS232	
3G/4G	Optional, USB module available from the manufacturer, no on-board SIM slot	
WiFi/BT	Optional, mini PCIe module available from the manufacturer	
Audio	Realtek ALC662, two channel, stereo audio, line out	
Display	1 x HDMl Out (1920 x 1080 @ 60Hz), 1 x VGA Out (1920 x 1080 @ 60Hz), supports VGA + HDMl synchronous and asynchronous display	
Extension	1 x half size mini PCle	
Power IN	12V DC(DC-IN 5.5 x 2.5)	
Power Adapter	DC 12V 3A/36W (AC to DC, 100 ~ 240V)	
Current max.	1.25A	
OS	Default Ubuntu, supports CentOS Linux, Windows 7, Windows 8, Windows 10	
Graphic Engine	DirectX 11.1, OpenCL 1.2, OpenGL 3.2; Encoding: H.264, MPEG2/4, VC1, WMV9; Decoding: H.264, MPEG2	
Temp.	From -20°C to +69°C (Operational), From +15°C to +35°C (Storage)	
Humidity	From 5% to 95% relative humidity (no condensation)	
Dimensions	133 x 126.2 x 38 mm	
Structure	Aluminium Casing	
Mounting	VESA 75 x 75, Wall, Desktop	
Weight	0.65 kg	

CS86-BOX-J1900 Hardware Features

Table 292 Table 1: Key Features

CS86-BOX-J1900 Power Input

## **Power Input**

The CS86-BOX-J1900 Industrial PC can be powered by 12V DC. The power input connector is a  $5.5 \times 2.5 \text{ mm}$  DC connector (*Figure 1*).



Figure 910: Figure 1: Power Input Section

The **POWER** button (*Figure 1a*) is located to the opposite side of the power input connector and can be used to switch the power ON or OFF.



Figure 911: Figure 1a: Power Button



If the product is used to control key processes, it is highly recommended to use an Uninterruptible Power Supply (UPS) to prevent critical data loss.

CS86-BOX-J1900 Connectivity

## **Connectivity**

There are many connectivity options available on the CS86-BOX-J1900 industrial PC. It has 1 x USB3.0 and 3 x USB2.0 Type A connectors configured as HOSTS, 1 x HDMI port, 1 x VGA port, 2 x RJ45 connectors supporting 10/100/1000Mbps Ethernet, 2 x RS232 connectors, 1 x audio in connector, 1 x audio out connector, 2 x SMA connectors(for Wi-Fi antenna).

#### **RS232 Connectors**

Product has 2 x 9-pin D-Sub connectors which are configured as RS232 interfaces by default. The two connectors are on two different sides: COM1 (*Figure 2*) and COM2 (*Figure 2a*).



Figure 912: Figure 2: D-Sub (RS232) COM1



Figure 913: Figure 2a: D-Sub (RS232) COM2

CS86-BOX-J1900 USB HOST Connectors

#### **USB HOST Connectors**

CS86-BOX-J1900 is equipped with 1 x *USB 3.0* and 3 x *USB 2.0* HOST connectors (*Figure 3*). Although fully compatible with USB 2.0 devices, the USB 3.0 interface provides 10 times more data transfer bandwidth than USB 2.0, making it best suited for fast peripherals that can utilize its full potential.

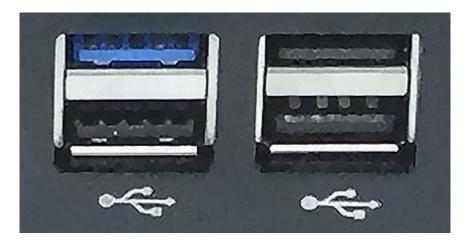


Figure 914: Figure 3: 1 x USB 3.0 and 3 x USB 2.0 HOST Connectors

CS86-BOX-J1900 LAN Connectors

#### **LAN Connectors**

2 x **LAN (RJ45) connectors** (*Figure 4*) provide Ethernet connectivity over standardized Ethernet cables. The integrated two-port Ethernet interface supports 10/100/1000BASE-T/TX specifications with automatic speed negotiation and Wake on LAN (WoL) functionality. Power over Ethernet (PoE) is not supported.

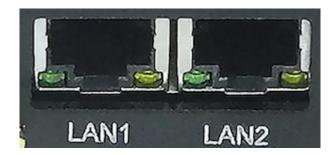


Figure 915: Figure 4: 2 x RJ45 GbE LAN Connectors



Use CAT5 or better cables to achieve full data throughput over maximum distance defined by the 1000BASE-T standard (100m).

CS86-BOX-J1900 HDMI and VGA Connectors

#### **HDMI and VGA Connectors**

Although not equipped with the screen on its own, the CS86-BOX-J1900 features 1 x **HDMI** connector (*Figure 5*) and 1 x **VGA** connector (*Figure 5a*). The two connectors allow connecting two external monitors in synchronous or asynchronous modes. HDMI and VGA output resolution can be configured by the software or the OS, up to 1920 x 1080 at 60Hz.



Figure 916: Figure 5: HDMI Connector



Figure 917: Figure 5a: VGA Connector

CS86-BOX-J1900 Audio In/Out Connectors

### **Audio In/Out Connectors**

The product features audio in and audio out connectors as shown in the Figure 6 below.



Figure 918: Figure 6: Audio In and Audio Out Connectors

CS86-BOX-J1900 WiFi/BT Module

### WiFi/BT Module

The default CS86-BOX-J1900 does not include a Wi-Fi module or BT module, but it contains a half size mini PCIe slot that can be expanded with a Wi-Fi module or a BT module. The product includes two SMA connectors for external Wi-Fi antennas, as illustrated in the Figure 7 below.



Figure 919: Figure 7 SMA Connectors for WiFi Antennas



#### Attention

The product does not come shipped with the Wi-Fi/BT module by default.

CS86-BOX-J1900 Mounting Procedure

## **Mounting Procedure**

The CS86-BOX-J1900 Industrial PC supports VESA 75 x 75 mounting pattern with 6 x M3 screws, enabling simplified installation onto any standard VESA mounting rack. Other mounting options might also be supported according to the table in the Hardware Features section.

You can find detailed information about mounting in the Mount IPC Guide.

## **Mechanical Specifications**

The outer mechanical dimensions of the CS86-BOX-J1900 are  $136 \times 126.2 \times 38$ mm (W x L x H). Please refer to the technical drawing in the figure below for details related to the specific product measurements.

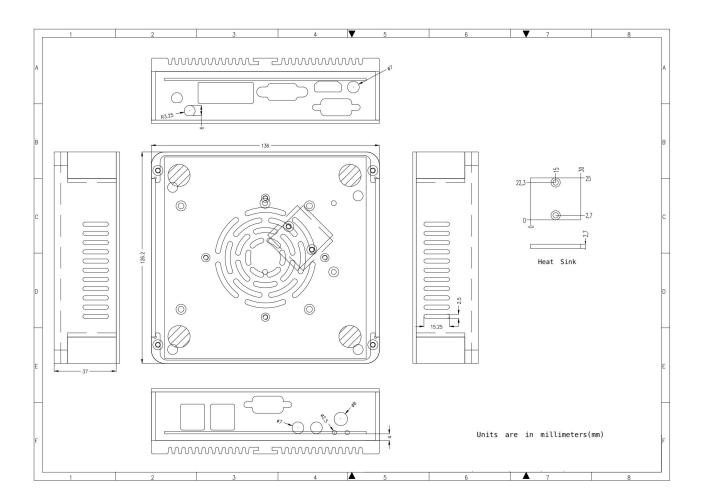


Figure 920: CS86-BOX-J1900 Technical Drawing

CS86-BOX-J1900 Disclaimer

### **Disclaimer**

This document is provided strictly for informational purposes. Its contents are subject to change without notice. Chipsee assumes no responsibility for any errors that may occur in this document. Furthermore, Chipsee reserves the right to alter the hardware, software, and/or specifications set forth herein at any time without prior notice and undertakes no obligation to update the information contained in this document.

While every effort has been made to ensure the accuracy of the information contained herein, this document is not guaranteed to be error-free. Further, it does not offer any warranties or conditions, whether expressed orally or implied in law, including implied warranties and conditions of merchantability or fitness for a particular purpose. We specifically disclaim any liability with respect to this document, and no contractual obligations are formed either directly or indirectly by this document.

Despite our best efforts to maintain the accuracy of the information in this document, we assume no responsibility for errors or omissions, nor for damages resulting from the use of the information herein. Please note that Chipsee products are not authorized for use as critical components in life support devices or systems.

### **Technical Support**

If you encounter any difficulties or have questions related to this document, we encourage you to refer to our other documentation for potential solutions. If you cannot find the solution you're looking for, feel free to contact us. Please email Chipsee Technical Support at **support@chipsee.com**, providing all relevant information. We value your queries and suggestions and are committed to providing you with the assistance you require.