

Industrial PC

# EPC/PPC-CM4-050



PN: CS12720RA4050



# Contents

I. EPC/PPC-CM4-050	3
1.1. Product Overview	4
1.2. Ordering Options	5
1.2.1. Pi <sup>®</sup> CM4 Module	5
1.2.2. Operating System	5
1.3. Specifications	6
1.4. Power Input	7
1.5. Touch Screen	8
1.6. Connectivity	9
1.6.1. RS232/RS485/CAN	9
1.6.2. USB Connectors	10
1.6.3. LAN Connectors	11
1.6.4. WiFi & BT Module	12
1.6.5. Camera Connector	12
1.7. TF Card Slot	14
1.8. Audio Connectors	14
1.9. Boot DIP Switch	15
1.10. Mounting Procedure	15
1.10.1. CS12720RA4050E	15
1.10.2. CS12720RA4050P	16
1.11. Mechanical Specifications	16
1.11.1. CS12720RA4050E	16
1.11.2. CS12720RA4050P	17
1.12. 3D Model	17
1.13. Disclaimer	18
1.14. Technical Support	18

# EPC/PPC-CM4-050




Front View



Rear View

EPC/PPC-CM4-050 Product Overview

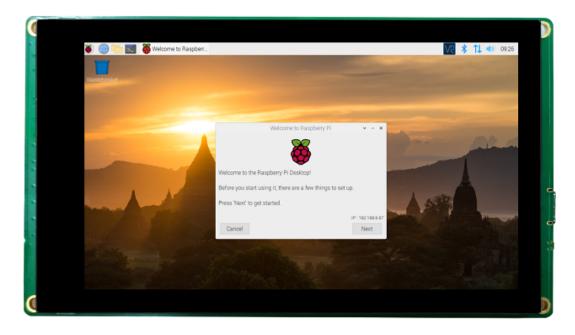

Front View (Embedded Variant)



Rear View (Embedded Variant)

### **Product Overview**

The Cortex $^{\$}$ -A72 Raspberry Pi $^{\$}$  series EPC/PPC-CM4-050 (PN: CS12720RA4050) is a high-quality industrial Pi PC. It features a 5" five-point capacitive touch screen with a resolution of 1280 x 720 pixels and brightness of 400 cd/m $^{2}$ .

### **Key Applications**

- Human Machine Interface HMI
- Process Control
- Process Monitoring

EPC/PPC-CM4-050 Ordering Options

- HMI
- IIoT node
- Environmental Monitoring
- PLC
- Automotive applications
- ATM...

It is available both as an embedded solution and as a device hosed in a casing with bezels, thus facilitating different installation options:

- Installation on an industrial cabinet
- Integration with the existing equipment

The EPC/PPC-CM4-050 industrial Pi PC is based around the powerful Raspberry Pi<sup>®</sup> Compute Module 4, powered by the Quad Cortex<sup>®</sup>-A72 processor with a processor speed of 1.5GHz.

# **Ordering Options**

Chipsee products can be customized during the ordering process. The product will be shipped with the pre-installed factory defaults if no extra requirements are specified. The table in the Specifications section provides information about the default options bundled with the product.



You can order EPC/PPC-CM4-050 from the official **Chipsee Store** or from your nearest distributor.

### Pi® CM4 Module

The Pi<sup>®</sup> Compute Module 4 appears in different versions depending on the size of the DDR4 and eMMC.

The EPC/PPC-CM4-050 industrial Pi PC does not include the CM4 Raspberry Pi<sup>®</sup> module by default. If you would like to purchase it with a CM4, you can select it at the Chipsee store during the ordering process.

### Operating System

This product comes with a pre-installed Debian OS. Chipsee software engineers have created all the drivers, so every hardware feature is readily available for any standard development tool.

EPC/PPC-CM4-050 Specifications

If your project requires a different OS, please **Contact us**, and we'll make a customized version that suits your needs.

# Specifications

The EPC/PPC-CM4-050 industrial Pi PC offers a broad range of performance and connectivity options for scalable integration, providing expandability according to future needs. Some of the key features are listed in the table below.

EPC/PPC-CM4-050		
CPU	Raspberry Pi <sup>®</sup> CM4, CM4 Lite; Quad Cortex-A72 at 1.5GHz	
Storage	1 TF Cards slots <mark>3</mark>	
RAM	Based on CM4	
еММС	Based on CM4	
Display	5" IPS LCD, 1280 x 720 resolution px, brightness 400 cd/m <sup>2</sup>	
Touch	5-point capacitive touch with 1mm Armored Glass	
USB	2 x USB 2.0 Host, 1 x Type-C	
LAN	1 x Channel Giga LAN	
Audio	3.5mm Audio Out Connector, 2W Speaker Internal	
Buzzer	Onboard Buzzer, driven by GPIO	
RTC	Yes, High Accuracy RTC with Lithium Button Coin battery (lithium battery not included)	
RS232	2 x RS232	
RS485	2 x RS4851	
CAN	1 x CAN-BUS	
GPIO	Not Supported	
WiFi/BT	Supported but depending on the CM4 selected2	
нрмі	Not Supported	
3G/4G/LTE	Not Supported	
12C	Support I2C0 I2C1 for CS12720RA4050E	
Camera	Yes, not mounted by default	
Power Input	From 9V to 36V	
Current at 12V	500mA Max	
Power Consumption	6W Typical	
Working Temperature	From 0°C to +60°C	
os	Debian	

EPC/PPC-CM4-050 Power Input

EPC/PPC-CM4-050		
Dimensions	CS12720RA4050E: 141.2 x 77.6 x 25.8mm	
	CS12720RA4050P: 139 x 85 x 28mm	
Weight	CS12720RA4050E: 200g	
	CS12720RA4050P: 310g	

Table 289 Key Features

- 1 The RS485 circuit controls the Input and Output direction automatically, there's no need to control it from within the software.
- 2 The default product without the CM4 does not include a Wi-Fi/BT module. You can include a CM4 that has the Wi-Fi/BT module at the Chipsee store during the ordering process.
- 3 Chipsee designed TF card slots for storage expansion, as the TF card for storage expansion use same pins with WiFi, it can't be used with WiFi at same time



#### Attention

Chipsee does not install a lithium battery by default, as we cannot ship products with batteries. We recommend you buy it locally and install it by yourself. The lithium battery part number is CR1220. Please **Contact us** if you need help.

### Power Input

The EPC/PPC-CM4-050 industrial Pi PC can be powered by a wide range of input voltages: From 9V to 36V DC. It is a **3 Pin, 3.81mm screw terminal** connector. The polarity and the pinout is clearly marked on the housing of the CS12720RA4050P version, as shown in the figures below.

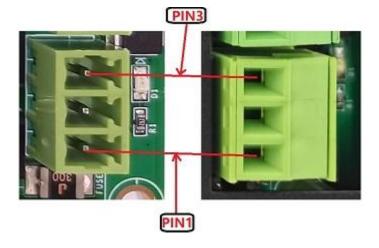


Figure 955: Power Input

Note that the "+" sign represents the positive power input, and it is printed both at the casing and as a silk-screen on the board of the embedded version. The "-" terminal is shorted to the ground.

EPC/PPC-CM4-050 Touch Screen

Power Input Definition		
Pin Number	Definition	Description
Pin 1	Positive Input	DC Power <b>Positive Terminal</b>
Pin 2	Negative Input	DC Power <b>Negative Terminal</b>
Pin 3	Ground	Power System Ground

Table 290 Power Connector




The system ground " $\mathbf{G}$ " is connected to power negative "-" on board. The central pin is positive.

### Touch Screen

The EPC/PPC-CM4-050 industrial Pi PC uses a 5-point capacitive touch screen. However, the Debian OS supports only One-Point touch.

The figure below shows the capacitive touch screen connected to the motherboard via the FPC connector.

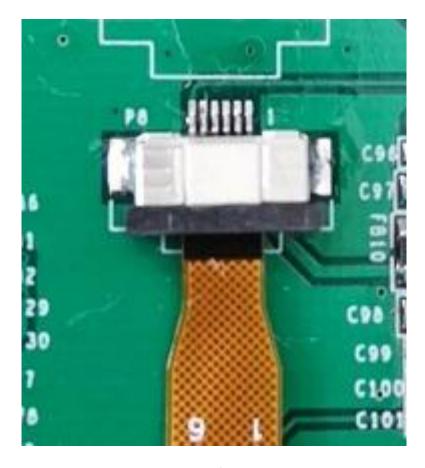

Capacitive Touch Connector



Attention

EPC/PPC-CM4-050 Connectivity

A capacitive touch screen is susceptible to power noise and Electromagnetic Radiation (EMR). It may cause LCD ripples or even capacitive touch malfunction. If using a capacitive multi-touch test application, you might notice the touch points float erratically across the display. There are several solutions to this problem:

- 1. Use a high-quality Power Adapter Unit (PSU) with low EMR. You can also provide power from a battery.
- 2. Make sure that the EPC/PPC-CM4-050 Power Input connector (pin 3) is properly connected to the Power System Ground to provide sufficient EMI shielding and eliminate the problem entirely.
- 3. Bad GND problems can also be confirmed by touching pin 3 of the Power Input connector with one hand while operating the capacitive touch screen with the other hand. In this case, the operator's body acts as the Power System Ground.

## Connectivity

There are many connectivity options available on the EPC/PPC-CM4-050 industrial Pi PC. It has 2 x USB 2.0 Host, 1 x Type-C, 1 x Channel Giga LAN (RJ45) Ethernet connector supporting up to 1 Gbps, and 4 x UART terminals (RS232/RS485/CAN).

### RS232/RS485/CAN

The serial communication interfaces (RS485, RS482, and CAN) are routed to a **12-pin 3.81mm terminal**, as illustrated on the figure below.

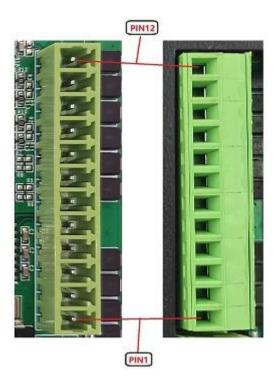


Figure 956: Relation between serial pins on embedded vs. enclosed version of the EPC/PPC-CM4-050 Industrial PC

The table below offers more detailed description of every pin and its definition:

RS232 / RS485 / CAN Pin Definition:		
Pin Number	Definition	Description

EPC/PPC-CM4-050 USB Connectors

RS232 / RS485 / CAN Pin Definition:		
Pin 12	CAN1_H	CAN H signal
Pin 11	CAN1_L	CAN L signal
Pin 10	RS485_5-	CPU UART5, RS485 –(B) signal
Pin 9	RS485_5+	CPU UART5, RS485 +(A) signal
Pin 8	RS485_3-	CPU UART3, RS485 –(B) signal
Pin 7	RS485_3+	CPU UART3, RS485 +(A) signal
Pin 6	RS232_2_RXD	CPU UART2, RS232 RXD signal
Pin 5	RS232_2_TXD	CPU UART2, RS232 TXD signal
Pin 4	RS232_0_RXD	CPU UARTO, RS232 RXD signal
Pin 3	RS232_0_TXD	CPU UART0, RS232 TXD signal
Pin 2	GND	System Ground
Pin 1	+5V	System +5V Power Output, No more than 1A Current output

Table 291 Connectivity Section



#### **Attention**

- 1. RS485\_3 and RS485\_5 can control the input and output direction automatically. There's no need to control it from within the software.
- 2. The  $120\Omega$  match resistor for the RS485 and CAN bus is NOT mounted by default.

#### **USB Connectors**

There are 2 x Type A **USB HOST connectors** onboard, as shown on the figure below.

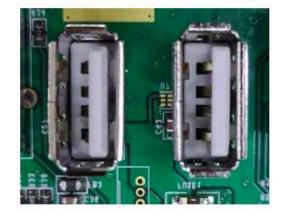




Figure 957: USB HOST Connectors (embedded/enclosed PC version)



#### **Attention**

1. These two USB host connectors can drive 500mA for each channel at most.

EPC/PPC-CM4-050 LAN Connectors

2. When you connect this product to the HOST PC by a USB Type-C cable, the USB HUB will be disabled. As a result, the 2 USB host connectors will not work.

The product has one USB Type-C connector that works as a slave by default. You can use it to establish a connection with the host PC and for downloading the system to the eMMC of CM4 module.



Figure 958: USB OTG Connector




#### Warning

Be careful not to touch surrounding electronic components accidentally while plugging in USB devices into the embedded Industrial PC version.

#### LAN Connectors

**LAN (RJ45) connector** provides Ethernet connectivity over standardized Ethernet cables as shown in the figure below. The integrated Ethernet interface supports up to 1 Gbps data throughput. These Giga LAN signals come from the CM4 module directly.

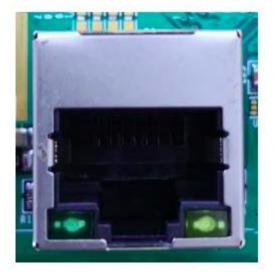



EPC/PPC-CM4-050 WiFi & BT Module

Figure 959: RJ45 LAN Connectors (embedded/enclosed PC version)



Use CAT5 or better cables to achieve full data throughput over maximum distance defined by the 1000BASE-T standard (100m).

#### WiFi & BT Module

The default EPC/PPC-CM4-050 without the CM4 does not include a Wi-Fi/BT module. If you include a CM4 that has the Wi-Fi/BT module, the product will have Wi-Fi/BT feature. The enclosed (CS12720RA4050P) variant of the product also includes an SMA connector for an external WiFi/BT antenna, as illustrated in the figure below.



WiFi+BT Antenna



#### **Attention**

The product does not come shipped with the Wi-Fi/BT module by default.

#### Camera Connector

The EPC/PPC-CM4-050 industrial Pi PC has a 15 Pin **Camera Connector**, as shown on the figure below. The camera signals come from CAM1. The table below gives details about the definition of every Pin.

EPC/PPC-CM4-050 Camera Connector

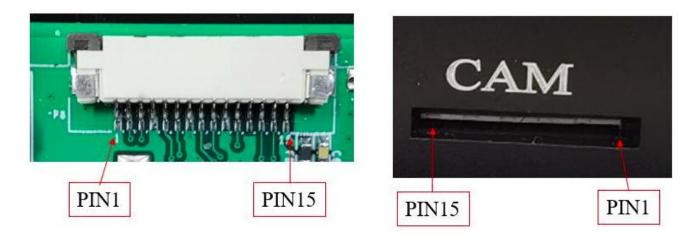


Figure 960: Camera Connector

Camera Connector Pin Definition:		
Pin Number	Definition	Description
Pin 1	GND	Power Ground
Pin 2	CAM1_DN0	CAM1_DN0
Pin 3	CAM1_DP0	CAM1_DP0
Pin 4	GND	Power Ground
Pin 5	CAM1_DN1	CAM1_DN1
Pin 6	CAM1_DP1	CAM1_DP1
Pin 7	GND	Power Ground
Pin 8	CAM1_CN	CAM1 Clock signal Negative
Pin 9	CAM1_CP	CAM1 Clock signal Positive
Pin 10	GND	Power Ground
Pin 11	CAM GPIO	CAM GPIO, use for disable camera power and module
Pin 12	NC	Not connected
Pin 13	SCL0	CPU I2C SCL0 signal
Pin 14	SDA0	CPU I2C SDA0 signal
Pin 15	+3.3V	System +3.3V Power Output, No more than 500mA Current output

Table 292 Camera Connector Pin-out



#### Attention

1. The camera is not mounted by default.

EPC/PPC-CM4-050 TF Card Slot

## TF Card Slot

The EPC/PPC-CM4-050 industrial Pi PC features 1 x **TF Card (micro SD) slot**: SD, TF slots can address up to 128GB of memory.

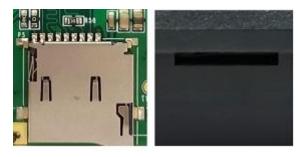


Figure 961: TF (micro SD) Card Slot



#### **Attention**

- 1. The SD is used for memory extension. It can't be used for system boot-up.
- 2. The product does not come shipped with the TF Card by default.

## **Audio Connectors**

The EPC/PPC-CM4-050 industrial Pi PC features some audio peripherals. It has 1 x **3.5mm audio output jack**.

Also, the EPC/PPC-CM4-050 industrial Pi PC has a miniature 2W internal speaker for audio reproduction, as well as a small buzzer for alarm/notification sounds.





Figure 962: Audio Connector (embedded/enclosed PC version)



#### **Attention**

By plugging in the headphone cable, the internal speaker will be disabled automatically.

EPC/PPC-CM4-050 Boot DIP Switch

### **Boot DIP Switch**

The EPC/PPC-CM4-050 industrial Pi PC has one button on the board marked as SW1, shown in the figure below.

When button is pressed before power, the Raspberry Pi will boot from the USB connector. You can use this function to download the OS software to the internal eMMC.

When button is released before power, the Raspberry Pi will boot from internal eMMC.

There is no need to press the button during regular operation. However, if you need to reinstall the OS, please refer to the detailed information on how to re-flash the OS from the Software Documentation.






Figure 963: Boot DIP Switch

# Mounting Procedure

The EPC/PPC-CM4-050 industrial Pi PC can be mounted with 4 x M4 screws, enabling simplified installation onto any standard mounting fixture.

#### CS12720RA4050E

You can mount CS12720RA4050E with the Embedded mounting method, as shown on the figure below.

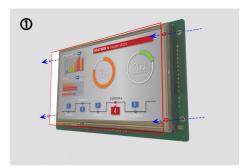

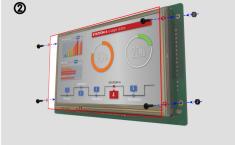




Figure 964: Embedded mounting

EPC/PPC-CM4-050 CS12720RA4050P

#### CS12720RA4050P

You can mount CS12720RA4050P with the Vesa (75  $\times$  75mm) and Panel mounting methods, as shown on the figure below.

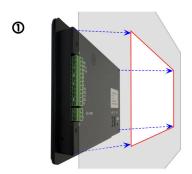






Figure 965: Panel mounting



#### **Attention**

Please make sure the display is not exposed to high pressure when mounting into an enclosure.

You can find detailed information about mounting in the Mount IPC Guide.

# Mechanical Specifications

#### CS12720RA4050E

The outer mechanical dimensions of CS12720RA4050E are  $141.2 \times 77.6 \times 25.8 \text{mm}$  (W x L x H). Please refer to the technical drawing in the figure below for details related to the specific product measurements.



Figure 966: CS12720RA4050E Technical Drawing

EPC/PPC-CM4-050 CS12720RA4050P

#### CS12720RA4050P

For CS12720RA4050P, the outer mechanical dimensions are 139 x 85 x 28mm (W x L x H).

# 3D Model

EPC/PPC-CM4-050 3D model can be viewed in the online doc in a web browser, if you are reading from the **PDF** version, please visit the online doc.

EPC/PPC-CM4-050 Disclaimer

### Disclaimer

This document is provided strictly for informational purposes. Its contents are subject to change without notice. Chipsee assumes no responsibility for any errors that may occur in this document. Furthermore, Chipsee reserves the right to alter the hardware, software, and/or specifications set forth herein at any time without prior notice and undertakes no obligation to update the information contained in this document.

While every effort has been made to ensure the accuracy of the information contained herein, this document is not guaranteed to be error-free. Further, it does not offer any warranties or conditions, whether expressed orally or implied in law, including implied warranties and conditions of merchantability or fitness for a particular purpose. We specifically disclaim any liability with respect to this document, and no contractual obligations are formed either directly or indirectly by this document.

Despite our best efforts to maintain the accuracy of the information in this document, we assume no responsibility for errors or omissions, nor for damages resulting from the use of the information herein. Please note that Chipsee products are not authorized for use as critical components in life support devices or systems.

# **Technical Support**

If you encounter any difficulties or have questions related to this document, we encourage you to refer to our other documentation for potential solutions. If you cannot find the solution you're looking for, feel free to contact us. Please email Chipsee Technical Support at **support@chipsee.com**, providing all relevant information. We value your queries and suggestions and are committed to providing you with the assistance you require.