

TP FIT/IoT-Lab Communication

TP#2 using FIT/IoT-Lab Lecturer: Keun-Woo Lim Lecture slides for RIO201 17-10-2018



What to do today

- **■** Enable communication between devices
 - HTTP
- Based on this, do the challenges





Tutorial – Public IPv6

Objective

- Create a public HTTP network where you can connect from the Internet
- Check the function of RPL

Let's try it together!

 https://www.iot-lab.info/tutorials/basic-m3-nodescontiki-uip-stack-with-public-ipv6-on-ssh-front-end/






HTTP tutorial

■ To know you have succeeded,

- Open any web browser and put in:
- http://[2001:660:5307:XXXX::YYYY]
- XXXX = your subnet, YYYY = one of the HTTP servers

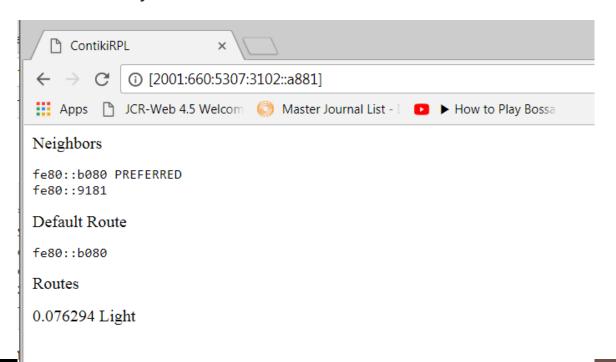





Questions here

- What is a Border Router?
- What is a HTTP Server?
- Why do we need to find an available IPv6 Prefix?
- What is a turnslip?
- These are all needed for you to connect to the sensor via Internet!!
 - Makes it seen from outside
- If there is a HTTP server...
 - You can see it from a browser!!






Border router

What is a Border Router?

Access point to internal and external network

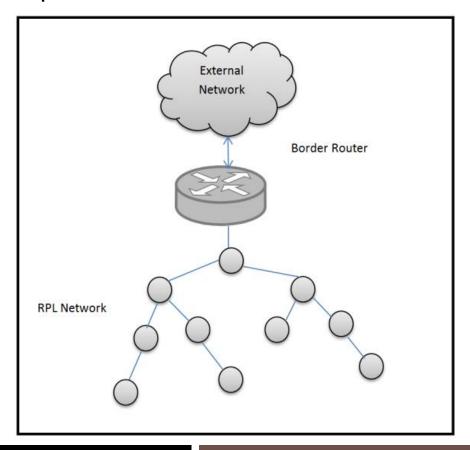






HTTP server

- An entity that accepts HTTP based requests from the Internet
 - Based on TCP

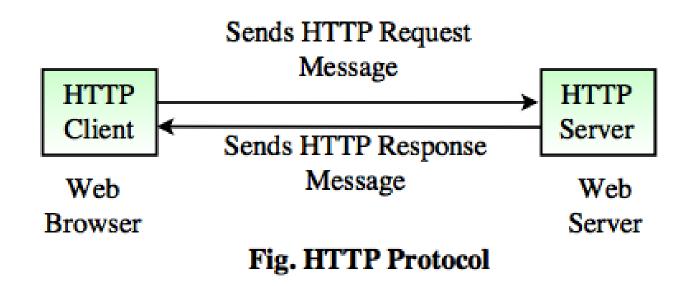






IPv6 Prefixes

Needed for groups of entities close to each other, use of prefixes can cluster them and make them easier to find

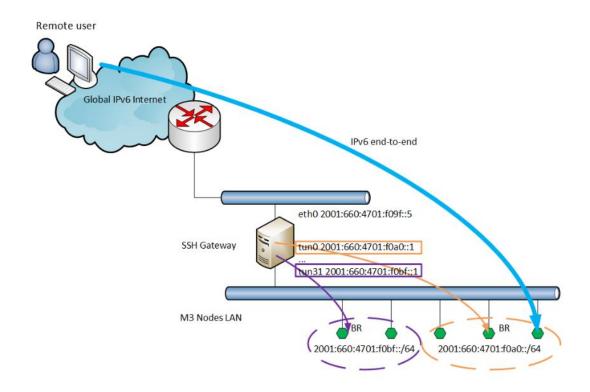






Turnslip

Tool used to bridge IP traffic between a host and another network element, typically a border router, over a serial line.

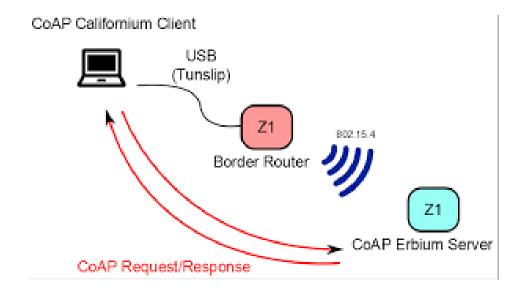





Challenge for today

Integrate HTTP and sensor-collecting!

- /iot-lab/parts/Contiki/examples/ipv6/http-server
- /iot-lab/parts/Contiki/examples/iotlab/03-sensorscollecting

GOAL

- Create sensor readings from the http-server
- Use your web browser to get sensor readings from the Internet
- For this, let's analyze the http-server code together!





Example of HTTP-server code

```
ADD("\nDefault Route\n");
114
115
       SEND_STRING(&s->sout, buf);
       blen = 0:
116
       ipaddr add(uip ds6 defrt choose());
117
       ADD("\n");
118
       ADD("Routes");
119
120
       SEND_STRING(&s->sout, buf);
121
       blen = 0:
       for(r = uip_ds6_route_head(); r != NULL; r = uip_ds6_route_next(r)) {
122
123
         ipaddr_add(&r->ipaddr);
124
         ADD("/%u (via ", r->length);
125
         ipaddr add(uip ds6 route nexthop(r));
         if(1 | (r->state.lifetime < 600)) {
126
           ADD(") %lus\n", (unsigned long)r->state.lifetime);
127
         } else {
128
           ADD(")\n");
129
130
         SEND_STRING(&s->sout, buf);
131
         blen = 0:
132
```





Example of sensor code

```
/* Light sensor */
static void config light()
  light_sensor.configure(LIGHT_SENSOR_SOURCE, ISL29020 LIGHT AMBIENT);
  light sensor.configure(LIGHT SENSOR RESOLUTION, ISL29020 RESOLUTION 16bit);
  light sensor.configure(LIGHT SENSOR RANGE, ISL29020 RANGE 1000lux);
  SENSORS ACTIVATE(light sensor);
static void process light()
4
  int light val = light sensor.value(0);
  float light = ((float)light val) / LIGHT SENSOR VALUE SCALE;
  printf("light: %f lux\n", light);
```







Client / Server connection using CoAP

TP#2 using FIT/IoT-Lab



Why CoAP?

■ CoAP vs HTTP

Feature	CoAP	НТТР	
Protocol	It uses UDP.	It uses TCP.	
Network layer	It uses IPv6 along with 6LoWPAN.	It uses IP layer.	
Multicast support	It supports.	It does not support.	
Architecture model	CoAP uses both client-Server & Publish- Subscribe models.	HTTP uses client and server architecture.	
Synchronous communication	CoAP does not need this.	HTTP needs this.	
Overhead	Less overhead and it is simple.	More overhead compare to CoAP and it is complex.	
Application	Designed for resource constrained networking devices such as WSN/IoT/M2M.	Designed for internet devices where there is no issue of any resources.	



In general,

- CoAP is suited for lightweight IoT devices
- Less overhead, but how can we really see this?





CoAP tutorial

- We do have the IPv6 subnet for Paris now
- For now, only work on 3 sensors
 - 1 Border router
 - 2 HTTP servers
 - Try to see if you can make a two-hop network

Site	Number of subnets	from	to
Grenoble	128	2001:660:5307:3100::/64	2001:660:5307:317f::/64
Lille	128	2001:660:4403:0480::/64	2001:660:4403:04ff::/64
Saclay	64	2001:660:3207:04c0::/64	2001:660:3207:04ff::/64
Strasbourg	32	2001:660:4701:f0a0::/64	2001:660:4701:f0bf::/64





CoAP tutorial

To know you have succeeded,

On the bash command, type

```
🧬 klim@grenoble: ~
  Neighbors
fe80::a881
fe80::9181
   Routes
2001:660:5307:3102::a881/128 (via fe80::a881) 1796s
2001:660:5307:3102::9181/128 (via fe80::9181) 1795s
klim@grenoble:~$ node-cli --update er-example-server.iotlab-m3 -e grenoble,m3,10
    "0": [
       "m3-101.grenoble.iot-lab.info",
        "m3-102.grenoble.iot-lab.info"
klim@grenoble:~$ coap get coap://[2001:660:5307:3102::a881]:5364/sensors/light
klim@grenoble:~$ coap get coap://[2001:660:5307:3102::a881]:5683/sensors/light
(2.05) 0
klim@grenoble:~$ coap get coap://[2001:660:5307:3102::a881]:5683/sensors/magne
(2.05) 372;125;407
klim@grenoble:~$ coap get coap://[2001:660:5307:3102::a881]:5683/sensors/accel
(2.05) -454;1;-908
klim@grenoble:~$
```



A program to collect data

- Now we know that both HTTP and CoAP servers are public
 - We can do everything with them
 - Let's make a program in python to get data from the CoAP server





Example in python for HTTP





Example in python for CoAP





Ready for an exercise?

- Create a python program that collects sensing data from CoAP server every period
 - Period = one second
 - Data = sensors/gyro, sensors/pressure
 - Node = 1 border router, 2 CoAP servers
 - differentiate information from different nodes



