#### HOCHSCHULE RHEINMAIN



# PHYSICS LAB 3

# **Experiment P3-3 Torsional Pendulum**

**Authors** 

HUNTER, DENNIS

KRESS, SEBASTIAN

Ünlü, Cihan

#### DEPARTMENT OF ENGINEERING

APPLIED PHYSICS & MEDICAL TECHNOLOGY

Date of experiment: Dezember 15, 2020 Date of submission: January 12, 2021

# **Contents**

1	Intro	oductio	n				3
	1.1	Terms a	and Definitions				3
	1.2	Prepara	ation				4
		1.2.1	Deriving the Equation for Damped Free Oscillation				4
		1.2.2	Damping Cases				4
		1.2.3	Unknown Angular Inertia of the Pendulum				5
		1.2.4	Rotational Inertia of a Cylindrical Rod				5
		1.2.5	Equations for the Sensor Capacitances				6
		1.2.6	Time to Reach the Threshold Voltage				7
		1.2.7	Determining the Angular Deflection by the Difference of Timer Ticks				7
		1.2.8	Sensitivity of the Angular Sensor				8
2	Set-	Up of E	Experiment				10
3	Exe	cution					12
	3.1	Angula	r Sensor				12
	3.2	Torsion	nal Pendulum				12
		3.2.1	Natural Angular Frequency and Damping Coefficient				12
		3.2.2	Rotational Inertia			 •	12
4	Eval	luation					13
	4.1	_	r Sensor				13
	4.2		nal Pendulum				14
		4.2.1	Natural Angular Frequency And Damping Coefficient				14
		4.2.2	Rotational Inertia			 ٠	16
5	Con	clusion					18
Lis	st of	Figures					19
Lis	List of Tables					20	
Lie	et of	Symbol	s				21
Α	App	endix					22
Bi	Sibliography 2					24	

#### 1 Introduction

#### 1.1 Terms and Definitions

#### Free Harmonic and Damped Oscillation

If a system capable of oscillation is deflected out of its equilibrium position and is experiencing a restoring force proportional to its deflection this system is called a *harmonic oscillator*. If a dampening force such as friction is introduced, the system no longer oscillates freely but rather damped.

Both, damped and harmonic oscillations are considered *free* if there is no continuous, the oscillation driving stimulus present.

#### Natural Angular Frequency of a Harmonic Oscillation

Depending on the very characteristics of the given system it will oscillate at a distinct frequency - the natural angular frequency  $\omega_0$ .

#### Differential Equation of the Damped Harmonic Oscillation

$$I\ddot{\varphi} = -D\varphi - \rho\dot{\varphi} + M\cos(\omega t) \tag{1.1}$$

#### **Damping cases**

Overdamped: The system returns to equilibrium without oscillating.

Critically damped: The system returns to equilibrium as quickly as possible without oscillating.

Underdamped: The system oscillates (at reduced frequency compared to the undamped case) with the amplitude gradually decreasing to zero.

#### **Rotational Inerta**

A cylindrical rot has a rotational inertia about its center of:  $I_S = \frac{1}{12}ml^2$ 

#### Steiner's Theorem

The STEINER's Theorem:  $I = I_S + md^2$ 

#### **Eddy Current Brake**

The equivalent circuit of a conductor exposed to a changing magnetic field is composed of only a voltage source and a resistor. The voltage across this resistor is induced as of the law of electromagnetic induction:  $U_{ind} = -NA \frac{\partial B}{\partial t}$ . The resulting current creates a magnetic field opposing the inducing field.

#### Constant Current Constant Voltage Operation of a PSU

As the name implies a power supply in CC/CV operation mode keeps the output current and output voltage constant independently of the load applied.

#### Capacitance of a Parallel Plate Capacitor

The capacitance of a parallel plate capacitor is:  $C = \varepsilon_0 \varepsilon_r \cdot \frac{A}{d}$ 

#### Time-Constant of an RC-Circuit

The time constant of an RC circuit:  $\tau = RC$ 

#### 1.2 Preparation

#### 1.2.1 Deriving the Equation for Damped Free Oscillation

$$\vec{M}_{Inert} + \vec{M}_{Frict} + \vec{M}_{Rest} = 0 \quad \Leftrightarrow \quad J \cdot \ddot{\varphi}(t) - k \cdot \dot{\varphi}(t) - D^* \cdot \varphi(t) = 0 \tag{1.2}$$

can be written as

$$\ddot{\varphi}(t) + 2\delta \cdot \dot{\varphi}(t) + \omega_0^2 \cdot \varphi(t) = 0 \tag{1.3}$$

with

$$-\frac{k}{J} = 2\delta, \quad -\frac{D^*}{J} = \omega_0^2 \tag{1.4}$$

whereas eq. (1.3) is a second degree harmonic differential equation. The chosen approach is:

$$\varphi(t) = \hat{\varphi}e^{\lambda t}, \quad \dot{\varphi}(t) = \lambda \hat{\varphi}e^{\lambda t}, \quad \ddot{\varphi}(t) = \lambda^2 \hat{\varphi}e^{\lambda t}$$
 (1.5)

Plugged into eq. (1.3) gives

$$(\lambda^2 + 2\delta\lambda + \omega_0^2) \,\hat{\varphi}e^{\lambda t} = 0$$
$$\lambda_{1,2} = -\delta \pm \sqrt{\delta^2 - \omega_0^2}$$
(1.6)

Here two possible cases are to be distinguished:

$$\lambda_{1,2} = \begin{cases} -\delta \pm i\omega_d & \text{for} & \delta^2 < \omega_0^2 \quad \text{(a)} \\ -\delta \pm \omega_d & \text{for} & \delta^2 \ge \omega_0^2 \quad \text{(b)} \end{cases}$$
(1.7)


In eq. (1.3):

$$\varphi_1(t) = \varphi_1 e^{-\delta + i\omega_d t}, \quad \varphi_2(t) = \varphi_2 e^{-\delta - i\omega_d t}$$
(1.8)

Linear combination of  $\varphi_1(t)$  and  $\varphi_2(t)$  lastly leads to

$$\varphi(t) = \varphi_1 e^{-\delta + i\omega_d t} + \varphi_2 e^{-\delta - i\omega_d t} = \hat{\varphi} e^{-\delta t} \cdot \cos(\omega_d t + \varphi_0)$$
(1.9)

#### 1.2.2 Damping Cases

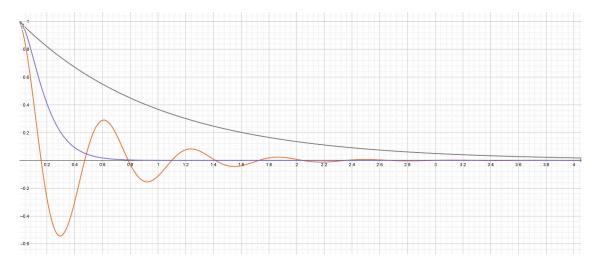

**Figure 1.1:** Plot of amplitude against time of a harmonic oscillation with parameterized damping coefficient. Orange: underdamped, Gray: overdamped, Blue: critically damped.

#### 1.2.3 Unknown Angular Inertia of the Pendulum

The angular inertia of the pendulum  $J_P$  can be determined by adding a known angular inertia  $J_R$  of a cylindrical rod. As eq. (1.4) delivers

$$\omega_0 = \sqrt{\frac{D^*}{J}} \tag{1.10}$$

and  $\omega = \frac{2\pi}{T}$ , the following relation is given:

$$\omega_{0,P} = \sqrt{\frac{D^*}{J_P}} = \frac{2\pi}{T_P} \quad \Leftrightarrow \quad 2\pi = T_P \cdot \sqrt{\frac{D^*}{J_P}}$$
 (1.11)

$$\omega_{0,P+R} = \sqrt{\frac{D^*}{J_P + J_R}} = \frac{2\pi}{T_{P+R}} \quad \Leftrightarrow \quad 2\pi = T_{P+R} \cdot \sqrt{\frac{D^*}{J_P + J_R}}$$
 (1.12)

When eq. (1.11) and eq. (1.12) are equated:

$$T_{P} \cdot \sqrt{\frac{D^{*}}{J_{P}}} = T_{P+R} \cdot \sqrt{\frac{D^{*}}{J_{P} + J_{R}}}$$

$$\Leftrightarrow \left(\frac{T_{P+R}}{T_{P}}\right)^{2} = \frac{J_{P} + J_{R}}{J_{P}} = 1 + \frac{J_{R}}{J_{P}}$$

$$\Leftrightarrow \frac{J_{R}}{J_{P}} = \left(\frac{T_{P+R}}{T_{P}}\right)^{2} - 1$$

$$\Rightarrow J_{P} = \frac{J_{R}}{\left(\frac{T_{P+R}}{T_{P}}\right)^{2} - 1}$$
(1.13)

The angular inertia of the pendulum can be calculated without knowing the torsion constant  $D^*$ .

#### 1.2.4 Rotational Inertia of a Cylindrical Rod

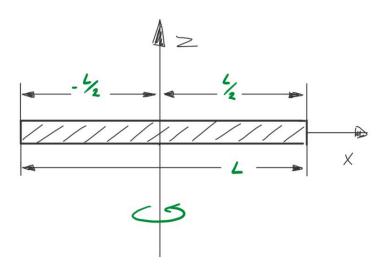


Figure 1.2: Scheme of an orthogonally to its center axis rotating rod.

Inertia of a rotating mass dimensionless mass is proportional to the square of the distance to its rotational axis. As the mass of a cylindrical body is distributed over its volume, it is necessary to integrate over all dm along the distance r from the center of rotation. [1]

$$J_Z = \int r^2 dm \tag{1.14}$$

With

$$\rho = \frac{dm}{dx} = \frac{M}{L} \qquad \Leftrightarrow \qquad dm = \frac{M}{L}dx \tag{1.15}$$

plugged into eq. (1.14) with respect to the integration limits as of fig. 1.2 gives

$$J_Z = \int_{-L/2}^{L/2} \frac{M}{L} x^2 dx = \frac{1}{12} M L^2$$
 (1.16)

#### 1.2.5 Equations for the Sensor Capacitances

To derive:

$$C_1(\varphi) = \varepsilon_0 \frac{\pi D^2}{16d} \left( 1 - \frac{2\varphi}{\pi} \right) \tag{1.17}$$

$$C_2(\varphi) = \varepsilon_0 \frac{\pi D^2}{16d} \left( 1 + \frac{2\varphi}{\pi} \right) \tag{1.18}$$

with

$$A_{1,2}(\varphi) = \frac{1}{16}\pi D^2 \left(1 \pm \frac{2\varphi}{\pi}\right) \tag{1.19}$$

One half of the stator pairs together with the rotor plate forms two capacitors connected in series. With

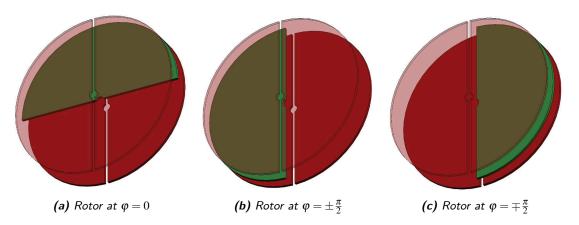


Figure 1.3: Schematical assembly of the angular sensor. The semi circular rotor plate (green) sandwiched between the two stators (red). The area of the rotor facing one of the vertical stator pairs varies with the angular displacement  $\varphi$  of the rotor.

each capacitor having the same value at any time the total capacitance equates to

$$C_{1,2}(\varphi) = \varepsilon_0 \varepsilon_r \frac{A(\pm \varphi)}{2d} \tag{1.20}$$

Where  $A(\varphi)$  can be expressed as

$$A(\varphi) = \frac{1}{8}D^{2}(\pi \pm \varphi)$$

$$A(\varphi) = \frac{1}{8}D^{2}\left(\frac{\pi^{2}}{\pi} \pm \frac{\pi\varphi}{\pi}\right)$$

$$A(\varphi) = \frac{1}{8}\pi D^{2}\left(1 \pm \frac{\varphi}{\pi}\right)$$
(1.21)

Say the zero position is chosen such as the whole area of the rotor takes effect (see fig. 1.3c) eq. (1.21) maximizes. Thus, the absolute capacitance of one of the capacitors is maximized. Stepping the rotor about

 $\varphi = \frac{\pi}{2}$  as seen in fig. 1.3a halves the effective area of the capacitor halving the total capacitance. At an angular displacement of  $\varphi = \pi$  the capacitance equates to zero respectively. Combining eq. (1.20) and eq. (1.21) gives <sup>1</sup>

$$C_{1,2} = \varepsilon_0 \frac{\pi D^2}{16d} \left( 1 \pm \frac{2\varphi}{\pi} \right)$$

$$\left( 1 \pm \frac{2\varphi}{\pi} \right) \begin{cases} = 0 & \text{for } \varphi = \pm \frac{\pi}{2} \\ = 1 & \text{for } \varphi = 0 \\ = 2 & \text{for } \varphi = \mp \frac{\pi}{2} \end{cases}$$

$$(1.22)$$

#### 1.2.6 Time to Reach the Threshold Voltage

The charging curve of a capacitor is given by eq. (1.23).

$$U_C(t) = U_0(1 - e^{-\frac{t}{\tau}}) \tag{1.23}$$

Being interested at the time  $t_{th}$  it takes to reach a certain threshold voltage  $U_{th}$  eq. (1.23) can be transformed as follows:

$$1 - \frac{U_{th}}{U_0} = e^{-\frac{t_{th}}{\tau}}$$

$$\Leftrightarrow$$

$$t_{th} = -\ln\left(1 - \frac{U_{th}}{U_0}\right) \cdot \tau$$
(1.24)

with the time constant  $\tau = R \cdot C$ .

#### 1.2.7 Determining the Angular Deflection by the Difference of Timer Ticks

The time to reach the threshold voltage as of eq. (1.24) is captured independently due to each capacitor being connected to individual GPIOs.

Since the charging curve of the capacitors differs in an anti-proportional manner when an angular deflection takes place the absolute value of the time difference gives the angle about zero while the sign gives the direction. Therefore, taken these considerations in account and merging eq. (1.20) and eq. (1.24) gives:

$$\Delta t_{th}(\varphi) = t_{th,1} - t_{th,2} = -\ln\left(1 - \frac{U_{th}}{U_0}\right) R\left[C_1(\varphi) - C_2(\varphi)\right]$$

$$= -\varepsilon_0 R \frac{\pi D^2}{16d} \ln\left(1 - \frac{U_{th}}{U_0}\right) \left[\left(1 + \frac{2\varphi}{\pi}\right) - \left(1 - \frac{2\varphi}{\pi}\right)\right]$$

$$= -\varepsilon_0 R \frac{4D^2}{16d} \ln\left(1 - \frac{U_{th}}{U_0}\right) \cdot \varphi$$
(1.25)

Here  $\varepsilon_0$ , R, D, d,  $U_{th}$  and  $U_0$  remain constant and can be gathered as a proportionality factor. This reduces eq. (1.25) to

$$\Delta t_{th}(\varphi) = \chi \cdot \varphi \tag{1.26}$$

The  $\mu$ C checks the state of the input pin once every cycle. To take that into account the difference in threshold time  $\Delta t_{th}$  has to be divided by the cycle time  $\Delta t$  of the  $\mu$ C which gives the number of cycles it took for the input pins to switch state from low to high. If a change takes place at a non integer multiple of  $\Delta t$  the  $\mu$ C will register a transition on the subsequent cycle, thus, for the cycle count n applies  $n \in \mathbb{N}$ . Furthermore, a non-integer value for n has to be rounded up to the next integer value.

<sup>&</sup>lt;sup>1</sup>The solution is missing a factor of 2 in front of  $\varphi$ 

Mathematically the above considerations yield

$$n(\varphi) = \left\lceil \frac{|\Delta t_{th}(\varphi)|}{\Delta t} \right\rceil = \left\lceil \chi' \cdot |\varphi| \right\rceil \quad \text{with} \quad n(\varphi) : n(\varphi) \in \mathbb{N}$$
 (1.27)

which translates into the amount of deflection and

$$\frac{|n(\varphi)|}{n(\varphi)} = \pm 1 \tag{1.28}$$

to distinguish between a CW/CCW rotation.

#### 1.2.8 Sensitivity of the Angular Sensor

As seen in eq. (1.26) the tick rate relates linearly with the angular displacement  $\varphi$ . Therefore, the maximum resolution of the angular sensor expressed as *ticks per radiant* is  $\chi'$ .

$$\frac{dn(\varphi)}{d\varphi} = \chi' \cdot \varphi \frac{d}{d\varphi} = \chi' \tag{1.29}$$

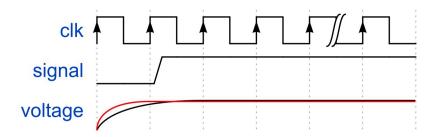


Figure 1.4: Timing diagram showing the signal transition.

The clock frequency of the  $\mu$ C is f = 16MHz which gives a cycle time of  $\delta t = 62.5$  ns.

To ready the capacitors for the next charging cycle they need to be discharged as quick as possible. Considering that a time to discharge the capacitors  $< \Delta t$  makes no significant difference the unknown value R of the resistor can be approximated as

$$3\tau = \Delta t = 3RC$$

$$\Leftrightarrow$$

$$\frac{\Delta t}{3C_{max}} = R \tag{1.30}$$

In the equation above the assumptions are made that a discharge rate of 95% is sufficient and the circuit needs to be able to discharge the capacitor within the timeframe  $\Delta t$  while being at its maximum capacitance. Thus,

$$C_{max} = \varepsilon_0 \frac{\pi D^2}{8d}$$
= 8,85 \cdot 10^{-12} \frac{\text{As}}{\text{Vm}} \frac{\pi \cdot 0.12^2 \text{ m}^2}{8 \cdot 0.01 \text{ m}}
= 5.01 \text{ pF} (1.31)

in eq. (1.30) gives a value for the resistance as

$$\frac{62.5\,\text{ns}}{3\cdot5.01\,\text{pF}} \approx 4160.9\,\text{k}\Omega\tag{1.32}$$

This lies between the two more common E-Series values of  $4.7\,k\Omega$  and  $3.9\,k\Omega$ . For further calculations the latter is chosen as a higher resistance would increase the discharge time.

Plugging in the given values of for  $\varepsilon_0$ , D, d,  $U_{th}$ ,  $U_0$  and the calculated values for  $\Delta t$  and R equates eq. (1.26) to

$$\chi' = -\varepsilon_0 R \frac{4D^2}{16d} \ln \left( 1 - \frac{U_{th}}{U_0} \right) \Delta t^{-1}$$

$$= -8.85 \cdot 10^{-12} \frac{\text{As}}{\text{Vm}} \cdot 3.9 \text{k}\Omega \cdot \frac{4 \cdot 0.12^2 \text{m}^2}{16 \cdot 0.01 \text{m}} \ln \left( 1 - \frac{2.5 \text{V}}{5 \text{V}} \right) \cdot \frac{1}{62.5 \text{ ns}}$$

$$\approx 0.138 \text{ rad}^{-1}$$
(1.33)

# 2 Set-Up of Experiment

The equipment and materials that are needed to perform the experiments are shown in fig. 2.1. A detailed view of the angular sensor assembly is seen in fig. 2.2.

Using a desktop computer a serial connection via USB to the  $\mu$ C board is established. A serial monitor - REALTERM - is used to log the inbound stream send by the  $\mu$ C. The relevant settings are listed below:

- 9600 Baud
- On the Display tab, Ascii and new Line mode are checked, Direct capture remains un-checked.
- COM-Port as assigned by the OS.

The data is now continuously sent by the  $\mu$ C. The data is displayed on the screen. A text file is created in which the data is written and saved. Two columns are displayed. The first column contains the time t in seconds, the second the number of timer ticks n. The current source for the electromagnet is switched on. Now the setup is completed and the experiments can be started.

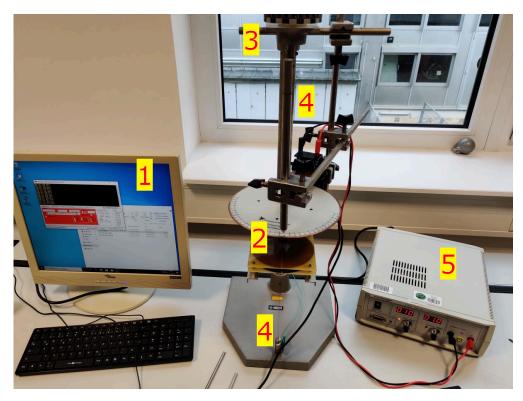


Figure 2.1: Equipment and material required for the experiments. 1. Computer running REALTERM, 2. Angular sensor assembly, 3. Zero adjustment, 4. Torsion wire, 5. PSU in constant current mode powering the eddy current brake.

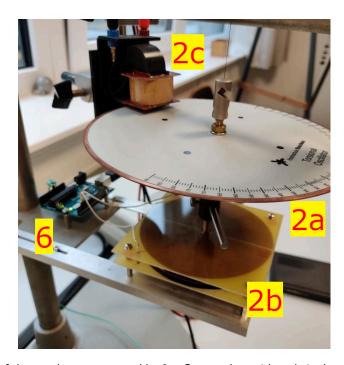


Figure 2.2: Detailed view of the angular sensor assembly. 2a: Copper plate with scale in degree, 2b: Capacitor plates, 2c: Eddy current brake, 6:  $\mu$ C board.

#### 3 Execution

#### 3.1 Angular Sensor

The current through the electromagnet, which operates the eddy current brake, is set to  $I=1\,\mathrm{A}$ . With the zero adjustment (No. 3 in ??), the copper disk is set to a deflection of  $\varphi=-90^\circ$ . The recording using REALTERM is started. Some values are captured and saved. The deflection is decreased by  $10^\circ$  and a new recording is started and saved. This process is repeated in increments of  $10^\circ$  until a deflection of  $\varphi=+90^\circ$  is reached. At the end, the current through the electromagnet is set back to  $I=0\,\mathrm{A}$ .

#### 3.2 Torsional Pendulum

#### 3.2.1 Natural Angular Frequency and Damping Coefficient

The deflection of the pendulum is set back to  $\varphi=0^\circ$  by zero adjustment. Seven series of measurements are recorded and saved. Each measurement series runs for 300 s. Each time a different current is set, as shown in table 3.1. At each measurement, the disk is carefully deflected to  $\varphi=75^\circ$  and held. At the moment the reset button on the microcontroller is pressed, the pendulum is released while avoiding unnecessary oscillations. At higher currents, the oscillation ends before the completion of the 300 s. In these cases, the capturing is ended earlier.

Table 3.1: Currents set in each measurement.

I
0 A
0.1 A
$0.2\mathrm{A}$
$0.3\mathrm{A}$
$0.4\mathrm{A}$
$0.5\mathrm{A}$
1.3 A

At the end, the current through the electromagnet is set back to I = 0 A.

#### 3.2.2 Rotational Inertia

The diameter, length, and mass of the three given rods are measured and the values, including their uncertainty, are noted. For this purpose, a measuring caliper, a steel ruler and the balance provided in the laboratory rooms are used. The current is set to  $I = 100 \,\mathrm{mA}$ . The first rod is inserted into the cross bore and carefully screwed tight. The hole is located between the copper plate and the angular sensor. An already mounted rod is shown in Fig. ??. When mounting, the rod is positioned as centrally as possible in the socket. The disk is carefully deflected to  $\varphi = 75^{\circ}$  and held. At the moment the reset button on the microcontroller is pressed, the pendulum is released avoiding unnecessary oscillations. The measurement ends after the pendulum has come to rest. The data is saved and the measurement is repeated for the other rods.

### 4 Evaluation

# 4.1 Angular Sensor

Before investigating the dependence of the angle and the timer ticks, it is needed to determine the mean value of the timer ticks for each angle. The mean values are computed taking 20 samples each.

$\overline{oldsymbol{arphi}/^{\circ}}$	$\bar{n}$	$arphi/^\circ$	$\bar{n}$
+90	601.34	-10	-55.33
+80	549.63	-20	-126.04
+70	482.26	-30	-195.80
+60	421.93	-40	-262.31
+50	353.10	-50	-331.20
+40	288.13	-60	-396.87
+30	220.58	-70	-459.46
+20	147.85	-80	-474.44
+10	83.57	-90	-499.79
+0	14.36		

Table 4.1: Mean value of timer ticks per angular displacement

In fig. 4.1 the timer ticks n are plotted as a function of the angle  $\varphi$ .

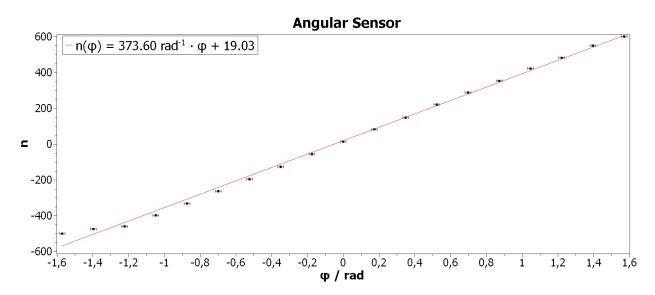


Figure 4.1: Curve of the angular sensor

The sensitivity corresponds to the slope of the curve and the offset to the intercept. The computed fit is

$$n(\varphi) = 373.60 \,\text{rad}^{-1} \cdot \varphi + 19.03$$
 (4.1)

which gives values for the sensitivity s and the offset o of

$$s = 374 \,\mathrm{rad}^{-1} \pm 1 \,\mathrm{rad}^{-1} \tag{4.2}$$

$$o = 19 \pm 1 \tag{4.3}$$

[comparison]

#### 4.2 Torsional Pendulum

#### 4.2.1 Natural Angular Frequency And Damping Coefficient

Figure 4.2 shows the oscillation with a coil current of  $100 \,\mathrm{mA}$ . The respective plots for coil currents ranging from  $200 - 500 \,\mathrm{mA}$  and the coil current turned off can be seen in fig. A.0. Deflection is plotted versus time. The period time for each curve is determined by reading a few values and building the mean.

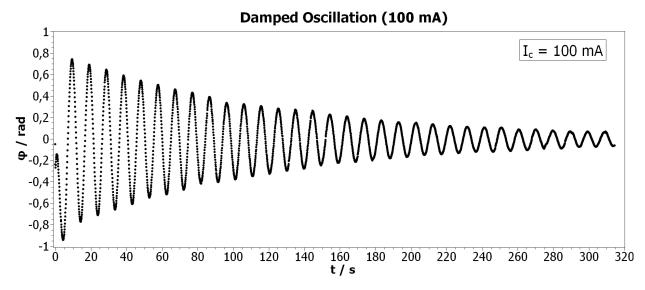


Figure 4.2: Plot of the tick rate over time with a coil current of 100 mA.

The values are as follows:

Table 4.2

$\overline{T}$	$9.7 \mathrm{s} \pm 0.5 \mathrm{s}$		0.20 ± 0.50
$T_0$		500	$9.8s \pm 0.5s$
$T_{100}$	$9.6 s \pm 0.5 s$	$T_{400}$	$10.0 \mathrm{s} \pm 0.5 \mathrm{s}$
$T_{200}$	$9.6 s \pm 0.5 s$	$T_{500}$	$9.8 \mathrm{s} \pm 0.5 \mathrm{s}$

Thus, the damped natural frequencies are calculated using  $\omega = \frac{2\pi}{T}$ :

Table 4.3

$\omega_{d,0}$	$0.65\mathrm{s}^{-1}\pm0.03\mathrm{s}^{-1}$	$\omega_{d,300}$	$0.64\mathrm{s}^{-1}\pm0.03\mathrm{s}^{-1}$
	$0.65\mathrm{s}^{-1}\pm0.03\mathrm{s}^{-1}$		$0.63\mathrm{s}^{-1}\pm0.03\mathrm{s}^{-1}$
$\omega_{d,200}$	$0.64\mathrm{s}^{-1}\pm0.03\mathrm{s}^{-1}$	$\omega_{d,500}$	$0.64\mathrm{s}^{-1}\pm0.03\mathrm{s}^{-1}$

The deviations of the period time are reading errors. The ones of the damped natural frequency can be calculated with

$$\Delta \omega_d = \left| \frac{\partial \omega_d}{\partial T} \right| \cdot \Delta T$$

$$= \frac{2\pi}{T^2} \cdot \Delta T \tag{4.4}$$

for  $\omega_{d,0}$  e.g.:

$$\Delta\omega_{d,0} = \frac{2\pi}{(9.7\,\mathrm{s})^2} \cdot 0.5\,\mathrm{s}$$
$$= 0.03\,\mathrm{s}^{-1} \tag{4.5}$$

The damping coefficient can be determined by way of

$$\varphi_{1} \cdot e^{-\delta t_{0}} = \varphi_{0} \cdot e^{-\delta t_{1}} \qquad \qquad \left| \cdot \frac{e^{\delta t_{1}}}{\varphi_{1}} \right|$$

$$e^{\delta(t_{1}-t_{0})} = \frac{\varphi_{0}}{\varphi_{1}} \qquad \qquad \left| \ln \right|$$

$$\delta(t_{1}-t_{0}) = \ln \frac{\varphi_{0}}{\varphi_{1}} \qquad \qquad \left| \cdot \frac{1}{(t_{1}-t_{0})} \right|$$

$$\delta = \frac{1}{(t_{1}-t_{0})} \cdot \ln \frac{\varphi_{0}}{\varphi_{1}} \qquad (4.6)$$

The times and angles have been read and  $\delta$  has been calculated individually. This gives us the following mean values:

Table 4.4

$\overline{\delta_0}$	$0.002\mathrm{s}^{-1}\pm0.001\mathrm{s}^{-1}$	$\delta_{300}$	$0.08\mathrm{s}^{-1}\pm0.01\mathrm{s}^{-1}$
$\delta_{100}$	$0.008\mathrm{s}^{-1}\pm0.002\mathrm{s}^{-1}$	$\delta_{400}$	$0.12s^{-1}\pm0.01s^{-1}$
$\delta_{200}$	$0.03\mathrm{s}^{-1}\pm0.01\mathrm{s}^{-1}$	$\delta_{500}$	$0.17\mathrm{s}^{-1}\pm0.01\mathrm{s}^{-1}$

For the deviation, the standard deviation is used. Otherwise, it can also be determined by means of the partial derivation:

$$\Delta \delta = \left| \frac{\partial \delta}{\partial t_1} \right| \cdot \Delta t_1 + \left| \frac{\partial \delta}{\partial t_0} \right| \cdot \Delta t_0 + \left| \frac{\partial \delta}{\partial \varphi_0} \right| \cdot \Delta \varphi_0 + \left| \frac{\partial \delta}{\partial \varphi_1} \right| \cdot \Delta \varphi_1$$

$$= \frac{1}{(t_1 - t_0)^2} \cdot \ln \frac{\varphi_0}{\varphi_1} \cdot (\Delta t_0 + \Delta t_1) + \frac{1}{(t_1 - t_0)} \cdot \left( \frac{1}{\varphi_0} \cdot \Delta \varphi_0 + \frac{1}{\varphi_1} \cdot \Delta \varphi_1 \right) \tag{4.7}$$

The natural angular frequencies are calculated via  $\omega_0 = \sqrt{\omega_d^2 + \delta^2}$  as

Table 4.5

$\overline{\omega_{0,0}}$	$0.65\mathrm{s^{-1}} \pm 0.03\mathrm{s^{-1}}$		$0.65\mathrm{s}^{-1}\pm0.03\mathrm{s}^{-1}$
$\omega_{0,100}$	$0.65\mathrm{s}^{-1}\pm0.03\mathrm{s}^{-1}$	$\omega_{0,400}$	$0.66\mathrm{s}^{-1}\pm0.03\mathrm{s}^{-1}$
$\omega_{0,200}$	$0.65\mathrm{s^{-1}}\pm0.03\mathrm{s^{-1}}$	$\omega_{0,500}$	$0.67\mathrm{s}^{-1}\pm0.03\mathrm{s}^{-1}$

and their deviations via

$$\Delta\omega_{0} = \left| \frac{\partial \omega_{0}}{\partial \omega_{d}} \right| \cdot \Delta\omega_{0} + \left| \frac{\partial \omega_{0}}{\partial \delta} \right| \cdot \Delta\delta$$

$$= \frac{\omega_{d}}{\sqrt{\omega_{d}^{2} + \delta^{2}}} \cdot \Delta\omega_{d} + \frac{\delta}{\sqrt{\omega_{d}^{2} + \delta^{2}}} \cdot \Delta\delta$$
(4.8)

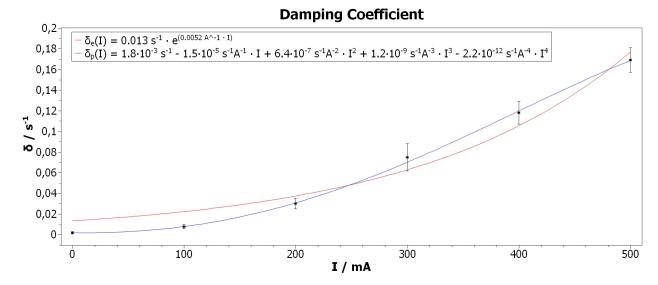


Figure 4.3: Damping coefficient depending on the coil current

for  $\omega_{0,0}$  e.g. as

$$\Delta\omega_{0,0} = \frac{0.65 \,\mathrm{s}^{-1}}{\sqrt{0.65 \,\mathrm{s}^{-1} + 0.002 \,\mathrm{s}^{-1}}} \cdot 0.03 \,\mathrm{s}^{-1} + \frac{0.002 \,\mathrm{s}^{-1}}{\sqrt{0.65 \,\mathrm{s}^{-1} + 0.002 \,\mathrm{s}^{-1}}} \cdot 0.001 \,\mathrm{s}^{-1}$$
$$= 0.03 \,\mathrm{s}^{-1} + 3 \cdot 10^{-6} \,\mathrm{s}^{-1}$$
$$\approx 0.03 \,\mathrm{s}^{-1}$$

In fig. 4.3 the damping coefficient is plotted versus coil current. For finding a formula  $\delta(I)$  SciDAVis did an exponential fit  $\delta_e(I)$  (red curve) and a fourth degree polynomial fit  $\delta_p(I)$  (blue curve):

$$\delta_{e}(I) = 0.013 \,\mathrm{s}^{-1} \cdot e^{0.0052 \,\mathrm{A}^{-1} \cdot I}$$

$$\delta_{p}(I) = 1.8 \cdot 10^{-3} \,\mathrm{s}^{-1} - 1.5 \cdot 10^{-5} \,\mathrm{s}^{-1} \,\mathrm{A}^{-1} \cdot I + 6.4 \cdot 10^{-7} \,\mathrm{s}^{-1} \,\mathrm{A}^{-2} \cdot I^{2}$$

$$+ 1.2 \cdot 10^{-9} \,\mathrm{s}^{-1} \,\mathrm{A}^{-3} \cdot I^{3} + 2.2 \cdot 10^{-12} \,\mathrm{s}^{-1} \,\mathrm{A}^{-4} \cdot I^{4}$$

$$(4.10)$$

As it can be seen, the polynomial fit is a better approximation than the exponential. However, the polynomial curve is only a good approach in the area of  $0 \le I \le 500 \,\mathrm{mA}$ . At higher *I*- values the curve has a maximum and goes lower again, which is illogical in the physical sense. Therefore, the exponential curve is a qualitatively better description of the dependency.

Finally, the aperiodic case is considered and plotted in fig. 4.4.

#### 4.2.2 Rotational Inertia

To determine the unknown rotational inertia of the pendulum, the dimensions of each of the three rods must first be measured as it can be seen in table 4.6.

Table 4.6: rod dimensions

i	$m_{Ri}/g$	$D_{Ri}/\mathrm{mm}$	$l_{Ri}/\mathrm{mm}$
1	$8.89 \pm 0.01$	$5.95 \pm 0.05$	$120 \pm 0.05$
2	$26.73 \pm 0.01$	$6.00 \pm 0.05$	$120 \pm 0.05$
3	$56.38 \pm 0.01$	$6.00 \pm 0.05$	$240 \pm 0.5$

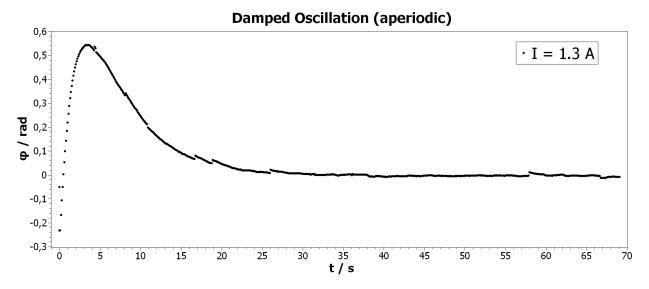


Figure 4.4: Aperiodic damped oscillation at  $I_c = 1.3 \, \mathrm{A}$ 

Obviously, the diameters all are much much smaller than the lengths. Hence, the rotational rod inertia can be calculated by means of eq. (1.16).

The following values are obtained:

$$J_{R1} = 10670 \,\mathrm{g \cdot mm^2} \pm 21 \,\mathrm{g \cdot mm^2} \tag{4.11}$$

$$J_{R2} = 32080 \,\mathrm{g \cdot mm^2} \pm 39 \,\mathrm{g \cdot mm^2} \tag{4.12}$$

$$J_{R3} = 270600 \,\mathrm{g \cdot mm^2} \pm 1200 \,\mathrm{g \cdot mm^2} \tag{4.13}$$

The deviations of the rod dimensions are reading errors of the scales. The deviations of the rod inertia can be determined by way of:

$$\Delta J_{Ri} = \left| \frac{\partial J_{Ri}}{\partial m_{Ri}} \right| \cdot \Delta m_{Ri} + \left| \frac{\partial J_{Ri}}{\partial l_{Ri}} \right| \cdot \Delta l_{Ri}$$

$$= \frac{1}{12} \cdot l_{Ri}^2 \cdot \Delta m_{Ri} + \frac{1}{6} \cdot m_{Ri} \cdot l_{Ri} \cdot \Delta l_{Ri}$$
(4.14)

For  $J_{R2}$  it is e.g.:

$$\Delta J_{R2} = \frac{1}{12} \cdot (120 \,\text{mm})^2 \cdot 0.01 \,\text{g} + \frac{1}{6} \cdot 26.73 \,\text{g} \cdot 120 \,\text{mm} \cdot 0.05 \,\text{mm}$$
$$= 12 \,\text{g} \cdot \text{mm}^2 + 26.73 \,\text{g} \cdot \text{mm}^2$$
$$= 38.73 \,\text{g} \cdot \text{mm}^2 \approx 39 \,\text{g} \cdot \text{mm}^2$$

The mean values of the period times read with reading errors are as follows:

$$T_1 = 9.7 \,\mathrm{s} \pm 0.3 \,\mathrm{s} \tag{4.15}$$

$$T_2 = \tag{4.16}$$

$$T_3 = 11.3 \,\mathrm{s} \pm 0.3 \,\mathrm{s} \tag{4.17}$$

# Conclusion

# List of Figures

1.1	Damping cases of a harmonic oscillation	4
1.2	Rotating rod	5
1.3	Schematical assembly of the angular sensor	6
1.4	Timing diagram showing the signal transition	8
2.1	Equipment used.	10
2.2	Equipment in detail	11
4.1	Curve of the angular sensor	13
4.2	Course of the tick rate at $I_c = 100 \text{mA}$	14
4.3	Damping coefficient depending on the coil current	16
4.4	Aperiodic damped oscillation at $I_c = 1.3 \mathrm{A} \ldots\ldots\ldots\ldots\ldots$	17
A.0	Course of tick rates at varying coil currents	23


# **List of Tables**


3.1	Currents set	12
4.1	Mean value of timer ticks per angular displacement	13
4.2	Period times for the damped oscillations	14
4.3	Damped natural frequencies	14
4.4	Mean values of the dampening coefficient	15
4.5	Angular natural frequencies	15
4.6	rod dimensions	16


# List of Symbols


 $\omega_0$  Angular frequency

# **A** Appendix

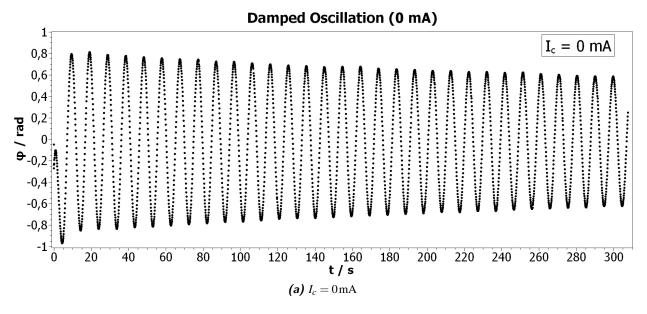

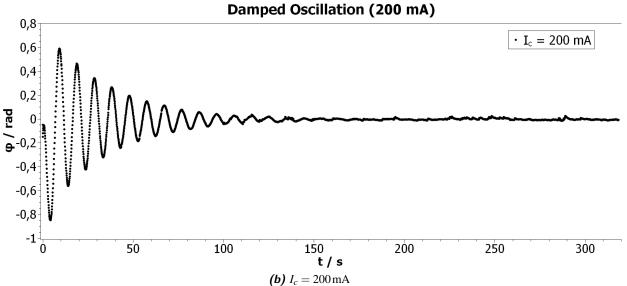

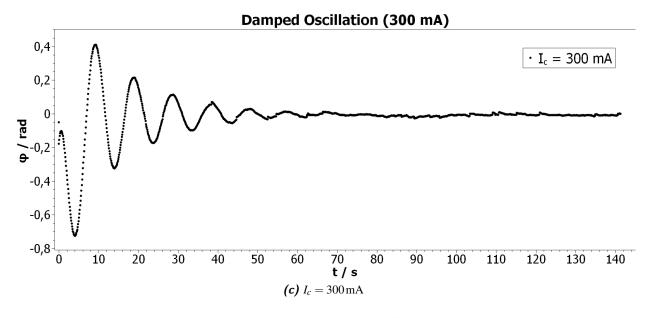

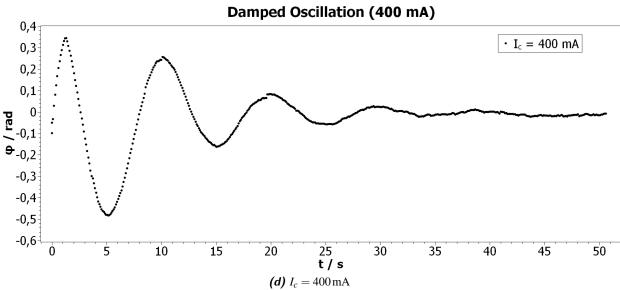

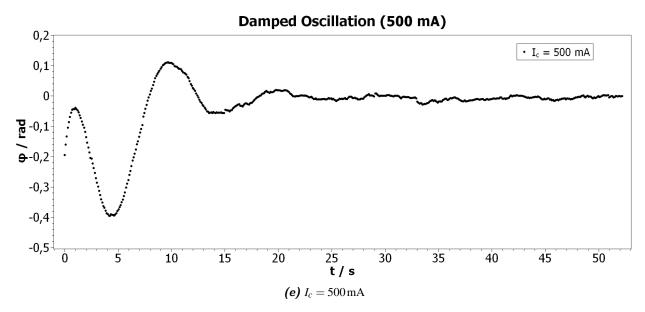


Figure A.0: Plots of the tick rates over time with coil currents ranging from  $0\,\mathrm{mA}$  to  $500\,\mathrm{mA}$  in increments of  $100\,\mathrm{mA}$ 

# **Bibliography**

[1] Eichler, Hans-Joachim, Kronfeldt, Heinz-Detlef, and Sahm, Jürgen. *Das neue Physikalische Grund-praktikum*. ger. 3., ergänzte und aktualisierte Auflage 2016. Springer-Lehrbuch. Eichler, Hans-Joachim (VerfasserIn) Kronfeldt, Heinz-Detlef (VerfasserIn) Sahm, Jürgen (VerfasserIn). Berlin and Heidelberg: Springer Spektrum, 2016. 470 pp. ISBN: 978-3-662-49022-8. DOI: 10.1007/978-3-662-49023-5.