

PROJECT DESCRIPTION

Click Sensor Hub is an IoT development Kit, like the Hexiwear docking station. Except our project utilizes NXP's FDRM-KL46Z development platform. The FRDM-KL46Z is interfaced to our designed PCB which contains four mikroBUS sockets.

PROJECT REQUIREMENTS

- I. Connectivity between the FRDM-KL46Z and four mikroBUS sockets.
- II. Each socket provides both 3.3V and 5V power supplies
- III. Successfully communicate SPI, UART, PWM, I2C, AN. Establish connectivity with any of the four PCB sockets to the FRDM-KL46Z.

IV.Write code for selection of clicks.


WHY USE CLICKS?

Major chip vendors are endorsing it





It's an open standard

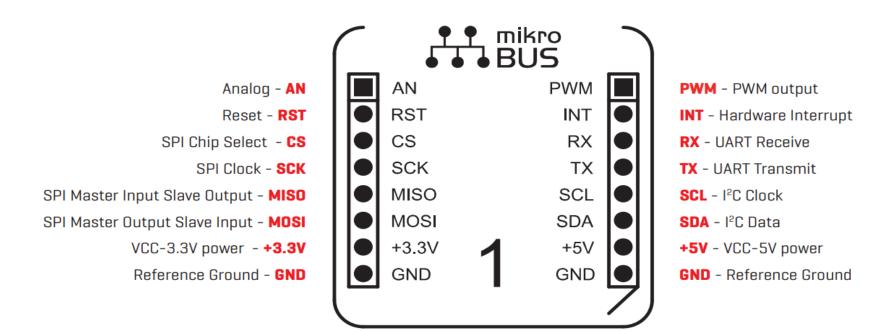

CLICK TEST RESULTS

A total of ten clicks were selected for testing. During the selection process we took into consideration the type of signal interfaces and voltage requirements. The selection of clicks we purchased allowed for us to thoroughly test all the signal interfaces available on a mikroBUS socket. Tested both the 3.3V and 5V sources


SIMILAR TO HEXIWEAR




E2.08 CLICK SENSOR HUB

Alfonso De La Morena, Mohamed Sghari, Dylan Dean



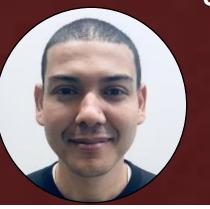





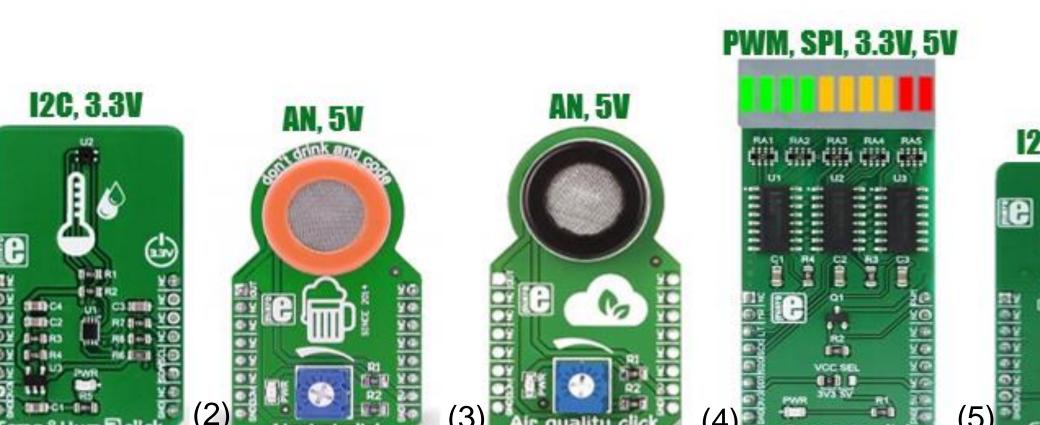





Get data from SD card to FRDM-KL46Z via Click board

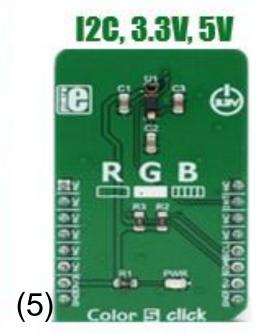


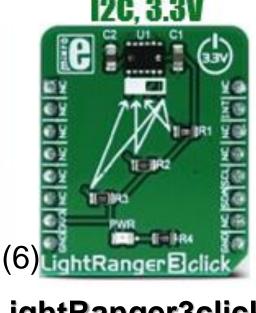




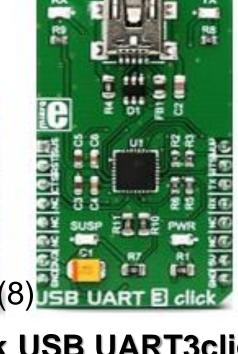

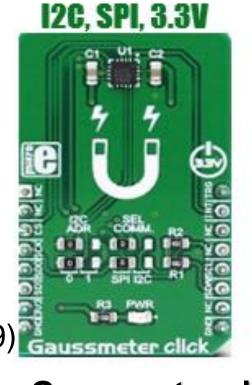

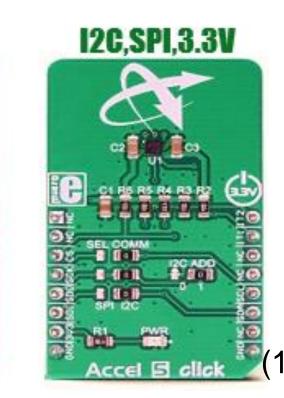


MIKRO

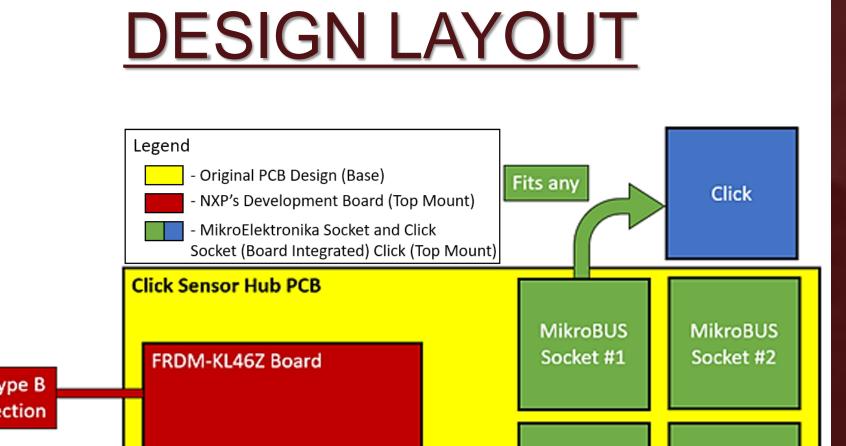

MikroBUS Socket #3

Click Sensor Hub

SIGNAL INTERFACES

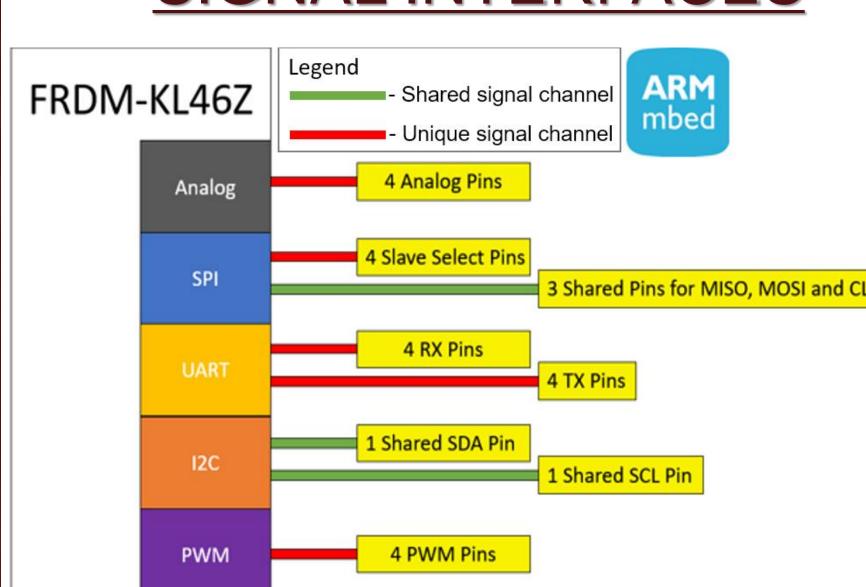

SOCKET TEST RESULTS

*Socket X, symbolizes that the same tests were carried out for each of the four mikroBUS sockets. *One click at a time

Test Case	Test Specifications	Test Results	Compliance
Socket X			Pass
(AN) Analog	Test Analog Click on Socket	Putty output achieved on selected socket with Air Quality Click	Pass
(MISO/MOSI) (CS/SCK) SPI	Test SPI Click on Socket	Bar Graph Click had selected pattern displayed on selected socket	Pass
(RX/TX) UART	Test UART Click on Socket	Serial connection on computer via selected socket	Pass
(SCL/SDA) I2C	Test I2C Click on Socket	I2C connection displayed data on PUTTY terminal using Temp2Hum Click via the selected socket	Pass
PWM	Test PWM Click on Socket	Bar Graph Click had selected pattern displayed on selected socket	Pass
(+3.3V/+5V) VCC/GND	All four mikroBUS TM sockets have both an optional 3.3V and 5V channel. All four mikroBUS TM sockets are grounded		Pass

SYSTEM DEFICIENCY

Deficiency	Effect	Solution	Estimated Time for Solve
System does not detect high voltage levels coming from Clicks	FRDM-KL46Z board has potential to be damaged by Clicks	Integrate a system that regulates the output of the MikroBUS sockets	3 months
Board operates with a variable power source	Difficult to people outside of a lab setting to utilize the Click Sensor Hub Board	Integrate battery or USB power to the board.	2 months
Board not fully synchronous, the code must switch between each of the sockets at a specified speed	Clicks that require constant readings or instructions unable to function if more than 2 Clicks connected to the board utilized the same shared channels	Change design to serve a fully synchronous set of Click boards operating on shared channels	12 months

ACKNOWLEDGEMENTS

NXP Semiconductors Sponsor: Dr. Kevin Kemp





Texas State University Faculty Advisor: Dr. William Stapleton Course Instructors: Mr. Lee Hinkle and


Mr. Mark Welker




SELECTION OF TEN CLICKS

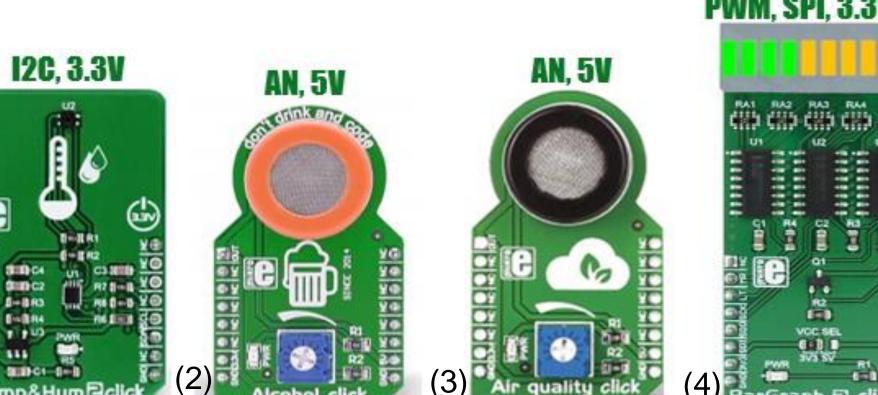


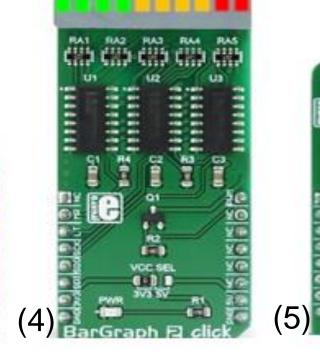


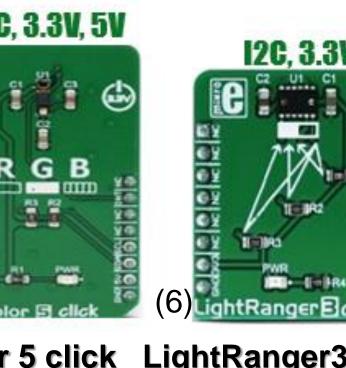



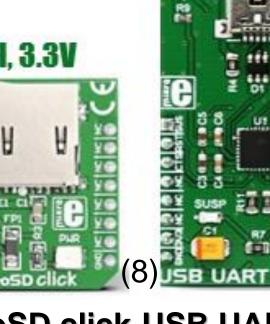

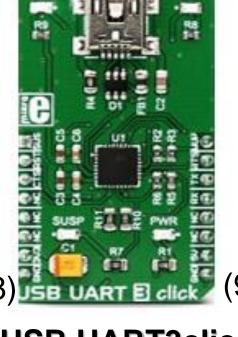

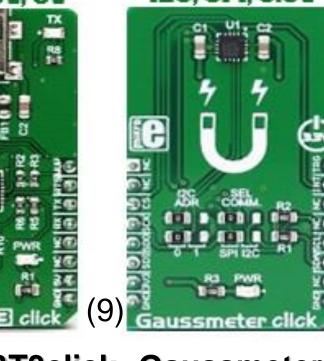

Temp&Hum2click Alcohol click Air quality click BarGraph2click Color 5 click LightRanger3click microSD click USB UART3click Gaussmeter click Accel 5 click

Legend TWO LAYER PCB DESIGN Top Layer Bottom Layer MERCETARY-ENCICE-EPSY-ERS-5,8-RODERSLET

	TZ.		
Click Tested	Test Specifications	Test Results	Compliance
Temp & Hum 2 Click	Board powered by 3.3V connection	Connected board and checked LED light. Measured	Pass
	Ensure safe connection to FRDM-KL46Z, no feedback voltage should be above 3.3V	Voltages of respective pins measured to be below 3.3V threshold	Pass
	Get temperature readings via FRDM-KL46Z code to display on PUTTY	Non-zero reading recorded and displayed on PUTTY	Invalid due to board being discontinued by Mikro
USB UART 3 Click	Board powered by 3.3V and 5V connections	Connected board and checked LED light. Measured	Pass
	Ensure safe connection to FRDM-KL46Z, no feedback voltage should be above 3.3V	Voltages of respective pins measured to be below 3.3V threshold	Pass
	Successful USB connection via USB UART 3 Click to FRDM-KL46Z	Established PUTTY connection via USB UART 3 Click	Fail
	Board powered by 3.3V and 5V connections	Connected board and checked LED light	Pass
Color 5 Click	Ensure safe connection to FRDM-KL46Z, no feedback voltage should be above 3.3V	Voltages in respective pins measured to be below 3.3V threshold	Pass
	Get RGB readings via FRDM-KL46Z code to display on PUTTY	Non-zero reading recorded and displayed on PUTTY	Fail
	Board powered by 3.3V and 5V connections	Connected board and checked LED light	Pass
Bar Graph 2 Click	Ensure safe connection to FRDM-KL46Z, no feedback voltage should be above 3.3V	Voltages of respective pins measured to be below 3.3V threshold	Pass
	Cycle Bar Graph Click through set pattern	Pattern set and displayed on Click	Pass
	Board powered by 3.3V connection	Connected board and checked LED light	Pass
Accel 5 Click	Ensure safe connection to FRDM-KL46Z, no feedback voltage should be above 3.3V	Voltages of respective pins measured to be below 3.3V threshold	Pass
	Get x, y, z coordinate acceleration readings from Click	Non-zero reading recorded and displayed on PUTTY	Fail
	Board powered by 3.3V connection	Connected board and checked LED light	Pass
Gaussmeter Click	Ensure safe connection to FRDM-KL46Z, no feedback voltage should be above 3.3V	Voltages of respective pins measured to be below 3.3V threshold	Pass
	Get x, y, z magnetic field readings from Click	Non-zero reading recorded and displayed on PUTTY	Pass
	Board powered by 3.3V connection	Connected board and checked LED light	Pass
Light Ranger 3 Click	Ensure safe connection to FRDM-KL46Z, no feedback voltage should be above 3.3V	Voltages of respective pins measured to be below 3.3V threshold	Pass
	Get distance readings from Click	Non-zero reading recorded and displayed on PUTTY	Pass
Alcohol Click	Board powered by 5V connection	Connected board and checked LED light	Pass
	Ensure safe connection to FRDM-KL46Z, no feedback voltage should be above 3.3V	Voltages measured to be unsafe. Measured at 4.2 volts peak despite tweaking variable resistor to max value.	Fail, Click not safe to use
	Get alcohol level reading from Click	Non-zero reading recorded and displayed on PUTTY using a resistor and a breadboard,	Invalid due to not being safe
		not tested on Click Sensor Hub board due to damage it would cause FRDM-KL46Z	board
	Board powered by 3.3V and 5V connections	Connected board and checked LED light	Pass
Air Quality Click	Ensure safe connection to FRDM-KL46Z, no feedback voltage should be above 3.3V	Voltages of respective pins measured to be below 3.3V threshold	Pass
	Get air quality level reading from Click	Non-zero reading recorded and displayed on PUTTY	Pass
	Board powered by 3.3V connection	Connected board and checked LED light	Pass
microSD Click	Ensure safe connection to FRDM-KL46Z, no feedback voltage should be above 3.3V	Voltages of respective pins measured to be below 3.3V threshold	Pass

Number value successfully read from text file