CIRN QUANTITATIVE COASTAL IMAGING TOOLBOX

Brittany L. Bruder + Katherine L. Brodie

Coastal and Hydraulics Laboratory
U.S. Army Engineer Research and Development Center
Duck, NC

May 26, 2020

Contents

Ta	able of Figures	4
E	recutive Summary	5
1.	Purpose	6
	Software Requirements	6
	User-Data Requirements	6
2.	Workflow	7
3.	Script Descriptions	9
	A0_movie2frames	9
	A_formatIntrinsics	. 10
	B_gcpSelection	.11
	C_singleExtrinsicSolution	. 13
	D_gridGenExampleRect	. 17
	E_scpSelection	.21
	F_variableExtrinsicSolution	. 24
	G1_imageProducts	. 28
	G2_pixelInstruments	.32
4.	Sub-Function Descriptions	.38
	localTransformPoints	. 38
	localTransformExtrinsics	. 39
	localTransformEquiGrid	. 40
	xyzToDistUV	.41
	undistortUV	.42
	rectificationPlotter	.43
	intrinsicsExtrinsicsToP	. 44
	imageRectifier	. 45
	extrinsicsSolver	.46
	distUV2XYZ	. 47
	distortUV	. 48
	CIRNangles2R	.49
	cameraSeamBlend	.50
	caltech2CIRN	51

stackPlotter	52
pixInstPrepXYZ	53
thresholdCenter	55
5. Equation and Coordinate System Definitions	56
Coordinate System Definitions	56
Local and Geographic World Coordinates	56
Extrinsics	57
Image and Camera Coordinates	58
Projection Matrix Construction	58
Rotation Matrix Definition	59
Intrinsics and Distortion	61
6. References	62

Table of Figures

Figure 1: Quantitative Coastal Imaging Toolbox repository and workflow. White boxes represents	
characterizations, yellow boxes represent folders, and orange boxes represent scripts	8
Figure 2: Example GCP click window with specified GCP numbers in B_gcpSelection for uasDemoData	11
Figure 3: Example GCP input txt file for C_singleExtrinsicSolution	. 14
Figure 4: Example reprojection figure in C_singelExtrinsicSolution for uasDemoData to observe extrins	sic
solution accuracy	16
Figure 5: Example figure output for D_gridGenExampleRect for uasDemoData for World (Top) and Loc	cal
(Bottom) coordinates	20
Figure 6: Example SCP click and radius (red) in E_scpSelection for uasDemoData	21
Figure 7: Panel displaying pixel intensity values within search radius of SCP 1 and resultant center of a	irea
calculations (white dot) when applying binary threshold in E_scpSelection for uasDemoData	22
Figure 8: Figure in F_variableExtrinsicSolutions plotting tracked (yellow) and reprojected (red) SCPs fo	r
uas Demo Data	26
Figure 9: Figure produced by F_variableExtrinsicSolution for uasDemoData highlighting solved for	
variable extrinsics (relative to the first frame)	27
Figure 10: Example ensemble output of G1_imageProducts for uasDemoData in a local rotated	
coordinate system	31
Figure 11: Example figure output for G2_pixelInstruments with instrument locations projected onto tl	
first oblique image for uasDemoData	36
Figure 12: Example Figure output for G2_pixelInstruments for (left to right): Grid, yTransect, and	
xTransect for uasDemoData	37
Figure 13: Relationship between World Coordinate Systems, Geographical and Local	56
Figure 14: Definition of extrinsic vector in world coordinates	57
Figure 15: Relationship between Camera XYZ $_{\text{\tiny C}}$, Homogeneous Camera xyz, and undistorted $$ Image (U $^{\text{\tiny N}}$	V)
coordinates	58
Figure 16: P Matrix Construction to go from World to undistorted Camera Coordinates	58
Figure 17: ZXZ Rotation formulation of World to Camera R Rotation Matrix	59

Executive Summary

The CIRN Quantitative Coastal Imaging Toolbox is a collection of MATLAB scripts to produce georectified images specifically tailored for quantitative analysis of coastal environments. The repository performs end-to-end georectification of oblique imagery from land-based multi/single-camera stations or stationary Unmanned Aircraft Systems (UAS). In addition to rectified frames, the toolbox produces ensemble products such as statistical or subsampled pixel collections for optical wave, current and bathymetric inversion analyses. While experts have employed similar scripts operationally for years, this toolbox is for photogrammetry novices. Demos teach fundamentals but also can be easily transitioned to turn-key applications for operational data processing.

1. Purpose

The CIRN Quantitative Coastal Imaging Toolbox is series of MATLAB scripts that can be utilized to georectify sets of oblique imagery from stationary UAS and single (or multi) —camera land-based imagery for generation of classic coastal imaging data products [1]. The scripts prominently call and highlight a series of sub-functions that implement fundamental photogrammetry calculations (e.g. solving camera extrinsics and calculating a camera projection matrix). The scripts are prepopulated with demo UAS and multi-camera data and can be run as downloaded. Software and Data Requirements This user guide will outline: software and Data requirements; general workflow; and descriptions of scripts and sub-functions including input, output, and function dependencies. The last sections serve as references for equation and coordinate system definitions and literature references.

Software Requirements

The toolbox is a series of scripts designed in MATLAB Version 2019b. Older MATLAB versions may run the scripts, but this is not guaranteed. In addition, the toolbox requires the MATLAB Statistics and Machine Learning Toolbox for the *nlinfit* function and Image Processing Toolbox for the *bwdist* function.

The Coastal Imaging Research Network (CIRN) GitHub repository serves and manages the Quantitative Coastal Imaging Toolbox. Updates, managed by git version control, are provided at this GitHub repository.

User-Data Requirements

To adapt to other data sets, the user is required to provide: image data with suitable ground control points (GCPs), GCP geographic coordinates, and camera intrinsic calibration parameters. More details on collection requirements for georectified imagery can be found in [2] and camera intrinsic calibrations at [3] .

2. Workflow

The application is a series of linear MATLAB m-scripts that can be run in different 'processing sequences' (Figure 1) depending on the collection mechanism (hovering UAS vs fixed land-based single (multi) -camera stations). Scripts work with multiple processing sequences to emphasize commonalities between processing steps between collection techniques as well as reduce replicative code. Sections of the processing sequence are characterized by their functionality.

Scripts are run sequentially as inferred by the alphanumeric prefixes in the filenames and Figure 1. Each script represents a key photogrammetric processing step or decision point, (e.g. what GCPs to use) and saves intermediate products (e.g. extrinsics, etc) for input into the next script. The intermediate products allow the user flexibility in processing and an ease of exploring processing decisions (e.g. changing coordinate systems or grid resolutions) without having to restart the entire end-to-end processing. Metadata such as GCP projection errors are saved in the output mat-files as well.

In addition to the demonstrative scripts in the main repository directory, there is a X_CoreFunctions folder that contains sub-functions that execute fundamental photogrammetry processes (e.g. plotting rectified images, undistorting images). These functions can also be used independently of the demonstrative scripts making them easily adaptable to a user's needs.

The remaining folders in the main directory contain demonstration data for UAS (X_UASDemoData) and mulit-camera land-based stations (X_FixedMultiCamDemoData). The processing sequences for each demo are highlighted in Figure 1. The demo scripts prefixed (A0-G2) are prepopulated to process the UASDemoData end-to-end. The FixedMultiCamDemoData path starts at D_gridGenExampleRect since geometry solutions are already provided, and requires users to uncomment blocks of code to execute. Scripts prefixed D, G1-G2 are also prepopulated for FixedMultiCamDemoData but these inputs are commented out. Both demos are demonstrated in Section 3. Sections 3 and 4 outline each processing script as well required inputs, outputs, and dependent functions. Example output is from demonstration data.

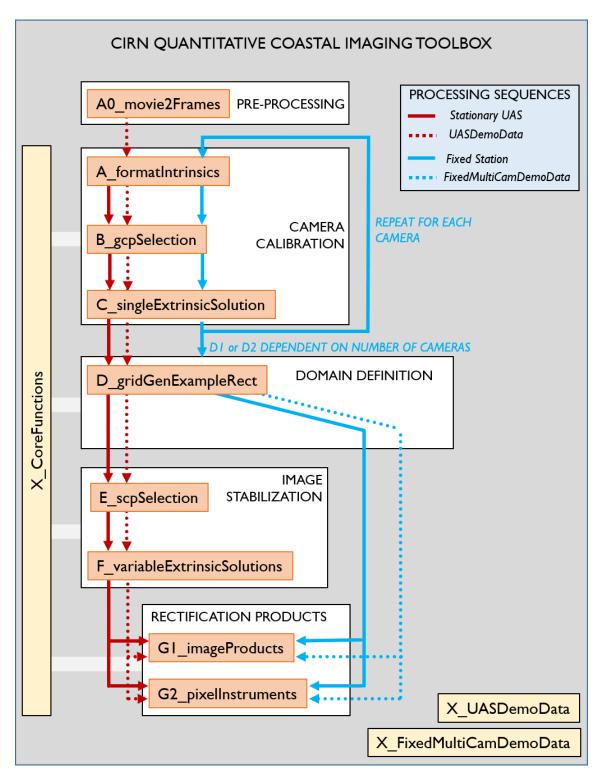


Figure 1: The CIRN Quantitative Coastal Imaging Toolbox repository and workflow. White boxes represents characterizations, yellow boxes represent folders, and orange boxes represent scripts.

3. Script Descriptions

A0_movie2frames

Description:

This function outputs frames (images) from a movie file with a specified frame rate. This function may or may not need to be run first in the progression. It will typically be needed for movie files from UAS collects to obtain images for analysis. However, it can be utilized for any movie file even from a fixed station.

Input:

Input is entered by user into the script in Section 1 and 2.

Section 1: Loading and Saving Information

Variable	Description	
mpath	Filepath where movie is located. Movie should be a format readable	
	by MATLAB and computer video CODEC.	
oname	Output string of the basename prefix for the images to be save	
	under. Example: DuckC1 will be DuckC1_00001, DuckC2_00002, etc.	
odir	Filepath where the output individual images will be saved.	

Section 2: Timing Information and Framerate

Variable	Description	
to	Enter the time of the first frame in [year, month, day, hr, min, sec]	
	format. If unknown leave as all zeros. Timing will just refer the first	
	frame as t=0s.	
framerate	Enter the Desired Frame Rate in frames/second (fps). Note, desired	
	frame rate should be a multiple or factor of the video orginal frame	
	rate for equally timed frames. Example: for a video at 30 fps one can	
	accurately export frames at 1,2,3,5,6,10,15 or 30 fps (multiples). Or	
	for lower framerates (<1 fps) the framerate would be (1./(N+n/30))	
	where N is the integer number of seconds between frames and n is	
	the fractional number of frames (A Frame every 2.5 seconds would be	
	1./(2+15/30)=.4 fps).	

Output:

A series of images (.png) in odir. Timing information will be saved in the name of the file in epoch time. If initial time not specified, timing will be referenced to the first frame at 0s. Times will be rounded to the nearest milliscond and expressed in milliseconds.

Required Core Sub-Functions:

None.

A_formatIntrinsics

Description:

This function initializes the intrinsics matrix for a given camera. It is to be run first in the progression. It should be run for each camera in a multi-camera fixed station, every time the focus is adjusted, a new lens is added, or a new enclosure is introduced. For a UAS camera, it should be run for each type of recording mode (4K Video, 12MP snapshot, etc). It can entered manually or refer to a Cal-Tech Camera Calibration file, a third-party MATLAB repository to perform camera intrinsic calculations [3]. Note, this function assumes the calib_results is for a standard distortion model, not fish eye. Model is outlined in Section 5.

Input:

Input is entered by user into the script in Section 1, 2, and possibly 3.

Section 1: Loading and Saving Information

Variable	Description	
oname	Output string for the basename for the intrinsic matfile to be saved	
	under.	
odir Output filepath where the intrinsic mat file will be saved.		

Section 2: Intrinsics

Variable	Description	
iopath	Filepath of the saved Caltech calibration results (Calib_result.mat). If user is going to enter manually, this should be left empty {} and entered in Section 3.	

Section 3: Manually Entered Intrinsics (Optional)

Variable	Description	
intrinsics	A [1x11] vector describing the focal lengths and distortion of the camera/lens combination. Distortion coefficients are defined by [3] and defined in Section 5.	

Output:

A .mat file saved as *oname_IO.mat* in *odir*. Will contain following variables.

Variable	Description	
intrinsics	A [1x11] vector describing the focal lengths and distortion of the	
	camera/lens combination. Distortion coefficients are defined by [3]	
	and defined in Section 5.	

Required Core Sub-Functions:

caltech2CIRN

B_gcpSelection

Description:

This function initializes the GCP structure for a given camera. The user will load a distorted image, click on GCPs, and the function will save the distorted UVd coordinates and image metadata for a given camera.

How to use clicking mechanism: The user can zoom and move the image how they please and then hit 'Enter' to begin clicking mode. A left click will select a point, a right click will delete the nearest point to the click. After a left click, the user will be asked to enter a GCP number to identify the GCP in the command window. The user can then zoom again until hitting enter to select the next point. To end the collection, hit enter to enter clicking mode (the cross hairs) and click below the image where it says 'Click Here to End Collection.' Be sure to be zoomed out completely when ending a collection. The user can click GCPs in any order they would like.

For the uasDemoData, the first image is has been modified to provide GCP suggestions. Users should click on targets and provide the same numbering to work with the rest of the demonstration workflow. Figure 2 shows what the final window for the uasDemoData progression should be.



Figure 2: Example GCP click window with specified GCP numbers in B_gcpSelection for uasDemoData

This function is to be run second in the progression for each camera in a multi-camera fixed station or UAS flight (or if a recording mode was changed midflight). GCP calibration should occur any time a camera has moved for a fixed station, the first frame in a new UAS collect, or intrinsics have changed.

Input:

Input is entered by user into the script in Sections 1 and 2. Users will then enter information by clicking GCPs and entering an identifying number in the command window.

Section 1: Saving Information

Variable	Description	
oname	Output string for the basename for the GCP mat files to be saved	
	under.	
odir	Output filepath where the GCP mat file will be saved.	

Section 2:GCP Image

Variable	Description	
imagePath	Filepath of the saved image for clicking. For UAS processing this should be the first image of the collection. For fixed station, it should be any frame where GCPs are visible.	

Output:

A .mat file saved as *oname_gcpUVdInitial.mat* in *odir*. Will contain following variables.

Variable	Description	Description	
gcp		with each entry corresponding to a GCP. Note, the index estructure may not correspond with the GCP identifying	
	Ticias of str	rectare are.	
	UVd	[1 x 2] Vector of distorted Image coordinates of GCP	
	num	Identifying GCP number entered by user.	
	imagePath	String of filepath of image used for GCP clicking. Same as imagepath in Section 2.	

Required Core Sub-Functions:

None

Description:

This function solves the extrinsics (EO) for a given camera for use in the toolbox. The user will load gcp and intrinsic (IO) information via input files. The user will specify coordinate system information as well as initial extrinsics rough guesses. The function will output the solved extrinsics in the form of the vector extrinsics, metadata information in initialCamSolutionMeta, and a reprojection error figure.

Note, the extrinsics solution will be in the same coordinate system as the GCPs. Regardless of what the user enters, this will be referred to as the WORLD coordinate system with a subscript W. It is encouraged that the user enter GCPs in a geographic coordinate system (State Plane, UTM, etc). The toolbox will complete a coordinate system rotation in subsequent functions. Also, the nlinfit solver is very sensitive to the initial guess; so it must be an educated guess. It is particularly sensitive to the guessed azimuth, tilt, and swing. If incorrect, nlinfit will error or provide a nonsensical answer. Please check veracity of provided extrinsics. Descriptions of the World Coordinate System and extrinsic definitions (particularly azimuth, tilt, and swing) are in Section 6.

This function is to be run third in the progression for each camera in a multi-camera fixed station or for each collection for a UAS platform. GCP calibration and geometry solution calculation should occur any time a camera has moved for a fixed station, the first frame in a new UAS collect, or intrinsics has changed.

Input:

Input is entered by user into the script in Sections 1-4.

Section 1: Saving Information

Variable	Description	
oname	Output string for the basename for the Extrinsic/Intrinsic Solution mat	
	files to be saved under.	
odir	Output filepath where the Extrinsic/Intrinsic Solution mat file will be	
	saved.	

Section 2:Intrinsics

Variable	Description
iopath	Filepath of the intrinsics matfile output by A_formatIntrinsics. Matfile should contain at minimum the following variable. Note, the intrinsics should correspond to the recording mode and camera/lens for the image taken in B_gcpSelection, imagePath.
	intrinsics A [1x11] vector describing the focal lengths and distortion of the camera/lens combination. Distortion coefficients are defined by [3] and defined in Section 6.

Section 3: GCP Information

Variable	Description			
gcpUVdPath	Filepath of the Distorted GCP UV Coordinates produced by			
	B_gcpSelection. The intrinsics of the corresponding image from which the UVd			
	GCP coordinates were derived from should match that entered in Section 2. If			
	not produced by B		riables are listed below.	
	gcp		with each entry corresponding to a GCP. Note,	
			ntry in the structure may not correspond with	
			ntifying number.	
			elds of structure are:	
		UVd	[1 x 2] Vector of distorted Image coordinates	
		of GCP		
	num Identifying GCP number entered by user.			
gcpXyzPath	•		rdinates. File should be a four column comma	
	delimted txt file with columns representing gcp number, x coordinate, y			
	coordinate, and z coordinate. Rows will correspond to each GCP. GCP numbers			
	should match with those entered in B_gcpSelection. Example text file structure			
	in Figure 3. It is encouraged to enter GCPs in a geographic coordinate system			
0 1	(State Plane, UTM, etc).			
gcpCoord	String that describes the coordinate system (World) and units of the entered			
in a Dath	GCPs in gcpXyzpath			
imagePath	Filepath of the image you would like GCP reprojection checked against (plotted in). This should be the same image used in B_gcpSelection (imagePath) if you			
	_		oving camera. For a fixed camera, it can be any	
genellend	image where the G			
gcpsUsed		•	ald like to use for the solution. Numbers must	
	match gcp.num values found in gpcUvPath and gcpXyzPath files. You do not have to use all of the clicked GCPS or GCPS listed in the file.			
	nave to use all of t	ne clicked GC	rs of ders listed in the file.	

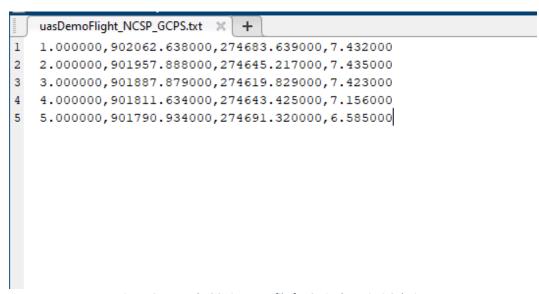


Figure 3: Example GCP input txt file for C_singleExtrinsicSolution

Section 4: Solution Information

Variable

extrinsicsInitialGuess	A [1x6] vector of the initial guess of extrinsics, the EO solution, for the corresponding camera image. Extrinsics is formatted as [xyz azimuth tilt swing] where xyz correspond to the same world coordinate system as gcps entered in gcpXyzPath in Section 3. Azimuth, tilt and swing should be in radians. For UAS, this information can be estimated from the autopilot. For fixed camera stations it is suggested you survey in the location of the cameras. Further descriptions of the extrinsics
extrinsicsKnownsFlag	vector and world coordinate systems can be found in Section 6. Enter the number of knowns, or what you would like fixed in your EO solution. 1 represents fixed where 0 represents floating (solvable) for each value in extrinsics. Review [4] for a discussion of which extrinsics may float relative to the number of GCPs and the effect on rectification accuracy.

Output:

A .mat file saved as <code>oname_IOEOInitial.mat</code> in <code>odir</code>. Will contain following variables.

Variable	Description			
initialCamSolutionMeta	Structure with metadata about extrinsic solution. Fields are listed			
	below. Those left blank are the same entered in the input sections.			
	gcpUsed			
	gcpRMSE	squared error be XYZ coordinates and world XYZ co extrinsic solution gcpUvdPath. All	or with the root mean etween the entered world of the GCPs in gcpXyzPath ordinates found using the n and UVd coordinates in GCPS used, not just those sUsed. Units are in units (ZPath.	
	extrinsicsInitialGuess			
	extrinsicsKnownsFlag			
	extrinsicsUncert	of each solved ex nlinfit. Units a	with the uncertainty value extrinsic value provided by re in units entered in position and radians for	
	imagePath			
	worldCoordSys	Description of v same as gcpCoor	vorld coordinate system,	
	gcp	Same as entered additional fields	in Section 3 but with the	
		х	XYZ coordinates as	
		У	entered in gcpXyzPath	
		Z		
		CoordSys	Description of world coordinate system, same as gcpCoord.	
		xReprojError	Difference between the	
		yReprojError	entered world XYZ coordinates of the GCPs	

	in gcpXyzPath and world XYZ coordinates found using the extrinsic solution and UVd coordinates in gcpUvdPath.
intrinsics	A [1x11] vector describing the focal lengths and distortion of the
	camera/lens combination. Distortion coefficients are defined by
	[3] and defined in Section 6.
extrinsics	A [1x6] vector describing the camera pose and position in WORLD
	coordinates (whatever coordinate system GCPs were entered in).
	Extrinsic values are defined in Section 6 along with coordinate
	systems.

A figure with the original 'clicked' GCPs plotted on the imagePath in red along with the reprojected GCP values using the extrinsic solution in yellow. Example from uasDemoData shown In Figure 4. Note, red is difficult to see because it is a high accuracy solution and yellow is directly on top.



Figure 4: Example reprojection figure in C_singelExtrinsicSolution for uasDemoData to observe extrinsic solution accuracy.

Required Core Sub-Functions:

extrinsicsSolver xyz2DistUV intrinsicsExtrinsics2P distortUV distUV2XYZ undistortUV

Requires Also: MATLAB Statistics and Machine Learning Toolbox

D_gridGenExampleRect

Description:

This function generates grids for rectification in both world global and world local rotated coordinate systems. The function rectifies a single oblique image into rectified imagery for a one or multiple cameras. The user will load an intrinsic and extrinsics solution (IOEO) for each camera via input files. The user will specify the resolution and limits of the rectified grid and local rotation parameters for a local coordinate system. The user can enter the grid parameters in local or world coordinates; the function will make a corresponding grid encompassing the other system. The function will produce figures and save .png images of the georectified imagery in both coordinate systems. In addition, the prescribed grids will be saved as well in a mat file.

The user input of the code is prescribed for UASDemoData. However, one can uncomment lines in Section 4 for the FixedMultiCamDemoData.

This function is to be run fourth in the progression to evaluate camera extrinsic solutions and georectification grids. For UAS it should be run on the first image used for camera IOEO calibration. For fixed camera stations it can be ran on any imagery with the corresponding IOEO.

Input:

Input is entered by user into the script in Sections 1-4.

Section 1: Saving + Output Information

Variable	Description
oname	Output string for the basename for the example rectified images to be saved under.
odir	Output filepath where the rectification grid mat file will be saved.
gname	String for the basename for the rectification grid.
teachingMode	A flag to display intermediate steps in rectification, i.e showing transformation of XYZ points to Image UVd points. It is implemented in the sub-function imageRectification. For demo purposes, it should =1 to show intermediate steps. Otherwise set to 0 if not desired.

Section 2: Loading Information

Variable	Description		
imagePath	used in B_g doing a UA	Filepath of the image you would like rectified. This should be the same image used in B_gcpSelection and C_singleExtrinsicSolution (imagePath) if you are doing a UAS collect or a moving camera. For a fixed camera, it can be any image where intrinsics and extrinsics are valid.	
ioeopath	Filepath of the saved CIRN IOEO calibration results produced by C_singleExtrinsicSolution. If not produced by C, minimum variables are listed below.		
	intrinsics	A [1x11] vector describing the focal lengths and distortion of the camera/lens combination. Distortion coefficients are defined by [3] and defined in Section 6.	

extrinsics	A [1x6] vector describing the camera pose and position in WORLD
	coordinates (whatever coordinate system GCPs were entered in).
	Extrinsic values are defined in Section 6 along with coordinate
	systems.

NOTE: For multiple cameras, these values are entered as cell entries for each camera. The extrinsics for each camera should all be in the same world coordinate system. It is up to the user to make sure the entries for both variables correspond to the same cameras. Even for a single camera, both impath and ioeopath need to be entered as cell functions with one entry.

Section 3: Rectification Information

Variable	Description
wolrdCoord	String of description of the World coordinate system for your own
	records. The world coordinate system of these should be the same as the
	IOEO specified in C_singleExtrinsicSolution (gpsCoord,
	camSolutionMeta.worldCoordSys).
Coordinate Syste	em Info: Enter the origin and angle if you would prefer rectified output to be in
a local rotated r	ight hand coordinate system. CIRN local coordinate systems typically have the
new local X poi	nted positive offshore, Y oriented alongshore, and the origin onshore of the
shoreline. If fie	lds are entered, user will still be able to rectify in both local and world
coordinates. No	te, if user already specified their world coordinates as a local system, or do not
desire a rotation	n, set localOrigin and localAngle to [0,0] and 0. More description of coordinate
systems is in Sec	
localOrigin	Origin of new local coordinate system in world coordinates. should be in the
	same coordinate system of GCPs (worldCoord).
LocalAngle	relative angle between the new (local) X axis and old (World) X axis, positive
	counter-clockwise from the old (world) X. Units are degrees.
localFlagInput	Flag if you would like to INPUT your grid in rotated local coordinates. 1=local
	coordinates, 0= world coordinates. The function will still rectify both
	coordinate systems regardless of localFlagInput value. LocalFlagInput only
	dictates the coordinate system of the input and which direction the rotation
	will occur. If localOrigin and localAngle =0; this value is irrelevant.
Grid Specification	ns:
ixlim	A [2 x1] vector specifying the x or y limits of the rectification grid. Units should
iylim	be consistent with worldCoord, coordinate system dependent on
	localFlagInput.
idxdy	X and Y resolution of grid in units consistent with worldCoord
iz	The elevation you would like your gridrectified as. Typically, CIRN specifies an
	constant elevation across the entire XY grid consistent with the corresponding
	tidal level the world coordinate system. For more accurate results a spatially
	variable elevation grid should be entered if available. However, this code is
	not designed for that. If you would like to enter a spatially variable elevation,
	say from SFM along with tidal elevation, enter your grid as iZ. It is up to the
	user to make sure it is same size as iX and iY. Spatially variable Z values are
	more significant for run up calculations than for current or bathymetric
	inversion calculations. It can also affect image rectifications if concerned with
	topography representation.
	What does alter bathymetric inversion, surface current, and run-up
	calculations is a temporally variable z elevation. So make sure the elevation
	value corresponds to the correct tidal value in time and location. For short
	UAS collects, we can assume the elevation is relatively constant during the

collect. However for fixed stations we would need a variable z in time. This function is designed for rectification of a single frame, so z is considered constant in time.
Value should be entered in the World Coordinate system and units.

Section 4: Multi-Camera Demo

Uncomment this section for the multi-camera demo. Impath and ioeopath should be entered as cells, with each entry representing a different camera. It is up to the user to ensure that entries between the two variables correspond. Extrinsics between all cameras should be in the same World Coordinate System. Note that no new grid is specified in this example since the data for the multi-cameras cover the same region as the UAV data; hence, the cameras and images are all rectified to the same gird.

Output:

A .mat file saved as *GRID_gname.mat* in *odir*. Will contain following variables. Variables left blank are the same as what is input by user above.


Variable	Description
Х	NxM grids in World coordinates where N is the number of rows (direction of
Υ	varying Y) and M is the number of columns (direction of varying X).
Z	
worldCoord	
localAngle	
localOrigin	
localX	NxM grids in rotated Local coordinates (according to localAngle and
localY	localOrigin) where N is the number of rows (direction of varying Y) and M is
localZ	the number of columns (direction of varying X).

Example georectified images of those specified in impath and using specified grid parameters saved as *oname_World.png* and *oname_Local.png* in *odir*.

Depending on teachingMode input, two figures for each camera showing complete georectification as well as XYZ grid points reprojected into UVd image space for both world and local coordinates. Examples shown below in Figure 5.

Required Core Sub-Functions:

imageRectification xyz2DistUV cameraSeamBlend intrinsicsExtrinsics2P distortUV localTransformExtrinsics localTransformPoints localTrasnfromEquiGrid

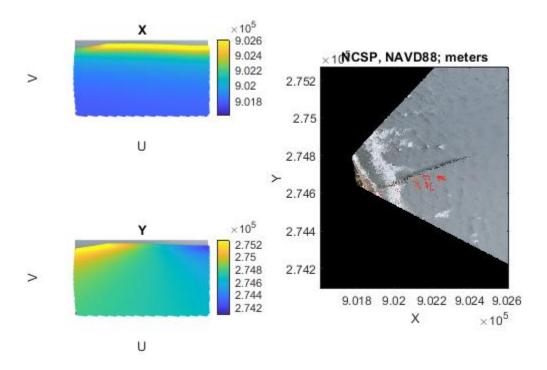

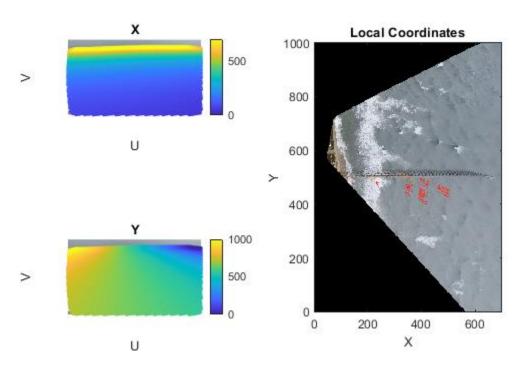


Figure 5: Example figure output for D_gridGenExampleRect for uasDemoData for World (Top) and Local (Bottom) coordinates.

Description:

This function initializes the SCP (stabilization control points) structure for a given camera for use in the toolbox. The user will load a given DISTORTED image for where the IOEO has been calculated already using C_singleExtrinsicSolution and then select at least 4 bright or dark points that will be used to stabilize the image (i.e. they must be in the frame throughout the collection). Additional parameters such as expected movement radius and intensity threshold will also be entered.

The clicking mechanism works similar to B_gcpSelection. The user can zoom and move the image until they hit enter to go into clicking mode (cross-hairs). Note, the click does not have to be as precise as B_gcpSelection. The user should click a bright (dark) target that is brighter (darker) than what is around it and does not move. The bright target should not be in the water with breaking waves rushing past. The user will enter a SCP number, and radius (in pixels) to search for the point. It is best to be as small as possible and not include bright (dark) pixels of other objects. For example, if on a pier, the radius should be small enough to exclude any water pixels. The radius should appear in the figure after entry in red. Hit enter with an empty input when done. An example SCP Click and Radius is in Figure 6.



Figure 6: Example SCP click and radius (red) in E_scpSelection for uasDemoData

Then the user will enter a threshold value in the command window deliminating bright points from dark points, it is the center of the bright (dark) points that will be considered the SCP point. Ultimately, any points above this threshold in the search radius will be considered good and below not; then the center of area of the good points will be considered the SCP. This will be updated in anew figure to show the estimated SCP center; an example of which is in Figure 7. If the threshold is very high, it is probably not a good SCP point and may error if any slight changes in pixel value (>245). Hit enter with an empty value when complete. When done with selection go in to clicking mode and click below the X axis.

The user should pick at least 4 points. Note, if GCPs are selected, SCP and GCP point numbers do not have to match. For uasDemoData, suggested thresholds, numbers, and radii are suggested in the image frame.

Note: SCP 1 for uasDemoData is small and slightly difficult to see. However it is important to get a spread in SCPs across the image just like GCPs. This is why it is selected.

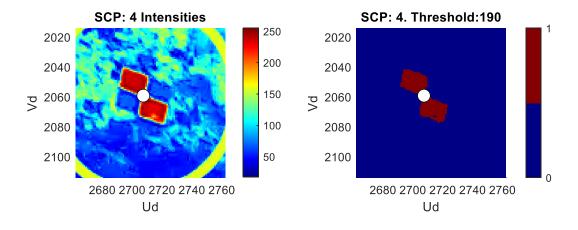


Figure 7: Panel displaying pixel intensity values within search radius of SCP 1 and resultant center of area calculations (white dot) when applying binary threshold in E_scpSelection for uasDemoData

This function is to be run fifth in the progression to identify stabilization control points (SCP) for collections of imagery where the camera may have moved. For UAS it should be run on the first image used for camera IOEO calibration. For fixed camera stations, trying to correct for movement, it should be run on the last known image where the IOEO is known to be valid.

Input:

Input is entered by user into the script in Sections 1 and 2. Users will then enter information by clicking SCPs and entering an identifying number, radii, and threshold in the command window.

Section 1: Saving Information

Variable	Description	
oname	String for the basename for the SCP mat files to be saved under.	
odir	Filepath where the SCP mat file will be saved.	

Section 2: SCP Image

Variable	Description
imagePath	Filepath of the saved image for clicking. For UAS processing this should be the first image of the collection used in C-SingelExtrinsicSolution and B_gcpSelection (imagePath). For fixed station, it should be any frame where SCPs are visible and the previously known solution is viable.
brightFlag	String of either 'bright' or 'dark' to identify whether bright or dark SCPs will be identified. White objects on dark backgrounds should be 'bright' where dark objects on light backgrounds should be 'dark'.

Output:

A .mat file saved as *oname_scpUVdInitial.mat* in *odir*. Will contain following variables; variables left blank are defined in the user input.

Variable	Description	Description	
scp		A structure with each entry corresponding to a SCP. Note, the index entry in the structure may not correspond with the SCP identifying	
	Fields of str	ucture are:	
	UVd	[1 x 2] Vector of distorted Image coordinates of SCP	
	num	Identifying SCP number entered by user.	
	R	Search Radius in Pixels (expected movement)	
	Т	Threshold pixel intensity value for determining Center of	
		Area for Bright Pixels (value 0-254).	
	imagePath		
	brightFlag		

Required Core Sub-Functions:

thresholdCenter

Description:

This function generates extrinsics for a series of subsequent images for where the extrinsic solution of the first frame is known, calculated in C_singleExtrinsicSoltuion. Given a list of images, Stabilization Control Points UVd coordinates (from E_scpSelection), and SCP elevations, this function will determine the extrinsics of each subsequent frames.

Similarly to C_singleExtrinsicSolution, the script uses a nonlinear solver to minimize the error between the reprojected XYZ values reprojected in UV space and those indentified in the imagery. However, the images are not 'clicked' but rather found by the threshold center of area calculations. The XYZ SCP files are not provided by a text file, but rather determined from georectifying the UV coordinates using the previous frames extrinsics (the user does specify a SCP elevation estimate in the script). The script runs autonomously with no user-interaction, calculated SCP center of areas are plotted for each new frame in a figure; the function outputs a mat file with IOEO solutions for each frame as well as figure plotting the camera extrinsics as a function of time.

This function is to be run sixth in the progression to solve extrinsics for a moving camera.

Input:

Input is entered by user into the script in Sections 1-3.

Section 1: Saving Information

Variable	Description
oname	Output string for the basename for the extrinsic solution mat file to
	be saved under.
odir	Output filepath where the SCP mat file will be saved.

Section 2: Initial Frame Information

Variable	Description			
imagePath	Filename of the first image where IOEO is known. It should be			
	the same i	the same image you did the initial solution for in C singleExtrinsicsSolution		
	(imagepath	n). It should be in the same directory as your other collection images		
	imagesDirectory.			
ioeopath	Filepath of the saved CIRN IOEO calibration results produced by			
	C_singleEx	trinsicSolution. If not produced by C, minimum variables are listed		
	below.	below.		
	intrinsics	A [1x11] vector describing the focal lengths and distortion of the		
		camera/lens combination. Distortion coefficients are defined by		
	[3] and defined in Section 6.			
	extrinsics	A [1x6] vector describing the camera pose and position in WORLD		
		coordinates (whatever coordinate system GCPs were entered in).		
		Extrinsic values are defined in Section 6 along with coordinate		
		systems.		

scppath	Filepath of the Distorted SCP UV Coordinates produced by E_scpSelection. SCP point should correspond to those in imagePath. If not produced by E, minimum variables/fields are listed below.			
	scp	A structure with each entry corresponding to a SCP. Note, the index entry in the structure may not correspond with the SCP identifying number.		
			of structure are:	
		UVd	[1 x 2] Vector of distorted Image coordinates of SCP in	
			imagepath	
		num	Identifying SCP number entered by user.	
		R	Search Radius in Pixels (expected movement)	
		Т	Threshold pixel intensity value for determining Center of Area	
			for Bright Pixels (value 0-254).	
scpz	Elevations, or z values for each SCP entry in the scp structure saved in scppath. The first column is the corresponding scp.num and the second value is the			
	estimated elevation for the point. Z value should be in same world coordinate system and units as IOEO (worldCoord).			
scpZcoord	Coordinate system of the elevations entered in for scp. Elevations should be in same world coordinate system and units as IOEO.			

Section 3: Collection Imagery

Variable	Description
imageDirectory	The directory where the collection images are stored. Note, the names of the images should be so that MATLAB lists them in order in the current directory window. To do this, images must be numbered with the same number of digits. Example: numbering should be 00001,00002,00003 etc. NOT 1,2,3. Also acceptible is any date number either in matlab datenum or epochtime as output in A0_move2frames. Also, only have the images in the folder. Nothing else.
dts	Enter the dt in seconds of the collect. Should be 1./frameRate frin A0_movie2frames. If not known, leave as {}. Under t, images will just be numbered 1,2,3,4.
to	The time of the initial image in MATLAB Datenum format; if unknown % leave empty {}, to will be set to 0.

Output:

A .mat file saved as *oname_IOEOVariable.mat* in *odir*. Will contain following variables; variables left blank are defined in the user input.

Variable	Description	
variableCamSolutionMeta	Structure with metadata about extrinsic solutions. Fields are listed below. Those left blank are the same entered in the input sections.	
	sccpath	
	scp	

	scpZcoord	
	ioeopath	
	imageDirectory	
	dts	
	to	
intrinsics	A [1x11] vector describing the focal lengths and distortion of the	
	camera/lens combination. Distortion coefficients are defined by	
	[3] and defined in Section 6.	
extrinsics	A [Tx6] vector describing the camera pose and position in WORLD	
	coordinates (whatever coordinate system GCPs were entered in).	
	T is the number of frames extrinsics are solved for. Extrinsic values	
	are defined in Section 6 along with coordinate systems.	
imageNames	A Tx1 string where T is the number of frames extrinsics are solved	
	for. Each string is the filename of the image solved for.	
t	A Tx1 vector of timing of each frame in datenum format. If t is not	
	specified, vector is just numbers 1,2,3, etc.	

A figure plotting the tracked (yellow) and reprojected (red) SCP UVd coordinates using the new extrinsic solution. The figure will update for each image/frame solved for (Figure 8).



Figure 8: Figure in F_variableExtrinsicSolutions plotting tracked (yellow) and reprojected (red) SCPs for uasDemoData.

A figure plotting the extrinsics (relative to the first frame) as a function of time or index once the script is complete (Figure 9).

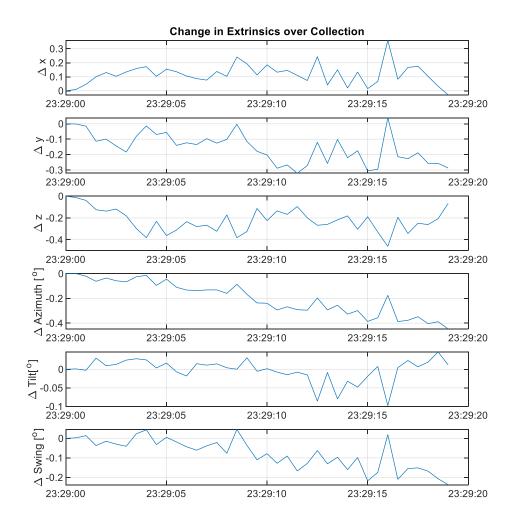


Figure 9: Figure produced by F_variableExtrinsicSolution for uasDemoData highlighting solved for variable extrinsics (relative to the first frame).

Required Core Sub-Functions:

thresholdCenter extrinsicsSolver xyz2DistUV distUV2XYZ intrinsicsExtrinsics2P undistortUV xyz2DistUV distortUV

Description:

This function generates statistical image products for a given set of images and corresponding extrinsics/intrinsics. The statistical image products are the timex (average intensity), brightest (maximum intensity), variance (variance in intensity), and darkest (minimum intensity). If specified, rectified imagery for each image/frame can be produced and saved as an png file. Rectified images and image products can be produced in world or local coordinates if specified in the grid provided by D_gridGenExampleRect. This can function can be used for a collection with variable (UAS) and fixed intrinsics in addition to single/multi camera capability.

Note: Function can either have a temporally constant elevation grid with spatially varying Z or a spatially constant elevation grid with a temporally varying elevation value. The code needs to be modified to have both. If zVariable is non-empty, this will take precedent and make a spatially constant but temporally varying Z grid to rectify to

This function is to be run sixth or fifth in the progression for fixed and UAS collections.

The user input of the code is prescribed for UASDemoData. However, one can uncomment lines in Section 5 for the FixedMultiCamDemoData.

Input:

Input is entered by user into the script in Sections 1-5.

Section 1: Saving Information

Variable	Description	
oname	Output string for the basename for the georectified images to be	
	saved as.	
odir	Output filepath where the SCP mat file will be saved.	
outputFlag	Flag if you would like individual frames rectified and saved in the odir.	
	1= yes, output individual frames. 0= no, only output image products.	

Section 2: Collection Information

Variable	Description
imageDirectory	The directory where the collection images are stored. Note, for UAS or collects with variable extrinsics solved in F, The images should be ordered in the same order listed in imageNames F_variableExtrinsicSolutions. For variable IOEO, the code will attempt to rectify all images in in the folder, if the number of images do not match it will crash. If the order does not match, they will be rectified incorrectly. For fixed IOEO, the code will rectify all images in the folder regardless with the same IOEO.
	Note for multi-camera collections, each camera will require a separate imagedirectory with the order of the images the same across all folders.

	It is up to the user to name files correctly so that images at the same index						
	are simultaneous.						
ioeopath	Filepath of the saved CIRN IOEO calibration results produced						
	C_singleExtrins	icSolution or F_variableExtrinsicSolutions . If not					
	produced by C or F, minimum variables are listed below.						
	intrinsics	A [1x11] vector describing the focal lengths and					
		distortion of the camera/lens combination. Distortion					
		coefficients are defined by [3] and defined in Section 6.					
	extrinsics	A [Tx6] vector describing the camera pose and position					
		in WORLD coordinates (whatever coordinate system					
		GCPs were entered in). T is the number of frames					
		extrinsics are solved for and number of images in					
		imageDirectory. Extrinsic values are defined in Section 6					
		along with coordinate systems. The extrinsics should					
		correspond to the images as ordered by matlab as was					
		solved for in F.					
	t A Tx1 vector of timing of each frame in datenum forma						
		produced by F_variableExtrinsicsSolutions. This is not					
		necessarily required. User can specify it manually in					
		Section 4. If t is not specified or loaded in the ioeopath					
		mat file, vector is just numbers 1,2,3, etc. T should be					
		the number of images in imageDirectory					

Section 3: Grid Information

gridpath	Filepath of the saved rectification grid created in D_gridGenExampleRect. Minimum required variables are listed below. Local values only required if localFlag==1				
	X Y Z	NxM grids in World coordinates where N is the number of rows (direction of varying Y) and M is the number of columns (direction of varying X). Grid needs to be in meshgrid format and be in same World coordinates as extrinsics in ioeopath			
	localOrigin Origin of new local coordinate system coordinates. should be in the same coordinate GCPs (worldCoord).				
	localAngle	relative angle between the new (local) X axis and old (World) X axis, positive counter-clockwise from the old (world) X. Units are degrees.			
	localX	NxM grids in rotated Local coordinates (according to			
	localY	localAngle and localOrigin) where N is the number of rows			
	localZ	(direction of varying Y) and M is the number of columns (direction of varying X).			
	worldCoord	String of description of the World coordinate system for IOEO specified ioeopath.			
localFlag	Enter if the	user prefers local (localFlag==1) or world (localFlag==0)			
	coordinates. Not if localFlag==1, localAngle, localOrigin, and localX,Y,Z in				
	the ioeopath must all be non-empty.				

Section 4: Manual Entry of Time and Elevation

Variable	Description
t	A Tx1 vector of timing of each frame in datenum format. If t is not specified or loaded in the ioeopath mat file (as if produced from F), vector is just numbers 1,2,3, etc. T should be the number of images in imageDirectory.
zVariable	A Tx1 vector of elevations in world coordinates and units. f a Fixed station, most likely images will span times where Z is no longer constant. We have to account for this in our Z grid. To do this, enter a z vector below that is the same length as t. For each frame, the entire z grid will be assigned to this value. If UAS or not desired, leave empty. It is assumed elevation is constant during a short collect.

Section 5: Multi-Camera Demo

Uncomment this section for the multi-camera demo. ImageDirectory and ioeopath should be entered as cells, with each entry representing a different camera. It is up to the user that entries between the two variables correspond. Extrinsics between all cameras should be in the same World Coordinate System. Note that no new grid is specified, the cameras and images are all rectified to the same grid and time varying elevation. Also it is important to note for imageDirectory, each camera should have its own directory for images. The number of images in each directory should be the same (T) as well as ordered by MATLAB so images in the same order are simultaneous across cameras (i.e. the third image in c1 is taken at t=1s, the third image in c2 is taken at t=1s, etc).

Output:

A .mat file saved as *oname_gridmeta.mat* in *odir*. Will contain following variables; variables left blank are defined in the user input.

Variable	Description	Description			
rectMeta		Structure with metadata about output rectifications. Fields are listed below. Those left blank are the same entered in the input sections.			
	ioeopath				
	imageDirectory				
	gridPath				
	imageNames	Filenames of all images rectified.			
	t				
	zVariable				
	worldCoord				
	localFlag	All only if localFlag==1			
	localAngle				
	localOrigin				
X	Flipped grids corres	Flipped grids corresponding to rectified images. Before saved as an			
Υ	image, the image is	image, the image is flipped using flipUD so the image looks correct.			
Z	(This is due to the in	(This is due to the image coordinate system, see section 6. Thus, so			

XYZ corresponds to the same pixels, we filp the grids as well for correct plotting. Values are local or world depending on localFlag.

Three pngs saved as oname_timex.png, oname_dark.png and oname_bright.png in odir. In addition, these are displayed in a Figures (Figure 10).

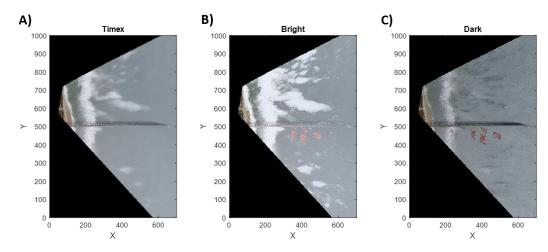


Figure 10: Example ensemble output of G1_imageProducts for uasDemoData in a local rotated coordinate system.

If outputFlag=1, T geo-rectified images in odir with the filename oname_(time or index).png. If time, time is referenced in epoch time in milliseconds. World or local coordinates is dependent on input localFlag value.

Required Core Sub-Functions:

imageRectification cameraSeamBlend xyz2DistUV distortUV intrinsicsExtrinsics2P localTransformExtrinsics localTransformPoints plotRectification

Description:

This function generates pixel instruments for a given set of images and corresponding extrinsics/intrinsics. It works very similar to G1_imageProducts however instead of rectifying a uniform grid for rectified images, we rectify a set of points for bathymetric inversion, surface current, or run-up calculations. Rectifications can be made in both world and a local rotated coordinate system. However, for ease and accuracy, if planned to use in bathymetric inversion, surface current, or run-up applications, it should occur in local coordinates.

Note: Function can either have a temporally constant elevation grid with spatially varying Z or a spatially constant elevation grid with a temporally varying elevation value. The code needs to be modified to have both. If zFixedCam is non-empty, this will take precident and make a spatially constant but temporally varying Z grid to rectifiy to.

This function is to be run sixth or fifth in the progression for fixed and UAS collections.

The user input of the code is prescribed for UASDemoData. However, one can uncomment lines in Section 5 for the FixedMultiCamDemoData.

Input:

Input is entered by user into the script in Sections 1-5.

Section 1: Saving Information

Variable	Description
oname	Output string for the basename for the georectified images to be
	saved as.
odir	Output filepath where the SCP mat file will be saved.
outputFlag	Flag if you would like individual frames rectified and saved in the <i>odir</i> .
	1= yes, output individual frames. 0= no, only output image products.

Section 2: Collection Information

Variable	Description
imageDirectory	The directory where the collection images are stored. Note, for UAS or collects with variable extrinsics solved in F, The images should be ordered in the same order listed in imageNames F_variableExtrinsicSolutions. For variable IOEO, the code will attempt to rectify all images in in the folder, if the number of images do not match it will crash. If the order does not match, they will be rectified incorrectly. For fixed IOEO, the code will rectify all images in the folder regardless with the same IOEO.
	Note for multi-camera collections, each camera will require a separate imagedirectory with the order of the images the same across all folders. It is up to the user to name files correctly so that images at the same index are simultaneous.

		1 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1				
ioeopath	Filepath of the saved CIRN IOEO calibration results produced by					
	C_singleExtrins	icSolution or F_variableExtrinsicSolutions . If not				
	produced by C or F, minimum variables are listed below.					
	intrinsics	A [1x11] vector describing the focal lengths and				
		distortion of the camera/lens combination. Distortion				
		coefficients are defined by [3] and defined in Section 6.				
	extrinsics	A [Tx6] vector describing the camera pose and position				
		in WORLD coordinates (whatever coordinate system				
		GCPs were entered in). T is the number of frames				
	extrinsics are solved for and number of images in					
	imageDirectory. Extrinsic values are defined in Section 6					
	along with coordinate systems. The extrinsics should					
	correspond to the images as ordered by matlab as was					
		solved for in F.				
	t	A Tx1 vector of timing of each frame in datenum format				
		produced by F_variableExtrinsicsSolutions. This is not				
	necessarily required. User can specify it manually Section 4. If t is not specified or loaded in the ioeopa mat file, vector is just numbers 1,2,3, etc. T should I the number of images in imageDirectory					

Section 3: Manual Entry of Time and Elevation

Variable	Description
t	A Tx1 vector of timing of each frame in datenum format. If t is not specified or loaded in the ioeopath mat file (as if produced from F), vector is just numbers 1,2,3, etc. T should be the number of images in imageDirectory.
zFixedCam	A Tx1 vector of elevations in world coordinates and units. f a Fixed station, most likely images will span times where Z is no longer constant. We have to account for this in our Z grid. To do this, enter a z vector below that is the same length as t. For each frame, the entire z grid will be assigned to this value. If UAS or not desired, leave empty. It is assumed elevation is constant during a short collect.

Section 4: Instrument Information

Variable	Description	
gridpath	Filepath of the saved rectification grid created in D_gridGenExampleRect. Minimum required variables are listed below. Local values only required if localFlag==1. Grid world coordinates need to be same coordinates as those in the extrinsics in ieopath. Note, resolution of the grid is irrelevant for instruments you desire. THe grid is used for defining alocal coordinate system, and pulling z elevation values. THus, if you have a spatially variable Z grid, you may want grid dx,dy resolutions to be similar to your instruments.	
	X NxM grids in World coordinates where N is the number of	
	Y rows (direction of varying Y) and M is the number of	

	T _	
	Z	columns (direction of varying X). Grid needs to be in
		meshgrid format and be in same World coordinates as
		extrinsics in ioeopath
	localOrigin	Origin of new local coordinate system in world
		coordinates. should be in the same coordinate system of
		GCPs (worldCoord).
	localAngle	relative angle between the new (local) X axis and old
		(World) X axis, positive counter-clockwise from the old
		(world) X. Units are degrees.
	localX	NxM grids in rotated Local coordinates (according to
	localY	localAngle and localOrigin) where N is the number of rows
	localZ	(direction of varying Y) and M is the number of columns
	IOCAIZ	(direction of varying 1) and W is the number of columns (direction of varying X).
	worldCoord	
	worldcoord	String of description of the World coordinate system for IOEO specified ioeopath.
pixInst	Stucture who	ere each entry is a type of pixel instruments. Values with
PIXITISC		stems and units should match those specified in Section 2
	1	•
		calFlag==1, the specified parameters should be in local
		Field Entries are entered below depending on what is
		he field 'type.'
	type	Descriptor of instrument type. Can either be
		'grid','xtransect', or 'ytransect.' For each type, input is
		defined below
		or bathymetric inversion algorithms and reduced resolution
	geo-rectified	images
	type	String of 'Grid'
	dx	Single Value of uniform grid resolution in world/local units
	dy	
	xlim	[1 x 2] vector of minimum grid extents in world/local units
	ylim	,
	Z	Elevation of instrument. Leave empty if you would like it
		interpolated from input Z grid or zFixedCam. If entered
		here it is assumed constant across domain and in time.
	vTransect- Go	ood for alongshore current estimations or variations in time.
		String of 'yTransect'
	type	
	×	Single value X coordinate of transect, for points along
	. dia-	transect this value is constant.
	ylim	[1 x 2] vector of alongshore transect extents in world/local
		units
	dy	Single Value of uniform transect resolution in world/local
		units
	Z	Elevation of instrument. Leave empty if you would like it
		interpolated from input Z grid or zFixedCam. If entered
		here it is assumed constant across transect and in time.
		ood for observing run-up and other cross shore variations in
	time.	
	type	String of 'xTransect'
	У	Single value Y coordinate of transect, for points along
		transect this value is constant.
	xlim	[1 x 2] vector of crossshore transect extents in world/local
		units

dz	Single Value of uniform transect resolution in world/local units
Z	Elevation of instrument. Leave empty if you would like it
	interpolated from input Z grid or zFixedCam. If entered
	here it is assumed constant across transect and in time.

Section 5: Multi-Camera Demo

Uncomment this section for the multi-camera demo. Impath and ioeopath should be entered as cells, with each entry representing a different camera. It is up to the user that entries between the two variables correspond. Extrinsics between all cameras should be in the same World Coordinate System. Note that no new grid or instrument file is specified, the cameras and images are all rectified to the same grid, instrument points, and time varying elevation. Also it is important to note for ImageDirectory, each camera should have its own directory for images. The number of images in each directory should be the same (T) as well as ordered by MATLAB so images in the same order are simultaneous across cameras (i.e. the third image in c1 is taken at t=1s, the third image in c2 is taken at t=1s, etc).


Output:

A .mat file saved as *oname_pixInst.mat* in *odir*. Will contain following variables; variables left blank are defined in the user input.

Variable	Description	Description				
rectMeta	coordinate sys	Structure with metadata about the grid data, images, and coordinate systems the pixInstruments were derived from. Fields are listed below.				
	ioeopath					
	imageDirector	У				
	gridPath					
	imageNames		Filename	s of all images red	ctified.	
	t					
	worldCoord					
	localFlag		All only if localFlag==1			
	localAngle	localAngle				
	localOrigin					
t						
pixInst	'type' will have indicated in ea is number of p by limits and	Stucture where each entry is a type of pixel instruments. Each 'type' will have the same fields but different vector/matrix sizes a indicated in each column. N is number of points in Y Direction, N is number of points in X direction (Number of points as specified by limits and resolution). Spatial values will have coordinate				
			cineu in g	ridPath and local	-	
		field grid		id yTransect xTransect String of instrument description		
	type	'grid'	String C		'xTransect'	
	dx	'yTransect' X resolution	xiransect			
	ux	[1x1]		[]	[1]	
		[1x1]				

	dy	Y resolution		
		[1x1]	[1x1]	[]
	xlim	X limits		
		[1x2]	[]	[1x2]
	ylim	Y limits		
		[1x2]	[1x2]	[]
	Z	Input Elevation of Instrument		
	У	Input Y coordinate of Instrument		
		[]	[1x1]	[]
	Х	Input X coordinate of Instrument		
		[]	[]	[1x1]
	X	Instrument X Coordinates		
		[NxM]	[Nx1]	[Mx1]
	Υ	Instrument X Coordinates		
		[NxM]	[Nx1]	[Mx1]
	Z	Instrument Z Coordinates		
		[NxM]	[Nx1]	[Mx1]
	Irgb	Uint8 of RGB pixel intensity values for each		
		in instrument for each frame (T dimension)		
		[NxMx3xT]	[N xTx3]	[MxTx3]
	Igray	Uint8 of grayscale pixel intensity values for each point in instrument for each frame (T dimension)		
		[NxMxT]	[NxT]	[MxT]

A figure for each camera with pixel instruments reprojected onto the first oblique image used (Figure 11).

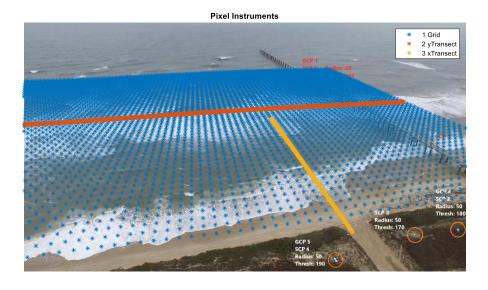

 $\it Figure~11: Example~figure~output~for~G2_pixel Instruments~with~instrument~locations~projected~onto~the~first~oblique~image~for~uasDemoData$

Figures plotting each pixel instrument Irgb value. Note, for grid instruments only the first snapshot in time is plotted (Figure 12).

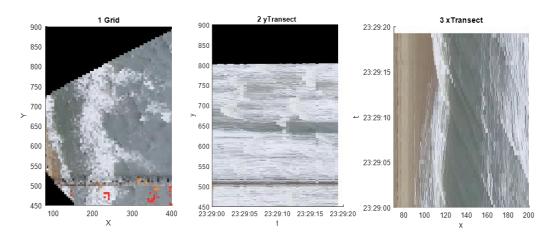


Figure 12: Example Figure output for G2_pixelInstruments for (left to right): Grid, yTransect, and xTransect for uasDemoData

Required Core Sub-Functions:

imageRectification cameraSeamBlend xyz2DistUV distortUV intrinsicsExtrinsics2P localTransformExtrinsics localTransformPoints plotRectification stackPlotter pixInstPrepXY

4. Sub-Function Descriptions

localTransformPoints

Description:

This function tranforms between Local Coordinates and Geographical Coordinates. Local refers to the rotated coordinate system where X is positive offshore and y is oriented alongshore. The function can go from Local to World and in reverse. Note: Regardless of transformation direction, local Angle and localOrigin should stay the same. Input can be vectors or matrices. Note, for rotation to equidistant grids, localTransformEquiGrid should be used. Note, this only performs horizontal rotations/ transformations. More informations on coordinate systems is in Section 5.

Input:

Variable	Size	Description
localAngle	[1x1]	The localAngle should be the relative angle between the new
		(local) X axis and old (Geo) X axis, positive counter- clockwise from
		the old (Geo) X. Units are degrees.
localOrigin	[1x2]	Location of Local (0,0) in Geo Coordinates. Typically first entry is E
		and second is N coordinate.
Xin	Variable	Local (X) or Geo (E) coord depending on transformation direction.
		Units should be same as localOrigin.
Yin	Variable	Local (Y) or Geo (N) coord depending on transformation direction.
		Units should be same as localOrigin.
directionFlag	[1x1]	directionFlag = 1 or zero to indicate whether you are going from
		Geo ->Local (1) OR
		Local> Geo (0)

Output:

Variable	Size	Description
Xout	Variable	Local (X) or Geo (E) coord depending on transformation direction
Yout	Variable	Local (Y) or Geo (N) coord depending on transformation direction

Required Core Sub-Functions:

None.

localTransformExtrinsics

Description:

This function tranforms between Local Coordinates and Geo Coordinates for the extrinsics vector. Local refers to the rotated coordinate system where X is positive offshore and y is oriented alongshore. The function can go from Local to Geo and in reverse. Note: Regardless of transformation direction, local Angle and localOrigin should stay the same. Can handle multiple extrinsics. Note, this only performs horizontal rotations/transformations. More information on Coordinate Systems is in Section 6.

Input:

Variable	Size	Description
localAngle	[1x1]	The localAngle should be the relative angle between the new
		(local) X axis and old (Geo) X axis, positive counter-clockwise from
		the old (World) X. Units are degrees.
localOrigin	[1x2]	Location of Local (0,0) in Geo Coordinates. Typically first entry is E
		and second is N coordinate.
extrinsicsIn	[Tx6]	Local (XY) or Geo (EN) coord depending on transformation direction. Should be Tx6 Matrix, T number of positions. Order should be [X Y Z Azimuth, Tilt, Roll] where A,T,R are in radians. Note units of localOrigin and XYZ should be the same.
directionFlag	[1x1]	directionFlag = 1 or zero to indicate whether you are going from Geo>Local (1) OR Local> Geo (0)

Output:

Variable	Size	Description
extrinsicsOut	[Tx6]	Local (XY) or world (EN) coord depending on transformation
		direction. Should be Nx6 Matrix, T number of positions. Order
		should be [X Y Z Azimuth, Tilt, Roll] where A,T,R are in radians.

Required Core Sub-Functions:

localTransformPoints

This function tranforms between Local World Coordinates and Geo Coordinates for equidistant grids. However, we cannot just rotate our local grid. The resolution would no longer be constant. So we find the input limits, rotate them in to output coordinates, and then make an equidistant grid. Local refers to the rotated coordinate system where X is positive offshore and y is oriented alongshore. The function can go from Local to Geo and in reverse. Note, this only performs horizontal rotations/transformations. Function assumes transformed grid will have same square resolution as input grid. More information on Coordinate Systems is in Section 5.

Input:

Variable	Size	Description
localAngle	[1x1]	The localAngle should be the relative angle between the new (local) X axis and old (World) X axis, positive counter- clockwise from the old (Geo) X. Units are degrees.
localOrigin	[1x2]	Location of Local (0,0) in Geo Coordinates. Typically first entry is E and second is N coordinate.
Xin	[NxM]	Local (X) or Geo (E) Grid depending on transformation direction. Should be equidistant in both directions and a valid meshgrid. N is number of points in Y Direction, M is number of points in X direction
Yin	[NxM}	Local (Y) or Geo (N) Grid depending on transformation direction. Should be equidistant in both directions and a valid meshgrid. N is number of points in Y Direction, M is number of points in X direction
directionFlag	[1x1]	directionFlag = 1 or zero to indicate whether you are going from World>Local (1) OR Local>World (0)

Output:

Variable	Size	Description
Xin	Variable,	Local (X) or Geo (E) Grid depending on transformation direction.
	similar	Should be equidistant in both directions and a valid meshgrid.
	to [NxM]	N is number of points in Y Direction, M is number of points in X
		direction
Yin	Variable,	Local (Y) or Geo (N) Grid depending on transformation direction.
	similar	Should be equidistant in both directions and a valid meshgrid. N
	to [NxM]	is number of points in Y Direction, M is number of points in X
		direction

Required Core Sub-Functions:

localTransformPoints

This function computes the distorted UV coordinates (UVd) that correspond to a set of world xyz points for a given camera EO and IO specified by extrinsics and intrinsics respectively. Function also produces a flag variable to indicate if the UVd point is valid. See Section 6 for intrinsics and coordinate system definitions.

Input:

Variable	Size	Description
intrinsics	[1x11]	Intrinsics Vector Formatted as in A_formatIntrinsics.
extrinsics	[1x6]	1x6 Vector representing [xyz azimuth tilt swing] of the camera in world coordinates. Position values should be in the same units as xyz points to be converted and azimuth, tilt, and swing should be in radians.
хух	[Px3]	Lx3 list of world coordinates of P points to be transformed to UVd coordinates. Columns represent X,Y, and Z coordinates.

Output:

Variable	Size	Description
UVd	[2*P x1]	Px1 list of distorted UVd coordinates for specified xyz world
		coordinates with 1:L being Ud and (P+1):2L being Vd coordinates. It is formatted as a 2Px1 vector so it can be used in an nlinfit solver in extrinsicsSolver.
flag	Px1	Px1 vector marking if the UVd coordinate is valid(1) or not(0)

Required Core Sub-Functions:

intrinsicsExtrinsics2P distortUV

This function undistorts distorted UVd coordinates using distortion models from from the Caltech lens distortion manuals. This function is solving distortUV backwards essentially. However, if one looks at distortUV, it becomes very difficult to untangle all of the coefficients to solve for undistorted camera coordinates x and y. In fact, there is no analytical inverse distortion equation. So we solve for it iteratively. Aggregate Distortion coeffcients fr, dx, and dy should be solved for with undistorted camera coordinates x and y. However, we will solve for them using distorted xd and yd, and then use fr,dx, and dy to to solve for x and y. Then, the new x and y will be used to calculate fr, dx, and dy until the difference between subsequent fr,dx,and dy solutions are less than .001%. Then the final dx,dy, and fr will be used to solve for undistorted U,V. See Section 6 for intrinsics and coordinate system definitions. Notes on distortion model can be found in Section 5; function cannot handle fish-eye lenses.

Input:

Variable	Size	Description
intrinsics	[1x11]	Intrinsics Vector Formatted as in A_formatIntrinsics.
Ud	[Px1]	Distorted U coordinates for P points
Vd	[Px1]	Distorted V coordinates for P points

Output:

Variable	Size	Description
U	[Px1]	UnDistorted U coordinates for P points
V	[Px1]	UnDistorted V coordinates for P points

Required Core Sub-Functions:

rectificationPlotter

Description:

This function plots a rectified image in Matlab given a corresponding X and Y meshgrid in world coordinates on the current axes. The user can plot it as an RGB image using imagesc or a grayscale image using poolor depending on the flag. Take note of how the matrices align for each, and how Matlab plots images versus matrices. When loading an image, and then using this function be sure to use the XYZ grid output by G1_imageProducts or flipud your grid. If using this to plot products directly from imageRectifier, use the same grid you input in imageRectifier.

Input:

Variable	Size	Description
Ir	NxMx3	Rectified image with rgb or grayscale values. N is number of points
	uint8 or	in Y Direction, M is number of points in X direction
	NxM	
Х	[NxM]	Meshgrid of X coordinates of NxM size
Υ	[NxM]	Meshgrid of Y coordinates of NxM size
imageFlag	[1x1]	Flag of whether to plot as an rgb image (=1) or grayscale pcolor
		(=0). Note if input as grayscale, output will be grayscale regardless
		of this value.

Output:

Variable	Size	Description
-	-	Plotted rectified frame on current axes with axes corresponding
		to world coordinates (Figure 10, one of sub-figures)

Required Core Sub-Functions:

This function creates a camera P matrix from a specified camera extrinsics and intrinsics in addition to the comprising K, R, and IC matrices. See Section 5 for more information on matrix formulation. Note, output P is normalized for homogenous coordinates.

Input:

Variable	Size	Description
intrinsics	[1x11]	Intrinsics Vector Formatted as in A_formatIntrinsics.
extrinsics	[1x6]	1x6 Vector representing [xyzazimuth tilt swing] of the camera in world coordinates. Position values should be in the same units as xyz points to be converted and azimuth, tilt, and swing should be in radians.

Output:

Variable	Size	Description
Р	[4x4]	Projection matrix to convert XYZ world coordinates to
		undistorted UV coordinates.
K	[3 x 3]	Matrix to convert XYZc (camera) Coordinates to undistorted UV
		coordinates
R	[3x3]	Rotation matrix to rotate XYZ world coordinates to Camera
		Coordinates XYZc
IC	[4 x 3]	Translation matrix to translate XYZ world coordinates to Camera
		Coordinates XYZc

Required Core Sub-Functions:

imageRectifier

Description:

This function performs image rectifications given the associated extrinsics, intrinsics, distorted image, and xyz points. The function utilizes xyz2DistUV to find corresponding UVd values to the input grid and pulls the rgb pixel intensity for each value. If the teachingMode flag is =1, the function will plot corresponding steps (xyz-->UVd transformation) as well as rectified output. If a multi-camera rectification is desired, I, intrinsics, and extrinsics can be input as cell values for each camera. The function will then call on cameraSeamBlend to merge the values.

Input:

Note k can be 1:K, where K is the number of cameras. Input order between I, Intrinsics, and Extrinsics must match.

Variable	Size	Description
I{k}	NNxMMx3	Distorted Image that pixel values will be taken from for rectification. Image should have been captured when entered intrinsics and extrinsics are valid. NN is the pixel height of the image and MM is the pixel width.
Intrinsics{k}	[1x11]	Intrinsics Vector Formatted as in A_formatIntrinsics.
Extrinsics{k}	[1x6]	1x6 Vector representing [xyzazimuth tilt swing] of the camera in world coordinates. Position values should be in the same units as xyz points to be converted and azimuth, tilt, and swing should be in radians. Extrinsics for all K cameras should be in same coordinate systems.
Х	Variable,	Vector or Gird of X,Y, and Z world coordinates to rectify. Note
Υ	NxM or	this is not a cell entry. All K cameras will be rectified to the
Z	1xP	same grid.
teachingMode	[1x1]	Flag to indicate whether intermediate steps and output will be plotted (Figure 5).

Output:

Variable	Size	Description
Ir	Variable,	Image intensities for xyz points. Dimensions depend if input
	NxMx3	entered as a grid or vector. For both, an additional dimension
	or Px1x3	with size 3 is added for r, g, and b intensities. Output will be a
		uint8 format.

Required Core Sub-Functions:

xyz2DistUV intrinsicsExtrinsics2P distortUV rectificationPlotter cameraSeamBlend

This function solves for a single camera geometry EO (extrinsics) and associated errors given: specified known values for extrinsics, initial guesses for unknown values of extrinsics, camera IO (intrinsics), world GCP coordinates (xyz), and corresponding UV coordinates of GCPs (UV). More information concerning coordinate systems is in Section 6.

Input:

Variable	Size	Description
intrinsics	[1x11]	Intrinsics Vector Formatted as in A_formatIntrinsics.
extrinsics	[1x6]	1x6 Vector representing [x y z azimuth tilt swing] of the camera in world coordinates. Position values should be in the same units as GCP xyz points to be converted and azimuth, tilt, and swing should be in radians. Include both known and initial guesses of unknown values.
хух	[Px3]	Px3 list of world coordinates of P GCP points. Columns represent x,y, and z coordinates of GCPs. Rows are each GCP.
UV	[Px2]	List of image UV coordinates of P GCP points. Columns represent GCP U and V coordinates. Rows should correspond to same GCP point as xyz rows.
extrinsicsKnownFlags	[1 x 6]	Vector of 1s and 0s marking whether values in extrinsics are known (1) or are initial guesses (0) and should be solved for.

Output:

Variable	Size	Description
extrinsics	[1x6]	1x6 Vector representing [x y z azimuth tilt swing] of the camera in world coordinates. Position values should be in the same units as GCP xyz points to be converted and azimuth, tilt, and swing should be in radians. Include both known and initial guesses of unknown values.
extrinsicsUncert	[1x6]	A [1x6] vector with the uncertainty value of each solved extrinsic value provided by nlinfit. Units are in units entered in extrinsics for position and radians for pose.

Required Core Sub-Functions:

xyz2DistUV intrinsicsExtrinsics2P distortUV

This function computes the world XYZ coordinates that correspond to a set of distorted UVd image coordinates for a given camera extrinsics and intrinsics In order for UV to be solved, one dimension of xyz must be specified and provided for each point. Coordinate system information is in Section 6.

Input:

Variable	Size	Description
intrinsics	[1x11]	Intrinsics Vector Formatted as in A_formatIntrinsics.
extrinsics	[1x6]	1x6 Vector representing [x y z azimuth tilt swing] of the camera in world coordinates. Position values should be in the same units as xyz points to be converted and azimuth, tilt, and swing should be in radians.
UVd	[Px2]	List of distorted image UVd coordinates P points. Columns represent Ud and Vd coordinates.
knownDim	[1x1]	String of either 'x','y','z' specifying which dimension is known and provided by the user.
knownValu	[Px1]	Px1 vector of known world coordinates of UVd points specified. World dimension is that of knownDim and rows should correspond to samepoints as UVd.

Output:

Variable	Size	Description
хух	[Px3]	Px3 list of world coordinates of P UVd points. Columns represent
		world x,y, and z coordinates. Rows correspond to UVd points.

Required Core Sub-Functions:

intrinsicsExtrinsics2P undistortUV

This function distorts undistorted UV coordinates using distortion models from from the Caltech lens distortion manuals. The function also suggests whether the UVd coordinate is valid (not having tangential distortion values bigger than what is at the corners and being within the image). Notes on distortion model can be found in Section 6; function cannot handle fish-eye lenses.

Input:

Variable	Size	Description
intrinsics	[1x11]	Intrinsics Vector Formatted as in A_formatIntrinsics.
U	[Px1]	UnDistorted U coordinates for P points
V	[Px1]	UnDistorted V coordinates for P points

Output:

Variable	Size	Description
Ud	[Px1]	Distorted U coordinates for P points
Vd	[Px1]	Distorted V coordinates for P points
flag	[Px1]	Vector marking if the UVd coordinate is valid(1) or not(0)

Required Core Sub-Functions:

CIRNangles2R

Description:

This function creates a Rotation matrix R that takes real world coordinates and converts them to camera coordinates (Not UV, but rather Xc,Yc, and Zc). The inputs are the pose angles as defined by CIRN, referenced and explained below. The camera axes are defined as Zc positive out of the lens, positive Yc pointing towards the top of the image plane, and positive Xc pointing from right to left if looking from behind the camera. The R is created from a ZXZ rotation of these angles in the order of azimuth, tilt, and swing. Diagrams of coordinate systems can be found in Section 5. All values should be in radians.

If angles are defined another way (omega,kappa,phi, etc) this function will have to be replaced or altered for a new R definition. Note, the R should be the same between angle definitions, it is the order of rotations and signage to achieve this R that differs.

Input:

Variable	Size	Description
azimuth	[1x1]	The horizontal direction the camera is pointing and positive CW from World Z Axis.
tilt	[1x1]	The up/down tilt of the camera. 0 is the camera looking nadir, +90 is the camera looking at the horizon right side up. 180 is looking up at the sky and so on.
swing	[1x1]	The side to side tilt of the camera. 0 degrees is a horizontal flat camera. Looking from behind the camera, CCW rotation of the camera would provide a positive swing.

Output:

Variable	Size	Description
R	[3x3]	Rotation matrix to transform World to Camera Coordinates

Required Core Sub-Functions:

cameraSeamBlend

Description:

This function takes rectified points from different cameras (but same grid or vector) and merges them together into a single rectification. To do this, the function performs a weighted average where pixels closest to the seams are not represented as strongly as those closest to the center of the camera rectification.

Input:

Variable	Size	Description
Irindv	NxMxCxK	A NxMxCxK matrix where N and M are the grid lengths for the rectified image. N is number of points in Y Direction, M is number of points in X direction. C is the number of color channels (3 for rgb, 1 for bw) and K is the number of cameras. Even if using bw images, the matrix must be four dimensions with C=1; Each k entry is a rectified set if points for a camera. Input does not have to be uint8.

Output:

Variable	Size	Description
Ir	NxMzC	A uint8 matrix of the merged rectified image. N and M are the grid lengths for therectified image. N is number of points in Y Direction, M is number of points in X direction. C is the number of color channels (3 for rgb, 1 for bw).

Required Core Sub-Functions:

This function converts the intrinsics calculated from the caltech toolbox to nomenclature congruent with the CRIN architecture. Note this only works with non-fisheye lenses and calibration models. More information on the distortion model is in Section 5.

Input:

Variable	Size	Descri	otion
caltechpath	String	filepat	h of saved calibration results from Caltech Toolbox
		(calib_	results). Minimum needed variables listed below.
		nx	Number of pixel columns
		ny	Number of pixel rows
		cc(1)	U component of principal point, defined from top left
			corner of image
		cc(2)	V component of principal point, defined from top left
			corner of image
		fc(1)	U components of focal lengths (in pixels)
		fc(2)	V components of focal lengths (in pixels)
		kc(1)	Radial Distortion Coefficient
		kc(2)	Radial Distortion Coefficient
		kc(5)	Radial Distortion Coefficient
		kc(3)	Tangential Distortion Coefficient
		kc(4)	Tangential Distortion Coefficient

Output:

Variable	Size	Description
intrinsics	[1x11]	Intrinsics Vector

Required Core Sub-Functions:

This function plots a timestack in matlab provided a pixel intensity matrix, a corresponding coordinate vector (X or Y) and a corresponding time vector t. If t is not specified {}, time will just be represented as an index, 1,2,3,4. The user can plot it as an RGB image using imagesc or a grayscale image using pcolor depending on the what I is entered. User can also specify if what type of transect it is, x or y. This only dictates whether time is represented on the vertical or horizontal axis.

Input:

Variable	Size	Description
Ir	[PxTxC]	RGB pixel intensities (C=3) or grayscale (C=1). P is number of points
		along transect. T is number of transects or points in time.
d	[1xP]	Vector of spatial coordinate that transect spans along (X or Y).
t	[1xP]	Vector of time in user desired units.
typ	string	String of 'x' or 'y' specifying if an cross-shore (x) or alongshore (y) transect. Dictates whether time is on the vertical (x) or horizontal (y) axis.

Output:

Variable	Size	Description
-	-	Plotted rectified frame on current axes with axes corresponding
		to world coordinates (Figure 12, last two sub-figures)

Required Core Sub-Functions:

This function constructs XYZ vectors and matrices for pixel instruments specfied in a pixlnst structure. The vectors and matrices are of the correct size for the function imageRectifier. The format of the input structure is described below. Note: if the z coordinate is not known, pixlnst.z can be left empty.

Input:

Variable	Description	1				
pixInst	Stucture w	Stucture where each entry is a type of pixel instruments. Field Entries are				
ı	entered be	entered below depending on what is entered for the field 'type.'				
	type	Descriptor of instrument type. Can either be				
		'grid', 'xtransect', or 'ytransect.' For each type, input is				
		defined below				
	Grid- Good	for bathymetric inversion algorithms and reduced resolution				
	geo-rectific	geo-rectified images				
	type	String of 'Grid'				
	dx	Single Value of uniform grid resolution in world/local units				
	dy					
	xlim	[1 x 2] vector of minimum grid extents in world/local units				
	ylim					
	Z	Elevation of instrument. Leave empty if not known. If				
		entered here it is assumed constant across domain and in				
		time.				
	yTransect-	yTransect- Good for alongshore current estimations or other alongshore				
	variations	variations in time.				
	type	String of 'yTransect'				
	x	Single value X coordinate of transect, for points along				
		transect this value is constant.				
	ylim	[1 x 2] vector of alongshore transect extents in world/local				
		units				
	dy	Single Value of uniform transect resolution in world/local units				
	Z	Elevation of instrument. Leave empty if not known. If				
		entered here it is assumed constant across domain and in				
		time				
	xTransect-	Good for observing run-up and other cross shore variations in				
	time.					
	type	String of 'xTransect'				
	У	Single value Y coordinate of transect, for points along				
		transect this value is constant.				
	xlim	[1 x 2] vector of crossshore transect extents in world/local units				
	dz	Single Value of uniform transect resolution in world/local				
	42	units				
		diffe				

Z	Elevation of instrument. Leave empty if not known. If
	entered here it is assumed constant across domain and in
	time

Output:

Variable	Description)						
pixInst	Stucture w	here each entry i	s a type of pixel i	nstruments. Each				
	'type' will h	'type' will have the same fields but different vector/matrix sizes as						
	indicated i	indicated in each column. N is number of points in Y Direction, M						
	is number	is number of points in X direction (Number of points as specified						
	by limits ar	nd resolution).		·				
	field	grid	yTransect	xTransect				
	type	Stri	String of instrument description					
		'grid'	'yTransect'	'xTransect'				
	dx		X resolution					
		[1x1]	[]	[1x1]				
	dy		Y resolution					
		[1x1]	[1x1]	[]				
	xlim		X limits					
		[1x2]	[]	[1x2]				
	ylim		Y limits					
		[1x2]	[1x2]	[]				
	Z	Inj	out Elevation of Ins	trument				
	У	Inpu	ut Y coordinate of Ir	nstrument				
		[]	[1x1]	[]				
	х	Inpu	ıt X coordinate of Ir	nstrument				
		[]	[]	[1x1]				
	X	1	nstrument X Coord	linates				
		[NxM]	[Nx1]	[Mx1]				
	Υ	Instrument 2	X Coordinates					
		[NxM]	[Nx1]	[Mx1]				
	Z	1	Instrument Z Coordinates					
		[NxM]	[Nx1]	[Mx1]				
	Irgb	Empty matri	ix of nans					
		[NxMx3x1]	[N x1x3]	[Mx1x3]				
	Igray	Empty matri	ix of nans					
		[NxMx1]	[Nx1]	[Mx1]				
		•						

Required Core Sub-Functions:

This function finds the center of area of pixels above a specified threshold in a region of interest (ROI) in a given image. This function is useful for finding the center of a bright area of pixels. However, function can be altered to find dark area of pixels by changing > to < in last two lines of code in Section 2. Accordingly, mentions of 'above' below should be understood as 'below' and vice versa.

Input:

Variable	Size	Description
1	[NNxMMx3]	Image where points of interest reside such as SCPs. NN is the pixel height of the image and MM is the pixel width.
Udo	[1x1]	Initial Ud center coordinate of Region of interest Value must be within size(2) of I. (<=MM)
Vdo	[1x1]	Initial Vd center coordinate of Region of interest Value must be within size(1) of I. (<=NN)
R	[1x1]	Radius for area of interest. Does not define circle, but rather ½ the length of a square. [Value should be in pixels and greater than 1.
Th	[1x1]	Threshold Lower Limit for selected bright pixel intensities. Is value that can be 0-255. If code is altered for dark pixels this is the upper limit.
brightFlag	[1x1]	String of either 'bright' or 'dark' to identify whether bright or dark SCPs will be identified. White objects on dark backgrounds should be 'bright' where dark objects on light backgrounds should be 'dark'.

Output:

Variable	Size	Description
Udn	[1x1]	Ud coordinate of New Center of Region of Interest considering only pixels above threshold
Vdn	[1x1]	Vd coordinate of New Center of Region of Interest considering
		only pixels above threshold
i	[nxm]	Subset of image I that is searched (ROI) as defied by R. n is the
		pixel height and m is the pixel length of the ROI. Values are
		binary for above (1) and below (0) threshold.
udi	[mx1]	The Ud coordinates of the subset I (Ud axes)
vdi	[1xn]	The Vd coordinates of the subset I (Vd axes)

Required Core Sub-Functions:

5. Equation and Coordinate System Definitions

Coordinate System Definitions

Note: World can be either coordinate system, local or geographical. However, in order to work, extrinsics and points in question need to be in same coordinate system. I.E. you cannot use the projective matrix on geographic points when extrinsic re defined in local and vice versa.

Nomenclature	Coordinate System
XYZ _C	Camera
хух	Camera Homogeneous
XYZ _{WL}	World Local
XYZ _{WG}	World Geographical
XYZ _W	World: Either Local or Geographical
UV _D	Image Distorted (lens calibration applied)
UV	Image Undistorted (no lens correction; assumes pinhole camera model)

Local and Geographic World Coordinates

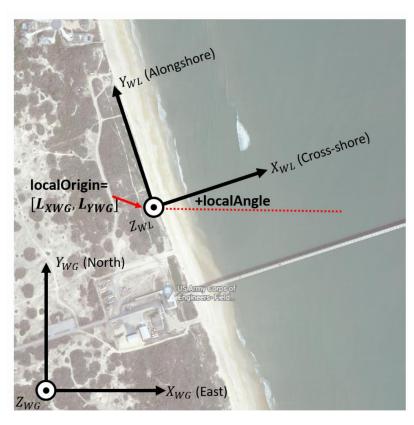


Figure 13: Relationship between World Coordinate Systems, Geographical and Local

$$extrinsics = [\ C_{XW} \ \ C_{YW} \ C_{ZW} \ \ a \ \ t \ \ s]$$

where

$egin{array}{c} C_{XW} \ C_{YW} \ C_{ZW} \end{array}$	Position of Camera Coordinate System origin (Camera Position) in World coordinates.
а	Azimuth: The horizontal direction the camera is pointing and positive CW from World Z Axis.
t	Tilt: The up/down tilt of the camera. 0 is the camera looking nadir, +90 is the camera looking at the horizon right side up. 180 is looking up at the sky and so on.
S	The side to side tilt of the camera. O degrees is a horizontal flat camera. Looking from behind the camera, CCW rotation of the camera would provide a positive swing.

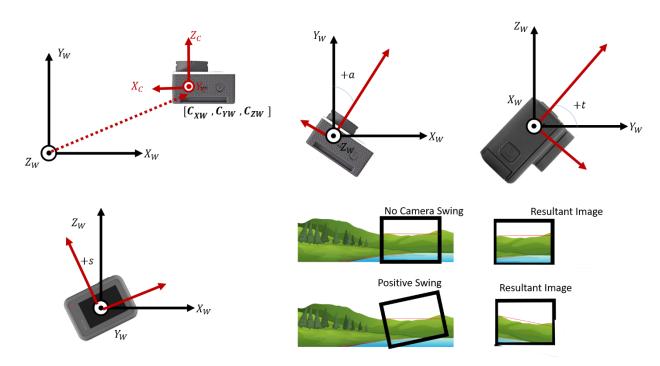


Figure 14: Definition of extrinsic vector in world coordinates.

Image and Camera Coordinates

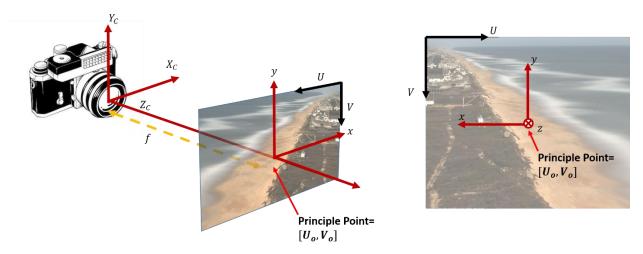


Figure 15: Relationship between Camera XYZ_C, Homogeneous Camera xyz, and undistorted Image (UV) coordinates.

Projection Matrix Construction

The projection matrix to go from XYZ_W to UV coordinates as defined above is:

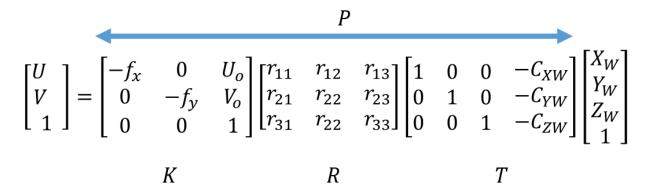


Figure 16: P Matrix Construction to go from World to undistorted Camera Coordinates.

Where

K is matrix to go from camera coordinates to UV undistorted coordinates. (It combines the matrices to go from camera to camera homogeneous and camera homogeneous to Image).

R is rotation matrix to go from world coordinates to camera coordinates. It is a ZXZ rotation with azimuth, tilt, and swing respectively and is defined in the next section.

T is the translation matrix to go from world coordinates to camera coordinates

Rotation Matrix Definition

To construct R, we need to rotate the World Axes to match the Camera Axis in a ZXZ rotation. With azimuth, tilt, and swing (A,T,S) or (a,t,s). The camera axis is defined in Figures 14-15.

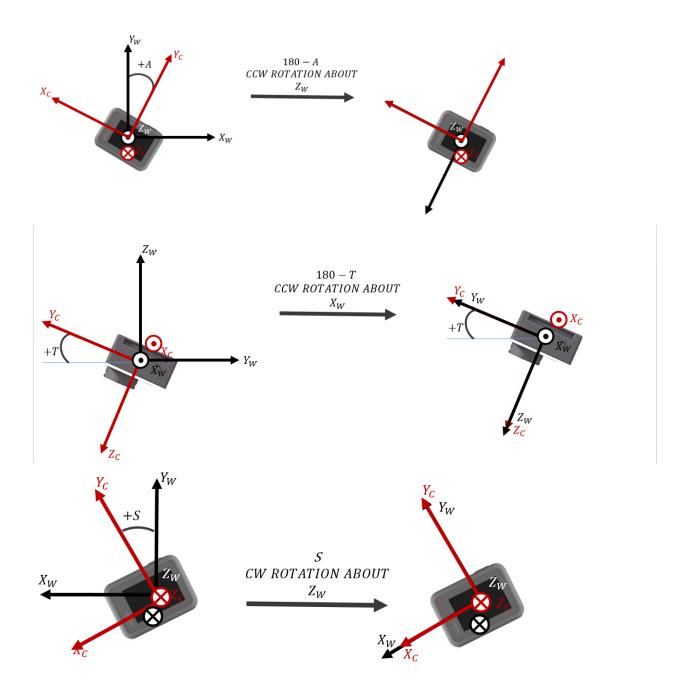


Figure 17: ZXZ Rotation formulation of World to Camera R Rotation Matrix

The top panel in Figure 17 shows the camera axes as if it were looking down (T=0) with a positive Azimuth A (Defined as positive CCW about X_C or in other words positive CW deviation of Y axes). The top panel shows the following rotation to get the World X axes to match the Camera X axes.

$$R_Z(A) = \begin{bmatrix} \cos(180-A) & \sin(180-A) & 0 \\ -\sin(180-A) & \cos(180-A) & 0 \\ 0 & 0 & 1 \end{bmatrix} = \begin{bmatrix} -\cos(A) & \sin(A) & 0 \\ -\sin(A) & -\cos(A) & 0 \\ 0 & 0 & 1 \end{bmatrix} \qquad \text{CCW Rotation}.$$

Using fact that cos(180-X)=-cos(x) and sin(180-X)=sin(x).

Looking at the middle panel in Figure 17, Positive tilt is defined as clockwise rotation about Xc or CW Deviation of Yc from the horizontal. (+90 degrees would be the camera looking out to North if A=0). The middle panel shows the rotation to get the World Y and Z Axes to match the camera Axis Y and Z axes.

$$R_X(T) = \begin{bmatrix} 1 & 0 & 0 \\ 0 & \cos(180 - \mathrm{T}) & \sin(180 - T) \\ 0 & -\sin(180 - T) & \cos(180 - T) \end{bmatrix} = \begin{bmatrix} 1 & 0 & 0 \\ 0 & -\cos(\mathrm{T}) & \sin(T) \\ 0 & -\sin(\mathrm{T}) & -\cos(T) \end{bmatrix}$$
 CCW Rotation.

In the bottom panel in Figure 17 Positive Swing is defined as clockwise rotation about Zc. If you imagine that the camera is up looking at the horizon (Tilt 90); this would be if the camera was rotated counterclockwise looking from the back of the camera.

$$R_Z(S) = \begin{bmatrix} \cos(S) & -\sin(S) & 0 \\ \sin(S) & \cos(S) & 0 \\ 0 & 0 & 1 \end{bmatrix} \qquad \text{CW Rotation}.$$

We then multiply the matrices. Remember, the order of rotation goes right to left!

$$R_{W\to C} = \begin{bmatrix} \cos(S) & -\sin(S) & 0 \\ \sin(S) & \cos(S) & 0 \\ 0 & 0 & 1 \end{bmatrix} \begin{bmatrix} 1 & 0 & 0 \\ 0 & -\cos(T) & \sin(T) \\ 0 & -\sin(T) & -\cos(T) \end{bmatrix} \begin{bmatrix} -\cos(A) & \sin(A) & 0 \\ -\sin(A) & -\cos(A) & 0 \\ 0 & 0 & 1 \end{bmatrix}$$

So this $R_{W \to C} = R$ takes world coordinates (XYZ, and transforms them to Camera Coordinates XcYc,Zc).

Intrinsics and Distortion

The intrinsic vector is defined as the following:

CIRN Intrinsics Variable	Caltech Variable	Symbol	Description
intrinsics(1)	nx		Number of pixel columns
intrinsics (2)	ny		Number of pixel rows
intrinsics (3)	cc(1)	U_o	U component of principal point, defined from top left corner of image
intrinsics (4)	cc(2)	V _o	V component of principal point, defined from top left corner of image
intrinsics (5)	fc(1)	f_x	U components of focal lengths (in pixels)
intrinsics (6)	fc(2)	f_{v}	V components of focal lengths (in pixels)
intrinsics (7)	kc(1)	d_1	Radial Distortion Coefficient
intrinsics (8)	kc(2)	d_2	Radial Distortion Coefficient
intrinsics (9)	kc(5)	d_3	Radial Distortion Coefficient
intrinsics (10)	kc(3)	t_1	Tangential Distortion Coefficient
intrinsics (11)	kc(4)	t_2	Tangential Distortion Coefficient

The equations for converting undistorted UV image coordinates to distorted coordinates is the following using symbols defined above. The model is defined in [3].

Normalize Distances in homogenous camera coordinates

$$x = (U - U_o)/f_x$$

$$y = (U - V_o)/f_y$$

Radial Distortion

$$r^{2} = x^{2} + y^{2}$$

$$f_{r} = 1 + d_{1}r^{2} + d_{2}r^{4} + d_{2}r^{6}$$

Tangential Distortion

$$x' = 2t_1xy + t_2(y^2 + 3x^2)$$

$$y' = 2t_2xy + t_1(3y^2 + x^2)$$

Apply Distortion Correction

$$x_D = x f_r + x'$$

$$y_D = yf_r + y'$$

Convert Back to Image Coordinates

$$U_D = x_D f_x + U_o$$

$$V_D = y_D f_V + V_O$$

6. References

- [1] R. A. Holman and J. Stanley, "The history and technical capabilities of Argus," *Coast. Eng.*, vol. 54, no. 6, pp. 477–491, 2007, doi: http://dx.doi.org/10.1016/j.coastaleng.2007.01.003.
- [2] K. T. Holland, R. A. Holman, T. C. Lippmann, J. Stanley, and N. Plant, "Practical use of video imagery in nearshore oceanographic field studies," *IEEE J. Ocean. Eng.*, vol. 22, no. 1, pp. 81–91, 1997, doi: 10.1109/48.557542.
- [3] J.-Y. Bouguet, "Camera calibration toolbox for Matlab (2008)," *URL http://www. vision. caltech. edu/bouguetj/calib_doc*, vol. 1080, 2008.