


Introduction to BReps

Boundary Representations (BReps) are surface or volume geometries that are mathematically defined by their boundary surfaces. Breps are widely used in CAD systems for creation of trimmed surfaces, watertight geometries and fillet operations.

Since version 3.1, CAESES also offers BReps that internally work with NURBS curves and surfaces. In this tutorial, you will create two simple cylinders that are then merged using Boolean Operations. For the closed geometry, a fillet gets finally generated at the intersection of the two bodies.



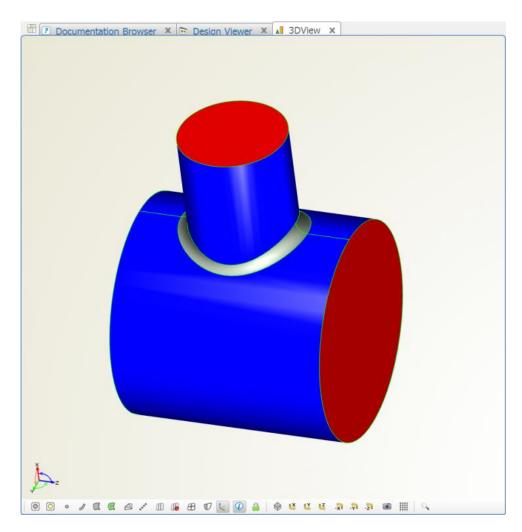




Create a Circle Face using BReps

We create the circle face of the main tube using a simple circle and the BRep operation "faces from planar curves".

- ► Save the project (CTRL + s).
- ► Create a circle via menu > CAD > curves > circle.
- ► Change the name to "main_circle".
- ► Create a BRep via menu > CAD > BReps > BRep.
- ► Change the name to "main_tube".

The operation "faces from planar curves" is set automatically if an object of the type FCurve is selected.

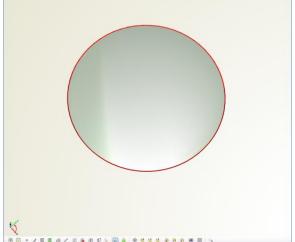

P CAD Connections Optimization

Name Quick Find (Ctrl+F)

baseline
main_tube

faces from planar curves

When you add a new operation in a BRep, it is inactive by default. After adding a new operation you can fill it with all needed inputs and set it active afterwards. To set an operation active, simply toggle the check box in front of the operation. Additionally, you can click on the "+" icon in front of the BRep object in the object tree and click on the operation. This also sets the operation active or inactive).

Туре

FBrep

FBrepFac... FCircle








Extrude Face to Plane

We will extrude the face and create a closed tube.

- Set "main_circle" to invisible by clicking on the object symbol in the *Object Tree* (we don't need the circle anymore for the time being).
- ▶ Add a new operation *extrude edges to plane*.
- ► Set *Plane Position* to "2".
- ► Set Extrude Color to "blue".
- ► Set *Close Color* to "red".
- ► Toggle *Close Extrusion*.
- ► Click on the *extrude edges to plane* symbol in the Object Tree to activate it. Alternatively, use the checkbox again (see last step of previous page).

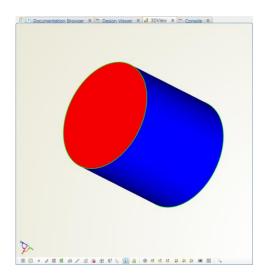

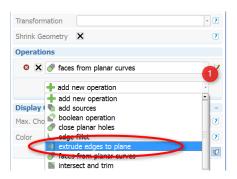

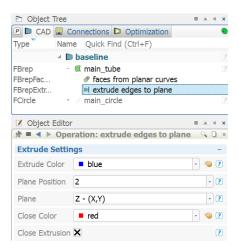

Again, you can select each operation very quickly by first clicking on the "+" in front of the BRep symbol in the object tree. This lists all operations of the Brep, and you can simply select it.







Create another Tube

In this step you will create the second tube.

- ► Select "main_tube" and "main_circle" and create a scope via *menu >CAD > scope*.
- ► Change the name of the scope to "main".
- ► Select "main" and press CTRL + C.
- ► Press CTRL + V to paste the copied scope.
- Change the name to "junction".
- ► Change the name "main_tube" in the scope "junction" to "junction_tube".
- ► Change the name "main_circle" in the scope "junction" to "junction_circle".
- ► Change the radius of "|junction|junction_circle" to "0.5"-

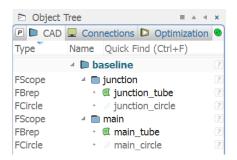

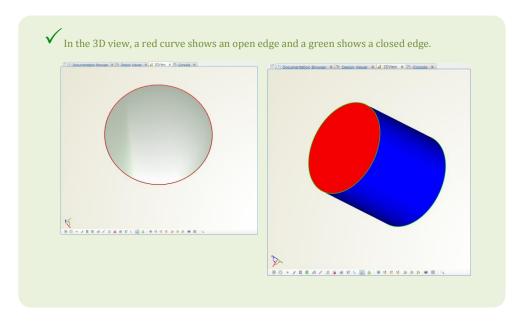






Transform the Second Tube

We will rotate and translate the second tube for which we need a transformation chain.

- ► Select the second BRep "|junction|junction_tube".
- ► Create a *transformation chain:* Click on the drop down menu from *Transformation* and select *create* > *Transformations* > *Transformation Chain.*
- ► Change the name of the new object to "chain".

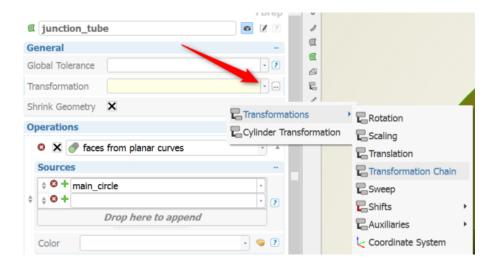






Create a Rotation

So far, nothing gets transformed. In this step, we will create the rotation for the junction tube.

- ► Create a rotation via *menu* > *CAD* > *Transformations* > *Rotation*.
- ► Change the name to "RotY".

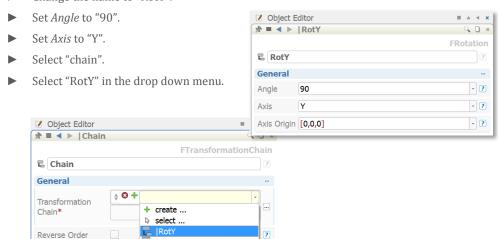






Create a Translation

The rotation is applied. Now, we will add the translation for the junction tube, in order to bring it to the right position.

- ► Create a translation via *menu > CAD > Transformations > Translation*.
- Change the name to "toPosZ".
- ► Set *Z* to "1".
- ► Select "chain".
- ► Select "toPosZ" in the drop down menu.
- ▶ Select all transformations and move into the scope "junction" (just to tidy up the project).

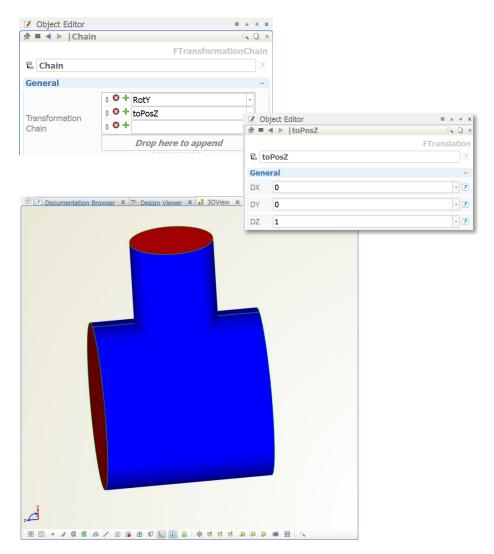





Merge the two Bodies using a Boolean Operation

Now we can merge the two volumes. For this purpose, we can use a Boolean Operation:

► Select "|main|main_tube in the object tree and create a BRep via menu > CAD > BReps > BRep.


This creates a new BRep which automatically sets the selected BRep as source.


- ► Change the name to "manifold".
- Add a new operation for the brep "manifold" by selecting *boolean operation*.
- ► Drag and Drop "|junction|junction_tube" into *Sources* of the Boolean Operation.





You can see the manifold in the 3DView.

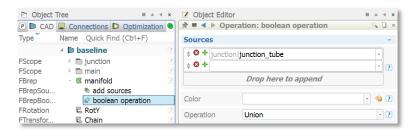

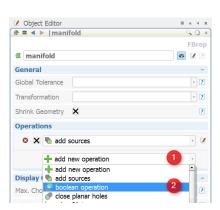





Create a Fillet

In this final step, we will create a fillet between the two tubes.

