


Electrical Examination Preparation Highlights and Workbook

Based on the



NATIONAL ELECTRICAL CODE 2014 Edition

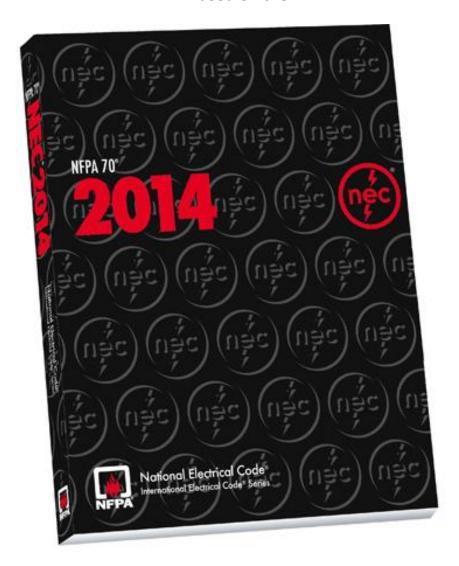



888-300-9578 support@prepathome.com Contractor & Journeyman

State Exam Prep

The Best Exam Prep Quality Software in the Nation

Copyright © 2016 Prep At Home. Reproduction, transfer, distribution or storage in any form is strictly prohibited by law. Proprietary rights are included in the information disclosed herein. Recipient by accepting this document agrees that neither this document nor the information disclosed herein nor any part thereof shall be reproduced or transferred to other documents or used for any other purposes except as specifically authorized in writing by Prep At Home LLC.

While every precaution has been taken in the preparation of this document, the author assumes no direct responsibility for the material contained herein, or errors or omissions of the text. Neither is any liability assumed from the use of the information contained herein.

1.0 Introduction on How To Get The Best Grade On Your Exam

The material in this workbook is intended to supplement the computer exam prep software programs of Prep At Home LLC. The book is structured to assist the student to study and prepare for their electrical Contractor, Master, or Journeyman examination. Please note that you will not be allowed to use this workbook while you are taking your state.

This book is dedicated to providing information that will help you best the best grade possible on the state examination. This workbook contains mathematics and basic electrical formulas which play a large role in the state examination, along with articles from the National Electrical Code® ("code") that are commonly used on the exam. There are also practice questions that pertain to these specific articles. The practice questions should be used to test your knowledge of the code, and basic electrical concepts. Once you have answered all of the questions, you should then look up the correct answers to the questions located in Appendix 1, and correct any questions you may have missed. These questions and answers should be reviewed several times to insure through understanding of the subject material. The course instructor will be able to answer any questions you may have on the material contained herein.

2.0 Preparation and Study Recommendations

Dedication is the key to success. Failing to prepare is preparing to fail, therefore, below is a list of techniques that can help you get the best grade possible with your preparation and studying for your upcoming state examination.

- **Support.** You need encouragement in your studies and support from your loved ones and employer. To properly prepare for your exam, you should study until the material on which you will be tested is thoroughly understood.
- Communication With Your Family. Good communication with your family members is very
 important. Studying every night and on weekends may cause tension. Get their support,
 cooperation, and encouragement during this preparation time. Be sure to plan some special
 time with family to help your relationships.
- Stress. Stress can really take the wind out of you. It takes practice, but get into the habit of relaxing before you begin your studies. Doing some type of exercise such as stretching or walking. Close your eyes for a couple of minutes; deliberately relax the muscle groups that are associated with tension, such as the shoulders, back, neck, and jaw. Take several slow deep breaths.
- **Attitude.** Maintaining a positive attitude is extremely important. Being positive helps give your motivation, and keeps you from getting discouraged or frustrated.
- Reducing Eye Strain. Your eyes will be under additional stress because of prolonged, near-vision reading, which can result in headaches, fatigue, etc. Your work area should be brighter than the rest of the room. Don't read under a single lamp in a dark room. Sit straight up, chest and shoulders back, and weight over the seat so both eyes are an equal distance from what you are reading.
- **Getting Organized.** You should not waste time looking around for your study materials. Keep everything you need together (i.e. in one backpack). It is very important that you study in a private area. Assuming that your home is busy, the dining room table is not a good study location.

- **Time Management.** Time management and planning is very important. On paper, write a plan for each day, and do your best to stick to that plan. Dedicate a certain time and place for studying. Your plan should include the tasks that you intend to complete in that day. Do not include tasks that you would *like* to get done, but should be scheduled for another day.
- Class Participation. In the classroom, pay attention to everything the instructor lectures. If he is taking the time to bring up a fact, that fact is important in preparing for your exam. If you do not understand a point or did not hear what was said, ask for clarification. If you still do not understand bring up the point after class to the instructor (or a possibly classmate).
- **Study Partners.** Studying with a partner can make learning more enjoyable. You can push and encourage each other. You are more likely to study if someone else is depending on you. Students who study together perform above average because they try different approaches and explain their solutions to each other.

3.0 Test Day Recommendations

Being prepared for an exam means more than just knowing electrical concepts, formula calculations, and the NEC. Being successful on taking exams is a learned process that takes practice and involves strategies. The following are our recommendations for the type of examination you will soon be taking.

- **Relax.** This is easier said than done, but it is very important. You must make a deliberate effort to relax. Make sure you're comfortable; remove clothes if you are hot, or put on a jacket if you are cold. Make sure you have rested, and that you are not hungry.
- **Be Prepared.** Make sure you have everything needed several days before the exam. The night before the exam is not the time to be out buying Code books, calculators, and other study materials.
- Understand The Question. To answer a question correctly, you must first understand the question. One word in a question can totally change the meaning of it. Carefully read every word of every question. Many of the questions are worded tricky in order to confuse what the questions is really asking. Questions will many times give more information than you require to solve the problem, commonly referred to as "fluff". You may not agree, or have not calculated exactly the same numbers that are given as answers to the question, however, remember that the directions will state to answer the "BEST" possible answer.
- Skip The Difficult Questions. Contrary to popular belief, you do not have to answer one
 question before going on to the next one. This could result in not having enough time to answer
 the easy questions, and on most of the exams the first few questions are considerably harder
 than the rest of the test. The following strategy should be used to avoid getting into this
 situation.
 - ✓ **First Pass:** Answer the questions you know from the top of your head. This information could be from this workbook, course lecture, or practical experience. It should only take as long to answer these type of questions as it takes to read them. If you do not know the correct choice immediately during this first pass through the examination, simply skip it!
 - ✓ **Second Pass:** Start at the beginning of the exam and answer the questions that you are simple Ohm's Law calculations or information that you can look up in your NEC quickly. This would be using articles that you are familiar with, such as commonly used tables. If you can't find the answer, go on to the next question. Don't get stuck or guess at this point.

- ✓ **Third Pass:** At this point you have gone through the test twice. Check how much time is left to take the exam and subtract 20 minutes (for guessing) and determine the amount of time left per each question. Spend the remaining time equally on each question. Again, do NOT get stuck!
- ✓ **Guessing:** If you have not answered all the questions after the three previous passes, make an educated guess. You should only need 10-20 minutes for guessing. Never leave a question unanswered. The answer "none of the above" is usually not the correct answer, however, "all of the above" can be a good guess. Avoid selecting the highest or lowest number when guessing. You may also select the best answer using the process of elimination, meaning: some of the answers are obviously wrong given your knowledge of the subject.


Test Recommendation Summary


- Continuously review information that you are told will be on the exam, such that you can quickly answer or reference your code book to answer.
- Don't try to "cram" information that you do not understand the night before the exam, if you don't know it by then.
- Make sure everything is ready and packed the night before the exam.
- Get sufficient sleep, and have a good meal before the exam.
- Take all your reference material. Let the proctors tell you what you can't use.
- Be at the exam site early, being in a rush will make you nervous.
- Bring you identification.
- Determine the time per question remaining for the exam.
- Be sure you are marking the answer in the correct spot on the answer sheet.
- Read each question carefully.
- Try to stay relaxed (take deep breaths, read, etc.)
- Don't get stuck on any one question.
- Skip questions that look difficult or lengthy. These type of questions are structured to devour your time and get you frustrated. Only answer difficult questions on the third pass through the exam, or if time runs out, simply guess.


4.0 Common NEC Articles and Examples


Tab and highlight ALL the following in your codebook

iu iligilligili ALL	the following in your codebook
220	Calculations and Tables
T220.12	General lighting
T220.42	Lighting and derating
T220.54	Household Dryer derating
T220.55	Household Range derating
240.6	Standard Rating of Fuses
T250.66	Electrode grounding conductors
T250.122	Equipment grounding conductors
T300.5	Direct burial requirements
T310.15	Ampacity of Conductors
T430.52	Motor Overcurrent Protection
T430.248	Motor FLC single-phase
T430.250	Motor FLC three-phase
	Nameplate – overcurrent size

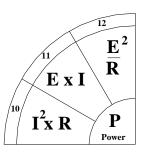

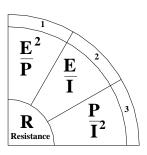

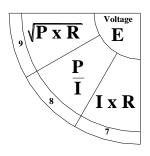

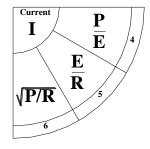

Chapter 9, Table 5 area conductors, then Table 4 size conduit.

Tables – branch or feeder conductors

Chapter 9, Table 8, Resistance of conductors.

Annex C, Conduit fill (same size only).

Annex D, Examples (examples 1 and 2 are important), load calculations.

Current_(3 ϕ) = P / (E x $\sqrt{3}$) $\sqrt{3}$ = 1.732 (used for *all* three-phase formulas)

Power_(3 ϕ) = ExIx $\sqrt{3}$

 $Vd = \sqrt{3 \times K \times L \times I}$ Where: Vd = Voltage drop on the conductor

(3-phase) CM I = Current draw

(1-phase) use a 2 in place of $\sqrt{3}$ L = Length of the conductor (between the source and load)

K = 12.9 for copper (21.2 Aluminum)CM = circular mils (Chap 9 Table 8)

 $\sqrt{3} = 1.732$

L = (Vd x CM) / (2 x K x I) solve for the max length between source and load

1 HP = 746 watts

Power = Exi(consumed) Power = Exix PF (output)

PF = <u>Output Power</u> = <u>W</u> = <u>Real</u> Input Power VA Apparent

Total Resistance in Series (simply add them up): $R_T = R_1 + R_2 + R_3 + R...$

Total Resistance in Parallel (only 2 resistors): $R_T = R_1 \times R_2$

(three or more resistors): $R_T = \frac{1}{1/R_1 + 1/R_2 + 1/R_3 + 1/R_4}$

5.0 Seminar and Webinar Questions

- 1. A dwelling has 3,000 sq-ft of heated space, with a 600 sq-ft garage, and 1,000 sq-ft unfinished habitable space for future use. When calculating the service conductor size for this dwelling unit using the standard calculation method, what is the minimum demand in volt-amperes?
 - 1. 6,150
 - 2. 7,725
 - 3. 12,000
 - 4. 16,500

Table 220.12, Table 220.42, Annex D Examples 1, and 2. (4000 sq-ft x 3VA/sq-ft) + 3000 (small appliance) + 1500 (laundry) = 16,500 - 3,000 = 13,500 x 35% = 4725 VA + 3000 VA = 7,725VA While the Standard Method of derating is listed in Table 220.12; which is 100% of the first 3,000 VA, and 35% of the remainder, it is important to note that the Optional Method detailed on 220.82(B) can also be a test question; which is 100% of the first 10,000 VA, and 40% of the remainder.

Example D1(a) One-Family Dwelling

The dwelling has a floor area of 1500 $\rm ft^2$, exclusive of an unfinished cellar not adaptable for future use, unfinished attic, and open porches. Appliances are a 12-kW range and a 5.5-kW, 240-V dryer. Assume range and dryer kW ratings equivalent to kVA ratings in accordance with 220.54 and 220.55.

Calculated Load [see 220.40]

General Lighting Load 1500 ft² at 3 VA/ft² = 4500 VA

Minimum Number of Branch Circuits Required [see 210.11(A)]

General Lighting Load: 4500 VA ÷ 120 V = 38 A

This requires three 15-A, 2-wire or two 20-A, 2-wire circuits. Small-Appliance Load: Two 2-wire, 20-A circuits [see 210.11(C)(1)] Laundry Load: One 2-wire, 20-A circuit [see 210.11(C)(2)] Bathroom Branch Circuit: One 2-wire, 20-A circuit (no additional load calculation is required for this circuit) [see 210.11(C)(3)]

Minimum Size Feeder Required [see 220.40]

General Lighting Small Appliance Laundry	36118	4,500 VA 3,000 VA 1,500 VA
3000 VA at 100% 9000 VA - 3000 VA = 6000 VA at 35%	Total	9,000 VA 3,000 VA 2,100 VA
Range (see Table 220.55) Dryer Load (see Table 220.54)	Net Load	5,100 VA 8,000 VA 5,500 VA
Net Calculated Load	,	18,600 VA

Net Calculated Load for 120/240-V, 3-wire, single-phase service or feeder

 $18,600 \text{ VA} \div 240 \text{ V} = 78 \text{ A}$

Sections 230.42(B) and 230.79 require service conductors and disconnecting means rated not less than 100 amperes.

Calculation for Neutral for Feeder and Service

Lighting and Small-Appliance Load	5,100 VA
Range: 8000 VA at 70% (see 220.61)	5,600 VA
Dryer: 5500 VA at 70% (see 220.61)	3,850 VA

Total 14,550 VA

Example D2(a) Optional Calculation for One-Family Dwelling, Heating Larger Than Air Conditioning [see 220.82]

The dwelling has a floor area of 1500 ft², exclusive of an unfinished cellar not adaptable for future use, unfinished attic, and open porches. It has a 12-kW range, a 2.5-kW water heater, a 1.2-kW dishwasher, 9 kW of electric space heating installed in five rooms, a 5-kW clothes dryer, and a 6-A, 230-V, room air-conditioning unit. Assume range, water heater, dishwasher, space heating, and clothes dryer kW ratings equivalent to kVA.

Air Conditioner kVA Calculation

 $6 \text{ A} \times 230 \text{ V} \div 1000 = 1.38 \text{ kVA}$

This 1.38 kVA [item 1 from 220.82(C)] is less than 40% of 9 kVA of separately controlled electric heat [item 6 from 220.82(C)], so the 1.38 kVA need not be included in the service calculation.

General Load

4,500 VA
3,000 VA
1,500 VA
12,000 VA
2,500 VA
1,200 VA
5,000 VA

Total 29,700 VA

Application of Demand Factor [see 220.82(B)]

9 kVA of heat at 40% (9000 VA \times 0.4) =

First 10 kVA of general load at 100% Remainder of general load at 40%		10,000 VA 7,880 VA
$(19.7 \text{ kVA} \times 0.4)$		
	Total of general load	17 880 VA

Total 21,480 VA

3,600 VA

- 2. What would be the derated value for a 20,800 Watt range installed in a single family dwelling?
 - 1. 8.0 kW
 - 2. 11.6 kW
 - 3. 12.5 kW
 - 4. 20.8 kW

One Range above 12 kW: **Table 220.55 Column C.** Note 1 says to increase the value in Column C by 5% for every kW above 12 kW. Therefore, 20,800 VA – 12,000 VA = 8,800 VA. So, 8,800/1,000 is 8.8 x 5% = 44%. Then multiply the value in Column C which is 8,000 VA (for the one range) by the 44%, which is 3,520 VA, and add that back to the value in Column C of 8,000 VA for a total derated value of 11,520 VA.

- 3. A 32-unit apartment complex has replaced the ranges. Each range is rated at 18,000 Watts. What is the calculated load?
 - 1. 47.0 kW
 - 2. 51.7 kW
 - 3. 56.0 kW
 - 4. 61.1 kW

Multiple ranges above 12 kW: **Table 220.55** Column C states; 15 K + 1 kW for each range. Additionally, you must apply Note 1 since the ranges are above 12 kW. Therefore, 15 kW + 32 K = 47 kW, and the ranges are 18,000 - 12,000 = 6 kW above 12 kW, so $6 \times 5\% = 30\%$. Then multiply the value in Column C which is 47,000 VA (for the 32 ranges) by the 30%, which is 14,100 VA (this is our derated portion), and add back to the value from Column C of 47,000 VA for a total derated value of 61,100 VA.

- 4. Given. A Service has conductors of 250 kcmil copper, with a driven ground rod as its only means of grounding. What copper grounding electrode conductor size would be required?
 - 1. 1/0 AWG
 - 2. 2 AWG
 - 3. 6 AWG
 - 4. 8 AWG

Table 250.66 Note, that the grounding electrode conductor size is based on the size of the service entrance conductors. Be careful if the questions state copper or aluminum for each conductor, and to use the proper column. 2 AWG.

- 5. According to the NEC, what size copper grounding electrode conductor would be required for a service built with 380 ampere rated THHN insulated copper conductors?
 - 1. 1/0 AWG
 - 2. 2 AWG
 - 3. 3 AWG
 - 4. 4 AWG

Use **Table 310.15(B)(16)** for the 380 Amp THHN service, gives a 400 kcmil copper service conductor, then use **Table 250.66** to size the # 1/0 copper grounding electrode conductor.

- 6. What MINIMUM size copper bonding jumper is allowed for a circuit with an overcurrent protective device rated at 15 amperes?
 - 1. 8 AWG
 - 2. 10 AWG
 - 3. 12 AWG
 - 4. 14 AWG

Table 250.122 Note, that the size of the equipment grounding conductor (or bonding jumper) is sized according to the overcurrent protection for that branch circuit. The size of the service is not relative to question. 14 AWG.

- 7. In a residential dwelling location, direct buried cables that are GFCI protected at 20 amperes must be installed a minimum of how many inches below grade?
 - 1. 8
 - 2. 12
 - 3. 18
 - 4. 24

Table 300.5 Note, this table is used for several different types of questions. 12 inches.

- 8. What is the ampacity of three # 1 THW copper conductors at 86 degrees F in a raceway?
 - 1. 100 amperes
 - 2. 115 amperes
 - 3. 130 amperes
 - 4. 150 amperes

Table 310.15(B)(16) gives 130 amperes, then derate for temperature using Table 310.15(B)(2)(a) which is a multiplier of 1.00 in this case. Therefore, 130 amperes \times 1.00 = 130 amperes.

Important Note: Use Table 310.15(B)(2)(a) when correcting ampacities from Tables 310.15(B)(16) and 310.15(B)(17), both of which are based on an ambient temp of 86 degrees F. However, use 310.15(B)(2)(b) when correcting ampacities from Tables 310.15(B)(18), 310.15(B)(19) and 310.15(B)(20), all of which are based on an ambient temp of 104 degrees F.

- 9. What would be the ampacity of each conductor in a raceway given that there are four (4), #1 THW copper conductors at 132 degrees Fahrenheit?
 - 1. 60 amperes
 - 2. 75 amperes
 - 3. 115 amperes
 - 4. 130 amperes

Table 310.15(B)(16) gives 130 amperes, then derate for temperature using Table 310.15(B)(2)(a) which is a multiplier of 0.58, then derate for the number of conductors (four) using Table 310.15(B)(3)(a) which is 80%. Therefore, $130 \text{ A} \times 0.58 \times 0.80 = 60$ amperes.

- 10. What is the size of the secondary current of a 75 kVA transformer, given a three phase 480 V primary, and a three phase 120/208 V secondary?
 - 1. 156 amperes
 - 2. 208 amperes
 - 3. 360 amperes
 - 4. 362 amperes

Ohm's Law: I = P/(E x $\sqrt{3}$) = 75,000 / (208 x 1.732) = 208.18 amps. Try this on a simple non-programmable calculator to make sure you can handle the 1.732 in the denominator. 208 amperes.

Important Note: As a testing candidate, you should be given the Ohm's Law formula wheel shown in Section 4 by the testing agency administering the examination. You may need to ask for the formula wheel, prior to starting your exam. These formulas are tricky from memory, but using the wheel, these become easy questions to answer if you take your time, choose the proper formula, and calculate carefully.

- 11. Assume a kitchen is added to a church with a total load of 54,000 VA. What would be the MINIMUM size THW copper conductors for this 3-phase, 120/208 Volt service?
 - 1. 1 AWG
 - 2. 1/0 AWG
 - 3. 2/0 AWG
 - 4. 3/0 AWG

Ohm's Law: I = P/(E x $\sqrt{3}$) = 54,000 / (208 x 1.732) = 149.89 amps, then use **Table 310.15(B)(16)**, 1/0 AWG.

- 12. What would be the full load current rating of a single phase 115 volt 1/2 HP motor?
 - 1. 4.4 amps
 - 2. 5.8 amps
 - 3. 7.2 amps
 - 4. 9.8 amps

Table 430.248 Full Load Current in Single-Phase Motors. 9.8 amperes.

- 13. What size THW copper conductors are required for a continuous duty, 208 V, 30 HP, motor with a nameplate rating of 74 amperes?
 - 1. #2 AWG
 - 2. #3 AWG
 - 3. #4 AWG
 - 4. #6 AWG

Table 430.250 Tricky, however, do NOT use the nameplate rating, even though it is given in the question.) 88 amps \times 125% = 110 amperes, then use Table 310.15(B)(16). 2 AWG.

- 14. What part of the motor circuit is sized according to the current rating marked on the motor nameplate?
 - 1. Branch circuit conductors
 - 2. Branch circuit short-circuit fuse
 - 3. Separate motor overload protection device
 - 4. Feeder overload protection

430.6 (A)(1). Separate motor overload protection shall be based on the motor nameplate current rating. Overload protection.

- 15. Conductor ampacity for general motor applications and <u>branch circuits</u> shall be based on what?
 - 1. The actual current rating marked on the motor nameplate
 - 2. The full-load current in amperes given in the NEC motor tables
 - 3. The actual current based on the actual load
 - 4. The locked-rotor current
 - **430.6 (A)(2).** Tables shall be used to determine the ampacity of conductors... instead of the actual current rating marked on the motor nameplate. Tables Values.
- 16. Given a circuit serves a 10-HP, 208-volt, 3-phase, squirrel-cage Design-B motor, with nameplate rating of 37 amps. What is the maximum permitted operational setting of an adjustable inverse-time breaker?
 - 1. 30.8 amps
 - 2. 35.7 amps
 - 3. 77.0 amps
 - 4. 92.5 amps

Table 430.52 Maximum Rating or Setting of Motor Branch-Circuit Short-Circuit and Ground-Fault Protective Devices. 37A x 250% = 92.5 amps (do NOT use ... Table 430.250)

- 17. What would be voltage drop for a 3 phase, 3 wire, 480V circuit assuming there is a 15 HP induction motor, in rigid conduit, a distance of 150 feet from the source, installed with # 6 AWG conductor?
 - 1. 1.54 volts
 - 2. 2.67 volts
 - 3. 3.09 volts
 - 4. 5.35 volts

Table 430.250 gives 21 amperes for this motor, and **Chapter 9 Table 8** gives 26240 circular mils for the conductor size, therefore, applying the formula for voltage drop in three-phase circuit we get; $Vd = (\sqrt{3} \times K \times L \times I) / CM = (1.732 \times 12.9 \times 150 \text{ feet } \times 21 \text{ amps}) / 26240 \text{ circular mils} = 2.68 \text{ Volts}.$

- 18. If the maximum voltage drop of the circuit is only 3 volts, and there are 9 amperes flowing in the circuit. What is the approximate max circuit length for a # 12 AWG, single-phase, copper conductor?
 - 1. 0 150 feet
 - 2. 151 250 feet
 - 3. 251 350 feet
 - 4. 351 450 feet

Chapter 9 Table 8 gives 6530 circular mils for the # 12 AWG conductor, therefore, applying the formula for distance based on a voltage drop we have; Length = $(Vd \times CM) / (2 \times K \times I) = (3 \text{ Volts } \times 6530) / (2 \times 12.9 \times 9 \text{ amperes}) = 84.37 \text{ feet}$, is the exact length to drop 3 volts. Therefore, 0 - 150 feet is the best answer.

- 19. Given: Five (5), 400 kcmil THW conductors in a conduit raceway. What is the minimum diameter, in inches, permitted for Schedule 40 PVC conduit?
 - 1. 3
 - 2. 3-1/2
 - 3. 4
 - 4. 5

Chapter 9, Table 5, gives a conductor area of 0.6619×5 conductors = 3.3095-in². Then use **Chapter 9, Table 4**, for Rigid PVC Conduit (PVC) Schedule 40, column for Over 2 Wires 40% - in² and slide down till you see at least the 3.3-in², which is 3.895-in², so we size up to a 3-1/2 inch trade size conduit.

- 20. A conductor enters a pull box with a 2-inch conduit on the "east" side. The conductor then makes a U turn in the box and goes out a 2-1/2 inch conduit on the same side. What is the MINIMUM distance from "east" side of the box to the opposite "west" side, in inches?
 - 1. 12 inches
 - 2. 15 inches
 - 3. 17 inches
 - 4. 20 inches

314.28(A)(2) 2.5" x 6 = 15" + 2" = 17 inches

- 21. What would be the required box size volume in cubic inches to provide the minimum free air space of the box was to be installed with:
 - Six #14 AWG THW conductors
 - Eight #12 AWG THW conductors
 - Three #10 AWG THW conductors
 - 1. 24.0 cubic inch box
 - 2. 29.1 cubic inch box
 - 3. 35.2 cubic inch box
 - 4. 37.5 cubic inch box

Sine of Conductor	Free Space Within Box for Each Conductor			
Size of Conductor (AWG)	cm ³	in. ³		
18	24.6	1.50		
16	28.7	1.75		
14	32.8	2.00		
12	36.9	2.25		
10	41.0	2.50		
8	49.2	3.00		
6	81.9	5.00		

Table 314.16(B) Calculate the volume for each size, then add. $(6 \times 2 = 12) + (8 \times 2.25 = 18) + (3 \times 2.5 = 7.5) = 37.5$ cu-in.

6.0 Homework Study Material and Questions

6.1 Mathematics and Basic Electrical Formulas

The state examination will require you to have some basic knowledge of mathematics and expect you to be able to solve word problems. You will need to understand Ohm's Law (and the reciprocals of those formulas) to solve the circuit analysis type questions. The questions given usually only require basic understanding of series and parallel circuits.

6.2 Notation

Many questions on the examination are structured to test your ability to recognize differences in notation. The most common is the letter k. The letter k is an abbreviation for kilo, which represents the value 1,000. Note the following examples.

Example 1. An electric heater is rated at 6kW. Which value should be used in calculating the heaters load?

- (a) 6,000 volt
- (b) 6.0 W
- (c) 6,000 watts
- (d) none of the above

Answer: (c) 6,000 watts

Example 2. What is the kVA of a 500 VA load?

- (a) 500 kVA
- (b) 0.5 kVA
- (c) 5,000 kVA
- (d) 500 VA

Answer: (b) 0.5 kVA

Example 3. What is the VA of a 30 kVA load?

- (a) 30 kVA
- (b) 300 VA
- (c) 30,000 VA
- (d) 3,000 VA

Answer: (c) 30,000 VA

6.3 <u>Percentages</u>

Some questions on the exam ask for the power factor or the efficiency of a load. The answer can either be in the form of a percent, decimal, or whole number.

For example:

```
125% = 1.25
0.80 = 80%
100% = 1.00
2.25 = 225%
```

Example 1. Branch circuit conductors are to be sized at 125% of the motors FLC rating. If the motors FLC rating is 8 amps, the conductors must have an ampacity of at least how many amps?

- (a) 6.40 amps
- (b) 8.00 amps
- (c) 10.00 amps
- (d) 1000 amps

Answer: (c) 10 amps. Where: $I = (8 \text{ amps}) \times 1.25$

6.4 **Squaring**

You will be required to square a number using the calculator provided to you at the testing location. Squaring is denoted by a small "2" in the upper right corner of a variable. For example, one of the formulas for power that is required for the exam is: $P = I^2 \times R$

Example 1. If the circuit current through a load is 2.5 amps, and the resistance of that load is 10 Ohms, what will be the power consumed by the load?

- (a) 25.0 watts
- (b) 62.5 watts
- (c) 250.0 watts
- (d) 625.0 watts

Answer: (b) 62.5 watts. Where: P = (2.5 amps)x(2.5 amps)x(10 Ohms)

6.5 Square Root

You may be required to take the square root of a number using the calculator provided to you at the testing location. Usually denoted by " $\sqrt{}$ ". For example, one of the formulas for power that you may need is: $I_{3\phi} = P/(E \times \sqrt{3})$

Please note that the only time you should require to take the square root of a number is when the question is asking for either power or current in each circuit conductor given that the source voltage is three phase 3ϕ .

Example 1. What is the circuit current in each leg of the ungrounded service conductors given that the load draws 24,000 VA and is operating on a source voltage of 208 volts?

- (a) 67 amps
- (b) 115 amps
- (c) 200 amps
- (d) none of the above

Answer: (a) 67 amps. Where $I_{3\phi} = 24,000/(208 \text{ volts x } 1.732)$

6.6 Electrical Circuit Concepts and Examples

An electric circuit consists of a power source, circuit conductors, and a load. For current to travel in the circuit, there must be a complete path from one terminal of the power source, through the conductors and the load, and then back to the other terminal of the power source.

In any completed circuit, it takes a force to push the electrons through the power source, conductor, and load. The two most common types of power sources are direct current and alternating current. The polarity from a direct current power source never changes; that is, the current flows out of the negative terminal of the power source always in the same direction. An alternating current power source produces a voltage and current that has a constantly changing polarity and magnitude at a constant frequency. Alternating current (AC) flow is produced by a generator or an alternator.


Inside a direct current power source (such as a battery) the electrons travel from the positive terminal to the negative terminal; however, outside of the power source, electrons travel from the negative terminal to the positive terminal. The opposition of current flow is dependant on the conductors resistance. The values for resistance of conductors per 1,000 feet is located in Chapter 9 Table 8 of the NEC. Observing the table, you should notice that as the cross sectional area of the conductors increases (wire gets bigger), the resistance of that conductor decreases proportionally.

6.7 Electrical Circuit Formulas

The Formula Wheel is commonly used to calculate an unknown value, such as, resistance, current, voltage, or power in a circuit analysis type problem. When calculating an unknown value, the question should always give you two constants that are a fixed value. If you can apply the proper formula to the word question given, you stand a very good chance of calculating the value of the answer correctly.

The circuit value definitions and the Ohms Law Formula Wheel are shown below:

- **Resistance** The opposition to the flow of electrons. The unit of measure is the ohm, and is abbreviated by the letter R.
- **Current** The movement of electrons through a conductor, measured in amperes. Amperes is abbreviated by the letters I, A, or amps.
- Voltage Electron pressure is called electromotive force. The practical unit of electric pressure. The pressure will produce a current of one ampere against a resistance of one ohm. The unit of measure is the volt, and is abbreviated by the letter E or V.
- Power The rate of work that can be produced by the movement of electrons.
 The unit of measure is the watt. Power can be abbreviated by the letter P, W, or VA.

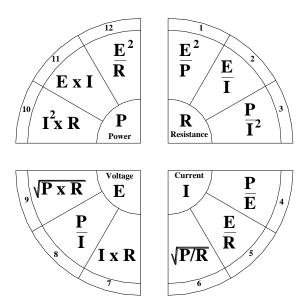

6.7.1 Solving for Resistance

Example 1. What is the resistance of a circuit that has a voltage 240 V and a load of 5000 W? Answer: $R = E^2 / P = (240 \text{ V})^2 / (5000 \text{ W}) = 11.52 \text{ Ohms}$

Example 2. What is the resistance of a circuit that has a source of 120 V and draws 6 Amps of current?

Answer: R = E/I = (120 V)/(6 A) = 20 Ohms

6.7.2 Solving for Current

Example 1. What is the current in amperes flowing in a circuit that has a source of 120 V and a resistance of 10 Ohms?

Answer: I = E/R = (120 V) / (10 ohms) = 12 Amps

Example 2. What is the current flowing in a circuit that has a 1000 W load and is operating on a voltage of 120 V?

Answer: I = P/E = (1000 W) / (120 V) = 8.33 Amps

6.7.3 Solving for Voltage

Example 1. What is the voltage of a circuit that has a load of 1440 Watts and a current draw of 12 Amps?

Answer: E = P/I = (1440 W)/(12 A) = 120 Volts

Example 2. What is the voltage of a circuit that has a current draw of 12 Amps and a circuit resistance of 10 Ohms?

Answer: $E = I \times R = (12 \text{ A}) \times (10 \text{ Ohms}) = 120 \text{ Volts}$

6.7.4 Solving for Power

Example 1. What is the power of a circuit that has a voltage of 460 V with 15 Amps of current flow ?

Answer: $P = E \times I = (460 \text{ V}) \times (15 \text{ A}) = 6900 \text{ W}$

Example 2. What is the power of a circuit that has a current of 25 Amps and a resistance of 5 Ohms?

Answer: $P = I^2 x R = (25 A)^2 x (5 ohms) = 3125 watts$

Example 3. What is the power of a circuit that has a voltage of 240 V and a resistance of 10 Ohms?

Answer: $P = E^2 / R = (240 \text{ V})^2 / (10 \text{ ohms}) = 5760 \text{ VA}$

6.8 Circuit Analysis Using Ohms Law

The state exam will require you to know the basics of Ohm's Law and circuit analysis. On the exam you may see series, parallel, and combination circuit questions. This section will describe the subject matter required to succeed on this portion of the exam. If you feel that you need additional practice questions beyond those given in this workbook, there is a vast body of resources available on this topic at your local library, bookstore. The "internet" can also provide some excellent examples that would help your understanding. Use the formulas given in Section 5.1 of this workbook to solve the following questions.

6.8.1 **Series Circuits**

A series circuit is one that has all of the loads "in-line" or "end-to-end" with the supply voltage, refer to Figure 1 below.

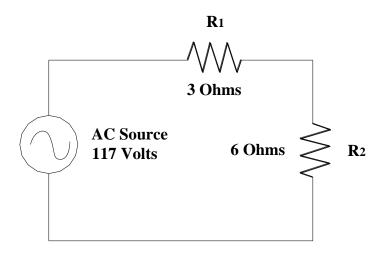


Figure 1. Series Circuit

In a series circuit you should note that the circuit current has only one path for current flow. This means that the current that is flowing through each load of a series branch has the same value. There are some important rules that should be understood about series circuits, a few of which are listed below.

Rule 1. The total resistance in a series circuit is the sum of the individual resistors in that branch. The formula for calculating R_T is:

$$R_T = R_1 + R_2 + R_3 + R...$$

- **Rule 2.** The current is constant throughout the series branch.
- **Rule 3.** The sum of the voltage drops in a series branch is equal to the source voltage of that branch.

Given the series circuit shown in Figure 1, calculate the following.

Example 1. What is the total resistance (R_T) of the circuit?

(Hint: Here you would simply add up all the resistors in the series branch to find the total resistance.)

Example 2. What is the total current (It) in the circuit?

Example 3. What is the voltage across R_2 .

Answers to: Example 1. = 9.0 ohms

Example 2. = 13.0 amps Example 3. = 78.0 volts

6.8.2 Parallel Circuits

A parallel circuit is one that has all of the loads "across" the supply voltage, refer to Figure 2 shown below.

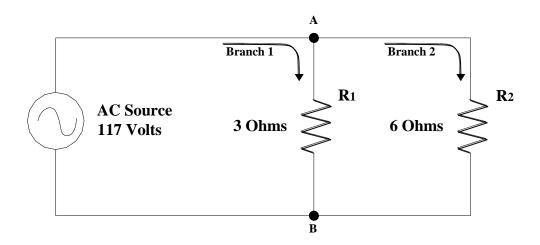


Figure 2. Parallel Circuit

In the parallel circuit shown above, you should note that the circuit current has multiple paths for current to flow. The total circuit current divides up at node A, some of the current flows through "Branch 1" and the remainder of the current flows through "Branch 2", ultimately the total current combines at node B to return to the source.

Because all the loads on the circuit are in parallel, they will all have the same voltage across them. However, the current through each load could be different depending on the value of each individual load. There are some important rules that should be understood about parallel circuits, some of which are listed below.

Rule 1. The total resistance in a parallel circuit will always be less than the lowest-value resistor in the parallel branch. One of the formulas for calculating R_T is:

$$R_T = \underline{R_1 \times R_2}$$

(only 2 resistors) $R_1 + R_2$

- **Rule 2.** The voltage is constant throughout the parallel branch, the same value as the source voltage.
- Rule 3. The total current available to a parallel branch will divide up in the parallel branches and combine again to flow back into the source.

Given the parallel circuit shown in Figure 2, calculate the following.

Example 1. What is the total resistance (R_T) of the circuit? (Caution! The total resistance for a parallel branch is NOT calculated the same as a series circuit!)

Example 2. What is the voltage across R_2 .

Example 3. What is the current through R_2 ?

Example 4. What is the power consumption of R_1 ?

Answers to: Example 1. = 2.0 ohms

Example 2. = 117 volts Example 3. = 19.5 amps Example 4. = 4.6 kW

An AC circuit is one that has at least one Hot and Neutral conductor. The conductor insulation is usually black and white respectively. An important issue to note is that of a "balanced load". A balanced load is a circuit that has the multiple loads that are drawing the same current for each load. In a balanced circuit, there will be NO current flowing in the neutral conductor. However, given that the loads on a branch are un-balanced, the difference in the current draw between Branch 1 and Branch 2 would be flowing through the neutral conductor. There will be many questions on the exam that will test your understanding of this concept. This subject will be covered in more detail in the lecture portion of this course.

6.9 **Supplemental Electrical Circuit Questions**

These questions should all be <u>easily</u> understood prior to taking the required examination. Working thorough these questions can assist each student to gauge his/her knowledge of general electrical subject material. It also gives the student a better understanding of what subject areas may require more preparation and study time. Use the answer key at the end of this section to grade your understanding of this material.

1.	What is the kW o	f a 75-watt load (b) 7.5 kW		(d) .075 kW
2.	The output VA of What is the trans		is 100 VA. The	transformer efficiency is 90 percent.
	(a) 90 watts	(b) 110 watts	(c) 100 watts	(d) 125 watts
3.	When changing a decimal point two	=		whole number, simply move the
	(a) right	(b) left	(c) depends	(d) none of these
4.	The decimal equiv	valent for 75 pe	ercent is	
	(a) .075	(b) .75	(c) 7.5	(d) 75
5.	The decimal equiv	valent for 225 p	percent is	
	(a) 225	(b) 22.5	(c) 2.25	(d) .225
6.	The decimal equiv			
	(a) .03	(b) .3	(c) 3	(d) 30.0
7.		nd. If the load is		er or fuse) is required to be sized no less than 115 he overcurrent protection device would have to be
		(b) 23 amps	(c) 17 amps	(d) 30 amps
8.		vice rating. If th	ne device is rate	ent protection device is limited to 80 ed 90 amperes, the maximum
	(a) 72	(b) 90	(c) 110	(d) 125
9.	The feeder deman	nd load for an 8	3-kW load, incr	eased by 20 percent is kVA.
	(a) 6.4	(b) 8.0	(c) 9.6	(d) 16.0
10.		the maximum	-	ection device sized no smaller than 125 percent of deciminated on a 100-ampere overcurrent
	•	(b) 125 amps	(c) 80 amps	(d) 110 amps
11.	What is the nowe	r consumed in	watts of a No.	12 conductor that is 100 feet long and has a

resistance of 0.2 ohm, the current in the circuit is 16 amperes?
(a) 75 watts (b) 50 watts (c) 100 watts (d) 200 watts

12. Th	ne numeric equi	ivalent of 42 is	·		
		(b) 8		(d) 32	
12 T	ne numeric equi	ivalent of 122 is			
13. 11	=			/d\ 1 720	
	(a) 3.46	(b) 24	(C) 144	(d) 1,728	
14 W	hat is the squar	re root of 1 000	17		
14. VV	· · · · · · · · · · · · · · · · · · ·	(b) 32		(d) E00	
	(a) 3	(D) 32	(C) 100	(u) 300	
15. Th	ne square root o	of the number 3	Bis .		
		(b) 9		(d) 1 50	
	(a) 1.732	(6) 3	(0) 723	(u) 1.50	
16. Tł	ne sum of 5, 7, 8	B and 9 is appro	ximately		
		(b) 25			
	(a) 20	(6) 23	(0) 30	(a) 33	
17. W	hat is the curre	nt in amperes o	of a three-phas	e. 18-kW. 208-	volt load ?
_,,,,,,		(b) 50 amps	=		1010 1000 1
	(a) 12 amps	(b) 30 amps	(c) 80 amps	(u) 130 amps	
18. Aı	n electric circuit	consists of the			
20.7.		rce (b) cor	· · · · · · · · · · · · · · · · · · ·	(c) load	(d) all of these
	(a) power sou	(6) (6)	idactors	(c) load	(a) an or these
19. Tł	ne Ohm's law fo	rmula. I = E / R	demonstrates	that current is	proportional to the voltage,
	nd propor			criae carrette is	proportional to the voltage,
aı		inversely		diroctly	
		=	· · ·	= ·	
	(c) inversely, i	indirectly	(a) directly, in	versely	
20 In	an alternating	current circuit	which factors o	nnose current	flow?
20. 111	_	(b) capacitanc			
	(a) resistance	(b) capacitanc	e (c) maaction	reactance (u)	an or these
21 Tk	ne annosition to	o current flow in	n an alternating	current circuit	t is called and is often
	presented by th		i aii aiteinating	s carrein circum	and is often
16	-	(b) capacitance	o (c) industion	(d) impodance	2
	(a) resistance	(b) capacitanc	e (c) induction	i (u) iiripedance	5
22 \	hat is the voltag	go drop of two	No 12 conduct	ore cumplying a	16-ampere load, located 100 feet
		= :			
			the current in	the circuit is 10	s amps, and the resistance of the
CC	onductors is 0.4		/a\ C	(al) 42 0 alta	
	(a) 1.6 volts	(b) 3.2 volts	(c) 6.4 volts	(d) 12.8 volts	
22 14			:		ducate a veltaca duam is 7.2 velta and
			uit conductors	when the con	ductor voltage drop is 7.2 volts and
tn	e current flow i	•	() 2 1	/ I)	
	(a) 0.14 ohm	(b) 0.3 ohm	(c) 3 ohms	(d) 14 ohms	
24 14	/le a # ! a # le a a a				1
		er 1055 in Watts i	ior a conductor	triat carries 22	amperes and has a voltage drop of
7.	2 volts?	/I-) 250 II-	(-) 700	(-1) 2 400	1-
	(a) 175 watts	(b) 350 watts	(c) 700 watts	(d) 2,400 watt	LS
25 14	lhat ic tha marri	or consumed of	2 10 100 500	trin rated 220	volte connected to a 115 well singuit?
25. W					volts, connected to a 115-volt circuit?
	(a) 10 kW	(b) 2.5 kW	(c) 5 kW	(d) 20 kW	

Prep At Home LLC proprietary information. Use or disclosure of this information is subject to the restrictions on page two of this document.

26.	6. The total resistance of two No. 12 conductors, 150 feet long is 0.6 ohm, and the current of the circuit is 16 amperes. What is the power loss of the conductors? (a) 75 watts (b) 150 watts (c) 300 watts (d) 600 watts						
27.	What is the conducarries a current factor (a) 43 watts	•	eres? The load	operates	24 hours per o	_	•
28.	What is the powe (a) 7.0 kW	er of a 10-kW he (b) 7.6 kW	•			ted to a 208-volt	circuit?
29.	kVA is equal to _ (a) 100 VA	(b) 1,000 volts	s (c) 1,0	00 watts		(d) 1,000 VA	
30.	If the contact resi drop across the ((a) increase		·				he voltage
31.	To double the cur	rent of a circui	t when the vol	tage rema	ins constant,	the R (resistance) must be
	(a) doubled	(b) reduced by	y half (c) inc	reased (d) none of the	se	
32.	· · · —	oower consume d current d resistance	(b) current ar	ıd resistan		o know	
33.	The number of waresistor.	atts of heat give			, if 10 volts	s is applied to a 5	5 ohm
34.	When a lamp that current of the circ (a) 3.8	t is rated 500-w	vatts at 115 vo amperes.	lts is conn	ected to a 120)-volt power sup	ply, the
35.	A 1,500-watt hear load is wat	ts.				The power cons	umed for this
36.	The total resistan of the circuit is 3 (a) 28		s 12 ohms; the	load is 10	ohms, and th		

6.9.1 Answer Key for Supplemental Electrical Circuit Questions

The following is a list of answers to the question:	s given in Section 6.9 of this document.
---	--

- 1. D
- 2. B
- 3. B
- 4. B
- 5. C
- 6. C
- 7. B
- 8. A
- 9. C
- 10. C
- 11. B
- 12. C
- 13. C
- 14. B
-
- 15. A
- 16. C
- 17. B
- 18. D
- 19. D
- 20. D 21. D
- __. _
- 22. C
- 23. A 24. A
- 25. B
- 26. B
- 27. A
- 28. B
- 29. D
- _____
- 30. A 31. B
- 32. D
- J2. D
- 33. D
- 34. B
- 35. D
- 36. B