Hardware Locality (hwloc) 2.1.0rc1

Generated by Doxygen 1.8.13

Contents

1	Hard	Iware Locality	1
	1.1	Introduction	1
	1.2	Installation	1
		1.2.1 Basic Installation	2
		1.2.2 Installing from a Git clone	2
	1.3	Questions and Bugs	2
2	Hard	Iware Locality (hwloc) Introduction	3
	2.1	hwloc Summary	3
	2.2	hwloc Installation	4
	2.3	Command-line Examples	5
	2.4	Programming Interface	7
		2.4.1 Portability	8
		2.4.2 API Example	9
	2.5	History / Credits	11
	2.6	Further Reading	12
3	Term	ns and Definitions	13
	3.1	Objects	13
	3.2	Indexes and Sets	13
	3.3	Hierarchy, Tree and Levels	14

ii CONTENTS

4	Com	nmand-Line Tools 1			
	4.1	Istopo and Istopo-no-graphics	17		
	4.2	hwloc-bind	17		
	4.3	hwloc-calc	18		
	4.4	hwloc-info	18		
	4.5	hwloc-distrib	18		
	4.6	hwloc-ps	18		
	4.7	hwloc-annotate	18		
	4.8	hwloc-diff, hwloc-patch and hwloc-compress-dir	19		
	4.9	hwloc-dump-hwdata	19		
	4.10	hwloc-gather-topology and hwloc-gather-cpuid	19		
5	Envi	ronment Variables	21		
6	CPU	and Memory Binding Overview	25		
6		and Memory Binding Overview Devices	25 27		
	I/O E		-		
	I/O E	Devices	27		
	I/O D	Devices Enabling and requirements	27 27		
	7.1 7.2	Devices Enabling and requirements	27 27		
	7.1 7.2 7.3	Devices Enabling and requirements	27272728		
	7.1 7.2 7.3 7.4	Devices Enabling and requirements	27 27 27 28 29		
	7.1 7.2 7.3 7.4 7.5 7.6	Devices Enabling and requirements I/O objects OS devices PCI devices and bridges Consulting I/O devices and binding	272727282929		
7	7.1 7.2 7.3 7.4 7.5 7.6	Enabling and requirements I/O objects OS devices PCI devices and bridges Consulting I/O devices and binding Examples	27 27 27 28 29 29		

CONTENTS

9	Obje	ct attrib	putes	35
	9.1	Norma	l attributes	35
	9.2	Custon	n string infos	35
		9.2.1	Hardware Platform Information	36
		9.2.2	Operating System Information	36
		9.2.3	hwloc Information	36
		9.2.4	CPU Information	37
		9.2.5	OS Device Information	37
		9.2.6	Other Object-specific Information	38
		9.2.7	User-Given Information	38
10	Impo	orting a	nd exporting topologies from/to XML files	39
	10.1	libxml2	and minimalistic XML backends	39
	10.2	XML in	nport error management	40
	Cunt	hotio to	pologies	41
•				
			tic description string	41
	11.2	Loadin	g a synthetic topology	42
	11.3	Exporti	ing a topology as a synthetic string	42
12	Inter	operabi	ility With Other Software	43
13	Thre	ad Safe	ty	45
14	Com	ponent	s and plugins	47
	14.1	Compo	nents enabled by default	47
	14.2	Selecti	ng which components to use	48
	14.3	Loadin	g components from plugins	48
	14.4	Existing	g components and plugins	48
15	Emb	edding	hwloc in Other Software	51
	15.1	Using h	nwloc's M4 Embedding Capabilities	52
	15.2	Examp	le Embedding hwloc	53

iv CONTENTS

16	Frequ	uently /	Asked Questions	55
	16.1	Conce	ots	55
		16.1.1	I only need binding, why should I use hwloc?	55
		16.1.2	Should I use logical or physical/OS indexes? and how?	56
		16.1.3	hwloc is only a structural model, it ignores performance models, memory bandwidth, etc.? .	56
		16.1.4	hwloc only has a one-dimensional view of the architecture, it ignores distances?	56
		16.1.5	What are these Group objects in my topology?	57
		16.1.6	What happens if my topology is asymmetric?	57
		16.1.7	What happens to my topology if I disable symmetric multithreading, hyper-threading, etc. in the system?	58
		16.1.8	How may I ignore symmetric multithreading, hyper-threading, etc. in hwloc?	58
	16.2	Advanc	ed	59
		16.2.1	I do not want hwloc to rediscover my enormous machine topology every time I rerun a process	59
		16.2.2	How many topologies may I use in my program?	59
		16.2.3	How to avoid memory waste when manipulating multiple similar topologies?	60
		16.2.4	How do I annotate the topology with private notes?	60
	16.3	Caveat	S	60
		16.3.1	Why is hwloc slow?	60
		16.3.2	Does hwloc require privileged access?	61
		16.3.3	What should I do when hwloc reports "operating system" warnings?	61
		16.3.4	Why does Valgrind complain about hwloc memory leaks?	62
	16.4	Platform	m-specific	62
		16.4.1	How do I find the local MCDRAM NUMA node on Intel Xeon Phi processor?	62
		16.4.2	Why do I need hwloc-dump-hwdata for memory on Intel Xeon Phi processor?	63
		16.4.3	How do I build for Intel Xeon Phi coprocessor?	63
		16.4.4	How do I build hwloc for BlueGene/Q?	63
		16.4.5	How do I build hwloc for Windows?	64
		16.4.6	How to get useful topology information on NetBSD?	64
		16.4.7	Why does binding fail on AIX?	64
	16.5	Compa	tibility between hwloc versions	64
		16.5.1	How do I handle API changes?	64
		16.5.2	What is the difference between API and library version numbers?	65
		16.5.3	How do I handle ABI breaks?	65
		16.5.4	Are XML topology files compatible between hwloc releases?	65
			Are synthetic strings compatible between hwloc releases?	66
		16.5.6	Is it possible to share a shared-memory topology between different hwloc releases?	66

CONTENTS

17	Upgı	rading to the hwloc 2.0 API	67
	17.1	New Organization of NUMA nodes and Memory	67
		17.1.1 Memory children	67
		17.1.2 Examples	67
		17.1.3 NUMA level and depth	68
		17.1.4 Finding Local NUMA nodes and looking at Children and Parents	69
	17.2	4 Kinds of Objects and Children	69
		17.2.1 I/O and Misc children	69
		17.2.2 Kinds of objects	70
	17.3	HWLOC_OBJ_CACHE replaced	70
	17.4	allowed_cpuset and allowed_nodeset only in the main topology	70
	17.5	Object depths are now signed int	70
	17.6	Memory attributes become NUMANode-specific	71
	17.7	Topology configuration changes	71
	17.8	XML changes	71
	17.9	Distances API totally rewritten	72
	17.10	OReturn values of functions	72
	17.1	1Misc API changes	72
	17.12	2API removals and deprecations	73
18	Netw	vork Locality (netloc)	75
			,,
	18.1	Netloc Summary	75
		18.1.1 Supported Networks	76
	18.2	Netloc Installation	76
	18.3	Setup	76
	18.4	Topology display	77
		18.4.1 Generate the JSON file	77
		18.4.2 Using netloc_draw	78

vi

19	19 Netloc with Scotch	79
	19.1 Introduction	 79
	19.2 Setup	 79
	19.3 Tools and API	 79
	19.3.1 Build Scotch architectures	 79
	19.3.2 Build Scotch sub-architectures	 80
	19.3.3 Mapping of processes	 80
20	20 Module Index	81
	20.1 Modules	 81
21	21 Data Structure Index	83
	21.1 Data Structures	 83
22	22 Module Documentation	85
	22.1 API version	 85
	22.1.1 Detailed Description	 85
	22.1.2 Macro Definition Documentation	 85
	22.1.2.1 HWLOC_API_VERSION	 85
	22.1.2.2 HWLOC_COMPONENT_ABI	 86
	22.1.3 Function Documentation	 86
	22.1.3.1 hwloc_get_api_version()	 86
	22.2 Object Sets (hwloc_cpuset_t and hwloc_nodeset_t)	 87
	22.2.1 Detailed Description	 87
	22.2.2 Typedef Documentation	 87
	22.2.2.1 hwloc_const_cpuset_t	 87
	22.2.2.2 hwloc_const_nodeset_t	 87
	22.2.2.3 hwloc_cpuset_t	 87
	22.2.2.4 hwloc_nodeset_t	 87
	22.3 Object Types	 88
	22.3.1 Detailed Description	 88
	22.3.2 Macro Definition Documentation	 88

CONTENTS vii

		22.3.2.1 HWLOC_OBJ_TYPE_MIN	88
	22.3.3	Typedef Documentation	89
		22.3.3.1 hwloc_obj_bridge_type_t	89
		22.3.3.2 hwloc_obj_cache_type_t	89
		22.3.3.3 hwloc_obj_osdev_type_t	89
	22.3.4	Enumeration Type Documentation	89
		22.3.4.1 hwloc_compare_types_e	89
		22.3.4.2 hwloc_obj_bridge_type_e	89
		22.3.4.3 hwloc_obj_cache_type_e	90
		22.3.4.4 hwloc_obj_osdev_type_e	90
		22.3.4.5 hwloc_obj_type_t	90
	22.3.5	Function Documentation	92
		22.3.5.1 hwloc_compare_types()	92
22.4	Object	Structure and Attributes	93
	22.4.1	Detailed Description	93
	22.4.2	Typedef Documentation	93
		22.4.2.1 hwloc_obj_t	93
22.5	Topolog	gy Creation and Destruction	94
	22.5.1	Detailed Description	94
	22.5.2	Typedef Documentation	94
		22.5.2.1 hwloc_topology_t	94
	22.5.3	Function Documentation	94
		22.5.3.1 hwloc_topology_abi_check()	94
		22.5.3.2 hwloc_topology_check()	95
		22.5.3.3 hwloc_topology_destroy()	95
		22.5.3.4 hwloc_topology_dup()	95
		22.5.3.5 hwloc_topology_init()	96
		22.5.3.6 hwloc_topology_load()	96
22.6	Object	levels, depths and types	97
	22.6.1	Detailed Description	97

viii CONTENTS

	22.6.2	Enumeration Type Documentation	97
		22.6.2.1 hwloc_get_type_depth_e	97
	22.6.3	Function Documentation	98
		22.6.3.1 hwloc_get_depth_type()	98
		22.6.3.2 hwloc_get_memory_parents_depth()	98
		22.6.3.3 hwloc_get_nbobjs_by_depth()	98
		22.6.3.4 hwloc_get_nbobjs_by_type()	99
		22.6.3.5 hwloc_get_next_obj_by_depth()	99
		22.6.3.6 hwloc_get_next_obj_by_type()	99
		22.6.3.7 hwloc_get_obj_by_depth()	99
		22.6.3.8 hwloc_get_obj_by_type()	99
		22.6.3.9 hwloc_get_root_obj()	00
		22.6.3.10 hwloc_get_type_depth()	00
		22.6.3.11 hwloc_get_type_or_above_depth()	00
		22.6.3.12 hwloc_get_type_or_below_depth()	01
		22.6.3.13 hwloc_topology_get_depth()	01
22.7	Conver	ing between Object Types and Attributes, and Strings	02
	22.7.1	Detailed Description	02
	22.7.2	Function Documentation	02
		22.7.2.1 hwloc_obj_attr_snprintf()	02
		22.7.2.2 hwloc_obj_type_snprintf()	03
		22.7.2.3 hwloc_obj_type_string()	03
		22.7.2.4 hwloc_type_sscanf()	04
		22.7.2.5 hwloc_type_sscanf_as_depth()	04
22.8	Consul	ing and Adding Key-Value Info Attributes	05
	22.8.1	Detailed Description	05
	22.8.2	Function Documentation	05
		22.8.2.1 hwloc_obj_add_info()	05
		22.8.2.2 hwloc_obj_get_info_by_name()	05
22.9	CPU bi	nding	06

CONTENTS

22.9.1	Detailed Description
22.9.2	Enumeration Type Documentation
	22.9.2.1 hwloc_cpubind_flags_t
22.9.3	Function Documentation
	22.9.3.1 hwloc_get_cpubind()
	22.9.3.2 hwloc_get_last_cpu_location()
	22.9.3.3 hwloc_get_proc_cpubind()
	22.9.3.4 hwloc_get_proc_last_cpu_location()
	22.9.3.5 hwloc_get_thread_cpubind()
	22.9.3.6 hwloc_set_cpubind()
	22.9.3.7 hwloc_set_proc_cpubind()
	22.9.3.8 hwloc_set_thread_cpubind()
22.10Memor	y binding
22.10.	Detailed Description
22.10.2	2 Enumeration Type Documentation
	22.10.2.1 hwloc_membind_flags_t
	22.10.2.2 hwloc_membind_policy_t
22.10.0	3 Function Documentation
	22.10.3.1 hwloc_alloc()
	22.10.3.2 hwloc_alloc_membind()
	22.10.3.3 hwloc_alloc_membind_policy()
	22.10.3.4 hwloc_free()
	22.10.3.5 hwloc_get_area_membind()
	22.10.3.6 hwloc_get_area_memlocation()
	22.10.3.7 hwloc_get_membind()
	22.10.3.8 hwloc_get_proc_membind()
	22.10.3.9 hwloc_set_area_membind()
	22.10.3.10hwloc_set_membind()
	22.10.3.11hwloc_set_proc_membind()
22.11 Chang	ing the Source of Topology Discovery

CONTENTS

22.11.1 Detailed Description	120
22.11.2 Enumeration Type Documentation	120
22.11.2.1 hwloc_topology_components_flag_e	120
22.11.3 Function Documentation	120
22.11.3.1 hwloc_topology_set_components()	121
22.11.3.2 hwloc_topology_set_pid()	121
22.11.3.3 hwloc_topology_set_synthetic()	121
22.11.3.4 hwloc_topology_set_xml()	122
22.11.3.5 hwloc_topology_set_xmlbuffer()	122
22.12Topology Detection Configuration and Query	123
22.12.1 Detailed Description	123
22.12.2 Enumeration Type Documentation	123
22.12.2.1 hwloc_topology_flags_e	123
22.12.2.2 hwloc_type_filter_e	125
22.12.3 Function Documentation	126
22.12.3.1 hwloc_topology_get_flags()	126
22.12.3.2 hwloc_topology_get_support()	126
22.12.3.3 hwloc_topology_get_type_filter()	127
22.12.3.4 hwloc_topology_get_userdata()	127
22.12.3.5 hwloc_topology_is_thissystem()	127
22.12.3.6 hwloc_topology_set_all_types_filter()	127
22.12.3.7 hwloc_topology_set_cache_types_filter()	127
22.12.3.8 hwloc_topology_set_flags()	128
22.12.3.9 hwloc_topology_set_icache_types_filter()	128
22.12.3.10hwloc_topology_set_io_types_filter()	128
22.12.3.11hwloc_topology_set_type_filter()	128
22.12.3.12hwloc_topology_set_userdata()	128
22.13Modifying a loaded Topology	129
22.13.1 Detailed Description	129
22.13.2 Enumeration Type Documentation	129

CONTENTS xi

22.13.2.1 hwloc_allow_flags_e	129
22.13.2.2 hwloc_restrict_flags_e	130
22.13.3 Function Documentation	130
22.13.3.1 hwloc_obj_add_other_obj_sets()	130
22.13.3.2 hwloc_topology_alloc_group_object()	131
22.13.3.3 hwloc_topology_allow()	131
22.13.3.4 hwloc_topology_insert_group_object()	132
22.13.3.5 hwloc_topology_insert_misc_object()	132
22.13.3.6 hwloc_topology_restrict()	133
22.14Finding Objects inside a CPU set	134
22.14.1 Detailed Description	134
22.14.2 Function Documentation	134
22.14.2.1 hwloc_get_first_largest_obj_inside_cpuset()	134
22.14.2.2 hwloc_get_largest_objs_inside_cpuset()	135
22.14.2.3 hwloc_get_nbobjs_inside_cpuset_by_depth()	135
22.14.2.4 hwloc_get_nbobjs_inside_cpuset_by_type()	135
22.14.2.5 hwloc_get_next_obj_inside_cpuset_by_depth()	136
22.14.2.6 hwloc_get_next_obj_inside_cpuset_by_type()	136
22.14.2.7 hwloc_get_obj_index_inside_cpuset()	136
22.14.2.8 hwloc_get_obj_inside_cpuset_by_depth()	137
22.14.2.9 hwloc_get_obj_inside_cpuset_by_type()	137
22.15Finding Objects covering at least CPU set	138
22.15.1 Detailed Description	138
22.15.2 Function Documentation	138
22.15.2.1 hwloc_get_child_covering_cpuset()	138
22.15.2.2 hwloc_get_next_obj_covering_cpuset_by_depth()	138
22.15.2.3 hwloc_get_next_obj_covering_cpuset_by_type()	139
22.15.2.4 hwloc_get_obj_covering_cpuset()	139
22.16Looking at Ancestor and Child Objects	140
22.16.1 Detailed Description	140

xii CONTENTS

22.16.2 Function Documentation	140
22.16.2.1 hwloc_get_ancestor_obj_by_depth()	140
22.16.2.2 hwloc_get_ancestor_obj_by_type()	140
22.16.2.3 hwloc_get_common_ancestor_obj()	141
22.16.2.4 hwloc_get_next_child()	141
22.16.2.5 hwloc_obj_is_in_subtree()	141
22.17 Kinds of object Type	142
22.17.1 Detailed Description	142
22.17.2 Function Documentation	142
22.17.2.1 hwloc_obj_type_is_cache()	142
22.17.2.2 hwloc_obj_type_is_dcache()	142
22.17.2.3 hwloc_obj_type_is_icache()	143
22.17.2.4 hwloc_obj_type_is_io()	143
22.17.2.5 hwloc_obj_type_is_memory()	143
22.17.2.6 hwloc_obj_type_is_normal()	143
22.18Looking at Cache Objects	144
22.18.1 Detailed Description	144
22.18.2 Function Documentation	144
22.18.2.1 hwloc_get_cache_covering_cpuset()	144
22.18.2.2 hwloc_get_cache_type_depth()	144
22.18.2.3 hwloc_get_shared_cache_covering_obj()	145
22.19Finding objects, miscellaneous helpers	146
22.19.1 Detailed Description	146
22.19.2 Function Documentation	146
22.19.2.1 hwloc_get_closest_objs()	146
22.19.2.2 hwloc_get_numanode_obj_by_os_index()	147
22.19.2.3 hwloc_get_obj_below_array_by_type()	147
22.19.2.4 hwloc_get_obj_below_by_type()	147
22.19.2.5 hwloc_get_pu_obj_by_os_index()	148
22.20 Distributing items over a topology	149

CONTENTS xiii

22.20.1 Detailed Description
22.20.2 Enumeration Type Documentation
22.20.2.1 hwloc_distrib_flags_e
22.20.3 Function Documentation
22.20.3.1 hwloc_distrib()
22.21 CPU and node sets of entire topologies
22.21.1 Detailed Description
22.21.2 Function Documentation
22.21.2.1 hwloc_topology_get_allowed_cpuset()
22.21.2.2 hwloc_topology_get_allowed_nodeset()
22.21.2.3 hwloc_topology_get_complete_cpuset()
22.21.2.4 hwloc_topology_get_complete_nodeset()
22.21.2.5 hwloc_topology_get_topology_cpuset()
22.21.2.6 hwloc_topology_get_topology_nodeset()
22.22Converting between CPU sets and node sets
22.22.1 Detailed Description
22.22.2 Function Documentation
22.22.2.1 hwloc_cpuset_from_nodeset()
22.22.2.2 hwloc_cpuset_to_nodeset()
22.23 Finding I/O objects
22.23.1 Detailed Description
22.23.2 Function Documentation
22.23.2.1 hwloc_bridge_covers_pcibus()
22.23.2.2 hwloc_get_next_bridge()
22.23.2.3 hwloc_get_next_osdev()
22.23.2.4 hwloc_get_next_pcidev()
22.23.2.5 hwloc_get_non_io_ancestor_obj()
22.23.2.6 hwloc_get_pcidev_by_busid()
22.23.2.7 hwloc_get_pcidev_by_busidstring()
22.24The bitmap API

xiv CONTENTS

22.24.1 Detailed Description
22.24.2 Macro Definition Documentation
22.24.2.1 hwloc_bitmap_foreach_begin
22.24.2.2 hwloc_bitmap_foreach_end
22.24.3 Typedef Documentation
22.24.3.1 hwloc_bitmap_t
22.24.3.2 hwloc_const_bitmap_t
22.24.4 Function Documentation
22.24.4.1 hwloc_bitmap_allbut()
22.24.4.2 hwloc_bitmap_alloc()
22.24.4.3 hwloc_bitmap_alloc_full()
22.24.4.4 hwloc_bitmap_and()
22.24.4.5 hwloc_bitmap_andnot()
22.24.4.6 hwloc_bitmap_asprintf()
22.24.4.7 hwloc_bitmap_clr()
22.24.4.8 hwloc_bitmap_clr_range()
22.24.4.9 hwloc_bitmap_compare()
22.24.4.10hwloc_bitmap_compare_first()
22.24.4.11hwloc_bitmap_copy()
22.24.4.12hwloc_bitmap_dup()
22.24.4.13hwloc_bitmap_fill()
22.24.4.14hwloc_bitmap_first()
22.24.4.15hwloc_bitmap_first_unset()
22.24.4.16hwloc_bitmap_free()
22.24.4.17hwloc_bitmap_from_ith_ulong()
22.24.4.18hwloc_bitmap_from_ulong()
22.24.4.19hwloc_bitmap_from_ulongs()
22.24.4.20hwloc_bitmap_intersects()
22.24.4.21hwloc_bitmap_isequal()
22.24.4.22hwloc_bitmap_isfull()

CONTENTS xv

	22.24.4.23hwloc_bitmap_isincluded()	165
	22.24.4.24hwloc_bitmap_isset()	165
	22.24.4.25hwloc_bitmap_iszero()	166
	22.24.4.26hwloc_bitmap_last()	166
	22.24.4.27hwloc_bitmap_last_unset()	166
	22.24.4.28hwloc_bitmap_list_asprintf()	166
	22.24.4.29hwloc_bitmap_list_snprintf()	167
	22.24.4.30hwloc_bitmap_list_sscanf()	167
	22.24.4.31hwloc_bitmap_next()	167
	22.24.4.32hwloc_bitmap_next_unset()	168
	22.24.4.33hwloc_bitmap_not()	168
	22.24.4.34hwloc_bitmap_nr_ulongs()	168
	22.24.4.35hwloc_bitmap_only()	168
	22.24.4.36hwloc_bitmap_or()	169
	22.24.4.37hwloc_bitmap_set()	169
	22.24.4.38hwloc_bitmap_set_ith_ulong()	169
	22.24.4.39hwloc_bitmap_set_range()	169
	22.24.4.40hwloc_bitmap_singlify()	170
	22.24.4.41hwloc_bitmap_snprintf()	170
	22.24.4.42hwloc_bitmap_sscanf()	170
	22.24.4.43hwloc_bitmap_taskset_asprintf()	171
	22.24.4.44hwloc_bitmap_taskset_snprintf()	171
	22.24.4.45hwloc_bitmap_taskset_sscanf()	171
	22.24.4.46hwloc_bitmap_to_ith_ulong()	172
	22.24.4.47hwloc_bitmap_to_ulong()	172
	22.24.4.48hwloc_bitmap_to_ulongs()	172
	22.24.4.49hwloc_bitmap_weight()	172
	22.24.4.50hwloc_bitmap_xor()	173
	22.24.4.51hwloc_bitmap_zero()	173
22.25Exporti	ing Topologies to XML	174

xvi CONTENTS

22.25.1 Detailed Description	174
22.25.2 Enumeration Type Documentation	174
22.25.2.1 hwloc_topology_export_xml_flags_e	174
22.25.3 Function Documentation	174
22.25.3.1 hwloc_export_obj_userdata()	175
22.25.3.2 hwloc_export_obj_userdata_base64()	175
22.25.3.3 hwloc_free_xmlbuffer()	175
22.25.3.4 hwloc_topology_export_xml()	176
22.25.3.5 hwloc_topology_export_xmlbuffer()	176
22.25.3.6 hwloc_topology_set_userdata_export_callback()	177
22.25.3.7 hwloc_topology_set_userdata_import_callback()	177
22.26 Exporting Topologies to Synthetic	178
22.26.1 Detailed Description	178
22.26.2 Enumeration Type Documentation	178
22.26.2.1 hwloc_topology_export_synthetic_flags_e	178
22.26.3 Function Documentation	179
22.26.3.1 hwloc_topology_export_synthetic()	179
22.27 Retrieve distances between objects	180
22.27.1 Detailed Description	180
22.27.2 Enumeration Type Documentation	180
22.27.2.1 hwloc_distances_kind_e	180
22.27.3 Function Documentation	181
22.27.3.1 hwloc_distances_get()	181
22.27.3.2 hwloc_distances_get_by_depth()	182
22.27.3.3 hwloc_distances_get_by_name()	182
22.27.3.4 hwloc_distances_get_by_type()	182
22.27.3.5 hwloc_distances_get_name()	182
22.27.3.6 hwloc_distances_release()	182
22.28 Helpers for consulting distance matrices	183
22.28.1 Detailed Description	183

CONTENTS xvii

22.28.2 Function Documentation	83
22.28.2.1 hwloc_distances_obj_index()	83
22.28.2.2 hwloc_distances_obj_pair_values()	83
22.29 Add or remove distances between objects	84
22.29.1 Detailed Description	84
22.29.2 Enumeration Type Documentation	84
22.29.2.1 hwloc_distances_add_flag_e	84
22.29.3 Function Documentation	84
22.29.3.1 hwloc_distances_add()	84
22.29.3.2 hwloc_distances_release_remove()	85
22.29.3.3 hwloc_distances_remove()	85
22.29.3.4 hwloc_distances_remove_by_depth()	85
22.29.3.5 hwloc_distances_remove_by_type()	85
22.30Linux-specific helpers	86
22.30.1 Detailed Description	86
22.30.2 Function Documentation	86
22.30.2.1 hwloc_linux_get_tid_cpubind()	86
22.30.2.2 hwloc_linux_get_tid_last_cpu_location()	86
22.30.2.3 hwloc_linux_read_path_as_cpumask()	87
22.30.2.4 hwloc_linux_set_tid_cpubind()	87
22.31 Interoperability with Linux libnuma unsigned long masks	88
22.31.1 Detailed Description	88
22.31.2 Function Documentation	88
22.31.2.1 hwloc_cpuset_from_linux_libnuma_ulongs()	88
22.31.2.2 hwloc_cpuset_to_linux_libnuma_ulongs()	89
22.31.2.3 hwloc_nodeset_from_linux_libnuma_ulongs()	89
22.31.2.4 hwloc_nodeset_to_linux_libnuma_ulongs()	89
22.32 Interoperability with Linux libnuma bitmask	90
22.32.1 Detailed Description	90
22.32.2 Function Documentation	90

xviii CONTENTS

22.32.2.1 hwloc_cpuset_from_linux_libnuma_bitmask()	90
22.32.2.2 hwloc_cpuset_to_linux_libnuma_bitmask()	90
22.32.2.3 hwloc_nodeset_from_linux_libnuma_bitmask()	91
22.32.2.4 hwloc_nodeset_to_linux_libnuma_bitmask()	91
22.33 Interoperability with glibc sched affinity	92
22.33.1 Detailed Description	92
22.33.2 Function Documentation	92
22.33.2.1 hwloc_cpuset_from_glibc_sched_affinity()	92
22.33.2.2 hwloc_cpuset_to_glibc_sched_affinity()	92
22.34Interoperability with OpenCL	93
22.34.1 Detailed Description	93
22.34.2 Function Documentation	93
22.34.2.1 hwloc_opencl_get_device_cpuset()	93
22.34.2.2 hwloc_opencl_get_device_osdev()	94
22.34.2.3 hwloc_opencl_get_device_osdev_by_index()	94
22.34.2.4 hwloc_opencl_get_device_pci_busid()	94
22.35 Interoperability with the CUDA Driver API	95
22.35.1 Detailed Description	95
22.35.2 Function Documentation	95
22.35.2.1 hwloc_cuda_get_device_cpuset()	95
22.35.2.2 hwloc_cuda_get_device_osdev()	95
22.35.2.3 hwloc_cuda_get_device_osdev_by_index()	96
22.35.2.4 hwloc_cuda_get_device_pci_ids()	96
22.35.2.5 hwloc_cuda_get_device_pcidev()	96
22.36 Interoperability with the CUDA Runtime API	97
22.36.1 Detailed Description	97
22.36.2 Function Documentation	97
22.36.2.1 hwloc_cudart_get_device_cpuset()	97
22.36.2.2 hwloc_cudart_get_device_osdev_by_index()	97
22.36.2.3 hwloc_cudart_get_device_pci_ids()	98

CONTENTS xix

22.36.2.4 hwloc_cudart_get_device_pcidev()
22.37 Interoperability with the NVIDIA Management Library
22.37.1 Detailed Description
22.37.2 Function Documentation
22.37.2.1 hwloc_nvml_get_device_cpuset()
22.37.2.2 hwloc_nvml_get_device_osdev()
22.37.2.3 hwloc_nvml_get_device_osdev_by_index()
22.38Interoperability with OpenGL displays
22.38.1 Detailed Description
22.38.2 Function Documentation
22.38.2.1 hwloc_gl_get_display_by_osdev()
22.38.2.2 hwloc_gl_get_display_osdev_by_name()
22.38.2.3 hwloc_gl_get_display_osdev_by_port_device()
22.39Interoperability with Intel Xeon Phi (MIC)
22.39.1 Detailed Description
22.39.2 Function Documentation
22.39.2.1 hwloc_intel_mic_get_device_cpuset()
22.39.2.2 hwloc_intel_mic_get_device_osdev_by_index()
22.40 Interoperability with OpenFabrics
22.40.1 Detailed Description
22.40.2 Function Documentation
22.40.2.1 hwloc_ibv_get_device_cpuset()
22.40.2.2 hwloc_ibv_get_device_osdev()
22.40.2.3 hwloc_ibv_get_device_osdev_by_name()
22.41Topology differences
22.41.1 Detailed Description
22.41.2 Typedef Documentation
22.41.2.1 hwloc_topology_diff_obj_attr_type_t
22.41.2.2 hwloc_topology_diff_t
22.41.2.3 hwloc_topology_diff_type_t

CONTENTS

22.41.3 Enumeration Type Documentation)7
22.41.3.1 hwloc_topology_diff_apply_flags_e)7
22.41.3.2 hwloc_topology_diff_obj_attr_type_e)7
22.41.3.3 hwloc_topology_diff_type_e)9
22.41.4 Function Documentation)9
22.41.4.1 hwloc_topology_diff_apply())9
22.41.4.2 hwloc_topology_diff_build()	10
22.41.4.3 hwloc_topology_diff_destroy()	10
22.41.4.4 hwloc_topology_diff_export_xml()	11
22.41.4.5 hwloc_topology_diff_export_xmlbuffer()	11
22.41.4.6 hwloc_topology_diff_load_xml()	11
22.41.4.7 hwloc_topology_diff_load_xmlbuffer()	12
22.42Sharing topologies between processes	13
22.42.1 Detailed Description	13
22.42.2 Function Documentation	13
22.42.2.1 hwloc_shmem_topology_adopt()	13
22.42.2.2 hwloc_shmem_topology_get_length()	14
22.42.2.3 hwloc_shmem_topology_write()	14
22.43Components and Plugins: Discovery components	16
22.43.1 Detailed Description	16
22.44Components and Plugins: Discovery backends	17
22.44.1 Detailed Description	17
22.44.2 Typedef Documentation	17
22.44.2.1 hwloc_disc_phase_t	17
22.44.3 Enumeration Type Documentation	17
22.44.3.1 hwloc_disc_phase_e	17
22.44.3.2 hwloc_disc_status_flag_e	18
22.44.4 Function Documentation	18
22.44.4.1 hwloc_backend_alloc()	18
22.44.4.2 hwloc_backend_enable()	18

CONTENTS xxi

22.45 Components and Plugins: Generic components
22.45.1 Detailed Description
22.45.2 Typedef Documentation
22.45.2.1 hwloc_component_type_t
22.45.3 Enumeration Type Documentation
22.45.3.1 hwloc_component_type_e
22.46Components and Plugins: Core functions to be used by components
22.46.1 Detailed Description
22.46.2 Typedef Documentation
22.46.2.1 hwloc_report_error_t
22.46.3 Function Documentation
22.46.3.1 hwlocinsert_object_by_cpuset()
22.46.3.2 hwloc_alloc_setup_object()
22.46.3.3 hwloc_hide_errors()
22.46.3.4 hwloc_insert_object_by_cpuset()
22.46.3.5 hwloc_insert_object_by_parent()
22.46.3.6 hwloc_obj_add_children_sets()
22.46.3.7 hwloc_plugin_check_namespace()
22.46.3.8 hwloc_report_os_error()
22.46.3.9 hwloc_topology_reconnect()
22.47Components and Plugins: Filtering objects
22.47.1 Detailed Description
22.47.2 Function Documentation
22.47.2.1 hwloc_filter_check_keep_object()
22.47.2.2 hwloc_filter_check_keep_object_type()
22.47.2.3 hwloc_filter_check_osdev_subtype_important()
22.47.2.4 hwloc_filter_check_pcidev_subtype_important()
22.48Components and Plugins: helpers for PCI discovery
22.48.1 Detailed Description
22.48.2 Function Documentation

xxii CONTENTS

			22.48.2.1	hwloc_	pcidiso	_check	<_bridg	ge_type	()			 	 	 	226
			22.48.2.2	hwloc_	pcidisc	_find_l	oridge_	_buses	0			 	 	 	226
			22.48.2.3	hwloc_	pcidiso	c_find_c	cap()					 	 	 	227
			22.48.2.4	hwloc_	pcidisc	_find_l	inkspe	ed() .				 	 	 	227
			22.48.2.5	hwloc_	pcidisc	c_tree_	attach(()				 	 	 	227
			22.48.2.6	hwloc_	pcidisc	c_tree_i	insert_	_by_bus	sid() .			 	 	 	227
	22.490	Compo	nents and F	Plugins	: findin	g PCI o	objects	during	other	discov	eries/	 	 	 	228
	2	22.49.1	Detailed D	Descript	ion .							 	 	 	228
	2	22.49.2	Prunction D	Docume	entation	١						 	 	 	228
			22.49.2.1	hwloc_	pci_fin	d_pare	nt_by_	_busid()				 	 	 	228
	22.501	Netloc .	API									 	 	 	229
	2	22.50.1	Detailed D	Descript	ion .							 	 	 	229
	2	22.50.2	? Enumeration	ion Type	e Docu	ımentat	ion .					 	 	 	229
			22.50.2.1	anonyn	nous e	num .						 	 	 	229
23	Data S	Structu	ire Docume	entatio	n										231
23			ire Docume backend Str			e						 	 	 	
23	23.1 h	nwloc_		truct Re	ferenc										231
23	23.1 h	nwloc_ 23.1.1	backend St	truct Re	ferenc							 	 	 	231 231
23	23.1 h	nwloc_ 23.1.1	backend Str	truct Re Descript	ferencion .							 	 	 	231231231
23	23.1 h	nwloc_ 23.1.1	backend Str Detailed D Field Docu	truct Re Descript umental disable	ferencion .							 	 	 	231231231232
23	23.1 h	nwloc_ 23.1.1	Detailed D Field Docu 23.1.2.1	erruct Re Descript umental disable discove	ferencion							 	 	 	231231231232232
23	23.1 h	nwloc_ 23.1.1	Detailed D Field Docu 23.1.2.1	Descript umental disable discove flags	ferencion .							 	 	 	231 231 231 232 232 232
23	23.1 h	nwloc_ 23.1.1	Detailed D Field Docu 23.1.2.1 23.1.2.2 23.1.2.3	Descript Umental disable discove flags get_pci	ference ion tion er									 	231 231 231 232 232 232 232
23	23.1 h	nwloc_ 23.1.1	Detailed D Field Docu 23.1.2.1 (23.1.2.2 (23.1.2.3 (23.1.2.4 (23.1	cruct Re Descript Umentat disable discove flags get_pci is_thiss	ference ion . er _busicesystem									 	231 231 231 232 232 232 232 232
23	23.1 h	nwloc_ 23.1.1	Detailed D Field Docu 23.1.2.1 23.1.2.2 23.1.2.3 23.1.2.3 23.1.2.4 23.1.2.5	Descript umental disable discove flags get_pci is_thiss phases	ferenction tion										231 231 231 232 232 232 232 232
23	23.1 h	nwloc_ 23.1.1 23.1.2	Detailed D Field Docu 23.1.2.1 23.1.2.2 23.1.2.3 23.1.2.4 23.1.2.5 23.1.2.6	disable discove flags . get_pci is_thiss phases	ference ion . tion . er busic system data										231 231 231 232 232 232 232 232 232 233
23	23.1 h 2 2 2 23.2 h	nwloc_ 23.1.1 23.1.2	Detailed D Field Docu 23.1.2.1 23.1.2.2 23.1.2.3 23.1.2.4 23.1.2.5 23.1.2.6 23.1.2.7	cruct Re Descript Umental disable discove flags get_pci is_thiss phases private_ chwloc_	ferenction tion er _busicesystem _data bridge		et								231 231 231 232 232 232 232 232 233 233
23	23.1 h	nwloc_ 23.1.1 23.1.2	Detailed D Field Docu 23.1.2.1 23.1.2.2 23.1.2.3 23.1.2.4 23.1.2.5 23.1.2.6 23.1.2.7 obj_attr_u::	cruct Re Descript Umental disable discove flags get_pci is_thiss phases private_ chwloc_ Descript	ference ion ition i_busic gystemdata bridge ion		et								231 231 232 232 232 232 232 233 233 233
23	23.1 h	nwloc_ 23.1.1 23.1.2	Detailed D Field Docu 23.1.2.1 23.1.2.2 23.1.2.3 23.1.2.4 23.1.2.5 23.1.2.6 23.1.2.7 obj_attr_u:: Detailed D	cruct Re Descript umental disable discove flags get_pci is_thiss phases private_ chwloc_ Descript umental	ference ion tion _busic system _data bridge ion tion										231 231 232 232 232 232 232 233 233 233

CONTENTS xxiii

	23.2.2.3 downstream	234
	23.2.2.4 downstream_type	234
	23.2.2.5 pci [1/2]	234
	23.2.2.6 pci [2/2]	234
	23.2.2.7 secondary_bus	234
	23.2.2.8 subordinate_bus	234
	23.2.2.9 upstream	234
	23.2.2.10 upstream_type	235
23.3 hwloc_	obj_attr_u::hwloc_cache_attr_s Struct Reference	235
23.3.1	Detailed Description	235
23.3.2	Field Documentation	235
	23.3.2.1 associativity	235
	23.3.2.2 depth	235
	23.3.2.3 linesize	236
	23.3.2.4 size	236
	23.3.2.5 type	236
23.4 hwloc_	cl_device_topology_amd Union Reference	236
23.4.1	Field Documentation	236
	23.4.1.1 bus	237
	23.4.1.2 data	237
	23.4.1.3 device	237
	23.4.1.4 function	237
	23.4.1.5 pcie	237
	23.4.1.6 raw	237
	23.4.1.7 type	237
	23.4.1.8 unused	238
23.5 hwloc_	component Struct Reference	238
23.5.1	Detailed Description	238
23.5.2	Field Documentation	238
	23.5.2.1 abi	238

xxiv CONTENTS

	23.5.2.2 data
	23.5.2.3 finalize
	23.5.2.4 flags
	23.5.2.5 init
	23.5.2.6 type
23.6 hwloc	_disc_component Struct Reference
23.6.1	Detailed Description
23.6.2	Field Documentation
	23.6.2.1 enabled_by_default
	23.6.2.2 excluded_phases
	23.6.2.3 instantiate
	23.6.2.4 name
	23.6.2.5 phases
	23.6.2.6 priority
23.7 hwloc	_disc_status Struct Reference
23.7.1	Detailed Description
23.7.2	Field Documentation
	23.7.2.1 excluded_phases
	23.7.2.2 flags
	23.7.2.3 phase
23.8 hwloc	_distances_s Struct Reference
23.8.1	Detailed Description
23.8.2	Field Documentation
	23.8.2.1 kind
	23.8.2.2 nbobjs
	23.8.2.3 objs
	23.8.2.4 values
23.9 hwloc	_obj_attr_u::hwloc_group_attr_s Struct Reference
23.9.1	Detailed Description
23.9.2	Field Documentation

CONTENTS xxv

23.9.2.1 depth
23.9.2.2 dont_merge
23.9.2.3 kind
23.9.2.4 subkind
23.10hwloc_info_s Struct Reference
23.10.1 Detailed Description
23.10.2 Field Documentation
23.10.2.1 name
23.10.2.2 value
23.11hwloc_obj_attr_u::hwloc_numanode_attr_s::hwloc_memory_page_type_s Struct Reference 246
23.11.1 Detailed Description
23.11.2 Field Documentation
23.11.2.1 count
23.11.2.2 size
23.12hwloc_obj_attr_u::hwloc_numanode_attr_s Struct Reference
23.12.1 Detailed Description
23.12.2 Field Documentation
23.12.2.1 local_memory
23.12.2.2 page_types
23.12.2.3 page_types_len
23.13hwloc_obj Struct Reference
23.13.1 Detailed Description
23.13.2 Field Documentation
23.13.2.1 arity
23.13.2.2 attr
23.13.2.3 children
23.13.2.4 complete_cpuset
23.13.2.5 complete_nodeset
23.13.2.6 cpuset
23.13.2.7 depth

xxvi CONTENTS

	23.13.2.8 first_child	251
	23.13.2.9 gp_index	251
	23.13.2.10nfos	251
	23.13.2.11infos_count	251
	23.13.2.12o_arity	251
	23.13.2.13o_first_child	251
	23.13.2.14ast_child	252
	23.13.2.15ogical_index	252
	23.13.2.16memory_arity	252
	23.13.2.17memory_first_child	252
	23.13.2.18misc_arity	252
	23.13.2.19misc_first_child	252
	23.13.2.20name	253
	23.13.2.21next_cousin	253
	23.13.2.22next_sibling	253
	23.13.2.23nodeset	253
	23.13.2.24os_index	254
	23.13.2.25parent	254
	23.13.2.2@prev_cousin	254
	23.13.2.27prev_sibling	254
	23.13.2.28sibling_rank	254
	23.13.2.29subtype	254
	23.13.2.30symmetric_subtree	255
	23.13.2.31total_memory	255
	23.13.2.32type	255
	23.13.2.33userdata	255
23.14hwloc_c	obj_attr_u Union Reference	255
23.14.1	Detailed Description	256
23.14.2	Prield Documentation	256
	23.14.2.1 bridge	256

CONTENTS xxvii

23.14.2.2 cache	256
23.14.2.3 group	256
23.14.2.4 numanode	256
23.14.2.5 osdev	256
23.14.2.6 pcidev	257
23.15hwloc_obj_attr_u::hwloc_osdev_attr_s Struct Reference	257
23.15.1 Detailed Description	257
23.15.2 Field Documentation	257
23.15.2.1 type	257
23.16hwloc_obj_attr_u::hwloc_pcidev_attr_s Struct Reference	257
23.16.1 Detailed Description	258
23.16.2 Field Documentation	258
23.16.2.1 bus	258
23.16.2.2 class_id	258
23.16.2.3 dev	258
23.16.2.4 device_id	258
23.16.2.5 domain	259
23.16.2.6 func	259
23.16.2.7 linkspeed	259
23.16.2.8 revision	259
23.16.2.9 subdevice_id	259
23.16.2.10subvendor_id	259
23.16.2.11vendor_id	259
23.17hwloc_topology_cpubind_support Struct Reference	260
23.17.1 Detailed Description	260
23.17.2 Field Documentation	260
23.17.2.1 get_proc_cpubind	260
23.17.2.2 get_proc_last_cpu_location	260
23.17.2.3 get_thisproc_cpubind	260
23.17.2.4 get_thisproc_last_cpu_location	261

xxviii CONTENTS

23.17.2.5 get_thisthread_cpubind	261
23.17.2.6 get_thisthread_last_cpu_location	261
23.17.2.7 get_thread_cpubind	261
23.17.2.8 set_proc_cpubind	261
23.17.2.9 set_thisproc_cpubind	261
23.17.2.10set_thisthread_cpubind	261
23.17.2.11set_thread_cpubind	262
23.18hwloc_topology_diff_u::hwloc_topology_diff_generic_s Struct Reference	262
23.18.1 Field Documentation	262
23.18.1.1 next	262
23.18.1.2 type	262
23.19hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_generic_s Struct Reference 2	262
23.19.1 Field Documentation	263
23.19.1.1 type	263
23.20 hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s Struct Reference	263
23.20.1 Field Documentation	263
23.20.1.1 diff	263
23.20.1.2 next	263
23.20.1.3 obj_depth	264
23.20.1.4 obj_index	264
23.20.1.5 type	264
23.21 hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_string_s Struct Reference 2	264
23.21.1 Detailed Description	264
23.21.2 Field Documentation	264
23.21.2.1 name	264
23.21.2.2 newvalue	265
23.21.2.3 oldvalue	265
23.21.2.4 type	265
23.22hwloc_topology_diff_obj_attr_u Union Reference	265
23.22.1 Detailed Description	265

CONTENTS xxix

23.22.2 Field Documentation	265
23.22.2.1 generic	266
23.22.2.2 string	266
23.22.2.3 uint64	266
23.23hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_uint64_s Struct Reference	266
23.23.1 Detailed Description	266
23.23.2 Field Documentation	266
23.23.2.1 index	267
23.23.2.2 newvalue	267
23.23.2.3 oldvalue	267
23.23.2.4 type	267
23.24hwloc_topology_diff_u::hwloc_topology_diff_too_complex_s Struct Reference	267
23.24.1 Field Documentation	267
23.24.1.1 next	268
23.24.1.2 obj_depth	268
23.24.1.3 obj_index	268
23.24.1.4 type	268
23.25hwloc_topology_diff_u Union Reference	268
23.25.1 Detailed Description	268
23.25.2 Field Documentation	269
23.25.2.1 generic	269
23.25.2.2 obj_attr	269
23.25.2.3 too_complex	269
23.26hwloc_topology_discovery_support Struct Reference	269
23.26.1 Detailed Description	269
23.26.2 Field Documentation	269
23.26.2.1 disallowed_numa	270
23.26.2.2 disallowed_pu	270
23.26.2.3 numa	270
23.26.2.4 numa_memory	270

CONTENTS

23.26.2.5 pu	 270
23.27hwloc_topology_membind_support Struct Reference	 270
23.27.1 Detailed Description	 271
23.27.2 Field Documentation	 271
23.27.2.1 alloc_membind	 271
23.27.2.2 bind_membind	 271
23.27.2.3 firsttouch_membind	 271
23.27.2.4 get_area_membind	 272
23.27.2.5 get_area_memlocation	 272
23.27.2.6 get_proc_membind	 272
23.27.2.7 get_thisproc_membind	 272
23.27.2.8 get_thisthread_membind	 272
23.27.2.9 interleave_membind	 272
23.27.2.10migrate_membind	 272
23.27.2.11nexttouch_membind	 272
23.27.2.12set_area_membind	 273
23.27.2.13set_proc_membind	 273
23.27.2.14set_thisproc_membind	 273
23.27.2.15set_thisthread_membind	 273
23.28hwloc_topology_support Struct Reference	 273
23.28.1 Detailed Description	 273
23.28.2 Field Documentation	 274
23.28.2.1 cpubind	 274
23.28.2.2 discovery	 274
23.28.2.3 membind	274

Chapter 1

Hardware Locality

Portable abstraction of parallel architectures for high-performance computing

1.1 Introduction

The Hardware Locality (hwloc) software project aims at easing the process of discovering hardware resources in parallel architectures. It offers command-line tools and a C API for consulting these resources, their locality, attributes, and interconnection. hwloc primarily aims at helping high-performance computing (HPC) applications, but is also applicable to any project seeking to exploit code and/or data locality on modern computing platforms.

hwloc is actually made of two subprojects distributed together:

- The original hwloc project for describing the internals of computing nodes. It is described in details starting at section Hardware Locality (hwloc) Introduction.
- The network-oriented companion called netloc (Network Locality), described in details starting with section Network Locality (netloc).

Netloc may be disabled, but the original hwloc cannot. Both hwloc and netloc APIs are documented after these sections.

1.2 Installation

hwloc (http://www.open-mpi.org/projects/hwloc/) is available under the BSD license. It is hosted as a sub-project of the overall Open MPI project (http://www.open-mpi.org/). Note that hwloc does not require any functionality from Open MPI – it is a wholly separate (and much smaller!) project and code base. It just happens to be hosted as part of the overall Open MPI project.

2 Hardware Locality

1.2.1 Basic Installation

Installation is the fairly common GNU-based process:

```
shell$ ./configure --prefix=...
shell$ make
shell$ make install
```

hwloc- and netloc-specific configure options and requirements are documented in sections hwloc Installation and Netloc Installation respectively.

Also note that if you install supplemental libraries in non-standard locations, hwloc's configure script may not be able to find them without some help. You may need to specify additional CPPFLAGS, LDFLAGS, or PKG_CONF← IG_PATH values on the configure command line.

For example, if libpciaccess was installed into /opt/pciaccess, hwloc's configure script may not find it be default. Try adding PKG_CONFIG_PATH to the ./configure command line, like this:

```
./configure PKG_CONFIG_PATH=/opt/pciaccess/lib/pkgconfig ...
```

Running the "Istopo" tool is a good way to check as a graphical output whether hwloc properly detected the architecture of your node. Netloc command-line tools can be used to display the network topology interconnecting your nodes.

1.2.2 Installing from a Git clone

Additionally, the code can be directly cloned from Git:

```
shell$ git clone https://github.com/open-mpi/hwloc.git
shell$ cd hwloc
shell$ ./autogen.sh
```

Note that GNU Autoconf >=2.63, Automake >=1.11 and Libtool >=2.2.6 are required when building from a Git clone.

Nightly development snapshots are available on the web site, they can be configured and built without any need for Git or GNU Autotools.

1.3 Questions and Bugs

Bugs should be reported in the tracker (https://github.com/open-mpi/hwloc/issues). Opening a new issue automatically displays lots of hints about how to debug and report issues.

Questions may be sent to the users or developers mailing lists (http://www.open-mpi.org/community/lists/hwloc.ephp).

There is also a #hwloc IRC channel on Freenode (irc.freenode.net).

Chapter 2

Hardware Locality (hwloc) Introduction

Portable abstraction of hierarchical architectures for high-performance computing

See also Further Reading for links to more sections about hwloc concepts.

2.1 hwloc Summary

hwloc provides command line tools and a C API to obtain the hierarchical map of key computing elements within a node, such as: NUMA memory nodes, shared caches, processor packages, dies and cores, processing units (logical processors or "threads") and even I/O devices. hwloc also gathers various attributes such as cache and memory information, and is portable across a variety of different operating systems and platforms.

hwloc primarily aims at helping high-performance computing (HPC) applications, but is also applicable to any project seeking to exploit code and/or data locality on modern computing platforms.

hwloc supports the following operating systems:

- Linux (including old kernels not having sysfs topology information, with knowledge of cpusets, ScaleMP vSMP support, etc.) on all supported hardware, including Intel Xeon Phi and NumaScale NumaConnect.
- · Solaris (with support for processor sets and logical domains)
- AIX
- Darwin / OS X
- FreeBSD and its variants (such as kFreeBSD/GNU)
- NetBSD
- HP-UX
- · Microsoft Windows
- IBM BlueGene/Q Compute Node Kernel (CNK)

Since it uses standard Operating System information, hwloc's support is mostly independant from the processor type (x86, powerpc, ...) and just relies on the Operating System support. The main exception is BSD operating systems (NetBSD, FreeBSD, etc.) because they do not provide support topology information, hence hwloc uses an x86-only CPUID-based backend (which can be used for other OSes too, see the Components and plugins section).

To check whether hwloc works on a particular machine, just try to build it and run lstopo or lstopo-no-graphics. If some things do not look right (e.g. bogus or missing cache information), see Questions and Bugs.

hwloc only reports the number of processors on unsupported operating systems; no topology information is available.

For development and debugging purposes, hwloc also offers the ability to work on "fake" topologies:

- Symmetrical tree of resources generated from a list of level arities, see Synthetic topologies.
- Remote machine simulation through the gathering of topology as XML files, see Importing and exporting topologies from/to XML files.

hwloc can display the topology in a human-readable format, either in graphical mode (X11), or by exporting in one of several different formats, including: plain text, PDF, PNG, and FIG (see Command-line Examples below). Note that some of the export formats require additional support libraries.

hwloc offers a programming interface for manipulating topologies and objects. It also brings a powerful CPU bitmap API that is used to describe topology objects location on physical/logical processors. See the Programming Interface below. It may also be used to binding applications onto certain cores or memory nodes. Several utility programs are also provided to ease command-line manipulation of topology objects, binding of processes, and so on.

Perl bindings are available from Bernd Kallies on CPAN.

Python bindings are available from Guy Streeter:

- Fedora RPM and tarball.
- git tree (html).

2.2 hwloc Installation

The generic installation procedure for both hwloc and netloc is described in Installation.

The hwloc command-line tool "Istopo" produces human-readable topology maps, as mentioned above. It can also export maps to the "fig" file format. Support for PDF, Postscript, and PNG exporting is provided if the "Cairo" development package (usually cairo-devel or libcairo2-dev) can be found in "Istopo" when hwloc is configured and build.

The hwloc core may also benefit from the following development packages:

- libpciaccess for full I/O device discovery (libpciaccess-devel or libpciaccess-dev package). On Linux, PCI discovery may still be performed (without vendor/device names) even if libpciaccess cannot be used.
- · AMD or NVIDIA OpenCL implementations for OpenCL device discovery.
- the NVIDIA CUDA Toolkit for CUDA device discovery.


- the NVIDIA Management Library (NVML) for NVML device discovery. It is included in CUDA since version 8.0. Older NVML releases were available within the NVIDIA GPU Deployment Kit from https://developer.nvidia.com/gpu-deployment-kit.
- the NV-CONTROL X extension library (NVCtrl) for NVIDIA display discovery. The relevant development package is usually libXNVCtrl-devel or libxnvctrl-dev. It is also available within nvidia-settings from ftp://download.nvidia.com/XFree86/nvidia-settings/ and https://github.com/NVIDIA/nvidia-settings/.
- libxml2 for full XML import/export support (otherwise, the internal minimalistic parser will only be able to import XML files that were exported by the same hwloc release). See Importing and exporting topologies from/to XML files for details. The relevant development package is usually libxml2-devel or libxml2-dev.
- libudev on Linux for easier discovery of OS device information (otherwise hwloc will try to manually parse udev raw files). The relevant development package is usually libudev-devel or libudev-dev.
- libtool's ltdl library for dynamic plugin loading. The relevant development package is usually libtool-ltdl-devel or libltdl-dev.

PCI and XML support may be statically built inside the main hwloc library, or as separate dynamically-loaded plugins (see the Components and plugins section).

Note that because of the possibility of GPL taint, the pciutils library libpci will not be used (remember that hwloc is BSD-licensed).

2.3 Command-line Examples

On a 4-package 2-core machine with hyper-threading, the lstopo tool may show the following graphical output:

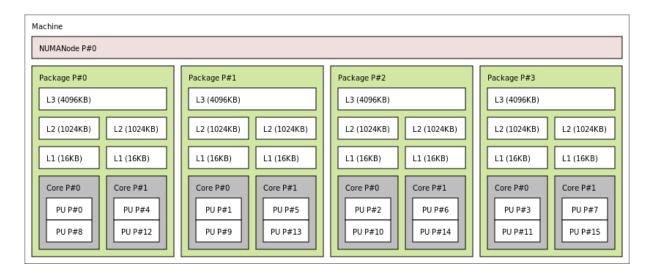

Here's the equivalent output in textual form:

```
Machine

NUMANode L#0 (P#0)

Package L#0 + L3 L#0 (4096KB)

L2 L#0 (1024KB) + L1 L#0 (16KB) + Core L#0

PU L#0 (P#0)

PU L#1 (P#8)


L2 L#1 (1024KB) + L1 L#1 (16KB) + Core L#1

PU L#2 (P#4)
```

```
PU L#3 (P#12)
Package L#1 + L3 L#1 (4096KB)
 L2 L#2 (1024KB) + L1 L#2 (16KB) + Core L#2
    PU L#4 (P#1)
   PU L#5 (P#9)
  L2 L#3 (1024KB) + L1 L#3 (16KB) + Core L#3
   PU L#6 (P#5)
   PU L#7 (P#13)
Package L#2 + L3 L#2 (4096KB)
 L2 L#4 (1024KB) + L1 L#4 (16KB) + Core L#4
    PU L#8 (P#2)
   PU L#9 (P#10)
 L2 L#5 (1024KB) + L1 L#5 (16KB) + Core L#5
    PU L#10 (P#6)
   PU L#11 (P#14)
Package L#3 + L3 L#3 (4096KB)
  L2 L#6 (1024KB) + L1 L#6 (16KB) + Core L#6
   PU L#12 (P#3)
   PU L#13 (P#11)
  L2 L\#7 (1024KB) + L1 L\#7 (16KB) + Core L\#7
   PU L#14 (P#7)
    PU L#15 (P#15)
```

Note that there is also an equivalent output in XML that is meant for exporting/importing topologies but it is hardly readable to human-beings (see Importing and exporting topologies from/to XML files for details).


On a 4-package 2-core Opteron NUMA machine (with two core cores disallowed by the administrator), the lstopo tool may show the following graphical output (with --disallowed for displaying disallowed objects):

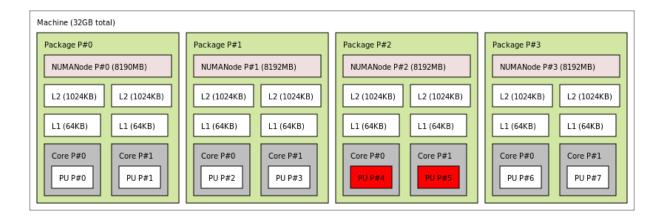

Here's the equivalent output in textual form:

```
Machine (32GB total)
  Package L#0
    NUMANode L#0 (P#0 8190MB)
    L2 L\#0 (1024KB) + L1 L\#0 (64KB) + Core L\#0 + PU L\#0 (P\#0)
    L2 L#1 (1024KB) + L1 L#1 (64KB) + Core L#1 + PU L#1 (P#1)
  Package L#1
    NUMANode L#1 (P#1 8192MB)
    L2 L#2 (1024KB) + L1 L#2 (64KB) + Core L#2 + PU L#2 (P#2)
    L2 L#3 (1024KB) + L1 L#3 (64KB) + Core L#3 + PU L#3 (P#3)
  Package L#2
    NUMANode L#2 (P#2 8192MB)
    L2 L#4 (1024KB) + L1 L#4 (64KB) + Core L#4 + PU L#4 (P#4)
    L2 L#5 (1024KB) + L1 L#5 (64KB) + Core L#5 + PU L#5 (P#5)
  Package L#3
    NUMANode L#3 (P#3 8192MB)
    L2 L#6 (1024KB) + L1 L#6 (64KB) + Core L#6 + PU L#6 (P#6)
    L2 L\#7 (1024KB) + L1 L\#7 (64KB) + Core L\#7 + PU L\#7 (P\#7)
```

On a 2-package quad-core Xeon (pre-Nehalem, with 2 dual-core dies into each package):

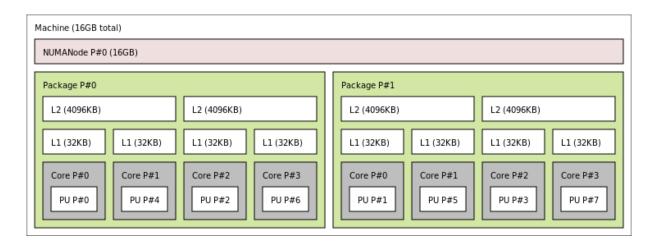

Here's the same output in textual form:

```
Machine (total 16GB)
  NUMANode L#0 (P#0 16GB)
  Package L#0
    T_{1}2 T_{1}#0 (4096KB)
      L1 L\#0 (32KB) + Core L\#0 + PU L\#0 (P\#0)
      L1 L#1 (32KB) + Core L#1 + PU L#1 (P#4)
    L2 L#1 (4096KB)
      L1 L#2 (32KB) + Core L#2 + PU L#2 (P#2)
      L1 L#3 (32KB) + Core L#3 + PU L#3 (P#6)
  Package L#1
    L2 L#2 (4096KB)
      L1 L#4 (32KB) + Core L#4 + PU L#4 (P#1)
      L1 L#5 (32KB) + Core L#5 + PU L#5 (P#5)
    L2 L#3 (4096KB)
      L1 L\#6 (32KB) + Core L\#6 + PU L\#6 (P\#3)
      L1 L#7 (32KB) + Core L#7 + PU L#7 (P#7)
```

2.4 Programming Interface

The basic interface is available in **hwloc.h**. Some higher-level functions are available in **hwloc/helper.h** to reduce the need to manually manipulate objects and follow links between them. Documentation for all these is provided later in this document. Developers may also want to look at hwloc/inlines.h which contains the actual inline code of some **hwloc.h** routines, and at this document, which provides good higher-level topology traversal examples.

To precisely define the vocabulary used by hwloc, a Terms and Definitions section is available and should probably be read first.

Each hwloc object contains a cpuset describing the list of processing units that it contains. These bitmaps may be used for CPU binding and Memory binding. hwloc offers an extensive bitmap manipulation interface in **hwloc/bitmap.h**.

Moreover, hwloc also comes with additional helpers for interoperability with several commonly used environments. See the Interoperability With Other Software section for details.

The complete API documentation is available in a full set of HTML pages, man pages, and self-contained PDF files (formatted for both both US letter and A4 formats) in the source tarball in doc/doxygen-doc/.


NOTE: If you are building the documentation from a Git clone, you will need to have Doxygen and pdflatex installed – the documentation will be built during the normal "make" process. The documentation is installed during "make install" to \$prefix/share/doc/hwloc/ and your systems default man page tree (under \$prefix, of course).

2.4.1 Portability


Operating System have varying support for CPU and memory binding, e.g. while some Operating Systems provide interfaces for all kinds of CPU and memory bindings, some others provide only interfaces for a limited number of kinds of CPU and memory binding, and some do not provide any binding interface at all. Hwloc's binding functions would then simply return the ENOSYS error (Function not implemented), meaning that the underlying Operating System does not provide any interface for them. CPU binding and Memory binding provide more information on which hwloc binding functions should be preferred because interfaces for them are usually available on the supported Operating Systems.

Similarly, the ability of reporting topology information varies from one platform to another. As shown in Command-line Examples, hwloc can obtain information on a wide variety of hardware topologies. However, some platforms and/or operating system versions will only report a subset of this information. For example, on an PPC64-based system with 8 cores (each with 2 hardware threads) running a default 2.6.18-based kernel from RHEL 5.4, hwloc is only able to glean information about NUMA nodes and processor units (PUs). No information about caches, packages, or cores is available.

Here's the graphical output from Istopo on this platform when Simultaneous Multi-Threading (SMT) is enabled:

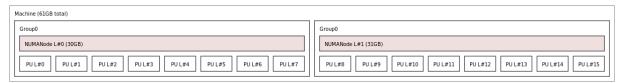


And here's the graphical output from Istopo on this platform when SMT is disabled:

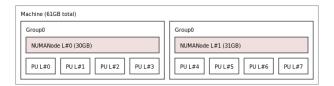

Notice that hwloc only sees half the PUs when SMT is disabled. PU L#6, for example, seems to change location from NUMA node #0 to #1. In reality, no PUs "moved" – they were simply re-numbered when hwloc only saw half as many (see also Logical index in Indexes and Sets). Hence, PU L#6 in the SMT-disabled picture probably corresponds to PU L#12 in the SMT-enabled picture.

This same "PUs have disappeared" effect can be seen on other platforms – even platforms / OSs that provide much more information than the above PPC64 system. This is an unfortunate side-effect of how operating systems report information to hwloc.

Note that upgrading the Linux kernel on the same PPC64 system mentioned above to 2.6.34, hwloc is able to discover all the topology information. The following picture shows the entire topology layout when SMT is enabled:

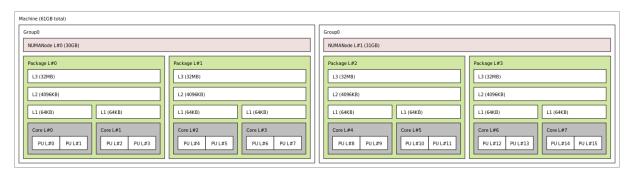

Developers using the hwloc API or XML output for portable applications should therefore be extremely careful to not make any assumptions about the structure of data that is returned. For example, per the above reported PPC topology, it is not safe to assume that PUs will always be descendants of cores.

Additionally, future hardware may insert new topology elements that are not available in this version of hwloc. Long-lived applications that are meant to span multiple different hardware platforms should also be careful about making structure assumptions. For example, a new element may someday exist between a core and a PU.

2.4.2 API Example

The following small C example (available in the source tree as "doc/examples/hwloc-hello.c") prints the topology of the machine and performs some thread and memory binding. More examples are available in the doc/examples/directory of the source tree.

```
/* Example hwloc API program.
 \star See other examples under doc/examples/ in the source tree
 * for more details.
 * Copyright © 2009-2016 Inria. All rights reserved.
 * Copyright © 2009-2011 Université Bordeaux
 * Copyright © 2009-2010 Cisco Systems, Inc. All rights reserved.
 * See COPYING in top-level directory.
 * hwloc-hello.c
#include "hwloc.h"
#include <errno.h>
#include <stdio.h>
#include <string.h>
static void print_children(hwloc_topology_t topology,
      hwloc_obj_t obj,
                            int depth)
    char type[32], attr[1024];
    unsigned i;
    hwloc_obj_type_snprintf(type, sizeof(type), obj, 0);
printf("%*s%s", 2*depth, "", type);
    if (obj->os_index != (unsigned) -1)
  printf("#%u", obj->os_index);
    hwloc_obj_attr_snprintf(attr, sizeof(attr), obj, " ", 0);
    if (*attr)
      printf("(%s)", attr);
    printf("\n");
    for (i = 0; i < obj->arity; i++) {
        print_children(topology, obj->children[i], depth + 1);
}
int main(void)
    int depth;
    unsigned i, n;
    unsigned long size;
    int levels;
    char string[128];
    int topodepth;
    void *m;
    hwloc_topology_t topology;
hwloc_cpuset_t cpuset;
    hwloc_obj_t obj;
    /* Allocate and initialize topology object. */
    hwloc_topology_init(&topology);
    /\star ... Optionally, put detection configuration here to ignore
       some objects types, define a synthetic topology, etc....
       The default is to detect all the objects of the machine that
       the caller is allowed to access. See Configure Topology
       Detection. */
    /* Perform the topology detection. */
    hwloc topology load(topology);
    /\!\star Optionally, get some additional topology information
       in case we need the topology depth later. \star
    topodepth = hwloc_topology_get_depth(topology);
     \star Walk the topology with an array style, from level 0 (always
     \star the system level) to the lowest level (always the proc level).
     ***********
    for (depth = 0; depth < topodepth; depth++) {</pre>
        printf("*** Objects at level %d\n", depth);
        for (i = 0; i < hwloc_get_nbobjs_by_depth(topology, depth);</pre>
```

```
i++) {
       hwloc_obj_type_snprintf(string, sizeof(string),
                             hwloc_get_obj_by_depth(topology, depth, i), 0);
       printf("Index %u: %s\n", i, string);
}
 * Second example:
 * Walk the topology with a tree style.
*****
printf("*** Printing overall tree\n");
print_children(topology, hwloc_get_root_obj(topology), 0);
/***********************
* Third example:
* Print the number of packages.
 ********************
depth = hwloc_get_type_depth(topology, HWLOC_OBJ_PACKAGE);
if (depth == HWLOC_TYPE_DEPTH_UNKNOWN) {
   printf("*** The number of packages is unknown\n");
   \texttt{printf("*** %u package(s)} \\ \\ \texttt{n",} \\
         hwloc_get_nbobjs_by_depth(topology, depth));
}
/**********************
 * Fourth example:
 \star Compute the amount of cache that the first logical processor
 * has above it.
 levels = 0;
size = 0;
for (obj = hwloc_get_obj_by_type(topology, HWLOC_OBJ_PU, 0);
    obj;
    obj = obj->parent)
 if (hwloc_obj_type_is_cache(obj->type)) {
   levels++;
   size += obj->attr->cache.size;
printf("*** Logical processor 0 has %d caches totaling %luKB\n",
      levels, size / 1024);
* Fifth example:
 * Bind to only one thread of the last core of the machine.
\star First find out where cores are, or else smaller sets of CPUs if
 \star the OS doesn't have the notion of a "core".
 depth = hwloc_get_type_or_below_depth(topology,
 HWLOC_OBJ_CORE);
/* Get last core. */
obj = hwloc_get_obj_by_depth(topology, depth,
             hwloc_get_nbobjs_by_depth(topology, depth) - 1);
if (obj) {
   /* Get a copy of its cpuset that we may modify. */
   cpuset = hwloc_bitmap_dup(obj->cpuset);
   /\star Get only one logical processor (in case the core is
     SMT/hyper-threaded). */
   hwloc_bitmap_singlify(cpuset);
   /* And try to bind ourself there. */
   if (hwloc_set_cpubind(topology, cpuset, 0)) {
       char *str;
       int error = errno;
       hwloc_bitmap_asprintf(&str, obj->cpuset);
       printf("Couldn't bind to cpuset %s: %s\n", str, strerror(error));
   /* Free our cpuset copy */
   hwloc bitmap free (cpuset);
/********************
* Sixth example:
 * Allocate some memory on the last NUMA node, bind some existing
 * memory to the last NUMA node.
/* Get last node. There's always at least one. */
n = hwloc_get_nbobjs_by_type(topology,
 HWLOC_OBJ_NUMANODE);
obj = hwloc_get_obj_by_type(topology,
   HWLOC_OBJ_NUMANODE, n - 1);
```

2.5 History / Credits

hwloc provides a pkg-config executable to obtain relevant compiler and linker flags. For example, it can be used thusly to compile applications that utilize the hwloc library (assuming GNU Make):

On a machine 2 processor packages – each package of which has two processing cores – the output from running hwloc-hello could be something like the following:

```
shell$ ./hwloc-hello
*** Objects at level 0
Index 0: Machine
*** Objects at level 1
Index 0: Package#0
Index 1: Package#1
*** Objects at level 2
Index 0: Core#0
Index 1: Core#1
Index 2: Core#3
Index 3: Core#2
*** Objects at level 3
Index 0: PU#0
Index 1: PU#1
Index 2: PU#2
Index 3: PU#3
*** Printing overall tree
Machine
  Package#0
    Core#0
      PU#0
    Core#1
      PU#1
  Package#1
    Core#3
      PU#2
    Core#2
      PU#3
*** 2 package(s)
*** Logical processor 0 has 0 caches totaling OKB
shell$
```

2.5 History / Credits

hwloc is the evolution and merger of the libtopology (http://runtime.bordeaux.inria.fr/libtopology/) project and the Portable Linux Processor Affinity (PLPA) (http://www.open-mpi.org/projects/plpa/)

project. Because of functional and ideological overlap, these two code bases and ideas were merged and released under the name "hwloc" as an Open MPI sub-project.

libtopology was initially developed by the inria Runtime Team-Project (http://runtime.bordeaux. inria.fr/) (headed by Raymond Namyst (http://dept-info.labri.fr/~namyst/). PLPA was initially developed by the Open MPI development team as a sub-project. Both are now deprecated in favor of hwloc, which is distributed as an Open MPI sub-project.

2.6 Further Reading

The documentation chapters include

- · Terms and Definitions
- · Command-Line Tools
- · Environment Variables
- · CPU and Memory Binding Overview
- I/O Devices
- · Miscellaneous objects
- · Object attributes
- · Importing and exporting topologies from/to XML files
- · Synthetic topologies
- · Interoperability With Other Software
- · Thread Safety
- · Components and plugins
- Embedding hwloc in Other Software
- · Frequently Asked Questions
- · Upgrading to the hwloc 2.0 API

Make sure to have had a look at those too!

Terms and Definitions

3.1 Objects

Object Interesting kind of part of the system, such as a Core, a L2Cache, a NUMA memory node, etc. The different types detected by hwloc are detailed in the hwloc_obj_type_t enumeration.

There are four kinds of Objects: Memory (NUMA nodes and Memory-side caches), I/O (Bridges, PCI and OS devices), Misc, and Normal (everything else, including Machine, Package, Die, Core, PU, CPU Caches, etc.). Normal and Memory objects have (non-NULL) CPU sets and nodesets, while I/O and Misc don't.

Objects are topologically sorted by locality (CPU and node sets) into a tree (see Hierarchy, Tree and Levels).

Processing Unit (or Logical Processor) The smallest processing element that can be represented by a hwloc object. It may be a single-core processor, a core of a multicore processor, or a single thread in a SMT processor. hwloc's PU acronym stands for Processing Unit.

"Logical processor" should not be confused with "Logical index of a processor".

Package A processor Package is the physical package that usually gets inserted into a socket on the motherboard. It is also often called a physical processor or a CPU even if these names bring confusion with respect to cores and processing units. A processor package usually contains multiple cores (and may also be composed of multiple dies). hwloc Package objects were called Sockets up to hwloc 1.10.

NUMA Node An object that contains memory that is directly and byte-accessible to the host processors. It is usually close to some cores as specified by its CPU set. Hence it is attached as a memory child of the object that groups those cores together, for instance a Package objects with 4 Core children (see Hierarchy, Tree and Levels).

Memory-side Cache A cache in front of a specific memory region (e.g. a range of physical addresses). It caches all accesses to that region without caring about which core issued the request. This is the opposite of usual CPU caches where only accesses from the local cores are cached, without caring about the target memory. In hwloc, memory-side caches are memory objects placed between their local CPU objects (parent) and the target NUMA node memory (child).

3.2 Indexes and Sets

OS or physical index The index that the operating system (OS) uses to identify the object. This may be completely arbitrary, non-unique, non-contiguous, not representative of logical proximity, and may depend on the BIOS configuration. That is why hwloc almost never uses them, only in the default Istopo output (P#x) and cpuset masks. See also Should I use logical or physical/OS indexes? and how?

14 Terms and Definitions

Logical index Index to uniquely identify objects of the same type and depth, automatically computed by hwloc according to the topology. It expresses logical proximity in a generic way, i.e. objects which have adjacent logical indexes are adjacent in the topology. That is why hwloc almost always uses it in its API, since it expresses logical proximity. They can be shown (as L#x) by lstopo thanks to the -1 option. This index is always linear and in the range [0, num_objs_same_type_same_level-1]. Think of it as "cousin rank." The ordering is based on topology first, and then on OS CPU numbers, so it is stable across everything except firmware CPU renumbering. "Logical index" should not be confused with "Logical processor". A "Logical processor" (which in hwloc we rather call "processing unit" to avoid the confusion) has both a physical index (as chosen arbitrarily by BIOS/OS) and a logical index (as computed according to logical proximity by hwloc). See also Should I use logical or physical/OS indexes? and how?.

- CPU set The set of logical processors (or processing units) logically included in an object (if it makes sense). They are always expressed using physical logical processor numbers (as announced by the OS). They are implemented as the hww.numbers.com/hww.nu
- Node set The set of NUMA memory nodes logically included in an object (if it makes sense). They are always expressed using physical node numbers (as announced by the OS). They are implemented with the hwloc
 _bitmap_t opaque structure. as bitmaps. I/O and Misc objects do not have Node sets while all Normal and Memory objects have non-NULL nodesets.
- **Bitmap** A possibly-infinite set of bits used for describing sets of objects such as CPUs (CPU sets) or memory nodes (Node sets). They are implemented with the https://hww.nodes.node

3.3 Hierarchy, Tree and Levels

Parent object The object logically containing the current object, for example because its CPU set includes the CPU set of the current object. All objects have a non-NULL parent, except the root of the topology (Machine object).

Ancestor object The parent object, or its own parent, and so on.

Children object(s) The object (or objects) contained in the current object because their CPU set is included in the CPU set of the current object. Each object may also contain separated lists for Memory, I/O and Misc object children.

Arity The number of normal children of an object. There are also specific arities for Memory, I/O and Misc children.

- **Sibling objects** Objects in the same children list, which all of them are normal children of the same parent, or all of them are Memory children of the same parent, or I/O children, or Misc. They usually have the same type (and hence are cousins, as well). But they may not if the topology is asymmetric.
- **Sibling rank** Index to uniquely identify objects which have the same parent, and is always in the range [0, arity-1] (respectively memory_arity, io_arity or misc_arity for Memory, I/O and Misc children of a parent).
- **Cousin objects** Objects of the same type (and depth) as the current object, even if they do not have the same parent.
- **Level** Set of objects of the same type and depth. All these objects are cousins.
 - Memory, I/O and Misc objects also have their own specific levels and (virtual) depth.
- **Depth** Nesting level in the object tree, starting from the root object. If the topology is symmetric, the depth of a child is equal to the parent depth plus one, and an object depth is also equal to the number of parent/child links between the root object and the given object. If the topology is asymmetric, the difference between some parent and child depths may be larger than one when some intermediate levels (for instance groups) are missing in only some parts of the machine.

The depth of the Machine object is always 0 since it is always the root of the topology. The depth of PU objects is equal to the number of levels in the topology minus one.


Memory, I/O and Misc objects also have their own specific levels and depth.

The following diagram can help to understand the vocabulary of the relationships by showing the example of a machine with two dual core packages (with no hardware threads); thus, a topology with 5 levels. Each box with rounded corner corresponds to one hwloc_obj_t, containing the values of the different integer fields (depth, logical—index, etc.), and arrows show to which other hwloc_obj_t pointers point to (first_child, parent, etc.).

The topology always starts with a Machine object as root (depth 0) and ends with PU objects at the bottom (depth 4 here).

Objects of the same level (cousins) are listed in red boxes and linked with red arrows. Children of the same parent (siblings) are linked with blue arrows.

The L2 cache of the last core is intentionally missing to show how asymmetric topologies are handled. See What happens if my topology is asymmetric? for more information about such strange topologies.

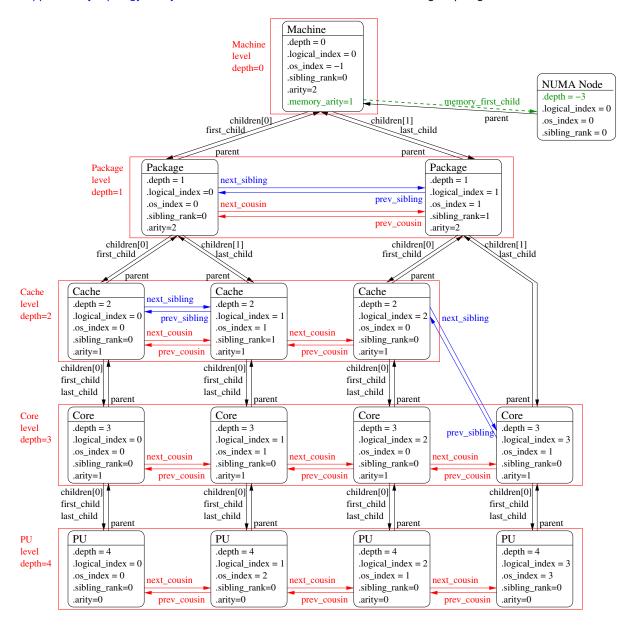

It should be noted that for PU objects, the logical index - as computed linearly by hwloc - is not the same as the OS index.

The NUMA node is on the side because it is not part of the main tree but rather attached to the object that corresponds to its locality (the entire machine here, hence the root object). It is attached as a *Memory* child (in green) and has a virtual depth (negative). It could also have siblings if there were multiple local NUMA nodes, or cousins if other NUMA nodes were attached somewhere else in the machine.

I/O or Misc object could be attached in a similar manner.

16 Terms and Definitions

Command-Line Tools

hwloc comes with an extensive C programming interface and several command line utilities. Each of them is fully documented in its own manual page; the following is a summary of the available command line tools.

4.1 Istopo and Istopo-no-graphics

Istopo (also known as hwloc-ls) displays the hierarchical topology map of the current system. The output may be graphical, ascii-art or textual, and can also be exported to numerous file formats such as PDF, PNG, XML, and others. Advanced graphical outputs require the "Cairo" development package (usually cairo-devel or libcairo2-dev).

Istopo and Istopo-no-graphics accept the same command-line options. However, graphical outputs are only available in Istopo. Textual outputs (those that do not depend on heavy external libraries such as Cairo) are supported in both Istopo and Istopo-no-graphics.

This command can also display the processes currently bound to a part of the machine (via the --ps option).

Note that Istopo can read XML files and/or alternate chroot filesystems and display topological maps representing those systems (e.g., use Istopo to output an XML file on one system, and then use Istopo to read in that XML file and display it on a different system).

4.2 hwloc-bind

hwloc-bind binds processes to specific hardware objects through a flexible syntax. A simple example is binding an executable to specific cores (or packages or bitmaps or ...). The hwloc-bind(1) man page provides much more detail on what is possible.

hwloc-bind can also be used to retrieve the current process' binding, or retrieve the last CPU(s) where a process ran, or operate on memory binding.

Just like hwloc-calc, the input locations given to hwloc-bind may be either objects or cpusets (bitmaps as reported by hwloc-calc or hwloc-distrib).

18 Command-Line Tools

4.3 hwloc-calc

hwloc-calc is hwloc's Swiss Army Knife command-line tool for converting things. The input may be either objects or cpusets (bitmaps as reported by another hwloc-calc instance or by hwloc-distrib), that may be combined by addition, intersection or subtraction. The output kinds include:

- a cpuset bitmap: This compact opaque representation of objects is useful for shell scripts etc. It may passed to hwloc command-line tools such as hwloc-calc or hwloc-bind, or to hwloc command-line options such as lstopo --restrict.
- the amount of the equivalent hwloc objects from a specific type, or the list of their indexes. This is useful for iterating over all similar objects (for instance all cores) within a given part of a platform.
- a hierarchical description of objects, for instance a thread index within a core within a package. This gives a better view of the actual location of an object.

Moreover, input and/or output may be use either physical/OS object indexes or as hwloc's logical object indexes. It eases cooperation with external tools such as taskset or numactl by exporting hwloc specifications into list of processor or NUMA node physical indexes. See also Should I use logical or physical/OS indexes? and how?.

4.4 hwloc-info

hwloc-info dumps information about the given objects, as well as all its specific attributes. It is intended to be used with tools such as grep for filtering certain attribute lines. When no object is specified, or when --topology is passed, hwloc-info prints a summary of the topology. When --support is passed, hwloc-info lists the supported features for the topology.

4.5 hwloc-distrib

hwloc-distrib generates a set of cpuset bitmaps that are uniformly distributed across the machine for the given number of processes. These strings may be used with hwloc-bind to run processes to maximize their memory bandwidth by properly distributing them across the machine.

4.6 hwloc-ps

hwloc-ps is a tool to display the bindings of processes that are currently running on the local machine. By default, hwloc-ps only lists processes that are bound; unbound process (and Linux kernel threads) are not displayed.

4.7 hwloc-annotate

hwloc-annotate may modify object (and topology) attributes such as string information (see Custom string infos for details) or Misc children objects. It reads an input topology from a XML file and outputs the annotated topology as another XML file.

4.8 hwloc-diff, hwloc-patch and hwloc-compress-dir

hwloc-diff computes the difference between two topologies and outputs it to another XML file.

hwloc-patch reads such a difference file and applies to another topology.

hwloc-compress-dir compresses an entire directory of XML files by using hwloc-diff to save the differences between topologies instead of entire topologies.

4.9 hwloc-dump-hwdata

hwloc-dump-hwdata is a Linux and x86-specific tool that dumps (during boot, privileged) some topology and locality information from raw hardware files (SMBIOS and ACPI tables) to human-readable and world-accessible files that the hwloc library will later reuse.

Currently only used on Intel Xeon Phi processor platforms. See Why do I need hwloc-dump-hwdata for memory on Intel Xeon Phi processor?.

See HWLOC_DUMPED_HWDATA_DIR in Environment Variables for details about the location of dumped files.

4.10 hwloc-gather-topology and hwloc-gather-cpuid

hwloc-gather-topology is a Linux-specific tool that saves the relevant topology files of the current machine into a tarball (and the corresponding Istopo outputs).

hwloc-gather-cpuid is a x86-specific tool that dumps the result of CPUID instructions on the current machine into a directory.

The output of hwloc-gather-cpuid is included in the tarball saved by hwloc-gather-topology when running on Linux/x86.

These files may be used later (possibly offline) for simulating or debugging a machine without actually running on it.

20 Command-Line Tools

Environment Variables

The behavior of the hwloc library and tools may be tuned thanks to the following environment variables.

- HWLOC_XMLFILE=/path/to/file.xml enforces the discovery from the given XML file as if hwloc_topology_set_ ← xml() had been called. This file may have been generated earlier with Istopo file.xml. For convenience, this backend provides empty binding hooks which just return success. To have hwloc still actually call OS-specific hooks, HWLOC_THISSYSTEM should be set 1 in the environment too, to assert that the loaded file is really the underlying system. See also Importing and exporting topologies from/to XML files.
- **HWLOC_SYNTHETIC=synthetic_description** enforces the discovery through a synthetic description string as if hwloc_topology_set_synthetic() had been called. For convenience, this backend provides empty binding hooks which just return success. See also <a href="https://synthetic.com/synth

HWLOC_XML_VERBOSE=1

- HWLOC_SYNTHETIC_VERBOSE=1 enables verbose messages in the XML or synthetic topology backends. hwloc XML backends (see Importing and exporting topologies from/to XML files) can emit some error messages to the error output stream. Enabling these verbose messages within hwloc can be useful for understanding failures to parse input XML topologies. Similarly, enabling verbose messages in the synthetic topology backend can help understand why the description string is invalid. See also Synthetic topologies.
- HWLOC_THISSYSTEM=1 enforces the return value of hwloc_topology_is_thissystem(), as if HWLOC_TOP← OLOGY_FLAG_IS_THISSYSTEM was set with hwloc_topology_set_flags(). It means that it makes hwloc assume that the selected backend provides the topology for the system on which we are running, even if it is not the OS-specific backend but the XML backend for instance. This means making the binding functions actually call the OS-specific system calls and really do binding, while the XML backend would otherwise provide empty hooks just returning success. This can be used for efficiency reasons to first detect the topology once, save it to an XML file, and quickly reload it later through the XML backend, but still having binding functions actually do bind. This also enables support for the variable HWLOC_THISSYSTEM_ALLOWED← RESOURCES.
- HWLOC_THISSYSTEM_ALLOWED_RESOURCES=1 Get the set of allowed resources from the native operating system even if the topology was loaded from XML or synthetic description, as if HWLOC_TOPOLOGY ← _FLAG_THISSYSTEM_ALLOWED_RESOURCES was set with hwloc_topology_set_flags(). This variable requires the topology to match the current system (see the variable HWLOC_THISSYSTEM). This is useful when the topology is not loaded directly from the local machine (e.g. for performance reason) and it comes with all resources, but the running process is restricted to only a part of the machine (for instance because of Linux Cgroup/Cpuset).
- **HWLOC_ALLOW=all** Totally ignore administrative restrictions such as Linux Cgroups and consider all resources (PUs and NUMA nodes) as allowed. This is different from setting HWLOC_TOPOLOGY_FLAG_INCLUDE ← __DISALLOWED which gathers all resources but marks the unavailable ones as disallowed.

22 Environment Variables

HWLOC_HIDE_ERRORS=0 enables or disables verbose reporting of errors. The hwloc library may issue warnings to the standard error stream when it detects a problem during topology discovery, for instance if the operating system (or user) gives contradictory topology information. Setting this environment variable to 1 removes the actual displaying of these error messages.

- HWLOC_USE_NUMA_DISTANCES=7 enables or disables the use of NUMA distances. NUMA distances and memory target/initiator information may be used to improve the locality of NUMA nodes, especially CPU-less nodes. Bits in the value of this environment variable enable different features: Bit 0 enables the gathering of NUMA distances from the operating system. Bit 1 further enables the use of NUMA distances to improve the locality of CPU-less nodes. Bit 2 enables the use of target/initiator information.
- HWLOC_GROUPING=1 enables or disables objects grouping based on distances. By default, hwloc uses distance matrices between objects (either read from the OS or given by the user) to find groups of close objects. These groups are described by adding intermediate Group objects in the topology. Setting this environment variable to 0 will disable this grouping. This variable supersedes the obsolete HWLOC_IGNORE_DISTAN← CES variable.
- HWLOC_GROUPING_ACCURACY=0.05 relaxes distance comparison during grouping. By default, objects may be grouped if their distances form a minimal distance graph. When setting this variable to 0.02, and when HWLOC_DISTANCES_ADD_FLAG_GROUP_INACCURATE is given, these distances do not have to be strictly equal anymore, they may just be equal with a 2% error. If set to try instead of a numerical value, hwloc will try to group with perfect accuracy (0, the default), then with 0.01, 0.02, 0.05 and finally 0.1. Numbers given in this environment variable should always use a dot as a decimal mark (for instance 0.01 instead of 0,01).
- **HWLOC_GROUPING_VERBOSE=0** enables or disables some verbose messages during grouping. If this variable is set to 1, some debug messages will be displayed during distance-based grouping of objects even if debug was not specific at configure time. This is useful when trying to find an interesting distance grouping accuracy.
- HWLOC PCI LOCALITY=<domain/bus> <cpuset>;...
- HWLOC_PCI_LOCALITY=/path/to/pci/locality/file changes the locality of I/O devices behing the specified PCI buses. If no I/O locality information is available or if the BIOS reports incorrect information, it is possible to move a I/O device tree (OS and/or PCI devices with optional bridges) near a custom set of processors. Localities are given either inside the environment variable itself, or in the pointed file. They may be separated either by semi-colons or by line-breaks.

Each locality contains a domain/bus specification (in hexadecimal numbers as usual) followed by a whitespace and a cpuset:

- 0001 cpuset> specifies the locality of all buses in PCI domain 0000.
- 0000:0f <cpuset> specifies only PCI bus 0f in domain 0000.
- 0002:04-0a <cpuset> specifies a range of buses (from 04 to 0a) within domain 0002.

Domain/bus specifications should usually match entire hierarchies of buses behind a bridge (including primary, secondary and subordinate buses). For instance, if hostbridge 0000:00 contains other bridges creating buses 0000:01 to 0000:09, the variable should be HWLOC_PCI_LOCALITY="0000:00-09 <cpuset>". It supersedes the old HWLOC_PCI_0000_00_LOCALCPUS=<cpuset> which only works when hostbridges exist in the topology.

If the variable is defined to empty or invalid, no forced PCI locality is applied but hwloc's internal automatic locality quirks are disabled, which means the exact PCI locality reported by the platform is used.

- HWLOC_X86_TOPOEXT_NUMANODES=0 use AMD topoext CPUID leaf in the x86 backend to detect NUMA nodes. When using the x86 backend, setting this variable to 1 enables the building of NUMA nodes from AMD processor CPUID instructions. However this strategy does not always reflect BIOS configuration such as NUMA interleaving. And node indexes may be different from those of the operating system. Hence this should only be used when OS backends are wrong and the user is sure that CPUID returns correct NUMA information.
- HWLOC_KEEP_NVIDIA_GPU_NUMA_NODES=0 show or hide NUMA nodes that correspond to NVIDIA GPU memory. By default they are ignored to avoid interleaved memory being allocated on GPU by mistake. Setting this environment variable to 1 exposes these NUMA nodes. They may be recognized by the GPUMemory subtype. They also have a PCIBusID info attribute to identify the corresponding GPU.

- **HWLOC_KNL_MSCACHE_L3=0** Expose the KNL MCDRAM in cache mode as a Memory-side Cache instead of a L3. hwloc releases prior to 2.1 exposed the MCDRAM cache as a CPU-side L3 cache. Now that Memory-side caches are supported by hwloc, it is still exposed as a L3 by default to avoid breaking existing applications. Setting this environment variable to 1 will expose it as a proper Memory-side cache.
- HWLOC_ANNOTATE_GLOBAL_COMPONENTS=0 Allow components to annotate the topology even if they are usually excluded by global components by default. Setting this variable to 1 and also setting HWLOC_COMP COMENTS=xml, pci, stop enables the addition of PCI vendor and model info attributes to a XML topology that was generated without those names (if pciaccess was missing).
- **HWLOC_FSROOT=/path/to/linux/filesystem-root/** switches to reading the topology from the specified Linux filesystem root instead of the main file-system root. This directory may have been saved previously from another machine with hwloc-gather-topology.

One should likely also set $HWLOC_COMPONENTS=linux$, stop so that non-Linux backends are disabled (the -i option of command-line tools takes care of both).

Not using the main file-system root causes hwloc_topology_is_thissystem() to return 0. For convenience, this backend provides empty binding hooks which just return success. To have hwloc still actually call OS-specific hooks, HWLOC_THISSYSTEM should be set 1 in the environment too, to assert that the loaded file is really the underlying system.

HWLOC_CPUID_PATH=/path/to/cpuid/ forces the x86 backend to read dumped CPUIDs from the given directory instead of executing actual x86 CPUID instructions. This directory may have been saved previously from another machine with hwloc-gather-cpuid.

One should likely also set $\texttt{HWLOC_COMPONENTS} = x86$, stop so that non-x86 backends are disabled (the -i option of command-line tools takes care of both).

It causes hwloc_topology_is_thissystem() to return 0. For convenience, this backend provides empty binding hooks which just return success. To have hwloc still actually call OS-specific hooks, HWLOC_THISSYSTEM should be set 1 in the environment too, to assert that the loaded CPUID dump is really the underlying system.

- HWLOC_DUMPED_HWDATA_DIR=/path/to/dumped/files/ loads files dumped by hwloc-dump-hwdata (on Linux) from the given directory. The default dump/load directory is configured during build based on --runstatedir, --localstatedir, and --prefix options. It usually points to /var/run/hwloc/ in Linux distribution packages, but it may also point to \$prefix/var/run/hwloc/ when manually installing and only specifying --prefix.
- **HWLOC_COMPONENTS=list,of,components** forces a list of components to enable or disable. Enable or disable the given comma-separated list of components (if they do not conflict with each other). Component names prefixed with are disabled (a single phase may also be disabled).

Once the end of the list is reached, hwloc falls back to enabling the remaining components (sorted by priority) that do not conflict with the already enabled ones, and unless explicitly disabled in the list. If stop is met, the enabling loop immediately stops, no more component is enabled.

If xml or synthetic components are selected, the corresponding XML filename or synthetic description string should be pass in $HWLOC_XMLFILE$ or $HWLOC_SYNTHETIC$ respectively.

Since this variable is the low-level and more generic way to select components, it takes precedence over environment variables for selecting components.

If the variable is set to an empty string (or set to a single comma), no specific component is loaded first, all components are loaded in priority order.

See Selecting which components to use for details.

- **HWLOC_COMPONENTS_VERBOSE=1** displays verbose information about components. Display messages when components are registered or enabled. This is the recommended way to list the available components with their priority (all of them are *registered* at startup).
- HWLOC_PLUGINS_PATH=/path/to/hwloc/plugins/:... changes the default search directory for plugins. By default, \$libdir/hwloc is used. The variable may contain several colon-separated directories.
- **HWLOC_PLUGINS_VERBOSE=1** displays verbose information about plugins. List which directories are scanned, which files are loaded, and which components are successfully loaded.

24 Environment Variables

HWLOC_PLUGINS_BLACKLIST=filename1,filename2,... prevents plugins from being loaded if their filename (without path) is listed. Plugin filenames may be found in verbose messages outputted when HWLOC_PL ∪GINS_VERBOSE=1.

HWLOC_DEBUG_VERBOSE=0 disables all verbose messages that are enabled by default when <code>-enable-debug</code> is passed to configure.

CPU and Memory Binding Overview

Some operating systems do not systematically provide separate functions for CPU and memory binding. This means that CPU binding functions may have have effects on the memory binding policy. Likewise, changing the memory binding policy may change the CPU binding of the current thread. This is often not a problem for applications, so by default hwloc will make use of these functions when they provide better binding support.

If the application does not want the CPU binding to change when changing the memory policy, it needs to use the HWLOC_MEMBIND_NOCPUBIND flag to prevent hwloc from using OS functions which would change the CPU binding. Additionally, HWLOC_CPUBIND_NOMEMBIND can be passed to CPU binding function to prevent hwloc from using OS functions would change the memory binding policy. Of course, using these flags will reduce hwloc's overall support for binding, so their use is discouraged.

One can avoid using these flags but still closely control both memory and CPU binding by allocating memory, touching each page in the allocated memory, and then changing the CPU binding. The already-really-allocated memory will then be "locked" to physical memory and will not be migrated. Thus, even if the memory binding policy gets changed by the CPU binding order, the already-allocated memory will not change with it. When binding and allocating further memory, the CPU binding should be performed again in case the memory binding altered the previously-selected CPU binding.

Not all operating systems support the notion of a "current" memory binding policy for the current process, but such operating systems often still provide a way to allocate data on a given node set. Conversely, some operating systems support the notion of a "current" memory binding policy and do not permit allocating data on a specific node set without changing the current policy and allocate the data. To provide the most powerful coverage of these facilities, hwloc provides:

- functions that set/get the current memory binding policies (if supported): hwloc_set/get_membind() and hwloc_set/get_proc_membind()
- a function that allocates memory bound to specific node set without changing the current memory binding policy (if supported): hwloc_alloc_membind().
- a helper which, if needed, changes the current memory binding policy of the process in order to obtain memory binding: hwloc_alloc_membind_policy().

An application can thus use the two first sets of functions if it wants to manage separately the global process binding policy and directed allocation, or use the third set of functions if it does not care about the process memory binding policy.

See CPU binding and Memory binding for hwloc's API functions regarding CPU and memory binding, respectively. There are some examples under doc/examples/ in the source tree.

I/O Devices

hwloc usually manipulates processing units and memory but it can also discover I/O devices and report their locality as well. This is useful for placing I/O intensive applications on cores near the I/O devices they use, or for gathering information about all platform components.

7.1 Enabling and requirements

I/O discovery is disabled by default (except in Istopo) for performance reasons. It can be enabled by changing the filtering of I/O object types to $HWLOC_TYPE_FILTER_KEEP_IMPORTANT$ or $HWLOC_TYPE_FILTER_KEE \leftarrow P_ALL$ before loading the topology, for instance with $hwloc_topology_set_io_types_filter$ ().

Note that I/O discovery requires significant help from the operating system. The pciaccess library (the development package is usually <code>libpciaccess-devel</code> or <code>libpciaccess-dev</code>) is needed to fully detect PCI devices and bridges. On Linux, PCI discovery may still be performed even if <code>libpciaccess</code> cannot be used. But it misses PCI device names. Moreover, some operating systems require privileges for probing PCI devices, see <code>Does hwloc require privileged access?</code> for details.

The actual locality of I/O devices is only currently detected on Linux. Other operating system will just report I/O devices as being attached to the topology root object.

7.2 I/O objects

When I/O discovery is enabled and supported, some additional objects are added to the topology. The corresponding I/O object types are:

- HWLOC_OBJ_OS_DEVICE describes an operating-system-specific handle such as the *sda* drive or the *eth0* network interface. See OS devices.
- HWLOC_OBJ_PCI_DEVICE and HWLOC_OBJ_BRIDGE build up a PCI hierarchy made of devices and bridges. See PCI devices and bridges.

Any of these types may be filtered individually with hwloc_topology_set_type_filter().

hwloc tries to attach these new objects to normal objects (usually NUMA nodes) to match their actual physical location. For instance, if a I/O Hub is physically connected to a package, the corresponding hwloc bridge object (and its PCI bridges and devices children) is inserted as a child of the corresponding hwloc Package object. **These children are not in the normal children list but rather in the I/O-specific children list.**

I/O objects also have neither CPU sets nor node sets (NULL pointers) because they are not directly usable by the user applications for binding. Moreover I/O hierarchies may be highly complex (asymmetric trees of bridges). So I/O objects are placed in specific levels with custom depths. Their lists may still be traversed with regular helpers such as hwloc_get_next_obj_by_type(). However, hwloc offers some dedicated helpers such as hwloc_get_next_pcidev() and hwloc_get_next_osdev() for convenience (see Finding I/O objects).

28 I/O Devices

7.3 OS devices

Although each PCI device is uniquely identified by its bus ID (e.g. 0000:01:02.3), a user-space application can hardly find out which PCI device it is actually using. Applications rather use software handles (such as the *eth0* network interface, the *sda* hard drive, or the *mlx4_0* OpenFabrics HCA). Therefore hwloc tries to add software devices (HWLOC_OBJ_OS_DEVICE, also known as OS devices).

OS devices may be attached below PCI devices, but they may also be attached directly to normal objects. Indeed some OS devices are not related to PCI. For instance, NVDIMM block devices (such as *pmem0s* on Linux) are directly attached near their NUMA node (I/O child of the parent whose memory child is the NUMA node). Also, if hwloc could not discover PCI for some reason, PCI-related OS devices may also be attached directly to normal objects.

hwloc first tries to discover OS devices from the operating system, e.g. *eth0*, *sda* or *mlx4_0*. However, this ability is currently only available on Linux for some classes of devices.

hwloc then tries to discover software devices through additional I/O components using external libraries. For instance proprietary graphics drivers do not expose any named OS device, but hwloc may still create one OS object per software handle when supported. For instance the opencl and cuda components may add some opencl0d0 and cuda0 OS device objects.

Here is a list of OS device objects commonly created by hwloc components when I/O discovery is enabled and supported.

- Hard disks or non-volatile memory devices (HWLOC_OBJ_OSDEV_BLOCK)
 - sda or dax2.0 (Linux component)
- Network interfaces (HWLOC OBJ OSDEV NETWORK)
 - eth0, wlan0, ib0 (Linux component)
- OpenFabrics (InfiniBand, Omni-Path, usNIC, etc) HCAs (HWLOC OBJ OSDEV OPENFABRICS)
 - mlx5_0, hfi1_0, qib0, usnic_0 (Linux component)
- GPUs (HWLOC_OBJ_OSDEV_GPU)
 - nvml0 for the first NVML device (NVML component, using the NVIDIA Management Library)
 - :0.0 for the first display (GL component, using the NV-CONTROL X extension library, NVCtrl)
- Co-Processors (HWLOC OBJ OSDEV COPROC)
 - opencl0d0 for the first device of the first OpenCL platform, opencl1d3 for the fourth device of the second
 OpenCL platform (OpenCL component)
 - cuda0 for the first NVIDIA CUDA device (CUDA component, using the NVIDIA CUDA Library)
 - mic0 for the first Intel Xeon Phi (MIC) coprocessor (Linux component)
- DMA engine channel (HWLOC_OBJ_OSDEV_DMA)
 - dma0chan0 (Linux component) when all OS devices are enabled (HWLOC_TYPE_FILTER_KEEP_← ALL)

Note that some PCI devices may contain multiple software devices (see the example below).

See also Interoperability With Other Software for managing these devices without considering them as hwloc objects.

7.4 PCI devices and bridges

Each hostbridge contains one or several children, either other bridges (usually PCI to PCI) or PCI devices (H WLOC_OBJ_PCI_DEVICE). The number of bridges between the hostbridge and a PCI device depends on the machine.

7.5 Consulting I/O devices and binding

I/O devices may be consulted by traversing the topology manually (with usual routines such as hwloc_get_obj_by ← _type()) or by using dedicated helpers (such as hwloc_get_pcidev_by_busid(), see Finding I/O objects).

I/O objects do not actually contain any locality information because their CPU sets and node sets are NULL. Their locality must be retrieved by walking up the object tree (through the parent link) until an non-I/O object is found (see <a href="https://hww.non-null.com/null

Command-line tools are also aware of I/O devices. Istopo displays the interesting ones by default (passing --no-io disables it).

hwloc-calc and hwloc-bind may manipulate I/O devices specified by PCI bus ID or by OS device name.


- pci=0000:02:03.0 is replaced by the set of CPUs that are close to the PCI device whose bus ID is given.
- os=eth0 is replaced by CPUs that are close to the I/O device whose software handle is called eth0.

This enables easy binding of I/O-intensive applications near the device they use.

7.6 Examples

The following picture shows a dual-package dual-core host whose PCI bus is connected to the first package and NUMA node.

30 I/O Devices

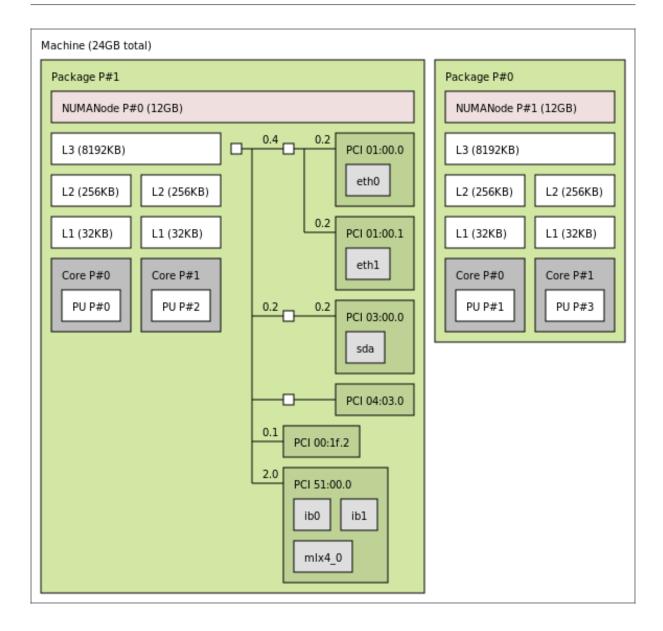

Six interesting PCI devices were discovered. However, hwloc found some corresponding software devices (eth0, eth1, sda, mlx4_0, ib0, and ib1) for only four of these physical devices. The other ones (PCI 102b:0532 and PCI 8086:3a20) are an unused IDE controller (no disk attached) and a graphic card (no corresponding software device reported to the user by the operating system).

On the contrary, it should be noted that three different software devices were found for the last PCI device ($P \leftarrow CI \ 15b3:634a$). Indeed this OpenFabrics HCA PCI device object contains one one OpenFabrics software device ($mlx4 \ 0$) and two virtual network interface software devices (ib0 and ib1).

Here is the corresponding textual output:

```
Machine (24GB total)

Package L#0

NUMANode L#0 (P#0 12GB)

L3 L#0 (8192KB)

L2 L#0 (256KB) + L1 L#0 (32KB) + Core L#0 + PU L#0 (P#0)

L2 L#1 (256KB) + L1 L#1 (32KB) + Core L#1 + PU L#1 (P#2)

HostBridge

PCIBridge

PCI 01:00.0 (Ethernet)

Net "eth0"

PCI 01:00.1 (Ethernet)
```

7.6 Examples 31

```
Net "eth1"

PCIBridge

PCI 03:00.0 (RAID)

Block "sda"

PCIBridge

PCI 04:03.0 (VGA)

PCI 00:1f.2 (IDE)

PCI 51:00.0 (InfiniBand)

Net "ib0"

Net "ib1"

Net "mlx4_0"

Package L#1

NUMANode L#1 (P#1 12GB)

L3 L#1 (8192KB)

L2 L#2 (256KB) + L1 L#2 (32KB) + Core L#2 + PU L#2 (P#1)

L2 L#3 (256KB) + L1 L#3 (32KB) + Core L#3 + PU L#3 (P#3)
```

32 I/O Devices

Miscellaneous objects

hwloc topologies may be annotated with Misc objects (of type HWLOC_OBJ_MISC) either automatically or by the user. This is an flexible way to annotate topologies with large sets of information since Misc objects may be inserted anywhere in the topology (to annotate specific objects or parts of the topology), even below other Misc objects, and each of them may contain multiple attributes (see also How do I annotate the topology with private notes?).

These Misc objects may have a subtype field to replace Misc with something else in the Istopo output.

8.1 Misc objects added by hwloc

hwloc only uses Misc objects when other object types are not sufficient, and when the Misc object type is not filtered-out anymore. This currently includes:

• Memory modules (DIMMs), on Linux when privileged and when dmi-sysfs is supported by the kernel. These objects have a subtype field of value MemoryModule. They are currently always attached to the root object. Their attributes describe the DIMM vendor, model, etc. lstopo -v displays them as:

```
Misc(MemoryModule) (P#1 DeviceLocation="Bottom-Slot 2(right)" BankLocation="BANK 2" Vendor=Elpida SerialNumber=21733667 AssetTag=9876543210 PartNumber="EBJ81UG8EFU0-GN-F")
```

• Displaying process binding in 1stopo ——top. These objects have a subtype field of value Process and a name attribute made of their PID and program name. They are attached below the object they are bound to. The textual 1stopo displays them as:

```
PU L#0 (P#0)
Misc(Process) 4445 myprogram
```

8.2 Annotating topologies with Misc objects

The user may annotate hwloc topologies with its own Misc objects. This can be achieved with hwloc_\times topology_insert_misc_object() as well as hwloc-annotate command-line tool.

Object attributes

9.1 Normal attributes

hwloc objects have many generic attributes in the hwloc_obj structure, for instance their logical_index or os_index (see Should I use logical or physical/OS indexes? and how?), depth or name.

The kind of object is first described by the obj->type generic attribute (an integer). OS devices also have a specific obj->attr->osdev.type integer for distinguishing between NICs, GPUs, etc. Objects may also have an optional obj->subtype pointing to a better description string. For instance subtype is useful to say what Group objects are actually made of (e.g. *Book* for Linux S/390 books). It may also specify that a Block OS device is a *Disk*, or that a CoProcessor OS device is a *CUDA* device. This subtype is displayed by Istopo either in place or after the main obj->type attribute. NUMA nodes that correspond GPU memory may also have *GPUMemory* as subtype.

Each object also contains an attr field that, if non NULL, points to a union hwloc_obj_attr_u of type-specific attribute structures. For instance, a L2Cache object obj contains cache-specific information in obj->attr->cache, such as its size and associativity, cache type. See hwloc_obj_attr_u for details.

9.2 Custom string infos

Aside os these generic attribute fields, hwloc annotates many objects with string attributes that are made of a key and a value. Each object contains a list of such pairs that may be consulted manually (looking at the object infos array field) or using the hwloc_obj_get_info_by_name(). The user may additionally add new key-value pairs to any object using hwloc_obj_add_info() or the hwloc-annotate program.

Here is a non-exhaustive list of attributes that may be automatically added by hwloc. Note that these attributes heavily depend on the ability of the operating system to report them. Many of them will therefore be missing on some OS.

36 Object attributes

9.2.1 Hardware Platform Information

These info attributes are attached to the root object (Machine).

PlatformName, PlatformModel, PlatformVendor, PlatformBoardID, PlatformRevision,

SystemVersionRegister, ProcessorVersionRegister (Machine) Some POWER/PowerPC-specific attributes describing the platform and processor. Currently only available on Linux. Usually added to Package objects, but can be in Machine instead if hwloc failed to discover any package.

DMIBoardVendor, DMIBoardName, etc. DMI hardware information such as the motherboard and chassis models and vendors, the BIOS revision, etc., as reported by Linux under /sys/class/dmi/id/.

MemoryMode, ClusterMode Intel Xeon Phi processor configuration modes. Available if hwloc-dump-hwdata was used (see Why do I need hwloc-dump-hwdata for memory on Intel Xeon Phi processor?) or if hwloc managed to guess them from the NUMA configuration.

The memory mode may be *Cache*, *Flat*, *Hybrid50* (half the MCDRAM is used as a cache) or *Hybrid25* (25% of MCDRAM as cache). The cluster mode may be *Quadrant*, *Hemisphere*, *All2All*, *SNC2* or *SNC4*. See doc/examples/get-knl-modes.c in the source directory for an example of retrieving these attributes.

9.2.2 Operating System Information

These info attributes are attached to the root object (Machine).

OSName, OSRelease, OSVersion, HostName, Architecture The operating system name, release, version, the hostname and the architecture name, as reported by the Unix uname command.

LinuxCgroup The name the Linux control group where the calling process is placed.

9.2.3 hwloc Information

Unless specified, these info attributes are attached to the root object (Machine).

Backend (topology root, or specific object added by that backend) The name of the hwloc backend/component that filled the topology. If several components were combined, multiple Backend keys may exist, with different values, for instance x86 and Linux in the root object and CUDA in CUDA OS device objects.

SyntheticDescription The description string that was given to hwloc to build this synthetic topology.

hwlocVersion The version number of the hwloc library that was used to generate the topology. If the topology was loaded from XML, this is not the hwloc version that loaded it, but rather the first hwloc instance that exported the topology to XML earlier.

ProcessName The name of the process that contains the hwloc library that was used to generate the topology. If the topology was from XML, this is not the hwloc process that loaded it, but rather the first process that exported the topology to XML earlier.

9.2.4 CPU Information

These info attributes are attached to Package objects, or to the root object (Machine) if package locality information is missing.

CPUModel The processor model name.

CPUVendor, CPUModelNumber, CPUFamilyNumber, CPUStepping The processor vendor name, model number, family number, and stepping number. Currently available for x86 and Xeon Phi processors on most systems, and for ia64 processors on Linux (except CPUStepping).

CPURevision A POWER/PowerPC-specific general processor revision number, currently only available on Linux.

CPUType A Solaris-specific general processor type name, such as "i86pc".

9.2.5 OS Device Information

These info attributes are attached to OS device objects specified in parentheses.

Vendor, Model, Revision, SerialNumber, Size, SectorSize (Block OS devices) The vendor and model names, revision, serial number, size (in kB) and SectorSize (in bytes).

LinuxDeviceID (Block OS devices) The major/minor device number such as 8:0 of Linux device.

GPUVendor, GPUModel (GPU or Co-Processor OS devices) The vendor and model names of the GPU device.

OpenCLDeviceType, OpenCLPlatformIndex,

OpenCLPlatformName, OpenCLPlatformDeviceIndex (OpenCL OS devices) The type of OpenCL device, the OpenCL platform index and name, and the index of the device within the platform.

OpenCLComputeUnits, OpenCLGlobalMemorySize (OpenCL OS devices) The number of compute units and global memory size (in kB) of an OpenCL device.

NVIDIAUUID, NVIDIASerial (NVML GPU OS devices) The UUID and Serial of NVIDIA GPUs.

CUDAMultiProcessors, CUDACoresPerMP,

- **CUDAGlobalMemorySize**, **CUDAL2CacheSize**, **CUDASharedMemorySizePerMP** (**CUDA OS devices**) The number of shared multiprocessors, the number of cores per multiprocessor, the global memory size, the (global) L2 cache size, and size of the shared memory in each multiprocessor of a CUDA device. Sizes are in kB.
- MICSerialNumber (MIC coprocessor OS device) The serial number of an Intel Xeon Phi (MIC) coprocessor. hwloc may run either inside the coprocessor itself, or on the host processor. That attribute is set in both cases, so that the exact same coprocessor may be identified from both point of views, even if there are multiple nodes with multiple MICs. When running hwloc on the host, each hwloc OS device object that corresponds to a Xeon Phi gets such an attribute. When running hwloc inside a Xeon Phi coprocessor, the root of the topology (Machine object) gets this attribute.
- MICFamily, MICSKU, MICActiveCores, MICMemorySize (MIC coprocessor OS device) The family, SKU (model), number of active cores, and memory size (in kB) of an Intel Xeon Phi (MIC) coprocessor.
- **Address, Port (Network interface OS devices)** The MAC address and the port number of a software network interface, such as eth4 on Linux.
- NodeGUID, SysImageGUID, Port1State, Port2LID, Port2LMC, Port3GID1 (OpenFabrics OS devices) The node GUID and GUID mask, the state of a port #1 (value is 4 when active), the LID and LID mask count of port #2, and GID #1 of port #3.

38 Object attributes

9.2.6 Other Object-specific Information

These info attributes are attached to objects specified in parentheses.

- **DAXDevice (NUMA Nodes)** The name of the Linux DAX device that was used to expose a non-volatile memory region as a volatile NUMA node.
- **PCIBusID (GPUMemory NUMA Nodes)** The PCI bus ID of the GPU whose memory is exposed in this NUMA node.
- **Inclusive (Caches)** The inclusiveness of a cache (1 if inclusive, 0 otherwise). Currently only available on x86 processors.
- **SolarisProcessorGroup (Group)** The Solaris kstat processor group name that was used to build this Group object.
- PCIVendor, PCIDevice (PCI devices and bridges) The vendor and device names of the PCI device.
- **PCISIot (PCI devices or Bridges)** The name/number of the physical slot where the device is plugged. If the physical device contains PCI bridges above the actual PCI device, the attribute may be attached to the highest bridge (i.e. the first object that actually appears below the physical slot).
- **Vendor, AssetTag, PartNumber, DeviceLocation, BankLocation (MemoryModule Misc objects)** Information about memory modules (DIMMs) extracted from SMBIOS.

9.2.7 User-Given Information

Here is a non-exhaustive list of user-provided info attributes that have a special meaning:

IstopoStyle Enforces the style of an object (background and text colors) in the graphical output of Istopo. See CUSTOM COLORS in the Istopo(1) manpage for details.

Importing and exporting topologies from/to XML files

hwloc offers the ability to export topologies to XML files and reload them later. This is for instance useful for loading topologies faster (see I do not want hwloc to rediscover my enormous machine topology every time I rerun a process), manipulating other nodes' topology, or avoiding the need for privileged processes (see Does hwloc require privileged access?).

Topologies may be exported to XML files thanks to hwloc_topology_export_xml(), or to a XML memory buffer with hwloc_topology_export_xmlbuffer(). The Istopo program can also serve as a XML topology export tool.

XML topologies may then be reloaded later with hwloc_topology_set_xml() and hwloc_topology_set_xmlbuffer(). The HWLOC_XMLFILE environment variable also tells hwloc to load the topology from the given XML file.

Note

Loading XML topologies disables binding because the loaded topology may not correspond to the physical machine that loads it. This behavior may be reverted by asserting that loaded file really matches the underlying system with the HWLOC_THISSYSTEM environment variable or the HWLOC_TOPOLOGY_FLAG_IS_TH ISSYSTEM topology flag.

The topology flag HWLOC_TOPOLOGY_FLAG_THISSYSTEM_ALLOWED_RESOURCES may be used to load a XML topology that contains the entire machine and restrict it to the part that is actually available to the current process (e.g. when Linux Cgroup/Cpuset are used to restrict the set of resources).

hwloc also offers the ability to export/import Topology differences.

XML topology files are not localized. They use a dot as a decimal separator. Therefore any exported topology can be reloaded on any other machine without requiring to change the locale.

XML exports contain all details about the platform. It means that two very similar nodes still have different XML exports (e.g. some serial numbers or MAC addresses are different). If a less precise exporting/importing is required, one may want to look at Synthetic topologies instead.

10.1 libxml2 and minimalistic XML backends

hwloc offers two backends for importing/exporting XML.

First, it can use the libxml2 library for importing/exporting XML files. It features full XML support, for instance when those files have to be manipulated by non-hwloc software (e.g. a XSLT parser). The libxml2 backend is enabled by default if libxml2 development headers are available (the relevant development package is usually libxml2-devel or libxml2-dev).

If libxml2 is not available at configure time, or if $-\mathtt{disable-libxml2}$ is passed, hwloc falls back to a custom backend. Contrary to the aforementioned full XML backend with libxml2, this minimalistic XML backend cannot be guaranteed to work with external programs. It should only be assumed to be compatible with the same hwloc release (even if using the libxml2 backend). Its advantage is, however, to always be available without requiring any external dependency.

If libxml2 is available but the core hwloc library should not directly depend on it, the libxml2 support may be built as a dynamicall-loaded plugin. One should pass <code>--enable-plugins</code> to enable plugin support (when supported) and build as plugins all component that support it. Or pass <code>--enable-plugins=xml_libxml</code> to only build this libxml2 support as a plugin.

10.2 XML import error management

Importing XML files can fail at least because of file access errors, invalid XML syntax, non-hwloc-valid XML contents, or incompatibilities between hwloc releases (see Are XML topology files compatible between hwloc releases?).

Both backend cannot detect all these errors when the input XML file or buffer is selected (when hwloc_topology _set_xml() or hwloc_topology_set_xmlbuffer() is called). Some errors such non-hwloc-valid contents can only be detected later when loading the topology with hwloc_topology_load().

It is therefore strongly recommended to check the return value of both hwloc_topology_set_xml() (or hwloc_copology_set_xmlbuffer()) and hwloc_topology_load() to handle all these errors.

Synthetic topologies

hwloc may load fake or remote topologies so as to consult them without having the underlying hardware available. Aside from loading XML topologies, hwloc also enables the building of *synthetic* topologies that are described by a single string listing the arity of each levels.

For instance, Istopo may create a topology made of 2 packages, containing a single NUMA node and a L2 cache above two single-threaded cores:

```
$ lstopo -i "pack:2 node:1 l2:1 core:2 pu:1" -
Machine (2048MB)
Package L#0
NUMANode L#0 (P#0 1024MB)
L2 L#0 (4096KB)
Core L#0 + PU L#0 (P#0)
Core L#1 + PU L#1 (P#1)
Package L#1
NUMANode L#1 (P#1 1024MB)
L2 L#1 (4096KB)
Core L#2 + PU L#2 (P#2)
Core L#3 + PU L#3 (P#3)
```

Replacing - with file.xml in this command line will export this topology to XML as usual.

Note

Synthetic topologies offer a very basic way to export a topology and reimport it on another machine. It is a lot less precise than XML but may still be enough when only the hierarchy of resources matters.

11.1 Synthetic description string

Each item in the description string gives the type of the level and the number of such children under each object of the previous level. That is why the above topology contains 4 cores (2 cores times 2 nodes).

These type names must be written as numanode, package, core, 12u, 11i, pu, group (hwloc_obj_type_ scanf() is used for parsing the type names). They do not need to be written case-sensitively, nor entirely (as long as there is no ambiguity, 2 characters such as ma select a Machine level). Note that I/O and Misc objects are not available.

Instead of specifying the type of each level, it is possible to just specify the arities and let hwloc choose all types according to usual topologies. The following examples are therefore equivalent:

42 Synthetic topologies

```
$ lstopo -i "2 3 4 5 6"
$ lstopo -i "Package:2 NUMANode:3 L2Cache:4 Core:5 PU:6"
```

NUMA nodes are handled in a special way since they are not part of the main CPU hierarchy but rather attached below it as memory children. Thus, NUMANode: 3 actually means Group: 3 where one NUMA node is attached below each group. These groups are merged back into the parent when possible (typically when a single NUMA node is requested below each parent).

It is also possible the explicitly attach NUMA nodes to specific levels. For instance, a topology similar to a Intel Xeon Phi processor (with 2 NUMA nodes per 16-core group) may be created with:

```
$ 1stopo -i "package:1 group:4 [numa] [numa] core:16 pu:4"
```

The root object does not appear in the synthetic description string since it is always a Machine object. Therefore the Machine type is disallowed in the description as well.

A NUMA level (with a single NUMA node) is automatically added if needed.

Each item may be followed parentheses containing a list of space-separated attributes. For instance:

- L2iCache: 2 (size=32kB) specifies 2 children of 32kB level-2 instruction caches. The size may be specified in bytes (without any unit suffix) or as TB, GB, MB or kB.
- NUMANode: 3 (memory=16MB) specifies 3 NUMA nodes with 16MB each. The size may be specified in bytes (without any unit suffix) or as TB, GB, MB or kB.
- PU: 2 (indexes=0, 2, 1, 3) specifies 2 PU children and the full list of OS indexes among the entire set of 4 PU objects.
- PU:2 (indexes=numa:core) specifies 2 PU children whose OS indexes are interleaved by NUMA node first and then by package.
- · Attributes in parentheses at the very beginning of the description apply to the root object.

11.2 Loading a synthetic topology

Aside from Istopo, the hwloc programming interface offers the same ability by passing the synthetic description string to hwloc topology set synthetic() before hwloc topology load().

Synthetic topologies are created by the synthetic component. This component may be enabled by force by setting the HWLOC SYNTHETIC environment variable to something such as node: 2 core: 3 pu: 4.

Loading a synthetic topology disables binding support since the topology usually does not match the underlying hardware. Binding may be reenabled as usual by setting HWLOC_THISSYSTEM=1 in the environment or by setting the HWLOC_TOPOLOGY_FLAG_IS_THISSYSTEM topology flag.

11.3 Exporting a topology as a synthetic string

The function hwloc_topology_export_synthetic() may export a topology as a synthetic string. It offers a convenient way to quickly describe the contents of a machine. The Istopo tool may also perform such an export by forcing the output format.

```
$ lstopo --of synthetic --no-io
Package:1 L3Cache:1 L2Cache:2 L1dCache:1 L1iCache:1 Core:1 PU:2
```

The exported string may be passed back to hwloc for recreating another similar topology (see also Are synthetic strings compatible between hwloc releases?). The entire tree will be similar, but some attributes such as the processor model will be missing.

Such an export is only possible if the topology is totally symmetric. It means that the symmetric_subtree field of the root object is set. Also memory children should be attached in a symmetric way (e.g. the same number of memory children below each Package object, etc.). However, I/O devices and Misc objects are ignored when looking at symmetry and exporting the string.

Interoperability With Other Software

Although hwloc offers its own portable interface, it still may have to interoperate with specific or non-portable libraries that manipulate similar kinds of objects. hwloc therefore offers several specific "helpers" to assist converting between those specific interfaces and hwloc.

Some external libraries may be specific to a particular OS; others may not always be available. The hwloc core therefore generally does not explicitly depend on these types of libraries. However, when a custom application uses or otherwise depends on such a library, it may optionally include the corresponding hwloc helper to extend the hwloc interface with dedicated helpers.

Most of these helpers use structures that are specific to these external libraries and only meaningful on the local machine. If so, the helper requires the input topology to match the current machine. Some helpers also require I/O device discovery to be supported and enabled for the current topology.

- **Linux specific features** hwloc/linux.h offers Linux-specific helpers that utilize some non-portable features of the Linux system, such as binding threads through their thread ID ("tid") or parsing kernel CPU mask files.
- **Linux libnuma** hwloc/linux-libnuma.h provides conversion helpers between hwloc CPU sets and libnuma-specific types, such as bitmasks. It helps you use libnuma memory-binding functions with hwloc CPU sets.
- **Glibc** hwloc/glibc-sched.h offers conversion routines between Glibc and hwloc CPU sets in order to use hwloc with functions such as sched_getaffinity() or pthread_attr_setaffinity_np().
- **OpenFabrics Verbs** hwloc/openfabrics-verbs.h helps interoperability with the OpenFabrics Verbs interface. For example, it can return a list of processors near an OpenFabrics device. It may also return the corresponding OS device hwloc object for further information (if I/O device discovery is enabled).
- Intel Xeon Phi (MIC) hwloc/intel-mic.h helps interoperability with Intel Xeon Phi (MIC) coprocessors by returning the list of processors near these devices. It may also return the corresponding OS device hwloc object for further information (if I/O device discovery is enabled).
- **OpenCL** hwloc/opencl.h enables interoperability with the OpenCL interface. Only the AMD and NVIDIA implementations currently offer locality information. It may return the list of processors near a GPU given as a cl_device_id. It may also return the corresponding OS device hwloc object for further information (if I/O device discovery is enabled).
- **NVIDIA CUDA hwloc/cuda.h** and **hwloc/cudart.h** enable interoperability with NVIDIA CUDA Driver and Runtime interfaces. For instance, it may return the list of processors near NVIDIA GPUs. It may also return the corresponding OS device hwloc object for further information (if I/O device discovery is enabled).
- **NVIDIA Management Library (NVML) hwloc/nvml.h** enables interoperability with the NVIDIA NVML interface. It may return the list of processors near a NVIDIA GPU given as a nvmlDevice_t. It may also return the corresponding OS device hwloc object for further information (if I/O device discovery is enabled).

NVIDIA displays hwloc/gl.h enables interoperability with NVIDIA displays using the NV-CONTROL X extension (NVCtrl library). If I/O device discovery is enabled, it may return the OS device hwloc object that corresponds to a display given as a name such as :0.0 or given as a port/device pair (server/screen).

Taskset command-line tool The taskset command-line tool is widely used for binding processes. It manipulates CPU set strings in a format that is slightly different from hwloc's one (it does not divide the string in fixed-size subsets and separates them with commas). To ease interoperability, hwloc offers routines to convert hwloc CPU sets from/to taskset-specific string format. Most hwloc command-line tools also support the --taskset option to manipulate taskset-specific strings.

Thread Safety

Like most libraries that mainly fill data structures, hwloc is not thread safe but rather reentrant: all state is held in a hwloc_topology_t instance without mutex protection. That means, for example, that two threads can safely operate on and modify two different hwloc_topology_t instances, but they should not simultaneously invoke functions that modify the *same* instance. Similarly, one thread should not modify a hwloc_topology_t instance while another thread is reading or traversing it. However, two threads can safely read or traverse the same hwloc_topology_t instance concurrently.

When running in multiprocessor environments, be aware that proper thread synchronization and/or memory coherency protection is needed to pass hwloc data (such as hwloc_topology_t pointers) from one processor to another (e.g., a mutex, semaphore, or a memory barrier). Note that this is not a hwloc-specific requirement, but it is worth mentioning.

For reference, https://hwloc_topology_t modification operations include (but may not be limited to):

Creation and destruction hwloc_topology_init(), hwloc_topology_load(), hwloc_← topology_destroy() (see Topology Creation and Destruction) imply major modifications of the structure, including freeing some objects. No other thread cannot access the topology or any of its objects at the same time.

Also references to objects inside the topology are not valid anymore after these functions return.

Runtime topology modifications hwloc_topology_insert_misc_object(), hwloc_topology← _alloc_group_object(), and hwloc_topology_insert_group_object() (see Modifying a loaded Topology) may modify the topology significantly by adding objects inside the tree, changing the topology depth, etc.

 $hwloc_distances_add()$ and $hwloc_distances_remove()$ (see Add or remove distances between objects) modify the list of distance structures in the topology, and the former may even insert new Group objects.

 $hwloc_topology_restrict$ () modifies the topology even more dramatically by removing some objects.

Although references to former objects *may* still be valid after insertion or restriction, it is strongly advised to not rely on any such guarantee and always re-consult the topology to reacquire new instances of objects.

Consulting distances hwloc_distances_get() and its variants are thread-safe except if the topology was recently modified (because distances may involve objects that were removed).

Whenever the topology is modified (see above), one dummy (but valid) hwloc_distances_get () call should be performed in the same thread-safe context to force the refresh of internal distances structures.

Once this refresh has been performed, multiple $hwloc_distances_get$ () may then be performed concurrently by multiple threads.

Locating topologies hwloc_topology_set_* (see Topology Detection Configuration and Query) do not modify the topology directly, but they do modify internal structures describing the behavior of the upcoming invocation of hwloc_topology_load(). Hence, all of these functions should not be used concurrently.

46 Thread Safety

Components and plugins

hwloc is organized in components that are responsible for discovering objects. Depending on the topology configuration, some components will be used, some will be ignored. The usual default is to enable the native operating system component, (e.g. linux or solaris) and the pci miscellaneous component. If available, an architecture-specific component (such as x86) may also improve the topology detection.

If a XML topology is loaded, the xml discovery component will be used instead of all other components. It internally uses a specific class of components for the actual XML import/export routines (xml_libxml and xml_ \leftarrow nolibxml) but these will not be discussed here (see libxml2 and minimalistic XML backends).

14.1 Components enabled by default

The hwloc core contains a list of components sorted by priority. Each one is enabled as long as it does not conflict with the previously enabled ones. This includes native operating system components, architecture-specific ones, and if available, I/O components such as pci.

Usually the native operating system component (when it exists, e.g. linux or aix) is enabled first. Then hwloc looks for an architecture specific component (e.g. x86). Finally there also exist a basic component (no_os) that just tries to discover the number of PUs in the system.

Each component discovers as much topology information as possible. Most of them, including most native OS components, do nothing unless the topology is still empty. Some others, such as x86 and pci, can complete and annotate what other backends found earlier. Discovery is performed by phases: CPUs are first discovered, then memory is attached, then PCI, etc.

Default priorities ensure that clever components are invoked first. Native operating system components have higher priorities, and are therefore invoked first, because they likely offer very detailed topology information. If needed, it will be later extended by architecture-specific information (e.g. from the x86 component).

If any configuration function such as hwloc_topology_set_xml() is used before loading the topology, the corresponding component is enabled first. Then, as usual, hwloc enables any other component (based on priorities) that does not conflict.

Certain components that manage a virtual topology, for instance XML topology import or synthetic topology description, conflict with all other components. Therefore, one of them may only be loaded (e.g. with $hwloc_ \leftarrow topology_set_xml()$) if no other component is enabled.

The environment variable HWLOC_COMPONENTS_VERBOSE may be set to get verbose messages about component registration (including their priority) and enabling.

14.2 Selecting which components to use

If no topology configuration functions such as $hwloc_topology_set_synthetic()$ have been called, plugins may be selected with environment variables such as $HWLOC_XMLFILE$, $HWLOC_SYNTHETIC$, $HWLOC_CPUID_PATH$ (see Environment Variables).

Finally, the environment variable HWLOC_COMPONENTS resets the list of selected components. If the variable is set and empty (or set to a single comma separating nothing, since some operating systems do not accept empty variables), the normal plugin priority order is used.

If the variable is set to x86 in this variable will cause the x86 component to take precedence over any other component, including the native operating system component. It is therefore loaded first, before hwloc tries to load all remaining non-conflicting components. In this case, x86 would take care of discovering everything it supports, instead of only completing what the native OS information. This may be useful if the native component is buggy on some platforms.

It is possible to prevent some components from being loaded by prefixing their name with – in the list. For instance x86, -pci will load the x86 component, then let hwloc load all the usual components except pci. A single component phase may also be blacklisted, for instance with -linux:io. hwloc_topology_set_components() may also be used inside the program to prevent the loading of a specific component (or phases) for the target topology.

It is possible to prevent all remaining components from being loaded by placing stop in the environment variable. Only the components listed before this keyword will be enabled.

14.3 Loading components from plugins

Components may optionally be built as plugins so that the hwloc core library does not directly depend on their dependencies (for instance the libpciaccess library). Plugin support may be enabled with the --enable-plugins configure option. All components buildable as plugins will then be built as plugins. The configure option may be given a comma-separated list of component names to specify the exact list of components to build as plugins.

Plugins are built as independent dynamic libraries that are installed in $\libdir/hwloc$. All plugins found in this directory are loaded during $topology_init()$ (unless blacklisted in $HWLOC_PLUGINS_BLACKLIST$, see Environment Variables). A specific list of directories (colon-separated) to scan may be specified in the $HWLOC_PLUGINS_PATH$ environment variable.

Note that loading a plugin just means that the corresponding component is registered to the hwloc core. Components are then only enabled if the topology configuration requests it, as explained in the previous sections.

Also note that plugins should carefully be enabled and used when embedding hwloc in another project, see Embedding hwloc in Other Software for details.

14.4 Existing components and plugins

All components distributed within hwloc are listed below. The list of actually available components may be listed at running with the HWLOC_COMPONENTS_VERBOSE environment variable (see Environment Variables).

linux The official component for discovering CPU, memory and I/O devices on Linux. It discovers PCI devices without the help of external libraries such as libpciaccess, but requires the pci component for adding vendor/device names to PCI objects. It also discovers many kinds of Linux-specific OS devices.

- **aix**, **darwin**, **freebsd**, **hpux**, **netbsd**, **solaris**, **windows** Each officially supported operating system has its own native component, which is statically built when supported, and which is used by default.
- **x86** The x86 architecture (either 32 or 64 bits) has its own component that may complete or replace the previously-found CPU information. It is statically built when supported.
- bgq This component is specific to IBM BlueGene/Q compute node (running CNK). It is built and enabled by default when --host=powerpc64-bgq-linux is passed to configure (see How do I build hwloc for Blue← Gene/Q?).
- **no_os** A basic component that just tries to detect the number of processing units in the system. It mostly serves on operating systems that are not natively supported. It is always statically built.
- **pci** PCI object discovery uses the external pciaccess library (aka libpciaccess); see I/O Devices. It may also annotate existing PCI devices with vendor and device names. It may be built as a plugin.
- **opencl** The OpenCL component creates co-processor OS device objects such as *opencl0d0* (first device of the first OpenCL platform) or *opencl1d3* (fourth device of the second platform). Only the AMD OpenCL implementation currently offers locality information. **It may be built as a plugin**.
- **cuda** This component creates co-processor OS device objects such as *cuda0* that correspond to NVIDIA GPUs used with CUDA library. **It may be built as a plugin**.
- **nvml** Probing the NVIDIA Management Library creates OS device objects such as *nvml0* that are useful for batch schedulers. It also detects the actual PCIe link bandwidth without depending on power management state and without requiring administrator privileges. **It may be built as a plugin**.
- gl Probing the NV-CONTROL X extension (NVCtrl library) creates OS device objects such as :0.0 corresponding to NVIDIA displays. They are useful for graphical applications that need to place computation and/or data near a rendering GPU. It may be built as a plugin.
- synthetic Synthetic topology support (see Synthetic topologies) is always built statically.
- **xml** XML topology import (see Importing and exporting topologies from/to XML files) is always built statically. It internally uses one of the XML backends (see libxml2 and minimalistic XML backends).
 - xml_nolibxml is a basic and hwloc-specific XML import/export. It is always statically built.
 - xml_libxml relies on the external libxml2 library for provinding a feature-complete XML import/export. It may be built as a plugin.

fake A dummy plugin that does nothing but is used for debugging plugin support.

Embedding hwloc in Other Software

It can be desirable to include hwloc in a larger software package (be sure to check out the LICENSE file) so that users don't have to separately download and install it before installing your software. This can be advantageous to ensure that your software uses a known-tested/good version of hwloc, or for use on systems that do not have hwloc pre-installed.

When used in "embedded" mode, hwloc will:

- · not install any header files
- · not build any documentation files
- · not build or install any executables or tests
- not build libhwloc.* instead, it will build libhwloc_embedded.*

There are two ways to put hwloc into "embedded" mode. The first is directly from the configure command line:

```
shell$ ./configure --enable-embedded-mode ...
```

The second requires that your software project uses the GNU Autoconf / Automake / Libtool tool chain to build your software. If you do this, you can directly integrate hwloc's m4 configure macro into your configure script. You can then invoke hwloc's configuration tests and build setup by calling an m4 macro (see below).

Although hwloc dynamic shared object plugins may be used in embedded mode, the embedder project will have to manually setup libltdl in its build system so that hwloc can load its plugins at run time. Also, embedders should be aware of complications that can arise due to public and private linker namespaces (e.g., if the embedder project is loaded into a private namespace and then hwloc tries to dynamically load its plugins, such loading may fail since the hwloc plugins can't find the hwloc symbols they need). The embedder project is **strongly** advised not to use hwloc's dynamically loading plugins / libltdl capability.

15.1 Using hwloc's M4 Embedding Capabilities

Every project is different, and there are many different ways of integrating hwloc into yours. What follows is *one* example of how to do it.

If your project uses recent versions Autoconf, Automake, and Libtool to build, you can use hwloc's embedded m4 capabilities. We have tested the embedded m4 with projects that use Autoconf 2.65, Automake 1.11.1, and Libtool 2.2.6b. Slightly earlier versions of may also work but are untested. Autoconf versions prior to 2.65 are almost certain to not work.

You can either copy all the config/hwloc*m4 files from the hwloc source tree to the directory where your project's m4 files reside, or you can tell aclocal to find more m4 files in the embedded hwloc's "config" subdirectory (e.g., add "-lpath/to/embedded/hwloc/config" to your Makefile.am's ACLOCAL_AMFLAGS).

The following macros can then be used from your configure script (only HWLOC_SETUP_CORE *must* be invoked if using the m4 macros):

• HWLOC_SETUP_CORE(config-dir-prefix, action-upon-success, action-upon-failure, print_banner_or_not) ← : Invoke the hwloc configuration tests and setup the hwloc tree to build. The first argument is the prefix to use for AC_OUTPUT files − it's where the hwloc tree is located relative to \$top_srcdir. Hence, if your embedded hwloc is located in the source tree at contrib/hwloc, you should pass [contrib/hwloc] as the first argument. If HWLOC_SETUP_CORE and the rest of configure completes successfully, then "make" traversals of the hwloc tree with standard Automake targets (all, clean, install, etc.) should behave as expected. For example, it is safe to list the hwloc directory in the SUBDIRS of a higher-level Makefile.am. The last argument, if not empty, will cause the macro to display an announcement banner that it is starting the hwloc core configuration tests.

HWLOC_SETUP_CORE will set the following environment variables and AC_SUBST them: HWLOC_EM BEDDED_CFLAGS, HWLOC_EMBEDDED_CPPFLAGS, and HWLOC_EMBEDDED_LIBS. These flags are filled with the values discovered in the hwloc-specific m⁴ tests, and can be used in your build process as relevant. The _CFLAGS, _CPPFLAGS, and _LIBS variables are necessary to build libhwloc (or libhwloc_← embedded) itself.

HWLOC_SETUP_CORE also sets HWLOC_EMBEDDED_LDADD environment variable (and AC_SUBSTs it) to contain the location of the libhwloc_embedded.la convenience Libtool archive. It can be used in your build process to link an application or other library against the embedded hwloc library.

NOTE: If the HWLOC_SET_SYMBOL_PREFIX macro is used, it must be invoked *before* HWLOC_SE ← TUP_CORE.

- HWLOC_BUILD_STANDALONE: HWLOC_SETUP_CORE defaults to building hwloc in an "embedded" mode (described above). If HWLOC_BUILD_STANDALONE is invoked *before* HWLOC_SETUP_CO← RE, the embedded definitions will not apply (e.g., libhwloc.la will be built, not libhwloc_embedded.la).
- HWLOC_SET_SYMBOL_PREFIX(foo_): Tells the hwloc to prefix all of hwloc's types and public symbols with "foo_"; meaning that function hwloc_init() becomes foo_hwloc_init(). Enum values are prefixed with an uppercase translation if the prefix supplied; HWLOC_OBJ_CORE becomes FOO_HWLOC_OBJ_CORE. This is recommended behavior if you are including hwloc in middleware it is possible that your software will be combined with other software that links to another copy of hwloc. If both uses of hwloc utilize different symbol prefixes, there will be no type/symbol clashes, and everything will compile, link, and run successfully. If you both embed hwloc without changing the symbol prefix and also link against an external hwloc, you may get multiple symbol definitions when linking your final library or application.
- HWLOC_SETUP_DOCS, HWLOC_SETUP_UTILS, HWLOC_SETUP_TESTS: These three macros only apply when hwloc is built in "standalone" mode (i.e., they should NOT be invoked unless HWLOC_BUILD_S

 TANDALONE has already been invoked).

HWLOC_DO_AM_CONDITIONALS: If you embed hwloc in a larger project and build it conditionally with Automake (e.g., if HWLOC_SETUP_CORE is invoked conditionally), you must unconditionally invoke HWL← OC_DO_AM_CONDITIONALS to avoid warnings from Automake (for the cases where hwloc is not selected to be built). This macro is necessary because hwloc uses some AM_CONDITIONALs to build itself, and AM_CONDITIONALs cannot be defined conditionally. Note that it is safe (but unnecessary) to call HWLO← C_DO_AM_CONDITIONALS even if HWLOC_SETUP_CORE is invoked unconditionally. If you are not using Automake to build hwloc, this macro is unnecessary (and will actually cause errors because it invoked AM_* macros that will be undefined).

NOTE: When using the HWLOC_SETUP_CORE m4 macro, it may be necessary to explicitly invoke AC_CANO NICAL_TARGET (which requires config.sub and config.guess) and/or AC_USE_SYSTEM_EXTENSIONS macros early in the configure script (e.g., after AC_INIT but before AM_INIT_AUTOMAKE). See the Autoconf documentation for further information.

Also note that hwloc's top-level configure.ac script uses exactly the macros described above to build hwloc in a standalone mode (by default). You may want to examine it for one example of how these macros are used.

15.2 Example Embedding hwloc

Here's an example of integrating with a larger project named sandbox that already uses Autoconf, Automake, and Libtool to build itself:

```
# First, cd into the sandbox project source tree
shell$ cd sandbox
shell$ cp -r /somewhere/else/hwloc-<version> my-embedded-hwloc
shell$ edit Makefile.am
 1. Add "-Imy-embedded-hwloc/config" to ACLOCAL_AMFLAGS
 2. Add "my-embedded-hwloc" to SUBDIRS
 3. Add "$(HWLOC_EMBEDDED_LDADD)" and "$(HWLOC_EMBEDDED_LIBS)" to
    sandbox's executable's LDADD line. The former is the name of the
    Libtool convenience library that hwloc will generate. The latter
     is any dependent support libraries that may be needed by
    $ (HWLOC_EMBEDDED_LDADD) .
 4. Add "$(HWLOC_EMBEDDED_CFLAGS)" to AM_CFLAGS
 5. Add "$(HWLOC_EMBEDDED_CPPFLAGS)" to AM_CPPFLAGS
shell$ edit configure.ac
 1. Add "HWLOC_SET_SYMBOL_PREFIX(sandbox_hwloc_)" line
 2. Add "HWLOC_SETUP_CORE([my-embedded-hwloc], [happy=yes], [happy=no])" line
 3. Add error checking for happy=no case
shell$ edit sandbox.c
 1. Add #include <hwloc.h>
 2. Add calls to sandbox_hwloc_init() and other hwloc API functions
```

Now you can bootstrap, configure, build, and run the sandbox as normal – all calls to "sandbox_hwloc_*" will use the embedded hwloc rather than any system-provided copy of hwloc.

Frequently Asked Questions

16.1 Concepts

16.1.1 I only need binding, why should I use hwloc?

hwloc is its portable API that works on a variety of operating systems. It supports binding of threads, processes and memory buffers (see CPU binding and Memory binding). Even if some features are not supported on some systems, using hwloc is much easier than reimplementing your own portability layer.

Moreover, hwloc provides knowledge of cores and hardware threads. It offers easy ways to bind tasks to individual hardware threads, or to entire multithreaded cores, etc. See How may I ignore symmetric multithreading, hyperthreading, etc. in hwloc?. Most alternative software for binding do not even know whether each core is single-threaded, multithreaded or hyper-threaded. They would bind to individual threads without any way to know whether multiple tasks are in the same physical core.

However, using hwloc comes with an overhead since a topology must be loaded before gathering information and binding tasks or memory. Fortunately this overhead may be significantly reduced by filtering non-interesting information out of the topology. For instance the following code builds a topology that only contains Cores (explicitly filtered-in below), hardware threads (PUs, cannot be filtered-out), NUMA nodes (cannot be filtered-out), and the root object (usually a Machine; the root cannot be removed without breaking the tree).

```
hwloc_topology_t topology;
hwloc_topology_init(&topology);
/* filter everything out */
hwloc_topology_set_all_types_filter(topology, HWLOC_TYPE_FILTER_KEEP_NONE);
/* filter Cores back in */
hwloc_topology_set_type_filter(topology, HWLOC_OBJ_CORE, HWLOC_TYPE_FILTER_KEEP_ALL);
hwloc_topology_load(topology);
```

However, one should remember that filtering such objects out removes locality information from the hwloc tree. For instance, we do not know anymore which PU is close to which NUMA node. This would be useful to applications that explicitly want to place specific memory buffers close to specific tasks. Those applications just need to tell hwloc to keep Group objects that bring structure information:

```
hwloc_topology_set_type_filter(topology, HWLOC_OBJ_GROUP, HWLOC_TYPE_FILTER_KEEP_STRUCTURE);
```

Note that the default configuration is to keep all objects enabled, except I/Os and instruction caches.

16.1.2 Should I use logical or physical/OS indexes? and how?

One of the original reasons why hwloc was created is that **physical/OS indexes** (obj->os_index) are often crazy and unpredictable: logical processors numbers are usually non-contiguous (processors 0 and 1 are not physically close), they vary from one machine to another, and may even change after a BIOS or system update. This numbers make task placement hardly portable. Moreover some objects have no physical/OS numbers (caches), and some objects have non-unique numbers (core numbers are only unique within a socket). Physical/OS indexes are only guaranteed to exist and be unique for PU and NUMA nodes.

hwloc therefore introduces **logical indexes** (obj->logical_index) which are portable, contiguous and logically ordered (based on the resource organization in the locality tree). In general, one should only use logical indexes and just let hwloc do the internal conversion when really needed (when talking to the OS and hardware).

hwloc developers recommends that users do not use physical/OS indexes unless they really know what they are doing. The main reason for still using physical/OS indexes is when interacting with non-hwloc tools such as numactl or taskset, or when reading hardware information from raw sources such as /proc/cpuinfo.

Istopo options -1 and -p may be used to switch between logical indexes (prefixed with L#) and physical/OS indexes (P#). Converting one into the other may also be achieved with hwloc-calc which may manipulate either logical or physical indexes as input or output. See also hwloc-calc.

```
# Convert PU with physical number 3 into logical number
$ hwloc-calc -I pu --physical-input --logical-output pu:3
5

# Convert a set of NUMA nodes from logical to physical
# (beware that the output order may not match the input order)
$ hwloc-calc -I numa --logical-input --physical-output numa:2-3 numa:7
0.2.5
```

16.1.3 hwloc is only a structural model, it ignores performance models, memory bandwidth, etc.?

hwloc is indeed designed to provide applications with a structural model of the platform. This is an orthogonal approach to describing the machine with performance models, for instance using memory bandwidth or latencies measured by benchmarks. We believe that both approaches are important for helping application make the most of the hardware.

For instance, on a dual-processor host with four cores each, hwloc clearly shows which four cores are together. Latencies between all pairs of cores of the same processor are likely identical, and also likely lower than the latency between cores of different processors. However, the structural model cannot guarantee such implementation details. On the other side, performance models would reveal such details without always clearly identifying which cores are in the same processor.

The focus of hwloc is mainly of the structural modeling side. However, hwloc lets user adds performance information to the topology through distances (see Retrieve distances between objects and Add or remove distances between objects) or even custom annotations (see How do I annotate the topology with private notes?). hwloc may also use such distance information for grouping objects together (see hwloc only has a one-dimensional view of the architecture, it ignores distances? and What are these Group objects in my topology?).

16.1.4 hwloc only has a one-dimensional view of the architecture, it ignores distances?

hwloc places all objects in a tree. Each level is a one-dimensional view of a set of similar objects. All children of the same object (siblings) are assumed to be equally interconnected (same distance between any of them), while the distance between children of different objects (cousins) is supposed to be larger.

Modern machines exhibit complex hardware interconnects, so this tree may miss some information about the actual physical distances between objects. The hwloc topology may therefore be annotated with distance information that may be used to build a more realistic representation (multi-dimensional) of each level. For instance, there can be a distance matrix that representing the latencies between any pair of NUMA nodes if the BIOS and/or operating system reports them.

For more information about the distance API, see Retrieve distances between objects and Add or remove distances between objects.

16.1 Concepts 57

16.1.5 What are these Group objects in my topology?

hwloc comes with a set of predefined object types (Core, Package, NUMA node, Caches) that match the vast majority of hardware platforms. The HWLOC_OBJ_GROUP type was designed for cases where this set is not sufficient. Groups may be used anywhere to add more structure information to the topology, for instance to show that 2 out of 4 NUMA nodes are actually closer than the others. When applicable, the <code>subtype</code> field describes why a Group was actually added (see also Normal attributes).

hwloc currently uses Groups for the following reasons:

- NUMA parents when memory locality does not match any existing object.
- I/O parents when I/O locality does not match any existing object.
- · Distance-based groups made of close objects.
- AMD Bulldozer dual-core compute units (subtype is ComputeUnit, in the x86 backend), but these objects are usually merged with the L2 caches.
- Intel Extended Topology Enumeration levels (in the x86 backend).
- · Windows processor groups (unless they contain a single NUMA node, or a single Package, etc.).
- IBM S/390 "Books" on Linux (subtype is Book).
- · AIX unknown hierarchy levels.

hwloc Groups are only kept if no other object has the same locality information. It means that a Group containing a single child is merged into that child. And a Group is merged into its parent if it is its only child. For instance a Windows processor group containing a single NUMA node would be merged with that NUMA node since it already contains the relevant hierarchy information.

When inserting a custom Group with hwloc_hwloc_topology_insert_group_object(), this merging may be disabled by setting its dont_merge attribute.

16.1.6 What happens if my topology is asymmetric?

hwloc supports asymmetric topologies even if most platforms are usually symmetric. For example, there could be different types of processors in a single machine, each with different numbers of cores, symmetric multithreading, or levels of caches.

In practice, asymmetric topologies mostly appear when intermediate groups are added for I/O affinity: on a 4-package machine, an I/O bus may be connected to 2 packages. These packages are below an additional Group object, while the other packages are not (see also What are these Group objects in my topology?).

To understand how hwloc manages such cases, one should first remember the meaning of levels and cousin objects. All objects of the same type are gathered as horizontal levels with a given depth. They are also connected through the cousin pointers of the hwloc_obj structure. Object attribute (cache depth and type, group depth) are also taken in account when gathering objects as horizontal levels. To be clear: there will be one level for L1i caches, another level for L1d caches, another one for L2, etc.

If the topology is asymmetric (e.g., if a group is missing above some processors), a given horizontal level will still exist if there exist any objects of that type. However, some branches of the overall tree may not have an object located in that horizontal level. Note that this specific hole within one horizontal level does not imply anything for other levels. All objects of the same type are gathered in horizontal levels even if their parents or children have different depths and types.

See the diagram in Terms and Definitions for a graphical representation of such topologies.

Moreover, it is important to understand that a same parent object may have children of different types (and therefore, different depths). These children are therefore siblings (because they have the same parent), but they are not cousins (because they do not belong to the same horizontal level).

16.1.7 What happens to my topology if I disable symmetric multithreading, hyper-threading, etc. in the system?

hwloc creates one PU (processing unit) object per hardware thread. If your machine supports symmetric multithreading, for instance Hyper-Threading, each Core object may contain multiple PU objects:

```
$ lstopo -
...
Core L#0
PU L#0 (P#0)
PU L#1 (P#2)
Core L#1
PU L#2 (P#1)
PU L#3 (P#3)
```

x86 machines usually offer the ability to disable hyper-threading in the BIOS. Or it can be disabled on the Linux kernel command-line at boot time, or later by writing in sysfs virtual files.

If you do so, the hwloc topology structure does not significantly change, but some PU objects will not appear anymore. No level will disappear, you will see the same number of Core objects, but each of them will contain a single PU now. The PU level does not disappear either (remember that hwloc topologies always contain a PU level at the bottom of the topology) even if there is a single PU object per Core parent.

```
$ lstopo -
...
Core L#0
PU L#0 (P#0)
Core L#1
PU L#1 (P#1)
```

16.1.8 How may I ignore symmetric multithreading, hyper-threading, etc. in hwloc?

First, see What happens to my topology if I disable symmetric multithreading, hyper-threading, etc. in the system? for more information about multithreading.

If you need to ignore symmetric multithreading in software, you should likely manipulate hwloc Core objects directly:

Whenever you want to bind a process or thread to a core, make sure you singlify its cpuset first, so that the task is actually bound to a single thread within this core (to avoid useless migrations).

```
/* bind on the second core */
hwloc_obj_t core = hwloc_get_obj_by_type(topology, HWLOC_OBJ_CORE, 1);
hwloc_cpuset_t set = hwloc_bitmap_dup(core->cpuset);
hwloc_bitmap_singlify(set);
hwloc_set_cpubind(topology, set, 0);
hwloc_bitmap_free(set);
```

With hwloc-calc or hwloc-bind command-line tools, you may specify that you only want a single-thread within each core by asking for their first PU object:

16.2 Advanced 59

```
$ hwloc-calc core:4-7
0x0000ff00
$ hwloc-calc core:4-7.pu:0
0x00005500
```

When binding a process on the command-line, you may either specify the exact thread that you want to use, or ask hwloc-bind to singlify the cpuset before binding

```
$ hwloc-bind core:3.pu:0 -- echo "hello from first thread on core #3"
hello from first thread on core #3
...
$ hwloc-bind core:3 --single -- echo "hello from a single thread on core #3"
hello from a single thread on core #3"
```

16.2 Advanced

16.2.1 I do not want hwloc to rediscover my enormous machine topology every time I rerun a process

Although the topology discovery is not expensive on common machines, its overhead may become significant when multiple processes repeat the discovery on large machines (for instance when starting one process per core in a parallel application). The machine topology usually does not vary much, except if some cores are stopped/restarted or if the administrator restrictions are modified. Thus rediscovering the whole topology again and again may look useless.

For this purpose, hwloc offers XML import/export and shared memory features.

XML lets you save the discovered topology to a file (for instance with the Istopo program) and reload it later by setting the HWLOC_XMLFILE environment variable. The HWLOC_THISSYSTEM environment variable should also be set to 1 to assert that loaded file is really the underlying system.

Loading a XML topology is usually much faster than querying multiple files or calling multiple functions of the operating system. It is also possible to manipulate such XML files with the C programming interface, and the import/export may also be directed to memory buffer (that may for instance be transmitted between applications through a package). See also Importing and exporting topologies from/to XML files.

Note

The environment variable HWLOC_THISSYSTEM_ALLOWED_RESOURCES may be used to load a XML topology that contains the entire machine and restrict it to the part that is actually available to the current process (e.g. when Linux Cgroup/Cpuset are used to restrict the set of resources). See Environment Variables.

Shared-memory topologies consist in one process exposing its topology in a shared-memory buffer so that other processes (running on the same machine) may use it directly. This has the advantage of reducing the memory footprint since a single topology is stored in physical memory for multiple processes. However, it requires all processes to map this shared-memory buffer at the same virtual address, which may be difficult in some cases. This API is described in Sharing topologies between processes.

16.2.2 How many topologies may I use in my program?

hwloc lets you manipulate multiple topologies at the same time. However, these topologies consume memory and system resources (for instance file descriptors) until they are destroyed. It is therefore discouraged to open the same topology multiple times.

Sharing a single topology between threads is easy (see Thread Safety) since the vast majority of accesses are read-only.

If multiple topologies of different (but similar) nodes are needed in your program, have a look at How to avoid memory waste when manipulating multiple similar topologies?.

16.2.3 How to avoid memory waste when manipulating multiple similar topologies?

hwloc does not share information between topologies. If multiple similar topologies are loaded in memory, for instance the topologies of different identical nodes of a cluster, lots of information will be duplicated.

hwloc/diff.h (see also Topology differences) offers the ability to compute topology differences, apply or unapply them, or export/import to/from XML. However, this feature is limited to basic differences such as attribute changes. It does not support complex modifications such as adding or removing some objects.

16.2.4 How do I annotate the topology with private notes?

Each hwloc object contains a userdata field that may be used by applications to store private pointers. This field is only valid during the lifetime of these container object and topology. It becomes invalid as soon the topology is destroyed, or as soon as the object disappears, for instance when restricting the topology. The userdata field is not exported/imported to/from XML by default since hwloc does not know what it contains. This behavior may be changed by specifying application-specific callbacks with hwloc_topology_set_userdata_export callback() and hwloc_topology_set_userdata_import_callback().

Each object may also contain some *info* attributes (key name and value) that are setup by hwloc during discovery and that may be extended by the user with hwloc_obj_add_info() (see also Object attributes). Contrary to the userdata field which is unique, multiple info attributes may exist for each object, even with the same name. These attributes are always exported to XML. However, only character strings may be used as key names and values.

It is also possible to insert Misc objects with a custom name anywhere as a leaf of the topology (see Miscellaneous objects). And Misc objects may have their own userdata and info attributes just like any other object.

The hwloc-annotate command-line tool may be used for adding Misc objects and info attributes.

There is also a topology-specific userdata pointer that can be used to recognize different topologies by storing a custom pointer. It may be manipulated with $hwloc_topology_set_userdata()$ and $hwloc_topology_copology$

16.3 Caveats

16.3.1 Why is hwloc slow?

Building a hwloc topology on a large machine may be slow because the discovery of hundreds of hardware cores or threads takes time (especially when reading thousands of sysfs files on Linux). Ignoring some objects (for instance caches) that aren't useful to the current application may improve this overhead (see I only need binding, why should I use hwloc?). One should also consider using XML (see I do not want hwloc to rediscover my enormous machine topology every time I rerun a process) to work around such issues.

Additionally, Istopo enables most hwloc objects and discovery flags by default so that the output topology is as precise as possible (while hwloc disables many of them by default). This includes I/O device discovery through PCI libraries as well as external libraries such as NVML. To speed up Istopo, you may disable such features with command-line options such as -no-io.

When NVIDIA GPU probing is enabled with CUDA or NVML, one should make sure that the *Persistent* mode is enabled (with nvidia-smi -pm 1) to avoid significant GPU initialization overhead.

When AMD GPU discovery is enabled with OpenCL and hwloc is used remotely over ssh, some spurious round-trips on the network may significantly increase the discovery time. Forcing the DISPLAY environment variable to the remote X server display (usually:0) instead of only setting the COMPUTE variable may avoid this.

Also remember that these components may be disabled at build-time with configure flags such as --disable-opencl, --disable-cuda or --disable-nvml, and at runtime with the environment variable HWLOC_COMPONENTS=-opencl, -cuda, -nvml or with hwloc_topology_set_components().

16.3 Caveats 61

16.3.2 Does hwloc require privileged access?

hwloc discovers the topology by querying the operating system. Some minor features may require privileged access to the operation system. For instance memory module discovery on Linux is reserved to root, and the entire PCI discovery on Solaris and BSDs requires access to some special files that are usually restricted to root (/dev/pci* or /devices/pci*).

To workaround this limitation, it is recommended to export the topology as a XML file generated by the administrator (with the Istopo program) and make it available to all users (see Importing and exporting topologies from/to XML files). It will offer all discovery information to any application without requiring any privileged access anymore. Only the necessary hardware characteristics will be exported, no sensitive information will be disclosed through this XML export.

This XML-based model also has the advantage of speeding up the discovery because reading a XML topology is usually much faster than querying the operating system again.

The utility hwloc-dump-hwdata is also involved in gathering privileged information at boot time and making it available to non-privileged users (note that this may require a specific SELinux MLS policy module). However, it only applies to Intel Xeon Phi processors for now (see Why do I need hwloc-dump-hwdata for memory on Intel Xeon Phi processor?). See also HWLOC_DUMPED_HWDATA_DIR in Environment Variables for details about the location of dumped files.

16.3.3 What should I do when hwloc reports "operating system" warnings?

When the operating system reports invalid locality information (because of either software or hardware bugs), hwloc may fail to insert some objects in the topology because they cannot fit in the already built tree of resources. If so, hwloc will report a warning like the following. The object causing this error is ignored, the discovery continues but the resulting topology will miss some objects and may be asymmetric (see also What happens if my topology is asymmetric?).

```
**********

* hwloc received invalid information from the operating system.

* L3 (cpuset 0x000003f0) intersects with NUMANode (P#0 cpuset 0x0000003f) without inclusion!

* Error occurred in topology.c line 940

* Please report this error message to the hwloc user's mailing list,

* along with the files generated by the hwloc-gather-topology script.

* hwloc will now ignore this invalid topology information and continue.
```

These errors are common on large AMD platforms because of BIOS and/or Linux kernel bugs causing invalid L3 cache information. In the above example, the hardware reports a L3 cache that is shared by 2 cores in the first NUMA node and 4 cores in the second NUMA node. That's wrong, it should actually be shared by all 6 cores in a single NUMA node. The resulting topology will miss some L3 caches.

If your application does not care about cache sharing, or if you do not plan to request cache-aware binding in your process launcher, you may likely ignore this error (and hide it by setting HWLOC_HIDE_ERRORS=1 in your environment).

Some platforms report similar warnings about conflicting Packages and NUMANodes.

On x86 hosts, passing $\texttt{HWLOC_COMPONENTS} = x86$ in the environment may workaround some of these issues by switching to a different way to discover the topology.

Upgrading the BIOS and/or the operating system may help. Otherwise, as explained in the message, reporting this issue to the hwloc developers (by sending the tarball that is generated by the hwloc-gather-topology script on this platform) is a good way to make sure that this is a software (operating system) or hardware bug (BIOS, etc).

See also Questions and Bugs. Opening an issue on GitHub automatically displays hints on what information you should provide when reporting such bugs.

16.3.4 Why does Valgrind complain about hwloc memory leaks?

If you are debugging your application with Valgrind, you want to avoid memory leak reports that are caused by hwloc and not by your program.

hwloc itself is often checked with Valgrind to make sure it does not leak memory. However, some global variables in hwloc dependencies are never freed. For instance libz allocates its global state once at startup and never frees it so that it may be reused later. Some libxml2 global state is also never freed because hwloc does not know whether it can safely ask libxml2 to free it (the application may also be using libxml2 outside of hwloc).

These unfreed variables cause leak reports in Valgrind. hwloc installs a Valgrind *suppressions* file to hide them. You should pass the following command-line option to Valgrind to use it:

```
--suppressions=/path/to/hwloc-valgrind.supp
```

16.4 Platform-specific

16.4.1 How do I find the local MCDRAM NUMA node on Intel Xeon Phi processor?

Intel Xeon Phi processors introduced a new memory architecture by possibly having two distinct local memories : some normal memory (DDR) and some high-bandwidth on-package memory (MCDRAM). Processors can be configured in various clustering modes to have up to 4 *Clusters*. Moreover, each *Cluster* (quarter, half or whole processor) of the processor may have its own local parts of the DDR and of the MCDRAM. This memory and clustering configuration may be probed by looking at MemoryMode and ClusterMode attributes, see Hardware Platform Information and doc/examples/get-knl-modes.c in the source directory.

Starting with version 2.0, hwloc properly exposes this memory configuration. DDR and MCDRAM are attached as two memory children of the same parent, DDR first, and MCDRAM second if any. Depending on the processor configuration, that parent may be a Package, a Cache, or a Group object of type Cluster.

Hence cores may have one or two local NUMA nodes, listed by the core nodeset. An application may allocate local memory from a core by using that nodeset. The operating system will actually allocate from the DDR when possible, or fallback to the MCDRAM.

To allocate specifically on one of these memories, one should walk up the parent pointers until finding an object with some memory children. Looking at these memory children will give the DDR first, then the MCDRAM if any. Their nodeset may then be used for allocating or binding memory buffers.

One may also traverse the list of NUMA nodes until finding some whose cpuset matches the target core or PUs. The MCDRAM NUMA nodes may be identified thanks to the <code>subtype</code> field which is set to <code>MCDRAM</code>.

Command-line tools such as hwloc-bind may bind memory on the MCDRAM by using the *hbm* keyword. For instance, to bind on the first MCDRAM NUMA node:

```
$ hwloc-bind --membind --hbm numa:0 -- myprogram
$ hwloc-bind --membind numa:0 -- myprogram
```

16.4 Platform-specific 63

16.4.2 Why do I need hwloc-dump-hwdata for memory on Intel Xeon Phi processor?

Intel Xeon Phi processors may use the on-package memory (MCDRAM) as either memory or a memory-side cache (reported as a L3 cache by hwloc by default, see HWLOC_KNL_MSCACHE_L3 in Environment Variables). There are also several clustering modes that significantly affect the memory organization (see How do I find the local MCDRAM NUMA node on Intel Xeon Phi processor? for more information about these modes). Details about these are currently only available to privileged users. Without them, hwloc relies on a heuristic for guessing the modes.

The hwloc-dump-hwdata utility may be used to dump this privileged binary information into human-readable and world-accessible files that the hwloc library will later load. The utility should usually run as root once during boot, in order to update dumped information (stored under /var/run/hwloc by default) in case the MCDRAM or clustering configuration changed between reboots.

When SELinux MLS policy is enabled, a specific hwloc policy module may be required so that all users get access to the dumped files (in /var/run/hwloc by default). One may use hwloc policy files from the SELinux Reference Policy at https://github.com/TresysTechnology/refpolicy-contrib (see also the documentation at https://github.com/TresysTechnology/refpolicy/wiki/GettingStarted).

hwloc-dump-hwdata requires dmi-sysfs kernel module loaded.

The utility is currently unneeded on platforms without Intel Xeon Phi processors.

See HWLOC_DUMPED_HWDATA_DIR in Environment Variables for details about the location of dumped files.

16.4.3 How do I build for Intel Xeon Phi coprocessor?

Note

This section does not apply to standalone Intel Xeon Phi processors (Knights Landing and Knights Mill).

Intel Xeon Phi coprocessors (Knights Corner) usually runs a Linux environment but cross-compiling from the host is required. hwloc uses standard autotools options for cross-compiling.

If building with icc:

```
./configure CC="icc -mmic" --host=x86_64-klom-linux --build=x86_64-unknown-linux-gnu
```

If building with the Xeon Phi-specific GCC that comes with the MPSS environment, for instance /usr/linux-klom-4.7/bin/x8_64-klom-linux-gcc:

```
export PATH=$PATH:/usr/linux-k1om-4.7/bin/
./configure --host=x86_64-k1om-linux --build=x86_64-unknown-linux-gnu
```

16.4.4 How do I build hwloc for BlueGene/Q?

IBM BlueGene/Q machines run a standard Linux on the login/frontend nodes and a custom CNK (*Compute Node Kernel*) on the compute nodes.

To discover the topology of a login/frontend node, hwloc should be configured as usual, without any BlueGene/Q-specific option.

However, one would likely rather discover the topology of the compute nodes where parallel jobs are actually running. If so, hwloc must be cross-compiled with the following configuration line:

```
./configure --host=powerpc64-bgq-linux --disable-shared --enable-static \ CPPFLAGS='-I/bgsys/drivers/ppcfloor -I/bgsys/drivers/ppcfloor/spi/include/kernel/cnk/'
```

CPPFLAGS may have to be updated if your platform headers are installed in a different directory.

16.4.5 How do I build hwloc for Windows?

hwloc releases are available as pre-built ZIPs for Windows on both 32bits and 64bits x86 platforms. They are built using MSYS2 and MinGW on a Windows host. Such an environment allows using the Unix-like configure, make and make install steps without having to tweak too many variables or options. One may look at contrib/ci.inria.fr/job-3-mingw.sh in the hwloc repository for an example used for nightly testing.

hwloc releases also contain a basic Microsoft Visual Studio solution under contrib/windows/.

16.4.6 How to get useful topology information on NetBSD?

The NetBSD (and FreeBSD) backend uses x86-specific topology discovery (through the x86 component). This implementation requires CPU binding so as to query topology information from each individual logical processor. This means that hwloc cannot find any useful topology information unless user-level process binding is allowed by the NetBSD kernel. The security.models.extensions.user_set_cpu_affinity sysctl variable must be set to 1 to do so. Otherwise, only the number of logical processors will be detected.

16.4.7 Why does binding fail on AIX?

The AIX operating system requires specific user capabilities for attaching processes to resource sets (CAP_NU← MA_ATTACH). Otherwise functions such as hwloc_set_cpubind() fail (return -1 with errno set to EPERM).

This capability must also be inherited (through the additional CAP_PROPAGATE capability) if you plan to bind a process before forking another process, for instance with hwloc-bind.

These capabilities may be given by the administrator with:

```
chuser "capabilities=CAP_PROPAGATE,CAP_NUMA_ATTACH" <username>
```

16.5 Compatibility between hwloc versions

16.5.1 How do I handle API changes?

The hwloc interface is extended with every new major release. Any application using the hwloc API should be prepared to check at compile-time whether some features are available in the currently installed hwloc distribution.

For instance, to check whether the hwloc version is at least 2.0, you should use:

```
#include <hwloc.h>
#if HWLOC_API_VERSION >= 0x00020000
...
#endif
```

To check for the API of release X.Y.Z at build time, you may compare HWLOC_API_VERSION with (X << 16) + (Y << 8) + Z.

For supporting older releases that do not have HWLOC_OBJ_NUMANODE and HWLOC_OBJ_PACKAGE yet, you may use:

```
#include <hwloc.h>
#if HWLOC_API_VERSION < 0x00010b00
#define HWLOC_OBJ_NUMANODE HWLOC_OBJ_NODE
#define HWLOC_OBJ_PACKAGE HWLOC_OBJ_SOCKET
#endif</pre>
```

Once a program is built against a hwloc library, it may also dynamically link with compatible libraries from other hwloc releases. The version of that runtime library may be queried with hwloc_get_api_version(). See How do I handle ABI breaks? for using this function for testing ABI compatibility.

16.5.2 What is the difference between API and library version numbers?

HWLOC_API_VERSION is the version of the API. It changes when functions are added, modified, etc. However it does not necessarily change from one release to another. For instance, two releases of the same series (e.g. 2.0.3 and 2.0.4) usually have the same HWLOC_API_VERSION (0x00020000). However their HWLOC_VERSION strings are different ("2.0.3" and "2.0.4" respectively).

16.5.3 How do I handle ABI breaks?

The hwloc interface was deeply modified in release 2.0 to fix several issues of the 1.x interface (see Upgrading to the hwloc 2.0 API and the NEWS file in the source directory for details). The ABI was broken, which means applications must be recompiled against the new 2.0 interface.

To check that you are not mixing old/recent headers with a recent/old runtime library, check the major revision number in the API version:

To specifically detect v2.0 issues:

```
#include <hwloc.h>
#if HWLOC_API_VERSION >= 0x00020000
   /* headers are recent */
   if (hwloc_get_api_version() < 0x20000)
        ... error out, the hwloc runtime library is older than 2.0 ...
#else
   /* headers are pre-2.0 */
   if (hwloc_get_api_version() >= 0x20000)
        ... error out, the hwloc runtime library is more recent than 2.0 ...
#endif
```

In theory, library sonames prevent linking with incompatible libraries. However custom hwloc installations or improperly configured build environments may still lead to such issues. Hence running one of the above (cheap) checks before initializing hwloc topology may be useful.

16.5.4 Are XML topology files compatible between hwloc releases?

XML topology files are forward-compatible: a XML file may be loaded by a hwloc library that is more recent than the hwloc release that exported that file.

However, hwloc XMLs are not always backward-compatible: Topologies exported by hwloc 2.x cannot be imported by 1.x by default (see XML changes for working around such issues). There are also some corner cases where backward compatibility is not guaranteed because of changes between major releases (for instance 1.11 XMLs could not be imported in 1.10).

XMLs are exchanged at runtime between some components of the HPC software stack (for instance the resource managers and MPI processes). Building all these components on the same (cluster-wide) hwloc installation is a good way to avoid such incompatibilities.

16.5.5 Are synthetic strings compatible between hwloc releases?

Synthetic strings (see Synthetic topologies) are forward-compatible: a synthetic string generated by a release may be imported by future hwloc libraries.

However they are often not backward-compatible because new details may have been added to synthetic descriptions in recent releases. Some flags may be given to hwloc_topology_export_synthetic() to avoid such details and stay backward compatible.

16.5.6 Is it possible to share a shared-memory topology between different hwloc releases?

Shared-memory topologies (see Sharing topologies between processes) have strong requirements on compatibility between hwloc libraries. Adopting a shared-memory topology fails if it was exported by a non-compatible hwloc release. Releases with same major revision are usually compatible (e.g. hwloc 2.0.4 may adopt a topology exported by 2.0.3) but different major revisions may be incompatible (e.g. hwloc 2.1.0 cannot adopt from 2.0.x).

Topologies are shared at runtime between some components of the HPC software stack (for instance the resource managers and MPI processes). Building all these components on the same (system-wide) hwloc installation is a good way to avoid such incompatibilities.

Upgrading to the hwloc 2.0 API

See Compatibility between hwloc versions for detecting the hwloc version that you are compiling and/or running against.

17.1 New Organization of NUMA nodes and Memory

17.1.1 Memory children

In hwloc v1.x, NUMA nodes were inside the tree, for instance Packages contained 2 NUMA nodes which contained a L3 and several cache.

Starting with hwloc v2.0, NUMA nodes are not in the main tree anymore. They are attached under objects as *Memory Children* on the side of normal children. This memory children list starts at obj->memory_first_child and its size is obj->memory_arity. Hence there can now exist two local NUMA nodes, for instance on Intel Xeon Phi processors.

The normal list of children (starting at obj->first_child, ending at obj->last_child, of size obj->arity, and available as the array obj->children) now only contains CPU-side objects: PUs, Cores, Packages, Caches, Groups, Machine and System. hwloc_get_next_child() may still be used to iterate over all children of all lists.

Hence the CPU-side hierarchy is built using normal children, while memory is attached to that hierarchy depending on its affinity.

17.1.2 Examples

• a UMA machine with 2 packages and a single NUMA node is now modeled as a "Machine" object with two "Package" children and one "NUMANode" memory children (displayed first in Istopo below):

```
Machine (1024MB total)

NUMANode L#0 (P#0 1024MB)

Package L#0

Core L#0 + PU L#0 (P#0)

Core L#1 + PU L#1 (P#1)

Package L#1

Core L#2 + PU L#2 (P#2)

Core L#3 + PU L#3 (P#3)
```

• a machine with 2 packages with one NUMA node and 2 cores in each is now:

```
Machine (2048MB total)

Package L#0

NUMANode L#0 (P#0 1024MB)

Core L#0 + PU L#0 (P#0)

Core L#1 + PU L#1 (P#1)

Package L#1

NUMANode L#1 (P#1 1024MB)

Core L#2 + PU L#2 (P#2)

Core L#3 + PU L#3 (P#3)
```

• if there are two NUMA nodes per package, a Group object may be added to keep cores together with their local NUMA node:

```
Machine (4096MB total)

Package L#0

Group0 L#0

NUMANode L#0 (P#0 1024MB)

Core L#0 + PU L#0 (P#0)

Core L#1 + PU L#1 (P#1)

Group0 L#1

NUMANode L#1 (P#1 1024MB)

Core L#2 + PU L#2 (P#2)

Core L#3 + PU L#3 (P#3)

Package L#1
```

• if the platform has L3 caches whose localities are identical to NUMA nodes, Groups aren't needed:

```
Machine (4096MB total)

Package L#0

L3 L#0 (16MB)

NUMANode L#0 (P#0 1024MB)

Core L#0 + PU L#0 (P#0)

Core L#1 + PU L#1 (P#1)

L3 L#1 (16MB)

NUMANode L#1 (P#1 1024MB)

Core L#2 + PU L#2 (P#2)

Core L#3 + PU L#3 (P#3)

Package L#1

[...]
```

17.1.3 NUMA level and depth

NUMA nodes are not in "main" tree of normal objects anymore. Hence, they don't have a meaningful depth anymore (like I/O and Misc objects). They have a virtual (negative) depth (HWLOC_TYPE_DEPTH_NUMANODE) so that functions manipulating depths and level still work, and so that we can still iterate over the level of NUMA nodes just like for any other level.

For instance we can still use lines such as

```
int depth = hwloc_get_type_depth(topology, HWLOC_OBJ_NUMANODE);
hwloc_obj_t obj = hwloc_get_obj_by_type(topology, HWLOC_OBJ_NUMANODE, 4);
hwloc_obj_t node = hwloc_get_next_obj_by_depth(topology, HWLOC_TYPE_DEPTH_NUMANODE, prev);
```

The NUMA depth should not be compared with others. An unmodified code that still compares NUMA and Package depths (to find out whether Packages contain NUMA or the contrary) would now always assume Packages contain NUMA (because the NUMA depth is negative).

However, the depth of the Normal parents of NUMA nodes may be used instead. In the last example above, NUMA nodes are attached to L3 caches, hence one may compare the depth of Packages and L3 to find out that NUMA nodes are contained in Packages. This depth of parents may be retrieved with hww.numer.nd/. This depth of parents may be retrieved with hww.numer.nd/. This depth of parents may be retrieved with hww.numer.nd/. This depth of parents may be retrieved with hww.numer.nd/<a href="https://www.numer.nd/

17.1.4 Finding Local NUMA nodes and looking at Children and Parents

Applications that walked up/down to find NUMANode parent/children must now be updated. Instead of looking directly for a NUMA node, one should now look for an object that has some memory children. NUMA node(s) will be be attached there. For instance, when looking for a NUMA node above a given core core:

```
hwloc_obj_t parent = core->parent;
while (parent && !parent->memory_arity)
  parent = parent->parent; /* no memory child, walk up */
if (parent)
  /* use parent->memory_first_child (and its siblings if there are multiple local NUMA nodes) */
```

The list of local NUMA nodes (usually a single one) is also described by the nodeset attribute of each object (which contains the physical indexes of these nodes). Iterating over the NUMA level is also an easy way to find local NUMA nodes:

```
hwloc_obj_t tmp = NULL;
while ((tmp = hwloc_get_next_obj_by_type(topology, HWLOC_OBJ_NUMANODE, tmp)) != NULL) {
   if (hwloc_bitmap_isset(obj->nodeset, tmp->os_index))
     /* tmp is a NUMA node local to obj, use it */
}
```

Similarly finding objects that are close to a given NUMA nodes should be updated too. Instead of looking at the NUMA node parents/children, one should now find a Normal parent above that NUMA node, and then look at its parents/children as usual:

```
hwloc_obj_t tmp = obj->parent;
while (hwloc_obj_type_is_memory(tmp))
  tmp = tmp->parent;
/* now use tmp instead of obj */
```

To avoid such hwloc v2.x-specific and NUMA-specific cases in the code, a **generic lookup for any kind of object, including NUMA nodes**, might also be implemented by iterating over a level. For instance finding an object of type type which either contains or is included in object obj can be performed by traversing the level of that type and comparing CPU sets:

```
hwloc_obj_t tmp = NULL;
while ((tmp = hwloc_get_next_obj_by_type(topology, type, tmp)) != NULL) {
  if (hwloc_bitmap_intersects(tmp->cpuset, obj->cpuset))
    /* tmp matches, use it */
}
```

This generic lookup works whenever type or obj are Normal or Memory objects since both have CPU sets. Moreover, it is compatible with the hwloc v1.x API.

17.2 4 Kinds of Objects and Children

17.2.1 I/O and Misc children

I/O children are not in the main object children list anymore either. They are in the list starting at obj->io_\cdot first_child and whose size if obj->io_arity.

Misc children are not in the main object children list anymore. They are in the list starting at obj->misc_\children first_child nd whose size if obj->misc_arity.

See hwloc_obj for details about children lists.

hwloc_get_next_child() may still be used to iterate over all children of all lists.

17.2.2 Kinds of objects

Given the above, objects may now be of 4 kinds:

- · Normal (everything not listed below, including Machine, Package, Core, PU, CPU Caches, etc);
- Memory (currently NUMA nodes or Memory-side Caches), attached to parents as Memory children;
- I/O (Bridges, PCI and OS devices), attached to parents as I/O children;
- · Misc objects, attached to parents as Misc children.

See hwloc_obj for details about children lists.

For a given object type, the kind may be found with hwloc_obj_type_is_normal(), hwloc_obj_type_is_memory(), hwloc_obj_type_is_normal(), or comparing with HWLOC_OBJ_MISC.

Normal and Memory objects have (non-NULL) CPU sets and nodesets, while I/O and Misc objects don't have any sets (they are NULL).

17.3 HWLOC_OBJ_CACHE replaced

Instead of a single HWLOC_OBJ_CACHE, there are now 8 types HWLOC_OBJ_L1CACHE, ..., HWLOC_OBJ_ L5CACHE, HWLOC_OBJ_L1ICACHE, ..., HWLOC_OBJ_L3ICACHE.

Cache object attributes are unchanged.

hwloc_get_cache_type_depth() is not needed to disambiguate cache types anymore since new types can be passed to hwloc_get_type_depth() without ever getting HWLOC_TYPE_DEPTH_MULTIPLE anymore.

hwloc_obj_type_is_cache(), hwloc_obj_type_is_dcache() and hwloc_obj_type_is_icache() may be used to check whether a given type is a cache, data/unified cache or instruction cache.

17.4 allowed cpuset and allowed nodeset only in the main topology

Objects do not have $allowed_cpuset$ and $allowed_nodeset$ anymore. They are only available for the entire topology using $hwloc_topology_get_allowed_cpuset()$ and $hwloc_topology_get_allowed_nodeset()$.

As usual, those are only needed when the INCLUDE_DISALLOWED topology flag is given, which means disallowed objects are kept in the topology. If so, one may find out whether some PUs inside an object is allowed by checking

```
\verb|hwloc_bitmap_intersects(obj->cpuset, hwloc_topology_get_allowed_cpuset(topology)||
```

Replace cpusets with nodesets for NUMA nodes. To find out which ones, replace intersects() with and() to get the actual intersection.

17.5 Object depths are now signed int

obj->depth as well as depths given to functions such as hwloc_get_obj_by_depth() or returned by hwloc_copology_get_depth() are now signed int.

Other depth such as cache-specific depth attribute are still unsigned.

17.6 Memory attributes become NUMANode-specific

Memory attributes such as $obj->memory.local_memory$ are now only available in NUMANode-specific attributes in $obj->attr->numanode.local_memory$.

```
obj->memory.total_memory is available in all objects as obj->total_memory.
```

See hwloc obj attr u::hwloc numanode attr s and hwloc obj for details.

17.7 Topology configuration changes

hwloc_topology_ignore_type(), hwloc_topology_ignore_type_keep_structure() and hwloc_topology_ignore
 _all_keep_structure() are respectively superseded by

```
hwloc_topology_set_type_filter(topology, type, HWLOC_TYPE_FILTER_KEEP_NONE);
hwloc_topology_set_type_filter(topology, type, HWLOC_TYPE_FILTER_KEEP_STRUCTURE);
hwloc_topology_set_all_types_filter(topology, HWLOC_TYPE_FILTER_KEEP_STRUCTURE);
```

Also, the meaning of KEEP_STRUCTURE has changed (only entire levels may be ignored, instead of single objects), the old behavior is not available anymore.

HWLOC TOPOLOGY FLAG ICACHES is superseded by

```
hwloc_topology_set_icache_types_filter(topology, HWLOC_TYPE_FILTER_KEEP_ALL);
```

• HWLOC_TOPOLOGY_FLAG_WHOLE_IO, HWLOC_TOPOLOGY_FLAG_IO_DEVICES and HWLOC_TO

POLOGY_FLAG_IO_BRIDGES replaced.

To keep all I/O devices (PCI, Bridges, and OS devices), use:

```
hwloc_topology_set_io_types_filter(topology, HWLOC_TYPE_FILTER_KEEP_ALL);
```

To only keep important devices (Bridges with children, common PCI devices and OS devices):

```
hwloc_topology_set_io_types_filter(topology, HWLOC_TYPE_FILTER_KEEP_IMPORTANT);
```

17.8 XML changes

- 2.0 XML files are not compatible with 1.x
- 2.0 can load 1.x files, but only NUMA distances are imported. Other distance matrices are ignored (they were never used by default anyway).
- 2.0 can export 1.x-compatible files, but only distances attached to the root object are exported (i.e. distances that cover the entire machine). Other distance matrices are dropped (they were never used by default anyway).

Users are advised to negociate hwloc versions between exporter and importer: If the importer isn't 2.x, the exporter should export to 1.x. Otherwise, things should work by default.

Hence hwloc_topology_export_xml() and hwloc_topology_export_xmlbuffer() have a new flags argument. to force a hwloc-1.x-compatible XML export.

- If both always support 2.0, don't pass any flag.
- When the importer uses hwloc 1.x, export with HWLOC_TOPOLOGY_EXPORT_XML_FLAG_V1. Otherwise the importer will fail to import.
- When the exporter uses hwloc 1.x, it cannot pass any flag, and a 2.0 importer can import without problem.

```
#if HWLOC_API_VERSION >= 0x20000
  if (need 1.x compatible XML export)
    hwloc_topology_export_xml(...., HWLOC_TOPOLOGY_EXPORT_XML_FLAG_V1);
  else /* need 2.x compatible XML export */
    hwloc_topology_export_xml(...., 0);
#else
  hwloc_topology_export_xml(....);
#endif
```

Additionally, hwloc_topology_diff_load_xml(), hwloc_topology_diff_load_xmlbuffer(), hwloc_topology_diff_export __ xml(), hwloc_topology_diff_export_xmlbuffer() and hwloc_topology_diff_destroy() lost the topology argument: The first argument (topology) isn't needed anymore.

17.9 Distances API totally rewritten

The new distances API is in hwloc/distances.h.

Distances are not accessible directly from objects anymore. One should first call hww.number.get() (or a variant) to retrieve distances (possibly with one call to get the number of available distances structures, and another call to actually get them). Then it may consult these structures, and finally release them.

The set of object involved in a distances structure is specified by an array of objects, it may not always cover the entire machine or so.

17.10 Return values of functions

Bitmap functions (and a couple other functions) can return errors (in theory).

Most bitmap functions may have to reallocate the internal bitmap storage. In v1.x, they would silently crash if realloc failed. In v2.0, they now return an int that can be negative on error. However, the preallocated storage is 512 bits, hence realloc will not even be used unless you run hwloc on machines with larger PU or NUMAnode indexes.

hwloc_obj_add_info(), hwloc_cpuset_from_nodeset() and hwloc_cpuset_from_nodeset() also return an int, which would be -1 in case of allocation errors.

17.11 Misc API changes

- hwloc_type_sscanf() extends hwloc_obj_type_sscanf() by passing a union hwloc_obj_attr_u which may receive Cache, Group, Bridge or OS device attributes.
- hwloc_type_sscanf_as_depth() is also added to directly return the corresponding level depth within a topology.
- hwloc_topology_insert_misc_object_by_cpuset() is replaced with hwloc_topology_alloc_group_object() and hwloc_topology_insert_group_object().
- hwloc_topology_insert_misc_object_by_parent() is replaced with hwloc_topology_insert_misc_object().

17.12 API removals and deprecations

- HWLOC_OBJ_SYSTEM removed: The root object is always HWLOC_OBJ_MACHINE
- _membind_nodeset() memory binding interfaces deprecated: One should use the variant without _nodeset suffix and pass the HWLOC_MEMBIND_BYNODESET flag.
- HWLOC MEMBIND REPLICATE removed: no supported operating system supports it anymore.
- hwloc_obj_snprintf() removed because it was long-deprecated by hwloc_obj_type_snprintf() and hwloc_obj
 _attr_snprintf().
- hwloc_obj_type_sscanf() deprecated, hwloc_obj_type_of_string() removed.
- hwloc_cpuset_from/to_nodeset_strict() deprecated: Now useless since all topologies are NUMA. Use the variant without the _strict suffix
- hwloc distribute() and hwloc distributev() removed, deprecated by hwloc distrib().
- The Custom interface (hwloc_topology_set_custom(), etc.) was removed, as well as the corresponding command-line tools (hwloc-assembler, etc.). Topologies always start with object with valid cpusets and nodesets.
- obj->online_cpuset removed: Offline PUs are simply listed in the complete_cpuset as previously.
- obj->os_level removed.

Network Locality (netloc)

Portable abstraction of network topologies for high-performance computing.


The netloc documentation spans of these sections:

- · Network Locality (netloc), this section below
- · Netloc with Scotch

18.1 Netloc Summary

The Portable Network Locality (netloc) software package provides network topology discovery tools, and an abstract representation of those networks topologies for a range of network types and configurations. It is provided as a companion to the Portable Hardware Locality (hwloc) package. These two software packages work together to provide a comprehensive view of the HPC system topology, spanning from the processor cores in one server to the cores in another - including the complex network(s) in between.

Towards this end, netloc is divided into two sets of components. The first tools are for the admin to extract the information about the topology of the machines with topology discovery tools for each network type and discovery technique (called readers). The second set of tools is for the user to exploit the collected information: to display the topology or create a topology-aware mapping of the processes of an application.

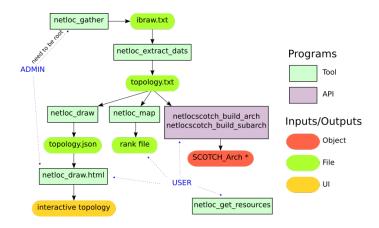

18.1.1 Supported Networks

For now, only InfiniBand (See Setup) is supported, but it is planned to be extended it very soon.

18.2 Netloc Installation

The generic installation procedure for both hwloc and netloc is described in Installation.

Note that netloc is currently not supported on as many platforms as the original hwloc project. netloc is enabled by default when supported, or can be disabled by passing --disable-netloc to the configure command-line.

18.3 Setup

To use Netloc tools, we need two steps. The first step consists in getting information about network directly from tools distributed by manufacturers. For Infiniband, for instance, this operation needs privileges to access to the network device. For this step we have wrappers in Netloc that will call the right tools with the right options.

The second step will transform the raw files generated by manufacturer tools, into files in a format readable by Netloc tools, and that will not depend on network technologies.

To be clear, let's take an example with Infiniband. This first step is handled by netloc_ib_gather_raw that will call ibnetdiscover and ibroutes tools to generate the necessary raw data files. The step has to be run by an administrator, since the Infiniband tools need to access to the network device.

```
shell$ netloc_ib_gather_raw --help
Usage: netloc_ib_gather_raw [options] <outdir>
  Dumps topology information to <outdir>/ib-raw/
  Subnets are guessed from the <outdir>/hwloc/ directory where
  the hwloc XML exports of some nodes are stored.
Options:
  -sudo
    Pass sudo to internal ibnetdiscover and ibroute invocations.
    Useful when the entire script cannot run as root.
 --hwloc-dir <dir>
    Use <dir> instead of <outdir>/hwloc/ for hwloc XML exports.
 --force-subnet [<subnet>:]<board>:<port> to force the discovery
    Do not guess subnets from hwloc XML exports.
    Force discovery on local board <poard> port <port>
    and optionally force the subnet id <subnet>
    instead of reading it from the first GID.
    Examples: --force-subnet mlx4_0:1
              --force-subnet fe80:0000:0000:0000:mlx4_0:1
 --ibnetdiscover /path/to/ibnetdiscover
 --ibroute /path/to/ibroute
    Specify exact location of programs. Default is /usr/bin/<program>
  -sleep <n>
    Sleep for <n> seconds between invocations of programs probing the network
 --ignore-errors
    Ignore errors from ibnetdiscover and ibroute, assume their outputs are ok
 --force -f
   Always rediscover to overwrite existing files without asking
 --verbose -v
    Add verbose messages
 --dry-run
   Do not actually run programs or modify anything
 --help -h
   Show this help
shell$ ./netloc_ib_gather_raw /home/netloc/data
```

18.4 Topology display 77

```
WARNING: Not running as root.
Using /home/netloc/data/hwloc as hwloc lstopo XML directory.
Exporting local node hwloc XML...
  Running lstopo-no-graphics...
Found 1 subnets in hwloc directory:
 Subnet fe80:0000:0000:0000 is locally accessible from board qib0 port 1.
Looking at fe80:0000:0000:0000 (through local board qib0 port 1)...
 Running ibnetdiscover...
 Getting routes...
 Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L112' LID 18...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L108' LID 20...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L102' LID 23...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L104' LID 25...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L106' LID 24...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L114' LID 22...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L116' LID 21...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L109' LID 12...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L111' LID 11...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L107' LID 13...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L103' LID 17...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L105' LID 16...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L113' LID 15...
```

The second step, that can be done by a regular user, is done by the tool netloc_ib_extract_dats.

18.4 Topology display

Netloc provides a tool, netloc_draw.html, that displays a topology in a web browser, by using a JSON file.

18.4.1 Generate the JSON file

In order to display a topology, Netloc needs to generate a JSON file corresponding to a topology. For this operation, the user must run netloc_draw_to_json.


```
shell$ netloc_draw_to_json --help
Usage: netloc_draw_to_json <path to topology directory>
shell$ netloc_draw_to_json /home/netloc/data/netloc
```

The netloc_draw_to_json command will write a JSON file for each topology file found in the input directory. The output files, written also in the input directory, can be open by netloc_draw.html in a web browser.

18.4.2 Using netloc_draw

Once the JSON file is opened, the rendering is generated by the Javascript vis library for computing the position of the nodes. From the interface, it is possible to search for a specific node, to color the nodes, to expand merged switches, to show statistics, to export as an image... The user can interact with the nodes by moving them. For now, there are bugs and other nodes might move too.

The placement of the nodes is done statically if the topology is detected as a tree. If not, vis.js will use physics to find good positions, and it can be very time consuming.

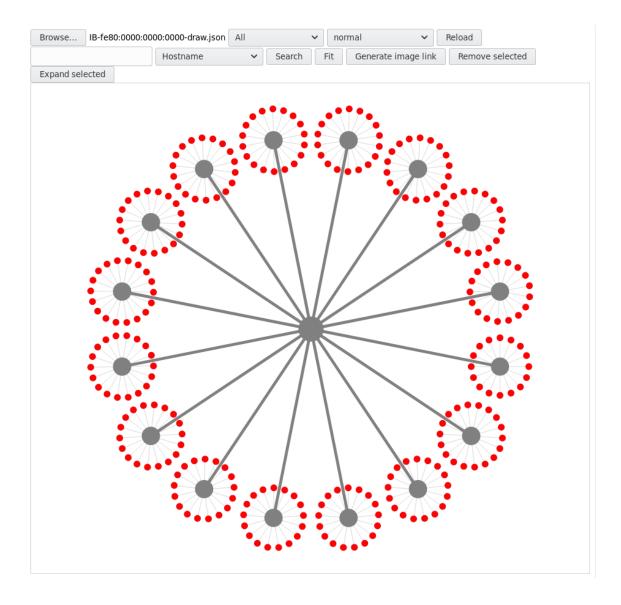

Chapter 19

Netloc with Scotch

Scotch is a toolbox for graph partitioning [XXX], that can do mapping between a communication graph and an architecture. Netloc interfaces with Scotch, by getting the topology of the machine and building the Scotch architecture. It is also possible to directly build a mapping file that can be given to mpirun.

19.1 Introduction

Scotch is able to deal architectures to represent the topology of a complete machine. Scotch handles several types of topologies: complete graphs, hypercubes, fat trees, meshes, torus, and random graphs. Moreover, Scotch is able to manage parts of architectures that are called sub-architectures. Thus, from a complete architecture, we can create a sub-architecture that will represent the available resources of the complete machine.

19.2 Setup

The first step in order to use Netloc tools is to discover the network. For this task, we provide tools called netloc—gather that are wrappers to the dedicated tools provided by the manufacturer of the network, that generate the raw data given by the devices. This task needs privileges to access to the network devices. Once, this task is completed, the raw data is converted in a generic format independent to the fabric by extract_dats. Figure 1 shows how the different modules of Netloc are linked, and what are the tools provided by Netloc.

19.3 Tools and API

When the machine is discovered and all the needed files are generated as seen previously, a user can call the netlocscotch functions from the API and interact with Scotch.

19.3.1 Build Scotch architectures

Netloc provides a function to export the built topology into the Scotch format. That will give the possibility to the user to play with the topology in Scotch. Since Netloc matches the discovered topology with known topologies, the Scotch architecture won't be random graphs but known topologies also in Scotch that will lead to optimized graph algorithms. This function is called netlocscotch build arch.

When the network topology is a tree, the topology converted by netlocscotch is the complete topology of the machine containing intranode topologies from hwloc. In this case, merging the two levels results in a bigger tree. For other network topologies, the global graph created for Scotch is a generic graph since it not not (at this moment) possible to create nested known architectures.

80 Netloc with Scotch

19.3.2 Build Scotch sub-architectures

Most of the time, the user does not have access to the complete machine. He uses a resource manager to run his application and he will gain access only to a set of nodes. In this case getting the Scotch architecture of the complete machine is not relevant. Fortunately, Netloc is also able to build a Scotch sub-architecture that will contain only the available nodes. For this operation the user needs to run a specific program, netloc_get_resources, that will record in a file, the lists of available nodes and available cores by using MPI and hwloc. From this file, the function netlocscotch_build_subarch will build the Scotch sub-architecture.

19.3.3 Mapping of processes

A main goal in having all these data about the network topology, especially in Scotch structures, is to help the process placement. For that, we use the mapping of a process graph to the architecture provided by Scotch. As we have seen previously, Netloc is able to detect the structure of the topology and will build the adapted Scotch architecture that will be more efficient than a random structure.

In case, the network topology is not a tree, netlocscotch converts the complete topology into a generic graph. The drawback in that is the Scotch graph algorithms are less efficient. To overcome that, netlocscotch does two steps of mapping: first it maps the processes to the nodes, and then for each node maps the processes to the cores. We have to conduct tests to check if the method gives better results than using a generic graph directly.

The other input needed in Scotch is the process graph. Since we want to optimize the placement to decrease the communication time, a good metric for building the application graph is the amount of communications between all pairs of processes. Studies still have to be done to choose, in the most efficient way, what we take into account to define the amount of communications between the number of messages, the size of messages... This information will be transformed into a process graph.

Once we have a good mapping computed by Scotch, we can give it to the user, or Netloc can even generate the corresponding rank file useful to MPI.

Chapter 20

Module Index

20.1 Modules

Here is a list of all modules:

API version
Object Sets (hwloc_cpuset_t and hwloc_nodeset_t)
Object Types
Object Structure and Attributes
Topology Creation and Destruction
Object levels, depths and types
Converting between Object Types and Attributes, and Strings
Consulting and Adding Key-Value Info Attributes
CPU binding
Memory binding
Changing the Source of Topology Discovery
Topology Detection Configuration and Query
Modifying a loaded Topology
Finding Objects inside a CPU set
Finding Objects covering at least CPU set
Looking at Ancestor and Child Objects
Kinds of object Type
Looking at Cache Objects
Finding objects, miscellaneous helpers
Distributing items over a topology
CPU and node sets of entire topologies
Converting between CPU sets and node sets
Finding I/O objects
The bitmap API
Exporting Topologies to XML
Exporting Topologies to Synthetic
Retrieve distances between objects
Helpers for consulting distance matrices
Add or remove distances between objects
Linux-specific helpers
Interoperability with Linux libnuma unsigned long masks
Interoperability with Linux libnuma bitmask
Interoperability with glibc sched affinity
Interoperability with OpenCL
Interoperability with the CLIDA Driver API

82 Module Index

Interoperability with the CUDA Runtime API	197
Interoperability with the NVIDIA Management Library	199
Interoperability with OpenGL displays	201
Interoperability with Intel Xeon Phi (MIC)	203
Interoperability with OpenFabrics	204
Topology differences	206
Sharing topologies between processes	213
Components and Plugins: Discovery components	216
Components and Plugins: Discovery backends	217
Components and Plugins: Generic components	219
Components and Plugins: Core functions to be used by components	220
Components and Plugins: Filtering objects	224
Components and Plugins: helpers for PCI discovery	226
Components and Plugins: finding PCI objects during other discoveries	228
Notice ADI	റവ

Chapter 21

Data Structure Index

21.1 Data Structures

Here are the data structures with brief descriptions:

nwioc_backend
Discovery backend structure
hwloc_obj_attr_u::hwloc_bridge_attr_s
Bridge specific Object Attribues
hwloc_obj_attr_u::hwloc_cache_attr_s
Cache-specific Object Attributes
hwloc_cl_device_topology_amd
hwloc_component
Generic component structure
hwloc_disc_component
Discovery component structure
hwloc_disc_status
Discovery status structure
hwloc_distances_s
Matrix of distances between a set of objects
hwloc_obj_attr_u::hwloc_group_attr_s
Group-specific Object Attributes
hwloc_info_s
Object info
hwloc_obj_attr_u::hwloc_numanode_attr_s::hwloc_memory_page_type_s
Array of local memory page types, NULL if no local memory and page_types is 0 246
hwloc_obj_attr_u::hwloc_numanode_attr_s
NUMA node-specific Object Attributes
hwloc_obj
Structure of a topology object
hwloc_obj_attr_u
Object type-specific Attributes
hwloc_obj_attr_u::hwloc_osdev_attr_s
OS Device specific Object Attributes
hwloc_obj_attr_u::hwloc_pcidev_attr_s
PCI Device specific Object Attributes
hwloc_topology_cpubind_support
Flags describing actual PU binding support for this topology
hwloc_topology_diff_u::hwloc_topology_diff_generic_s
hwloc topology diff obj attr u::hwloc topology diff obj attr generic s

84 Data Structure Index

hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s	263
hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_string_s	
String attribute modification with an optional name	264
hwloc_topology_diff_obj_attr_u	
One object attribute difference	265
hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_uint64_s	
Integer attribute modification with an optional index	266
hwloc_topology_diff_u::hwloc_topology_diff_too_complex_s	267
hwloc_topology_diff_u	
One element of a difference list between two topologies	268
hwloc_topology_discovery_support	
Flags describing actual discovery support for this topology	269
hwloc_topology_membind_support	
Flags describing actual memory binding support for this topology	270
hwloc_topology_support	
Set of flags describing actual support for this topology	273

Chapter 22

Module Documentation

22.1 API version

Macros

- #define HWLOC_API_VERSION 0x00020100
- #define HWLOC COMPONENT ABI 6

Functions

• unsigned hwloc_get_api_version (void)

22.1.1 Detailed Description

22.1.2 Macro Definition Documentation

22.1.2.1 HWLOC_API_VERSION

#define HWLOC_API_VERSION 0x00020100

Indicate at build time which hwloc API version is being used.

This number is updated to (X << 16)+(Y << 8)+Z when a new release X.Y.Z actually modifies the API.

Users may check for available features at build time using this number (see How do I handle API changes?).

Note

This should not be confused with HWLOC_VERSION, the library version. Two stable releases of the same series usually have the same HWLOC_API_VERSION even if their HWLOC_VERSION are different.

22.1.2.2 HWLOC_COMPONENT_ABI

```
#define HWLOC_COMPONENT_ABI 6
```

Current component and plugin ABI version (see hwloc/plugins.h)

22.1.3 Function Documentation

22.1.3.1 hwloc_get_api_version()

Indicate at runtime which hwloc API version was used at build time.

Should be HWLOC_API_VERSION if running on the same version.

22.2 Object Sets (hwloc_cpuset_t and hwloc_nodeset_t)

Typedefs

- typedef hwloc_bitmap_t hwloc_cpuset_t
- typedef hwloc_const_bitmap_t hwloc_const_cpuset_t
- typedef hwloc_bitmap_t hwloc_nodeset_t
- · typedef hwloc const bitmap thwloc const nodeset t

22.2.1 Detailed Description

Hwloc uses bitmaps to represent two distinct kinds of object sets: CPU sets (hwloc_cpuset_t) and NUMA node sets (hwloc_nodeset_t). These types are both typedefs to a common back end type (hwloc_bitmap_t), and therefore all the hwloc bitmap functions are applicable to both hwloc_cpuset_t and hwloc_nodeset_t (see The bitmap API).

The rationale for having two different types is that even though the actions one wants to perform on these types are the same (e.g., enable and disable individual items in the set/mask), they're used in very different contexts: one for specifying which processors to use and one for specifying which NUMA nodes to use. Hence, the name difference is really just to reflect the intent of where the type is used.

22.2.2 Typedef Documentation

```
22.2.2.1 hwloc_const_cpuset_t

typedef hwloc_const_bitmap_t hwloc_const_cpuset_t

A non-modifiable hwloc_cpuset_t.

22.2.2.2 hwloc_const_nodeset_t

typedef hwloc_const_bitmap_t hwloc_const_nodeset_t

A non-modifiable hwloc_nodeset_t.

22.2.2.3 hwloc_cpuset_t
```

typedef hwloc_bitmap_t hwloc_cpuset_t

A CPU set is a bitmap whose bits are set according to CPU physical OS indexes.

It may be consulted and modified with the bitmap API as any hwloc_bitmap_t (see hwloc/bitmap.h).

Each bit may be converted into a PU object using hwloc_get_pu_obj_by_os_index().

```
22.2.2.4 hwloc_nodeset_t
```

```
typedef hwloc_bitmap_t hwloc_nodeset_t
```

A node set is a bitmap whose bits are set according to NUMA memory node physical OS indexes.

It may be consulted and modified with the bitmap API as any hwloc_bitmap_t (see hwloc/bitmap.h). Each bit may be converted into a NUMA node object using hwloc_get_numanode_obj_by_os_index().

When binding memory on a system without any NUMA node, the single main memory bank is considered as NUMA node #0.

See also Converting between CPU sets and node sets.

22.3 Object Types

Macros

· #define HWLOC OBJ TYPE MIN HWLOC OBJ MACHINE

Typedefs

- typedef enum hwloc_obj_cache_type_e hwloc_obj_cache_type_t
- typedef enum hwloc_obj_bridge_type_e hwloc_obj_bridge_type_t
- typedef enum hwloc_obj_osdev_type_e hwloc_obj_osdev_type_t

Enumerations

```
    enum hwloc_obj_type_t {
        HWLOC_OBJ_MACHINE, HWLOC_OBJ_PACKAGE, HWLOC_OBJ_CORE, HWLOC_OBJ_PU,
        HWLOC_OBJ_L1CACHE, HWLOC_OBJ_L2CACHE, HWLOC_OBJ_L3CACHE, HWLOC_OBJ_L4CACHE,
        HWLOC_OBJ_L5CACHE, HWLOC_OBJ_L1ICACHE, HWLOC_OBJ_L2ICACHE, HWLOC_OBJ_L3ICAC
        HE,
        HWLOC_OBJ_GROUP, HWLOC_OBJ_NUMANODE, HWLOC_OBJ_BRIDGE, HWLOC_OBJ_PCI_DEVI
```

CE,

- HWLOC_OBJ_OS_DEVICE, HWLOC_OBJ_MISC, HWLOC_OBJ_MEMCACHE, HWLOC_OBJ_DIE }
- enum hwloc_obj_bridge_type_e { HWLOC_OBJ_BRIDGE_HOST, HWLOC_OBJ_BRIDGE_PCI }
- enum hwloc_obj_osdev_type_e {
 HWLOC_OBJ_OSDEV_BLOCK, HWLOC_OBJ_OSDEV_GPU, HWLOC_OBJ_OSDEV_NETWORK, HW
 LOC_OBJ_OSDEV_OPENFABRICS,
 HWLOC_OBJ_OSDEV_DMA, HWLOC_OBJ_OSDEV_COPROC }
- enum hwloc_compare_types_e { HWLOC_TYPE_UNORDERED }

Functions

• int hwloc_compare_types (hwloc_obj_type_t type1, hwloc_obj_type_t type2)

22.3.1 Detailed Description

22.3.2 Macro Definition Documentation

```
22.3.2.1 HWLOC_OBJ_TYPE_MIN
```

#define HWLOC_OBJ_TYPE_MIN HWLOC_OBJ_MACHINE

Type of topology object.

Note

Do not rely on the ordering or completeness of the values as new ones may be defined in the future! If you need to compare types, use hwloc_compare_types() instead. Sentinel value

22.3 Object Types 89

22.3.3 Typedef Documentation

```
22.3.3.1 hwloc_obj_bridge_type_t
```

```
typedef enum hwloc_obj_bridge_type_e hwloc_obj_bridge_type_t
```

Type of one side (upstream or downstream) of an I/O bridge.

```
22.3.3.2 hwloc_obj_cache_type_t
```

```
typedef enum hwloc_obj_cache_type_e hwloc_obj_cache_type_t
```

Cache type.

22.3.3.3 hwloc_obj_osdev_type_t

```
typedef enum hwloc_obj_osdev_type_e hwloc_obj_osdev_type_t
```

Type of a OS device.

22.3.4 Enumeration Type Documentation

22.3.4.1 hwloc_compare_types_e

```
enum hwloc_compare_types_e
```

Enumerator

HWLOC_TYPE_UNORDERED | Value returned by hwloc_compare_types() when types can not be compared.

22.3.4.2 hwloc_obj_bridge_type_e

```
enum hwloc_obj_bridge_type_e
```

Type of one side (upstream or downstream) of an I/O bridge.

Enumerator

HWLOC_OBJ_BRIDGE_HOST	Host-side of a bridge, only possible upstream.
HWLOC_OBJ_BRIDGE_PCI	PCI-side of a bridge.

22.3.4.3 hwloc_obj_cache_type_e

enum hwloc_obj_cache_type_e

Cache type.

Enumerator

HWLOC_OBJ_CACHE_UNIFIED	Unified cache.
HWLOC_OBJ_CACHE_DATA	Data cache.
HWLOC_OBJ_CACHE_INSTRUCTION	Instruction cache (filtered out by default).

22.3.4.4 hwloc_obj_osdev_type_e

enum hwloc_obj_osdev_type_e

Type of a OS device.

Enumerator

HWLOC_OBJ_OSDEV_BLOCK	Operating system block device, or non-volatile memory device. For instance "sda" or "dax2.0" on Linux.
HWLOC_OBJ_OSDEV_GPU	Operating system GPU device. For instance ":0.0" for a GL display, "card0" for a Linux DRM device.
HWLOC_OBJ_OSDEV_NETWORK	Operating system network device. For instance the "eth0" interface on Linux.
HWLOC_OBJ_OSDEV_OPENFABRICS	Operating system openfabrics device. For instance the "mlx4_0" InfiniBand HCA, or "hfi1_0" Omni-Path interface on Linux.
HWLOC_OBJ_OSDEV_DMA	Operating system dma engine device. For instance the "dma0chan0" DMA channel on Linux.
HWLOC_OBJ_OSDEV_COPROC	Operating system co-processor device. For instance "mic0" for a Xeon Phi (MIC) on Linux, "opencl0d0" for a OpenCL device, "cuda0" for a CUDA device.

22.3.4.5 hwloc_obj_type_t

enum hwloc_obj_type_t

22.3 Object Types 91

Enumerator

HWLOC_OBJ_MACHINE	Machine. A set of processors and memory with cache coherency. This type is always used for the root object of a topology, and never used anywhere else. Hence its parent is always NULL.
HWLOC_OBJ_PACKAGE	Physical package. The physical package that usually gets inserted into a socket on the motherboard. A processor package usually contains multiple cores, and possibly some dies.
HWLOC_OBJ_CORE	Core. A computation unit (may be shared by several logical processors).
HWLOC_OBJ_PU	Processing Unit, or (Logical) Processor. An execution unit (may share a core with some other logical processors, e.g. in the case of an SMT core). This is the smallest object representing CPU resources, it cannot have any child except Misc objects. Objects of this kind are always reported and can thus be used as fallback when others are not.
HWLOC_OBJ_L1CACHE	Level 1 Data (or Unified) Cache.
HWLOC_OBJ_L2CACHE	Level 2 Data (or Unified) Cache.
HWLOC_OBJ_L3CACHE	Level 3 Data (or Unified) Cache.
HWLOC_OBJ_L4CACHE	Level 4 Data (or Unified) Cache.
HWLOC_OBJ_L5CACHE	Level 5 Data (or Unified) Cache.
HWLOC_OBJ_L1ICACHE	Level 1 instruction Cache (filtered out by default).
HWLOC_OBJ_L2ICACHE	Level 2 instruction Cache (filtered out by default).
HWLOC_OBJ_L3ICACHE	Level 3 instruction Cache (filtered out by default).
HWLOC_OBJ_GROUP	Group objects. Objects which do not fit in the above but are detected by hwloc and are useful to take into account for affinity. For instance, some operating systems expose their arbitrary processors aggregation this way. And hwloc may insert such objects to group NUMA nodes according to their distances. See also What are these Group objects in my topology?. These objects are removed when they do not bring any structure (see HWLOC_TYPE_FILTER_KEEP_STRUCTURE).
HWLOC_OBJ_NUMANODE	NUMA node. An object that contains memory that is directly and byte-accessible to the host processors. It is usually close to some cores (the corresponding objects are descendants of the NUMA node object in the hwloc tree). This is the smallest object representing Memory resources, it cannot have any child except Misc objects. However it may have Memory-side cache parents. There is always at least one such object in the topology even if the machine is not NUMA. Memory objects are not listed in the main children list, but rather in the dedicated Memory children list. NUMA nodes have a special depth HWLOC_TYPE_DEPTH_NUMANODE instead of a normal depth just like other objects in the main tree.
HWLOC_OBJ_BRIDGE	Bridge (filtered out by default). Any bridge that connects the host or an I/O bus, to another I/O bus. They are not added to the topology unless I/O discovery is enabled with hwloc_topology_set_flags (). I/O objects are not listed in the main children list, but rather in the dedicated io children list. I/O objects have NULL CPU and node sets.
HWLOC_OBJ_PCI_DEVICE	PCI device (filtered out by default). They are not added to the topology unless I/O discovery is enabled with hwloc_topology_set_flags(). I/O objects are not listed in the main children list, but rather in the dedicated io children list. I/O objects have NULL CPU and node sets.
HWLOC_OBJ_OS_DEVICE	Operating system device (filtered out by default). They are not added to the topology unless I/O discovery is enabled with hww.nc.topology_set_flags (). I/O objects are not listed in the main children list, but rather in the dedicated io children list. I/O objects have NULL CPU and node sets.

Enumerator

HWLOC_OBJ_MISC	Miscellaneous objects (filtered out by default). Objects without particular meaning, that can e.g. be added by the application for its own use, or by hwloc for miscellaneous objects such as MemoryModule (DIMMs). These objects are not listed in the main children list, but rather in the dedicated misc children list. Misc objects may only have Misc objects as children, and those are in the dedicated misc children list as well. Misc objects have NULL CPU and node sets.
HWLOC_OBJ_MEMCACHE	Memory-side cache (filtered out by default). A cache in front of a specific NUMA node. This object always has at least one NUMA node as a memory child. Memory objects are not listed in the main children list, but rather in the dedicated Memory children list. Memory-side cache have a special depth HWLOC_TYPE_DEPTH_MEMCACHE instead of a normal depth just like other objects in the main tree.
HWLOC_OBJ_DIE	Die within a physical package. A subpart of the physical package, that contains multiple cores.

22.3.5 Function Documentation

22.3.5.1 hwloc_compare_types()

```
int hwloc_compare_types (
                hwloc_obj_type_t type1,
                 hwloc_obj_type_t type2 )
```

Compare the depth of two object types.

Types shouldn't be compared as they are, since newer ones may be added in the future. This function returns less than, equal to, or greater than zero respectively if type1 objects usually include type2 objects, are the same as type2 objects, or are included in type2 objects. If the types can not be compared (because neither is usually contained in the other), HWLOC_TYPE_UNORDERED is returned. Object types containing CPUs can always be compared (usually, a system contains machines which contain nodes which contain packages which contain caches, which contain cores, which contain processors).

Note

HWLOC_OBJ_PU will always be the deepest, while HWLOC_OBJ_MACHINE is always the highest. This does not mean that the actual topology will respect that order: e.g. as of today cores may also contain caches, and packages may also contain nodes. This is thus just to be seen as a fallback comparison method.

22.4 Object Structure and Attributes

Data Structures

- struct hwloc_obj
- union hwloc_obj_attr_u
- struct hwloc_info_s

Typedefs

• typedef struct hwloc_obj_t

22.4.1 Detailed Description

22.4.2 Typedef Documentation

```
22.4.2.1 hwloc_obj_t

typedef struct hwloc_obj* hwloc_obj_t
```

Convenience typedef; a pointer to a struct hwloc_obj.

22.5 Topology Creation and Destruction

Typedefs

typedef struct hwloc_topology * hwloc_topology_t

Functions

- int hwloc_topology_init (hwloc_topology_t *topologyp)
- int hwloc_topology_load (hwloc_topology_t topology)
- void hwloc topology destroy (hwloc topology t topology)
- int hwloc_topology_dup (hwloc_topology_t *newtopology, hwloc_topology_t oldtopology)
- int hwloc_topology_abi_check (hwloc_topology_t topology)
- void hwloc_topology_check (hwloc_topology_t topology)

22.5.1 Detailed Description

22.5.2 Typedef Documentation

```
22.5.2.1 hwloc_topology_t

typedef struct hwloc_topology* hwloc_topology_t

Topology context.
```

To be initialized with hwloc_topology_init() and built with hwloc_topology_load().

22.5.3 Function Documentation

Verify that the topology is compatible with the current hwloc library.

This is useful when using the same topology structure (in memory) in different libraries that may use different hwloc installations (for instance if one library embeds a specific version of hwloc, while another library uses a default system-wide hwloc installation).

If all libraries/programs use the same hwloc installation, this function always returns success.

Returns

```
0 on success.
-1 with errno set to EINVAL if incompatible.
```

Note

If sharing between processes with hwloc_shmem_topology_write(), the relevant check is already performed inside hwloc_shmem_topology_adopt().

22.5.3.2 hwloc_topology_check()

Run internal checks on a topology structure.

The program aborts if an inconsistency is detected in the given topology.

Parameters

topology	is the topology to be checked
----------	-------------------------------

Note

This routine is only useful to developers.

The input topology should have been previously loaded with hwloc_topology_load().

22.5.3.3 hwloc_topology_destroy()

Terminate and free a topology context.

Parameters

```
topology is the topology to be freed
```

22.5.3.4 hwloc_topology_dup()

Duplicate a topology.

The entire topology structure as well as its objects are duplicated into a new one.

This is useful for keeping a backup while modifying a topology.

Note

Object userdata is not duplicated since hwloc does not know what it point to. The objects of both old and new topologies will point to the same userdata.

22.5.3.5 hwloc_topology_init()

Allocate a topology context.

Parameters

out	topologyp	is assigned a pointer to the new allocated context.
-----	-----------	---

Returns

0 on success, -1 on error.

22.5.3.6 hwloc_topology_load()

Build the actual topology.

Build the actual topology once initialized with hwloc_topology_init() and tuned with Topology Detection Configuration and Query and Changing the Source of Topology Discovery routines. No other routine may be called earlier using this topology context.

Parameters

topology	is the topology to be loaded with objects.
----------	--

Returns

0 on success, -1 on error.

Note

This function may be called only once per topology.

The binding of the current thread or process may temporarily change during this call but it will be restored before it returns.

See also

Topology Detection Configuration and Query and Changing the Source of Topology Discovery

22.6 Object levels, depths and types

Enumerations

enum hwloc_get_type_depth_e {
 HWLOC_TYPE_DEPTH_UNKNOWN, HWLOC_TYPE_DEPTH_MULTIPLE, HWLOC_TYPE_DEPTH_NU
 MANODE, HWLOC_TYPE_DEPTH_BRIDGE,
 HWLOC_TYPE_DEPTH_PCI_DEVICE, HWLOC_TYPE_DEPTH_OS_DEVICE, HWLOC_TYPE_DEPTH
 MISC, HWLOC_TYPE_DEPTH_MEMCACHE }

Functions

- int hwloc_topology_get_depth (hwloc_topology_t restrict topology)
- int hwloc_get_type_depth (hwloc_topology_t topology, hwloc_obj_type_t type)
- int hwloc get memory parents depth (hwloc topology t topology)
- static int hwloc_get_type_or_below_depth (hwloc_topology_t topology, hwloc_obj_type_t type)
- static int hwloc_get_type_or_above_depth (hwloc_topology_t topology, hwloc_obj_type_t type)
- hwloc_obj_type_t hwloc_get_depth_type (hwloc_topology_t topology, int depth)
- unsigned hwloc_get_nbobjs_by_depth (hwloc_topology_t topology, int depth)
- static int hwloc get_nbobjs by type (hwloc_topology_t topology, hwloc_obj_type_t type)
- static hwloc obj t hwloc get root obj (hwloc topology t topology)
- hwloc_obj_t hwloc_get_obj_by_depth (hwloc_topology_t topology, int depth, unsigned idx)
- static hwloc_obj_t hwloc_get_obj_by_type (hwloc_topology_t topology, hwloc_obj_type_t type, unsigned idx)
- static hwloc_obj_t hwloc_get_next_obj_by_depth (hwloc_topology_t topology, int depth, hwloc_obj_t prev)
- static hwloc_obj_t hwloc_get_next_obj_by_type (hwloc_topology_t topology, hwloc_obj_type_t type, hwloc
 obj_t prev)

22.6.1 Detailed Description

Be sure to see the figure in Terms and Definitions that shows a complete topology tree, including depths, child/sibling/cousin relationships, and an example of an asymmetric topology where one package has fewer caches than its peers.

22.6.2 Enumeration Type Documentation

22.6.2.1 hwloc_get_type_depth_e

enum hwloc_get_type_depth_e

Enumerator

HWLOC_TYPE_DEPTH_UNKNOWN	No object of given type exists in the topology.
HWLOC_TYPE_DEPTH_MULTIPLE	Objects of given type exist at different depth in the topology (only for Groups).
HWLOC_TYPE_DEPTH_NUMANODE	Virtual depth for NUMA nodes.
HWLOC_TYPE_DEPTH_BRIDGE	Virtual depth for bridge object level.
HWLOC_TYPE_DEPTH_PCI_DEVICE	Virtual depth for PCI device object level.
General Wed OC DOTY PRE_DEPTH_OS_DEVICE	Virtual depth for software device object level.
HWLOC_TYPE_DEPTH_MISC	Virtual depth for Misc object.
HWLOC_TYPE_DEPTH_MEMCACHE	Virtual depth for MemCache object.

22.6.3 Function Documentation

22.6.3.1 hwloc_get_depth_type()

Returns the type of objects at depth depth.

depth should between 0 and hwloc topology get depth()-1.

Returns

(hwloc_obj_type_t)-1 if depth depth does not exist.

22.6.3.2 hwloc_get_memory_parents_depth()

Return the depth of parents where memory objects are attached.

Memory objects have virtual negative depths because they are not part of the main CPU-side hierarchy of objects. This depth should not be compared with other level depths.

If all Memory objects are attached to Normal parents at the same depth, this parent depth may be compared to other as usual, for instance for knowing whether NUMA nodes is attached above or below Packages.

Returns

The depth of Normal parents of all memory children if all these parents have the same depth. For instance the depth of the Package level if all NUMA nodes are attached to Package objects.

HWLOC_TYPE_DEPTH_MULTIPLE if Normal parents of all memory children do not have the same depth. For instance if some NUMA nodes are attached to Packages while others are attached to Groups.

22.6.3.3 hwloc_get_nbobjs_by_depth()

Returns the width of level at depth depth.

22.6.3.4 hwloc_get_nbobjs_by_type()

Returns the width of level type type.

If no object for that type exists, 0 is returned. If there are several levels with objects of that type, -1 is returned.

22.6.3.5 hwloc_get_next_obj_by_depth()

Returns the next object at depth depth.

If prev is NULL, return the first object at depth depth.

22.6.3.6 hwloc_get_next_obj_by_type()

Returns the next object of type type.

If prev is NULL, return the first object at type type. If there are multiple or no depth for given type, return NULL and let the caller fallback to hwloc_get_next_obj_by_depth().

22.6.3.7 hwloc_get_obj_by_depth()

```
hwloc_obj_t hwloc_get_obj_by_depth (
          hwloc_topology_t topology,
          int depth,
          unsigned idx )
```

Returns the topology object at logical index idx from depth depth.

22.6.3.8 hwloc_get_obj_by_type()

Returns the topology object at logical index idx with type type.

If no object for that type exists, NULL is returned. If there are several levels with objects of that type (HWLOC_O BJ_GROUP), NULL is returned and the caller may fallback to hwloc_get_obj_by_depth().

22.6.3.9 hwloc_get_root_obj()

Returns the top-object of the topology-tree.

Its type is HWLOC_OBJ_MACHINE.

22.6.3.10 hwloc_get_type_depth()

Returns the depth of objects of type type.

If no object of this type is present on the underlying architecture, or if the OS doesn't provide this kind of information, the function returns HWLOC TYPE DEPTH UNKNOWN.

If type is absent but a similar type is acceptable, see also hwloc_get_type_or_below_depth() and hwloc_get_type - or_above_depth().

If HWLOC_OBJ_GROUP is given, the function may return HWLOC_TYPE_DEPTH_MULTIPLE if multiple levels of Groups exist.

If a NUMA node, I/O or Misc object type is given, the function returns a virtual value because these objects are stored in special levels that are not CPU-related. This virtual depth may be passed to other hwloc functions such as hwloc_get_obj_by_depth() but it should not be considered as an actual depth by the application. In particular, it should not be compared with any other object depth or with the entire topology depth.

See also

```
hwloc_get_memory_parents_depth().
hwloc_type_sscanf_as_depth() for returning the depth of objects whose type is given as a string.
```

22.6.3.11 hwloc_get_type_or_above_depth()

Returns the depth of objects of type type or above.

If no object of this type is present on the underlying architecture, the function returns the depth of the first "present" object typically containing type.

This function is only meaningful for normal object types. If a memory, I/O or Misc object type is given, the corresponding virtual depth is always returned (see <a href="https://www.hullon.com/hullon/background-normal-n

May return HWLOC_TYPE_DEPTH_MULTIPLE for HWLOC_OBJ_GROUP just like hwloc_get_type_depth().

22.6.3.12 hwloc_get_type_or_below_depth()

Returns the depth of objects of type type or below.

If no object of this type is present on the underlying architecture, the function returns the depth of the first "present" object typically found inside type.

This function is only meaningful for normal object types. If a memory, I/O or Misc object type is given, the corresponding virtual depth is always returned (see <a href="https://www.hullon.com/hullon/hullo

May return HWLOC_TYPE_DEPTH_MULTIPLE for HWLOC_OBJ_GROUP just like hwloc_get_type_depth().

22.6.3.13 hwloc_topology_get_depth()

Get the depth of the hierarchical tree of objects.

This is the depth of HWLOC OBJ PU objects plus one.

Note

NUMA nodes, I/O and Misc objects are ignored when computing the depth of the tree (they are placed on special levels).

22.7 Converting between Object Types and Attributes, and Strings

Functions

- const char * hwloc_obj_type_string (hwloc_obj_type_t type)
- int hwloc_obj_type_snprintf (char *restrict string, size_t size, hwloc_obj_t obj, int verbose)
- int hwloc_obj_attr_snprintf (char *restrict string, size_t size, hwloc_obj_t obj, const char *restrict separator, int verbose)
- int hwloc_type_sscanf (const char *string, hwloc_obj_type_t *typep, union hwloc_obj_attr_u *attrp, size_t attrsize)
- int hwloc_type_sscanf_as_depth (const char *string, hwloc_obj_type_t *typep, hwloc_topology_t topology, int *depthp)

22.7.1 Detailed Description

22.7.2 Function Documentation

22.7.2.1 hwloc_obj_attr_snprintf()

Stringify the attributes of a given topology object into a human-readable form.

Attribute values are separated by separator.

Only the major attributes are printed in non-verbose mode.

If size is 0, string may safely be NULL.

Returns

the number of character that were actually written if not truncating, or that would have been written (not including the ending $\setminus 0$).

22.7.2.2 hwloc_obj_type_snprintf()

Stringify the type of a given topology object into a human-readable form.

Contrary to hwloc_obj_type_string(), this function includes object-specific attributes (such as the Group depth, the Bridge type, or OS device type) in the output, and it requires the caller to provide the output buffer.

The output is guaranteed to be the same for all objects of a same topology level.

If verbose is 1, longer type names are used, e.g. L1Cache instead of L1.

The output string may be parsed back by hwloc_type_sscanf().

If size is 0, string may safely be NULL.

Returns

the number of character that were actually written if not truncating, or that would have been written (not including the ending \0).

22.7.2.3 hwloc_obj_type_string()

Return a constant stringified object type.

This function is the basic way to convert a generic type into a string. The output string may be parsed back by hwloc_type_sscanf().

hwloc_obj_type_snprintf() may return a more precise output for a specific object, but it requires the caller to provide the output buffer.

22.7.2.4 hwloc_type_sscanf()

Return an object type and attributes from a type string.

Convert strings such as "Package" or "L1iCache" into the corresponding types. Matching is case-insensitive, and only the first letters are actually required to match.

The matched object type is set in typep (which cannot be NULL).

Type-specific attributes, for instance Cache type, Cache depth, Group depth, Bridge type or OS Device type may be returned in attrp. Attributes that are not specified in the string (for instance "Group" without a depth, or "L2Cache" without a cache type) are set to -1.

attrp is only filled if not <code>NULL</code> and if its size specified in <code>attrsize</code> is large enough. It should be at least as large as union <code>hwloc_obj_attr_u</code>.

Returns

0 if a type was correctly identified, otherwise -1.

Note

This function is guaranteed to match any string returned by hwloc_obj_type_string() or hwloc_obj_type_
snprintf().

This is an extended version of the now deprecated hwloc_obj_type_sscanf().

22.7.2.5 hwloc_type_sscanf_as_depth()

Return an object type and its level depth from a type string.

Convert strings such as "Package" or "L1iCache" into the corresponding types and return in depthp the depth of the corresponding level in the topology topology.

If no object of this type is present on the underlying architecture, HWLOC TYPE DEPTH UNKNOWN is returned.

If multiple such levels exist (for instance if giving Group without any depth), the function may return HWLOC_TY PE_DEPTH_MULTIPLE instead.

The matched object type is set in typep if typep is non NULL.

Note

This function is similar to hwloc_type_sscanf() followed by hwloc_get_type_depth() but it also automatically disambiguates multiple group levels etc.

This function is guaranteed to match any string returned by https://hww.oc_obj_type_string() or h

22.8 Consulting and Adding Key-Value Info Attributes

Functions

- static const char * hwloc_obj_get_info_by_name (hwloc_obj_t obj, const char *name)
- int hwloc_obj_add_info (hwloc_obj_t obj, const char *name, const char *value)

22.8.1 Detailed Description

22.8.2 Function Documentation

22.8.2.1 hwloc_obj_add_info()

Add the given info name and value pair to the given object.

The info is appended to the existing info array even if another key with the same name already exists.

The input strings are copied before being added in the object infos.

Returns

```
0 on success, -1 on error.
```

Note

This function may be used to enforce object colors in the Istopo graphical output by using "IstopoStyle" as a name and "Background=#rrggbb" as a value. See CUSTOM COLORS in the Istopo(1) manpage for details. If value contains some non-printable characters, they will be dropped when exporting to XML, see hwloc—topology_export_xml() in hwloc/export.h.

22.8.2.2 hwloc_obj_get_info_by_name()

Search the given key name in object infos and return the corresponding value.

If multiple keys match the given name, only the first one is returned.

Returns

NULL if no such key exists.

22.9 CPU binding

Enumerations

enum hwloc_cpubind_flags_t { HWLOC_CPUBIND_PROCESS, HWLOC_CPUBIND_THREAD, HWLOC_←
 CPUBIND_STRICT, HWLOC_CPUBIND_NOMEMBIND }

Functions

- int hwloc_set_cpubind (hwloc_topology_t topology, hwloc_const_cpuset_t set, int flags)
- int hwloc_get_cpubind (hwloc_topology_t topology, hwloc_cpuset_t set, int flags)
- int hwloc_set_proc_cpubind (hwloc_topology_t topology, hwloc_pid_t pid, hwloc_const_cpuset_t set, int flags)
- int hwloc_get_proc_cpubind (hwloc_topology_t topology, hwloc_pid_t pid, hwloc_cpuset_t set, int flags)
- int hwloc_set_thread_cpubind (hwloc_topology_t topology, hwloc_thread_t thread, hwloc_const_cpuset_
 t set, int flags)
- int hwloc_get_thread_cpubind (hwloc_topology_t topology, hwloc_thread_t thread, hwloc_cpuset_t set, int flags)
- int hwloc get last cpu location (hwloc topology t topology, hwloc cpuset t set, int flags)
- int hwloc_get_proc_last_cpu_location (hwloc_topology_t topology, hwloc_pid_t pid, hwloc_cpuset_t set, int flags)

22.9.1 Detailed Description

Some operating systems only support binding threads or processes to a single PU. Others allow binding to larger sets such as entire Cores or Packages or even random sets of invididual PUs. In such operating system, the scheduler is free to run the task on one of these PU, then migrate it to another PU, etc. It is often useful to call hwloc_bitmap_singlify() on the target CPU set before passing it to the binding function to avoid these expensive migrations. See the documentation of hwloc_bitmap_singlify() for details.

Some operating systems do not provide all hwloc-supported mechanisms to bind processes, threads, etc. hwloc_ctopology_get_support() may be used to query about the actual CPU binding support in the currently used operating system.

When the requested binding operation is not available and the HWLOC_CPUBIND_STRICT flag was passed, the function returns -1. errno is set to ENOSYS when it is not possible to bind the requested kind of object processes/threads. errno is set to EXDEV when the requested cpuset can not be enforced (e.g. some systems only allow one CPU, and some other systems only allow one NUMA node).

If HWLOC_CPUBIND_STRICT was not passed, the function may fail as well, or the operating system may use a slightly different operation (with side-effects, smaller binding set, etc.) when the requested operation is not exactly supported.

The most portable version that should be preferred over the others, whenever possible, is the following one which just binds the current program, assuming it is single-threaded:

```
hwloc_set_cpubind(topology, set, 0),
```

If the program may be multithreaded, the following one should be preferred to only bind the current thread:

```
hwloc_set_cpubind(topology, set, HWLOC_CPUBIND_THREAD),
```

See also

Some example codes are available under doc/examples/ in the source tree.

Note

To unbind, just call the binding function with either a full cpuset or a cpuset equal to the system cpuset.

On some operating systems, CPU binding may have effects on memory binding, see HWLOC_CPUBIND_

NOMEMBIND

Running Istopo --top or hwloc-ps can be a very convenient tool to check how binding actually happened.

22.9 CPU binding

22.9.2 Enumeration Type Documentation

22.9.2.1 hwloc_cpubind_flags_t

enum hwloc_cpubind_flags_t

Process/Thread binding flags.

These bit flags can be used to refine the binding policy.

The default (0) is to bind the current process, assumed to be single-threaded, in a non-strict way. This is the most portable way to bind as all operating systems usually provide it.

Note

Not all systems support all kinds of binding. See the "Detailed Description" section of CPU binding for a description of errors that can occur.

Enumerator

HWLOC_CPUBIND_PROCESS	Bind all threads of the current (possibly) multithreaded process.
HWLOC_CPUBIND_THREAD	Bind current thread of current process.
HWLOC_CPUBIND_STRICT	Request for strict binding from the OS. By default, when the designated CPUs are all busy while other CPUs are idle, operating systems may execute the thread/process on those other CPUs instead of the designated CPUs, to let them progress anyway. Strict binding means that the thread/process will _never_ execute on other cpus than the designated CPUs, even when those are busy with other tasks and other CPUs are idle.
	Note
	Depending on the operating system, strict binding may not be possible (e.g., the OS does not implement it) or not allowed (e.g., for an administrative reasons), and the function will fail in that case.
	When retrieving the binding of a process, this flag checks whether all its threads actually have the same binding. If the flag is not given, the binding of each thread will be accumulated.
	Note
	This flag is meaningless when retrieving the binding of a thread.
HWLOC_CPUBIND_NOMEMBIND	Avoid any effect on memory binding. On some operating systems, some CPU binding function would also bind the memory on the corresponding NUMA node. It is often not a problem for the application, but if it is, setting this flag will make hwloc avoid using OS functions that would also bind memory. This will however reduce the support of CPU bindings, i.e. potentially return -1 with errno set to ENOSYS in some cases. This flag is only meaningful when used with functions that set the CPU binding. It is ignored when used with functions that get CPU binding information.

22.9.3 Function Documentation

22.9.3.1 hwloc_get_cpubind()

Get current process or thread binding.

Writes into set the physical cpuset which the process or thread (according to flags) was last bound to.

22.9.3.2 hwloc_get_last_cpu_location()

```
int hwloc_get_last_cpu_location (
                hwloc_topology_t topology,
                 hwloc_cpuset_t set,
                 int flags )
```

Get the last physical CPU where the current process or thread ran.

The operating system may move some tasks from one processor to another at any time according to their binding, so this function may return something that is already outdated.

flags can include either HWLOC_CPUBIND_PROCESS or HWLOC_CPUBIND_THREAD to specify whether the query should be for the whole process (union of all CPUs on which all threads are running), or only the current thread. If the process is single-threaded, flags can be set to zero to let hwloc use whichever method is available on the underlying OS.

22.9.3.3 hwloc_get_proc_cpubind()

Get the current physical binding of process pid.

Note

hwloc_pid_t is pid_t on Unix platforms, and HANDLE on native Windows platforms. As a special case on Linux, if a tid (thread ID) is supplied instead of a pid (process ID) and HWLOC_CPUB IND_THREAD is passed in flags, the binding for that specific thread is returned. On non-Linux systems, HWLOC_CPUBIND_THREAD can not be used in flags.

22.9 CPU binding 109

22.9.3.4 hwloc_get_proc_last_cpu_location()

Get the last physical CPU where a process ran.

The operating system may move some tasks from one processor to another at any time according to their binding, so this function may return something that is already outdated.

Note

hwloc_pid_t is pid_t on Unix platforms, and HANDLE on native Windows platforms.

As a special case on Linux, if a tid (thread ID) is supplied instead of a pid (process ID) and HWLOC_CPUB IND_THREAD is passed in flags, the last CPU location of that specific thread is returned.

On non-Linux systems, HWLOC_CPUBIND_THREAD can not be used in flags.

22.9.3.5 hwloc_get_thread_cpubind()

Get the current physical binding of thread tid.

Note

hwloc_thread_t is pthread_t on Unix platforms, and HANDLE on native Windows platforms. HWLOC_CPUBIND_PROCESS can not be used in flags.

22.9.3.6 hwloc_set_cpubind()

```
int hwloc_set_cpubind (
          hwloc_topology_t topology,
          hwloc_const_cpuset_t set,
          int flags )
```

Bind current process or thread on cpus given in physical bitmap set.

Returns

- -1 with errno set to ENOSYS if the action is not supported
- -1 with errno set to EXDEV if the binding cannot be enforced

22.9.3.7 hwloc_set_proc_cpubind()

```
int hwloc_set_proc_cpubind (
                hwloc_topology_t topology,
                hwloc_pid_t pid,
                 hwloc_const_cpuset_t set,
                 int flags )
```

Bind a process pid on cpus given in physical bitmap set.

Note

hwloc_pid_t is pid_t on Unix platforms, and HANDLE on native Windows platforms.

As a special case on Linux, if a tid (thread ID) is supplied instead of a pid (process ID) and HWLOC_CPUB IND_THREAD is passed in flags, the binding is applied to that specific thread.

On non-Linux systems, HWLOC_CPUBIND_THREAD can not be used in flags.

22.9.3.8 hwloc_set_thread_cpubind()

```
int hwloc_set_thread_cpubind (
                hwloc_topology_t topology,
                hwloc_thread_t thread,
                hwloc_const_cpuset_t set,
                 int flags )
```

Bind a thread thread on cpus given in physical bitmap set.

Note

hwloc_thread_t is pthread_t on Unix platforms, and HANDLE on native Windows platforms. HWLOC_CPUBIND_PROCESS can not be used in flags.

22.10 Memory binding 111

22.10 Memory binding

Enumerations

```
    enum hwloc_membind_policy_t {
        HWLOC_MEMBIND_DEFAULT, HWLOC_MEMBIND_FIRSTTOUCH, HWLOC_MEMBIND_BIND, HWLO←
        C_MEMBIND_INTERLEAVE,
        HWLOC_MEMBIND_NEXTTOUCH, HWLOC_MEMBIND_MIXED }
    enum hwloc_membind_flags_t {
        HWLOC_MEMBIND_PROCESS, HWLOC_MEMBIND_THREAD, HWLOC_MEMBIND_STRICT, HWLOC←
        _MEMBIND_MIGRATE,
        HWLOC_MEMBIND_NOCPUBIND, HWLOC_MEMBIND_BYNODESET }
```

Functions

- int hwloc_set_membind (hwloc_topology_t topology, hwloc_const_bitmap_t set, hwloc_membind_policy_

 t policy, int flags)
- int hwloc_get_membind (hwloc_topology_t topology, hwloc_bitmap_t set, hwloc_membind_policy_t *policy, int flags)
- int hwloc_set_proc_membind (hwloc_topology_t topology, hwloc_pid_t pid, hwloc_const_bitmap_t set, hwloc_membind_policy_t policy, int flags)
- int hwloc_get_proc_membind (hwloc_topology_t topology, hwloc_pid_t pid, hwloc_bitmap_t set, hwloc_
 membind_policy_t *policy, int flags)
- int hwloc_set_area_membind (hwloc_topology_t topology, const void *addr, size_t len, hwloc_const_
 bitmap_t set, hwloc_membind_policy_t policy, int flags)
- int hwloc_get_area_membind (hwloc_topology_t topology, const void *addr, size_t len, hwloc_bitmap_t set, hwloc_membind_policy_t *policy, int flags)
- int hwloc_get_area_memlocation (hwloc_topology_t topology, const void *addr, size_t len, hwloc_bitmap_t set, int flags)
- void * hwloc_alloc (hwloc_topology_t topology, size_t len)
- void * hwloc_alloc_membind (hwloc_topology_t topology, size_t len, hwloc_const_bitmap_t set, hwloc_
 membind policy t policy, int flags)
- static void * hwloc_alloc_membind_policy (hwloc_topology_t topology, size_t len, hwloc_const_bitmap_t set, hwloc_membind_policy_t policy, int flags)
- int hwloc_free (hwloc_topology_t topology, void *addr, size_t len)

22.10.1 Detailed Description

Memory binding can be done three ways:

- explicit memory allocation thanks to <a href="https://www.number.numbe
- implicit memory binding through binding policy: hwloc_set_membind() and friends only define the current policy of the process, which will be applied to the subsequent calls to malloc() and friends.
- migration of existing memory ranges, thanks to <a href="https://hww.nemory.ne

Not all operating systems support all three ways. hwloc_topology_get_support() may be used to query about the actual memory binding support in the currently used operating system.

When the requested binding operation is not available and the HWLOC_MEMBIND_STRICT flag was passed, the function returns -1. errno will be set to ENOSYS when the system does support the specified action or policy (e.g., some systems only allow binding memory on a per-thread basis, whereas other systems only allow binding memory for all threads in a process). errno will be set to EXDEV when the requested set can not be enforced (e.g., some systems only allow binding memory to a single NUMA node).

If HWLOC_MEMBIND_STRICT was not passed, the function may fail as well, or the operating system may use a slightly different operation (with side-effects, smaller binding set, etc.) when the requested operation is not exactly supported.

The most portable form that should be preferred over the others whenever possible is as follows. It allocates some memory hopefully bound to the specified set. To do so, hwloc will possibly have to change the current memory binding policy in order to actually get the memory bound, if the OS does not provide any other way to simply allocate bound memory without changing the policy for all allocations. That is the difference with hwloc_alloc_membind(), which will never change the current memory binding policy.

Each hwloc memory binding function takes a bitmap argument that is a CPU set by default, or a NUMA memory node set if the flag HWLOC_MEMBIND_BYNODESET is specified. See Object Sets (hwloc_cpuset_t and hwloc—nodeset_t) and The bitmap API for a discussion of CPU sets and NUMA memory node sets. It is also possible to convert between CPU set and node set using hwloc_cpuset_to_nodeset() or hwloc_cpuset_from_nodeset().

Memory binding by CPU set cannot work for CPU-less NUMA memory nodes. Binding by nodeset should therefore be preferred whenever possible.

See also

Some example codes are available under doc/examples/ in the source tree.

Note

On some operating systems, memory binding affects the CPU binding; see HWLOC_MEMBIND_NOCPUB ← IND

22.10.2 Enumeration Type Documentation

```
22.10.2.1 hwloc_membind_flags_t
```

```
enum hwloc_membind_flags_t
```

Memory binding flags.

These flags can be used to refine the binding policy. All flags can be logically OR'ed together with the exception of HWLOC_MEMBIND_PROCESS and HWLOC_MEMBIND_THREAD; these two flags are mutually exclusive.

Not all systems support all kinds of binding. hwloc_topology_get_support() may be used to query about the actual memory binding support in the currently used operating system. See the "Detailed Description" section of Memory binding for a description of errors that can occur.

22.10 Memory binding 113

Enumerator

LIMI OO MEMBINID DEGGESS	
HWLOC_MEMBIND_PROCESS	Set policy for all threads of the specified (possibly multithreaded)
	process. This flag is mutually exclusive with
	HWLOC_MEMBIND_THREAD.
HWLOC_MEMBIND_THREAD	Set policy for a specific thread of the current process. This flag is
	mutually exclusive with HWLOC_MEMBIND_PROCESS.
HWLOC_MEMBIND_STRICT	Request strict binding from the OS. The function will fail if the binding
	can not be guaranteed / completely enforced.
	This flag has slightly different meanings depending on which function it
	is used with.
HWLOC_MEMBIND_MIGRATE	Migrate existing allocated memory. If the memory cannot be migrated
	and the HWLOC_MEMBIND_STRICT flag is passed, an error will be
	returned.
HWLOC MEMBIND NOCPUBIND	Avoid any effect on CPU binding. On some operating systems, some
TIVEGO_MEMBIND_NGGI GBIND	underlying memory binding functions also bind the application to the
	corresponding CPU(s). Using this flag will cause hwloc to avoid using
	OS functions that could potentially affect CPU bindings. Note, however,
	that using NOCPUBIND may reduce hwloc's overall memory binding
	support. Specifically: some of hwloc's memory binding functions may
	fail with errno set to ENOSYS when used with NOCPUBIND.
HWLOC_MEMBIND_BYNODESET	Consider the bitmap argument as a nodeset. The bitmap argument is
	considered a nodeset if this flag is given, or a cpuset otherwise by
	default.
	Memory binding by CPU set cannot work for CPU-less NUMA memory
	nodes. Binding by nodeset should therefore be preferred whenever
	possible.
	'

22.10.2.2 hwloc_membind_policy_t

enum hwloc_membind_policy_t

Memory binding policy.

These constants can be used to choose the binding policy. Only one policy can be used at a time (i.e., the values cannot be OR'ed together).

Not all systems support all kinds of binding. hwloc_topology_get_support() may be used to query about the actual memory binding policy support in the currently used operating system. See the "Detailed Description" section of Memory binding for a description of errors that can occur.

Enumerator

HWLOC_MEMBIND_DEFAULT	Reset the memory allocation policy to the system default. Depending on the operating system, this may correspond to HWLOC_MEMBIND_FIRSTTOUCH (Linux), or HWLOC_MEMBIND_BIND (AIX, HP-UX, Solaris, Windows). This policy is never returned by get membind functions. The nodeset argument is ignored.
HWLOC_MEMBIND_FIRSTTOUCH Generated by Doxygen	Allocate each memory page individually on the local NUMA node of the thread that touches it. The given nodeset should usually be

Enumerator

HWLOC_MEMBIND_BIND	Allocate memory on the specified nodes.
HWLOC_MEMBIND_INTERLEAVE	Allocate memory on the given nodes in an interleaved / round-robin manner. The precise layout of the memory across multiple NUMA nodes is OS/system specific. Interleaving can be useful when threads distributed across the specified NUMA nodes will all be accessing the whole memory range concurrently, since the interleave will then balance the memory references.
HWLOC_MEMBIND_NEXTTOUCH	For each page bound with this policy, by next time it is touched (and next time only), it is moved from its current location to the local NUMA node of the thread where the memory reference occurred (if it needs to be moved at all).
HWLOC_MEMBIND_MIXED	Returned by get_membind() functions when multiple threads or parts of a memory area have differing memory binding policies. Also returned when binding is unknown because binding hooks are empty when the topology is loaded from XML without HWLOC_THISSYSTEM=1, etc.

22.10.3 Function Documentation

22.10.3.1 hwloc_alloc()

Allocate some memory.

This is equivalent to malloc(), except that it tries to allocate page-aligned memory from the OS.

Note

The allocated memory should be freed with hwloc_free().

22.10.3.2 hwloc_alloc_membind()

Allocate some memory on NUMA memory nodes specified by set.

22.10 Memory binding 115

Returns

NULL with errno set to ENOSYS if the action is not supported and HWLOC_MEMBIND_STRICT is given NULL with errno set to EXDEV if the binding cannot be enforced and HWLOC_MEMBIND_STRICT is given NULL with errno set to ENOMEM if the memory allocation failed even before trying to bind.

If HWLOC_MEMBIND_BYNODESET is specified, set is considered a nodeset. Otherwise it's a cpuset.

Note

The allocated memory should be freed with hwloc free().

22.10.3.3 hwloc_alloc_membind_policy()

```
static void* hwloc_alloc_membind_policy (
    hwloc_topology_t topology,
    size_t len,
    hwloc_const_bitmap_t set,
    hwloc_membind_policy_t policy,
    int flags ) [inline], [static]
```

Allocate some memory on NUMA memory nodes specified by set.

This is similar to hwloc_alloc_membind_nodeset() except that it is allowed to change the current memory binding policy, thus providing more binding support, at the expense of changing the current state.

If HWLOC_MEMBIND_BYNODESET is specified, set is considered a nodeset. Otherwise it's a cpuset.

22.10.3.4 hwloc_free()

Free memory that was previously allocated by hwloc_alloc() or hwloc_alloc_membind().

22.10.3.5 hwloc_get_area_membind()

Query the CPUs near the physical NUMA node(s) and binding policy of the memory identified by (addr, len).

This function has two output parameters: set and policy. The values returned in these parameters depend on both the flags passed in and the memory binding policies and nodesets of the pages in the address range.

If HWLOC_MEMBIND_STRICT is specified, the target pages are first checked to see if they all have the same memory binding policy and nodeset. If they do not, -1 is returned and errno is set to EXDEV. If they are identical across all pages, the set and policy are returned in set and policy, respectively.

If HWLOC_MEMBIND_STRICT is not specified, the union of all NUMA node(s) containing pages in the address range is calculated. If all pages in the target have the same policy, it is returned in policy. Otherwise, policy is set to HWLOC_MEMBIND_MIXED.

If HWLOC MEMBIND BYNODESET is specified, set is considered a nodeset. Otherwise it's a cpuset.

If any other flags are specified, -1 is returned and errno is set to EINVAL.

If len is 0, -1 is returned and errno is set to EINVAL.

22.10.3.6 hwloc_get_area_memlocation()

```
int hwloc_get_area_memlocation (
    hwloc_topology_t topology,
    const void * addr,
    size_t len,
    hwloc_bitmap_t set,
    int flags )
```

Get the NUMA nodes where memory identified by (addr, len) is physically allocated.

Fills set according to the NUMA nodes where the memory area pages are physically allocated. If no page is actually allocated yet, set may be empty.

If pages spread to multiple nodes, it is not specified whether they spread equitably, or whether most of them are on a single node, etc.

The operating system may move memory pages from one processor to another at any time according to their binding, so this function may return something that is already outdated.

If HWLOC MEMBIND BYNODESET is specified in flags, set is considered a nodeset. Otherwise it's a cpuset.

If len is 0, set is emptied.

22.10 Memory binding 117

22.10.3.7 hwloc_get_membind()

```
int hwloc_get_membind (
          hwloc_topology_t topology,
          hwloc_bitmap_t set,
          hwloc_membind_policy_t * policy,
          int flags )
```

Query the default memory binding policy and physical locality of the current process or thread.

This function has two output parameters: set and policy. The values returned in these parameters depend on both the flags passed in and the current memory binding policies and nodesets in the queried target.

Passing the HWLOC_MEMBIND_PROCESS flag specifies that the query target is the current policies and nodesets for all the threads in the current process. Passing HWLOC_MEMBIND_THREAD specifies that the query target is the current policy and nodeset for only the thread invoking this function.

If neither of these flags are passed (which is the most portable method), the process is assumed to be single threaded. This allows hwloc to use either process-based OS functions or thread-based OS functions, depending on which are available.

HWLOC_MEMBIND_STRICT is only meaningful when HWLOC_MEMBIND_PROCESS is also specified. In this case, hwloc will check the default memory policies and nodesets for all threads in the process. If they are not identical, -1 is returned and errno is set to EXDEV. If they are identical, the values are returned in set and policy.

Otherwise, if HWLOC_MEMBIND_PROCESS is specified (and HWLOC_MEMBIND_STRICT is *not* specified), the default set from each thread is logically OR'ed together. If all threads' default policies are the same, policy is set to that policy. If they are different, policy is set to HWLOC MEMBIND MIXED.

In the HWLOC_MEMBIND_THREAD case (or when neither HWLOC_MEMBIND_PROCESS or HWLOC_MEM BIND THREAD is specified), there is only one set and policy; they are returned in set and policy, respectively.

If HWLOC_MEMBIND_BYNODESET is specified, set is considered a nodeset. Otherwise it's a cpuset.

If any other flags are specified, -1 is returned and errno is set to EINVAL.

22.10.3.8 hwloc_get_proc_membind()

Query the default memory binding policy and physical locality of the specified process.

This function has two output parameters: set and policy. The values returned in these parameters depend on both the flags passed in and the current memory binding policies and nodesets in the queried target.

Passing the HWLOC_MEMBIND_PROCESS flag specifies that the query target is the current policies and nodesets for all the threads in the specified process. If HWLOC_MEMBIND_PROCESS is not specified (which is the most portable method), the process is assumed to be single threaded. This allows hwloc to use either process-based OS functions or thread-based OS functions, depending on which are available.

Note that it does not make sense to pass HWLOC_MEMBIND_THREAD to this function.

If HWLOC_MEMBIND_STRICT is specified, hwloc will check the default memory policies and nodesets for all threads in the specified process. If they are not identical, -1 is returned and errno is set to EXDEV. If they are identical, the values are returned in set and policy.

Otherwise, set is set to the logical OR of all threads' default set. If all threads' default policies are the same, policy is set to that policy. If they are different, policy is set to $\frac{\text{HWLOC_MEMBIND_MIXED}}{\text{MEMBIND_MIXED}}$.

If HWLOC_MEMBIND_BYNODESET is specified, set is considered a nodeset. Otherwise it's a cpuset.

If any other flags are specified, -1 is returned and errno is set to EINVAL.

Note

hwloc_pid_t is pid_t on Unix platforms, and HANDLE on native Windows platforms.

22.10.3.9 hwloc_set_area_membind()

Bind the already-allocated memory identified by (addr, len) to the NUMA node(s) specified by set.

If HWLOC_MEMBIND_BYNODESET is specified, set is considered a nodeset. Otherwise it's a cpuset.

Returns

0 if len is 0.

- -1 with errno set to ENOSYS if the action is not supported
- -1 with errno set to EXDEV if the binding cannot be enforced

22.10.3.10 hwloc_set_membind()

```
int hwloc_set_membind (
          hwloc_topology_t topology,
          hwloc_const_bitmap_t set,
          hwloc_membind_policy_t policy,
          int flags )
```

Set the default memory binding policy of the current process or thread to prefer the NUMA node(s) specified by set.

If neither HWLOC_MEMBIND_PROCESS nor HWLOC_MEMBIND_THREAD is specified, the current process is assumed to be single-threaded. This is the most portable form as it permits hwloc to use either process-based OS functions or thread-based OS functions, depending on which are available.

If HWLOC_MEMBIND_BYNODESET is specified, set is considered a nodeset. Otherwise it's a cpuset.

Returns

- -1 with errno set to ENOSYS if the action is not supported
- -1 with errno set to EXDEV if the binding cannot be enforced

22.10 Memory binding 119

22.10.3.11 hwloc_set_proc_membind()

Set the default memory binding policy of the specified process to prefer the NUMA node(s) specified by set.

If HWLOC_MEMBIND_BYNODESET is specified, set is considered a nodeset. Otherwise it's a cpuset.

Returns

- -1 with errno set to ENOSYS if the action is not supported
- -1 with errno set to EXDEV if the binding cannot be enforced

Note

hwloc_pid_t is pid_t on Unix platforms, and HANDLE on native Windows platforms.

22.11 Changing the Source of Topology Discovery

Enumerations

enum hwloc topology components flag e { HWLOC TOPOLOGY COMPONENTS FLAG BLACKLIST }

Functions

- int hwloc topology set pid (hwloc topology t restrict topology, hwloc pid t pid)
- int hwloc_topology_set_synthetic (hwloc_topology_t restrict topology, const char *restrict description)
- int hwloc_topology_set_xml (hwloc_topology_t restrict topology, const char *restrict xmlpath)
- int hwloc_topology_set_xmlbuffer (hwloc_topology_t restrict topology, const char *restrict buffer, int size)
- int hwloc_topology_set_components (hwloc_topology_t restrict topology, unsigned long flags, const char *restrict name)

22.11.1 Detailed Description

If none of the functions below is called, the default is to detect all the objects of the machine that the caller is allowed to access.

This default behavior may also be modified through environment variables if the application did not modify it already. Setting HWLOC_XMLFILE in the environment enforces the discovery from a XML file as if hwloc_topology_set __ xml() had been called. Setting HWLOC_SYNTHETIC enforces a synthetic topology as if hwloc_topology_set _ synthetic() had been called.

Finally, HWLOC_THISSYSTEM enforces the return value of hwloc_topology_is_thissystem().

22.11.2 Enumeration Type Documentation

22.11.2.1 hwloc topology components flag e

enum hwloc_topology_components_flag_e

Flags to be passed to hwloc_topology_set_components()

Enumerator

HWLOC_TOPOLOGY_COMPONENTS_FLAG_BLACKLIST | Blacklist the target component from being used.

22.11.3 Function Documentation

22.11.3.1 hwloc_topology_set_components()

```
int hwloc_topology_set_components (
          hwloc_topology_t restrict topology,
          unsigned long flags,
          const char *restrict name )
```

Prevent a discovery component from being used for a topology.

name is the name of the discovery component that should not be used when loading topology topology. The name is a string such as "cuda".

For components with multiple phases, it may also be suffixed with the name of a phase, for instance "linux:io".

```
flags should be HWLOC_TOPOLOGY_COMPONENTS_FLAG_BLACKLIST.
```

This may be used to avoid expensive parts of the discovery process. For instance, CUDA-specific discovery may be expensive and unneeded while generic I/O discovery could still be useful.

22.11.3.2 hwloc_topology_set_pid()

Change which process the topology is viewed from.

On some systems, processes may have different views of the machine, for instance the set of allowed CPUs. By default, hwloc exposes the view from the current process. Calling hwloc_topology_set_pid() permits to make it expose the topology of the machine from the point of view of another process.

Note

hwloc_pid_t is pid_t on Unix platforms, and HANDLE on native Windows platforms.
-1 is returned and errno is set to ENOSYS on platforms that do not support this feature.

22.11.3.3 hwloc_topology_set_synthetic()

Enable synthetic topology.

Gather topology information from the given description, a space-separated string of <type:number> describing the object type and arity at each level. All types may be omitted (space-separated string of numbers) so that hwloc chooses all types according to usual topologies. See also the Synthetic topologies.

Setting the environment variable HWLOC SYNTHETIC may also result in this behavior.

If description was properly parsed and describes a valid topology configuration, this function returns 0. Otherwise -1 is returned and errno is set to EINVAL.

Note that this function does not actually load topology information; it just tells hwloc where to load it from. You'll still need to invoke hwloc_topology_load() to actually load the topology information.

Note

For convenience, this backend provides empty binding hooks which just return success.

On success, the synthetic component replaces the previously enabled component (if any), but the topology is not actually modified until <a href="https://hww.nctanto.com/hww.n

22.11.3.4 hwloc_topology_set_xml()

Enable XML-file based topology.

Gather topology information from the XML file given at xmlpath. Setting the environment variable HWLOC_XM LFILE may also result in this behavior. This file may have been generated earlier with hwloc_topology_export_xml() in hwloc/export.h, or Istopo file.xml.

Note that this function does not actually load topology information; it just tells hwloc where to load it from. You'll still need to invoke hwloc topology load() to actually load the topology information.

Returns

-1 with errno set to EINVAL on failure to read the XML file.

Note

See also hwloc_topology_set_userdata_import_callback() for importing application-specific object userdata. For convenience, this backend provides empty binding hooks which just return success. To have hwloc still actually call OS-specific hooks, the HWLOC_TOPOLOGY_FLAG_IS_THISSYSTEM has to be set to assert that the loaded file is really the underlying system.

On success, the XML component replaces the previously enabled component (if any), but the topology is not actually modified until hwloc_topology_load().

22.11.3.5 hwloc_topology_set_xmlbuffer()

```
int hwloc_topology_set_xmlbuffer (
          hwloc_topology_t restrict topology,
          const char *restrict buffer,
          int size )
```

Enable XML based topology using a memory buffer (instead of a file, as with hwloc_topology_set_xml()).

Gather topology information from the XML memory buffer given at buffer and of length size. This buffer may have been filled earlier with hwloc_topology_export_xmlbuffer() in hwloc/export.h.

Note that this function does not actually load topology information; it just tells hwloc where to load it from. You'll still need to invoke hwloc_topology_load() to actually load the topology information.

Returns

-1 with errno set to EINVAL on failure to read the XML buffer.

Note

See also hwloc_topology_set_userdata_import_callback() for importing application-specific object userdata. For convenience, this backend provides empty binding hooks which just return success. To have hwloc still actually call OS-specific hooks, the HWLOC_TOPOLOGY_FLAG_IS_THISSYSTEM has to be set to assert that the loaded file is really the underlying system.

22.12 Topology Detection Configuration and Query

Data Structures

- · struct hwloc_topology_discovery_support
- struct hwloc_topology_cpubind_support
- struct hwloc_topology_membind_support
- · struct hwloc topology support

Enumerations

- enum hwloc_topology_flags_e { HWLOC_TOPOLOGY_FLAG_INCLUDE_DISALLOWED, HWLOC_TOP
 OLOGY_FLAG_IS_THISSYSTEM, HWLOC_TOPOLOGY_FLAG_THISSYSTEM_ALLOWED_RESOURC
 ES }
- enum hwloc_type_filter_e { HWLOC_TYPE_FILTER_KEEP_ALL, HWLOC_TYPE_FILTER_KEEP_NONE, HWLOC_TYPE_FILTER_KEEP_STRUCTURE, HWLOC_TYPE_FILTER_KEEP_IMPORTANT }

Functions

- int hwloc_topology_set_flags (hwloc_topology_t topology, unsigned long flags)
- unsigned long hwloc_topology_get_flags (hwloc_topology_t topology)
- int hwloc_topology_is_thissystem (hwloc_topology_t restrict topology)
- const struct hwloc_topology_support * hwloc_topology_get_support (hwloc_topology_t restrict topology)
- int hwloc_topology_set_type_filter (hwloc_topology_t topology, hwloc_obj_type_t type, enum hwloc_type_
 —
 filter e filter)
- int hwloc_topology_get_type_filter (hwloc_topology_t topology, hwloc_obj_type_t type, enum hwloc_type_
 —
 filter e *filter)
- int hwloc_topology_set_all_types_filter (hwloc_topology_t topology, enum hwloc_type_filter_e filter)
- · int hwloc topology set cache types filter (hwloc topology t topology, enum hwloc type filter e filter)
- int hwloc_topology_set_icache_types_filter (hwloc_topology_t topology, enum hwloc_type_filter_e filter)
- int hwloc_topology_set_io_types_filter (hwloc_topology_t topology, enum hwloc_type_filter_e filter)
- void hwloc_topology_set_userdata (hwloc_topology_t topology, const void *userdata)
- void * hwloc topology get userdata (hwloc topology t topology)

22.12.1 Detailed Description

Several functions can optionally be called between hwloc_topology_init() and hwloc_topology_load() to configure how the detection should be performed, e.g. to ignore some objects types, define a synthetic topology, etc.

22.12.2 Enumeration Type Documentation

22.12.2.1 hwloc_topology_flags_e

enum hwloc_topology_flags_e

Flags to be set onto a topology context before load.

Flags should be given to hwloc_topology_set_flags(). They may also be returned by hwloc_topology_get_flags().

Enumerator

HWLOC_TOPOLOGY_FLAG_INCLUDE_DISALL ↔

Detect the whole system, ignore reservations, include disallowed objects. Gather all resources, even if some were disabled by the administrator. For instance, ignore Linux Cgroup/Cpusets and gather all processors and memory nodes.

When this flag is not set, PUs and NUMA nodes that are disallowed are not added to the topology. Parent objects (package, core, cache, etc.) are added only if some of their children are allowed. All existing PUs and NUMA nodes in the topology are allowed. hwloc_topology_get_allowed_cpuset() and

hwloc_topology_get_allowed_cpuset() and hwloc_topology_get_allowed_nodeset() are equal to the root object cpuset and nodeset.

When this flag is set, the actual sets of allowed PUs and NUMA nodes are given by

hwloc_topology_get_allowed_cpuset() and hwloc_topology_get_allowed_nodeset(). They may be smaller than the root object cpuset and nodeset. If the current topology is exported to XML and reimported later, this flag should be set again in the reimported topology so that disallowed resources are reimported as well.

HWLOC_TOPOLOGY_FLAG_IS_THISSYSTEM

Assume that the selected backend provides the topology for the system on which we are running. This forces hwloc_topology_is_thissystem() to return 1, i.e. makes hwloc assume that the selected backend provides the topology for the system on which we are running, even if it is not the OS-specific backend but the XML backend for instance. This means making the binding functions actually call the OS-specific system calls and really do binding, while the XML backend would otherwise provide empty hooks just returning success.

Setting the environment variable HWLOC_THISSYSTEM may also result in the same behavior.

This can be used for efficiency reasons to first detect the topology once, save it to an XML file, and quickly reload it later through the XML backend, but still having binding functions actually do bind.

Enumerator

HWLOC_TOPOLOGY_FLAG_THISSYSTEM_ALL↔	Get the set of allowed resources from the local
OWED_RESOURCES	operating system even if the topology was loaded
	from XML or synthetic description. If the topology was
	loaded from XML or from a synthetic string, restrict it
	by applying the current process restrictions such as
	Linux Cgroup/Cpuset.
	This is useful when the topology is not loaded directly
	from the local machine (e.g. for performance reason)
	and it comes with all resources, while the running
	process is restricted to only parts of the machine.
	This flag is ignored unless
	HWLOC TOPOLOGY FLAG IS THISSYSTEM is
	also set since the loaded topology must match the
	underlying machine where restrictions will be
	gathered from.
	Setting the environment variable
	HWLOC_THISSYSTEM_ALLOWED_RESOURCES
	would result in the same behavior.
	would result in the same behavior.

22.12.2.2 hwloc_type_filter_e

enum hwloc_type_filter_e

Type filtering flags.

By default, most objects are kept (HWLOC_TYPE_FILTER_KEEP_ALL). Instruction caches, I/O and Misc objects are ignored by default (HWLOC_TYPE_FILTER_KEEP_NONE). Die and Group levels are ignored unless they bring structure (HWLOC_TYPE_FILTER_KEEP_STRUCTURE).

Note that group objects are also ignored individually (without the entire level) when they do not bring structure.

Enumerator

HWLOC_TYPE_FILTER_KEEP_ALL	Keep all objects of this type. Cannot be set for HWLOC_OBJ_GROUP (groups are designed only to add more structure to the topology).
HWLOC_TYPE_FILTER_KEEP_NONE	Ignore all objects of this type. The bottom-level type HWLOC_OBJ_PU, the HWLOC_OBJ_NUMANODE type, and the top-level type HWLOC_OBJ_MACHINE may not be ignored.
HWLOC_TYPE_FILTER_KEEP_STRUCTURE	Only ignore objects if their entire level does not bring any structure. Keep the entire level of objects if at least one of these objects adds structure to the topology. An object brings structure when it has multiple children and it is not the only child of its parent. If all objects in the level are the only child of their parent, and if none of them has multiple children, the entire level is removed. Cannot be set for I/O and Misc objects since the topology structure does not matter there.

Enumerator

HWLOC	TYPE	FILTER	KEEP	IMPORTANT

Only keep likely-important objects of the given type. It is only useful for I/O object types. For HWLOC_OBJ_PCI_DEVICE and HWLOC_OBJ_OS_DEVICE, it means that only objects of major/common kinds are kept (storage, network, OpenFabrics, Intel MICs, CUDA, OpenCL, NVML, and displays). Also, only OS devices directly attached on PCI (e.g. no USB) are reported. For HWLOC_OBJ_BRIDGE, it means that bridges are kept only if they have children. This flag equivalent to HWLOC_TYPE_FILTER_KEEP_ALL for Normal, Memory and Misc types since they are likely important.

22.12.3 Function Documentation

22.12.3.1 hwloc_topology_get_flags()

Get OR'ed flags of a topology.

Get the OR'ed set of hwloc_topology_flags_e of a topology.

Returns

the flags previously set with hwloc topology set flags().

22.12.3.2 hwloc_topology_get_support()

Retrieve the topology support.

Each flag indicates whether a feature is supported. If set to 0, the feature is not supported. If set to 1, the feature is supported, but the corresponding call may still fail in some corner cases.

These features are also listed by hwloc-info --support

22.12.3.3 hwloc_topology_get_type_filter()

```
int hwloc_topology_get_type_filter (
                hwloc_topology_t topology,
                 hwloc_obj_type_t type,
                 enum hwloc_type_filter_e * filter )
```

Get the current filtering for the given object type.

22.12.3.4 hwloc_topology_get_userdata()

Retrieve the topology-specific userdata pointer.

Retrieve the application-given private data pointer that was previously set with hwloc_topology_set_userdata().

22.12.3.5 hwloc_topology_is_thissystem()

Does the topology context come from this system?

Returns

1 if this topology context was built using the system running this program.

0 instead (for instance if using another file-system root, a XML topology file, or a synthetic topology).

22.12.3.6 hwloc_topology_set_all_types_filter()

Set the filtering for all object types.

If some types do not support this filtering, they are silently ignored.

22.12.3.7 hwloc_topology_set_cache_types_filter()

Set the filtering for all CPU cache object types.

Memory-side caches are not involved since they are not CPU caches.

22.12.3.8 hwloc_topology_set_flags()

Set OR'ed flags to non-yet-loaded topology.

Set a OR'ed set of hwloc_topology_flags_e onto a topology that was not yet loaded.

If this function is called multiple times, the last invokation will erase and replace the set of flags that was previously set

The flags set in a topology may be retrieved with hwloc_topology_get_flags()

22.12.3.9 hwloc_topology_set_icache_types_filter()

Set the filtering for all CPU instruction cache object types.

Memory-side caches are not involved since they are not CPU caches.

22.12.3.10 hwloc_topology_set_io_types_filter()

Set the filtering for all I/O object types.

22.12.3.11 hwloc_topology_set_type_filter()

Set the filtering for the given object type.

22.12.3.12 hwloc_topology_set_userdata()

Set the topology-specific userdata pointer.

Each topology may store one application-given private data pointer. It is initialized to \mathtt{NULL} . hwloc will never modify it.

Use it as you wish, after hwloc_topolog_destroy().

This pointer is not exported to XML.

22.13 Modifying a loaded Topology

Enumerations

- enum hwloc_restrict_flags_e {
 HWLOC_RESTRICT_FLAG_REMOVE_CPULESS, HWLOC_RESTRICT_FLAG_BYNODESET = (1←)
 UL<<3), HWLOC_RESTRICT_FLAG_REMOVE_MEMLESS, HWLOC_RESTRICT_FLAG_ADAPT_MISC,
 HWLOC_RESTRICT_FLAG_ADAPT_IO }
- enum hwloc_allow_flags_e { HWLOC_ALLOW_FLAG_ALL, HWLOC_ALLOW_FLAG_LOCAL_RESTRIC
 — TIONS, HWLOC_ALLOW_FLAG_CUSTOM }

Functions

- int hwloc_topology_restrict (hwloc_topology_t restrict topology, hwloc_const_bitmap_t set, unsigned long flags)
- int hwloc_topology_allow (hwloc_topology_t restrict topology, hwloc_const_cpuset_t cpuset, hwloc_const_
 —
 nodeset_t nodeset, unsigned long flags)
- hwloc_obj_t hwloc_topology_insert_misc_object (hwloc_topology_t topology, hwloc_obj_t parent, const char *name)
- hwloc_obj_t hwloc_topology_alloc_group_object (hwloc_topology_t topology)
- hwloc_obj_t hwloc_topology_insert_group_object (hwloc_topology_t topology, hwloc_obj_t group)
- int hwloc_obj_add_other_obj_sets (hwloc_obj_t dst, hwloc_obj_t src)

22.13.1 Detailed Description

22.13.2 Enumeration Type Documentation

22.13.2.1 hwloc_allow_flags_e

enum hwloc_allow_flags_e

Flags to be given to hwloc_topology_allow().

Enumerator

HWLOC_ALLOW_FLAG_ALL	Mark all objects as allowed in the topology. cpuset and nodeset given to hwloc_topology_allow() must be NULL.
HWLOC_ALLOW_FLAG_LOCAL_RESTRICTIONS	Only allow objects that are available to the current process. The topology must have HWLOC_TOPOLOGY_FLAG_IS_THISSYSTEM so that the set of available resources can actually be retrieved from the operating system. cpuset and nodeset given to hwloc_topology_allow() must be NULL.
HWLOC_ALLOW_FLAG_CUSTOM	Allow a custom set of objects, given to hwloc_topology_allow() as cpuset and/or nodeset parameters.

22.13.2.2 hwloc_restrict_flags_e

```
enum hwloc_restrict_flags_e
```

Flags to be given to hwloc_topology_restrict().

Enumerator

HWLOC_RESTRICT_FLAG_REMOVE_CPULESS	Remove all objects that became CPU-less. By default, only objects that contain no PU and no memory are removed.
HWLOC_RESTRICT_FLAG_BYNODESET	Restrict by nodeset instead of CPU set. Only keep objects whose nodeset is included or partially included in the given set. This flag may not be used with HWLOC_RESTRICT_FLAG_BYNODESET.
HWLOC_RESTRICT_FLAG_REMOVE_MEMLESS	Remove all objects that became Memory-less. By default, only objects that contain no PU and no memory are removed. This flag may only be used with HWLOC_RESTRICT_FLAG_BYNODESET.
HWLOC_RESTRICT_FLAG_ADAPT_MISC	Move Misc objects to ancestors if their parents are removed during restriction. If this flag is not set, Misc objects are removed when their parents are removed.
HWLOC_RESTRICT_FLAG_ADAPT_IO	Move I/O objects to ancestors if their parents are removed during restriction. If this flag is not set, I/O devices and bridges are removed when their parents are removed.

22.13.3 Function Documentation

22.13.3.1 hwloc_obj_add_other_obj_sets()

```
int hwloc_obj_add_other_obj_sets (
          hwloc_obj_t dst,
          hwloc_obj_t src )
```

Setup object cpusets/nodesets by OR'ing another object's sets.

For each defined cpuset or nodeset in src, allocate the corresponding set in dst and add src to it by OR'ing sets.

This function is convenient between hwloc_topology_alloc_group_object() and hwloc_topology_insert_group_cobject(). It builds the sets of the new Group that will be inserted as a new intermediate parent of several objects.

22.13.3.2 hwloc_topology_alloc_group_object()

Allocate a Group object to insert later with hwloc_topology_insert_group_object().

The subtype object attribute may be set to display something else than "Group" as the type name for this object in Istopo. Custom name/value info pairs may be added with hwloc_obj_add_info() after insertion.

The kind group attribute should be 0. The subkind group attribute may be set to identify multiple Groups of the same level.

It is recommended not to set any other object attribute before insertion, since the Group may get discarded during insertion.

The object will be destroyed if passed to hwloc_topology_insert_group_object() without any set defined.

22.13.3.3 hwloc_topology_allow()

Change the sets of allowed PUs and NUMA nodes in the topology.

This function only works if the HWLOC_TOPOLOGY_FLAG_INCLUDE_DISALLOWED was set on the topology. It does not modify any object, it only changes the sets returned by hwloc_topology_get_allowed_cpuset() and hwloc← _topology_get_allowed_nodeset().

It is notably useful when importing a topology from another process running in a different Linux Cgroup.

flags must be set to one flag among hwloc_allow_flags_e.

Note

Removing objects from a topology should rather be performed with hwloc_topology_restrict().

22.13.3.4 hwloc_topology_insert_group_object()

Add more structure to the topology by adding an intermediate Group.

The caller should first allocate a new Group object with hwloc_topology_alloc_group_object(). Then it must setup at least one of its CPU or node sets to specify the final location of the Group in the topology. Then the object can be passed to this function for actual insertion in the topology.

The group dont_merge attribute may be set to prevent the core from ever merging this object with another object hierarchically-identical.

Either the cpuset or nodeset field (or both, if compatible) must be set to a non-empty bitmap. The complete_cpuset or complete_nodeset may be set instead if inserting with respect to the complete topology (including disallowed, offline or unknown objects).

It grouping several objects, hwloc obj add other obj sets() is an easy way to build the Group sets iteratively.

These sets cannot be larger than the current topology, or they would get restricted silently.

The core will setup the other sets after actual insertion.

Returns

The inserted object if it was properly inserted.

An existing object if the Group was discarded because the topology already contained an object at the same location (the Group did not add any locality information). Any name/info key pair set before inserting is appended to the existing object.

NULL if the insertion failed because of conflicting sets in topology tree.

NULL if Group objects are filtered-out of the topology (HWLOC_TYPE_FILTER_KEEP_NONE).

 \mathtt{NULL} if the object was discarded because no set was initialized in the Group before insert, or all of them were empty.

22.13.3.5 hwloc_topology_insert_misc_object()

Add a MISC object as a leaf of the topology.

A new MISC object will be created and inserted into the topology at the position given by parent. It is appended to the list of existing Misc children, without ever adding any intermediate hierarchy level. This is useful for annotating the topology without actually changing the hierarchy.

name is supposed to be unique across all Misc objects in the topology. It will be duplicated to setup the new object attributes.

The new leaf object will not have any ${\tt cpuset}.$

Returns

```
the newly-created object
```

 \mathtt{NULL} on error.

NULL if Misc objects are filtered-out of the topology (HWLOC_TYPE_FILTER_KEEP_NONE).

Note

22.13.3.6 hwloc_topology_restrict()

Restrict the topology to the given CPU set or nodeset.

Topology topology is modified so as to remove all objects that are not included (or partially included) in the CPU set set. All objects CPU and node sets are restricted accordingly.

If HWLOC_RESTRICT_FLAG_BYNODESET is passed in flags, set is considered a nodeset instead of a CPU set

flags is a OR'ed set of hwloc restrict flags e.

Note

This call may not be reverted by restricting back to a larger set. Once dropped during restriction, objects may not be brought back, except by loading another topology with hwloc_topology_load().

Returns

0 on success.

- -1 with errno set to EINVAL if the input set is invalid. The topology is not modified in this case.
- -1 with errno set to ENOMEM on failure to allocate internal data. The topology is reinitialized in this case. It should be either destroyed with hwloc_topology_destroy() or configured and loaded again.

22.14 Finding Objects inside a CPU set

Functions

- static hwloc_obj_t hwloc_get_first_largest_obj_inside_cpuset (hwloc_topology_t topology, hwloc_const_← cpuset t set)
- int hwloc_get_largest_objs_inside_cpuset (hwloc_topology_t topology, hwloc_const_cpuset_t set, hwloc_
 obj t *restrict objs, int max)
- static hwloc_obj_t hwloc_get_next_obj_inside_cpuset_by_depth (hwloc_topology_t topology, hwloc_const
 —cpuset_t set, int depth, hwloc_obj_t prev)
- static hwloc_obj_t hwloc_get_next_obj_inside_cpuset_by_type (hwloc_topology_t topology, hwloc_const_
 cpuset_t set, hwloc_obj_type_t type, hwloc_obj_t prev)
- static hwloc_obj_t hwloc_get_obj_inside_cpuset_by_depth (hwloc_topology_t topology, hwloc_const_
 cpuset_t set, int depth, unsigned idx)
- static hwloc_obj_t hwloc_get_obj_inside_cpuset_by_type (hwloc_topology_t topology, hwloc_const_
 cpuset_t set, hwloc_obj_type_t type, unsigned idx)
- static unsigned hwloc_get_nbobjs_inside_cpuset_by_depth (hwloc_topology_t topology, hwloc_const_
 cpuset t set, int depth)
- static int hwloc_get_nbobjs_inside_cpuset_by_type (hwloc_topology_t topology, hwloc_const_cpuset_t set, hwloc_obj_type_t type)
- static int hwloc_get_obj_index_inside_cpuset (hwloc_topology_t topology, hwloc_const_cpuset_t set, hwloc_obj_t obj)

22.14.1 Detailed Description

22.14.2 Function Documentation

22.14.2.1 hwloc_get_first_largest_obj_inside_cpuset()

Get the first largest object included in the given cpuset set.

Returns

the first object that is included in set and whose parent is not.

This is convenient for iterating over all largest objects within a CPU set by doing a loop getting the first largest object and clearing its CPU set from the remaining CPU set.

22.14.2.2 hwloc_get_largest_objs_inside_cpuset()

Get the set of largest objects covering exactly a given cpuset set.

Returns

the number of objects returned in objs.

22.14.2.3 hwloc_get_nbobjs_inside_cpuset_by_depth()

```
static unsigned hwloc_get_nbobjs_inside_cpuset_by_depth (
    hwloc_topology_t topology,
    hwloc_const_cpuset_t set,
    int depth ) [inline], [static]
```

Return the number of objects at depth depth included in CPU set set.

Note

Objects with empty CPU sets are ignored (otherwise they would be considered included in any given set). This function cannot work if objects at the given depth do not have CPU sets (I/O or Misc objects).

22.14.2.4 hwloc_get_nbobjs_inside_cpuset_by_type()

Return the number of objects of type type included in CPU set set.

If no object for that type exists inside CPU set set, 0 is returned. If there are several levels with objects of that type inside CPU set set, -1 is returned.

Note

Objects with empty CPU sets are ignored (otherwise they would be considered included in any given set). This function cannot work if objects of the given type do not have CPU sets (I/O objects).

22.14.2.5 hwloc_get_next_obj_inside_cpuset_by_depth()

Return the next object at depth depth included in CPU set set.

If prev is NULL, return the first object at depth depth included in set. The next invokation should pass the previous return value in prev so as to obtain the next object in set.

Note

Objects with empty CPU sets are ignored (otherwise they would be considered included in any given set). This function cannot work if objects at the given depth do not have CPU sets (I/O or Misc objects).

22.14.2.6 hwloc_get_next_obj_inside_cpuset_by_type()

Return the next object of type type included in CPU set set.

If there are multiple or no depth for given type, return NULL and let the caller fallback to $\texttt{hwloc_get_next_obj_} \leftarrow \texttt{inside_cpuset_by_depth()}$.

Note

Objects with empty CPU sets are ignored (otherwise they would be considered included in any given set). This function cannot work if objects of the given type do not have CPU sets (I/O or Misc objects).

22.14.2.7 hwloc_get_obj_index_inside_cpuset()

Return the logical index among the objects included in CPU set set.

Consult all objects in the same level as obj and inside CPU set set in the logical order, and return the index of obj within them. If set covers the entire topology, this is the logical index of obj. Otherwise, this is similar to a logical index within the part of the topology defined by CPU set set.

Note

Objects with empty CPU sets are ignored (otherwise they would be considered included in any given set). This function cannot work if obj does not have CPU sets (I/O objects).

22.14.2.8 hwloc_get_obj_inside_cpuset_by_depth()

```
static hwloc_obj_t hwloc_get_obj_inside_cpuset_by_depth (
          hwloc_topology_t topology,
          hwloc_const_cpuset_t set,
          int depth,
          unsigned idx ) [inline], [static]
```

Return the (logically) idx -th object at depth depth included in CPU set set.

Note

Objects with empty CPU sets are ignored (otherwise they would be considered included in any given set). This function cannot work if objects at the given depth do not have CPU sets (I/O or Misc objects).

22.14.2.9 hwloc_get_obj_inside_cpuset_by_type()

```
static hwloc_obj_t hwloc_get_obj_inside_cpuset_by_type (
                hwloc_topology_t topology,
                hwloc_const_cpuset_t set,
                 hwloc_obj_type_t type,
                 unsigned idx ) [inline], [static]
```

Return the idx -th object of type type included in CPU set set.

If there are multiple or no depth for given type, return \mathtt{NULL} and let the caller fallback to $\mathsf{hwloc_get_obj_inside_} \leftarrow \mathsf{cpuset_by_depth}()$.

Note

Objects with empty CPU sets are ignored (otherwise they would be considered included in any given set). This function cannot work if objects of the given type do not have CPU sets (I/O or Misc objects).

22.15 Finding Objects covering at least CPU set

Functions

- static hwloc_obj_t hwloc_get_child_covering_cpuset (hwloc_topology_t topology, hwloc_const_cpuset_t set, hwloc_obj_t parent)
- static hwloc obj t hwloc get obj covering cpuset (hwloc topology t topology, hwloc const cpuset t set)
- static hwloc_obj_t hwloc_get_next_obj_covering_cpuset_by_depth (hwloc_topology_t topology, hwloc_
 const_cpuset_t set, int depth, hwloc_obj_t prev)
- static hwloc_obj_t hwloc_get_next_obj_covering_cpuset_by_type (hwloc_topology_t topology, hwloc_
 const_cpuset_t set, hwloc_obj_type_t type, hwloc_obj_t prev)

22.15.1 Detailed Description

22.15.2 Function Documentation

22.15.2.1 hwloc get_child_covering_cpuset()

Get the child covering at least CPU set set.

Returns

NULL if no child matches or if set is empty.

Note

This function cannot work if parent does not have a CPU set (I/O or Misc objects).

22.15.2.2 hwloc_get_next_obj_covering_cpuset_by_depth()

Iterate through same-depth objects covering at least CPU set $\mathtt{set}.$

If object prev is NULL, return the first object at depth depth covering at least part of CPU set set. The next invokation should pass the previous return value in prev so as to obtain the next object covering at least another part of set.

Note

This function cannot work if objects at the given depth do not have CPU sets (I/O or Misc objects).

22.15.2.3 hwloc_get_next_obj_covering_cpuset_by_type()

Iterate through same-type objects covering at least CPU set set.

If object prev is NULL, return the first object of type type covering at least part of CPU set set. The next invokation should pass the previous return value in prev so as to obtain the next object of type type covering at least another part of set.

If there are no or multiple depths for type type, NULL is returned. The caller may fallback to $hwloc_get_next_{\leftarrow}$ obj_covering_cpuset_by_depth() for each depth.

Note

This function cannot work if objects of the given type do not have CPU sets (I/O or Misc objects).

22.15.2.4 hwloc get obj covering cpuset()

Get the lowest object covering at least CPU set set.

Returns

NULL if no object matches or if set is empty.

22.16 Looking at Ancestor and Child Objects

Functions

- static hwloc_obj_t hwloc_get_ancestor_obj_by_depth (hwloc_topology_t topology, int depth, hwloc_obj_t obj)
- static hwloc_obj_t hwloc_get_ancestor_obj_by_type (hwloc_topology_t topology, hwloc_obj_type_t type, hwloc obj t obj)
- static hwloc_obj_t hwloc_get_common_ancestor_obj (hwloc_topology_t topology, hwloc_obj_t obj1, hwloc
 _obj_t obj2)
- static int hwloc_obj_is_in_subtree (hwloc_topology_t topology, hwloc_obj_t obj, hwloc_obj_t subtree_root)
- static hwloc_obj_t hwloc_get_next_child (hwloc_topology_t topology, hwloc_obj_t parent, hwloc_obj_t prev)

22.16.1 Detailed Description

Be sure to see the figure in Terms and Definitions that shows a complete topology tree, including depths, child/sibling/cousin relationships, and an example of an asymmetric topology where one package has fewer caches than its peers.

22.16.2 Function Documentation

22.16.2.1 hwloc_get_ancestor_obj_by_depth()

Returns the ancestor object of obj at depth depth.

Note

depth should not be the depth of PU or NUMA objects since they are ancestors of no objects (except Misc or I/O). This function rather expects an intermediate level depth, such as the depth of Packages, Cores, or Caches.

22.16.2.2 hwloc_get_ancestor_obj_by_type()

Returns the ancestor object of obj with type type.

Note

type should not be HWLOC_OBJ_PU or HWLOC_OBJ_NUMANODE since these objects are ancestors of no objects (except Misc or I/O). This function rather expects an intermediate object type, such as HWLOC_ \leftarrow OBJ_PACKAGE, HWLOC_OBJ_CORE, etc.

22.16.2.3 hwloc_get_common_ancestor_obj()

Returns the common parent object to objects ob j1 and ob j2.

22.16.2.4 hwloc_get_next_child()

Return the next child.

Return the next child among the normal children list, then among the memory children list, then among the I/O children list, then among the Misc children list.

If prev is NULL, return the first child.

Return ${\tt NULL}$ when there is no next child.

22.16.2.5 hwloc_obj_is_in_subtree()

Returns true if obj is inside the subtree beginning with ancestor object subtree_root.

Note

This function cannot work if obj and subtree_root objects do not have CPU sets (I/O or Misc objects).

22.17 Kinds of object Type

Functions

- int hwloc_obj_type_is_normal (hwloc_obj_type_t type)
- int hwloc_obj_type_is_io (hwloc_obj_type_t type)
- int hwloc_obj_type_is_memory (hwloc_obj_type_t type)
- int hwloc_obj_type_is_cache (hwloc_obj_type_t type)
- int hwloc_obj_type_is_dcache (hwloc_obj_type_t type)
- int hwloc_obj_type_is_icache (hwloc_obj_type_t type)

22.17.1 Detailed Description

Each object type is either Normal (i.e. hwloc_obj_type_is_normal() returns 1), or Memory (i.e. hwloc_obj_type_is_inc) returns 1) or Misc (i.e. equal to HWLOC_OBJ_MISC). It cannot be of more than one of these kinds.

22.17.2 Function Documentation

22.17.2.1 hwloc_obj_type_is_cache()

Check whether an object type is a CPU Cache (Data, Unified or Instruction).

Memory-side caches are not CPU caches.

Returns

1 if an object of type type is a Cache, 0 otherwise.

22.17.2.2 hwloc_obj_type_is_dcache()

Check whether an object type is a CPU Data or Unified Cache.

Memory-side caches are not CPU caches.

Returns

1 if an object of type type is a CPU Data or Unified Cache, 0 otherwise.

22.17.2.3 hwloc_obj_type_is_icache()

Check whether an object type is a CPU Instruction Cache,.

Memory-side caches are not CPU caches.

Returns

1 if an object of type type is a CPU Instruction Cache, 0 otherwise.

22.17.2.4 hwloc_obj_type_is_io()

Check whether an object type is I/O.

I/O objects are objects attached to their parents in the I/O children list. This current includes Bridges, PCI and OS devices.

Returns

1 if an object of type type is a I/O object, 0 otherwise.

22.17.2.5 hwloc_obj_type_is_memory()

Check whether an object type is Memory.

Memory objects are objects attached to their parents in the Memory children list. This current includes NUMA nodes and Memory-side caches.

Returns

1 if an object of type type is a Memory object, 0 otherwise.

22.17.2.6 hwloc_obj_type_is_normal()

Check whether an object type is Normal.

Normal objects are objects of the main CPU hierarchy (Machine, Package, Core, PU, CPU caches, etc.), but they are not NUMA nodes, I/O devices or Misc objects.

They are attached to parent as Normal children, not as Memory, I/O or Misc children.

Returns

1 if an object of type type is a Normal object, 0 otherwise.

22.18 Looking at Cache Objects

Functions

- static int hwloc_get_cache_type_depth (hwloc_topology_t topology, unsigned cachelevel, hwloc_obj_cache_type_t cachetype)
- static hwloc_obj_t hwloc_get_cache_covering_cpuset (hwloc_topology_t topology, hwloc_const_cpuset_
 t set)
- · static hwloc obj t hwloc get shared cache covering obj (hwloc topology, t topology, hwloc obj t obj)

22.18.1 Detailed Description

22.18.2 Function Documentation

22.18.2.1 hwloc get cache covering cpuset()

Get the first data (or unified) cache covering a cpuset set.

Returns

NULL if no cache matches.

22.18.2.2 hwloc_get_cache_type_depth()

Find the depth of cache objects matching cache level and type.

Return the depth of the topology level that contains cache objects whose attributes match cachelevel and cachetype.

This function is identical to calling hwloc_get_type_depth() with the corresponding type such as HWLOC_OBJ_← L1ICACHE, except that it may also return a Unified cache when looking for an instruction cache.

If no cache level matches, HWLOC_TYPE_DEPTH_UNKNOWN is returned.

If cachetype is HWLOC_OBJ_CACHE_UNIFIED, the depth of the unique matching unified cache level is returned.

If cachetype is HWLOC_OBJ_CACHE_DATA or HWLOC_OBJ_CACHE_INSTRUCTION, either a matching cache, or a unified cache is returned.

If cachetype is -1, it is ignored and multiple levels may match. The function returns either the depth of a uniquely matching level or HWLOC_TYPE_DEPTH_MULTIPLE.

22.18.2.3 hwloc_get_shared_cache_covering_obj()

Get the first data (or unified) cache shared between an object and somebody else.

Returns

 \mathtt{NULL} if no cache matches or if an invalid object is given.

22.19 Finding objects, miscellaneous helpers

Functions

- static hwloc_obj_t hwloc_get_pu_obj_by_os_index (hwloc_topology_t topology, unsigned os_index)
- static hwloc_obj_t hwloc_get_numanode_obj_by_os_index (hwloc_topology_t topology, unsigned os_index)
- unsigned hwloc_get_closest_objs (hwloc_topology_t topology, hwloc_obj_t src, hwloc_obj_t *restrict objs, unsigned max)
- static hwloc_obj_t hwloc_get_obj_below_by_type (hwloc_topology_t topology, hwloc_obj_type_t type1, unsigned idx1, hwloc_obj_type_t type2, unsigned idx2)
- static hwloc_obj_t hwloc_get_obj_below_array_by_type (hwloc_topology_t topology, int nr, hwloc_obj_type
 _t *typev, unsigned *idxv)

22.19.1 Detailed Description

Be sure to see the figure in Terms and Definitions that shows a complete topology tree, including depths, child/sibling/cousin relationships, and an example of an asymmetric topology where one package has fewer caches than its peers.

22.19.2 Function Documentation

22.19.2.1 hwloc_get_closest_objs()

```
unsigned hwloc_get_closest_objs (
                hwloc_topology_t topology,
                hwloc_obj_t src,
                hwloc_obj_t *restrict objs,
                 unsigned max )
```

Do a depth-first traversal of the topology to find and sort.

all objects that are at the same depth than src. Report in objs up to max physically closest ones to src.

Returns

```
the number of objects returned in objs. 0 if src is an I/O object.
```

Note

This function requires the src object to have a CPU set.

22.19.2.2 hwloc_get_numanode_obj_by_os_index()

Returns the object of type HWLOC OBJ NUMANODE with os_index.

This function is useful for converting a nodeset into the NUMA node objects it contains. When retrieving the current binding (e.g. with hwloc_get_membind() with HWLOC_MEMBIND_BYNODESET), one may iterate over the bits of the resulting nodeset with hwloc_bitmap_foreach_begin(), and find the corresponding NUMA nodes with this function.

22.19.2.3 hwloc_get_obj_below_array_by_type()

Find an object below a chain of objects specified by types and indexes.

This is a generalized version of hwloc_get_obj_below_by_type().

Arrays typev and idxv must contain nr types and indexes.

Start from the top system object and walk the arrays typev and idxv. For each type and logical index couple in the arrays, look under the previously found object to find the index-th object of the given type. Indexes are specified within the parent, not withing the entire system.

For instance, if nr is 3, typev contains NODE, PACKAGE and CORE, and idxv contains 0, 1 and 2, return the third core object below the second package below the first NUMA node.

Note

This function requires all these objects and the root object to have a CPU set.

22.19.2.4 hwloc_get_obj_below_by_type()

Find an object below another object, both specified by types and indexes.

Start from the top system object and find object of type type1 and logical index idx1. Then look below this object and find another object of type type2 and logical index idx2. Indexes are specified within the parent, not withing the entire system.

For instance, if type1 is PACKAGE, idx1 is 2, type2 is CORE and idx2 is 3, return the fourth core object below the third package.

Note

This function requires these objects to have a CPU set.

22.19.2.5 hwloc_get_pu_obj_by_os_index()

Returns the object of type HWLOC_OBJ_PU with os_index.

This function is useful for converting a CPU set into the PU objects it contains. When retrieving the current binding (e.g. with hwloc_get_cpubind()), one may iterate over the bits of the resulting CPU set with hwloc_bitmap_foreach← _begin(), and find the corresponding PUs with this function.

22.20 Distributing items over a topology

Enumerations

enum hwloc_distrib_flags_e { HWLOC_DISTRIB_FLAG_REVERSE }

Functions

- static int hwloc_distrib (hwloc_topology_t topology, hwloc_obj_t *roots, unsigned n_roots, hwloc_cpuset_t *set, unsigned n, int until, unsigned long flags)
- 22.20.1 Detailed Description
- 22.20.2 Enumeration Type Documentation

```
22.20.2.1 hwloc_distrib_flags_e
```

```
enum hwloc_distrib_flags_e
```

Flags to be given to hwloc_distrib().

Enumerator

```
HWLOC_DISTRIB_FLAG_REVERSE  Distrib in reverse order, starting from the last objects.
```

22.20.3 Function Documentation

22.20.3.1 hwloc_distrib()

Distribute n items over the topology under roots.

Array set will be filled with n cpusets recursively distributed linearly over the topology under objects roots, down to depth until (which can be INT_MAX to distribute down to the finest level).

n_roots is usually 1 and roots only contains the topology root object so as to distribute over the entire topology.

This is typically useful when an application wants to distribute n threads over a machine, giving each of them as much private cache as possible and keeping them locally in number order.

The caller may typically want to also call hwloc_bitmap_singlify() before binding a thread so that it does not move at all.

flags should be 0 or a OR'ed set of hwloc_distrib_flags_e.

Note

This function requires the roots objects to have a CPU set.

This function replaces the now deprecated hwloc_distribute() and hwloc_distributev() functions.

22.21 CPU and node sets of entire topologies

Functions

- hwloc_const_cpuset_t hwloc_topology_get_complete_cpuset (hwloc_topology_t topology)
- hwloc_const_cpuset_t hwloc_topology_get_topology_cpuset (hwloc_topology_t topology)
- hwloc_const_cpuset_t hwloc_topology_get_allowed_cpuset (hwloc_topology_t topology)
- hwloc_const_nodeset_t hwloc_topology_get_complete_nodeset (hwloc_topology_t topology)
- hwloc const nodeset thwloc topology get topology nodeset (hwloc topology t topology)
- hwloc_const_nodeset_t hwloc_topology_get_allowed_nodeset (hwloc_topology_t topology)

22.21.1 Detailed Description

22.21.2 Function Documentation

22.21.2.1 hwloc_topology_get_allowed_cpuset()

Get allowed CPU set.

Returns

the CPU set of allowed logical processors of the system.

Note

If the topology flag HWLOC_TOPOLOGY_FLAG_INCLUDE_DISALLOWED was not set, this is identical to hwloc topology get topology cpuset(), which means all PUs are allowed.

If HWLOC_TOPOLOGY_FLAG_INCLUDE_DISALLOWED was set, applying hwloc_bitmap_intersects() on the result of this function and on an object cpuset checks whether there are allowed PUs inside that object. Applying hwloc_bitmap_and() returns the list of these allowed PUs.

The returned cpuset is not newly allocated and should thus not be changed or freed, hwloc_bitmap_dup() must be used to obtain a local copy.

22.21.2.2 hwloc_topology_get_allowed_nodeset()

Get allowed node set.

Returns

the node set of allowed memory of the system.

Note

If the topology flag HWLOC_TOPOLOGY_FLAG_INCLUDE_DISALLOWED was not set, this is identical to hwloc_topology_get_topology_nodeset(), which means all NUMA nodes are allowed.

If HWLOC_TOPOLOGY_FLAG_INCLUDE_DISALLOWED was set, applying hwloc_bitmap_intersects() on the result of this function and on an object nodeset checks whether there are allowed NUMA nodes inside that object. Applying hwloc_bitmap_and() returns the list of these allowed NUMA nodes.

The returned nodeset is not newly allocated and should thus not be changed or freed, hwloc_bitmap_dup() must be used to obtain a local copy.

22.21.2.3 hwloc_topology_get_complete_cpuset()

Get complete CPU set.

Returns

the complete CPU set of logical processors of the system.

Note

The returned cpuset is not newly allocated and should thus not be changed or freed; hwloc_bitmap_dup() must be used to obtain a local copy.

This is equivalent to retrieving the root object complete CPU-set.

22.21.2.4 hwloc_topology_get_complete_nodeset()

Get complete node set.

Returns

the complete node set of memory of the system.

Note

The returned nodeset is not newly allocated and should thus not be changed or freed; hwloc_bitmap_dup() must be used to obtain a local copy.

This is equivalent to retrieving the root object complete nodeset.

22.21.2.5 hwloc_topology_get_topology_cpuset()

Get topology CPU set.

Returns

the CPU set of logical processors of the system for which hwloc provides topology information. This is equivalent to the cpuset of the system object.

Note

The returned cpuset is not newly allocated and should thus not be changed or freed; hwloc_bitmap_dup() must be used to obtain a local copy.

This is equivalent to retrieving the root object CPU-set.

22.21.2.6 hwloc_topology_get_topology_nodeset()

Get topology node set.

Returns

the node set of memory of the system for which hwloc provides topology information. This is equivalent to the nodeset of the system object.

Note

The returned nodeset is not newly allocated and should thus not be changed or freed; hwloc_bitmap_dup() must be used to obtain a local copy.

This is equivalent to retrieving the root object nodeset.

22.22 Converting between CPU sets and node sets

Functions

- static int hwloc_cpuset_to_nodeset (hwloc_topology_t topology, hwloc_const_cpuset_t _cpuset, hwloc_
 nodeset t nodeset)
- static int hwloc_cpuset_from_nodeset (hwloc_topology_t topology, hwloc_cpuset_t_cpuset, hwloc_const_← nodeset_t nodeset)

22.22.1 Detailed Description

22.22.2 Function Documentation

22.22.2.1 hwloc_cpuset_from_nodeset()

Convert a NUMA node set into a CPU set and handle non-NUMA cases.

If the topology contains no NUMA nodes, the machine is considered as a single memory node, and the following behavior is used: If nodeset is empty, cpuset will be emptied as well. Otherwise cpuset will be entirely filled. This is useful for manipulating memory binding sets.

22.22.2.2 hwloc_cpuset_to_nodeset()

Convert a CPU set into a NUMA node set and handle non-NUMA cases.

If some NUMA nodes have no CPUs at all, this function never sets their indexes in the output node set, even if a full CPU set is given in input.

If the topology contains no NUMA nodes, the machine is considered as a single memory node, and the following behavior is used: If cpuset is empty, nodeset will be emptied as well. Otherwise nodeset will be entirely filled.

22.23 Finding I/O objects

Functions

- static hwloc_obj_t hwloc_get_non_io_ancestor_obj (hwloc_topology_t topology, hwloc_obj_t ioobj)
- static hwloc_obj_t hwloc_get_next_pcidev (hwloc_topology_t topology, hwloc_obj_t prev)
- static hwloc_obj_t hwloc_get_pcidev_by_busid (hwloc_topology_t topology, unsigned domain, unsigned bus, unsigned dev, unsigned func)
- static hwloc_obj_t hwloc_get_pcidev_by_busidstring (hwloc_topology_t topology, const char *busid)
- static hwloc_obj_t hwloc_get_next_osdev (hwloc_topology_t topology, hwloc_obj_t prev)
- static hwloc_obj_t hwloc_get_next_bridge (hwloc_topology_t topology, hwloc_obj_t prev)
- static int hwloc bridge covers pcibus (hwloc obj t bridge, unsigned domain, unsigned bus)

22.23.1 Detailed Description

22.23.2 Function Documentation

22.23.2.1 hwloc_bridge_covers_pcibus()

```
static int hwloc_bridge_covers_pcibus (
          hwloc_obj_t bridge,
          unsigned domain,
          unsigned bus ) [inline], [static]
```

22.23.2.2 hwloc_get_next_bridge()

Get the next bridge in the system.

Returns

the first bridge if prev is NULL.

22.23.2.3 hwloc_get_next_osdev()

Get the next OS device in the system.

Returns

the first OS device if prev is NULL.

22.23.2.4 hwloc_get_next_pcidev()

Get the next PCI device in the system.

Returns

the first PCI device if prev is NULL.

22.23.2.5 hwloc_get_non_io_ancestor_obj()

Get the first non-I/O ancestor object.

Given the I/O object ioobj, find the smallest non-I/O ancestor object. This object (normal or memory) may then be used for binding because it has non-NULL CPU and node sets and because its locality is the same as ioobj.

Note

The resulting object is usually a normal object but it could also be a memory object (e.g. NUMA node) in future platforms if I/O objects ever get attached to memory instead of CPUs.

22.23.2.6 hwloc_get_pcidev_by_busid()

Find the PCI device object matching the PCI bus id given domain, bus device and function PCI bus id.

22.23.2.7 hwloc_get_pcidev_by_busidstring()

Find the PCI device object matching the PCI bus id given as a string xxxx:yy:zz.t or yy:zz.t.

22.24 The bitmap API

Macros

- #define hwloc bitmap foreach begin(id, bitmap)
- · #define hwloc bitmap foreach end()

Typedefs

- typedef struct hwloc bitmap s * hwloc bitmap t
- typedef const struct hwloc_bitmap_s * hwloc_const_bitmap_t

Functions

- hwloc_bitmap_t hwloc_bitmap_alloc (void)
- · hwloc bitmap thwloc bitmap alloc full (void)
- void hwloc_bitmap_free (hwloc_bitmap_t bitmap)
- hwloc_bitmap_t hwloc_bitmap_dup (hwloc_const_bitmap_t bitmap)
- int hwloc_bitmap_copy (hwloc_bitmap_t dst, hwloc_const_bitmap_t src)
- int hwloc bitmap snprintf (char *restrict buf, size t buflen, hwloc const bitmap t bitmap)
- int hwloc_bitmap_asprintf (char **strp, hwloc_const_bitmap_t bitmap)
- int hwloc_bitmap_sscanf (hwloc_bitmap_t bitmap, const char *restrict string)
- int hwloc bitmap list snprintf (char *restrict buf, size t buflen, hwloc const bitmap t bitmap)
- int hwloc_bitmap_list_asprintf (char **strp, hwloc_const_bitmap_t bitmap)
- int hwloc bitmap list sscanf (hwloc bitmap t bitmap, const char *restrict string)
- int hwloc bitmap taskset snprintf (char *restrict buf, size t buflen, hwloc const bitmap t bitmap)
- int hwloc_bitmap_taskset_asprintf (char **strp, hwloc_const_bitmap_t bitmap)
- int hwloc_bitmap_taskset_sscanf (hwloc_bitmap_t bitmap, const char *restrict string)
- void hwloc_bitmap_zero (hwloc_bitmap_t bitmap)
- void hwloc_bitmap_fill (hwloc_bitmap_t bitmap)
- int hwloc bitmap only (hwloc bitmap t bitmap, unsigned id)
- int hwloc bitmap allbut (hwloc bitmap t bitmap, unsigned id)
- int hwloc_bitmap_from_ulong (hwloc_bitmap_t bitmap, unsigned long mask)
- int hwloc_bitmap_from_ith_ulong (hwloc_bitmap_t bitmap, unsigned i, unsigned long mask)
- int hwloc bitmap from ulongs (hwloc bitmap t bitmap, unsigned nr, const unsigned long *masks)
- int hwloc_bitmap_set (hwloc_bitmap_t bitmap, unsigned id)
- int hwloc_bitmap_set_range (hwloc_bitmap_t bitmap, unsigned begin, int end)
- int hwloc_bitmap_set_ith_ulong (hwloc_bitmap_t bitmap, unsigned i, unsigned long mask)
- int hwloc_bitmap_clr (hwloc_bitmap_t bitmap, unsigned id)
- int hwloc_bitmap_clr_range (hwloc_bitmap_t bitmap, unsigned begin, int end)
- int hwloc_bitmap_singlify (hwloc_bitmap_t bitmap)
- unsigned long hwloc bitmap to ulong (hwloc const bitmap t bitmap)
- · unsigned long hwloc bitmap to ith ulong (hwloc const bitmap t bitmap, unsigned i)
- int hwloc bitmap to ulongs (hwloc const bitmap t bitmap, unsigned nr, unsigned long *masks)
- int hwloc bitmap nr ulongs (hwloc const bitmap t bitmap)
- int hwloc_bitmap_isset (hwloc_const_bitmap_t bitmap, unsigned id)
- int hwloc_bitmap_iszero (hwloc_const_bitmap_t bitmap)
- int hwloc_bitmap_isfull (hwloc_const_bitmap_t bitmap)
- int hwloc bitmap first (hwloc const bitmap t bitmap)
- int hwloc_bitmap_next (hwloc_const_bitmap_t bitmap, int prev)
- int hwloc bitmap last (hwloc const bitmap t bitmap)
- int hwloc_bitmap_weight (hwloc_const_bitmap_t bitmap)

- int hwloc_bitmap_first_unset (hwloc_const_bitmap_t bitmap)
- int hwloc_bitmap_next_unset (hwloc_const_bitmap_t bitmap, int prev)
- int hwloc_bitmap_last_unset (hwloc_const_bitmap_t bitmap)
- int hwloc_bitmap_or (hwloc_bitmap_t res, hwloc_const_bitmap_t bitmap1, hwloc_const_bitmap2)
- int hwloc_bitmap_and (hwloc_bitmap_t res, hwloc_const_bitmap_t bitmap1, hwloc_const_bitmap2)
- int hwloc_bitmap_andnot (hwloc_bitmap_t res, hwloc_const_bitmap_t bitmap1, hwloc_const_bitmap_
 t bitmap2)
- int hwloc bitmap xor (hwloc bitmap t res, hwloc const bitmap t bitmap1, hwloc const bitmap t bitmap2)
- int hwloc bitmap not (hwloc bitmap t res, hwloc const bitmap t bitmap)
- int hwloc bitmap intersects (hwloc const bitmap t bitmap1, hwloc const bitmap t bitmap2)
- int hwloc_bitmap_isincluded (hwloc_const_bitmap_t sub_bitmap, hwloc_const_bitmap_t super_bitmap)
- int hwloc_bitmap_isequal (hwloc_const_bitmap_t bitmap1, hwloc_const_bitmap_t bitmap2)
- int hwloc bitmap compare first (hwloc const bitmap t bitmap t bitmap t bitmap t bitmap t)
- int hwloc_bitmap_compare (hwloc_const_bitmap_t bitmap_t bitmap_t bitmap_t bitmap_t)

22.24.1 Detailed Description

The hwloc_bitmap_t type represents a set of integers (positive or null). A bitmap may be of infinite size (all bits are set after some point). A bitmap may even be full if all bits are set.

Bitmaps are used by hwloc for sets of OS processors (which may actually be hardware threads) as by hwloc—cpuset_t (a typedef for hwloc_bitmap_t), or sets of NUMA memory nodes as hwloc_nodeset_t (also a typedef for hwloc_bitmap_t). Those are used for cpuset and nodeset fields in the hwloc_obj structure, see Object Sets (hwloc cpuset t and hwloc nodeset t).

Both CPU and node sets are always indexed by OS physical number. However users should usually not build CPU and node sets manually (e.g. with hww.number.to.

```
hwloc_obj_t core1 = ..., core2 = ...;
hwloc_bitmap_t set = hwloc_bitmap_alloc();
hwloc_bitmap_or(set, core1->cpuset, core2->cpuset);
hwloc_set_cpubind(topology, set, HWLOC_CPUBIND_THREAD);
hwloc_bitmap_free(set);
```

Note

Most functions below return an int that may be negative in case of error. The usual error case would be an internal failure to realloc/extend the storage of the bitmap (errno would be set to ${\tt ENOMEM}$).

Several examples of using the bitmap API are available under the doc/examples/ directory in the source tree. Regression tests such as tests/hwloc/hwloc bitmap*.c also make intensive use of this API.

22.24.2 Macro Definition Documentation

22.24.2.1 hwloc_bitmap_foreach_begin

Loop macro iterating on bitmap bitmap.

The loop must start with hwloc_bitmap_foreach_begin() and end with hwloc_bitmap_foreach_end() followed by a terminating ';'.

index is the loop variable; it should be an unsigned int. The first iteration will set index to the lowest index in the bitmap. Successive iterations will iterate through, in order, all remaining indexes set in the bitmap. To be specific: each iteration will return a value for index such that hwloc_bitmap_isset(bitmap, index) is true.

The assert prevents the loop from being infinite if the bitmap is infinitely set.

```
22.24.2.2 hwloc_bitmap_foreach_end
```

```
#define hwloc_bitmap_foreach_end( )
```

End of loop macro iterating on a bitmap.

Needs a terminating ';'.

See also

hwloc_bitmap_foreach_begin()

22.24.3 Typedef Documentation

```
22.24.3.1 hwloc_bitmap_t
```

```
typedef struct hwloc_bitmap_s* hwloc_bitmap_t
```

Set of bits represented as an opaque pointer to an internal bitmap.

```
22.24.3.2 hwloc_const_bitmap_t
```

```
typedef const struct hwloc_bitmap_s* hwloc_const_bitmap_t
```

a non-modifiable hwloc_bitmap_t

22.24.4 Function Documentation

22.24.4.1 hwloc_bitmap_allbut()

Fill the bitmap and clear the index id.

22.24.4.2 hwloc_bitmap_alloc()

Allocate a new empty bitmap.

Returns

A valid bitmap or NULL.

The bitmap should be freed by a corresponding call to hwloc_bitmap_free().

22.24.4.3 hwloc_bitmap_alloc_full()

Allocate a new full bitmap.

22.24.4.4 hwloc_bitmap_and()

And bitmaps bitmap1 and bitmap2 and store the result in bitmap res.

res can be the same as bitmap1 or bitmap2

22.24.4.5 hwloc_bitmap_andnot()

And bitmap bitmap1 and the negation of bitmap2 and store the result in bitmap res.

 $\verb"res" \textbf{ can be the same as} \verb"bitmap1" \textbf{ or} \verb"bitmap2"$

22.24.4.6 hwloc_bitmap_asprintf()

Stringify a bitmap into a newly allocated string.

Returns

-1 on error.

22.24.4.7 hwloc_bitmap_clr()

Remove index id from bitmap bitmap.

22.24.4.8 hwloc bitmap clr_range()

Remove indexes from begin to end in bitmap bitmap.

If end is -1, the range is infinite.

22.24.4.9 hwloc_bitmap_compare()

Compare bitmaps bitmap1 and bitmap2 in lexicographic order.

Lexicographic comparison of bitmaps, starting for their highest indexes. Compare last indexes first, then second, etc. The empty bitmap is considered lower than anything.

Returns

```
-1 if bitmap1 is considered smaller than bitmap2.

1 if bitmap1 is considered larger than bitmap2.

0 if bitmaps are equal (contrary to hwloc_bitmap_compare_first()).
```

For instance comparing binary bitmaps 0011 and 0110 returns -1 (hence 0011 is considered smaller than 0110). Comparing 00101 and 01010 returns -1 too.

Note

This is different from the non-existing hwloc_bitmap_compare_last() which would only compare the highest index of each bitmap.

22.24.4.10 hwloc_bitmap_compare_first()

Compare bitmaps bitmap1 and bitmap2 using their lowest index.

A bitmap is considered smaller if its least significant bit is smaller. The empty bitmap is considered higher than anything (because its least significant bit does not exist).

Returns

```
-1 if bitmap1 is considered smaller than bitmap2.

1 if bitmap1 is considered larger than bitmap2.
```

For instance comparing binary bitmaps 0011 and 0110 returns -1 (hence 0011 is considered smaller than 0110) because least significant bit of 0011 (0001) is smaller than least significant bit of 0110 (0010). Comparing 01001 and 00110 would also return -1 for the same reason.

Returns

0 if bitmaps are considered equal, even if they are not strictly equal. They just need to have the same least significant bit. For instance, comparing binary bitmaps 0010 and 0110 returns 0 because they have the same least significant bit.

22.24.4.11 hwloc_bitmap_copy()

Copy the contents of bitmap src into the already allocated bitmap dst.

22.24.4.12 hwloc_bitmap_dup()

Duplicate bitmap bitmap by allocating a new bitmap and copying bitmap contents.

If bitmap is NULL, NULL is returned.

22.24.4.13 hwloc_bitmap_fill()

Fill bitmap bitmap with all possible indexes (even if those objects don't exist or are otherwise unavailable)

22.24.4.14 hwloc_bitmap_first()

Compute the first index (least significant bit) in bitmap bitmap.

Returns

-1 if no index is set in bitmap.

22.24.4.15 hwloc_bitmap_first_unset()

Compute the first unset index (least significant bit) in bitmap bitmap.

Returns

-1 if no index is unset in bitmap.

22.24.4.16 hwloc_bitmap_free()

Free bitmap bitmap.

If bitmap is NULL, no operation is performed.

22.24.4.17 hwloc_bitmap_from_ith_ulong()

```
int hwloc_bitmap_from_ith_ulong (
          hwloc_bitmap_t bitmap,
          unsigned i,
          unsigned long mask )
```

Setup bitmap bitmap from unsigned long mask used as i -th subset.

22.24.4.18 hwloc_bitmap_from_ulong()

Setup bitmap bitmap from unsigned long mask.

22.24.4.19 hwloc_bitmap_from_ulongs()

```
int hwloc_bitmap_from_ulongs (
          hwloc_bitmap_t bitmap,
          unsigned nr,
          const unsigned long * masks )
```

Setup bitmap bitmap from unsigned longs masks used as first nr subsets.

22.24.4.20 hwloc_bitmap_intersects()

Test whether bitmaps bitmap1 and bitmap2 intersects.

Returns

1 if bitmaps intersect, 0 otherwise.

22.24.4.21 hwloc_bitmap_isequal()

Test whether bitmap bitmap1 is equal to bitmap bitmap2.

Returns

1 if bitmaps are equal, 0 otherwise.

22.24.4.22 hwloc_bitmap_isfull()

Test whether bitmap bitmap is completely full.

Returns

1 if bitmap is full, 0 otherwise.

Note

A full bitmap is always infinitely set.

22.24.4.23 hwloc_bitmap_isincluded()

Test whether bitmap sub_bitmap is part of bitmap super_bitmap.

Returns

1 if sub_bitmap is included in super_bitmap, 0 otherwise.

Note

The empty bitmap is considered included in any other bitmap.

22.24.4.24 hwloc_bitmap_isset()

Test whether index id is part of bitmap bitmap.

Returns

1 if the bit at index id is set in bitmap bitmap, 0 otherwise.

22.24.4.25 hwloc_bitmap_iszero()

Test whether bitmap bitmap is empty.

Returns

1 if bitmap is empty, 0 otherwise.

22.24.4.26 hwloc_bitmap_last()

Compute the last index (most significant bit) in bitmap bitmap.

Returns

-1 if no index is set in bitmap, or if bitmap is infinitely set.

22.24.4.27 hwloc_bitmap_last_unset()

Compute the last unset index (most significant bit) in bitmap bitmap.

Returns

-1 if no index is unset in bitmap, or if bitmap is infinitely set.

22.24.4.28 hwloc_bitmap_list_asprintf()

Stringify a bitmap into a newly allocated list string.

Returns

-1 on error.

22.24.4.29 hwloc_bitmap_list_snprintf()

Stringify a bitmap in the list format.

Lists are comma-separated indexes or ranges. Ranges are dash separated indexes. The last range may not have an ending indexes if the bitmap is infinitely set.

Up to buflen characters may be written in buffer buf.

If buflen is 0, buf may safely be NULL.

Returns

the number of character that were actually written if not truncating, or that would have been written (not including the ending 0).

22.24.4.30 hwloc_bitmap_list_sscanf()

Parse a list string and stores it in bitmap bitmap.

22.24.4.31 hwloc_bitmap_next()

Compute the next index in bitmap bitmap which is after index prev.

If prev is -1, the first index is returned.

Returns

-1 if no index with higher index is set in bitmap.

22.24.4.32 hwloc_bitmap_next_unset()

Compute the next unset index in bitmap bitmap which is after index prev.

If prev is -1, the first unset index is returned.

Returns

-1 if no index with higher index is unset in bitmap.

22.24.4.33 hwloc_bitmap_not()

Negate bitmap bitmap and store the result in bitmap res.

res can be the same as bitmap

22.24.4.34 hwloc_bitmap_nr_ulongs()

Return the number of unsigned longs required for storing bitmap bitmap entirely.

This is the number of contiguous unsigned longs from the very first bit of the bitmap (even if unset) up to the last set bit. This is useful for knowing the nr parameter to pass to hwloc_bitmap_to_ulongs() (or which calls to hwloc_bitmap_to_ith_ulong() are needed) to entirely convert a bitmap into multiple unsigned longs.

When called on the output of hwloc_topology_get_topology_cpuset(), the returned number is large enough for all cpusets of the topology.

Returns

-1 if bitmap is infinite.

22.24.4.35 hwloc_bitmap_only()

Empty the bitmap bitmap and add bit id.

22.24.4.36 hwloc_bitmap_or()

Or bitmaps bitmap1 and bitmap2 and store the result in bitmap res.

res can be the same as bitmap1 or bitmap2

22.24.4.37 hwloc_bitmap_set()

Add index id in bitmap bitmap.

22.24.4.38 hwloc_bitmap_set_ith_ulong()

```
int hwloc_bitmap_set_ith_ulong (
          hwloc_bitmap_t bitmap,
          unsigned i,
          unsigned long mask )
```

Replace i -th subset of bitmap bitmap with unsigned long mask.

22.24.4.39 hwloc_bitmap_set_range()

Add indexes from begin to end in bitmap bitmap.

If end is -1, the range is infinite.

22.24.4.40 hwloc_bitmap_singlify()

Keep a single index among those set in bitmap bitmap.

May be useful before binding so that the process does not have a chance of migrating between multiple logical CPUs in the original mask. Instead of running the task on any PU inside the given CPU set, the operating system scheduler will be forced to run it on a single of these PUs. It avoids a migration overhead and cache-line ping-pongs between PUs.

Note

This function is NOT meant to distribute multiple processes within a single CPU set. It always return the same single bit when called multiple times on the same input set. hwloc_distrib() may be used for generating CPU sets to distribute multiple tasks below a single multi-PU object.

This function cannot be applied to an object set directly. It should be applied to a copy (which may be obtained with hwloc_bitmap_dup()).

22.24.4.41 hwloc_bitmap_snprintf()

Stringify a bitmap.

Up to buflen characters may be written in buffer buf.

If buflen is 0, buf may safely be NULL.

Returns

the number of character that were actually written if not truncating, or that would have been written (not including the ending \0).

22.24.4.42 hwloc_bitmap_sscanf()

Parse a bitmap string and stores it in bitmap bitmap.

22.24.4.43 hwloc_bitmap_taskset_asprintf()

Stringify a bitmap into a newly allocated taskset-specific string.

Returns

-1 on error.

22.24.4.44 hwloc_bitmap_taskset_snprintf()

Stringify a bitmap in the taskset-specific format.

The taskset command manipulates bitmap strings that contain a single (possible very long) hexadecimal number starting with 0x.

Up to buflen characters may be written in buffer buf.

If buflen is 0, buf may safely be NULL.

Returns

the number of character that were actually written if not truncating, or that would have been written (not including the ending 0).

22.24.4.45 hwloc_bitmap_taskset_sscanf()

Parse a taskset-specific bitmap string and stores it in bitmap bitmap.

22.24.4.46 hwloc_bitmap_to_ith_ulong()

```
unsigned long hwloc_bitmap_to_ith_ulong ( \label{eq:hwloc_const_bitmap_t}  \mbox{$hw$loc_const_bitmap_t$ $bitmap,$}  \mbox{unsigned $i$ )}
```

Convert the i -th subset of bitmap bitmap into unsigned long mask.

22.24.4.47 hwloc_bitmap_to_ulong()

Convert the beginning part of bitmap bitmap into unsigned long mask.

22.24.4.48 hwloc_bitmap_to_ulongs()

Convert the first nr subsets of bitmap bitmap into the array of nr unsigned long masks.

nr may be determined earlier with hwloc_bitmap_nr_ulongs().

Returns

0

22.24.4.49 hwloc_bitmap_weight()

Compute the "weight" of bitmap bitmap (i.e., number of indexes that are in the bitmap).

Returns

the number of indexes that are in the bitmap.

-1 if bitmap is infinitely set.

22.24.4.50 hwloc_bitmap_xor()

Xor bitmaps bitmap1 and bitmap2 and store the result in bitmap res.

res can be the same as bitmap1 or bitmap2

22.24.4.51 hwloc_bitmap_zero()

Empty the bitmap bitmap.

22.25 Exporting Topologies to XML

Enumerations

• enum hwloc_topology_export_xml_flags_e { HWLOC_TOPOLOGY_EXPORT_XML_FLAG_V1 }

Functions

- int hwloc topology export xml (hwloc topology t topology, const char *xmlpath, unsigned long flags)
- int hwloc_topology_export_xmlbuffer (hwloc_topology_t topology, char **xmlbuffer, int *buflen, unsigned long flags)
- void hwloc_free_xmlbuffer (hwloc_topology_t topology, char *xmlbuffer)
- void hwloc_topology_set_userdata_export_callback (hwloc_topology_t topology, void(*export_cb)(void *reserved, hwloc_topology_t topology, hwloc_obj_t obj))
- int hwloc_export_obj_userdata (void *reserved, hwloc_topology_t topology, hwloc_obj_t obj, const char *name, const void *buffer, size t length)
- int hwloc_export_obj_userdata_base64 (void *reserved, hwloc_topology_t topology, hwloc_obj_t obj, const char *name, const void *buffer, size t length)
- void hwloc_topology_set_userdata_import_callback (hwloc_topology_t topology, void(*import_cb)(hwloc_
 topology_t topology, hwloc_obj_t obj, const char *name, const void *buffer, size_t length))

22.25.1 Detailed Description

22.25.2 Enumeration Type Documentation

22.25.2.1 hwloc_topology_export_xml_flags_e

 $\verb"enum hwloc_topology_export_xml_flags_e"$

Flags for exporting XML topologies.

Flags to be given as a OR'ed set to hwloc_topology_export_xml().

Enumerator

HWLOC_TOPOLOGY_EXPORT_XML_FLAG_V1	Export XML that is loadable by hwloc v1.x. However,
	the export may miss some details about the topology.

22.25.3 Function Documentation

22.25.3.1 hwloc_export_obj_userdata()

Export some object userdata to XML.

This function may only be called from within the export() callback passed to hwloc_topology_set_userdata_export ← _callback(). It may be invoked one of multiple times to export some userdata to XML. The buffer content of length length is stored with optional name name.

reserved, topology and obj must be the first three parameters that were given to the export callback.

Only printable characters may be exported to XML string attributes. If a non-printable character is passed in name or buffer, the function returns -1 with errno set to EINVAL.

22.25.3.2 hwloc_export_obj_userdata_base64()

Encode and export some object userdata to XML.

This function is similar to hwloc_export_obj_userdata() but it encodes the input buffer into printable characters before exporting. On import, decoding is automatically performed before the data is given to the import() callback if any.

This function may only be called from within the export() callback passed to hwloc_topology_set_userdata_export ← _callback().

The function does not take care of portability issues if the export may be reimported on a different architecture.

22.25.3.3 hwloc_free_xmlbuffer()

Free a buffer allocated by hwloc_topology_export_xmlbuffer()

22.25.3.4 hwloc_topology_export_xml()

```
int hwloc_topology_export_xml (
          hwloc_topology_t topology,
          const char * xmlpath,
          unsigned long flags )
```

Export the topology into an XML file.

This file may be loaded later through hwloc_topology_set_xml().

By default, the latest export format is used, which means older hwloc releases (e.g. v1.x) will not be able to import it. Exporting to v1.x specific XML format is possible using flag HWLOC_TOPOLOGY_EXPORT_XML_FLAG_V1 but it may miss some details about the topology. If there is any chance that the exported file may ever be imported back by a process using hwloc 1.x, one should consider detecting it at runtime and using the corresponding export format.

flags is a OR'ed set of hwloc_topology_export_xml_flags_e.

Returns

-1 if a failure occured.

Note

See also hwloc_topology_set_userdata_export_callback() for exporting application-specific object userdata. The topology-specific userdata pointer is ignored when exporting to XML.

Only printable characters may be exported to XML string attributes. Any other character, especially any non-ASCII character, will be silently dropped.

If name is "-", the XML output is sent to the standard output.

22.25.3.5 hwloc_topology_export_xmlbuffer()

Export the topology into a newly-allocated XML memory buffer.

xmlbuffer is allocated by the callee and should be freed with hwloc_free_xmlbuffer() later in the caller.

This memory buffer may be loaded later through https://www.topology_set_xmlbuffer().

By default, the latest export format is used, which means older hwloc releases (e.g. v1.x) will not be able to import it. Exporting to v1.x specific XML format is possible using flag HWLOC_TOPOLOGY_EXPORT_XML_FLAG_V1 but it may miss some details about the topology. If there is any chance that the exported buffer may ever be imported back by a process using hwloc 1.x, one should consider detecting it at runtime and using the corresponding export format.

The returned buffer ends with a \0 that is included in the returned length.

flags is a OR'ed set of hwloc_topology_export_xml_flags_e.

Returns

-1 if a failure occured.

Note

See also hwloc_topology_set_userdata_export_callback() for exporting application-specific object userdata. The topology-specific userdata pointer is ignored when exporting to XML.

Only printable characters may be exported to XML string attributes. Any other character, especially any non-ASCII character, will be silently dropped.

22.25.3.6 hwloc_topology_set_userdata_export_callback()

Set the application-specific callback for exporting object userdata.

The object userdata pointer is not exported to XML by default because hwloc does not know what it contains.

This function lets applications set export_cb to a callback function that converts this opaque userdata into an exportable string.

export_cb is invoked during XML export for each object whose userdata pointer is not NULL. The callback should use hwloc_export_obj_userdata() or hwloc_export_obj_userdata_base64() to actually export something to XML (possibly multiple times per object).

export_cb may be set to NULL if userdata should not be exported to XML.

Note

The topology-specific userdata pointer is ignored when exporting to XML.

22.25.3.7 hwloc_topology_set_userdata_import_callback()

Set the application-specific callback for importing userdata.

On XML import, userdata is ignored by default because hwloc does not know how to store it in memory.

This function lets applications set import_cb to a callback function that will get the XML-stored userdata and store it in the object as expected by the application.

import_cb is called during hwloc_topology_load() as many times as hwloc_export_obj_userdata() was called during export. The topology is not entirely setup yet. Object attributes are ready to consult, but links between objects are not.

import_cb may be NULL if userdata should be ignored during import.

Note

```
buffer contains length characters followed by a null byte ('\0').
```

This function should be called before hwloc_topology_load().

The topology-specific userdata pointer is ignored when importing from XML.

22.26 Exporting Topologies to Synthetic

Enumerations

enum hwloc_topology_export_synthetic_flags_e { HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FLAG_←
NO_EXTENDED_TYPES, HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FLAG_NO_ATTRS, HWLOC_←
TOPOLOGY_EXPORT_SYNTHETIC_FLAG_V1, HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FLAG_I←
GNORE_MEMORY }

Functions

• int hwloc_topology_export_synthetic (hwloc_topology_t topology, char *buffer, size_t buflen, unsigned long flags)

22.26.1 Detailed Description

22.26.2 Enumeration Type Documentation

22.26.2.1 hwloc_topology_export_synthetic_flags_e

enum hwloc_topology_export_synthetic_flags_e

Flags for exporting synthetic topologies.

Flags to be given as a OR'ed set to hwloc_topology_export_synthetic().

Enumerator

HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FL←→ AG_NO_EXTENDED_TYPES	Export extended types such as L2dcache as basic types such as Cache. This is required if loading the synthetic description with hwloc < 1.9.
HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FL↔ AG_NO_ATTRS	Do not export level attributes. Ignore level attributes such as memory/cache sizes or PU indexes. This is required if loading the synthetic description with hwloc < 1.10.
HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FL AG_V1	Export the memory hierarchy as expected in hwloc 1.x. Instead of attaching memory children to levels, export single NUMA node child as normal intermediate levels, when possible. This is required if loading the synthetic description with hwloc 1.x. However this may fail if some objects have multiple local NUMA nodes.
HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FL↔ AG_IGNORE_MEMORY	Do not export memory information. Only export the actual hierarchy of normal CPU-side objects and ignore where memory is attached. This is useful for when the hierarchy of CPUs is what really matters, but it behaves as if there was a single machine-wide NUMA node.

22.26.3 Function Documentation

22.26.3.1 hwloc_topology_export_synthetic()

Export the topology as a synthetic string.

At most buflen characters will be written in buffer, including the terminating $\0$.

This exported string may be given back to hwloc_topology_set_synthetic().

flags is a OR'ed set of hwloc_topology_export_synthetic_flags_e.

Returns

The number of characters that were written, not including the terminating $\verb+ 0.1$

-1 if the topology could not be exported, for instance if it is not symmetric.

Note

I/O and Misc children are ignored, the synthetic string only describes normal children.

A 1024-byte buffer should be large enough for exporting topologies in the vast majority of cases.

22.27 Retrieve distances between objects

Data Structures

· struct hwloc distances s

Enumerations

enum hwloc_distances_kind_e {
 HWLOC_DISTANCES_KIND_FROM_OS, HWLOC_DISTANCES_KIND_FROM_USER, HWLOC_DISTA
 NCES_KIND_MEANS_LATENCY, HWLOC_DISTANCES_KIND_MEANS_BANDWIDTH,
 HWLOC_DISTANCES_KIND_HETEROGENEOUS_TYPES }

Functions

- int hwloc_distances_get (hwloc_topology_t topology, unsigned *nr, struct hwloc_distances_s **distances, unsigned long kind, unsigned long flags)
- int hwloc_distances_get_by_depth (hwloc_topology_t topology, int depth, unsigned *nr, struct hwloc_
 distances s **distances, unsigned long kind, unsigned long flags)
- int hwloc_distances_get_by_type (hwloc_topology_t topology, hwloc_obj_type_t type, unsigned *nr, struct hwloc_distances_s **distances, unsigned long kind, unsigned long flags)
- int hwloc_distances_get_by_name (hwloc_topology_t topology, const char *name, unsigned *nr, struct hwloc_distances_s **distances, unsigned long flags)
- const char * hwloc_distances_get_name (hwloc_topology_t topology, struct hwloc_distances_s *distances)
- void hwloc distances release (hwloc topology t topology, struct hwloc distances s *distances)

22.27.1 Detailed Description

22.27.2 Enumeration Type Documentation

22.27.2.1 hwloc distances kind e

enum hwloc_distances_kind_e

Kinds of distance matrices.

The kind attribute of struct hwloc distances s is a OR'ed set of kinds.

A kind of format HWLOC_DISTANCES_KIND_FROM_* specifies where the distance information comes from, if known.

A kind of format HWLOC_DISTANCES_KIND_MEANS_* specifies whether values are latencies or bandwidths, if applicable.

Enumerator

HWLOC_DISTANCES_KIND_FROM_OS	These distances were obtained from the operating system or hardware.
HWLOC_DISTANCES_KIND_FROM_USER	These distances were provided by the user.
HWLOC_DISTANCES_KIND_MEANS_LATENCY	Distance values are similar to latencies between objects. Values are smaller for closer objects, hence minimal on the diagonal of the matrix (distance between an object and itself). It could also be the number of network hops between objects, etc.
HWLOC_DISTANCES_KIND_MEANS_BANDWIDTH	Distance values are similar to bandwidths between objects. Values are higher for closer objects, hence maximal on the diagonal of the matrix (distance between an object and itself). Such values are currently ignored for distance-based grouping.
HWLOC_DISTANCES_KIND_HETEROGENEOU↔ S_TYPES	This distances structure covers objects of different types.

22.27.3 Function Documentation

22.27.3.1 hwloc_distances_get()

Retrieve distance matrices.

Retrieve distance matrices from the topology into the distances array.

flags is currently unused, should be 0.

kind serves as a filter. If 0, all distance matrices are returned. If it contains some HWLOC_DISTANCES_KIND← _FROM_*, only distance matrices whose kind matches one of these are returned. If it contains some HWLOC_← DISTANCES_KIND_MEANS_*, only distance matrices whose kind matches one of these are returned.

On input, nr points to the number of distance matrices that may be stored in distances. On output, nr points to the number of distance matrices that were actually found, even if some of them couldn't be stored in distances. Distance matrices that couldn't be stored are ignored, but the function still returns success (0). The caller may find out by comparing the value pointed by nr before and after the function call.

Each distance matrix returned in the distances array should be released by the caller using hwloc_distances ← _release().

22.27.3.2 hwloc_distances_get_by_depth()

Retrieve distance matrices for object at a specific depth in the topology.

Identical to hwloc distances get() with the additional depth filter.

22.27.3.3 hwloc distances get by name()

```
int hwloc_distances_get_by_name (
    hwloc_topology_t topology,
    const char * name,
    unsigned * nr,
    struct hwloc_distances_s ** distances,
    unsigned long flags )
```

Retrieve a distance matrix with the given name.

Usually only one distances structure may match a given name.

22.27.3.4 hwloc_distances_get_by_type()

```
int hwloc_distances_get_by_type (
          hwloc_topology_t topology,
          hwloc_obj_type_t type,
          unsigned * nr,
          struct hwloc_distances_s ** distances,
          unsigned long kind,
          unsigned long flags )
```

Retrieve distance matrices for object of a specific type.

Identical to hwloc_distances_get() with the additional type filter.

22.27.3.5 hwloc_distances_get_name()

Get a description of what a distances structure contains.

For instance "NUMALatency" for hardware-provided NUMA distances (ACPI SLIT), or NULL if unknown.

22.27.3.6 hwloc_distances_release()

Release a distance matrix structure previously returned by hwloc_distances_get().

Note

This function is not required if the structure is removed with hww.nction.org/ncti

22.28 Helpers for consulting distance matrices

Functions

- static int hwloc distances obj index (struct hwloc distances s *distances, hwloc obj t obj)
- static int hwloc_distances_obj_pair_values (struct hwloc_distances_s *distances, hwloc_obj_t obj1, hwloc—obj_t obj2, hwloc_uint64_t *value1to2, hwloc_uint64_t *value2to1)

22.28.1 Detailed Description

22.28.2 Function Documentation

22.28.2.1 hwloc_distances_obj_index()

Find the index of an object in a distances structure.

Returns

-1 if object obj is not involved in structure distances.

22.28.2.2 hwloc_distances_obj_pair_values()

Find the values between two objects in a distance matrices.

The distance from obj1 to obj2 is stored in the value pointed by value1to2 and reciprocally.

Returns

-1 if object obj1 or obj2 is not involved in structure distances.

22.29 Add or remove distances between objects

Enumerations

enum hwloc_distances_add_flag_e { HWLOC_DISTANCES_ADD_FLAG_GROUP, HWLOC_DISTANCE ← S_ADD_FLAG_GROUP_INACCURATE }

Functions

- int hwloc_distances_add (hwloc_topology_t topology, unsigned nbobjs, hwloc_obj_t *objs, hwloc_uint64_t *values, unsigned long kind, unsigned long flags)
- int hwloc_distances_remove (hwloc_topology_t topology)
- int hwloc_distances_remove_by_depth (hwloc_topology_t topology, int depth)
- static int hwloc_distances_remove_by_type (hwloc_topology_t topology, hwloc_obj_type_t type)
- int hwloc_distances_release_remove (hwloc_topology_t topology, struct hwloc_distances_s *distances)

22.29.1 Detailed Description

22.29.2 Enumeration Type Documentation

22.29.2.1 hwloc_distances_add_flag_e

enum hwloc_distances_add_flag_e

Flags for adding a new distances to a topology.

Enumerator

HWLOC_DISTANCES_ADD_FLAG_GROUP	Try to group objects based on the newly provided
	distance information.
HWLOC_DISTANCES_ADD_FLAG_GROUP_INA↔	If grouping, consider the distance values as
CCURATE	inaccurate and relax the comparisons during the
	grouping algorithms. The actual accuracy may be
	modified through the
	HWLOC_GROUPING_ACCURACY environment
	variable (see Environment Variables).

22.29.3 Function Documentation

22.29.3.1 hwloc_distances_add()

```
unsigned nbobjs,
hwloc_obj_t * objs,
hwloc_uint64_t * values,
unsigned long kind,
unsigned long flags)
```

Provide a new distance matrix.

Provide the matrix of distances between a set of objects given by nbobjs and the objs array. nbobjs must be at least 2. The distances are stored as a one-dimension array in values. The distance from object i to object j is in slot i*nbobjs+j.

kind specifies the kind of distance as a OR'ed set of hwloc_distances_kind_e. Kind HWLOC_DISTANCES_KI⇔ ND_HETEROGENEOUS_TYPES will be automatically added if objects of different types are given.

flags configures the behavior of the function using an optional OR'ed set of hwloc_distances_add_flag_e.

22.29.3.2 hwloc_distances_release_remove()

Release and remove the given distance matrice from the topology.

This function includes a call to hwloc_distances_release().

22.29.3.3 hwloc_distances_remove()

Remove all distance matrices from a topology.

Remove all distance matrices, either provided by the user or gathered through the OS.

If these distances were used to group objects, these additional Group objects are not removed from the topology.

22.29.3.4 hwloc_distances_remove_by_depth()

Remove distance matrices for objects at a specific depth in the topology.

Identical to hwloc_distances_remove() but only applies to one level of the topology.

22.29.3.5 hwloc_distances_remove_by_type()

Remove distance matrices for objects of a specific type in the topology.

Identical to hwloc_distances_remove() but only applies to one level of the topology.

22.30 Linux-specific helpers

Functions

- int hwloc_linux_set_tid_cpubind (hwloc_topology_t topology, pid_t tid, hwloc_const_cpuset_t set)
- int hwloc_linux_get_tid_cpubind (hwloc_topology_t topology, pid_t tid, hwloc_cpuset_t set)
- int hwloc_linux_get_tid_last_cpu_location (hwloc_topology_t topology, pid_t tid, hwloc_bitmap_t set)
- int hwloc_linux_read_path_as_cpumask (const char *path, hwloc_bitmap_t set)

22.30.1 Detailed Description

This includes helpers for manipulating Linux kernel cpumap files, and hwloc equivalents of the Linux sched_← setaffinity and sched_getaffinity system calls.

22.30.2 Function Documentation

22.30.2.1 hwloc_linux_get_tid_cpubind()

Get the current binding of thread tid.

The behavior is exactly the same as the Linux sched_getaffinity system call, but uses a hwloc cpuset.

Note

This is equivalent to calling hwloc_get_proc_cpubind() with HWLOC_CPUBIND_THREAD as flags.

22.30.2.2 hwloc_linux_get_tid_last_cpu_location()

Get the last physical CPU where thread tid ran.

Note

This is equivalent to calling hwloc_get_proc_last_cpu_location() with HWLOC_CPUBIND_THREAD as flags.

22.30.2.3 hwloc_linux_read_path_as_cpumask()

Convert a linux kernel cpumask file path into a hwloc bitmap set.

Might be used when reading CPU set from sysfs attributes such as topology and caches for processors, or local ← _cpus for devices.

Note

This function ignores the HWLOC_FSROOT environment variable.

22.30.2.4 hwloc_linux_set_tid_cpubind()

```
int hwloc_linux_set_tid_cpubind (
                hwloc_topology_t topology,
                pid_t tid,
                hwloc_const_cpuset_t set )
```

Bind a thread tid on cpus given in cpuset set.

The behavior is exactly the same as the Linux sched_setaffinity system call, but uses a hwloc cpuset.

Note

This is equivalent to calling hwloc set proc cpubind() with HWLOC CPUBIND THREAD as flags.

22.31 Interoperability with Linux libnuma unsigned long masks

Functions

- static int hwloc_cpuset_to_linux_libnuma_ulongs (hwloc_topology_t topology, hwloc_const_cpuset_t cpuset, unsigned long *mask, unsigned long *maxnode)
- static int hwloc_nodeset_to_linux_libnuma_ulongs (hwloc_topology_t topology, hwloc_const_nodeset_
 t nodeset, unsigned long *mask, unsigned long *maxnode)
- static int hwloc_cpuset_from_linux_libnuma_ulongs (hwloc_topology_t topology, hwloc_cpuset_t cpuset, const unsigned long *mask, unsigned long maxnode)
- static int hwloc_nodeset_from_linux_libnuma_ulongs (hwloc_topology_t topology, hwloc_nodeset_t nodeset, const unsigned long *mask, unsigned long maxnode)

22.31.1 Detailed Description

This interface helps converting between Linux libnuma unsigned long masks and hwloc cpusets and nodesets.

Note

Topology topology must match the current machine.

The behavior of libnuma is undefined if the kernel is not NUMA-aware. (when CONFIG_NUMA is not set in the kernel configuration). This helper and libnuma may thus not be strictly compatible in this case, which may be detected by checking whether numa available() returns -1.

22.31.2 Function Documentation

22.31.2.1 hwloc_cpuset_from_linux_libnuma_ulongs()

```
static int hwloc_cpuset_from_linux_libnuma_ulongs (
    hwloc_topology_t topology,
    hwloc_cpuset_t cpuset,
    const unsigned long * mask,
    unsigned long maxnode ) [inline], [static]
```

Convert the array of unsigned long mask into hwloc CPU set.

mask is a array of unsigned long that will be read. maxnode contains the maximal node number that may be read in mask.

This function may be used after calling get_mempolicy or any other function that takes an array of unsigned long as output parameter (and possibly a maximal node number as input parameter).

22.31.2.2 hwloc_cpuset_to_linux_libnuma_ulongs()

Convert hwloc CPU set cpuset into the array of unsigned long mask.

mask is the array of unsigned long that will be filled. maxnode contains the maximal node number that may be stored in mask. maxnode will be set to the maximal node number that was found, plus one.

This function may be used before calling set_mempolicy, mbind, migrate_pages or any other function that takes an array of unsigned long and a maximal node number as input parameter.

22.31.2.3 hwloc_nodeset_from_linux_libnuma_ulongs()

Convert the array of unsigned long mask into hwloc NUMA node set.

 ${\tt mask}$ is a array of unsigned long that will be read. ${\tt maxnode}$ contains the maximal node number that may be read in ${\tt mask}$.

This function may be used after calling get_mempolicy or any other function that takes an array of unsigned long as output parameter (and possibly a maximal node number as input parameter).

22.31.2.4 hwloc_nodeset_to_linux_libnuma_ulongs()

Convert hwloc NUMA node set nodeset into the array of unsigned long mask.

mask is the array of unsigned long that will be filled. maxnode contains the maximal node number that may be stored in mask. maxnode will be set to the maximal node number that was found, plus one.

This function may be used before calling set_mempolicy, mbind, migrate_pages or any other function that takes an array of unsigned long and a maximal node number as input parameter.

22.32 Interoperability with Linux libnuma bitmask

Functions

- static struct bitmask * hwloc_nodeset_to_linux_libnuma_bitmask (hwloc_topology_t topology, hwloc_const
 —nodeset_t nodeset)
- static int hwloc_cpuset_from_linux_libnuma_bitmask (hwloc_topology_t topology, hwloc_cpuset_t cpuset, const struct bitmask *bitmask)
- static int hwloc_nodeset_from_linux_libnuma_bitmask (hwloc_topology_t topology, hwloc_nodeset_t nodeset, const struct bitmask *bitmask)

22.32.1 Detailed Description

This interface helps converting between Linux libnuma bitmasks and hwloc cpusets and nodesets.

Note

Topology topology must match the current machine.

The behavior of libnuma is undefined if the kernel is not NUMA-aware. (when CONFIG_NUMA is not set in the kernel configuration). This helper and libnuma may thus not be strictly compatible in this case, which may be detected by checking whether numa_available() returns -1.

22.32.2 Function Documentation

22.32.2.1 hwloc_cpuset_from_linux_libnuma_bitmask()

Convert libnuma bitmask bitmask into hwloc CPU set cpuset.

This function may be used after calling many numa_functions that use a struct bitmask as an output parameter.

22.32.2.2 hwloc_cpuset_to_linux_libnuma_bitmask()

Convert hwloc CPU set cpuset into the returned libnuma bitmask.

The returned bitmask should later be freed with numa_bitmask_free.

This function may be used before calling many numa_functions that use a struct bitmask as an input parameter.

Returns

newly allocated struct bitmask.

22.32.2.3 hwloc_nodeset_from_linux_libnuma_bitmask()

Convert libnuma bitmask bitmask into hwloc NUMA node set nodeset.

This function may be used after calling many numa_ functions that use a struct bitmask as an output parameter.

22.32.2.4 hwloc_nodeset_to_linux_libnuma_bitmask()

Convert hwloc NUMA node set nodeset into the returned libnuma bitmask.

The returned bitmask should later be freed with numa_bitmask_free.

This function may be used before calling many numa_functions that use a struct bitmask as an input parameter.

Returns

newly allocated struct bitmask.

22.33 Interoperability with glibc sched affinity

Functions

- static int hwloc_cpuset_to_glibc_sched_affinity (hwloc_topology_t topology, hwloc_const_cpuset_t hwlocset, cpu set t *schedset, size t schedsetsize)
- static int hwloc_cpuset_from_glibc_sched_affinity (hwloc_topology_t topology, hwloc_cpuset_t hwlocset, const cpu_set_t *schedset, size_t schedsetsize)

22.33.1 Detailed Description

This interface offers ways to convert between hwloc cpusets and glibc cpusets such as those manipulated by sched_getaffinity() or pthread_attr_setaffinity_np().

Note

Topology topology must match the current machine.

22.33.2 Function Documentation

22.33.2.1 hwloc_cpuset_from_glibc_sched_affinity()

Convert glibc sched affinity CPU set schedset into hwloc CPU set.

This function may be used before calling sched_setaffinity or any other function that takes a cpu_set_t as input parameter.

schedsetsize should be sizeof(cpu_set_t) unless schedset was dynamically allocated with CPU_ALLOC

22.33.2.2 hwloc_cpuset_to_glibc_sched_affinity()

Convert hwloc CPU set toposet into glibc sched affinity CPU set schedset.

This function may be used before calling sched_setaffinity or any other function that takes a cpu_set_t as input parameter.

schedsetsize should be sizeof(cpu_set_t) unless schedset was dynamically allocated with CPU_ALLOC

22.34 Interoperability with OpenCL

Functions

- static int hwloc_opencl_get_device_pci_busid (cl_device_id device, unsigned *domain, unsigned *bus, unsigned *dev, unsigned *func)
- static int hwloc_opencl_get_device_cpuset (hwloc_topology_t topology, cl_device_id device, hwloc_cpuset
 t set)
- static hwloc_obj_t hwloc_opencl_get_device_osdev_by_index (hwloc_topology_t topology, unsigned platform index, unsigned device index)
- static hwloc_obj_t hwloc_opencl_get_device_osdev (hwloc_topology_t topology, cl_device_id device)

22.34.1 Detailed Description

This interface offers ways to retrieve topology information about OpenCL devices.

Only AMD and NVIDIA OpenCL implementations currently offer useful locality information about their devices.

22.34.2 Function Documentation

22.34.2.1 hwloc opencl get device cpuset()

Get the CPU set of logical processors that are physically close to OpenCL device device.

Return the CPU set describing the locality of the OpenCL device device.

Topology topology and device device must match the local machine. I/O devices detection and the OpenCL component are not needed in the topology.

The function only returns the locality of the device. If more information about the device is needed, OS objects should be used instead, see hwloc_opencl_get_device_osdev, and hwloc_opencl_get_device_osdev. If more information about the device is needed, OS objects should be used instead, see hwloc_opencl_get_device_osdev. If more information about the device is needed, OS objects should be used instead, see hwloc_opencl_get_device_osdev. If more information about the device is needed, OS objects should be used instead, see hwloc_opencl_get_device_osdev. If more information about the device is needed, OS objects should be used instead, see hwloc_opencl_get_device_osdev. If more information about the device is needed, or see hwloc_opencl_get_device_osdev. If more information about the device is needed, or see hwloc_opencl_get_device_osdev. If more information about the device is needed.

This function is currently only implemented in a meaningful way for Linux with the AMD or NVIDIA OpenCL implementation; other systems will simply get a full cpuset.

22.34.2.2 hwloc_opencl_get_device_osdev()

Get the hwloc OS device object corresponding to OpenCL device deviceX.

Use OpenCL device attributes to find the corresponding hwloc OS device object. Return NULL if there is none or if useful attributes are not available.

This function currently only works on AMD and NVIDIA OpenCL devices that support relevant OpenCL extensions. hwloc_opencl_get_device_osdev_by_index() should be preferred whenever possible, i.e. when platform and device index are known.

Topology topology and device device must match the local machine. I/O devices detection and the OpenCL component must be enabled in the topology. If not, the locality of the object may still be found using hwloc_opencl equation device cpuset().

Note

This function cannot work if PCI devices are filtered out.

The corresponding hwloc PCI device may be found by looking at the result parent pointer (unless PCI devices are filtered out).

22.34.2.3 hwloc_opencl_get_device_osdev_by_index()

Get the hwloc OS device object corresponding to the OpenCL device for the given indexes.

Return the OS device object describing the OpenCL device whose platform index is platform_index, and whose device index within this platform if device_index. Return NULL if there is none.

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection and the OpenCL component must be enabled in the topology.

Note

The corresponding PCI device object can be obtained by looking at the OS device parent object (unless PCI devices are filtered out).

22.34.2.4 hwloc_opencl_get_device_pci_busid()

Return the domain, bus and device IDs of the OpenCL device device.

Device device must match the local machine.

22.35 Interoperability with the CUDA Driver API

Functions

- static int hwloc_cuda_get_device_pci_ids (hwloc_topology_t topology, CUdevice cudevice, int *domain, int *bus, int *dev)
- static int hwloc_cuda_get_device_cpuset (hwloc_topology_t topology, CUdevice cudevice, hwloc_cpuset_t set)
- static hwloc obj t hwloc cuda get device pcidev (hwloc topology t topology, CUdevice cudevice)
- static hwloc_obj_t hwloc_cuda_get_device_osdev (hwloc_topology_t topology, CUdevice cudevice)
- static hwloc obj t hwloc cuda get device osdev by index (hwloc topology t topology, unsigned idx)

22.35.1 Detailed Description

This interface offers ways to retrieve topology information about CUDA devices when using the CUDA Driver API.

22.35.2 Function Documentation

22.35.2.1 hwloc_cuda_get_device_cpuset()

Get the CPU set of logical processors that are physically close to device cudevice.

Return the CPU set describing the locality of the CUDA device cudevice.

Topology topology and device cudevice must match the local machine. I/O devices detection and the CUDA component are not needed in the topology.

The function only returns the locality of the device. If more information about the device is needed, OS objects should be used instead, see hwloc cuda get device osdev() and hwloc cuda get device osdev by index().

This function is currently only implemented in a meaningful way for Linux; other systems will simply get a full cpuset.

22.35.2.2 hwloc_cuda_get_device_osdev()

Get the hwloc OS device object corresponding to CUDA device cudevice.

Return the hwloc OS device object that describes the given CUDA device <code>cudevice</code>. Return NULL if there is none.

Topology topology and device cudevice must match the local machine. I/O devices detection and the CUDA component must be enabled in the topology. If not, the locality of the object may still be found using $hwloc_cuda \leftarrow get_device_cpuset()$.

Note

This function cannot work if PCI devices are filtered out.

The corresponding hwloc PCI device may be found by looking at the result parent pointer (unless PCI devices are filtered out).

22.35.2.3 hwloc_cuda_get_device_osdev_by_index()

Get the hwloc OS device object corresponding to the CUDA device whose index is idx.

Return the OS device object describing the CUDA device whose index is idx. Return NULL if there is none.

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection and the CUDA component must be enabled in the topology.

Note

The corresponding PCI device object can be obtained by looking at the OS device parent object (unless PCI devices are filtered out).

This function is identical to hwloc cudart get device osdev by index().

22.35.2.4 hwloc_cuda_get_device_pci_ids()

```
static int hwloc_cuda_get_device_pci_ids (
    hwloc_topology_t topology,
    CUdevice cudevice,
    int * domain,
    int * bus,
    int * dev ) [inline], [static]
```

Return the domain, bus and device IDs of the CUDA device cudevice.

Device cudevice must match the local machine.

22.35.2.5 hwloc_cuda_get_device_pcidev()

Get the hwloc PCI device object corresponding to the CUDA device cudevice.

Return the PCI device object describing the CUDA device cudevice. Return NULL if there is none.

Topology topology and device <code>cudevice</code> must match the local machine. I/O devices detection must be enabled in topology topology. The CUDA component is not needed in the topology.

22.36 Interoperability with the CUDA Runtime API

Functions

- static int hwloc_cudart_get_device_pci_ids (hwloc_topology_t topology, int idx, int *domain, int *bus, int *dev)
- static int hwloc cudart get device cpuset (hwloc topology t topology, int idx, hwloc cpuset t set)
- static hwloc_obj_t hwloc_cudart_get_device_pcidev (hwloc_topology_t topology, int idx)
- · static hwloc obj t hwloc cudart get device osdev by index (hwloc topology t topology, unsigned idx)

22.36.1 Detailed Description

This interface offers ways to retrieve topology information about CUDA devices when using the CUDA Runtime API.

22.36.2 Function Documentation

22.36.2.1 hwloc_cudart_get_device_cpuset()

Get the CPU set of logical processors that are physically close to device idx.

Return the CPU set describing the locality of the CUDA device whose index is idx.

Topology topology and device idx must match the local machine. I/O devices detection and the CUDA component are not needed in the topology.

This function is currently only implemented in a meaningful way for Linux; other systems will simply get a full cpuset.

22.36.2.2 hwloc_cudart_get_device_osdev_by_index()

Get the hwloc OS device object corresponding to the CUDA device whose index is $\mathtt{idx}.$

Return the OS device object describing the CUDA device whose index is idx. Return NULL if there is none.

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection and the CUDA component must be enabled in the topology. If not, the locality of the object may still be found using hwloc_cudart_get_device_cpuset().

Note

The corresponding PCI device object can be obtained by looking at the OS device parent object (unless PCI devices are filtered out).

This function is identical to hwloc_cuda_get_device_osdev_by_index().

22.36.2.3 hwloc_cudart_get_device_pci_ids()

```
static int hwloc_cudart_get_device_pci_ids (
    hwloc_topology_t topology,
    int idx,
    int * domain,
    int * bus,
    int * dev ) [inline], [static]
```

Return the domain, bus and device IDs of the CUDA device whose index is idx.

Device index idx must match the local machine.

22.36.2.4 hwloc_cudart_get_device_pcidev()

Get the hwloc PCI device object corresponding to the CUDA device whose index is idx.

Return the PCI device object describing the CUDA device whose index is idx. Return NULL if there is none.

Topology topology and device idx must match the local machine. I/O devices detection must be enabled in topology topology. The CUDA component is not needed in the topology.

22.37 Interoperability with the NVIDIA Management Library

Functions

- static int hwloc_nvml_get_device_cpuset (hwloc_topology_t topology, nvmlDevice_t device, hwloc_cpuset_t set)
- static hwloc_obj_t hwloc_nvml_get_device_osdev_by_index (hwloc_topology_t topology, unsigned idx)
- static hwloc_obj_t hwloc_nvml_get_device_osdev (hwloc_topology_t topology, nvmlDevice_t device)

22.37.1 Detailed Description

This interface offers ways to retrieve topology information about devices managed by the NVIDIA Management Library (NVML).

22.37.2 Function Documentation

22.37.2.1 hwloc_nvml_get_device_cpuset()

Get the CPU set of logical processors that are physically close to NVML device device.

Return the CPU set describing the locality of the NVML device ${\tt device}$.

Topology topology and device device must match the local machine. I/O devices detection and the NVML component are not needed in the topology.

The function only returns the locality of the device. If more information about the device is needed, OS objects should be used instead, see hwloc_nvml_get_device_osdev () and hwloc_nvml_get_device_osdev_by_index ().

This function is currently only implemented in a meaningful way for Linux; other systems will simply get a full cpuset.

22.37.2.2 hwloc_nvml_get_device_osdev()

Get the hwloc OS device object corresponding to NVML device device.

Return the hwloc OS device object that describes the given NVML device device. Return NULL if there is none.

Topology topology and device device must match the local machine. I/O devices detection and the NVML component must be enabled in the topology. If not, the locality of the object may still be found using hwloc_nvml—get_device_cpuset().

Note

The corresponding hwloc PCI device may be found by looking at the result parent pointer (unless PCI devices are filtered out).

22.37.2.3 hwloc_nvml_get_device_osdev_by_index()

Get the hwloc OS device object corresponding to the NVML device whose index is idx.

Return the OS device object describing the NVML device whose index is idx. Returns NULL if there is none.

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection and the NVML component must be enabled in the topology.

Note

The corresponding PCI device object can be obtained by looking at the OS device parent object (unless PCI devices are filtered out).

22.38 Interoperability with OpenGL displays

Functions

- static hwloc_obj_t hwloc_gl_get_display_osdev_by_port_device (hwloc_topology_t topology, unsigned port, unsigned device)
- static hwloc_obj_t hwloc_gl_get_display_osdev_by_name (hwloc_topology_t topology, const char *name)
- static int hwloc_gl_get_display_by_osdev (hwloc_topology_t topology, hwloc_obj_t osdev, unsigned *port, unsigned *device)

22.38.1 Detailed Description

This interface offers ways to retrieve topology information about OpenGL displays.

Only the NVIDIA display locality information is currently available, using the NV-CONTROL X11 extension and the NVCtrl library.

22.38.2 Function Documentation

22.38.2.1 hwloc_gl_get_display_by_osdev()

Get the OpenGL display port and device corresponding to the given hwloc OS object.

Return the OpenGL display port (server) in port and device (screen) in screen that correspond to the given hwloc OS device object. Return -1 if there is none.

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection and the GL component must be enabled in the topology.

22.38.2.2 hwloc_gl_get_display_osdev_by_name()

Get the hwloc OS device object corresponding to the OpenGL display given by name.

Return the OS device object describing the OpenGL display whose name is name, built as ":port.device" such as ":0.0". Return NULL if there is none.

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection and the GL component must be enabled in the topology.

Note

The corresponding PCI device object can be obtained by looking at the OS device parent object (unless PCI devices are filtered out).

22.38.2.3 hwloc_gl_get_display_osdev_by_port_device()

```
static hwloc_obj_t hwloc_gl_get_display_osdev_by_port_device (
          hwloc_topology_t topology,
          unsigned port,
          unsigned device ) [inline], [static]
```

Get the hwloc OS device object corresponding to the OpenGL display given by port and device index.

Return the OS device object describing the OpenGL display whose port (server) is port and device (screen) is device. Return NULL if there is none.

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection and the GL component must be enabled in the topology.

Note

The corresponding PCI device object can be obtained by looking at the OS device parent object (unless PCI devices are filtered out).

22.39 Interoperability with Intel Xeon Phi (MIC)

Functions

- static int hwloc_intel_mic_get_device_cpuset (hwloc_topology_t topology, int idx, hwloc_cpuset_t set)
- static hwloc_obj_t hwloc_intel_mic_get_device_osdev_by_index (hwloc_topology_t topology, unsigned idx)

22.39.1 Detailed Description

This interface offers ways to retrieve topology information about Intel Xeon Phi (MIC) devices.

22.39.2 Function Documentation

22.39.2.1 hwloc intel mic get device cpuset()

Get the CPU set of logical processors that are physically close to MIC device whose index is idx.

Return the CPU set describing the locality of the MIC device whose index is idx.

Topology topology and device index idx must match the local machine. I/O devices detection is not needed in the topology.

The function only returns the locality of the device. If more information about the device is needed, OS objects should be used instead, see <a href="https://hww.needed.com/hww.needed.co

This function is currently only implemented in a meaningful way for Linux; other systems will simply get a full cpuset.

22.39.2.2 hwloc_intel_mic_get_device_osdev_by_index()

Get the hwloc OS device object corresponding to the MIC device for the given index.

Return the OS device object describing the MIC device whose index is idx. Return NULL if there is none.

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection must be enabled in the topology.

Note

The corresponding PCI device object can be obtained by looking at the OS device parent object.

22.40 Interoperability with OpenFabrics

Functions

- static int hwloc_ibv_get_device_cpuset (hwloc_topology_t topology, struct ibv_device *ibdev, hwloc_cpuset ← t set)
- static hwloc_obj_t hwloc_ibv_get_device_osdev_by_name (hwloc_topology_t topology, const char *ibname)
- static hwloc_obj_t hwloc_ibv_get_device_osdev (hwloc_topology_t topology, struct ibv_device *ibdev)

22.40.1 Detailed Description

This interface offers ways to retrieve topology information about OpenFabrics devices (InfiniBand, Omni-Path, us⇔ NIC, etc).

22.40.2 Function Documentation

22.40.2.1 hwloc ibv get device cpuset()

Get the CPU set of logical processors that are physically close to device ibdev.

Return the CPU set describing the locality of the OpenFabrics device ibdev (InfiniBand, etc).

Topology topology and device ibdev must match the local machine. I/O devices detection is not needed in the topology.

The function only returns the locality of the device. If more information about the device is needed, OS objects should be used instead, see https://www.needed.com/bv_get_device_osdev, and <a href="https://www.needed.com/html/returns-needed-ne

This function is currently only implemented in a meaningful way for Linux; other systems will simply get a full cpuset.

22.40.2.2 hwloc ibv get device osdev()

Get the hwloc OS device object corresponding to the OpenFabrics device ibdev.

Return the OS device object describing the OpenFabrics device ibdev (InfiniBand, etc). Returns NULL if there is none.

Topology topology and device ibdev must match the local machine. I/O devices detection must be enabled in the topology. If not, the locality of the object may still be found using hwloc_ibv_get_device_cpuset().

Note

The corresponding PCI device object can be obtained by looking at the OS device parent object.

22.40.2.3 hwloc_ibv_get_device_osdev_by_name()

Get the hwloc OS device object corresponding to the OpenFabrics device named ibname.

Return the OS device object describing the OpenFabrics device (InfiniBand, Omni-Path, usNIC, etc) whose name is ibname (mlx5_0, hfi1_0, usnic_0, qib0, etc). Returns NULL if there is none. The name ibname is usually obtained from ibv_get_device_name().

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection must be enabled in the topology.

Note

The corresponding PCI device object can be obtained by looking at the OS device parent object.

22.41 Topology differences

Data Structures

- union hwloc_topology_diff_obj_attr_u
- union hwloc_topology_diff_u

Typedefs

- typedef enum hwloc_topology_diff_obj_attr_type_e hwloc_topology_diff_obj_attr_type_t
- typedef enum hwloc_topology_diff_type_e hwloc_topology_diff_type_t
- typedef union hwloc_topology_diff_u * hwloc_topology_diff_t

Enumerations

- enum hwloc_topology_diff_obj_attr_type_e { HWLOC_TOPOLOGY_DIFF_OBJ_ATTR_SIZE, HWLOC_T
 OPOLOGY_DIFF_OBJ_ATTR_NAME, HWLOC_TOPOLOGY_DIFF_OBJ_ATTR_INFO }
- enum hwloc_topology_diff_type_e { HWLOC_TOPOLOGY_DIFF_OBJ_ATTR, HWLOC_TOPOLOGY_DIF←
 F TOO COMPLEX }
- enum hwloc_topology_diff_apply_flags_e { HWLOC_TOPOLOGY_DIFF_APPLY_REVERSE }

Functions

- int hwloc_topology_diff_build (hwloc_topology_t topology, hwloc_topology_t newtopology, unsigned long flags, hwloc_topology_diff_t *diff)
- int hwloc_topology_diff_apply (hwloc_topology_t topology, hwloc_topology_diff_t diff, unsigned long flags)
- int hwloc_topology_diff_destroy (hwloc_topology_diff_t diff)
- int hwloc_topology_diff_load_xml (const char *xmlpath, hwloc_topology_diff_t *diff, char **refname)
- int hwloc_topology_diff_export_xml (hwloc_topology_diff_t diff, const char *refname, const char *xmlpath)
- int hwloc_topology_diff_load_xmlbuffer (const char *xmlbuffer, int buflen, hwloc_topology_diff_t *diff, char **refname)
- int hwloc_topology_diff_export_xmlbuffer (hwloc_topology_diff_t diff, const char *refname, char **xmlbuffer, int *buflen)

22.41.1 Detailed Description

Applications that manipulate many similar topologies, for instance one for each node of a homogeneous cluster, may want to compress topologies to reduce the memory footprint.

This file offers a way to manipulate the difference between topologies and export/import it to/from XML. Compression may therefore be achieved by storing one topology entirely while the others are only described by their differences with the former. The actual topology can be reconstructed when actually needed by applying the precomputed difference to the reference topology.

This interface targets very similar nodes. Only very simple differences between topologies are actually supported, for instance a change in the memory size, the name of the object, or some info attribute. More complex differences such as adding or removing objects cannot be represented in the difference structures and therefore return errors. Differences between object sets or topology-wide allowed sets, cannot be represented either.

It means that there is no need to apply the difference when looking at the tree organization (how many levels, how many objects per level, what kind of objects, CPU and node sets, etc) and when binding to objects. However the difference must be applied when looking at object attributes such as the name, the memory size or info attributes.

22.41.2 Typedef Documentation

```
22.41.2.1 hwloc_topology_diff_obj_attr_type_t
```

```
typedef enum hwloc_topology_diff_obj_attr_type_e hwloc_topology_diff_obj_attr_type_t
```

Type of one object attribute difference.

```
22.41.2.2 hwloc_topology_diff_t
```

```
{\tt typedef union \ hwloc\_topology\_diff\_u * hwloc\_topology\_diff\_t}
```

One element of a difference list between two topologies.

```
22.41.2.3 hwloc_topology_diff_type_t
```

```
typedef enum hwloc_topology_diff_type_e hwloc_topology_diff_type_t
```

Type of one element of a difference list.

22.41.3 Enumeration Type Documentation

22.41.3.1 hwloc_topology_diff_apply_flags_e

```
enum hwloc_topology_diff_apply_flags_e
```

Flags to be given to hwloc_topology_diff_apply().

Enumerator

```
HWLOC_TOPOLOGY_DIFF_APPLY_REVERSE | Apply topology diff in reverse direction.
```

22.41.3.2 hwloc_topology_diff_obj_attr_type_e

```
enum hwloc_topology_diff_obj_attr_type_e
```

Type of one object attribute difference.

Enumerator

HWLOC_TOPOLOGY_DIFF_OBJ_ATTR_SIZE	The object local memory is modified. The union is a hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_cobj_attr_uint64_s (and the index field is ignored).
HWLOC_TOPOLOGY_DIFF_OBJ_ATTR_NAME	The object name is modified. The union is a hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_cobj_attr_string_s (and the name field is ignored).
HWLOC_TOPOLOGY_DIFF_OBJ_ATTR_INFO	the value of an info attribute is modified. The union is a hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_cobj_attr_string_s.

22.41.3.3 hwloc_topology_diff_type_e

```
\verb"enum hwloc_topology_diff_type_e"
```

Type of one element of a difference list.

Enumerator

HWLOC_TOPOLOGY_DIFF_OBJ_ATTR	An object attribute was changed. The union is a hwloc_← topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_s.
HWLOC_TOPOLOGY_DIFF_TOO_COMPLEX	The difference is too complex, it cannot be represented. The difference below this object has not been checked. hwloc_topology_diff_build() will return 1. The union is a hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_too_complex_s.

22.41.4 Function Documentation

22.41.4.1 hwloc_topology_diff_apply()

```
int hwloc_topology_diff_apply (
          hwloc_topology_t topology,
          hwloc_topology_diff_t diff,
          unsigned long flags )
```

Apply a topology diff to an existing topology.

flags is an OR'ed set of hwloc_topology_diff_apply_flags_e.

The new topology is modified in place. hwloc_topology_dup() may be used to duplicate it before patching.

If the difference cannot be applied entirely, all previous applied elements are unapplied before returning.

Returns

0 on success.

-N if applying the difference failed while trying to apply the N-th part of the difference. For instance -1 is returned if the very first difference element could not be applied.

22.41.4.2 hwloc_topology_diff_build()

```
int hwloc_topology_diff_build (
          hwloc_topology_t topology,
          hwloc_topology_t newtopology,
          unsigned long flags,
          hwloc_topology_diff_t * diff )
```

Compute the difference between 2 topologies.

The difference is stored as a list of hwloc_topology_diff_t entries starting at diff. It is computed by doing a depth-first traversal of both topology trees simultaneously.

If the difference between 2 objects is too complex to be represented (for instance if some objects have different types, or different numbers of children), a special diff entry of type HWLOC_TOPOLOGY_DIFF_TOO_COMPLEX is queued. The computation of the diff does not continue below these objects. So each such diff entry means that the difference between two subtrees could not be computed.

Returns

0 if the difference can be represented properly.

0 with \mathtt{diff} pointing to NULL if there is no difference between the topologies.

1 if the difference is too complex (see above). Some entries in the list will be of type HWLOC_TOPOLOGY ← DIFF TOO COMPLEX.

-1 on any other error.

Note

flags is currently not used. It should be 0.

The output diff has to be freed with hwloc topology diff destroy().

The output diff can only be exported to XML or passed to hwloc_topology_diff_apply() if 0 was returned, i.e. if no entry of type HWLOC_TOPOLOGY_DIFF_TOO_COMPLEX is listed.

The output diff may be modified by removing some entries from the list. The removed entries should be freed by passing them to to hwloc_topology_diff_destroy() (possible as another list).

22.41.4.3 hwloc_topology_diff_destroy()

Destroy a list of topology differences.

22.41.4.4 hwloc_topology_diff_export_xml()

```
int hwloc_topology_diff_export_xml (
          hwloc_topology_diff_t diff,
          const char * refname,
          const char * xmlpath )
```

Export a list of topology differences to a XML file.

If not NULL, refname defines an identifier string for the reference topology which was used as a base when computing this difference. This identifier is usually the name of the other XML file that contains the reference topology. This attribute is given back when reading the diff from XML.

22.41.4.5 hwloc_topology_diff_export_xmlbuffer()

```
int hwloc_topology_diff_export_xmlbuffer (
          hwloc_topology_diff_t diff,
          const char * refname,
          char ** xmlbuffer,
          int * buflen )
```

Export a list of topology differences to a XML buffer.

If not NULL, refname defines an identifier string for the reference topology which was used as a base when computing this difference. This identifier is usually the name of the other XML file that contains the reference topology. This attribute is given back when reading the diff from XML.

The returned buffer ends with a \0 that is included in the returned length.

Note

The XML buffer should later be freed with hwloc_free_xmlbuffer().

22.41.4.6 hwloc_topology_diff_load_xml()

Load a list of topology differences from a XML file.

If not NULL, refname will be filled with the identifier string of the reference topology for the difference file, if any was specified in the XML file. This identifier is usually the name of the other XML file that contains the reference topology.

Note

the pointer returned in refname should later be freed by the caller.

22.41.4.7 hwloc_topology_diff_load_xmlbuffer()

Load a list of topology differences from a XML buffer.

If not <code>NULL</code>, <code>refname</code> will be filled with the identifier string of the reference topology for the difference file, if any was specified in the XML file. This identifier is usually the name of the other XML file that contains the reference topology.

Note

the pointer returned in refname should later be freed by the caller.

22.42 Sharing topologies between processes

Functions

- int hwloc_shmem_topology_get_length (hwloc_topology_t topology, size_t *lengthp, unsigned long flags)
- int hwloc_shmem_topology_write (hwloc_topology_t topology, int fd, hwloc_uint64_t fileoffset, void *mmap←
 _address, size_t length, unsigned long flags)
- int hwloc_shmem_topology_adopt (hwloc_topology_t *topologyp, int fd, hwloc_uint64_t fileoffset, void *mmap_address, size_t length, unsigned long flags)

22.42.1 Detailed Description

These functions are used to share a topology between processes by duplicating it into a file-backed shared-memory buffer

The master process must first get the required shared-memory size for storing this topology with hwloc_shmem_ topology_get_length().

Then it must find a virtual memory area of that size that is available in all processes (identical virtual addresses in all processes). On Linux, this can be done by comparing holes found in /proc/<pid>/maps for each process.

Once found, it must open a destination file for storing the buffer, and pass it to hwloc_shmem_topology_write() together with virtual memory address and length obtained above.

Other processes may then adopt this shared topology by opening the same file and passing it to <a href="https://hww.numer.com/hwloc_shmem_com/

22.42.2 Function Documentation

22.42.2.1 hwloc_shmem_topology_adopt()

Adopt a shared memory topology stored in a file.

Map a file in virtual memory and adopt the topology that was previously stored there with hwloc_shmem_topology ← write().

The returned adopted topology in topologyp can be used just like any topology. And it must be destroyed with hwloc_topology_destroy() as usual.

However the topology is read-only. For instance, it cannot be modified with hwwloc_topology_restrict() and object userdata pointers cannot be changed.

The segment of the file pointed by descriptor fd, starting at offset fileoffset, and of length length (in bytes), will be mapped at virtual address mmap_address.

The file pointed by descriptor fd, the offset fileoffset, the requested mapping virtual address mmap_\circ\ address and the length length must be identical to what was given to hwloc shmem topology write() earlier.

Note

Flags flags are currently unused, must be 0.

The object userdata pointer should not be used unless the process that created the shared topology also placed userdata-pointed buffers in shared memory.

This function takes care of calling hwloc_topology_abi_check().

Returns

- -1 with errno set to EBUSY if the virtual memory mapping defined by mmap_address and length isn't available in the process.
- -1 with errno set to EINVAL if fileoffset, mmap_address or length aren't page-aligned, or do not match what was given to hwloc_shmem_topology_write() earlier.
- -1 with errno set to EINVAL if the layout of the topology structure is different between the writer process and the adopter process.

22.42.2.2 hwloc_shmem_topology_get_length()

Get the required shared memory length for storing a topology.

This length (in bytes) must be used in hwloc_shmem_topology_write() and hwloc_shmem_topology_adopt() later.

Note

Flags flags are currently unused, must be 0.

22.42.2.3 hwloc_shmem_topology_write()

Duplicate a topology to a shared memory file.

Temporarily map a file in virtual memory and duplicate the topology topology by allocating duplicates in there.

The segment of the file pointed by descriptor fd, starting at offset fileoffset, and of length length (in bytes), will be temporarily mapped at virtual address mmap_address during the duplication.

The mapping length length must have been previously obtained with hwloc_shmem_topology_get_length() and the topology must not have been modified in the meantime.

Note

Flags flags are currently unused, must be 0.

The object userdata pointer is duplicated but the pointed buffer is not. However the caller may also allocate it manually in shared memory to share it as well.

Returns

- -1 with errno set to EBUSY if the virtual memory mapping defined by mmap_address and length isn't available in the process.
- $\textbf{-1 with errno set to EINVAL if } \verb|fileoffset|, \verb|mmap_address| or \verb|length| aren't | page-aligned|.\\$

22.43 Components and Plugins: Discovery components

Data Structures

• struct hwloc_disc_component

22.43.1 Detailed Description

22.44 Components and Plugins: Discovery backends

Data Structures

- struct hwloc_disc_status
- struct hwloc_backend

Typedefs

typedef enum hwloc_disc_phase_e hwloc_disc_phase_t

Enumerations

- enum hwloc_disc_phase_e {
 HWLOC_DISC_PHASE_GLOBAL, HWLOC_DISC_PHASE_CPU, HWLOC_DISC_PHASE_MEMORY, H
 WLOC_DISC_PHASE_PCI,
 HWLOC_DISC_PHASE_IO, HWLOC_DISC_PHASE_MISC, HWLOC_DISC_PHASE_ANNOTATE, HWL
 OC_DISC_PHASE_TWEAK }
- enum hwloc_disc_status_flag_e { HWLOC_DISC_STATUS_FLAG_GOT_ALLOWED_RESOURCES }

Functions

- struct hwloc_backend * hwloc_backend_alloc (struct hwloc_topology *topology, struct hwloc_disc_
 component *component)
- int hwloc_backend_enable (struct hwloc_backend *backend)

22.44.1 Detailed Description

22.44.2 Typedef Documentation

```
22.44.2.1 hwloc_disc_phase_t
```

typedef enum hwloc_disc_phase_e hwloc_disc_phase_t

Discovery phase.

22.44.3 Enumeration Type Documentation

```
22.44.3.1 hwloc_disc_phase_e
```

enum hwloc_disc_phase_e

Discovery phase.

Enumerator

HWLOC_DISC_PHASE_GLOBAL	xml or synthetic, platform-specific components such as bgq. Discovers everything including CPU, memory, I/O and everything else. A component with a Global phase usually excludes all other phases.
HWLOC_DISC_PHASE_CPU	CPU discovery.
HWLOC_DISC_PHASE_MEMORY	Attach memory to existing CPU objects.
HWLOC_DISC_PHASE_PCI	Attach PCI devices and bridges to existing CPU objects.
HWLOC_DISC_PHASE_IO	I/O discovery that requires PCI devices (OS devices such as OpenCL, CUDA, etc.).
HWLOC_DISC_PHASE_MISC	Misc objects that gets added below anything else.
HWLOC_DISC_PHASE_ANNOTATE	Annotating existing objects, adding distances, etc.
HWLOC_DISC_PHASE_TWEAK	Final tweaks to a ready-to-use topology. This phase runs once the topology is loaded, before it is returned to the topology. Hence it may only use the main hwloc API for modifying the topology, for instance by restricting it, adding info attributes, etc.

22.44.3.2 hwloc_disc_status_flag_e

```
enum hwloc_disc_status_flag_e
```

Discovery status flags.

Enumerator

HWLOC_DISC_STATUS_FLAG_GOT_ALLOWED↔	The sets of allowed resources were already retrieved.
_RESOURCES	

22.44.4 Function Documentation

22.44.4.1 hwloc_backend_alloc()

Allocate a backend structure, set good default values, initialize backend->component and topology, etc. The caller will then modify whatever needed, and call hwloc_backend_enable().

22.44.4.2 hwloc_backend_enable()

Enable a previously allocated and setup backend.

22.45 Components and Plugins: Generic components

Data Structures

• struct hwloc_component

Typedefs

• typedef enum hwloc_component_type_e hwloc_component_type_t

Enumerations

 enum hwloc_component_type_e { HWLOC_COMPONENT_TYPE_DISC, HWLOC_COMPONENT_TYPE XML }

22.45.1 Detailed Description

22.45.2 Typedef Documentation

```
22.45.2.1 hwloc_component_type_t
```

```
typedef enum hwloc_component_type_e hwloc_component_type_t
```

Generic component type.

22.45.3 Enumeration Type Documentation

22.45.3.1 hwloc_component_type_e

```
enum hwloc_component_type_e
```

Generic component type.

Enumerator

HWLOC_COMPONENT_TYPE_DISC	The data field must point to a struct hwloc_disc_component.
HWLOC_COMPONENT_TYPE_XML	The data field must point to a struct hwloc_xml_component.

22.46 Components and Plugins: Core functions to be used by components

Typedefs

• typedef void(* hwloc_report_error_t) (const char *msg, int line)

Functions

- struct hwloc_obj * hwloc_insert_object_by_cpuset (struct hwloc_topology *topology, hwloc_obj_t obj)
- void hwloc_report_os_error (const char *msg, int line)
- int hwloc hide errors (void)
- struct hwloc_obj * hwloc_insert_object_by_cpuset (struct hwloc_topology *topology, hwloc_obj_t root, hwloc_obj_t obj, hwloc_report_error_t report_error)
- void hwloc_insert_object_by_parent (struct hwloc_topology *topology, hwloc_obj_t parent, hwloc_obj_t obj)
- hwloc_obj_t hwloc_alloc_setup_object (hwloc_topology_t topology, hwloc_obj_type_t type, unsigned os_
 index)
- int hwloc_obj_add_children_sets (hwloc_obj_t obj)
- int hwloc topology reconnect (hwloc topology t topology, unsigned long flags)
- static int hwloc_plugin_check_namespace (const char *pluginname, const char *symbol)

22.46.1 Detailed Description

22.46.2 Typedef Documentation

```
22.46.2.1 hwloc_report_error_t

typedef void(* hwloc_report_error_t) (const char *msg, int line)
```

Type of error callbacks during object insertion.

22.46.3 Function Documentation

```
22.46.3.1 hwloc__insert_object_by_cpuset()
```

Add an object to the topology and specify which error callback to use.

This function is similar to hwloc_insert_object_by_cpuset() but it allows specifying where to start insertion from (if root is NULL, the topology root object is used), and specifying the error callback.

22.46.3.2 hwloc_alloc_setup_object()

Allocate and initialize an object of the given type and physical index.

If os_index is unknown or irrelevant, use HWLOC_UNKNOWN_INDEX.

22.46.3.3 hwloc_hide_errors()

Check whether insertion errors are hidden.

22.46.3.4 hwloc_insert_object_by_cpuset()

Add an object to the topology.

It is sorted along the tree of other objects according to the inclusion of cpusets, to eventually be added as a child of the smallest object including this object.

If the cpuset is empty, the type of the object (and maybe some attributes) must be enough to find where to insert the object. This is especially true for NUMA nodes with memory and no CPUs.

The given object should not have children.

This shall only be called before levels are built.

In case of error, hwloc_report_os_error() is called.

The caller should check whether the object type is filtered-out before calling this function.

The topology cpuset/nodesets will be enlarged to include the object sets.

Returns the object on success. Returns NULL and frees obj on error. Returns another object and frees obj if it was merged with an identical pre-existing object.

222 Module Documentation

22.46.3.5 hwloc_insert_object_by_parent()

Insert an object somewhere in the topology.

It is added as the last child of the given parent. The cpuset is completely ignored, so strange objects such as I/O devices should preferably be inserted with this.

When used for "normal" children with cpusets (when importing from XML when duplicating a topology), the caller should make sure that:

- · children are inserted in order,
- · children cpusets do not intersect.

The given object may have normal, I/O or Misc children, as long as they are in order as well. These children must have valid parent and next_sibling pointers.

The caller should check whether the object type is filtered-out before calling this function.

22.46.3.6 hwloc_obj_add_children_sets()

```
int hwloc_obj_add_children_sets (
          hwloc_obj_t obj )
```

Setup object cpusets/nodesets by OR'ing its children.

Used when adding an object late in the topology. Will update the new object by OR'ing all its new children sets.

Used when PCI backend adds a hostbridge parent, when distances add a new Group, etc.

22.46.3.7 hwloc_plugin_check_namespace()

Make sure that plugins can lookup core symbols.

This is a sanity check to avoid lazy-lookup failures when libhwloc is loaded within a plugin, and later tries to load its own plugins. This may fail (and abort the program) if libhwloc symbols are in a private namespace.

Returns

0 on success

-1 if the plugin cannot be successfully loaded. The caller plugin init() callback should return a negative error code as well.

Plugins should call this function in their init() callback to avoid later crashes if lazy symbol resolution is used by the upper layer that loaded hwloc (e.g. OpenCL implementations using dlopen with RTLD_LAZY).

Note

The build system must define HWLOC_INSIDE_PLUGIN if and only if building the caller as a plugin. This function should remain inline so plugins can call it even when they cannot find libhwloc symbols.

22.46.3.8 hwloc_report_os_error()

Report an insertion error from a backend.

22.46.3.9 hwloc_topology_reconnect()

```
int hwloc_topology_reconnect (
          hwloc_topology_t topology,
          unsigned long flags )
```

Request a reconnection of children and levels in the topology.

May be used by backends during discovery if they need arrays or lists of object within levels or children to be fully connected.

 $\verb|flags| is currently unused, must 0.$

224 Module Documentation

22.47 Components and Plugins: Filtering objects

Functions

- static int hwloc_filter_check_pcidev_subtype_important (unsigned classid)
- static int hwloc_filter_check_osdev_subtype_important (hwloc_obj_osdev_type_t subtype)
- static int hwloc_filter_check_keep_object_type (hwloc_topology_t topology, hwloc_obj_type_t type)
- static int hwloc_filter_check_keep_object (hwloc_topology_t topology, hwloc_obj_t obj)

22.47.1 Detailed Description

22.47.2 Function Documentation

22.47.2.1 hwloc_filter_check_keep_object()

Check whether the given object should be filtered-out.

Returns

1 if the object type should be kept, 0 otherwise.

22.47.2.2 hwloc_filter_check_keep_object_type()

Check whether a non-I/O object type should be filtered-out.

Cannot be used for I/O objects.

Returns

1 if the object type should be kept, 0 otherwise.

22.47.2.3 hwloc_filter_check_osdev_subtype_important()

Check whether the given OS device subtype is important.

Returns

1 if important, 0 otherwise.

22.47.2.4 hwloc_filter_check_pcidev_subtype_important()

Check whether the given PCI device classid is important.

Returns

1 if important, 0 otherwise.

226 Module Documentation

22.48 Components and Plugins: helpers for PCI discovery

Functions

- unsigned hwloc_pcidisc_find_cap (const unsigned char *config, unsigned cap)
- int hwloc pcidisc find linkspeed (const unsigned char *config, unsigned offset, float *linkspeed)
- hwloc_obj_type_t hwloc_pcidisc_check_bridge_type (unsigned device_class, const unsigned char *config)
- int hwloc_pcidisc_find_bridge_buses (unsigned domain, unsigned bus, unsigned dev, unsigned func, unsigned *secondary_busp, unsigned *subordinate_busp, const unsigned char *config)
- void hwloc pcidisc tree insert by busid (struct hwloc obj **treep, struct hwloc obj *obj)
- int hwloc_pcidisc_tree_attach (struct hwloc_topology *topology, struct hwloc_obj *tree)

22.48.1 Detailed Description

22.48.2 Function Documentation

22.48.2.1 hwloc_pcidisc_check_bridge_type()

Return the hwloc object type (PCI device or Bridge) for the given class and configuration space.

This function requires 16 bytes of common configuration header at the beginning of config.

22.48.2.2 hwloc_pcidisc_find_bridge_buses()

```
int hwloc_pcidisc_find_bridge_buses (
    unsigned domain,
    unsigned bus,
    unsigned dev,
    unsigned func,
    unsigned * secondary_busp,
    unsigned * subordinate_busp,
    const unsigned char * config )
```

Fills the attributes of the given PCI bridge using the given PCI config space.

This function requires 32 bytes of common configuration header at the beginning of config.

Returns -1 and destroys /p obj if bridge fields are invalid.

22.48.2.3 hwloc_pcidisc_find_cap()

Return the offset of the given capability in the PCI config space buffer.

This function requires a 256-bytes config space. Unknown/unavailable bytes should be set to 0xff.

22.48.2.4 hwloc_pcidisc_find_linkspeed()

Fill linkspeed by reading the PCI config space where PCI_CAP_ID_EXP is at position offset.

Needs 20 bytes of EXP capability block starting at offset in the config space for registers up to link status.

22.48.2.5 hwloc_pcidisc_tree_attach()

Add some hostbridges on top of the given tree of PCI objects and attach them to the topology.

Other backends may lookup PCI objects or localities (for instance to attach OS devices) by using $hwloc_pcidisc_\leftarrow find_by_busid()$ or $hwloc_pcidisc_find_busid_parent()$.

22.48.2.6 hwloc_pcidisc_tree_insert_by_busid()

Insert a PCI object in the given PCI tree by looking at PCI bus IDs.

If treep points to $\mathtt{NULL},$ the new object is inserted there.

228 Module Documentation

22.49 Components and Plugins: finding PCI objects during other discoveries

Functions

• struct hwloc_obj * hwloc_pci_find_parent_by_busid (struct hwloc_topology *topology, unsigned domain, unsigned bus, unsigned dev, unsigned func)

- 22.49.1 Detailed Description
- 22.49.2 Function Documentation

22.49.2.1 hwloc_pci_find_parent_by_busid()

Find the normal parent of a PCI bus ID.

Look at PCI affinity to find out where the given PCI bus ID should be attached.

This function should be used to attach an I/O device under the corresponding PCI object (if any), or under a normal (non-I/O) object with same locality.

22.50 Netloc API 229

22.50 Netloc API

Enumerations

enum {
 NETLOC_SUCCESS = 0, NETLOC_ERROR = -1, NETLOC_ERROR_NOTDIR = -2, NETLOC_ERROR_
 NOENT = -3,
 NETLOC_ERROR_EMPTY = -4, NETLOC_ERROR_MULTIPLE = -5, NETLOC_ERROR_NOT_IMPL = -6,
 NETLOC_ERROR_EXISTS = -7,
 NETLOC_ERROR_NOT_FOUND = -8, NETLOC_ERROR_MAX = -9 }

22.50.1 Detailed Description

22.50.2 Enumeration Type Documentation

22.50.2.1 anonymous enum

anonymous enum

Return codes

Enumerator

NETLOC_SUCCESS	Success
NETLOC_ERROR	Error: General condition
NETLOC_ERROR_NOTDIR	Error: URI is not a directory
NETLOC_ERROR_NOENT	Error: URI is invalid, no such entry
NETLOC_ERROR_EMPTY	Error: No networks found
NETLOC_ERROR_MULTIPLE	Error: Multiple matching networks found
NETLOC_ERROR_NOT_IMPL	Error: Interface not implemented
NETLOC_ERROR_EXISTS	Error: If the entry already exists when trying to add to a lookup table
NETLOC_ERROR_NOT_FOUND	Error: No path found
NETLOC_ERROR_MAX	Error: Enum upper bound marker. No errors less than this number Will not be returned externally.

230 Module Documentation

Chapter 23

Data Structure Documentation

23.1 hwloc_backend Struct Reference

```
#include <plugins.h>
```

Data Fields

- · unsigned phases
- · unsigned long flags
- int is_thissystem
- void * private_ data
- void(* disable)(struct hwloc_backend *backend)
- int(* discover)(struct hwloc_backend *backend, struct hwloc_disc_status *status)
- int(* get_pci_busid_cpuset)(struct hwloc_backend *backend, struct hwloc_pcidev_attr_s *busid, hwloc_
 bitmap_t cpuset)

23.1.1 Detailed Description

Discovery backend structure.

A backend is the instantiation of a discovery component. When a component gets enabled for a topology, its instantiate() callback creates a backend.

hwloc_backend_alloc() initializes all fields to default values that the component may change (except "component" and "next") before enabling the backend with hwloc backend enable().

Most backends assume that the topology is_thissystem flag is set because they talk to the underlying operating system. However they may still be used in topologies without the is_thissystem flag for debugging reasons. In practice, they are usually auto-disabled in such cases (excluded by xml or synthetic backends, or by environment variables when changing the Linux fsroot or the x86 cpuid path).

23.1.2 Field Documentation

23.1.2.1 disable

```
void(* hwloc_backend::disable) (struct hwloc_backend *backend)
```

Callback for freeing the private_data. May be NULL.

23.1.2.2 discover

```
int(* hwloc_backend::discover) (struct hwloc_backend *backend, struct hwloc_disc_status *status)
```

Main discovery callback. returns -1 on error, either because it couldn't add its objects of the existing topology, or because of an actual discovery/gathering failure. May be NULL.

23.1.2.3 flags

unsigned long hwloc_backend::flags

Backend flags, currently always 0.

23.1.2.4 get_pci_busid_cpuset

```
int(* hwloc_backend::get_pci_busid_cpuset) (struct hwloc_backend *backend, struct hwloc_←
pcidev_attr_s *busid, hwloc_bitmap_t cpuset)
```

Callback to retrieve the locality of a PCI object. Called by the PCI core when attaching PCI hierarchy to CPU objects. May be NULL.

23.1.2.5 is_thissystem

```
int hwloc_backend::is_thissystem
```

Backend-specific 'is_thissystem' property. Set to 0 if the backend disables the thissystem flag for this topology (e.g. loading from xml or synthetic string, or using a different fsroot on Linux, or a x86 CPUID dump). Set to -1 if the backend doesn't care (default).

23.1.2.6 phases

unsigned hwloc_backend::phases

```
23.1.2.7 private_data
```

```
void* hwloc_backend::private_data
```

Backend private data, or NULL if none.

The documentation for this struct was generated from the following file:

• plugins.h

23.2 hwloc_obj_attr_u::hwloc_bridge_attr_s Struct Reference

```
#include <hwloc.h>
```

Data Fields

```
    union {
        struct hwloc_pcidev_attr_s pci
    } upstream
    hwloc_obj_bridge_type_t upstream_type
    union {
        struct {
```

```
unsigned short domain
unsigned char secondary_bus
unsigned char subordinate_bus
} pci
} downstream
```

- hwloc_obj_bridge_type_t downstream_type
- unsigned depth

23.2.1 Detailed Description

Bridge specific Object Attribues.

23.2.2 Field Documentation

23.2.2.1 depth

```
unsigned hwloc_obj_attr_u::hwloc_bridge_attr_s::depth
```

23.2.2.2 domain

unsigned short hwloc_obj_attr_u::hwloc_bridge_attr_s::domain

23.2.2.3 downstream

union { ... } hwloc_obj_attr_u::hwloc_bridge_attr_s::downstream

23.2.2.4 downstream_type

hwloc_obj_bridge_type_t hwloc_obj_attr_u::hwloc_bridge_attr_s::downstream_type

23.2.2.5 pci [1/2]

struct { ... } hwloc_obj_attr_u::hwloc_bridge_attr_s::pci

23.2.2.6 pci [2/2]

struct hwloc_pcidev_attr_s hwloc_obj_attr_u::hwloc_bridge_attr_s::pci

23.2.2.7 secondary_bus

unsigned char hwloc_obj_attr_u::hwloc_bridge_attr_s::secondary_bus

23.2.2.8 subordinate_bus

unsigned char hwloc_obj_attr_u::hwloc_bridge_attr_s::subordinate_bus

23.2.2.9 upstream

union { ... } hwloc_obj_attr_u::hwloc_bridge_attr_s::upstream

23.2.2.10 upstream_type

```
hwloc_obj_bridge_type_t hwloc_obj_attr_u::hwloc_bridge_attr_s::upstream_type
```

The documentation for this struct was generated from the following file:

· hwloc.h

23.3 hwloc_obj_attr_u::hwloc_cache_attr_s Struct Reference

```
#include <hwloc.h>
```

Data Fields

- hwloc_uint64_t size
- unsigned depth
- unsigned linesize
- · int associativity
- hwloc_obj_cache_type_t type

23.3.1 Detailed Description

Cache-specific Object Attributes.

23.3.2 Field Documentation

23.3.2.1 associativity

```
int hwloc_obj_attr_u::hwloc_cache_attr_s::associativity
```

Ways of associativity, -1 if fully associative, 0 if unknown.

23.3.2.2 depth

```
\verb"unsigned hwloc_obj_attr_u::hwloc_cache_attr_s::depth"
```

Depth of cache (e.g., L1, L2, ...etc.)

23.3.2.3 linesize

```
unsigned hwloc_obj_attr_u::hwloc_cache_attr_s::linesize
```

Cache-line size in bytes. 0 if unknown.

23.3.2.4 size

```
hwloc_uint64_t hwloc_obj_attr_u::hwloc_cache_attr_s::size
```

Size of cache in bytes.

23.3.2.5 type

```
hwloc_obj_cache_type_t hwloc_obj_attr_u::hwloc_cache_attr_s::type
```

Cache type.

The documentation for this struct was generated from the following file:

· hwloc.h

23.4 hwloc_cl_device_topology_amd Union Reference

```
#include <opencl.h>
```

Data Fields

```
    struct {
        cl_uint type
        cl_uint data [5]
    } raw
    struct {
        cl_uint type
        cl_char unused [17]
        cl_char bus
        cl_char device
        cl_char function
    } pcie
```

23.4.1 Field Documentation

23.4.1.1 bus

 $\verb|cl_char| hwloc_cl_device_topology_amd::bus|$

23.4.1.2 data

cl_uint hwloc_cl_device_topology_amd::data[5]

23.4.1.3 device

cl_char hwloc_cl_device_topology_amd::device

23.4.1.4 function

 $\verb|cl_char| hwloc_cl_device_topology_amd::function|$

23.4.1.5 pcie

struct { ... } hwloc_cl_device_topology_amd::pcie

23.4.1.6 raw

struct { ... } hwloc_cl_device_topology_amd::raw

23.4.1.7 type

cl_uint hwloc_cl_device_topology_amd::type

23.4.1.8 unused

```
cl_char hwloc_cl_device_topology_amd::unused[17]
```

The documentation for this union was generated from the following file:

· opencl.h

23.5 hwloc_component Struct Reference

```
#include <plugins.h>
```

Data Fields

- unsigned abi
- int(* init)(unsigned long flags)
- void(* finalize)(unsigned long flags)
- hwloc_component_type_t type
- · unsigned long flags
- void * data

23.5.1 Detailed Description

Generic component structure.

Generic components structure, either statically listed by configure in static-components.h or dynamically loaded as a plugin.

23.5.2 Field Documentation

23.5.2.1 abi

unsigned hwloc_component::abi

Component ABI version, set to HWLOC_COMPONENT_ABI.

23.5.2.2 data

```
void* hwloc_component::data
```

Component data, pointing to a struct hwloc_disc_component or struct hwloc_xml_component.

23.5.2.3 finalize

```
void(* hwloc_component::finalize) (unsigned long flags)
```

Process-wide component termination callback.

This optional callback is called after unregistering the component from the hwloc core (before unloading the plugin).

flags is always 0 for now.

Note

If the component uses Itdl for loading its own plugins, it should load/unload them only in init() and finalize(), to avoid race conditions with hwloc's use of Itdl.

23.5.2.4 flags

```
unsigned long hwloc_component::flags
```

Component flags, unused for now.

23.5.2.5 init

```
int(* hwloc_component::init) (unsigned long flags)
```

Process-wide component initialization callback.

This optional callback is called when the component is registered to the hwloc core (after loading the plugin).

When the component is built as a plugin, this callback should call hwloc_check_plugin_namespace() and return an negative error code on error.

flags is always 0 for now.

Returns

0 on success, or a negative code on error.

Note

If the component uses Itdl for loading its own plugins, it should load/unload them only in init() and finalize(), to avoid race conditions with hwloc's use of Itdl.

23.5.2.6 type

hwloc_component_type_t hwloc_component::type

Component type.

The documentation for this struct was generated from the following file:

• plugins.h

23.6 hwloc_disc_component Struct Reference

#include <plugins.h>

Data Fields

- const char * name
- · unsigned phases
- unsigned excluded_phases
- struct hwloc_backend *(* instantiate)(struct hwloc_topology *topology, struct hwloc_disc_component *component, unsigned excluded_phases, const void *data1, const void *data2, const void *data3)
- · unsigned priority
- unsigned enabled_by_default

23.6.1 Detailed Description

Discovery component structure.

This is the major kind of components, taking care of the discovery. They are registered by generic components, either statically-built or as plugins.

23.6.2 Field Documentation

23.6.2.1 enabled_by_default

unsigned hwloc_disc_component::enabled_by_default

Enabled by default. If unset, if will be disabled unless explicitly requested.

23.6.2.2 excluded_phases

unsigned hwloc_disc_component::excluded_phases

Component phases to exclude, as an OR'ed set of hwloc disc phase t.

For a GLOBAL component, this usually includes all other phases (\sim UL).

Other components only exclude types that may bring conflicting topology information. MISC components should likely not be excluded since they usually bring non-primary additional information.

23.6.2.3 instantiate

struct hwloc_backend*(* hwloc_disc_component::instantiate) (struct hwloc_topology *topology, struct hwloc_disc_component *component, unsigned excluded_phases, const void *data1, const void *data2, const void *data3)

23.6.2.4 name

const char* hwloc_disc_component::name

Name. If this component is built as a plugin, this name does not have to match the plugin filename.

23.6.2.5 phases

unsigned hwloc_disc_component::phases

Discovery phases performed by this component. OR'ed set of hwloc_disc_phase_t.

23.6.2.6 priority

unsigned hwloc_disc_component::priority

Component priority. Used to sort topology->components, higher priority first. Also used to decide between two components with the same name.

Usual values are 50 for native OS (or platform) components, 45 for x86, 40 for no-OS fallback, 30 for global components (xml, synthetic), 20 for pci, 10 for other misc components (opencl etc.).

The documentation for this struct was generated from the following file:

plugins.h

23.7 hwloc_disc_status Struct Reference

#include <plugins.h>

Data Fields

- hwloc_disc_phase_t phase
- unsigned excluded_phases
- · unsigned long flags

23.7.1 Detailed Description

Discovery status structure.

Used by the core and backends to inform about what has been/is being done during the discovery process.

23.7.2 Field Documentation

23.7.2.1 excluded_phases

unsigned hwloc_disc_status::excluded_phases

Dynamically excluded phases. If a component decides during discovery that some phases are no longer needed.

23.7.2.2 flags

unsigned long hwloc_disc_status::flags

OR'ed set of hwloc_disc_status_flag_e.

23.7.2.3 phase

```
hwloc_disc_phase_t hwloc_disc_status::phase
```

The current discovery phase that is performed. Must match one of the phases in the component phases field.

The documentation for this struct was generated from the following file:

plugins.h

23.8 hwloc_distances_s Struct Reference

```
#include <distances.h>
```

Data Fields

- unsigned nbobjs
- hwloc obj t * objs
- · unsigned long kind
- hwloc_uint64_t * values

23.8.1 Detailed Description

Matrix of distances between a set of objects.

This matrix often contains latencies between NUMA nodes (as reported in the System Locality Distance Information Table (SLIT) in the ACPI specification), which may or may not be physically accurate. It corresponds to the latency for accessing the memory of one node from a core in another node. The corresponding kind is HWLOC_DISTA← NCES_KIND_FROM_OS | HWLOC_DISTANCES_KIND_FROM_USER.

The matrix may also contain bandwidths between random sets of objects, possibly provided by the user, as specified in the kind attribute.

23.8.2 Field Documentation

23.8.2.1 kind

unsigned long hwloc_distances_s::kind

OR'ed set of hwloc_distances_kind_e.

23.8.2.2 nbobjs

unsigned hwloc_distances_s::nbobjs

Number of objects described by the distance matrix.

23.8.2.3 objs

```
hwloc_obj_t* hwloc_distances_s::objs
```

Array of objects described by the distance matrix. These objects are not in any particular order, see hwloc_cdistances_obj_index() and hwloc_distances_obj_pair_values() for easy ways to find objects in this array and their corresponding values.

23.8.2.4 values

```
hwloc_uint64_t* hwloc_distances_s::values
```

Matrix of distances between objects, stored as a one-dimension array.

Distance from i-th to j-th object is stored in slot i*nbobjs+j. The meaning of the value depends on the kind attribute.

The documentation for this struct was generated from the following file:

· distances.h

23.9 hwloc_obj_attr_u::hwloc_group_attr_s Struct Reference

```
#include <hwloc.h>
```

Data Fields

- · unsigned depth
- unsigned kind
- unsigned subkind
- unsigned char dont_merge

23.9.1 Detailed Description

Group-specific Object Attributes.

23.9.2 Field Documentation

23.9.2.1 depth

```
unsigned hwloc_obj_attr_u::hwloc_group_attr_s::depth
```

Depth of group object. It may change if intermediate Group objects are added.

23.9.2.2 dont_merge

```
unsigned char hwloc_obj_attr_u::hwloc_group_attr_s::dont_merge
```

Flag preventing groups from being automatically merged with identical parent or children.

23.9.2.3 kind

```
unsigned hwloc_obj_attr_u::hwloc_group_attr_s::kind
```

Internally-used kind of group.

23.9.2.4 subkind

```
unsigned hwloc_obj_attr_u::hwloc_group_attr_s::subkind
```

Internally-used subkind to distinguish different levels of groups with same kind.

The documentation for this struct was generated from the following file:

• hwloc.h

23.10 hwloc_info_s Struct Reference

```
#include <hwloc.h>
```

Data Fields

- char * name
- char * value

23.10.1 Detailed Description

Object info.

See also

Consulting and Adding Key-Value Info Attributes

23.10.2 Field Documentation

23.10.2.1 name

char* hwloc_info_s::name

Info name.

23.10.2.2 value

char* hwloc_info_s::value

Info value.

The documentation for this struct was generated from the following file:

· hwloc.h

#include <hwloc.h>

Data Fields

- hwloc_uint64_t size
- hwloc_uint64_t count

23.11.1 Detailed Description

Array of local memory page types, \mathtt{NULL} if no local memory and $\mathtt{page_types}$ is 0.

The array is sorted by increasing size fields. It contains page_types_len slots.

23.11.2 Field Documentation

23.11.2.1 count

hwloc_uint64_t hwloc_obj_attr_u::hwloc_numanode_attr_s::hwloc_memory_page_type_s::count

Number of pages of this size.

23.11.2.2 size

hwloc_uint64_t hwloc_obj_attr_u::hwloc_numanode_attr_s::hwloc_memory_page_type_s::size

Size of pages.

The documentation for this struct was generated from the following file:

hwloc.h

23.12 hwloc_obj_attr_u::hwloc_numanode_attr_s Struct Reference

#include <hwloc.h>

Data Structures

• struct hwloc_memory_page_type_s

Data Fields

- hwloc_uint64_t local_memory
- unsigned page_types_len
- struct hwloc_obj_attr_u::hwloc_numanode_attr_s::hwloc_memory_page_type_s * page_types

23.12.1 Detailed Description

NUMA node-specific Object Attributes.

23.12.2 Field Documentation

23.12.2.1 local_memory

hwloc_uint64_t hwloc_obj_attr_u::hwloc_numanode_attr_s::local_memory

Local memory (in bytes)

23.12.2.2 page_types

 $struct\ hwloc_obj_attr_u::hwloc_numanode_attr_s::hwloc_memory_page_type_s\ *\ hwloc_obj_attr_u \leftrightarrow ::hwloc_numanode_attr_s::page_types$

23.12.2.3 page_types_len

unsigned hwloc_obj_attr_u::hwloc_numanode_attr_s::page_types_len

Size of array page_types.

The documentation for this struct was generated from the following file:

· hwloc.h

23.13 hwloc_obj Struct Reference

#include <hwloc.h>

Data Fields

- · hwloc_obj_type_t type
- char * subtype
- · unsigned os_index
- char * name
- hwloc_uint64_t total_memory
- union hwloc_obj_attr_u * attr
- int depth
- unsigned logical_index
- struct hwloc_obj * next_cousin
- struct hwloc_obj * prev_cousin
- struct hwloc_obj * parent
- unsigned sibling_rank
- struct hwloc_obj * next_sibling
- struct hwloc_obj * prev_sibling
- int symmetric_subtree
- hwloc_cpuset_t cpuset
- hwloc_cpuset_t complete_cpuset
- hwloc_nodeset_t nodeset
- hwloc_nodeset_t complete_nodeset
- struct hwloc_info_s * infos
- unsigned infos_count
- void * userdata
- hwloc_uint64_t gp_index

List and array of normal children below this object (except Memory, I/O and Misc children).

- unsigned arity
- struct hwloc_obj ** children
- struct hwloc_obj * first_child
- struct hwloc_obj * last_child

List of Memory children below this object.

- · unsigned memory_arity
- struct hwloc_obj * memory_first_child

List of I/O children below this object.

- unsigned io_arity
- struct hwloc_obj * io_first_child

List of Misc children below this object.

- unsigned misc_arity
- struct hwloc_obj * misc_first_child

23.13.1 Detailed Description

Structure of a topology object.

Applications must not modify any field except hwloc_obj.userdata.

23.13.2 Field Documentation

```
23.13.2.1 arity
```

```
unsigned hwloc_obj::arity
```

Number of normal children. Memory, Misc and I/O children are not listed here but rather in their dedicated children list.

23.13.2.2 attr

```
union hwloc_obj_attr_u* hwloc_obj::attr
```

Object type-specific Attributes, may be \mathtt{NULL} if no attribute value was found.

23.13.2.3 children

```
struct hwloc_obj** hwloc_obj::children
```

Normal children, children[0 .. arity -1].

23.13.2.4 complete_cpuset

```
hwloc_cpuset_t hwloc_obj::complete_cpuset
```

The complete CPU set of logical processors of this object,.

This may include not only the same as the cpuset field, but also some CPUs for which topology information is unknown or incomplete, some offlines CPUs, and the CPUs that are ignored when the HWLOC_TOPOLOGY_

FLAG_INCLUDE_DISALLOWED flag is not set. Thus no corresponding PU object may be found in the topology, because the precise position is undefined. It is however known that it would be somewhere under this object.

Note

Its value must not be changed, hwloc_bitmap_dup() must be used instead.

23.13.2.5 complete_nodeset

hwloc_nodeset_t hwloc_obj::complete_nodeset

The complete NUMA node set of this object,.

This may include not only the same as the nodeset field, but also some NUMA nodes for which topology information is unknown or incomplete, some offlines nodes, and the nodes that are ignored when the HWLOC_TOPOLOGY — FLAG_INCLUDE_DISALLOWED flag is not set. Thus no corresponding NUMA node object may be found in the topology, because the precise position is undefined. It is however known that it would be somewhere under this object.

If there are no NUMA nodes in the machine, all the memory is close to this object, so only the first bit is set in complete_nodeset.

Note

Its value must not be changed, hwloc_bitmap_dup() must be used instead.

23.13.2.6 cpuset

hwloc_cpuset_t hwloc_obj::cpuset

CPUs covered by this object.

This is the set of CPUs for which there are PU objects in the topology under this object, i.e. which are known to be physically contained in this object and known how (the children path between this object and the PU objects).

If the HWLOC_TOPOLOGY_FLAG_INCLUDE_DISALLOWED configuration flag is set, some of these CPUs may not be allowed for binding, see hwloc_topology_get_allowed_cpuset().

Note

All objects have non-NULL CPU and node sets except Misc and I/O objects. Its value must not be changed, hwloc_bitmap_dup()) must be used instead.

23.13.2.7 depth

int hwloc_obj::depth

Vertical index in the hierarchy.

For normal objects, this is the depth of the horizontal level that contains this object and its cousins of the same type. If the topology is symmetric, this is equal to the parent depth plus one, and also equal to the number of parent/child links from the root object to here.

For special objects (NUMA nodes, I/O and Misc) that are not in the main tree, this is a special negative value that corresponds to their dedicated level, see hwloc_get_type_depth() and hwloc_get_type_depth() and hwloc_get_type_depth() as usual.

23.13.2.8 first_child

```
struct hwloc_obj* hwloc_obj::first_child
```

First normal child.

23.13.2.9 gp_index

hwloc_uint64_t hwloc_obj::gp_index

Global persistent index. Generated by hwloc, unique across the topology (contrary to os_index) and persistent across topology changes (contrary to logical_index). Mostly used internally, but could also be used by application to identify objects.

23.13.2.10 infos

```
struct hwloc_info_s* hwloc_obj::infos
```

Array of stringified info type=name.

23.13.2.11 infos_count

unsigned hwloc_obj::infos_count

Size of infos array.

23.13.2.12 io_arity

unsigned hwloc_obj::io_arity

Number of I/O children. These children are listed in io_first_child.

23.13.2.13 io_first_child

```
struct hwloc_obj* hwloc_obj::io_first_child
```

First I/O child. Bridges, PCI and OS devices are listed here (io_arity and io_first_child) instead of in the normal children list. See also hwloc_obj_type_is_io().

23.13.2.14 last_child

```
struct hwloc_obj* hwloc_obj::last_child
```

Last normal child.

23.13.2.15 logical_index

```
unsigned hwloc_obj::logical_index
```

Horizontal index in the whole list of similar objects, hence guaranteed unique across the entire machine. Could be a "cousin_rank" since it's the rank within the "cousin" list below Note that this index may change when restricting the topology or when inserting a group.

23.13.2.16 memory_arity

```
unsigned hwloc_obj::memory_arity
```

Number of Memory children. These children are listed in memory_first_child.

23.13.2.17 memory_first_child

```
struct hwloc_obj* hwloc_obj::memory_first_child
```

First Memory child. NUMA nodes and Memory-side caches are listed here (memory_arity and memory_ first_child) instead of in the normal children list. See also hwloc_obj_type_is_memory().

A memory hierarchy starts from a normal CPU-side object (e.g. Package) and ends with NUMA nodes as leaves. There might exist some memory-side caches between them in the middle of the memory subtree.

23.13.2.18 misc_arity

```
unsigned hwloc_obj::misc_arity
```

Number of Misc children. These children are listed in misc_first_child.

23.13.2.19 misc_first_child

```
struct hwloc_obj* hwloc_obj::misc_first_child
```

First Misc child. Misc objects are listed here (misc_arity and misc_first_child) instead of in the normal children list.

23.13.2.20 name

```
char* hwloc_obj::name
```

Object-specific name if any. Mostly used for identifying OS devices and Misc objects where a name string is more useful than numerical indexes.

23.13.2.21 next_cousin

```
struct hwloc_obj* hwloc_obj::next_cousin
```

Next object of same type and depth.

23.13.2.22 next_sibling

```
struct hwloc_obj* hwloc_obj::next_sibling
```

Next object below the same parent (inside the same list of children).

23.13.2.23 nodeset

```
hwloc_nodeset_t hwloc_obj::nodeset
```

NUMA nodes covered by this object or containing this object.

This is the set of NUMA nodes for which there are NUMA node objects in the topology under or above this object, i.e. which are known to be physically contained in this object or containing it and known how (the children path between this object and the NUMA node objects).

In the end, these nodes are those that are close to the current object.

If the HWLOC_TOPOLOGY_FLAG_INCLUDE_DISALLOWED configuration flag is set, some of these nodes may not be allowed for allocation, see hwloc_topology_get_allowed_nodeset().

If there are no NUMA nodes in the machine, all the memory is close to this object, so only the first bit may be set in nodeset.

Note

All objects have non-NULL CPU and node sets except Misc and I/O objects. Its value must not be changed, <a href="https://hww.nust.edu.nust

```
23.13.2.24 os_index
```

```
unsigned hwloc_obj::os_index
```

OS-provided physical index number. It is not guaranteed unique across the entire machine, except for PUs and NUMA nodes. Set to HWLOC_UNKNOWN_INDEX if unknown or irrelevant for this object.

23.13.2.25 parent

```
struct hwloc_obj* hwloc_obj::parent
```

Parent, \mathtt{NULL} if root (Machine object)

23.13.2.26 prev_cousin

```
struct hwloc_obj* hwloc_obj::prev_cousin
```

Previous object of same type and depth.

23.13.2.27 prev_sibling

```
struct hwloc_obj* hwloc_obj::prev_sibling
```

Previous object below the same parent (inside the same list of children).

23.13.2.28 sibling_rank

```
unsigned hwloc_obj::sibling_rank
```

Index in parent's children[] array. Or the index in parent's Memory, I/O or Misc children list.

23.13.2.29 subtype

```
char* hwloc_obj::subtype
```

Subtype string to better describe the type field.

23.13.2.30 symmetric_subtree

```
int hwloc_obj::symmetric_subtree
```

Set if the subtree of normal objects below this object is symmetric, which means all normal children and their children have identical subtrees.

Memory, I/O and Misc children are ignored.

If set in the topology root object, Istopo may export the topology as a synthetic string.

23.13.2.31 total_memory

```
hwloc_uint64_t hwloc_obj::total_memory
```

Total memory (in bytes) in NUMA nodes below this object.

23.13.2.32 type

```
hwloc_obj_type_t hwloc_obj::type
```

Type of object.

23.13.2.33 userdata

```
void* hwloc_obj::userdata
```

Application-given private data pointer, initialized to NULL, use it as you wish. See hwloc_topology_set_userdata callback() in hwloc/export.h if you wish to export this field to XML.

The documentation for this struct was generated from the following file:

· hwloc.h

23.14 hwloc_obj_attr_u Union Reference

```
#include <hwloc.h>
```

Data Structures

- struct hwloc_bridge_attr_s
- struct hwloc_cache_attr_s
- struct hwloc_group_attr_s
- struct hwloc_numanode_attr_s
- struct hwloc_osdev_attr_s
- struct hwloc_pcidev_attr_s

Data Fields

- struct hwloc_obj_attr_u::hwloc_numanode_attr_s numanode
- struct hwloc_obj_attr_u::hwloc_cache_attr_s cache
- struct hwloc_obj_attr_u::hwloc_group_attr_s group
- struct hwloc_obj_attr_u::hwloc_pcidev_attr_s pcidev
- struct hwloc_obj_attr_u::hwloc_bridge_attr_s bridge
- struct hwloc_obj_attr_u::hwloc_osdev_attr_s osdev

23.14.1 Detailed Description

Object type-specific Attributes.

23.14.2 Field Documentation

23.14.2.1 bridge

struct hwloc_obj_attr_u::hwloc_bridge_attr_s hwloc_obj_attr_u::bridge

23.14.2.2 cache

struct hwloc_obj_attr_u::hwloc_cache_attr_s hwloc_obj_attr_u::cache

23.14.2.3 group

struct hwloc_obj_attr_u::hwloc_group_attr_s hwloc_obj_attr_u::group

23.14.2.4 numanode

 $\verb|struct hwloc_obj_attr_u::hwloc_numanode_attr_s hwloc_obj_attr_u::numanode| \\$

23.14.2.5 osdev

struct hwloc_obj_attr_u::hwloc_osdev_attr_s hwloc_obj_attr_u::osdev

23.14.2.6 pcidev

struct hwloc_obj_attr_u::hwloc_pcidev_attr_s hwloc_obj_attr_u::pcidev

The documentation for this union was generated from the following file:

• hwloc.h

23.15 hwloc_obj_attr_u::hwloc_osdev_attr_s Struct Reference

#include <hwloc.h>

Data Fields

hwloc_obj_osdev_type_t type

23.15.1 Detailed Description

OS Device specific Object Attributes.

23.15.2 Field Documentation

23.15.2.1 type

hwloc_obj_osdev_type_t hwloc_obj_attr_u::hwloc_osdev_attr_s::type

The documentation for this struct was generated from the following file:

· hwloc.h

23.16 hwloc_obj_attr_u::hwloc_pcidev_attr_s Struct Reference

#include <hwloc.h>

Data Fields

- unsigned short domain
- unsigned char bus
- · unsigned char dev
- · unsigned char func
- unsigned short class_id
- unsigned short vendor_id
- unsigned short device_id
- unsigned short subvendor_id
- unsigned short subdevice_id
- unsigned char revision
- · float linkspeed

23.16.1 Detailed Description

PCI Device specific Object Attributes.

23.16.2 Field Documentation

23.16.2.1 bus

unsigned char hwloc_obj_attr_u::hwloc_pcidev_attr_s::bus

23.16.2.2 class_id

unsigned short hwloc_obj_attr_u::hwloc_pcidev_attr_s::class_id

23.16.2.3 dev

 $\verb"unsigned" char hwloc_obj_attr_u::hwloc_pcidev_attr_s::dev"$

23.16.2.4 device_id

unsigned short hwloc_obj_attr_u::hwloc_pcidev_attr_s::device_id

23.16.2.5 domain

 $\verb"unsigned" short hwloc_obj_attr_u::hwloc_pcidev_attr_s::domain$

23.16.2.6 func

 ${\tt unsigned\ char\ hwloc_obj_attr_u::hwloc_pcidev_attr_s::func}$

23.16.2.7 linkspeed

float hwloc_obj_attr_u::hwloc_pcidev_attr_s::linkspeed

23.16.2.8 revision

 ${\tt unsigned\ char\ hwloc_obj_attr_u::hwloc_pcidev_attr_s::revision}$

23.16.2.9 subdevice_id

unsigned short hwloc_obj_attr_u::hwloc_pcidev_attr_s::subdevice_id

23.16.2.10 subvendor_id

unsigned short hwloc_obj_attr_u::hwloc_pcidev_attr_s::subvendor_id

23.16.2.11 vendor_id

 ${\tt unsigned \ short \ hwloc_obj_attr_u::hwloc_pcidev_attr_s::vendor_id}$

The documentation for this struct was generated from the following file:

· hwloc.h

23.17 hwloc_topology_cpubind_support Struct Reference

#include <hwloc.h>

Data Fields

- unsigned char set_thisproc_cpubind
- · unsigned char get_thisproc_cpubind
- unsigned char set_proc_cpubind
- · unsigned char get proc cpubind
- · unsigned char set_thisthread_cpubind
- unsigned char get_thisthread_cpubind
- · unsigned char set_thread_cpubind
- unsigned char get_thread_cpubind
- unsigned char get_thisproc_last_cpu_location
- unsigned char get_proc_last_cpu_location
- unsigned char get_thisthread_last_cpu_location

23.17.1 Detailed Description

Flags describing actual PU binding support for this topology.

A flag may be set even if the feature isn't supported in all cases (e.g. binding to random sets of non-contiguous objects).

23.17.2 Field Documentation

23.17.2.1 get_proc_cpubind

unsigned char hwloc_topology_cpubind_support::get_proc_cpubind

Getting the binding of a whole given process is supported.

23.17.2.2 get_proc_last_cpu_location

 $unsigned \ char \ hwloc_topology_cpubind_support::get_proc_last_cpu_location$

Getting the last processors where a whole process ran is supported

23.17.2.3 get_thisproc_cpubind

unsigned char hwloc_topology_cpubind_support::get_thisproc_cpubind

Getting the binding of the whole current process is supported.

23.17.2.4 get_thisproc_last_cpu_location

unsigned char hwloc_topology_cpubind_support::get_thisproc_last_cpu_location

Getting the last processors where the whole current process ran is supported

23.17.2.5 get_thisthread_cpubind

 ${\tt unsigned \ char \ hwloc_topology_cpubind_support::get_thisthread_cpubind}$

Getting the binding of the current thread only is supported.

23.17.2.6 get_thisthread_last_cpu_location

unsigned char hwloc_topology_cpubind_support::get_thisthread_last_cpu_location

Getting the last processors where the current thread ran is supported

23.17.2.7 get_thread_cpubind

unsigned char hwloc_topology_cpubind_support::get_thread_cpubind

Getting the binding of a given thread only is supported.

23.17.2.8 set_proc_cpubind

 ${\tt unsigned \ char \ hwloc_topology_cpubind_support::set_proc_cpubind}$

Binding a whole given process is supported.

23.17.2.9 set_thisproc_cpubind

 ${\tt unsigned \ char \ hwloc_topology_cpubind_support::set_thisproc_cpubind}$

Binding the whole current process is supported.

23.17.2.10 set_thisthread_cpubind

 ${\tt unsigned \ char \ hwloc_topology_cpubind_support::} {\tt set_thisthread_cpubind}$

Binding the current thread only is supported.

```
23.17.2.11 set_thread_cpubind
```

unsigned char hwloc_topology_cpubind_support::set_thread_cpubind

Binding a given thread only is supported.

The documentation for this struct was generated from the following file:

• hwloc.h

23.18 hwloc_topology_diff_u::hwloc_topology_diff_generic_s Struct Reference

```
#include <diff.h>
```

Data Fields

- hwloc_topology_diff_type_t type
- union hwloc_topology_diff_u * next

23.18.1 Field Documentation

23.18.1.1 next

union hwloc_topology_diff_u* hwloc_topology_diff_u::hwloc_topology_diff_generic_s::next

23.18.1.2 type

hwloc_topology_diff_type_t hwloc_topology_diff_u::hwloc_topology_diff_generic_s::type

The documentation for this struct was generated from the following file:

· diff.h

23.19 hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_generic_s Struct Reference

#include <diff.h>

Data Fields

hwloc_topology_diff_obj_attr_type_t type

23.19.1 Field Documentation

23.19.1.1 type

The documentation for this struct was generated from the following file:

· diff.h

23.20 hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s Struct Reference

#include <diff.h>

Data Fields

- hwloc_topology_diff_type_t type
- union hwloc_topology_diff_u * next
- int obj_depth
- unsigned obj_index
- union hwloc_topology_diff_obj_attr_u diff

23.20.1 Field Documentation

23.20.1.1 diff

 $\label{local_topology_diff_obj_attr_u} $$ union $hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s $$::diff$

23.20.1.2 next

union hwloc_topology_diff_u* hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s::next

23.20.1.3 obj_depth

 $\verb|int hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s::obj_depth|\\$

23.20.1.4 obj_index

unsigned hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s::obj_index

23.20.1.5 type

hwloc_topology_diff_type_t hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s::type

The documentation for this struct was generated from the following file:

· diff.h

23.21 hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_string_s Struct Reference

#include <diff.h>

Data Fields

- hwloc_topology_diff_obj_attr_type_t type
- char * name
- char * oldvalue
- char * newvalue

23.21.1 Detailed Description

String attribute modification with an optional name.

23.21.2 Field Documentation

23.21.2.1 name

 $\verb|char*| hwloc_topology_diff_obj_attr_u:: hwloc_topology_diff_obj_attr_string_s:: name | hwloc_topology_diff_obj_attr_string_s:: hwloc_topology_diff_obj_attr_string$

23.21.2.2 newvalue

char* hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_string_s::newvalue

23.21.2.3 oldvalue

char* hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_string_s::oldvalue

23.21.2.4 type

The documentation for this struct was generated from the following file:

· diff.h

23.22 hwloc_topology_diff_obj_attr_u Union Reference

#include <diff.h>

Data Structures

- struct hwloc_topology_diff_obj_attr_generic_s
- · struct hwloc topology diff obj attr string s
- struct hwloc_topology_diff_obj_attr_uint64_s

Data Fields

- struct hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_generic_s generic
- struct hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_uint64_s uint64
- struct hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_string_s string

23.22.1 Detailed Description

One object attribute difference.

23.22.2 Field Documentation

23.22.2.1 generic

 $struct\ hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_generic_s\ hwloc_topology \\ _diff_obj_attr_u::generic$

23.22.2.2 string

 $struct\ hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_string_s\ hwloc_topology_\leftrightarrow diff_obj_attr_u::string$

23.22.2.3 uint64

 $struct\ hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_uint64_s\ hwloc_topology_\leftrightarrow diff_obj_attr_u::uint64$

The documentation for this union was generated from the following file:

· diff.h

23.23 hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_uint64_s Struct Reference

#include <diff.h>

Data Fields

- hwloc_topology_diff_obj_attr_type_t type
- hwloc_uint64_t index
- hwloc_uint64_t oldvalue
- hwloc_uint64_t newvalue

23.23.1 Detailed Description

Integer attribute modification with an optional index.

23.23.2 Field Documentation

23.23.2.1 index

hwloc_uint64_t hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_uint64_s::index

23.23.2.2 newvalue

hwloc_uint64_t hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_uint64_s::newvalue

23.23.2.3 oldvalue

hwloc_uint64_t hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_uint64_s::oldvalue

23.23.2.4 type

The documentation for this struct was generated from the following file:

• diff.h

23.24 hwloc_topology_diff_u::hwloc_topology_diff_too_complex_s Struct Reference

#include <diff.h>

Data Fields

- hwloc_topology_diff_type_t type
- union hwloc_topology_diff_u * next
- · int obj_depth
- unsigned obj_index

23.24.1 Field Documentation

23.24.1.1 next

union hwloc_topology_diff_u* hwloc_topology_diff_u::hwloc_topology_diff_too_complex_s::next

23.24.1.2 obj_depth

 $\verb|int-hwloc_topology_diff_u::hwloc_topology_diff_too_complex_s::obj_depth|\\$

23.24.1.3 obj_index

unsigned hwloc_topology_diff_u::hwloc_topology_diff_too_complex_s::obj_index

23.24.1.4 type

 $\verb|hwloc_topology_diff_type_t| hwloc_topology_diff_u::hwloc_topology_diff_too_complex_s::type| hwloc_topology_diff_type_t| hwloc_topology_dif$

The documentation for this struct was generated from the following file:

· diff.h

23.25 hwloc_topology_diff_u Union Reference

#include <diff.h>

Data Structures

- struct hwloc_topology_diff_generic_s
- struct hwloc_topology_diff_obj_attr_s
- struct hwloc_topology_diff_too_complex_s

Data Fields

- struct hwloc_topology_diff_u::hwloc_topology_diff_generic_s generic
- struct hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s obj_attr
- struct hwloc_topology_diff_u::hwloc_topology_diff_too_complex_s too_complex

23.25.1 Detailed Description

One element of a difference list between two topologies.

23.25.2 Field Documentation

23.25.2.1 generic

 $\verb|struct| hwloc_topology_diff_u::hwloc_topology_diff_generic_s| hwloc_topology_diff_u::generic_s| hwloc_topology_diff_u::generic_s| hwloc_topology_diff_u::generic_s| hwloc_topology_diff_u::hwloc_topology_$

23.25.2.2 obj_attr

struct hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s hwloc_topology_diff_u::obj_attr

23.25.2.3 too_complex

 $struct\ hwloc_topology_diff_u::hwloc_topology_diff_too_complex_s\ hwloc_topology_diff_u::too_{\hookleftarrow}\ complex$

The documentation for this union was generated from the following file:

• diff.h

23.26 hwloc_topology_discovery_support Struct Reference

#include <hwloc.h>

Data Fields

- unsigned char pu
- unsigned char numa
- unsigned char numa_memory
- unsigned char disallowed_pu
- unsigned char disallowed_numa

23.26.1 Detailed Description

Flags describing actual discovery support for this topology.

23.26.2 Field Documentation

23.26.2.1 disallowed_numa

unsigned char hwloc_topology_discovery_support::disallowed_numa

Detecting and identifying NUMA nodes that are not available to the current process is supported.

23.26.2.2 disallowed_pu

 $\verb"unsigned" char "hwloc_topology_discovery_support:: \\ disallowed_pu$

Detecting and identifying PU objects that are not available to the current process is supported.

23.26.2.3 numa

unsigned char hwloc_topology_discovery_support::numa

Detecting the number of NUMA nodes is supported.

23.26.2.4 numa_memory

unsigned char hwloc_topology_discovery_support::numa_memory

Detecting the amount of memory in NUMA nodes is supported.

23.26.2.5 pu

unsigned char hwloc_topology_discovery_support::pu

Detecting the number of PU objects is supported.

The documentation for this struct was generated from the following file:

· hwloc.h

23.27 hwloc_topology_membind_support Struct Reference

#include <hwloc.h>

Data Fields

- unsigned char set_thisproc_membind
- · unsigned char get_thisproc_membind
- unsigned char set_proc_membind
- unsigned char get_proc_membind
- unsigned char set_thisthread_membind
- · unsigned char get_thisthread_membind
- unsigned char set_area_membind
- · unsigned char get_area_membind
- unsigned char alloc_membind
- unsigned char firsttouch_membind
- unsigned char bind_membind
- · unsigned char interleave_membind
- · unsigned char nexttouch membind
- · unsigned char migrate_membind
- unsigned char get_area_memlocation

23.27.1 Detailed Description

Flags describing actual memory binding support for this topology.

A flag may be set even if the feature isn't supported in all cases (e.g. binding to random sets of non-contiguous objects).

23.27.2 Field Documentation

23.27.2.1 alloc membind

unsigned char hwloc_topology_membind_support::alloc_membind

Allocating a bound memory area is supported.

23.27.2.2 bind_membind

unsigned char hwloc_topology_membind_support::bind_membind

Bind policy is supported.

23.27.2.3 firsttouch_membind

unsigned char hwloc_topology_membind_support::firsttouch_membind

First-touch policy is supported.

23.27.2.4 get_area_membind

unsigned char hwloc_topology_membind_support::get_area_membind

Getting the binding of a given memory area is supported.

23.27.2.5 get_area_memlocation

 $unsigned \ char \ hwloc_topology_membind_support::get_area_memlocation$

Getting the last NUMA nodes where a memory area was allocated is supported

23.27.2.6 get_proc_membind

unsigned char hwloc_topology_membind_support::get_proc_membind

Getting the binding of a whole given process is supported.

23.27.2.7 get_thisproc_membind

unsigned char hwloc_topology_membind_support::get_thisproc_membind

Getting the binding of the whole current process is supported.

23.27.2.8 get_thisthread_membind

 ${\tt unsigned \ char \ hwloc_topology_membind_support::} {\tt get_thisthread_membind}$

Getting the binding of the current thread only is supported.

23.27.2.9 interleave_membind

unsigned char hwloc_topology_membind_support::interleave_membind

Interleave policy is supported.

23.27.2.10 migrate_membind

unsigned char hwloc_topology_membind_support::migrate_membind

Migration flags is supported.

23.27.2.11 nexttouch_membind

 ${\tt unsigned \ char \ hwloc_topology_membind_support::} next touch_membind$

Next-touch migration policy is supported.

23.27.2.12 set_area_membind

unsigned char hwloc_topology_membind_support::set_area_membind

Binding a given memory area is supported.

23.27.2.13 set_proc_membind

unsigned char hwloc_topology_membind_support::set_proc_membind

Binding a whole given process is supported.

23.27.2.14 set_thisproc_membind

unsigned char hwloc_topology_membind_support::set_thisproc_membind

Binding the whole current process is supported.

23.27.2.15 set thisthread membind

unsigned char hwloc_topology_membind_support::set_thisthread_membind

Binding the current thread only is supported.

The documentation for this struct was generated from the following file:

hwloc.h

23.28 hwloc_topology_support Struct Reference

#include <hwloc.h>

Data Fields

- struct hwloc_topology_discovery_support * discovery
- struct hwloc_topology_cpubind_support * cpubind
- struct hwloc_topology_membind_support * membind

23.28.1 Detailed Description

Set of flags describing actual support for this topology.

This is retrieved with https://hww.nct.noing/nct/ and will be valid until the topology object is destroyed. Note: the values are correct only after discovery.

23.28.2 Field Documentation

23.28.2.1 cpubind

struct hwloc_topology_cpubind_support* hwloc_topology_support::cpubind

23.28.2.2 discovery

struct hwloc_topology_discovery_support* hwloc_topology_support::discovery

23.28.2.3 membind

 $\verb|struct hwloc_topology_membind_support*| hwloc_topology_support::membind|$

The documentation for this struct was generated from the following file:

• hwloc.h

Index

API version, 85	hwloc_topology_components_flag_e, 120
HWLOC_API_VERSION, 85	hwloc_topology_set_components, 120
HWLOC_COMPONENT_ABI, 85	hwloc_topology_set_pid, 121
hwloc_get_api_version, 86	hwloc_topology_set_synthetic, 121
abi	hwloc_topology_set_xml, 121
hwloc_component, 238	hwloc_topology_set_xmlbuffer, 122
Add or remove distances between objects, 184	children
hwloc_distances_add, 184	hwloc_obj, 249
hwloc_distances_add_flag_e, 184	class_id
hwloc_distances_release_remove, 185	hwloc_obj_attr_u::hwloc_pcidev_attr_s, 258
hwloc_distances_remove, 185	complete_cpuset
hwloc_distances_remove_by_depth, 185	hwloc obj, 249
hwloc_distances_remove_by_type, 185	complete_nodeset
alloc_membind	hwloc obj, 249
hwloc_topology_membind_support, 271	Components and Plugins: Core functions to be used by
arity	components, 220
hwloc_obj, 249	hwlocinsert_object_by_cpuset, 220
associativity	hwloc_alloc_setup_object, 220
hwloc_obj_attr_u::hwloc_cache_attr_s, 235	hwloc_hide_errors, 221
attr	hwloc insert object by cpuset, 221
hwloc_obj, 249	hwloc_insert_object_by_parent, 221
	hwloc_obj_add_children_sets, 222
bind_membind	hwloc plugin check namespace, 222
hwloc_topology_membind_support, 271	hwloc report error t, 220
bridge	hwloc_report_enor_t, 222
hwloc_obj_attr_u, 256	hwloc_topology_reconnect, 223
bus	Components and Plugins: Discovery backends, 217
hwloc_cl_device_topology_amd, 236	· · · · · · · · · · · · · · · · · · ·
hwloc_obj_attr_u::hwloc_pcidev_attr_s, 258	hwloc_backend_alloc, 218
	hwloc_backend_enable, 218
CPU and node sets of entire topologies, 151	hwloc_disc_phase_e, 217
hwloc_topology_get_allowed_cpuset, 151	hwloc_disc_phase_t, 217
hwloc_topology_get_allowed_nodeset, 151	hwloc_disc_status_flag_e, 218
hwloc_topology_get_complete_cpuset, 151	Components and Plugins: Discovery components, 216
hwloc_topology_get_complete_nodeset, 152	Components and Plugins: Filtering objects, 224
hwloc_topology_get_topology_cpuset, 152	hwloc_filter_check_keep_object, 224
hwloc_topology_get_topology_nodeset, 152	hwloc_filter_check_keep_object_type, 224
CPU binding, 106	hwloc_filter_check_osdev_subtype_important, 224
hwloc_cpubind_flags_t, 107	hwloc_filter_check_pcidev_subtype_important,
hwloc_get_cpubind, 108	225
hwloc_get_last_cpu_location, 108	Components and Plugins: finding PCI objects during
hwloc_get_proc_cpubind, 108	other discoveries, 228
hwloc_get_proc_last_cpu_location, 108	hwloc_pci_find_parent_by_busid, 228
hwloc_get_thread_cpubind, 109	Components and Plugins: Generic components, 219
hwloc_set_cpubind, 109	hwloc_component_type_e, 219
hwloc_set_proc_cpubind, 109	hwloc_component_type_t, 219
hwloc_set_thread_cpubind, 110	Components and Plugins: helpers for PCI discovery, 226
cache	hwloc_pcidisc_check_bridge_type, 226
hwloc_obj_attr_u, 256	hwloc_pcidisc_find_bridge_buses, 226
Changing the Source of Topology Discovery, 120	hwloc_pcidisc_find_cap, 226

hwloc_pcidisc_find_linkspeed, 227 hwloc_pcidisc_tree_attach, 227 hwloc_pcidisc_tree_insert_by_busid, 227 Consulting and Adding Key-Value Info Attributes, 105 hwloc_obj_add_info, 105	downstream hwloc_obj_attr_u::hwloc_bridge_attr_s, 234 downstream_type hwloc_obj_attr_u::hwloc_bridge_attr_s, 234
hwloc_obj_get_info_by_name, 105 Converting between CPU sets and node sets, 154 hwloc_cpuset_from_nodeset, 154 hwloc_cpuset_to_nodeset, 154	enabled_by_default hwloc_disc_component, 240 excluded_phases hwloc_disc_component, 240
Converting between Object Types and Attributes, and	hwloc_disc_status, 242 Exporting Topologies to Synthetic, 178
Strings, 102 hwloc_obj_attr_snprintf, 102	hwloc_topology_export_synthetic, 179
hwloc_obj_type_snprintf, 102 hwloc_obj_type_string, 103	hwloc_topology_export_synthetic_flags_e, 178 Exporting Topologies to XML, 174
hwloc_type_sscanf, 103	hwloc_export_obj_userdata, 174
hwloc_type_sscanf_as_depth, 104	hwloc_export_obj_userdata_base64, 175 hwloc_free_xmlbuffer, 175
count hwloc_obj_attr_u::hwloc_numanode_attr_s↔	hwloc_topology_export_xml, 175
::hwloc_memory_page_type_s, 246	hwloc_topology_export_xml_flags_e, 174
cpubind hwloc_topology_support, 274	hwloc_topology_export_xmlbuffer, 176 hwloc_topology_set_userdata_export_callback,
cpuset	177
hwloc_obj, 250	hwloc_topology_set_userdata_import_callback, 177
data hwloc_cl_device_topology_amd, 237	finalize
hwloc_component, 238	hwloc_component, 238
depth	Finding I/O objects, 155
hwloc_obj, 250	hwloc_bridge_covers_pcibus, 155
hwloc_obj_attr_u::hwloc_bridge_attr_s, 233	hwloc_get_next_bridge, 155
hwloc_obj_attr_u::hwloc_cache_attr_s, 235	hwloc_get_next_osdev, 155
hwloc_obj_attr_u::hwloc_group_attr_s, 244	hwloc_get_next_pcidev, 155
dev	hwloc_get_non_io_ancestor_obj, 156
hwloc_obj_attr_u::hwloc_pcidev_attr_s, 258	hwloc_get_pcidev_by_busid, 156
device	hwloc_get_pcidev_by_busidstring, 156
hwloc_cl_device_topology_amd, 237	Finding Objects covering at least CPU set, 138
device_id	hwloc_get_child_covering_cpuset, 138
hwloc_obj_attr_u::hwloc_pcidev_attr_s, 258 diff	hwloc_get_next_obj_covering_cpuset_by_depth, 138
hwloc_topology_diff_u::hwloc_topology_diff_obj _attr_s, 263	hwloc_get_next_obj_covering_cpuset_by_type, 138
_attt_5, 200	hwloc_get_obj_covering_cpuset, 139
hwloc backend, 231	Finding Objects inside a CPU set, 134
disallowed_numa	hwloc_get_first_largest_obj_inside_cpuset, 134
hwloc_topology_discovery_support, 269	hwloc_get_largest_objs_inside_cpuset, 134
disallowed_pu	hwloc_get_nbobjs_inside_cpuset_by_depth, 135
hwloc_topology_discovery_support, 270	hwloc_get_nbobjs_inside_cpuset_by_type, 135
discover	hwloc_get_next_obj_inside_cpuset_by_depth, 135
hwloc_backend, 232	hwloc get_next_obj_inside_cpuset_by_type, 136
discovery	hwloc_get_obj_index_inside_cpuset, 136
hwloc_topology_support, 274	hwloc_get_obj_inside_cpuset_by_depth, 136
Distributing items over a topology, 149	hwloc_get_obj_inside_cpuset_by_type, 137
hwloc_distrib, 149	Finding objects, miscellaneous helpers, 146
hwloc_distrib_flags_e, 149	hwloc_get_closest_objs, 146
domain	hwloc_get_numanode_obj_by_os_index, 146
hwloc_obj_attr_u::hwloc_bridge_attr_s, 233	hwloc_get_obj_below_array_by_type, 147
hwloc_obj_attr_u::hwloc_pcidev_attr_s, 258	hwloc_get_obj_below_by_type, 147
dont_merge	hwloc_get_pu_obj_by_os_index, 147
hwloc_obj_attr_u::hwloc_group_attr_s, 244	first_child

hwloc_obj, 250	Memory binding, 114
firsttouch_membind	hwloc_alloc_membind
hwloc_topology_membind_support, 271	Memory binding, 114
flags	hwloc_alloc_membind_policy
hwloc_backend, 232	Memory binding, 115
hwloc_component, 239	hwloc_alloc_setup_object
hwloc_disc_status, 242	Components and Plugins: Core functions to be
func	used by components, 220
hwloc_obj_attr_u::hwloc_pcidev_attr_s, 259	hwloc_allow_flags_e
function	Modifying a loaded Topology, 129
hwloc_cl_device_topology_amd, 237	hwloc_backend, 231
generic	disable, 231
hwloc_topology_diff_obj_attr_u, 265	discover, 232
hwloc_topology_diff_u, 269	flags, 232
get_area_membind	get_pci_busid_cpuset, 232 is_thissystem, 232
hwloc_topology_membind_support, 271	phases, 232
get_area_memlocation	private_data, 232
hwloc_topology_membind_support, 272	hwloc_backend_alloc
get_pci_busid_cpuset	Components and Plugins: Discovery backends,
hwloc_backend, 232	218
get_proc_cpubind	hwloc_backend_enable
hwloc_topology_cpubind_support, 260	Components and Plugins: Discovery backends,
get_proc_last_cpu_location	218
hwloc_topology_cpubind_support, 260	hwloc_bitmap_allbut
get_proc_membind	The bitmap API, 159
hwloc_topology_membind_support, 272	hwloc_bitmap_alloc
get_thisproc_cpubind	The bitmap API, 160
hwloc_topology_cpubind_support, 260	hwloc_bitmap_alloc_full
get_thisproc_last_cpu_location	The bitmap API, 160
hwloc_topology_cpubind_support, 260	hwloc_bitmap_and
get_thisproc_membind	The bitmap API, 160
hwloc_topology_membind_support, 272 get_thisthread_cpubind	hwloc_bitmap_andnot
hwloc_topology_cpubind_support, 261	The bitmap API, 160
get_thisthread_last_cpu_location	hwloc_bitmap_asprintf
hwloc_topology_cpubind_support, 261	The bitmap API, 160
get_thisthread_membind	hwloc_bitmap_clr
hwloc_topology_membind_support, 272	The bitmap API, 161
get_thread_cpubind	hwloc_bitmap_clr_range
hwloc topology cpubind support, 261	The bitmap API, 161
gp_index	hwloc_bitmap_compare
hwloc_obj, 251	The bitmap API, 161
group	hwloc_bitmap_compare_first
hwloc_obj_attr_u, 256	The bitmap API, 161
	hwloc_bitmap_copy
HWLOC_API_VERSION	The bitmap API, 162
API version, 85	hwloc_bitmap_dup
HWLOC_COMPONENT_ABI	The bitmap API, 162
API version, 85	hwloc_bitmap_fill
HWLOC_OBJ_TYPE_MIN	The bitmap API, 162
Object Types, 88	hwloc_bitmap_first The bitmap API, 162
Helpers for consulting distance matrices, 183	•
hwloc_distances_obj_index, 183	hwloc_bitmap_first_unset The bitmap API, 163
hwloc_distances_obj_pair_values, 183 hwlocinsert_object_by_cpuset	hwloc_bitmap_foreach_begin
Components and Plugins: Core functions to be	The bitmap API, 158
used by components, 220	hwloc_bitmap_foreach_end
hwloc_alloc	The bitmap API, 159
	· · · · · · · · · · · · · · · · · · ·

hwloc_bitmap_free	hwloc_bitmap_taskset_snprintf
The bitmap API, 163	The bitmap API, 171
hwloc_bitmap_from_ith_ulong	hwloc_bitmap_taskset_sscanf
The bitmap API, 163	The bitmap API, 171
hwloc_bitmap_from_ulong	hwloc_bitmap_to_ith_ulong
The bitmap API, 163	The bitmap API, 171
hwloc_bitmap_from_ulongs	hwloc_bitmap_to_ulong
The bitmap API, 164	The bitmap API, 172
hwloc_bitmap_intersects	hwloc_bitmap_to_ulongs
The bitmap API, 164	The bitmap API, 172
hwloc_bitmap_isequal	hwloc_bitmap_weight
The bitmap API, 164	The bitmap API, 172
hwloc_bitmap_isfull	hwloc_bitmap_xor
The bitmap API, 164	The bitmap API, 172
hwloc_bitmap_isincluded	hwloc_bitmap_zero
The bitmap API, 165	The bitmap API, 173
hwloc_bitmap_isset	hwloc_bridge_covers_pcibus
The bitmap API, 165	Finding I/O objects, 155
hwloc_bitmap_iszero	hwloc_cl_device_topology_amd, 236
The bitmap API, 165	bus, 236
hwloc_bitmap_last	data, 237
The bitmap API, 166	device, 237
hwloc_bitmap_last_unset	function, 237
The bitmap API, 166	pcie, 237
hwloc_bitmap_list_asprintf	raw, 237
The bitmap API, 166	type, 237
hwloc_bitmap_list_snprintf	unused, 237
The bitmap API, 166	hwloc_compare_types
hwloc_bitmap_list_sscanf	Object Types, 92
The bitmap API, 167	hwloc_compare_types_e
hwloc_bitmap_next	Object Types, 89
The bitmap API, 167	hwloc_component, 238
hwloc_bitmap_next_unset	abi, 238
The bitmap API, 167	data, 238
hwloc_bitmap_not	finalize, 238
The bitmap API, 168	flags, 239
hwloc_bitmap_nr_ulongs	init, 239
The bitmap API, 168	type, 239
hwloc bitmap only	hwloc_component_type_e
The bitmap API, 168	Components and Plugins: Generic components,
hwloc bitmap or	219
The bitmap API, 168	hwloc_component_type_t
hwloc bitmap set	Components and Plugins: Generic components,
The bitmap API, 169	219
hwloc_bitmap_set_ith_ulong	hwloc_const_bitmap_t
The bitmap API, 169	The bitmap API, 159
•	•
hwloc_bitmap_set_range	hwloc_const_cpuset_t
The bitmap API, 169	Object Sets (hwloc_cpuset_t and hwloc_nodeset ←
hwloc_bitmap_singlify	_t), 87
The bitmap API, 169	hwloc_const_nodeset_t
hwloc_bitmap_snprintf	Object Sets (hwloc_cpuset_t and hwloc_nodeset ←
The bitmap API, 170	_t), 87
hwloc_bitmap_sscanf	hwloc_cpubind_flags_t
The bitmap API, 170	CPU binding, 107
hwloc_bitmap_t	hwloc_cpuset_from_glibc_sched_affinity
The bitmap API, 159	Interoperability with glibc sched affinity, 192
hwloc_bitmap_taskset_asprintf	hwloc_cpuset_from_linux_libnuma_bitmask
The bitmap API, 170	Interoperability with Linux libnuma bitmask, 190

hwloc_cpuset_from_linux_libnuma_ulongs	Add or remove distances between objects, 184
Interoperability with Linux libnuma unsigned long	hwloc_distances_get
masks, 188	Retrieve distances between objects, 181
hwloc_cpuset_from_nodeset	hwloc_distances_get_by_depth
Converting between CPU sets and node sets, 154	Retrieve distances between objects, 181
hwloc_cpuset_t	hwloc_distances_get_by_name
Object Sets (hwloc_cpuset_t and hwloc_nodeset ←	Retrieve distances between objects, 182
_t), 87	hwloc_distances_get_by_type
hwloc_cpuset_to_glibc_sched_affinity	Retrieve distances between objects, 182
Interoperability with glibc sched affinity, 192	hwloc_distances_get_name
hwloc_cpuset_to_linux_libnuma_bitmask	Retrieve distances between objects, 182
Interoperability with Linux libnuma bitmask, 190	hwloc_distances_kind_e
hwloc_cpuset_to_linux_libnuma_ulongs	Retrieve distances between objects, 180
Interoperability with Linux libnuma unsigned long	hwloc_distances_obj_index
masks, 188	Helpers for consulting distance matrices, 183
hwloc_cpuset_to_nodeset	hwloc_distances_obj_pair_values
Converting between CPU sets and node sets, 154	Helpers for consulting distance matrices, 183
hwloc_cuda_get_device_cpuset	hwloc_distances_release
Interoperability with the CUDA Driver API, 195	Retrieve distances between objects, 182
hwloc_cuda_get_device_osdev	hwloc_distances_release_remove
Interoperability with the CUDA Driver API, 195	Add or remove distances between objects, 185
hwloc_cuda_get_device_osdev_by_index	hwloc_distances_remove
Interoperability with the CUDA Driver API, 195	Add or remove distances between objects, 185
hwloc_cuda_get_device_pci_ids	hwloc_distances_remove_by_depth
Interoperability with the CUDA Driver API, 196	Add or remove distances between objects, 185
hwloc_cuda_get_device_pcidev	hwloc_distances_remove_by_type
Interoperability with the CUDA Driver API, 196	Add or remove distances between objects, 185
hwloc_cudart_get_device_cpuset	hwloc_distances_s, 243
Interoperability with the CUDA Runtime API, 197	kind, 243
hwloc_cudart_get_device_osdev_by_index	nbobjs, 243
Interoperability with the CUDA Runtime API, 197	objs, 243
hwloc_cudart_get_device_pci_ids	values, 244
Interoperability with the CUDA Runtime API, 197	hwloc_distrib
hwloc_cudart_get_device_pcidev	Distributing items over a topology, 149
Interoperability with the CUDA Runtime API, 198	hwloc_distrib_flags_e
hwloc_disc_component, 240	Distributing items over a topology, 149
enabled_by_default, 240	hwloc_export_obj_userdata
excluded_phases, 240	Exporting Topologies to XML, 174
instantiate, 241	hwloc_export_obj_userdata_base64
name, 241	Exporting Topologies to XML, 175
phases, 241	hwloc_filter_check_keep_object
priority, 241	Components and Plugins: Filtering objects, 224
hwloc_disc_phase_e	hwloc_filter_check_keep_object_type
Components and Plugins: Discovery backends,	Components and Plugins: Filtering objects, 224
217	hwloc_filter_check_osdev_subtype_important
hwloc_disc_phase_t	Components and Plugins: Filtering objects, 224
Components and Plugins: Discovery backends,	hwloc_filter_check_pcidev_subtype_important
217	Components and Plugins: Filtering objects, 225
hwloc_disc_status, 242	hwloc_free
excluded_phases, 242	Memory binding, 115
flags, 242	hwloc_free_xmlbuffer
phase, 242	Exporting Topologies to XML, 175
hwloc_disc_status_flag_e	hwloc_get_ancestor_obj_by_depth
Components and Plugins: Discovery backends,	Looking at Ancestor and Child Objects, 140
218	hwloc_get_ancestor_obj_by_type
hwloc_distances_add	Looking at Ancestor and Child Objects, 140
Add or remove distances between objects, 184	hwloc_get_api_version
hwloc_distances_add_flag_e	API version, 86

hwloc_get_area_membind	hwloc_get_numanode_obj_by_os_index
Memory binding, 115	Finding objects, miscellaneous helpers, 146
hwloc_get_area_memlocation	hwloc_get_obj_below_array_by_type
Memory binding, 116	Finding objects, miscellaneous helpers, 147
hwloc_get_cache_covering_cpuset	hwloc_get_obj_below_by_type
Looking at Cache Objects, 144	Finding objects, miscellaneous helpers, 147
hwloc_get_cache_type_depth	hwloc_get_obj_by_depth
Looking at Cache Objects, 144	Object levels, depths and types, 99
hwloc_get_child_covering_cpuset	hwloc_get_obj_by_type
Finding Objects covering at least CPU set, 138	Object levels, depths and types, 99
hwloc_get_closest_objs	hwloc_get_obj_covering_cpuset
Finding objects, miscellaneous helpers, 146	Finding Objects covering at least CPU set, 139
hwloc_get_common_ancestor_obj	hwloc_get_obj_index_inside_cpuset
Looking at Ancestor and Child Objects, 140	Finding Objects inside a CPU set, 136
hwloc_get_cpubind	hwloc_get_obj_inside_cpuset_by_depth
CPU binding, 108	Finding Objects inside a CPU set, 136
hwloc_get_depth_type	hwloc_get_obj_inside_cpuset_by_type
Object levels, depths and types, 98	Finding Objects inside a CPU set, 137
hwloc_get_first_largest_obj_inside_cpuset	hwloc_get_pcidev_by_busid
Finding Objects inside a CPU set, 134	Finding I/O objects, 156
hwloc_get_largest_objs_inside_cpuset	hwloc_get_pcidev_by_busidstring
Finding Objects inside a CPU set, 134	Finding I/O objects, 156
hwloc_get_last_cpu_location	hwloc_get_proc_cpubind
CPU binding, 108	CPU binding, 108
hwloc_get_membind	hwloc_get_proc_last_cpu_location
Memory binding, 116	CPU binding, 108
hwloc_get_memory_parents_depth	hwloc_get_proc_membind
Object levels, depths and types, 98	Memory binding, 117
hwloc_get_nbobjs_by_depth	hwloc_get_pu_obj_by_os_index
Object levels, depths and types, 98	Finding objects, miscellaneous helpers, 147
hwloc_get_nbobjs_by_type	hwloc_get_root_obj
Object levels, depths and types, 98	Object levels, depths and types, 99
hwloc_get_nbobjs_inside_cpuset_by_depth	hwloc_get_shared_cache_covering_obj
Finding Objects inside a CPU set, 135	Looking at Cache Objects, 144
hwloc_get_nbobjs_inside_cpuset_by_type	hwloc_get_thread_cpubind
Finding Objects inside a CPU set, 135	CPU binding, 109
hwloc_get_next_bridge	hwloc_get_type_depth
Finding I/O objects, 155	Object levels, depths and types, 100
hwloc_get_next_child	hwloc_get_type_depth_e
Looking at Ancestor and Child Objects, 141	Object levels, depths and types, 97
hwloc_get_next_obj_by_depth	hwloc_get_type_or_above_depth
Object levels, depths and types, 99	Object levels, depths and types, 100
hwloc_get_next_obj_by_type	hwloc_get_type_or_below_depth
Object levels, depths and types, 99	Object levels, depths and types, 100
hwloc_get_next_obj_covering_cpuset_by_depth	hwloc_gl_get_display_by_osdev
Finding Objects covering at least CPU set, 138	Interoperability with OpenGL displays, 201
hwloc_get_next_obj_covering_cpuset_by_type	hwloc_gl_get_display_osdev_by_name
Finding Objects covering at least CPU set, 138	Interoperability with OpenGL displays, 201
hwloc_get_next_obj_inside_cpuset_by_depth	hwloc_gl_get_display_osdev_by_port_device
Finding Objects inside a CPU set, 135	Interoperability with OpenGL displays, 201
hwloc_get_next_obj_inside_cpuset_by_type	hwloc_hide_errors
Finding Objects inside a CPU set, 136	Components and Plugins: Core functions to be
hwloc_get_next_osdev	used by components, 221
Finding I/O objects, 155	hwloc_ibv_get_device_cpuset
hwloc_get_next_pcidev	Interoperability with OpenFabrics, 204
Finding I/O objects, 155	hwloc_ibv_get_device_osdev
hwloc_get_non_io_ancestor_obj	Interoperability with OpenFabrics, 204
Finding I/O objects, 156	hwloc_ibv_get_device_osdev_by_name

Interoperability with OpenFabrics, 204	infos, 251
hwloc_info_s, 245	infos_count, 251
name, 245	io_arity, 251
value, 246	io_first_child, 251
hwloc_insert_object_by_cpuset	last_child, 251
Components and Plugins: Core functions to be	logical_index, 252
used by components, 221	memory_arity, 252
hwloc_insert_object_by_parent	memory_first_child, 252
Components and Plugins: Core functions to be	misc_arity, 252
used by components, 221	misc_first_child, 252
hwloc_intel_mic_get_device_cpuset	name, 252
Interoperability with Intel Xeon Phi (MIC), 203	next_cousin, 253
hwloc_intel_mic_get_device_osdev_by_index	next_sibling, 253
Interoperability with Intel Xeon Phi (MIC), 203	nodeset, 253
hwloc_linux_get_tid_cpubind	os_index, 253
Linux-specific helpers, 186	parent, 254
hwloc_linux_get_tid_last_cpu_location	prev_cousin, 254
Linux-specific helpers, 186	prev_sibling, 254
hwloc_linux_read_path_as_cpumask	sibling_rank, 254
Linux-specific helpers, 186	subtype, 254
hwloc_linux_set_tid_cpubind	symmetric_subtree, 254
Linux-specific helpers, 187	total_memory, 255
hwloc_membind_flags_t	type, 255
Memory binding, 112	userdata, 255
hwloc_membind_policy_t	hwloc_obj_add_children_sets
Memory binding, 113	Components and Plugins: Core functions to be
hwloc_nodeset_from_linux_libnuma_bitmask	used by components, 222
Interoperability with Linux libnuma bitmask, 190	hwloc_obj_add_info
hwloc_nodeset_from_linux_libnuma_ulongs	Consulting and Adding Key-Value Info Attributes,
Interoperability with Linux libnuma unsigned long	105
masks, 189	hwloc_obj_add_other_obj_sets
hwloc_nodeset_t	Modifying a loaded Topology, 130
Object Sets (hwloc_cpuset_t and hwloc_nodeset ←	hwloc_obj_attr_snprintf
_t), 87	Converting between Object Types and Attributes,
hwloc_nodeset_to_linux_libnuma_bitmask	and Strings, 102
Interoperability with Linux libnuma bitmask, 191	hwloc_obj_attr_u, 255
hwloc_nodeset_to_linux_libnuma_ulongs	bridge, 256
Interoperability with Linux libnuma unsigned long	cache, 256
masks, 189	group, 256
hwloc_nvml_get_device_cpuset	numanode, 256
Interoperability with the NVIDIA Management Li-	osdev, 256
brary, 199	pcidev, 256
hwloc_nvml_get_device_osdev	hwloc_obj_attr_u::hwloc_bridge_attr_s, 233
Interoperability with the NVIDIA Management Li-	depth, 233
brary, 199	domain, 233
hwloc_nvml_get_device_osdev_by_index	downstream, 234
Interoperability with the NVIDIA Management Li-	downstream_type, 234
brary, 199	pci, 234
hwloc_obj, 248	secondary_bus, 234
arity, 249	subordinate_bus, 234
attr, 249	upstream, 234
children, 249	upstream_type, 234
complete_cpuset, 249	hwloc_obj_attr_u::hwloc_cache_attr_s, 235
complete_nodeset, 249	associativity, 235
cpuset, 250	depth, 235 linesize, 235
depth, 250	
first_child, 250 gp_index, 251	size, 236
yp mucx, 401	type, 236

hwloc_obj_attr_u::hwloc_group_attr_s, 244 depth, 244 dont_merge, 244	hwloc_obj_type_snprintf Converting between Object Types and Attributes, and Strings, 102
kind, 245	hwloc_obj_type_string
subkind, 245	Converting between Object Types and Attributes,
hwloc_obj_attr_u::hwloc_numanode_attr_s, 247	and Strings, 103
local_memory, 247	hwloc_obj_type_t
page_types, 247	Object Types, 90
page_types_len, 247	hwloc_opencl_get_device_cpuset
hwloc_obj_attr_u::hwloc_numanode_attr_s::hwloc_	Interoperability with OpenCL, 193
memory_page_type_s, 246	hwloc_opencl_get_device_osdev
count, 246	Interoperability with OpenCL, 193
size, 246	hwloc_opencl_get_device_osdev_by_index
hwloc_obj_attr_u::hwloc_osdev_attr_s, 257	Interoperability with OpenCL, 194
type, 257	hwloc_opencl_get_device_pci_busid
hwloc_obj_attr_u::hwloc_pcidev_attr_s, 257	Interoperability with OpenCL, 194
bus, 258	hwloc_pci_find_parent_by_busid
class_id, 258	Components and Plugins: finding PCI objects dur-
dev, 258	ing other discoveries, 228
device_id, 258	hwloc_pcidisc_check_bridge_type
domain, 258	Components and Plugins: helpers for PCI discov-
func, 259	ery, 226
linkspeed, 259	hwloc_pcidisc_find_bridge_buses
revision, 259	Components and Plugins: helpers for PCI discov-
subdevice_id, 259	ery, 226
subvendor_id, 259	hwloc_pcidisc_find_cap
vendor_id, 259	Components and Plugins: helpers for PCI discov-
hwloc_obj_bridge_type_e	ery, 226
Object Types, 89	hwloc_pcidisc_find_linkspeed
hwloc_obj_bridge_type_t	Components and Plugins: helpers for PCI discov-
Object Types, 89	ery, 227
hwloc_obj_cache_type_e	hwloc_pcidisc_tree_attach
Object Types, 90	Components and Plugins: helpers for PCI discov-
hwloc_obj_cache_type_t	ery, 227
Object Types, 89	hwloc_pcidisc_tree_insert_by_busid
hwloc_obj_get_info_by_name	Components and Plugins: helpers for PCI discov-
Consulting and Adding Key-Value Info Attributes,	ery, 227
105	hwloc_plugin_check_namespace
hwloc_obj_is_in_subtree	Components and Plugins: Core functions to be
Looking at Ancestor and Child Objects, 141	used by components, 222
hwloc_obj_osdev_type_e	hwloc_report_error_t
Object Types, 90	Components and Plugins: Core functions to be
hwloc_obj_osdev_type_t	used by components, 220
Object Types, 89	hwloc_report_os_error
hwloc_obj_t	Components and Plugins: Core functions to be
Object Structure and Attributes, 93	used by components, 222
hwloc_obj_type_is_cache	hwloc_restrict_flags_e
Kinds of object Type, 142	Modifying a loaded Topology, 130
hwloc_obj_type_is_dcache	hwloc_set_area_membind
Kinds of object Type, 142	Memory binding, 118
hwloc_obj_type_is_icache	hwloc_set_cpubind
Kinds of object Type, 142	CPU binding, 109
hwloc_obj_type_is_io	hwloc_set_membind
Kinds of object Type, 143	Memory binding, 118
hwloc_obj_type_is_memory	hwloc_set_proc_cpubind
Kinds of object Type, 143	CPU binding, 109
hwloc_obj_type_is_normal	hwloc_set_proc_membind
Kinds of object Type, 143	Memory binding, 118

hwloc_set_thread_cpubind	type, 263
CPU binding, 110	hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_←
hwloc_shmem_topology_adopt	obj_attr_string_s, 264
Sharing topologies between processes, 213	name, 264
hwloc_shmem_topology_get_length	newvalue, 264
Sharing topologies between processes, 214	oldvalue, 265
hwloc_shmem_topology_write	type, 265
Sharing topologies between processes, 214	hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_c
hwloc_topology_abi_check	obj_attr_uint64_s, 266
Topology Creation and Destruction, 94	index, 266
hwloc_topology_alloc_group_object	newvalue, 267
Modifying a loaded Topology, 130	oldvalue, 267
hwloc_topology_allow	type, 267
Modifying a loaded Topology, 131	hwloc_topology_diff_t
hwloc_topology_check	Topology differences, 207
Topology Creation and Destruction, 94	hwloc_topology_diff_type_e
hwloc_topology_components_flag_e	Topology differences, 209
Changing the Source of Topology Discovery, 120	hwloc_topology_diff_type_t
hwloc_topology_cpubind_support, 260	Topology differences, 207
get_proc_cpubind, 260	hwloc_topology_diff_u, 268
get_proc_last_cpu_location, 260	generic, 269
get_thisproc_cpubind, 260	obj_attr, 269
get_thisproc_last_cpu_location, 260	too_complex, 269
get_thisthread_cpubind, 261	hwloc_topology_diff_u::hwloc_topology_diff_generic_s,
get_thisthread_last_cpu_location, 261	262
get_thread_cpubind, 261	next, 262
set_proc_cpubind, 261	type, 262
set_thisproc_cpubind, 261	hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s,
set_thisthread_cpubind, 261	263
set_thread_cpubind, 261	diff, 263
hwloc_topology_destroy	next, 263
Topology Creation and Destruction, 95	obj_depth, 263
hwloc_topology_diff_apply	obj_index, 264
Topology differences, 209	type, 264
hwloc_topology_diff_apply_flags_e	hwloc_topology_diff_u::hwloc_topology_diff_too_
Topology differences, 207	complex_s, 267
hwloc_topology_diff_build	next, 267
Topology differences, 210	obj_depth, 268
hwloc_topology_diff_destroy	obj_index, 268
Topology differences, 210	type, 268
hwloc_topology_diff_export_xml	hwloc_topology_discovery_support, 269
Topology differences, 210	disallowed_numa, 269
hwloc_topology_diff_export_xmlbuffer	disallowed_pu, 270
Topology differences, 211	numa, 270
hwloc_topology_diff_load_xml	numa_memory, 270
Topology differences, 211	pu, 270
hwloc_topology_diff_load_xmlbuffer	hwloc_topology_dup
Topology differences, 211	Topology Creation and Destruction, 95
hwloc_topology_diff_obj_attr_type_e	hwloc_topology_export_synthetic
Topology differences, 207	Exporting Topologies to Synthetic, 179
hwloc_topology_diff_obj_attr_type_t	hwloc_topology_export_synthetic_flags_e
Topology differences, 207	Exporting Topologies to Synthetic, 178
hwloc_topology_diff_obj_attr_u, 265	hwloc_topology_export_xml
generic, 265	Exporting Topologies to XML, 175
string, 266	hwloc_topology_export_xml_flags_e
uint64, 266	Exporting Topologies to XML, 174
hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_	hwloc_topology_export_xmlbuffer
obj_attr_generic_s, 262	Exporting Topologies to XML, 176

hwloc_topology_flags_e Topology Detection Configuration and Query, 123	Topology Detection Configuration and Query, 127 hwloc_topology_set_components
hwloc_topology_get_allowed_cpuset	Changing the Source of Topology Discovery, 120
CPU and node sets of entire topologies, 151	hwloc_topology_set_flags
hwloc_topology_get_allowed_nodeset	Topology Detection Configuration and Query, 127
CPU and node sets of entire topologies, 151	hwloc_topology_set_icache_types_filter
hwloc_topology_get_complete_cpuset	Topology Detection Configuration and Query, 128
CPU and node sets of entire topologies, 151	hwloc_topology_set_io_types_filter
hwloc_topology_get_complete_nodeset	Topology Detection Configuration and Query, 128
CPU and node sets of entire topologies, 152	hwloc_topology_set_pid
hwloc_topology_get_depth	Changing the Source of Topology Discovery, 121
Object levels, depths and types, 101	hwloc_topology_set_synthetic
hwloc_topology_get_flags	Changing the Source of Topology Discovery, 121
Topology Detection Configuration and Query, 126	hwloc_topology_set_type_filter
hwloc_topology_get_support	Topology Detection Configuration and Query, 128
Topology Detection Configuration and Query, 126	hwloc_topology_set_userdata
hwloc_topology_get_topology_cpuset	Topology Detection Configuration and Query, 128
CPU and node sets of entire topologies, 152	hwloc_topology_set_userdata_export_callback
hwloc_topology_get_topology_nodeset	Exporting Topologies to XML, 177
CPU and node sets of entire topologies, 152	hwloc_topology_set_userdata_import_callback
hwloc_topology_get_type_filter	Exporting Topologies to XML, 177
Topology Detection Configuration and Query, 126	hwloc_topology_set_xml
hwloc_topology_get_userdata	Changing the Source of Topology Discovery, 121
Topology Detection Configuration and Query, 127	hwloc_topology_set_xmlbuffer
hwloc_topology_init	Changing the Source of Topology Discovery, 122
Topology Creation and Destruction, 95	hwloc_topology_support, 273
hwloc_topology_insert_group_object	cpubind, 274
Modifying a loaded Topology, 131	discovery, 274
hwloc_topology_insert_misc_object	membind, 274
Modifying a loaded Topology, 132	hwloc_topology_t
hwloc_topology_is_thissystem	Topology Creation and Destruction, 94
Topology Detection Configuration and Query, 127	hwloc_type_filter_e
hwloc_topology_load	Topology Detection Configuration and Query, 125
Topology Creation and Destruction, 96	hwloc_type_sscanf Converting between Object Types and Attributes,
hwloc_topology_membind_support, 270	and Strings, 103
alloc_membind, 271	hwloc_type_sscanf_as_depth
bind_membind, 271	Converting between Object Types and Attributes,
firsttouch_membind, 271	and Strings, 104
get_area_membind, 271	and offings, 104
get_area_memlocation, 272	index
get_proc_membind, 272	hwloc_topology_diff_obj_attr_u::hwloc_topology ←
get_thisproc_membind, 272	_diff_obj_attr_uint64_s, 266
get_thisthread_membind, 272	infos
interleave_membind, 272	hwloc_obj, 251
migrate_membind, 272	infos_count
nexttouch_membind, 272	hwloc_obj, 251
set_area_membind, 272	init
set_proc_membind, 273	hwloc_component, 239
set_thisproc_membind, 273	instantiate
set_thisthread_membind, 273	hwloc_disc_component, 241
hwloc_topology_reconnect	interleave_membind
Components and Plugins: Core functions to be	hwloc_topology_membind_support, 272
used by components, 223	Interoperability with glibc sched affinity, 192
hwloc_topology_restrict	hwloc_cpuset_from_glibc_sched_affinity, 192
Modifying a loaded Topology, 132	hwloc_cpuset_to_glibc_sched_affinity, 192
hwloc_topology_set_all_types_filter Topology Detection Configuration and Query, 127	Interoperability with Intel Xeon Phi (MIC), 203 hwloc_intel_mic_get_device_cpuset, 203
hwloc_topology_set_cache_types_filter	hwloc_intel_mic_get_device_osdev_by_index, 203

Interoperability with Linux libnuma bitmask, 190 hwloc cpuset from linux libnuma bitmask, 190	hwloc_obj, 251 linesize
hwloc_cpuset_to_linux_libnuma_bitmask, 190	hwloc_obj_attr_u::hwloc_cache_attr_s, 235
hwloc_nodeset_from_linux_libnuma_bitmask, 190	linkspeed
hwloc_nodeset_to_linux_libnuma_bitmask, 191	hwloc_obj_attr_u::hwloc_pcidev_attr_s, 259
Interoperability with Linux libnuma unsigned long masks,	Linux-specific helpers, 186
188	hwloc_linux_get_tid_cpubind, 186
hwloc_cpuset_from_linux_libnuma_ulongs, 188	hwloc_linux_get_tid_last_cpu_location, 186
hwloc_cpuset_to_linux_libnuma_ulongs, 188	hwloc_linux_read_path_as_cpumask, 186
hwloc_nodeset_from_linux_libnuma_ulongs, 189	hwloc_linux_set_tid_cpubind, 187
hwloc_nodeset_to_linux_libnuma_ulongs, 189	local_memory
Interoperability with OpenCL, 193	hwloc_obj_attr_u::hwloc_numanode_attr_s, 247
hwloc_opencl_get_device_cpuset, 193	logical_index
hwloc_opencl_get_device_osdev, 193	hwloc_obj, 252
hwloc_opencl_get_device_osdev_by_index, 194	Looking at Ancestor and Child Objects, 140
hwloc_opencl_get_device_pci_busid, 194	hwloc_get_ancestor_obj_by_depth, 140 hwloc get ancestor obj by type, 140
Interoperability with OpenFabrics, 204	
hwloc_ibv_get_device_cpuset, 204 hwloc_ibv_get_device_osdev, 204	hwloc_get_common_ancestor_obj, 140 hwloc_get_next_child, 141
hwloc_ibv_get_device_osdev_by_name, 204	hwloc obj is in subtree, 141
Interoperability with OpenGL displays, 201	Looking at Cache Objects, 144
hwloc_gl_get_display_by_osdev, 201	hwloc get_cache_covering_cpuset, 144
hwloc_gl_get_display_osdev_by_name, 201	hwloc_get_cache_type_depth, 144
hwloc_gl_get_display_osdev_by_port_device, 201	hwloc_get_shared_cache_covering_obj, 144
Interoperability with the CUDA Driver API, 195	nwioo_got_onaroa_oaono_oovoniig_obj, 1111
hwloc_cuda_get_device_cpuset, 195	membind
hwloc_cuda_get_device_osdev, 195	hwloc_topology_support, 274
hwloc_cuda_get_device_osdev_by_index, 195	Memory binding, 111
hwloc_cuda_get_device_pci_ids, 196	hwloc_alloc, 114
hwloc_cuda_get_device_pcidev, 196	hwloc_alloc_membind, 114
Interoperability with the CUDA Runtime API, 197	hwloc_alloc_membind_policy, 115
hwloc_cudart_get_device_cpuset, 197	hwloc_free, 115
hwloc_cudart_get_device_osdev_by_index, 197	hwloc_get_area_membind, 115
hwloc cudart get device pci ids, 197	hwloc_get_area_memlocation, 116
hwloc_cudart_get_device_pcidev, 198	hwloc_get_membind, 116
Interoperability with the NVIDIA Management Library,	hwloc_get_proc_membind, 117
199	hwloc_membind_flags_t, 112
hwloc_nvml_get_device_cpuset, 199	hwloc_membind_policy_t, 113
hwloc_nvml_get_device_osdev, 199	hwloc_set_area_membind, 118
hwloc_nvml_get_device_osdev_by_index, 199	hwloc_set_membind, 118
io_arity	hwloc_set_proc_membind, 118
hwloc_obj, 251	memory_arity
io_first_child	hwloc_obj, 252
hwloc_obj, 251	memory_first_child
is_thissystem	hwloc_obj, 252 migrate_membind
hwloc_backend, 232	hwloc_topology_membind_support, 272
liin al	misc_arity
kind	hwloc_obj, 252
hwloo_distances_s, 243	misc_first_child
hwloc_obj_attr_u::hwloc_group_attr_s, 245	hwloc_obj, 252
Kinds of object Type, 142	Modifying a loaded Topology, 129
hwloc_obj_type_is_cache, 142 hwloc_obj_type_is_dcache, 142	hwloc_allow_flags_e, 129
hwloc_obj_type_is_icache, 142	hwloc_obj_add_other_obj_sets, 130
hwloc_obj_type_is_io, 143	hwloc_restrict_flags_e, 130
hwloc_obj_type_is_nemory, 143	hwloc_topology_alloc_group_object, 130
hwloc_obj_type_is_normal, 143	hwloc_topology_allow, 131
mioc_obj_typo_is_normal, 170	hwloc_topology_insert_group_object, 131
last_child	hwloc_topology_insert_misc_object, 132

hwloc_topology_restrict, 132	hwloc_get_root_obj, 99 hwloc_get_type_depth, 100
name	hwloc_get_type_depth_e, 97
hwloc_disc_component, 241	
hwloc_info_s, 245	hwloc_get_type_or_above_depth, 100
hwloc_obj, 252	hwloc_get_type_or_below_depth, 100
_ ·	hwloc_topology_get_depth, 101
hwloc_topology_diff_obj_attr_u::hwloc_topology ←	Object Sets (hwloc_cpuset_t and hwloc_nodeset_t), 87
_diff_obj_attr_string_s, 264	hwloc_const_cpuset_t, 87
nbobjs	hwloc_const_nodeset_t, 87
hwloc_distances_s, 243	hwloc_cpuset_t, 87
Netloc API, 229	hwloc_nodeset_t, 87
newvalue	Object Structure and Attributes, 93
hwloc_topology_diff_obj_attr_u::hwloc_topology←	hwloc_obj_t, 93
_diff_obj_attr_string_s, 264	Object Types, 88
hwloc_topology_diff_obj_attr_u::hwloc_topology↔	HWLOC_OBJ_TYPE_MIN, 88
_diff_obj_attr_uint64_s, 267	hwloc_compare_types, 92
next	hwloc_compare_types_e, 89
hwloc_topology_diff_u::hwloc_topology_diff_←	hwloc_obj_bridge_type_e, 89
generic_s, 262	hwloc_obj_bridge_type_t, 89
hwloc_topology_diff_u::hwloc_topology_diff_obj←	hwloc_obj_cache_type_e, 90
_attr_s, 263	hwloc obj cache type t, 89
hwloc_topology_diff_u::hwloc_topology_diff_too←	hwloc_obj_osdev_type_e, 90
_complex_s, 267	hwloc_obj_osdev_type_t, 89
next_cousin	hwloc obj type t, 90
hwloc_obj, 253	objs
next_sibling	hwloc_distances_s, 243
hwloc_obj, 253	oldvalue
nexttouch_membind	hwloc_topology_diff_obj_attr_u::hwloc_topology-
hwloc_topology_membind_support, 272	_diff_obj_attr_string_s, 265
nodeset	
hwloc_obj, 253	hwloc_topology_diff_obj_attr_u::hwloc_topology
numa	_diff_obj_attr_uint64_s, 267
hwloc_topology_discovery_support, 270	os_index
	hwloc_obj, 253
numa_memory	osdev
hwloc_topology_discovery_support, 270 numanode	hwloc_obj_attr_u, 256
	page_types
hwloc_obj_attr_u, 256	hwloc_obj_attr_u::hwloc_numanode_attr_s, 247
obj_attr	page_types_len
hwloc_topology_diff_u, 269	hwloc obj attr u::hwloc numanode attr s, 247
obj_depth	
	parent 254
hwloc_topology_diff_u::hwloc_topology_diff_obj	hwloc_obj, 254
_attr_s, 263	pci
hwloc_topology_diff_u::hwloc_topology_diff_too ←	hwloc_obj_attr_u::hwloc_bridge_attr_s, 234
_complex_s, 268	pcidev
obj_index	hwloc_obj_attr_u, 256
hwloc_topology_diff_u::hwloc_topology_diff_obj←	pcie
_attr_s, 264	hwloc_cl_device_topology_amd, 237
hwloc_topology_diff_u::hwloc_topology_diff_too⊷	phase
_complex_s, 268	hwloc_disc_status, 242
Object levels, depths and types, 97	phases
hwloc_get_depth_type, 98	hwloc_backend, 232
hwloc_get_memory_parents_depth, 98	hwloc_disc_component, 241
hwloc_get_nbobjs_by_depth, 98	prev_cousin
hwloc_get_nbobjs_by_type, 98	hwloc_obj, 254
hwloc_get_next_obj_by_depth, 99	prev_sibling
hwloc_get_next_obj_by_type, 99	hwloc_obj, 254
hwloc_get_obj_by_depth, 99	priority
hwloc_get_obj_by_type, 99	hwloc_disc_component, 241
	'

private_data	hwloc_obj, 254
hwloc_backend, 232	The bitmen ADI 457
pu	The bitmap API, 157
hwloc_topology_discovery_support, 270	hwloc_bitmap_allbut, 159
	hwloc_bitmap_alloc, 160
raw	hwloc_bitmap_alloc_full, 160
hwloc_cl_device_topology_amd, 237	hwloc_bitmap_and, 160
Retrieve distances between objects, 180	hwloc_bitmap_andnot, 160
hwloc_distances_get, 181	hwloc_bitmap_asprintf, 160
hwloc_distances_get_by_depth, 181	hwloc_bitmap_clr, 161
hwloc_distances_get_by_name, 182	hwloc_bitmap_clr_range, 161
hwloc_distances_get_by_type, 182	hwloc_bitmap_compare, 161
hwloc_distances_get_name, 182	hwloc_bitmap_compare_first, 161
hwloc_distances_kind_e, 180	hwloc_bitmap_copy, 162
hwloc_distances_release, 182	hwloc_bitmap_dup, 162
revision	hwloc_bitmap_fill, 162
hwloc_obj_attr_u::hwloc_pcidev_attr_s, 259	hwloc_bitmap_first, 162
	hwloc_bitmap_first_unset, 163
secondary_bus	hwloc_bitmap_foreach_begin, 158
hwloc_obj_attr_u::hwloc_bridge_attr_s, 234	hwloc_bitmap_foreach_end, 159
set_area_membind	hwloc_bitmap_free, 163
hwloc_topology_membind_support, 272	hwloc_bitmap_from_ith_ulong, 163
set_proc_cpubind	hwloc_bitmap_from_ulong, 163
hwloc_topology_cpubind_support, 261	hwloc_bitmap_from_ulongs, 164
set_proc_membind	hwloc_bitmap_intersects, 164
hwloc_topology_membind_support, 273	hwloc_bitmap_isequal, 164
set_thisproc_cpubind	hwloc_bitmap_isfull, 164
hwloc_topology_cpubind_support, 261	hwloc_bitmap_isincluded, 165
set_thisproc_membind	hwloc_bitmap_isset, 165
hwloc_topology_membind_support, 273	hwloc_bitmap_iszero, 165
set_thisthread_cpubind	hwloc_bitmap_last, 166
hwloc_topology_cpubind_support, 261	hwloc_bitmap_last_unset, 166
set_thisthread_membind	hwloc_bitmap_list_asprintf, 166
hwloc_topology_membind_support, 273	hwloc_bitmap_list_snprintf, 166
set_thread_cpubind	hwloc bitmap list sscanf, 167
hwloc_topology_cpubind_support, 261	hwloc_bitmap_next, 167
Sharing topologies between processes, 213	hwloc bitmap next unset, 167
hwloc_shmem_topology_adopt, 213	hwloc_bitmap_not, 168
hwloc_shmem_topology_get_length, 214	hwloc_bitmap_nr_ulongs, 168
hwloc_shmem_topology_write, 214	hwloc_bitmap_only, 168
sibling_rank	hwloc_bitmap_or, 168
hwloc obj, 254	hwloc bitmap set, 169
size	hwloc_bitmap_set_ith_ulong, 169
hwloc_obj_attr_u::hwloc_cache_attr_s, 236	hwloc_bitmap_set_range, 169
hwloc_obj_attr_u::hwloc_numanode_attr_s⇔	hwloc_bitmap_singlify, 169
_ •	
::hwloc_memory_page_type_s, 246	hwloc_bitmap_snprintf, 170
string	hwloc_bitmap_sscanf, 170
hwloc_topology_diff_obj_attr_u, 266	hwloc_bitmap_t, 159
subdevice_id	hwloc_bitmap_taskset_asprintf, 170
hwloc_obj_attr_u::hwloc_pcidev_attr_s, 259	hwloc_bitmap_taskset_snprintf, 171
subkind	hwloc_bitmap_taskset_sscanf, 171
hwloc_obj_attr_u::hwloc_group_attr_s, 245	hwloc_bitmap_to_ith_ulong, 171
subordinate_bus	hwloc_bitmap_to_ulong, 172
hwloc_obj_attr_u::hwloc_bridge_attr_s, 234	hwloc_bitmap_to_ulongs, 172
subtype	hwloc_bitmap_weight, 172
hwloc_obj, 254	hwloc_bitmap_xor, 172
subvendor_id	hwloc_bitmap_zero, 173
hwloc_obj_attr_u::hwloc_pcidev_attr_s, 259	hwloc_const_bitmap_t, 159
symmetric_subtree	too_complex

hwloc_topology_diff_u, 269	uint64
Topology Creation and Destruction, 94	hwloc_topology_diff_obj_attr_u, 266
hwloc_topology_abi_check, 94	unused
hwloc_topology_check, 94	hwloc_cl_device_topology_amd, 237
hwloc topology destroy, 95	upstream
hwloc_topology_dup, 95	hwloc_obj_attr_u::hwloc_bridge_attr_s, 234
hwloc_topology_init, 95	upstream_type
hwloc_topology_load, 96	hwloc_obj_attr_u::hwloc_bridge_attr_s, 234
hwloc_topology_t, 94	userdata
Topology Detection Configuration and Query, 123	hwloc_obj, 255
hwloc_topology_flags_e, 123	- ,
hwloc_topology_get_flags, 126	value
hwloc_topology_get_support, 126	hwloc_info_s, 246
hwloc_topology_get_type_filter, 126	values
hwloc_topology_get_userdata, 127	hwloc_distances_s, 244
hwloc_topology_is_thissystem, 127	vendor_id
hwloc_topology_set_all_types_filter, 127	hwloc_obj_attr_u::hwloc_pcidev_attr_s, 259
hwloc topology set cache types filter, 127	
hwloc_topology_set_flags, 127	
hwloc_topology_set_icache_types_filter, 128	
hwloc_topology_set_io_types_filter, 128	
hwloc_topology_set_type_filter, 128	
hwloc_topology_set_userdata, 128	
hwloc type filter e, 125	
Topology differences, 206	
hwloc_topology_diff_apply, 209	
hwloc_topology_diff_apply_flags_e, 207	
hwloc_topology_diff_build, 210	
hwloc_topology_diff_destroy, 210	
hwloc_topology_diff_export_xml, 210	
hwloc_topology_diff_export_xmlbuffer, 211	
hwloc_topology_diff_load_xml, 211	
hwloc_topology_diff_load_xmlbuffer, 211	
hwloc_topology_diff_obj_attr_type_e, 207	
hwloc_topology_diff_obj_attr_type_t, 207	
hwloc_topology_diff_t, 207	
hwloc_topology_diff_type_e, 209	
hwloc_topology_diff_type_t, 207	
total_memory	
hwloc_obj, 255	
hwloc_cl_device_topology_amd, 237	
hwloc_component, 239	
hwloc obj, 255	
hwloc_obj_attr_u::hwloc_cache_attr_s, 236	
hwloc_obj_attr_u::hwloc_osdev_attr_s, 257	
hwloc_topology_diff_obj_attr_u::hwloc_topology↔	
_diff_obj_attr_generic_s, 263	
hwloc_topology_diff_obj_attr_u::hwloc_topology↔	
_diff_obj_attr_string_s, 265	
hwloc_topology_diff_obj_attr_u::hwloc_topology↔	
_diff_obj_attr_uint64_s, 267	
hwloc_topology_diff_u::hwloc_topology_diff_ ←	
generic_s, 262	
hwloc_topology_diff_u::hwloc_topology_diff_obj↔	
_attr_s, 264	
hwloc_topology_diff_u::hwloc_topology_diff_too↔	
_complex_s, 268	
· · · · · · · · · · · · · · · · · · ·	