Hardware Locality (hwloc) 2.3.0rc1

Generated by Doxygen 1.8.18

1 Hardware Locality	1
1.1 Introduction	. 1
1.2 Installation	. 1
1.2.1 Basic Installation	. 1
1.2.2 Installing from a Git clone	. 2
1.3 Questions and Bugs	. 2
2 Hardware Locality (hwloc) Introduction	3
2.1 hwloc Summary	. 3
2.2 hwloc Installation	. 4
2.3 Command-line Examples	. 5
2.4 Programming Interface	. 7
2.4.1 Portability	. 7
2.4.2 API Example	. 8
2.5 History / Credits	. 10
2.6 Further Reading	. 10
3 Terms and Definitions	13
3.1 Objects	. 13
3.2 Indexes and Sets	. 13
3.3 Hierarchy, Tree and Levels	. 14
4 Command-Line Tools	17
4.1 Istopo and Istopo-no-graphics	. 17
4.2 hwloc-bind	. 17
4.3 hwloc-calc	. 17
4.4 hwloc-info	. 18
4.5 hwloc-distrib	. 18
4.6 hwloc-ps	. 18
4.7 hwloc-annotate	. 18
4.8 hwloc-diff, hwloc-patch and hwloc-compress-dir	. 18
4.9 hwloc-dump-hwdata	. 18
4.10 hwloc-gather-topology and hwloc-gather-cpuid	. 18
5 Environment Variables	19
6 CPU and Memory Binding Overview	23
7 I/O Devices	25
7.1 Enabling and requirements	_
7.2 I/O objects	
7.3 OS devices	
7.4 PCI devices and bridges	

7.6 Examples	27
8 Miscellaneous objects	31
8.1 Misc objects added by hwloc	31
8.2 Annotating topologies with Misc objects	31
9 Object attributes	33
9.1 Normal attributes	33
9.2 Custom string infos	33
9.2.1 Hardware Platform Information	33
9.2.2 Operating System Information	34
9.2.3 hwloc Information	34
9.2.4 CPU Information	34
9.2.5 OS Device Information	34
9.2.6 Other Object-specific Information	35
9.2.7 User-Given Information	35
10 Importing and exporting topologies from/to XML files	37
10.1 libxml2 and minimalistic XML backends	37
10.2 XML import error management	38
11 Synthetic topologies	39
11.1 Synthetic description string	39
11.2 Loading a synthetic topology	40
11.3 Exporting a topology as a synthetic string	40
12 Interoperability With Other Software	<b>4</b> 1
13 Thread Safety	43
14 Components and plugins	45
14.1 Components enabled by default	45
14.2 Selecting which components to use	45
14.3 Loading components from plugins	46
14.4 Existing components and plugins	46
15 Embedding hwloc in Other Software	49
15.1 Using hwloc's M4 Embedding Capabilities	49
15.2 Example Embedding hwloc	50
16 Frequently Asked Questions	53
16.1 Concepts	53
16.1.1 I only need binding, why should I use hwloc?	53
16.1.2 Should I use logical or physical/OS indexes? and how?	53
16.1.3 hwloc is only a structural model, it ignores performance models, memory bandwidth, etc.?	? . 54
16.1.4 hwloc only has a one-dimensional view of the architecture, it ignores distances?	54

16.1.5 What are these Group objects in my topology?	54
16.1.6 What happens if my topology is asymmetric?	55
16.1.7 What happens to my topology if I disable symmetric multithreading, hyper-threading, etc. in the system?	55
16.1.8 How may I ignore symmetric multithreading, hyper-threading, etc. in hwloc?	56
16.2 Advanced	56
16.2.1 I do not want hwloc to rediscover my enormous machine topology every time I rerun a process	56
16.2.2 How many topologies may I use in my program?	57
16.2.3 How to avoid memory waste when manipulating multiple similar topologies?	57
16.2.4 How do I annotate the topology with private notes?	57
16.3 Caveats	57
16.3.1 Why is hwloc slow?	57
16.3.2 Does hwloc require privileged access?	58
16.3.3 What should I do when hwloc reports "operating system" warnings?	58
16.3.4 Why does Valgrind complain about hwloc memory leaks?	59
16.4 Platform-specific	59
16.4.1 How do I find the local MCDRAM NUMA node on Intel Xeon Phi processor?	59
16.4.2 Why do I need hwloc-dump-hwdata for memory on Intel Xeon Phi processor?	59
16.4.3 How do I build hwloc for BlueGene/Q?	60
16.4.4 How do I build hwloc for Windows?	60
16.4.5 How to get useful topology information on NetBSD?	60
16.4.6 Why does binding fail on AIX?	60
16.5 Compatibility between hwloc versions	60
16.5.1 How do I handle API changes?	60
16.5.2 What is the difference between API and library version numbers?	61
16.5.3 How do I handle ABI breaks?	61
16.5.4 Are XML topology files compatible between hwloc releases?	61
16.5.5 Are synthetic strings compatible between hwloc releases?	62
16.5.6 Is it possible to share a shared-memory topology between different hwloc releases?	62
17 Upgrading to the hwloc 2.0 API	63
17.1 New Organization of NUMA nodes and Memory	63
17.1.1 Memory children	63
17.1.2 Examples	63
17.1.3 NUMA level and depth	64
17.1.4 Finding Local NUMA nodes and looking at Children and Parents	64
17.2 4 Kinds of Objects and Children	65
17.2.1 I/O and Misc children	65
17.2.2 Kinds of objects	65
17.3 HWLOC_OBJ_CACHE replaced	65
17.4 allowed_cpuset and allowed_nodeset only in the main topology	66
17.5 Object depths are now signed int	66
17.6 Memory attributes become NUMANode-specific	66

17.7 Topology configuration changes	 66
17.8 XML changes	 66
17.9 Distances API totally rewritten	 67
17.10 Return values of functions	 67
17.11 Misc API changes	 67
17.12 API removals and deprecations	 68
18 Network Locality (netloc)	69
18.1 Netloc Summary	 69
18.1.1 Supported Networks	 69
18.2 Netloc Installation	 69
18.3 Setup	 70
18.4 Topology display	 71
18.4.1 Generate the JSON file	 71
18.4.2 Using netloc_draw	 71
19 Netloc with Scotch	73
19.1 Introduction	 73
19.2 Setup	 73
19.3 Tools and API	 73
19.3.1 Build Scotch architectures	 73
19.3.2 Build Scotch sub-architectures	 73
19.3.3 Mapping of processes	 74
20 Module Index	75
20.1 Modules	 75
21 Data Structure Index	77
21.1 Data Structures	 77
22 Module Documentation	79
22.1 API version	 79
22.1.1 Detailed Description	 79
22.1.2 Macro Definition Documentation	 79
22.1.2.1 HWLOC_API_VERSION	 79
22.1.2.2 HWLOC_COMPONENT_ABI	 79
22.1.3 Function Documentation	 79
22.1.3.1 hwloc_get_api_version()	 79
22.2 Object Sets (hwloc_cpuset_t and hwloc_nodeset_t)	 80
22.2.1 Detailed Description	 80
22.2.2 Typedef Documentation	 80
22.2.2.1 hwloc_const_cpuset_t	 80
22.2.2.2 hwloc_const_nodeset_t	 80
22.2.2.3 hwloc couset t	 80

22.2.2.4 hwloc_nodeset_t	80
22.3 Object Types	81
22.3.1 Detailed Description	81
22.3.2 Macro Definition Documentation	81
22.3.2.1 HWLOC_TYPE_UNORDERED	81
22.3.3 Typedef Documentation	81
22.3.3.1 hwloc_obj_bridge_type_t	81
22.3.3.2 hwloc_obj_cache_type_t	81
22.3.3.3 hwloc_obj_osdev_type_t	82
22.3.4 Enumeration Type Documentation	82
22.3.4.1 hwloc_obj_bridge_type_e	82
22.3.4.2 hwloc_obj_cache_type_e	82
22.3.4.3 hwloc_obj_osdev_type_e	82
22.3.4.4 hwloc_obj_type_t	83
22.3.5 Function Documentation	84
22.3.5.1 hwloc_compare_types()	84
22.4 Object Structure and Attributes	86
22.4.1 Detailed Description	86
22.4.2 Typedef Documentation	86
22.4.2.1 hwloc_obj_t	86
22.5 Topology Creation and Destruction	87
22.5.1 Detailed Description	87
22.5.2 Typedef Documentation	87
22.5.2.1 hwloc_topology_t	87
22.5.3 Function Documentation	87
22.5.3.1 hwloc_topology_abi_check()	87
22.5.3.2 hwloc_topology_check()	87
22.5.3.3 hwloc_topology_destroy()	88
22.5.3.4 hwloc_topology_dup()	88
22.5.3.5 hwloc_topology_init()	88
22.5.3.6 hwloc_topology_load()	88
22.6 Object levels, depths and types	90
22.6.1 Detailed Description	90
22.6.2 Enumeration Type Documentation	90
22.6.2.1 hwloc_get_type_depth_e	90
22.6.3 Function Documentation	91
22.6.3.1 hwloc_get_depth_type()	91
22.6.3.2 hwloc_get_memory_parents_depth()	91
22.6.3.3 hwloc_get_nbobjs_by_depth()	91
22.6.3.4 hwloc_get_nbobjs_by_type()	91
22.6.3.5 hwloc_get_next_obj_by_depth()	91
22.6.3.6 hwloc_get_next_obj_by_type()	92

22.6.3.7 hwloc_get_obj_by_depth()	 	92
22.6.3.8 hwloc_get_obj_by_type()	 	92
22.6.3.9 hwloc_get_root_obj()	 	92
22.6.3.10 hwloc_get_type_depth()	 	92
22.6.3.11 hwloc_get_type_or_above_depth()	 	93
22.6.3.12 hwloc_get_type_or_below_depth()	 	93
22.6.3.13 hwloc_topology_get_depth()	 	93
22.7 Converting between Object Types and Attributes, and Strings	 	94
22.7.1 Detailed Description	 	94
22.7.2 Function Documentation	 	94
22.7.2.1 hwloc_obj_attr_snprintf()	 	94
22.7.2.2 hwloc_obj_type_snprintf()	 	94
22.7.2.3 hwloc_obj_type_string()	 	95
22.7.2.4 hwloc_type_sscanf()	 	95
22.7.2.5 hwloc_type_sscanf_as_depth()	 	95
22.8 Consulting and Adding Key-Value Info Attributes	 	96
22.8.1 Detailed Description	 	96
22.8.2 Function Documentation	 	96
22.8.2.1 hwloc_obj_add_info()	 	96
22.8.2.2 hwloc_obj_get_info_by_name()	 	96
22.9 CPU binding	 	97
22.9.1 Detailed Description	 	97
22.9.2 Enumeration Type Documentation	 	97
22.9.2.1 hwloc_cpubind_flags_t	 	98
22.9.3 Function Documentation	 	98
22.9.3.1 hwloc_get_cpubind()	 	98
22.9.3.2 hwloc_get_last_cpu_location()	 	99
22.9.3.3 hwloc_get_proc_cpubind()	 	99
22.9.3.4 hwloc_get_proc_last_cpu_location()	 	99
22.9.3.5 hwloc_get_thread_cpubind()	 	99
22.9.3.6 hwloc_set_cpubind()	 	100
22.9.3.7 hwloc_set_proc_cpubind()	 	100
22.9.3.8 hwloc_set_thread_cpubind()	 	100
22.10 Memory binding	 	101
22.10.1 Detailed Description	 	101
22.10.2 Enumeration Type Documentation	 	102
22.10.2.1 hwloc_membind_flags_t	 	102
22.10.2.2 hwloc_membind_policy_t	 	103
22.10.3 Function Documentation	 	103
22.10.3.1 hwloc_alloc()	 	103
22.10.3.2 hwloc_alloc_membind()	 	104
22.10.3.3 hwloc alloc membind policy()	 	104

22.10.3.4 hwloc_free()	04
22.10.3.5 hwloc_get_area_membind()	04
22.10.3.6 hwloc_get_area_memlocation()	05
22.10.3.7 hwloc_get_membind()	05
22.10.3.8 hwloc_get_proc_membind()	06
22.10.3.9 hwloc_set_area_membind()	06
22.10.3.10 hwloc_set_membind()	06
22.10.3.11 hwloc_set_proc_membind()	07
22.11 Changing the Source of Topology Discovery	80
22.11.1 Detailed Description	80
22.11.2 Enumeration Type Documentation	80
22.11.2.1 hwloc_topology_components_flag_e	80
22.11.3 Function Documentation	80
22.11.3.1 hwloc_topology_set_components()	80
22.11.3.2 hwloc_topology_set_pid()	09
22.11.3.3 hwloc_topology_set_synthetic()	09
22.11.3.4 hwloc_topology_set_xml()	09
22.11.3.5 hwloc_topology_set_xmlbuffer()	10
22.12 Topology Detection Configuration and Query	11
22.12.1 Detailed Description	11
22.12.2 Enumeration Type Documentation	11
22.12.2.1 hwloc_topology_flags_e	11
22.12.2.2 hwloc_type_filter_e	13
22.12.3 Function Documentation	14
22.12.3.1 hwloc_topology_get_flags()	14
22.12.3.2 hwloc_topology_get_support()	14
22.12.3.3 hwloc_topology_get_type_filter()	15
22.12.3.4 hwloc_topology_get_userdata()	15
22.12.3.5 hwloc_topology_is_thissystem()	15
22.12.3.6 hwloc_topology_set_all_types_filter()	15
22.12.3.7 hwloc_topology_set_cache_types_filter()	15
22.12.3.8 hwloc_topology_set_flags()	15
22.12.3.9 hwloc_topology_set_icache_types_filter()	16
22.12.3.10 hwloc_topology_set_io_types_filter()	16
22.12.3.11 hwloc_topology_set_type_filter()	16
22.12.3.12 hwloc_topology_set_userdata()	16
22.13 Modifying a loaded Topology	17
22.13.1 Detailed Description	17
22.13.2 Enumeration Type Documentation	17
22.13.2.1 hwloc_allow_flags_e	17
22.13.2.2 hwloc_restrict_flags_e	17
22.13.3 Function Documentation	18

22.13.3.1 hwloc_obj_add_other_obj_sets()	118
22.13.3.2 hwloc_topology_alloc_group_object()	118
22.13.3.3 hwloc_topology_allow()	118
22.13.3.4 hwloc_topology_insert_group_object()	119
22.13.3.5 hwloc_topology_insert_misc_object()	119
22.13.3.6 hwloc_topology_refresh()	120
22.13.3.7 hwloc_topology_restrict()	120
22.14 Finding Objects inside a CPU set	121
22.14.1 Detailed Description	121
22.14.2 Function Documentation	121
22.14.2.1 hwloc_get_first_largest_obj_inside_cpuset()	121
22.14.2.2 hwloc_get_largest_objs_inside_cpuset()	121
22.14.2.3 hwloc_get_nbobjs_inside_cpuset_by_depth()	122
22.14.2.4 hwloc_get_nbobjs_inside_cpuset_by_type()	122
22.14.2.5 hwloc_get_next_obj_inside_cpuset_by_depth()	122
22.14.2.6 hwloc_get_next_obj_inside_cpuset_by_type()	122
22.14.2.7 hwloc_get_obj_index_inside_cpuset()	123
22.14.2.8 hwloc_get_obj_inside_cpuset_by_depth()	123
22.14.2.9 hwloc_get_obj_inside_cpuset_by_type()	123
22.15 Finding Objects covering at least CPU set	124
22.15.1 Detailed Description	124
22.15.2 Function Documentation	124
22.15.2.1 hwloc_get_child_covering_cpuset()	124
22.15.2.2 hwloc_get_next_obj_covering_cpuset_by_depth()	124
22.15.2.3 hwloc_get_next_obj_covering_cpuset_by_type()	124
22.15.2.4 hwloc_get_obj_covering_cpuset()	125
22.16 Looking at Ancestor and Child Objects	126
22.16.1 Detailed Description	126
22.16.2 Function Documentation	126
22.16.2.1 hwloc_get_ancestor_obj_by_depth()	126
22.16.2.2 hwloc_get_ancestor_obj_by_type()	126
22.16.2.3 hwloc_get_common_ancestor_obj()	126
22.16.2.4 hwloc_get_next_child()	127
22.16.2.5 hwloc_obj_is_in_subtree()	127
22.17 Kinds of object Type	128
22.17.1 Detailed Description	128
22.17.2 Function Documentation	128
22.17.2.1 hwloc_obj_type_is_cache()	128
22.17.2.2 hwloc_obj_type_is_dcache()	128
22.17.2.3 hwloc_obj_type_is_icache()	128
22.17.2.4 hwloc_obj_type_is_io()	129
22.17.2.5 hwloc obj type is memory()	129

22.17.2.6 hwloc_obj_type_is_normal()	129
22.18 Looking at Cache Objects	130
22.18.1 Detailed Description	130
22.18.2 Function Documentation	130
22.18.2.1 hwloc_get_cache_covering_cpuset()	130
22.18.2.2 hwloc_get_cache_type_depth()	130
22.18.2.3 hwloc_get_shared_cache_covering_obj()	130
22.19 Finding objects, miscellaneous helpers	131
22.19.1 Detailed Description	131
22.19.2 Function Documentation	131
22.19.2.1 hwloc_bitmap_singlify_per_core()	131
22.19.2.2 hwloc_get_closest_objs()	131
22.19.2.3 hwloc_get_numanode_obj_by_os_index()	132
22.19.2.4 hwloc_get_obj_below_array_by_type()	132
22.19.2.5 hwloc_get_obj_below_by_type()	132
22.19.2.6 hwloc_get_pu_obj_by_os_index()	133
22.20 Distributing items over a topology	134
22.20.1 Detailed Description	134
22.20.2 Enumeration Type Documentation	134
22.20.2.1 hwloc_distrib_flags_e	134
22.20.3 Function Documentation	134
22.20.3.1 hwloc_distrib()	134
22.21 CPU and node sets of entire topologies	135
22.21.1 Detailed Description	135
22.21.2 Function Documentation	135
22.21.2.1 hwloc_topology_get_allowed_cpuset()	135
22.21.2.2 hwloc_topology_get_allowed_nodeset()	135
22.21.2.3 hwloc_topology_get_complete_cpuset()	136
22.21.2.4 hwloc_topology_get_complete_nodeset()	136
22.21.2.5 hwloc_topology_get_topology_cpuset()	136
22.21.2.6 hwloc_topology_get_topology_nodeset()	136
22.22 Converting between CPU sets and node sets	138
22.22.1 Detailed Description	138
22.22.2 Function Documentation	138
22.22.2.1 hwloc_cpuset_from_nodeset()	138
22.22.2.2 hwloc_cpuset_to_nodeset()	138
22.23 Finding I/O objects	139
22.23.1 Detailed Description	139
22.23.2 Function Documentation	139
22.23.2.1 hwloc_bridge_covers_pcibus()	139
22.23.2.2 hwloc_get_next_bridge()	139
22.23.2.3 hwloc_get_next_osdev()	139

22.23.2.4 hwloc_get_next_pcidev()	. 139
22.23.2.5 hwloc_get_non_io_ancestor_obj()	. 140
22.23.2.6 hwloc_get_pcidev_by_busid()	. 140
22.23.2.7 hwloc_get_pcidev_by_busidstring()	. 140
22.24 The bitmap API	. 141
22.24.1 Detailed Description	. 142
22.24.2 Macro Definition Documentation	. 142
22.24.2.1 hwloc_bitmap_foreach_begin	. 142
22.24.2.2 hwloc_bitmap_foreach_end	. 142
22.24.3 Typedef Documentation	. 143
22.24.3.1 hwloc_bitmap_t	. 143
22.24.3.2 hwloc_const_bitmap_t	. 143
22.24.4 Function Documentation	. 143
22.24.4.1 hwloc_bitmap_allbut()	. 143
22.24.4.2 hwloc_bitmap_alloc()	. 143
22.24.4.3 hwloc_bitmap_alloc_full()	. 143
22.24.4.4 hwloc_bitmap_and()	. 143
22.24.4.5 hwloc_bitmap_andnot()	. 144
22.24.4.6 hwloc_bitmap_asprintf()	. 144
22.24.4.7 hwloc_bitmap_clr()	. 144
22.24.4.8 hwloc_bitmap_clr_range()	. 144
22.24.4.9 hwloc_bitmap_compare()	. 144
22.24.4.10 hwloc_bitmap_compare_first()	. 145
22.24.4.11 hwloc_bitmap_copy()	. 145
22.24.4.12 hwloc_bitmap_dup()	. 145
22.24.4.13 hwloc_bitmap_fill()	. 145
22.24.4.14 hwloc_bitmap_first()	. 145
22.24.4.15 hwloc_bitmap_first_unset()	. 146
22.24.4.16 hwloc_bitmap_free()	. 146
22.24.4.17 hwloc_bitmap_from_ith_ulong()	. 146
22.24.4.18 hwloc_bitmap_from_ulong()	. 146
22.24.4.19 hwloc_bitmap_from_ulongs()	. 146
22.24.4.20 hwloc_bitmap_intersects()	. 146
22.24.4.21 hwloc_bitmap_isequal()	. 147
22.24.4.22 hwloc_bitmap_isfull()	. 147
22.24.4.23 hwloc_bitmap_isincluded()	. 147
22.24.4.24 hwloc_bitmap_isset()	. 147
22.24.4.25 hwloc_bitmap_iszero()	. 147
22.24.4.26 hwloc_bitmap_last()	. 148
22.24.4.27 hwloc_bitmap_last_unset()	. 148
22.24.4.28 hwloc_bitmap_list_asprintf()	. 148
22.24.4.29 hwloc bitmap list snprintf()	. 148

22.24.4.30 hwloc_bitmap_list_sscanf()	 148
22.24.4.31 hwloc_bitmap_next()	 149
22.24.4.32 hwloc_bitmap_next_unset()	 149
22.24.4.33 hwloc_bitmap_not()	 149
22.24.4.34 hwloc_bitmap_nr_ulongs()	 149
22.24.4.35 hwloc_bitmap_only()	 149
22.24.4.36 hwloc_bitmap_or()	 150
22.24.4.37 hwloc_bitmap_set()	 150
22.24.4.38 hwloc_bitmap_set_ith_ulong()	 150
22.24.4.39 hwloc_bitmap_set_range()	 150
22.24.4.40 hwloc_bitmap_singlify()	 150
22.24.4.41 hwloc_bitmap_snprintf()	 150
22.24.4.42 hwloc_bitmap_sscanf()	 151
22.24.4.43 hwloc_bitmap_taskset_asprintf()	 151
22.24.4.44 hwloc_bitmap_taskset_snprintf()	 151
22.24.4.45 hwloc_bitmap_taskset_sscanf()	 151
22.24.4.46 hwloc_bitmap_to_ith_ulong()	 152
22.24.4.47 hwloc_bitmap_to_ulong()	 152
22.24.4.48 hwloc_bitmap_to_ulongs()	 152
22.24.4.49 hwloc_bitmap_weight()	 152
22.24.4.50 hwloc_bitmap_xor()	 152
22.24.4.51 hwloc_bitmap_zero()	 152
22.25 Exporting Topologies to XML	 153
22.25.1 Detailed Description	 153
22.25.2 Enumeration Type Documentation	 153
22.25.2.1 hwloc_topology_export_xml_flags_e	 153
22.25.3 Function Documentation	 153
22.25.3.1 hwloc_export_obj_userdata()	 153
22.25.3.2 hwloc_export_obj_userdata_base64()	 154
22.25.3.3 hwloc_free_xmlbuffer()	 154
22.25.3.4 hwloc_topology_export_xml()	 154
22.25.3.5 hwloc_topology_export_xmlbuffer()	 155
22.25.3.6 hwloc_topology_set_userdata_export_callback()	 155
22.25.3.7 hwloc_topology_set_userdata_import_callback()	 155
22.26 Exporting Topologies to Synthetic	 157
22.26.1 Detailed Description	 157
22.26.2 Enumeration Type Documentation	 157
22.26.2.1 hwloc_topology_export_synthetic_flags_e	
22.26.3 Function Documentation	 157
22.26.3.1 hwloc_topology_export_synthetic()	 157
22.27 Retrieve distances between objects	
22.27.1 Detailed Description	

22.27.2 Enumeration Type Documentation	59
22.27.2.1 hwloc_distances_kind_e	59
22.27.3 Function Documentation	60
22.27.3.1 hwloc_distances_get()	60
22.27.3.2 hwloc_distances_get_by_depth()	60
22.27.3.3 hwloc_distances_get_by_name()	60
22.27.3.4 hwloc_distances_get_by_type()	60
22.27.3.5 hwloc_distances_get_name()	61
22.27.3.6 hwloc_distances_release()	61
22.28 Helpers for consulting distance matrices	62
22.28.1 Detailed Description	62
22.28.2 Function Documentation	62
22.28.2.1 hwloc_distances_obj_index()	62
22.28.2.2 hwloc_distances_obj_pair_values()	62
22.29 Add or remove distances between objects	63
22.29.1 Detailed Description	63
22.29.2 Enumeration Type Documentation	63
22.29.2.1 hwloc_distances_add_flag_e 1	63
22.29.3 Function Documentation	63
22.29.3.1 hwloc_distances_add()	63
22.29.3.2 hwloc_distances_release_remove()	64
22.29.3.3 hwloc_distances_remove()	64
22.29.3.4 hwloc_distances_remove_by_depth()	64
22.29.3.5 hwloc_distances_remove_by_type()	64
22.30 Comparing memory node attributes for finding where to allocate on	65
22.30.1 Detailed Description	65
22.30.2 Typedef Documentation	66
22.30.2.1 hwloc_memattr_id_t	66
22.30.3 Enumeration Type Documentation	66
22.30.3.1 hwloc_local_numanode_flag_e 1	66
22.30.3.2 hwloc_memattr_id_e	66
22.30.4 Function Documentation	67
22.30.4.1 hwloc_get_local_numanode_objs()	67
22.30.4.2 hwloc_memattr_get_best_initiator()	67
22.30.4.3 hwloc_memattr_get_best_target()	68
22.30.4.4 hwloc_memattr_get_by_name()	68
22.30.4.5 hwloc_memattr_get_value()	68
22.31 Managing memory attributes	69
22.31.1 Detailed Description	69
22.31.2 Enumeration Type Documentation	69
22.31.2.1 hwloc_memattr_flag_e	69
22.31.3 Function Documentation	69

22.31.3.1 hwloc_memattr_get_flags()
22.31.3.2 hwloc_memattr_get_initiators()
22.31.3.3 hwloc_memattr_get_name()
22.31.3.4 hwloc_memattr_get_targets()
22.31.3.5 hwloc_memattr_register()
22.31.3.6 hwloc_memattr_set_value()
22.32 Linux-specific helpers
22.32.1 Detailed Description
22.32.2 Function Documentation
22.32.2.1 hwloc_linux_get_tid_cpubind()
22.32.2.2 hwloc_linux_get_tid_last_cpu_location()
22.32.2.3 hwloc_linux_read_path_as_cpumask()
22.32.2.4 hwloc_linux_set_tid_cpubind()
22.33 Interoperability with Linux libnuma unsigned long masks
22.33.1 Detailed Description
22.33.2 Function Documentation
22.33.2.1 hwloc_cpuset_from_linux_libnuma_ulongs()
22.33.2.2 hwloc_cpuset_to_linux_libnuma_ulongs()
22.33.2.3 hwloc_nodeset_from_linux_libnuma_ulongs()
22.33.2.4 hwloc_nodeset_to_linux_libnuma_ulongs()
22.34 Interoperability with Linux libnuma bitmask
22.34.1 Detailed Description
22.34.2 Function Documentation
22.34.2.1 hwloc_cpuset_from_linux_libnuma_bitmask()
22.34.2.2 hwloc_cpuset_to_linux_libnuma_bitmask()
22.34.2.3 hwloc_nodeset_from_linux_libnuma_bitmask()
22.34.2.4 hwloc_nodeset_to_linux_libnuma_bitmask()
22.35 Interoperability with glibc sched affinity
22.35.1 Detailed Description
22.35.2 Function Documentation
22.35.2.1 hwloc_cpuset_from_glibc_sched_affinity()
22.35.2.2 hwloc_cpuset_to_glibc_sched_affinity()
22.36 Interoperability with OpenCL
22.36.1 Detailed Description
22.36.2 Function Documentation
22.36.2.1 hwloc_opencl_get_device_cpuset()
22.36.2.2 hwloc_opencl_get_device_osdev()
22.36.2.3 hwloc_opencl_get_device_osdev_by_index()
22.36.2.4 hwloc_opencl_get_device_pci_busid()
22.37 Interoperability with the CUDA Driver API
22.37.1 Detailed Description
22.37.2 Function Documentation

22.37.2.1 hwloc_cuda_get_device_cpuset()
22.37.2.2 hwloc_cuda_get_device_osdev()
22.37.2.3 hwloc_cuda_get_device_osdev_by_index()
22.37.2.4 hwloc_cuda_get_device_pci_ids()
22.37.2.5 hwloc_cuda_get_device_pcidev()
22.38 Interoperability with the CUDA Runtime API
22.38.1 Detailed Description
22.38.2 Function Documentation
22.38.2.1 hwloc_cudart_get_device_cpuset()
22.38.2.2 hwloc_cudart_get_device_osdev_by_index()
22.38.2.3 hwloc_cudart_get_device_pci_ids()
22.38.2.4 hwloc_cudart_get_device_pcidev()
22.39 Interoperability with the NVIDIA Management Library
22.39.1 Detailed Description
22.39.2 Function Documentation
22.39.2.1 hwloc_nvml_get_device_cpuset()
22.39.2.2 hwloc_nvml_get_device_osdev()
22.39.2.3 hwloc_nvml_get_device_osdev_by_index()
22.40 Interoperability with the ROCm SMI Management Library
22.40.1 Detailed Description
22.40.2 Function Documentation
22.40.2.1 hwloc_rsmi_get_device_cpuset()
22.40.2.2 hwloc_rsmi_get_device_osdev()
22.40.2.3 hwloc_rsmi_get_device_osdev_by_index()
22.41 Interoperability with OpenGL displays
22.41.1 Detailed Description
22.41.2 Function Documentation
22.41.2.1 hwloc_gl_get_display_by_osdev()
22.41.2.2 hwloc_gl_get_display_osdev_by_name()
22.41.2.3 hwloc_gl_get_display_osdev_by_port_device()
22.42 Interoperability with OpenFabrics
22.42.1 Detailed Description
22.42.2 Function Documentation
22.42.2.1 hwloc_ibv_get_device_cpuset()
22.42.2.2 hwloc_ibv_get_device_osdev()
22.42.2.3 hwloc_ibv_get_device_osdev_by_name()
22.43 Topology differences
22.43.1 Detailed Description
22.43.2 Typedef Documentation
22.43.2.1 hwloc_topology_diff_obj_attr_type_t
22.43.2.2 hwloc_topology_diff_t
22.43.2.3 hwloc topology diff type t

22.43.3 Enumeration Type Documentation
22.43.3.1 hwloc_topology_diff_apply_flags_e
22.43.3.2 hwloc_topology_diff_obj_attr_type_e
22.43.3.3 hwloc_topology_diff_type_e
22.43.4 Function Documentation
22.43.4.1 hwloc_topology_diff_apply()
22.43.4.2 hwloc_topology_diff_build()
22.43.4.3 hwloc_topology_diff_destroy()
22.43.4.4 hwloc_topology_diff_export_xml()
22.43.4.5 hwloc_topology_diff_export_xmlbuffer()
22.43.4.6 hwloc_topology_diff_load_xml()
22.43.4.7 hwloc_topology_diff_load_xmlbuffer()
22.44 Sharing topologies between processes
22.44.1 Detailed Description
22.44.2 Function Documentation
22.44.2.1 hwloc_shmem_topology_adopt()
22.44.2.2 hwloc_shmem_topology_get_length()
22.44.2.3 hwloc_shmem_topology_write()
22.45 Components and Plugins: Discovery components
22.45.1 Detailed Description
22.46 Components and Plugins: Discovery backends
22.46.1 Detailed Description
22.46.2 Typedef Documentation
22.46.2.1 hwloc_disc_phase_t
22.46.3 Enumeration Type Documentation
22.46.3.1 hwloc_disc_phase_e
22.46.3.2 hwloc_disc_status_flag_e
22.46.4 Function Documentation
22.46.4.1 hwloc_backend_alloc()
22.46.4.2 hwloc_backend_enable()
22.47 Components and Plugins: Generic components
22.47.1 Detailed Description
22.47.2 Typedef Documentation
22.47.2.1 hwloc_component_type_t
22.47.3 Enumeration Type Documentation
22.47.3.1 hwloc_component_type_e
22.48 Components and Plugins: Core functions to be used by components
22.48.1 Detailed Description
22.48.2 Function Documentation
22.48.2.1 hwlocinsert_object_by_cpuset()
22.48.2.2 hwloc_alloc_setup_object()
22.48.2.3 hwloc hide errors()

22.48.2.4 hwloc_insert_object_by_parent()	204
22.48.2.5 hwloc_obj_add_children_sets()	204
22.48.2.6 hwloc_plugin_check_namespace()	204
22.48.2.7 hwloc_topology_reconnect()	204
22.49 Components and Plugins: Filtering objects	205
22.49.1 Detailed Description	205
22.49.2 Function Documentation	205
22.49.2.1 hwloc_filter_check_keep_object()	205
22.49.2.2 hwloc_filter_check_keep_object_type()	205
22.49.2.3 hwloc_filter_check_osdev_subtype_important()	205
22.49.2.4 hwloc_filter_check_pcidev_subtype_important()	205
22.50 Components and Plugins: helpers for PCI discovery	206
22.50.1 Detailed Description	206
22.50.2 Function Documentation	206
22.50.2.1 hwloc_pcidisc_check_bridge_type()	206
22.50.2.2 hwloc_pcidisc_find_bridge_buses()	206
22.50.2.3 hwloc_pcidisc_find_cap()	206
22.50.2.4 hwloc_pcidisc_find_linkspeed()	206
22.50.2.5 hwloc_pcidisc_tree_attach()	207
22.50.2.6 hwloc_pcidisc_tree_insert_by_busid()	207
22.51 Components and Plugins: finding PCI objects during other discoveries	208
22.51.1 Detailed Description	208
22.51.2 Function Documentation	208
22.51.2.1 hwloc_pci_find_parent_by_busid()	208
22.52 Netloc API	209
22.52.1 Detailed Description	209
22.52.2 Enumeration Type Documentation	209
22.52.2.1 anonymous enum	209
	044
23 Data Structure Documentation	211
23.1 hwloc_backend Struct Reference	211
23.1.1 Detailed Description	
23.1.2 Field Documentation	
23.1.2.1 disable	
23.1.2.2 discover	
23.1.2.3 flags	
23.1.2.4 get_pci_busid_cpuset	
23.1.2.5 is_thissystem	
23.1.2.6 phases	
23.1.2.7 private_data	
23.2 hwloc_obj_attr_u::hwloc_bridge_attr_s Struct Reference	
23.2.1 Detailed Description	۷۱۵

23.2.2 Field Documentation	213
23.2.2.1 depth	213
23.2.2.2 domain	213
23.2.2.3 downstream	213
23.2.2.4 downstream_type	213
23.2.2.5 pci [1/2]	213
23.2.2.6 pci [2/2]	213
23.2.2.7 secondary_bus	213
23.2.2.8 subordinate_bus	213
23.2.2.9 upstream	213
23.2.2.10 upstream_type	213
23.3 hwloc_obj_attr_u::hwloc_cache_attr_s Struct Reference	214
23.3.1 Detailed Description	214
23.3.2 Field Documentation	214
23.3.2.1 associativity	214
23.3.2.2 depth	214
23.3.2.3 linesize	214
23.3.2.4 size	214
23.3.2.5 type	214
23.4 hwloc_cl_device_topology_amd Union Reference	214
23.4.1 Field Documentation	215
23.4.1.1 bus	215
23.4.1.2 data	215
23.4.1.3 device	215
23.4.1.4 function	215
23.4.1.5 pcie	215
23.4.1.6 raw	215
23.4.1.7 type	215
23.4.1.8 unused	215
23.5 hwloc_component Struct Reference	216
23.5.1 Detailed Description	216
23.5.2 Field Documentation	216
23.5.2.1 abi	216
23.5.2.2 data	216
23.5.2.3 finalize	216
23.5.2.4 flags	216
23.5.2.5 init	217
23.5.2.6 type	217
23.6 hwloc_disc_component Struct Reference	217
23.6.1 Detailed Description	217
23.6.2 Field Documentation	217
23.6.2.1 enabled by default	217

23.6.2.2 excluded_phases	218
23.6.2.3 instantiate	218
23.6.2.4 name	218
23.6.2.5 phases	218
23.6.2.6 priority	218
23.7 hwloc_disc_status Struct Reference	218
23.7.1 Detailed Description	218
23.7.2 Field Documentation	218
23.7.2.1 excluded_phases	219
23.7.2.2 flags	219
23.7.2.3 phase	219
23.8 hwloc_distances_s Struct Reference	219
23.8.1 Detailed Description	219
23.8.2 Field Documentation	219
23.8.2.1 kind	219
23.8.2.2 nbobjs	219
23.8.2.3 objs	220
23.8.2.4 values	220
23.9 hwloc_obj_attr_u::hwloc_group_attr_s Struct Reference	220
23.9.1 Detailed Description	220
23.9.2 Field Documentation	220
23.9.2.1 depth	220
23.9.2.2 dont_merge	220
23.9.2.3 kind	220
23.9.2.4 subkind	220
23.10 hwloc_info_s Struct Reference	221
23.10.1 Detailed Description	221
23.10.2 Field Documentation	221
23.10.2.1 name	221
23.10.2.2 value	221
23.11 hwloc_location Struct Reference	221
23.11.1 Detailed Description	221
23.11.2 Member Enumeration Documentation	221
23.11.2.1 hwloc_location_type_e	222
23.11.3 Field Documentation	222
23.11.3.1 location	222
23.11.3.2 type	222
23.12 hwloc_location::hwloc_location_u Union Reference	222
23.12.1 Detailed Description	222
23.12.2 Field Documentation	222
23.12.2.1 cpuset	222
23 12 2 2 object	222

23.13 hwloc_obj_attr_u::hwloc_numanode_attr_s::hwloc_memory_page_type_s Struct Reference 22	23
23.13.1 Detailed Description	23
23.13.2 Field Documentation	23
23.13.2.1 count	23
23.13.2.2 size	23
23.14 hwloc_obj_attr_u::hwloc_numanode_attr_s Struct Reference	23
23.14.1 Detailed Description	23
23.14.2 Field Documentation	23
23.14.2.1 local_memory	24
23.14.2.2 page_types	24
23.14.2.3 page_types_len	24
23.15 hwloc_obj Struct Reference	24
23.15.1 Detailed Description	25
23.15.2 Field Documentation	25
23.15.2.1 arity	25
23.15.2.2 attr	25
23.15.2.3 children	25
23.15.2.4 complete_cpuset	25
23.15.2.5 complete_nodeset	26
23.15.2.6 cpuset	26
23.15.2.7 depth	26
23.15.2.8 first_child	26
23.15.2.9 gp_index	26
23.15.2.10 infos	27
23.15.2.11 infos_count	27
23.15.2.12 io_arity	27
23.15.2.13 io_first_child	27
23.15.2.14 last_child	27
23.15.2.15 logical_index	27
23.15.2.16 memory_arity	27
23.15.2.17 memory_first_child	27
23.15.2.18 misc_arity	27
23.15.2.19 misc_first_child	28
23.15.2.20 name	28
23.15.2.21 next_cousin	28
23.15.2.22 next_sibling	28
23.15.2.23 nodeset	28
23.15.2.24 os_index	28
23.15.2.25 parent	28
23.15.2.26 prev_cousin	29
23.15.2.27 prev_sibling	29
23.15.2.28 sibling_rank	29

23.15.2.29 subtype	229
23.15.2.30 symmetric_subtree	229
23.15.2.31 total_memory	229
23.15.2.32 type	229
23.15.2.33 userdata	229
23.16 hwloc_obj_attr_u Union Reference	229
23.16.1 Detailed Description	230
23.16.2 Field Documentation	230
23.16.2.1 bridge	230
23.16.2.2 cache	230
23.16.2.3 group	230
23.16.2.4 numanode	230
23.16.2.5 osdev	230
23.16.2.6 pcidev	230
23.17 hwloc_obj_attr_u::hwloc_osdev_attr_s Struct Reference	231
23.17.1 Detailed Description	231
23.17.2 Field Documentation	231
23.17.2.1 type	231
23.18 hwloc_obj_attr_u::hwloc_pcidev_attr_s Struct Reference	231
23.18.1 Detailed Description	231
23.18.2 Field Documentation	231
23.18.2.1 bus	231
23.18.2.2 class_id	231
23.18.2.3 dev	232
23.18.2.4 device_id	232
23.18.2.5 domain	232
23.18.2.6 func	232
23.18.2.7 linkspeed	232
23.18.2.8 revision	232
23.18.2.9 subdevice_id	232
23.18.2.10 subvendor_id	232
23.18.2.11 vendor_id	232
23.19 hwloc_topology_cpubind_support Struct Reference	232
23.19.1 Detailed Description	233
23.19.2 Field Documentation	233
23.19.2.1 get_proc_cpubind	233
23.19.2.2 get_proc_last_cpu_location	233
23.19.2.3 get_thisproc_cpubind	233
23.19.2.4 get_thisproc_last_cpu_location	233
23.19.2.5 get_thisthread_cpubind	233
23.19.2.6 get_thisthread_last_cpu_location	233
23.19.2.7 get thread coubind	233

23.19.2.8 set_proc_cpubind	33
23.19.2.9 set_thisproc_cpubind	33
23.19.2.10 set_thisthread_cpubind	34
23.19.2.11 set_thread_cpubind	34
23.20 hwloc_topology_diff_u::hwloc_topology_diff_generic_s Struct Reference	34
23.20.1 Field Documentation	34
23.20.1.1 next	34
23.20.1.2 type	34
23.21 hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_generic_s Struct Reference 23	34
23.21.1 Field Documentation	34
23.21.1.1 type	35
23.22 hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s Struct Reference	35
23.22.1 Field Documentation	35
23.22.1.1 diff	35
23.22.1.2 next	35
23.22.1.3 obj_depth	35
23.22.1.4 obj_index	35
23.22.1.5 type	35
23.23 hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_string_s Struct Reference	35
23.23.1 Detailed Description	36
23.23.2 Field Documentation	36
23.23.2.1 name	36
23.23.2.2 newvalue	36
23.23.2.3 oldvalue	36
23.23.2.4 type	36
23.24 hwloc_topology_diff_obj_attr_u Union Reference	36
23.24.1 Detailed Description	36
23.24.2 Field Documentation	37
23.24.2.1 generic	37
23.24.2.2 string	37
23.24.2.3 uint64	37
23.25 hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_uint64_s Struct Reference 23	37
23.25.1 Detailed Description	37
23.25.2 Field Documentation	37
23.25.2.1 index	37
23.25.2.2 newvalue	37
23.25.2.3 oldvalue	37
23.25.2.4 type	38
23.26 hwloc_topology_diff_u::hwloc_topology_diff_too_complex_s Struct Reference	38
23.26.1 Field Documentation	38
23.26.1.1 next	38
23.26.1.2 obj_depth	38

23.26.1.3 obj_index
23.26.1.4 type
23.27 hwloc_topology_diff_u Union Reference
23.27.1 Detailed Description
23.27.2 Field Documentation
23.27.2.1 generic
23.27.2.2 obj_attr
23.27.2.3 too_complex
23.28 hwloc_topology_discovery_support Struct Reference
23.28.1 Detailed Description
23.28.2 Field Documentation
23.28.2.1 disallowed_numa
23.28.2.2 disallowed_pu
23.28.2.3 numa
23.28.2.4 numa_memory
23.28.2.5 pu
23.29 hwloc_topology_membind_support Struct Reference
23.29.1 Detailed Description
23.29.2 Field Documentation
23.29.2.1 alloc_membind
23.29.2.2 bind_membind
23.29.2.3 firsttouch_membind
23.29.2.4 get_area_membind
23.29.2.5 get_area_memlocation
23.29.2.6 get_proc_membind
23.29.2.7 get_thisproc_membind
23.29.2.8 get_thisthread_membind
23.29.2.9 interleave_membind
23.29.2.10 migrate_membind
23.29.2.11 nexttouch_membind
23.29.2.12 set_area_membind
23.29.2.13 set_proc_membind
23.29.2.14 set_thisproc_membind
23.29.2.15 set_thisthread_membind
23.30 hwloc_topology_misc_support Struct Reference
23.30.1 Detailed Description
23.30.2 Field Documentation
23.30.2.1 imported_support
23.31 hwloc_topology_support Struct Reference
23.31.1 Detailed Description
23.31.2 Field Documentation
23.31.2.1 cpubind

23.31.2.2 discovery	243
23.31.2.3 membind	243
22.21.2.4 mice	242

# **Chapter 1**

# **Hardware Locality**

# Portable abstraction of parallel architectures for high-performance computing

#### 1.1 Introduction

The Hardware Locality (hwloc) software project aims at easing the process of discovering hardware resources in parallel architectures. It offers command-line tools and a C API for consulting these resources, their locality, attributes, and interconnection. hwloc primarily aims at helping high-performance computing (HPC) applications, but is also applicable to any project seeking to exploit code and/or data locality on modern computing platforms. hwloc is actually made of two subprojects distributed together:

- The original hwloc project for describing the internals of computing nodes. It is described in details starting at section Hardware Locality (hwloc) Introduction.
- The network-oriented companion called netloc (Network Locality), described in details starting with section Network Locality (netloc).

Netloc may be disabled, but the original hwloc cannot. Both hwloc and netloc APIs are documented after these sections.

#### 1.2 Installation

hwloc ( https://www.open-mpi.org/projects/hwloc/) is available under the BSD license. It is hosted as a sub-project of the overall Open MPI project ( https://www.open-mpi.org/). Note that hwloc does not require any functionality from Open MPI – it is a wholly separate (and much smaller!) project and code base. It just happens to be hosted as part of the overall Open MPI project.

#### 1.2.1 Basic Installation

Installation is the fairly common GNU-based process:

```
shell$ ./configure --prefix=...
shell$ make
shell$ make install
```

hwloc- and netloc-specific configure options and requirements are documented in sections hwloc Installation and Netloc Installation respectively.

Also note that if you install supplemental libraries in non-standard locations, hwloc's configure script may not be able to find them without some help. You may need to specify additional CPPFLAGS, LDFLAGS, or PKG\_CONF← IG\_PATH values on the configure command line.

For example, if libpciaccess was installed into /opt/pciaccess, hwloc's configure script may not find it be default. Try adding PKG\_CONFIG\_PATH to the ./configure command line, like this:

2 Hardware Locality

```
./configure PKG_CONFIG_PATH=/opt/pciaccess/lib/pkgconfig ...
```

Running the "Istopo" tool is a good way to check as a graphical output whether hwloc properly detected the architecture of your node. Netloc command-line tools can be used to display the network topology interconnecting your nodes.

### 1.2.2 Installing from a Git clone

Additionally, the code can be directly cloned from Git:

```
shell$ git clone https://github.com/open-mpi/hwloc.git
shell$ cd hwloc
shell$ ./autogen.sh
```

Note that GNU Autoconf >=2.63, Automake >=1.11 and Libtool >=2.2.6 are required when building from a Git clone.

Nightly development snapshots are available on the web site, they can be configured and built without any need for Git or GNU Autotools.

## 1.3 Questions and Bugs

Bugs should be reported in the tracker ( https://github.com/open-mpi/hwloc/issues). Opening a new issue automatically displays lots of hints about how to debug and report issues.

Questions may be sent to the users or developers mailing lists ( https://www.open-mpi.org/community/lists/hwloophp).

There is also a #hwloc IRC channel on Freenode ( irc.freenode.net).

# **Chapter 2**

# **Hardware Locality (hwloc) Introduction**

# Portable abstraction of hierarchical architectures for high-performance computing

See also Further Reading for links to more sections about hwloc concepts.

## 2.1 hwloc Summary

hwloc provides command line tools and a C API to obtain the hierarchical map of key computing elements within a node, such as: NUMA memory nodes, shared caches, processor packages, dies and cores, processing units (logical processors or "threads") and even I/O devices. hwloc also gathers various attributes such as cache and memory information, and is portable across a variety of different operating systems and platforms. hwloc primarily aims at helping high-performance computing (HPC) applications, but is also applicable to any project seeking to exploit code and/or data locality on modern computing platforms. hwloc supports the following operating systems:

- Linux (including old kernels not having sysfs topology information, with knowledge of cpusets, ScaleMP vSMP support, etc.) on all supported hardware, including Intel Xeon Phi and NumaScale NumaConnect.
- · Solaris (with support for processor sets and logical domains)
- AIX
- Darwin / OS X
- FreeBSD and its variants (such as kFreeBSD/GNU)
- NetBSD
- HP-UX
- · Microsoft Windows
- IBM BlueGene/Q Compute Node Kernel (CNK)

Since it uses standard Operating System information, hwloc's support is mostly independant from the processor type (x86, powerpc, ...) and just relies on the Operating System support. The main exception is BSD operating systems (NetBSD, FreeBSD, etc.) because they do not provide support topology information, hence hwloc uses an x86-only CPUID-based backend (which can be used for other OSes too, see the Components and plugins section). To check whether hwloc works on a particular machine, just try to build it and run lstopoorlstopo-no-graphics. If some things do not look right (e.g. bogus or missing cache information), see Questions and Bugs. hwloc only reports the number of processors on unsupported operating systems; no topology information is available.

For development and debugging purposes, hwloc also offers the ability to work on "fake" topologies:

• Symmetrical tree of resources generated from a list of level arities, see Synthetic topologies.

Remote machine simulation through the gathering of topology as XML files, see Importing and exporting topologies from/to XML

hwloc can display the topology in a human-readable format, either in graphical mode (X11), or by exporting in one of several different formats, including: plain text, LaTeX tikzpicture, PDF, PNG, and FIG (see Command-line Examples below). Note that some of the export formats require additional support libraries.

hwloc offers a programming interface for manipulating topologies and objects. It also brings a powerful CPU bitmap API that is used to describe topology objects location on physical/logical processors. See the Programming Interface below. It may also be used to binding applications onto certain cores or memory nodes. Several utility programs are also provided to ease command-line manipulation of topology objects, binding of processes, and so on. Perl bindings are available from Bernd Kallies on CPAN.

Python bindings are available from Guy Streeter:

- · Fedora RPM and tarball.
- git tree ( html).

#### 2.2 hwloc Installation

The generic installation procedure for both hwloc and netloc is described in Installation.

The hwloc command-line tool "Istopo" produces human-readable topology maps, as mentioned above. It can also export maps to the "fig" file format. Support for PDF, Postscript, and PNG exporting is provided if the "Cairo" development package (usually cairo-devel or libcairo2-dev) can be found in "Istopo" when hwloc is configured and build.

The hwloc core may also benefit from the following development packages:


- libpciaccess for full I/O device discovery (libpciaccess-devel or libpciaccess-dev package). On Linux, PCI discovery may still be performed (without vendor/device names) even if libpciaccess cannot be used.
- · AMD or NVIDIA OpenCL implementations for OpenCL device discovery.
- the NVIDIA CUDA Toolkit for CUDA device discovery.
- the NVIDIA Management Library (NVML) for NVML device discovery. It is included in CUDA since version 8.0. Older NVML releases were available within the NVIDIA GPU Deployment Kit from <a href="https://developer.nvidia.com/gpu-deployment-kit">https://developer.nvidia.com/gpu-deployment-kit</a>.
- the NV-CONTROL X extension library (NVCtrl) for NVIDIA display discovery. The relevant development package is usually libXNVCtrl-devel or libxnvctrl-dev. It is also available within nvidia-settings from ftp://download.nvidia.com/XFree86/nvidia-settings/ and https://github. ← com/NVIDIA/nvidia-settings/.
- the AMD ROCm SMI library for RSMI device discovery. The relevant development package is usually rocm-smi-lib64 or librocm-smi-dev.
- libxml2 for full XML import/export support (otherwise, the internal minimalistic parser will only be able to import XML files that were exported by the same hwloc release). See Importing and exporting topologies from/to XML files for details. The relevant development package is usually libxml2-devel or libxml2-dev.
- libudev on Linux for easier discovery of OS device information (otherwise hwloc will try to manually parse udev raw files). The relevant development package is usually libudev-devel or libudev-dev.
- libtool's Itdl library for dynamic plugin loading if the native dlopen cannot be used. The relevant development package is usually libtool-ltdl-devel or libltdl-dev.

PCI and XML support may be statically built inside the main hwloc library, or as separate dynamically-loaded plugins (see the Components and plugins section).

Note that because of the possibility of GPL taint, the pciutils library libpci will not be used (remember that hwloc is BSD-licensed).

## 2.3 Command-line Examples

On a 4-package 2-core machine with hyper-threading, the 1stopo tool may show the following graphical output:

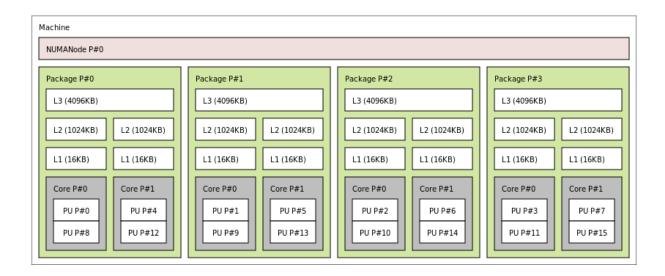

Here's the equivalent output in textual form:

```
Machine
  NUMANode L#0 (P#0)
  Package L#0 + L3 L#0 (4096KB)
    L2 L\#0 (1024KB) + L1 L\#0 (16KB) + Core L\#0
     PU L#0 (P#0)
      PU L#1 (P#8)
    L2 L#1 (1024KB) + L1 L#1 (16KB) + Core L#1
      PU L#2 (P#4)
      PU L#3 (P#12)
  Package L#1 + L3 L#1 (4096KB)
    L2 L#2 (1024KB) + L1 L#2 (16KB) + Core L#2
      PU L#4 (P#1)
      PU L#5 (P#9)
    L2 L#3 (1024KB) + L1 L#3 (16KB) + Core L#3
      PU L#6 (P#5)
      PU L#7 (P#13)
  Package L#2 + L3 L#2 (4096KB)
    L2 L#4 (1024KB) + L1 L#4 (16KB) + Core L#4
      PU L#8 (P#2)
      PU L#9 (P#10)
    L2 L#5 (1024KB) + L1 L#5 (16KB) + Core L#5
      PU L#10 (P#6)
      PU L#11 (P#14)
  Package L#3 + L3 L#3 (4096KB)
    L2 L#6 (1024KB) + L1 L#6 (16KB) + Core L#6
      PU L#12 (P#3)
     PU L#13 (P#11)
    L2 L\#7 (1024KB) + L1 L\#7 (16KB) + Core L\#7
      PU L#14 (P#7)
      PU L#15 (P#15)
```

Note that there is also an equivalent output in XML that is meant for exporting/importing topologies but it is hardly readable to human-beings (see Importing and exporting topologies from/to XML files for details).


On a 4-package 2-core Opteron NUMA machine (with two core cores disallowed by the administrator), the lstopo tool may show the following graphical output (with --disallowed for displaying disallowed objects):



#### Here's the equivalent output in textual form:

```
Machine (32GB total)
  Package L#0
    NUMANode L#0 (P#0 8190MB)
    L2 L\#0 (1024KB) + L1 L\#0 (64KB) + Core L\#0 + PU L\#0 (P\#0)
    L2 L#1 (1024KB) + L1 L#1 (64KB) + Core L#1 + PU L#1 (P#1)
  Package L#1
    NUMANode L#1 (P#1 8192MB)
    L2 L#2 (1024KB) + L1 L#2 (64KB) + Core L#2 + PU L#2 (P#2)
    L2 L#3 (1024KB) + L1 L#3 (64KB) + Core L#3 + PU L#3 (P#3)
  Package L#2
    NUMANode L#2 (P#2 8192MB)
    L2 L#4 (1024KB) + L1 L#4 (64KB) + Core L#4 + PU L#4 (P#4)
    L2 L#5 (1024KB) + L1 L#5 (64KB) + Core L#5 + PU L#5 (P#5)
  Package L#3
    NUMANode L#3 (P#3 8192MB)
    L2 L#6 (1024KB) + L1 L#6 (64KB) + Core L#6 + PU L#6 (P#6)
    L2 L#7 (1024KB) + L1 L#7 (64KB) + Core L#7 + PU L#7 (P#7)
```

#### On a 2-package quad-core Xeon (pre-Nehalem, with 2 dual-core dies into each package):

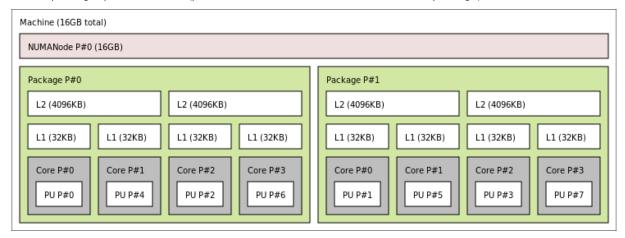

#### Here's the same output in textual form:

```
Machine (total 16GB)
 NUMANode L#0 (P#0 16GB)
  Package L#0
    T.2 T.#0 (4096KB)
      L1 L\#0 (32KB) + Core L\#0 + PU L\#0 (P\#0)
      L1 L#1 (32KB) + Core L#1 + PU L#1 (P#4)
    L2 L#1 (4096KB)
      L1 L#2 (32KB) + Core L#2 + PU L#2 (P#2)
      L1 L#3 (32KB) + Core L#3 + PU L#3 (P#6)
  Package L#1
    L2 L#2 (4096KB)
      L1 L#4 (32KB) + Core L#4 + PU L#4 (P#1)
      L1 L#5 (32KB) + Core L#5 + PU L#5 (P#5)
    L2 L#3 (4096KB)
     L1 L#6 (32KB) + Core L#6 + PU L#6 (P#3)
      L1 L\#7 (32KB) + Core L\#7 + PU L\#7 (P\#7)
```

### 2.4 Programming Interface

The basic interface is available in **hwloc.h**. Some higher-level functions are available in **hwloc/helper.h** to reduce the need to manually manipulate objects and follow links between them. Documentation for all these is provided later in this document. Developers may also want to look at hwloc/inlines.h which contains the actual inline code of some **hwloc.h** routines, and at this document, which provides good higher-level topology traversal examples.

To precisely define the vocabulary used by hwloc, a Terms and Definitions section is available and should probably be read first.

Each hwloc object contains a cpuset describing the list of processing units that it contains. These bitmaps may be used for CPU binding and Memory binding. hwloc offers an extensive bitmap manipulation interface in **hwloc/bitmap.h**.

Moreover, hwloc also comes with additional helpers for interoperability with several commonly used environments. See the Interoperability With Other Software section for details.

The complete API documentation is available in a full set of HTML pages, man pages, and self-contained PDF files (formatted for both both US letter and A4 formats) in the source tarball in doc/doxygen-doc/.


**NOTE:** If you are building the documentation from a Git clone, you will need to have Doxygen and pdflatex installed – the documentation will be built during the normal "make" process. The documentation is installed during "make install" to \$prefix/share/doc/hwloc/ and your systems default man page tree (under \$prefix, of course).

#### 2.4.1 Portability

Operating System have varying support for CPU and memory binding, e.g. while some Operating Systems provide interfaces for all kinds of CPU and memory bindings, some others provide only interfaces for a limited number of kinds of CPU and memory binding, and some do not provide any binding interface at all. Hwloc's binding functions would then simply return the ENOSYS error (Function not implemented), meaning that the underlying Operating System does not provide any interface for them. CPU binding and Memory binding provide more information on which hwloc binding functions should be preferred because interfaces for them are usually available on the supported Operating Systems.

Similarly, the ability of reporting topology information varies from one platform to another. As shown in Command-line Examples, hwloc can obtain information on a wide variety of hardware topologies. However, some platforms and/or operating system versions will only report a subset of this information. For example, on an PPC64-based system with 8 cores (each with 2 hardware threads) running a default 2.6.18-based kernel from RHEL 5.4, hwloc is only able to glean information about NUMA nodes and processor units (PUs). No information about caches, packages, or cores is available.

Here's the graphical output from Istopo on this platform when Simultaneous Multi-Threading (SMT) is enabled:

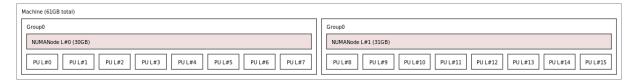


And here's the graphical output from Istopo on this platform when SMT is disabled:



Notice that hwloc only sees half the PUs when SMT is disabled. PU L#6, for example, seems to change location from NUMA node #0 to #1. In reality, no PUs "moved" – they were simply re-numbered when hwloc only saw half as many (see also Logical index in Indexes and Sets). Hence, PU L#6 in the SMT-disabled picture probably corresponds to PU L#12 in the SMT-enabled picture.

This same "PUs have disappeared" effect can be seen on other platforms – even platforms / OSs that provide much more information than the above PPC64 system. This is an unfortunate side-effect of how operating systems report information to hwloc.

Note that upgrading the Linux kernel on the same PPC64 system mentioned above to 2.6.34, hwloc is able to discover all the topology information. The following picture shows the entire topology layout when SMT is enabled:

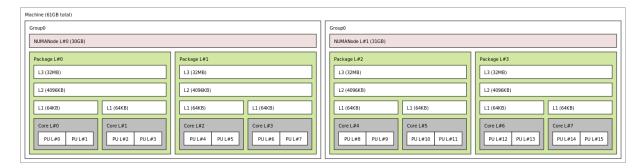

Developers using the hwloc API or XML output for portable applications should therefore be extremely careful to not make any assumptions about the structure of data that is returned. For example, per the above reported PPC topology, it is not safe to assume that PUs will always be descendants of cores.

Additionally, future hardware may insert new topology elements that are not available in this version of hwloc. Long-lived applications that are meant to span multiple different hardware platforms should also be careful about making structure assumptions. For example, a new element may someday exist between a core and a PU.

#### 2.4.2 API Example

The following small C example (available in the source tree as ``doc/examples/hwloc-hello.c") prints the topology of the machine and performs some thread and memory binding. More examples are available in the doc/examples/directory of the source tree.

```
/* Example hwloc API program.
 * See other examples under doc/examples/ in the source tree
 * Copyright © 2009-2016 Inria. All rights reserved.
 * Copyright © 2009-2011 Université Bordeaux * Copyright © 2009-2010 Cisco Systems, Inc. All rights reserved.
 * See COPYING in top-level directory.
 * hwloc-hello.c
#include "hwloc.h"
#include <errno.h>
#include <stdio.h>
#include <string.h>
static void print_children(hwloc_topology_t topology, hwloc_obj_t obj,
                             int depth)
    char type[32], attr[1024];
    unsigned i;
    hwloc_obj_type_snprintf(type, sizeof(type), obj, 0);
printf("%*s%s", 2*depth, "", type);
    if (obj->os_index != (unsigned) -1)
      printf("#%u", obj->os_index);
    hwloc_obj_attr_snprintf(attr, sizeof(attr), obj, " ", 0);
    if (*attr)
      printf("(%s)", attr);
    printf("\n");
    for (i = 0; i < obj->arity; i++) {
        print_children(topology, obj->children[i], depth + 1);
int main (void)
    int depth;
    unsigned i, n;
    unsigned long size;
    int levels:
    char string[128];
    int topodepth;
    void *m;
    hwloc_topology_t topology;
    hwloc_cpuset_t cpuset;
    hwloc obi t obi:
    /* Allocate and initialize topology object. */
    hwloc_topology_init(&topology);
    /\star ... Optionally, put detection configuration here to ignore
       some objects types, define a synthetic topology, etc..
       The default is to detect all the objects of the machine that
       the caller is allowed to access. See Configure Topology
       Detection. */
    /* Perform the topology detection. */
```

```
hwloc_topology_load(topology);
/* Optionally, get some additional topology information
  in case we need the topology depth later. \star/
topodepth = hwloc_topology_get_depth(topology);
/************
* First example:
\star Walk the topology with an array style, from level 0 (always
\star the system level) to the lowest level (always the proc level).
************************
for (depth = 0; depth < topodepth; depth++) {    printf("*** Objects at level d^n, depth);
   for (i = 0; i < hwloc_get_nbobjs_by_depth(topology, depth);</pre>
        i++) {
       hwloc_obj_type_snprintf(string, sizeof(string),
                            hwloc_get_obj_by_depth(topology, depth, i), 0);
       printf("Index %u: %s\n", i, string);
   1
* Second example:
\star Walk the topology with a tree style.
*********
printf("*** Printing overall tree\n");
* Third example:
* Print the number of packages.
************************
depth = hwloc_get_type_depth(topology, HWLOC_OBJ_PACKAGE);
if (depth == HWLOC_TYPE_DEPTH_UNKNOWN) {
   printf("*** The number of packages is unknown\n");
} else {
  printf("*** %u package(s)\n",
         hwloc_get_nbobjs_by_depth(topology, depth));
* Fourth example:
* Compute the amount of cache that the first logical processor
*******************
levels = 0:
size = 0:
for (obj = hwloc_get_obj_by_type(topology, HWLOC_OBJ_PU, 0);
    obj;
    obj = obj->parent)
 if (hwloc_obj_type_is_cache(obj->type)) {
   levels++;
   size += obj->attr->cache.size;
printf("*** Logical processor 0 has %d caches totaling %luKB\n",
     levels, size / 1024);
/****************
* Fifth example:
\star Bind to only one thread of the last core of the machine.
* First find out where cores are, or else smaller sets of CPUs if
* the OS doesn't have the notion of a "core".
 *************************
depth = hwloc_get_type_or_below_depth(topology, HWLOC_OBJ_CORE);
/* Get last core. */
obj = hwloc_get_obj_by_depth(topology, depth,
             hwloc_get_nbobjs_by_depth(topology, depth) - 1);
if (obj) {
   /\star Get a copy of its cpuset that we may modify. \star/
   cpuset = hwloc_bitmap_dup(obj->cpuset);
   /\star Get only one logical processor (in case the core is
     SMT/hyper-threaded). */
   hwloc_bitmap_singlify(cpuset);
   /* And try to bind ourself there. */
   if (hwloc_set_cpubind(topology, cpuset, 0)) {
       char *str;
       int error = errno;
       hwloc_bitmap_asprintf(&str, obj->cpuset);
printf("Couldn't bind to cpuset %s: %s\n", str, strerror(error));
       free(str);
   /* Free our cpuset copy */
   hwloc_bitmap_free(cpuset);
/*******************
* Sixth example:
* Allocate some memory on the last NUMA node, bind some existing
* memory to the last NUMA node.
 /\star Get last node. There's always at least one. \star/
n = hwloc_get_nbobjs_by_type(topology, HWLOC_OBJ_NUMANODE);
obj = hwloc_get_obj_by_type(topology, HWLOC_OBJ_NUMANODE, n - 1);
```

hwloc provides a pkg-config executable to obtain relevant compiler and linker flags. For example, it can be used thusly to compile applications that utilize the hwloc library (assuming GNU Make):

On a machine 2 processor packages – each package of which has two processing cores – the output from running hwloc-hello could be something like the following:

```
shell$ ./hwloc-hello
*** Objects at level 0
Index 0: Machine
*** Objects at level 1
Index 0: Package#0
Index 1: Package#1
*** Objects at level 2
Index 0: Core#0
Index 1: Core#1
Index 2: Core#3
Index 3: Core#2
*** Objects at level 3
Index 0: PU#0
Index 1: PU#1
Index 2: PU#2
Index 3: PU#3
*** Printing overall tree
Machine
  Package#0
    Core#0
      PU#0
    Core#1
      PU#1
  Package#1
    Core#3
     PU#2
    Core#2
      PU#3
*** 2 package(s)
*** Logical processor 0 has 0 caches totaling OKB
shell$
```

## 2.5 History / Credits

hwloc is the evolution and merger of the libtopology project and the Portable Linux Processor Affinity (PLPA) ( https://www.open-mpi.org/projects/plpa/) project. Because of functional and ideological overlap, these two code bases and ideas were merged and released under the name "hwloc" as an Open MPI sub-project. libtopology was initially developed by the Inria Runtime Team-Project. PLPA was initially developed by the Open MPI development team as a sub-project. Both are now deprecated in favor of hwloc, which is distributed as an Open MPI sub-project.

# 2.6 Further Reading

The documentation chapters include

2.6 Further Reading

- · Terms and Definitions
- Command-Line Tools
- Environment Variables
- CPU and Memory Binding Overview
- I/O Devices
- Miscellaneous objects
- Object attributes
- Importing and exporting topologies from/to XML files
- Synthetic topologies
- Interoperability With Other Software
- Thread Safety
- · Components and plugins
- Embedding hwloc in Other Software
- Frequently Asked Questions
- Upgrading to the hwloc 2.0 API

Make sure to have had a look at those too!

# **Terms and Definitions**

### 3.1 Objects

**Object** Interesting kind of part of the system, such as a Core, a L2Cache, a NUMA memory node, etc. The different types detected by hwloc are detailed in the hwloc obj type t enumeration.

There are four kinds of Objects: Memory (NUMA nodes and Memory-side caches), I/O (Bridges, PCI and OS devices), Misc, and Normal (everything else, including Machine, Package, Die, Core, PU, CPU Caches, etc.). Normal and Memory objects have (non-NULL) CPU sets and nodesets, while I/O and Misc don't.

Objects are topologically sorted by locality (CPU and node sets) into a tree (see Hierarchy, Tree and Levels).

- **Processing Unit (PU)** The smallest processing element that can be represented by a hwloc object. It may be a single-core processor, a core of a multicore processor, or a single thread in a SMT processor (also sometimes called "Logical processor", not to be confused with "Logical index of a processor"). hwloc's PU acronym stands for Processing Unit.
- Package A processor Package is the physical package that usually gets inserted into a socket on the motherboard. It is also often called a physical processor or a CPU even if these names bring confusion with respect to cores and processing units. A processor package usually contains multiple cores (and may also be composed of multiple dies). hwloc Package objects were called Sockets up to hwloc 1.10.
- **NUMA Node** An object that contains memory that is directly and byte-accessible to the host processors. It is usually close to some cores as specified by its CPU set. Hence it is attached as a memory child of the object that groups those cores together, for instance a Package objects with 4 Core children (see Hierarchy, Tree and Levels).
- Memory-side Cache A cache in front of a specific memory region (e.g. a range of physical addresses). It caches all accesses to that region without caring about which core issued the request. This is the opposite of usual CPU caches where only accesses from the local cores are cached, without caring about the target memory.
  In hwloc, memory-side caches are memory objects placed between their local CPU objects (parent) and the

#### 3.2 Indexes and Sets

target NUMA node memory (child).

- OS or physical index The index that the operating system (OS) uses to identify the object. This may be completely arbitrary, non-unique, non-contiguous, not representative of logical proximity, and may depend on the BIOS configuration. That is why hwloc almost never uses them, only in the default Istopo output (P#x) and cpuset masks. See also Should I use logical or physical/OS indexes? and how?
- Logical index Index to uniquely identify objects of the same type and depth, automatically computed by hwloc according to the topology. It expresses logical proximity in a generic way, i.e. objects which have adjacent logical indexes are adjacent in the topology. That is why hwloc almost always uses it in its API, since it expresses logical proximity. They can be shown (as L#x) by lstopo thanks to the -1 option. This index is always linear and in the range [0, num\_objs\_same\_type\_same\_level-1]. Think of it as ``cousin rank." The ordering is based on topology first, and then on OS CPU numbers, so it is stable across everything except

14 Terms and Definitions

firmware CPU renumbering. "Logical index" should not be confused with "Logical processor". A "Logical processor" (which in hwloc we rather call "processing unit" to avoid the confusion) has both a physical index (as chosen arbitrarily by BIOS/OS) and a logical index (as computed according to logical proximity by hwloc). See also Should I use logical or physical/OS indexes? and how?.

- **CPU set** The set of processing units (PU) logically included in an object (if it makes sense). They are always expressed using physical processor numbers (as announced by the OS). They are implemented as the <a href="https://hww.numbers.com/hwloc\_bitmap\_t">hwloc\_bitmap\_t</a> opaque structure. hwloc CPU sets are just masks, they do *not* have any relation with an operating system actual binding notion like Linux' cpusets. I/O and Misc objects do not have CPU sets while all Normal and Memory objects have non-NULL CPU sets.
- **Node set** The set of NUMA memory nodes logically included in an object (if it makes sense). They are always expressed using physical node numbers (as announced by the OS). They are implemented with the <a href="https://hww.numbers.numbers.numbers">hwloc\_bitmap\_t</a> opaque structure. as bitmaps. I/O and Misc objects do not have Node sets while all Normal and Memory objects have non-NULL nodesets.
- **Bitmap** A possibly-infinite set of bits used for describing sets of objects such as CPUs (CPU sets) or memory nodes (Node sets). They are implemented with the <a href="https://hww.nodes.nodes.nodes.nodes">https://hww.nodes.node

### 3.3 Hierarchy, Tree and Levels


- **Parent object** The object logically containing the current object, for example because its CPU set includes the CPU set of the current object. All objects have a non-NULL parent, except the root of the topology (Machine object).
- Ancestor object The parent object, or its own parent, and so on.
- **Children object(s)** The object (or objects) contained in the current object because their CPU set is included in the CPU set of the current object. Each object may also contain separated lists for Memory, I/O and Misc object children.
- Arity The number of normal children of an object. There are also specific arities for Memory, I/O and Misc children.
- **Sibling objects** Objects in the same children list, which all of them are normal children of the same parent, or all of them are Memory children of the same parent, or I/O children, or Misc. They usually have the same type (and hence are cousins, as well). But they may not if the topology is asymmetric.
- **Sibling rank** Index to uniquely identify objects which have the same parent, and is always in the range [0, arity-1] (respectively memory\_arity, io\_arity or misc\_arity for Memory, I/O and Misc children of a parent).
- **Cousin objects** Objects of the same type (and depth) as the current object, even if they do not have the same parent.
- **Level** Set of objects of the same type and depth. All these objects are cousins.
  - Memory, I/O and Misc objects also have their own specific levels and (virtual) depth.
- **Depth** Nesting level in the object tree, starting from the root object. If the topology is symmetric, the depth of a child is equal to the parent depth plus one, and an object depth is also equal to the number of parent/child links between the root object and the given object. If the topology is asymmetric, the difference between some parent and child depths may be larger than one when some intermediate levels (for instance groups) are missing in only some parts of the machine.
  - The depth of the Machine object is always 0 since it is always the root of the topology. The depth of PU objects is equal to the number of levels in the topology minus one.
  - Memory, I/O and Misc objects also have their own specific levels and depth.

The following diagram can help to understand the vocabulary of the relationships by showing the example of a machine with two dual core packages (with no hardware threads); thus, a topology with 5 levels. Each box with rounded corner corresponds to one hwloc\_obj\_t, containing the values of the different integer fields (depth, logical—index, etc.), and arrows show to which other hwloc\_obj\_t pointers point to (first\_child, parent, etc.).

The topology always starts with a Machine object as root (depth 0) and ends with PU objects at the bottom (depth 4 here).

Objects of the same level (cousins) are listed in red boxes and linked with red arrows. Children of the same parent (siblings) are linked with blue arrows.

The L2 cache of the last core is intentionally missing to show how asymmetric topologies are handled. See What happens if my topology is asymmetric? for more information about such strange topologies.

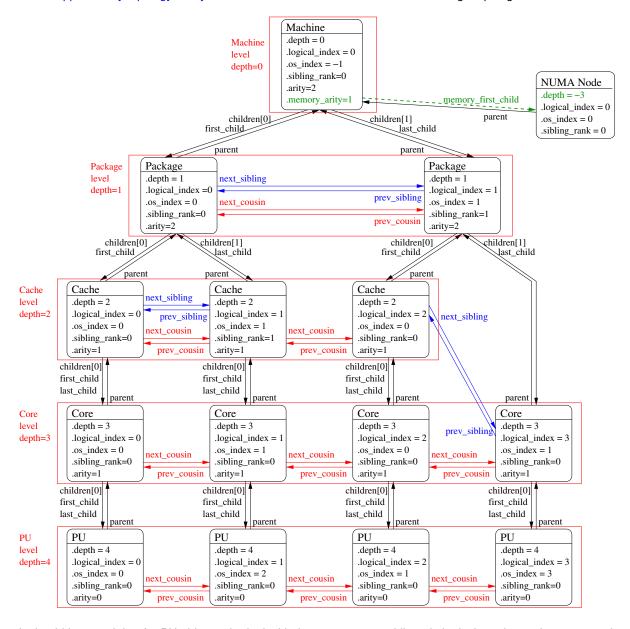

It should be noted that for PU objects, the logical index – as computed linearly by hwloc – is not the same as the OS index.

The NUMA node is on the side because it is not part of the main tree but rather attached to the object that corresponds to its locality (the entire machine here, hence the root object). It is attached as a *Memory* child (in green) and has a virtual depth (negative). It could also have siblings if there were multiple local NUMA nodes, or cousins if other NUMA nodes were attached somewhere else in the machine.

I/O or Misc objects could be attached in a similar manner.

16 Terms and Definitions

# **Command-Line Tools**

hwloc comes with an extensive C programming interface and several command line utilities. Each of them is fully documented in its own manual page; the following is a summary of the available command line tools.

### 4.1 Istopo and Istopo-no-graphics

Istopo (also known as hwloc-ls) displays the hierarchical topology map of the current system. The output may be graphical, ascii-art or textual, and can also be exported to numerous file formats such as PDF, PNG, XML, and others. Advanced graphical outputs require the "Cairo" development package (usually cairo-devel or libcairo2-dev).

Istopo and Istopo-no-graphics accept the same command-line options. However, graphical outputs are only available in Istopo. Textual outputs (those that do not depend on heavy external libraries such as Cairo) are supported in both Istopo and Istopo-no-graphics.

This command can also display the processes currently bound to a part of the machine (via the --ps option). Note that Istopo can read XML files and/or alternate chroot filesystems and display topological maps representing those systems (e.g., use Istopo to output an XML file on one system, and then use Istopo to read in that XML file and display it on a different system).

#### 4.2 hwloc-bind

hwloc-bind binds processes to specific hardware objects through a flexible syntax. A simple example is binding an executable to specific cores (or packages or bitmaps or ...). The hwloc-bind(1) man page provides much more detail on what is possible.

hwloc-bind can also be used to retrieve the current process' binding, or retrieve the last CPU(s) where a process ran, or operate on memory binding.

Just like hwloc-calc, the input locations given to hwloc-bind may be either objects or cpusets (bitmaps as reported by hwloc-calc or hwloc-distrib).

#### 4.3 hwloc-calc

hwloc-calc is hwloc's Swiss Army Knife command-line tool for converting things. The input may be either objects or cpusets (bitmaps as reported by another hwloc-calc instance or by hwloc-distrib), that may be combined by addition, intersection or subtraction. The output kinds include:

- a cpuset bitmap: This compact opaque representation of objects is useful for shell scripts etc. It may passed
  to hwloc command-line tools such as hwloc-calc or hwloc-bind, or to hwloc command-line options such as
  lstopo --restrict.
- the amount of the equivalent hwloc objects from a specific type, or the list of their indexes. This is useful for iterating over all similar objects (for instance all cores) within a given part of a platform.
- a hierarchical description of objects, for instance a thread index within a core within a package. This gives a better view of the actual location of an object.

18 Command-Line Tools

Moreover, input and/or output may be use either physical/OS object indexes or as hwloc's logical object indexes. It eases cooperation with external tools such as taskset or numactl by exporting hwloc specifications into list of processor or NUMA node physical indexes. See also Should I use logical or physical/OS indexes? and how?.

#### 4.4 hwloc-info

hwloc-info dumps information about the given objects, as well as all its specific attributes. It is intended to be used with tools such as grep for filtering certain attribute lines. When no object is specified, or when --topology is passed, hwloc-info prints a summary of the topology. When --support is passed, hwloc-info lists the supported features for the topology.

#### 4.5 hwloc-distrib

hwloc-distrib generates a set of cpuset bitmaps that are uniformly distributed across the machine for the given number of processes. These strings may be used with hwloc-bind to run processes to maximize their memory bandwidth by properly distributing them across the machine.

#### 4.6 hwloc-ps

hwloc-ps is a tool to display the bindings of processes that are currently running on the local machine. By default, hwloc-ps only lists processes that are bound; unbound process (and Linux kernel threads) are not displayed.

#### 4.7 hwloc-annotate

hwloc-annotate may modify object (and topology) attributes such as string information (see Custom string infos for details) or Misc children objects. It reads an input topology from a XML file and outputs the annotated topology as another XML file.

### 4.8 hwloc-diff, hwloc-patch and hwloc-compress-dir

hwloc-diff computes the difference between two topologies and outputs it to another XML file.

hwloc-patch reads such a difference file and applies to another topology.

hwloc-compress-dir compresses an entire directory of XML files by using hwloc-diff to save the differences between topologies instead of entire topologies.

#### 4.9 hwloc-dump-hwdata

hwloc-dump-hwdata is a Linux and x86-specific tool that dumps (during boot, privileged) some topology and locality information from raw hardware files (SMBIOS and ACPI tables) to human-readable and world-accessible files that the hwloc library will later reuse.

Currently only used on Intel Xeon Phi processor platforms. See Why do I need hwloc-dump-hwdata for memory on Intel Xeon Phi processor platforms. See HWLOC\_DUMPED\_HWDATA\_DIR in Environment Variables for details about the location of dumped files.

### 4.10 hwloc-gather-topology and hwloc-gather-cpuid

hwloc-gather-topology is a Linux-specific tool that saves the relevant topology files of the current machine into a tarball (and the corresponding Istopo outputs).

hwloc-gather-cpuid is a x86-specific tool that dumps the result of CPUID instructions on the current machine into a directory.

The output of hwloc-gather-cpuid is included in the tarball saved by hwloc-gather-topology when running on Linux/x86.

These files may be used later (possibly offline) for simulating or debugging a machine without actually running on it.

# **Environment Variables**

The behavior of the hwloc library and tools may be tuned thanks to the following environment variables.

- HWLOC\_XMLFILE=/path/to/file.xml enforces the discovery from the given XML file as if hwloc\_topology\_set\_xml() had been called. This file may have been generated earlier with Istopo file.xml. For convenience, this backend provides empty binding hooks which just return success. To have hwloc still actually call OS-specific hooks, HWLOC\_THISSYSTEM should be set 1 in the environment too, to assert that the loaded file is really the underlying system. See also Importing and exporting topologies from/to XML files.
- **HWLOC\_SYNTHETIC=synthetic\_description** enforces the discovery through a synthetic description string as if <a href="https://hwloc\_topology\_set\_synthetic">hwloc\_topology\_set\_synthetic</a>() had been called. For convenience, this backend provides empty binding hooks which just return success. See also <a href="https://synthetic.com/synth

#### HWLOC\_XML\_VERBOSE=1

- HWLOC\_SYNTHETIC\_VERBOSE=1 enables verbose messages in the XML or synthetic topology backends. hwloc XML backends (see Importing and exporting topologies from/to XML files) can emit some error messages to the error output stream. Enabling these verbose messages within hwloc can be useful for understanding failures to parse input XML topologies. Similarly, enabling verbose messages in the synthetic topology backend can help understand why the description string is invalid. See also Synthetic topologies.
- HWLOC\_THISSYSTEM=1 enforces the return value of hwloc\_topology\_is\_thissystem(), as if HWLOC\_TOPOLOGY\_FLAG\_IS\_THIS was set with hwloc\_topology\_set\_flags(). It means that it makes hwloc assume that the selected backend provides the topology for the system on which we are running, even if it is not the OS-specific backend but the XML backend for instance. This means making the binding functions actually call the OS-specific system calls and really do binding, while the XML backend would otherwise provide empty hooks just returning success. This can be used for efficiency reasons to first detect the topology once, save it to an XML file, and quickly reload it later through the XML backend, but still having binding functions actually do bind. This also enables support for the variable HWLOC\_THISSYSTEM\_ALLOWED\_RESOURCES.
- HWLOC\_THISSYSTEM\_ALLOWED\_RESOURCES=1 Get the set of allowed resources from the native operating system even if the topology was loaded from XML or synthetic description, as if HWLOC\_TOPOLOGY\_FLAG\_THISSYSTEM\_ALLOWED\_RESOURCES was set with hwloc\_topology\_set\_flags(). This variable requires the topology to match the current system (see the variable HWLOC\_THISSYSTEM). This is useful when the topology is not loaded directly from the local machine (e.g. for performance reason) and it comes with all resources, but the running process is restricted to only a part of the machine (for instance because of Linux Cgroup/Cpuset).
- **HWLOC\_ALLOW=all** Totally ignore administrative restrictions such as Linux Cgroups and consider all resources (PUs and NUMA nodes) as allowed. This is different from setting HWLOC\_TOPOLOGY\_FLAG\_INCLUDE 

  DISALLOWED which gathers all resources but marks the unavailable ones as disallowed.
- **HWLOC\_HIDE\_ERRORS=0** enables or disables verbose reporting of errors. The hwloc library may issue warnings to the standard error stream when it detects a problem during topology discovery, for instance if the operating system (or user) gives contradictory topology information. Setting this environment variable to 1 removes the actual displaying of these error messages.

20 Environment Variables

HWLOC\_USE\_NUMA\_DISTANCES=7 enables or disables the use of NUMA distances. NUMA distances and memory target/initiator information may be used to improve the locality of NUMA nodes, especially CPU-less nodes. Bits in the value of this environment variable enable different features: Bit 0 enables the gathering of NUMA distances from the operating system. Bit 1 further enables the use of NUMA distances to improve the locality of CPU-less nodes. Bit 2 enables the use of target/initiator information.

- HWLOC\_GROUPING=1 enables or disables objects grouping based on distances. By default, hwloc uses distance matrices between objects (either read from the OS or given by the user) to find groups of close objects. These groups are described by adding intermediate Group objects in the topology. Setting this environment variable to 0 will disable this grouping. This variable supersedes the obsolete HWLOC\_IGNORE\_DISTAN ← CES variable.
- HWLOC\_GROUPING\_ACCURACY=0.05 relaxes distance comparison during grouping. By default, objects may be grouped if their distances form a minimal distance graph. When setting this variable to 0.02, and when HWLOC\_DISTANCES\_ADD\_FLAG\_GROUP\_INACCURATE is given, these distances do not have to be strictly equal anymore, they may just be equal with a 2% error. If set to try instead of a numerical value, hwloc will try to group with perfect accuracy (0, the default), then with 0.01, 0.02, 0.05 and finally 0.1. Numbers given in this environment variable should always use a dot as a decimal mark (for instance 0.01 instead of 0.01).
- **HWLOC\_GROUPING\_VERBOSE=0** enables or disables some verbose messages during grouping. If this variable is set to 1, some debug messages will be displayed during distance-based grouping of objects even if debug was not specific at configure time. This is useful when trying to find an interesting distance grouping accuracy.
- HWLOC PCI LOCALITY=<domain/bus> <cpuset>;...
- HWLOC\_PCI\_LOCALITY=/path/to/pci/locality/file changes the locality of I/O devices behing the specified PCI buses. If no I/O locality information is available or if the BIOS reports incorrect information, it is possible to move a I/O device tree (OS and/or PCI devices with optional bridges) near a custom set of processors. Localities are given either inside the environment variable itself, or in the pointed file. They may be separated either by semi-colons or by line-breaks.

Each locality contains a domain/bus specification (in hexadecimal numbers as usual) followed by a whitespace and a cpuset:

- 0001 <cpuset> specifies the locality of all buses in PCI domain 0000.
- 0000:0f cpuset> specifies only PCI bus 0f in domain 0000.
- 0002:04-0a <cpuset> specifies a range of buses (from 04 to 0a) within domain 0002.

Domain/bus specifications should usually match entire hierarchies of buses behind a bridge (including primary, secondary and subordinate buses). For instance, if hostbridge 0000:00 is above other bridges/switches with buses 0000:01 to 0000:09, the variable should be HWLOC\_PCI\_LOCALITY="0000:00-09 <cpuset>". It supersedes the old HWLOC\_PCI\_0000\_00\_LOCALCPUS=<cpuset> which only works when hostbridges exist in the topology.

If the variable is defined to empty or invalid, no forced PCI locality is applied but hwloc's internal automatic locality quirks are disabled, which means the exact PCI locality reported by the platform is used.

- HWLOC\_X86\_TOPOEXT\_NUMANODES=0 use AMD topoext CPUID leaf in the x86 backend to detect NUMA nodes. When using the x86 backend, setting this variable to 1 enables the building of NUMA nodes from AMD processor CPUID instructions. However this strategy does not always reflect BIOS configuration such as NUMA interleaving. And node indexes may be different from those of the operating system. Hence this should only be used when OS backends are wrong and the user is sure that CPUID returns correct NUMA information.
- **HWLOC\_KEEP\_NVIDIA\_GPU\_NUMA\_NODES=0** show or hide NUMA nodes that correspond to NVIDIA GPU memory. By default they are ignored to avoid interleaved memory being allocated on GPU by mistake. Setting this environment variable to 1 exposes these NUMA nodes. They may be recognized by the *GPUMemory* subtype. They also have a *PCIBusID* info attribute to identify the corresponding GPU.
- **HWLOC\_KNL\_MSCACHE\_L3=0** Expose the KNL MCDRAM in cache mode as a Memory-side Cache instead of a L3. hwloc releases prior to 2.1 exposed the MCDRAM cache as a CPU-side L3 cache. Now that Memory-side caches are supported by hwloc, it is still exposed as a L3 by default to avoid breaking existing applications. Setting this environment variable to 1 will expose it as a proper Memory-side cache.

- HWLOC\_ANNOTATE\_GLOBAL\_COMPONENTS=0 Allow components to annotate the topology even if they are usually excluded by global components by default. Setting this variable to 1 and also setting HWLOC\_COMP COMENTS=xml, pci, stop enables the addition of PCI vendor and model info attributes to a XML topology that was generated without those names (if pciaccess was missing).
- **HWLOC\_FSROOT=/path/to/linux/filesystem-root**/ switches to reading the topology from the specified Linux filesystem root instead of the main file-system root. This directory may have been saved previously from another machine with hwloc-gather-topology.

One should likely also set  $\texttt{HWLOC\_COMPONENTS=linux}$ , stop so that non-Linux backends are disabled (the -i option of command-line tools takes care of both).

Not using the main file-system root causes hwloc\_topology\_is\_thissystem() to return 0. For convenience, this backend provides empty binding hooks which just return success. To have hwloc still actually call OS-specific hooks, HWLOC\_THISSYSTEM should be set 1 in the environment too, to assert that the loaded file is really the underlying system.

**HWLOC\_CPUID\_PATH=/path/to/cpuid/** forces the x86 backend to read dumped CPUIDs from the given directory instead of executing actual x86 CPUID instructions. This directory may have been saved previously from another machine with hwloc-gather-cpuid.

One should likely also set  $\texttt{HWLOC\_COMPONENTS} = x86$ , stop so that non-x86 backends are disabled (the -i option of command-line tools takes care of both).

It causes <a href="https://www.numer.com/hwloc\_topology\_is\_thissystem">hwloc\_topology\_is\_thissystem</a>() to return 0. For convenience, this backend provides empty binding hooks which just return success. To have hwloc still actually call OS-specific hooks, HWLOC\_THISSYSTEM should be set 1 in the environment too, to assert that the loaded CPUID dump is really the underlying system.

- HWLOC\_DUMPED\_HWDATA\_DIR=/path/to/dumped/files/ loads files dumped by hwloc-dump-hwdata (on Linux) from the given directory. The default dump/load directory is configured during build based on -- runstatedir, --localstatedir, and --prefix options. It usually points to /var/run/hwloc/ in Linux distribution packages, but it may also point to \$prefix/var/run/hwloc/ when manually installing and only specifying --prefix.
- **HWLOC\_COMPONENTS=list,of,components** forces a list of components to enable or disable. Enable or disable the given comma-separated list of components (if they do not conflict with each other). Component names prefixed with are disabled (a single phase may also be disabled).

Once the end of the list is reached, hwloc falls back to enabling the remaining components (sorted by priority) that do not conflict with the already enabled ones, and unless explicitly disabled in the list. If stop is met, the enabling loop immediately stops, no more component is enabled.

If xml or synthetic components are selected, the corresponding XML filename or synthetic description string should be pass in  $HWLOC\_XMLFILE$  or  $HWLOC\_SYNTHETIC$  respectively.

Since this variable is the low-level and more generic way to select components, it takes precedence over environment variables for selecting components.

If the variable is set to an empty string (or set to a single comma), no specific component is loaded first, all components are loaded in priority order.

See Selecting which components to use for details.

- **HWLOC\_COMPONENTS\_VERBOSE=1** displays verbose information about components. Display messages when components are registered or enabled. This is the recommended way to list the available components with their priority (all of them are *registered* at startup).
- **HWLOC\_PLUGINS\_PATH=/path/to/hwloc/plugins/:...** changes the default search directory for plugins. By default, \$libdir/hwloc is used. The variable may contain several colon-separated directories.
- **HWLOC\_PLUGINS\_VERBOSE=1** displays verbose information about plugins. List which directories are scanned, which files are loaded, and which components are successfully loaded.
- **HWLOC\_PLUGINS\_BLACKLIST=filename1,filename2,...** prevents plugins from being loaded if their filename (without path) is listed. Plugin filenames may be found in verbose messages outputted when HWLOC\_PL ∪GINS\_VERBOSE=1.
- **HWLOC\_DEBUG\_VERBOSE=0** disables all verbose messages that are enabled by default when <code>-enable-debug</code> is passed to configure.

22 Environment Variables

# **CPU and Memory Binding Overview**

Some operating systems do not systematically provide separate functions for CPU and memory binding. This means that CPU binding functions may have have effects on the memory binding policy. Likewise, changing the memory binding policy may change the CPU binding of the current thread. This is often not a problem for applications, so by default hwloc will make use of these functions when they provide better binding support.

If the application does not want the CPU binding to change when changing the memory policy, it needs to use the HWLOC\_MEMBIND\_NOCPUBIND flag to prevent hwloc from using OS functions which would change the CPU binding. Additionally, HWLOC\_CPUBIND\_NOMEMBIND can be passed to CPU binding function to prevent hwloc from using OS functions would change the memory binding policy. Of course, using these flags will reduce hwloc's overall support for binding, so their use is discouraged.

One can avoid using these flags but still closely control both memory and CPU binding by allocating memory, touching each page in the allocated memory, and then changing the CPU binding. The already-really-allocated memory will then be "locked" to physical memory and will not be migrated. Thus, even if the memory binding policy gets changed by the CPU binding order, the already-allocated memory will not change with it. When binding and allocating further memory, the CPU binding should be performed again in case the memory binding altered the previously-selected CPU binding.

Not all operating systems support the notion of a "current" memory binding policy for the current process, but such operating systems often still provide a way to allocate data on a given node set. Conversely, some operating systems support the notion of a "current" memory binding policy and do not permit allocating data on a specific node set without changing the current policy and allocate the data. To provide the most powerful coverage of these facilities, hwloc provides:

- functions that set/get the current memory binding policies (if supported): hwloc\_set/get\_membind() and hwloc\_set/get\_proc\_membind()
- a function that allocates memory bound to specific node set without changing the current memory binding policy (if supported): hwloc alloc membind().
- a helper which, if needed, changes the current memory binding policy of the process in order to obtain memory binding: hwloc\_alloc\_membind\_policy().

An application can thus use the two first sets of functions if it wants to manage separately the global process binding policy and directed allocation, or use the third set of functions if it does not care about the process memory binding policy.

See CPU binding and Memory binding for hwloc's API functions regarding CPU and memory binding, respectively. There are some examples under doc/examples/ in the source tree.

# I/O Devices

hwloc usually manipulates processing units and memory but it can also discover I/O devices and report their locality as well. This is useful for placing I/O intensive applications on cores near the I/O devices they use, or for gathering information about all platform components.

### 7.1 Enabling and requirements

I/O discovery is disabled by default (except in Istopo) for performance reasons. It can be enabled by changing the filtering of I/O object types to HWLOC\_TYPE\_FILTER\_KEEP\_IMPORTANT or HWLOC\_TYPE\_FILTER\_KEEP\_ALL before loading the topology, for instance with hwloc\_topology\_set\_io\_types\_filter().

Note that I/O discovery requires significant help from the operating system. The pciaccess library (the development package is usually libpciaccess-devel or libpciaccess-dev) is needed to fully detect PCI devices and bridges/switches. On Linux, PCI discovery may still be performed even if libpciaccess cannot be used. But it misses PCI device names. Moreover, some operating systems require privileges for probing PCI devices, see Does hwloc require privileged access? for details.

The actual locality of I/O devices is only currently detected on Linux. Other operating system will just report I/O devices as being attached to the topology root object.

### 7.2 I/O objects

When I/O discovery is enabled and supported, some additional objects are added to the topology. The corresponding I/O object types are:

- HWLOC\_OBJ\_OS\_DEVICE describes an operating-system-specific handle such as the *sda* drive or the *eth0* network interface. See OS devices.
- HWLOC\_OBJ\_PCI\_DEVICE and HWLOC\_OBJ\_BRIDGE build up a PCI hierarchy made of bridges (that may be actually be switches) and devices. See PCI devices and bridges.

Any of these types may be filtered individually with hwloc\_topology\_set\_type\_filter().

hwloc tries to attach these new objects to normal objects (usually NUMA nodes) to match their actual physical location. For instance, if a I/O hub (or root complex) is physically connected to a package, the corresponding hwloc bridge object (and its PCI bridges and devices children) is inserted as a child of the corresponding hwloc Package object. These children are not in the normal children list but rather in the I/O-specific children list.

I/O objects also have neither CPU sets nor node sets (NULL pointers) because they are not directly usable by the user applications for binding. Moreover I/O hierarchies may be highly complex (asymmetric trees of bridges). So I/O objects are placed in specific levels with custom depths. Their lists may still be traversed with regular helpers such as hwloc\_get\_next\_obj\_by\_type(). However, hwloc offers some dedicated helpers such as hwloc\_get\_next\_osdev() and hwloc\_get\_next\_osdev() for convenience (see Finding I/O objects).

#### 7.3 OS devices

Although each PCI device is uniquely identified by its bus ID (e.g. 0000:01:02.3), a user-space application can hardly find out which PCI device it is actually using. Applications rather use software handles (such as the eth0

26 I/O Devices

network interface, the *sda* hard drive, or the *mlx4\_0* OpenFabrics HCA). Therefore hwloc tries to add software devices (HWLOC\_OBJ\_OS\_DEVICE, also known as OS devices).

OS devices may be attached below PCI devices, but they may also be attached directly to normal objects. Indeed some OS devices are not related to PCI. For instance, NVDIMM block devices (such as *pmem0s* on Linux) are directly attached near their NUMA node (I/O child of the parent whose memory child is the NUMA node). Also, if hwloc could not discover PCI for some reason, PCI-related OS devices may also be attached directly to normal objects.

hwloc first tries to discover OS devices from the operating system, e.g. *eth0*, *sda* or *mlx4\_0*. However, this ability is currently only available on Linux for some classes of devices.

hwloc then tries to discover software devices through additional I/O components using external libraries. For instance proprietary graphics drivers do not expose any named OS device, but hwloc may still create one OS object per software handle when supported. For instance the opencl and cuda components may add some opencl0d0 and cuda0 OS device objects.

Here is a list of OS device objects commonly created by hwloc components when I/O discovery is enabled and supported.

- · Hard disks or non-volatile memory devices (HWLOC OBJ OSDEV BLOCK)
  - sda or dax2.0 (Linux component)
- Network interfaces (HWLOC OBJ OSDEV NETWORK)
  - eth0, wlan0, ib0 (Linux component)
- OpenFabrics (InfiniBand, Omni-Path, usNIC, etc) HCAs (HWLOC\_OBJ\_OSDEV\_OPENFABRICS)
  - mlx5\_0, hfi1\_0, qib0, usnic\_0 (Linux component)
- GPUs (HWLOC\_OBJ\_OSDEV\_GPU)
  - rsmi0 for the first RSMI device (RSMI component, using the AMD ROCm SMI library)
  - nvml0 for the first NVML device (NVML component, using the NVIDIA Management Library)
  - :0.0 for the first display (GL component, using the NV-CONTROL X extension library, NVCtrl)
- Co-Processors (HWLOC\_OBJ\_OSDEV\_COPROC)
  - opencl0d0 for the first device of the first OpenCL platform, opencl1d3 for the fourth device of the second OpenCL platform (OpenCL component)
  - cuda0 for the first NVIDIA CUDA device (CUDA component, using the NVIDIA CUDA Library)
  - DMA engine channel (HWLOC\_OBJ\_OSDEV\_DMA)
    - \* dma0chan0 (Linux component) when all OS devices are enabled (HWLOC\_TYPE\_FILTER\_KEEP\_ALL)

Note that some PCI devices may contain multiple software devices (see the example below).

See also Interoperability With Other Software for managing these devices without considering them as hwloc objects.

### 7.4 PCI devices and bridges

A PCI hierarchy is usually organized as follows: A hostbridge object ( <code>HWLOC\_OBJ\_BRIDGE</code> object with upstream type *Host* and downstream type *PCI*) is attached below a normal object (usually the entire machine or a NUMA node). There may be multiple hostbridges in the machine, attached to different places, but all PCI devices are below one of them (unless the Bridge object type is filtered-out).

Each hostbridge contains one or several children, either other bridges (usually PCI to PCI switches) or PCI devices (HWLOC\_OBJ\_PCI\_DEVICE). The number of bridges between the hostbridge and a PCI device depends on the machine.

### 7.5 Consulting I/O devices and binding

I/O devices may be consulted by traversing the topology manually (with usual routines such as hwloc\_get\_obj\_by\_type()) or by using dedicated helpers (such as hwloc\_get\_pcidev\_by\_busid(), see Finding I/O objects).

I/O objects do not actually contain any locality information because their CPU sets and node sets are NULL. Their locality must be retrieved by walking up the object tree (through the parent link) until an non-I/O object is found (see <a href="https://hwloc.get\_non\_io\_ancestor\_obj">hwloc.get\_non\_io\_ancestor\_obj</a>()). This normal object should have non-NULL CPU sets and node sets which describe the processing units and memory that are immediately close to the I/O device. For instance the path from a OS device to its locality may go across a PCI device parent, one or several bridges, up to a Package node with the same locality.

Command-line tools are also aware of I/O devices. Istopo displays the interesting ones by default (passing --no-io disables it).

hwloc-calc and hwloc-bind may manipulate I/O devices specified by PCI bus ID or by OS device name.

•	pci=0000:02:03.0	IS	replaced	by	the	set	ot	CPUs	that	are	close	to	the	PCI	device	whose	bus	ΙD	IS
	given.																		


• C	s=eth0 <b>is rep</b>	laced by CF	'Us that ar	e close to	the I/O de	vice whose so	ftware handle i	is called	eth0.
-----	----------------------	-------------	-------------	------------	------------	---------------	-----------------	-----------	-------

This enables easy binding of I/O-intensive applications near the device they use.

### 7.6 Examples

The following picture shows a dual-package dual-core host whose PCI bus is connected to the first package and NUMA node.

28 I/O Devices

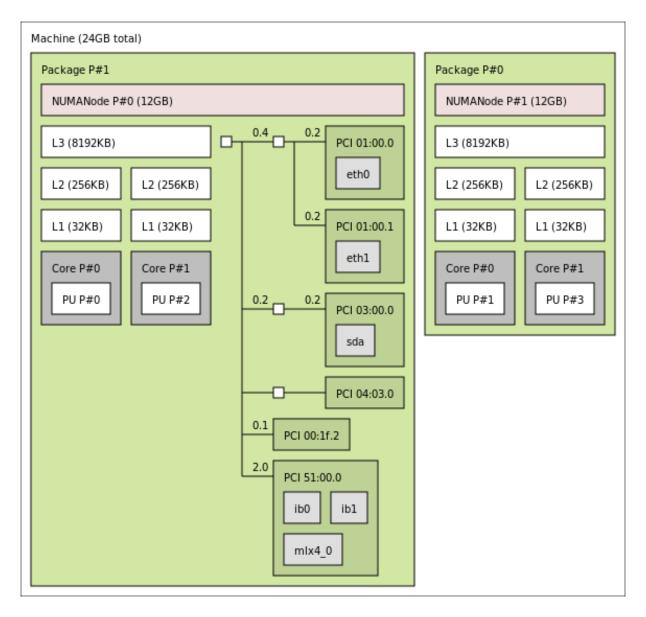

Six interesting PCI devices were discovered. However, hwloc found some corresponding software devices (*eth0*, *eth1*, *sda*, *mlx4\_0*, *ib0*, and *ib1*) for only four of these physical devices. The other ones (*PCI 102b:0532* and *PCI 8086:3a20*) are an unused IDE controller (no disk attached) and a graphic card (no corresponding software device reported to the user by the operating system).

On the contrary, it should be noted that three different software devices were found for the last PCI device ( $P \leftarrow CI \ 15b3:634a$ ). Indeed this OpenFabrics HCA PCI device object contains one one OpenFabrics software device ( $mlx4\_0$ ) and two virtual network interface software devices (ib0 and ib1). Here is the corresponding textual output:

```
Machine (24GB total)
  Package L#0
    NUMANode L#0 (P#0 12GB)
    L3 L#0 (8192KB)
      L2 L\#0 (256KB) + L1 L\#0 (32KB) + Core L\#0 + PU L\#0 (P\#0)
      L2 L#1 (256KB) + L1 L#1 (32KB) + Core L#1 + PU L#1 (P#2)
    HostBridge
      PCIBridge
        PCI 01:00.0 (Ethernet)
          Net "eth0"
        PCI 01:00.1 (Ethernet)
          Net "eth1"
      PCIBridge
        PCI 03:00.0 (RAID)
          Block "sda"
      PCIBridge
```

7.6 Examples 29

```
PCI 04:03.0 (VGA)
PCI 00:1f.2 (IDE)
PCI 51:00.0 (InfiniBand)
Net "ib0"
Net "ib1"
Net "mlx4_0"

Package L#1

NUMANode L#1 (P#1 12GB)
L3 L#1 (8192KB)
L2 L#2 (256KB) + L1 L#2 (32KB) + Core L#2 + PU L#2 (P#1)
L2 L#3 (256KB) + L1 L#3 (32KB) + Core L#3 + PU L#3 (P#3)
```

30 I/O Devices

# Miscellaneous objects

hwloc topologies may be annotated with Misc objects (of type HWLOC\_OBJ\_MISC) either automatically or by the user. This is an flexible way to annotate topologies with large sets of information since Misc objects may be inserted anywhere in the topology (to annotate specific objects or parts of the topology), even below other Misc objects, and each of them may contain multiple attributes (see also How do I annotate the topology with private notes?). These Misc objects may have a subtype field to replace Misc with something else in the Istopo output.

### 8.1 Misc objects added by hwloc

hwloc only uses Misc objects when other object types are not sufficient, and when the Misc object type is not filtered-out anymore. This currently includes:

- Memory modules (DIMMs), on Linux when privileged and when dmi-sysfs is supported by the kernel.
   These objects have a subtype field of value MemoryModule. They are currently always attached to the root object. Their attributes describe the DIMM vendor, model, etc. lstopo -v displays them as:
   Misc (MemoryModule) (P#1 DeviceLocation="Bottom-Slot 2(right)" BankLocation="BANK 2" Vendor=Elpida SerialNumber=21733667 AssetTag=9876543210 PartNumber="EBJ81UG8EFUO-GN-F")
- Displaying process binding in lstopo —top. These objects have a subtype field of value Process and a name attribute made of their PID and program name. They are attached below the object they are bound to. The textual lstopo displays them as:

  PU L#0 (P#0)

  Misc (Process) 4445 myprogram

#### 8.2 Annotating topologies with Misc objects

The user may annotate hwloc topologies with its own Misc objects. This can be achieved with hwloc\_topology\_insert\_misc\_ as well as hwloc-annotate command-line tool.

# **Object attributes**

#### 9.1 Normal attributes

hwloc objects have many generic attributes in the hwloc\_obj structure, for instance their logical\_index or os\_index (see Should I use logical or physical/OS indexes? and how?), depth or name.

The kind of object is first described by the obj->type generic attribute (an integer). OS devices also have a specific obj->attr->osdev.type integer for distinguishing between NICs, GPUs, etc. Objects may also have an optional obj->subtype pointing to a better description string. For instance subtype is useful to say what Group objects are actually made of (e.g. *Book* for Linux S/390 books). It may also specify that a Block OS device is a *Disk*, or that a CoProcessor OS device is a *CUDA* device. This subtype is displayed by Istopo either in place or after the main obj->type attribute. NUMA nodes that correspond GPU memory may also have *GPUMemory* as subtype.

Each object also contains an attr field that, if non NULL, points to a union hwloc\_obj\_attr\_u of type-specific attribute structures. For instance, a L2Cache object obj contains cache-specific information in obj->attr->cache, such as its size and associativity, cache type. See hwloc\_obj\_attr\_u for details.

### 9.2 Custom string infos

Aside os these generic attribute fields, hwloc annotates many objects with string attributes that are made of a key and a value. Each object contains a list of such pairs that may be consulted manually (looking at the object infos array field) or using the hwloc\_obj\_get\_info\_by\_name(). The user may additionally add new key-value pairs to any object using hwloc\_obj\_add\_info() or the hwloc-annotate program.

Here is a non-exhaustive list of attributes that may be automatically added by hwloc. Note that these attributes heavily depend on the ability of the operating system to report them. Many of them will therefore be missing on some OS.

#### 9.2.1 Hardware Platform Information

These info attributes are attached to the root object (Machine).

PlatformName, PlatformModel, PlatformVendor, PlatformBoardID, PlatformRevision,

SystemVersionRegister, ProcessorVersionRegister (Machine) Some POWER/PowerPC-specific attributes describing the platform and processor. Currently only available on Linux. Usually added to Package objects, but can be in Machine instead if hwloc failed to discover any package.

**DMIBoardVendor, DMIBoardName, etc.** DMI hardware information such as the motherboard and chassis models and vendors, the BIOS revision, etc., as reported by Linux under /sys/class/dmi/id/.

**MemoryMode, ClusterMode** Intel Xeon Phi processor configuration modes. Available if hwloc-dump-hwdata was used (see Why do I need hwloc-dump-hwdata for memory on Intel Xeon Phi processor?) or if hwloc managed to guess them from the NUMA configuration.

The memory mode may be *Cache*, *Flat*, *Hybrid50* (half the MCDRAM is used as a cache) or *Hybrid25* (25% of MCDRAM as cache). The cluster mode may be *Quadrant*, *Hemisphere*, *All2All*, *SNC2* or *SNC4*. See doc/examples/get-knl-modes.c in the source directory for an example of retrieving these attributes.

34 Object attributes

#### 9.2.2 Operating System Information

These info attributes are attached to the root object (Machine).

**OSName, OSRelease, OSVersion, HostName, Architecture** The operating system name, release, version, the hostname and the architecture name, as reported by the Unix uname command.

**LinuxCgroup** The name the Linux control group where the calling process is placed.

#### 9.2.3 hwloc Information

Unless specified, these info attributes are attached to the root object (Machine).

Backend (topology root, or specific object added by that backend) The name of the hwloc backend/component that filled the topology. If several components were combined, multiple Backend keys may exist, with different values, for instance x86 and Linux in the root object and CUDA in CUDA OS device objects.

SyntheticDescription The description string that was given to hwloc to build this synthetic topology.

**hwlocVersion** The version number of the hwloc library that was used to generate the topology. If the topology was loaded from XML, this is not the hwloc version that loaded it, but rather the first hwloc instance that exported the topology to XML earlier.

**ProcessName** The name of the process that contains the hwloc library that was used to generate the topology. If the topology was from XML, this is not the hwloc process that loaded it, but rather the first process that exported the topology to XML earlier.

#### 9.2.4 CPU Information

These info attributes are attached to Package objects, or to the root object (Machine) if package locality information is missing.

**CPUModel** The processor model name.

**CPUVendor, CPUModelNumber, CPUFamilyNumber, CPUStepping** The processor vendor name, model number, family number, and stepping number. Currently available for x86 and Xeon Phi processors on most systems, and for ia64 processors on Linux (except CPUStepping).

CPURevision A POWER/PowerPC-specific general processor revision number, currently only available on Linux.

CPUType A Solaris-specific general processor type name, such as "i86pc".

#### 9.2.5 OS Device Information

These info attributes are attached to OS device objects specified in parentheses.

**Vendor, Model, Revision, SerialNumber, Size, SectorSize (Block OS devices)** The vendor and model names, revision, serial number, size (in kB) and SectorSize (in bytes).

LinuxDeviceID (Block OS devices) The major/minor device number such as 8:0 of Linux device.

GPUVendor, GPUModel (GPU or Co-Processor OS devices) The vendor and model names of the GPU device.

OpenCLDeviceType, OpenCLPlatformIndex,

**OpenCLPlatformName, OpenCLPlatformDeviceIndex (OpenCL OS devices)** The type of OpenCL device, the OpenCL platform index and name, and the index of the device within the platform.

**OpenCLComputeUnits, OpenCLGlobalMemorySize (OpenCL OS devices)** The number of compute units and global memory size (in kB) of an OpenCL device.

AMDUUID, AMDSerial (RSMI GPU OS devices) The UUID and serial number of AMD GPUs.

XGMIHiveID (RSMI GPU OS devices) The ID of the group of GPUs (Hive) interconnected by XGMI links

- **XGMIPeers (RSMI GPU OS devices)** The list of RSMI OS devices that are directly connected to the current device through XGMI links. They are given as a space-separated list of object names, for instance *rsmi2 rsmi3*.
- NVIDIAUUID, NVIDIASerial (NVML GPU OS devices) The UUID and serial number of NVIDIA GPUs.
- CUDAMultiProcessors, CUDACoresPerMP,
- **CUDAGlobalMemorySize**, **CUDAL2CacheSize**, **CUDASharedMemorySizePerMP** (**CUDA OS devices**) The number of shared multiprocessors, the number of cores per multiprocessor, the global memory size, the (global) L2 cache size, and size of the shared memory in each multiprocessor of a CUDA device. Sizes are in kB.
- **Address, Port (Network interface OS devices)** The MAC address and the port number of a software network interface, such as eth4 on Linux.
- NodeGUID, SysImageGUID, Port1State, Port2LID, Port2LMC, Port3GID1 (OpenFabrics OS devices) The node GUID and GUID mask, the state of a port #1 (value is 4 when active), the LID and LID mask count of port #2, and GID #1 of port #3.

#### 9.2.6 Other Object-specific Information

These info attributes are attached to objects specified in parentheses.

- **DAXDevice (NUMA Nodes)** The name of the Linux DAX device that was used to expose a non-volatile memory region as a volatile NUMA node.
- **PCIBusID (GPUMemory NUMA Nodes)** The PCI bus ID of the GPU whose memory is exposed in this NUMA node.
- **Inclusive (Caches)** The inclusiveness of a cache (1 if inclusive, 0 otherwise). Currently only available on x86 processors.
- **SolarisProcessorGroup (Group)** The Solaris kstat processor group name that was used to build this Group object.
- PCIVendor, PCIDevice (PCI devices and bridges) The vendor and device names of the PCI device.
- **PCISIot (PCI devices or Bridges)** The name/number of the physical slot where the device is plugged. If the physical device contains PCI bridges above the actual PCI device, the attribute may be attached to the highest bridge (i.e. the first object that actually appears below the physical slot).
- **Vendor, AssetTag, PartNumber, DeviceLocation, BankLocation (MemoryModule Misc objects)** Information about memory modules (DIMMs) extracted from SMBIOS.

#### 9.2.7 User-Given Information

Here is a non-exhaustive list of user-provided info attributes that have a special meaning:

**IstopoStyle** Enforces the style of an object (background and text colors) in the graphical output of Istopo. See CUSTOM COLORS in the Istopo(1) manpage for details.

36 Object attributes

# Importing and exporting topologies from/to XML files

hwloc offers the ability to export topologies to XML files and reload them later. This is for instance useful for loading topologies faster (see I do not want hwloc to rediscover my enormous machine topology every time I rerun a process), manipulating other nodes' topology, or avoiding the need for privileged processes (see Does hwloc require privileged access?). Topologies may be exported to XML files thanks to hwloc\_topology\_export\_xml(), or to a XML memory buffer with hwloc\_topology\_export\_xmlbuffer(). The Istopo program can also serve as a XML topology export tool. XML topologies may then be reloaded later with hwloc\_topology\_set\_xml() and hwloc\_topology\_set\_xmlbuffer(). The HWLOC\_XMLFILE environment variable also tells hwloc to load the topology from the given XML file (see Environment Variables).

Note

Loading XML topologies disables binding because the loaded topology may not correspond to the physical machine that loads it. This behavior may be reverted by asserting that loaded file really matches the underlying system with the HWLOC\_THISSYSTEM environment variable or the HWLOC\_TOPOLOGY\_FLAG\_IS\_THISSYSTEM topology flag.

The topology flag HWLOC\_TOPOLOGY\_FLAG\_THISSYSTEM\_ALLOWED\_RESOURCES may be used to load a XML topology that contains the entire machine and restrict it to the part that is actually available to the current process (e.g. when Linux Cgroup/Cpuset are used to restrict the set of resources).

hwloc also offers the ability to export/import Topology differences.

XML topology files are not localized. They use a dot as a decimal separator. Therefore any exported topology can be reloaded on any other machine without requiring to change the locale.

XML exports contain all details about the platform. It means that two very similar nodes still have different XML exports (e.g. some serial numbers or MAC addresses are different). If a less precise exporting/importing is required, one may want to look at Synthetic topologies instead.

#### 10.1 libxml2 and minimalistic XML backends

hwloc offers two backends for importing/exporting XML.

First, it can use the libxml2 library for importing/exporting XML files. It features full XML support, for instance when those files have to be manipulated by non-hwloc software (e.g. a XSLT parser). The libxml2 backend is enabled by default if libxml2 development headers are available (the relevant development package is usually libxml2-devel or libxml2-dev).

If libxml2 is not available at configure time, or if <code>--disable-libxml2</code> is passed, hwloc falls back to a custom backend. Contrary to the aforementioned full XML backend with libxml2, this minimalistic XML backend cannot be guaranteed to work with external programs. It should only be assumed to be compatible with the same hwloc release (even if using the libxml2 backend). Its advantage is, however, to always be available without requiring any external dependency.

If libxml2 is available but the core hwloc library should not directly depend on it, the libxml2 support may be built as a dynamicall-loaded plugin. One should pass --enable-plugins to enable plugin support (when supported) and build as plugins all component that support it. Or pass  $--enable-plugins=xml_libxml$  to only build this libxml2 support as a plugin.

### 10.2 XML import error management

Importing XML files can fail at least because of file access errors, invalid XML syntax, non-hwloc-valid XML contents, or incompatibilities between hwloc releases (see Are XML topology files compatible between hwloc releases?). Both backend cannot detect all these errors when the input XML file or buffer is selected (when hwloc\_topology\_set\_xml() or hwloc\_topology\_set\_xmlbuffer() is called). Some errors such non-hwloc-valid contents can only be detected later when loading the topology with hwloc\_topology\_load().

It is therefore strongly recommended to check the return value of both <a href="https://hww.co.topology\_set\_xml">https://hww.co.topology\_set\_xml</a>() (or <a href="https://hww.co.topology\_set\_xml">https://hww.co.topology\_set\_xml</a>() and <a href="https://hww.co.topology\_load">https://hww.co.topology\_set\_xml</a>() and <a href="https://hww.co.topology\_load">https://hww.co.topology\_load</a>() to handle all these errors.

# Synthetic topologies

hwloc may load fake or remote topologies so as to consult them without having the underlying hardware available. Aside from loading XML topologies, hwloc also enables the building of *synthetic* topologies that are described by a single string listing the arity of each levels.

For instance, Istopo may create a topology made of 2 packages, containing a single NUMA node and a L2 cache above two single-threaded cores:

```
$ lstopo -i "pack:2 node:1 l2:1 core:2 pu:1" -
Machine (2048MB)
Package L#0
   NUMANode L#0 (P#0 1024MB)
   L2 L#0 (4096KB)
   Core L#0 + PU L#0 (P#0)
   Core L#1 + PU L#1 (P#1)
Package L#1
   NUMANode L#1 (P#1 1024MB)
   L2 L#1 (4096KB)
   Core L#2 + PU L#2 (P#2)
   Core L#3 + PU L#3 (P#3)
```

Replacing - with file.xml in this command line will export this topology to XML as usual.

Note

Synthetic topologies offer a very basic way to export a topology and reimport it on another machine. It is a lot less precise than XML but may still be enough when only the hierarchy of resources matters.

## 11.1 Synthetic description string

Each item in the description string gives the type of the level and the number of such children under each object of the previous level. That is why the above topology contains 4 cores (2 cores times 2 nodes).

These type names must be written as numanode, package, core, 12u, 11i, pu, group (hwloc\_obj\_type\_⇔ sscanf() is used for parsing the type names). They do not need to be written case-sensitively, nor entirely (as long as there is no ambiguity, 2 characters such as ma select a Machine level). Note that I/O and Misc objects are not available.

Instead of specifying the type of each level, it is possible to just specify the arities and let hwloc choose all types according to usual topologies. The following examples are therefore equivalent:

```
$ lstopo -i "2 3 4 5 6"
$ lstopo -i "Package:2 NUMANode:3 L2Cache:4 Core:5 PU:6"
```

NUMA nodes are handled in a special way since they are not part of the main CPU hierarchy but rather attached below it as memory children. Thus, NUMANode: 3 actually means Group: 3 where one NUMA node is attached below each group. These groups are merged back into the parent when possible (typically when a single NUMA node is requested below each parent).

It is also possible the explicitly attach NUMA nodes to specific levels. For instance, a topology similar to a Intel Xeon Phi processor (with 2 NUMA nodes per 16-core group) may be created with:

```
$ lstopo -i "package:1 group:4 [numa] [numa] core:16 pu:4"
```

40 Synthetic topologies

The root object does not appear in the synthetic description string since it is always a Machine object. Therefore the Machine type is disallowed in the description as well.

A NUMA level (with a single NUMA node) is automatically added if needed.

Each item may be followed parentheses containing a list of space-separated attributes. For instance:

- L2iCache: 2 (size=32kB) specifies 2 children of 32kB level-2 instruction caches. The size may be specified in bytes (without any unit suffix) or as TB, GB, MB or kB.
- NUMANode: 3 (memory=16MB) specifies 3 NUMA nodes with 16MB each. The size may be specified in bytes (without any unit suffix) or as TB, GB, MB or kB.
- PU:2 (indexes=0, 2, 1, 3) specifies 2 PU children and the full list of OS indexes among the entire set of 4 PU objects.
- PU:2 (indexes=numa:core) specifies 2 PU children whose OS indexes are interleaved by NUMA node first and then by package.
- Attributes in parentheses at the very beginning of the description apply to the root object.

#### 11.2 Loading a synthetic topology

Aside from Istopo, the hwloc programming interface offers the same ability by passing the synthetic description string to hwloc topology set synthetic() before hwloc topology load().

Synthetic topologies are created by the synthetic component. This component may be enabled by force by setting the HWLOC\_SYNTHETIC environment variable to something such as node: 2 core: 3 pu: 4.

Loading a synthetic topology disables binding support since the topology usually does not match the underlying hardware. Binding may be reenabled as usual by setting HWLOC\_THISSYSTEM=1 in the environment or by setting the HWLOC\_TOPOLOGY\_FLAG\_IS\_THISSYSTEM topology flag.

### 11.3 Exporting a topology as a synthetic string

The function hwloc\_topology\_export\_synthetic() may export a topology as a synthetic string. It offers a convenient way to quickly describe the contents of a machine. The Istopo tool may also perform such an export by forcing the output format.

```
$ lstopo --of synthetic --no-io
Package:1 L3Cache:1 L2Cache:2 L1dCache:1 L1iCache:1 Core:1 PU:2
```

The exported string may be passed back to hwloc for recreating another similar topology (see also Are synthetic strings compatible between hwloc releases?). The entire tree will be similar, but some attributes such as the processor model will be missing.

Such an export is only possible if the topology is totally symmetric. It means that the symmetric\_subtree field of the root object is set. Also memory children should be attached in a symmetric way (e.g. the same number of memory children below each Package object, etc.). However, I/O devices and Misc objects are ignored when looking at symmetry and exporting the string.

# **Interoperability With Other Software**

Although hwloc offers its own portable interface, it still may have to interoperate with specific or non-portable libraries that manipulate similar kinds of objects. hwloc therefore offers several specific "helpers" to assist converting between those specific interfaces and hwloc.

Some external libraries may be specific to a particular OS; others may not always be available. The hwloc core therefore generally does not explicitly depend on these types of libraries. However, when a custom application uses or otherwise depends on such a library, it may optionally include the corresponding hwloc helper to extend the hwloc interface with dedicated helpers.

Most of these helpers use structures that are specific to these external libraries and only meaningful on the local machine. If so, the helper requires the input topology to match the current machine. Some helpers also require I/O device discovery to be supported and enabled for the current topology.

- **Linux specific features** hwloc/linux.h offers Linux-specific helpers that utilize some non-portable features of the Linux system, such as binding threads through their thread ID ("tid") or parsing kernel CPU mask files.
- **Linux libnuma** hwloc/linux-libnuma.h provides conversion helpers between hwloc CPU sets and libnuma-specific types, such as bitmasks. It helps you use libnuma memory-binding functions with hwloc CPU sets.
- **Glibc** hwloc/glibc-sched.h offers conversion routines between Glibc and hwloc CPU sets in order to use hwloc with functions such as sched\_getaffinity() or pthread\_attr\_setaffinity\_np().
- **OpenFabrics Verbs** hwloc/openfabrics-verbs.h helps interoperability with the OpenFabrics Verbs interface. For example, it can return a list of processors near an OpenFabrics device. It may also return the corresponding OS device hwloc object for further information (if I/O device discovery is enabled).
- **OpenCL** hwloc/opencl.h enables interoperability with the OpenCL interface. Only the AMD and NVIDIA implementations currently offer locality information. It may return the list of processors near a GPU given as a cl\_device\_id. It may also return the corresponding OS device hwloc object for further information (if I/O device discovery is enabled).
- **AMD ROCm SMI Library (RSMI)** hwloc/rsmi.h enables interoperability with the AMD ROCm SMI interface. It may return the list of processors near an AMD GPU. It may also return the corresponding OS device hwloc object for further information (if I/O device discovery is enabled).
- **NVIDIA CUDA hwloc/cuda.h** and **hwloc/cudart.h** enable interoperability with NVIDIA CUDA Driver and Runtime interfaces. For instance, it may return the list of processors near NVIDIA GPUs. It may also return the corresponding OS device hwloc object for further information (if I/O device discovery is enabled).
- **NVIDIA Management Library (NVML) hwloc/nvml.h** enables interoperability with the NVIDIA NVML interface. It may return the list of processors near a NVIDIA GPU given as a nvmlDevice\_t. It may also return the corresponding OS device hwloc object for further information (if I/O device discovery is enabled).
- **NVIDIA displays hwloc/gl.h** enables interoperability with NVIDIA displays using the NV-CONTROL X extension (NVCtrl library). If I/O device discovery is enabled, it may return the OS device hwloc object that corresponds to a display given as a name such as :0.0 or given as a port/device pair (server/screen).
- **Taskset command-line tool** The taskset command-line tool is widely used for binding processes. It manipulates CPU set strings in a format that is slightly different from hwloc's one (it does not divide the string in fixed-size subsets and separates them with commas). To ease interoperability, hwloc offers routines to convert

hwloc CPU sets from/to taskset-specific string format. Most hwloc command-line tools also support the --taskset option to manipulate taskset-specific strings.

# **Thread Safety**

Like most libraries that mainly fill data structures, hwloc is not thread safe but rather reentrant: all state is held in a hwloc\_topology\_t instance without mutex protection. That means, for example, that two threads can safely operate on and modify two different hwloc\_topology\_t instances, but they should not simultaneously invoke functions that modify the *same* instance. Similarly, one thread should not modify a hwloc\_topology\_t instance while another thread is reading or traversing it. However, two threads can safely read or traverse the same hwloc\_topology\_t instance concurrently.

When running in multiprocessor environments, be aware that proper thread synchronization and/or memory coherency protection is needed to pass hwloc data (such as <a href="hwloc\_topology\_t">hwloc\_topology\_t</a> pointers) from one processor to another (e.g., a mutex, semaphore, or a memory barrier). Note that this is not a hwloc-specific requirement, but it is worth mentioning.

For reference, hwloc topology t modification operations include (but may not be limited to):

Creation and destruction <a href="https://www.hwloc\_topology\_init">hwloc\_topology\_init</a>(), <a href="https://hwloc\_topology\_load">hwloc\_topology\_destroy</a>(see Topology Creation and Destruction) imply major modifications of the structure, including freeing some objects. No other thread cannot access the topology or any of its objects at the same time.

Also references to objects inside the topology are not valid anymore after these functions return.

Runtime topology modifications hwloc\_topology\_insert\_misc\_object(), hwloc\_topology\_alloc\_group\_o and hwloc\_topology\_insert\_group\_object() (see Modifying a loaded Topology) may modify the topology significantly by adding objects inside the tree, changing the topology depth, etc.

hwloc\_distances\_add() and hwloc\_distances\_remove() (see Add or remove distances between objects) modify the list of distance structures in the topology, and the former may even insert new Group objects.

hwloc\_memattr\_register() and hwloc\_memattr\_set\_value() (see Managing memory attributes) modify the memory attributes of the topology.

 $hwloc\_topology\_restrict$  () modifies the topology even more dramatically by removing some objects.

hwloc\_topology\_refresh() updates some internal cached structures. (see below).

Although references to former objects *may* still be valid after insertion or restriction, it is strongly advised to not rely on any such guarantee and always re-consult the topology to reacquire new instances of objects.

**Consulting distances** hwloc\_distances\_get () and its variants are thread-safe except if the topology was recently modified (because distances may involve objects that were removed).

Whenever the topology is modified (see above), hwloc\_topology\_refresh() should be called in the same thread-safe context to force the refresh of internal distances structures. A call to hwloc\_distances\_get() may also refresh distances-related structures.

Once this refresh has been performed, multiple  $hwloc\_distances\_get$  () may then be performed concurrently by multiple threads.

**Consulting memory attributes** Functions consulting memory attributes in **hwloc/memattrs.h** are thread-safe except if the topology was recently modified (because memory attributes may involve objects that were removed).

Whenever the topology is modified (see above), hwloc\_topology\_refresh() should be called in the same thread-safe context to force the refresh of internal memory attribute structures. A call to

44 Thread Safety

hwloc\_memattr\_get\_value() or hwloc\_memattr\_get\_targets() may also refresh internal structures for a given memory attribute.

Once this refresh has been performed, multiple functions consulting memory attributes may then be performed concurrently by multiple threads.

**Locating topologies** hwloc\_topology\_set\_\* (see Topology Detection Configuration and Query) do not modify the topology directly, but they do modify internal structures describing the behavior of the upcoming invocation of hwloc\_topology\_load(). Hence, all of these functions should not be used concurrently.

# **Components and plugins**

hwloc is organized in components that are responsible for discovering objects. Depending on the topology configuration, some components will be used, some will be ignored. The usual default is to enable the native operating system component, (e.g. linux or solaris) and the pci miscellaneous component. If available, an architecture-specific component (such as x86) may also improve the topology detection.

If a XML topology is loaded, the xml discovery component will be used instead of all other components. It internally uses a specific class of components for the actual XML import/export routines (xml\_libxml and xml\_\circ nolibxml) but these will not be discussed here (see libxml2 and minimalistic XML backends).

#### 14.1 Components enabled by default

The hwloc core contains a list of components sorted by priority. Each one is enabled as long as it does not conflict with the previously enabled ones. This includes native operating system components, architecture-specific ones, and if available, I/O components such as pci.

Usually the native operating system component (when it exists, e.g. linux or aix) is enabled first. Then hwloc looks for an architecture specific component (e.g. x86). Finally there also exist a basic component (no\_os) that just tries to discover the number of PUs in the system.

Each component discovers as much topology information as possible. Most of them, including most native OS components, do nothing unless the topology is still empty. Some others, such as x86 and pci, can complete and annotate what other backends found earlier. Discovery is performed by phases: CPUs are first discovered, then memory is attached, then PCI, etc.

Default priorities ensure that clever components are invoked first. Native operating system components have higher priorities, and are therefore invoked first, because they likely offer very detailed topology information. If needed, it will be later extended by architecture-specific information (e.g. from the x86 component).

If any configuration function such as <a href="https://hww.nucleon.org/hwloc.google-set\_xml">hwloc\_topology\_set\_xml</a>() is used before loading the topology, the corresponding component is enabled first. Then, as usual, hwloc enables any other component (based on priorities) that does not conflict.

Certain components that manage a virtual topology, for instance XML topology import or synthetic topology description, conflict with all other components. Therefore, one of them may only be loaded (e.g. with <a href="https://www.hwloc\_topology\_set\_xml">hwloc\_topology\_set\_xml</a> ()) if no other component is enabled.

The environment variable HWLOC\_COMPONENTS\_VERBOSE may be set to get verbose messages about component registration (including their priority) and enabling.

### 14.2 Selecting which components to use

If no topology configuration functions such as  $hwloc\_topology\_set\_synthetic()$  have been called, plugins may be selected with environment variables such as  $HWLOC\_XMLFILE$ ,  $HWLOC\_SYNTHETIC$ ,  $HWLOC\_CPUID\_PATH$  (see Environment Variables).

Finally, the environment variable HWLOC\_COMPONENTS resets the list of selected components. If the variable is set and empty (or set to a single comma separating nothing, since some operating systems do not accept empty variables), the normal plugin priority order is used.

If the variable is set to x86 in this variable will cause the x86 component to take precedence over any other component, including the native operating system component. It is therefore loaded first, before hwloc tries to load

all remaining non-conflicting components. In this case, x86 would take care of discovering everything it supports, instead of only completing what the native OS information. This may be useful if the native component is buggy on some platforms.

It is possible to prevent some components from being loaded by prefixing their name with – in the list. For instance x86, -pci will load the x86 component, then let hwloc load all the usual components except pci. A single component phase may also be blacklisted, for instance with -linux:io. hwloc\_topology\_set\_components() may also be used inside the program to prevent the loading of a specific component (or phases) for the target topology. It is possible to prevent all remaining components from being loaded by placing stop in the environment variable. Only the components listed before this keyword will be enabled.

#### 14.3 Loading components from plugins

Components may optionally be built as plugins so that the hwloc core library does not directly depend on their dependencies (for instance the libpciaccess library). Plugin support may be enabled with the --enable-plugins configure option. All components buildable as plugins will then be built as plugins. The configure option may be given a comma-separated list of component names to specify the exact list of components to build as plugins.

Plugins are built as independent dynamic libraries that are installed in \$libdir/hwloc. All plugins found in this directory are loaded during topology\_init() (unless blacklisted in HWLOC\_PLUGINS\_BLACKLIST, see Environment Variables). A specific list of directories (colon-separated) to scan may be specified in the HWLOC\_P LUGINS PATH environment variable.

Note that loading a plugin just means that the corresponding component is registered to the hwloc core. Components are then only enabled if the topology configuration requests it, as explained in the previous sections.

Also note that plugins should carefully be enabled and used when embedding hwloc in another project, see Embedding hwloc in Other Software for details.

### 14.4 Existing components and plugins

All components distributed within hwloc are listed below. The list of actually available components may be listed at running with the HWLOC\_COMPONENTS\_VERBOSE environment variable (see Environment Variables).

- **linux** The official component for discovering CPU, memory and I/O devices on Linux. It discovers PCI devices without the help of external libraries such as libpciaccess, but requires the pci component for adding vendor/device names to PCI objects. It also discovers many kinds of Linux-specific OS devices.
- **aix**, **darwin**, **freebsd**, **hpux**, **netbsd**, **solaris**, **windows** Each officially supported operating system has its own native component, which is statically built when supported, and which is used by default.
- **x86** The x86 architecture (either 32 or 64 bits) has its own component that may complete or replace the previously-found CPU information. It is statically built when supported.
- bgq This component is specific to IBM BlueGene/Q compute node (running CNK). It is built and enabled by default when --host=powerpc64-bgq-linux is passed to configure (see How do I build hwloc for BlueGene/Q?).
- **no\_os** A basic component that just tries to detect the number of processing units in the system. It mostly serves on operating systems that are not natively supported. It is always statically built.
- pci PCI object discovery uses the external pciaccess library (aka libpciaccess); see I/O Devices. It may also annotate existing PCI devices with vendor and device names. It may be built as a plugin.
- opencl The OpenCL component creates co-processor OS device objects such as opencl0d0 (first device of the first OpenCL platform) or opencl1d3 (fourth device of the second platform). Only the AMD and NVIDIA OpenCL implementations currently offer locality information. It may be built as a plugin.
- **rsmi** This component creates GPU OS device objects such as *rsmi0* for describing AMD GPUs. **It may be built as a plugin**.
- **cuda** This component creates co-processor OS device objects such as *cuda0* that correspond to NVIDIA GPUs used with CUDA library. **It may be built as a plugin**.

- **nvml** Probing the NVIDIA Management Library creates OS device objects such as *nvml0* that are useful for batch schedulers. It also detects the actual PCIe link bandwidth without depending on power management state and without requiring administrator privileges. **It may be built as a plugin**.
- **gl** Probing the NV-CONTROL X extension (NVCtrl library) creates OS device objects such as :0.0 corresponding to NVIDIA displays. They are useful for graphical applications that need to place computation and/or data near a rendering GPU. **It may be built as a plugin**.

synthetic Synthetic topology support (see Synthetic topologies) is always built statically.

- **xml** XML topology import (see Importing and exporting topologies from/to XML files) is always built statically. It internally uses one of the XML backends (see libxml2 and minimalistic XML backends).
  - xml\_nolibxml is a basic and hwloc-specific XML import/export. It is always statically built.
  - xml\_libxml relies on the external libxml2 library for provinding a feature-complete XML import/export. It may be built as a plugin.

fake A dummy plugin that does nothing but is used for debugging plugin support.

# **Embedding hwloc in Other Software**

It can be desirable to include hwloc in a larger software package (be sure to check out the LICENSE file) so that users don't have to separately download and install it before installing your software. This can be advantageous to ensure that your software uses a known-tested/good version of hwloc, or for use on systems that do not have hwloc pre-installed.

When used in "embedded" mode, hwloc will:

- · not install any header files
- · not build any documentation files
- · not build or install any executables or tests
- not build libhwloc.\* instead, it will build libhwloc\_embedded.\*

There are two ways to put hwloc into "embedded" mode. The first is directly from the configure command line:

```
shell\$ ./configure --enable-embedded-mode ...
```

The second requires that your software project uses the GNU Autoconf / Automake / Libtool tool chain to build your software. If you do this, you can directly integrate hwloc's m4 configure macro into your configure script. You can then invoke hwloc's configuration tests and build setup by calling an m4 macro (see below).

Although hwloc dynamic shared object plugins may be used in embedded mode, the embedder project will have to manually setup dlopen or libltdl in its build system so that hwloc can load its plugins at run time. Also, embedders should be aware of complications that can arise due to public and private linker namespaces (e.g., if the embedder project is loaded into a private namespace and then hwloc tries to dynamically load its plugins, such loading may fail since the hwloc plugins can't find the hwloc symbols they need). The embedder project is **strongly** advised not to use hwloc's dynamically loading plugins / dlopen / libltdl capability.

## 15.1 Using hwloc's M4 Embedding Capabilities

Every project is different, and there are many different ways of integrating hwloc into yours. What follows is *one* example of how to do it.

If your project uses recent versions Autoconf, Automake, and Libtool to build, you can use hwloc's embedded m4 capabilities. We have tested the embedded m4 with projects that use Autoconf 2.65, Automake 1.11.1, and Libtool 2.2.6b. Slightly earlier versions of may also work but are untested. Autoconf versions prior to 2.65 are almost certain to not work

You can either copy all the config/hwloc\*m4 files from the hwloc source tree to the directory where your project's m4 files reside, or you can tell aclocal to find more m4 files in the embedded hwloc's "config" subdirectory (e.g., add "-lpath/to/embedded/hwloc/config" to your Makefile.am's ACLOCAL\_AMFLAGS).

The following macros can then be used from your configure script (only HWLOC\_SETUP\_CORE *must* be invoked if using the m4 macros):

HWLOC\_SETUP\_CORE(config-dir-prefix, action-upon-success, action-upon-failure, print\_banner\_or\_not) ←
 Invoke the hwloc configuration tests and setup the hwloc tree to build. The first argument is the prefix to use for AC\_OUTPUT files – it's where the hwloc tree is located relative to \$top\_srcdir. Hence, if your

embedded hwloc is located in the source tree at contrib/hwloc, you should pass <code>[contrib/hwloc]</code> as the first argument. If HWLOC\_SETUP\_CORE and the rest of <code>configure</code> completes successfully, then "make" traversals of the hwloc tree with standard Automake targets (all, clean, install, etc.) should behave as expected. For example, it is safe to list the hwloc directory in the SUBDIRS of a higher-level Makefile.am. The last argument, if not empty, will cause the macro to display an announcement banner that it is starting the hwloc core configuration tests.

HWLOC\_SETUP\_CORE will set the following environment variables and AC\_SUBST them: HWLOC\_EM⇔ BEDDED\_CFLAGS, HWLOC\_EMBEDDED\_CPPFLAGS, and HWLOC\_EMBEDDED\_LIBS. These flags are filled with the values discovered in the hwloc-specific m4 tests, and can be used in your build process as relevant. The \_CFLAGS, \_CPPFLAGS, and \_LIBS variables are necessary to build libhwloc (or libhwloc\_⇔ embedded) itself.

HWLOC\_SETUP\_CORE also sets HWLOC\_EMBEDDED\_LDADD environment variable (and AC\_SUBSTs it) to contain the location of the libhwloc\_embedded.la convenience Libtool archive. It can be used in your build process to link an application or other library against the embedded hwloc library.

NOTE: If the HWLOC\_SET\_SYMBOL\_PREFIX macro is used, it must be invoked *before* HWLOC\_SE ← TUP\_CORE.

- HWLOC\_BUILD\_STANDALONE: HWLOC\_SETUP\_CORE defaults to building hwloc in an "embedded" mode (described above). If HWLOC\_BUILD\_STANDALONE is invoked \*before\* HWLOC\_SETUP\_CO← RE, the embedded definitions will not apply (e.g., libhwloc.la will be built, not libhwloc\_embedded.la).
- HWLOC\_SET\_SYMBOL\_PREFIX(foo\_): Tells the hwloc to prefix all of hwloc's types and public symbols with "foo\_"; meaning that function hwloc\_init() becomes foo\_hwloc\_init(). Enum values are prefixed with an upper-case translation if the prefix supplied; HWLOC\_OBJ\_CORE becomes FOO\_hwloc\_OBJ\_CORE. This is recommended behavior if you are including hwloc in middleware it is possible that your software will be combined with other software that links to another copy of hwloc. If both uses of hwloc utilize different symbol prefixes, there will be no type/symbol clashes, and everything will compile, link, and run successfully. If you both embed hwloc without changing the symbol prefix and also link against an external hwloc, you may get multiple symbol definitions when linking your final library or application.
- HWLOC\_SETUP\_DOCS, HWLOC\_SETUP\_UTILS, HWLOC\_SETUP\_TESTS: These three macros only apply when hwloc is built in "standalone" mode (i.e., they should NOT be invoked unless HWLOC\_BUILD\_S

  TANDALONE has already been invoked).
- HWLOC\_DO\_AM\_CONDITIONALS: If you embed hwloc in a larger project and build it conditionally with Automake (e.g., if HWLOC\_SETUP\_CORE is invoked conditionally), you must unconditionally invoke HWL← OC\_DO\_AM\_CONDITIONALS to avoid warnings from Automake (for the cases where hwloc is not selected to be built). This macro is necessary because hwloc uses some AM\_CONDITIONALs to build itself, and AM\_CONDITIONALs cannot be defined conditionally. Note that it is safe (but unnecessary) to call HWLO← C\_DO\_AM\_CONDITIONALS even if HWLOC\_SETUP\_CORE is invoked unconditionally. If you are not using Automake to build hwloc, this macro is unnecessary (and will actually cause errors because it invoked AM\_\* macros that will be undefined).

**NOTE:** When using the HWLOC\_SETUP\_CORE m4 macro, it may be necessary to explicitly invoke AC\_CANO NICAL\_TARGET (which requires config.sub and config.guess) and/or AC\_USE\_SYSTEM\_EXTENSIONS macros early in the configure script (e.g., after AC\_INIT but before AM\_INIT\_AUTOMAKE). See the Autoconf documentation for further information.

Also note that hwloc's top-level configure.ac script uses exactly the macros described above to build hwloc in a standalone mode (by default). You may want to examine it for one example of how these macros are used.

## 15.2 Example Embedding hwloc

Here's an example of integrating with a larger project named sandbox that already uses Autoconf, Automake, and Libtool to build itself:

```
# First, cd into the sandbox project source tree
shell$ cd sandbox
shell$ cp -r /somewhere/else/hwloc-<version> my-embedded-hwloc
shell$ edit Makefile.am
```

```
1. Add "-Imy-embedded-hwloc/config" to ACLOCAL_AMFLAGS
 2. Add "my-embedded-hwloc" to SUBDIRS
 3. Add "\$ (HWLOC_EMBEDDED_LDADD)" and "\$ (HWLOC_EMBEDDED_LIBS)" to
    sandbox's executable's LDADD line. The former is the name of the
    Libtool convenience library that hwloc will generate. The latter
    is any dependent support libraries that may be needed by
    $ (HWLOC_EMBEDDED_LDADD) .
 4. Add "$(HWLOC_EMBEDDED_CFLAGS)" to AM_CFLAGS
 5. Add "$(HWLOC_EMBEDDED_CPPFLAGS)" to AM_CPPFLAGS
shell$ edit configure.ac
 1. Add "HWLOC_SET_SYMBOL_PREFIX(sandbox_hwloc_)" line
 2. Add "HWLOC_SETUP_CORE([my-embedded-hwloc], [happy=yes], [happy=no])" line
 3. Add error checking for happy=no case
shell$ edit sandbox.c
 1. Add #include <hwloc.h>
 2. Add calls to sandbox_hwloc_init() and other hwloc API functions
```

Now you can bootstrap, configure, build, and run the sandbox as normal – all calls to "sandbox\_hwloc\_\*" will use the embedded hwloc rather than any system-provided copy of hwloc.

# **Frequently Asked Questions**

## 16.1 Concepts

## 16.1.1 I only need binding, why should I use hwloc?

hwloc is its portable API that works on a variety of operating systems. It supports binding of threads, processes and memory buffers (see CPU binding and Memory binding). Even if some features are not supported on some systems, using hwloc is much easier than reimplementing your own portability layer.

Moreover, hwloc provides knowledge of cores and hardware threads. It offers easy ways to bind tasks to individual hardware threads, or to entire multithreaded cores, etc. See How may I ignore symmetric multithreading, hyper-threading, etc. in hwlo Most alternative software for binding do not even know whether each core is single-threaded, multithreaded or hyper-threaded. They would bind to individual threads without any way to know whether multiple tasks are in the same physical core.

However, using hwloc comes with an overhead since a topology must be loaded before gathering information and binding tasks or memory. Fortunately this overhead may be significantly reduced by filtering non-interesting information out of the topology. For instance the following code builds a topology that only contains Cores (explicitly filtered-in below), hardware threads (PUs, cannot be filtered-out), NUMA nodes (cannot be filtered-out), and the root object (usually a Machine; the root cannot be removed without breaking the tree).

```
hwloc_topology_t topology;
hwloc_topology_init(&topology);
/* filter everything out */
hwloc_topology_set_all_types_filter(topology, HWLOC_TYPE_FILTER_KEEP_NONE);
/* filter Cores back in */
hwloc_topology_set_type_filter(topology, HWLOC_OBJ_CORE, HWLOC_TYPE_FILTER_KEEP_ALL);
hwloc_topology_load(topology);
```

However, one should remember that filtering such objects out removes locality information from the hwloc tree. For instance, we do not know anymore which PU is close to which NUMA node. This would be useful to applications that explicitly want to place specific memory buffers close to specific tasks. Those applications just need to tell hwloc to keep Group objects that bring structure information:

```
hwloc_topology_set_type_filter(topology, HWLOC_OBJ_GROUP, HWLOC_TYPE_FILTER_KEEP_STRUCTURE);
```

Note that the default configuration is to keep all objects enabled, except I/Os and instruction caches.

### 16.1.2 Should I use logical or physical/OS indexes? and how?

One of the original reasons why hwloc was created is that **physical/OS indexes** (obj->os\_index) are often crazy and unpredictable: processors numbers are usually non-contiguous (processors 0 and 1 are not physically close), they vary from one machine to another, and may even change after a BIOS or system update. This numbers make task placement hardly portable. Moreover some objects have no physical/OS numbers (caches), and some objects have non-unique numbers (core numbers are only unique within a socket). Physical/OS indexes are only guaranteed to exist and be unique for PU and NUMA nodes.

hwloc therefore introduces **logical indexes** (obj->logical\_index) which are portable, contiguous and logically ordered (based on the resource organization in the locality tree). In general, one should only use logical indexes and just let hwloc do the internal conversion when really needed (when talking to the OS and hardware).

hwloc developers recommends that users do not use physical/OS indexes unless they really know what they are doing. The main reason for still using physical/OS indexes is when interacting with non-hwloc tools such as numactl or taskset, or when reading hardware information from raw sources such as /proc/cpuinfo.

Istopo options -1 and -p may be used to switch between logical indexes (prefixed with L#) and physical/OS indexes (P#). Converting one into the other may also be achieved with hwloc-calc which may manipulate either logical or physical indexes as input or output. See also hwloc-calc.

```
# Convert PU with physical number 3 into logical number
$ hwloc-calc -I pu --physical-input --logical-output pu:3
5

# Convert a set of NUMA nodes from logical to physical
# (beware that the output order may not match the input order)
$ hwloc-calc -I numa --logical-input --physical-output numa:2-3 numa:7
0,2,5
```

# 16.1.3 hwloc is only a structural model, it ignores performance models, memory bandwidth, etc.?

hwloc is indeed designed to provide applications with a structural model of the platform. This is an orthogonal approach to describing the machine with performance models, for instance using memory bandwidth or latencies measured by benchmarks. We believe that both approaches are important for helping application make the most of the hardware.

For instance, on a dual-processor host with four cores each, hwloc clearly shows which four cores are together. Latencies between all pairs of cores of the same processor are likely identical, and also likely lower than the latency between cores of different processors. However, the structural model cannot guarantee such implementation details. On the other side, performance models would reveal such details without always clearly identifying which cores are in the same processor.

The focus of hwloc is mainly of the structural modeling side. However, hwloc lets user adds performance information to the topology through distances (see Retrieve distances between objects and Add or remove distances between objects) or even custom annotations (see How do I annotate the topology with private notes?). hwloc may also use such distance information for grouping objects together (see hwloc only has a one-dimensional view of the architectand What are these Group objects in my topology?).

### 16.1.4 hwloc only has a one-dimensional view of the architecture, it ignores distances?

hwloc places all objects in a tree. Each level is a one-dimensional view of a set of similar objects. All children of the same object (siblings) are assumed to be equally interconnected (same distance between any of them), while the distance between children of different objects (cousins) is supposed to be larger.

Modern machines exhibit complex hardware interconnects, so this tree may miss some information about the actual physical distances between objects. The hwloc topology may therefore be annotated with distance information that may be used to build a more realistic representation (multi-dimensional) of each level. For instance, there can be a distance matrix that representing the latencies between any pair of NUMA nodes if the BIOS and/or operating system reports them.

For more information about the distance API, see Retrieve distances between objects and Add or remove distances between objects.

## 16.1.5 What are these Group objects in my topology?

hwloc comes with a set of predefined object types (Core, Package, NUMA node, Caches) that match the vast majority of hardware platforms. The HWLOC\_OBJ\_GROUP type was designed for cases where this set is not sufficient. Groups may be used anywhere to add more structure information to the topology, for instance to show that 2 out of 4 NUMA nodes are actually closer than the others. When applicable, the <code>subtype</code> field describes why a Group was actually added (see also Normal attributes).

- NUMA parents when memory locality does not match any existing object.
  - I/O parents when I/O locality does not match any existing object.
  - · Distance-based groups made of close objects.

hwloc currently uses Groups for the following reasons:

16.1 Concepts 55

• AMD Bulldozer dual-core compute units (subtype is ComputeUnit, in the x86 backend), but these objects are usually merged with the L2 caches.

- Intel Extended Topology Enumeration levels (in the x86 backend).
- Windows processor groups (unless they contain a single NUMA node, or a single Package, etc.).
- IBM S/390 "Books" on Linux (subtype is Book).
- · AIX unknown hierarchy levels.

hwloc Groups are only kept if no other object has the same locality information. It means that a Group containing a single child is merged into that child. And a Group is merged into its parent if it is its only child. For instance a Windows processor group containing a single NUMA node would be merged with that NUMA node since it already contains the relevant hierarchy information.

When inserting a custom Group with hwloc\_hwloc\_topology\_insert\_group\_object(), this merging may be disabled by setting its dont\_merge attribute.

## 16.1.6 What happens if my topology is asymmetric?

hwloc supports asymmetric topologies even if most platforms are usually symmetric. For example, there could be different types of processors in a single machine, each with different numbers of cores, symmetric multithreading, or levels of caches.

In practice, asymmetric topologies mostly appear when intermediate groups are added for I/O affinity: on a 4-package machine, an I/O bus may be connected to 2 packages. These packages are below an additional Group object, while the other packages are not (see also What are these Group objects in my topology?).

To understand how hwloc manages such cases, one should first remember the meaning of levels and cousin objects. All objects of the same type are gathered as horizontal levels with a given depth. They are also connected through the cousin pointers of the <a href="hwloc\_obj">hwloc\_obj</a> structure. Object attribute (cache depth and type, group depth) are also taken in account when gathering objects as horizontal levels. To be clear: there will be one level for L1i caches, another level for L1d caches, another one for L2, etc.

If the topology is asymmetric (e.g., if a group is missing above some processors), a given horizontal level will still exist if there exist any objects of that type. However, some branches of the overall tree may not have an object located in that horizontal level. Note that this specific hole within one horizontal level does not imply anything for other levels. All objects of the same type are gathered in horizontal levels even if their parents or children have different depths and types.

See the diagram in Terms and Definitions for a graphical representation of such topologies.

Moreover, it is important to understand that a same parent object may have children of different types (and therefore, different depths). These children are therefore siblings (because they have the same parent), but they are *not* cousins (because they do not belong to the same horizontal level).

# 16.1.7 What happens to my topology if I disable symmetric multithreading, hyper-threading, etc. in the system?

hwloc creates one PU (processing unit) object per hardware thread. If your machine supports symmetric multithreading, for instance Hyper-Threading, each Core object may contain multiple PU objects:

```
$ lstopo -
...
Core L#0
PU L#0 (P#0)
PU L#1 (P#2)
Core L#1
PU L#2 (P#1)
PU L#3 (P#3)
```

x86 machines usually offer the ability to disable hyper-threading in the BIOS. Or it can be disabled on the Linux kernel command-line at boot time, or later by writing in sysfs virtual files.

If you do so, the hwloc topology structure does not significantly change, but some PU objects will not appear anymore. No level will disappear, you will see the same number of Core objects, but each of them will contain a single PU now. The PU level does not disappear either (remember that hwloc topologies always contain a PU level at the bottom of the topology) even if there is a single PU object per Core parent.

```
$ lstopo -
...
Core L#0
PU L#0 (P#0)
Core L#1
PU L#1 (P#1)
```

## 16.1.8 How may I ignore symmetric multithreading, hyper-threading, etc. in hwloc?

First, see What happens to my topology if I disable symmetric multithreading, hyper-threading, etc. in the system? for more information about multithreading.

If you need to ignore symmetric multithreading in software, you should likely manipulate hwloc Core objects directly:

Whenever you want to bind a process or thread to a core, make sure you singlify its cpuset first, so that the task is actually bound to a single thread within this core (to avoid useless migrations).

```
/* bind on the second core */
hwloc_obj_t core = hwloc_get_obj_by_type(topology, HWLOC_OBJ_CORE, 1);
hwloc_cpuset_t set = hwloc_bitmap_dup(core->cpuset);
hwloc_bitmap_singlify(set);
hwloc_set_cpubind(topology, set, 0);
hwloc_bitmap_free(set);
```

With hwloc-calc or hwloc-bind command-line tools, you may specify that you only want a single-thread within each core by asking for their first PU object:

```
$ hwloc-calc core:4-7
0x0000ff00
$ hwloc-calc core:4-7.pu:0
0x00005500
```

When binding a process on the command-line, you may either specify the exact thread that you want to use, or ask hwloc-bind to singlify the cpuset before binding

```
$ hwloc-bind core:3.pu:0 -- echo "hello from first thread on core #3"
hello from first thread on core #3
...
$ hwloc-bind core:3 --single -- echo "hello from a single thread on core #3"
hello from a single thread on core #3
```

## 16.2 Advanced

# 16.2.1 I do not want hwloc to rediscover my enormous machine topology every time I rerun a process

Although the topology discovery is not expensive on common machines, its overhead may become significant when multiple processes repeat the discovery on large machines (for instance when starting one process per core in a parallel application). The machine topology usually does not vary much, except if some cores are stopped/restarted or if the administrator restrictions are modified. Thus rediscovering the whole topology again and again may look useless.

For this purpose, hwloc offers XML import/export and shared memory features.

XML lets you save the discovered topology to a file (for instance with the Istopo program) and reload it later by setting the HWLOC\_XMLFILE environment variable. The HWLOC\_THISSYSTEM environment variable should also be set to 1 to assert that loaded file is really the underlying system.

Loading a XML topology is usually much faster than querying multiple files or calling multiple functions of the operating system. It is also possible to manipulate such XML files with the C programming interface, and the import/export may also be directed to memory buffer (that may for instance be transmitted between applications through a package). See also Importing and exporting topologies from/to XML files.

16.3 Caveats 57

Note

The environment variable HWLOC\_THISSYSTEM\_ALLOWED\_RESOURCES may be used to load a XML topology that contains the entire machine and restrict it to the part that is actually available to the current process (e.g. when Linux Cgroup/Cpuset are used to restrict the set of resources). See Environment Variables.

Shared-memory topologies consist in one process exposing its topology in a shared-memory buffer so that other processes (running on the same machine) may use it directly. This has the advantage of reducing the memory footprint since a single topology is stored in physical memory for multiple processes. However, it requires all processes to map this shared-memory buffer at the same virtual address, which may be difficult in some cases. This API is described in Sharing topologies between processes.

## 16.2.2 How many topologies may I use in my program?

hwloc lets you manipulate multiple topologies at the same time. However, these topologies consume memory and system resources (for instance file descriptors) until they are destroyed. It is therefore discouraged to open the same topology multiple times.

Sharing a single topology between threads is easy (see Thread Safety) since the vast majority of accesses are read-only.

read-only.

If multiple topologies of different (but similar) nodes are needed in your program, have a look at How to avoid memory waste when man

## 16.2.3 How to avoid memory waste when manipulating multiple similar topologies?

hwloc does not share information between topologies. If multiple similar topologies are loaded in memory, for instance the topologies of different identical nodes of a cluster, lots of information will be duplicated.

**hwloc/diff.h** (see also Topology differences) offers the ability to compute topology differences, apply or unapply them, or export/import to/from XML. However, this feature is limited to basic differences such as attribute changes. It does not support complex modifications such as adding or removing some objects.

## 16.2.4 How do I annotate the topology with private notes?

Each hwloc object contains a userdata field that may be used by applications to store private pointers. This field is only valid during the lifetime of these container object and topology. It becomes invalid as soon the topology is destroyed, or as soon as the object disappears, for instance when restricting the topology. The userdata field is not exported/imported to/from XML by default since hwloc does not know what it contains. This behavior may be changed by specifying application-specific callbacks with hwloc\_topology\_set\_userdata\_export\_callback() and hwloc\_topology\_set\_userdata\_import\_callback()

Each object may also contain some *info* attributes (key name and value) that are setup by hwloc during discovery and that may be extended by the user with hwloc\_obj\_add\_info() (see also Object attributes). Contrary to the userdata field which is unique, multiple info attributes may exist for each object, even with the same name. These attributes are always exported to XML. However, only character strings may be used as key names and values.

It is also possible to insert Misc objects with a custom name anywhere as a leaf of the topology (see Miscellaneous objects). And Misc objects may have their own userdata and info attributes just like any other object

The hwloc-annotate command-line tool may be used for adding Misc objects and info attributes.

There is also a topology-specific userdata pointer that can be used to recognize different topologies by storing a custom pointer. It may be manipulated with  $hwloc_topology_set_userdata()$  and  $hwloc_topology_get_userdata()$ .

## 16.3 Caveats

## 16.3.1 Why is hwloc slow?

Building a hwloc topology on a large machine may be slow because the discovery of hundreds of hardware cores or threads takes time (especially when reading thousands of sysfs files on Linux). Ignoring some objects (for instance caches) that aren't useful to the current application may improve this overhead (see I only need binding, why should I use hwloc?). One should also consider using XML (see

I do not want hwloc to rediscover my enormous machine topology every time I rerun a process) to work around such issues.

Additionally, Istopo enables most hwloc objects and discovery flags by default so that the output topology is as precise as possible (while hwloc disables many of them by default). This includes I/O device discovery through PCI libraries as well as external libraries such as NVML. To speed up Istopo, you may disable such features with command-line options such as -no-io.

When NVIDIA GPU probing is enabled with CUDA or NVML, one should make sure that the *Persistent* mode is enabled (with nvidia-smi -pm 1) to avoid significant GPU initialization overhead.

When AMD GPU discovery is enabled with OpenCL and hwloc is used remotely over ssh, some spurious round-trips on the network may significantly increase the discovery time. Forcing the DISPLAY environment variable to the remote X server display (usually:0) instead of only setting the COMPUTE variable may avoid this.

Also remember that these components may be disabled at build-time with configure flags such as --disable-opencl, --disable-cuda or --disable-nvml, and at runtime with the environment variable HWLOC\_COMPONENTS=-opencl, -cuda, -nvml or with hwloc\_topology\_set\_components().

## 16.3.2 Does hwloc require privileged access?

hwloc discovers the topology by querying the operating system. Some minor features may require privileged access to the operation system. For instance memory module discovery on Linux is reserved to root, and the entire PCI discovery on Solaris and BSDs requires access to some special files that are usually restricted to root (/dev/pci\* or /devices/pci\*).

To workaround this limitation, it is recommended to export the topology as a XML file generated by the administrator (with the Istopo program) and make it available to all users (see Importing and exporting topologies from/to XML files). It will offer all discovery information to any application without requiring any privileged access anymore. Only the necessary hardware characteristics will be exported, no sensitive information will be disclosed through this XML export.

This XML-based model also has the advantage of speeding up the discovery because reading a XML topology is usually much faster than querying the operating system again.

The utility hwloc-dump-hwdata is also involved in gathering privileged information at boot time and making it available to non-privileged users (note that this may require a specific SELinux MLS policy module). However, it only applies to Intel Xeon Phi processors for now (see Why do I need hwloc-dump-hwdata for memory on Intel Xeon Phi processor?). See also HWLOC\_DUMPED\_HWDATA\_DIR in Environment Variables for details about the location of dumped files.

## 16.3.3 What should I do when hwloc reports "operating system" warnings?

When the operating system reports invalid locality information (because of either software or hardware bugs), hwloc may fail to insert some objects in the topology because they cannot fit in the already built tree of resources. If so, hwloc will report a warning like the following. The object causing this error is ignored, the discovery continues but the resulting topology will miss some objects and may be asymmetric (see also What happens if my topology is asymmetric?).

```
*************

* hwloc received invalid information from the operating system.

* L3 (cpuset 0x000003f0) intersects with NUMANode (P#0 cpuset 0x0000003f) without inclusion!

* Error occurred in topology.c line 940

* Please report this error message to the hwloc user's mailing list,

* along with the files generated by the hwloc-gather-topology script.

* hwloc will now ignore this invalid topology information and continue.
```

These errors are common on large AMD platforms because of BIOS and/or Linux kernel bugs causing invalid L3 cache information. In the above example, the hardware reports a L3 cache that is shared by 2 cores in the first NUMA node and 4 cores in the second NUMA node. That's wrong, it should actually be shared by all 6 cores in a single NUMA node. The resulting topology will miss some L3 caches.

If your application does not care about cache sharing, or if you do not plan to request cache-aware binding in your process launcher, you may likely ignore this error (and hide it by setting HWLOC\_HIDE\_ERRORS=1 in your environment).

Some platforms report similar warnings about conflicting Packages and NUMANodes.

16.4 Platform-specific 59

On x86 hosts, passing  $\texttt{HWLOC\_COMPONENTS} = x86$  in the environment may workaround some of these issues by switching to a different way to discover the topology.

Upgrading the BIOS and/or the operating system may help. Otherwise, as explained in the message, reporting this issue to the hwloc developers (by sending the tarball that is generated by the hwloc-gather-topology script on this platform) is a good way to make sure that this is a software (operating system) or hardware bug (BIOS, etc).

See also Questions and Bugs. Opening an issue on GitHub automatically displays hints on what information you should provide when reporting such bugs.

## 16.3.4 Why does Valgrind complain about hwloc memory leaks?

If you are debugging your application with Valgrind, you want to avoid memory leak reports that are caused by hwloc and not by your program.

hwloc itself is often checked with Valgrind to make sure it does not leak memory. However, some global variables in hwloc dependencies are never freed. For instance libz allocates its global state once at startup and never frees it so that it may be reused later. Some libxml2 global state is also never freed because hwloc does not know whether it can safely ask libxml2 to free it (the application may also be using libxml2 outside of hwloc).

These unfreed variables cause leak reports in Valgrind. hwloc installs a Valgrind *suppressions* file to hide them. You should pass the following command-line option to Valgrind to use it:

```
--suppressions=/path/to/hwloc-valgrind.supp
```

## 16.4 Platform-specific

## 16.4.1 How do I find the local MCDRAM NUMA node on Intel Xeon Phi processor?

Intel Xeon Phi processors introduced a new memory architecture by possibly having two distinct local memories  $\leftarrow$ : some normal memory (DDR) and some high-bandwidth on-package memory (MCDRAM). Processors can be configured in various clustering modes to have up to 4 *Clusters*. Moreover, each *Cluster* (quarter, half or whole processor) of the processor may have its own local parts of the DDR and of the MCDRAM. This memory and clustering configuration may be probed by looking at MemoryMode and ClusterMode attributes, see Hardware Platform Information and doc/examples/get-knl-modes.c in the source directory.

Starting with version 2.0, hwloc properly exposes this memory configuration. DDR and MCDRAM are attached as two memory children of the same parent, DDR first, and MCDRAM second if any. Depending on the processor configuration, that parent may be a Package, a Cache, or a Group object of type Cluster.

Hence cores may have one or two local NUMA nodes, listed by the core nodeset. An application may allocate local memory from a core by using that nodeset. The operating system will actually allocate from the DDR when possible, or fallback to the MCDRAM.

To allocate specifically on one of these memories, one should walk up the parent pointers until finding an object with some memory children. Looking at these memory children will give the DDR first, then the MCDRAM if any. Their nodeset may then be used for allocating or binding memory buffers.

One may also traverse the list of NUMA nodes until finding some whose cpuset matches the target core or PUs. The MCDRAM NUMA nodes may be identified thanks to the subtype field which is set to MCDRAM.

Command-line tools such as hwloc-bind may bind memory on the MCDRAM by using the *hbm* keyword. For instance, to bind on the first MCDRAM NUMA node:

```
$ hwloc-bind --membind --hbm numa:0 -- myprogram
$ hwloc-bind --membind numa:0 -- myprogram
```

## 16.4.2 Why do I need hwloc-dump-hwdata for memory on Intel Xeon Phi processor?

Intel Xeon Phi processors may use the on-package memory (MCDRAM) as either memory or a memory-side cache (reported as a L3 cache by hwloc by default, see HWLOC\_KNL\_MSCACHE\_L3 in Environment Variables). There are also several clustering modes that significantly affect the memory organization (see How do I find the local MCDRAM NUMA node for more information about these modes). Details about these are currently only available to privileged users. Without them, hwloc relies on a heuristic for guessing the modes.

The hwloc-dump-hwdata utility may be used to dump this privileged binary information into human-readable and world-accessible files that the hwloc library will later load. The utility should usually run as root once during boot, in order to update dumped information (stored under /var/run/hwloc by default) in case the MCDRAM or clustering configuration changed between reboots.

When SELinux MLS policy is enabled, a specific hwloc policy module may be required so that all users get access to the dumped files (in /var/run/hwloc by default). One may use hwloc policy files from the SELinux Reference Policy at https://github.com/TresysTechnology/refpolicy-contrib (see also the documentation at https://github.com/TresysTechnology/refpolicy/wiki/GettingStarted).

hwloc-dump-hwdata requires dmi-sysfs kernel module loaded.

The utility is currently unneeded on platforms without Intel Xeon Phi processors.

See HWLOC\_DUMPED\_HWDATA\_DIR in Environment Variables for details about the location of dumped files.

## 16.4.3 How do I build hwloc for BlueGene/Q?

IBM BlueGene/Q machines run a standard Linux on the login/frontend nodes and a custom CNK (*Compute Node Kernel*) on the compute nodes.

To discover the topology of a login/frontend node, hwloc should be configured as usual, without any BlueGene/Q-specific option.

However, one would likely rather discover the topology of the compute nodes where parallel jobs are actually running. If so, hwloc must be cross-compiled with the following configuration line:

```
./configure --host=powerpc64-bgq-linux --disable-shared --enable-static \ CPPFLAGS='-I/bgsys/drivers/ppcfloor -I/bgsys/drivers/ppcfloor/spi/include/kernel/cnk/'
```

CPPFLAGS may have to be updated if your platform headers are installed in a different directory.

#### 16.4.4 How do I build hwloc for Windows?

hwloc releases are available as pre-built ZIPs for Windows on both 32bits and 64bits x86 platforms. They are built using MSYS2 and MinGW on a Windows host. Such an environment allows using the Unix-like configure, make and make install steps without having to tweak too many variables or options. One may look at contrib/ci.inria.fr/job-3-mingw.sh in the hwloc repository for an example used for nightly testing. hwloc releases also contain a basic Microsoft Visual Studio solution under contrib/windows/.

### 16.4.5 How to get useful topology information on NetBSD?

The NetBSD (and FreeBSD) backend uses x86-specific topology discovery (through the x86 component). This implementation requires CPU binding so as to query topology information from each individual processor. This means that hwloc cannot find any useful topology information unless user-level process binding is allowed by the NetBSD kernel. The security.models.extensions.user\_set\_cpu\_affinity sysctl variable must be set to 1 to do so. Otherwise, only the number of processors will be detected.

### 16.4.6 Why does binding fail on AIX?

The AIX operating system requires specific user capabilities for attaching processes to resource sets (CAP\_NU← MA\_ATTACH). Otherwise functions such as hwloc\_set\_cpubind() fail (return -1 with errno set to EPERM). This capability must also be inherited (through the additional CAP\_PROPAGATE capability) if you plan to bind a process before forking another process, for instance with hwloc-bind. These capabilities may be given by the administrator with:

```
chuser "capabilities=CAP_PROPAGATE,CAP_NUMA_ATTACH" <username>
```

## 16.5 Compatibility between hwloc versions

## 16.5.1 How do I handle API changes?

The hwloc interface is extended with every new major release. Any application using the hwloc API should be prepared to check at compile-time whether some features are available in the currently installed hwloc distribution. For instance, to check whether the hwloc version is at least 2.0, you should use:

```
#include <hwloc.h>
#if HWLOC_API_VERSION >= 0x00020000
...
#endif
```

To check for the API of release X.Y.Z at build time, you may compare HWLOC\_API\_VERSION with (X << 16) + (Y << 8) + Z.

For supporting older releases that do not have HWLOC\_OBJ\_NUMANODE and HWLOC\_OBJ\_PACKAGE yet, you may use:

```
#include <hwloc.h>
#if HWLOC_API_VERSION < 0x00010b00
#define HWLOC_OBJ_NUMANODE HWLOC_OBJ_NODE
#define HWLOC_OBJ_PACKAGE HWLOC_OBJ_SOCKET
#endif</pre>
```

Once a program is built against a hwloc library, it may also dynamically link with compatible libraries from other hwloc releases. The version of that runtime library may be queried with <a href="hwloc\_get\_api\_version">hwloc\_get\_api\_version</a>(). See How do I handle ABI breaks? for using this function for testing ABI compatibility.

## 16.5.2 What is the difference between API and library version numbers?

HWLOC\_API\_VERSION is the version of the API. It changes when functions are added, modified, etc. However it does not necessarily change from one release to another. For instance, two releases of the same series (e.g. 2.0.3 and 2.0.4) usually have the same HWLOC\_API\_VERSION (0x00020000). However their HWLOC\_VERSION strings are different ("2.0.3" and "2.0.4" respectively).

#### 16.5.3 How do I handle ABI breaks?

The hwloc interface was deeply modified in release 2.0 to fix several issues of the 1.x interface (see Upgrading to the hwloc 2.0 API and the NEWS file in the source directory for details). The ABI was broken, which means applications must be recompiled against the new 2.0 interface.

To check that you are not mixing old/recent headers with a recent/old runtime library, check the major revision number in the API version:

#### To specifically detect v2.0 issues:

```
#include <hwloc.h>
#if HWLOC_API_VERSION >= 0x00020000
   /* headers are recent */
   if (hwloc_get_api_version() < 0x20000)
        ... error out, the hwloc runtime library is older than 2.0 ...
#else
   /* headers are pre-2.0 */
   if (hwloc_get_api_version() >= 0x20000)
        ... error out, the hwloc runtime library is more recent than 2.0 ...
#endif
```

In theory, library sonames prevent linking with incompatible libraries. However custom hwloc installations or improperly configured build environments may still lead to such issues. Hence running one of the above (cheap) checks before initializing hwloc topology may be useful.

## 16.5.4 Are XML topology files compatible between hwloc releases?

XML topology files are forward-compatible: a XML file may be loaded by a hwloc library that is more recent than the hwloc release that exported that file.

However, hwloc XMLs are not always backward-compatible: Topologies exported by hwloc 2.x cannot be imported by 1.x by default (see XML changes for working around such issues). There are also some corner cases where backward compatibility is not guaranteed because of changes between major releases (for instance 1.11 XMLs could not be imported in 1.10).

XMLs are exchanged at runtime between some components of the HPC software stack (for instance the resource managers and MPI processes). Building all these components on the same (cluster-wide) hwloc installation is a good way to avoid such incompatibilities.

## 16.5.5 Are synthetic strings compatible between hwloc releases?

Synthetic strings (see Synthetic topologies) are forward-compatible: a synthetic string generated by a release may be imported by future hwloc libraries.

However they are often not backward-compatible because new details may have been added to synthetic descriptions in recent releases. Some flags may be given to <a href="https://hww.nuber.compatible">hwloc\_topology\_export\_synthetic()</a> to avoid such details and stay backward compatible.

# 16.5.6 Is it possible to share a shared-memory topology between different hwloc releases?

Shared-memory topologies (see Sharing topologies between processes) have strong requirements on compatibility between hwloc libraries. Adopting a shared-memory topology fails if it was exported by a non-compatible hwloc release. Releases with same major revision are usually compatible (e.g. hwloc 2.0.4 may adopt a topology exported by 2.0.3) but different major revisions may be incompatible (e.g. hwloc 2.1.0 cannot adopt from 2.0.x).

Topologies are shared at runtime between some components of the HPC software stack (for instance the resource managers and MPI processes). Building all these components on the same (system-wide) hwloc installation is a good way to avoid such incompatibilities.

# **Upgrading to the hwloc 2.0 API**

See Compatibility between hwloc versions for detecting the hwloc version that you are compiling and/or running against.

## 17.1 New Organization of NUMA nodes and Memory

## 17.1.1 Memory children

In hwloc v1.x, NUMA nodes were inside the tree, for instance Packages contained 2 NUMA nodes which contained a L3 and several cache.

Starting with hwloc v2.0, NUMA nodes are not in the main tree anymore. They are attached under objects as *Memory Children* on the side of normal children. This memory children list starts at obj->memory\_first\_child and its size is obj->memory\_arity. Hence there can now exist two local NUMA nodes, for instance on Intel Xeon Phi processors.

The normal list of children (starting at obj->first\_child, ending at obj->last\_child, of size obj->arity, and available as the array obj->children) now only contains CPU-side objects: PUs, Cores, Packages, Caches, Groups, Machine and System. hwloc\_get\_next\_child() may still be used to iterate over all children of all lists.

Hence the CPU-side hierarchy is built using normal children, while memory is attached to that hierarchy depending on its affinity.

## 17.1.2 Examples

 a UMA machine with 2 packages and a single NUMA node is now modeled as a "Machine" object with two "Package" children and one "NUMANode" memory children (displayed first in Istopo below):

```
Machine (1024MB total)

NUMANode L#0 (P#0 1024MB)

Package L#0

Core L#0 + PU L#0 (P#0)

Core L#1 + PU L#1 (P#1)

Package L#1

Core L#2 + PU L#2 (P#2)

Core L#3 + PU L#3 (P#3)
```

• a machine with 2 packages with one NUMA node and 2 cores in each is now:

```
Machine (2048MB total)

Package L#0

NUMANode L#0 (P#0 1024MB)

Core L#0 + PU L#0 (P#0)

Core L#1 + PU L#1 (P#1)

Package L#1

NUMANode L#1 (P#1 1024MB)

Core L#2 + PU L#2 (P#2)

Core L#3 + PU L#3 (P#3)
```

 if there are two NUMA nodes per package, a Group object may be added to keep cores together with their local NUMA node:

```
Machine (4096MB total)

Package L#0

Group0 L#0

NUMANode L#0 (P#0 1024MB)

Core L#0 + PU L#0 (P#0)

Core L#1 + PU L#1 (P#1)

Group0 L#1

NUMANode L#1 (P#1 1024MB)

Core L#2 + PU L#2 (P#2)

Core L#3 + PU L#3 (P#3)

Package L#1

[...]
```

• if the platform has L3 caches whose localities are identical to NUMA nodes, Groups aren't needed:

```
Machine (4096MB total)
Package L#0
L3 L#0 (16MB)
NUMANode L#0 (P#0 1024MB)
Core L#0 + PU L#0 (P#0)
Core L#1 + PU L#1 (P#1)
L3 L#1 (16MB)
NUMANode L#1 (P#1 1024MB)
Core L#2 + PU L#2 (P#2)
Core L#3 + PU L#3 (P#3)
Package L#1
[...]
```

## 17.1.3 NUMA level and depth

NUMA nodes are not in "main" tree of normal objects anymore. Hence, they don't have a meaningful depth anymore (like I/O and Misc objects). They have a virtual (negative) depth (HWLOC\_TYPE\_DEPTH\_NUMANODE) so that functions manipulating depths and level still work, and so that we can still iterate over the level of NUMA nodes just like for any other level.

For instance we can still use lines such as

```
int depth = hwloc_get_type_depth(topology, HWLOC_OBJ_NUMANODE);
hwloc_obj_t obj = hwloc_get_obj_by_type(topology, HWLOC_OBJ_NUMANODE, 4);
hwloc_obj_t node = hwloc_get_next_obj_by_depth(topology, HWLOC_TYPE_DEPTH_NUMANODE, prev);
```

The NUMA depth should not be compared with others. An unmodified code that still compares NUMA and Package depths (to find out whether Packages contain NUMA or the contrary) would now always assume Packages contain NUMA (because the NUMA depth is negative).

## 17.1.4 Finding Local NUMA nodes and looking at Children and Parents

Applications that walked up/down to find NUMANode parent/children must now be updated. Instead of looking directly for a NUMA node, one should now look for an object that has some memory children. NUMA node(s) will be be attached there. For instance, when looking for a NUMA node above a given core core:

```
hwloc_obj_t parent = core->parent;
while (parent && !parent->memory_arity)
  parent = parent->parent; /* no memory child, walk up */
if (parent)
  /* use parent->memory_first_child (and its siblings if there are multiple local NUMA nodes) */
```

The list of local NUMA nodes (usually a single one) is also described by the nodeset attribute of each object (which contains the physical indexes of these nodes). Iterating over the NUMA level is also an easy way to find local NUMA nodes:

```
hwloc_obj_t tmp = NULL;
while ((tmp = hwloc_get_next_obj_by_type(topology, HWLOC_OBJ_NUMANODE, tmp)) != NULL) {
  if (hwloc_bitmap_isset(obj->nodeset, tmp->os_index))
    /* tmp is a NUMA node local to obj, use it */
}
```

Similarly finding objects that are close to a given NUMA nodes should be updated too. Instead of looking at the NUMA node parents/children, one should now find a Normal parent above that NUMA node, and then look at its parents/children as usual:

```
hwloc_obj_t tmp = obj->parent;
while (hwloc_obj_type_is_memory(tmp))
  tmp = tmp->parent;
/* now use tmp instead of obj */
```

To avoid such hwloc v2.x-specific and NUMA-specific cases in the code, a **generic lookup for any kind of object, including NUMA nodes**, might also be implemented by iterating over a level. For instance finding an object of type type which either contains or is included in object obj can be performed by traversing the level of that type and comparing CPU sets:

```
hwloc_obj_t tmp = NULL;
while ((tmp = hwloc_get_next_obj_by_type(topology, type, tmp)) != NULL) {
  if (hwloc_bitmap_intersects(tmp->cpuset, obj->cpuset))
  /* tmp matches, use it */
```

This generic lookup works whenever type or obj are Normal or Memory objects since both have CPU sets. Moreover, it is compatible with the hwloc v1.x API.

## 17.2 4 Kinds of Objects and Children

#### 17.2.1 I/O and Misc children

I/O children are not in the main object children list anymore either. They are in the list starting at obj->io\_\circ} first\_child and whose size if obj->io\_arity.

Misc children are not in the main object children list anymore. They are in the list starting at obj->misc\_← first\_child nd whose size if obj->misc\_arity.

hwloc\_get\_next\_child() may still be used to iterate over all children of all lists.

## 17.2.2 Kinds of objects

Given the above, objects may now be of 4 kinds:

- · Normal (everything not listed below, including Machine, Package, Core, PU, CPU Caches, etc);
- Memory (currently NUMA nodes or Memory-side Caches), attached to parents as Memory children;
- I/O (Bridges, PCI and OS devices), attached to parents as I/O children;
- · Misc objects, attached to parents as Misc children.

See hwloc\_obj for details about children lists.

For a given object type, the kind may be found with hwloc\_obj\_type\_is\_normal(), hwloc\_obj\_type\_is\_memory(), hwloc obj type is normal(), or comparing with HWLOC OBJ MISC.

Normal and Memory objects have (non-NULL) CPU sets and nodesets, while I/O and Misc objects don't have any sets (they are NULL).

## 17.3 HWLOC\_OBJ\_CACHE replaced

Instead of a single HWLOC\_OBJ\_CACHE, there are now 8 types HWLOC\_OBJ\_L1CACHE, ..., HWLOC\_OBJ\_L5CACHE, HWLOC\_OBJ\_L1ICACHE, ..., HWLOC\_OBJ\_L3ICACHE.

Cache object attributes are unchanged.

hwloc\_get\_cache\_type\_depth() is not needed to disambiguate cache types anymore since new types can be passed to hwloc\_get\_type\_depth() without ever getting HWLOC\_TYPE\_DEPTH\_MULTIPLE anymore.

hwloc\_obj\_type\_is\_cache(), hwloc\_obj\_type\_is\_dcache() and hwloc\_obj\_type\_is\_icache() may be used to check whether a given type is a cache, data/unified cache or instruction cache.

## 17.4 allowed cpuset and allowed nodeset only in the main topology

Objects do not have allowed\_cpuset and allowed\_nodeset anymore. They are only available for the entire topology using hwloc\_topology\_get\_allowed\_cpuset() and hwloc\_topology\_get\_allowed\_nodeset(). As usual, those are only needed when the INCLUDE\_DISALLOWED topology flag is given, which means disallowed objects are kept in the topology. If so, one may find out whether some PUs inside an object is allowed by checking

```
hwloc_bitmap_intersects(obj->cpuset, hwloc_topology_get_allowed_cpuset(topology))
```

Replace cpusets with nodesets for NUMA nodes. To find out which ones, replace intersects() with and() to get the actual intersection.

## 17.5 Object depths are now signed int

obj->depth as well as depths given to functions such as hwloc\_get\_obj\_by\_depth() or returned by hwloc\_topology\_get\_depth() are now signed int.

Other depth such as cache-specific depth attribute are still unsigned.

## 17.6 Memory attributes become NUMANode-specific

Memory attributes such as obj->memory.local\_memory are now only available in NUMANode-specific attributes in obj->attr->numanode.local\_memory.

```
obj->memory.total_memory is available in all objects as obj->total_memory.
```

See hwloc\_obj\_attr\_u::hwloc\_numanode\_attr\_s and hwloc\_obj for details.

## 17.7 Topology configuration changes

The old ignoring API as well as several configuration flags are replaced with the new filtering API, see hwloc topology set type filter() and its variants, and hwloc type filter e for details.

hwloc\_topology\_ignore\_type(), hwloc\_topology\_ignore\_type\_keep\_structure() and hwloc\_topology\_ignore
 \_all\_keep\_structure() are respectively superseded by

```
hwloc_topology_set_type_filter(topology, type, HWLOC_TYPE_FILTER_KEEP_NONE); hwloc_topology_set_type_filter(topology, type, HWLOC_TYPE_FILTER_KEEP_STRUCTURE); hwloc_topology_set_all_types_filter(topology, HWLOC_TYPE_FILTER_KEEP_STRUCTURE);
```

Also, the meaning of KEEP\_STRUCTURE has changed (only entire levels may be ignored, instead of single objects), the old behavior is not available anymore.

HWLOC\_TOPOLOGY\_FLAG\_ICACHES is superseded by

```
hwloc_topology_set_icache_types_filter(topology, HWLOC_TYPE_FILTER_KEEP_ALL);
```

• HWLOC\_TOPOLOGY\_FLAG\_WHOLE\_IO, HWLOC\_TOPOLOGY\_FLAG\_IO\_DEVICES and HWLOC\_TO

POLOGY\_FLAG\_IO\_BRIDGES replaced.

To keep all I/O devices (PCI, Bridges, and OS devices), use:

```
hwloc_topology_set_io_types_filter(topology, HWLOC_TYPE_FILTER_KEEP_ALL);
```

To only keep important devices (Bridges with children, common PCI devices and OS devices):

```
hwloc_topology_set_io_types_filter(topology, HWLOC_TYPE_FILTER_KEEP_IMPORTANT);
```

## 17.8 XML changes

2.0 XML files are not compatible with 1.x

2.0 can load 1.x files, but only NUMA distances are imported. Other distance matrices are ignored (they were never used by default anyway).

2.0 can export 1.x-compatible files, but only distances attached to the root object are exported (i.e. distances that cover the entire machine). Other distance matrices are dropped (they were never used by default anyway).

**Users are advised to negociate hwloc versions between exporter and importer:** If the importer isn't 2.x, the exporter should export to 1.x. Otherwise, things should work by default.

Hence hwloc\_topology\_export\_xml() and hwloc\_topology\_export\_xmlbuffer() have a new flags argument. to force a hwloc-1.x-compatible XML export.

- If both always support 2.0, don't pass any flag.
- When the importer uses hwloc 1.x, export with HWLOC\_TOPOLOGY\_EXPORT\_XML\_FLAG\_V1. Otherwise the importer will fail to import.
- When the exporter uses hwloc 1.x, it cannot pass any flag, and a 2.0 importer can import without problem.

```
#if HWLOC_API_VERSION >= 0x20000
   if (need 1.x compatible XML export)
      hwloc_topology_export_xml(...., HWLOC_TOPOLOGY_EXPORT_XML_FLAG_V1);
   else /* need 2.x compatible XML export */
      hwloc_topology_export_xml(...., 0);
#else
   hwloc_topology_export_xml(....);
#endif
```

Additionally, hwloc\_topology\_diff\_load\_xml(), hwloc\_topology\_diff\_load\_xmlbuffer(), hwloc\_topology\_diff\_export\_xml(), hwloc\_topology\_diff\_export\_xmlbuffer() and hwloc\_topology\_diff\_destroy() lost the topology argument: The first argument (topology) isn't needed anymore.

## 17.9 Distances API totally rewritten

The new distances API is in hwloc/distances.h.

Distances are not accessible directly from objects anymore. One should first call <a href="https://hww.number.get">hww.number.get</a>() (or a variant) to retrieve distances (possibly with one call to get the number of available distances structures, and another call to actually get them). Then it may consult these structures, and finally release them.

The set of object involved in a distances structure is specified by an array of objects, it may not always cover the entire machine or so.

#### 17.10 Return values of functions

Bitmap functions (and a couple other functions) can return errors (in theory).

Most bitmap functions may have to reallocate the internal bitmap storage. In v1.x, they would silently crash if realloc failed. In v2.0, they now return an int that can be negative on error. However, the preallocated storage is 512 bits, hence realloc will not even be used unless you run hwloc on machines with larger PU or NUMAnode indexes. hwloc\_obj\_add\_info(), hwloc\_cpuset\_from\_nodeset() and hwloc\_cpuset\_from\_nodeset() also return an int, which would be -1 in case of allocation errors.

## 17.11 Misc API changes

- hwloc\_type\_sscanf() extends hwloc\_obj\_type\_sscanf() by passing a union hwloc\_obj\_attr\_u which may receive Cache, Group, Bridge or OS device attributes.
- hwloc\_type\_sscanf\_as\_depth() is also added to directly return the corresponding level depth within a topology.
- hwloc\_topology\_insert\_misc\_object\_by\_cpuset() is replaced with hwloc\_topology\_alloc\_group\_object() and hwloc\_topology\_insert\_group\_object().
- hwloc\_topology\_insert\_misc\_object\_by\_parent() is replaced with hwloc\_topology\_insert\_misc\_object().

## 17.12 API removals and deprecations

- HWLOC\_OBJ\_SYSTEM removed: The root object is always HWLOC\_OBJ\_MACHINE
- \_membind\_nodeset() memory binding interfaces deprecated: One should use the variant without \_nodeset suffix and pass the HWLOC\_MEMBIND\_BYNODESET flag.
- HWLOC\_MEMBIND\_REPLICATE removed: no supported operating system supports it anymore.
- hwloc\_obj\_snprintf() removed because it was long-deprecated by hwloc\_obj\_type\_snprintf() and hwloc\_obj\_attr\_snprintf().
- hwloc obj type sscanf() deprecated, hwloc obj type of string() removed.
- hwloc\_cpuset\_from/to\_nodeset\_strict() deprecated: Now useless since all topologies are NUMA. Use the variant without the strict suffix
- hwloc\_distribute() and hwloc\_distributev() removed, deprecated by hwloc\_distrib().
- The Custom interface (hwloc\_topology\_set\_custom(), etc.) was removed, as well as the corresponding command-line tools (hwloc-assembler, etc.). Topologies always start with object with valid cpusets and nodesets.
- obj->online\_cpuset removed: Offline PUs are simply listed in the complete\_cpuset as previously.
- obj->os\_level removed.

# **Network Locality (netloc)**


Portable abstraction of network topologies for high-performance computing. The netloc documentation spans of these sections:

- · Network Locality (netloc), this section below
- · Netloc with Scotch

## 18.1 Netloc Summary

The Portable Network Locality (netloc) software package provides network topology discovery tools, and an abstract representation of those networks topologies for a range of network types and configurations. It is provided as a companion to the Portable Hardware Locality (hwloc) package. These two software packages work together to provide a comprehensive view of the HPC system topology, spanning from the processor cores in one server to the cores in another - including the complex network(s) in between.

Towards this end, netloc is divided into two sets of components. The first tools are for the admin to extract the information about the topology of the machines with topology discovery tools for each network type and discovery technique (called readers). The second set of tools is for the user to exploit the collected information: to display the topology or create a topology-aware mapping of the processes of an application.

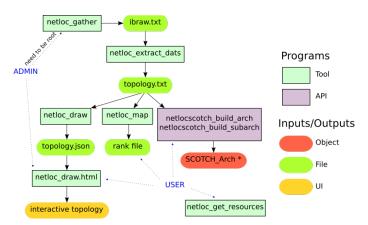

## 18.1.1 Supported Networks

For now, only InfiniBand (See Setup) is supported, but it is planned to be extended it very soon.

## 18.2 Netloc Installation

The generic installation procedure for both hwloc and netloc is described in Installation.

Note that netloc is currently not supported on as many platforms as the original hwloc project. netloc is enabled by default when supported, or can be disabled by passing --disable-netloc to the configure command-line.

## **18.3** Setup

To use Netloc tools, we need two steps. The first step consists in getting information about network directly from tools distributed by manufacturers. For Infiniband, for instance, this operation needs privileges to access to the network device. For this step we have wrappers in Netloc that will call the right tools with the right options.

The second step will transform the raw files generated by manufacturer tools, into files in a format readable by Netloc tools, and that will not depend on network technologies.

To be clear, let's take an example with Infiniband. This first step is handled by netloc\_ib\_gather\_raw that will call ibnetdiscover and ibroutes tools to generate the necessary raw data files. The step has to be run by an administrator, since the Infiniband tools need to access to the network device.

```
shell$ netloc_ib_gather_raw --help
Usage: netloc_ib_gather_raw [options] <outdir>
  Dumps topology information to <outdir>/ib-raw/
  Subnets are guessed from the <outdir>/hwloc/ directory where
  the hwloc XML exports of some nodes are stored.
Options:
  -sudo
   Pass sudo to internal ibnetdiscover and ibroute invocations.
    Useful when the entire script cannot run as root.
 --hwloc-dir <dir>
   Use <dir> instead of <outdir>/hwloc/ for hwloc XML exports.
 --force-subnet [<subnet>:]<board>:<port> to force the discovery
   Do not guess subnets from hwloc XML exports.
    Force discovery on local board <board> port <port>
    and optionally force the subnet id <subnet>
    instead of reading it from the first GID.
   Examples: --force-subnet mlx4_0:1
             --force-subnet fe80:0000:0000:0000:mlx4_0:1
 --ibnetdiscover /path/to/ibnetdiscover
 --ibroute /path/to/ibroute
    Specify exact location of programs. Default is /usr/bin/<program>
 --sleep <n>
   Sleep for <n> seconds between invocations of programs probing the network
 --ignore-errors
   Ignore errors from ibnetdiscover and ibroute, assume their outputs are ok
 --force -f
   Always rediscover to overwrite existing files without asking
 --verbose -v
   Add verbose messages
 --dry-run
   Do not actually run programs or modify anything
 --help -h
   Show this help
shell$ ./netloc_ib_gather_raw /home/netloc/data
WARNING: Not running as root.
Using /home/netloc/data/hwloc as hwloc lstopo XML directory.
Exporting local node hwloc XML...
  Running lstopo-no-graphics...
Found 1 subnets in hwloc directory:
Subnet fe80:0000:0000:0000 is locally accessible from board qib0 port 1.
Looking at fe80:0000:0000:0000 (through local board qib0 port 1)...
Running ibnetdiscover...
 Getting routes...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L112' LID 18...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L108' LID 20...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L102' LID 23...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L104' LID 25...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L106' LID 24...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L114' LID 22...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L116' LID 21...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L109' LID 12...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L111' LID 11...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L107' LID 13...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L103' LID 17...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L105' LID 16...
  Running ibroute for switch 'QLogic 12800-180 GUID=0x00066a00e8001310 L113' LID 15...
```

18.4 Topology display 71

The second step, that can be done by a regular user, is done by the tool netloc\_ib\_extract\_dats.

## 18.4 Topology display

Netloc provides a tool, netloc\_draw.html, that displays a topology in a web browser, by using a JSON file.

#### 18.4.1 Generate the JSON file

In order to display a topology, Netloc needs to generate a JSON file corresponding to a topology. For this operation, the user must run netloc\_draw\_to\_json.


```
shell$ netloc_draw_to_json --help
Usage: netloc_draw_to_json <path to topology directory>
shell$ netloc_draw_to_json /home/netloc/data/netloc
```

The netloc\_draw\_to\_json command will write a JSON file for each topology file found in the input directory. The output files, written also in the input directory, can be open by netloc\_draw.html in a web browser.

## 18.4.2 Using netloc\_draw

Once the JSON file is opened, the rendering is generated by the Javascript vis library for computing the position of the nodes. From the interface, it is possible to search for a specific node, to color the nodes, to expand merged switches, to show statistics, to export as an image... The user can interact with the nodes by moving them. For now, there are bugs and other nodes might move too.

The placement of the nodes is done statically if the topology is detected as a tree. If not, vis.js will use physics to find good positions, and it can be very time consuming.

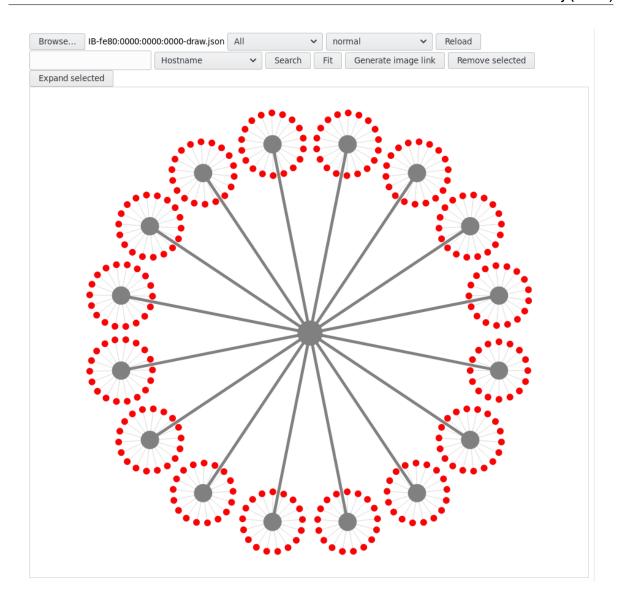

## **Netloc with Scotch**

Scotch is a toolbox for graph partitioning [XXX], that can do mapping between a communication graph and an architecture. Netloc interfaces with Scotch, by getting the topology of the machine and building the Scotch architecture. It is also possible to directly build a mapping file that can be given to mpirun.

### 19.1 Introduction

Scotch is able to deal architectures to represent the topology of a complete machine. Scotch handles several types of topologies: complete graphs, hypercubes, fat trees, meshes, torus, and random graphs. Moreover, Scotch is able to manage parts of architectures that are called sub-architectures. Thus, from a complete architecture, we can create a sub-architecture that will represent the available resources of the complete machine.

## 19.2 **Setup**

The first step in order to use Netloc tools is to discover the network. For this task, we provide tools called netloc—gather that are wrappers to the dedicated tools provided by the manufacturer of the network, that generate the raw data given by the devices. This task needs privileges to access to the network devices. Once, this task is completed, the raw data is converted in a generic format independent to the fabric by extract\_dats. Figure 1 shows how the different modules of Netloc are linked, and what are the tools provided by Netloc.

## 19.3 Tools and API

When the machine is discovered and all the needed files are generated as seen previously, a user can call the netlocscotch functions from the API and interact with Scotch.

### 19.3.1 Build Scotch architectures

Netloc provides a function to export the built topology into the Scotch format. That will give the possibility to the user to play with the topology in Scotch. Since Netloc matches the discovered topology with known topologies, the Scotch architecture won't be random graphs but known topologies also in Scotch that will lead to optimized graph algorithms. This function is called netlocscotch\_build\_arch.

When the network topology is a tree, the topology converted by netlocscotch is the complete topology of the machine containing intranode topologies from hwloc. In this case, merging the two levels results in a bigger tree. For other network topologies, the global graph created for Scotch is a generic graph since it not not (at this moment) possible to create nested known architectures.

#### 19.3.2 Build Scotch sub-architectures

Most of the time, the user does not have access to the complete machine. He uses a resource manager to run his application and he will gain access only to a set of nodes. In this case getting the Scotch architecture of the complete machine is not relevant. Fortunately, Netloc is also able to build a Scotch sub-architecture that will contain only the available nodes. For this operation the user needs to run a specific program, netloc\_get\_resources, that will

74 Netloc with Scotch

record in a file, the lists of available nodes and available cores by using MPI and hwloc. From this file, the function netlocscotch build subarch will build the Scotch sub-architecture.

## 19.3.3 Mapping of processes

A main goal in having all these data about the network topology, especially in Scotch structures, is to help the process placement. For that, we use the mapping of a process graph to the architecture provided by Scotch. As we have seen previously, Netloc is able to detect the structure of the topology and will build the adapted Scotch architecture that will be more efficient than a random structure.

In case, the network topology is not a tree, netlocscotch converts the complete topology into a generic graph. The drawback in that is the Scotch graph algorithms are less efficient. To overcome that, netlocscotch does two steps of mapping: first it maps the processes to the nodes, and then for each node maps the processes to the cores. We have to conduct tests to check if the method gives better results than using a generic graph directly.

The other input needed in Scotch is the process graph. Since we want to optimize the placement to decrease the communication time, a good metric for building the application graph is the amount of communications between all pairs of processes. Studies still have to be done to choose, in the most efficient way, what we take into account to define the amount of communications between the number of messages, the size of messages... This information will be transformed into a process graph.

Once we have a good mapping computed by Scotch, we can give it to the user, or Netloc can even generate the corresponding rank file useful to MPI.

# **Module Index**

## 20.1 Modules

Here is a list of all modules:	
API version	79
Object Sets (hwloc_cpuset_t and hwloc_nodeset_t)	80
Object Types	81
Object Structure and Attributes	86
Topology Creation and Destruction	87
Object levels, depths and types	90
Converting between Object Types and Attributes, and Strings	94
Consulting and Adding Key-Value Info Attributes	96
CPU binding	97
Memory binding	101
,	108
Topology Detection Configuration and Query	
Modifying a loaded Topology	
Finding Objects inside a CPU set	
Finding Objects covering at least CPU set	
Looking at Ancestor and Child Objects	
Kinds of object Type	
Looking at Cache Objects	
Finding objects, miscellaneous helpers	
Distributing items over a topology	
CPU and node sets of entire topologies	
Converting between CPU sets and node sets	
Finding I/O objects	
The bitmap API	
Exporting Topologies to XML	
Exporting Topologies to Synthetic	
Retrieve distances between objects	
Helpers for consulting distance matrices	
Add or remove distances between objects	
•	
Comparing memory node attributes for finding where to allocate on	
• • •	
Linux-specific helpers	
Interoperability with Linux libnuma unsigned long masks	
Interoperability with Linux libnuma bitmask	
Interoperability with glibc sched affinity	
Interoperability with OpenCL	
Interoperability with the CUDA Driver API	
Interoperability with the CUDA Runtime API	
Interoperability with the NVIDIA Management Library	
Interoperability with the ROCm SMI Management Library	187

76 Module Index

Interoperability with OpenGL displays	89
Interoperability with OpenFabrics	91
Topology differences	93
Sharing topologies between processes	97
Components and Plugins: Discovery components	99
Components and Plugins: Discovery backends	200
Components and Plugins: Generic components	
Components and Plugins: Core functions to be used by components	
Components and Plugins: Filtering objects	205
Components and Plugins: helpers for PCI discovery	
Components and Plugins: finding PCI objects during other discoveries	
	200

# **Data Structure Index**

## 21.1 Data Structures

е	re are the data structures with brief descriptions:	
	hwloc_backend	
	Discovery backend structure	211
	hwloc_obj_attr_u::hwloc_bridge_attr_s	
	Bridge specific Object Attribues	212
	hwloc_obj_attr_u::hwloc_cache_attr_s	
	Cache-specific Object Attributes	214
	hwloc_cl_device_topology_amd	214
	hwloc_component	
	Generic component structure	216
	hwloc_disc_component	
	Discovery component structure	217
	hwloc_disc_status	
	Discovery status structure	218
	hwloc_distances_s	
	Matrix of distances between a set of objects	219
	hwloc_obj_attr_u::hwloc_group_attr_s	
	Group-specific Object Attributes	220
	hwloc_info_s	
	Object info	221
	hwloc_location	
	Where to measure attributes from	221
	hwloc_location::hwloc_location_u	
	Actual location	222
	hwloc_obj_attr_u::hwloc_numanode_attr_s::hwloc_memory_page_type_s	
	Array of local memory page types, NULL if no local memory and page_types is 0	223
	hwloc_obj_attr_u::hwloc_numanode_attr_s	
	NUMA node-specific Object Attributes	223
	hwloc_obj	
	Structure of a topology object	224
	hwloc_obj_attr_u	
	Object type-specific Attributes	229
	hwloc_obj_attr_u::hwloc_osdev_attr_s	
	OS Device specific Object Attributes	231
	hwloc_obj_attr_u::hwloc_pcidev_attr_s	
	PCI Device specific Object Attributes	231
	hwloc_topology_cpubind_support	
	Flags describing actual PU binding support for this topology	232
	hwloc_topology_diff_u::hwloc_topology_diff_generic_s	234
	hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_generic_s	234
	hwloc topology diff u::hwloc topology diff obj attr s	235

78 Data Structure Index

hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_string_s	
String attribute modification with an optional name	235
hwloc_topology_diff_obj_attr_u	
One object attribute difference	236
hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_uint64_s	
Integer attribute modification with an optional index	237
hwloc_topology_diff_u::hwloc_topology_diff_too_complex_s	238
hwloc_topology_diff_u	
One element of a difference list between two topologies	238
hwloc_topology_discovery_support	
Flags describing actual discovery support for this topology	239
hwloc_topology_membind_support	
Flags describing actual memory binding support for this topology	240
hwloc_topology_misc_support	
Flags describing miscellaneous features	242
hwloc_topology_support	
Set of flags describing actual support for this topology	242

## **Module Documentation**

## 22.1 API version

#### **Macros**

- #define HWLOC\_API\_VERSION 0x00020300
- #define HWLOC\_COMPONENT\_ABI 7

### **Functions**

unsigned hwloc\_get\_api\_version (void)

## 22.1.1 Detailed Description

#### 22.1.2 Macro Definition Documentation

## 22.1.2.1 HWLOC\_API\_VERSION

```
#define HWLOC_API_VERSION 0x00020300
```

Indicate at build time which hwloc API version is being used.

This number is updated to (X << 16)+(Y << 8)+Z when a new release X.Y.Z actually modifies the API.

Users may check for available features at build time using this number (see How do I handle API changes?).

Note

This should not be confused with HWLOC\_VERSION, the library version. Two stable releases of the same series usually have the same HWLOC\_API\_VERSION even if their HWLOC\_VERSION are different.

## 22.1.2.2 HWLOC COMPONENT ABI

```
#define HWLOC_COMPONENT_ABI 7
```

Current component and plugin ABI version (see hwloc/plugins.h)

## 22.1.3 Function Documentation

#### 22.1.3.1 hwloc\_get\_api\_version()

Indicate at runtime which hwloc API version was used at build time. Should be HWLOC\_API\_VERSION if running on the same version.

80 Module Documentation

## 22.2 Object Sets (hwloc\_cpuset\_t and hwloc\_nodeset\_t)

## **Typedefs**

- typedef hwloc\_bitmap\_t hwloc\_cpuset\_t
- · typedef hwloc const bitmap t hwloc const cpuset t
- typedef hwloc\_bitmap\_t hwloc\_nodeset\_t
- · typedef hwloc const bitmap thwloc const nodeset t

## 22.2.1 Detailed Description

Hwloc uses bitmaps to represent two distinct kinds of object sets: CPU sets (hwloc\_cpuset\_t) and NUMA node sets (hwloc\_nodeset\_t). These types are both typedefs to a common back end type (hwloc\_bitmap\_t), and therefore all the hwloc bitmap functions are applicable to both hwloc\_cpuset\_t and hwloc\_nodeset\_t (see The bitmap API).

The rationale for having two different types is that even though the actions one wants to perform on these types are the same (e.g., enable and disable individual items in the set/mask), they're used in very different contexts: one for specifying which processors to use and one for specifying which NUMA nodes to use. Hence, the name difference is really just to reflect the intent of where the type is used.

## 22.2.2 Typedef Documentation

#### 22.2.2.1 hwloc\_const\_cpuset\_t

```
typedef hwloc_const_bitmap_t hwloc_const_cpuset_t
A non-modifiable hwloc_cpuset_t.
```

## 22.2.2.2 hwloc\_const\_nodeset\_t

```
typedef hwloc_const_bitmap_t hwloc_const_nodeset_t A non-modifiable hwloc nodeset t.
```

#### 22.2.2.3 hwloc\_cpuset\_t

```
typedef hwloc_bitmap_t hwloc_cpuset_t
```

A CPU set is a bitmap whose bits are set according to CPU physical OS indexes.

It may be consulted and modified with the bitmap API as any hwloc\_bitmap\_t (see hwloc/bitmap.h).

Each bit may be converted into a PU object using hwloc\_get\_pu\_obj\_by\_os\_index().

### 22.2.2.4 hwloc\_nodeset\_t

```
typedef hwloc_bitmap_t hwloc_nodeset_t
```

A node set is a bitmap whose bits are set according to NUMA memory node physical OS indexes.

It may be consulted and modified with the bitmap API as any hwloc\_bitmap\_t (see hwloc/bitmap.h). Each bit may be converted into a NUMA node object using hwloc\_get\_numanode\_obj\_by\_os\_index().

When binding memory on a system without any NUMA node, the single main memory bank is considered as NUMA node #0.

See also Converting between CPU sets and node sets.

22.3 Object Types 81

## 22.3 Object Types

#### Macros

• #define HWLOC\_TYPE\_UNORDERED

## **Typedefs**

- typedef enum hwloc\_obj\_cache\_type\_e hwloc\_obj\_cache\_type\_t
- typedef enum hwloc obj bridge type e hwloc obj bridge type t
- typedef enum hwloc\_obj\_osdev\_type\_e hwloc\_obj\_osdev\_type\_t

#### **Enumerations**

- enum hwloc\_obj\_type\_t {
   HWLOC\_OBJ\_MACHINE, HWLOC\_OBJ\_PACKAGE, HWLOC\_OBJ\_CORE, HWLOC\_OBJ\_PU,
   HWLOC\_OBJ\_L1CACHE, HWLOC\_OBJ\_L2CACHE, HWLOC\_OBJ\_L3CACHE, HWLOC\_OBJ\_L4CACHE,
   HWLOC\_OBJ\_L5CACHE, HWLOC\_OBJ\_L1ICACHE, HWLOC\_OBJ\_L2ICACHE, HWLOC\_OBJ\_L3ICACHE,
   HWLOC\_OBJ\_GROUP, HWLOC\_OBJ\_NUMANODE, HWLOC\_OBJ\_BRIDGE, HWLOC\_OBJ\_PCI\_DEVICE,
   HWLOC\_OBJ\_OS\_DEVICE, HWLOC\_OBJ\_MISC, HWLOC\_OBJ\_MEMCACHE, HWLOC\_OBJ\_DIE }
- enum hwloc\_obj\_cache\_type\_e { HWLOC\_OBJ\_CACHE\_UNIFIED, HWLOC\_OBJ\_CACHE\_DATA, HWLOC\_OBJ\_CACHE\_INSTRUCTION}
- enum hwloc\_obj\_bridge\_type\_e { HWLOC\_OBJ\_BRIDGE\_HOST, HWLOC\_OBJ\_BRIDGE\_PCI }
- enum hwloc\_obj\_osdev\_type\_e {
   HWLOC\_OBJ\_OSDEV\_BLOCK, HWLOC\_OBJ\_OSDEV\_GPU, HWLOC\_OBJ\_OSDEV\_NETWORK,
   HWLOC\_OBJ\_OSDEV\_OPENFABRICS,
   HWLOC\_OBJ\_OSDEV\_DMA, HWLOC\_OBJ\_OSDEV\_COPROC }

#### **Functions**

• int hwloc\_compare\_types (hwloc\_obj\_type\_t type1, hwloc\_obj\_type\_t type2)

## 22.3.1 Detailed Description

#### 22.3.2 Macro Definition Documentation

#### 22.3.2.1 HWLOC TYPE UNORDERED

```
#define HWLOC_TYPE_UNORDERED
```

Value returned by <a href="https://hww.compare\_types">hwloc\_compare\_types</a>() when types can not be compared.

#### 22.3.3 Typedef Documentation

### 22.3.3.1 hwloc\_obj\_bridge\_type\_t

```
typedef enum hwloc_obj_bridge_type_e hwloc_obj_bridge_type_t Type of one side (upstream or downstream) of an I/O bridge.
```

## 22.3.3.2 hwloc\_obj\_cache\_type\_t

```
typedef enum hwloc_obj_cache_type_e hwloc_obj_cache_type_t Cache type.
```

82 Module Documentation

## 22.3.3.3 hwloc\_obj\_osdev\_type\_t

typedef enum hwloc\_obj\_osdev\_type\_e hwloc\_obj\_osdev\_type\_t Type of a OS device.

## 22.3.4 Enumeration Type Documentation

## 22.3.4.1 hwloc\_obj\_bridge\_type\_e

enum hwloc\_obj\_bridge\_type\_e

Type of one side (upstream or downstream) of an I/O bridge.

#### Enumerator

HWLOC_OBJ_BRIDGE_HOST	Host-side of a bridge, only possible upstream.
HWLOC_OBJ_BRIDGE_PCI	PCI-side of a bridge.

## 22.3.4.2 hwloc\_obj\_cache\_type\_e

enum hwloc\_obj\_cache\_type\_e

Cache type.

#### Enumerator

HWLOC_OBJ_CACHE_UNIFIED	Unified cache.
HWLOC_OBJ_CACHE_DATA	Data cache.
HWLOC_OBJ_CACHE_INSTRUCTION	Instruction cache (filtered out by default).

## 22.3.4.3 hwloc\_obj\_osdev\_type\_e

enum hwloc\_obj\_osdev\_type\_e

Type of a OS device.

#### Enumerator

HWLOC_OBJ_OSDEV_BLOCK	Operating system block device, or non-volatile memory device. For instance "sda" or "dax2.0" on Linux.
HWLOC_OBJ_OSDEV_GPU	Operating system GPU device. For instance ":0.0" for a GL display, "card0" for a Linux DRM device.
HWLOC_OBJ_OSDEV_NETWORK	Operating system network device. For instance the "eth0" interface on Linux.
HWLOC_OBJ_OSDEV_OPENFABRICS	Operating system openfabrics device. For instance the "mlx4_0" InfiniBand HCA, or "hfi1_0" Omni-Path interface on Linux.
HWLOC_OBJ_OSDEV_DMA	Operating system dma engine device. For instance the "dma0chan0" DMA channel on Linux.
HWLOC_OBJ_OSDEV_COPROC	Operating system co-processor device. For instance "opencl0d0" for a OpenCL device, "cuda0" for a CUDA device.

22.3 Object Types 83

# 22.3.4.4 hwloc\_obj\_type\_t

enum hwloc\_obj\_type\_t

Type of topology object.

Note

### Enumerator

HWLOC_OBJ_MACHINE	Machine. A set of processors and memory with cache coherency. This type is always used for the root object of a topology, and never used anywhere else. Hence its parent is always NULL.	
HWLOC_OBJ_PACKAGE	Physical package. The physical package that usually gets inserted into a socket on the motherboard. A processor package usually contains multiple cores, and possibly some dies.	
HWLOC_OBJ_CORE	Core. A computation unit (may be shared by several PUs, aka logical processors).	
HWLOC_OBJ_PU	Processing Unit, or (Logical) Processor. An execution unit (may share a core with some other logical processors, e.g. in the case of an SMT core). This is the smallest object representing CPU resources, it cannot have any child except Misc objects.  Objects of this kind are always reported and can thus be used as fallback when others are not.	
HWLOC_OBJ_L1CACHE	Level 1 Data (or Unified) Cache.	
HWLOC_OBJ_L2CACHE	Level 2 Data (or Unified) Cache.	
HWLOC_OBJ_L3CACHE	Level 3 Data (or Unified) Cache.	
HWLOC_OBJ_L4CACHE	Level 4 Data (or Unified) Cache.	
HWLOC_OBJ_L5CACHE	Level 5 Data (or Unified) Cache.	
HWLOC_OBJ_L1ICACHE	Level 1 instruction Cache (filtered out by default).	
HWLOC_OBJ_L2ICACHE	Level 2 instruction Cache (filtered out by default).	
HWLOC_OBJ_L3ICACHE	Level 3 instruction Cache (filtered out by default).	
HWLOC_OBJ_GROUP	Group objects. Objects which do not fit in the above but are detected by hwloc and are useful to take into account for affinity. For instance, some operating systems expose their arbitrary processors aggregation this way. And hwloc may insert such objects to group NUMA nodes according to their distances. See also What are these Group objects in my topology?. These objects are removed when they do not bring any structure (see HWLOC_TYPE_FILTER_KEEP_STRUCTURE).	
HWLOC_OBJ_NUMANODE	NUMA node. An object that contains memory that is directly and byte-accessible to the host processors. It is usually close to some cores (the corresponding objects are descendants of the NUMA node object in the hwloc tree). This is the smallest object representing Memory resources, it cannot have any child except Misc objects. However it may have Memory-side cache parents.  There is always at least one such object in the topology even if the machine is not NUMA.  Memory objects are not listed in the main children list, but rather in the dedicated Memory children list.  NUMA nodes have a special depth HWLOC_TYPE_DEPTH_NUMANODE instead of a normal depth just like other objects in the main tree.	

#### Enumerator

HWLOC_OBJ_BRIDGE	Bridge (filtered out by default). Any bridge (or PCI switch) that connects the host or an I/O bus, to another I/O bus. Bridges are not added to the topology unless their filtering is changed (see hwloc_topology_set_type_filter() and hwloc_topology_set_io_types_filter()).  I/O objects are not listed in the main children list, but rather in the dedicated io children list. I/O objects have NULL CPU and node sets.
HWLOC_OBJ_PCI_DEVICE	PCI device (filtered out by default). PCI devices are not added to the topology unless their filtering is changed (see hwloc_topology_set_type_filter() and hwloc_topology_set_io_types_filter()).  I/O objects are not listed in the main children list, but rather in the dedicated io children list. I/O objects have NULL CPU and node sets.
HWLOC_OBJ_OS_DEVICE	Operating system device (filtered out by default). OS devices are not added to the topology unless their filtering is changed (see <a href="https://hww.nube.com/hwloc_topology_set_type_filter">hwloc_topology_set_type_filter</a> () and <a href="https://hwloc_types_filter">hwloc_topology_set_io_types_filter</a> ()). I/O objects are not listed in the main children list, but rather in the dedicated io children list. I/O objects have NULL CPU and node sets.
HWLOC_OBJ_MISC	Miscellaneous objects (filtered out by default). Objects without particular meaning, that can e.g. be added by the application for its own use, or by hwloc for miscellaneous objects such as MemoryModule (DIMMs). They are not added to the topology unless their filtering is changed (see hwloc_topology_set_type_filter()).  These objects are not listed in the main children list, but rather in the dedicated misc children list. Misc objects may only have Misc objects as children, and those are in the dedicated misc children list as well. Misc objects have NULL CPU and node sets.
HWLOC_OBJ_MEMCACHE	Memory-side cache (filtered out by default). A cache in front of a specific NUMA node. This object always has at least one NUMA node as a memory child.  Memory objects are not listed in the main children list, but rather in the dedicated Memory children list.  Memory-side cache have a special depth  HWLOC_TYPE_DEPTH_MEMCACHE instead of a normal depth just like other objects in the main tree.
HWLOC_OBJ_DIE	Die within a physical package. A subpart of the physical package, that contains multiple cores.

# 22.3.5 Function Documentation

### 22.3.5.1 hwloc\_compare\_types()

Compare the depth of two object types.

Types shouldn't be compared as they are, since newer ones may be added in the future. This function returns less than, equal to, or greater than zero respectively if type1 objects usually include type2 objects, are the same as type2 objects, or are included in type2 objects. If the types can not be compared (because neither is usually contained in the other), HWLOC\_TYPE\_UNORDERED is returned. Object types containing CPUs can always be compared (usually, a system contains machines which contain nodes which contain packages which contain caches, which contain cores, which contain processors).

22.3 Object Types 85

Note

HWLOC\_OBJ\_PU will always be the deepest, while HWLOC\_OBJ\_MACHINE is always the highest.

This does not mean that the actual topology will respect that order: e.g. as of today cores may also contain caches, and packages may also contain nodes. This is thus just to be seen as a fallback comparison method.

# 22.4 Object Structure and Attributes

# **Data Structures**

- struct hwloc\_obj
- union hwloc\_obj\_attr\_u
- struct hwloc\_info\_s

# **Typedefs**

• typedef struct hwloc\_obj\_t

# 22.4.1 Detailed Description

# 22.4.2 Typedef Documentation

### 22.4.2.1 hwloc\_obj\_t

typedef struct hwloc\_obj\* hwloc\_obj\_t
Convenience typedef; a pointer to a struct hwloc\_obj.

# 22.5 Topology Creation and Destruction

### **Typedefs**

typedef struct hwloc\_topology \* hwloc\_topology\_t

#### **Functions**

- int hwloc\_topology\_init (hwloc\_topology\_t \*topologyp)
- int hwloc topology load (hwloc topology t topology)
- void hwloc\_topology\_destroy (hwloc\_topology\_t topology)
- int hwloc\_topology\_dup (hwloc\_topology\_t \*newtopology, hwloc\_topology\_t oldtopology)
- int hwloc\_topology\_abi\_check (hwloc\_topology\_t topology)
- void hwloc\_topology\_check (hwloc\_topology\_t topology)

### 22.5.1 Detailed Description

### 22.5.2 Typedef Documentation

# 22.5.2.1 hwloc\_topology\_t

```
typedef struct hwloc_topology* hwloc_topology_t
Topology context.
```

To be initialized with hwloc\_topology\_init() and built with hwloc\_topology\_load().

#### 22.5.3 Function Documentation

### 22.5.3.1 hwloc topology abi check()

Verify that the topology is compatible with the current hwloc library.

This is useful when using the same topology structure (in memory) in different libraries that may use different hwloc installations (for instance if one library embeds a specific version of hwloc, while another library uses a default system-wide hwloc installation).

If all libraries/programs use the same hwloc installation, this function always returns success.

### Returns

0 on success.

-1 with errno set to EINVAL if incompatible.

#### Note

If sharing between processes with hwloc\_shmem\_topology\_write(), the relevant check is already performed inside hwloc\_shmem\_topology\_adopt().

### 22.5.3.2 hwloc\_topology\_check()

Run internal checks on a topology structure.

The program aborts if an inconsistency is detected in the given topology.

#### **Parameters**

topology	is the topology to be checked
----------	-------------------------------

Note

This routine is only useful to developers.

The input topology should have been previously loaded with <a href="https://hww.topology\_load">hwloc\_topology\_load()</a>.

### 22.5.3.3 hwloc\_topology\_destroy()

Terminate and free a topology context.

#### **Parameters**

topology	is the topology to be freed
----------	-----------------------------

### 22.5.3.4 hwloc\_topology\_dup()

Duplicate a topology.

The entire topology structure as well as its objects are duplicated into a new one.

This is useful for keeping a backup while modifying a topology.

Note

Object userdata is not duplicated since hwloc does not know what it point to. The objects of both old and new topologies will point to the same userdata.

### 22.5.3.5 hwloc\_topology\_init()

Allocate a topology context.

### **Parameters**

-			
ſ	out	topologyp	is assigned a pointer to the new allocated context.

#### Returns

0 on success, -1 on error.

### 22.5.3.6 hwloc\_topology\_load()

Build the actual topology.

Build the actual topology once initialized with hwloc\_topology\_init() and tuned with Topology Detection Configuration and Query and Changing the Source of Topology Discovery routines. No other routine may be called earlier using this topology context.

#### **Parameters**

topology	is the topology to be loaded with objects.
----------	--

#### Returns

0 on success, -1 on error.

#### Note

On failure, the topology is reinitialized. It should be either destroyed with <a href="https://hww.cc.topology\_destroy">hwloc\_topology\_destroy</a>() or configured and loaded again.

This function may be called only once per topology.

The binding of the current thread or process may temporarily change during this call but it will be restored before it returns.

#### See also

Topology Detection Configuration and Query and Changing the Source of Topology Discovery

# 22.6 Object levels, depths and types

#### **Enumerations**

enum hwloc\_get\_type\_depth\_e {
 HWLOC\_TYPE\_DEPTH\_UNKNOWN, HWLOC\_TYPE\_DEPTH\_MULTIPLE, HWLOC\_TYPE\_DEPTH\_NUMANODE,
 HWLOC\_TYPE\_DEPTH\_BRIDGE,
 HWLOC\_TYPE\_DEPTH\_PCI\_DEVICE, HWLOC\_TYPE\_DEPTH\_OS\_DEVICE, HWLOC\_TYPE\_DEPTH\_MISC,
 HWLOC\_TYPE\_DEPTH\_MEMCACHE }

#### **Functions**

- int hwloc\_topology\_get\_depth (hwloc\_topology\_t restrict topology)
- int hwloc get type depth (hwloc topology t topology, hwloc obj type t type)
- int hwloc\_get\_memory\_parents\_depth (hwloc\_topology\_t topology)
- static int hwloc\_get\_type\_or\_below\_depth (hwloc\_topology\_t topology, hwloc\_obj\_type\_t type)
- static int hwloc\_get\_type\_or\_above\_depth (hwloc\_topology\_t topology, hwloc\_obj\_type\_t type)
- hwloc\_obj\_type\_t hwloc\_get\_depth\_type (hwloc\_topology\_t topology, int depth)
- unsigned hwloc\_get\_nbobjs\_by\_depth (hwloc\_topology\_t topology, int depth)
- static int hwloc get\_nbobjs by type (hwloc\_topology\_t topology, hwloc\_obj\_type\_t type)
- static hwloc\_obj\_t hwloc\_get\_root\_obj (hwloc\_topology\_t topology)
- hwloc\_obj\_t hwloc\_get\_obj\_by\_depth (hwloc\_topology\_t topology, int depth, unsigned idx)
- static hwloc\_obj\_t hwloc\_get\_obj\_by\_type (hwloc\_topology\_t topology, hwloc\_obj\_type\_t type, unsigned idx)
- static hwloc\_obj\_t hwloc\_get\_next\_obj\_by\_depth (hwloc\_topology\_t topology, int depth, hwloc\_obj\_t prev)
- static hwloc\_obj\_t hwloc\_get\_next\_obj\_by\_type (hwloc\_topology\_t topology, hwloc\_obj\_type\_t type, hwloc\_obj\_t prev)

### 22.6.1 Detailed Description

Be sure to see the figure in Terms and Definitions that shows a complete topology tree, including depths, child/sibling/cousin relationships, and an example of an asymmetric topology where one package has fewer caches than its peers.

# 22.6.2 Enumeration Type Documentation

### 22.6.2.1 hwloc\_get\_type\_depth\_e

enum hwloc\_get\_type\_depth\_e

#### Enumerator

HWLOC_TYPE_DEPTH_UNKNOWN	No object of given type exists in the topology.
HWLOC_TYPE_DEPTH_MULTIPLE	Objects of given type exist at different depth in the topology (only for Groups).
HWLOC_TYPE_DEPTH_NUMANODE	Virtual depth for NUMA nodes.
HWLOC_TYPE_DEPTH_BRIDGE	Virtual depth for bridge object level.
HWLOC_TYPE_DEPTH_PCI_DEVICE	Virtual depth for PCI device object level.
HWLOC_TYPE_DEPTH_OS_DEVICE	Virtual depth for software device object level.
HWLOC_TYPE_DEPTH_MISC	Virtual depth for Misc object.
HWLOC_TYPE_DEPTH_MEMCACHE	Virtual depth for MemCache object.

### 22.6.3 Function Documentation

### 22.6.3.1 hwloc\_get\_depth\_type()

Returns the type of objects at depth depth.

depth should between 0 and hwloc\_topology\_get\_depth()-1, or a virtual depth such as HWLOC\_TYPE\_DEPTH\_NUMANODE.

#### Returns

(hwloc\_obj\_type\_t)-1 if depth depth does not exist.

#### 22.6.3.2 hwloc get memory parents depth()

Return the depth of parents where memory objects are attached.

Memory objects have virtual negative depths because they are not part of the main CPU-side hierarchy of objects. This depth should not be compared with other level depths.

If all Memory objects are attached to Normal parents at the same depth, this parent depth may be compared to other as usual, for instance for knowing whether NUMA nodes is attached above or below Packages.

#### Returns

The depth of Normal parents of all memory children if all these parents have the same depth. For instance the depth of the Package level if all NUMA nodes are attached to Package objects.

HWLOC\_TYPE\_DEPTH\_MULTIPLE if Normal parents of all memory children do not have the same depth. For instance if some NUMA nodes are attached to Packages while others are attached to Groups.

### 22.6.3.3 hwloc\_get\_nbobjs\_by\_depth()

Returns the width of level at depth depth.

### 22.6.3.4 hwloc\_get\_nbobjs\_by\_type()

Returns the width of level type type.

If no object for that type exists, 0 is returned. If there are several levels with objects of that type, -1 is returned.

### 22.6.3.5 hwloc\_get\_next\_obj\_by\_depth()

Returns the next object at depth depth.

If prev is NULL, return the first object at depth depth.

#### 22.6.3.6 hwloc\_get\_next\_obj\_by\_type()

Returns the next object of type type.

If prev is NULL, return the first object at type type. If there are multiple or no depth for given type, return NULL and let the caller fallback to hwloc\_get\_next\_obj\_by\_depth().

### 22.6.3.7 hwloc\_get\_obj\_by\_depth()

```
hwloc_obj_t hwloc_get_obj_by_depth (
          hwloc_topology_t topology,
          int depth,
          unsigned idx )
```

Returns the topology object at logical index idx from depth depth.

### 22.6.3.8 hwloc\_get\_obj\_by\_type()

Returns the topology object at logical index idx with type type.

If no object for that type exists,  $\mathtt{NULL}$  is returned. If there are several levels with objects of that type (HWLOC\_OBJ\_GROUP),  $\mathtt{NULL}$  is returned and the caller may fallback to  $\mathtt{hwloc\_get\_obj\_by\_depth}()$ .

#### 22.6.3.9 hwloc get root obj()

Returns the top-object of the topology-tree.

Its type is HWLOC\_OBJ\_MACHINE.

### 22.6.3.10 hwloc\_get\_type\_depth()

Returns the depth of objects of type type.

If no object of this type is present on the underlying architecture, or if the OS doesn't provide this kind of information, the function returns HWLOC TYPE DEPTH UNKNOWN.

If type is absent but a similar type is acceptable, see also hwloc\_get\_type\_or\_below\_depth() and hwloc\_get\_type\_or\_above\_depth(). If HWLOC\_OBJ\_GROUP is given, the function may return HWLOC\_TYPE\_DEPTH\_MULTIPLE if multiple levels of Groups exist.

If a NUMA node, I/O or Misc object type is given, the function returns a virtual value because these objects are stored in special levels that are not CPU-related. This virtual depth may be passed to other hwloc functions such as <a href="hwloc\_get\_obj\_by\_depth">hwloc\_get\_obj\_by\_depth</a>() but it should not be considered as an actual depth by the application. In particular, it should not be compared with any other object depth or with the entire topology depth.

#### See also

```
hwloc_get_memory_parents_depth().
```

hwloc type sscanf as depth() for returning the depth of objects whose type is given as a string.

#### 22.6.3.11 hwloc\_get\_type\_or\_above\_depth()

Returns the depth of objects of type type or above.

If no object of this type is present on the underlying architecture, the function returns the depth of the first "present" object typically containing type.

May return HWLOC\_TYPE\_DEPTH\_MULTIPLE for HWLOC\_OBJ\_GROUP just like hwloc\_get\_type\_depth().

#### 22.6.3.12 hwloc\_get\_type\_or\_below\_depth()

Returns the depth of objects of type type or below.

If no object of this type is present on the underlying architecture, the function returns the depth of the first "present" object typically found inside type.

This function is only meaningful for normal object types. If a memory, I/O or Misc object type is given, the corresponding virtual depth is always returned (see <a href="https://www.hullon.com/hullon/hullo

May return HWLOC\_TYPE\_DEPTH\_MULTIPLE for HWLOC\_OBJ\_GROUP just like hwloc\_get\_type\_depth().

### 22.6.3.13 hwloc\_topology\_get\_depth()

Get the depth of the hierarchical tree of objects.

This is the depth of HWLOC\_OBJ\_PU objects plus one.

Note

NUMA nodes, I/O and Misc objects are ignored when computing the depth of the tree (they are placed on special levels).

# 22.7 Converting between Object Types and Attributes, and Strings

#### **Functions**

- const char \* hwloc\_obj\_type\_string (hwloc\_obj\_type\_t type)
- int hwloc\_obj\_type\_snprintf (char \*restrict string, size\_t size, hwloc\_obj\_t obj, int verbose)
- int hwloc\_obj\_attr\_snprintf (char \*restrict string, size\_t size, hwloc\_obj\_t obj, const char \*restrict separator, int verbose)
- int hwloc\_type\_sscanf (const char \*string, hwloc\_obj\_type\_t \*typep, union hwloc\_obj\_attr\_u \*attrp, size\_t attrsize)
- int hwloc\_type\_sscanf\_as\_depth (const char \*string, hwloc\_obj\_type\_t \*typep, hwloc\_topology\_t topology, int \*depthp)

### 22.7.1 Detailed Description

### 22.7.2 Function Documentation

#### 22.7.2.1 hwloc obj attr snprintf()

Stringify the attributes of a given topology object into a human-readable form.

Attribute values are separated by separator.

Only the major attributes are printed in non-verbose mode.

If size is 0, string may safely be NULL.

#### Returns

the number of character that were actually written if not truncating, or that would have been written (not including the ending \0).

#### 22.7.2.2 hwloc\_obj\_type\_snprintf()

Stringify the type of a given topology object into a human-readable form.

Contrary to <a href="https://hww.nction.com/hwloc\_obj\_type\_string">hwloc\_obj\_type\_string</a>(), this function includes object-specific attributes (such as the Group depth, the Bridge type, or OS device type) in the output, and it requires the caller to provide the output buffer.

The output is guaranteed to be the same for all objects of a same topology level.

If verbose is 1, longer type names are used, e.g. L1Cache instead of L1.

The output string may be parsed back by hwloc\_type\_sscanf().

If size is 0, string may safely be NULL.

#### Returns

the number of character that were actually written if not truncating, or that would have been written (not including the ending 0).

### 22.7.2.3 hwloc\_obj\_type\_string()

Return a constant stringified object type.

This function is the basic way to convert a generic type into a string. The output string may be parsed back by hwloc\_type\_sscanf().

hwloc\_obj\_type\_snprintf() may return a more precise output for a specific object, but it requires the caller to provide the output buffer.

#### 22.7.2.4 hwloc\_type\_sscanf()

Return an object type and attributes from a type string.

Convert strings such as "Package" or "L1iCache" into the corresponding types. Matching is case-insensitive, and only the first letters are actually required to match.

The matched object type is set in typep (which cannot be NULL).

Type-specific attributes, for instance Cache type, Cache depth, Group depth, Bridge type or OS Device type may be returned in attrp. Attributes that are not specified in the string (for instance "Group" without a depth, or "L2Cache" without a cache type) are set to -1.

attrp is only filled if not NULL and if its size specified in attrsize is large enough. It should be at least as large as union hwloc obj attr u.

#### Returns

0 if a type was correctly identified, otherwise -1.

### Note

This function is guaranteed to match any string returned by hwloc\_obj\_type\_string() or hwloc\_obj\_type\_snprintf().

This is an extended version of the now deprecated hwloc\_obj\_type\_sscanf().

### 22.7.2.5 hwloc\_type\_sscanf\_as\_depth()

Return an object type and its level depth from a type string.

Convert strings such as "Package" or "L1iCache" into the corresponding types and return in depthp the depth of the corresponding level in the topology topology.

If no object of this type is present on the underlying architecture, HWLOC\_TYPE\_DEPTH\_UNKNOWN is returned. If multiple such levels exist (for instance if giving Group without any depth), the function may return HWLOC\_TYPE\_DEPTH\_MULTIPLE instead.

The matched object type is set in typep if typep is non NULL.

#### Note

This function is similar to hwloc\_type\_sscanf() followed by hwloc\_get\_type\_depth() but it also automatically disambiguates multiple group levels etc.

This function is guaranteed to match any string returned by hwloc\_obj\_type\_string() or hwloc\_obj\_type\_snprintf().

# 22.8 Consulting and Adding Key-Value Info Attributes

#### **Functions**

- static const char \* hwloc\_obj\_get\_info\_by\_name (hwloc\_obj\_t obj, const char \*name)
- int hwloc obj add info (hwloc obj t obj, const char \*name, const char \*value)

### 22.8.1 Detailed Description

### 22.8.2 Function Documentation

#### 22.8.2.1 hwloc\_obj\_add\_info()

Add the given info name and value pair to the given object.

The info is appended to the existing info array even if another key with the same name already exists.

The input strings are copied before being added in the object infos.

#### Returns

```
0 on success, -1 on error.
```

#### Note

This function may be used to enforce object colors in the Istopo graphical output by using "IstopoStyle" as a name and "Background=#rrggbb" as a value. See CUSTOM COLORS in the Istopo(1) manpage for details.

If value contains some non-printable characters, they will be dropped when exporting to XML, see <a href="https://hww.numer.com/hwloc/export\_xml">https://hwloc/export\_xml</a>() in <a href="https://hwloc/export\_xml">https://hwloc/export\_xml</a>() in <a

### 22.8.2.2 hwloc\_obj\_get\_info\_by\_name()

Search the given key name in object infos and return the corresponding value.

If multiple keys match the given name, only the first one is returned.

#### Returns

NULL if no such key exists.

22.9 CPU binding 97

# 22.9 CPU binding

#### **Enumerations**

 enum hwloc\_cpubind\_flags\_t{HWLOC\_CPUBIND\_PROCESS, HWLOC\_CPUBIND\_THREAD, HWLOC\_CPUBIND\_STRICT, HWLOC\_CPUBIND\_NOMEMBIND}

#### **Functions**

- int hwloc\_set\_cpubind (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t set, int flags)
- int hwloc\_get\_cpubind (hwloc\_topology\_t topology, hwloc\_cpuset\_t set, int flags)
- int hwloc\_set\_proc\_cpubind (hwloc\_topology\_t topology, hwloc\_pid\_t pid, hwloc\_const\_cpuset\_t set, int flags)
- int hwloc get proc cpubind (hwloc topology t topology, hwloc pid t pid, hwloc cpuset t set, int flags)
- int hwloc\_set\_thread\_cpubind (hwloc\_topology\_t topology, hwloc\_thread\_t thread, hwloc\_const\_cpuset\_t set, int flags)
- int hwloc\_get\_thread\_cpubind (hwloc\_topology\_t topology, hwloc\_thread\_t thread, hwloc\_cpuset\_t set, int flags)
- int hwloc\_get\_last\_cpu\_location (hwloc\_topology\_t topology, hwloc\_cpuset\_t set, int flags)
- int hwloc\_get\_proc\_last\_cpu\_location (hwloc\_topology\_t topology, hwloc\_pid\_t pid, hwloc\_cpuset\_t set, int flags)

### 22.9.1 Detailed Description

Some operating systems only support binding threads or processes to a single PU. Others allow binding to larger sets such as entire Cores or Packages or even random sets of invididual PUs. In such operating system, the scheduler is free to run the task on one of these PU, then migrate it to another PU, etc. It is often useful to call hwloc\_bitmap\_singlify() on the target CPU set before passing it to the binding function to avoid these expensive migrations. See the documentation of hwloc\_bitmap\_singlify() for details.

Some operating systems do not provide all hwloc-supported mechanisms to bind processes, threads, etc. hwloc\_topology\_get\_support() may be used to query about the actual CPU binding support in the currently used operating system.

When the requested binding operation is not available and the HWLOC\_CPUBIND\_STRICT flag was passed, the function returns -1. errno is set to ENOSYS when it is not possible to bind the requested kind of object processes/threads. errno is set to EXDEV when the requested cpuset can not be enforced (e.g. some systems only allow one CPU, and some other systems only allow one NUMA node).

If HWLOC\_CPUBIND\_STRICT was not passed, the function may fail as well, or the operating system may use a slightly different operation (with side-effects, smaller binding set, etc.) when the requested operation is not exactly supported.

The most portable version that should be preferred over the others, whenever possible, is the following one which just binds the current program, assuming it is single-threaded:

hwloc\_set\_cpubind(topology, set, 0),

If the program may be multithreaded, the following one should be preferred to only bind the current thread: hwloc\_set\_cpubind(topology, set, HWLOC\_CPUBIND\_THREAD),

### See also

Some example codes are available under doc/examples/ in the source tree.

#### Note

To unbind, just call the binding function with either a full cpuset or a cpuset equal to the system cpuset.

On some operating systems, CPU binding may have effects on memory binding, see HWLOC\_CPUBIND\_NOMEMBIND

Running Istopo --top or hwloc-ps can be a very convenient tool to check how binding actually happened.

# 22.9.2 Enumeration Type Documentation

### 22.9.2.1 hwloc\_cpubind\_flags\_t

```
enum hwloc_cpubind_flags_t
```

Process/Thread binding flags.

These bit flags can be used to refine the binding policy.

The default (0) is to bind the current process, assumed to be single-threaded, in a non-strict way. This is the most portable way to bind as all operating systems usually provide it.

Note

Not all systems support all kinds of binding. See the "Detailed Description" section of CPU binding for a description of errors that can occur.

#### Enumerator

HWLOC_CPUBIND_PROCESS	Bind all threads of the current (possibly) multithreaded process.
HWLOC_CPUBIND_THREAD	Bind current thread of current process.
HWLOC_CPUBIND_STRICT	Request for strict binding from the OS. By default, when the designated CPUs are all busy while other CPUs are idle, operating systems may execute the thread/process on those other CPUs instead of the designated CPUs, to let them progress anyway. Strict binding means that the thread/process will _never_ execute on other cpus than the designated CPUs, even when those are busy with other tasks and other CPUs are idle.
	Note
	Depending on the operating system, strict binding may not be possible (e.g., the OS does not implement it) or not allowed (e.g., for an administrative reasons), and the function will fail in that case.
	When retrieving the binding of a process, this flag checks whether all its threads actually have the same binding. If the flag is not given, the binding of each thread will be accumulated.
	Note
	This flag is meaningless when retrieving the binding of a thread.
HWLOC_CPUBIND_NOMEMBIND	Avoid any effect on memory binding. On some operating systems, some CPU binding function would also bind the memory on the corresponding NUMA node. It is often not a problem for the application, but if it is, setting this flag will make hwloc avoid using OS functions that would also bind memory. This will however reduce the support of CPU bindings, i.e. potentially return -1 with errno set to ENOSYS in some cases. This flag is only meaningful when used with functions that set the CPU binding. It is ignored when used with functions that get CPU binding information.

### 22.9.3 Function Documentation

### 22.9.3.1 hwloc\_get\_cpubind()

```
int hwloc_get_cpubind (
          hwloc_topology_t topology,
          hwloc_cpuset_t set,
          int flags )
```

Get current process or thread binding.

22.9 CPU binding 99

Writes into set the physical cpuset which the process or thread (according to flags) was last bound to.

#### 22.9.3.2 hwloc\_get\_last\_cpu\_location()

Get the last physical CPU where the current process or thread ran.

The operating system may move some tasks from one processor to another at any time according to their binding, so this function may return something that is already outdated.

flags can include either HWLOC\_CPUBIND\_PROCESS or HWLOC\_CPUBIND\_THREAD to specify whether the query should be for the whole process (union of all CPUs on which all threads are running), or only the current thread. If the process is single-threaded, flags can be set to zero to let hwloc use whichever method is available on the underlying OS.

#### 22.9.3.3 hwloc get proc cpubind()

Get the current physical binding of process pid.

Note

hwloc\_pid\_t is pid\_t on Unix platforms, and HANDLE on native Windows platforms.

As a special case on Linux, if a tid (thread ID) is supplied instead of a pid (process ID) and HWLOC\_CPUB← IND\_THREAD is passed in flags, the binding for that specific thread is returned.

On non-Linux systems, HWLOC CPUBIND THREAD can not be used in flags.

### 22.9.3.4 hwloc\_get\_proc\_last\_cpu\_location()

Get the last physical CPU where a process ran.

The operating system may move some tasks from one processor to another at any time according to their binding, so this function may return something that is already outdated.

Note

hwloc\_pid\_t is pid\_t on Unix platforms, and HANDLE on native Windows platforms.

As a special case on Linux, if a tid (thread ID) is supplied instead of a pid (process ID) and HWLOC\_CPUBIND\_THREAD is passed in flags, the last CPU location of that specific thread is returned.

On non-Linux systems, HWLOC CPUBIND THREAD can not be used in flags.

#### 22.9.3.5 hwloc\_get\_thread\_cpubind()

Get the current physical binding of thread tid.

#### Note

hwloc\_thread\_t is pthread\_t on Unix platforms, and HANDLE on native Windows platforms. HWLOC\_CPUBIND\_PROCESS can not be used in flags.

### 22.9.3.6 hwloc\_set\_cpubind()

```
int hwloc_set_cpubind (
          hwloc_topology_t topology,
          hwloc_const_cpuset_t set,
          int flags )
```

Bind current process or thread on cpus given in physical bitmap set.

#### Returns

- -1 with errno set to ENOSYS if the action is not supported
- -1 with errno set to EXDEV if the binding cannot be enforced

### 22.9.3.7 hwloc\_set\_proc\_cpubind()

```
int hwloc_set_proc_cpubind (
                hwloc_topology_t topology,
                hwloc_pid_t pid,
                 hwloc_const_cpuset_t set,
                 int flags )
```

Bind a process pid on cpus given in physical bitmap set.

#### Note

hwloc\_pid\_t is pid\_t on Unix platforms, and HANDLE on native Windows platforms.

As a special case on Linux, if a tid (thread ID) is supplied instead of a pid (process ID) and HWLOC\_CPUBIND\_THREAD is passed in flags, the binding is applied to that specific thread.

On non-Linux systems, HWLOC\_CPUBIND\_THREAD can not be used in flags.

#### 22.9.3.8 hwloc\_set\_thread\_cpubind()

Bind a thread thread on cpus given in physical bitmap set.

#### Note

```
{\tt hwloc\_thread\_t} \ \ {\tt is} \ {\tt pthread\_t} \ \ {\tt on} \ \ {\tt Unix} \ {\tt platforms}, \ {\tt and} \ {\tt HANDLE} \ \ {\tt on} \ \ {\tt native} \ \ {\tt Windows} \ \ {\tt platforms}. {\tt HWLOC\_CPUBIND\_PROCESS} \ \ {\tt can} \ \ {\tt not} \ \ {\tt be} \ \ {\tt used} \ \ {\tt in} \ \ {\tt flags}.
```

22.10 Memory binding 101

# 22.10 Memory binding

#### **Enumerations**

enum hwloc\_membind\_policy\_t {
 HWLOC\_MEMBIND\_DEFAULT, HWLOC\_MEMBIND\_FIRSTTOUCH, HWLOC\_MEMBIND\_BIND, HWLOC\_MEMBIND\_INTEF
 HWLOC\_MEMBIND\_NEXTTOUCH, HWLOC\_MEMBIND\_MIXED }

enum hwloc\_membind\_flags\_t {
 HWLOC\_MEMBIND\_PROCESS, HWLOC\_MEMBIND\_THREAD, HWLOC\_MEMBIND\_STRICT, HWLOC\_MEMBIND\_MIGRA
 HWLOC\_MEMBIND\_NOCPUBIND, HWLOC\_MEMBIND\_BYNODESET }

#### **Functions**

- int hwloc\_set\_membind (hwloc\_topology\_t topology, hwloc\_const\_bitmap\_t set, hwloc\_membind\_policy\_t policy, int flags)
- int hwloc\_get\_membind (hwloc\_topology\_t topology, hwloc\_bitmap\_t set, hwloc\_membind\_policy\_t \*policy, int flags)
- int hwloc\_set\_proc\_membind (hwloc\_topology\_t topology, hwloc\_pid\_t pid, hwloc\_const\_bitmap\_t set, hwloc membind policy t policy, int flags)
- int hwloc\_get\_proc\_membind (hwloc\_topology\_t topology, hwloc\_pid\_t pid, hwloc\_bitmap\_t set, hwloc membind policy t \*policy, int flags)
- int hwloc\_set\_area\_membind (hwloc\_topology\_t topology, const void \*addr, size\_t len, hwloc\_const\_bitmap\_t set, hwloc\_membind\_policy\_t policy, int flags)
- int hwloc\_get\_area\_membind (hwloc\_topology\_t topology, const void \*addr, size\_t len, hwloc\_bitmap\_t set, hwloc\_membind\_policy\_t \*policy, int flags)
- int hwloc\_get\_area\_memlocation (hwloc\_topology\_t topology, const void \*addr, size\_t len, hwloc\_bitmap\_t set, int flags)
- void \* hwloc\_alloc (hwloc\_topology\_t topology, size\_t len)
- void \* hwloc\_alloc\_membind (hwloc\_topology\_t topology, size\_t len, hwloc\_const\_bitmap\_t set, hwloc\_membind\_policy\_t policy, int flags)
- static void \* hwloc\_alloc\_membind\_policy (hwloc\_topology\_t topology, size\_t len, hwloc\_const\_bitmap\_t set, hwloc\_membind\_policy\_t policy, int flags)
- int hwloc free (hwloc topology t topology, void \*addr, size t len)

### 22.10.1 Detailed Description

Memory binding can be done three ways:

- explicit memory allocation thanks to <a href="https://www.number.numbe
- implicit memory binding through binding policy: <a href="https://hwloc\_set\_membind">hwloc\_set\_membind</a>() and friends only define the current policy of the process, which will be applied to the subsequent calls to malloc() and friends.
- migration of existing memory ranges, thanks to hwloc\_set\_area\_membind() and friends, which move alreadyallocated data.

Not all operating systems support all three ways. <a href="https://hwloc\_topology\_get\_support">hwloc\_topology\_get\_support</a>() may be used to query about the actual memory binding support in the currently used operating system.

When the requested binding operation is not available and the HWLOC\_MEMBIND\_STRICT flag was passed, the function returns -1. errno will be set to ENOSYS when the system does support the specified action or policy (e.g., some systems only allow binding memory on a per-thread basis, whereas other systems only allow binding memory for all threads in a process). errno will be set to EXDEV when the requested set can not be enforced (e.g., some systems only allow binding memory to a single NUMA node).

If HWLOC\_MEMBIND\_STRICT was not passed, the function may fail as well, or the operating system may use a slightly different operation (with side-effects, smaller binding set, etc.) when the requested operation is not exactly supported.

The most portable form that should be preferred over the others whenever possible is as follows. It allocates some memory hopefully bound to the specified set. To do so, hwloc will possibly have to change the current memory

binding policy in order to actually get the memory bound, if the OS does not provide any other way to simply allocate bound memory without changing the policy for all allocations. That is the difference with <a href="https://hww.numerchange">hwloc\_alloc\_membind()</a>, which will never change the current memory binding policy.

Each hwloc memory binding function takes a bitmap argument that is a CPU set by default, or a NUMA memory node set if the flag HWLOC\_MEMBIND\_BYNODESET is specified. See Object Sets (hwloc\_cpuset\_t and hwloc\_nodeset\_t) and The bitmap API for a discussion of CPU sets and NUMA memory node sets. It is also possible to convert between CPU set and node set using hwloc\_cpuset\_to\_nodeset() or hwloc\_cpuset\_from\_nodeset(). Memory binding by CPU set cannot work for CPU-less NUMA memory nodes. Binding by nodeset should therefore be preferred whenever possible.

See also

Some example codes are available under doc/examples/ in the source tree.

Note

On some operating systems, memory binding affects the CPU binding; see HWLOC MEMBIND NOCPUBIND

### 22.10.2 Enumeration Type Documentation

### 22.10.2.1 hwloc\_membind\_flags\_t

enum hwloc\_membind\_flags\_t

Memory binding flags.

These flags can be used to refine the binding policy. All flags can be logically OR'ed together with the exception of HWLOC\_MEMBIND\_PROCESS and HWLOC\_MEMBIND\_THREAD; these two flags are mutually exclusive. Not all systems support all kinds of binding. hwloc\_topology\_get\_support() may be used to query about the actual memory binding support in the currently used operating system. See the "Detailed Description" section of Memory binding for a description of errors that can occur.

### **Enumerator**

HWLOC_MEMBIND_PROCESS	Set policy for all threads of the specified (possibly multithreaded) process. This flag is mutually exclusive with HWLOC_MEMBIND_THREAD.
HWLOC_MEMBIND_THREAD	Set policy for a specific thread of the current process. This flag is mutually exclusive with HWLOC_MEMBIND_PROCESS.
HWLOC_MEMBIND_STRICT	Request strict binding from the OS. The function will fail if the binding can not be guaranteed / completely enforced.  This flag has slightly different meanings depending on which function it is used with.
HWLOC_MEMBIND_MIGRATE	Migrate existing allocated memory. If the memory cannot be migrated and the HWLOC_MEMBIND_STRICT flag is passed, an error will be returned.
HWLOC_MEMBIND_NOCPUBIND	Avoid any effect on CPU binding. On some operating systems, some underlying memory binding functions also bind the application to the corresponding CPU(s). Using this flag will cause hwloc to avoid using OS functions that could potentially affect CPU bindings. Note, however, that using NOCPUBIND may reduce hwloc's overall memory binding support. Specifically: some of hwloc's memory binding functions may fail with errno set to ENOSYS when used with NOCPUBIND.
HWLOC_MEMBIND_BYNODESET	Consider the bitmap argument as a nodeset. The bitmap argument is considered a nodeset if this flag is given, or a cpuset otherwise by default.  Memory binding by CPU set cannot work for CPU-less NUMA memory nodes. Binding by nodeset should therefore be preferred whenever possible.

22.10 Memory binding 103

### 22.10.2.2 hwloc\_membind\_policy\_t

enum hwloc\_membind\_policy\_t

Memory binding policy.

These constants can be used to choose the binding policy. Only one policy can be used at a time (i.e., the values cannot be OR'ed together).

Not all systems support all kinds of binding. hwloc\_topology\_get\_support() may be used to query about the actual memory binding policy support in the currently used operating system. See the "Detailed Description" section of Memory binding for a description of errors that can occur.

#### Enumerator

HWLOC_MEMBIND_DEFAULT	Reset the memory allocation policy to the system default. Depending on the operating system, this may correspond to HWLOC_MEMBIND_FIRSTTOUCH (Linux, FreeBSD), or HWLOC_MEMBIND_BIND (AIX, HP-UX, Solaris, Windows). This policy is never returned by get membind functions. The nodeset argument is ignored.
HWLOC_MEMBIND_FIRSTTOUCH	Allocate each memory page individually on the local NUMA node of the thread that touches it. The given nodeset should usually be

### 22.10.3 Function Documentation

### 22.10.3.1 hwloc\_alloc()

Allocate some memory.

This is equivalent to malloc(), except that it tries to allocate page-aligned memory from the OS.

Note

The allocated memory should be freed with <a href="https://hwloc\_free">hwloc\_free</a>().

### 22.10.3.2 hwloc\_alloc\_membind()

```
void* hwloc_alloc_membind (
          hwloc_topology_t topology,
          size_t len,
          hwloc_const_bitmap_t set,
          hwloc_membind_policy_t policy,
          int flags )
```

Allocate some memory on NUMA memory nodes specified by set.

Returns

NULL with errno set to ENOSYS if the action is not supported and HWLOC\_MEMBIND\_STRICT is given NULL with errno set to EXDEV if the binding cannot be enforced and HWLOC\_MEMBIND\_STRICT is given NULL with errno set to ENOMEM if the memory allocation failed even before trying to bind.

If HWLOC\_MEMBIND\_BYNODESET is specified, set is considered a nodeset. Otherwise it's a cpuset.

Note

The allocated memory should be freed with <a href="https://hww.needings.com/hwloc\_free">hwloc\_free</a>().

### 22.10.3.3 hwloc\_alloc\_membind\_policy()

```
static void* hwloc_alloc_membind_policy (
    hwloc_topology_t topology,
    size_t len,
    hwloc_const_bitmap_t set,
    hwloc_membind_policy_t policy,
    int flags ) [inline], [static]
```

Allocate some memory on NUMA memory nodes specified by set.

This is similar to hwloc\_alloc\_membind\_nodeset() except that it is allowed to change the current memory binding policy, thus providing more binding support, at the expense of changing the current state.

If HWLOC\_MEMBIND\_BYNODESET is specified, set is considered a nodeset. Otherwise it's a cpuset.

#### 22.10.3.4 hwloc\_free()

Free memory that was previously allocated by hwloc\_alloc() or hwloc\_alloc\_membind().

#### 22.10.3.5 hwloc get area membind()

Query the CPUs near the physical NUMA node(s) and binding policy of the memory identified by (addr, len).

22.10 Memory binding 105

This function has two output parameters: set and policy. The values returned in these parameters depend on both the flags passed in and the memory binding policies and nodesets of the pages in the address range.

If HWLOC\_MEMBIND\_STRICT is specified, the target pages are first checked to see if they all have the same memory binding policy and nodeset. If they do not, -1 is returned and errno is set to EXDEV. If they are identical across all pages, the set and policy are returned in set and policy, respectively.

If HWLOC\_MEMBIND\_STRICT is not specified, the union of all NUMA node(s) containing pages in the address range is calculated. If all pages in the target have the same policy, it is returned in policy. Otherwise, policy is set to HWLOC MEMBIND MIXED.

If HWLOC MEMBIND BYNODESET is specified, set is considered a nodeset. Otherwise it's a cpuset.

If any other flags are specified, -1 is returned and errno is set to EINVAL.

If len is 0, -1 is returned and errno is set to EINVAL.

#### 22.10.3.6 hwloc get area memlocation()

Get the NUMA nodes where memory identified by (addr, len) is physically allocated.

Fills set according to the NUMA nodes where the memory area pages are physically allocated. If no page is actually allocated yet, set may be empty.

If pages spread to multiple nodes, it is not specified whether they spread equitably, or whether most of them are on a single node, etc.

The operating system may move memory pages from one processor to another at any time according to their binding, so this function may return something that is already outdated.

If HWLOC\_MEMBIND\_BYNODESET is specified in flags, set is considered a nodeset. Otherwise it's a cpuset. If len is 0, set is emptied.

#### 22.10.3.7 hwloc get membind()

Query the default memory binding policy and physical locality of the current process or thread.

This function has two output parameters: set and policy. The values returned in these parameters depend on both the flags passed in and the current memory binding policies and nodesets in the queried target.

Passing the HWLOC\_MEMBIND\_PROCESS flag specifies that the query target is the current policies and nodesets for all the threads in the current process. Passing HWLOC\_MEMBIND\_THREAD specifies that the query target is the current policy and nodeset for only the thread invoking this function.

If neither of these flags are passed (which is the most portable method), the process is assumed to be single threaded. This allows hwloc to use either process-based OS functions or thread-based OS functions, depending on which are available.

HWLOC\_MEMBIND\_STRICT is only meaningful when HWLOC\_MEMBIND\_PROCESS is also specified. In this case, hwloc will check the default memory policies and nodesets for all threads in the process. If they are not identical, -1 is returned and errno is set to EXDEV. If they are identical, the values are returned in set and policy. Otherwise, if HWLOC\_MEMBIND\_PROCESS is specified (and HWLOC\_MEMBIND\_STRICT is not specified), the default set from each thread is logically OR'ed together. If all threads' default policies are the same, policy is set to that policy. If they are different, policy is set to HWLOC\_MEMBIND\_MIXED.

In the HWLOC\_MEMBIND\_THREAD case (or when neither HWLOC\_MEMBIND\_PROCESS or HWLOC\_MEMBIND\_THREAD is specified), there is only one set and policy; they are returned in set and policy, respectively.

If HWLOC\_MEMBIND\_BYNODESET is specified, set is considered a nodeset. Otherwise it's a cpuset.

If any other flags are specified, -1 is returned and errno is set to EINVAL.

### 22.10.3.8 hwloc\_get\_proc\_membind()

Query the default memory binding policy and physical locality of the specified process.

This function has two output parameters: set and policy. The values returned in these parameters depend on both the flags passed in and the current memory binding policies and nodesets in the queried target.

Passing the HWLOC\_MEMBIND\_PROCESS flag specifies that the query target is the current policies and nodesets for all the threads in the specified process. If HWLOC\_MEMBIND\_PROCESS is not specified (which is the most portable method), the process is assumed to be single threaded. This allows hwloc to use either process-based OS functions or thread-based OS functions, depending on which are available.

Note that it does not make sense to pass HWLOC MEMBIND THREAD to this function.

If HWLOC\_MEMBIND\_STRICT is specified, hwloc will check the default memory policies and nodesets for all threads in the specified process. If they are not identical, -1 is returned and errno is set to EXDEV. If they are identical, the values are returned in set and policy.

Otherwise, set is set to the logical OR of all threads' default set. If all threads' default policies are the same, policy is set to that policy. If they are different, policy is set to HWLOC\_MEMBIND\_MIXED.

If HWLOC\_MEMBIND\_BYNODESET is specified, set is considered a nodeset. Otherwise it's a cpuset.

If any other flags are specified, -1 is returned and errno is set to EINVAL.

Note

hwloc\_pid\_t is pid\_t on Unix platforms, and HANDLE on native Windows platforms.

#### 22.10.3.9 hwloc\_set\_area\_membind()

Bind the already-allocated memory identified by (addr, len) to the NUMA node(s) specified by set. If HWLOC\_MEMBIND\_BYNODESET is specified, set is considered a nodeset. Otherwise it's a cpuset.

Returns

0 if len is 0.

- -1 with errno set to ENOSYS if the action is not supported
- -1 with errno set to EXDEV if the binding cannot be enforced

### 22.10.3.10 hwloc set membind()

Set the default memory binding policy of the current process or thread to prefer the NUMA node(s) specified by set.

If neither HWLOC\_MEMBIND\_PROCESS nor HWLOC\_MEMBIND\_THREAD is specified, the current process is assumed to be single-threaded. This is the most portable form as it permits hwloc to use either process-based OS functions or thread-based OS functions, depending on which are available.

22.10 Memory binding 107

If HWLOC\_MEMBIND\_BYNODESET is specified, set is considered a nodeset. Otherwise it's a cpuset.

#### Returns

- -1 with errno set to ENOSYS if the action is not supported
- -1 with errno set to EXDEV if the binding cannot be enforced

# 22.10.3.11 hwloc\_set\_proc\_membind()

Set the default memory binding policy of the specified process to prefer the NUMA node(s) specified by set. If HWLOC\_MEMBIND\_BYNODESET is specified, set is considered a nodeset. Otherwise it's a cpuset.

#### Returns

- -1 with errno set to ENOSYS if the action is not supported
- -1 with errno set to EXDEV if the binding cannot be enforced

#### Note

hwloc\_pid\_t is pid\_t on Unix platforms, and HANDLE on native Windows platforms.

# 22.11 Changing the Source of Topology Discovery

#### **Enumerations**

enum hwloc\_topology\_components\_flag\_e { HWLOC\_TOPOLOGY\_COMPONENTS\_FLAG\_BLACKLIST }

#### **Functions**

- int hwloc\_topology\_set\_pid (hwloc\_topology\_t restrict topology, hwloc\_pid\_t pid)
- int hwloc topology set synthetic (hwloc topology t restrict topology, const char \*restrict description)
- int hwloc\_topology\_set\_xml (hwloc\_topology\_t restrict topology, const char \*restrict xmlpath)
- int hwloc\_topology\_set\_xmlbuffer (hwloc\_topology\_t restrict topology, const char \*restrict buffer, int size)
- int hwloc\_topology\_set\_components (hwloc\_topology\_t restrict topology, unsigned long flags, const char \*restrict name)

### 22.11.1 Detailed Description

If none of the functions below is called, the default is to detect all the objects of the machine that the caller is allowed to access.

This default behavior may also be modified through environment variables if the application did not modify it already. Setting HWLOC\_XMLFILE in the environment enforces the discovery from a XML file as if hwloc\_topology\_set\_xml() had been called. Setting HWLOC\_SYNTHETIC enforces a synthetic topology as if hwloc topology set synthetic() had been called.

Finally, HWLOC\_THISSYSTEM enforces the return value of hwloc\_topology\_is\_thissystem().

### 22.11.2 Enumeration Type Documentation

### 22.11.2.1 hwloc\_topology\_components\_flag\_e

```
enum hwloc_topology_components_flag_e
Flags to be passed to hwloc_topology_set_components()
```

### Enumerator

HWLOC_TOPOLOGY_COMPONENTS_FLAG_BLACKLIST	Blacklist the target component from being used.

#### 22.11.3 Function Documentation

### 22.11.3.1 hwloc\_topology\_set\_components()

```
int hwloc_topology_set_components (
          hwloc_topology_t restrict topology,
          unsigned long flags,
          const char *restrict name )
```

Prevent a discovery component from being used for a topology.

name is the name of the discovery component that should not be used when loading topology topology. The name is a string such as "cuda".

For components with multiple phases, it may also be suffixed with the name of a phase, for instance "linux:io". flags should be HWLOC TOPOLOGY\_COMPONENTS\_FLAG\_BLACKLIST.

This may be used to avoid expensive parts of the discovery process. For instance, CUDA-specific discovery may be expensive and unneeded while generic I/O discovery could still be useful.

#### 22.11.3.2 hwloc\_topology\_set\_pid()

Change which process the topology is viewed from.

On some systems, processes may have different views of the machine, for instance the set of allowed CPUs. By default, hwloc exposes the view from the current process. Calling <a href="hwloc\_topology\_set\_pid">hwloc\_topology\_set\_pid</a>() permits to make it expose the topology of the machine from the point of view of another process.

Note

hwloc\_pid\_t is pid\_t on Unix platforms, and HANDLE on native Windows platforms.

-1 is returned and errno is set to ENOSYS on platforms that do not support this feature.

#### 22.11.3.3 hwloc\_topology\_set\_synthetic()

Enable synthetic topology.

Gather topology information from the given description, a space-separated string of <type:number> describing the object type and arity at each level. All types may be omitted (space-separated string of numbers) so that hwloc chooses all types according to usual topologies. See also the Synthetic topologies.

Setting the environment variable HWLOC\_SYNTHETIC may also result in this behavior.

If description was properly parsed and describes a valid topology configuration, this function returns 0. Otherwise -1 is returned and errno is set to EINVAL.

Note that this function does not actually load topology information; it just tells hwloc where to load it from. You'll still need to invoke <a href="hwloc\_topology\_load">hwloc\_topology\_load</a>() to actually load the topology information.

Note

For convenience, this backend provides empty binding hooks which just return success.

On success, the synthetic component replaces the previously enabled component (if any), but the topology is not actually modified until hwloc\_topology\_load().

#### 22.11.3.4 hwloc\_topology\_set\_xml()

Enable XML-file based topology.

Gather topology information from the XML file given at xmlpath. Setting the environment variable HWLOC\_XM LFILE may also result in this behavior. This file may have been generated earlier with hwloc\_topology\_export\_xml() in hwloc/export.h, or Istopo file.xml.

Note that this function does not actually load topology information; it just tells hwloc where to load it from. You'll still need to invoke <a href="hwloc\_topology\_load">hwloc\_topology\_load</a>() to actually load the topology information.

### Returns

-1 with errno set to EINVAL on failure to read the XML file.

Note

See also hwloc\_topology\_set\_userdata\_import\_callback() for importing application-specific object userdata.

For convenience, this backend provides empty binding hooks which just return success. To have hwloc still actually call OS-specific hooks, the HWLOC\_TOPOLOGY\_FLAG\_IS\_THISSYSTEM has to be set to assert that the loaded file is really the underlying system.

On success, the XML component replaces the previously enabled component (if any), but the topology is not actually modified until hwloc topology load().

#### 22.11.3.5 hwloc\_topology\_set\_xmlbuffer()

```
int hwloc_topology_set_xmlbuffer (
          hwloc_topology_t restrict topology,
          const char *restrict buffer,
          int size )
```

Enable XML based topology using a memory buffer (instead of a file, as with hwloc\_topology\_set\_xml()).

Gather topology information from the XML memory buffer given at buffer and of length size. This buffer may have been filled earlier with hwloc\_topology\_export\_xmlbuffer() in hwloc/export.h.

Note that this function does not actually load topology information; it just tells hwloc where to load it from. You'll still need to invoke <a href="https://hwloc\_topology\_load">hwloc\_topology\_load</a>() to actually load the topology information.

#### Returns

-1 with errno set to EINVAL on failure to read the XML buffer.

#### Note

See also hwloc topology set userdata import callback() for importing application-specific object userdata.

For convenience, this backend provides empty binding hooks which just return success. To have hwloc still actually call OS-specific hooks, the HWLOC\_TOPOLOGY\_FLAG\_IS\_THISSYSTEM has to be set to assert that the loaded file is really the underlying system.

On success, the XML component replaces the previously enabled component (if any), but the topology is not actually modified until hwloc topology load().

# 22.12 Topology Detection Configuration and Query

#### **Data Structures**

- · struct hwloc\_topology\_discovery\_support
- · struct hwloc topology cpubind support
- struct hwloc\_topology\_membind\_support
- · struct hwloc topology misc support
- · struct hwloc\_topology\_support

### **Enumerations**

- enum hwloc\_topology\_flags\_e { HWLOC\_TOPOLOGY\_FLAG\_INCLUDE\_DISALLOWED, HWLOC\_TOPOLOGY\_FLAG\_IS\_TI
   HWLOC\_TOPOLOGY\_FLAG\_THISSYSTEM\_ALLOWED\_RESOURCES, HWLOC\_TOPOLOGY\_FLAG\_IMPORT\_SUPPORT
   = (1UL<<3) }</li>
- enum hwloc\_type\_filter\_e { HWLOC\_TYPE\_FILTER\_KEEP\_ALL, HWLOC\_TYPE\_FILTER\_KEEP\_NONE, HWLOC TYPE FILTER KEEP STRUCTURE, HWLOC TYPE FILTER KEEP IMPORTANT }

#### **Functions**

- int hwloc\_topology\_set\_flags (hwloc\_topology\_t topology, unsigned long flags)
- unsigned long hwloc\_topology\_get\_flags (hwloc\_topology\_t topology)
- int hwloc\_topology\_is\_thissystem (hwloc\_topology\_t restrict topology)
- const struct hwloc\_topology\_support \* hwloc\_topology\_get\_support (hwloc\_topology\_t restrict topology)
- int hwloc\_topology\_set\_type\_filter (hwloc\_topology\_t topology, hwloc\_obj\_type\_t type, enum hwloc\_type\_filter\_e filter)
- int hwloc\_topology\_get\_type\_filter (hwloc\_topology\_t topology, hwloc\_obj\_type\_t type, enum hwloc\_type\_filter\_e \*filter)
- int hwloc\_topology\_set\_all\_types\_filter (hwloc\_topology\_t topology, enum hwloc\_type\_filter\_e filter)
- int hwloc\_topology\_set\_cache\_types\_filter (hwloc\_topology\_t topology, enum hwloc\_type\_filter\_e filter)
- int hwloc\_topology\_set\_icache\_types\_filter (hwloc\_topology\_t topology, enum hwloc\_type\_filter\_e filter)
- int hwloc\_topology\_set\_io\_types\_filter (hwloc\_topology\_t topology, enum hwloc\_type\_filter\_e filter)
- void hwloc\_topology\_set\_userdata (hwloc\_topology\_t topology, const void \*userdata)
- void \* hwloc\_topology\_get\_userdata (hwloc\_topology\_t topology)

#### 22.12.1 Detailed Description

Several functions can optionally be called between <a href="https://hww.topology\_init(">hwloc\_topology\_load()</a>) to configure how the detection should be performed, e.g. to ignore some objects types, define a synthetic topology, etc.

### 22.12.2 Enumeration Type Documentation

### 22.12.2.1 hwloc\_topology\_flags\_e

enum hwloc\_topology\_flags\_e

Flags to be set onto a topology context before load.

Flags should be given to hwloc\_topology\_set\_flags(). They may also be returned by hwloc\_topology\_get\_flags().

#### Enumerator

# HWLOC\_TOPOLOGY\_FLAG\_INCLUDE\_DISALL ←

Detect the whole system, ignore reservations, include disallowed objects. Gather all resources, even if some were disabled by the administrator. For instance, ignore Linux Cgroup/Cpusets and gather all processors and memory nodes.

When this flag is not set, PUs and NUMA nodes that are disallowed are not added to the topology. Parent objects (package, core, cache, etc.) are added only if some of their children are allowed. All existing PUs and NUMA nodes in the topology are allowed. hwloc\_topology\_get\_allowed\_cpuset() and

hwloc\_topology\_get\_allowed\_nodeset() are equal to the root object cpuset and nodeset.

When this flag is set, the actual sets of allowed PUs and NUMA nodes are given by

hwloc\_topology\_get\_allowed\_cpuset() and hwloc\_topology\_get\_allowed\_nodeset(). They may be smaller than the root object cpuset and nodeset. If the current topology is exported to XML and reimported later, this flag should be set again in the reimported topology so that disallowed resources are reimported as well.

 ${\tt HWLOC\_TOPOLOGY\_FLAG\_IS\_THISSYSTEM}$ 

Assume that the selected backend provides the topology for the system on which we are running. This forces hwloc\_topology\_is\_thissystem() to return 1, i.e. makes hwloc assume that the selected backend provides the topology for the system on which we are running, even if it is not the OS-specific backend but the XML backend for instance. This means making the binding functions actually call the OS-specific system calls and really do binding, while the XML backend would otherwise provide empty hooks just returning success.

Setting the environment variable HWLOC\_THISSYSTEM may also result in the same behavior.

This can be used for efficiency reasons to first detect the topology once, save it to an XML file, and quickly reload it later through the XML backend, but still having binding functions actually do bind.

#### **Enumerator**

### HWLOC TOPOLOGY FLAG THISSYSTEM ALL Get the set of allowed resources from the local OWED RESOURCES operating system even if the topology was loaded from XML or synthetic description. If the topology was loaded from XML or from a synthetic string, restrict it by applying the current process restrictions such as Linux Cgroup/Cpuset. This is useful when the topology is not loaded directly from the local machine (e.g. for performance reason) and it comes with all resources, while the running process is restricted to only parts of the machine. This flag is ignored unless HWLOC TOPOLOGY FLAG IS THISSYSTEM is also set since the loaded topology must match the underlying machine where restrictions will be gathered from. Setting the environment variable HWLOC THISSYSTEM ALLOWED RESOURCES would result in the same behavior. HWLOC\_TOPOLOGY\_FLAG\_IMPORT\_SUPPORT Import support from the imported topology. When importing a XML topology from a remote machine, binding is disabled by default (see HWLOC TOPOLOGY FLAG IS THISSYSTEM). This disabling is also marked by putting zeroes in the corresponding supported feature bits reported by hwloc\_topology\_get\_support(). The flag HWLOC TOPOLOGY FLAG IMPORT SUPPORT actually imports support bits from the remote machine. It also sets the flag imported\_support in the struct hwloc\_topology\_misc\_support array. If the imported XML did not contain any support information (exporter hwloc is too old), this flag is not set. Note that these supported features are only relevant for the hwloc installation that actually exported the XML topology (it may vary with the operating system, or with how hwloc was compiled). Note that setting this flag however does not enable

# 22.12.2.2 hwloc\_type\_filter\_e

enum hwloc\_type\_filter\_e

Type filtering flags.

By default, most objects are kept (HWLOC\_TYPE\_FILTER\_KEEP\_ALL). Instruction caches, I/O and Misc objects are ignored by default (HWLOC\_TYPE\_FILTER\_KEEP\_NONE). Die and Group levels are ignored unless they bring structure (HWLOC\_TYPE\_FILTER\_KEEP\_STRUCTURE).

binding for the locally imported hwloc topology, it only reports what the remote hwloc and machine support.

Note that group objects are also ignored individually (without the entire level) when they do not bring structure.

### **Enumerator**

HWLOC_TYPE_FILTER_KEEP_ALL	Keep all objects of this type. Cannot be set for
	HWLOC_OBJ_GROUP (groups are designed only to add
	more structure to the topology).

#### Enumerator

HWLOC_TYPE_FILTER_KEEP_NONE	Ignore all objects of this type. The bottom-level type HWLOC_OBJ_PU, the HWLOC_OBJ_NUMANODE type, and the top-level type HWLOC_OBJ_MACHINE may not be ignored.
HWLOC_TYPE_FILTER_KEEP_STRUCTURE	Only ignore objects if their entire level does not bring any structure. Keep the entire level of objects if at least one of these objects adds structure to the topology. An object brings structure when it has multiple children and it is not the only child of its parent.  If all objects in the level are the only child of their parent, and if none of them has multiple children, the entire level is removed.  Cannot be set for I/O and Misc objects since the topology
HWLOC_TYPE_FILTER_KEEP_IMPORTANT	structure does not matter there.  Only keep likely-important objects of the given type. It is only useful for I/O object types. For HWLOC_OBJ_PCI_DEVICE and HWLOC_OBJ_OS_DEVICE, it means that only objects of major/common kinds are kept (storage, network, OpenFabrics, CUDA, OpenCL, RSMI, NVML, and displays). Also, only OS devices directly attached on PCI (e.g. no USB) are reported. For HWLOC_OBJ_BRIDGE, it means that bridges are kept only if they have children.  This flag equivalent to HWLOC_TYPE_FILTER_KEEP_ALL for Normal, Memory and Misc types since they are likely important.

### 22.12.3 Function Documentation

# 22.12.3.1 hwloc\_topology\_get\_flags()

```
unsigned long hwloc_topology_get_flags ( {\tt hwloc\_topology\_t}\ topology\ )
```

Get OR'ed flags of a topology.

Get the OR'ed set of hwloc\_topology\_flags\_e of a topology.

Returns

the flags previously set with hwloc\_topology\_set\_flags().

### 22.12.3.2 hwloc\_topology\_get\_support()

```
\label{location} \mbox{const struct $h$wloc_topology_support* $h$wloc_topology_get_support (} $$ h$wloc_topology_t restrict $topology$) $$
```

Retrieve the topology support.

Each flag indicates whether a feature is supported. If set to 0, the feature is not supported. If set to 1, the feature is supported, but the corresponding call may still fail in some corner cases.

These features are also listed by hwloc-info --support

The reported features are what the current topology supports on the current machine. If the topology was exported to XML from another machine and later imported here, support still describes what is supported for this imported topology after import. By default, binding will be reported as unsupported in this case (see HWLOC\_TOPOLOGY\_FLAG\_IS\_THISSYSTEM).

Topology flag HWLOC\_TOPOLOGY\_FLAG\_IMPORT\_SUPPORT may be used to report the supported features of the original remote machine instead. If it was successfully imported, imported\_support will be set in the struct hwloc\_topology\_misc\_support array.

#### 22.12.3.3 hwloc topology get type filter()

```
int hwloc_topology_get_type_filter (
          hwloc_topology_t topology,
          hwloc_obj_type_t type,
          enum hwloc_type_filter_e * filter )
```

Get the current filtering for the given object type.

#### 22.12.3.4 hwloc topology get userdata()

Retrieve the topology-specific userdata pointer.

Retrieve the application-given private data pointer that was previously set with hwloc\_topology\_set\_userdata().

#### 22.12.3.5 hwloc topology is thissystem()

```
int hwloc_topology_is_thissystem ( {\tt hwloc\_topology\_t\ restrict\ } topology\ )
```

Does the topology context come from this system?

#### Returns

1 if this topology context was built using the system running this program.

0 instead (for instance if using another file-system root, a XML topology file, or a synthetic topology).

#### 22.12.3.6 hwloc\_topology\_set\_all\_types\_filter()

Set the filtering for all object types.

If some types do not support this filtering, they are silently ignored.

#### 22.12.3.7 hwloc\_topology\_set\_cache\_types\_filter()

Set the filtering for all CPU cache object types.

Memory-side caches are not involved since they are not CPU caches.

#### 22.12.3.8 hwloc topology set flags()

Set OR'ed flags to non-yet-loaded topology.

Set a OR'ed set of hwloc topology flags e onto a topology that was not yet loaded.

If this function is called multiple times, the last invokation will erase and replace the set of flags that was previously set.

The flags set in a topology may be retrieved with <a href="https://hww.topology\_get\_flags">https://hww.topology\_get\_flags</a>()

#### 22.12.3.9 hwloc\_topology\_set\_icache\_types\_filter()

Set the filtering for all CPU instruction cache object types.

Memory-side caches are not involved since they are not CPU caches.

### 22.12.3.10 hwloc\_topology\_set\_io\_types\_filter()

```
int hwloc_topology_set_io_types_filter (
          hwloc_topology_t topology,
          enum hwloc_type_filter_e filter )
```

Set the filtering for all I/O object types.

#### 22.12.3.11 hwloc\_topology\_set\_type\_filter()

```
int hwloc_topology_set_type_filter (
          hwloc_topology_t topology,
          hwloc_obj_type_t type,
          enum hwloc_type_filter_e filter )
```

Set the filtering for the given object type.

### 22.12.3.12 hwloc\_topology\_set\_userdata()

Set the topology-specific userdata pointer.

Each topology may store one application-given private data pointer. It is initialized to  $\mathtt{NULL}$ . hwloc will never modify it.

Use it as you wish, after <a href="hwloc\_topology\_init(">hwloc\_topolog\_destroy(</a>).

This pointer is not exported to XML.

# 22.13 Modifying a loaded Topology

#### **Enumerations**

- enum hwloc\_restrict\_flags\_e {
   HWLOC\_RESTRICT\_FLAG\_REMOVE\_CPULESS, HWLOC\_RESTRICT\_FLAG\_BYNODESET = (1UL <<3),
   HWLOC\_RESTRICT\_FLAG\_REMOVE\_MEMLESS, HWLOC\_RESTRICT\_FLAG\_ADAPT\_MISC,
   HWLOC\_RESTRICT\_FLAG\_ADAPT\_IO }</li>
- enum hwloc\_allow\_flags\_e { HWLOC\_ALLOW\_FLAG\_ALL, HWLOC\_ALLOW\_FLAG\_LOCAL\_RESTRICTIONS, HWLOC\_ALLOW\_FLAG\_CUSTOM }

#### **Functions**

- int hwloc\_topology\_restrict (hwloc\_topology\_t restrict topology, hwloc\_const\_bitmap\_t set, unsigned long flags)
- int hwloc\_topology\_allow (hwloc\_topology\_t restrict topology, hwloc\_const\_cpuset\_t cpuset, hwloc\_const\_nodeset\_t nodeset, unsigned long flags)
- hwloc\_obj\_t hwloc\_topology\_insert\_misc\_object (hwloc\_topology\_t topology, hwloc\_obj\_t parent, const char \*name)
- hwloc\_obj\_t hwloc\_topology\_alloc\_group\_object (hwloc\_topology\_t topology)
- hwloc\_obj\_t hwloc\_topology\_insert\_group\_object (hwloc\_topology\_t topology, hwloc\_obj\_t group)
- int hwloc obj add other obj sets (hwloc obj t dst, hwloc obj t src)
- int hwloc\_topology\_refresh (hwloc\_topology\_t topology)

# 22.13.1 Detailed Description

# 22.13.2 Enumeration Type Documentation

#### 22.13.2.1 hwloc\_allow\_flags\_e

enum hwloc\_allow\_flags\_e

Flags to be given to hwloc\_topology\_allow().

#### **Enumerator**

HWLOC_ALLOW_FLAG_ALL	Mark all objects as allowed in the topology. cpuset and nodeset given to hwloc_topology_allow() must be NULL.
HWLOC_ALLOW_FLAG_LOCAL_RESTRICTIONS	Only allow objects that are available to the current process. The topology must have HWLOC_TOPOLOGY_FLAG_IS_THISSYSTEM so that the set of available resources can actually be retrieved from the operating system. cpuset and nodeset given to hwloc_topology_allow() must be NULL.
HWLOC_ALLOW_FLAG_CUSTOM	Allow a custom set of objects, given to hwloc_topology_allow() as cpuset and/or nodeset parameters.

### 22.13.2.2 hwloc\_restrict\_flags\_e

enum hwloc\_restrict\_flags\_e

Flags to be given to hwloc\_topology\_restrict().

#### Enumerator

HWLOC_RESTRICT_FLAG_REMOVE_CPULESS	Remove all objects that became CPU-less. By default, only objects that contain no PU and no memory are removed. This flag may not be used with HWLOC_RESTRICT_FLAG_BYNODESET.
HWLOC_RESTRICT_FLAG_BYNODESET	Restrict by nodeset instead of CPU set. Only keep objects whose nodeset is included or partially included in the given set. This flag may not be used with HWLOC_RESTRICT_FLAG_REMOVE_CPULESS.
HWLOC_RESTRICT_FLAG_REMOVE_MEMLESS	Remove all objects that became Memory-less. By default, only objects that contain no PU and no memory are removed. This flag may only be used with HWLOC_RESTRICT_FLAG_BYNODESET.
HWLOC_RESTRICT_FLAG_ADAPT_MISC	Move Misc objects to ancestors if their parents are removed during restriction. If this flag is not set, Misc objects are removed when their parents are removed.
HWLOC_RESTRICT_FLAG_ADAPT_IO	Move I/O objects to ancestors if their parents are removed during restriction. If this flag is not set, I/O devices and bridges are removed when their parents are removed.

#### 22.13.3 Function Documentation

### 22.13.3.1 hwloc\_obj\_add\_other\_obj\_sets()

```
int hwloc_obj_add_other_obj_sets (
          hwloc_obj_t dst,
          hwloc_obj_t src )
```

Setup object cpusets/nodesets by OR'ing another object's sets.

For each defined cpuset or nodeset in src, allocate the corresponding set in dst and add src to it by OR'ing sets.

This function is convenient between hwloc\_topology\_alloc\_group\_object() and hwloc\_topology\_insert\_group\_object(). It builds the sets of the new Group that will be inserted as a new intermediate parent of several objects.

### 22.13.3.2 hwloc\_topology\_alloc\_group\_object()

Allocate a Group object to insert later with hwloc\_topology\_insert\_group\_object().

This function returns a new Group object. The caller should (at least) initialize its sets before inserting the object. See hwloc topology insert group object().

The subtype object attribute may be set to display something else than "Group" as the type name for this object in Istopo. Custom name/value info pairs may be added with hwloc\_obj\_add\_info() after insertion.

The kind group attribute should be 0. The subkind group attribute may be set to identify multiple Groups of the same level.

It is recommended not to set any other object attribute before insertion, since the Group may get discarded during insertion.

The object will be destroyed if passed to hwloc\_topology\_insert\_group\_object() without any set defined.

#### 22.13.3.3 hwloc\_topology\_allow()

```
hwloc_const_cpuset_t cpuset,
hwloc_const_nodeset_t nodeset,
unsigned long flags )
```

Change the sets of allowed PUs and NUMA nodes in the topology.

This function only works if the HWLOC\_TOPOLOGY\_FLAG\_INCLUDE\_DISALLOWED was set on the topology. It does not modify any object, it only changes the sets returned by hwloc\_topology\_get\_allowed\_cpuset() and hwloc topology get allowed nodeset().

It is notably useful when importing a topology from another process running in a different Linux Cgroup. flags must be set to one flag among hwloc allow flags e.

Note

Removing objects from a topology should rather be performed with hwloc\_topology\_restrict().

## 22.13.3.4 hwloc\_topology\_insert\_group\_object()

Add more structure to the topology by adding an intermediate Group.

The caller should first allocate a new Group object with <a href="https://hwloc\_topology\_alloc\_group\_object">hwloc\_topology\_alloc\_group\_object</a>(). Then it must setup at least one of its CPU or node sets to specify the final location of the Group in the topology. Then the object can be passed to this function for actual insertion in the topology.

The group dont\_merge attribute may be set to prevent the core from ever merging this object with another object hierarchically-identical.

Either the cpuset or nodeset field (or both, if compatible) must be set to a non-empty bitmap. The complete\_cpuset or complete\_nodeset may be set instead if inserting with respect to the complete topology (including disallowed, offline or unknown objects).

It grouping several objects, hwloc\_obj\_add\_other\_obj\_sets() is an easy way to build the Group sets iteratively.

These sets cannot be larger than the current topology, or they would get restricted silently.

The core will setup the other sets after actual insertion.

## Returns

The inserted object if it was properly inserted.

An existing object if the Group was discarded because the topology already contained an object at the same location (the Group did not add any locality information). Any name/info key pair set before inserting is appended to the existing object.

NULL if the insertion failed because of conflicting sets in topology tree.

NULL if Group objects are filtered-out of the topology (HWLOC\_TYPE\_FILTER\_KEEP\_NONE).

 ${ t NULL}$  if the object was discarded because no set was initialized in the Group before insert, or all of them were empty.

## 22.13.3.5 hwloc\_topology\_insert\_misc\_object()

Add a MISC object as a leaf of the topology.

A new MISC object will be created and inserted into the topology at the position given by parent. It is appended to the list of existing Misc children, without ever adding any intermediate hierarchy level. This is useful for annotating the topology without actually changing the hierarchy.

name is supposed to be unique across all Misc objects in the topology. It will be duplicated to setup the new object attributes.

The new leaf object will not have any cpuset.

#### Returns

the newly-created object

NULL on error.

NULL if Misc objects are filtered-out of the topology (HWLOC\_TYPE\_FILTER\_KEEP\_NONE).

#### Note

If name contains some non-printable characters, they will be dropped when exporting to XML, see hwloc topology export xml() in hwloc/export.h.

#### 22.13.3.6 hwloc\_topology\_refresh()

Refresh internal structures after topology modification.

Modifying the topology (by restricting, adding objects, modifying structures such as distances or memory attributes, etc.) may cause some internal caches to become invalid. These caches are automatically refreshed when accessed but this refreshing is not thread-safe.

This function is not thread-safe either, but it is a good way to end a non-thread-safe phase of topology modification. Once this refresh is done, multiple threads may concurrently consult the topology, objects, distances, attributes, etc. See also Thread Safety

## 22.13.3.7 hwloc\_topology\_restrict()

Restrict the topology to the given CPU set or nodeset.

Topology topology is modified so as to remove all objects that are not included (or partially included) in the CPU set set. All objects CPU and node sets are restricted accordingly.

If HWLOC\_RESTRICT\_FLAG\_BYNODESET is passed in flags, set is considered a nodeset instead of a CPU set

flags is a OR'ed set of hwloc\_restrict\_flags\_e.

### Note

This call may not be reverted by restricting back to a larger set. Once dropped during restriction, objects may not be brought back, except by loading another topology with <a href="https://www.noto.org/load">https://www.noto.org/load</a>().

### Returns

0 on success.

- -1 with errno set to EINVAL if the input set is invalid. The topology is not modified in this case.
- -1 with errno set to ENOMEM on failure to allocate internal data. The topology is reinitialized in this case. It should be either destroyed with hwloc topology destroy() or configured and loaded again.

# 22.14 Finding Objects inside a CPU set

## **Functions**

- static hwloc\_obj\_t hwloc\_get\_first\_largest\_obj\_inside\_cpuset (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t set)
- int hwloc\_get\_largest\_objs\_inside\_cpuset (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t set, hwloc obj t \*restrict objs, int max)
- static hwloc\_obj\_t hwloc\_get\_next\_obj\_inside\_cpuset\_by\_depth (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t set, int depth, hwloc\_obj\_t prev)
- static hwloc\_obj\_t hwloc\_get\_next\_obj\_inside\_cpuset\_by\_type (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t set, hwloc obj\_type\_t type, hwloc obj\_t prev)
- static hwloc\_obj\_t hwloc\_get\_obj\_inside\_cpuset\_by\_depth (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t set, int depth, unsigned idx)
- static hwloc\_obj\_t hwloc\_get\_obj\_inside\_cpuset\_by\_type (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t set, hwloc\_obj\_type\_t type, unsigned idx)
- static unsigned hwloc\_get\_nbobjs\_inside\_cpuset\_by\_depth (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t set, int depth)
- static int hwloc\_get\_nbobjs\_inside\_cpuset\_by\_type (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t set, hwloc\_obj\_type\_t type)
- static int hwloc\_get\_obj\_index\_inside\_cpuset (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t set, hwloc obj t obj)

## 22.14.1 Detailed Description

### 22.14.2 Function Documentation

#### 22.14.2.1 hwloc get first largest obj inside cpuset()

Get the first largest object included in the given cpuset set.

### Returns

the first object that is included in set and whose parent is not.

This is convenient for iterating over all largest objects within a CPU set by doing a loop getting the first largest object and clearing its CPU set from the remaining CPU set.

#### 22.14.2.2 hwloc get largest objs inside cpuset()

Get the set of largest objects covering exactly a given cpuset set.

#### Returns

the number of objects returned in objs.

#### 22.14.2.3 hwloc\_get\_nbobjs\_inside\_cpuset\_by\_depth()

```
static unsigned hwloc_get_nbobjs_inside_cpuset_by_depth (
    hwloc_topology_t topology,
    hwloc_const_cpuset_t set,
    int depth ) [inline], [static]
```

Return the number of objects at depth depth included in CPU set set.

Note

Objects with empty CPU sets are ignored (otherwise they would be considered included in any given set).

This function cannot work if objects at the given depth do not have CPU sets (I/O or Misc objects).

## 22.14.2.4 hwloc\_get\_nbobjs\_inside\_cpuset\_by\_type()

Return the number of objects of type type included in CPU set set.

If no object for that type exists inside CPU set set, 0 is returned. If there are several levels with objects of that type inside CPU set set, -1 is returned.

Note

Objects with empty CPU sets are ignored (otherwise they would be considered included in any given set).

This function cannot work if objects of the given type do not have CPU sets (I/O objects).

#### 22.14.2.5 hwloc get next obj inside cpuset by depth()

Return the next object at depth depth included in CPU set set.

If prev is NULL, return the first object at depth depth included in set. The next invokation should pass the previous return value in prev so as to obtain the next object in set.

Note

Objects with empty CPU sets are ignored (otherwise they would be considered included in any given set).

This function cannot work if objects at the given depth do not have CPU sets (I/O or Misc objects).

#### 22.14.2.6 hwloc get next obj inside cpuset by type()

Return the next object of type type included in CPU set set.

If there are multiple or no depth for given type, return  $\mathtt{NULL}$  and let the caller fallback to  $\mathsf{hwloc\_get\_next\_obj\_inside\_cpuset\_by\_depth()}$ Note

Objects with empty CPU sets are ignored (otherwise they would be considered included in any given set).

This function cannot work if objects of the given type do not have CPU sets (I/O or Misc objects).

## 22.14.2.7 hwloc\_get\_obj\_index\_inside\_cpuset()

Return the logical index among the objects included in CPU set set.

Consult all objects in the same level as obj and inside CPU set set in the logical order, and return the index of obj within them. If set covers the entire topology, this is the logical index of obj. Otherwise, this is similar to a logical index within the part of the topology defined by CPU set set.

Note

Objects with empty CPU sets are ignored (otherwise they would be considered included in any given set).

This function cannot work if obj does not have CPU sets (I/O objects).

#### 22.14.2.8 hwloc get obj inside cpuset by depth()

Return the (logically) idx -th object at depth depth included in CPU set set.

Note

Objects with empty CPU sets are ignored (otherwise they would be considered included in any given set).

This function cannot work if objects at the given depth do not have CPU sets (I/O or Misc objects).

# 22.14.2.9 hwloc\_get\_obj\_inside\_cpuset\_by\_type()

Return the idx -th object of type type included in CPU set set.

If there are multiple or no depth for given type, return NULL and let the caller fallback to hwloc\_get\_obj\_inside\_cpuset\_by\_depth().

Note

Objects with empty CPU sets are ignored (otherwise they would be considered included in any given set).

This function cannot work if objects of the given type do not have CPU sets (I/O or Misc objects).

# 22.15 Finding Objects covering at least CPU set

### **Functions**

- static hwloc\_obj\_t hwloc\_get\_child\_covering\_cpuset (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t set, hwloc\_obj\_t parent)
- static hwloc\_obj\_t hwloc\_get\_obj\_covering\_cpuset (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t set)
- static hwloc\_obj\_t hwloc\_get\_next\_obj\_covering\_cpuset\_by\_depth (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t set, int depth, hwloc\_obj\_t prev)
- static hwloc\_obj\_t hwloc\_get\_next\_obj\_covering\_cpuset\_by\_type (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t set, hwloc obj type t type, hwloc obj t prev)

# 22.15.1 Detailed Description

## 22.15.2 Function Documentation

### 22.15.2.1 hwloc get child covering cpuset()

Get the child covering at least CPU set set.

Returns

NULL if no child matches or if set is empty.

Note

This function cannot work if parent does not have a CPU set (I/O or Misc objects).

## 22.15.2.2 hwloc\_get\_next\_obj\_covering\_cpuset\_by\_depth()

Iterate through same-depth objects covering at least CPU set set.

If object prev is NULL, return the first object at depth depth covering at least part of CPU set set. The next invokation should pass the previous return value in prev so as to obtain the next object covering at least another part of set.

Note

This function cannot work if objects at the given depth do not have CPU sets (I/O or Misc objects).

## 22.15.2.3 hwloc\_get\_next\_obj\_covering\_cpuset\_by\_type()

Iterate through same-type objects covering at least CPU set set.

If object prev is NULL, return the first object of type type covering at least part of CPU set set. The next invokation should pass the previous return value in prev so as to obtain the next object of type type covering at least another part of set.

If there are no or multiple depths for type type, NULL is returned. The caller may fallback to hwloc\_get\_next\_obj\_covering\_cpuset\_by for each depth.

Note

This function cannot work if objects of the given type do not have CPU sets (I/O or Misc objects).

# 22.15.2.4 hwloc\_get\_obj\_covering\_cpuset()

Get the lowest object covering at least CPU set set.

### Returns

NULL if no object matches or if set is empty.

# 22.16 Looking at Ancestor and Child Objects

### **Functions**

- static hwloc\_obj\_t hwloc\_get\_ancestor\_obj\_by\_depth (hwloc\_topology\_t topology, int depth, hwloc\_obj\_t obj)
- static hwloc\_obj\_t hwloc\_get\_ancestor\_obj\_by\_type (hwloc\_topology\_t topology, hwloc\_obj\_type\_t type, hwloc\_obj\_t obj)
- static hwloc\_obj\_t hwloc\_get\_common\_ancestor\_obj (hwloc\_topology\_t topology, hwloc\_obj\_t obj1, hwloc obj t obj2)
- static int hwloc\_obj\_is\_in\_subtree (hwloc\_topology\_t topology, hwloc\_obj\_t obj, hwloc\_obj\_t subtree\_root)
- static hwloc obj t hwloc get next child (hwloc topology t topology, hwloc obj t parent, hwloc obj t prev)

# 22.16.1 Detailed Description

Be sure to see the figure in Terms and Definitions that shows a complete topology tree, including depths, child/sibling/cousin relationships, and an example of an asymmetric topology where one package has fewer caches than its peers.

### 22.16.2 Function Documentation

#### 22.16.2.1 hwloc\_get\_ancestor\_obj\_by\_depth()

Returns the ancestor object of obj at depth depth.

Note

depth should not be the depth of PU or NUMA objects since they are ancestors of no objects (except Misc or I/O). This function rather expects an intermediate level depth, such as the depth of Packages, Cores, or Caches.

#### 22.16.2.2 hwloc\_get\_ancestor\_obj\_by\_type()

Returns the ancestor object of obj with type type.

Note

type should not be HWLOC\_OBJ\_PU or HWLOC\_OBJ\_NUMANODE since these objects are ancestors of no objects (except Misc or I/O). This function rather expects an intermediate object type, such as HWLOC\_OBJ\_PACKAGE, HWLOC\_OBJ\_CORE, etc.

## 22.16.2.3 hwloc\_get\_common\_ancestor\_obj()

Returns the common parent object to objects obj1 and obj2.

## 22.16.2.4 hwloc\_get\_next\_child()

Return the next child.

Return the next child among the normal children list, then among the memory children list, then among the I/O children list, then among the Misc children list.

If prev is NULL, return the first child.

Return NULL when there is no next child.

## 22.16.2.5 hwloc\_obj\_is\_in\_subtree()

Returns true if obj is inside the subtree beginning with ancestor object subtree\_root.

Note

This function cannot work if obj and subtree\_root objects do not have CPU sets (I/O or Misc objects).

# 22.17 Kinds of object Type

### **Functions**

- int hwloc\_obj\_type\_is\_normal (hwloc\_obj\_type\_t type)
- int hwloc\_obj\_type\_is\_io (hwloc\_obj\_type\_t type)
- int hwloc\_obj\_type\_is\_memory (hwloc\_obj\_type\_t type)
- int hwloc\_obj\_type\_is\_cache (hwloc\_obj\_type\_t type)
- int hwloc\_obj\_type\_is\_dcache (hwloc\_obj\_type\_t type)
- int hwloc\_obj\_type\_is\_icache (hwloc\_obj\_type\_t type)

# 22.17.1 Detailed Description

Each object type is either Normal (i.e. hwloc\_obj\_type\_is\_normal() returns 1), or Memory (i.e. hwloc\_obj\_type\_is\_memory() returns 1) or I/O (i.e. hwloc\_obj\_type\_is\_io() returns 1) or Misc (i.e. equal to HWLOC\_OBJ\_MISC). It cannot be of more than one of these kinds.

## 22.17.2 Function Documentation

# 22.17.2.1 hwloc\_obj\_type\_is\_cache()

Check whether an object type is a CPU Cache (Data, Unified or Instruction).

Memory-side caches are not CPU caches.

#### Returns

1 if an object of type type is a Cache, 0 otherwise.

### 22.17.2.2 hwloc\_obj\_type\_is\_dcache()

Check whether an object type is a CPU Data or Unified Cache.

Memory-side caches are not CPU caches.

#### Returns

1 if an object of type type is a CPU Data or Unified Cache, 0 otherwise.

# 22.17.2.3 hwloc\_obj\_type\_is\_icache()

Check whether an object type is a CPU Instruction Cache,.

Memory-side caches are not CPU caches.

# Returns

1 if an object of type type is a CPU Instruction Cache, 0 otherwise.

## 22.17.2.4 hwloc\_obj\_type\_is\_io()

Check whether an object type is I/O.

I/O objects are objects attached to their parents in the I/O children list. This current includes Bridges, PCI and OS devices.

#### Returns

1 if an object of type type is a I/O object, 0 otherwise.

# 22.17.2.5 hwloc\_obj\_type\_is\_memory()

Check whether an object type is Memory.

Memory objects are objects attached to their parents in the Memory children list. This current includes NUMA nodes and Memory-side caches.

#### Returns

1 if an object of type type is a Memory object, 0 otherwise.

### 22.17.2.6 hwloc\_obj\_type\_is\_normal()

Check whether an object type is Normal.

Normal objects are objects of the main CPU hierarchy (Machine, Package, Core, PU, CPU caches, etc.), but they are not NUMA nodes, I/O devices or Misc objects.

They are attached to parent as Normal children, not as Memory, I/O or Misc children.

## Returns

1 if an object of type type is a Normal object, 0 otherwise.

# 22.18 Looking at Cache Objects

### **Functions**

- static int hwloc\_get\_cache\_type\_depth (hwloc\_topology\_t topology, unsigned cachelevel, hwloc\_obj\_cache\_type\_t cachetype)
- static hwloc\_obj\_t hwloc\_get\_cache\_covering\_cpuset (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t set)
- · static hwloc obj t hwloc get shared cache covering obj (hwloc topology, t topology, hwloc obj t obj)

# 22.18.1 Detailed Description

### 22.18.2 Function Documentation

## 22.18.2.1 hwloc\_get\_cache\_covering\_cpuset()

Get the first data (or unified) cache covering a cpuset set.

Returns

NULL if no cache matches.

# 22.18.2.2 hwloc\_get\_cache\_type\_depth()

Find the depth of cache objects matching cache level and type.

Return the depth of the topology level that contains cache objects whose attributes match cachelevel and cachetype.

This function is identical to calling hwloc\_get\_type\_depth() with the corresponding type such as HWLOC\_OBJ\_L1ICACHE, except that it may also return a Unified cache when looking for an instruction cache.

If no cache level matches, HWLOC\_TYPE\_DEPTH\_UNKNOWN is returned.

If cachetype is HWLOC\_OBJ\_CACHE\_UNIFIED, the depth of the unique matching unified cache level is returned.

If cachetype is HWLOC\_OBJ\_CACHE\_DATA or HWLOC\_OBJ\_CACHE\_INSTRUCTION, either a matching cache, or a unified cache is returned.

If cachetype is -1, it is ignored and multiple levels may match. The function returns either the depth of a uniquely matching level or HWLOC\_TYPE\_DEPTH\_MULTIPLE.

#### 22.18.2.3 hwloc\_get\_shared\_cache\_covering\_obj()

Get the first data (or unified) cache shared between an object and somebody else.

Returns

NULL if no cache matches or if an invalid object is given.

# 22.19 Finding objects, miscellaneous helpers

### **Functions**

- int hwloc\_bitmap\_singlify\_per\_core (hwloc\_topology\_t topology, hwloc\_bitmap\_t cpuset, unsigned which)
- static hwloc\_obj\_t hwloc\_get\_pu\_obj\_by\_os\_index (hwloc\_topology\_t topology, unsigned os\_index)
- static hwloc\_obj\_t hwloc\_get\_numanode\_obj\_by\_os\_index (hwloc\_topology\_t topology, unsigned os\_index)
- unsigned hwloc\_get\_closest\_objs (hwloc\_topology\_t topology, hwloc\_obj\_t src, hwloc\_obj\_t \*restrict objs, unsigned max)
- static hwloc\_obj\_t hwloc\_get\_obj\_below\_by\_type (hwloc\_topology\_t topology, hwloc\_obj\_type\_t type1, unsigned idx1, hwloc\_obj\_type\_t type2, unsigned idx2)
- static hwloc\_obj\_t hwloc\_get\_obj\_below\_array\_by\_type (hwloc\_topology\_t topology, int nr, hwloc\_obj\_type\_t \*typev, unsigned \*idxv)

## 22.19.1 Detailed Description

Be sure to see the figure in Terms and Definitions that shows a complete topology tree, including depths, child/sibling/cousin relationships, and an example of an asymmetric topology where one package has fewer caches than its peers.

### 22.19.2 Function Documentation

## 22.19.2.1 hwloc\_bitmap\_singlify\_per\_core()

Remove simultaneous multithreading PUs from a CPU set.

For each core in topology, if cpuset contains some PUs of that core, modify cpuset to only keep a single PU for that core.

which specifies which PU will be kept. PU are considered in physical index order. If 0, for each core, the function keeps the first PU that was originally set in cpuset.

If which is larger than the number of PUs in a core there were originally set in cpuset, no PU is kept for that core.

Note

PUs that are not below a Core object are ignored (for instance if the topology does not contain any Core object). None of them is removed from cpuset.

## 22.19.2.2 hwloc\_get\_closest\_objs()

```
unsigned hwloc_get_closest_objs (
    hwloc_topology_t topology,
    hwloc_obj_t src,
    hwloc_obj_t *restrict objs,
    unsigned max )
```

Do a depth-first traversal of the topology to find and sort.

all objects that are at the same depth than src. Report in objs up to max physically closest ones to src.

#### Returns

```
the number of objects returned in objs.
```

0 if src is an I/O object.

Note

This function requires the src object to have a CPU set.

### 22.19.2.3 hwloc\_get\_numanode\_obj\_by\_os\_index()

Returns the object of type HWLOC OBJ NUMANODE with os\_index.

This function is useful for converting a nodeset into the NUMA node objects it contains. When retrieving the current binding (e.g. with <a href="https://hww.nume.com/hwloc\_get\_membind">hwloc\_get\_membind</a>() with <a href="https://hwloc\_get\_membind">hwloc\_get\_membind</a>() with <a href="https://hwloc\_get\_membind</a>(), and find the corresponding <a href="https://hwloc\_get\_membind">hwloc\_get\_membind</a>() with <a href="https://hwloc\_get\_membind">hwloc\_get\_membind</a>(), and find the corresponding <a href="https://hwloc\_get\_membind">hwloc\_get\_membind</a>().

## 22.19.2.4 hwloc\_get\_obj\_below\_array\_by\_type()

Find an object below a chain of objects specified by types and indexes.

This is a generalized version of <a href="https://hww.by\_type">hwloc\_get\_obj\_below\_by\_type</a>().

Arrays typev and idxv must contain nr types and indexes.

Start from the top system object and walk the arrays typev and idxv. For each type and logical index couple in the arrays, look under the previously found object to find the index-th object of the given type. Indexes are specified within the parent, not withing the entire system.

For instance, if nr is 3, typev contains NODE, PACKAGE and CORE, and idxv contains 0, 1 and 2, return the third core object below the second package below the first NUMA node.

Note

This function requires all these objects and the root object to have a CPU set.

#### 22.19.2.5 hwloc get obj below by type()

Find an object below another object, both specified by types and indexes.

Start from the top system object and find object of type type1 and logical index idx1. Then look below this object and find another object of type type2 and logical index idx2. Indexes are specified within the parent, not withing the entire system.

For instance, if type1 is PACKAGE, idx1 is 2, type2 is CORE and idx2 is 3, return the fourth core object below the third package.

Note

This function requires these objects to have a CPU set.

## 22.19.2.6 hwloc\_get\_pu\_obj\_by\_os\_index()

Returns the object of type HWLOC\_OBJ\_PU with os\_index.

This function is useful for converting a CPU set into the PU objects it contains. When retrieving the current binding (e.g. with hwloc\_get\_cpubind()), one may iterate over the bits of the resulting CPU set with hwloc\_bitmap\_foreach\_begin(), and find the corresponding PUs with this function.

# 22.20 Distributing items over a topology

#### **Enumerations**

enum hwloc\_distrib\_flags\_e { HWLOC\_DISTRIB\_FLAG\_REVERSE }

### **Functions**

static int hwloc\_distrib (hwloc\_topology\_t topology, hwloc\_obj\_t \*roots, unsigned n\_roots, hwloc\_cpuset\_t \*set, unsigned n, int until, unsigned long flags)

# 22.20.1 Detailed Description

# 22.20.2 Enumeration Type Documentation

### 22.20.2.1 hwloc\_distrib\_flags\_e

```
enum hwloc_distrib_flags_e
Flags to be given to hwloc_distrib().
```

#### Enumerator

HWLOC\_DISTRIB\_FLAG\_REVERSE | Distrib in reverse order, starting from the last objects.

#### 22.20.3 Function Documentation

## 22.20.3.1 hwloc distrib()

```
static int hwloc_distrib (
    hwloc_topology_t topology,
    hwloc_obj_t * roots,
    unsigned n_roots,
    hwloc_cpuset_t * set,
    unsigned n,
    int until,
    unsigned long flags ) [inline], [static]
```

Distribute n items over the topology under roots.

Array set will be filled with n cpusets recursively distributed linearly over the topology under objects roots, down to depth until (which can be INT\_MAX to distribute down to the finest level).

 $n\_roots$  is usually 1 and roots only contains the topology root object so as to distribute over the entire topology. This is typically useful when an application wants to distribute n threads over a machine, giving each of them as much private cache as possible and keeping them locally in number order.

The caller may typically want to also call <a href="https://hwloc\_bitmap\_singlify">hwloc\_bitmap\_singlify</a>() before binding a thread so that it does not move at all.

flags should be 0 or a OR'ed set of hwloc\_distrib\_flags\_e.

#### Note

This function requires the roots objects to have a CPU set.

This function replaces the now deprecated hwloc\_distribute() and hwloc\_distributev() functions.

# 22.21 CPU and node sets of entire topologies

### **Functions**

- hwloc\_const\_cpuset\_t hwloc\_topology\_get\_complete\_cpuset (hwloc\_topology\_t topology)
- hwloc\_const\_cpuset\_t hwloc\_topology\_get\_topology\_cpuset (hwloc\_topology\_t topology)
- hwloc\_const\_cpuset\_t hwloc\_topology\_get\_allowed\_cpuset (hwloc\_topology\_t topology)
- hwloc\_const\_nodeset\_t hwloc\_topology\_get\_complete\_nodeset (hwloc\_topology\_t topology)
- hwloc\_const\_nodeset\_t hwloc\_topology\_get\_topology\_nodeset (hwloc\_topology\_t topology)
- hwloc\_const\_nodeset\_t hwloc\_topology\_get\_allowed\_nodeset (hwloc\_topology\_t topology)

### 22.21.1 Detailed Description

#### 22.21.2 Function Documentation

## 22.21.2.1 hwloc\_topology\_get\_allowed\_cpuset()

Returns

the CPU set of allowed processors of the system.

Note

If the topology flag HWLOC\_TOPOLOGY\_FLAG\_INCLUDE\_DISALLOWED was not set, this is identical to hwloc\_topology\_get\_topology\_cpuset(), which means all PUs are allowed.

If HWLOC\_TOPOLOGY\_FLAG\_INCLUDE\_DISALLOWED was set, applying hwloc\_bitmap\_intersects() on the result of this function and on an object cpuset checks whether there are allowed PUs inside that object. Applying hwloc\_bitmap\_and() returns the list of these allowed PUs.

The returned cpuset is not newly allocated and should thus not be changed or freed, <a href="https://hww.newload.newly.allocated">https://hww.newload.

## 22.21.2.2 hwloc\_topology\_get\_allowed\_nodeset()

act anower

Returns

the node set of allowed memory of the system.

Note

If the topology flag HWLOC\_TOPOLOGY\_FLAG\_INCLUDE\_DISALLOWED was not set, this is identical to hwloc\_topology\_get\_topology\_nodeset(), which means all NUMA nodes are allowed.

If HWLOC\_TOPOLOGY\_FLAG\_INCLUDE\_DISALLOWED was set, applying hwloc\_bitmap\_intersects() on the result of this function and on an object nodeset checks whether there are allowed NUMA nodes inside that object. Applying hwloc\_bitmap\_and() returns the list of these allowed NUMA nodes.

The returned nodeset is not newly allocated and should thus not be changed or freed, hwloc\_bitmap\_dup() must be used to obtain a local copy.

### 22.21.2.3 hwloc\_topology\_get\_complete\_cpuset()

Get complete CPU set.

#### Returns

the complete CPU set of processors of the system.

#### Note

The returned cpuset is not newly allocated and should thus not be changed or freed; <a href="hwloc\_bitmap\_dup()">hwloc\_bitmap\_dup()</a> must be used to obtain a local copy.

This is equivalent to retrieving the root object complete CPU-set.

#### 22.21.2.4 hwloc\_topology\_get\_complete\_nodeset()

```
\label{loc_const_nodeset_thwloc_topology_get_complete_nodeset (} $$ hwloc_topology_t \ topology $$) $
```

Get complete node set.

#### Returns

the complete node set of memory of the system.

## Note

The returned nodeset is not newly allocated and should thus not be changed or freed; <a href="hwloc\_bitmap\_dup()">hwloc\_bitmap\_dup()</a> must be used to obtain a local copy.

This is equivalent to retrieving the root object complete nodeset.

### 22.21.2.5 hwloc\_topology\_get\_topology\_cpuset()

```
\label{loc_const_cpuset_theorem}  \begin{tabular}{ll} hwloc\_const\_cpuset\_t & hwloc\_topology\_get\_topology\_cpuset & ( \\ & hwloc\_topology\_t & topology & ) \\ \end{tabular}    Get topology CPU set.
```

#### Returns

the CPU set of processors of the system for which hwloc provides topology information. This is equivalent to the cpuset of the system object.

## Note

The returned cpuset is not newly allocated and should thus not be changed or freed; <a href="hwloc\_bitmap\_dup">hwloc\_bitmap\_dup</a>() must be used to obtain a local copy.

This is equivalent to retrieving the root object CPU-set.

## 22.21.2.6 hwloc\_topology\_get\_topology\_nodeset()

Get topology node set.

## Returns

the node set of memory of the system for which hwloc provides topology information. This is equivalent to the nodeset of the system object.

## Note

The returned nodeset is not newly allocated and should thus not be changed or freed; <a href="https://hwloc\_bitmap\_dup">hwloc\_bitmap\_dup</a>() must be used to obtain a local copy.

This is equivalent to retrieving the root object nodeset.

# 22.22 Converting between CPU sets and node sets

### **Functions**

- static int hwloc\_cpuset\_to\_nodeset (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t\_cpuset, hwloc\_nodeset\_t nodeset)
- static int hwloc\_cpuset\_from\_nodeset (hwloc\_topology\_t topology, hwloc\_cpuset\_t\_cpuset, hwloc\_const\_nodeset\_t nodeset)

# 22.22.1 Detailed Description

## 22.22.2 Function Documentation

#### 22.22.2.1 hwloc\_cpuset\_from\_nodeset()

Convert a NUMA node set into a CPU set.

For each NUMA node included in the input nodeset, set the corresponding local PUs in the output \_cpuset. If some CPUs have no local NUMA nodes, this function never sets their indexes in the output CPU set, even if a full node set is given in input.

Hence the entire topology node set is converted into the set of all CPUs that have some local NUMA nodes.

### 22.22.2.2 hwloc\_cpuset\_to\_nodeset()

Convert a CPU set into a NUMA node set.

For each PU included in the input \_cpuset, set the corresponding local NUMA node(s) in the output nodeset. If some NUMA nodes have no CPUs at all, this function never sets their indexes in the output node set, even if a full CPU set is given in input.

Hence the entire topology CPU set is converted into the set of all nodes that have some local CPUs.

# 22.23 Finding I/O objects

### **Functions**

- static hwloc\_obj\_t hwloc\_get\_non\_io\_ancestor\_obj (hwloc\_topology\_t topology, hwloc\_obj\_t ioobj)
- static hwloc\_obj\_t hwloc\_get\_next\_pcidev (hwloc\_topology\_t topology, hwloc\_obj\_t prev)
- static hwloc\_obj\_t hwloc\_get\_pcidev\_by\_busid (hwloc\_topology\_t topology, unsigned domain, unsigned bus, unsigned dev, unsigned func)
- static hwloc\_obj\_t hwloc\_get\_pcidev\_by\_busidstring (hwloc\_topology\_t topology, const char \*busid)
- static hwloc obj t hwloc get next osdev (hwloc topology, t topology, hwloc obj t prev)
- static hwloc\_obj\_t hwloc\_get\_next\_bridge (hwloc\_topology\_t topology, hwloc\_obj\_t prev)
- static int hwloc\_bridge\_covers\_pcibus (hwloc\_obj\_t bridge, unsigned domain, unsigned bus)

# 22.23.1 Detailed Description

#### 22.23.2 Function Documentation

#### 22.23.2.1 hwloc bridge covers pcibus()

```
static int hwloc_bridge_covers_pcibus (
          hwloc_obj_t bridge,
          unsigned domain,
          unsigned bus ) [inline], [static]
```

#### 22.23.2.2 hwloc\_get\_next\_bridge()

Get the next bridge in the system.

Returns

the first bridge if prev is NULL.

## 22.23.2.3 hwloc\_get\_next\_osdev()

Get the next OS device in the system.

Returns

the first OS device if prev is NULL.

## 22.23.2.4 hwloc\_get\_next\_pcidev()

Get the next PCI device in the system.

Returns

the first PCI device if prev is NULL.

### 22.23.2.5 hwloc\_get\_non\_io\_ancestor\_obj()

Get the first non-I/O ancestor object.

Given the I/O object ioobj, find the smallest non-I/O ancestor object. This object (normal or memory) may then be used for binding because it has non-NULL CPU and node sets and because its locality is the same as ioobj.

Note

The resulting object is usually a normal object but it could also be a memory object (e.g. NUMA node) in future platforms if I/O objects ever get attached to memory instead of CPUs.

## 22.23.2.6 hwloc\_get\_pcidev\_by\_busid()

Find the PCI device object matching the PCI bus id given domain, bus device and function PCI bus id.

## 22.23.2.7 hwloc\_get\_pcidev\_by\_busidstring()

Find the PCI device object matching the PCI bus id given as a string xxxx:yy:zz.t or yy:zz.t.

22.24 The bitmap API 141

# 22.24 The bitmap API

#### **Macros**

- #define hwloc bitmap foreach begin(id, bitmap)
- #define hwloc\_bitmap\_foreach\_end()

## **Typedefs**

- typedef struct hwloc bitmap s \* hwloc bitmap t
- typedef const struct hwloc\_bitmap\_s \* hwloc\_const\_bitmap\_t

## **Functions**

- hwloc\_bitmap\_t hwloc\_bitmap\_alloc (void)
- · hwloc bitmap thwloc bitmap alloc full (void)
- · void hwloc bitmap free (hwloc bitmap t bitmap)
- hwloc bitmap t hwloc bitmap dup (hwloc const bitmap t bitmap)
- int hwloc\_bitmap\_copy (hwloc\_bitmap\_t dst, hwloc\_const\_bitmap\_t src)
- int hwloc\_bitmap\_snprintf (char \*restrict buf, size\_t buflen, hwloc\_const\_bitmap\_t bitmap)
- int hwloc bitmap asprintf (char \*\*strp, hwloc const bitmap t bitmap)
- int hwloc\_bitmap\_sscanf (hwloc\_bitmap\_t bitmap, const char \*restrict string)
- int hwloc bitmap list snprintf (char \*restrict buf, size t buflen, hwloc const bitmap t bitmap)
- int hwloc\_bitmap\_list\_asprintf (char \*\*strp, hwloc\_const\_bitmap\_t bitmap)
- int hwloc bitmap list sscanf (hwloc bitmap, t bitmap, const char \*restrict string)
- int hwloc\_bitmap\_taskset\_snprintf (char \*restrict buf, size\_t buflen, hwloc\_const\_bitmap\_t bitmap)
- int hwloc\_bitmap\_taskset\_asprintf (char \*\*strp, hwloc\_const\_bitmap\_t bitmap)
- int hwloc bitmap taskset sscanf (hwloc bitmap t bitmap, const char \*restrict string)
- void hwloc bitmap zero (hwloc bitmap t bitmap)
- void hwloc bitmap fill (hwloc bitmap t bitmap)
- int hwloc bitmap only (hwloc bitmap t bitmap, unsigned id)
- int hwloc bitmap allbut (hwloc bitmap t bitmap, unsigned id)
- int hwloc\_bitmap\_from\_ulong (hwloc\_bitmap\_t bitmap, unsigned long mask)
- int hwloc\_bitmap\_from\_ith\_ulong (hwloc\_bitmap\_t bitmap, unsigned i, unsigned long mask)
- int hwloc\_bitmap\_from\_ulongs (hwloc\_bitmap\_t bitmap, unsigned nr, const unsigned long \*masks)
- int hwloc\_bitmap\_set (hwloc\_bitmap\_t bitmap, unsigned id)
- int hwloc\_bitmap\_set\_range (hwloc\_bitmap\_t bitmap, unsigned begin, int end)
- int hwloc\_bitmap\_set\_ith\_ulong (hwloc\_bitmap\_t bitmap, unsigned i, unsigned long mask)
- int hwloc bitmap clr (hwloc bitmap t bitmap, unsigned id)
- int hwloc bitmap clr range (hwloc bitmap t bitmap, unsigned begin, int end)
- int hwloc bitmap singlify (hwloc bitmap t bitmap)
- unsigned long hwloc bitmap to ulong (hwloc const bitmap t bitmap)
- unsigned long hwloc\_bitmap\_to\_ith\_ulong (hwloc\_const\_bitmap\_t bitmap, unsigned i)
- int hwloc\_bitmap\_to\_ulongs (hwloc\_const\_bitmap\_t bitmap, unsigned nr, unsigned long \*masks)
- int hwloc\_bitmap\_nr\_ulongs (hwloc\_const\_bitmap\_t bitmap)
- int hwloc\_bitmap\_isset (hwloc\_const\_bitmap\_t bitmap, unsigned id)
- int hwloc bitmap iszero (hwloc const bitmap t bitmap)
- int hwloc bitmap isfull (hwloc const bitmap t bitmap)
- int hwloc bitmap first (hwloc const bitmap t bitmap)
- int hwloc bitmap next (hwloc const bitmap t bitmap, int prev)
- int hwloc\_bitmap\_last (hwloc\_const\_bitmap\_t bitmap)
- int hwloc\_bitmap\_weight (hwloc\_const\_bitmap\_t bitmap)
- int hwloc bitmap first unset (hwloc const bitmap t bitmap)
- int hwloc bitmap next unset (hwloc const bitmap t bitmap, int prev)
- int hwloc bitmap last unset (hwloc const bitmap t bitmap)
- int hwloc\_bitmap\_or (hwloc\_bitmap\_t res, hwloc\_const\_bitmap\_t bitmap1, hwloc\_const\_bitmap\_t bitmap2)

- int hwloc\_bitmap\_and (hwloc\_bitmap\_t res, hwloc\_const\_bitmap\_t bitmap1, hwloc\_const\_bitmap\_t bitmap2)
- int hwloc\_bitmap\_andnot (hwloc\_bitmap\_t res, hwloc\_const\_bitmap\_t bitmap1, hwloc\_const\_bitmap\_t bitmap2)
- int hwloc\_bitmap\_xor (hwloc\_bitmap\_t res, hwloc\_const\_bitmap\_t bitmap1, hwloc\_const\_bitmap2)
- int hwloc\_bitmap\_not (hwloc\_bitmap\_t res, hwloc\_const\_bitmap\_t bitmap)
- int hwloc\_bitmap\_intersects (hwloc\_const\_bitmap\_t bitmap\_t bitmap\_t bitmap\_t bitmap\_t)
- int hwloc bitmap isincluded (hwloc const bitmap t sub bitmap, hwloc const bitmap t super bitmap)
- int hwloc bitmap isequal (hwloc const bitmap t bitmap1, hwloc const bitmap t bitmap2)
- int hwloc bitmap compare first (hwloc const bitmap t bitmap1, hwloc const bitmap t bitmap2)
- int hwloc bitmap compare (hwloc const bitmap t bitmap1, hwloc const bitmap t bitmap2)

# 22.24.1 Detailed Description

The <a href="https://www.numbers.com/https://www.numbe

Bitmaps are used by hwloc for sets of OS processors (which may actually be hardware threads) as by hwloc\_cpuset\_t (a typedef for hwloc\_bitmap\_t), or sets of NUMA memory nodes as hwloc\_nodeset\_t (also a typedef for hwloc\_bitmap\_t). Those are used for cpuset and nodeset fields in the hwloc\_obj structure, see Object Sets (hwloc\_cpuset\_t and hwloc\_nodeset\_t).

Both CPU and node sets are always indexed by OS physical number. However users should usually not build CPU and node sets manually (e.g. with <a href="https://hww.number.to.number.">hww.number.to.

```
hwloc_obj_t core1 = ..., core2 = ...;
hwloc_bitmap_t set = hwloc_bitmap_alloc();
hwloc_bitmap_or(set, core1->cpuset, core2->cpuset);
hwloc_set_cpubind(topology, set, HWLOC_CPUBIND_THREAD);
hwloc_bitmap_free(set);
```

#### Note

Most functions below return an int that may be negative in case of error. The usual error case would be an internal failure to realloc/extend the storage of the bitmap (errno would be set to ENOMEM).

Several examples of using the bitmap API are available under the doc/examples/ directory in the source tree. Regression tests such as tests/hwloc/hwloc\_bitmap\*.c also make intensive use of this API.

### 22.24.2 Macro Definition Documentation

### 22.24.2.1 hwloc\_bitmap\_foreach\_begin

Loop macro iterating on bitmap bitmap.

The loop must start with hwloc\_bitmap\_foreach\_begin() and end with hwloc\_bitmap\_foreach\_end() followed by a terminating ':'.

index is the loop variable; it should be an unsigned int. The first iteration will set index to the lowest index in the bitmap. Successive iterations will iterate through, in order, all remaining indexes set in the bitmap. To be specific: each iteration will return a value for index such that hwloc\_bitmap\_isset(bitmap, index) is true.

The assert prevents the loop from being infinite if the bitmap is infinitely set.

#### 22.24.2.2 hwloc bitmap foreach end

```
#define hwloc_bitmap_foreach_end() End of loop macro iterating on a bitmap. Needs a terminating ';'.
```

22.24 The bitmap API 143

See also

hwloc\_bitmap\_foreach\_begin()

# 22.24.3 Typedef Documentation

## 22.24.3.1 hwloc\_bitmap\_t

```
typedef struct hwloc_bitmap_s* hwloc_bitmap_t
Set of bits represented as an opaque pointer to an internal bitmap.
```

## 22.24.3.2 hwloc\_const\_bitmap\_t

```
typedef const struct hwloc_bitmap_s* hwloc_const_bitmap_t
a non-modifiable hwloc_bitmap_t
```

### 22.24.4 Function Documentation

## 22.24.4.1 hwloc\_bitmap\_allbut()

Fill the bitmap and clear the index id.

# 22.24.4.2 hwloc\_bitmap\_alloc()

Allocate a new empty bitmap.

Returns

A valid bitmap or NULL.

The bitmap should be freed by a corresponding call to <a href="https://hww.nee.gov.nee

## 22.24.4.3 hwloc\_bitmap\_alloc\_full()

Allocate a new full bitmap.

## 22.24.4.4 hwloc\_bitmap\_and()

And bitmaps bitmap1 and bitmap2 and store the result in bitmap res.

res can be the same as bitmap1 or bitmap2

### 22.24.4.5 hwloc\_bitmap\_andnot()

And bitmap bitmap1 and the negation of bitmap2 and store the result in bitmap res.

res can be the same as bitmap1 or bitmap2

# 22.24.4.6 hwloc\_bitmap\_asprintf()

Stringify a bitmap into a newly allocated string.

Returns

-1 on error.

## 22.24.4.7 hwloc\_bitmap\_clr()

Remove index id from bitmap bitmap.

## 22.24.4.8 hwloc\_bitmap\_clr\_range()

Remove indexes from begin to end in bitmap bitmap.

If end is -1, the range is infinite.

## 22.24.4.9 hwloc\_bitmap\_compare()

Compare bitmaps bitmap1 and bitmap2 in lexicographic order.

Lexicographic comparison of bitmaps, starting for their highest indexes. Compare last indexes first, then second, etc. The empty bitmap is considered lower than anything.

## Returns

- -1 if bitmap1 is considered smaller than bitmap2.
- 1 if bitmap1 is considered larger than bitmap2.
- 0 if bitmaps are equal (contrary to hwloc\_bitmap\_compare\_first()).

For instance comparing binary bitmaps 0011 and 0110 returns -1 (hence 0011 is considered smaller than 0110). Comparing 00101 and 01010 returns -1 too.

Note

This is different from the non-existing hwloc\_bitmap\_compare\_last() which would only compare the highest index of each bitmap.

22.24 The bitmap API 145

### 22.24.4.10 hwloc\_bitmap\_compare\_first()

Compare bitmaps bitmap1 and bitmap2 using their lowest index.

A bitmap is considered smaller if its least significant bit is smaller. The empty bitmap is considered higher than anything (because its least significant bit does not exist).

### Returns

- -1 if bitmap1 is considered smaller than bitmap2.
- 1 if bitmap1 is considered larger than bitmap2.

For instance comparing binary bitmaps 0011 and 0110 returns -1 (hence 0011 is considered smaller than 0110) because least significant bit of 0011 (0001) is smaller than least significant bit of 0110 (0010). Comparing 01001 and 00110 would also return -1 for the same reason.

#### Returns

0 if bitmaps are considered equal, even if they are not strictly equal. They just need to have the same least significant bit. For instance, comparing binary bitmaps 0010 and 0110 returns 0 because they have the same least significant bit.

### 22.24.4.11 hwloc\_bitmap\_copy()

Copy the contents of bitmap src into the already allocated bitmap dst.

### 22.24.4.12 hwloc\_bitmap\_dup()

Duplicate bitmap by allocating a new bitmap and copying bitmap contents.

If bitmap is NULL, NULL is returned.

## 22.24.4.13 hwloc\_bitmap\_fill()

```
void hwloc_bitmap_fill (
    hwloc_bitmap_t bitmap )
```

Fill bitmap bitmap with all possible indexes (even if those objects don't exist or are otherwise unavailable)

## 22.24.4.14 hwloc\_bitmap\_first()

Compute the first index (least significant bit) in bitmap bitmap.

#### Returns

-1 if no index is set in bitmap.

### 22.24.4.15 hwloc\_bitmap\_first\_unset()

Compute the first unset index (least significant bit) in bitmap bitmap.

#### Returns

-1 if no index is unset in bitmap.

# 22.24.4.16 hwloc\_bitmap\_free()

## 22.24.4.17 hwloc bitmap from ith ulong()

```
int hwloc_bitmap_from_ith_ulong (
          hwloc_bitmap_t bitmap,
          unsigned i,
          unsigned long mask)
```

Setup bitmap bitmap from unsigned long mask used as i -th subset.

### 22.24.4.18 hwloc\_bitmap\_from\_ulong()

Setup bitmap bitmap from unsigned long  ${\tt mask}.$ 

## 22.24.4.19 hwloc\_bitmap\_from\_ulongs()

```
int hwloc_bitmap_from_ulongs (
          hwloc_bitmap_t bitmap,
          unsigned nr,
          const unsigned long * masks )
```

Setup bitmap bitmap from unsigned longs masks used as first nr subsets.

# 22.24.4.20 hwloc\_bitmap\_intersects()

Test whether bitmaps bitmap1 and bitmap2 intersects.

#### Returns

1 if bitmaps intersect, 0 otherwise.

22.24 The bitmap API 147

### 22.24.4.21 hwloc\_bitmap\_isequal()

Test whether bitmap bitmap1 is equal to bitmap bitmap2.

Returns

1 if bitmaps are equal, 0 otherwise.

## 22.24.4.22 hwloc\_bitmap\_isfull()

Test whether bitmap bitmap is completely full.

Returns

1 if bitmap is full, 0 otherwise.

Note

A full bitmap is always infinitely set.

## 22.24.4.23 hwloc bitmap isincluded()

Test whether bitmap sub\_bitmap is part of bitmap super\_bitmap.

Returns

1 if sub\_bitmap is included in super\_bitmap, 0 otherwise.

Note

The empty bitmap is considered included in any other bitmap.

# 22.24.4.24 hwloc\_bitmap\_isset()

Test whether index id is part of bitmap bitmap.

Returns

1 if the bit at index id is set in bitmap bitmap, 0 otherwise.

## 22.24.4.25 hwloc\_bitmap\_iszero()

Test whether bitmap bitmap is empty.

Returns

1 if bitmap is empty, 0 otherwise.

### 22.24.4.26 hwloc\_bitmap\_last()

Compute the last index (most significant bit) in bitmap bitmap.

#### Returns

-1 if no index is set in bitmap, or if bitmap is infinitely set.

### 22.24.4.27 hwloc\_bitmap\_last\_unset()

Compute the last unset index (most significant bit) in bitmap bitmap.

### Returns

-1 if no index is unset in bitmap, or if bitmap is infinitely set.

### 22.24.4.28 hwloc\_bitmap\_list\_asprintf()

Stringify a bitmap into a newly allocated list string.

#### Returns

-1 on error.

## 22.24.4.29 hwloc bitmap list snprintf()

Stringify a bitmap in the list format.

Lists are comma-separated indexes or ranges. Ranges are dash separated indexes. The last range may not have an ending indexes if the bitmap is infinitely set.

Up to buflen characters may be written in buffer buf.

If buflen is 0, buf may safely be NULL.

## Returns

the number of character that were actually written if not truncating, or that would have been written (not including the ending \0).

### 22.24.4.30 hwloc\_bitmap\_list\_sscanf()

Parse a list string and stores it in bitmap bitmap.

22.24 The bitmap API 149

## 22.24.4.31 hwloc\_bitmap\_next()

Compute the next index in bitmap bitmap which is after index prev.

If prev is -1, the first index is returned.

#### Returns

-1 if no index with higher index is set in bitmap.

### 22.24.4.32 hwloc\_bitmap\_next\_unset()

Compute the next unset index in bitmap bitmap which is after index prev.

If prev is -1, the first unset index is returned.

#### Returns

-1 if no index with higher index is unset in bitmap.

# 22.24.4.33 hwloc\_bitmap\_not()

Negate bitmap bitmap and store the result in bitmap res.

res can be the same as bitmap

## 22.24.4.34 hwloc\_bitmap\_nr\_ulongs()

Return the number of unsigned longs required for storing bitmap bitmap entirely.

This is the number of contiguous unsigned longs from the very first bit of the bitmap (even if unset) up to the last set bit. This is useful for knowing the nr parameter to pass to hwloc\_bitmap\_to\_ulongs() (or which calls to hwloc\_bitmap\_to\_ith\_ulong() are needed) to entirely convert a bitmap into multiple unsigned longs.

When called on the output of hwloc\_topology\_get\_topology\_cpuset(), the returned number is large enough for all cpusets of the topology.

#### Returns

-1 if bitmap is infinite.

### 22.24.4.35 hwloc\_bitmap\_only()

Empty the bitmap bitmap and add bit id.

### 22.24.4.36 hwloc\_bitmap\_or()

Or bitmaps bitmap1 and bitmap2 and store the result in bitmap res.

res can be the same as bitmap1 or bitmap2

## 22.24.4.37 hwloc\_bitmap\_set()

Add index id in bitmap bitmap.

## 22.24.4.38 hwloc\_bitmap\_set\_ith\_ulong()

```
int hwloc_bitmap_set_ith_ulong (
          hwloc_bitmap_t bitmap,
          unsigned i,
          unsigned long mask)
```

Replace i -th subset of bitmap bitmap with unsigned long mask.

### 22.24.4.39 hwloc\_bitmap\_set\_range()

Add indexes from begin to end in bitmap bitmap.

If end is -1, the range is infinite.

# 22.24.4.40 hwloc\_bitmap\_singlify()

Keep a single index among those set in bitmap bitmap.

May be useful before binding so that the process does not have a chance of migrating between multiple processors in the original mask. Instead of running the task on any PU inside the given CPU set, the operating system scheduler will be forced to run it on a single of these PUs. It avoids a migration overhead and cache-line ping-pongs between PUs.

Note

This function is NOT meant to distribute multiple processes within a single CPU set. It always return the same single bit when called multiple times on the same input set. <a href="https://hwloc\_distrib()">hwloc\_distrib()</a> may be used for generating CPU sets to distribute multiple tasks below a single multi-PU object.

This function cannot be applied to an object set directly. It should be applied to a copy (which may be obtained with hwloc bitmap dup()).

#### 22.24.4.41 hwloc\_bitmap\_snprintf()

22.24 The bitmap API 151

### Stringify a bitmap.

Up to buflen characters may be written in buffer buf.

If buflen is 0, buf may safely be NULL.

#### Returns

the number of character that were actually written if not truncating, or that would have been written (not including the ending \0).

### 22.24.4.42 hwloc bitmap sscanf()

Parse a bitmap string and stores it in bitmap bitmap.

## 22.24.4.43 hwloc\_bitmap\_taskset\_asprintf()

Stringify a bitmap into a newly allocated taskset-specific string.

#### Returns

-1 on error.

## 22.24.4.44 hwloc\_bitmap\_taskset\_snprintf()

Stringify a bitmap in the taskset-specific format.

The taskset command manipulates bitmap strings that contain a single (possible very long) hexadecimal number starting with 0x.

Up to buflen characters may be written in buffer buf.

If buflen is 0, buf may safely be NULL.

# Returns

the number of character that were actually written if not truncating, or that would have been written (not including the ending \0).

# 22.24.4.45 hwloc\_bitmap\_taskset\_sscanf()

```
int hwloc_bitmap_taskset_sscanf (
          hwloc_bitmap_t bitmap,
          const char *restrict string )
```

Parse a taskset-specific bitmap string and stores it in bitmap bitmap.

## 22.24.4.46 hwloc\_bitmap\_to\_ith\_ulong()

Convert the i -th subset of bitmap bitmap into unsigned long mask.

## 22.24.4.47 hwloc\_bitmap\_to\_ulong()

Convert the beginning part of bitmap bitmap into unsigned long mask.

## 22.24.4.48 hwloc\_bitmap\_to\_ulongs()

Convert the first nr subsets of bitmap bitmap into the array of nr unsigned long masks. nr may be determined earlier with hwloc\_bitmap\_nr\_ulongs().

Returns

0

## 22.24.4.49 hwloc\_bitmap\_weight()

Compute the "weight" of bitmap bitmap (i.e., number of indexes that are in the bitmap).

Returns

the number of indexes that are in the bitmap.

-1 if bitmap is infinitely set.

# 22.24.4.50 hwloc\_bitmap\_xor()

Xor bitmaps  $\mathtt{bitmap1}$  and  $\mathtt{bitmap2}$  and store the result in bitmap  $\mathtt{res}.$ 

 $\verb"res" \textbf{ can be the same as} \verb"bitmap1" \textbf{ or} \verb"bitmap2"$ 

#### 22.24.4.51 hwloc\_bitmap\_zero()

 $\label{eq:empty-the-bitmap} \textbf{Empty the bitmap.}$ 

# 22.25 Exporting Topologies to XML

#### **Enumerations**

enum hwloc\_topology\_export\_xml\_flags\_e { HWLOC\_TOPOLOGY\_EXPORT\_XML\_FLAG\_V1 }

### **Functions**

- int hwloc\_topology\_export\_xml (hwloc\_topology\_t topology, const char \*xmlpath, unsigned long flags)
- int hwloc\_topology\_export\_xmlbuffer (hwloc\_topology\_t topology, char \*\*xmlbuffer, int \*buflen, unsigned long flags)
- void hwloc\_free\_xmlbuffer (hwloc\_topology\_t topology, char \*xmlbuffer)
- void hwloc\_topology\_set\_userdata\_export\_callback (hwloc\_topology\_t topology, void(\*export\_cb)(void \*reserved, hwloc\_topology\_t topology, hwloc\_obj\_t obj))
- int hwloc\_export\_obj\_userdata (void \*reserved, hwloc\_topology\_t topology, hwloc\_obj\_t obj, const char \*name, const void \*buffer, size\_t length)
- int hwloc\_export\_obj\_userdata\_base64 (void \*reserved, hwloc\_topology\_t topology, hwloc\_obj\_t obj, const char \*name, const void \*buffer, size\_t length)
- void hwloc\_topology\_set\_userdata\_import\_callback (hwloc\_topology\_t topology, void(\*import\_cb)(hwloc\_topology\_t topology, hwloc\_obj\_t obj, const char \*name, const void \*buffer, size\_t length))

## 22.25.1 Detailed Description

# 22.25.2 Enumeration Type Documentation

## 22.25.2.1 hwloc\_topology\_export\_xml\_flags\_e

```
enum hwloc_topology_export_xml_flags_e
```

Flags for exporting XML topologies.

Flags to be given as a OR'ed set to hwloc\_topology\_export\_xml().

## **Enumerator**

HWLOC_TOPOLOGY_EXPORT_XML_FLAG_V1	Export XML that is loadable by hwloc v1.x. However,
	the export may miss some details about the topology.

#### 22.25.3 Function Documentation

## 22.25.3.1 hwloc\_export\_obj\_userdata()

```
int hwloc_export_obj_userdata (
    void * reserved,
    hwloc_topology_t topology,
    hwloc_obj_t obj,
    const char * name,
    const void * buffer,
    size_t length )
```

Export some object userdata to XML.

This function may only be called from within the export() callback passed to hwloc\_topology\_set\_userdata\_export\_callback(). It may be invoked one of multiple times to export some userdata to XML. The buffer content of length length is stored with optional name name.

When importing this XML file, the import() callback (if set) will be called exactly as many times as <a href="https://hww.cexport\_obj\_userdata">hwloc\_export\_obj\_userdata</a>() was called during export(). It will receive the corresponding name, buffer and length arguments.

reserved, topology and obj must be the first three parameters that were given to the export callback. Only printable characters may be exported to XML string attributes. If a non-printable character is passed in name or buffer, the function returns -1 with errno set to EINVAL.

### 22.25.3.2 hwloc\_export\_obj\_userdata\_base64()

Encode and export some object userdata to XML.

This function is similar to hwloc\_export\_obj\_userdata() but it encodes the input buffer into printable characters before exporting. On import, decoding is automatically performed before the data is given to the import() callback if any.

This function may only be called from within the export() callback passed to <a href="https://www.nwithin.com/hwloc\_topology\_set\_userdata\_export\_callback">hwloc\_topology\_set\_userdata\_export\_callback</a>(). The function does not take care of portability issues if the export may be reimported on a different architecture.

#### 22.25.3.3 hwloc free xmlbuffer()

Free a buffer allocated by hwloc\_topology\_export\_xmlbuffer()

### 22.25.3.4 hwloc topology export xml()

```
int hwloc_topology_export_xml (
          hwloc_topology_t topology,
          const char * xmlpath,
          unsigned long flags)
```

Export the topology into an XML file.

This file may be loaded later through hwloc\_topology\_set\_xml().

By default, the latest export format is used, which means older hwloc releases (e.g. v1.x) will not be able to import it. Exporting to v1.x specific XML format is possible using flag HWLOC\_TOPOLOGY\_EXPORT\_XML\_FLAG\_V1 but it may miss some details about the topology. If there is any chance that the exported file may ever be imported back by a process using hwloc 1.x, one should consider detecting it at runtime and using the corresponding export format.

flags is a OR'ed set of hwloc\_topology\_export\_xml\_flags\_e.

#### Returns

-1 if a failure occured.

## Note

See also hwloc\_topology\_set\_userdata\_export\_callback() for exporting application-specific object userdata.

The topology-specific userdata pointer is ignored when exporting to XML.

Only printable characters may be exported to XML string attributes. Any other character, especially any non-ASCII character, will be silently dropped.

If name is "-", the XML output is sent to the standard output.

#### 22.25.3.5 hwloc\_topology\_export\_xmlbuffer()

```
int hwloc_topology_export_xmlbuffer (
          hwloc_topology_t topology,
          char ** xmlbuffer,
          int * buflen,
          unsigned long flags )
```

Export the topology into a newly-allocated XML memory buffer.

xmlbuffer is allocated by the callee and should be freed with hwloc free xmlbuffer() later in the caller.

This memory buffer may be loaded later through hwloc\_topology\_set\_xmlbuffer().

By default, the latest export format is used, which means older hwloc releases (e.g. v1.x) will not be able to import it. Exporting to v1.x specific XML format is possible using flag HWLOC\_TOPOLOGY\_EXPORT\_XML\_FLAG\_V1 but it may miss some details about the topology. If there is any chance that the exported buffer may ever be imported back by a process using hwloc 1.x, one should consider detecting it at runtime and using the corresponding export format.

The returned buffer ends with a \0 that is included in the returned length.

flags is a OR'ed set of hwloc\_topology\_export\_xml\_flags\_e.

#### Returns

-1 if a failure occured.

#### Note

See also hwloc\_topology\_set\_userdata\_export\_callback() for exporting application-specific object userdata.

The topology-specific userdata pointer is ignored when exporting to XML.

Only printable characters may be exported to XML string attributes. Any other character, especially any non-ASCII character, will be silently dropped.

#### 22.25.3.6 hwloc\_topology\_set\_userdata\_export\_callback()

Set the application-specific callback for exporting object userdata.

The object userdata pointer is not exported to XML by default because hwloc does not know what it contains.

This function lets applications set  $export\_cb$  to a callback function that converts this opaque userdata into an exportable string.

export\_cb is invoked during XML export for each object whose userdata pointer is not NULL. The callback should use hwloc\_export\_obj\_userdata() or hwloc\_export\_obj\_userdata\_base64() to actually export something to XML (possibly multiple times per object).

export\_cb may be set to NULL if userdata should not be exported to XML.

## Note

The topology-specific userdata pointer is ignored when exporting to XML.

## 22.25.3.7 hwloc\_topology\_set\_userdata\_import\_callback()

Set the application-specific callback for importing userdata.

On XML import, userdata is ignored by default because hwloc does not know how to store it in memory.

This function lets applications set  $import\_cb$  to a callback function that will get the XML-stored userdata and store it in the object as expected by the application.

import\_cb is called during hwloc\_topology\_load() as many times as hwloc\_export\_obj\_userdata() was called during export. The topology is not entirely setup yet. Object attributes are ready to consult, but links between objects are not.

 $\verb|import_cb| may be \verb| NULL| if userdata should be ignored during import.$ 

## Note

buffer contains length characters followed by a null byte ('\0').

This function should be called before hwloc\_topology\_load().

The topology-specific userdata pointer is ignored when importing from XML.

# 22.26 Exporting Topologies to Synthetic

## **Enumerations**

 enum hwloc\_topology\_export\_synthetic\_flags\_e { HWLOC\_TOPOLOGY\_EXPORT\_SYNTHETIC\_FLAG\_NO\_EXTENDED\_TY HWLOC\_TOPOLOGY\_EXPORT\_SYNTHETIC\_FLAG\_NO\_ATTRS, HWLOC\_TOPOLOGY\_EXPORT\_SYNTHETIC\_FLAG\_V HWLOC\_TOPOLOGY\_EXPORT\_SYNTHETIC\_FLAG\_IGNORE\_MEMORY }

#### **Functions**

int hwloc\_topology\_export\_synthetic (hwloc\_topology\_t topology, char \*buffer, size\_t buflen, unsigned long flags)

# 22.26.1 Detailed Description

## 22.26.2 Enumeration Type Documentation

## 22.26.2.1 hwloc\_topology\_export\_synthetic\_flags\_e

```
enum hwloc_topology_export_synthetic_flags_e
```

Flags for exporting synthetic topologies.

Flags to be given as a OR'ed set to hwloc\_topology\_export\_synthetic().

#### Enumerator

HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FL↔ AG_NO_EXTENDED_TYPES	Export extended types such as L2dcache as basic types such as Cache. This is required if loading the synthetic description with hwloc < 1.9.
HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FL↔ AG_NO_ATTRS	Do not export level attributes. Ignore level attributes such as memory/cache sizes or PU indexes. This is required if loading the synthetic description with hwloc < 1.10.
HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FL AG_V1	Export the memory hierarchy as expected in hwloc 1.x. Instead of attaching memory children to levels, export single NUMA node child as normal intermediate levels, when possible. This is required if loading the synthetic description with hwloc 1.x. However this may fail if some objects have multiple local NUMA nodes.
HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FL↔ AG_IGNORE_MEMORY	Do not export memory information. Only export the actual hierarchy of normal CPU-side objects and ignore where memory is attached. This is useful for when the hierarchy of CPUs is what really matters, but it behaves as if there was a single machine-wide NUMA node.

## 22.26.3 Function Documentation

## 22.26.3.1 hwloc\_topology\_export\_synthetic()

```
size_t buflen,
unsigned long flags )
```

Export the topology as a synthetic string.

At most buflen characters will be written in buffer, including the terminating  $\0$ .

This exported string may be given back to hwloc\_topology\_set\_synthetic().

flags is a OR'ed set of hwloc topology export synthetic flags e.

#### Returns

The number of characters that were written, not including the terminating \0.

-1 if the topology could not be exported, for instance if it is not symmetric.

## Note

I/O and Misc children are ignored, the synthetic string only describes normal children.

A 1024-byte buffer should be large enough for exporting topologies in the vast majority of cases.

# 22.27 Retrieve distances between objects

#### **Data Structures**

· struct hwloc distances s

#### **Enumerations**

enum hwloc\_distances\_kind\_e {
 HWLOC\_DISTANCES\_KIND\_FROM\_OS, HWLOC\_DISTANCES\_KIND\_FROM\_USER, HWLOC\_DISTANCES\_KIND\_MEAN
 HWLOC\_DISTANCES\_KIND\_MEANS\_BANDWIDTH,
 HWLOC\_DISTANCES\_KIND\_HETEROGENEOUS\_TYPES }

## **Functions**

- int hwloc\_distances\_get (hwloc\_topology\_t topology, unsigned \*nr, struct hwloc\_distances\_s \*\*distances, unsigned long kind, unsigned long flags)
- int hwloc\_distances\_get\_by\_depth (hwloc\_topology\_t topology, int depth, unsigned \*nr, struct hwloc\_distances\_s \*\*distances, unsigned long kind, unsigned long flags)
- int hwloc\_distances\_get\_by\_type (hwloc\_topology\_t topology, hwloc\_obj\_type\_t type, unsigned \*nr, struct hwloc\_distances\_s \*\*distances, unsigned long kind, unsigned long flags)
- int hwloc\_distances\_get\_by\_name (hwloc\_topology\_t topology, const char \*name, unsigned \*nr, struct hwloc\_distances\_s \*\*distances, unsigned long flags)
- const char \* hwloc\_distances\_get\_name (hwloc\_topology\_t topology, struct hwloc\_distances\_s \*distances)
- void hwloc\_distances\_release (hwloc\_topology\_t topology, struct hwloc\_distances\_s \*distances)

## 22.27.1 Detailed Description

## 22.27.2 Enumeration Type Documentation

## 22.27.2.1 hwloc\_distances\_kind\_e

enum hwloc\_distances\_kind\_e

Kinds of distance matrices.

The kind attribute of struct hwloc\_distances\_s is a OR'ed set of kinds.

A kind of format HWLOC\_DISTANCES\_KIND\_FROM\_\* specifies where the distance information comes from, if known.

A kind of format HWLOC\_DISTANCES\_KIND\_MEANS\_\* specifies whether values are latencies or bandwidths, if applicable.

#### **Enumerator**

HWLOC_DISTANCES_KIND_FROM_OS	These distances were obtained from the operating system or hardware.
HWLOC_DISTANCES_KIND_FROM_USER	These distances were provided by the user.
HWLOC_DISTANCES_KIND_MEANS_LATENCY	Distance values are similar to latencies between objects. Values are smaller for closer objects, hence minimal on the diagonal of the matrix (distance between an object and itself). It could also be the number of network hops between objects, etc.
HWLOC_DISTANCES_KIND_MEANS_BANDWIDTH	Distance values are similar to bandwidths between objects. Values are higher for closer objects, hence maximal on the diagonal of the matrix (distance between an object and itself). Such values are currently ignored for distance-based grouping.
HWLOC_DISTANCES_KIND_HETEROGENEOU↔ S_TYPES	This distances structure covers objects of different types.

#### 22.27.3 Function Documentation

#### 22.27.3.1 hwloc\_distances\_get()

```
int hwloc_distances_get (
          hwloc_topology_t topology,
          unsigned * nr,
          struct hwloc_distances_s ** distances,
          unsigned long kind,
          unsigned long flags )
```

Retrieve distance matrices.

Retrieve distance matrices from the topology into the distances array.

flags is currently unused, should be 0.

kind serves as a filter. If 0, all distance matrices are returned. If it contains some HWLOC\_DISTANCES\_KIND  $\leftarrow$  \_FROM\_\*, only distance matrices whose kind matches one of these are returned. If it contains some HWLOC\_ $\leftarrow$  DISTANCES KIND MEANS \*, only distance matrices whose kind matches one of these are returned.

On input, nr points to the number of distance matrices that may be stored in distances. On output, nr points to the number of distance matrices that were actually found, even if some of them couldn't be stored in distances. Distance matrices that couldn't be stored are ignored, but the function still returns success (0). The caller may find out by comparing the value pointed by nr before and after the function call.

Each distance matrix returned in the distances array should be released by the caller using hwloc distances release().

## 22.27.3.2 hwloc\_distances\_get\_by\_depth()

```
int hwloc_distances_get_by_depth (
          hwloc_topology_t topology,
          int depth,
          unsigned * nr,
          struct hwloc_distances_s ** distances,
          unsigned long kind,
          unsigned long flags )
```

Retrieve distance matrices for object at a specific depth in the topology. Identical to hwloc\_distances\_get() with the additional depth filter.

## 22.27.3.3 hwloc\_distances\_get\_by\_name()

```
int hwloc_distances_get_by_name (
    hwloc_topology_t topology,
    const char * name,
    unsigned * nr,
    struct hwloc_distances_s ** distances,
    unsigned long flags )
```

Retrieve a distance matrix with the given name.

Usually only one distances structure may match a given name.

## 22.27.3.4 hwloc\_distances\_get\_by\_type()

```
int hwloc_distances_get_by_type (
    hwloc_topology_t topology,
    hwloc_obj_type_t type,
    unsigned * nr,
    struct hwloc_distances_s ** distances,
    unsigned long kind,
    unsigned long flags )
```

Retrieve distance matrices for object of a specific type.

Identical to  $hwloc\_distances\_get()$  with the additional type filter.

## 22.27.3.5 hwloc\_distances\_get\_name()

Get a description of what a distances structure contains.

For instance "NUMALatency" for hardware-provided NUMA distances (ACPI SLIT), or NULL if unknown.

## 22.27.3.6 hwloc\_distances\_release()

Release a distance matrix structure previously returned by hwloc\_distances\_get().

Note

This function is not required if the structure is removed with <a href="https://hww.ncture.com/hwloc\_distances\_release\_remove">hwloc\_distances\_release\_remove</a>().

# 22.28 Helpers for consulting distance matrices

#### **Functions**

- static int hwloc\_distances\_obj\_index (struct hwloc\_distances\_s \*distances, hwloc\_obj\_t obj)
- static int hwloc\_distances\_obj\_pair\_values (struct hwloc\_distances\_s \*distances, hwloc\_obj\_t obj1, hwloc\_obj\_t obj2, hwloc\_uint64\_t \*value1to2, hwloc\_uint64\_t \*value2to1)

# 22.28.1 Detailed Description

## 22.28.2 Function Documentation

## 22.28.2.1 hwloc\_distances\_obj\_index()

Find the index of an object in a distances structure.

#### Returns

-1 if object obj is not involved in structure distances.

#### 22.28.2.2 hwloc\_distances\_obj\_pair\_values()

Find the values between two objects in a distance matrices.

The distance from obj1 to obj2 is stored in the value pointed by value1to2 and reciprocally.

## Returns

-1 if object obj1 or obj2 is not involved in structure distances.

# 22.29 Add or remove distances between objects

#### **Enumerations**

enum hwloc\_distances\_add\_flag\_e { HWLOC\_DISTANCES\_ADD\_FLAG\_GROUP, HWLOC\_DISTANCES\_ADD\_FLAG\_GROUP}

#### **Functions**

- int hwloc\_distances\_add (hwloc\_topology\_t topology, unsigned nbobjs, hwloc\_obj\_t \*objs, hwloc\_uint64\_t
   \*values, unsigned long kind, unsigned long flags)
- int hwloc\_distances\_remove (hwloc\_topology\_t topology)
- int hwloc\_distances\_remove\_by\_depth (hwloc\_topology\_t topology, int depth)
- static int hwloc\_distances\_remove\_by\_type (hwloc\_topology\_t topology, hwloc\_obj\_type\_t type)
- int hwloc\_distances\_release\_remove (hwloc\_topology\_t topology, struct hwloc\_distances\_s \*distances)

## 22.29.1 Detailed Description

## 22.29.2 Enumeration Type Documentation

## 22.29.2.1 hwloc\_distances\_add\_flag\_e

```
enum hwloc_distances_add_flag_e
```

Flags for adding a new distances to a topology.

#### Enumerator

HWLOC_DISTANCES_ADD_FLAG_GROUP	Try to group objects based on the newly provided
	distance information.
HWLOC_DISTANCES_ADD_FLAG_GROUP_INA↔	If grouping, consider the distance values as
CCURATE	inaccurate and relax the comparisons during the
	grouping algorithms. The actual accuracy may be
	modified through the
	HWLOC_GROUPING_ACCURACY environment
	variable (see Environment Variables).

#### 22.29.3 Function Documentation

## 22.29.3.1 hwloc\_distances\_add()

```
int hwloc_distances_add (
    hwloc_topology_t topology,
    unsigned nbobjs,
    hwloc_obj_t * objs,
    hwloc_uint64_t * values,
    unsigned long kind,
    unsigned long flags)
```

Provide a new distance matrix.

Provide the matrix of distances between a set of objects given by nbobjs and the objs array. nbobjs must be at least 2. The distances are stored as a one-dimension array in values. The distance from object i to object j is in slot i\*nbobjs+j.

in slot i\*nbobjs+j.

kind specifies the kind of distance as a OR'ed set of hwloc\_distances\_kind\_e. Kind HWLOC\_DISTANCES\_KIND\_HETEROGENEOU
will be automatically added if objects of different types are given.

flags configures the behavior of the function using an optional OR'ed set of hwloc\_distances\_add\_flag\_e.

#### 22.29.3.2 hwloc\_distances\_release\_remove()

Release and remove the given distance matrice from the topology.

This function includes a call to hwloc\_distances\_release().

## 22.29.3.3 hwloc\_distances\_remove()

Remove all distance matrices from a topology.

Remove all distance matrices, either provided by the user or gathered through the OS.

If these distances were used to group objects, these additional Group objects are not removed from the topology.

## 22.29.3.4 hwloc\_distances\_remove\_by\_depth()

Remove distance matrices for objects at a specific depth in the topology.

Identical to <a href="https://hww.number.num

## 22.29.3.5 hwloc\_distances\_remove\_by\_type()

Remove distance matrices for objects of a specific type in the topology.

Identical to hwloc\_distances\_remove() but only applies to one level of the topology.

# 22.30 Comparing memory node attributes for finding where to allocate on

## **Data Structures**

struct hwloc\_location

## **Typedefs**

typedef unsigned hwloc\_memattr\_id\_t

#### **Enumerations**

- enum hwloc\_memattr\_id\_e { HWLOC\_MEMATTR\_ID\_CAPACITY = 0, HWLOC\_MEMATTR\_ID\_LOCALITY = 1, HWLOC\_MEMATTR\_ID\_BANDWIDTH = 2, HWLOC\_MEMATTR\_ID\_LATENCY = 3 }
- enum hwloc\_local\_numanode\_flag\_e { HWLOC\_LOCAL\_NUMANODE\_FLAG\_LARGER\_LOCALITY = (1UL << 0), HWLOC\_LOCAL\_NUMANODE\_FLAG\_SMALLER\_LOCALITY = (1UL << 1), HWLOC\_LOCAL\_NUMANODE\_FLAG\_SMALLER\_LOCALITY = (1UL << 2) }</li>

#### **Functions**

- int hwloc\_memattr\_get\_by\_name (hwloc\_topology\_t topology, const char \*name, hwloc\_memattr\_id\_t \*id)
- int hwloc\_get\_local\_numanode\_objs (hwloc\_topology\_t topology, struct hwloc\_location \*location, unsigned \*nr, hwloc\_obj\_t \*nodes, unsigned long flags)
- int hwloc\_memattr\_get\_value (hwloc\_topology\_t topology, hwloc\_memattr\_id\_t attribute, hwloc\_obj\_t target\_node, struct hwloc\_location \*initiator, unsigned long flags, hwloc\_uint64\_t \*value)
- int hwloc\_memattr\_get\_best\_target (hwloc\_topology\_t topology, hwloc\_memattr\_id\_t attribute, struct hwloc\_location \*initiator, unsigned long flags, hwloc\_obj\_t \*best\_target, hwloc\_uint64\_t \*value)
- int hwloc\_memattr\_get\_best\_initiator (hwloc\_topology\_t topology, hwloc\_memattr\_id\_t attribute, hwloc\_obj\_t target, unsigned long flags, struct hwloc\_location \*best\_initiator, hwloc\_uint64\_t \*value)

#### 22.30.1 Detailed Description

Platforms with heterogeneous memory require ways to decide whether a buffer should be allocated on "fast" memory (such as HBM), "normal" memory (DDR) or even "slow" but large-capacity memory (non-volatile memory). These memory nodes are called "Targets" while the CPU accessing them is called the "Initiator". Access performance depends on their locality (NUMA platforms) as well as the intrinsic performance of the targets (heterogeneous platforms).

The following attributes describe the performance of memory accesses from an Initiator to a memory Target, for instance their latency or bandwidth. Initiators performing these memory accesses are usually some PUs or Cores (described as a CPU set). Hence a Core may choose where to allocate a memory buffer by comparing the attributes of different target memory nodes nearby.

There are also some attributes that are system-wide. Their value does not depend on a specific initiator performing an access. The memory node Capacity is an example of such attribute without initiator.

One way to use this API is to start with a cpuset describing the Cores where a program is bound. The best target NUMA node for allocating memory in this program on these Cores may be obtained by passing this cpuset as an initiator to <a href="https://www.nematr\_get\_best\_target">https://www.nematr\_get\_best\_target</a>() with the relevant memory attribute. For instance, if the code is latency limited, use the Latency attribute.

A more flexible approach consists in getting the list of local NUMA nodes by passing this cpuset to <a href="https://hwloc\_get\_local\_numanode\_objs">https://hwloc\_get\_local\_numanode\_objs</a>(). Attribute values for these nodes, if any, may then be obtained with <a href="https://hwloc\_memattr\_get\_value">https://hwloc\_memattr\_get\_value</a>() and manually compared with the desired criteria.

#### Note

The API also supports specific objects as initiator. This might for instance be used in the future when describing the performance of accesses from a GPU to some memory targets.

The interface actually also accepts targets that are not NUMA nodes.

# 22.30.2 Typedef Documentation

## 22.30.2.1 hwloc\_memattr\_id\_t

typedef unsigned hwloc\_memattr\_id\_t

A memory attribute identifier. May be either one of <a href="hwloc\_memattr\_id\_e">hwloc\_memattr\_id\_e</a> or a new id returned by <a href="hwloc\_memattr\_register">hwloc\_memattr\_register</a>().

# 22.30.3 Enumeration Type Documentation

## 22.30.3.1 hwloc\_local\_numanode\_flag\_e

enum hwloc\_local\_numanode\_flag\_e

Flags for selecting target NUMA nodes.

## Enumerator

HWLOC_LOCAL_NUMANODE_FLAG_LARGER_← LOCALITY	Select NUMA nodes whose locality is larger than the given cpuset. For instance, if a single PU (or its cpuset) is given in initiator, select all nodes close to the package that contains this PU.
HWLOC_LOCAL_NUMANODE_FLAG_SMALLER ← _ LOCALITY	Select NUMA nodes whose locality is smaller than the given cpuset. For instance, if a package (or its cpuset) is given in initiator, also select nodes that are attached to only a half of that package.
HWLOC_LOCAL_NUMANODE_FLAG_ALL	Select all NUMA nodes in the topology. initiator is ignored.

## 22.30.3.2 hwloc\_memattr\_id\_e

enum hwloc\_memattr\_id\_e

Memory node attributes.

#### Enumerator

HWLOC_MEMATTR_ID_CAPACITY	"Capacity". The capacity is returned in bytes (local_memory attribute in objects). Best capacity nodes are nodes with <b>higher capacity</b> .  No initiator is involved when looking at this attribute. The corresponding attribute flags are
HWLOC_MEMATTR_ID_LOCALITY	HWLOC_MEMATTR_FLAG_HIGHER_FIRST.  "Locality". The locality is returned as the number of PUs in that locality (e.g. the weight of its cpuset). Best locality nodes are nodes with smaller locality (nodes that are local to very few PUs). Poor locality nodes are nodes with larger locality (nodes that are local to the entire machine).
	the entire machine).  No initiator is involved when looking at this attribute. The corresponding attribute flags are  HWLOC_MEMATTR_FLAG_HIGHER_FIRST.

#### Enumerator

HWLOC_MEMATTR_ID_BANDWIDTH	"Bandwidth". The bandwidth is returned in MiB/s, as seen from the
	given initiator location. Best bandwidth nodes are nodes with <b>higher</b>
	bandwidth. The corresponding attribute flags are
	HWLOC_MEMATTR_FLAG_HIGHER_FIRST and
	HWLOC_MEMATTR_FLAG_NEED_INITIATOR.
HWLOC_MEMATTR_ID_LATENCY	"Latency". The latency is returned as nanoseconds, as seen from
	the given initiator location. Best latency nodes are nodes with
	smaller latency. The corresponding attribute flags are
	HWLOC_MEMATTR_FLAG_LOWER_FIRST and
	HWLOC_MEMATTR_FLAG_NEED_INITIATOR.

#### 22.30.4 Function Documentation

## 22.30.4.1 hwloc\_get\_local\_numanode\_objs()

```
int hwloc_get_local_numanode_objs (
    hwloc_topology_t topology,
    struct hwloc_location * location,
    unsigned * nr,
    hwloc_obj_t * nodes,
    unsigned long flags)
```

Return an array of local NUMA nodes.

By default only select the NUMA nodes whose locality is exactly the given location. More nodes may be selected if additional flags are given as a OR'ed set of hwloc\_local\_numanode\_flag\_e.

If location is given as an explicit object, its CPU set is used to find NUMA nodes with the corresponding locality. If the object does not have a CPU set (e.g. I/O object), the CPU parent (where the I/O object is attached) is used. On input, nr points to the number of nodes that may be stored in the nodes array. On output, nr will be changed to the number of stored nodes, or the number of nodes that would have been stored if there were enough room.

Note

Some of these NUMA nodes may not have any memory attribute values and hence not be reported as actual targets in other functions.

The number of NUMA nodes in the topology (obtained by hwloc\_bitmap\_weight() on the root object nodeset) may be used to allocate the nodes array.

When an object CPU set is given as locality, for instance a Package, and when flags contain both HWLOC\_LOCAL\_NUMANODE\_FLAG\_LARGER\_LOCALITY and HWLOC\_LOCAL\_NUMANODE\_FLAG\_SMALLER\_LOCALITY the returned array corresponds to the nodeset of that object.

#### 22.30.4.2 hwloc memattr get best initiator()

```
int hwloc_memattr_get_best_initiator (
    hwloc_topology_t topology,
    hwloc_memattr_id_t attribute,
    hwloc_obj_t target,
    unsigned long flags,
    struct hwloc_location * best_initiator,
    hwloc_uint64_t * value )
```

Return the best initiator for the given attribute and target NUMA node.

If the attribute does not relate to a specific initiator (it does not have the flag HWLOC\_MEMATTR\_FLAG\_NEED\_INITIATOR), -1 is returned and errno is set to EINVAL.

If  ${\tt value}$  is non  ${\tt NULL},$  the corresponding value is returned there.

If multiple initiators have the same attribute values, only one is returned (and there is no way to clarify how that one is chosen). Applications that want to detect initiators with identical/similar values, or that want to look at values for multiple attributes, should rather get all values using <a href="https://www.nemattr\_get\_value">https://www.nemattr\_get\_value</a>() and manually select the initiator they consider the best.

The returned initiator should not be modified or freed, it belongs to the topology.

flags must be 0 for now.

If there are no matching initiators, -1 is returned with errno set to ENOENT;

## 22.30.4.3 hwloc\_memattr\_get\_best\_target()

```
int hwloc_memattr_get_best_target (
    hwloc_topology_t topology,
    hwloc_memattr_id_t attribute,
    struct hwloc_location * initiator,
    unsigned long flags,
    hwloc_obj_t * best_target,
    hwloc_uint64_t * value )
```

Return the best target NUMA node for the given attribute and initiator.

If the attribute does not relate to a specific initiator (it does not have the flag HWLOC\_MEMATTR\_FLAG\_NEED\_INITIATOR), location initiator is ignored and may be NULL.

If value is non NULL, the corresponding value is returned there.

If multiple targets have the same attribute values, only one is returned (and there is no way to clarify how that one is chosen). Applications that want to detect targets with identical/similar values, or that want to look at values for multiple attributes, should rather get all values using <a href="https://www.nemattr\_get\_value">https://www.nemattr\_get\_value</a>() and manually select the target they consider the best.

flags must be 0 for now.

If there are no matching targets, -1 is returned with errno set to ENOENT;

# 22.30.4.4 hwloc\_memattr\_get\_by\_name()

Return the identifier of the memory attribute with the given name.

# 22.30.4.5 hwloc\_memattr\_get\_value()

Return an attribute value for a specific target NUMA node.

If the attribute does not relate to a specific initiator (it does not have the flag HWLOC\_MEMATTR\_FLAG\_NEED\_INITIATOR), location initiator is ignored and may be NULL.

flags must be 0 for now.

# 22.31 Managing memory attributes

#### **Enumerations**

enum hwloc\_memattr\_flag\_e { HWLOC\_MEMATTR\_FLAG\_HIGHER\_FIRST = (1UL << 0), HWLOC\_MEMATTR\_FLAG\_LOWE</li>
 = (1UL << 1), HWLOC\_MEMATTR\_FLAG\_NEED\_INITIATOR = (1UL << 2) }</li>

#### **Functions**

- int hwloc memattr get name (hwloc topology t topology, hwloc memattr id t attribute, const char \*\*name)
- int hwloc\_memattr\_get\_flags (hwloc\_topology\_t topology, hwloc\_memattr\_id\_t attribute, unsigned long \*flags)
- int hwloc\_memattr\_register (hwloc\_topology\_t topology, const char \*name, unsigned long flags, hwloc\_memattr\_id\_t \*id)
- int hwloc\_memattr\_set\_value (hwloc\_topology\_t topology, hwloc\_memattr\_id\_t attribute, hwloc\_obj\_t target\_node, struct hwloc\_location \*initiator, unsigned long flags, hwloc\_uint64\_t value)
- int hwloc\_memattr\_get\_targets (hwloc\_topology\_t topology, hwloc\_memattr\_id\_t attribute, struct hwloc\_location \*initiator, unsigned long flags, unsigned \*nrp, hwloc\_obj\_t \*targets, hwloc\_uint64\_t \*values)
- int hwloc\_memattr\_get\_initiators (hwloc\_topology\_t topology, hwloc\_memattr\_id\_t attribute, hwloc\_obj\_t target\_node, unsigned long flags, unsigned \*nr, struct hwloc\_location \*initiators, hwloc\_uint64\_t \*values)

## 22.31.1 Detailed Description

## 22.31.2 Enumeration Type Documentation

## 22.31.2.1 hwloc\_memattr\_flag\_e

```
enum hwloc_memattr_flag_e
```

Memory attribute flags. Given to hwloc\_memattr\_register() and returned by hwloc\_memattr\_get\_flags().

#### Enumerator

HWLOC_MEMATTR_FLAG_HIGHER_FIRST	The best nodes for this memory attribute are those with the higher values. For instance Bandwidth.
HWLOC_MEMATTR_FLAG_LOWER_FIRST	The best nodes for this memory attribute are those with the lower values. For instance Latency.
HWLOC_MEMATTR_FLAG_NEED_INITIATOR	The value returned for this memory attribute depends on the given initiator. For instance Bandwidth and Latency, but not Capacity.

#### 22.31.3 Function Documentation

#### 22.31.3.1 hwloc\_memattr\_get\_flags()

Return the flags of the given attribute.

Flags are a OR'ed set of hwloc\_memattr\_flag\_e.

## 22.31.3.2 hwloc\_memattr\_get\_initiators()

Return the initiators that have values for a given attribute for a specific target NUMA node.

Return initiators for the given attribute and target node in the initiators array. If values is not NULL, the corresponding attribute values are stored in the array it points to.

On input, nr points to the number of initiators that may be stored in the array initiators (and values). On output, nr points to the number of initiators (and values) that were actually found, even if some of them couldn't be stored in the array. Initiators that couldn't be stored are ignored, but the function still returns success (0). The caller may find out by comparing the value pointed by nr before and after the function call.

The returned initiators should not be modified or freed, they belong to the topology.

flags must be 0 for now.

If the attribute does not relate to a specific initiator (it does not have the flag HWLOC\_MEMATTR\_FLAG\_NEED\_INITIATOR), no initiator is returned.

Note

This function is meant for tools and debugging (listing internal information) rather than for application queries. Applications should rather select useful NUMA nodes with <a href="https://hww.numanode\_objs">hwloc\_get\_local\_numanode\_objs</a>() and then look at their attribute values for some relevant initiators.

#### 22.31.3.3 hwloc memattr get name()

Return the name of a memory attribute.

## 22.31.3.4 hwloc\_memattr\_get\_targets()

```
int hwloc_memattr_get_targets (
    hwloc_topology_t topology,
    hwloc_memattr_id_t attribute,
    struct hwloc_location * initiator,
    unsigned long flags,
    unsigned * nrp,
    hwloc_obj_t * targets,
    hwloc_uint64_t * values )
```

Return the target NUMA nodes that have some values for a given attribute.

Return targets for the given attribute in the targets array (for the given initiator if any). If values is not NULL, the corresponding attribute values are stored in the array it points to.

On input, nr points to the number of targets that may be stored in the array targets (and values). On output, nr points to the number of targets (and values) that were actually found, even if some of them couldn't be stored in the array. Targets that couldn't be stored are ignored, but the function still returns success (0). The caller may find out by comparing the value pointed by nr before and after the function call.

The returned targets should not be modified or freed, they belong to the topology.

Argument initiator is ignored if the attribute does not relate to a specific initiator (it does not have the flag HWLOC\_MEMATTR\_FLAG\_NEED\_INITIATOR). Otherwise initiator may be non NULL to report only targets that have a value for that initiator.

flags must be 0 for now.

Note

This function is meant for tools and debugging (listing internal information) rather than for application queries. Applications should rather select useful NUMA nodes with <a href="https://hww.numanode\_objs(">hwloc\_get\_local\_numanode\_objs()</a> and then look at their attribute values.

#### 22.31.3.5 hwloc memattr register()

Register a new memory attribute.

Add a specific memory attribute that is not defined in <a href="https://hwloc\_memattr\_id\_e">hwloc\_memattr\_id\_e</a>. Flags are a OR'ed set of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a>. It must contain at least one of <a href="https://hwloc\_memattr\_flag\_e">hwloc\_memattr\_flag\_e</a

# 22.31.3.6 hwloc\_memattr\_set\_value()

```
int hwloc_memattr_set_value (
    hwloc_topology_t topology,
    hwloc_memattr_id_t attribute,
    hwloc_obj_t target_node,
    struct hwloc_location * initiator,
    unsigned long flags,
    hwloc_uint64_t value )
```

Set an attribute value for a specific target NUMA node.

If the attribute does not relate to a specific initiator (it does not have the flag HWLOC\_MEMATTR\_FLAG\_NEED\_INITIATOR), location initiator is ignored and may be NULL.

The initiator will be copied into the topology, the caller should free anything allocated to store the initiator, for instance the cpuset.

flags must be 0 for now.

# 22.32 Linux-specific helpers

#### **Functions**

- int hwloc\_linux\_set\_tid\_cpubind (hwloc\_topology\_t topology, pid\_t tid, hwloc\_const\_cpuset\_t set)
- int hwloc\_linux\_get\_tid\_cpubind (hwloc\_topology\_t topology, pid\_t tid, hwloc\_cpuset\_t set)
- int hwloc linux get tid last cpu location (hwloc topology t topology, pid t tid, hwloc bitmap t set)
- int hwloc\_linux\_read\_path\_as\_cpumask (const char \*path, hwloc\_bitmap\_t set)

## 22.32.1 Detailed Description

This includes helpers for manipulating Linux kernel cpumap files, and hwloc equivalents of the Linux sched\_← setaffinity and sched getaffinity system calls.

#### 22.32.2 Function Documentation

#### 22.32.2.1 hwloc linux get tid cpubind()

Get the current binding of thread tid.

The behavior is exactly the same as the Linux sched getaffinity system call, but uses a hwloc cpuset.

Note

This is equivalent to calling hwloc\_get\_proc\_cpubind() with HWLOC\_CPUBIND\_THREAD as flags.

## 22.32.2.2 hwloc\_linux\_get\_tid\_last\_cpu\_location()

Get the last physical CPU where thread tid ran.

Note

This is equivalent to calling hwloc get proc last cpu location() with HWLOC CPUBIND THREAD as flags.

#### 22.32.2.3 hwloc\_linux\_read\_path\_as\_cpumask()

Convert a linux kernel cpumask file path into a hwloc bitmap set.

Might be used when reading CPU set from sysfs attributes such as topology and caches for processors, or local ← cpus for devices.

Note

This function ignores the HWLOC\_FSROOT environment variable.

## 22.32.2.4 hwloc\_linux\_set\_tid\_cpubind()

Bind a thread tid on cpus given in cpuset set.

The behavior is exactly the same as the Linux sched\_setaffinity system call, but uses a hwloc cpuset.

Note

This is equivalent to calling hwloc\_set\_proc\_cpubind() with HWLOC\_CPUBIND\_THREAD as flags.

# 22.33 Interoperability with Linux libnuma unsigned long masks

#### **Functions**

- static int hwloc\_cpuset\_to\_linux\_libnuma\_ulongs (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t cpuset, unsigned long \*mask, unsigned long \*maxnode)
- static int hwloc\_nodeset\_to\_linux\_libnuma\_ulongs (hwloc\_topology\_t topology, hwloc\_const\_nodeset\_t nodeset, unsigned long \*mask, unsigned long \*maxnode)
- static int hwloc\_cpuset\_from\_linux\_libnuma\_ulongs (hwloc\_topology\_t topology, hwloc\_cpuset\_t cpuset, const unsigned long \*mask, unsigned long maxnode)
- static int hwloc\_nodeset\_from\_linux\_libnuma\_ulongs (hwloc\_topology\_t topology, hwloc\_nodeset\_t nodeset, const unsigned long \*mask, unsigned long maxnode)

## 22.33.1 Detailed Description

This interface helps converting between Linux libnuma unsigned long masks and hwloc cpusets and nodesets.

Note

Topology topology must match the current machine.

The behavior of libnuma is undefined if the kernel is not NUMA-aware. (when CONFIG\_NUMA is not set in the kernel configuration). This helper and libnuma may thus not be strictly compatible in this case, which may be detected by checking whether numa\_available() returns -1.

## 22.33.2 Function Documentation

#### 22.33.2.1 hwloc cpuset from linux libnuma ulongs()

Convert the array of unsigned long mask into hwloc CPU set.

mask is a array of unsigned long that will be read. maxnode contains the maximal node number that may be read in mask.

This function may be used after calling get\_mempolicy or any other function that takes an array of unsigned long as output parameter (and possibly a maximal node number as input parameter).

#### 22.33.2.2 hwloc cpuset to linux libnuma ulongs()

Convert hwloc CPU set cpuset into the array of unsigned long mask.

mask is the array of unsigned long that will be filled. maxnode contains the maximal node number that may be stored in mask. maxnode will be set to the maximal node number that was found, plus one.

This function may be used before calling set\_mempolicy, mbind, migrate\_pages or any other function that takes an array of unsigned long and a maximal node number as input parameter.

## 22.33.2.3 hwloc\_nodeset\_from\_linux\_libnuma\_ulongs()

```
const unsigned long * mask,
unsigned long maxnode ) [inline], [static]
```

Convert the array of unsigned long mask into hwloc NUMA node set.

mask is a array of unsigned long that will be read. maxnode contains the maximal node number that may be read in mask.

This function may be used after calling get\_mempolicy or any other function that takes an array of unsigned long as output parameter (and possibly a maximal node number as input parameter).

### 22.33.2.4 hwloc\_nodeset\_to\_linux\_libnuma\_ulongs()

Convert hwloc NUMA node set nodeset into the array of unsigned long mask.

mask is the array of unsigned long that will be filled. maxnode contains the maximal node number that may be stored in mask. maxnode will be set to the maximal node number that was found, plus one.

This function may be used before calling set\_mempolicy, mbind, migrate\_pages or any other function that takes an array of unsigned long and a maximal node number as input parameter.

# 22.34 Interoperability with Linux libnuma bitmask

#### **Functions**

- static struct bitmask \* hwloc\_cpuset\_to\_linux\_libnuma\_bitmask (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t cpuset)
- static struct bitmask \* hwloc\_nodeset\_to\_linux\_libnuma\_bitmask (hwloc\_topology\_t topology, hwloc\_const\_nodeset\_t nodeset)
- static int hwloc\_cpuset\_from\_linux\_libnuma\_bitmask (hwloc\_topology\_t topology, hwloc\_cpuset\_t cpuset, const struct bitmask \*bitmask)
- static int hwloc\_nodeset\_from\_linux\_libnuma\_bitmask (hwloc\_topology\_t topology, hwloc\_nodeset\_t nodeset, const struct bitmask \*bitmask)

## 22.34.1 Detailed Description

This interface helps converting between Linux libnuma bitmasks and hwloc cpusets and nodesets.

Note

Topology topology must match the current machine.

The behavior of libnuma is undefined if the kernel is not NUMA-aware. (when CONFIG\_NUMA is not set in the kernel configuration). This helper and libnuma may thus not be strictly compatible in this case, which may be detected by checking whether numa\_available() returns -1.

## 22.34.2 Function Documentation

#### 22.34.2.1 hwloc\_cpuset\_from\_linux\_libnuma\_bitmask()

Convert libnuma bitmask bitmask into hwloc CPU set cpuset.

This function may be used after calling many numa functions that use a struct bitmask as an output parameter.

## 22.34.2.2 hwloc\_cpuset\_to\_linux\_libnuma\_bitmask()

Convert hwloc CPU set cpuset into the returned libnuma bitmask.

The returned bitmask should later be freed with numa\_bitmask\_free.

This function may be used before calling many numa\_functions that use a struct bitmask as an input parameter.

Returns

newly allocated struct bitmask.

## 22.34.2.3 hwloc\_nodeset\_from\_linux\_libnuma\_bitmask()

Convert libnuma bitmask bitmask into hwloc NUMA node set nodeset.

This function may be used after calling many numa\_functions that use a struct bitmask as an output parameter.

## 22.34.2.4 hwloc\_nodeset\_to\_linux\_libnuma\_bitmask()

Convert hwloc NUMA node set nodeset into the returned libnuma bitmask.

The returned bitmask should later be freed with numa\_bitmask\_free.

This function may be used before calling many numa\_functions that use a struct bitmask as an input parameter.

## Returns

newly allocated struct bitmask.

# 22.35 Interoperability with glibc sched affinity

#### **Functions**

- static int hwloc\_cpuset\_to\_glibc\_sched\_affinity (hwloc\_topology\_t topology, hwloc\_const\_cpuset\_t hwlocset, cpu\_set\_t \*schedset, size\_t schedsetsize)
- static int hwloc\_cpuset\_from\_glibc\_sched\_affinity (hwloc\_topology\_t topology, hwloc\_cpuset\_t hwlocset, const cpu\_set\_t \*schedset, size\_t schedsetsize)

## 22.35.1 Detailed Description

This interface offers ways to convert between hwloc cpusets and glibc cpusets such as those manipulated by sched getaffinity() or pthread attr setaffinity np().

Note

Topology topology must match the current machine.

#### 22.35.2 Function Documentation

#### 22.35.2.1 hwloc\_cpuset\_from\_glibc\_sched\_affinity()

Convert glibc sched affinity CPU set schedset into hwloc CPU set.

This function may be used before calling sched\_setaffinity or any other function that takes a cpu\_set\_t as input parameter.

schedsetsize should be sizeof(cpu\_set\_t) unless schedset was dynamically allocated with CPU\_ALLOC

#### 22.35.2.2 hwloc\_cpuset\_to\_glibc\_sched\_affinity()

Convert hwloc CPU set toposet into glibc sched affinity CPU set schedset.

This function may be used before calling sched\_setaffinity or any other function that takes a cpu\_set\_t as input parameter.

schedsetsize should be sizeof(cpu\_set\_t) unless schedset was dynamically allocated with CPU ALLOC

# 22.36 Interoperability with OpenCL

#### **Functions**

- static int hwloc\_opencl\_get\_device\_pci\_busid (cl\_device\_id device, unsigned \*domain, unsigned \*bus, unsigned \*dev, unsigned \*func)
- static int hwloc\_opencl\_get\_device\_cpuset (hwloc\_topology\_t topology, cl\_device\_id device, hwloc\_cpuset\_t set)
- static hwloc\_obj\_t hwloc\_opencl\_get\_device\_osdev\_by\_index (hwloc\_topology\_t topology, unsigned platform\_index, unsigned device\_index)
- static hwloc\_obj\_t hwloc\_opencl\_get\_device\_osdev (hwloc\_topology\_t topology, cl\_device\_id device)

## 22.36.1 Detailed Description

This interface offers ways to retrieve topology information about OpenCL devices.

Only AMD and NVIDIA OpenCL implementations currently offer useful locality information about their devices.

#### 22.36.2 Function Documentation

## 22.36.2.1 hwloc\_opencl\_get\_device\_cpuset()

Get the CPU set of processors that are physically close to OpenCL device device.

Return the CPU set describing the locality of the OpenCL device device.

Topology topology and device device must match the local machine. I/O devices detection and the OpenCL component are not needed in the topology.

The function only returns the locality of the device. If more information about the device is needed, OS objects should be used instead, see <a href="https://hww.nuber.com/hwloc\_opencl\_get\_device\_osdev">hwloc\_opencl\_get\_device\_osdev</a>\_by\_index(). This function is currently only implemented in a meaningful way for Linux with the AMD or NVIDIA OpenCL implementation; other systems will simply get a full cpuset.

## 22.36.2.2 hwloc\_opencl\_get\_device\_osdev()

Get the hwloc OS device object corresponding to OpenCL device deviceX.

Use OpenCL device attributes to find the corresponding hwloc OS device object. Return NULL if there is none or if useful attributes are not available.

This function currently only works on AMD and NVIDIA OpenCL devices that support relevant OpenCL extensions. hwloc\_opencl\_get\_device\_osdev\_by\_index() should be preferred whenever possible, i.e. when platform and device index are known.

Topology topology and device device must match the local machine. I/O devices detection and the Open CL component must be enabled in the topology. If not, the locality of the object may still be found using hwloc opencl get device cpuset().

Note

This function cannot work if PCI devices are filtered out.

The corresponding hwloc PCI device may be found by looking at the result parent pointer (unless PCI devices are filtered out).

#### 22.36.2.3 hwloc\_opencl\_get\_device\_osdev\_by\_index()

Get the hwloc OS device object corresponding to the OpenCL device for the given indexes.

Return the OS device object describing the OpenCL device whose platform index is platform\_index, and whose device index within this platform if device\_index. Return NULL if there is none.

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection and the OpenCL component must be enabled in the topology.

Note

The corresponding PCI device object can be obtained by looking at the OS device parent object (unless PCI devices are filtered out).

#### 22.36.2.4 hwloc opencl get device pci busid()

Return the domain, bus and device IDs of the OpenCL device device.

Device device must match the local machine.

# 22.37 Interoperability with the CUDA Driver API

#### **Functions**

- static int hwloc\_cuda\_get\_device\_pci\_ids (hwloc\_topology\_t topology, CUdevice cudevice, int \*domain, int \*bus, int \*dev)
- static int hwloc\_cuda\_get\_device\_cpuset (hwloc\_topology\_t topology, CUdevice cudevice, hwloc\_cpuset\_t set)
- static hwloc obj t hwloc cuda get device pcidev (hwloc topology t topology, CUdevice cudevice)
- static hwloc obj t hwloc cuda get device osdev (hwloc topology t topology, CUdevice cudevice)
- static hwloc obj t hwloc cuda get device osdev by index (hwloc topology t topology, unsigned idx)

## 22.37.1 Detailed Description

This interface offers ways to retrieve topology information about CUDA devices when using the CUDA Driver API.

#### 22.37.2 Function Documentation

#### 22.37.2.1 hwloc cuda get device cpuset()

Get the CPU set of processors that are physically close to device cudevice.

Return the CPU set describing the locality of the CUDA device cudevice.

Topology topology and device cudevice must match the local machine. I/O devices detection and the CUDA component are not needed in the topology.

The function only returns the locality of the device. If more information about the device is needed, OS objects should be used instead, see <a href="https://www.nuber.com/www.nuber.co

This function is currently only implemented in a meaningful way for Linux; other systems will simply get a full cpuset.

## 22.37.2.2 hwloc\_cuda\_get\_device\_osdev()

Get the hwloc OS device object corresponding to CUDA device cudevice.

Return the hwloc OS device object that describes the given CUDA device <code>cudevice</code>. Return NULL if there is none.

Topology topology and device cudevice must match the local machine. I/O devices detection and the  $C \leftarrow UDA$  component must be enabled in the topology. If not, the locality of the object may still be found using hwloc cuda get device cpuset().

Note

This function cannot work if PCI devices are filtered out.

The corresponding hwloc PCI device may be found by looking at the result parent pointer (unless PCI devices are filtered out).

## 22.37.2.3 hwloc\_cuda\_get\_device\_osdev\_by\_index()

Get the hwloc OS device object corresponding to the CUDA device whose index is idx.

Return the OS device object describing the CUDA device whose index is idx. Return NULL if there is none.

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection and the CUDA component must be enabled in the topology.

Note

The corresponding PCI device object can be obtained by looking at the OS device parent object (unless PCI devices are filtered out).

This function is identical to hwloc\_cudart\_get\_device\_osdev\_by\_index().

## 22.37.2.4 hwloc\_cuda\_get\_device\_pci\_ids()

Return the domain, bus and device IDs of the CUDA device cudevice.

Device cudevice must match the local machine.

## 22.37.2.5 hwloc cuda get device pcidev()

Get the hwloc PCI device object corresponding to the CUDA device cudevice.

Return the PCI device object describing the CUDA device cudevice. Return NULL if there is none.

Topology topology and device cudevice must match the local machine. I/O devices detection must be enabled in topology topology. The CUDA component is not needed in the topology.

# 22.38 Interoperability with the CUDA Runtime API

#### **Functions**

- static int hwloc\_cudart\_get\_device\_pci\_ids (hwloc\_topology\_t topology, int idx, int \*domain, int \*bus, int \*dev)
- static int hwloc\_cudart\_get\_device\_cpuset (hwloc\_topology\_t topology, int idx, hwloc\_cpuset\_t set)
- static hwloc obj t hwloc cudart get device pcidev (hwloc topology t topology, int idx)
- static hwloc\_obj\_t hwloc\_cudart\_get\_device\_osdev\_by\_index (hwloc\_topology\_t topology, unsigned idx)

## 22.38.1 Detailed Description

This interface offers ways to retrieve topology information about CUDA devices when using the CUDA Runtime API.

#### 22.38.2 Function Documentation

## 22.38.2.1 hwloc\_cudart\_get\_device\_cpuset()

Get the CPU set of processors that are physically close to device idx.

Return the CPU set describing the locality of the CUDA device whose index is idx.

Topology topology and device idx must match the local machine. I/O devices detection and the CUDA component are not needed in the topology.

The function only returns the locality of the device. If more information about the device is needed, OS objects should be used instead, see <a href="https://hww.needed.com/hww.needed.co

This function is currently only implemented in a meaningful way for Linux; other systems will simply get a full cpuset.

#### 22.38.2.2 hwloc\_cudart\_get\_device\_osdev\_by\_index()

Get the hwloc OS device object corresponding to the CUDA device whose index is idx.

Return the OS device object describing the CUDA device whose index is idx. Return NULL if there is none.

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection and the CUDA component must be enabled in the topology. If not, the locality of the object may still be found using hwloc\_cudart\_get\_device\_cpuset().

Note

The corresponding PCI device object can be obtained by looking at the OS device parent object (unless PCI devices are filtered out).

This function is identical to hwloc\_cuda\_get\_device\_osdev\_by\_index().

## 22.38.2.3 hwloc cudart get device pci ids()

```
static int hwloc_cudart_get_device_pci_ids (
    hwloc_topology_t topology,
    int idx,
    int * domain,
    int * bus,
    int * dev ) [inline], [static]
```

Return the domain, bus and device IDs of the CUDA device whose index is idx.

Device index idx must match the local machine.

# 22.38.2.4 hwloc\_cudart\_get\_device\_pcidev()

Get the hwloc PCI device object corresponding to the CUDA device whose index is idx.

Return the PCI device object describing the CUDA device whose index is idx. Return NULL if there is none.

Topology topology and device idx must match the local machine. I/O devices detection must be enabled in topology topology. The CUDA component is not needed in the topology.

# 22.39 Interoperability with the NVIDIA Management Library

#### **Functions**

- static int hwloc\_nvml\_get\_device\_cpuset (hwloc\_topology\_t topology, nvmlDevice\_t device, hwloc\_cpuset\_t set)
- static hwloc obj t hwloc nvml get device osdev by index (hwloc topology t topology, unsigned idx)
- static hwloc\_obj\_t hwloc\_nvml\_get\_device\_osdev (hwloc\_topology\_t topology, nvmlDevice\_t device)

# 22.39.1 Detailed Description

This interface offers ways to retrieve topology information about devices managed by the NVIDIA Management Library (NVML).

## 22.39.2 Function Documentation

#### 22.39.2.1 hwloc nvml get device cpuset()

Get the CPU set of processors that are physically close to NVML device device.

Return the CPU set describing the locality of the NVML device device.

Topology topology and device device must match the local machine. I/O devices detection and the NVML component are not needed in the topology.

The function only returns the locality of the device. If more information about the device is needed, OS objects should be used instead, see <a href="https://www.nwl\_get\_device\_osdev">hwloc\_nvml\_get\_device\_osdev</a> and <a href="hwloc\_nvml\_get\_device\_osdev">hwloc\_nvml\_get\_device\_osdev</a> by \_index().

This function is currently only implemented in a meaningful way for Linux; other systems will simply get a full cpuset.

## 22.39.2.2 hwloc nvml get device osdev()

Get the hwloc OS device object corresponding to NVML device device.

Return the hwloc OS device object that describes the given NVML device device. Return NULL if there is none. Topology topology and device device must match the local machine. I/O devices detection and the N $\leftarrow$  VML component must be enabled in the topology. If not, the locality of the object may still be found using hwloc nvml get device cpuset().

Note

The corresponding hwloc PCI device may be found by looking at the result parent pointer (unless PCI devices are filtered out).

## 22.39.2.3 hwloc\_nvml\_get\_device\_osdev\_by\_index()

Get the hwloc OS device object corresponding to the NVML device whose index is idx.

Return the OS device object describing the NVML device whose index is idx. Returns NULL if there is none.

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection and the NVML component must be enabled in the topology.

## Note

The corresponding PCI device object can be obtained by looking at the OS device parent object (unless PCI devices are filtered out).

# 22.40 Interoperability with the ROCm SMI Management Library

#### **Functions**

- static int hwloc\_rsmi\_get\_device\_cpuset (hwloc\_topology\_t topology, uint32\_t dv\_ind, hwloc\_cpuset\_t set)
- static hwloc\_obj\_t hwloc\_rsmi\_get\_device\_osdev\_by\_index (hwloc\_topology\_t topology, uint32\_t dv\_ind)
- · static hwloc obj t hwloc rsmi get device osdev (hwloc topology t topology, uint32 t dv ind)

## 22.40.1 Detailed Description

This interface offers ways to retrieve topology information about devices managed by the ROCm SMI Management Library.

#### 22.40.2 Function Documentation

#### 22.40.2.1 hwloc rsmi get device cpuset()

Get the CPU set of logical processors that are physically close to AMD GPU device whose index is dv\_ind.

Return the CPU set describing the locality of the AMD GPU device whose index is dv\_ind.

Topology topology and device dv\_ind must match the local machine. I/O devices detection and the ROCm SMI component are not needed in the topology.

The function only returns the locality of the device. If more information about the device is needed, OS objects should be used instead, see hwloc rsmi get device osdev() and hwloc rsmi get device osdev by index().

This function is currently only implemented in a meaningful way for Linux; other systems will simply get a full cpuset.

#### 22.40.2.2 hwloc rsmi get device osdev()

Get the hwloc OS device object corresponding to AMD GPU device, whose index is dv\_ind.

Return the hwloc OS device object that describes the given AMD GPU, whose index is dv\_ind Return NULL if there is none.

Topology topology and device  $dv\_ind$  must match the local machine. I/O devices detection and the RO $\leftarrow$  Cm SMI component must be enabled in the topology. If not, the locality of the object may still be found using hwloc\_rsmi\_get\_device\_cpuset().

Note

The corresponding hwloc PCI device may be found by looking at the result parent pointer (unless PCI devices are filtered out).

# 22.40.2.3 hwloc\_rsmi\_get\_device\_osdev\_by\_index()

Get the hwloc OS device object corresponding to the AMD GPU device whose index is dv\_ind.

Return the OS device object describing the AMD GPU device whose index is  $dv\_ind$ . Returns NULL if there is none.

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection and the ROCm SMI component must be enabled in the topology.

Note

The corresponding PCI device object can be obtained by looking at the OS device parent object (unless PCI devices are filtered out).

# 22.41 Interoperability with OpenGL displays

#### **Functions**

- static hwloc\_obj\_t hwloc\_gl\_get\_display\_osdev\_by\_port\_device (hwloc\_topology\_t topology, unsigned port, unsigned device)
- static hwloc\_obj\_t hwloc\_gl\_get\_display\_osdev\_by\_name (hwloc\_topology\_t topology, const char \*name)
- static int hwloc\_gl\_get\_display\_by\_osdev (hwloc\_topology\_t topology, hwloc\_obj\_t osdev, unsigned \*port, unsigned \*device)

## 22.41.1 Detailed Description

This interface offers ways to retrieve topology information about OpenGL displays.

Only the NVIDIA display locality information is currently available, using the NV-CONTROL X11 extension and the NVCtrl library.

## 22.41.2 Function Documentation

#### 22.41.2.1 hwloc\_gl\_get\_display\_by\_osdev()

Get the OpenGL display port and device corresponding to the given hwloc OS object.

Return the OpenGL display port (server) in port and device (screen) in screen that correspond to the given hwloc OS device object. Return -1 if there is none.

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection and the GL component must be enabled in the topology.

## 22.41.2.2 hwloc\_gl\_get\_display\_osdev\_by\_name()

Get the hwloc OS device object corresponding to the OpenGL display given by name.

Return the OS device object describing the OpenGL display whose name is name, built as ":port.device" such as ":0.0". Return NULL if there is none.

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection and the GL component must be enabled in the topology.

Note

The corresponding PCI device object can be obtained by looking at the OS device parent object (unless PCI devices are filtered out).

#### 22.41.2.3 hwloc\_gl\_get\_display\_osdev\_by\_port\_device()

Get the hwloc OS device object corresponding to the OpenGL display given by port and device index.

Return the OS device object describing the OpenGL display whose port (server) is port and device (screen) is device. Return NULL if there is none.

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection and the GL component must be enabled in the topology.

Note

The corresponding PCI device object can be obtained by looking at the OS device parent object (unless PCI devices are filtered out).

# 22.42 Interoperability with OpenFabrics

#### **Functions**

- static int hwloc\_ibv\_get\_device\_cpuset (hwloc\_topology\_t topology, struct ibv\_device \*ibdev, hwloc\_cpuset\_t set)
- static hwloc obj t hwloc ibv get device osdev by name (hwloc topology t topology, const char \*ibname)
- static hwloc\_obj\_t hwloc\_ibv\_get\_device\_osdev (hwloc\_topology\_t topology, struct ibv\_device \*ibdev)

# 22.42.1 Detailed Description

This interface offers ways to retrieve topology information about OpenFabrics devices (InfiniBand, Omni-Path, us⇔ NIC, etc).

#### 22.42.2 Function Documentation

#### 22.42.2.1 hwloc ibv get device cpuset()

Get the CPU set of processors that are physically close to device ibdev.

Return the CPU set describing the locality of the OpenFabrics device ibdev (InfiniBand, etc).

Topology topology and device ibdev must match the local machine. I/O devices detection is not needed in the topology.

The function only returns the locality of the device. If more information about the device is needed, OS objects should be used instead, see <a href="https://www.needed.com/bw\_get\_device\_osdev">https://www.needed.com/bw\_get\_device\_osdev</a>, and <a href="https://www.needed.com/bw\_get\_device\_osdev">https://www.needed.com/bw\_get\_device\_osdev</a>, and <a href="https://www.needed.com/bw\_get\_device\_osdev">https://www.needed.com/bw\_get\_device\_osdev</a>), and <a href="https://www.needed.com/bw\_get\_device\_osdev">https://www.needed.com/bw\_get\_device\_osdev</a>).

This function is currently only implemented in a meaningful way for Linux; other systems will simply get a full cpuset.

#### 22.42.2.2 hwloc ibv get device osdev()

Get the hwloc OS device object corresponding to the OpenFabrics device ibdev.

Return the OS device object describing the OpenFabrics device ibdev (InfiniBand, etc). Returns NULL if there is none

Topology topology and device ibdev must match the local machine. I/O devices detection must be enabled in the topology. If not, the locality of the object may still be found using hwloc\_ibv\_get\_device\_cpuset().

Note

The corresponding PCI device object can be obtained by looking at the OS device parent object.

#### 22.42.2.3 hwloc\_ibv\_get\_device\_osdev\_by\_name()

Get the hwloc OS device object corresponding to the OpenFabrics device named ibname.

Return the OS device object describing the OpenFabrics device (InfiniBand, Omni-Path, usNIC, etc) whose name is ibname (mlx5\_0, hfi1\_0, usnic\_0, qib0, etc). Returns NULL if there is none. The name ibname is usually obtained from ibv\_get\_device\_name().

The topology topology does not necessarily have to match the current machine. For instance the topology may be an XML import of a remote host. I/O devices detection must be enabled in the topology.

Note

The corresponding PCI device object can be obtained by looking at the OS device parent object.

# 22.43 Topology differences

#### **Data Structures**

- union hwloc\_topology\_diff\_obj\_attr\_u
- · union hwloc topology diff u

#### **Typedefs**

- typedef enum hwloc\_topology\_diff\_obj\_attr\_type\_e hwloc\_topology\_diff\_obj\_attr\_type\_t
- typedef enum hwloc\_topology\_diff\_type\_e hwloc\_topology\_diff\_type\_t
- typedef union hwloc\_topology\_diff\_u \* hwloc\_topology\_diff\_t

#### **Enumerations**

- enum hwloc\_topology\_diff\_obj\_attr\_type\_e { HWLOC\_TOPOLOGY\_DIFF\_OBJ\_ATTR\_SIZE, HWLOC\_TOPOLOGY\_DIFF\_OBJ\_ATTR\_INFO }
- enum hwloc\_topology\_diff\_type\_e { HWLOC\_TOPOLOGY\_DIFF\_OBJ\_ATTR, HWLOC\_TOPOLOGY\_DIFF\_TOO\_COMPLEX
- enum hwloc\_topology\_diff\_apply\_flags\_e { HWLOC\_TOPOLOGY\_DIFF\_APPLY\_REVERSE }

#### **Functions**

- int hwloc\_topology\_diff\_build (hwloc\_topology\_t topology, hwloc\_topology\_t newtopology, unsigned long flags, hwloc\_topology\_diff\_t \*diff)
- int hwloc\_topology\_diff\_apply (hwloc\_topology\_t topology, hwloc\_topology\_diff\_t diff, unsigned long flags)
- int hwloc\_topology\_diff\_destroy (hwloc\_topology\_diff\_t diff)
- int hwloc\_topology\_diff\_load\_xml (const char \*xmlpath, hwloc\_topology\_diff\_t \*diff, char \*\*refname)
- int hwloc topology diff export xml (hwloc topology diff t diff, const char \*refname, const char \*xmlpath)
- int hwloc\_topology\_diff\_load\_xmlbuffer (const char \*xmlbuffer, int buflen, hwloc\_topology\_diff\_t \*diff, char \*\*refname)
- int hwloc\_topology\_diff\_export\_xmlbuffer (hwloc\_topology\_diff\_t diff, const char \*refname, char \*\*xmlbuffer, int \*buflen)

#### 22.43.1 Detailed Description

Applications that manipulate many similar topologies, for instance one for each node of a homogeneous cluster, may want to compress topologies to reduce the memory footprint.

This file offers a way to manipulate the difference between topologies and export/import it to/from XML. Compression may therefore be achieved by storing one topology entirely while the others are only described by their differences with the former. The actual topology can be reconstructed when actually needed by applying the precomputed difference to the reference topology.

This interface targets very similar nodes. Only very simple differences between topologies are actually supported, for instance a change in the memory size, the name of the object, or some info attribute. More complex differences such as adding or removing objects cannot be represented in the difference structures and therefore return errors. Differences between object sets or topology-wide allowed sets, cannot be represented either.

It means that there is no need to apply the difference when looking at the tree organization (how many levels, how many objects per level, what kind of objects, CPU and node sets, etc) and when binding to objects. However the difference must be applied when looking at object attributes such as the name, the memory size or info attributes.

#### 22.43.2 Typedef Documentation

#### 22.43.2.1 hwloc\_topology\_diff\_obj\_attr\_type\_t

typedef enum hwloc\_topology\_diff\_obj\_attr\_type\_e hwloc\_topology\_diff\_obj\_attr\_type\_t Type of one object attribute difference.

#### 22.43.2.2 hwloc\_topology\_diff\_t

typedef union hwloc\_topology\_diff\_u \* hwloc\_topology\_diff\_t

One element of a difference list between two topologies.

#### 22.43.2.3 hwloc\_topology\_diff\_type\_t

 ${\tt typedef\ enum\ hwloc\_topology\_diff\_type\_e\ hwloc\_topology\_diff\_type\_t}$ 

Type of one element of a difference list.

#### 22.43.3 Enumeration Type Documentation

#### 22.43.3.1 hwloc\_topology\_diff\_apply\_flags\_e

 $\verb"enum hwloc_topology_diff_apply_flags_e"$ 

Flags to be given to hwloc\_topology\_diff\_apply().

#### Enumerator

HWLOC_TOPOLOGY_DIFF_APPLY_REVERSE	Apply topology diff in reverse direction.
-----------------------------------	---

#### 22.43.3.2 hwloc\_topology\_diff\_obj\_attr\_type\_e

enum hwloc\_topology\_diff\_obj\_attr\_type\_e

Type of one object attribute difference.

#### Enumerator

HWLOC_TOPOLOGY_DIFF_OBJ_ATTR_SIZE	The object local memory is modified. The union is a hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_uint64_s (and the index field is ignored).
HWLOC_TOPOLOGY_DIFF_OBJ_ATTR_NAME	The object name is modified. The union is a hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_string_s (and the name field is ignored).
HWLOC_TOPOLOGY_DIFF_OBJ_ATTR_INFO	the value of an info attribute is modified. The union is a hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_string_s.

#### 22.43.3.3 hwloc\_topology\_diff\_type\_e

enum hwloc\_topology\_diff\_type\_e

Type of one element of a difference list.

#### Enumerator

HWLOC_TOPOLOGY_DIFF_OBJ_ATTR	An object attribute was changed. The union is a hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s.
HWLOC_TOPOLOGY_DIFF_TOO_COMPLEX	The difference is too complex, it cannot be represented. The difference below this object has not been checked. hwloc_topology_diff_build() will return 1. The union is a hwloc_topology_diff_u::hwloc_topology_diff_too_complex_s.

#### 22.43.4 Function Documentation

#### 22.43.4.1 hwloc\_topology\_diff\_apply()

```
int hwloc_topology_diff_apply (
          hwloc_topology_t topology,
          hwloc_topology_diff_t diff,
          unsigned long flags )
```

Apply a topology diff to an existing topology.

flags is an OR'ed set of hwloc\_topology\_diff\_apply\_flags\_e.

The new topology is modified in place. hwloc\_topology\_dup() may be used to duplicate it before patching. If the difference cannot be applied entirely, all previous applied elements are unapplied before returning.

Returns

0 on success.

-N if applying the difference failed while trying to apply the N-th part of the difference. For instance -1 is returned if the very first difference element could not be applied.

#### 22.43.4.2 hwloc topology diff build()

```
int hwloc_topology_diff_build (
          hwloc_topology_t topology,
          hwloc_topology_t newtopology,
          unsigned long flags,
          hwloc_topology_diff_t * diff )
```

Compute the difference between 2 topologies.

The difference is stored as a list of hwloc\_topology\_diff\_t entries starting at diff. It is computed by doing a depth-first traversal of both topology trees simultaneously.

If the difference between 2 objects is too complex to be represented (for instance if some objects have different types, or different numbers of children), a special diff entry of type HWLOC\_TOPOLOGY\_DIFF\_TOO\_COMPLEX is queued. The computation of the diff does not continue below these objects. So each such diff entry means that the difference between two subtrees could not be computed.

#### Returns

0 if the difference can be represented properly.

0 with diff pointing to NULL if there is no difference between the topologies.

1 if the difference is too complex (see above). Some entries in the list will be of type HWLOC\_TOPOLOGY\_DIFF\_TOO\_COMPLE

-1 on any other error.

#### Note

flags is currently not used. It should be 0.

The output diff has to be freed with <a href="https://hww.nc.gov/hwloc\_topology\_diff\_destroy">hwloc\_topology\_diff\_destroy</a>().

The output diff can only be exported to XML or passed to hwloc\_topology\_diff\_apply() if 0 was returned, i.e. if no entry of type HWLOC\_TOPOLOGY\_DIFF\_TOO\_COMPLEX is listed.

The output diff may be modified by removing some entries from the list. The removed entries should be freed by passing them to to hwloc\_topology\_diff\_destroy() (possible as another list).

#### 22.43.4.3 hwloc\_topology\_diff\_destroy()

```
int hwloc_topology_diff_destroy ( {\tt hwloc\_topology\_diff\_t~\textit{diff}~)}
```

Destroy a list of topology differences.

#### 22.43.4.4 hwloc\_topology\_diff\_export\_xml()

```
int hwloc_topology_diff_export_xml (
          hwloc_topology_diff_t diff,
          const char * refname,
          const char * xmlpath )
```

Export a list of topology differences to a XML file.

If not NULL, refname defines an identifier string for the reference topology which was used as a base when computing this difference. This identifier is usually the name of the other XML file that contains the reference topology. This attribute is given back when reading the diff from XML.

#### 22.43.4.5 hwloc topology diff export xmlbuffer()

Export a list of topology differences to a XML buffer.

If not NULL, refname defines an identifier string for the reference topology which was used as a base when computing this difference. This identifier is usually the name of the other XML file that contains the reference topology. This attribute is given back when reading the diff from XML.

The returned buffer ends with a \0 that is included in the returned length.

Note

The XML buffer should later be freed with <a href="https://hww.nc.gree\_xmlbuffer">hwloc\_free\_xmlbuffer</a>().

#### 22.43.4.6 hwloc\_topology\_diff\_load\_xml()

Load a list of topology differences from a XML file.

If not NULL, refname will be filled with the identifier string of the reference topology for the difference file, if any was specified in the XML file. This identifier is usually the name of the other XML file that contains the reference topology.

Note

the pointer returned in refname should later be freed by the caller.

#### 22.43.4.7 hwloc\_topology\_diff\_load\_xmlbuffer()

Load a list of topology differences from a XML buffer.

If not NULL, refname will be filled with the identifier string of the reference topology for the difference file, if any was specified in the XML file. This identifier is usually the name of the other XML file that contains the reference topology.

Note

the pointer returned in refname should later be freed by the caller.

# 22.44 Sharing topologies between processes

#### **Functions**

- int hwloc\_shmem\_topology\_get\_length (hwloc\_topology\_t topology, size\_t \*lengthp, unsigned long flags)
- int hwloc\_shmem\_topology\_write (hwloc\_topology\_t topology, int fd, hwloc\_uint64\_t fileoffset, void \*mmap
   \_address, size\_t length, unsigned long flags)
- int hwloc\_shmem\_topology\_adopt (hwloc\_topology\_t \*topologyp, int fd, hwloc\_uint64\_t fileoffset, void \*mmap address, size t length, unsigned long flags)

#### 22.44.1 Detailed Description

These functions are used to share a topology between processes by duplicating it into a file-backed shared-memory buffer

The master process must first get the required shared-memory size for storing this topology with hwloc\_shmem\_topology\_get\_length() Then it must find a virtual memory area of that size that is available in all processes (identical virtual addresses in all processes). On Linux, this can be done by comparing holes found in /proc/<pid>/maps for each process.

Once found, it must open a destination file for storing the buffer, and pass it to hwloc\_shmem\_topology\_write() together with virtual memory address and length obtained above.

Other processes may then adopt this shared topology by opening the same file and passing it to <a href="https://hww.cc.shmem\_topology\_adopt">hwloc\_shmem\_topology\_adopt</a>() with the exact same virtual memory address and length.

#### 22.44.2 Function Documentation

#### 22.44.2.1 hwloc shmem topology adopt()

```
int hwloc_shmem_topology_adopt (
          hwloc_topology_t * topologyp,
          int fd,
          hwloc_uint64_t fileoffset,
          void * mmap_address,
          size_t length,
          unsigned long flags )
```

Adopt a shared memory topology stored in a file.

Map a file in virtual memory and adopt the topology that was previously stored there with hwloc\_shmem\_topology\_write(). The returned adopted topology in topologyp can be used just like any topology. And it must be destroyed with hwloc\_topology\_destroy() as usual.

However the topology is read-only. For instance, it cannot be modified with <a href="hwloc\_topology\_restrict">hwloc\_topology\_restrict</a>() and object userdata pointers cannot be changed.

The segment of the file pointed by descriptor fd, starting at offset fileoffset, and of length length (in bytes), will be mapped at virtual address mmap\_address.

The file pointed by descriptor fd, the offset fileoffset, the requested mapping virtual address  $mmap\_\leftarrow address$  and the length length must be identical to what was given to hwloc\_shmem\_topology\_write() earlier.

#### Note

Flags flags are currently unused, must be 0.

The object userdata pointer should not be used unless the process that created the shared topology also placed userdata-pointed buffers in shared memory.

This function takes care of calling hwloc\_topology\_abi\_check().

#### Returns

-1 with errno set to EBUSY if the virtual memory mapping defined by mmap\_address and length isn't available in the process.

- -1 with errno set to EINVAL if fileoffset, mmap\_address or length aren't page-aligned, or do not match what was given to hwloc\_shmem\_topology\_write() earlier.
- -1 with errno set to EINVAL if the layout of the topology structure is different between the writer process and the adopter process.

#### 22.44.2.2 hwloc\_shmem\_topology\_get\_length()

Get the required shared memory length for storing a topology.

This length (in bytes) must be used in hwloc\_shmem\_topology\_write() and hwloc\_shmem\_topology\_adopt() later.

Note

Flags flags are currently unused, must be 0.

#### 22.44.2.3 hwloc\_shmem\_topology\_write()

```
int hwloc_shmem_topology_write (
    hwloc_topology_t topology,
    int fd,
    hwloc_uint64_t fileoffset,
    void * mmap_address,
    size_t length,
    unsigned long flags )
```

Duplicate a topology to a shared memory file.

Temporarily map a file in virtual memory and duplicate the topology topology by allocating duplicates in there. The segment of the file pointed by descriptor fd, starting at offset fileoffset, and of length length (in bytes), will be temporarily mapped at virtual address mmap\_address during the duplication.

The mapping length length must have been previously obtained with hwloc\_shmem\_topology\_get\_length() and the topology must not have been modified in the meantime.

#### Note

Flags flags are currently unused, must be 0.

The object userdata pointer is duplicated but the pointed buffer is not. However the caller may also allocate it manually in shared memory to share it as well.

#### Returns

- -1 with errno set to EBUSY if the virtual memory mapping defined by mmap\_address and length isn't available in the process.
- -1 with errno set to EINVAL if fileoffset, mmap\_address or length aren't page-aligned.

# 22.45 Components and Plugins: Discovery components

# **Data Structures**

• struct hwloc\_disc\_component

# 22.45.1 Detailed Description

# 22.46 Components and Plugins: Discovery backends

#### **Data Structures**

- struct hwloc\_disc\_status
- · struct hwloc backend

#### **Typedefs**

· typedef enum hwloc disc phase e hwloc disc phase t

#### **Enumerations**

```
    enum hwloc_disc_phase_e {
        HWLOC_DISC_PHASE_GLOBAL, HWLOC_DISC_PHASE_CPU, HWLOC_DISC_PHASE_MEMORY,
        HWLOC_DISC_PHASE_PCI,
        HWLOC_DISC_PHASE_IO, HWLOC_DISC_PHASE_MISC, HWLOC_DISC_PHASE_ANNOTATE,
        HWLOC_DISC_PHASE_TWEAK }
```

enum hwloc\_disc\_status\_flag\_e { HWLOC\_DISC\_STATUS\_FLAG\_GOT\_ALLOWED\_RESOURCES }

#### **Functions**

- struct hwloc\_backend \* hwloc\_backend\_alloc (struct hwloc\_topology \*topology, struct hwloc\_disc\_component \*component)
- int hwloc\_backend\_enable (struct hwloc\_backend \*backend)

#### 22.46.1 Detailed Description

# 22.46.2 Typedef Documentation

#### 22.46.2.1 hwloc\_disc\_phase\_t

typedef enum hwloc\_disc\_phase\_e hwloc\_disc\_phase\_t
Discovery phase.

#### 22.46.3 Enumeration Type Documentation

#### 22.46.3.1 hwloc\_disc\_phase\_e

```
enum hwloc_disc_phase_e
Discovery phase.
```

#### Enumerator

HWLOC_DISC_PHASE_GLOBAL	xml or synthetic, platform-specific components such as bgq. Discovers everything including CPU, memory, I/O and everything else. A component with a Global phase usually excludes all other phases.
HWLOC_DISC_PHASE_CPU	CPU discovery.
HWLOC_DISC_PHASE_MEMORY	Attach memory to existing CPU objects.
HWLOC_DISC_PHASE_PCI	Attach PCI devices and bridges to existing CPU objects.
HWLOC_DISC_PHASE_IO	I/O discovery that requires PCI devices (OS devices such as OpenCL, CUDA, etc.).
HWLOC_DISC_PHASE_MISC	Misc objects that gets added below anything else.
HWLOC_DISC_PHASE_ANNOTATE	Annotating existing objects, adding distances, etc.

#### Enumerator

HWLOC_DISC_PHASE_TWEAK	Final tweaks to a ready-to-use topology. This phase runs once the
	topology is loaded, before it is returned to the topology. Hence it may
	only use the main hwloc API for modifying the topology, for instance
	by restricting it, adding info attributes, etc.

#### 22.46.3.2 hwloc\_disc\_status\_flag\_e

```
enum hwloc_disc_status_flag_e
Discovery status flags.
```

#### Enumerator

Н۷	WLOC_DISC_STATUS_FLAG_GOT_ALLOWED↔	The sets of allowed resources were already retrieved.
	_RESOURCES	

#### 22.46.4 Function Documentation

#### 22.46.4.1 hwloc\_backend\_alloc()

Allocate a backend structure, set good default values, initialize backend->component and topology, etc. The caller will then modify whatever needed, and call hwloc\_backend\_enable().

#### 22.46.4.2 hwloc\_backend\_enable()

Enable a previously allocated and setup backend.

# 22.47 Components and Plugins: Generic components

#### **Data Structures**

• struct hwloc\_component

# **Typedefs**

• typedef enum hwloc\_component\_type\_e hwloc\_component\_type\_t

#### **Enumerations**

enum hwloc\_component\_type\_e { HWLOC\_COMPONENT\_TYPE\_DISC, HWLOC\_COMPONENT\_TYPE\_XML }

# 22.47.1 Detailed Description

# 22.47.2 Typedef Documentation

#### 22.47.2.1 hwloc\_component\_type\_t

typedef enum hwloc\_component\_type\_e hwloc\_component\_type\_t Generic component type.

# 22.47.3 Enumeration Type Documentation

# 22.47.3.1 hwloc\_component\_type\_e

enum hwloc\_component\_type\_e
Generic component type.

#### Enumerator

HWLOC_COMPONENT_TYPE_DISC	The data field must point to a struct hwloc_disc_component.
HWLOC_COMPONENT_TYPE_XML	The data field must point to a struct hwloc_xml_component.

# 22.48 Components and Plugins: Core functions to be used by components

#### **Functions**

- int hwloc\_hide\_errors (void)
- hwloc\_obj\_t hwloc\_insert\_object\_by\_cpuset (struct hwloc\_topology \*topology, hwloc\_obj\_t root, hwloc\_obj\_t obj, const char \*reason)
- void hwloc insert object by parent (struct hwloc topology \*topology, hwloc obj t parent, hwloc obj t obj)
- hwloc\_obj\_t hwloc\_alloc\_setup\_object (hwloc\_topology\_t topology, hwloc\_obj\_type\_t type, unsigned os\_ index)
- int hwloc\_obj\_add\_children\_sets (hwloc\_obj\_t obj)
- int hwloc\_topology\_reconnect (hwloc\_topology\_t topology, unsigned long flags)
- static int hwloc plugin check namespace (const char \*pluginname, const char \*symbol)

#### 22.48.1 Detailed Description

#### 22.48.2 Function Documentation

#### 22.48.2.1 hwloc insert object by cpuset()

```
hwloc_obj_t hwloc_insert_object_by_cpuset (
    struct hwloc_topology * topology,
    hwloc_obj_t root,
    hwloc_obj_t obj,
    const char * reason )
```

Add an object to the topology.

Insert new object obj in the topology starting under existing object root (if NULL, the topology root object is used).

It is sorted along the tree of other objects according to the inclusion of cpusets, to eventually be added as a child of the smallest object including this object.

If the cpuset is empty, the type of the object (and maybe some attributes) must be enough to find where to insert the object. This is especially true for NUMA nodes with memory and no CPUs.

The given object should not have children.

This shall only be called before levels are built.

The caller should check whether the object type is filtered-out before calling this function.

The topology cpuset/nodesets will be enlarged to include the object sets.

reason is a unique string identifying where and why this insertion call was performed (it will be displayed in case of internal insertion error).

Returns the object on success. Returns NULL and frees obj on error. Returns another object and frees obj if it was merged with an identical pre-existing object.

#### 22.48.2.2 hwloc\_alloc\_setup\_object()

Allocate and initialize an object of the given type and physical index.

If os\_index is unknown or irrelevant, use HWLOC\_UNKNOWN\_INDEX.

#### 22.48.2.3 hwloc\_hide\_errors()

Check whether insertion errors are hidden.

#### 22.48.2.4 hwloc\_insert\_object\_by\_parent()

Insert an object somewhere in the topology.

It is added as the last child of the given parent. The cpuset is completely ignored, so strange objects such as I/O devices should preferably be inserted with this.

When used for "normal" children with cpusets (when importing from XML when duplicating a topology), the caller should make sure that:

- · children are inserted in order,
- · children cpusets do not intersect.

The given object may have normal, I/O or Misc children, as long as they are in order as well. These children must have valid parent and next\_sibling pointers.

The caller should check whether the object type is filtered-out before calling this function.

#### 22.48.2.5 hwloc obj add children sets()

```
int hwloc_obj_add_children_sets (
          hwloc_obj_t obj )
```

Setup object cpusets/nodesets by OR'ing its children.

Used when adding an object late in the topology. Will update the new object by OR'ing all its new children sets. Used when PCI backend adds a hostbridge parent, when distances add a new Group, etc.

#### 22.48.2.6 hwloc\_plugin\_check\_namespace()

Make sure that plugins can lookup core symbols.

This is a sanity check to avoid lazy-lookup failures when libhwloc is loaded within a plugin, and later tries to load its own plugins. This may fail (and abort the program) if libhwloc symbols are in a private namespace.

#### Returns

0 on success.

-1 if the plugin cannot be successfully loaded. The caller plugin init() callback should return a negative error code as well.

Plugins should call this function in their init() callback to avoid later crashes if lazy symbol resolution is used by the upper layer that loaded hwloc (e.g. OpenCL implementations using dlopen with RTLD\_LAZY).

Note

The build system must define HWLOC INSIDE PLUGIN if and only if building the caller as a plugin.

This function should remain inline so plugins can call it even when they cannot find libhwloc symbols.

#### 22.48.2.7 hwloc\_topology\_reconnect()

Request a reconnection of children and levels in the topology.

May be used by backends during discovery if they need arrays or lists of object within levels or children to be fully connected.

flags is currently unused, must 0.

# 22.49 Components and Plugins: Filtering objects

#### **Functions**

- static int hwloc\_filter\_check\_pcidev\_subtype\_important (unsigned classid)
- static int hwloc filter check osdev subtype important (hwloc obj osdev type t subtype)
- static int hwloc\_filter\_check\_keep\_object\_type (hwloc\_topology\_t topology, hwloc\_obj\_type\_t type)
- static int hwloc filter check keep object (hwloc topology t topology, hwloc obj t obj)

# 22.49.1 Detailed Description

# 22.49.2 Function Documentation

#### 22.49.2.1 hwloc\_filter\_check\_keep\_object()

Check whether the given object should be filtered-out.

#### Returns

1 if the object type should be kept, 0 otherwise.

# 22.49.2.2 hwloc\_filter\_check\_keep\_object\_type()

Check whether a non-I/O object type should be filtered-out.

Cannot be used for I/O objects.

#### Returns

1 if the object type should be kept, 0 otherwise.

#### 22.49.2.3 hwloc\_filter\_check\_osdev\_subtype\_important()

Check whether the given OS device subtype is important.

#### Returns

1 if important, 0 otherwise.

#### 22.49.2.4 hwloc\_filter\_check\_pcidev\_subtype\_important()

Check whether the given PCI device classid is important.

#### Returns

1 if important, 0 otherwise.

# 22.50 Components and Plugins: helpers for PCI discovery

# **Functions**

- unsigned hwloc\_pcidisc\_find\_cap (const unsigned char \*config, unsigned cap)
- int hwloc pcidisc find linkspeed (const unsigned char \*config, unsigned offset, float \*linkspeed)
- hwloc\_obj\_type\_t hwloc\_pcidisc\_check\_bridge\_type (unsigned device\_class, const unsigned char \*config)
- int hwloc\_pcidisc\_find\_bridge\_buses (unsigned domain, unsigned bus, unsigned dev, unsigned func, unsigned \*secondary\_busp, unsigned \*subordinate\_busp, const unsigned char \*config)
- void hwloc pcidisc tree insert by busid (struct hwloc obj \*\*treep, struct hwloc obj \*obj)
- int hwloc pcidisc tree attach (struct hwloc topology \*topology, struct hwloc obj \*tree)

#### 22.50.1 Detailed Description

#### 22.50.2 Function Documentation

#### 22.50.2.1 hwloc\_pcidisc\_check\_bridge\_type()

Return the hwloc object type (PCI device or Bridge) for the given class and configuration space.

This function requires 16 bytes of common configuration header at the beginning of config.

#### 22.50.2.2 hwloc\_pcidisc\_find\_bridge\_buses()

```
int hwloc_pcidisc_find_bridge_buses (
    unsigned domain,
    unsigned bus,
    unsigned dev,
    unsigned func,
    unsigned * secondary_busp,
    unsigned * subordinate_busp,
    const unsigned char * config )
```

Fills the attributes of the given PCI bridge using the given PCI config space.

This function requires 32 bytes of common configuration header at the beginning of config.

Returns -1 and destroys /p obj if bridge fields are invalid.

#### 22.50.2.3 hwloc pcidisc find cap()

Return the offset of the given capability in the PCI config space buffer.

This function requires a 256-bytes config space. Unknown/unavailable bytes should be set to 0xff.

#### 22.50.2.4 hwloc\_pcidisc\_find\_linkspeed()

Fill linkspeed by reading the PCI config space where PCI\_CAP\_ID\_EXP is at position offset.

Needs 20 bytes of EXP capability block starting at offset in the config space for registers up to link status.

#### 22.50.2.5 hwloc\_pcidisc\_tree\_attach()

Add some hostbridges on top of the given tree of PCI objects and attach them to the topology. Other backends may lookup PCI objects or localities (for instance to attach OS devices) by using hwloc\_pcidisc\_
find\_by\_busid() or hwloc\_pcidisc\_find\_busid\_parent().

#### 22.50.2.6 hwloc\_pcidisc\_tree\_insert\_by\_busid()

Insert a PCI object in the given PCI tree by looking at PCI bus IDs.

If treep points to NULL, the new object is inserted there.

# 22.51 Components and Plugins: finding PCI objects during other discoveries

#### **Functions**

• struct hwloc\_obj \* hwloc\_pci\_find\_parent\_by\_busid (struct hwloc\_topology \*topology, unsigned domain, unsigned bus, unsigned dev, unsigned func)

#### 22.51.1 Detailed Description

#### 22.51.2 Function Documentation

#### 22.51.2.1 hwloc\_pci\_find\_parent\_by\_busid()

Find the normal parent of a PCI bus ID.

Look at PCI affinity to find out where the given PCI bus ID should be attached.

This function should be used to attach an I/O device under the corresponding PCI object (if any), or under a normal (non-I/O) object with same locality.

22.52 Netloc API 209

# 22.52 Netloc API

#### **Enumerations**

```
    enum {
        NETLOC_SUCCESS = 0, NETLOC_ERROR = -1, NETLOC_ERROR_NOTDIR = -2, NETLOC_ERROR_NOENT
        = -3,
        NETLOC_ERROR_EMPTY = -4, NETLOC_ERROR_MULTIPLE = -5, NETLOC_ERROR_NOT_IMPL = -6,
        NETLOC_ERROR_EXISTS = -7,
        NETLOC_ERROR_NOT_FOUND = -8, NETLOC_ERROR_MAX = -9 }
```

# 22.52.1 Detailed Description

# 22.52.2 Enumeration Type Documentation

#### 22.52.2.1 anonymous enum

anonymous enum Return codes

#### Enumerator

NETLOC_SUCCESS	Success
NETLOC_ERROR	Error: General condition
NETLOC_ERROR_NOTDIR	Error: URI is not a directory
NETLOC_ERROR_NOENT	Error: URI is invalid, no such entry
NETLOC_ERROR_EMPTY	Error: No networks found
NETLOC_ERROR_MULTIPLE	Error: Multiple matching networks found
NETLOC_ERROR_NOT_IMPL	Error: Interface not implemented
NETLOC_ERROR_EXISTS	Error: If the entry already exists when trying to add to a lookup table
NETLOC_ERROR_NOT_FOUND	Error: No path found
NETLOC_ERROR_MAX	Error: Enum upper bound marker. No errors less than this number Will not be returned externally.

# **Chapter 23**

# **Data Structure Documentation**

# 23.1 hwloc backend Struct Reference

#include <plugins.h>

#### **Data Fields**

- · unsigned phases
- · unsigned long flags
- · int is\_thissystem
- void \* private data
- void(\* disable )(struct hwloc\_backend \*backend)
- int(\* discover )(struct hwloc\_backend \*backend, struct hwloc\_disc\_status \*status)
- int(\* get\_pci\_busid\_cpuset )(struct hwloc\_backend \*backend, struct hwloc\_pcidev\_attr\_s \*busid, hwloc\_bitmap\_t cpuset)

#### 23.1.1 Detailed Description

Discovery backend structure.

A backend is the instantiation of a discovery component. When a component gets enabled for a topology, its instantiate() callback creates a backend.

hwloc\_backend\_alloc() initializes all fields to default values that the component may change (except "component" and "next") before enabling the backend with hwloc\_backend\_enable().

Most backends assume that the topology is\_thissystem flag is set because they talk to the underlying operating system. However they may still be used in topologies without the is\_thissystem flag for debugging reasons. In practice, they are usually auto-disabled in such cases (excluded by xml or synthetic backends, or by environment variables when changing the Linux fsroot or the x86 cpuid path).

#### 23.1.2 Field Documentation

#### 23.1.2.1 disable

void(\* hwloc\_backend::disable) (struct hwloc\_backend \*backend)
Callback for freeing the private data. May be NULL.

#### 23.1.2.2 discover

int (\* hwloc\_backend::discover) (struct hwloc\_backend \*backend, struct hwloc\_disc\_status \*status) Main discovery callback. returns -1 on error, either because it couldn't add its objects of the existing topology, or because of an actual discovery/gathering failure. May be NULL.

#### 23.1.2.3 flags

```
unsigned long hwloc_backend::flags Backend flags, currently always 0.
```

#### 23.1.2.4 get pci busid cpuset

```
\label{local-backend:get_pci_busid_cpuset)} int(* hwloc_backend *backend, struct hwloc_color pcidev_attr_s *busid, hwloc_bitmap_t cpuset)
```

Callback to retrieve the locality of a PCI object. Called by the PCI core when attaching PCI hierarchy to CPU objects. May be NULL.

#### 23.1.2.5 is\_thissystem

```
int hwloc_backend::is_thissystem
```

Backend-specific 'is\_thissystem' property. Set to 0 if the backend disables the thissystem flag for this topology (e.g. loading from xml or synthetic string, or using a different fsroot on Linux, or a x86 CPUID dump). Set to -1 if the backend doesn't care (default).

#### 23.1.2.6 phases

```
unsigned hwloc_backend::phases
```

#### 23.1.2.7 private\_data

```
void* hwloc_backend::private_data
```

Backend private data, or NULL if none.

The documentation for this struct was generated from the following file:

• plugins.h

# 23.2 hwloc obj attr u::hwloc bridge attr s Struct Reference

#include <hwloc.h>

# **Data Fields**

```
    union {
        struct hwloc_pcidev_attr_s pci
    } upstream
    hwloc_obj_bridge_type_t upstream_type
    union {
        struct {
            unsigned short domain
            unsigned char secondary_bus
            unsigned char subordinate_bus
        } pci
    } downstream
```

- hwloc\_obj\_bridge\_type\_t downstream\_type
- · unsigned depth

#### 23.2.1 Detailed Description

Bridge specific Object Attribues.

#### 23.2.2 Field Documentation

#### 23.2.2.1 depth

unsigned hwloc\_obj\_attr\_u::hwloc\_bridge\_attr\_s::depth

#### 23.2.2.2 domain

 $\verb"unsigned" short hwloc_obj_attr_u::hwloc_bridge_attr_s::domain$ 

#### 23.2.2.3 downstream

```
union { ... } hwloc_obj_attr_u::hwloc_bridge_attr_s::downstream
```

#### 23.2.2.4 downstream\_type

hwloc\_obj\_bridge\_type\_t hwloc\_obj\_attr\_u::hwloc\_bridge\_attr\_s::downstream\_type

#### 23.2.2.5 pci [1/2]

```
struct { ... } hwloc_obj_attr_u::hwloc_bridge_attr_s::pci
```

#### 23.2.2.6 pci [2/2]

struct hwloc\_pcidev\_attr\_s hwloc\_obj\_attr\_u::hwloc\_bridge\_attr\_s::pci

#### 23.2.2.7 secondary\_bus

unsigned char hwloc\_obj\_attr\_u::hwloc\_bridge\_attr\_s::secondary\_bus

#### 23.2.2.8 subordinate\_bus

 $\verb"unsigned" char hwloc_obj_attr_u::hwloc_bridge_attr_s::subordinate\_bus$ 

#### 23.2.2.9 upstream

```
union { ... } hwloc_obj_attr_u::hwloc_bridge_attr_s::upstream
```

#### 23.2.2.10 upstream\_type

hwloc\_obj\_bridge\_type\_t hwloc\_obj\_attr\_u::hwloc\_bridge\_attr\_s::upstream\_type
The documentation for this struct was generated from the following file:

· hwloc.h

# 

#include <hwloc.h>

#### **Data Fields**

- hwloc uint64 t size
- · unsigned depth
- · unsigned linesize
- · int associativity
- hwloc\_obj\_cache\_type\_t type

# 23.3.1 Detailed Description

Cache-specific Object Attributes.

#### 23.3.2 Field Documentation

#### 23.3.2.1 associativity

 $\label{local-condition} \begin{tabular}{ll} \begin{tabular}{ll}$ 

#### 23.3.2.2 depth

unsigned hwloc\_obj\_attr\_u::hwloc\_cache\_attr\_s::depth
Depth of cache (e.g., L1, L2, ...etc.)

#### 23.3.2.3 linesize

 $\label{linesize} {\tt unsigned\ hwloc\_obj\_attr\_u::hwloc\_cache\_attr\_s::linesize} \\ {\tt Cache-line\ size\ in\ bytes.\ 0\ if\ unknown.}$ 

#### 23.3.2.4 size

 $\label{loc_uint64_thwloc_obj_attr_u::hwloc_cache_attr_s::size} \\ \textbf{Size of cache in bytes}.$ 

#### 23.3.2.5 type

hwloc\_obj\_cache\_type\_t hwloc\_obj\_attr\_u::hwloc\_cache\_attr\_s::type
Cache type.

The documentation for this struct was generated from the following file:

hwloc.h

# 23.4 hwloc\_cl\_device\_topology\_amd Union Reference

#include <opencl.h>

#### **Data Fields**

```
    struct {
        cl_uint type
        cl_uint data [5]
    } raw
    struct {
        cl_uint type
        cl_char unused [17]
        cl_char bus
        cl_char device
        cl_char function
    } pcie
```

#### 23.4.1 Field Documentation

#### 23.4.1.1 bus

```
cl_char hwloc_cl_device_topology_amd::bus
```

#### 23.4.1.2 data

```
cl_uint hwloc_cl_device_topology_amd::data[5]
```

#### 23.4.1.3 device

```
cl_char hwloc_cl_device_topology_amd::device
```

#### 23.4.1.4 function

```
cl_char hwloc_cl_device_topology_amd::function
```

#### 23.4.1.5 pcie

```
\verb|struct { ... } hwloc_cl_device_topology_amd::pcie|\\
```

#### 23.4.1.6 raw

```
struct { ... } hwloc_cl_device_topology_amd::raw
```

#### 23.4.1.7 type

```
cl_uint hwloc_cl_device_topology_amd::type
```

#### 23.4.1.8 unused

```
cl_char hwloc_cl_device_topology_amd::unused[17]
```

The documentation for this union was generated from the following file:

opencl.h

# 23.5 hwloc component Struct Reference

#include <plugins.h>

#### **Data Fields**

- · unsigned abi
- int(\* init )(unsigned long flags)
- void(\* finalize )(unsigned long flags)
- hwloc\_component\_type\_t type
- · unsigned long flags
- void \* data

#### 23.5.1 Detailed Description

Generic component structure.

Generic components structure, either statically listed by configure in static-components.h or dynamically loaded as a plugin.

#### 23.5.2 Field Documentation

#### 23.5.2.1 abi

unsigned hwloc\_component::abi

Component ABI version, set to HWLOC\_COMPONENT\_ABI.

#### 23.5.2.2 data

void\* hwloc\_component::data

Component data, pointing to a struct hwloc\_disc\_component or struct hwloc\_xml\_component.

#### 23.5.2.3 finalize

void(\* hwloc\_component::finalize) (unsigned long flags)

Process-wide component termination callback.

This optional callback is called after unregistering the component from the hwloc core (before unloading the plugin). flags is always 0 for now.

#### Note

If the component uses Ital for loading its own plugins, it should load/unload them only in init() and finalize(), to avoid race conditions with hwloc's use of Ital.

#### 23.5.2.4 flags

unsigned long hwloc\_component::flags

Component flags, unused for now.

#### 23.5.2.5 init

int(\* hwloc\_component::init) (unsigned long flags)

Process-wide component initialization callback.

This optional callback is called when the component is registered to the hwloc core (after loading the plugin). When the component is built as a plugin, this callback should call hwloc\_check\_plugin\_namespace() and return an

When the component is built as a plugin, this callback should call hwloc\_check\_plugin\_namespace() and return an negative error code on error.

flags is always 0 for now.

#### Returns

0 on success, or a negative code on error.

#### Note

If the component uses Itdl for loading its own plugins, it should load/unload them only in init() and finalize(), to avoid race conditions with hwloc's use of Itdl.

#### 23.5.2.6 type

hwloc\_component\_type\_t hwloc\_component::type

Component type.

The documentation for this struct was generated from the following file:

· plugins.h

# 23.6 hwloc\_disc\_component Struct Reference

#include <plugins.h>

#### **Data Fields**

- const char \* name
- · unsigned phases
- unsigned excluded\_phases
- struct hwloc\_backend \*(\* instantiate )(struct hwloc\_topology \*topology, struct hwloc\_disc\_component \*component, unsigned excluded\_phases, const void \*data1, const void \*data2, const void \*data3)
- · unsigned priority
- · unsigned enabled\_by\_default

#### 23.6.1 Detailed Description

Discovery component structure.

This is the major kind of components, taking care of the discovery. They are registered by generic components, either statically-built or as plugins.

#### 23.6.2 Field Documentation

#### 23.6.2.1 enabled\_by\_default

unsigned hwloc\_disc\_component::enabled\_by\_default

Enabled by default. If unset, if will be disabled unless explicitly requested.

#### 23.6.2.2 excluded\_phases

unsigned hwloc\_disc\_component::excluded\_phases

Component phases to exclude, as an OR'ed set of hwloc disc phase t.

For a GLOBAL component, this usually includes all other phases ( $\sim$ UL).

Other components only exclude types that may bring conflicting topology information. MISC components should likely not be excluded since they usually bring non-primary additional information.

#### 23.6.2.3 instantiate

```
struct hwloc_backend*(* hwloc_disc_component::instantiate) (struct hwloc_topology *topology, struct hwloc_disc_component *component, unsigned excluded_phases, const void *data1, const void *data2, const void *data3)
```

Instantiate callback to create a backend from the component. Parameters data1, data2, data3 are NULL except for components that have special enabling routines such as hwloc topology set xml().

#### 23.6.2.4 name

```
const char* hwloc_disc_component::name
```

Name. If this component is built as a plugin, this name does not have to match the plugin filename.

#### 23.6.2.5 phases

unsigned hwloc\_disc\_component::phases

Discovery phases performed by this component. OR'ed set of hwloc\_disc\_phase\_t.

#### 23.6.2.6 priority

```
unsigned hwloc_disc_component::priority
```

Component priority. Used to sort topology->components, higher priority first. Also used to decide between two components with the same name.

Usual values are 50 for native OS (or platform) components, 45 for x86, 40 for no-OS fallback, 30 for global components (xml, synthetic), 20 for pci, 10 for other misc components (opencl etc.).

The documentation for this struct was generated from the following file:

· plugins.h

# 23.7 hwloc disc status Struct Reference

#include <plugins.h>

#### **Data Fields**

- · hwloc disc phase t phase
- unsigned excluded phases
- unsigned long flags

#### 23.7.1 Detailed Description

Discovery status structure.

Used by the core and backends to inform about what has been/is being done during the discovery process.

#### 23.7.2 Field Documentation

#### 23.7.2.1 excluded\_phases

unsigned hwloc\_disc\_status::excluded\_phases

Dynamically excluded phases. If a component decides during discovery that some phases are no longer needed.

#### 23.7.2.2 flags

unsigned long hwloc\_disc\_status::flags OR'ed set of hwloc\_disc\_status\_flag\_e.

#### 23.7.2.3 phase

hwloc\_disc\_phase\_t hwloc\_disc\_status::phase

The current discovery phase that is performed. Must match one of the phases in the component phases field. The documentation for this struct was generated from the following file:

· plugins.h

# 23.8 hwloc\_distances\_s Struct Reference

#include <distances.h>

#### **Data Fields**

- · unsigned nbobjs
- hwloc\_obj\_t \* objs
- · unsigned long kind
- hwloc\_uint64\_t \* values

#### 23.8.1 Detailed Description

Matrix of distances between a set of objects.

This matrix often contains latencies between NUMA nodes (as reported in the System Locality Distance Information Table (SLIT) in the ACPI specification), which may or may not be physically accurate. It corresponds to the latency for accessing the memory of one node from a core in another node. The corresponding kind is HWLOC DISTANCES KIND FROM OS | HWLOC DISTANCES KIND FROM USER.

The matrix may also contain bandwidths between random sets of objects, possibly provided by the user, as specified in the kind attribute.

#### 23.8.2 Field Documentation

#### 23.8.2.1 kind

unsigned long hwloc\_distances\_s::kind OR'ed set of hwloc\_distances\_kind\_e.

#### 23.8.2.2 nbobjs

unsigned hwloc\_distances\_s::nbobjs

Number of objects described by the distance matrix.

#### 23.8.2.3 objs

hwloc\_obj\_t\* hwloc\_distances\_s::objs

Array of objects described by the distance matrix. These objects are not in any particular order, see <a href="https://hww.color.org/buller.nd/">https://hww.color.org/buller.nd/</a> the distances\_obj\_pair\_values() for easy ways to find objects in this array and their corresponding values.

#### 23.8.2.4 values

hwloc\_uint64\_t\* hwloc\_distances\_s::values

Matrix of distances between objects, stored as a one-dimension array.

Distance from i-th to j-th object is stored in slot i\*nbobjs+j. The meaning of the value depends on the kind attribute. The documentation for this struct was generated from the following file:

· distances.h

# 23.9 hwloc obj attr u::hwloc group attr s Struct Reference

#include <hwloc.h>

#### **Data Fields**

- · unsigned depth
- · unsigned kind
- · unsigned subkind
- · unsigned char dont\_merge

#### 23.9.1 Detailed Description

Group-specific Object Attributes.

#### 23.9.2 Field Documentation

#### 23.9.2.1 depth

 $\verb"unsigned hwloc_obj_attr_u::hwloc_group_attr_s::depth"$ 

Depth of group object. It may change if intermediate Group objects are added.

#### 23.9.2.2 dont\_merge

 $\verb"unsigned" char hwloc_obj_attr_u::hwloc_group_attr_s::dont_merge$ 

Flag preventing groups from being automatically merged with identical parent or children.

#### 23.9.2.3 kind

unsigned hwloc\_obj\_attr\_u::hwloc\_group\_attr\_s::kind
Internally-used kind of group.

#### 23.9.2.4 subkind

 $\verb"unsigned hwloc_obj_attr_u::hwloc_group_attr_s::subkind"$ 

Internally-used subkind to distinguish different levels of groups with same kind.

The documentation for this struct was generated from the following file:

· hwloc.h

# 23.10 hwloc info s Struct Reference

#include <hwloc.h>

#### **Data Fields**

- char \* name
- char \* value

## 23.10.1 Detailed Description

Object info.

See also

Consulting and Adding Key-Value Info Attributes

#### 23.10.2 Field Documentation

#### 23.10.2.1 name

char\* hwloc\_info\_s::name
Info name.

#### 23.10.2.2 value

char\* hwloc\_info\_s::value

Info value.

The documentation for this struct was generated from the following file:

· hwloc.h

# 23.11 hwloc\_location Struct Reference

#include <memattrs.h>

#### **Data Structures**

· union hwloc location u

#### **Public Types**

enum hwloc\_location\_type\_e { HWLOC\_LOCATION\_TYPE\_OBJECT = 0, HWLOC\_LOCATION\_TYPE\_CPUSET = 1 }

#### **Data Fields**

- enum hwloc\_location::hwloc\_location\_type\_e type
- union hwloc\_location::hwloc\_location\_u location

#### 23.11.1 Detailed Description

Where to measure attributes from.

#### 23.11.2 Member Enumeration Documentation

#### 23.11.2.1 hwloc\_location\_type\_e

enum hwloc\_location::hwloc\_location\_type\_e

Type of location.

#### **Enumerator**

HWLOC_LOCATION_TYPE_OBJECT	Location is given as an object, in the location object union field.
HWLOC_LOCATION_TYPE_CPUSET	Location is given as an cpuset, in the location cpuset union field.

#### 23.11.3 Field Documentation

#### 23.11.3.1 location

union hwloc\_location::hwloc\_location\_u hwloc\_location::location

#### 23.11.3.2 type

enum hwloc\_location::hwloc\_location\_type\_e hwloc\_location::type The documentation for this struct was generated from the following file:

· memattrs.h

# 23.12 hwloc\_location::hwloc\_location\_u Union Reference

#include <memattrs.h>

#### **Data Fields**

- hwloc\_obj\_t object
- hwloc\_cpuset\_t cpuset

#### 23.12.1 Detailed Description

Actual location.

#### 23.12.2 Field Documentation

#### 23.12.2.1 cpuset

hwloc\_cpuset\_t hwloc\_location::hwloc\_location\_u::cpuset
Location as a cpuset, when the location type is HWLOC\_LOCATION\_TYPE\_CPUSET.

#### 23.12.2.2 object

hwloc\_obj\_t hwloc\_location::hwloc\_location\_u::object Location as an object, when the location type is HWLOC\_LOCATION\_TYPE\_OBJECT. The documentation for this union was generated from the following file:

· memattrs.h

# 23.13 hwloc\_obj\_attr\_u::hwloc\_numanode\_attr\_s::hwloc\_memory\_← page\_type\_s Struct Reference

#include <hwloc.h>

#### **Data Fields**

- hwloc\_uint64\_t size
- hwloc\_uint64\_t count

# 23.13.1 Detailed Description

Array of local memory page types, NULL if no local memory and page\_types is 0. The array is sorted by increasing size fields. It contains page\_types\_len slots.

#### 23.13.2 Field Documentation

#### 23.13.2.1 count

hwloc\_uint64\_t hwloc\_obj\_attr\_u::hwloc\_numanode\_attr\_s::hwloc\_memory\_page\_type\_s::count Number of pages of this size.

#### 23.13.2.2 size

hwloc\_uint64\_t hwloc\_obj\_attr\_u::hwloc\_numanode\_attr\_s::hwloc\_memory\_page\_type\_s::size Size of pages.

The documentation for this struct was generated from the following file:

hwloc.h

# 23.14 hwloc\_obj\_attr\_u::hwloc\_numanode\_attr\_s Struct Reference

#include <hwloc.h>

#### **Data Structures**

• struct hwloc\_memory\_page\_type\_s

#### **Data Fields**

- hwloc\_uint64\_t local\_memory
- unsigned page\_types\_len
- struct hwloc\_obj\_attr\_u::hwloc\_numanode\_attr\_s::hwloc\_memory\_page\_type\_s \* page\_types

#### 23.14.1 Detailed Description

NUMA node-specific Object Attributes.

#### 23.14.2 Field Documentation

#### 23.14.2.1 local\_memory

hwloc\_uint64\_t hwloc\_obj\_attr\_u::hwloc\_numanode\_attr\_s::local\_memory Local memory (in bytes)

#### 23.14.2.2 page\_types

 $struct\ hwloc\_obj\_attr\_u::hwloc\_numanode\_attr\_s::hwloc\_memory\_page\_type\_s\ *\ hwloc\_obj\_attr\_u \leftrightarrow ::hwloc\_numanode\_attr\_s::page\_types$ 

# 23.14.2.3 page\_types\_len

unsigned hwloc\_obj\_attr\_u::hwloc\_numanode\_attr\_s::page\_types\_len Size of array page\_types.

The documentation for this struct was generated from the following file:

· hwloc.h

# 23.15 hwloc\_obj Struct Reference

#include <hwloc.h>

#### **Data Fields**

- hwloc\_obj\_type\_t type
- char \* subtype
- · unsigned os\_index
- char \* name
- hwloc uint64 t total memory
- union hwloc\_obj\_attr\_u \* attr
- · int depth
- unsigned logical\_index
- struct hwloc\_obj \* next\_cousin
- struct hwloc\_obj \* prev\_cousin
- struct hwloc\_obj \* parent
- unsigned sibling\_rank
- struct hwloc\_obj \* next\_sibling
- struct hwloc\_obj \* prev\_sibling
- int symmetric subtree
- hwloc\_cpuset\_t cpuset
- · hwloc\_cpuset\_t complete\_cpuset
- hwloc\_nodeset\_t nodeset
- hwloc\_nodeset\_t complete\_nodeset
- struct hwloc\_info\_s \* infos
- unsigned infos\_count
- void \* userdata
- hwloc\_uint64\_t gp\_index

#### List and array of normal children below this object (except Memory, I/O and Misc children).

- · unsigned arity
- struct hwloc\_obj \*\* children
- struct hwloc\_obj \* first\_child
- struct hwloc\_obj \* last\_child

#### List of Memory children below this object.

- unsigned memory\_arity
- struct hwloc\_obj \* memory\_first\_child

#### List of I/O children below this object.

- unsigned io\_arity
- struct hwloc obj \* io first child

#### List of Misc children below this object.

- · unsigned misc arity
- struct hwloc obj \* misc first child

# 23.15.1 Detailed Description

Structure of a topology object.

Applications must not modify any field except hwloc\_obj.userdata.

#### 23.15.2 Field Documentation

#### 23.15.2.1 arity

unsigned hwloc\_obj::arity

Number of normal children. Memory, Misc and I/O children are not listed here but rather in their dedicated children list.

#### 23.15.2.2 attr

```
union hwloc_obj_attr_u* hwloc_obj::attr
```

Object type-specific Attributes, may be NULL if no attribute value was found.

#### 23.15.2.3 children

```
struct hwloc_obj** hwloc_obj::children
Normal children, children[0 .. arity -1].
```

#### 23.15.2.4 complete\_cpuset

```
hwloc_cpuset_t hwloc_obj::complete_cpuset
```

The complete CPU set of processors of this object,.

This may include not only the same as the cpuset field, but also some CPUs for which topology information is unknown or incomplete, some offlines CPUs, and the CPUs that are ignored when the HWLOC\_TOPOLOGY\_FLAG\_INCLUDE\_DISALLOWED flag is not set. Thus no corresponding PU object may be found in the topology, because the precise position is undefined. It is however known that it would be somewhere under this object.

Note

Its value must not be changed, hwloc\_bitmap\_dup() must be used instead.

#### 23.15.2.5 complete\_nodeset

hwloc\_nodeset\_t hwloc\_obj::complete\_nodeset

The complete NUMA node set of this object...

This may include not only the same as the nodeset field, but also some NUMA nodes for which topology information is unknown or incomplete, some offlines nodes, and the nodes that are ignored when the HWLOC\_TOPOLOGY\_FLAG\_INCLUDE\_DISALLOWED flag is not set. Thus no corresponding NUMA node object may be found in the topology, because the precise position is undefined. It is however known that it would be somewhere under this object.

If there are no NUMA nodes in the machine, all the memory is close to this object, so only the first bit is set in complete\_nodeset.

Note

Its value must not be changed, hwloc\_bitmap\_dup() must be used instead.

#### 23.15.2.6 cpuset

hwloc\_cpuset\_t hwloc\_obj::cpuset

CPUs covered by this object.

This is the set of CPUs for which there are PU objects in the topology under this object, i.e. which are known to be physically contained in this object and known how (the children path between this object and the PU objects). If the HWLOC\_TOPOLOGY\_FLAG\_INCLUDE\_DISALLOWED configuration flag is set, some of these CPUs may not be allowed for binding, see <a href="https://hwloc.topology\_get\_allowed\_cpuset">hwloc\_topology\_get\_allowed\_cpuset</a>().

Note

All objects have non-NULL CPU and node sets except Misc and I/O objects.

Its value must not be changed, <a href="https://hwloc\_bitmap\_dup">hwloc\_bitmap\_dup</a>() must be used instead.

#### 23.15.2.7 depth

int hwloc\_obj::depth

Vertical index in the hierarchy.

For normal objects, this is the depth of the horizontal level that contains this object and its cousins of the same type. If the topology is symmetric, this is equal to the parent depth plus one, and also equal to the number of parent/child links from the root object to here.

For special objects (NUMA nodes, I/O and Misc) that are not in the main tree, this is a special negative value that corresponds to their dedicated level, see <a href="https://hww.nuc.get\_type\_depth">hwloc\_get\_type\_depth</a>() and <a href="https://hww.nuc.get\_type\_depth">hwloc\_get\_type\_depth</a>() and <a href="https://hww.nuc.get\_type\_depth">hwloc\_get\_type\_depth</a>() as usual.

#### 23.15.2.8 first\_child

struct hwloc\_obj\* hwloc\_obj::first\_child
First normal child.

# 23.15.2.9 gp\_index

hwloc\_uint64\_t hwloc\_obj::gp\_index

Global persistent index. Generated by hwloc, unique across the topology (contrary to os\_index) and persistent across topology changes (contrary to logical\_index). Mostly used internally, but could also be used by application to identify objects.

#### 23.15.2.10 infos

struct hwloc\_info\_s\* hwloc\_obj::infos Array of stringified info type=name.

#### 23.15.2.11 infos count

unsigned hwloc\_obj::infos\_count Size of infos array.

#### 23.15.2.12 io\_arity

unsigned hwloc\_obj::io\_arity

Number of I/O children. These children are listed in io\_first\_child.

#### 23.15.2.13 io\_first\_child

struct hwloc\_obj\* hwloc\_obj::io\_first\_child

First I/O child. Bridges, PCI and OS devices are listed here (io\_arity and io\_first\_child) instead of in the normal children list. See also hwloc\_obj\_type\_is\_io().

#### 23.15.2.14 last\_child

struct hwloc\_obj\* hwloc\_obj::last\_child
Last normal child.

#### 23.15.2.15 logical\_index

unsigned hwloc\_obj::logical\_index

Horizontal index in the whole list of similar objects, hence guaranteed unique across the entire machine. Could be a "cousin\_rank" since it's the rank within the "cousin" list below Note that this index may change when restricting the topology or when inserting a group.

#### 23.15.2.16 memory\_arity

 $\verb"unsigned hwloc_obj::memory_arity"$ 

Number of Memory children. These children are listed in memory\_first\_child.

# 23.15.2.17 memory\_first\_child

struct hwloc\_obj\* hwloc\_obj::memory\_first\_child

First Memory child. NUMA nodes and Memory-side caches are listed here (memory\_arity and memory\_ first\_child) instead of in the normal children list. See also hwloc\_obj\_type\_is\_memory().

A memory hierarchy starts from a normal CPU-side object (e.g. Package) and ends with NUMA nodes as leaves. There might exist some memory-side caches between them in the middle of the memory subtree.

#### 23.15.2.18 misc\_arity

unsigned hwloc\_obj::misc\_arity

Number of Misc children. These children are listed in misc\_first\_child.

#### 23.15.2.19 misc\_first\_child

```
struct hwloc_obj* hwloc_obj::misc_first_child
```

First Misc child. Misc objects are listed here (misc\_arity and misc\_first\_child) instead of in the normal children list

#### 23.15.2.20 name

```
char* hwloc_obj::name
```

Object-specific name if any. Mostly used for identifying OS devices and Misc objects where a name string is more useful than numerical indexes.

#### 23.15.2.21 next\_cousin

```
struct hwloc_obj* hwloc_obj::next_cousin
```

Next object of same type and depth.

#### 23.15.2.22 next\_sibling

```
struct hwloc_obj* hwloc_obj::next_sibling
```

Next object below the same parent (inside the same list of children).

#### 23.15.2.23 nodeset

```
hwloc_nodeset_t hwloc_obj::nodeset
```

NUMA nodes covered by this object or containing this object.

This is the set of NUMA nodes for which there are NUMA node objects in the topology under or above this object, i.e. which are known to be physically contained in this object or containing it and known how (the children path between this object and the NUMA node objects).

In the end, these nodes are those that are close to the current object. Function <a href="https://hww.nc.get\_local\_numanode\_objs">hwloc\_get\_local\_numanode\_objs</a>() may be used to list those NUMA nodes more precisely.

If the HWLOC\_TOPOLOGY\_FLAG\_INCLUDE\_DISALLOWED configuration flag is set, some of these nodes may not be allowed for allocation, see hwloc\_topology\_get\_allowed\_nodeset().

If there are no NUMA nodes in the machine, all the memory is close to this object, so only the first bit may be set in nodeset.

#### Note

All objects have non-NULL CPU and node sets except Misc and I/O objects.

Its value must not be changed, hwloc bitmap dup() must be used instead.

#### 23.15.2.24 os index

```
unsigned hwloc_obj::os_index
```

OS-provided physical index number. It is not guaranteed unique across the entire machine, except for PUs and NUMA nodes. Set to HWLOC\_UNKNOWN\_INDEX if unknown or irrelevant for this object.

#### 23.15.2.25 parent

```
struct hwloc_obj* hwloc_obj::parent
Parent, NULL if root (Machine object)
```

#### 23.15.2.26 prev\_cousin

struct hwloc\_obj\* hwloc\_obj::prev\_cousin

Previous object of same type and depth.

#### 23.15.2.27 prev\_sibling

```
struct hwloc_obj* hwloc_obj::prev_sibling
```

Previous object below the same parent (inside the same list of children).

#### 23.15.2.28 sibling rank

unsigned hwloc\_obj::sibling\_rank

Index in parent's children[] array. Or the index in parent's Memory, I/O or Misc children list.

#### 23.15.2.29 subtype

char\* hwloc\_obj::subtype

Subtype string to better describe the type field.

#### 23.15.2.30 symmetric subtree

int hwloc\_obj::symmetric\_subtree

Set if the subtree of normal objects below this object is symmetric, which means all normal children and their children have identical subtrees.

Memory, I/O and Misc children are ignored.

If set in the topology root object, Istopo may export the topology as a synthetic string.

#### 23.15.2.31 total memory

hwloc\_uint64\_t hwloc\_obj::total\_memory

Total memory (in bytes) in NUMA nodes below this object.

#### 23.15.2.32 type

hwloc\_obj\_type\_t hwloc\_obj::type

Type of object.

#### 23.15.2.33 userdata

void\* hwloc\_obj::userdata

The documentation for this struct was generated from the following file:

• hwloc.h

# 23.16 hwloc obj attr u Union Reference

#include <hwloc.h>

#### **Data Structures**

- struct hwloc\_bridge\_attr\_s
- struct hwloc\_cache\_attr\_s
- struct hwloc\_group\_attr\_s
- struct hwloc\_numanode\_attr\_s
- struct hwloc\_osdev\_attr\_s
- struct hwloc\_pcidev\_attr\_s

### **Data Fields**

- · struct hwloc obj attr u::hwloc numanode attr s numanode
- struct hwloc\_obj\_attr\_u::hwloc\_cache\_attr\_s cache
- struct hwloc\_obj\_attr\_u::hwloc\_group\_attr\_s group
- struct hwloc\_obj\_attr\_u::hwloc\_pcidev\_attr\_s pcidev
- struct hwloc\_obj\_attr\_u::hwloc\_bridge\_attr\_s bridge
- struct hwloc\_obj\_attr\_u::hwloc\_osdev\_attr\_s osdev

# 23.16.1 Detailed Description

Object type-specific Attributes.

#### 23.16.2 Field Documentation

#### 23.16.2.1 bridge

struct hwloc\_obj\_attr\_u::hwloc\_bridge\_attr\_s hwloc\_obj\_attr\_u::bridge

#### 23.16.2.2 cache

 $\verb|struct hwloc_obj_attr_u::hwloc_cache_attr_s hwloc_obj_attr_u::cache|\\$ 

#### 23.16.2.3 group

struct hwloc\_obj\_attr\_u::hwloc\_group\_attr\_s hwloc\_obj\_attr\_u::group

#### 23.16.2.4 numanode

struct hwloc\_obj\_attr\_u::hwloc\_numanode\_attr\_s hwloc\_obj\_attr\_u::numanode

#### 23.16.2.5 osdev

 $\verb|struct hwloc_obj_attr_u::hwloc_osdev_attr_s hwloc_obj_attr_u::osdev|\\$ 

#### 23.16.2.6 pcidev

 ${\tt struct\ hwloc\_obj\_attr\_u::hwloc\_pcidev\_attr\_s\ hwloc\_obj\_attr\_u::pcidev}. The documentation for this union was generated from the following file:$ 

· hwloc.h

# 23.17 hwloc obj attr u::hwloc osdev attr s Struct Reference

#include <hwloc.h>

#### **Data Fields**

• hwloc\_obj\_osdev\_type\_t type

# 23.17.1 Detailed Description

OS Device specific Object Attributes.

#### 23.17.2 Field Documentation

#### 23.17.2.1 type

hwloc\_obj\_osdev\_type\_t hwloc\_obj\_attr\_u::hwloc\_osdev\_attr\_s::type

The documentation for this struct was generated from the following file:

· hwloc.h

# 23.18 hwloc obj attr u::hwloc pcidev attr s Struct Reference

#include <hwloc.h>

#### **Data Fields**

- · unsigned short domain
- unsigned char bus
- · unsigned char dev
- · unsigned char func
- unsigned short class\_id
- unsigned short vendor\_id
- unsigned short device\_id
- unsigned short subvendor\_id
- unsigned short subdevice\_id
- · unsigned char revision
- · float linkspeed

# 23.18.1 Detailed Description

PCI Device specific Object Attributes.

#### 23.18.2 Field Documentation

#### 23.18.2.1 bus

unsigned char hwloc\_obj\_attr\_u::hwloc\_pcidev\_attr\_s::bus

#### 23.18.2.2 class\_id

unsigned short hwloc\_obj\_attr\_u::hwloc\_pcidev\_attr\_s::class\_id

#### 23.18.2.3 dev

unsigned char hwloc\_obj\_attr\_u::hwloc\_pcidev\_attr\_s::dev

#### 23.18.2.4 device\_id

unsigned short hwloc\_obj\_attr\_u::hwloc\_pcidev\_attr\_s::device\_id

#### 23.18.2.5 domain

unsigned short hwloc\_obj\_attr\_u::hwloc\_pcidev\_attr\_s::domain

#### 23.18.2.6 func

unsigned char hwloc\_obj\_attr\_u::hwloc\_pcidev\_attr\_s::func

#### 23.18.2.7 linkspeed

float hwloc\_obj\_attr\_u::hwloc\_pcidev\_attr\_s::linkspeed

#### 23.18.2.8 revision

unsigned char hwloc\_obj\_attr\_u::hwloc\_pcidev\_attr\_s::revision

#### 23.18.2.9 subdevice\_id

unsigned short hwloc\_obj\_attr\_u::hwloc\_pcidev\_attr\_s::subdevice\_id

#### 23.18.2.10 subvendor\_id

 $unsigned \ short \ hwloc\_obj\_attr\_u::hwloc\_pcidev\_attr\_s::subvendor\_id$ 

# 23.18.2.11 vendor\_id

unsigned short hwloc\_obj\_attr\_u::hwloc\_pcidev\_attr\_s::vendor\_id The documentation for this struct was generated from the following file:

· hwloc.h

# 23.19 hwloc\_topology\_cpubind\_support Struct Reference

#include <hwloc.h>

#### **Data Fields**

- unsigned char set\_thisproc\_cpubind
- unsigned char get\_thisproc\_cpubind
- unsigned char set\_proc\_cpubind
- unsigned char get\_proc\_cpubind
- · unsigned char set\_thisthread\_cpubind
- unsigned char get\_thisthread\_cpubind

- · unsigned char set\_thread\_cpubind
- · unsigned char get\_thread\_cpubind
- unsigned char get\_thisproc\_last\_cpu\_location
- unsigned char get\_proc\_last\_cpu\_location
- · unsigned char get\_thisthread\_last\_cpu\_location

#### 23.19.1 Detailed Description

Flags describing actual PU binding support for this topology.

A flag may be set even if the feature isn't supported in all cases (e.g. binding to random sets of non-contiguous objects).

#### 23.19.2 Field Documentation

#### 23.19.2.1 get proc cpubind

unsigned char hwloc\_topology\_cpubind\_support::get\_proc\_cpubind Getting the binding of a whole given process is supported.

#### 23.19.2.2 get\_proc\_last\_cpu\_location

unsigned char hwloc\_topology\_cpubind\_support::get\_proc\_last\_cpu\_location Getting the last processors where a whole process ran is supported

#### 23.19.2.3 get thisproc cpubind

unsigned char hwloc\_topology\_cpubind\_support::get\_thisproc\_cpubind Getting the binding of the whole current process is supported.

#### 23.19.2.4 get thisproc last cpu location

unsigned char hwloc\_topology\_cpubind\_support::get\_thisproc\_last\_cpu\_location Getting the last processors where the whole current process ran is supported

#### 23.19.2.5 get\_thisthread\_cpubind

unsigned char hwloc\_topology\_cpubind\_support::get\_thisthread\_cpubind Getting the binding of the current thread only is supported.

#### 23.19.2.6 get\_thisthread\_last\_cpu\_location

unsigned char hwloc\_topology\_cpubind\_support::get\_thisthread\_last\_cpu\_location Getting the last processors where the current thread ran is supported

# 23.19.2.7 get\_thread\_cpubind

unsigned char hwloc\_topology\_cpubind\_support::get\_thread\_cpubind Getting the binding of a given thread only is supported.

## 23.19.2.8 set\_proc\_cpubind

unsigned char hwloc\_topology\_cpubind\_support::set\_proc\_cpubind Binding a whole given process is supported.

#### 23.19.2.9 set\_thisproc\_cpubind

unsigned char hwloc\_topology\_cpubind\_support::set\_thisproc\_cpubind Binding the whole current process is supported.

#### 23.19.2.10 set\_thisthread\_cpubind

unsigned char hwloc\_topology\_cpubind\_support::set\_thisthread\_cpubind Binding the current thread only is supported.

#### 23.19.2.11 set\_thread\_cpubind

unsigned char hwloc\_topology\_cpubind\_support::set\_thread\_cpubind Binding a given thread only is supported.

The documentation for this struct was generated from the following file:

· hwloc.h

# 23.20 hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_generic\_s Struct Reference

#include <diff.h>

#### **Data Fields**

- hwloc\_topology\_diff\_type\_t type
- union hwloc\_topology\_diff\_u \* next

#### 23.20.1 Field Documentation

# 23.20.1.1 next

union hwloc\_topology\_diff\_u\* hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_generic\_s::next

#### 23.20.1.2 type

hwloc\_topology\_diff\_type\_t hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_generic\_s::type The documentation for this struct was generated from the following file:

• diff.h

# 23.21 hwloc\_topology\_diff\_obj\_attr\_u::hwloc\_topology\_diff\_obj\_attr\_ generic\_s Struct Reference

#include <diff.h>

# **Data Fields**

hwloc\_topology\_diff\_obj\_attr\_type\_t type

#### 23.21.1 Field Documentation

#### 23.21.1.1 type

 $\label{loc_topology_diff_obj_attr_type_t} $$ hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_$$ attr_generic_s::type $$ for each of the context of$ 

The documentation for this struct was generated from the following file:

· diff.h

# 23.22 hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_obj\_attr\_s Struct Reference

#include <diff.h>

#### **Data Fields**

- · hwloc topology diff type t type
- union hwloc\_topology\_diff\_u \* next
- · int obj\_depth
- unsigned obj\_index
- union hwloc\_topology\_diff\_obj\_attr\_u diff

#### 23.22.1 Field Documentation

#### 23.22.1.1 diff

 $\label{local_constraint} union \ hwloc\_topology\_diff\_obj\_attr\_u \ hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_obj\_attr\_s \\ \hspace*{0.5cm} ::diff$ 

#### 23.22.1.2 next

union hwloc\_topology\_diff\_u\* hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_obj\_attr\_s::next

# 23.22.1.3 obj\_depth

int hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_obj\_attr\_s::obj\_depth

#### 23.22.1.4 obj index

unsigned hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_obj\_attr\_s::obj\_index

#### 23.22.1.5 type

hwloc\_topology\_diff\_type\_t hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_obj\_attr\_s::type The documentation for this struct was generated from the following file:

· diff.h

# 23.23 hwloc\_topology\_diff\_obj\_attr\_u::hwloc\_topology\_diff\_obj\_attr\_← string\_s Struct Reference

#include <diff.h>

#### **Data Fields**

- hwloc\_topology\_diff\_obj\_attr\_type\_t type
- · char \* name
- char \* oldvalue
- char \* newvalue

# 23.23.1 Detailed Description

String attribute modification with an optional name.

#### 23.23.2 Field Documentation

#### 23.23.2.1 name

char\* hwloc\_topology\_diff\_obj\_attr\_u::hwloc\_topology\_diff\_obj\_attr\_string\_s::name

#### 23.23.2.2 newvalue

 $\verb|char*| hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_string_s::newvalue | hwloc_topology_diff_obj_attr_string_s::newvalue | hwl$ 

#### 23.23.2.3 oldvalue

 $\verb|char*| hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_string_s::oldvalue | for the content of the content of$ 

# 23.23.2.4 type

 $\label{loc_topology_diff_obj_attr_type_t} $$ hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_$$ attr_string_s::type $$ for each of the context of$ 

The documentation for this struct was generated from the following file:

· diff.h

# 23.24 hwloc\_topology\_diff\_obj\_attr\_u Union Reference

#include <diff.h>

#### **Data Structures**

- struct hwloc\_topology\_diff\_obj\_attr\_generic\_s
- struct hwloc\_topology\_diff\_obj\_attr\_string\_s
- · struct hwloc topology diff obj attr uint64 s

#### **Data Fields**

- struct hwloc\_topology\_diff\_obj\_attr\_u::hwloc\_topology\_diff\_obj\_attr\_generic\_s generic
- struct hwloc\_topology\_diff\_obj\_attr\_u::hwloc\_topology\_diff\_obj\_attr\_uint64\_s uint64
- struct hwloc\_topology\_diff\_obj\_attr\_u::hwloc\_topology\_diff\_obj\_attr\_string\_s string

# 23.24.1 Detailed Description

One object attribute difference.

#### 23.24.2 Field Documentation

#### 23.24.2.1 generic

 $struct\ hwloc\_topology\_diff\_obj\_attr\_u::hwloc\_topology\_diff\_obj\_attr\_generic\_s\ hwloc\_topology \\ \_diff\_obj\_attr\_u::generic$ 

#### 23.24.2.2 string

 $struct\ hwloc\_topology\_diff\_obj\_attr\_u::hwloc\_topology\_diff\_obj\_attr\_string\_s\ hwloc\_topology\_\leftrightarrow diff\_obj\_attr\_u::string$ 

#### 23.24.2.3 uint64

 $struct\ hwloc\_topology\_diff\_obj\_attr\_u::hwloc\_topology\_diff\_obj\_attr\_uint64\_s\ hwloc\_topology\_\leftrightarrow diff\_obj\_attr\_u::uint64$ 

The documentation for this union was generated from the following file:

• diff.h

# 23.25 hwloc\_topology\_diff\_obj\_attr\_u::hwloc\_topology\_diff\_obj\_attr\_ uint64\_s Struct Reference

#include <diff.h>

#### **Data Fields**

- hwloc\_topology\_diff\_obj\_attr\_type\_t type
- hwloc\_uint64\_t index
- hwloc uint64 t oldvalue
- hwloc\_uint64\_t newvalue

# 23.25.1 Detailed Description

Integer attribute modification with an optional index.

#### 23.25.2 Field Documentation

# 23.25.2.1 index

hwloc\_uint64\_t hwloc\_topology\_diff\_obj\_attr\_u::hwloc\_topology\_diff\_obj\_attr\_uint64\_s::index

# 23.25.2.2 newvalue

 $\verb|hwloc_uint64_t| hwloc_topology_diff_obj_attr_u:: \verb|hwloc_topology_diff_obj_attr_uint64_s:: new value | hwloc_topology_diff_obj_attr_uint64_s: new value | h$ 

#### 23.25.2.3 oldvalue

 $\verb|hwloc_uint64_t| hwloc_topology_diff_obj_attr_u:: \verb|hwloc_topology_diff_obj_attr_uint64_s:: oldvalue| | hwloc_topology_diff_obj_attr_uint64_s:: oldvalue| | hwloc_topology_$ 

#### 23.25.2.4 type

 $\label{loc_topology_diff_obj_attr_type_t} $$ hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_$$ attr_uint64_s::type $$ for each of the context of$ 

The documentation for this struct was generated from the following file:

· diff.h

# 23.26 hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_too\_complex\_s Struct Reference

#include <diff.h>

#### **Data Fields**

- hwloc\_topology\_diff\_type\_t type
- union hwloc\_topology\_diff\_u \* next
- · int obj\_depth
- unsigned obj index

#### 23.26.1 Field Documentation

#### 23.26.1.1 next

union hwloc\_topology\_diff\_u\* hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_too\_complex\_s::next

#### 23.26.1.2 obj depth

int hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_too\_complex\_s::obj\_depth

#### 23.26.1.3 obj\_index

unsigned hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_too\_complex\_s::obj\_index

#### 23.26.1.4 type

hwloc\_topology\_diff\_type\_t hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_too\_complex\_s::type
The documentation for this struct was generated from the following file:

· diff.h

# 23.27 hwloc topology diff u Union Reference

#include <diff.h>

# **Data Structures**

- struct hwloc\_topology\_diff\_generic\_s
- struct hwloc\_topology\_diff\_obj\_attr\_s
- struct hwloc\_topology\_diff\_too\_complex\_s

#### **Data Fields**

- struct hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_generic\_s generic
- struct hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_obj\_attr\_s obj\_attr
- struct hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_too\_complex\_s too\_complex

# 23.27.1 Detailed Description

One element of a difference list between two topologies.

#### 23.27.2 Field Documentation

# 23.27.2.1 generic

struct hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_generic\_s hwloc\_topology\_diff\_u::generic

#### 23.27.2.2 obj attr

struct hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_obj\_attr\_s hwloc\_topology\_diff\_u::obj\_attr

#### 23.27.2.3 too\_complex

 $struct\ hwloc\_topology\_diff\_u::hwloc\_topology\_diff\_too\_complex\_s\ hwloc\_topology\_diff\_u::too\_\leftrightarrow complex$ 

The documentation for this union was generated from the following file:

· diff.h

# 23.28 hwloc\_topology\_discovery\_support Struct Reference

#include <hwloc.h>

# **Data Fields**

- · unsigned char pu
- unsigned char numa
- · unsigned char numa memory
- unsigned char disallowed pu
- unsigned char disallowed\_numa

# 23.28.1 Detailed Description

Flags describing actual discovery support for this topology.

#### 23.28.2 Field Documentation

#### 23.28.2.1 disallowed\_numa

unsigned char hwloc\_topology\_discovery\_support::disallowed\_numa

Detecting and identifying NUMA nodes that are not available to the current process is supported.

#### 23.28.2.2 disallowed\_pu

unsigned char hwloc\_topology\_discovery\_support::disallowed\_pu

Detecting and identifying PU objects that are not available to the current process is supported.

#### 23.28.2.3 numa

unsigned char hwloc\_topology\_discovery\_support::numa

Detecting the number of NUMA nodes is supported.

#### 23.28.2.4 numa\_memory

unsigned char hwloc\_topology\_discovery\_support::numa\_memory

Detecting the amount of memory in NUMA nodes is supported.

#### 23.28.2.5 pu

unsigned char hwloc\_topology\_discovery\_support::pu

Detecting the number of PU objects is supported.

The documentation for this struct was generated from the following file:

· hwloc.h

# 23.29 hwloc\_topology\_membind\_support Struct Reference

#include <hwloc.h>

#### **Data Fields**

- · unsigned char set thisproc membind
- unsigned char get\_thisproc\_membind
- · unsigned char set\_proc\_membind
- · unsigned char get proc membind
- · unsigned char set thisthread membind
- · unsigned char get\_thisthread\_membind
- unsigned char set\_area\_membind
- unsigned char get\_area\_membind
- unsigned char alloc\_membind
- · unsigned char firsttouch membind
- · unsigned char bind\_membind
- · unsigned char interleave\_membind
- · unsigned char nexttouch membind
- · unsigned char migrate\_membind
- unsigned char get\_area\_memlocation

#### 23.29.1 Detailed Description

Flags describing actual memory binding support for this topology.

A flag may be set even if the feature isn't supported in all cases (e.g. binding to random sets of non-contiguous objects).

#### 23.29.2 Field Documentation

#### 23.29.2.1 alloc\_membind

unsigned char hwloc\_topology\_membind\_support::alloc\_membind Allocating a bound memory area is supported.

#### 23.29.2.2 bind membind

unsigned char hwloc\_topology\_membind\_support::bind\_membind Bind policy is supported.

#### 23.29.2.3 firsttouch membind

unsigned char hwloc\_topology\_membind\_support::firsttouch\_membind First-touch policy is supported.

#### 23.29.2.4 get\_area\_membind

unsigned char hwloc\_topology\_membind\_support::get\_area\_membind Getting the binding of a given memory area is supported.

#### 23.29.2.5 get area memlocation

 $\label{thm:continuous} \begin{tabular}{ll} unsigned char hwloc_topology_membind_support::get_area_memlocation \\ \begin{tabular}{ll} Getting the last NUMA nodes where a memory area was allocated is supported \\ \begin{tabular}{ll} All of the last NUMA nodes where a memory area was allocated in the last of the last of$ 

#### 23.29.2.6 get\_proc\_membind

unsigned char hwloc\_topology\_membind\_support::get\_proc\_membind Getting the binding of a whole given process is supported.

#### 23.29.2.7 get thisproc membind

unsigned char hwloc\_topology\_membind\_support::get\_thisproc\_membind Getting the binding of the whole current process is supported.

#### 23.29.2.8 get\_thisthread\_membind

unsigned char hwloc\_topology\_membind\_support::get\_thisthread\_membind Getting the binding of the current thread only is supported.

#### 23.29.2.9 interleave\_membind

unsigned char hwloc\_topology\_membind\_support::interleave\_membind Interleave policy is supported.

## 23.29.2.10 migrate\_membind

unsigned char hwloc\_topology\_membind\_support::migrate\_membind Migration flags is supported.

#### 23.29.2.11 nexttouch\_membind

 ${\tt unsigned\ char\ hwloc\_topology\_membind\_support::} next touch\_membind \\ {\tt Next-touch\ migration\ policy\ is\ supported.}$ 

#### 23.29.2.12 set\_area\_membind

unsigned char hwloc\_topology\_membind\_support::set\_area\_membind Binding a given memory area is supported.

#### 23.29.2.13 set\_proc\_membind

unsigned char hwloc\_topology\_membind\_support::set\_proc\_membind Binding a whole given process is supported.

#### 23.29.2.14 set\_thisproc\_membind

unsigned char hwloc\_topology\_membind\_support::set\_thisproc\_membind Binding the whole current process is supported.

#### 23.29.2.15 set thisthread membind

 $\label{lem:unsigned_char_hwloc_topology_membind_support::set\_thisthread\_membind} \\ \textbf{Binding the current thread only is supported.} \\$ 

The documentation for this struct was generated from the following file:

· hwloc.h

# 23.30 hwloc\_topology\_misc\_support Struct Reference

#include <hwloc.h>

#### **Data Fields**

· unsigned char imported\_support

# 23.30.1 Detailed Description

Flags describing miscellaneous features.

#### 23.30.2 Field Documentation

#### 23.30.2.1 imported\_support

unsigned char hwloc\_topology\_misc\_support::imported\_support
Support was imported when importing another topology, see HWLOC\_TOPOLOGY\_FLAG\_IMPORT\_SUPPORT.
The documentation for this struct was generated from the following file:

· hwloc.h

# 23.31 hwloc\_topology\_support Struct Reference

#include <hwloc.h>

# **Data Fields**

- struct hwloc topology discovery support \* discovery
- struct hwloc\_topology\_cpubind\_support \* cpubind
- struct hwloc\_topology\_membind\_support \* membind
- struct hwloc topology misc support \* misc

#### 23.31.1 Detailed Description

Set of flags describing actual support for this topology.

This is retrieved with <a href="https://hww.nctopology\_get\_support">hwloc\_topology\_get\_support</a>() and will be valid until the topology object is destroyed. Note: the values are correct only after discovery.

# 23.31.2 Field Documentation

#### 23.31.2.1 cpubind

struct hwloc\_topology\_cpubind\_support\* hwloc\_topology\_support::cpubind

#### 23.31.2.2 discovery

struct hwloc\_topology\_discovery\_support\* hwloc\_topology\_support::discovery

# 23.31.2.3 membind

struct hwloc\_topology\_membind\_support\* hwloc\_topology\_support::membind

#### 23.31.2.4 misc

 $\verb|struct hwloc_topology_misc_support*| hwloc_topology_support:: misc \\ The documentation for this struct was generated from the following file: \\$ 

· hwloc.h

# Index

allocate on, 165

```
ahi
                                                      hwloc_get_local_numanode_objs, 167
                                                      HWLOC LOCAL NUMANODE FLAG ALL, 166
    hwloc component, 216
Add or remove distances between objects, 163
                                                      hwloc local numanode flag e, 166
    hwloc distances add, 163
                                                      HWLOC_LOCAL_NUMANODE_FLAG_LARGER_LOCALITY,
    hwloc_distances_add_flag_e, 163
                                                           166
    HWLOC_DISTANCES_ADD_FLAG_GROUP, 163
                                                      HWLOC_LOCAL_NUMANODE_FLAG_SMALLER_LOCALITY,
    HWLOC_DISTANCES_ADD_FLAG_GROUP_INACCURATE, 166
                                                      hwloc_memattr_get_best_initiator, 167
    hwloc_distances_release_remove, 163
                                                      hwloc memattr get best target, 168
    hwloc distances remove, 164
                                                      hwloc memattr get by name, 168
    hwloc distances remove by depth, 164
                                                      hwloc_memattr_get_value, 168
    hwloc distances remove by type, 164
                                                      HWLOC MEMATTR ID BANDWIDTH, 167
alloc membind
                                                      HWLOC MEMATTR ID CAPACITY, 166
    hwloc topology membind support, 240
                                                      hwloc memattr id e, 166
API version, 79
                                                      HWLOC MEMATTR ID LATENCY, 167
    HWLOC_API_VERSION, 79
                                                      HWLOC_MEMATTR_ID_LOCALITY, 166
    HWLOC COMPONENT ABI, 79
                                                      hwloc memattr id t, 166
    hwloc_get_api_version, 79
                                                  complete cpuset
arity
                                                      hwloc_obj, 225
    hwloc obj, 225
                                                  complete nodeset
associativity
                                                      hwloc obj. 225
    hwloc_obj_attr_u::hwloc_cache_attr_s, 214
                                                  Components and Plugins: Core functions to be used by
attr
                                                           components, 203
    hwloc obj, 225
                                                      hwloc__insert_object_by_cpuset, 203
                                                      hwloc_alloc_setup_object, 203
bind membind
                                                      hwloc hide errors, 203
    hwloc topology membind support, 241
                                                      hwloc insert object by parent, 203
bridge
                                                      hwloc_obj_add_children_sets, 204
    hwloc_obj_attr_u, 230
                                                      hwloc plugin check namespace, 204
bus
                                                      hwloc topology reconnect, 204
    hwloc cl device topology amd, 215
                                                  Components and Plugins: Discovery backends, 200
    hwloc obj attr u::hwloc pcidev attr s, 231
                                                      hwloc_backend_alloc, 201
                                                      hwloc backend enable, 201
cache
                                                      HWLOC_DISC_PHASE_ANNOTATE, 200
    hwloc obj attr u, 230
                                                      HWLOC DISC PHASE CPU, 200
Changing the Source of Topology Discovery, 108
    HWLOC_TOPOLOGY_COMPONENTS_FLAG_BLACKLIST vyloc_disc_phase_e, 200
                                                      HWLOC DISC PHASE GLOBAL, 200
                                                      HWLOC DISC PHASE IO, 200
    hwloc_topology_components_flag_e, 108
                                                      HWLOC_DISC_PHASE_MEMORY, 200
    hwloc topology set components, 108
                                                      HWLOC DISC PHASE MISC, 200
    hwloc_topology_set_pid, 108
                                                      HWLOC DISC PHASE PCI, 200
    hwloc_topology_set_synthetic, 109
                                                      hwloc_disc_phase_t, 200
    hwloc topology set xml, 109
                                                      HWLOC_DISC_PHASE_TWEAK, 201
    hwloc topology set xmlbuffer, 110
children
                                                      hwloc disc status flag e, 201
                                                      HWLOC DISC STATUS FLAG GOT ALLOWED RESOURCES,
    hwloc obj, 225
    hwloc obj attr u::hwloc pcidev attr s, 231
                                                  Components and Plugins: Discovery components, 199
Comparing memory node attributes for finding where to
                                                  Components and Plugins: Filtering objects, 205
```

hwloc\_filter\_check\_keep\_object, 205

hwloc_filter_check_keep_object_type, 205	cpuset
hwloc_filter_check_osdev_subtype_important, 205	hwloc_location::hwloc_location_u, 222
hwloc_filter_check_pcidev_subtype_important,	hwloc_obj, 226
205	
Components and Plugins: finding PCI objects during	data
other discoveries, 208	hwloc cl device topology amd, 215
hwloc_pci_find_parent_by_busid, 208	
	hwloc_component, 216
Components and Plugins: Generic components, 202	depth
HWLOC_COMPONENT_TYPE_DISC, 202	hwloc_obj, 226
hwloc_component_type_e, 202	hwloc_obj_attr_u::hwloc_bridge_attr_s, 213
hwloc_component_type_t, 202	hwloc_obj_attr_u::hwloc_cache_attr_s, 214
HWLOC_COMPONENT_TYPE_XML, 202	hwloc_obj_attr_u::hwloc_group_attr_s, 220
Components and Plugins: helpers for PCI discovery, 206	dev
hwloc_pcidisc_check_bridge_type, 206	hwloc_obj_attr_u::hwloc_pcidev_attr_s, 231
hwloc_pcidisc_find_bridge_buses, 206	device
hwloc_pcidisc_find_cap, 206	
·	hwloc_cl_device_topology_amd, 215
hwloc_pcidisc_find_linkspeed, 206	device_id
hwloc_pcidisc_tree_attach, 206	hwloc_obj_attr_u::hwloc_pcidev_attr_s, 232
hwloc_pcidisc_tree_insert_by_busid, 207	diff
Consulting and Adding Key-Value Info Attributes, 96	hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s,
hwloc_obj_add_info, 96	235
hwloc obj get info by name, 96	disable
Converting between CPU sets and node sets, 138	hwloc_backend, 211
hwloc_cpuset_from_nodeset, 138	disallowed_numa
hwloc_cpuset_to_nodeset, 138	hwloc_topology_discovery_support, 239
_ •	
Converting between Object Types and Attributes, and	disallowed_pu
Strings, 94	hwloc_topology_discovery_support, 239
hwloc_obj_attr_snprintf, 94	discover
hwloc_obj_type_snprintf, 94	hwloc_backend, 211
hwloc_obj_type_string, 94	discovery
hwloc_type_sscanf, 95	hwloc_topology_support, 243
hwloc_type_sscanf_as_depth, 95	Distributing items over a topology, 134
count	hwloc_distrib, 134
hwloc_obj_attr_u::hwloc_numanode_attr_s::hwloc_r	
223	hwloc distrib flags e, 134
CPU and node sets of entire topologies, 135	domain
hwloc_topology_get_allowed_cpuset, 135	hwloc_obj_attr_u::hwloc_bridge_attr_s, 213
hwloc_topology_get_allowed_nodeset, 135	hwloc_obj_attr_u::hwloc_pcidev_attr_s, 232
hwloc_topology_get_complete_cpuset, 135	dont_merge
hwloc_topology_get_complete_nodeset, 136	hwloc_obj_attr_u::hwloc_group_attr_s, 220
hwloc_topology_get_topology_cpuset, 136	downstream
hwloc_topology_get_topology_nodeset, 136	hwloc_obj_attr_u::hwloc_bridge_attr_s, 213
CPU binding, 97	downstream type
hwloc_cpubind_flags_t, 97	hwloc_obj_attr_u::hwloc_bridge_attr_s, 213
HWLOC CPUBIND NOMEMBIND, 98	
HWLOC_CPUBIND_PROCESS, 98	enabled by default
HWLOC_CPUBIND_STRICT, 98	— <i>1</i> —
	hwloc_disc_component, 217
HWLOC_CPUBIND_THREAD, 98	excluded_phases
hwloc_get_cpubind, 98	hwloc_disc_component, 217
hwloc_get_last_cpu_location, 99	hwloc_disc_status, 218
hwloc_get_proc_cpubind, 99	Exporting Topologies to Synthetic, 157
hwloc_get_proc_last_cpu_location, 99	hwloc_topology_export_synthetic, 157
hwloc_get_thread_cpubind, 99	HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FLAG_IGNORE_ME
hwloc_set_cpubind, 100	157
hwloc_set_proc_cpubind, 100	HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FLAG_NO_ATTRS,
hwloc_set_thread_cpubind, 100	157
cpubind	HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FLAG_NO_EXTEND
hwloc_topology_support, 243	157
	101

HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FLA	
157	hwloc_obj_attr_u::hwloc_pcidev_attr_s, 232
hwloc_topology_export_synthetic_flags_e, 157	function
Exporting Topologies to XML, 153 hwloc_export_obj_userdata, 153	hwloc_cl_device_topology_amd, 215
hwloc_export_obj_userdata_base64, 154	generic
hwloc_free_xmlbuffer, 154	hwloc_topology_diff_obj_attr_u, 237
hwloc_topology_export_xml, 154	hwloc_topology_diff_u, 239
HWLOC_TOPOLOGY_EXPORT_XML_FLAG_V1,	get_area_membind
153	hwloc_topology_membind_support, 241
hwloc_topology_export_xml_flags_e, 153	get_area_memlocation
hwloc_topology_export_xmlbuffer, 154	hwloc_topology_membind_support, 241
hwloc_topology_set_userdata_export_callback,	get_pci_busid_cpuset
155	hwloc_backend, 212
hwloc_topology_set_userdata_import_callback,	get_proc_cpubind
155	hwloc_topology_cpubind_support, 233
finalize	get_proc_last_cpu_location
hwloc_component, 216	hwloc_topology_cpubind_support, 233
Finding I/O objects, 139	get_proc_membind hwloc_topology_membind_support, 241
hwloc_bridge_covers_pcibus, 139	get_thisproc_cpubind
hwloc_get_next_bridge, 139	hwloc_topology_cpubind_support, 233
hwloc_get_next_osdev, 139	get_thisproc_last_cpu_location
hwloc_get_next_pcidev, 139	hwloc topology cpubind support, 233
hwloc_get_non_io_ancestor_obj, 139	get_thisproc_membind
hwloc_get_pcidev_by_busid, 140	hwloc_topology_membind_support, 241
hwloc_get_pcidev_by_busidstring, 140	get_thisthread_cpubind
Finding Objects covering at least CPU set, 124	hwloc_topology_cpubind_support, 233
hwloc_get_child_covering_cpuset, 124	get_thisthread_last_cpu_location
hwloc_get_next_obj_covering_cpuset_by_depth,	hwloc_topology_cpubind_support, 233
124	get_thisthread_membind
hwloc_get_next_obj_covering_cpuset_by_type,	hwloc_topology_membind_support, 241
124	get_thread_cpubind
hwloc_get_obj_covering_cpuset, 125	hwloc_topology_cpubind_support, 233
Finding Objects inside a CPU set, 121	gp_index
hwloc_get_first_largest_obj_inside_cpuset, 121 hwloc_get_largest_objs_inside_cpuset, 121	hwloc_obj, 226
hwloc_get_nbobjs_inside_cpuset_by_depth, 121	group
hwloc_get_nbobjs_inside_cpuset_by_type, 122	hwloc_obj_attr_u, 230
hwloc_get_next_obj_inside_cpuset_by_depth, 122	Helpers for consulting distance matrices, 162
hwloc_get_next_obj_inside_cpuset_by_type, 122	hwloc_distances_obj_index, 162
hwloc_get_obj_index_inside_cpuset, 122	hwloc_distances_obj_pair_values, 162
hwloc_get_obj_inside_cpuset_by_depth, 123	hwlocinsert_object_by_cpuset
hwloc_get_obj_inside_cpuset_by_type, 123	Components and Plugins: Core functions to be
Finding objects, miscellaneous helpers, 131	used by components, 203
hwloc_bitmap_singlify_per_core, 131	hwloc_alloc
hwloc_get_closest_objs, 131	Memory binding, 103
hwloc_get_numanode_obj_by_os_index, 132	hwloc_alloc_membind
hwloc_get_obj_below_array_by_type, 132	Memory binding, 104
hwloc_get_obj_below_by_type, 132	hwloc_alloc_membind_policy
hwloc_get_pu_obj_by_os_index, 132	Memory binding, 104
first_child	hwloc_alloc_setup_object
hwloc_obj, 226	Components and Plugins: Core functions to be
firsttouch_membind	used by components, 203
hwloc_topology_membind_support, 241	HWLOC_ALLOW_FLAG_ALL  Modifying a loaded Topology, 117
flags hwloc_backend, 211	HWLOC_ALLOW_FLAG_CUSTOM
hwloc_component, 216	Modifying a loaded Topology, 117
hwloc_disc_status, 219	HWLOC_ALLOW_FLAG_LOCAL_RESTRICTIONS

Modifying a loaded Topology, 117	The bitmap API, 146
hwloc_allow_flags_e	hwloc_bitmap_from_ulongs
Modifying a loaded Topology, 117	The bitmap API, 146
HWLOC_API_VERSION	hwloc_bitmap_intersects
API version, 79	The bitmap API, 146
hwloc_backend, 211	hwloc_bitmap_isequal
disable, 211	The bitmap API, 146
discover, 211	hwloc_bitmap_isfull
flags, 211	The bitmap API, 147
get_pci_busid_cpuset, 212	hwloc_bitmap_isincluded
is thissystem, 212	The bitmap API, 147
phases, 212	hwloc_bitmap_isset
private_data, 212	The bitmap API, 147
hwloc backend alloc	hwloc_bitmap_iszero
Components and Plugins: Discovery backends,	The bitmap API, 147
201	hwloc bitmap last
hwloc backend enable	The bitmap API, 147
Components and Plugins: Discovery backends,	hwloc_bitmap_last_unset
201	The bitmap API, 148
hwloc bitmap allbut	•
The bitmap API, 143	hwloc_bitmap_list_asprintf
•	The bitmap API, 148
hwloc_bitmap_alloc	hwloc_bitmap_list_snprintf
The bitmap API, 143	The bitmap API, 148
hwloc_bitmap_alloc_full	hwloc_bitmap_list_sscanf
The bitmap API, 143	The bitmap API, 148
hwloc_bitmap_and	hwloc_bitmap_next
The bitmap API, 143	The bitmap API, 148
hwloc_bitmap_andnot	hwloc_bitmap_next_unset
The bitmap API, 143	The bitmap API, 149
hwloc_bitmap_asprintf	hwloc_bitmap_not
The bitmap API, 144	The bitmap API, 149
hwloc_bitmap_clr	hwloc_bitmap_nr_ulongs
The bitmap API, 144	The bitmap API, 149
hwloc_bitmap_clr_range	hwloc_bitmap_only
The bitmap API, 144	The bitmap API, 149
hwloc_bitmap_compare	hwloc_bitmap_or
The bitmap API, 144	The bitmap API, 149
hwloc_bitmap_compare_first	hwloc_bitmap_set
The bitmap API, 144	The bitmap API, 150
hwloc_bitmap_copy	hwloc_bitmap_set_ith_ulong
The bitmap API, 145	The bitmap API, 150
hwloc_bitmap_dup	hwloc_bitmap_set_range
The bitmap API, 145	The bitmap API, 150
hwloc_bitmap_fill	hwloc bitmap singlify
The bitmap API, 145	The bitmap API, 150
hwloc_bitmap_first	hwloc bitmap singlify per core
The bitmap API, 145	Finding objects, miscellaneous helpers, 131
hwloc_bitmap_first_unset	hwloc_bitmap_snprintf
The bitmap API, 145	The bitmap API, 150
hwloc_bitmap_foreach_begin	hwloc_bitmap_sscanf
The bitmap API, 142	The bitmap API, 151
hwloc_bitmap_foreach_end	hwloc_bitmap_t
The bitmap API, 142	The bitmap API, 143
hwloc_bitmap_free	hwloc_bitmap_taskset_asprintf
The bitmap API, 146	The bitmap API, 151
hwloc_bitmap_from_ith_ulong	hwloc_bitmap_taskset_snprintf
The bitmap API, 146	The bitmap API, 151
hwloc_bitmap_from_ulong	hwloc_bitmap_taskset_sscanf
nwioo_oitinap_noin_ulong	nwioc_bitinap_taskset_sscani

The hitman ADI 454	CDI I binding 00
The bitmap API, 151	CPU binding, 98
hwloc_bitmap_to_ith_ulong	HWLOC_CPUBIND_PROCESS
The bitmap API, 151	CPU binding, 98
hwloc_bitmap_to_ulong	HWLOC_CPUBIND_STRICT
The bitmap API, 152	CPU binding, 98
hwloc_bitmap_to_ulongs	HWLOC_CPUBIND_THREAD
The bitmap API, 152	CPU binding, 98
hwloc_bitmap_weight	hwloc_cpuset_from_glibc_sched_affinity
The bitmap API, 152	Interoperability with glibc sched affinity, 178
hwloc_bitmap_xor	hwloc_cpuset_from_linux_libnuma_bitmask
The bitmap API, 152	Interoperability with Linux libnuma bitmask, 176
hwloc_bitmap_zero	hwloc_cpuset_from_linux_libnuma_ulongs
The bitmap API, 152	Interoperability with Linux libnuma unsigned long
hwloc_bridge_covers_pcibus	masks, 174
Finding I/O objects, 139	hwloc_cpuset_from_nodeset
hwloc_cl_device_topology_amd, 214	Converting between CPU sets and node sets, 138
bus, 215	hwloc_cpuset_t
data, 215	Object Sets (hwloc_cpuset_t and hwloc_nodeset_t),
device, 215	80
function, 215	hwloc_cpuset_to_glibc_sched_affinity
pcie, 215	Interoperability with glibc sched affinity, 178
raw, 215	hwloc_cpuset_to_linux_libnuma_bitmask
type, 215	Interoperability with Linux libnuma bitmask, 176
unused, 215	hwloc_cpuset_to_linux_libnuma_ulongs
hwloc_compare_types	Interoperability with Linux libnuma unsigned long
Object Types, 84	masks, 174
hwloc_component, 216	hwloc_cpuset_to_nodeset
abi, 216	Converting between CPU sets and node sets, 138
data, 216	hwloc_cuda_get_device_cpuset
finalize, 216	Interoperability with the CUDA Driver API, 181
flags, 216	hwloc_cuda_get_device_osdev
init, 216	Interoperability with the CUDA Driver API, 181
type, 217	hwloc_cuda_get_device_osdev_by_index
HWLOC_COMPONENT_ABI	Interoperability with the CUDA Driver API, 181
API version, 79	hwloc_cuda_get_device_pci_ids
HWLOC_COMPONENT_TYPE_DISC	Interoperability with the CUDA Driver API, 182
Components and Plugins: Generic components, 202	hwloc_cuda_get_device_pcidev
hwloc_component_type_e	Interoperability with the CUDA Driver API, 182
Components and Plugins: Generic components,	hwloc_cudart_get_device_cpuset
202	Interoperability with the CUDA Runtime API, 183
hwloc_component_type_t	hwloc_cudart_get_device_osdev_by_index
Components and Plugins: Generic components,	Interoperability with the CUDA Runtime API, 183
202	hwloc_cudart_get_device_pci_ids
HWLOC_COMPONENT_TYPE_XML	Interoperability with the CUDA Runtime API, 183
Components and Plugins: Generic components,	hwloc_cudart_get_device_pcidev
202	Interoperability with the CUDA Runtime API, 183
hwloc_const_bitmap_t	hwloc_disc_component, 217
The bitmap API, 143	enabled_by_default, 217
hwloc_const_cpuset_t	excluded_phases, 217
Object Sets (hwloc_cpuset_t and hwloc_nodeset_t),	instantiate, 218
80	name, 218
hwloc_const_nodeset_t	phases, 218
Object Sets (hwloc_cpuset_t and hwloc_nodeset_t),	priority, 218
80	HWLOC_DISC_PHASE_ANNOTATE
hwloc_cpubind_flags_t	Components and Plugins: Discovery backends,
CPU binding, 97	200
HWLOC_CPUBIND_NOMEMBIND	HWLOC_DISC_PHASE_CPU
	· · · · · · · · · · · · ·

Components and Plugins: Discovery backends, 200	HWLOC_DISTANCES_KIND_FROM_USER Retrieve distances between objects, 159
hwloc_disc_phase_e	HWLOC_DISTANCES_KIND_HETEROGENEOUS_TYPES
Components and Plugins: Discovery backends,	Retrieve distances between objects, 159
200	HWLOC_DISTANCES_KIND_MEANS_BANDWIDTH
HWLOC DISC PHASE GLOBAL	Retrieve distances between objects, 159
Components and Plugins: Discovery backends,	HWLOC_DISTANCES_KIND_MEANS_LATENCY
200	Retrieve distances between objects, 159
HWLOC_DISC_PHASE_IO	hwloc_distances_obj_index
Components and Plugins: Discovery backends,	Helpers for consulting distance matrices, 162
200	hwloc distances obj pair values
HWLOC_DISC_PHASE_MEMORY	Helpers for consulting distance matrices, 162
Components and Plugins: Discovery backends,	
200	hwloc_distances_release
HWLOC_DISC_PHASE_MISC	Retrieve distances between objects, 161
Components and Plugins: Discovery backends,	hwloc_distances_release_remove
200	Add or remove distances between objects, 163
	hwloc_distances_remove
HWLOC_DISC_PHASE_PCI	Add or remove distances between objects, 164
Components and Plugins: Discovery backends,	hwloc_distances_remove_by_depth
200	Add or remove distances between objects, 164
hwloc_disc_phase_t	hwloc_distances_remove_by_type
Components and Plugins: Discovery backends,	Add or remove distances between objects, 164
200	hwloc_distances_s, 219
HWLOC_DISC_PHASE_TWEAK	kind, 219
Components and Plugins: Discovery backends,	nbobjs, 219
201	objs, 219
hwloc_disc_status, 218	values, 220
excluded_phases, 218	hwloc_distrib
flags, 219	Distributing items over a topology, 134
phase, 219	HWLOC_DISTRIB_FLAG_REVERSE
hwloc_disc_status_flag_e	Distributing items over a topology, 134
Components and Plugins: Discovery backends,	hwloc_distrib_flags_e
201	Distributing items over a topology, 134
HWLOC_DISC_STATUS_FLAG_GOT_ALLOWED_RESC	
Components and Plugins: Discovery backends,	Exporting Topologies to XML, 153
201	hwloc_export_obj_userdata_base64
hwloc_distances_add	Exporting Topologies to XML, 154
Add or remove distances between objects, 163	hwloc_filter_check_keep_object
hwloc_distances_add_flag_e	Components and Plugins: Filtering objects, 205
Add or remove distances between objects, 163	hwloc_filter_check_keep_object_type
HWLOC_DISTANCES_ADD_FLAG_GROUP	Components and Plugins: Filtering objects, 205
Add or remove distances between objects, 163	hwloc_filter_check_osdev_subtype_important
HWLOC_DISTANCES_ADD_FLAG_GROUP_INACCURA	
Add or remove distances between objects, 163	hwloc_filter_check_pcidev_subtype_important
hwloc_distances_get	Components and Plugins: Filtering objects, 205
Retrieve distances between objects, 160	hwloc_free
hwloc_distances_get_by_depth	Memory binding, 104
Retrieve distances between objects, 160	hwloc_free_xmlbuffer
hwloc_distances_get_by_name	Exporting Topologies to XML, 154
Retrieve distances between objects, 160	hwloc_get_ancestor_obj_by_depth
hwloc_distances_get_by_type	Looking at Ancestor and Child Objects, 126
Retrieve distances between objects, 160	hwloc_get_ancestor_obj_by_type
hwloc_distances_get_name	Looking at Ancestor and Child Objects, 126
Retrieve distances between objects, 160	hwloc_get_api_version
hwloc_distances_kind_e	API version, 79
Retrieve distances between objects, 159	hwloc_get_area_membind
HWLOC_DISTANCES_KIND_FROM_OS	Memory binding, 104
Retrieve distances between objects, 159	hwloc_get_area_memlocation

Memory binding, 105	hwloc_get_numanode_obj_by_os_index
hwloc_get_cache_covering_cpuset	Finding objects, miscellaneous helpers, 132
Looking at Cache Objects, 130	hwloc_get_obj_below_array_by_type
hwloc_get_cache_type_depth	Finding objects, miscellaneous helpers, 132
Looking at Cache Objects, 130	hwloc_get_obj_below_by_type
hwloc_get_child_covering_cpuset	Finding objects, miscellaneous helpers, 132
Finding Objects covering at least CPU set, 124	hwloc_get_obj_by_depth
hwloc_get_closest_objs	Object levels, depths and types, 92
Finding objects, miscellaneous helpers, 131	hwloc_get_obj_by_type
hwloc_get_common_ancestor_obj	Object levels, depths and types, 92
Looking at Ancestor and Child Objects, 126	hwloc_get_obj_covering_cpuset
hwloc_get_cpubind	Finding Objects covering at least CPU set, 125
CPU binding, 98	hwloc_get_obj_index_inside_cpuset
hwloc_get_depth_type	Finding Objects inside a CPU set, 122
Object levels, depths and types, 91	hwloc_get_obj_inside_cpuset_by_depth
hwloc_get_first_largest_obj_inside_cpuset	Finding Objects inside a CPU set, 123
Finding Objects inside a CPU set, 121	hwloc_get_obj_inside_cpuset_by_type
hwloc_get_largest_objs_inside_cpuset	Finding Objects inside a CPU set, 123
Finding Objects inside a CPU set, 121	hwloc_get_pcidev_by_busid
hwloc_get_last_cpu_location	Finding I/O objects, 140
CPU binding, 99	hwloc_get_pcidev_by_busidstring
hwloc_get_local_numanode_objs	Finding I/O objects, 140
Comparing memory node attributes for finding	hwloc_get_proc_cpubind
where to allocate on, 167	CPU binding, 99
hwloc_get_membind	hwloc_get_proc_last_cpu_location
Memory binding, 105	CPU binding, 99
hwloc_get_memory_parents_depth	hwloc_get_proc_membind
Object levels, depths and types, 91	Memory binding, 105
hwloc_get_nbobjs_by_depth	hwloc_get_pu_obj_by_os_index
Object levels, depths and types, 91	Finding objects, miscellaneous helpers, 132
hwloc_get_nbobjs_by_type	hwloc_get_root_obj
Object levels, depths and types, 91	Object levels, depths and types, 92
hwloc_get_nbobjs_inside_cpuset_by_depth	hwloc_get_shared_cache_covering_obj
Finding Objects inside a CPU set, 121	Looking at Cache Objects, 130
hwloc_get_nbobjs_inside_cpuset_by_type	hwloc_get_thread_cpubind
Finding Objects inside a CPU set, 122	CPU binding, 99
hwloc_get_next_bridge	hwloc_get_type_depth
Finding I/O objects, 139	Object levels, depths and types, 92
hwloc_get_next_child	hwloc_get_type_depth_e
Looking at Ancestor and Child Objects, 126	Object levels, depths and types, 90
hwloc_get_next_obj_by_depth	hwloc_get_type_or_above_depth
Object levels, depths and types, 91	Object levels, depths and types, 92
hwloc_get_next_obj_by_type	hwloc_get_type_or_below_depth
Object levels, depths and types, 91	Object levels, depths and types, 93
hwloc_get_next_obj_covering_cpuset_by_depth	hwloc_gl_get_display_by_osdev
Finding Objects covering at least CPU set, 124	Interoperability with OpenGL displays, 189
hwloc_get_next_obj_covering_cpuset_by_type	hwloc_gl_get_display_osdev_by_name
Finding Objects covering at least CPU set, 124	Interoperability with OpenGL displays, 189
hwloc_get_next_obj_inside_cpuset_by_depth	hwloc_gl_get_display_osdev_by_port_device
Finding Objects inside a CPU set, 122	Interoperability with OpenGL displays, 189
hwloc_get_next_obj_inside_cpuset_by_type	hwloc_hide_errors
Finding Objects inside a CPU set, 122	Components and Plugins: Core functions to be
hwloc_get_next_osdev	used by components, 203
Finding I/O objects, 139	hwloc_ibv_get_device_cpuset
hwloc_get_next_pcidev	Interoperability with OpenFabrics, 191
Finding I/O objects, 139	hwloc_ibv_get_device_osdev
hwloc_get_non_io_ancestor_obj	Interoperability with OpenFabrics, 191
Finding I/O objects, 139	hwloc_ibv_get_device_osdev_by_name

Interoperability with OpenFabrics, 191	Comparing memory node attributes	for	findina
hwloc_info_s, 221	where to allocate on, 168	.0.	g
name, 221	hwloc_memattr_get_flags		
value, 221	Managing memory attributes, 169		
hwloc_insert_object_by_parent	hwloc_memattr_get_initiators		
Components and Plugins: Core functions to be	Managing memory attributes, 169		
used by components, 203	hwloc_memattr_get_name		
hwloc_linux_get_tid_cpubind	Managing memory attributes, 170		
Linux-specific helpers, 172	hwloc_memattr_get_targets		
hwloc_linux_get_tid_last_cpu_location	Managing memory attributes, 170		
Linux-specific helpers, 172	hwloc_memattr_get_value		
hwloc_linux_read_path_as_cpumask	Comparing memory node attributes	for	finding
Linux-specific helpers, 172	where to allocate on, 168		
hwloc_linux_set_tid_cpubind	HWLOC_MEMATTR_ID_BANDWIDTH		
Linux-specific helpers, 172	Comparing memory node attributes	for	finding
HWLOC_LOCAL_NUMANODE_FLAG_ALL	where to allocate on, 167		
Comparing memory node attributes for finding	HWLOC_MEMATTR_ID_CAPACITY		
where to allocate on, 166	Comparing memory node attributes	for	finding
hwloc_local_numanode_flag_e	where to allocate on, 166		
Comparing memory node attributes for finding	hwloc_memattr_id_e		
where to allocate on, 166	Comparing memory node attributes	for	finding
HWLOC LOCAL NUMANODE FLAG LARGER LOCAL	ITY where to allocate on, 166		
Comparing memory node attributes for finding	HWLOC_MEMATTR_ID_LATENCY		
where to allocate on 166	Comparing memory node attributes	for	finding
HWLOC_LOCAL_NUMANODE_FLAG_SMALLER_LOCA	Where to allocate on, 167		
Comparing memory node attributes for finding	``HWLOC_MEMATTR_ID_LOCALITY		
where to allocate on, 166	Comparing memory node attributes	for	finding
hwloc_location, 221	where to allocate on, 166		
HWLOC_LOCATION_TYPE_CPUSET, 222	hwloc_memattr_id_t		
hwloc_location_type_e, 221	Comparing memory node attributes	for	finding
HWLOC_LOCATION_TYPE_OBJECT, 222	where to allocate on, 166		
location, 222	hwloc_memattr_register		
type, 222	Managing memory attributes, 171		
hwloc_location::hwloc_location_u, 222	hwloc_memattr_set_value		
cpuset, 222	Managing memory attributes, 171		
object, 222	HWLOC_MEMBIND_BIND		
HWLOC_LOCATION_TYPE_CPUSET	Memory binding, 103		
hwloc_location, 222	HWLOC_MEMBIND_BYNODESET		
hwloc_location_type_e	Memory binding, 102		
hwloc location, 221	HWLOC_MEMBIND_DEFAULT		
HWLOC LOCATION TYPE OBJECT	Memory binding, 103		
hwloc_location, 222	HWLOC_MEMBIND_FIRSTTOUCH		
hwloc_memattr_flag_e	Memory binding, 103		
<del>-</del>	hwloc_membind_flags_t		
Managing memory attributes, 169	Memory binding, 102		
HWLOC_MEMATTR_FLAG_HIGHER_FIRST	HWLOC_MEMBIND_INTERLEAVE		
Managing memory attributes, 169	Memory binding, 103		
HWLOC_MEMATTR_FLAG_LOWER_FIRST	HWLOC_MEMBIND_MIGRATE		
Managing memory attributes, 169	Memory binding, 102		
HWLOC_MEMATTR_FLAG_NEED_INITIATOR	HWLOC_MEMBIND_MIXED		
Managing memory attributes, 169	Memory binding, 103		
hwloc_memattr_get_best_initiator	HWLOC_MEMBIND_NEXTTOUCH		
Comparing memory node attributes for finding	Memory binding, 103		
where to allocate on, 167	HWLOC_MEMBIND_NOCPUBIND		
hwloc_memattr_get_best_target	Memory binding, 102		
Comparing memory node attributes for finding	hwloc_membind_policy_t		
where to allocate on, 168	Memory binding, 103		
hwloc memattr get by name	HWLOC MEMBIND PROCESS		

Memory binding, 102	total_memory, 229
HWLOC_MEMBIND_STRICT	type, 229
Memory binding, 102	userdata, 229
HWLOC_MEMBIND_THREAD	hwloc_obj_add_children_sets
Memory binding, 102	Components and Plugins: Core functions to be
hwloc_nodeset_from_linux_libnuma_bitmask	used by components, 204
Interoperability with Linux libnuma bitmask, 176	hwloc_obj_add_info
hwloc_nodeset_from_linux_libnuma_ulongs	Consulting and Adding Key-Value Info Attributes, 96
Interoperability with Linux libnuma unsigned long	hwloc_obj_add_other_obj_sets
masks, 174	Modifying a loaded Topology, 118
hwloc_nodeset_t	hwloc_obj_attr_snprintf
Object Sets (hwloc_cpuset_t and hwloc_nodeset_t), 80	Converting between Object Types and Attributes, and Strings, 94
hwloc_nodeset_to_linux_libnuma_bitmask	hwloc_obj_attr_u, 229
Interoperability with Linux libnuma bitmask, 176	
·	bridge, 230
hwloc_nodeset_to_linux_libnuma_ulongs	cache, 230
Interoperability with Linux libnuma unsigned long	group, 230
masks, 175	numanode, 230
hwloc_nvml_get_device_cpuset	osdev, 230
Interoperability with the NVIDIA Management Li-	pcidev, 230
brary, 185	hwloc_obj_attr_u::hwloc_bridge_attr_s, 212
hwloc_nvml_get_device_osdev	depth, 213
Interoperability with the NVIDIA Management Li-	domain, 213
brary, 185	downstream, 213
hwloc_nvml_get_device_osdev_by_index	downstream_type, 213
Interoperability with the NVIDIA Management Li-	pci, 213
brary, 185	secondary_bus, 213
hwloc_obj, 224	subordinate_bus, 213
arity, 225	upstream, 213
attr, 225	upstream_type, 213
children, 225	hwloc_obj_attr_u::hwloc_cache_attr_s, 214
complete_cpuset, 225	associativity, 214
complete_nodeset, 225	depth, 214
cpuset, 226	linesize, 214
depth, 226	size, 214
first_child, 226	type, 214
gp_index, 226	hwloc_obj_attr_u::hwloc_group_attr_s, 220
infos, 226	depth, 220
infos_count, 227	dont_merge, 220
io_arity, 227	kind, 220
io_first_child, 227	subkind, 220
last_child, 227	hwloc_obj_attr_u::hwloc_numanode_attr_s, 223
logical_index, 227	local_memory, 223
memory_arity, 227	page_types, 224
memory_first_child, 227	page_types_len, 224
misc_arity, 227	hwloc_obj_attr_u::hwloc_numanode_attr_s::hwloc_memory_page_type_s
misc_first_child, 227	223
name, 228	count, 223
next_cousin, 228	size, 223
next_sibling, 228	hwloc_obj_attr_u::hwloc_osdev_attr_s, 231
nodeset, 228	type, 231
os_index, 228	hwloc_obj_attr_u::hwloc_pcidev_attr_s, 231
parent, 228	bus, 231
prev_cousin, 228	class_id, 231
prev_sibling, 229	dev, 231
sibling_rank, 229	device_id, 232
subtype, 229	domain, 232
symmetric_subtree, 229	func, 232

linkspeed, 232	Object Types, 83
revision, 232	HWLOC_OBJ_OS_DEVICE
subdevice_id, 232	Object Types, 84
subvendor_id, 232	HWLOC_OBJ_OSDEV_BLOCK
vendor_id, 232	Object Types, 82
HWLOC_OBJ_BRIDGE	HWLOC_OBJ_OSDEV_COPROC
Object Types, 84	Object Types, 82
HWLOC_OBJ_BRIDGE_HOST	HWLOC_OBJ_OSDEV_DMA
Object Types, 82	Object Types, 82
HWLOC OBJ BRIDGE PCI	HWLOC_OBJ_OSDEV_GPU
Object Types, 82	Object Types, 82
hwloc_obj_bridge_type_e	HWLOC_OBJ_OSDEV_NETWORK
Object Types, 82	Object Types, 82
hwloc_obj_bridge_type_t	HWLOC_OBJ_OSDEV_OPENFABRICS
Object Types, 81	Object Types, 82
HWLOC_OBJ_CACHE_DATA	
Object Types, 82	hwloc_obj_osdev_type_e
	Object Types, 82
HWLOC_OBJ_CACHE_INSTRUCTION	hwloc_obj_osdev_type_t
Object Types, 82	Object Types, 81
hwloc_obj_cache_type_e	HWLOC_OBJ_PACKAGE
Object Types, 82	Object Types, 83
hwloc_obj_cache_type_t	HWLOC_OBJ_PCI_DEVICE
Object Types, 81	Object Types, 84
HWLOC_OBJ_CACHE_UNIFIED	HWLOC_OBJ_PU
Object Types, 82	Object Types, 83
HWLOC_OBJ_CORE	hwloc_obj_t
Object Types, 83	Object Structure and Attributes, 86
HWLOC_OBJ_DIE	hwloc_obj_type_is_cache
Object Types, 84	Kinds of object Type, 128
hwloc_obj_get_info_by_name	hwloc_obj_type_is_dcache
	······································
Consulting and Adding Key-Value Info Attributes, 96	Kinds of object Type, 128
Consulting and Adding Key-Value Info Attributes, 96	Kinds of object Type, 128
Consulting and Adding Key-Value Info Attributes, 96 HWLOC_OBJ_GROUP	Kinds of object Type, 128 hwloc_obj_type_is_icache
Consulting and Adding Key-Value Info Attributes, 96 HWLOC_OBJ_GROUP Object Types, 83	Kinds of object Type, 128 hwloc_obj_type_is_icache Kinds of object Type, 128
Consulting and Adding Key-Value Info Attributes, 96 HWLOC_OBJ_GROUP Object Types, 83 hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127	Kinds of object Type, 128 hwloc_obj_type_is_icache Kinds of object Type, 128 hwloc_obj_type_is_io Kinds of object Type, 128
Consulting and Adding Key-Value Info Attributes, 96  HWLOC_OBJ_GROUP Object Types, 83  hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127  HWLOC_OBJ_L1CACHE	Kinds of object Type, 128 hwloc_obj_type_is_icache Kinds of object Type, 128 hwloc_obj_type_is_io Kinds of object Type, 128 hwloc_obj_type_is_memory
Consulting and Adding Key-Value Info Attributes, 96 HWLOC_OBJ_GROUP Object Types, 83 hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127 HWLOC_OBJ_L1CACHE Object Types, 83	Kinds of object Type, 128 hwloc_obj_type_is_icache    Kinds of object Type, 128 hwloc_obj_type_is_io    Kinds of object Type, 128 hwloc_obj_type_is_memory    Kinds of object Type, 129
Consulting and Adding Key-Value Info Attributes, 96  HWLOC_OBJ_GROUP Object Types, 83  hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127  HWLOC_OBJ_L1CACHE Object Types, 83  HWLOC_OBJ_L1ICACHE	Kinds of object Type, 128 hwloc_obj_type_is_icache   Kinds of object Type, 128 hwloc_obj_type_is_io   Kinds of object Type, 128 hwloc_obj_type_is_memory   Kinds of object Type, 129 hwloc_obj_type_is_normal
Consulting and Adding Key-Value Info Attributes, 96  HWLOC_OBJ_GROUP Object Types, 83  hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127  HWLOC_OBJ_L1CACHE Object Types, 83  HWLOC_OBJ_L1ICACHE Object Types, 83	Kinds of object Type, 128 hwloc_obj_type_is_icache   Kinds of object Type, 128 hwloc_obj_type_is_io   Kinds of object Type, 128 hwloc_obj_type_is_memory   Kinds of object Type, 129 hwloc_obj_type_is_normal   Kinds of object Type, 129
Consulting and Adding Key-Value Info Attributes, 96  HWLOC_OBJ_GROUP Object Types, 83  hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127  HWLOC_OBJ_L1CACHE Object Types, 83  HWLOC_OBJ_L1ICACHE Object Types, 83  HWLOC_OBJ_L2CACHE	Kinds of object Type, 128 hwloc_obj_type_is_icache   Kinds of object Type, 128 hwloc_obj_type_is_io   Kinds of object Type, 128 hwloc_obj_type_is_memory   Kinds of object Type, 129 hwloc_obj_type_is_normal   Kinds of object Type, 129 hwloc_obj_type_snprintf
Consulting and Adding Key-Value Info Attributes, 96 HWLOC_OBJ_GROUP Object Types, 83 hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127 HWLOC_OBJ_L1CACHE Object Types, 83 HWLOC_OBJ_L1ICACHE Object Types, 83 HWLOC_OBJ_L2CACHE Object Types, 83	Kinds of object Type, 128 hwloc_obj_type_is_icache    Kinds of object Type, 128 hwloc_obj_type_is_io    Kinds of object Type, 128 hwloc_obj_type_is_memory    Kinds of object Type, 129 hwloc_obj_type_is_normal    Kinds of object Type, 129 hwloc_obj_type_snprintf    Converting between Object Types and Attributes,
Consulting and Adding Key-Value Info Attributes, 96  HWLOC_OBJ_GROUP Object Types, 83  hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127  HWLOC_OBJ_L1CACHE Object Types, 83  HWLOC_OBJ_L1ICACHE Object Types, 83  HWLOC_OBJ_L2CACHE Object Types, 83  HWLOC_OBJ_L2CACHE Object Types, 83  HWLOC_OBJ_L2ICACHE	Kinds of object Type, 128 hwloc_obj_type_is_icache    Kinds of object Type, 128 hwloc_obj_type_is_io    Kinds of object Type, 128 hwloc_obj_type_is_memory    Kinds of object Type, 129 hwloc_obj_type_is_normal    Kinds of object Type, 129 hwloc_obj_type_snprintf    Converting between Object Types and Attributes,    and Strings, 94
Consulting and Adding Key-Value Info Attributes, 96  HWLOC_OBJ_GROUP Object Types, 83  hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127  HWLOC_OBJ_L1CACHE Object Types, 83  HWLOC_OBJ_L1ICACHE Object Types, 83  HWLOC_OBJ_L2CACHE Object Types, 83  HWLOC_OBJ_L2ICACHE Object Types, 83  HWLOC_OBJ_L2ICACHE Object Types, 83	Kinds of object Type, 128 hwloc_obj_type_is_icache    Kinds of object Type, 128 hwloc_obj_type_is_io    Kinds of object Type, 128 hwloc_obj_type_is_memory    Kinds of object Type, 129 hwloc_obj_type_is_normal    Kinds of object Type, 129 hwloc_obj_type_snprintf    Converting between Object Types and Attributes,    and Strings, 94 hwloc_obj_type_string
Consulting and Adding Key-Value Info Attributes, 96  HWLOC_OBJ_GROUP Object Types, 83  hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127  HWLOC_OBJ_L1CACHE Object Types, 83  HWLOC_OBJ_L1ICACHE Object Types, 83  HWLOC_OBJ_L2CACHE Object Types, 83  HWLOC_OBJ_L2ICACHE Object Types, 83  HWLOC_OBJ_L3ICACHE Object Types, 83  HWLOC_OBJ_L3CACHE	Kinds of object Type, 128 hwloc_obj_type_is_icache    Kinds of object Type, 128 hwloc_obj_type_is_io    Kinds of object Type, 128 hwloc_obj_type_is_memory    Kinds of object Type, 129 hwloc_obj_type_is_normal    Kinds of object Type, 129 hwloc_obj_type_snprintf    Converting between Object Types and Attributes,    and Strings, 94 hwloc_obj_type_string    Converting between Object Types and Attributes,
Consulting and Adding Key-Value Info Attributes, 96  HWLOC_OBJ_GROUP Object Types, 83  hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127  HWLOC_OBJ_L1CACHE Object Types, 83  HWLOC_OBJ_L1ICACHE Object Types, 83  HWLOC_OBJ_L2CACHE Object Types, 83  HWLOC_OBJ_L2ICACHE Object Types, 83  HWLOC_OBJ_L3ICACHE Object Types, 83  HWLOC_OBJ_L3CACHE Object Types, 83	Kinds of object Type, 128 hwloc_obj_type_is_icache   Kinds of object Type, 128 hwloc_obj_type_is_io   Kinds of object Type, 128 hwloc_obj_type_is_memory   Kinds of object Type, 129 hwloc_obj_type_is_normal   Kinds of object Type, 129 hwloc_obj_type_snprintf   Converting between Object Types and Attributes,   and Strings, 94 hwloc_obj_type_string   Converting between Object Types and Attributes,   and Strings, 94
Consulting and Adding Key-Value Info Attributes, 96  HWLOC_OBJ_GROUP Object Types, 83  hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127  HWLOC_OBJ_L1CACHE Object Types, 83  HWLOC_OBJ_L1ICACHE Object Types, 83  HWLOC_OBJ_L2CACHE Object Types, 83  HWLOC_OBJ_L2ICACHE Object Types, 83  HWLOC_OBJ_L3CACHE Object Types, 83  HWLOC_OBJ_L3CACHE Object Types, 83  HWLOC_OBJ_L3CACHE Object Types, 83  HWLOC_OBJ_L3ICACHE	Kinds of object Type, 128 hwloc_obj_type_is_icache    Kinds of object Type, 128 hwloc_obj_type_is_io    Kinds of object Type, 128 hwloc_obj_type_is_memory    Kinds of object Type, 129 hwloc_obj_type_is_normal    Kinds of object Type, 129 hwloc_obj_type_snprintf    Converting between Object Types and Attributes,    and Strings, 94 hwloc_obj_type_string    Converting between Object Types and Attributes,    and Strings, 94 hwloc_obj_type_t
Consulting and Adding Key-Value Info Attributes, 96  HWLOC_OBJ_GROUP Object Types, 83  hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127  HWLOC_OBJ_L1CACHE Object Types, 83  HWLOC_OBJ_L1ICACHE Object Types, 83  HWLOC_OBJ_L2CACHE Object Types, 83  HWLOC_OBJ_L2ICACHE Object Types, 83  HWLOC_OBJ_L2ICACHE Object Types, 83  HWLOC_OBJ_L3CACHE Object Types, 83  HWLOC_OBJ_L3CACHE Object Types, 83  HWLOC_OBJ_L3ICACHE Object Types, 83	Kinds of object Type, 128  hwloc_obj_type_is_icache    Kinds of object Type, 128  hwloc_obj_type_is_io    Kinds of object Type, 128  hwloc_obj_type_is_memory    Kinds of object Type, 129  hwloc_obj_type_is_normal    Kinds of object Type, 129  hwloc_obj_type_snprintf    Converting between Object Types and Attributes,    and Strings, 94  hwloc_obj_type_string    Converting between Object Types and Attributes,    and Strings, 94  hwloc_obj_type_t    Object Types, 82
Consulting and Adding Key-Value Info Attributes, 96  HWLOC_OBJ_GROUP Object Types, 83  hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127  HWLOC_OBJ_L1CACHE Object Types, 83  HWLOC_OBJ_L1ICACHE Object Types, 83  HWLOC_OBJ_L2CACHE Object Types, 83  HWLOC_OBJ_L2ICACHE Object Types, 83  HWLOC_OBJ_L3CACHE Object Types, 83  HWLOC_OBJ_L3CACHE Object Types, 83  HWLOC_OBJ_L3ICACHE Object Types, 83  HWLOC_OBJ_L3ICACHE Object Types, 83  HWLOC_OBJ_L3ICACHE Object Types, 83  HWLOC_OBJ_L4CACHE	Kinds of object Type, 128  hwloc_obj_type_is_icache    Kinds of object Type, 128  hwloc_obj_type_is_io    Kinds of object Type, 128  hwloc_obj_type_is_memory    Kinds of object Type, 129  hwloc_obj_type_is_normal    Kinds of object Type, 129  hwloc_obj_type_snprintf    Converting between Object Types and Attributes,    and Strings, 94  hwloc_obj_type_string    Converting between Object Types and Attributes,    and Strings, 94  hwloc_obj_type_t    Object Types, 82  hwloc_opencl_get_device_cpuset
Consulting and Adding Key-Value Info Attributes, 96  HWLOC_OBJ_GROUP Object Types, 83  hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127  HWLOC_OBJ_L1CACHE Object Types, 83  HWLOC_OBJ_L1ICACHE Object Types, 83  HWLOC_OBJ_L2CACHE Object Types, 83  HWLOC_OBJ_L2ICACHE Object Types, 83  HWLOC_OBJ_L3CACHE Object Types, 83  HWLOC_OBJ_L3CACHE Object Types, 83  HWLOC_OBJ_L3ICACHE Object Types, 83  HWLOC_OBJ_L3ICACHE Object Types, 83  HWLOC_OBJ_L4CACHE Object Types, 83	Kinds of object Type, 128 hwloc_obj_type_is_icache    Kinds of object Type, 128 hwloc_obj_type_is_io    Kinds of object Type, 128 hwloc_obj_type_is_memory    Kinds of object Type, 129 hwloc_obj_type_is_normal    Kinds of object Type, 129 hwloc_obj_type_snprintf    Converting between Object Types and Attributes,         and Strings, 94 hwloc_obj_type_string    Converting between Object Types and Attributes,         and Strings, 94 hwloc_obj_type_t    Object Types, 82 hwloc_opencl_get_device_cpuset    Interoperability with OpenCL, 179
Consulting and Adding Key-Value Info Attributes, 96  HWLOC_OBJ_GROUP Object Types, 83  hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127  HWLOC_OBJ_L1CACHE Object Types, 83  HWLOC_OBJ_L1ICACHE Object Types, 83  HWLOC_OBJ_L2CACHE Object Types, 83  HWLOC_OBJ_L2ICACHE Object Types, 83  HWLOC_OBJ_L3CACHE Object Types, 83  HWLOC_OBJ_L3CACHE Object Types, 83  HWLOC_OBJ_L3ICACHE Object Types, 83  HWLOC_OBJ_L3ICACHE Object Types, 83  HWLOC_OBJ_L4CACHE Object Types, 83  HWLOC_OBJ_L4CACHE Object Types, 83  HWLOC_OBJ_L5CACHE	Kinds of object Type, 128 hwloc_obj_type_is_icache    Kinds of object Type, 128 hwloc_obj_type_is_io    Kinds of object Type, 128 hwloc_obj_type_is_memory    Kinds of object Type, 129 hwloc_obj_type_is_normal    Kinds of object Type, 129 hwloc_obj_type_snprintf    Converting between Object Types and Attributes,         and Strings, 94 hwloc_obj_type_string    Converting between Object Types and Attributes,         and Strings, 94 hwloc_obj_type_t    Object Types, 82 hwloc_opencl_get_device_cpuset    Interoperability with OpenCL, 179 hwloc_opencl_get_device_osdev
Consulting and Adding Key-Value Info Attributes, 96 HWLOC_OBJ_GROUP Object Types, 83 hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127 HWLOC_OBJ_L1CACHE Object Types, 83 HWLOC_OBJ_L1ICACHE Object Types, 83 HWLOC_OBJ_L2CACHE Object Types, 83 HWLOC_OBJ_L2ICACHE Object Types, 83 HWLOC_OBJ_L3CACHE Object Types, 83 HWLOC_OBJ_L3CACHE Object Types, 83 HWLOC_OBJ_L3ICACHE Object Types, 83 HWLOC_OBJ_L4CACHE Object Types, 83 HWLOC_OBJ_L4CACHE Object Types, 83 HWLOC_OBJ_L5CACHE Object Types, 83 HWLOC_OBJ_L5CACHE Object Types, 83	Kinds of object Type, 128 hwloc_obj_type_is_icache    Kinds of object Type, 128 hwloc_obj_type_is_io    Kinds of object Type, 128 hwloc_obj_type_is_memory    Kinds of object Type, 129 hwloc_obj_type_is_normal    Kinds of object Type, 129 hwloc_obj_type_snprintf    Converting between Object Types and Attributes,    and Strings, 94 hwloc_obj_type_string    Converting between Object Types and Attributes,    and Strings, 94 hwloc_obj_type_t    Object Types, 82 hwloc_opencl_get_device_cpuset    Interoperability with OpenCL, 179 hwloc_opencl_get_device_osdev    Interoperability with OpenCL, 179
Consulting and Adding Key-Value Info Attributes, 96 HWLOC_OBJ_GROUP Object Types, 83 hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127 HWLOC_OBJ_L1CACHE Object Types, 83 HWLOC_OBJ_L1ICACHE Object Types, 83 HWLOC_OBJ_L2CACHE Object Types, 83 HWLOC_OBJ_L2ICACHE Object Types, 83 HWLOC_OBJ_L3CACHE Object Types, 83 HWLOC_OBJ_L3CACHE Object Types, 83 HWLOC_OBJ_L3ICACHE Object Types, 83 HWLOC_OBJ_L4CACHE Object Types, 83 HWLOC_OBJ_L4CACHE Object Types, 83 HWLOC_OBJ_L5CACHE Object Types, 83 HWLOC_OBJ_L5CACHE Object Types, 83 HWLOC_OBJ_L5CACHE Object Types, 83 HWLOC_OBJ_L5CACHE Object Types, 83	Kinds of object Type, 128 hwloc_obj_type_is_icache    Kinds of object Type, 128 hwloc_obj_type_is_io    Kinds of object Type, 128 hwloc_obj_type_is_memory    Kinds of object Type, 129 hwloc_obj_type_is_normal    Kinds of object Type, 129 hwloc_obj_type_snprintf    Converting between Object Types and Attributes,    and Strings, 94 hwloc_obj_type_string    Converting between Object Types and Attributes,    and Strings, 94 hwloc_obj_type_t    Object Types, 82 hwloc_opencl_get_device_cpuset    Interoperability with OpenCL, 179 hwloc_opencl_get_device_osdev    Interoperability with OpenCL, 179 hwloc_opencl_get_device_osdev_by_index
Consulting and Adding Key-Value Info Attributes, 96 HWLOC_OBJ_GROUP Object Types, 83 hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127 HWLOC_OBJ_L1CACHE Object Types, 83 HWLOC_OBJ_L1ICACHE Object Types, 83 HWLOC_OBJ_L2CACHE Object Types, 83 HWLOC_OBJ_L2ICACHE Object Types, 83 HWLOC_OBJ_L3CACHE Object Types, 83 HWLOC_OBJ_L3CACHE Object Types, 83 HWLOC_OBJ_L3ICACHE Object Types, 83 HWLOC_OBJ_L4CACHE Object Types, 83 HWLOC_OBJ_L4CACHE Object Types, 83 HWLOC_OBJ_L5CACHE Object Types, 83 HWLOC_OBJ_L5CACHE Object Types, 83 HWLOC_OBJ_MACHINE Object Types, 83	Kinds of object Type, 128 hwloc_obj_type_is_icache    Kinds of object Type, 128 hwloc_obj_type_is_io    Kinds of object Type, 128 hwloc_obj_type_is_memory    Kinds of object Type, 129 hwloc_obj_type_is_normal    Kinds of object Type, 129 hwloc_obj_type_snprintf    Converting between Object Types and Attributes,         and Strings, 94 hwloc_obj_type_string    Converting between Object Types and Attributes,         and Strings, 94 hwloc_obj_type_t    Object Types, 82 hwloc_opencl_get_device_cpuset    Interoperability with OpenCL, 179 hwloc_opencl_get_device_osdev    Interoperability with OpenCL, 179 hwloc_opencl_get_device_osdev_by_index    Interoperability with OpenCL, 179
Consulting and Adding Key-Value Info Attributes, 96 HWLOC_OBJ_GROUP Object Types, 83 hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127 HWLOC_OBJ_L1CACHE Object Types, 83 HWLOC_OBJ_L1ICACHE Object Types, 83 HWLOC_OBJ_L2CACHE Object Types, 83 HWLOC_OBJ_L2ICACHE Object Types, 83 HWLOC_OBJ_L3CACHE Object Types, 83 HWLOC_OBJ_L3CACHE Object Types, 83 HWLOC_OBJ_L3ICACHE Object Types, 83 HWLOC_OBJ_L4CACHE Object Types, 83 HWLOC_OBJ_L5CACHE Object Types, 83 HWLOC_OBJ_L5CACHE Object Types, 83 HWLOC_OBJ_MACHINE Object Types, 83 HWLOC_OBJ_MACHINE Object Types, 83 HWLOC_OBJ_MEMCACHE	Kinds of object Type, 128 hwloc_obj_type_is_icache    Kinds of object Type, 128 hwloc_obj_type_is_io    Kinds of object Type, 128 hwloc_obj_type_is_memory    Kinds of object Type, 129 hwloc_obj_type_is_normal    Kinds of object Type, 129 hwloc_obj_type_is_normal    Kinds of object Type, 129 hwloc_obj_type_snprintf    Converting between Object Types and Attributes,         and Strings, 94 hwloc_obj_type_string    Converting between Object Types and Attributes,         and Strings, 94 hwloc_obj_type_t    Object Types, 82 hwloc_opencl_get_device_cpuset    Interoperability with OpenCL, 179 hwloc_opencl_get_device_osdev    Interoperability with OpenCL, 179 hwloc_opencl_get_device_osdev_by_index    Interoperability with OpenCL, 179 hwloc_opencl_get_device_pci_busid
Consulting and Adding Key-Value Info Attributes, 96 HWLOC_OBJ_GROUP Object Types, 83 hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127 HWLOC_OBJ_L1CACHE Object Types, 83 HWLOC_OBJ_L1ICACHE Object Types, 83 HWLOC_OBJ_L2CACHE Object Types, 83 HWLOC_OBJ_L2ICACHE Object Types, 83 HWLOC_OBJ_L3CACHE Object Types, 83 HWLOC_OBJ_L3CACHE Object Types, 83 HWLOC_OBJ_L3ICACHE Object Types, 83 HWLOC_OBJ_L4CACHE Object Types, 83 HWLOC_OBJ_L5CACHE Object Types, 83 HWLOC_OBJ_L5CACHE Object Types, 83 HWLOC_OBJ_MACHINE Object Types, 83 HWLOC_OBJ_MACHINE Object Types, 83 HWLOC_OBJ_MEMCACHE Object Types, 83	Kinds of object Type, 128  hwloc_obj_type_is_icache    Kinds of object Type, 128  hwloc_obj_type_is_io    Kinds of object Type, 128  hwloc_obj_type_is_memory    Kinds of object Type, 129  hwloc_obj_type_is_normal    Kinds of object Type, 129  hwloc_obj_type_snprintf    Converting between Object Types and Attributes,    and Strings, 94  hwloc_obj_type_string    Converting between Object Types and Attributes,    and Strings, 94  hwloc_obj_type_t    Object Types, 82  hwloc_opencl_get_device_cpuset    Interoperability with OpenCL, 179  hwloc_opencl_get_device_osdev    Interoperability with OpenCL, 179  hwloc_opencl_get_device_osdev_by_index    Interoperability with OpenCL, 179  hwloc_opencl_get_device_pci_busid    Interoperability with OpenCL, 180
Consulting and Adding Key-Value Info Attributes, 96 HWLOC_OBJ_GROUP Object Types, 83 hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127 HWLOC_OBJ_L1CACHE Object Types, 83 HWLOC_OBJ_L1ICACHE Object Types, 83 HWLOC_OBJ_L2CACHE Object Types, 83 HWLOC_OBJ_L2ICACHE Object Types, 83 HWLOC_OBJ_L3CACHE Object Types, 83 HWLOC_OBJ_L3CACHE Object Types, 83 HWLOC_OBJ_L3ICACHE Object Types, 83 HWLOC_OBJ_L4CACHE Object Types, 83 HWLOC_OBJ_L5CACHE Object Types, 83 HWLOC_OBJ_L5CACHE Object Types, 83 HWLOC_OBJ_MACHINE Object Types, 83 HWLOC_OBJ_MACHINE Object Types, 83 HWLOC_OBJ_MEMCACHE Object Types, 84 HWLOC_OBJ_MISC	Kinds of object Type, 128 hwloc_obj_type_is_icache    Kinds of object Type, 128 hwloc_obj_type_is_io    Kinds of object Type, 128 hwloc_obj_type_is_memory    Kinds of object Type, 129 hwloc_obj_type_is_normal    Kinds of object Type, 129 hwloc_obj_type_snprintf    Converting between Object Types and Attributes,         and Strings, 94 hwloc_obj_type_string    Converting between Object Types and Attributes,         and Strings, 94 hwloc_obj_type_t    Object Types, 82 hwloc_opencl_get_device_cpuset    Interoperability with OpenCL, 179 hwloc_opencl_get_device_osdev    Interoperability with OpenCL, 179 hwloc_opencl_get_device_osdev_by_index    Interoperability with OpenCL, 179 hwloc_opencl_get_device_pci_busid    Interoperability with OpenCL, 180 hwloc_pci_find_parent_by_busid
Consulting and Adding Key-Value Info Attributes, 96 HWLOC_OBJ_GROUP Object Types, 83 hwloc_obj_is_in_subtree Looking at Ancestor and Child Objects, 127 HWLOC_OBJ_L1CACHE Object Types, 83 HWLOC_OBJ_L1ICACHE Object Types, 83 HWLOC_OBJ_L2CACHE Object Types, 83 HWLOC_OBJ_L2ICACHE Object Types, 83 HWLOC_OBJ_L3CACHE Object Types, 83 HWLOC_OBJ_L3CACHE Object Types, 83 HWLOC_OBJ_L3ICACHE Object Types, 83 HWLOC_OBJ_L4CACHE Object Types, 83 HWLOC_OBJ_L5CACHE Object Types, 83 HWLOC_OBJ_L5CACHE Object Types, 83 HWLOC_OBJ_MACHINE Object Types, 83 HWLOC_OBJ_MACHINE Object Types, 83 HWLOC_OBJ_MEMCACHE Object Types, 83	Kinds of object Type, 128  hwloc_obj_type_is_icache    Kinds of object Type, 128  hwloc_obj_type_is_io    Kinds of object Type, 128  hwloc_obj_type_is_memory    Kinds of object Type, 129  hwloc_obj_type_is_normal    Kinds of object Type, 129  hwloc_obj_type_snprintf    Converting between Object Types and Attributes,    and Strings, 94  hwloc_obj_type_string    Converting between Object Types and Attributes,    and Strings, 94  hwloc_obj_type_t    Object Types, 82  hwloc_opencl_get_device_cpuset    Interoperability with OpenCL, 179  hwloc_opencl_get_device_osdev    Interoperability with OpenCL, 179  hwloc_opencl_get_device_osdev_by_index    Interoperability with OpenCL, 179  hwloc_opencl_get_device_pci_busid    Interoperability with OpenCL, 180

hudaa maidiaa ahaad huidaa tuusa	hulas absence tanalasu, unita
hwloc_pcidisc_check_bridge_type	hwloc_shmem_topology_write
Components and Plugins: helpers for PCI discov-	Sharing topologies between processes, 198
ery, 206	hwloc_topology_abi_check
hwloc_pcidisc_find_bridge_buses	Topology Creation and Destruction, 87
Components and Plugins: helpers for PCI discov-	hwloc_topology_alloc_group_object
ery, 206	Modifying a loaded Topology, 118
hwloc_pcidisc_find_cap	hwloc_topology_allow
Components and Plugins: helpers for PCI discov-	Modifying a loaded Topology, 118
ery, 206	hwloc_topology_check
hwloc_pcidisc_find_linkspeed	Topology Creation and Destruction, 87
Components and Plugins: helpers for PCI discov-	HWLOC_TOPOLOGY_COMPONENTS_FLAG_BLACKLIST
ery, 206	Changing the Source of Topology Discovery, 108
hwloc_pcidisc_tree_attach	hwloc_topology_components_flag_e
Components and Plugins: helpers for PCI discov-	Changing the Source of Topology Discovery, 108
ery, 206	hwloc_topology_cpubind_support, 232
hwloc_pcidisc_tree_insert_by_busid	get_proc_cpubind, 233
Components and Plugins: helpers for PCI discov-	get_proc_last_cpu_location, 233
ery, 207	get_thisproc_cpubind, 233
hwloc_plugin_check_namespace	get_thisproc_last_cpu_location, 233
Components and Plugins: Core functions to be	get_thisthread_cpubind, 233
used by components, 204	get_thisthread_last_cpu_location, 233
HWLOC_RESTRICT_FLAG_ADAPT_IO	get_thread_cpubind, 233
Modifying a loaded Topology, 118	set_proc_cpubind, 233
HWLOC_RESTRICT_FLAG_ADAPT_MISC	set_thisproc_cpubind, 233
Modifying a loaded Topology, 118	set_thisthread_cpubind, 233
HWLOC_RESTRICT_FLAG_BYNODESET	set_thread_cpubind, 234
Modifying a loaded Topology, 118	hwloc_topology_destroy
HWLOC_RESTRICT_FLAG_REMOVE_CPULESS	Topology Creation and Destruction, 88
Modifying a loaded Topology, 118	hwloc_topology_diff_apply
HWLOC_RESTRICT_FLAG_REMOVE_MEMLESS	
	Topology differences, 195
Modifying a loaded Topology, 118	hwloc_topology_diff_apply_flags_e
hwloc_restrict_flags_e	Topology differences, 194
Modifying a loaded Topology, 117	HWLOC_TOPOLOGY_DIFF_APPLY_REVERSE
hwloc_rsmi_get_device_cpuset	Topology differences, 194
Interoperability with the ROCm SMI Management	hwloc_topology_diff_build
Library, 187	Topology differences, 195
hwloc_rsmi_get_device_osdev	hwloc_topology_diff_destroy
Interoperability with the ROCm SMI Management	Topology differences, 195
Library, 187	hwloc_topology_diff_export_xml
hwloc_rsmi_get_device_osdev_by_index	Topology differences, 195
Interoperability with the ROCm SMI Management	hwloc_topology_diff_export_xmlbuffer
Library, 187	Topology differences, 196
hwloc_set_area_membind	hwloc_topology_diff_load_xml
Memory binding, 106	Topology differences, 196
hwloc_set_cpubind	hwloc_topology_diff_load_xmlbuffer
CPU binding, 100	Topology differences, 196
hwloc_set_membind	HWLOC_TOPOLOGY_DIFF_OBJ_ATTR
Memory binding, 106	Topology differences, 194
hwloc_set_proc_cpubind	HWLOC_TOPOLOGY_DIFF_OBJ_ATTR_INFO
CPU binding, 100	Topology differences, 194
hwloc_set_proc_membind	HWLOC_TOPOLOGY_DIFF_OBJ_ATTR_NAME
Memory binding, 107	Topology differences, 194
hwloc_set_thread_cpubind	HWLOC_TOPOLOGY_DIFF_OBJ_ATTR_SIZE
CPU binding, 100	Topology differences, 194
hwloc_shmem_topology_adopt	hwloc_topology_diff_obj_attr_type_e
Sharing topologies between processes, 197	Topology differences, 194
hwloc_shmem_topology_get_length	hwloc_topology_diff_obj_attr_type_t
Sharing topologies between processes, 198	Topology_diff_cobj_atti_type_t Topology differences, 193

hwloc_topology_diff_obj_attr_u, 236	HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FLAG_IGNORE_MEMOR
generic, 237	Exporting Topologies to Synthetic, 157
string, 237	HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FLAG_NO_ATTRS
uint64, 237	Exporting Topologies to Synthetic, 157
	_dtttV_b@@r_itO_P;OLOGY_EXPORT_SYNTHETIC_FLAG_NO_EXTENDED_
234	Exporting Topologies to Synthetic, 157
type, 234	HWLOC_TOPOLOGY_EXPORT_SYNTHETIC_FLAG_V1
hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_	
235	hwloc_topology_export_synthetic_flags_e
name, 236 newvalue, 236	Exporting Topologies to Synthetic, 157 hwloc topology export xml
oldvalue, 236	Exporting Topologies to XML, 154
type, 236	HWLOC_TOPOLOGY_EXPORT_XML_FLAG_V1
hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_	
237	hwloc_topology_export_xml_flags_e
index, 237	Exporting Topologies to XML, 153
newvalue, 237	hwloc_topology_export_xmlbuffer
oldvalue, 237	Exporting Topologies to XML, 154
type, 237	HWLOC_TOPOLOGY_FLAG_IMPORT_SUPPORT
hwloc_topology_diff_t	Topology Detection Configuration and Query, 113
Topology differences, 193	HWLOC_TOPOLOGY_FLAG_INCLUDE_DISALLOWED
HWLOC_TOPOLOGY_DIFF_TOO_COMPLEX	Topology Detection Configuration and Query, 112
Topology differences, 194	HWLOC_TOPOLOGY_FLAG_IS_THISSYSTEM
hwloc_topology_diff_type_e	Topology Detection Configuration and Query, 112
Topology differences, 194	HWLOC_TOPOLOGY_FLAG_THISSYSTEM_ALLOWED_RESOURCES
hwloc_topology_diff_type_t	Topology Detection Configuration and Query, 113
Topology differences, 194	hwloc_topology_flags_e
hwloc_topology_diff_u, 238	Topology Detection Configuration and Query, 111
generic, 239	hwloc_topology_get_allowed_cpuset
obj_attr, 239	CPU and node sets of entire topologies, 135
too_complex, 239	hwloc_topology_get_allowed_nodeset
hwloc_topology_diff_u::hwloc_topology_diff_generic_s,	CPU and node sets of entire topologies, 135
234	hwloc_topology_get_complete_cpuset
next, 234	CPU and node sets of entire topologies, 135
type, 234	hwloc_topology_get_complete_nodeset CPU and node sets of entire topologies, 136
hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s, 235	
diff, 235	hwloc_topology_get_depth Object levels, depths and types, 93
next, 235	hwloc_topology_get_flags
obj_depth, 235	Topology Detection Configuration and Query, 114
obj_index, 235	hwloc_topology_get_support
type, 235	Topology Detection Configuration and Query, 114
hwloc_topology_diff_u::hwloc_topology_diff_too_complex	, ,
238	CPU and node sets of entire topologies, 136
next, 238	hwloc_topology_get_topology_nodeset
obj_depth, 238	CPU and node sets of entire topologies, 136
obj_index, 238	hwloc_topology_get_type_filter
type, 238	Topology Detection Configuration and Query, 115
hwloc_topology_discovery_support, 239	hwloc_topology_get_userdata
disallowed_numa, 239	Topology Detection Configuration and Query, 115
disallowed_pu, 239	hwloc_topology_init
numa, 240	Topology Creation and Destruction, 88
numa_memory, 240	hwloc_topology_insert_group_object
pu, 240	Modifying a loaded Topology, 119
hwloc_topology_dup	hwloc_topology_insert_misc_object
Topology Creation and Destruction, 88	Modifying a loaded Topology, 119
hwloc_topology_export_synthetic	hwloc_topology_is_thissystem
Exporting Topologies to Synthetic, 157	Topology Detection Configuration and Query, 115

hwloc_topology_load	membind, 243
Topology Creation and Destruction, 88	misc, 243
hwloc_topology_membind_support, 240	hwloc_topology_t
alloc_membind, 240	Topology Creation and Destruction, 87
bind_membind, 241	HWLOC_TYPE_DEPTH_BRIDGE
firsttouch_membind, 241	Object levels, depths and types, 90
get_area_membind, 241	HWLOC_TYPE_DEPTH_MEMCACHE
get_area_memlocation, 241	Object levels, depths and types, 90
get_proc_membind, 241	HWLOC_TYPE_DEPTH_MISC Object levels, depths and types, 90
get_thisproc_membind, 241	HWLOC_TYPE_DEPTH_MULTIPLE
get_thisthread_membind, 241	Object levels, depths and types, 90
interleave_membind, 241 migrate_membind, 241	HWLOC_TYPE_DEPTH_NUMANODE
nexttouch_membind, 241	Object levels, depths and types, 90
set_area_membind, 241	HWLOC_TYPE_DEPTH_OS_DEVICE
set_proc_membind, 241	Object levels, depths and types, 90
set_thisproc_membind, 242	HWLOC_TYPE_DEPTH_PCI_DEVICE
set_thisthread_membind, 242	Object levels, depths and types, 90
hwloc_topology_misc_support, 242	HWLOC_TYPE_DEPTH_UNKNOWN
imported_support, 242	Object levels, depths and types, 90
hwloc_topology_reconnect	hwloc_type_filter_e
Components and Plugins: Core functions to be	Topology Detection Configuration and Query, 113
used by components, 204	HWLOC_TYPE_FILTER_KEEP_ALL
hwloc_topology_refresh	Topology Detection Configuration and Query, 113
Modifying a loaded Topology, 120	HWLOC_TYPE_FILTER_KEEP_IMPORTANT
hwloc_topology_restrict	Topology Detection Configuration and Query, 114
Modifying a loaded Topology, 120	HWLOC_TYPE_FILTER_KEEP_NONE
hwloc_topology_set_all_types_filter	Topology Detection Configuration and Query, 114
Topology Detection Configuration and Query, 115	HWLOC_TYPE_FILTER_KEEP_STRUCTURE
hwloc_topology_set_cache_types_filter	Topology Detection Configuration and Query, 114
Topology Detection Configuration and Query, 115	hwloc_type_sscanf
hwloc_topology_set_components	Converting between Object Types and Attributes,
Changing the Source of Topology Discovery, 108	and Strings, 95 hwloc_type_sscanf_as_depth
hwloc_topology_set_flags	Converting between Object Types and Attributes,
Topology Detection Configuration and Query, 115	and Strings, 95
hwloc_topology_set_icache_types_filter	HWLOC_TYPE_UNORDERED
Topology Detection Configuration and Query, 115	Object Types, 81
hwloc_topology_set_io_types_filter	22,000 1,000,00
Topology Detection Configuration and Query, 116	imported_support
hwloc_topology_set_pid	hwloc_topology_misc_support, 242
Changing the Source of Topology Discovery, 108	index
hwloc_topology_set_synthetic	hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_uint64
Changing the Source of Topology Discovery, 109	237
hwloc_topology_set_type_filter Tapplagy_Detection_Configuration_and_Overs_116	infos
Topology Detection Configuration and Query, 116	hwloc_obj, 226
hwloc_topology_set_userdata Topology Detection Configuration and Query, 116	infos_count
hwloc_topology_set_userdata_export_callback	hwloc_obj, 227 init
Exporting Topologies to XML, 155	hwloc_component, 216
hwloc_topology_set_userdata_import_callback	instantiate
Exporting Topologies to XML, 155	hwloc_disc_component, 218
hwloc_topology_set_xml	interleave_membind
Changing the Source of Topology Discovery, 109	hwloc_topology_membind_support, 241
hwloc_topology_set_xmlbuffer	Interoperability with glibc sched affinity, 178
Changing the Source of Topology Discovery, 110	hwloc_cpuset_from_glibc_sched_affinity, 178
hwloc_topology_support, 242	hwloc_cpuset_to_glibc_sched_affinity, 178
cpubind, 243	Interoperability with Linux libnuma bitmask, 176
discovery, 243	hwloc couset from linux libnuma bitmask, 176

hwloc_cpuset_to_linux_libnuma_bitmask, 176	hwloc_obj_type_is_normal, 129
hwloc_nodeset_from_linux_libnuma_bitmask, 176	last_child
hwloc_nodeset_to_linux_libnuma_bitmask, 176	hwloc_obj, 227
Interoperability with Linux libnuma unsigned long masks,	linesize
174	hwloc_obj_attr_u::hwloc_cache_attr_s, 214
hwloc_cpuset_from_linux_libnuma_ulongs, 174	linkspeed
hwloc_cpuset_to_linux_libnuma_ulongs, 174	hwloc_obj_attr_u::hwloc_pcidev_attr_s, 232
hwloc_nodeset_from_linux_libnuma_ulongs, 174	Linux-specific helpers, 172
hwloc_nodeset_to_linux_libnuma_ulongs, 175	hwloc_linux_get_tid_cpubind, 172
Interoperability with OpenCL, 179	hwloc_linux_get_tid_last_cpu_location, 172
hwloc_opencl_get_device_cpuset, 179	hwloc_linux_read_path_as_cpumask, 172
hwloc_opencl_get_device_osdev, 179	hwloc_linux_set_tid_cpubind, 172
hwloc_opencl_get_device_osdev_by_index, 179	local_memory
hwloc_opencl_get_device_pci_busid, 180	hwloc_obj_attr_u::hwloc_numanode_attr_s, 223
Interoperability with OpenFabrics, 191	location
hwloc_ibv_get_device_cpuset, 191	hwloc_location, 222
hwloc_ibv_get_device_osdev, 191 hwloc_ibv_get_device_osdev_by_name, 191	logical_index
Interoperability with OpenGL displays, 189	hwloc_obj, 227
hwloc_gl_get_display_by_osdev, 189	Looking at Ancestor and Child Objects, 126
hwloc_gl_get_display_osdev_by_name, 189	hwloc_get_ancestor_obj_by_depth, 126
hwloc_gl_get_display_osdev_by_port_device, 189	hwloc_get_ancestor_obj_by_type, 126
Interoperability with the CUDA Driver API, 181	hwloc_get_common_ancestor_obj, 126
hwloc_cuda_get_device_cpuset, 181	hwloc_get_next_child, 126
hwloc_cuda_get_device_osdev, 181	hwloc_obj_is_in_subtree, 127
hwloc_cuda_get_device_osdev_by_index, 181	Looking at Cache Objects, 130
hwloc_cuda_get_device_osdev_by_index, 181	hwloc_get_cache_covering_cpuset, 130
hwloc_cuda_get_device_pci_ds, 182	hwloc_get_cache_type_depth, 130
Interoperability with the CUDA Runtime API, 183	hwloc_get_shared_cache_covering_obj, 130
hwloc_cudart_get_device_cpuset, 183	9_90_900
hwloc_cudart_get_device_cpuset, 163 hwloc_cudart_get_device_osdev_by_index, 183	Managing memory attributes, 169
hwloc_cudart_get_device_pci_ids, 183	hwloc_memattr_flag_e, 169
hwloc_cudart_get_device_pcidev, 183	HWLOC_MEMATTR_FLAG_HIGHER_FIRST, 169
Interoperability with the NVIDIA Management Library,	HWLOC_MEMATTR_FLAG_LOWER_FIRST, 169
185	HWLOC_MEMATTR_FLAG_NEED_INITIATOR,
hwloc_nvml_get_device_cpuset, 185	169
hwloc_nvml_get_device_osdev, 185	hwloc_memattr_get_flags, 169
hwloc_nvml_get_device_osdev_by_index, 185	hwloc_memattr_get_initiators, 169
Interoperability with the ROCm SMI Management Li-	hwloc_memattr_get_name, 170
brary, 187	hwloc_memattr_get_targets, 170
hwloc_rsmi_get_device_cpuset, 187	hwloc_memattr_register, 171
hwloc_rsmi_get_device_osdev, 187	hwloc_memattr_set_value, 171
hwloc rsmi get device osdev by index, 187	membind
io_arity	hwloc_topology_support, 243
hwloc_obj, 227	Memory binding, 101
io_first_child	hwloc_alloc, 103
hwloc_obj, 227	hwloc_alloc_membind, 104
is_thissystem	hwloc_alloc_membind_policy, 104
hwloc_backend, 212	hwloc_free, 104
,	hwloc_get_area_membind, 104
kind	hwloc_get_area_memlocation, 105
hwloc_distances_s, 219	hwloc_get_membind, 105
hwloc_obj_attr_u::hwloc_group_attr_s, 220	hwloc_get_proc_membind, 105
Kinds of object Type, 128	HWLOC_MEMBIND_BIND, 103
hwloc_obj_type_is_cache, 128	HWLOC_MEMBIND_BYNODESET, 102
hwloc_obj_type_is_dcache, 128	HWLOC_MEMBIND_DEFAULT, 103
hwloc_obj_type_is_icache, 128	HWLOC_MEMBIND_FIRSTTOUCH, 103
hwloc_obj_type_is_io, 128	hwloc_membind_flags_t, 102
hwloc_obj_type_is_memory, 129	HWLOC_MEMBIND_INTERLEAVE, 103

HWLOC_MEMBIND_MIGRATE, 102 HWLOC_MEMBIND_MIXED, 103	NETLOC_ERROR_NOENT, 209 NETLOC ERROR NOT FOUND, 209
HWLOC MEMBIND NEXTTOUCH, 103	NETLOC_ERROR_NOT_IMPL, 209
HWLOC_MEMBIND_NOCPUBIND, 102	NETLOC_ERROR_NOTDIR, 209
hwloc_membind_policy_t, 103	NETLOC_SUCCESS, 209
HWLOC_MEMBIND_PROCESS, 102	NETLOC_ERROR
HWLOC_MEMBIND_STRICT, 102	Netloc API, 209
HWLOC_MEMBIND_THREAD, 102	NETLOC_ERROR_EMPTY
hwloc_set_area_membind, 106	Netloc API, 209
hwloc_set_membind, 106	NETLOC_ERROR_EXISTS
hwloc_set_proc_membind, 107	Netloc API, 209
memory_arity	NETLOC ERROR MAX
hwloc_obj, 227	Netloc API, 209
memory_first_child	NETLOC_ERROR_MULTIPLE
hwloc_obj, 227	Netloc API, 209
migrate_membind	NETLOC_ERROR_NOENT
hwloc topology membind support, 241	Netloc API, 209
misc	NETLOC_ERROR_NOT_FOUND
hwloc_topology_support, 243	Netloc API, 209
misc_arity	NETLOC_ERROR_NOT_IMPL
hwloc_obj, 227	Netloc API, 209
misc_first_child	NETLOC_ERROR_NOTDIR
hwloc_obj, 227	Netloc API, 209
Modifying a loaded Topology, 117	NETLOC SUCCESS
HWLOC_ALLOW_FLAG_ALL, 117	Netloc API, 209
HWLOC_ALLOW_FLAG_CUSTOM, 117	newvalue
HWLOC_ALLOW_FLAG_LOCAL_RESTRICTIONS,	hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_string_
117	236
hwloc_allow_flags_e, 117	hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_uint64
hwloc_obj_add_other_obj_sets, 118	237
HWLOC_RESTRICT_FLAG_ADAPT_IO, 118	next
HWLOC_RESTRICT_FLAG_ADAPT_MISC, 118	hwloc_topology_diff_u::hwloc_topology_diff_generic_s,
HWLOC_RESTRICT_FLAG_BYNODESET, 118	234
HWLOC_RESTRICT_FLAG_REMOVE_CPULESS,	hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s,
118	235
HWLOC_RESTRICT_FLAG_REMOVE_MEMLESS,	hwloc_topology_diff_u::hwloc_topology_diff_too_complex_s,
118	238
hwloc_restrict_flags_e, 117	next_cousin
hwloc_topology_alloc_group_object, 118	hwloc_obj, 228
hwloc_topology_allow, 118	next_sibling
hwloc_topology_insert_group_object, 119	hwloc_obj, 228
hwloc_topology_insert_misc_object, 119	nexttouch_membind
hwloc_topology_refresh, 120	hwloc topology membind support, 241
hwloc_topology_restrict, 120	nodeset
	hwloc obj, 228
name	numa
hwloc_disc_component, 218	hwloc_topology_discovery_support, 240
hwloc_info_s, 221	numa memory
hwloc_obj, 228	hwloc_topology_discovery_support, 240
hwloc_topology_diff_obj_attr_u::hwloc_topology_diff	_Abinattoetring_s,
236	hwloc_obj_attr_u, 230
nbobjs	
hwloc_distances_s, 219	obj_attr
Netloc API, 209	hwloc_topology_diff_u, 239
NETLOC_ERROR, 209	obj_depth
NETLOC_ERROR_EMPTY, 209	hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s,
NETLOC_ERROR_EXISTS, 209	235
NETLOC_ERROR_MAX, 209	hwloc_topology_diff_u::hwloc_topology_diff_too_complex_s,
NETLOC_ERROR_MULTIPLE, 209	238

```
obj_index
                                                      HWLOC_OBJ_L4CACHE, 83
                                                      HWLOC OBJ L5CACHE, 83
    hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s,
                                                      HWLOC_OBJ_MACHINE, 83
    hwloc_topology_diff_u::hwloc_topology_diff_too_complex_b,WLOC_OBJ_MEMCACHE, 84
        238
                                                      HWLOC_OBJ_MISC, 84
                                                      HWLOC OBJ NUMANODE, 83
object
                                                      HWLOC OBJ OS DEVICE, 84
    hwloc location::hwloc location u, 222
                                                      HWLOC OBJ OSDEV BLOCK, 82
Object levels, depths and types, 90
                                                      HWLOC OBJ OSDEV COPROC, 82
    hwloc get depth type, 91
                                                      HWLOC OBJ OSDEV DMA, 82
    hwloc_get_memory_parents_depth, 91
                                                      HWLOC_OBJ_OSDEV_GPU, 82
    hwloc_get_nbobjs_by_depth, 91
                                                      HWLOC_OBJ_OSDEV_NETWORK, 82
    hwloc_get_nbobjs_by_type, 91
                                                      HWLOC_OBJ_OSDEV_OPENFABRICS, 82
    hwloc_get_next_obj_by_depth, 91
                                                      hwloc_obj_osdev_type_e, 82
    hwloc_get_next_obj_by_type, 91
                                                      hwloc_obj_osdev_type_t, 81
    hwloc get obj by depth, 92
                                                      HWLOC_OBJ_PACKAGE, 83
    hwloc_get_obj_by_type, 92
                                                      HWLOC OBJ PCI DEVICE, 84
    hwloc_get_root_obj, 92
                                                      HWLOC OBJ PU, 83
    hwloc get type depth, 92
                                                      hwloc_obj_type_t, 82
    hwloc_get_type_depth_e, 90
                                                      HWLOC_TYPE_UNORDERED, 81
    hwloc_get_type_or_above_depth, 92
                                                  objs
    hwloc get type or below depth, 93
                                                      hwloc_distances_s, 219
    hwloc_topology_get_depth, 93
                                                 oldvalue
    HWLOC_TYPE_DEPTH_BRIDGE, 90
                                                      hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_string_
    HWLOC_TYPE_DEPTH_MEMCACHE, 90
    HWLOC TYPE DEPTH MISC, 90
                                                      hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_uint64
    HWLOC TYPE DEPTH MULTIPLE, 90
                                                          237
    HWLOC TYPE DEPTH NUMANODE, 90
                                                  os index
    HWLOC TYPE DEPTH OS DEVICE, 90
                                                      hwloc obj, 228
    HWLOC_TYPE_DEPTH_PCI_DEVICE, 90
                                                 osdev
    HWLOC_TYPE_DEPTH_UNKNOWN, 90
                                                      hwloc_obj_attr_u, 230
Object Sets (hwloc_cpuset_t and hwloc_nodeset_t), 80
    hwloc_const_cpuset_t, 80
                                                 page types
    hwloc_const_nodeset_t, 80
                                                      hwloc_obj_attr_u::hwloc_numanode_attr_s, 224
    hwloc cpuset t, 80
                                                 page_types_len
    hwloc_nodeset_t, 80
                                                      hwloc_obj_attr_u::hwloc_numanode_attr_s, 224
Object Structure and Attributes, 86
                                                 parent
    hwloc obj t, 86
                                                      hwloc_obj, 228
Object Types, 81
                                                 pci
    hwloc_compare_types, 84
                                                      hwloc_obj_attr_u::hwloc_bridge_attr_s, 213
    HWLOC OBJ BRIDGE, 84
                                                 pcidev
    HWLOC_OBJ_BRIDGE_HOST, 82
                                                      hwloc_obj_attr_u, 230
    HWLOC_OBJ_BRIDGE_PCI, 82
                                                 pcie
    hwloc obj bridge type e, 82
                                                      hwloc cl device topology amd, 215
    hwloc obj bridge type t, 81
                                                 phase
    HWLOC OBJ CACHE DATA, 82
                                                      hwloc_disc_status, 219
    HWLOC OBJ CACHE INSTRUCTION, 82
                                                 phases
    hwloc_obj_cache_type_e, 82
                                                      hwloc_backend, 212
    hwloc_obj_cache_type_t, 81
                                                      hwloc_disc_component, 218
    HWLOC_OBJ_CACHE_UNIFIED, 82
                                                 prev_cousin
    HWLOC_OBJ_CORE, 83
                                                      hwloc_obj, 228
    HWLOC_OBJ_DIE, 84
                                                 prev sibling
    HWLOC OBJ GROUP, 83
                                                      hwloc obj, 229
    HWLOC OBJ L1CACHE, 83
                                                 priority
    HWLOC_OBJ_L1ICACHE, 83
                                                      hwloc_disc_component, 218
    HWLOC OBJ L2CACHE, 83
                                                 private data
    HWLOC OBJ L2ICACHE, 83
                                                      hwloc backend, 212
    HWLOC OBJ L3CACHE, 83
                                                 pu
    HWLOC_OBJ_L3ICACHE, 83
                                                      hwloc_topology_discovery_support, 240
```

raw	subvendor_id
hwloc_cl_device_topology_amd, 215	hwloc_obj_attr_u::hwloc_pcidev_attr_s, 232
Retrieve distances between objects, 159	symmetric_subtree
hwloc_distances_get, 160	hwloc_obj, 229
hwloc_distances_get_by_depth, 160	
hwloc_distances_get_by_name, 160	The bitmap API, 141
hwloc_distances_get_by_type, 160	hwloc_bitmap_allbut, 143
hwloc_distances_get_name, 160	hwloc_bitmap_alloc, 143
hwloc_distances_kind_e, 159	hwloc_bitmap_alloc_full, 143
HWLOC_DISTANCES_KIND_FROM_OS, 159	hwloc_bitmap_and, 143
HWLOC_DISTANCES_KIND_FROM_USER, 159	hwloc_bitmap_andnot, 143
HWLOC_DISTANCES_KIND_HETEROGENEOUS_	TYPES, wioc_bitmap_asprintt, 144
159	hwloc_bitmap_clr, 144
HWLOC_DISTANCES_KIND_MEANS_BANDWIDTH	hwloc_bitmap_clr_range, 144
159	hwloc_bitmap_compare, 144
HWLOC_DISTANCES_KIND_MEANS_LATENCY,	hwloc_bitmap_compare_first, 144
159	hwloc_bitmap_copy, 145
hwloc_distances_release, 161	hwloc_bitmap_dup, 145
revision	hwloc_bitmap_fill, 145
hwloc_obj_attr_u::hwloc_pcidev_attr_s, 232	hwloc_bitmap_first, 145
and and have	hwloc_bitmap_first_unset, 145
secondary_bus	hwloc_bitmap_foreach_begin, 142
hwloc_obj_attr_u::hwloc_bridge_attr_s, 213	hwloc_bitmap_foreach_end, 142
set_area_membind	hwloc_bitmap_free, 146
hwloc_topology_membind_support, 241	hwloc_bitmap_from_ith_ulong, 146
set_proc_cpubind	hwloc_bitmap_from_ulong, 146
hwloc_topology_cpubind_support, 233	hwloc_bitmap_from_ulongs, 146
set_proc_membind	hwloc_bitmap_intersects, 146
hwloc_topology_membind_support, 241	hwloc_bitmap_isequal, 146
set_thisproc_cpubind	hwloc_bitmap_isfull, 147
hwloc_topology_cpubind_support, 233	hwloc_bitmap_isincluded, 147
set_thisproc_membind hwloc topology membind support, 242	hwloc_bitmap_isset, 147
set_thisthread_cpubind	hwloc_bitmap_iszero, 147 hwloc bitmap last, 147
hwloc_topology_cpubind_support, 233	hwloc_bitmap_last_unset, 148
set thisthread membind	hwloc_bitmap_list_asprintf, 148
hwloc_topology_membind_support, 242	hwloc_bitmap_list_asprintf, 148
set_thread_cpubind	hwloc_bitmap_list_sscanf, 148
hwloc_topology_cpubind_support, 234	hwloc_bitmap_next, 148
Sharing topologies between processes, 197	hwloc_bitmap_next_unset, 149
hwloc_shmem_topology_adopt, 197	hwloc bitmap not, 149
hwloc_shmem_topology_get_length, 198	hwloc_bitmap_nr_ulongs, 149
hwloc shmem topology write, 198	hwloc_bitmap_only, 149
sibling_rank	hwloc bitmap or, 149
hwloc_obj, 229	hwloc_bitmap_set, 150
size	hwloc bitmap set ith ulong, 150
hwloc_obj_attr_u::hwloc_cache_attr_s, 214	hwloc_bitmap_set_range, 150
hwloc_obj_attr_u::hwloc_numanode_attr_s::hwloc_n	_ · ·
223	hwloc_bitmap_snprintf, 150
string	hwloc_bitmap_sscanf, 151
hwloc_topology_diff_obj_attr_u, 237	hwloc_bitmap_t, 143
subdevice_id	hwloc_bitmap_taskset_asprintf, 151
hwloc_obj_attr_u::hwloc_pcidev_attr_s, 232	hwloc_bitmap_taskset_snprintf, 151
subkind	hwloc_bitmap_taskset_sscanf, 151
hwloc_obj_attr_u::hwloc_group_attr_s, 220	hwloc_bitmap_to_ith_ulong, 151
subordinate_bus	hwloc_bitmap_to_ulong, 152
hwloc_obj_attr_u::hwloc_bridge_attr_s, 213	hwloc_bitmap_to_ulongs, 152
subtype	hwloc_bitmap_weight, 152
hwloc_obj, 229	hwloc_bitmap_xor, 152
<u>-</u> ,,	<u>-</u> <del>-</del>

hwloc_bitmap_zero, 152 hwloc_const_bitmap_t, 143 too_complex hwloc_topology_diff_u, 239 Topology Creation and Destruction, 87		hwloc_topology_diff_obj_attr_type_e, 194 hwloc_topology_diff_obj_attr_type_t, 193 hwloc_topology_diff_t, 193 HWLOC_TOPOLOGY_DIFF_TOO_COMPLEX, 194
hwloc_topology_abi_check, 87 hwloc_topology_check, 87 hwloc_topology_destroy, 88 hwloc_topology_dup, 88	total	hwloc_topology_diff_type_e, 194 hwloc_topology_diff_type_t, 194 l_memory hwloc_obj, 229
hwloc_topology_init, 88 hwloc_topology_load, 88 hwloc_topology_t, 87	type	hwloc_cl_device_topology_amd, 215 hwloc_component, 217
Topology Detection Configuration and Query, 111  HWLOC_TOPOLOGY_FLAG_IMPORT_SUPPORT  113		hwloc_location, 222 hwloc_obj, 229 hwloc_obj_attr_u::hwloc_cache_attr_s, 214 hwloc_obj_attr_u::hwloc_osdev_attr_s, 231
HWLOC_TOPOLOGY_FLAG_INCLUDE_DISALLO 112 HWLOC_TOPOLOGY_FLAG_IS_THISSYSTEM, 112	, vv ⊏D,	hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_generical  234  hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_string_
HWLOC_TOPOLOGY_FLAG_THISSYSTEM_ALLO 113 hwloc_topology_flags_e, 111	OWED <sub>.</sub>	hwloc_topology_diff_obj_attr_u::hwloc_topology_diff_obj_attr_uint64_237
hwloc_topology_get_flags, 114 hwloc_topology_get_support, 114 hwloc_topology_get_type_filter, 115		hwloc_topology_diff_u::hwloc_topology_diff_generic_s, 234 hwloc_topology_diff_u::hwloc_topology_diff_obj_attr_s, 235
hwloc_topology_get_userdata, 115 hwloc_topology_is_thissystem, 115 hwloc_topology_set_all_types_filter, 115		hwloc_topology_diff_u::hwloc_topology_diff_too_complex_s, 238
hwloc_topology_set_cache_types_filter, 115 hwloc_topology_set_flags, 115 hwloc_topology_set_icache_types_filter, 115 hwloc_topology_set_io_types_filter, 116	uinte	hwloc_topology_diff_obj_attr_u, 237
hwloc_topology_set_type_filter, 116 hwloc_topology_set_userdata, 116 hwloc_type_filter_e, 113	·	hwloc_cl_device_topology_amd, 215 tream hwloc_obj_attr_u::hwloc_bridge_attr_s, 213
HWLOC_TYPE_FILTER_KEEP_ALL, 113 HWLOC_TYPE_FILTER_KEEP_IMPORTANT, 114 HWLOC_TYPE_FILTER_KEEP_NONE, 114	·	tream_type hwloc_obj_attr_u::hwloc_bridge_attr_s, 213 rdata
HWLOC_TYPE_FILTER_KEEP_STRUCTURE, 114 Topology differences, 193	valu	
hwloc_topology_diff_apply, 195 hwloc_topology_diff_apply_flags_e, 194 HWLOC_TOPOLOGY_DIFF_APPLY_REVERSE, 194	valu vend	hwloc_distances_s, 220 dor_id
hwloc_topology_diff_build, 195 hwloc_topology_diff_destroy, 195 hwloc_topology_diff_export_xml, 195		hwloc_obj_attr_u::hwloc_pcidev_attr_s, 232
hwloc_topology_diff_export_xmlbuffer, 196 hwloc_topology_diff_load_xml, 196 hwloc_topology_diff_load_xmlbuffer, 196 HWLOC_TOPOLOGY_DIFF_OBJ_ATTR, 194 HWLOC_TOPOLOGY_DIFF_OBJ_ATTR_INFO,		
194 HWLOC_TOPOLOGY_DIFF_OBJ_ATTR_NAME, 194		
HWLOC_TOPOLOGY_DIFF_OBJ_ATTR_SIZE, 194		