DAFoam Workshop 2021 v2.2.5

June 9, 2021

Objectives

After this workshop, you should be able to

- Get familiar with the high-fidelity design optimization framework MACH-Aero.
- Describe the details in the OpenFOAM and DAFoam configurations files (e.g., controlDict, fvSchemes, runScript.py).
- Run aerodynamic optimization with DAFoam.
- Adjust the configurations files for a new case

A few notes

- We assume you are familiar with basic concepts of CFD, e.g., finite volume method, initial and boundary conditions, and discretization, and basic Linux commands, e.g., create, copy, modify, and save files.
- This workshop focuses on how to use DAFoam.
- This workshop has hands-on examples.
- **Stop** me at any time if you have questions.
- The online meeting will be **recorded**.
- All the materials are available at https://github.com/dafoam/workshops.

Outline

1 DAFoam Introduction

2 MACH-Aero Framework

3 Airfoil aerodynamic optimization

4 Wing aerodynamic optimization

DAFoam Introduction

What is DAFoam?

DAFoam: Discrete Adjoint with OpenFOAM

DAFoam can be used to:

- Compute derivatives for a large number of design variables
- Couple with gradient-based algorithms for optimizations
- Run OpenFOAM primal solvers to generate CFD samples
- Easily access the residuals, indexing, and file IO operations, etc.

What is OpenFOAM?

- OpenFOAM : Open-source Field Operation And Manipulation
- OpenFOAM is written in C++ and contains libraries to facilitate numerical operation of field variables (e.g., solving linear equation, computing partial derivative terms in a PDE)
- Building on these libraries, OpenFOAM includes more than 80 solvers (binary executives) that solve a wide range of PDEs.
- OpenFOAM also contains a wide range of utilities for pre- and post-processing (e.g., generate unstructured meshes, check mesh quality)

DAFoam supports only the ESI OpenCFD branch of OpenFOAM v1812

There are three main branches for OpenFOAM:

- ESI OpenCFD. Latest version : OpenFOAM-v2012
- The OpenFOAM Foundation. Latest version: OpenFOAM-v8
- Extend project. Latest version : foam-extend-4.0


DAFoam development timeline

- 2014-04 Project started in the MDOLab, University of Michigan
- 2018-05 First DAFoam paper published in Computers & Fluids
- 2019-06 Code became open source
- 2020-01 Extended for multiple solvers
- 2020-07 DAFoam upgraded to version 2
- 2020-12 Added Jacobian-free adjoint with AD

MACH-Aero Framework

MACH-Aero framework

MACH-Aero is a high-fidelity design optimization framework developed by the MDOLab at University of Michigan. MACH-Aero is open source at: https://github.com/mdolab/MACH-Aero

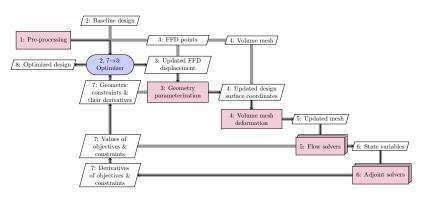

XDSM diagram for the MACH-Aero framework. The diagonal blocks are the modules (libraries) used in an optimization. All the modules are wrapped with Python.

Pre-processing module

Goal: Generate mesh and free-form deformation (FFD) control points Mesh needs to be in OpenFOAM format. Possible tools:

- blockMesh and snappyHexMesh utilities from OpenFOAM.
- pyHyp (https://github.com/mdolab/pyhyp) from MACH-Aero.
- Commercial software such as ICEM-CFD, Pointwise.


FFD file needs to be in the **plot3D** format. Possible tools :

- Python scripts such as genFFD.py.
- Commercial software that can generate structured meshes in the plot3D format, e.g., ICEM-CFD

Optimizer module

Goal: Receive function values and derivatives and update the design variables

MACH-Aero uses pyOptSparse to set up optimization problems https://github.com/mdolab/pyoptsparse (Design variables, objective and constraint functions, and optimizers : SNOPT, SLSQP, IPOPT, etc.)

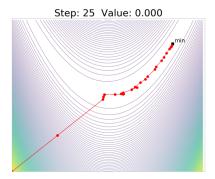


Optimization of the Rosenbrock function using gradient-based algorithms

Geometry parameterization module

Goal: Receive the updated design variables and change the design surface geometry or mesh.

We use the pyGeo module to parameterize the geometry through the free-form deformation (FFD) approach (https://github.com/mdolab/pygeo)

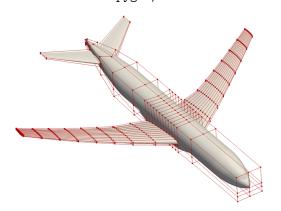


FFD control points (red) for an aircraft configuration

Volume mesh deformation module

Goal: Receive the design surface mesh and update the volume mesh coordinates

We use the IDWarp module to deform the volume mesh through an inverse distance weighting approach. It works for both structured and unstructured meshes. (https://github.com/mdolab/idwarp).

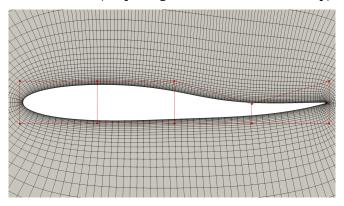


Example of deformed mesh

Primal solution module

Goal: Receive the update volume mesh and compute the objective and constraint functions, as well as state variables (e.g., velocity and pressure). For fluid mechanics, it is also called flow simulation.

We wrap OpenFOAM's built in solvers, e.g., simpleFoam, into Cython libraries and call them from Python.

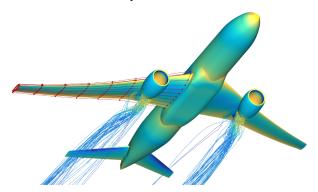


Aircraft aerodynamic analysis with OpenFOAM

Adjoint solution module

Goal: Receive the state variables and compute the total derivative of objective functions with respect to all design variables

We implemented efficient adjoint derivative computation in DAFoam.

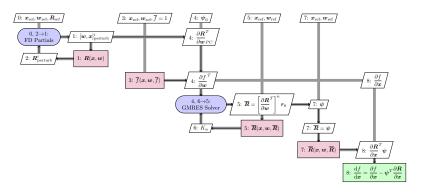

Jacobian-free adjoint diagram in DAFoam.

Airfoil aerodynamic optimization

Outline

- How to use the DAFoam docker image
- How to run an optimization
- How to visualize the result
- How to read the optimization log file
- Details of configuration files
- How to change the configuration files for a new case

How to use the DAFoam docker image

Download DAFoam Docker image and examples

The easiest way to run DAFoam optimizations is to use the DAFoam Docker image

First, install Docker following this website:

https://dafoam.github.io/mydoc_get_started_download_docker.html

Once done, verify the installation by running:

ls

Then run this command to download the DAFoam Docker image :

docker pull dafoam/opt-packages:v2.2.5

Finally, download the workshop examples at :

https://github.com/dafoam/workshops

How to start a Docker container

If you use Linux or MacOS, open a terminal and use the cd command to go this folder on your local computer. If you put the workshops folder in the \$HOME directory, the command may look like:

```
cd $HOME/workshops/2021_Summer/examples/naca0012/incompressible
```

Then, run this command to start a Docker container:

```
docker run -it --rm -u dafoamuser --mount \
"type=bind,src=$(pwd),target=/home/dafoamuser/mount" \
-w /home/dafoamuser/mount dafoam/opt-packages:v2.2.5 bash
```

If you use Windows, open the Prompt Command terminal, use the cd command to go to the above folder, and run this command:

```
docker run -it --rm -u dafoamuser --mount \
"type=bind,src=%cd%,target=/home/dafoamuser/mount" \
-w /home/dafoamuser/mount dafoam/opt-packages:v2.2.5 bash
```

NOTE: If you cannot copy the above command, check this link https://dafoam.github.io/mydoc_get_started_run.html

More information about the Docker container

What does the above command do?

- Start a Docker container (a light-weight virtual machine)
- Mount (link) your current directory to the container's /home/dafoamuser/mount directory
- Login to /home/dafoamuser/mount as dafoamuser
- Set the relevant DAFoam environmental variables.

A few notes:

- Treat the Docker container as disposable, i.e., start one container for one optimization run. If the optimization is running and you want to kill it, press ctrl+c or ctrl+\ to kill the job, then run exit to quit the container
- Do not store simulation results in the container because they will be deleted after you exit. Run simulations on the mounted space /home/dafoamuser/mount instead
- dafoamuser has the sudo privilege and its password is : dafoamuser

How to run an optimization

How to run an optimization (1/3)

Summary of the naca0012/incompressible case.

Optimizer	IPOPT
Flow and adjoint solvers	DASimpleFoam
Geometry	NACA0012
Mesh	4 032 cells
Objective function	C_d
Design variables	20 FFDs and α
Constraint	$C_{l}=0.5$, thickness, volume, TE/LE
U_{∞}	10 m/s
Re	6.7×10^5
Turbulence Model	Spalart-Allmaras

How to run an optimization (2/3)

Once in a Docker container, you should see something like :

dafoamuser@cddb89839078:~/mount\$

Run this command to double check if you are in the correct directory:

ls

After running the above command, you should see something like:

O.orig Allclean.sh FFD constant genAirFoilMesh.py paraview.foam preProcessing.sh profiles runScript.py system

How to run an optimization (2/3)

Once in a Docker container, you should see something like :

dafoamuser@cddb89839078:~/mount\$

Run this command to double check if you are in the correct directory:

ls

After running the above command, you should see something like:

O.orig Allclean.sh FFD constant genAirFoilMesh.py paraview.foam preProcessing.sh profiles runScript.py system

How to run an optimization (3/3)

Now you should be in the right directory. There are two main steps to run a case.

First, run this command for pre-processing (mesh generation):

```
./preProcessing.sh
```

Then, use this command to run the flow simulation:

```
python runScript.py | tee 2>&1 logOpt.txt
```

The optimization log will be printed to the screen and saved to logOpt.txt. In addition, the optimizer will write a separate log to the disk. For the IPOPT optimizer we use in this tutorial, it is opt_IPOPT.txt.

The optimization took about 10 minutes and converged in 17 steps.

How to visualize the results

How to visualize the results (1/7)

We use Paraview; an open-source post-processing tool to visualize the optimization results.

- Download Paraview at https://www.paraview.org/download/.
- For MacOS, download
 ParaView-5.8.1-MPI-OSX10.12-Python2.7-64bit.dmg and install the .dmg package
- For Ubuntu, download
 ParaView-5.8.1-MPI-Linux-Python2.7-64bit.tar.gz, extract
 the tarball, and run the paraview executive in the
 ParaView-5.8.1-MPI-Linux-Python2.7-64bit/bin folder
- For Windows, download


 ParaView-5.8.1-Windows-Python3.7-msvc2015-64bit.zip,

 extract the zip and run the paraview executive in the

 ParaView-5.8.1-Windows-Python3.7-msvc2015-64bit/bin folder


How to visualize the results (2/7)

In Paraview, click File->Open. In the pop up window, select paraview.foam in the naca0012/incompressible folder, and click OK.

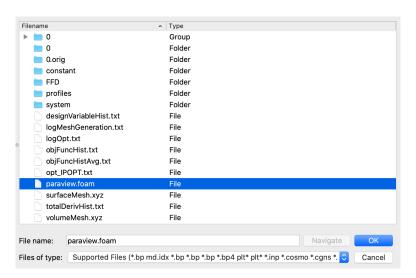


How to visualize the results (3/7)

Then, on the left properties window, hit Apply.

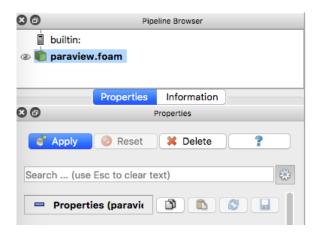

How to visualize the results (4/7)

Finally, you can see the simulation results for the NACA0012 airfoil on the right layout window

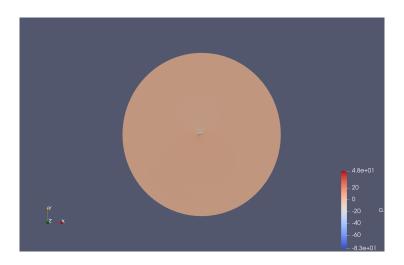

How to visualize the results (5/7)

You can scroll your mouse wheel to zoom-in and zoom-out, and hold your middle wheel, you can pan the view.

We also recommend enable the Camera Parallel Projection option by first click this icon on the left properties bar




Then, scroll down and check Camera Parallel Projection

Lights
Edit
Hidden Line Removal
Camera Parallel Projection

How to visualize the results (6/7)

Now, you can zoom-in to view the detailed pressure field around the airfoil (scroll your mouse wheel).

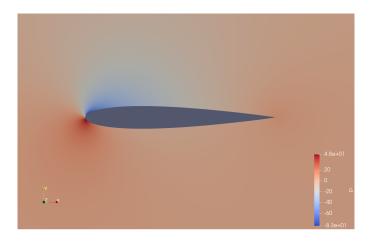

How to visualize the results (7/7)

Now you can hit the play button on the top bar to visualize the evolution of pressure and shape during the optimization.



If you want to look at another variable, change the range of the variable, or change the surface representation (e.g., visualize the mesh), check the top bar as shown below.



How to read optimization log files

How to read opt_IPOPT.txt

opt_IPOPT.txt is the very first file we need to check during or after the optimization. We want to look at the objective, feasibility (inf_pr) abd optimality (inf_du).

A successful optimization should reduce the objective function values, and the feasibility and optimality should drop below the prescribed tolerance (1e-6 for this tutorial).

Flow and adjoint equations

In flow solution, the steady-state incompressible Navier-Stokes equations are solved using the finite-volume mesh with the SIMPLE algorithm:

$$\nabla \cdot \textbf{\textit{U}} = 0$$

$$(\boldsymbol{U}\cdot
abla)\boldsymbol{U}+
abla
ho-
abla\cdot
u_{ extit{eff}}(
ablaoldsymbol{U}+
ablaoldsymbol{U}^{ au})=0$$

In adjoint solution, the adjoint equation is solved using a Jacobian free method to get the adjoint vector $\boldsymbol{\psi}$

$$[\frac{\partial \mathbf{R}}{\partial \mathbf{W}}]^T \psi = \frac{\partial f}{\partial \mathbf{W}}$$

Then, the adjoint vector is used to compute the total derivative df/dx.

$$\frac{\mathrm{d}f}{\mathrm{d}\boldsymbol{x}} = \frac{\partial f}{\partial \boldsymbol{x}} - [\frac{\partial \boldsymbol{R}}{\partial \boldsymbol{x}}]^{\mathsf{T}} \psi$$

How to read logOpt.txt (1/8)

Basic information.

```
DAFoam v2.2.5
Selecting RAS turbulence model SpalartAllmaras // Turbulence model
Global Cells: 4032 // Mesh cells
DAFoam option dictionary: // All DAFoam options
 solverName DASimpleFoam;
 primalMinResTol 1e-08;
   All IDWarp Options:
 {'LdefFact': 1.0, // All IDWarp options
 'aExp': 3.0.
 'alpha': 0.25.
Total Volume Nodes: 17640
{'all': [3, 4], // Design surface information
 'allsurfaces': [0, 1, 2, 3, 4],
 'designsurfaces': [3, 4],
```

How to read logOpt.txt (2/8)

Before running the optimization, it automatically finds the angle of attack to match the target CL (0.5). This is also called solveCL.

```
Running SolveCL to find alpha that matches target CL
          -----+
eps: 0.01 tol: 0.0001 maxit: 10 // eps: solveCL finite-difference step size
      -----+
                 Evaluating Objective Functions 000
Design Variables:
{'alpha': array([5.+0.j]), ... }
Setting U = (9.961947 0.87155743 0) at inout // setting U field based on alpha
Time = 400
U Initial residual: (1.5179219e-08 1.1995847e-08 1.5597788e-08)
U Final residual: (1.1435775e-09 9.1588646e-10 1.3379879e-09)
vPlus min: 14.568982 max: 100.52633 mean: 60.130968 // flow solution prints v+
CD-part1-force: 0.020495205 // CD and CL at Time = 400
CL-part1-force: 0.48750507
ExecutionTime = 8.69 s ClockTime = 10 s
Time = 425 // flow converged in 425 steps
Minimal residual 9.8369143e-09 satisfied the prescribed tolerance 1e-08
alpha: 5.000000, CL: 0.487505 // first solved alpha and CL
... // repeat the solveCL
alpha: 5.139185, CL: 0.500000 // final alpha and CL
Completed! alpha = 5.139185
```

How to read logOpt.txt (3/8)

Once solveCL is done, the optimization starts. It first prints the initial design variables, constraints, bounds etc

```
Optimization Problem -- opt
Objective Function: aeroFuncs
Objectives
  Index Name
                    Value
                                Optimum
     O CD
           0.E+00
                      0.E+00
Variables (c - continuous, i - integer, d - discrete) // design variables
                 Type Lower Bound
  Index Name
                                           Value
                                                    Upper Bound
                                                                 Status
                   c 0.E+00
     0 alpha_0
                                 5.139185E+00 1.E+01
       shapey_0
                   c -1.E-01 0.E+00
                                          1.E-01
     2 shapev 1
                   c -1.E-01 0.E+00 1.E-01
                   c -1.E-01 0.E+00 1.E-01
     3 shapey_2
Constraints (i - inequality, e - equality) // constraints
Index Name
                             Type
                                   Lower
                                           Value
                                                  Upper
                                                         Status Pi(N/A)
0 DVCon1 volume constraint 0
                               i 1.E+00 0.E+00 3.E+00
                                                              9.E+100
1 DVCon1_thickness_constraints_0 i 8.E-01 0.E+00 3.E+00 L 9.E+100
                               i 8.E-01 0.E+00 3.E+00 L 9.E+100
2 DVCon1 thickness constraints 0
3 DVCon1 thickness constraints 0 i 8.E-01
                                          0.E+00 3.E+00 L
                                                              9.E+100
```

How to read logOpt.txt (4/8)

Then, the coloring is computed. The coloring information will be used to compute the Jacobian matrices, e.g., dRdWTPC.

```
Running Coloring Solver
Calculating dRdW Coloring..
number of uncolored: 36223 1
ColorSweep: 100 8 s
number of uncolored: 23511 1
ColorSweep: 200 10 s
number of uncolored: 11178 1
ColorSweep: 300 12 s
number of uncolored: 544 1
ColorSweep: 324 13 s
Calculating dFdW CD-part1 Coloring...
```

How to read logOpt.txt (5/8)

It first solves the flow and computes the initial objective function.

```
Evaluating Objective Functions 005
Design Variables:
OrderedDict([('alpha', array([5.139184882352932])), ('shapey', array([0., ...
     0.1))]) // all design variable values for this flow solution.
// Check mesh quality before actually run the flow solution. If checkMesh fails.
      the flow solution will not run.
Checking mesh quality for time = 0
Overall domain bounding box (-17.36956 -18.580929 0) (18.72809 18.580929 0.1)
Mesh has 3 geometric (non-empty/wedge) directions 3{1}
Mesh has 3 solution (non-empty) directions 3{1}
Boundary openness (-4.6536375e-19 -3.9490374e-19 -5.6880426e-16) OK.
Max cell openness = 2.4445483e-16 OK.
Max aspect ratio = 97.871471 OK.
Minimum face area = 2.2541308e-06. Maximum face area = 4.2248202. Face area
     magnitudes OK.
Min volume = 2.2541308e-07. Max volume = 0.42248202. Total volume = 105.2804.
     Cell volumes OK.
Mesh non-orthogonality Max: 22.749125 average: 2.5479332
Non-orthogonality check OK.
Face pyramids OK.
Max skewness = 1.4324517 OK.
Coupled point location match (average 0) OK.
Mesh OK. // checkMesh passes
```

How to read logOpt.txt (6/8)

When the flow solution converges, it will print the objective and constraint function values.

```
Time = 200
U Initial residual: (8.0489602e-08 6.5681323e-08 1.9305741e-07) // U residual
   Final residual: (6.1866068e-09 4.979837e-09 1.6009007e-08)
p Initial residual: 2.1616161e-07 // p residual
p Final residual: 1.4795847e-08
Time step continuity errors : sum local = 3.8277947e-10
                              global = -1.6582597e-11
                          cumulative = 0.00015887025
nuTilda Initial residual: 2.2029223e-09 // turbulence variable residual
         Final residual: 2.1250661e-10
Bounding nuTilda>1e-16
vPlus min: 14.224415 max: 101.14689 mean: 59.937027 // v+
CD-part1-force: 0.020820085 // drag coefficient
CL-part1-force: 0.50000308 // lift coefficient
ExecutionTime = 51.83 s ClockTime = 58 s
Time = 286
Minimal residual 9.8182915e-09 satisfied the prescribed tolerance 1e-08
// Print the converged objective and constraint functions for this solution
Objective Functions:
{'DVCon1 volume constraint 0': 1.. 'DVCon1 thickness constraints 0': array([1..
     ... 1.]), 'CD': 0.020820238430313175, 'CL': 0.5000001610403806, 'fail':
     Falsel
Flow Runtime: 6.38911
```

How to read logOpt.txt (7/8)

Next, the adjoint is solved. Once done, the sensitivity will be printed.

```
Evaluating Objective Function Sensitivities 000
// Use coloring-FD method to compute preconditioner matrix dRdWTPC
Computing dRdWTPC 60 s
dRdWTPC: 0 of 325, ExecutionTime: 63 s
dRdWTPC: 100 of 325. ExecutionTime: 66 s
dRdWTPC: 200 of 325, ExecutionTime: 69 s
dRdWTPC: 300 of 325, ExecutionTime: 71 s
dRdWTPC: 324 of 325. ExecutionTime: 72 s
// Use reverse-mode AD to compute dFdW
Calculating dFdW using reverse-mode AD
// Solve dRdWT * psi = dFdW
Solving Linear Equation... 71 s
Main iteration 0 KSP Residual norm 3.216462234506e-02 72 s
Main iteration 100 KSP Residual norm 2.746557320396e-06 78 s
Main iteration 168 KSP Residual norm 3.080824419769e-10 82 s
// Compute dFdXv and dRdXV^T * psi using reverse mode AD
Calculating dFdXv using reverse-mode AD
Calculating [dRdXv] T * Psi using reverse-mode AD
// print the sensitivity
Objective Function Sensitivity:
{'DVCon1 volume constraint 0': {'alpha': array([[0.]]), 'shapey': array
      (\lceil \lceil -0.474621871902189 , -0.4746218719021887, 0.4746218719021891,
      ..., -0.2001199262333018, 0.2001199262333017.
      0.2001199262333014]])}, 'DVCon1 thickness constraints 0': {'alpha': array
            ([0.1])
```

How to read log0pt.txt (8/8)

The above flow-adjoint solution will be repeated until the optimization converges. Then, the summary of optimization will be printed.

```
Optimization Problem -- opt
   Objective Function: calcObjFuncValues
  Solution:
Total Time: 708.2673 // total run time
User Objective Time: 192.3354
User Sensitivity Time: 514.5540
Calls to Objective Function: 26
Calls to Sens Function: 18
Objectives
   Index Name
               Value
                               Optimum
               Variables (c-continuous, i-integer, d-discrete) // final design variables
  Index Name
                 Type Lower Bound Value Upper Bound
                                                             Status
     0 shapey_0 c -1.E-01 1.157639E+00 1.E-01
     1 shapev 1 c -1.E-01 1.481845E-02 1.E-01
Constraints (i - inequality, e - equality) // final constraint
 Index Name
                                Type
                                                      Value
                                          Lower
     Upper
           Status
                       Ρi
                                                        1 9.E+100
 0 DVCon1_volume_constraint_0 i 1.E+00 1.E+00 3.E+00
 1 DVCon1 thickness constraints 0 i 8.E-01 8.E-01 3.E+00 1 9.E+100
                           e 5.E-01 5.E-01 5.E-01
 33 CI.
                                                            9.E+100
```

The designVariableHist.txt file

History of design variables for each optimization iteration.

```
"Optimization_Iteration_000":
   "alpha": [ 5.139184882352932e+00 ],
   "shapey": [ 0.00000000000000e+00, 0.00000000000e+00, 0.0000000000000
       +00, 0.00000000000000e+00, 0.000000000000e+00, 0.0000000000000e
       +00, 0.00000000000000e+00, 0.000000000000e+00, 0.0000000000000e
       +00, 0.00000000000000e+00, 0.000000000000e+00, 0.0000000000000e
       +00, 0.00000000000000e+00, 0.00000000000000e+00 ]
},
"Optimization Iteration 001":
   "alpha": [ 5.138060485220683e+00 ].
   "shapev": [ -1.235388756207046e-05, -1.235388756207046e-05,
       1.235388756207046e-05, 1.235388756207046e-05, 3.971763945166782e-03,
       3.971763945166782e-03. 5.496896582781271e-03. 5.496896582781271e-03.
       8.426675160166613e-05, 8.426675160166613e-05, 5.443509660246530e-04,
       5.443509660246530e-04, -2.427500654732843e-03, -2.427500654732843e-03,
        -1.724052589118788e-03, -1.724052589118788e-03, 2.093032867706464e
       -05, 2.093032867706464e-05, -2.093032867706464e-05, -2.093032867706464
       e-05 1
},
```


The totalDerivHist.txt file

History of total derivatives for each optimization iteration.

```
"Optimization_Iteration_000":
   "CD":
      "alpha": [ 2.381623783762163e-03 ].
      "shapey": [ 3.511738965024154e-02, 3.492803545911542e-02, 3.200526828155191
            e-02, 3.180742702790106e-02, -5.892921319923614e-03,
            -5.902649387894162e-03, -1.144491483889070e-02, -1.146224282703606e
            -02, 3.177596591834314e-03, 3.187838214393225e-03, 5.929329231273673e
            -03. 5.924254135909747e-03. 1.890598489691082e-02. 1.890517540541186e
            -02, 2.059253838399523e-02, 2.058682490230581e-02, -4.818825079285534e
            -02, -4.825193433777377e-02, -4.993259758381555e-02,
            -4.999215109265394e-02 ]
      "alpha": [ 8.937240609804091e-02 ],
      "shapev": [ 2.077894737521315e-04, -1.527570234134256e-03,
            2.343608210441325e-01, 2.313962121945553e-01, 5.213755772675160e-01,
            5.206263437653107e-01, 7.036309452552799e-01, 7.024872477694163e-01,
            6.103749428633083e-01, 6.102302620088286e-01, 6.073417189281215e-01,
            6.070507720759699e-01, 1.583138188229053e+00, 1.583146820754854e+00,
            1.411095707919306e+00, 1.410944411517188e+00, -2.663221976842125e+00,
            -2.663605056859560e+00, -3.004362538425141e+00, -3.004690618705639e+00
```

The deformedFFD.dat file

We can load the optimized airfoil geometry with deformedFFD_018.dat in Paraview. The deformedFFD_018.dat is in Tecplot format.

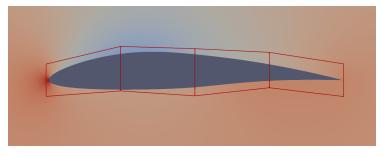

Deformed FFD points and airfoil shape at the last optimization iteration.

Details of configuration files

Folders and files before the optimization

```
naca0012/incompressible
|-- 0.orig // initial fields and boundary conditions
|-- constant // flow and turbulence property definition
|-- FFD // folder that contains the FFD file
|-- profiles // naca0012 profile coordinate for mesh generation
|-- system // flow discretization, setup, time step, etc
|-- Allclean.sh // script to clean up the simulation results
|-- genAirFoilMesh.py // python script called by preProcessing.sh
|-- paraview.foam // dummy file for paraview post-processing
|-- preProcessing.sh // bash script to generate the mesh
|-- runScript.py // main run script for optimization
```

NOTE: The 0, constant, and system folders are OpenFOAM essential, and the rests are for DAFoam optimization

Folders and files after the optimization

```
naca0012/incompressible
|-- 0 // initial fields and boundary conditions
|-- 0.00000001 // flow solution for the baseline design
|-- 0.00000002 // flow solution for the 1st opt iteration
|-- 0.00000018 // flow solution for the final opt iteration
|-- constant // flow and turbulence property definition
|-- FFD // folder that contains the FFD file
|-- profiles // naca0012 profile coordinate for mesh generation
|-- system // flow discretization, setup, time step, etc
|-- Allclean.sh // script to clean up the simulation results
|-- deformedFFD_018.dat // deformed FFD points for the final opt iter
|-- dRdWColoring_1.bin // computed coloring files
|-- DVConstraints.dat // visualization of constraints (Tecplot format)
|-- designVariableHist.txt // history of design variables during opt
|-- genAirFoilMesh.py // python script called by preProcessing.sh
|-- logMeshGeneration.txt // log file for mesh generation
|-- logOpt.txt // full log file for optimization
|-- objFuncHist.txt // objective history for ONE flow solution
|-- opt_IPOPT.txt // log file output by optimizer IPOPT
|-- paraview.foam // dummy file for paraview post-processing
|-- preProcessing.sh // bash script to generate the mesh
|-- runScript.py // main run script for optimization
|-- totalDerivHist.txt // history of total derivative during opt
|-- surfaceMesh.xyz // surface mesh generated by pyHyp
|-- volumeMesh.xyz // volume mesh generated by pyHyp
```

The 0 folder (1/2)

The 0 folder contains files for all the state variables and their initial and boundary values are defined in these files

The 0 folder (2/2)

Open 0/U and check the initial and boundary conditions for velocity. Similarly, we need to define the conditions for all other variables

```
// U magnitude 10 m/s. The internal and boundary field values defined in O/U
     will be overwritten by DAFoam when running optimization. This is because we
      have define the boundary values in "primalBC"-"daOptions" of runScript.pv
internalField uniform (10 0 0):
boundarvField
   "(wing.*)"
                     // boundary patch name for wing*
                     fixedValue; // boundary type
       type
                     uniform (0 0 0); // boundary value
       value
   symmetry1
                     // symmetry plane
                     symmetry;
       type
   symmetry2
       type
                     symmetry;
   inout
                     // far field, usually no need to change
                     inletOutlet:
       type
       inletValue
                     $internalField;
       value
                     $internalField:
```

The 0.00000018 folder

Open 0.00000018/U.gz and check the final converged velocity field for the optimized design. NOTE: the internalField is no longer uniform as in the 0/U file.

```
internalField nonuniform List<vector> // nonuniform internal field
4032
(3.9243226 - 1.290095 - 0.0028988106)
(3.7305871 - 0.99840567 - 0.0027730653)
(3.554621 - 1.3012481 - 0.0028666955)
(3.8325503 -0.95915536 -0.003049858)
(3.947682 -0.94315159 -0.0028641267)
(4.2338067 - 1.0326866 - 0.0031121561)
(2.738578 - 0.99318945 - 0.0026861221)
(3.2447924 - 0.87974595 - 0.0029403715)
(4.3552657 - 0.78274271 - 0.0032382407)
(3.9498574 -0.91532577 -0.0028354695)
(4.5629592 - 1.0266758 - 0.0031897207)
(4.8687782 - 0.9436423 - 0.0033734098)
(3.6192063 -0.29059501 -0.0019943858)
```

NOTE: The 0.00000018 folder also contains the optimized (deformed) mesh points in 0.00000018/constant/polyMesh/points.gz, which is different from the baseline mesh points in constant/polyMesh/points.gz (see next slide)

The constant folder (1/3)

The constant folder contains mesh, flow and turbulence property definition.

The constant folder (2/3)

The bounary file defines the name and type of the boundary patches

```
5 // number of boundary patches
   symmetry1 // name of the mesh boundary patch, symmetry plane
                     symmetry; // type of the boundary patch
      type
      nFaces
                     4032; // number of faces in the patch
       startFace
                   7938; // start face
   wing // wing surface
                    wall:
      type
      nFaces
                     126:
       startFace
                   16002;
   inout // far field
      type
                    patch;
      nFaces
                   126;
       startFace
                     16128:
```

The constant folder (3/3)

The transportProperties file defines flow properties

```
transportModel Newtonian;
nu 1.5e-5; // define the molecular viscosity
```

The turbulenceProperties file defines turbulence model

The system folder (1/5)

The system folder contains

```
system
|-- controlDict // defines system parameters such as time step
|-- createPatchDict // parameters used by the createPatch utility
|-- decomposeParDict // mesh decomposition parameters for parallel run
|-- fvSchemes // discretization schemes
|-- fvSolution // linear equation solution strategy
```

The system folder (2/5)

The control file contains flow setup such as step size

```
startFrom
             startTime: // simulation starts from startTime
startTime
             0:
                       // if startFrom=startTime, define it here
stopAt
             endTime:
                       // simulation ends at endTime
endTime
          1000:
                       // define endTime here
deltaT 1;
                // time step
writeControl timeStep;
                       // how to write the results
writeInterval 1000;
                       // write flow field every 1000 steps
purgeWrite
             0;
                       // whether to purge intermediate output
writeFormat ascii; // binary or ascii output format
writePrecision 8; // Write precision for data output
writeCompression on;
                       // Compress the output files with .gz format
timeFormat general: // time format
timePrecision 8; // time IO accuracy
runTimeModifiable true: // Allow modification during runtime
// Do not print solver performance from OpenFOAM, the information
// printed to the screen will be completely controlled by DAFoam
DebugSwitches
 SolverPerformance 0:
```

The system folder (3/5)

The decomposeParDict contains parallel run setup. NOTE: there is no need to manually change this file, because it will be automatically generated by DAFoam when the optimization runs.

```
numberOfSubdomains 4; // number of decomposed domain
method scotch;
```

The system folder (4/5)

The fvSchemes file contains discretization definition for each variable

```
ddtSchemes
   default
                                          steadyState;
gradSchemes
   default
                                          Gauss linear:
divSchemes // NOTE: need to specify divergence discretization for each variable
   default
                                          none;
   div(phi,U)
                                          bounded Gauss linearUpwindV grad(U);
   div(phi,nuTilda)
                                          bounded Gauss upwind;
   div((nuEff*dev2(T(grad(U)))))
                                        Gauss linear:
   div((-devRhoReff.T()&U))
                                        Gauss linear:
interpolationSchemes
   default
                                          linear;
laplacianSchemes
   default
                                          Gauss linear corrected:
```

The system folder (5/5)

The fvSolution file contains strategy for linear equation solution

```
SIMPLE
   consistent
                                   false: // don't use SIMPLEC
   nNonOrthogonalCorrectors
                                   0;
solvers
   "(p|p_rgh|G)" // linear GaussSeideil solver for p equations
       solver
                                    GAMG:
       smoother
                                    GaussSeidel:
       relTol
                                    0.1;
       tolerance
                                    0;
relaxationFactors // NOTE: need to specify relaxation for each variable
   fields
       "(p|p_rgh)"
                                    0.30:
   equations
       "(U|T|e|h|nuTilda|k|epsilon|omega)" 0.70;
```

The preProcessing.sh script (1/4)

The preProcessing.sh script is used to generate mesh. We first run genAirFoilMesh.py to read the airfoil coordinates from the profiles folder and generate structured mesh using pyHyp and output the mesh as volumeMesh.xyz.

```
python genAirFoilMesh.py > log.meshGeneration
```

The genAirFoilMesh.py script reads:

```
######## user input ##############
prefix = "./profiles/"
airfoilProfilePS = prefix + "NACA0012PS.profile"
airfoilProfileSS = prefix + "NACA0012SS.profile"
ZSpan = 0.1 # width in the z direction
nSpan = 2 # how many points in z
# PS parameters
dX1PS = 0.005 # first dx from the LE
Alpha1PS = 1.2 # clustering from the LE
dX2PS = 2e-3 # first dx from the TE
Alpha2PS = 1.2 # clustering from the TE
dXMaxPS = 0.02 \# max dx for PS
# TE parameters
NpTE = 5 # number of points for blunt TE
# 3D
NpExtrude = 33 # how many points to extrude for the 3D volume mesh
yWall = 4e-3 # first layer mesh length
marchDist = 20.0 # march distance for extruding
```

The preProcessing.sh script (2/4)

Then, we use the plot3dToFoam utility to convert the plot3D mesh volumeMesh.xyz to OpenFOAM format and store the mesh in constant/polyMesh

```
plot3dToFoam -noBlank volumeMesh.xyz >> log.meshGeneration
```

After running the above command, the volumeMesh.xyz will be converted to the OpenFOAM mesh. However, in the boundary patch file constant/polyMesh/boundary, there is only one boundary patch, and reads:

The preProcessing.sh script (3/4)

Then, we run autoPatch to automatically split the boundary patches. Here the argument 30 means split the mesh based on 30 degree feature angle (lower this value will generate more patches). Essentially, this call will modify the <code>constant/polyMesh/boundary</code> file and generate new patches called auto0, auto1, auto2, etc.

```
autoPatch 30 -overwrite >> log.meshGeneration
```

Once done, constant/polyMesh/boundary reads:

```
aut.o0
  type
                  patch;
   nFaces
                  4536:
   startFace
                  8946;
auto4
   type
                  patch:
   nFaces
                  4536;
   startFace
                  13482:
```

The preProcessing.sh script (4/4)

The above generated boundary file has boundary names such as auto0, auto1, auto2, etc. Now group and rename the above generated patches to meaningful names, e.g. wing, symmetry, etc, see system/createPathDict

```
createPatch -overwrite >> log.meshGeneration
```

system/createPathDict reads :

```
patches
       name wing; // Name of new patch
       patchInfo // Dictionary to construct new patch from
          type wall;
       // How to construct: either from 'patches' or 'set'
       constructFrom patches;
       // which patches to group and renamed as "wing"
       patches (auto2 auto3);
```

The airfoil coordinates

When running the above <code>genAirFoilMesh.py</code> script, it will look for the airfoil coordinates in the <code>profiles</code> folder. NOTE: We need to define the upper profile (SS; suction side) and lower profile (PS; pressure side) separately. The range of x needs to be from 0 to 1. And we need to manually delete the last few points to make a blunt trailing edge. In other words, the last point should have $x \approx 0.999$, instead of 1.0

```
NACA0012SS.profile

0.0000000 0.0000000 # coordinate should start from 1

0.0005839 -.0042603

0.0023342 -.0084289

...

0.9947532 -.0019938

0.9976658 -.0015870

0.9994161 -.0013419 # end at about 0.999; we have deleted the last few points
```

```
NACA0012PS.profile
0.0000000 0.0000000 # coordinate should start from 1
0.0005839 0.0042603
0.0023342 0.0084289
...
0.9947532 0.0019938
0.9976658 0.0015870
0.9994161 0.0013419 # end at about 0.999; we have deleted the last few points
```

The FFD folder

We use the FFD/genFFD.py script to generate the FFD points and save it in the plot3D format (FFD/wingFFD.xyz).


```
nBlocks = 1 # we only have one FFD block
nx = [5] # number of FFD points in the x direction
ny = [2]
nz = \lceil 2 \rceil
# we need to define the coordinates for the 8 corner points and the
# rest of points will be automatically generated by this script.
corners[0,0,:] = [-0.010,-.0700,0.0]
corners[0,1,:] = [-0.010,-0.0700,0.1]
corners[0,2,:] = [-0.010,0.0700,0.0]
corners[0,3,:] = [-0.010,0.0700,0.1]
corners[0,4,:] = [1.01,-.07,0.0]
corners[0,5,:] = [1.01,-.07,0.10]
corners[0,6,:] = [1.01,0.07,0.0]
corners[0,7,:] = [1.01,0.07,0.1]
```

Paraview has problems loading small plot3D files, so we can convert it to Tecplot format by running this command. Then we can load wingFFD.dat in Paraview.

```
dafoam_plot3d2tecplot.py wingFFD.xyz wingFFD.dat
```

Visualize the FFD points (wingFFD.dat) in Paraview

The FFD points have to completely contain the design surface!!

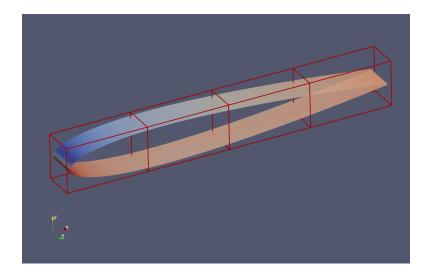

The runScript.py script (1/11)

```
# Input Parameters
parser = argparse.ArgumentParser()
# we support slsqp, ipopt, and snopt
parser.add_argument("--opt", help="optimizer_ito_iuse", type=str, default="ipopt")
# the default task is optimization (opt), we can also do runPrimal, runAjoint,
     verifySens, etc.
parser.add_argument("--task", help="typeuofurunutoudo", type=str, default="opt")
args = parser.parse_args()
gcomm = MPI.COMM_WORLD
# Define the global parameters here
U0 = 10.0 # far field velocity
p0 = 0.0 # far field pressure (relative to the ref value)
nuTilda0 = 4.5e-5 # far field turbulence variables
k0 = 0.015
epsilon0 = 0.14
omega0 = 100.0
CL_target = 0.5 # target lift coefficient for optimization
alpha0 = 5.0 # guess of angle of attack for CL_target
AO = 0.1 # reference area for normalizing lift and drag
```

The runScript.py script (2/11)

```
daOptions = {
   "designSurfaces": ["wing"], # design surface names
   "solverName": "DASimpleFoam", # solver name
   "adjJacobianOption": "JacobianFree", # Use Jacobian-free adjoint with AD
   "primalMinResTol": 1.0e-8, # flow solution residual tolerance
   "primalBC": { # set boundary condition here and overwrite 0/U, 0/p, etc.
       "UO": {"variable": "U", "patches": ["inout"], "value": [UO, 0.0, 0.0]},
       "p0": {"variable": "p", "patches": ["inout"], "value": [p0]}.
       "useWallFunction": True, # use wall functions for turbulence variables
   },
   "objFunc": { # define objective function here
       "CD": { # first objective name is CD
           "part1": {
              "type": "force", # it is of "force" type
              "source": "patchToFace", # force is computed from selected patches
              "patches": ["wing"], # patch names for force computation
              "directionMode": "parallelToFlow", # force dir is parallel to flow
              "alphaName": "alpha", # provide angle of attack name for force dir
              "scale": 1.0 / (0.5 * U0 * U0 * A0), # scale to normalize force
              "addToAdjoint": True, # whether to compute adjoint for this objFunc
       },
       "CL": { # second objective name is CL
              "directionMode": "normalToFlow", # force dir is normal to flow
       },
   },
```

The runScript.py script (3/11)

```
daOptions = {
   "adiEqnOption": { # adjoint solution options
       "gmresRelTol": 1.0e-8, # adjoint solution residual tolerance
       "pcFillLevel": 1, # preconditioner fill-in level
       "jacMatReOrdering": "rcm" # preconditioner re-ordering
   },
   "normalizeStates": { # state variable normalization values for adjoint
       "U": UO. # far field velocity to normalize U
       "p": U0 * U0 / 2.0, # dynamic pressure to normalize p (incompressible)
       "nuTilda": nuTilda0 * 10.0.
       "k": k0 * 10.0,
       "epsilon": epsilon0,
       "omega": omega0,
       "phi": 1.0, # always use 1.0 to normalize ph
   # finite-difference step size for computing preconditioner
   "adjPartDerivFDStep": {"State": 1e-7, "FFD": 1e-3},
   # how frequent to recompute the preconditioner dRdWTPC
   "adjPCLag": 100,
   # provide an empty key for place holder (values to be assigned later)
   "designVar": {}.
   # write the deformed FFD files during optimization
   "writeDeformedFFDs": True
```

NOTE: A complete list of daOptions are at:

https://dafoam.github.io/doxygen/html/classdafoam_1_1pyDAFoam_1_1DAOPTION.html

The runScript.py script (4/11)

```
# mesh warping parameters, users need to manually specify the symmetry plane and
     their normals
meshOptions = {
   "gridFile": os.getcwd(),
   "fileType": "openfoam",
   # point and normal for the symmetry plane
   "symmetryPlanes": [[[0.0, 0.0, 0.0], [0.0, 0.0, 1.0]], [[0.0, 0.0, 0.1], [0.0,
         0.0. 1.0111.
# options for optimizers
if args.opt == "snopt":
   optOptions = {
elif args.opt == "ipopt":
   optOptions = {
       "tol": 1.0e-6, # optimality
       "constr viol tol": 1.0e-6, # feasibility tolerance
       "max_iter": 50, # max number of optimization iterations
       "print_level": 5,
       "output_file": "opt_IPOPT.txt",
       "mu_strategy": "adaptive",
       "limited_memory_max_history": 10,
       "nlp_scaling_method": "none",
       "alpha_for_v": "full",
       "recalc v": "ves".
```


The runScript.py script (5/11)

```
# -----
# Design variable setup
def alpha(val, geo): # define the angle of attack function to update primalBC
   aoa = val[0] * np.pi / 180.0 # val[0] is the aoa in degree
   inletU = [float(U0 * np.cos(aoa)), float(U0 * np.sin(aoa)), 0] # U components
   DASolver.setOption("primalBC", {"UO": {"variable": "U", "patches": ["inout"],
       "value": inletU}}) # update U in primalBC based on aoa
   DASolver.updateDAOption() # update the value in the C++ layer
DVGeo = DVGeometry("./FFD/wingFFD.xyz") # read the FFD point
DVGeo.addRefAxis("bodyAxis", xFraction=0.25, alignIndex="k") # add ref axis
# select points
iVol = 0 # we only have one FFD block, so it is the 0th index
pts = DVGeo.getLocalIndex(iVol) # get all the FFD points
indexList = pts[:, :, :].flatten() # select all the FFD points [:,:,:]
PS = geo utils.PointSelect("list", indexList)
# shape variables that move in the y direction within [-1.0:1.0]
DVGeo.addGeoDVLocal("shapey", lower=-1.0, upper=1.0, axis="y", scale=1.0,
     pointSelect=PS) # assign the PS to pointSelect
# update daOptions, the type of shape design variable is "FFD"
daOptions["designVar"]["shapey"] = {"designVarType": "FFD"}
# angle of attack variable defined by the alpha(val, geo) function above
DVGeo.addGeoDVGlobal("alpha", value=[alpha0], func=alpha, lower=0.0, upper=10.0,
     scale=1.0) # initial aoa is [alpha0] and the bounds are [0:10]
# update daOptions, the type of aoa design variable is "AOA", we also need to
# give patch names, flowAxis, and normalAxis to determine the force direction
daOptions["designVar"]["alpha"] = {"designVarTvpe": "AOA", "patches": ["inout"],
   "flowAxis": "x", "normalAxis": "v"}
```

The runScript.py script (6/11)

No need to change this part


The runScript.py script (7/11)

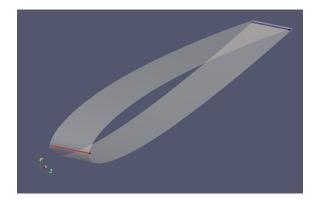

The runScript.py script (8/11)

```
# volume constraint, we use the leList and teList as outer boundary and
# create 2x10 sample points defined by nSpan and nChord. Then, we project
# and these samle points to the airfoil surface to form trapezoid volumes
# the sum of these volumes is an approximated volume for the airfoil.
# We constrain the relative upper and lower bounds [1.0:3.0]
# based on the initial volume
DVCon.addVolumeConstraint(leList, teList, nSpan=2, nChord=10, lower=1.0, upper=3, scaled=True)


# thickness constraint, we use the leList and teList as outer boundary and
# create 2x10 sample points defined by nSpan and nChord. Then, we project
# and these samle points to the airfoil surface. The lengths of the projection
# lines are the local thickness of the airfoil. We constrain the relative
# upper and lower bounds [0.8:3.0] based on the initial local thickness
DVCon.addThicknessConstraints2D(leList, teList, nSpan=2, nChord=10, lower=0.8, upper=3.0. scaled=True)
```

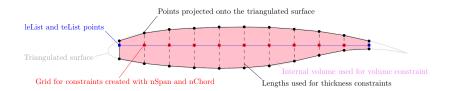

The runScript.py script (9/11)

```
# Create linear constraints to link the shape change between k=0 and k=1
nFFDs_x = pts.shape[0] # the x size of pts array
indSetA = []
indSetB = []
for i in range(nFFDs_x):
    for j in [0, 1]:
        indSetA.append(pts[i, j, 1]) # linking k=0 and k=1
        indSetB.append(pts[i, j, 0])

DVCon.addLinearConstraintsShape(indSetA, indSetB, factorA=1.0, factorB=-1.0, lower =0.0, upper=0.0)
```

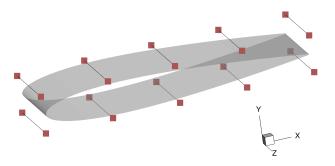


Black lines linking the FFD points movement between k=0 and k=1.

The runScript.py script (10/11)

```
# Create a linear constraint to fix the leading and trailing point.
indSetA = []
indSetB = []
for i in [0, nFFDs_x - 1]:
    # do not constrain k=1; it has been linked in the above symmetry constraint
    for k in [0]:
        indSetA.append(pts[i, 0, k])
        indSetB.append(pts[i, 1, k])

DVCon.addLinearConstraintsShape(indSetA, indSetB, factorA=1.0, factorB=1.0, lower
    =0.0, upper=0.0)
# write constraint visualization to a Tecplot file

DVCon.writeTecplot("DVConstraints.dat")
```

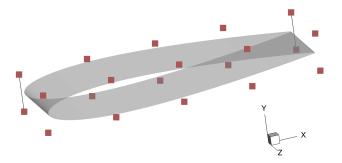

Black lines forcing the FFD points oppsitite movement at the LE and TE.

The runScript.py script (11/11)

```
# Initialize optFuncs for optimization
optFuncs.DASolver = DASolver # optFuncs.py has functions to run primal and adjoint
optFuncs.DVGeo = DVGeo
... # users usually don't need to change this part
# Task
# ======
if args.task == "opt":
   # run solveCL before opt. Need to specify which variables are AOA and lift
   alpha4CLTarget = optFuncs.solveCL(CL_target, "alpha", "CL")
   alpha([alpha4CLTarget], None) # once solveCL is done, set the correct alpha
   # create an pyOptSparse opt problem and set objFun function to run primal
   optProb = Optimization("opt", objFun=optFuncs.calcObjFuncValues, comm=gcomm)
   DVGeo.addVariablesPvOpt(optProb)
   DVCon.addConstraintsPvOpt(optProb)
   optProb.addObj("CD", scale=1) # set the objective function
   optProb.addCon("CL", lower=CL target, upper=CL target, scale=1) # CL constraint
   if gcomm.rank == 0:
       print(optProb)
   # run graph coloring before optimization
   DASolver.runColoring()
   # set sens function to run adjoint and solve the optimization problem
   opt = OPT(args.opt, options=optOptions)
   histFile = "./%s_hist.hst" % args.opt
   sol = opt(optProb, sens=optFuncs.calcObjFuncSens, storeHistory=histFile)
   if gcomm.rank == 0:
       print(sol)
```

The dafoam/dafoam/optFuncs.py script (1/2)

```
def calcObjFuncValues(xDV):
   """Update the design surface and run the primal solver to get objective
        function values.
   0.00
   Info("\n")
   Info("|, Evaluating, Objective, Functions, %03d, | " % DASolver.nSolvePrimals)
   Info("+------")
   Info("Design Variables:")
   Info(xDV)
   a = time.time()
   # Setup an empty dictionary for the evaluated function values
   funcs = {}
   # Set the current design variables in the DV object
   DVGeo.setDesignVars(xDV)
   DASolver.setDesignVars(xDV)
   # Evaluate the geometric constraints and add them to the funcs dictionary
   DVCon.evalFunctions(funcs)
   # Solve the CFD problem
   DASolver()
   # Populate the required values from the CFD problem
   DASolver.evalFunctions(funcs, evalFuncs=evalFuncs)
   b = time.time()
   # Print the current solution to the screen
   Info("Objective_Functions:_")
   Info(funcs)
   Info("Flow_Runtime:_\g" % (b - a))
   fail = funcs["fail"]
   return funcs, fail
```

The dafoam/dafoam/optFuncs.py script (2/2)

```
def calcObjFuncSens(xDV, funcs):
   """Run the adjoint solver and get objective function sensitivities.
   Info("+-----+")
   Info("|Evaluating, Objective, Function, Sensitivities, %03d|"%DASolver...)
   a = time.time()
   # write the design variable values to file
   DASolver.writeDesignVariable("designVariableHist.txt", xDV)
   # write the deform FFDs
   DASolver.writeDeformedFFDs()
   # Setup an empty dictionary for the evaluated derivative values
   funcsSens = {}
   # Evaluate the geometric constraint derivatives
   DVCon.evalFunctionsSens(funcsSens)
   # Solve the adjoint
   DASolver.solveAdjoint()
   # Evaluate the CFD derivatives
   DASolver.evalFunctionsSens(funcsSens, evalFuncs=evalFuncs)
   b = time.time()
   # Print the current solution to the screen
   with np.printoptions(precision=16, threshold=5, suppress=True):
      Info("Objective Function Sensitivity:")
      Info(funcsSens)
      Info("Adjoint_Runtime: "%g_s" % (b - a))
   # write the sensitivity values to file
   DASolver.writeTotalDeriv("totalDerivHist.txt", funcsSens, evalFuncs)
   fail = funcsSens["fail"]
   return funcsSens, fail
```

How to change the configuration files for a new case

How to change flow conditions?

Change these in runScript.py

```
U0 = 10.0

p0 = 0.0

nuTilda0 = 4.5e-5

k0 = 0.015

epsilon0 = 0.14

omega0 = 100.0
```

How to use more mesh cells?

Change the input parameters in genAirFoilMesh.py, e.g., reduce dX1PS, dX2PS, dXMaxPS, etc, and increase NpTE, NpExtrude.

```
######## user input ###############
prefix = "./profiles/"
airfoilProfilePS = prefix + "NACA0012PS.profile"
airfoilProfileSS = prefix + "NACA0012SS.profile"
ZSpan = 0.1 # width in the z direction
nSpan = 2 # how many points in z
# PS parameters
dX1PS = 0.005 # first dx from the LE
Alpha1PS = 1.2 # clustering from the LE
dX2PS = 2e-3 # first dx from the TE
Alpha2PS = 1.2 # clustering from the TE
dXMaxPS = 0.02 \# max dx for PS
# TE parameters
NpTE = 5 # number of points for blunt TE
# 3D
NpExtrude = 33 # how many points to extrude for the 3D volume mesh
yWall = 4e-3 # first layer mesh length
marchDist = 20.0 # march distance for extruding
```

How to use a different turbulence model?

To use the kOmegaSST model, in the constant/turbulenceProperties file, change

```
simulationType RAS;
RAS
{
    RASModel    SpalartAllmaras;
    turbulence    on;
    printCoeffs    off;
}
```

to:

```
simulationType RAS;
RAS
{
    RASModel    kOmegaSST;
    turbulence    on;
    printCoeffs    off;
}
```

How to use more FFD points?

To use 40 FFD points, in the FFD/genFFD.py file, change

```
nx = [5]
ny = [2]
nz = [2]
```

to:

```
nx = [10]
ny = [2]
nz = [2]
```

NOTE: Always use 2 points in the vertical direction, so ny=2. In addition, because in the z direction (spanwise), the airfoil is symmetry, so nz=2. For 3D wing cases, nz should be greater than 2.

How to optimize a different airfoil?

- Generate the separated upper and lower airfoil coordinates and save them to the profiles folder (e.g., RAE2822PS.profile and RAE2822SS.profile). Remember to delete the last few points to get blunt TE.
- Modify airfoilProfilePS and airfoilProfileSS in genAirFoilMesh to let it link to the correct airfoil coordinate files.
- Modify the FFD corners coordinates, i.e., corners [0,0,:], corners [0,1,:], etc. in the FFD/genFFD.py file to make sure the FFD points fully contain the new airfoil surface.
- Run ./Allclean.sh to clean up the previous runs
- Start a Docker container and run: ./preProcessing.sh && python runScript.py

How to use a different solver (1/2)?

Refer to examples/naca0012/subsonic, differences in runScript.py:

- There are new variables (e.g., T) in the global parameters. Also, we use absolute pressure p0=101325, instead of relative one
- "solverName" changed to "DARhoSimpleFoam"
- A new key "primalVarBounds" that sets the bounds for robust flow simulation
- In "normalizeStates", "p" is normalized by p0, insteady of dynamic pressure.

In addition, in the "0" folder, we have more variables, i.e., alphat and T. In the "constant" folder, the fluid properties are defined in "thermophysicalProperties" instead of "transportProperties". Also, in the "system" folder, "fvSchemes" and "fvSolution" have different setup that are specially designed for compressible flow solver DARhoSimpleFoam.

How to use a different solver (2/2)?

Refer to examples/naca0012/transonic, it is similar to examples/naca0012/subosnic, except that:

- U0 is set to be at transonic speed
- "solverName" changed to "DARhoSimpleCFoam". Here C means SIMPLEC algorithm (consistent). This is needed for transonic conditions.
- "transonicPCOption" in "daOptions" is set to 1. This uses the transonic preconditioner to speed up the adjoint convergence
- In the "system" folder, "fvSchemes" and "fvSolution" have different setup that are specially designed for transonic flow conditions for DARhoSimpleCFoam.

How to use more CPU cores?

If you want to run an DAFoam optimization using 4 CPU core, use this command:

```
mpirun -np 4 python runScript.py | tee 2>&1 logOpt.txt
```

NOTE: Always run ./Allclean.sh before running a new job!x

Wing aerodynamic optimization

Optimization summary

Optimizer IPOPT

Flow and adjoint solvers DARhoSimpleFoam

Geometry Onera_M6

Mesh 7800 cells

Objective function C_d


Design variables 120 FFDs and α

Constraint $C_l = 0.25$, thickness, volume, TE/LE

 U_{∞} 100 m/s Re 5×10⁶

Turbulence Model Spalart–Allmaras

Mesh and FFD

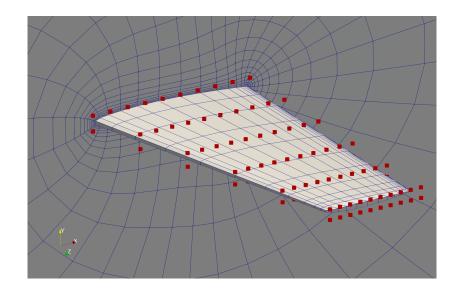

How to run a wing optimization

Running a 3D wing optimization is similar to running an airfoil optimization. Open a new Docker container, and run this command for pre-processing (mesh generation):

```
./preProcessing.sh
```

Then, use this command to run the flow simulation:

```
python runScript.py | tee 2>&1 logOpt.txt
```

The optimization log will be printed to the screen and saved to logOpt.txt. In addition, the optimizer will write a separate log to the disk. For the IPOPT optimizer we use in this tutorial, it is opt_IPOPT.txt.

The preProcessing.sh script

The overall mesh generation process is similar to the airfoil case. The main differene is that:

- We need to provide a surface mesh in the cgns or plot3D format (e.g., surfaceMesh.cgns). The surface mesh is usually generated by using commercial software such as ICEM-CFD and Pointwise. Refer to the MACH-Aero documentation for more details. https://mdolab-mach-aero.readthedocs-hosted.com/en/
 - latest/machAeroTutorials/overset_surface_mesh.html
- We coarsen the surface mesh four times to create a very coarse volume mesh for demonstration. If you want to increase the mesh density, comment out one or more these lines: cgns_utils coarsen surfaceMesh.cgns
- The genWingMesh.py is used to extrude the surface mesh to volume mesh using pyHyp


NOTE: We can run preProcessing_snappyHexMesh.sh to generate unstructured mesh instead. Refer to this link for more details: https://cfd.direct/openfoam/user-guide/v6-snappyhexmesh/

The runScript.py script (1/4)

The runScript.py script is similar to the airfoil (subsonic) case. The main differene is that:

1. In the design variable setup, we create a reference axis (blue line) aligned with z and located at 25% chordwise (xFraction=0.25). Here nTwists=6 is the number of FFD layers in z. This ref axis will be used to twist the wing at thoses 6 spanwise locations

```
nTwists = DVGeo.addRefAxis("bodyAxis", xFraction=0.25, alignIndex="k")
```

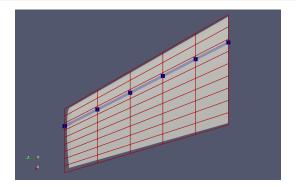

The runScript.py script (2/4)

2. Similar to the alpha(val,geo) function, we define a twist(val, geo) function to twist the wing. Here we loop over all the spanwise locations except for the root (nTiwst-1) and assign the design variable values from val to geo.rot_z["bodyAxis"].coef[i]. Then the geo object will actually twist the wing during optimization. Note that the first element in val, i.e., val[0] is the 2nd twist to the root, but geo.rot_z["bodyAxis"].coef[0] is the root twist, that is why we use val[i-1].

```
def twist(val, geo):
    for i in range(1, nTwists):
        geo.rot_z["bodyAxis"].coef[i] = val[i - 1]
```


After that, we add the twist as the design variable. Again, we have only nTwists-1 twist variables, and their initial values are all zeros: np.zeros(nTwists-1).

```
# twist
DVGeo.addGeoDVGlobal("twist", np.zeros(nTwists - 1), twist, lower
=-10.0, upper=10.0, scale=1.0)
daOptions["designVar"]["twist"] = {"designVarType": "FFD"}
```

The runScript.py script (3/4)

3. Similar to the airfoil case, we need to define LE (red) and TE (blue) lines for the thickness and volume constraints

```
leList = [[0.01, 0.0, 1e-3], [0.7, 0.0, 1.19]]
teList = [[0.79, 0.0, 1e-3], [1.135, 0.0, 1.19]]
```

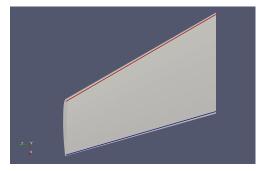

We do not impose symmetry constraints because it is a 3D case. Also, the LE and TE constrainst can be easily added by calling:

```
DVCon.addLeTeConstraints(0, "iLow")
DVCon.addLeTeConstraints(0, "iHigh")
```

The runScript.py script (4/4)

4. There are other minor changes, e.g., we add a "checkMeshThreshold" parameter in "daOptions" to relax the mesh quality tolerance, in "meshOptions", we have only one symmetry plane, as opposed to two symmetry planes in the airfoil case.

Useful links

- OpenFOAM user guide: https://www.openfoam.com/documentation/user-guide
- DAFoam documentation : https://dafoam.github.io
- MACH-Aero documentation:
 https://mdolab-mach-aero.readthedocs-hosted.com

Thank you!