Schema documentation for DR-GW-Call.Events.xsd

november 5, 2024

Table of Contents

Namespace: "DR-GW-Interface/DR-GW-Call.Events"	
Schema(s)	
Element(s)	
Element Call_Response	
Element Call_SelectEvent	
Element Call_SelectEvent / sel	
Element Call_Event	
Element Call_Event / tetraCallId	
Element Call_Event / action	
Element Call_Event / attributes	
Element Call_Event / callingParty	
Element Call Event / calledParty	
Element Call_Event / disconnectCause	
Element Call_PTTEvent	
Element Call_PTTEvent / tetraCallId	
Element Call_PTTEvent / granted	
Element Call_PTTEvent / ceased	
Element Call_PTTEvent / wait	
Element Call_UnitInEmergencyEvent	
Element Call_UnitInEmergencyEvent / group	
Element Call_UnitInEmergencyEvent / tetraCallId	
Element Call_UnitInEmergencyEvent / unitInEmg	
Element Call_UnitInEmergencyEvent / unitInEmgType	
Element Call_UnitInEmergencyEvent / emgInfo	15
Element Call_UnitInEmergencyEvent / tstamp	
Element Call_KeyExchangeEvent	16
Element Call_KeyExchangeEvent / state	17
Element Call_KeyExchangeEvent / code	18
Element Call_KeyExchangeEvent / priority	18
Element Call_KeyExchangeEvent / interaction	
Element Call_KeyExchangeEvent / text	19
Element Call_KeyExchangeEvent / tone	19
Namespace: "DR-GW-Interface/CommonTypes"	
Schema(s)	
Imported schema CommonTypes.xsd	
Element(s)	
Element ct:typeResponse / ct:requestId	
Element ct:typeResponse / ct:result	
Element ct:typeResult / ct:responseCode	
Element ct:typeResult / ct:sourceSystem	
Element ct:typeResult / ct:result	
Element ct:typeEvent / ct:requestId	21
Element ct:typeEvent / ct:result	
Element ct:typeAddress / ct:subscriber	
Element ct:typeSubscriberAddress / ct:ssi	
Element ct:typeSubscriberAddress / ct:tsi	
Element ct:typeTSI / ct:mnc	
Element ct:typeTSI / ct:mcc	
Element ct:typeTSI / ct:ssi	
Element ct:typeAddress / ct:alias	
Element ct:typeAddress / ct:msisdn	
Element ct:typeAddress / ct:fssn	
Element ct:typeAddress / ct:external	
Element ct:typeExternal / ct:gatewayNumber	
Element ct:typeExternal / ct:number	
Element ct:typeAddress / ct:opta	
Element ct:typeAddress / ct:cell Element ct:typeRequest / ct:requestId	
Complex Type(s)	
	20

Complex Type ct:typeResponse	26
Complex Type ct:typeResult	
Complex Type ct:typeEvent	
Complex Type ct:typeAddress	27
Complex Type ct:typeSubscriberAddress	27
Complex Type ct:typeTSI	
Complex Type ct:typeExternal	
Complex Type ct:typeEmpty	
Complex Type ct:typeRequest	
Simple Type(s)	
Simple Type ct:typeResponseCode	
Simple Type ct:typeSourceSystem	
Simple Type ct:typeDialString	
• ••	
Simple Type ct:typeOPTA	
Simple Type ct:typeAddressingStyle	
Namespace: "DR-GW-Interface/DR-GW-Call.CommonTypes"	
Schema(s)	31
Imported schema DR-GW-Call.CommonTypes.xsd	
Element(s)	
Element typeSelection / level	
Element typeSelection / target	
Element typeCallAttributes / hook	
Element typeCallAttributes / mode	32
Element typeCallAttributes / commtype	33
Element typeCallAttributes / priority	33
Element typeCallAttributes / encryption	
Element typeCallAttributes / ambienceListen	
Element typeCallAttributes / req2speak	
Element typeCallAttributes / demandPriority	
Element typeDisconnectCause / protocol	
Element typeDisconnectCause / code	
Element typeDisconnectCause / text	
Element typeTxGranted / txGrant	
Element typeTxGranted / talkingParty	
Element typeTxGranted / encryption	
Element typeTxGranted / txPriority	
Element typeTxGranted / txInterrupt	3'
Element typeTxGranted / txRepeat	3′
Element typeTxGranted / workstationId	38
Complex Type(s)	38
Complex Type typeSelection	38
Complex Type typeCallAttributes	38
Complex Type typeDisconnectCause	
Complex Type typeTxGranted	
Simple Type(s)	
Simple Type typeSelectionLevel	
Simple Type typeActionEvent	
Simple Type typeCallMode	
Simple Type typeCallType	
Simple Type typeTxDemandPriority	
Simple Type typeTxGrant	
Simple Type typeTxPriority	
Simple Type typeUnitInEmergencyType	
Simple Type typeEmergencyInfo	
Simple Type typeKeyExchangeState	46
Simple Type typeKeyExchangeCode	
Simple Type typeKeyExchangeTextPriority	47
Simple Type typeKeyExchangeText	47
Simple Type typeActionPTTRequest	
Simple Type typeActionRequest	
Simple Type typeAudioCodec	
Simple Type typeWorkstationId	
Simple Type typeKeyExchangeAction	
Simple Type typeKeyManagementTextPriority	
Simple Type Grands Industrial Control of the Contro	50

Namespace: "DR-GW-Interface/DR-GW-Call.Events"

Schema(s)


Main schema DR-GW-Call.Events.xsd

Namespace	DR-GW-Interface/DR-GW-Call.Events
-----------	-----------------------------------


Annotations	Version 1.1.1	
Properties	attribute form default:	unqualified
	element form default:	qualified

Element(s)

Element Call_Response

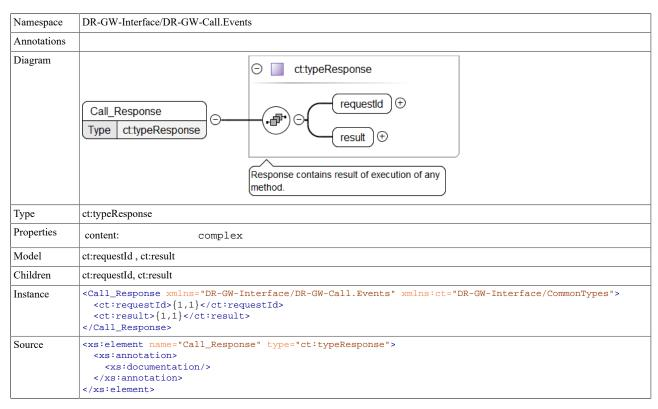


Element Call_SelectEvent

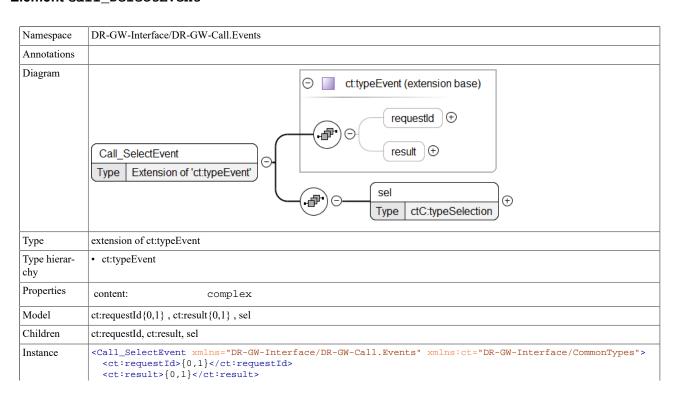


```
<sel>{1,1}</sel>
            </Call_SelectEvent>
Source
            <xs:element name="Call_SelectEvent">
              <xs:annotation>
                <xs:documentation/>
              </xs:annotation>
              <xs:complexType>
                <xs:complexContent>
                  <xs:extension base="ct:typeEvent">
                    <xs:sequence>
                      <xs:element name="sel" type="ctC:typeSelection"/>
                    </xs:sequence>
                  </xs:extension>
                </xs:complexContent>
              </xs:complexType>
            </r></ra>
```

Element Call_SelectEvent / sel

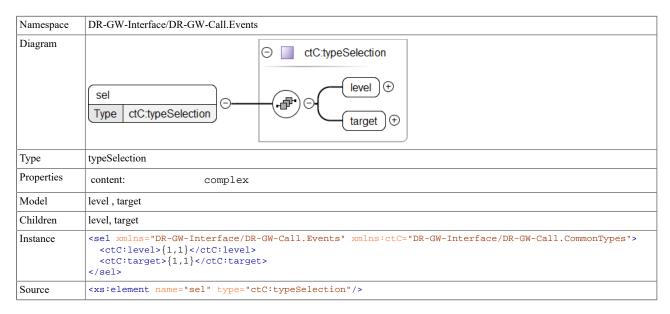

Element Call_Event

Namespace	DR-GW-Interface/DR-GW-Call.Events
Annotations	DR-GW-Call event.

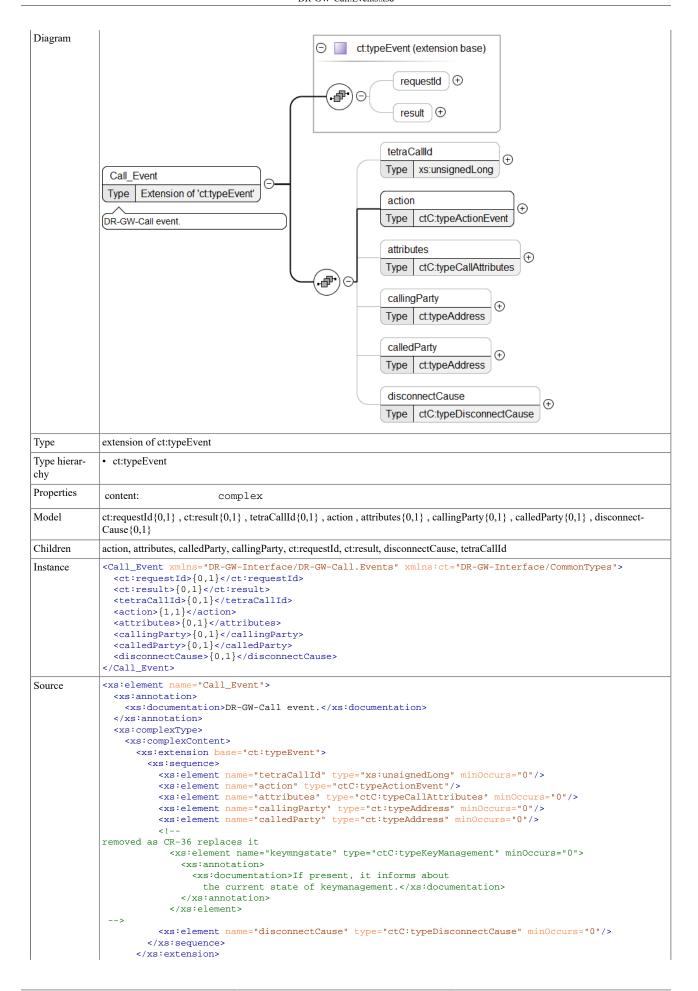


</xs:complexContent>
</xs:complexType>
</xs:element>

Element Call_Event / tetraCallId


Namespace	DR-GW-Interface/DR-GW-Call.Events	
Diagram	tetraCallId Type xs:unsignedLong Built-in derived type. The unsignedLong datatype is derived from nonNegativeInteger by setting the value of	
Туре	xs:unsignedLong	
Properties	content: simple	
	minOccurs: 0	
Source	<pre><xs:element minoccurs="0" name="tetraCallId" type="xs:unsignedLong"></xs:element></pre>	

Element Call_Event / action

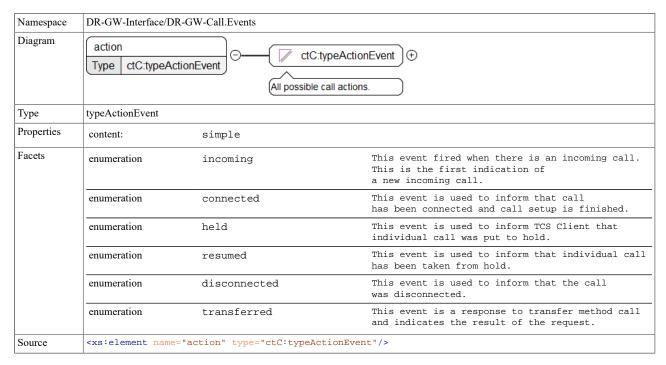


Element Call_Event / attributes

Namespace	DR-GW-Interface/DR-GW-Call.Events

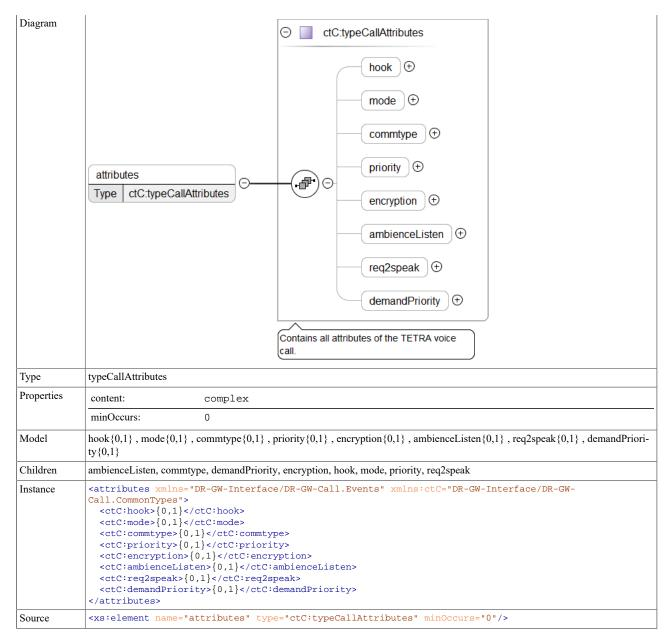


Element Call_Event / callingParty

Namespace	DR-GW-Interface/DR-GW-Call.Events
-----------	-----------------------------------

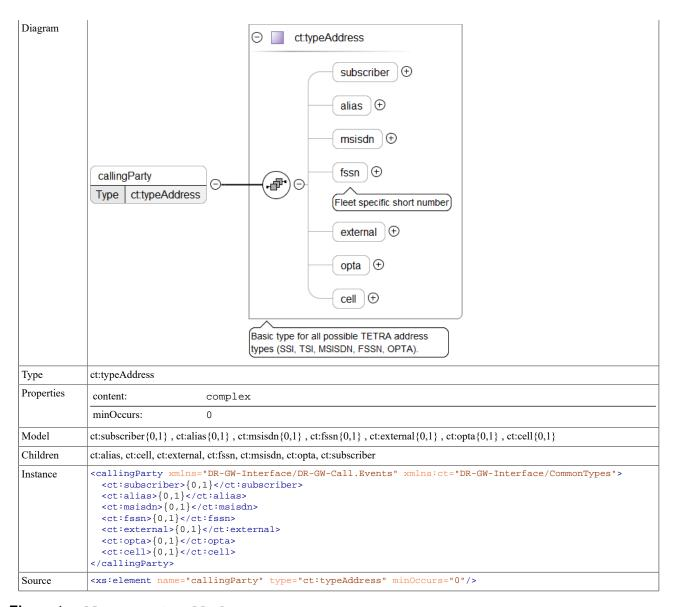


Element Call_Event / calledParty

Namespace	DR-GW-Interface/DR-GW-Call.Events	

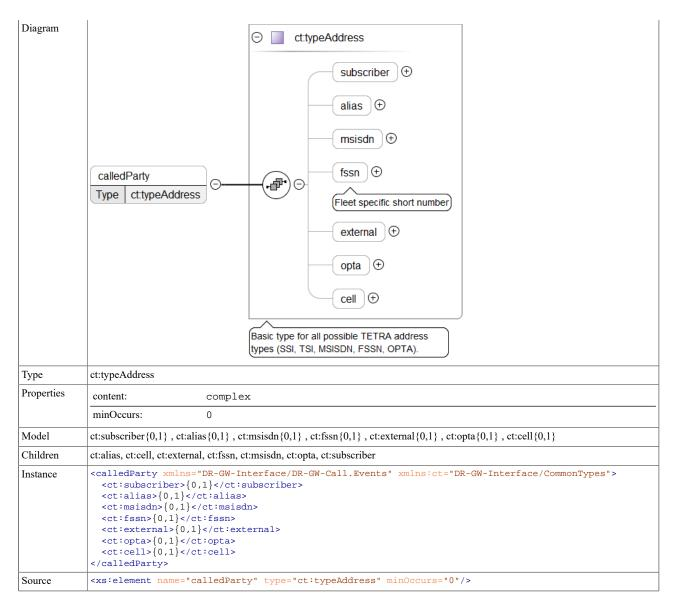


Element Call_Event / disconnectCause

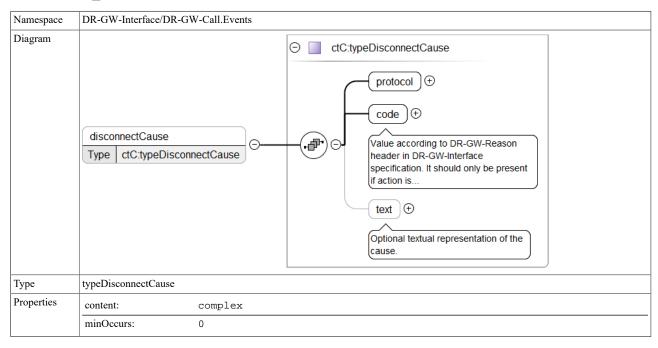


Model	France, van., van. (eye.)	
Children		
Instance	<pre><disconnectcause xmlns="DR-GW-Interface/DR-GW-Call.Events" xmlns:ctc="DR-GW-Interface/DR-GW-Call.CommonTypes"></disconnectcause></pre>	
Source	<pre><xs:element minoccurs="0" name="disconnectCause" type="ctC:typeDisconnectCause"></xs:element></pre>	


Element Call PTTEvent

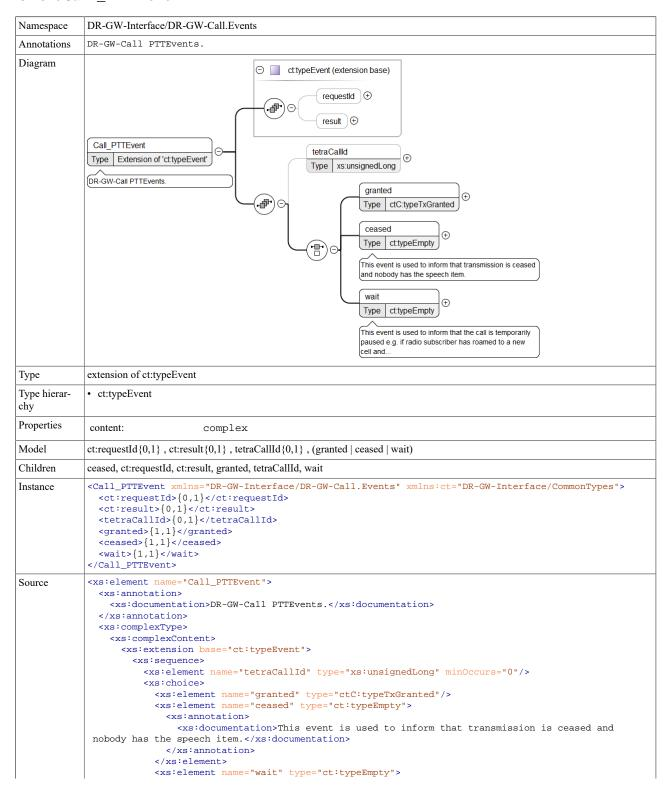

Element Call_PTTEvent / tetraCallId

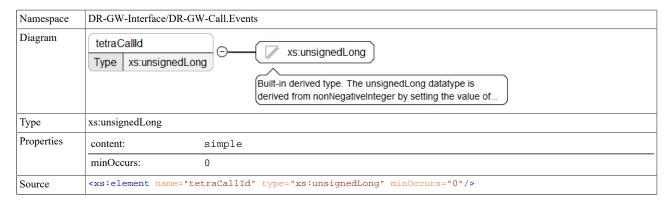


Element Call_PTTEvent / granted

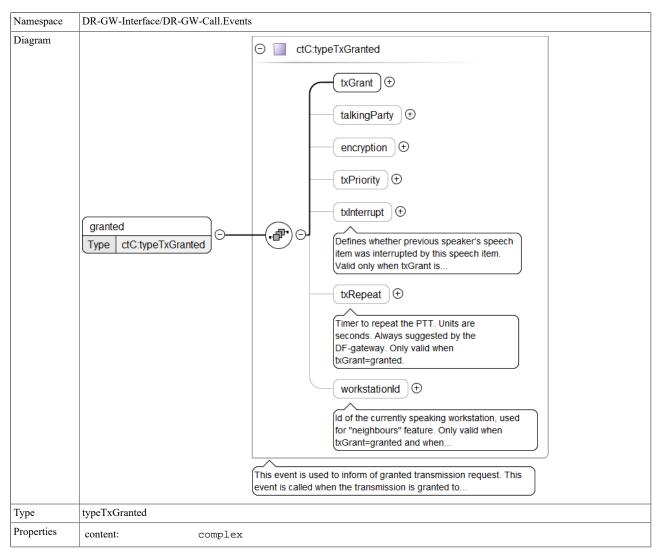


Model	$txGrant\ ,\ talkingParty\{0,1\}\ ,\ encryption\{0,1\}\ ,\ txPriority\{0,1\}\ ,\ txInterrupt\{0,1\}\ ,\ txRepeat\{0,1\}\ ,\ workstationId\{0,1\}\ ,$
Children	encryption, talkingParty, txGrant, txInterrupt, txPriority, txRepeat, workstationId
Instance	<pre><granted xmlns="DR-GW-Interface/DR-GW-Call.Events" xmlns:ctc="DR-GW-Interface/DR-GW-Call.CommonTypes"></granted></pre>
Source	<pre><xs:element name="granted" type="ctC:typeTxGranted"></xs:element></pre>

Element Call_PTTEvent / ceased

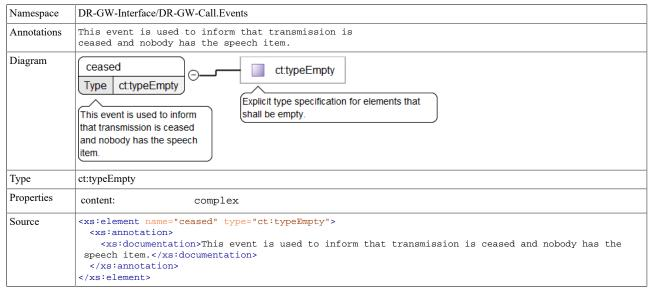


Element Call_PTTEvent / wait

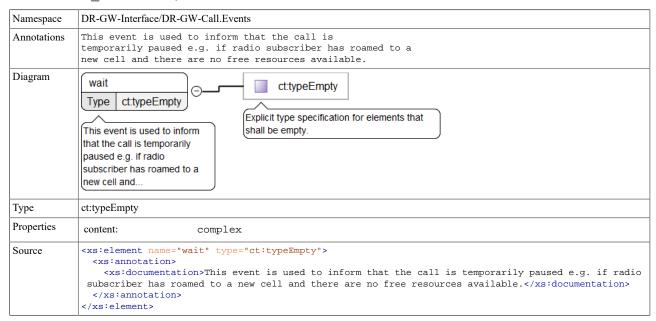


Element Call_UnitInEmergencyEvent

Namespace	DR-GW-Interface/DR-GW-Call.Events
Annotations	This event is used to inform DF-Client that a subscriber is in emergency state during an emergency group call including the ending of its emergency situation. Also queuing of emergency speech item requests is indicated using this event. Event is fired every time the TETRA system informs the Gateway that subscriber's emergency information is changed. For example,

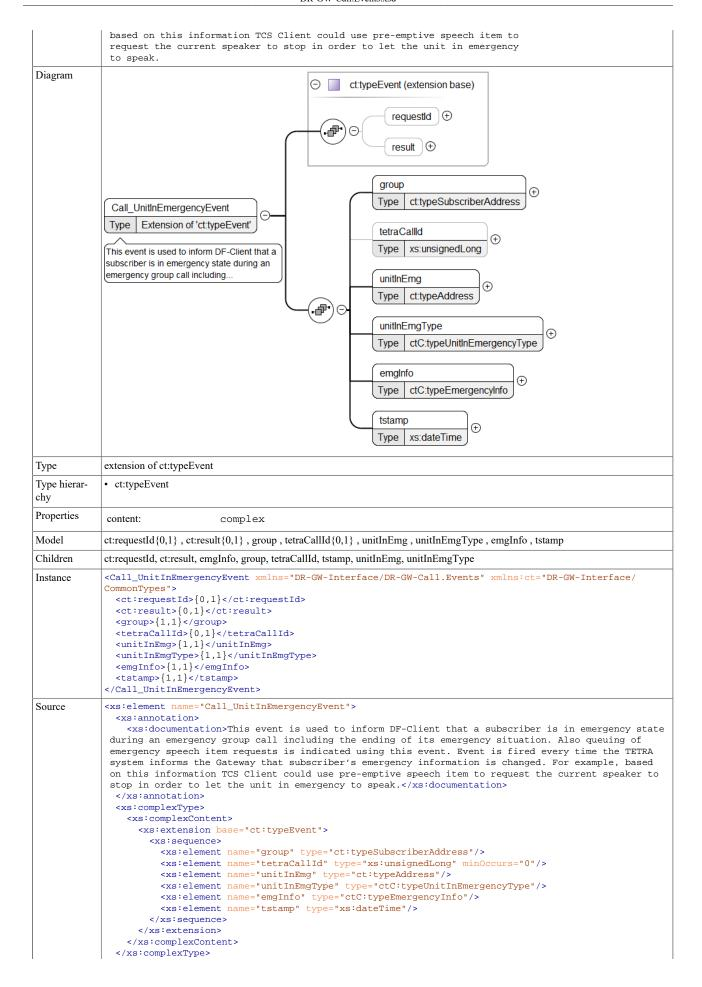


</rs:element>

Element Call_UnitInEmergencyEvent / group

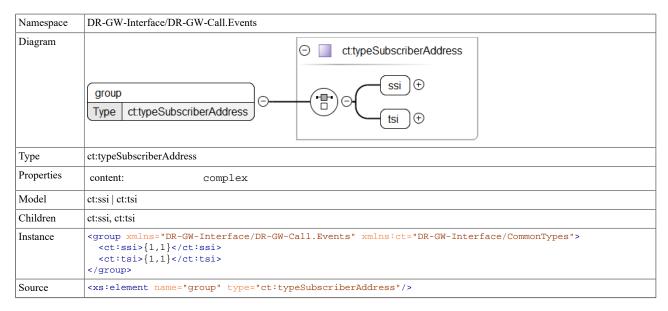


Element Call_UnitInEmergencyEvent / tetraCallId

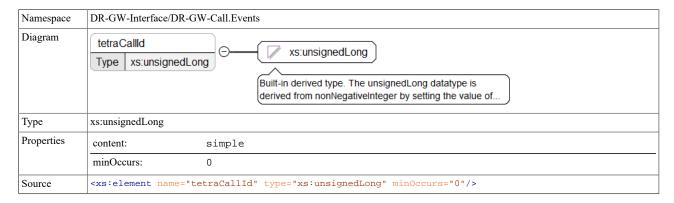


Element Call_UnitInEmergencyEvent / unitInEmg

Namespace	DR-GW-Interface/DR-GW-Call.Events	

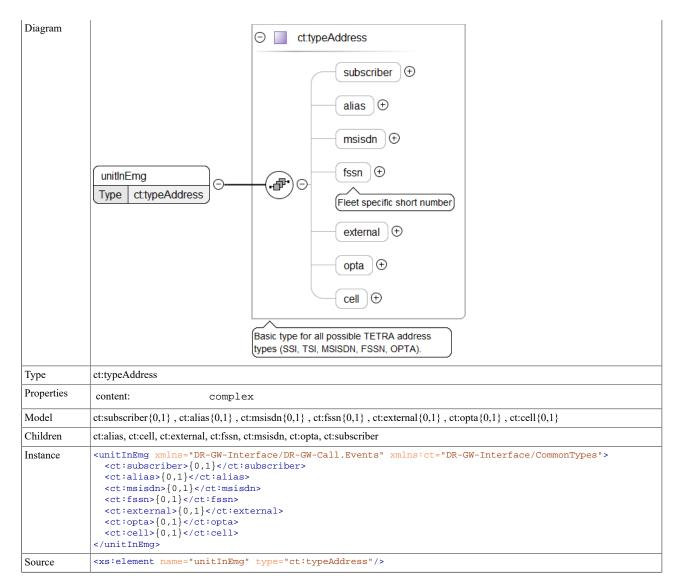


Element Call_UnitInEmergencyEvent / unitInEmgType

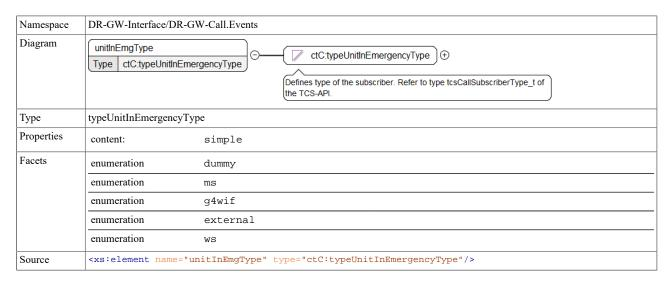


Element Call_UnitInEmergencyEvent / emgInfo


Namespace	DR-GW-Interface/DR-GW-Call.Events
-----------	-----------------------------------

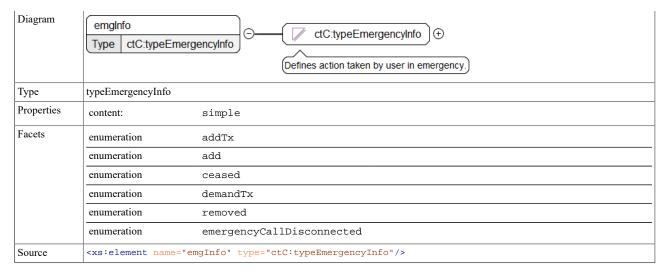

Element Call_UnitInEmergencyEvent / tstamp

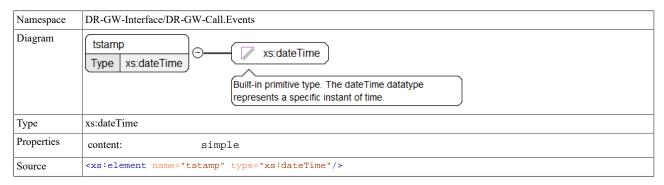

Element Call_KeyExchangeEvent

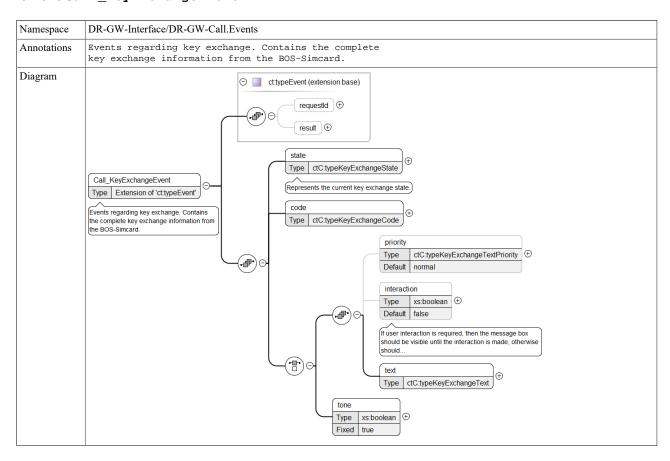

```
Type
                           extension of ct:typeEvent
Type hierar-

    ct:typeEvent

chy
Properties
                           content:
                                                                        complex
Model
                           ct:requestId \{0,1\}, ct:result \{0,1\}, state, code, ((priority \{0,1\}, interaction \{0,1\}, text) | tone)
Children
                           code, ct:requestId, ct:result, interaction, priority, state, text, tone
                           <Call_KeyExchangeEvent xmlns="DR-GW-Interface/DR-GW-Call.Events" xmlns:ct="DR-GW-Interface/DR-GW-Call.Events" xmlns:ct="DR-GW-Interface/DR-GW-Call.Events" xmlns:ct="DR-GW-Interface/DR-GW-Call.Events" xmlns:ct="DR-GW-Interface/DR-GW-Call.Events" xmlns:ct="DR-GW-Interface/DR-GW-Call.Events" xmlns:ct="DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR-GW-Interface/DR
Instance
                           CommonTypes">
                               <ct:requestId>{0,1}</ct:requestId>
                               <ct:result>{0,1}</ct:result>
                               <state>{1,1}</state>
                               <code>{1,1}</code>
                               <priority>{0,1}</priority>
                               <interaction>{0,1}</interaction>
                               <text>{1,1}</text>
                               <tone>{1,1}</tone>
                           </Call_KeyExchangeEvent>
                           <xs:element name="Call_KeyExchangeEvent">
Source
                               <xs:annotation>
                                   <xs:documentation>Events regarding key exchange. Contains the complete key exchange information
                             from the BOS-Simcard.</xs:documentation>
                               </xs:annotation>
                               <xs:complexType>
                                   <xs:complexContent>
                                        <xs:extension base="ct:typeEvent">
                                            <xs:sequence>
                                                <xs:element name="state" type="ctC:typeKeyExchangeState">
                                                    <xs:annotation>
                                                         <xs:documentation>Represents the current key exchange state.</xs:documentation>
                                                     </xs:annotation>
                                                </xs:element>
                                                <xs:element name="code" type="ctC:typeKeyExchangeCode"/>
                                                <xs:choice>
                                                     <xs:sequence>
                                                         <xs:element name="priority" type="ctC:typeKeyExchangeTextPriority" minOccurs="0"</pre>
                             default="normal"/>
                                                         <xs:element name="interaction" type="xs:boolean" minOccurs="0" default="false">
                                                              <xs:annotation>
                                                                  <xs:documentation>If user interaction is required, then the message box should be
                             visible until the interaction is made, otherwise should be hidden after delay.</xs:documentation>
                                                             </xs:annotation>
                                                         </xs:element>
                                                          <xs:element name="text" type="ctC:typeKeyExchangeText"/>
                                                     </xs:sequence>
                                                     <xs:element name="tone" type="xs:boolean" fixed="true"/>
                                                 </xs:choice>
                                            </xs:sequence>
                                        </xs:extension>
                                    </xs:complexContent>
                               </xs:complexType>
                           </xs:element>
```

Element Call_KeyExchangeEvent / state

Namespace	DR-GW-Interface/DR-GW-Call.Events			
Annotations	Represents the current key exchange state.			
Diagram	state Type ctC:typeKeyExchangeState CtC:typeKeyExchangeState Represents the current key exchange state. Represents the current key exchange state.			
Туре	typeKeyExchangeState			
Properties	content:	simple		
Facets	enumeration	keyValid	current key is valid, no user action required.	
	enumeration	keyInvalid	Key invalid, user must request key exchange.	
	enumeration	keyExchangeInProgress	Key exchange in progress, user may abort exchange or wait until it gets finished.	
Source	<pre><xs:element name="</pre></td><td>state" type="ctC:typeKeyExchar</td><td>ngeState"></xs:element></pre>			

```
<xs:annotation>
     <xs:documentation>Represents the current key exchange state.</xs:documentation>
     </xs:annotation>
     </xs:element>
```


Element Call_KeyExchangeEvent / code

Namespace	DR-GW-Interface/DR-GW-Call.Events
Diagram	code Type ctC:typeKeyExchangeCode See "Table 5.3: Status words of the commands" of the E-to-E Encryption SIM-ME Interface (Version 4.0.5) for all
Туре	typeKeyExchangeCode
Properties	content: simple
Facets	length 2
Source	<pre><xs:element name="code" type="ctC:typeKeyExchangeCode"></xs:element></pre>

Element Call_KeyExchangeEvent / priority

Namespace	DR-GW-Interface/DR-GW-Call.Events			
Diagram	priority			
	Type ctC:typeKe	yExchangeTextPriority		
	Default normal	Defines the priority of the KeyExchange information.		
Туре	typeKeyExchangeTextPriority			
Properties	content:	simple		
	minOccurs:	0		
	default:	normal		
Facets	enumeration	normal		
	enumeration	high		
Source	<pre></pre>			

Element Call_KeyExchangeEvent / interaction

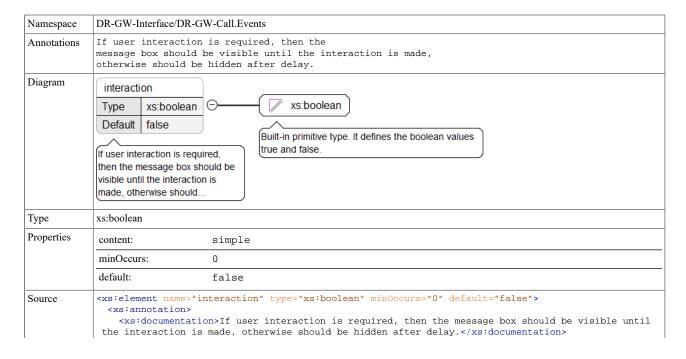


</xs:annotation>
</xs:element>

Element Call_KeyExchangeEvent / text

Namespace	DR-GW-Interface	/DR-GW-Call.Events
Diagram	text Type ctC:typek	ctC:typeKeyExchangeText The textual information supplied by the BOS-simcard and sent from the DF-Gateway to the DF-client.
Туре	typeKeyExchange	Text
Properties	content:	simple
Facets	maxLength	100
Source	<xs:element na<="" td=""><td>me="text" type="ctC:typeKeyExchangeText"/></td></xs:element>	me="text" type="ctC:typeKeyExchangeText"/>

Element Call_KeyExchangeEvent / tone

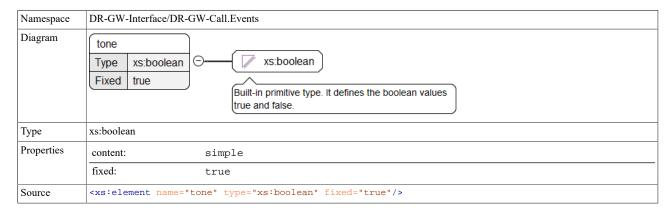

Namespace: "DR-GW-Interface/CommonTypes"


Schema(s)

Imported schema CommonTypes.xsd


Namespace	DR-GW-Interface/CommonTypes		
Annotations	Version 1.1.1		
Properties	attribute form default: unqualified		
	element form default: qualified		

Element(s)

Element ct:typeResponse / ct:requestId

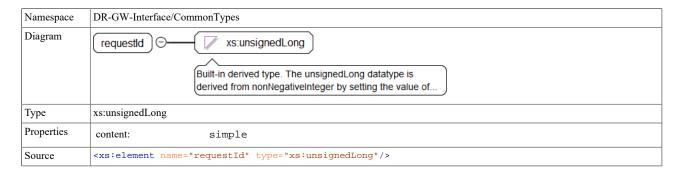

Element ct:typeResponse / ct:result

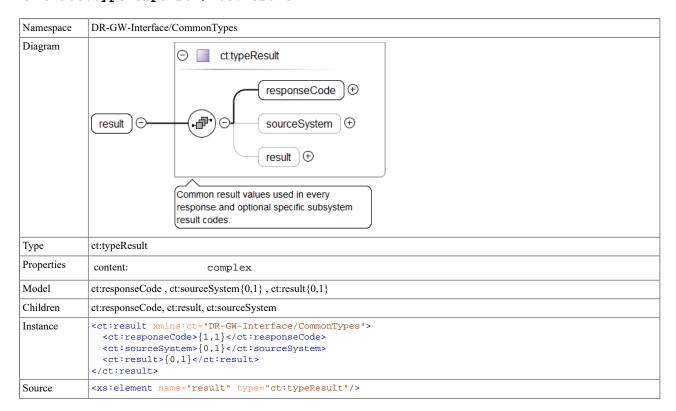

Element ct:typeResult / ct:responseCode

Namespace	DR-GW-Interface/CommonTypes		
Diagram	responseCode		
Туре	ct:typeResponseCode		
Properties	content:	simple	
Facets	enumeration	success	
	enumeration	final_response_pending	
	enumeration	error	
	enumeration	not_authorized_error	
	enumeration	temporary_failure	
	enumeration	subscription_failed	
Source	<pre><xs:element name="responseCode" type="ct:typeResponseCode"></xs:element></pre>		

Element ct:typeResult / ct:sourceSystem

Namespace	DR-GW-Interface/CommonTypes		
Diagram	sourceSystem 🗇 🥒 ct:typeSourceSystem 🕀		
Туре	ct:typeSourceSystem		
Properties	content:	simple	
	minOccurs:	0	
Facets	enumeration	DR-GW	
	enumeration	TCS-API	
	enumeration	TETRA	
Source	<pre><xs:element nam<="" pre=""></xs:element></pre>	e="sourceSystem" type="ct:typeSourceSystem" minOccurs="0"/>	


Element ct:typeResult / ct:result

Namespace	DR-GW-Interface/CommonTypes		
Diagram		xs:unsignedLong Built-in derived type. The unsignedLong datatype is derived from nonNegativeInteger by setting the value of	
Туре	xs:unsignedLong		
Properties	content:	simple	
	minOccurs:	0	
Source	<pre><xs:element name<="" pre=""></xs:element></pre>	e="result" type="xs:unsignedLong" minOccurs="0"/>	

Element ct:typeEvent / ct:requestId


Namespace	DR-GW-Interface/CommonTypes
Diagram	requestId
Туре	xs:unsignedLong
Properties	content: simple
	minOccurs: 0
Source	<pre><xs:element minoccurs="0" name="requestId" type="xs:unsignedLong"></xs:element></pre>

Element ct:typeEvent / ct:result

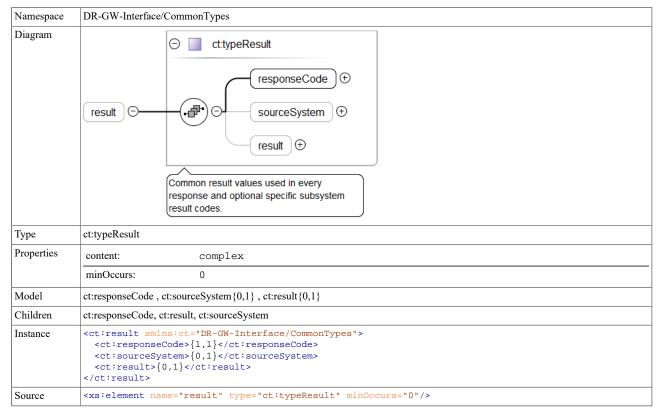


Element ct:typeAddress / ct:subscriber


Namespace	DR-GW-Interface/CommonTypes	
-----------	-----------------------------	--

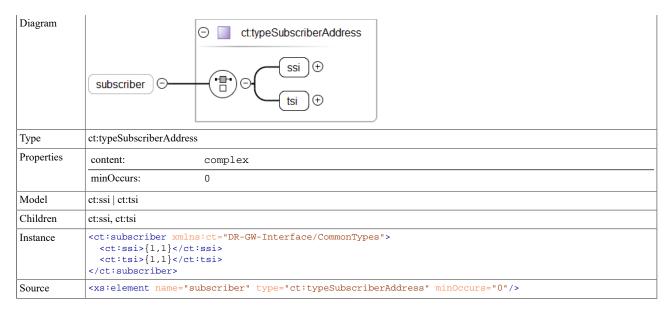


Element ct:typeSubscriberAddress / ct:ssi

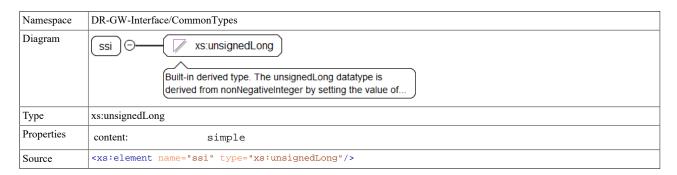

Element ct:typeSubscriberAddress / ct:tsi

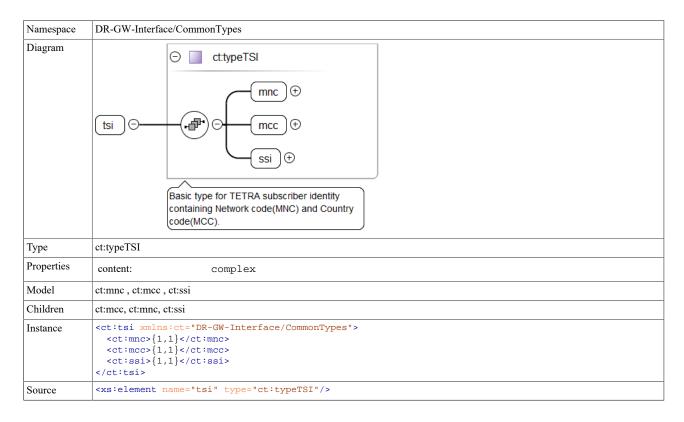


Element ct:typeTSI / ct:mnc

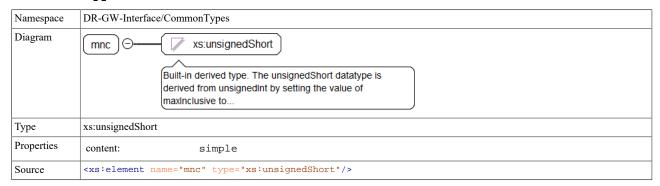


Element ct:typeTSI / ct:mcc

Namespace	DR-GW-Interface/CommonTypes		
Diagram	Built-in derived type. The unsignedShort datatype is derived from unsignedInt by setting the value of maxInclusive to		
Туре	xs:unsignedShort		
Properties	content: simple		
Source	<pre><xs:element name="mcc" type="xs:unsignedShort"></xs:element></pre>		


Element ct:typeTSI / ct:ssi

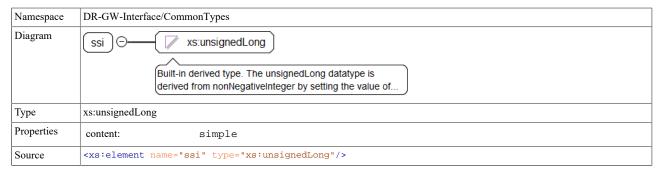

Element ct:typeAddress / ct:alias

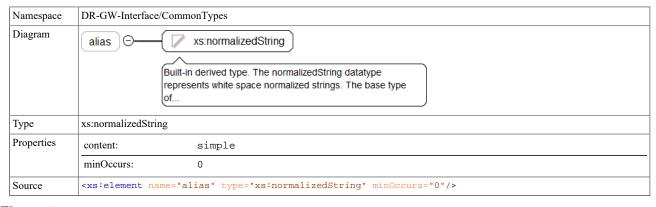

Element ct:typeAddress / ct:msisdn




Type	ct:typeDialString	
Properties	content:	simple
	minOccurs:	0
Facets	maxLength	24
Source	<pre><xs:element minoccurs="0" name="msisdn" type="ct:typeDialString"></xs:element></pre>	


Element ct:typeAddress / ct:fssn

Namespace	DR-GW-Interface/CommonTypes		
Annotations	Fleet specific short number		
Diagram	fssn		
Туре	xs:unsignedLong		
Properties	content: simple		
	minOccurs: 0		
Source	<pre><xs:element minoccurs="0" name="fssn" type="xs:unsignedLong"></xs:element></pre>		

Element ct:typeAddress / ct:external

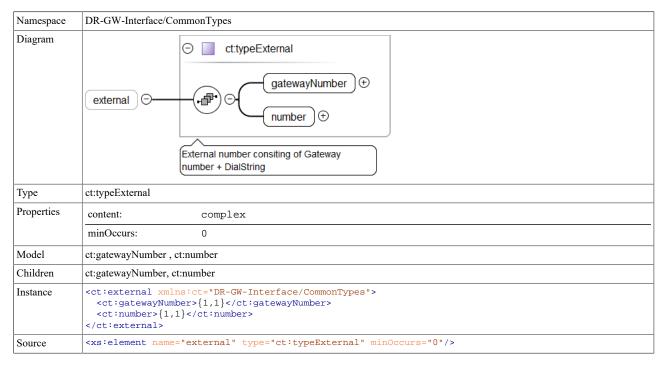

Element ct:typeExternal / ct:gatewayNumber

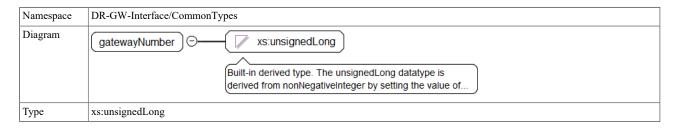

Properties	content:	simple	
Source	<pre><xs:element na<="" pre=""></xs:element></pre>	me="gatewayNumber"	type="xs:unsignedLong"/>


Element ct:typeExternal / ct:number

Namespace	DR-GW-Interface/CommonTypes	
Diagram	number Ct:typeDialString Allowed characters are digits 0 - 9, *, #, A, B, C and D. Maximum length is 24 characters.	
Туре	ct:typeDialString	
Properties	content: simple	
Facets	maxLength 24	
Source	<pre><xs:element name="number" type="ct:typeDialString"></xs:element></pre>	


Element ct:typeAddress / ct:opta

Namespace	DR-GW-Interface/CommonTypes	
Diagram	opta O ct:typeOPTA + OPTA string. Maximum length is 24 characters.	
Туре	ct:typeOPTA	
Properties	content: simple	
	minOccurs: 0	
Facets	maxLength 24	
Source	<pre><xs:element minoccurs="0" name="opta" type="ct:typeOPTA"></xs:element></pre>	

Element ct:typeAddress / ct:cell

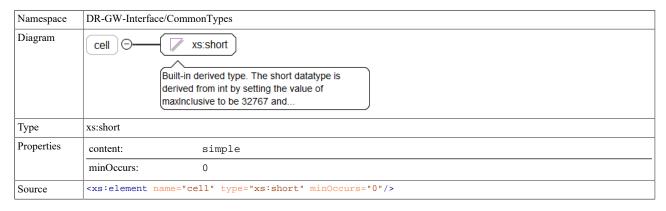


Element ct:typeRequest / ct:requestId

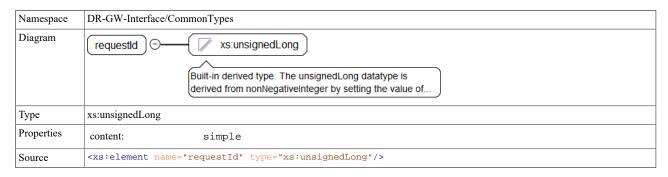


Complex Type(s)

Complex Type ct:typeResponse

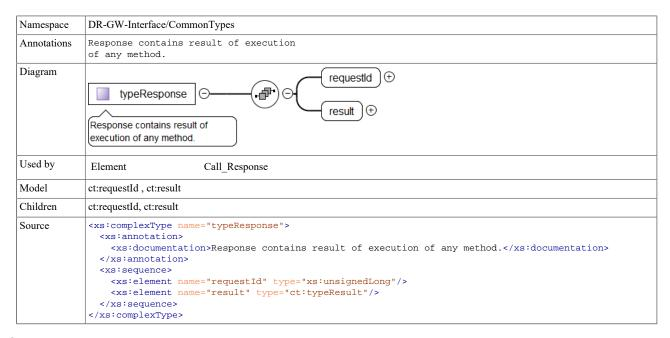

Complex Type ct:typeResult

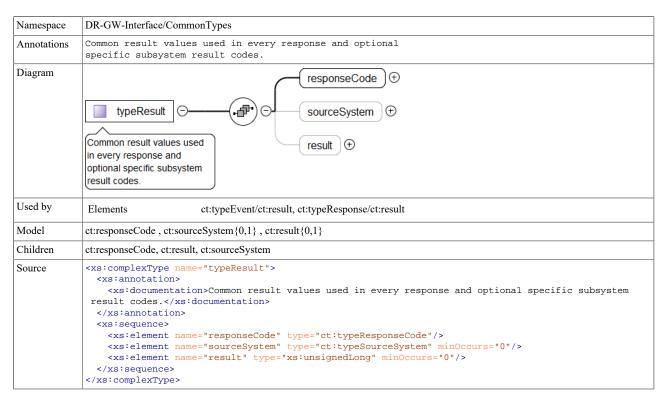


Complex Type ct:typeEvent




Used by	Elements Call_Event, Call_KeyExchangeEvent, Call_PTTEvent, Call_SelectEvent, Call_UnitInEmergencyEvent		
Model	ct:requestId $\{0,1\}$, ct:result $\{0,1\}$		
Children	ct:requestId, ct:result		
Source	<pre><xs:complextype name="typeEvent"> <xs:sequence></xs:sequence></xs:complextype></pre>		

Complex Type ct:typeAddress

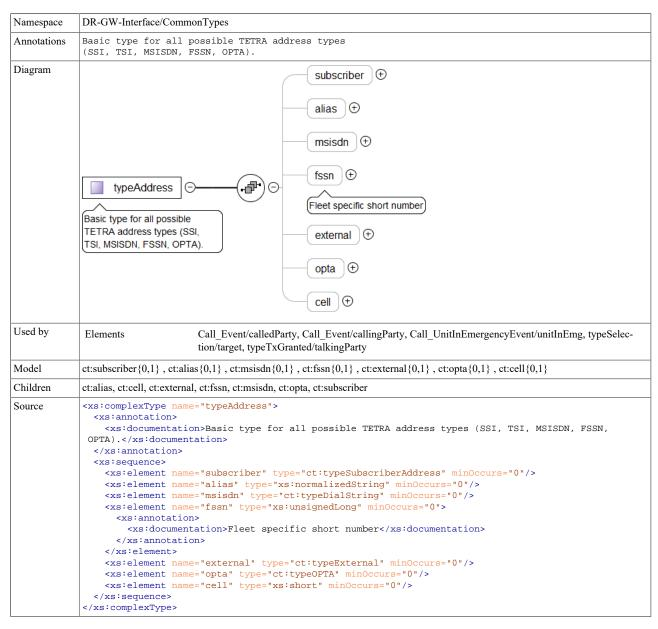


Complex Type ct:typeSubscriberAddress

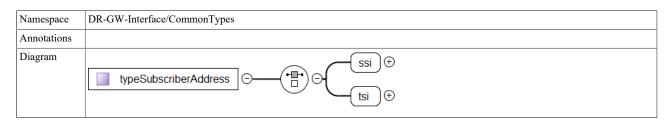


Used by	Elements Call_UnitInEmergencyEvent/group, ct:typeAddress/ct:subscriber	
Model	ct:ssi ct:tsi	
Children	ct:ssi, ct:tsi	
Source	<pre> <pre> <xs:complextype name="typeSubscriberAddress"></xs:complextype></pre></pre>	

Complex Type ct:typeTSI

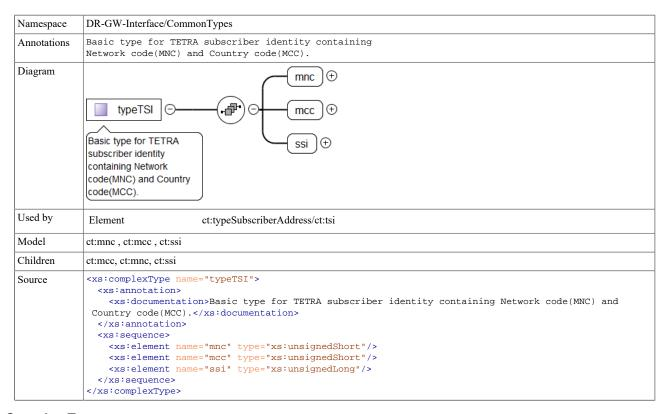

Complex Type ct:typeExternal

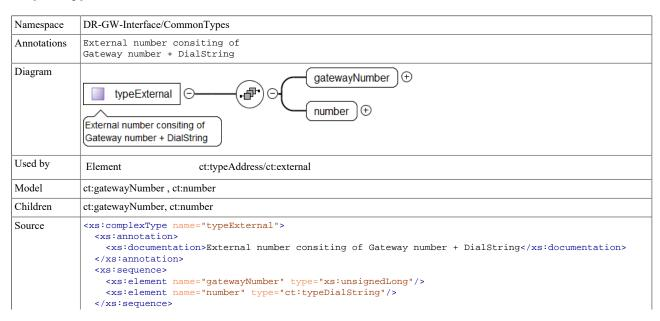


</xs:complexType>

Complex Type ct:typeEmpty


Namespace	DR-GW-Interface/CommonTypes		
Annotations	Explicit type specification for elements that shall be empty.		
Diagram	typeEmpty Explicit type specification for elements that shall be empty.		
Used by	Elements Call_PTTEvent/ceased, Call_PTTEvent/wait		
Source	<pre><xs:complextype name="typeEmpty"> <xs:annotation> <xs:documentation>Explicit type specification for elements that shall be empty.<!-- xs:documentation--> </xs:documentation></xs:annotation> </xs:complextype></pre>		

Complex Type ct:typeRequest

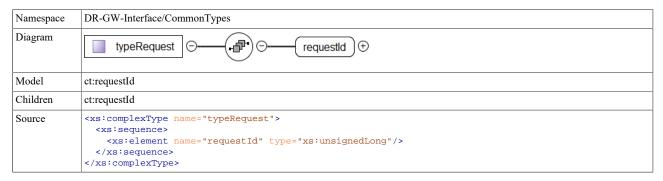


Simple Type(s)


Simple Type ct:typeResponseCode

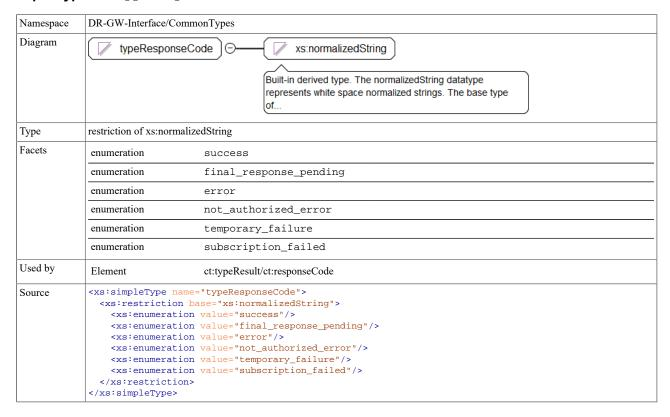


Simple Type ct:typeSourceSystem

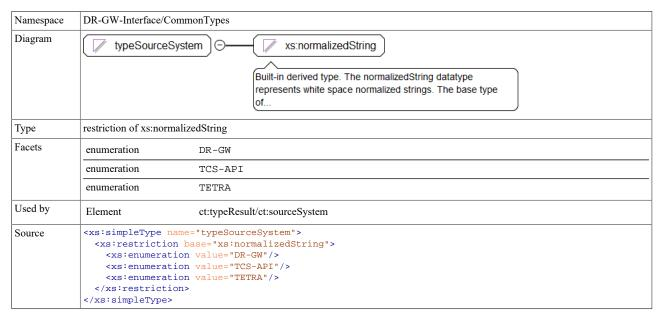

Simple Type ct:typeDialString

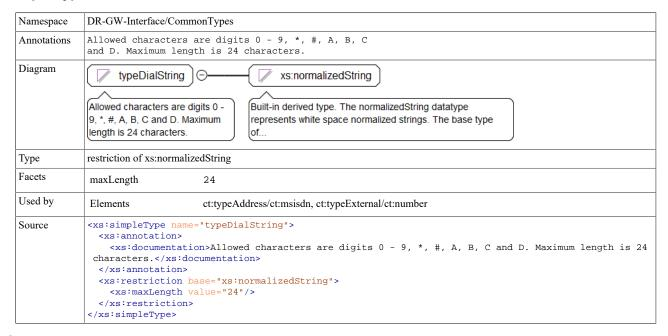

Simple Type ct:typeOPTA

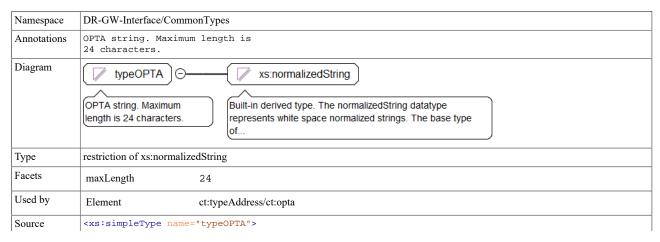

Simple Type ct:typeAddressingStyle

Namespace	DR-GW-Interface/CommonTypes		
Annotations	Describes the IP addressing style. Unicast or multicast.		
Diagram	Describes the IP addressing style. Unicast or multicast. Built-in derived type. The normalizedString datatype represents white space normalized strings. The base type of		
Туре	restriction of xs:normalizedString		
Facets	enumeration ucast		
	enumeration mcast		
Source	<pre><xs:simpletype name="typeAddressingStyle"></xs:simpletype></pre>		

Namespace: "DR-GW-Interface/DR-GW-Call.CommonTypes"


Schema(s)

Imported schema DR-GW-Call.CommonTypes.xsd


Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes		
Annotations	Version 1.1.1		
Properties	attribute form default: unqualified		
	element form default: qualified		

Element(s)


Element typeSelection / level

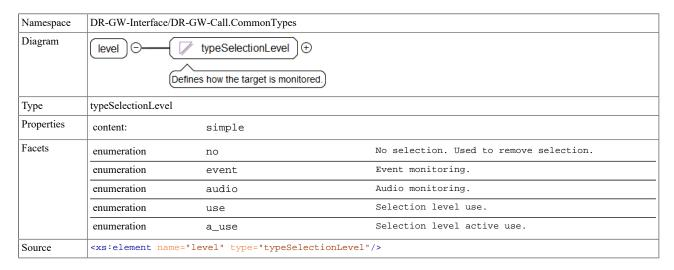


Element typeSelection / target

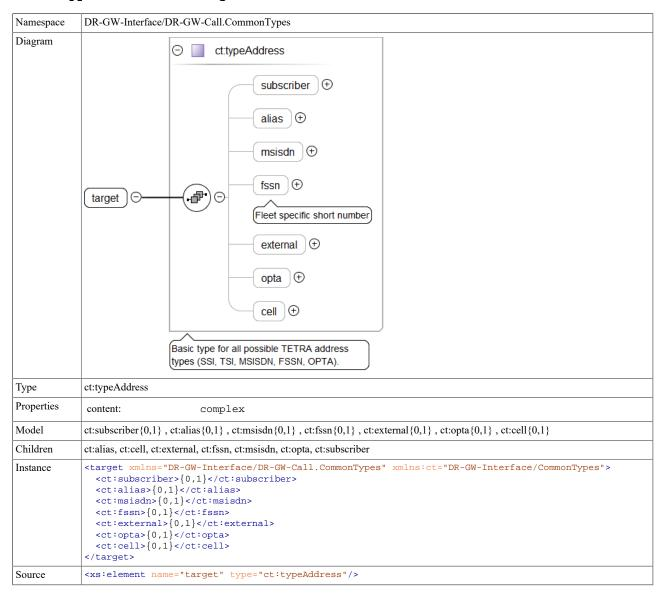

Element typeCallAttributes / hook

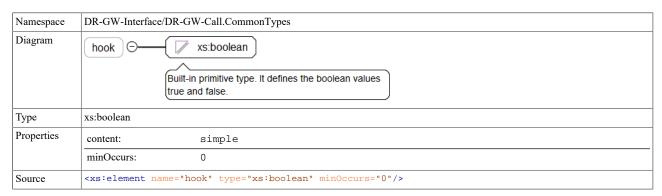

Element typeCallAttributes / mode



Type	typeCallMode	
Properties	content:	simple
	minOccurs:	0
Facets	enumeration	simplex
	enumeration	duplex
Source	<pre><xs:element minoccurs="0" name="mode" type="typeCallMode"></xs:element></pre>	

Element typeCallAttributes / commtype

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes	
Diagram	commtype 🗇	typeCallType Call type attribute. Choices are Point2Point, Point2MultiPoint or Broadcast.
Туре	typeCallType	
Properties	content:	simple
	minOccurs:	0
Facets	enumeration	p2p
	enumeration	p2mp
	enumeration	bcast
Source	<pre><xs:element name<="" pre=""></xs:element></pre>	="commtype" type="typeCallType" minOccurs="0"/>

$\textbf{Element} \; \texttt{typeCallAttributes} \; \; / \; \; \texttt{priority}$

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes	
Diagram	priority	
Туре	xs:unsignedByte	
Properties	content: simple	
	minOccurs: 0	
	default: 1	
Source	<pre><xs:element default="1" minoccurs="0" name="priority" type="xs:unsignedByte"></xs:element></pre>	

Element typeCallAttributes / encryption

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes	
Diagram	encryption	
Type	xs:boolean	
Properties	content:	simple
	minOccurs:	0
	default:	true
Source	<pre><xs:element default="true" minoccurs="0" name="encryption" type="xs:boolean"></xs:element></pre>	

Element typeCallAttributes / ambienceListen


Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes
-----------	--

Diagram	ambienceListen	Built-in primitive type. It defines the boolean values true and false.	
Туре	xs:boolean		
Properties	content:	simple	
	minOccurs:	0	
	default:	0	
Source	<pre><xs:element default="0" minoccurs="0" name="ambienceListen" type="xs:boolean"></xs:element></pre>		


Element typeCallAttributes / req2speak

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes	
Diagram	req2speak O-	Built-in primitive type. It defines the boolean values true and false.
Туре	xs:boolean	
Properties	content:	simple
	minOccurs:	0
	default:	1
Source	<pre><xs:element default="1" minoccurs="0" name="req2speak" type="xs:boolean"></xs:element></pre>	

Element typeCallAttributes / demandPriority

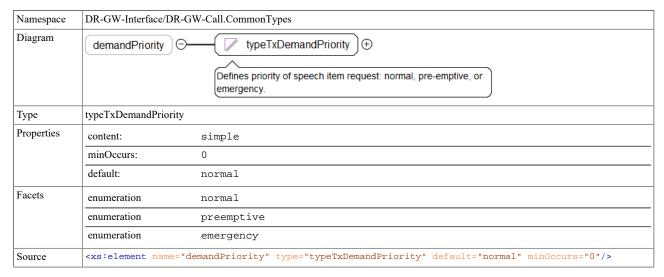


Element typeDisconnectCause / protocol

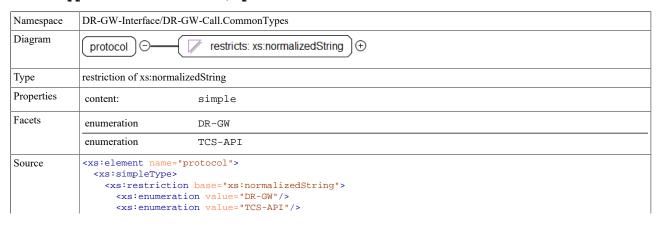


```
</xs:restriction>
</xs:simpleType>
</xs:element>
```

Element typeDisconnectCause / code

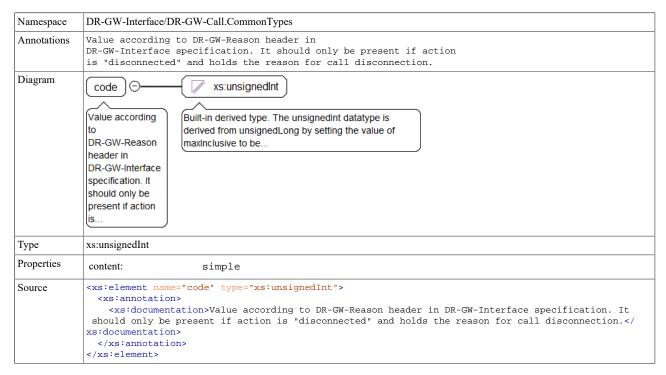

Element typeDisconnectCause / text

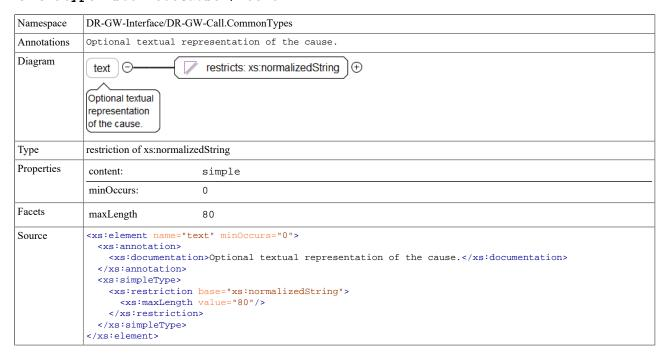


Element typeTxGranted / txGrant




Properties	content:	simple
Facets	enumeration	granted
	enumeration	notGranted
	enumeration	queued
	enumeration	granted2another
Source	<pre><xs:element name="txGrant" type="typeTxGrant"></xs:element></pre>	

Element typeTxGranted / talkingParty

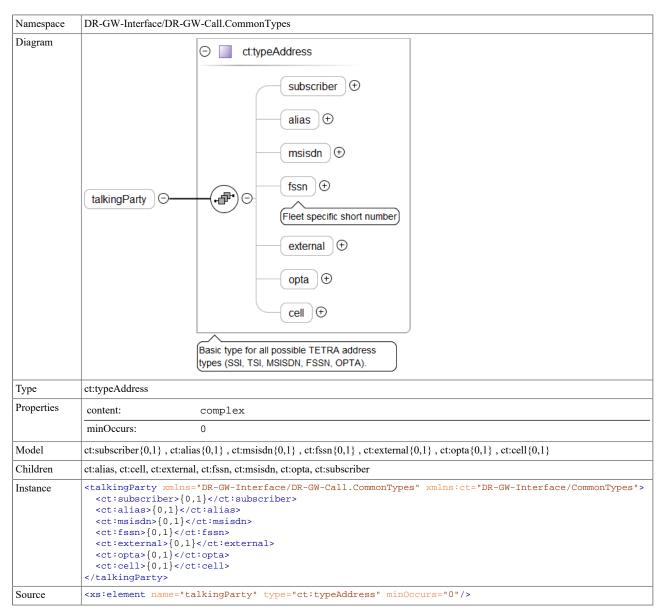

Element typeTxGranted / encryption

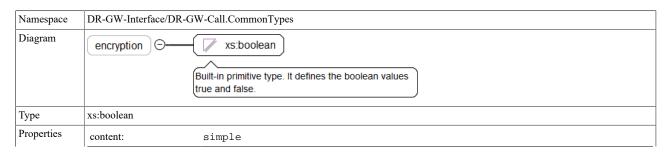

	minOccurs:	0
	default:	true
Source	<pre><xs:element default="true" minoccurs="0" name="en</pre></th><th>ncryption" type="xs:boolean"></xs:element></pre>	


Element typeTxGranted / txPriority

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes		
Diagram		typeTxPriority ⊕	
Defines the priority of the transmission.		Defines the priority of the transmission.	
Туре	typeTxPriority		
Properties	content:	simple	
	minOccurs:	0	
	default:	normal	
Facets	enumeration	normal	
	enumeration	emergency	
Source	<pre><xs:element default="normal" minoccurs="0" name="txPriority" type="typeTxPriority"></xs:element></pre>		

Element typeTxGranted / txInterrupt

Namespace	DR-GW-Interface/DR-G	DR-GW-Interface/DR-GW-Call.CommonTypes		
Annotations	Defines whether previous speaker's speech item was interrupted by this speech item. Valid only when txGrant is granted2another.			
Diagram	Defines whether previous speaker's speech item was interrupted by this speech item. Valid only when txGrant is Defines whether primitive type. It defines the boolean values true and false.			
Туре	xs:boolean			
Properties	content:	simple		
	minOccurs:	0		
	default:	false		
Source	<pre><xs:element default="false" minoccurs="0" name="txInterrupt" type="xs:boolean"></xs:element></pre>			

Element typeTxGranted / txRepeat

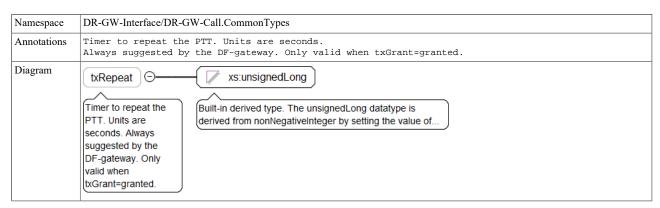


Type	xs:unsignedLong		
Properties content: simple		simple	
	minOccurs:	0	
	default:	0	
Source	<pre><xs:element default="0" minoccurs="0" name="txRepeat" type="xs:unsignedLong"> <xs:annotation></xs:annotation></xs:element></pre>		

Element typeTxGranted / workstationId

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes		
Annotations	Id of the currently speaking workstation, used for "neighbours" feature. Only valid when txGrant=granted and when supplied by the DF-client in PTT request.		
Diagram	workstationId		
Туре	xs:normalizedString		
Properties	content: simple		
	minOccurs: 0		
Source	<pre><xs:element minoccurs="0" name="workstationId" type="xs:normalizedString"></xs:element></pre>		

Complex Type(s)

Complex Type typeSelection

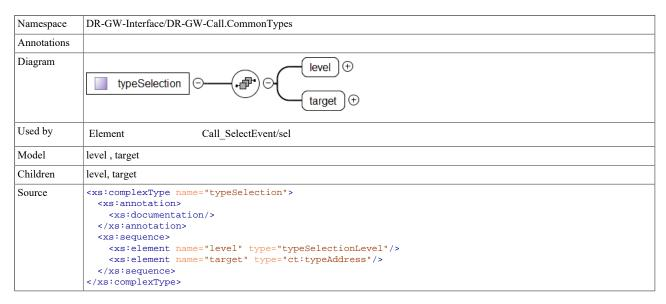


Complex Type typeCallAttributes

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes
-----------	--




Complex Type typeDisconnectCause

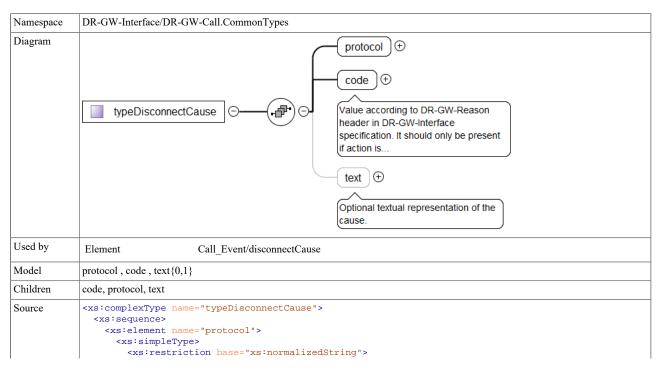

```
<xs:enumeration value="DR-GW"/>
          <xs:enumeration value="TCS-API"/>
        </xs:restriction>
      </xs:simpleType>
    </xs:element>
    <xs:element name="code" type="xs:unsignedInt">
      <xs:annotation>
        <xs:documentation>Value according to DR-GW-Reason header in DR-GW-Interface specification.
It should only be present if action is "disconnected" and holds the reason for call
disconnection.</xs:documentation>
      </xs:annotation>
    </xs:element>
   <xs:element name="text" minOccurs="0">
     <xs:annotation>
        <xs:documentation>Optional textual representation of the cause.</xs:documentation>
      <xs:simpleType>
        <xs:restriction base="xs:normalizedString">
          <xs:maxLength value="80"/>
        </xs:restriction>
     </xs:simpleType>
    </xs:element>
 </xs:sequence>
</xs:complexType>
```

Complex Type typeTxGranted

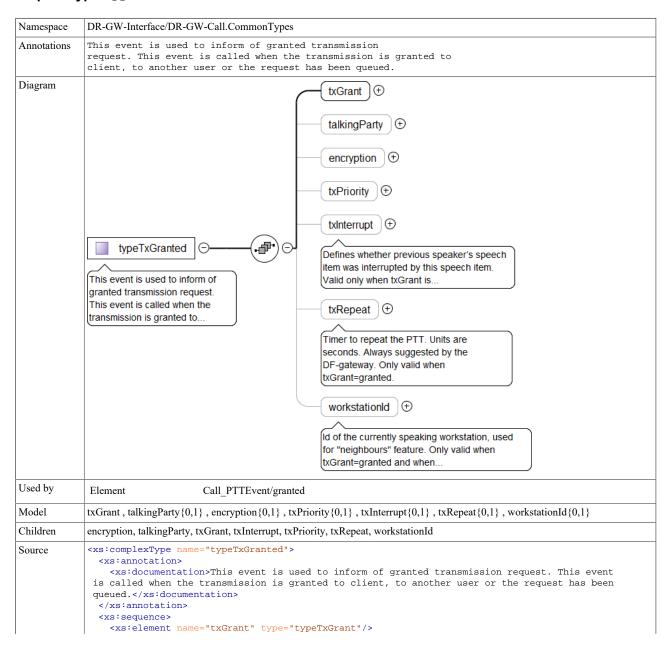

```
<xs:element name="talkingParty" type="ct:typeAddress" minOccurs="0"/>
    <xs:element name="encryption" type="xs:boolean" default="true" minOccurs="0"/>
<xs:element name="txPriority" type="typeTxPriority" minOccurs="0" default="normal"/>
    <xs:element name="txInterrupt" type="xs:boolean" default="false" minOccurs="0">
        <xs:documentation>Defines whether previous speaker's speech item was interrupted by this
speech item. Valid only when txGrant is granted2another.</xs:documentation>
      </xs:annotation>
    </xs:element>
    <xs:element name="txRepeat" type="xs:unsignedLong" minOccurs="0" default="0">
        \verb| <xs: documentation>Timer to repeat the PTT. Units are seconds. Always suggested by the DF-\\
gateway. Only valid when txGrant=granted.</xs:documentation>
    </xs:element>
    <xs:element name="workstationId" type="xs:normalizedString" minOccurs="0">
        <xs:documentation>Id of the currently speaking workstation, used for "neighbours"
feature. Only valid when txGrant=granted and when supplied by the DF-client in PTT request.</
xs:documentation>
      </xs:annotation>
    </xs:element>
 </xs:sequence>
</xs:complexType>
```

Simple Type(s)

Simple Type typeSelectionLevel


Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes			
Annotations	Defines how the target is monitored.			
Diagram	Defines how the target is monitored. Built-in derived type. The normalizedString datatype represents white space normalized strings. The base type of			
Туре	restriction of xs:nor	malizedString		
Facets	enumeration	no	No selection. Used to remove selection.	
	enumeration	event	Event monitoring.	
	enumeration	audio	Audio monitoring.	
	enumeration	use	Selection level use.	
	enumeration	a_use	Selection level active use.	
Used by	Element	typeSelection/le	evel	
Source	_			

```
</xs:annotation>
</xs:enumeration>
</xs:restriction>
</xs:simpleType>
```


Simple Type typeActionEvent

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes			
Annotations	V-			
Diagram	typeActionE	event) - x	s:normalizedString	
	All possible call action		erived type. The normalizedString datatype atts white space normalized strings. The base type	
Type	restriction of xs:norm	malizedString		
Facets	enumeration	incoming	This event fired when there is an incoming call. This is the first indication of a new incoming call.	
	enumeration	connected	This event is used to inform that call has been connected and call setup is finished.	
	enumeration	held	This event is used to inform TCS Client that individual call was put to hold.	
	enumeration	resumed	This event is used to inform that individual call has been taken from hold.	
	enumeration	disconnected	This event is used to inform that the call was disconnected.	
	enumeration	transferred	This event is a response to transfer method call and indicates the result of the request.	
Used by	Element	Call_Event/action		
	was disconnected. enumeration transferred This event is a response to transfer method call and indicates the result of the request.			


Simple Type typeCallMode

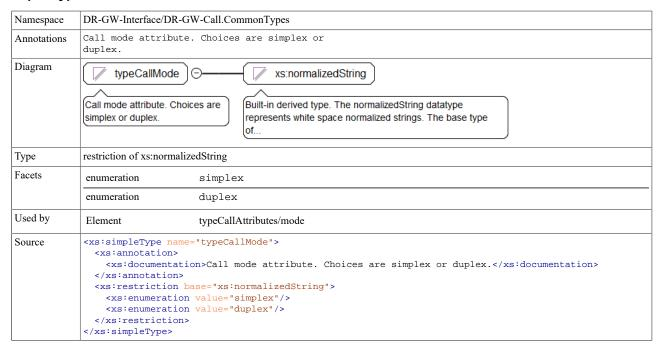

Simple Type typeCallType

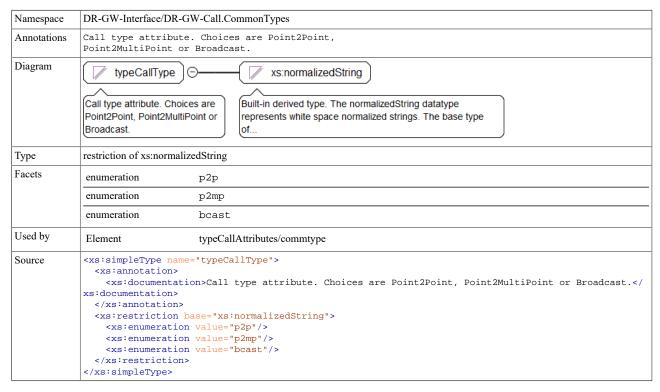


Simple Type typeTxDemandPriority

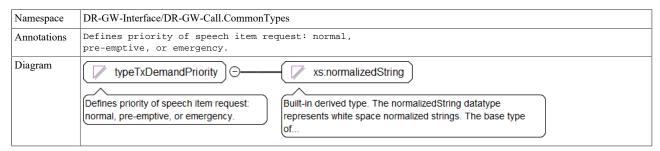


Type	restriction of xs:normalizedString	
Facets	enumeration	normal
	enumeration	preemptive
	enumeration	emergency
Used by	by Element typeCallAttributes/demandPriority	
Source	<pre>Element typeCallAttributes/demandPriority <xs:simpletype name="typeTxDemandPriority"></xs:simpletype></pre>	

Simple Type typeTxGrant

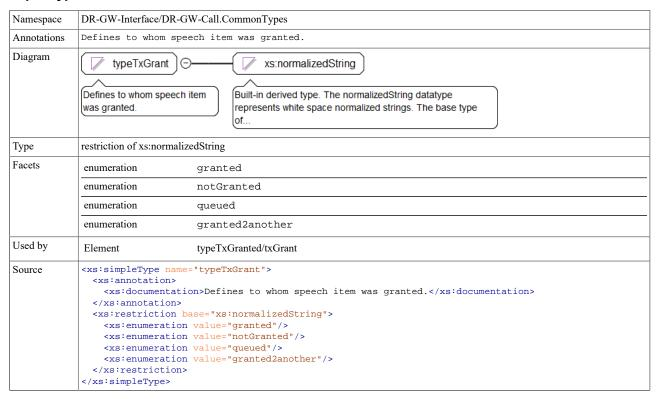

Simple Type typeTxPriority

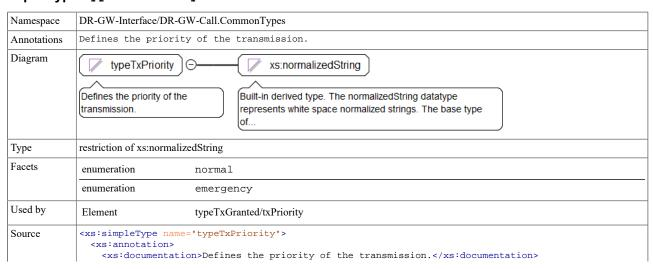


```
</mathrel="">
</mathrel="
```

Simple Type typeUnitInEmergencyType

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes		
Annotations	Defines type of the subscriber. Refer to type tcsCallSubscriberType_t of the TCS-API.		
Diagram	Defines type of the substrsCallSubscriberType_t	criber. Refer to type Built-in derived type. The normalizedString datatype	
Туре	restriction of xs:normal	izedString	
Facets	enumeration	dummy	
	enumeration	ms	
	enumeration	g4wif	
	enumeration	external	
	enumeration	ws	
Used by	Element Call_UnitInEmergencyEvent/unitInEmgType		
Source	<pre><xs:simpletype name="typeUnitInEmergencyType"></xs:simpletype></pre>		

Simple Type typeEmergencyInfo

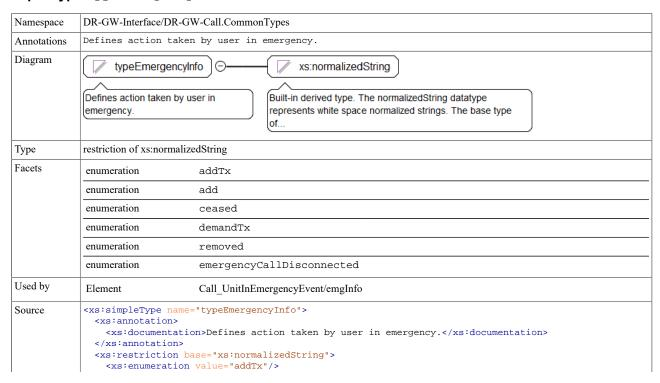

Simple Type typeKeyExchangeState

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes				
Annotations	Represents current key state.				
Diagram	typeKeyExchangeState				
Туре	restriction of xs:nor	malizedString			
Facets	enumeration	keyValid	current key is valid, no user action required.		
	enumeration	keyInvalid	Key invalid, user must request key exchange.		
	enumeration	keyExchangeInProgress	Key exchange in progress, user may abort exchange or wait until it gets finished.		
Used by	Element	Call_KeyExchangeEvent/state			
Source	Element Call_KeyExchangeEvent/state <pre> <xs:simpletype name="typeKeyExchangeState"></xs:simpletype></pre>				


Simple Type typeKeyExchangeCode

Namespace	DR-GW-Interfac	DR-GW-Interface/DR-GW-Call.CommonTypes	
Annotations	See "Table 5.3: Status words of the commands" of the E-to-E Encryption SIM-ME Interface (Version 4.0.5) for all possible code values.		
Diagram	See "Table 5.3: Status words of the commands" of the E-to-E Encryption SIM-ME Interface (Version 4.0.5) for all Simulation of the E-to-E Encryption (Version 4.0.5) for all		
Туре	restriction of xs:hexBinary		
Facets	length	2	
Used by	Element	Call_KeyExchangeEvent/code	
Source	<pre><xs:simpletype name="typeKeyExchangeCode"> <xs:annotation> <xs:documentation>See "Table 5.3: Status words of the commands" of the E-to-E Encryption SIM-ME Interface (Version 4.0.5) for all possible code values.</xs:documentation></xs:annotation></xs:simpletype></pre>		


Simple Type typeKeyExchangeTextPriority

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes				
Annotations	Defines the priority of the KeyExchange information.				
Diagram	typeKeyExchangeTextPriority				
Туре	restriction of xs:normalizedString				
Facets	enumeration	normal			
	enumeration	high			
Used by	Element	Call_KeyExchangeEvent/priority			
Source	<pre><xs:simpletype name="typeKeyExchangeTextPriority"></xs:simpletype></pre>				

Simple Type typeKeyExchangeText

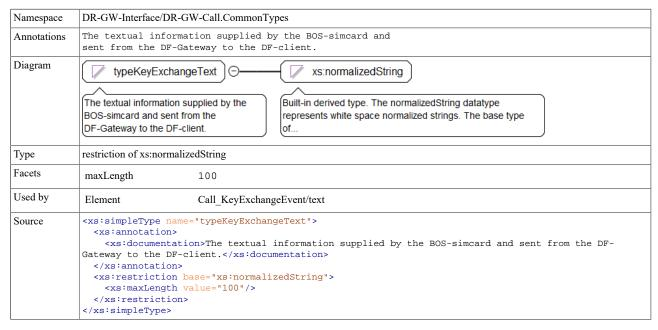

Simple Type typeActionPTTRequest

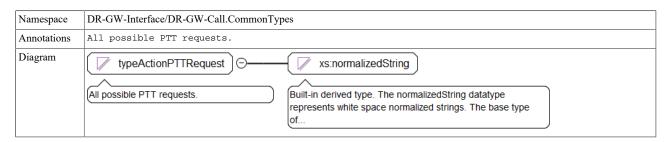


Type	restriction of xs:normalizedString				
Facets	enumeration	demandtx	This method can be used to request a speech item for a connected call.		
	enumeration	ceasetx	This method is used to inform the system that the speech item is not needed any more.		
Source	<pre><xs:simpletype name="typeActionPTTRequest"></xs:simpletype></pre>				

Simple Type typeActionRequest


Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes				
Annotations	All possible call actions.				
Diagram	TypeActionRequest				
Туре	restriction of xs:normalizedString				
Facets	enumeration	setup	This method is used to initiate a new call setup. For a call setup to be successful it is required that the resources have been reserved prior this method call.		
	enumeration	connect	This method is used to connect an incoming call.		
	enumeration	hold	This method requests to put an individual call to hold.		
	enumeration	unhold	This method is a request for resuming an individual call from hold.		
	enumeration	disconnect	This method is used to disconnect a call.		
	enumeration	transfer	This method is used to transfer an individual call to a new recipient.		
	enumeration	releasecall	This method is used to release radio subscriber's individual call.		
Source	<pre><xs:simpletype name="typeActionRequest"></xs:simpletype></pre>				

```
<xs:documentation>This method requests to put an individual call to hold.</xs:documentation>
    </xs:enumeration>
   <xs:enumeration value="unhold">
     <xs:annotation>
       <xs:documentation>This method is a request for resuming an individual call from hold.
xs:documentation>
      </xs:annotation>
    </xs:enumeration>
   <xs:enumeration value="disconnect">
       <xs:documentation>This method is used to disconnect a call.
     </xs:annotation>
    </xs:enumeration>
   <xs:enumeration value="transfer">
       <xs:documentation>This method is used to transfer an individual call to a new recipient.
xs:documentation>
      </xs:annotation>
    </xs:enumeration>
   <xs:enumeration value="releasecall">
       <xs:documentation>This method is used to release radio subscriber's individual call.
xs:documentation>
     </xs:annotation>
    </xs:enumeration:
 </xs:restriction>
</xs:simpleType>
```


Simple Type typeAudioCodec

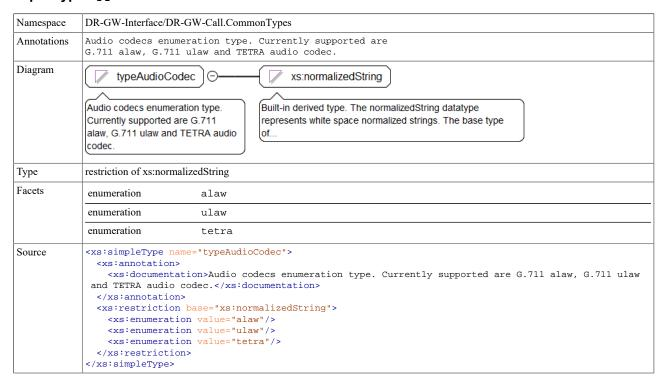

Simple Type typeWorkstationId

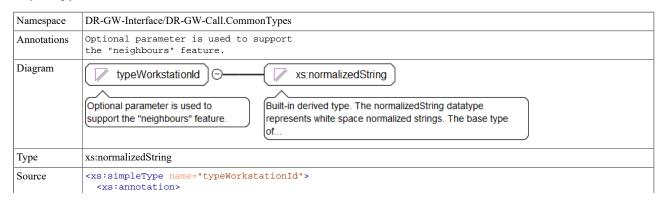

Simple Type typeKeyExchangeAction

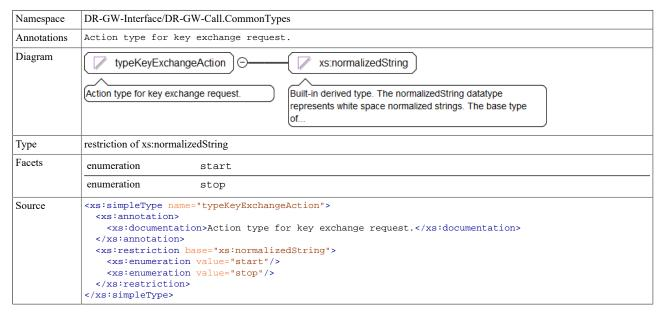

Simple Type typeKeyManagementTextPriority

