Schema documentation for DR-GW-Call.xsd

november 5, 2024

Table of Contents

Namespace: "DR-Gw-Interface/DR-Gw-Call"	
Schema(s)	
Main schema DR-GW-Call.xsd	2
Element(s)	2
Element Call_Select	2
Element Call_Select / sel	
Element Call_Request	
Element Call_Request / action	
Element Call_Request / attributes	
Element Call_Request / callingParty	
Element Call_Request / calledParty	
Element Call_Request / workstationId	
Element Call_PTTRequest	
Element Call_PTTRequest / action	
Element Call_PTTRequest / attributes	9
Element Call_PTTRequest / talkingParty	9
Element Call_PTTRequest / workstationId	
Element Call_KeyExchange	. 10
Element Call_KeyExchange / action	11
Namespace: "DR-GW-Interface/CommonTypes"	
Schema(s)	
Imported schema CommonTypes.xsd	
1	
Element(s)	
Element ct:typeRequest / ct:requestId	
Element ct:typeAddress / ct:subscriber	
Element ct:typeSubscriberAddress / ct:ssi	
Element ct:typeSubscriberAddress / ct:tsi	. 12
Element ct:typeTSI / ct:mnc	. 13
Element ct:typeTSI / ct:mcc	. 13
Element ct:typeTSI / ct:ssi	. 13
Element ct:typeAddress / ct:alias	
Element ct:typeAddress / ct:msisdn	
Element ct:typeAddress / ct:fssn	
Element ct:typeAddress / ct:external	
Element ct:typeExternal / ct:gatewayNumber	
Element ct:typeExternal / ct:number	
Element ct:typeAddress / ct:opta	
Element ct:typeAddress / ct:cell	
Element ct:typeResult / ct:responseCode	. 16
Element ct:typeResult / ct:sourceSystem	
Element ct:typeResult / ct:result	
Element ct:typeResponse / ct:requestId	17
Element ct:typeResponse / ct:result	
Element ct:typeEvent / ct:requestId	. 17
Element ct:typeEvent / ct:result	. 18
Complex Type(s)	
Complex Type ct:typeRequest	
Complex Type ct:typeAddress	
Complex Type ct:typeSubscriberAddress	10
Complex Type ct:typeSubscriberAddress Complex Type ct:typeTSI	
Complex Type ct:typeExternal	
Complex Type ct:typeResult	
Complex Type ct:typeResponse	
Complex Type ct:typeEvent	
Complex Type ct:typeEmpty	. 21
Simple Type(s)	. 22
Simple Type ct:typeDialString	. 22
Simple Type ct:typeOPTA	
Simple Type ct:typeResponseCode	
Simple Type ct:typeSourceSystem	
Simple Type ct:typeAddressingStyle	
Namespace: "DR-GW-Interface/DR-GW-Call.CommonTypes"	

Schema(s)	24
Imported schema DR-GW-Call.CommonTypes.xsd	24
Element(s)	24
Element typeSelection / level	24
Element typeSelection / target	24
Element typeCallAttributes / hook	. 2:
Element typeCallAttributes / mode	. 2:
Element typeCallAttributes / commtype	25
Element typeCallAttributes / priority	
Element typeCallAttributes / encryption	
Element typeCallAttributes / ambienceListen	. 26
Element typeCallAttributes / req2speak	
Element typeCallAttributes / demandPriority	
Element typeTxGranted / txGrant	
Element TypeTxGranted / talkingParty	
Element typeTxGranted / encryption	
Element typeTxGranted / txPriority	
Element typeTxGranted / txInterrupt	
Element typeTxGranted / txRepeat	
Element typeTxGranted / workstationId	
Element typeDisconnectCause / protocol	
Element typeDisconnectCause / code	
Element typeDisconnectCause / text	
Complex Type(s)	
Complex Type typeSelection	
Complex Type typeCallAttributes	
Complex Type typeTxGranted	
Complex Type typeDisconnectCause	
Simple Type(s)	
Simple Type typeSelectionLevel	
Simple Type typeActionRequest	
Simple Type typeCallMode	
Simple Type typeCallType	
Simple Type typeTxDemandPriority	
Simple Type typeWorkstationId	
Simple Type typeActionPTTRequest	
Simple Type typeKeyExchangeAction	
Simple Type typeActionEvent	
Simple Type typeTxPriority	
Simple Type typeTxGrant	
Simple Type typeAudioCodec	
Simple Type typeKeyExchangeState	
Simple Type typeKeyExchangeCode	40
Simple Type typeKeyExchangeText	41
Simple Type typeKeyExchangeTextPriority	
Simple Type typeKeyManagementTextPriority	41
Simple Type typeUnitInEmergencyType	42
Simple Type typeEmergencyInfo	42

Namespace: "DR-GW-Interface/DR-GW-Call"

Schema(s)


Main schema DR-GW-Call.xsd

Namespace	DR-GW-Interface/DR-GW-Call		
Annotations	rsion 1.1.1		
Properties	attribute form default: unqualified		
	element form default: qualified		


Element(s)

Element Call_Select

Namespace	DR-GW-Interface/DR-GW-Call	
Annotations	The method reserves speech line for the targets of selection operation, sets the selection level of the targets of	

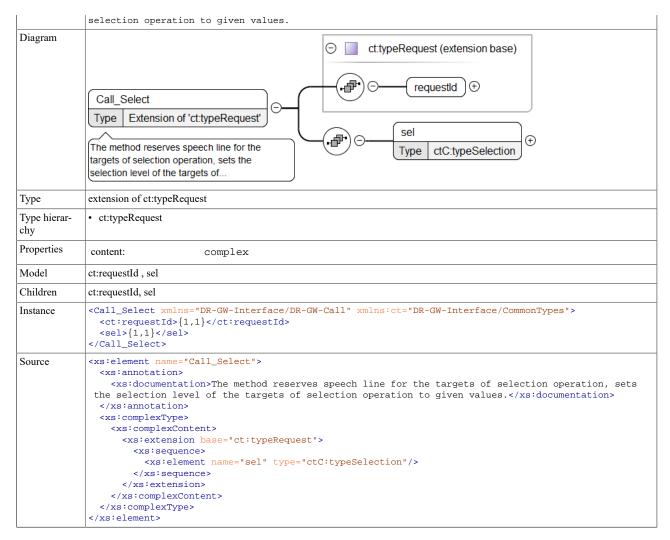


Element Call_Select / sel

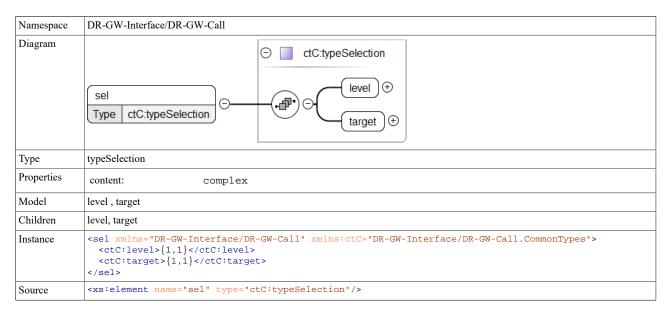


Element Call_Request

Namespace	DR-GW-Interface/DR-GW-Call	
Annotations	DR-GW-Call request. All call related operations	

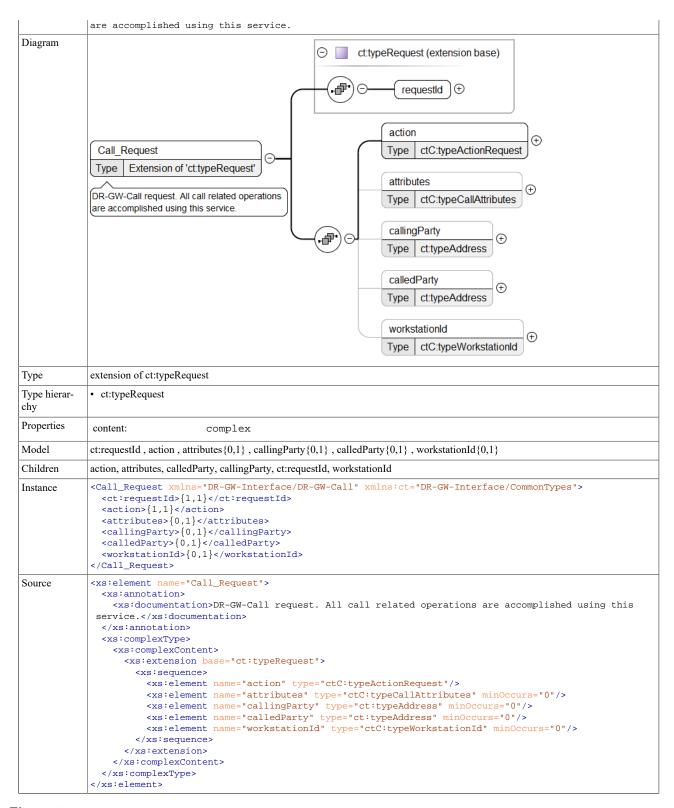


Element Call_Request / action

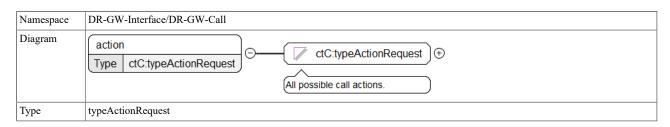


Properties	content:	simple	
Facets	enumeration	setup	This method is used to initiate a new call setup. For a call setup to be successful it is required that the resources have been reserved prior this method call.
	enumeration	connect	This method is used to connect an incoming call.
	enumeration	hold	This method requests to put an individual call to hold.
	enumeration	unhold	This method is a request for resuming an individual call from hold.
	enumeration	disconnect	This method is used to disconnect a call.
	enumeration	transfer	This method is used to transfer an individual call to a new recipient.
	enumeration	releasecall	This method is used to release radio subscriber's individual call.
Source	<xs:element nam<="" td=""><td>e="action" type="ctC:typeAc</td><td>tionRequest"/></td></xs:element>	e="action" type="ctC:typeAc	tionRequest"/>

Element Call_Request / attributes

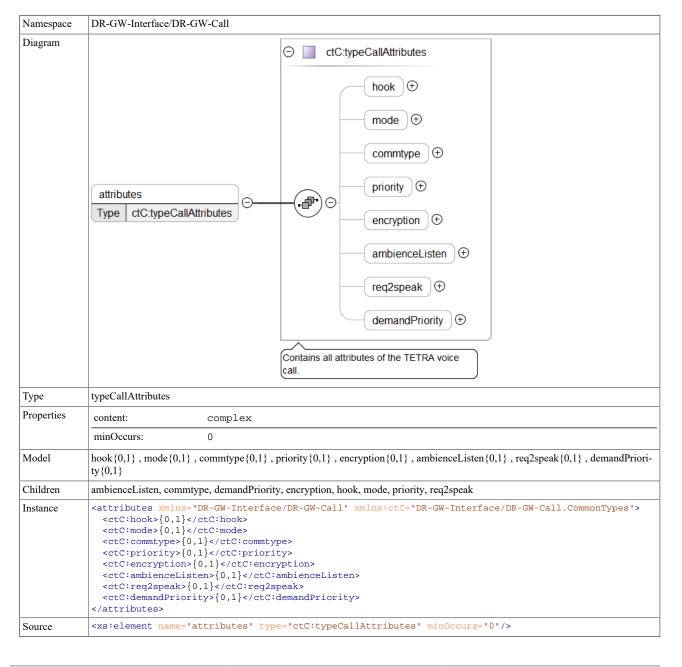


Element Call_Request / callingParty

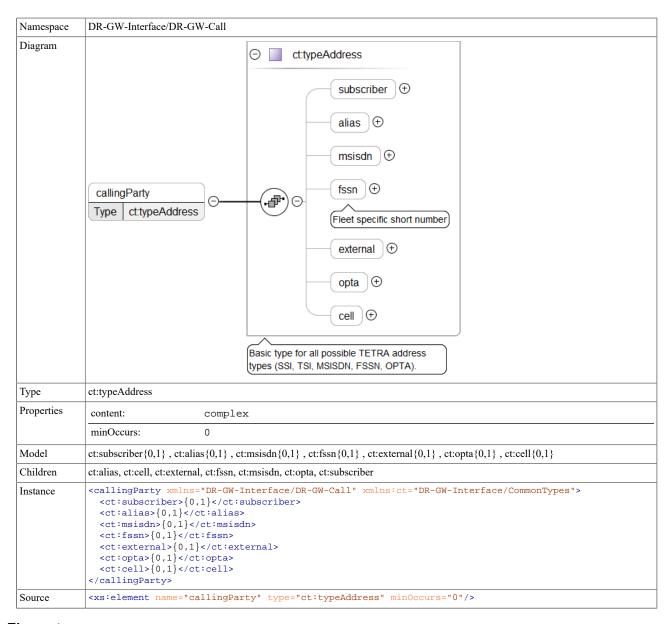

Element Call_Request / calledParty

Namespace	DR-GW-Interface/DR-GW-Call

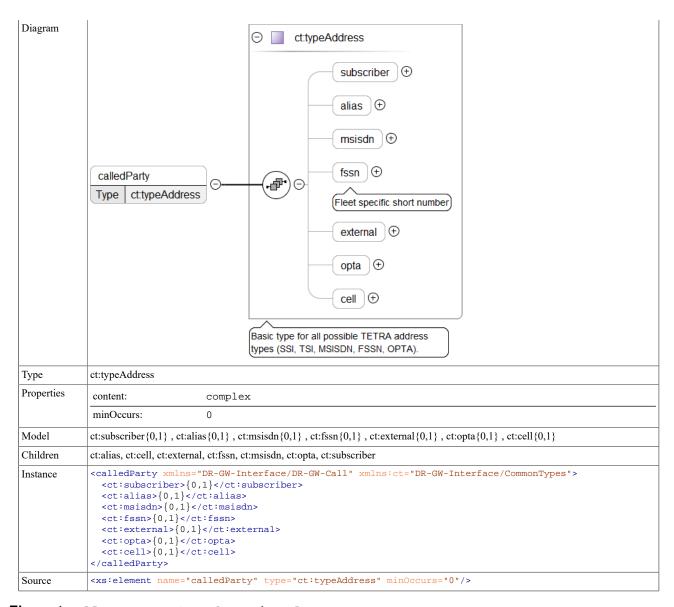


Element Call_Request / workstationId

Namespace	DR-GW-Interface/DR-GW-Call		
Diagram	workstationId Type ctC:typeWorkstationId Optional parameter is used to support the "neighbours" feature.		
Туре	typeWorkstationId		
Properties	content: simple		
	minOccurs: 0		
Source	<pre><xs:element minoccurs="0" name="workstationId" type="ctC:typeWorkstationId"></xs:element></pre>		

Element Call_PTTRequest


Namespace	DR-GW-Interface/DR-GW-Call
	DR-GW-Call PTTRequest. Only "DemandTx" and "CeaseTx" actions only.

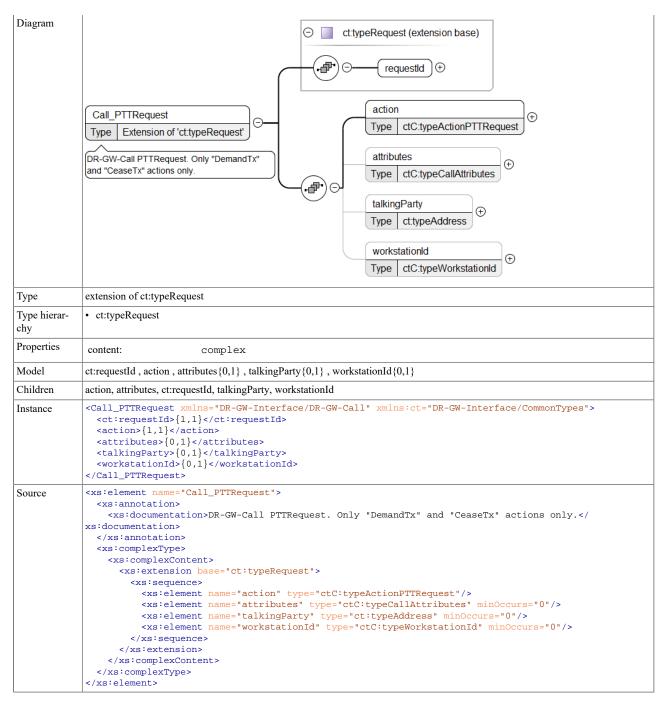

Element Call_PTTRequest / action


Namespace	DR-GW-Interface/DR-GW-Call		
Diagram	action Type ctC:typeActionPTTRequest All possible PTT requests.		
Туре	typeActionPTTRequest		
Properties	content:	simple	
Facets	enumeration	demandtx	This method can be used to request a speech item for a connected call.
	enumeration	ceasetx	This method is used to inform the system that the speech item is not needed any more.
Source	<pre><xs:element name="action" type="ctC:typeActionPTTRequest"></xs:element></pre>		

Element Call_PTTRequest / attributes

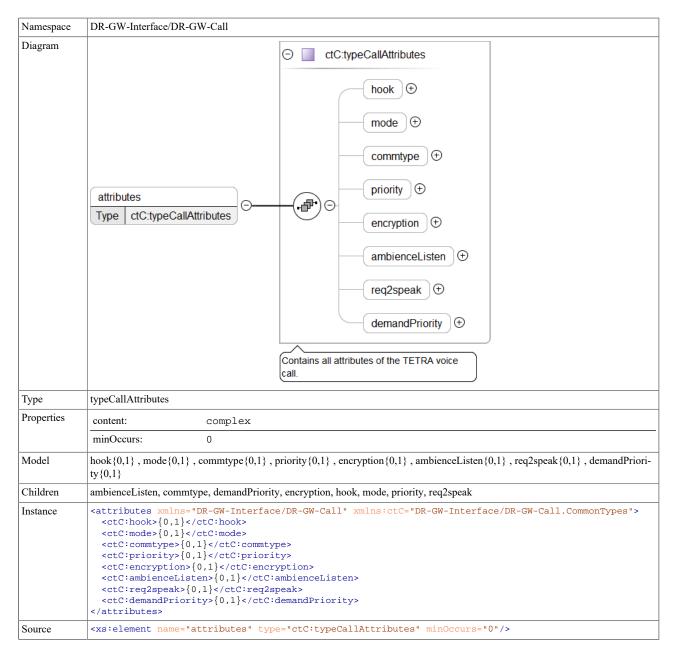

Element Call_PTTRequest / talkingParty

Namespace	DR-GW-Interface/DR-GW-Call
-----------	----------------------------

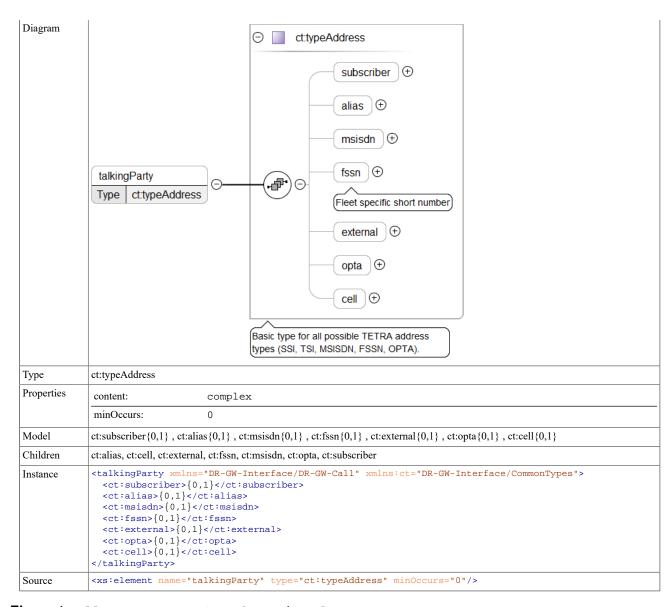


Element Call_PTTRequest / workstationId


Namespace	DR-GW-Interface/DR-GW-Call			
Diagram	workstationId Type ctC:typeWorkstationId Optional parameter is used to support the "neighbours" feature.			
Туре	typeWorkstationId	typeWorkstationId		
Properties	content:	simple		
	minOccurs:	0		
Source	<pre><xs:element minoccurs="0" name="workstationId" type="ctC:typeWorkstationId"></xs:element></pre>			

Element Call_KeyExchange

Namespace	DR-GW-Interface/DR-GW-Call	
	For triggering the group key exchange. Key exchange	
	events are sent in Call_KeyXEvent.	

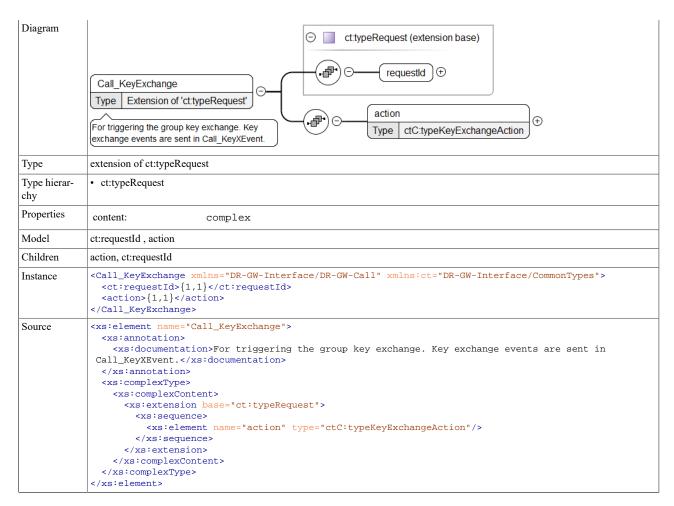

Element Call_KeyExchange / action

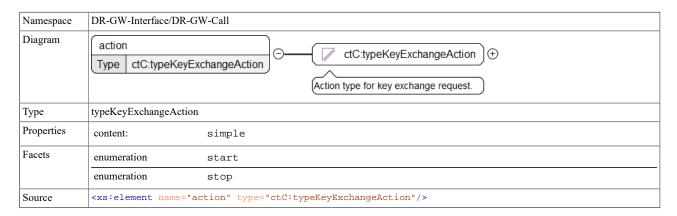

Namespace: "DR-GW-Interface/CommonTypes"

Schema(s)

Imported schema CommonTypes.xsd


Namespace	DR-GW-Interface/CommonTypes	
Annotations	Version 1.1.1	
Properties	attribute form default: unqualified	
	element form default: qualified	

Element(s)


Element ct:typeRequest / ct:requestId

Namespace	DR-GW-Interface/CommonTypes	
Diagram	requestId xs:unsignedLong Built-in derived type. The unsignedLong datatype is derived from nonNegativeInteger by setting the value of	
Туре	xs:unsignedLong	
Properties	content: simple	
Source	<pre><xs:element name="requestId" type="xs:unsignedLong"></xs:element></pre>	

Element ct:typeAddress / ct:subscriber

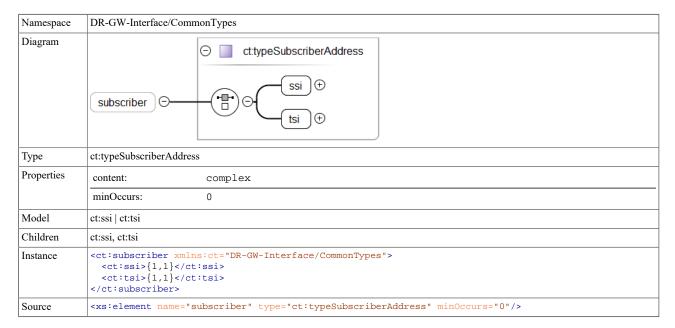


Element ct:typeSubscriberAddress / ct:ssi

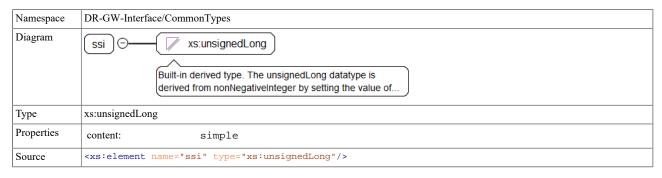

Element ct:typeSubscriberAddress / ct:tsi


Namespace	DR-GW-Interface/CommonTypes

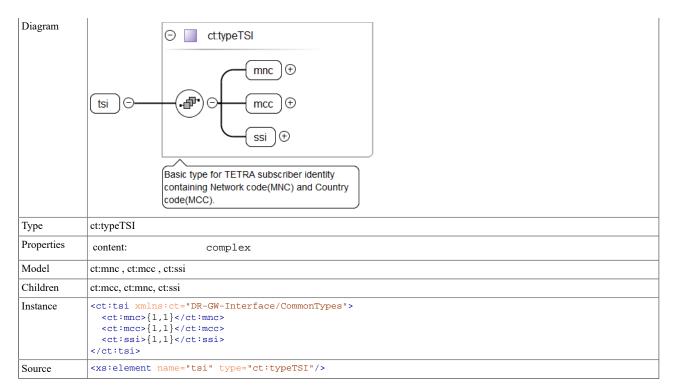


Element ct:typeTSI / ct:mnc

Namespace	DR-GW-Interface/CommonTypes	
Diagram	Built-in derived type. The unsignedShort datatype is derived from unsignedInt by setting the value of maxInclusive to	
Туре	xs:unsignedShort	
Properties	content: simple	
Source	<pre><xs:element name="mnc" type="xs:unsignedShort"></xs:element></pre>	

Element ct:typeTSI / ct:mcc

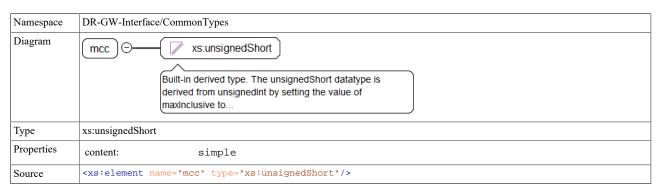


Element ct:typeTSI / ct:ssi

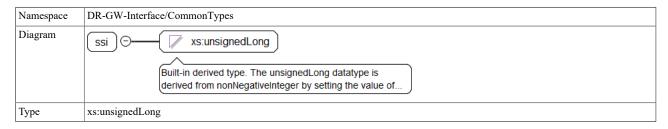

Properties	content:	simple
Source	<pre><xs:element name="ss</pre></th><th colspan=2>lement name=" ssi"="" type="xs:unsignedLong"></xs:element></pre>	


Element ct:typeAddress / ct:alias

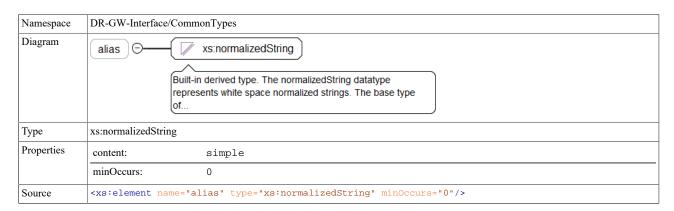

Element ct:typeAddress / ct:msisdn


Namespace	DR-GW-Interface/CommonTypes	
Diagram	msisdn \bigcirc ct:typeDialString \bigcirc Allowed characters are digits 0 - 9, *, #, A, B, C and D. Maximum length is 24 characters.	
Туре	ct:typeDialString	
Properties	content: simple	
	minOccurs: 0	
Facets	maxLength 24	
Source	<pre><xs:element minoccurs="0" name="msisdn" type="ct:typeDialString"></xs:element></pre>	

Element ct:typeAddress / ct:fssn

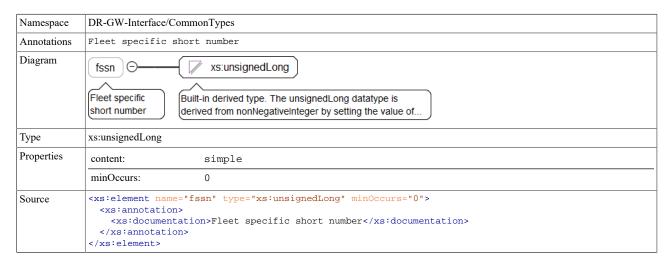

Element ct:typeAddress / ct:external


Namespace	DR-GW-Interface/CommonTypes

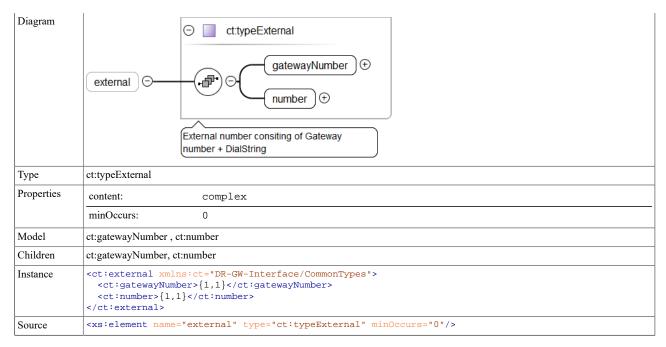


Element ct:typeExternal / ct:gatewayNumber

Namespace	DR-GW-Interface/CommonTypes		
Diagram	gatewayNumber		
Туре	xs:unsignedLong		
Properties	content: simple		
Source	<pre><xs:element name="gatewayNumber" type="xs:unsignedLong"></xs:element></pre>		

Element ct:typeExternal / ct:number

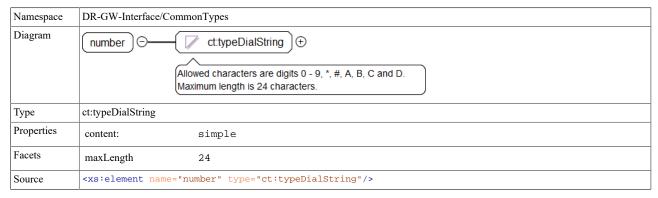

Element ct:typeAddress / ct:opta

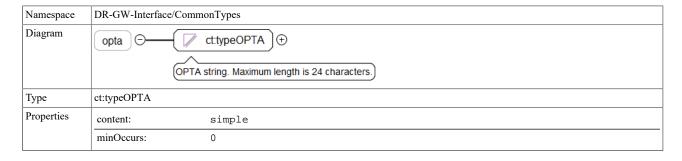

Facets	maxLength	24	
ource <xs:element minoccurs="0" name="opta" type="ct:typeOPTA"></xs:element>			

Element ct:typeAddress / ct:cell

Namespace	DR-GW-Interface/CommonTypes	
Diagram	Built-in derived type. The short datatype is derived from int by setting the value of maxInclusive to be 32767 and	
Type	xs:short	
Properties	content: simple	
	minOccurs: 0	
Source	<pre><xs:element minoccurs="0" name="cell" type="xs:short"></xs:element></pre>	


Element ct:typeResult / ct:responseCode

Namespace	DR-GW-Interface/CommonTypes		
Diagram	responseCode		
Туре	ct:typeResponseCode		
Properties	content:	simple	
Facets	enumeration	success	
	enumeration	final_response_pending	
	enumeration	error	
	enumeration	not_authorized_error	
	enumeration	temporary_failure	
	enumeration	subscription_failed	
Source	<pre><xs:element name="responseCode" type="ct:typeResponseCode"></xs:element></pre>		

Element ct:typeResult / ct:sourceSystem

Namespace	DR-GW-Interface/CommonTypes	
Diagram	sourceSystem 🗇 🕡 ct:typeSourceSystem 🕀	
Туре	ct:typeSourceSystem	
Properties	content:	simple
	minOccurs:	0
Facets	enumeration	DR-GW
	enumeration	TCS-API
	enumeration	TETRA
Source	<pre><xs:element minoccurs="0" name="sourceSystem" type="ct:typeSourceSystem"></xs:element></pre>	

Element ct:typeResult / ct:result

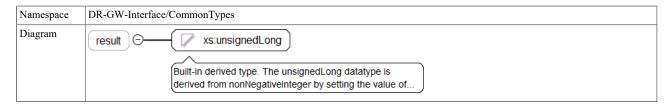


Type	xs:unsignedLong	
Properties	content:	simple
	minOccurs:	0
Source	<pre><xs:element minoccurs="0" name="result" type="xs:unsignedLong"></xs:element></pre>	


Element ct:typeResponse / ct:requestId

Namespace	DR-GW-Interface/CommonTypes		
Diagram	requestId		
Туре	xs:unsignedLong		
Properties	content: simple		
Source	<pre><xs:element name="requestId" type="xs:unsignedLong"></xs:element></pre>		


Element ct:typeResponse / ct:result

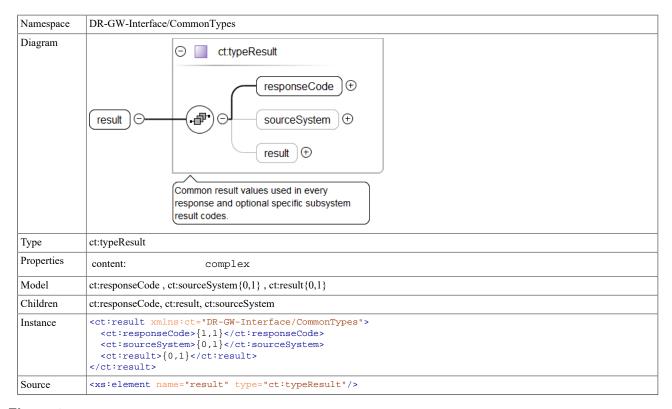

Element ct:typeEvent / ct:requestId

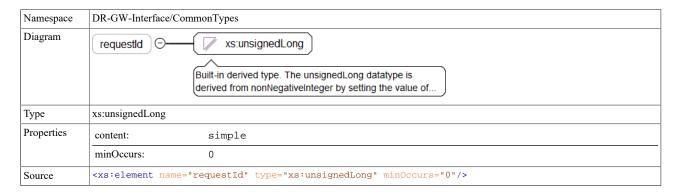


Element ct:typeEvent / ct:result

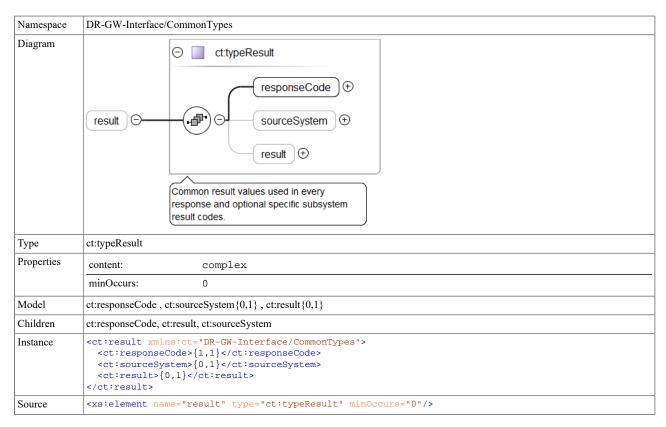


Complex Type(s)

Complex Type ct:typeRequest

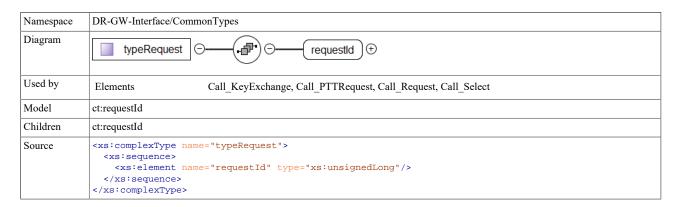


Complex Type ct:typeAddress

Namespace	DR-GW-Interface/CommonTypes	
Annotations	Basic type for all possible TETRA address types (SSI, TSI, MSISDN, FSSN, OPTA).	

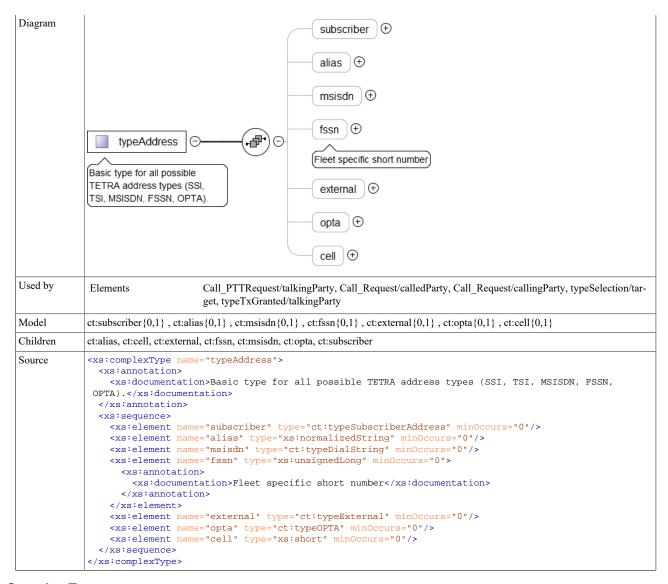


Complex Type ct:typeSubscriberAddress

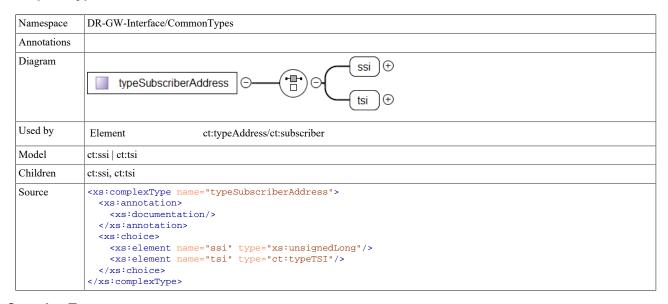


Complex Type ct:typeTSI


Namespace	DR-GW-Interface/CommonTypes
-----------	-----------------------------

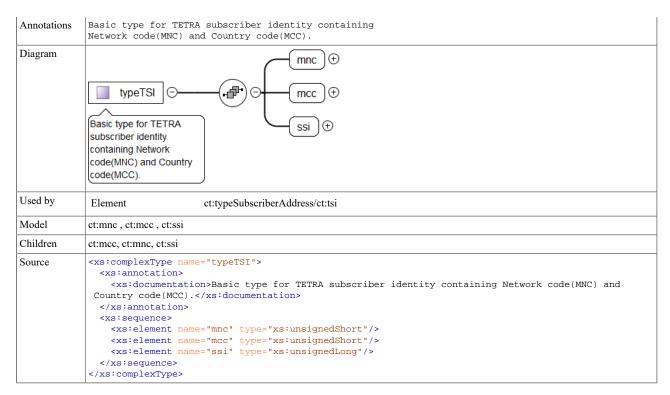

Complex Type ct:typeExternal

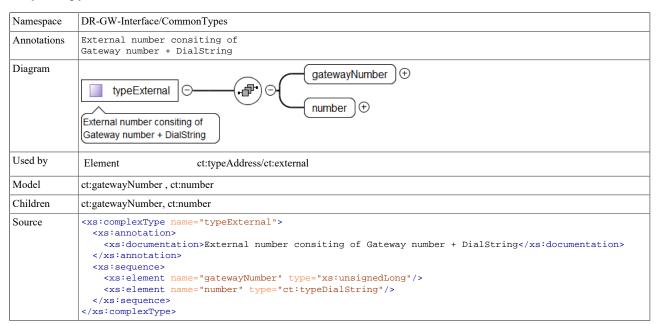


Complex Type ct:typeResult

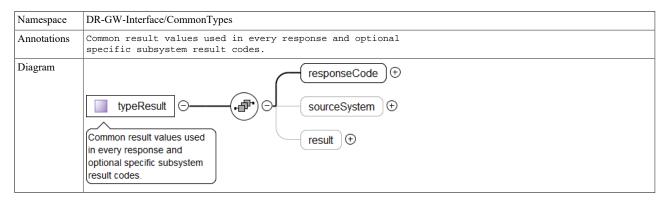


```
Used by
             Elements
                                   ct:typeEvent/ct:result, ct:typeResponse/ct:result
Model
             ct:responseCode , ct:sourceSystem\{0,1\} , ct:result\{0,1\}
Children
             ct:responseCode, ct:result, ct:sourceSystem
Source
             <xs:complexType name="typeResult">
               <xs:annotation>
                 <xs:documentation>Common result values used in every response and optional specific subsystem
              result codes.</xs:documentation>
               </xs:annotation>
               <xs:sequence>
                 <xs:element name="responseCode" type="ct:typeResponseCode"/>
                 <xs:element name="sourceSystem" type="ct:typeSourceSystem" minOccurs="0"/>
                 <xs:element name="result" type="xs:unsignedLong" minOccurs="0"/>
               </xs:sequence>
             </xs:complexType>
```

Complex Type ct: typeResponse

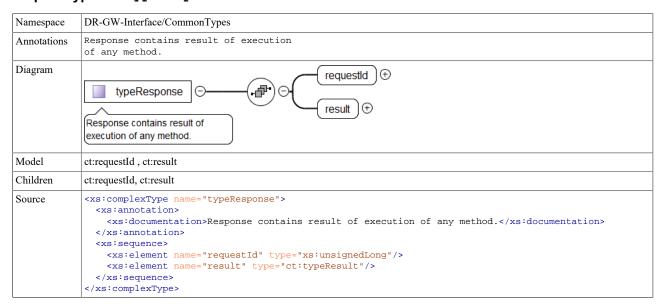

Complex Type ct:typeEvent

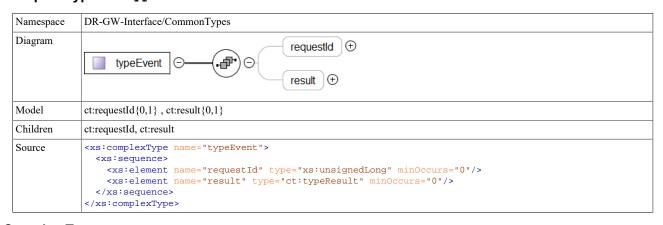

Complex Type ct:typeEmpty

Namespace	DR-GW-Interface/CommonTypes	
Annotations	Explicit type specification for elements that shall be empty.	
Diagram	Explicit type specification for elements that shall be empty.	
Source	<pre><xs:complextype name="typeEmpty"> <xs:annotation></xs:annotation></xs:complextype></pre>	

Simple Type(s)


Simple Type ct:typeDialString

Namespace	DR-GW-Interface/CommonTypes		
Annotations	Allowed characters are digits 0 - 9, *, #, A, B, C and D. Maximum length is 24 characters.		
Diagram	Allowed characters are digits 0 - 9, *, #, A, B, C and D. Maximum length is 24 characters. Built-in derived type. The normalizedString datatype represents white space normalized strings. The base type of		
Type	restriction of xs:normalizedString		
Facets	maxLength 24		
Used by	Elements ct:typeAddress/ct:msisdn, ct:typeExternal/ct:number		
Source	<pre><xs:simpletype name="typeDialString"> <xs:annotation> <xs:documentation>Allowed characters are digits 0 - 9, *, #, A, B, C and D. Maximum length is 24 characters.</xs:documentation></xs:annotation></xs:simpletype></pre> characters.		

Simple Type ct:typeOPTA


Namespace	DR-GW-Interface/CommonTypes		
Annotations	OPTA string. Maximum length is 24 characters.		
Diagram	OPTA string. Maximum length is 24 characters. Built-in derived type. The normalizedString datatype represents white space normalized strings. The base type of		
Туре	restriction of xs:normalizedString		
Facets	maxLength 24		
Used by	Element ct:typeAddress/ct:opta		
Source	<pre><xs:simpletype name="typeOPTA"> <xs:annotation> <xs:documentation>OPTA string. Maximum length is 24 characters.</xs:documentation> </xs:annotation> <xs:restriction base="xs:normalizedString"> <xs:maxlength value="24"></xs:maxlength> </xs:restriction> </xs:simpletype></pre>		

Simple Type ct:typeResponseCode

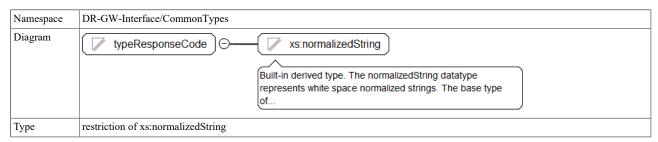


	The second secon	
Facets	enumeration	success
	enumeration	final_response_pending
	enumeration	error
	enumeration	not_authorized_error
	enumeration	temporary_failure
	enumeration	subscription_failed
Used by	Element	ct:typeResult/ct:responseCode
Source	<pre><xs:restriction b<="" td=""><td>="typeResponseCode"> ase="xs:normalizedString"> value="success"/> value="final_response_pending"/> value="error"/> value="not_authorized_error"/> value="temporary_failure"/> value="subscription_failed"/></td></xs:restriction></pre>	="typeResponseCode"> ase="xs:normalizedString"> value="success"/> value="final_response_pending"/> value="error"/> value="not_authorized_error"/> value="temporary_failure"/> value="subscription_failed"/>

Simple Type ct:typeSourceSystem

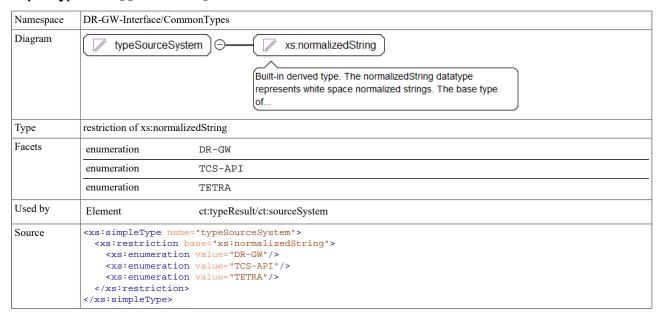

Simple Type ct:typeAddressingStyle

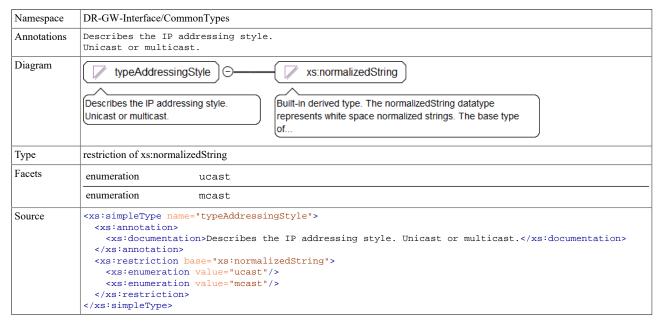

Namespace: "DR-GW-Interface/DR-GW-Call.CommonTypes"

Schema(s)

${\bf Imported\ schema\ DR-GW-Call.Common Types.xsd}$


Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes	
Annotations	Version 1.1.1	
Properties	attribute form default: unqualified	
	element form default: qualified	

Element(s)

Element typeSelection / level

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes		
Diagram	level 🗇 💮 Define	typeSelectionLevel) ⊕ es how the target is monitored.	
Туре	typeSelectionLevel		
Properties	content:	simple	
Facets	enumeration	no	No selection. Used to remove selection.
	enumeration	event	Event monitoring.
	enumeration	audio	Audio monitoring.
	enumeration	use	Selection level use.
	enumeration	a_use	Selection level active use.
Source	<pre><xs:element <="" name="1</pre></td><td>evel" td="" type="typeSelectionLevel"><td>'/></td></xs:element></pre>	'/>	

Element typeSelection / target

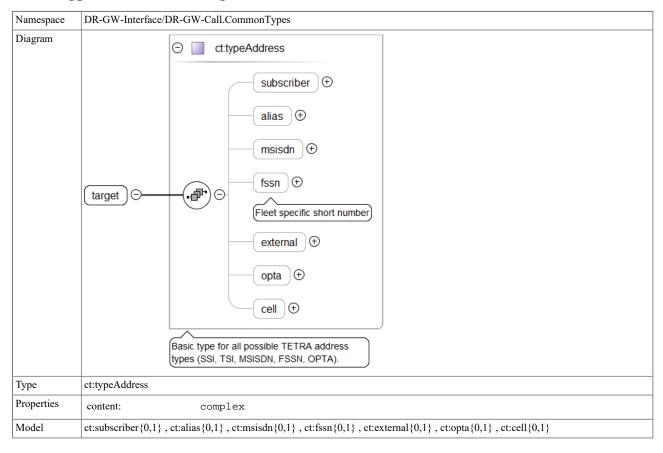

Element typeCallAttributes / hook

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes	
Diagram	hook	
Туре	xs:boolean	
Properties	content: simple	
	minOccurs: 0	
Source	<pre><xs:element minoccurs="0" name="hook" type="xs:boolean"></xs:element></pre>	

$\textbf{Element} \; \texttt{typeCallAttributes} \; \; / \; \; \texttt{mode}$

Namespace	DR-GW-Interface/DR-G	W-Call.CommonTypes
Diagram	mode 🗇 💮 Call	typeCallMode
Type	typeCallMode	
Properties	content:	simple
	minOccurs:	0
Facets	enumeration	simplex
	enumeration	duplex
Source	<pre><xs:element minoccurs="0" name="m</pre></td><td>ode" type="typeCallMode"></xs:element></pre>	

Element typeCallAttributes / commtype

Namespace	DR-GW-Interface/DF	R-GW-Call.CommonTypes
Diagram	commtype 🗇	typeCallType
Туре	typeCallType	
Properties	content:	simple
	minOccurs:	0
Facets	enumeration	p2p
	enumeration	p2mp
	enumeration	bcast
Source	<pre><xs:element name:<="" pre=""></xs:element></pre>	="commtype" type="typeCallType" minOccurs="0"/>

Element typeCallAttributes / priority

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes	
-----------	--	--

Diagram	priority 🗇	xs:unsignedByte Built-in derived type. The unsignedByte datatype is derived from unsignedShort by setting the value of maxInclusive to	
Type	xs:unsignedByte		
Properties	content:	simple	
	minOccurs:	0	
	default:	1	
Source	<xs:element n<="" td=""><td>ame="priority" type="xs:unsignedByte" default="1" minOccurs="0"/></td><td></td></xs:element>	ame="priority" type="xs:unsignedByte" default="1" minOccurs="0"/>	

Element typeCallAttributes / encryption

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes	
Diagram	encryption Built-in primitive type. It defines the boolean values true and false.	
Туре	xs:boolean	
Properties	content: simple	
	minOccurs: 0	
	default: true	_
Source	<pre><xs:element default="true" minoccurs="0" name="encryption" type="xs:boolean"></xs:element></pre>	

Element typeCallAttributes / ambienceListen

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes
Diagram	ambienceListen xs:boolean Built-in primitive type. It defines the boolean values true and false.
Туре	xs:boolean
Properties	content: simple
	minOccurs: 0
	default: 0
Source	<pre><xs:element default="0" minoccurs="0" name="ambienceListen" type="xs:boolean"></xs:element></pre>

Element typeCallAttributes / req2speak

Namespace	DR-GW-Interface/DI	R-GW-Call.CommonTypes
Diagram	req2speak 🗩	Built-in primitive type. It defines the boolean values true and false.
Туре	xs:boolean	
Properties	content:	simple
	minOccurs:	0
	default:	1
Source	<pre><xs:element name<="" pre=""></xs:element></pre>	"req2speak" type="xs:boolean" default="1" minOccurs="0"/>

Element typeCallAttributes / demandPriority


Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes
-----------	--

Diagram	demandPrior	typeTxDemandPriority Defines priority of speech item request: normal, pre-emptive, or emergency.
Туре	typeTxDemand	Priority
Properties	content:	simple
	minOccurs:	0
	default:	normal
Facets	enumeration	normal
	enumeration	preemptive
	enumeration	emergency
Source	<xs:element< td=""><td>name="demandPriority" type="typeTxDemandPriority" default="normal" minOccurs="0"/></td></xs:element<>	name="demandPriority" type="typeTxDemandPriority" default="normal" minOccurs="0"/>

Element typeTxGranted / txGrant

Namespace	DR-GW-Interface/DR-G	W-Call.CommonTypes
Diagram	txGrant 🗇 💮 Det	typeTxGrant
Туре	typeTxGrant	
Properties	content:	simple
Facets	enumeration	granted
	enumeration	notGranted
	enumeration	queued
	enumeration	granted2another
Source	<pre><xs:element name="t</pre></td><td>xGrant" type="typeTxGrant"></xs:element></pre>	

Element typeTxGranted / talkingParty

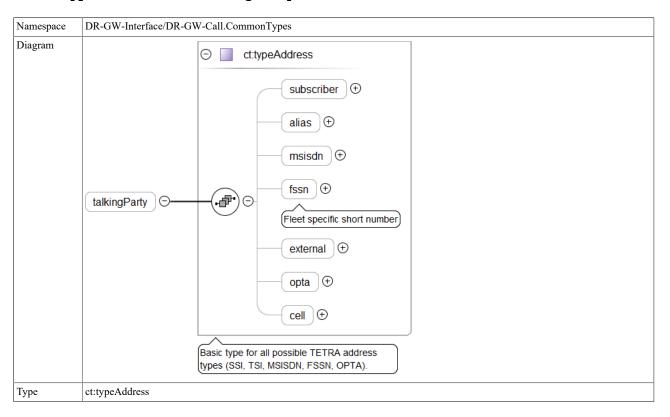


Properties	content: complex
	minOccurs: 0
Model	$\texttt{ct:subscriber}\{0,1\} \text{ , ct:alias}\{0,1\} \text{ , ct:msisdn}\{0,1\} \text{ , ct:fssn}\{0,1\} \text{ , ct:external}\{0,1\} \text{ , ct:opta}\{0,1\} \text{ , ct:cell}\{0,1\} \text$
Children	ct:alias, ct:cell, ct:external, ct:fssn, ct:msisdn, ct:opta, ct:subscriber
Instance	<pre><talkingparty <="" th="" xmlns="DR-GW-Interface/DR-GW-Call.CommonTypes" xmlns:ct="DR-GW-Interface/CommonTypes"></talkingparty></pre>
Source	<pre><xs:element minoccurs="0" name="talkingParty" type="ct:typeAddress"></xs:element></pre>


Element typeTxGranted / encryption

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes
Diagram	encryption
Туре	xs:boolean
Properties	content: simple
	minOccurs: 0
	default: true
Source	<pre><xs:element default="true" minoccurs="0" name="encryption" type="xs:boolean"></xs:element></pre>

Element typeTxGranted / txPriority

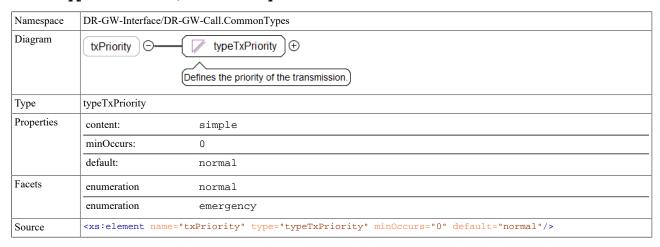

Element typeTxGranted / txInterrupt

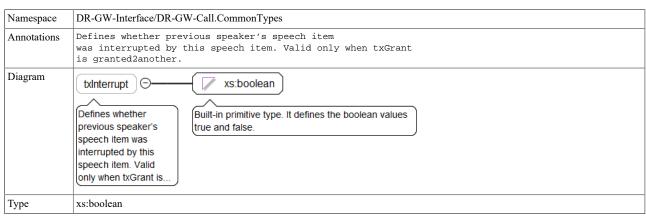


Properties	content:	simple
	minOccurs:	0
	default:	false
Source	<pre><xs:annotatio <xs:document<="" pre=""></xs:annotatio></pre>	tration>Defines whether previous speaker's speech item was interrupted by this speech aly when txGrant is granted2another.

Element typeTxGranted / txRepeat

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes		
Annotations	Timer to repeat the PTT. Units are seconds. Always suggested by the DF-gateway. Only valid when txGrant=granted.		
Diagram	Timer to repeat the PTT. Units are seconds. Always suggested by the DF-gateway. Only valid when txGrant=granted. Built-in derived type. The unsignedLong datatype is derived from nonNegativeInteger by setting the value of		
Туре	xs:unsignedLong		
Properties	content: simple		
	minOccurs: 0		
	default: 0		
Source	<pre><xs:element default="0" minoccurs="0" name="txRepeat" type="xs:unsignedLong"></xs:element></pre>		

Element typeTxGranted / workstationId

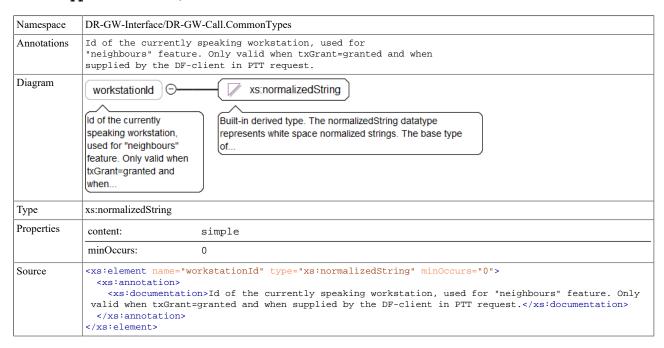


Element typeDisconnectCause / protocol

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes	
-----------	--	--

Diagram	protocol 🗇	restricts: xs:normalizedString) ①			
Туре	restriction of xs:nor	malizedString			
Properties	content:	ontent: simple			
Facets	enumeration	DR-GW			
	enumeration	TCS-API			
Source	<xs:enume< td=""><td><pre>e> tion base="xs:normalizedString"> ration value="DR-GW"/> ration value="TCS-API"/> ction></pre></td></xs:enume<>	<pre>e> tion base="xs:normalizedString"> ration value="DR-GW"/> ration value="TCS-API"/> ction></pre>			

Element typeDisconnectCause / code

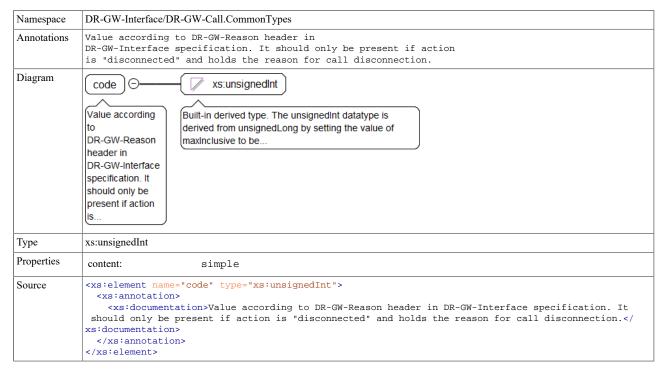


Element typeDisconnectCause / text

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes		
Annotations	Optional textual representation of the cause.		
Diagram	text O restricts: xs:normalizedString (+) Optional textual representation of the cause.		
Туре	restriction of xs:normalizedString		
Properties	content: simple		
	minOccurs: 0		
Facets	maxLength 80		
Source	<pre><xs:element minoccurs="0" name="text"> <xs:annotation> <xs:documentation>Optional textual representation of the cause.</xs:documentation> </xs:annotation> <xs:simpletype> <xs:restriction base="xs:normalizedString"></xs:restriction></xs:simpletype></xs:element></pre>		

```
<xs:maxLength value="80"/>
     </xs:restriction>
     </xs:simpleType>
</xs:element>
```

Complex Type(s)


Complex Type typeSelection

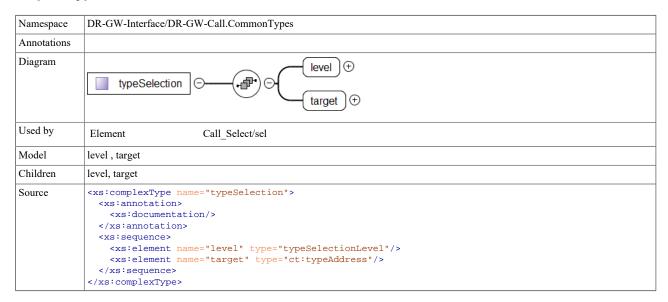

Complex Type typeCallAttributes




Complex Type typeTxGranted

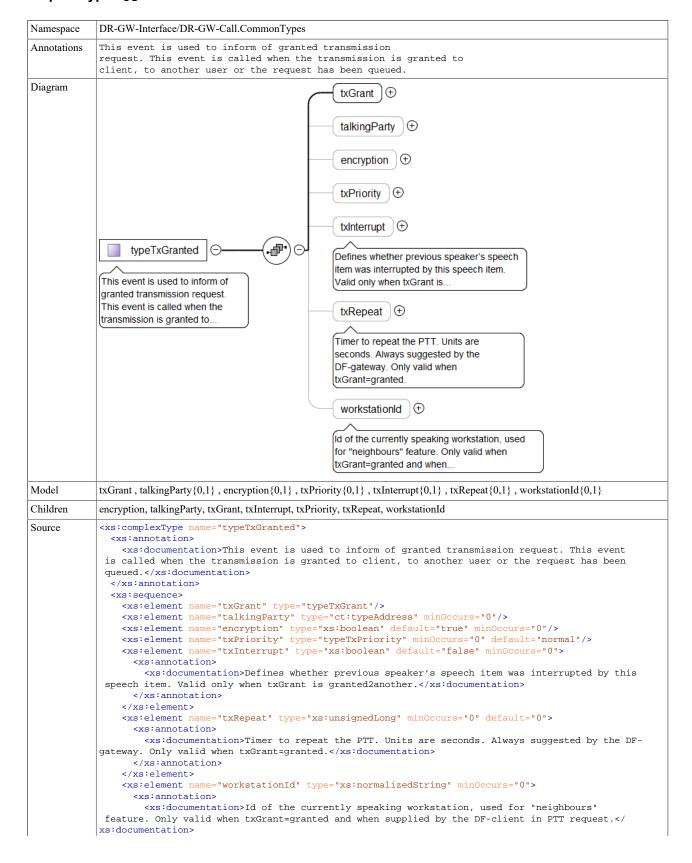

```
</xs:annotation>
  </xs:element>
  </xs:sequence>
  </xs:complexType>
```

Complex Type typeDisconnectCause

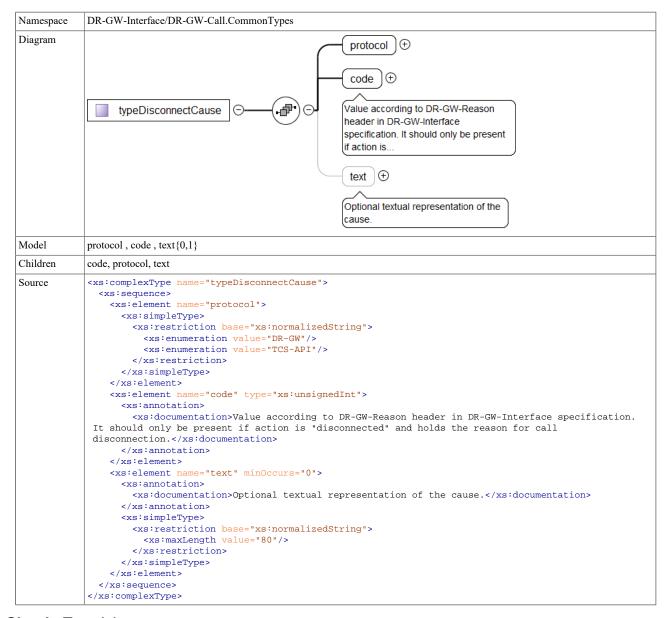

Simple Type(s)

Simple Type typeSelectionLevel

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes		
Annotations	Defines how the target is monitored.		
Diagram	typeSelect Defines how the ta		Built-in derived type. The normalizedString datatype represents white space normalized strings. The base type of
Type	restriction of xs:no	rmalizedString	
Facets	enumeration	no	No selection. Used to remove selection.
	enumeration	event	Event monitoring.

```
enumeration
                                 audio
                                                                Audio monitoring.
             enumeration
                                                                Selection level use.
                                 use
             enumeration
                                                                Selection level active use.
                                 a_use
Used by
             Element
                                 typeSelection/level
Source
            <xs:simpleType name="typeSelectionLevel">
              <xs:annotation>
                <xs:documentation>Defines how the target is monitored.</xs:documentation>
              </xs:annotation>
              <xs:restriction base="xs:normalizedString">
                <xs:enumeration value="no">
                  <xs:annotation>
                    <xs:documentation>No selection. Used to remove selection.</xs:documentation>
                  </xs:annotation>
                </xs:enumeration>
                <xs:enumeration value="event">
                  <xs:annotation>
                    <xs:documentation>Event monitoring.</xs:documentation>
                  </xs:annotation>
                </xs:enumeration>
                <xs:enumeration value="audio">
                  <xs:annotation>
                    <xs:documentation>Audio monitoring.</xs:documentation>
                  </xs:annotation>
                </xs:enumeration>
                <xs:enumeration value="use">
                  <xs:annotation>
                    <xs:documentation>Selection level use.</xs:documentation>
                  </xs:annotation>
                 </xs:enumeration>
                <xs:enumeration value="a_use">
                  <xs:annotation>
                    <xs:documentation>Selection level active use.</xs:documentation>
                  </xs:annotation>
                </xs:enumeration>
              </xs:restriction>
            </xs:simpleType>
```

Simple Type typeActionRequest

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes		
Annotations	All possible call actions.		
Diagram	typeActionRequest		
Туре	restriction of xs:nor	malizedString	
Facets	enumeration	setup	This method is used to initiate a new call setup. For a call setup to be successful it is required that the resources have been reserved prior this method call.
	enumeration	connect	This method is used to connect an incoming call.
	enumeration	hold	This method requests to put an individual call to hold.
	enumeration	unhold	This method is a request for resuming an individual call from hold.
	enumeration	disconnect	This method is used to disconnect a call.
	enumeration	transfer	This method is used to transfer an individual call to a new recipient.
	enumeration	releasecall	This method is used to release radio subscriber's individual call.
Used by	Element Call_Request/action		
Source	<pre><xs:simpletype name="typeActionRequest"> <xs:annotation> <xs:documentation>All possible call actions.</xs:documentation> </xs:annotation></xs:simpletype></pre>		

```
<xs:restriction base="xs:normalizedString">
    <xs:enumeration value="setup">
      <xs:annotation>
        <xs:documentation>This method is used to initiate a new call setup. For a call setup to
be successful it is required that the resources have been reserved prior this method call.</
    </xs:enumeration>
    <xs:enumeration value="connect">
      <xs:annotation>
        <xs:documentation>This method is used to connect an incoming call.</xs:documentation>
    </xs:enumeration>
    <xs:enumeration value="hold">
      <xs:annotation>
        <xs:documentation>This method requests to put an individual call to hold.</xs:documentation>
    </xs:enumeration>
    <xs:enumeration value="unhold">
      <xs:annotation>
        \verb| <xs: documentation> This method is a request for resuming an individual call from hold. </| |
xs:documentation>
      </xs:annotation>
    </xs:enumeration>
    <xs:enumeration value="disconnect">
        <xs:documentation>This method is used to disconnect a call./xs:documentation>
    </xs:enumeration>
    <xs:enumeration value="transfer">
      <xs:annotation>
        <xs:documentation>This method is used to transfer an individual call to a new recipient./
xs:documentation>
      </xs:annotation>
    </xs:enumeration>
    <xs:enumeration value="releasecall">
      <xs:annotation>
       <xs:documentation>This method is used to release radio subscriber's individual call.
xs:documentation>
      </xs:annotation>
    </xs:enumeration>
  </xs:restriction>
</xs:simpleType>
```

Simple Type typeCallMode


Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes		
Annotations	Call mode attribute. Choices are simplex or duplex.		
Diagram	Call mode attribute. Choices are simplex or duplex. Built-in derived type. The normalizedString datatype represents white space normalized strings. The base type of		
Туре	restriction of xs:normalizedString		
Facets	enumeration simplex		
	enumeration duplex		
Used by	Element typeCallAttributes/mode		
Source	<pre> <xs:simpletype name="typeCallMode"></xs:simpletype></pre>		

Simple Type typeCallType


Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes	
Annotations	Call type attribute. Choices are Point2Point, Point2MultiPoint or Broadcast.	




Simple Type typeTxDemandPriority

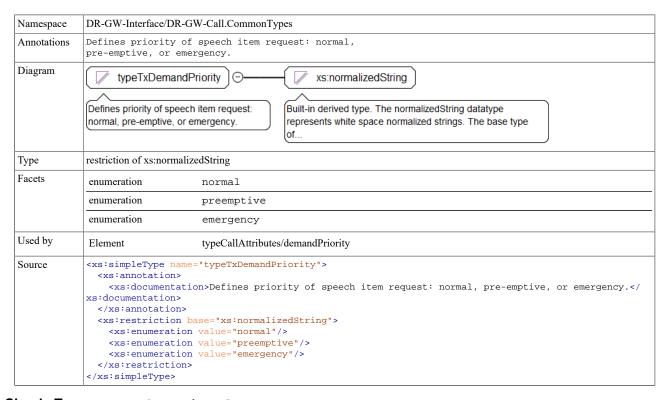

Simple Type typeWorkstationId

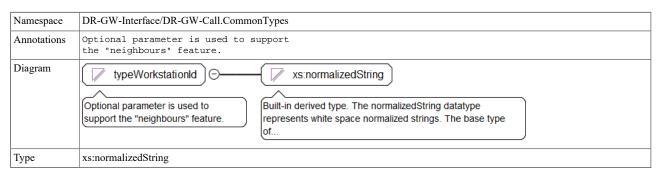

Simple Type typeActionPTTRequest

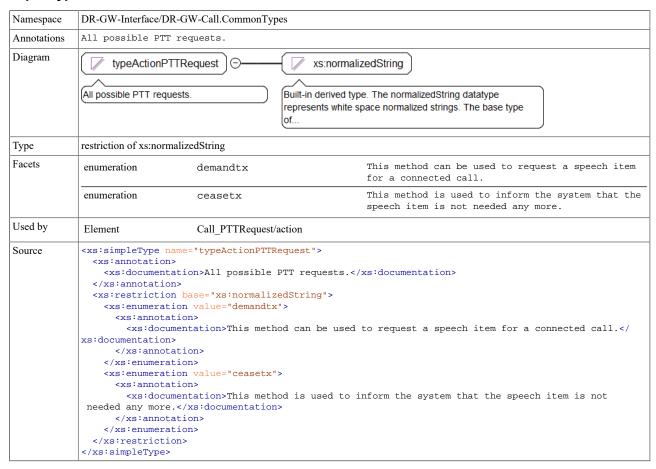

Simple Type typeKeyExchangeAction

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes		
Annotations	Action type for key exchange request.		
Diagram	Action type for key exchange request. Built-in derived type. The normalizedString datatype represents white space normalized strings. The base type of		
Туре	restriction of xs:normalizedString		
Facets	enumeration start		
	enumeration stop		
Used by	Element Call_KeyExchange/action		
Source	<pre><xs:simpletype name="typeKeyExchangeAction"> <xs:annotation></xs:annotation></xs:simpletype></pre>		


```
</xs:restriction>
</xs:simpleType>
```

Simple Type typeActionEvent


Namespace Annotations Diagram		DR-GW-Interface/DR-GW-Call.CommonTypes			
	All possible call actions.				
	typeActionEvent 🗇 📈 xs:normalizedString				
	All possible call action		Built-in derived type. The normalizedString datatype represents white space normalized strings. The base type of		
Туре	restriction of xs:norn				
Facets	enumeration	incoming	This event fired when there is an incoming call. This is the first indication of a new incoming call.		
	enumeration	connected	This event is used to inform that call has been connected and call setup is finished.		
	enumeration	held	This event is used to inform TCS Client that individual call was put to hold.		
	enumeration	resumed	This event is used to inform that individual call has been taken from hold.		
	enumeration	disconnected	This event is used to inform that the call was disconnected.		
	enumeration	transferred	This event is a response to transfer method call and indicates the result of the request.		
	was disconnected. enumeration transferred This event is a response to transfer method call				

Simple Type typeTxPriority


Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes

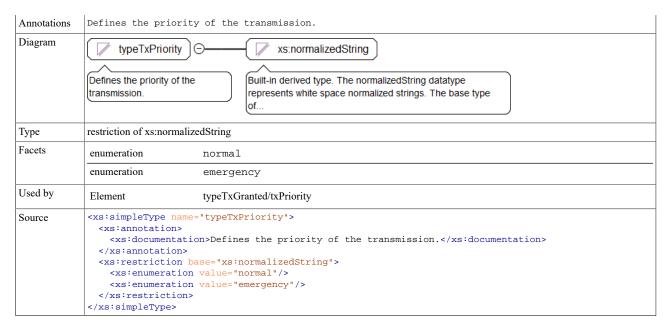

Simple Type typeTxGrant

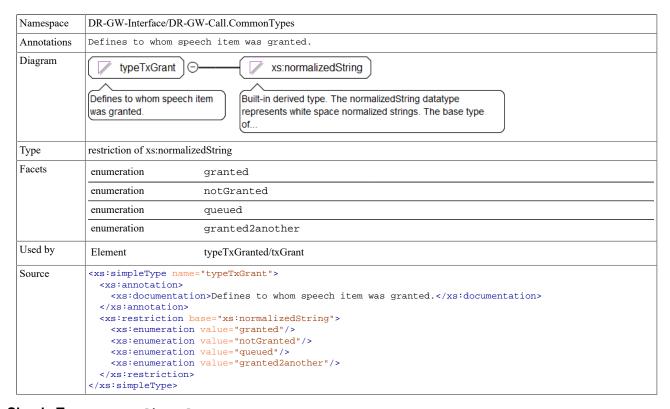

Simple Type typeAudioCodec

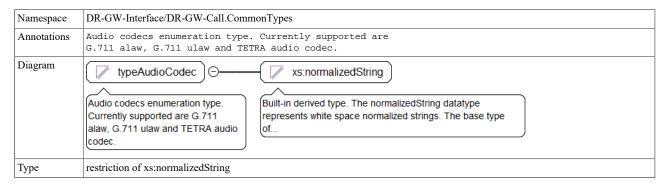

Facets	enumeration	alaw
	enumeration	ulaw
	enumeration	tetra
Source	<pre><xs:simpletype name="typeAudioCodec"></xs:simpletype></pre>	

Simple Type typeKeyExchangeState



Simple Type typeKeyExchangeCode

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes		
Annotations	See "Table 5.3: Status words of the commands" of the E-to-E Encryption SIM-ME Interface (Version 4.0.5) for all possible code values.		
Diagram	typeKeyExchangeCode xs:hexBinary See "Table 5.3: Status words of the commands" of the E-to-E Encryption SIM-ME Interface (Version 4.0.5) for all Built-in primitive type. The hexBinary datatype represents arbitrary hex-encoded binary data.		
Type	restriction of xs:hexBinary		


Simple Type typeKeyExchangeText

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes			
Annotations	The textual information supplied by the BOS-simcard and sent from the DF-Gateway to the DF-client.			
Diagram	The textual information supplied by the BOS-simcard and sent from the DF-Gateway to the DF-client. Xs:normalizedString			
Type	restriction of xs:normalizedString			
Facets	maxLength 100			
Source	<pre><xs:simpletype name="typeKeyExchangeText"></xs:simpletype></pre>			

Simple Type typeKeyExchangeTextPriority

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes		
Annotations	Defines the priority of the KeyExchange information.		
Diagram	typeKeyExchangeTextPriority		
Туре	restriction of xs:normalizedString		
Facets	enumeration normal		
	enumeration high		
Source	<pre><xs:simpletype name="typeKeyExchangeTextPriority"> <xs:annotation></xs:annotation></xs:simpletype></pre>		

Simple Type typeKeyManagementTextPriority

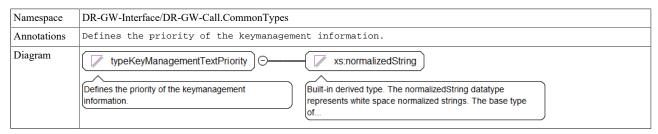

Type	restriction of xs:normalizedString	
Facets	enumeration	normal
	enumeration	high
Source	<pre><xs:simpletype name="typeKeyManagementTextPriority"></xs:simpletype></pre>	

Simple Type typeUnitInEmergencyType

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes		
Annotations	Defines type of the subscriber. Refer to type tcsCallSubscriberType_t of the TCS-API.		
Diagram	Defines type of the sultcsCallSubscriberType	bscriber. Refer to type Built-in derived type. The normalizedString datatype	
Туре	restriction of xs:normalizedString		
Facets	enumeration	dummy	
	enumeration	ms	
	enumeration	g4wif	
	enumeration	external	
	enumeration	ws	
Source	<pre><xs:simpletype name="typeUnitInEmergencyType"></xs:simpletype></pre>		

Simple Type typeEmergencyInfo

Namespace	DR-GW-Interface/DR-GW-Call.CommonTypes		
Annotations	Defines action taken by user in emergency.		
Diagram	typeEmergencyInfo Xs:normalizedString		
Туре	restriction of xs:normalizedString		
Facets	enumeration	addTx	
	enumeration	add	
	enumeration	ceased	
	enumeration	demandTx	
	enumeration	removed	
	enumeration	emergencyCallDisconnected	
Source	<pre><xs:simpletype name="typeEmergencyInfo"></xs:simpletype></pre>		