README.md 10/16/2021

## Lab 4: DANIEL HAVRÁNEK

Link to your Digital-electronics-2 GitHub repository:

https://github.com/Dan5049/Digital-electronic-2

## Overflow times

1. Complete table with overflow times.

Module	Number of bits	1	8	32	64	128	256	1024
Timer/Counter0	8	16u	128u	-	1,024m		4,096m	16,384m
Timer/Counter1	16	4,096m	32,768m	-	262,144m		1,048576	4,194304
Timer/Counter2	8	16u	128u	512u	1,024m	2,048m	4,096m	16,384m

## Timer library


- 1. In your words, describe the difference between common C function and interrupt service routine.
  - Function a group of statements that together perform a task
  - Interrupt service routine when interrupt occurs, the microcontroller runs the ISR, its similar to function, but they are called by occurrence of an interrupt and terminate with a return from interrupt instruction
- 2. Part of the header file listing with syntax highlighting, which defines settings for Timer/Counter0:

```
/**
 * @name Definitions for 8-bit Timer/Counter0
* @note t OVF = 1/F CPU * prescaler * 2^n where n = 8, F CPU = 16 MHz
*/
/** @brief Stop timer, prescaler 000 --> STOP */
#define TIMO_stop()
                      TCCROB &= ~((1<<CSO2) | (1<<CSO1) | (1<<CSOO));
/** @brief Set overflow 16us, prescaler 001 --> 1 */
(1<<CS00);
/** @brief Set overflow 128us, prescaler 010 --> 8 */
#define TIMO_overflow_128us() TCCR0B &= \sim((1<<CS02) | (1<<CS00)); TCCR0B |=
(1<<CS01);
/** @brief Set overflow 1ms, prescaler 011 --> 64 */
#define TIMO_overflow_1ms() TCCR0B \&= \sim((1<<CS02)); TCCR0B |= (1<<CS01) |
(1<<CS00);
/** @brief Set overflow 4ms, prescaler 100 --> 256 */
#define TIMO_overflow_4ms() TCCR0B &= \sim((1<<CS01) | (1<CS00)); TCCR0B |=
(1<<CS02);
/** @brief Set overflow 16ms, prescaler // 101 --> 1024 */
#define TIM0 overflow 16ms() TCCR0B &= \sim(1<<CS01); TCCR0B |= (1<<CS02) |
```

README.md 10/16/2021

```
(1<<CS00);
/** @brief Enable overflow interrupt, 1 --> enable */
#define TIMO_overflow_interrupt_enable()    TIMSKO |= (1<<TOIEO);
/** @brief Disable overflow interrupt, 0 --> disable */
#define TIMO_overflow_interrupt_disable()    TIMSKO &= ~(1<<TOIEO);</pre>
```

3. Flowchart figure for function main() and interrupt service routine ISR(TIMER1\_OVF\_vect) of application that ensures the flashing of one LED in the timer interruption. When the button is pressed, the blinking is faster, when the button is released, it is slower. Use only a timer overflow and not a delay library.

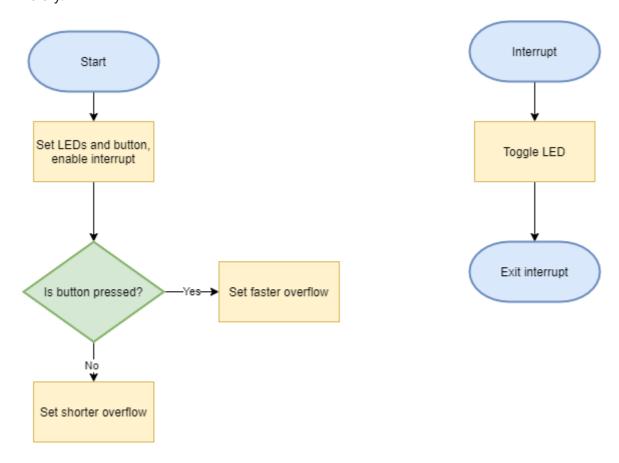

## Knight Rider

1. Scheme of Knight Rider application with four LEDs and a push button, connected according to Multifunction shield. Connect AVR device, LEDs, resistors, push button, and supply voltage. The image can be drawn on a computer or by hand. Always name all components and their values! README.md 10/16/2021

