Labs/03-vivado

GitHub Link

GitHub - Daniel Havránek (Dan5049)

Tables

Connection table - used in multiplexor

Port	Switch/LED	FPGA package pin	FPGA pin
a_i[0]	SW0	J15	IO_L24N_T3_RS0_15
a_i[1]	SW1	L16	IO_L3N_T0_DQS_EMCCLK_14
b_i[0]	SW2	M13	IO_L6N_T0_D08_VREF_14
b_i[1]	SW3	R15	IO_L13N_T2_MRCC_14
c_i[0]	SW4	R17	IO_L12N_T1_MRCC_14
c_i[1]	SW5	T18	IO_L7N_T1_D10_14
d_i[0]	SW6	U18	IO_L17N_T2_A13_D29_14
d_i[1]	SW7	R13	IO_L5N_T0_D07_14
sel_i[0]	SW14	U11	IO_L19N_T3_A09_D25_VREF_14
sel_i[1]	SW15	V10	IO_L21P_T3_DQS_14
f_o[0]	LED0	H17	IO_L18P_T2_A24_15
f_o[1]	LED1	K15	IO_L24P_T3_RS1_15

Connection table - Nexys A7-50T

Switch name	FPGA pin	FPGA package pin
SW[0]	IO_L24N_T3_RS0_15	J15
SW[1]	IO_L3N_T0_DQS_EMCCLK_14	L16
SW[2]	IO_L6N_T0_D08_VREF_14	M13
SW[3]	IO_L13N_T2_MRCC_14	R15
SW[4]	IO_L12N_T1_MRCC_14	R17
SW[5]	IO_L7N_T1_D10_14	T18

Switch name	FPGA pin	FPGA package pin
SW[6]	IO_L17N_T2_A13_D29_14	U18
SW[7]	IO_L5N_T0_D07_14	R13
SW[8]	IO_L24N_T3_34	Т8
SW[9]	IO_25_34	U8
SW[10]	IO_L15P_T2_DQS_RDWR_B_14	R16
SW[11]	IO_L23P_T3_A03_D19_14	T13
SW[12]	IO_L24P_T3_35	Н6
SW[13]	IO_L20P_T3_A08_D24_14	U12
SW[14]	IO_L19N_T3_A09_D25_VREF_14	U11
SW[15]	IO_L21P_T3_DQS_14	V10

LED Name	FPGA pin	FPGA package pin name
LED[0]	IO_L18P_T2_A24_15	H17
LED[1]	IO_L24P_T3_RS1_15	K15
LED[2]	IO_L17N_T2_A25_15	J13
LED[3]	IO_L8P_T1_D11_14	N14
LED[4]	IO_L7P_T1_D09_14	R18
LED[5]	IO_L18N_T2_A11_D27_14	V17
LED[6]	IO_L17P_T2_A14_D30_14	U17
LED[7]	IO_L18P_T2_A12_D28_14	U16
LED[8]	IO_L16N_T2_A15_D31_14	V16
LED[9]	IO_L14N_T2_SRCC_14	T15
LED[10]	IO_L22P_T3_A05_D21_14	U14
LED[11]	IO_L15N_T2_DQS_DOUT_CSO_B_14	T16
LED[12]	IO_L16P_T2_CSI_B_14	V15
LED[13]	IO_L22N_T3_A04_D20_14	V14
LED[14]	IO_L20N_T3_A07_D23_14	V12
LED[15]	IO_L21N_T3_DQS_A06_D22_14	V11

Two-bit wide 4-to-1 multiplexer


VHDL architecture

```
architecture Behavioral of mux_2bit_4to1 is
begin
   f_o <= a_i when (sel_i = "00") else
        b_i when (sel_i = "01") else
        c_i when (sel_i = "10") else
        d_i;
end architecture Behavioral;</pre>
```

VHDL stimulus process

```
p_stimulus : process
   begin
       -- Report a note at the begining of stimulus process
       report "Stimulus process started" severity note;
       s_d \leftarrow 00; s_c \leftarrow 00; s_b \leftarrow 00; s_a \leftarrow 00;
       s_sel <= "00"; wait for 100 ns;</pre>
       s_d <= "10"; s_c <= "01"; s_b <= "01"; s_a <= "00";
       s_sel <= "00"; wait for 100 ns;
       s_d <= "10"; s_c <= "01"; s_b <= "01"; s_a <= "11";
       s_sel <= "00"; wait for 100 ns;
       s_d <= "10"; s_c <= "01"; s_b <= "01"; s_a <= "00";
       s_sel <= "01"; wait for 100 ns;</pre>
       s d <= "10"; s c <= "01"; s b <= "01"; s a <= "00";
       s sel <= "01"; wait for 100 ns;
       wait;
   end process p_stimulus;
```

Simulated waveforms

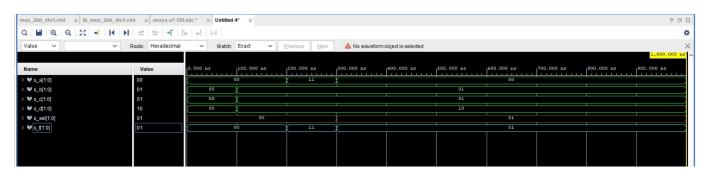

Vivado tutorial

New project

- 1. File project new
- 2. Project name name and location
- 3. Project type RTL Project (others unchecked)
- 4. Add Sources Creat File File type: VHDL, File name: project name, location empty
- 5. Add Constraints empty
- 6. Default Part Board choose board

Add design

- 1. File add source add or create design sources
- 2. Add or Create Design Sources Create File File type: VHDL, File name: project name

Add testbench

- 1. File add source add or create simulation sources
- 2. Add or Create Design Sources Create File File type: VHDL, File name: tb_project name

Add Constraints

- 1. File add sources add or create constraints
- 2. Add or Create Constraints Create File File type: XDC, File name: board name

Simulatiom

1. Flow - Run Simulation - Run Behavioral Simulation