Material Models Used in NairnMPM and NairnFEA

John Nairn

February 10, 2017

Contents

1	Line	ar Elastic Hypoelastic Materials	7			
	1.1	Introduction	7			
	1.2	Plane Stress Equations	7			
	1.3	Plane Strain Equations	8			
	1.4	Rotated Stiffness Equations in 2D MPM	9			
	1.5	Rotated Stiffness Equations in 3D MPM	10			
	1.6	Rotated Stiffness Equations in FEA	10			
	1.7	Two-State Isotropic Material	10			
		1.7.1 Plane Stress Equations	11			
		1.7.2 Plane Strain Equations	11			
		1.7.3 Special Cases for $E = 0$	11			
2	Plas	ticity Materials	13			
	2.1	Introduction	13			
	2.2	J_2 Flow Theory for Isotropic Materials	15			
	2.3	Plane Strain and Axisymmetric Analysis for J_2 Flow Theory, Isotropic Materials	17			
	2.4	Plane Stress Analysis for J_2 Flow Theory, Isotropic Materials	17			
	2.5	3D Analysis for J_2 Flow Theory, Isotropic Materials	20			
	2.6	Examples of J_2 Flow Theory Materials	20			
		2.6.1 VonMises Material with Linear Work Hardening	21			
		2.6.2 VonMises Material with Non-Linear Work Hardening	21			
		2.6.3 VonMises Material with Alternate Non-Linear Work Hardening	21			
		2.6.4 Johnson-Gook	21			
	2.7	Anisotropic 2D Plane Strain and Axisymmetric Analysis - Material Axes	22			
	2.8	Anisotropic 2D Plane Strain and Axisymmetric Analysis - Global Axes	23			
	2.9	Anisotropic 2D Plane Stress Analysis	24			
	2.10	Anisotropic 3D Analysis - Material Axes	24			
	2.11	Anisotropic 3D Analysis - Global Axes	25			
	2.12	Quadratic Hill Criterion - Material Axes	26			
	2.13	Quadratic Hill Criterion - Global Axes	29			
	2.14	More General Plasticity Methods	30			
3	Small Strain Materials with Large Rotation 33					
	3.1	Introduction	33			
	3.2	Analysis in Current Configuration	33			
		3.2.1 Hypoelastic Version	34			
	3.3	Analysis in Current Configuration - OLD METHOD	36			

4 CONTENTS

	3.4	Analysis in Material Axis System	37				
4	Thermodynamics of Deformation 39						
	4.1	Introduction	39				
	4.2	Locally Adiabatic	40				
	4.3	Locally Isothermal	41				
	4.4	Energy Tracking in NairnMPM/OSParticulas	41				
5	Hyn	erelastic Materials	45				
Ŭ	5.1	Introduction	45				
	5.2	Incremental Deformation Gradient	45				
	5.3	Hyperelastic 1D Membrane in a 2D Simulation	48				
	5.4	Hyperelastic 2D Membrane in a 3D Simulation	49				
		••					
	5.5	Membrane Material Tasks	52				
	5.6	Isotopic, Hyperelastic Materials	53				
	5.7	Mooney-Rivlin Material	55				
		5.7.1 Plane Strain, Plane Stress, and Axisymmetric Analysis	56				
		5.7.2 Dealing with Thermal and Moisture Strains	57				
		5.7.3 Alternate Bulk Modulus Term	58				
		5.7.4 Tangent Bulk Modulus	58				
		5.7.5 Tangent Shear Modulus	59				
		5.7.6 Plane Stress Mooney-Rivlin Membrane	60				
		5.7.7 Plane Stress Mooney-Rivlin Membrane — Alternate Approach	60				
		5.7.8 Plane Strain and Axisymmetric Mooney-Rivlin Membrane	61				
		5.7.9 3D Mooney-Rivlin Membrane	62				
	5.8	Neo-Hookean Material	63				
		5.8.1 Tangent Bulk Modulus	64				
		5.8.2 Plane Stress Neo-Hookean Membrane	65				
		5.8.3 Plane Strain and Axisymmetric Neohookean Membrane	66				
		5.8.4 3D Neo-Hookean Membrane	67				
	5.9	Mie-Grüniesen Equation of State	68				
	0.7	5.9.1 Residual Stresses	69				
	5 10	Sotropic Hyperelastic-Plastic Material	70				
		Ideal Gas	71				
	5.11	5.11.1 Verification Examples	73				
		•					
		5.11.2 Isothermal vs. Adiabatic vs. General Constitutive Law	73				
	F 10	5.11.3 Van der Waals Gas Law	74				
	5.12	Disney Snow Model	75				
		5.12.1 Deformation Examples	76				
	5.13	Tait Liquid	77				
6	Viscoelastic Materials 83						
	6.1	Introduction	81				
	6.2	Small Strain, Internal Variables Analysis	81				
	6.3	Final, Small Strain, Incremental Results	82				
	6.4	Alternate Internal Variables	83				

CONTENTS 5

7	Man	nufactured Solutions	85
	7.1	Introduction	85
	7.2	Constrained Uniaxial Tension	85
		7.2.1 Low-Strain, Isotropic Material	86
		7.2.2 Neo-Hookean, Mooney-Rivlin Material	87
		7.2.3 Neo-Hookean Material	87
		7.2.4 Disney Snow Model	88
	7.3	Constrained Uniaxial Tension with Thermal Ramp	88
		7.3.1 Neo-Hookean Material	89
	7.4	Linear Shear	89
		7.4.1 Low-Strain, Isotropic Material	90
		7.4.2 Neo-Hookean, Mooney-Rivlin Material	90
		7.4.3 Neo-Hookean Material	91
		7.4.4 Disney Snow Model	91
	7.5	Linear Acceleration	91
		7.5.1 Low-Strain, Isotropic Material	92
		7.5.2 Neo-Hookean Material	92

6 CONTENTS

Chapter 1

Linear Elastic Hypoelastic Materials

1.1 Introduction

The Isotropic, TransIsotropic, and Orthotropic classes all inherit from the Elastic class and implement linear elastic materials. The constitutive law is in the Elastic class and implemented for an orthotropic material. The isotropic and transversely isotropic materials are special cases of the orthotropic material. In MPM, isotropic materials have a separate constitutive law to enhance efficiency by ignoring terms that only apply to anisotropic materials. For such a material, the 3D stiffness equation in the material axis system is

$$\begin{pmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \sigma_{zz} \\ \tau_{xz} \\ \tau_{yz} \\ \tau_{xy} \end{pmatrix} = \begin{pmatrix} C_{11} & C_{12} & C_{13} & 0 & 0 & 0 \\ C_{12} & C_{22} & C_{23} & 0 & 0 & 0 \\ C_{13} & C_{23} & C_{33} & 0 & 0 & 0 \\ 0 & 0 & 0 & C_{44} & 0 & 0 \\ 0 & 0 & 0 & 0 & C_{55} & 0 \\ 0 & 0 & 0 & 0 & 0 & C_{66} \end{pmatrix} \begin{pmatrix} \varepsilon_{xx} - \varepsilon_{xx}^{(res)} \\ \varepsilon_{yy} - \varepsilon_{yx}^{(res)} \\ \varepsilon_{yy} - \varepsilon_{yy}^{(res)} \\ \varepsilon_{zz} - \varepsilon_{zz}^{(res)} \\ \gamma_{xz} \\ \gamma_{yz} \\ \gamma_{xy} \end{pmatrix}$$
(1.1)

The elements of the **C** matrix can be found from all engineering properties. Where $\varepsilon_{ii}^{(res)}$ are residual strains in the normal directions. Here they may be caused by either thermal expansion or moisture expansion:

$$\begin{pmatrix} \varepsilon_{xx}^{(res)} \\ \varepsilon_{yy}^{(res)} \\ \varepsilon_{zz}^{(res)} \end{pmatrix} = \begin{pmatrix} \alpha_{xx} \Delta T + \beta_{xx} \Delta c \\ \alpha_{yy} \Delta T + \beta_{yy} \Delta c \\ \alpha_{zz} \Delta T + \beta_{zz} \Delta c \end{pmatrix}$$
(1.2)

where α_{ii} and β_{ii} are thermal and moisture expansion coefficients, and ΔT and Δc are temperature and moisture change from reference conditions. FEA has only thermal expansion while MPM may have both thermal and moisture expansion.

1.2 Plane Stress Equations

The plane stress stiffness equations for in-plane stresses are

$$\begin{pmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \end{pmatrix} = \begin{pmatrix} Q_{xx} & Q_{xy} & 0 \\ Q_{xy} & Q_{yy} & 0 \\ 0 & 0 & Q_{xyxy} \end{pmatrix} \begin{pmatrix} \varepsilon_{xx} - \varepsilon_{xx}^{(res)} \\ \varepsilon_{yy} - \varepsilon_{yy}^{(res)} \\ \gamma_{xy} \end{pmatrix}$$
(1.3)

The elements of the **Q** matrix are found from

$$Q_{xx} = C_{11} - \frac{C_{13}^2}{C_{33}} = \frac{E_{xx}}{1 - \nu_{xy} \nu_{yx}}$$
 (1.4)

$$Q_{yy} = C_{22} - \frac{C_{23}^2}{C_{33}} = \frac{E_{yy}}{1 - \nu_{xy} \nu_{yx}}$$
 (1.5)

$$Q_{xy} = C_{12} - \frac{C_{13}C_{23}}{C_{33}} = \frac{E_{xx}\nu_{yx}}{1 - \nu_{xy}\nu_{yx}} = \frac{E_{yy}\nu_{xy}}{1 - \nu_{xy}\nu_{yx}}$$
(1.6)

$$Q_{xyxy} = G_{xy} (1.7)$$

These elements are calculated in SetAnalysisProps() as C11 = Q_{xx} , C12 = Q_{xy} , C22 = Q_{yy} , and C66 = Q_{xyxy} . The thermal and moisture expansion coefficients are equal to the material thermal and moisture expansion coefficients and set as CTE1 = α_{xx} , CTE2 = α_{yy} , CME1 = β_{xx} , and CME2 = β_{yy} , also in SetAnalysisProps().

In plane stress analysis, $\sigma_{zz}=0$, but $\varepsilon_{zz}\neq0$. The out-of-plane strain is found from the 3D stiffness matrix by solving the σ_{zz} equation for ε_{zz} :

$$\varepsilon_{zz} = -\frac{C_{13}}{C_{33}} (\varepsilon_{xx} - \varepsilon_{xx}^{(res)}) - \frac{C_{23}}{C_{33}} (\varepsilon_{yy} - \varepsilon_{yy}^{(res)}) + \varepsilon_{zz}^{(res)}$$

$$(1.8)$$

The new terms are set in SetAnalysisProps() as C13 = $-C_{13}/C_{33}$, C23 = $-C_{23}/C_{33}$, CTE3 = α_{zz} , and CME3 = β_{zz} .

1.3 Plane Strain Equations

The plane strain stiffness equations for in-plane stresses are

$$\begin{pmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \end{pmatrix} = \begin{pmatrix} C_{11} & C_{12} & 0 \\ C_{12} & C_{22} & 0 \\ 0 & 0 & C_{66} \end{pmatrix} \begin{pmatrix} \varepsilon_{xx} - \varepsilon_{xx}^{(res,r)} \\ \varepsilon_{yy} - \varepsilon_{yy}^{(res,r)} \\ \gamma_{xy} \end{pmatrix}$$
(1.9)

where residual strains now depend on reduced residual strains

$$\begin{pmatrix} \varepsilon_{\chi\chi}^{(res,r)} \\ \varepsilon_{\gamma\gamma}^{(res,r)} \end{pmatrix} = \begin{pmatrix} \varepsilon_{\chi\chi}^{(res)} + \nu_{z\chi}\varepsilon_{zz}^{(res)} \\ \varepsilon_{\gamma\gamma}^{(res)} + \nu_{z\gamma}\varepsilon_{zz}^{(res)} \end{pmatrix}$$
(1.10)

which is equivalent to using reduced expansion properties

$$\begin{pmatrix} \varepsilon_{xx}^{(res,r)} \\ \varepsilon_{yy}^{(res,r)} \end{pmatrix} = \begin{pmatrix} \alpha_{xx}^{(r)} \Delta T + \beta_{xx}^{(r)} \Delta c \\ \alpha_{yy}^{(r)} \Delta T + \beta_{xx}^{(r)} \Delta c \end{pmatrix}$$
 (1.11)

The reduced expansion coefficients are

$$\alpha_{xx}^{(r)} = \alpha_{xx} + \nu_{zx}\alpha_{zz}, \quad \alpha_{yy}^{(r)} = \alpha_{yy} + \nu_{zy}\alpha_{zz}, \quad \beta_{xx}^{(r)} = \beta_{xx} + \nu_{zx}\beta_{zz}, \quad \beta_{yy}^{(r)} = \beta_{yy} + \nu_{zy}\beta_{zz}$$
 (1.12)

These elements are calculated in SetAnalysisProps() as C11 = C_{11} , C12 = C_{12} , C22 = C_{22} , and C66 = C_{66} . The reduced expansion coefficients are set as CTE1 = $\alpha_{xx}^{(r)}$, CTE2 = $\alpha_{yy}^{(r)}$, CME1 = $\beta_{xx}^{(r)}$, and CME2 = $\beta_{yy}^{(r)}$, also in SetAnalysisProps().

In plane strain analysis, $\varepsilon_{zz} = 0$, but $\sigma_{zz} \neq 0$. The out-of-plane stress is found from the 3D stiffness matrix by setting $\varepsilon_{zz} = 0$:

$$\sigma_{zz} = C_{13} \left(\varepsilon_{xx} - (\alpha_{xx}^{(r)} - \nu_{zx} \alpha_{zz}) \Delta T - (\beta_{xx}^{(r)} - \nu_{zx} \beta_{zz}) \Delta c \right)$$

$$+ C_{23} \left(\varepsilon_{yy} - (\alpha_{yy}^{(r)} - \nu_{zy} \alpha_{zz}) \Delta T - (\beta_{yy}^{(r)} - \nu_{zy} \beta_{zz}) \Delta c \right) - C_{33} \varepsilon_{zz}^{(res)}$$

$$(1.13)$$

The new terms are set in SetAnalysisProps() as C13 = C_{13} , C23 = C_{23} , and C33 = C_{33} . Notice that this equation needs actual residual expansion coefficients and thus the reduced expansion coefficients must be *unreduced* by subtracting terms. For these calculations (more details in next section), the following expansion properties are set as CTE3 = α_{zz} , CME3 = β_{zz} , prop1 = ν_{zx} , and prop2 = ν_{zy} .

1.4 Rotated Stiffness Equations in 2D MPM

For orthotropic materials with material angle not zero, the stiffness equations must be rotated counter-clockwise by the material point angle to transpose to the analysis coordinate systems. The initial material point angle is stored for anisotropic materials. To account for large rotations, the total angle from material axes to current axes must be found by polar decomposition of \mathbf{F} (which can find $\sin\theta$ and $\cos\theta$ easily in 2D). Thus prior to calling MPMConstitutiveLaw(), the equations are rotated (if needed) to obtain:

$$\begin{pmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \end{pmatrix} = \begin{pmatrix} C[1][1] & C[1][2] & C[1][3] \\ C[1][2] & C[2][2] & C[2][3] \\ C[1][3] & C[2][3] & C[3][3] \end{pmatrix} \begin{pmatrix} \varepsilon_{xx} - \varepsilon_{xx}^{(res)} \\ \varepsilon_{yy} - \varepsilon_{yy}^{(res)} \\ \gamma_{xx} - \varepsilon_{xy}^{(res)} \end{pmatrix}$$
 (1.14)

where the rotated residual strains (which become reduced residual strains when in plane strain) are

$$\begin{pmatrix} \varepsilon_{xx}^{(res)} \\ \varepsilon_{yy}^{(res)} \\ \varepsilon_{xy}^{(res)} \end{pmatrix} = \begin{pmatrix} \text{alpha}[1]\Delta T + \text{beta}[1]\Delta c \\ \text{alpha}[2]\Delta T + \text{beta}[2]\Delta c \\ \text{alpha}[3]\Delta T + \text{beta}[3]\Delta c \end{pmatrix}$$
 (1.15)

The rotated elements are found by standard in-plane rotation in the counter-clockwise direction in FillElasticProperties2D(). Rotation is only needed for anistotropic materials and thus this method is in the TransIsotropic class, which is parent to all anisotropic materials. For isotropic materials, the C[][], alpha[], and beta[] elements are calculated once for zero rotation angle in FillUnrotated-ElasticProperties(). For MPM, the elements of C[][] are also made specific by dividing by material density. The constitutive law should only use specific properties to have the proper specific stress.

Calculation of out-of-plane values requires rotation of the 3D stiffness matrix counter-clockwise around the z axis. The results for plane stress are

$$\varepsilon_{zz} = C[4][1](\varepsilon_{xx} - \varepsilon_{xx}^{(res)}) + C[4][2](\varepsilon_{yy} - \varepsilon_{yy}^{(res)}) + C[4][3](\gamma_{xy} - \varepsilon_{xy}^{(res)}) + \varepsilon_{zz}^{(res)}$$

$$(1.16)$$

where

$$C[4][1] = -\left(\frac{C_{13}}{C_{33}}\cos^2\theta + \frac{C_{23}}{C_{33}}\sin^2\theta\right) = C13\cos^2\theta + C23\sin^2\theta \tag{1.17}$$

$$C[4][2] = -\left(\frac{C_{13}}{C_{33}}\sin^2\theta + \frac{C_{23}}{C_{33}}\cos^2\theta\right) = C13\sin^2\theta + C23\cos^2\theta \tag{1.18}$$

$$C[4][3] = \left(\frac{C_{13}}{C_{33}} - \frac{C_{23}}{C_{33}}\right) \sin\theta \cos\theta = -(C13 - C23) \sin\theta \cos\theta \tag{1.19}$$

and CTE3 = alpha [4] = α_{zz} and CME3 = beta [4] = β_{zz} hold out-of-plane thermal expansion coefficients needed to find $\varepsilon_{zz}^{(res)}$, which was defined earlier.

The problem in plane strain is that the calculation of σ_{zz} requires rotated expansion coefficients while the alpha[1] to alpha[3] and beta[1] to beta[3] have rotated reduced expansion coefficients. The solution is to define some new terms such that

$$\begin{split} \sigma_{zz} &= \text{C[4][1]}(\varepsilon_{xx} - (\varepsilon_{xx}^{(res,r)} - \text{alpha[5]}\varepsilon_{zz}^{(res)})) + \text{C[4][2]}(\varepsilon_{yy} - (\varepsilon_{yy}^{(res,r)} - \text{alpha[6]}\varepsilon_{zz}^{(res)})) \\ &+ \text{C[4][3]}(\gamma_{xx} - (\varepsilon_{xy}^{(res,r)} - \text{alpha[7]}\varepsilon_{zz}^{(res)})) - \text{C[4][4]}\varepsilon_{zz}^{(res)} \end{split} \tag{1.20}$$

where

$$\rho \,C[4][1] = C_{13}\cos^2\theta + C_{23}\sin^2\theta = C13\cos^2\theta + C23\sin^2\theta \tag{1.21}$$

$$\rho \,C[4][2] = C_{13}\sin^2\theta + C_{23}\cos^2\theta = C13\sin^2\theta + C23\cos^2\theta \tag{1.22}$$

$$\rho \,C[4][3] = -(C_{13} - C_{23})\sin\theta\cos\theta = -(C13 - C23)\sin\theta\cos\theta \qquad (1.23)$$

$$\rho \, \mathbb{C}[4][4] = C_{33} \tag{1.24}$$

$$alpha[5] = v_{xx} \cos^2 \theta + v_{xy} \sin^2 \theta = prop1 \cos^2 \theta + prop2 \sin^2 \theta$$
 (1.25)

$$alpha[6] = v_{zx} \sin^2 \theta + v_{zy} \cos^2 \theta = prop1 \sin^2 \theta + prop2 \cos^2 \theta$$
 (1.26)

$$alpha[7] = -2(v_{zx} - v_{zy})\sin\theta\cos\theta = -2(prop1 - prop2)\sin\theta\cos\theta \qquad (1.27)$$

Again, CTE3 = alpha[4] = α_{zz} and CME3 = beta[4] = β_{zz} hold out-of-plane expansion coefficients needed to find $\varepsilon_{zz}^{(res)}$, which was defined earlier. In these terms, $\varepsilon_{xx}^{(res,r)}$ - alpha[5] $\varepsilon_{zz}^{(res)}$ (and similarly for (yy, 6) and (xy, 7) pairs) evaluate to the rotated, but unreduced expansion strains.

1.5 Rotated Stiffness Equations in 3D MPM

To be added.

1.6 Rotated Stiffness Equations in FEA

To be added.

1.7 Two-State Isotropic Material

The BistableIsotropic class inherits from Isotropic. It allows two different isotropic states and transitions between the states based on various criteria. The two options are to have a jump to a new linear stress-strain curve (DILATION_RULE) or to simply change the slope (DISTORTION_RULE or VONMISES_RULE). When jumping to a new curve (DILATION_RULE), the deformed state can additionally define a new origin by adding an offset volumetric strain. The only new calculations needed are to change properties when a transition occurs and if there is a new stress-strain curve to calculate a jump in stresses to the new curve. The 3D stiffness equations with an offset volumetric strain for an isotropic material are

$$\begin{pmatrix}
\sigma_{xx} \\
\sigma_{yy} \\
\sigma_{zz} \\
\tau_{xz} \\
\tau_{yz} \\
\tau_{xy}
\end{pmatrix} = \begin{pmatrix}
C_{11} & C_{12} & C_{12} & 0 & 0 & 0 \\
C_{12} & C_{11} & C_{12} & 0 & 0 & 0 \\
C_{12} & C_{11} & C_{12} & 0 & 0 & 0 \\
0 & 0 & 0 & C_{66} & 0 & 0 \\
0 & 0 & 0 & 0 & C_{66} & 0 \\
0 & 0 & 0 & 0 & 0 & C_{66}
\end{pmatrix} \begin{pmatrix}
\varepsilon_{xx} - \frac{\Delta}{3} - \varepsilon^{(res)} \\
\varepsilon_{yy} - \frac{\Delta}{3} - \varepsilon^{(res)} \\
\varepsilon_{yy} - \frac{\Delta}{3} - \varepsilon^{(res)} \\
\varepsilon_{zz} - \frac{\Delta}{3} - \varepsilon^{(res)} \\
\gamma_{xz} \\
\gamma_{yz} \\
\gamma_{xy}
\end{pmatrix} \tag{1.28}$$

where $\varepsilon^{(res)} = \alpha \Delta T + \beta \Delta c$. Whenever a change in state occurs in the DILATION_RULE, these equations must be used to recalculate all components of stress.

1.7.1 Plane Stress Equations

The plane stress stiffness equations for in-plane stresses are

$$\begin{pmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \end{pmatrix} = \begin{pmatrix} Q_{xx} & Q_{xy} & 0 \\ Q_{xy} & Q_{xx} & 0 \\ 0 & 0 & Q_{xyxy} \end{pmatrix} \begin{pmatrix} \varepsilon_{xx} - \frac{\Delta}{3} - \varepsilon^{(res)} \\ \varepsilon_{yy} - \frac{\Delta}{3} - \varepsilon^{(res)} \\ \gamma_{xx} \end{pmatrix}$$
(1.29)

with out-of-plane strain given by

$$\varepsilon_{zz} = -\frac{C_{12}}{C_{11}} (\varepsilon_{xx} - \frac{\Delta}{3} - \varepsilon^{(res)}) - \frac{C_{12}}{C_{11}} (\varepsilon_{yy} - \frac{\Delta}{3} - \varepsilon^{(res)}) + \frac{\Delta}{3} + \varepsilon^{(res)}$$

$$\tag{1.30}$$

For the super-class Isotropic material, the needed terms are stored as C[1][1] = C[2][2] = Q_{xx}/ρ , C[1][2] = Q_{xy}/ρ , C[3][3] = Q_{xyxy}/ρ , C[4][1] = C[4][2] = $-C_{12}/C_{11}$, alpha[1] = alpha[2] = alpha[4] = CTE3 = α , beta[1] = beta[2] = beta[4] = CME3 = β , C[1][3] = C[2][3] = alpha[3] = beta[3] = 0, and normOffset = $\Delta/3$.

1.7.2 Plane Strain Equations

The plane strain stiffness equations for in-plane stresses are

$$\begin{pmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \end{pmatrix} = \begin{pmatrix} C_{11} & C_{12} & 0 \\ C_{12} & C_{11} & 0 \\ 0 & 0 & C_{66} \end{pmatrix} \begin{pmatrix} \varepsilon_{xx} - \frac{\Delta}{3}(1+\nu) - \varepsilon^{(res,r)} \\ \varepsilon_{yy} - \frac{\Delta}{3}(1+\nu) - \varepsilon^{(res,r)} \\ \gamma_{xx} \end{pmatrix}$$
(1.31)

where $\varepsilon^{(res,r)} = \alpha^{(r)} \Delta T + \beta^{(r)} \Delta c$. In other words, a reduced offset and residual strains are needed. The out-of-plane stress is found from 3D equation and without reduced terms:

$$\sigma_{zz} = C_{12} \left(\varepsilon_{xx} - \frac{\Delta}{3} - \varepsilon^{(res)} \right) + C_{12} \left(\varepsilon_{yy} - \frac{\Delta}{3} - \varepsilon^{(res)} \Delta T \right) - C_{11} \left(\frac{\Delta}{3} + \varepsilon^{(res)} \right)$$
(1.32)

For the super-class Isotropic material, the needed terms are stored as C[1][1] = C[2][2] = C[4][4] = C_{11}/ρ , C[1][2] = C_{12}/ρ , C[3][3] = C_{66}/ρ , C[4][1] = C[4][2] = C_{12}/ρ , alpha[1] = alpha[2] = $\alpha(1+\nu)$, beta[1] = beta[2] = $\beta(1+\nu)$, alpha[4] = CTE3 = α , beta[4] = CME3 = β , alpha[5] = alpha[6] = ν , C[1][3] = C[2][3] = C[4][3] = alpha[3] = alpha[7] = 0, normOffset = $\Delta/3$, and nu = ν .

1.7.3 Special Cases for E=0

If either K or G in any state is zero then the tensile modulus E is also zero. Although this state is easy to derive in theory, in practice, it rarely gives useful results in dynamic MPM (except maybe as an inclusion in a composite material). A second problem is that it requires special cases to make it work with the super Isotropic class because that class has equations requiring $E \neq 0$. For these reasons, NairnMPM does not support zero modulus states in this material. It is easy to approximate such a state simply by setting K and/or G to a very small number.

Chapter 2

Plasticity Materials

2.1 Introduction

For general analysis, begin with an elastic stress increment, $d\sigma$, given by

$$d\sigma = \mathbf{C}d\varepsilon_{tot} \tag{2.1}$$

where **C** is the stiffness matrix, $d\boldsymbol{\varepsilon}_{tot} = d\boldsymbol{\varepsilon} - d\boldsymbol{\varepsilon}_{res}$ is total strain increment (using tensorial strains) relative to the residual strain increments. Let $f(\boldsymbol{\sigma}, \boldsymbol{q})$ be a plastic potential function that depends on components of stress, possibly on some collection of internal variables (\boldsymbol{q}) or other parameters. The potential function is defined such that f=0 is the yield surface, f<0 is the elastic region, and f>0 is not allowed.

First construct a trial update that assumes elastic deformation only or assumes that $d\varepsilon_e = d\varepsilon_{tot}$, $d\varepsilon_p = 0$, and $d\mathbf{q} = 0$ (in other words, no plastic deformation). The trial f is given by

$$f_{trial} = f(\boldsymbol{\sigma} + d\boldsymbol{\sigma}, \boldsymbol{q}) = f(\boldsymbol{\sigma} + \mathbf{C}d\boldsymbol{\varepsilon}_{tot}, \boldsymbol{q})$$
(2.2)

If f_{trial} < 0, the deformation is elastic, the trial increment is accepted, and the analysis is done.

If $f_{trial} > 0$, the task is to partition the total strain into elastic and plastic strain, $d\varepsilon_{tot} = d\varepsilon_e + d\varepsilon_p$, such that the final f is zero. In other words, the task is to solve

$$f(\boldsymbol{\sigma} + \mathbf{C}d\boldsymbol{\varepsilon}_{tot} - \mathbf{C}d\boldsymbol{\varepsilon}_{p}, \boldsymbol{q} + d\boldsymbol{q}) = 0$$
(2.3)

By the associative flow rule, the increment in tensorial plastic strain and internal variables are assumed to be

$$d\varepsilon_p = \lambda df$$
 and $d\mathbf{q} = -\lambda \mathbf{h}(\sigma, \mathbf{q})$ (2.4)

where

$$df_i = \frac{\partial f}{\partial \sigma_i} \tag{2.5}$$

are the derivatives of f with respect to the components of stress and the internal variables and h is function of stress and internal variable state). Thus, the task is to solve

$$f(\boldsymbol{\sigma} + \mathbf{C}d\boldsymbol{\varepsilon}_{tot} - \lambda \mathbf{C}d\boldsymbol{f}, \boldsymbol{q} - \lambda \boldsymbol{h}) = 0$$
(2.6)

for λ . For arbitrary f, this solution may require numerical analysis.

If all increments are small, and f depends only on stress and internal variables, the problem can be expanded around f_{trial} in a Taylor series to give

$$f = f_{trial} - \lambda \left(df \cdot \mathbf{C} df + df^q \cdot \mathbf{h} \right) \tag{2.7}$$

where

$$df_i^q = \frac{\partial f}{\partial q_i} \tag{2.8}$$

Setting the new f to zero to land on the yield surface, this equation can be solved for λ and thus solved to partition the strain increment into elastic and plastic strain. The solution is

$$\lambda = \frac{f_{trial}}{d\mathbf{f} \cdot \mathbf{C}d\mathbf{f} + d\mathbf{f}^q \cdot \mathbf{h}}$$
 (2.9)

For larger increments or more accurate solution, the problem can be solved iteratively by Newton's method with bracketing. The following method can be greatly simplified is the yield criterion is a function only of J_2 , which only makes sense for isotropic materials. The J_2 methods are given below. The following method is a general scheme.

1. Set up an initial range with $\lambda^{(1)} = 0$ and $f^{(1)} = f_{trial}$ and initial guess for $\lambda^{(2)} = \lambda$ from Eq. (2.9). The stress corresponding to $\lambda^{(2)}$ is found by solving

$$\boldsymbol{\sigma}^{(2)} = \boldsymbol{\sigma}_{trial} - \lambda^{(2)} \mathbf{C} df(\boldsymbol{\sigma}^{(2)})$$
 (2.10)

and then finding $f^{(2)}$. The method to find $\sigma^{(2)}$ is given below. It has to be done numerical because df depends on $\sigma^{(2)}$. This issue is the main reason for the dominate use of J_2 plasticity because for that special case, df is independent of λ .

- 2. Bracket the solution. If $f^{(2)} < 0$, the solution is between 0 and $\lambda^{(2)}$. If not, have to pick second limit and then expand in either direction until solution is bracketed. The algorithm looks for non-solutions, such as local minimum, as well. When done, order the brackets as needed for Newton-Raphson method with bracketing.
- 3. Solve for λ using Newton-Raphson method with derivatives and bracketing following rtsafe() in "Numerical Recipes in C" (page 273). Whenever needed, find f and its derivative from

$$\boldsymbol{\sigma}^{(k)} = \boldsymbol{\sigma}_{trial} - \lambda^{(k)} \mathbf{C} df(\boldsymbol{\sigma}^{(k)})$$
 (2.11)

$$q^{(k)} = q^{(0)} - \lambda^{(k)} h(\sigma^{(k)})$$
 (2.12)

$$f^{(k)} = f(\sigma^{(k)}, q^{(k)})$$
 (2.13)

$$\frac{df^{(k)}}{d\lambda} = -\left(df(\boldsymbol{\sigma}^{(k)}) \cdot \mathbf{C}df(\boldsymbol{\sigma}^{(k)}) + df^{q}(\boldsymbol{\alpha}^{(k)}) \cdot \boldsymbol{h}(\boldsymbol{\sigma}^{(k)})\right)$$
(2.14)

Finding the $\sigma^{(k)}$ requires an iterative method:

1. Find stress using slopes based on σ_{trial} and then an improved stress using slopes based on the first guess

$$\boldsymbol{\sigma}^{(1)} = \boldsymbol{\sigma}_{trial} - \lambda^{(k)} \mathbf{C} df(\boldsymbol{\sigma}_{trial}) \tag{2.15}$$

$$\boldsymbol{\sigma}^{(2)} = \boldsymbol{\sigma}_{trial} - \lambda^{(k)} \mathbf{C} df(\boldsymbol{\sigma}^{(1)})$$
 (2.16)

and set n = 1.

2. Calculate a normalized difference step *n*:

$$\Delta = \frac{\|\boldsymbol{\sigma}^{(n+1)} - \boldsymbol{\sigma}^{(n)}\|}{\|\boldsymbol{\sigma}_{trial}\|}$$
(2.17)

Use $\sigma^{(n+1)}$ if Δ is sufficiently small (e.g., $< 10^{-12}$).

3. if not done, increment *n* and find

$$\boldsymbol{\sigma}^{(n+1)} = \boldsymbol{\sigma}_{trial} - \lambda^{(k)} \mathbf{C} df(\boldsymbol{\sigma}^{(n)})$$
 (2.18)

2.2 J_2 Flow Theory for Isotropic Materials

For a special case, consider an isotropic material with isotropic hardening, a single internal variable, α , and assume the plastic potential is a function only of $J_2 = (1/2) \|\mathbf{s}\|^2$ expressed as

$$f = \|\mathbf{s}\| - \sqrt{\frac{2}{3}}K(\alpha) = \|\mathbf{s}\| - \sqrt{\frac{2}{3}}(\sigma_y - q)$$
 (2.19)

where **s** is the deviatoric stress tensor and $K(\alpha)$ defines the tensile yield stress as a function of the hardening variable and possibly other variables (*e.g.*, plastic strain rate or temperature, but not pressure). The plastic variables q and α are related by

$$q = \sigma_{v} - K(\alpha) \tag{2.20}$$

The usual assumption is to take

$$d\alpha = \lambda \sqrt{\frac{2}{3}}$$
 which implies $dq = -\lambda K'(\alpha) \sqrt{\frac{2}{3}}$ and $h = K'(\alpha) \sqrt{\frac{2}{3}}$ (2.21)

All materials that fit this mold are handled in NairnMPM by the IsoPlasticity class. The implementation of hardening law $(K(\alpha))$ is handled by a separate subclass of the HardeningLawBase class. Combining IsoPlasticity class with various hardening laws gives a series of materials. The only materials that need to subclass IsoPlasticity is if they need a different equation of state to handle elastic parts differently.

In terms of the deviatoric stress

$$2J_2 = \|\mathbf{s}\|^2 = s_{xx}^2 + s_{yy}^2 + s_{zz}^2 + 2s_{xy}^2 + 2s_{xz}^2 + 2s_{yz}^2$$
 (2.22)

During plastic deformation, the plastic strain increment simplifies to

$$\lambda df = \lambda \frac{\mathbf{s}_{trial}}{\|\mathbf{s}_{trial}\|} = \lambda \mathbf{n}$$
 (2.23)

where \mathbf{s}_{trial} is the deviatoric stress calculated by assuming no plastic deformation. Since $||d\boldsymbol{\varepsilon}_p|| = ||\lambda d\boldsymbol{f}|| = \lambda$, this assumption corresponds to

$$d\alpha = \sqrt{\frac{2}{3}} \|d\boldsymbol{\varepsilon}_p\| \tag{2.24}$$

where $\sqrt{\frac{2}{3}}\|d\boldsymbol{\varepsilon}_p\|$ is known as the equivalent plastic strain increment. In other words, α is the cumulative equivalent plastic strain. During uniaxial plastic deformation, the equivalent plastic strain will equal the axial plastic strain (i.e. when $d\varepsilon_{xx}=d\varepsilon$ and $d\varepsilon_{yy}=d\varepsilon_{zz}=-d\varepsilon/2$, $\sqrt{\frac{2}{3}}\|d\boldsymbol{\varepsilon}_p\|=d\varepsilon$).

Once λ is known, the final deviatoric stress is written as

$$\mathbf{s} = \mathbf{s}_{trial} - \lambda 2G\mathbf{n} = \left(1 - \frac{\lambda 2G}{\|\mathbf{s}_{trial}\|}\right) \mathbf{s}_{trial}$$
(2.25)

which by using leads to $\mathbf{s}_{trial} \cdot \mathbf{s}_{trial} = \|\mathbf{s}_{trial}\|^2$, $\mathbf{s}_{trial} \cdot \mathbf{n} = \|\mathbf{s}_{trial}\|$, and $\mathbf{n} \cdot \mathbf{n} = 1$, leads to

$$\|\mathbf{s}\| = \|\mathbf{s}_{trial}\| - \lambda 2G$$
 and $\frac{\mathbf{s}}{\|\mathbf{s}\|} = \frac{\mathbf{s}_{trial}}{\|\mathbf{s}_{trial}\|}$ (2.26)

The required equation for finding λ thus simplifies to depend only on $\|\mathbf{s}_{trial}\|$, G, and hardening law:

$$f^{(k)} = \|\mathbf{s}\| - \sqrt{\frac{2}{3}}K(\alpha^{(k)}) = \|\mathbf{s}_{trial}\| - \lambda^{(k)}2G - \sqrt{\frac{2}{3}}K(\alpha^{(k)}) = 0$$
 (2.27)

This can be solved in the iterative method above with the specific results of:

$$\frac{df^{(k)}}{d\lambda} = -2G - \sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = -2G - \frac{2K'(\alpha^{(k)})}{3}$$
 (2.28)

$$\alpha^{(k+1)} = \alpha^0 + \lambda^{(k+1)} \sqrt{\frac{2}{3}}$$
 (2.29)

where $K'(\alpha^{(k)})$ is the derivative with respect to α . This solution is implemented by hardening law classes. The HardeningLawBase class solves this equation numerically by having a subclass providing for calculation of $K(\alpha^{(k)})$ (in GetYield()) and $\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda}$ (in GetKPrime()). The base class uses Newton's method with bracketing; the bracketing is needed because some yield functions are unstable by the unbracketed Newton's method. The solution is done in SolveForLambdaBracketed() as follows:

- 1. The result for $\lambda = 0$ is known to have f > 0.
- 2. Set the plastic strain rate $d\alpha/dt$ to $1~{\rm sec}^{-1}$ where dt is time step and then trial $\lambda = d\alpha/\sqrt{2/3}$.
- 3. Evaluate f; if it is negative, λ is between current value and previous order of magnitude; if it is positive, increase the strain rate by a factor or 10 and go back to beginning of this step.

If any subclass hardening law can bracket the solution faster (or find the solution with an unbracketed method), it can override SolveForLambdaBracketed() and provide a new method (which may be as simple as calling the unbracketed method in SolveForLambda() or devising a better bracketing method in BracketSolution()). For example, for a linear hardening law, λ can be found in a closed-form expression — when $K(\alpha) = \sigma_Y + E_p \alpha$, the task is to solve

$$f = \|\mathbf{s}_{trial}\| - \lambda 2G - \sqrt{\frac{2}{3}} \left(\sigma_Y + E_p \left(\alpha^0 + \lambda \sqrt{\frac{2}{3}}\right)\right) = 0$$
 (2.30)

The analytical solution is

$$\lambda = \frac{\|\mathbf{s}_{trial}\| - \sqrt{\frac{2}{3}} \left(\sigma_Y + E_p \alpha^0\right)}{2G + \frac{2E_p}{3}}$$
(2.31)

2.3 Plane Strain and Axisymmetric Analysis for J_2 Flow Theory, Isotropic Materials

Plane strain and axisymmetric analysis can follow the above analysis. For isotropic material models, it is convenient to formulate in terms of bulk and shear moduli (*K* and *G*) and track pressure and deviatoric stress. The stress update is

$$\frac{\Delta V}{V} = d\varepsilon_{xx} + d\varepsilon_{yy} + d\varepsilon_{zz} - 3d\varepsilon^{(res)}$$
 (2.32)

$$dP = -K\frac{\Delta V}{V} \tag{2.33}$$

$$ds_{ij}^{trial} = 2G\left(d\varepsilon_{ij}^{(tot)} - \frac{\Delta V}{3V}\right)$$
 for $i = j = x, y, z$ (2.34)

$$d\tau_{xy} = ds_{xy} = Gd\gamma_{xy} \tag{2.35}$$

(2.36)

where

$$d\varepsilon_{xx}^{(tot)} = d\varepsilon_{xx} - d\varepsilon^{(res)}, \quad d\varepsilon_{yy}^{(tot)} = d\varepsilon_{yy} - d\varepsilon^{(res)}, \quad \text{and} \quad d\varepsilon_{zz}^{(tot)} = d\varepsilon_{zz} - d\varepsilon^{(res)}$$
 (2.37)

are the strain increments relative to the increment in residual strain (note that in plane strain, $d\varepsilon_{zz} = 0$, but it may be nonzero when axisymmetric). For isotropic materials, only normal residual strains exist and they are all equal to

$$d\varepsilon^{(res)} = \alpha \Delta T + \beta \Delta c \tag{2.38}$$

If the updated stress has f < 0, the analysis uses the new stress state.

If f > 0, the equations in the previous section are used to find λ . Once λ is known, the initial update is modified using

$$ds_{ij} = ds_{ij}^{trial} - 2Gd\varepsilon_{ij}^{p}$$
(2.39)

while the pressure update is unchanged. By including σ_{zz} in the calculations, the out-of-plane stress is correctly updated. In general, the plastic strain will include plastic strain in the z direction, even in plane strain. To keep zero total strain when in plane strain analysis, the out-of-plane elastic strain update will be

$$d\varepsilon_{ij}^e = -d\varepsilon_{ij}^p \tag{2.40}$$

For the IsoPlasticity class, K = Kred, G = Gred, $\alpha = \text{CTE3}$, and $\beta = \text{CME3}$. The default implementation assumes these are constant and they are calculated once in VeriofyAndLoadProperties(). A subclass can implement non-linear materials two ways. To let K, G, α , and β , depend on particle state, calculate their state-dependent values in LoadMechanicalProps() and/or GetTransportProps(). An alternative approach for more complicated materials is to replace the pressure calculation by overriding UpdatePressure(). This method is called after finding $\Delta V/V$, but before any other calculations. It must update the particle pressure and particle strain energy due to dilation. It should also calculate G (in Gred) if it depends on particle state. It need not calculate K (in Kred) because it is not needed after new pressure is found.

2.4 Plane Stress Analysis for J_2 Flow Theory, Isotropic Materials

Unfortunately, plane stress analysis requires some additional steps and always requires numerical solution for λ . First, by requiring $\sigma_{zz} = 0$, the 3D equations can be solved to show

$$d\varepsilon_{zz}^{(tot)} = -\frac{v}{1-v} \left(d\varepsilon_{xx}^{(tot)} + d\varepsilon_{yy}^{(tot)} \right)$$
 (2.41)

Using this relation, the stress update for the in-plane terms only are

$$\frac{\Delta V}{V} = d\varepsilon_{xx}^{(tot)} + d\varepsilon_{yy}^{(tot)} + d\varepsilon_{zz}^{(tot)} = \left(\frac{1 - 2\nu}{1 - \nu}\right) \left(d\varepsilon_{xx}^{(tot)} + d\varepsilon_{yy}^{(tot)}\right)$$
(2.42)

$$dP = -K\frac{\Delta V}{V} \tag{2.43}$$

$$ds_{ij}^{trial} = 2G\left(d\varepsilon_{ij}^{(tot)} - \frac{\Delta V}{3V}\right)$$
 for $i = j = x, y$ (2.44)

$$ds_{zz}^{trial} = ds_{zz} = dP (2.45)$$

$$d\tau_{xy}^{trial} = ds_{xy}^{trial} = Gd\gamma_{xy}$$
 (2.46)

(2.47)

The IsoPlasticity class is based on K and G (in Kred and Gred). For calculation efficiency, two above terms and one term defined below are stored in variables:

psRed =
$$\left(\frac{1-2\nu}{1-\nu}\right) = \frac{1}{\frac{K}{2G} + \frac{2}{3}}$$
 (2.48)

$$psLr2G = \frac{v}{1-v} = \frac{\frac{K}{2G} - \frac{1}{3}}{\frac{K}{2G} + \frac{2}{3}}$$
 (2.49)

psKred =
$$\frac{E}{3(1-\nu)} = K * psRed = \frac{K}{\frac{K}{2G} + \frac{2}{3}}$$
 (2.50)

Note that plane stress analysis assumes incrementally linear-elastic response (although the linear terms can depend on particle state) and also needs to know psRed before finding the pressure change. Materials that override LoadMechanicaProps() must calculate psRed, psLr2G, and psKred along with Kred and Gred. Materials that override UpdatePressure() instead will need to deal with these terms differently. For such materials, the incremental volumetric strain passed to UpdatePressure() depends on psRed (see Eq. (2.42)). The best approach is to set psRed = 1 and then scale delV by the current (1-2v)/(1-v) in UpdatePressure(). That method can leave psRed = 1 (because it is no longer needed) and calculate psLr2G (for normal stress update) and psKred (for finding λ) needed in subsequent calculations. It should also calculate Gred, but Kred is not needed.

When f > 0, the process (following Simo and Hughes), effectively (or equivalently) revises f using squares to be

$$f = \|\mathbf{s}\|^2 - \frac{2}{3}K^2(\alpha) = \sigma \mathbf{P}\sigma - \frac{2}{3}K^2(\alpha)$$
 (2.51)

where **P** is a transformation matrix on the plane stress vector $\sigma = (\sigma_{xx}, \sigma_{yy}, \tau_{xy})$ given by

$$\mathbf{P} = \begin{pmatrix} \frac{2}{3} & -\frac{1}{3} & 0\\ -\frac{1}{3} & \frac{2}{3} & 0\\ 0 & 0 & 2 \end{pmatrix}$$
 (2.52)

such that $\sigma \mathbf{P} \sigma = \|\mathbf{s}\|^2$. The plastic strain update from this f, and using engineering shear strain, is

$$(d\varepsilon_{xx}^p, d\varepsilon_{yy}^p, d\gamma_{xy}^p) = \lambda df = \lambda \mathbf{P}\sigma$$
 (2.53)

Now, in this flow theory, the total volume change due to plastic strains is zero; thus this plastic strain increment implies $d\varepsilon_{zz}^p = -(d\varepsilon_{xx}^p + d\varepsilon_{yy}^p)$. The full 3D plastic strain increment tensor using tensorial strains is

$$d\varepsilon_{p} = \lambda \begin{pmatrix} \frac{1}{3}(2\sigma_{xx} - \sigma_{yy}) & \tau_{xy} & 0\\ \tau_{xy} & \frac{1}{3}(2\sigma_{yy} - \sigma_{xx}) & 0\\ 0 & 0 & -\frac{1}{3}(\sigma_{xx} + \sigma_{yy}) \end{pmatrix}$$
(2.54)

This traceless tensor has inner product

$$\|d\boldsymbol{\varepsilon}_p\|^2 = \lambda^2 \left(\frac{2}{3}(\sigma_{xx}^2 + \sigma_{yy}^2 - \sigma_{xx}\sigma_{yy}) + 2\tau_{xy}^2\right) = \lambda^2 \sigma \mathbf{P}\sigma$$
 (2.55)

$$= \lambda^2 \left(s_{xx}^2 + s_{yy}^2 + s_{zz}^2 + 2s_{xy}^2 \right) \tag{2.56}$$

Requiring $d\alpha$ to equal the equivalent plastic strain increment (as it does in plane strain and 3D), leads to

$$d\alpha = \sqrt{\frac{2}{3}}\lambda\sqrt{\sigma \mathbf{P}\sigma} \tag{2.57}$$

When f > 0, the task is to find the $(n+1)^{st}$ stress and strain state in terms of the n^{th} state. In terms of the to-be-determined λ , the stress update is

$$\sigma_{n+1}^{trial} = \sigma_n + \mathbf{C}(d\varepsilon_{xx}^{(tot)}, d\varepsilon_{yy}^{(tot)}, d\gamma_{xy}^{(tot)})$$
 (2.58)

$$f\sigma_{n+1} = \sigma_{n+1}^{trial} - \mathbf{C}d\boldsymbol{\varepsilon}_p = \sigma_{n+1}^{trial} - \mathbf{C}\lambda \mathbf{P}\sigma_{n+1}$$
 (2.59)

where **C** is the plane stress stiffness matrix:

$$\mathbf{C} = \begin{pmatrix} \frac{E}{1-\nu^2} & \frac{\nu E}{1-\nu^2} & 0\\ \frac{\nu E}{1-\nu^2} & \frac{E}{1-\nu^2} & 0\\ 0 & 0 & G \end{pmatrix} \quad \text{with} \quad \mathbf{C}^{-1} = \begin{pmatrix} \frac{1}{E} & -\frac{\nu}{E} & 0\\ -\frac{\nu}{E} & \frac{1}{E} & 0\\ 0 & 0 & \frac{1}{G} \end{pmatrix}$$
(2.60)

Solving the second equation the required stress is:

$$\sigma_{n+1} = \left[\mathbf{C}^{-1} + \lambda \mathbf{P} \right]^{-1} \mathbf{C}^{-1} \sigma_{n+1}^{trial}$$
 (2.61)

This general result applied to isotropic materials leads to

$$\sigma_{xx}^{(n+1)} + \sigma_{yy}^{(n+1)} = \frac{1}{1 + \frac{E}{3(1-\nu)}\lambda} \left(\sigma_{xx}^{trial} + \sigma_{yy}^{trial}\right)$$
(2.62)

$$-\sigma_{xx}^{(n+1)} + \sigma_{yy}^{(n+1)} = \frac{1}{1 + 2G\lambda} \left(-\sigma_{xx}^{trial} + \sigma_{yy}^{trial} \right)$$
 (2.63)

$$\tau_{xy}^{(n+1)} = \frac{\tau_{xy}^{trial}}{1 + 2G\lambda} \tag{2.64}$$

and

$$\|\mathbf{s}\|^{2} = \sigma_{n+1} \mathbf{P} \sigma_{n+1} = \frac{\frac{1}{6} \left(\sigma_{xx}^{trial} + \sigma_{yy}^{trial}\right)^{2}}{\left(1 + \frac{E}{3(1-\nu)}\lambda\right)^{2}} + \frac{\frac{1}{2} \left(-\sigma_{xx}^{trial} + \sigma_{yy}^{trial}\right)^{2} + 2\tau_{xy}^{trial}^{2}}{(1 + 2G\lambda)^{2}}$$
(2.65)

The task is to find λ by Newton's method with the key equations being:

$$f^{(k)} = \frac{1}{2} \|\mathbf{s}^{(k)}\|^2 - \frac{1}{3} K^2(\alpha^{(k)}) = 0$$
 (2.66)

$$\frac{df^{(k)}}{d\lambda} = -\left[\frac{E}{3(1-\nu)} \frac{\frac{1}{6} \left(\sigma_{xx}^{trial} + \sigma_{yy}^{trial}\right)^{2}}{\left(1 + \frac{E}{3(1-\nu)}\lambda^{(k)}\right)^{3}} + 2G \frac{\frac{1}{2} \left(-\sigma_{xx}^{trial} + \sigma_{yy}^{trial}\right)^{2} + 2\tau_{xy}^{trial^{2}}}{\left(1 + 2G\lambda^{(k)}\right)^{3}}\right]$$

$$-\frac{1}{3}\frac{dK^2(\alpha^{(k)})}{d\lambda} \tag{2.67}$$

$$\alpha^{(k+1)} = \alpha^0 + \lambda^{(k+1)} \sqrt{\frac{2}{3}} \| \mathbf{s}^{(k+1)} \|$$
 (2.68)

A subclass of IsoPlasticity class can implement this numerical solution simply by providing for calculation of $K(\alpha^{(k)})$ (in GetYield()) and $\frac{1}{3}\frac{dK^2(\alpha^{(k)})}{d\lambda}$ (in GetK2Prime()). To keep the analysis in terms of K and G, the modulus term above can be found from

$$psKred = \frac{E}{3(1-\nu)} = \frac{K}{\frac{K}{2G} + \frac{2}{3}}$$
 (2.69)

When material class is working in deviatoric stress ($\mathbf{s} = \boldsymbol{\sigma} + P$), the key terms needed above are

$$\sigma_{xx}^{trial} + \sigma_{yy}^{trial} = s_{xx}^{trial} + s_{yy}^{trial} - 2P_{final}$$
 (2.70)

$$\sigma_{xx}^{trial} + \sigma_{yy}^{trial} = s_{xx}^{trial} + s_{yy}^{trial} - 2P_{final}$$

$$-\sigma_{xx}^{trial} + \sigma_{yy}^{trial} = s_{yy}^{trial} - s_{xx}^{trial}$$

$$s_{xx}^{(n+1)} = \sigma_{xx}^{(n+1)} + P_{final}$$

$$s_{yy}^{(n+1)} = \sigma_{yy}^{(n+1)} + P_{final}$$

$$s_{zz}^{(n+1)} = P_{final}$$

$$s_{xy}^{(n+1)} = \tau_{xy}^{(n+1)}$$
(2.72)
$$(2.73)$$

$$(2.74)$$

$$s_{rr}^{(n+1)} = \sigma_{rr}^{(n+1)} + P_{final}$$
 (2.72)

$$s_{yy}^{(n+1)} = \sigma_{yy}^{(n+1)} + P_{final}$$
 (2.73)

$$s_{\alpha\alpha}^{(n+1)} = P_{final} \tag{2.74}$$

$$s_{xy}^{(n+1)} = \tau_{xy}^{(n+1)} (2.75)$$

The special hardening laws that allow a closed-form expression in plane strain will still require numerical solution in plane stress. The example given above used $K(\alpha) = \sigma_Y + E_p \alpha$. The equation for λ will be quartic expression. The one key derivative needed, however, simplifies to:

$$\frac{1}{3} \frac{dK^2(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}} \left(\sigma_Y + E_p \alpha^{(k)} \right) E_p \| \mathbf{s}^{(k)} \|$$
 (2.76)

3D Analysis for J_2 Flow Theory, Isotropic Materials 2.5

This analysis follows the plane strain and axisymmetric section except includes direct updates for γ_{xz} , γ_{yz} , τ_{xz} , and τ_{yz} .

Examples of J_2 Flow Theory Materials

From the previous sections, analysis with materials that can use J_2 flow theory only require code implementation of the yield stress ($K(\alpha)$) and its derivatives. For plane strain or 3D, the code only needs $\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda}$. To handle plane stress as well, the code needs $\frac{1}{3} \frac{dK^2(\alpha^{(k)})}{d\lambda}$. When the yield stress depends on strain rate, that rate is $\dot{\varepsilon}_p = d\alpha/dt$ where dt is the time step. When evaluating in plane strain or 3D code $\alpha'(\lambda) = \sqrt{2/3}$ and $\dot{\varepsilon}'_p(\lambda) = \sqrt{2/3}/dt$. In plane stress code $\alpha'(\lambda) = \sqrt{2/3} \|\mathbf{s}\|$ and $\dot{\varepsilon}'_p(\lambda) = \sqrt{2/3} \|\mathbf{s}\|/dt$.

All hardening laws are implemented as subclasses of the HardeningLawBase class. The Isoplasticity class, or any of its subclasses, can use any hardening law by picking it when defining material parameters. Those the total number of available materials in this group is number of hardening laws × number of Isoplasticity classes. The following sections list the current hardening laws and the equations that are implemented.

2.6.1 VonMises Material with Linear Work Hardening

$$K(\alpha) = \sigma_{v}(1 + \beta \alpha) = \sigma_{v} + E_{p}\alpha \qquad (2.77)$$

$$\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = \frac{2}{3} E_p \tag{2.78}$$

$$\frac{1}{3}\frac{dK^2(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}}(\sigma_y + E_p \alpha)E_p \|\mathbf{s}\|$$
 (2.79)

2.6.2 VonMises Material with Non-Linear Work Hardening

$$K(\alpha) = \sigma_{v}(1 + \beta \alpha)^{n} \tag{2.80}$$

$$\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = \frac{2}{3} \sigma_y \beta n (1 + \beta \alpha)^{n-1}$$
(2.81)

$$\frac{1}{3} \frac{dK^{2}(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}} \sigma_{y}^{2} \beta n (1 + \beta \alpha)^{2n-1} ||\mathbf{s}||$$
 (2.82)

2.6.3 VonMises Material with Alternate Non-Linear Work Hardening

$$K(\alpha) = \sigma_{\gamma}(1 + \beta \alpha^{n}) \tag{2.83}$$

$$\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = \frac{2}{3} \sigma_y \beta n \alpha^{n-1}$$
 (2.84)

$$\frac{1}{3} \frac{dK^{2}(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}} \sigma_{y}^{2} \beta n \alpha^{n-1} (1 + \beta \alpha^{n}) ||\mathbf{s}||$$
 (2.85)

2.6.4 Johnson-Cook

$$K(\alpha) = (A + B\alpha^n) \left(1 + C \ln \frac{\dot{\varepsilon}_p}{\dot{\varepsilon}_0} \right) \left(1 - (T^*)^m \right)$$
 (2.86)

$$\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = \frac{2}{3} \left[Bn\alpha^{n-1} \left(1 + C \ln \frac{\dot{\varepsilon}_p}{\dot{\varepsilon}_0} \right) + \frac{C}{\dot{\varepsilon}_p dt} (A + B\alpha^n) \right] \left(1 - (T^*)^m \right)$$
 (2.87)

$$\frac{1}{3}\frac{dK^2(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}}(A+B\alpha^n)\left(1+C\ln\frac{\dot{\varepsilon}_p}{\dot{\varepsilon}_0}\right)\left(1-(T^*)^m\right)^2$$

$$\left[Bn\alpha^{n-1}\left(1+C\ln\frac{\dot{\varepsilon}_p}{\dot{\varepsilon}_0}\right) + \frac{C}{\dot{\varepsilon}_p dt}(A+B\alpha^n)\right] \|\mathbf{s}\|$$
 (2.88)

This law has numerical issues as $\dot{\varepsilon}_p \to 0$ because the $\ln \dot{\varepsilon}_p$ can cause the yield stress to be nonphysically negative. One solution is to truncate at $\dot{\varepsilon}_{p,min}$ within $\dot{\varepsilon}_0 e^{-1/C} < \dot{\varepsilon}_{p,min} < \dot{\varepsilon}_0$; the lower limit is when the rate term becomes zero and the upper is when it is one. Below $\dot{\varepsilon}_{p,min}$, the rate term can be taken as a constant using that minimum strain rate. The resulting yield functions are

$$K(\alpha) = (A + B\alpha^n) \left(1 + C \ln \frac{\dot{\varepsilon}_{p,min}}{\dot{\varepsilon}_0} \right) \left(1 - (T^*)^m \right)$$
 (2.89)

$$\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = \frac{2}{3} Bn\alpha^{n-1} \left(1 + C \ln \frac{\dot{\varepsilon}_{p,min}}{\dot{\varepsilon}_0} \right) \left(1 - (T^*)^m \right)$$
 (2.90)

$$\frac{1}{3} \frac{dK^{2}(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}} Bn\alpha^{n-1} (A + B\alpha^{n}) \left(1 + C \ln \frac{\dot{\varepsilon}_{p,min}}{\dot{\varepsilon}_{0}} \right)^{2} \left(1 - (T^{*})^{m} \right)^{2} ||\mathbf{s}||$$
 (2.91)

2.7 Anisotropic 2D Plane Strain and Axisymmetric Analysis - Material Axes

In is most convenient to implement to constitutive law in the material axes and here the material is assumed to be orthotropic. In general plane strain or axisymmetric analysis, the matrix equation for update is:

$$d\sigma = \mathbf{C}d\varepsilon_{tot} + \varepsilon_{excess} \tag{2.92}$$

The key terms are

$$\mathbf{C} = \begin{pmatrix} \mathbf{C}[1][1] & \mathbf{C}[1][2] & 0 & 0 \\ \mathbf{C}[1][2] & \mathbf{C}[2][2] & 0 & 0 \\ \mathbf{C}[4][1] & \mathbf{C}[4][2] & 0 & \mathbf{C}[4][4] \\ 0 & 0 & \mathbf{C}[3][3] & 0 \end{pmatrix}$$
(2.93)

$$d\boldsymbol{\varepsilon}_{tot} = \left(d\varepsilon_{xx} - \varepsilon_{xx}^{(res,r)}, d\varepsilon_{yy} - \varepsilon_{yy}^{(res,r)}, d\varepsilon_{zz} - \varepsilon_{zz}^{(res)}, d\gamma_{xy}\right)$$
(2.94)

$$df = (df_{xx}, df_{yy}, df_{zz}, df_{xy}) = \left(\frac{\partial f}{\sigma_{xx}}, \frac{\partial f}{\sigma_{yy}}, \frac{\partial f}{\sigma_{zz}}, \frac{\partial f}{\tau_{xy}}\right)$$
(2.95)

$$\begin{pmatrix} \varepsilon_{xx}^{(res,r)} \\ \varepsilon_{xy}^{(res,r)} \\ \varepsilon_{yy}^{(res)} \\ \varepsilon_{zz}^{(res)} \\ \gamma_{xy}^{(res)} \end{pmatrix} = \begin{pmatrix} \text{alpha}[1]\Delta T + \text{beta}[1]\Delta c \\ \text{alpha}[2]\Delta T + \text{beta}[2]\Delta c \\ \alpha_{zz}\Delta T + \beta_{zz}\Delta c \\ 0 \end{pmatrix}$$
(2.96)

The term $d\varepsilon_{zz}$ is zero for plane strain, but incremental hoop strain of axisymmetry, while the term \mathbf{c}_{excess} is zero for axisymmetry but is needed for plane strain analysis to compensate for use of reduced thermal and moisture expansion coefficients in the x-y terms. The only non-zero component is:

$$\mathbf{c}_{excess}[3] = (\mathbf{C}[4][1] \text{alpha}[5] + \mathbf{C}[4][2] \text{alpha}[6]) \varepsilon_{zz}^{(res)}$$
(2.97)

Note that in the code, alpha[5] and alpha[6] hold out-of-plane Poisson ratios (or rotated ratios) and not thermal expansion coefficients. This formulation is using engineering shear strains.

The plastic strain increments are:

$$d\varepsilon_{xx}^{(p)} = \lambda df_{xx}, \quad d\varepsilon_{yy}^{(p)} = \lambda df_{yy}, \quad d\gamma_{xy}^{(p)} = \lambda df_{xy}, \quad \text{and} \quad d\varepsilon_{zz}^{(p)} = \lambda df_{zz}$$
 (2.98)

where df_{xy} is evaluated to give engineering plastic shear strain. The elastic strain increments are:

$$d\varepsilon_{xx}^{(e)} = d\varepsilon_{xx} - \lambda df_{xx}, \quad d\varepsilon_{yy}^{(e)} = d\varepsilon_{yy} - \lambda df_{yy}, \quad d\gamma_{xy}^{(e)} = d\gamma_{xy} - \lambda df_{xy}, \quad \text{and} \quad d\varepsilon_{zz}^{(e)} = -\lambda df_{zz}$$
 (2.99)

The specific stress increments are

$$\begin{pmatrix} d\sigma_{xx} \\ d\sigma_{yy} \\ d\tau_{xy} \end{pmatrix} = \begin{pmatrix} C[1][1] & C[1][2] & 0 \\ C[1][2] & C[2][2] & 0 \\ 0 & 0 & C[3][3] \end{pmatrix} \begin{pmatrix} d\varepsilon_{xx}^{(e)} - \varepsilon_{xx}^{(res,r)} \\ d\varepsilon_{yy}^{(e)} - \varepsilon_{yy}^{(res,r)} \\ d\gamma_{xx}^{(e)} \end{pmatrix}$$
(2.100)

For plane strain analysis, $d\sigma_{zz}$ is similar to an elastic material using elastic strains:

$$\begin{split} d\sigma_{zz} &= \text{C[4][1]} \Big(d\varepsilon_{xx}^{(e)} - (\varepsilon_{xx}^{(res,r)} - \text{alpha[5]} \varepsilon_{zz}^{(res)}) \Big) + \text{C[4][2]} \Big(d\varepsilon_{yy}^{(e)} - (\varepsilon_{yy}^{(res,r)} - \text{alpha[6]} \varepsilon_{zz}^{(res)}) \Big) \\ &- \text{C[4][4]} (d\varepsilon_{zz}^{(e)} - \varepsilon^{(res)}) \end{split} \tag{2.101}$$

The $d\varepsilon_{zz}^{(e)}$ term may be non zero even though it is plane strain. The total z direction strain is zero because $d\varepsilon_{zz}^{(e)} = -d\varepsilon_{zz}^{(p)}$.

2.8 Anisotropic 2D Plane Strain and Axisymmetric Analysis - Global Axes

In general plane strain or axisymmetric analysis, the matrix equation for update is:

$$d\sigma = \mathbf{C}d\varepsilon_{tot} + c_{excess} \tag{2.102}$$

The key terms are

$$\mathbf{C} = \begin{pmatrix} \mathbf{C}[1][1] & \mathbf{C}[1][2] & \mathbf{C}[1][3] & 0 \\ \mathbf{C}[1][2] & \mathbf{C}[2][2] & \mathbf{C}[2][3] & 0 \\ \mathbf{C}[4][1] & \mathbf{C}[4][2] & \mathbf{C}[4][3] & \mathbf{C}[4][4] \\ \mathbf{C}[1][3] & \mathbf{C}[2][3] & \mathbf{C}[3][3] & 0 \end{pmatrix}$$
(2.103)

$$d\boldsymbol{\varepsilon}_{tot} = \left(d\varepsilon_{xx} - \varepsilon_{xx}^{(res,r)}, d\varepsilon_{yy} - \varepsilon_{yy}^{(res,r)}, d\varepsilon_{zz} - \varepsilon_{zz}^{(res)}, d\gamma_{xy} - \gamma_{xy}^{(res,r)}\right)$$
(2.104)

$$df = (df_{xx}, df_{yy}, df_{zz}, df_{xy}) = \left(\frac{\partial f}{\sigma_{xx}}, \frac{\partial f}{\sigma_{yy}}, \frac{\partial f}{\sigma_{zz}}, \frac{\partial f}{\tau_{xy}}\right)$$
(2.105)

$$\begin{pmatrix} \varepsilon_{xx}^{(res,r)} \\ \varepsilon_{xy}^{(res,r)} \\ \varepsilon_{zz}^{(res,r)} \\ \gamma_{xy}^{(res,r)} \end{pmatrix} = \begin{pmatrix} \text{alpha}[1]\Delta T + \text{beta}[1]\Delta c \\ \text{alpha}[2]\Delta T + \text{beta}[2]\Delta c \\ \alpha_{zz}\Delta T + \beta_{zz}\Delta c \\ \text{alpha}[3]\Delta T + \text{beta}[3]\Delta c \end{pmatrix}$$
(2.106)

The term $d\varepsilon_{zz}$ is zero for plane strain, but incremental hoop strain of axisymmetry, while the term c_{excess} is zero for axisymmetry but is needed for plane strain analysis to compensate for use of reduced thermal and moisture expansion coefficients in the x-y terms. The only non-zero component is:

$$c_{excess}[3] = (C[4][1]alpha[5] + C[4][2]alpha[6] + C[4][3]alpha[7])\varepsilon_{zz}^{(res)}$$
 (2.107)

Note that in the code, alpha[5] to alpha[7] hold out-of-plane Poisson ratios (or rotated ratios) and not thermal expansion coefficient. This formulation is using engineering shear strains.

The plastic strain increments are:

$$d\varepsilon_{xx}^{(p)} = \lambda df_{xx}, \quad d\varepsilon_{yy}^{(p)} = \lambda df_{yy}, \quad d\gamma_{xy}^{(p)} = \lambda df_{xy}, \quad \text{and} \quad d\varepsilon_{zz}^{(p)} = \lambda df_{zz}$$
 (2.108)

where df_{xy} is evaluated to give engineering plastic shear strain. The elastic strain increments are:

$$d\varepsilon_{xx}^{(e)} = d\varepsilon_{xx} - \lambda df_{xx}, \quad d\varepsilon_{yy}^{(e)} = d\varepsilon_{yy} - \lambda df_{yy}, \quad d\gamma_{xy}^{(e)} = d\gamma_{xy} - \lambda df_{xy}, \quad \text{and} \quad d\varepsilon_{zz}^{(e)} = -\lambda df_{zz}$$
(2.109)

The specific stress increments are

$$\begin{pmatrix} d\sigma_{xx} \\ d\sigma_{yy} \\ d\tau_{xy} \end{pmatrix} = \begin{pmatrix} C[1][1] & C[1][2] & C[1][3] \\ C[1][2] & C[2][2] & C[2][3] \\ C[1][3] & C[2][3] & C[3][3] \end{pmatrix} \begin{pmatrix} d\varepsilon_{xx}^{(e)} - \varepsilon_{xx}^{(res,r)} \\ d\varepsilon_{yy}^{(e)} - \varepsilon_{yy}^{(res,r)} \\ d\gamma_{xx}^{(e)} - \gamma_{xy}^{(res,r)} \end{pmatrix}$$
 (2.110)

For plane strain analysis, $d\sigma_{zz}$ is similar to an elastic material using elastic strains:

$$\begin{split} d\sigma_{zz} &= \text{C[4][1]} \Big(d\varepsilon_{xx}^{(e)} - (\varepsilon_{xx}^{(res,r)} - \text{alpha[5]}\varepsilon_{zz}^{(res)}) \Big) + \text{C[4][2]} \Big(d\varepsilon_{yy}^{(e)} - (\varepsilon_{yy}^{(res,r)} - \text{alpha[6]}\varepsilon_{zz}^{(res)}) \Big) \\ &+ \text{C[4][3]} \Big(d\gamma_{xx}^{(e)} - (\gamma_{xy}^{(res,r)} - \text{alpha[7]}\varepsilon_{zz}^{(res)}) \Big) - \text{C[4][4]} (d\varepsilon_{zz}^{(e)} - \varepsilon^{(res)}) \end{split} \tag{2.111}$$

The $d\varepsilon_{zz}^{(e)}$ term may be non zero even though it is plane strain. The total z direction strain is zero because $d\varepsilon_{zz}^{(e)} = -d\varepsilon_{zz}^{(p)}$.

2.9 Anisotropic 2D Plane Stress Analysis

Plane stress analysis is currently not supported for anisotropic plastic materials.

2.10 Anisotropic 3D Analysis - Material Axes

In 3D strain analysis in orthotropic material axes, the matrix equation for update is

$$d\sigma = \mathbf{C}d\varepsilon_{tot} \tag{2.112}$$

The key terms are

$$\mathbf{C} = \mathbb{C}[i][j] \text{ for } i = 0,5 \text{ and } j = 0,5$$
 (2.113)

$$d\boldsymbol{\varepsilon}_{tot} = \left(d\varepsilon_{xx} - \varepsilon_{xx}^{(res,r)}, d\varepsilon_{yy} - \varepsilon_{yy}^{(res,r)}, d\varepsilon_{yy} - \varepsilon_{zz}^{(res)}, d\gamma_{yz}, d\gamma_{xz}, d\gamma_{xy}\right)$$
(2.114)

$$df = (df_{xx}, df_{yy}, df_{zz}, df_{yz}, df_{xz}, df_{xy}) = \left(\frac{\partial f}{\sigma_{xx}}, \frac{\partial f}{\sigma_{yy}}, \frac{\partial f}{\sigma_{zz}}, \frac{\partial f}{\tau_{yz}}, \frac{\partial f}{\tau_{xz}}, \frac{\partial f}{\tau_{xy}}\right) (2.115)$$

$$\begin{pmatrix} \varepsilon_{\chi\chi}^{(res,r)} \\ \varepsilon_{\chi\chi}^{(res,r)} \\ \varepsilon_{\chi}^{(res,r)} \end{pmatrix} = \begin{pmatrix} \text{alpha}[0]\Delta T + \text{beta}[0]\Delta c \\ \text{alpha}[1]\Delta T + \text{beta}[1]\Delta c \\ \text{alpha}[2]\Delta T + \text{beta}[2]\Delta c \end{pmatrix}$$
(2.116)

This formulation is using engineering shear strains.

The plastic strain increments are:

$$d\varepsilon_{xx}^{(p)} = \lambda df_{xx}, \ d\varepsilon_{yy}^{(p)} = \lambda df_{yy}, \ d\varepsilon_{zz}^{(p)} = \lambda df_{zz}, \tag{2.117}$$

$$d\gamma_{yz}^{(p)} = \lambda df_{yz}, \ d\gamma_{xz}^{(p)} = \lambda df_{xz}, \ d\gamma_{xy}^{(p)} = \lambda df_{xy},$$
 (2.118)

where df_{yz} , df_{xz} , and df_{xy} are evaluated to give engineering plastic shear strain. The elastic strain increments are:

$$d\varepsilon_{xx}^{(e)} = d\varepsilon_{xx} - \lambda df_{xx}, \quad d\varepsilon_{yy}^{(e)} = d\varepsilon_{yy} - \lambda df_{yy}, \quad d\varepsilon_{zz}^{(e)} = d\varepsilon_{yy} - \lambda df_{zz}$$
 (2.119)

$$d\gamma_{yz}^{(e)} = d\gamma_{yz} - \lambda df_{yz}, \quad d\gamma_{xz}^{(e)} = d\gamma_{xz} - \lambda df_{xz}, \quad \text{and} \quad d\gamma_{xy}^{(e)} = d\gamma_{xy} - \lambda df_{xy}$$
 (2.120)

The specific stress increments are

$$\begin{pmatrix} d\sigma_{xx} \\ d\sigma_{yy} \\ d\sigma_{zz} \\ d\tau_{yz} \\ d\tau_{xz} \\ d\tau_{xy} \end{pmatrix} = \begin{pmatrix} \mathbb{C}[\mathbf{i}][\mathbf{j}] & \text{for } \mathbf{i} = 0, 5 \text{ and } \mathbf{j} = 0, 5 \end{pmatrix} \begin{pmatrix} d\varepsilon_{xx}^{(e)} - \varepsilon_{xx}^{(res,r)} \\ d\varepsilon_{yy}^{(e)} - \varepsilon_{yy}^{(res,r)} \\ d\varepsilon_{zz}^{(e)} - \varepsilon_{zz}^{(res,r)} \\ d\varepsilon_{zz}^{(e)} - \varepsilon_{zz}^{(res,r)} \\ d\gamma_{yz}^{(e)} \\ d\gamma_{yz}^{(e)} \\ d\gamma_{xy}^{(e)} \end{pmatrix}$$
(2.121)

2.11 Anisotropic 3D Analysis - Global Axes

In 3D strain analysis, the matrix equation for update is

$$d\sigma = \mathbf{C}d\varepsilon_{tot} \tag{2.122}$$

The key terms are

$$\mathbf{C} = \mathbf{C}[\mathbf{i}][\mathbf{j}] \quad \text{for } \mathbf{i} = 0,5 \text{ and } \mathbf{j} = 0,5$$

$$d\boldsymbol{\varepsilon}_{tot} = \left(d\boldsymbol{\varepsilon}_{xx} - \boldsymbol{\varepsilon}_{xx}^{(res,r)}, d\boldsymbol{\varepsilon}_{yy} - \boldsymbol{\varepsilon}_{yy}^{(res,r)}, d\boldsymbol{\varepsilon}_{yy} - \boldsymbol{\varepsilon}_{zz}^{(res)}, d\boldsymbol{\gamma}_{yz} - \boldsymbol{\gamma}_{yz}^{(res,r)}, d\boldsymbol{\gamma}_{xz} - \boldsymbol{\gamma}_{xz}^{(res,r)}, d\boldsymbol{\gamma}_{xy} - \boldsymbol{\gamma}_{xy}^{(res,r)} \right)$$

$$(2.124)$$

$$df = (df_{xx}, df_{yy}, df_{zz}, df_{yz}, df_{xz}, df_{xy}) = \left(\frac{\partial f}{\sigma_{xx}}, \frac{\partial f}{\sigma_{yy}}, \frac{\partial f}{\sigma_{zz}}, \frac{\partial f}{\tau_{yz}}, \frac{\partial f}{\tau_{xz}}, \frac{\partial f}{\tau_{xy}}\right) = \left(\frac{\partial f}{\partial \sigma_{xx}}, \frac{\partial f}{\partial \sigma_{xy}}, \frac{\partial f}{\partial \sigma_{xy}}, \frac{\partial f}{\partial \sigma_{xz}}, \frac{\partial f}{\partial \sigma_{xy}}, \frac{\partial f}{$$

$$\begin{pmatrix} \varepsilon_{\chi\chi}^{(res,r)} \\ \varepsilon_{\chi\gamma}^{(res,r)} \\ \varepsilon_{\chi\gamma}^{(res,r)} \\ \varepsilon_{\chi}^{(res,r)} \\ \gamma_{\chi z}^{(res,r)} \\ \gamma_{\chi\chi}^{(res,r)} \\ \gamma_{\chi\chi}^{(res,r)} \end{pmatrix} = \begin{pmatrix} \text{alpha}[0]\Delta T + \text{beta}[0]\Delta c \\ \text{alpha}[1]\Delta T + \text{beta}[1]\Delta c \\ \text{alpha}[2]\Delta T + \text{beta}[2]\Delta c \\ \text{alpha}[3]\Delta T + \text{beta}[3]\Delta c \\ \text{alpha}[4]\Delta T + \text{beta}[4]\Delta c \\ \text{alpha}[5]\Delta T + \text{beta}[5]\Delta c \end{pmatrix}$$

$$(2.126)$$

This formulation is using engineering shear strains.

The plastic strain increments are:

$$d\varepsilon_{xx}^{(p)} = \lambda df_{xx}, \ d\varepsilon_{yy}^{(p)} = \lambda df_{yy}, \ d\varepsilon_{zz}^{(p)} = \lambda df_{zz}, \tag{2.127}$$

$$d\gamma_{yz}^{(p)} = \lambda df_{yz}, \ d\gamma_{xz}^{(p)} = \lambda df_{xz}, \ d\gamma_{xy}^{(p)} = \lambda df_{xy},$$
 (2.128)

where df_{yz} , df_{xz} , and df_{xy} are evaluated to give engineering plastic shear strain. The elastic strain increments are:

$$d\varepsilon_{xx}^{(e)} = d\varepsilon_{xx} - \lambda df_{xx}, \quad d\varepsilon_{yy}^{(e)} = d\varepsilon_{yy} - \lambda df_{yy}, \quad d\varepsilon_{zz}^{(e)} = d\varepsilon_{yy} - \lambda df_{zz}$$
 (2.129)

$$d\gamma_{yz}^{(e)} = d\gamma_{yz} - \lambda df_{yz}, \quad d\gamma_{xz}^{(e)} = d\gamma_{xz} - \lambda df_{xz}, \quad \text{and} \quad d\gamma_{xy}^{(e)} = d\gamma_{xy} - \lambda df_{xy}$$
 (2.130)

The specific stress increments are

$$\begin{pmatrix} d\sigma_{xx} \\ d\sigma_{yy} \\ d\sigma_{zz} \\ d\tau_{yz} \\ d\tau_{xz} \\ d\tau_{xy} \end{pmatrix} = \begin{pmatrix} C[\mathtt{i}][\mathtt{j}] & \text{for } \mathtt{i} = 0,5 \text{ and } \mathtt{j} = 0,5 \end{pmatrix} \begin{pmatrix} d\varepsilon_{xx}^{(e)} - \varepsilon_{xx}^{(res,r)} \\ d\varepsilon_{yy}^{(e)} - \varepsilon_{yy}^{(res,r)} \\ d\varepsilon_{yy}^{(e)} - \varepsilon_{yy}^{(res,r)} \\ d\varepsilon_{yz}^{(e)} - \varepsilon_{yz}^{(res,r)} \\ d\gamma_{yz}^{(e)} - \gamma_{yz}^{(res,r)} \\ d\gamma_{xz}^{(e)} - \gamma_{xz}^{(res,r)} \\ d\gamma_{xy}^{(e)} - \gamma_{xy}^{(res,r)} \end{pmatrix}$$
(2.131)

2.12 Quadratic Hill Criterion - Material Axes

The quadratic Hill yield criterion can implement anisotropic plasticity and hardening terms can be added to include aniostropic hardening as well. For 3D analysis, one version of Hill yield function with arbitrary hardening function (defined later) reduces to:

$$f = \sqrt{F(\sigma_{yy} - \sigma_{zz})^{2} + G(\sigma_{xx} - \sigma_{zz})^{2} + H(\sigma_{yy} - \sigma_{xx})^{2} + 2L\tau_{yz}^{2} + 2M\tau_{xz}^{2} + 2N\tau_{xy}^{2}} - g(\boldsymbol{\alpha})$$

$$= \left[(G+H)\sigma_{xx}^{2} + (F+H)\sigma_{yy}^{2} + (F+G)\sigma_{zz}^{2} - 2F\sigma_{yy}\sigma_{zz} - 2G\sigma_{xx}\sigma_{zz} \right]$$

$$-2H\sigma_{xx}\sigma_{yy} + 2L\tau_{yz}^{2} + 2M\tau_{xz}^{2} + 2N\tau_{xy}^{2} \right]^{1/2} - g(\boldsymbol{\alpha})$$
(2.133)

$$= \sqrt{\boldsymbol{\sigma} \cdot \mathbf{A} \boldsymbol{\sigma}} - g(\boldsymbol{\alpha}) \tag{2.134}$$

where σ is stress in the material axis system, $g(\alpha)$ is a hardening function, and

$$\mathbf{A} = \begin{pmatrix} G+H & -H & -G & 0 & 0 & 0 \\ -H & F+H & -F & 0 & 0 & 0 \\ -G & -F & F+G & 0 & 0 & 0 \\ 0 & 0 & 0 & 2L & 0 & 0 \\ 0 & 0 & 0 & 0 & 2M & 0 \\ 0 & 0 & 0 & 0 & 0 & 2N \end{pmatrix}$$
 (2.135)

For 2D, plane strain, $\sigma = (\sigma_{xx}, \sigma_{yy}, \sigma_{zz}, \tau_{xy})$ and

$$\mathbf{A} = \begin{pmatrix} (G+H) & -H & -G & 0\\ -H & F+H & -F & 0\\ -G & -F & F+G & 0\\ 0 & 0 & 0 & 2N \end{pmatrix}$$
 (2.136)

Formal plasticity theory has **A** as fourth-rank tensor and σ as second rank tensor. To recover the same f, we need

$$A_{xxxx} = G + H, A_{xxyy} = A_{yyxx} = -H, A_{xxzz} = A_{zzxx} = -G, A_{yyyy} = F + H,$$
 (2.137)

$$A_{yyzz} = A_{zzyy} = -F, A_{zzzz} = F + G, A_{yzyz} = \frac{L}{2}, A_{xzxz} = \frac{M}{2}, A_{xyxy} = \frac{N}{2}$$
 (2.138)

such that

$$\mathbf{A}\boldsymbol{\sigma} = \begin{pmatrix} (G+H)\boldsymbol{\sigma}_{xx} - H\boldsymbol{\sigma}_{yy} - G\boldsymbol{\sigma}_{zz} & N\boldsymbol{\tau}_{xy} & M\boldsymbol{\tau}_{xz} \\ N\boldsymbol{\tau}_{xy} & -H\boldsymbol{\sigma}_{xx} + (F+H)\boldsymbol{\sigma}_{yy} - F\boldsymbol{\sigma}_{zz} & L\boldsymbol{\tau}_{yz} \\ M\boldsymbol{\tau}_{xz} & L\boldsymbol{\tau}_{yz} & -G\boldsymbol{\sigma}_{xx} - F\boldsymbol{\sigma}_{yy} + (F+G)\boldsymbol{\sigma}_{zz} \end{pmatrix}$$
(2.139)

and $\sigma \cdot A\sigma$ recovers the yield criterion.

The elements of the **A** matrix are physically defined by directionally dependent yield stresses prior to any hardening:

$$(G+H) = \frac{1}{(\sigma_{xx}^Y)^2} \qquad (F+H) = \frac{1}{(\sigma_{yy}^Y)^2} \qquad (F+G) = \frac{1}{(\sigma_{zz}^Y)^2}$$
(2.140)

$$F = \frac{1}{2} \left(\frac{1}{(\sigma_{yy}^Y)^2} + \frac{1}{(\sigma_{zz}^Y)^2} - \frac{1}{(\sigma_{xx}^Y)^2} \right) \qquad G = \frac{1}{2} \left(\frac{1}{(\sigma_{zz}^Y)^2} + \frac{1}{(\sigma_{xx}^Y)^2} - \frac{1}{(\sigma_{yy}^Y)^2} \right)$$
(2.141)

$$H = \frac{1}{2} \left(\frac{1}{(\sigma_{xx}^Y)^2} + \frac{1}{(\sigma_{yy}^Y)^2} - \frac{1}{(\sigma_{zz}^Y)^2} \right) \quad L = \frac{1}{2(\tau_{yz}^Y)^2} \quad M = \frac{1}{2(\tau_{xz}^Y)^2} \quad N = \frac{1}{2(\tau_{xy}^Y)^2} \quad (2.142)$$

To make physical sense, the **A** matrix must be positive semidefinite (so square root will always be of a non-negative number). The determinant of **A** is zero, but it can be diagonalized using its eigenvalues and three linearly independent eigenvectors. The calculations were done separately, but show that for **A** to be positive semidefinite, requires both:

$$F^{2} + G^{2} + H^{2} - FH - GH - FG \ge 0 \tag{2.143}$$

$$F + G + H - FH - GH - FG \ge 0$$

$$F + G + H \ge \sqrt{F^2 + G^2 + H^2 - FH - GH - FG}$$
(2.144)

Substituting yield stresses, the conditions can be recast as

$$\left(\frac{1}{\sigma_{xx}^Y} - \frac{1}{\sigma_{yy}^Y}\right)^2 \le \frac{1}{(\sigma_{zz}^Y)^2} \le \left(\frac{1}{\sigma_{xx}^Y} + \frac{1}{\sigma_{yy}^Y}\right)^2 \tag{2.145}$$

$$\left(\frac{1}{\sigma_{xx}^Y} - \frac{1}{\sigma_{zz}^Y}\right)^2 \le \frac{1}{(\sigma_{yy}^Y)^2} \le \left(\frac{1}{\sigma_{xx}^Y} + \frac{1}{\sigma_{zz}^Y}\right)^2 \tag{2.146}$$

$$\left(\frac{1}{\sigma_{zz}^Y} - \frac{1}{\sigma_{yy}^Y}\right)^2 \le \frac{1}{(\sigma_{xx}^Y)^2} \le \left(\frac{1}{\sigma_{zz}^Y} + \frac{1}{\sigma_{yy}^Y}\right)^2 \tag{2.147}$$

Two special cases are mentioned. If one yield stress is infinite (e.g., $\sigma_{xx}^Y = \infty$), the other two must be equal (e.g., $\sigma_{yy}^Y = \sigma_{zz}^Y$). If two yield stresses are related by $\sigma_{yy}^Y/\sigma_{xx}^Y = R$ then the other is bracketed by:

$$\frac{\sigma_{yy}^{Y}}{(1+R)} \le \sigma_{zz}^{Y} \le \frac{\sigma_{yy}^{Y}}{|1-R|} \tag{2.148}$$

For examples: if R=1 then $\sigma_{yy}^Y/2 \le \sigma_{zz}^Y \le \infty$; if R=0 or $R=\infty$ then $\sigma_{yy}^Y=\sigma_{zz}^Y$. For an isotropic material (*i.e.*, the Von Mises criterion), the key terms are

$$(G+H) = (F+H) = (F+G) = 2F = 2G = 2H = \frac{1}{\sigma_V^2}, \quad L = M = N = \frac{1}{2\tau_V^2} = \frac{3}{2\sigma_V^2}$$
 (2.149)

leading to an isotropic material with $K(\alpha) = \sigma_Y + E_p \alpha$ if $g(\alpha) = 1 + (E_p/\sigma_Y)\alpha$.

The derivatives with respect to material axes are found by differentiating with respect to material stress. The result is

$$df = (df_{xx}, df_{yy}, df_{zz}, df_{yz}, df_{xz}, df_{xy}) = \frac{\mathbf{A}\sigma}{\sqrt{\sigma \cdot \mathbf{A}\sigma}}$$
(2.150)

In the material axis system, the tensorial plastic strain increment is found from tensor product $\mathbf{A}\sigma$ from above:

$$d\varepsilon_p = \lambda df = \frac{\lambda \mathbf{A}\sigma}{\sqrt{\sigma \cdot \mathbf{A}\sigma}} \tag{2.151}$$

This strain results in a traceless tensor (i.e., only deviatoric plastic strains):

$$d\boldsymbol{\varepsilon}_{p} = \frac{\lambda}{\sqrt{\boldsymbol{\sigma} \cdot \mathbf{A} \boldsymbol{\sigma}}} \begin{pmatrix} \frac{\sigma_{xx}}{(\sigma_{xx}^{Y})^{2}} - H \sigma_{yy} - G \sigma_{zz} & N \tau_{xy} & M \tau_{xz} \\ N \tau_{xy} & -H \sigma_{xx} + \frac{\sigma_{yy}}{(\sigma_{yy}^{Y})^{2}} - F \sigma_{zz} & L \tau_{yz} \\ M \tau_{xz} & L \tau_{yz} & -G \sigma_{xx} - F \sigma_{yy} + \frac{\sigma_{zz}}{(\sigma_{zz}^{Y})^{2}} \end{pmatrix}$$

$$(2.152)$$

or by direct evaluation of matrix equation in Eq. 2.150, we have

$$d\boldsymbol{\varepsilon}_{p} = \lambda \begin{pmatrix} d\boldsymbol{f}_{xx} & \frac{1}{2}d\boldsymbol{f}_{xy} & \frac{1}{2}d\boldsymbol{f}_{xz} \\ \frac{1}{2}d\boldsymbol{f}_{xy} & d\boldsymbol{f}_{yy} & \frac{1}{2}d\boldsymbol{f}_{yz} \\ \frac{1}{2}d\boldsymbol{f}_{xz} & \frac{1}{2}d\boldsymbol{f}_{yz} & d\boldsymbol{f}_{zz} \end{pmatrix}$$
(2.153)

In other words, df_{xy} found from contracted form gives engineering plastic strains (as desired).

We assume hardening is a function only of equivalent plastic strain and thus α is cumulative plastic strain. Perhaps a general anisotropic material would have something different, but this assumption is common in metals. The update in α is thus

$$d\alpha = \sqrt{\frac{2}{3}} \|d\varepsilon_p\| = \lambda \sqrt{\frac{2}{3} \left(df_{xx}^2 + df_{yy}^2 + df_{zz}^2 + \frac{1}{2} df_{yz}^2 + \frac{1}{2} df_{xz}^2 + \frac{1}{2} df_{xy}^2 \right)}$$
(2.154)

The plastic internal variable is taken as $q = \alpha$ to give

$$dq = d\alpha = -\lambda h \tag{2.155}$$

which implies that

$$h = -\sqrt{\frac{2}{3}\left(df_{xx}^2 + df_{yy}^2 + df_{zz}^2 + \frac{1}{2}df_{yz}^2 + \frac{1}{2}df_{xz}^2 + \frac{1}{2}df_{xy}^2\right)}$$
(2.156)

and

$$df^{q} \cdot \mathbf{h} = g'(\alpha) \sqrt{\frac{2}{3} \left(df_{xx}^{2} + df_{yy}^{2} + df_{zz}^{2} + \frac{1}{2} df_{yz}^{2} + \frac{1}{2} df_{xz}^{2} + \frac{1}{2} df_{xy}^{2} \right)}$$
(2.157)

Some possible hardening laws are

$$g(\alpha) = (1 + K\alpha)^n, \ g'(\alpha) = nK(1 + K\alpha)^{n-1}, \ g'(0) = nK, \ K_n = \frac{(1 + K_1\alpha)^{\frac{1}{n}} - 1}{\alpha}$$
 (2.158)

$$g(\alpha) = 1 + K\alpha^{n}, \ g'(\alpha) = nK\alpha^{n-1} \ g'(0) = 0 \ (n \neq 1), \ K_{n} = (K_{1}\alpha)^{\frac{1}{n}}$$
 (2.159)

These two laws are identical when n=1 and give linear hardening. If K_1 is the hardening term when n=1 and then a new value of n is selected, the first law can preserve the initial slope, g'(0), by keeping the product constant or setting $K_n = K_1/n$; the second law will always have zero slope when $n \neq 1$ and thus cannot match the linear slope. The last equations for K_n give the value of K_n for new n to match the amount of hardening that occurs up to any specified α between the n=1 and n laws.

The numerical solution uses the following iterative equations

$$\boldsymbol{\sigma}^{(k)} = \boldsymbol{\sigma}^{trial} - \lambda^{(k)} \mathbf{C} df(\boldsymbol{\sigma}^{(k)})$$
 (2.160)

$$h^{(k)} = -\sqrt{\frac{2}{3}\left(df_{xx}^2 + df_{yy}^2 + df_{zz}^2 + \frac{1}{2}df_{yz}^2 + \frac{1}{2}df_{xz}^2 + \frac{1}{2}df_{xy}^2\right)}$$
(2.161)

$$f^{(k)} = f(\sigma^{(k)}, \alpha^{(k)})$$
 (2.162)

$$\frac{df^{(k)}}{d\lambda} = -\left(df(\boldsymbol{\sigma}^{(k)}) \cdot \mathbf{C}df(\boldsymbol{\sigma}^{(k)}) - g'(\alpha)h^{(k)}\right) \tag{2.163}$$

$$\lambda^{(k+1)} = \lambda^{(k)} - \frac{f^{(k)}}{df^{(k)}/d\lambda}$$
 (2.164)

$$\alpha^{(k+1)} = \alpha^0 - \lambda^{(k+1)} h^{(k)} \tag{2.165}$$

2.13 Quadratic Hill Criterion - Global Axes

The quadratic Hill yield criterion can implement anisotropic plasticity and hardening terms can be added to include aniostropic hardening as well. For 3D analysis, one version of Hill yield function with arbitrary hardening function (defined later) reduces to:

$$f = \sqrt{F(\overline{\sigma_{yy}} - \overline{\sigma_{zz}})^{2} + G(\overline{\sigma_{xx}} - \overline{\sigma_{zz}})^{2} + H(\overline{\sigma_{yy}} - \overline{\sigma_{xx}})^{2} + 2L\overline{\tau_{yz}}^{2} + 2M\overline{\tau_{xz}}^{2} + 2N\overline{\tau_{xy}}^{2}} - g(\boldsymbol{\alpha})$$

$$= \left[(G+H)\overline{\sigma_{xx}}^{2} + (F+H)\overline{\sigma_{yy}}^{2} + (F+G)\sigma_{zz}^{2} - 2F\overline{\sigma_{yy}}\sigma_{zz} - 2G\overline{\sigma_{xx}}\sigma_{zz} \right]$$

$$-2H\overline{\sigma_{xx}}\overline{\sigma_{yy}} + 2L\overline{\tau_{yz}}^{2} + 2M\overline{\tau_{xz}}^{2} + 2N\overline{\tau_{xy}}^{2} \right]^{1/2} - g(\boldsymbol{\alpha})$$

$$= \sqrt{\overline{\sigma}^{T}}\overline{\mathbf{A}}\overline{\sigma} - g(\boldsymbol{\alpha})$$

$$(2.168)$$

where $\overline{\sigma}^T = (\overline{\sigma_{xx}}, \overline{\sigma_{yy}}, \overline{\sigma_{zz}}, \overline{\tau_{yz}}, \overline{\tau_{xz}}, \overline{\tau_{xy}})$, $g(\alpha)$ is some hardening function of internal variables, and

$$\mathbf{A} = \begin{pmatrix} G+H & -H & -G & 0 & 0 & 0 \\ -H & F+H & -F & 0 & 0 & 0 \\ -G & -F & F+G & 0 & 0 & 0 \\ 0 & 0 & 0 & 2L & 0 & 0 \\ 0 & 0 & 0 & 0 & 2M & 0 \\ 0 & 0 & 0 & 0 & 0 & 2N \end{pmatrix}$$
 (2.169)

An overbar is the stress in the material coordinates. Defining \mathbf{R}_{σ} as rotation matrix to rotate stress from material to the global axes, we have

$$\sigma = \mathbf{R}_{\sigma} \overline{\sigma}$$
 or $\overline{\sigma} = \mathbf{R}_{\sigma}^{-1} \sigma = \mathbf{R}_{\varepsilon}^{T} \sigma$ (2.170)

In modeling, \mathbf{R}_{σ}^{-1} is derived from $\mathbf{R}_{tot}^T \boldsymbol{\sigma} \mathbf{R}_{tot}$ where \mathbf{R}_{tot} is 3×3 rotation matrix derived from initial orientation and it is output of polar decomposition of current deformation gradient (i.e., \mathbf{R}_{tot} rotates from material axes to analysis axes or $\boldsymbol{\sigma} = \mathbf{R}_{tot} \overline{\boldsymbol{\sigma}} \mathbf{R}_{tot}^T$). The corresponding equation in analysis axis coordinates for the yield function takes the form

$$f = \sqrt{\boldsymbol{\sigma}^{T}(\mathbf{R}_{\sigma}^{-1})^{T}\mathbf{A}\mathbf{R}_{\sigma}\boldsymbol{\sigma}} - g(\boldsymbol{\alpha}) = \sqrt{\boldsymbol{\sigma}\mathbf{A}'\boldsymbol{\sigma}} - g(\boldsymbol{\alpha})$$
(2.171)

where $\mathbf{A}' = \mathbf{R}_{\varepsilon} \mathbf{A} \mathbf{R}_{\varepsilon}^T$ is the \mathbf{A} matrix rotated using rotation matrix for transformation of strains in the contracted nomenclature. See the previous section for details on the elements of the \mathbf{A} matrix in the material axis system.

The derivatives with respect to analyses axes are found by differentiating with respect to stress in the material axes and then rotating the result by strain rotation to the analysis axes. The result is

$$df = \frac{\mathbf{R}_{\varepsilon} \mathbf{A} \overline{\sigma}}{\sqrt{\overline{\sigma}^T \mathbf{A} \overline{\sigma}}} \tag{2.172}$$

Substituting for $\overline{\sigma}$ leads to

$$df = \frac{\mathbf{A}'\sigma}{\sqrt{\sigma^T \mathbf{A}'\sigma}} \tag{2.173}$$

as expected. The df_{ij} found in contracted notation give the engineering plastic shear strain.

We assume hardening is a function only of equivalent plastic strain and thus α is cumulative plastic strain. Perhaps a general anisotropic material would have something different, but this assumption is common in metals. The update in alpha is thus

$$d\alpha = \sqrt{\frac{2}{3}} \|d\varepsilon_p\| = \lambda \sqrt{\frac{2}{3} \left(df_{xx}^2 + df_{yy}^2 + df_{zz}^2 + \frac{1}{2} df_{yz}^2 + \frac{1}{2} df_{xz}^2 + \frac{1}{2} df_{xy}^2 \right)}$$
(2.174)

Thus the update vector is

$$h = -\sqrt{\frac{2}{3} \left(df_{xx}^2 + df_{yy}^2 + df_{zz}^2 + \frac{1}{2} df_{yz}^2 + \frac{1}{2} df_{xz}^2 + \frac{1}{2} df_{xy}^2 \right)}$$
(2.175)

and

$$df^{\alpha} \cdot \mathbf{h} = g'(\alpha) \sqrt{\frac{2}{3} \left(df_{xx}^{2} + df_{yy}^{2} + df_{zz}^{2} + \frac{1}{2} df_{yz}^{2} + \frac{1}{2} df_{xz}^{2} + \frac{1}{2} df_{xy}^{2} \right)}$$
(2.176)

Some possible hardening laws are

$$g(\alpha) = (1 + K\alpha)^n, \ g'(\alpha) = nK(1 + K\alpha)^{n-1}, \ g'(0) = nK, \ K_n = \frac{(1 + K_1\alpha)^{\frac{1}{n}} - 1}{\alpha}$$
 (2.177)

$$g(\alpha) = 1 + K\alpha^{n}, \ g'(\alpha) = nK\alpha^{n-1} \ g'(0) = 0 \ (n \neq 1), \ K_{n} = (K_{1}\alpha)^{\frac{1}{n}}$$
 (2.178)

These two laws are identical when n=1 and give linear hardening. If K_1 is the hardening term when n=1 and then a new value of n is selected, the first law can preserve the initial slope, g'(0), by keeping the product constant or setting $K_n = K_1/n$; the second law will always have zero slope when $n \neq 1$ and thus cannot match the linear slope. The last equations for K_n give the value of K_n for new n to match the amount of hardening that occurs up to any specified α between the n=1 and n laws.

The numerical solution uses the following iterative equations

$$\boldsymbol{\sigma}^{(k)} = \boldsymbol{\sigma}^{trial} - \lambda^{(k)} \mathbf{C} df(\lambda^{(k)}) \tag{2.179}$$

$$\boldsymbol{h}^{(k)} = -\sqrt{\frac{2}{3} \left(df_{xx}^2 + df_{yy}^2 + df_{zz}^2 + \frac{1}{2} df_{yz}^2 + \frac{1}{2} df_{xz}^2 + \frac{1}{2} df_{xy}^2 \right)}$$
(2.180)

$$f^{(k)} = f(\sigma^{(k)}, a^{(k)}) \tag{2.181}$$

$$\frac{df^{(k)}}{d\lambda} = -\left(df(\boldsymbol{\sigma}^{(k)}) \cdot \mathbf{C}df(\boldsymbol{\sigma}^{(k)}) + df^{\alpha} \cdot \boldsymbol{h}^{(k)}\right)$$
(2.182)

$$\lambda^{(k+1)} = \lambda^{(k)} - \frac{f^{(k)}}{df^{(k)}/d\lambda}$$
 (2.183)

$$\boldsymbol{\alpha}^{(k+1)} = \boldsymbol{\alpha}^0 - \lambda^{(k+1)} \boldsymbol{h}^{(k)} \tag{2.184}$$

2.14 More General Plasticity Methods

We define several variables (6 components of stress and λ) and need to solve the simultaneous equations:

$$0 = \Delta \boldsymbol{\sigma} - \mathsf{C}(d\boldsymbol{\varepsilon} - d\boldsymbol{\varepsilon}_p) = \Delta \boldsymbol{\sigma} - \mathsf{C}d\boldsymbol{\varepsilon} + \lambda \mathsf{C}\nabla f(\boldsymbol{\sigma} + \Delta \boldsymbol{\sigma}, \alpha + d\alpha) \tag{2.185}$$

$$0 = f(\boldsymbol{\sigma} + \Delta \boldsymbol{\sigma}, \alpha + d\alpha) = f\left(\boldsymbol{\sigma} + \Delta \boldsymbol{\sigma}, \alpha + \sqrt{\frac{3}{2}}\lambda \|\nabla f\|\right)$$
 (2.186)

We convert to F(x) = 0 where x_1 to x_6 are components of stress increment and x_7 is λ . The Newton's method solution is:

$$J(x^{(n)})(x^{(n+1)} - x^{(n)}) = -F(x^{(n)})$$
(2.187)

Here $J(x^{(n)})$ is the Jacobian of $F(x^{(n)})$. The equation can be written as

$$J(\mathbf{x}^{(n)}) \left(\mathbf{x}^{(n+1)} - \mathbf{x}^{(n)} \right) = \begin{bmatrix} 1 + \lambda C \frac{d\nabla f}{d\Delta \boldsymbol{\sigma}} & C\nabla f \\ \nabla f & \frac{df}{d\alpha} \frac{d\alpha}{d\lambda} \end{bmatrix}^{(n)} \begin{bmatrix} \delta \boldsymbol{\sigma}^{(n)} \\ \delta \lambda^{(n)} \end{bmatrix} = - \begin{bmatrix} \boldsymbol{p}^{(n)} \\ q^{(n)} \end{bmatrix}$$
(2.188)

where

$$\mathbf{p}^{(n)} = \Delta \boldsymbol{\sigma}^{(n)} - \mathsf{C} d\boldsymbol{\varepsilon} + \lambda^{(n)} \mathsf{C} \nabla f(\boldsymbol{\sigma} + \Delta \boldsymbol{\sigma}^{(n)}, \alpha + d\alpha^{(n)}) \tag{2.189}$$

$$q^{(n)} = f\left(\boldsymbol{\sigma} + \Delta \boldsymbol{\sigma}^{(n)}, \alpha + d\alpha^{(n)}\right) \tag{2.190}$$

$$d\alpha^{(n)} = \sqrt{\frac{3}{2}}\lambda \left\| \nabla f(\boldsymbol{\sigma} + \Delta \boldsymbol{\sigma}^{(n)}, \alpha + d\alpha^{(n)}) \right\|$$
 (2.191)

The next iteration for stress and λ are

$$\Delta \sigma^{(n+1)} = \Delta \sigma^{(n)} + \delta \sigma^{(n)} \tag{2.192}$$

$$\delta \lambda^{(n+1)} = \lambda^{(n)} + \delta \lambda^{(n)} \tag{2.193}$$

For the special case of J_2 plasticity, the gradient ∇f is independent of the increment, which implies $d\nabla f/d\Delta \sigma = 0$. The incremental resulgts can be solved as:

$$\delta \boldsymbol{\sigma}^{(n)} = -\boldsymbol{p}^{(n)} - \delta \lambda^{(n)} \mathsf{C} \nabla f \qquad \text{and} \qquad \delta \lambda^{(n)} = -\frac{q^{(n)} - \nabla f \cdot \boldsymbol{p}^{(n)}}{\nabla f \cdot \mathsf{C} \nabla f - \frac{df}{d\alpha} \frac{d\alpha}{d\beta}}$$
(2.194)

For next increment:

$$\boldsymbol{p}^{(n+1)} = \Delta \boldsymbol{\sigma}^{(n+1)} - Cd\boldsymbol{\varepsilon} + \lambda^{(n+1)}C\nabla f \tag{2.195}$$

$$= \Delta \sigma^{(n)} - p^{(n)} - \delta \lambda^{(n)} \mathsf{C} \nabla f - \mathsf{C} d \varepsilon + (\lambda^{(n)} + \delta \lambda^{(n)}) \mathsf{C} \nabla f \tag{2.196}$$

$$= 0 ag{2.197}$$

We thus seed the numerical solution with $\Delta \sigma^{(n)} = Cd\varepsilon$ and $\lambda^{(0)} = 0$ leading to $p^{(0)} = 0$ and all other $p_{(n)} = 0$. The final stress increment becomes:

$$\Delta \boldsymbol{\sigma}^{(n)} = -\sum_{i=0}^{n} \delta \lambda^{(i)} \mathsf{C} \nabla f = -\lambda^{(n)} \mathsf{C} \nabla f \tag{2.198}$$

The analysis reduces to a single equation, which may need numerical solution, of

$$0 = f\left(\boldsymbol{\sigma} + \mathsf{C}d\boldsymbol{\varepsilon} - \lambda^{(n)}\mathsf{C}\nabla f, \alpha + d\alpha^{(n)}\right) = f_{trial} - \lambda^{(n)}\left(\nabla f \cdot \mathsf{C}\nabla - \frac{df}{d\alpha}\frac{d\alpha}{d\lambda}\right) \tag{2.199}$$

Starting with $\lambda^{(0)}$ and $q^{(0)} = f_{trial}$ leads to Newton's method with step increment:

$$\delta \lambda^{(n)} = -\frac{q^{(n)}}{\nabla f \cdot \nabla f - \frac{df}{d\alpha} \frac{d\alpha}{d\lambda}}$$
 (2.200)

which is identical to J_2 plasticity methods defined above. The derivation assumes a single hardening variable, α but can easily be generalized to more than one.

Chapter 3

Small Strain Materials with Large Rotation

3.1 Introduction

Beginning in NairnMPM, version 11 and OSParticulas, version 2, all small strain materials were converted to new methods that track strain better and have two options to better account for large rotations. In brief, all materials track total deformation gradient. IN the new "large rotation" mode, on each time step the deformation gradient is decomposed to get rotation matrix and small strain increment in material axes. After performing the constitutive law (in material axes), the result are rotated to the current analysis coordinates. The default mode is a "small rotation" mode which is the default mode and similar to before, but has be updated to track deformation gradient and to track strains correctly. The main difference between large and small rotation is that the small rotation method uses an approximation to the incremental rotation matrix rather the find it by polar decomposition. The small rotation mode is therefore more efficient and mauy be very close to the large rotation mode for many problems. In addition, output of strains (as global quantities or VTK archive) calculate the strain in the current coordinates). This conversion works for both elastic and plastic strains and now makes tracking of strains much better. The visualization tools also extract all strains correctly from the tracked to deformation gradient.

3.2 Analysis in Current Configuration

For isotropic materials, any axis system can be considered as material axis systems and therefore, for efficiency (maybe), the small strains increment is found in the current analysis axis system. The same approach can be used for anisotropic materials, provided the material properties are rotated as well. The deformation gradients after step n-1 and n can be decomposed into

$$\mathbf{F}_n = \mathbf{V}_n \mathbf{R}_n, \quad \mathbf{F}_{n-1} = \mathbf{V}_{n-1} \mathbf{R}_{n-1}, \quad \text{leading to} \quad \mathbf{d} \mathbf{R} = \mathbf{R}_n \mathbf{R}_{n-1}^T$$
 (3.1)

where $d\mathbf{R}$ is increment rotation due to incremental deformation gradient $d\mathbf{F}$ (or $\mathbf{F}_n = d\mathbf{F}\mathbf{F}_{n-1}$) and we have not assume dR is same matrix as decomposition of $d\mathbf{F}$, but I think they might be same (at least for a small increment). The small strains from previous and current step are:

$$\boldsymbol{\varepsilon}_n = \mathbf{V}_n - \mathbf{I}$$
 and $\boldsymbol{\varepsilon}_{n-1} = \mathbf{V}_{n-1} - \mathbf{I}$ (3.2)

This the strain increment in current coordinates is found by rotating previous strain by dR and subtracting from new strain:

$$d\varepsilon = \mathbf{V}_n - \mathbf{dRV}_{n-1} \mathbf{dR}^T \tag{3.3}$$

The incremental stress is

$$d\sigma = \mathbf{C}(d\varepsilon - d\varepsilon_{res}) \tag{3.4}$$

where $d\varepsilon_{res}$ is the incremental residual strain. The stress update rotates previous stress to new axes and adds this stress:

$$\sigma_n = \mathbf{dR}\sigma_{n-1}\mathbf{dR}^T + d\sigma \tag{3.5}$$

where **dR** found from above and not by polar decomposition of **dF** (although it could be found approximately that way).

The algorithm is

- 1. Decompose current $\mathbf{F}_{n-1} = \mathbf{V}_{n-1} \mathbf{R}_{n-1}$ to get \mathbf{V}_{n-1} and \mathbf{R}_{n-1} . Note that if the particle tracks its rotation matrix, this polar decomposition can be skipped and just retrieve \mathbf{R}_{n-1}
- 2. Calculate $d\mathbf{F} = \exp(\nabla v \Delta t)$, find $\mathbf{F}_n = d\mathbf{F}\mathbf{F}_{n-1}$ and decompose to get $\mathbf{F}_{n-1} = \mathbf{V}_{n-1}\mathbf{R}_{n-1}$ and find $d\mathbf{R} = \mathbf{R}_n\mathbf{R}_{n-1}^T$.
- 3. Find incremental strain from $d\varepsilon = \mathbf{V}_n \mathbf{dRV}_{n-1}\mathbf{dR}^T$.
- 4. Update stress to $\sigma_n = \mathbf{dR}\sigma_{n-1}\mathbf{dR}^T + \mathbf{C}(d\varepsilon d\varepsilon_{res})$. For anisotropic materials, **C** and $d\varepsilon_{res}$ need to be rotated into the current configuration.

Compared to Hypoelastic correction method (see next section), this algorithm adds two polar decompositions. One of them can be eliminated by tracking \mathbf{R} as well. For plasticity materials, the plastic strain must be rotated like the stress ($\boldsymbol{\varepsilon}_{p,n} = \mathbf{d}\mathbf{R}\boldsymbol{\varepsilon}_{p,n-1}\mathbf{d}\mathbf{R}^T + d\boldsymbol{\varepsilon}_p$). It is tracked as plastic strain in the analysis coordinates.

3.2.1 Hypoelastic Version

Assuming small incremental strain and rotation, the algorithm can be approximated as a hypoelastic material using:

- 1. Calculate $d\mathbf{F} = \mathbf{I} + \nabla v \Delta t$ and decompose to get $d\mathbf{V} = \mathbf{I} + d\varepsilon$ and $d\mathbf{R} = \mathbf{I} + d\omega$
- 2. Previous \mathbf{F}_{n-1} in small strain decomposes to $\mathbf{V}_{n-1} = \mathbf{I} + \varepsilon_{n-1}$ and $\mathbf{R}_{n-1} = \mathbf{I} + \boldsymbol{\omega}_{n-1}$.
- 3. Total deformation is $\mathbf{F}_n = \mathbf{dFF}_{n-1}$, which in small strain is $(\mathbf{I} + d\varepsilon + d\boldsymbol{\omega})(\mathbf{I} + \varepsilon_{n-1} + \boldsymbol{\omega}_{n-1})$ which decompose to $\mathbf{V}_n = \mathbf{I} + d\varepsilon + \varepsilon_{n-1}$ and $\mathbf{R}_n = \mathbf{I} + d\boldsymbol{\omega} + \boldsymbol{\omega}_{n-1}$.
- 4. The strain increment can come for $d\varepsilon = \mathbf{V}_n \mathbf{V}_{n-1} = \mathbf{dV} \mathbf{I}$.
- 5. Update deformation gradient to $\mathbf{F}_n = \mathbf{dFF}_{n-1}$. Note that full matrix method is needed otherwise large rotations will deteriorate the solution.
- 6. The incremental stress is $d\sigma = \mathbf{dR}\sigma_{n-1}\mathbf{dR}^T \sigma_{n-1} + \mathbf{C}(d\varepsilon d\varepsilon_{res})$, which expands to

$$d\sigma \approx d\boldsymbol{\omega}\sigma_{n-1} + \sigma_{n-1}d\boldsymbol{\omega}^{T} + d\boldsymbol{\omega}\sigma_{n-1}d\boldsymbol{\omega}^{T} + \mathbf{C}(d\varepsilon - d\varepsilon_{res})$$
(3.6)

$$= d\boldsymbol{\omega}\boldsymbol{\sigma}_{n-1} + (d\boldsymbol{\omega}\boldsymbol{\sigma}_{n-1})^{T} + d\boldsymbol{\omega}\boldsymbol{\sigma}_{n-1}d\boldsymbol{\omega}^{T} + \mathbf{C}(d\varepsilon - d\varepsilon_{res})$$
(3.7)

For 2D calculations, an expansion to second order of the dR decomposition results in

$$d\boldsymbol{\omega} = \mathbf{dR} - \mathbf{I} = \begin{pmatrix} -\frac{d\omega_{xy}^2}{8} & -\left(1 - \frac{d\varepsilon_{xx} + d\varepsilon_{yy}}{2}\right) \frac{d\omega_{xy}}{2} \\ \left(1 - \frac{d\varepsilon_{xx} + d\varepsilon_{yy}}{2}\right) \frac{d\omega_{xy}}{2} & -\frac{d\omega_{xy}^2}{8} \end{pmatrix}$$
(3.8)

where $d\omega_{xy}$ is engineering rotational strain tracked in the code and equal to $2\Omega_{yx}$ where $2\Omega = \nabla u - \nabla u^T$. Substituting into above expression and truncating at second order gives stress update of

$$\begin{pmatrix}
d\sigma_{xx} \\
d\sigma_{yy} \\
d\tau_{xy}
\end{pmatrix} = \begin{pmatrix}
d\sigma_{xx}^{(0)} - \left(1 - \frac{d\varepsilon_{xx} + d\varepsilon_{yy}}{2}\right) d\omega_{xy} \tau_{xy} - \frac{d\omega_{xy}^2}{4} (\sigma_{xx} - \sigma_{yy}) \\
d\sigma_{yy}^{(0)} + \left(1 - \frac{d\varepsilon_{xx} + d\varepsilon_{yy}}{2}\right) d\omega_{xy} \tau_{xy} + \frac{d\omega_{xy}^2}{4} (\sigma_{xx} - \sigma_{yy}) \\
d\tau_{xy}^{(0)} + \frac{1}{2} \left(1 - \frac{d\varepsilon_{xx} + d\varepsilon_{yy}}{2}\right) d\omega_{xy} (\sigma_{xx} - \sigma_{yy}) - \frac{d\omega_{xy}^2}{2} \tau_{xy}
\end{pmatrix}$$
(3.9)

where $d\sigma_{ij}^{(0)}$ come from $\mathbf{C}(d\varepsilon - d\varepsilon_{res})$. The same update can be used to account for rotations of plastic strain (being sure to account for tracking of engineering plastic shear strain) as:

$$\begin{pmatrix}
d\varepsilon_{xx,p} \\
d\varepsilon_{yy,p} \\
d\gamma_{xy,p}
\end{pmatrix} = \begin{pmatrix}
d\varepsilon_{xx,p}^{(0)} - \frac{1}{2} \left(1 - \frac{d\varepsilon_{xx} + d\varepsilon_{yy}}{2} \right) d\omega_{xy} \gamma_{xy,p} - \frac{d\omega_{xy}^{2}}{4} (\varepsilon_{xx,p} - \varepsilon_{yy,p}) \\
d\varepsilon_{yy,p}^{(0)} + \frac{1}{2} \left(1 - \frac{d\varepsilon_{xx} + d\varepsilon_{yy}}{2} \right) d\omega_{xy} \gamma_{xy,p} + \frac{d\omega_{xy}^{2}}{4} (\varepsilon_{xx,p} - \varepsilon_{yy,p}) \\
d\gamma_{xy,p}^{(0)} + \left(1 - \frac{d\varepsilon_{xx} + d\varepsilon_{yy}}{2} \right) d\omega_{xy} (\varepsilon_{xx,p} - \varepsilon_{yy,p}) - \frac{d\omega_{xy}^{2}}{2} \gamma_{xy,p}
\end{pmatrix}$$
(3.10)

where $d\varepsilon_{ij,p}^{(0)}$ on calculated plastic strain increments (and may be zero when deformation is elastic). Most published implementation of hypoelasticity truncate at the first order term. In 2D, it is easy to add the second order term.

For 3D calculations, it appears difficult to do a second order expansion of **dR**. Instead, a first order expansion is used:

$$d\boldsymbol{\omega} = \mathbf{dR} - \mathbf{I} = \begin{pmatrix} 0 & -\frac{d\omega_{xy}}{2} & -\frac{d\omega_{xz}}{2} \\ \frac{d\omega_{xy}}{2} & 0 & -\frac{d\omega_{yz}}{2} \\ \frac{d\omega_{xz}}{2} & \frac{d\omega_{yz}}{2} & 0 \end{pmatrix}$$
(3.11)

The first order update becomes:

$$\begin{pmatrix} d\sigma_{xx,p} \\ d\sigma_{yy,p} \\ d\sigma_{zz,p} \\ d\tau_{yz,p} \\ d\tau_{xy,p} \end{pmatrix} = \begin{pmatrix} d\sigma_{xx,p}^{(0)} - d\omega_{xy}\tau_{xy,p} - d\omega_{xz}\tau_{xz,p} \\ d\sigma_{yy,p}^{(0)} + d\omega_{xy}\tau_{xy,p} - d\omega_{yz}\tau_{yz,p} \\ d\sigma_{yy,p}^{(0)} + d\omega_{xz}\tau_{xz,p} + d\omega_{yz}\tau_{yz,p} \\ d\tau_{yz,p}^{(0)} + \frac{d\omega_{yz}}{2}(\sigma_{yy,p} - \sigma_{zz,p}) + \frac{d\omega_{xz}\tau_{xz}}{2} + \frac{d\omega_{xy}\tau_{xy}}{2} \\ d\tau_{xz,p}^{(0)} + \frac{d\omega_{xz}}{2}(\sigma_{xx,p} - \sigma_{zz,p}) + \frac{d\omega_{yz}\tau_{yz}}{2} - \frac{d\omega_{xy}\tau_{xy}}{2} \\ d\tau_{xy,p}^{(0)} + \frac{d\omega_{xy}}{2}(\sigma_{xx,p} - \sigma_{yy,p}) - \frac{d\omega_{xz}\tau_{xz}}{2} - \frac{d\omega_{yz}\tau_{yz}}{2} \end{pmatrix}$$
(3.12)

The same update can be used to account for rotations of plastic strain (being sure to account for tracking of engineering plastic shear strain) as:

$$\begin{pmatrix}
d\varepsilon_{xx,p} \\
d\varepsilon_{yy,p} \\
d\varepsilon_{zz,p} \\
d\gamma_{yz,p} \\
d\gamma_{xz,p} \\
d\gamma_{xy,p}
\end{pmatrix} = \begin{pmatrix}
d\varepsilon_{xx,p}^{(0)} - \frac{d\omega_{xy}\gamma_{xy,p}}{2} - \frac{d\omega_{xz}\gamma_{xz,p}}{2} \\
d\varepsilon_{yy,p}^{(0)} + \frac{d\omega_{xy}\gamma_{xy,p}}{2} - \frac{d\omega_{yz}\gamma_{yz,p}}{2} \\
d\varepsilon_{zz,p}^{(0)} + \frac{d\omega_{xz}\gamma_{xz,p}}{2} + \frac{d\omega_{yz}\gamma_{yz,p}}{2} \\
d\gamma_{yz,p}^{(0)} + d\omega_{yz}(\sigma_{yy,p} - \sigma_{zz,p}) + \frac{d\omega_{xz}\gamma_{xz}}{2} + \frac{d\omega_{xy}\gamma_{xy}}{2} \\
d\gamma_{xz,p}^{(0)} + d\omega_{xz}(\sigma_{xx,p} - \sigma_{zz,p}) + \frac{d\omega_{yz}\gamma_{yz}}{2} - \frac{d\omega_{xy}\gamma_{xy}}{2} \\
d\gamma_{xy,p}^{(0)} + d\omega_{xy}(\sigma_{xx,p} - \sigma_{yy,p}) - \frac{d\omega_{xz}\gamma_{xz}}{2} - \frac{d\omega_{yz}\gamma_{yz}}{2}
\end{pmatrix}$$
(3.13)

These equations appear with published hypoelasticity equation, but the derivation explicitly from polar decomposition is usually not give along with the equations.

Analysis in Current Configuration - OLD METHOD

For isotropic materials, any axis system can be considered as material axis systems and therefore, for efficiency, the small strains increment is found in the current analysis axis system. The same approach can be used for anisotropic materials, provided the material properties are rotated as well. The deformation gradient after step n can be decomposed into

$$\mathbf{F}_n = \mathbf{V}_n \mathbf{R}_n = \mathbf{dVV}_{n-1}^{(R)} \mathbf{dRR}_{n-1}$$
(3.14)

where V is the left stretch and R is the rotation matrix., dV is incremental stretch this time step, and $\mathbf{V}_{n-1}^{(R)}$ is the left stretch from previous time step rotated to current time step. If \mathbf{dR} is the incremental rotation this time step then

$$\mathbf{V}_{n-1}^{(R)} = \mathbf{dRV}_{n-1} \mathbf{dR}^T \tag{3.15}$$

then

$$\mathbf{F}_{n} = \mathbf{dV}\mathbf{dRV}_{n-1}\mathbf{dR}^{T}\mathbf{dRR}_{n-1} = (\mathbf{dV}\mathbf{dR})(\mathbf{V}_{n-1}\mathbf{R}_{n-1}) = \mathbf{dFF}_{n-1}$$
(3.16)

where **dF** is the incremental deformation this time step.

The small strain in the analysis axis system is $\varepsilon = V - I$. The incremental strain (in current axes) is

$$d\varepsilon = (\mathbf{V} - \mathbf{I}) - (\mathbf{V}_{n-1}^{(R)} - \mathbf{I}) = \mathbf{V} - \mathbf{V}_{n-1}^{(R)}$$
(3.17)

$$= dVV_{n-1}^{(R)} - V_{n-1}^{(R)} = (dV - I)V_{n-1}^{(R)}$$

$$= (dV - I)dRV_{n-1}dR^{T}$$
(3.18)

$$= (dV - I)dRV_{n-1}dR^{T}$$
(3.19)

The incremental stress is

$$d\sigma = \mathbf{C}(d\varepsilon - d\varepsilon_{res}) \tag{3.20}$$

where $d\varepsilon_{res}$ is the incremental residual strain. The stress update rotated previous stress to new axes and adds this stress:

$$\sigma_n = \mathbf{dR}\sigma_{n-1}\mathbf{dR}^T + d\sigma \tag{3.21}$$

The algorithm is

- 1. Decompose current $\mathbf{F}_{n-1} = \mathbf{V}_{n-1} \mathbf{R}_{n-1}$ to get \mathbf{V}_{n-1} and \mathbf{R}_{n-1} . Note that if the particle tracks its rotation matrix, this polar decomposition can be skipped and just retrieve \mathbf{R}_{n-1}
- 2. Calculate $d\mathbf{F} = \exp(\nabla v \Delta t)$ and decompose to get $d\mathbf{V}$ and $d\mathbf{R}$ and calculate $\mathbf{R}_n = d\mathbf{R}\mathbf{R}_{n-1}$.
- 3. Find incremental strain from

$$d\varepsilon = (\mathbf{dV} - \mathbf{I})\mathbf{dRV}_{n-1}\mathbf{dR}^{T} = (\mathbf{dV} - \mathbf{I})\mathbf{dRF}_{n-1}\mathbf{R}_{n-1}^{T}\mathbf{dR}^{T} = (\mathbf{dV} - \mathbf{I})\mathbf{dRF}_{n-1}\mathbf{R}_{n}^{T}$$
(3.22)

Use first is decomposition found V_{n-1} or use last if rotation matrix is tracked

- 4. Update deformation gradient to $\mathbf{F}_n = \mathbf{dFF}_{n-1}$
- 5. Update stress to $\sigma_n = \mathbf{dR}\sigma_{n-1}\mathbf{dR}^T + \mathbf{C}(d\varepsilon d\varepsilon_{res})$. For anisotropic materials, **C** and $d\varepsilon_{res}$ need to be rotated into the current configuration.

Compared to Hypoelastic correction method (see next section), this algorithm adds two polar decompositions. One of them can be eliminated by tracking R as well. For plasticity materials, the plastic strain must be rotated like the stress ($\varepsilon_{p,n} = \mathbf{dR}\varepsilon_{p,n-1}\mathbf{dR}^T + d\varepsilon_p$). It is tracked as plastic strain in the analysis coordinates.

3.4 Analysis in Material Axis System

An alternative is to do calculations in the material axis system. This approach is only used for anisotropic materials when using large rotation method with polar decompositions. For anisotropic materials, the system has to be rotated into the material axes and those axes may not line up with the initial analysis axes. Accounting for arbitrary initial orientation, the total deformation gradient from the material axes is

$$\mathbf{F}_{n}^{(tot)} = \mathbf{F}_{n} \mathbf{F}_{0} = \mathbf{F}_{n} \mathbf{R}_{0} \tag{3.23}$$

where \mathbf{F}_n is deformation from the analysis axes (and the \mathbf{F} tracked in calculations) and $\mathbf{F}_0 = \mathbf{R}_0$ is initial deformation (which is only a rotation) from material axes to the initial analyses axes. We decompose total deformation into:

$$\mathbf{F}_{n}^{(tot)} = \mathbf{R}_{n} \mathbf{U}_{n} \mathbf{R}_{0} \tag{3.24}$$

where \mathbf{R}_n is rotation from initial analysis axes to the current configuration and \mathbf{U}_n is the right stretch in the initial analysis axes.

Next imagine incremental deformation dF. Then

$$\mathbf{F}_{n}^{(tot)} = \mathbf{dFF}_{n-1}\mathbf{R}_{0} \tag{3.25}$$

and decompose previous deformation

$$\mathbf{F}_{n-1}^{(tot)} = \mathbf{F}_{n-1} \mathbf{R}_0 = \mathbf{R}_{n-1} \mathbf{U}_{n-1} \mathbf{R}_0$$
 (3.26)

Defining strain in initial axes from the right stretch (i.e., $\varepsilon = \mathbf{U} - \mathbf{I}$), the strain in the material axes is found by rotating from initial axes to the material axes

$$\varepsilon = \mathbf{R}_0^T (\mathbf{U}_n - \mathbf{I}) \mathbf{R}_0 \tag{3.27}$$

The incremental strain in the material axes becomes

$$d\varepsilon = \varepsilon_n - \varepsilon_{n-1} = \mathbf{R}_0^T (\mathbf{U}_n - \mathbf{U}_{n-1}) \mathbf{R}_0$$
(3.28)

Although above analysis is correct, the incremental strain is found by subtracting two non-incremental terms, which might be cause for concern. We can derive an alternate approach that appears to be more stable numerically. We can decompose \mathbf{F}_n using incremental terms

$$\mathbf{F}_n = \mathbf{dRdUR}_{n-1}\mathbf{U}_{n-1} = \mathbf{dRR}_{n-1}\mathbf{R}_{n-1}^T\mathbf{dUR}_{n-1}\mathbf{U}_{n-1} \approx \mathbf{R}_n\mathbf{U}_n$$
(3.29)

where dR and dU are from polar decomposition of dF. From the last result we can associate:

$$\mathbf{R}_n \approx \mathbf{dRR}_{n-1}$$
 and $\mathbf{U}_n \approx \mathbf{R}_{n-1}^T \mathbf{dUR}_{n-1} \mathbf{U}_{n-1}$ (3.30)

The are not exact in large deformation theory, but they are exact (to strain increment squared) in small strain theory. The strain increment becomes

$$d\varepsilon = \mathbf{R}_0^T \left[\left(\mathbf{R}_{n-1}^T \mathbf{d} \mathbf{U} \mathbf{R}_{n-1} - \mathbf{I} \right) \mathbf{U}_{n-1} \right] \mathbf{R}_0$$
 (3.31)

which no longer subtracts two non increment strains. Instead, an incremental strain, ($\mathbf{R}_{n-1}^T \mathbf{dUR}_{n-1} - \mathbf{I}$), is multiplied by non-incremental stretch, \mathbf{U}_{n-1} , and then rotated.

The algorithm is

1. Decompose current \mathbf{F}_{n-1} to get \mathbf{U}_{n-1} and \mathbf{R}_{n-1} .

- 2. Calculate $d\mathbf{F} = \exp(\nabla vt)$, decompose it to get $d\mathbf{R}$ and $d\mathbf{U}$, and update deformation gradient to $\mathbf{F}_n = d\mathbf{F}\mathbf{F}_{n-1}$.
- 3. Find incremental strain from

$$d\varepsilon = \mathbf{R}_0^T \left[(\mathbf{R}_{n-1}^T \mathbf{d} \mathbf{U} \mathbf{R}_{n-1} - \mathbf{I}) \mathbf{U}_{n-1} \right] \mathbf{R}_0$$
 (3.32)

- 4. Find incremental stress from $d\sigma = \mathbf{C}(d\varepsilon d\varepsilon_{res})$.
- 5. Rotate previous stress and incremental stress to analysis axes using

$$\sigma_n = dR\sigma_{n-1}dR^T + R^{(tot)}d\sigma R^{(tot)^T}$$
(3.33)

The first term rotates prior stress into new configuration and the second rotates incremental stress from material axes to new configuration. The total rotation matrix is $R^{(tot)} = \mathbf{dRR}_{n-1}\mathbf{R}_0$.

Compared to prior versions of the code, which used Hypoelastic correction to stress that worked OK but did not track strains well, this algorithm adds two polar decompositions and a need to rotate increments into current axes, but avoids prior need to rotate the stiffness tensor into current configuration. For plasticity materials, the plastic strain must be rotated like the stress. It is tracked as plastic strain in the analysis coordinates.

Note that tracking rotation matrix can improve efficiency and eliminate need for one of the polar decompositions. It appears to provide no efficiency in 2D. Some test in 3D would be worthwhile, but it also takes more memory (each particle needs to store rotation matrix). It replaces polar decomposition with a matrix multiplication (to find \mathbf{U}_{n-1}).

Chapter 4

Thermodynamics of Deformation

4.1 Introduction

In MPM, all thermodynamics quantities will vary with position by depending on particle state. Work is done on a particle by stresses and strains and a particle can exchange heat with neighboring particles by conduction or with exterior by thermal boundary conditions. NairnMPM/OSParticulas can run in four different modes. The entire system can be "isolated" or "nonisolated" where an isolated system has no thermal boundary conditions that cause heat input or temperature changes on any particles. A nonisolated system has thermal boundary conditions. Similarly, the particles can be "isolated" or "nonisolated," which refer to conduction being off (isolated) or on (nonisolated). For each of these modes, the particles can be locally adiabatic or locally isothermal, where adiabatic means all heat generated by material mechanisms causes a temperature change and isothermal means all heat generated by material mechanisms is lost to the global exterior.

First imagine each MPM particle as a "system" with all other particles and boundary conditions being the "exterior." The differential in particle internal energy per unit mass, U, with dissipative and irreversible processes is:

$$dU = dw + dq = \frac{1}{\rho} \sigma \cdot \nabla u + T d_e S \tag{4.1}$$

where dw is work and dq is heat exchanged with the particle's "exterior" (which includes conduction when activated). The second form associates work with stress power or work energy, where ∇u is the deformation gradient, and heat flow with $dq = T d_e S$ where $d_e S$ is the change in entropy (per unit mass) due to exchange of energy with the exterior. The full change in entropy per unit mass is

$$dS = \left(\frac{dS}{d\nabla u}\right)_T \cdot \nabla u + \frac{C_v dT}{T} \tag{4.2}$$

If we allow for irreversible increase in entropy of $d_iS = d\Phi/T$ due to dissipated energy, the entropy increment can be written as

$$dS = d_e S + d_i S = \left(\frac{dS}{d\nabla u}\right)_T \cdot \nabla u + \frac{C_{\nu} dT}{T} - \frac{d\Phi}{T} + \frac{d\Phi}{T}$$
(4.3)

or

$$d_e S = \left(\frac{dS}{d\nabla u}\right)_T \cdot \nabla u + \frac{C_v dT}{T} - \frac{d\Phi}{T}$$
(4.4)

No define $dT_{dS=0}$ is the temperature change that would occur for an isentropic process:

$$dT_{dS=0} = -\frac{T}{C_{\nu}} \left(\frac{dS}{d\nabla u} \right)_{T} \cdot \nabla u \tag{4.5}$$

and dT_{ad} is temperature increase due to isentropic temperature change plus dissipated energy:

$$dT_{ad} = dT_{dS=0} + \frac{d\Phi}{C_{v}}$$
 (4.6)

The entropy increments become

$$dS = \frac{C_{\nu}(dT - dT_{dS=0})}{T}, \quad d_e S = \frac{C_{\nu}(dT - dT_{ad})}{T}, \quad \text{and} \quad d_i S = \frac{d\Phi}{T}$$
(4.7)

For an elastic material

$$dT_{dS=0} = -\frac{\mathbf{M} \cdot \nabla \mathbf{u} T}{\rho C_{\nu}} \tag{4.8}$$

where M is the stress-temperature tensor:

$$M = -\left(\frac{dS}{d\nabla u}\right)_T = \left(\frac{\partial \sigma}{\partial T}\right)_u \tag{4.9}$$

For an isotropic, elastic material, $M \cdot \nabla u = -K\alpha_V \Delta V/V$ (here $\alpha_V \approx 3\alpha$ is the volumetric thermal expansion coefficient and should revisit this result for large deformation theory) leading to

$$dT_{dS=0} = -T\frac{K\alpha_V}{\rho C_v} \frac{\Delta V}{V} = -TJ\frac{K}{K_0} \gamma_0 \frac{\Delta V}{V} = -T\frac{K}{K_0} \gamma_0 \frac{\Delta V}{V_0}$$
(4.10)

where $J = V/V_0 = \rho_0/\rho$ and

$$\gamma_0 = \frac{K_0 \alpha_V}{\rho_0 C_V} \tag{4.11}$$

The goal of NairnMPM/OSPartriculas is to track heat, entropy and all other appropriate energies such as Internal energy and Helmholz energy:

$$A = U - TS \tag{4.12}$$

The challenge is dealing with material-specific dissipation or other isoentropic temperature changes while also allowing for external heating through thermal boundary conditions and heat conduction (*i.e.*, dealing with all simulation modes described above).

4.2 Locally Adiabatic

For a locally adiabatic process, dq = 0 on each particle for any material-specific mechanisms, but the temperature will increase by dT_{ad} . In general problems, T on a particle might also increase due to exchange of heat with the exterior (conduction or thermal input at boundary conditions). Let those temperature changes be dT_{ext} . The change in heat energy on a particle is only due to external heating:

$$dq = C_{\nu}dT_{ext} \tag{4.13}$$

The adiabatic processes causing dT_{ad} do not contribute to particle heat energy. But in MPM, the $dT^{(n)}$ on one particle for any given time step will be the sum $dT^{(n)} = dT_{ext}^{(n)} + dT_{ad}^{(n-1)}$ or sum of temperature change by transfer of external heat and the adiabatic heating on that particle from previous time step. On step n, we therefore increment particle heat energy and temperature as follows:

$$dq^{(n)} = C_{\nu} dT_{ext}^{(n)} = C_{\nu} (dT^{(n)} - dT_{ad}^{(n-1)})$$
 and $dT_{p}^{(n)} = dT_{ad}^{(n)}$ (4.14)

The particle temperature increment from adiabatic processes, $dT_p^{(n)}$, will not appear in temperature calculations until the next time step at which time it will part of $dT^{(n+1)}$. In the absence of thermal boundary conditions and conduction, $dT^{(n+1)}$ will be exactly $dT_{ad}^{(n)}$ meaning $dT^{(n)} - dT_{ad}^{(n-1)} = 0$ and $dq^{(n)} = 0$ for all time steps. But if a problem has either thermal boundary conditions or conduction activated, more calculations are needed. It is the subtraction of $dT_{ad}^{(n)}$ from $dT^{(n+1)}$ that allows code to calculate the component of heating that should be attributed to dT_{ext} and for general problems $dT_{ext} \neq 0$. In summary, for MPM code to properly track heat energy in all situations, it must buffer $dT_{ad}^{(n-1)}$ from previous step for use in the next step to allow separation of $dT_{ext}^{(n+1)}$ from $dT^{(n+1)}$. If $dT_{ad}^{(n-1)}$ is not tracked, the code will not be able to properly track heat energy during adiabatic loading unless there are no thermal boundary conditions AND conduction is inactive (i.e., such code will only be correct when $dq^{(n)} = 0$ for all particles is correct).

For entropy update with locally adiabatic particles, the entropy

$$dS^{(n)} = \frac{C_{\nu} dT_{ext}^{(n)} + d\Phi^{(n)}}{T^{(n)}} = \frac{C_{\nu} (dT^{(n)} - dT_{ad}^{(n-1)}) + d\Phi^{(n)}}{T^{(n)}}$$
(4.15)

The first term in the numerator is reversible entropy exchanged with the exterior. The second terms is irreversible entropy (and it must always be positive or $d\Phi^{(n)} \ge 0$).

4.3 Locally Isothermal

For a locally isothermal process, dT = 0 due to material processes, although dT_{ext} may still be nonzero if the system is nonisolated. We assume (perhaps inconsistently with a dynamic analysis, but still useful mode), that all heat generated by the particle that would cause a temperature rise in an adiabatic process (dT_{ad}) is expelled to the exterior. The change in particle heat energy therefore becomes:

$$dq^{(n)} = C_{\nu} (dT_{ext}^{(n)} - dT_{ad}^{(n)})$$
(4.16)

The change in entropy is this heat (which is exchanged with the exterior) and irreversible dissipated energy:

$$dS^{(n)} = \frac{C_{\nu}(dT_{ext}^{(n)} - dT_{ad}^{(n)}) + d\Phi^{(n)}}{T} = \frac{C_{\nu}(dT_{ext}^{(n)} - dT_{dS=0}^{(n)})}{T}$$
(4.17)

where $C_v dT_{dS=0}^{(n)} = C_v dT_{ad}^{(n)} - d\Phi$. This update is similar to adiabatic one in previous section, with the simplification that the $dT^{(n)}$ seen on each time step is always equal $dT_{ext}^{(n)}$ (i.e., $dT_{ad}^{(n)}$ is not buffered because it is not needed to separate $dT_{ext}^{(n)}$ from $dT^{(n)}$).

4.4 Energy Tracking in NairnMPM/OSParticulas

Instead of tracking only total U (or any other state variable), a better approach is for each material type to track total work, w, heat energy, q, and entropy. The work update is:

$$dw = \frac{1}{\rho} \sigma \cdot \nabla u \tag{4.18}$$

It is also useful to track thermoelastic strain energy, W, whose increment is

$$dW = dw - dw_{res}$$
 where $dw_{res} = \frac{1}{\rho} \sigma \cdot d\varepsilon_{res}$ (4.19)

and $d\varepsilon_{res}$ is the free residual strain for the current time step.

Tracking of heat and entropy can be done in universal updates that apply with or without thermal boundary conditions and with or without conduction activated. Those updates are:

$$dq^{(n)} = \begin{cases} C_{\nu}(dT^{(n)} - dT_{ad}^{(n-1)}) & \text{locally adiabatic} \\ C_{\nu}(dT^{(n)} - dT_{ad}^{(n)}) & \text{locally isothermal} \end{cases}$$
(4.20)

$$dS^{(n)} = \begin{cases} \frac{C_{\nu}(dT^{(n)} - dT_{ad}^{(n-1)}) + d\Phi^{(n)}}{T^{(n)}} & \text{locally adiabatic} \\ \frac{C_{\nu}(dT^{(n)} - dT_{dS=0}^{(n)})}{T^{(n)}} & \text{locally isothermal} \end{cases}$$

$$(4.21)$$

$$dT_{p,ad}^{(n)} = \begin{cases} dT_{ad}^{(n)} & \text{locally adiabatic} \\ 0 & \text{locally isothermal} \end{cases}$$
 (4.22)

Although these updates are general, simplified equations can be derived for the special case of isolated system and particles (i.e. no thermal boundary conditions and no conduction). In this type of simulation $dT_{ext}^{(n)} = 0$, which implies that for adiabatic mode that $(dT^{(n)} - dT_{ad}^{(n-1)}) = 0$ and for isothermal mode that $dT^{(n)} = 0$. Substitution into the above update gives:

$$dq^{(n)} = \begin{cases} 0 & \text{locally adiabatic} \\ -C_{\nu}dT_{ad}^{(n)} & \text{locally isothermal} \end{cases}$$
 (4.23)

$$dq^{(n)} = \begin{cases} 0 & \text{locally adiabatic} \\ -C_{\nu}dT_{ad}^{(n)} & \text{locally isothermal} \end{cases}$$

$$dS^{(n)} = \begin{cases} \frac{d\Phi^{(n)}}{T^{(n)}} & \text{locally adiabatic} \\ -\frac{C_{\nu}dT_{dS=0}^{(n)}}{T} & \text{locally isothermal} \end{cases}$$

$$(4.23)$$

$$dT_{p,ad}^{(n)} = \begin{cases} dT_{ad}^{(n)} & \text{locally adiabatic} \\ 0 & \text{locally isothermal} \end{cases}$$
 (4.25)

NairnMPM/OSParticulas uses the isolated system and particles special case when possible to avoid needlessly calculating and adding zero. Also note that because $C_v dT_{ad}^{(n)} = C_v dT_{dS=0}^{(n)} + d\Phi^{(n)}$, that all updates have $dS^{(n)} = (dq^{(n)} + d\Phi^{(n)})/T^{(n)}$, which follows because $dq^{(n)}$ is reversible heat and $d\Phi^{(n)}/T^{(n)}$ is irreversible entropy production. This result could be used to separately track reversible and irreversible entropy if that ever becomes useful (may in plasticity or in cracks?)

Each material model's constitutive law in NairnMPM/OSParticulas is responsible for tracking w and w_{res} using the above updates. Material constitutive laws, however, should not update particle T, q, or S on their own. Instead, all temperature and heat updates should be done by the constitutive law calling IncrementHeatEnergy (mptr, dT, dT $_{dS=0}$, Φ) where mptr is pointer to the material point, dT is total temperature change in the time step, $dT_{dS=0}$ is isoentropic temperature change on the particle, and Φ is dissipated heat in the time step. This function automatically updates correctly depending on the current thermodynamics mode being used and takes care of particle temperature update (which is zero if isothermal).

Table 4.1: The changes in particle heat (dq), global heat (dQ), global entropy (dS), and average temperature (dT) for each NairnMPM/OSParticulas thermodynamics mode. For entropy, all processes other than heat conduction are assumed reversible.

		Adiabatic				Isothermal			
System	Particles	dq	dQ	dS	dТ	dq	dQ	dS	dT
Isolated	Isolated	01	0	0	≠ 0	≠0	≠ 0	≠ 0	0
Isolated	Nonsolated	\neq 0 ²	0	≥ 0 ²	≠ 0	$\neq 0^3$	$\neq 0^3$	$\neq 0^3$	03
Nonsolated	Isolated	≠ 0	≠0	≠ 0	≠ 0 ⁴	≠ 0	≠ 0	≠ 0	≠ 0 ⁴
Nonsolated	Nonsolated								

- 1. If any particles start with a temperature that is different then the stress free temperature, the first time step will add $dq = C_v(dT_i dT_0)$ to the particle heat energy. The above conditions will hold thereafter, but a constant will be added to dS and dQ.
- 2. The dq will be due to conduction only and total entropy will increase because conduction is irreversible.
- 3. This mode is identical to system and particle isolated if the initial temperature of all particles is equal to the stress-free temperature. Thus, a simulation in this mode should turn off conduction for efficiency when all particles are at the stress free temperature.
- 4. When particles are isolated, the only possible thermal boundary condition is a thermal ramp that applies uniform temperature change to all particles. If there is no thermal ramp, then the system is isolated and refer to first mode instead.

If w, w_{res} , q, S, T, σ , and ε are tracked than other thermodynamic state functions can be found:

$$U = w + q \tag{4.26}$$

$$A = U - TS = w + q - TS \tag{4.27}$$

$$H = U + \frac{1}{\rho} \sigma \cdot \varepsilon = w + q + \frac{1}{\rho} \sigma \cdot \varepsilon \tag{4.28}$$

$$G = H - TS = w + q + \frac{1}{\rho} \sigma \cdot \varepsilon - TS \tag{4.29}$$

$$W = w - w_{ros} \tag{4.30}$$

Finally, table 4.1 summarizes thermodynamics properties of the various NairnMPM/OSParticulas modes. The term dq is heat change on a single particle. The global terms are defined by:

$$dQ = \sum_{p} dq$$
, $dS = \sum_{p} dS_{p}$, and $T = \frac{1}{n_{p}} \sum_{p} T_{p}$ (4.31)

An "isolated" system means no thermal boundary conditions are being used, while a "nonisolated" system has thermal boundary conditions. "Isolated" particles means conduction is turned off, while "nonisolated" particles means conduction is on. "Adiabatic" means energy coupling is turned on, while "Isothermal" means energy coupling is off.

Chapter 5

Hyperelastic Materials

5.1 Introduction

Constitutive laws for hyperelastic materials always involve the deformation gradient, F. All hyperelastic materials store the full deformation gradient using the strain and rotation variables on the particles (named $\varepsilon = ep$ and $\omega = wrot$) as follows:

$$\mathbf{F} = \begin{pmatrix} 1 + \varepsilon_{xx} & \frac{1}{2}(\gamma_{xy} - \omega_{xy}) & \frac{1}{2}(\gamma_{xz} - \omega_{xz}) \\ \frac{1}{2}(\gamma_{xy} + \omega_{xy}) & 1 + \varepsilon_{yy} & \frac{1}{2}(\gamma_{yz} - \omega_{yz}) \\ \frac{1}{2}(\gamma_{xz} + \omega_{xz}) & \frac{1}{2}(\gamma_{yz} + \omega_{yz}) & 1 + \varepsilon_{zz} \end{pmatrix}$$
(5.1)

and should store the updated gradient back on strain and rotation tensors on each time step.

Hyperelastic materials with plasticity, still store full deformation gradient as above and thus unlike small-strain plasticity materials, the strain variables describe the total strain and not just the elastic deformation. To have information about elastic and plastic deformation, these materials use the plastic strain variable on the particles ($\varepsilon^{(p)} = \text{eplast}$) to store the symmetric, *elastic*, left Cauchy-Green tensor ($\mathbf{B} = \mathbf{F}\mathbf{F}^T$). For convenience, hyperelastic materials can obtain a pointer to this variable using the particle accessor GetAltStrainTensor(). Because this just returns a pointer to eplast, that material cannot also use GetAltStrainTensor() expecting an option to store different particle state information.

Large deformation MPM requires calculation of specific Cauchy stress (σ) on each time step, or the Cauchy stress divided by the current density (ρ) accounting for volume changes. This required quantity is equivalent to

$$\frac{\sigma}{\rho} = \frac{\sigma J}{\rho_0} = \frac{\tau}{\rho_0} \tag{5.2}$$

where J is det \mathbf{F} and equal to the relative volume change $(J=V/V_0)$, τ is the Kirchoff stress, and ρ_0 is the initial volume (i.e., $\rho_0=J\rho$). In other words, all hyperelastic materials track the Kirchoff stress normalized to the initial density, which is done by dividing all constitutive law properties by ρ_0 at the start of the calculation and then finding Kirchoff stress in constitutive laws. The output stresses, however, are converted to true Cauchy stress using particle J.

5.2 Incremental Deformation Gradient

Each MPM time step requires evaluation of deformation gradient rate defined by

$$\frac{d\mathbf{F}}{dt} = \nabla v \mathbf{F} \tag{5.3}$$

where ∇v is spatial gradient extrapolated from grid nodes to the particles. If ∇v is constant for the time step, the exact solution is

$$\mathbf{F}(t + \Delta t) = \exp(\Delta t \nabla v)\mathbf{F}(t) = \mathbf{dF}\mathbf{F}(t)$$
(5.4)

where

$$\mathbf{dF} = \exp(\Delta t \nabla v) = \mathbf{F}(t + \Delta t)\mathbf{F}(t)^{-1}$$
(5.5)

is the incremental deformation gradient. An interesting review article on finding the exponential of a matrix is "Nineteen Dubious Ways to Compute the Exponential of a Matrix. Twenty Five Years Later." (C. Moler and C. Van Loan, *SIAM Review*, **46**, 2003). They conclude no single way is stable and efficient for all problems, but in MPM with sufficiently small time steps, an expansion method should work well

$$\exp(\Delta t \nabla v) = \sum_{k=0}^{k_{max}} \frac{(\nabla u)^k}{k!} = \mathbf{I} + \nabla u + \sum_{k=2}^{k_{max}} \frac{(\nabla u)^k}{k!}$$
 (5.6)

where $\nabla u = \Delta t \nabla v$ is the incremental displacement gradient. The first two terms are trivial, but have been noticed to have issues in rotational deformation fields. The question is how to evaluate extra terms as efficiently as possible.

Method 8 of the "Nineteen Dubious Ways" uses the Cayley-Hamilton theorem to find $(\nabla u)^k$ without any matrix multiplications in 2D and just one in 3D. In 2D (plane stress, plain strain, or axisymmetric), the displacement gradient can be partitioned as

$$\nabla u = \left(\begin{bmatrix} du_{xx} & du_{xy} \\ du_{yx} & du_{yy} \end{bmatrix} & 0 \\ 0 & 0 & du_{zz} \end{array} \right)$$
 (5.7)

where $du_{ij} = \partial u_i/\partial x_j$ ($du_{zz} = 0$ for plain strain, but not for plane stress or axisymmetry). If A is the 2×2 partition, then

$$(\nabla u)^k = \begin{pmatrix} A^k & 0\\ 0 & 0\\ 0 & 0 & du_{zz}^k \end{pmatrix}$$
 (5.8)

Let the characteristic polymer of A (of any dimension n) be

$$c(z) = \det(z\mathbf{I} - A) = z^n - \sum_{k=0}^{n-1} c_k z^k$$
 (5.9)

Because c(A) = 0, the n^{th} power of A can be found from lower powers of A

$$A^{n} = \sum_{k=0}^{n-1} c_{k} A^{k}$$
 (5.10)

For n = 2, these reduce to

$$c_0 = -\det(A), \qquad c_1 = \text{Tr}(A), \qquad \text{and} \qquad A^2 = c_0 I + c_1 A$$
 (5.11)

Higher powers of A can be found by recursion to be

$$A^k = \beta_{k,0} \mathbf{I} + \beta_{k,1} A \tag{5.12}$$

where $\beta_{1,i} = \delta_{i1}$, $\beta_{k,0} = c_0 \beta_{k-1,1}$, and $\beta_{k,1} = c_1 \beta_{k-1,1} + \beta_{k-1,0}$. In other words, **I** and A are a basis for all powers of A. Finally, we can expand the incremental deformation gradient using k_{max} terms as

$$\mathbf{dF}(k_{max}) = \begin{pmatrix} [\alpha_0 \mathbf{I} + \alpha_1 A] & 0 \\ 0 & 0 & 1 + du_{zz} + \sum_{k=2}^{k_{max}} \frac{du_{zz}^k}{k!} \end{pmatrix}$$
(5.13)

where

$$\alpha_0 = 1 + \sum_{k=2}^{k_{max}} \frac{\beta_{k,0}}{k!}$$
 and $\alpha_1 = 1 + \sum_{k=2}^{k_{max}} \frac{\beta_{k,1}}{k!}$ (5.14)

An efficient computer algorithm for all non-zero elements of the deformation gradient using k_{max} terms (which eliminates as many multiplications and divides as I think are possible and the factorial terms are scaled into the beta variables such that betai= $\beta_{k,i}/k!$) is:

```
double c0 = duxy*duyx - duxx*duyy, c1 = duxx + duyy;
double beta0 = 0., beta1 = 1., alpha0 = 1., alpha1 = 1.;
double betaz = duzz; dFzz = 1. + duzz
int k;
double factor, temp;;
for(k = 2; k \le kmax; k++)
   factor = 1/(double)k;
   temp = beta1;
   beta1 = factor*(c1*temp + beta0);
   beta0 = factor*c0*temp;
    betaz *= factor*duzz;
    alpha0 += beta0;
    alpha1 += beta1;
    dFzz += betaz;
}
double dFxx = alpha0 + alpha1*duxx;
double dFxy = alpha1*duxy;
double dFyx = alpha1*duyx;
double dFyy = alpha0 + alpha1*duyyl
```

Each extra term included in the expansion costs 6 multiplications, 1 division, and 4 additions. Direct matrix multiplication would add 14 multiplications/division and 13 additions for each term.

A similar approach can be done in 3D, but does require one matrix multiplication. The overall expansion is

$$\exp(\Delta t \nabla v) = \sum_{k=0}^{k_{max}} \frac{(\nabla u)^k}{k!} = \mathbf{I} + \nabla u + \frac{1}{2} (\nabla u)^2 + \sum_{k=3}^{k_{max}} \frac{(\nabla u)^k}{k!}$$
 (5.15)

which can be reduced to

$$\exp(\Delta t \nabla v) = \alpha_0 \mathbf{I} + \alpha_1 \nabla u + \alpha_2 (\nabla u)^2$$
(5.16)

$$\alpha_0 = 1 + \sum_{k=3}^{k_{max}} \frac{\beta_{k,0}}{k!}, \qquad \alpha_1 = 1 + \sum_{k=3}^{k_{max}} \frac{\beta_{k,1}}{k!}, \quad \text{and} \quad \alpha_2 = \frac{1}{2} + \sum_{k=3}^{k_{max}} \frac{\beta_{k,2}}{k!}$$
 (5.17)

The required recursion relations are $\beta_{2,i} = \delta_{i2}$, $\beta_{k,0} = c_0 \beta_{k-1,2}$, $\beta_{k,1} = c_1 \beta_{k-1,2} + \beta_{k-1,0}$, and $\beta_{k,2} = c_2 \beta_{k-1,2} + \beta_{k-1,1}$. For a 3 × 3 matrix, $c_0 = \det(M)$, $c_1 = -I_2$, and $c_2 = Tr(M)$, where I_2 is the second

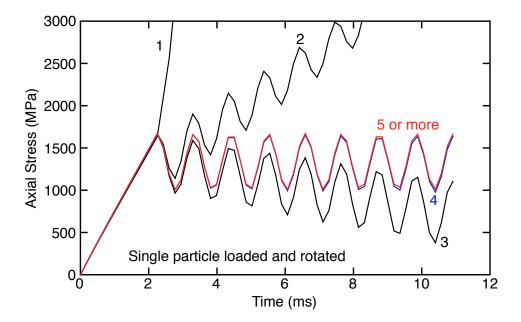


Figure 5.1: Calculation for a single particle loaded in tension, held, and then rotated. The different curves show k_{max} or the number of terms used to expand the matrix exponential in the incremental deformation gradient.

invariant. Each extra term included in the expansion adds 6 multiplications, 1 division and 5 additions. Direct matrix multiplication would add about 36 multiplications, 1 division, and 27 additions for each term.

One MPM user suggested loading a single particle in tension to some value and then rotating. A plot of axial stress in the loading direction should increase linearly while loading and then oscillate around a constant mean during rotation. In 2D calculations with $k_{max}=1$, the stress continues to increase while rotating, but using $k_{max}=2$ appears to make it constant. Addition of extra terms beyond $k_{max}=2$ does not seem to provide much benefit (at least in this example). A need for extra terms can be demonstrated by using a very large time step, such as 8 times the Courant-Friedrichs-Lewy (CFL) condition. Some results are in Fig. 5.1. With 1 term, the calculations are immediately bad once rotation starts. Each extra term improves the result. With 5 or more terms, the result is correct. When CFL is less than 1 (as it should be), terms beyond $k_{max}=2$ might not have much benefit, but can be seen, for example, in pure shear examples.

5.3 Hyperelastic 1D Membrane in a 2D Simulation

A membrane in a 2D simulation is a 1D path through the object (this notes are plane stress and plane strain only and will need to be updated for axisymnetry). Imagine a coordinate system with the fiber direction of the membrane initially along the x axis and the thickness direction along the y axis. In membrane models, it is assumed there is no shear deformation in the plane of the membrane — it has only stretches in fiber direction and thickness directions. As a result, the general deformation gradient is:

$$\mathbf{F} = \begin{pmatrix} \lambda_1 \cos \theta & \lambda_2 \sin \theta & 0 \\ -\lambda_1 \sin \theta & \lambda_2 \cos \theta & 0 \\ 0 & 0 & \lambda_3 \end{pmatrix} = \begin{pmatrix} \cos \theta & \sin \theta & 0 \\ -\sin \theta & \cos \theta & 0 \\ 0 & 0 & 1 \end{pmatrix} \begin{pmatrix} \lambda_1 & 0 & 0 \\ 0 & \lambda_2 & 0 \\ 0 & 0 & \lambda_3 \end{pmatrix} = \mathbf{R}[\lambda] \quad (5.18)$$

where λ_i are stretches in three orthogonal membrane directions (and they remain orthogonal) and θ is the clockwise rotation of the current fiber direction from the global, positive x axis direction. The first and second columns are vectors along the current fiber and thickness directions, respectively.

In an MPM time step, the membrane constitutive law will be provided an incremental deformation gradient, **dF** (as calculated above), but in general this deformation will not be compatible with a membrane deformation with zero shear. Instead, **dF** is just used to find new fiber vector:

$$m = (\mathbf{dF}_{11}\mathsf{F}_{11} + \mathbf{dF}_{12}\mathsf{F}_{21}, \mathbf{dF}_{21}\mathsf{F}_{11} + \mathbf{dF}_{22}\mathsf{F}_{21})$$
 (5.19)

The magnitude of this vector is the new fiber stretch: $\lambda_1 = ||m||$. A specific membrane material model should calculations λ_2 and λ_3 and then update the particle's deformation gradient to be:

$$\mathbf{F} = \begin{pmatrix} m_x & -\frac{\lambda_2}{\lambda_1} m_y & 0\\ m_y & \frac{\lambda_2}{\lambda_1} m_x & 0\\ 0 & 0 & \lambda_3 \end{pmatrix}$$
 (5.20)

For stresses and energy, membrane material classes find Kirchhoff stress in the unrotated membrane coordinates (which should only need the three λ_i stretches and ω). These stresses are rotated to the MPM coordinates:

$$\tau = \mathsf{R}\tau\mathsf{R}^T = \mathsf{R}[\lambda]([\lambda]^{-1}\sigma[\lambda]^{-T})[\lambda]^T\mathsf{R}^T = \mathsf{F}\mathsf{S}\mathsf{F}^T$$
 (5.21)

where **F** is the updated membrane deformation gradient on the particle and S is the second Poila-Kirchoff stress in the mebrane coordinates. The second Poila-Kirchoff stress will only have non-zero S_{11} , S_{12} , and S_{22} and it is found from $S = [\lambda]^{-1} \tau [\lambda]^{-T}$ or $S_{11} = \tau_{11}/\lambda_1^2$.

Work and residual energy updates can be done in the membrane coordinates:

$$dw = \tau_{11} du_{11}$$
 and $dw_{res} = \tau_{11} du_{11}^{res} + \tau_{33} du_{33}^{res}$ (5.22)

where du_{11} is element of the displacement gradient for this step and du_{res}^{ii} is incremental residual strain for this step. The displacement gradient can be found from the effective membrane incremental deformation gradient:

$$\mathbf{dF}_{m} = \exp(\nabla u) = \begin{pmatrix} \frac{\lambda_{1}}{\lambda_{1}^{(n-1)}} & 0 & 0\\ 0 & \frac{\lambda_{2}}{\lambda_{2}^{(n-1)}} & 0\\ 0 & 0 & \frac{\lambda_{2}}{\lambda_{2}^{(n-1)}} \end{pmatrix} \quad \text{or} \quad du_{11} = \ln \frac{\lambda_{1}}{\lambda_{1}^{(n-1)}}$$
(5.23)

where $\lambda_1^{(n-1)}$ are the stretches at the start of the time step.

5.4 Hyperelastic 2D Membrane in a 3D Simulation

A membrane in a 3D simulation is a 2D surface through the object. Imagine a coordinate system with the two fiber directions of the membrane initially along the *x* and *y* axes and the thickness direction

along the z axis. In membrane models, it is assumed the normal and shear stresses in the thickness direction of the membrane are zero — the membrane has only stretches and shear in the plane defined by the two fiber directions. As a result, the general deformation gradient can be written as:

$$\mathbf{F} = R \begin{pmatrix} \lambda_1 & \lambda_2 \cos \omega & 0 \\ 0 & \lambda_2 \sin \omega & 0 \\ 0 & 0 & \lambda_3 \end{pmatrix} = R[\lambda \omega]$$
 (5.24)

where λ_i are stretches in three initially orthogonal membrane directions and ω is the angle between the deformed, in-plane fiber directions. The rotation matrix R rotates the positive x axis to the corresponding fiber axis in the deformed membrane.

In an MPM time step, the membrane constitutive law will be provided an incremental deformation gradient, dF (as calculated above), but in general this deformation will not be compatible with a membrane deformation where thickness direction should have stretch only and zero shear. Instead, dF is just used to find new fiber vectors from the first two columns of $dF \cdot F$. If these deformed vectors are m_1 and m_2 then the key deformation terms are:

$$\lambda_1 = ||\boldsymbol{m}_1||, \quad \lambda_2 = ||\boldsymbol{m}_2||, \quad \cos \omega = \frac{\boldsymbol{m}_1 \cdot \boldsymbol{m}_2}{\lambda_1 \lambda_2}, \quad \text{and} \quad \sin \omega = \frac{||\boldsymbol{m}_1 \times \boldsymbol{m}_2||}{\lambda_1 \lambda_2}$$
 (5.25)

A specific membrane material model should calculate λ_3 for the thickness direction (to get zero thickness stress). The particle deformation gradient is updated with m_1 , m_2 left intact as first two columns, but the third column of the provisional $\mathbf{dF} \cdot \mathbf{F}$ is changed to be $\lambda_3(m_1 \times m_2)/(\lambda_1 \lambda_2)$. In this approach, the membrane normal vector remains normal to both m_1 and m_2 .

For stresses and energy, membrane material classes finds Kirchhoff stress (τ) in the unrotated membrane coordinates (which should only need the three λ_i stretches and ω). These stresses are rotated to the MPM coordinates:

$$\tau (MPM) = R\tau R^{T} = R[\lambda \omega] ([\lambda \omega]^{-1} \tau [\lambda \omega]^{-T}) [\lambda \omega]^{T} R^{T} = \mathbf{F} \mathbf{S} \mathbf{F}^{T}$$
(5.26)

where **F** is the updated membrane deformation gradient on the particle and S is the second Poila-Kirchoff stress in the membrane coordinates. The second Poila-Kirchoff stress will only have non-zero S_{11} , S_{12} , and S_{22} and it is found from $S = [\lambda \omega]^{-1} \tau [\lambda \omega]^{-T}$ or:

$$S = \begin{pmatrix} \frac{1}{\lambda_{1}} & -\frac{\cot\omega}{\lambda_{1}} & 0\\ 0 & \frac{1}{\lambda_{2}\sin\omega} & 0\\ 0 & 0 & \frac{1}{\lambda_{3}} \end{pmatrix} \begin{pmatrix} \tau_{11} & \tau_{12} & 0\\ \tau_{12} & \tau_{y22} & 0\\ 0 & 0 & 0 \end{pmatrix} \begin{pmatrix} \frac{1}{\lambda_{1}} & 0 & 0\\ -\frac{\cot\omega}{\lambda_{1}} & \frac{1}{\lambda_{2}\sin\omega} & 0\\ 0 & 0 & \frac{1}{\lambda_{3}} \end{pmatrix}$$
(5.27)

The result is

$$S = \begin{pmatrix} \frac{1}{\lambda_{1}} & -\frac{\cot \omega}{\lambda_{1}} & 0\\ 0 & \frac{1}{\lambda_{2} \sin \omega} & 0\\ 0 & 0 & \frac{1}{\lambda_{3}} \end{pmatrix} \begin{pmatrix} \frac{\tau_{11}}{\lambda_{1}} - \frac{\tau_{12} \cot \omega}{\lambda_{1}} & \frac{\tau_{12}}{\lambda_{2} \sin \omega} & 0\\ \frac{\tau_{12}}{\lambda_{1}} - \frac{\tau_{22} \cot \omega}{\lambda_{1}} & \frac{\tau_{22}}{\lambda_{2} \sin \omega} & 0\\ 0 & 0 & 0 & 0 \end{pmatrix}$$
(5.28)

which simplifies to

$$S_{11} = \frac{1}{\lambda_1^2} \left(\tau_{11} - 2\tau_{12} \cot \omega + \tau_{22} \cot^2 \omega \right)$$
 (5.29)

$$S_{22} = \frac{\tau_{22}}{\lambda_2^2 \sin^2 \omega}$$
 (5.30)

$$S_{12} = \frac{(\tau_{12} - \tau_{22} \cot \omega)}{\lambda_1 \lambda_2 \sin \omega}$$
 (5.31)

These can be inverted to

$$\tau_{11} = S_{11}\lambda_1^2 + 2S_{12}\lambda_1\lambda_2\cos\omega + S_{22}\lambda_2^2\cos^2\omega \tag{5.32}$$

$$\tau_{22} = S_{22}\lambda_2^2 \sin^2 \omega {(5.33)}$$

$$\tau_{12} = S_{12}\lambda_1\lambda_2\sin\omega + S_{22}\lambda_2^2\cos\omega\sin\omega \tag{5.34}$$

The membrane deformation (or $[\lambda\omega]$) is tracked on the particle in the plastic strain. Work and residual energy updates can be done in the membrane coordinates:

$$dw = \tau_{11}du_{11} + \tau_{12}(du_{12} + du_{21}) + \tau_{22}du_{22}$$
 (5.35)

$$dw_{res} = \tau_{11} du_{11}^{res} + \tau_{12} (du_{12}^{res} + (du_{12}^{res}) + \tau_{22} du_{22}^{res}$$
 (5.36)

where du_{ij} are elements of the displacement gradient for this step and du_{res}^{ij} are incremental residual strains for this step. The displacement gradient can be found from the effective membrane incremental deformation gradient, which is defined by $[\lambda \omega] = \mathbf{dF}_m[\lambda \omega]_{n-1}$ giving

$$\mathbf{dF}_{m} = \exp(\nabla u) = [\lambda \omega][\lambda \omega]_{n-1}^{-1} = \begin{pmatrix} \lambda_{1} & \lambda_{2} \cos \omega & 0 \\ 0 & \lambda_{2} \sin \omega & 0 \\ 0 & 0 & \lambda_{3} \end{pmatrix} \begin{pmatrix} \frac{1}{M_{11}} & -\frac{M_{12}}{M_{11}M_{22}} & 0 \\ 0 & \frac{1}{M_{22}} & 0 \\ 0 & 0 & \frac{1}{M_{33}} \end{pmatrix} (5.37)$$

$$= \begin{pmatrix} \frac{\lambda_1}{M_{11}} & \frac{\lambda_2 \cos \omega}{M_{22}} - \frac{M_{12}\lambda_1}{M_{11}M_{22}} & 0\\ 0 & \frac{\lambda_2 \sin \omega}{M_{22}} & 0\\ 0 & 0 & \frac{\lambda_3}{M_{33}} \end{pmatrix}$$
 (5.38)

where $[\lambda\omega]_{n-1}$ is the membrane-coordinates deformation gradient at the start of the time step and M_{ij} are elements of $[\lambda \omega]_{n-1}$. Assuming that gradient of the displacement vector has non-zero elements the same places as dF_m , the exponential can be evaluated:

$$\exp(\nabla \mathbf{u}) = \begin{pmatrix} e^{du_{11}} & \frac{du_{12}}{du_{11}} \left(e^{du_{22}} - e^{du_{11}} \right) & 0 \\ 0 & e^{du_{22}} & 0 \\ 0 & 0 & e^{du_{33}} \end{pmatrix}$$
 (5.39)

From which

$$du_{11} = \ln \frac{\lambda_1}{M_{11}} \tag{5.40}$$

$$du_{22} = \ln \frac{\lambda_2 \sin \omega}{M_{22}} \tag{5.41}$$

$$du_{33} = \ln \frac{\lambda_3}{M_{33}} \tag{5.42}$$

$$du_{33} = \ln \frac{\lambda_3}{M_{33}}$$

$$du_{12} = \ln \frac{\lambda_1}{M_{11}} \frac{\frac{\lambda_2 \cos \omega}{M_{22}} - \frac{M_{12}\lambda_1}{M_{11}M_{22}}}{\frac{\lambda_2 \sin \omega}{M_{22}} - \frac{\lambda_1}{M_{11}}}$$
(5.42)

Alternatively, the incremental work can be written as

$$dw = \mathbf{S} \cdot \dot{\mathbf{E}} dt = \frac{1}{2} \mathbf{S} \cdot \dot{\mathbf{C}} dt \tag{5.44}$$

where **E** is Green-Lagrange strain. Evaluating $\dot{\mathbf{C}}$ and using $\dot{\mathbf{F}} = \nabla v \mathbf{F}$ gives

$$\dot{\mathbf{C}} = \dot{\mathbf{F}}^T \mathbf{F} + \mathbf{F}^T \dot{\mathbf{F}} = \mathbf{F}^T (\nabla v^T + \nabla v) \mathbf{F}$$
 (5.45)

The energy increment (using tensors in the membrane coordinates) becomes

$$dw = \mathbf{S} \cdot [\lambda \omega]^T \left(\frac{1}{2} (\nabla u^T + \nabla u)\right) [\lambda \omega]$$
 (5.46)

Expansion of this expression is identical to Eq. (5.35) (as it must be).

5.5 Membrane Material Tasks

Much of the work for membrane model is done by the MemPoint2D.cpp, MemPointAS.cpp and MemPoint3D.cpp classes. These classes do the following tasks:

- 1. Use **dF** to find λ_1 (2D), λ_1 and λ_3 (AS), or λ_1 , λ_2 , and ω (3D).
- 2. Call the material class, which will complete these calculations
 - (a) For 2D and axisymmetric simulations, find λ_2 , λ_3 (plane stress only), τ_{11} and $\tau_{33} = \tau_{zz}$. For 3D simulations, find λ_3 , τ_{11} , τ_{12} , and τ_{22} (τ_{33} is zero, which may be used in the material model when finding the other quantities).
 - (b) Alternatively, a membrane material can find S_{ij} in the membrane instead of τ_{ij} and then set isPoila variable to true.
 - (c) Call method to update residual energy (it is done in the material to be able to handle anisotropic materials).
 - (d) Call method to track temperature, entropy, and heat on the particle.
- 3. Find du_{ij} and increment work energy
- 4. Store $[\lambda]$ (2D) or $[\lambda\omega]$ (3D) in the particle plastic strain
- 5. Update **F** on the particle
- 6. Rotate membrane stress to MPM coordinates and store on the particle stresses.

The material class works in a simplified deformation system. In 2D plane stress simulations with fiber stretch λ_1 , $J=\lambda_1\lambda_2\lambda_3$ and $\lambda_2=\lambda_3=\sqrt{J/\lambda_1}$ (assuming isotropic). The left Cauchy-Green deformation tensor in the membrane coordinates has non-zero elements $B_{11}=\lambda_1^2$ and $B_{22}=B_{33}=J/\lambda_1$.

In 2D plane strain (or axisymmetric) simulations with fiber stretch λ_1 , $J=\lambda_1\lambda_2\lambda_3$, $\lambda_3=1$ (plane strain) or is an input λ_3 (axisymmetric), and $\lambda_2=J/(\lambda_1\lambda_3)$. The left Cauchy-Green deformation tensor in the membrane coordinates has non-zero elements $B_{11}=\lambda_1^2$, $B_{22}=J^2/(\lambda_1^2\lambda_3^2)$, and $B_{33}=\lambda_3^2$.

In 3D simulations with fiber stretches λ_1 and λ_2 , $J=\lambda_1\lambda_2\lambda_3\sin\omega$, and $\lambda_3=J/(\lambda_1\lambda_2\sin\omega)$. The left Cauchy-Green deformation tensor in the membrane coordinates is

$$\mathbf{B} = \mathbf{F}\mathbf{F}^{T} = \begin{pmatrix} \lambda_{1}^{2} + \lambda_{2}^{2} \cos^{2} \omega & \lambda_{2}^{2} \sin \omega \cos \omega & 0\\ \lambda_{2}^{2} \sin \omega \cos \omega & \lambda_{2}^{2} \sin^{2} \omega & 0\\ 0 & 0 & \lambda_{3}^{2} \end{pmatrix}$$
(5.47)

and the right Cauchy-Green deformation tensor in the membrane coordinates is

$$\mathbf{C} = \mathbf{F}^T \mathbf{F} = \begin{pmatrix} \lambda_1^2 & \lambda_1 \lambda_2 \cos \omega & 0 \\ \lambda_1 \lambda_2 \cos \omega & \lambda_2^2 & 0 \\ 0 & 0 & \lambda_3^2 \end{pmatrix}$$
 (5.48)

Finally, in NairnMPM, the membrane deformation matrix ($[\lambda]$ or $[\lambda\omega]$), is tracked on the particle using the particle's plastic strain. Note that other Hyperelastic materials track **B** in the plastic strain and hyperelastic, plasticity materials track the elastic **B**; plastic membranes will need an alternate method to store elastic deformation information.

5.6 Isotopic, Hyperelastic Materials

Isotropic, hyperelastic materials can be derived by defining an energy function in terms of invariants of **F** or other large-strain tensors. One approach is based on invariants of the left, Cauchy-Green tensor:

$$I_1 = \text{Tr}(\mathbf{B}) = B_{11} + B_{22} + B_{33} = \lambda_1^2 + \lambda_2^2 + \lambda_3^2$$
 (5.49)

$$I_2 = \frac{1}{2} \left(I_1^2 - \mathbf{B} \cdot \mathbf{B} \right) = \lambda_1^2 \lambda_2^2 + \lambda_1^2 \lambda_3^2 + \lambda_1^2 \lambda_3^2$$
 (5.50)

$$I_3 = \det(\mathbf{B}) = (\det(\mathbf{F}))^2 = J^2 = \lambda_1^2 \lambda_2^2 \lambda_3^2$$
 (5.51)

where λ_i are the principle stretches of the deformation. Sometimes modified invariants are used instead as $\overline{I_1} = I_1/J^{2/3}$ and $\overline{I_2} = I_2/J^{4/3}$. Next the strain energy is written as a function of these invariants, with the common forms being $W(I_1,I_2,J)$, $W(\overline{I_1},\overline{I_2},J)$ and $W(\lambda_1,\lambda_2,\lambda_3)$. The Cauchy stress can be found from

$$\sigma_{ij} = \frac{1}{J} \sum_{k} F_{ik} \frac{\partial W}{\partial F_{jk}}$$
 (5.52)

Using the key terms (adapted from "Applied Mechanics of Solids" by Alan Bower):

$$B_{ij} = \sum_{k} F_{ik} F_{jk}, \quad \frac{\partial B_{kl}}{\partial F_{ij}} = \delta_{ki} F_{lj} + \delta_{li} F_{kj}$$
 (5.53)

$$I_1 = \sum_{k} \sum_{l} F_{kl}^2 = ||\mathbf{F}||_F^2, \quad I_2 = \frac{1}{2} \left(I_1^2 - \sum_{k} \sum_{l} B_{kl}^2 \right)$$
 (5.54)

$$\frac{\partial I_1}{\partial F_{ij}} = 2F_{ij}, \quad \frac{\partial I_2}{\partial F_{ij}} = 2\left(I_1F_{ij} - \sum_k B_{ik}F_{kj}\right), \quad \frac{\partial J}{\partial F_{ij}} = J(F_{ji})^{-1}, \quad \frac{\partial I_3}{\partial F_{ij}} = 2I_3(F_{ji})^{-1}$$
(5.55)

$$\frac{\partial \overline{I_1}}{\partial F_{ij}} = \frac{2}{J^{2/3}} \left(F_{ij} - \frac{I_1(F_{ij})^{-1}}{3} \right) = \frac{2F_{ij}}{J^{2/3}} - \frac{2\overline{I_1}(F_{ij})^{-1}}{3}$$
 (5.56)

$$\frac{\partial \overline{I_2}}{\partial F_{ij}} = \frac{2\overline{I_1}F_{ij}}{J^{2/3}} - \frac{2\sum_k B_{ik}F_{kj}}{J^{4/3}} - \frac{4\overline{I_2}(F_{ij})^{-1}}{3}$$
 (5.57)

the Cauchy stress can be found from

$$\sigma = \frac{\partial W}{\partial J} \mathbf{I} + \frac{2}{J} \left[\frac{\partial W}{\partial I_1} \mathbf{B} + \frac{\partial W}{\partial I_2} \left(I_1 \mathbf{B} - \mathbf{B}^2 \right) \right]$$
 (5.58)

$$\boldsymbol{\sigma} = \frac{\partial W}{\partial J} \mathbf{I} + 2 \left[\frac{1}{J^{5/3}} \frac{\partial W}{\partial \overline{I_1}} \left(\mathbf{B} - \frac{I_1}{3} \mathbf{I} \right) + \frac{1}{J^{7/3}} \frac{\partial W}{\partial \overline{I_2}} \left(I_1 \mathbf{B} - \mathbf{B}^2 - \frac{2I_2}{3} \mathbf{I} \right) \right]$$
(5.59)

$$\boldsymbol{\sigma} = \sum_{k} \frac{\lambda_{k}}{J} \frac{\partial W}{\partial \lambda_{k}} \boldsymbol{b}_{k} \otimes \boldsymbol{b}_{k} \tag{5.60}$$

where b_k is the eigenvector of **B** associated with eigenvalue λ_k^2 . Because **B** is symmetric (and therefore $\text{Tr}(\mathbf{B}^2) = \mathbf{B} \cdot \mathbf{B}$ and $\text{Tr}(I_1\mathbf{B} - \mathbf{B}^2) = I_1^2 - \mathbf{B} \cdot \mathbf{B} = 2I_2$), the second version can be written

$$\boldsymbol{\sigma} = \frac{\partial W}{\partial J} \mathbf{I} + 2 \left[\frac{1}{J^{5/3}} \frac{\partial W}{\partial \overline{I_1}} \operatorname{dev}(\mathbf{B}) + \frac{1}{J^{7/3}} \frac{\partial W}{\partial \overline{I_2}} \operatorname{dev}(I_1 \mathbf{B} - \mathbf{B}^2) \right]$$
(5.61)

The pressure $(P = -\text{Tr}(\sigma)/3)$ can be found (making use of $\text{Tr}(\text{dev}(\cdot)) = 0$) from three results as

$$P = -\frac{\partial W}{\partial J} - \frac{2}{3J} \left[\frac{\partial W}{\partial I_1} I_1 + \frac{\partial W}{\partial I_2} 2I_2 \right]$$
 (5.62)

$$P = -\frac{\partial W}{\partial J} \tag{5.63}$$

$$P = -\frac{1}{3} \sum_{k} \frac{\lambda_{k}}{J} \frac{\partial W}{\partial \lambda_{k}}$$
 (5.64)

with the last one assuming orthonormal eigenvectors. Thus the deviatoric Cauchy stresses are ($\mathbf{s} = \boldsymbol{\sigma} + P\mathbf{l}$):

$$\mathbf{s} = \frac{2}{J} \left[\frac{\partial W}{\partial I_1} \operatorname{dev}(\mathbf{B}) + \frac{\partial W}{\partial I_2} \operatorname{dev}(I_1 \mathbf{B} - \mathbf{B}^2) \right]$$
 (5.65)

$$\mathbf{s} = \frac{2}{J} \left[\frac{1}{J^{2/3}} \frac{\partial W}{\partial \overline{I_1}} \operatorname{dev}(\mathbf{B}) + \frac{1}{J^{4/3}} \frac{\partial W}{\partial \overline{I_2}} \operatorname{dev}(I_1 \mathbf{B} - \mathbf{B}^2) \right]$$
 (5.66)

$$\mathbf{s} = \sum_{k} \frac{\lambda_{k}}{J} \frac{\partial W}{\partial \lambda_{k}} \operatorname{dev}(\boldsymbol{b}_{k} \otimes \boldsymbol{b}_{k})$$
 (5.67)

In MPM, we track the Kirchoff stress $\tau = J\sigma$ given by

$$\tau_{kl} = \sum_{i} F_{kj} \frac{\partial W}{\partial F_{lj}} \tag{5.68}$$

To implement incremental elasticity, we would like to get the fourth rank tensor. For $W(I_1, I_2, J)$,

$$\frac{\partial W}{\partial F_{lj}} = \frac{\partial W}{\partial J} J(F_{jl})^{-1} + 2 \frac{\partial W}{\partial I_1} F_{lj} + 2 \frac{\partial W}{\partial I_2} \left(I_1 F_{lj} - \sum_m B_{lm} F_{mj} \right)$$
 (5.69)

$$\tau_{kl} = \sum_{j} F_{kj} \frac{\partial W}{\partial F_{lj}} = J \frac{\partial W}{\partial J} \delta_{kl} + 2 \left[\frac{\partial W}{\partial I_1} B_{kl} + \frac{\partial W}{\partial I_2} \left(I_1 B_{kl} - \sum_{m} B_{km} B_{ml} \right) \right]$$
 (5.70)

Differentiation again gives:

$$\frac{\partial \tau_{kl}}{\partial F_{ij}} = J(F_{ij})^{-1} \frac{\partial W}{\partial J} \delta_{kl} + J \frac{\partial^{2}W}{\partial F_{ij}\partial J} \delta_{kl} + 2 \frac{\partial^{2}W}{\partial F_{ij}\partial I_{1}} B_{kl} + 2 \frac{\partial W}{\partial I_{1}} (\delta_{ki}F_{lj} + \delta_{li}F_{kj})
+ 2 \frac{\partial^{2}W}{\partial F_{ij}\partial I_{2}} I_{1}B_{kl} + 2 \frac{\partial W}{\partial I_{2}} \frac{\partial I_{1}}{\partial F_{ij}} B_{kl} + 2 \frac{\partial W}{\partial I_{2}} I_{1} (\delta_{ki}F_{lj} + \delta_{li}F_{kj})
- \sum_{n} 2 \frac{\partial^{2}W}{\partial F_{ij}\partial I_{2}} B_{ln}F_{nm} - 2 \frac{\partial W}{\partial I_{2}} \delta_{li}C_{mj} - 2 \frac{\partial W}{\partial I_{2}} F_{lj}F_{im} - 2 \frac{\partial W}{\partial I_{2}} B_{li}\delta_{mj}$$
(5.71)

Finding the second derivatives, but for $W(I_1, J)$ only gives:

$$\frac{\partial^2 W}{\partial J \partial F_{ij}} = \frac{\partial}{\partial J} \left[\frac{\partial W}{\partial J} J(F_{ji})^{-1} + 2 \frac{\partial W}{\partial I_1} F_{ij} \right]$$
 (5.72)

$$= \frac{\partial^2 W}{\partial J^2} J(F_{ji})^{-1} + \frac{\partial W}{\partial J} (F_{ji})^{-1} + \frac{\partial W}{\partial J} J \frac{\partial (F_{ji})^{-1}}{\partial J} + 2 \frac{\partial^2 W}{\partial J \partial I_1} F_{ij} + 2 \frac{\partial W}{\partial I_1} \frac{\partial F_{ij}}{\partial J}$$
(5.73)

Alternatively, look direction at Cauchy pressure and deviatoric stress due to increments in J and B and $W(\overline{I_1}, J)$:

$$\frac{\partial P}{\partial J} = -\frac{\partial^2 W}{\partial J^2} \tag{5.74}$$

$$\frac{\partial s_{kl}}{\partial B_{ij}} = \frac{\partial}{\partial B_{ij}} \left[\frac{2}{J^{5/3}} \frac{\partial W}{\partial \overline{I_1}} \left(B_{kl} - \frac{1}{3} I_1 \delta_{kl} \right) \right]$$
 (5.75)

$$= \frac{2}{J^{5/3}} \left[\left(\frac{\partial^2 W}{\partial B_{ij} \partial \overline{I_1}} - \frac{5}{3J} \frac{\partial J}{\partial B_{ij}} \frac{\partial W}{\partial \overline{I_1}} \right) \left(B_{kl} - \frac{1}{3} I_1 \delta_{kl} \right) \right]$$

$$+\frac{\partial W}{\partial \overline{I_1}} \left(\delta_{ki} \delta_{lj} - \frac{1}{3} \frac{\partial I_1}{\partial B_{ij}} \delta_{kl} \right) \right]$$
 (5.76)

5.7 Mooney-Rivlin Material

The Mooney-Rivilin material is an isotropic, elastic, hyperelastic material. It's stresses are based on a strain energy function that is assumed to be

$$W(\overline{I_1}, \overline{I_2}, J) = \frac{G_1}{2} (\overline{I_1} - 3) + \frac{G_2}{2} (\overline{I_2} - 3) + \frac{K}{2} (J - 1)^2$$
(5.77)

where G_1 , G_2 , and K are material properties. For low strains, this material is equivalent for a linear elastic, isotropic material with shear modulus $G_1 + G_2$ and bulk modulus K. If $G_2 = 0$, the material is one form or a neo-Hookean material (another form is given below). See below for alternate compressibility terms. Some hyperelastic rubber models assume incompressible materials, which corresponds to $K \to \infty$; such models do not work in dynamic code (because wave speed is infinite), although they can be used in membranes.

The Cauchy (or true stress) is found by differentiating the strain energy to get

$$\sigma = \frac{G_1}{J^{5/3}} \left(\mathbf{B} - \frac{I_1}{3} \mathbf{I} \right) + \frac{G_2}{J^{7/3}} \left(I_1 \mathbf{B} - \mathbf{B}^2 - \frac{2I_2}{3} \mathbf{I} \right) + K(J - 1) \mathbf{I}$$
 (5.78)

The stress components can be divided into pressure, P, and deviatoric stress, $\mathbf{s} = \boldsymbol{\sigma} + P \mathbf{I}$, which explicitly

evaluate to:

$$P = -K(J-1) (5.79)$$

$$s_{xx} = G_1 \frac{2B_{xx} - B_{yy} - B_{zz}}{3J^{5/3}} + G_2 \frac{B_{xx}(B_{yy} + B_{zz}) - 2B_{yy}B_{zz} - B_{xy}^2 - B_{xz}^2 + 2B_{yz}^2}{3J^{7/3}}$$
(5.80)

$$s_{yy} = G_1 \frac{2B_{yy} - B_{xx} - B_{zz}}{3J^{5/3}} + G_2 \frac{B_{yy}(B_{xx} + B_{zz}) - 2B_{xx}B_{zz} - B_{xy}^2 + 2B_{xz}^2 - B_{yz}^2}{3J^{7/3}}$$
(5.81)

$$s_{zz} = G_1 \frac{2B_{zz} - B_{xx} - B_{yy}}{3J^{5/3}} + G_2 \frac{B_{zz}(B_{xx} + B_{yy}) - 2B_{xx}B_{yy} + 2B_{xy}^2 - B_{xz}^2 - B_{yz}^2}{3J^{7/3}}$$
(5.82)

$$s_{xy} = G_1 \frac{B_{xy}}{J^{5/3}} + G_2 \frac{B_{zz}B_{xy} - B_{xz}B_{yz}}{J^{7/3}}$$
 (5.83)

$$s_{xz} = G_1 \frac{B_{xz}}{J^{5/3}} + G_2 \frac{B_{yy}B_{xz} - B_{xy}B_{yz}}{J^{7/3}}$$
 (5.84)

$$s_{yz} = G_1 \frac{B_{yz}}{I^{5/3}} + G_2 \frac{B_{xx}B_{yz} - B_{xy}B_{xz}}{I^{7/3}}$$
(5.85)

5.7.1 Plane Strain, Plane Stress, and Axisymmetric Analysis

For 2D analyses, $F_{xz}=F_{yz}=F_{zx}=F_{zy}=0$, which leads to zero for corresponding terms in **B**. The resulting stresses are P=-K(J-1), $s_{xz}=s_{yz}=0$, and

$$s_{xx} = G_1 \frac{2B_{xx} - B_{yy} - B_{zz}}{3J^{5/3}} + G_2 \frac{B_{xx}(B_{yy} + B_{zz}) - 2B_{yy}B_{zz} - B_{xy}^2}{3J^{7/3}}$$
(5.86)

$$s_{yy} = G_1 \frac{2B_{yy} - B_{xx} - B_{zz}}{3J^{5/3}} + G_2 \frac{B_{yy}(B_{xx} + B_{zz}) - 2B_{xx}B_{zz} - B_{xy}^2}{3J^{7/3}}$$
(5.87)

$$s_{zz} = G_1 \frac{2B_{zz} - B_{xx} - B_{yy}}{3J^{5/3}} + G_2 \frac{B_{zz}(B_{xx} + B_{yy}) - 2B_{xx}B_{yy} + 2B_{xy}^2}{3J^{7/3}}$$
(5.88)

$$s_{xy} = G_1 \frac{B_{xy}}{I^{5/3}} + G_2 \frac{B_{zz}B_{xy}}{I^{7/3}}$$
 (5.89)

For plane strain analysis $B_{zz}=1$. For axisymmetric analysis, B_{zz} is provided by the input deformation. For plane stress analysis, one has to solve numerically for B_{zz} to get $\sigma_{zz}=0$ or $s_{zz}=P$ and then use that result to find ε_{zz} and other stresses.

In the presence of residual stresses (see details below), $\sigma_{zz}=0$ is found by solving f=0 where

$$f = -3J_{res}J_{eff}^{2}P(J_{eff}) + G_{1}J^{1/3}(2B_{zz} - \alpha_{1}) + \frac{G_{2}}{I^{1/3}}(B_{zz}\alpha_{1} - 2\alpha_{2})$$
(5.90)

where $P(J_{eff})$ is the pressure model used, $\alpha_1 = B_{xx} + B_{yy}$, $\alpha_2 = B_{xx}B_{yy} - B_{xy}^2$, $J^2 = \det(\mathbf{B}) = B_{zz}\alpha_2$, and $J_{eff} = J/J_{res}$. More explicitly in B_{zz} , the function is

$$f = -3J_{res}J_{eff}^{2}P(J_{eff}) + G_{1}B_{zz}^{1/6}\alpha_{2}^{1/6}(2B_{zz} - \alpha_{1}) + \frac{G_{2}}{B_{zz}^{1/6}\alpha_{2}^{1/6}}(B_{zz}\alpha_{1} - 2\alpha_{2})$$

$$(5.91)$$

For more efficient Newton's method, we need

$$\frac{df}{dB_{zz}} = -3J_{res} \frac{d\left(J_{eff}^2 P(J_{eff})\right)}{dJ_{eff}} \frac{dJ_{eff}}{dB_{zz}} + \frac{G_1 J^{1/3} (14B_{zz} - \alpha_1)}{6B_{zz}} + \frac{G_2 (5\alpha_1 B_{zz} + 2\alpha_2)}{6B_{zz} J^{1/3}}$$
(5.92)

where $J_{eff} = \sqrt{B_{zz}\alpha_2}/J_{res}$ and $B_{zz}(dJ_{eff}/dB_{zz}) = \sqrt{B_{zz}\alpha_2}/(2J_{res})$. The first term simplifies to:

$$\frac{df}{dB_{zz}} = -\frac{3J}{2B_{zz}} \frac{d\left(J_{eff}^2 P(J_{eff})\right)}{dJ_{eff}} + \frac{G_1 J^{1/3} (14B_{zz} - \alpha_1)}{6B_{zz}} + \frac{G_2 (5\alpha_1 B_{zz} + 2\alpha_2)}{6B_{zz} J^{1/3}}$$
(5.93)

For the pressure term above

$$-\frac{3J}{2B_{zz}}\frac{d\left(J_{eff}^{2}P(J_{eff})\right)}{dJ_{eff}} = \frac{3J}{2B_{zz}}KJ_{eff}(3J_{eff}-2)$$
 (5.94)

Other pressure models are given below.

5.7.2 Dealing with Thermal and Moisture Strains

To handle thermal and moisture strains the deformation is divided into two steps. The first is free expansion to the new stress free volume and then deformation to the final volume. The total deformation will be

$$\mathbf{F} = \mathbf{F}^* \mathbf{F}^{res} = \mathbf{F}^* \lambda_{res} \mathbf{I} \tag{5.95}$$

where λ_{res} is total extension due to free thermal and moisture expansion:

$$\lambda_{res} = \exp(\alpha \Delta T + \beta \Delta c) \approx 1 + \alpha \Delta T + \beta \Delta c \tag{5.96}$$

where the approximation is for small ΔT and Δx . The stresses and energy, however, should be found using \mathbf{F}^* instead of \mathbf{F} , where \mathbf{F}^* is now deformation from the current free expansion volume instead of from the initial volume. The net effects are $\mathbf{F}^* = \mathbf{F}/\lambda_{res}$, $J_{eff} = |\mathbf{F}^*| = J/\lambda_{res}^3$, and $\mathbf{B}_{eff} = \mathbf{B}/\lambda_{res}^2$. In the above equations, the Cauchy stress is found by replacing J with J_{eff} in the pressure model and by multiplying all shear terms by $J_{res} = \lambda_{res}^3$, or explicitly by three equivalent forms:

$$\sigma = \frac{J_{res}G_1}{J^{5/3}} \left(\mathbf{B} - \frac{I_1}{3} \mathbf{I} \right) + \frac{J_{res}G_2}{J^{7/3}} \left(I_1 \mathbf{B} - \mathbf{B}^2 - \frac{2I_2}{3} \mathbf{I} \right) - P(J_{eff}) \mathbf{I}$$
 (5.97)

$$\sigma = \frac{G_1}{J_{eff}J^{2/3}} \left(\mathbf{B} - \frac{I_1}{3} \mathbf{I} \right) + \frac{G_2}{J_{eff}J^{4/3}} \left(I_1 \mathbf{B} - \mathbf{B}^2 - \frac{2I_2}{3} \mathbf{I} \right) - P(J_{eff}) \mathbf{I}$$
 (5.98)

$$\sigma = \frac{G_1}{J_{res}^{2/3} J_{eff}^{5/3}} \left(\mathbf{B} - \frac{I_1}{3} \mathbf{I} \right) + \frac{G_2}{J_{res}^{4/3} J_{eff}^{7/3}} \left(I_1 \mathbf{B} - \mathbf{B}^2 - \frac{2I_2}{3} \mathbf{I} \right) - P(J_{eff}) \mathbf{I}$$
 (5.99)

These results reduce to the proper low-strain thermoelastic relation at small strain. In this limit

$$\mathbf{B} \approx \mathbf{I} + 2\boldsymbol{\varepsilon}, \quad I_1 \approx 3 + 2\operatorname{Tr}(\boldsymbol{\varepsilon}), \quad \mathbf{B}^2 \approx \mathbf{I} + 2\boldsymbol{\varepsilon}, \quad J \approx 1 + \operatorname{Tr}(\boldsymbol{\varepsilon}), \quad \text{and} \quad \frac{1}{J_{res}} \approx 1 - 3\alpha\Delta T$$
 (5.100)

leading to

$$\boldsymbol{\sigma} = G_1 \left(2\boldsymbol{\varepsilon} - \frac{2}{3} \text{Tr}(\boldsymbol{\varepsilon}) \mathbf{I} \right) + G_2 \left(2\boldsymbol{\varepsilon} + \left(I_1 \left(1 - \frac{I_1}{3} \right) - 1 + \frac{\mathbf{B} \cdot \mathbf{B}}{3} \right) \mathbf{I} \right) + K(\text{Tr}(\boldsymbol{\varepsilon}) - 3\alpha \Delta T) \mathbf{I}$$
 (5.101)

Using $\mathbf{B} \cdot \mathbf{B} \approx 3 + 4 \text{Tr}(\boldsymbol{\varepsilon})$ leads to

$$\boldsymbol{\sigma} = (G_1 + G_2) \left(2\boldsymbol{\varepsilon} - \frac{2}{3} \operatorname{Tr}(\boldsymbol{\varepsilon}) \mathbf{I} \right) + K(\operatorname{Tr}(\boldsymbol{\varepsilon}) - 3\alpha \Delta T) \mathbf{I}$$
 (5.102)

$$= \left[\left(K - \frac{2}{3} (G_1 + G_2) \right) \operatorname{Tr}(\boldsymbol{\varepsilon}) - 3K\alpha\Delta T \right] \mathbf{I} + 2(G_1 + G_2)\boldsymbol{\varepsilon}$$
 (5.103)

which is the expected result where $G_1 + G_2$ is the low-strain shear modulus.

When doing incremental deformation, $\mathbf{F}_{k+1} = \mathbf{dF} \cdot \mathbf{F}_k$ and incremental volume ratio is $dJ = |\mathbf{dF}| = V_{k+1}/V_k$, but J_{eff} is V/V_{sf} where V_{sf} is the current stress free volume. For incremental deformation, $J_{k+1} = dJJ_k$, but we really want to increment $J_{eff}, J_{eff}, J_{eff}, J_{eff}$, which is

$$J_{eff,k+1} = \frac{V_{k+1}}{V_{sf,k+1}} = \frac{V_{k+1}}{V_k} \frac{V_{sf,k}}{V_{sf,k+1}} \frac{V_k}{V_{sf,k}} = \frac{V_{k+1}}{V_k} \frac{V_{sf,k}}{V_{sf,k+1}} J_{eff,k} = dJ_{eff} J_{eff,k}$$
(5.104)

which implies that

$$dJ_{eff} = \frac{V_{k+1}}{V_k} \frac{V_{sf,k}}{V_{sf,k+1}} = dJ/d\lambda_{res}^3$$
 (5.105)

where

$$d\lambda_{res} = \exp(\alpha dT + \beta dc) \approx 1 + \alpha dT + \beta dc \tag{5.106}$$

where dT and dc are temperature and concentration changes on the current time step.

5.7.3 Alternate Bulk Modulus Term

Besides the dilation energy term used above of

$$W = \frac{K}{2}(J-1)^2 \quad \text{with} \quad P = -K(J-1), \tag{5.107}$$

two alternative compressibility terms are:

$$W = \frac{K}{2}(\ln J)^2$$
 and $W = \frac{K}{2}(\frac{1}{2}(J^2 - 1) - \ln J)$ (5.108)

which gives normal Cauchy pressure terms of

$$P = -K \frac{\ln J}{J} \quad \text{and} \quad P = -\frac{K}{2} \left(J - \frac{1}{J} \right) \tag{5.109}$$

Although these three compressibility terms show some significant differences when J deviates significantly from 1, under most problems, J will stay close to one. Two exceptions could be constrained compression or tension. Here, the only one that works well to very small or large J is the second one above. This one correctly leads to inifinite positive stress as $J \to \infty$ and infinite negative stress as $J \to 0$. This later one is the default for this material in NairnMPM.

When implementing plane stress, the pressure term derivatives for these two new laws are:

$$\frac{d(J_{eff}^{2}P(J_{eff}))}{dJ_{eff}} = -K\frac{d(J_{eff}\ln J_{eff})}{dJ_{eff}} = -K(1+\ln J_{eff})$$
(5.110)

$$\frac{d(J_{eff}^2 P(J_{eff}))}{dJ_{eff}} = -\frac{K}{2} \frac{d\left(J_{eff}^3 - J_{eff}\right)}{dJ_{eff}} = -\frac{K}{2} (3J_{eff}^2 - 1)$$
 (5.111)

5.7.4 Tangent Bulk Modulus

The incremental bulk modulus is

$$\frac{1}{K(P)} = -\frac{d \ln V}{dP} = -\frac{d \ln J_{eff}}{dP} \qquad \text{or} \qquad K = -J_{eff} \frac{dP}{dJ_{eff}}$$
 (5.112)

The various bulk moduli are:

$$P = -K_0(J_{eff} - 1)$$
 gives $K = K_0 J_{eff}$ (5.113)

$$P = -K_0 \frac{\ln J_{eff}}{J_{eff}} \qquad \text{gives} \qquad K = K_0 \frac{1 - \ln J_{eff}}{J_{eff}^2}$$
 (5.114)

$$P = -\frac{K_0}{2} \left(J_{eff} - \frac{1}{J_{eff}} \right)$$
 gives $K = \frac{K_0}{2} \left(J_{eff} + \frac{1}{J_{eff}} \right)$ (5.115)

If implementing increment pressure law, the result is:

$$P_n = P_{n-1} - K(J_{eff}) d \ln J_{eff} = P_{n-1} - K(J_{eff}) \ln dJ_{eff}$$
(5.116)

5.7.5 Tangent Shear Modulus

Assuming $G_2 = 0$, the deviatoric stress is

$$s = \frac{J_{res}G_1}{J^{5/3}} \left(\mathbf{B} - \frac{I_1}{3} \mathbf{I} \right)$$
 (5.117)

and the tangent shear modulus including residual stresses is

$$\frac{\partial s_{kl}}{\partial B_{ij}} = \frac{J_{res}G_1}{J^{5/3}} \left[\left(\delta_{ki} \delta_{lj} - \frac{1}{3} \frac{\partial I_1}{\partial B_{ij}} \delta_{kl} \right) - \frac{5}{3J} \frac{\partial J}{\partial B_{ij}} \left(B_{kl} - \frac{1}{3} I_1 \delta_{kl} \right) \right]$$
 (5.118)

$$= \frac{J_{res}G_1}{J^{5/3}} \left[\left(\delta_{ki}\delta_{lj} - \frac{1}{3}\delta_{ij}\delta_{kl} \right) - \frac{5}{6}(B_{ij})^{-1} \left(B_{kl} - \frac{1}{3}I_1\delta_{kl} \right) \right]$$
 (5.119)

This form follows by using $det(\mathbf{B}) = J^2$ and tensor calculus result for derivative of a determinant of a symmetric tensor:

$$\frac{\partial J^2}{\partial B_{ij}} = J^2 (B_{ij})^{-1} = 2J \frac{\partial J}{B_{ij}}$$
 or $\frac{\partial J}{\partial B_{ij}} = \frac{J}{2} (B_{ij})^{-1}$ (5.120)

The normal and shear deviatoric stress increments are:

$$\frac{\partial s_{kk}}{\partial B_{ij}} = \frac{J_{res}G_1}{3J^{5/3}} \left[\left(3\delta_{ki}\delta_{kj} - \delta_{ij} \right) - \frac{5}{6} (B_{ij})^{-1} (3B_{kk} - I_1) \right]$$
 (5.121)

$$\frac{\partial s_{kl} (k \neq l)}{\partial B_{ij}} = \frac{J_{res} G_1}{J^{5/3}} \left[\delta_{ki} \delta_{lj} - \frac{5}{6} (B_{ij})^{-1} (B_{kl}) \right]$$
 (5.122)

Explicitly, for example:

$$\frac{3J^{5/3}}{J_{res}G_1} \frac{\partial s_{xx}}{\partial B_{ij}} = \begin{pmatrix} 2 & 0 & 0 \\ 0 & -1 & 0 \\ 0 & 0 & -1 \end{pmatrix} - \frac{5}{6} \mathbf{B}^{-1} (2B_{xx} - B_{yy} - B_{zz})$$
 (5.123)

$$\frac{J^{5/3}}{J_{res}G_1} \frac{\partial s_{xy}}{\partial B_{ij}} = \begin{pmatrix} 0 & 1 & 0 \\ 0 & 0 & 0 \\ 0 & 0 & 0 \end{pmatrix} - \frac{5}{6} \mathbf{B}^{-1} B_{xy}$$
 (5.124)

5.7.6 Plane Stress Mooney-Rivlin Membrane

Using the deformation state for plane stress membrane and defining $\lambda = \lambda_1$) a Mooney-Rivlin material has the normal Cauchy stresses:

$$\sigma_{11} = -P(J_{eff}) + 2J_{res}G_1 \frac{\lambda^2 - \frac{J}{\lambda}}{3J^{5/3}} + 2J_{res}G_2 \frac{\lambda - \frac{J}{\lambda^2}}{3J^{4/3}}$$
 (5.125)

$$\sigma_{22} = \sigma_{33} = -P(J_{eff}) + J_{res}G_1 \frac{\frac{J}{\lambda} - \lambda^2}{3J^{5/3}} + J_{res}G_2 \frac{\frac{J}{\lambda^2} - \lambda}{3J^{4/3}}$$
 (5.126)

where the $P(J_{eff})$ is the pressure model. The stress state is found by numerically solving $\sigma_{22} = 0$ for J or solving:

$$-P(J_{eff}) = J_{res}G_1 \frac{\lambda^2 - \frac{J}{\lambda}}{3J^{5/3}} + J_{res}G_2 \frac{\lambda - \frac{J}{\lambda^2}}{3J^{4/3}}$$
 (5.127)

For Newton's method, solve f = 0 for J using

$$f = 3J_{res}J_{eff}^2 P(J_{eff}) + (J^{1/3}G_1 + J^{2/3}G_2) \left(\lambda^2 - \frac{J}{\lambda}\right)$$
 (5.128)

$$\frac{df}{dJ} = 3 \frac{d(J_{eff}^2 P(J_{eff}))}{dJ_{eff}} + \frac{J^{1/3} G_1}{3} \left(\frac{\lambda^2}{J} - \frac{4}{\lambda}\right) + \frac{J^{2/3} G_2}{3} \left(\frac{2\lambda}{J} - \frac{5}{\lambda^2}\right)$$
(5.129)

Given this J, the final Kirchhoff stress results are

$$\tau_{11} = \frac{1}{J_{eff}} \left(J^{1/3} G_1 + \frac{J^{2/3} G_2}{\lambda} \right) \left(\lambda^2 - \frac{J}{\lambda} \right) \quad \text{and} \quad \tau_{33} = 0$$
 (5.130)

and $\lambda_2 = \lambda_3 = \sqrt{J/\lambda}$. Normally dynamic code cannot model an incompressible material, but an incompressible membrane material can be modeled by setting $J = J_{res}$ and $J_{eff} = 1$ or:

$$\tau_{11} = \left(J_{res}^{1/3} G_1 + \frac{J_{res}^{2/3} G_2}{\lambda}\right) \left(\lambda^2 - \frac{J_{res}}{\lambda}\right) \quad \text{and} \quad \tau_{33} = 0$$
 (5.131)

and $\lambda_2 = \lambda_3 = \sqrt{J_{res}/\lambda}$. Note that during free thermal expansion, $J_{res} = \lambda^3$ and all stresses are zero.

5.7.7 Plane Stress Mooney-Rivlin Membrane — Alternate Approach

In this alternate approach, the new fiber stretch is found by conserving the imposed incremental volume change, dJ, and then finding the new fiber stretch to keep the thickness stress equal to zero.

In 2D plane stress simulations with incremental fiber stretch $d\lambda$, $J=J_n=d\lambda d\lambda_2 d\lambda_3 J_{n-1}$ and $d\lambda_2=d\lambda_3=\sqrt{dJ/d\lambda}$. The left Cauchy-Green deformation tensor current membrane coordinates has non-zero elements $B_{11}=\lambda_n^2$, $B_{22}=B_{33}=J/\lambda_n$, where $\lambda_n=d\lambda\lambda$ is the new fiber stretch in the n^{th} step. For a Mooney-Rivlin material (here neo-hookean only with $G_1=G$ and $G_2=0$) the normal Cauchy stresses are:

$$\sigma_{11} = -P(J_{eff}) + 2J_{res}G\frac{\lambda_n^2 - \frac{J}{\lambda_n}}{3J^{5/3}}$$
 (5.132)

$$\sigma_{22} = \sigma_{33} = -P(J_{eff}) + J_{res}G \frac{\frac{J}{\lambda_n} - \lambda_n^2}{3J^{5/3}}$$
 (5.133)

where the $P(J_{eff})$ is the pressure model. The stress state is found by solving $\sigma_{yy} = 0$ for $d\lambda = \lambda_n/\lambda_{n-1}$, which is a cubic equation:

$$\lambda_n^3 + \frac{3J^{2/3}J_{eff}P(J_{eff})}{G}\lambda_n - J = 0$$
 (5.134)

This depressed cubic can be found analytically. When this approach was tried, the resulting membrane seemed too stiff and the stiffness was a strong function of the Poisson's ratio. This approach is not recommended for MPM membrane analysis.

5.7.8 Plane Strain and Axisymmetric Mooney-Rivlin Membrane

Using the deformation state for plane strain or axiymmetric membranes and defining $\lambda = \lambda_1$, a Mooney-Rivlin material has the normal Cauchy stresses:

$$\sigma_{11} = -P(J_{eff}) + J_{res}G_1 \frac{2\lambda^2 - \frac{J^2}{\lambda^2 \lambda_3^2} - \lambda_3^2}{3J^{5/3}} + J_{res}G_2 \frac{\lambda^2 \lambda_3^2 + \frac{J^2}{\lambda_3^2} - 2\frac{J^2}{\lambda^2}}{3J^{7/3}}$$
(5.135)

$$\sigma_{22} = -P(J_{eff}) + J_{res}G_1 \frac{2\frac{J^2}{\lambda^2 \lambda_3^2} - \lambda^2 - \lambda_3^2}{3J^{5/3}} + J_{res}G_2 \frac{J^2}{\lambda_3^2} + \frac{J^2}{\lambda^2} - 2\lambda^2 \lambda_3^2}{3J^{7/3}}$$
(5.136)

$$\sigma_{33} = -P(J_{eff}) + J_{res}G \frac{2\lambda_3^2 - \lambda^2 - \frac{J^2}{\lambda^2 \lambda_3^2}}{3J^{5/3}} + J_{res}G_2 \frac{\lambda^2 \lambda_3^2 + \frac{J^2}{\lambda^2} - 2\frac{J^2}{\lambda_3^2}}{3J^{7/3}}$$
(5.137)

where the $P(J_{eff})$ is the pressure model. The stress state is found by numerically solving $\sigma_{22} = 0$ for J or solving:

$$-P(J_{eff}) = J_{res}G_1 \frac{\lambda_3^2 + \lambda^2 - 2\frac{J^2}{\lambda^2 \lambda_3^2}}{3J^{5/3}} + J_{res}G_2 \frac{2\lambda^2 \lambda_3^2 - \frac{J^2}{\lambda_3^2} - \frac{J^2}{\lambda^2}}{3J^{7/3}}$$
(5.138)

For Newton's method, solve f = 0 for J using

$$f = 3J_{res}J_{eff}^{2}P(J_{eff}) + J^{1/3}G_{1}\left(\lambda_{3}^{2} + \lambda^{2} - 2\frac{J^{2}}{\lambda^{2}\lambda_{3}^{2}}\right) + \frac{G_{2}}{J^{1/3}}\left(2\lambda^{2}\lambda_{3}^{2} - J^{2}\left(\frac{1}{\lambda_{3}^{2}} + \frac{1}{\lambda^{2}}\right)\right)$$

$$\frac{df}{dJ} = 3\frac{d(J_{eff}^{2}P(J_{eff}))}{dJ_{eff}} + \frac{J^{1/3}G_{1}}{3}\left(\frac{\lambda_{3}^{2} + \lambda^{2}}{J} - \frac{14J}{\lambda^{2}\lambda_{3}^{2}}\right) - \frac{G_{2}}{3J^{1/3}}\left(\frac{2\lambda^{2}\lambda_{3}^{2}}{J} + 5J\left(\frac{1}{\lambda_{3}^{2}} + \frac{1}{\lambda^{2}}\right)\right)$$
(5.139)

Given this J, the final Kirchhoff stress results are

$$\tau_{11} = \frac{1}{J_{eff}} \left(J^{1/3} G_1 + \frac{G_2 \lambda_3^2}{J^{1/3}} \right) \left(\lambda^2 - \frac{J^2}{\lambda^2 \lambda_3^2} \right)$$
 (5.140)

$$\tau_{33} = \frac{1}{J_{eff}} \left(J^{1/3} G_1 + \frac{G_2 \lambda^2}{J^{1/3}} \right) \left(\lambda_3^2 - \frac{J^2}{\lambda^2 \lambda_3^2} \right)$$
 (5.141)

and $\lambda_2 = J/(\lambda \lambda_3)$. Normally dynamic code cannot model an incompressible material, but a plane strain incompressible membrane material can be modeled by setting $J = J_{res}$ and $J_{eff} = 1$ or:

$$\tau_{11} = \left(J_{res}^{1/3}G_1 + \frac{G_2\lambda_3^2}{J_{res}^{1/3}}\right) \left(\lambda^2 - \frac{J_{res}^2}{\lambda^2\lambda_3^2}\right)$$
 (5.142)

$$\tau_{33} = \left(J_{res}^{1/3}G_1 + \frac{G_2\lambda^2}{J_{res}^{1/3}}\right) \left(\lambda_3^2 - \frac{J_{res}^2}{\lambda^2\lambda_3^2}\right)$$
 (5.143)

and $\lambda_2 = J_{res}/(\lambda\lambda_3)$. Note that during free plane strain thermal expansion, $J_{res} = \lambda^2$ and $\lambda_3 = 1$ such that in-plane stress will be zero but τ_{33} will be non-zero due to restraint in that direction. For axisymmetric free thermal expansion, $J_{res} = \lambda^3$ and $\lambda_3 = \lambda$ such that all stresses are zero.

5.7.9 3D Mooney-Rivlin Membrane

Using the deformation state for 3D membranes, a Mooney-Rivlin material has the normal Cauchy stresses:

$$\sigma_{11} = -P(J_{eff}) + \frac{J_{res}G_1}{3J^{5/3}} \left(2\lambda_1^2 + \lambda_2^2 (2\cos^2\omega - \sin^2\omega) - \frac{J^2}{\lambda_1^2 \lambda_2^2 \sin^2\omega} \right) + \frac{J_{res}G_2}{3J^{7/3}} \left(\lambda_1^2 \lambda_2^2 \sin^2\omega + (\lambda_1^2 + \lambda_2^2 (\cos^2\omega - 2\sin^2\omega)) \frac{J^2}{\lambda_2^2 \lambda_1^2 \sin^2\omega} \right)$$
(5.144)

$$\sigma_{22} = -P(J_{eff}) + \frac{J_{res}G_1}{3J^{5/3}} \left(\lambda_2^2 (2\sin^2 \omega - \cos^2 \omega) - \lambda_1^2 - \frac{J^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right)$$
 (5.145)

$$+\frac{J_{res}G_{2}}{3J^{7/3}}\left(\lambda_{1}^{2}\lambda_{2}^{2}\sin^{2}\omega-\left(2\lambda_{1}^{2}+\lambda_{2}^{2}\left(2\cos^{2}\omega-\sin^{2}\omega\right)\right)\frac{J^{2}}{\lambda_{2}^{2}\lambda_{1}^{2}\sin^{2}\omega}\right)$$
(5.146)

$$\sigma_{33} = -P(J_{eff}) + \frac{J_{res}G_1}{3J^{5/3}} \left(\frac{2J^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} - \lambda_1^2 - \lambda_2^2 \right)$$
 (5.147)

$$+\frac{J_{res}G_2}{3J^{7/3}}\left(\frac{(\lambda_1^2 + \lambda_2^2)J^2}{\lambda_2^2\lambda_1^2\sin^2\omega} - 2\lambda_1^2\lambda_2^2\sin^2\omega\right)$$
 (5.148)

$$\sigma_{12} = \frac{J_{res}G_1}{J^{5/3}}\lambda_2^2 \sin \omega \cos \omega + \frac{J_{res}G_2}{J^{1/3}} \frac{\cos \omega}{\lambda_1^2 \sin \omega}$$
 (5.149)

where the $P(J_{eff})$ is the pressure model. The stress state is found by numerically solving $\sigma_{33} = 0$ for J or solving:

$$-P(J_{eff}) = \frac{J_{res}G_1}{3J^{5/3}} \left(\lambda_1^2 + \lambda_2^2 - \frac{2J^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right) + \frac{J_{res}G_2}{3J^{7/3}} \left(2\lambda_1^2 \lambda_2^2 \sin^2 \omega - \frac{(\lambda_1^2 + \lambda_2^2)J^2}{\lambda_2^2 \lambda_1^2 \sin^2 \omega} \right)$$
(5.150)

For Newton's method, solve f = 0 for J using

$$f = 3J_{res}J_{eff}^{2}P(J_{eff}) + J^{1/3}G_{1}\left(\lambda_{1}^{2} + \lambda_{2}^{2} - \frac{2J^{2}}{\lambda_{1}^{2}\lambda_{2}^{2}\sin^{2}\omega}\right)$$

$$+ \frac{G_{2}}{J^{1/3}}\left(2\lambda_{1}^{2}\lambda_{2}^{2}\sin^{2}\omega - \frac{(\lambda_{1}^{2} + \lambda_{2}^{2})J^{2}}{\lambda_{2}^{2}\lambda_{1}^{2}\sin^{2}\omega}\right)$$

$$\frac{df}{dJ} = 3\frac{d(J_{eff}^{2}P(J_{eff}))}{dJ_{eff}} + \frac{J^{1/3}G}{3}\left(\frac{\lambda_{1}^{2} + \lambda_{2}^{2}}{J} - \frac{14J}{\lambda_{1}^{2}\lambda_{2}^{2}\sin^{2}\omega}\right)$$

$$-\frac{G_{2}}{3J^{1/3}}\left(\frac{2\lambda_{1}^{2}\lambda_{2}^{2}\sin^{2}\omega}{J} + \frac{5(\lambda_{1}^{2} + \lambda_{2}^{2})J}{\lambda_{2}^{2}\lambda_{1}^{2}\sin^{2}\omega}\right)$$
(5.152)

Given this J, the final results for Kirchhoff stresses are:

$$\tau_{11} = \frac{J^{1/3}G_1}{J_{eff}} \left(\lambda_1^2 + \lambda_2^2 \cos^2 \omega - \frac{J^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right) + \frac{G_2}{J_{eff}J^{1/3}} \left(\lambda_1^2 \lambda_2^2 \sin^2 \omega - \frac{J^2}{\lambda_1^2} \right)$$
(5.153)

$$au_{22} = \frac{J^{1/3}G_1}{J_{eff}} \left(\lambda_2^2 \sin^2 \omega - \frac{J^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right)$$

$$+\frac{G_2}{J_{eff}J^{1/3}} \left(\lambda_1^2 \lambda_2^2 \sin^2 \omega - \frac{\left(\lambda_1^2 + \lambda_2^2 \cos^2 \omega\right) J^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right)$$
 (5.154)

$$\tau_{12} = \frac{J^{1/3}G_1}{J_{eff}}\lambda_2^2 \sin \omega \cos \omega + \frac{G_2}{J_{eff}J^{1/3}} \frac{J^2 \cos \omega}{\lambda_1^2 \sin \omega}$$
 (5.155)

and $\lambda_3 = J/(\lambda_1 \lambda_2 \sin \omega)$. Normally dynamic code cannot model an incompressible material, but a 3D incompressible membrane material can be modeled by setting $J = J_{res}$ and $J_{eff} = 1$ or:

$$\tau_{11} = J_{res}^{1/3} G_1 \left(\lambda_1^2 + \lambda_2^2 \cos^2 \omega - \frac{J_{res}^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right) + \frac{G_2}{J_{res}^{1/3}} \left(\lambda_1^2 \lambda_2^2 \sin^2 \omega - \frac{J_{res}^2}{\lambda_1^2} \right)$$
(5.156)

$$au_{22} = J_{res}^{1/3} G_1 \left(\lambda_2^2 \sin^2 \omega - \frac{J_{res}^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right)$$

$$+\frac{G_2}{J_{res}^{1/3}} \left(\lambda_1^2 \lambda_2^2 \sin^2 \omega - \frac{\left(\lambda_1^2 + \lambda_2^2 \cos^2 \omega\right) J_{res}^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right) \tag{5.157}$$

$$\tau_{12} = J_{res}^{1/3} G_1 \lambda_2^2 \sin \omega \cos \omega + \frac{G_2}{J_{res}^{1/3}} \frac{J_{res}^2 \cos \omega}{\lambda_1^2 \sin \omega}$$
 (5.158)

and $\lambda_3 = J_{res}/(\lambda_1\lambda_2\sin\omega)$. Note that during free thermal expansion, $J_{res} = \lambda^3$, $\lambda_1 = \lambda_2 = \lambda$ and $\cos\omega = 0$, which leads to all stresses equal to zero.

5.8 Neo-Hookean Material

Although using $G_2 = 0$ is a special case of a Mooney-Rivlin material is a neo-Hookean material, some literature results define a different neo-Hookean material using the strain energy function:

$$W(I_1, I_2, J) = \frac{G}{2} (I_1 - 3 - 2\ln J) + \frac{\lambda}{2} (\ln J)^2$$
 (5.159)

where *G* is shear modulus and λ is the Lamé constant. The Cauchy stress (after accounting for residual stresses) is

$$\sigma = \frac{\lambda \ln J_{eff}}{J_{eff}} \mathbf{I} + \frac{G}{J_{eff}} \left(\frac{\mathbf{B}}{J_{res}^{2/3}} - \mathbf{I} \right)$$
 (5.160)

In the low strain limit, $J=1+{\rm Tr}(\varepsilon)$, $J_{res}=1+3\alpha\Delta T$, and ${\bf B}={\bf I}+2\varepsilon$. The stress simplifies to

$$\sigma = (\lambda \text{Tr}(\varepsilon) - (3\lambda + 2G)\alpha \Delta T)\mathbf{I} + 2G\varepsilon \qquad \text{low strain}$$
 (5.161)

which is the expected result using low-strain shear and Lamé properties and accounting for residual thermal stresses (note that $3\lambda + 2G = 3K$ where K is the low strain bulk modulus).

The stress components can be divided into pressure, P and deviatoric stress, $s = \sigma + PI$, which explicitly evaluate to:

$$P = P(J_{eff}) - \frac{G}{J_{eff}} \left(\frac{B_{xx} + B_{yy} + B_{zz}}{3J_{res}^{2/3}} - 1 \right)$$
 (5.162)

$$s_{xx} = \frac{J_{res}^{1/3}G}{3J} \left(2B_{xx} - B_{yy} - B_{zz}\right)$$
 (5.163)

$$s_{yy} = \frac{J_{res}^{1/3}G}{3J} \left(2B_{yy} - B_{zz} - B_{zz}\right)$$
 (5.164)

$$s_{zz} = \frac{J_{res}^{1/3}G}{3J} (2B_{zz} - B_{xx} - B_{xx})$$
 (5.165)

$$s_{ij} = \frac{J_{res}^{1/3}G}{J}B_{ij} \quad \text{for } i \neq j$$
 (5.166)

where $P(J_{eff})$ uses any pressure above except that K is replaced by λ . When doing plane stress calculations, one task is to solve for $\sigma_{zz} = 0$, which is equivalent to solving numerically for f = 0 give

$$f = -J_{res}^{2/3} J_{eff} P(J_{eff}) + G(B_{zz} - J_{res}^{2/3})$$
 (5.167)

$$\frac{df}{dB_{zz}} = G - \frac{J_{res}^{2/3} J_{eff}}{2B_{zz}} \frac{d(J_{eff} P(J_{eff}))}{dJ_{eff}}$$
(5.168)

which used $J_{eff} = \sqrt{B_{zz}\alpha_2}/J_{res}$ with $\alpha_2 = B_{xx}B_{yy} - B_{xy}^2$ leading to $(dJ_{eff}/dB_{zz}) = J_{eff}/(2B_{zz})$. This equation can be solved analytically for two pressure models, but requires numerical solution for the third. The two analytical solutions are

$$B_{zz} = J_{res}^2 \frac{\lambda + 2G}{\lambda \alpha_2 + 2GJ_{res}^{4/3}}$$
 when $J_{eff} P(J_{eff}) = -\frac{\lambda}{2} (J_{eff}^2 - 1)$ (5.169)

and

$$\sqrt{B_{zz}} = J_{res} \frac{\lambda \sqrt{\alpha_2} + \sqrt{\lambda^2 \alpha_2 + 4G\left(\lambda \alpha_2 + GJ_{res}^{4/3}\right)}}{2\left(\lambda \alpha_2 + GJ_{res}^{4/3}\right)}$$
(5.170)

when $P(J_{eff}) = -\lambda \left(J_{eff} - 1\right)$. A third pressure law has $P(J_{eff}) = -\lambda \ln J_{eff}/J_{eff}$ leading to

$$f = G(B_{zz} - J_{res}^{2/3}) + \lambda J_{res}^{2/3} \ln J_{eff}$$
 (5.171)

$$\frac{df}{dB_{zz}} = G + \frac{\lambda J_{res}^{2/3}}{2B_{zz}}$$
 (5.172)

5.8.1 Tangent Bulk Modulus

To support adiabatic heating (or state dependent wave speeds), we need K as a function of deformation. Using $K = -J_{eff} dP/dJ_{eff}$ gives The various bulk moduli are (using J for J_{eff}):

$$P(J_{eff}) = -\lambda(J-1)$$
 gives $K = \lambda J + G\left(1 - \frac{I_1}{3} + \frac{1}{3}\frac{dI_1}{dJ}\right)$ (5.173)

$$P(J_{eff}) = -\lambda \frac{\ln J}{J}$$
 gives $K = \lambda \frac{1 - \ln J}{J^2} + G\left(1 - \frac{I_1}{3} + \frac{1}{3}\frac{dI_1}{dJ}\right)$ (5.174)

$$P(J_{eff}) = -\frac{\lambda}{2} \left(J - \frac{1}{J} \right) \qquad \text{gives} \qquad K = \frac{\lambda}{2} \left(J + \frac{1}{J} \right) + G \left(1 - \frac{I_1}{3} + \frac{1}{3} \frac{dI_1}{dJ} \right) \quad (5.175)$$

For hydrostatic compression in all models, K_0 is found by substituting $I_1 = 3J^{2/3}$ and then J = 1 to get the result of $K_0 = \lambda + 2G/3$. For $J \neq 1$, the shear term becomes

$$G\left(1 - J^{2/3} + \frac{2}{3J^{1/3}}\right) \tag{5.176}$$

which appears to be the only way to evaluate *K* for a fixed particle state.

5.8.2 Plane Stress Neo-Hookean Membrane

Using the deformation state for plane stress membrane, a neo-Hookean material has the normal Cauchy stresses:

$$\sigma_{11} = -P(J_{eff}) + \frac{G}{J_{eff}} \left(\frac{\lambda_1^2}{J_{res}^{2/3}} - 1 \right)$$
 (5.177)

$$\sigma_{22} = \sigma_{33} = -P(J_{eff}) + \frac{G}{J_{eff}} \left(\frac{J}{\lambda_1 J_{res}^{2/3}} - 1 \right)$$
 (5.178)

where the $P(J_{eff})$ is the pressure model (using λ instead of K). The stress state is found by numerically solving $\sigma_{22} = 0$ for J or solving:

$$-P(J_{eff}) = \frac{G}{J_{eff}} \left(1 - \frac{J}{\lambda_1 J_{res}^{2/3}} \right) \quad \text{or} \quad \frac{J_{eff} P(J_{eff})}{G} - \frac{J_{res}^{1/3} J_{eff}}{\lambda_1} + 1 = 0$$
 (5.179)

For two models, this can be solved analytically:

$$J_{eff} = -\frac{J_{res}^{1/3}G}{\lambda \lambda_{1}} + \sqrt{1 + \frac{2G}{\lambda} + \left(\frac{J_{res}^{1/3}G}{\lambda \lambda_{1}}\right)^{2}} \quad \text{for } P(J_{eff}) = -\frac{\lambda}{2} \left(J_{eff} - \frac{1}{J_{eff}}\right)$$
 (5.180)

$$J_{eff} = \frac{1}{2} \left(1 - \frac{J_{res}^{1/3} G}{\lambda \lambda_1} + \sqrt{\frac{4G}{\lambda} + \left(1 - \frac{J_{res}^{1/3} G}{\lambda \lambda_1} \right)^2} \right) \quad \text{for } P(J_{eff}) = -\lambda \left(J_{eff} - 1 \right) \quad (5.181)$$

Notice for incompressible $(\lambda \to \infty)$, undeformed $(J_{res}^{1/3} = \lambda_1 = 1)$, and free thermal expansion $(J_{res}^{1/3} = \lambda_1)$ that $J_{eff} = 1$. The last model (with $J_{eff}P(J_{eff}) = -\lambda \ln J_{eff}$) must be solved numerically for J using Newton's method with:

$$f = \lambda_1 J_{res}^{2/3} J_{eff} P(J_{eff}) + G(\lambda_1 J_{res}^{2/3} - J) = -\lambda \lambda_1 J_{res}^{2/3} \ln J_{eff} + G(\lambda_1 J_{res}^{2/3} - J)$$
 (5.182)

$$\frac{df}{dJ} = \frac{\lambda_1}{J_{res}^{1/3}} \frac{d(J_{eff}P(J_{eff}))}{dJ_{eff}} - G = -\frac{\lambda \lambda_1 J_{res}^{2/3}}{J} - G$$
 (5.183)

Given this J, the final Kirchhoff stress results are

$$\tau_{11} = J_{res}^{1/3} G\left(\lambda_1^2 - \frac{J}{\lambda_1}\right) \quad \text{and} \quad \tau_{33} = 0$$
(5.184)

with $\lambda_2 = \lambda_3 = \sqrt{J/\lambda_1}$. Normally dynamic code cannot model an incompressible material, but an incompressible membrane material can be modeled by setting $J = J_{res}$ and $J_{eff} = 1$ or:

$$\tau_{11} = \frac{G}{J_{res}^{2/3}} \left(\lambda_1^2 - \frac{J_{res}}{\lambda_1} \right) \quad \text{and} \quad \tau_{33} = 0$$
(5.185)

with $\lambda_2 = \lambda_3 = \sqrt{J_{res}/\lambda_1}$. Note that during free thermal expansion, $J_{res} = \lambda_1^3$ and all stresses are zero.

5.8.3 Plane Strain and Axisymmetric Neohookean Membrane

Using the deformation state for plane strain or axiymmetric membranes, a Neohookean material has the normal Cauchy stresses:

$$\sigma_{11} = -P(J_{eff}) + \frac{G}{J_{eff}} \left(\frac{\lambda_1^2}{J_{res}^{2/3}} - 1 \right)$$
 (5.186)

$$\sigma_{22} = -P(J_{eff}) + \frac{G}{J_{eff}} \left(\frac{J^2}{J_{res}^{2/3} \lambda_1^2 \lambda_3^2} - 1 \right)$$
 (5.187)

$$\sigma_{33} = -P(J_{eff}) + \frac{G}{J_{eff}} \left(\frac{\lambda_3^2}{J_{res}^{2/3}} - 1 \right)$$
 (5.188)

where the $P(J_{eff})$ is the pressure model. The stress state is found by numerically solving $\sigma_{22} = 0$ for J or solving:

$$-P(J_{eff}) = \frac{G}{J_{eff}} \left(1 - \frac{J^2}{J_{res}^{2/3} \lambda_1^2 \lambda_3^2} \right) \quad \text{or} \quad \frac{J_{eff} P(J_{eff})}{G} - \frac{J_{res}^{4/3} J_{eff}^2}{\lambda_1^2 \lambda_3^2} + 1 = 0$$
 (5.189)

For two models, this can be solved analytically:

$$J_{eff} = \sqrt{\frac{\lambda + 2G}{\lambda + 2G\frac{J_{res}^{4/3}}{\lambda_1^2 \lambda_3^2}}} \quad \text{for } P(J_{eff}) = -\frac{\lambda}{2} \left(J_{eff} - \frac{1}{J_{eff}} \right)$$
 (5.190)

$$J_{eff} = \frac{1}{2} \left(\frac{1 + \sqrt{1 + \frac{4G}{\lambda} \left(1 + \frac{G}{\lambda} \frac{J_{res}^{4/3}}{\lambda_1^1 \lambda_3^2} \right)}}{1 + \frac{G}{\lambda} \frac{J_{res}^{4/3}}{\lambda_1^1 \lambda_2^2}} \right) \quad \text{for } P(J_{eff}) = -\lambda \left(J_{eff} - 1 \right)$$
 (5.191)

Notice for incompressible $(\lambda \to \infty)$, undeformed $(J_{res}^{1/3} = \lambda_1 = \lambda_3 = 1)$, and free thermal expansion $(J_{res}^{1/3} = \lambda_1 = \lambda_3)$ that $J_{eff} = 1$. The last model (with $J_{eff}P(J_{eff}) = -\lambda \ln J_{eff}$) must be solved numerically for J using Newton's method with:

$$f = \lambda_1^2 \lambda_3^2 J_{res}^{2/3} J_{eff} P(J_{eff}) + G(\lambda_1^2 \lambda_3^2 J_{res}^{2/3} - J^2)$$
 (5.192)

$$= -\lambda \lambda_1^2 \lambda_3^2 J_{res}^{2/3} \ln J_{eff} + G \left(\lambda_1^2 \lambda_3^2 J_{res}^{2/3} - J^2 \right)$$
 (5.193)

$$\frac{df}{dJ} = \frac{\lambda_1^2 \lambda_3^2}{J_{res}^{1/3}} \frac{d(J_{eff} P(J_{eff}))}{dJ_{eff}} - 2GJ = -\frac{\lambda \lambda_1^2 \lambda_3^2 J_{res}^{2/3}}{J} - 2GJ$$
 (5.194)

Given the solved J, the final Kirchhoff stress results are

$$\tau_{11} = J_{res}^{1/3} G\left(\lambda_1^2 - \frac{J^2}{\lambda_1^2 \lambda_3^2}\right) \quad \text{and} \quad \tau_{33} = J_{res}^{1/3} G\left(\lambda_3^2 - \frac{J^2}{\lambda_1^2 \lambda_3^2}\right) \tag{5.195}$$

and $\lambda_2 = J/(\lambda_1 \lambda_3)$. Normally dynamic code cannot model an incompressible material, but a plane strain incompressible membrane material can be modeled by setting $J = J_{res}$ and $J_{eff} = 1$ or:

$$\tau_{11} = J_{res}^{1/3} G \left(\lambda_1^2 - \frac{J_{res}^2}{\lambda_1^2 \lambda_3^2} \right) \quad \text{and} \quad \tau_{33} = J_{res}^{1/3} G \left(\lambda_3^2 - \frac{J_{res}^2}{\lambda_1^2 \lambda_3^2} \right)$$
 (5.196)

and $\lambda_2 = J_{res}/(\lambda_1\lambda_3)$. Note that during free plane strain thermal expansion, $J_{res} = \lambda_1^2$ and $\lambda_3 = 1$ such that in-plane stress will be zero but τ_{33} will be non-zero due to restraint in that direction. For axisymmetric free thermal expansion, $J_{res} = \lambda_1^3$ and $\lambda_3 = \lambda_1$ such that all stresses are zero.

5.8.4 3D Neo-Hookean Membrane

Using the deformation state for 3D membranes, a Neohookean material has the normal Cauchy stresses:

$$\sigma_{11} = -P(J_{eff}) + \frac{G}{J_{eff}} \left(\frac{\lambda_1^2 + \lambda_2^2 \cos^2 \omega}{J_{res}^{2/3}} - 1 \right)$$
 (5.197)

$$\sigma_{22} = -P(J_{eff}) + \frac{G}{J_{eff}} \left(\frac{\lambda_2^2 \sin^2 \omega}{J_{res}^{2/3}} - 1 \right)$$
 (5.198)

$$\sigma_{33} = -P(J_{eff}) + \frac{G}{J_{eff}} \left(\frac{J^2}{J_{res}^{2/3} \lambda_1^2 \lambda_2^2 \sin^2 \omega} - 1 \right)$$
 (5.199)

$$\sigma_{12} = \frac{G}{J_{eff}} \frac{\lambda_2^2 \sin \omega \cos \omega}{J_{res}^{2/3}}$$
 (5.200)

where the $P(J_{eff})$ is the pressure model. The stress state is found by solving $\sigma_{33} = 0$ for J or solving:

$$-P(J_{eff}) = \frac{G}{J_{eff}} \left(1 - \frac{J^2}{J_{res}^{2/3} \lambda_1^2 \lambda_2^2 \sin^2 \omega} \right) \quad \text{or} \quad \frac{J_{eff} P(J_{eff})}{G} - \frac{J_{res}^{4/3} J_{eff}^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} + 1 = 0$$
 (5.201)

For two models, this can be solved analytically:

$$J_{eff} = \sqrt{\frac{\lambda + 2G}{\lambda + 2G \frac{J_{res}^{4/3}}{\lambda_1^2 \lambda_2^2 \sin^2 \omega}}} \quad \text{for } P(J_{eff}) = -\frac{\lambda}{2} \left(J_{eff} - \frac{1}{J_{eff}} \right)$$
 (5.202)

$$J_{eff} = \frac{1}{2} \left(\frac{1 + \sqrt{1 + \frac{4G}{\lambda} \left(1 + \frac{G}{\lambda} \frac{J_{res}^{4/3}}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right)}}{1 + \frac{G}{\lambda} \frac{J_{res}^{4/3}}{\lambda_1^2 \lambda_2^2 \sin^2 \omega}} \right) \quad \text{for } P(J_{eff}) = -\lambda \left(J_{eff} - 1 \right)$$
 (5.203)

Notice for incompressible $(\lambda \to \infty)$, undeformed $(J_{res}^{1/3} = \lambda_1 = \lambda_3 = \sin \omega = 1)$, and free thermal expansion $(J_{res}^{1/3} = \lambda_1 = \lambda_3 \text{ and } \sin \omega = 1)$ that $J_{eff} = 1$. The last model (with $J_{eff}P(J_{eff}) = -\lambda \ln J_{eff}$) must be solved numerically for J using Newton's method with:

$$f = J_{res}^{2/3} \lambda_1^2 \lambda_2^2 \sin^2 \omega (J_{eff} P(J_{eff})) + G(J_{res}^{2/3} \lambda_1^2 \lambda_2^2 \sin^2 \omega - J^2)$$
 (5.204)

$$= -\lambda J_{res}^{2/3} \lambda_1^2 \lambda_2^2 \sin^2 \omega (\ln J_{eff}) + G \left(J_{res}^{2/3} \lambda_1^2 \lambda_2^2 \sin^2 \omega - J^2 \right)$$
 (5.205)

$$\frac{df}{dJ} = \frac{\lambda_1^2 \lambda_2^2 \sin^2 \omega}{J_{res}^{1/3}} \frac{d(J_{eff} P(J_{eff}))}{dJ_{eff}} - 2GJ = -\frac{\lambda J_{res}^{2/3} \lambda_1^2 \lambda_2^2 \sin^2 \omega}{J} - 2GJ$$
 (5.206)

Given the solved J, the final Kirchhoff stress results are

$$\tau_{11} = J_{res}^{1/3} G \left(\lambda_1^2 + \lambda_2^2 \cos^2 \omega - \frac{J^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right)$$
 (5.207)

$$\tau_{22} = J_{res}^{1/3} G \left(\lambda_2^2 \sin^2 \omega - \frac{J^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right)$$
 (5.208)

$$\tau_{12} = J_{res}^{1/3} G \lambda_2^2 \sin \omega \cos \omega \tag{5.209}$$

and $\lambda_3 = J/(\lambda_1 \lambda_2 \sin \omega)$. Normally dynamic code cannot model an incompressible material, but a 3D incompressible membrane material can be modeled by setting $J = J_{res}$ and $J_{eff} = 1$ or:

$$\tau_{11} = J_{res}^{1/3} G \left(\lambda_1^2 + \lambda_2^2 \cos^2 \omega - \frac{J_{res}^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right)$$
 (5.210)

$$\tau_{22} = J_{res}^{1/3} G \left(\lambda_2^2 \sin^2 \omega - \frac{J_{res}^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right)$$
 (5.211)

$$\tau_{12} = J_{res}^{1/3} G \lambda_2^2 \sin \omega \cos \omega \tag{5.212}$$

and $\lambda_3 = J_{res}/(\lambda_1\lambda_2\sin\omega)$. Note that during free thermal expansion, $J_{res} = \lambda_1^3$, $\lambda_2 = \lambda_1$, $\cos\omega = 0$, and $\sin\omega = 1$ such that all stresses are zero.

5.9 Mie-Grüniesen Equation of State

The Mie-Grüniesen Equation of State defines the pressure only and the Cauchy pressure is

$$P = \frac{\rho_0 C_0^2 \eta \left(1 - \frac{1}{2} \gamma_0 \eta\right)}{\left(1 - S_1 \eta - S_2 \eta^2 - S_3 \eta^3\right)^2} + \rho_0 \gamma_0 U \tag{5.213}$$

where η is fraction compression and given by

$$\eta = 1 - \frac{\rho_0}{\rho} = 1 - \frac{V}{V_0} = 1 - J \tag{5.214}$$

and γ_0 , C_0 , and S_i are material properties and U is total internal energy. The above equation applies only in compression ($\eta > 0$). In tension, the pressure uses on of the Mooney-Rivlin pressure laws:

$$P = -\rho_0 C_0^2 (J_{eff} - 1) \tag{5.215}$$

The Kirchhoff pressure needed by MPM is

$$\frac{\tau}{\rho_0} = \frac{JP}{\rho_0} \tag{5.216}$$

This material model also causes a temperature change of

$$dT = -T\gamma_0 \frac{\rho_0}{\rho} \frac{V(t + \Delta t) - V(t)}{V} + \frac{dq}{C_v}$$
(5.217)

where dq is dissipated energy that is converted to heat. The first term simplifies to an isentropic temperature change of

$$dT_{dq=0} = -JT\gamma_0 \frac{V(t + \Delta t) - V(t)}{V}$$
 (5.218)

The volume change relative to current volume can be found from

$$\frac{V(t + \Delta t) - V(t)}{V(t + \Delta t)} = 1 - \frac{1}{|dF|}$$
 (5.219)

The temperature rise here, which is

$$dT_{dq=0} = -JT\gamma_0 \frac{\Delta V}{V} \qquad vs. \qquad dT_{dq=0} = -JT\frac{K}{K_0}\gamma_0 \frac{\Delta V}{V}$$
 (5.220)

from above. The result here differs by a factor (K/K_0) . In tension, this material uses the full law with $(K/K_0) = J_{eff}$. See Eq. (5.275) for comparable results in an ideal gas.

Noticing that

$$\frac{dT_{dq=0}}{T} = \gamma_0 d\eta \tag{5.221}$$

The temperature due to isoentropic heating alone can be integrated to

$$T = T_0 \exp(\gamma_0 \eta) \tag{5.222}$$

Thus the total temperature rise (assuming C_{ν} is constant) is

$$dT = T_0(\exp(\gamma_0 \eta) - 1) + \frac{\Phi}{C_v}$$
 (5.223)

where Φ is the cumulative dissipated energy due to plasticity.

Rather then calculate temperature changes, which are needed for internal energy, NairnMPM/OS-Particulas tracks total work, w, and heat, q, to find internal energy as U = w + q. The details are given above in the section on "Thermodynamics of Deformation."

In compression, J is physically limited to be between 0 and 1, which means η is also between 0 and 1. But for most materials that have been fit to this equation of state, the denominator in pressure might become zero before η reaches 1. For example, Tungsten has $S_1=1.24$ and $S_2=S_3=0$. The denominator becomes zero when

$$\eta = 1/1.24 = 0.806 \tag{5.224}$$

If the time step is too large in dynamic code, the compression could potentially pass this value. If that happens for any particle, the results will likely be poor. To avoid this situation, NairnMPM/OSParticulas prevents it. In compression, bulk modulus should monotonically increase. When compression strain is too high for given material parameters, the incremental bulk modulus may decrease or become negative. NairnMPM/OSParticulas prevents decreasing or negative bulk modulus by limiting bulk modulus to the peak value determined by the parameters or to a user-input maximum increase (Kmax with default of $20*K_0$), whichever is lower. A warning is printed the first time the compression reaches the limiting value.

5.9.1 Residual Stresses

This equation of state has no thermal expansion coefficient, but thermal expansion occurs naturally with proper tracking of heat flow and temperature. The volumetric thermal expansion coefficient from input properties is:

$$3\alpha = \frac{\rho_0 \gamma_0 C_{\nu}}{K_0} \qquad \text{or} \qquad \gamma_0 = \frac{3K_0 \alpha}{\rho_0 C_{\nu}}$$
 (5.225)

which is same as defined above in Eq. (4.11).

Under free thermal expansion, $U = C_v \Delta T$. In small strain compression

$$P = -K_0 \frac{\Delta V}{V_0} + 3K_0 \alpha \Delta T \tag{5.226}$$

and for free thermal expansion, P = 0 which leads to

$$\frac{\Delta V}{V_0} = 3\alpha \Delta T \tag{5.227}$$

This volume change is the expected volume change for free thermal expansion.

5.10 Isotropic Hyperelastic-Plastic Material

The HEIsotropic material is an anisotropic material with plasticity. The elastic part of this material uses the Mooney-Rivlin material but restricts it to $G_2 = 0$ (i.e., a neo-Hookean material). For 3D (with plane strain and axisymmetry as easy special cases, but plane stress not handled), the Kirchhoff stress update, including residual stresses is is

$$P = JP(J_{eff}) (5.228)$$

$$s_{xx}^{trial} = \frac{J_{res}G_1}{3J^{2/3}} \left(2B_{xx}^{trial} - B_{yy}^{trial} - B_{zz}^{trial} \right)$$
 (5.229)

$$s_{yy}^{trial} = \frac{J_{res}G_1}{3J^{2/3}} \left(2B_{yy}^{trial} - B_{xx}^{trial} - B_{zz}^{trial} \right)$$
 (5.230)

$$s_{zz}^{trial} = \frac{J_{res}G_1}{3J^{2/3}} \left(2B_{zz}^{trial} - B_{xx}^{trial} - B_{yy}^{trial} \right)$$
 (5.231)

$$s_{ij}^{trial} = \frac{J_{res}G_1}{J^{2/3}}B_{ij}^{trial} \quad \text{for } i \neq j$$
 (5.232)

where $P(J_{eff})$ is any hyperelaastic pressure model, J is relative volume change, J_{res} is the volume change related to residual stresses, and $J_{eff} = J/J_{res}$. Here the deviatoric Kirchoff stresses are trial stresses based on trial, elastic, left Cauchy-Green strain in \mathbf{B}^{trial} . This material tracks the elastic \mathbf{B} . At the start of the update, \mathbf{B}^{trial} is found from:

$$\mathbf{B}_{n+1}^{trial} = \mathbf{dFB}_n \mathbf{dF}^T \tag{5.233}$$

where dF is the incremental deformation gradient for this time step and B_n is the elastic B from previous step. Notice that the deviatoric Kirchoff stresses can be rewritten more concisely as

$$\mathbf{s} = J_{res}G_1 \text{dev}\,\overline{\mathbf{B}} \tag{5.234}$$

where $\overline{\mathbf{B}} = \mathbf{B}/J^{2/3}$.

The yielding criterion is handled by methods nearly identical to J_2 plasticity for isotropic materials (and can use any available hardening law). The first step is to find

$$f_{trial} = \|\mathbf{s}\| - \sqrt{\frac{2}{3}}K(\alpha) \tag{5.235}$$

if \mathbf{f}_{trial} is less than zero, the trial stresses and \mathbf{B}_{n+1}^{trial} are copied to the particle and the update is done. If yielding is occurring, the task is to solve for λ such that f=0 and thereby determine the amount of yielding. The key equations for final results are:

$$\mathbf{B} = \mathbf{B}^{trial} - \frac{2}{3}\lambda \overline{I_1} \mathbf{n} \tag{5.236}$$

$$\mathbf{s} = \mathbf{s}^{trial} - 2\lambda \left(\frac{J_{res}G\overline{I_1}}{3} \right) \mathbf{n}$$
 (5.237)

$$\|\mathbf{s}\| = \|\mathbf{s}^{trial}\| - 2\lambda \left(\frac{J_{res}G\overline{I_1}}{3}\right)$$
 (5.238)

where \mathbf{n} is normal defined from deviatoric stress tensor and

$$\overline{I_1} = \frac{B_{xx} + B_{yy} + B_{zz}}{J^{2/3}} \tag{5.239}$$

5.11. IDEAL GAS 71

Notice that the updates for the deviatoric stress and its magnitude are identical to low-strain J_2 plasticity theory provided we replace shear modulus G in that theory with $\overline{\mu}$ defined by

$$\overline{\mu} = \frac{J_{res}G\overline{I_1}}{3} \tag{5.240}$$

After this substitution, any hardening law available in the code can solve for plasticity in this hyperelastic material as well (this mapping relies on constitutive law in Eq. (5.234) and therefore is specific to this material model). This modification works for plane strain, axisymmetric, and 3D, but not for plane stress, because J_2 plane stress analysis makes use of low-strain constitutive laws. For this reason, the HEIsotropic material cannot do plane stress calculations. Once the hardening law finds λ , the above equations are used to update $\bf s$ and $\bf B$ on the particle.

5.11 Ideal Gas

The ideal gas material implements ideal gas law as a large deformation, hyperelastic material. It seems to work well for gas confined within a solid or constrained by rigid particles. It does not handle gas dynamics such as irreversible free expansion, but does handle reversible processes including coupled conversion of energy into heat (*i.e.*, cooling on expansion and heating on compression).

The ideal gas law is

$$PV = nRT (5.241)$$

The ideal gas properties are defined by picking any reference pressure, P_0 , reference temperature, T_0 , and reference density, ρ_0 . If M is the molecular weight of the gas molecules, the reference density can be found from:

$$\rho_0 = \frac{P_0}{T_0} \frac{M}{R} \tag{5.242}$$

We can now eliminate n and R to derive

$$P = P_0 \frac{V_0}{V} \frac{T}{T_0} = P_0 \frac{T}{T_0} \frac{1}{J}$$
 (5.243)

where $J = \det \mathbf{F} = V/V_0$. The Cauchy stress due to this pressure is $-P\mathbf{I}$, which implies hyperelastic energy function determined from:

$$\boldsymbol{\sigma} = -P_0 \frac{T}{T_0} \frac{1}{J} \mathbf{I} = \frac{dU(J)}{dJ} \mathbf{I} \qquad \text{or} \qquad U(J) = -P_i \ln J$$
 (5.244)

where $P_i = P_0 T / T_0$ is the initial pressure (when J = 1). This energy is equal to the energy per unit initial volume for isothermal compression or expansion of an ideal gas:

$$U(J) = -\frac{1}{V_0} \int_{V_0}^{V} P \, dV = -\frac{P_0 T}{T_0} \int_{V_0}^{V} \frac{1}{V} \, dV = -P_i \ln \frac{V}{V_0} = -P_i \ln J$$
 (5.245)

For MPM calculations, the code needs a specific Kirchoff stress normalized to ho_0 or

$$\tau^{(s)} = -\frac{PJ}{\rho_0} \mathbf{I} = -\frac{P_0}{\rho_0} \frac{T}{T_0} \mathbf{I}$$
 (5.246)

In coding, an incremental approach is preferred. If $\tau_n^{(s)}$ is any diagonal element of the specific Kirchoff stress tensor for time step n, then

$$\tau_{n+1}^{(s)} = -\frac{P_0}{\rho_0} \frac{T_{n+1}}{T_0} = -\frac{P_0}{\rho_0} \frac{T_n}{T_0} \frac{T_{n+1}}{T_n} = \tau_n^{(s)} \frac{T_{n+1}}{T_n}$$
(5.247)

Note that the Kirchoff stress remains constant for isothermal expansion and compression.

The energy increment associated with this stress change is dU = -P dV work. The energy per unit mass using midpoint rule between initial and final pressure is therefore

$$\frac{dU}{\rho_0 V_0} = -\frac{1}{2} \frac{P_n + P_{n+1}}{\rho_0} \frac{V_{n+1} - V_n}{V_0} = -\frac{1}{2} \frac{P_n + P_{n+1}}{\rho_0} \frac{V_{n+1}}{V_0} \left(1 - \frac{V_n}{V_{n+1}} \right)$$
(5.248)

Let deformation gradient for step n + 1 be

$$\mathbf{F}_{n+1} = \mathbf{f} \cdot \mathbf{F}_n$$
 where $\mathbf{f} = \exp(\Delta t \nabla v)$ and $J_{n+1} = \det \mathbf{f} J_n$ (5.249)

which leads to

$$\frac{dU}{\rho_0 V_0} = -\frac{J_{n+1}}{2} \frac{P_n + P_{n+1}}{\rho_0} \left(1 - \frac{1}{\det f} \right) = -\frac{1}{2} \left(\frac{P_n}{\rho_n} \det f + \frac{P_{n+1}}{\rho_{n+1}} \right) \left(1 - \frac{1}{\det f} \right)$$
(5.250)

But, P/ρ is $-\tau^{(s)}$ leading to

$$\frac{dU}{\rho_0 V_0} = \frac{1}{2} \left(\tau_n^{(s)} \det f + \tau_{n+1}^{(s)} \right) \left(1 - \frac{1}{\det f} \right)$$
 (5.251)

When gas particles are present, they have to be initialized to the pressure (or stress) of

$$\tau_i^{(s)} = -\frac{P_i}{\rho_0} = -\frac{P_0}{\rho_0} \frac{T}{T_0} \tag{5.252}$$

where *T* is the simulation reference temperature (need not be the gas reference temperature, which can be any desired reference condition). All simulations with gas particles must therefore specify a reference temperature in degrees Kelvin.

This material always needs heat capacity and needs thermal conductivity when doing conduction. Heat capacity is calculated using ideal gas law theory $(C_v = (3/2)nR/(\rho_0V_0))$ for monotonic gas and $C_v = (5/2)nR/(\rho_0V_0)$ for diatomic gas in J/(kg-K)). To find heat capacity from input parameters, substitute $nR = P_0V_0/T_0$ at reference conditions to get

$$C_{\nu} = \frac{3}{2} \frac{P_0}{\rho_0 T_0} \tag{5.253}$$

for monatomic gas (or replace 3/2 with 5/2 for diatomic gas). For conduction, the current code assumes conductivity is a temperature-independent property (as entered), although conductivity of a gas does vary with temperature. If simulations with large temperature changes of the gas are important, this material will need to be improved to allow temperature-dependent thermal conductivity.

For wave speed calculations, the bulk modulus for adiabatic conditions is

$$K = -\frac{\frac{V}{V_0}}{\frac{d(V/V_0)}{dP}} = \gamma P = \frac{\gamma \rho RT}{M}$$
(5.254)

In terms of defined material properties, the wave speed reduces to

$$C = \sqrt{\frac{K}{\rho}} = \sqrt{\frac{5\rho_0 P_0 T}{3T_0}} \tag{5.255}$$

where T is particle temperature.

73 5.11. IDEAL GAS

5.11.1 **Verification Examples**

A simple gas problem is to confine all sides by rigid particles and move one wall for compression or expansion. If the movable wall is in the *x* direction, the volume will be $V = V_0(1 + \varepsilon_{xx})$. For isothermal compression and expansion:

$$P = \frac{P_i}{1 + \varepsilon_{xx}}$$

$$U = 0$$

$$(5.256)$$

$$U = 0 (5.257)$$

$$w = -P_i V_0 \ln(1 + \varepsilon_{xx})$$

$$q = -w$$

$$(5.258)$$

$$q = -w (5.259)$$

$$S = nR \ln(1 + \varepsilon_{xx}) = \frac{P_0 V_0}{T_0} \ln(1 + \varepsilon_{xx})$$
 (5.260)

For adiabatic compression and expansion

$$P = \frac{P_i}{(1 + \varepsilon_{xx})^{\gamma}} \tag{5.261}$$

$$T = \frac{T_i}{(1 + \varepsilon_{xx})^{\gamma - 1}} \tag{5.262}$$

$$U = C_{\nu}(T - T_i) = \frac{3P_0V_0}{2T_0}T_i\left(\frac{1}{(1 + \varepsilon_{\nu\nu})^{\gamma - 1}} - 1\right)$$
 (5.263)

$$w = U (5.264)$$

$$q = 0 (5.265)$$

$$S = -(\gamma - 1)C_{\nu} \ln(1 + \varepsilon_{xx}) + \frac{P_0 V_0}{T_0} \ln(1 + \varepsilon_{xx}) = 0$$
 (5.266)

where $\gamma = C_P/C_v = 5/3$ for monotonic gas or $\gamma = 7/5$ for diatomic. An undocumented custom task in NairnMPM can subject an ideal gas to a Carnot cycle and recover an efficiency close to the theoretical maximum of:

$$\eta = 1 - \frac{T_2}{T_1} \tag{5.267}$$

where T_1 is the hot reservoir and T_2 is the cold one.

5.11.2 Isothermal vs. Adiabatic vs. General Constitutive Law

Equation (5.243) can be rewritten as an increment in pressure from initial pressure P_0 at temperature T_0 :

$$P - P_0 = \kappa_0 \left[\left(\frac{J_{res}}{J} \right) - 1 \right] \tag{5.268}$$

where κ_0 is the bulk modulus at P_0 :

$$\frac{1}{\kappa_0} = -\frac{1}{V_0} \left(\frac{\partial V_0}{\partial P} \right)_T = \frac{1}{P_0} \tag{5.269}$$

and

$$J = \frac{V(P,T)}{V(P_0,T_0)} = \frac{V}{V_0}$$
 and $J_{res} = \frac{V(P_0,T)}{V(P_0,T_0)} = \frac{T}{T_0}$ (5.270)

Here J_{res} is the volume ratio for free thermal expansion at reference pressure P_0 . For an isothermal process $J_{res} = 1$. For a (reversible) adiabatic compression or expansion, the temperature change is:

$$T = \frac{T_0}{J^{\gamma - 1}}$$
 and $J_{res} = \frac{1}{J^{\gamma - 1}}$ (5.271)

Two special cases of the general law, therefore, are:

$$P - P_0 = \kappa_0 \left[\left(\frac{1}{J} \right) - 1 \right]$$
 isothermal (5.272)

$$P - P_0 = \kappa_0 \left[\left(\frac{1}{J} \right)^{\gamma} - 1 \right] \quad \text{adiabatic}$$
 (5.273)

But if code implements either of these laws, it will be restricted to either isothermal or adiabatic conditions only. The preferred approach is to implement the general law because it includes both these limits as special cases and can be used for nonisothermal, nonadiabatic simulations as well. When using a general law, however, each material point must correctly change its temperature according to how much energy should be converted into heat for a given increment in deformation. For an ideal case undergoing in increment in volume of dV, the temperature change is

$$dT = -\frac{PdV}{C_{v}} = -\frac{nRT}{C_{v}}\frac{dV}{V} = -\frac{nRT}{C_{v}}\frac{\rho}{\rho_{0}}\frac{dV}{V_{0}}$$
 (5.274)

In other words, all the work is converted into heat. Also notice that this result can be written

$$\frac{dT}{T} = \frac{nR}{C_v} \frac{1}{J} d\eta = \frac{\gamma_0}{J} d\eta = -\gamma_0 \frac{dJ}{J} \quad \text{where} \quad \eta = 1 - \frac{\rho_0}{\rho} = 1 - J \quad (5.275)$$

For a monatoic ideal gas $\gamma_0 = 2/3$; for a diatomic gas $\gamma_0 = 2/5$; for both $\gamma_0 = \gamma - 1$. This result is identical to the Mie-Grüniesen theory in Eq. (5.220) by using K = P, $3\alpha = 1/T$ and $C_v = (3/2)nR/(\rho V)$ (or 5/2 for diatomic gas).

5.11.3 Van der Waals Gas Law

The van der Wasls gas material implements a non-ideal gas law as a large deformation, hyperelastic material. It seems to work well for gas confined within a solid or constrained by rigid particles. It does not handle gas dynamics such as irreversible free expansion, but does handle reversible processes including coupled conversion of energy into heat (*i.e.*, cooling on expansion and heating on compression).

The van der Wasls gas law is

$$\left(P - \frac{an^2}{V^2}\right) \left(\frac{V}{n} - b\right) = RT$$
(5.276)

The nonideal gas properties are defined by picking any reference pressure, P_0 , reference temperature, T_0 , and reference density, ρ_0 , along with a and b. The law can then be transformed to pressure of

$$P = (P_0 - a') \left(\frac{1 - b'}{J - b'}\right) \frac{T}{T_0} + \frac{a'}{J^2}$$
 (5.277)

where $J = V/V_0$, V_0 is initial particle volume, $a' = an^2/V_0^2$, and $b' = nbV_0$. Writing P = -dU(J)/dJ implies a hyperelastic energy function of

$$U(J) = -\left[(P_i - a')(1 - b')\ln(J - b') - \frac{a'}{J} \right]$$
 (5.278)

where P_i is the initial particle pressure (when J = 1) of

$$P_i = (P_0 - a')\frac{T}{T_0} + a' \tag{5.279}$$

This energy is equal to the energy per unit initial volume for isothermal compression or expansion of a van der Waals gas:

$$U(J) = -\frac{1}{V_0} \int_{V_0}^{V} P \, dV = -\int_{1}^{J} \left(\left(P_i - a' \right) \left(\frac{1 - b'}{J - b'} \right) + \frac{a'}{J^2} \right) dJ \tag{5.280}$$

In NairnMPM, the cumulative work is tracked in the particle's plastic energy (which is = PdV work and can tracked the same as for an ideal gas). The particle's strain energy tracks total internal energy in the gas per unit mass, which for a van der Waals gas is

$$U = C_{\nu}(T - T_0) - \frac{a'}{\rho_0 J}$$
 (5.281)

In hyperelastic code, an incremental form is

$$dU = C_{\nu}dT + \frac{a'}{\rho_0 J^2}dJ {(5.282)}$$

For a van der Waals gas, the heat capacity is same as for ideal gas, $C_v = (3/2)nR/(\rho_0 V_0)$ for monatomic (or 5/2 for diatomic gas), but the n is found differently from reference conditions. It can be found as root to

$$\frac{ab}{V_0^2}n^3 - \frac{a}{V_0}n^2 - (P_0b + RT_0)n + P_0V_0 = 0$$
 (5.283)

This *n* is needed to find a', b' and C_v .

5.12 Disney Snow Model

According to a paper on Disney snow animation, MPM was used to model snow in the movie *Frozen*. The constitutive model for snow was based on a hyperelastic-plastic model. The strain energy function is

$$W = G(J_P)||\mathbf{F}_E - \mathbf{R}_E||_F^2 + \frac{\lambda(J_P)}{2}(J_E - 1)^2$$
(5.284)

where $G(J_P)$ and $\lambda(J_P)$ are shear and Lamé moduli and J_P is the plastic dilation, The mechanical properties undergo hardening according to

$$G(J_p) = G_0 e^{\xi(1 - J_p)}$$
 and $\lambda(J_p) = \lambda_0 e^{\xi(1 - J_p)}$ (5.285)

where ξ is a hardening parameter and μ_0 and λ_0 are the initial Lamé coefficients. Note the plastic stretch ($J_P > 1$) causing softening that leads to contitutitive law-based fracture. The \mathbf{F}_E , R_E , and J_E in strain energy are for the elastic part of the loading. The first term, which is Frobenius norm squared of a matrix, can be written as

$$||\mathbf{F} - \mathbf{R}||_F^2 = \operatorname{Tr}((\mathbf{F} - \mathbf{R})^T (\mathbf{F} - \mathbf{R})) = \operatorname{Tr}((\mathbf{U} - \mathbf{I})^T R^T R (\mathbf{U} - \mathbf{I})) = ||\mathbf{U} - \mathbf{I}||_F^2$$
(5.286)

$$= ||Q^{T}(\Lambda - \mathbf{I})Q||_{F}^{2} = ||\Lambda - \mathbf{I}||_{F}^{2} = (\lambda_{1} - 1)^{2} + (\lambda_{2} - 1)^{2} + (\lambda_{3} - 1)^{2}$$
 (5.287)

The energy function is more practically written as

$$W(\lambda_1, \lambda_2, \lambda_3) = G(J_P) \sum_{i} (\lambda_i - 1)^2 + \frac{\lambda(J_P)}{2} (\lambda_1 \lambda_2 \lambda_3 - 1)^2$$
 (5.288)

where λ_i are the stretches of the elastic part of the deformation. The Cauchy stress and pressure are

$$\boldsymbol{\sigma} = \sum_{k} \left(\frac{2G(J_p)}{J_E} \lambda_k (\lambda_k - 1) + \lambda (J_p) (J_E - 1) \right) \boldsymbol{b}_k \otimes \boldsymbol{b}_k$$
 (5.289)

$$P = -\lambda(J_p)(J_E - 1) - \frac{2G(J_P)}{3J_E} (\lambda_1^2 + \lambda_2^2 + \lambda_3^2 - \lambda_1 - \lambda_2 - \lambda_3)$$
 (5.290)

To account for residual stress, replace J_E by J_E/J_{res} and λ_k by λ_k/λ_{res} .

This material clamps the elongations to a range of $[1-\theta_c, 1+\theta_s]$ where θ_c and θ_s are critical strains in compression and tension, respectively. The material is implemented as follows:

1. Track total **F** and elastic **B** on the particles and track J and J_P as two history variables. On each time step, update **F** and J and find a trial elastic **B**:

$$\mathbf{F}_{n+1} = d\mathbf{F}\mathbf{F}_n, \quad J_{n+1} = |d\mathbf{F}|J_n, \quad \text{and} \quad \mathbf{B}_{n+1}^{trial} = d\mathbf{F}\mathbf{B}_n d\mathbf{F}^T$$
 (5.291)

- 2. Find eigenvalues and eigenvectors of \mathbf{B}_{n+1}^{trial} as $(\lambda_{1,trial}^2, \lambda_{2,trial}^2, \lambda_{2,trial})$ and the matrix Q with eigenvectors on the columns.
- 3. If all $\lambda_{i,trial}^2$ are within the range $[(1-\theta_c)^2,(1+\theta_s)^2]$, then $\mathbf{B}_{n+1}=\mathbf{B}_{n+1}^{trial},J_P$ is unchanged, and $J_E=J_{n+1}/J_P$.
- 4. If any $\lambda_{i,trial}^2$ exceeds the range, clamp them to that range and find $\mathbf{B}_{n+1} = \mathsf{Q}^T \Lambda \mathsf{Q}$ where Λ is diagonal matrix with the clamped values of λ_i on the diagonal, $J_E = \lambda_1 \lambda_2 \lambda_3$, and update J_P to $J_P = J/J_E$.
- 5. Calculate new mechanical properties $\lambda(J_p)$ and $G(J_p)$.
- 6. Find the Kirchoff stress from $\tau = J\sigma(\mathbf{B}_{n+1})$. Here J is total J and the stress depends only on elastic \mathbf{B}_{n+1} (and its determinant, eigenvalues, and eigenvectors).

5.12.1 Deformation Examples

This material is not commonly documented in the literature on large deformation materials. Here are some special case deformation examples. For uniform dilation ($\lambda_i = 1 + \varepsilon$, and eigenvectors = \hat{x} , \hat{y} , and \hat{z}) the pressure is:

$$P = -\left[\lambda(J_p)\left(1 + \varepsilon + \frac{1}{3}\varepsilon^2\right) - \frac{2G(J_p)}{3(1 + \varepsilon)^2}\right] 3\varepsilon$$
 (5.292)

For small ε , this result reduces to

$$P = -\left(\lambda(J_p) + \frac{2G(J_p)}{3}\right) 3\varepsilon = -K\frac{\Delta V}{V}$$
 (5.293)

as expected for small-strain, isotropic materials.

5.13. TAIT LIQUID 77

For constrained, uniaxial tension ($\lambda_1 = 1 + \varepsilon$, $\lambda_2 = \lambda_3 = 1$, and eigenvectors = \hat{x} , \hat{y} , and \hat{z}):

$$\sigma_{xx} = (\lambda(J_p) + 2G(J_p))\varepsilon$$
 and $\sigma_{yy} = \sigma_{zz} = \lambda(J_p)\varepsilon$ (5.294)

This result is the same as for small-strain, isotropic materials (i.e., linear at all deformations and a weakness of this material).

For linear shear ($F_{ii} = 1$. $F_{xy} = \gamma$, rest zero, and J = 1), the eigenvalues and eigenvectors of **B** are

$$\lambda_1^2 = \frac{1}{2} \left(2 + \gamma^2 + \gamma \sqrt{4 + \gamma^2} \right) \tag{5.295}$$

$$\lambda_2^2 = \frac{1}{2} \left(2 + \gamma^2 - \gamma \sqrt{4 + \gamma^2} \right) \tag{5.296}$$

$$\lambda_3^2 = 1 \tag{5.297}$$

$$b_1 = \frac{1}{\sqrt{1 + \frac{1}{4} (\gamma + \sqrt{4 + \gamma^2})^2}} \left(\frac{1}{2} (\gamma + \sqrt{4 + \gamma^2}), 1, 0 \right)$$
 (5.298)

$$b_2 = \frac{1}{\sqrt{1 + \frac{1}{4} \left(\gamma + \sqrt{4 - \gamma^2} \right)^2}} \left(\frac{1}{2} \left(\gamma - \sqrt{4 + \gamma^2} \right), 1, 0 \right)$$
 (5.299)

$$b_3 = (0,0,1) (5.300)$$

The Cauchy stress reduces to

$$\sigma = 2G(J_P)(\lambda_1(\lambda_1 - 1)\boldsymbol{b}_1 \otimes \boldsymbol{b}_1 + \lambda_2(\lambda_2 - 1)\boldsymbol{b}_2 \otimes \boldsymbol{b}_2)$$
(5.301)

The algebra is messy. With the help of Mathematica, the stress terms reduce too

$$\sigma_{xx} = G(J_P) \left(2(1+\gamma^2) + \frac{k_1(\gamma - \sqrt{4+\gamma^2}) - k_2(\gamma + \sqrt{4+\gamma^2})}{\sqrt{8+2\gamma^2}} \right)$$
 (5.302)

$$\sigma_{yy} = G(J_P) \left(2 - \frac{k_1(\gamma + \sqrt{4 + \gamma^2}) - k_2(\gamma - \sqrt{4 + \gamma^2})}{\sqrt{8 + 2\gamma^2}} \right)$$
 (5.303)

$$\tau_{xy} = 2G(J_P) \left(\gamma + \frac{k_1 - k_2}{\sqrt{8 + 2\gamma^2}} \right)$$
 (5.304)

$$\sigma_{zz} = 0 \tag{5.305}$$

where

$$k_1 = \sqrt{2 + \gamma^2 - \gamma \sqrt{4 + \gamma^2}}$$
 and $k_2 = \sqrt{2 + \gamma^2 + \gamma \sqrt{4 + \gamma^2}}$ (5.306)

Expanding in γ and keeping only linear terms reduces to small strain result of $\tau_{xy} = G\gamma$ with all other stresses zero.

5.13 Tait Liquid

The Tait liquid uses the Tait equation for the pressure response and assumes the shear term follows Newtonian viscosity. The Tait equation for volume of a liquid at any temperature and pressure is:

$$V(P,T) = V(0,T) \left[1 - C \ln \left(1 + \frac{P}{B(T)} \right) \right]$$
 (5.307)

where C = 0.894 is the universal Tait constant. The volume is expressed in terms of the zero pressure volume, which can be fit (for a given liquid) to various equations. Two common approaches are

$$V(0,T) = A_0 + A_1 T + A_2 T^2 + \cdots (5.308)$$

$$V(0,T) = V(0,T_0)e^{\beta(T-T_0)}$$
(5.309)

The first is simply a polynomial fit to volume data with fitting parameters A_i . The second assumes constant volumetric thermal expansion coefficient (β) around some reference temperature T_0 . NairnMPM uses the second fit where $V(0, T_0)$ is found from input density, T_0 is from stress free temperature, and $\beta = 3\alpha$. A common fit for B(T) is

$$B(T) = B_0 e^{-B_1 T} (5.310)$$

Note that bulk modulus from the Tait equation is

$$\frac{1}{K(P,T)} = -\frac{1}{V} \left(\frac{dV}{dP} \right)_T = \frac{C}{P + B(T)} \frac{1}{\left[1 - C \ln\left(1 + \frac{P}{B(T)}\right) \right]} = \frac{C}{P + B(T)} \frac{V(P,T)}{V(0,T)}$$
(5.311)

which shows that B(T) is proportional to the temperature dependence of the zero-pressure bulk modulus:

$$B(T) = CK(0, T) (5.312)$$

NairnMPM currently assumes temperature independent bulk modulus or assumes $B_1 = 0$. The pressure dependence to the thermal expansion coefficient is

$$\beta(P,T) = \frac{1}{V} \left(\frac{dV}{dT} \right)_P = \beta(0,T) - \frac{PB_1}{K(P,T)}$$
 (5.313)

When bulk modulus is independent of temperature ($B_1 = 0$), the thermal expansion coefficient is independent of pressure.

For implementation as a hyperelastic material, we define

$$J = \frac{V(P,T)}{V(0,T_0)}$$
 and $J_{res} = \frac{V(0,T)}{V(0,T_0)} = e^{\beta_0(T-T_0)}$ (5.314)

as relative volumes. The constitutive law is rewritten as

$$\frac{J}{J_{res}} = 1 - C \ln \left(1 + \frac{P}{CK_0} \right) \tag{5.315}$$

where K_0 is the zero-pressure bulk modulus. This equation can be solved for pressure:

$$P = CK_0 \left[\exp\left(\frac{1 - J^*}{C}\right) - 1 \right] \tag{5.316}$$

where $J^* = J/J_{res}$. This material is equivalent to a hyperelastic material with volumetric strain energy function of

$$U(J^*) = CK_0 \left[C \exp\left(\frac{1 - J^*}{C}\right) + J^* \right]$$
 (5.317)

This energy function equals the energy per unit initial volume for isothermal compression or expansion of a Tait liquid.

For shear stress calculations, this material is assumed to be a Newtonian fluid, which means that the shear stress is proportional to deviatoric, symmetrized velocity gradient:

$$\tau = \eta \left(\nabla \mathbf{v} + \nabla \mathbf{v}^T - \frac{2}{3} \text{Tr}(\nabla \mathbf{v}) \mathbf{I} \right)$$
 (5.318)

5.13. TAIT LIQUID 79

where $\nabla \mathbf{v}$ is the velocity gradient and η is the viscosity. The total stress is given by $\sigma = -P\mathbf{I} + \tau$.

When the low-pressure bulk modulus is independent of temperature, the pressure dependent bulk modulus is

 $K(P,T) = \frac{P + CK_0}{C}J^* = K_0 \exp\left(\frac{1 - J^*}{C}\right)J^*$ (5.319)

This results can be used to adjust time step as a function of current pressure. An incremental pressure law can be derived from dP/dJ^* to get

$$dP = -K_0 \exp\left(\frac{1 - J^*}{C}\right) dJ^* = -K(P, T) d \ln J^* = -K(P, T) \ln dJ^*$$
 (5.320)

Chapter 6

Viscoelastic Materials

6.1 Introduction

The stress-strain relation for an isotropic viscoelastic material in which bulk modulus is independent of time, but shear modulus depends on time and the analysis is 3D (or plane strain by setting $\varepsilon_{zz}=0$ and ignoring τ_{xz} and τ_{yz} or axisymmetric by ignoring τ_{xz} and τ_{yz}) can be written as

$$P = -K(\varepsilon_{xx} + \varepsilon_{yy} + \varepsilon_{zz} - 3\varepsilon^{(res)})$$
 (6.1)

$$s_{ij} = \int_0^t 2G(t-\tau) \frac{de_{xy}}{d\tau} d\tau \tag{6.2}$$

where P is pressure, $s_{ij} = \sigma_{ij} + \delta_{ij}P$ and $e_{ij} = \varepsilon_{ij} - (\delta_{ij}/3)\text{Tr}(\varepsilon)$ are elements of the deviatoric stress and strain tensors, and $\varepsilon^{(res)} = \alpha \Delta T + \beta \Delta c$. The pressure is straightforward, but the deviatoric stress terms require more work. The only form of G(t) the permits efficient evaluation of all strain history effects is when it is a sum of exponentials or

$$G(t) = G_0 + \sum_{k=1}^{n} G_k e^{-t/\tau_k}$$
(6.3)

Each element of deviatoric stress (with e(0) = 0) becomes:

$$s = 2G_0 e(t) + \sum_{k=1}^{n} 2G_k \int_0^t e^{-(t-\tau)/\tau_k} \frac{de(\tau)}{d\tau} d\tau$$
 (6.4)

where subscripts ij on s and e have been dropped for simplicity,

6.2 Small Strain, Internal Variables Analysis

Following Simo and Hughes, we introduce the internal variables, α_k (with implied subscript ij for each component of stress), that satisfy

$$\frac{d\alpha_k}{dt} + \frac{\alpha_k}{\tau_k} = \frac{e(t)}{\tau_k} \tag{6.5}$$

This first order differential equations (with $\alpha_k(0) = 0$) can be solved and integrated by parts to get

$$\alpha_{k} = \int_{0}^{t} e^{-(t-\tau)/\tau_{k}} \frac{e(\tau)}{\tau_{k}} d\tau = e(t) - \int_{0}^{t} e^{-(t-\tau)/\tau_{k}} \frac{de(\tau)}{d\tau} d\tau$$
 (6.6)

Substitution into stress give

$$\frac{s(t)}{2} = G_0 e(t) + \sum_{k=1}^{n} G_k(e(t) - \alpha_k) = G_e e(t) - \sum_{k=1}^{n} G_k \alpha_k$$
(6.7)

where

$$G_e = \sum_{k=0}^{n} G_k (6.8)$$

is the modulus at t=0. In numerical implementation, the internal variable increment, $d\alpha_k = \alpha_k(t+\Delta t) - \alpha_k(t)$, can be found from

$$d\alpha_k = e^{-\Delta t/\tau_k} \int_0^{t+\Delta t} e^{-(t-\tau)/\tau_k} \frac{e(\tau)}{\tau_k} d\tau - \int_0^t e^{-(t-\tau)/\tau_k} \frac{e(\tau)}{\tau_k} d\tau$$
 (6.9)

$$= \left(e^{-\Delta t/\tau_k} - 1\right) \alpha_k(t) + e^{-\Delta t/\tau_k} \int_t^{t+\Delta t} e^{-(t-\tau)/\tau_k} \frac{e(\tau)}{\tau_k} d\tau \tag{6.10}$$

Evaluating the second term by midpoint rule gives

$$d\alpha_k = \left(e^{-\Delta t/\tau_k} - 1\right)\alpha_k(t) + \frac{\Delta t}{2\tau_k}\left(e(t + \Delta t) + e^{-\Delta t/\tau_k}e(t)\right)$$
(6.11)

$$= \left(e^{-\Delta t/\tau_k} - 1\right) \alpha_k(t) + \frac{\Delta t}{2\tau_k} \left(\left(e^{-\Delta t/\tau_k} + 1\right) e(t) + de\right) \tag{6.12}$$

where de is the increment in deviatoric strain in the time step. Note that α_k can be updated on each time step without needing a sum of strain history, thereby avoiding the need to store strain history. This ability to track strain history without storing strain history is only possible because of properties of exponentials used in G(t).

6.3 Final, Small Strain, Incremental Results

The pressure change is

$$dP = -K(d\varepsilon_{rr} + d\varepsilon_{rr} + d\varepsilon_{rr} + d\varepsilon_{rr} + d\varepsilon_{rr} - 3d\varepsilon^{(res)})$$
(6.13)

The deviatoric stress updates using

$$ds_{ij} = 2\left(G_e de_{ij} - \sum_{k=1}^n G_k d\alpha_{ij,k}\right)$$

$$\tag{6.14}$$

where $d\alpha_{ij,k}$ is the ij^{th} element of $d\alpha_k$. The dissipated energy (by midpoint rule) is

$$\Phi = \sum_{ij} \sum_{k=1}^{n} 2G_k(e_{ij}(t) - \alpha_{ij,k}) d\alpha_{ij,k} = \sum_{ij} \sum_{k=1}^{n} 2G_k \left(e_{ij} + \frac{de_{ij}}{2} - \alpha_{ij,k} + \frac{d\alpha_{ij,k}}{2} \right) d\alpha_{ij,k}$$
(6.15)

where $\alpha_{ij,k}$ is $\alpha_k(t+\Delta t)$ for the ij^{th} element of deviatoric strain at the end of the time step.

6.4 Alternate Internal Variables

Physically, the sum of exponential relaxation elements corresponds to a collection of Maxwell elements (spring with stiffness $2G_k$ and dashpot with viscosity $\eta_k = 2\tau_k G_k$ in series) in parallel. The G_0 term corresponds to a single elastic element (spring with stiffness $2G_0$). An alternate set of internal variables is to track the stresses in each Maxwell element, s_k (with implied subscript ij for each component of stress), and then total stress is sum of those stresses:

$$s = s_0 + \sum_{k=1}^{n} s_k \tag{6.16}$$

Comparing to Eq. (6.7), the s_k variables are equivalent to α_k and they are related by:

$$s_k = 2G_k(e(t) - \alpha_k)$$
 and $\alpha_k = e(t) - \frac{s_k}{2G_k}$ (6.17)

This approach is the one described by Zerelli and Armstrong and the one used in Unintah MPM code.

The evolution equation for Maxwell stresses is the standard differential equation for a single Maxwell element:

$$\frac{1}{2G_k}\frac{ds_k}{dt} + \frac{s_k}{\eta_k} = \frac{de(t)}{dt} \tag{6.18}$$

Substitution of α_k correctly reduces to the evolution equations for α_k variables. The resulting stress update is

$$ds = 2G_0 de(t) + \sum_{k=1}^{n} ds_k$$
(6.19)

Using $ds_k = 2G_k de(t) - s_k / \tau_k$, this result reduces to

$$ds = 2G_e de(t) - \sum_{k=1}^{n} \frac{s_k}{\tau_k}$$
 (6.20)

Replacing α_k in the energy dissipation equation leads to

$$\Phi = \sum_{k=1}^{n} 2G_k(e(t) - \alpha_k) d\alpha_k = \sum_{k=1}^{n} s_k d\alpha_k = \sum_{k=1}^{n} \frac{s_k^2}{2G_k \tau_k}$$
(6.21)

Chapter 7

Manufactured Solutions

7.1 Introduction

Brannon (and several coworkers) have proposed manufactured solutions as a method to valid material modeling. In brief, a deformation gradient is imposed on a material and substituted into constitutive law and equilibrium equations. The exact stresses in the material are determined along with boundary conditions and body forces required to create the solution. This chapter has some particular manufacture solutions used in testing NairnMPM and easily adapted to testing new material models.

7.2 Constrained Uniaxial Tension

If an object is deformed on one direction at a constant rate while being constrained to no motion in the other two directions, the deformation gradient will be

$$\mathbf{F} = \begin{pmatrix} 1 + (\Lambda - 1)\frac{t}{t_f} & 0 & 0\\ 0 & 1 & 0\\ 0 & 0 & 1 \end{pmatrix}$$
 (7.1)

Here Λ is the final extension, which is reached at $t = t_f$. The initial particle velocities are $\mathbf{v} = ((\Lambda - 1)X/t_f, 0, 0)$, where X is the initial particle position. This deformation can be applied in 2D plane strain or in 3D calculations. Because F is independent of position, the stress in the object will be independent of position and determined by the material model being used.

The large deformation mapping and its inverse are

$$\chi(X,t) = x = X + \nu(X)t = X\left(1 + (\Lambda - 1)\frac{t}{t_f}\right)$$
 and $\chi^{-1}(x,t) = X = \frac{x}{1 + (\Lambda - 1)\frac{t}{t_f}}$ (7.2)

The *x*-components of material and spatial descriptions of velocity are

$$V(X,t) = \frac{d\chi(X,t)}{dt} = (\Lambda - 1)\frac{X}{t_f} \quad \text{and} \quad v(x,t) = V(\chi^{-1}(x,t),t) = \frac{(\Lambda - 1)\frac{x}{t_f}}{1 + (\Lambda - 1)\frac{t}{t_f}}$$
 (7.3)

The material velocity is constant on each particle (as specified by X) and the later would be velocities on the nodes during deformation). The material acceleration comes from

$$A(X,t) = \frac{d^2\chi(X,t)}{dt^2} = 0 (7.4)$$

To get this same result for spatial velocity requires the material derivative

$$\frac{Dv(x,t)}{Dt} = \frac{\partial v}{\partial t} + v \frac{\partial v}{\partial x} = -\frac{(\Lambda - 1)^2 \frac{x}{t_f^f}}{\left(1 + (\Lambda - 1)\frac{t}{t_f})\right)^2} + \frac{(\Lambda - 1)^2 \frac{x}{t_f^2}}{\left(1 + (\Lambda - 1)\frac{t}{t_f}\right)^2} = 0$$
 (7.5)

The material velocity gradient is

$$\dot{F} = \frac{dV(X,t)}{dX} \qquad \text{giving} \qquad F_{11} = \frac{(\Lambda - 1)}{t_f} \tag{7.6}$$

The spatial velocity gradient comes from change of coordinates:

$$\dot{\mathsf{F}} = \frac{dV(X,t)}{dX} = \frac{dv(x,t)}{dx} \frac{dx(X,t)}{dX} = \frac{dv(x,t)}{dx} \mathsf{F} \qquad \text{giving} \qquad F_{11} = \frac{(\Lambda - 1)}{t_f} \tag{7.7}$$

In this problem, the two are the same because \dot{F} is constant. Thus it is the same on all particles and in nodal coordinates it the same constant value (to extrapolate the constant to the particles). The spatial velocity gradient is the $\ell = dv(x,t)/dx$ term, which in this example has:

$$l_{11} = \frac{\frac{(\Lambda - 1)}{t_f}}{1 + (\Lambda - 1)\frac{t}{t_f}} \tag{7.8}$$

Note that in MPM, the velocity on the grid is extrapolated to the particles using gradients from the mesh, which should result in giving the spatial gradient on the particles. If this gradient is ℓ , then the incremental particle deformation gradient should be $dF = \exp(\ell \Delta t) = F(t + \Delta t)F^{-1}(t)$ (see section 5.2). In this example:

$$\exp\left(\frac{(\Lambda - 1)\frac{\Delta t}{t_f}}{1 + (\Lambda - 1)\frac{t}{t_f}}\right) = \frac{1 + (\Lambda - 1)\frac{(t + \Delta t)}{t_f}}{1 + (\Lambda - 1)\frac{t}{t_f}} = 1 + \frac{(\Lambda - 1)\frac{\Delta t}{t_f}}{1 + (\Lambda - 1)\frac{t}{t_f}}$$
(7.9)

which is correct for small Δt .

7.2.1 Low-Strain, Isotropic Material

In terms of **F**, the stress in a low-strain, isotropic material can be written as

$$\sigma = \lambda (\operatorname{Tr}(\mathbf{F}) - 3)\mathbf{I} + G(\mathbf{F} + \mathbf{F}^{T} - 2\mathbf{I})$$
(7.10)

where $\lambda = vE/((1+v)(1-2v))$ is the Lamé constant for the material. For constrained uniaxial tension, the stress is

$$\sigma_{ij} = (\lambda + 2G\delta_{i1})(\Lambda - 1)\frac{t}{t_f}\delta_{ij}$$
(7.11)

although this stress is based on initial area and not the Cauchy stress. This solution can be imposed by applying traction or velocity boundary conditions. On the $\pm x$ surfaces, the traction condition should be:

$$T_{x} = \pm (\lambda + 2G)(\Lambda - 1)\frac{t}{t_{f}}$$

$$(7.12)$$

On the $\pm y$ and $\pm z$ surface, the traction condition should be:

$$T_y = \pm \lambda (\Lambda - 1) \frac{t}{t_f}$$
 or $v_y = v_z = 0$ (7.13)

7.2.2 Neo-Hookean, Mooney-Rivlin Material

For a neo-Hookean version of a Mooney-Rivlin material (with $G_2 = 0$) with default pressure term and no residual stresses, the Cauchy stress is

$$\sigma = \frac{K}{2} \left(J - \frac{1}{J} \right) \mathbf{I} + \frac{G_1}{J^{5/3}} \operatorname{dev}(\mathbf{F}\mathbf{F}^T)$$
 (7.14)

where $\text{dev}(\mathbf{F}\mathbf{F}^T)$ is the deviatoric part of the left Cauchy-Green tensor with diagonal elements $(1/3)(2(J^2-1), 1-J^2, 1-J^2)$. Under constrained uniaxial deformation:

$$\sigma_{xx} = \left(\frac{K}{2(1+(\Lambda-1)\frac{t}{t_f})} + \frac{2G_1}{3(1+(\Lambda-1)\frac{t}{t_f})^{5/3}}\right) \left(2+(\Lambda-1)\frac{t}{t_f}\right) \frac{(\Lambda-1)t}{t_f}$$
(7.15)

$$\sigma_{yy} = \left(\frac{K}{2(1 + (\Lambda - 1)\frac{t}{t_f})} - \frac{G_1}{3(1 + (\Lambda - 1)\frac{t}{t_f})^{5/3}}\right) \left(2 + (\Lambda - 1)\frac{t}{t_f}\right) \frac{(\Lambda - 1)t}{t_f}$$
(7.16)

$$\sigma_{zz} = \sigma_{yy} \tag{7.17}$$

This solution can be imposed by applying traction and/or velocity boundary conditions. On the $\pm x$ surface, the traction condition should be $T_x = \pm \sigma_{xx}$. On the $\pm y$ and $\pm z$ surfaces, the conditions should be $T_y = \pm \sigma_{yy}$ and $T_z = \pm \sigma_{yy}$.

7.2.3 Neo-Hookean Material

For an alternate neo-Hookean material with default pressure term (UJOption=0) and no residual stresses, the Cauchy stress is

$$\sigma = \frac{\lambda}{2} \left(J - \frac{1}{J} \right) \mathbf{I} + \frac{G}{J} \left(\mathbf{F} \mathbf{F}^T - \mathbf{I} \right)$$
 (7.18)

where $(\mathbf{F}\mathbf{F}^T) = J^2\mathbf{I}$ for constrained uniaxial deformation:

$$\mathbf{F}\mathbf{F}^T = \begin{pmatrix} J^2 & 0 & 0 \\ 0 & 1 & 0 \\ 0 & 0 & 1 \end{pmatrix} \tag{7.19}$$

The stresses become:

$$\sigma_{xx} = \frac{\lambda + 2G}{2J} (J^2 - 1) = \frac{\lambda + 2G}{2(1 + (\Lambda - 1)\frac{t}{t_f})} \left(2 + (\Lambda - 1)\frac{t}{t_f} \right) \frac{(\Lambda - 1)t}{t_f}$$
(7.20)

$$\sigma_{yy} = \frac{\lambda}{2J}(J^2 - 1) = \frac{\lambda}{2(1 + (\Lambda - 1)\frac{t}{t_f})} \left(2 + (\Lambda - 1)\frac{t}{t_f}\right) \frac{(\Lambda - 1)t}{t_f}$$
 (7.21)

$$\sigma_{zz} = \sigma_{yy} \tag{7.22}$$

This solution can be imposed by applying traction and/or velocity boundary conditions. On the $\pm x$ surface, the traction condition should be $T_x = \pm \sigma_{xx}$. On the $\pm y$ and $\pm z$ surfaces, the conditions should be $T_y = \pm \sigma_{yy}$ and $T_z = \pm \sigma_{yy}$.

For neo-Hookean material with alternate pressure term (UJOption=2) and no residual stresses, the Cauchy stress is

$$\boldsymbol{\sigma} = \lambda \frac{\ln J}{J} \mathbf{I} + \frac{G}{J} (\mathbf{F} \mathbf{F}^T - \mathbf{I})$$
 (7.23)

The stresses become:

$$\sigma_{xx} = \frac{\lambda \ln\left(1 + (\Lambda - 1)\frac{t}{t_f}\right) + G\left(2 + (\Lambda - 1)\frac{t}{t_f}\right)\frac{(\Lambda - 1)t}{t_f}}{\left(1 + (\Lambda - 1)\frac{t}{t_f}\right)}$$
(7.24)

$$\sigma_{zz} = \sigma_{yy} = \frac{\lambda \ln\left(1 + (\Lambda - 1)\frac{t}{t_f}\right)}{\left(1 + (\Lambda - 1)\frac{t}{t_f}\right)}$$
(7.25)

7.2.4 Disney Snow Model

For the neo-Hookean material in the elastic part of the Disney snow model, the eigenvalues of **B** are $1 + (\Lambda - 1)t/t_f$, 1, and 1 with eigenvectors \hat{x} , \hat{y} , and \hat{z} . The Cauchy stress is

$$\sigma_{xx} = \left(\lambda(J_p) + 2G(J_p)\right)(\Lambda - 1)\frac{t}{t_f}$$
(7.26)

$$\sigma_{yy} = \lambda(J_p)(\Lambda - 1)\frac{t}{t_f} \tag{7.27}$$

$$\sigma_{zz} = \sigma_{yy} \tag{7.28}$$

This result is identical to a low-strain, isotropic material, although these two models are not identical in all deformation states.

7.3 Constrained Uniaxial Tension with Thermal Ramp

In addition to linear variation in elongation, we add linear variation in $\lambda_{res} = 1 + (\Lambda_{res} - 1)t/t_f$, which corresponds to a temperature of

$$\Delta T = \frac{1}{\alpha} \ln \left(1 + (\Lambda_{res} - 1) \frac{t}{t_f} \right) \tag{7.29}$$

For plane strain, the full deformation matrix is

$$\mathbf{F} = \begin{pmatrix} \left(1 + (\Lambda - 1)\frac{t}{t_f}\right) \left(1 + (\Lambda_{res} - 1)\frac{t}{t_f}\right) & 0 & 0\\ 0 & 1 + (\Lambda_{res} - 1)\frac{t}{t_f} & 0\\ 0 & 0 & 1 \end{pmatrix}$$
(7.30)

The acceleration will be

$$a = \left(\frac{2X}{t_f^2} (\Lambda - 1)(\Lambda_{res} - 1), 0, 0\right)$$
 (7.31)

The initial velocities will be

$$v(t=0) = \left((\Lambda - 1) \frac{X}{t_f} + (\Lambda_{res} - 1) \frac{X}{t_f}, (\Lambda_{res} - 1) \frac{Y}{t_f}, 0 \right)$$
 (7.32)

7.4. LINEAR SHEAR 89

7.3.1 **Neo-Hookean Material**

For an alternate neo-Hookean material with the default pressure term and including residual stresses, the Cauchy stress is

$$\sigma = \frac{\lambda}{2} \left(\frac{J}{J_{res}} - \frac{J_{res}}{J} \right) \mathbf{I} + \frac{G}{J} \left(J_{res}^{1/3} \mathbf{F} \mathbf{F}^T - J_{res} \mathbf{I} \right)$$
 (7.33)

The stresses, which are independent of position (and hence have zero divergence) are:

$$\sigma_{xx} = \left[\frac{\frac{\lambda}{2} (\Lambda - \Lambda_{res}) \left(2 + (\Lambda + \Lambda_{res} - 2) \frac{t}{t_f} \right) + G(\Lambda - 1) \left(2 + (\Lambda - 1) \frac{t}{t_f} \right) \left(1 + (\Lambda_{res} - 1) \frac{t}{t_f} \right)^2}{\left(1 + (\Lambda - 1) \frac{t}{t_f} \right) \left(1 + (\Lambda_{res} - 1) \frac{t}{t_f} \right)} \right] \frac{t}{t_f}$$
(7.34)

$$\sigma_{yy} = \frac{\lambda}{2} \frac{(\Lambda - \Lambda_{res}) \left(2 + (\Lambda + \Lambda_{res} - 2) \frac{t}{t_f}\right)}{\left(1 + (\Lambda - 1) \frac{t}{t_f}\right) \left(1 + (\Lambda_{res} - 1) \frac{t}{t_f}\right)} \frac{t}{t_f}$$
(7.35)

$$\sigma_{zz} = \left[\frac{\frac{\lambda}{2} (\Lambda - \Lambda_{res}) \left(2 + (\Lambda + \Lambda_{res} - 2) \frac{t}{t_f} \right) - G(\Lambda_{res} - 1) \left(2 + (\Lambda_{res} - 1) \frac{t}{t_f} \right)}{\left(1 + (\Lambda - 1) \frac{t}{t_f} \right) \left(1 + (\Lambda_{res} - 1) \frac{t}{t_f} \right)} \right] \frac{t}{t_f}$$
(7.36)

To be able to implement this in NairnMPM nee

1. A method to have a non-linear thermal ramp for the ΔT term

Linear Shear 7.4

If an object is sheared on one direction at a constant rate while being constrained to no motion in the other two directions, the deformation gradient will be

$$\mathbf{F} = \begin{pmatrix} 1 & \Gamma \frac{t}{t_f} & 0 \\ 0 & 1 & 0 \\ 0 & 0 & 1 \end{pmatrix} \quad \text{and} \quad \mathbf{B} = \begin{pmatrix} 1 + \Gamma^2 \frac{t^2}{t_f^2} & \Gamma \frac{t}{t_f} & 0 \\ \Gamma \frac{t}{t_f} & 1 & 0 \\ 0 & 0 & 1 \end{pmatrix}$$
(7.37)

Here $\tan \Theta = \Gamma$ is the final shear angle of the deformation, which is reached at $t = t_f$. The initial particle velocities are $v = (\Gamma Y/t_f, 0, 0)$. The accelerations are always zero. This deformation can be applied in 2D plane strain or in 3D calculations; it might work in plane stress as well. Because F is independent of position, the stress in the object will be independent of position and determined by the material model being used. As a result, the divergence of the stress is zero and the manufactured solution can be derived with zero body force. The remaining task is finding boundary conditions for various material models.

Traction boundary conditions are found from $\sigma \cdot \hat{n}$. On the $\pm y$ and $\pm z$ surfaces, the normal stays constant during deformation, leading to:

$$T = (\tau_{xy}, \sigma_{yy}, 0) \quad \text{on } \pm y$$

$$T = (0, 0, \sigma_{zz}) \quad \text{on } \pm z$$

$$(7.38)$$

$$T = (0, 0, \sigma_{zz}) \quad \text{on } \pm z$$
 (7.39)

(7.40)

On the initially $\pm x$ surface, the normal rotates to be

$$\hat{\mathbf{n}} = \left(\frac{1}{\sqrt{1+\gamma^2}}, \frac{-\gamma}{\sqrt{1+\gamma^2}}, 0\right) \tag{7.41}$$

where $\gamma = \Gamma t/t_f$. But since $\gamma = \tan \theta$, where θ is the current shear angle, this normal vector is also

$$\hat{\mathbf{n}} = (\cos \theta, -\sin \theta, 0) \tag{7.42}$$

For general stress state (but with $\sigma_{xz} = \sigma_{yz} = 0$), the traction will be

$$T = (\sigma_{xx}\cos\theta - \sigma_{xy}\sin\theta, \sigma_{xy}\cos\theta - \sigma_{yy}\sin\theta, 0)$$
 (7.43)

This traction can be divided into traction normal and tangential to the current surface:

$$T_n = \mathbf{T} \cdot \hat{\mathbf{n}} = \sigma_{xx} \cos^2 \theta - 2\sigma_{xy} \cos \theta \sin \theta + \sigma_{yy} \sin^2 \theta = \frac{\sigma_{xx} - 2\gamma \sigma_{xx} + \gamma^2 \sigma_{yy}}{1 + \gamma^2}$$
(7.44)

$$T_t = \mathbf{T} \cdot \hat{\mathbf{t}} = (\sigma_{xx} - \sigma_{yy}) \cos \theta \sin \theta + \sigma_{xy} (\cos^2 \theta - \sin^2 \theta)$$
 (7.45)

$$= \frac{\gamma(\sigma_{xx} - \sigma_{yy}) + \sigma_{xy}(1 - \gamma^2)}{1 + \gamma^2} \tag{7.46}$$

which used $\hat{t} = (\sin \theta, \cos \theta, 0)$. Note that traction boundary conditions in NairnMPM have the option of being applied normal and tangential to the current surface orientation (when using CPDI). This approach, however, is less stable because an error is surface orientation amplifies and inaccuracies in the solution. Using tractions along analysis axes works better

For velocity conditions, all surfaces should impose

$$\mathbf{v} = \left(\Gamma \frac{Y}{t_f}, 0, 0\right) \tag{7.47}$$

Because particles have zero velocity in the *y* direction *Y* will equal *y* for all particles and can be implemented as a function of current position.

7.4.1 Low-Strain, Isotropic Material

In terms of **F**, the stress in a low-strain, isotropic material for shear sliding can be written as

$$\sigma = G(\mathbf{F} + \mathbf{F}^T - 2\mathbf{I}) \tag{7.48}$$

The only non-zero stress is the shear stress:

$$\sigma_{xy} = G\gamma = G\Gamma \frac{t}{t_f} \tag{7.49}$$

7.4.2 Neo-Hookean, Mooney-Rivlin Material

For a Mooney-Rivlin material, the Cauchy stress under sliding shear is found from elements of **B**. In addition J = 1, which means pressure terms are zero. The final stresses are

$$\sigma_{xx} = \frac{J_{res}\gamma^2}{3}(2G_1 + G_2) \tag{7.50}$$

$$\sigma_{yy} = -\frac{J_{res}\gamma^2}{3}(G_1 + 2G_2) \tag{7.51}$$

$$\sigma_{zz} = \frac{J_{res}\gamma^2}{3}(-G_1 + G_2) \tag{7.52}$$

$$\tau_{xy} = J_{res}\gamma(G_1 + G_2) \tag{7.53}$$

where J_{res} is set to one to generate a solution with no residual stresses.

7.4.3 Neo-Hookean Material

For an alternate Neo-Hookean material with no residual stresses, the Cauchy stress under sliding shear is found from elements of **B**. In addition J = 1, which means pressure terms are zero (and result is independent of the UJoption setting). The final stresses are

$$\sigma_{xx} = G\gamma^2 \tag{7.54}$$

$$\sigma_{yy} = \sigma_{zz} = 0 \tag{7.55}$$

$$\tau_{xy} = G\gamma \tag{7.56}$$

On the $\pm y$ surfaces, the tractions are $T_x = \pm \tau_{xy}$ and $T_y = 0$. On the $\pm z$ surfaces, the traction are $T_z = 0$. The $\pm x$ surface have to account for rotations and can be done with normal and tangential tractions:

$$T_n = -\frac{G\gamma^2}{1+\gamma^2} \tag{7.57}$$

$$T_t = \frac{G\gamma}{1+\gamma^2} \tag{7.58}$$

or with tractions along x and y. Both work, but x and y tractions are more stable

7.4.4 Disney Snow Model

For the neo-Hookean material in the elastic part of the Disney snow model, the eigenvalues and eigenvectors of **B**:

$$\lambda_1^2 = 1 + \frac{1}{2}\gamma^2 + \gamma \sqrt{1 + \frac{1}{4}\gamma^2} \tag{7.59}$$

$$\lambda_2^2 = 1 + \frac{1}{2}\gamma^2 - \gamma\sqrt{1 + \frac{1}{4}\gamma^2} \tag{7.60}$$

$$\lambda_3^2 = 1 \tag{7.61}$$

(7.62)

7.5 Linear Acceleration

If an object is stretched in uniaxial tension, using an acceleration that is linear in x while being constrained to no motion in the other two directions, the deformation gradient will be

$$\mathbf{F} = \begin{pmatrix} 1 + (\Lambda - 1)\frac{t^2}{t_f^2} & 0 & 0\\ 0 & 1 & 0\\ 0 & 0 & 1 \end{pmatrix}$$
 (7.63)

Here Λ is the final extension ratio, which is reached at $t=t_f$. The particle velocities are $\mathbf{v}=2(\Lambda-1)Xt/t_f^2$; hence the initial velocities are all zero. The particle accelerations are $\mathbf{a}=2(\Lambda-1)X/t_f^2$, which is linear in X. Because the deformation gradient is independent of position, the stresses will be uniform and therefore have zero divergence. To manufacture a solution, the non-zero accelerations have to be balanced by body force on the nodes (in spatial coordinates) or:

$$b = \left(\frac{2(\Lambda - 1)\frac{x}{t_f^2}}{1 + (\Lambda - 1)\frac{t^2}{t_f^2}}, 0, 0\right)$$
(7.64)

To apply velocity boundary conditions, the applied velocity (in spatial nodal coordinates) should be

$$\nu = \left(\frac{2(\Lambda - 1)\frac{xt}{t_f^2}}{1 + (\Lambda - 1)\frac{t^2}{t_f^2}}, 0, 0\right)$$
(7.65)

7.5.1 Low-Strain, Isotropic Material

In terms of **F**, the stress in a low-strain, isotropic material can be written as

$$\sigma = \lambda \left(\text{Tr}(\mathbf{F}) - 3 \right) \mathbf{I} + G(\mathbf{F} + \mathbf{F}^T - 2\mathbf{I})$$
 (7.66)

where $\lambda = \nu E/((1+\nu)(1-2\nu))$ is the Lamé constant for the material. For constrained uniaxial tension with linear extension, the stress is

$$\sigma_{ij} = (\lambda + 2G\delta_{i1})(\Lambda - 1)\frac{t^2}{t_f^2}\delta_{ij}$$
(7.67)

although this stress is based on initial area and not the Cauchy stress. This solution can be imposed by applying traction or velocity boundary conditions. On the $\pm x$ surfaces, the traction condition should be:

$$T_{x} = \pm (\lambda + 2G)(\Lambda - 1)\frac{t^{2}}{t_{f}^{2}}$$
(7.68)

On the $\pm y$ and $\pm z$ surface, the traction condition should be:

$$T_y = \pm \lambda (\Lambda - 1) \frac{t^2}{t_f^2}$$
 or $v_y = v_z = 0$ (7.69)

7.5.2 Neo-Hookean Material

For an alternate neo-Hookean material under constrained uniaxial deformation:

$$\sigma_{xx} = \frac{\lambda + 2G}{2J}(J^2 - 1) = \frac{\lambda + 2G}{2\left(1 + (\Lambda - 1)\frac{t^2}{t_f^2}\right)} \left(2 + (\Lambda - 1)\frac{t^2}{t_f^2}\right) \frac{(\Lambda - 1)t^2}{t_f^2}$$
(7.70)

$$\sigma_{yy} = \frac{\lambda}{2J} (J^2 - 1) = \frac{\lambda}{2\left(1 + (\Lambda - 1)\frac{t^2}{t_f^2}\right)} \left(2 + (\Lambda - 1)\frac{t^2}{t_f^2}\right) \frac{(\Lambda - 1)t^2}{t_f^2}$$
(7.71)

$$\sigma_{zz} = \sigma_{yy} \tag{7.72}$$

This solution can be imposed by applying traction and/or velocity boundary conditions. On the $\pm x$ surface, the traction condition should be $T_x = \pm \sigma_{xx}$. On the $\pm y$ and $\pm z$ surfaces, the conditions should be $T_y = \pm \sigma_{yy}$ and $T_z = \pm \sigma_{yy}$.