# CPE403 – Advanced Embedded Systems

# Design Assignment 01

### DO NOT REMOVE THIS PAGE DURING SUBMISSION:

Name: Do Le

Email: led2@unlv.nevada.edu

Github Repository link (root): https://github.com/DoVietLe/AES

Youtube Playlist link (root):

https://www.youtube.com/playlist?list=PLFfzhLPj7fvOz1lm2Vd9DevkHetoyvRQ6

## Follow the submission guideline to be awarded points for this Assignment.

Submit the following for all Assignments:

- 1. In the document, for each task submit the modified or included code (from the base code) with highlights and justifications of the modifications. Also include the comments. If no base code is provided, submit the base code for the first task only.
- Create a private Github repository with a random name (no CPE/403, Lastname, Firstname). Place all labs under the root folder TIVAC, sub-folder named Assignment1, with one document and one video link file for each lab, place modified c files named as asng\_taskxx.c.
- 3. If multiple c files or other libraries are used, create a folder asng1\_t01 and place these files inside the folder.
- 4. The folder should have a) Word document (see template), b) source code file(s) with startup ccs.c and other include files, c) text file with youtube video links (see template).
- 5. Submit the doc file in canvas before the due date. The root folder of the github assignment directory should have the documentation and the text file with youtube video links.
- 6. Organize your youtube videos as playlist under the name "cpe403". The playlist should have the video sequence arranged as submission or due dates.
- 7. Only submit pdf documents. Do not forget to upload this document in the github repository and in the canvas submission portal.

Code for Tasks. for each task submit the modified or included code (from the base code)
with highlights and justifications of the modifications. Also include the comments. If no
base code is provided, submit the base code for the first task only. Use separate page
for each task.

### Task 01 Code:

```
#include <stdint.h>
#include <stdbool.h>
#include "inc/tm4c123gh6pm.h"
#include "inc/hw memmap.h"
#include "inc/hw types.h"
#include "driverlib/sysctl.h"
#include "driverlib/interrupt.h"
#include "driverlib/gpio.h"
#include "driverlib/timer.h"
#include "driverlib/uart.h"
#include "driverlib/adc.h"
#include "utils/uartstdio.c"
#define BAUD RATE 115200
#define GPIO PAO UORX 0x00000001
#define GPIO_PA1_UOTX 0x00000401
#define RED_LED GPIO_PIN_1
#define BLUE_LED GPIO_PIN_2
#define GREEN LED GPIO PIN 3
#define BUTTON GPIO PIN 4
// Reserves memory to move the temperature FIFO into.
uint32_t temperatureFIF0[4];
// Variables to calculate the temperature with.
volatile uint32_t tAverage, tCelsius, tFahrenheit;
// Keeps track of the LED status.
volatile bool ledOn = false;
int main(void) {
    uint32_t loadVal;
    // Calculates the cycle values for a 0.5s delay.
    loadVal = (SysCtlClockGet() / 2);
    // Sets up the system clock.
    SysCtlClockSet(SYSCTL SYSDIV 5 | SYSCTL USE PLL | SYSCTL XTAL 16MHZ |
SYSCTL OSC MAIN);
    // Enables peripherals.
    SysCtlPeripheralEnable(SYSCTL PERIPH WTIMER0);
    SysCtlPeripheralEnable(SYSCTL_PERIPH_UARTO);
    SysCtlPeripheralEnable(SYSCTL_PERIPH_GPIOA);
    SysCtlPeripheralEnable(SYSCTL_PERIPH_ADC0);
    SysCtlPeripheralEnable(SYSCTL PERIPH GPIOF);
    // Sets up peripherals.
    TimerConfigure (WTIMERO BASE, TIMER CFG PERIODIC);
    TimerLoadSet(WTIMERO BASE, TIMER A, loadVal);
    GPIOPinConfigure (GPIO PAO UORX);
    GPIOPinConfigure (GPIO PA1 UOTX);
    GPIOPinTypeUART (GPIO PORTA BASE, GPIO PIN 0 | GPIO PIN 1);
    UARTClockSourceSet(UARTO BASE, UART CLOCK PIOSC);
    UARTStdioConfig(0, 115200, 16000000);
```

```
ADCSequenceConfigure (ADC0 BASE, 2, ADC TRIGGER PROCESSOR, 0);
    ADCSequenceStepConfigure (ADC0 BASE, 2, 0, ADC CTL TS);
   ADCSequenceStepConfigure (ADC0 BASE, 2, 1, ADC CTL TS);
   ADCSequenceStepConfigure (ADC0 BASE, 2, 2, ADC CTL TS);
    ADCSequenceStepConfigure (ADC0_BASE, 2, 3, ADC_CTL_TS|ADC_CTL_IE|ADC_CTL_END);
    GPIOPinTypeGPIOOutput (GPIO PORTF BASE, RED LED | BLUE LED | GREEN LED);
    GPIOPinTypeGPIOInput(GPIO PORTF BASE, BUTTON);
    GPIOPadConfigSet (GPIO_PORTF_BASE, GPIO_PIN_4, GPIO_STRENGTH_2MA,
GPIO PIN TYPE STD WPU);
    // Sets up interrupts.
    IntEnable(INT WTIMEROA);
    TimerIntEnable (WTIMERO BASE, TIMER TIMA TIMEOUT);
    IntEnable(INT GPIOF);
    GPIOIntTypeSet (GPIO PORTF BASE, BUTTON, GPIO FALLING EDGE);
    GPIOIntEnable (GPIO PORTF BASE, GPIO INT PIN 4);
    IntMasterEnable();
    // Enables stuff.
    TimerEnable(WTIMERO BASE, TIMER_A);
    ADCSequenceEnable(ADC0_BASE, 2);
    UARTprintf("Starting...");
    while (1)
}
void timerhandler(void) {
    // Clears interrupt flag.
    TimerIntClear (WTIMERO BASE, TIMER TIMA TIMEOUT);
    // Starts ADC conversion.
   ADCIntClear (ADC0 BASE, 2);
    ADCProcessorTrigger(ADC0_BASE, 2);
   ADCSequenceDataGet(ADC0 BASE, 2, temperatureFIF0);
    tAverage = (temperatureFIFO[0] + temperatureFIFO[1] + temperatureFIFO[2] +
temperatureFIFO[3] + 2)/4;
    tCelsius = (1475 - ((2250*tAverage))/4096)/10;
    tFahrenheit = ((tCelsius*9) + 160)/5;
    UARTprintf("ADC: %3d\t", tAverage);
    UARTprintf("Celsius: %3dC\t", tCelsius);
    UARTprintf("Fahrenheit: %3dF", tFahrenheit);
    UARTprintf("\n\r");
void buttonpresshandler() {
    GPIOIntClear(GPIO_PORTF_BASE, GPIO_INT_PIN_4);
    ledOn = !ledOn;
    if (ledOn) {
        GPIOPinWrite (GPIO PORTF BASE, RED LED BLUE LED GREEN LED,
RED LED | BLUE LED | GREEN LED);
    } else {
        GPIOPinWrite(GPIO PORTF BASE, RED LED|BLUE LED|GREEN LED, 0);
}
```

```
Task 02 Code:
#include <stdint.h>
#include <stdbool.h>
#include "inc/tm4c123gh6pm.h"
#include "inc/hw_memmap.h"
#include "inc/hw_types.h"
#include "driverlib/sysctl.h"
#include "driverlib/interrupt.h"
#include "driverlib/gpio.h"
#include "driverlib/timer.h"
#include "driverlib/uart.h"
#include "driverlib/adc.h"
#include "utils/uartstdio.c"
#define BAUD RATE 115200
#define GPIO PAO UORX 0x00000001
#define GPIO PA1_UOTX 0x00000401
#define RED_LED GPIO_PIN_1
#define BLUE_LED GPIO_PIN_2
#define GREEN LED GPIO PIN 3
#define BUTTON GPIO PIN 4
// Reserves memory to move the temperature FIFO into.
uint32 t temperatureFIFO[4];
uint32 t ledSequence;
// Used to read in the cmd.
char cmd;
// Used to calculate temperature.
volatile uint32 t tAverage, tCelsius, tFahrenheit;
// Keeps track of the R G B LEDs' status.
volatile bool rLED = false;
volatile bool gLED = false;
volatile bool bLED = false;
int main(void) {
    uint32 t loadVal;
    // Calculates the cycle values for a 0.5s delay.
    loadVal = (SysCtlClockGet() / 2);
    // Sets up the system clock.
    SysCtlClockSet(SYSCTL SYSDIV 5 | SYSCTL USE PLL | SYSCTL XTAL 16MHZ |
SYSCTL OSC MAIN);
    // Enables peripherals.
    SysCtlPeripheralEnable(SYSCTL PERIPH WTIMER0);
    SysCtlPeripheralEnable(SYSCTL_PERIPH_UART0);
    SysCtlPeripheralEnable(SYSCTL_PERIPH_GPIOA);
    SysCtlPeripheralEnable(SYSCTL_PERIPH_ADC0);
    SysCtlPeripheralEnable(SYSCTL PERIPH GPIOF);
    // Sets up peripherals.
    TimerConfigure (WTIMERO BASE, TIMER CFG PERIODIC);
    TimerLoadSet(WTIMER0 BASE, TIMER A, loadVal);
    GPIOPinConfigure (GPIO PAO UORX);
    GPIOPinConfigure (GPIO PA1 UOTX);
    GPIOPinTypeUART (GPIO PORTA BASE, GPIO PIN 0 | GPIO PIN 1);
    UARTClockSourceSet(UARTO BASE, UART CLOCK PIOSC);
    UARTStdioConfig(0, 115200, 16000000);
    ADCSequenceConfigure (ADC0 BASE, 2, ADC TRIGGER PROCESSOR, 0);
    ADCSequenceStepConfigure (ADC0_BASE, 2, 0, ADC_CTL_TS);
    ADCSequenceStepConfigure (ADC0_BASE, 2, 1, ADC_CTL_TS);
    ADCSequenceStepConfigure (ADC0_BASE, 2, 2, ADC_CTL_TS);
```

```
ADCSequenceStepConfigure (ADC0 BASE, 2, 3, ADC CTL TS|ADC CTL IE|ADC CTL END);
    GPIOPinTypeGPIOOutput (GPIO PORTF BASE, RED LED | BLUE LED | GREEN LED);
    GPIOPinTypeGPIOInput(GPIO PORTF BASE, BUTTON);
    GPIOPadConfigSet (GPIO_PORTF_BASE, GPIO_PIN_4, GPIO_STRENGTH_2MA,
GPIO PIN TYPE STD WPU);
    // Sets up interrupts.
    IntEnable(INT WTIMEROA);
    TimerIntEnable (WTIMERO BASE, TIMER TIMA TIMEOUT);
    IntEnable(INT GPIOF);
    GPIOIntTypeSet (GPIO PORTF BASE, BUTTON, GPIO FALLING EDGE);
    GPIOIntEnable(GPIO_PORTF_BASE, GPIO_INT_PIN_4);
    IntEnable(INT UARTO);
    UARTIntEnable(UARTO BASE, UART INT RX | UART INT RT);
    IntMasterEnable();
    // Enables stuff.
    TimerEnable(WTIMERO BASE, TIMER_A);
    ADCSequenceEnable (ADC0 BASE, 2);
    UARTprintf("\n\rEnter command (R/r: Red LED On/Off\tG/g: Green LED On/Off\tB/b:
Blue LED On/Off\tT/t:"
            "Temperature in Celsius/Fahrenheit\tS: LED Status)\n\r");
    while (1)
}
void timerhandler(void) {
    // Clears interrupt flag.
    TimerIntClear(WTIMERO BASE, TIMER TIMA TIMEOUT);
    // Starts ADC conversion.
   ADCIntClear (ADC0 BASE, 2);
    ADCProcessorTrigger (ADC0 BASE, 2);
   ADCSequenceDataGet(ADC0 BASE, 2, temperatureFIF0);
    tAverage = (temperatureFIFO[0] + temperatureFIFO[1] + temperatureFIFO[2] +
temperatureFIFO[3] + 2)/4;
    tCelsius = (1475 - ((2250*tAverage))/4096)/10;
    tFahrenheit = ((tCelsius*9) + 160)/5;
void buttonpresshandler() {
    GPIOIntClear (GPIO PORTF BASE, GPIO INT PIN 4);
    rLED = !rLED;
    gLED = !gLED;
   bleD = !bleD;
    ledSequence = (rLED ? RED LED : 0) | (gLED ? GREEN LED : 0) | (bLED ? BLUE LED : 0);
    GPIOPinWrite (GPIO PORTF BASE, RED LED|BLUE LED|GREEN LED, ledSequence);
void uartinthandler() {
    uint32_t ui32Status;
    // Clears the interrupt.
    ui32Status = UARTIntStatus(UARTO BASE, true);
    UARTIntClear(UARTO BASE, ui32Status);
```

```
// Grabs data from the UART.
cmd = UARTCharGetNonBlocking(UARTO BASE);
switch (cmd) {
// The first 6 commands set the status of the corresponding LEDs.
case 'R':
   rLED = true;
   break;
case 'r':
    rLED = false;
   break;
case 'G':
   gLED = true;
   break;
case 'g':
   qLED = false;
   break;
case 'B':
   bLED = true;
   break;
case 'b':
   bLED = false;
   break;
case 'T':
    // Sends the temperature in celsius.
    UARTprintf("Temperature: %3dC\n\r", tCelsius);
   break;
case 't':
    // Sends the temperature in fahrenheit.
    UARTprintf("Temperature: %3dF\n\r", tFahrenheit);
   break;
case 'S':
    // Displays the status of the RGB. Format is <R, G, B>
    UARTprintf("RGB Status: <%i, %i, %i>\n\r", rLED, gLED, bLED);
    break;
default:
    // Occurs when the TivaC receives data not accounted for.
    UARTprintf("Command %c not found.\n\r", cmd);
ledSequence = (rLED ? RED_LED : 0) | (gLED ? GREEN_LED : 0) | (bLED ? BLUE_LED : 0);
GPIOPinWrite(GPIO_PORTF_BASE, RED_LED|BLUE_LED|GREEN_LED, ledSequence);
```


```
Task 03 Code:
#include <stdint.h>
#include <stdbool.h>
#include "inc/tm4c123gh6pm.h"
#include "inc/hw_memmap.h"
#include "inc/hw_types.h"
#include "inc/hw adc.h"
#include "driverlib/sysctl.h"
#include "driverlib/interrupt.h"
#include "driverlib/gpio.h"
#include "driverlib/timer.h"
#include "driverlib/uart.h"
#include "driverlib/adc.h"
#include "driverlib/udma.h"
#include "utils/uartstdio.c"
#define BAUD RATE 115200
#define GPIO_PA0_U0RX 0x00000001
#define GPIO PA1_UOTX 0x00000401
#define RED_LED GPIO_PIN_1
#define BLUE_LED GPIO_PIN_2
#define GREEN LED GPIO PIN 3
#define BUTTON GPIO PIN 4
#define MEM BUFFER SIZE 64
#pragma DATA ALIGN(pui8ControlTable, 1024)
uint8_t pui8ControlTable[1024];
static uint16 t destination[MEM BUFFER SIZE];
uint32 t ledSequence;
uint16 t i;
char cmd;
volatile uint32 t tAverage, tCelsius, tFahrenheit;
volatile bool rLED = false;
volatile bool gLED = false;
volatile bool bLED = false;
void inituDMA(void)
    // Initizlies the uDMA and sets it to transfer from the ADC to the memory array
pointed to by 'destination'.
    uDMAEnable();
    uDMAControlBaseSet(pui8ControlTable);
    uDMAChannelAttributeDisable(UDMA CHANNEL ADCO, UDMA ATTR ALTSELECT |
UDMA ATTR HIGH PRIORITY | UDMA ATTR REQMASK);
    uDMAChannelAttributeEnable (UDMA CHANNEL ADCO, UDMA ATTR USEBURST);
    uDMAChannelControlSet(UDMA CHANNEL ADCO | UDMA PRI SELECT, UDMA SIZE 16 |
UDMA_SRC_INC_NONE | UDMA_DST_INC_16 | UDMA_ARB_128);
    uDMAChannelTransferSet(UDMA_CHANNEL_ADC0 | UDMA_PRI_SELECT, UDMA_MODE_AUTO, (void
*) (ADCO BASE + ADC O SSFIFOO), destination, MEM BUFFER SIZE);
    uDMAChannelEnable(UDMA CHANNEL ADC0);
    //uDMAChannelRequest(UDMA CHANNEL ADC0);
int main(void) {
    uint32_t loadVal;
    // Calculates the cycle value for a 0.5s delay.
    loadVal = (SysCtlClockGet() / 2);
    // Sets up the system clock.
    SysCtlClockSet(SYSCTL SYSDIV 5 | SYSCTL USE PLL | SYSCTL XTAL 16MHZ |
SYSCTL OSC MAIN);
```

```
// Enables peripherals.
    SysCtlPeripheralEnable(SYSCTL PERIPH WTIMER0);
    SysCtlPeripheralEnable(SYSCTL PERIPH UARTO);
    SysCtlPeripheralEnable(SYSCTL PERIPH GPIOA);
    SysCtlPeripheralEnable(SYSCTL PERIPH ADC0);
    SysCtlPeripheralEnable(SYSCTL_PERIPH_GPIOF);
    SysCtlPeripheralEnable(SYSCTL PERIPH UDMA);
    // Sets up peripherals.
    inituDMA();
    TimerConfigure (WTIMERO BASE, TIMER CFG PERIODIC);
    TimerLoadSet (WTIMERO BASE, TIMER A, loadVal);
    GPIOPinConfigure (GPIO PAO UORX);
    GPIOPinConfigure (GPIO PA1 U0TX);
    GPIOPinTypeUART (GPIO PORTA BASE, GPIO PIN 0 | GPIO PIN 1);
    UARTClockSourceSet (UARTO BASE, UART CLOCK PIOSC);
    UARTStdioConfig(0, 115200, 16000000);
    ADCSequenceDMAEnable(ADC0 BASE, 0);
    ADCSequenceConfigure (ADC0 BASE, 0, ADC TRIGGER PROCESSOR, 0);
    ADCSequenceStepConfigure (ADC0_BASE, 0, 0, ADC_CTL_TS);
    ADCSequenceStepConfigure(ADC0_BASE, 0, 1, ADC_CTL_TS);
    ADCSequenceStepConfigure (ADC0_BASE, 0, 2, ADC_CTL_TS);
ADCSequenceStepConfigure (ADC0_BASE, 0, 3, ADC_CTL_TS|ADC_CTL_IE|ADC_CTL_END);
    GPIOPinTypeGPIOOutput (GPIO PORTF BASE, RED LED|BLUE LED|GREEN LED);
    GPIOPinTypeGPIOInput(GPIO PORTF BASE, BUTTON);
    GPIOPadConfigSet (GPIO PORTF BASE, GPIO PIN 4, GPIO STRENGTH 2MA,
GPIO PIN TYPE STD WPU);
    // Sets up interrupts.
    IntEnable(INT WTIMEROA);
    TimerIntEnable(WTIMERO BASE, TIMER_TIMA_TIMEOUT);
    IntEnable(INT GPIOF);
    GPIOIntTypeSet (GPIO PORTF BASE, BUTTON, GPIO FALLING EDGE);
    GPIOIntEnable (GPIO PORTF BASE, GPIO INT PIN 4);
    IntEnable(INT UARTO);
    UARTIntEnable(UARTO_BASE, UART_INT_RX | UART_INT_RT);
    IntEnable(INT UDMAERR);
    IntMasterEnable();
    // Enables stuff.
    TimerEnable (WTIMERO BASE, TIMER A);
    ADCSequenceEnable(ADC0 BASE, 0);
    UARTprintf("\n\rEnter command (R/r: Red LED On/Off\tG/q: Green LED On/Off\tB/b:
Blue LED On/Off\tT/t:"
            "Temperature in Celsius/Fahrenheit\tS: LED Status)\n\r");
    while (1)
void timerhandler(void) {
    // Clears interrupt flag.
    TimerIntClear(WTIMERO BASE, TIMER TIMA TIMEOUT);
    // Starts ADC conversion.
    ADCIntClear (ADC0 BASE, 0);
    ADCProcessorTrigger(ADC0_BASE, 0);
    uDMAChannelEnable(UDMA CHANNEL ADC0);
}
void buttonpresshandler() {
```

```
GPIOIntClear (GPIO PORTF BASE, GPIO INT PIN 4);
    rLED = !rLED;
    gLED = !gLED;
   bleD = !bleD;
    ledSequence = (rLED ? RED LED : 0)|(gLED ? GREEN LED : 0)|(bLED ? BLUE LED : 0);
    GPIOPinWrite (GPIO PORTF BASE, RED LED|BLUE LED|GREEN LED, ledSequence);
void uartinthandler() {
    uint32 t ui32Status;
    // Clears the interrupt.
    ui32Status = UARTIntStatus (UARTO BASE, true);
    UARTIntClear(UARTO BASE, ui32Status);
    // Grabs data from the UART.
    cmd = UARTCharGetNonBlocking(UART0_BASE);
    switch (cmd) {
    // The first 6 commands set the status of the corresponding LEDs.
    case 'R':
       rLED = true;
       break;
    case 'r':
       rLED = false;
       break;
    case 'G':
        qLED = true;
       break;
    case 'q':
       gLED = false;
       break;
    case 'B':
       bLED = true;
       break;
    case 'b':
       bLED = false;
       break;
    case 'T':
        // Collects data from the buffer and averages the temperature.
        for (i = 0; i < MEM BUFFER SIZE; i++) {</pre>
            tAverage += destination[i];
            destination[i] = 0;
        tAverage = (tAverage + (MEM_BUFFER_SIZE/2))/MEM_BUFFER_SIZE;
        // Converts average to celsius and outputs to the terminal.
        tCelsius = (1475 - ((2250*tAverage))/4096)/10;
        uDMAChannelTransferSet(UDMA_CHANNEL_ADC0 | UDMA_PRI_SELECT, UDMA_MODE_AUTO,
(void *)(ADC0 BASE + ADC O_SSFIFO0), destination, MEM_BUFFER_SIZE);
        uDMAChannelEnable(UDMA CHANNEL ADC0);
        UARTprintf("Temperature: %3dC\n\r", tCelsius);
        break;
    case 't':
        \ensuremath{//} Collects data from the buffer and averages the temperature.
        for (i = 0; i < MEM BUFFER SIZE; i++) {</pre>
            tAverage += destination[i];
            destination[i] = 0;
        tAverage = (tAverage + (MEM BUFFER SIZE/2))/MEM BUFFER SIZE;
        tCelsius = (1475 - ((2250*tAverage))/4096)/10;
```

```
// Converts average to fahrenheit and outputs to the terminal.
        tFahrenheit = ((tCelsius*9) + 160)/5;
       uDMAChannelTransferSet(UDMA CHANNEL ADCO | UDMA PRI SELECT, UDMA MODE AUTO,
(void *) (ADCO BASE + ADC O SSFIFOO), destination, MEM BUFFER SIZE);
       uDMAChannelEnable(UDMA CHANNEL ADCO);
       UARTprintf("Temperature: %3dF\n\r", tFahrenheit);
       break;
    case 'S':
       // Displays the status of the RGB. Format is <R, G, B>
       UARTprintf("RGB Status: <%i, %i, %i>\n\r", rLED, gLED, bLED);
       break;
    default:
       // Occurs when the TivaC receives data not accounted for.
       UARTprintf("Command %c not found.\n\r", cmd);
    ledSequence = (rLED ? RED LED : 0)|(gLED ? GREEN LED : 0)|(bLED ? BLUE LED : 0);
   GPIOPinWrite (GPIO PORTF BASE, RED LED|BLUE LED|GREEN LED, ledSequence);
void uDMAErrorHandler(void)
   uint32 t ui32Status;
   ui32Status = uDMAErrorStatusGet();
   if(ui32Status)
       uDMAErrorStatusClear();
   }
}
```

2. Block diagram and/or Schematics showing the components, pins used, and interface.

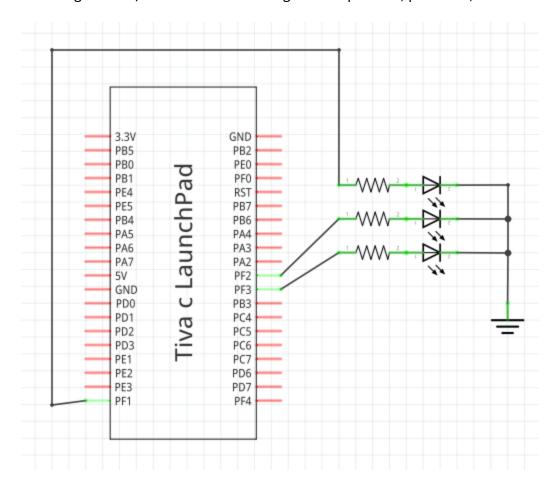

3. Screenshots of the IDE, physical setup, debugging process - Provide screenshot of successful compilation, screenshots of registers, variables, graphs, etc.

```
warning #10247-D: creating output section "i.UARTEN Finished building target: "Assignment01a.out"

**** Build Finished ****

warning #10247-D: creating output section "i.UAF Finished building target: "Assignment01b.out"

**** Build Finished ****

warning #10247-D: creating output section 1.UDMAE Finished building target: "Assignment01c.out"

**** Build Finished ****
```

## 4. Declaration

I understand the Student Academic Misconduct Policy - http://studentconduct.unlv.edu/misconduct/policy.html

"This assignment submission is my own, original work". Do V. Le  $\ensuremath{\mathsf{V}}$