QPOS SDK Integration Guide

Document Version: <3.3>

| Version | Date | Author | Description | |
|---------|------------|--------------|------------------------------------|--|
| 1.0 | 2013.07.12 | Longhui.xiao | Chinese Version | |
| 2.0 | 2013.08.10 | William.tang | English Version | |
| 2.1 | 2013.09.20 | William.tang | Support Audio and BT mode. | |
| 2.2 | 2013.09.21 | Xu.Wang | Added QPOS Reader Series | |
| 2.3 | 2014.03.11 | Longhui Xiao | Added icc apdu | |
| 2.4 | 2014.03.26 | Longhui Xiao | Added set the sleep time interface | |
| 2.5 | 2014.04.08 | Longhui Xiao | Added update work key interface | |
| 2.6 | 2015.02.11 | Yanhao Lu | Perfect the documents | |
| 2.7 | 2015.09.07 | Longhui Xiao | Added resetPosStatus | |
| | | | interface. | |
| | | | Perfect the documents | |
| 2.8 | 2016.12.27 | Qianmeng | Added doSetManagemgentKey | |
| | | Chen | and doSetBuzzerOperation | |
| | | | interface | |
| 2.9 | 2017.01.04 | Qianmeng | Added doUpdateIPEKOperation | |
| | | Chen | interface and update the doc | |
| 3.0 | 2017.01.11 | Qianmeng | Added updateEmvAPP and | |
| | | Chen | updateEmvCAPK interface | |



| | 1 | | . 1 |
|----------|----|----|-----|
| Δ | nd | ro | 1/1 |
| | | | |

| 3.1 | 2017.03.03 | Qianmeng | Added scanQpos2Mode and | |
|-----|------------|-----------|-------------------------------|--|
| | | Chen | stopQpos2Mode interface | |
| 3.2 | 2022.04.25 | Qianmeng | Added the api | |
| | | Chen | operateLEDByType and | |
| | | | playBuzzerByType | |
| 3.3 | 2022.09.19 | Shasha Lv | Modify the description for | |
| | | | onRequestGenerateTransportKey | |
| | | | and onReturnUpdateIPEKResult | |
| 3.4 | 2024.01.04 | Shasha Lv | Added the api sendCvmPin and | |
| | | | getEncryptData() | |

Copyright notification

Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner. The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent - or other industrial or intellectual property rights.

> © Dspread technology CO.,LTD All rights are reserved.



Table

| 1 INTR | ODUCTION | 7 |
|--------|--|----|
| 1.1 | SUMMARY | 7 |
| 1.2 | CONNECTION MAP FOR QPOS | 8 |
| 1.3 | CONNECTION MAP FOR QPOS READER | 9 |
| 1.4 | PURPOSE AND SCOPE | 9 |
| 1.5 | GLOSSARY AND DEFINITIONS | 9 |
| 1.6 | Transaction Key | 10 |
| 1.7 | EMVCO TERMINAL TYPE APPROVAL | 10 |
| 1.8 | Message Format | 10 |
| 1.9 | EMV STANDARD TAGS | 10 |
| 1.10 | PROPRIETARY TAGS DESCRIPTION | 10 |
| 1.11 | BLUETOOTH MODE | 11 |
| 1.11.1 | How to get QPOS/SPOS BLUETOOTH ID | 11 |
| 1.11.2 | HOW TO CONNECT QPOS/SPOS THROUGH BLUETOOTH | 11 |
| 1.12 | MANAGEMENT KEYS FOR QPOS | 12 |
| 1.13 | FIRMWARE UPGRADE FOR QPOS | 12 |
| 2 ANDI | ROID SDK API | 13 |
| 2.1 | SYSTEM REQUIREMENT | 13 |
| 2.1.1 | DEVELOPMENT ENVIRONMENT | 13 |
| 2.1.2 | OS Version Requirement | 13 |
| 2.2 | SDK FRAMEWORK | 14 |
| 2.3 | ANDROID PERMISSION | 15 |
| 2.4 | CLASSIFICATION PRINCIPLE IN SDK METHODS | 15 |
| 2.4.1 | INIT METHODS | 15 |
| 2.4.2 | Interactive Methods | 16 |
| 2.4.3 | LISTENER METHODS | 18 |
| 2.5 | TRANSACTION FLOW | 21 |
| 2.5.1 | EMV ICC Transaction Flow For QPOS | 21 |
| 2.5.2 | EMV ICC Transaction Flow for QPOS Reader | 22 |
| 2.5.3 | EMV ICC Transaction Description | 23 |
| 2.5.4 | MAGNETIC TRANSACTION FLOW | 26 |
| 2.5.5 | MAGNETIC TRANSACTION DESCRIPTION | 26 |
| 2.6 | API METHODS REFERENCE | 28 |
| 2.6.1 | GETSDKVERSION | 28 |
| 2.6.2 | RESETQPOS | 28 |
| 2.6.3 | SCANQPos2Mode | 28 |
| 2.6.4 | STOPQPOS2MODE | 29 |

| , | 别合选传 DSPREAD | Dspread Technology Co. ,Ltd | Android | |
|---|-----------------|-----------------------------|---------|----|
| | 2.6.5 | OPENAUDIO | | 29 |
| | 2.6.6 | CLOSEAUDIO | | 29 |
| | 2.6.7 | CONNECTBT | | 30 |
| | 2.6.8 | CONNECTBLUETOOTHDEVICE | | 30 |
| | 2.6.9 | DISCONNECTBT | | 30 |
| | 2.6.10 | ISQPOSPRESENT | | 31 |
| | 2.6.11 | GETQPOSID | | 31 |
| | 2.6.12 | GETQPOSINFO | | 31 |
| | 2.6.13 | SETAMOUNT | | 32 |
| | 2.6.14 | CANCELSETAMOUNT | | 32 |
| | 2.6.15 | DOTRADE | | 33 |
| | 2.6.16 | DOCHECKCARD | | 33 |
| | 2.6.17 | S DOEMVAPP | | 34 |
| | 2.6.18 | CANCELSETAMOUNT | | 34 |
| | 2.6.19 | SETAMOUNT | | 34 |
| | 2.6.20 | SELECTEMVAPP | | 35 |
| | 2.6.21 | CANCELSELECTEMVAPP | | 35 |
| | 2.6.22 | FINALCONFIRM | | 35 |
| | 2.6.23 | SENDONLINEPROCESSRESULT | | 36 |
| | 2.6.24 | ISSERVERCONNECTED | | 36 |
| | 2.6.25 | SENDTIME | | 36 |
| | 2.6.26 | SETAMOUNTICON | | 37 |
| | 2.6.27 | GETPIN | | 37 |
| | 2.6.28 | POWERONICC | | 38 |
| | 2.6.29 | POWEROFFICC | | 38 |
| | 2.6.30 | SENDAPDU | | 38 |
| | 2.6.31 | SETPOSSLEEPTIME | | 38 |
| | 2.6.32 | UPDATEEMVCAPK | | 39 |
| | 2.6.33 | READEMVAPPCONFIG | | 39 |
| | 2.6.34 | READEMVCAPKCONFIG | | 39 |
| | 2.6.35 | UDPATEWORKKEY | | 40 |
| | 2.6.36 | MACKEYENCRYPT | | 40 |
| | 2.6.37 | ISQPOSPRESENT | | 41 |
| | 2.6.38 | SETMASTERKEY | | 41 |
| | 2.6.39 | CALCMACSINGLE | | 41 |
| | 2.6.40 | CALCMACDOUBLE | | 42 |
| | 2.6.41 | CALCMACSINGLENOCHECK | | 42 |
| | 2.6.42 | CALCMACDOUBLENOCHECK | | 42 |
| | 2.6.43 | DOWNLOADRSAPUBLICKEY | | 43 |
| | 2.6.44 | UPDATEMASTERKEYRANDOM | | 43 |
| | 2.6.45 | UPDATEMASTERKEY | | 44 |
| | 2.6.46 | PINKEY_TDES | | 45 |
| | 2.6.47 | PINKEY_TDESNoCHECK | | 45 |
| | 2.6.48 | SETSYSTEMDATETIME | | 45 |

| 鼎合道 DSPRE | 远传 ^{EAD} Dspread Technology Co. ,Ltd | Android |
|--------------|--|---------|
| 2.6.49 | SETMERCHANTID | 46 |
| 2.6.50 | SETTERMINALID | 46 |
| 2.6.51 | GETMAGNETICTRACKPLAINTEXT | 46 |
| 2.6.52 | GETCARDNO | 47 |
| 2.6.53 | GETICCCARDNO | 47 |
| 2.6.54 | POWEROFFNFC | 47 |
| 2.6.55 | SENDAPDUBYNFC | 48 |
| 2.6.56 | POWERONNFC | 48 |
| 2.6.57 | CBC_MAC | 48 |
| 2.6.58 | CBC_MACNOCHECK | 49 |
| 2.6.59 | INQUIREECQAMOUNT | 49 |
| 2.6.60 | ISIDLE | 50 |
| 2.6.61 | ANLYSEMVICCDATA | 50 |
| 2.6.62 | VIPOSBATCHSENDAPDU | 50 |
| 2.6.63 | SYNVIPOSBATCHSENDAPDU | 50 |
| 2.6.64 | ANLYSEMVICCDATA_QF | 51 |
| 2.6.65 | ICCCASHBACK | 51 |
| 2.6.66 | SETPOSPRESENT | 52 |
| 2.6.67 | SETCARDTRADEMODE | 52 |
| 2.6.68 | SETPINPADFLAG | 52 |
| 2.6.69 | QPOSSTATUS | 53 |
| 2.6.70 | READBUSINESSCARD | 53 |
| 2.6.71 | WRITEBUSINESSCARD | 53 |
| 2.6.72 | SYNCREADBUSINESSCARD | 54 |
| 2.6.73 | SYNCWRITEBUSINESSCARD | 55 |
| 2.6.74 | CONFIRMAMOUNT | 55 |
| 2.6.75 | SETAMOUNT | 55 |
| 2.6.76 | GETPIN | 56 |
| 2.6.77 | DOSETMANAGEMENTKEY | 56 |
| 2.6.78 | DOSETBUZZEROPERATION | 57 |
| 2.6.79 | DOSETBUZZEROPERATION | 57 |
| 2.6.80 | DOUPDATEIPEKOPERATION | 57 |
| 2.6.81 | UPDATEIPEKOPERATIONBYKEYTYPE | 58 |
| 2.6.82 | UPDATEEMVAPP | 58 |
| 2.6.83 | UPDATEEMVCAPK | 59 |
| 2.6.84 | GETUPDATEKEY | 59 |
| 2.6.85 | SETSLEEPMODETIME | 60 |
| 2.6.86 | GENERATETRANSPORTKEY | 60 |
| 2.6.87 | READGASCARD | 61 |
| 2.6.88 | WRITEGASCARD | 61 |
| 2.6.89 | UPDATEIPEKBYTRANSPORTKEY | 62 |
| 2.6.90 | UPDATEWORKKEYBYTRANSPORTKEY | 62 |
| 2.6.91 | SENDCVV | 63 |
| 2 6 92 | GETENCRYPTEDDATARI OCK | 64 |

| ー | 传 ND Dspread Technology Co. ,Ltd | Android |
|---------|--|---------|
| 2.6.93 | DISPLAYQRCODE | 64 |
| 2.6.94 | OPERATELEDBYTYPE | 65 |
| 2.6.95 | PLAYBUZZERBYTYPE | 66 |
| 2.6.96 | SENDNFCPROCESSRESULT | 66 |
| 2.6.97 | GETICCTAG | 67 |
| 2.6.98 | GETENCRYPTEDTRACK2DATA | 67 |
| 2.6.99 | LCDSHOWCUSTOMDISPLAY | 68 |
| 2.6.100 | SETCUSTOMLOGODISPLAY | 68 |
| 2.6.101 | SETCUSTOMLOGODISPLAY | 69 |
| 2.6.102 | SENDCVMPIN | 69 |
| 1.1 | DELEGATE METHODS REFERENCE | 70 |
| 1.1.1 | ONREQUESTWAITINGUSER | 70 |
| 1.1.2 | ONQPOSIDRESULT | 70 |
| 1.1.3 | ONQPOSINFORESULT | 70 |
| 1.1.4 | onDoTradeResult | 71 |
| 1.1.5 | ONREQUESTSETAMOUNT | 71 |
| 1.1.6 | ONREQUESTSELECTEMVAPP | 71 |
| 1.1.7 | ONREQUESTISSERVERCONNECTED | 72 |
| 1.1.8 | ONREQUESTFINALCONFIRM | 72 |
| 1.1.9 | ONREQUESTONLINEPROCESS | 73 |
| 1.1.10 | ONREQUESTTIME | 73 |
| 1.1.11 | ONREQUESTTRANSACTIONRESULT | 73 |
| 1.1.12 | ONREQUESTTRANSACTIONLOG | 74 |
| 1.1.13 | ONREQUESTBATCHDATA | 74 |
| 1.1.14 | ONREQUESTQPOSCONNECTED | 74 |
| 1.1.15 | ONREQUESTQPOSDISCONNECTED | 74 |
| 1.1.16 | ONREQUESTNOQPOSDETECTED | 75 |
| 1.1.17 | ONERROR | 75 |
| 1.1.18 | ONREQUESTDISPLAY | 75 |
| 1.1.19 | ONREQUESTUPDATEWORKKEYRESULT | 76 |
| 1.1.20 | ONGETCARDNORESULT | 76 |
| 1.1.21 | ONRETURNREVERSALDATA | 76 |
| 1.1.22 | ONRETURNGETPINRESULT | 76 |
| 1.1.23 | ONRETURNPOWERONICCRESULT | 77 |
| 1.1.24 | ONRETURNPOWEROFFICCRESULT | 77 |
| 1.1.25 | ONRETURNAPDURESULT | 78 |
| 1.1.26 | ONRETURNSETSLEEPTIMERESULT | 78 |
| 1.1.27 | ONREQUESTCALCULATEMAC | 78 |
| 1.1.28 | ONRETURNCUSTOMCONFIGRESULT | 79 |
| 1.1.29 | ONRETURNSETMASTERKEYRESULT | 79 |
| 1.1.30 | ONRETURNBATCHSENDAPDURESULT | 79 |
| 1.1.31 | ONRETURNICCCASHBACK | 80 |
| 1.1.32 | ONUPDATEPOSFIRMWARERESULT | 80 |
| 1.1.33 | ONRETURNDOWNLOADRSAPUBLICKEY | 80 |

| ч | 4 鼎合 | 远传 | |
|---|-------------|--|----------|
| | DSPR | 远传 EAD Dspread Technology Co. ,Ltd | And roid |
| | 1.1.34 | ONPINKEY_TDES_RESULT | 81 |
| | 1.1.35 | ONUPDATEMASTERKEYRESULT | 81 |
| | 1.1.36 | ONEMVICCEXCEPTIONDATA | 81 |
| | 1.1.37 | ONSETMANAGEMENTKEY | 82 |
| | 1.1.38 | onSetBuzzerResult | 82 |
| | 1.1.39 | ONRETURNUPDATEIPEKRESULT | 82 |
| | 1.1.40 | ONRETURNUPDATEEMVRESULT | 82 |
| | 1.1.41 | ONRETURNUPDATEEMVRIDRESULT | 83 |
| | 1.1.42 | ONREQUESTDEVICESCANFINISHED | 83 |
| | 1.1.43 | ONDEVICEFOUND | 83 |
| | 1.1.44 | ONREQUESTUPDATEKEY | 84 |
| | 1.1.45 | ONSETSLEEPMODETIME | 84 |
| | 1.1.46 | ONREQUESTGENERATETRANSPORTKEY | 84 |
| | 1.1.47 | ONREADGASCARDRESULT | 85 |
| | 1.1.48 | ONWRITEGASCARDRESULT | 85 |
| | 1.1.49 | ONRETURNOPERATELEDBYTYPERESULT | 85 |
| | 1.1.50 | ONRETURNPLAYBUZZERBYTYPERESULT | 86 |
| | 1.1.51 | ONRETURNDISPLAYQRCODERESULT | 86 |
| | 1.1.52 | ONRETURNNFCBATCHDATA | 86 |
| | 1.1.53 | ONLCDSHOWCUSTOMDISPLAY | 87 |
| | 1 1 54 | ONSETCUSTOMLOGODISPLAY | 87 |

1 Introduction

1.1Summary

QPOS is a mobile payment card reader device with pinpad that works with mobile devices such as smart phone. It provides merchants and consumers a safe and convenient way to make mobile payments. QPOS can communicate with the mobile device through many methods, such as: audio jack, Bluetooth and USB cable.

QPOS Reader is another mobile payment card reader device without pinpad. QPOS Reader can communicate with the mobile device through audio jack or USB cable.

SPOS is a yet another mobile payment card reader device with pinpad and touch screen, SPOS can communicate with the mobile device through many methods, such as: audio jack, Bluetooth and USB cable. The touch screen can be used to capture the signature of consumer in an electronic way.


QPOS share a lot in common, the SDK API is almost same for QPOS. In the following chapters.

Features:


- Ensure secure transactions: integrated keyboard and multiple encryption algorithms to ensure secure transactions.
- Accept all types of bank card: supports magnetic stripe card, contact EMV IC card and contactless EMV IC card.
- Adapts to more smart devices through audio jack: Supports over 2,000 smart devices through audio jack.
- Fulfill global standards: EMV L1&L2, PCI PTS and more.
- Supports all types of mobile systems: Such as iOS, Android, Windows phone and PC OS.

This document is to help readers to integrate QPOS android SDK into their mobile payment APPs.

1.2Connection map For QPOS

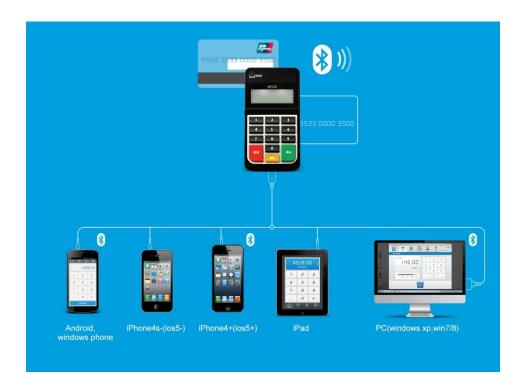

1.3 Connection map For QPOS Reader

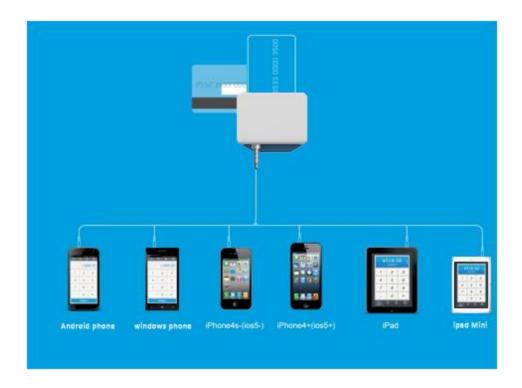

1.4Purpose and Scope

This document is to describe the APIs of QPOS android SDK . The goal of the QPOS android SDK is to communicate between the smart device and QPOS.

The readers of the document are those who plans to use QPOS android SDK in their application.

1.5Glossary and Definitions

| 1 | |
|----------|--|
| DUKPT | DERIVED UNIQUE KEY PER TRANSACTION. |
| PK_Q | QPOS Public Key |
| SK_Q | QPOS Private Key |
| PK_P | Payment Operator Public Key |
| SK_P | Payment Operator Private Key |
| PK_T | Terminal Manufacturer Public Key |
| SK_T | Terminal Manufacturer Private Key |
| KSN | Key Serial Number |
| BDK | Base Derivation Key |
| IPEK | Initial PIN Encryption Key |
| DATA-key | The data key to be generated by KSN and IPEK or by KSN and BDK |

PIN-key

The PIN key to be generated by KSN and IPEK or by KSN and BDK

1.6Transaction Key

Unless otherwise specified, Triple DES encryption with EBC and DUKPT key management are assumed. DUKPT is specified in ANSI X9.24 part 1.

Refer to

http://en.wikipedia.org/wiki/DUKPT#Key_Register_.2832_hexadecimal_digits.29

In the Demo, the default transaction keys refer to the following table.

| Key Name | Default | Length(Bytes) |
|-----------------|----------------------------------|---------------|
| KSN | 00000332100300e00001 | 20 |
| BDK | 0123456789ABCDEFFEDCBA9876543210 | 32 |

1.7EMVCo Terminal Type Approval

EMVCo has approved QPOS application EMVCo type for Terminal level 2. QPOS application is based on the requirements stated in the EMV 4.3 specification.

1.8Message Format

Messages within data communication protocols between the mobile payment application and QPOS EMV kernel are encoded as a BER-TLV (Basic Encoding Rules-Tag-Length-Value) which is defined in EMV 4.3 book3 Annex B.

1.9EMV Standard Tags

EMV Standard Tags are defined in EMV 4.3 book3 Annex A.

1.10 Proprietary Tags Description

| Tag | Description | Length(B | Key | Algorithm |
|------|--------------------------------------|----------|----------|------------|
| | | ytes) | | |
| 0xC0 | KSN of online message | 10 | No | No |
| 0xC3 | KSN of Batch | 10 | No | No |
| 0xC4 | Masked PAN | 0-10 | No | No |
| 0xC5 | Batch message ¹ | Var | DATA-key | Triple-Des |
| 0xC2 | Online message ³ | Var | DATA-key | Triple-Des |
| 0x70 | Online EMV data message ² | Var | No | No |

Note:

- 1. The **Batch message** is the Triple-Des encrypted result with Data-key. For using, first Triple-Des decrypted the **batch message** with **DATA-key**, the decrypted result is encoded as a BER-TLV which is defined in EMV 4.3 book3 Annex B.
- 2. The **Online EMV data message** is encoded as a BER-TLV which is defined in EMV 4.3 book3 Annex B.
- 3. The **Online message** is the Triple-Des encrypted result with Data-key. For using, first Triple-Des decrypted the **Online message** with **DATA-key**, the decrypted result is encoded as a BER-TLV which is defined in EMV 4.3 book3 Annex B and Proprietary Tags.

1.11 Bluetooth Mode

1.11.1 How to get QPOS/SPOS Bluetooth ID

QPOS Bluetooth ID is combined by 'QPOS' strings and the last-10 numbers of the label. For example:

QPOS_ID := 12070002000200100151 QPOS_BT_ID := QPOS0200100151




(The label is sticked on QPOS back cover)

SPOS Bluetooth ID is similar to QPOS' but starting with SPOS.


1.11.2 How to connect QPOS/SPOS through Bluetooth

| ITEM | DEFAULT |
|----------------|---------|
| CONNECT METHOD | Manual |
| PASSWORD | 1234 |

1.12 Management Keys For QPOS

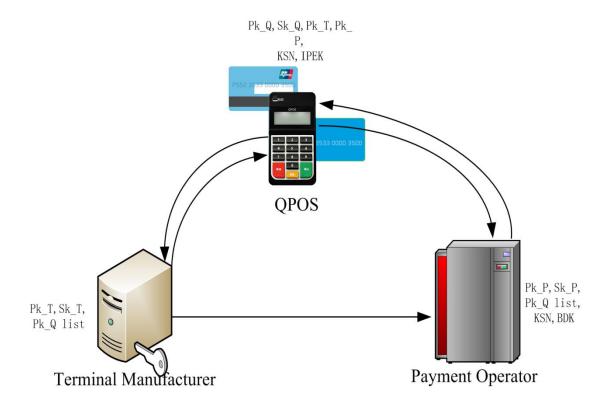

1.13 Firmware Upgrade For QPOS

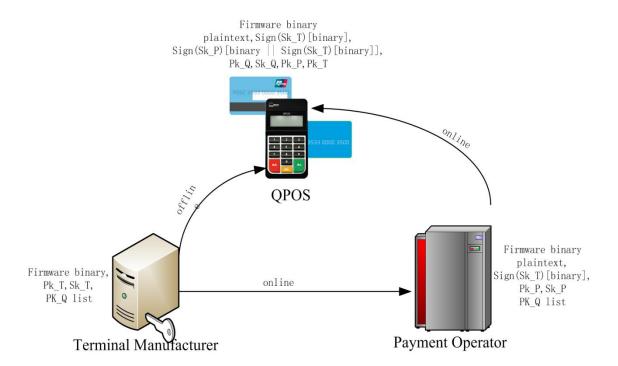

2 Android SDK API

2.1System Requirement


2.1.1 Development Environment

JDK: Java 1.6 or above

2.1.2 OS Version Requirement

OS: Android 2.2 and all above

2.2SDK Framework

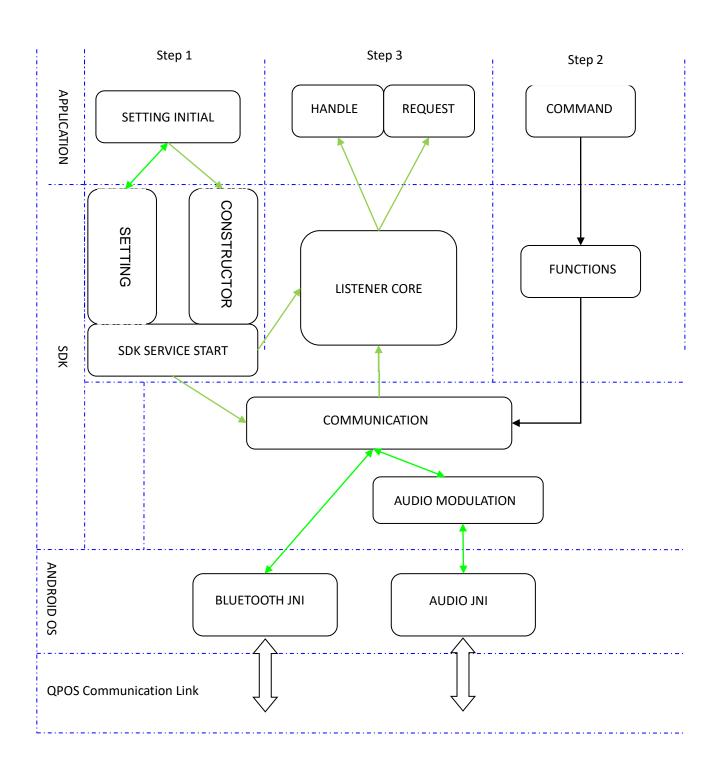



2.3 Android Permission

The library needs permission to use the audio and Bluetooth resource. The following lines must be added to the **AndroidManifest.xml** file in the APP project.

2.4 Classification Principle in SDK Methods

According to the SDK framework and the methods feature, all methods are devided into three parts:

1. Init methods;

}

- 2. Interactive methods:
- 3. Listener methods.

To avoid the application block and improve the speed of data interaction between the smart terminal and QPOS, the SDK framework is designed to work under asynchronous mode.

2.4.1 Init Methods

The Init methods group is the entry of SDK library, to create the core instance, and build the communication connection between the smart terminal and SDK through the audio jack or the Bluetooth with SPP profile, etc. The method named 'QPOSService' is the core of SDK library. Before the APP create this core instance with the parameter of "CommunicationMode mode", the APP must register all the sub-functions in 'QPOSServiceListener'. Then the APP call the sub-function named 'QPOSService.initListener' of the constructor method named 'QPOSService', the method named 'QPOSServiceListener' should be the input parameter of 'QPOSService.initListener'.

The detailed description about "QPOSServiceListener" refers to the Listener methods. Example code of creating the core instance, see the following code: public static enum CommunicationMode{

BLUETOOTH,// bluetooth mode

AUDIO// audio mode

Audio Mode:

QPOSService pos = QPOSService.getInstance(CommunicationMode.AUDIO); pos.initListener(MainActivity.this, listener);

Bluetooth Mode:

QPOSService pos = QPOSService.getInstance(CommunicationMode.BLUETOOTH); pos.initListener(MainActivity.this, listener);

| Method Name | Description |
|----------------|--|
| QPOSService | Constructor Method |
| getSdkVersion | Get this SDK version |
| resetQPOS | Reset and bring the QPOS back to a known initial state. |
| resetPosStatus | Reset and bring the QPOS back to a known initial state. Synchronized methods |
| openAudio | Start the audio instance for playing, recording and modulating |
| closeAudio | Stop the audio instance for playing, recording and modulating |
| connectBT | Connect to QPOS by Bluetooth, using for |
| | exchanging data between APP and QPOS |
| disconnectBT | Disconnect from QPOS with bluetooth |

2.4.2 Interactive Methods

The Interactive methods deal with the transaction from the application to QPOS, to get the device information of QPOS, to confirm the transaction information, and to set the transaction command etc. The relative handler of these methods is defined into sub functions of 'QPOSServiceListener'. Some of these methods are triggered by the relative handle methods prefixed by 'onRequest' in 'QPOSServiceListener', and the handler result of other methods needs to be returned by the relative handler methods prefixed by 'on', except for 'onRequest'.

| Method Name | Description | | Handle Name |
|-------------|----------------------------------|---------|----------------|
| getQposId | Get the serial number about Qpos | | onQposIdResult |
| ξειχροσία | Get the config | | |

| DSPREAD Dspread Techno | nogy Co. ,Lia | | Android |
|-------------------------|--|----------|------------------------|
| getQposInfo | information from Qpos | → | onQposInfoResult |
| setAmount | Set the amount and transaction type required for EMV transaction. | • | onRequestSetAmount |
| cancelSetAmount | Cancel the process about setting amount | ← | onRequestSetAmount |
| doTrade | Send the command as swiping/inserting card to QPOS. | - | onDoTradeResult |
| doEmvApp | Send the command as executing the EMV transaction flow to QPOS | | no |
| selectEmvApp | Select one application of the application list returned from EMV kernel, then set the application ID to EMV kernel | ← | onRequestSelectEmvApp |
| cancelSelectEmvApp | Cancel the process about setting one application | — | onRequestSelectEmvApp |
| finalConfirm | Send transaction confirmation command to Qpos | — | onRequestFinalConfirm |
| sendOnlineProcessResult | Send the connectivity status about network to Qpos | | |
| isServerConnected | Send the connectivity status about network to Qpos | | |
| sendTime | Set the date and time formatted as 'YYMMDDHHMMS S' to Qpos,based the smart terminal date and time | ← | onRequestTime |
| sendPin | Set the pin to QPOS Reader | — | <u>onRequestSetPin</u> |

| <u>emptyPin</u> | Set the empty pin to QPOS Reader | — | <u>onRequestSetPin</u> |
|------------------|---|----------|----------------------------------|
| <u>cancelPin</u> | Set cancel to QPOS Reader | ← | onRequestSetPin |
| powerOnIcc | Turn on the EMV card. | ← | onReturnPowerOnIccResu lt |
| powerOffIcc | Turn off the EMV card. | ← | onReturnPowerOffIccResu lt |
| sendApdu | Send data to EMV card in raw APDU formats. This is the EMV Level 1 protocol and developers can develop their only EMV Level 2 application | ← | onReturnApduResult |
| setPosSleepTime | Set the pos sleep time | ← | onReturnSetSleepTimeRes ult |
| udpateWorkKey | update the pos work key | ← | onRequestUpdateWorkKe yResult |
| setMasterKey | update the pos master key | ← | onReturnSetMasterKeyRe sult |

2.4.3 Listener Methods

The Listener methods deal with the event and the handler from QPOS to the application, to handle all events from QPOS to APP, and to handle the returned result of some commands from the APP to QPOS. The method named 'QPOSService' is the constructor method, and the method named 'QPOSServiceListener' must sub-function be registered in the "QPOSService.initListener" of the constructor method. Some sub-functions 'QPOSServiceListener' are either mandatory or optional. Here we recommend the developer to define all sub-functions referring to the following table. Even if some sub-functions are optional, it is better to define them as Null functions.

| Handle Name | Description | | Method Name |
|----------------------|---|---|-------------|
| onRequestWaitingUser | Qpos is ready and waiting for swiping or inserting a EMV card | О | no |

| DSPREAD Dspread Technology Co., Ltd Android | | | | |
|---|--|---|----------|-----------------------------|
| onQposIdResult | Return the serial number about Qpos | 0 | ← | getQposId |
| onQposInfoResult | Return the config information about Qpos | 0 | ← | getQposInfo |
| onDoTradeResult | Return the action about swiping, inserting the ICC, canceling etc. | m | ← | doTrade |
| onRequestSetAmount | Prompt to inputting the transaction amount to the application | m | → | setAmount |
| onRequestSelectEmvApp | Supply application list supported by EMV ICC to the application for selecting. | m | → | selectEmvApp |
| onRequestIsServerConnected | | m | → | isServerConnected |
| onRequestFinalConfirm | Finally confirm before generating the AC by the ICC COS | m | → | finalConfirm |
| onRequestOnlineProcess | EMV kernel request the online handler | m | → | sendOnlineProcessRes ult |
| onRequestTime | Request setting the date and time from Qpos | О | → | sendTime |
| onRequestTransactionResult | After finishing this transaction, EMV kernel report this transaction result to the application | m | | |

| DSPREAD Dspread Technolog | | | Android | |
|---------------------------|---|----------|----------|----------------------------------|
| | | | | |
| onRequestTransactionLog | After finishing this transaction, EMV kernel report this transaction log to the application | o | | |
| onRequestBatchData | EMV kernel send the batch data to the application | m | | |
| onRequestPosConnected | SDK report to the application about the connected event between smart terminal and Qpos | m | | |
| onRequestPosDisconnected | SDK report to the application about the disconnected event between smart terminal and Qpos | m | | |
| onRequestNoPosDetected | SDK report to the application about the no connected event between smart terminal and Qpos | m | | |
| onError | SDK report the error ID to the application during transaction | m | | |
| onRequestDisplay | SDK request display to the application | 0 | | |
| onRequestSetPin | SDK request the application to set PIN for the EMV card. Note, this is only available for QPOS Reader since QPOS Reader doesn't has PINPAD. | <u>o</u> | → | sendPin emptyPin cancelPin |
| onReturnPowerOnIccResult | Turn on the EMV card result | <u>O</u> | → | powerOnIcc |
| onReturnPowerOffIccResult | Turn off the EMV card result | <u>o</u> | → | powerOffIcc |
| onReturnApduResult | | <u>o</u> | → | sendApdu |

| onReturnSetSleepTimeResu lt | Set the pos sleep time | <u>o</u> | → | setPosSleepTime |
|----------------------------------|-------------------------|----------|----------|-----------------|
| onRequestUpdateWorkKey Result | update the pos work key | 0 | → | udpateWorkKey |
| onReturnSetMasterKeyResu lt | update the pos work key | 0 | → | setMasterKey |

2.5Transaction Flow

From the return of 'onDoTradeResult', the APP can find out whether consumer use an EMV ICC card or a magnetic card.

Public void **onDoTradeResult**(DoTradeResult result, Hashtable<String, String> decodeData); Enum **DoTradeResult** can be any of following

NONE,

ICC,

NOT_ICC,

BAD_SWIPE,

MCR,

MAG_HEAD_FAIL,

NO_RESPONSE,

TRACK2_ONLY,


NFC_TRACK2

When the delegate method "onDoTradeResult" is triggered to return the "Enum DoTradeResult" result, if this result is ICC, the APP will trigger the EMV ICC transaction flow, or this result is MCR, the APP will trigger the magnetic transaction flow.

2.5.1 EMV ICC Transaction Flow For QPOS

I

2.5.2 EMV ICC Transaction Flow for QPOS Reader

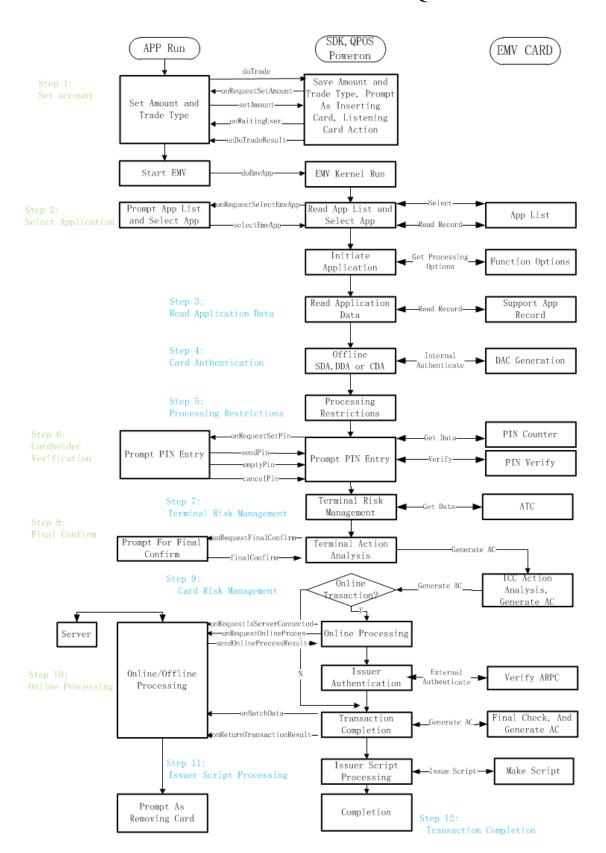

2.5.3 EMV ICC Transaction Description

Step 1: A transaction amount is needed for a payment transaction and it to be entered by the operator (or calculated by the inventory system) regardless of whether magnetic stripe card or EMV card. The **onRequestSetAmount** delegate method is triggered.

Public void onRequestSetAmount ();

The APP should prompt the operator to enter the amount and then call the **setAmount** to send the data back to EMV kernel.

Public void **setAmount**(String amount,String cashbackAmount,String currency,TransactionType transactionType);//2 decimal places.e.g.234.87

The **transactionType** can be any of the following:

GOODS,

SERVICES.

CASHBACK,

INQUIRY,

TRANSFER,

PAYMENT

The amount has an upper limit of 1000000000.00.

The user can also select to abort the transaction.

Public void cancelSetAmount();

Step 2: Select Application

An EMV card may support multiple payment applications. The EMV kernel reads the list of applications supported by the EMV card and asks the customer/operator to select the desired application.

The delegate method **onRequestSelectApplication** is triggered to return an array of application Ids.

Public void **onRequestSelectEmvApp** (ArrayList<String>applist);

The APP should prompt the user to select one application and then call the **selectEmvApp** method.

Public void **selectEmvApp** (int index)

The user can also select to abort the transaction.

Public void cancelSelectEmvApp ()

In most cases, there is only one default application and this step is skipped.

Step 3: Read Application Data

In this step, EMV kernel reads the necessary data from the EMV card. The EMV kernel asks for the terminal time through the **onRequestTime** method.

This step is only done between the EMV kernel and EMV card. If this step fails, **onRequestTransactionResult** will be returned and the EMV process stops.

Public void **onRequestTime** ();

The terminal time in YYMMDDHHmmss formats should be sent in response:

Public void **sendTime**(String terminalTime);

Step 4: Card Authentication

This step is only done between the EMV kernel and EMV ICC card. If this step fails, **onRequestTransactionResult** will be returned and the EMV process stops.

Step 5: Processing Restrictions

This step is only done between the EMV kernel and EMV ICC card. If this step fails, **onRequestTransactionResult** will be returned and the EMV process stops.

Step 6: Cardholder Verification

There are the different cardholder verification methods (CVMs) supported in an EMV transaction and some require the customer to enter a PIN (personal identifier number). If the EMV transaction requires PIN verification, the customer must enter his PIN by the keypad of QPOS. Where PIN is 4-12 digits. The PIN can be input via PINPAD for QPOS and SPOS, or can be input via mobile application for QPOS Reader.

Some applications (e.g. for small amount payment) does not require CVM (Cardholder Verification Method) and this step is skipped. But it is also possible that the EMV card decline a transaction without PIN. The customer/operator can press the **cancel** key on the keypad of QPOS to cancel the PIN entry and abort.

Step 7: Terminal Risk Management

This step is only done between the EMV kernel and EMV ICC card. If this step fails, **onRequestTransactionResult** will be returned and the EMV process stops.

Step 8: Terminal Action Analysis

This step is only done between the EMV kernel and EMV ICC card. If this step fails, **onRequestTransactionResult** will be returned and the EMV process stops. At the end of this step, a final confirmation will be needed to proceed via **onRequestFinalConfirm**.

Public void **onRequestFinalConfirm**();

The APP should prompt the user for a confirmation to proceed. This gives the user a chance to review the amount, the payment method, etc.

A final confirmation is sent to EMV kernel by calling this:

public void finalConfirm(boolean isConfirmed);

Step 9: Card Risk Management

This step is only done between the EMV kernel and EMV ICC card. If this step fails, **onRequestTransactionResult** will be returned and the EMV process stops.

Step 10: Online Processing

An EMV transaction can either be online or offline. If online processing is required, then the **onRequestOnlineProcess** delegate method is triggered.

public void onRequestOnlineProcess(string tlv);

The parameter TLV contains the tag-length-value data structure returned by the EMV kernel. After that, the client APP should send the data to the payment operator. When the processing results are returned from the payment operator, it should send the results back to EMV kernel by sendOnlineProcessResult.

public void sendOnlineProcessResult(String tlv);

The data elements that are required are payment operator and issuer dependent. See **chapter 1.9** and the **EVM Book 3 Annex A** for the full list of tags and the TLV structure.

The following tags are usually required but are ICC dependent:

| Tags | Parameter |
|------|---|
| 0089 | Authorisation Code |
| 008A | Authorisation Response Code |
| 0091 | Issuer Authentication Data |
| 0071 | Issuer Script Template 1 (needed for Step 11) |
| 0072 | Issuer Script Template 2 (needed for Step 11) |

This step is skipped in offline processing.

Step 11: Issuer Scripts Processing

This step is handled transparently between the EMV kernel and EMV ICC card if issue scripts are present in the online processing results or skipped otherwise. This step is skipped in offline processing.

Step 12: Completion

In this step, EMV kernel sends back the final transaction result from the EMV card by the




public void onRequestBatchData (String tlv);

The data elements that are required are payment operator and issuer dependent. See the **EVM Book 3 Annex A** for the full list of tags and the TLV structure.

In this step, the client APP should store the results, display the results, print receipts, and prompt the user to remove the card from the QPOS device. Later, the batch data should be updated to the server for settlement.

2.5.4 Magnetic Transaction Flow

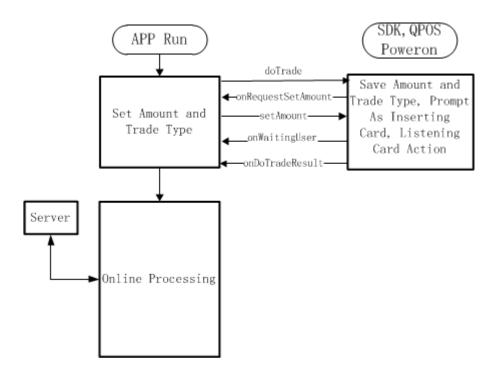

2.5.5 Magnetic Transaction Description

If a magnetic stripe card has been swiped, the encrypted PINBLOCK and the encrypted track data will be returned along with the **trackksn** and the **pinKsn** in the **decodeData Hashtable**.

Public void **onDoTradeResult**(DoTradeResult result, Hashtable<String, String> decodeData);

The **Hashtable** contain keys for the values:

| Key | Description |
|-----------|--|
| maskedPAN | Masked card number showing at most the first 6 and last 4 digits |
| | with in-between digits masked by "X" |





| expiryDate | 4-digit in the form of YYMM in the track data |
|--------------|---|
| cardHolderNa | The cardholder name as seen on the card. This can be up to 26 |
| me | characters. |
| serviceCode | 3-digit service code in the track data |
| track1Length | Length of Track 1 data |
| track2Length | Length of Track 2 data |
| track3Length | Length of Track 3 data |
| encTracks | Reserved |
| encTrack1 | Encrypted track 1 data with T-Des encryption key derived from |
| | DATA-key to be generated with trackksn and IPEK |
| encTrack2 | Encrypted track 2 data with T-Des encryption key derived from |
| | DATA-key to be generated with trackksn and IPEK |
| encTrack3 | Encrypted track 3 data with T-Des encryption key derived from |
| | DATA-key to be generated with trackksn and IPEK |
| partialTrack | Reserved |
| pinKsn | KSN of the Pin-block |
| trackksn | KSN of the track data |
| pinBlock1 | Encrypted PIN data with T-Des encryption key derived from PIN-key |
| | to be generated with pinKsn and IPEK |

Note:

1. The **PIN** format is defined as **ANSI X9.8**.

pinBlock := (**PIN^PAN**);

2.6API Methods Reference

2.6.1 getSdkVersion

| Signature | String getApiVersion() |
|-------------|------------------------|
| Inputs | None |
| Outputs | SDK version |
| Description | Return the SDK version |
| See also | |

2.6.2 resetQPOS

| Signature | void resetQPOS() |
|-------------|---|
| Inputs | None |
| Outputs | None |
| Description | Reset and bring the QPOS back to a known initial state. |
| See also | |

2.6.3 scanQPos2Mode

| Signature | List <bluetoothdevice> scanQPos2Mode(Context context)</bluetoothdevice> |
|-------------|---|
| Inputs | context |
| Outputs | List <bluetoothdevice>: the list of bluetoothDevice</bluetoothdevice> |
| Description | Start to scan the devices and return the list of scanned devices |
| See also | The reponse method of onDeviceFound |

2.6.4 stopQPos2Mode

| Signature | void stopQPos2Mode() |
|-------------|-------------------------|
| Inputs | None |
| Outputs | None |
| Description | Stop to scan the device |
| See also | |

2.6.5 openAudio

| Signature | void openAudio () |
|-------------|---|
| Inputs | None |
| Outputs | None |
| Description | Start the audio instance for playing, recording and modulating. |
| See also | |

2.6.6 closeAudio

| Signature | void closeAudio () |
|-------------|--|
| Inputs | None |
| Outputs | None |
| Description | Stop the audio instance for playing, recording and modulating. |
| See also | |



2.6.7 connectBT


| Signature | void connectBT (String address) |
|-------------|---|
| Inputs | Bluetooth mac address. |
| Outputs | None |
| Description | Connect to QPOS by Bluetooth, using for exchanging data between APP and QPOS. |
| See also | |

2.6.8 connectBluetoothDevice

| Signature | boolean connectBluetoothDevice(boolean auto,int bondtime, String blueToothAddress) |
|-------------|--|
| Inputs | auto: Whether automatic matching. |
| | bondtime: Connection timeout |
| | blueToothAddress : Bluetooth mac address. |
| Outputs | None |
| Description | Connect to QPOS by Bluetooth, using for exchanging data between APP and QPOS. |
| See also | |

2.6.9 disconnectBT

| Signature | void disconnectBT ()/void disconnectBT (String address) |
|-----------|---|
| Inputs | None/Bluetooth mac address. |
| Outputs | None |

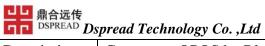

| Description | Connect to QPOS by Bluetooth, using for exchanging data between APP and QPOS. |
|-------------|---|
| See also | |

2.6.10 is Q pos Present

| Signature | boolean isQposPresent() |
|-------------|--|
| Inputs | None. |
| Outputs | BOOL: Presence flag of the Qpos. |
| Description | Check if an QPOS is connected and ready. |
| See also | |

2.6.11 getQposId

| Signature | getQposId() |
|-------------|---|
| Inputs | None |
| Outputs | None |
| Description | Retrieve the POS_ID of the QPOS device. Results are returned by onQposIdResult. |
| See also | onQposIdResult |

2.6.12 getQposInfo

| Signature | getQposInfo() |
|-----------|---------------|
| Inputs | None |
| Outputs | None |

| Description | Retrieve parameters about the QPOS device. Results are |
|-------------|--|
| | returned by onQposInfoResult which includes: firmware |
| | version, bootloader version, USB connection and charging |
| | status, battery level, and hardware version |
| | |
| See also | onQposInfoResult |

2.6.13 setAmount

| Signature | void setAmount(String amount, String amountDescribe, String currencyCode, TransactionType transactionType) |
|-------------|---|
| Inputs | amount: the amount for a transaction. If this is non-zero, amount cannot be zero. currencyCode: three digits of the currency code, e.g. "840" for USD transactionType: enum of the transaction type. |
| Outputs | None |
| Description | Set the amount, currency and type of a transaction. This method can be called before a transaction or in response to an onRequestSetAmount call requested by the EMV engine. The Enum TransactionType can be GOODS, SERVICES, CASHBACK, INQUIRY, TRANSFER, PAYMENT |
| See also | onRequestSetAmount , cancelSetAmount |

2.6.14 cancelSetAmount

| Signature | void cancelSetAmount () |
|-----------|-------------------------|
| | |

| Inputs | None |
|-------------|--|
| Outputs | None |
| Description | Cancel setting the amount of a transaction. This method can be called to abort a transaction in response to onRequestSetAmount |
| See also | onRequestSetAmount |

2.6.15 doTrade

| Signature | void doTrade(int timeout) |
|-------------|---|
| Inputs | Timeout |
| Outputs | None |
| Description | Check the status of the Magnetic Card Reader, the EMV Card reader, or NFC transceiver. It checks if a card has been swiped, a NFC card has been tapped or an EMV card is inserted. The result is returned by the onDoTradeResult delegate method. |
| See also | onDoTradeResult |

2.6.16 doCheckCard

| Signature | void doCheckCard (int timeout) |
|-------------|---------------------------------|
| Inputs | Timeout |
| Outputs | None |
| Description | Start transaction, no pin input |
| See also | onDoTradeResult |

2.6.17 s doEmvApp

| Signature | void doEmvApp (EmvOption emvOption) |
|-------------|---|
| Inputs | EmvOption: enum { START START_WITH_FORCE_ONLINE } |
| Outputs | None |
| Description | Start Emv app, Emv card |
| See also | onDoTradeResult |

2.6.18 cancelSetAmount

| Signature | void cancelSetAmount () |
|-------------|-------------------------|
| Inputs | None |
| Outputs | None |
| Description | Cancel Set Amount |
| See also | |

2.6.19 setAmount

| Signature | void setAmount (String amount, String cashbackAmount, |
|-----------|---|
| | String currencyCode, TransactionType transactionType) |
| | OR |
| | void setAmount (String amount, String cashbackAmount, |
| | String currencyCode, TransactionType transactionType, |
| | boolean isPosDisplayAmount) |
| Inputs | Amount: |
| | CashbackAmount |

| | 1 |
|-------------|--------------------|
| | CurrencyCode |
| | TransactionType |
| | IsPosDisplayAmount |
| Outputs | None |
| Description | Set amount |
| See also | |

2.6.20 selectEmvApp


| Signature | void selectEmvApp (int index) |
|-------------|-------------------------------|
| Inputs | Index: select emv app index |
| Outputs | None |
| Description | Select Emv App |
| See also | |

2.6.21 cancelSelectEmvApp

| Signature | void cancelSelectEmvApp () |
|-------------|----------------------------|
| Inputs | None |
| Outputs | None |
| Description | Cancel Select Emv App |
| See also | |

2.6.22 finalConfirm

| Signature | void finalConfirm (bool isConfirmed) |
|-----------|--------------------------------------|
| Inputs | isConfirmed |

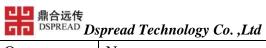

| Outputs | None |
|-------------|-------------|
| Description | Not support |
| See also | |

2.6.23 sendOnlineProcessResult


| Signature | void sendOnlineProcessResult (String tlv) |
|-------------|--|
| Inputs | Tlv: type + length + value |
| Outputs | None |
| Description | Send transaction results from the processor back to EMVSwipe |
| See also | onRequestOnlineProcess |

2.6.24 isServerConnected

| Signature | void isServerConnected (bool isConnected) |
|-------------|--|
| Inputs | isConnected: whether the signature connect the successfully or not |
| Outputs | None |
| Description | Send the connectivity status to EMVSwipe |
| See also | onRequestIsServerConnected |

2.6.25 sendTime

| Signature | void sendTime (String aterminalTime) |
|-----------|--------------------------------------|
| Inputs | aterminalTime: terminalTime |
| Outputs | None |

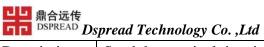

| Description | Send the terminal time in yyyyMMddHHmmss format to EMVSwipe |
|-------------|---|
| See also | onRequestTime |

2.6.26 setAmountIcon

| Signature | void setAmountIcon (String aAmountIcon)/ void setAmountIcon (AmountType amtType String aAmountIcon) |
|-------------|---|
| Inputs | amtType: amount type aAmountIcon: amountIcon |
| Outputs | None |
| Description | Set Amount symbol. String Data is a string with length below 4 characters, and can only be ASCII string. below are some valid examples: "RUP" "USD" "CNY" |
| See also | |

2.6.27 getPin

| Signature | void getPin(String aTransactionData) |
|-------------|--------------------------------------|
| Inputs | aTransactionData: transactionData |
| Outputs | None |
| Description | Get Pin |
| See also | onReturnGetPinResult |



2.6.28 powerOnIcc

| Signature | void powerOnIcc () |
|-------------|--|
| Inputs | None |
| Outputs | None |
| Description | Provide power to ICC for level 1 APDU exchange |
| See also | onReturnPowerOnIccResult |

2.6.29 powerOffIcc


| Signature | void powerOffIcc () |
|-------------|--|
| Inputs | None |
| Outputs | None |
| Description | Cut off power to ICC after level 1 APDU exchange |
| See also | onReturnPowerOnIccResult |

2.6.30 sendApdu

| Signature | void sendApdu (String apduStr) |
|-------------|---|
| Inputs | apduStr: apdu character string |
| Outputs | None |
| Description | Send APDU exchange to ICC. Response data are returned by onReturnApduResult |
| See also | onReturnApduResult |

2.6.31 setPosSleepTime

| Signature | void setPosSleepTime (int sleepTime) |
|-----------|--------------------------------------|
| | |

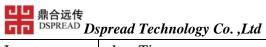

| Inputs | sleepTime |
|-------------|----------------------------|
| Outputs | None |
| Description | Set Sleep Time |
| See also | onReturnSetSleepTimeResult |

2.6.32 UpdateEmvCAPK


| Signature | void updateEmvCAPK (String emvAppCfg,String emvCapkCfg) |
|-------------|---|
| Inputs | emvAppCfg emvCapkCfg |
| Outputs | None |
| Description | update emv config files(CAPK and AID) |
| See also | onReturnCustomConfigResult |

2.6.33 readEmvAppConfig

| Signature | void readEmvAppConfig () |
|-------------|----------------------------|
| Inputs | None |
| Outputs | None |
| Description | read emv app config |
| See also | onReturnCustomConfigResult |

2.6.34 readEmvCapkConfig

| Signature | void readEmvCapkConfig () |
|-----------|---------------------------|
| Inputs | None |

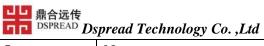


| Outputs | None |
|-------------|----------------------------|
| Description | read emv capk config |
| See also | onReturnCustomConfigResult |

2.6.35 udpateWorkKey

| Signature | void udpateWorkKey (String pik,String pikCheck,String trk,String trkCheck,String mak,String makCheck,String tnsk,String tnskCheck,int keyIndex,int timeout) |
|-------------|---|
| Inputs | pik: |
| | pikCheck |
| | trk |
| | trkCheck |
| | mak |
| | makCheck |
| | tnsk |
| | tnskCheck |
| | keyIndex |
| | timeout |
| Outputs | None |
| Description | Update Work Key |
| See also | onRequestUpdateWorkKeyResult |

2.6.36 MacKeyEncrypt

| Signature | void MacKeyEncrypt (String macStr) |
|-----------|------------------------------------|
| Inputs | macStr: mac character string |

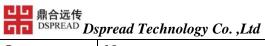

| Outputs | None |
|-------------|-----------------------|
| Description | macKey Encrypt |
| See also | onRequestCalculateMac |

2.6.37 isQposPresent


| Signature | void isQposPresent () |
|-------------|---------------------------|
| Inputs | None |
| Outputs | None |
| Description | Get Qpos available status |
| See also | |

2.6.38 setMasterKey

| Signature | void setMasterKey (String key,String ckValue,int keyIndex,int timeout) |
|-------------|--|
| Inputs | key: master key ckValue: check value |
| | keyIndex |
| | timeout |
| Outputs | None |
| Description | Set Master Key |
| See also | onReturnSetMasterKeyResult |

2.6.39 calcMacSingle

| Signature | void setMasterKey (String macStr) |
|-----------|-----------------------------------|
| Inputs | macStr: mac character string |

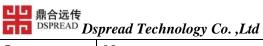

| Outputs | None |
|-------------|-------------------------|
| Description | Calculate mac (single) |
| See also | onRequestCalculateMac |

2.6.40 calcMacDouble

| Signature | void calcMacDouble (String macStr,int keyIndex,int timeout) |
|-------------|---|
| Inputs | macStr: mac character string |
| | keyIndex |
| | timeout |
| Outputs | None |
| Description | Calculate mac (double) |
| See also | onRequestCalculateMac |

2.6.41 calcMacSingleNoCheck

| Signature | void calcMacSingleNoCheck (String macStr,int timeout) |
|-------------|---|
| Inputs | macStr: mac character string |
| | timeout |
| Outputs | None |
| Description | Calculate mac (double) |
| See also | onRequestCalculateMac |

2.6.42 calcMacDoubleNoCheck

| Signature | void calcMacDoubleNoCheck (String macStr,int |
|-----------|--|
| | keyIndex,int timeout) |
| | |



| Inputs | macStr: mac character string |
|-------------|------------------------------|
| | keyIndex |
| | timeout |
| Outputs | None |
| Description | Calculate mac (double) |
| See also | onRequestCalculateMac |

2.6.43 downloadRsaPublicKey

| Signature | void downloadRsaPublicKey (int useType,String rid,String index,String module,String exponent,int timeout) |
|-------------|---|
| Inputs | useType rid: public Key RID index: Public Key Index module: Public Key Module exponent: Public Key Exponent timeout |
| Outputs | None |
| Description | Acquire server RSA public key 详细操作步骤: 第一步: 调用服务器接口,从服务器获取公钥 第二步: 调用此接口获取用这公钥加密的 randomkey 第三步: 将 randomkey 上送服务器,服务器解密 randomkey 后返回用 randemkey 明文加密的终端主密钥 第四步: 调用 setMasterKey 设置主密钥 |
| See also | onReturnDownloadRsaPublicKey |

$2.6.44\ update Master Key Random$

| Signature | void updateMasterKeyRandom (int step,String |
|-----------|---|
| | keyIndex,String masterKey,String masterKeyCheck,int |



| | preda 10011101089 CO. 3214 |
|-------------|------------------------------------|
| | timeout) |
| Inputs | step: step index |
| | keyIndex |
| | masterKey |
| | masterKeyCheck |
| | timeout |
| Outputs | None |
| Description | Update Master Key in Random method |
| 1 | · 详细操作步骤: |
| | 第一步:调用此接口获取随机数并上送服务器,服务器 |
| | 返回用这个随机数加密的主密钥 |
| | 第二步:拿到主密钥密文后再调用下面接口设置主密钥 |
| See also | onUpdateMasterKeyResult |

2.6.45 updateMasterKey

| Signature | void updateMasterKey (int step,String RN1,String RN2,String masterKey,String masterKeyCheck,int timeout) |
|-------------|--|
| Inputs | step: step index |
| | RN1: random key 1 |
| | RN2: random key 2 |
| | masterKey |
| | masterKeyCheck |
| | timeout |
| Outputs | None |
| Description | Set Master Key |
| See also | onUpdateMasterKeyResult |

2.6.46 pinKey_TDES


| Signature | void pinKey_TDES (int keyIndex,String pin,int timeout) |
|-------------|--|
| Inputs | keyIndex |
| | pin |
| | timeout |
| Outputs | None |
| Description | Use pinKey to encrypt data |
| See also | onPinKey_TDES_Result |

2.6.47 pinKey_TDESNoCheck

| Signature | void pinKey_TDESNoCheck (int keyIndex,String pin,int timeout) |
|-------------|---|
| Inputs | keyIndex |
| | pin |
| | timeout |
| Outputs | None |
| Description | Use pinKey to encrypt data (NoCheck) |
| See also | onPinKey_TDES_Result |

2.6.48 setSystemDateTime

| Signature | void setSystemDateTime (String dataTime,int timeout) |
|-----------|--|
| Inputs | dataTime timeout |
| | timeout |
| Outputs | None |

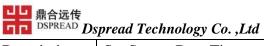



| Description | Set SystemDate Time |
|-------------|---------------------|
| See also | onSetParamsResult |

2.6.49 setMerchantID


| Signature | void setMerchantID (String merchantID,int timeout) |
|-------------|--|
| Inputs | merchantID |
| | timeout |
| Outputs | None |
| Description | Set Merchant ID |
| See also | onSetParamsResult |

2.6.50 setTerminalID

| Signature | void setTerminalID (String terminalID,int timeout) |
|-------------|--|
| Inputs | terminalID |
| | timeout |
| Outputs | None |
| Description | Set Terminal ID |
| See also | onSetParamsResult |

2.6.51 getMagneticTrackPlaintext

| Signature | void getMagneticTrackPlaintext (int timeout) |
|-------------|--|
| Inputs | timeout |
| Outputs | None |
| Description | Get Magnetic Track Plaintext |

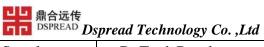



|--|

2.6.52 getCardNo

| Signature | void getCardNo () |
|-------------|--|
| Inputs | None |
| Outputs | None |
| Description | Acquire cardPan (Magnetic stripe card) |
| See also | onGetCardNoResult |

2.6.53 getIccCardNo

| Signature | void getIccCardNo (String aterminalTime) |
|-------------|--|
| Inputs | aterminalTime: terminalTime |
| Outputs | None |
| Description | Acquire cardPan (IC, Magnetic stripe card) |
| See also | onGetCardNoResult |
| | onReturniccCashBack |
| | onRequestBatchData |

2.6.54 powerOffNFC

| Signature | void powerOffNFC (int timeout) |
|-------------|--------------------------------|
| Inputs | timeout |
| Outputs | None |
| Description | Turn off the NFC transceiver |
| See also | onReturnPowerOffNFCResult |



2.6.55 sendApduByNFC


| Signature | void sendApduByNFC (String apduString,int timeout) |
|-------------|--|
| Inputs | apduString |
| | timeout |
| Outputs | None |
| Description | Send data to EMV card in raw APDU formats by nfc |
| See also | onReturnNFCApduResult |

2.6.56 powerOnNFC

| Signature | void powerOnNFC (int isEncrypt,int timeout) |
|-------------|---|
| Inputs | isEncrypt |
| | timeout |
| Outputs | None |
| Description | Turn on the NFC transceiver |
| See also | onReturnPowerOnNFCResult |

2.6.57 cbc_mac

| Signature | void cbc_mac (int keyLen, int algorithmType, int operatorType, String data, int timeout) |
|-----------|--|
| Inputs | keyLen algorithmType operatorType data timeout |

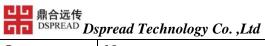

| Outputs | None |
|-------------|----------------------------------|
| Description | With 3DES CBC mode calculate Mac |
| See also | onCbcMacResult |

2.6.58 cbc_macNoCheck

| Signature | void cbc_mac (int keyLen, int algorithmType, int operatorType, String data, int timeout) |
|-------------|--|
| Inputs | keyLen |
| | algorithmType |
| | operatorType |
| | data |
| | timeout |
| Outputs | None |
| Description | Calculate Mac (No Check)with 3DES CBC mode |
| See also | onCbcMacResult |

2.6.59 inquireECQAmount

| Signature | void inquireECQAmount (String transactionTime) |
|-------------|--|
| Inputs | transactionTime |
| Outputs | None |
| Description | Inquire IC card Electronic pocket balance |
| See also | onGetCardNoResult |
| | onReturniccCashBack |
| | onRequestBatchData |

2.6.60 isIdle

| Signature | Boolean isIdle () |
|-------------|------------------------------|
| Inputs | None |
| Outputs | The status of pos is trading |
| Description | Flag indicate pos is working |
| See also | |

2.6.61 anlysEmvIccData

| Signature | void anlysEmvIccData (String tlv) |
|-------------|-----------------------------------|
| Inputs | tlv: type + length + value |
| Outputs | None |
| Description | Parsing ICC data |
| See also | |

2.6.62 VIPOSBatchSendAPDU

| Signature | void VIPOSBatchSendAPDU (LinkedHashMap <integer,< th=""></integer,<> |
|-------------|--|
| | String[]> batchAPDU) |
| Inputs | batchAPDU |
| Outputs | None |
| Description | send Batch APDU command VIPOS protocol |
| See also | onReturnBatchSendAPDUResult |

$2.6.63\ syn VIPOSB atch Send APDU$

| Signature | void synVIPOSBatchSendAPDU (Boolean isOpen, |
|-----------|---|
| | |



| | LinkedHashMap <integer, string[]=""> batchAPDU)</integer,> |
|-------------|--|
| Inputs | isOpen: whether the signature is open or not |
| | batchAPDU: batchAPDU command |
| Outputs | None |
| Description | send Batch APDU command VIPOS protocal (synchronize mode) |
| See also | onReturnBatchSendAPDUResult |

2.6.64 anlysEmvIccData_qf

| Signature | void anlysEmvIccData_qf (String tlv) |
|-------------|--------------------------------------|
| Inputs | Tlv: type + length + value |
| Outputs | None |
| Description | Parsing ICC data qf |
| See also | |

2.6.65 iccCashBack

| Signature | void iccCashBack (String transactionTime, String random) |
|-------------|--|
| Inputs | transactionTime: transactionTime |
| | random: random character string |
| Outputs | None |
| Description | Specific customer IC card cach back trade |
| See also | onGetCardNoResult |
| | onReturniccCashBack |
| | onRequestBatchData |



2.6.66 setPosPresent


| Signature | void setPosPresent (boolean flag) |
|-------------|--|
| Inputs | flag: whether the POS device has exist |
| Outputs | None |
| Description | Flag for POS existence |
| See also | |

2.6.67 setCardTradeMode

| Signature | void setCardTradeMode (CardTradeMode |
|-------------|---|
| | cardTradeMode) |
| Inputs | cardTradeMode: |
| | enum{ONLY_INSERT_CARD//only IC |
| | ONLY_SWIPE_CARD//Only Magnetic stripe card |
| | SWIPE_INSERT_CARD//Magnetic stripe card and IC |
| | UNALLOWED_LOW_TRADE//the devices will remind to insert the card if the card are both chip and track } |
| Outputs | None |
| Description | Set Card Trade Mode, (Only Magnetic stripe card, only IC, Magnetic stripe card and IC) |
| See also | |

2.6.68 setPinPadFlag

| Signature | void setPinPadFlag (boolean flag) |
|-----------|---|
| Inputs | flag: whether the key signature exists or not |
| Outputs | None |

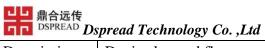

| Description | Device keypad flag |
|-------------|--------------------|
| See also | |

2.6.69 qposStatus

| Signature | void qposStatus () |
|-------------|--------------------------|
| Inputs | None |
| Outputs | None |
| Description | Check APP connect status |
| See also | |

2.6.70 readBusinessCard

| Signature | void readBusinessCard (String cardType, String address, int |
|-------------|---|
| | readLen, String cardPin, int vender_id, int timeout) |
| Inputs | cardTyp: card type |
| | address: The address of reading data |
| | readLen: The length of reading data |
| | cardPin: password of the card |
| | vender_id: The ID of the Vender |
| | timeout: overtime |
| Outputs | None |
| Description | Read Business Card |
| See also | onReadBusinessCardResult |

2.6.71 writeBusinessCard

| Signature | void writeBusinessCard (String cardType, String address, |
|-----------|---|
| | String data, String cardPin, boolean isUpdatePinFlag, int |



| | vender_id, int timeout) |
|-------------|---|
| Inputs | cardType: card type |
| | address: read-in address |
| | data : read-in data |
| | cardPin: password of the card |
| | isUpdatePinFlag: whether update the password or not |
| | vender_id: : The ID of the Vender |
| | timeout: overtime |
| Outputs | None |
| Description | write Business Card |
| See also | onWriteBusinessCardResult |

2.6.72 syncReadBusinessCard

| Signature | void syncReadBusinessCard (String cardType, String |
|-------------|--|
| | address, int readLen, String cardPin, int vender_id, int |
| | timeout) |
| Inputs | cardType: card type |
| | address: the address of reading data |
| | readLen: the length of reading data |
| | cardPin: the password of the card |
| | vender_id: the ID of the vender |
| | timeout: overtime |
| Outputs | None |
| Description | Read Business Card (synchronize mode) |
| See also | |



2.6.73 syncWriteBusinessCard

| Signature | void syncWriteBusinessCard (String cardType, String |
|-------------|---|
| | address, String data, String cardPin, boolean |
| | isUpdatePinFlag, int vender_id, int timeout) |
| Inputs | cardType: card type |
| | address: the address of the read-in data |
| | data: read-in the data |
| | cardPin: the password of the card |
| | isUpdatePinFlag: whether update the password or not |
| | vender_id: the ID of the vender |
| | timeout: overtime |
| Outputs | None |
| Description | Write Business Card (synchronize mode) |
| See also | |

2.6.74 confirmAmount

| Signature | void confirmAmount (String amount, int timeout) |
|-------------|---|
| Inputs | amount: payment amount |
| | timeout: overtime |
| Outputs | None |
| Description | Confirm Amount |
| See also | onConfirmAmountResult |

2.6.75 setAmount

| Signature | void setAmount (String amount, String |
|-----------|--|
| | cashbackAmount,String currencyCode,TransactionType |


| | transactionType,boolean isPosDisplayAmount) |
|-------------|--|
| Inputs | amount: transaction amount |
| | cashbackAmount: enchashment amount |
| | currencyCode: currency code |
| | transactionType: transaction type |
| | isPosDisplayAmount: whether display on POS device or not |
| Outputs | None |
| Description | Set Amount |
| See also | |

2.6.76 getPin

| Cianotura | void gotDin (int anaryntTyna int kayInday int mayI an |
|-------------|---|
| Signature | void getPin (int encryptType, int keyIndex, int maxLen, |
| | String typeFace, String cardNo, String data, int timeout) |
| Inputs | encryptType: default:0 |
| | keyIndex: default:0 |
| | maxLen: max length of pin |
| | typeface: display the font |
| | cardNo:the cardPan |
| | data: attached data |
| | timeout |
| Outputs | None |
| Description | Get Pin |
| See also | onReturnGetPinResult |

2.6.77 doSetManagementKey

| Signature | void doSetManagementKey(String publicKey) |
|-----------|---|
| | |

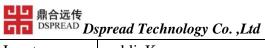

| Inputs | publicKey |
|-------------|------------------------------|
| Outputs | None |
| Description | Set the management publicKey |
| See also | onSetManagementKey |

2.6.78 doSetBuzzerOperation

2.6.79 doSetBuzzerOperation

| Signature | void doSetBuzzerOperation(int time) |
|-------------|-------------------------------------|
| Inputs | The buzzer ringing's time |
| Outputs | None |
| Description | Set the buzzer |
| See also | onSetBuzzerResult |

2.6.80 doUpdateIPEKOperation

| Signature | void doUpdateIPEKOperation(String ipekgroup,String trackksn,String trackipek,String trackipekCheckvalue,String emvksn,,String emvipek,String emvipekCheckvalue,String pinksn,String pinipek,String pinipekCheckvalue) |
|-------------|---|
| Inputs | ipekgroup,1字节trackksn10字节,trackipek16字 节,trackipekCheckvalue8字节,emvksn10字节,emvipek16字 节,emvipekCheckvalue8字节,pinksn10字节,pinipek16字 节,pinipekCheckvalue8字节 |
| Outputs | None |
| Description | Update the IPEK |
| See also | onReturnUpdateIPEKResult |

2.6.81 updateIPEKOperationByKeyType

| Signature | void updateIPEKOperationByKeyType(String ipekgroup,String trackksn,String trackipek,String trackipekCheckvalue,String emvksn,,String emvipek,String emvipekCheckvalue,String pinksn,String pinipek,String pinipekCheckvalue) |
|-------------|--|
| Inputs | ipekgroup,1字节trackksn10字节,trackipek16字 节,trackipekCheckvalue8字节,emvksn10字节,emvipek16字 节,emvipekCheckvalue8字节,pinksn10字节,pinipek16字 节,pinipekCheckvalue8字节 |
| Outputs | None |
| Description | Update single or multiple IPEK KEY |
| See also | onReturnUpdateIPEKResult |

2.6.82 updateEmvAPP

| Signature | void updateEmvAPP(EMVDataOperation operationType,String data) |
|-------------|---|
| Inputs | operationType:the type of operation • |
| | It's has six type. |
| | Clear:clear all AID |
| | Add:add one AID |
| | Delete:delete one AID |
| | AttainList:get the list of AID |
| | Update:update the AID |
| | getEmv:get the AID data. |
| | data:have different data according to the operationType |
| Outputs | None |
| Description | Update the EMV that id is AID |



| See also | onReturnUpdateEMVResult | |
|----------|-------------------------|---|
| | | ı |

2.6.83 updateEmvCAPK

| Signature | void updateEmvCAPK(EMVDataOperation operationType,String data) |
|-------------|--|
| Inputs | operationType:the type of operation |
| | It's has five type. |
| | Clear:clear all RID |
| | Add:add one RID |
| | Delete:delete one RID |
| | AttainList:get the list of RID |
| | getEmv:get the RID data. |
| | data:have different data according to the operationType |
| Outputs | None |
| Description | Update the EMV that id is RID |
| See also | onReturnUpdateEMVRIDResult |

2.6.84 getUpdateKey

| Signature | void getUpdateKey() |
|-------------|---------------------|
| Inputs | None |
| Outputs | None |
| Description | Get the update key |
| See also | onRequestUpdateKey |



2.6.85 setSleepModeTime

| Signature | void setSleepModeTime(int time) |
|-------------|-----------------------------------|
| Inputs | time:it's value in 10s and 1000s. |
| Outputs | None |
| Description | Set the sleepTime |
| See also | onSetSleepModeTime |

2.6.86 generateTransportKey

| Signature | void generateTransportKey(int timeout) |
|-------------|---|
| | ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,, |
| Inputs | Timeout |
| Outputs | None |
| | |
| Description | Generate the transport key encrypted by the server's public |
| | key |
| See also | onRequestGenerateTransportKey |
| Exmple data | onRequestGenerateTransportKey |
| | result:390CE532205DE88E7F8B713527B4EA333ECC122 |
| | 133D39725B5D72D012E36EA736A8865259713C2DEEE2 |
| | 33E5BF7F940B4C4583C570C28C82ED3CB03D53919D0 |
| | BAA41BA90A9429B81AA1A9DFCB56DF4D350CCCF8 |
| | DDBA4D75DBA928CFFC33A4B1B9DFC580CBA34F1B |
| | 6E8752565622C606CE7D442248FE39DA551CC5481D53 |
| | F4539A |
| | /com.dspread.demoui D/POS_SDK: buffer: |
| | 229279554278282164552639152755323120960999101795 |
| | 343691155748798250587365222587650371312677802138 |
| | 126191059275870574890923331610493022385892345779 |
| | 459702394270879814244748352069111116056878737185 |
| | 532071846202252684560390146332477338246621878771 |
| | 054158830191791270694079345427843541353397122076 |
| | 07202837129624038033 |
| | |



| 1 00 / |
|--|
| 2021-03-16 19:26:12.909 9563-9563/com.dspread.demoui |
| D/POS_SDK: decrypted result: |
| F692C5AF86F8D4DB88B87BBDDF1BB5C6 |
| |

2.6.87 readGasCard

| Signature | void readGasCard(String cardType, String address, int readLen, int timeout) |
|-------------|---|
| Inputs | cardType: 0x00- FDW4442 0x01- FDW4428 |
| Impats | card 1 ypc. 6x66 1 2 w 4 4 4 2 6x61 1 2 w 4 4 2 6 |
| | address: The address of reading data |
| | readLen: The length of reading data |
| | timeout: overtime |
| Outputs | None |
| Description | Read Gas Card |
| See also | onReadGasCardResult |
| Exmple data | GasCardData==064004004002000000400000000400500 |

2.6.88 writeGasCard

| Signature | void writeGasCard(String cardType, String password, String |
|-----------|--|
| | address, int dataLen, String data, int timeout) |
| Inputs | cardType: 0x00- FDW4442 0x01- FDW4428 |
| | password: FDW4428-2 bytes, FDW4442-3 bytes |
| | address: The address of writing data |
| | dataLen: The length of writing data |
| | data: The data of writing |
| | timeout: overtime |
| Outputs | None |



| Description | Write Gas Card |
|-------------|---|
| See also | onWriteGasCardResult |
| Exmple data | com.dspread.demoui.debug I/POS_SDK: WriteCard Success |

$2.6.89\ update IPEKBy Transport Key$

| void undetaIDEV.Dv.TuonanoutV.av.(String in alreasure String |
|--|
| void updateIPEKByTransportKey(String ipekgroup,String trackksn,String trackipek,String trackipekCheckvalue,String emvksn,,String emvipek,String emvipekCheckvalue,String |
| pinksn,String pinipek,String pinipekCheckvalue) |
| Ipekgroup 1 byte, trackksn 10 byte, trackipek 16byte, |
| trackipekCheckvalue 8byte, emvksn 10byte, emvipek |
| 16byte, emvipekCheckvalue 8byte, pinksn 10byte, pinipek |
| 16byte, pinipekCheckvalue 8byte |
| None |
| Use transport key to 3des ecb ipek plaintext and update ipek |
| onReturnUpdateIPEKResult |
| ipekgroup: 00ipekgroup: 09118012400705E00000trackksn: |
| 09118012400705E00000trackipek: |
| 4B7F6768C67C85AE4B7F6768C67C85AEtrackipekcheck |
| value: 82E13665B4624DF5emvksn: |
| 09118012400705E00000emvipek: |
| 4B7F6768C67C85AE4B7F6768C67C85Aeemvipekcheckv |
| alue: 82E13665B4624DF5pinksn: |
| 09118012400705E00000pinipek: |
| 4B7F6768C67C85AE4B7F6768C67C85Aepinipekcheckval |
| ue: 82E13665B4624DF5 |
| 11959-11959/com.dspread.demoui D/POS_SDK: |
| onReturnUpdateIPEKResult(Boolean arg0):true |
| |

2.6.90 updateWorkKeyByTransportKey

| Signature | void updateWorkKeyByTransportKey(String pik,String |
|-----------|---|
| | pikCheck,String trk,String trkCheck,String mak,String |



| | makCheck ,int keyIndex,int timeout) |
|-------------|--|
| Inputs | Pinkey 16byte, pinkeyCheckValue 8byte, trackKey 16byte, |
| | trackKeyCheckValue 8byte, macKey 16byte, |
| | macKeyCheckValue 8byte, keyIndex, timeout |
| Outputs | None |
| Description | Use transport key to 3des ecb work key plaintext and update work key |
| See also | onRequestUpdateWorkKeyResult |
| Example | com.dspread.demoui D/POS_SDK: pinKey: |
| data | 42F53F7DE22B029842F53F7DE22B0298pinKeyCheckVal |
| | ue: 82E13665B4624DF5trackKey: |
| | 42F53F7DE22B029842F53F7DE22B0298trackKeyCheckV |
| | alue: 82E13665B4624DF5macey: |
| | 42F53F7DE22B029842F53F7DE22B0298macKeyCheckVa |
| | lue: 82E13665B4624DF5 |
| | 2021-03-31 16:43:15.386 8510-8510/com.dspread.demoui |
| | D/POS_SDK: |
| | onRequestUpdateWorkKeyResult(UpdateInformationResult |
| | result):UPDATE_SUCCESS |

2.6.91 sendCVV

| Signature | Public boolean sendCVV(String cvvString) |
|--------------|---|
| Inputs | CVV String |
| Outputs | Result of call the sendCVV function |
| Description | Send CVV to reader |
| See also | None |
| Example data | 10212-10212/com.dspread.demoui D/POS_SDK: onRequestOnlineProcess() 10212-10212/com.dspread.demoui D/POS_SDK: send cvv to pos |



$2.6.92\,getEncryptedDataBlock$

| Signature | Hashtable <string, string=""> getEncryptedDataBlock(int keyIndex)</string,> |
|-------------|---|
| Inputs | keyIndex 0 ~ 9 |
| inputs | Reynidex () 4) |
| Outputs | Hashtable of encrypted data block |
| Description | Get the corresponding data according to DUKPT, MK/SK |
| See also | None |
| Example | 2021-03-31 16:47:18.807 |
| data | 10212-10212/com.dspread.demoui D/POS_SDK: hashtable: |
| | {KCV=C80059, CRC32=AD1B58EB, |
| | KSN=09118012400705E00001, |
| | CardSensitiveData=47EC31C89D84234D32AE3F070DC62 |
| | F295BFF6BF6F58B6164B5F0E93EA67ED900D47B94FD |
| | 31C035FF08781A78F61E3D894DE7FE55EEBF3A5F0BA |
| | E66CD612391FEF3ABDA12666459B02E8EE6A7A69A03 |
| | D1914E4677C38C4644CF4A552000D7D5B6A3AA10AC6 |
| | 1B88EE5} |

2.6.93 displayQRCode

| Signature | Public void displayQRCode(String customDisplayStr, |
|-------------|---|
| | String qrLink) |
| Inputs | customDisplayStr |
| | qrLink |
| Outputs | None |
| Description | Display QR code on the pos |
| See also | Public void onReturnDisplayQRCodeResult(Boolean result) |
| Example | com.dspread.demoui D/POS_SDK: customDisplayStr: |
| data | 9999999999 qrLink: https://www.dspread.com |
| | |
| | com.dspread.demoui D/POS_SDK: |
| | onReturnDisplayQRCode result: success |



$2.6.94\,operate LEDBy Type$

| Signature | Public void operateLEDByType (LEDType ledType,String colorValue,LEDDirection ledDirection, LEDStatus status,int lightTime, int lightOffTime, int blinksTimes) |
|-------------|---|
| Inputs | ledType: FIXED_COLOR/RGB_COLOR |
| | colorValue: if the ledType is FIXED_COLOR, you can fill in the below color value |
| | "0000": blue led |
| | "0001": yellow led |
| | "0002": green led |
| | "0003": red led |
| | if the ledType is RGB_COLOR, you can fill in the rgb565 format value, like 3666 |
| | ledDirection: ALL/LEFT/RIGHT/UP/DOWN |
| | status: ON/OFF/BLINKS |
| | lightTime: the led light on time when the status param is "BLINKS" |
| | lightOffTime: the led light off time when the status param is "BLINKS" |
| | blinksTimes: the led blinks times when the status param is "BLINKS" |
| Outputs | None |
| Description | To operate the different color LED according |
| | type |
| See also | Public void onReturnOperateLEDByTypeResult(boolean result) |



2.6.95 playBuzzerByType

| Signature | playBuzzerByType(BuzzerType type,int buzzerOnTime, int |
|-------------|---|
| | buzzerOffTime, int buzzerTimes) |
| Inputs | type: COMMON/ PAYMENT_SUCCESS/ |
| • | PAYMENT_ERROR/ PAIRING_SUCCESS |
| | COMMON: play the common type buzzer |
| | PAYMENT_SUCCESS: play the |
| | "PAYMENT_SUCCESS" buzzer that MP shared |
| | PAYMENT_ERROR: play the |
| | "PAYMENT_ERROR" buzzer that MP shared |
| | PAIRING_SUCCESS: play the |
| | "PAIRING_SUCCESS" buzzer that MP shared |
| | buzzerOnTime: the time of the buzzer on when type is "COMMON" |
| | buzzerOffTime: the time of the buzzer off when type is "COMMON" |
| | buzzerTimes: the times of buzzer play on when type is "COMMON" |
| Outputs | None |
| Description | To play different buzzer according type |
| See also | Public void onReturnPlayBuzzerByTypeResult(boolean result) |
| | |

2.6.96 sendNfcProcessResult

| Signature | Public void sendNfcProcessResult(String tlv) |
|-------------|--|
| Inputs | Tlv(8A+91+71/72 tag) |
| Outputs | None |
| Description | Perform double tap |

| See also | Public void onRequestNFCBatchData(TransactionResult result, String tlv) |
|--------------|---|
| Example data | pos.sendNfcProcessResult("8A02303091100102030405060 708000000000000000072189F180400000001860F8C24000 00A8E081122334455667788"); |

2.6.97 getICCTag

| Signature | public Hashtable <string, string=""> getICCTag(EncryptType encryType, int cardType, int tagCount, String tagArrStr)</string,> |
|--------------|---|
| Inputs | EncryptType: |
| | ENCRYPTED means the data is encrypted; PLAINTEXT means the data is plaintext; |
| | cardType: |
| | 0 means the card type is contact; |
| | 1 means the card type is contactless; |
| | tagCount: number of tags; |
| | tagArrStr: tags string; |
| Outputs | The tlv format data corresponding to the incoming tags |
| Description | This method is used in getting the tlv format data of the corresponding tags |
| See also | None |
| Example data | pos.getICCTag(QPOSService.EncryptType.ENCRYPTED, 1, 2, "5A57"); |

$2.6.98\,getEncryptedTrack2Data$

| Signature | Public Hashtable <string, string=""> getEncryptedTrack2Data()</string,> |
|-----------|---|
| Inputs | None |

| Outputs | Ksn and EncryptedTrack2data |
|-------------|--|
| Description | This method is used in getting ksn and EncryptedTrack2data |
| See also | None |

$2.6.99\,lcd Show Custom Display$

| Signature | Public void lcdShowCustomDisplay(LcdModeAlign |
|--------------|---|
| | lcdModeAlign, String lcdFont, int timeout) |
| Inputs | LcdModeAlign: The alignment of the displayed content |
| | LCD_MODE_ALIGNCENTER; |
| | LCD_MODE_ALIGNLEFT; |
| | LCD_MODE_ALIGNRIGHT; |
| | lcdFont; |
| | timeout; |
| Outputs | None |
| Description | This method is used in setting the lcd display on the device screen |
| See also | protected void onLcdShowCustomDisplay(final boolean isSuccess) |
| Example data | pos.lcdShowCustomDisplay(LcdModeAlign.LCD_MODE_ALIGNCENTER, customDisplayString, 60); |

2.6.100 setCustomLogoDisplay

| Signature | Public void setCustomLogoDisplay(LcdModeAlign lcdModeAlign, String customLogoStr, int timeout) |
|-----------|--|
| Inputs | LcdModeAlign: The alignment of the displayed logo. |
| | LCD_MODE_ALIGNCENTER; |
| | LCD_MODE_ALIGNLEFT; |



| Control of the Contro | 1 00 / |
|--|---|
| | LCD_MODE_ALIGNRIGHT; |
| | customLogoStr: The logo you want to display on the main interface; If an empty string is passed in, it will shows the default logo; |
| | timeout; |
| Outputs | None |
| Description | This method is used in dynamic modify logo |
| See also | Public void onSetCustomLogoDisplay(boolean result) |
| Example data | pos.setCustomLogoDisplay(LcdModeAlign.LCD_MODE_ALIGNRIGHT, "WELCOME", 60) |

2.6.101 setCustomLogoDisplay

| Signature | public Hashtable <string, string=""> getEncryptData()</string,> |
|--------------|---|
| Inputs | None |
| Outputs | RandomData, PAN, AESKey, isOnlinePin, pinTryLimit |
| Description | This method is used to get the data which used to encrypt PIN |
| See also | None |
| Example data | pos.getEncryptData() |

2.6.102 sendCvmPin

| Signature | public void sendCvmPin(String pinblock, boolean isEncrypted) |
|-----------|--|
| Inputs | pinblock : ISO format 4 pinblock ; isEncrypted: True/False |
| Outputs | None |

| Description | This method is used to transfer pinblock to device |
|--------------|--|
| See also | None |
| Example data | pos.sendCvmPin(); |

1.1 Delegate Methods Reference

1.1.1 onRequestWaitingUser

| Signature | void onRequestWaitingUser() |
|-------------|---|
| Inputs | None |
| Outputs | None |
| Description | In the callback to waiting user operating |
| See also | |

1.1.2 onQposIdResult

| Signature | void onQposIdResult (Hashtable <string, string=""> posIdTable)</string,> |
|-------------|--|
| Inputs | Hashtable <string, string=""> posIdTable</string,> |
| Outputs | None |
| Description | Callback of pos id response |
| See also | getQposId() |

1.1.3 onQposInfoResult

| Signature | void onQposInfoResult (Hashtable <string, string=""> posIdTable)</string,> |
|-----------|--|
| | posid rable) |



| Inputs | Hashtable <string, string=""> posIdTable</string,> |
|-------------|--|
| Outputs | None |
| Description | Callback of pos info response |
| See also | getQposInfo() |

1.1.4 onDoTradeResult

| Signature | void onDoTradeResult (DoTradeResult result, |
|-------------|---|
| | Hashtable <string, string=""> decodeData)</string,> |
| Inputs | DoTradeResult result |
| | Hashtable <string, string=""> decodeData</string,> |
| Outputs | None |
| Description | Callback of track data response |
| See also | doTrade() |
| | doEmvApp(EmvOption emvOption) |

$1.1.5\ on Request Set Amount$

| Signature | void onRequestSetAmount () |
|-------------|---|
| Inputs | None |
| Outputs | None |
| Description | The callback of request user set amount |
| See also | doTrade() setAmount(String amount, String cashbackAmount, String currencyCode, TransactionType transactionType) |

1.1.6 onRequestSelectEmvApp

| Signature | void onRequestSelectEmvApp (ArrayList <string> appList)</string> |
|-----------|--|
| | |

| Inputs | ArrayList <string> appList</string> |
|-------------|---|
| Outputs | None |
| Description | Callback method of request user to select emv app |
| See also | doTrade() |
| | selectEmvApp(int index) |
| | cancelSelectEmvApp() |

$1.1.7\ on Request Is Server Connected$

| Signature | void onRequestIsServerConnected () |
|-------------|--|
| Inputs | None |
| Outputs | None |
| Description | In the method judge the network state |
| See also | doTrade() |
| | isServerConnected(boolean isConnected) |

1.1.8 onRequestFinalConfirm

| Signature | void onRequestFinalConfirm () |
|-------------|------------------------------------|
| Inputs | None |
| Outputs | None |
| Description | Final confirm amount response |
| See also | doTrade() |
| | finalConfirm (boolean isConfirmed) |

1.1.9 onRequestOnlineProcess

| Signature | void onRequestOnlineProcess (String tlv) |
|-------------|--|
| Inputs | Tlv type+length+value |
| Outputs | None |
| Description | Response of request data to server |
| See also | doTrade() |
| | anlysEmvIccData () |
| | sendOnlineProcessResult() |

1.1.10 on Request Time

| Signature | void onRequestTime () |
|-------------|----------------------------|
| Inputs | None |
| Outputs | None |
| Description | Set terminal time response |
| See also | doTrade() |
| | sendTime() |

$1.1.11\, on Request Transaction Result$

| Signature | void onRequestTransactionResult (TransactionResult transactionResult) |
|-------------|---|
| | transactionicesurt) |
| Inputs | None |
| Outputs | None |
| Description | Transaction response |
| See also | doTrade() |

$1.1.12\,on Request Transaction Log$

| Signature | void onRequestTransactionResult (String tlv) |
|-------------|--|
| Inputs | Tlv type+length+value |
| Outputs | None |
| Description | reserve |
| See also | |

1.1.13 on Request Batch Data


| Signature | void onRequestBatchData (String tlv) |
|-------------|--------------------------------------|
| Inputs | Tlv type+length+value |
| Outputs | None |
| Description | Response of ICC transactions |
| See also | doTrade() |

$1.1.14\,on Request Q pos Connected$

| Signature | void onRequestQposConnected () |
|-------------|--------------------------------|
| Inputs | None |
| Outputs | None |
| Description | Callback of connected success |
| See also | connectBluetoothDevice() |

$1.1.15\,on Request Q pos D is connected$

| Signature | void onRequestQposDisconnected () |
|-----------|-----------------------------------|
| Inputs | None |

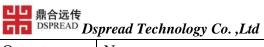

| Outputs | None |
|-------------|------------------------|
| Description | Callback of disconnect |
| See also | disconnectBT() |

$1.1.16\,on Request No Qpos Detected$

| Signature | void onRequestNoQposDetected () |
|-------------|---------------------------------|
| Inputs | None |
| Outputs | None |
| Description | Callback of connected fail |
| See also | connectBluetoothDevice() |

1.1.17 on Error

| Signature | void onError (Error errorState) |
|-------------|--|
| Inputs | enum Error errorState error type information |
| Outputs | None |
| Description | SDK error information response |
| See also | |

1.1.18 on Request Display

| Signature | void onRequestDisplay (Display displayMsg) |
|-------------|--|
| Inputs | enum Display displayMsg: display content |
| Outputs | None |
| Description | Notify the terminal displays the current related content |
| See also | |

$1.1.19\, on Request Update Work Key Result$

| Signature | void onRequestUpdateWorkKeyResult |
|-------------|-------------------------------------|
| | (UpdateInformationResult result) |
| Inputs | enum UpdateInformationResult result |
| Outputs | None |
| Description | Update work key response |
| See also | udpateWorkKey() |

1.1.20 on Get Card No Result

| Signature | void onGetCardNoResult (String result) |
|-------------|--|
| Inputs | String result of the cardPan. |
| Outputs | None |
| Description | Get Card pan response |
| See also | getCardNo() |

1.1.21 on Return Reversal Data

| Signature | void onReturnReversalData (String tlv) |
|-------------|--|
| Inputs | tlv: type+length+value |
| Outputs | None |
| Description | ic card reversal data response |
| See also | doEmvApp() |

1.1.22 on Return Get Pin Result

| Signature | void onReturnGetPinResult (Hashtable <string, string=""></string,> |
|-----------|--|
| | result) |

| Inputs | Hashtable <string, string=""> result 包含pinKsn 和 pinBlock</string,> |
|-------------|--|
| Outputs | None |
| Description | Get pin response |
| See also | getPin() |

1.1.23 onReturnPowerOnIccResult

| Signature | void onReturnPowerOnIccResult (boolean result, String ksn, String atr, int atrLen) |
|-------------|--|
| Inputs | result: true – success, false – failure ksn: EMV KSN used for encryption of ATR data and APDU data. If ksn is all FF, then ATR and APDU data are not encrypted. atr: data returned in ATR atrLen: length of the ATR data |
| Outputs | None |
| Description | Respond to powerOnIcc. If ksn is all FF, then ATR and APDU are not encrypted. Otherwise, ATR and APDU are encrypted by the key derived from EMV KSN. |
| See also | powerOnIcc() |

1.1.24 on Return Power Off Icc Result

| Signature | void onReturnPowerOffIccResult (boolean result) |
|-------------|---|
| Inputs | result: true – success, false – failure |
| Outputs | None |
| Description | Respond to powerOffIcc. |
| See also | powerOffIcc() |



$1.1.25\,on Return Apdu Result$


| Signature | void onReturnApduResult (boolean isSuccess, String apdu, |
|-------------|--|
| | int apduLen) |
| Inputs | isSuccess: true– success, false – failure |
| | apdu: data returned |
| | apduLength: length of the apdu data |
| Outputs | None |
| | |
| Description | Return data in response to the level 1 EMV method |
| | sendApdu. If |
| | the apdu data are encrypted, the KSN returned after the |
| | powerOnIcc command is used for encryption. |
| | |
| See also | sendApduByNFC() |
| | sendApdu() |

$1.1.26\, on Return Set Sleep Time Result$

| Signature | void onReturnSetSleepTimeResult (boolean isSuccess) |
|-------------|---|
| Inputs | isSuccess: true– success, false – failure |
| Outputs | None |
| Description | The response of set device sleep time |
| See also | setPosSleepTime() |

$1.1.27\,on Request Calculate Mac$

| Signature | void onRequestCalculateMac (String calMac) |
|-------------|--|
| Inputs | calMac: calculate mac result data |
| Outputs | None |
| Description | Calculate mac response method |
| See also | doCalculateMac() |
| | doDoubleMac() |

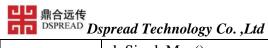

doSingleMac()

$1.1.28\,on Return Custom Config Result$

| Signature | void onReturnCustomConfigResult (boolean isSuccess, |
|-------------|---|
| | String result) |
| Inputs | isSuccess: true– success, false – failure |
| | result : data of result |
| Outputs | None |
| Description | Save Emv Config response |
| See also | updateEmvConfig() |

$1.1.29\,on Return Set Master Key Result$

| Signature | void onReturnSetMasterKeyResult (boolean isSuccess) |
|-------------|---|
| Inputs | isSuccess: true– success, false – failure |
| Outputs | None |
| Description | Set masterKey response |
| See also | setMasterKey() |

1.1.30 on Return Batch Send APD UResult

| Signature | void onReturnBatchSendAPDUResult |
|-------------|---|
| | (LinkedHashMap <integer, string=""> batchAPDUResult)</integer,> |
| Inputs | LinkedHashMap <integer, string=""> batchAPDUResult</integer,> |
| Outputs | None |
| Description | Response of batch APDU instruction execution |
| See also | DoVIPOSBatchSendApdu() |

1.1.31 onReturniccCashBack

| Signature | void onReturniccCashBack (Hashtable <string, string=""> result)</string,> |
|-------------|---|
| Inputs | Hashtable <string, string=""> result</string,> |
| Outputs | None |
| Description | Cash back response (Special needs) |
| See also | iccCashBack() |
| | getIccCardNo() |
| | inquireECQAmount() |

$1.1.32\,on Update Pos Firmware Result$

| Signature | void |
|-------------|---|
| | onUpdatePosFirmwareResult(UpdateInformationResult |
| | result) |
| Inputs | enum UpdateInformationResult result |
| Outputs | None |
| Outputs | None |
| Description | Response of upgrade the firmware |
| See also | updatePosFirmware() |

$1.1.33\, on Return Download Rsa Public Key$

| Signature | void onReturnDownloadRsaPublicKey (HashMap <string, string=""> map)</string,> |
|-------------|---|
| Inputs | HashMap <string, string=""> map</string,> |
| Outputs | None |
| Description | Callback of encrypt random number using RSA public key |
| See also | downloadRsaPublicKey() |



$1.1.34\,on Pin Key_TDES_Result$

| Signature | void onPinKey_TDES_Result (String result) |
|-------------|---|
| Inputs | result: data of response |
| Outputs | None |
| Description | Response of 3DES encrypt pin |
| See also | pinKey_TDES() |

$1.1.35\,on Update Master Key Result$

| Signature | void onUpdateMasterKeyResult (boolean result, |
|-------------|--|
| | Hashtable <string, string=""> resultTable)</string,> |
| Inputs | boolean result |
| | Hashtable <string, string=""> resultTable</string,> |
| Outputs | None |
| Description | Update masterKey response |
| See also | updateMasterKeyRandom() |
| | updateMasterKey() |

$1.1.36\, on EmvICC Exception Data$

| Signature | void onEmvICCExceptionData (String tlv) |
|-------------|---|
| Inputs | Tlv: type+length+value |
| Outputs | None |
| Description | Emv ICC Exception response |
| See also | |



$1.1.37\,on Set Management Key$

| Signature | void onSetManagementKey (boolean b) |
|-------------|---|
| Inputs | b:the flag of the key if is setted successful |
| Outputs | None |
| Description | The response of SetManagementKey |
| See also | |

1.1.38 on SetBuzzerResult

| Signature | void onSetBuzzerResult(boolean b) |
|-------------|--|
| Inputs | b:the flag of the buzzer if is setted successful |
| Outputs | None |
| Description | The response of SetBuzzerr |
| See also | |

$1.1.39\,on Return Update IPEKRe sult$

| Signature | void onReturnUpdateIPEKResult(boolean b) |
|-------------|--|
| Inputs | None |
| Outputs | b:the flag to checking updating IPEK successful or not |
| Description | The response of updateIPEK |
| See also | |

$1.1.40\,on Return Update EMVR esult$

| Signature | void onReturnUpdateEMVResult(boolean isSuccess) |
|-----------|---|
| Inputs | isSuccess:the flag of updating EMV that id is AID if is |



| | successful |
|-------------|--|
| Outputs | None |
| | |
| Description | The response of updateEMV that id is AID |
| See also | |

$1.1.41\,on Return Update EMVRIDRe sult$

| Signature | void onReturnUpdateEMVRIDResult(boolean isSuccess) |
|-------------|--|
| Inputs | isSuccess:the flag of updating EMV that id is RID if is successful |
| Outputs | None |
| Description | The response of updateEMV that id is RID |
| See also | |

$1.1.42\,on Request Device Scan Finished$

| Signature | void onRequestDeviceScanFinished() |
|-------------|--------------------------------------|
| Inputs | None |
| Outputs | None |
| Description | The response of scan device finished |
| See also | |

1.1.43 on Device Found

| Signature | void onDeviceFound(BluetoothDevice arg0) |
|-------------|--|
| Inputs | Arg0: is the bluetoothDevice that searched |
| Outputs | None |
| Description | The response of scanQpos2mode |



| See also | The method of scanQpos2mode |
|----------|-----------------------------|
| | |

$1.1.44\, on Request Update Key$


| Signature | void onRequestUpdateKey(String result) |
|-------------|--|
| Inputs | The updated key |
| Outputs | None |
| Description | The response of getUpdateKey |
| See also | getUpdateKey |

$1.1.45\,on Set Sleep Mode Time$

| Signature | void onSetSleepModeTime(boolean isSuccess) |
|-------------|--|
| Inputs | isSuccess:the flag of setting sleepTime if is successful |
| Outputs | None |
| Description | The response of setSleepModeTime |
| See also | |

$1.1.46\, on Request Generate Transport Key$

| Signature | void onRequestGenerateTransportKey (final Hashtable |
|-----------|---|
| | result) |
| Inputs | None |
| Outputs | Result include two parameter for transportKey and checkValue,details as below: transportKey: transport key encrypted by the server's public key |

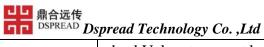

| | checkValue: transport key encrypted 8 byte 0 |
|-------------|--|
| Description | The response of generateTransportKey |
| See also | |

1.1.47 on Read Gas Card Result


| Signature | void onReadGasCardResult (boolean b, String result) |
|-------------|---|
| Inputs | None |
| Outputs | Return the data read by the gas card |
| Description | The response of readGasCard |
| See also | |

$1.1.48\,on Write Gas Card Result$

| Signature | void onWriteGasCardResult (final boolean b) |
|-------------|---|
| Inputs | None |
| Outputs | Returns the status of write gas card |
| Description | The response of writeGasCard |
| See also | |

$1.1.49\,on Return Operate LED By Type Result$

| Signature | void onReturnOperateLEDByTypeResult (final boolean |
|-----------|--|
| | result) |
| Inputs | result: true means operate led success |
| | false means operate led failed |
| Outputs | None |
| | |

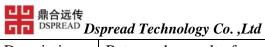

| Description | Returns the result of operate LED |
|-------------|-----------------------------------|
| See also | |

$1.1.50\,on Return Play Buzzer By Type Result$

| Signature | void onReturnPlayBuzzerByTypeResult (final boolean |
|-------------|--|
| | result) |
| Inputs | result: true means play buzzer success |
| | false means play buzzer failed |
| Outputs | None |
| Description | Returns the result of play buzzer |
| See also | |

$1.1.51\,on Return Display QR Code Result$

| Signature | void onReturnDisplayQRCodeResult (final boolean b) |
|-------------|--|
| Inputs | None |
| Outputs | Returns the result of display QR code |
| Description | The response of displayQRCode |
| See also | |

1.1.52 on Return NFCB atch Data

| Signature | void onRequestNFCBatchData(TransactionResult result, String tlv) |
|-------------|--|
| Inputs | None |
| Outputs | Returns the result of double tap and tlv data |
| Description | The callback of sendNfcProcessResult |
| See also | |



$1.1.53\,on Lcd Show Custom Display$

| Signature | void onLcdShowCustomDisplay(final boolean result) |
|-------------|---|
| Inputs | None |
| Outputs | Returns the result of set custom lcd show display |
| Description | The callback of lcdShowCustomDisplay |
| See also | |

$1.1.54\,on Set Custom Logo Display$

| Signature | void onSetCustomLogoDisplay(boolean result) |
|-------------|--|
| Inputs | None |
| Outputs | Returns the result of custom logo setting: true means success; false means failure; |
| Description | The callback of onSetCustomLogoDisplay |
| See also | |