1/9/2019 ANC



Pieter F

Attitude

Model

$$\dot{\boldsymbol{q}} = \frac{1}{2} \boldsymbol{q} \otimes \begin{pmatrix} 0 \\ \vec{\omega} \end{pmatrix} \tag{1}$$

$$\dot{\vec{\omega}} = \Gamma_n \vec{n} + \Gamma_u \vec{u} - I^{-1} (\vec{\omega} \times I \vec{\omega}) \tag{2}$$

$$\dot{ec{n}}=k_2\left(k_1ec{u}-ec{n}
ight) \hspace{1.5cm} (3)$$

There are 10 system states:

$$x = \left(egin{array}{cccccc} q_0 & q_1 & q_2 & q_3 & \omega_x & \omega_y & \omega_z & n_x & n_y & n_x \end{array}
ight)^T \in \mathbb{R}^{10 imes 1}$$

- q is the orientation of the drone, expressed as a unit quaternion.
- ω is the angular velocity of the drone.
- *n* is the speed of the torque motors.

The input to the system is the control signal to the three torque motors:

$$u = \left(egin{array}{ccc} u_x & u_y & u_z \end{array}
ight)^T \in \mathbb{R}^{3 imes 1}$$

The output (measurements) of the system are the orientation and the angular velocity:

$$y = \left(egin{array}{ccccc} q_0 & q_1 & q_2 & q_3 & \omega_x & \omega_y & \omega_z \end{array}
ight)^T \in \mathbb{R}^{7 imes 1}$$

 Γ_n and Γ_u are first order approximations of the motor torque in function of the motor speed and control signal.

Linearisation

Controller

Linear Quadratic Regulator

$$R = egin{pmatrix} 1 & 0 & 0 \ 0 & 1 & 0 \ 0 & 0 & 1 \end{pmatrix}$$

Bias rejection

$$egin{aligned} \left(egin{aligned} x_{k+1} \ d_{k+1} \end{aligned}
ight) &= \left(egin{aligned} A & 0 \ 0 & I_6 \end{array}
ight) \left(egin{aligned} x_k \ d_k \end{array}
ight) + \left(egin{aligned} B
ight) u_k + \left(egin{aligned} I_9 & B & 0 \ 0 & 0 & I_6 \end{array}
ight) \left(egin{aligned} \delta_x \ \delta_u \ \delta_d \end{array}
ight) \ & y_k = \left(egin{aligned} C & I_6 \end{array}
ight) \left(egin{aligned} x_k \ d_k \end{array}
ight) + Du_k + v \end{aligned}$$

Vragen


- 1. Bias rejection attitude controller
- 2. Integral controller attitude controller
- 3. Flippen observer als yaw > 90°
- 4. SSH is traag
- 5. SSH fingerprint verandert heel de tijd
- 6. PWM limits: multiple defines

1/9/2019 ANC


- 7. Router board bevestigen op de drone
- 8. Calibratie wanneer thrust geclamped wordt
- 9. Als de controller wegvalt, moet de drone stoppen!

To do

- 1. ✓ Bias rejection attitude controller
- 2. ✓ Clamp thrust to 80%
- 3. ✓ Vliegen RC attitude + filmpje
- 4. ✓ Vliegen met altitude + filmpje
- 5. ✓ Schema controllers/observers afwerken
- 6. 🗸 Montage GA
- 7. Blender animation
- 8. Keep q_0 positive (slide 135)
- 9. ✓ Observer reset als thrust 0
- 10. Mousse IMU
- 11. When switching from altitude to attitude, gradually change thrust

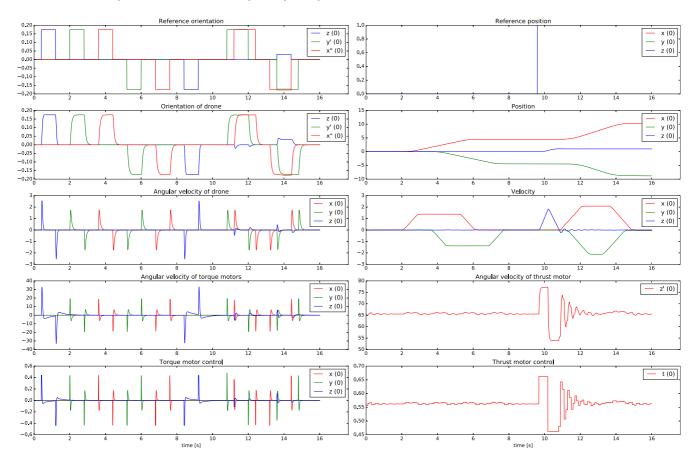

1/9/2019 ANC

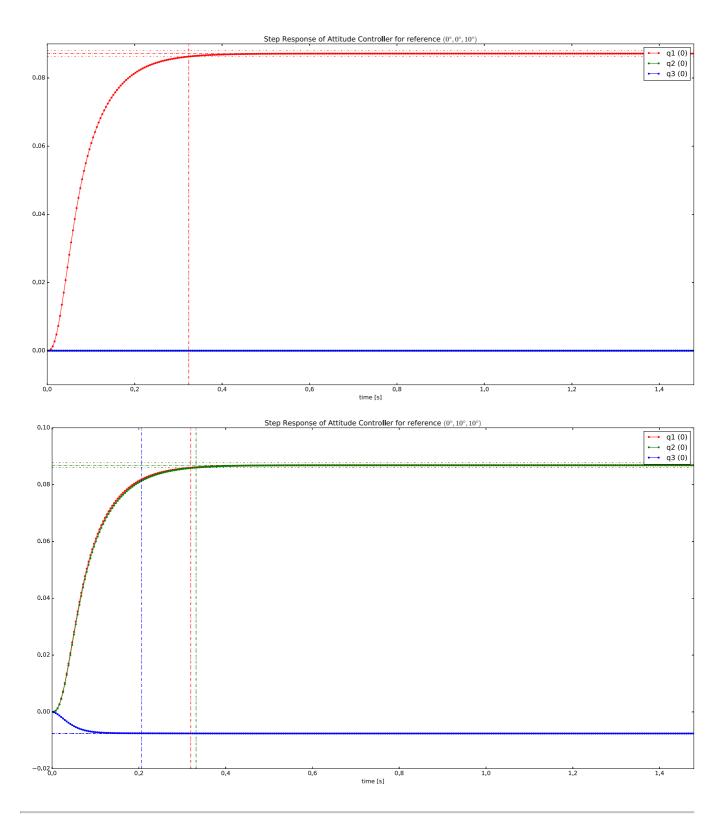

Model